


CRF-150

**FM/AM 13-BAND
PORTABLE RADIO**

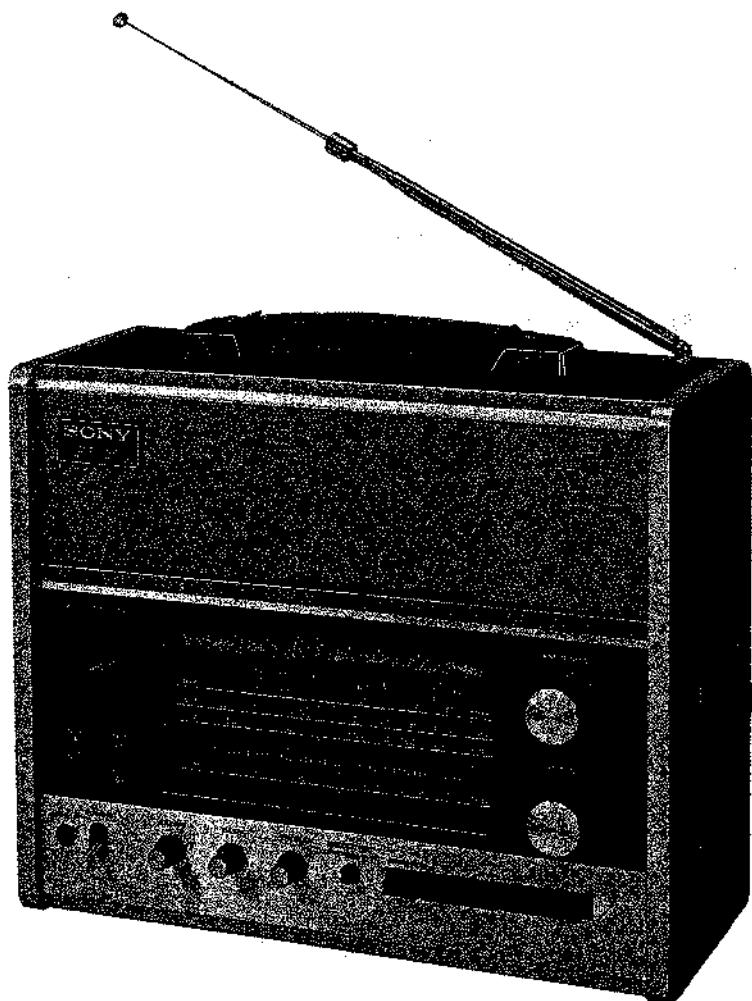

**SONY®
SERVICE MANUAL**

TABLE OF CONTENTS

| <u>Section</u> | <u>Title</u> | <u>Page</u> |
|----------------|----------------------------------------------------|-------------|
| 1 | TECHNICAL DESCRIPTION | 3 |
| 1-1. | Specifications | 3 |
| 1-2. | Technical Features | 4 |
| 1-3. | Circuit Description | 4 |
| 1-4. | Block Diagram | 6 |
| 1-5. | External View | 7 |
| 1-6. | Major Parts Location | 7 |
| 2 | DISASSEMBLY | 8 |
| 2-1. | Chassis Removal | 8 |
| 2-2. | Fm Tuner Removal | 9 |
| 2-3. | Sw Tuner Removal | 9 |
| 2-4. | Cp/i-f Circuit Board Removal | 10 |
| 2-5. | Power Supply Circuit Board Removal | 11 |
| 2-6. | Af Circuit Board Removal | 11 |
| 2-7. | Dial Scale, Dial Drum Removal and Reassembly | 11 |
| 2-8. | Dial Cord Restranging | 12 |
| 3 | ADJUSTMENT PROCEDURES | 14 |
| 3-1. | I-f Alignment | 14 |
| 3-2. | Frequency Coverage and Tracking Adjustment | 15 |
| 3-3. | Adjusting Parts Locations | 18 |
| 3-4. | Voltage and Current Adjustment | 19 |
| 4 | SCHEMATIC AND MOUNTING DIAGRAMS | 20 |
| 4-1. | Schematic Diagram | 20 |
| 4-2. | Fm Tuner Circuit Board | 23 |
| 4-3. | SW2-SW10 Front End | 24 |
| 4-4. | Cp/i-f Circuit Board | 28 |
| 4-5. | Af Circuit Board | 31 |
| 4-6. | Power Circuit Board | 32 |
| 4-7. | Jack Panel | 33 |
| 4-8. | Wiring Diagram | 35 |
| 5 | ELECTRICAL PARTS LIST | 37 |
| 6 | PACKING AND EXPLODED VIEW | 42 |
| 6-1. | Packing | 42 |
| 6-2. | Exploded View | 43 |

SECTION 1

TECHNICAL DESCRIPTION

1-1. SPECIFICATIONS

| | |
|-------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Circuit System: | 2-FET, 19-transistor, 12-diode superheterodyne |
| Frequency Coverage: | FM: 87 - 108 MHz (3.44 - 2.78m) MW: 530 - 1,605 kHz (566 - 187 m) LW: 150 - 400 kHz (2,000 - 750 m) SW1: 1.6 - 4.5 MHz (187 - 67 m) SW2: 4.7 - 5.3 MHz (64 - 57 m) SW3: 5.8 - 6.4 MHz (52 - 47 m) SW4: 7.0 - 7.6 MHz (43 - 39 m) SW5: 9.5 - 10.1 MHz (31.6 - 30 m) SW6: 11.6 - 12.2 MHz (26 - 24.6 m) SW7: 15.0 - 15.6 MHz (20 - 19.2 m) SW8: 17.5 - 18.1 MHz (17 - 16.5 m) SW9: 21.4 - 22.0 MHz (14 - 13.6 m) SW10: 25.5 - 26.1 MHz (11.8 - 11.5 m) |
| Intermediate Frequency: | FM: 10.7 MHz MW, LW, SW1: 455 kHz SW2 - SW10: 1st: 1.55 - 2.25 MHz 2nd: 455 kHz |
| Antenna System: | FM: telescopic antenna or external antenna (impedance 300Ω) MW, LW: built-in ferrite bar antenna or external antenna (high impedance) SW1: telescopic antenna or external antenna (high impedance) SW2 - SW10: telescopic antenna or external antenna (impedance 75Ω) |
| Maximum Sensitivity: | FM: 1 μV (0dB) MW: 25.1 μV/m (28 dB/m) LW: 39.8 μV/m (32 dB/m) SW1: 1 μV (0dB) SW2 - SW10: 1 μV (0dB) |
| Selectivity: | 40 dB at 1,400 kHz ± 10 kHz off resonance |
| Power Requirement: | Six "D" size flashlight batteries 9 volts in total, or house current (ac 100V, 117V, 220V, 240V) |
| Power Output at 10% distortion: | 2.7W (with ac power supply), 1.1W (with battery) |
| maximum: | 3.8W (with ac power supply), 1.7W (with battery) |
| Current Drain at zero signal: | 78 mA (with ac power supply), 35 mA (with battery) |
| AUX IN: Impedance: | 600Ω |
| MPX OUT: Impedance: | 5.1 kΩ |
| Level: | -40 dB (0 dB = 0.775V) |
| Record Out Impedance: | 10 kΩ |
| Level: | -60 dB (0 dB = 0.775V) |
| Speaker: | 3 1/8" (8 cm) x 6 1/4" (16 cm), 4Ω |
| Dimensions: | 13 3/8" (W) x 10 13/16" (H) x 5 11/16" (D) (340 mm x 275 mm x 144 mm) |
| Weight: | 15 lb 7 oz (7 kg) |

1-2. TECHNICAL FEATURES

- * High-performance portable radio receiver with thirteen bands; FM, MW, LW, SW1-SW10.
- * FET (field effect transistor) with triple-tuned passive input circuit for superior interference rejection.
- * High-sensitivity and selectivity on SW bands using double-superheterodyne front end.
- * High-fidelity af amplifier with OTL circuit.
- * Choice of three power sources; house current, battery, car battery.

1-3. CIRCUIT DESCRIPTION

| Stage/control | Function |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Fm Tuner | |
| FET mixer Q101 | Usually an fm front end consists of an rf amplifier, mixer and local oscillator as shown in Fig. 1-1. The rf amplifier sometimes worsens the crossmodulation handling ability of the receiver when ordinary bipolar transistors are used. It is, however, difficult to eliminate the rf amplifier because its removal causes strong spurious radiation, poor sensitivity, and a poor noise figure. To solve this problem, the Model |
| Afc diode D101 | This diode is connected across the resonant circuit of the oscillator and works as a variable-capacitance diode. A dc feedback voltage from the discriminator controls the bias applied to the diode to keep the local oscillator frequency correct. |
| Fm i-f amplifier Q103 | Transistor Q103 amplifies the 10.7 MHz i-f signal produced by mixer Q101 and coupled to it through i-f transformer IFT 101. |
| Sw Tuner | |
| Double-superheterodyne | A block diagram of the sw front end is shown in Fig. 1-3. Such an arrangement effectively suppresses image signals, since the high value of the first i-f causes the desired and image signals to differ greatly in frequency. At the same time, the relatively low value of the second i-f makes it possible to obtain high amplification as well as sharp discrimination against signals differing only slightly in frequency from the desired signal. |

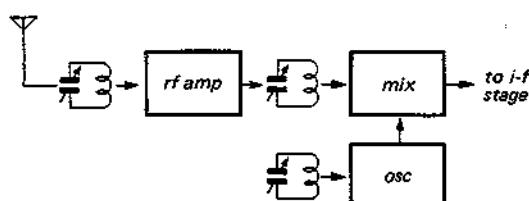


Fig. 1-1 Usual fm front end

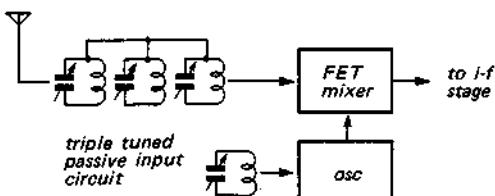


Fig. 1-2 CRF-150 fm front end

CRF-150 uses a low-noise junction FET for the mixer and a triple-tuned passive input circuit as shown in Fig. 1-2. The Model CRF-150 is capable of clear fm reception even in strong signal-strength areas due to the extremely superior interference-rejection characteristics of the passive input circuit.

Local oscillator
Q102

The oscillator generates a frequency 10.7 MHz higher than the incoming signal frequency and injects the generated voltage at the source of FET mixer Q101.

Afc diode
D101

This diode is connected across the resonant circuit of the oscillator and works as a variable-capacitance diode. A dc feedback voltage from the discriminator controls the bias applied to the diode to keep the local oscillator frequency correct.

Fm i-f amplifier
Q103

Transistor Q103 amplifies the 10.7 MHz i-f signal produced by mixer Q101 and coupled to it through i-f transformer IFT 101.

Sw Tuner

Double-superheterodyne

A block diagram of the sw front end is shown in Fig. 1-3. Such an arrangement effectively suppresses image signals, since the high value of the first i-f causes the desired and image signals to differ greatly in frequency. At the same time, the relatively low value of the second i-f makes it possible to obtain high amplification as well as sharp discrimination against signals differing only slightly in frequency from the desired signal.

The result is that this double-superheterodyne front end provides a combination of greater image suppression and higher adjacent channel-selectivity than can be realized in a simple superheterodyne receiver.

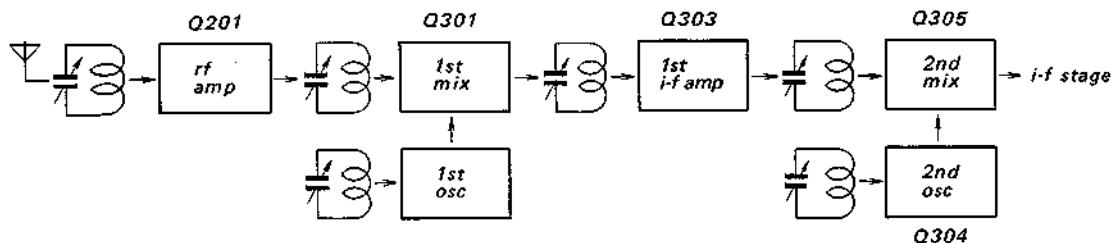


Fig. 1-3 Block diagram of the sw front end

*Agc amp**Q202**D302*

The agc (automatic gain control) circuit consists of transistor Q202 and diode D302. The carrier from the last stage of the i-f amplifier adds a negative agc voltage on the positively-biased base of transistor Q202 through diode D302 as shown in Fig. 1-4.

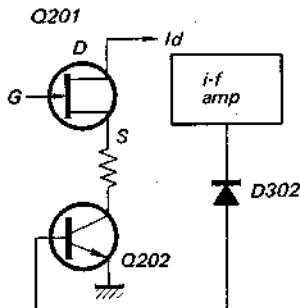


Fig. 1-4 Diagram of the agc

As the signal becomes stronger, the agc level becomes higher also.

Accordingly, the collector-current of Q202 and the drain-current of Q201 decrease. If the signal is small, Q202 increases the gain of rf amplifier Q201 and the desired sensitivity is obtained as shown in Fig. 1-5. In this way, the gain is controlled automatically.

*1st local oscillator
Q203*

The oscillator generates a frequency 1.55 – 2.25 MHz higher than the incoming signal frequency, and injects the generated voltage at the emitter of Q301. The oscillator frequencies are fixed in each band.

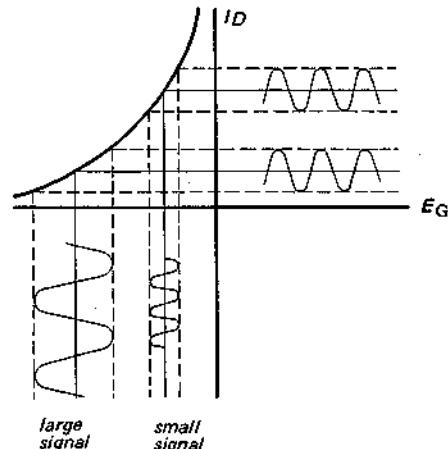


Fig. 1-5 Output waveform of the agc

I-f Strip*1st mixer
Q301*

Q301 combines the signal applied to its base with the oscillator voltage (1.55 – 2.25 MHz higher than incoming signal) applied to its emitter for conversion to the 1.55 – 2.25 MHz 1st i-f.

*SW 1st i-f amplifier**MW, LW rf amplifier
Q303**2nd oscillator
Q304*

Q303 amplifies three a-m signals; 1.55 – 2.25 MHz (SW1 – SW10), 520 – 1,670 kHz (MW), and 145 – 410 kHz (LW).

*Fm i-f amplifier
Q302*

Q304 generates a frequency 455 kHz higher than the signals that come from Q303.

Q302 amplifies the 10.7 MHz fm i-f signal coupled through ceramic filters CF301 and CF302. Also, the saturation due to high base to emitter bias clips the negative peak of the ac signal voltage developed at the collector of Q302.

CRF-150

- Limiter
D301** This diode clips the positive peak of ac signal voltage developed at the collector of Q305.
- Fm i-f amplifier** Q305 amplifies 10.7 MHz fm i-f signal. Also, Q305 produces a 455 kHz a-m i-f signal on its collector.
- A-m 2nd mixer
Q305**


Power Supply

The CRF-150 uses a 4-pin ac cord for its power supply and has a power-in jack for a house current 100V, 117V, 220V and 240V (for USA model 117V only). However, by using the SONY DCC-2A Car Battery Cord or standard flashlight batteries (six size "D" cells), the CRF-150 can be operated away from an ac power outlet. Though diode D502 prevents a reverse current flow through the batteries when using a house current or car battery, it is better to remove the flashlight batteries if they will not be used for a while.

Sensitivity Selector

The stage selectivity is obtained by using a ceramic filter (CF304) as a frequency-selective by-pass centered at 455 kHz. This gives transistor Q304 a high gain at 455 kHz by preventing emitter degeneration of the signal at this frequency. By connecting capacitor C372 in parallel with filter CF304 (See Fig. 1-6), the BROAD selectivity bandwidth is obtained. When the SHARP position is set, the bandwidth becomes narrow. However, greater sensitivity with less noise is obtained and a weak signal can easily be heard.

1-4. BLOCK DIAGRAM

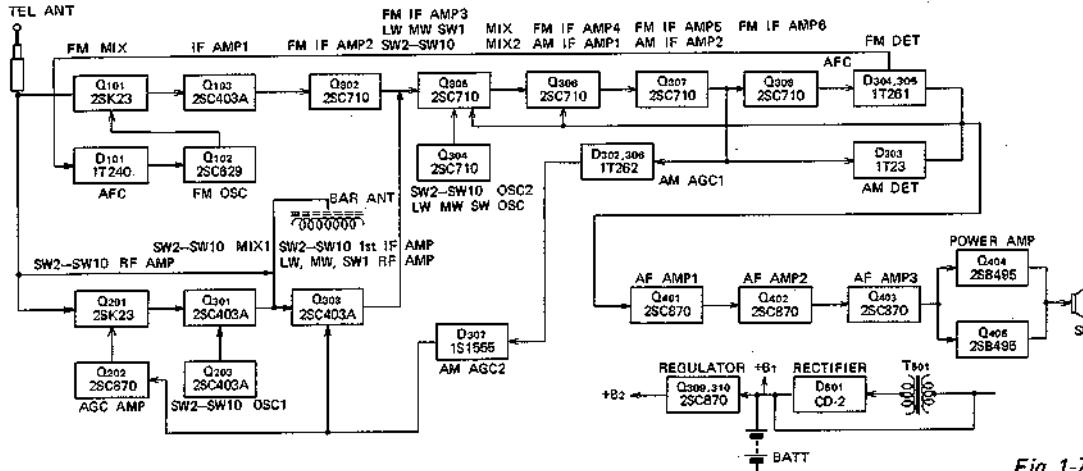

1-5. EXTERNAL VIEW

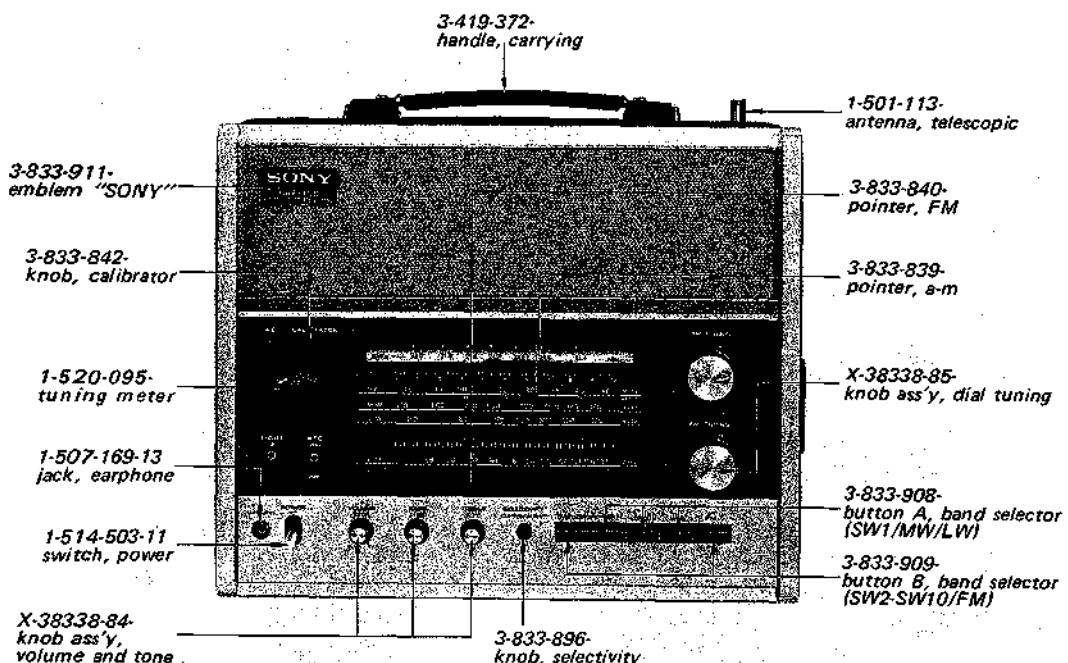


Fig. 1-8

1-6. MAJOR PARTS LOCATION

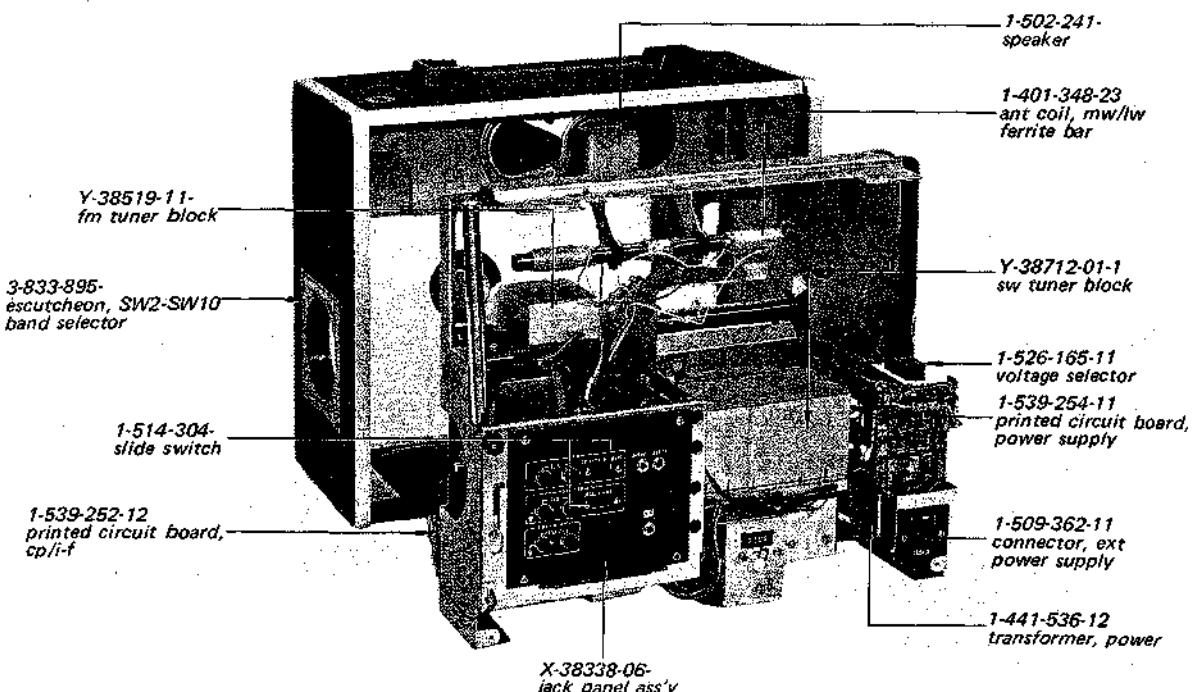


Fig. 1-9

SECTION 2 DISASSEMBLY

2-1. CHASSIS REMOVAL

1. Pull off the six knobs shown in Fig. 2-1.
2. Remove the two screws and carrying handle as shown in Fig. 2-1.

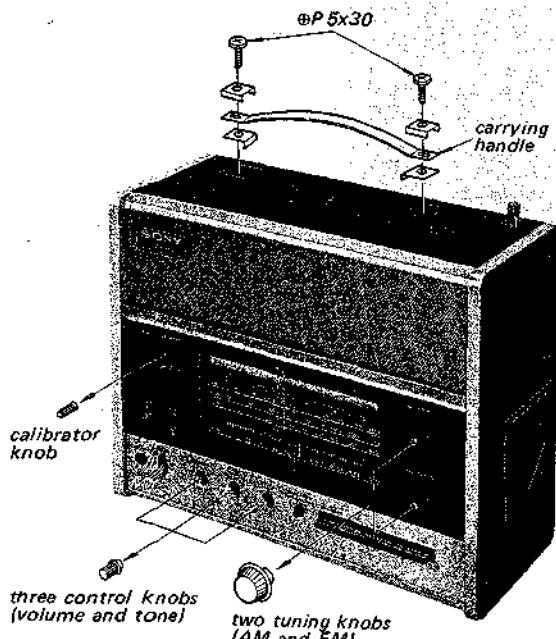


Fig. 2-1

5. Remove the four screws marked Δ which fasten the front panel to the chassis in Fig. 2-3.
6. Loosen a screw marked \circ and remove the telescopic antenna.
7. Remove the speaker socket as shown in Fig. 2-3.
8. Now, the front panel is removable as shown in Fig. 2-4.
9. Remove the three screws and two rubber feet as shown in Fig. 2-4.

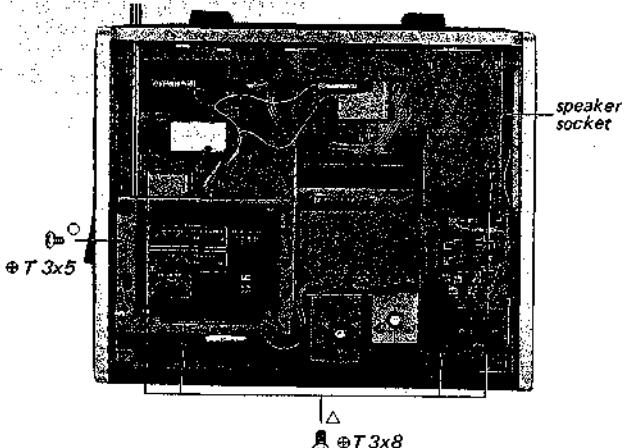


Fig. 2-3

3. Remove the battery lid and take out batteries and ac cord.
4. Remove the three screws shown in Fig. 2-2.

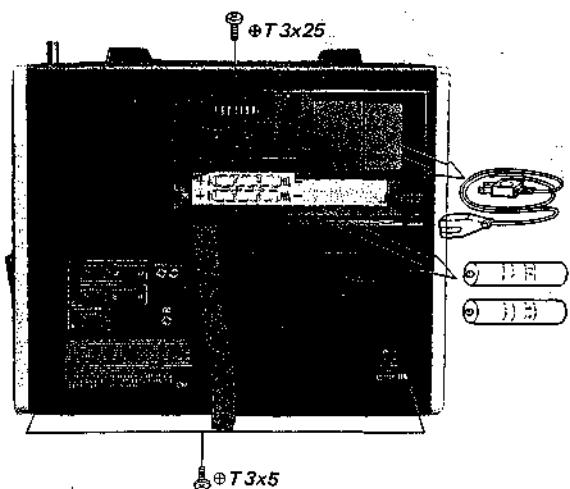


Fig. 2-2

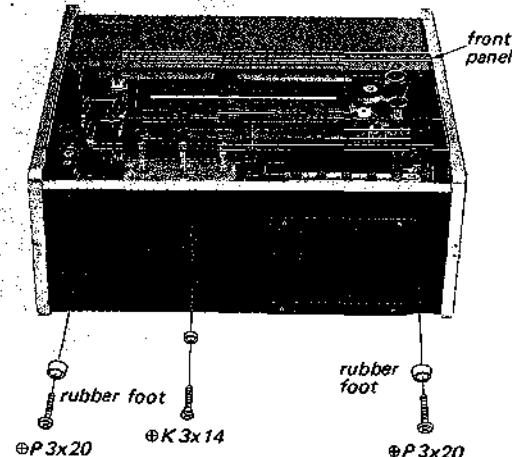


Fig. 2-4

10. Loosen the three screws and pull off the sw band selector knob as shown in Fig. 2-5.
11. Now, the chassis is removable as shown in Fig. 2-6.

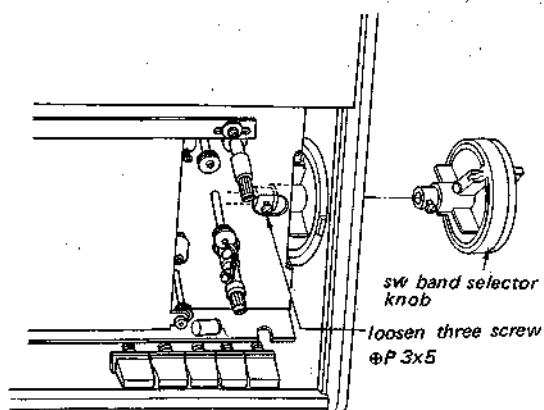


Fig. 2-5

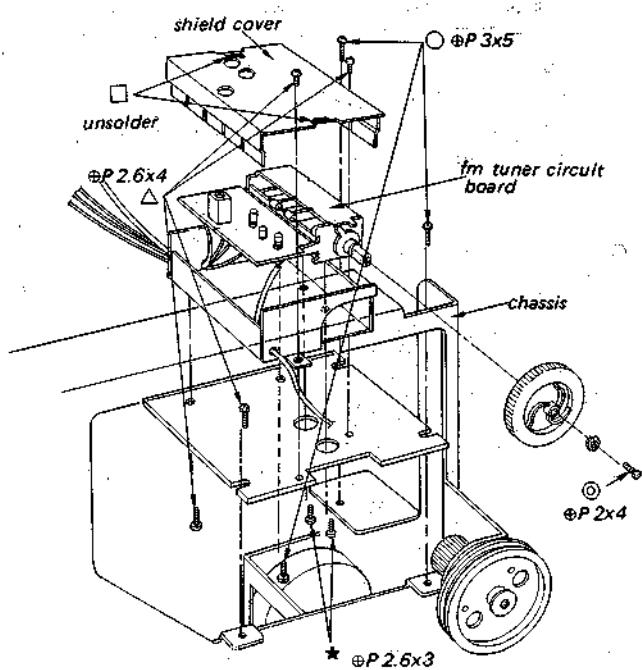


Fig. 2-7

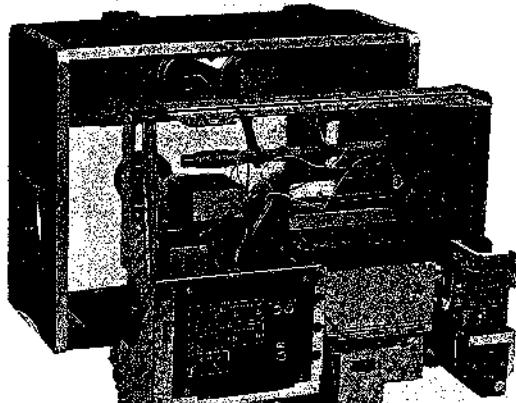


Fig. 2-6

2-2. FM TUNER REMOVAL

1. Remove the chassis.
2. Remove the seven screws marked \circ and Δ in Fig. 2-7.
3. Remove the two screws marked \star .
4. Remove the screw marked \odot .
5. Unsolder the two soldered portions on the shield cover marked \square .
6. Take out the shield cover and fm tuner circuit board as illustrated in Fig. 2-7.

2-3. SW TUNER REMOVAL

1. Remove the chassis.
2. Unsolder the ten lead wires shown in Fig. 2-8.

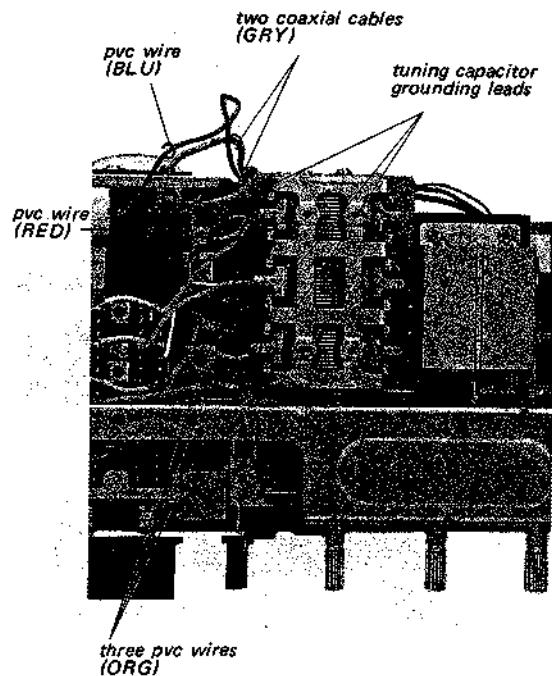


Fig. 2-8

3. Remove the five screws and the shield cover as shown in Fig. 2-9 and unsolder the two lead wires.
4. Loosen the four screws marked O.
5. Now, sw tuner block is removable in the direction shown by the arrow.

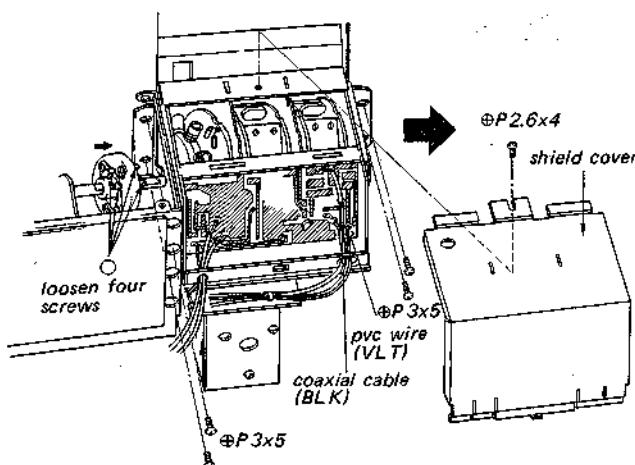


Fig. 2-9

2-4. CP/IF CIRCUIT BOARD REMOVAL

1. Unsolder the same ten lead wires in Fig. 2-8 as sw tuner removal.
2. Unsolder the six lead wires at ferrite bar antenna as shown in Fig. 2-10.

six pvc wires

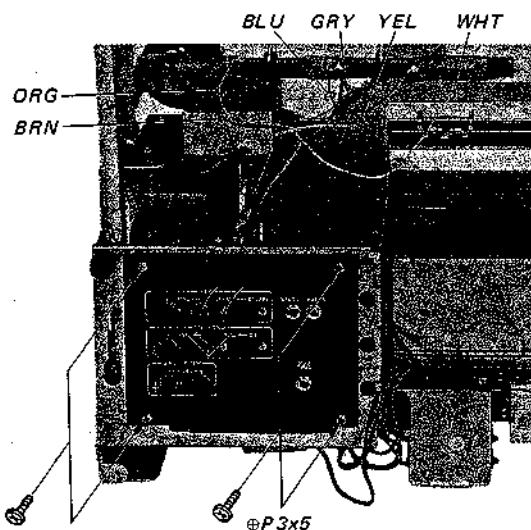


Fig. 2-10

3. Remove the four screws at the jack panel as illustrated in Fig. 2-10 and unsolder the six lead wires shown in Fig. 2-11.
4. Remove the three screws shown in Fig. 2-12.
5. Unsolder the three lead wires.
6. Loosen the four lead wires from the lead wire holding lug.
7. Slide off the CP-IF circuit board in the direction shown by the arrow in Fig. 2-12.

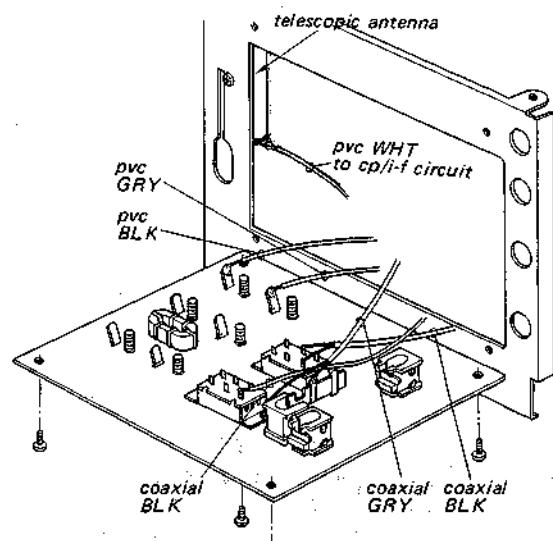


Fig. 2-11

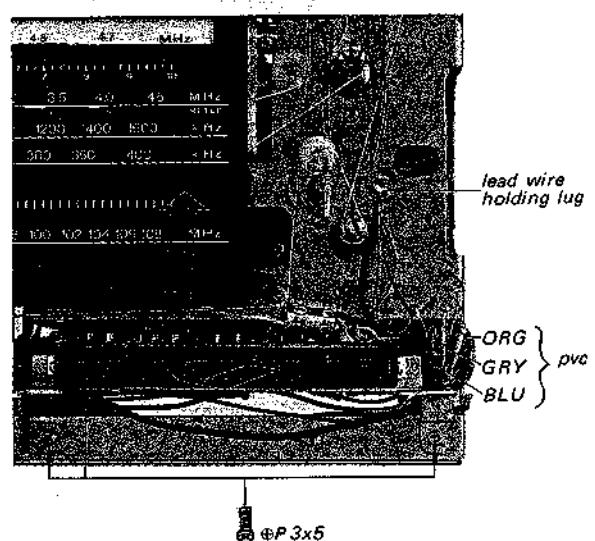


Fig. 2-12

2-5. POWER SUPPLY CIRCUIT BOARD REMOVAL

1. Remove the two screws shown in Fig. 2-13.
2. Turn the circuit board in the direction shown by the arrow.

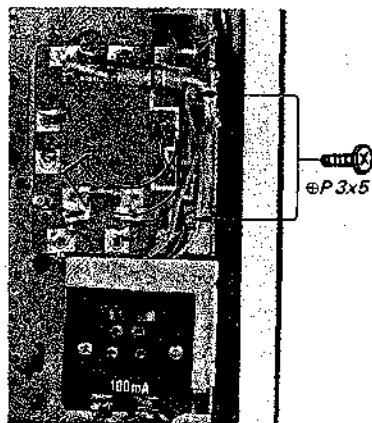


Fig. 2-13

2-6. AF CIRCUIT BOARD REMOVAL

1. Remove the four screws shown in Fig. 2-14.
2. Remove the circuit board in the direction shown by the arrow.

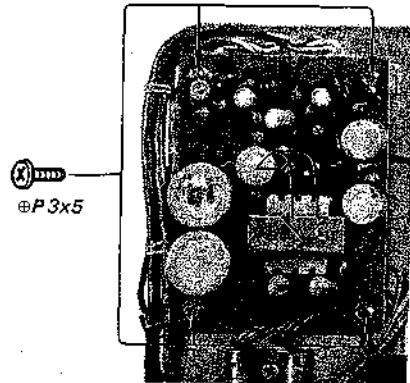


Fig. 2-14

2-7. DIAL SCALE AND DIAL DRUM REMOVAL

1. Remove the chassis.
2. Remove the four screws shown in Fig. 2-15.
3. Release the pointers from dial cords.

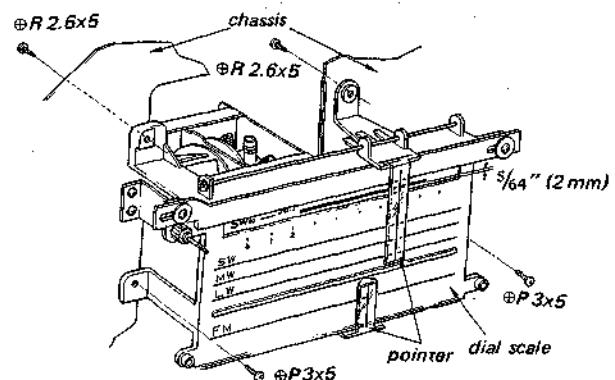


Fig. 2-15

4. Remove the dial scale.
5. Remove the drum holder A by removing the two screws marked ④ in Fig. 2-16.
6. Release the two screws marked * in Fig. 2-16.
7. Pull the dial drum towards you.

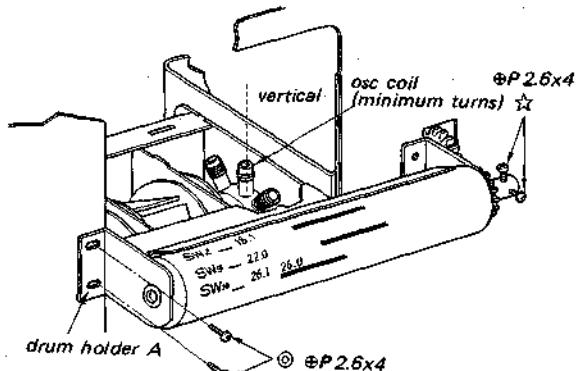


Fig. 2-16

Dial Drum Reassembly

1. Turn the sw band selector so that the osc coil which has the minimum turns comes to the vertical position as shown in Fig. 2-16.
2. Attach the dial drum to the drum holders setting the two screws marked ④ in Fig. 2-16.
3. Set the dial scale.
4. Turn the dial drum so that the drum indicates SW10 and the distance between the dial scale and the line on the drum becomes $5/64$ inches (2 mm) as shown in Fig. 2-15.
5. Fasten the two screws marked * in Fig. 2-16.

2-8. DIAL CORD RESTRINGING

Preparation

1. Remove the chassis.
2. Remove the four screws shown in Fig. 2-17 and take out the dial scale.
3. Remove the volume holder by removing the two screws as shown in Fig. 2-18.

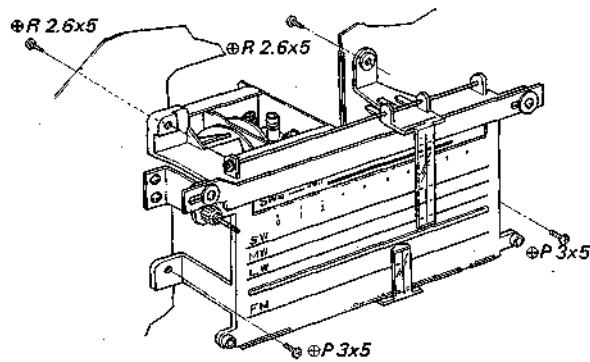


Fig. 2-17

4. Rotate the driving pulley for a-m fully clockwise to its minimum capacitance position as shown in Fig. 2-19.
5. Rotate the driving pulley for fm band fully counterclockwise to its minimum capacitance position as shown in Fig. 2-20.

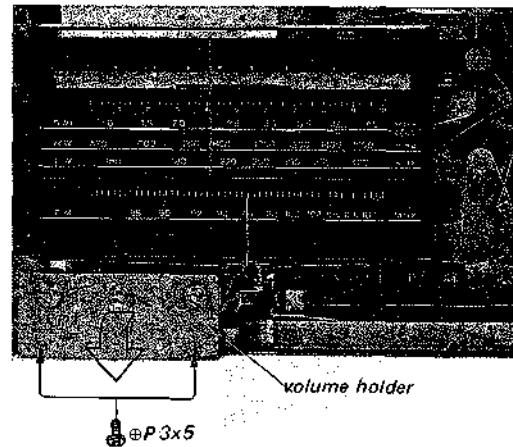


Fig. 2-18

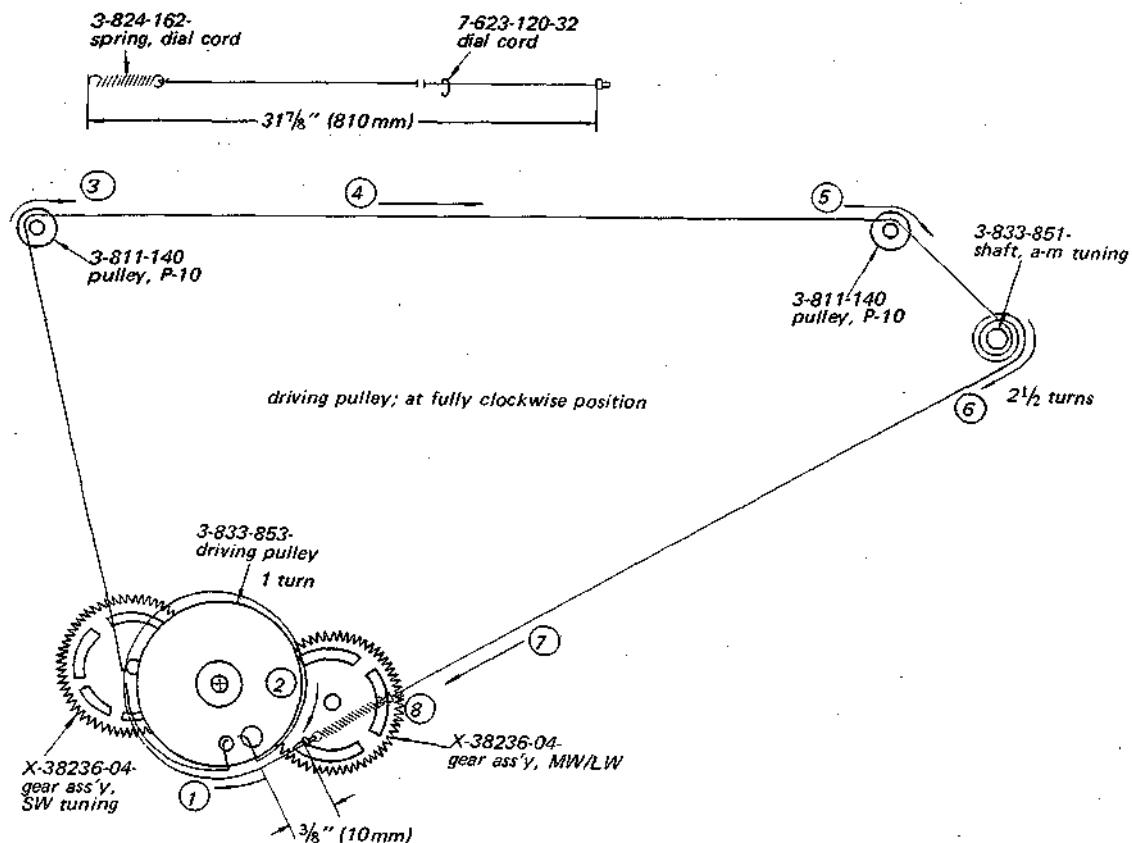


Fig. 2-19

2. Fm Tuning Capacitor Driving Cord

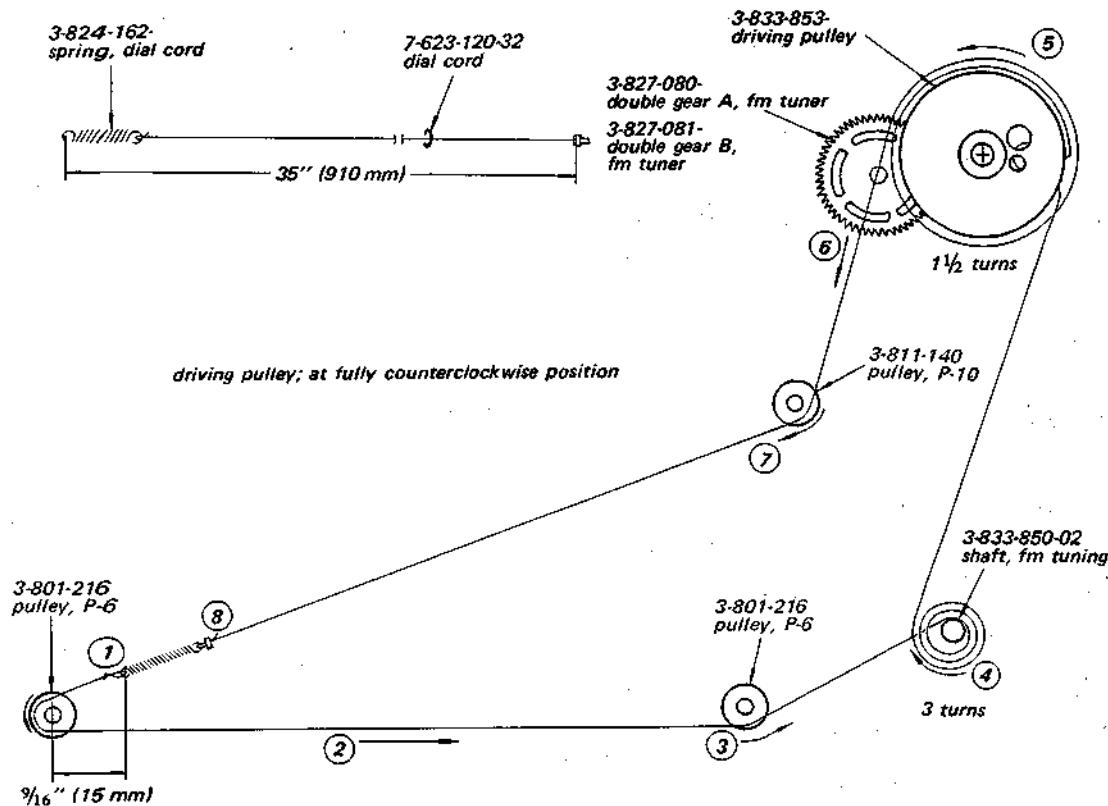


Fig. 2-20

3. Pointer Setting

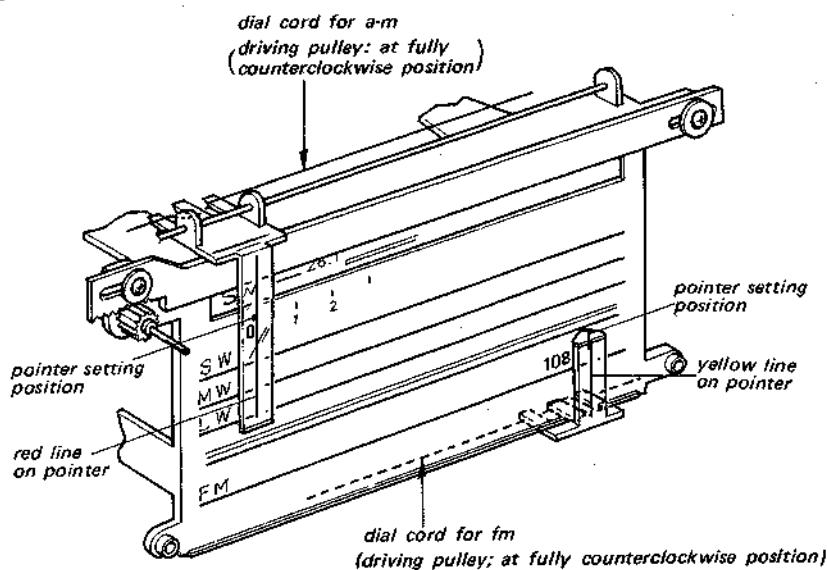


Fig. 2-21

SECTION 3 ADJUSTMENT PROCEDURES

3.1. IF ALIGNMENT

Test Equipment/Tools Required:

- 10.7 MHz Sweep Generator
- Rf signal generator (for fm and a-m)
- Oscilloscope
- VTVM
- Loop antenna
- Screw driver for alignment

1. FM IF ALIGNMENT

Preparation:

- Band selector: FM
- AFC: OFF
- Selectivity: SHARP
- Local/DX: DX

| Sweep Generator Coupling | Sweep Generator Frequency | Oscilloscope Connection | Adjust | Remarks |
|-----------------------------------------------------|---------------------------|-------------------------|----------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|
| Direct connection to EXT. ANT. 300Ω (See Fig. 3-1.) | 10.7 MHz | MPX OUT jack | IFT F101 IFT F301 IFT F302 IFT F303 IFT F304 | Adjust for maximum amplitude and symmetrical "S" curve on the scope. (See Fig. 3-2.) Ant. Switch: EXT. ANT. |

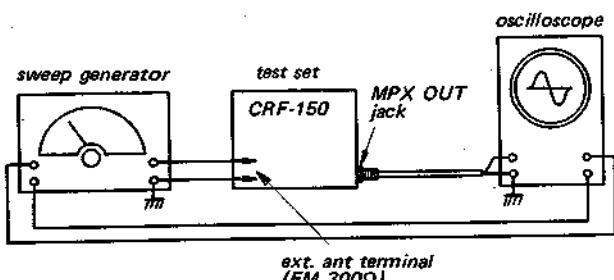


Fig. 3-1 Fm i-f alignment setup

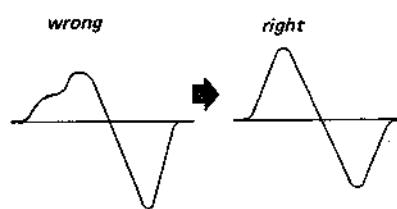


Fig. 3-2 "S" curve on oscilloscope

2. AM IF ALIGNMENT

Preparation:

- Band selector: MW
- Tuning Capacitor: minimum capacitance position

| Rf Signal Generator Coupling | Rf Signal Generator Frequency | VTVM Connection | Adjust | Remarks |
|------------------------------|-----------------------------------|-----------------|----------|-----------------------------------|
| Loop antenna (See Fig. 3-3.) | 455 kHz (1 kHz 30% a-m modulated) | MPX OUT jack | IFT A301 | Adjust for maximum meter reading. |

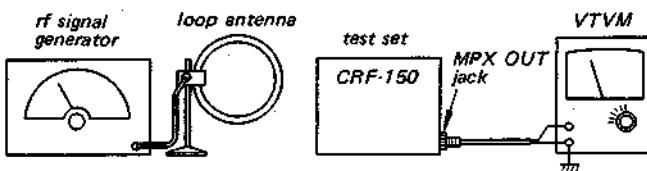


Fig. 3-3 A-m i-f alignment, MW/LW frequency coverage and tracking adjustment setup

3-2. FREQUENCY COVERAGE AND TRACKING ADJUSTMENT

Preparation: VTVM Connection: To MPX OUT jack

Modulation: FM 400 Hz \pm 22.5 kHz frequency-modulated signal
AM 1 kHz 30% amplitude-modulated signal

AFC: OFF

Selectivity: SHARP

| Adjustment | Rf Signal Generator Coupling | Rf Signal Generator Frequency | Receiver Dial Setting | Adjust | Remarks |
|------------------------|---------------------------------------------------------------------------------------------------|-------------------------------|---------------------------|-------------------------------------------------|----------------------------------------------------------------------------------------------------|
| FM Frequency Coverage | Direct connection to ext. ant. terminal FM 300Ω See Fig. 3-4. | 85.5 MHz 109.5 MHz | Fully left Fully right | FM osc coil L104 FM osc trimmer CT1-4 | Band Selector: FM Ant Switch: EXT Adjust for maximum meter reading. |
| FM Tracking | The special test equipment required for this adjustment makes this strictly a factory adjustment. | | | | |
| MW Frequency Coverage | Loop antenna See Fig. 3-3. | 528 kHz | Fully left | MW osc coil L312 | Band Selector: MW Adjust for maximum meter reading. |
| | | 1,650 kHz | Fully right | MW osc trimmer CT309 | |
| | | 620 kHz | Tune to 620 kHz signal | MW ant coil L304-1 MW rf coil L308 | |
| | | 1,400 kHz | Tune to 1,400 kHz signal | MW ant trimmer CT301-2 MW rf trimmer CT305 | |
| LW Frequency Coverage | ditto | 145 kHz | Fully left | LW osc coil L313 | Band Selector: LW Adjust for maximum meter reading. |
| | | 410 kHz | Fully right | LW osc trimmer CT310 | |
| | | 160 kHz | Tune to 160 kHz | LW ant coil L304-2 LW rf coil L309 | |
| | | 380 kHz | Tune to 380 kHz | LW ant trimmer CT301-3 LW rf trimmer CT306 | |
| SW1 Frequency Coverage | Direct connection to ext. ant. terminal See Fig. 3-5. | 1.55 MHz | Fully left | SW1 osc coil L311 | Band Selector: SW1 Unsolder a blue lead shown in Fig. 3-6. Adjust for maximum meter reading. |
| | | 4.6 MHz | Fully right | SW1 osc trimmer CT308 | |
| | | 1.8 MHz | Tune to 1.8 MHz | SW1 ant coil L303 SW1 rf coil L307 | |
| | | 4.2 MHz | Tune to 4.2 MHz | SW1 ant trimmer CT301-1 SW1 rf trimmer CT304 | |

| Adjustment | Rf Signal Generator Coupling | Rf Signal Generator Frequency | Receiver Dial Setting | Adjust | Remarks |
|---------------------------------------------|---------------------------------------------------------------------------------------------------------|-------------------------------|-------------------------------|-----------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| SW2-SW10 1st IF Frequency Coverage | To the base of Q301 through a capacitor 0.01 – 0.04μF See Fig. 3-7 and Fig. 3-8. | 1.55 MHz | Fully left | SW2-SW10, 2nd osc coil L310 | Band Selector: SW2 Adjust for maximum meter reading. |
| SW2-SW10 1st IF Tracking | | 2.25 MHz | Fully left | SW2-SW10, 2nd osc trimmer CT307 | |
| SW2 Frequency Coverage | To the SW2– SW10 ext. ant. terminal through a dummy ant. See Fig. 3-9. and Fig. 3-10. | 1.6 MHz | Tune to 1.6 MHz signal | SW2-SW10, 1st i-f coil L302, L306 | Band Selector: SW2 DX-LOCAL Switch: DX Unsolder a violet lead shown in Fig. 3-10. Adjust for maximum meter reading. |
| SW2 Tracking | | 2.2 MHz | Tune to 2.2 MHz | SW2-SW10, 1st i-f trimmer CT302, CT303 | |
| SW2 Frequency Coverage | | 4.65 MHz | Fully left | SW2 1st osc coil L207 | |
| SW2 Tracking | — ditto — | 4.8 MHz | Tune to 4.8 MHz signal | SW2 – SW4 ant coil L201 rf coil L204 | Band Selector: SW2 DX-LOCAL Switch: DX Unsolder a violet lead shown in Fig. 3-10. Adjust for maximum meter reading. |
| SW2 Frequency Coverage | | 5.2 MHz | Tune to 5.2 MHz signal | SW2 ant trimmer CT201 SW2 rf trimmer CT210 | |
| SW3 Frequency Coverage | — ditto — | 5.75 MHz | Fully left | SW3 1st osc coil L208 | Band Selector: SW3 DX-LOCAL Switch: DX Adjust for maximum meter reading. |
| SW3 Tracking | | 6.3 MHz | Tune to 6.3 MHz | SW3 ant trimmer CT202 SW3 rf trimmer CT211 | |
| SW4 Frequency Coverage | — ditto — | 6.95 MHz | Fully left | SW4 1st osc coil L209 | Band Selector: SW4 DX-LOCAL Switch: DX Adjust for maximum meter reading. |
| SW4 Tracking | | 7.5 MHz | Tune to 7.5 MHz | SW4 ant trimmer CT203 SW4 rf trimmer CT212 | |
| SW5 Frequency Coverage | — ditto — | 9.45 MHz | Fully left | SW5 1st osc coil L210 | Band Selector: SW5 DX-LOCAL Switch: DX Adjust for maximum meter reading. |
| SW5 Tracking | | 9.6 MHz | Tune to 9.6 MHz signal | SW5-SW7 ant coil L202 rf coil L205 | |
| SW5 Frequency Coverage | | 10.0 MHz | Tune to 10.0 MHz signal | SW5 ant trimmer CT204 SW5 rf trimmer CT213 | |
| SW6 Frequency Coverage | — ditto — | 11.55 MHz | Fully left | SW6 1st osc coil L211 | Band Selector: SW6 DX-LOCAL Switch: DX Adjust for maximum meter reading. |
| SW6 Tracking | | 12.1 MHz | Tune to 12.1 MHz signal | SW6 ant trimmer CT205 SW6 rf trimmer CT214 | |

| Adjustment | Rf Signal Generator Coupling | Rf Signal Generator Frequency | Receiver Dial Setting | Adjust | Remarks |
|-------------------------|------------------------------|-------------------------------|-------------------------|-------------------------------------------------|---------------------------------------------------------------------------------|
| SW7 Frequency Coverage | - ditto - | 14.95 MHz | Fully left | SW7 1st osc coil L212 | Band Selector: SW7 DX-LOCAL Switch: DX Adjust for maximum meter reading. |
| SW7 Tracking | | 15.5 MHz | Tune to 15.5 MHz signal | SW7 ant trimmer CT206 SW7 rf trimmer CT215 | |
| SW8 Frequency Coverage | - ditto - | 17.45 MHz | Fully left | SW8 1st osc coil L213 | Band Selector: SW8 DX-LOCAL Switch: DX Adjust for maximum meter reading. |
| SW8 Tracking | | 17.6 MHz | Tune to 17.6 MHz signal | SW8 - SW10 ant coil L203 rf coil L206 | |
| SW8 Tracking | | 18.0 MHz | Tune to 18.0 MHz signal | SW8 ant trimmer CT207 SW8 rf trimmer CT216 | |
| SW9 Frequency Coverage | - ditto - | 21.35 MHz | Fully left | SW9 1st osc coil L214 | Band Selector: SW9 DX-LOCAL Switch: DX Adjust for maximum meter reading. |
| SW9 Tracking | | 21.9 MHz | Tune to 21.9 MHz | SW9 ant trimmer CT208 SW9 rf trimmer CT217 | |
| SW10 Frequency Coverage | - ditto - | 25.45 MHz | Fully left | SW10 1st osc coil L215 | Band Selector: SW10 DX-LOCAL Switch: DX Adjust for maximum meter reading. |
| SW10 Tracking | | 26.0 MHz | Tune to 26.0 MHz | SW10 ant trimmer CT209 SW10 rf trimmer CT218 | |

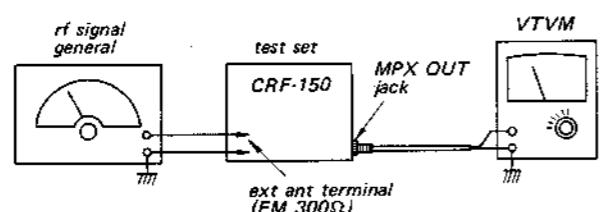


Fig. 3-4 FM frequency coverage and tracking adjustment setup

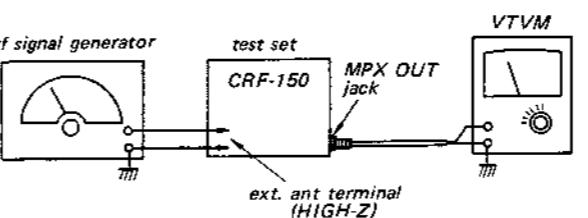


Fig. 3-5 SW1 frequency coverage and tracking adjustment setup

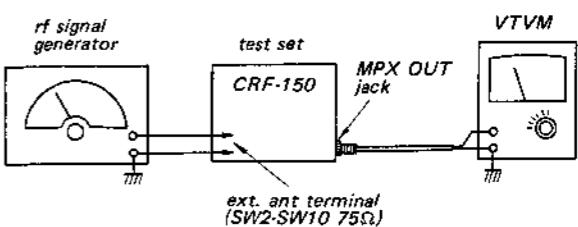


Fig. 3-9 SW2-SW10 frequency coverage and tracking adjustment setup

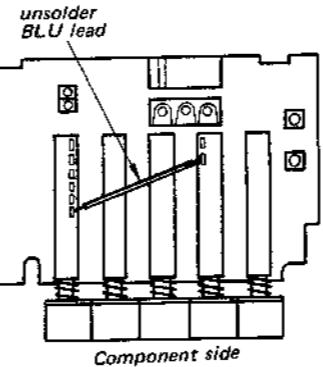


Fig. 3-6 Blue lead on cp circuit board

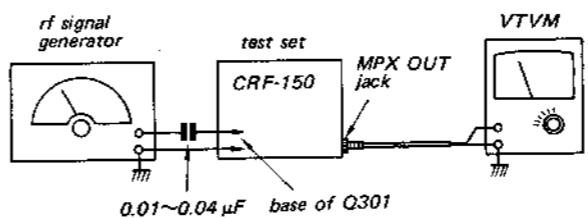


Fig. 3-7 SW2-SW10 1st i-f frequency coverage and tracking adjustment setup

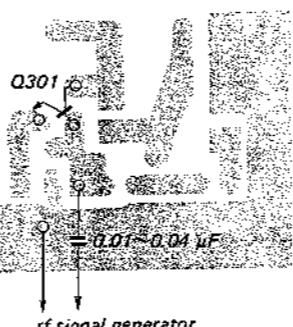


Fig. 3-8 Signal generator connection

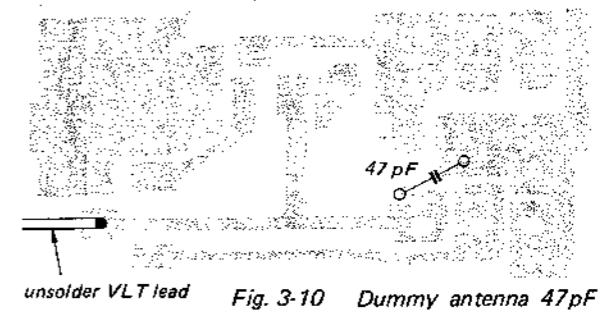


Fig. 3-10 Dummy antenna 47pF on sw tuner front end

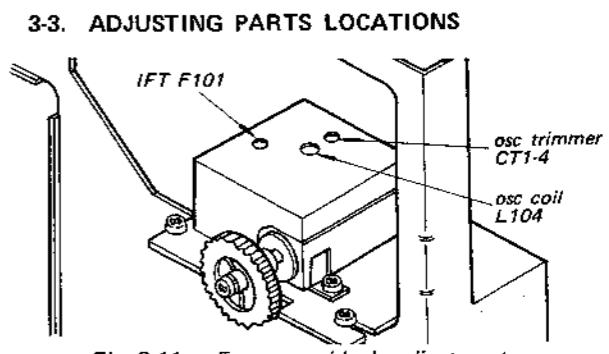


Fig. 3-11 Fm tuner block adjustments on fm tuner block

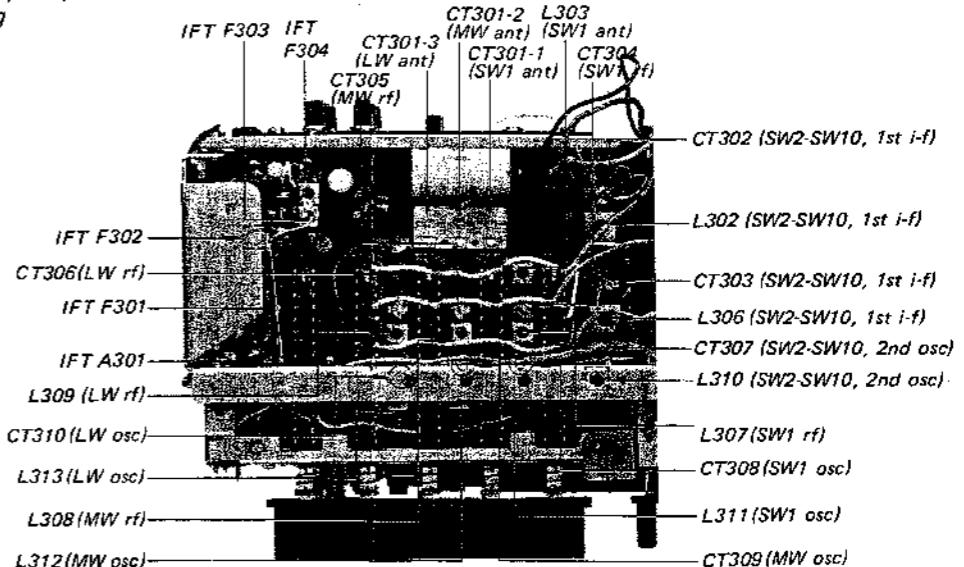


Fig. 3-12 Cp/i-f circuit board adjustments

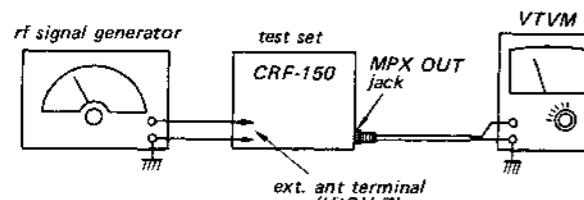


Fig. 3-5 SW1 frequency coverage and tracking adjustment setup

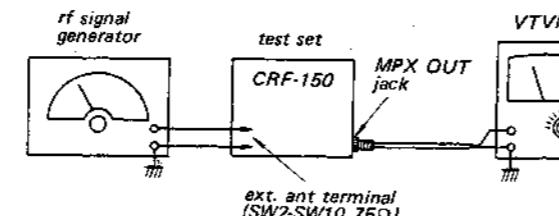


Fig. 3-9 SW2-SW10 frequency coverage and tracking adjustment setup

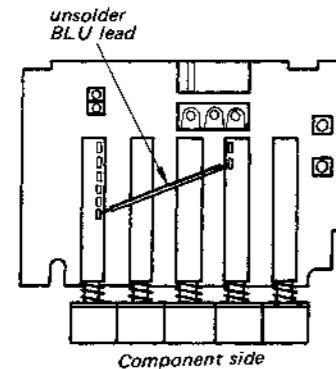


Fig. 3-6 Blue lead on cp circuit board

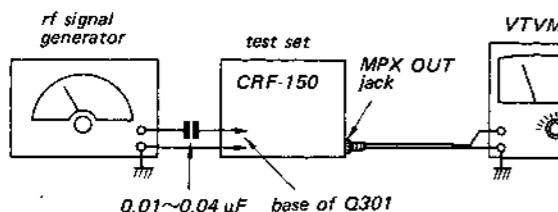


Fig. 3-7 SW2-SW10 1st i-f frequency coverage and tracking adjustment setup

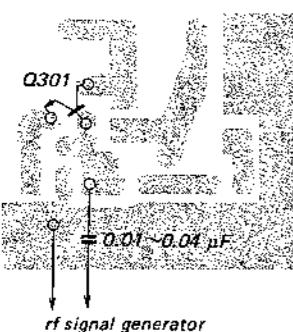


Fig. 3-8 Signal generator connection

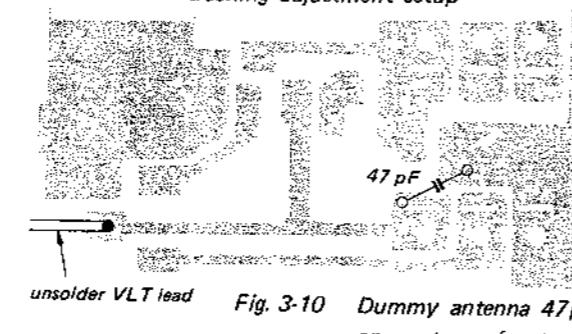


Fig. 3-10 Dummy antenna 47pF on sw tuner front end

3-3. ADJUSTING PARTS LOCATIONS

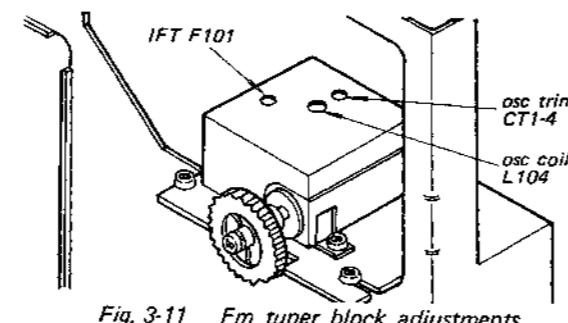


Fig. 3-11 Fm tuner block adjustments on fm tuner block

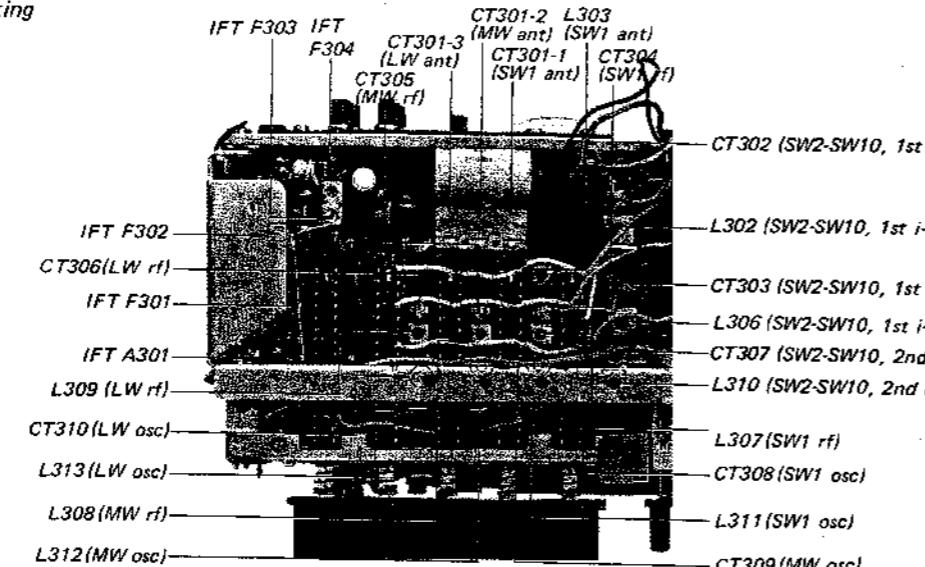


Fig. 3-12 Cp/i-f circuit board adjustments

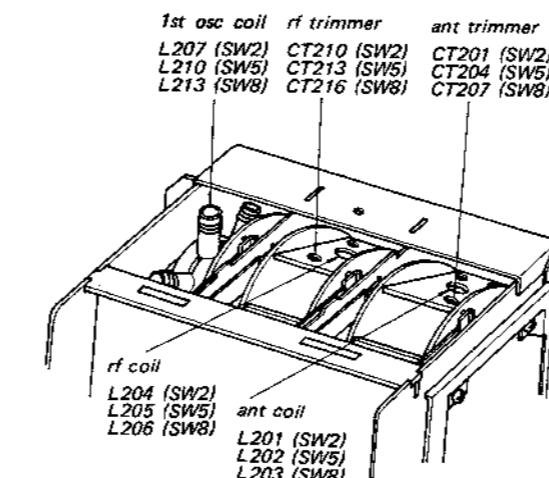


Fig. 3-13 Adjusting parts for SW2, SW6, SW8

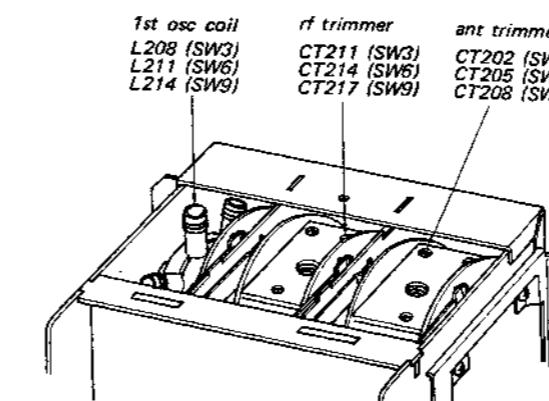


Fig. 3-14 Adjusting parts for SW3, SW6, SW9

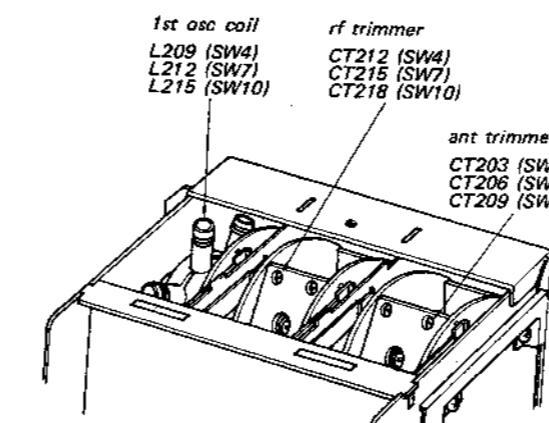


Fig. 3-15 Adjusting parts for SW4, SW7, SW10

3-4. VOLTAGE AND CURRENT ADJUSTMENT

1. Regulator Voltage

Parts to be selected: R369

Band selector: MW

Power requirement: ac

Adjustment: R369 must be selected to obtain 4.5V at emitter of Q309.

R369: 1/4W carbon resistor,

1-244-670- 750Ω

1-244-671- 820Ω

1-244-672- 910Ω

1-244-673- 1 kΩ

1-244-674- 1,100Ω

1-244-675- 1,200Ω

2. A-m If Current

Parts to be selected: R338

Band selector: MW

Power requirement: ac

Adjustment: R338 must be selected to obtain 0.27V at emitter of Q306.

R338: 1/4W carbon resistor,

1-244-720- 91 kΩ

1-244-721- 100 kΩ

1-244-722- 110 kΩ

1-244-723- 120 kΩ

1-244-724- 130 kΩ

1-244-725- 150 kΩ

1-244-726- 160 kΩ

3. Fm If Current

Parts to be selected: R343

Band selector: FM

Power requirement: ac

Adjustment: R343 must be selected to obtain 0.31V at emitter of Q306.

R343: 1/4W carbon resistor,

1-244-672- 910Ω

1-244-673- 1 kΩ

1-244-674- 1,100Ω

1-244-675- 1,200Ω

1-244-676- 1,300Ω

1-244-677- 1,500Ω

4. Sw Agc Bias

Parts to be adjusted: R212 (100 kΩ adjustable)


Band selector: SW2-SW10


Power requirement: ac or dc

Adjustment: R212 must be adjusted to obtain 0.5V across resistor R201.

SECTION 4

4-1. SCHEMATIC DIAGRAM

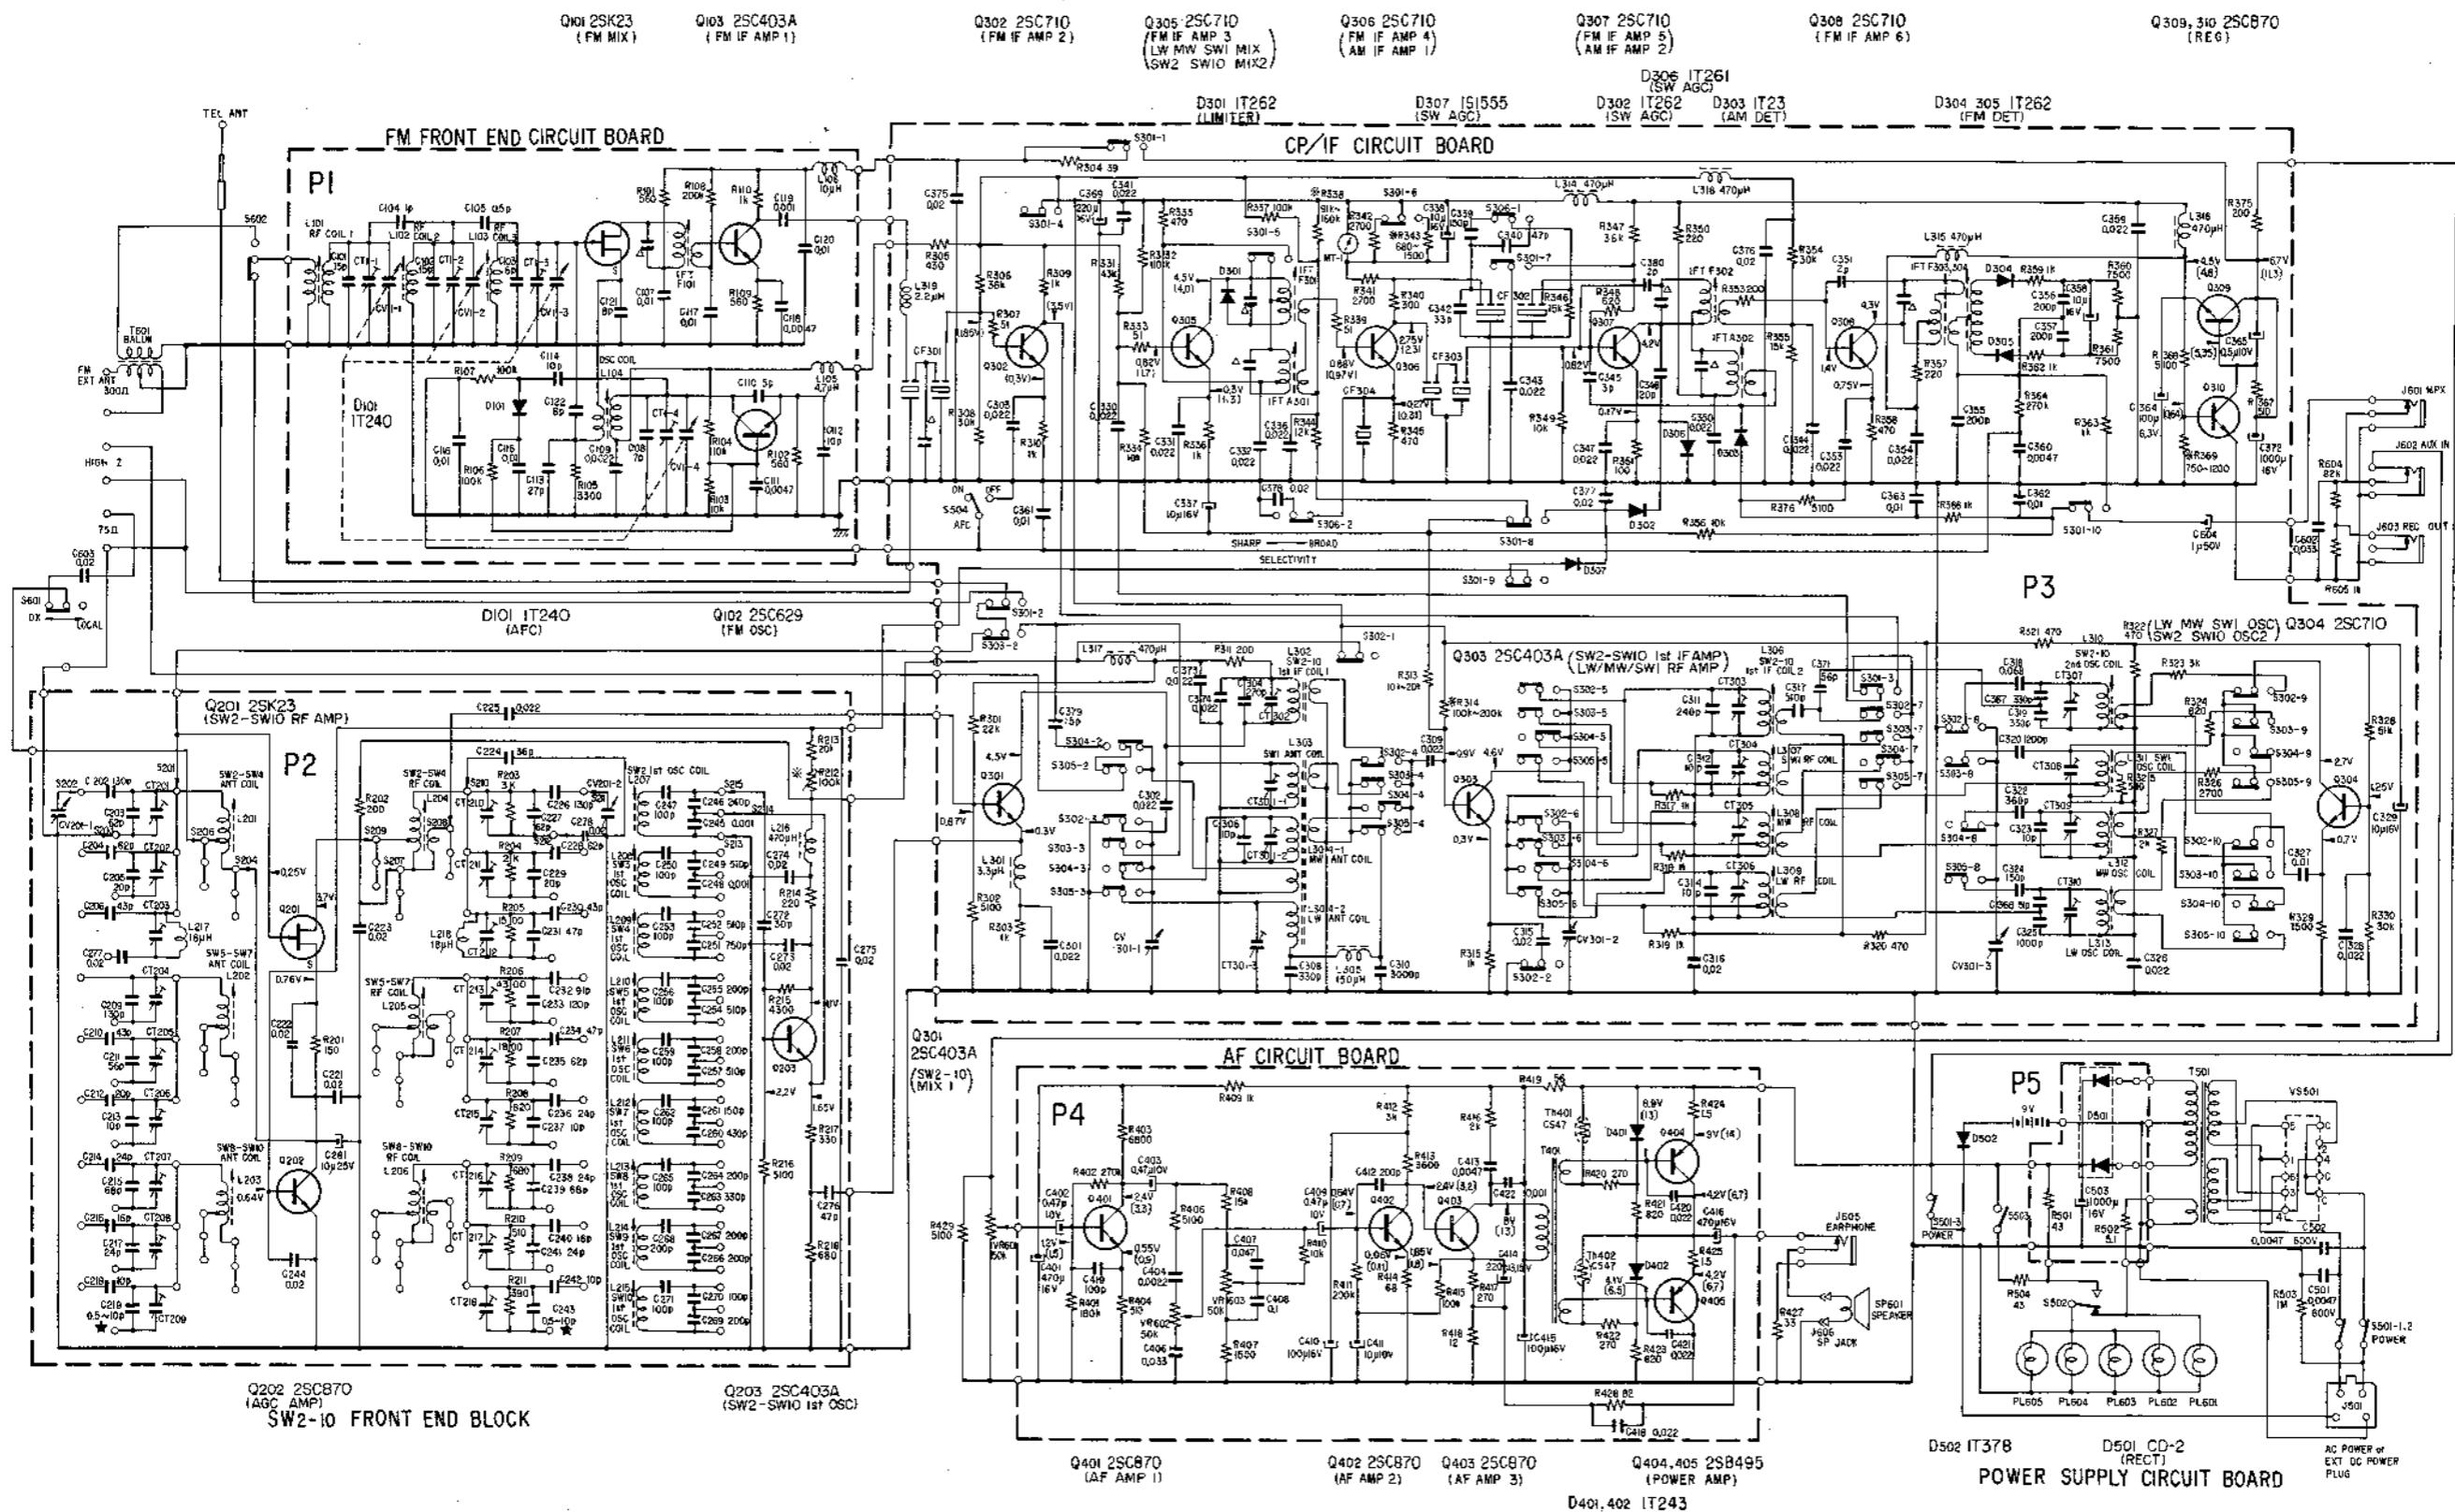

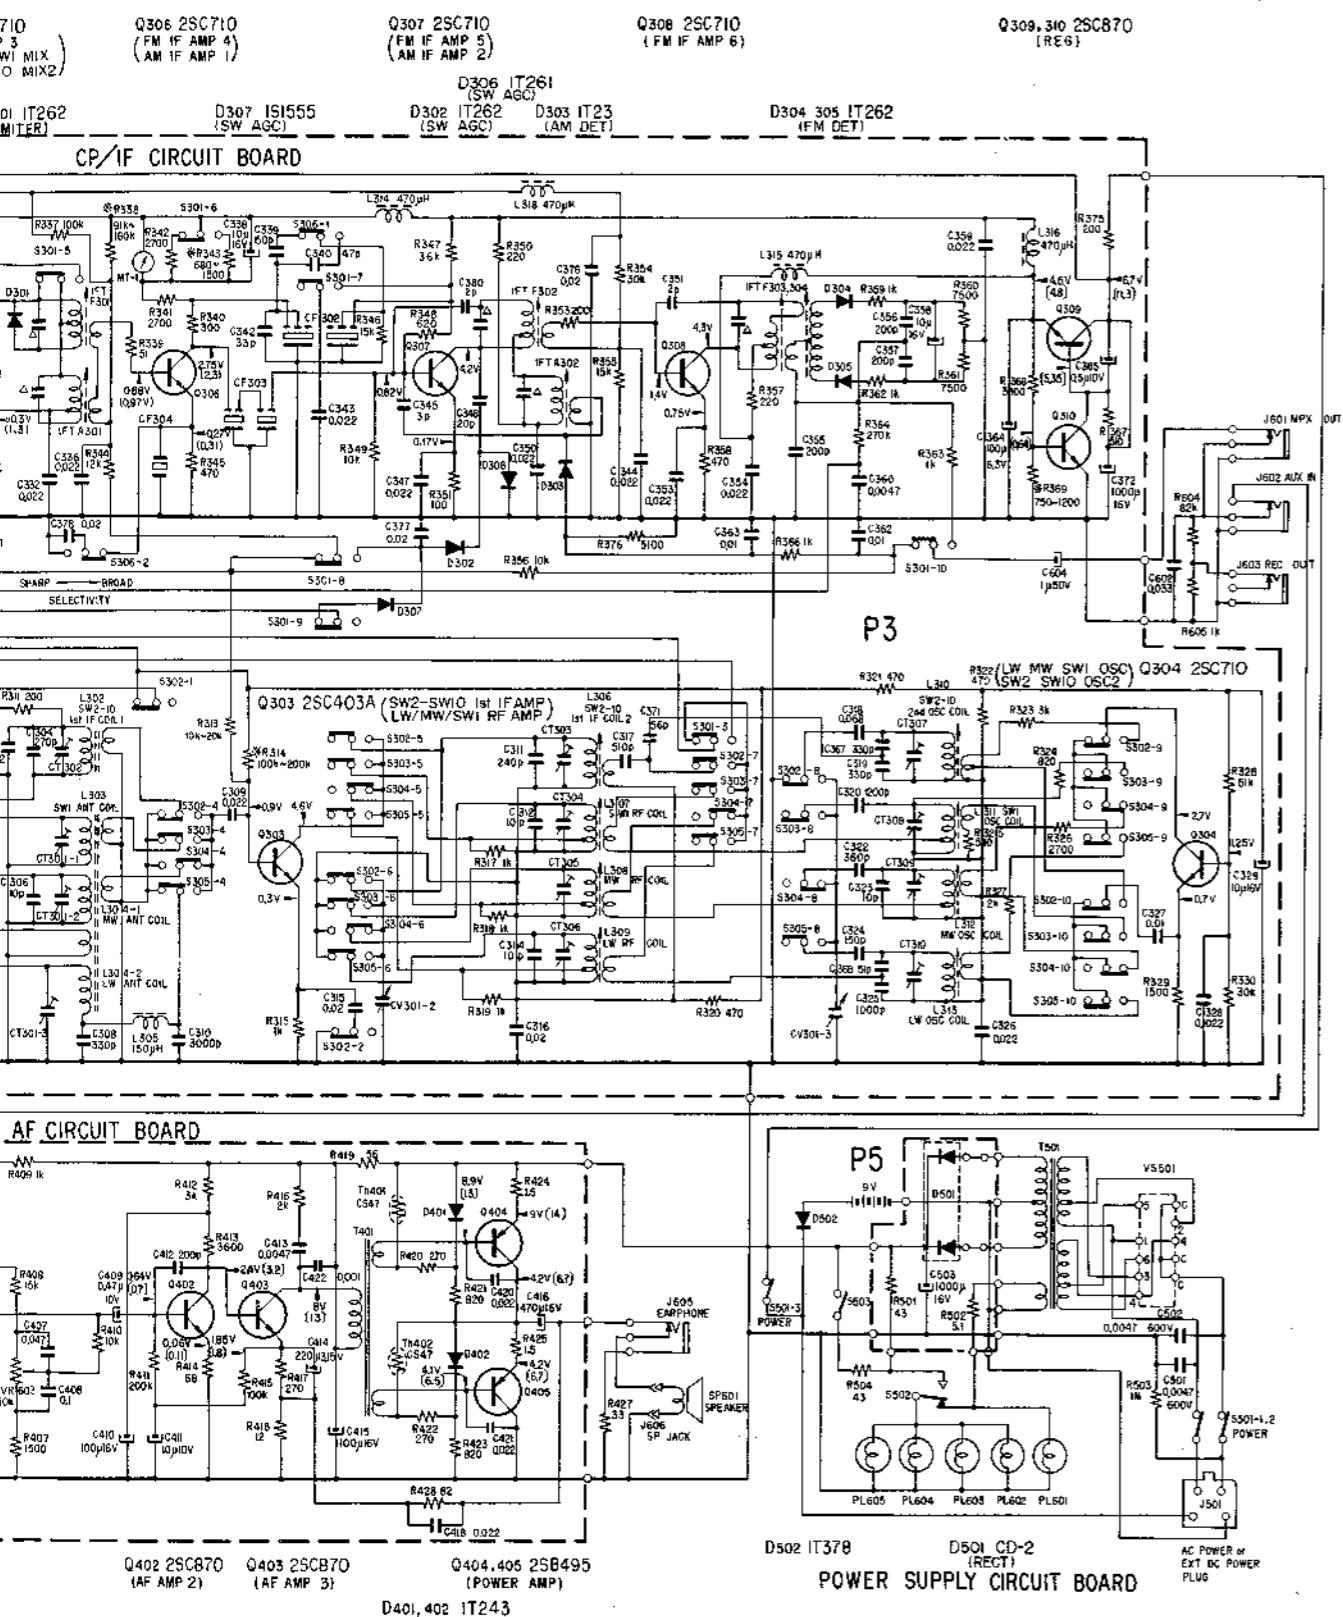ON 4
OUNTING DIAGRAMS

Note:

1. shows grounding to the chassis.
2. All resistors and capacitors are in Ω and μF , unless otherwise indicated.
3. Capacitors marked Δ are built in i-f transformers.
4. Capacitors marked \star are added for the unit that the best tracking point is out of the adjustable range.
5. The symbol * indicates a component whose value is selected to yield normal operating condition.
6. Voltage values are measured from point indicated to ground circuit with a dc voltmeter ($20\text{k}\Omega/\text{V}$) and current values are measured with a dc ammeter. Voltage and current values are taken with no radio signal received.
7. The values shown in () are taken with fm reception and in [] with ac power input.
8. Variations may be noted due to normal production tolerances.

Switch Functions

| Ref. No. | Description | Mode |
|----------|-------------------------|-------|
| S201-215 | Band Selector, SW2-SW10 | SW2 |
| S301 | Band Selector, FM | OFF |
| S302 | Band Selector, SW2-SW10 | OFF |
| S303 | Band Selector, SW1 | OFF |
| S304 | Band Selector, MW | ON |
| S305 | Band Selector, LW | OFF |
| S306 | SELECTIVITY BROAD-SHARP | BROAD |
| S501 | Power ON-OFF | ON |
| S502 | Pilot Lamp | ON |
| S503 | EXT DC Power | OFF |
| S504 | AFC ON-OFF | ON |
| S601 | SENSITIVITY DX-LOCAL | DX |

| | | | | |
|-----------|--|-------|--|-------|
| S301-S305 | | OFF | | ON |
| S306 | | SHARP | | BROAD |
| S601 | | DX | | LOCAL |

When ordering replacement parts, you should use PART NUMBER listed on the Complete Spare Parts List attached herewith. The symbol number should not be used for ordering purposes.

Hardware Nomenclature


| | | |
|----|-----------------------------------------|--|
| P | Pan Head Screw | |
| PS | Pan Head Screw with Spring Washer | |
| K | Flat Countersunk Head Screw ... | |
| B | Binding Head Screw | |
| RK | Oval Countersunk Head Screw ... | |
| T | Truss Head Screw | |
| R | Round Head Screw | |
| F | Flat Fillister Head Screw | |
| SC | Set Screw | |
| E | Retaining Ring (E Washer) | |
| W | Washer | |
| SW | Spring Washer | |
| LW | Lock Washer | |
| N | Nut | |

Example


+ P 3x10 Length in mm (L)
 Diameter in mm (D)
 Type of Head

4-2. FM TUNER CIRCUIT BOARD (P1)


— Conductor Side —

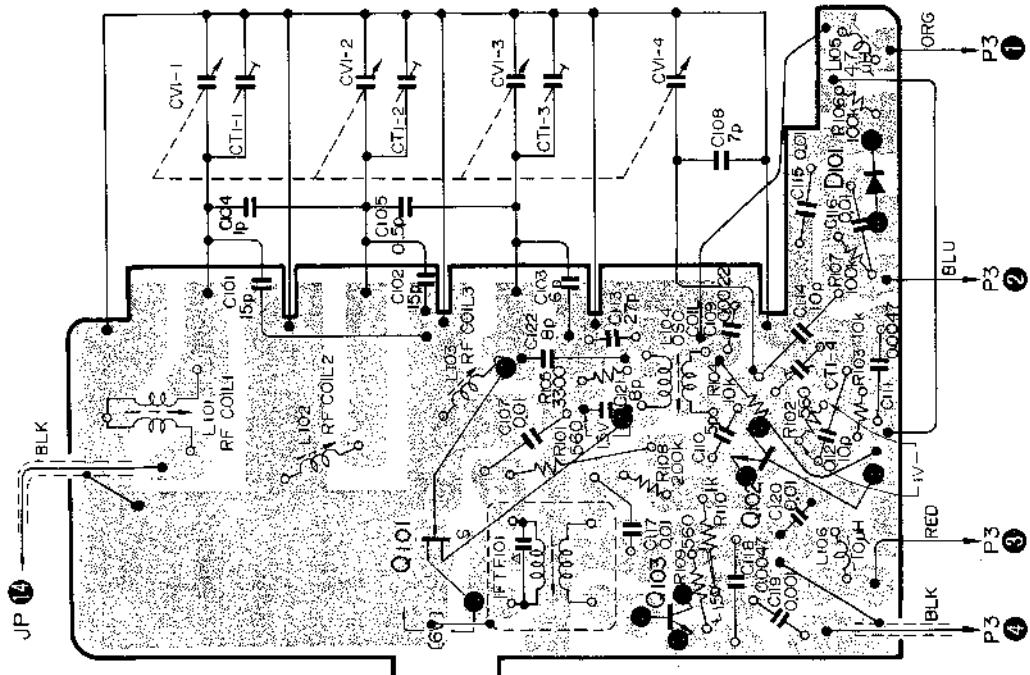

— Component Side —

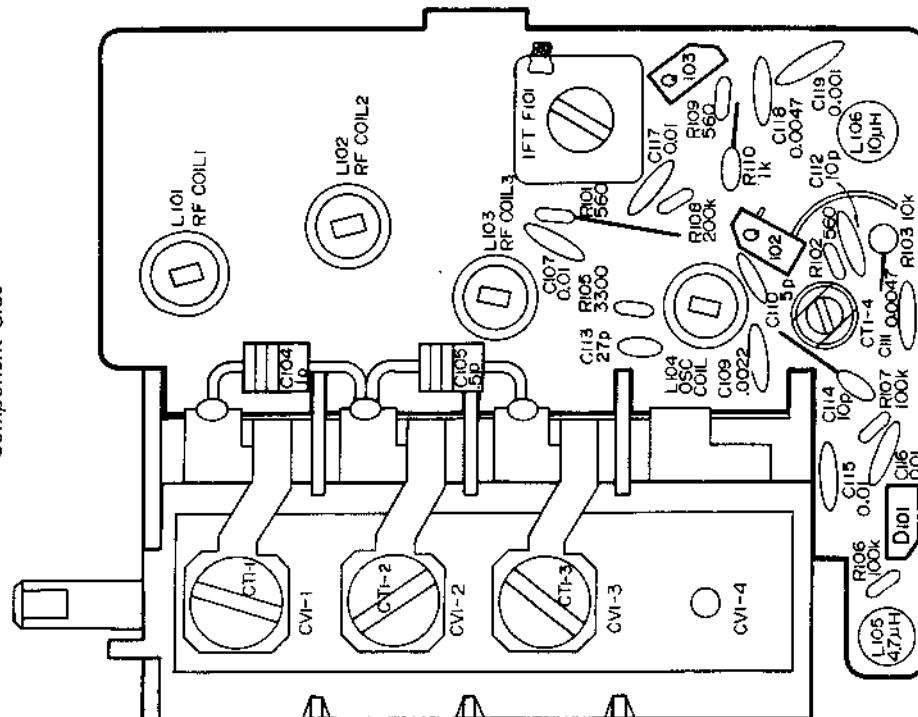


Note: 1. The following parts are mounted on the conductor side: C101,
C102, C103, C108, C120, C121, C122, R104 and Q101.
2. Printed circuit board: Part No. 1-538-793-12

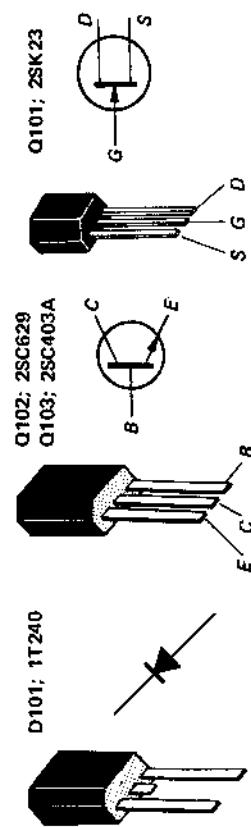


4-3. SW2 – SW10 FRONT END (p2)

- Conductor Side -

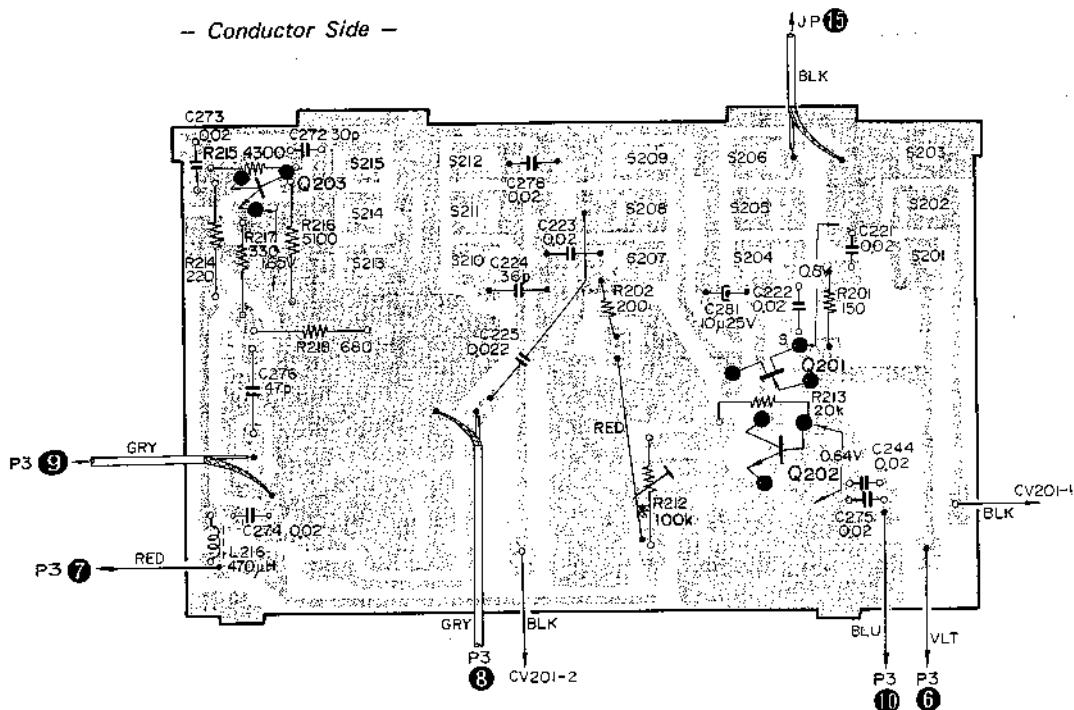


— Component Side —

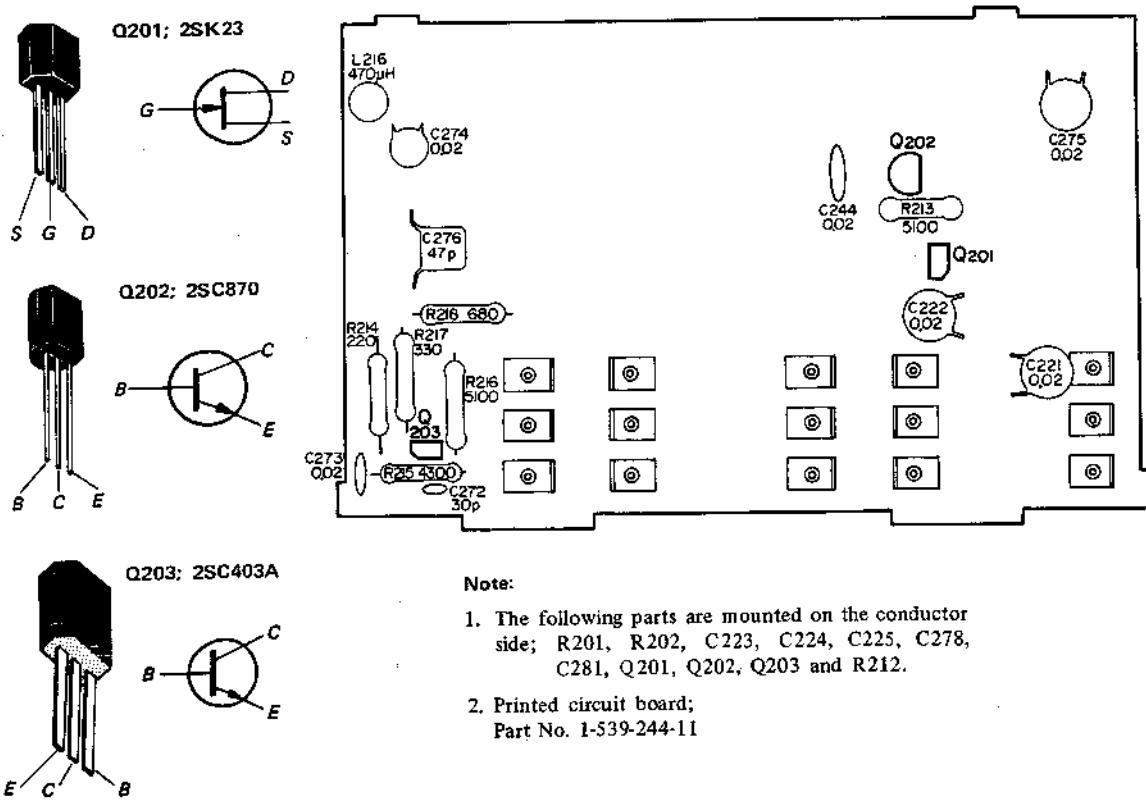


Note:

1. The following parts are mounted on the conductor side; R201, R202, C223, C224, C225, C278, C281, Q201, Q202, Q203 and R212.
 2. Printed circuit board;
Part No. 1-539-244-11

C202, C204, C206, C210, C212
C214, C216, C218;
mounted on the conductor side.

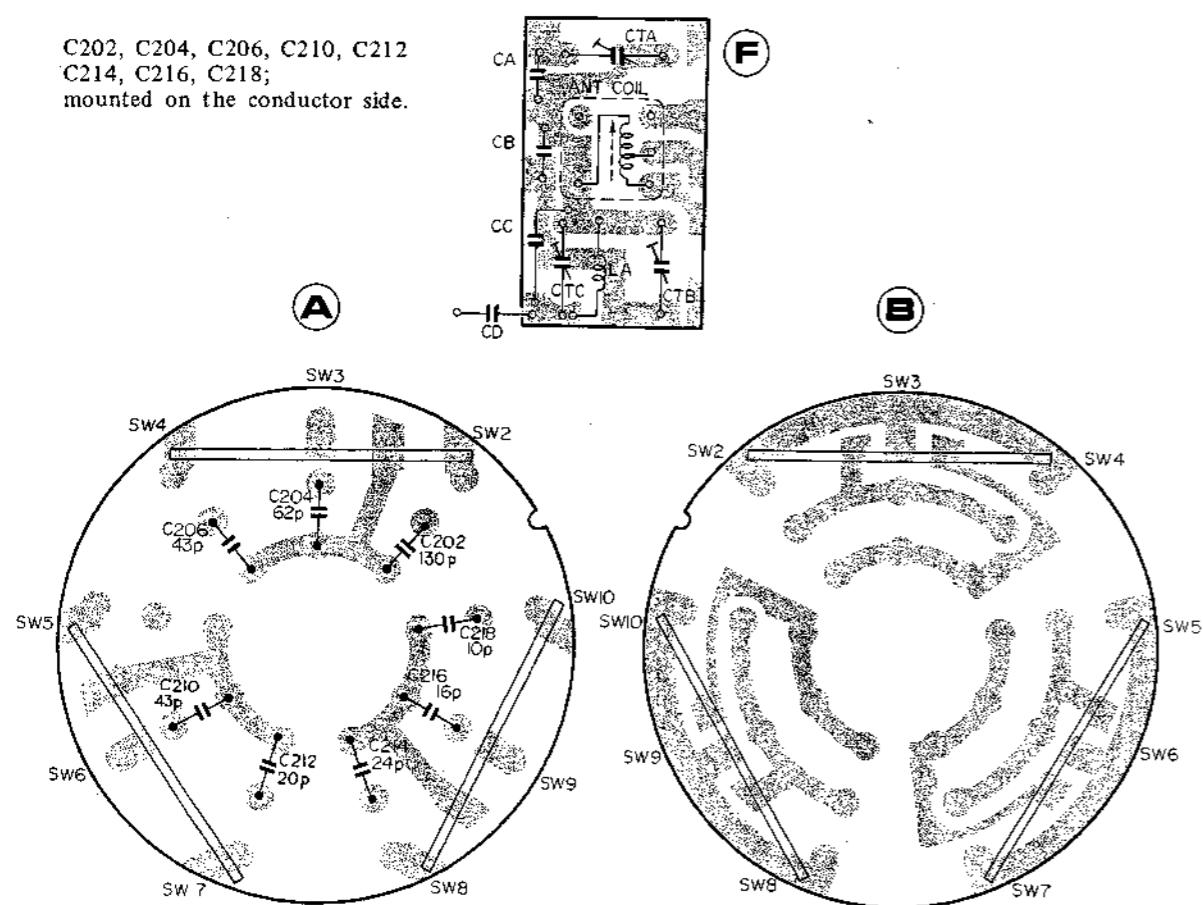

C226, C228, C230, C232, C234,
C236, C238, C240, C242;
mounted on the conductor side.

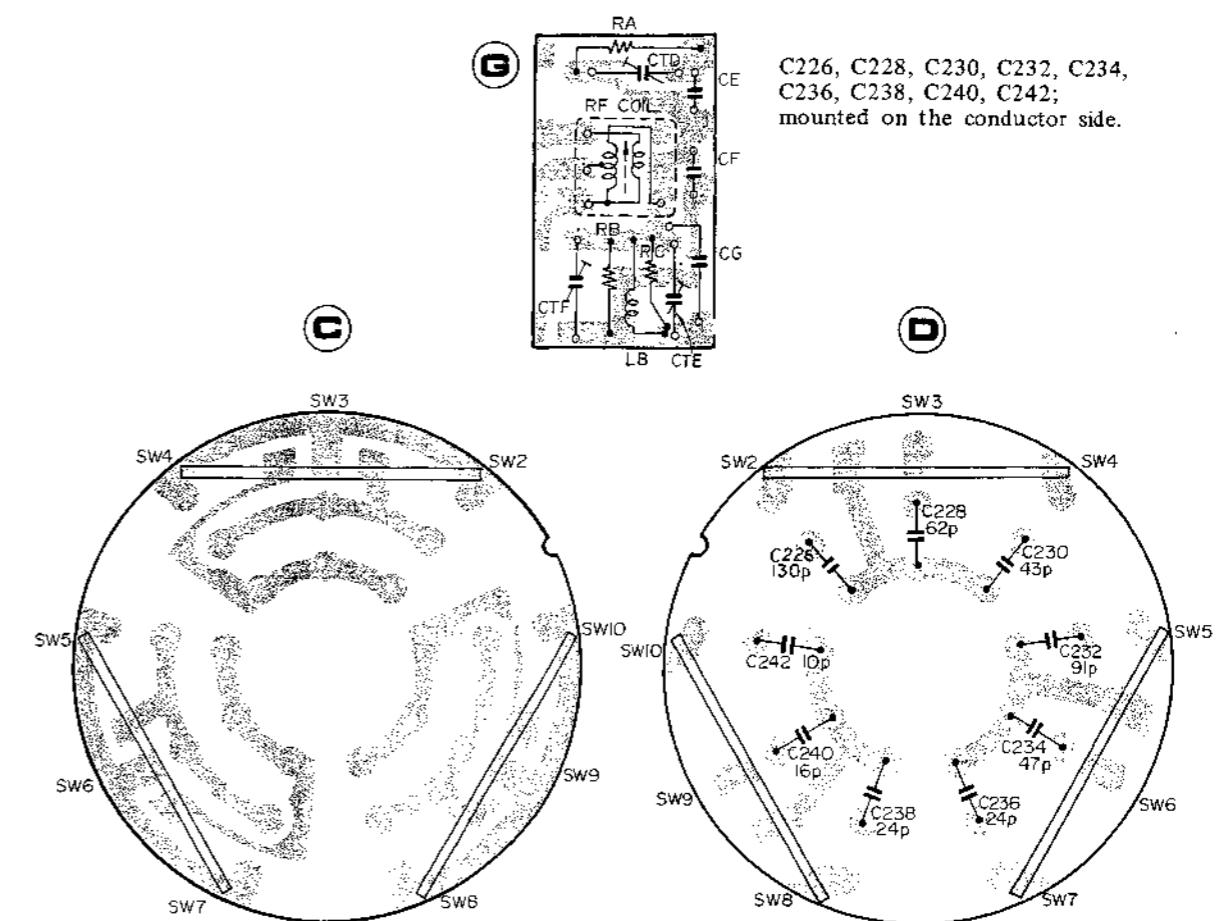


Parts Description on Circuit Board (F)

| BAND | ANT COIL | CAPACITOR | | | TRIMMER CAPACITOR | | | CD | LA |
|----------|----------|-----------|-------|-----------|-------------------|-------|-------|------|-------------|
| | | CA | CB | CC | CTA | CTB | CTC | | |
| SW2~SW4 | L201 | C203 | C205 | | CT201 | CT202 | CT203 | C277 | L217 |
| | | 62pF | 20pF | | | | | | 0.02μH 18μH |
| | | | | | | | | | |
| SW5~SW7 | L202 | C209 | C211 | C213 | CT204 | CT205 | CT206 | | |
| | | 130 pF | 56 pF | 10 pF | | | | | |
| SW8~SW10 | L203 | C215 | C217 | C219 | CT207 | CT208 | CT209 | | |
| | | 68 pF | 24 pF | 0.5~10 pF | | | | | |

Parts Description on Circuit Board (G)

| BAND | RF COIL | CAPACITOR | | | RESISTOR | | | TRIMMER CAPACITOR | | | LB |
|----------|---------|-----------|------|----------|----------|-------|-------|-------------------|--------|--------|-----------|
| | | CE | CF | CG | RA | RB | RC | CTD | CTE | CTF | |
| SW2~SW4 | L204 | C227 | C229 | C231 | R203 | R204 | R205 | CT 210 | CT 211 | CT 212 | L218 18μH |
| | | 62pF | 20pF | 47pF | 3k | 2k | 1,500 | | | | |
| SW5~SW7 | L205 | C233 | C235 | C237 | R206 | R207 | R208 | CT 213 | CT 214 | CT 215 | |
| | | 120pF | 62pF | 10pF | 4,300 | 1,800 | 820 | | | | |
| SW8~SW10 | L206 | C239 | C241 | C243 | R209 | R210 | R211 | CT 216 | CT 217 | CT 218 | |
| | | 68pF | 24pF | 0.5~10pF | 680 | 510 | 390 | | | | |


RA, RB, RC, LB; mounted on the conductor side.

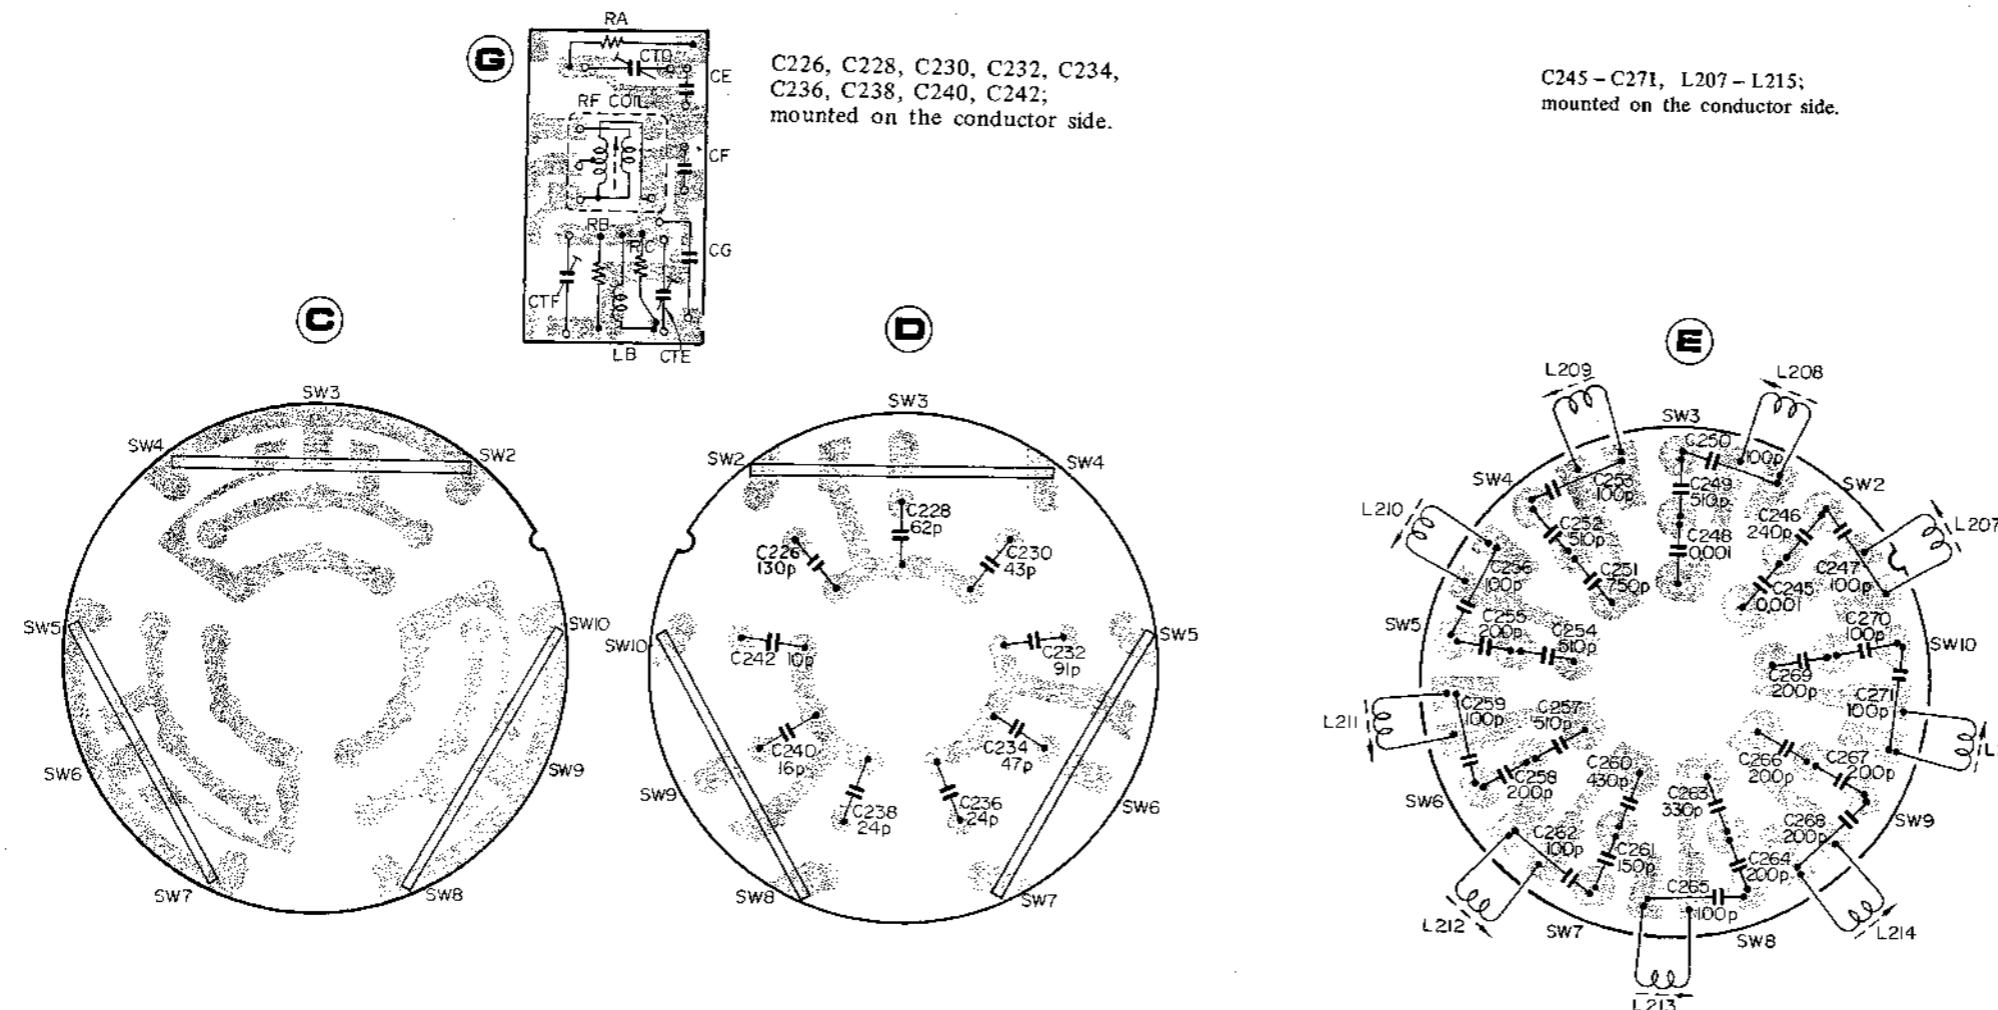

Parts Description on Circuit Board



| BAND | RF COIL | CAPACITOR | | | RESISTOR | | | TRIMMER CAPACITOR | | | L1 100 |
|--------------|---------|-----------|------|--------------|----------|-------|-------|-------------------|-----------|-----------|-----------|
| | | CE | CF | CG | RA | RB | RC | CTD | CTE | CTF | |
| SW2– SW4 | L204 | C227 | C229 | C231 | R203 | R204 | R205 | CT 210 | CT 211 | CT 212 | L2 180 |
| | | 62pF | 20pF | 47pF | 3k | 2 k | 1,500 | | | | |
| SW5– SW7 | L205 | C233 | C235 | C237 | R206 | R207 | R208 | CT 213 | CT 214 | CT 215 | L3 180 |
| | | 120pF | 62pF | 10pF | 4,300 | 1,800 | 820 | | | | |
| SW8– SW10 | L206 | C239 | C241 | C243 | R209 | R210 | R211 | CT 216 | CT 217 | CT 218 | L4 180 |
| | | 68pF | 24pF | 0.5– 10pF | 680 | 510 | 390 | | | | |

RA, RB, RC, LB; mounted on the conductor s

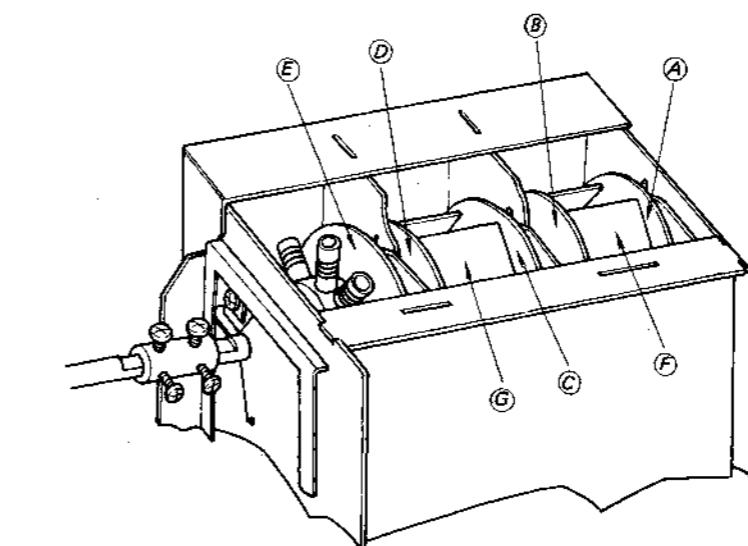

4-4. CP/IF CIRCUIT BOARD (P3)





- Conductor Side -

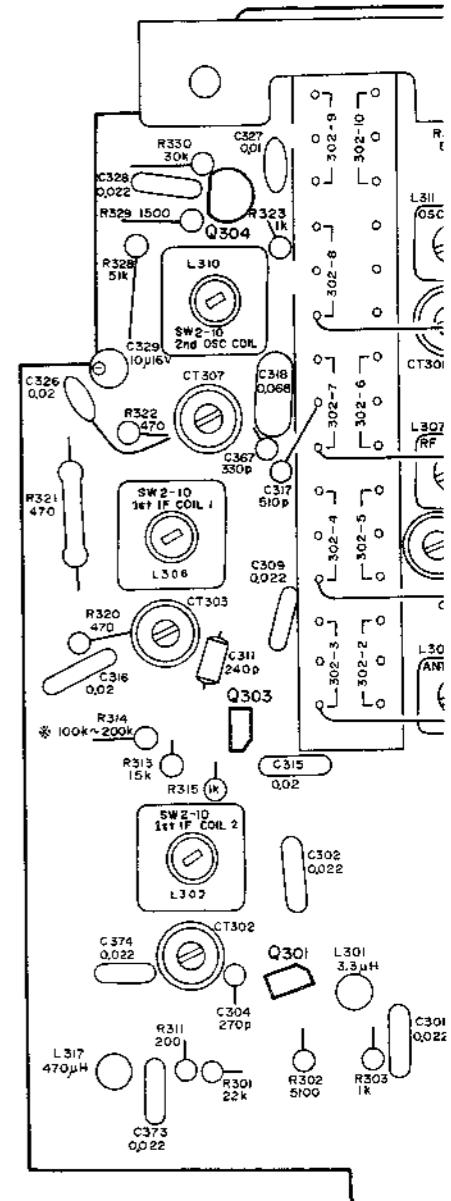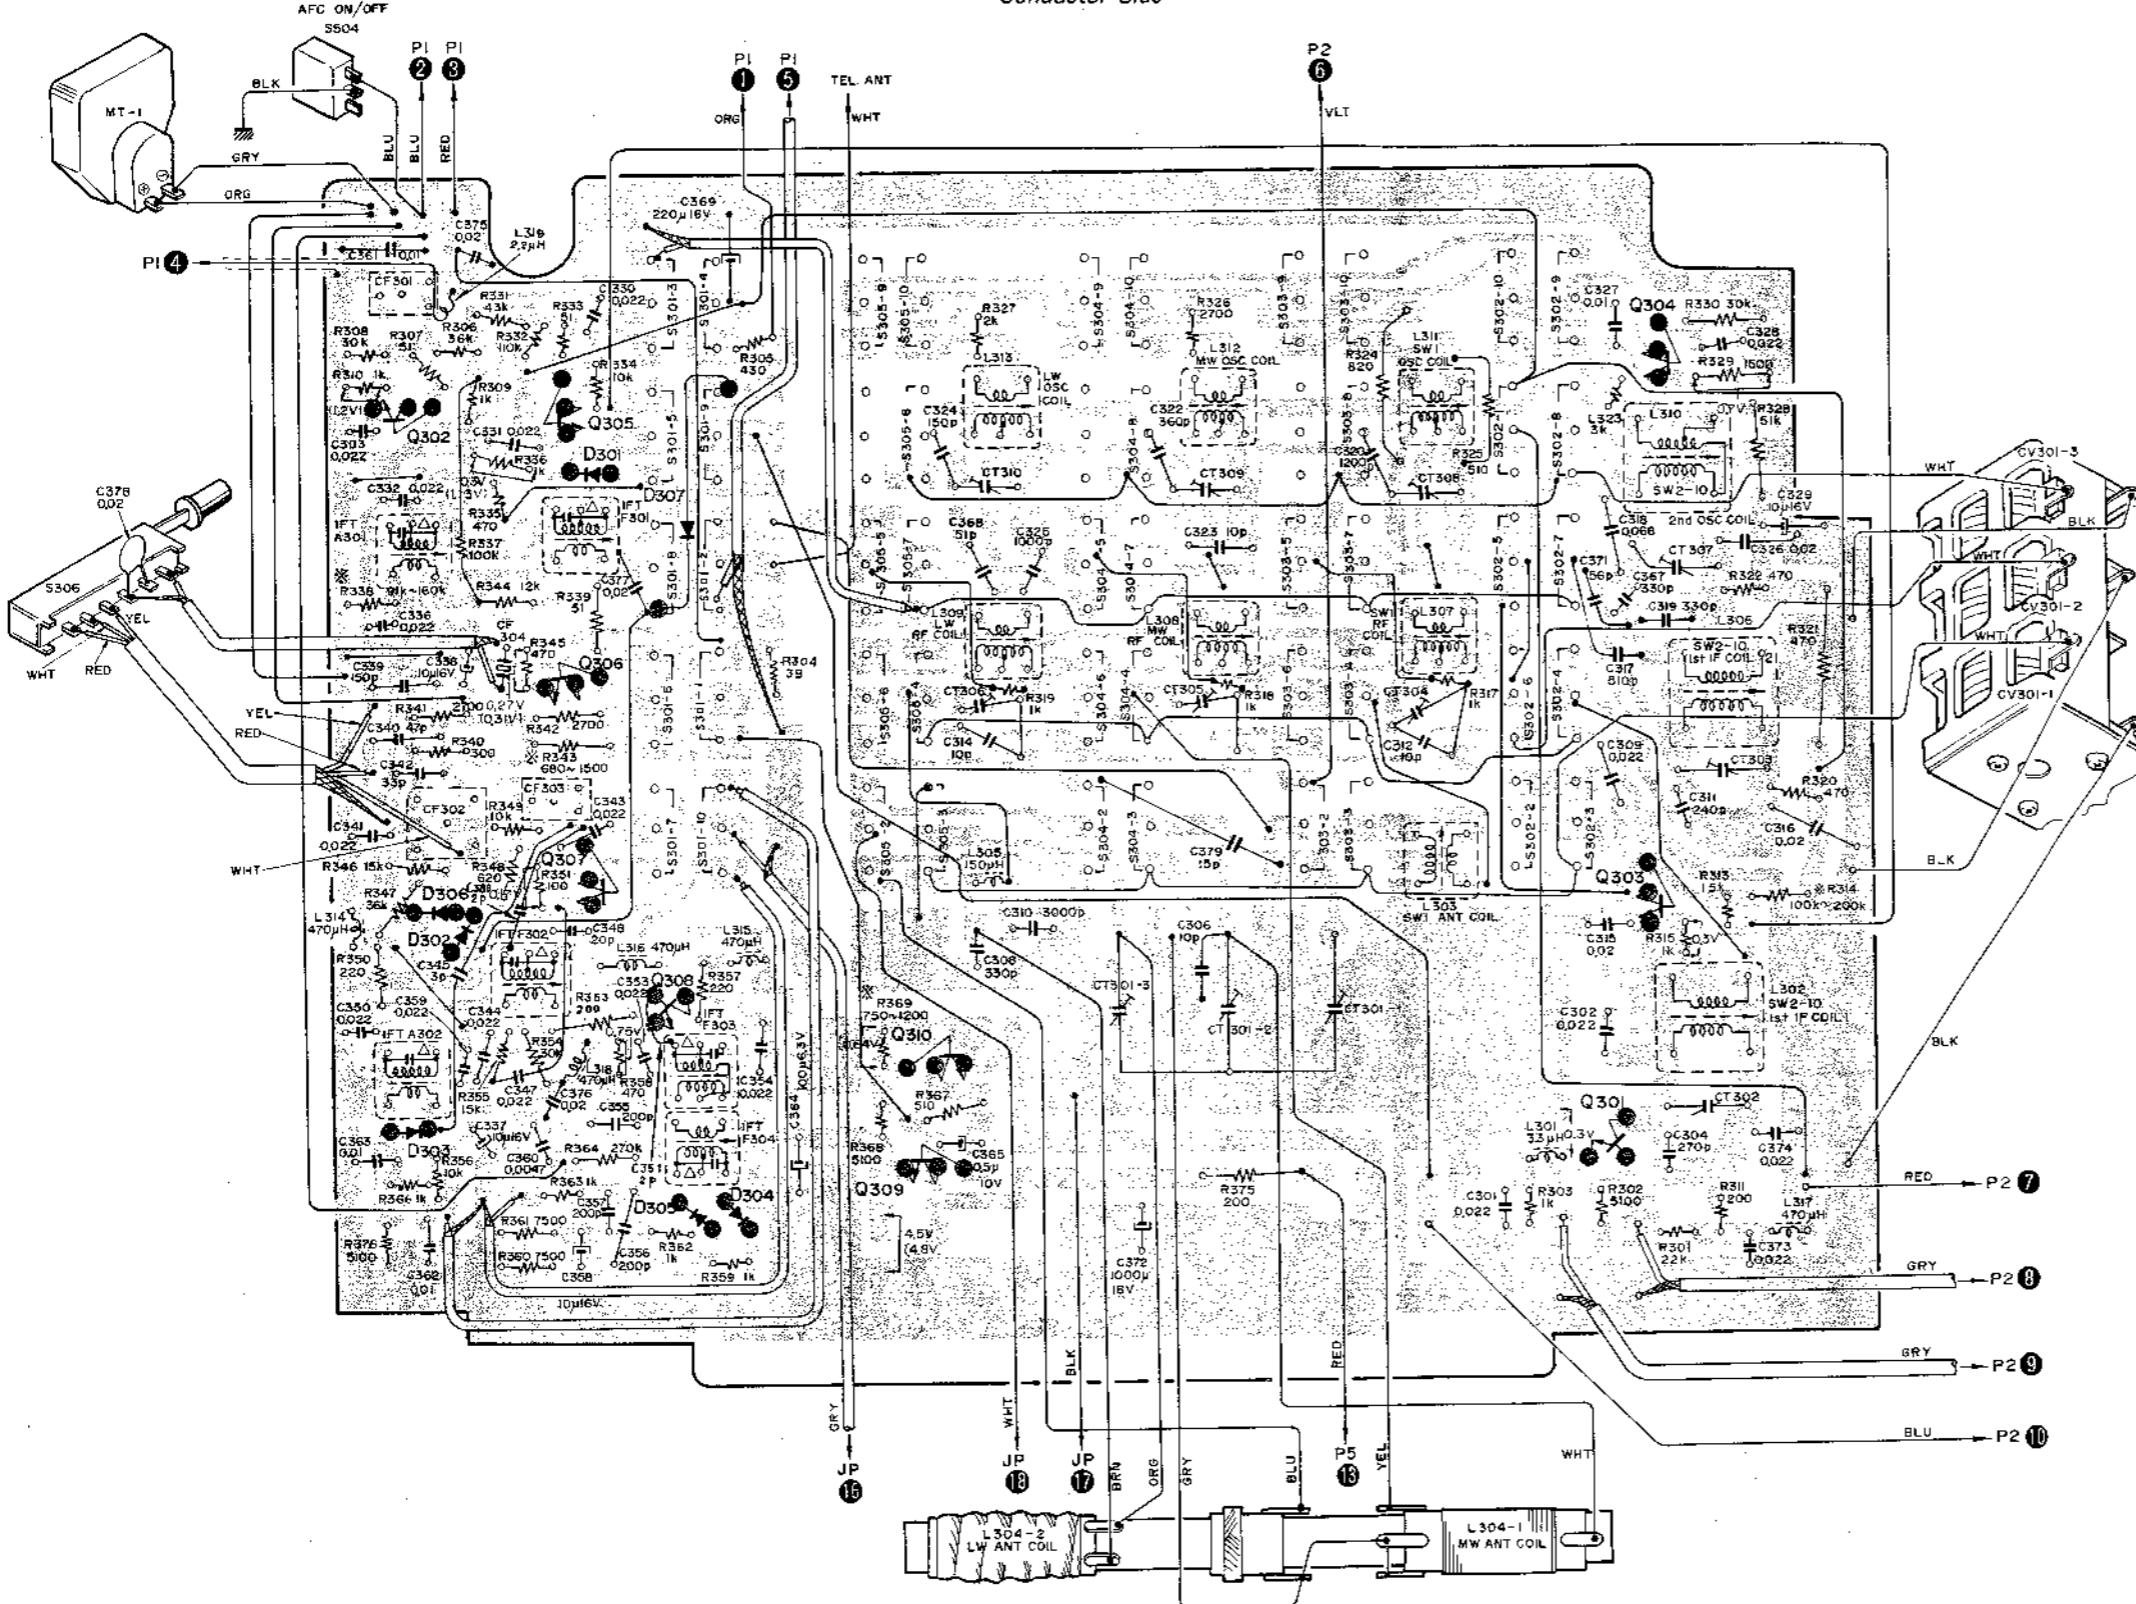

Note:


1. The following parts are mounted on R317, R318, R319, R325, R337, C347, C361, C369, C371, C376, C377.
2. Printed circuit board; Part No. 1-539-1

— Component Side —

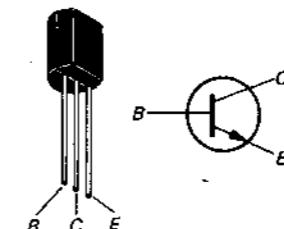
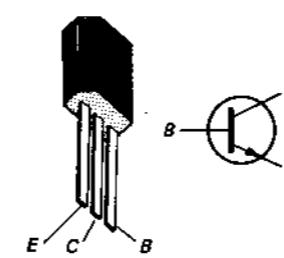
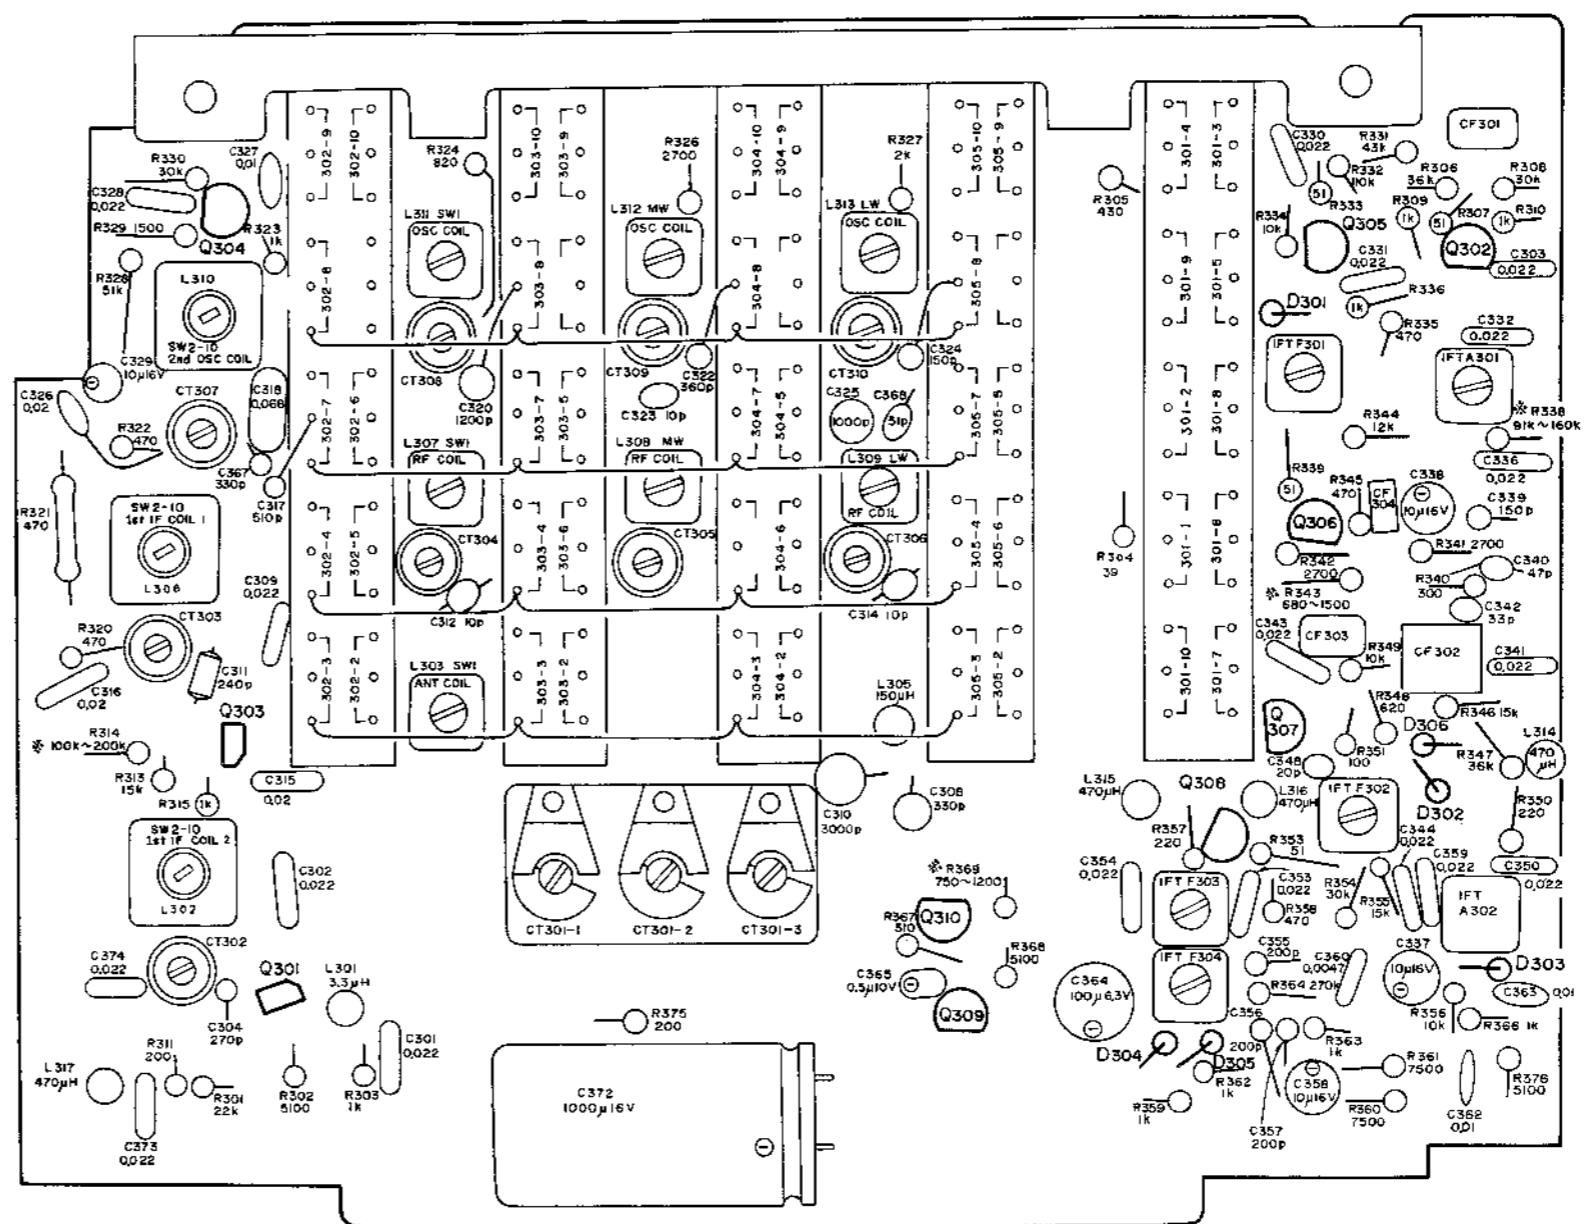
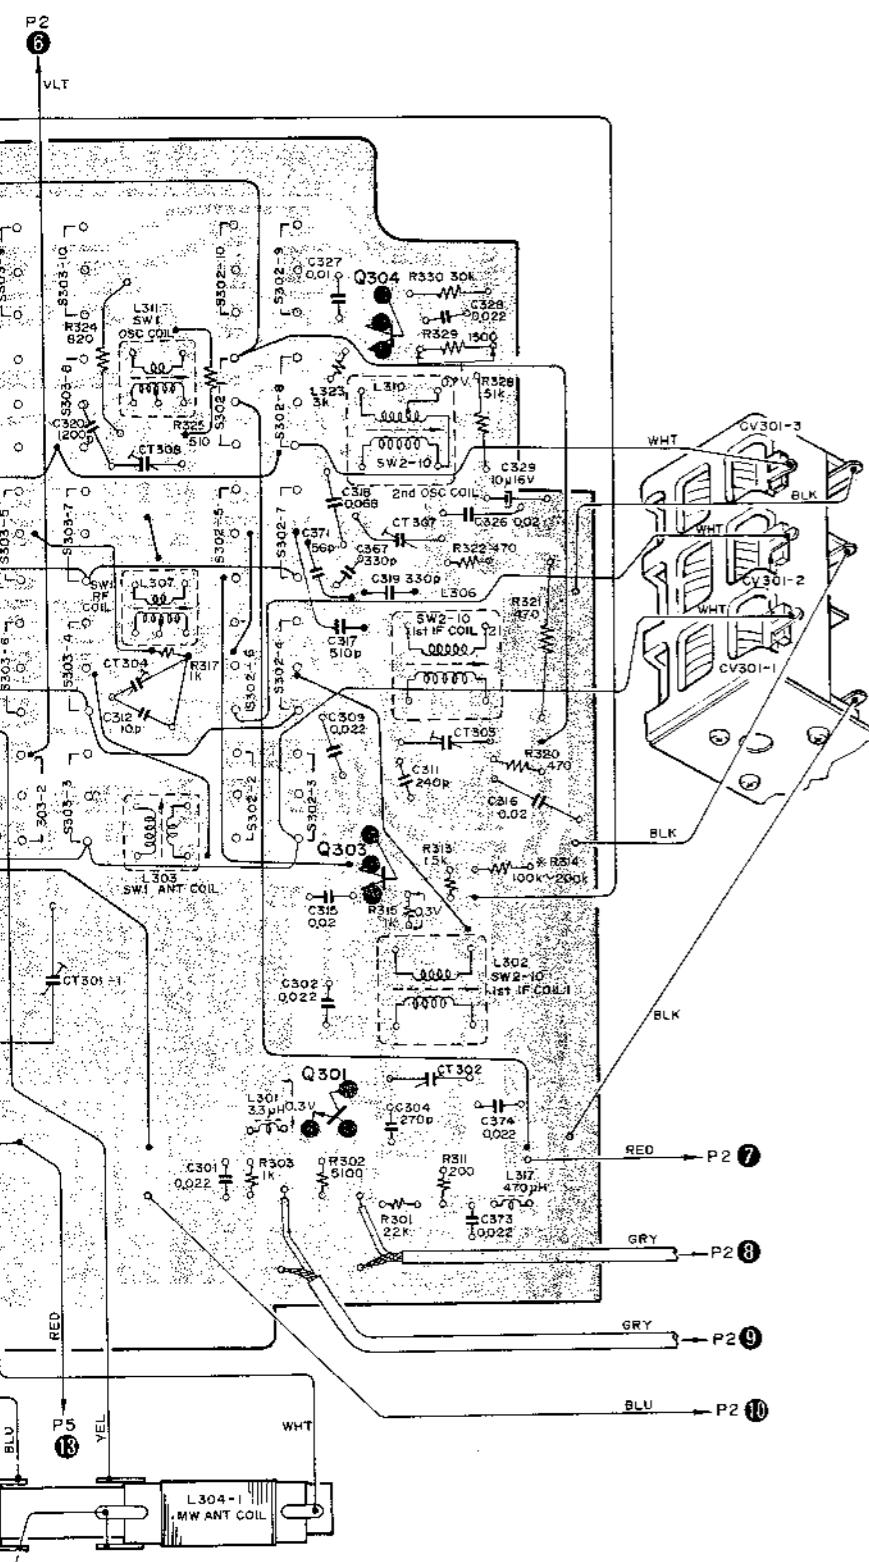


4-5. AF CIRCUIT BOARD

— Conductor Side —

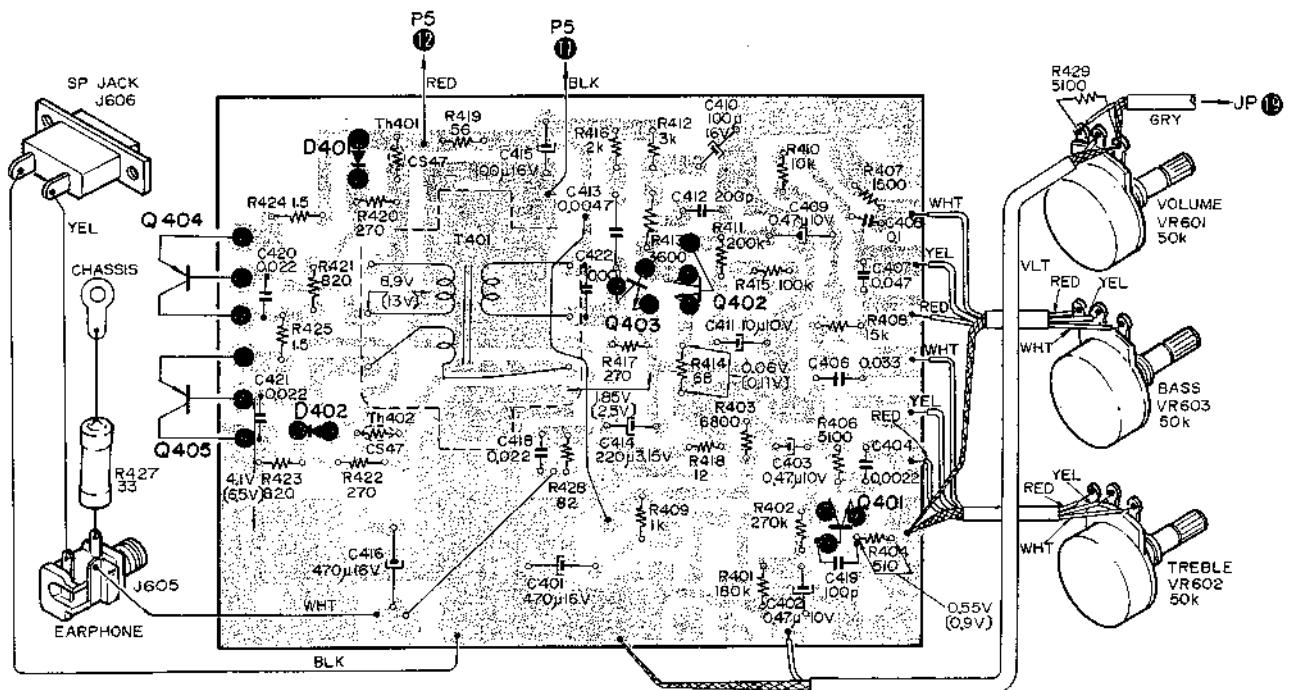

— Component Side —

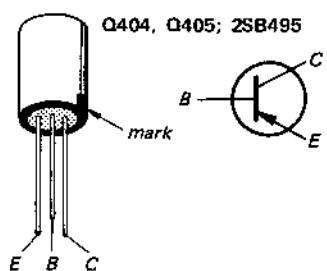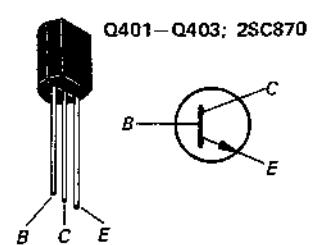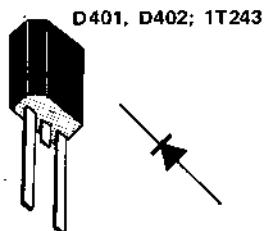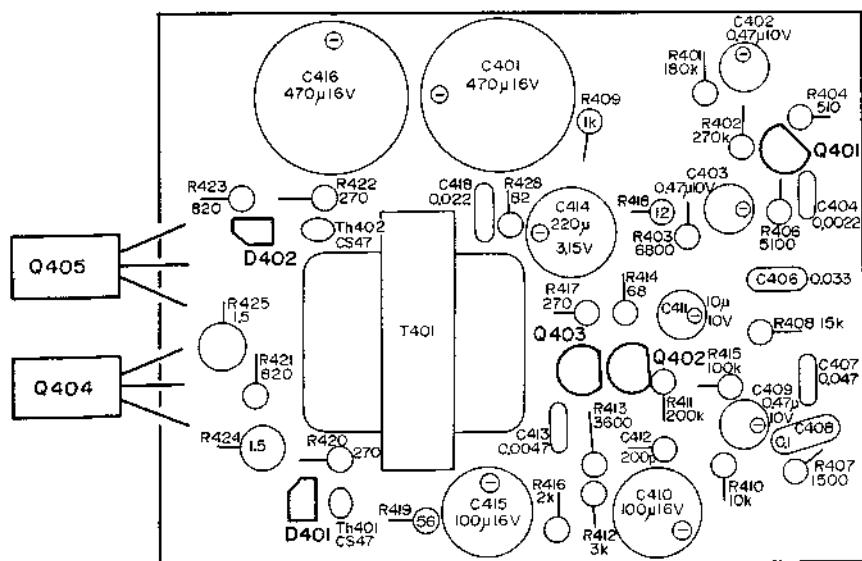
**Note:**

1. The following parts are mounted on the conductor side; C419, C420, C421, C422.
2. Printed circuit board; Part No. 1-539-253-11


CRF-150

4-6. POWER SUPPLY CIRCUIT BOARD

— Conductor Side —

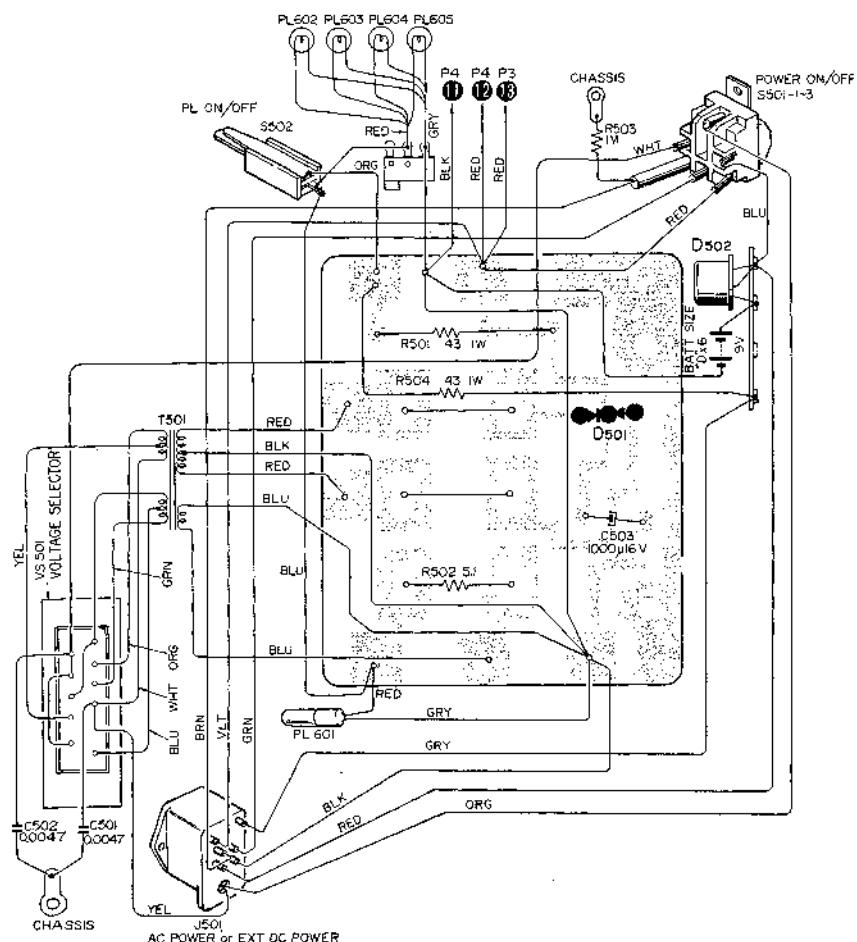


— Component Side —

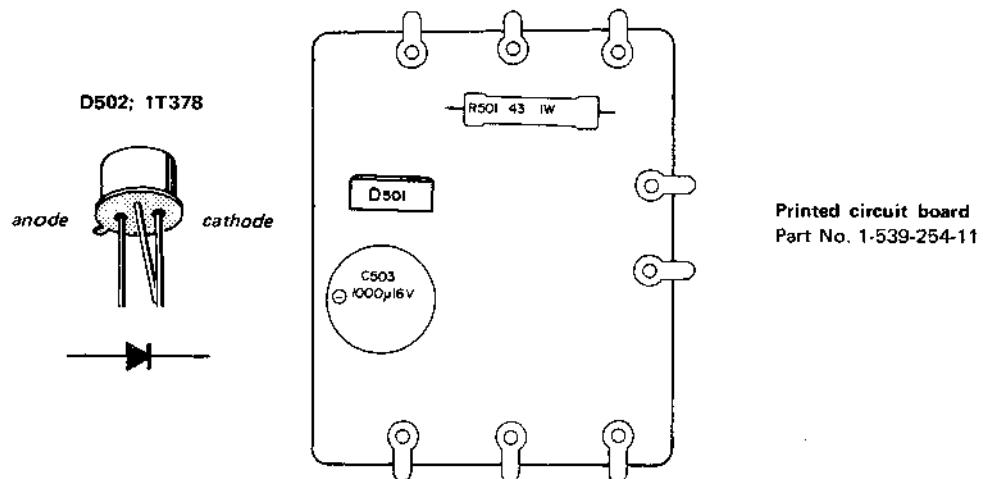


4-7. JACK PANEL

— Conductor Side —

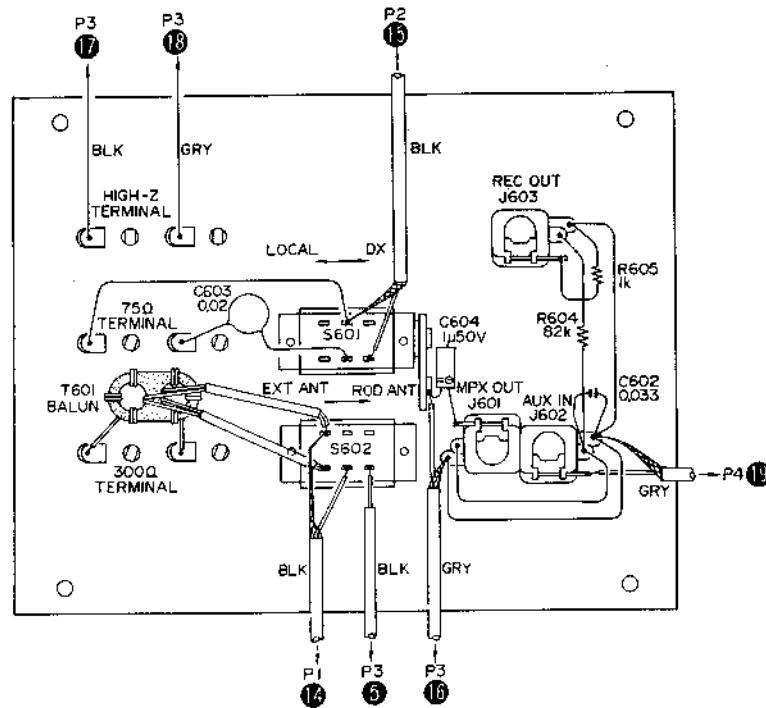

— Component Side —

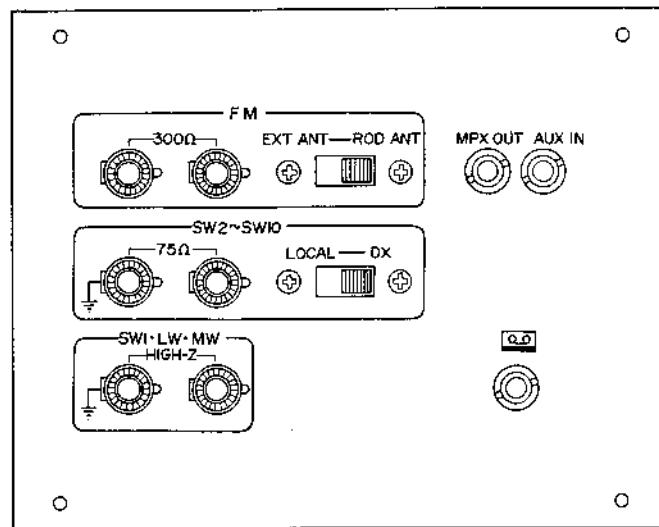


CRF-150

MEMO

CRF-150 CRF-150

4-8. WIRING DIAGRAM

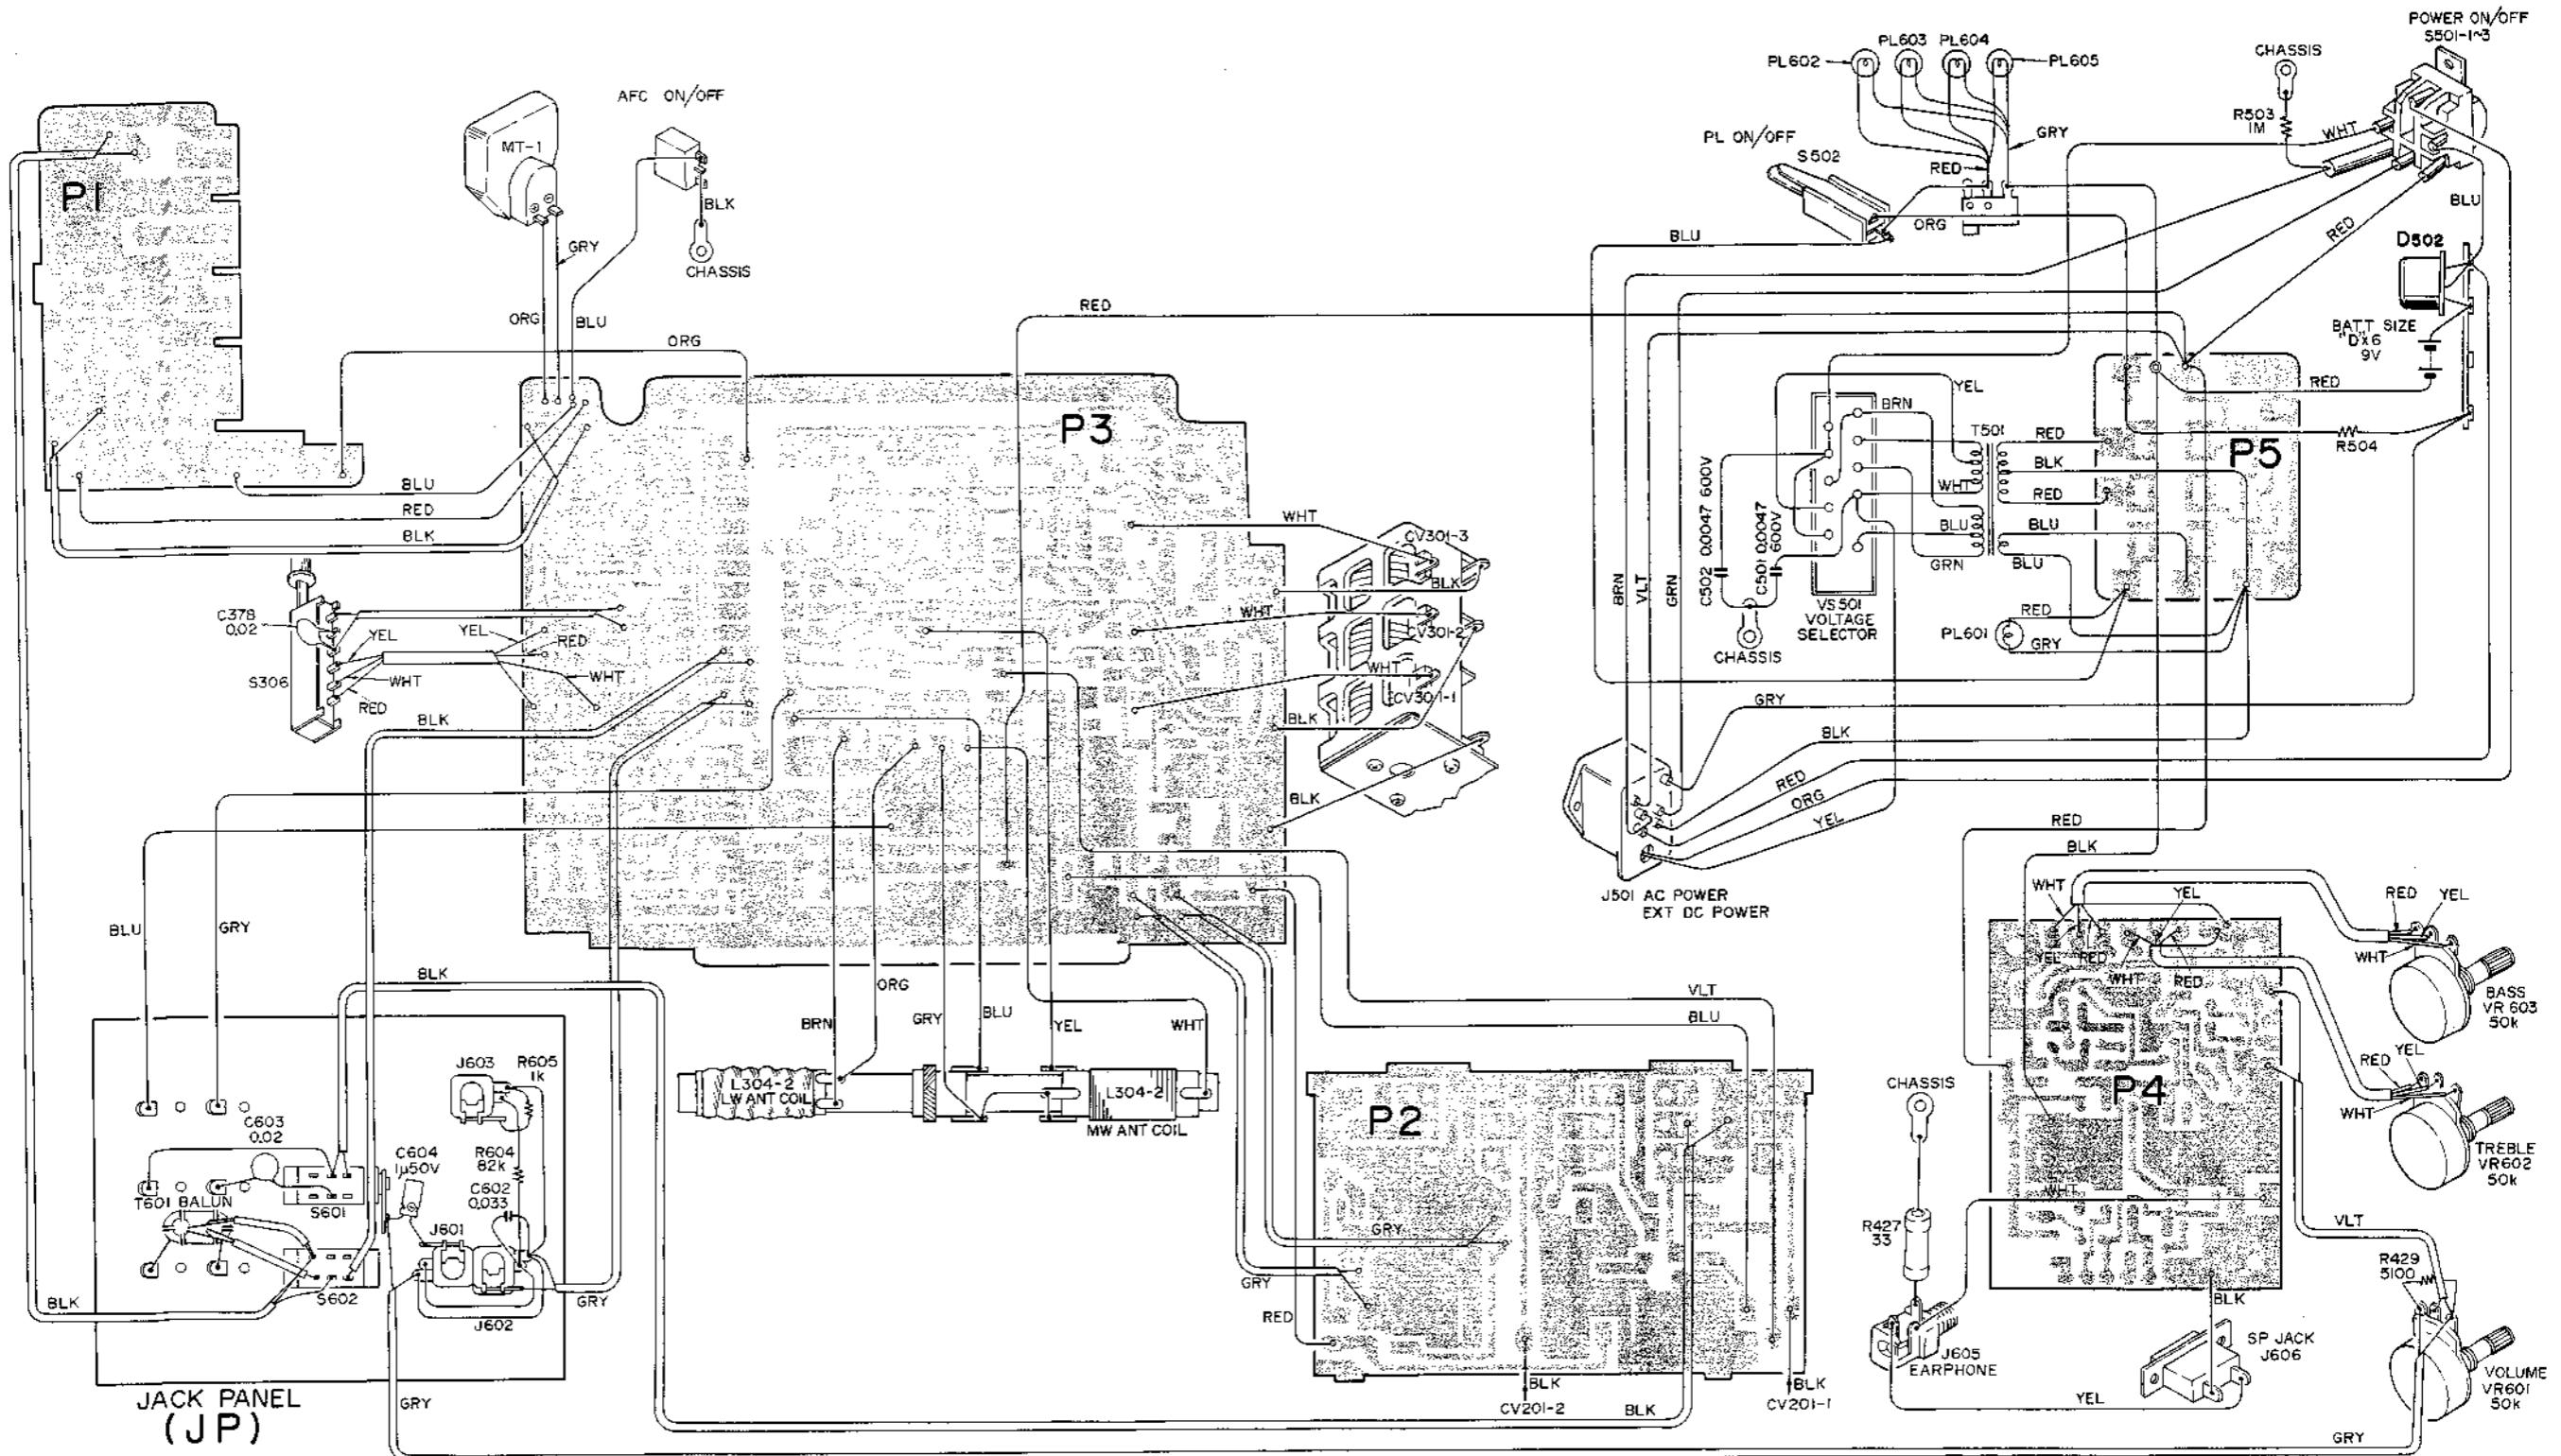

CRF-150 CRF-150

SECTION 5 ELECTRICAL PARTS LIST

| <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> | <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> | <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> | <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> | |
|--------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|------------------------|-----------------|-----------------|------------------------------------|-----------------|-----------------|----------------------------|-----------------|-----------------|--------------------|------------------------|
| SEMICONDUCTORS | | | | | | | | | | | | |
| Q101 | | transistor (FET) 2SK23 | L212 | 1-405-424- | 1st osc coil, SW7 | C113 | 1-101-869- | 27 pF | ceramic | C249 | 1-103-618- | 510 pF polystyrene |
| Q102 | | transistor 2SC629 | L213 | 1-405-425- | 1st osc coil, SW8 | C114 | 1-101-976- | 10 pF | ceramic | C250 | 1-103-601- | 100 pF polystyrene |
| Q103 | | transistor 2SC403A | L214 | 1-405-426- | 1st osc coil, SW9 | C115 | 1-101-072- | 0.01 μF | ceramic | C251 | 1-103-622- | 750 pF polystyrene |
| Q201 | | transistor (FET) 2SK23 | L215 | 1-405-427- | 1st osc coil, SW10 | C116 | 1-101-072- | 0.01 μF | ceramic | C252 | 1-103-618- | 510 pF polystyrene |
| Q202 | | transistor 2SC870 | L216 | 1-407-177- | micro inductor 470 μH | C117 | 1-101-072- | 0.01 μF | ceramic | C253 | 1-103-601- | 100 pF polystyrene |
| Q203 | | transistor 2SC403A | L217 | 1-407-160- | micro inductor 18 μH | C118 | 1-105-829-12 | 0.0047 μF | mylar | C254 | 1-103-618- | 510 pF polystyrene |
| Q301 | | transistor 2SC403A | L218 | 1-407-160- | micro inductor 18 μH | C119 | 1-101-918- | 0.001 μF | ceramic | C255 | 1-103-608- | 200 pF polystyrene |
| Q302 | 1-801-003- | transistor 2SC710 | L301 | 1-407-184- | micro inductor 3.3 μH | C120 | 1-101-072- | 0.01 μF | ceramic | C256 | 1-103-601- | 100 pF polystyrene |
| Q303 | | transistor 2SC403A | L302 | 1-425-442- | coil, SW2-SW10 1st i-f | C121 | 1-101-958- | 8 pF | ceramic | C257 | 1-103-618- | 510 pF polystyrene |
| Q304 | 1-801-003- | transistor 2SC710 | L303 | 1-401-408- | antenna coil, SW1 | C122 | 1-101-958- | 8 pF | ceramic | C258 | 1-103-608- | 200 pF polystyrene |
| Q305 | 1-801-003- | transistor 2SC710 | L304 | 1-401-348-23 | antenna coil, mw/lw ferrite bar | C201 | | — discarded — | | C259 | 1-103-601- | 100 pF polystyrene |
| Q306 | 1-801-003- | transistor 2SC710 | L305 | 1-407-171- | micro inductor 150 μH | C202 | 1-107-088- | 130 pF | silvered mica | C260 | 1-103-616- | 430 pF polystyrene |
| Q307 | 1-801-003- | transistor 2SC710 | L306 | 1-425-442- | coil, SW2-SW10 1st i-f | C203 | 1-107-080- | 62 pF | silvered mica | C261 | 1-103-605- | 150 pF polystyrene |
| Q308 | 1-801-003- | transistor 2SC710 | L307 | 1-425-577- | rf coil, SW1 | C204 | 1-107-080- | 62 pF | silvered mica | C262 | 1-103-601- | 100 pF polystyrene |
| Q309 | 1-801-004- | transistor 2SC870 | L308 | 1-425-578- | rf coil, mw | C205 | 1-107-068- | 20 pF | silvered mica | C263 | 1-103-613- | 330 pF polystyrene |
| Q310 | 1-801-004- | transistor 2SC870 | L309 | 1-425-582- | rf coil, lw | C206 | 1-107-076- | 43 pF | silvered mica | C264 | 1-103-608- | 200 pF polystyrene |
| Q401 | 1-801-004- | transistor 2SC870 | L310 | 1-425-576- | 2nd osc coil, SW2-SW10 | C207 | | — discarded — | | C265 | 1-103-601- | 100 pF polystyrene |
| Q402 | 1-801-004- | transistor 2SC870 | L311 | 1-405-408- | osc coil, SW1 | C208 | 1-107-084- | — discarded — | | C266 | 1-103-608- | 200 pF polystyrene |
| Q403 | 1-801-004- | transistor 2SC870 | L312 | 1-405-409- | osc coil, mw | C209 | 1-107-088- | 130 pF | silvered mica | C267 | 1-103-608- | 200 pF polystyrene |
| Q404 | 1-801-005- | transistor 2SB495 | L313 | 1-405-410- | osc coil, lw | C210 | 1-107-076- | 43 pF | silvered mica | C268 | 1-103-608- | 200 pF polystyrene |
| Q405 | 1-801-005- | transistor 2SB495 | L314 | 1-407-177- | micro inductor, 470 μH | C211 | 1-107-079- | 56 pF | silvered mica | C269 | 1-103-608- | 200 pF polystyrene |
| D101 | | diode 1T240 | L315 | 1-407-177- | micro inductor, 470 μH | C212 | 1-107-068- | 20 pF | silvered mica | C270 | 1-103-601- | 100 pF polystyrene |
| D301 | | diode 1T262 | L316 | 1-407-177- | micro inductor, 470 μH | C213 | 1-107-061- | 10 pF | silvered mica | C271 | 1-103-601- | 100 pF polystyrene |
| D302 | | diode 1T262 | L317 | 1-407-177- | micro inductor, 470 μH | C214 | 1-107-070- | 24 pF | silvered mica | C272 | 1-107-072- | 30 pF silvered mica |
| D303 | | diode 1T23 | L318 | 1-407-177- | micro inductor, 470 μH | C215 | 1-107-081- | 68 pF | silvered mica | C273 | 1-101-924- | 0.02 μF ceramic |
| D304 | | diode 1T262 | L319 | 1-407-182- | micro inductor, 2.2 μH | C216 | 1-107-066- | 16 pF | silvered mica | C274 | 1-101-924- | 0.02 μF ceramic |
| D305 | | diode 1T262 | IFT F101 | 1-403-294- | transformer, fm i-f | C217 | 1-107-070- | 24 pF | silvered mica | C275 | 1-101-924- | 0.02 μF ceramic |
| D306 | | diode 1T261 | IFT F301 | 1-403-244-15 | transformer, fm i-f | C218 | 1-107-061- | 10 pF | silvered mica | C276 | 1-107-077- | 47 pF silvered mica |
| D307 | | diode 1S1555 | IFT F302 | 1-403-244-15 | transformer, fm i-f | ★ C219 | | 0.5 pF-10 pF silvered mica | | C277 | 1-101-924- | 0.02 μF ceramic |
| D401 | | diode 1T243 | IFT F303 | 1-403-272-15 | discriminator, fm i-f | C220 | | — discarded — | | C278 | 1-101-924- | 0.02 μF ceramic |
| D402 | | diode 1T243 | IFT F304 | 1-403-288-11 | discriminator, fm i-f | C221 | 1-101-924- | 0.02 μF | ceramic | C279 | 1-107-061- | — discarded — |
| D501 | | diode CD-2 | IFT A301 | 1-403-026-211 | transformer, a-m i-f | C222 | 1-101-924- | 0.02 μF | ceramic | C280 | 1-107-061- | — discarded — |
| D502 | | diode 1T378 | IFT A302 | 1-403-137-11 | transformer, a-m i-f | C223 | 1-101-924- | 0.02 μF | ceramic | C281 | 1-121-398- | 10 μF 25V electrolytic |
| Th401 | 1-691-002-01 | thermistor CS-47 | CF301 | 1-527-501-11 | ceramic filter, fm 10.70 MHz (RED) | C224 | 1-102-964- | 36 pF | ceramic | C301 | 1-105-677-12 | 0.022 μF mylar |
| Th402 | 1-691-002-01 | thermistor CS-47 | CF301 | 1-527-501-12 | ceramic filter, fm 10.67 MHz (BLU) | C225 | 1-105-837-12 | 0.022 μF | mylar | C302 | 1-105-677-12 | 0.022 μF mylar |
| COILS AND TRANSFORMERS | | | | | | | | | | | | |
| Ceramic filters marked * are selected to yield specified operating condition. When replacing it, use a ceramic filter as same colored as the used one. | | | | | | | | | | | | |
| L101 | 1-425-526- | rf coil, fm 1 | CF301 | 1-527-501-13 | ceramic filter, fm 10.73 MHz (ORG) | C226 | 1-107-088- | 130 pF | silvered mica | C303 | 1-105-677-12 | 0.022 μF mylar |
| L102 | 1-425-525- | rf coil, fm 2 | CF301 | 1-527-501-14 | ceramic filter, fm 10.64 MHz (BLK) | C227 | 1-107-080- | 62 pF | silvered mica | C304 | 1-103-611- | 270 pF polystyrene |
| L103 | 1-425-525- | rf coil, fm 3 | CF301 | 1-527-501-15 | ceramic filter, fm 10.76 MHz (WHT) | C228 | 1-107-080- | 62 pF | silvered mica | C305 | | — discarded — |
| L104 | 1-425-386- | osc coil, fm | CF302 | 1-403-161-13 | ceramic filter, a-m | C229 | 1-107-068- | 20 pF | silvered mica | C306 | 1-101-959- | 10 pF ceramic |
| L105 | 1-407-186- | micro inductor, 4.7 μH | CF304 | 1-403-154-11 | ceramic filter, a-m | C230 | 1-107-076- | 43 pF | silvered mica | C307 | | — discarded — |
| L106 | 1-407-190- | micro inductor, 10 μH | T401 | 1-423-140- | transformer, input | C231 | 1-107-077- | 47 pF | silvered mica | C308 | 1-103-613- | 330 pF polystyrene |
| L201 | 1-401-405- | antenna coil, SW2-SW4 | T501 | 1-441-536- | transformer, power | C232 | 1-107-084- | 91 pF | silvered mica | C309 | 1-105-677-12 | 0.022 μF mylar |
| L202 | 1-401-406- | antenna coil, SW5-SW7 | T601 | 1-441-023- | balun | C233 | 1-107-087- | 120 pF | silvered mica | C310 | 1-103-636- | 3.000 pF polystyrene |
| L203 | 1-401-407- | antenna coil, SW8-SW10 | | | | C234 | 1-107-077- | 47 pF | silvered mica | C311 | 1-103-610- | 240 pF polystyrene |
| L204 | 1-425-579- | rf coil, SW2-SW4 | | | | C235 | 1-107-080- | 62 pF | silvered mica | C312 | 1-101-959- | 10 pF ceramic |
| L205 | 1-424-580- | rf coil, SW5-SW7 | | | | C236 | 1-107-070- | 24 pF | silvered mica | C313 | | — discarded — |
| L206 | 1-405-581- | rf coil, SW8-SW10 | | | | C237 | 1-107-061- | 10 pF | silvered mica | C314 | 1-101-959- | 10 pF ceramic |
| L207 | 1-405-419- | 1st osc coil, SW2 | C101 | 1-101-861- | 15 pF | C238 | | | | | | |

| <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> | | <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> | |
|-----------------|-----------------|--------------------|---------------------|-----------------|-----------------|--------------------|-------------------------------------|
| C326 | 1-105-677-12 | 0.022μF | mylar | C405 | | - discarded - | |
| C327 | 1-105-673-12 | 0.01μF | mylar | C406 | 1-105-679-12 | 0.033μF | mylar |
| C328 | 1-105-677-12 | 0.022μF | mylar | C407 | 1-105-681-12 | 0.047μF | mylar |
| C329 | 1-121-347- | 10μF 16V | electrolytic | C408 | 1-105-685-12 | 0.1μF | mylar |
| C330 | 1-105-677-12 | 0.022μF | mylar | C409 | 1-121-725- | 0.47μF 10V | electrolytic |
| C331 | 1-105-677-12 | 0.022μF | mylar | C410 | 1-121-356- | 100μF 16V | electrolytic |
| C332 | 1-105-677-12 | 0.022μF | mylar | C411 | 1-121-347- | 10μF 10V | electrolytic |
| C333 | | - discarded - | | C412 | 1-103-608- | 200pF | polystyrene |
| C334 | | - discarded - | | C413 | 1-105-669-12 | 0.0047μF | mylar |
| C335 | | - discarded - | | C414 | 1-121-294 | 220μF 3.15V | electrolytic |
| C336 | 1-105-677-12 | 0.022μF | mylar | C415 | 1-121-356- | 100μF 16V | electrolytic |
| C337 | 1-121-347- | 10μF 16V | electrolytic | C416 | 1-121-426- | 470μF 16V | electrolytic |
| C338 | 1-121-347- | 10μF 16V | electrolytic | C417 | | - discarded - | |
| C339 | 1-103-605- | 150pF | polystyrene | C418 | 1-108-243- | 0.022μF | mylar |
| C340 | 1-101-880- | 47pF | ceramic | C419 | 1-103-601- | 100pF | polystyrene |
| C341 | 1-105-677-12 | 0.022μF | mylar | C420 | 1-105-717-12 | 0.022μF | mylar |
| C342 | 1-101-872- | 33pF | ceramic | C421 | 1-105-717-12 | 0.022μF | mylar |
| C343 | 1-105-677-12 | 0.022μF | mylar | C422 | 1-105-661-12 | 0.001μF | mylar |
| C344 | 1-105-677-12 | 0.022μF | mylar | C501 | 1-115-071- | 0.0047μF 600V | paper |
| C345 | 1-101-187- | 3pF | ceramic | C502 | 1-115-071- | 0.0047μF 600V | paper |
| C346 | | - discarded - | | C503 | 1-121-186- | 1,000μF 16V | electrolytic |
| C347 | 1-105-677-12 | 0.022μF | mylar | C601 | | - discarded - | |
| C348 | 1-101-864- | 20pF | ceramic | C602 | 1-105-679-12 | 0.022μF | mylar |
| C349 | | - discarded - | | C603 | 1-101-924- | 0.02μF | ceramic |
| C350 | 1-105-677-12 | 0.022μF | mylar | C604 | 1-121-391- | 1μF 50V | electrolytic |
| C351 | 1-101-177- | 2pF | ceramic | CV1-1~ | 1-151-158-12 | | capacitor, fm tuning, 4 gang |
| C352 | | - discarded - | | CV1-4 | | | |
| C353 | 1-105-677-12 | 0.022μF | mylar | CV201-1 | 1-151-167-21 | | capacitor, sw tuning, 2 gang |
| C354 | 1-105-677-12 | 0.022μF | mylar | CV202-2 | | | |
| C355 | 1-103-608- | 200pF | polystyrene | CV301-1 | | | |
| C356 | 1-103-608- | 200pF | polystyrene | CV301-2 | 1-151-182-13S | | capacitor, lw/mw/sw1 tuning, 3 gang |
| C357 | 1-103-608- | 200pF | polystyrene | CV303-1 | | | |
| C358 | 1-121-347- | 10μF 16V | electrolytic | CT1-1 | 1-141-022- | | capacitor, fm trimmer 4 gang |
| C359 | 1-105-677-12 | 0.022μF | mylar | CT1-4 | | | |
| C360 | 1-105-681-12 | 0.0047μF | mylar | CT201 | 1-141-078- | | capacitor, sw. trimmer (16pF) |
| C361 | 1-105-673-12 | 0.01μF | mylar | CT202 | 1-141-078- | | capacitor, sw trimmer (16pF) |
| C362 | 1-105-673-12 | 0.01μF | mylar | CT203 | 1-141-078- | | capacitor, sw trimmer (16pF) |
| C363 | 1-105-673-12 | 0.01μF | mylar | CT204 | 1-141-078- | | capacitor, sw trimmer (16pF) |
| C364 | 1-121-291- | 100μF 6.3V | electrolytic | CT205 | 1-141-078- | | capacitor, sw trimmer (16 pF) |
| C365 | 1-127-022- | 0.5μF 10V | electrolytic (alox) | CT206 | 1-141-078- | | capacitor, sw trimmer (16pF) |
| C366 | | - discarred - | | CT207 | 1-141-078- | | capacitor, sw trimmer (16pF) |
| C367 | 1-103-613- | 330pF | polystyrene | CT208 | 1-141-078- | | capacitor, sw trimmer (16pF) |
| C368 | 1-101-882- | 51pF | ceramic | CT209 | 1-141-078- | | capacitor, sw trimmer (16pF) |
| C369 | 1-121-420- | 220μF 16V | electrolytic | CT210 | 1-141-078- | | capacitor, sw trimmer (16pF) |
| C370 | | - discarded - | | CT211 | 1-141-078- | | capacitor, sw trimmer (16pF) |
| C371 | 1-101-884- | 56pF | ceramic | CT212 | 1-141-078- | | capacitor, sw trimmer (16pF) |
| C372 | 1-121-186- | 1,000μF 16V | electrolytic | CT213 | 1-141-078- | | capacitor, sw trimmer (16pF) |
| C373 | 1-105-677-12 | 0.022μF | mylar | CT214 | 1-141-078- | | capacitor, sw trimmer (16 pF) |
| C374 | 1-105-677-12 | 0.022μF | mylar | CT215 | 1-141-078- | | capacitor, sw trimmer (16pF) |
| C375 | 1-101-924- | 0.02μF | ceramic | CT216 | 1-141-078- | | capacitor, sw trimmer (16pF) |
| C376 | 1-101-924- | 0.02μF | ceramic | CT217 | 1-141-078- | | capacitor, sw trimmer (16pF) |
| C377 | 1-101-924- | 0.02μF | ceramic | CT218 | 1-141-078- | | capacitor, sw trimmer (16pF) |
| C378 | 1-101-924- | 0.02μF | ceramic | CT301-1 | | | |
| C379 | 1-101-861- | 15pF | ceramic | CT301-2 | 1-141-015-12 | | capacitor, a-m trimmer 3 gang |
| C380 | 1-101-177- | 2pF | ceramic | CT301-3 | | | |
| C401 | 1-121-426- | 470μF | electrolytic | CT302 | 1-141-082-11 | | capacitor, trimmer (20pF) |
| C402 | 1-121-726- | 0.47μF 10V | electrolytic | CT303 | 1-141-082-11 | | capacitor, trimmer (20pF) |
| C403 | 1-121-726- | 0.47μF 10V | electrolytic | CT304 | 1-141-082-11 | | capacitor, trimmer (20pF) |
| C404 | 1-105-665-12 | 0.0022μF | mylar | CT305 | 1-141-082-11 | | capacitor, trimmer (20pF) |

| <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> |
|-----------------|-----------------|---------------------------|
| CT306 | 1-141-082-11 | capacitor, trimmer (20pF) |
| CT307 | 1-141-082-11 | capacitor, trimmer (20pF) |
| CT308 | 1-141-082-11 | capacitor, trimmer (20pF) |
| CT309 | 1-141-082-11 | capacitor, trimmer (20pF) |
| CT310 | 1-141-082-11 | capacitor, trimmer (20pF) |

RESISTORS

1. Resistors listed below are $\frac{1}{16}$ W, 5%, carbon resistors, unless otherwise noted.
2. Resistors marked * are selected in value to yield specified operating condition. Refer to the voltage and current adjustment on page 19.


| | | | |
|--------|--------------|----------------|--------------------------|
| R101 | 1-208-027- | 560 Ω | $\frac{1}{16}$ W ceramic |
| R102 | 1-208-027- | 560 Ω | $\frac{1}{16}$ W ceramic |
| R103 | 1-244-697- | 10 k Ω | |
| R104 | 1-244-697- | 10 k Ω | |
| R105 | 1-208-045- | 3,300 Ω | $\frac{1}{16}$ W ceramic |
| R106 | 1-208-145- | 100 k Ω | $\frac{1}{16}$ W ceramic |
| R107 | 1-208-145- | 100 k Ω | $\frac{1}{16}$ W ceramic |
| R108 | 1-208-088- | 200 k Ω | $\frac{1}{16}$ W ceramic |
| R109 | 1-208-027- | 560 Ω | $\frac{1}{16}$ W ceramic |
| R110 | 1-208-033- | 1 k Ω | $\frac{1}{16}$ W ceramic |
| R201 | 1-244-653- | 150 Ω | |
| R202 | 1-244-656- | 200 Ω | |
| R203 | 1-244-684- | 3 k Ω | |
| R204 | 1-244-680- | 2 k Ω | |
| R205 | 1-244-677- | 1,500 Ω | |
| R206 | 1-244-688- | 4,300 Ω | |
| R207 | 1-244-679 | 1,800 Ω | |
| R208 | 1-244-671 | 820 Ω | |
| R209 | 1-244-669- | 680 Ω | |
| R210 | 1-244-666- | 510 Ω | |
| R211 | 1-244-663- | 390 Ω | |
| * R212 | 1-221-638-12 | 100 k Ω | adjustable |
| R213 | 1-244-704- | 20 k Ω | |
| R214 | 1-244-657- | 220 Ω | |
| R215 | 1-244-688- | 4,300 Ω | |
| R216 | 1-244-690- | 5,100 Ω | |
| R217 | 1-244-661- | 330 Ω | |
| R218 | 1-244-669- | 680 Ω | |
| R301 | 1-242-705- | 22 k Ω | |
| R302 | 1-242-690- | 5,100 Ω | |
| R303 | 1-242-673- | 1 k Ω | |
| R304 | 1-242-639- | 39 Ω | |
| R305 | 1-242-664- | 430 Ω | |
| R306 | 1-242-710- | 36 k Ω | |
| R307 | 1-242-642- | 51 Ω | |
| R308 | 1-242-708- | 30 k Ω | |
| R309 | 1-242-673- | 1 k Ω | |
| R310 | 1-242-673- | 1 k Ω | |
| R311 | 1-242-656- | 200 Ω | |
| R312 | | | — discarded — |
| * R313 | 1-242-697- | 10 k Ω | |
| | 1-242-699- | 12 k Ω | |
| | 1-242-701- | 15 k Ω | |
| | 1-242-703- | 18 k Ω | |
| | 1-242-704- | 20 k Ω | |

| <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> |
|-----------------|-----------------|--------------------|
| R314 | 1-242-727- | 180 k Ω |
| R315 | 1-242-673- | 1 k Ω |
| R316 | | — discarded — |
| R317 | 1-242-673- | 1 k Ω |
| R318 | 1-242-673- | 1 k Ω |
| R319 | 1-242-673- | 1 k Ω |
| R320 | 1-242-665- | 470 Ω |
| R321 | 1-242-665- | 470 Ω |
| R322 | 1-242-665- | 470 Ω |
| R323 | 1-242-684- | 3 k Ω |
| R324 | 1-242-671- | 820 Ω |
| R325 | 1-242-666- | 510 Ω |
| R326 | 1-242-683- | 2,700 Ω |
| R327 | 1-242-680- | 2 k Ω |
| R328 | 1-242-714- | 51 k Ω |
| R329 | 1-242-677- | 1,500 Ω |
| R330 | 1-242-708- | 30 k Ω |
| R331 | 1-242-712- | 43 k Ω |
| R332 | 1-242-722- | 110 k Ω |
| R333 | 1-242-642- | 51 Ω |
| R334 | 1-242-697- | 10 k Ω |
| R335 | 1-242-665- | 470 Ω |
| R336 | 1-242-673- | 1 k Ω |
| R337 | 1-242-721- | 100 k Ω |
| * R338 | 1-242-720- | 91 k Ω |
| | 1-242-721- | 100 k Ω |
| | 1-242-722- | 110 k Ω |
| | 1-242-723- | 120 k Ω |
| | 1-242-724- | 130 k Ω |
| | 1-242-725- | 150 k Ω |
| * R343 | 1-242-726- | 160 k Ω |
| | R339 | 1-242-642- |
| | R340 | 1-242-660- |
| | R341 | 1-242-683- |
| | R342 | 1-242-683- |
| | 1-242-672- | |
| * R343 | 910 Ω | |
| | 1-242-673- | 1 k Ω |
| | 1-242-674- | 1,100 Ω |
| | 1-242-675- | 1,200 Ω |
| | 1-242-676- | 1,300 Ω |
| | 1-242-677- | 1,500 Ω |
| R344 | 1-242-679- | 12 k Ω |
| R345 | 1-142-665- | 470 Ω |
| R346 | 1-242-701- | 15 k Ω |
| R347 | 1-242-710- | 36 k Ω |
| R348 | 1-242-668- | 620 Ω |
| R349 | 1-242-697- | 10 k Ω |
| R350 | 1-242-657- | 220 Ω |
| R351 | 1-242-649- | 100 Ω |
| R352 | | — discarded — |
| R353 | 1-244-656 | 200 Ω |
| R354 | 1-242-708- | 30 k Ω |
| R355 | 1-242-701- | 15 k Ω |
| R356 | 1-242-656- | 10 k Ω |
| R357 | 1-242-657- | 220 Ω |
| R358 | 1-242-665- | 470 Ω |
| R359 | 1-242-673- | 1 k Ω |
| R360 | 1-242-694- | 7,500 Ω |

| <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> | | <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> | |
|-----------------|-----------------|---------------------|--|-----------------|-----------------|---------------------------------------------------------|--|
| R361 | 1-242-694- | 7,500Ω | | R602 | | — discarded — | |
| R362 | 1-242-673- | 1kΩ | | R603 | | — discarded — | |
| R363 | 1-242-673- | 1 kΩ | | R604 | 1-244-719- | 82 kΩ | |
| R364 | 1-242-731- | 270 kΩ | | R605 | 1-244-673- | 1 kΩ | |
| R365 | | — discarded — | | RV601 | 1-222-218- | volume control 50 kΩ | |
| R366 | 1-242-673- | 1 kΩ | | RV602 | 1-222-126- | tone control 50 kΩ, treble | |
| R367 | 1-242-666- | 510Ω | | RV603 | 1-222-126- | tone control 50 kΩ, bass | |
| R368 | 1-242-690- | 5,100Ω | | | | | |
| * R369 | 1-242-670- | 750Ω | | | | | |
| | 1-242-671- | 820Ω | | | | | |
| | 1-242-672- | 910Ω | | | | | |
| | 1-242-673- | 1 kΩ | | | | | |
| | 1-242-674- | 1,100Ω | | | | | |
| | 1-242-675- | 1,200Ω | | | | | |
| R370 | | — discarded — | | | | | |
| R371 | | — discarded — | | | | | |
| R372 | | — discarded — | | | | | |
| R373 | | — discarded — | | | | | |
| R374 | | — discarded — | | | | | |
| R375 | 1-242-656- | 200Ω | | ROD601 | 1-501-113- | | |
| R376 | 1-242-690- | 5,100Ω | | S201-205 | | | |
| R401 | 1-242-727- | 180 kΩ | | | | | |
| R402 | 1-242-731- | 270 kΩ | | | | | |
| R403 | 1-242-693- | 6,800Ω | | S301-305 | 1-514-670- | 5 key switch, band selector | |
| R404 | 1-242-666- | 510Ω | | S306 | 1-514-594-11 | push switch, SELECTIVITY | |
| R405 | | — discarded — | | S501 | 1-514-503-11 | lever seesaw switch, power ON-OFF | |
| R406 | 1-242-690- | 5,100Ω | | S502 | 1-514-269- | leaf switch, pilot lamp | |
| R407 | 1-242-677- | 1,500Ω | | S503 | 1-514-503- | lever seesaw switch, DC EXT power | |
| R408 | 1-242-701- | 15 kΩ | | S504 | 1-514-421-31 | lever seesaw switch, AFC | |
| R409 | 1-242-673- | 1 kΩ | | S601 | 1-514-304- | slide switch, LOCAL-DX ANT | |
| R410 | 1-242-697- | 10 kΩ | | S602 | 1-514-304- | slide switch, EXT ANT-COD ANT | |
| R411 | 1-242-728- | 200 kΩ | | J501 | 1-509-362-11 | connector, ac or ext dc power supply | |
| R412 | 1-242-684- | 3 kΩ | | J601 | 1-507-169-13 | jack, MPX OUT | |
| R413 | 1-242-686- | 3,600Ω | | J602 | 1-507-169-13 | jack, AUX IN | |
| R414 | 1-242-645- | 68Ω | | J603 | 1-507-169-13 | jack, REC OUT | |
| R415 | 1-242-721- | 100 kΩ | | J604 | | — discarded — | |
| R416 | 1-242-680- | 2 kΩ | | J605 | 1-507-169-13 | jack, earphone | |
| R417 | 1-242-659- | 270Ω | | J606 | 1-506-119- | 2P jack, speaker | |
| R418 | 1-242-627- | 12Ω | | J606 | 1-507-148- | socket, 2P speaker connector | |
| R419 | 1-242-643- | 56Ω | | SP601 | 1-502-241-11 | speaker | |
| R420 | 1-242-659- | 270Ω | | PL601 | 1-518-006-03 | pilot lamp | |
| R421 | 1-242-671- | 820Ω | | PL602 | 1-518-006-03 | pilot lamp | |
| R422 | 1-242-659- | 270Ω | | PL603 | 1-518-006-03 | pilot lamp | |
| R423 | 1-242-671- | 820Ω | | PL604 | 1-518-006-03 | pilot lamp | |
| R424 | 1-210-154- | 1.5Ω 1W carbon | | PL605 | 1-518-006-03 | pilot lamp | |
| R425 | 1-210-154- | 1.5Ω 1W carbon | | VS501 | 1-526-168- | voltage selector (for USA and CANADA model) | |
| R426 | | — discarded — | | VS501 | 1-526-188- | voltage selector (for general export model) | |
| R427 | 1-209-154- | 33Ω 1W carbon | | | 1-520-195- | tuning meter | |
| R428 | 1-242-647- | 82Ω | | | 1-534-517-11 | ac cord with plug (for USA and general export model) | |
| R429 | 1-242-690- | 5,100Ω | | | 1-534-517-12 | ac cord with plug (for CANADA model) | |
| R501 | 1-210-173- | 43Ω 1W carbon | | | 1-507-901-12 | nut, earphone jack | |
| R502 | 1-244-618- | 5.1Ω | | | 1-536-179- | lug terminal | |
| R503 | 1-202-645- | 1 MΩ ½W composition | | | 1-536-180- | lug terminal (C-2L2) | |
| R504 | 1-210-173- | 43Ω 1W carbon | | | 1-536-178- | plate, lug (C-1L) | |
| R601 | | — discarded — | | | | | |


SECTION 6 PACKING AND EXPLODED VIEW

6-1. PACKING

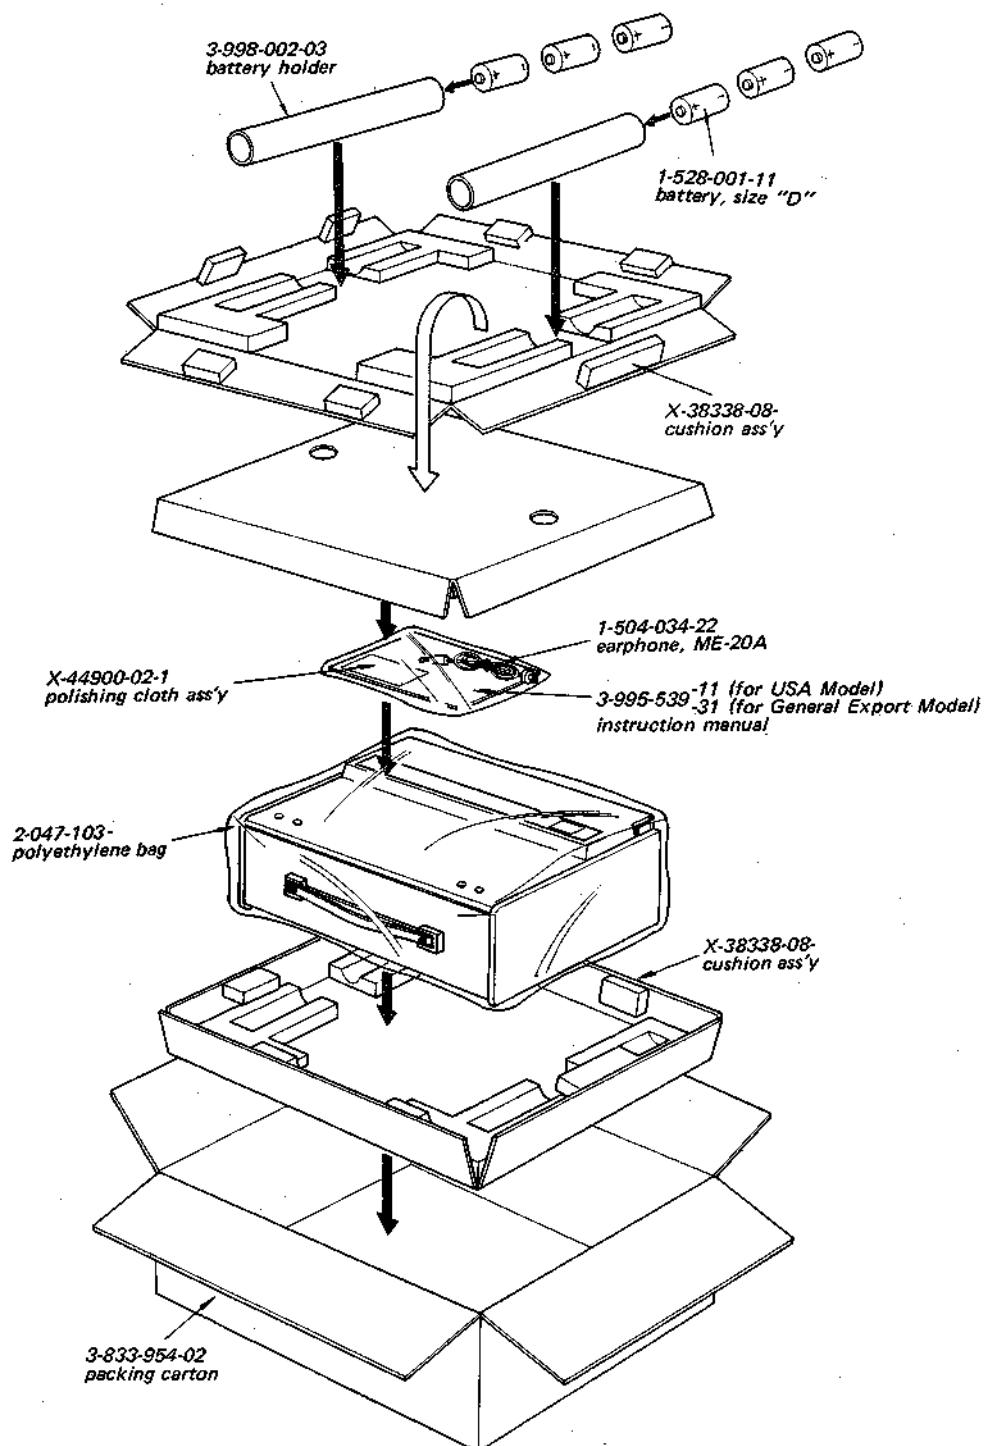


CRF-150 CRF-150

6-2. EXPLODED VIEW (1)

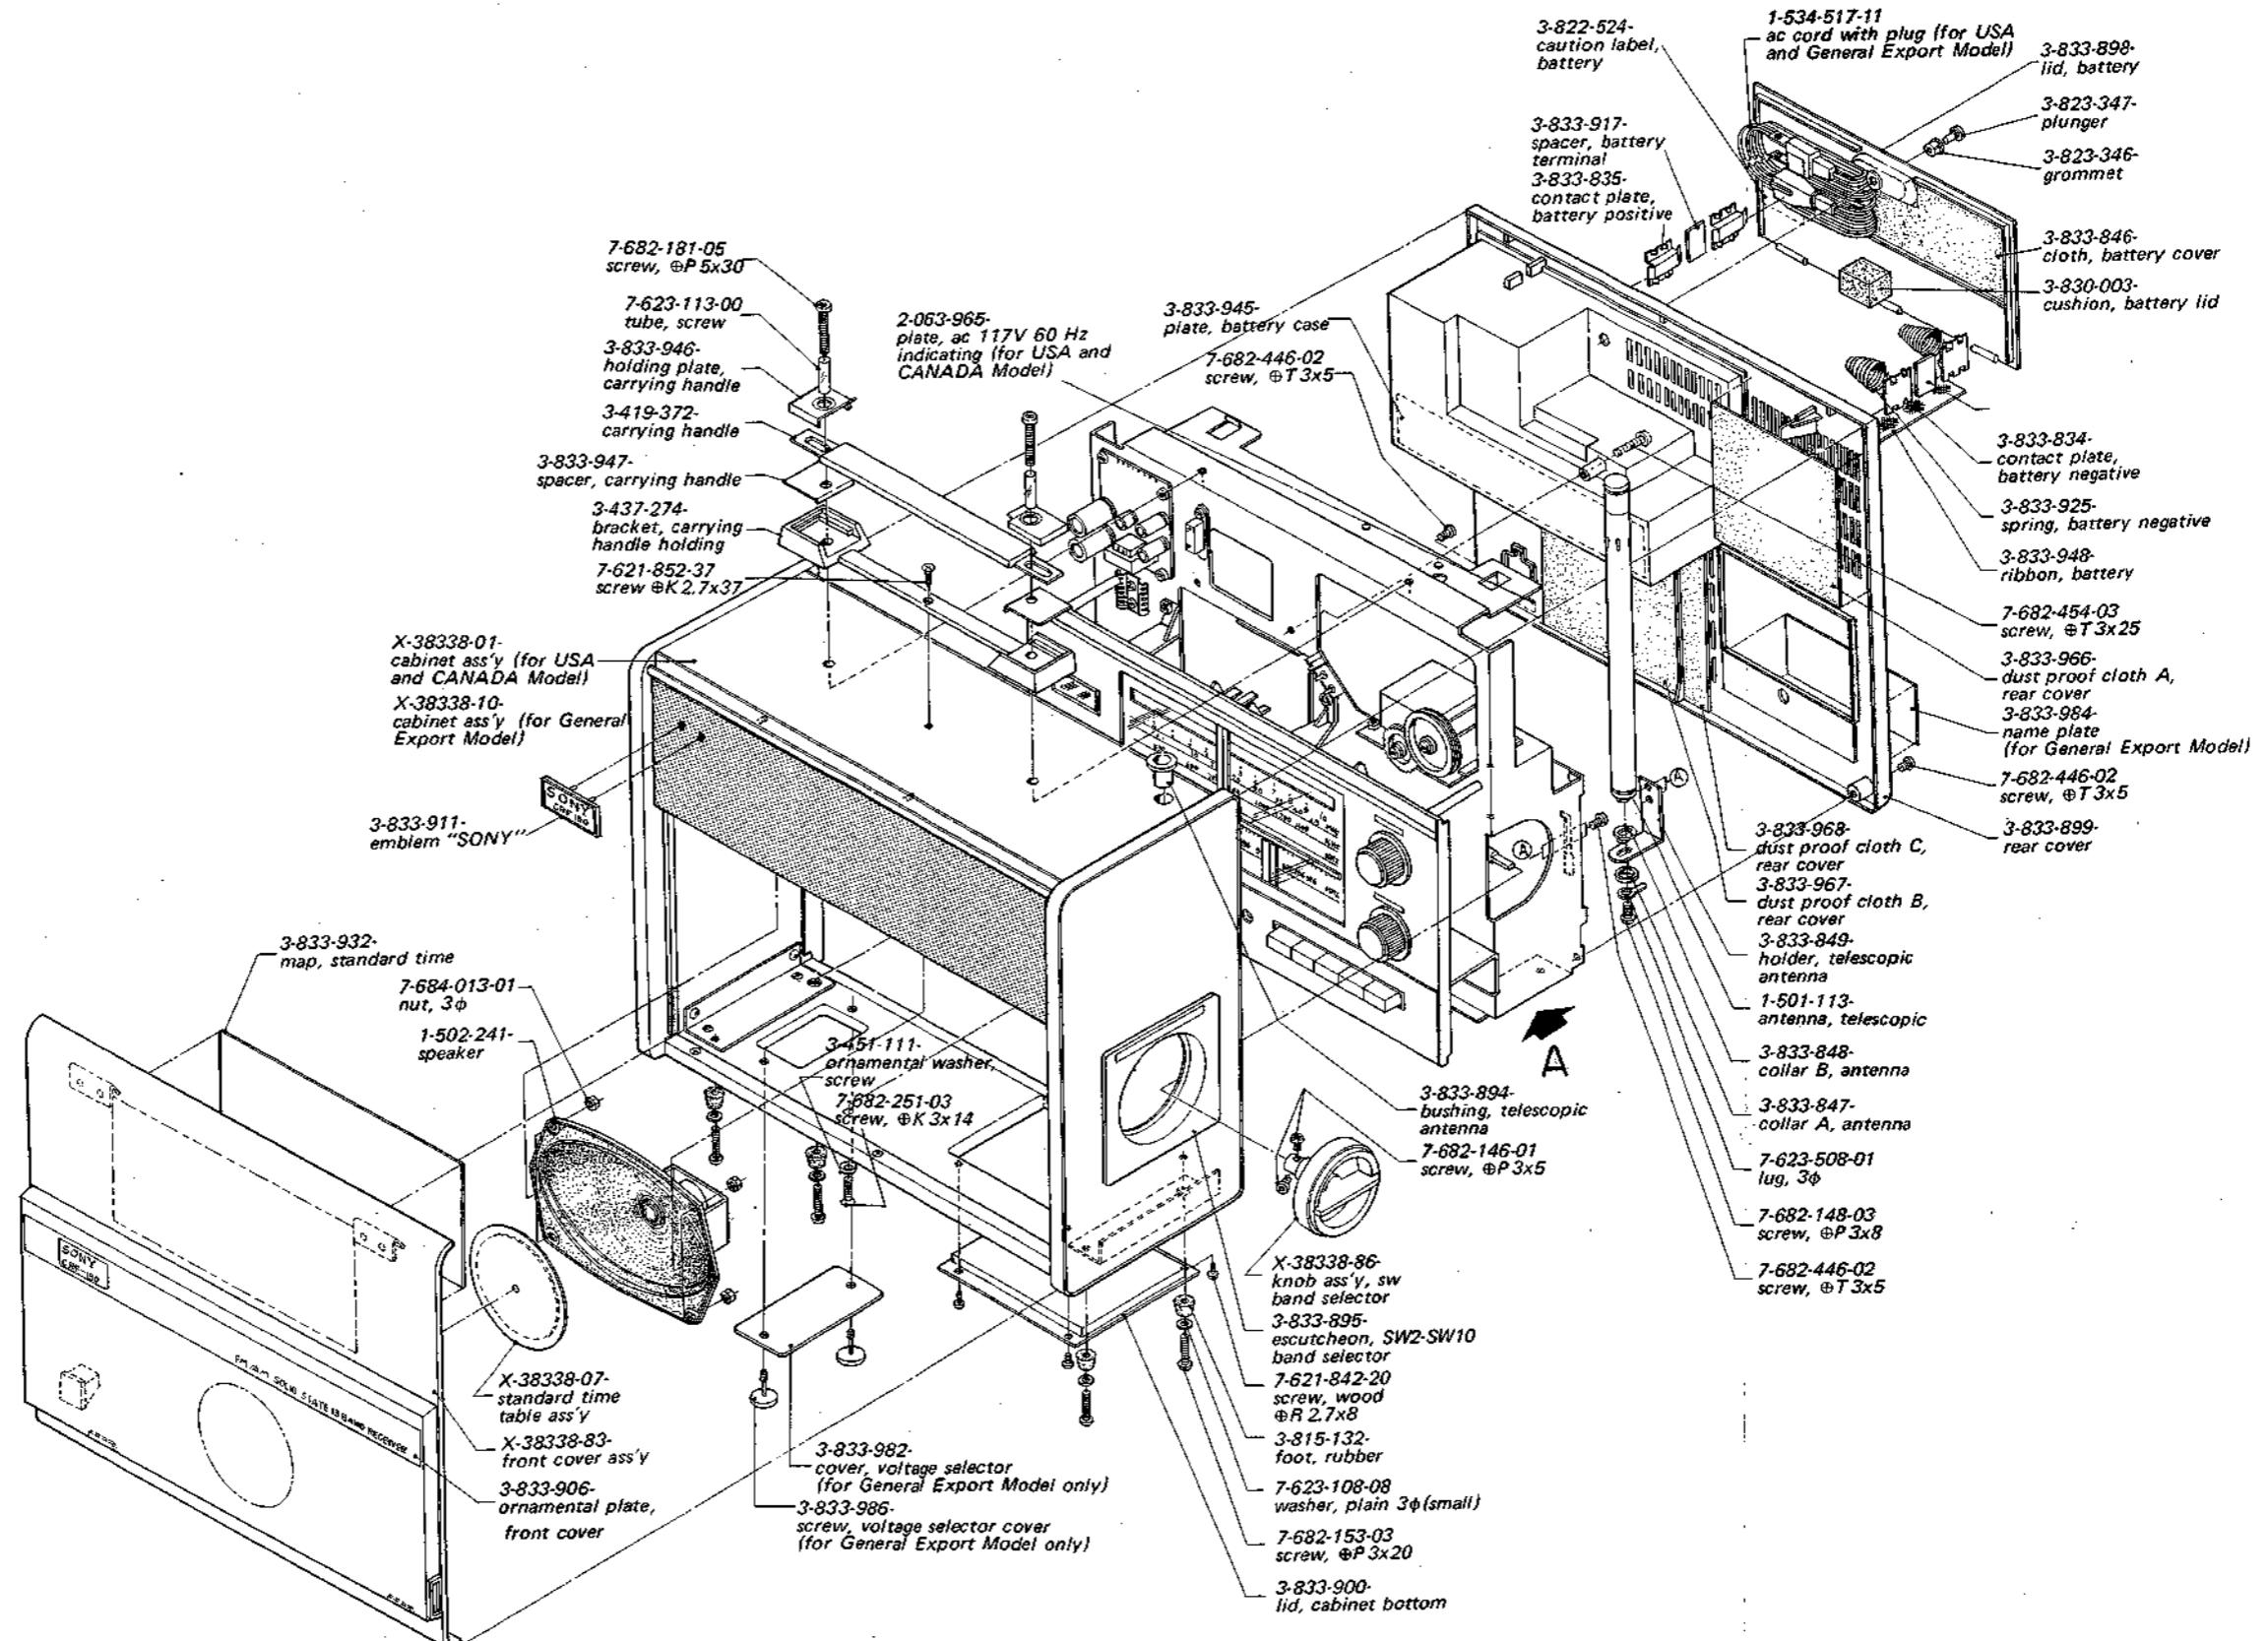


CRF-150

EXPLODED VIEW (2)

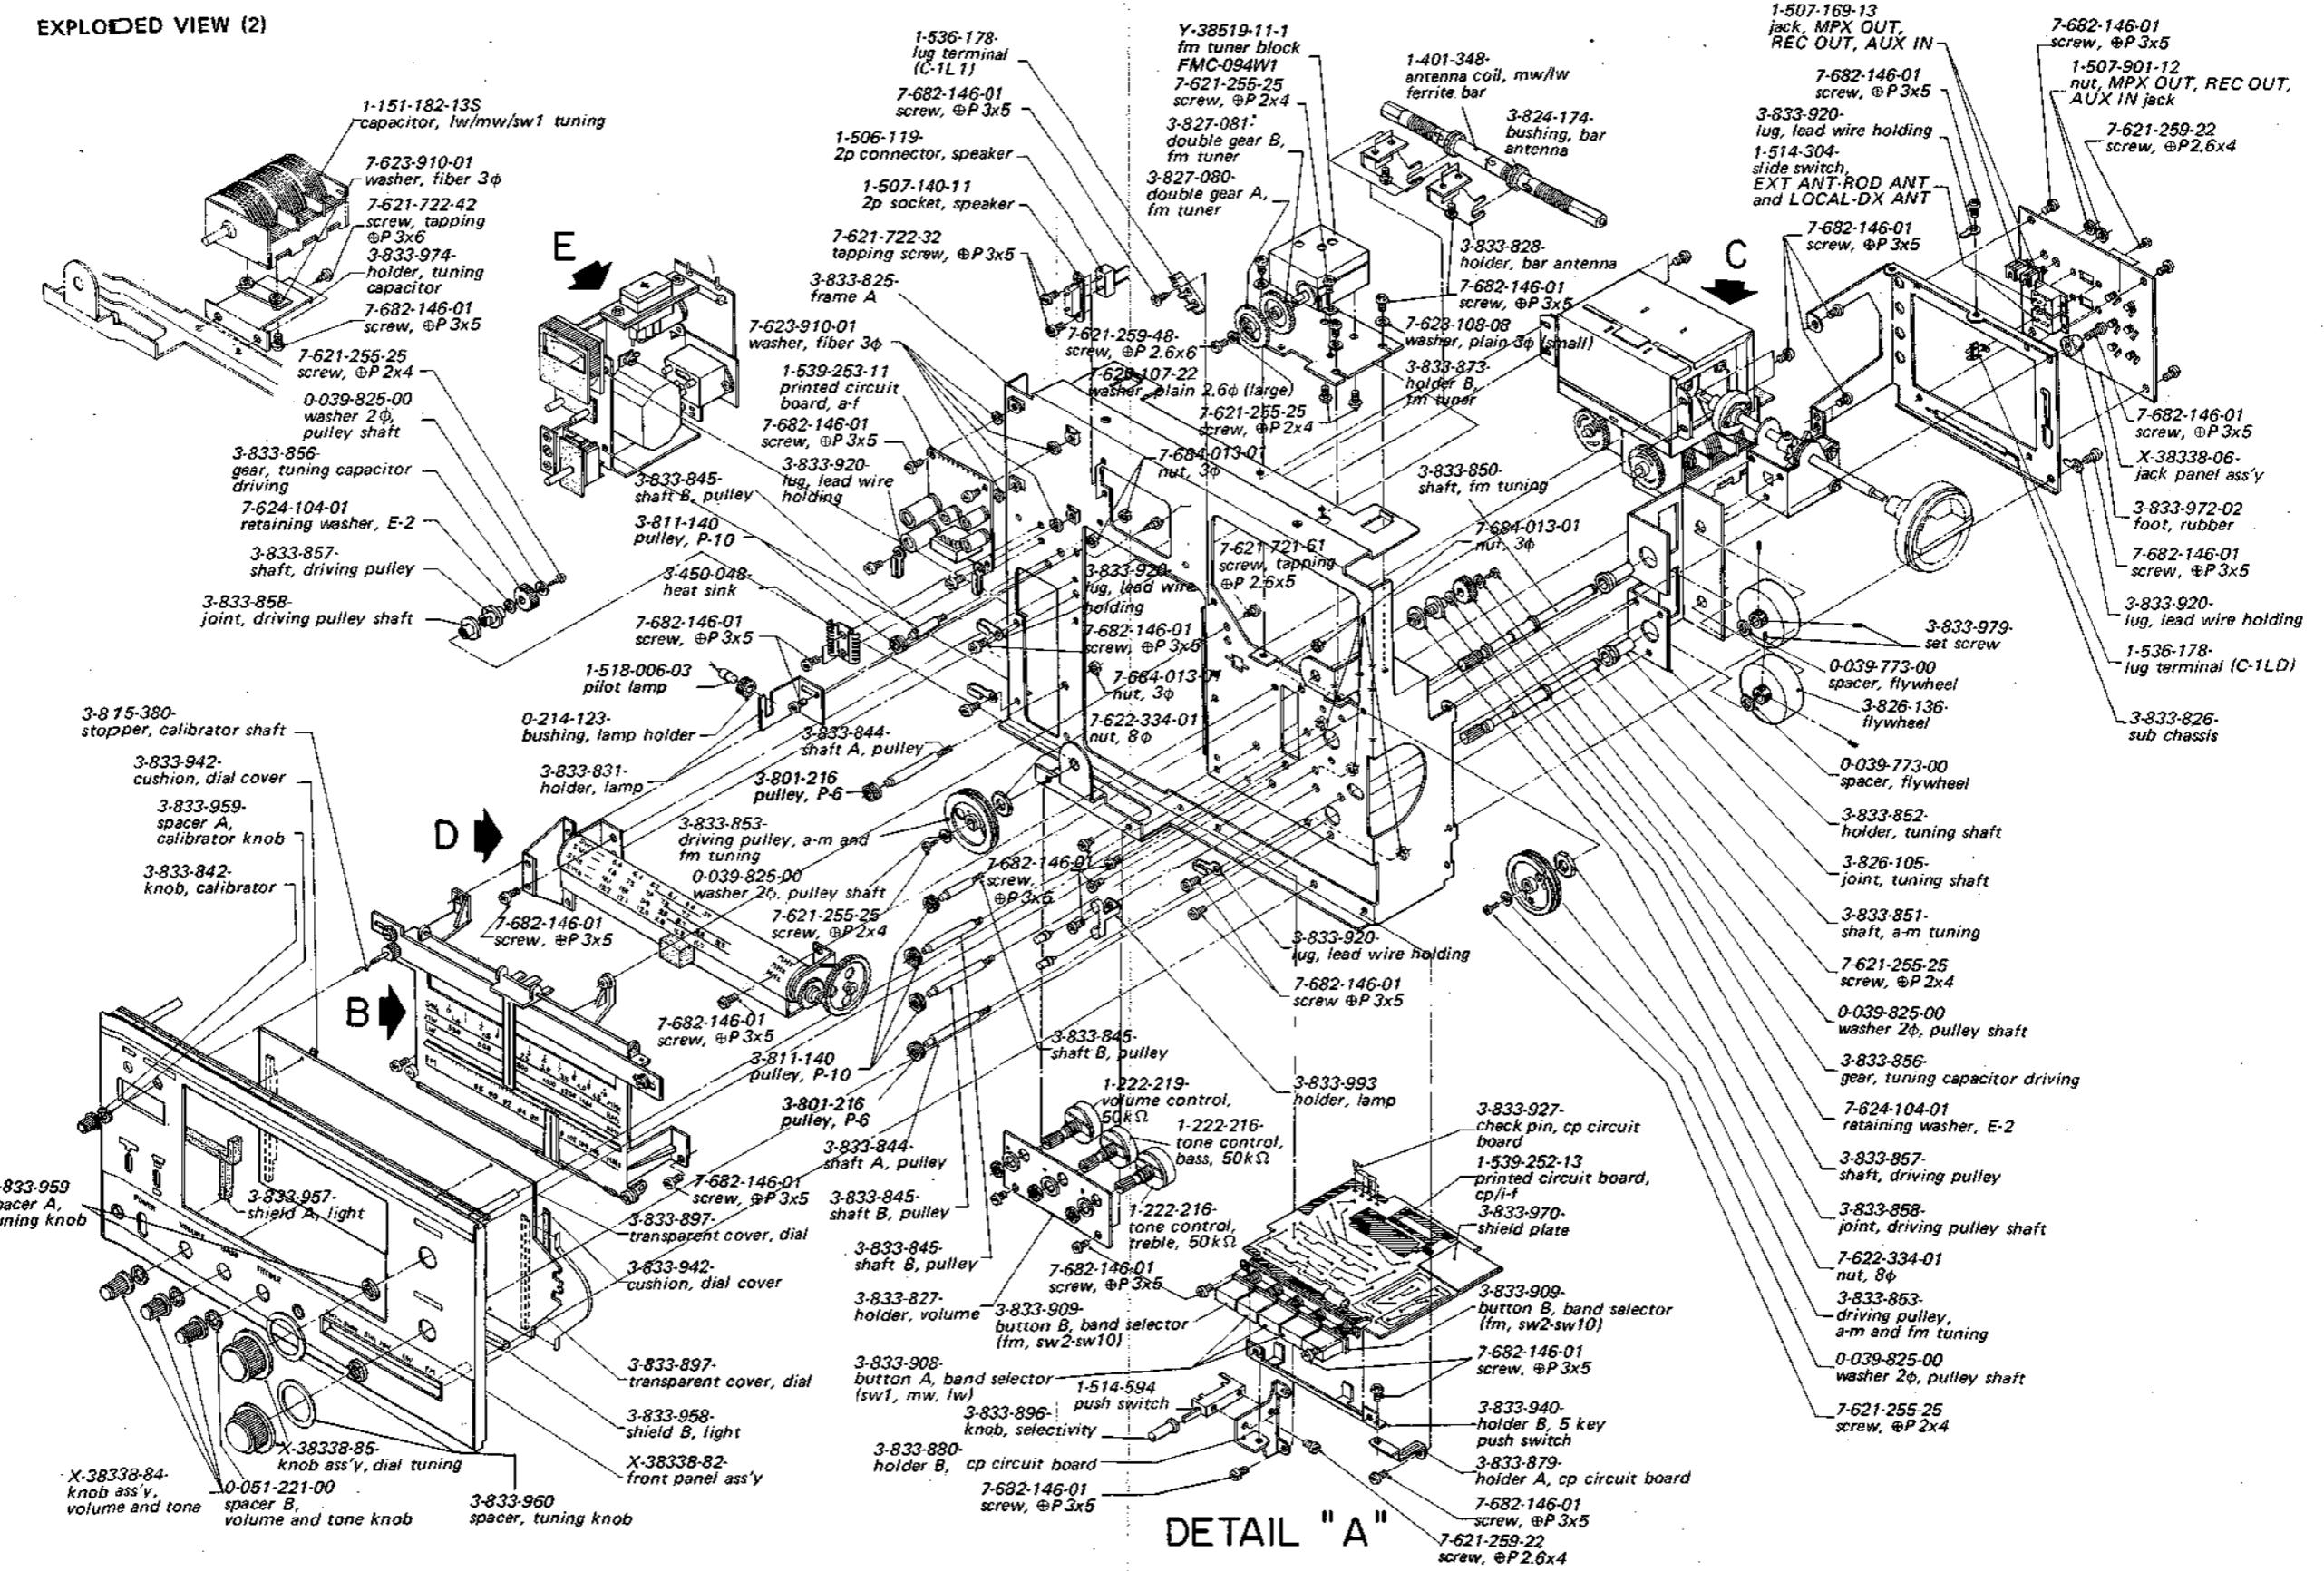


DETAIL "A"

EXPLODED VIEW (3)

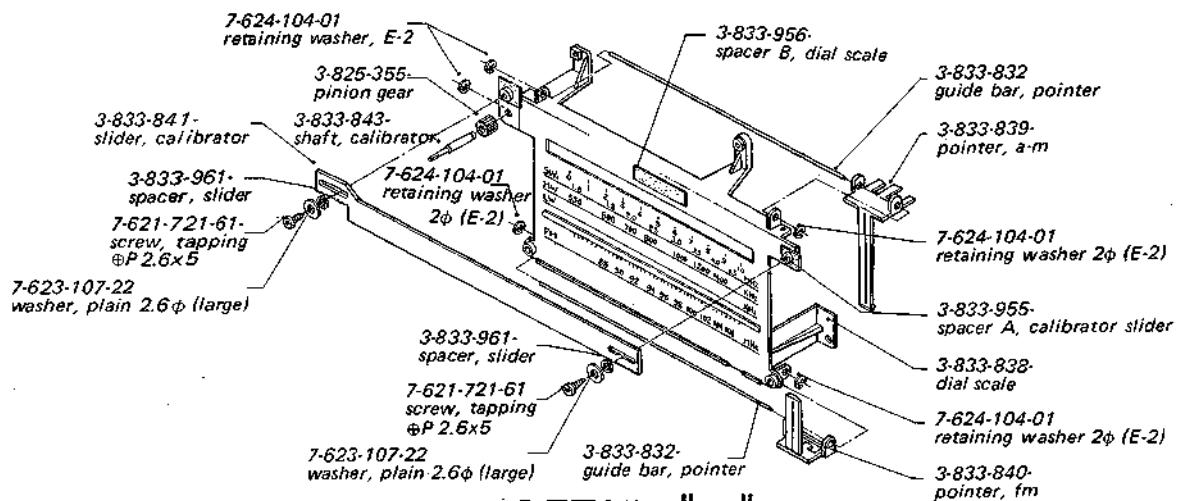


DETAIL "B"

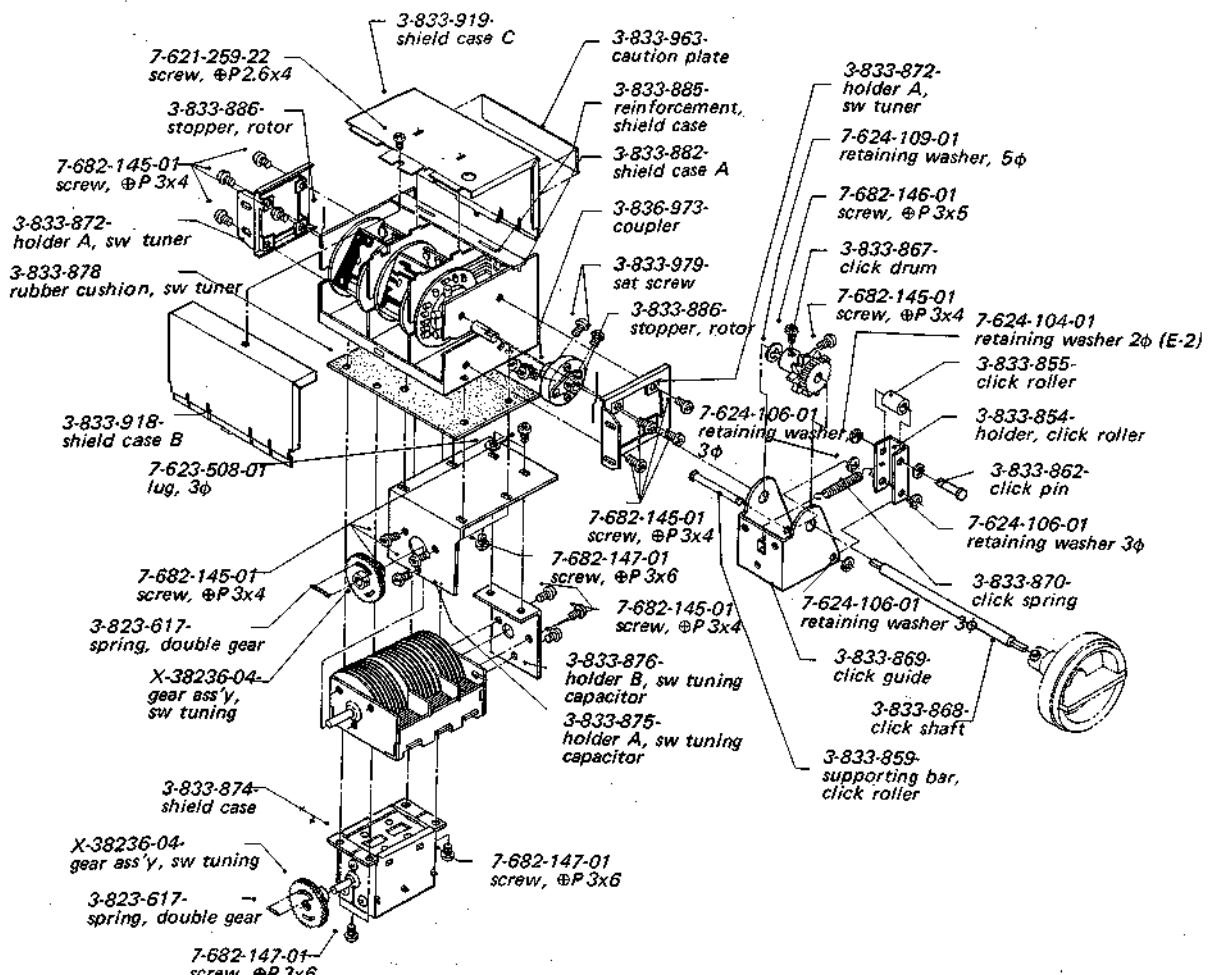


DETAIL "C"

EXPLODED VIEW (4)

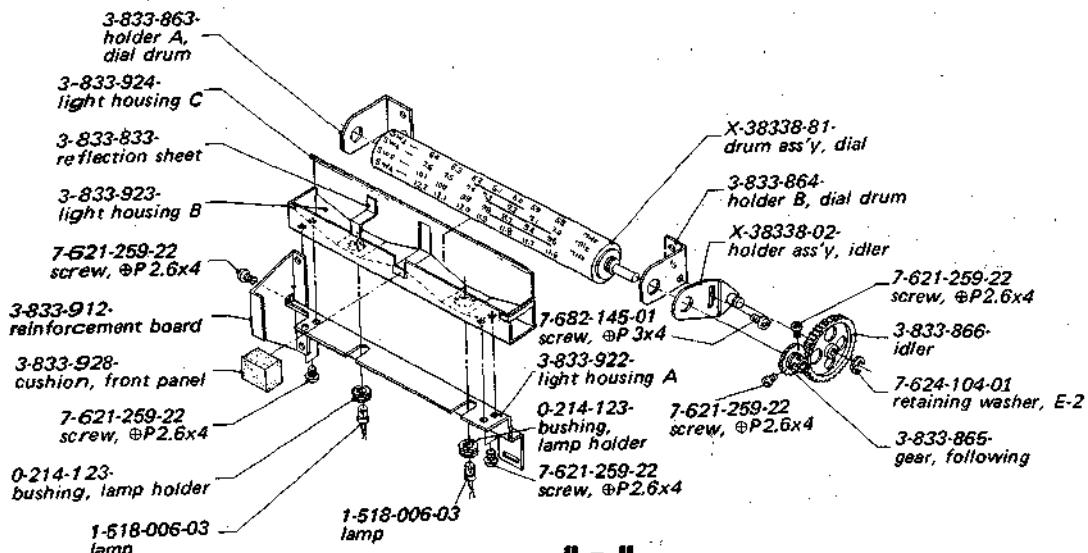

DETAIL "D"

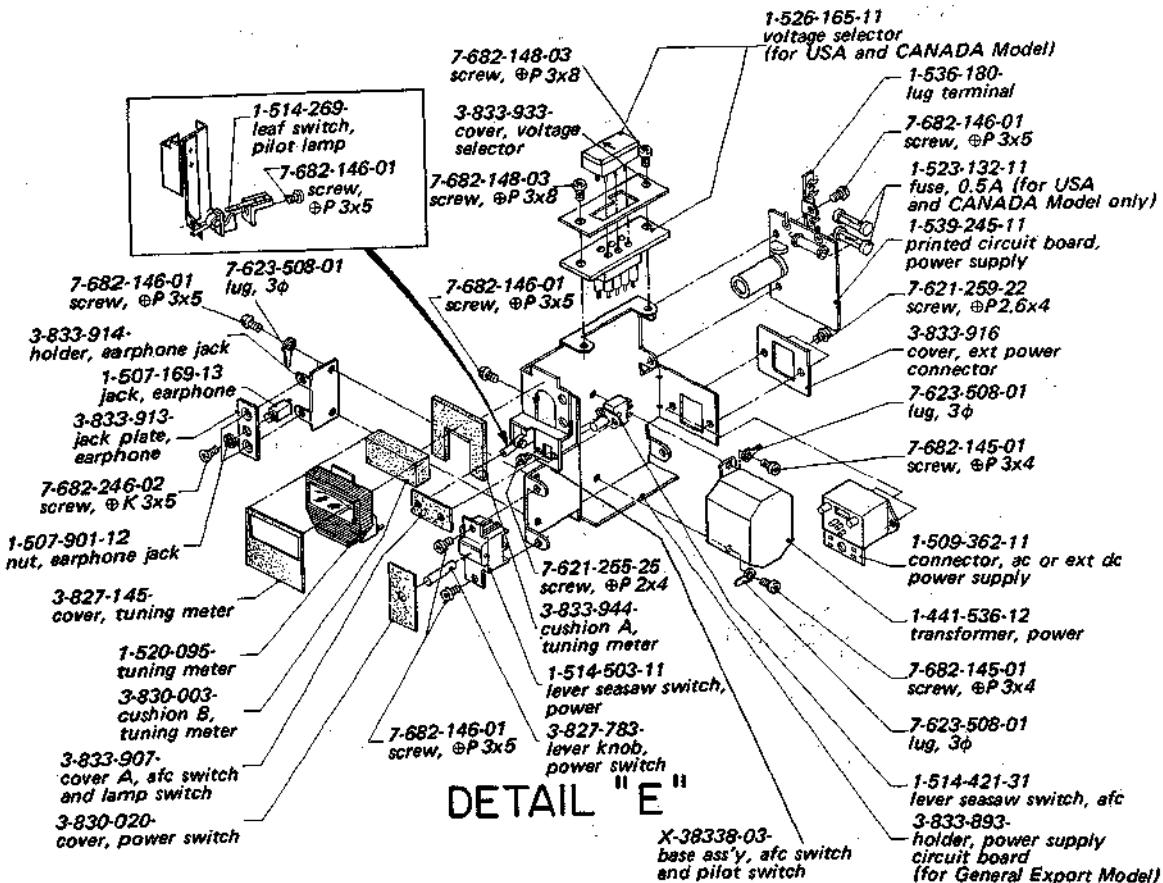

DETAIL "E"

SUPPLEMENT

No. 2
SEPTEMBER, 1970

Subject : 1. Troubleshooting guide

2. Af circuit board changed. Serial No.

{ USA model 31,800
CANADA model 50,100
GENERAL EXPORT
model 42,420 }

and later.

1. TROUBLESHOOTING GUIDE


| Trouble | Band | Symptom | Cause | Remedy |
|------------------------------------------------------------------------|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No sound (Af circuit normal but no sound from speaker.) | MW | 1) 0.8 V or higher at the emitter of Q304. (0.6 to 0.7V in normal) 2) No sound even if the bar antenna coil is adjusted. 3) Collector voltage at Q306 is too low. (2.75V is normal.) | 1) Leaky tuning capacitor. 2) Defective bar antenna coil. 3) Internal resistance of the tuning meter is too high. | 1) Apply 20V dc between the rotor and the stator of the tuning capacitor to produce a spark. 2) Replace the coil. 3) Replace the tuning meter. |
| | SW2~10 | No sound at the high-frequency end of each band. Normal sound at the low-frequency end. | Shorted padding capacitors. (C247, C250, C253, C256, C259, C262, C265, C268, C271) | Replace these capacitors. |
| Low sensitivity | FM | Noise heard during reception. | Antenna lead (coaxial cable) of tuner touches the tuner case. | Resolder the lead. |
| | SW1 | Great difference in noise level be- tween SHARP and BROAD positions of the SELECTIV- ITY switch. | Yellow lead of the switch is connected to ground. | Resolder the lead. |
| | SW2~10 | Noise heard all over the SW bands. | 3.8 to 4.1V at the emi- ter of Q309. (4.5V is normal.) | Adjust R369 for 4.5V. |
| Shock noise | FM | 1) Shock noise. 2) Shock noise. | 1) Shield plate touching the CP printed circuit board. 2) Leads of capacitors mounted on the con- ductor side are touch- ing the legs of IFTs. | 1) Separate the shield plate from the printed circuit board. 2) Cover the legs of these capacitors with plastic tubing. |
| | MW | 1) Shock noise. 2) Shock noise. | 1) Loose contact in the pilot lamp switch. 2) Loose nut on the EXT ANT terminal. | 1) Replace the switch. 2) Tighten nut, then secure with contact cement. |

| Trouble | Band | Symptom | Cause | Remedy |
|-------------------------------------------------------------------------------|--------|----------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| Oscillation | FM | 1) Oscillating noise 2) Oscillating noise 3) Oscillating noise | 1) Coupling between L319 and CF301. 2) "S" curve is too sharply adjusted. 3) Leads from the tuner and antenna to S301-2 disturb the i-f stage. | 1) Separate L319 from CF301. 2) Lower the "S" curve level. 3) Separate the leads from the printed circuit board. |
| Tuning meter | FM | Pointer does not move. | Leaky C377 between IFT F301 and S301-8. | Replace C377. |
| | MW | Minimum pointer movement. | R313 misadjusted. | Readjust R313 for 0.25 to 0.28V at the emitter of Q303. |
| Wrong dial pointer indication | FM | | 1) Pointer does not slide properly. 2) Incorrect frequency coverage. | 1) Make the pointer slide more smoothly. 2) Readjust the frequency coverage. |
| | MW | 2) Backlash. | 1) Incorrect frequency coverage. 2) Loose screw on the double gear. | 1) Readjust the frequency coverage. 2) Engage gears, and tighten the screw. |
| SW2~10 | | | 1) Loose core in the first oscillator coil. 2) Normal when the core of the second oscillator coil is pulled out. | 1) Fix the core with an elastic band, or replace the coil. 2) Replace the coil. |
| | SW2~10 | | 2) Damaged second oscil- lator coil. | |
| Unstable reception | | | 1) No reception when the band selector is turned counterclockwise. Normal reception when the se- lector is turned clockwise. 2) Reception okay when the set is given a mechanical shock. | 1) Repair or straighten the contact. 2) Resolder the defective joint. |
| Battery cur- rent flows when ac power sup- ply is op- erating. | All | Excessively-high voltage at any point in the circuit. | Shorted D502. | Replace D502. |
| Reverse operation of the SELECTIV- ITY switch. | LW | Reverse operation on the low fre- quency range. | Ground foil between CF302 and CF303 is cut. | Connect the cut foil with a jumper lead. |
| FM tuning shaft gear skips. | FM | Tight dial | Defective gear | Deepen gear teeth, and apply lubricating oil. |

CRF-150 CRF-150

2. AF CIRCUIT BOARD CHANGED

- Conductor Side -

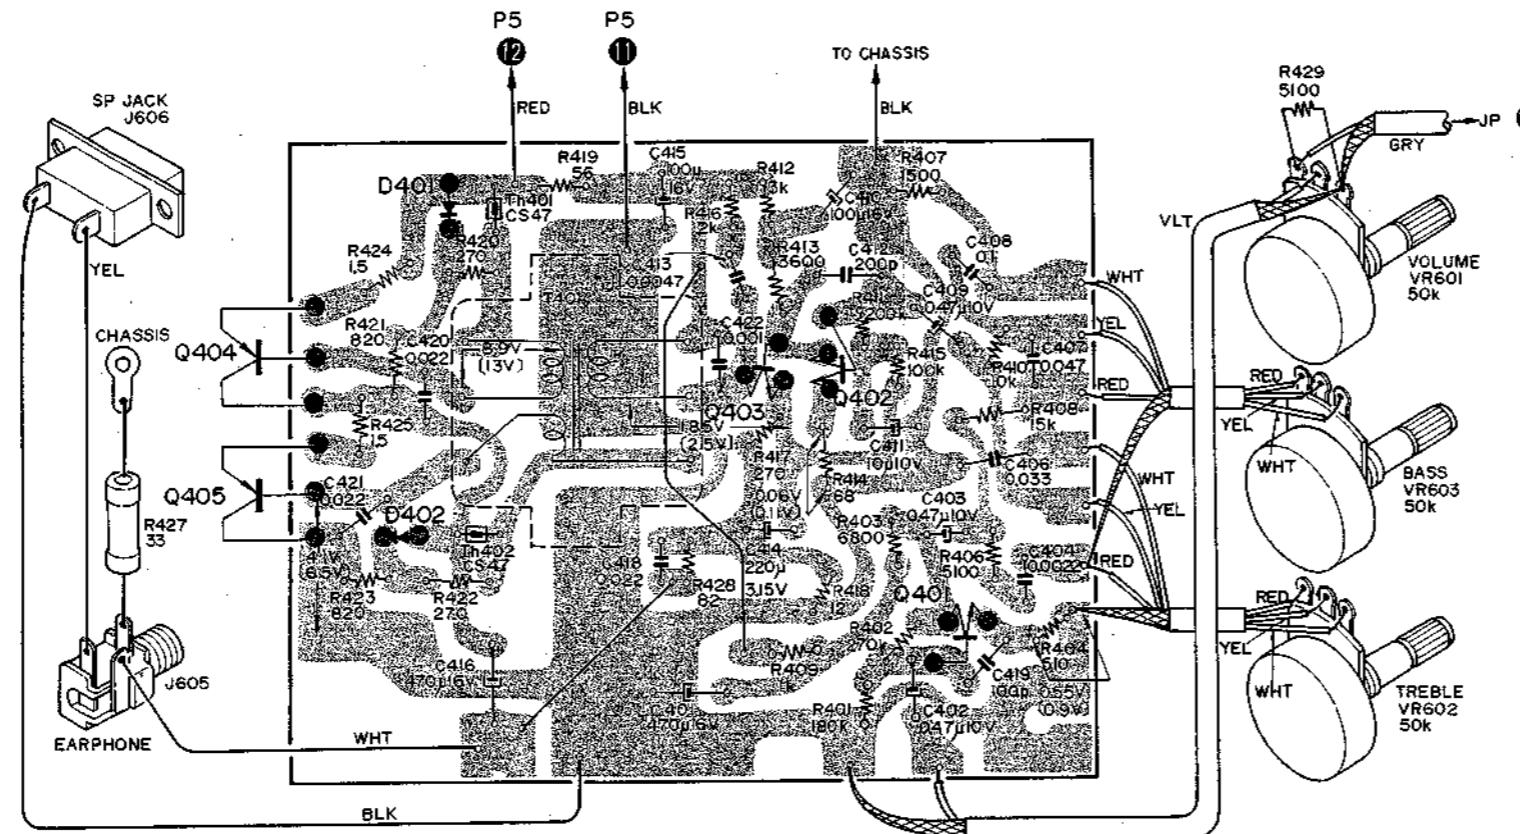

Note: Printed circuit board
Part No. 1-539-253-12

- Component Side -

