

# D-55T

## SERVICE MANUAL

*AEP Model  
UK Model  
E Model  
AUS Model  
French Model*



Refer to the respective SERVICE MANUALS issued separately for the information of BP-200 supplied with this set.

# Discman

### SPECIFICATIONS

#### CD section

**System** Compact disc digital audio system  
**Disc** Compact disc  
**Laser diode properties** Material: GaAlAs  
 Wavelength: 780 nm  
 Emission duration: Continuous  
 Laser output: Max. 0.4 mW\*  
 \*This output is the value measured at a distance of about 1.6 mm from the objective lens surface on the Optical Pick-up Block.  
**Spindle speed** 500 r.p.m. to 200 r.p.m. (CLV)  
**Scan velocity** 1.2–1.4 m/sec.  
**Error correction** Sony Super Strategy Cross Interleave Reed Solomon Code  
**Number of channels** 2  
**D-A conversion** 16-bit linear  
**Frequency response** 20–20,000 Hz  $\pm 3$  dB\*  
**Dynamic range** More than 90 dB\*  
**Total harmonic distortion** Less than 0.008%\*  
**Wow and flutter** Below measurable limit\*  
**Outputs** Line output (stereo minijack)  
 Output level 1.6 V rms  
 Load impedance over 10 kilohms  
 Headphones (stereo minijack)  
 30 mW + 30 mW at 32 ohms

\*Measured by EIAJ CP-307

#### Radio section

**Frequency range** FM: 87.6–107 MHz (G-AEP model)  
 87.6–108 MHz (except for G-AEP model)  
 AM: 530–1,605 kHz  
**Antennas** FM: Headphones cord or connecting cord antenna  
 AM: Built-in ferrite bar antenna

#### General

**Power requirements** Lead acid battery (closed type)  
 using Sony BP-200 rechargeable battery pack (supplied), 6 V  
 Eight size AA alkaline batteries (IEC designation LR6)  
 using Sony EBP-380 battery case (optional), 12 V  
 DC IN 9 V jack accepts;  
 Sony ac power adaptor (supplied)

Where used	Operating voltage
UK/AUS model	240 V ac, 50 Hz
AEP/FRENCH model	220 V ac, 50 Hz
E model	110–240 ac, 50/60 Hz

Sony DCC-120 car battery cord (optional) for use on 12 V car battery

**Power consumption** 2.6 W dc

**Battery life (hours)**

Batteries	Disc playing	FM reception
Rechargeable battery using the supplied battery pack BP-200	4.5	30
Eight size AA batteries using Sony battery case EBP-380 (optional)	3	25

**Dimensions**

Approx. 125.9 × 31.9 × 125.9 mm (5 × 1 1/4 × 5 inches) (w/h/d)  
 not incl. inclined part (depth), projecting parts and controls  
 Approx. 126.9 × 33.8 × 132.8 mm (5 × 1 1/4 × 5 1/2 inches) (w/h/d)  
 incl. projecting parts and controls

**Weight**

Approx. 570 g (1 lb 4 oz), net

### ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET UNE MARQUE  $\triangle$  SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

### SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK  $\triangle$  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

### CAUTION

- Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.



# FM/AM CD COMPACT PLAYER

# SONY®

**AUD**

100-100000-0000  
 100-100000-0000  
 100-100000-0000  
 100-100000-0000  
 100-100000-0000

**FEATURES**

- A compact disc player combined with FM/AM tuner.
- RMS function allows selections to be played in a specified order.
- Shuffle-play function repeatedly plays selections in a random order.
- Repeat functions for the whole disc and for a particular portion
- Digital readout display—the track number on the disc and the elapsed or remaining playing time are shown on the LCD (Liquid Crystal Display) window.

**TABLE OF CONTENTS**

<u>Section</u>	<u>Title</u>	<u>Page</u>
Specifications	.....	1
Features	.....	2
Maintenance	.....	2
Notes on Handling the Optical Pick-up Block (KSS-110G)	.....	3
Chip Component Indications	.....	4
Replacing Chip Components	.....	5
Flexible Circuit Board Repairing	.....	6
PC Boards/Switch/Motor Layouts	.....	6
Service Mode (Service program)	.....	7
Step 1 (Service mode setting method)	.....	8
Step 2 (Service mode operation)	.....	9
Step 3 (Service mode release)	.....	9
Laser Diode Check Procedure	.....	10
Charge Circuit Check	.....	11
Power Sources	.....	12
Location and Function of Controls	.....	13
Radio Reception	.....	14
Disc Playing	.....	14
To Search for a Particular Selection	.....	14
To Search for a Particular Point in a Selection	.....	14
Repeat Play	.....	15
To Play the Selections in a Random Order	.....	15
To Play the Desired Selections in the Desired Order	.....	15
Using the Time Counter	.....	16
<b>SECTION 1. OUTLINE</b>		
1-1.	Circuit Description	16
1-2.	Block Diagram	20
<b>SECTION 2. DISASSEMBLY AND REASSEMBLY</b>		
2-1.	Disassembly	23
2-2.	Mechanical Section Reassembly	25
2-3.	Optical Pick-up Block (FOP) Replacement	27
<b>SECTION 3. ADJUSTMENTS</b>		
3-1.	Mechanical Adjustments	28
3-2.	Electrical Adjustment	29
<b>SECTION 4. DIAGRAMS</b>		
4-1.	CD Section Mounting Diagram	40
4-2.	CD Section Schematic Diagram	45
4-3.	Radio Section Mounting Diagram	50
4-4.	Radio Section Schematic Diagram	52
<b>SECTION 5. EXPLODED VIEWS AND PARTS LIST</b>		
		55
<b>SECTION 6. ELECTRICAL PARTS LIST</b>		
		59

**MAINTENANCE**

**CLEANING THE CASING**


Clean the casing with a soft cloth slightly moistened with water or mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine as they may mar the finish of the casing.

**CLEANING THE LENS**


If you have accidentally touched the lens with a dirty finger or the dust on the lens prevents the set from operating properly, open the disc compartment lid with the OPEN button and clean the lens.

**To remove dust**

Blow on the lens a few times with a commercially available blower, brush the dust away in the direction of the arrow, then blow on the lens again.

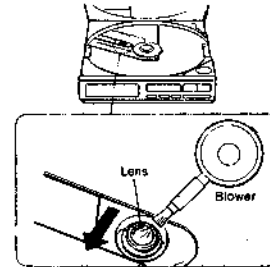

**NOTES ON COMPACT DISCS**

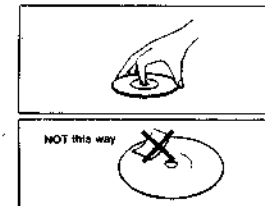

Do not expose the disc to direct sunlight or heat sources such as hot air ducts, nor leave it in a car parked in direct sunlight where there can be a considerable rise in the temperature.



Before playing, clean the disc with the optional cleaning cloth. Wipe the disc from the center out.

Do not use solvents such as benzine, thinner, commercially available cleaners or anti-static spray intended for analog discs.

After playing, store the disc in its case.

— CAUTION FOR ELECTROSTATIC BREAKDOWN —

**NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK (KSS-110G)**

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.

The printed matter below is included in the repair parts. During repair, use the procedure in the printed matter.

The flexible board is easily damaged and should be handled with care.


The following method is an example for reference purposes:

1. Place a conductive sheet on the workbench. (The black sheet used as repair parts wrapping).
2. Place the set on the conductive sheet so that the chassis touches the sheet. (This makes it the same potential as the conductive sheet).
3. Place your hands on the conductive sheet. (This makes them the same potential as the sheet).
4. Remove the optical pick-up block.
5. Perform work on top of the conductive sheet. Be careful that clothing does not touch the optical pick-up block.

**Printed Matter Included in the Repair Parts**

**When opening or repairing the unit, the procedure for grounding as follows is required to prevent damage caused by static electricity.**

1. **Grounding for the human body**  
Be sure to put on a wrist-strap for grounding (with impedance lower than  $10^8 \Omega$ ) whose other end is grounded. The strap works to drain away the static electricity build-up on the human body.
2. **Grounding for the work table**  
Be sure to lay on the table a conductive sheet (with impedance lower than  $10^9 \Omega$ ) such as sheet of copper, which is grounded.
3. As static electricity build-up on clothes is not drained away, be careful not to let your clothes touch the unit.
4. **Handling the flexible board**  
The flexible board is easily damaged and should be handled with care.

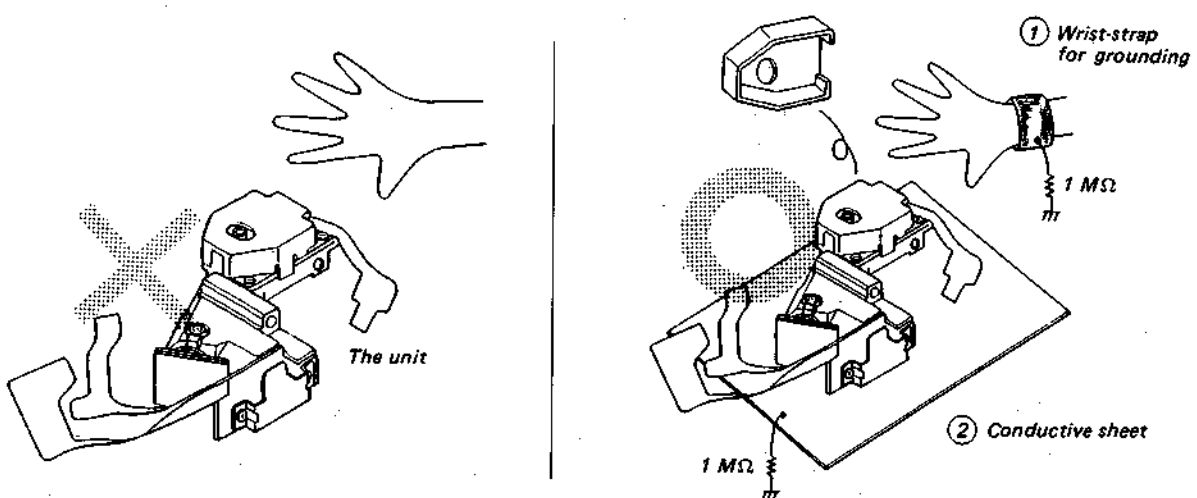

**Chip Component Indications**

The official specifications which are presently indicated are EIAJ standard.

- (1) MELF (leadless): EIAJ RC-8001
- (2) Square chip components (laminated ceramic): EIAJ RC-3699. Square chip resistors are presently under study by EIAJ.

The following explanation covers square chip components (MELF omitted).

**1. 2-letter Method (EIAJ RC-3699)**

- Letter combination: letter + 1 number
- Letter meaning: letter = effective numeric  
number = multiplier

\* The units used are pF for capacitors and  $\Omega$  (ohm) for resistor.

(This is mainly used for Symbol and Numeric and Multiplier capacitors.)

Letter	A	B	C	D	E	F	G	H	J	K	L
Numeric	1	1.1	1.2	1.3	1.5	1.6	1.8	2	2.2	2.4	2.7
Letter	M	N	P	Q	R	S	T	U	V	W	X
Numeric	3	3.3	3.6	3.9	4.3	4.7	5.1	5.6	6.2	6.8	7.5
Letter	Y	Z	a	b	d	e	f	m	n	t	y
Numeric	8.2	9.1	2.5	3.5	4	4.5	5	6	7	8	9

Number	0	1	2	3	4	5	6	7	8	9
Multiplier	$10^0$	$10^1$	$10^2$	$10^3$	$10^4$	$10^5$	$10^6$	$10^7$	$10^8$	$10^{-1}$

- Ex.: A1  $1 \times 10^1 = 10 \text{ pF}$  (or,  $10\Omega$ )
- E3  $1.5 \times 10^3 = 1500 \text{ pF}$  (or,  $1.5 \text{ k}\Omega$ )

**2. 3-number Method**

(Mainly used for chip resistors)

- Number meaning:
  - 1st and 2nd number = effective numeric
  - 3rd number = multiplier of 10
- Unit: pF for capacitor, for resistor

- Ex.: 103  $10 \times 10^3 = 10000\Omega = 10 \text{ k}\Omega$   
(or,  $0.01 \mu\text{F}$ )
- 224  $22 \times 10^4 = 220000\Omega = 220 \text{ k}\Omega$   
(or,  $0.22 \mu\text{F}$ )

**3. 4-letter Method (used for capacitor)**

- Letter combination: 3 numbers + 1 letter
- Letter meaning: number = effective numeric + multiplier of 10  
(same as 3-number method)  
letter = capacitor response
- Symbol and Response

(For temperature compensation)

Symbol	C	P	R	S	T	U	(NO)
Response	C $\Delta$	P $\Delta$	R $\Delta$	S $\Delta$	T $\Delta$	U $\Delta$	SL

$\Delta$  is temperature coefficient tolerance, and is G, H, J, K.

(For high dielectric constant)

Symbol	K	Z
Response	B	F

• Ex.:

$\begin{matrix} 47 \\ 3Z \end{matrix} \Rightarrow 47 \times 10^3 = 47000 \text{ pF} = 0.047 \mu\text{F}$  F response

$\begin{matrix} 15 \\ 1R \end{matrix} \Rightarrow 15 \times 10^1 = 150 \text{ pF}$  R $\Delta$  response

$\begin{matrix} 22 \\ 2 \end{matrix} \Rightarrow 22 \times 10^2 = 2200 \text{ pF}$  SL response

**Replacing chip components**

All chip components should be connected and disconnected, using a tapered soldering iron [temperature of the iron tip: less than 280°C (536°F)], a pair of tweezers and braided wire.


**Precautions for replacement**

1. Do not disconnect the chip component forcefully. Otherwise, the pattern may peel off.
2. Never re-use a disconnected chip component. Dispose of all old chip components.
3. To protect the chip component, heating time for attaching the component should be within 3 seconds.

○ **Removing chip components**


**(1) Removing solder at electrode**

Remove the solder at the electrode, using a thin braided wire. Do not remove the solder of the part (chip component) attached adjacent to the electrode.

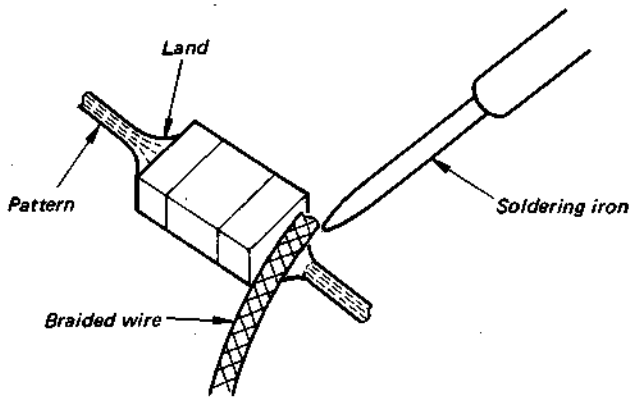

**(2) Disconnecting chip components**

Turn the tweezers with the soldering iron alternately applied to both electrodes, and the chip component will be disconnected. Take careful precautions while disconnecting, because if the chip component is forcefully removed the land may peel off. Never re-use a disconnected chip component.

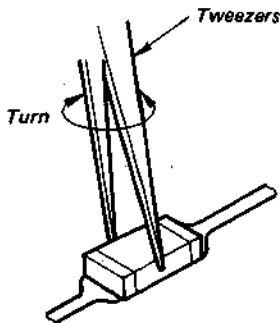

**(3) Smoothing the soldered surface**

After disconnecting the chip component, remove the solder by using a braided wire to smooth the land surface.

○ **Connecting chip components**

The value of chip components is not displayed on the main body. Take due precautions to avoid mixing new chip components with other ones.


**(1) Applying solder to land on one side**

Apply a thin layer of solder to the land on one side where the chip component is to be connected. Too much solder may cause bridging.



**(2) Speedy soldering**

Hold the chip component at the desired position, using tweezers, and apply the soldering iron in the arrow-marked direction. To protect the chip component, heating time should be within 3 seconds.

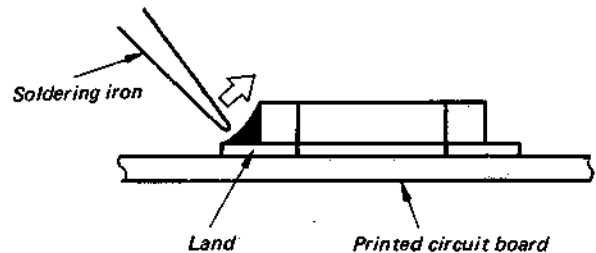


**(3) Speedy soldering of electrode on the other side**

Solder the electrode on the other side in the same way as in (2) above.


**Flexible Circuit Board Repairing**

1. Keep the temperature of the soldering iron at  $270^{\circ} \pm 10^{\circ}\text{C}$  during repairing.  
You can maintain the temperature of the soldering iron around  $270^{\circ}\text{C}$  by using the thermal controller as illustrated on the right.
2. Do not touch the soldering iron more than 4 seconds or 3 times on the same conductor of the circuit board.
3. Do not apply force on the conductor when soldering or unsoldering.

**To make thermal controller of soldering iron**


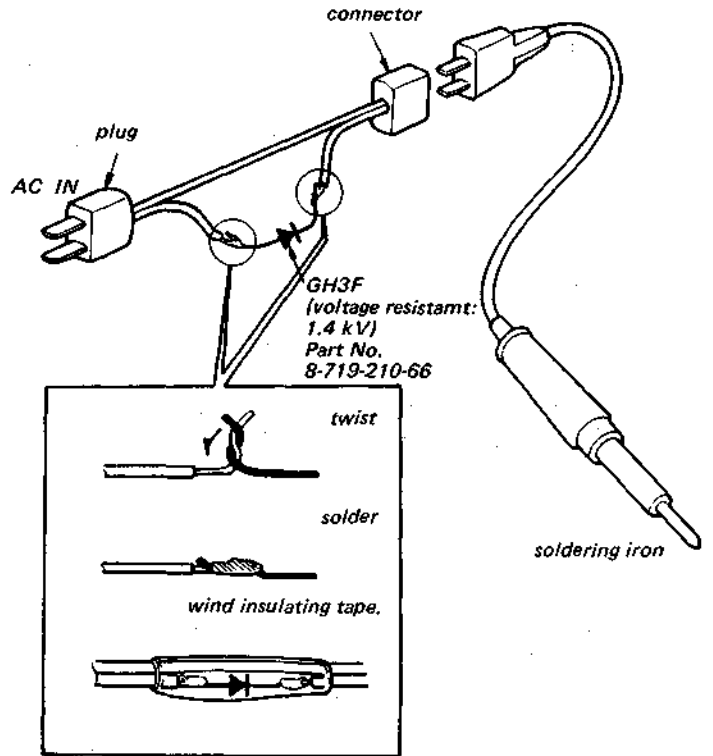


**Tip of soldering iron**




**PC BOARDS/SWITCH/MOTOR LAYOUTS**

**CD SECTION**

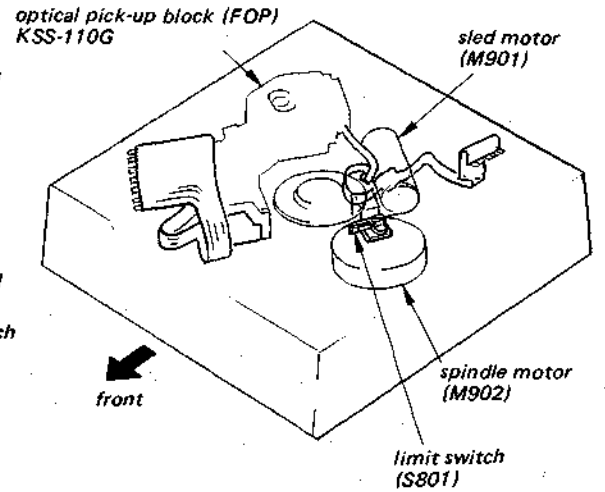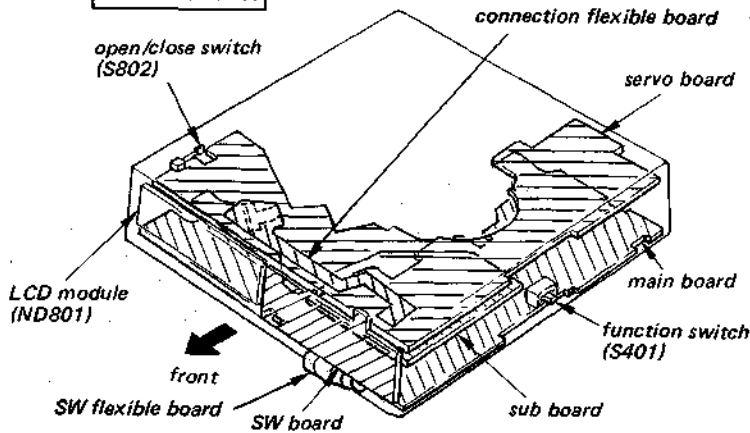

**RADIO SECTION**

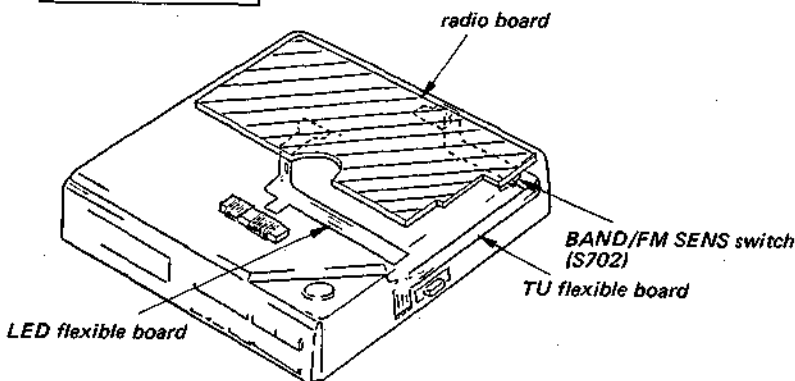

**SERVICE MODE (service program)**

As shown on page 18, 19 the program on this set selects either service program routine or normal routine after power supply is connected and a RESET signal enters. When it enters service program routine, the microcomputer brings the necessary job from each subroutine corresponding to the key input, and executes that job. Operation check can be performed efficiently using this mode. The operation method of service mode is explained below.

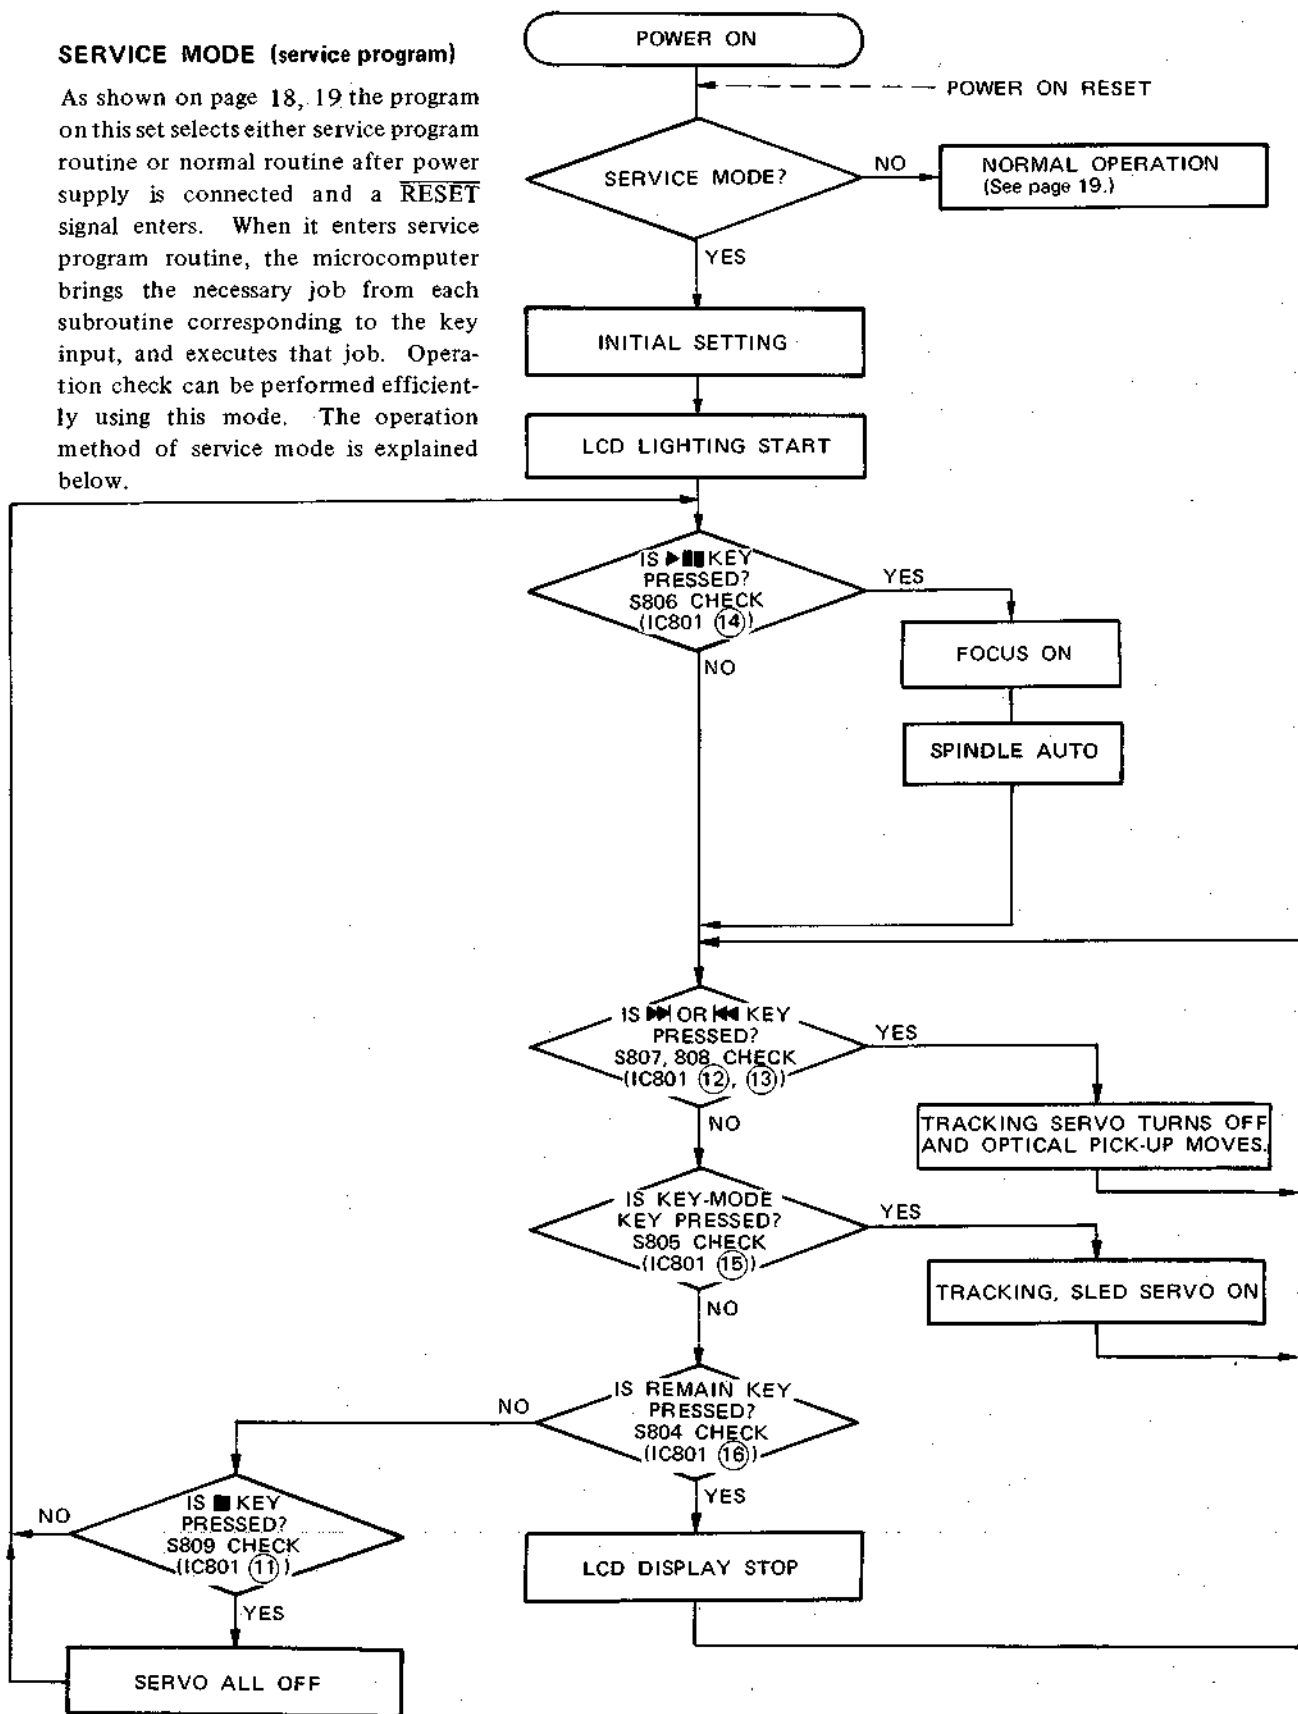


Fig. 1 Service Program Flow Chart


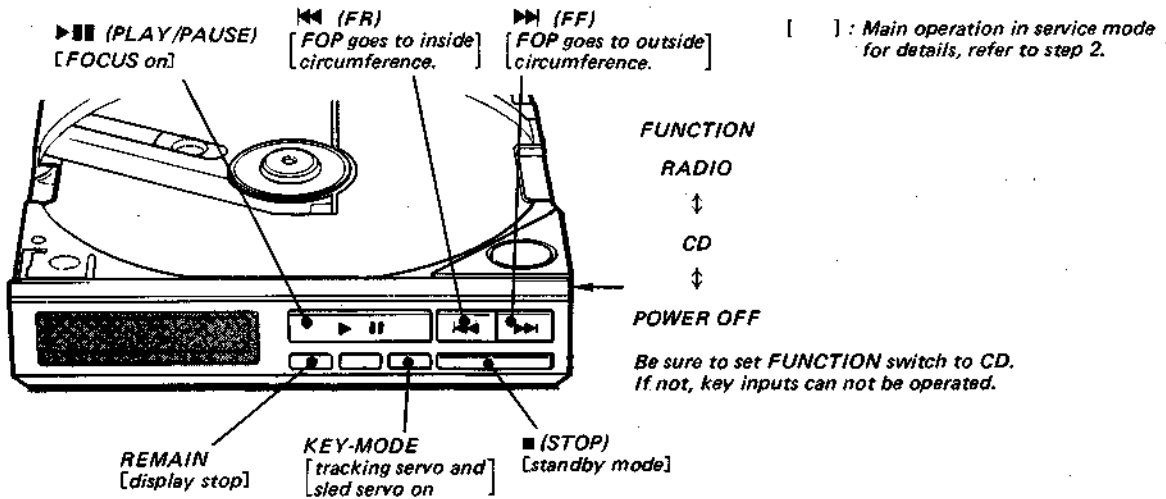


Fig. 2 Key Positions


**Step 1 (Service Mode setting method)**

1. Set the FUNCTION switch to CD with the external power supply no plugged in (no power applied to set) and press the ▶▶ key. (This is to discharge C411 connected to IC801 pin ⑥ (RST).)
2. Solder jumper BATT2 point. (IC801 pin ③ (BATT-E) pin is grounded.)
3. Plug in external power supply. This puts the set into service mode.

— main board —

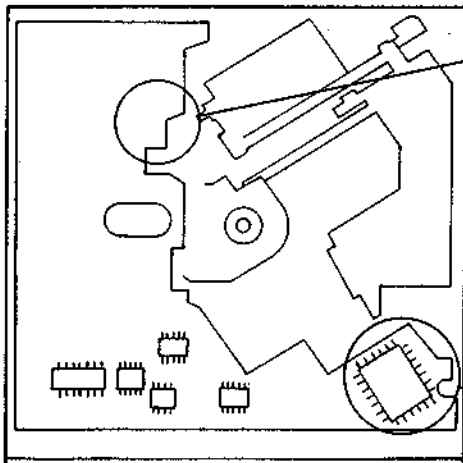

RST point

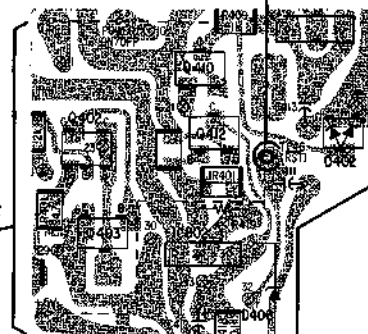

BATT2 point

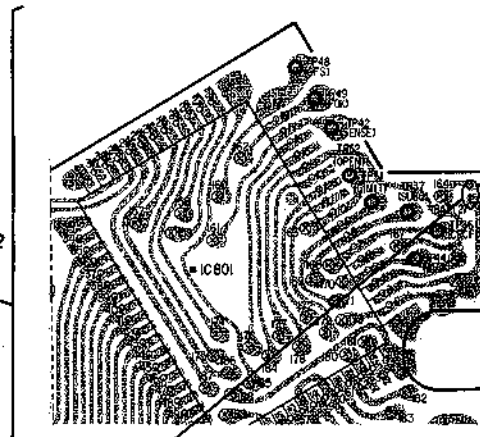


Fig. 3 BATT2 point, RST point Positions

**BATT2**  
Solder jumper for service mode.  
(After checking or adjusting in service mode, be sure to remove this solder jumper.)



**Step 2 (Service Mode operation)**

1. When service mode is set, the display will change 8 times, and those 8 changes will be repeated over and over.  
With this the LCD display should be present in service mode. Even if LCD does not display, other operations will be performed.
2. When ■ key is pressed during each operation, it will return to the state in step 1.
3. When ►► or ◄◄ key is pressed, the FOP moves to the inside or outside circumference. Tracking servo and sled servo go off when this is done, so press KEY-MODE to turn on the tracking servo if necessary.
4. When REMAIN is pressed, the display stops. When REMAIN is released, the display continues to change. This allows check of each segment.
5. When the ►■■ key is pressed, focus search starts, then CLV-S (run up mode) starts.  
When there is no disc, focus search is repeated again and again.
6. When KEY-MODE is pressed, tracking servo, sled servo and CLV-A (servo during PLAY) go ON.
7. When 5 and 6 are performed, the disc begins to play. At this time, the top panel should be closed and S802 are to be ON. When the laser is not emitted, focus search is repeated. When S802 is off, CLV-S does not work properly and the disc rotates at high speed.

**Step 3 (Service Mode release)**

1. First be sure to unplug the external power supply, then remove the BATT2 point solder jumper.  
(During service mode, C411 is discharged by unplugging the external power supply. Therefore, microcomputer IC801 is reset by next plugging in the external power supply.)
2. The set will now operate normally.

**NOTES ON LASER DIODE EMISSION CHECK**

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe, from more than 30 cm away from the objective lens.

**Laser Diode Check Procedure**

The laser diode on this set will not emit unless the top panel is closed S802 (leaf SW type) is turned on. The laser diode will always emit even if focus search is not performed in service mode.

The laser diode is checked using the current value which flows to the laser diode inside the FOP.

**Procedure 1 (service mode or normal operation)**

Check the laser diode emission with the eye.

1. Open upper panel and turn S802 on as Fig. 5. (In service mode, this operation is not necessary.)
2. Press the ►|| key. (In service mode, this operation is not necessary.)
3. Observe the objective lens and confirm that the laser diode is emitting light. At this time, the laser diode goes on about 3 seconds due to focus search. If it does not, APC circuit or FOP is defective.


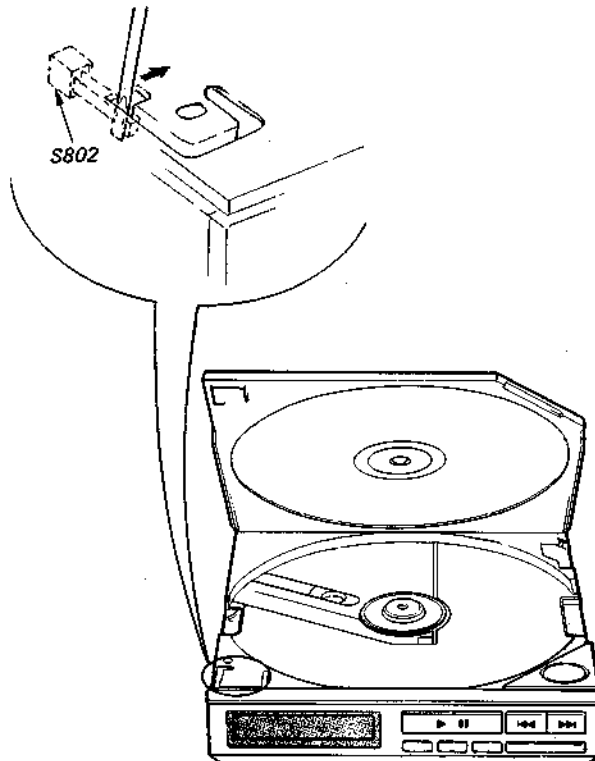


Fig. 5 Turning S802 on

**Procedure 2 (service mode or normal operation)**

Check by the current with flows in the laser diode.

1. Close the top panel.
2. Remove the main board and read the current value on the label affixed to the FOP. (Label on FOP)

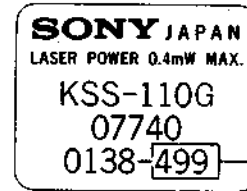

current value  
This means 49.9 mA.

The current value varies with the set.

3. Connect a VOM as shown in Fig. 6.
4. Press the ►|| key.
5. Calculate the current by the VOM reading.  $VOM \text{ reading (V)} \div 19.5 = \text{current (A)}$   
ex.  $VOM \text{ reading} = 0.97 \text{ V}$   
 $0.97 \div 19.5 = 0.0497 \text{ (A)} = 49.7 \text{ (mA)}$
6. Confirm that the ammeter reading is within the range given below.  
value on label  $\begin{matrix} +11 \\ -5 \end{matrix} \text{ mA (25}^\circ\text{C)}$   
variation relative to temperature:  
 $0.4 \text{ mA}/^\circ\text{C}$   
(Current increases when temperature rises and decreases when it drops.)

If the value is more than the range given, APC circuit has been defective or the laser diode has deteriorated. If it is less, APC circuit or FOP is defective.

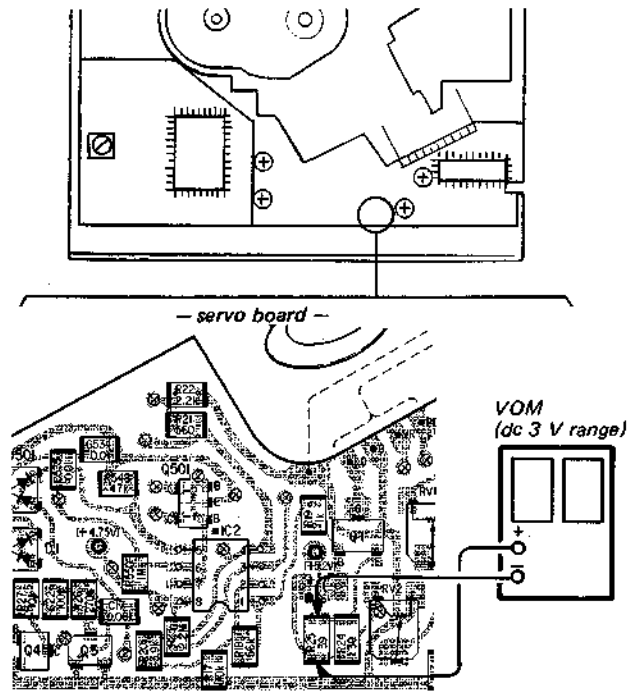


Fig. 6 VOM Connection

**CHARGE CIRCUIT CHECK**

1. Connect a 10 kΩ resistor as shown in Fig. A.  
(Between pin ① and pin ③ of battery terminal CNJ401.)
2. Supply 9 V dc through external power jack.
3. If the voltage of pin ② of CNJ401 is 7.3 V, charge circuit is normal.

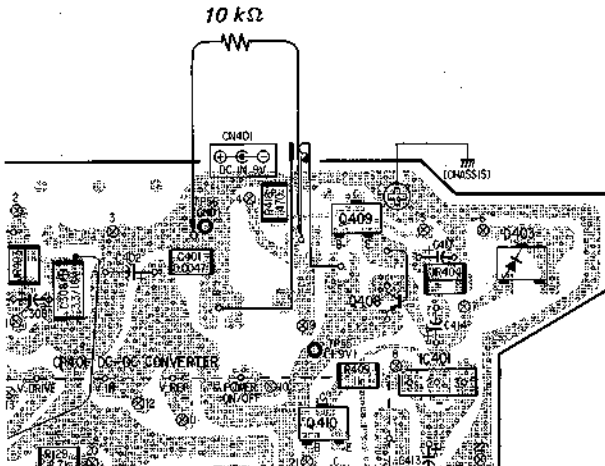


Fig. A Connection

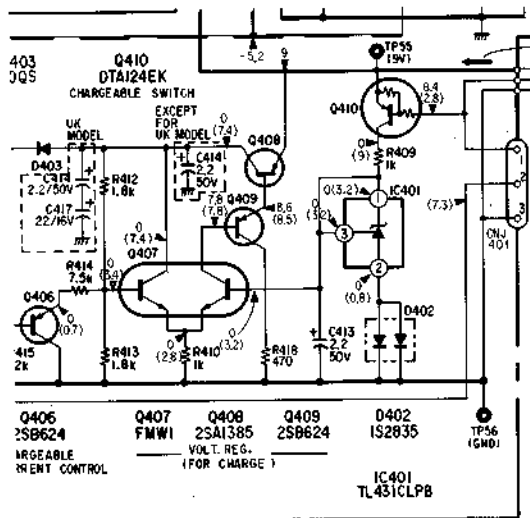


Fig. B Voltages of Each Part


- Power voltage is 9 V and fed with regulated dc power supply from DC IN 9 V (external power) jack.  
Readings are taken under so-signal conditions with a VOM (50 kΩ/V).  
no mark : stop condition in service mode.  
< > : stop condition on normal operation when FUNCTION SW is CD by connecting a 10 kΩ resistor between pin ① and pin ③ of CNJ401.
- Voltage variations may be noted due to normal production tolerances.

## POWER SOURCES

Power can be supplied to the set in any of the following ways.

Power source	Equipment required
House current (120V ac)	AC power adaptor (supplied)
Rechargeable battery	Sony BP-200 rechargeable battery pack (supplied)
Eight alkaline batteries size AA (IEC designation LR6)	Sony EBP-380 battery case (optional)
Car battery (12V)	Sony DCC-120 car battery cord (optional)

### HOUSE CURRENT

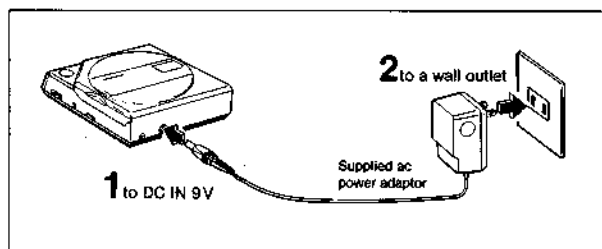


When the set is not used, be sure to disconnect the ac power adaptor.

**Note:** Use only the supplied ac power adaptor or the recommended car battery cord manufactured by Sony. Polarity of the plugs of other manufacturers may be different.




### RECHARGEABLE BATTERY PACK


To attach to the CD player

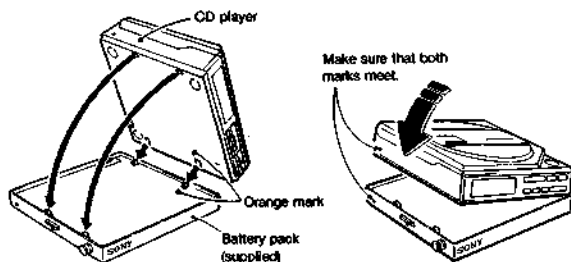

To remove the unit

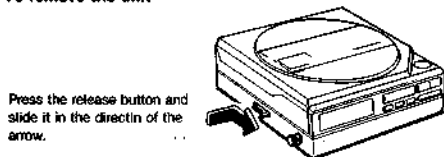

How to recharge the battery pack

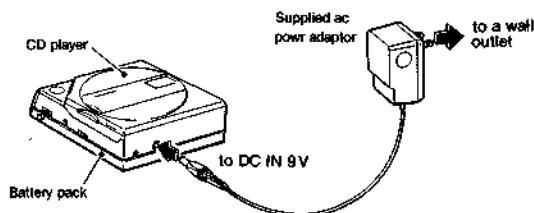

### Charging time

- Before using the battery pack for the first time, charge it for approx. eight hours.
- The unit charged for eight hours (completely charged) allows approx. 30 hours of radio reception and 4.5 hours of continuous disc playing.
- The unit charged for five hours (90% charged) allows approx. 25 hours of radio reception and four hours of continuous disc playing.

### Notes

- For charging, use only the ac power adaptor supplied with the CD player. If not, the player will be damaged.
- Do not recharge the battery pack or operate the connected CD player on car battery.
- The CD player can also be operated during charging. In this case, approx. 24 hours are necessary for a full charge. However, when the CD player does not operate normally, stop it and charge the unit for a while.
- While charging, the radio sound becomes noisy.
- Do not open the disc compartment lid while receiving an AM program. Otherwise, the station setting will be altered and must be tuned in again.


### Replacement

If the operating time of the CD player becomes shortened after it has been fully charged, change the unit. The unit can be recharged for approx. 200 times.

## OTHER POWER SOURCES

### BATTERIES

Insert eight alkaline batteries, size AA (IEC designation LR6), in the Sony EBP-380 battery case (optional) with correct polarity and attach the case to the player. Concerning battery life, see "Specifications" on page 1.

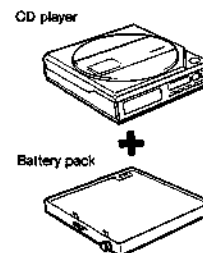


### 12V CAR BATTERY


Using the Sony DCC-120 car battery cord (optional), the DC IN 9V jack can be connected to the cigarette lighter socket of a car. You can listen to the disc through the connected to the PHONES jack, but not through the car stereo.

LOCATION AND FUNCTION OF CONTROLS


Front

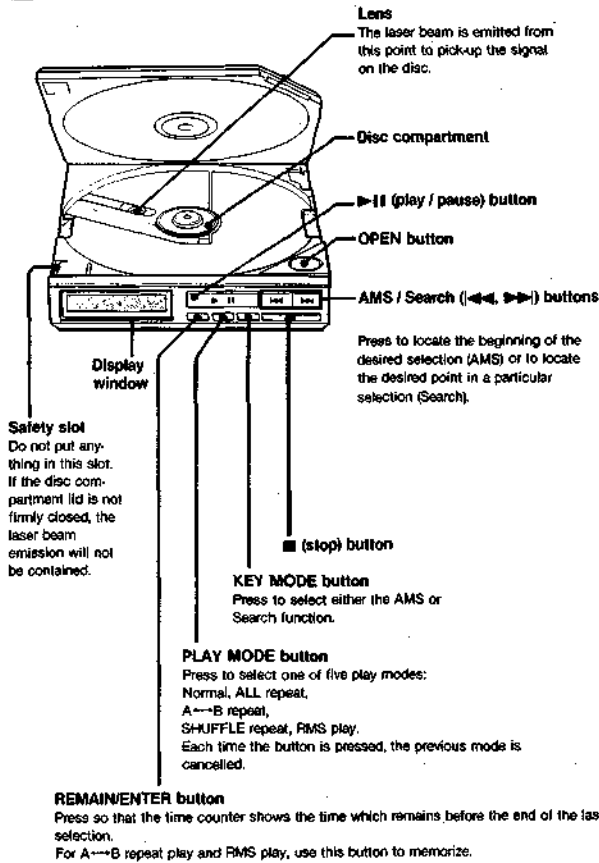


Display window

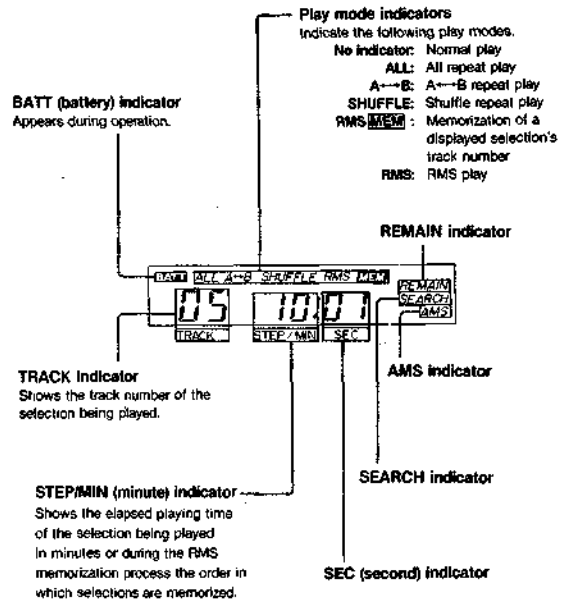


Right side

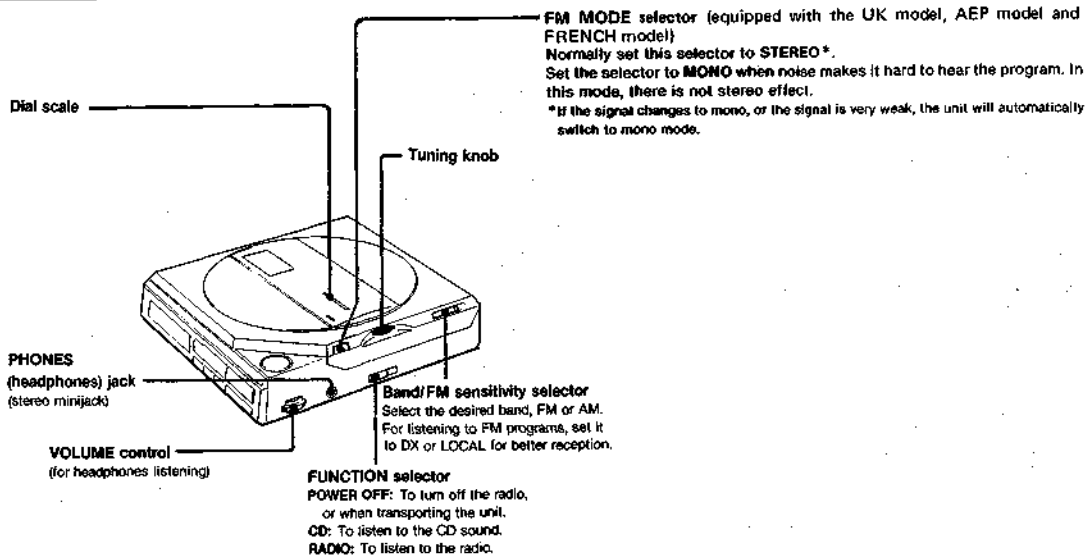

Rear panel

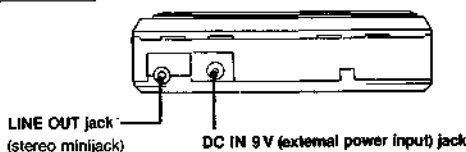

## RADIO RECEPTION

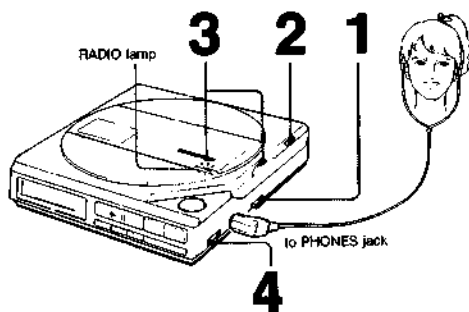

- 1 Set the **FUNCTION** selector to **RADIO**.
  - 2 Select the desired band, **FM** or **AM**.
  - 3 Tune in the desired station.
  - 4 Adjust the headphones volume.
- To turn off the radio, set the **FUNCTION** selector to **POWER OFF**.

### FOR IMPROVED RECEPTION

#### Band / FM sensitivity selector

While listening to FM programs, normally set to FM DX. If a very strong station signal causes noise, set to LOCAL. The noise will be reduced.


#### For stable receptions

For FM reception, extend the cord of the headphones or the connecting cord so that the sensitivity will be increased. The cord activates as an antenna.  
For AM reception, the built-in ferrite bar antenna activates. Move the set for optimum reception.

#### If excessive noise or interruption occurs...

Keep the **▶||** button pressed.  
While pressing the button, no sound can be heard.

## DISC PLAYING

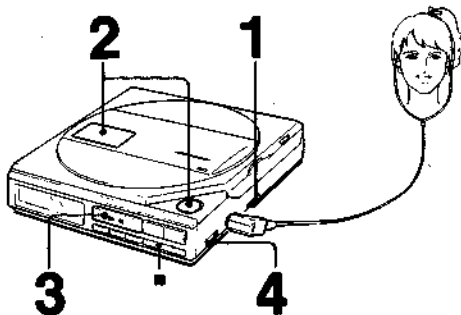

- 1 Set the **FUNCTION** selector to **CD**.
- 2 Press the **OPEN** button and insert a compact disc with the label surface up. Close the disc compartment lid.
- 3 Press the **▶||** button.  
Play will start from the beginning of the disc.
- 4 Adjust the headphones volume.

When the player reaches the end of the last selection of the disc, the indications on the display window will disappear and the disc will stop rotating.

#### To stop play


Press the **■** button.  
The disc stops rotating and power will be automatically turned off.

#### To pause during play

Press the **▶||** button.  
The time counter on the display will blink.  
To restart the play, press the **▶||** button again.

**Note:** Do not press the **▶||** button when there is no disc inserted, as it may cause severe noise.

#### Display window during play




Track number Elapsed playing time of the selection being played.

## TO SEARCH FOR A PARTICULAR SELECTION

### —AMS function

During play or pause, proceed as follows.

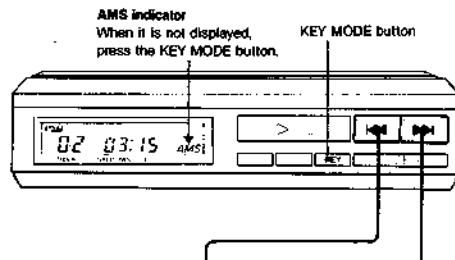


**To search for a previous selection**  
Press the **◀◀** button once to search for the beginning of the selection being played.  
Press continuously to search for a previous selection.

**To search for a selection ahead**  
Press the **▶▶** button once to search for the next selection.  
Press continuously to search for the selection after that.  
After the last selection the **TRACK** indicator will not change.

- In the pause mode press the **◀◀** or **▶▶** button while observing the **TRACK** indicator on the display. The player pauses at the beginning of the desired selection.
- During **RMS** play, **AMS** operates in the memorized order.

## TO SEARCH FOR A PARTICULAR POINT IN A SELECTION —SEARCH function

During play or pause, proceed as follows.

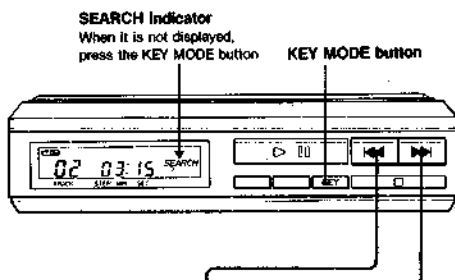

**To go back at a high speed**  
Keep the **◀◀** button pressed.  
Monitoring the high speed sound to locate the desired point, release the button to restart the play.

**To go ahead at a high speed**  
Keep the **▶▶** button pressed.  
Monitoring the high speed sound to locate the desired point, release the button to restart the play.

#### In pause mode

- The search speed is higher than during play.
- Locate the desired point by observing the time counter on the display as there is no sound to be heard.
- Press the **▶||** button to restart the play.

#### What are these indications?




This appears if you continuously press the **▶▶** button at the end of the disc. To return to a **TRACK** indication, press the **◀◀** button.




This appears if you continuously press the **◀◀** button at the beginning of the disc.

**REPEAT PLAY**

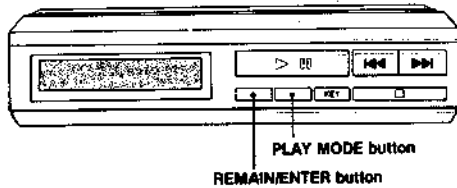

**TO REPEAT THE WHOLE DISC —All repeat play**

During play or pause, press the **PLAY MODE** button repeatedly until the **ALL** indicator appears on the display window.




When the disc reaches the end of the last selection, the player will automatically go back to the beginning of the first selection, and play will restart.

To release, press the **■** button.


**TO REPEAT PLAY BETWEEN TWO DESIGNATED POINTS —A→B repeat play**

—A→B repeat play


**1** During play or pause, press the **PLAY MODE** button repeatedly until the **A** indicator appears on the display window.



**2** Press the **REPEAT/ENTER** button to locate the starting point of the repeat play (point A) using the **AMS** or **Search** function. Point A is memorized.



**3** Locate the stopping point (point B) and press the **REPEAT/ENTER** button.



The disc goes back to point A and play starts. If in pause mode press the **▶||** button to start the play.


To release, press the **■** button.

**To repeat only one selection**

Memorize the beginning of the selection to be repeated as point A and the beginning of the next selection as point B.

Repeat play of the last selection of the disc cannot be done this way. Use the **Search** function (refer to "A → B repeat play").

**TO PLAY THE SELECTIONS IN A RANDOM ORDER —Shuffle repeat play\***

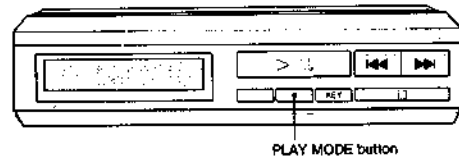

During play or pause, press the **PLAY MODE** button repeatedly until the **SHUFFLE** indicator appears on the display window. Shuffle play starts from the following selection.



Track number

To release, press the **■** button.


\*In this mode, there is no way of knowing which selection will be played next. After all of the selections on the disc have been played in a random order, they are reshuffled.

**AMS and Search operation during shuffle play**

Indicator	Operation	Press <b>◀◀</b>	Press <b>▶▶</b>
<b>AMS</b>		Beginning of the selection being played*	Beginning of the following selection
<b>SEARCH</b>		Searches backwards*	Searches forward

\*You cannot return to the previous selection. When the unit reaches the beginning of the selection being played, play starts automatically.

**TO PLAY THE DESIRED SELECTIONS IN THE DESIRED ORDER —RMS play**

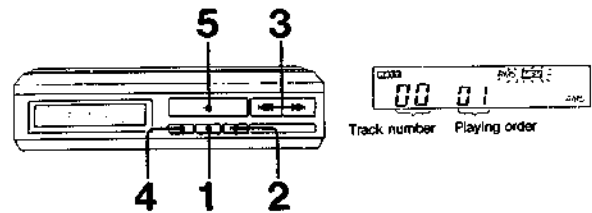

**1** During play or pause, press the **PLAY MODE** button repeatedly until the **RMS** **MEM** indicator appears on the display window. The **STEPMIN** indicator shows 01.

**2** Press the **KEY MODE** button so that the **AMS** indicator appears.

**3** Press the **◀◀** or **▶▶** button and locate the beginning of the desired selection by observing the **TRACK** indicator on the display.

**4** Press the **REPEAT/ENTER** button. The selection shown by the **TRACK** indicator is memorized as the first selection and the **STEPMIN** indicator changes to 02.

Repeat steps 3 and 4 to memorize up to 15 other selections.

**5** Press the **▶||** button. The selections are played in the memorized order.

To release, press the **■** button.

- Notes**
- When 16 selections have been memorized, the **STEPMIN** indicator will return to 01. If you continue to memorize other selections, the previous selection memorized will be cleared and the new one memorized in its place.
  - As the **RMS** searches for the next memorized selection very quickly, there may be little blank space between selections. When the selections played with the **RMS** feature are recorded on the tape, the **AMS** function of the cassette player may not be activated.

## SECTION 1 OUTLINE

### USING THE TIME COUNTER


Each time the REMAIN/ENTER button is pressed, the display shows the elapsed playing time or the remaining playing time.

#### TO MONITOR THE ELAPSED PLAYING TIME

Generally, the time counter shows the elapsed playing time from the beginning of the selection in minutes and seconds.

When a new selection starts, the counter is reset to "00:00" and then starts counting again.


If the selection has a blank space at its beginning, the counter is reset to negative number such as "-00:02" or "-00:01".



Shows 1 minute 17 seconds have elapsed from the beginning of the fifth selection.

#### TO MONITOR THE REMAINING PLAYING TIME

Press the REMAIN/ENTER button. The counter shows the remaining number of selections and the remaining time, each preceded by a minus.

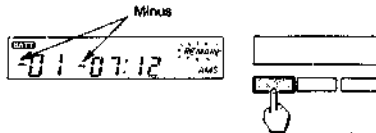

Shows 1 selection and 7 minutes and 12 seconds are remaining before the end of the disc.

Note: During repeat play and shuffle play the counter shows the remaining selections and time as if the player is in the normal playing mode, rather than those actually remaining.

When the REMAIN/ENTER button is pressed during RMS play, "----" appears on the display.

### 1-1. CIRCUIT DESCRIPTION

#### [SYSTEM CONTROL 4-BIT MICROCOMPUTER]

Table 1 explains the ports and Fig. 7 is the program flow chart. When power is applied to the set, a RST signal is applied to the microcomputer and the program starts. First judgement is made whether to go to service mode. (Service mode is explained on page 7 - 9.) When it goes to a regular mode, clock oscillation is stopped, stand-by occurs, and waiting for PB/PAUSE input results. Clock oscillation is stopped for saving power consumption.

When the PB/PAUSE button is pressed, the program continues on to the main routine, and continues running on the main loop until the STOP button is pressed or until some kind of trouble causes emergency stop to be generated.

The SUB-Q signal is applied to the serial data input port (SI), WFCK to the shift clock input (SC) and SCOR to external interrupt input port ( $\overline{IRQ}$ ), and SUB-Q is read into the RAM by the interrupt processing routine in the main loop.

The following are the three types of interrupt processing:

- (1) External interrupt: by SCOR (75 Hz)
- (2) Timer/Counter overflow interrupt: by built-in counter (50 Hz)
- (3) Serial Buffer F/E (FULL/EMPTY) interrupt: executed when 4 bits of SUB-Q accumulate

Priority order is by number, in order from the lowest, and interrupt begins from high priority interrupt after the currently executed command is completed. On this set, first the loop turns at 50 Hz (20 msec) by interrupt (2) until servo is applied. Then when SUB-Q can be read in, interrupt (1) causes the loop to turn at 75 Hz (13.3 msec). Then SUB-Q 4 bit processing (sent from register to RAM) is performed at approximately 600  $\mu$ sec cycles by interrupt (3).

The above is an outline of the program. The main program features are listed below.

- (1) Focus search is done 3 times.
- (2) For normal STOP, FOP is not stopped above the TOC area as before, but at music data area near the innermost circumference. For emergency stop due to OPEN or BATT EMP, it stops right away, where it is. During PLAY, the FOP searches for TOC and reads it, then begins playback.
- (3) Search operation (music search) is done by performing 1 track jump three times in a row.
- (4) Service program is built-in. (Refer to next chapter.)
- (5) FZC (Focus Zero Cross) is only detected when the lens goes up.



Table 1 Pin Functions

Pin No.	Port Name	Signal Name	I/O	Function
1	R2	———	———	Not used.
2	R3	MUTE	OUTPUT	Muting signal output pin. CX23035 (IC601), LINE output and HEADPHONE output are muted mode at "H".
3	R0	$\overline{\text{BATT-E}}$	INPUT	Normal operation: Battery down signal input pin. When this pin goes "L", it detects running out of the battery. Service mode: This input pin switches the operation mode on the set. Goes from normal mode to service mode when RST input is supplied at "L".
4	R1	$\overline{\text{BATT-W}}$	INPUT	Battery voltage reduction input pin. When power supply voltage is less than 5.9 V, "L" is input
5	SC	WFCK	INPUT	Shift-clock input pin of serial I/O (SI). This is a clock signal to read SUB-Q signal. WFCK is input from CX23035 (IC601).
6	NC	———	———	Not used.
7	TC	CRCF	INPUT	This pin inputs the result of CRC of SUB-Q from CX23035 (IC601), and judges if there is no error in SUB-Q signal read at WFCK. "H": correct "L": error
8	S1	SUB-Q	INPUT	Serial I/O data input pin. SUB-Q signal (information about the music address and emphasis, etc.) is input.
9	R12	$\overline{\text{S-LIMIT}}$	INPUT	Limit switch (S801) input pin. When this pin inputs "L", detects FOP reaching the inner most circumference.
10	R13	$\overline{\text{S-OPEN}}$	INPUT	OPEN/CLOSE switch (S802) input pin. When this pin inputs "L", detects that the upper panel is open.
11	R14	$\overline{\text{STOP}}$	INPUT	■ switch input pin. This pin detects fall of input and goes to the set stand-by mode.
12	R15	$\overline{\text{FR}}$	INPUT	◀◀ switch (S808) input pin.
13	K0	$\overline{\text{FF}}$	INPUT	▶▶ switch (S807) input pin.
14	K1	$\overline{\text{PB/PAUSE}}$	INPUT	▶■ switch (S806) input pin.
15	K2	$\overline{\text{K-MODE}}$	INPUT	AMS/SEARCH switch (S805) input pin.
16	K3	$\overline{\text{REM/ENT}}$	INPUT	REM/ENT switch (S804) input pin.
17	R8	SENSE	INPUT	Input pin of SENSE output of CX23035 (IC601) and, CXA1023M (IC501). When forwarding serial data to CXA1023M, the signal which monitors the mode of the specified servo circuit is input.
18	R9	FOK	INPUT	Focus servo permission input pin. This pin detects the focus at "L".
19	R10	GFS	INPUT	Input pin of Guarded Frame Sync of CX23035 (IC601) "L" is input when CX23035 reads the data of the disc correctly.
20	S0	$\overline{\text{P-MODE}}$	INPUT	PLAY MODE switch (S803) input pin.

Pin No.	Port Name	Signal Name	I/O	Function
21	R4	LATCH	OUTPUT	When forwarding the serial data to CX23035 (IC601) and CXA1023M (IC501), LATCH signal is input.
22	R5	$\overline{\text{CLOCK}}$	OUTPUT	When forwarding the serial data to CX23035 (IC601) and CXA1023M (IC501), CLOCK signal is input.
23	R6	DATA	OUTPUT	Serial data output pin to CX23035 (IC601) and CXA1023M (IC501).
24	R7	$\overline{\text{DIRECT}}$	OUTPUT	Output pin to CXA1023M (IC501) at 1-track jump. Normally "H". The direction of jump level is reversed at "L". Next, normal tracking mode is set by going to "L". This pin outputs "L" for a limited time when detecting TZC (Tracking Zero Cross) rise or fall.
25	Vss	Vss	————	Ground pin
26	P2	————	————	Not used.
27	P3	$\overline{\text{RESET}}$	OUTPUT	CX23035 (IC601) and CXA1023M (IC501) reset signal output pin. Each IC is reset by outputting "L".
28	P1	MATT	OUTPUT	This output pin maintains inert motor rotation. This pin outputs "H" during the interval from motor begins turning to FOP focus.
29	R11	PEN	OUTPUT	Emphasis switching output pin of analog circuit. This pin outputs due to an emphasis signal in SUB-Q signal, and switches the analog circuit.
30	P0	$\overline{\text{P-CON}}$	OUTPUT	This output pin controls power ON/OFF. "L": Power ON      "H": Power OFF
31   50	SEG19   SEG0	SEG19   SEG0	OUTPUT	Segment output pin.
51   54	COM3   COM1	COM3   COM1	OUTPUT	Common output pin (4 partition display).
55   57	V0 V1 V2	V0 V1 V2	OUTPUT	Power supply pin for LCD bias.
58	Vcc	Vcc	————	Power supply pin.
59	$\overline{\text{VL}}$	$\overline{\text{VL}}$	OUTPUT	This control pin cuts off the current flowing to LCD bias resistor in stand-by mode.
60	XTAL	XTAL	OUTPUT	Output pin for clock generation circuit.
61	EXTAL	EXTAL	INPUT	Input pin for clock generation circuit.
62	$\overline{\text{RST}}$	$\overline{\text{RST}}$	INPUT	External reset signal input pin. This set is reset at "L".
63	START	START	INPUT	This pin cancels the stand-by mode on the set. The stand-by mode is canceled by rising ( $\uparrow$ ) of input.
64	$\overline{\text{IRQ}}$	$\overline{\text{SCOR}}$	INPUT	Interrupt input pin. SCOR (sync signal with SUB-Q) is input from CX23035 (IC601) and detects the tip of SUB-Q signal by detecting fall ( $\downarrow$ ) of input.



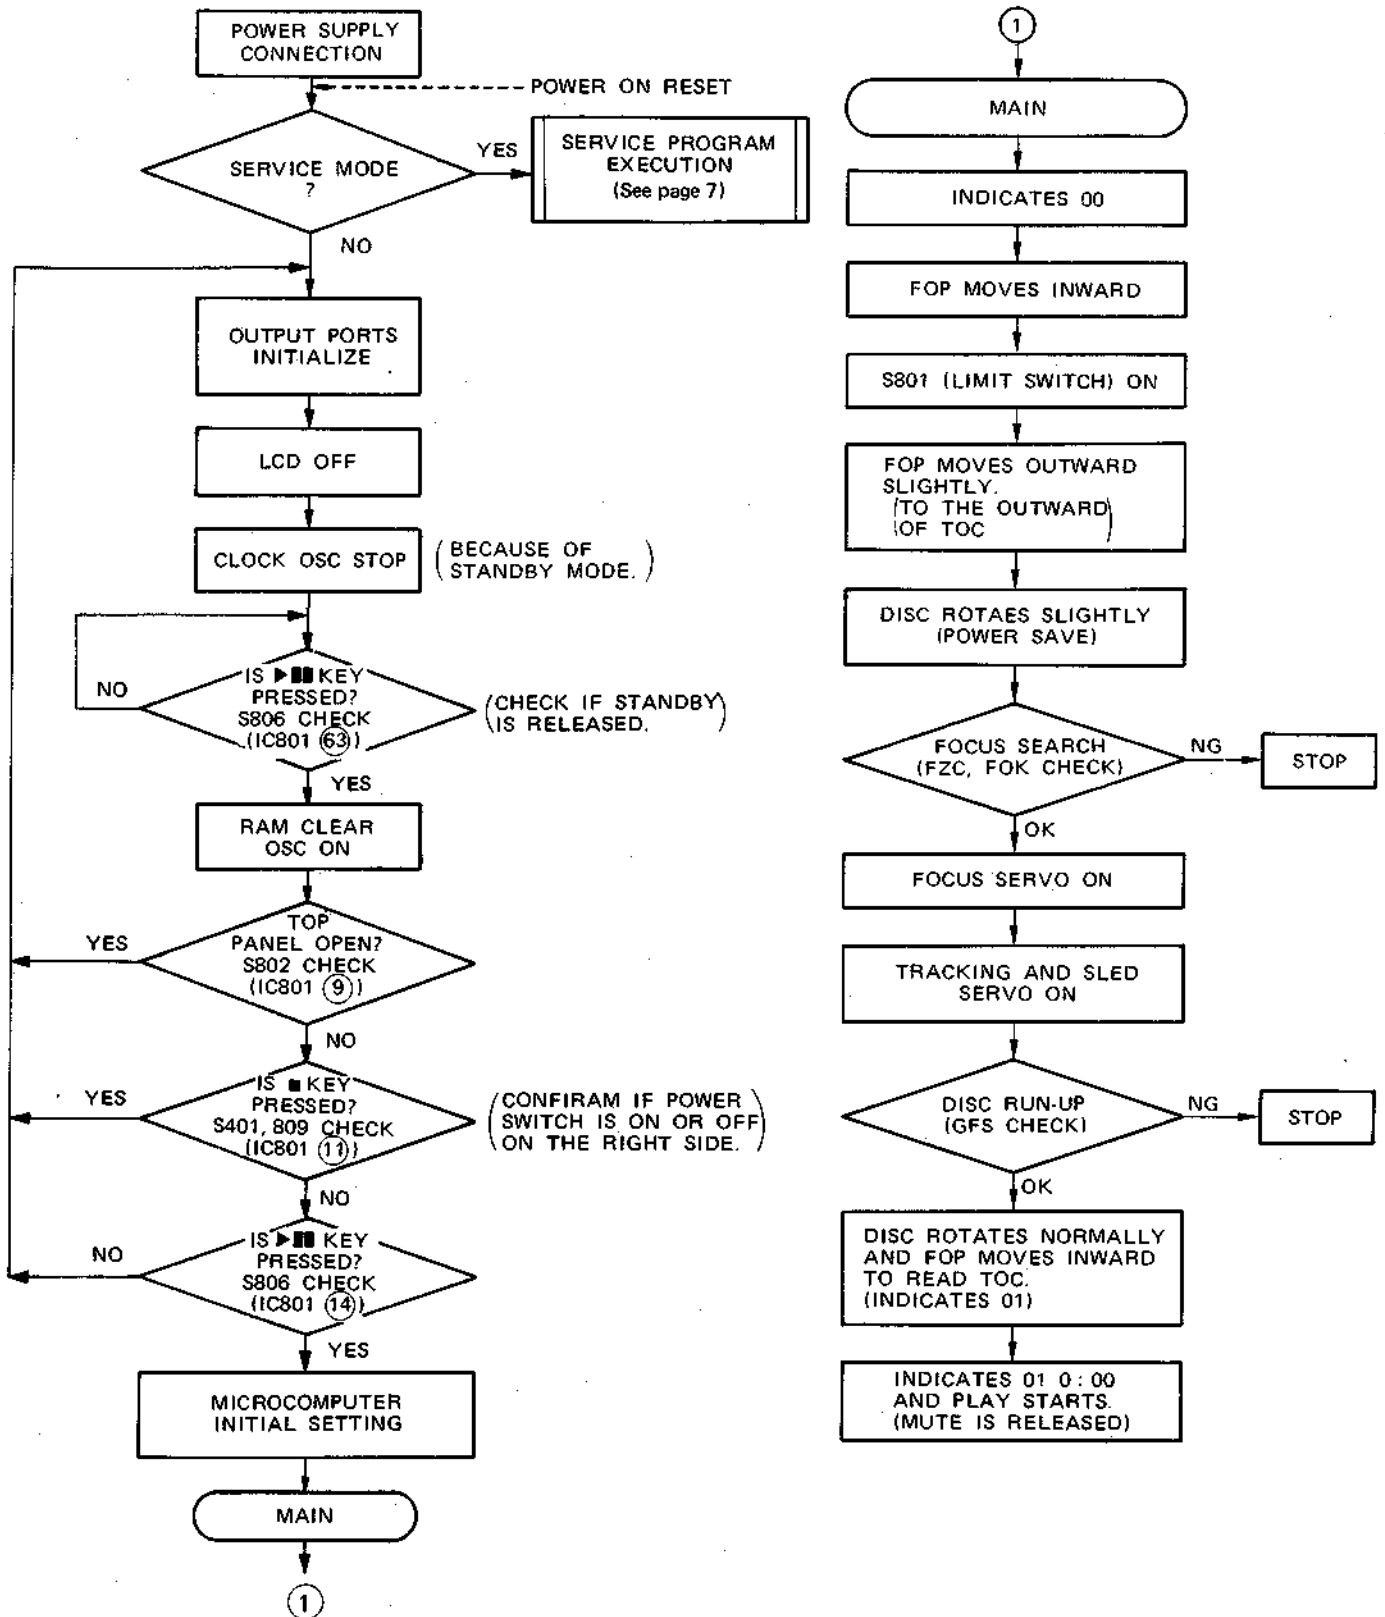


Fig. 7 Program Flow Chart

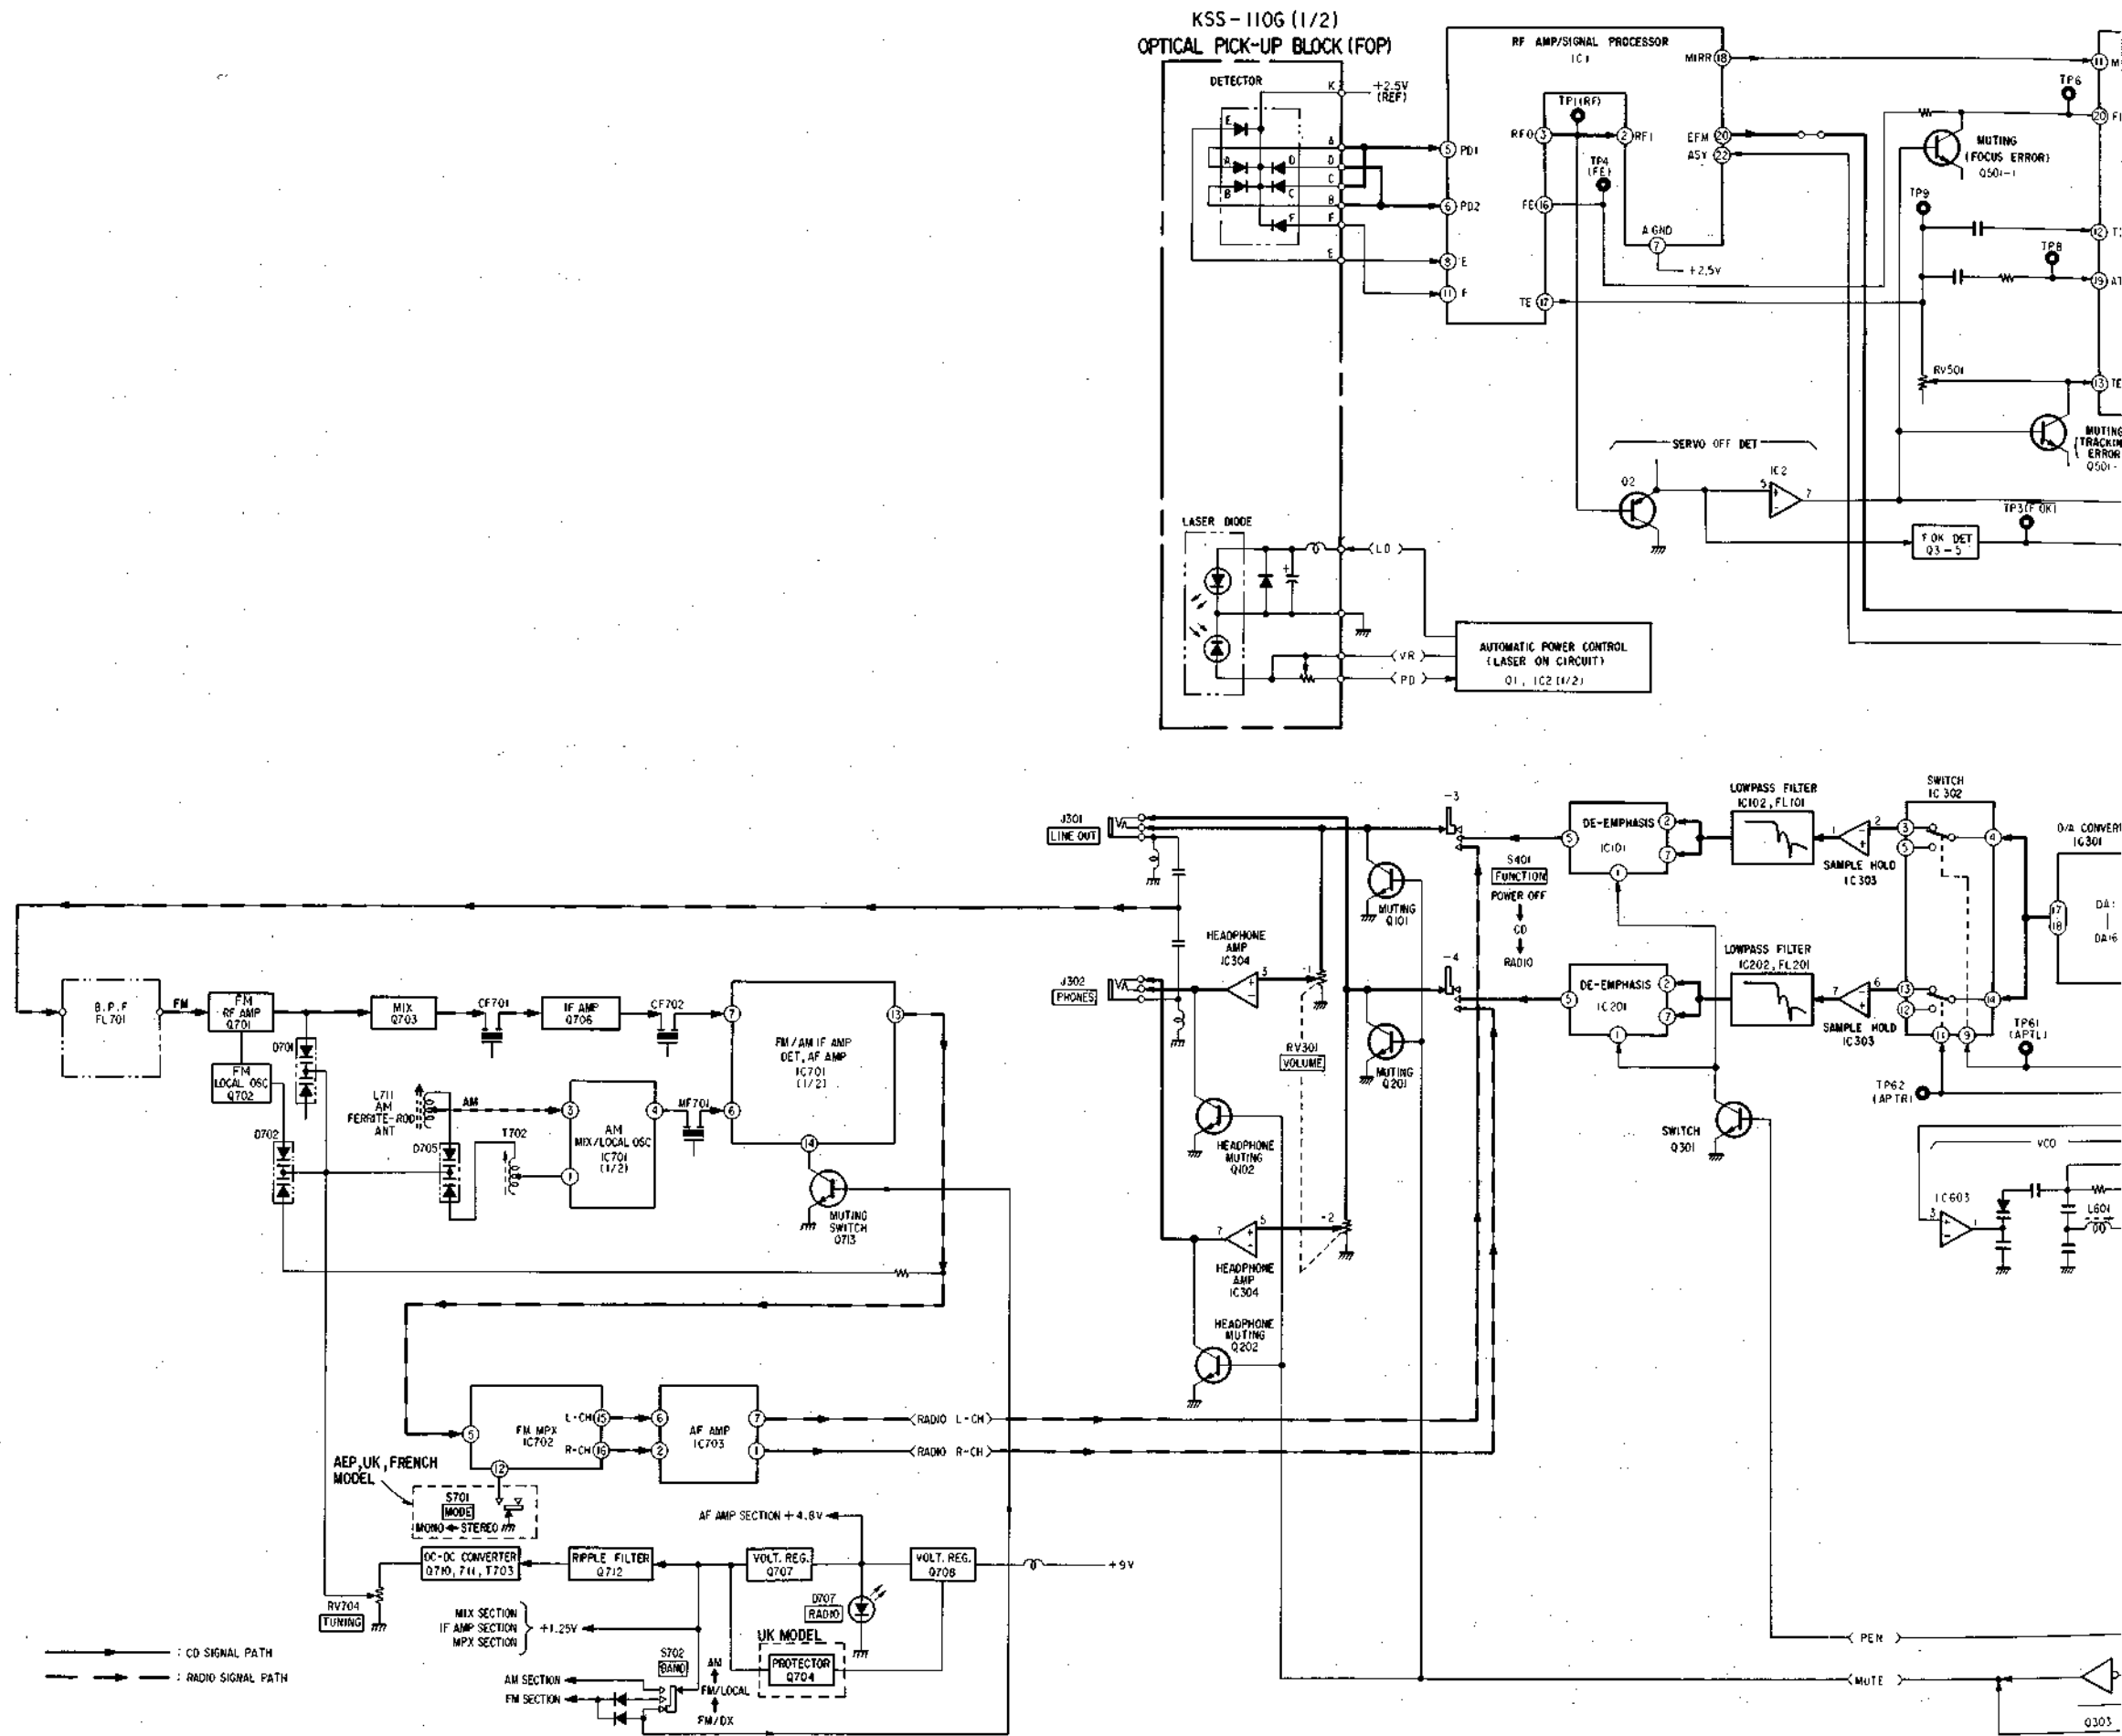

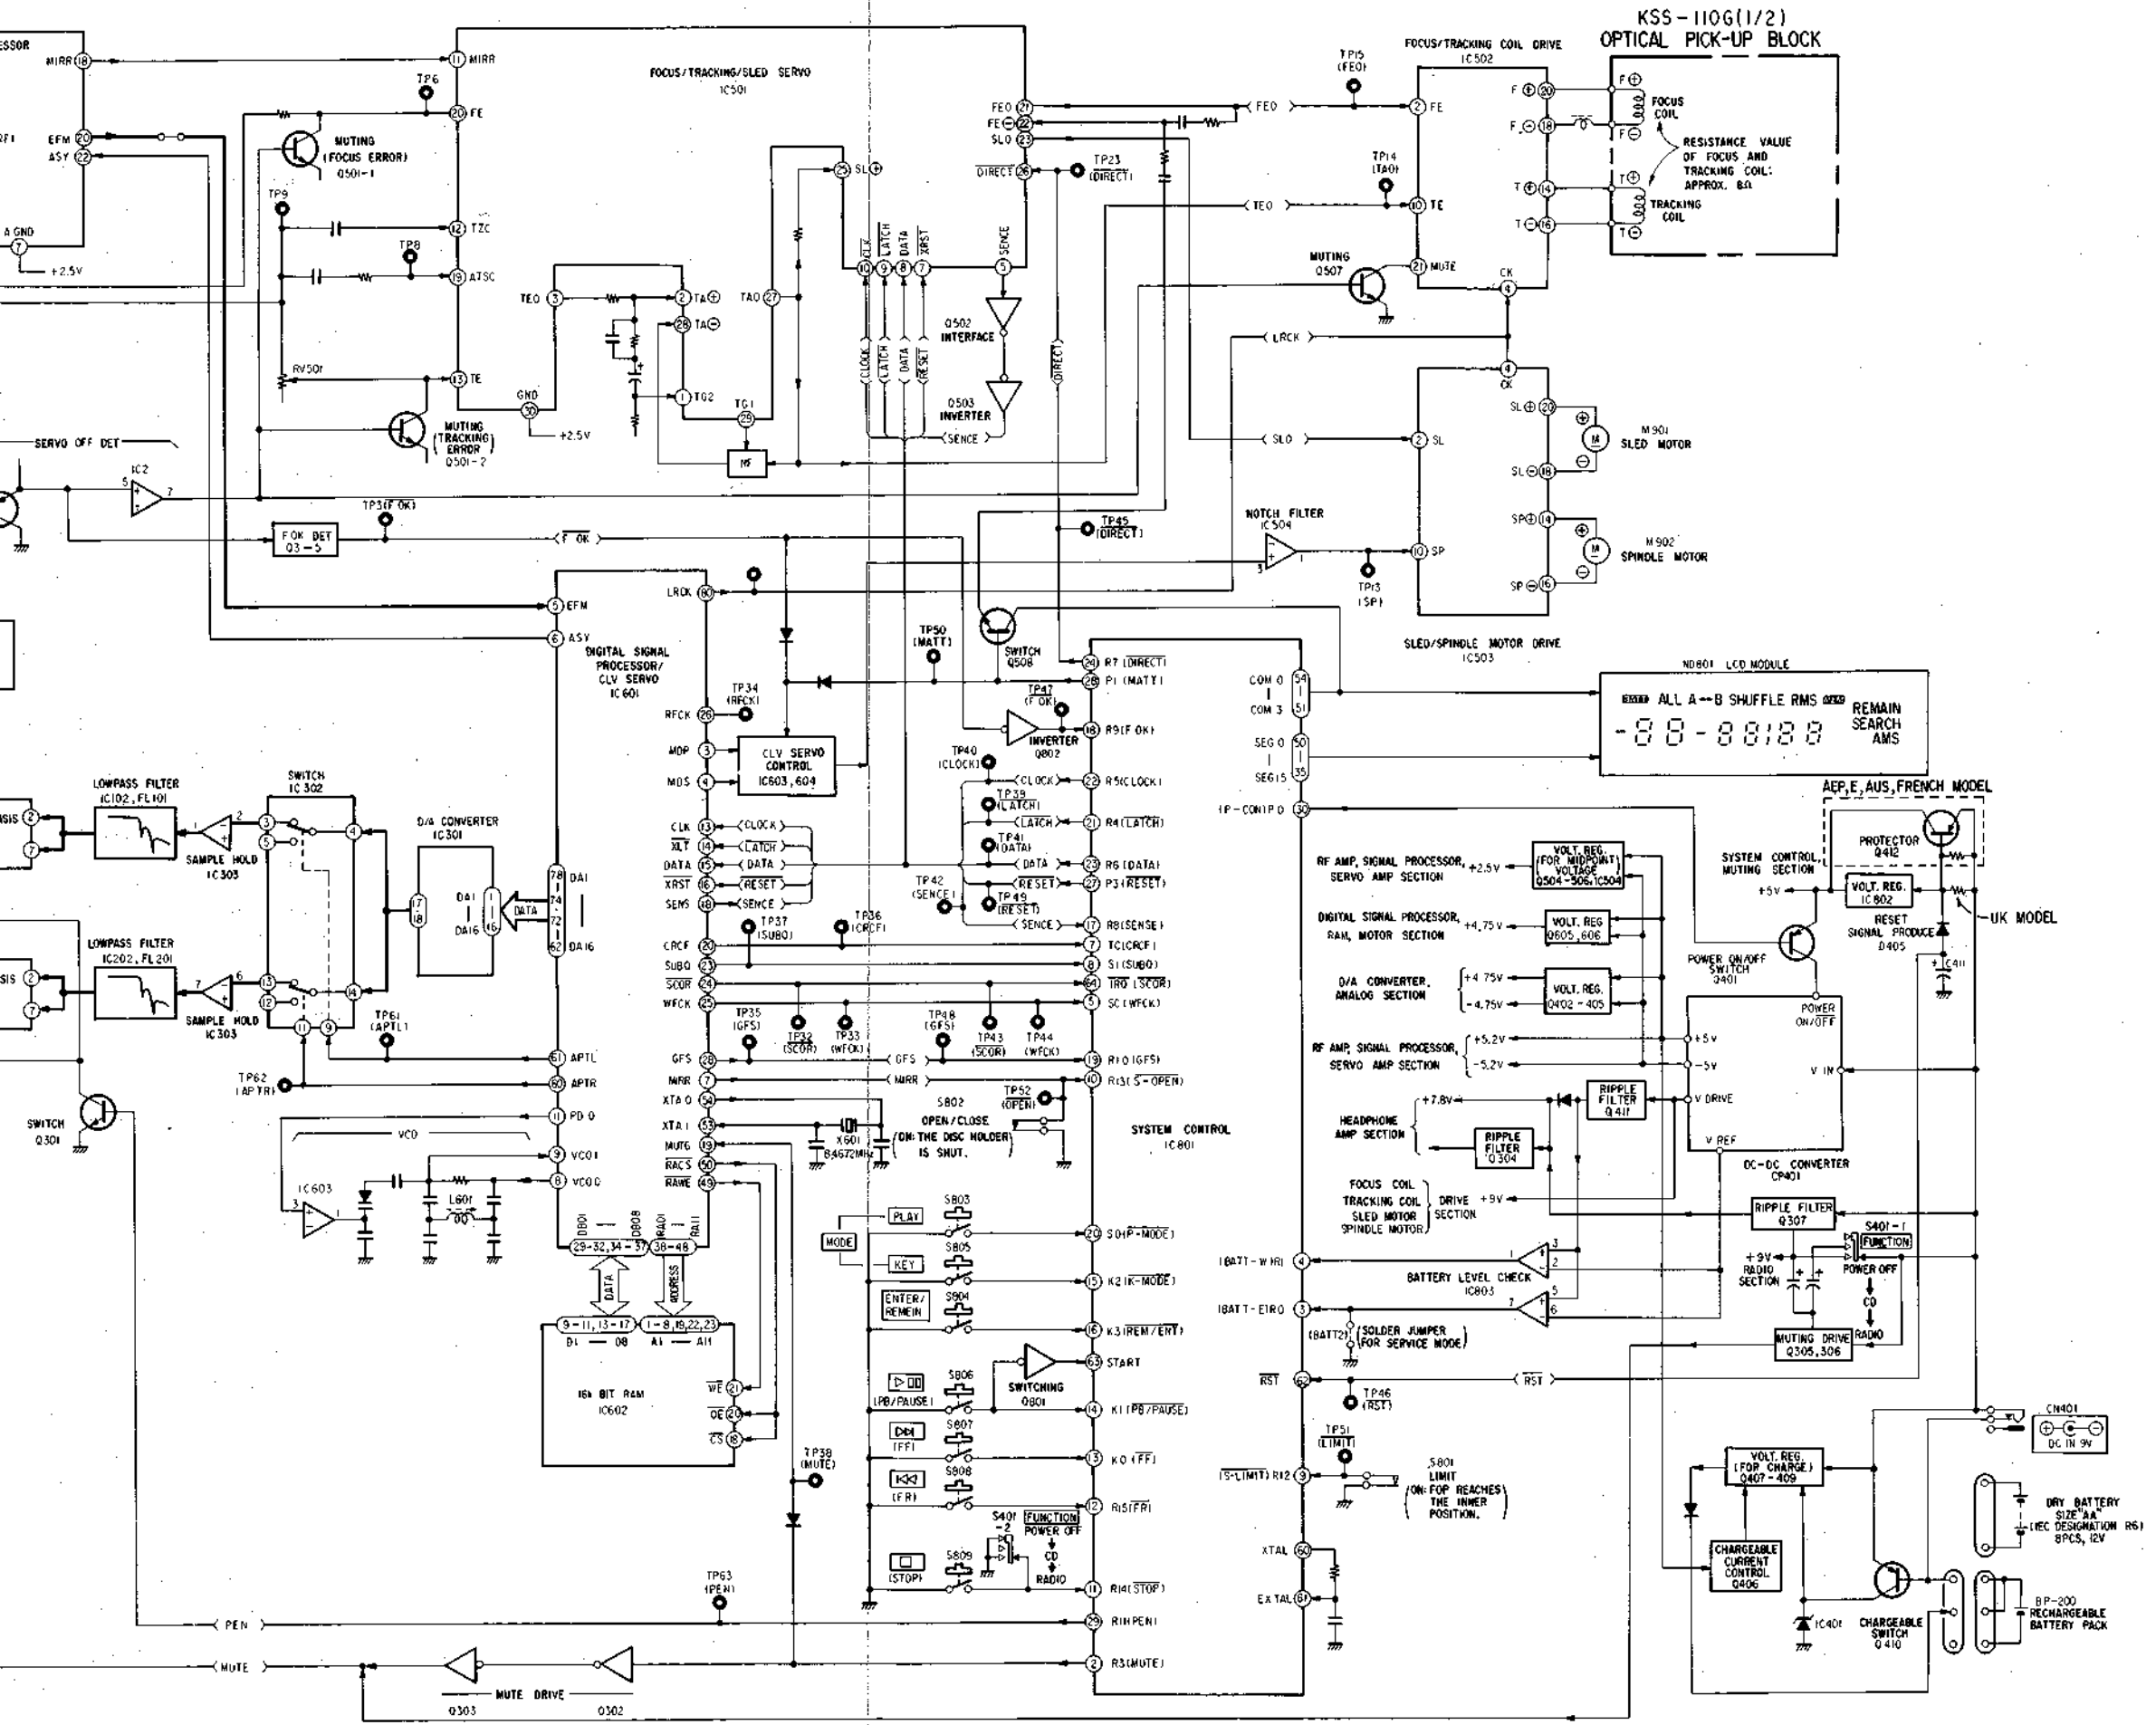


SECTION 2  
DISASSEMBLY AND REASSEMBLY


Note: Follow the disassembly procedure in the numerical order given.

2-1. DISASSEMBLY


BOTTOM PANEL

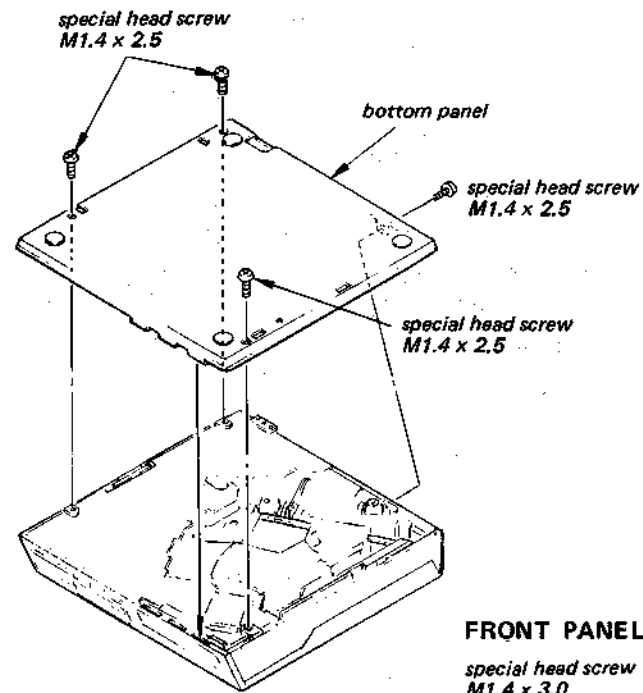


FRONT PANEL

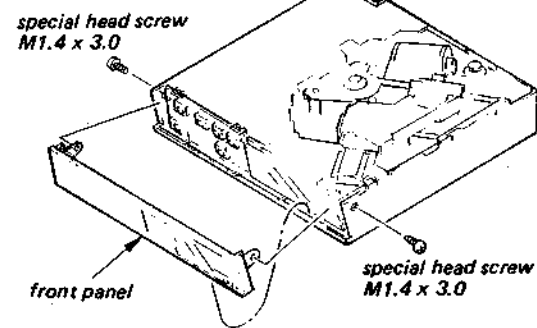


TU COVER

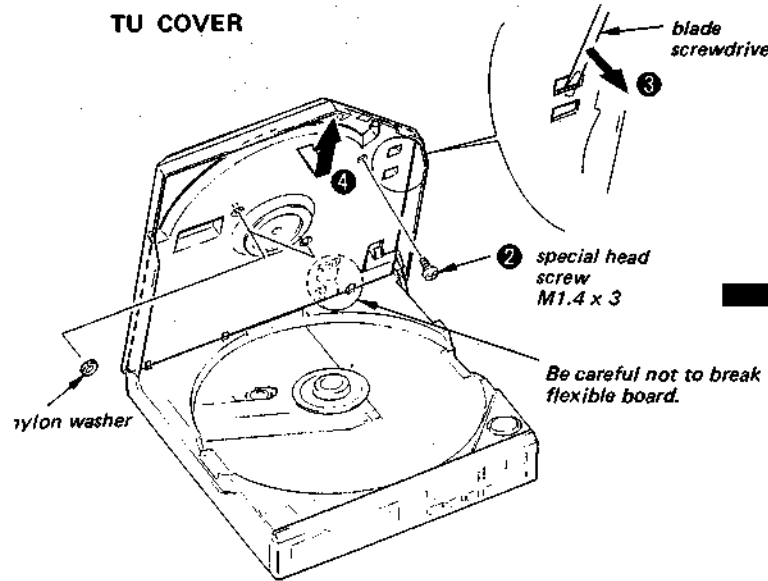


UPPER PANEL

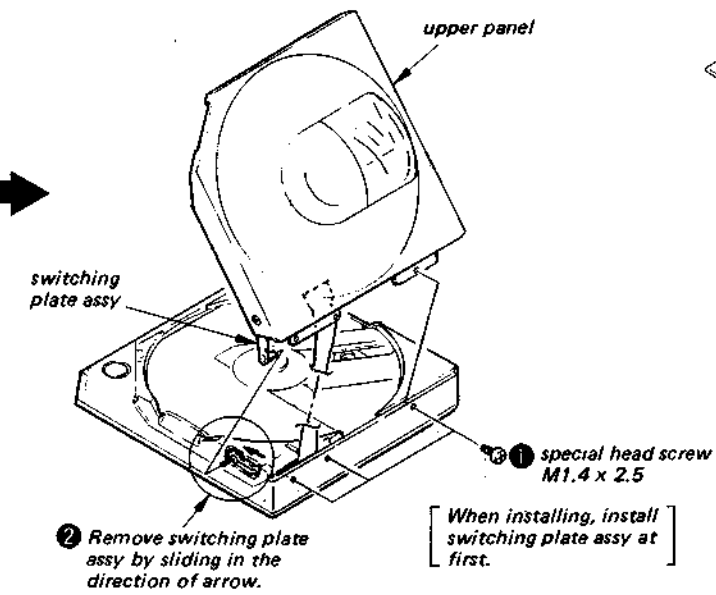


MAIN BOARD AND SW BOARD

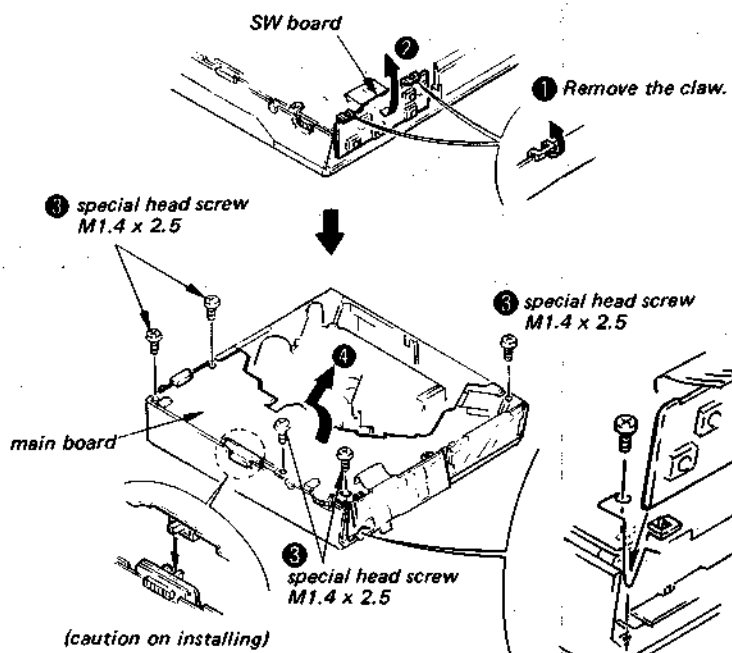

CABINET

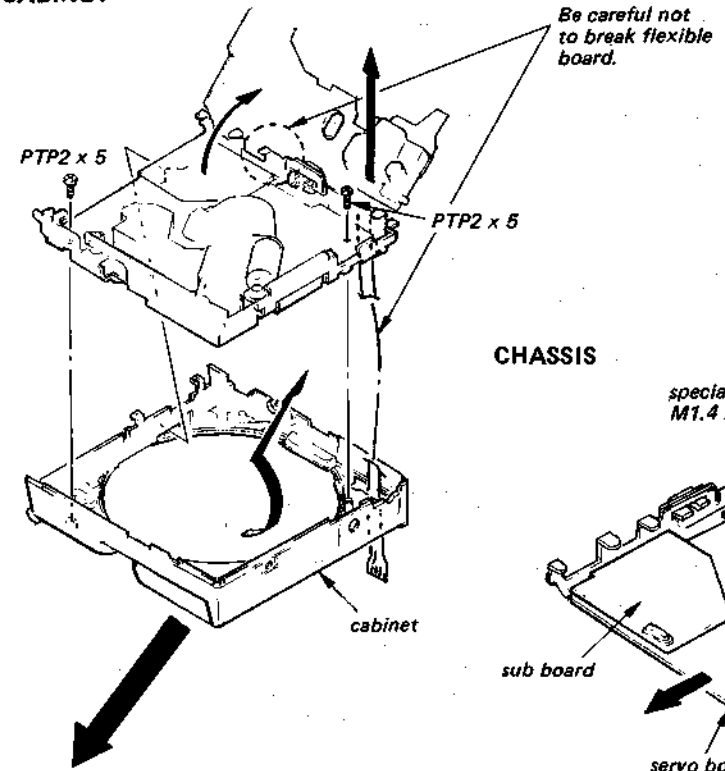


CHASSIS

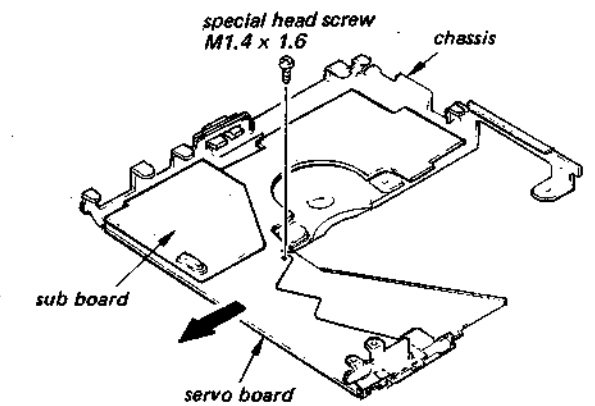


MECHANICAL SECTION

Note: Be careful not to break flexible board. If it is broken, FOP should be replaced.

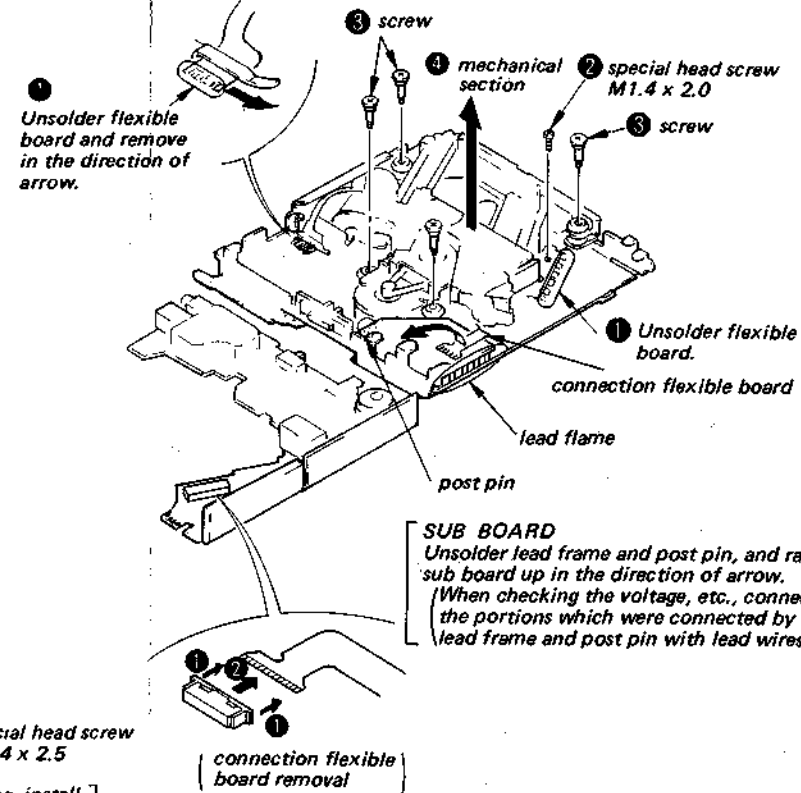


MD COVER AND INSULATOR

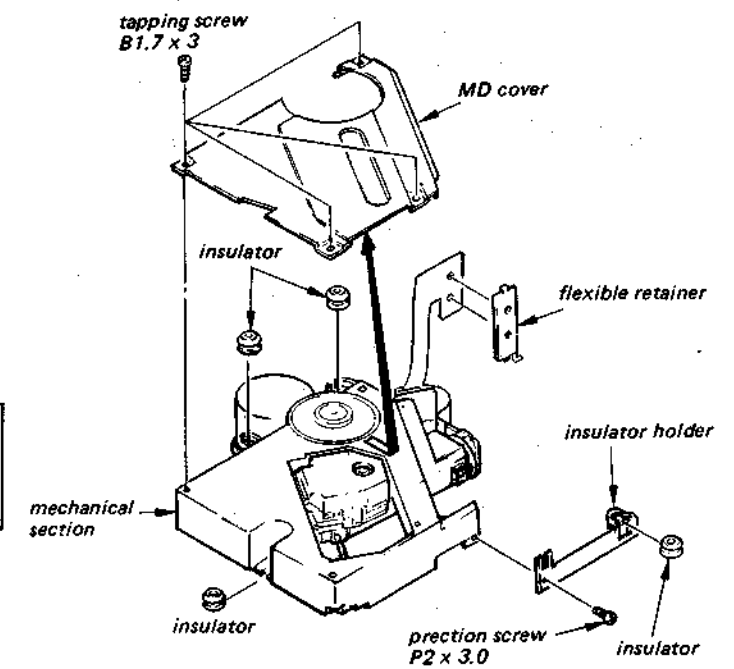


Refer to NOTE ON HANDLING THE OPTICAL PICK-UP BLOCK (KSS-110G) on page 3.

Refer to NOTE ON HANDLING THE OPTICAL PICK-UP BLOCK (KSS-110G) on page 3.

2-2. MECHANICAL SECTION REASSEMBLY  
SPINDLE MOTOR SECTION

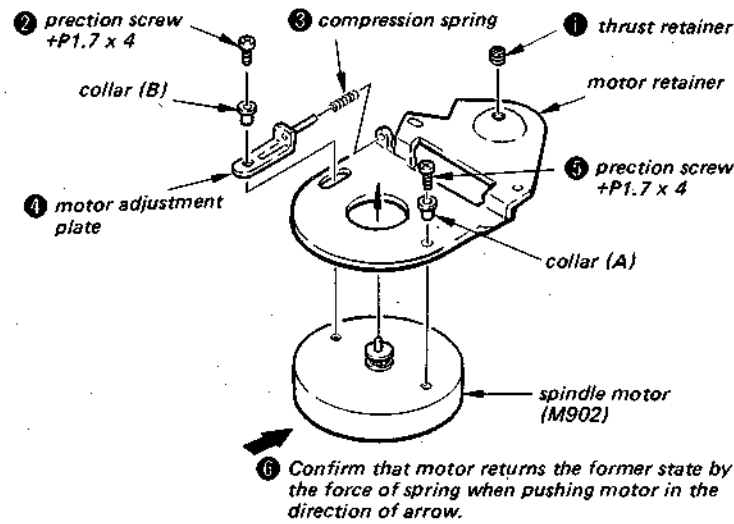


⑥ Confirm that motor returns the former state by the force of spring when pushing motor in the direction of arrow.

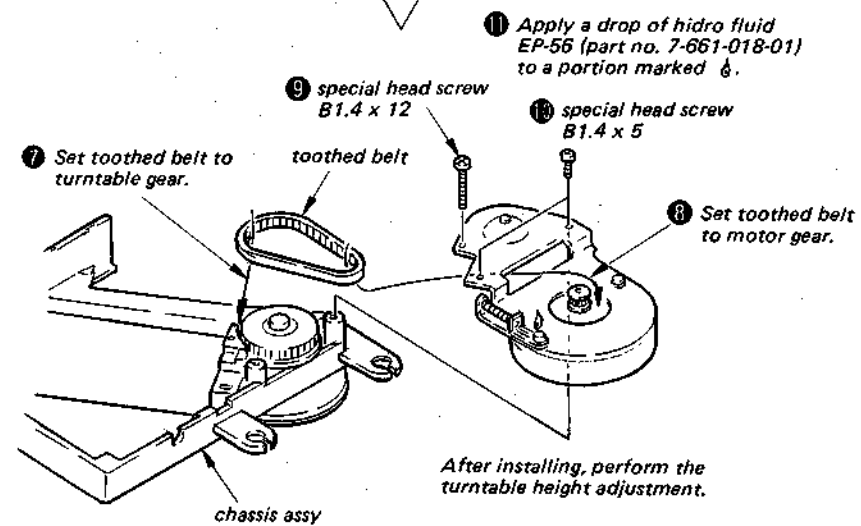


After installing, perform the turntable height adjustment.

SHAFTS A, B

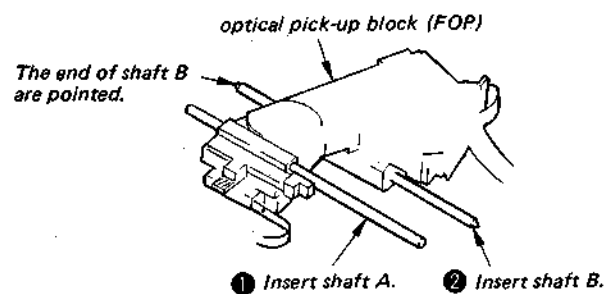

- ① Tighten retainers A, B, C, D with respective screws temporarily.
- ② Tighten retainer A firmly.
- ③ Tighten retainers firmly in order of B, C, D.
- ④ Lock the screws with locking compound.


FLEXIBLE BOARD ARRANGEMENT

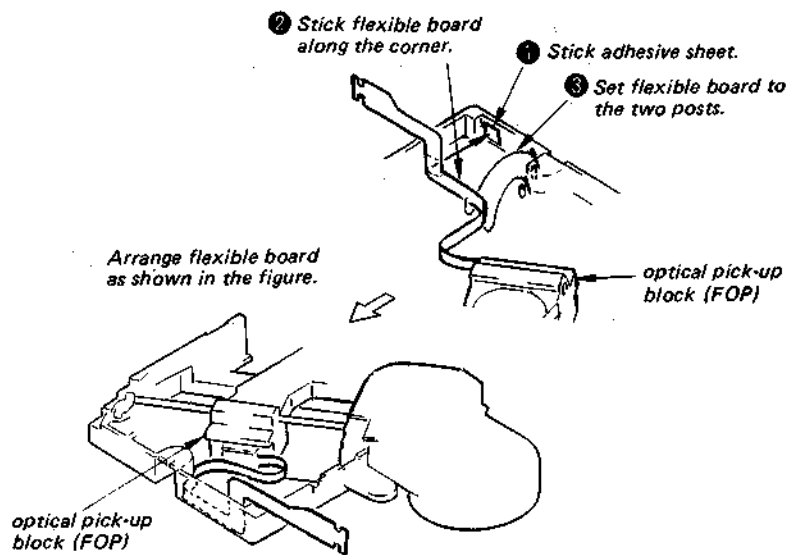

OIL SUPPLY OF SHAFTS A, B

- ① Apply a drop of hydro fluid EP-56 (part no. 7-661-018-01) to four portions marked  $\delta$ .
- ② Move FOP right and left two or three times to smooth them.
- ③ Lift up mechanical section and incline it in the right or left direction. Confirm that FOP is moved smoothly with itself-weight.


OPTICAL PICK-UP BLOCK (FOP)

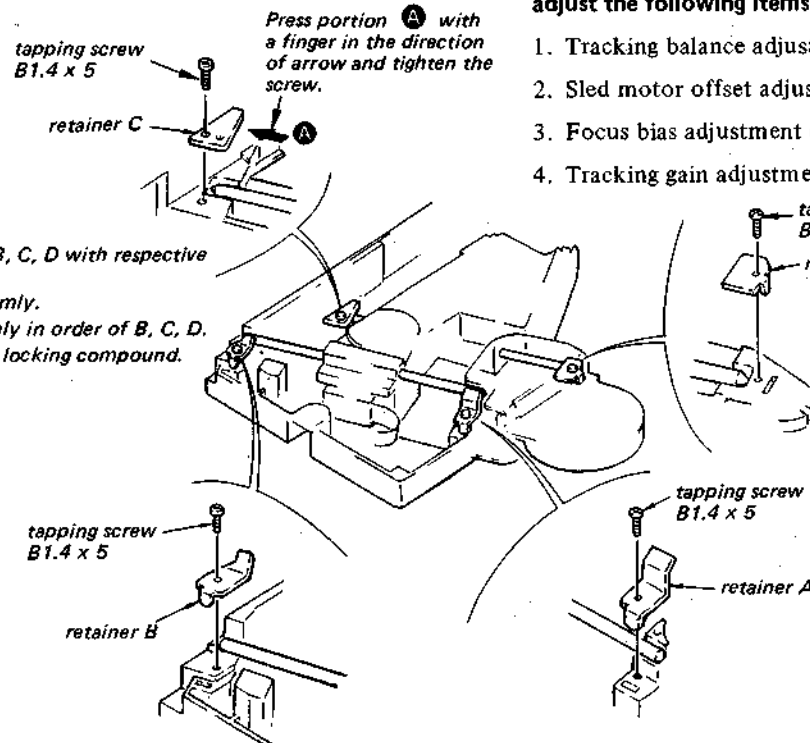

When replacing optical pick-up block, confirm and adjust the following items in the numerical order given.


1. Tracking balance adjustment (page 33)
2. Sled motor offset adjustment (page 33)
3. Focus bias adjustment (page 32)
4. Tracking gain adjustment (page 34)

SLED MOTOR SECTION

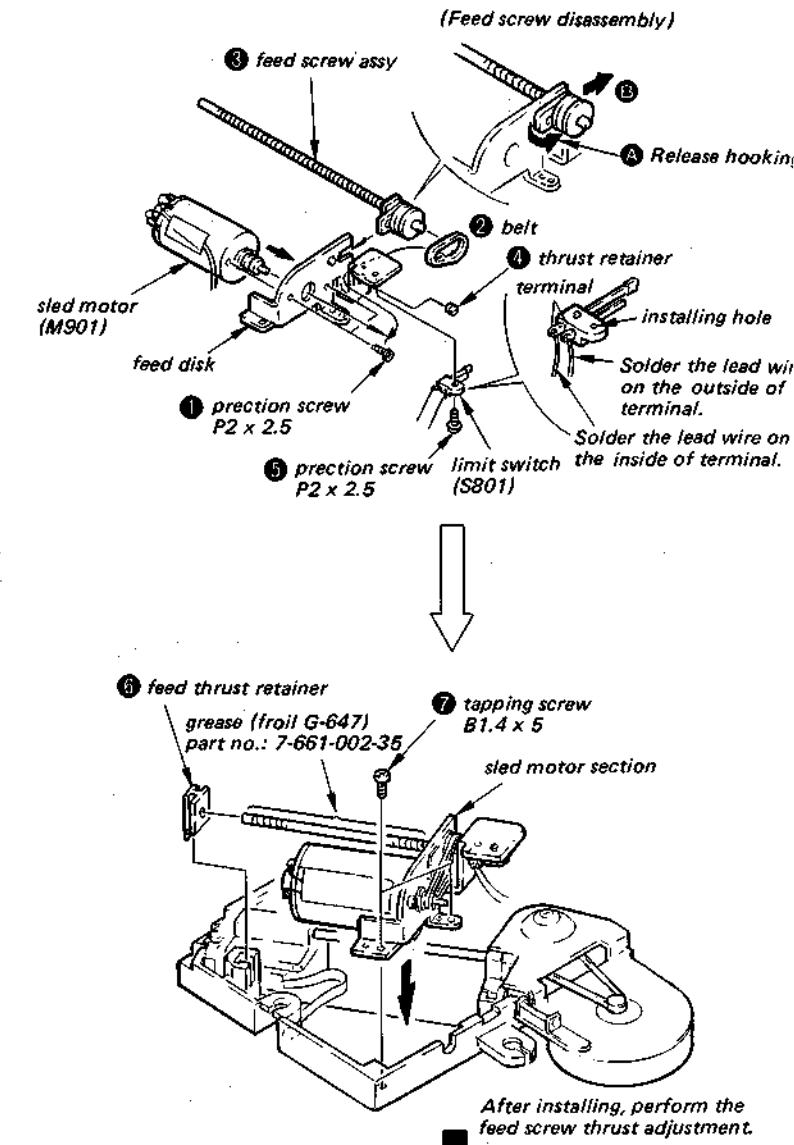

After installing, perform the feed screw thrust adjustment.


FEED RACK

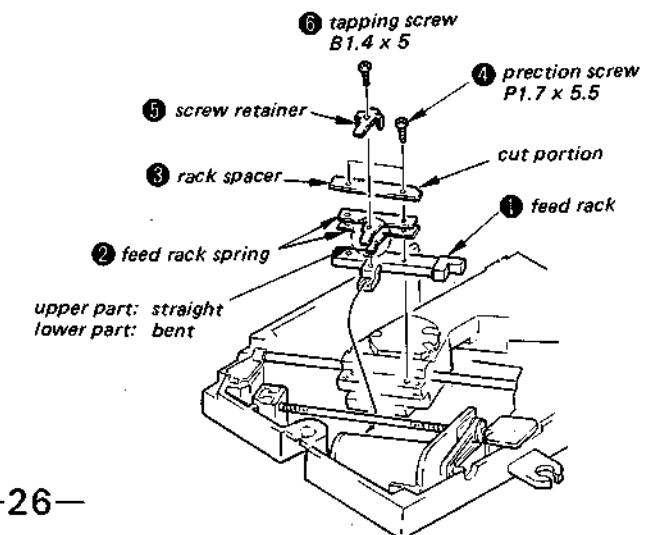


**2-3. OPTICAL PICK-UP BLOCK (FOP)  
REPLACEMENT**

Optical pick-up block (FOP) can be repaired without removing mechanical section the replacing method is explained below.

**Disassembly:**

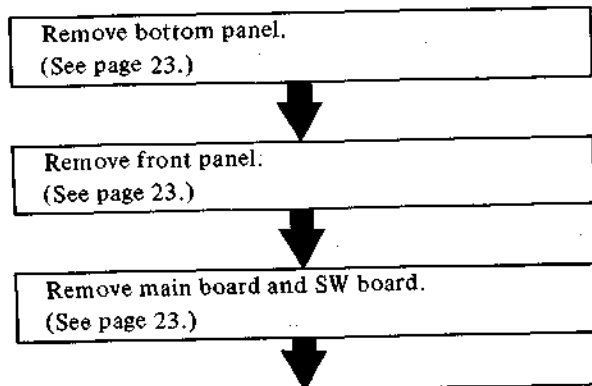


**Installation:**

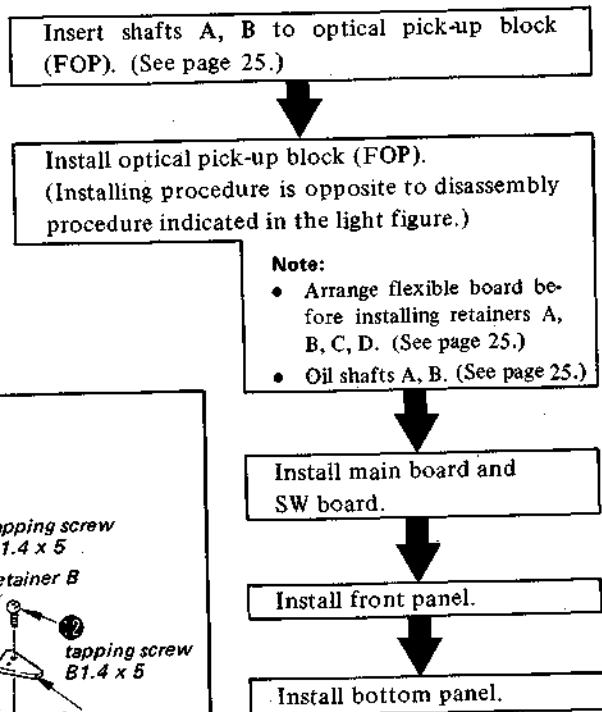

**Note:**

- Arrange flexible board before installing retainers A, B, C, D. (See page 25.)
- Oil shafts A, B. (See page 25.)

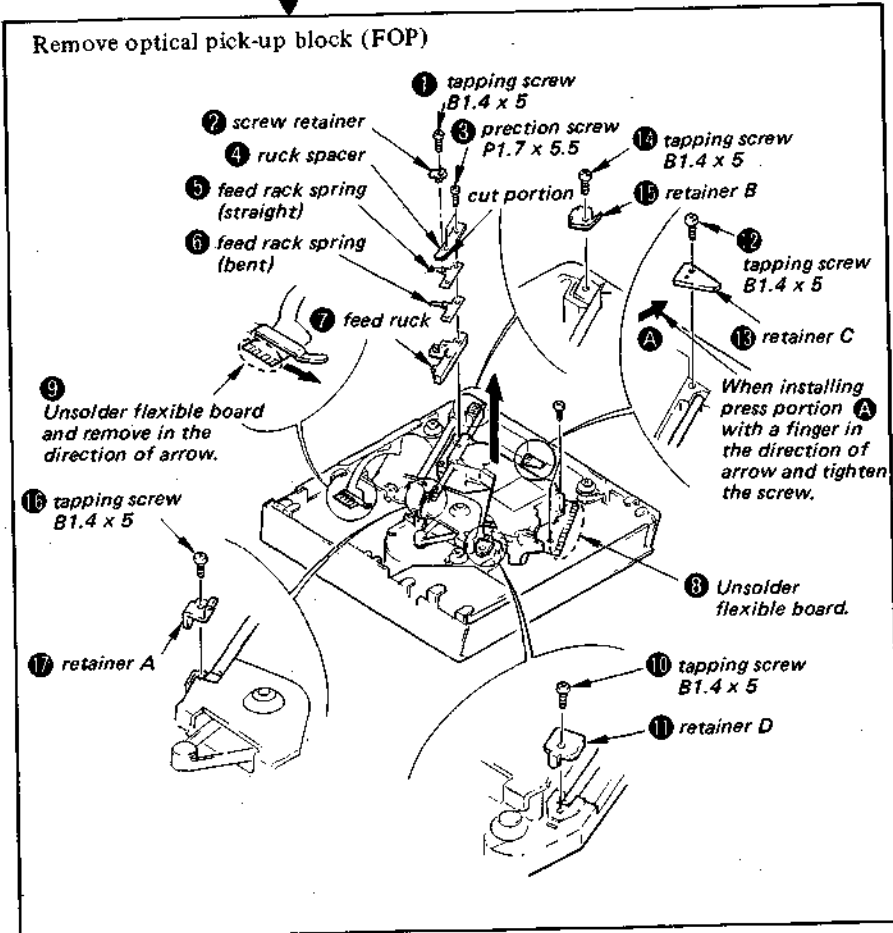


Remove shafts A, B from optical pick-up block (FOP). (See page 25 "MECHANICAL SECTION REASSEMBLY.")



## SECTION 3 ADJUSTMENTS

### 3-1. MECHANICAL ADJUSTMENTS


#### TURNTABLE HEIGHT ADJUSTMENT

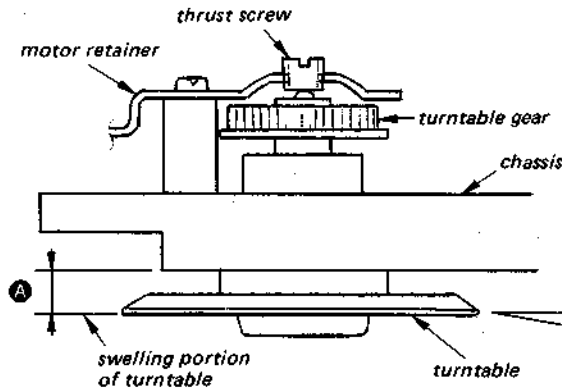

#### Procedure:


1. Lock the thrust screw with locking compound.
2. Adjust thrust screw so that the clearance **A** is  $2.7 \pm 0.05$  mm.

**Note:** Be careful not to turn the thrust screw too tightly when tightening, or the height will change when the screwdriver is removed.

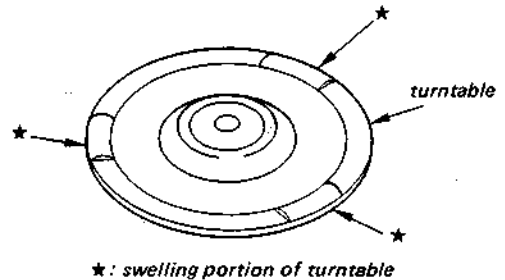

#### FEED SCREW THRUST ADJUSTMENT

Power supply voltage:  $2.5 \pm 0.1$  V

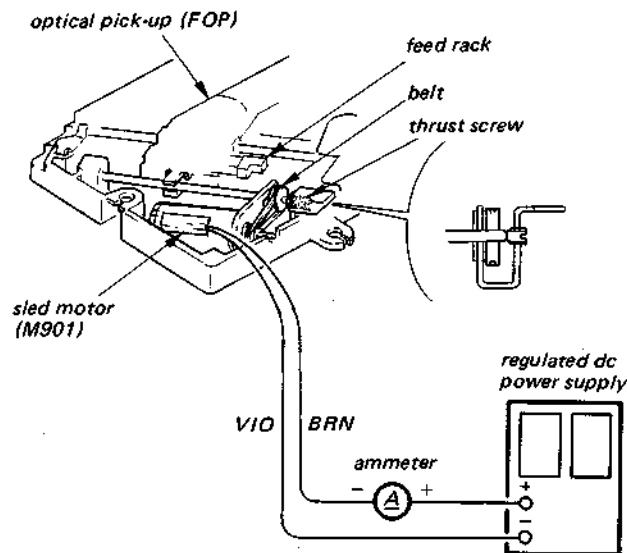

#### Procedure:

1. Remove feed rack and connect as shown in the figure.
2. Lock the thrust screw with locking compound.
3. Read current value under no-load condition.
4. Tighten thrust screw so that the ammeter reads  $100 \pm 20$  mA.
5. Loosen thrust screw so that the ammeter reading is 5 – 10 mA more than the reading in step 3.

**Note:** Be careful not to turn the thrust screw too tightly when tightening, or the current value will change when the screwdriver is removed.

6. Install feed rack and move FOP from the inner to the outer circumference and from the outer to the inner circumference.


Check that the current value is  $70^{+30}_{-20}$  mA at this time.

In order to move FOP from the inner to the outer circumference, connect VIO lead to the positive, BRN lead to the negative.  
In order to move FOP from the outer to the inner circumference, connect BRN lead to the positive, VIO lead to the negative.

3-2. ELECTRICAL ADJUSTMENT

FM SECTION

- Function switch: RADIO
- Band switch: FM

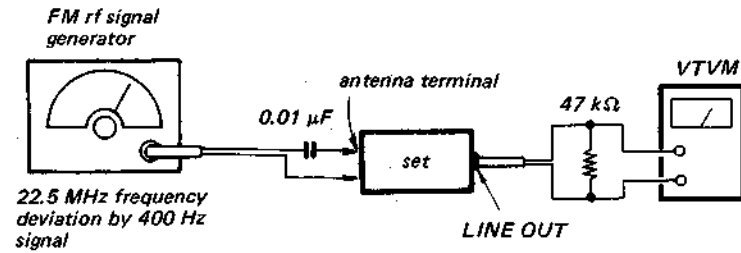


- Repeat the procedures in each adjustment several times, and the frequency coverage adjustment should be finally done by the trimmer capacitors.




• This adjustment should be made after TUNING VOLTAGE ADJUSTMENT.

FM FREQUENCY COVERAGE ADJUSTMENT		
Adjust for a maximum reading on VTVM.		
SG frequency	109.5 MHz (107.8 MHz)	85.5 MHz (87.35 MHz)
Dial pointer	f max.	f min.
Adjustment parts	CT701	L702

( ) : G-AEP model


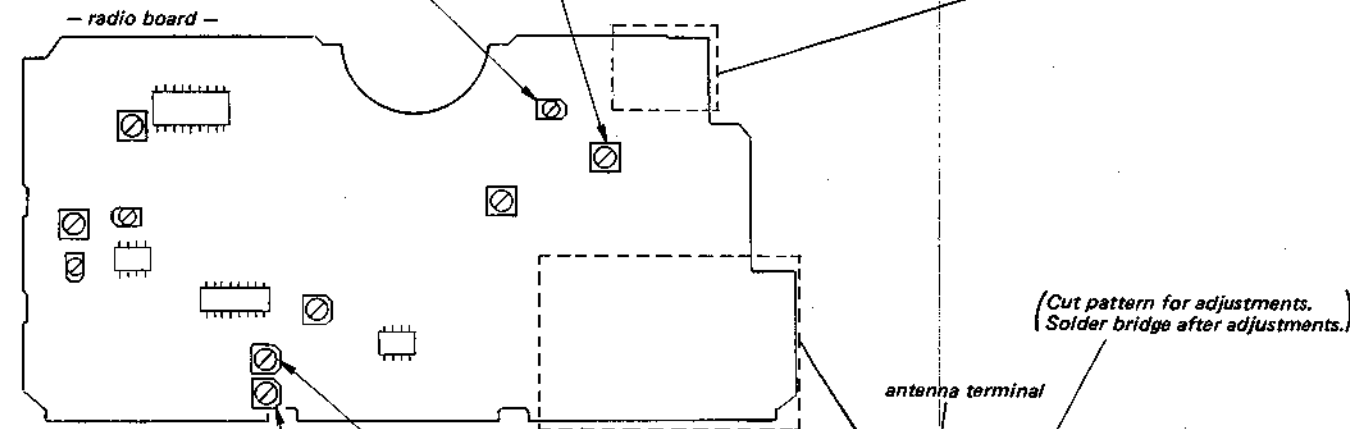


TUNING VOLTAGE ADJUSTMENT		
Adjustment parts	RV703	RV702
Dial pointer	f min.	f max.
Reading on digital volt meter or oscilloscope	1 V	9 V

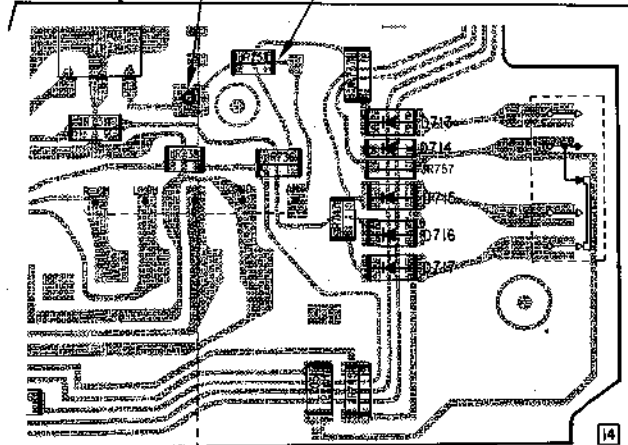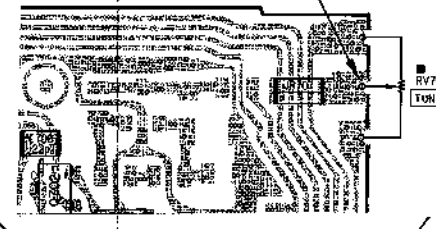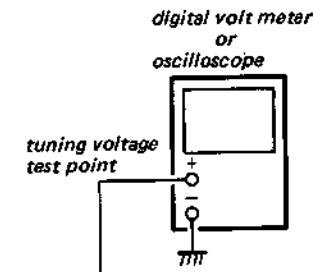



VCO ADJUSTMENT

1. Connect a 1 μF capacitor as follows.
2. Adjust RV701 for 19 ± 0.02 kHz on the frequency counter.
3. Remove the capacitor connected in step 1.

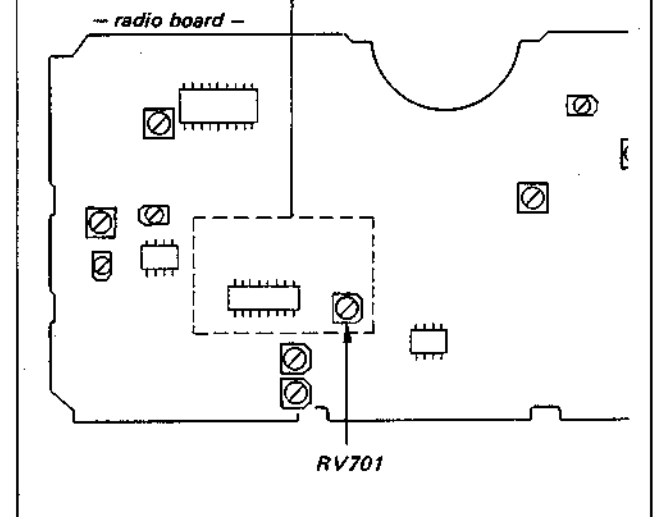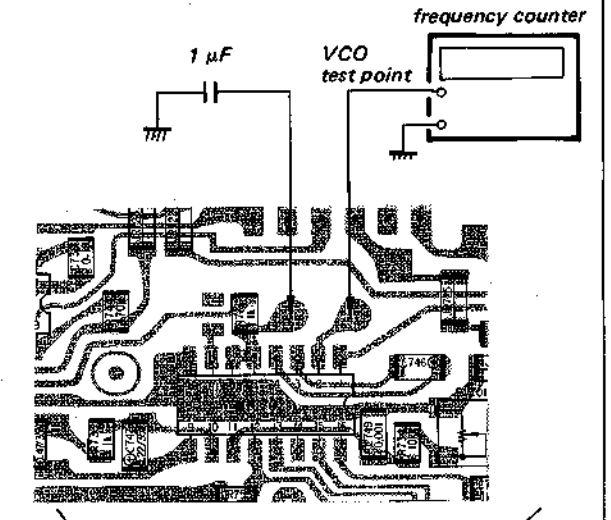


**AM SECTION**

- Function switch: RADIO
- Band switch: AM

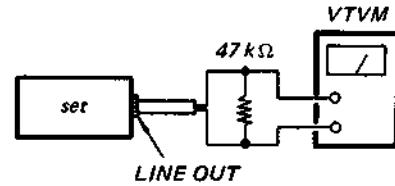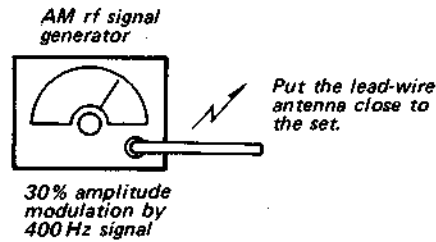

- Repeat the procedures in each adjustment several times, and the frequency coverage and tracking adjustments should be finally done by the trimmer capacitors.

AM TRACKING ADJUSTMENT		
Adjust for a maximum reading on VTVM.		
SG frequency and Dial pointer	1,400 kHz	620 kHz
Adjustment parts	CT704	L711

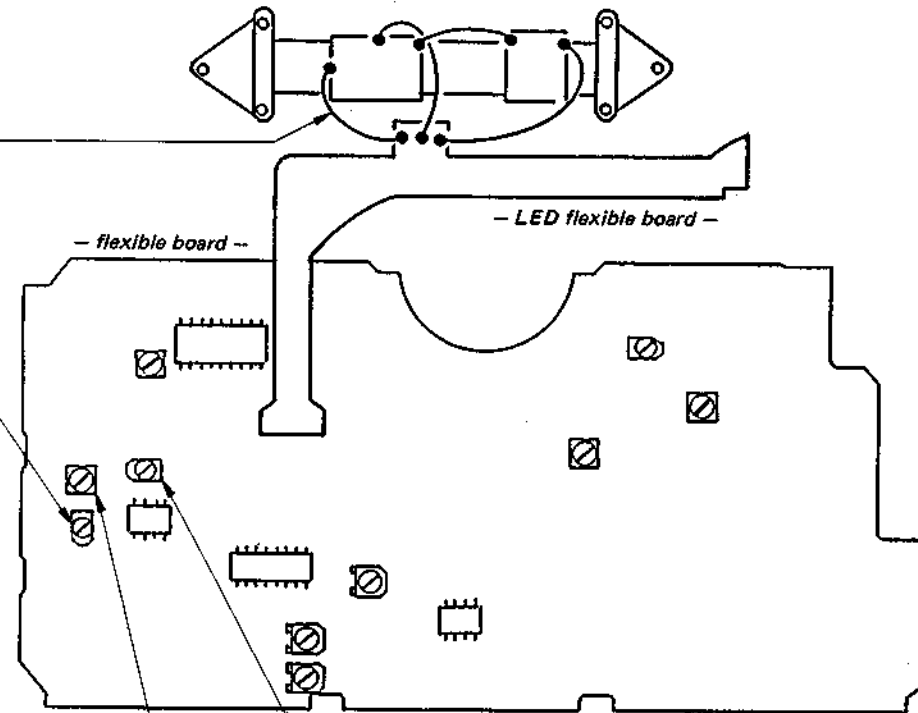

Adjustment parts	T702	CT703
Dial Pointer	f min.	f max.
SG frequency	515 kHz	1,680 kHz
Adjust for a maximum reading on VTVM.		
AM FREQUENCY COVERAGE ADJUSTMENT		

**CD SECTION**

**Notes on Adjustment**

1. Perform adjustments in service mode.  
Be sure to release service mode after completing adjustment.  
(Refer to "Service Mode (service program)" on page 7 - 9.)
2. Perform adjustments in the order given.
3. Use YEDS-1 disc unless otherwise indicated.
4. Power supply voltage: DC 9 V  
Function switch: CD

**PREPARATION**

Put the set into service mode (see page 7 - 9) and perform the following checks. Repair if there are any abnormalities.

• **Sled Motor Check**

1. Press the OPEN button and open the top panel.
2. Press the ►►, ◀◀ keys and make sure that the FOP moves smoothly, without catching, from the inmost → outmost → inmost circumference.  
►►: FOP moves outward  
◀◀: FOP moves inward

If FOP moves to innermost circumference or outermost circumference, the feed screw assy and feed rack may stick together and stop moving. If this occurs, move pulley section of feed screw assy by hand to move FOP.




• **Focus Search Check**

1. Press the OPEN button and open the top panel.
2. Press the ► key. (Focus search is performed continuously. Laser does not emit.)
3. Observe the FOP objective lens and check that it moves smoothly up and down with no catching or noises.
4. Press the ■ key.  
Check that focus search operation stops. If it does not, press the ■ key again, longer.

● 2.5 V (REF) Connecting Point

- FOCUS BIAS ADJUSTMENT
- TRACKING BALANCE ADJUSTMENT
- SLED MOTOR OFFSET CHECK AND ADJUSTMENT
- TRACKING GAIN ADJUSTMENT


When the adjustments above are performed, connect the  $\ominus$  side of oscilloscope to the point below.

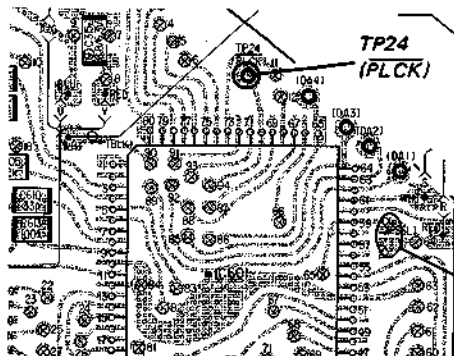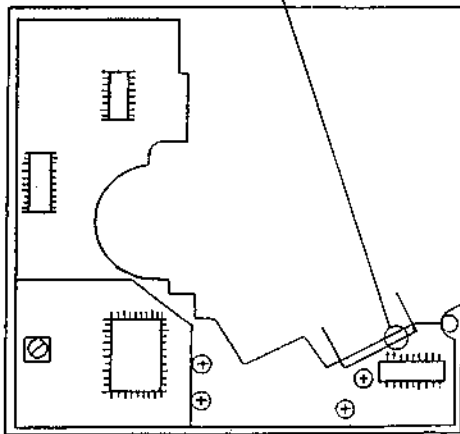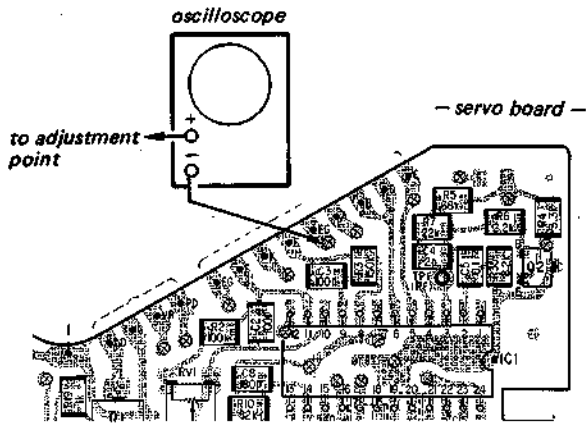

(B) PSSL solder jumper point

PLL FREE RUN FREQUENCY CHECK AND ADJUSTMENT



Check/Adjustment Procedure

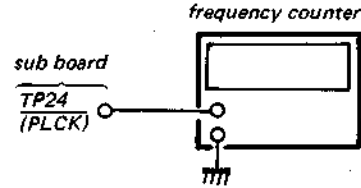

1. Disconnect the jumper point (A) (PLL) in the diagram below.
2. Short the jumper point (B) (PSSL) in the diagram below.
3. Connect a frequency counter to sub board test point TP24 (PLCK).
4. Put the set into service mode (see page 7 - 9).
5. Check that the frequency counter reading is  $4.29 \pm 0.04$  MHz. If not, adjust L601 so that it is  $4.29 \pm 0.01$  MHz.
6. After adjustment, release service mode (see page 7 - 9).
7. Short the jumper point shorted in step 1.
8. Disconnect the jumper point disconnected in step 2.

Check/Adjustment Location: servo board, sub board

PSSL solder jumper point (Short for checking and adjustment. Disconnect after checking and adjustment.)  
 PLL solder jumper point (Disconnect for checking and adjustment. Short after checking and adjustment.)

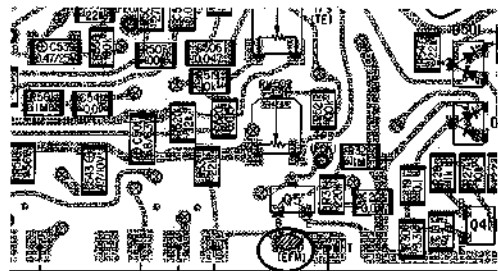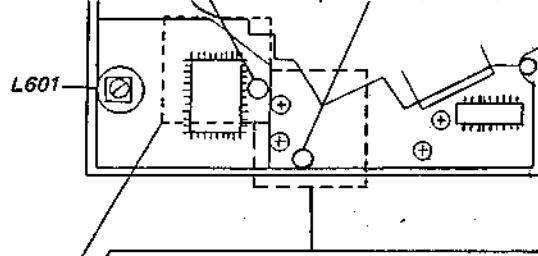


(A) PLL solder jumper point

**FOCUS BIAS ADJUSTMENT**

**Conditions**

The set should be placed either vertically or horizontally.


**Adjustment Procedure:**

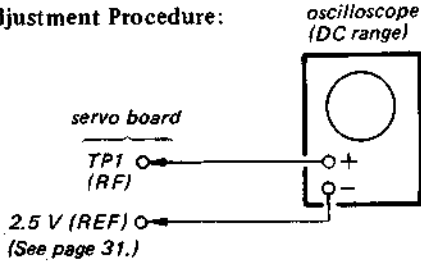

1. Put the set into service mode (see page 7 - 9).
2. Connect the oscilloscope to servo board test point TP1 (RF).
3. Press the **▶▶** and **◀◀** keys to move the FOP to the center. (Move the FOP to the music area on the disc to enable easy visibility of the eye pattern).
4. Insert the disc (YEDS-1) and close the top panel.
5. Press the **▶■** key.  
(It will go from focus search to focus on, and CLV pull-in mode state. Tracking and sled are OFF.)
6. Press the KEY-MODE button. (Tracking and sled go ON.)
7. eye pattern is good. A good eye pattern means that the diamond shape (◊) in the center of the waveform can be clearly distinguished.

● **RF Signal Reference Waveform (eye pattern)**



VOLT/DIV: 200 mV  
TIME/DIV: 500 nS

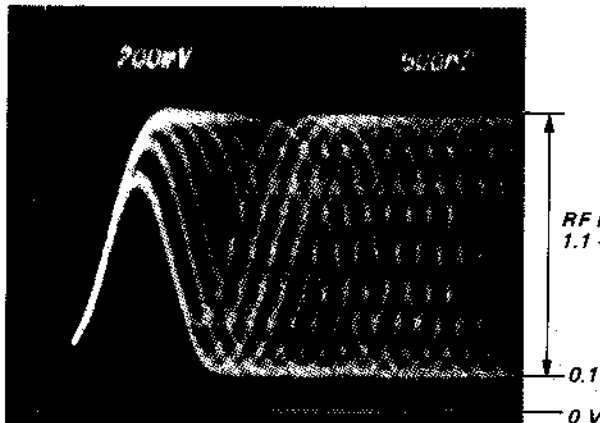

When observing the eye pattern, set the oscilloscope for AC range and raise vertical sensitivity.

8. Press the **■** key. Confirm that disc rotation stops. If not, press the **■** key again, longer.
9. After adjustment, release service mode (see page 7 - 9).

**Adjustment Location : servo board**

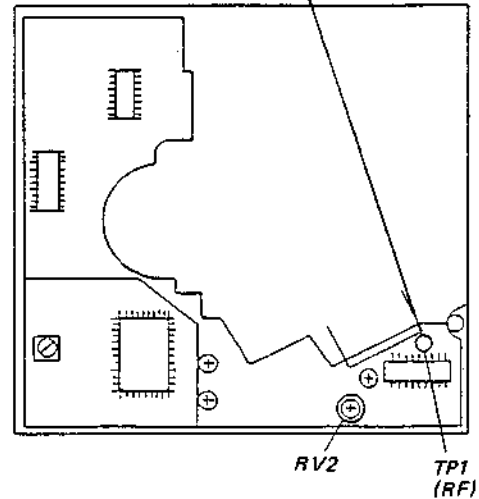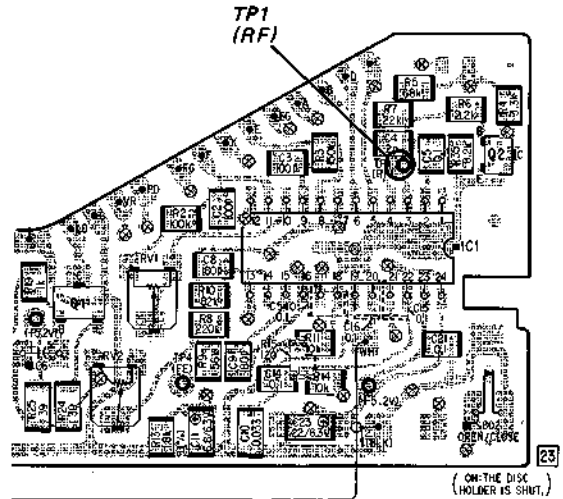


**TRACKING BALANCE ADJUSTMENT**

**Conditions**


The set should be placed either vertically or horizontally.

**Adjustment Procedure**

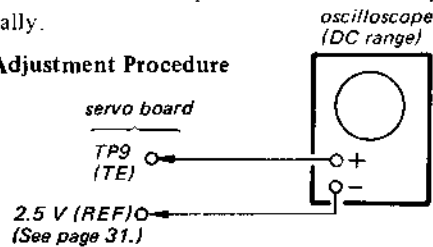


1. Connect the oscilloscope to servo board TP9 (TE).
2. Put the set into service mode (see page 7 - 9).
3. Press the ►► and ◄◄ keys to move the FOP to the center.
4. Insert the disc (YEDS-1) and close the top panel.
5. Press the ►■ key.  
(It will go from focus search to focus on, and CLV pull-in mode state. Tracking and sled are OFF.)
6. Adjust RV1 so that the oscilloscope waveform is symmetrical on the top and bottom in relation to 0 V.

**Note:** Take sweep time as long as possible to obtain best waveform.



7. Press the ■ key. Confirm that disc rotation stops. If it does not, press the ■ key again, longer.
8. After adjustment, release service mode (see page 7 - 9).

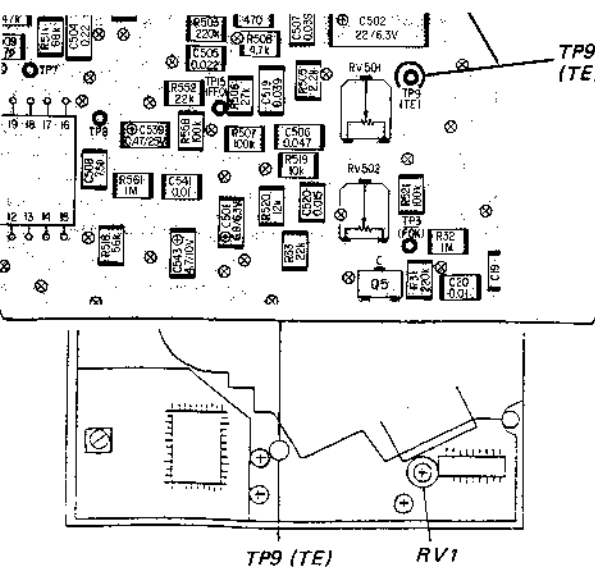

**SLED MOTOR OFFSET CHECK AND ADJUSTMENT**


**Conditions**

Tracking balance adjustment should have been finished.

Close the top panel.


(If the top panel is left open, natural light will enter through the FOP objective lens, and adjustment will not be correct.)

**Adjustment Procedure:**

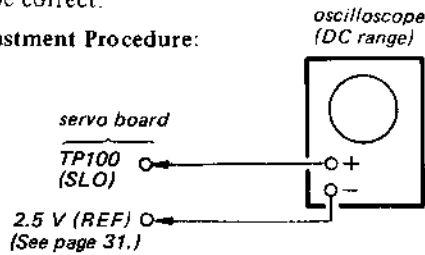

1. Remove the sled motor +SD lead. (In this adjustment, DC voltage is applied to the tracking amp inside IC501, so this prevents the sled motor from running at abnormal-high speed if RV502 is adjusted too far to the + or - side.)
2. Connect the oscilloscope to servo board TP100 (SLO).
3. Put the set into service mode (see page 7 - 9).
4. Press the KEY-MODE button (Tracking and sled go ON.)
5. Adjust RV504 so that the oscilloscope reading is 50 mV  $\pm$  50 mV.
6. Press the ■ key.
7. After adjustment, release service mode (see page 7 - 9).
8. Reconnect the sled motor lead removed in step 1.

**Adjustment Location:** servo board

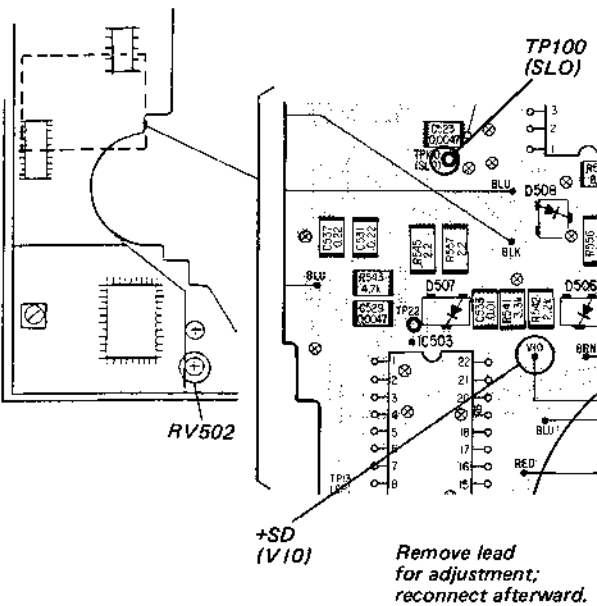

**TRACKING GAIN ADJUSTMENT**

Focus/tracking gain determines the pick-up follow-up (vertical and horizontal) relative to mechanical noise and mechanical shock when the 2-axis device operates.

However, as these reciprocate, the adjustment is at the point where both are satisfied.


- When gain is high, the noise when the 2-axis device operates increases.
- When gain is low, it is more susceptible to mechanical shock and skipping occurs more easily.

This adjustment is to be performed when replacing the following parts:

FOP, RV501 (tracking gain VR). Only tracking gain is adjusted on this set.

**Adjustment Procedure:**

(perform at normal operation)

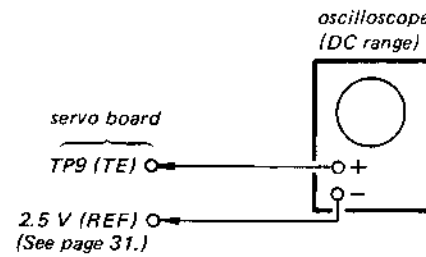

1. Place the set level, horizontally (upper panel can be facing down). (If the set is not level, the 2-axis device will be weighted and adjustment cannot be done.)
2. Connect the oscilloscope to servo board test point TP9 (TE).
3. Turn the power switch on, insert the disc (YEDS-1) and press the ►■ key.
4. Turn RV501 slightly clockwise (tracking gain drops) and obtain a waveform with a fundamental wave (waveform has large waves) as in Fig. 9.
5. Turn RV501 slowly counterclockwise (tracking gain rises) until the fundamental wave disappears (no large waves) as in Fig. 10.
6. Set RV501 to the position about 30° counterclockwise from the position obtained in step 5. RV501 contact point location is within the range shown in Fig. 8 A, tracking gain is too high. In this case, readjust from step 4.

7. Select AMS mode with the MODE button, continuously press ►► or ◄◄ key and observe the 100 track jump waveform. Check that no traverse waveform appears for both ►► and ◄◄ directions. (See Figures 11 and 12.) It is acceptable if the traverse waveform appears only now and then, but if it appears constantly, raise tracking gain slightly and check step 7 again.
8. Check that there is not an abnormal amount of operation noise (white noise) from the 2-axis device. If there is, tracking gain is too high, so readjust starting with step 4.

**Adjustment Method:**

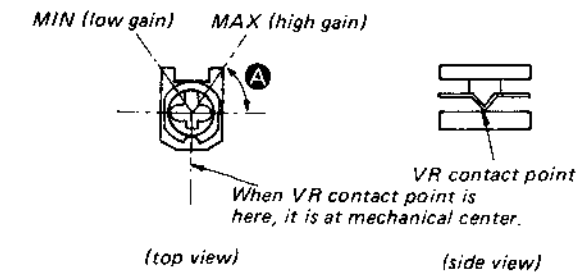


Fig. 8 Mechanical Center (seen from chip mounted side)

The waveforms are those measured with the oscilloscope set as shown below.

VOLT/DIV: 1 V  
TIME/DIV: 5 mV

- Waveform when tracking gain is lowered. Fundamental wave appears (large waves).



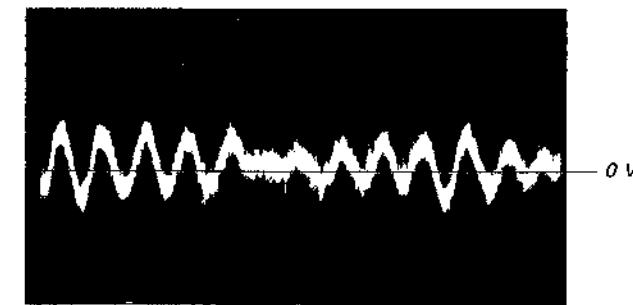


Fig. 9

• Waveform large wave

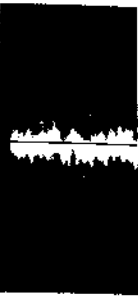

• Waveform track jump of adjust

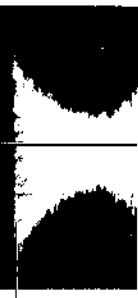

100 track jump

• Waveform track jump of low trac



100 track jump waveform


**ADJUSTMENT**

determines the pick-up follow-up (horizontal) relative to mechanical shock when the 2-axis device reciprocate, the adjustment is at are satisfied.

, the noise when the 2-axis device it is more susceptible to mechanical clipping occurs more easily.

to be performed when replacing tracking gain VR). Only tracking gain

re: (normal operation)

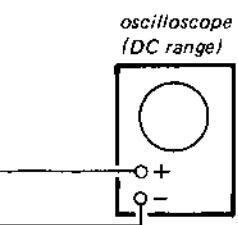

level, horizontally (upper panel down). (If the set is not level, will be weighted and adjustment e.)

oscilloscope to servo board test

power switch on, insert the disc press the **▶▶** key.

slightly clockwise (tracking gain obtain a waveform with a fundamental wave (large waves) as in

slowly counterclockwise (tracking until the fundamental wave disappears (small waves) as in Fig. 10.

the position about 30° counter-clockwise from the position obtained in step 5. VR contact point location is within the range shown in Fig. 8 A, tracking gain is too high, readjust from step 4.

- Select AMS mode with the MODE button, continuously press **▶▶** or **◀◀** key and observe the 100 track jump waveform. Check that no traverse waveform appears for both **▶▶** and **◀◀** directions. (See Figures 11 and 12.) It is acceptable if the traverse waveform appears only now and then, but if it appears constantly, raise tracking gain slightly and check step 7 again.

- Check that there is not an abnormal amount of operation noise (white noise) from the 2-axis device. If there is, tracking gain is too high, so readjust starting with step 4.

**Adjustment Method:**

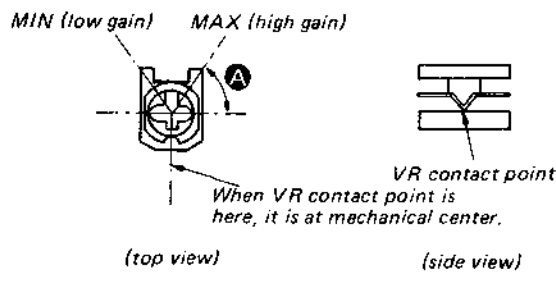


Fig. 8 Mechanical Center (seen from chip mounted side)

The waveforms are those measured with the oscilloscope set as shown below.

VOLT/DIV: 1 V  
TIME/DIV: 5 mV

- Waveform when tracking gain is lowered. Fundamental wave appears (large waves).

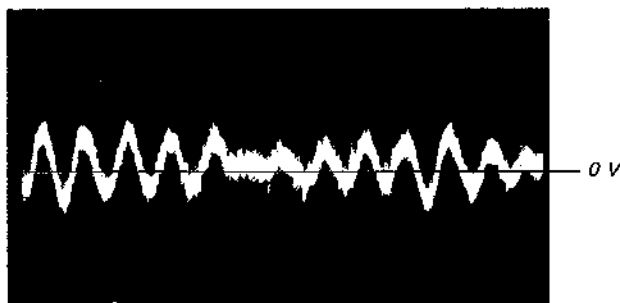


Fig. 9

- Waveform when fundamental wave disappears (no large waves).

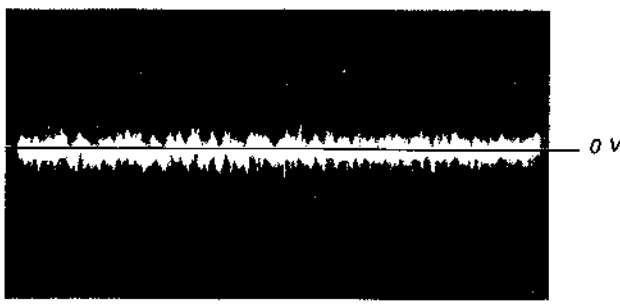


Fig. 10

- Waveform with no traverse waveform during 100 track jump. (Brake application is smooth because of adjustment).

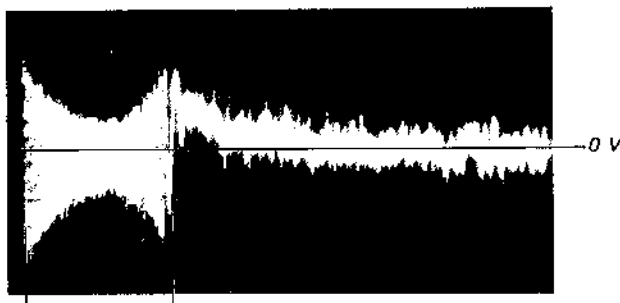


Fig. 11

- Waveform with traverse waveform during 100 track jump. (Brake application is poor because of low tracking gain.)



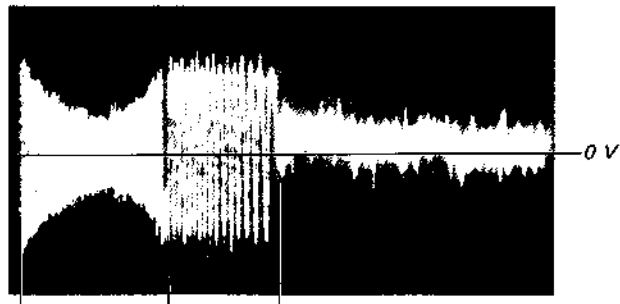


Fig. 12

**Adjustment Location: servo board**

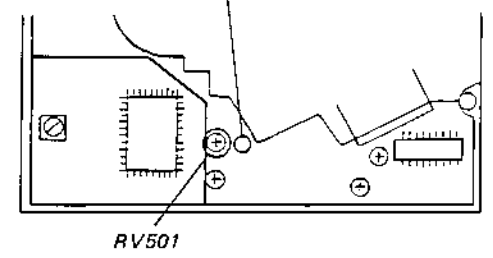
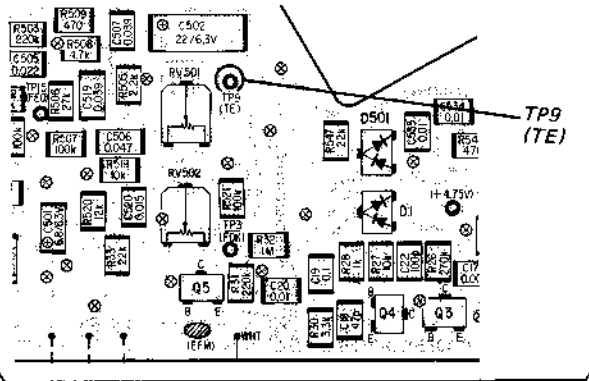


**Semiconductor Lead Layouts**

<p><b>1S2835</b></p> <p>anode cathode</p>	<p><b>KV1230Z</b></p> <p>anode cathode</p>	DT
<p><b>1S2837</b></p> <p>cathode anode</p>	<p><b>SVC203</b></p> <p>anode cathode anode</p>	2SI 2SI
<p><b>1SS283</b></p> <p>cathode anode</p>	<p><b>SLM-13VM</b></p> <p>1 2 3</p>	FV FV FV
<p><b>1SS123</b></p> <p>3 2 1</p>	<p><b>2SB1202</b></p> <p>1 2 3</p>	CX μP
<p><b>E10QS03</b> RD2.7M-B2 RD5.6M-B1 RD10M-B2 SB01-05CP SB05-05CP</p> <p>1 2 3</p>	<p><b>2SA812</b> 2SB624-BV4 2SC1623 2SC2223 2SC2712 2SC2714-Y 2SD596 DTA124EK DTC114YK DTC124EK DTC144EK</p> <p>C B E</p>	CX
<p><b>1SS119</b> RD2.7E-B RD5.6E-L2</p> <p>cathode anode</p>		

SECTION 4  
DIAGRAMS

Adjustment Location: servo board

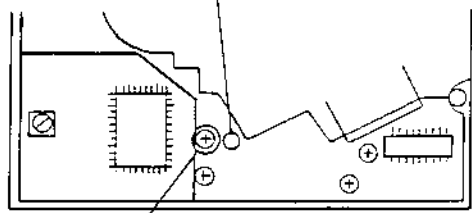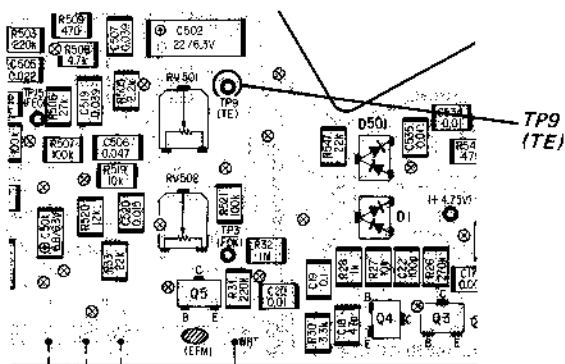

RV501

• Semiconductor Lead Layouts

<p><b>1S2835</b></p>	<p><b>KV1230Z</b></p>	<p><b>DTC143TS</b></p>	<p><b>CX20109</b> CXK5816M-10L PCM55HP-S</p>	<p><b>KV1260M</b> M5201FP M5218FP NJM2903M NJM4560M TL072CPS μPC4082G2 μPC4558G2</p>
<p><b>1S2837</b></p>	<p><b>SVC203</b></p>	<p><b>2S8798</b> 2SD999 2SD1664</p>	<p><b>CX23035</b></p>	<p><b>NJM4556D</b></p>
<p><b>1SS283</b></p>	<p><b>SLM-13VM</b></p>	<p><b>FMG4</b> FMS1 FMW1</p>	<p><b>CXA1023M</b></p>	<p><b>S-81250HG</b></p>
<p><b>1SS123</b></p>	<p><b>2SB1202</b></p>	<p><b>CX10054</b> μPD4053BG</p>	<p><b>CXA1083M</b></p>	<p><b>TL431CLPB</b></p>
<p><b>E10QS03</b> RD2.7M-B2 RD5.6M-B1 RD10M-B2 SB01-05CP SB05-05CP</p>	<p><b>2SA812</b> 2SB624-BV4 2SC1623 2SC2223 2SC2712 2SC2714-Y 2SD596 DTA124EK DTC114YK DTC124EK DTC144EK</p>	<p><b>CX10053B</b></p>	<p><b>CXP5024H-001Q</b></p>	
<p><b>1SS119</b> RD2.7E-B RD5.6E-L2</p>				

Note on Schematic Diagram of CD section:

- All capacitors are in μF unless otherwise noted. pF: μμF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and ¼ W or less unless otherwise specified.
- : CD signal path.
- : FM signal path.
- Components for right channel have same values as for left channel. Reference numbers are coded from 200.
- : internal component.
- : B+ bus.
- : B- bus.
- : adjustment for repair.
- Voltages, waveform and total current are measured with top panel closed.
- Power voltage is DC 9 V and fed with regulated dc power supply from DC in 9 V (external power voltage) jack. Voltages are DC with respect to ground in service mode when FUNCTION switch set to CD. Voltage variations may be noted due to normal production tolerances.
- no mark : stop mode
- ( ) : play mode
- < > : See page 11 for CHARGE CIRCUIT CHECK.
- Waveforms are taken to ground in service mode by using oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Total current is measured in service mode when FUNCTION switch set to CD.
- Switch


Ref. No.	Switch	Position
S401	FUNCTION	POWER OFF
S801	LIMIT	OFF
S802	OPEN/CLOSE	ON
S803	PLAY-MODE	OFF
S804	REMAIN/ENTER	OFF
S805	KEY-MODE	OFF
S806	▶ (PLAY/PAUSE)	OFF
S807	▶▶ (FF)	OFF
S808	◀◀ (FR)	OFF
S809	■ (STOP)	OFF

See page 7 - 9 for setup of service mode.

Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un trame et une marque sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.




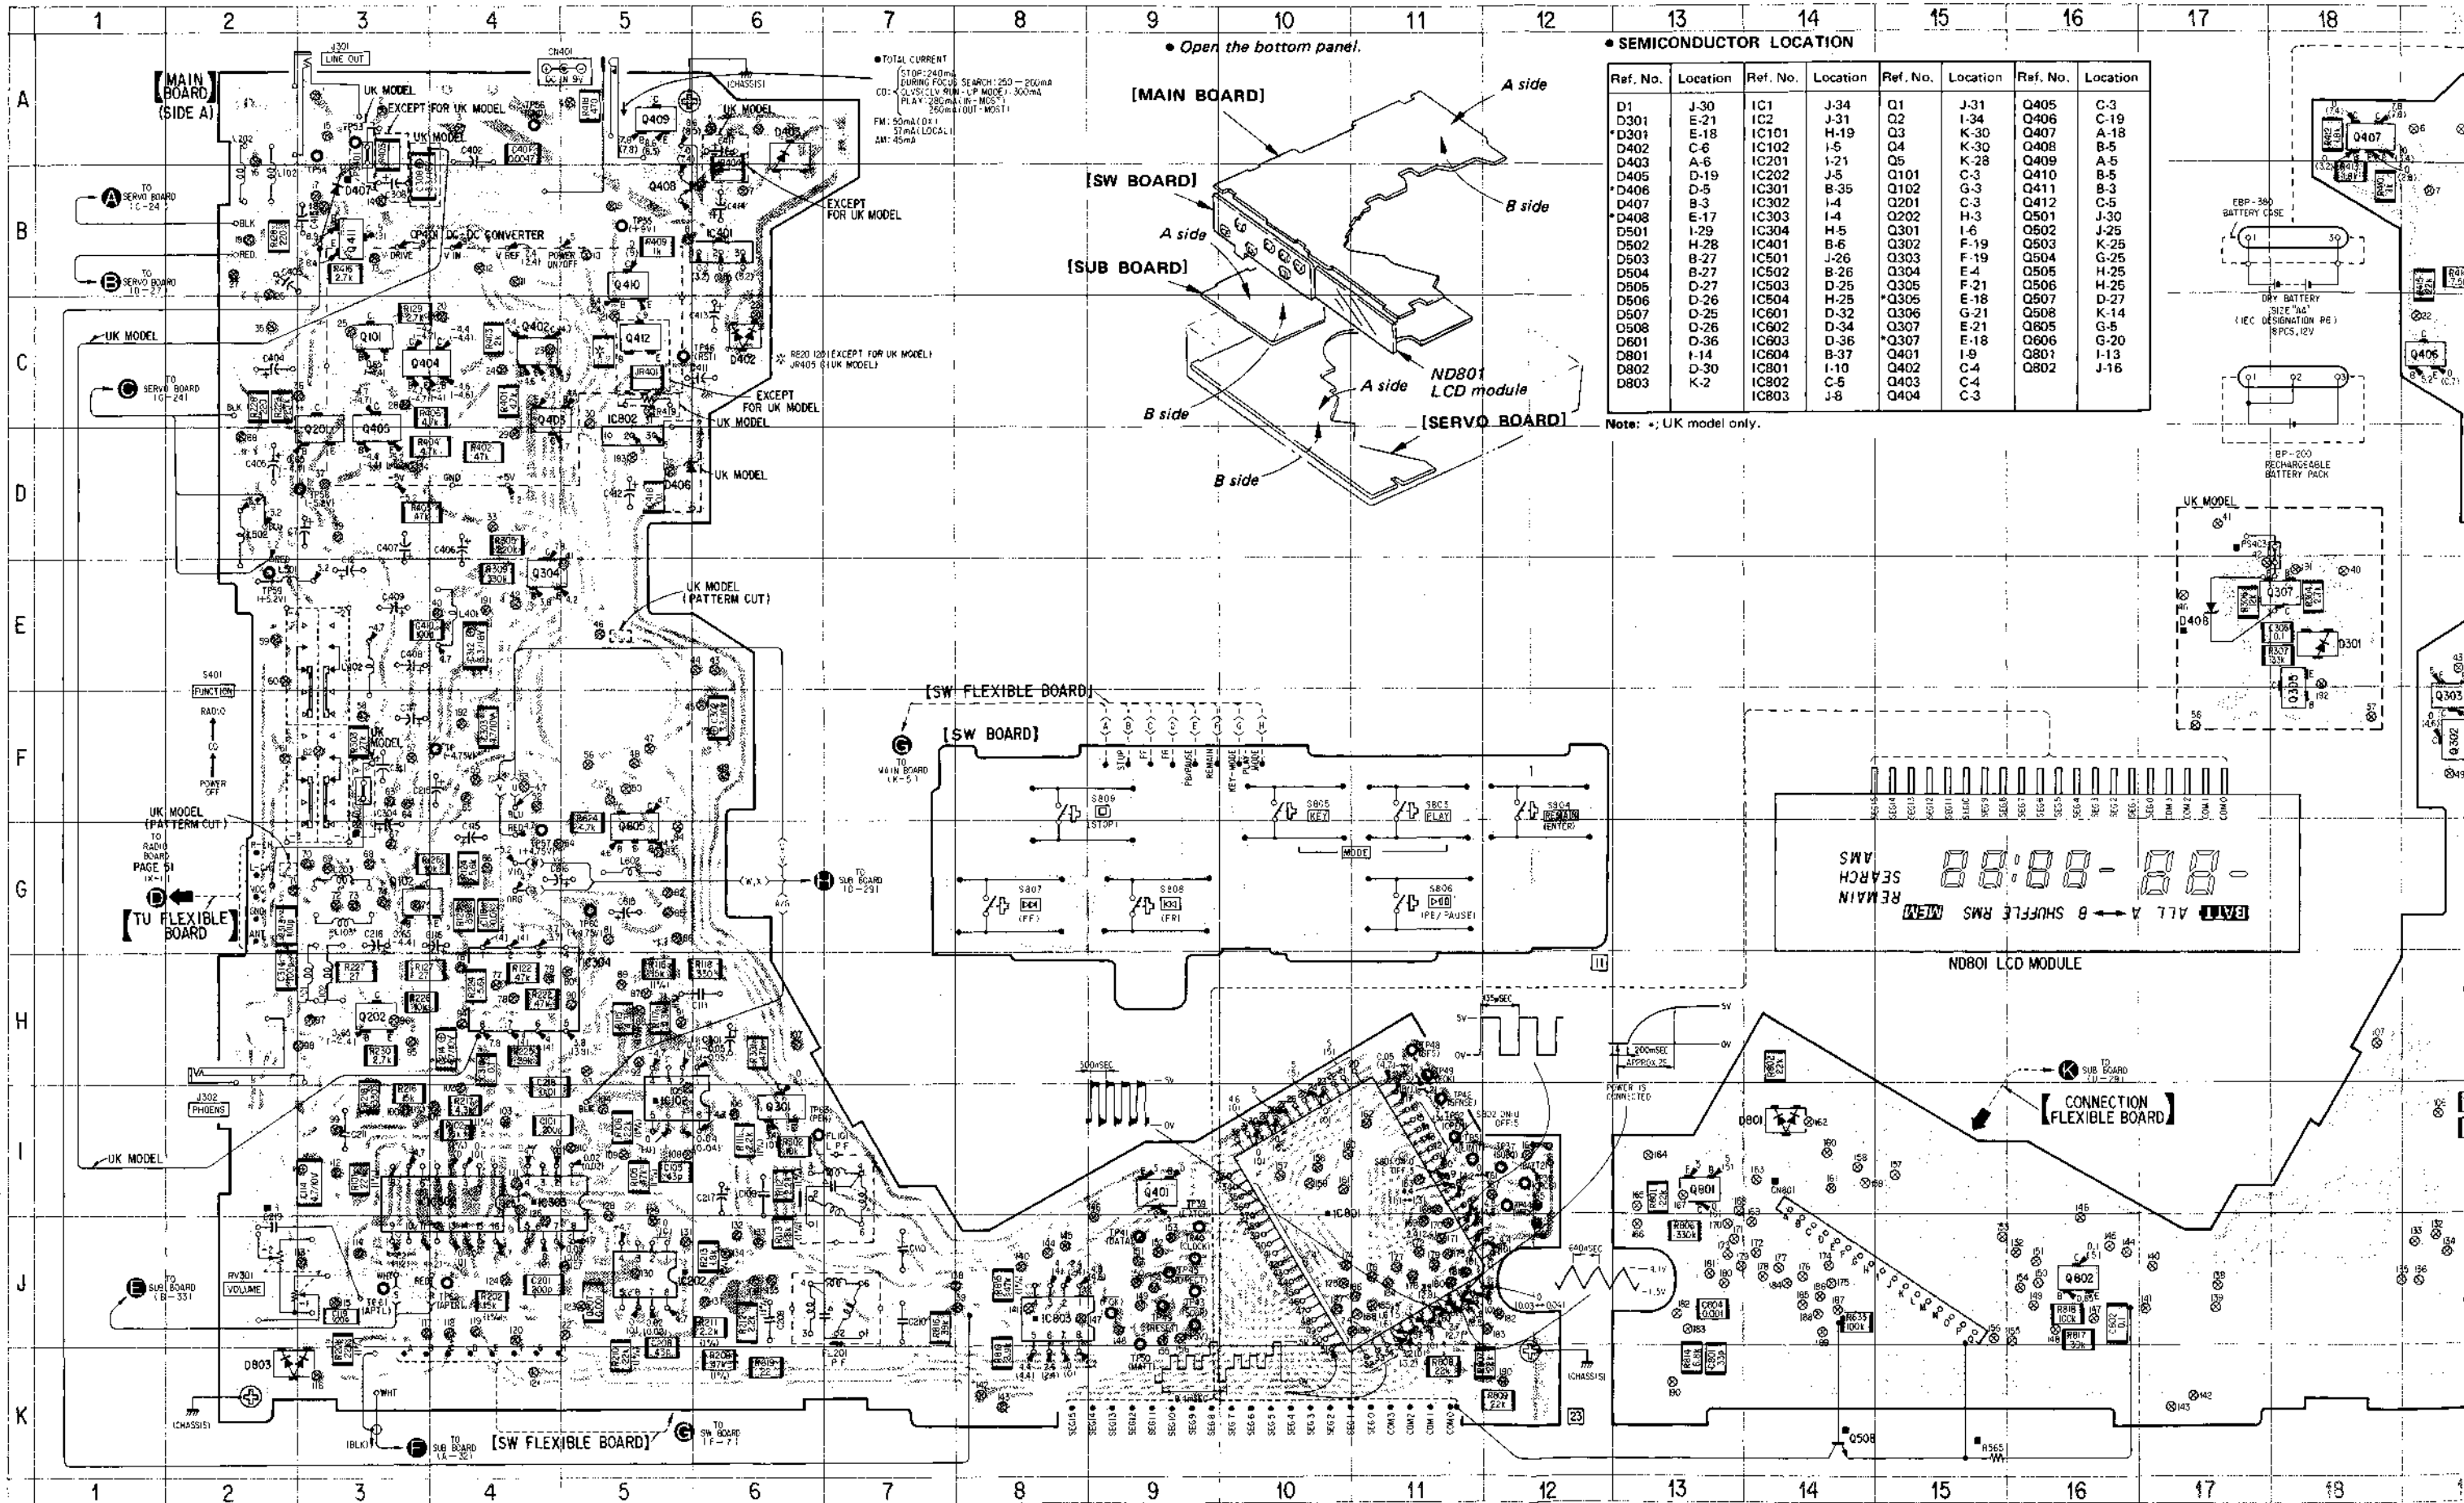



• SEMICONDUCTOR LOCATION


Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D1	J-30	IC1	J-34	Q1	J-31	Q405	C-3
D301	E-21	IC2	J-31	Q2	I-34	Q406	C-19
D301	E-18	IC101	H-19	Q3	K-30	Q407	A-18
D402	C-6	IC102	I-5	Q4	K-30	Q408	B-5
D403	A-6	IC201	I-21	Q5	K-28	Q409	A-5
D405	D-19	IC202	J-5	Q101	C-3	Q410	B-5
D406	D-5	IC301	B-35	Q102	G-3	Q411	B-3
D407	B-3	IC302	I-4	Q201	C-3	Q412	C-5
D408	E-17	IC303	I-4	Q202	H-3	Q501	J-30
D501	I-29	IC304	H-5	Q301	I-6	Q502	J-25
D502	H-28	IC401	B-6	Q302	F-19	Q503	K-25
D503	B-27	IC501	J-26	Q303	F-19	Q504	G-25
D504	B-27	IC502	B-26	Q304	E-4	Q505	H-25
D505	D-27	IC503	D-25	Q305	F-21	Q506	H-25
D506	D-26	IC504	H-25	Q306	E-18	Q507	D-27
D507	D-25	IC601	D-32	Q307	G-21	Q508	K-14
D508	D-26	IC602	D-34	Q307	E-21	Q605	G-5
D601	D-36	IC603	D-36	Q307	E-18	Q606	G-20
D801	I-14	IC604	B-37	Q401	I-9	Q801	I-13
D802	D-30	IC801	I-10	Q402	C-4	Q802	J-16
D803	K-2	IC802	C-5	Q403	C-4		
		IC803	J-8	Q404	C-3		

Note: •, UK model only.

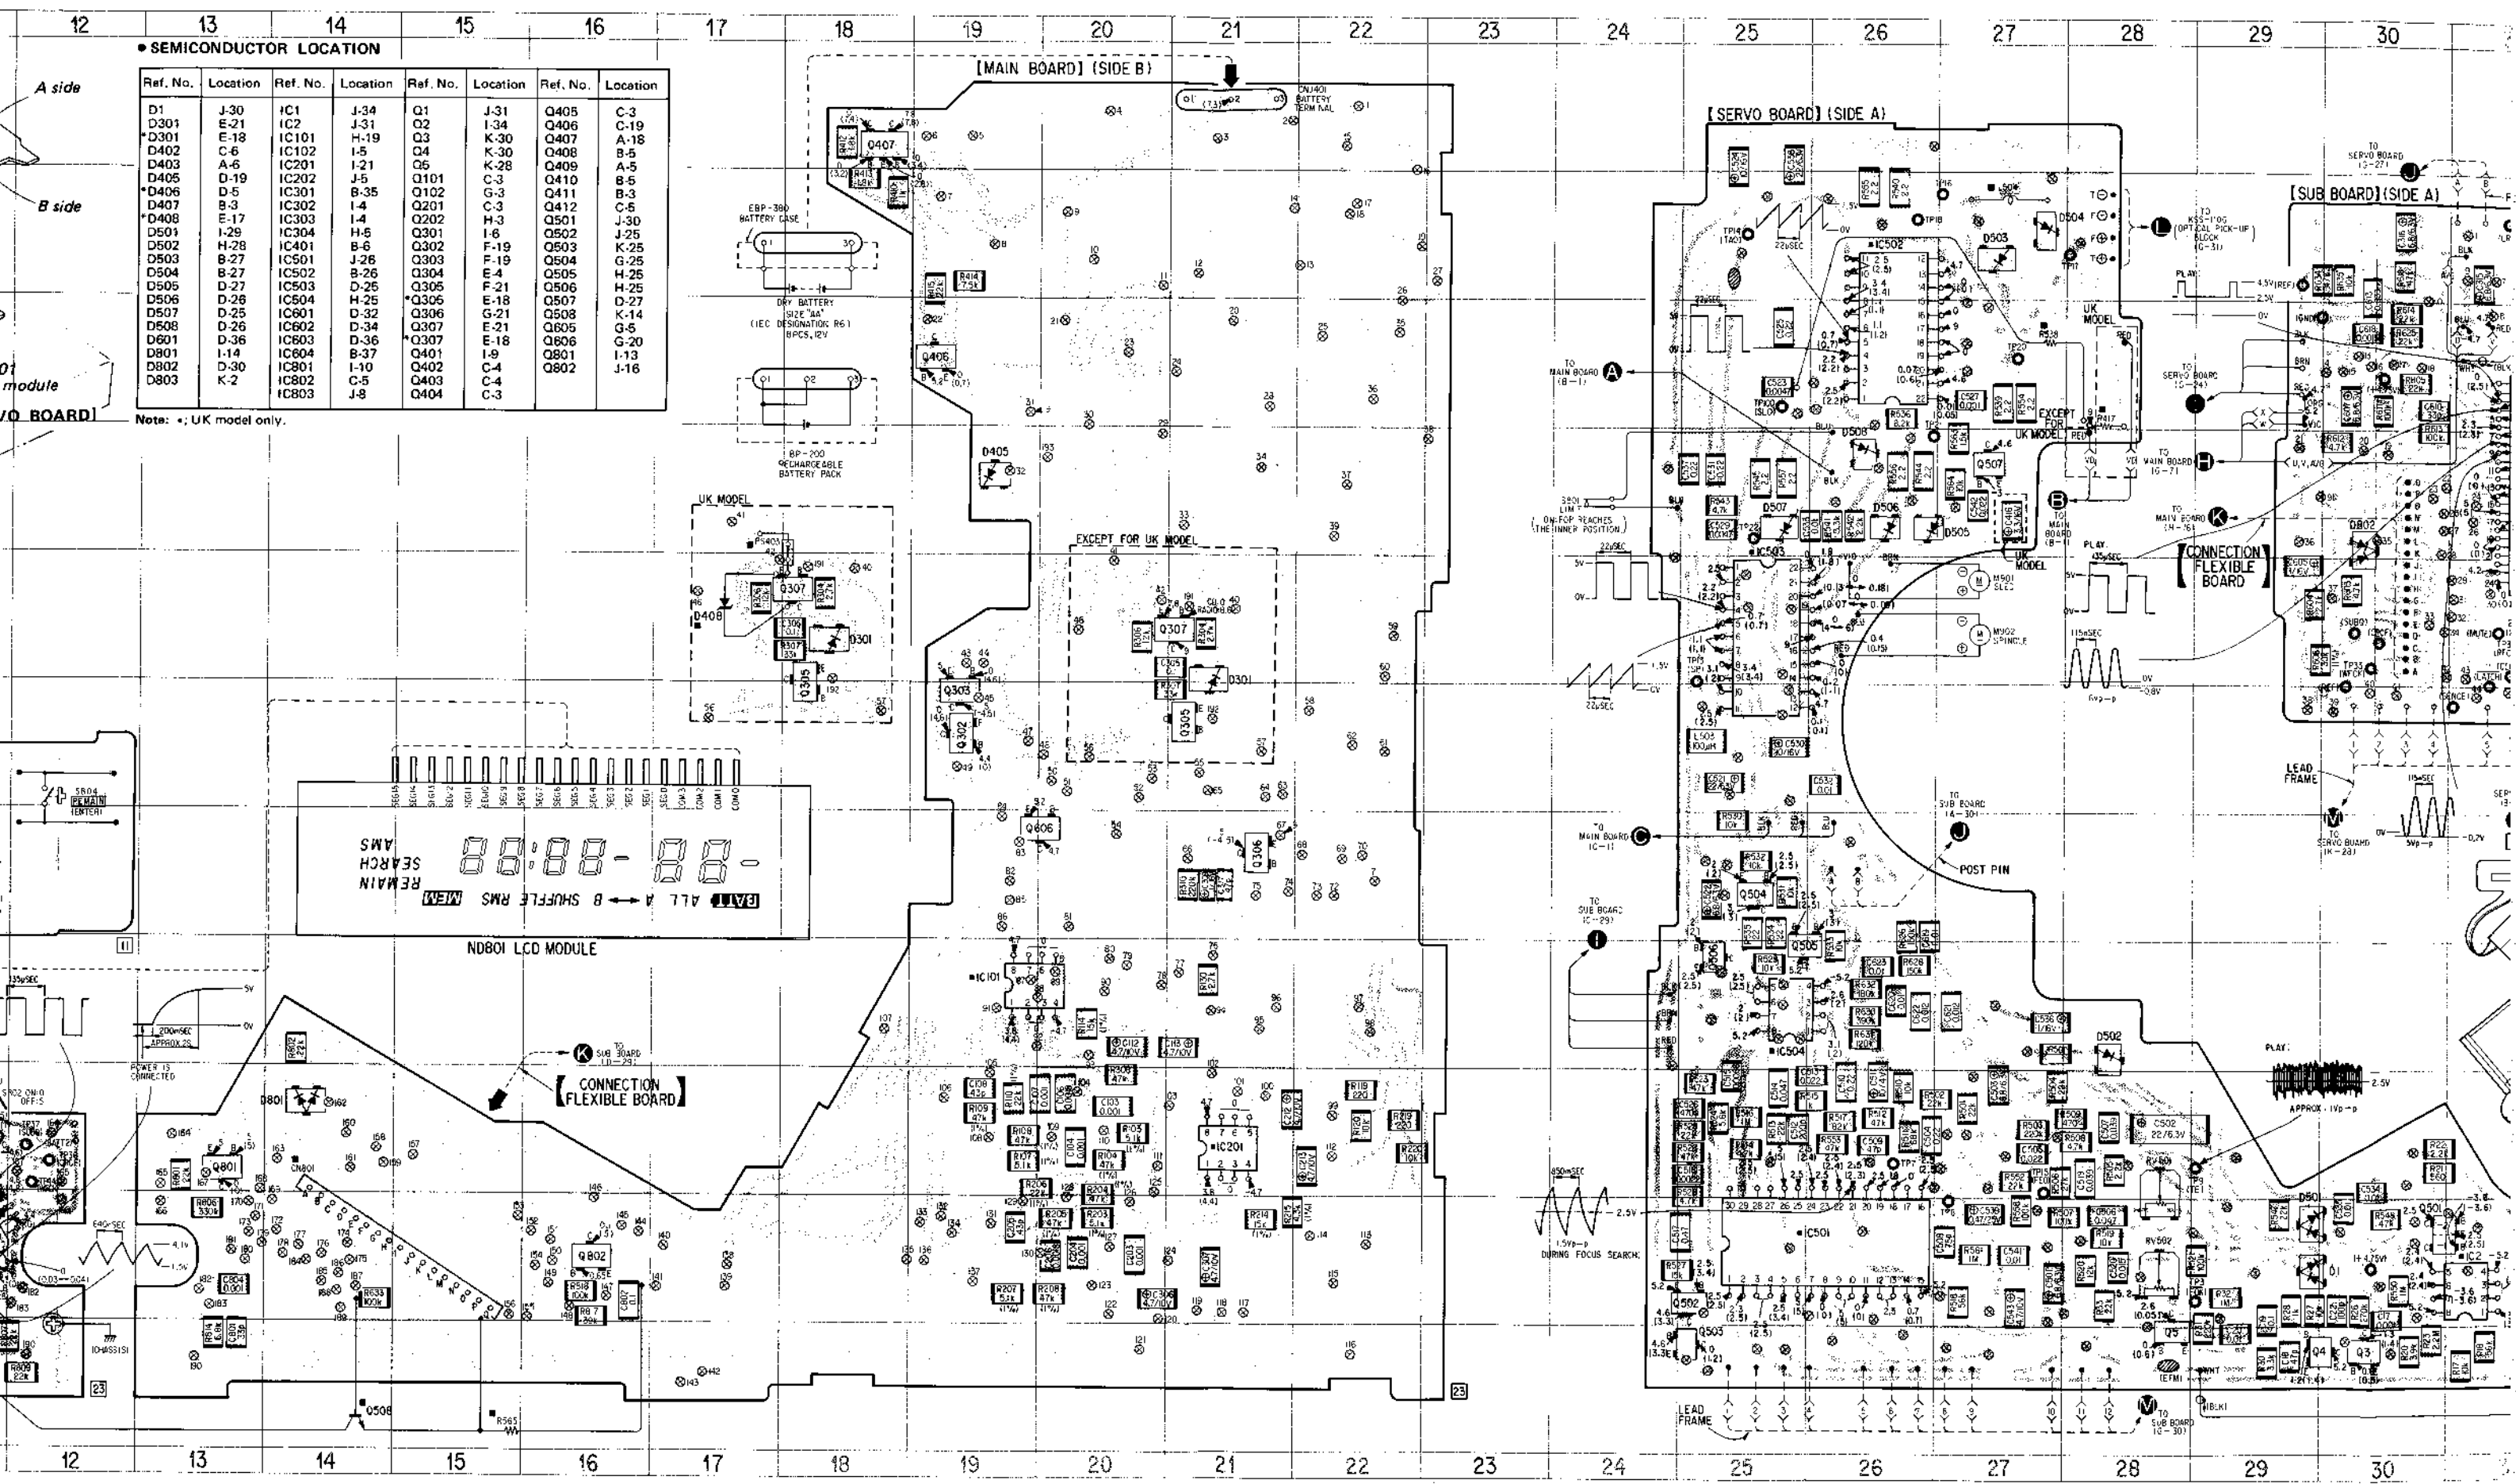


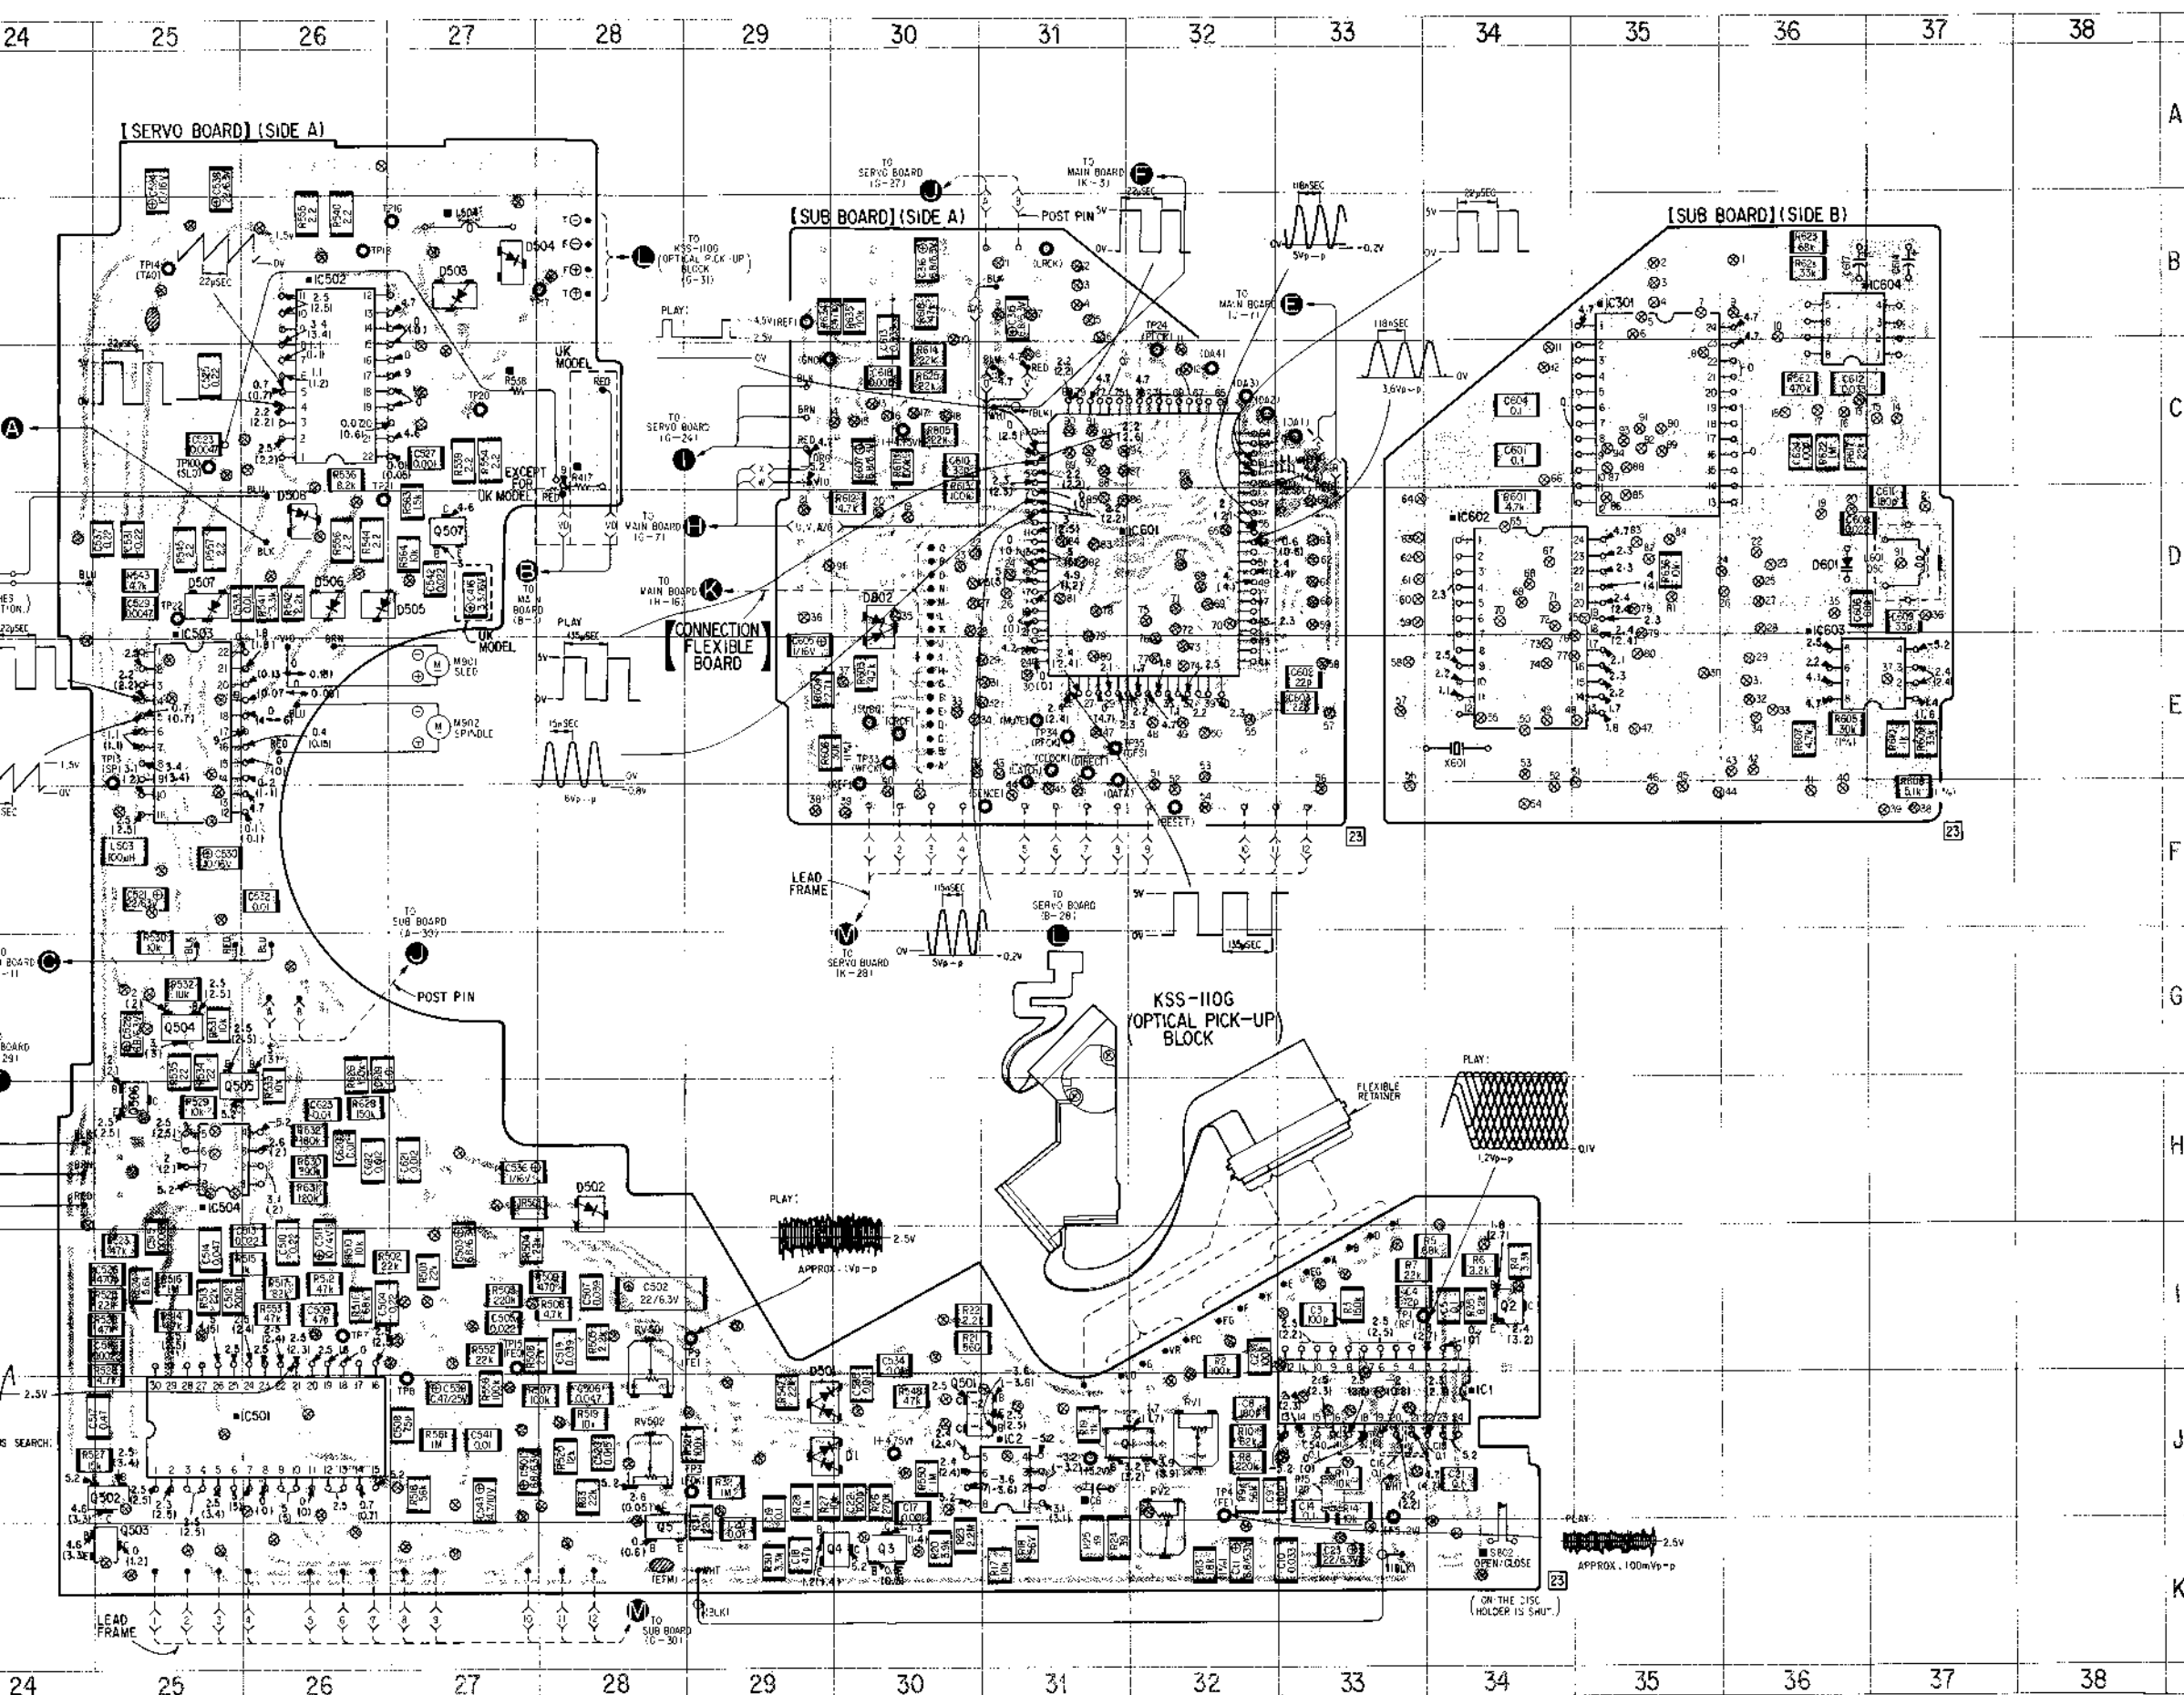

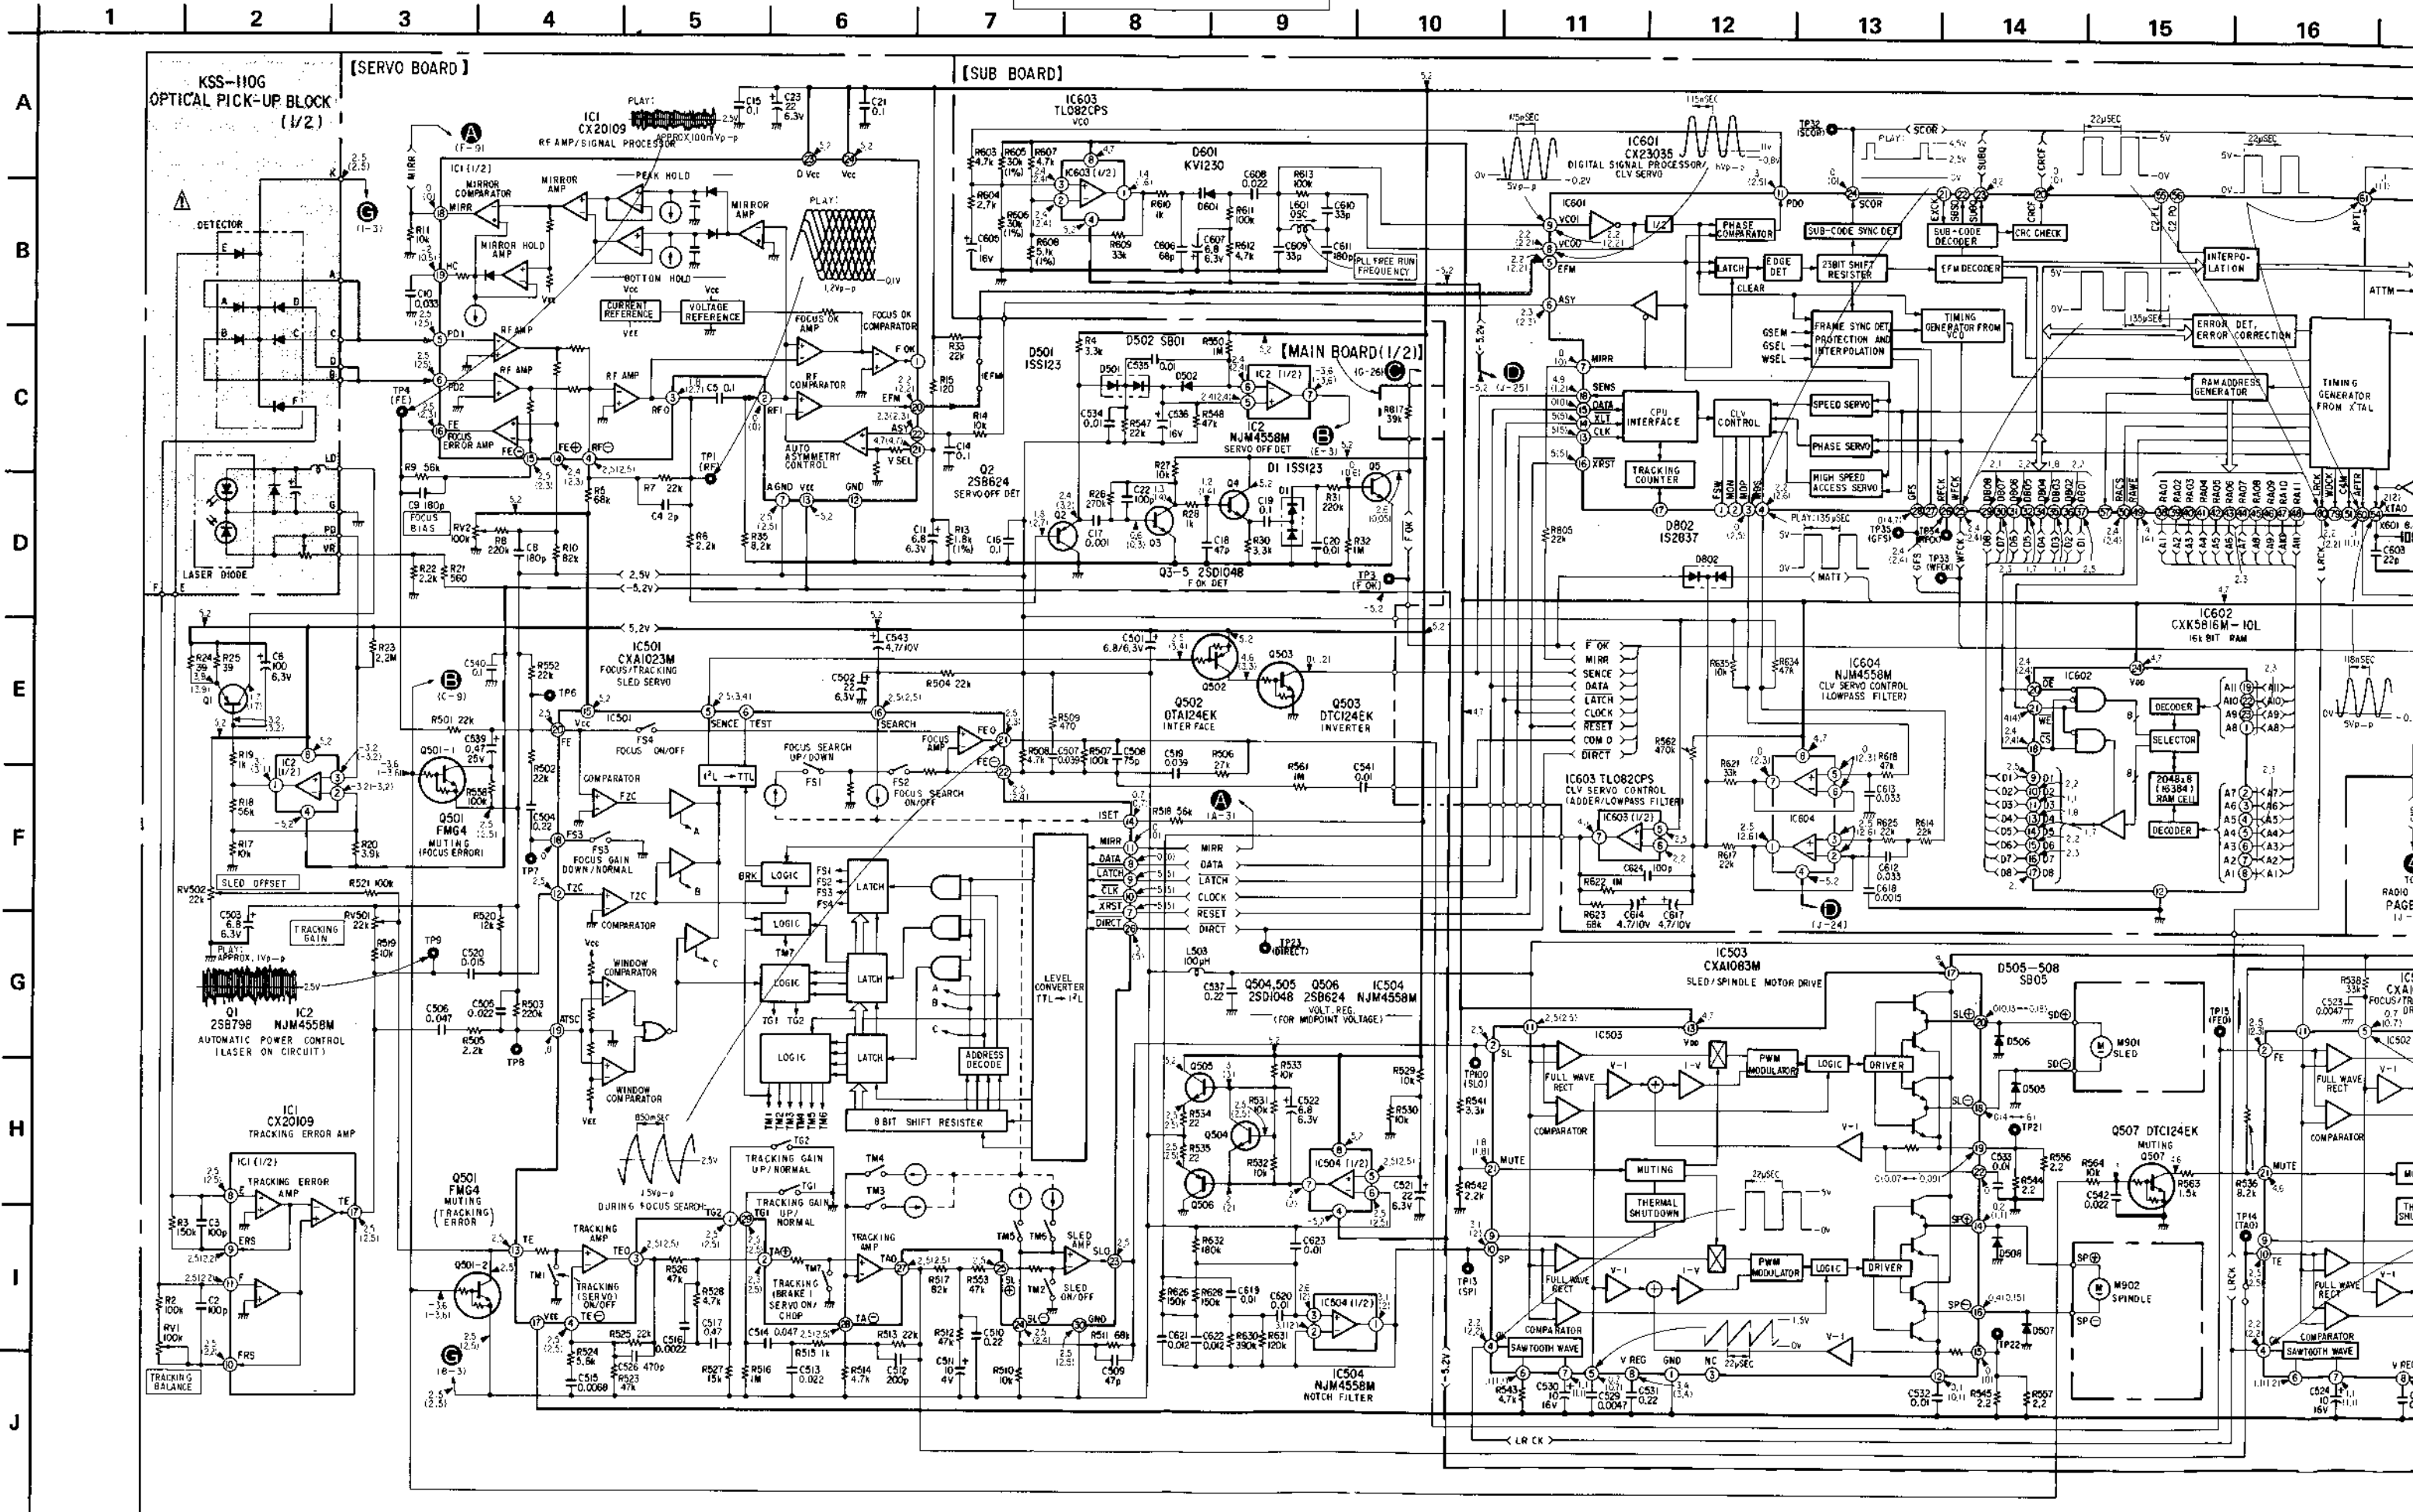

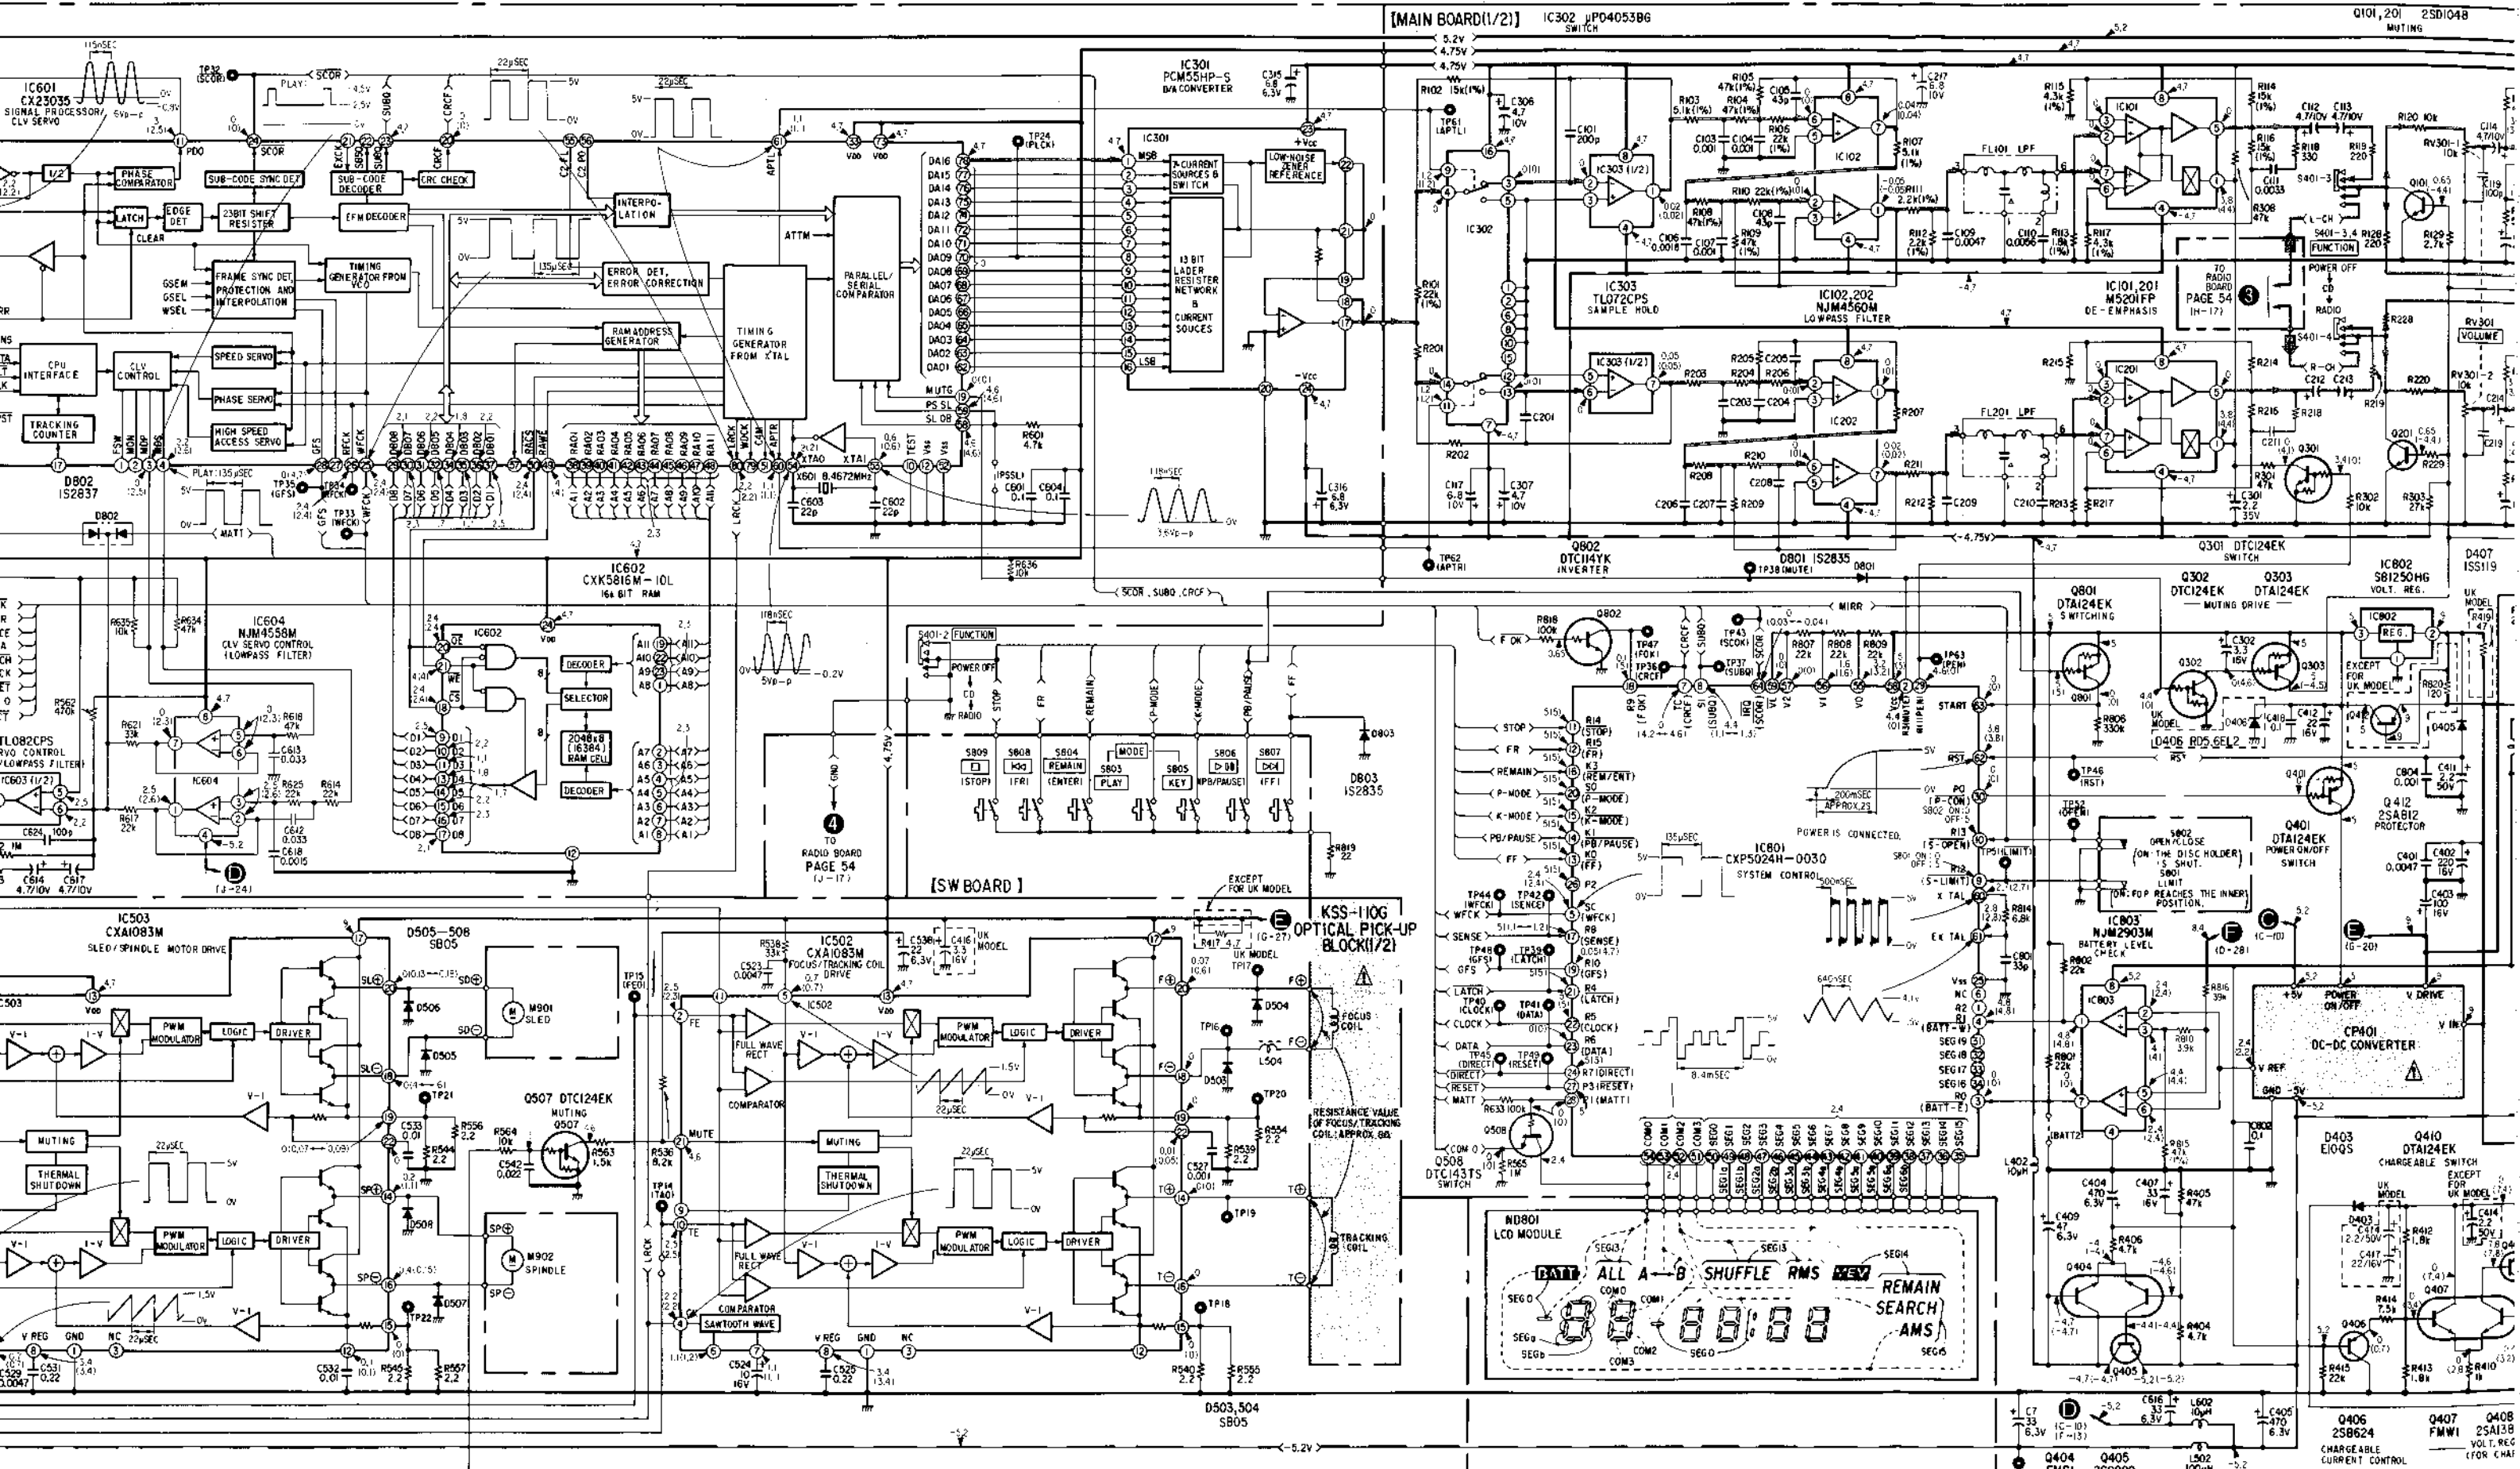


21 22 23 24 25 26 27 28 29 30 31 32 33

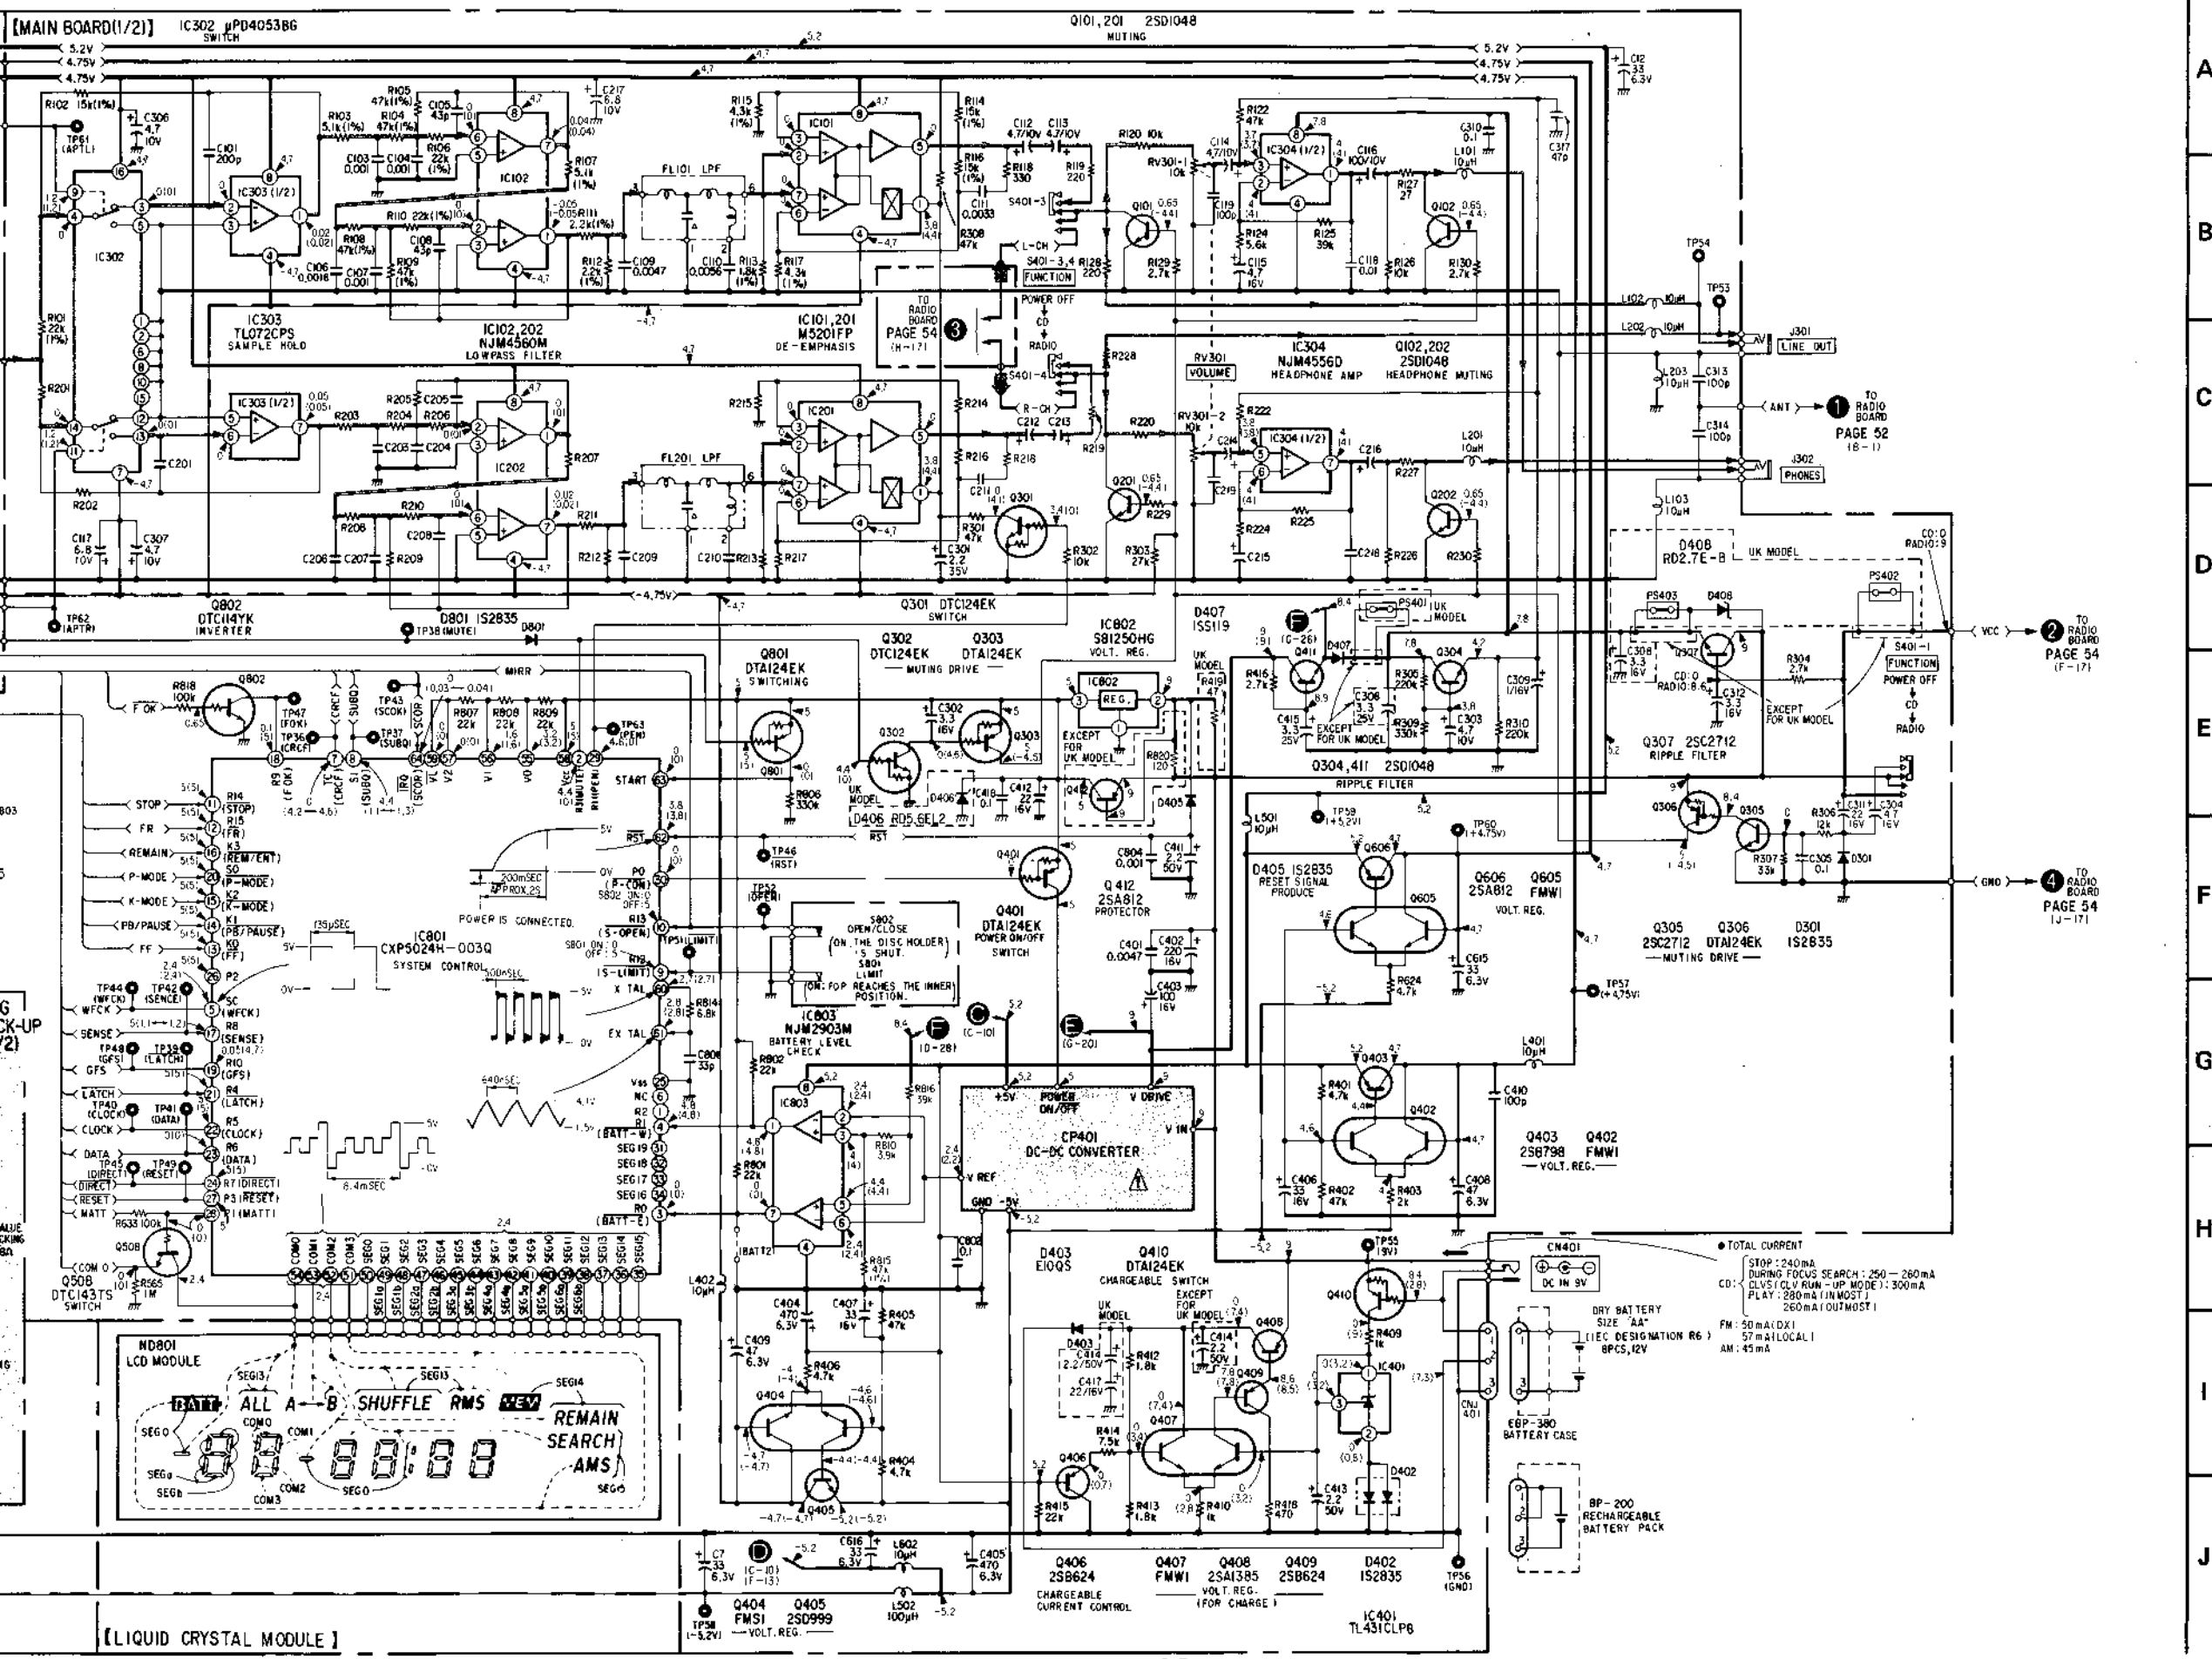


A  
B  
C  
D  
E  
F  
G  
H  
I  
J

[LIQUID CRYSTAL MODULE]

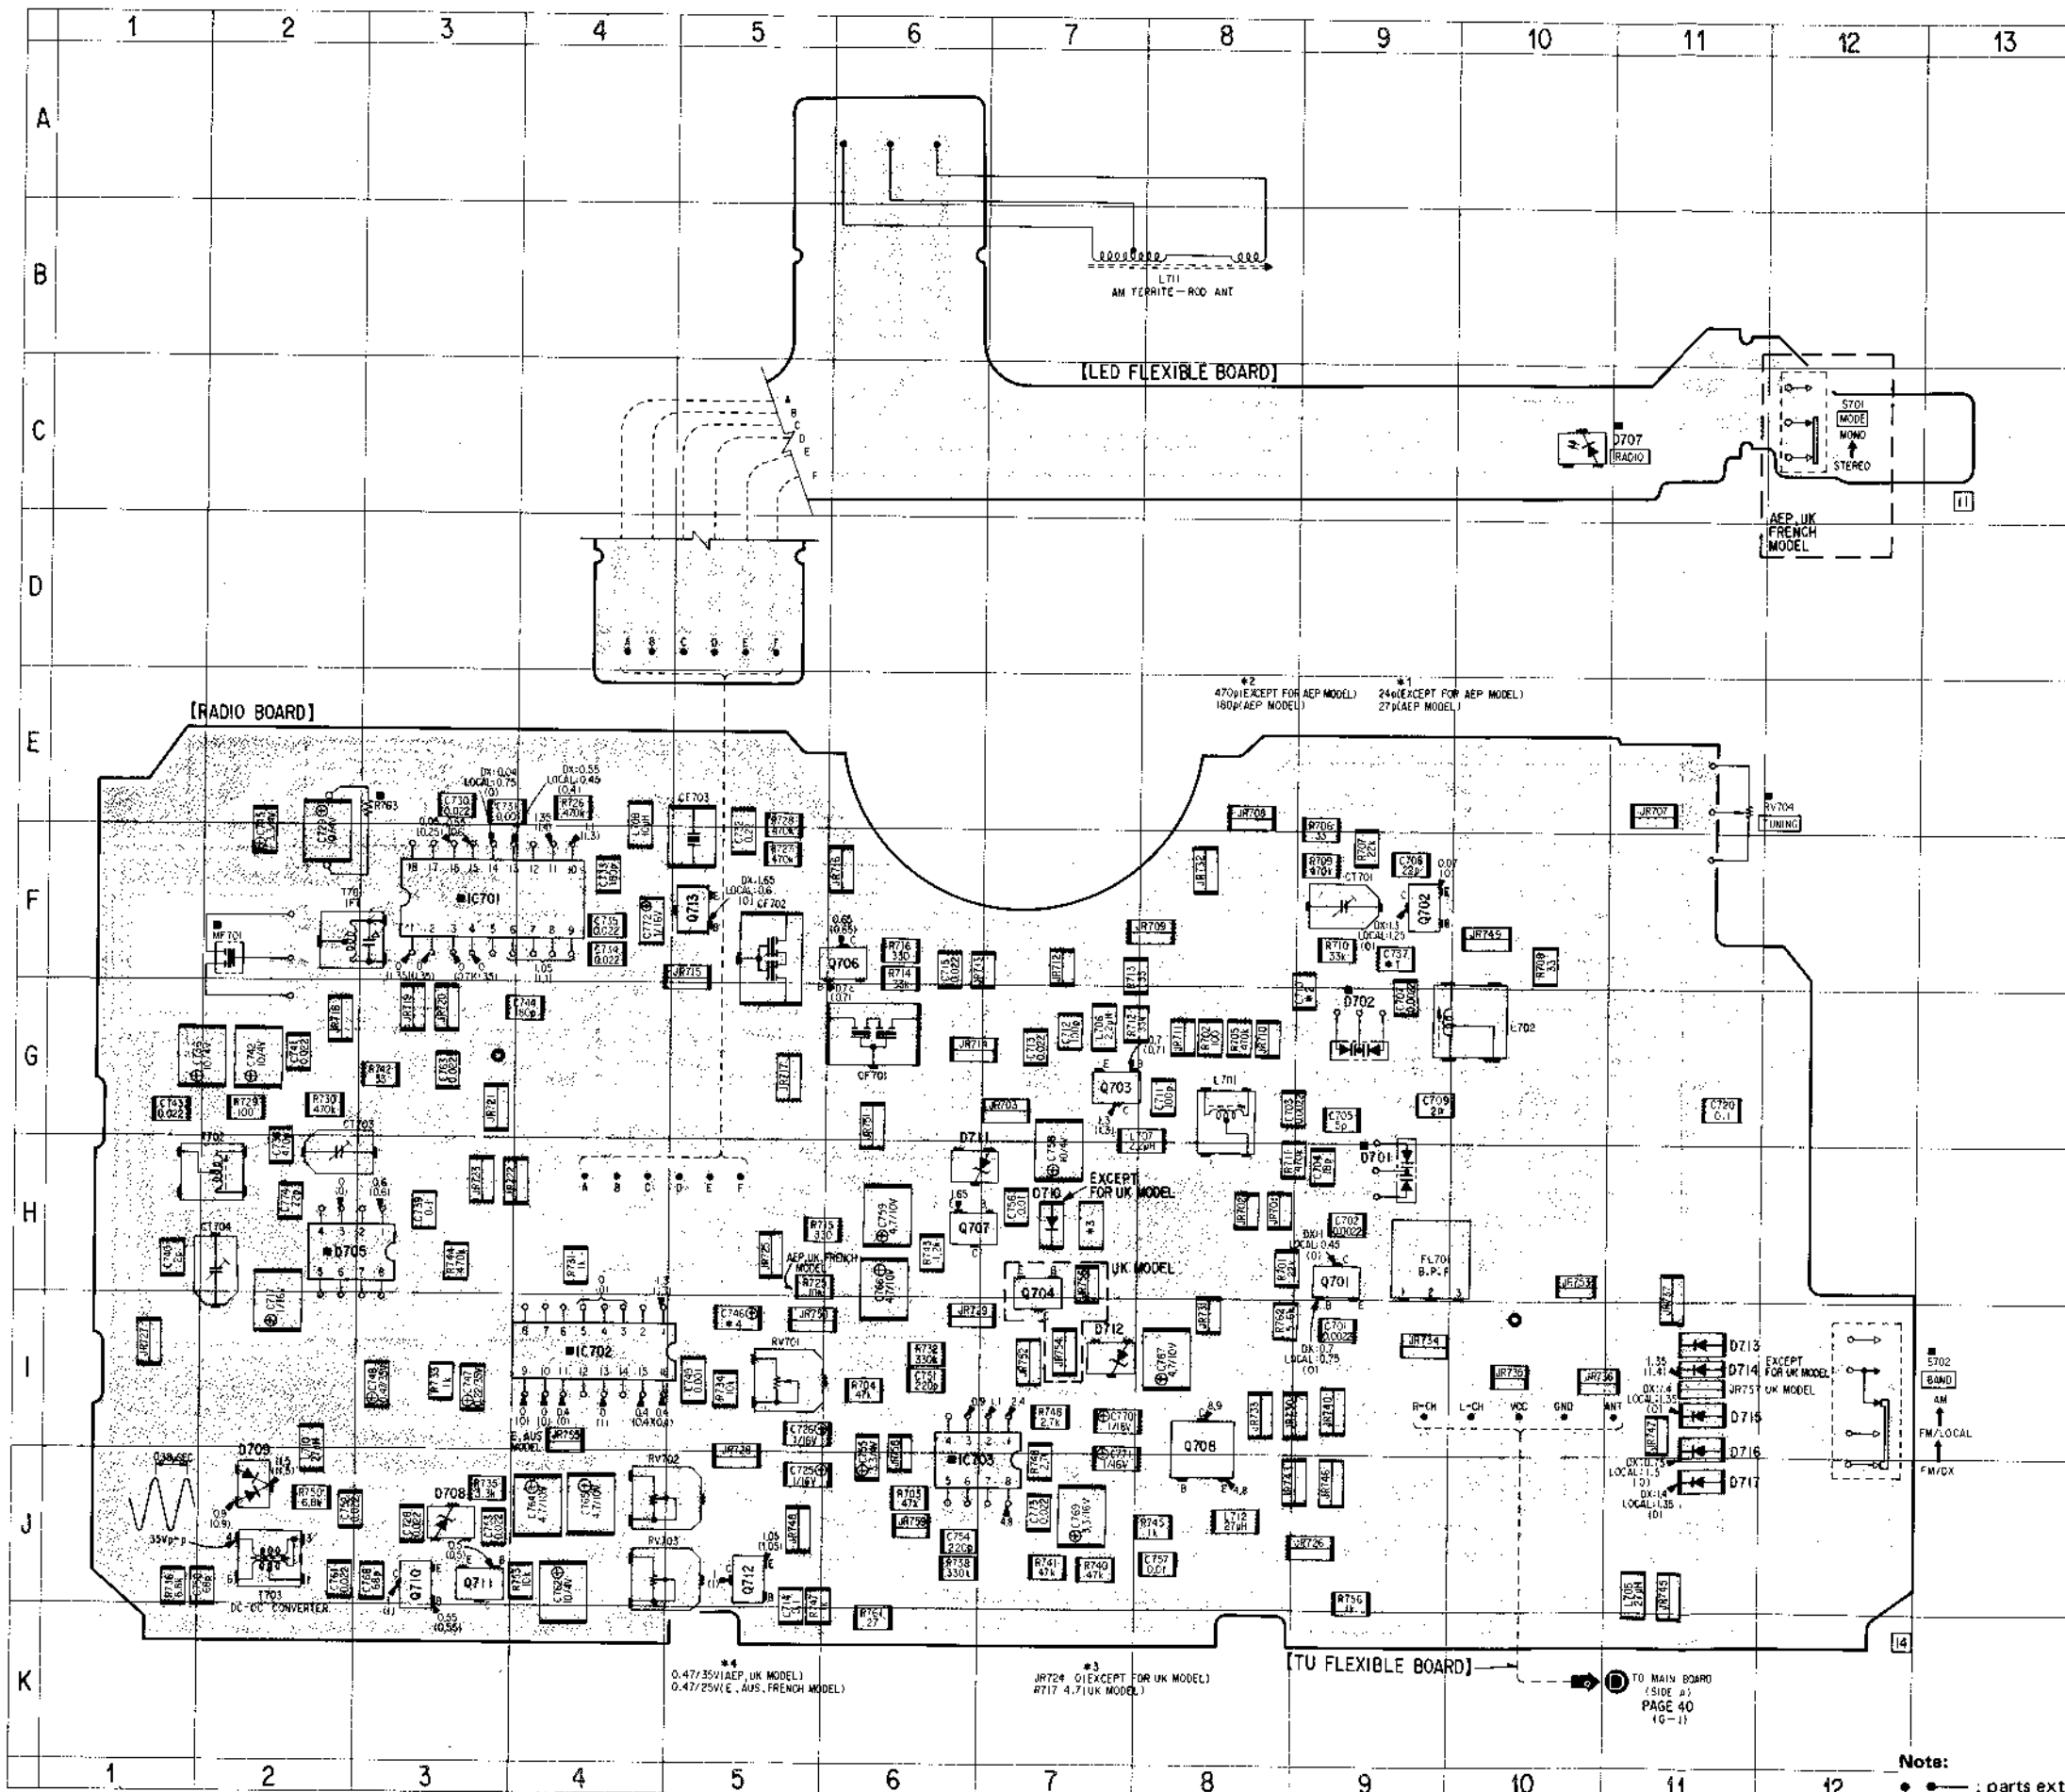

SEMICONDUCTOR LOCATION


Ref. No.	Location
D701	H-9
D702	G-9
D705	H-2
D707	C-10
D708	J-3
D709	J-2
D710	H-7
D711	H-6
D712	I-7
D713	I-11
D714	I-11
D715	I-11
D716	I-11
D717	J-11
IC701	F-3
IC702	I-4
IC703	J-6
Q701	H-9
Q702	F-9
Q703	G-7
Q704	H-7
Q706	F-6
Q707	H-6
Q708	I-8
Q710	J-3
Q711	J-3
Q712	J-5
Q713	F-5

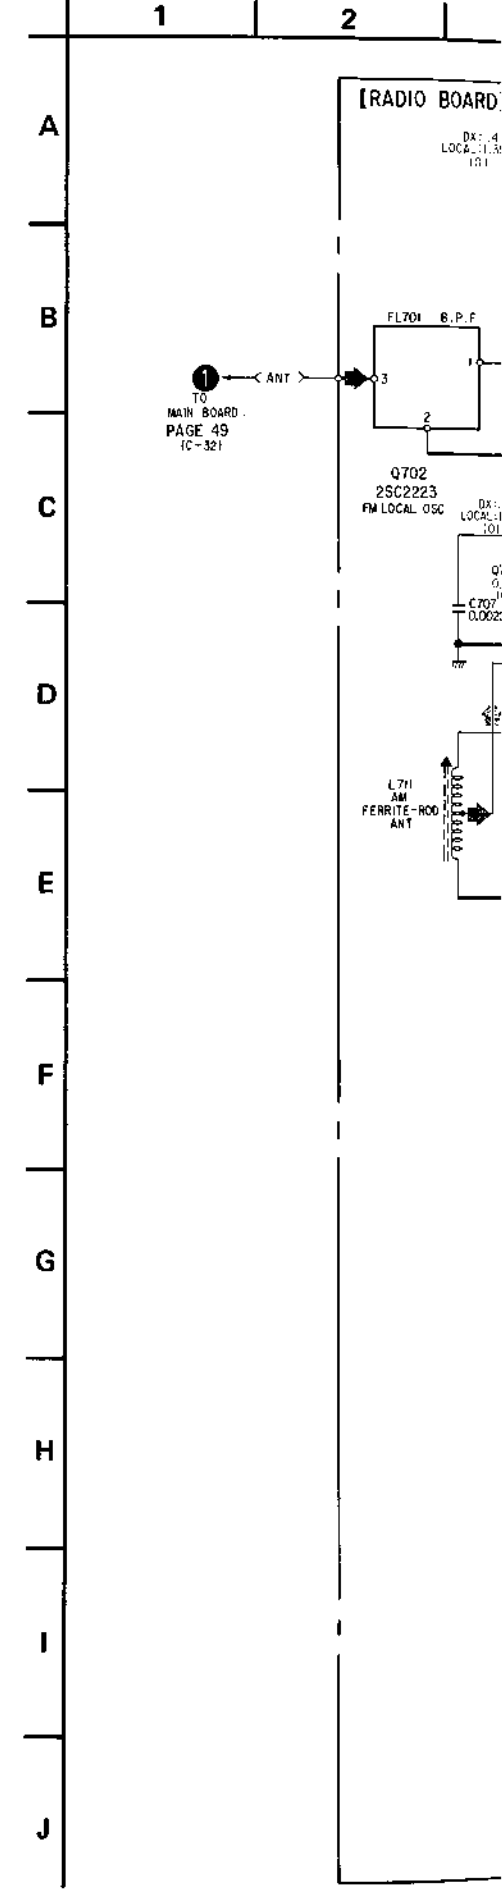

Notes:

- : parts extracted from the conductor side.
- : part mounted on the conductor side.


4.4. SCHEMATIC DIAGRAM - RADIO SECTION -

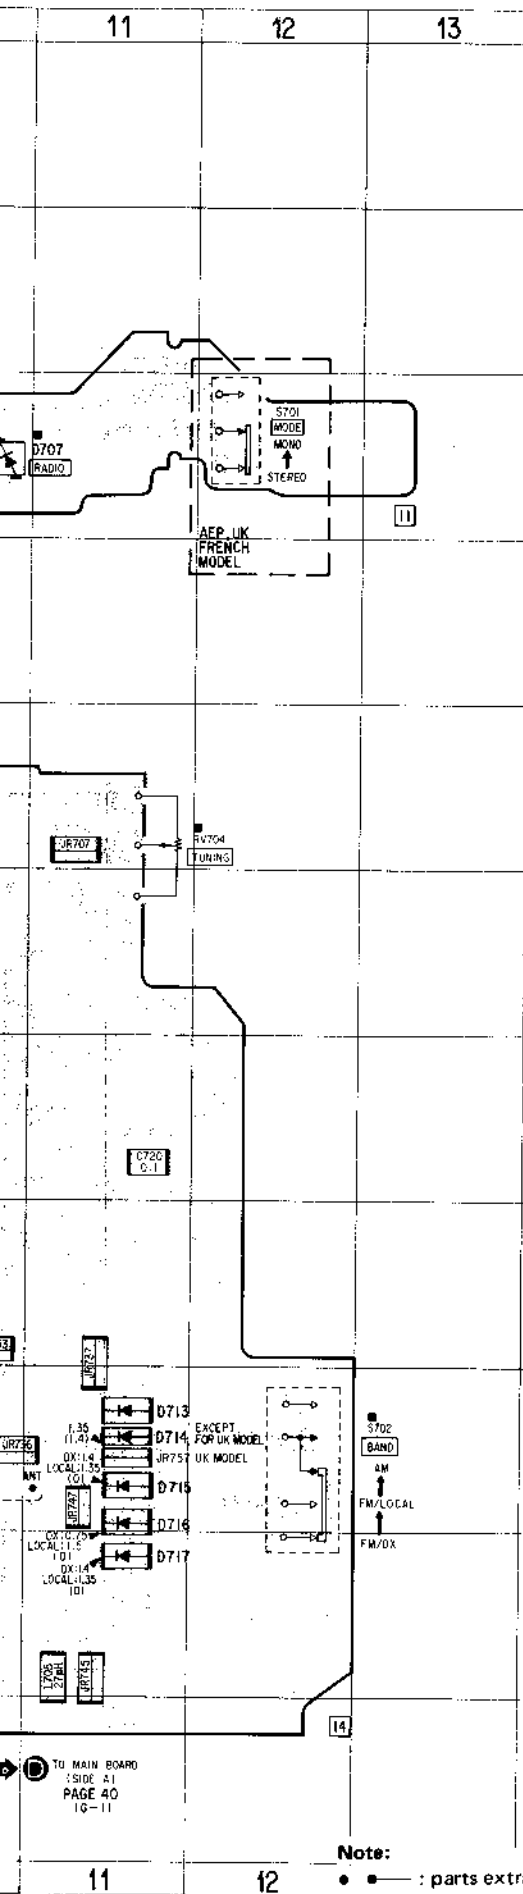


● SEMICONDUCTOR LOCATION

Ref. No.	Location
D701	H-9
D702	G-9
D705	H-2
D707	C-10
D708	J-3
D709	J-2
D710	H-7
D711	H-6
D712	I-7
D713	I-11
D714	I-11
D715	I-11
D716	I-11
D717	J-11
IC701	F-3
IC702	I-4
IC703	J-6
Q701	H-9
Q702	F-9
Q703	G-7
Q704	H-7
Q706	F-6
Q707	H-6
Q708	I-8
Q710	J-3
Q711	J-3
Q712	J-5
Q713	F-5

Note:  
 ● : parts extracted from the conductor side.  
 ■ : part mounted on the conductor side.

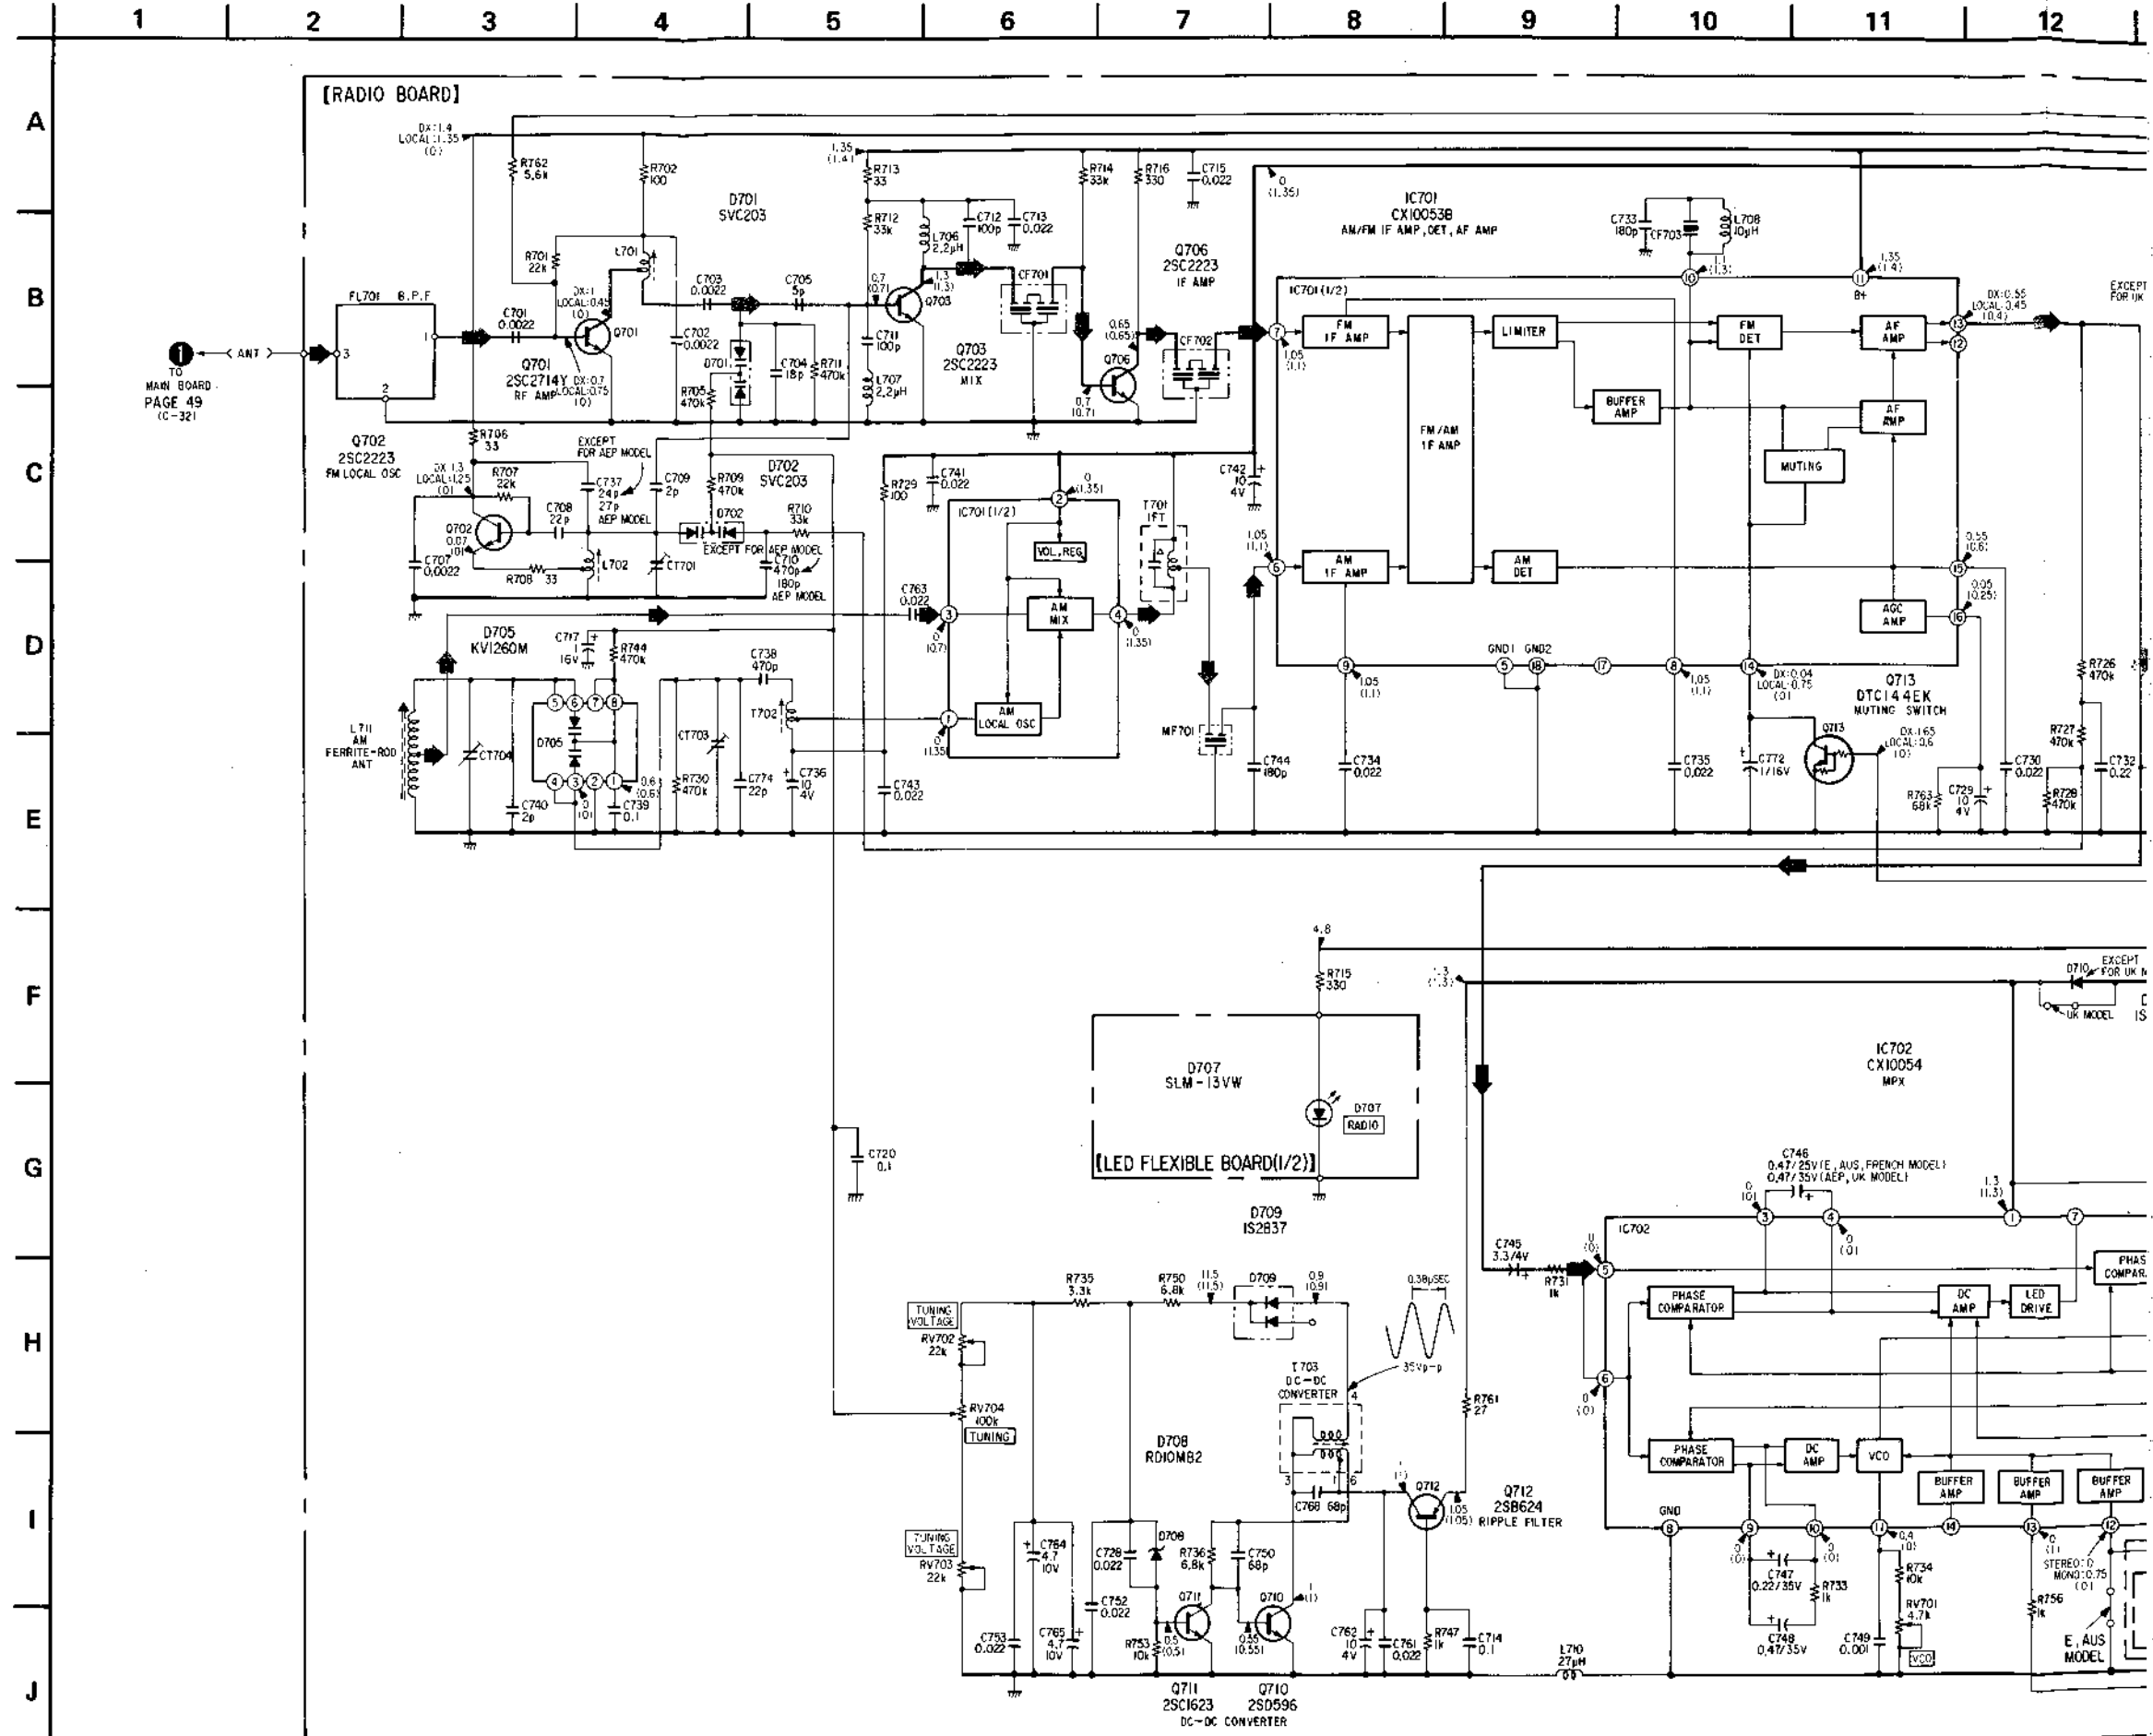



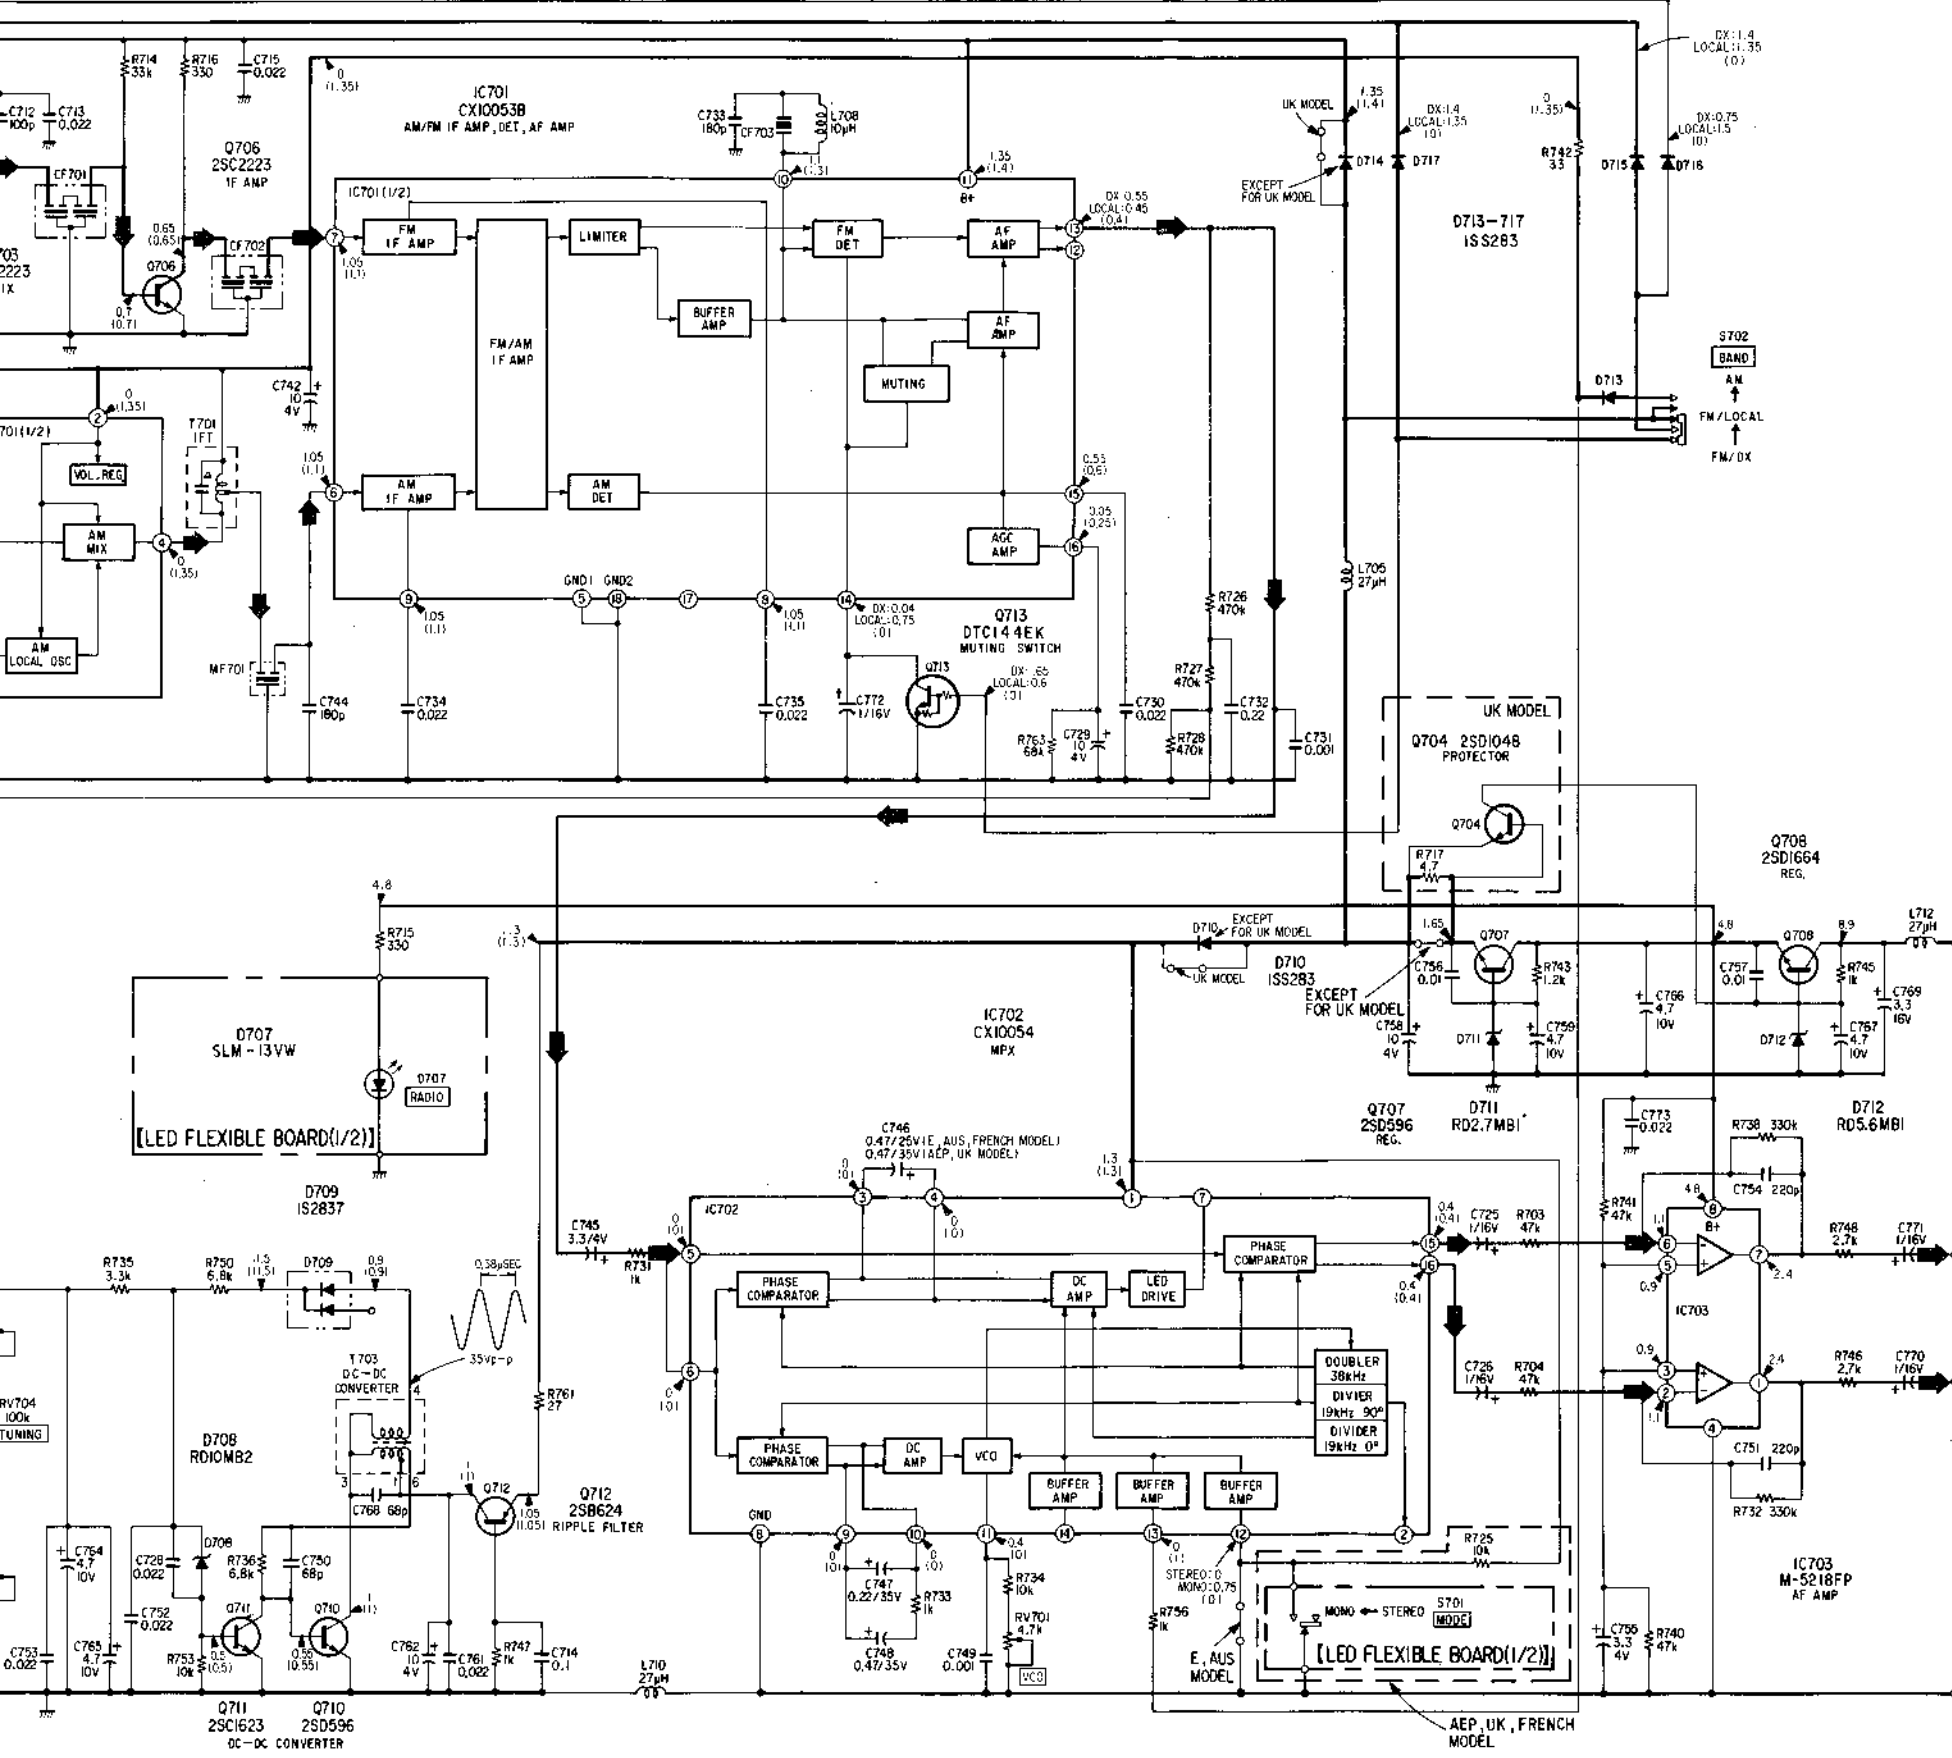

**Note:**

- All capacitors are in  $\mu\text{F}$  unless otherwise noted.  $\text{pF}$ :  $\mu\text{pF}$  50V or less are not indicated except for electrolytics and tantalums.
- All resistors are in  $\Omega$  and  $\frac{1}{2}W$  or less unless otherwise specified.
- $\Delta$  : internal component.
- $\rightarrow$  : FM signal path.
- $\dashrightarrow$  : AM signal path.
- $\text{---}$  : B+ bus.
- $\square$  : adjustment for repair.
- Power voltage is DC 9 V and fed with regulated dc power supply from DC in 9 V (external power voltage) jack. Voltages are DC with respect to ground under no-signal conditions when FUNCTION switch set to RADIO. Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken to ground under no-signal conditions by using oscilloscope when FUNCTION switch set to RADIO. Voltage variations may be noted due to normal production tolerances.
- Switch

Ref. No.	Switch	Position
S701	MODE	STEREO
S702	BAND	FM/DX

A  
B  
C  
D  
E  
F  
G  
H  
I  
J


## SECTION 5 EXPLODED VIEWS AND PARTS LIST


**NOTE:**

The mechanical parts with no reference number in the exploded views are not supplied.


Items marked " \* " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The construction parts of an assembled part are indicated with a collation number on the remark column.

The components identified by shading and mark  are critical for safety. Replace only with part number specified.


Les composants identifiés par une trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

(1)

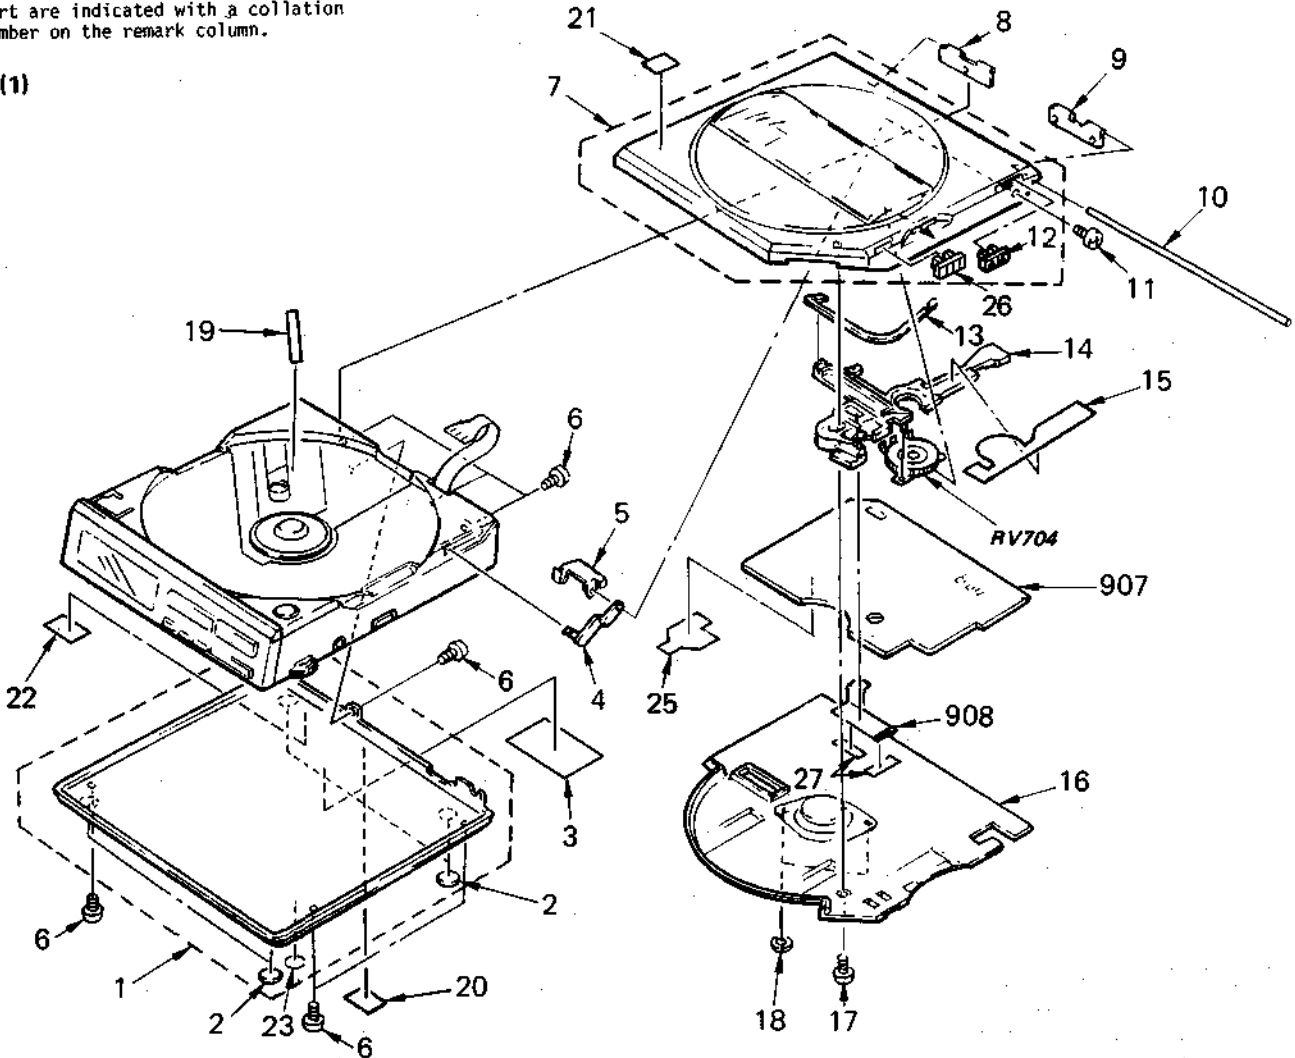


No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
1	X-4907-027-1	PLATE ASSY, BOTTOM		18	3-312-434-00	WASHER, SLIT	
2	4-912-641-01	FOOT, RUBBER		19	4-908-711-01	LABEL, CAUTION, LENS	
3	*4-885-838-00	(AEP,UK,FRENCH)...LABEL, CLASS 1		20	4-913-881-01	(UK,E,AUS,FRENCH)..LABEL, MODEL NUMBER(E)	
4	X-4907-024-1	PLATE ASSY, SWITCHING			4-913-894-01	(AEP).....LABEL, MODEL NUMBER	
5	X-4907-023-1	RETAINER ASSY, SPRING		21	3-703-710-01	STICKER, SONY SYMBOL (12)	
6	3-703-816-42	SCREW (M1.4X2.5), SPECIAL HEAD		22	*4-916-601-01	(AEP)...LABEL, SP	
7	X-4912-034-1	(E,AUS).....PALEN, ASSY		23	3-527-126-00	MARK, BATTERY CASE	
	X-4912-604-1	(AEP).....PALEN, ASSY		24	*4-913-874-01	HOLDER, ANTENNA	
	X-4912-605-2	(UK,FRENCH)....PANEL, ASSY		25	*4-913-884-01	SHEET, SHIELD	
8	4-907-030-11	PLATE, FULCRUM		26	4-913-872-01	KNOB, STEREO SELECTION	
9	4-912-643-01	HINGE		27	3-831-441-11	CUSHION (B)	
10	4-907-031-01	BAR, FULCRUM		907	A-3089-188-A	(E,AUS)....MOUNTED PCB, RADIO	
11	3-703-816-02	SCREW (M1.4X2.0), SPECIAL HEAD			A-3089-209-A	(UK).....MOUNTED PCB, RADIO	
12	4-913-835-01	KNOB, SENSE			A-3089-212-A	(AEP).....MOUNTED PCB, RADIO	
13	4-913-837-01	RACK (CD), POINTER			A-3089-213-A	(FRENCH)...MOUNTED PCB, RADIO	
14	4-913-836-01	GUIDE, TU		908	1-619-079-11	PC BOARD, LED FLEXIBLE	
15	*4-913-878-01	SHEET, COVER		L711	1-402-131-11	ANTENNA, FERRITE-ROD (MW)	
16	X-4912-601-1	TU COVER ASSY		RV704	1-237-139-11	RES. VAR, CARBON 100K (TUNING)	
17	3-703-816-72	SCREW (M1.4X3.0), SPECIAL HEAD					

# D-55T

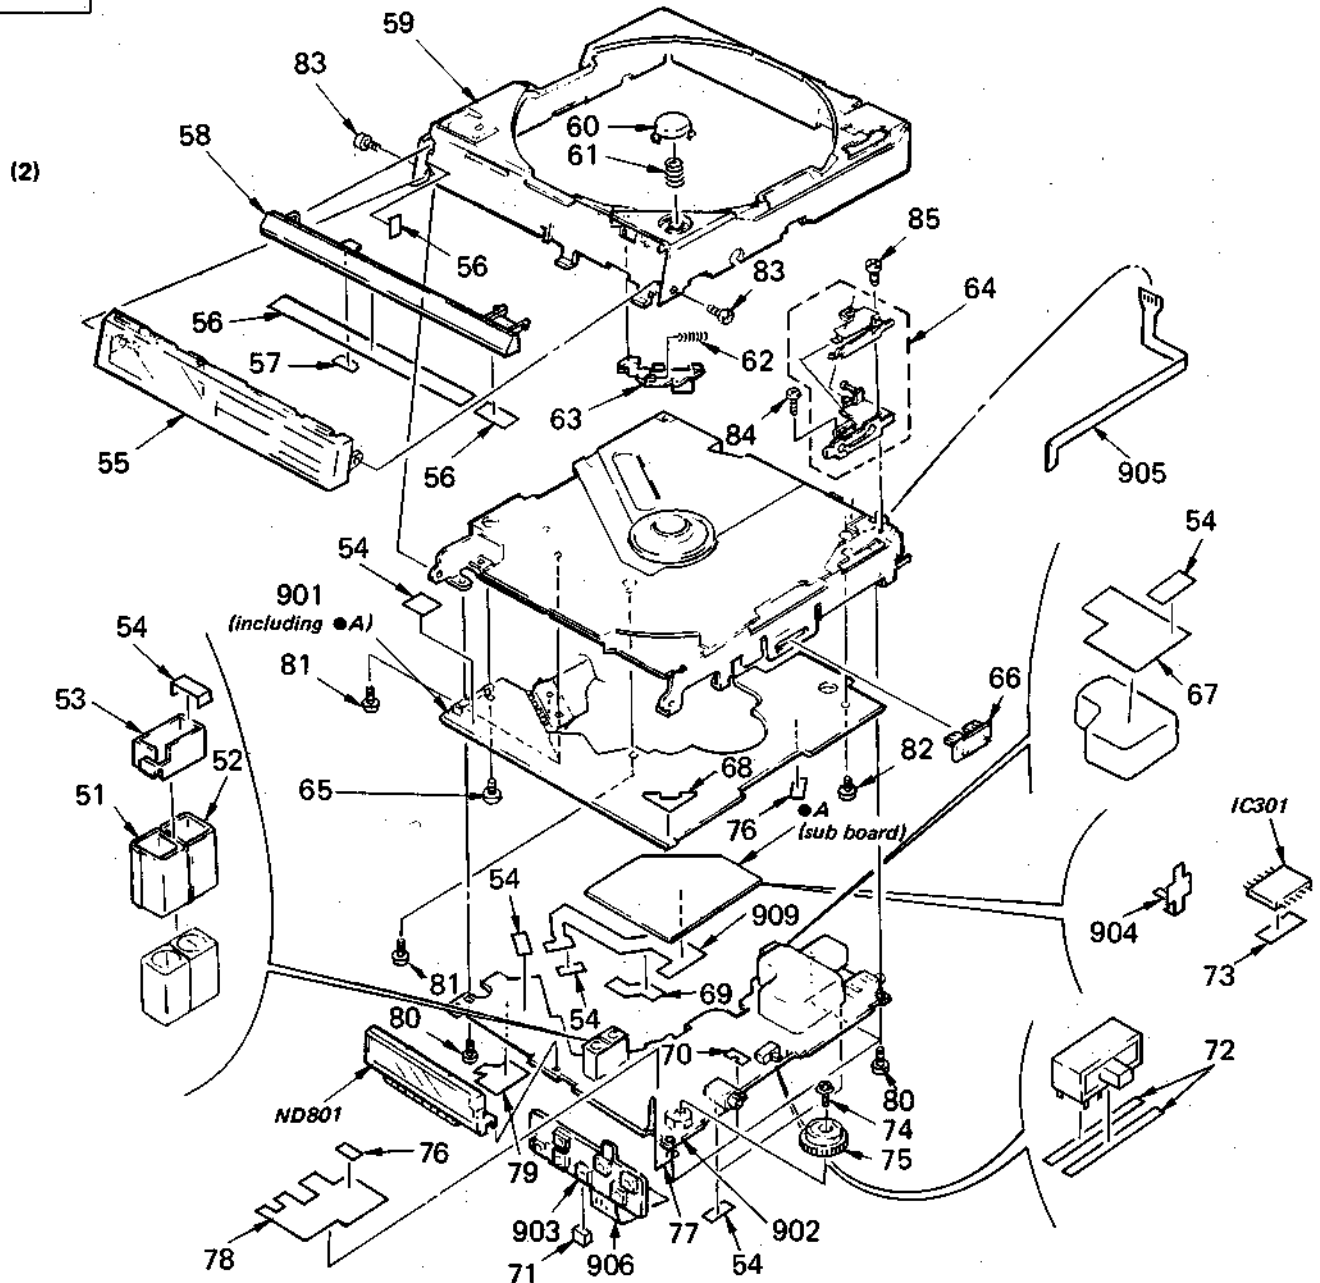


No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
51	*4-912-673-01	PLATE, SHIELD		73	*4-913-892-01	PAPER, SHIELD	
52	*4-912-673-11	PLATE, SHIELD		74	3-703-502-31	SCREW	
53	*4-913-889-01	PAPER (B), SHIELD		75	4-912-638-01	KNOB, VOLUME	
54	3-831-441-11	CUSHION (B)		76	3-831-441-XX	CUSHION, SPEAKER	
55	X-4907-020-1	PANEL ASSY, FRONT		77	4-912-680-02	SPRING	
56	*4-912-684-01	SHEET, INSULATING		78	4-913-886-01	PAPER, SHIELD	
57	*4-912-686-01	SHEET, INSULATING		79	3-331-021-01	SHEET, INSULATING	
58	4-912-625-11	STRIP, ORNAMENTAL		80	3-703-816-41	SCREW (M1.4X2.5), SPECIAL HEAD	
59	4-912-634-31	CABINET		81	3-703-816-31	SCREW (M1.4X1.6), SPECIAL HEAD	
60	4-912-626-01	BUTTON, OPEN		82	7-685-103-14	SCREW +P 2X5 TYPE2 NON-SLIT	
61	4-912-611-01	SPRING, COMPRESSION		83	3-703-816-72	SCREW (M1.4X3.0), SPECIAL HEAD	
62	4-912-610-01	SPRING, COMPRESSION		84	3-703-816-32	SCREW (M1.4X1.6), SPECIAL HEAD	
63	4-912-628-01	PLATE, LOCK, SLIDE		85	3-703-816-01	SCREW (M1.4X2.0), SPECIAL HEAD	
64	X-4907-025-1	BRACKET ASSY, SWITCHING		901	A-3015-443-A	(AEP,E,AUS,FRENCH)...PC BOARD ASSY, SERVO	
65	4-912-652-01	SCREW (2X5), TAPPING			A-3015-445-A	(UK).....PC BOARD ASSY, SERVO	
66	4-912-623-01	KNOB, POWER		902	A-3015-411-A	(AEP,E,AUS,FRENCH)...PC BOARD ASSY, MAIN	
67	*4-912-671-01	SHEET (UPPER), DD CAPACITOR			A-3015-451-A	(UK).....PC BOARD ASSY, MAIN	
68	*4-913-888-02	SHEET(B), INSULATING, PC BOARD		903	*1-619-124-11	PC BOARD, SW	
69	*4-913-890-02	PAPER, SHIELD		904	*1-535-511-11	FRAME, LEAD (F TYPE)	
70	*4-913-893-01	SHEET, INSULATING, PC BOARD		905	1-618-847-11	PC BOARD, TU FLEXIBLE	
71	*3-329-460-01	SPACER		906	1-618-849-11	PC BOARD, SW FLEXIBLE	
72	*4-913-891-01	SHEET, INSULATING		909	1-618-965-11	PC BOARD, CONNECTION FLEXIBLE	
				N0801	1-807-331-11	MODULE, LCD	

(3)

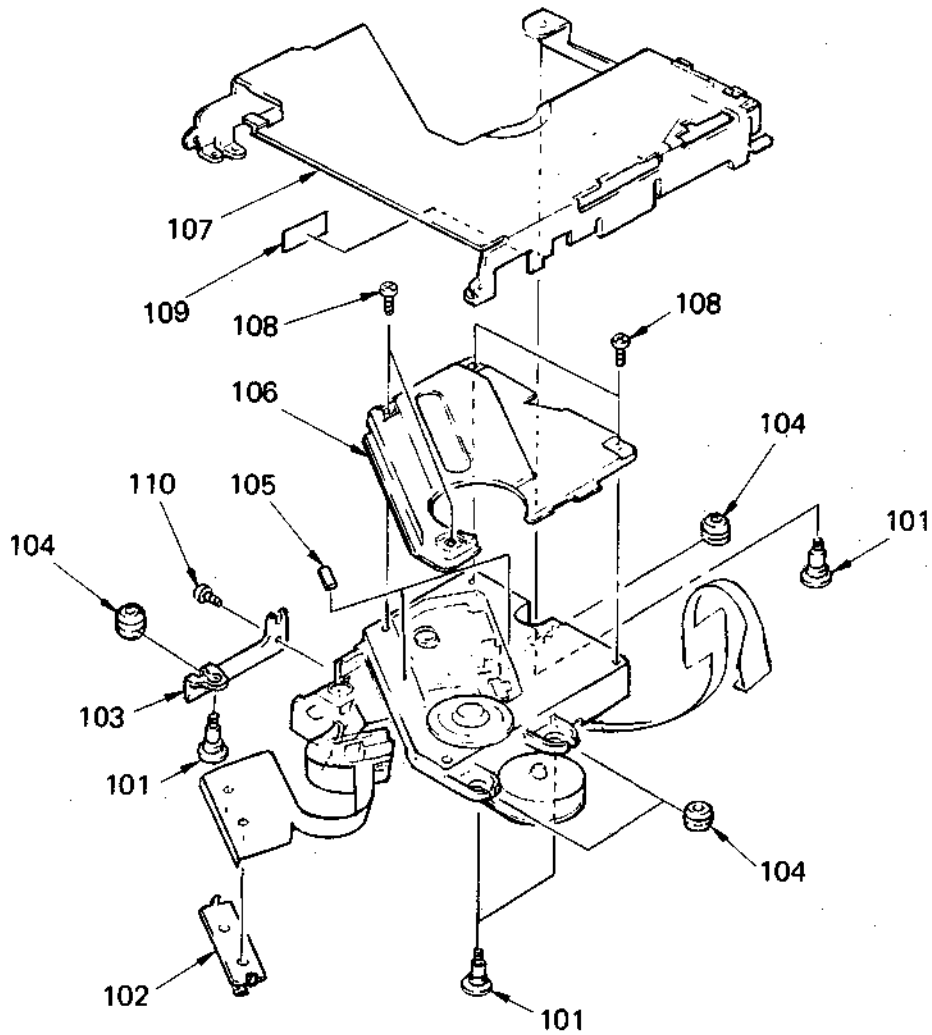

<u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>	<u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>
101	4-908-754-11	SCREW		106	4-912-651-01	COVER, MD	
102	*4-912-608-01	RETAINER, FLEXIBLE		107	X-4907-026-2	CHASSIS ASSY	
103	4-907-039-01	HOLDER (A), INSULATOR		108	3-893-942-11	SCREW (1.7X3), TAPPING (B)	
104	4-908-755-01	INSULATOR (2001)		109	3-331-021-01	SHEET, INSULATING	
105	9-911-837-XX	SPACER		110	7-627-553-38	SCREW, PRECISION +P 2X3	

(4)

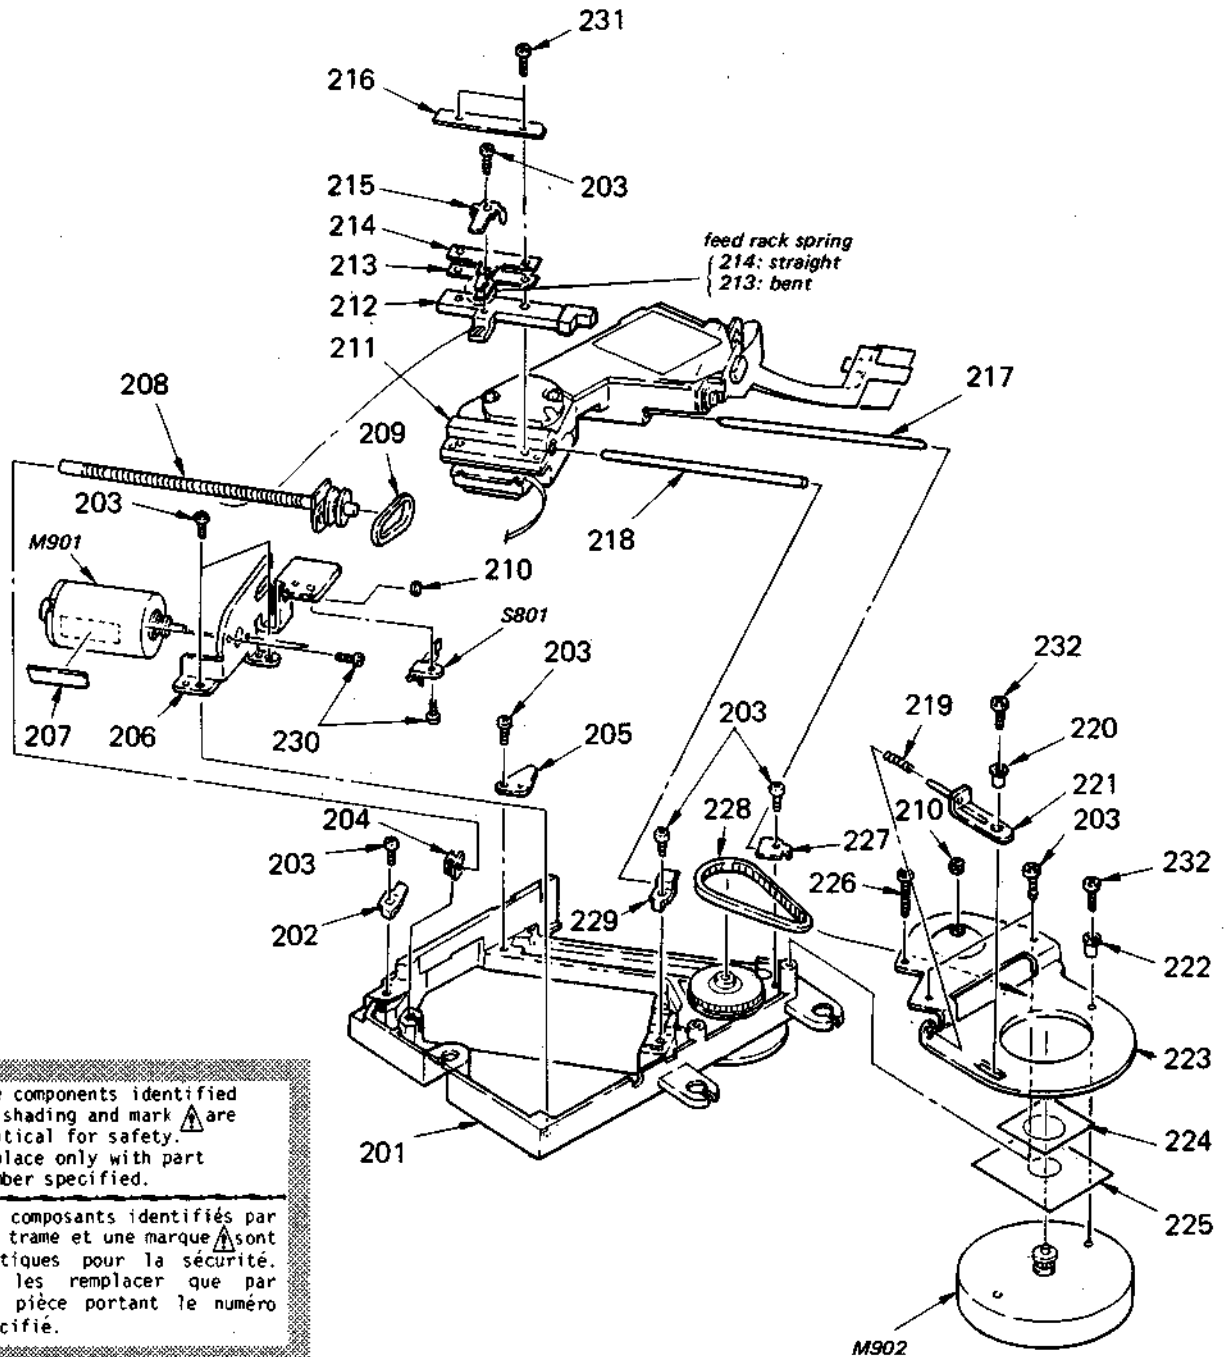

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
201	X-4912-408-1	CHASSIS ASSY, MD		219	4-912-424-01	SPRING, COMPRESSION	
202	3-320-134-01	RETAINER (B1)		220	4-912-422-01	COLLAR (B)	
203	3-316-938-81	SCREW (B1.4X5) (G), TAPPING		221	X-4912-406-1	PLATE ASSY, ADJUSTMENT, MOTOR	
204	4-912-409-01	RETAINER, FEED THRUST		222	4-912-421-01	COLLAR (A)	
205	3-320-104-01	RETAINER (C)		223	*4-912-408-01	BRACKET, MOTOR	
206	*4-912-410-01	DISK, FEED		224	*4-912-428-01	SHEET, ADHESIVE, SHEET	
207	3-831-441-11	CUSHION (B)		225	*4-912-427-02	SHEET, MOTOR	
208	X-4912-403-1	SCREW ASSY, FEED		226	3-320-138-51	SCREW (B1.4X12), TAPPING	
209	4-912-429-01	BELT		227	3-320-105-01	RETAINER (D)	
210	2-622-801-01	RETAINER, THRUST		228	4-912-401-01	BELT, TOOTH	
212	4-912-412-01	RACK, FEED		229	3-320-135-01	RETAINER (A1)	
213	4-912-423-11	SPRING		230	7-627-553-27	SCREW, PRECISION +P 2X2.5	
214	4-912-423-01	SPRING		231	7-627-557-07	SCREW, PRECISION +P 1.7X5.5	
215	4-912-416-01	RETAINER, SCREW		232	7-627-552-48	SCREW, PRECISION +P 1.7X4	
216	3-320-133-01	SPACER, RACK		904	*1-535-511-11	FRAME, LEAD (F TYPE)	
217	3-320-136-01	SHAFT (A1)		M901	1-541-318-11	MOTOR	
218	3-320-107-01	SHAFT (B)		M902	X-4912-407-1	MOTOR ASSY, CLV	
				S801	1-553-198-00	SWITCH, LEAF	

## SECTION 6 ELECTRICAL PARTS LIST

**NOTE:**

Items marked " \* " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

**CAPACITORS:**

MF:µF, PF:µµF.

**RESISTORS**

\* A?? resistors are in ohms.

F : nonflammable

**COILS**

MMH : mH, UH : µH

**SEMICONDUCTORS**

In each case, U : µ, for example:

UA....: µA..., UPA....: µPA..., UPC....: µPC, UPD....: µPD...

The components identified by shading and mark **A** are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque **A** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
901	A-3015-443-A	(AEP,E,AUS,FRENCH)..PC BOARD ASSY, SERVO			
	A-3015-445-A	(UK)...PC BOARD ASSY, SERVO			
902	A-3015-411-A	(AEP,E,AUS,FRENCH)..PC BOARD ASSY, MAIN			
	A-3015-451-A	(UK)....PC BOARD ASSY, MAIN			
903	*1-619-124-11	PC BOARD, SW			
904	*1-535-511-11	FRAME, LEAD (F TYPE)			
905	1-618-847-11	PC BOARD, TU FLEXIBLE			
906	1-618-849-11	PC BOARD, SW FLEXIBLE			
907	A-3089-188-A	(E,AUS)...MOUNTED PCB, RADIO			
	A-3089-209-A	(UK).....MOUNTED PCB, RADIO			
	A-3089-212-A	(AEP).....MOUNTED PCB, RADIO			
	A-3089-213-A	(FRENCH)...MOUNTED PCB, RADIO			
908	1-619-079-11	PC BOARD, LED FLEXIBLE			
909	1-618-965-11	PC BOARD, CONNECTION FLEXIBLE			
C2	1-163-117-00	CERAMIC CHIP 100PF	5%	50V	
C3	1-163-117-00	CERAMIC CHIP 100PF	5%	50V	
C4	1-163-085-00	CERAMIC CHIP 2PF	0.25PF	50V	
C5	1-163-038-00	CERAMIC CHIP 0.1MF		25V	
C6	1-123-661-00	ELECT 100MF	20%	6.3V	
C7	1-124-229-00	ELECT 33MF	20%	6.3V	
C8	1-163-123-00	CERAMIC CHIP 180PF	5%	50V	
C9	1-163-123-00	CERAMIC CHIP 180PF	5%	50V	
C10	1-163-074-00	CERAMIC CHIP 0.033MF	10%	25V	
C11	1-135-100-21	TANTAL. CHIP 6.8MF	20%	6.3V	
C12	1-124-229-00	ELECT 33MF	20%	6.3V	
C14	1-163-038-00	CERAMIC CHIP 0.1MF		25V	
C15	1-163-038-00	CERAMIC CHIP 0.1MF		25V	
C16	1-163-038-00	CERAMIC CHIP 0.1MF		25V	
C17	1-163-141-00	CERAMIC CHIP 0.001MF	10%	50V	
C18	1-163-109-00	CERAMIC CHIP 47PF	5%	50V	
C19	1-163-038-00	CERAMIC CHIP 0.1MF		25V	
C20	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C21	1-163-038-00	CERAMIC CHIP 0.1MF		25V	
C22	1-163-117-00	CERAMIC CHIP 100PF	5%	50V	
C23	1-124-778-00	ELECT 22MF	20%	6.3V	
C101	1-163-188-00	CERAMIC CHIP 200PF	5%	50V	
C103	1-163-335-11	CERAMIC CHIP 0.001MF	5%	50V	
C104	1-163-335-11	CERAMIC CHIP 0.001MF	5%	50V	
C105	1-163-108-00	CERAMIC CHIP 43PF	5%	50V	
C106	1-163-211-00	CERAMIC CHIP 0.0018MF	5%	50V	
C107	1-163-335-11	CERAMIC CHIP 0.001MF	5%	50V	
C108	1-163-108-00	CERAMIC CHIP 43PF	5%	50V	
C109	1-130-479-00	MYLAR 0.0047MF	5%	50V	
C110	1-130-480-00	MYLAR 0.0056MF	5%	50V	
C111	1-130-477-00	MYLAR 0.0033MF	5%	50V	

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
C112	1-135-096-21	TANTAL. CHIP 4.7MF	20%	10V	
C113	1-135-096-21	TANTAL. CHIP 4.7MF	20%	10V	
C114	1-135-096-21	TANTAL. CHIP 4.7MF	20%	10V	
C115	1-124-245-00	ELECT 4.7MF	20%	16V	
C116	1-124-443-00	ELECT 100MF	20%	10V	
C117	1-124-239-00	ELECT 6.8MF	20%	10V	
C118	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C119	1-163-117-00	CERAMIC CHIP 100PF	5%	50V	
C201	1-163-188-00	CERAMIC CHIP 200PF	5%	50V	
C203	1-163-335-11	CERAMIC CHIP 0.001MF	5%	50V	
C204	1-163-335-11	CERAMIC CHIP 0.001MF	5%	50V	
C205	1-163-108-00	CERAMIC CHIP 43PF	5%	50V	
C206	1-163-211-00	CERAMIC CHIP 0.0018MF	5%	50V	
C207	1-163-335-11	CERAMIC CHIP 0.001MF	5%	50V	
C208	1-163-108-00	CERAMIC CHIP 43PF	5%	50V	
C209	1-130-479-00	MYLAR 0.0047MF	5%	50V	
C210	1-130-480-00	MYLAR 0.0056MF	5%	50V	
C211	1-130-477-00	MYLAR 0.0033MF	5%	50V	
C212	1-135-096-21	TANTAL. CHIP 4.7MF	20%	10V	
C213	1-135-096-21	TANTAL. CHIP 4.7MF	20%	10V	
C214	1-135-096-21	TANTAL. CHIP 4.7MF	20%	10V	
C215	1-124-245-00	ELECT 4.7MF	20%	16V	
C216	1-124-443-00	ELECT 100MF	20%	10V	
C217	1-124-239-00	ELECT 6.8MF	20%	10V	
C218	1-163-059-00	CERAMIC CHIP 0.01MF	10%	50V	
C219	1-162-282-00	CERAMIC 100PF		50V	
C301	1-124-257-00	ELECT 2.2MF	20%	35V	
C302	1-135-092-21	TANTAL. CHIP 3.3MF	20%	16V	
C303	1-135-096-21	TANTAL. CHIP 4.7MF	20%	10V	
C304	1-124-245-00	ELECT 4.7MF	20%	16V	
C305	1-163-038-00	CERAMIC CHIP 0.1MF		25V	
C306	1-135-096-21	TANTAL. CHIP 4.7MF	20%	10V	
C307	1-135-096-21	TANTAL. CHIP 4.7MF	20%	10V	
C308	1-124-258-00	(AEP,E,AUS,FRENCH)... ELECT 3.3MF	20%	25V	
C308	1-135-092-21	(UK)...TANTAL. CHIP 3.3MF	20%	16V	
C309	1-135-091-00	TANTAL. CHIP 1MF	20%	16V	
C310	1-163-038-00	CERAMIC CHIP 0.1MF		25V	
C311	1-124-234-00	ELECT 22MF	20%	16V	
C312	1-135-092-21	TANTAL. CHIP 3.3MF	20%	16V	
C313	1-163-117-00	CERAMIC CHIP 100PF	5%	50V	
C314	1-163-117-00	CERAMIC CHIP 100PF	5%	50V	
C315	1-135-100-21	TANTAL. CHIP 6.8MF	20%	6.3V	
C316	1-135-100-21	TANTAL. CHIP 6.8MF	20%	6.3V	
C317	1-163-109-00	CERAMIC CHIP 47PF	5%	50V	

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
C401	1-163-017-00	CERAMIC CHIP 0.0047MF	10%	50V	
C402	1-123-321-00	ELECT 220MF	20%	16V	
C403	1-124-445-00	ELECT 100MF	20%	16V	
C404	1-124-470-11	ELECT 470MF	20%	6.3V	
C405	1-124-470-11	ELECT 470MF	20%	6.3V	
C406	1-124-234-00	ELECT 22MF	20%	16V	
C407	1-124-224-00	ELECT 47MF	20%	6.3V	
C408	1-124-224-00	ELECT 47MF	20%	6.3V	
C409	1-124-224-00	ELECT 47MF	20%	6.3V	
C410	1-163-117-00	CERAMIC CHIP 100PF	5%	50V	
C411	1-124-257-00	ELECT 2.2MF	20%	50V	
C412	1-124-234-00	ELECT 22MF	20%	16V	
C413	1-124-257-00	ELECT 2.2MF	20%	50V	
C414	1-124-257-00	ELECT 2.2MF	20%	50V	
C415	1-124-258-00	ELECT 3.3MF	20%	25V	
C416	1-135-092-21	(UK)...TANTAL. CHIP 3.3MF	20%	16V	
C417	1-124-234-00	(UK)...ELECT 22MF	20%	16V	
C418	1-163-038-00	CERAMIC CHIP 0.1MF		25V	
C501	1-135-100-21	TANTAL. CHIP 6.8MF	20%	6.3V	
C502	1-135-101-21	TANTAL. CHIP 22MF	10%	6.3V	
C503	1-135-100-21	TANTAL. CHIP 6.8MF	20%	6.3V	
C504	1-163-081-00	CERAMIC CHIP 0.22MF		25V	
C505	1-163-033-00	CERAMIC CHIP 0.022MF	10%	25V	
C506	1-163-075-00	CERAMIC CHIP 0.047MF	10%	25V	
C507	1-163-079-00	CERAMIC CHIP 0.039MF	10%	25V	
C508	1-163-114-00	CERAMIC CHIP 75PF	5%	50V	
C509	1-163-109-00	CERAMIC CHIP 47PF	5%	50V	
C510	1-163-081-00	CERAMIC CHIP 0.22MF		25V	
C511	1-135-104-00	TANTAL. CHIP 10MF	20%	4V	
C512	1-163-124-00	CERAMIC CHIP 200PF	5%	50V	
C513	1-163-033-00	CERAMIC CHIP 0.022MF	10%	25V	
C514	1-163-075-00	CERAMIC CHIP 0.047MF	10%	25V	
C515	1-163-019-00	CERAMIC CHIP 0.0068MF	10%	50V	
C516	1-163-013-00	CERAMIC CHIP 0.0022MF	10%	50V	
C517	1-162-610-00	CERAMIC CHIP 0.47MF		25V	
C519	1-163-079-00	CERAMIC CHIP 0.039MF	10%	25V	
C520	1-163-023-00	CERAMIC CHIP 0.015MF	10%	50V	
C521	1-124-778-00	ELECT 22MF	20%	6.3V	
C522	1-135-100-21	TANTAL. CHIP 6.8MF	20%	6.3V	
C523	1-163-017-00	CERAMIC CHIP 0.0047MF	10%	50V	
C524	1-124-779-00	ELECT 10MF	20%	16V	
C525	1-163-081-00	CERAMIC CHIP 0.22MF		25V	
C526	1-163-133-00	CERAMIC CHIP 470PF	5%	50V	
C527	1-163-141-00	CERAMIC CHIP 0.001MF	10%	50V	
C529	1-163-017-00	CERAMIC CHIP 0.0047MF	10%	50V	
C530	1-124-779-00	ELECT 10MF	20%	16V	
C531	1-163-081-00	CERAMIC CHIP 0.22MF		25V	
C532	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C533	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C534	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C535	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C536	1-135-091-00	TANTAL. CHIP 1MF	20%	16V	
C537	1-163-081-00	CERAMIC CHIP 0.22MF		25V	
C538	1-124-778-00	ELECT 22MF	20%	6.3V	
C539	1-135-083-00	TANTAL. CHIP 0.47MF	10%	25V	
C540	1-163-038-00	CERAMIC CHIP 0.1MF		25V	
C541	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
C542	1-163-033-00	CERAMIC CHIP 0.022MF	10%	25V	
C543	1-135-096-21	TANTAL. CHIP 4.7MF	10%	10V	
C601	1-163-038-00	CERAMIC CHIP 0.1MF		25V	
C602	1-163-101-00	CERAMIC CHIP 22PF	5%	50V	
C603	1-163-101-00	CERAMIC CHIP 22PF	5%	50V	
C604	1-163-038-00	CERAMIC CHIP 0.1MF		25V	
C605	1-135-091-00	TANTAL. CHIP 1MF	20%	16V	
C606	1-163-113-00	CERAMIC CHIP 68PF	5%	50V	
C607	1-135-100-21	TANTAL. CHIP 6.8MF	20%	6.3V	
C608	1-163-033-00	CERAMIC CHIP 0.022MF	10%	25V	
C609	1-163-105-00	CERAMIC CHIP 33PF	5%	50V	
C610	1-163-105-00	CERAMIC CHIP 33PF	5%	50V	
C611	1-163-123-00	CERAMIC CHIP 180PF	5%	50V	
C612	1-163-074-00	CERAMIC CHIP 0.033MF	10%	25V	
C613	1-163-074-00	CERAMIC CHIP 0.033MF	10%	25V	
C614	1-131-375-00	TANTALUM 4.7MF	10%	10V	
C615	1-124-229-00	ELECT 33MF	20%	6.3V	
C616	1-124-229-00	ELECT 33MF	20%	6.3V	
C617	1-131-375-00	TANTALUM 4.7MF	10%	10V	
C618	1-163-209-00	CERAMIC CHIP 0.0015MF	10%	50V	
C619	1-163-021-00	CERAMIC CHIP 0.01MF	5%	50V	
C620	1-163-021-00	CERAMIC CHIP 0.01MF	5%	50V	
C621	1-163-060-00	CERAMIC CHIP 0.012MF	10%	50V	
C622	1-163-060-00	CERAMIC CHIP 0.012MF	10%	50V	
C623	1-163-021-00	CERAMIC CHIP 0.01MF	5%	50V	
C624	1-163-117-00	CERAMIC CHIP 100PF	5%	50V	
C701	1-163-013-00	CERAMIC CHIP 0.0022MF	10%	50V	
C702	1-163-013-00	CERAMIC CHIP 0.0022MF	10%	50V	
C703	1-163-013-00	CERAMIC CHIP 0.0022MF	10%	50V	
C704	1-163-099-00	CERAMIC CHIP 18PF	5%	50V	
C705	1-163-088-00	CERAMIC CHIP 5PF		0.25PF 50V	
C707	1-163-013-00	CERAMIC CHIP 0.0022MF	10%	50V	
C708	1-163-101-00	CERAMIC CHIP 22PF	5%	50V	
C709	1-163-085-00	CERAMIC CHIP 2PF		0.25PF 50V	
C710	1-163-123-00	(AEP)...CERAMIC CHIP 180PF	5%	50V	
C710	1-163-133-00	(UK,E,AUS,FRENCH)... CERAMIC CHIP 470PF	5%	50V	
C711	1-163-117-00	CERAMIC CHIP 100PF	5%	50V	
C712	1-163-117-00	CERAMIC CHIP 100PF	5%	50V	
C713	1-163-033-00	CERAMIC CHIP 0.022MF	10%	25V	
C714	1-163-038-00	CERAMIC CHIP 0.1MF		25V	
C715	1-163-033-00	CERAMIC CHIP 0.022MF	10%	25V	
C717	1-135-091-00	TANTAL. CHIP 1MF	20%	16V	
C720	1-163-077-00	CERAMIC CHIP 0.1MF	10%	25V	
C725	1-135-091-00	TANTAL. CHIP 1MF	20%	16V	
C726	1-135-091-00	TANTAL. CHIP 1MF	20%	16V	
C728	1-163-033-00	CERAMIC CHIP 0.022MF	10%	25V	
C729	1-135-104-00	TANTAL. CHIP 10MF	20%	4V	
C730	1-163-033-00	CERAMIC CHIP 0.022MF	10%	25V	
C731	1-163-141-00	CERAMIC CHIP 0.001MF	10%	50V	
C732	1-163-081-00	CERAMIC CHIP 0.22MF		25V	
C733	1-163-123-00	CERAMIC CHIP 180PF	5%	50V	
C734	1-163-033-00	CERAMIC CHIP 0.022MF	10%	25V	
C735	1-163-033-00	CERAMIC CHIP 0.022MF	10%	25V	
C736	1-135-104-00	TANTAL. CHIP 10MF	20%	4V	
C737	1-163-102-00	(UK,E,AUS,FRENCH)... CERAMIC CHIP 24PF	5%	50V	
C737	1-163-592-91	(AEP)...CERAMIC CHIP 27PF	5%	50V	

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
C738	1-163-133-00	CERAMIC CHIP 470PF	5%	50V	
C739	1-163-038-00	CERAMIC CHIP 0.1MF		25V	
C740	1-163-085-00	CERAMIC CHIP 2PF	0.25PF	50V	
C741	1-163-033-00	CERAMIC CHIP 0.022MF	10%	25V	
C742	1-135-104-00	TANTAL. CHIP 10MF	20%	4V	
C743	1-163-033-00	CERAMIC CHIP 0.022MF	10%	25V	
C744	1-163-123-00	CERAMIC CHIP 180PF	5%	50V	
C745	1-135-103-00	TANTAL. CHIP 3.3MF	20%	4V	
C746	1-135-074-21	(AEP,UK)...TANTAL. CHIP 0.47MF	20%	35V	
C746	1-135-083-00	(E,AUS,FRENCH).... TANTAL. CHIP 0.47MF	20%	25V	
C747	1-135-072-21	TANTAL. CHIP 0.22MF	10%	35V	
C748	1-135-074-21	TANTAL. CHIP 0.47MF	10%	35V	
C749	1-163-335-11	CERAMIC CHIP 0.001MF	5%	50V	
C750	1-163-113-00	CERAMIC CHIP 68PF	5%	50V	
C751	1-163-125-00	CERAMIC CHIP 220PF	5%	50V	
C752	1-163-033-00	CERAMIC CHIP 0.022MF	10%	25V	
C753	1-163-033-00	CERAMIC CHIP 0.022MF	10%	25V	
C754	1-163-125-00	CERAMIC CHIP 220PF	5%	50V	
C755	1-135-103-00	TANTAL. CHIP 3.3MF	20%	4V	
C756	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C757	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C758	1-135-104-00	TANTAL. CHIP 10MF	20%	4V	
C759	1-135-096-21	TANTAL. CHIP 4.7MF	20%	10V	
C761	1-163-033-00	CERAMIC CHIP 0.022MF	10%	25V	
C762	1-135-104-00	TANTAL. CHIP 10MF	20%	4V	
C763	1-163-033-00	CERAMIC CHIP 0.022MF	10%	25V	
C764	1-135-096-21	TANTAL. CHIP 4.7MF	20%	10V	
C765	1-135-096-21	TANTAL. CHIP 4.7MF	20%	10V	
C766	1-135-096-21	TANTAL. CHIP 4.7MF	20%	10V	
C767	1-135-096-21	TANTAL. CHIP 4.7MF	20%	10V	
C768	1-163-113-00	CERAMIC CHIP 68PF	5%	50V	
C769	1-135-092-21	TANTAL. CHIP 3.3MF	20%	16V	
C770	1-135-091-00	TANTAL. CHIP 1MF	20%	16V	
C771	1-135-091-00	TANTAL. CHIP 1MF	20%	16V	
C772	1-135-091-00	TANTAL. CHIP 1MF	20%	16V	
C773	1-163-033-00	CERAMIC CHIP 0.022MF	10%	25V	
C774	1-163-101-00	CERAMIC CHIP 22PF	5%	50V	
C801	1-163-105-00	CERAMIC CHIP 33PF	5%	50V	
C802	1-163-077-00	CERAMIC CHIP 0.1MF		50V	
C804	1-163-141-00	CERAMIC CHIP 0.001MF	5%	50V	
CF701	1-567-338-65	FILTER, CERAMIC			
CF702	1-567-338-65	FILTER, CERAMIC			
CF703	1-567-338-65	FILTER, CERAMIC			
CN401	1-563-294-11	JACK, EXTERNAL POWER (DC IN 9V)			
CN801	1-563-329-11	HOUSING, CONNECTOR 17P			
CNJ401	1-535-608-11	TERMINAL, BATTERY			
<del>CN401</del>	<del>1-563-294-11</del>	<del>CONVERTER UNIT, DC-DC</del>			
CT701	1-141-333-11	CAP, VAR, TRIMMER			
CT703	1-141-333-11	CAP, VAR, TRIMMER			
CT704	1-141-333-11	CAP, VAR, TRIMMER			
D1	8-719-100-23	DIODE 1SS123			
D301	8-719-100-03	DIODE 1S2835			
D402	8-719-100-03	DIODE 1S2835			
D403	8-719-200-35	DIODE E10Q503			
D405	8-719-100-03	DIODE 1S2835			
D406	8-719-101-58	(UK)...DIODE RD5.6E-L2			
D407	8-719-911-19	DIODE 1SS119			

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
D408	8-719-127-07	(UK)...DIODE RD2.7E-8			
D501	8-719-100-23	DIODE 1SS123			
D502	8-719-938-72	DIODE SB01-05CP			
D503	8-719-938-75	DIODE SB05-05CP			
D504	8-719-938-75	DIODE SB05-05CP			
D505	8-719-938-75	DIODE SB05-05CP			
D506	8-719-938-75	DIODE SB05-05CP			
D507	8-719-938-75	DIODE SB05-05CP			
D508	8-719-938-75	DIODE SB05-05CP			
D601	8-719-927-77	DIODE KV1230Z			
D701	8-719-908-57	DIODE SVC203			
D702	8-719-908-57	DIODE SVC203			
D705	8-719-100-05	DIODE KV1260M			
D707	8-719-928-16	DIODE SLM-13YV			
D708	8-719-106-53	DIODE RD10M-B2			
D709	8-719-100-05	DIODE 1S2837			
D710	8-719-118-21	(AEP,E,AUS,FRENCH)...DIODE 1SS283			
D711	8-719-105-32	DIODE RD2.7M-B2			
D712	8-719-105-90	DIODE RD5.6M-B1			
D713	8-719-118-21	DIODE 1SS283			
D715	8-719-118-21	DIODE 1SS283			
D716	8-719-118-21	DIODE 1SS283			
D717	8-719-118-21	DIODE 1SS283			
D801	8-719-100-03	DIODE 1S2835			
D802	8-719-100-05	DIODE 1S2837			
D803	8-719-100-03	DIODE 1S2835			
FL101	1-235-403-11	FILTER, LOW PASS			
FL201	1-235-403-11	FILTER, LOW PASS			
FL701	1-235-279-00	FILTER, BAND PASS			
IC1	8-752-010-90	IC CX20109			
IC2	8-759-100-96	IC UPC4558G2			
IC101	8-759-603-27	IC M5201FP			
IC102	8-759-745-64	IC NJM4560M			
IC201	8-759-603-27	IC M5201FP			
IC202	8-759-745-64	IC NJM4560M			
IC301	8-759-924-49	IC PCM55HP-S			
IC302	8-759-103-25	IC UPD40538G			
IC303	8-759-908-16	IC TL072CPS			
IC304	8-759-745-56	IC NJM4556D			
IC401	8-759-914-44	IC TL431CLPB			
IC501	8-752-030-56	IC CXA1023M			
IC502	8-759-924-58	IC CXA1083M			
IC503	8-759-924-58	IC CXA1083M			
IC504	8-759-100-96	IC UPC4558G2			
IC601	8-759-912-52	IC CX23035			
IC602	8-752-320-44	IC CXK5816M-10L			
IC603	8-759-103-09	IC UPC4082G2			
IC604	8-759-100-96	IC UPC4558G2			
IC701	8-759-923-96	IC CX10053B			
IC702	8-759-910-53	IC CX10054			
IC703	8-759-603-13	IC M5218FP			
IC801	8-752-800-61	IC CXP5024H-003Q			
IC802	8-759-912-55	IC S-81250HG			
IC803	8-759-700-07	IC NJM2903M			
J301	1-563-281-11	JACK (LINE OUT)			
J302	1-563-280-11	JACK (PHONES)			

The components identified by shading and mark  $\Delta$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



ELECTRICAL PARTS

Ref.No.	Part No.	Description
JR401	1-216-295-00	(AEP,E,AUS,FRENCH) ...METAL CHIP 0 5% 1/10W
JR403	1-216-295-00	(AEP,E,AUS,FRENCH) ...METAL CHIP 0 5% 1/10W
JR404	1-216-295-00	(AEP,E,AUS,FRENCH) ...METAL CHIP 0 5% 1/10W
JR405	1-216-295-00	(UK)...METAL CHIP 0 5% 1/10W
JR501	1-216-295-00	METAL CHIP 0 5% 1/10W
JR701	1-216-295-00	METAL CHIP 0 5% 1/10W
JR702	1-216-295-00	METAL CHIP 0 5% 1/10W
JR703	1-216-295-00	METAL CHIP 0 5% 1/10W
JR707	1-216-296-00	METAL CHIP 0 5% 1/8W
JR708	1-216-296-00	METAL CHIP 0 5% 1/8W
JR709	1-216-296-00	METAL CHIP 0 5% 1/8W
JR710	1-216-295-00	METAL CHIP 0 5% 1/10W
JR711	1-216-295-00	METAL CHIP 0 5% 1/10W
JR712	1-216-295-00	METAL CHIP 0 5% 1/10W
JR713	1-216-295-00	METAL CHIP 0 5% 1/10W
JR714	1-216-296-00	METAL CHIP 0 5% 1/8W
JR715	1-216-296-00	METAL CHIP 0 5% 1/8W
JR716	1-216-296-00	METAL CHIP 0 5% 1/8W
JR717	1-216-296-00	METAL CHIP 0 5% 1/8W
JR718	1-216-296-00	METAL CHIP 0 5% 1/8W
JR719	1-216-296-00	METAL CHIP 0 5% 1/8W
JR720	1-216-296-00	METAL CHIP 0 5% 1/8W
JR721	1-216-296-00	METAL CHIP 0 5% 1/8W
JR722	1-216-296-00	METAL CHIP 0 5% 1/8W
JR723	1-216-296-00	METAL CHIP 0 5% 1/8W
JR724	1-216-296-00	(AEP,E,AUS,FRENCH) ...METAL CHIP 0 5% 1/8W
JR725	1-216-296-00	METAL CHIP 0 5% 1/8W
JR726	1-216-296-00	METAL CHIP 0 5% 1/8W
JR727	1-216-296-00	METAL CHIP 0 5% 1/8W
JR728	1-216-296-00	METAL CHIP 0 5% 1/8W
JR729	1-216-296-00	METAL CHIP 0 5% 1/8W
JR730	1-216-296-00	METAL CHIP 0 5% 1/8W
JR731	1-216-295-00	METAL CHIP 0 5% 1/10W
JR732	1-216-296-00	METAL CHIP 0 5% 1/8W
JR733	1-216-296-00	METAL CHIP 0 5% 1/8W
JR734	1-216-295-00	METAL CHIP 0 5% 1/10W
JR735	1-216-295-00	METAL CHIP 0 5% 1/10W
JR736	1-216-295-00	METAL CHIP 0 5% 1/10W
JR737	1-216-296-00	METAL CHIP 0 5% 1/8W
JR740	1-216-296-00	METAL CHIP 0 5% 1/8W
JR743	1-216-296-00	METAL CHIP 0 5% 1/8W
JR745	1-216-296-00	METAL CHIP 0 5% 1/8W
JR746	1-216-296-00	METAL CHIP 0 5% 1/8W
JR747	1-216-295-00	METAL CHIP 0 5% 1/10W
JR748	1-216-296-00	METAL CHIP 0 5% 1/8W
JR749	1-216-296-00	METAL CHIP 0 5% 1/8W
JR750	1-216-296-00	METAL CHIP 0 5% 1/8W
JR751	1-216-296-00	METAL CHIP 0 5% 1/8W
JR752	1-216-296-00	METAL CHIP 0 5% 1/8W
JR753	1-216-295-00	METAL CHIP 0 5% 1/10W
JR754	1-216-296-00	(UK)...METAL CHIP 0 5% 1/8W
JR755	1-216-295-00	(E,AUS)...METAL CHIP 0 5% 1/10W
JR756	1-216-295-00	(UK)...METAL CHIP 0 5% 1/10W
JR757	1-216-296-00	(UK)...METAL CHIP 0 5% 1/8W
JR758	1-216-295-00	METAL CHIP 0 5% 1/10W
JR759	1-216-295-00	METAL CHIP 0 5% 1/10W

ELECTRICAL PARTS

Ref.No.	Part No.	Description
L101	1-410-526-11	MICRO INDUCTOR 10UH
L102	1-410-526-11	MICRO INDUCTOR 10UH
L103	1-410-526-11	MICRO INDUCTOR 10UH
L201	1-410-526-11	MICRO INDUCTOR 10UH
L202	1-410-526-11	MICRO INDUCTOR 10UH
L203	1-410-526-11	MICRO INDUCTOR 10UH
L401	1-410-526-11	MICRO INDUCTOR 10UH
L402	1-410-526-11	MICRO INDUCTOR 10UH
L501	1-410-526-11	MICRO INDUCTOR 10UH
L502	1-410-527-11	MICRO INDUCTOR 100UH
L503	1-410-393-11	INDUCTOR CHIP 100UH
L504	1-459-639-11	COIL (WITH CORE)
L601	1-405-982-00	COIL, OSC (SW1)
L602	1-410-328-11	MICRO INDUCTOR 10UH
L701	1-459-641-11	COIL (WITH CORE)
L702	1-459-642-11	COIL (WITH CORE)
L705	1-410-209-51	INDUCTOR CHIP 27UH
L706	1-410-196-11	INDUCTOR CHIP 2.2UH
L707	1-410-196-11	INDUCTOR CHIP 2.2UH
L708	1-410-204-41	INDUCTOR CHIP 10UH
L710	1-410-209-51	INDUCTOR CHIP 27UH
L711	1-402-131-11	ANTENNA, FERRITE-ROD (MW)
L712	1-410-209-51	INDUCTOR CHIP 27UH
M901	1-541-318-11	MOTOR
M902	A-3133-241-A	MOTOR ASSY, CLV
MF701	1-527-383-00	FILTER, MECHANICAL
ND801	1-807-331-11	MODULE, LCD
PS401	1-532-605-00	(UK)...LINK, IC
PS402	1-532-605-21	(UK)...LINK, IC
PS403	1-532-605-00	(UK)...LINK, IC
Q1	8-729-101-07	TRANSISTOR 2SB798
Q2	8-729-162-44	TRANSISTOR 2SB624-BV4
Q3	8-729-159-64	TRANSISTOR 2SD596
Q4	8-729-159-64	TRANSISTOR 2SD596
Q5	8-729-159-64	TRANSISTOR 2SD596
Q101	8-729-159-64	TRANSISTOR 2SD596
Q102	8-729-159-64	TRANSISTOR 2SD596
Q201	8-729-159-64	TRANSISTOR 2SD596
Q202	8-729-159-64	TRANSISTOR 2SD596
Q301	8-729-901-00	TRANSISTOR DTC124EK
Q302	8-729-901-00	TRANSISTOR DTC124EK
Q303	8-729-901-05	TRANSISTOR DTA124EK
Q304	8-729-159-64	TRANSISTOR 2SD596
Q305	8-729-100-66	TRANSISTOR 2SC1623
Q306	8-729-901-05	TRANSISTOR DTA124EK
Q307	8-729-100-66	TRANSISTOR 2SC1623
Q401	8-729-901-05	TRANSISTOR DTA124EK
Q402	8-729-903-10	TRANSISTOR FMW1
Q403	8-729-101-07	TRANSISTOR 2SB798
Q404	8-729-902-96	TRANSISTOR FMS1
Q405	8-729-199-92	TRANSISTOR 2SD999
Q406	8-729-162-44	TRANSISTOR 2SB624-BV4
Q407	8-729-903-10	TRANSISTOR FMW1
Q408	8-729-805-20	TRANSISTOR 2SB1202
Q409	8-729-162-44	TRANSISTOR 2SB624-BV4

ELECTRICAL PARTS

Ref.No.	Part No.	Description
Q410	8-729-901-05	TRANSISTOR DTA124EK
Q411	8-729-159-64	TRANSISTOR 2SD596
Q412	8-729-100-76	(AEP,E,AUS,FRENCH)...TRANSISTOR 2SA812
Q501	8-729-902-93	TRANSISTOR FMG4
Q502	8-729-901-05	TRANSISTOR DTA124EK
Q503	8-729-901-00	TRANSISTOR DTC124EK
Q504	8-729-159-64	TRANSISTOR 2SD596
Q505	8-729-159-64	TRANSISTOR 2SD596
Q506	8-729-162-44	TRANSISTOR 2SB624-BV4
Q507	8-729-901-00	TRANSISTOR DTC124EK
Q508	8-729-900-74	TRANSISTOR DTC143TS
Q605	8-729-903-10	TRANSISTOR FMW1
Q606	8-729-100-76	TRANSISTOR 2SA812
Q701	8-729-200-87	TRANSISTOR 2SC2714-Y
Q702	8-729-102-06	TRANSISTOR 2SC2223
Q703	8-729-102-06	TRANSISTOR 2SC2223
Q704	8-729-159-64	(UK).....TRANSISTOR 2SD596
Q706	8-729-102-06	TRANSISTOR 2SC2223
Q707	8-729-159-64	TRANSISTOR 2SD596
Q708	8-729-903-60	TRANSISTOR 2SD1664
Q710	8-729-159-64	TRANSISTOR 2SD596
Q711	8-729-271-23	TRANSISTOR 2SC2712
Q712	8-729-162-44	TRANSISTOR 2SB624-BV4
Q713	8-729-901-01	TRANSISTOR DTC144EK
Q801	8-729-901-05	TRANSISTOR DTA124EK
Q802	8-729-901-46	TRANSISTOR DTC114YK
R2	1-216-097-00	METAL CHIP 100K 5% 1/10W
R3	1-216-101-00	METAL CHIP 150K 5% 1/10W
R4	1-216-061-00	METAL CHIP 3.3K 5% 1/10W
R5	1-216-093-00	METAL CHIP 68K 5% 1/10W
R6	1-216-057-00	METAL CHIP 2.2K 5% 1/10W
R7	1-216-081-00	METAL CHIP 22K 5% 1/10W
R8	1-216-105-00	METAL CHIP 220K 5% 1/10W
R9	1-216-091-00	METAL CHIP 56K 5% 1/10W
R10	1-216-095-00	METAL CHIP 82K 5% 1/10W
R11	1-216-073-00	METAL CHIP 10K 5% 1/10W
R13	1-216-326-11	METAL CHIP 1.8K 1% 1/10W
R14	1-216-073-00	METAL CHIP 10K 5% 1/10W
R15	1-216-027-00	METAL CHIP 120 5% 1/10W
R17	1-216-073-00	METAL CHIP 10K 5% 1/10W
R18	1-216-091-00	METAL CHIP 56K 5% 1/10W
R19	1-216-049-00	METAL CHIP 1K 5% 1/10W
R20	1-216-063-00	METAL CHIP 3.9K 5% 1/10W
R21	1-216-043-00	METAL CHIP 560 5% 1/10W
R22	1-216-057-00	METAL CHIP 2.2K 5% 1/10W
R23	1-216-129-00	METAL CHIP 2.2M 5% 1/10W
R24	1-216-164-00	METAL CHIP 39 5% 1/8W
R25	1-216-164-00	METAL CHIP 39 5% 1/8W
R26	1-216-107-00	METAL CHIP 270K 5% 1/10W
R27	1-216-073-00	METAL CHIP 10K 5% 1/10W
R28	1-216-049-00	METAL CHIP 1K 5% 1/10W
R30	1-216-061-00	METAL CHIP 3.3K 5% 1/10W
R31	1-216-105-00	METAL CHIP 220K 5% 1/10W
R32	1-216-121-00	METAL CHIP 1M 5% 1/10W
R33	1-216-081-00	METAL CHIP 22K 5% 1/10W
R35	1-216-071-00	METAL CHIP 8.2K 5% 1/10W

ELECTRICAL PARTS

Ref.No.	Part No.	Description
R101	1-216-334-11	METAL CHIP 22K 1% 1/10W
R102	1-216-333-11	METAL CHIP 15K 1% 1/10W
R103	1-216-329-11	METAL CHIP 5.1K 1% 1/10W
R104	1-216-336-11	METAL CHIP 47K 1% 1/10W
R105	1-216-336-11	METAL CHIP 47K 1% 1/10W
R106	1-216-334-11	METAL CHIP 22K 1% 1/10W
R107	1-216-329-11	METAL CHIP 5.1K 1% 1/10W
R108	1-216-336-11	METAL CHIP 47K 1% 1/10W
R109	1-216-336-11	METAL CHIP 47K 1% 1/10W
R110	1-216-334-11	METAL CHIP 22K 1% 1/10W
R111	1-216-518-00	METAL CHIP 2.2K 1% 1/10W
R112	1-216-518-00	METAL CHIP 2.2K 1% 1/10W
R113	1-216-326-11	METAL CHIP 1.8K 1% 1/10W
R114	1-216-333-11	METAL CHIP 15K 1% 1/10W
R115	1-216-328-11	METAL CHIP 4.3K 1% 1/10W
R116	1-216-333-11	METAL CHIP 15K 1% 1/10W
R117	1-216-328-11	METAL CHIP 4.3K 1% 1/10W
R118	1-216-037-00	METAL CHIP 330 5% 1/10W
R119	1-216-033-00	METAL CHIP 220 5% 1/10W
R120	1-216-073-00	METAL CHIP 10K 5% 1/10W
R122	1-216-089-00	METAL CHIP 47K 5% 1/10W
R124	1-216-067-00	METAL CHIP 5.6K 5% 1/10W
R125	1-216-087-00	METAL CHIP 39K 5% 1/10W
R126	1-216-073-00	METAL CHIP 10K 5% 1/10W
R127	1-216-160-00	METAL CHIP 27 5% 1/8W
R128	1-216-033-00	METAL CHIP 220 5% 1/10W
R129	1-216-059-00	METAL CHIP 2.7K 5% 1/10W
R130	1-216-059-00	METAL CHIP 2.7K 5% 1/10W
R201	1-216-334-11	METAL CHIP 22K 1% 1/10W
R202	1-216-333-11	METAL CHIP 15K 1% 1/10W
R203	1-216-329-11	METAL CHIP 5.1K 1% 1/10W
R204	1-216-336-11	METAL CHIP 47K 1% 1/10W
R205	1-216-336-11	METAL CHIP 47K 1% 1/10W
R206	1-216-334-11	METAL CHIP 22K 1% 1/10W
R207	1-216-329-11	METAL CHIP 5.1K 1% 1/10W
R208	1-216-336-11	METAL CHIP 47K 1% 1/10W
R209	1-216-336-11	METAL CHIP 47K 1% 1/10W
R210	1-216-334-11	METAL CHIP 22K 1% 1/10W
R211	1-216-518-00	METAL CHIP 2.2K 1% 1/10W
R212	1-216-518-00	METAL CHIP 2.2K 1% 1/10W
R213	1-216-326-11	METAL CHIP 1.8K 1% 1/10W
R214	1-216-333-11	METAL CHIP 15K 1% 1/10W
R215	1-216-328-11	METAL CHIP 4.3K 1% 1/10W
R216	1-216-333-11	METAL CHIP 15K 1% 1/10W
R217	1-216-328-11	METAL CHIP 4.3K 1% 1/10W
R218	1-216-037-00	METAL CHIP 330 5% 1/10W
R219	1-216-033-00	METAL CHIP 220 5% 1/10W
R220	1-216-073-00	METAL CHIP 10K 5% 1/10W
R222	1-216-089-00	METAL CHIP 47K 5% 1/10W
R224	1-216-067-00	METAL CHIP 5.6K 5% 1/10W
R225	1-216-087-00	METAL CHIP 39K 5% 1/10W
R226	1-216-073-00	METAL CHIP 10K 5% 1/10W
R227	1-216-160-00	METAL CHIP 27 5% 1/8W
R228	1-216-033-00	METAL CHIP 220 5% 1/10W
R229	1-216-059-00	METAL CHIP 2.7K 5% 1/10W
R230	1-216-059-00	METAL CHIP 2.7K 5% 1/10W
R301	1-216-089-00	METAL CHIP 47K 5% 1/10W

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
R302	1-216-073-00	METAL CHIP	10K	5%	1/10W
R303	1-216-083-00	METAL CHIP	27K	5%	1/10W
R304	1-216-059-00	METAL CHIP	2.7K	5%	1/10W
R305	1-216-105-00	METAL CHIP	220K	5%	1/10W
R306	1-216-075-00	METAL CHIP	12K	5%	1/10W
R307	1-216-085-00	METAL CHIP	33K	5%	1/10W
R308	1-216-089-00	METAL CHIP	47K	5%	1/10W
R309	1-216-109-00	METAL CHIP	330K	5%	1/10W
R310	1-216-105-00	METAL CHIP	220K	5%	1/10W
R401	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R402	1-216-089-00	METAL CHIP	47K	5%	1/10W
R403	1-216-056-00	METAL CHIP	2K	5%	1/10W
R404	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R405	1-216-089-00	METAL CHIP	47K	5%	1/10W
R406	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R409	1-216-049-00	METAL CHIP	1K	5%	1/10W
R410	1-216-049-00	METAL CHIP	1K	5%	1/10W
R412	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R413	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R414	1-216-070-00	METAL CHIP	7.5K	5%	1/10W
R415	1-216-081-00	METAL CHIP	22K	5%	1/10W
R416	1-216-059-00	METAL CHIP	2.7K	5%	1/10W
R417	1-202-852-00	(UK)...SOLID	4.7		1/4W F
R418	1-216-041-00	METAL CHIP	470	5%	1/10W
R419	1-202-858-00	SOLID	47		1/4W F
R501	1-216-081-00	METAL CHIP	22K	5%	1/10W
R502	1-216-081-00	METAL CHIP	22K	5%	1/10W
R503	1-216-105-00	METAL CHIP	220K	5%	1/10W
R504	1-216-081-00	METAL CHIP	22K	5%	1/10W
R505	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R506	1-216-083-00	(UK)...METAL CHIP	27K	5%	1/10W
R507	1-216-097-00	METAL CHIP	100K	5%	1/10W
R508	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R509	1-216-041-00	METAL CHIP	470	5%	1/10W
R510	1-216-073-00	METAL CHIP	10K	5%	1/10W
R511	1-216-093-00	METAL CHIP	68K	5%	1/10W
R512	1-216-089-00	METAL CHIP	47K	5%	1/10W
R513	1-216-081-00	METAL CHIP	22K	5%	1/10W
R514	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R515	1-216-049-00	METAL CHIP	1K	5%	1/10W
R516	1-216-121-00	METAL CHIP	1M	5%	1/10W
R517	1-216-095-00	METAL CHIP	82K	5%	1/10W
R518	1-216-091-00	METAL CHIP	56K	5%	1/10W
R519	1-216-073-00	METAL CHIP	10K	5%	1/10W
R520	1-216-075-00	METAL CHIP	12K	5%	1/10W
R521	1-216-097-00	METAL CHIP	100K	5%	1/10W
R523	1-216-089-00	METAL CHIP	47K	5%	1/10W
R524	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R525	1-216-081-00	METAL CHIP	22K	5%	1/10W
R526	1-216-089-00	METAL CHIP	47K	5%	1/10W
R527	1-216-077-00	METAL CHIP	15K	5%	1/10W
R528	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R529	1-216-073-00	METAL CHIP	10K	5%	1/10W
R530	1-216-073-00	METAL CHIP	10K	5%	1/10W
R531	1-216-073-00	METAL CHIP	10K	5%	1/10W
R532	1-216-073-00	METAL CHIP	10K	5%	1/10W
R533	1-216-073-00	METAL CHIP	10K	5%	1/10W

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
R534	1-216-009-00	METAL CHIP	22	5%	1/10W
R535	1-216-009-00	METAL CHIP	22	5%	1/10W
R536	1-216-071-00	METAL CHIP	8.2K	5%	1/10W
R538	1-247-867-00	CARBON	33K	5%	1/6W
R539	1-216-134-00	METAL CHIP	2.2	5%	1/8W
R540	1-216-134-00	METAL CHIP	2.2	5%	1/8W
R541	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R542	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R543	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R544	1-216-134-00	METAL CHIP	2.2	5%	1/8W
R545	1-216-134-00	METAL CHIP	2.2	5%	1/8W
R547	1-216-081-00	METAL CHIP	22K	5%	1/10W
R548	1-216-089-00	METAL CHIP	47K	5%	1/10W
R550	1-216-121-00	METAL CHIP	1M	5%	1/10W
R552	1-216-081-00	METAL CHIP	22K	5%	1/10W
R553	1-216-089-00	METAL CHIP	47K	5%	1/10W
R554	1-216-134-00	METAL CHIP	2.2	5%	1/8W
R555	1-216-134-00	METAL CHIP	2.2	5%	1/8W
R556	1-216-134-00	METAL CHIP	2.2	5%	1/8W
R557	1-216-134-00	METAL CHIP	2.2	5%	1/8W
R558	1-216-097-00	METAL CHIP	100K	5%	1/10W
R561	1-216-121-00	METAL CHIP	1M	5%	1/10W
R562	1-216-113-00	METAL CHIP	470K	5%	1/10W
R563	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R564	1-216-073-00	METAL CHIP	10K	5%	1/10W
R565	1-247-903-00	CARBON	1M	5%	1/6W
R601	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R603	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R604	1-216-059-00	METAL CHIP	2.7K	5%	1/10W
R605	1-216-338-11	METAL CHIP	30K	1%	1/10W
R606	1-216-338-11	METAL CHIP	30K	1%	1/10W
R607	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R608	1-216-329-11	METAL CHIP	5.1K	1%	1/10W
R609	1-216-085-00	METAL CHIP	33K	5%	1/10W
R610	1-216-049-00	METAL CHIP	1K	5%	1/10W
R611	1-216-097-00	METAL CHIP	100K	5%	1/10W
R612	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R613	1-216-097-00	METAL CHIP	100K	5%	1/10W
R614	1-216-081-00	METAL CHIP	22K	5%	1/10W
R617	1-216-081-00	METAL CHIP	22K	5%	1/10W
R618	1-216-089-00	METAL CHIP	47K	5%	1/10W
R621	1-216-085-00	METAL CHIP	33K	5%	1/10W
R622	1-216-121-00	METAL CHIP	1M	5%	1/10W
R623	1-216-093-00	METAL CHIP	68K	5%	1/10W
R624	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R625	1-216-081-00	METAL CHIP	22K	5%	1/10W
R626	1-216-101-00	METAL CHIP	150K	5%	1/10W
R628	1-216-101-00	METAL CHIP	150K	5%	1/10W
R630	1-216-111-00	METAL CHIP	390K	5%	1/10W
R631	1-216-099-00	METAL CHIP	120K	5%	1/10W
R632	1-216-103-00	METAL CHIP	180K	5%	1/10W
R633	1-216-097-00	METAL CHIP	100K	5%	1/10W
R634	1-216-089-00	METAL CHIP	47K	5%	1/10W
R635	1-216-073-00	METAL CHIP	10K	5%	1/10W
R636	1-216-073-00	METAL CHIP	10K	5%	1/10W
R701	1-216-081-00	METAL CHIP	22K	5%	1/10W
R702	1-216-025-00	METAL CHIP	100	5%	1/10W

## ELECTRICAL PARTS

Ref.No.	Part No.	Description			
R703	1-216-089-00	METAL CHIP	47K	5%	1/10W
R704	1-216-089-00	METAL CHIP	47K	5%	1/10W
R705	1-216-113-00	METAL CHIP	470K	5%	1/10W
R706	1-216-013-00	METAL CHIP	33	5%	1/10W
R707	1-216-081-00	METAL CHIP	22K	5%	1/10W
R708	1-216-013-00	METAL CHIP	33	5%	1/10W
R709	1-216-113-00	METAL CHIP	470K	5%	1/10W
R710	1-216-085-00	METAL CHIP	33K	5%	1/10W
R711	1-216-113-00	METAL CHIP	470K	5%	1/10W
R712	1-216-085-00	METAL CHIP	33K	5%	1/10W
R713	1-216-013-00	METAL CHIP	33	5%	1/10W
R714	1-216-085-00	METAL CHIP	33K	5%	1/10W
R715	1-216-037-00	METAL CHIP	330	5%	1/10W
R716	1-216-037-00	METAL CHIP	330	5%	1/10W
R717	1-216-142-00	(UK)...METAL CHIP	4.7	5%	1/8W
R725	1-216-073-00	(AEP,UK,FRENCH)... METAL CHIP	10K	5%	1/10W
R726	1-216-113-00	METAL CHIP	470K	5%	1/10W
R727	1-216-113-00	METAL CHIP	470K	5%	1/10W
R728	1-216-113-00	METAL CHIP	470K	5%	1/10W
R729	1-216-025-00	METAL CHIP	100	5%	1/10W
R730	1-216-113-00	METAL CHIP	470K	5%	1/10W
R731	1-216-049-00	METAL CHIP	1K	5%	1/10W
R732	1-216-109-00	METAL CHIP	330K	5%	1/10W
R733	1-216-049-00	METAL CHIP	1K	5%	1/10W
R734	1-216-073-00	METAL CHIP	10K	5%	1/10W
R735	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R736	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R738	1-216-109-00	METAL CHIP	330K	5%	1/10W
R740	1-216-089-00	METAL CHIP	47K	5%	1/10W
R741	1-216-089-00	METAL CHIP	47K	5%	1/10W
R742	1-216-013-00	METAL CHIP	33	5%	1/10W
R743	1-216-051-00	METAL CHIP	1.2K	5%	1/10W
R744	1-216-113-00	METAL CHIP	470K	5%	1/10W
R745	1-216-049-00	METAL CHIP	1K	5%	1/10W
R746	1-216-059-00	METAL CHIP	2.7K	5%	1/10W
R747	1-216-049-00	METAL CHIP	1K	5%	1/10W
R748	1-216-059-00	METAL CHIP	2.7K	5%	1/10W
R750	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R753	1-216-073-00	METAL CHIP	10K	5%	1/10W
R756	1-216-049-00	METAL CHIP	1K	5%	1/10W
R761	1-216-011-00	METAL CHIP	27	5%	1/10W
R762	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R801	1-216-081-00	METAL CHIP	22K	5%	1/10W
R802	1-216-081-00	METAL CHIP	22K	5%	1/10W
R805	1-216-081-00	METAL CHIP	22K	5%	1/10W
R806	1-216-109-00	METAL CHIP	330K	5%	1/10W
R807	1-216-081-00	METAL CHIP	22K	5%	1/10W
R808	1-216-081-00	(UK)...METAL CHIP	22K	5%	1/10W
R809	1-216-081-00	(UK)...METAL CHIP	22K	5%	1/10W
R810	1-216-063-00	METAL CHIP	3.9K	5%	1/10W
R814	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R815	1-216-336-11	METAL CHIP	47K	1%	1/10W
R816	1-216-087-00	METAL CHIP	39K	5%	1/10W
R817	1-216-087-00	METAL CHIP	39K	5%	1/10W
R818	1-216-097-00	METAL CHIP	100K	5%	1/10W
R819	1-216-009-00	METAL CHIP	22	5%	1/10W
R820	1-216-027-00	(AEP,E,AUS,FRENCH) ...METAL CHIP	120	5%	1/10W

## ELECTRICAL PARTS

Ref.No.	Part No.	Description
RV1	1-237-091-11	RES. ADJ. METAL GLAZE 100K
RV2	1-237-091-11	RES. ADJ. METAL GLAZE 100K
RV301	1-237-092-11	RES. VAR. CARBON 10K/10K (VOLUME)
RV501	1-237-090-11	RES. ADJ. METAL GLAZE 22K
RV502	1-237-090-11	RES. ADJ. METAL GLAZE 22K
RV701	1-230-989-11	RES. ADJ. METAL GLAZE 4.7K
RV702	1-230-991-11	RES. ADJ. METAL GLAZE 22K
RV703	1-230-991-11	RES. ADJ. METAL GLAZE 22K
RV704	1-237-139-11	RES. VAR. CARBON 100K (TUNING)
S401	1-554-509-21	SWITCH, SLIDE (FUNCTION)
S701	1-570-397-11	(AEP,UK,FRENCH)..SWITCH, SLIDE(FM MODE)
S702	1-570-402-11	SWITCH, SLIDE (BAND/FM SENS)
S801	1-553-198-00	SWITCH, LEAF (LIMIT)
S802	1-554-911-11	SWITCH, LEAF (OPEN/CLOSE)
S803	1-554-371-00	SWITCH, TACT (PLAY-MODE)
S804	1-554-371-00	SWITCH, TACT (REMEIN/ENTER)
S805	1-554-371-00	SWITCH, TACT (KEY-MODE)
S806	1-554-371-00	SWITCH, TACT (PLAY/PAUSE)
S807	1-554-371-00	SWITCH, TACT (FF)
S808	1-554-371-00	SWITCH, TACT (FR)
S809	1-554-371-00	SWITCH, TACT (STOP)
T701	1-404-583-11	IFT
T702	1-406-177-11	COIL
T703	1-448-302-11	TRANSFORMER, DC-DC CONVERTER
X601	1-567-540-11	VIBRATOR, CRYSTAL, 8.4672MHz

## ACCESSORY &amp; PACKING MATERIAL

Part No.	Description
1-526-565-00	(E)...AC PLUG ADAPTOR
1-555-658-21	CORD, CONNECTION
3-701-625-00	BAG, POLYETHYLENE
*3-764-443-11	(FRENCH)...INSTRUCTION
*3-764-464-01	(AEP).....INSTRUCTION
*3-795-629-11	(AEP).....INSTRUCTION
3-765-261-11	MANUAL, INSTRUCTION
3-765-261-41	(AEP)...MANUAL, INSTRUCTION
4-907-095-02	SHEET, PROTECTION
4-913-804-02	CARTON, ACCESSORY
4-913-830-01	(E)...SPACER
4-913-861-01	INDIVIDUAL CARTON
4-913-862-01	(FRENCH)...CARTON, HEADPHONE
4-913-865-01	CUSHION (RIGHT)
4-913-866-01	CUSHION (LEFT)
4-913-882-01	BELT, CARRYING
4-913-883-11	CASE, CARRYING
8-952-266-94	(FRENCH)...MDR-A10L/B
A-3101-056-A	BP-200

The components identified by shading and mark  $\Delta$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une trane et une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.