


EV-03E
RMT-463

SERVICE MANUAL

*AEP Model
UK Model
E Model*

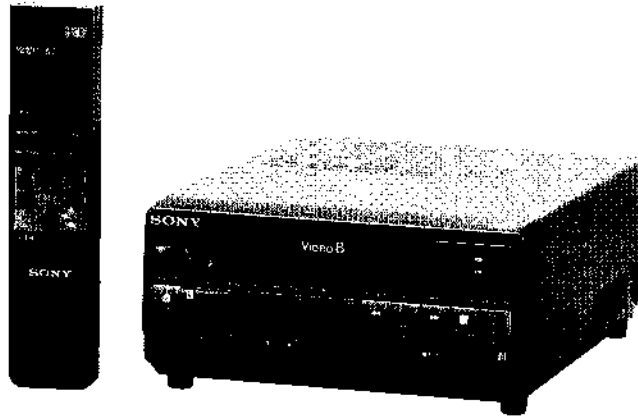

Video 8
U MECHANISM

SPECIFICATIONS

MECHANICAL ADJUSTMENT

As to the mechanical adjustment and check and parts replacement, refer to the separate "8mm Video Mechanical Adjustment MANUAL III

U mechanism".

Parts No. 9-972-732-11

System

Video recording system

Rotary two-head helical scanning FM system

Video signal

PAL colour, CCIR standards

Audio recording system

Rotary head, FM system

Usable cassette

8 mm format video tapes

Tape speed

SP: 20.051 mm/sec.

LP: 10.058 mm/sec.

Maximum recording/playback time

SP: 1 hour 30 min. (with Sony P5-90)

LP: 3 hours (with Sony P5-90)

Fast-forward/rewind time

Approx. 4.5 min. (with Sony P5-90)

Inputs and outputs

LINE IN

VIDEO: Phono jack 1 Vp-p, 75 ohms, unbalanced, sync negative

AUDIO: Phono jack 47 kilohms, -7.5 dBs (0 dBs = 0.775 V rms)

LINE OUT

VIDEO: Phono jack 1 Vp-p, 75 ohms, unbalanced, sync negative

AUDIO: Phono jack
Output impedance less than 2 kilohms, -7.5 dBs with 47 kilohms load unbalanced

MONITOR OUT

EURO-AV: 21-pin
Video out: pin 19

1 Vp-p, 75 ohms, unbalanced, sync negative

Audio out: pins 1 and 3
Output impedance less than 1 kilohms -6 dBs with 10 kilohms load unbalanced

CONTROL L (LANC)

5-pin DIN

RF output signal

UHF channels B30/E30--B39/E39 (variable)

Aerial input/output

75 ohms asymmetrical aerial sockets

— Continued on page 2 —

● SERVICE OF REMOTE COMMANDER RMT-463

Remote commander RMT-463 is available as a unit. But as individual parts the battery case lid of commander is only available.



8 VIDEO CASSETTE RECORDER
SONY

General

Power requirements	AC 220–240 V 50 Hz
Power consumption	13 W
Operating temperature	5°C to 40°C (41°F to 104°F)
Storage temperature	–20°C to +60°C (–40°F to +104°F)
Dimensions	Approx. 178 x 88 x 255 mm (7 ¹ / ₈ x 3 ¹ / ₂ x 10 ¹ / ₈ inches) (w/h/d) including the projecting parts and controls
Weight	Approx. 2.2 kg (4 lb 14 oz)

Remote commander RMT-463



Remote control system	Infrared control
Command mode	VTR-2
Power requirements	3 V DC, using two IEC designation R6 batteries
Dimensions	Approx. 40 x 18 x 175 mm (1 ⁵ / ₈ x 3/4 x 7 inches)
Weight	Approx. 55 g (5 oz.) without batteries

Design and specifications are subject to change without notice.

Note

This appliance conforms with EEC Directive 87/308/EEC regarding interference suppression.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  OR DOTTED LINE WITH MARK  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

SERVICING NOTE

Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270°C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1.	SERVICE NOTE				
1-1.	Ejecting a Malfunctioning Videocassette	6	3-6.	Removal of CC-23 Board	27
1-2.	Replacing the Videocassette Door Assembly	6	3-7.	Removal of CM-13, UC-3, RP-69 Boards	27
1-3.	Service Position (Power Block)	7	3-8.	Removal of RP-69 Board, Flexible Board	28
1-4.	Cleaning the Video Head and Transport System	7	3-9.	Removal of PI-24 Board and RM-44 Board and Rear Frame, Modulator	28
1-5.	Replacing the Rotating Drum	8	3-10.	Removal of MD, Cassette Compartment Block	28
2.	GENERAL		3-11.	Removal of MD Section	29
	Warning	9	3-12.	Notes for Cassette Compartment Assy Installation	29
	Safety Information	9	4.	DIAGRAMS	
	Overview of this VTR	10	4-1.	Circuit Boards Location	30
	Labeling the Parts	10	4-2.	Overall Block Diagram	31
	Installation	13	4-3.	Video Block Diagram	34
	How to Connect this VTR to a TV with Audio-Video Inputs	13	4-4.	Head Amp Block Diagram	37
	How to Connect this VTR to a TV without Video and Audio Inputs	14	4-5.	Servo Block Diagram	40
	How to Insert Batteries into the Remote Comander	14	4-6.	System Control—Video, Audio Block Interface (CM-13 Board IC401)	43
	Basic Operation	15	4-7.	System Control—Servo Peripheral Circuit Interface (CM-13 Board IC401)	45
	How to Insert/Eject Tapes	15	4-8.	System Control—System Control Peripheral Circuit Interface (CM-13 Board IC401)	49
	How to Play Back Tapes	16	4-9.	System Control—Mechanism Block Interface (CM-13 Board IC401, CN405)	51
	How to Play Back Tapes in Various Modes	16	4-10.	Display Control Block Diagram	53
	Advanced Operation	17	4-11.	Pin Assignment CXP-5078 (IC101) System Control/Mode Control Block Interface (FR-38 Board IC101)	55
	How to Record TV Programmes	18	4-12.	Audio Block Diagram	59
	How to Use the Tape Counter	19	5.	PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS	
	How to Use Editing Features	19	5-1.	Frame Schematic Diagram	61
	How to Copy a Whole Tape Using a Camcorder	20	5-2.	Printed Wiring Boards and Schematic Diagrams	63
	How to Copy a Whole Tape Using a Second VTR	21		• VI-101, CC-56 Boards	63
	How to Assemble Edit Using a Sony Camcorder	21		• CM-13, CC-23 Boards	71
	How to Assemble Edit Using a Second Sony VTR	22		• UC-3, FP-89, FP-90 Boards	75
	How to Assemble Edit Using a Second VTR	23		• IN-41 Board	79
	How to Insert Edit Using a Sony Camcorder/VTR	24		• FR-38 Board	81
				• FC-43 Board	83
				• AF-20 Board	87
				• RM-44 Board	91
				• PI-24 Board	92
				• RP-69 Board	93
				• RS-32 Board	97
3.	DISASSEMBLY		5-3.	Semiconductors	98
3-1.	Removal of Front Panel, Case Upper, Plate Bottom	26			
3-2.	Removal of VI-101, IN-41, FR-38 Boards	26			
3-3.	Removing Boards Connected by a Board-to-Board Connector	26			
3-4.	Removal of FC-43 Board	27			
3-5.	Removal of Power Block RS-32 Boards	27			

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
6.	EXPLODED VIEWS				
6-1.	Cabinet Assembly	99	9-5-7.	Emphasis Adjustment (VI-101 Board)	128
6-2.	Main Chassis Assembly	100	9-5-8.	PB CCD Input Level Adjustment (VI-101 Board)	128
6-3.	Cassette Compertment Assy	101	9-5-9.	PB Y Level Adjustment (VI-101 Board)	129
6-4.	MD Block Assembly-1	102	9-5-10.	Y FM Carrier Frequency Adjustment (VI-101 Board)	129
6-5.	MD Block Assembly-2	103	9-5-11.	Y FM Deviation Adjustment (VI-101 Board)	129
6-6.	MD Block Assembly-3	104	9-5-12.	AC Clip Check (VI-101 Board)	130
7.	ELECTRICAL PARTS LIST	105	9-5-13.	Chroma Emphasis fo Adjustment (VI-101 Board)	130
	HARDWARE LIST	119	9-5-14.	REC Y Level Adjustment (VI-101 Board)	130
8.	MECHANICAL ADJUSTMENTS		9-5-15.	REC C Level Adjustment (VI-101 Board)	130
	For mechanical adjustments, refer to the separate "8mm Video Mechanical Adjustments III (U mechanism)"		9-5-16.	Quasi Burst Phase Adjustment (VI-101 Board)	131
8-1.	Tape Pass Adjustment	121	9-5-17.	Delay Burst Phase Adjustment (VI-101 Board)	131
8-1-1.	Setting the Track Shift Mode	121	9-5-18.	REC ATF Level Confirmation (CM-13 Board)	131
8-1-2.	Preparation for Adjustment	121	9-6.	Audio System Adjustments	132
9.	ELECTRICAL ADJUSTMENTS		9-6-1.	AFM Audio System Adjustments	132
9-1.	Preparation for Electrical Section Adjustment	122	1.	AFM Carrier Frequency Adjustment (AF-20 Board)	132
9-2.	Power Supply Voltage Check	124	2.	PB Level Check (AF-20 Board)	132
9-3.	System Control System Adjustment	124	3.	E-E Output Level Check	132
9-3-1.	Mode Control, LCD Drive Microcomputer Oscillator Confirmation (FR-38 Board)	124	4.	Overall Level Characteristics Check	133
9-3-2.	LINCS MASTER Microcomputer Oscillator Confirmation (FR-38 Board)	124	5.	Overall Frequency Characteristics Check	133
9-4.	Servo System Adjustments	125	6.	Overall Distortion Check	133
9-4-1.	Oscillation Frequency Adjustment (CM-13 Board)	125	7.	Overall Noise Level Check	133
9-4-2.	Switching Position Adjustment (CM-13 Board)	125		Arrangement Diagram for Adjustment Parts	134
9-4-3.	Playback SP/LP Adjustment (CM-13 Board)	125			
9-5.	Video Adjustment	126			
9-5-1.	Playback Frequency Characteristics Adjustment (RP-69 Board)	126			
1.	CH1 and CH2 Adjustment	126			
2.	CH1' Adjustment	126			
9-5-2.	Flying Erase Check (RP-69 Board)	127			
9-5-3.	Crystal Oscillator fo Check (VI-101 Board)	127			
9-5-4.	Sync AGC Adjustment (VI-101 Board)	127			
9-5-5.	Y/C Separation Adjustment (VI-101 Board)	127			
9-5-6.	Burst Frag Adjustment (VI-101 Board)	128			

SECTION 1 SERVICE NOTE

1-1. Ejecting a Malfunctioning Videocassette

- A. Remove Front Panel and FR-38 board.
- B. If the videocassette cannot be ejected because the videotape is still wrapped around the drum, remove the CM-13 board on the lower part of the mechanical section. Turn the capstan motor wheel in either direction and turn either the S or T reel to return the tape to the cassette. After the tape is back inside the cassette, proceed to step "C" if necessary.
- C. If the videotape is in the cassette half and cannot be ejected:
 - 1) Remove the front panel. Remove the drive arm lock (located between the L frame and the left part of the cassette control section) away from the drive arm (L) in the direction of the arrow **A**.
 - 2) Use both thumbs to turn the adjoining gears in the direction of arrow **B**.

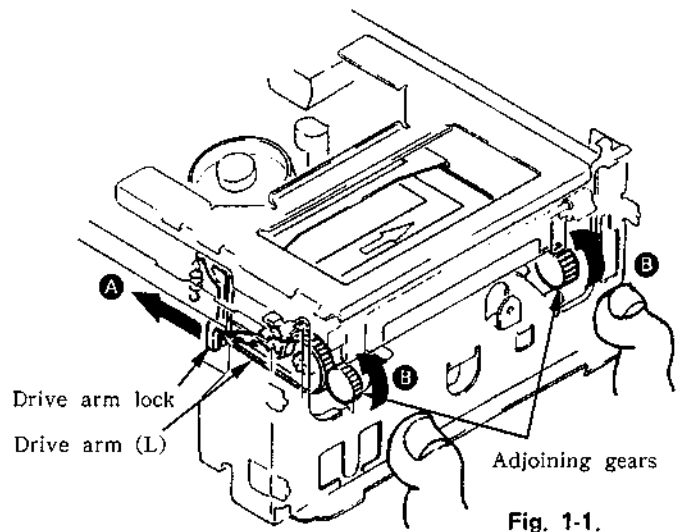


Fig. 1-1.

1-2. Replacing the Videocassette Door Assembly

- 1) Remove the front panel.
- 2) Remove the videocassette door assembly first from part **A**, then from part **B**.

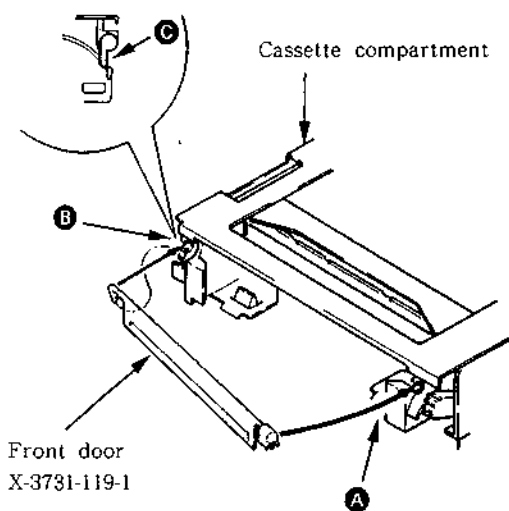


Fig. 1-2.

- 3) When reinstalling the front door assembly, install at part **B** first. Install it on the fastener of part **C** as shown in the figure. Then install at part **A** with the door assembly lowered vertically.

1-3.

Service Position (Power Block)

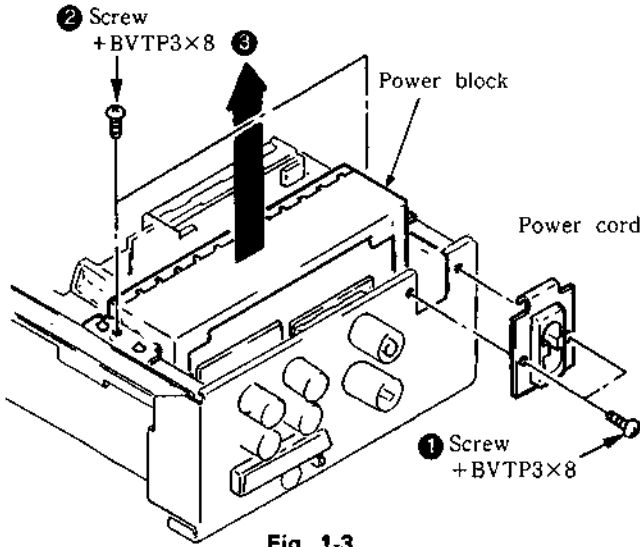


Fig. 1-3.

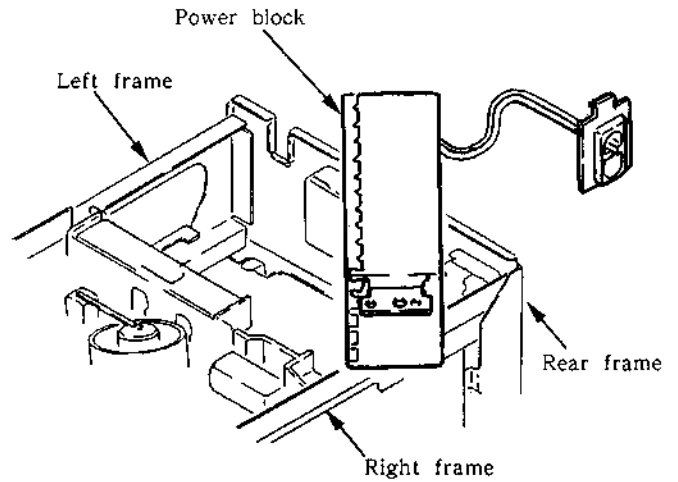


Fig. 1-4.

1-4.

Cleaning the Video Head and Transport System

Procedure 1

[Using a cleaning tape]

- Use the V8-25CLH cleaning tape. (Before using the cleaning tape, read the instructions carefully.)

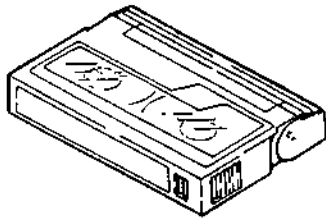


Fig. 1-5.

Head cleaner stick
(3-601-330-99)

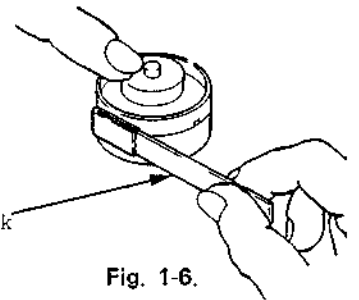


Fig. 1-6.

Procedure 2

[Using cleaning fluid]

- ① Remove the video deck's upper casing.
- ② Apply the cleaning fluid to the head cleaner stick (Ref. No. 3-601-330-99).
- ③ As shown in the figure on the right, gently contact the head cleaner stick to the video head, and clean while turning the rubber part on the top of the rotating drum.

[Cleaning the transport system]

- ① Apply the cleaning fluid to the head cleaner stick.
- ② Use the head cleaner stick to clean the tape guide, pinch roller, and other parts that come in direct contact with the tape.

1-5.

Replacing the Rotating Drum

Procedure 3

Precautions

- Be especially careful when handling the video head and terminals.
- Hold the drum by the upper part (Part B), do not touch the side of the drum (Part A) directly. See Fig. 1-7.

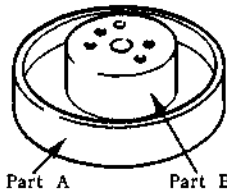


Fig. 1-7.

Removing the rotating drum

- ① As shown in Fig. 1-8, remove the two short screws (2×4).
- ② Completely remove the eight soldering points on the rotating drum's board. Refer to Fig. 1-8.

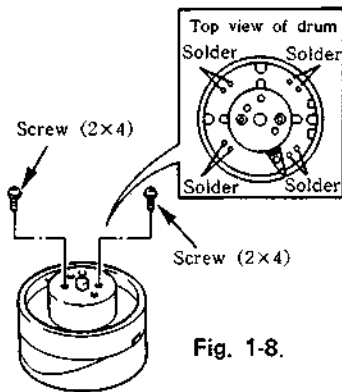


Fig. 1-8.

- ③ While referring to Fig. 1-9, use the two short screws supplied with the jig (which comes with the spare rotating drum) to fasten the jig to the drum. Then screw in the long screw until the drum is removed.

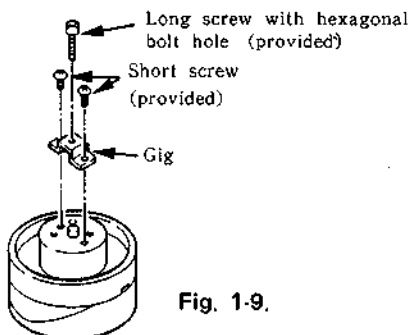


Fig. 1-9.

Installing the new drum

- ① Clean the flange surface and the new rotating drum's bottom surface. Refer to Fig. 1-10.
- ② While referring to Fig. 1-10, insert the supplied shaft through the jig and into the positioning hole of the lower drum. Slip the shaft into new rotating drum's positioning hole and gently set the rotating drum.

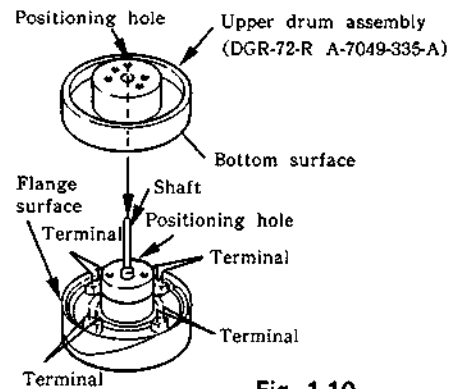


Fig. 1-10.

- ③ With the shaft still inserted in the positioning hole, use your hand to push down the rotating drum lightly. If the drum does not go down completely, refer to Fig. 1-11. and gradually tighten the two long screws (2×5) alternately to fasten the rotating drum.
- ④ Take out the shaft. If the shaft cannot be readily taken out, redo the procedure from step ②.

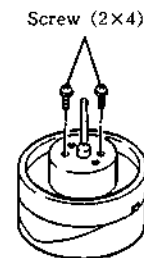


Fig. 1-11.

- ⑤ While referring to Fig. 1-8, solder the board's eight places and eight terminals.
- ⑥ After the rotating drum is replaced, use a head cleaner stick to clean the video head and transport system. Follow Procedure 2 of "Cleaning the video head and transport system."

Warning

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

NOTICE FOR CUSTOMERS IN THE UNITED KINGDOM

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

Blue:	Neutral
Brown:	Live

As the colours of the mains wires in the mains lead of this apparatus may not correspond to the coloured markings identifying the terminals in your plug proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red. Do not connect either wire to the earth terminal in the plug which is marked by the letter E or by the safety earth symbol or coloured green or green-and-yellow.

Caution

Television programmes, films, video tapes and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the provisions of the copyright laws. Also, use of this recorder with cable television transmission may require authorization from the cable television transmitter and/or programme owner.

Safety information

To prevent fire or electric shock and to extend the life of the unit, please follow the safety procedures below.

For safe operation

- Operate this unit on 220–240 V AC, 50 Hz.
- Unplug this unit if any liquid or solid object falls in it — have it checked by qualified personnel immediately.
- Unplug this unit if it not going to be used for several days.
- Pull the plug out to disconnect this unit — do not pull on the power cord.
- This unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.
- Never put heavy objects on this unit.

For safe installation

- Install this unit so the ventilation openings are not blocked.
- Install this unit away from hot, humid, or excessively dusty places.
- Install this unit away from mechanical vibrations.
- Install this unit on a flat surface and in a horizontal position.
- Install this unit and store tapes away from equipment with strong magnetic fields such as stereo speakers.
- Install this unit away from an AM receiver.

For safe maintenance

- Clean this unit with a dry, soft cloth or a soft cloth slightly moistened with a mild detergent. Never use solvents such as alcohol or benzine.

For safe transportation

- Use the carton and packing materials to transport the unit.

SECTION 2 GENERAL

This section is extracted from instruction manual.

Overview of this VTR

Thank you for purchasing this 8 mm Sony Video Cassette Recorder. You now own a VTR with which you can easily playback and edit tapes you made with your 8 mm camcorder. Some of the ways that you can edit your homemade tapes include:


- Assemble editing — to gather recordings from several tapes onto a blank tape
- Insert editing — to insert a recording into a previously recorded tape

Please remember that you can only use 8 mm-format video tapes with this VTR and that it is not possible to use PCM recording/playback available on some 8 mm recorders. The PCM sound recorded or after-recorded with other recorder cannot be played back with this VTR. You will be able to record tapes in both SP (standard play) and LP (long play) modes.

Using this manual

This manual is organized so all the essential information on how to install and operate your VTR is included in the first three sections of this manual. Look under **Advanced operation** to learn sophisticated tasks such as how to edit tapes using the VTR. Refer to the trouble-shooting section or call your local Sony service facility if you have any problems in operating the VTR.

When you are reading through this manual, please remember that:


- Buttons and settings on the VTR are in capital letters.
- e.g. Press ON/STANDBY.
- Numbers in illustrations correspond to numbers in the text.
- Notes are separated from the text with a line on the top and bottom.
- The arrow  indicates signal flow.

Supplied accessories

Please check to make sure that the following accessories are supplied with your VTR.

- 1 Remote Commander (RMT-463)
- 2 R6 (size AA) batteries
- 1 AC power cord (mains lead)
- 1 cable (75-ohms coaxial with IEC connectors)
- 1 cable (audio-video connecting, 2 phono plugs to 2 phono plugs)
- 1 screwdriver

(A-1)

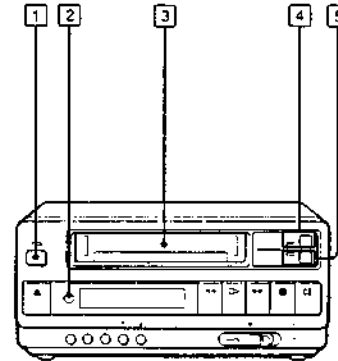

Labeling the parts

On the front

(A-1)

1 ON/STANDBY switch

Press to turn the VTR on. The button will light up green when the power is on and light up red when the VTR is in standby.

2 Remote sensor

This sensor "detects" the commands from your Remote Commander.

3 Cassette compartment

Insert 8 mm format video tapes in here.

4 SYNCHRO EDIT button


Press when you want to use the SYNCHRO EDIT mode. The button will be lit when this mode is on.

5 EDIT button

Press to activate the EDIT mode when you are editing tapes to improve the picture. The button will be lit when this mode is on. Normally keep this mode turned off.

Labeling the parts


(A-2)

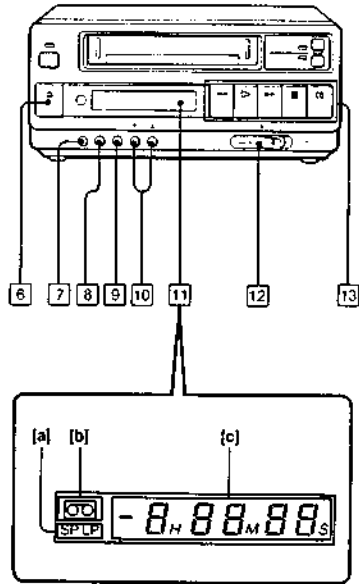

- (A-2)
- 6** **EJECT button**
Press to remove the tape from the cassette compartment.
 - 7** **SP/LP button**
Press to choose between the standard play mode and the long play mode for recording.
 - 8** **COUNTER RESET button**
Press to reset the tape counter to "0H00M00S".
 - 9** **GO TO ZERO button**
Press to advance or rewind the tape to the "0H00M00S" point.
 - 10** **SLOW/STILL ADJUST ∇/\blacktriangle buttons**
Press ∇ or \blacktriangle to adjust streaks in the picture or vertical shifts in the picture during the slow motion/still picture modes.
 - 11** **Display window**
These indicators will appear in the display window when the VTR is on.
[a] SP/LP recording/playback mode indicator
[b] Cassette indicator
[c] Tape counter
 - 12** **REC switch**
Slide to the right to start recording.
 - 13** **Tape transport buttons**
Use these buttons to manipulate the tape:
◀ REW (rewind)
▷ PLAY
▶ FF (fast forward)
■ STOP
⏏ PAUSE/STILL

Labeling the parts


(A-3)

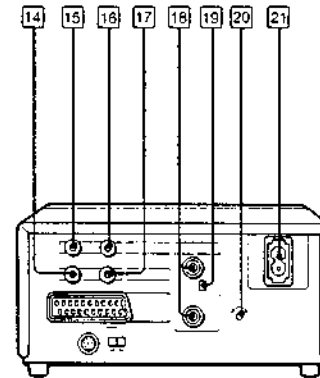

- On the back
(A-3)
- 14** **LINE OUT AUDIO jack (phono type)**
Sends audio signals to your TV or second VTR.
 - 15** **LINE IN AUDIO jack (phono type)**
Receives audio signals from your TV or second VTR.
 - 16** **LINE IN VIDEO jack (phono type)**
Receives video signals from your TV or second VTR.
 - 17** **LINE OUT VIDEO jack (phono type)**
Sends video signals to your TV or second VTR.
 - 18** **AERIAL IN/OUT connectors**
Connect IN to the aerial and OUT to the TV for playback.
 - 19** **DX/LOCAL switch**
Normally set this to DX, but if the TV signal is very strong, set it to LOCAL.
 - 20** **RF CHANNEL screw**
Adjust with the supplied screwdriver for playback on the TV.
 - 21** **AC INPUT socket**
Connect the supplied AC power cord.

Labeling the parts

(A-4)

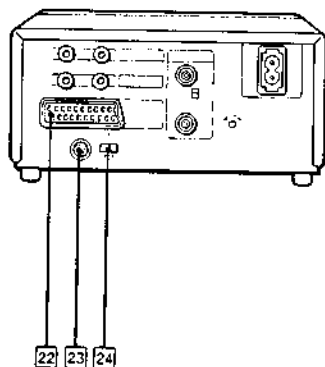

(A-4)

22 MONITOR OUT EURO-AV connector (21-pin)
Sends audio-video signals to your TV or second VTR.


23 CONTROL L connector (5-pin DIN)
Connect to CONTROL L connectors of other Sony products.

24 LANC M/S switch
Set to either M or S. M is used when you are remotely controlling other Sony products by this VTR via the CONTROL L connector. S is used when you are remotely controlling this VTR by another Sony product via the CONTROL L connector.

About LANC
LANC stands for Local Application Control Bus System. The LANC connector is used for controlling the tape transport of video equipment and peripherals connected to it. This connector is has the same function as the connectors indicated as CONTROL L or REMOTE.

Labeling the parts

(A-5)

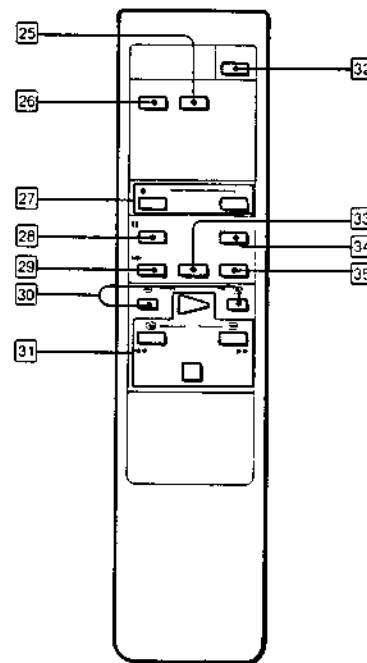

On the Remote Commander

(A-5)

25 GO TO ZERO button
Press to advance or rewind the tape to the "0H00M00S" point.

26 COUNTER RESET button
Press to reset the tape counter to "0H00M00S."

27 REC buttons
Press the two buttons simultaneously to start recording.

28 PAUSE button
Press to stop the tape for a moment.

29 FRAME button
Press during playback pause to see the picture frame-by-frame.

30 SEARCH buttons
Press to see pictures in high-speed without pressing either button continuously.

31 Tape transport buttons (PLAY, REW, FF, STOP)
Playbacks, rewinds, fast-forwards, and stops tapes.

32 switch
Press to turn the VTR on or off.

33 1/10 button
Press during playback for slow-motion playback (1/10 the usual speed).


34 x2 button
Press during playback for fast-motion playback (twice the usual speed).

35 1/5 button
Press during playback for slow-motion playback (1/5 the usual speed).


Installation

There are three steps involved in installing this VTR. First, you need to check whether your TV has video or audio inputs. (To do this, look under specifications in the manual which came with your TV.) Second, connect the VTR to the TV. Third, insert batteries into the Remote Commander. For your safety, turn the TV off before you begin these tasks.

(B-1)

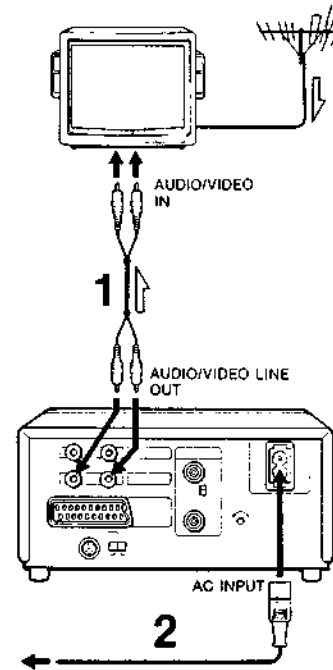

(B-2)

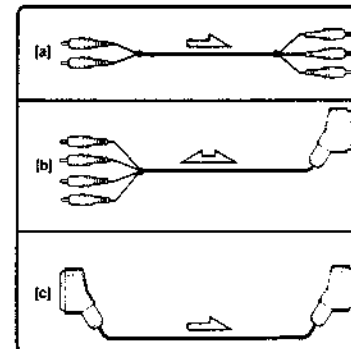

How to connect this VTR to a TV with audio-video inputs


(B-1)

- 1 Plug the supplied A-V cable into the TV and the VTR.
 - The yellow plugs should be plugged in VIDEO IN/OUT jacks.
 - The grey/black plugs should be plugged in AUDIO IN/OUT jacks.
- 2 Plug the supplied AC power cord into the VTR and an electric outlet.


Optional cables (B-2)

- Depending on the type of TV you own you may have to use one of the following cables:
- [a] If you have a TV with stereo-type audio inputs use a VMC-910MSP/920MSP cable.
 - [b] If you have a TV with a 21-pin connector use a VMC-2104M cable. (Unlike the other cables, you can leave this cable as is for both recording and playback).
 - [c] If you have a TV with a 21-pin connector use a VMC-2121CE cable. (Installing this cable is simple, however, you will only be able to use it for playback).

(C-1)

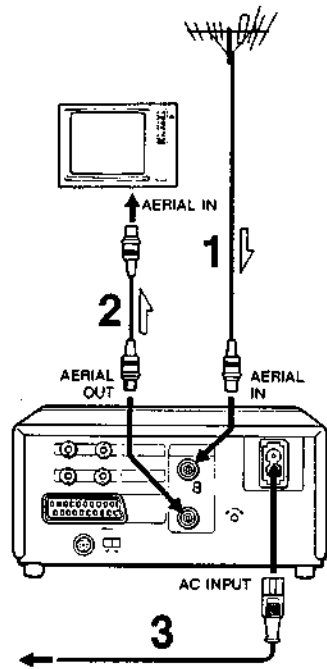

(C-2)

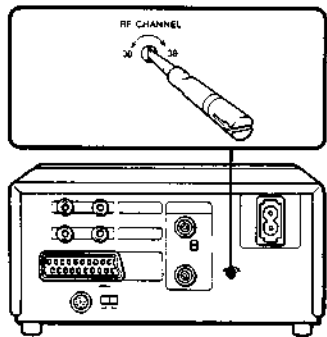

How to connect this VTR to a TV without video and audio inputs

Making connections

(C-1)

- 1 Unplug the aerial's lead from the TV and plug it into the AERIAL IN on the VTR.
- 2 Plug the supplied coaxial cable into the TV and the AERIAL OUT on the VTR.
- 3 Plug the supplied AC power cord into the AC INPUT socket and in an electric outlet.

Adjusting the RF channel

- 1 Turn the TV on and select an empty programme position.
- 2 Turn the VTR on and playback a pre-recorded tape. (See page 18.)
- 3 Adjust the TV so the tape that is played back appears clearly on the screen.
- 4 If the playback picture is not free of disturbance, use the supplied screwdriver to adjust the RF CHANNEL to a channel which is not active in your area. (C-2)

Note

Now your TV is tuned to receive the VTR's playback picture. Whenever you play back a tape, select the programme position you chose in step 1. If you are not sure how to tune your TV, refer to the TV's instruction manual or consult your dealer.

How to insert batteries into the Remote Commander

(D)


You need to insert two R6 (size AA) batteries into the Remote Commander before you can use it to operate the VTR.

- 1 Open the cover of the battery compartment.
- 2 Insert the batteries so the ⊕ and the ⊖ polarities match the polarities inside the battery compartment.
- 3 Close the cover of the battery compartment.

Notes on handling the batteries

- In normal operation, the batteries will last for approximately 6 months.
- If the Remote Commander will not be used for a long period of time, remove the batteries to avoid possible damage from battery leakage.


(D)

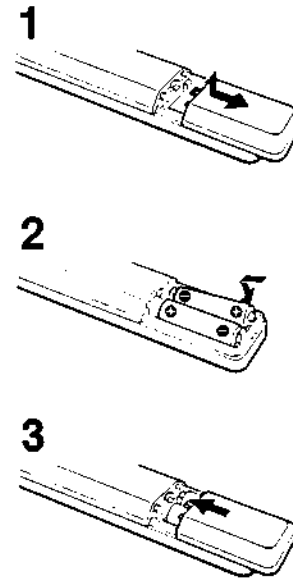


Basic Operation

The section shows you the basic steps involved in playing back a tape. Read through this section to learn how to insert a tape, play back a tape, and play back a tape in various modes such as slow-motion. Note that to play back tapes you must first set the TV/VIDEO selector to VIDEO if your TV has audio-video inputs. If your TV does not have audio-video inputs turn the TV on and select the programme position for the VTR.


(E-1)

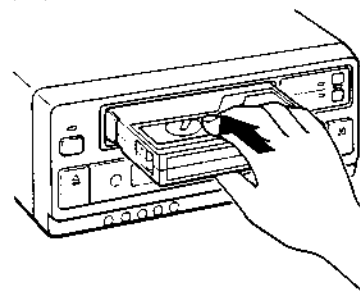

(E-2)

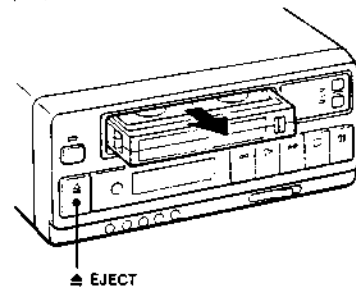

(E-3)

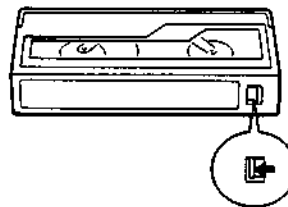


How to insert/eject tapes

To insert a tape: (E-1)

Insert a 8 mm tape in the cassette compartment with the window facing upwards. If the AC power cord is plugged in, the power will automatically turn on. Do not insert anything but 8 mm-format tapes in the cassette compartment.

To eject a tape: (E-2)

Press  to eject the tape. If the AC power cord is plugged in, the tape can be ejected even if the VTR is in standby.


To preserve recordings: (E-3)

When a new recording is made on a tape, the contents of the tape will automatically be erased. To avoid recording over a tape, slide the tab out to cover the opening. Slide the tab in to re-record on a tape.

General advice for handling tapes:

- To prevent dust from entering the tape, store tapes in their cases.
- To avoid uneven winding, store tapes in an upright position.
- To avoid uneven winding, rewind tapes at high speeds twice a year if they have not been used for a long time.
- To avoid erasing recordings, keep tapes away from electronic equipment with strong magnetic fields such as speakers.
- To prevent tapes from becoming unusable, do not insert anything in the small holes on the side of the tape and keep them away from hot or humid places.

(F)

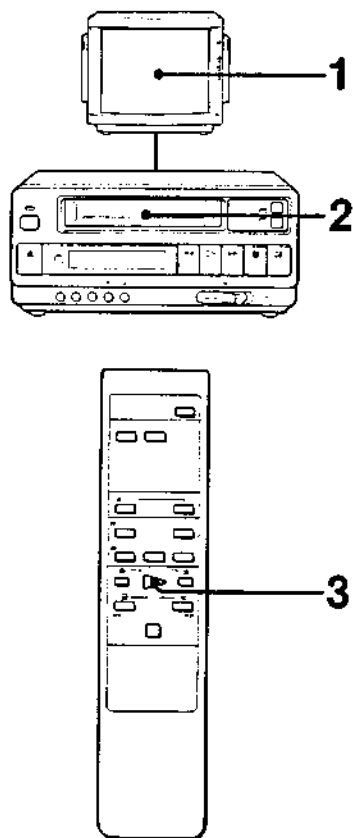

How to play back tapes

(F)

1 On a TV with audio-video inputs:
Turn the TV on and set the TV/VIDEO selector to VIDEO.
On a TV without audio-video inputs:
Turn the TV on and select the programme position for the VTR.

2 Insert a video tape in the cassette compartment.
The power will turn on and the cassette indicator lights up in the display window.

3 Press the ▷ PLAY button.
The ▷ lights up on the VTR and the playback picture will appear on the screen.

To stop playback, press the ■ STOP button.

To rewind the tape, press the ◀◀ REW button.

To advance the tape in high speed, press the ▶▶ FF button.

To remove the tape from the cassette compartment, press the ⏏ EJECT button.

Auto rewind function

When the tape reaches its end, it will automatically be rewound and stop. The tape will not be rewound, however, after the picture search or the fast-forward modes.


Auto play function

The tape can be set to play back automatically after the tape has finished rewinding. To do this, press the ▷ PLAY button while holding the REW button on the Remote Commander.


(G-1)



(G-2)

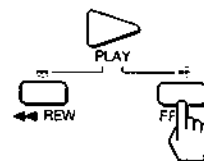


(G-3)



(G-4)



(G-5)



How to play back tapes in various modes

You can play back tapes in modes such as fast-forward, slow-motion, and frame-by-frame. Use the buttons on the VTR or the Remote Commander to play back tapes in these modes.

For most of these modes, you can return to normal playback by pressing ▷ PLAY.

To pause the playback for a still picture: (G-1)
Press || PAUSE during playback. The picture will be still on the screen.

If the still mode is left on for more than 7 minutes the unit will automatically return to playback.

To search for a particular scene: (G-2)
Press ◀◀ REW or ▶▶ FF continuously during playback or still mode. The picture will be in high-speed reverse/forward playback without sound. When you find the scene you want, stop pressing the button and you will return to the playback mode.

To search for a particular scene without having to hold down the button: (G-3)
Press SEARCH ⏏/⏏ on the Remote Commander during playback or still mode. The picture will be in high-speed reverse/forward playback without sound.


To fast-forward at twice the normal speed: (G-4)
Press x2 on the Remote Commander during playback or the still mode. The picture will speed up but you will be able to hear the sound.

For slow-motion playback: (G-5)
Press 1/10 or 1/5 on the Remote Commander during playback or the still mode. The sound will be muted in these modes.

(G-6)



(G-7)

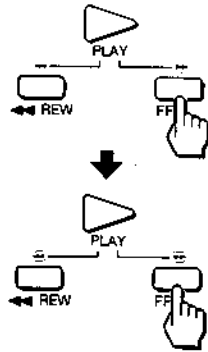

How to play back tapes in various modes

To view the picture frame-by-frame: (G-6)

Press **||** during playback, then press **||▶** FRAME several times. The picture will advance frame-by-frame every time you press a button. The sound will be muted.

To view the picture momentarily during either fast-forward or rewind: (G-7)

Press **▶▶** FF during fast-forward and press **◀◀** REW during rewind. You will be able to see a picture when you are pressing the button. Release the button to return to the previous mode.

Notes

- A few streaks may appear in the picture and the sound will be muted in the picture search modes. The streaks may be wider for tapes which were recorded in the SP mode than tapes which were recorded in the LP mode. Depending on the TV you are using, the picture may shake vertically, become black and white, or become dark.
- If the picture shakes vertically during $\times 2$ playback or the still mode, adjust the picture with SLOW/STILL ADJUST ∇/\blacktriangle on the front panel of the VTR.
- If there are streaks in the picture during the slow-motion playback or still modes, adjust the picture with SLOW/STILL ADJUST ∇/\blacktriangle on the front panel of the VTR. If you are in the still mode, switch to the slow-motion playback mode before you use these buttons.

Advanced Operation

This section shows you how to do complex tasks such as recording TV programmes, using the tape counter, and editing tapes. You must change or add connections between the TV and this VTR to record or to edit tapes. You can use any cable listed in the text of each section to make the appropriate connections.

How to record TV programmes

The main purpose of this VTR is to playback tapes. You can, however, record TV programmes if you have a TV with audio-video outputs. To record programmes you must first change or add new connections between the TV and the VTR.

Making connections

(H-1)

1 Unplug the A-V cord from the AUDIO/VIDEO IN jacks in the rear of the TV and from the LINE OUT AUDIO/VIDEO jacks in the rear of the VTR.

2 Plug the A-V cord back into the TV and the VTR.


- The yellow plugs should be plugged in VIDEO IN/OUT jacks.
- The grey/black plugs should be plugged in AUDIO IN/OUT jacks.

3 Plug the supplied AC power cord into the VTR and an electric outlet.


Notes

- If the TV has L/R stereo outputs, use a VMC-910MSP/920MSP cable. (See page 13.)
- If you have a TV with a 21-pin connector, use a VMC-2104M cable. (See page 13.)

(H-1)

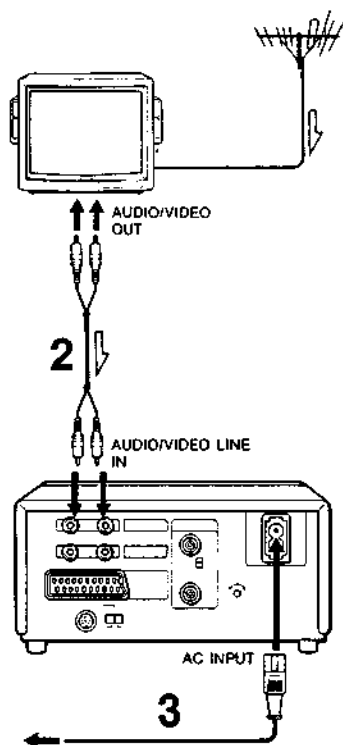

(H-2)

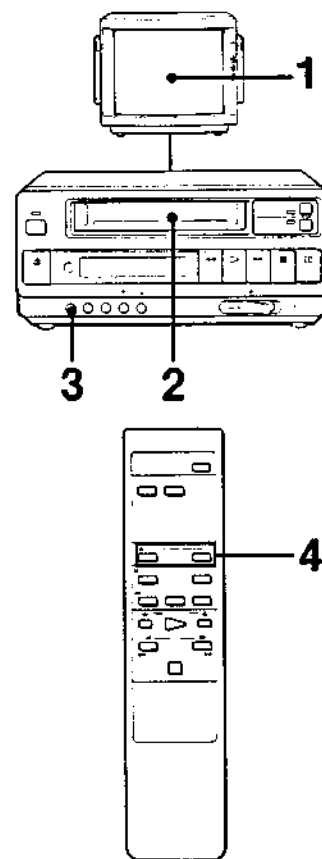

How to record TV programs

Recording TV programmes

(H-2)

- 1** Turn the TV on and choose the program you want to record.
- 2** Insert a tape into the VTR.
- 3** Select the tape speed (SP/LP) at which you want to record.
- 4** Press the two ● REC buttons simultaneously to start recording.

Note

You have to keep the TV on to record the TV program.



To stop recording for a moment

Press **|| PAUSE**. To start recording again, press **|| PAUSE** again. If the recording pause mode is left on for more than 7 minutes, the unit will automatically return to recording.

Auto rewind function

The tape will automatically be rewound when it reaches its end.

(i)

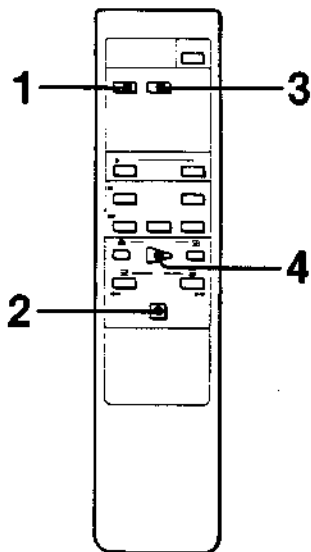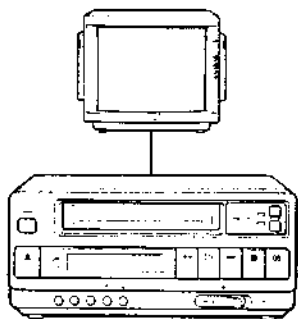

How to use the tape counter

(i)

The tape counter can be useful for playback and recording because you can mark the exact spot that you want to see on the tape.

- 1 Press **COUNTER RESET** during playback/recording to mark the spot that you want to return to. "0H00M00S" will appear on the display window briefly.
- 2 Press **STOP** at the end of playback/recording.
- 3 Press **GO TO ZERO**. The VTR will start searching for the zero counter point. (If the tape counter does not display more than 1 minute, however, the VTR will not rewind).
- 4 Press **PLAY** during the search mode. Playback starts from the zero counter point.

Accuracy of the tape counter

Because the tape counter is not a clock, there is a slight difference between the time counter display and the actual recording/playback time. This difference may be noticeable when you have switched to the recording mode.

How to use editing features

You can easily edit your homemade tapes if you have a camcorder or a second VTR as well as the appropriate signal-flow cables. The three ways you can edit tapes are: copying a whole tape, assembling scenes on a blank tape, and inserting scenes into a pre-recorded tape. You can use a Video Editing Controller to operate a player and recorder remotely.

Notes

- Even when using the **EDIT** mode during editing, the quality of the edited tape will have a certain extent of degradation in picture and sound. Please avoid using the edited tape for multiple generations of editing.
- It is illegal to copy TV programmes, films, video tapes, and other materials which have been copyrighted.

Copying a whole tape

You can duplicate the contents of a tape using either a camcorder or a second VTR. This is convenient when you want a backup copy of a tape or make a copy for a friend. The two examples in this manual show you how to copy a whole tape in:

- a camcorder onto a blank tape in this VTR (See page 27.)
- this VTR onto a blank tape in a second VTR (See page 28.)

Assemble editing

You can assemble scenes from a variety of tapes onto a single blank tape if you have a camcorder or a second VTR. This is useful if you are making a tape, say of your child, from several tapes. The three examples in this manual show you how to assemble edit scenes from tapes in:

- a camcorder onto a blank tape in this VTR (See page 29.)
- this VTR onto a blank tape in a second Sony VTR with a control L connector (See page 31.)
- this VTR onto a blank tape in a second VTR without a control L connector (See page 33.)

How to use editing features

Insert editing


You can insert scenes from tapes onto a pre-recorded tape if you use a second VTR. Again, you will need a camcorder or a second VTR to insert edit. The example in this manual shows you how to insert scenes from tapes in:

- a camcorder/a second VTR onto a pre-recorded tape in this VTR (See page 35.)

Editing with a Video Editing Controller

You can use a Sony Video Editing Controller such as the RM-E100V/RM-E300 to simplify the steps involved in editing. Please refer to the Video Editing Controller manual for detailed description of the connections and the editing procedures.

(J-1)

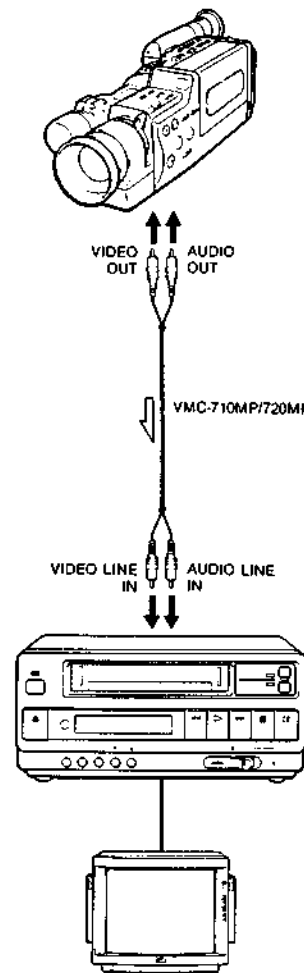

How to copy a whole tape using a camcorder

(J-1)

To duplicate a tape you must first connect a camcorder to this VTR using an A-V cable. To do this, you can use the supplied cable, or purchase:

- a VMC-710MP/720MP (same type as the supplied cable)
- a VMC-910MSP/920MSP (for camcorders with stereo sound)

The illustration is an example of the connections you need to make when you want to copy a tape from the camcorder to a blank tape in the VTR. After you make these connections, follow these steps:

Preparing the camcorder:

- 1 Turn the camcorder on and insert the tape you want to copy.
- 2 Turn the EDIT mode on (if the camcorder has this function).
- 3 Find the point from where you want to start playback and enter the playback pause mode.


Preparing this VTR:

- 4 Insert a blank tape.
- 5 Select the tape speed (SP/LP).
- 6 Press the EDIT button.
- 7 Find the point from where you want to start recording and enter the recording pause mode.

Recording from the camcorder to the VTR:

- 8 Press **PAUSE** on both the camcorder and the VTR simultaneously. The copying will begin.
- 9 Press **STOP** on both the camcorder and the VTR to stop copying.

(J-2)

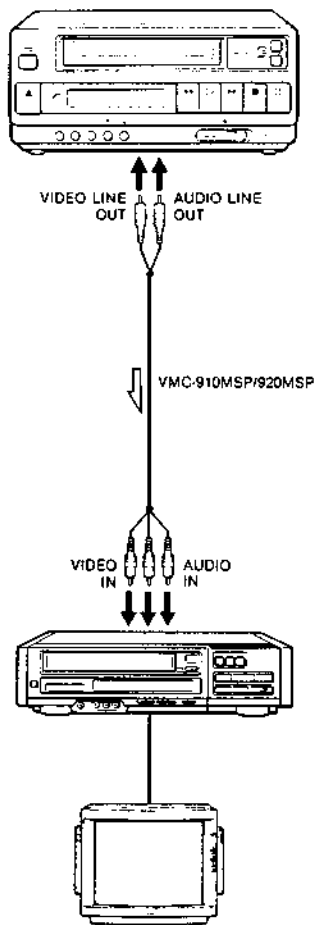

How to copy a whole tape using a second VTR

(J-2)

To duplicate a tape you must first connect a second VTR to this VTR using an A-V cable. To do this, you can use the supplied cable, or purchase:

- a VMC-710MP/720MP (same type as the supplied cable)
- a VMC-910MSP/920MSP (for VTRs with stereo sound)

The illustration is an example of the connections you need to make when you want to copy a tape from this VTR to a blank tape in the second VTR. After you make these connections, follow these steps:

Preparing the VTR:

- 1 Insert the tape you want to copy.
- 2 Press the EDIT button.
- 3 Find the point from where you want to start playback and enter the playback pause mode.


Preparing the second VTR:

- 4 Insert a blank tape.
- 5 Turn the EDIT mode on (if it has this function).
- 6 Find the point from where you want to start recording on the tape and enter the recording pause mode.

Copying from this VTR to the second VTR:

- 7 Press **II PAUSE** on both VTRs simultaneously. The copying will begin.
- 8 Press **■ STOP** on both VTRs to stop copying.

(K-1)

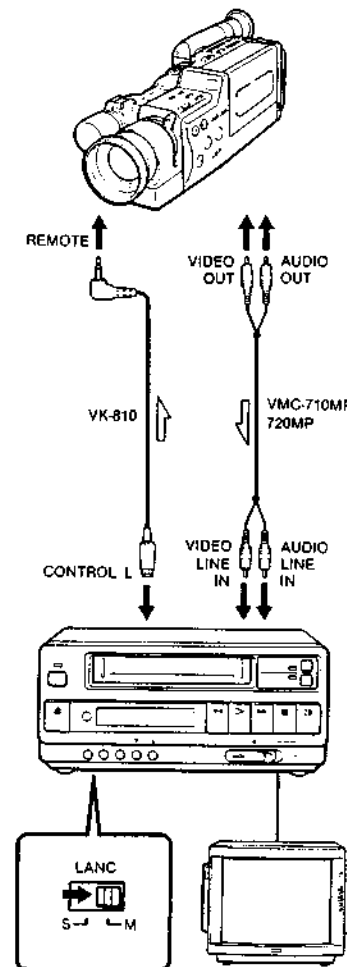

How to assemble edit using a Sony camcorder

(K-1)

To gather scenes from various tapes onto a blank tape, you must first connect a camcorder to this VTR. To do this, use an A-V cable and a control cable such as:

- a VMC-710MP/720MP (same type as the supplied cable)
- a VMC-910MSP/920MSP (for camcorders with stereo sound)
- a VK-810 (control cable)

The illustration is an example of the connections you need to make when you want to edit scenes from tapes you put in the camcorder to a blank tape in this VTR. After you make these connections, follow these steps:

Preparing the camcorder:

- 1 Turn the power on and insert the tape you want to edit.
- 2 Turn the EDIT mode on (if the camcorder has this function).
- 3 Find the point from where you want to start playback and enter the playback pause mode.

Preparing this VTR:

- 4 Insert a tape.
- 5 Set the LANC M/S switch in the rear to M.
- 6 Select the tape speed (SP/LP).
- 7 Press the EDIT button.
- 8 Find the point from where you want to start recording and enter the recording pause mode.

How to assemble edit using a Sony camcorder

Editing from the camcorder to the VTR:


9 Press SYNCHRO EDIT on the VTR.
The editing will begin.

10 Press SYNCHRO EDIT when you want to stop editing.

To edit the next scene:
Repeat steps 3, 9, and 10.

To finish assemble editing:
Press ■ STOP on both the camcorder and this VTR.

(K-2)

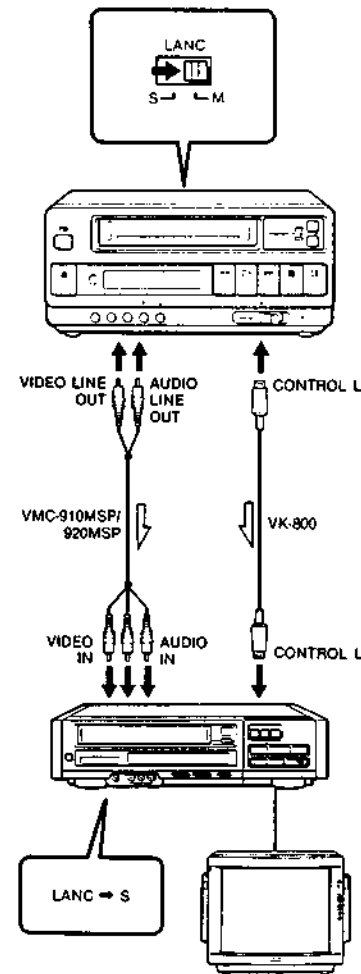

How to assemble edit using a second Sony VTR

(K-2)

To gather scenes from various tapes onto a blank tape, you must first connect a second Sony VTR with control L connector to this VTR. To do this, use an A-V cable and a control cable such as:

- a VMC-710MP/720MP (same type as the supplied cable)
- a VMC-910MSP/920MSP (for VTRs with stereo sound)
- a VK-800 (control cable)

The illustration is an example of the connections you need to make when you want to edit scenes from tapes you put in this VTR to a blank tape the second VTR. After you make these connections, follow these steps:

Preparing this VTR:

- 1** Turn the power on and insert the tape you want to edit.
- 2** Set the LANC M/S switch in the rear to M.
- 3** Press the EDIT button.
- 4** Find the point from where you want to start playback and enter the playback pause mode.

Preparing the second VTR:

- 5** Insert a tape.
- 6** Set the LANC M/S switch to S.
- 7** Turn the EDIT mode on (if the VTR has this function).
- 8** Find the point from where you want to start recording and enter the recording pause mode.

How to assemble edit using a second Sony VTR

Editing from this VTR to a second VTR:


9 Press SYNCHRO EDIT on this VTR.
The editing will start.

10 Press SYNCHRO EDIT to stop editing.

To edit the next scene:
Repeat steps 4, 8, and 9.

To finish assemble editing:
Press ■ STOP on both VTRs.

(K-3)

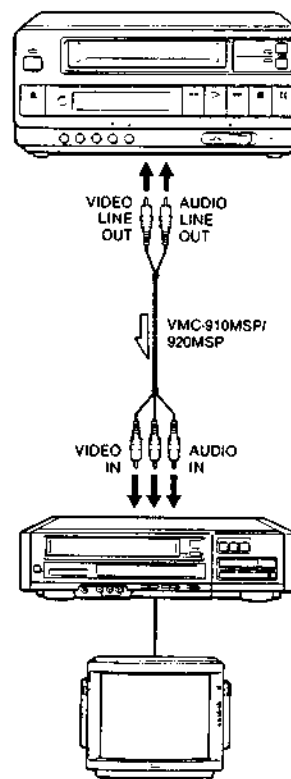

How to assemble edit using a second VTR

(K-3)

To gather scenes from various tapes onto a blank tape, you must first connect a second VTR not equipped with a control L connector to this VTR. To do this, use an A-V cable such as:

- a VMC-710MP/720MP (same type as the supplied cable)
- a VMC-910MSP/920MSP (for VTRs with stereo sound)

The illustration is an example of the connections you need to make when you want to edit scenes from tapes you put in this VTR to a blank tape in the second VTR. After you make these connections, follow these steps:

Preparing this VTR:

- 1** Turn the power on and insert the tape you want to edit.
- 2** Press the EDIT button.
- 3** Find the point from where you want to start playback and enter the playback pause mode.

Preparing the second VTR:

- 4** Insert a tape.
- 5** Turn the EDIT mode on (if the VTR has this function).
- 6** Find the point from where you want to start recording and enter the recording pause mode.

How to assemble edit using a second VTR

Editing from this VTR to a second VTR:


7 Press **|| PAUSE** on both VTRs simultaneously. The editing will start.

8 Press **|| PAUSE** on the second VTR to stop editing.

To edit the next scene:
Repeat steps 3, 7, and 8.

To finish assemble editing:
Press **■ STOP** on both VTRs.

(L)

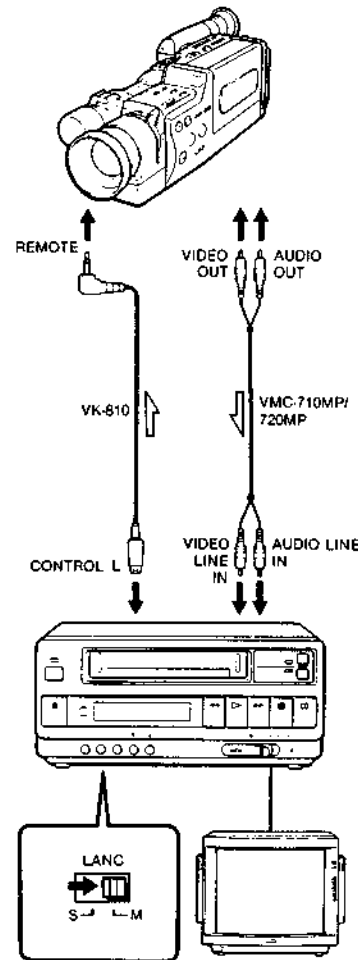

How to insert edit using a Sony camcorder/VTR

(L)

To insert scenes from various tapes onto a pre-recorded tape, you must first connect a Sony camcorder or second VTR to this VTR. To do this, use an A-V cable and a control cable such as:

- a VMC-710MP/720MP (same type as the supplied cable)
- a VMC-910MSP/920MSP (for VTRs with stereo sound)
- a VK-810 (control cable for camcorders)
- a VK-800 (control cable for VTRs)

The illustration is an example of the connections you need to make when you want to insert scenes from tapes you put in the camcorder onto a pre-recorded tape in this VTR. After you make these connections, follow these steps:

Preparing the camcorder:

- 1 Insert the tape you want to edit.
- 2 Press the EDIT button (if the camcorder has this function).
- 3 Find the point from where you want to start playback and enter the playback pause mode.

Preparing this VTR:

- 4 Insert a pre-recorded tape.
- 5 Set the LANC M/S switch in the rear of the VTR to M.
- 6 Select the same tape speed (SP/LP) as the tape you want to edit.
- 7 Press the EDIT button.
- 8 Find the point from where you want to stop recording and enter the recording pause mode.
- 9 Press COUNTER RESET to display "0H00M00S."
- 10 Rewind the tape and enter the recording pause mode at the start of the edit.

How to insert edit using a Sony
camcorder/VTR

Editing from the camcorder to this VTR:

11 Press SYNCHRO EDIT on the VTR.
The editing will start. When the tape counter on this VTR displays "0H00M00S," the camcorder enters the playback pause mode and this VTR enters the recording pause mode.

12 Press SYNCHRO EDIT or ■ STOP when you want to stop recording.

To insert the next scene:
Repeat steps 3, and 8 to 11.

To finish insert editing:
Press ■ STOP on both the camcorder and the VTR.

SECTION 3 DISASSEMBLY

Note: Follow the disassembly procedure in the numerical order given.

3-1. REMOVAL OF FRONT PANEL, CASE UPPER, PLATE BOTTOM

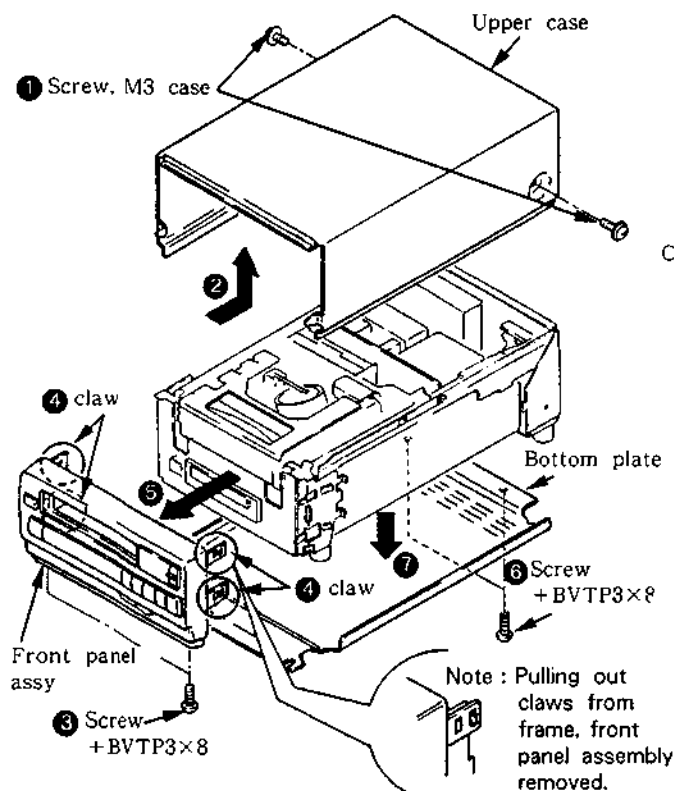


Fig. 3-1.

3-2. REMOVAL OF VI-101, IN-41, FR-38 BOARDS

- Return bottom of the set above.
- Separate connectors before VI-101, IN-41 boards remove.

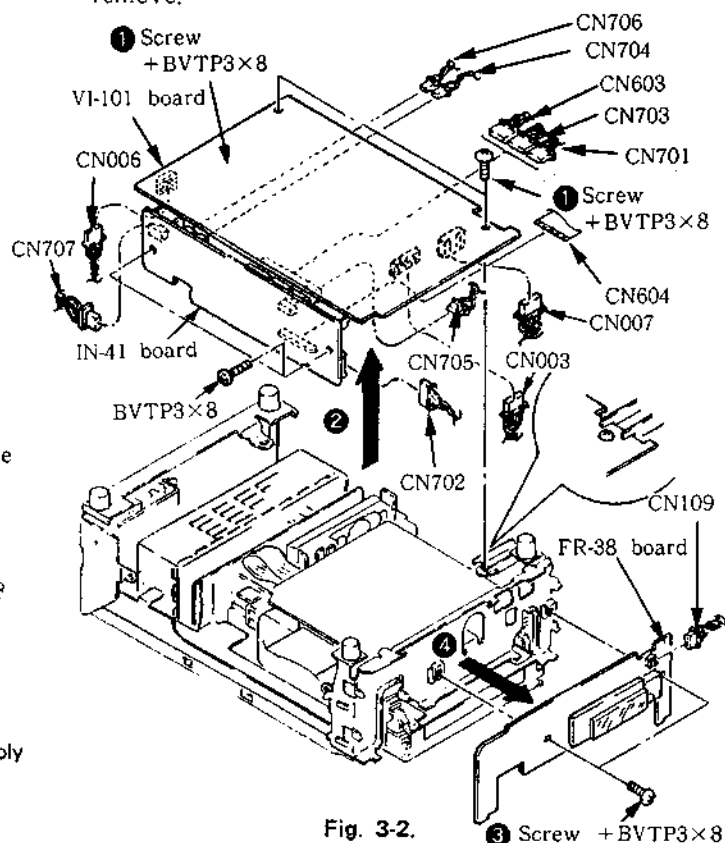


Fig. 3-2.

3-3. REMOVING BOARDS CONNECTED BY A BOARD-TO-BOARD CONNECTOR

Example: Removing the VI-101 board from the IN-41, AF-20 board

- 1) Flat the IN-41 board as shown in Fig. 3-3. ①.
- 2) As shown in Fig. 3-3. ②, pull out the IN-41 board from the VI-101 board.
- 3) Before removing the AF-20 board, turn PCB support ③.
- 4) Remove the AF-20 board from the VI-101 board ④.

Note: Pulling out the board forcefully may damage the connector or pattern. Therefore use care when removing the board.

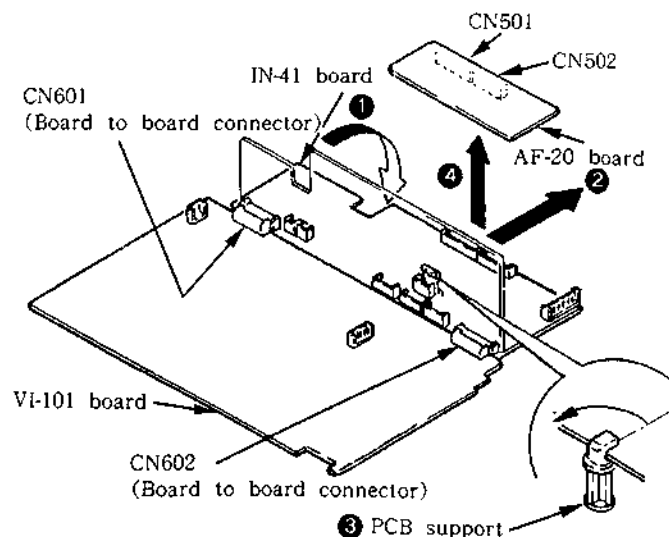


Fig. 3-3.

3.4. REMOVAL OF FC-43 BOARD

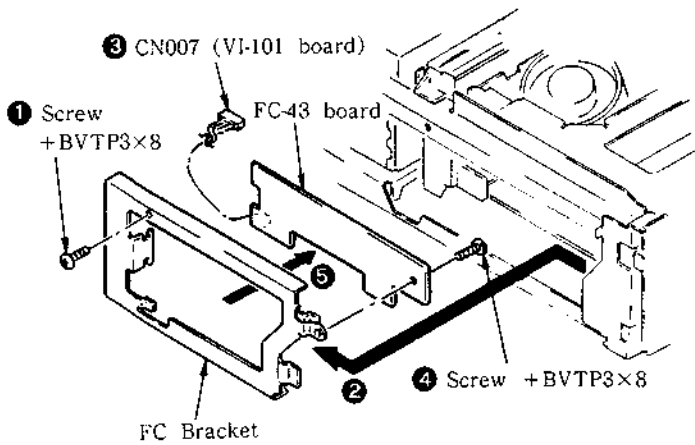


Fig. 3-4.

3.6. REMOVAL OF CC-23 BOARD

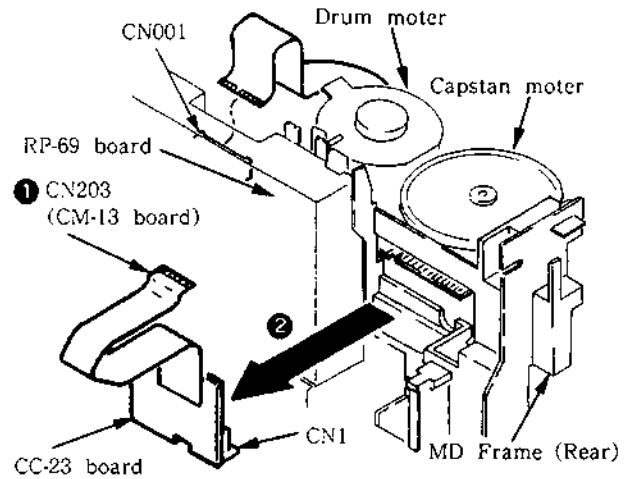


Fig. 3-6.

3.5. REMOVAL OF POWER BLOCK RS-32 BOARDS

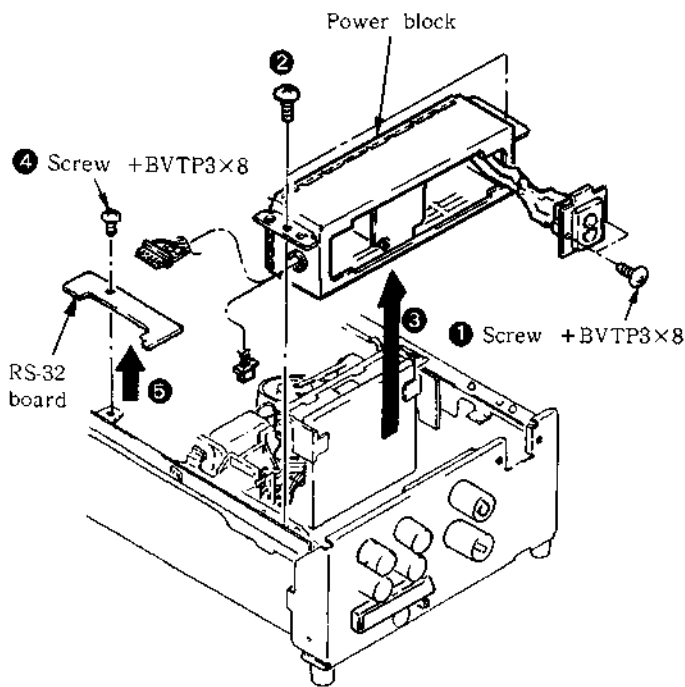


Fig. 3-5.

3.7. REMOVAL OF CM-13, UC-3, RP-69 BOARDS

- Remove bottom of the set.
- Separate connectors before CM-13, UC-3, RP-69 boards remove.

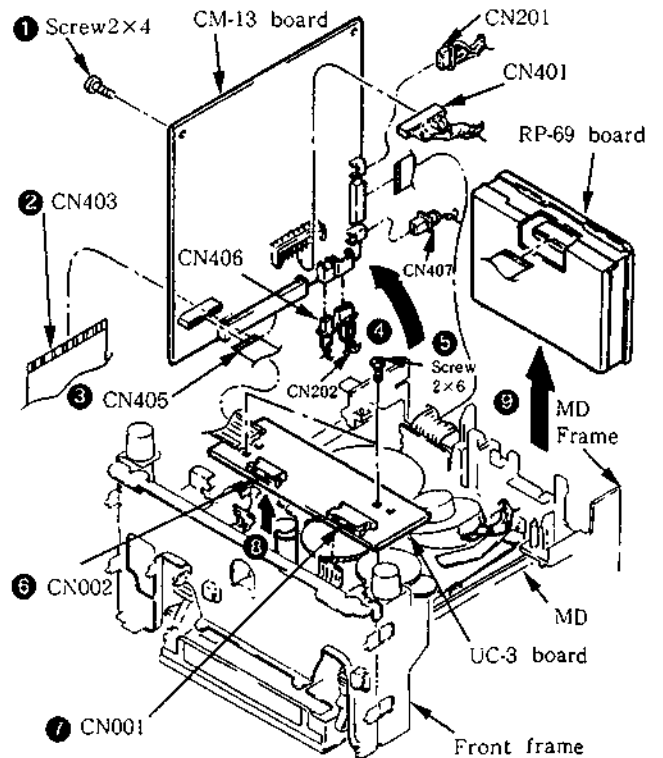


Fig. 3-7.

3-8. REMOVAL OF RP-69 BOARD, FLEXIBLE BOARD

- 1) Remove the screw in Fig. 3-8 A
- 2) Pull out two claws of MD frame in Fig. 3-8 B.
- 3) Move the slider C of CN001 on RP-69 board in the direction of the arrow D.
- 4) Remove FLEXIBLE boards.

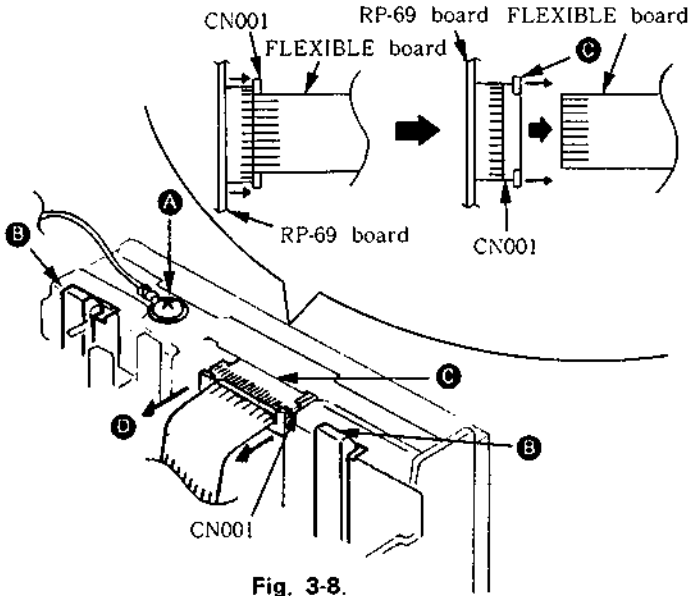


Fig. 3-8.

3-10. REMOVAL OF MD, CASSETTE COMPARTMENT BLOCK

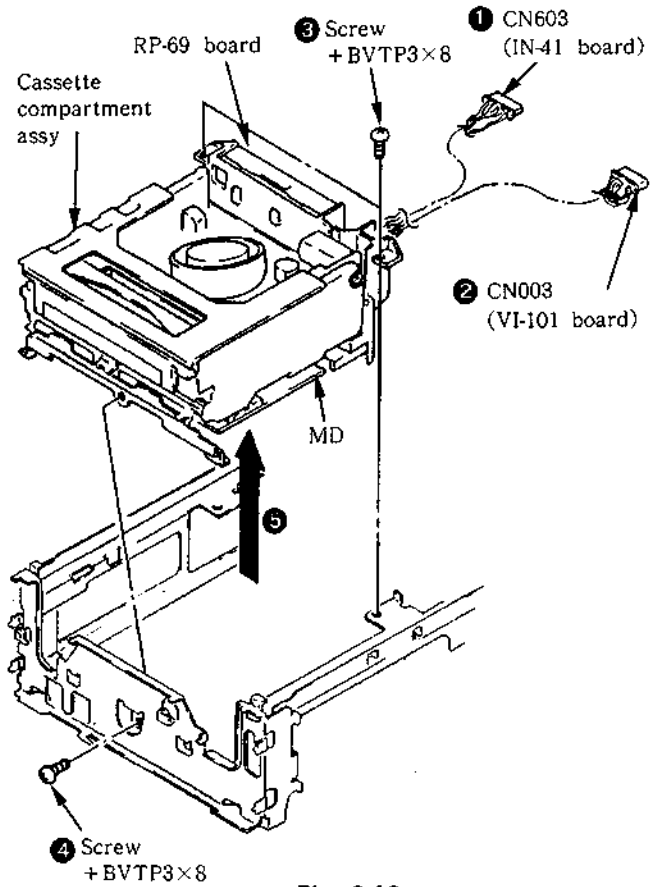


Fig. 3-10.

3-9. REMOVAL OF PI-24 BOARD AND RM-44 BOARD AND REAR FRAME, MODULATOR

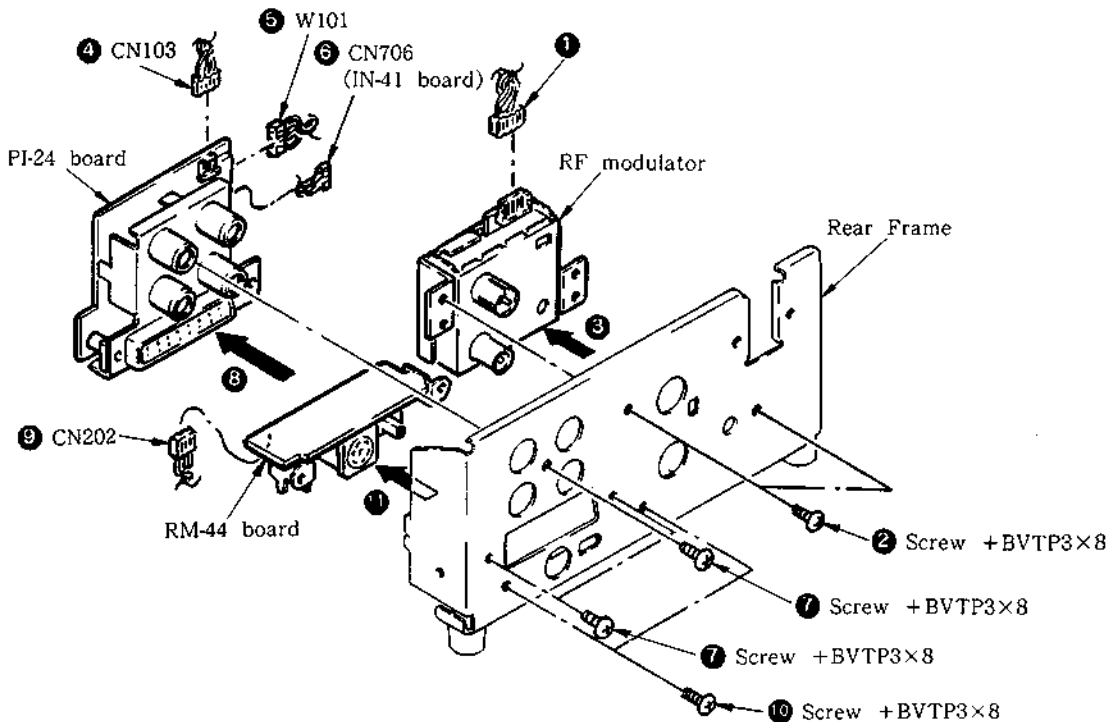


Fig. 3-9.

3-11. REMOVAL OF MD SECTION

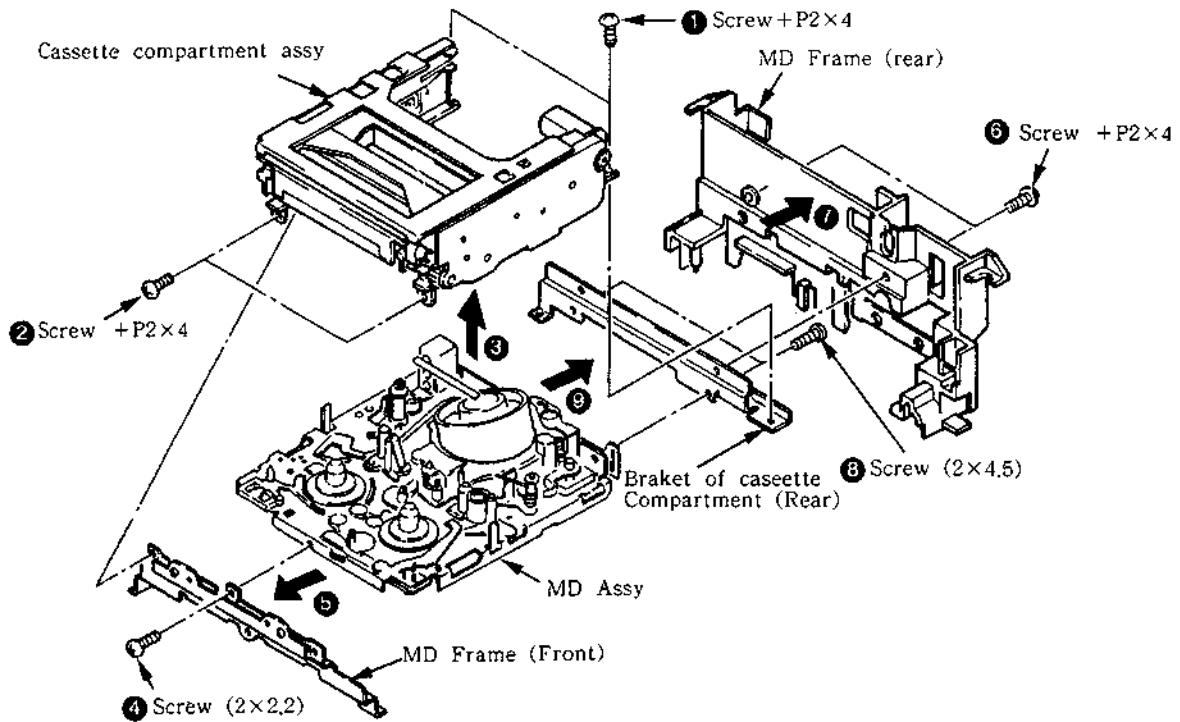


Fig. 3-11.

3-12. NOTES FOR CASSETTE COMPARTMENT ASSY INSTALLATION

1. After installing the cassette compartment ass'y onto the MD block ass'y, look from the front panel and check if the tab of the eject lever (MD block ass'y) is properly latched onto the rear of the knob of the lock slider (cassette compartment ass'y). See Fig. 3-12.
2. If the tab is latched on the reverse, use the tip of a screwdriver to lightly push the eject lever. Then install the cassette compartment ass'y.

Notes

1. When the MD block ass'y is not in the STOP position, the eject lever might not be able to move.
2. If the cassette compartment is not properly installed on the MD block ass'y (improper latching between the cassette compartment ass'y's lock slider and the MD block ass'y's eject lever) and the unit's AC plug is inserted into a power outlet, the cassette door and holder will operate repeatedly regardless of the ON/OFF setting of the power switch. The cassette will not be loaded even when it is inserted.


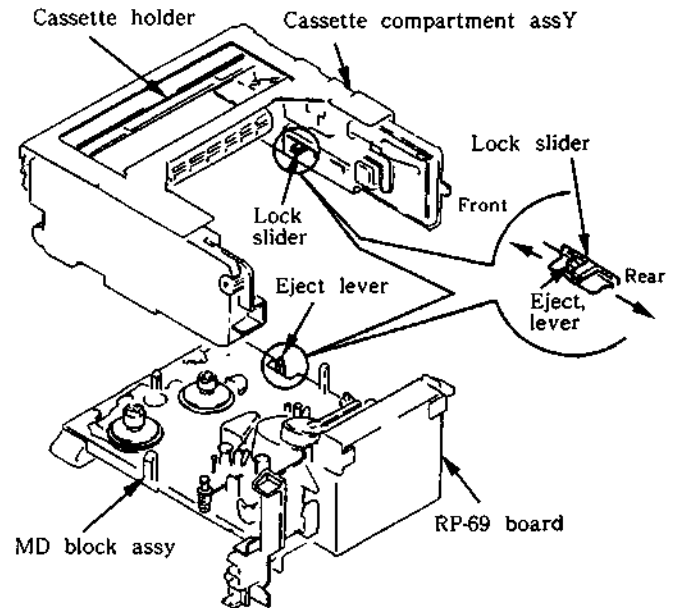



Fig. 3-12.


SECTION 4 DIAGRAMS

4-1. CIRCUIT BOARDS LOCATION

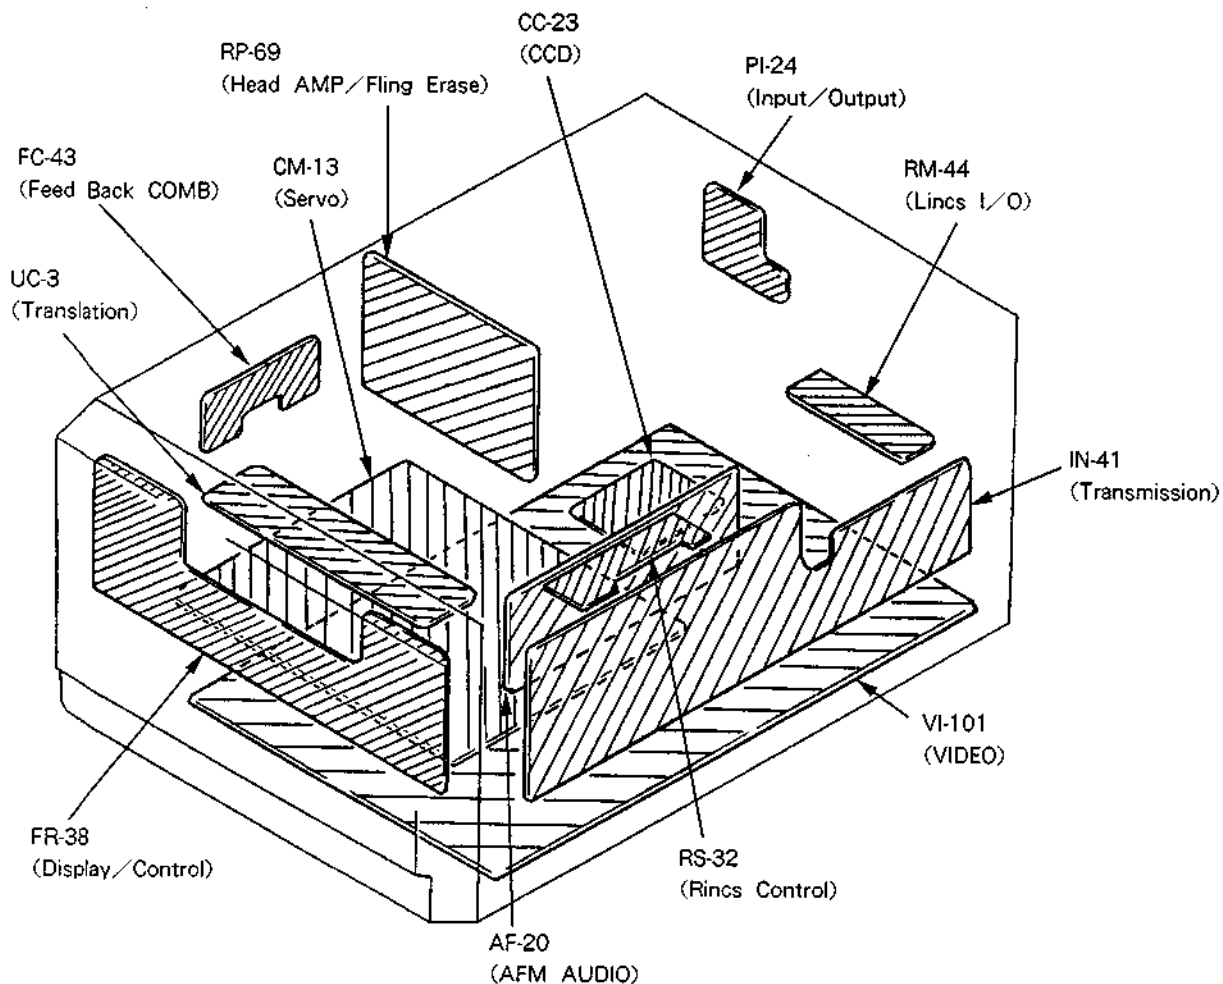


4-2. OVERALL BLOCK DIAGRAM

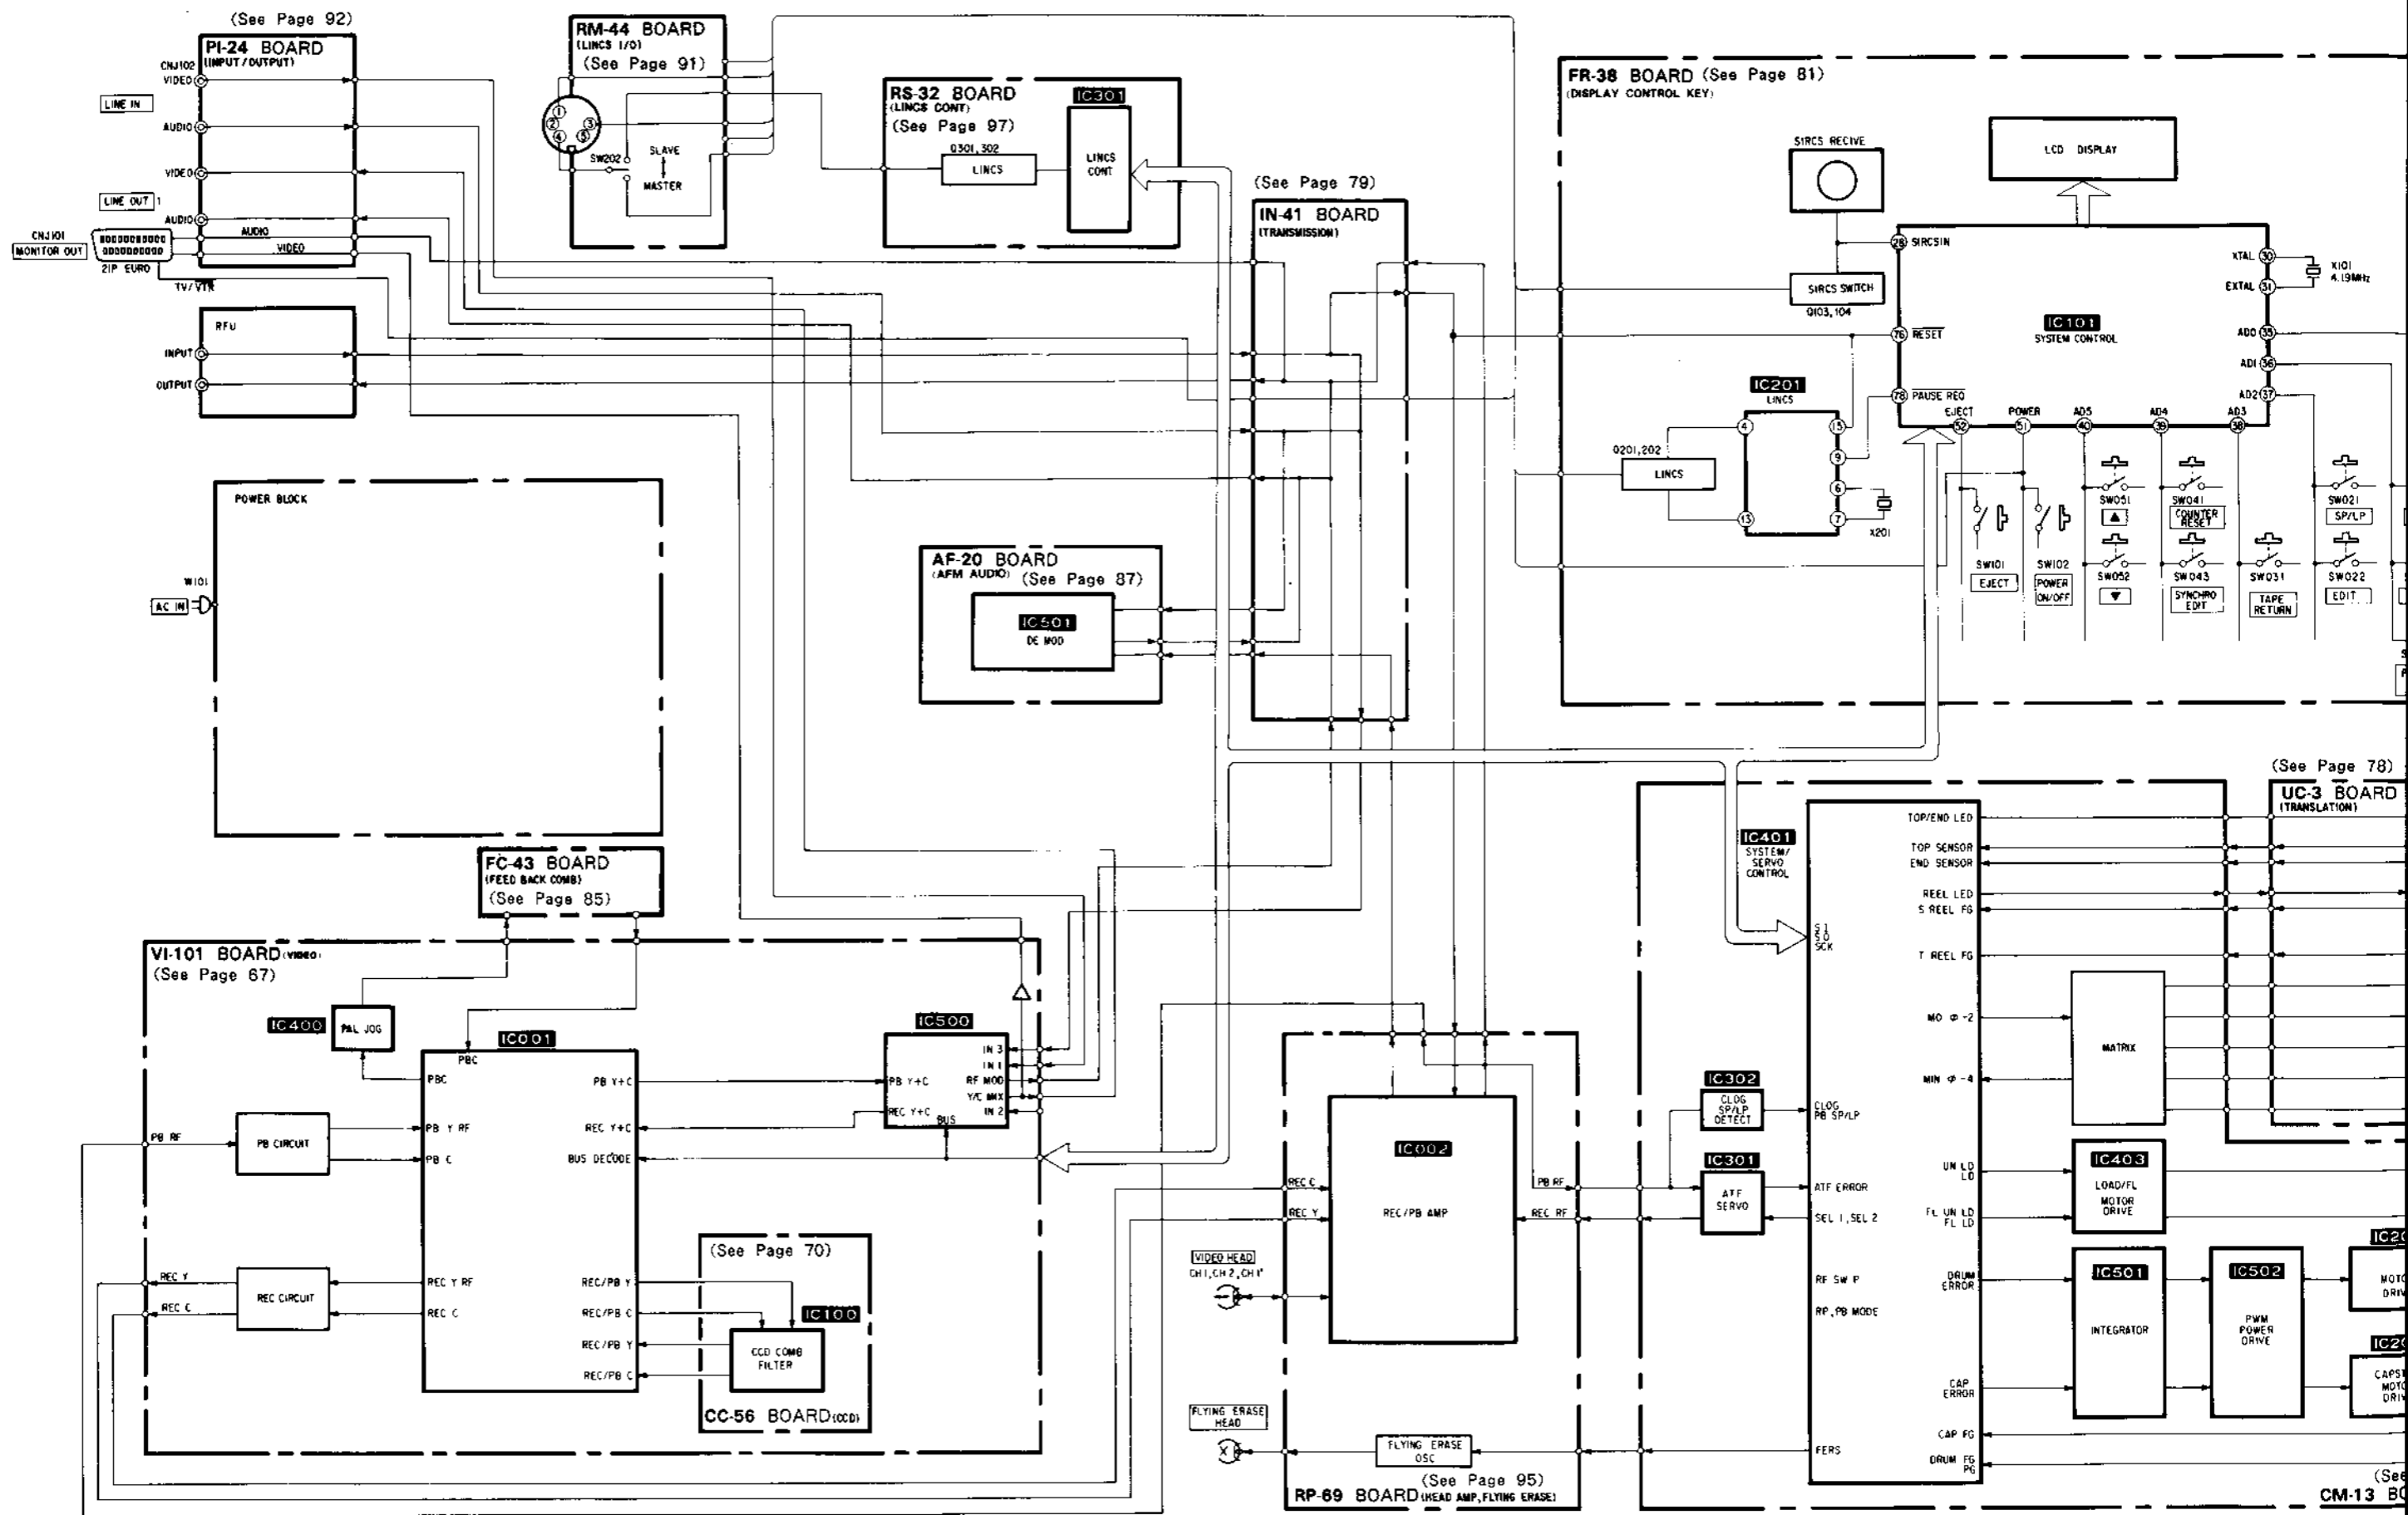



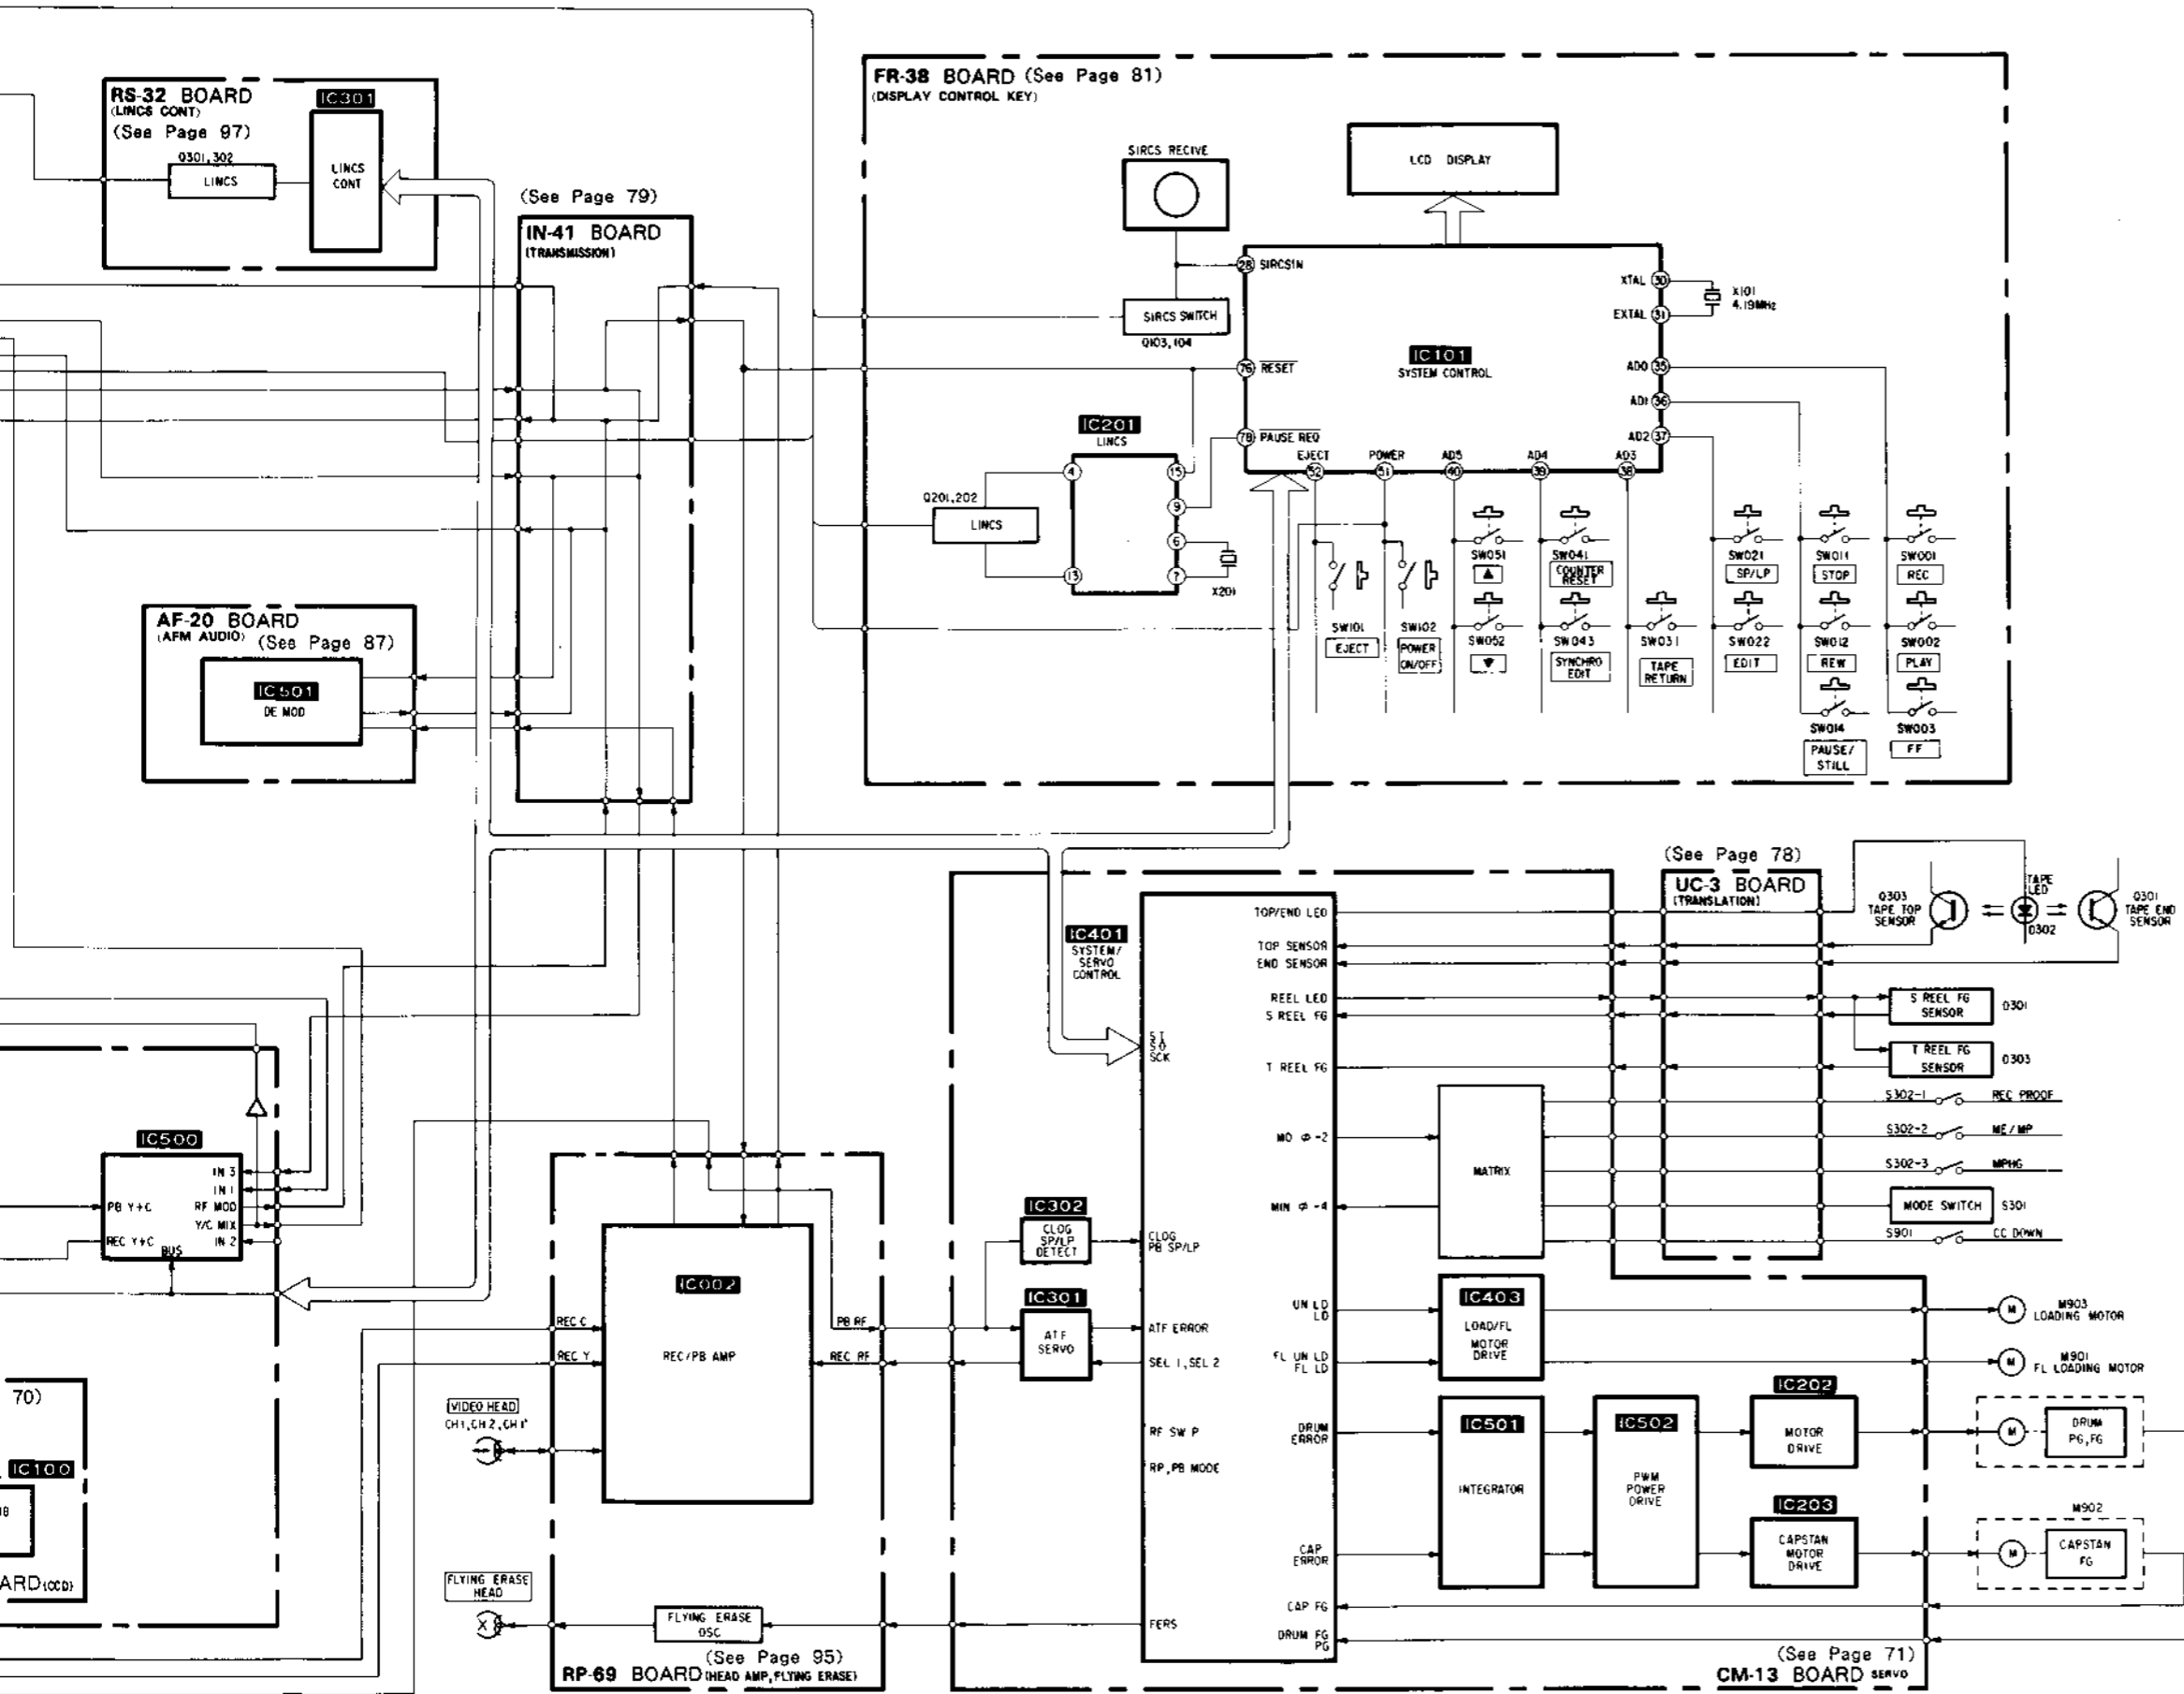


4-3. VIDEO BLOCK DIAGRAM

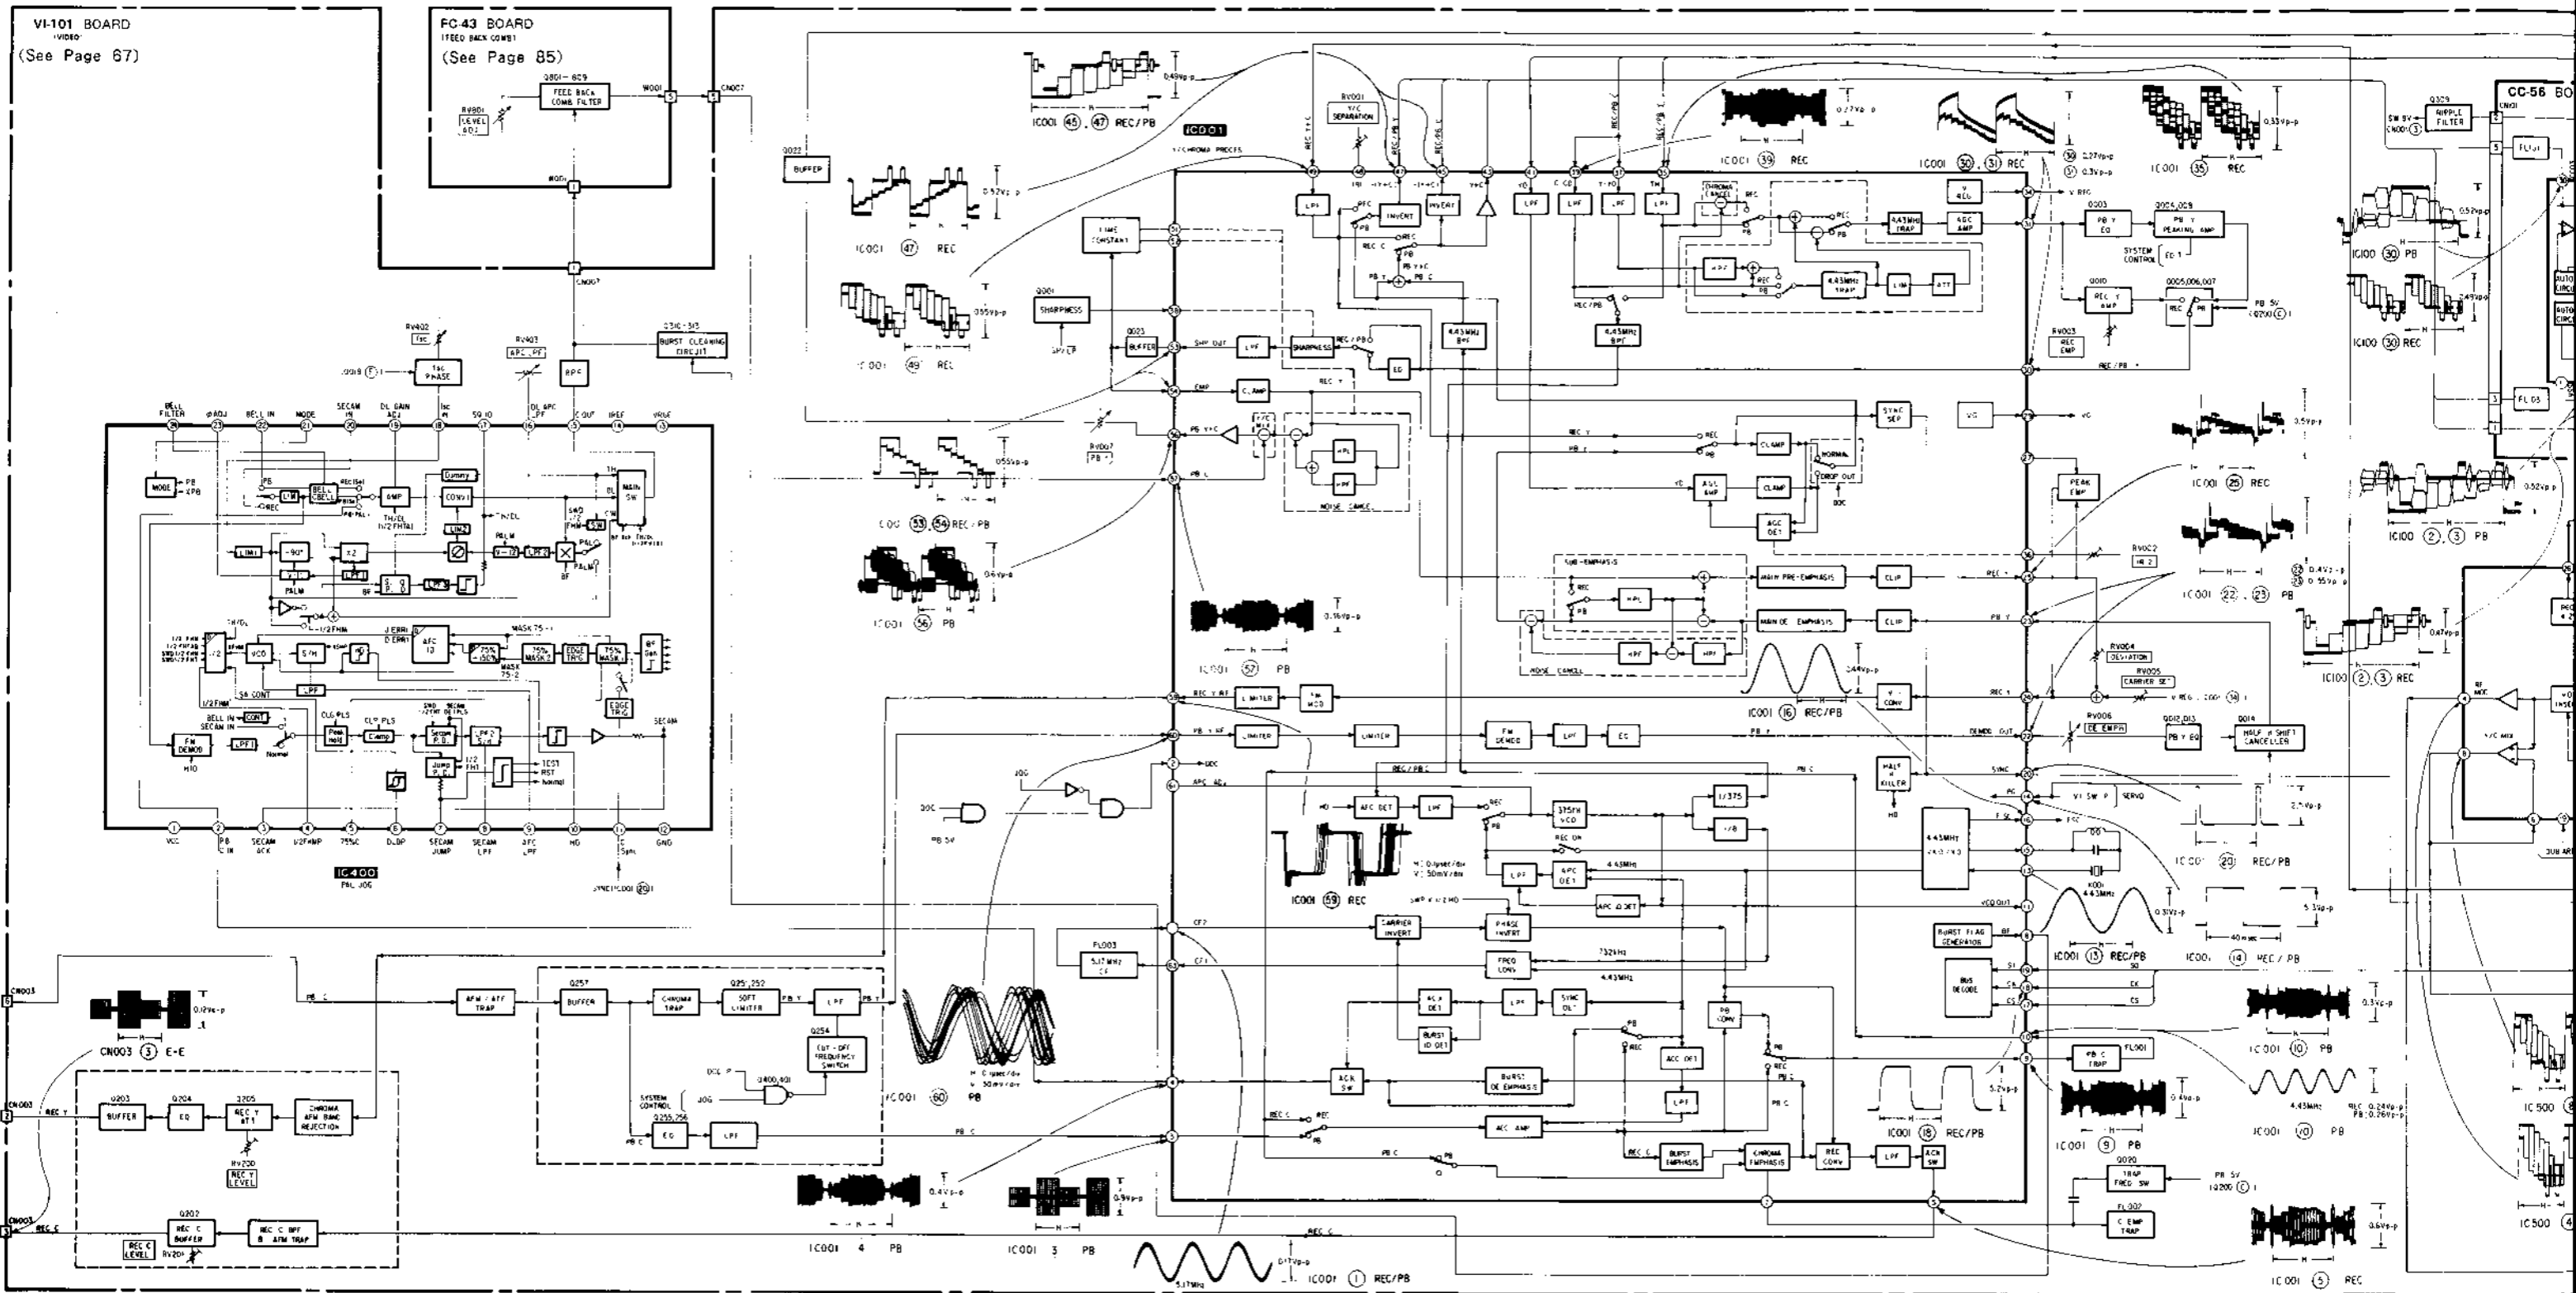



4-4. HEAD AMP BLOCK DIAGRAM

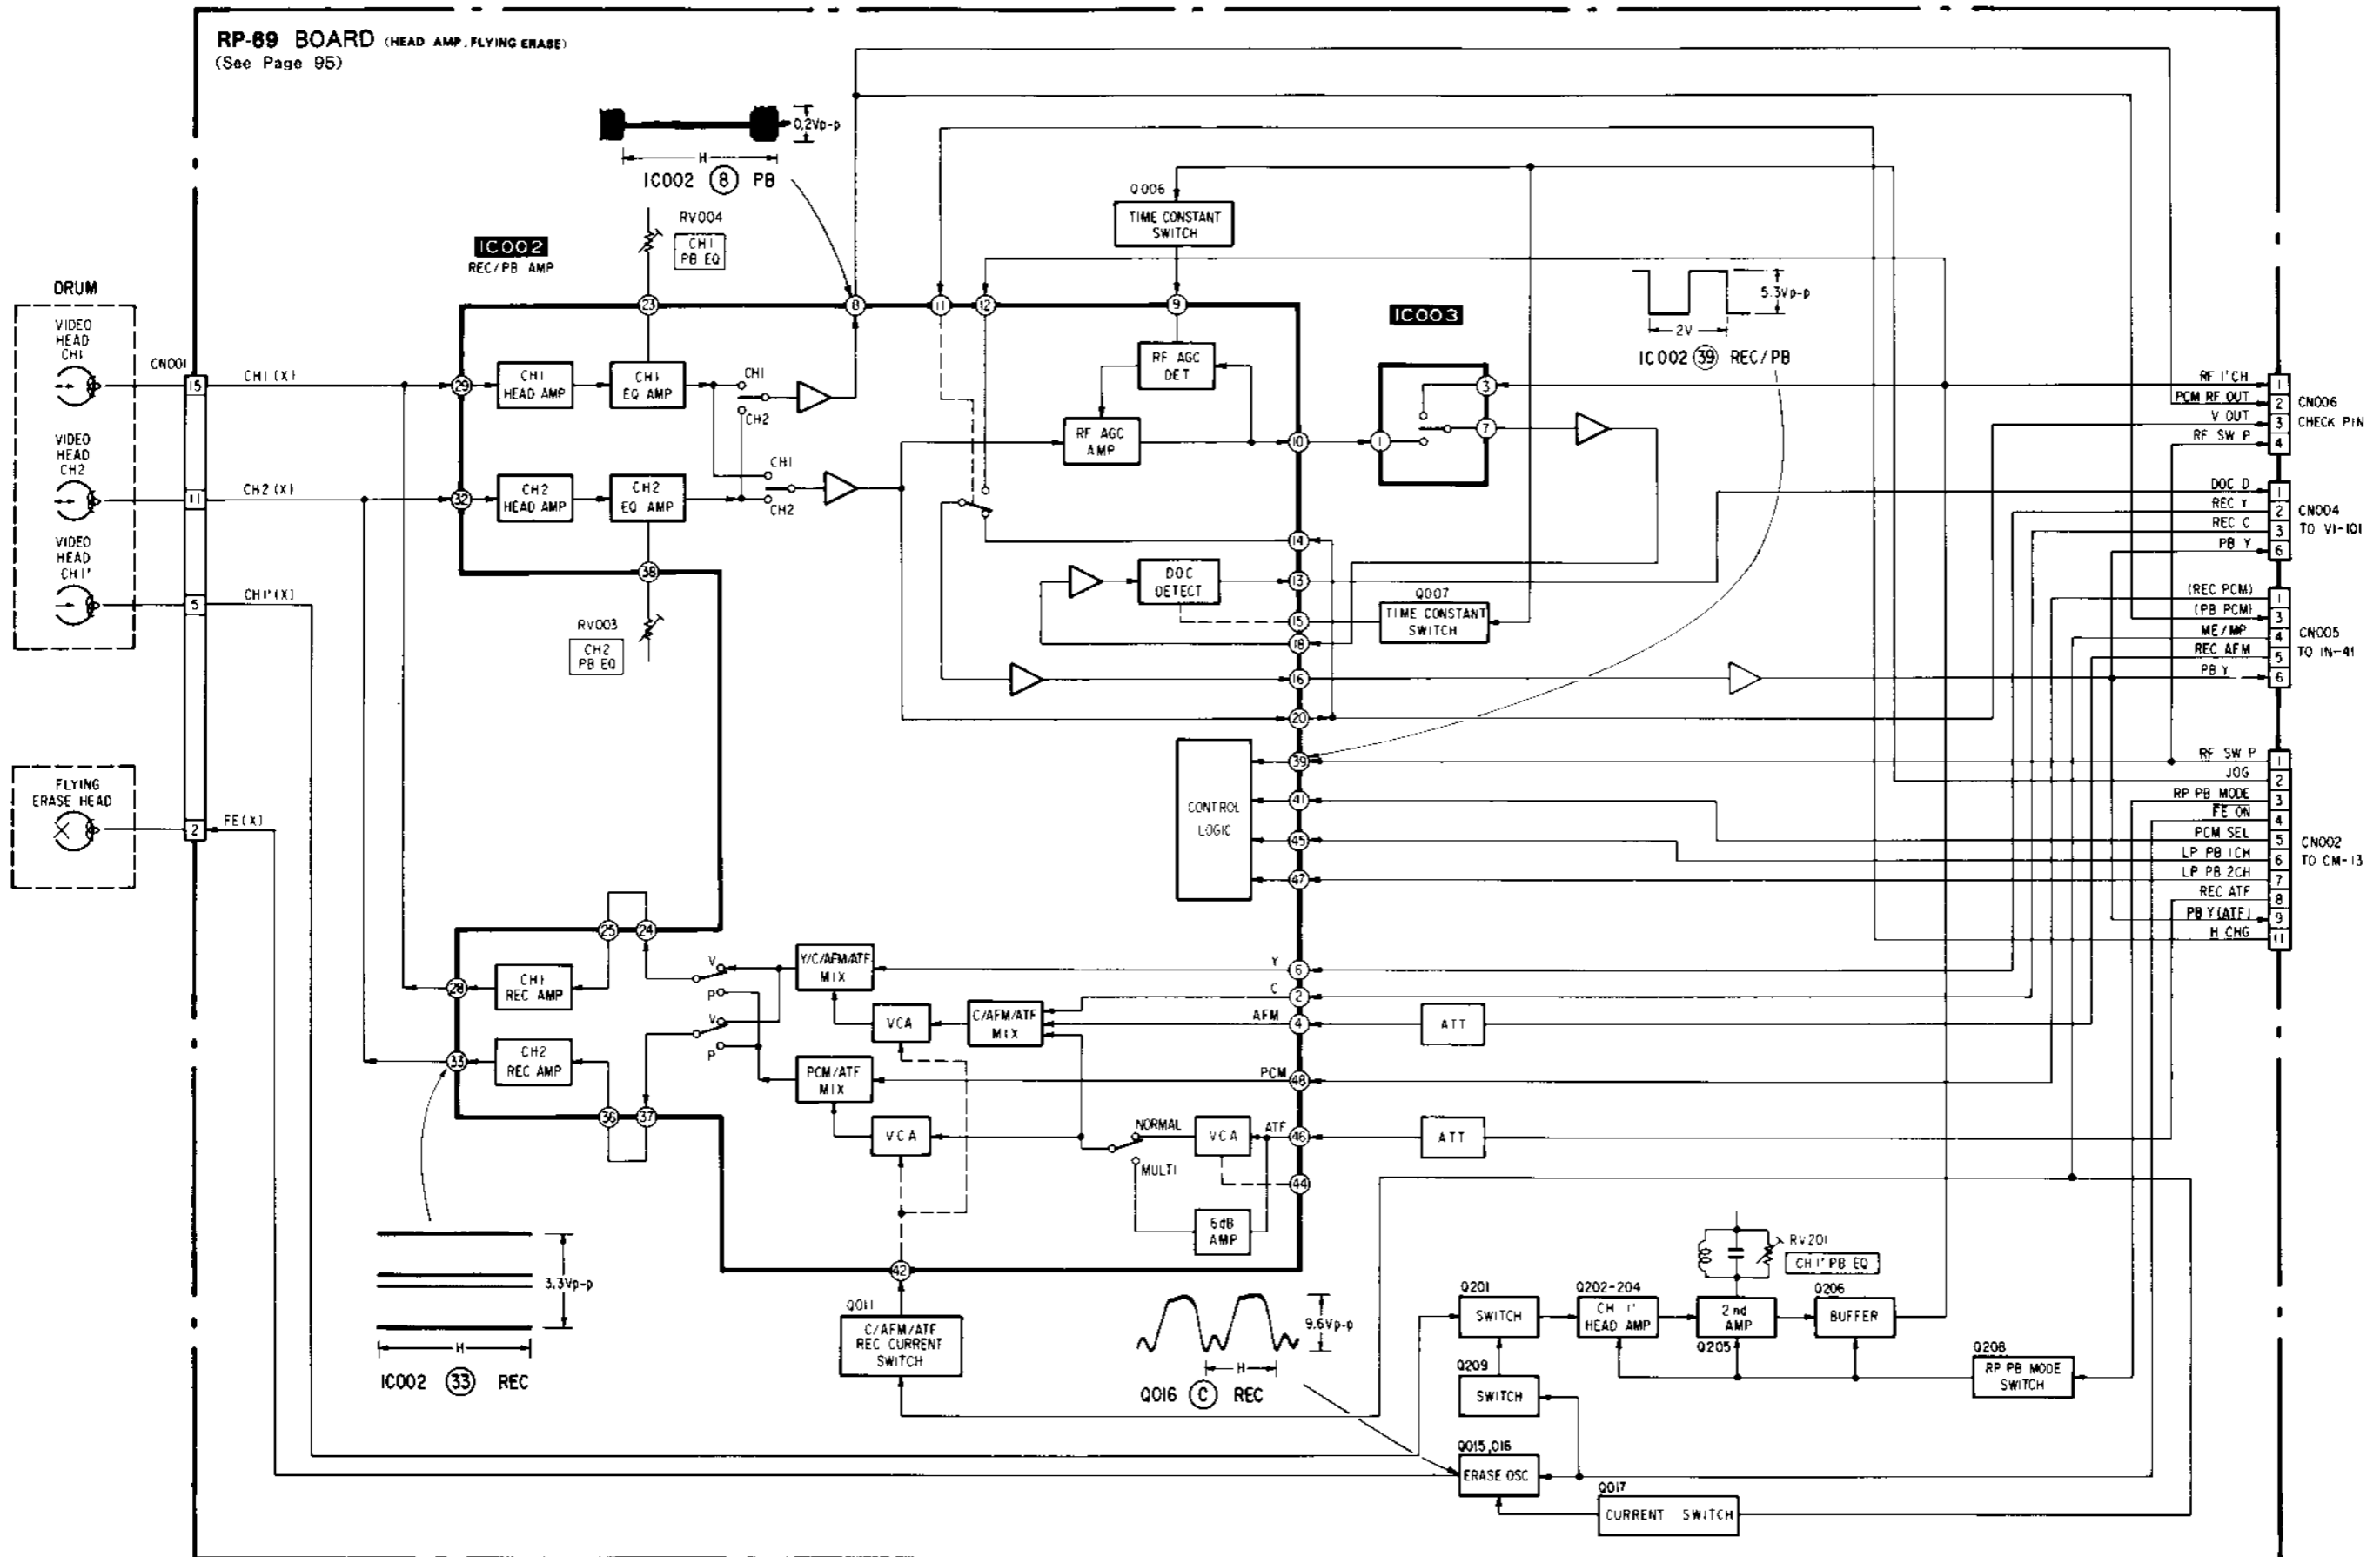

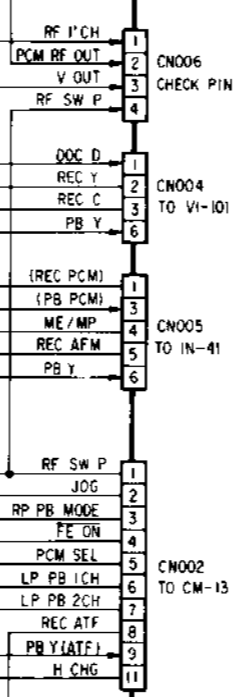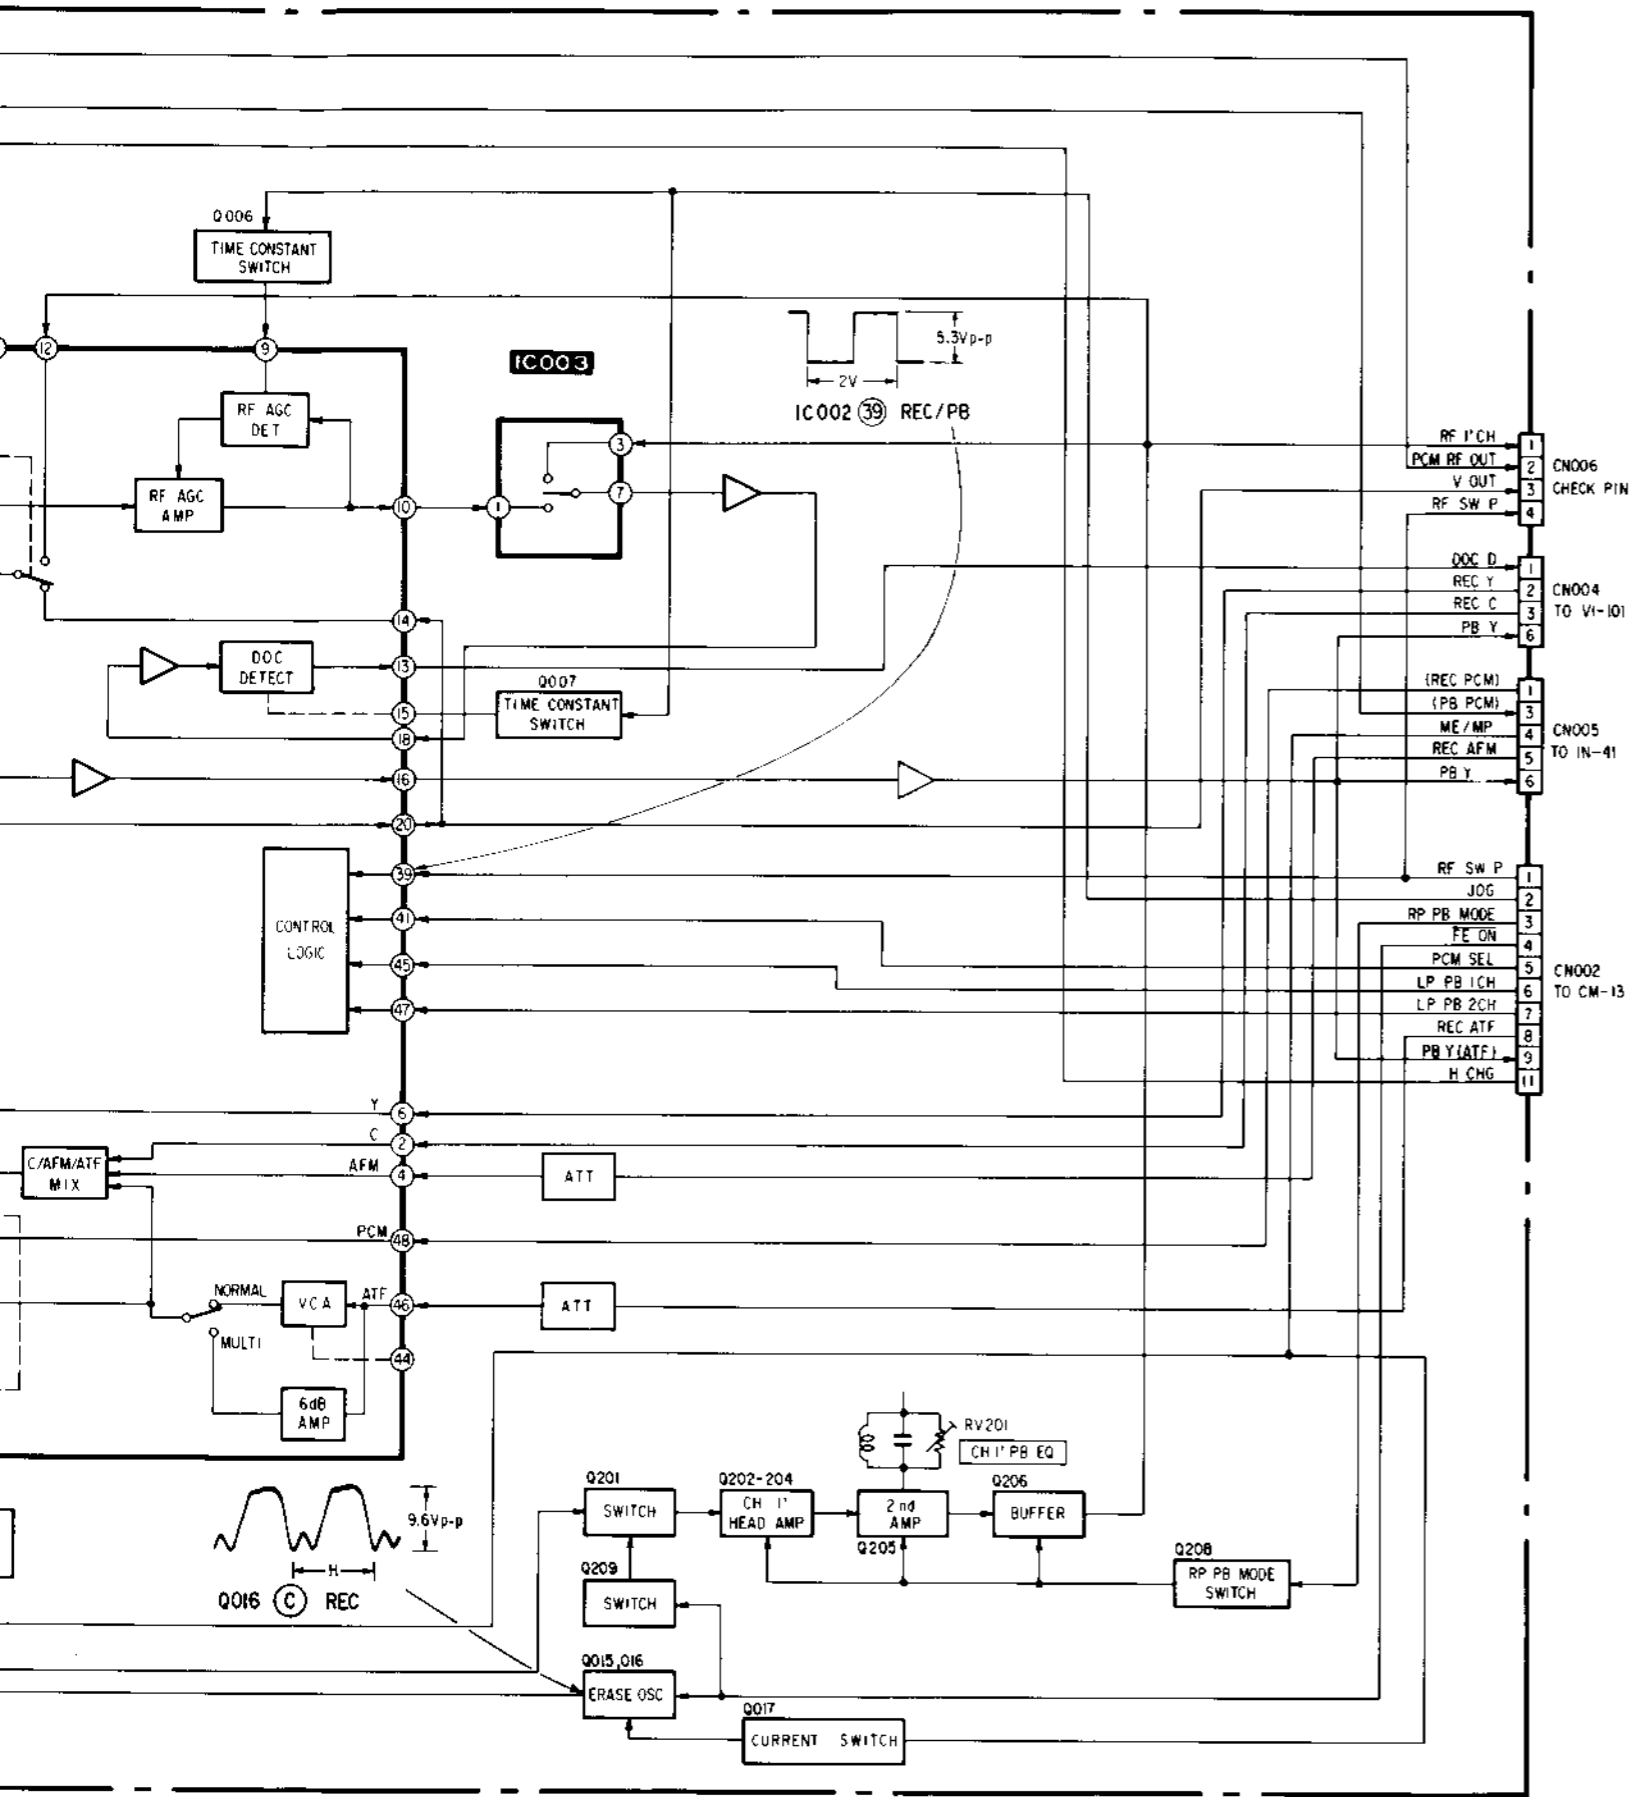

4-5. SERVO BLOCK DIAGRAM

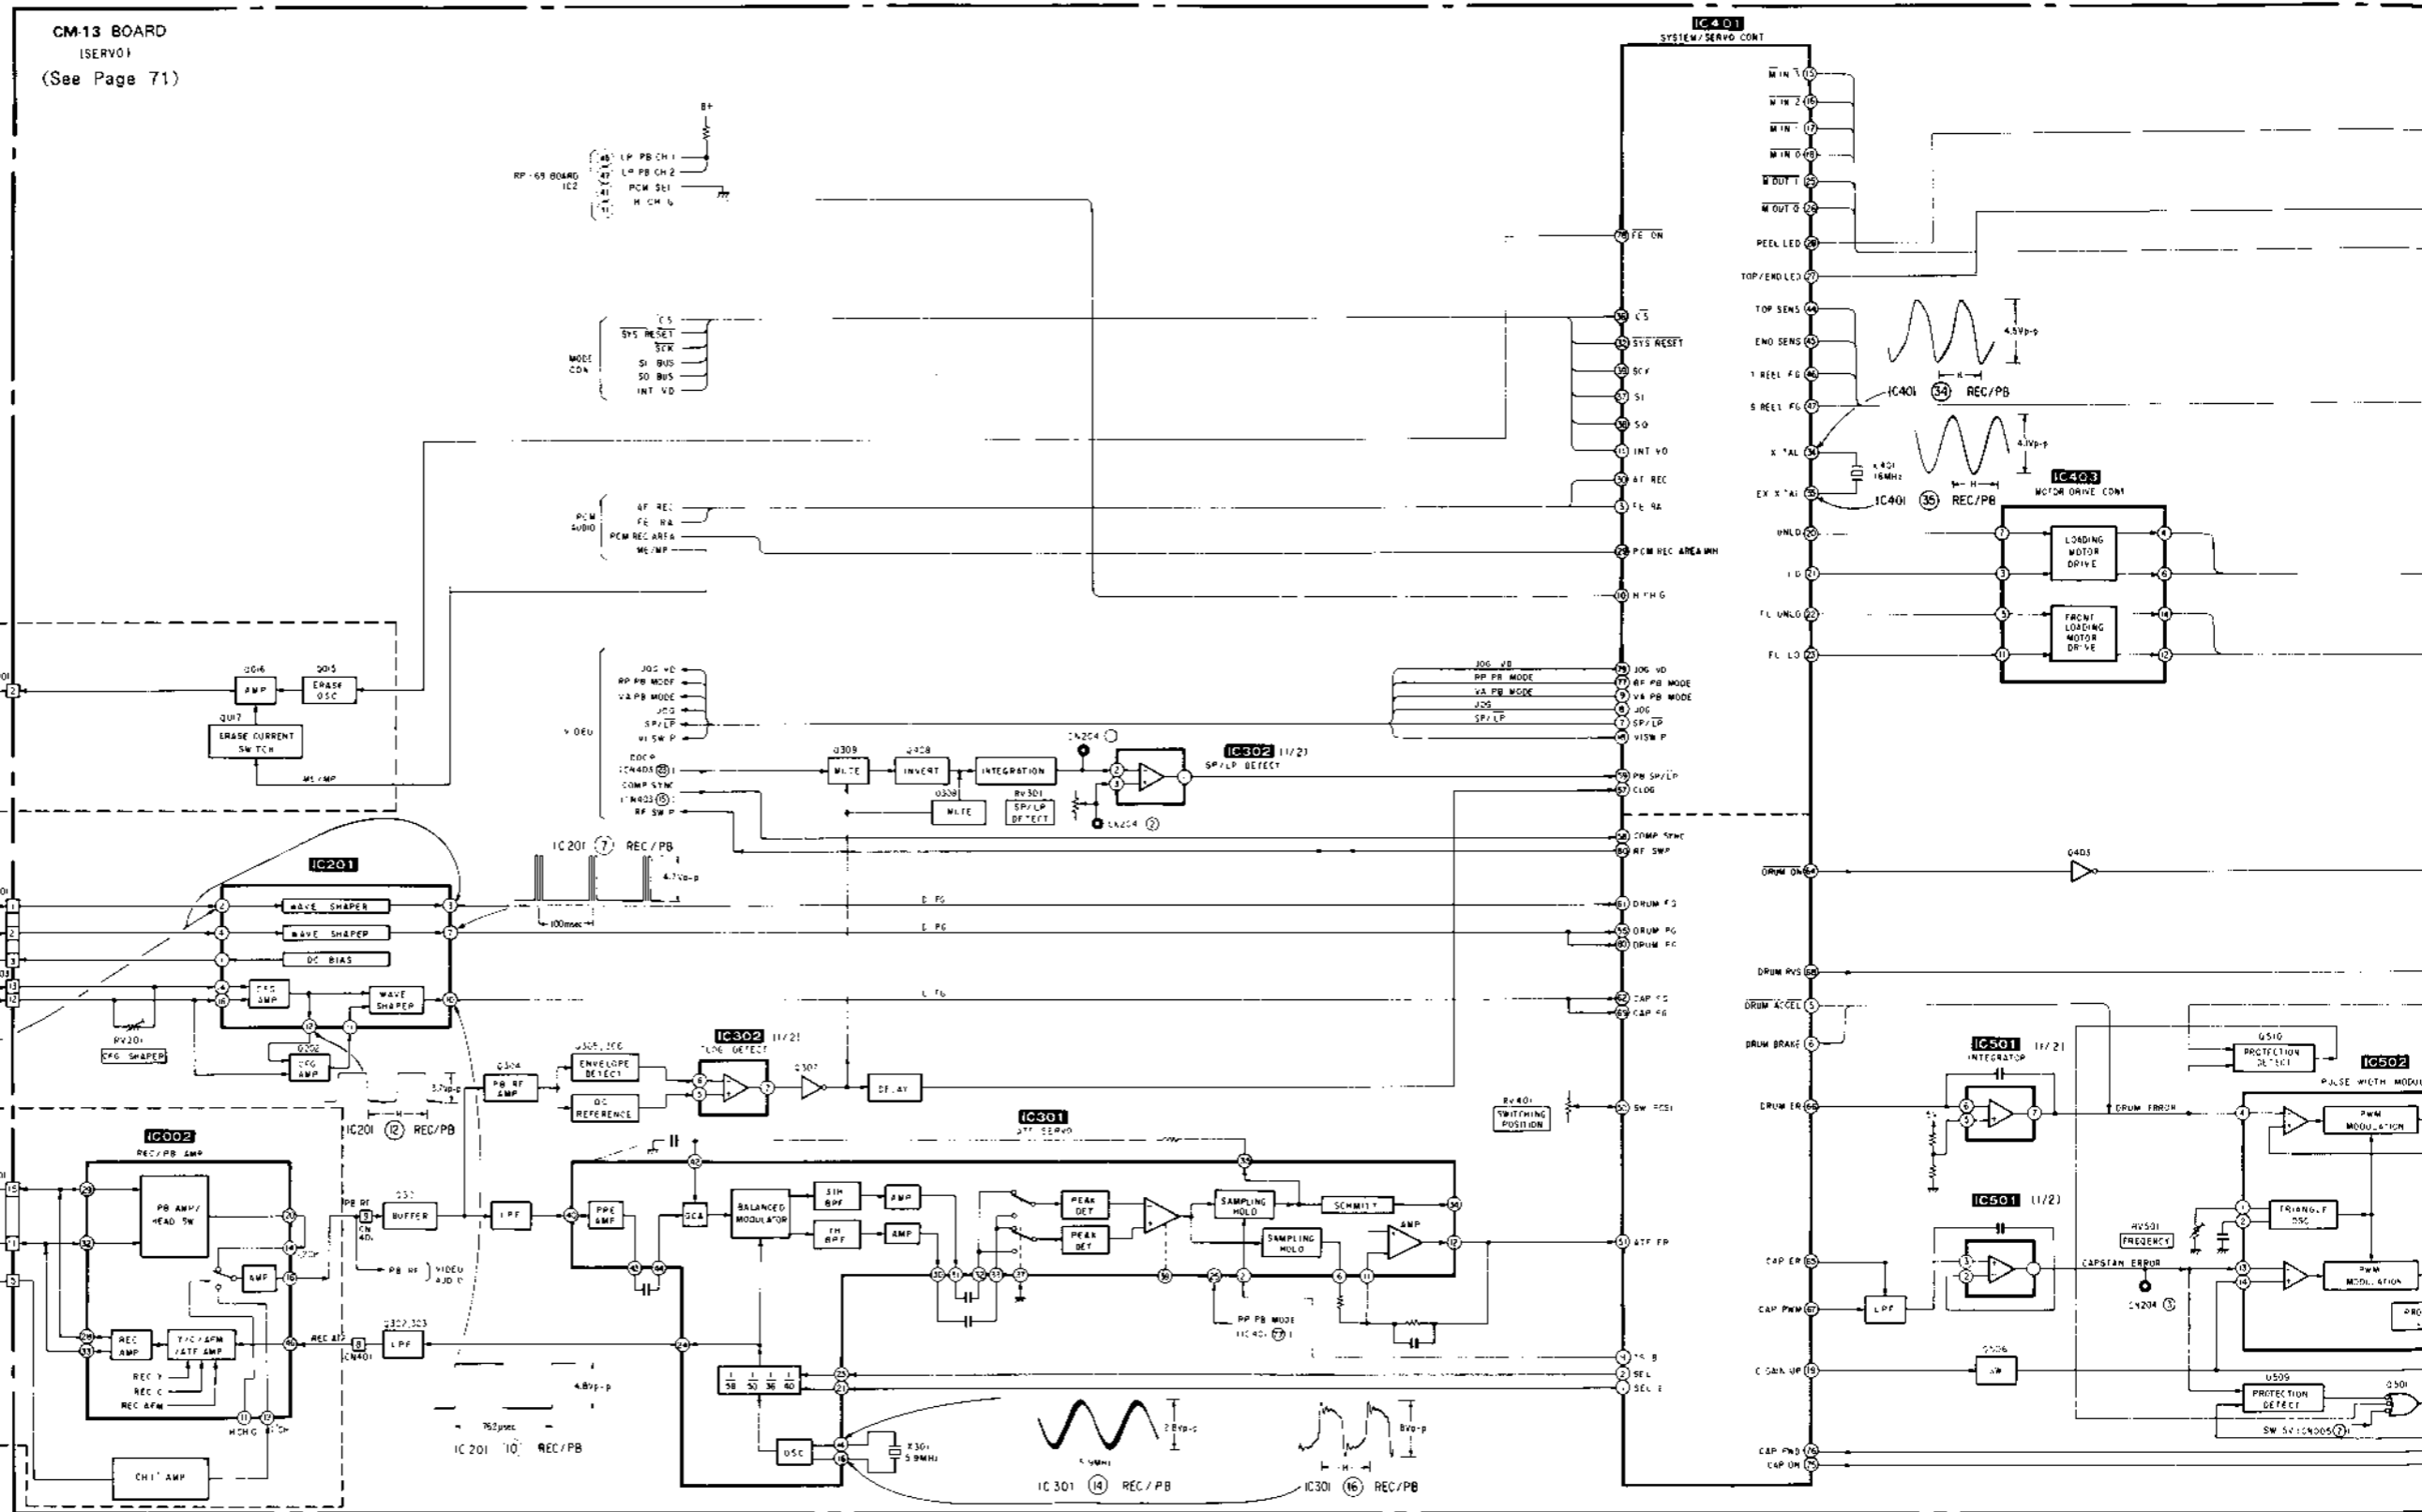

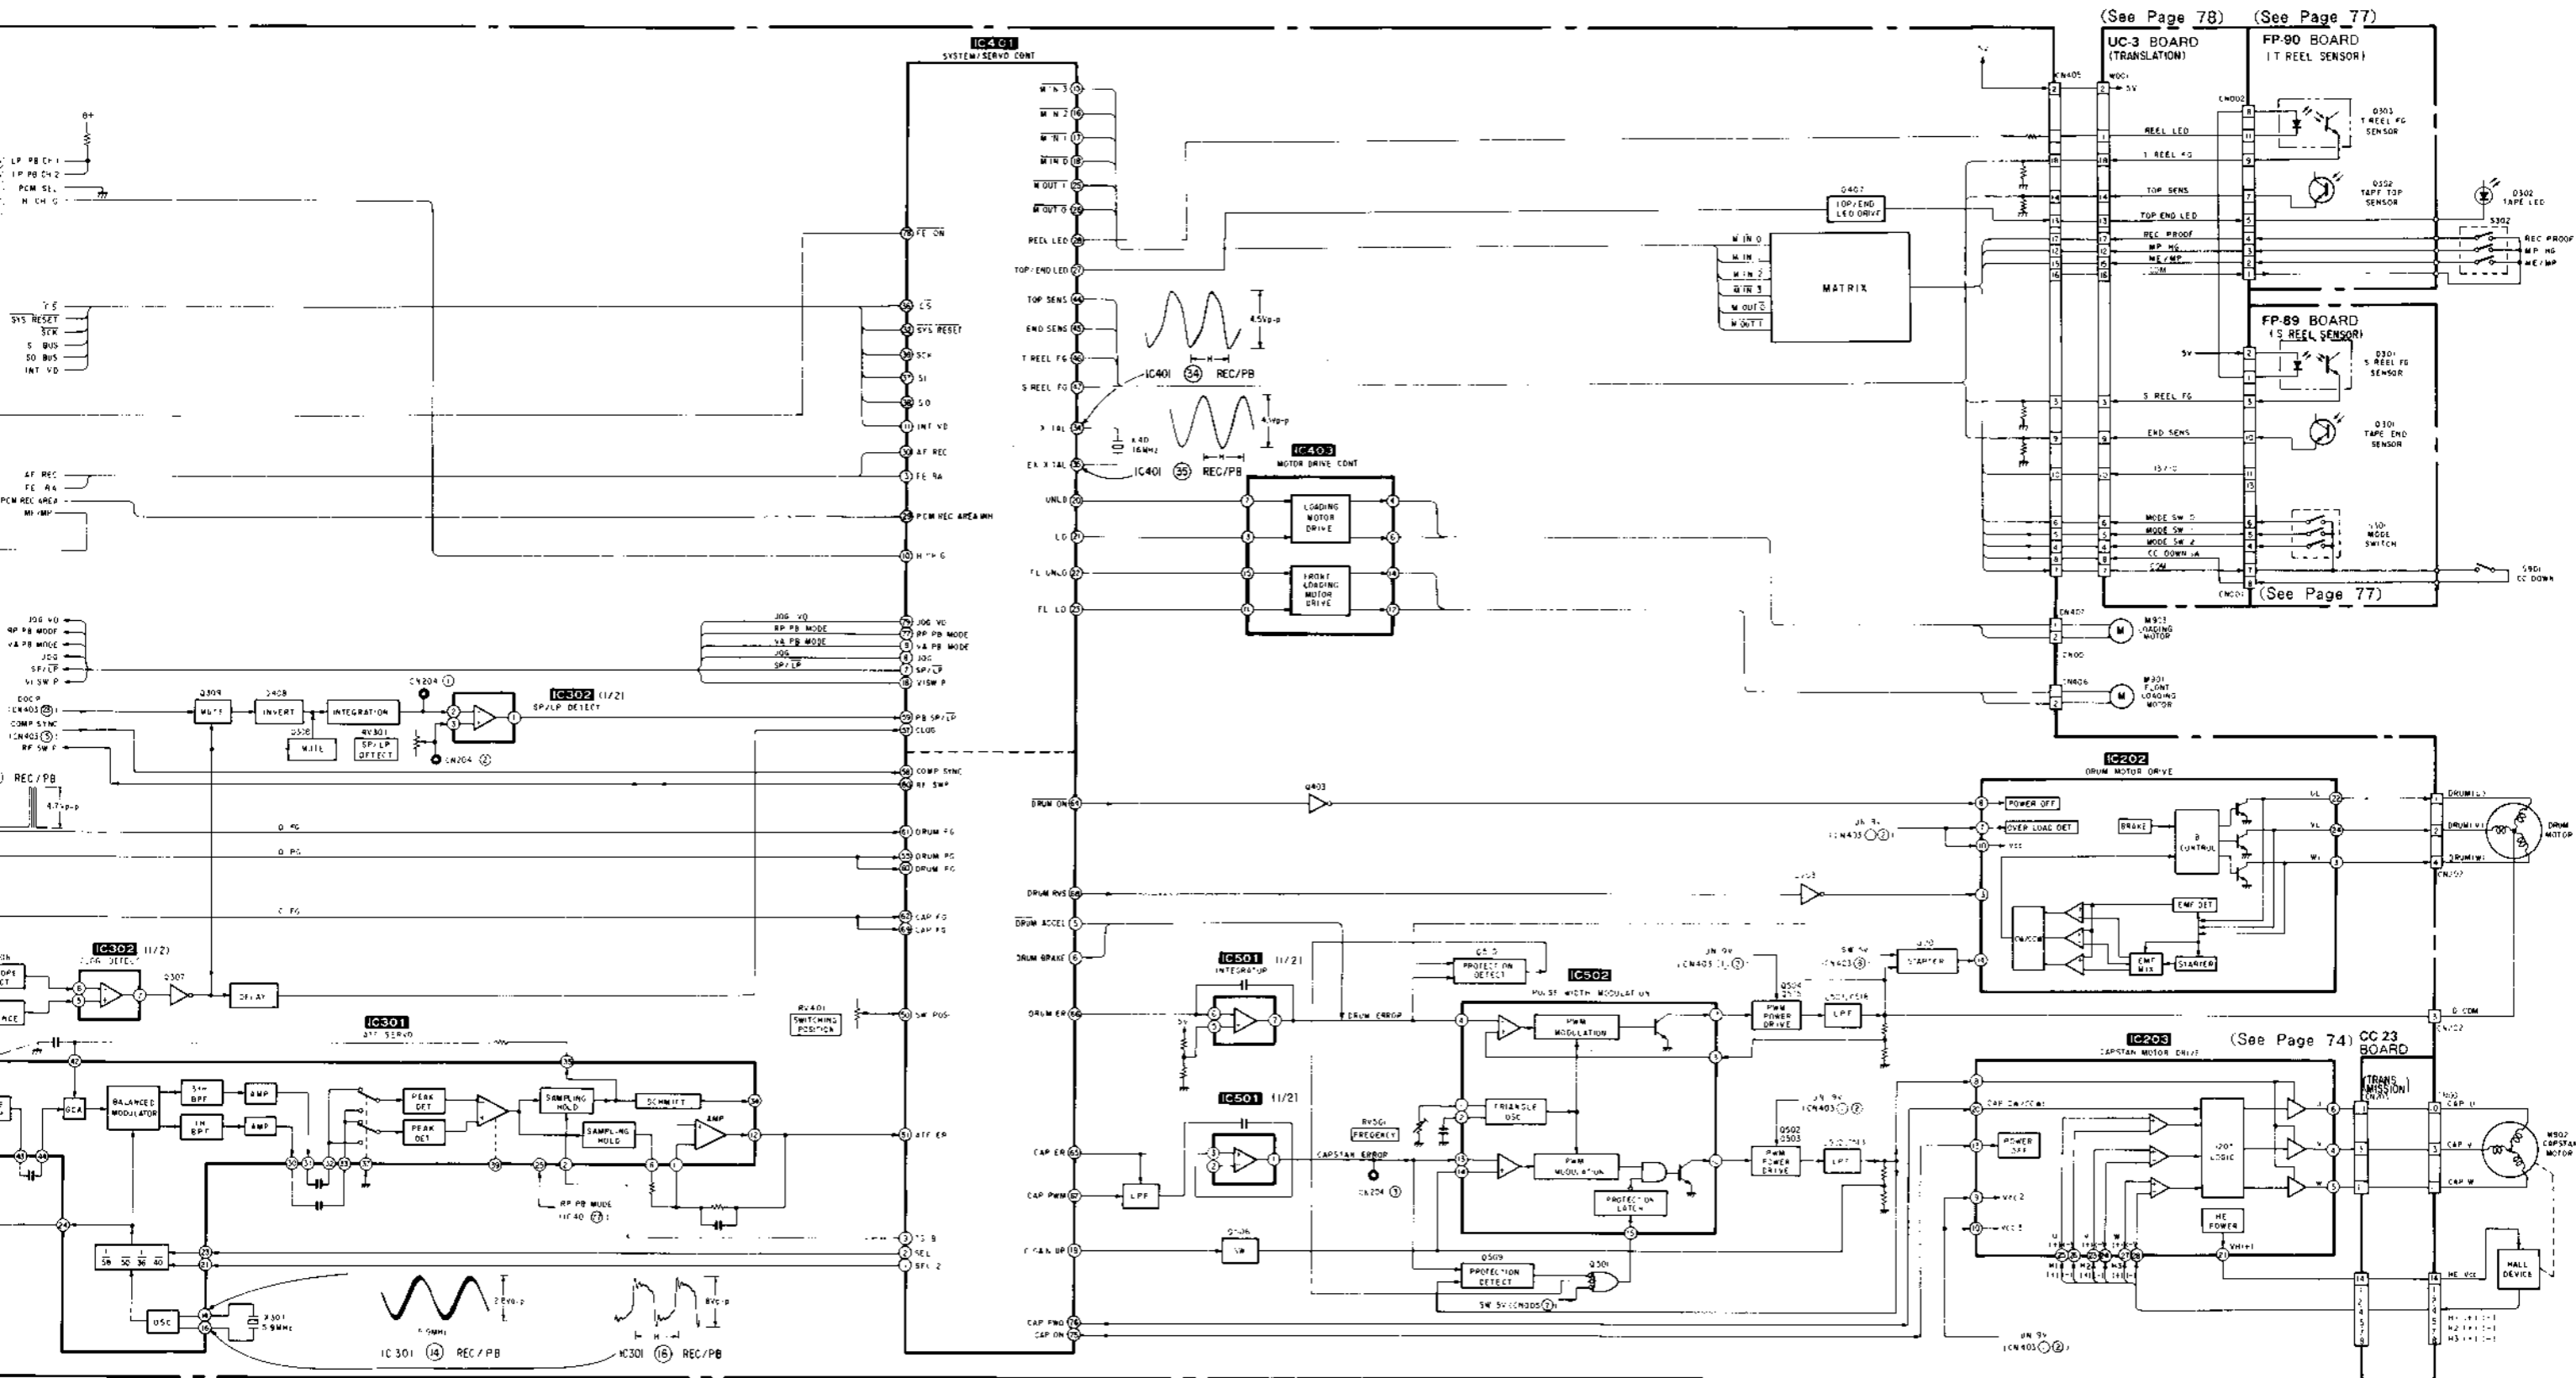

4-6. SYSTEM CONTROL – VIDEO, AUDIO BLOCK INTERFACE (CM-13 BOARD IC401)

SIGNAL	I/O	Pin No.	EJECTED	THREAD- ING	UN THREAD- ING	STOP	FF	REW	CUE	REVIEW	PB	PB- PAUSE	REC	REC- PAUSE	X2	SLOW
SEL 2	O	IC401 ① Pin	H	H	H	H	H	H	*3	*3	*2	H	*1	L	*17	*18
SEL 1	O	IC401 ② Pin	H	H	H	H	H	H	*3	*3	*2	H	*1	H	*17	*18
DRUM ON	O	IC401 ④ Pin	H	L	L	H	L	L	L	L	L	L	L	L	L	L
INT VD	O	IC401 ⑩ Pin	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4
SW POSI	I	IC401 ⑩ Pin	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5
ATF ERROR	I	IC401 ⑩ Pin	*6	*6	*6	*6	*7	*7	*7	*7	*7	*7	*6	*6	*7	*7
DRUM PG	I	IC401 ⑮, ⑯ Pin	L	*8	*8	L	*8	*8	*8	*8	*8	*8	*8	*8	*8	*8
DRUM FG	I	IC401 ⑰ Pin	H	*9	*9	H	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9
CAP FG	I	IC401 ⑲, ⑳ Pin	H/L	PULSE	PULSE	H/L	*10	*10	*10	*10	*10	H/L	*10	H/L	*10	H/L
CAP ERH	O	IC401 ⑳ Pin	*11	*11	*11	L	*11	*11	*11	*11	*11	L	*11	L	*11	*11
DRUM ERROR	O	IC401 ㉑ Pin	L	*12	*12	L	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12
CAP PWM	O	IC401 ㉒ Pin	L	*13	*13	L	*13	*13	*13	*13	*13	L	*13	L	*13	*13
DRUM RVS	O	IC401 ㉓ Pin	"L"	*14	L	L	L	L	L	L	L	L	L	L	L	L
CAP ON	O	IC401 ㉔ Pin	L	H	H	L	H	H	H	H	H	L	H	L	H	H/L
CAP FWD	O	IC401 ㉕ Pin	L	L	H	L	H	L	H	L	H	H	H	L	H	H/L
RF SWP	O	IC401 ㉖ Pin	*16	*16	*16	"H" or "L"	*16	*16	*16	*16	*16	*16	*16	*16	*16	*16

- *1. Refer to timing chart 1.
- *2. Refer to timing chart 2.
- *3. Refer to timing chart 3.
- *4. 1V period "H" pulse.
- *5. DC voltage set with RVI02 (Switching position adjustment).
- *6. Approx. 2.5Vdc.
- *7. ATF error voltage.
- *8. 2V period "H" pulse.
- *9. 1.4msec period pulse.

- *10. Pulses in proportion to frequency of the tape speed.
- *11. Pulse output for rising or falling edges of the capstan.
- *12. 6msec period PWM signal (tri-state) of "H", "L" and "HI-Z" (2.5Vdc).
- *13. 64 μsec period PWM signal.
- *14. Momentarily "H" when threading of full top tape.
- *16. 2V period duty 50% pulse.


4-7. SYSTEM CONTROL - SERVO PEIPHERAL CIRCUIT INTERFACE (CM-13 BOARD IC401)

SIGNAL	I/O	Pin No.	STOP	FF	REW	CUE	REVIEW	PB	PB - PAUSE	REC	REC - PAUSE	X2	SLOW
LP PB 1 CH	O	CN401 ⑥ Pin	H	H	H	H	H	H	H	L	H	H	H
LP PB 2 CH	O	CN401 ⑦ Pin	H	H	H	H	H	H	H	L	H	H	H
JOG	O	IC401 ⑧ Pin	L	H	H	H	H	L	H	L	L	H	H
SP/ \overline{LP}	O	IC401 ⑨ Pin	H/L	H/L	H/L	*1	*1	*1	*1	*2	*2	*1	*1
VA PB MODE	O	IC401 ⑩ Pin	L	L	L	H	H	H	H	L	L	H	H
SYSCON SO (SI)	O	IC401 ⑪ Pin	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9
SYSCON SCK (SCK)	I	IC401 ⑫ Pin	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10
CLOG	I	IC401 ⑬ Pin	H	*5	*5	*5	*5	*5	H	H	H	H	H
COMP SYNC	I	IC401 ⑭ Pin	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6
PB SP/ \overline{LP}	O	IC401 ⑮ Pin	L	*7	*7	*7	*7	L	L	L	L	L	L
RP PB MODE	O	IC401 ⑯ Pin	L	L	L	H	H	H	H	L	L	H	H
\overline{FF} ON	O	IC401 ⑰ Pin	H	H	H	H	H	H	H	L	H	H	H
JOG VD	O	IC401 ⑱ Pin	L	L	L	*3	*3	L	*3	L	L	*3	*3
RF SWP*1	O	IC401 ⑲ Pin	1.8Vdc	*11	*11	*11	*11	*11	*11	*11	*11	*11	*11


- *1. According to recorded mode of playback tape.
(SP... "H", LP... "L")
- *2. According to SP/LP selector (S602) setting.
(SP... "H", LP... "L")
- *3. 1V period "H" pulse.
- *5. Non-signal "H" normal "L"
- *6. Positive compound synchronizing signal.
- *7. SP mode recording tape "H"
LP mode recording tape "L"

- *9. 1V period "L" pulse train.
- *10. 1V period "L" pulse train.
- *11. 2V period duty 50% pulse.


TIMING CHART 1 (REC)

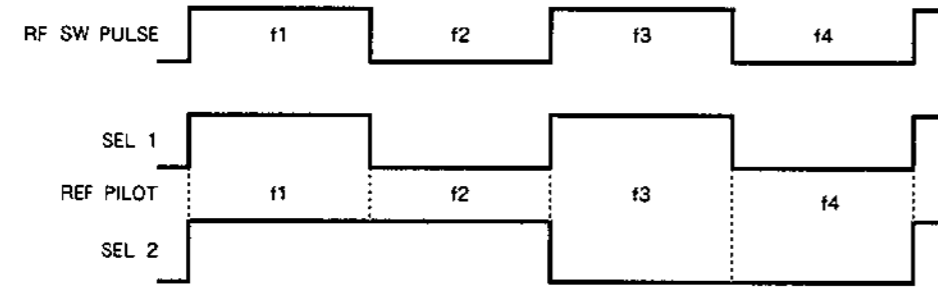


TIME CHART (x2)

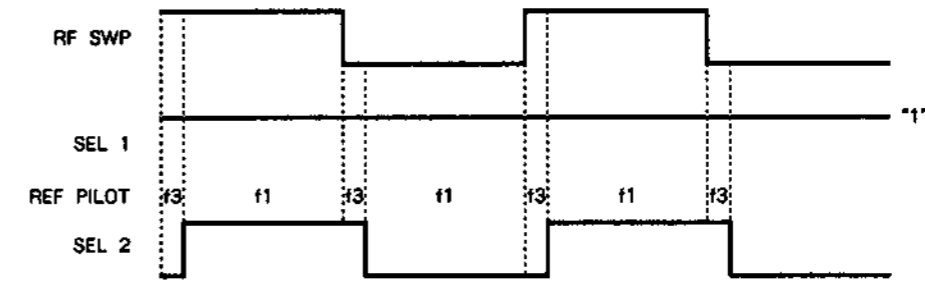

TIMING CHART 2 (PB)

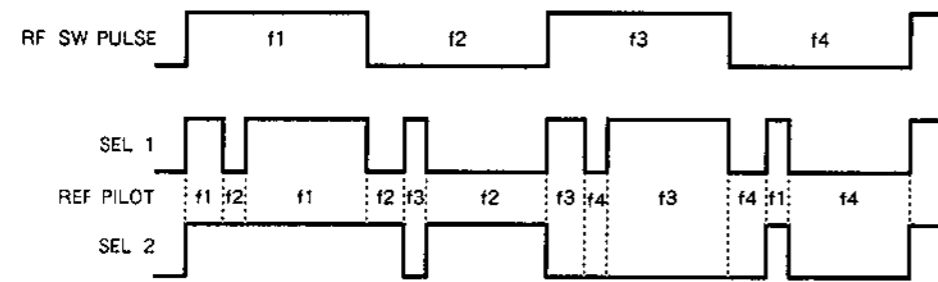


TIME CHART (SLOW)

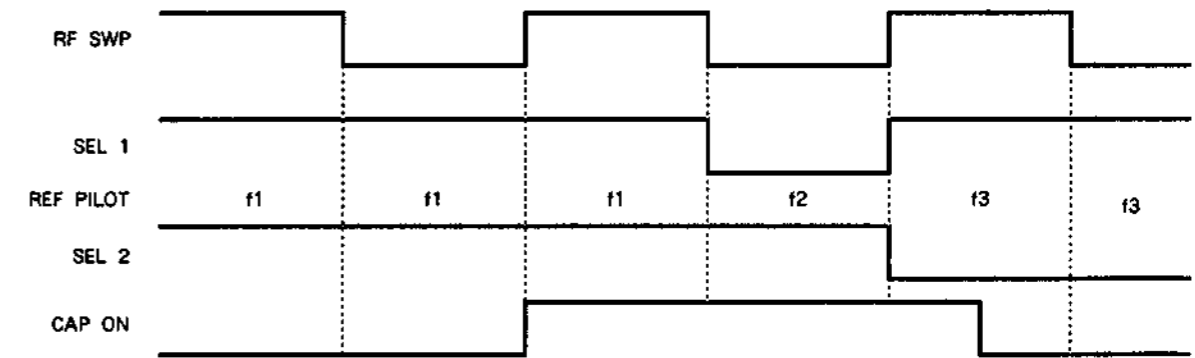

when f1 still from step.
when from f3 f1⇒f3 f2⇒f4 f3⇒f1

TIMING CHART 3 (CUE/REVIEW)

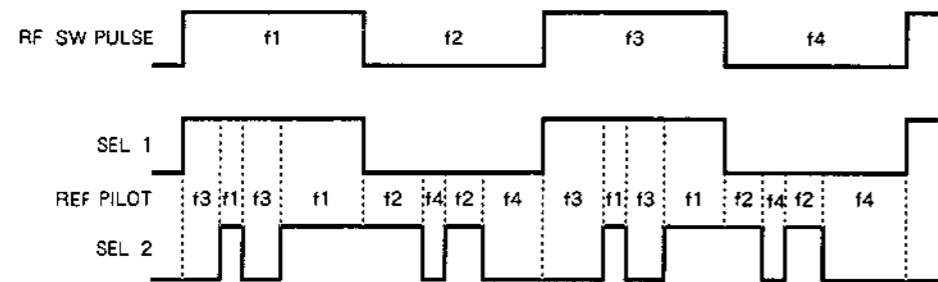

4-8. SYSTEM CONTROL—SYSTEM CONTROL PERIPHERAL CIRCUIT INTERFACE
(CM-13 BOARD IC401)


SIGNAL	I/O	Pin No.	INPUT OUTPUT LEVEL
SP/LP	O	IC401 12 Pin	"H" in SP recording mode or playback of recorded tape in SP mode
RESET	I	IC401 13 Pin	Normally : "H" ("H" when installing power OFF to ON)
M IN 3	I	IC401 14 Pin	No key matrix input signal : "H" (Other : "L")
M IN 2	I	IC401 15 Pin	No key matrix input signal : "H" (Other : "L")
M IN 1	I	IC401 16 Pin	No key matrix input signal : "H" (Other : "L")
M IN 0	I	IC401 18 Pin	No key matrix input signal : "H" (Other : "L")
T/E LED	O	IC401 27 Pin	PB/REC/PB • PAUSE/REC • PAUSE : 100msec period "H" pulse, STOP/CUE/REVIEW : 10msec period "H" pulse. FF/REW : 2msec period "H" pulse, EJECT or CASSETTE IN detecting : 22msec period "H" pulse
M OUT 2	O	IC401 24 Pin	20msec period "H" pulse
M OUT 1	O	IC401 25 Pin	20msec period "L" pulse
M OUT 0	O	IC401 26 Pin	20msec period "L" pulse
MECHA CS	I	IC401 31 Pin	1V period "L" pulse
SYSCON SI	I	IC401 37 Pin	1V period "H" pulse train
SYSCON SO	O	IC401 38 Pin	1V period "L" pulse train

SIGNAL	I/O	Pin No.	INPUT OUTPUT LEVEL
SYSCON SCK	I	IC401 39 Pin	1V period "L" pulse train
CLOG	I	IC401 57 Pin	Normal playback : "L" ("H" when PB RF signal is not reproduced due to head clog, etc.)
PB SP/LP	I	IC401 59 Pin	Recording speed mode detection signal in FF, REW, CUE or REVIEW ("H" in SP mode, "L" in LP mode)
UNLD	O	IC401 60 Pin	Normally : "L" ("H" in Unthreading, pulse is output in Mechanical mode transition)
LD	O	IC401 21 Pin	Normally : "L" ("H" in Threading, "H" pulse is output in Mechanical mode transition)
FL UNLD	O	IC401 23 Pin	Normally : "L" ("H" in Front roading)
LD	O	IC401 22 Pin	Normally : "L" ("H" in Front unroading)
FERA	O	IC401 33 Pin	Normally : "L" ("H" in After recording mask eria)
VI SWP	O	IC401 44 Pin	Normally slow shared SWP, "H" in only STILL
DRUM ACCELL	O	IC401 55 Pin	Normally : "H" (An instant "L" in slow)
DRUM BRAKE	O	IC401 56 Pin	Normally : "L" (An instant "H" in LP slow)
TS B	O	IC401 58 Pin	ATF AGC pulse
H CHG	O	IC401 10 Pin	Normally : "L", when slow, STILL is unphase
C GAIN UP	O	IC401 19 Pin	Normally : "L" ("H" in FF/REW)
REEL LED	O	IC401 28 Pin	Reel led flicker pulse

4-9. SYSTEM CONTROL - MECHANISM BLOCK INTERFACE (CM-13 BOARD IC401, CN405)

SIGNAL	I/O	Pin No.	INPUT OUTPUT LEVEL																				
S REEL FG	I	IC401 ④ Pin	Pulse (5.0Vp-p) that is generated by S-reel rotation. It is approx. 1sec period in REC/PB (SP) mode.																				
MODE SW 2	I	CN405 ④ Pin	Pins are connected to mode switch for mechanical position detection. <table border="1" style="margin-left: 20px;"> <thead> <tr> <th></th> <th>EJECTED</th> <th>THREADING UNTHREADING</th> <th>STOP</th> <th>REC/PB/FF/ REW/CUE/ REVIEW/PAUSE</th> </tr> </thead> <tbody> <tr> <td>MODE SW 2 (④-⑦)</td> <td>○</td> <td>×</td> <td>×</td> <td>○</td> </tr> <tr> <td>MODE SW 1 (⑤-⑦)</td> <td>○</td> <td>○</td> <td>○</td> <td>×</td> </tr> <tr> <td>MODE SW 0 (⑥-⑦)</td> <td>×</td> <td>×</td> <td>○</td> <td>○</td> </tr> </tbody> </table>		EJECTED	THREADING UNTHREADING	STOP	REC/PB/FF/ REW/CUE/ REVIEW/PAUSE	MODE SW 2 (④-⑦)	○	×	×	○	MODE SW 1 (⑤-⑦)	○	○	○	×	MODE SW 0 (⑥-⑦)	×	×	○	○
	EJECTED	THREADING UNTHREADING		STOP	REC/PB/FF/ REW/CUE/ REVIEW/PAUSE																		
MODE SW 2 (④-⑦)	○	×		×	○																		
MODE SW 1 (⑤-⑦)	○	○		○	×																		
MODE SW 0 (⑥-⑦)	×	×	○	○																			
MODE SW 1	I	CN405 ⑤ Pin																					
MODE SW 0	I	CN405 ⑥ Pin																					
M OUT 0 (COM)	O	CN405 ⑦ Pin	x...Open ○...Short																				
CC DOWN	I	CN405 ⑧ Pin	It is connected to cassette compartment down detection (CC DOWN) switch. When cassette compartment comes down, Pins ⑧ and ⑦ are short-circuited.																				
M OUT 0 (COM)	O	CN405 ⑦ Pin	When cassette compartment comes up, connection between Pins ⑧ and ⑦ open.																				
END SENS	I	CN405 ⑨ Pin	Normally : "L" ("H" pulse is output in tape end or cassette unloaded)																				
13/10	I	CN405 ⑩ Pin	Not used																				
MP HG	I	CN405 ⑪ Pin	"H" pulse (20msec period) is output when normal MP tape is used.																				
TOP END LED	I	CN405 ⑫ Pin	"L" pulse (approx. 1Vp-p) (pulse period is changed from 12 to 170msec according to operation mode.)																				
TOP SENS	O	CN405 ⑬ Pin	Normally : "L" ("H" pulse is output in tape top or cassette unloaded)																				
ME/MP	I	CN405 ⑭ Pin	"L" in MP tape ("H" pulse (20msec period) in cassette unloaded)																				
REC PROOF	I	CN405 ⑮ Pin	"L" when recording possible cassette is loaded "H" pulse (20msec period) is output, when recording inhibiting cassette is loaded.																				
T REEL FG	I	CN405 ⑯ Pin	Pulse (5.0Vp-p) that is generated by T-reel rotation, in REC/PB (SP) mode, it is approx. 1sec period.																				

4-10. DISPLAY CONTROL BLOCK DIAGRAM

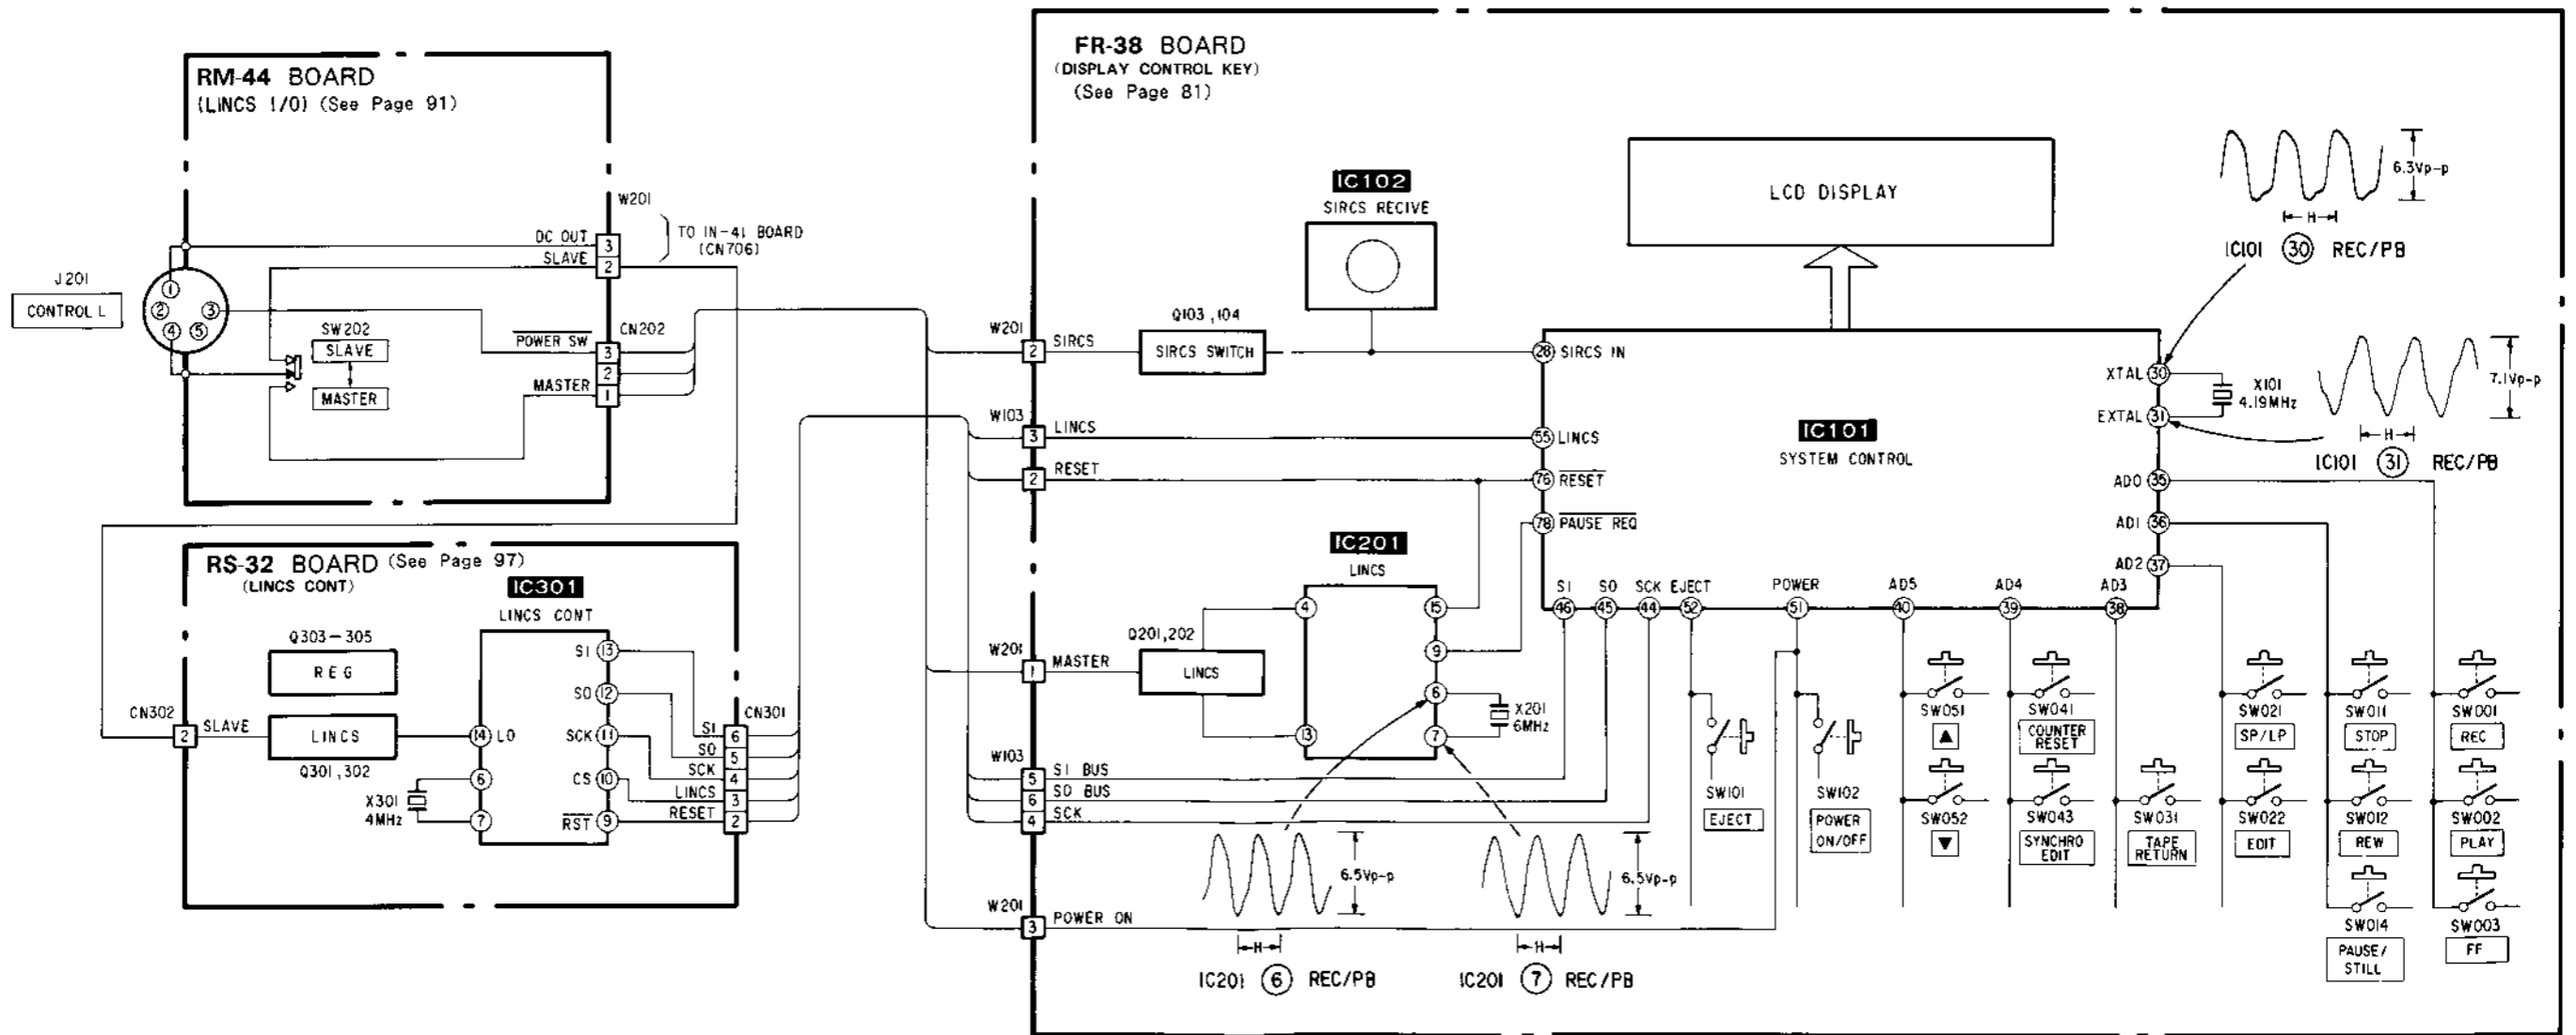

4-11. PIN ASSIGNMENT CXP-5078 (IC101) SYSTEM CONTROL/MODE CONTROL BLOCK INTERFACE (FR BOARD IC101)


Pin. No.	I/O	SIGNAL/INPUT OUTPUT LEVEL	Pin. No.	I/O	SIGNAL/INPUT OUTPUT LEVEL	Pin. No.	I/O	SIGNAL/INPUT OUTPUT LEVEL
1	O	AGC MUTE	28	I	SIRCS IN	55	O	LINCS CS
2	O	_____	29	I	INT VD	56	O	MECHA CS
3	O	_____	30	O	XTAL	57	O	VIDEO CS
4	O	LCD SP/LP	31	I	EXTAL	58	O	ME·MP
5	O	LCD H02	32	I	RST	59	O	_____
6	O	LCD H01	33		(int. VDD)	60	O	_____
7	O	LCD H00	34		VDD	61	I	("L")
8	O	LCD M12	35	I	AD 0	62	I	("L")
9	O	LCD M11	36	I	AD 1	63	O	PB LED
10	O	LCD M10	37	I	AD 2	64	O	POWER OFF
11	O	LCD M02	38	I	AD 3	65	O	REC LED
12	O	LCD M01	39	I	AD 4	66	O	PAUSE LED
13	O	LCD M00	40	I	AD 5	67	O	_____
14	O	LCD S12	41	I	("H")	68	O	_____
15	O	LCD S11	42	I	("H")	69	O	_____
16	O	LCD S10	43		N. C.	70	O	_____
17	O	LCD S02	44	O	SCK	71		GND
18	O	LCD S01	45	O	SO BUS	72	O	_____
19	O	LCD S00	46	I	SI BUS	73		(int. VDD)
20	O	_____	47	I	("L")	74	I	("H")
21	O	LCD COM 2	48	O	EDIT	75		VREF
22	O	LCD COM 1	49	I	("H")	76	O	RESET
23	O	LCD COM 0	50	I	("L")	77	O	_____
24	I	LCD BIAS 1	51	I	POWER SW	78	O	PAUSE REQ
25	I	LCD BIAS 2	52	I	EJECT SW	79	O	SYNCHRO EDIT LED
26	I	LCD BIAS 3	53	I	FL+CC SW	80	O	AUDIO MUTE
27	O	_____	54	I	("H")			

MODE CONTROL (IC101)

SIGNAL	I/O	Pin. No.	INPUT OUTPUT LEVEL																																										
RST	I	IC101 Pin	Mode control reset signal (AC power ON/OFF)																																										
RESET	O	IC101 Pin	Reset signal output (Set power ON/OFF) : Mechanism control, LINCS MASTER microcomputer (FR-38 board) LINCS SLAVE microcomputer (RS-32 board)																																										
INT VD	I	IC101 Pin	V sync timing signal : Input mechanism control (CM-13 board)																																										
SCK	O	IC101 Pin	Data input output timing (SI, SO, BUS) : Mechanism control (CM-13 board), LINCS SLAVE microcomputer (RS-32 board), VIDEO IC (VI-52 board)																																										
SO BUS	O	IC101 Pin	Serial data output : Mechanism control (CM-13 board), LINCS SLAVE microcomputer (RS-32 board), VIDEO IC (VI-52 board)																																										
SI BUS	I	IC101 Pin	Serial data output : Mechanism control (CM-13 board), LINCS SLAVE microcomputer (RS-32 board)																																										
MECHA CS	O	IC101 Pin	Mechanism control chip select (CM-13 board)																																										
LINCS CS	O	IC101 Pin	LINCS SLAVE microcomputer chip select (RS-32 board)																																										
VIDEO CS	O	IC101 Pin	VIDEO IC chip select (VI-52 board)																																										
PAUSE REQ	O	IC101 Pin	LINCS MASTER microcomputer control (FR-38 board) An instant "L" in SYNCHRO EDIT mode ON/OFF.																																										
SIRCS IN	I	IC101 Pin	Input SIRCS signal, CONTROL S signal																																										
FL+CC SW	I	IC101 Pin	Power OFF (Setting the cassette-tape)																																										
POWER SW	I	IC101 Pin	Input button (Set power ON/OFF)																																										
EDIT SW	I	IC101 Pin	Input button (EDIT ON/OFF)																																										
FUNCTION KEY (A/D Converter)																																													
			<table border="1"> <thead> <tr> <th></th> <th>1 (1/5 Vcc)</th> <th>2 (2/5 Vcc)</th> <th>3 (3/5 Vcc)</th> <th>4 (4/5 Vcc)</th> <th>5 (Vcc)</th> </tr> </thead> <tbody> <tr> <td>AD0</td> <td>REC</td> <td>PB</td> <td>FF</td> <td>-</td> <td>-</td> </tr> <tr> <td>AD1</td> <td>STOP</td> <td>REW</td> <td>-</td> <td>PAUSE</td> <td>-</td> </tr> <tr> <td>AD2</td> <td>SP/LP</td> <td>EDIT</td> <td>-</td> <td>-</td> <td>-</td> </tr> <tr> <td>AD3</td> <td>TAPE RETURN</td> <td>-</td> <td>-</td> <td>TEST 2</td> <td>-</td> </tr> <tr> <td>AD4</td> <td>COUNTER RESET</td> <td>-</td> <td>SYNCHRO EDIT</td> <td>TEST 1</td> <td>-</td> </tr> <tr> <td>AD5</td> <td>▽</td> <td>△</td> <td>-</td> <td>-</td> <td>-</td> </tr> </tbody> </table>		1 (1/5 Vcc)	2 (2/5 Vcc)	3 (3/5 Vcc)	4 (4/5 Vcc)	5 (Vcc)	AD0	REC	PB	FF	-	-	AD1	STOP	REW	-	PAUSE	-	AD2	SP/LP	EDIT	-	-	-	AD3	TAPE RETURN	-	-	TEST 2	-	AD4	COUNTER RESET	-	SYNCHRO EDIT	TEST 1	-	AD5	▽	△	-	-	-
	1 (1/5 Vcc)	2 (2/5 Vcc)	3 (3/5 Vcc)	4 (4/5 Vcc)	5 (Vcc)																																								
AD0	REC	PB	FF	-	-																																								
AD1	STOP	REW	-	PAUSE	-																																								
AD2	SP/LP	EDIT	-	-	-																																								
AD3	TAPE RETURN	-	-	TEST 2	-																																								
AD4	COUNTER RESET	-	SYNCHRO EDIT	TEST 1	-																																								
AD5	▽	△	-	-	-																																								

SIGNAL	I/O	Pin. No.	INPUT OUTPUT LEVEL
AUDIO MUTE	O	IC101 ④ Pin	"H" in mute (Audio signal mute)
AGC MUTE	O	IC101 ① Pin	An instant "H" (mute) PB to E-E mode
EDIT	O	IC101 ④ Pin	EDIT mode "H"
ME \overline{MP}	O	IC101 ⑤ Pin	MP tape "L"
\overline{PB} LED	O	IC101 ⑥ Pin	PB mode "L"
POWER OFF	O	IC101 ④ Pin	"L" in power control set power ON, "H" in set power OFF.
\overline{REC} LED	O	IC101 ⑤ Pin	REC mode "L"
\overline{PAUSE} LED	O	IC101 ⑥ Pin	STILL, REC PAUSE mode "L"
$\overline{SYNCHRO EDIT}$ LED	O	IC101 ⑦ Pin	SYNCHRO EDIT mode "L"
LCD BIAS 1	I	IC101 ④ Pin	2/3 Vcc
LCD BIAS 2	I	IC101 ⑤ Pin	1/3 Vcc
LCD BIAS 3	I	IC101 ⑥ Pin	GND

SIGNAL	I/O	Pin. No.	INPUT OUTPUT LEVEL
LCD SP/LP	O	IC101 ④ Pin	
LCD H02	O	IC101 ⑤ Pin	
LCD H01	O	IC101 ⑥ Pin	
LCD H00	O	IC101 ⑦ Pin	
LCD M12	O	IC101 ⑧ Pin	
LCD M11	O	IC101 ⑨ Pin	
LCD M10	O	IC101 ⑩ Pin	
LCD M02	O	IC101 ⑪ Pin	
LCD M01	O	IC101 ⑫ Pin	
LCD M00	O	IC101 ⑬ Pin	
LCD S12	O	IC101 ⑭ Pin	
LCD S11	O	IC101 ⑮ Pin	
LCD S10	O	IC101 ⑯ Pin	
LCD S02	O	IC101 ⑰ Pin	
LCD S01	O	IC101 ⑱ Pin	
LCD S00	O	IC101 ⑲ Pin	
LCD COM 2	O	IC101 ⑳ Pin	
LCD COM 1	O	IC101 ㉑ Pin	
LCD COM 0	O	IC101 ㉒ Pin	

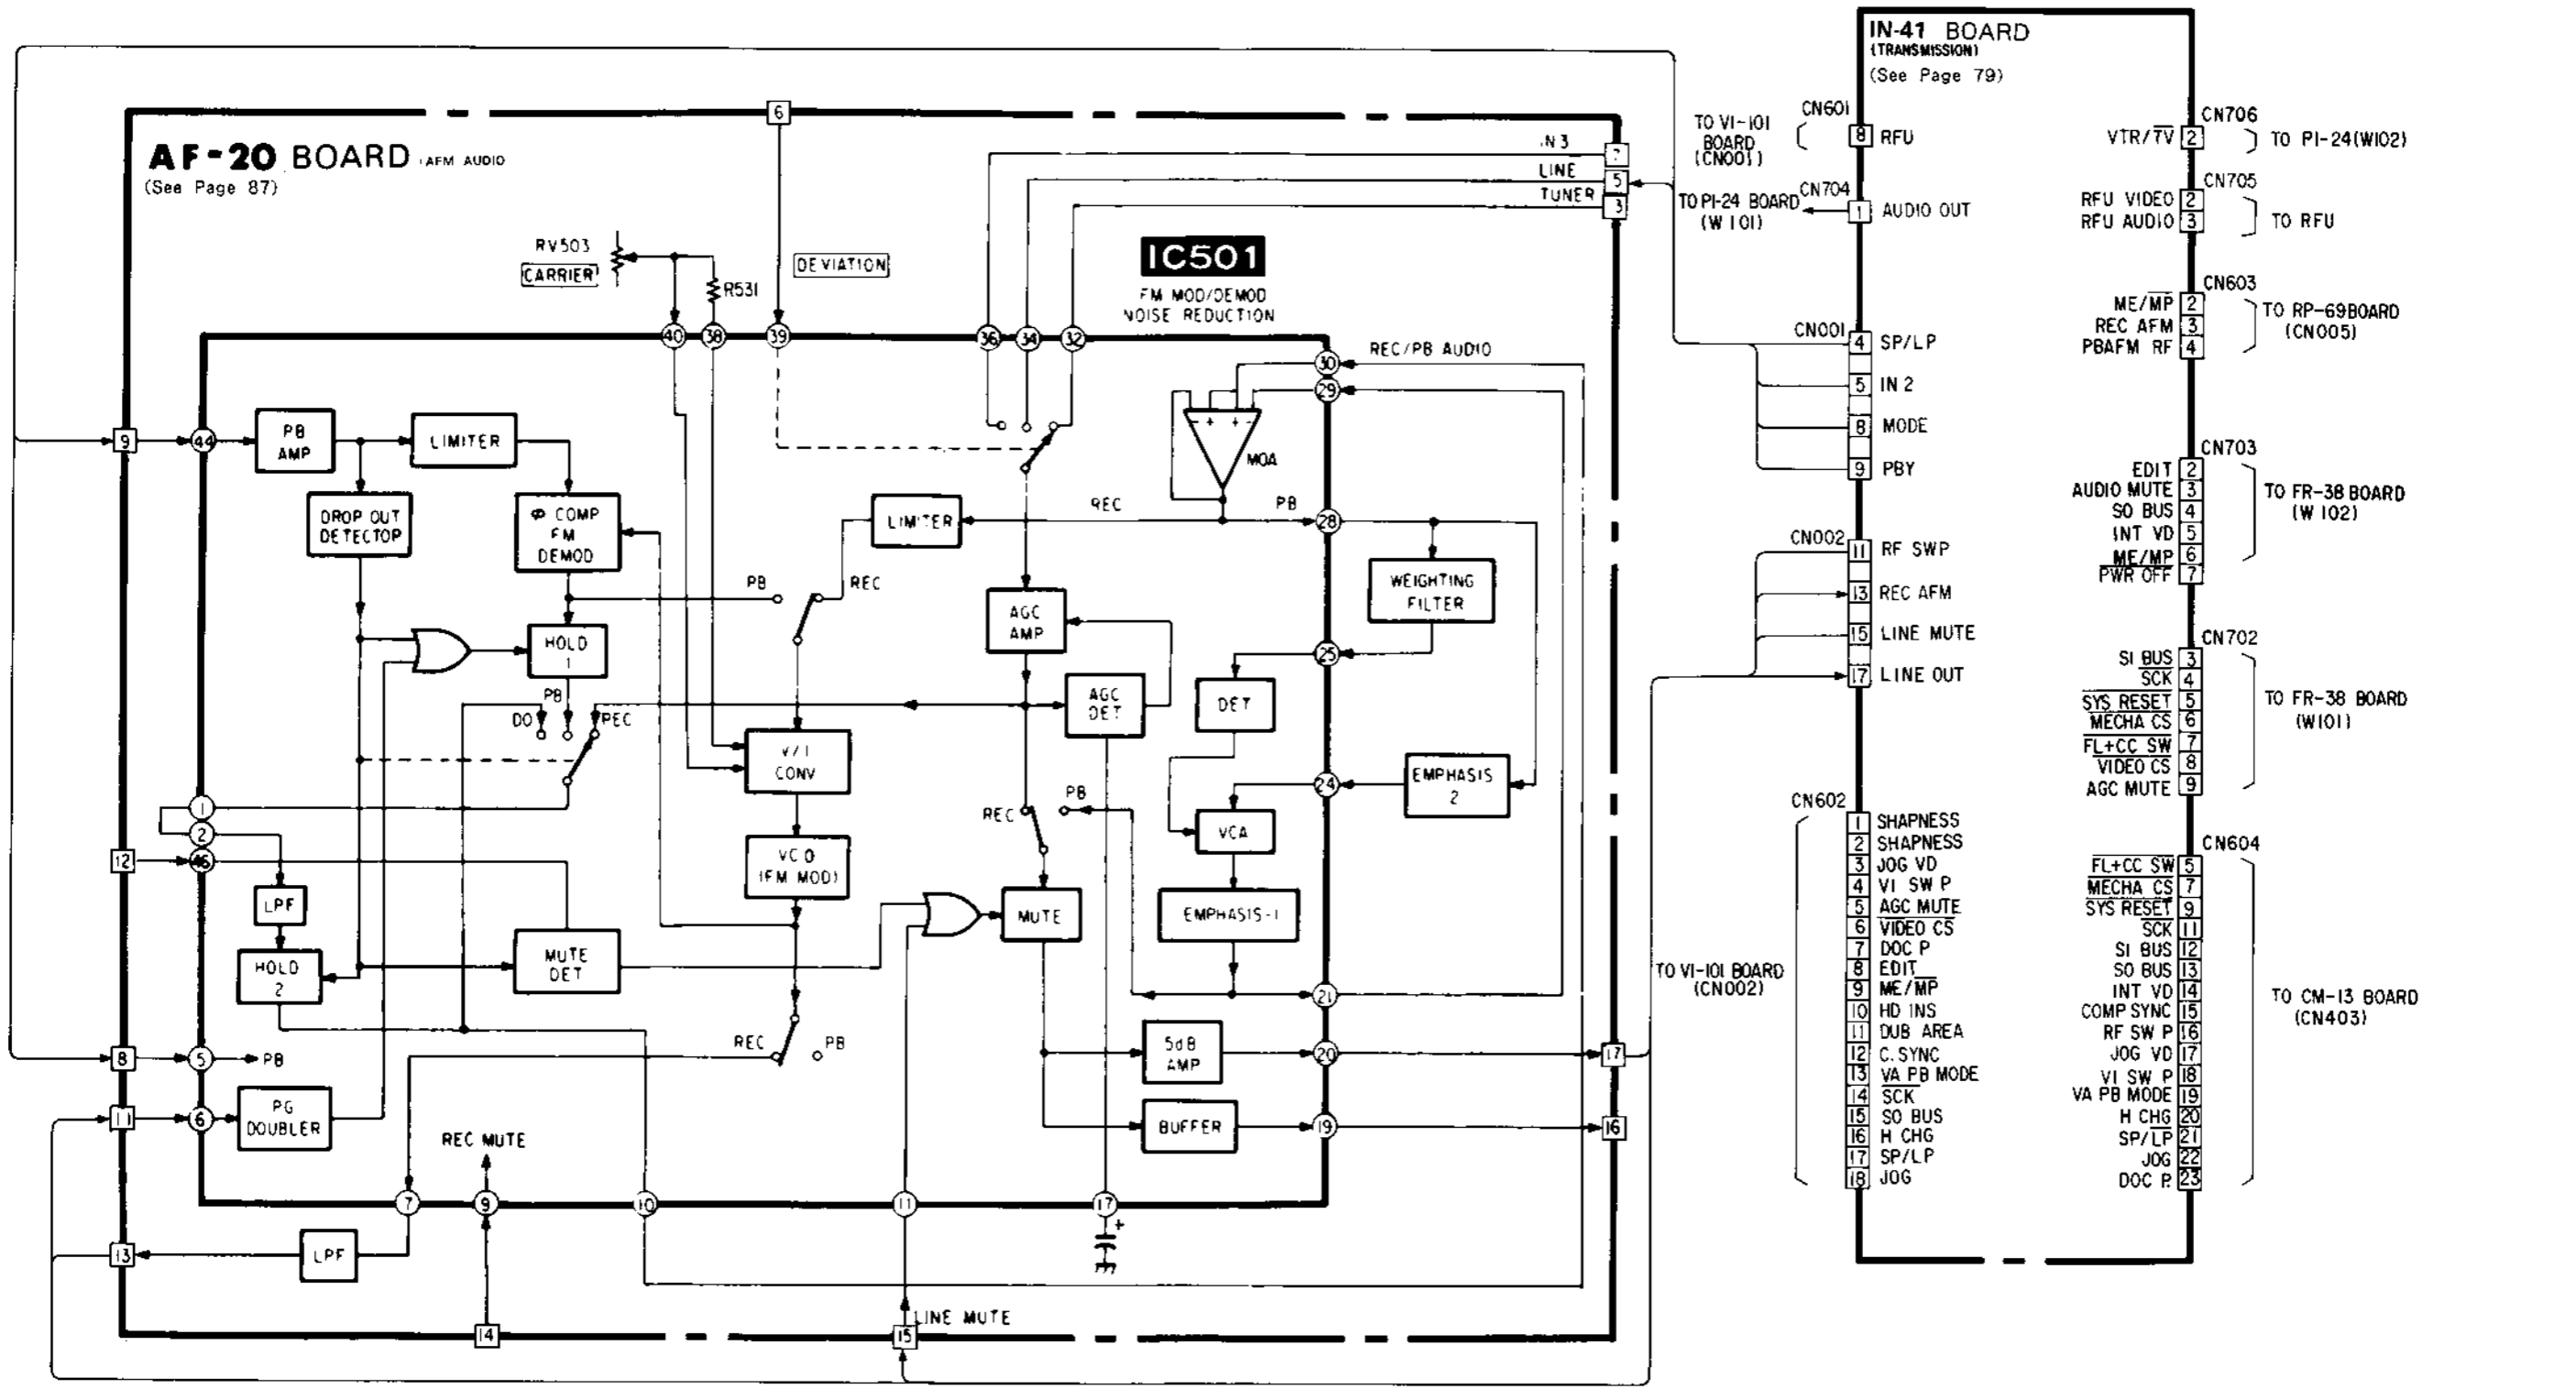

SECTION 5
PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

5-1. FRAME SCHEMATIC DIAGRAM

TO PI-24(W102)


TO RFU

TO RP-69BOARD
(CN005)

TO FR-38 BOARD
(W102)

TO FR-38 BOARD
(W101)

TO CM-13 BOARD
(CN403)

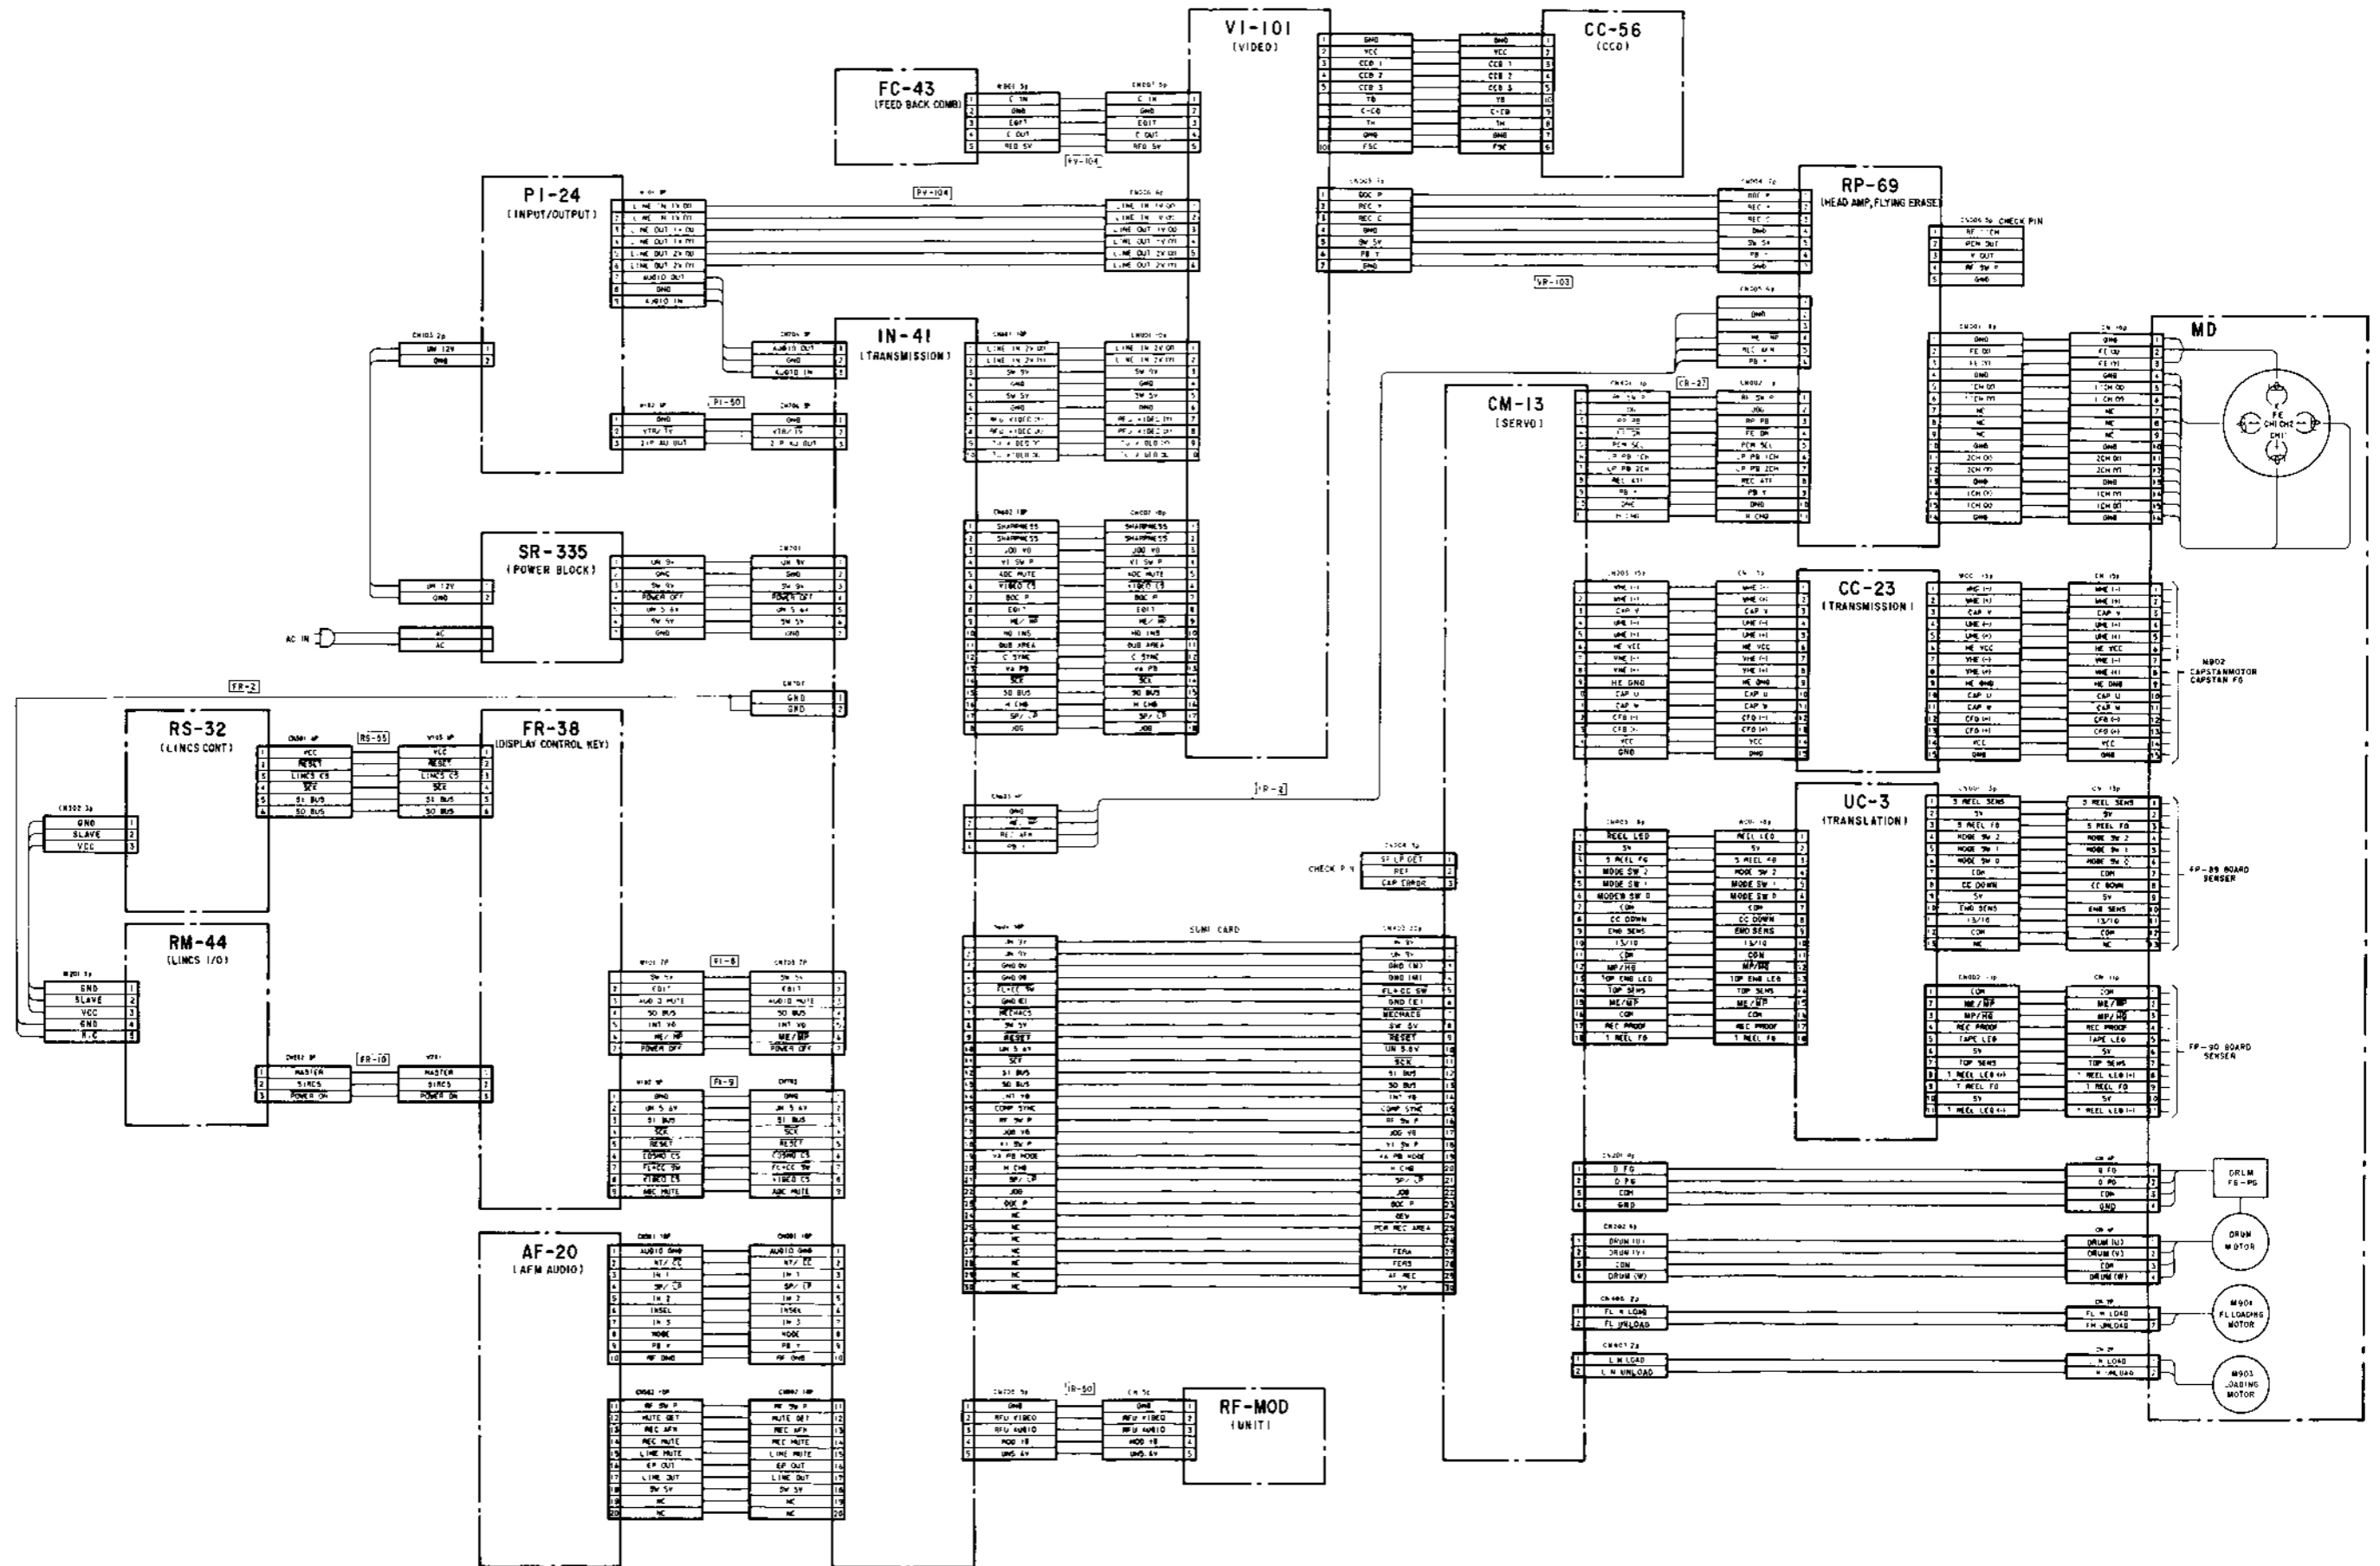

5-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)

For printed wiring boards :

- — : indicates a lead wire mounted on the component side.
- : Through hole.
- ▨ : Pattern from the side which enables seeing.
- : Pattern of the rear side.
- (circled numbers) refer to waveforms.

Note :

- Conductor side : Parts on the conductor side being seen from the conductor are stated.
- Component side : Parts on the component side being seen from the component are stated.


For schematic diagram :

- Caution when replacing chip parts.
New parts must be attached after removal of chip.
Be careful not to heat the minuts side of tantalum capacitor, because it is damaged by the heat.
- All resistors are in ohms, chip resistors are 1/10W unless otherwise noted. kΩ : 1000Ω, MΩ : 1000kΩ.
- All capacitors are in μF unless otherwise noted. pF : μμF. 50V or less are not indicated except for electrolytics and tantalums.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- ▨ : nonflammeble resistor.
- ▨ : fusible resistor.
- : panel designation.
- △ : internal component.
- : adjustment for repair.
- : B-line.
- : IN-OUT direction of B line (+).
- Circled numbers refer to waveforms.
- Vonages are dc between ground and measurement points.
- Readings are taken with color bar signal input.
- Readings are taken with a digital multimeter (DC10MΩ).
- Voltages are taken with a VOM (Input impedance 10MΩ).
- Voltage variations may be noted due to normal production tolerances.

The components identified by mark **A** or dotted line with mark **A** are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

VI-101 BOARD

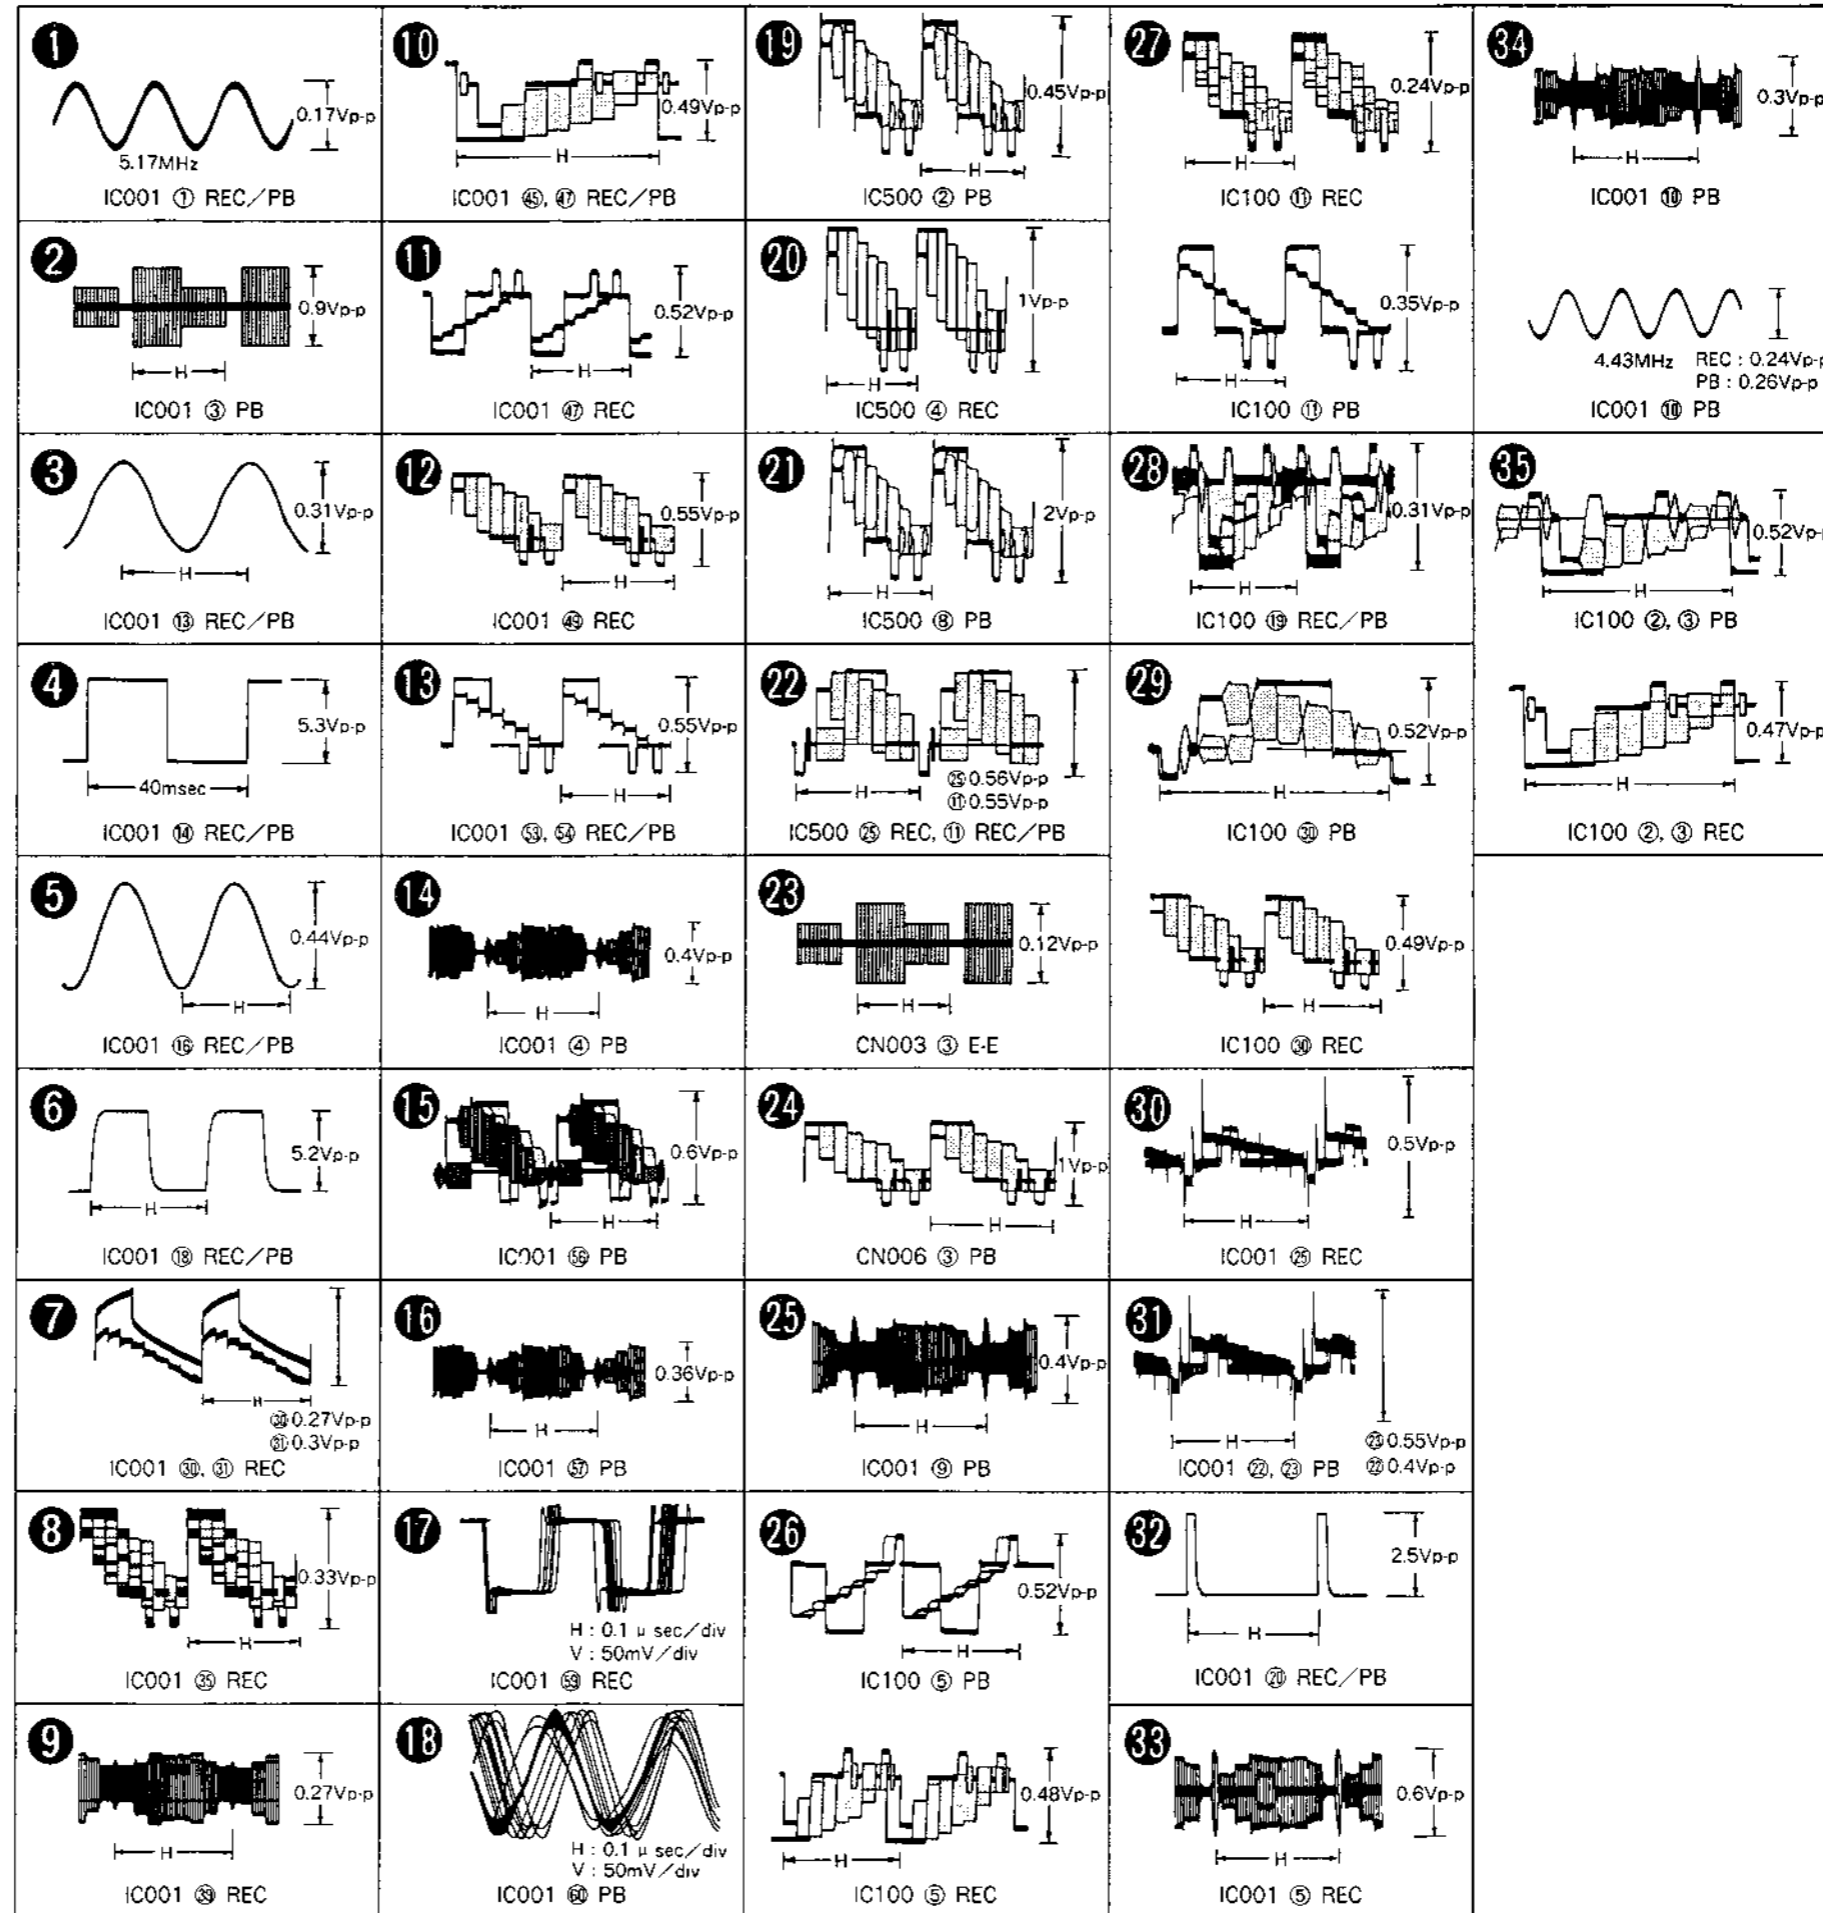

VI-101 Board


D001	C-9
D002	F-9
D250	F-12
D400	B-14
D401	A-14
D500	H-5
D501	H-6
IC001	E-7
IC400	B-12
IC500	H-4
Q001	E-5
Q003	D-6
Q004	C-6
Q005	B-6
Q006	B-6
Q007	A-8
Q008	A-8
Q009	C-6
Q010	D-6
Q011	B-8
Q012	C-9
Q013	B-10
Q014	B-10
Q015	B-9
Q019	D-9
Q020	F-10
Q021	G-9
Q022	H-8
Q023	G-6
Q024	D-15
Q200	D-11
Q201	C-12
Q202	E-11
Q203	H-12
Q204	H-11
Q205	H-11
Q251	F-12
Q252	G-12
Q253	G-12
Q254	G-12
Q255	G-11
Q256	G-10
Q257	D-12
Q260	H-10
Q309	E-2
Q310	G-15
Q311	F-15
Q312	E-15
Q313	E-15
Q400	A-13
Q401	A-13
Q402	A-11
Q403	A-13
Q404	A-13
Q405	B-11
Q500	H-5
Q501	H-5
Q502	G-2
Q503	G-3
Q505	I-5
Q900	H-13
Q901	H-13

VI-101 (VIDEO) PRINTED WIRING BOARDS

-Ref. No. VI-101 BOARD : 1,000 Series -

VI-101 Board

D001	C-9
D002	F-9
D250	F-12
D400	B-14
D401	A-14
D500	H-5
D501	H-6
IC001	E-7
IC400	B-12
IC500	H-4
Q001	E-5
Q003	D-6
Q004	C-6
Q005	B-6
Q006	B-6
Q007	A-6
Q008	A-6
Q009	C-6
Q010	D-6
Q011	B-8
Q012	C-9
Q013	B-10
Q014	B-10
Q015	B-9
Q019	D-9
Q020	F-10
Q021	G-9
Q022	H-8
Q023	G-6
Q024	D-15
Q200	D-11
Q201	C-12
Q202	E-11
Q203	H-12
Q204	H-11
Q205	H-11
Q251	F-12
Q252	G-12
Q253	G-12
Q254	G-12
Q255	G-11
Q256	G-10
Q257	D-12
Q260	H-10
Q309	E-2
Q310	G-15
Q311	F-15
Q312	E-15
Q313	E-15
Q400	A-13
Q401	A-13
Q402	A-11
Q403	A-13
Q404	A-13
Q405	B-11
Q500	H-5
Q501	H-5
Q502	G-2
Q503	G-3
Q505	I-5
Q900	H-13
Q901	H-13

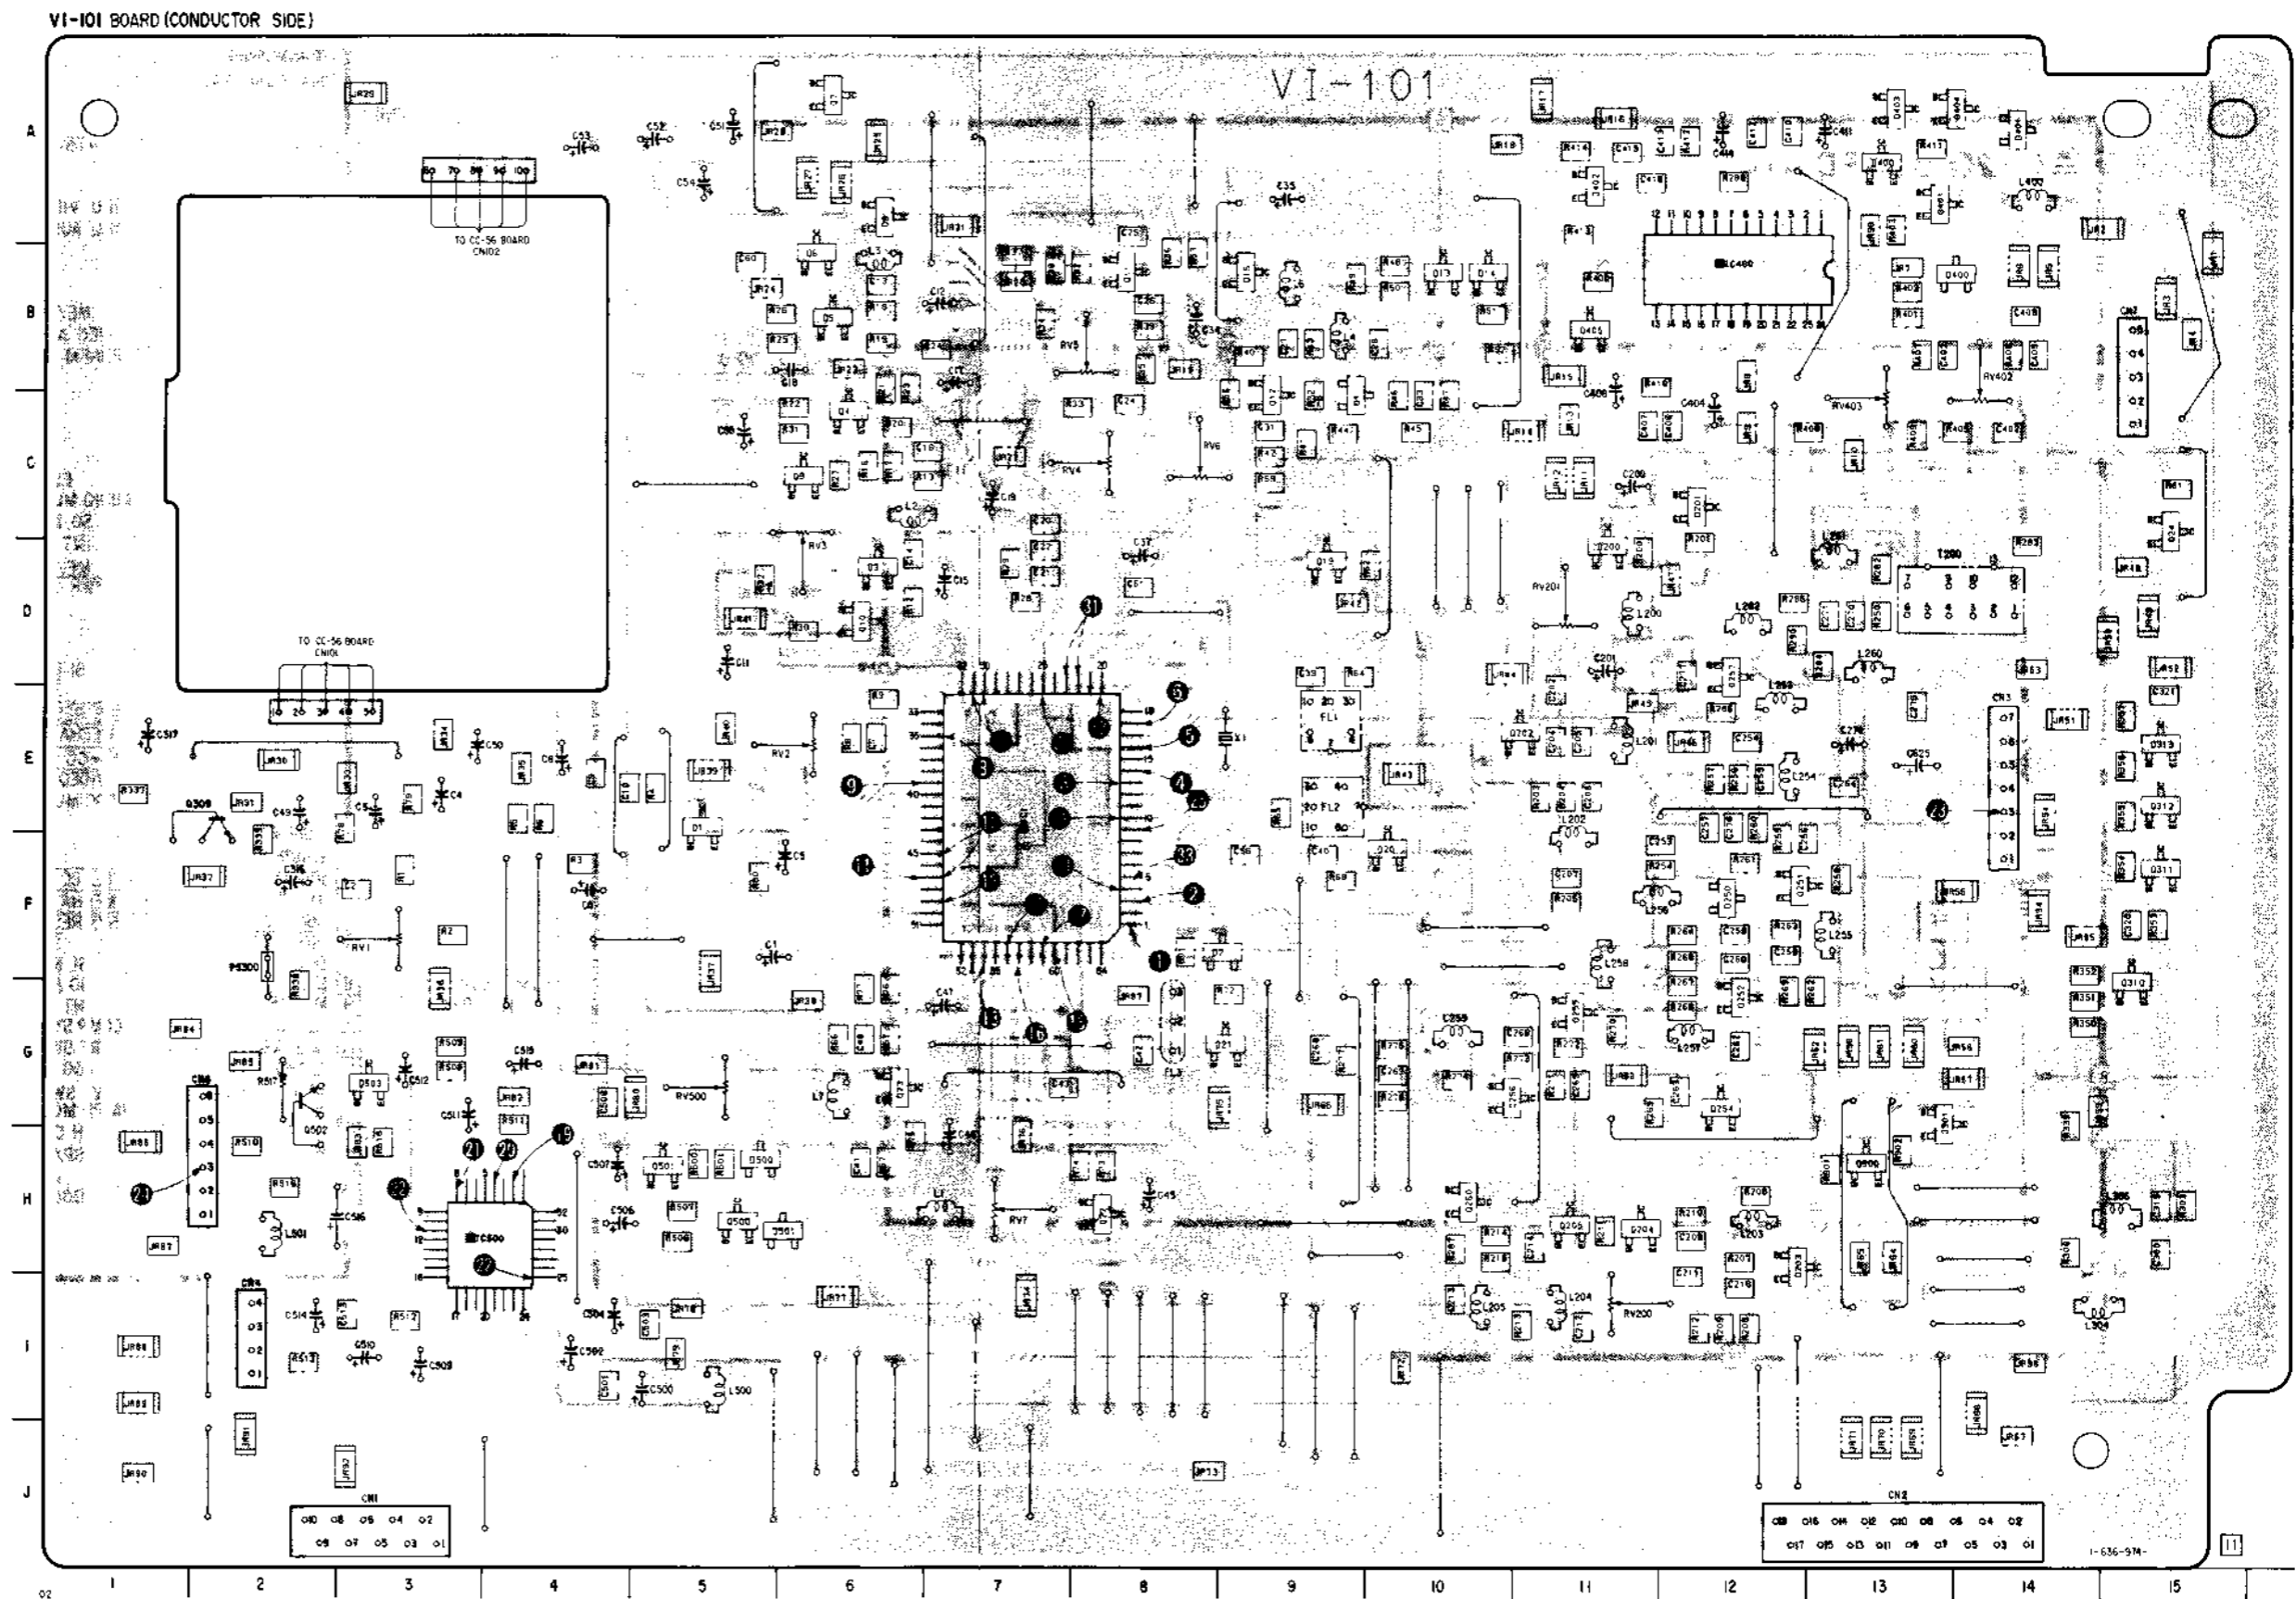


VI-101 (VIDEO), CC-56 (CCD) SCHEMATIC DIAGRAMS

-Ref. No. VI-101, CC-56 BOARDS : 1,000 Series-

1 2 3 4 5 6 7 8 9 10 11

A
B
C
D
E
F
G
H
I
J
K
L
M
N

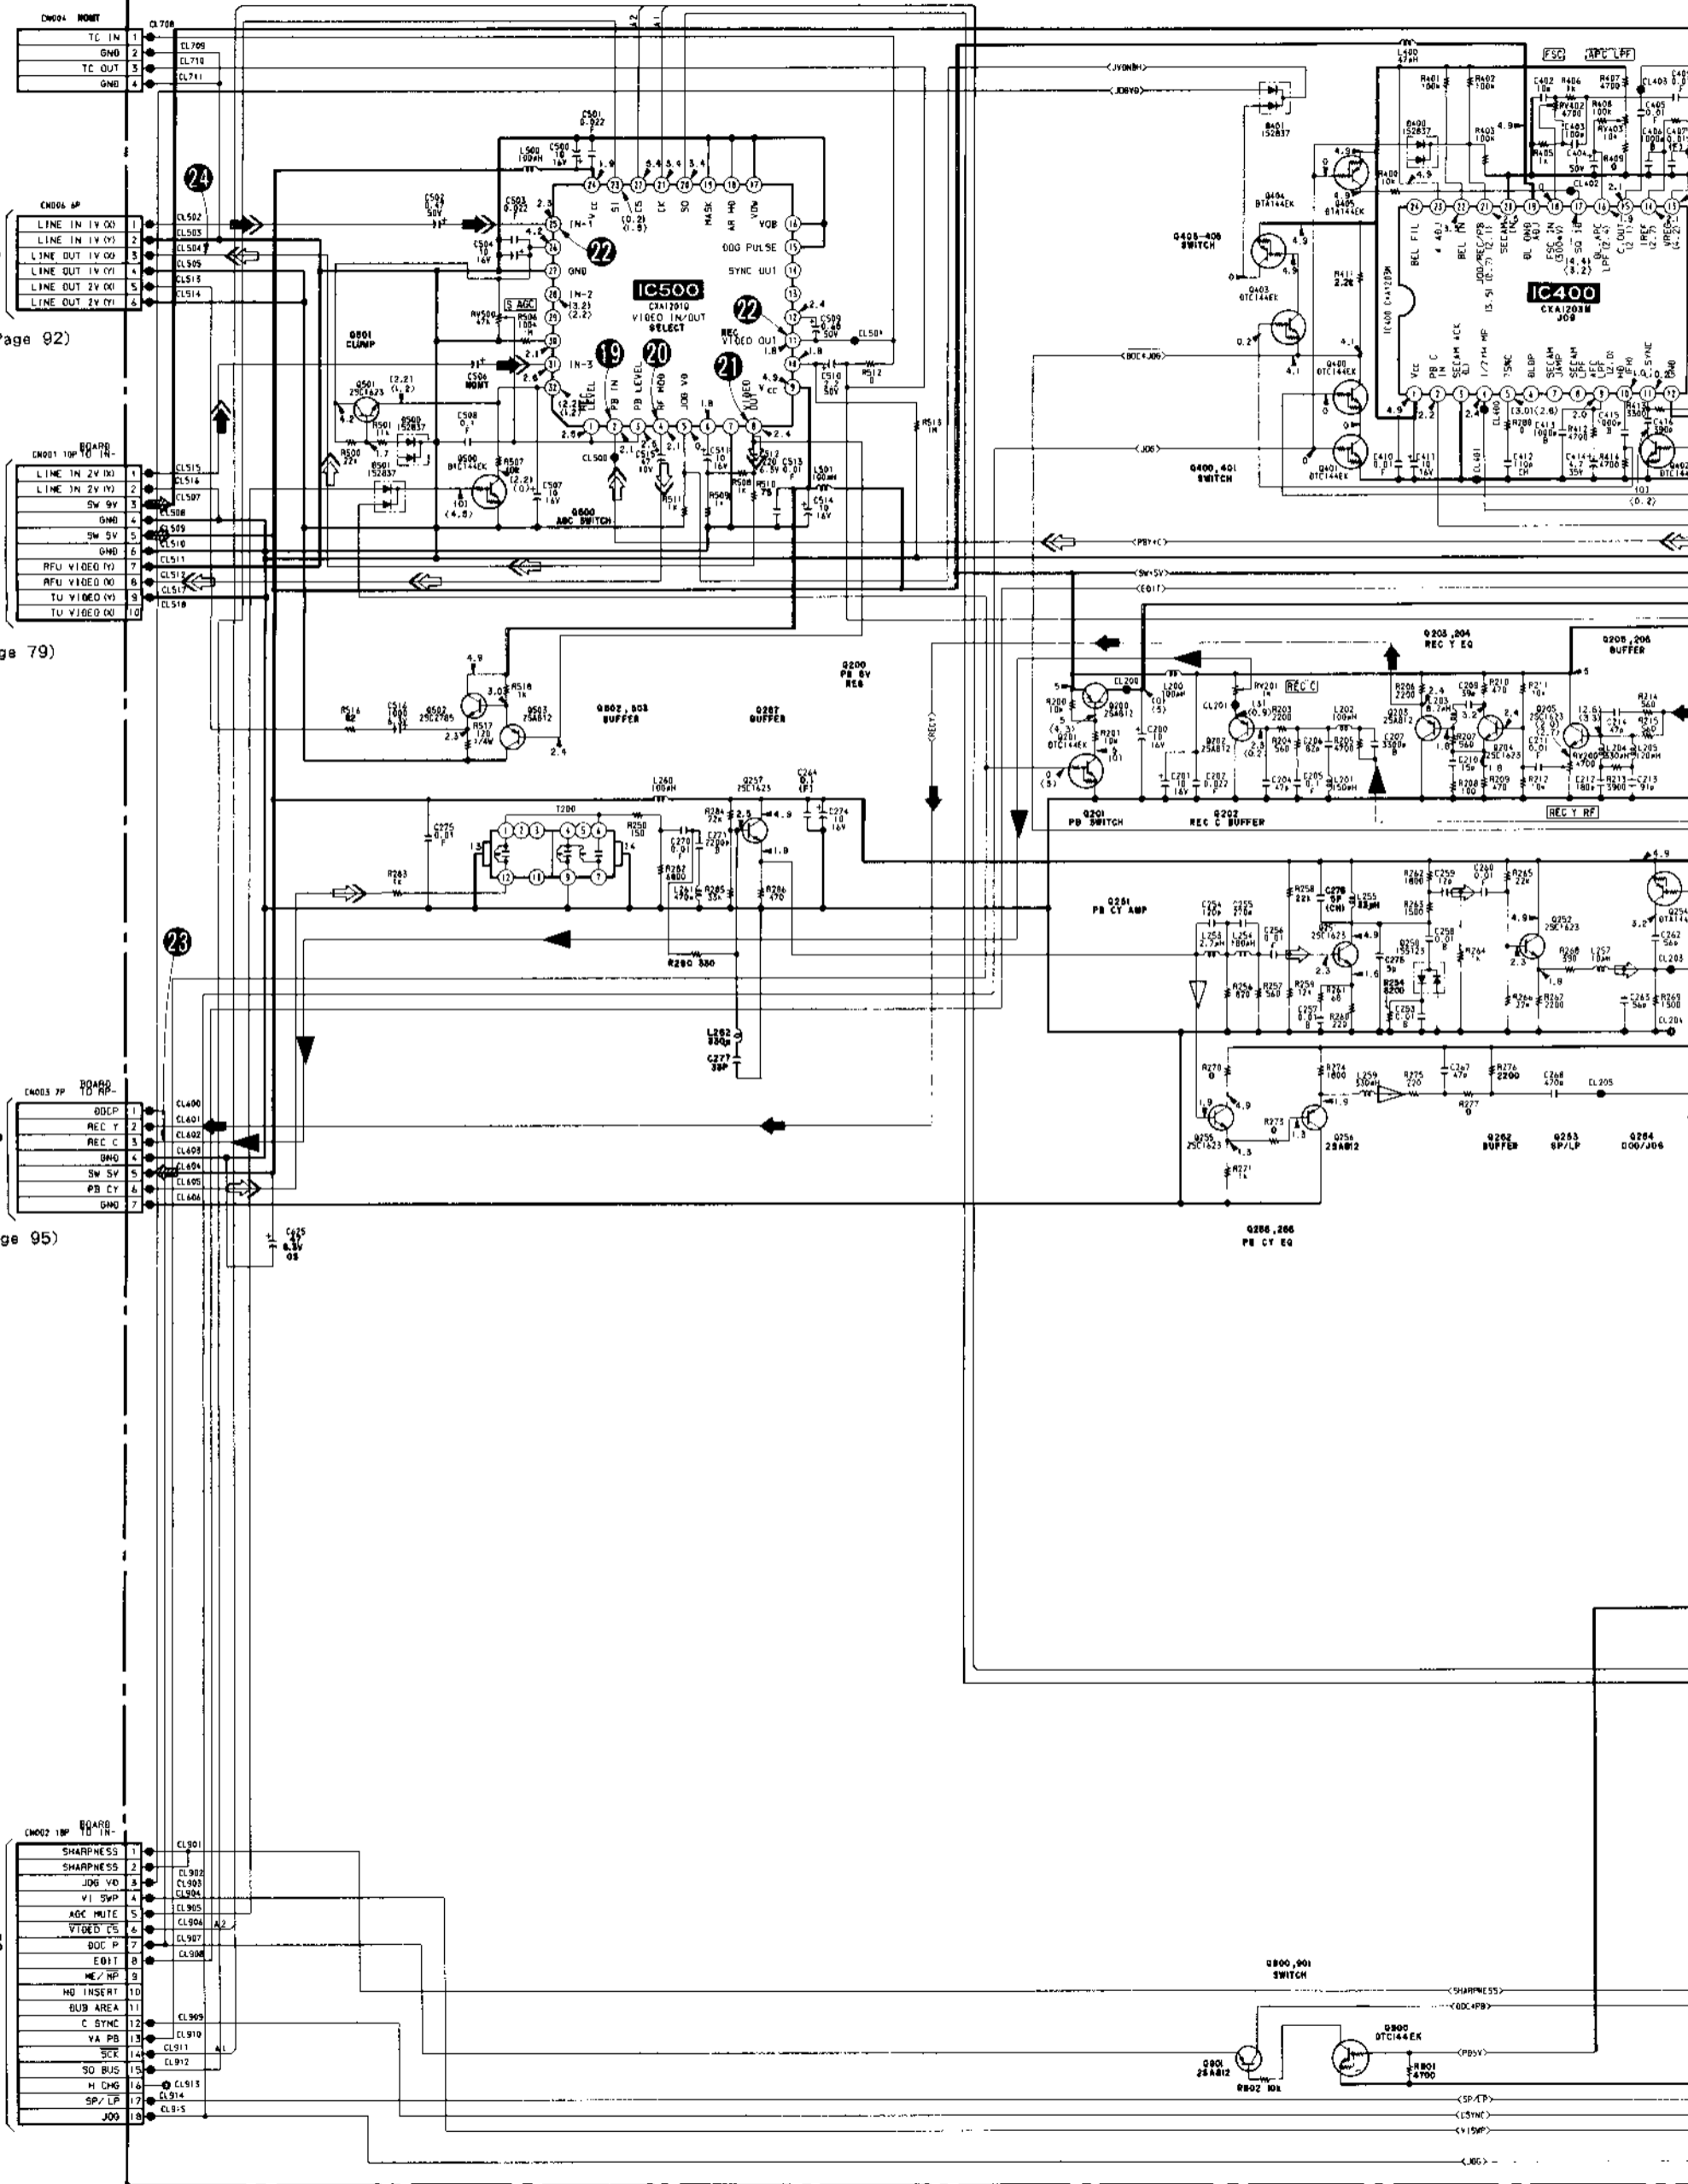


(See Page 92)

(See Page 79)


(See Page 95)

(See Page 79)

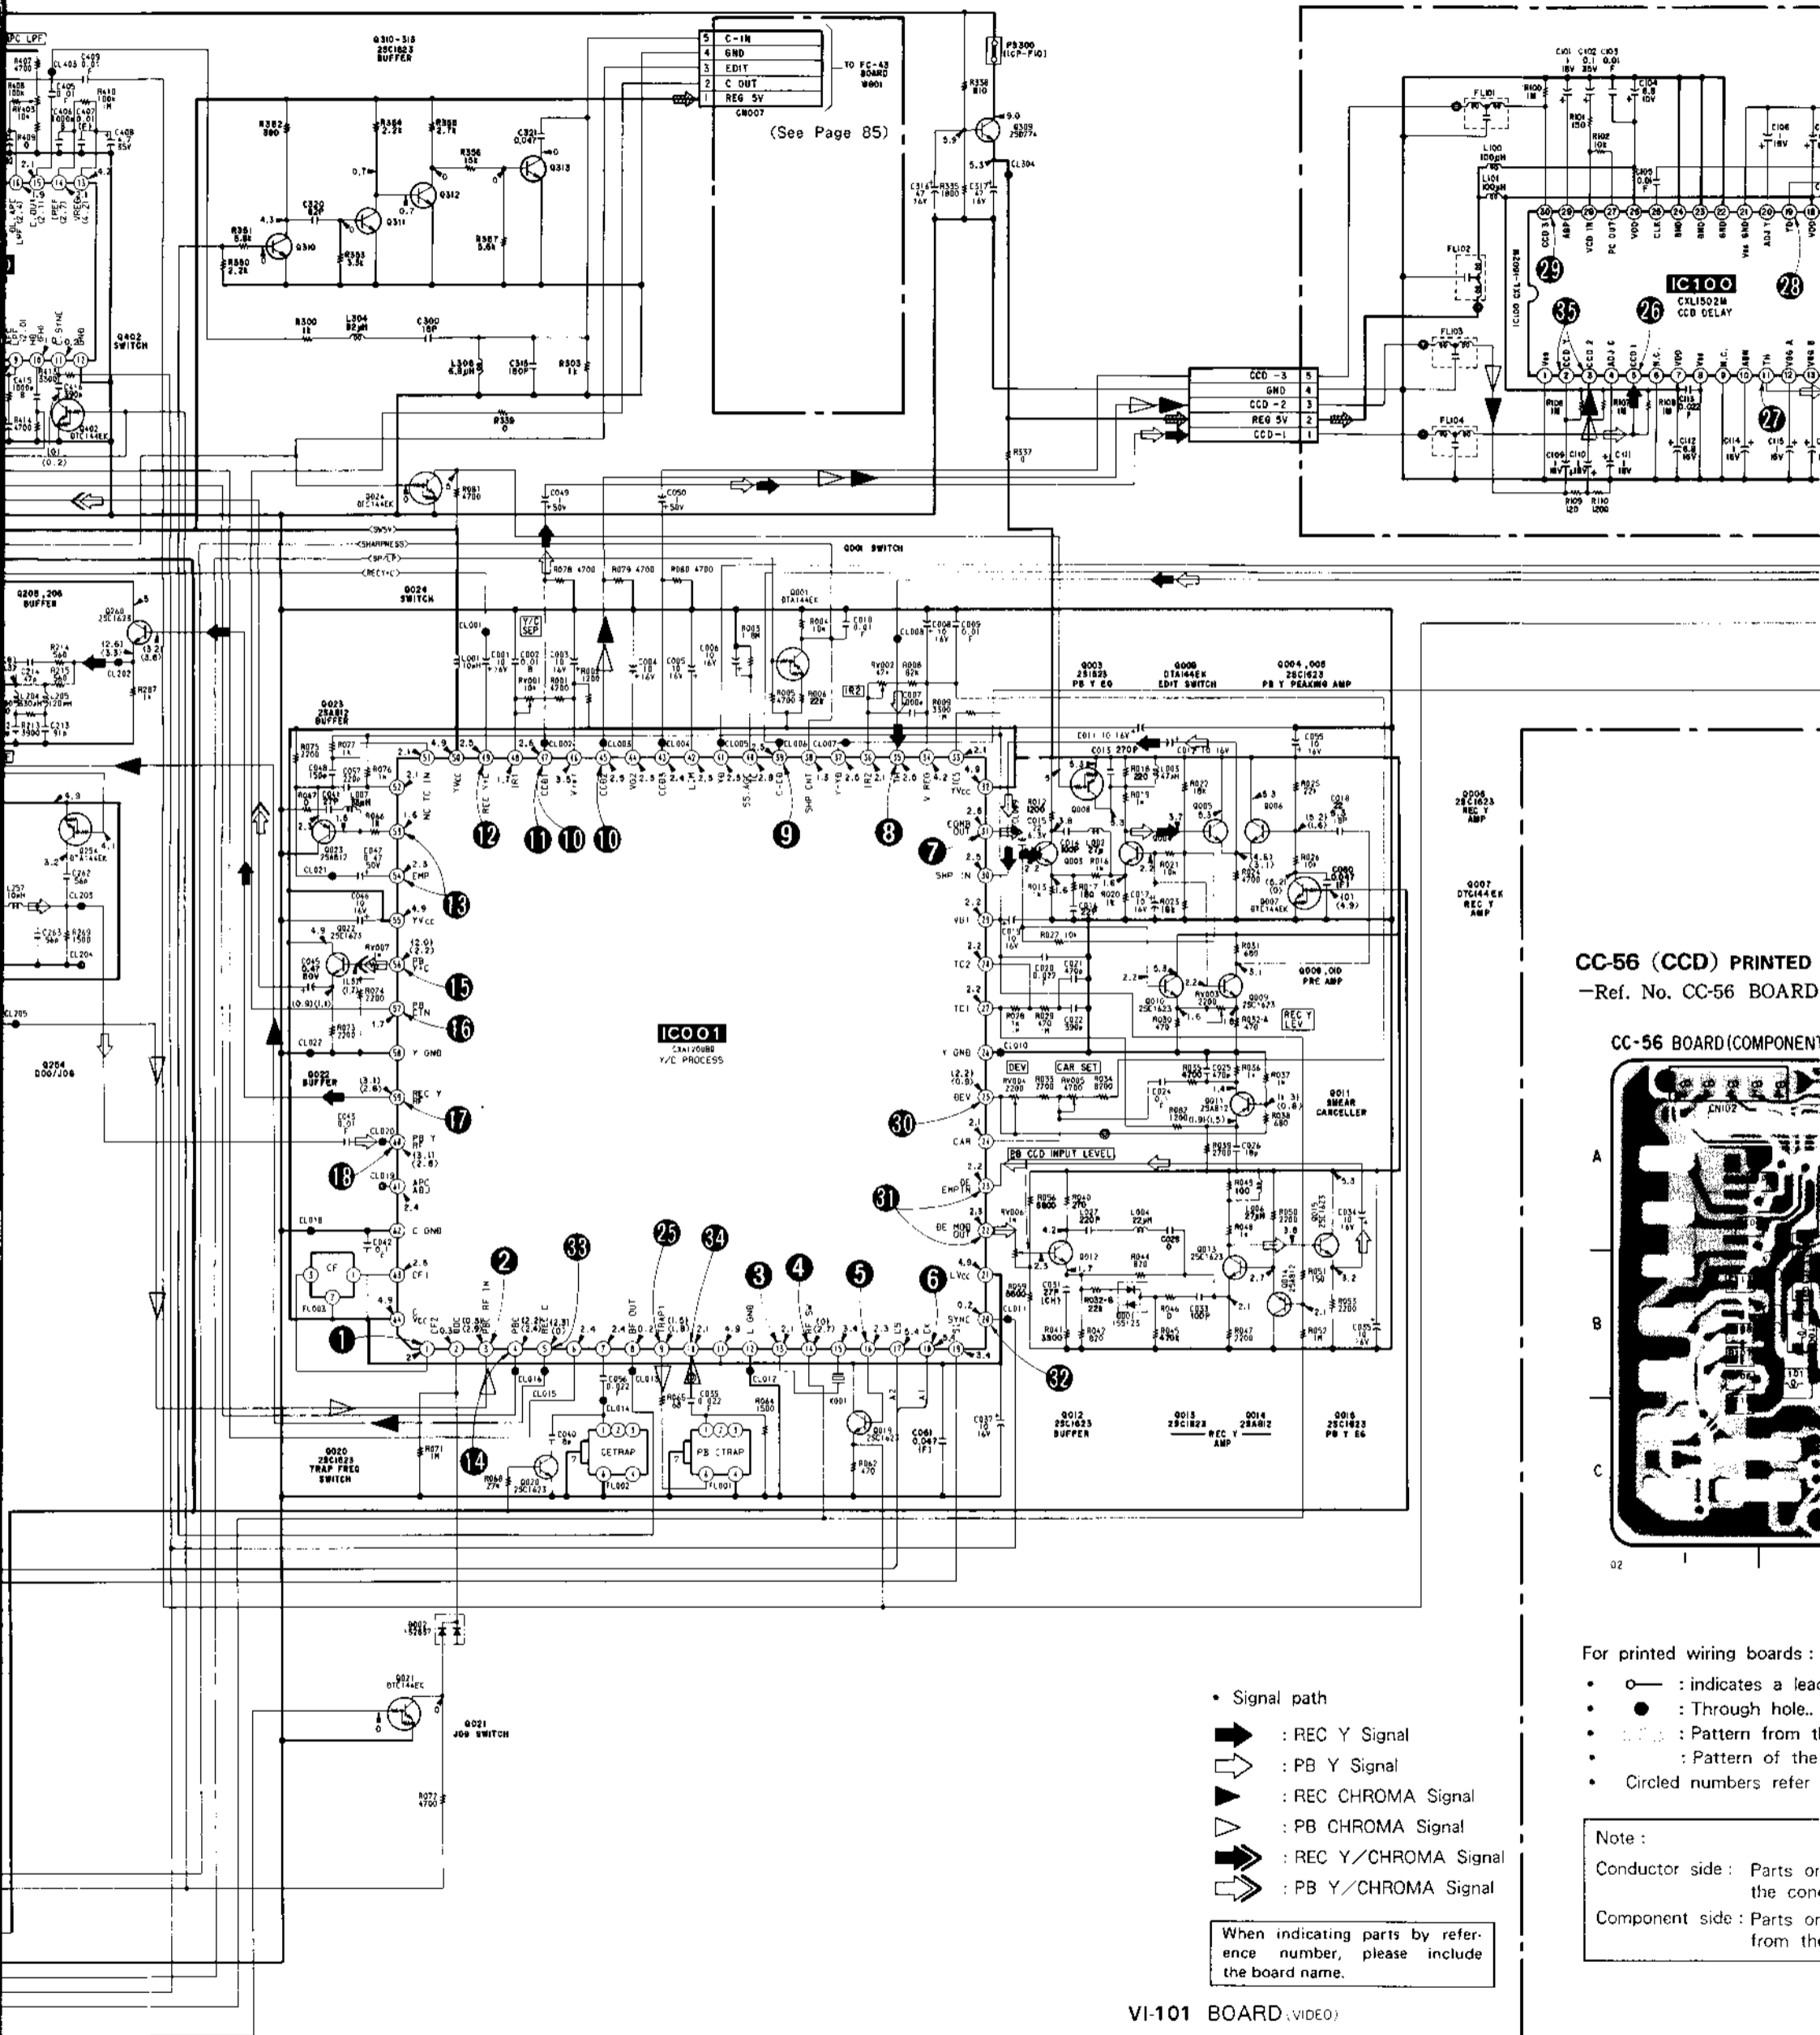

CC-56 (CCD) PRINTED
-Ref. No. CC-56 BOARD

CC-56 BOARD (COMPONENT)

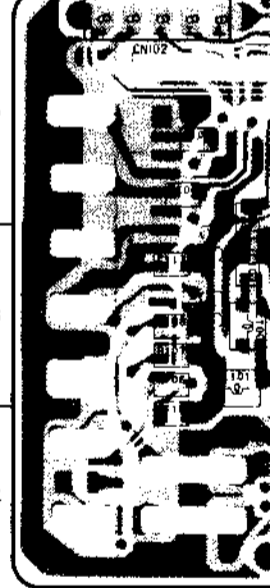



- For printed wiring boards:
- — : indicates a lead
 - : Through hole.
 - : Pattern from the
 - : Pattern of the
 - Circled numbers refer

Note:
Conductor side: Parts on the conductor side of the board.
Component side: Parts on the component side of the board.

- Signal path
- ➡ : REC Y Signal
- ➡ : PB Y Signal
- ➡ : REC CHROMA Signal
- ➡ : PB CHROMA Signal
- ➡ : REC Y/CHROMA Signal
- ➡ : PB Y/CHROMA Signal

When indicating parts by reference number, please include the board name.


VI-101 BOARD (VIDEO)

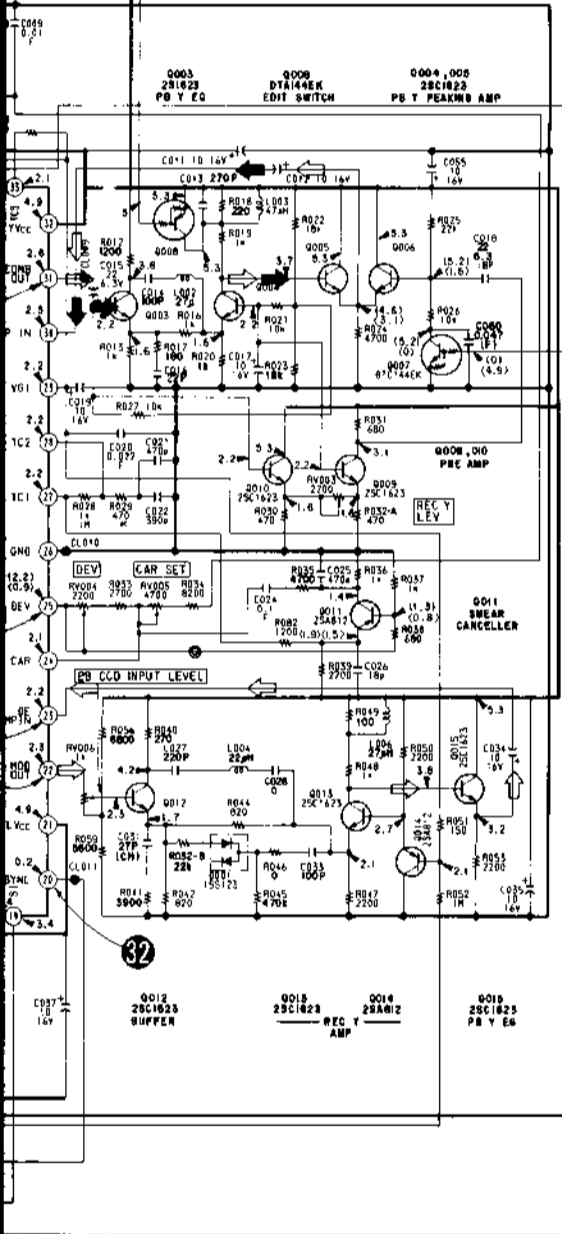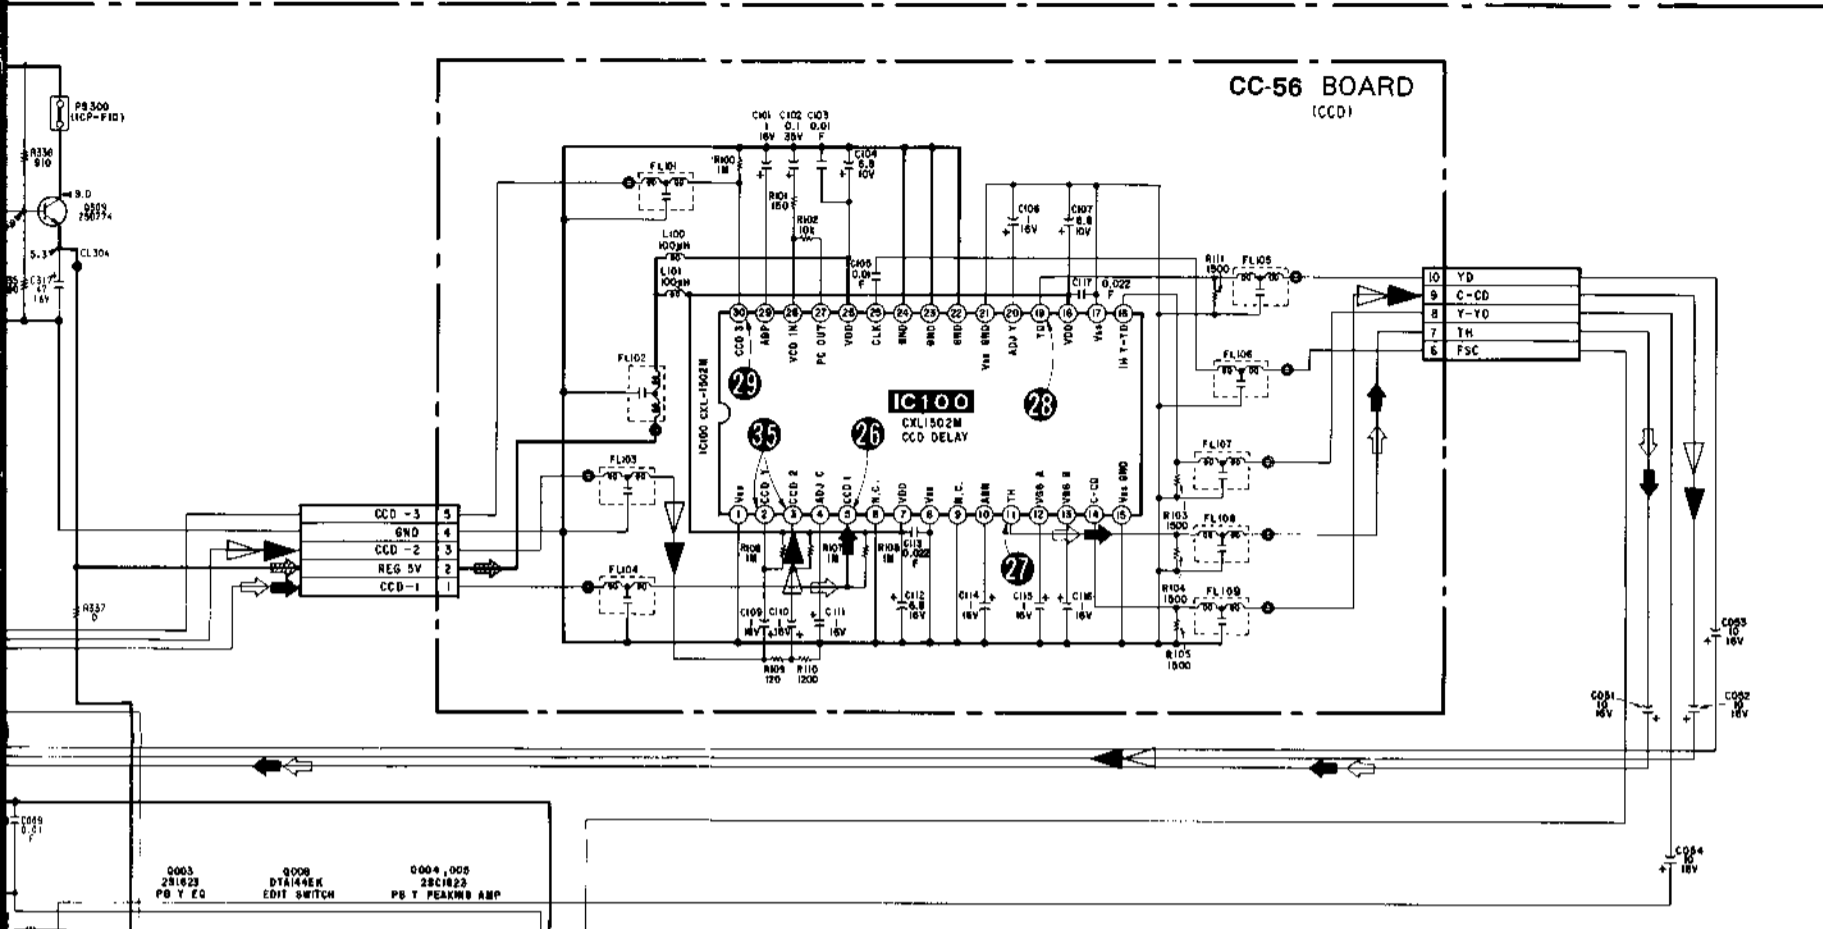

CC-56 (CCD) PRINTED WIRING BOARD
-Ref. No. CC-56 BOARD : 1,000 Series-

CC-56 BOARD (COMPONENT SIDE)

CC-56 BOARD (CONDUCTOR SIDE)

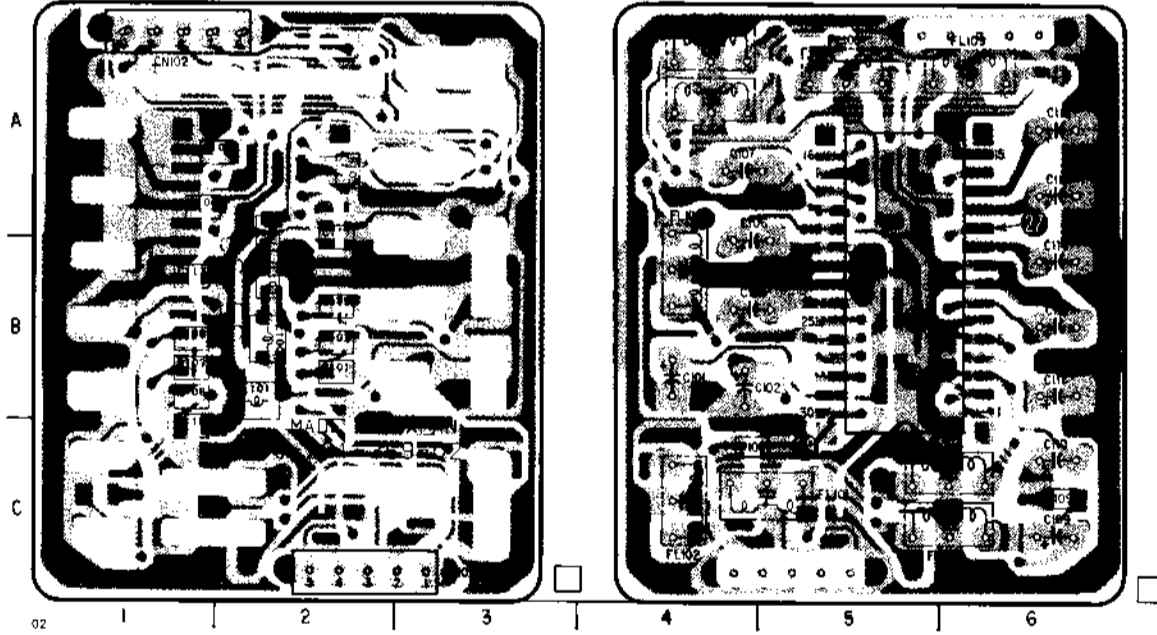


- Signal path
 - ➔ : REC Y Signal
 - ➡ : PB Y Signal
 - : REC CHROMA Signal
 - : PB CHROMA Signal
 - : REC Y/CHROMA Signal
 - : PB Y/CHROMA Signal
- When indicating parts by reference number, please include the board name.

- For printed wiring boards :
- : indicates a lead wire mounted on the component side.
 - : Through hole.
 - : Pattern from the side which enables seeing.
 - : Pattern of the rear side.
 - : Circled numbers refer to waveforms.

Note :

Conductor side : Parts on the conductor side being seen from the conductor are stated.

Component side : Parts on the component side being seen from the component are stated.








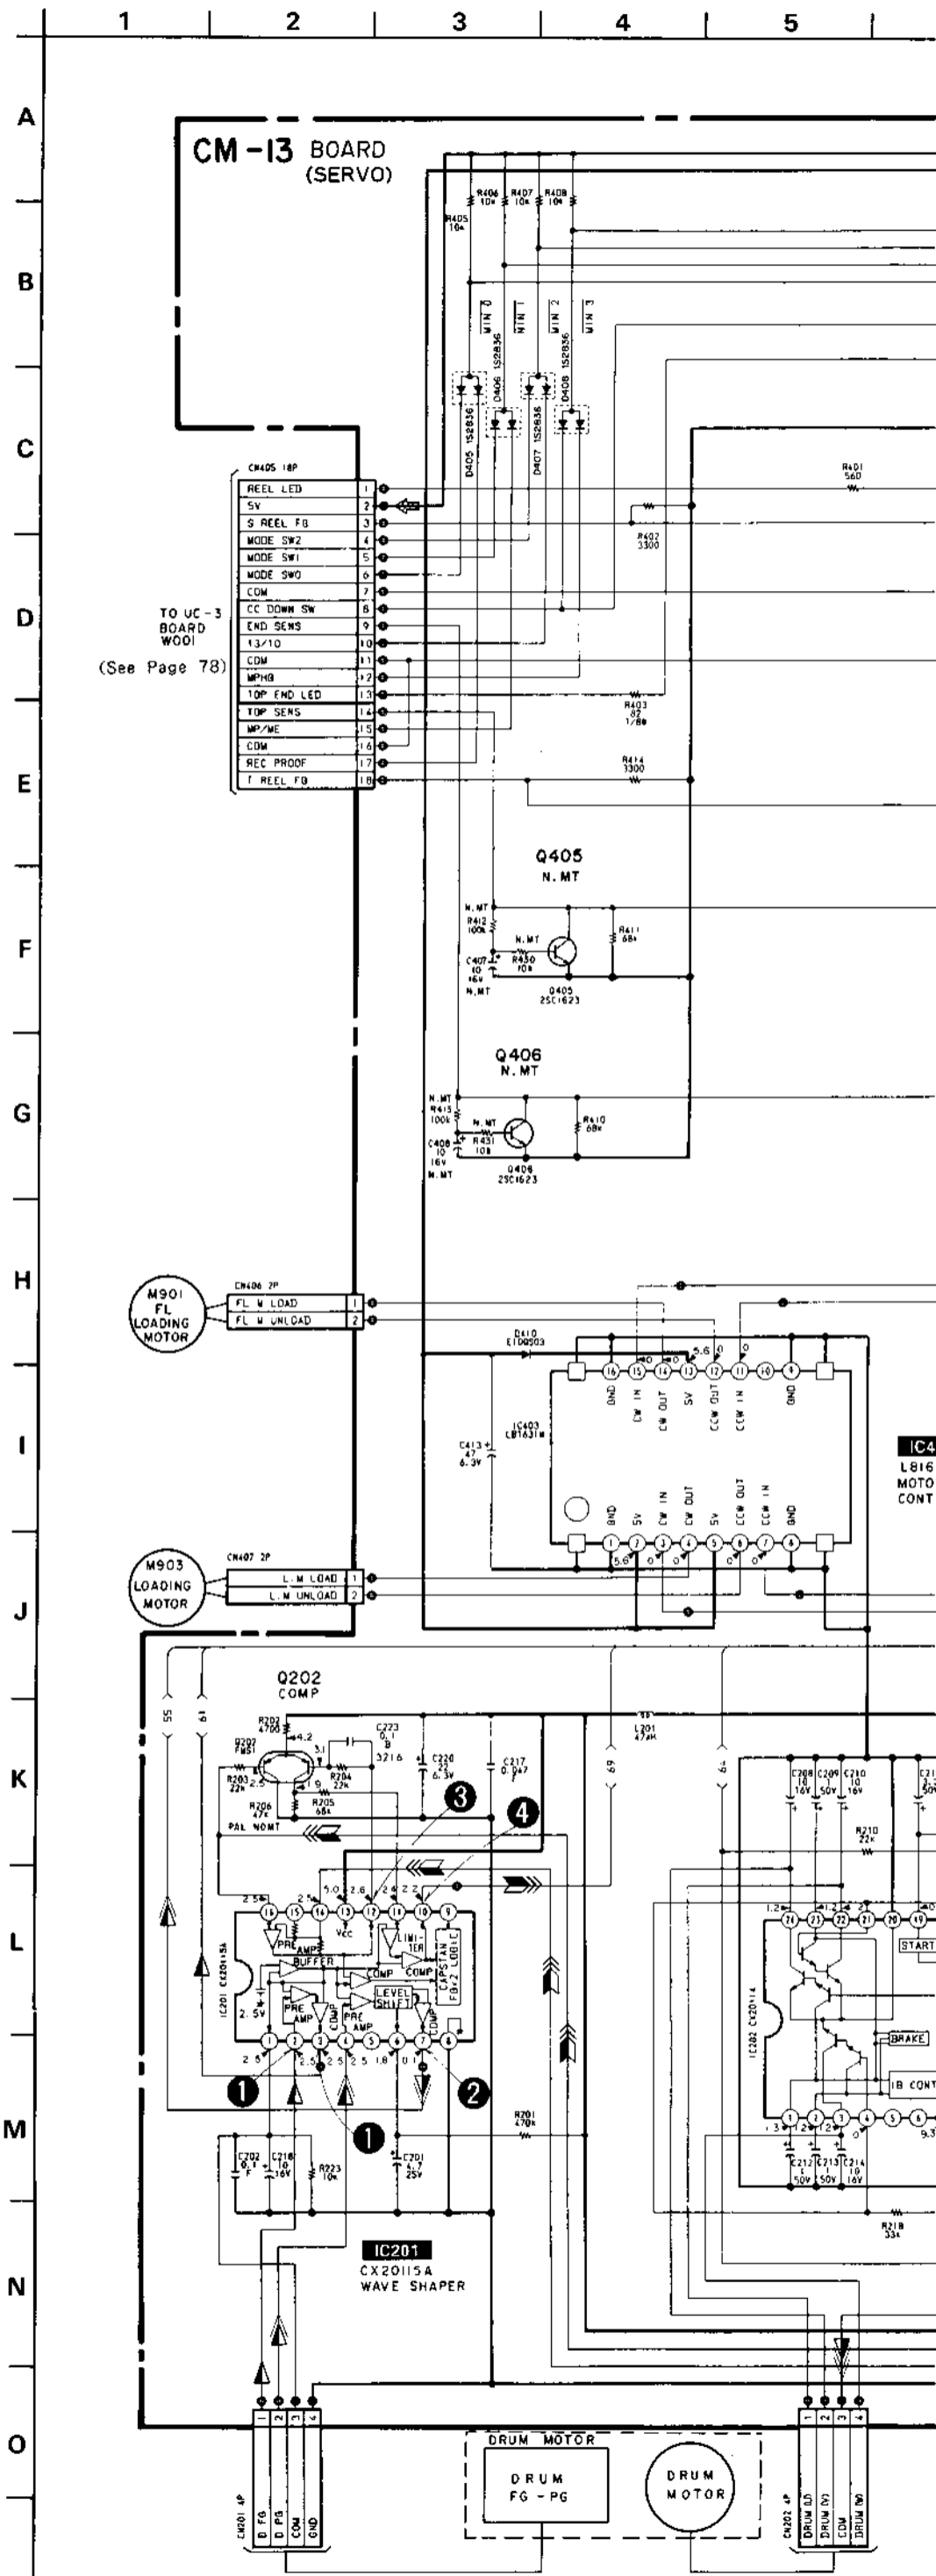


• Signal path

	REC	REC/PB	PB
Drum speed servo		▶	
Drum phase servo		▶▶	
Drum servo (speed and phase)		▶▶▶	
Capstan phase servo			▶▶▶
Capstan servo (speed and phase)		▶▶▶▶	
Ref. signal	▶▶▶▶▶		


When indicating parts by reference number, please include the board name.

(See Page 95)
TO RP-69 BOARD
CNO02

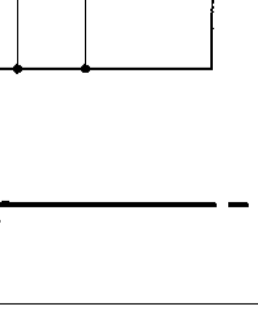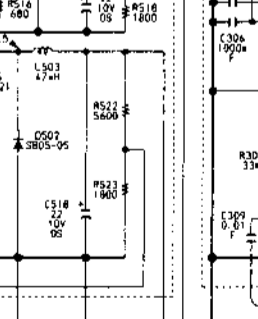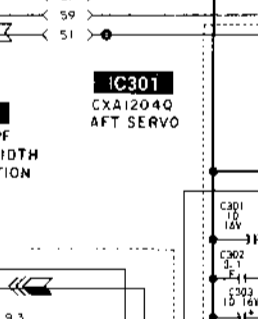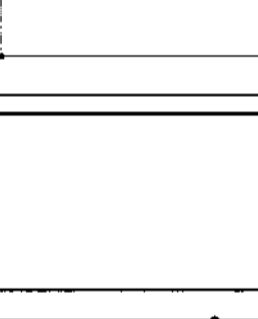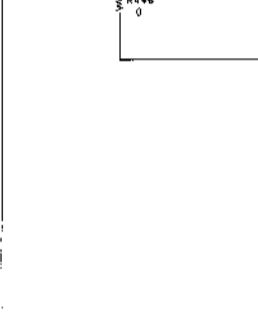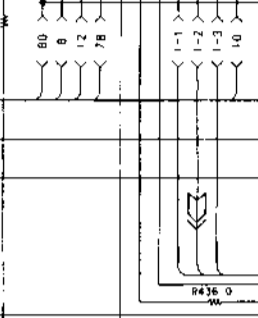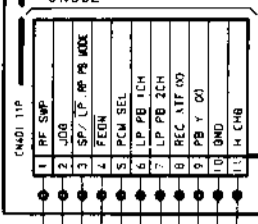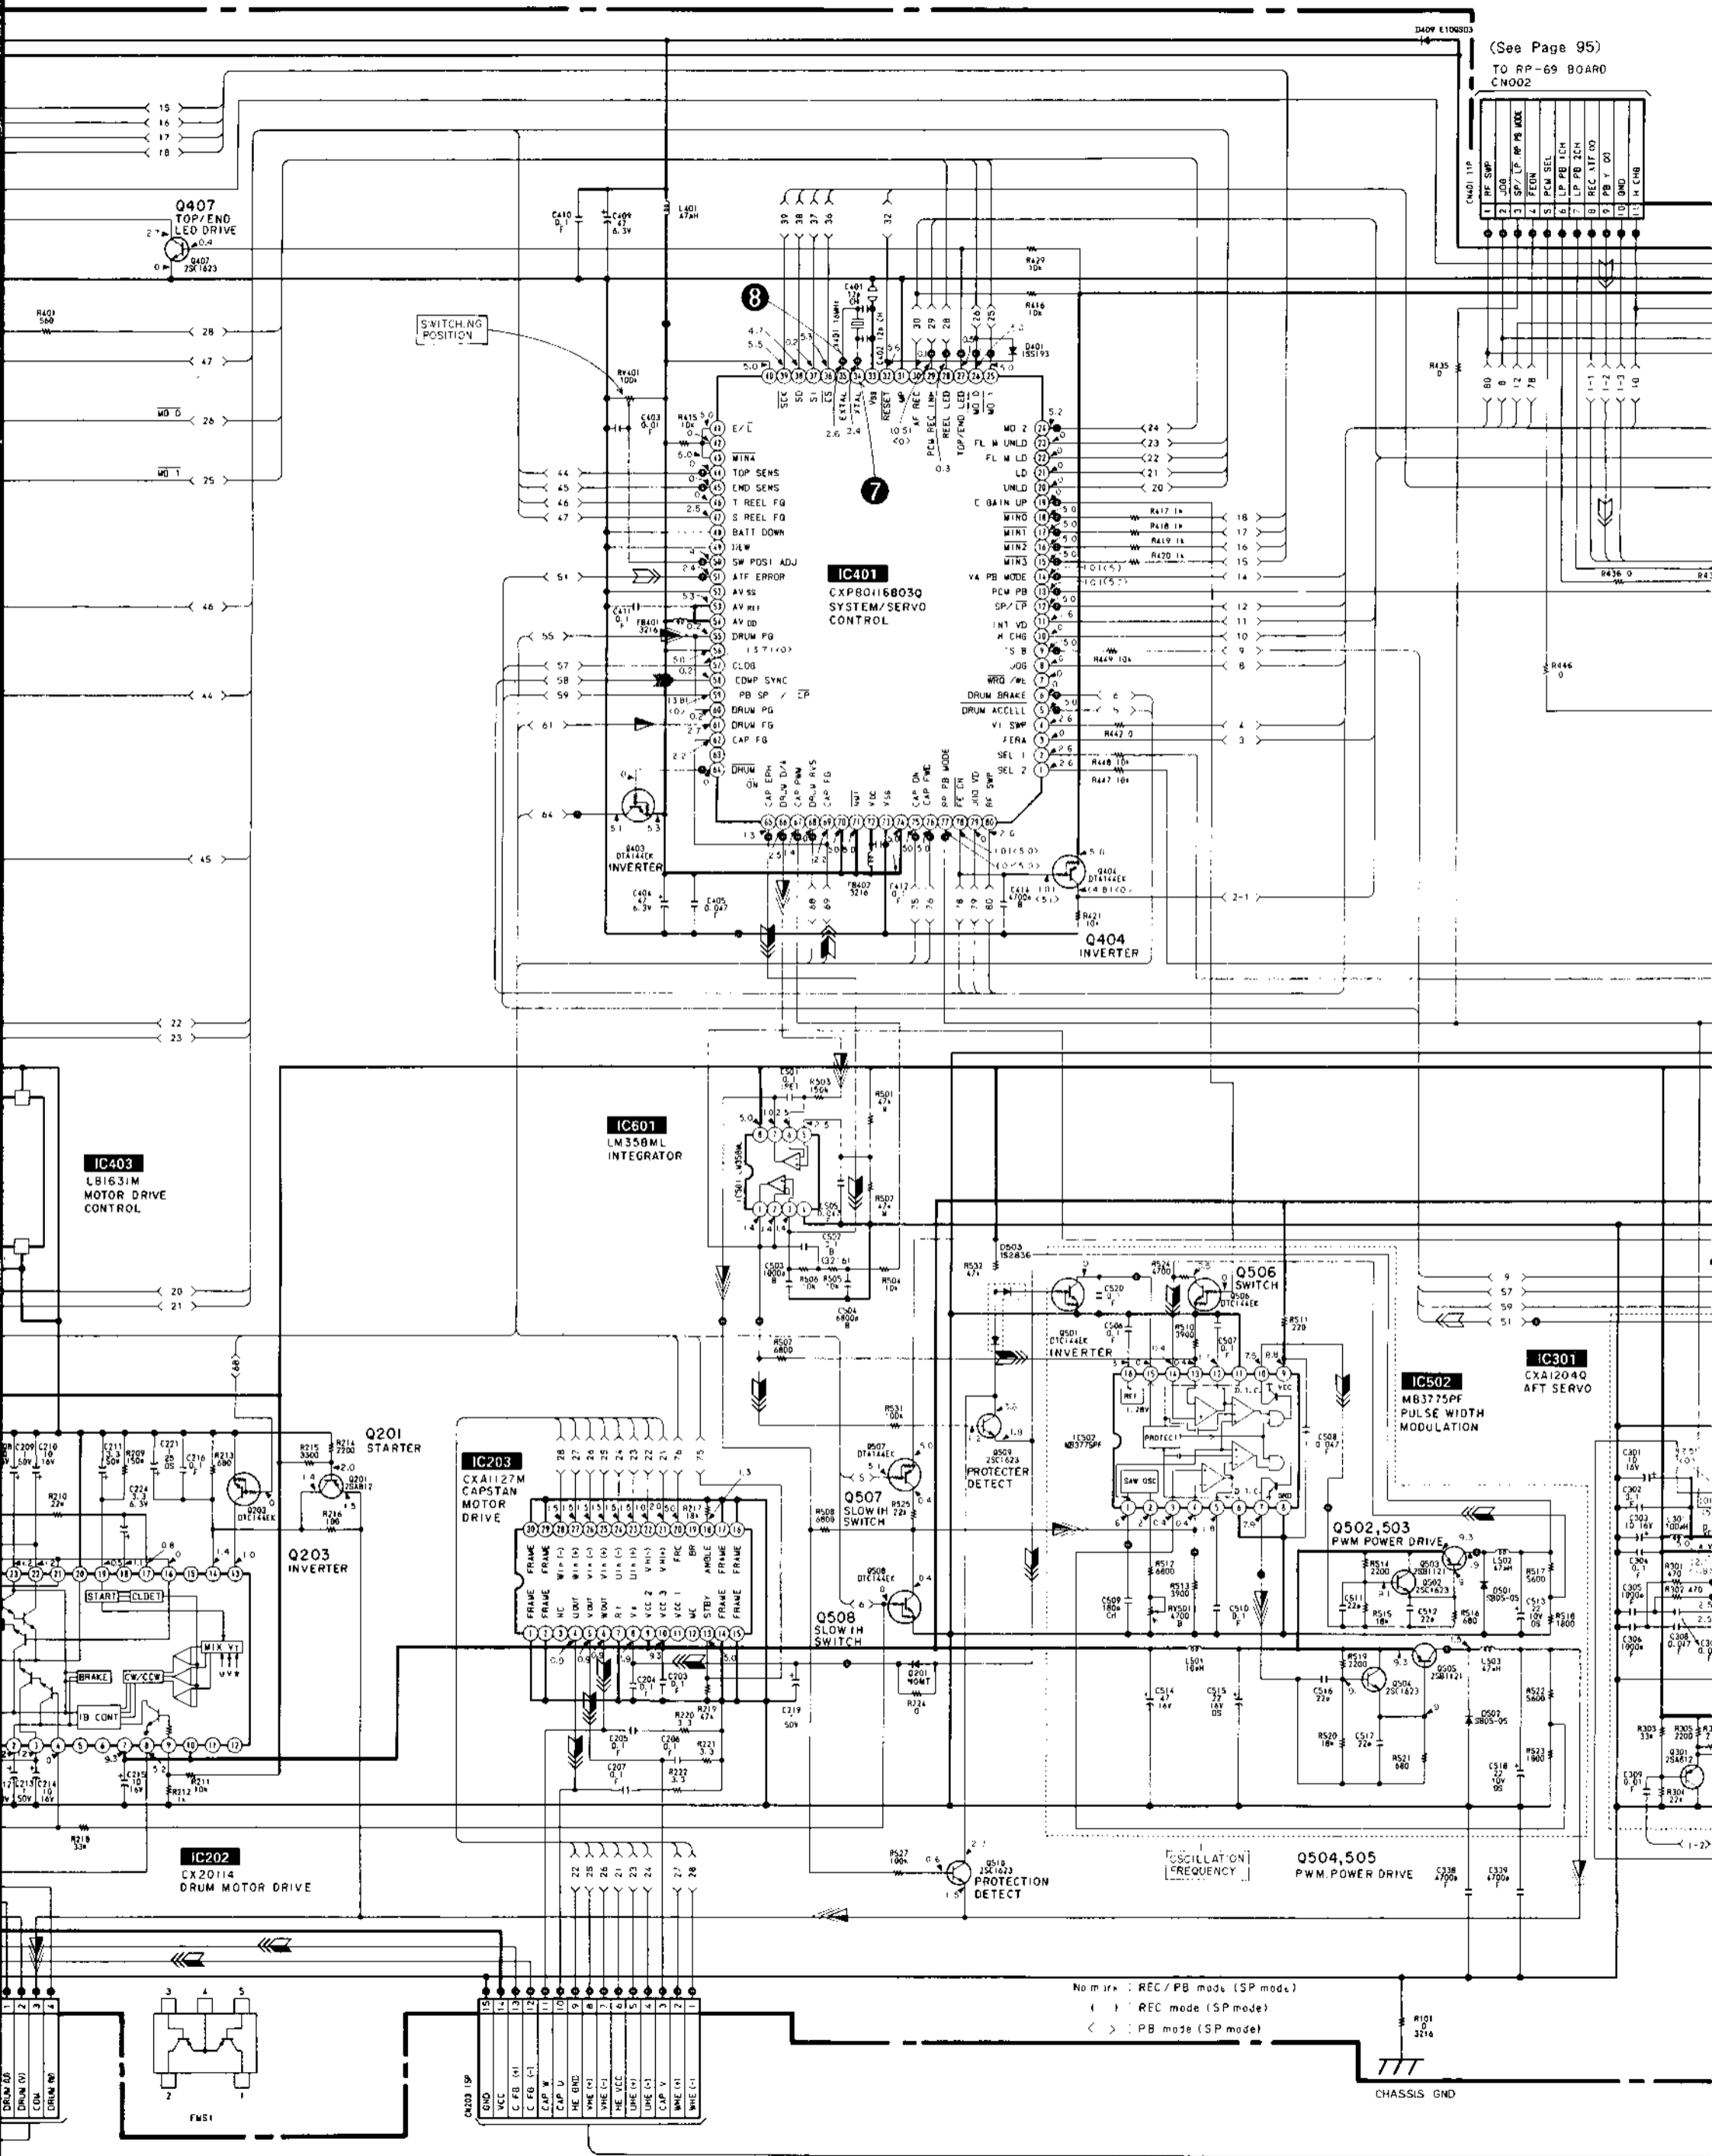



No mark : REC / PB mode (SP mode)
- - - : REC mode (SP mode)
△ : PB mode (SP mode)

CHASSIS GND

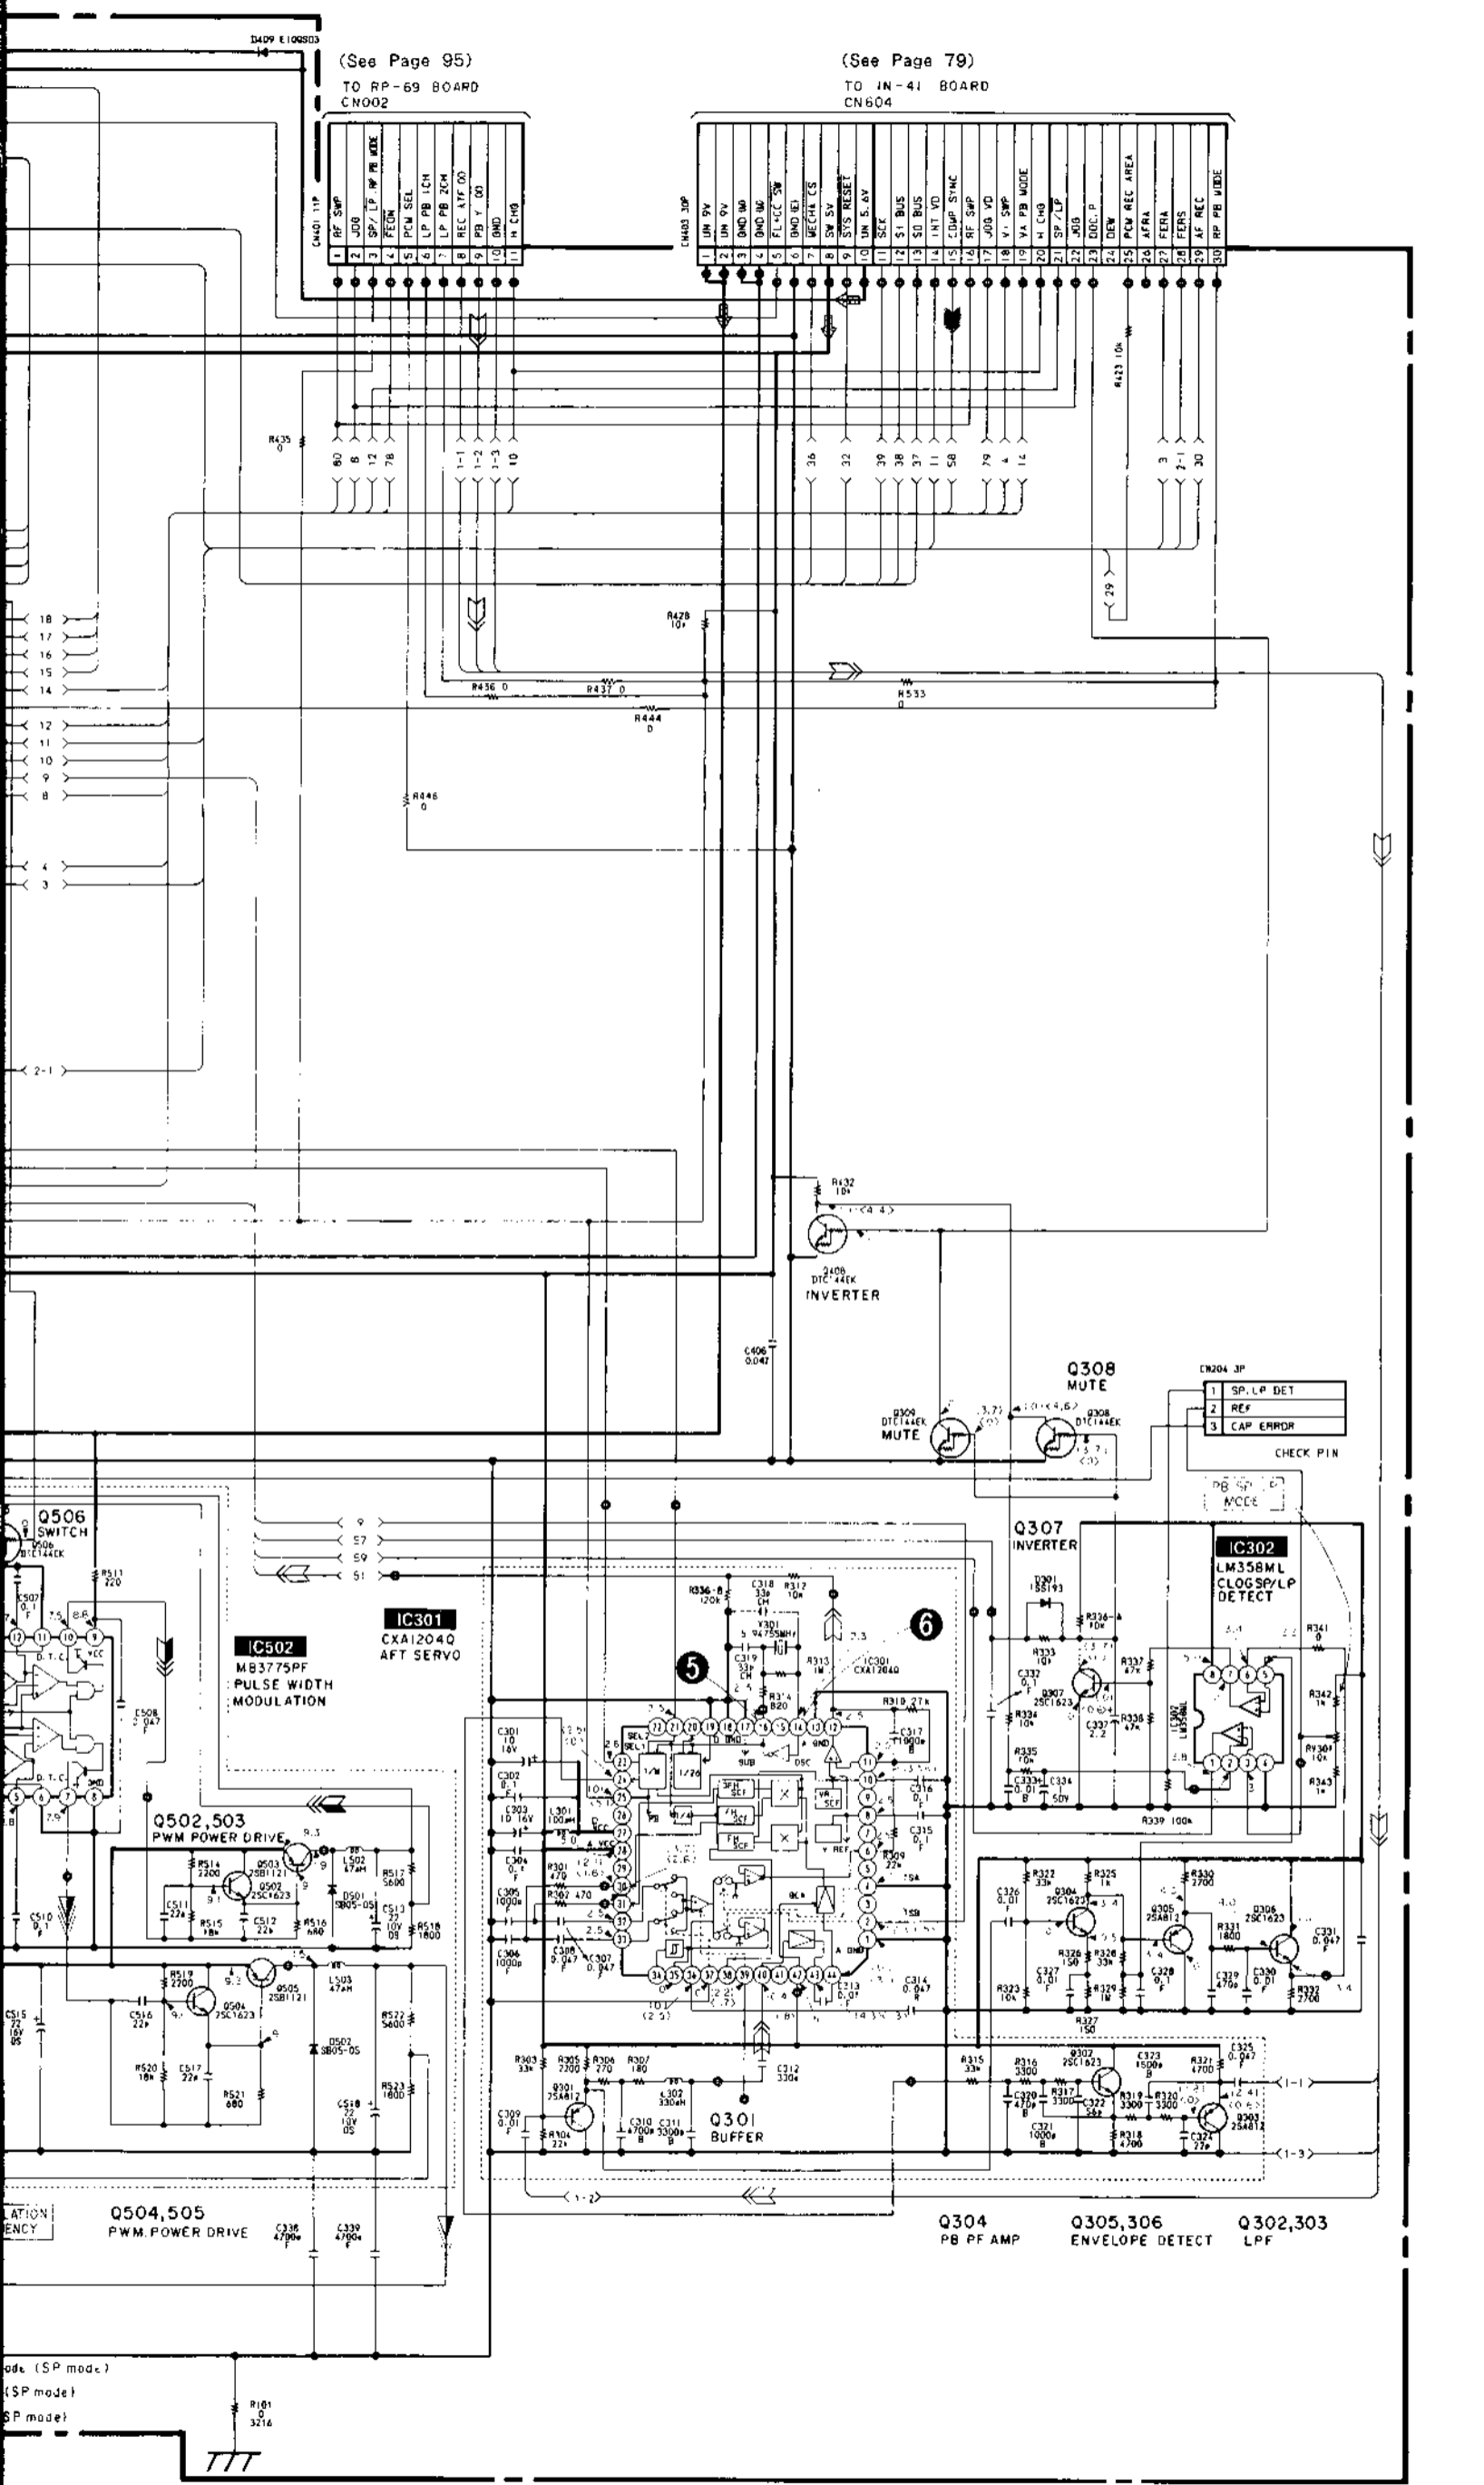


(See Page 95)
TO RP-69 BOARD
C.N002



(See Page 79)
TO IN-41 BOARD
C.N604


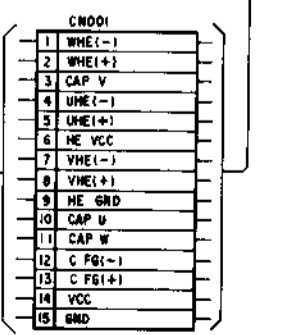
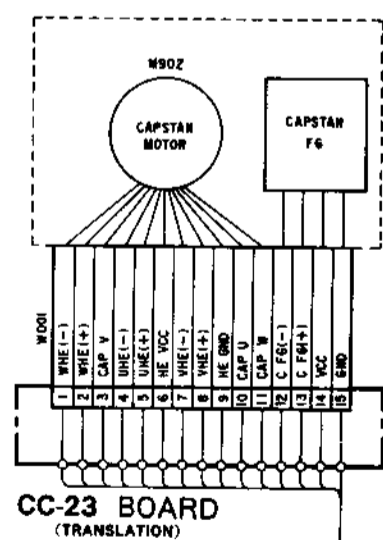


SERVO SERVO

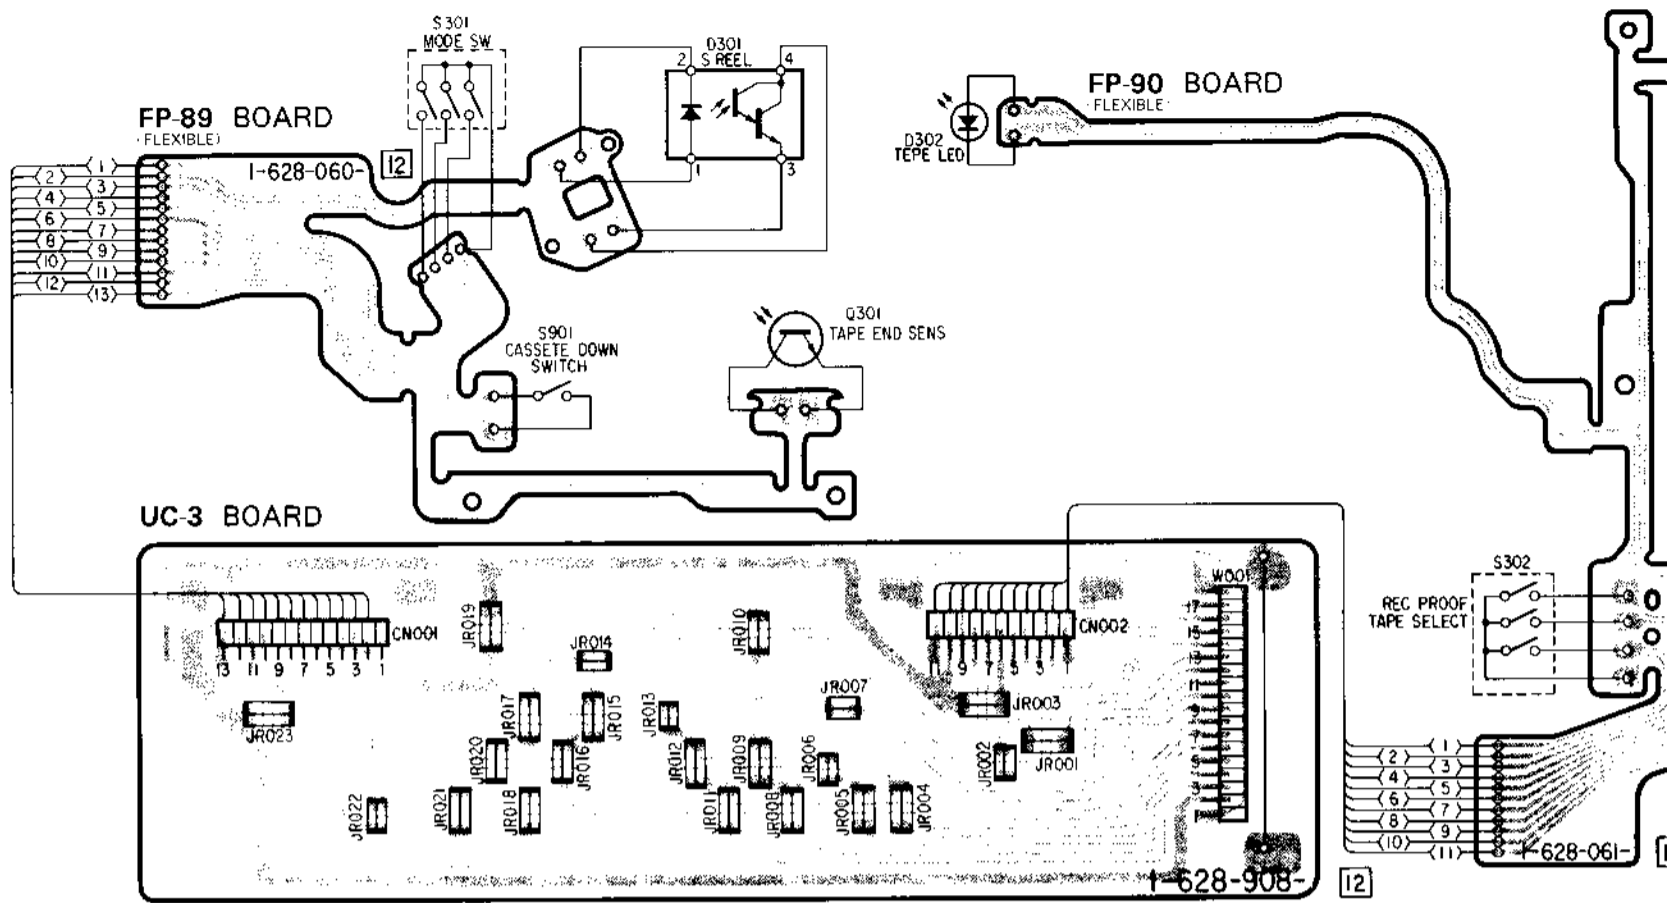


CM-13 BOARD (COMPONENT SIDE)

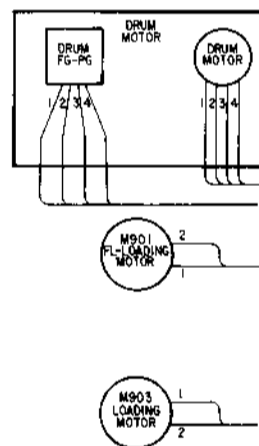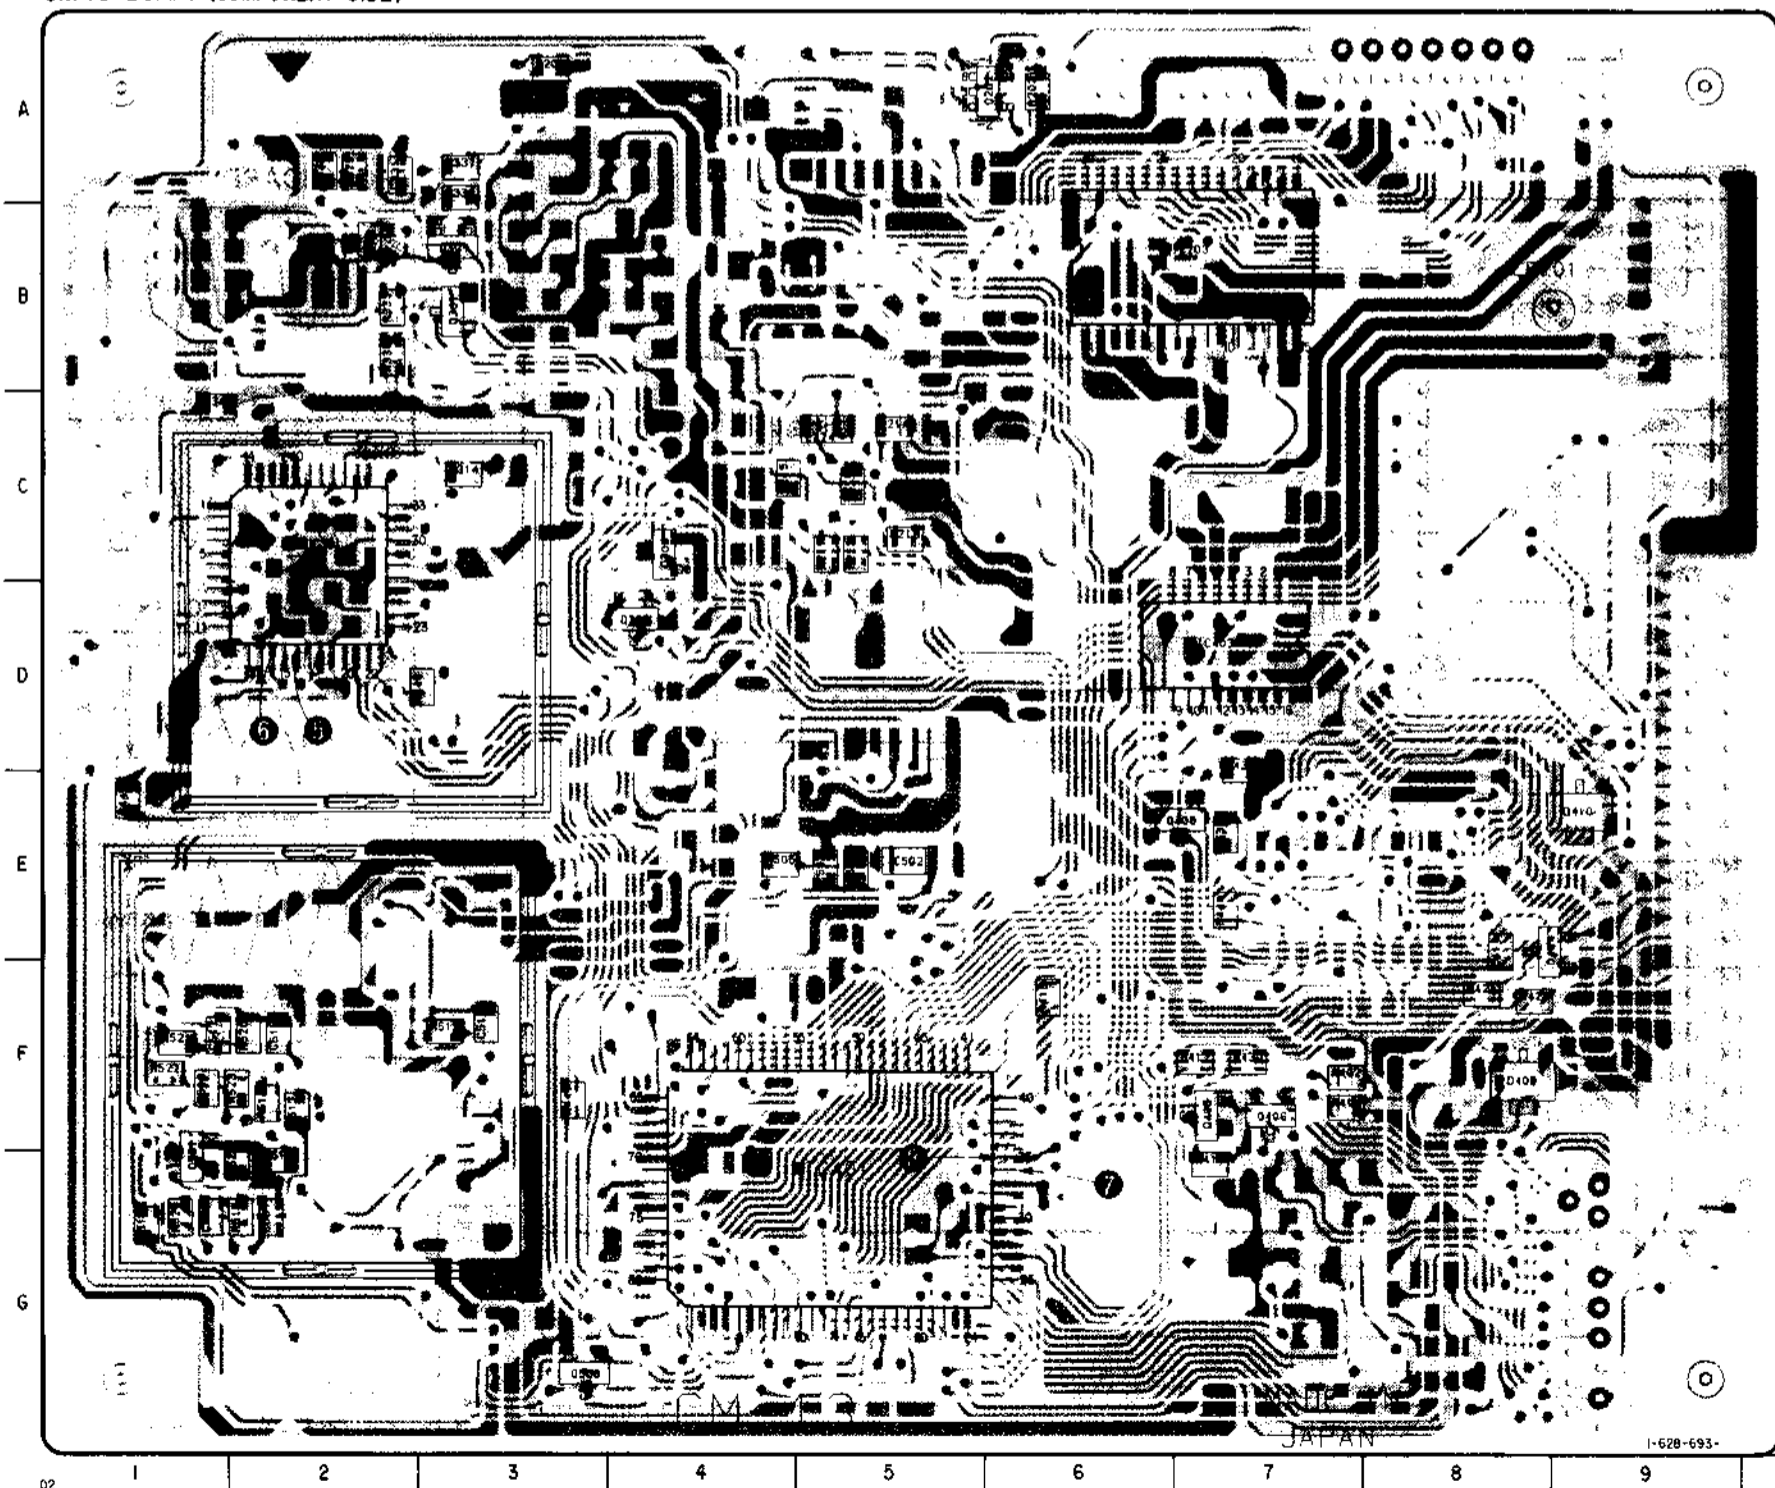

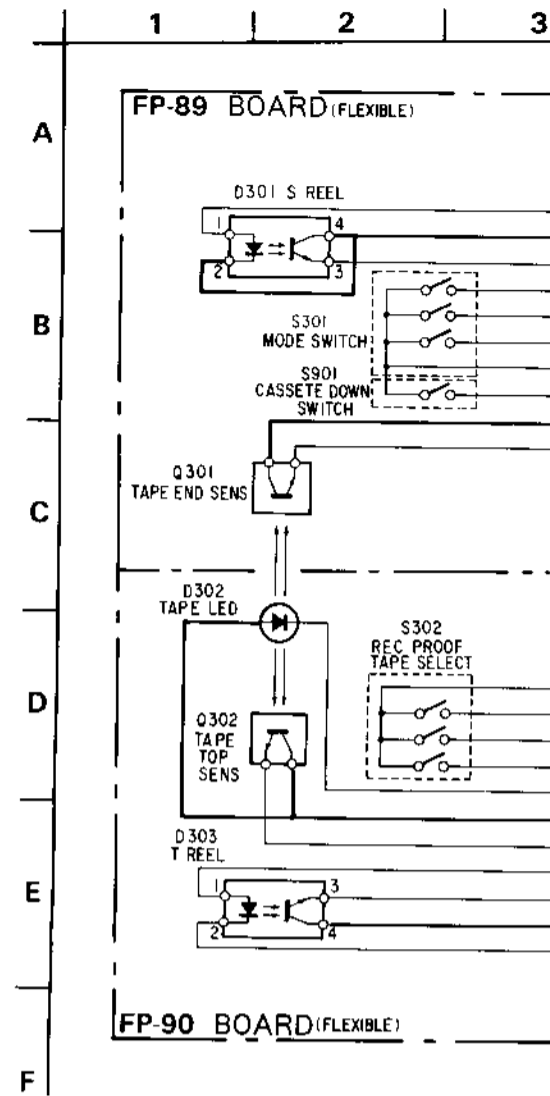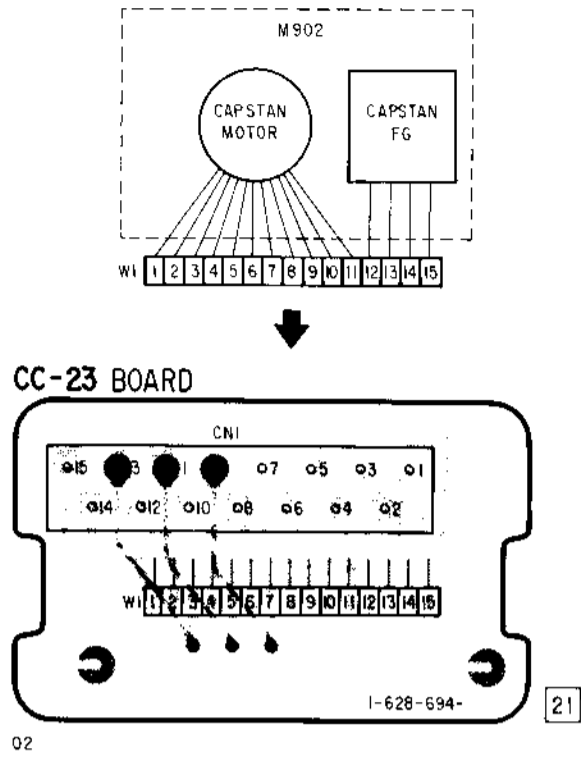
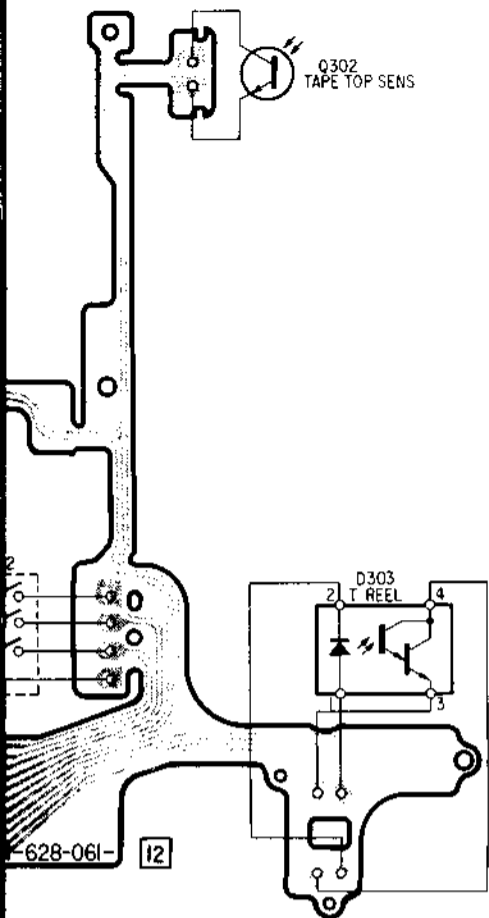


CM-13 BOARD (CONDUCTOR SIDE)

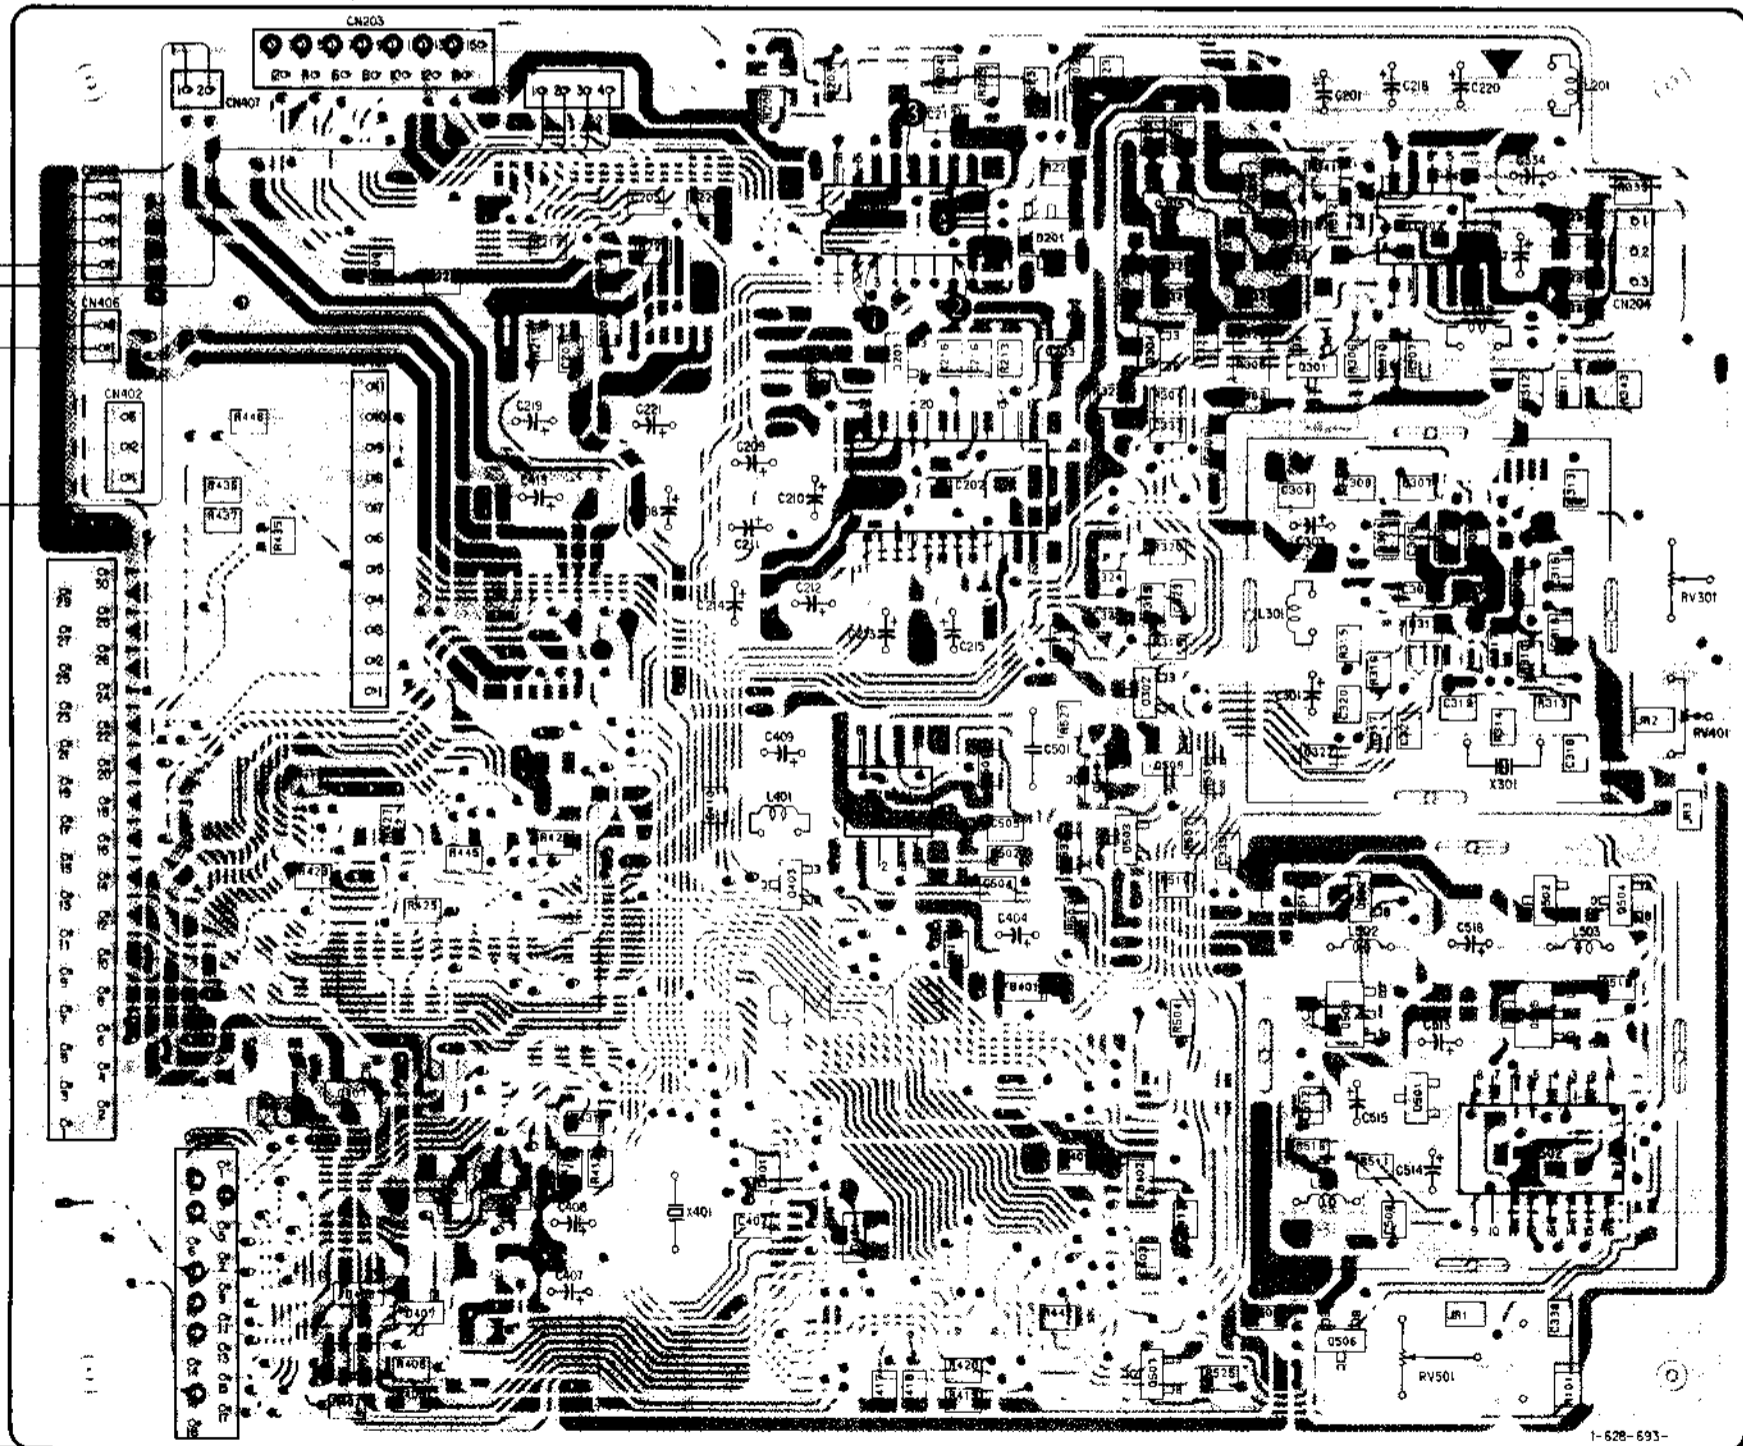

CM-13 Board


- D201 B-17
- D301 B-3
- D401 G-16
- D405 G-14
- D406 G-14
- D407 G-14
- D408 G-14
- D409 F-8
- D410 E-9
- D501 F-19
- D502 E-20
- D503 E-18
- IC201 B-16
- IC202 C-17
- IC203 B-7
- IC301 C-2
- IC302 B-19
- IC401 G-5
- IC403 D-7
- IC501 E-16
- IC502 G-20
- Q201 B-16
- Q202 A-6
- Q203 B-17
- Q301 B-19
- Q302 D-18
- Q303 D-4
- Q304 B-18
- Q305 B-18
- Q306 A-18
- Q307 B-3
- Q308 B-2
- Q309 C-4
- Q403 E-16
- Q404 E-8
- Q405 F-7
- Q406 F-7
- Q407 F-14
- Q408 E-7
- Q409 G-14
- Q410 G-14
- Q501 G-1
- Q502 E-19
- Q503 F-19
- Q504 E-20
- Q505 F-20
- Q506 G-19
- Q507 G-18
- Q508 G-3
- Q509 E-18
- Q510 E-17

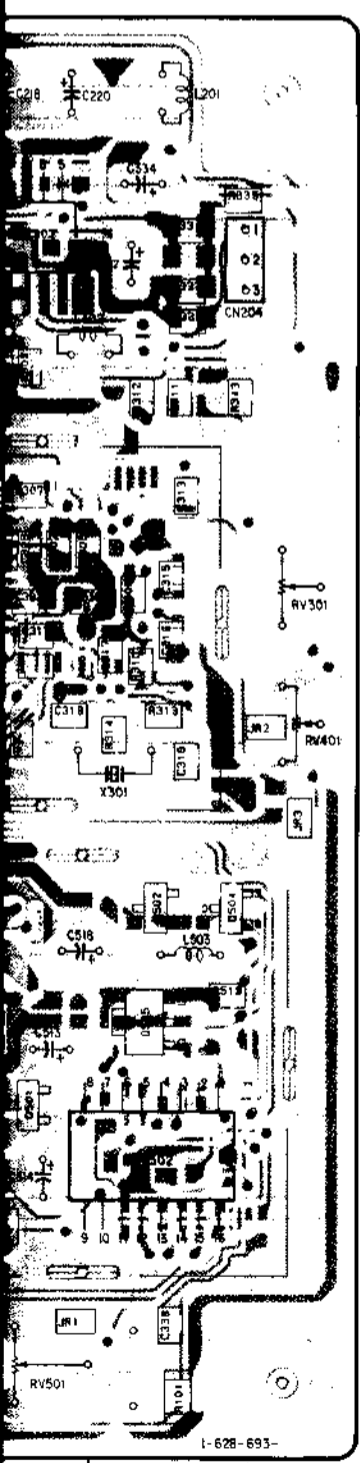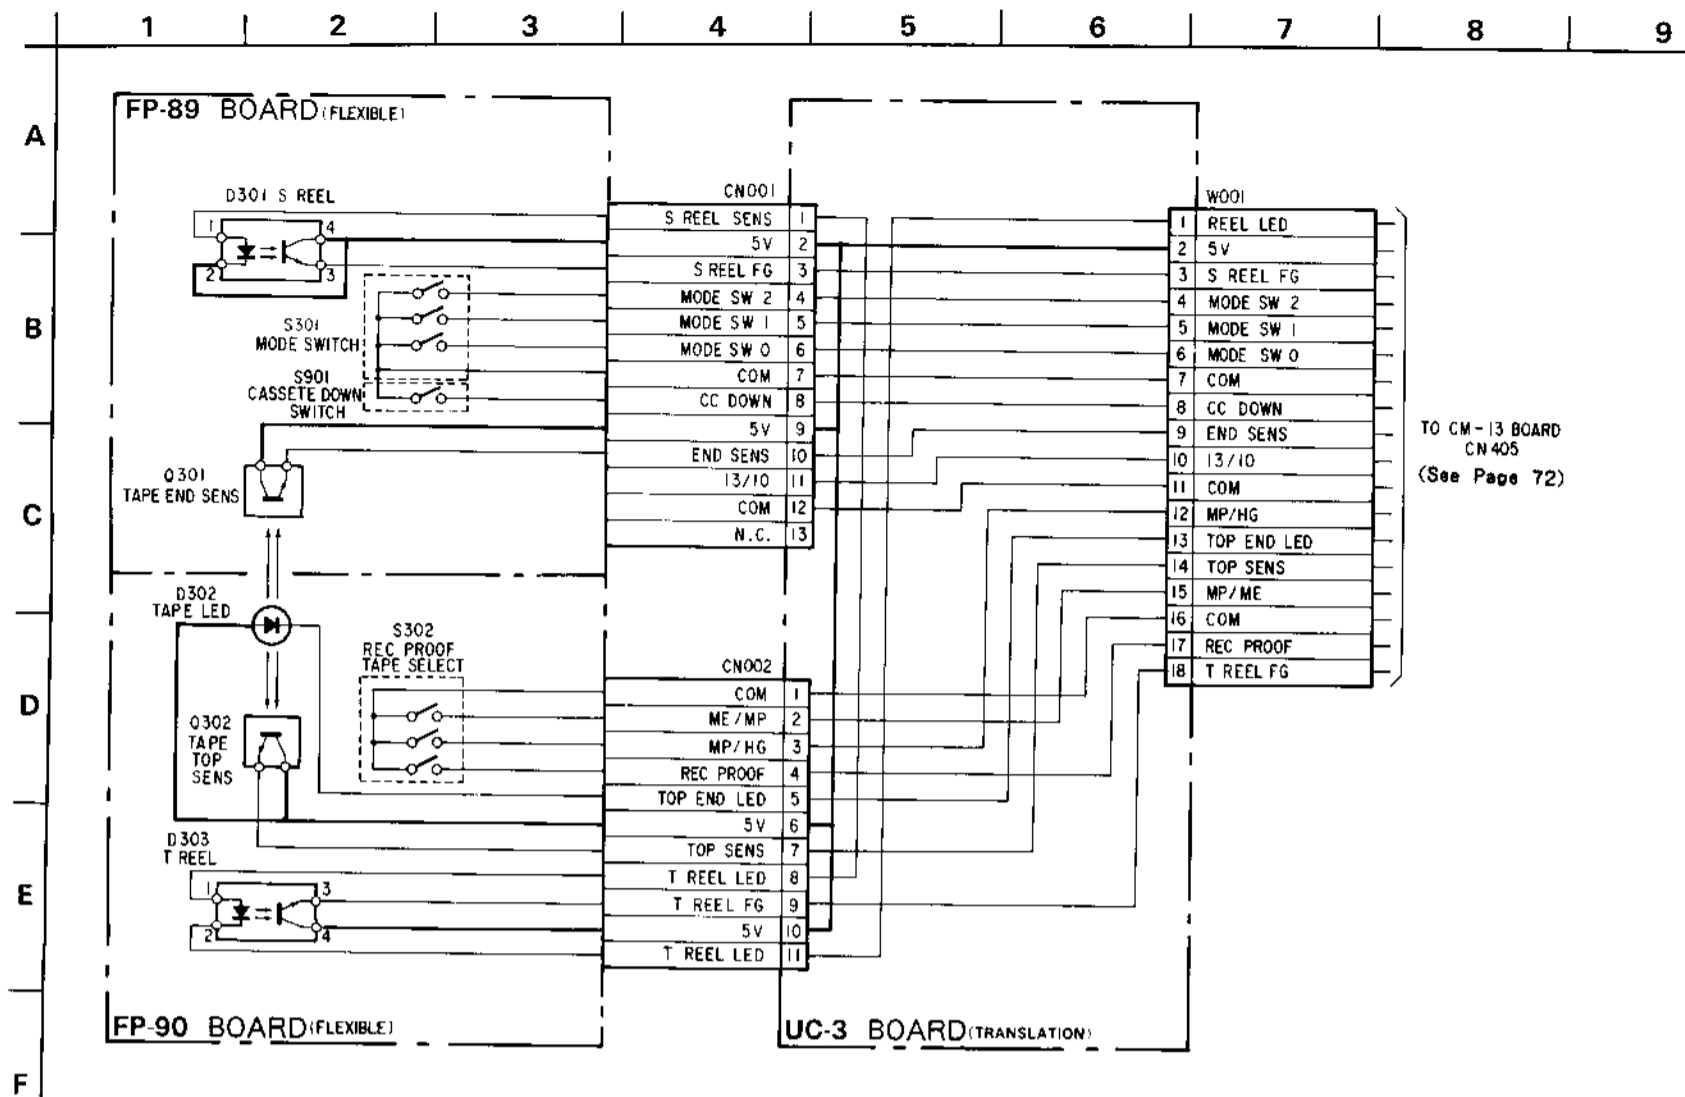

CM-13 Board

D201	B-17
D301	B-3
D401	G-16
D405	G-14
D406	G-14
D407	G-14
D408	G-14
D409	F-8
D410	E-9
D501	F-19
D502	E-20
D503	E-18
IC201	B-16
IC202	C-17
IC203	B-7
IC301	C-2
IC302	B-19
IC401	G-5
IC403	D-7
IC501	E-16
IC502	G-20
Q201	B-16
Q202	A-6
Q203	B-17
Q301	B-19
Q302	D-18
Q303	D-4
Q304	B-18
Q305	B-18
Q306	A-18
Q307	B-3
Q308	B-2
Q309	C-4
Q403	E-16
Q404	E-8
Q405	F-7
Q406	F-7
Q407	F-14
Q408	E-7
Q409	G-14
Q410	G-14
Q501	G-1
Q502	E-19
Q503	F-19
Q504	E-20
Q505	F-20
Q506	G-19
Q507	G-18
Q508	G-3
Q509	E-18
Q510	E-17

CM-13 BOARD

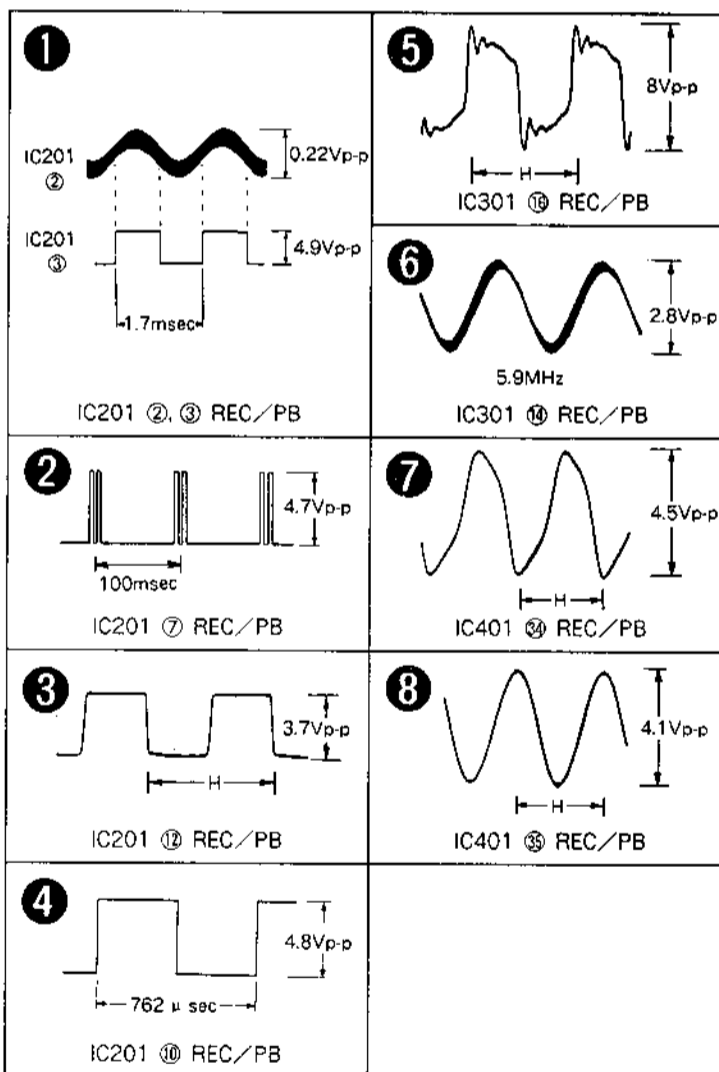

For printed wiring boards :

- : indicates a lead wire mounted on the component side.
- : Through hole..
- : Pattern from the side which enables seeing.
- : Pattern of the rear side.
- Circled numbers refer to waveforms.

Note :

Conductor side : Parts on the conductor side being seen from the conductor are stated.

Component side : Parts on the component side being seen from the component are stated.


When indicating parts by reference number, please include the board name.

TO CM-13 BOARD
CN 405
(See Page 72)

IN-41 (TRANSMISSION), FR-38 (DISPLAY CONTROL KEY) PRINTED WIRING BOARDS

-Ref. No. IN-41 BOARD : 7,000 Series, FR-38 BOARD : 6,000 Series-

IN-41 BOARD (CONDUCTOR SIDE)

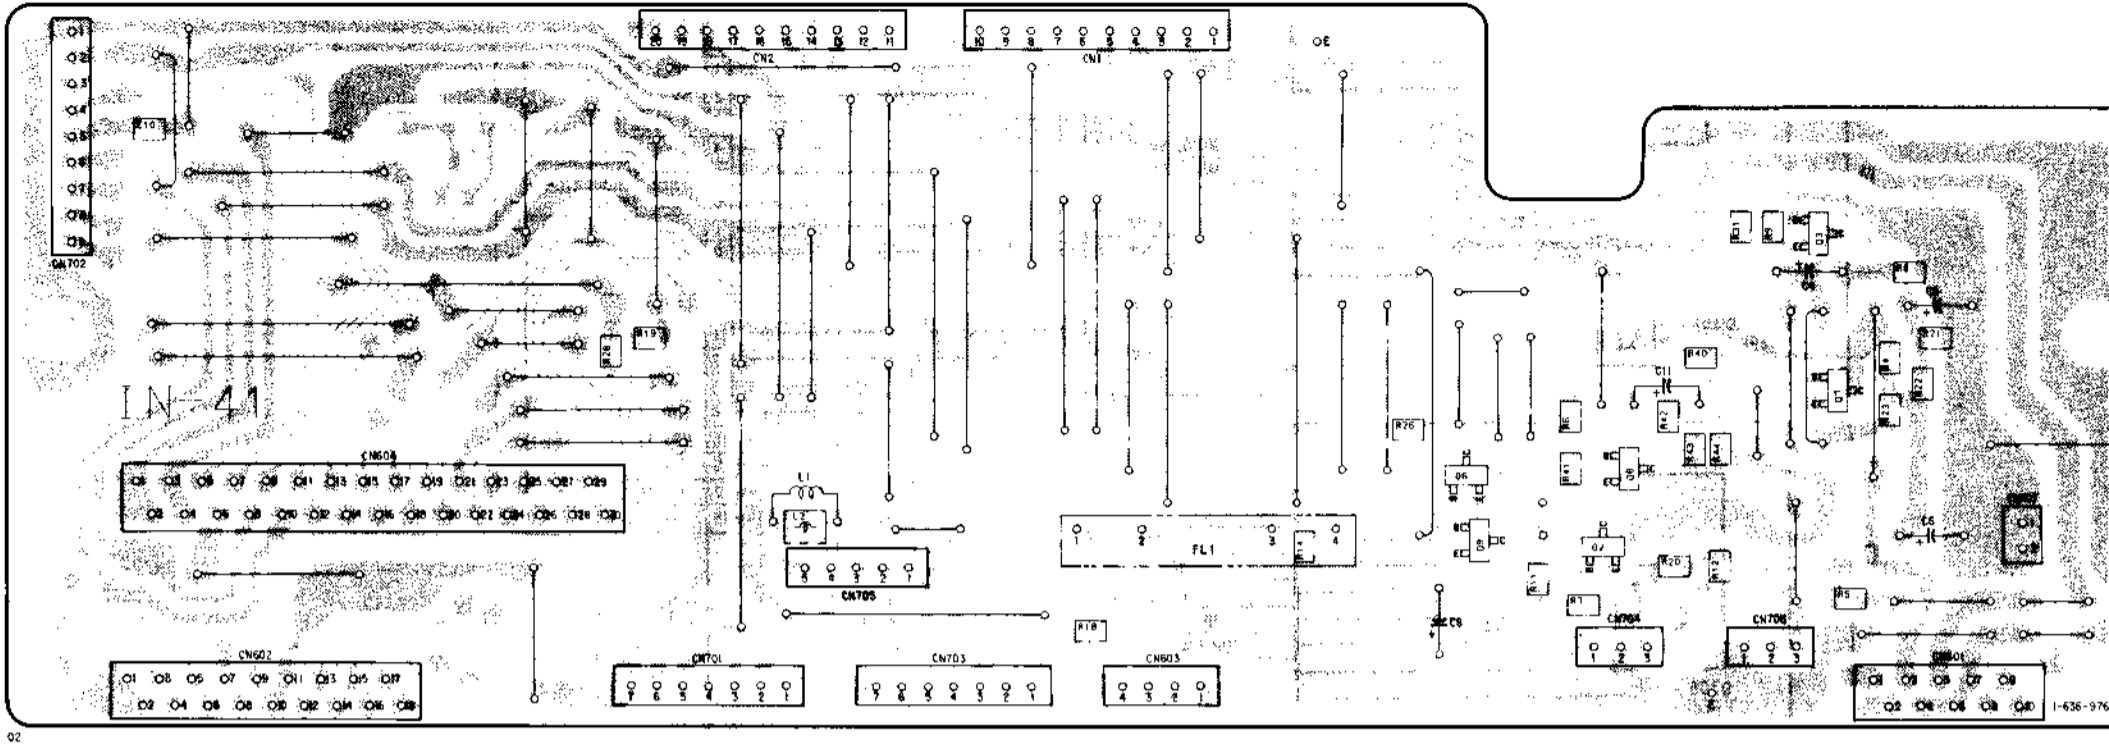

IN-41 (TRANSMISSION), FR-38 (DISPLAY CONTROL KEY) SCHEMATIC DIAGRAMS


-Ref. No. IN-41 BOARD : 7,000 Series, FR-38 BOARD : 6,000 Series-


For printed wiring boards :

- ○ : indicates a lead wire mounted on the component side.
- ● : Through hole.
- ○ : Pattern from the side which enables seeing.
- ○ : Pattern of the rear side.
- ○ : Circled numbers refer to waveforms.

Note :
 Conductor side : Parts on the conductor side being seen from the conductor are stated.
 Component side : Parts on the component side being seen from the component are stated.


When indicating parts by reference number, please include the board name.

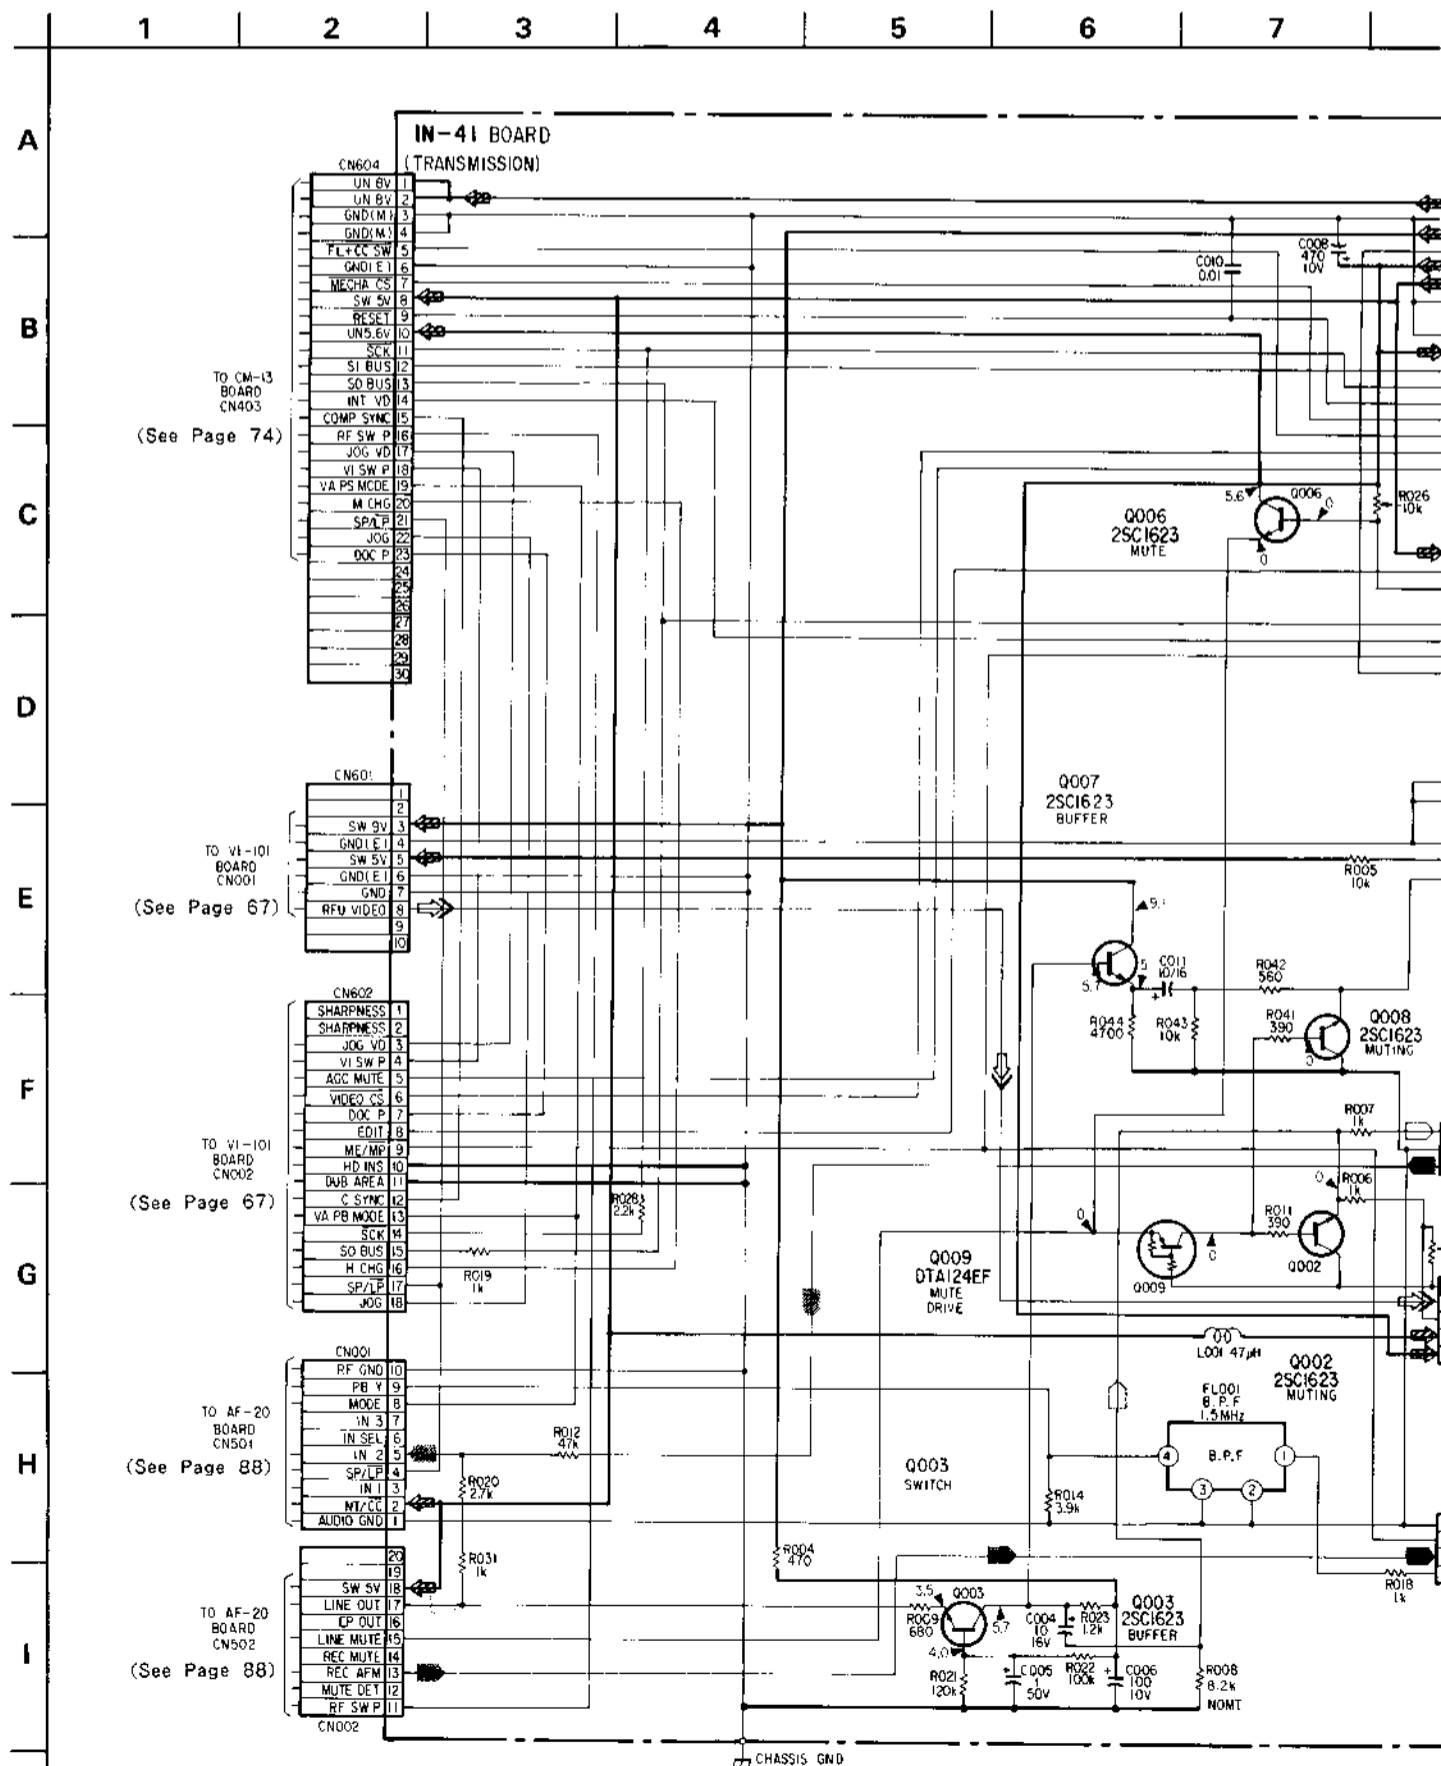

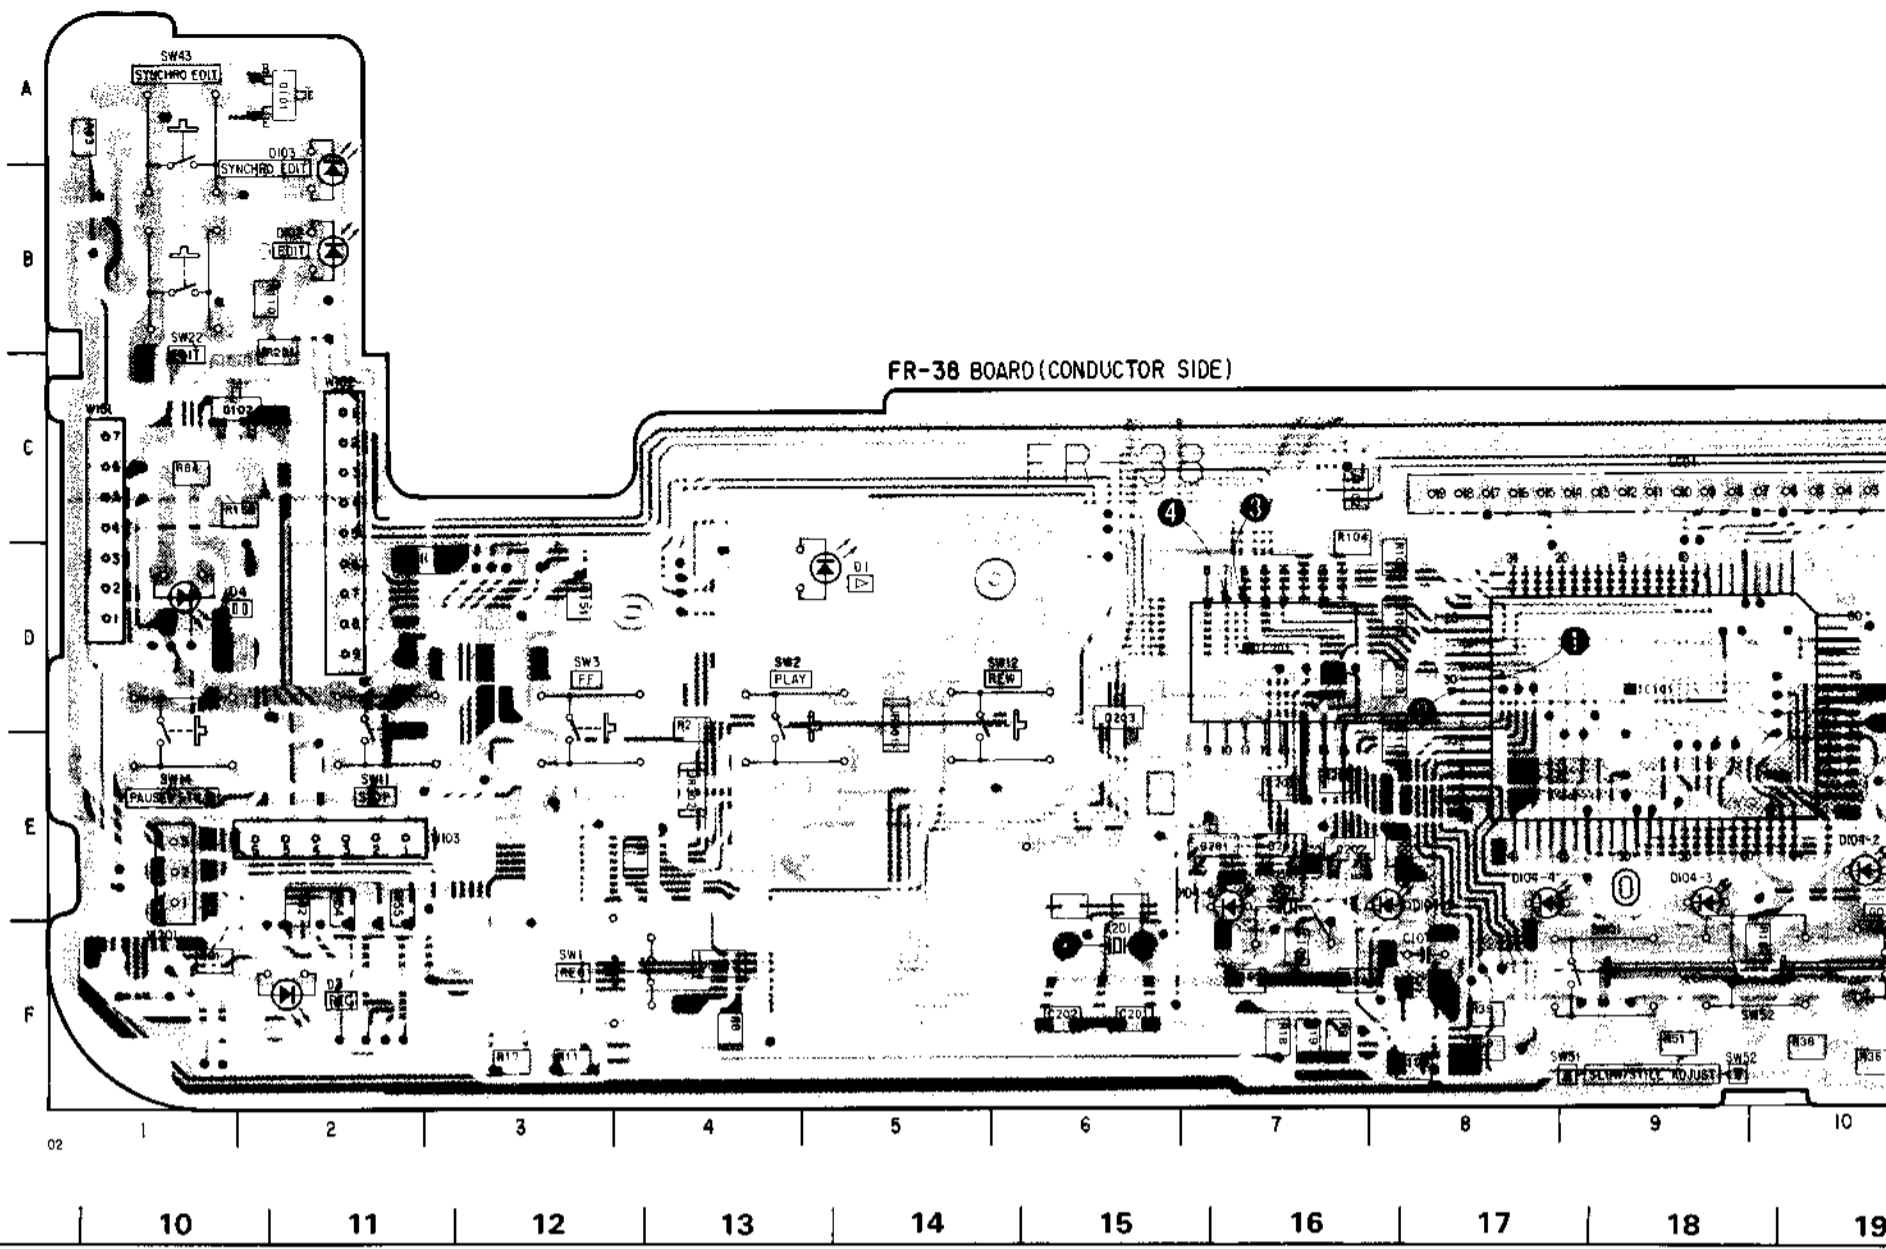


FR-38 BOARD (CONDUCTOR SIDE)

8 9 10 11 12 13 14 15 16 17 18 19

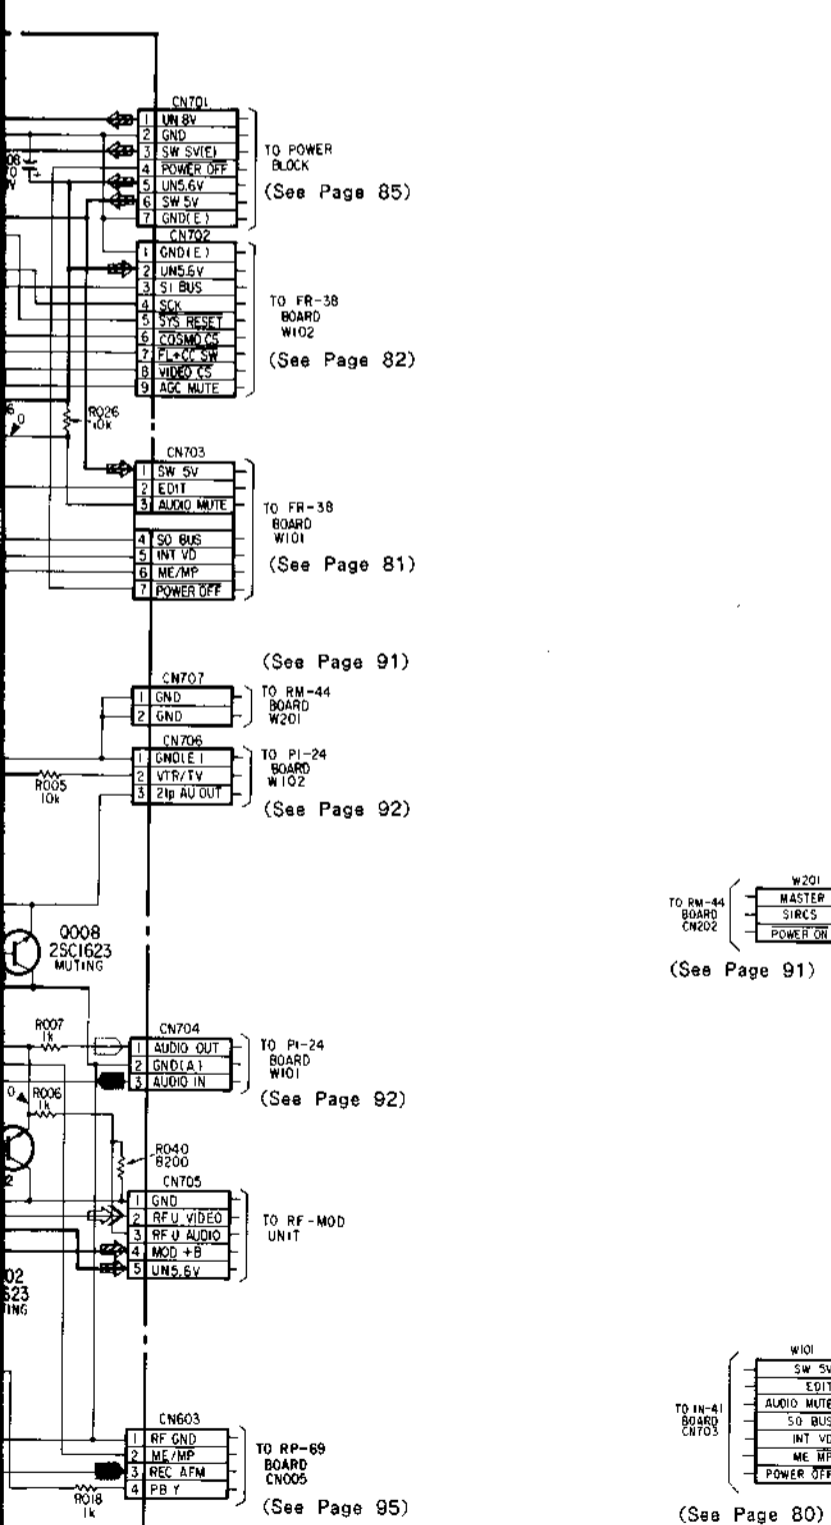


FR-38 BOARD (DISPLAY CONTROL KEY)

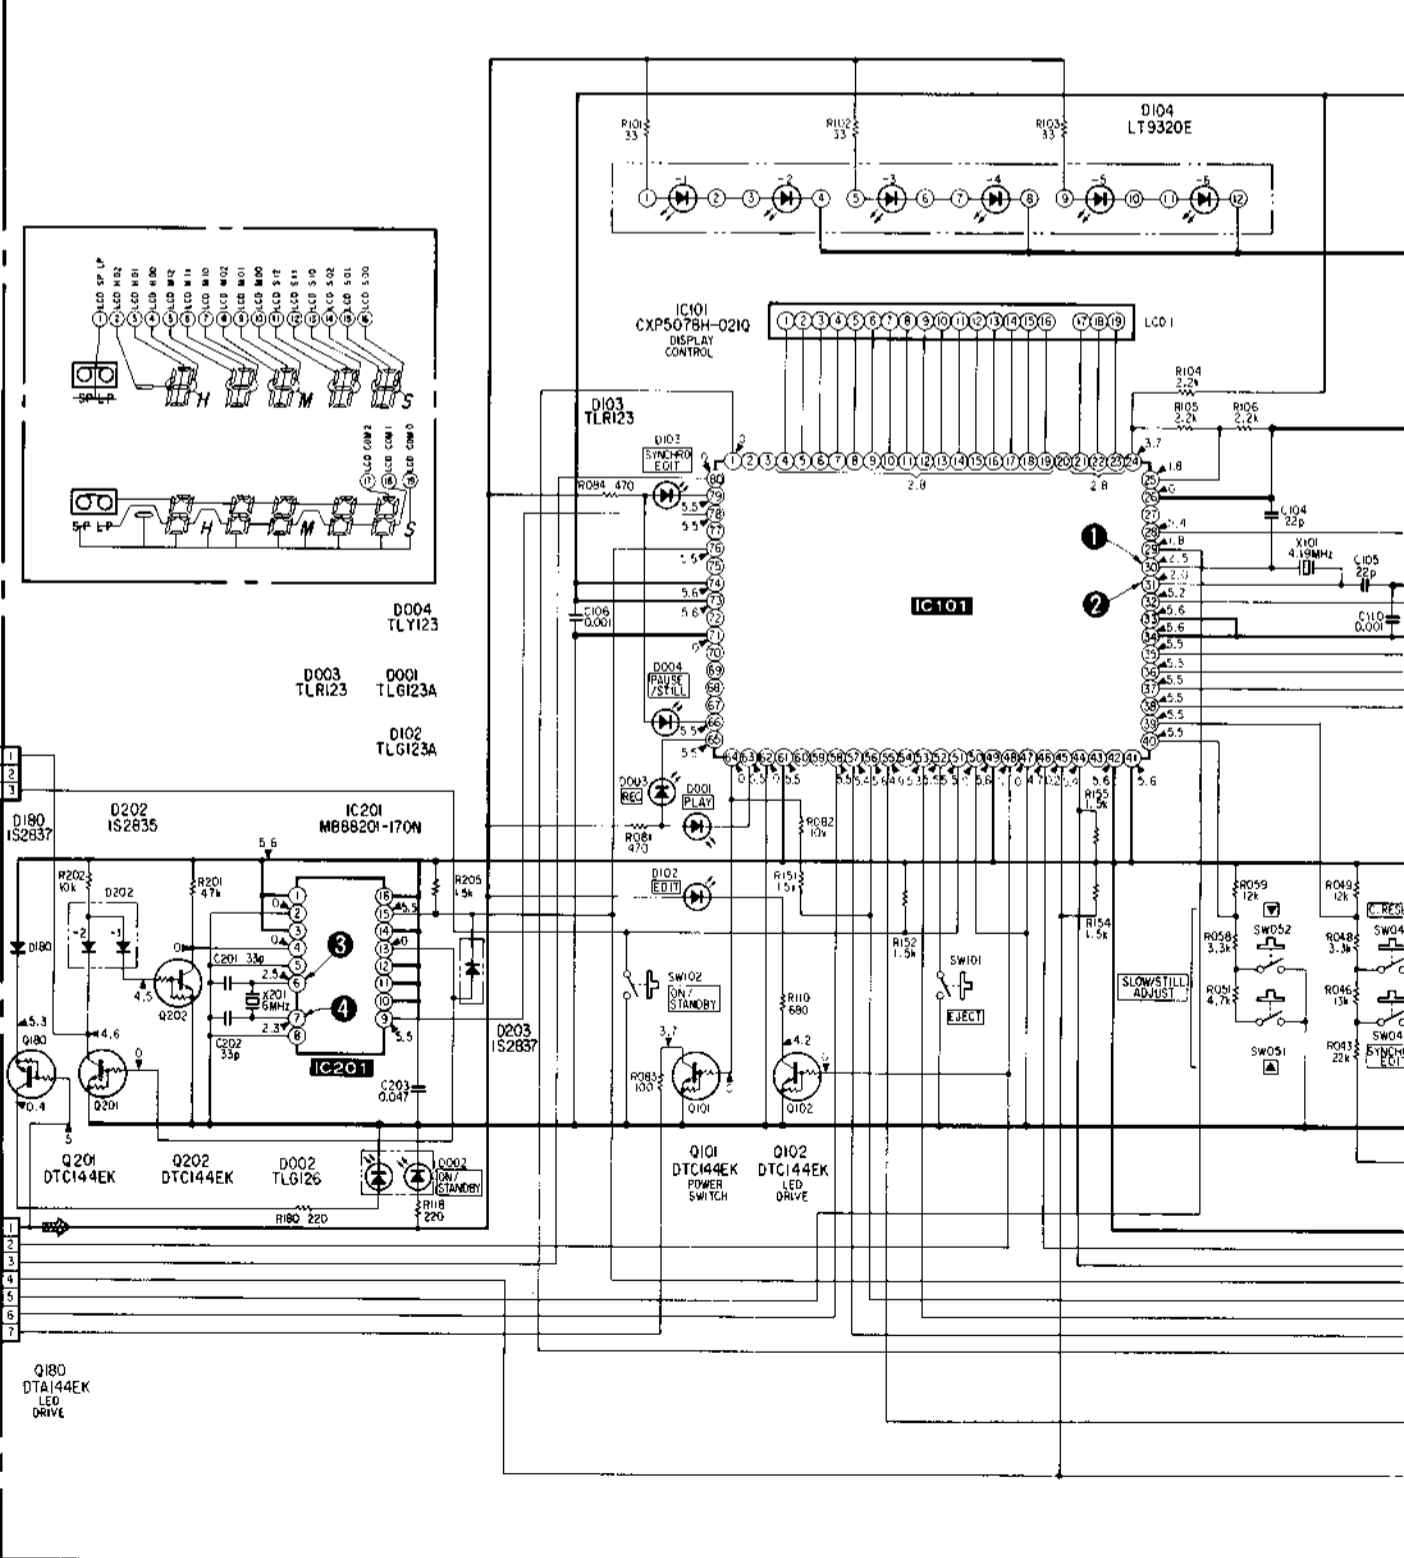

- Signal path
- ➡ : PB Y/CHROMA Signal
- ➡ : REC AUDIO Signal
- ➡ : PB AUDIO Signal


OR SIDE)

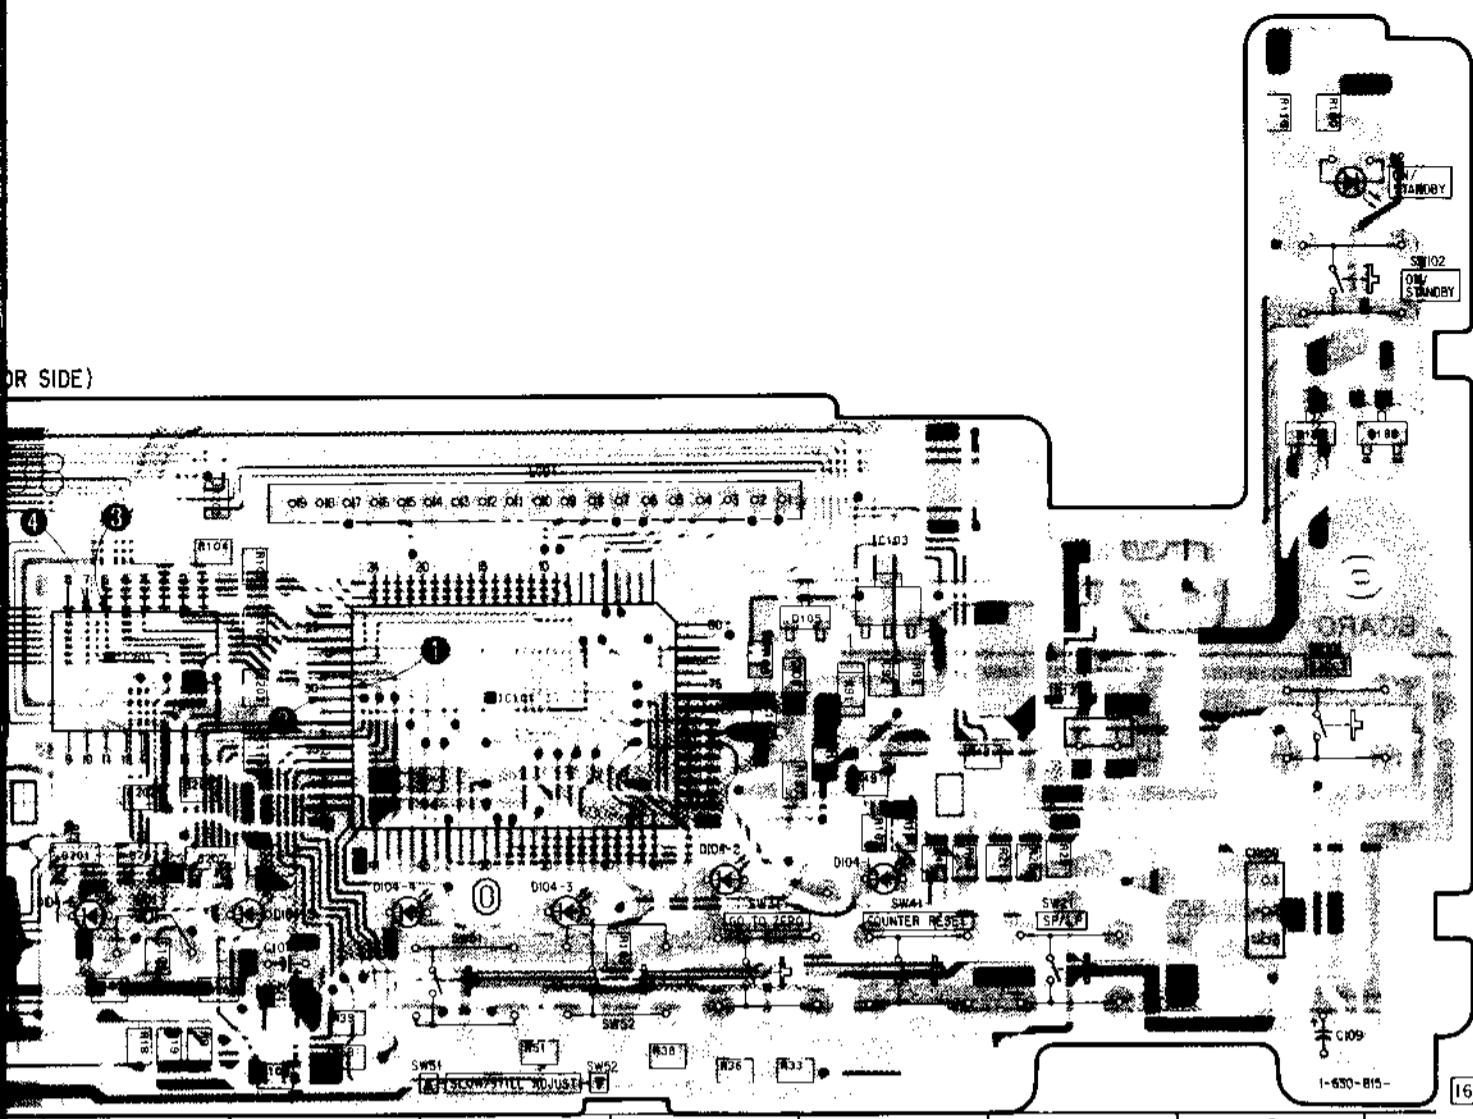


FR-38 Board

D001	D-5
D002	B-13
D003	F-2
D004	D-1
D102	B-2
D103	A-2
D105	D-11
D106	D-12
D107	E-6
D180	C-13
D202	E-7
D203	D-6
IC101	D-9
IC102	D-12
IC103	D-11
IC201	D-7
Q101	A-2
Q102	C-1
Q103	D-13
Q104	D-12
Q180	C-18
Q201	E-7
Q202	E-7
Q401	E-4


16 17 18 19 20 21 22 23 24 25

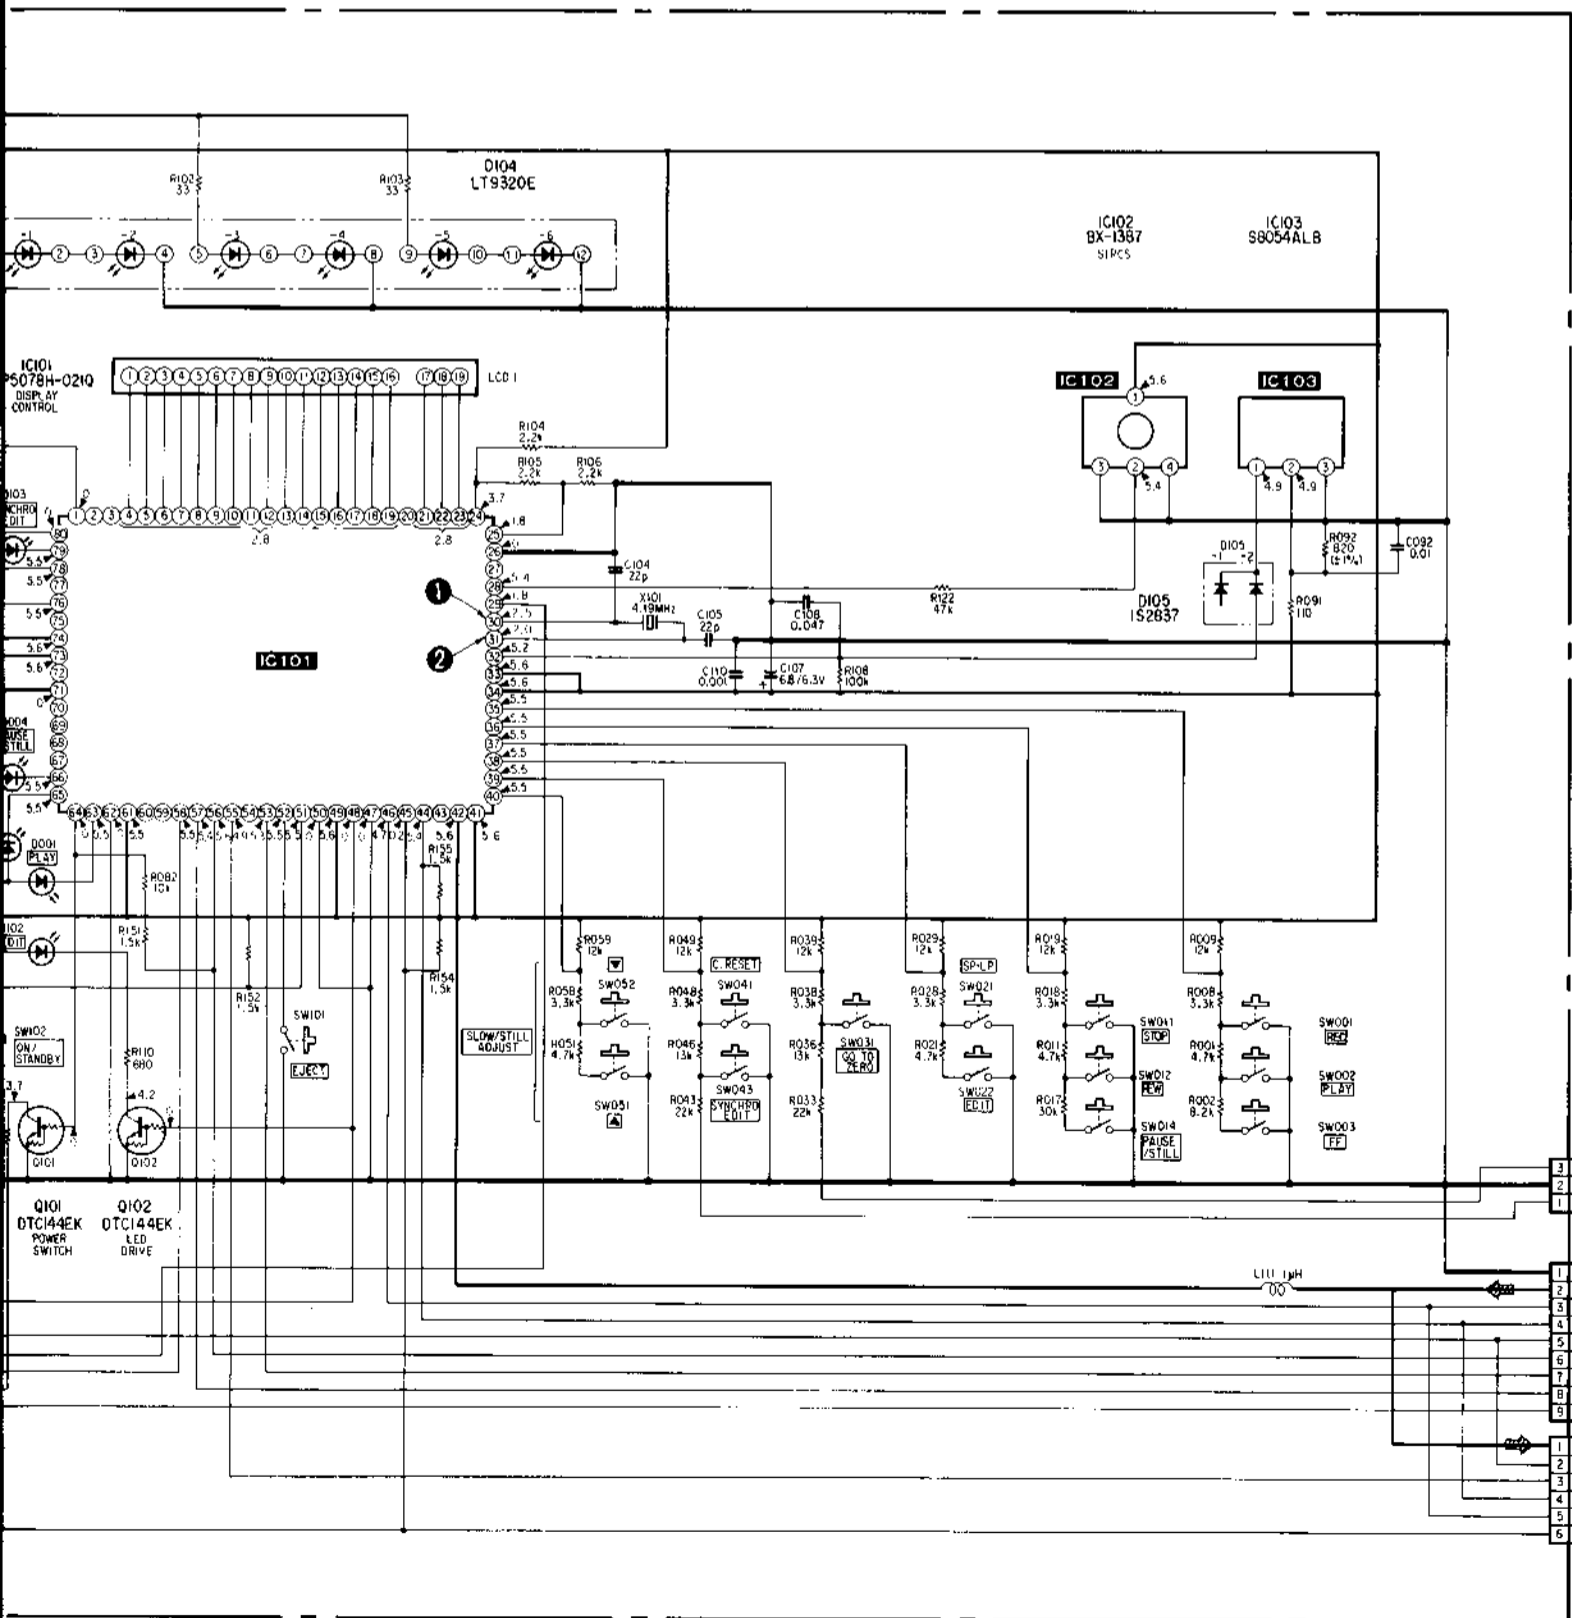

FR-38 BOARD

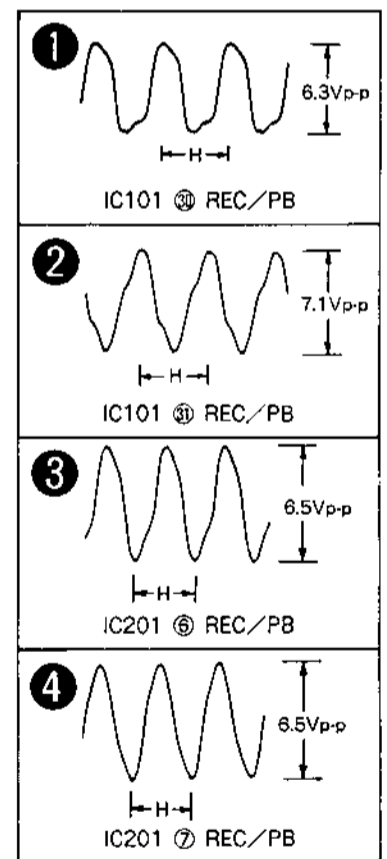

TEST PIN

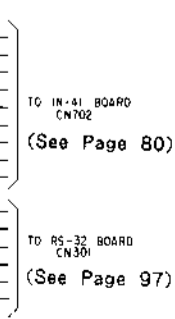


FC-43 (FEED BACK COMB) PRINTED WIRING BOARDS

-Ref. No. FC-43 BOARDS : 4,000 Series-

FC-43 (FEED BACK COMB) PRINTED WIRING BOARDS

-Ref. No. FC-43 BOARDS : 4,000 Series-

FC-43 BOARD (CONDUCTOR SIDE)

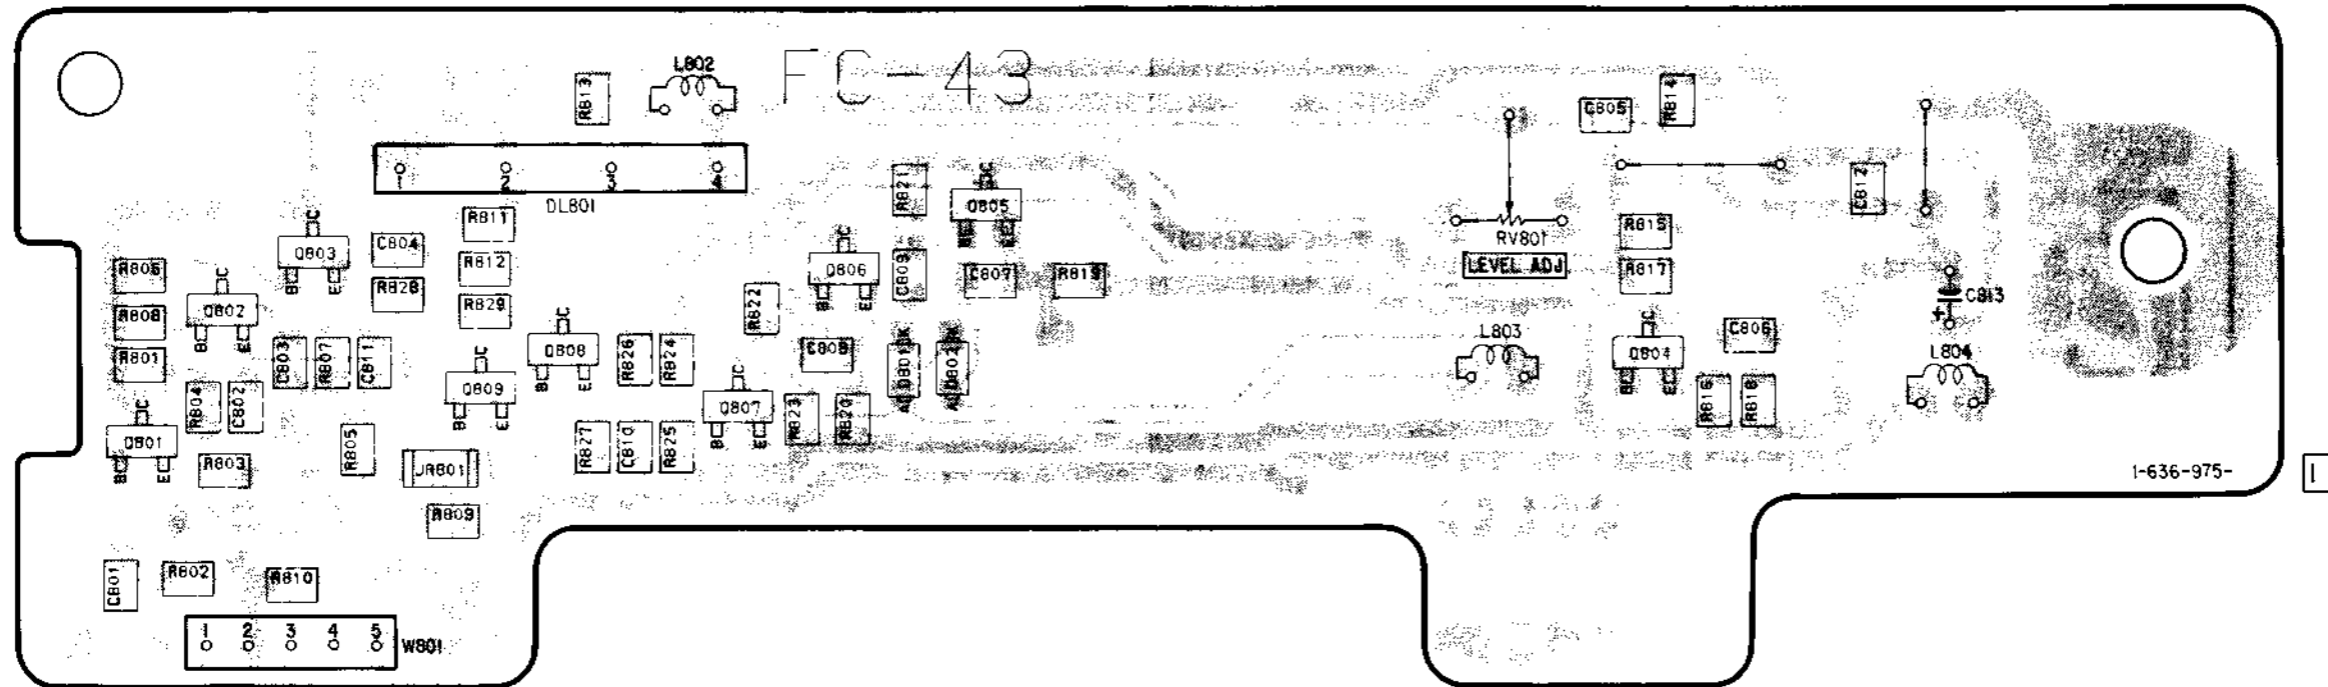

02

A
B
C
D
E
F
G
H
I

Note:
When
ence
the b


FC-43 (FEED BACK COMB) SCHEMATIC DIAGRAMS



-Ref. No. FC-43 BOARD : 4,000 Series-

1 2 3 4 5 6 7 8 9 10 11 12 13

A
B
C
D
E
F
G
H
I

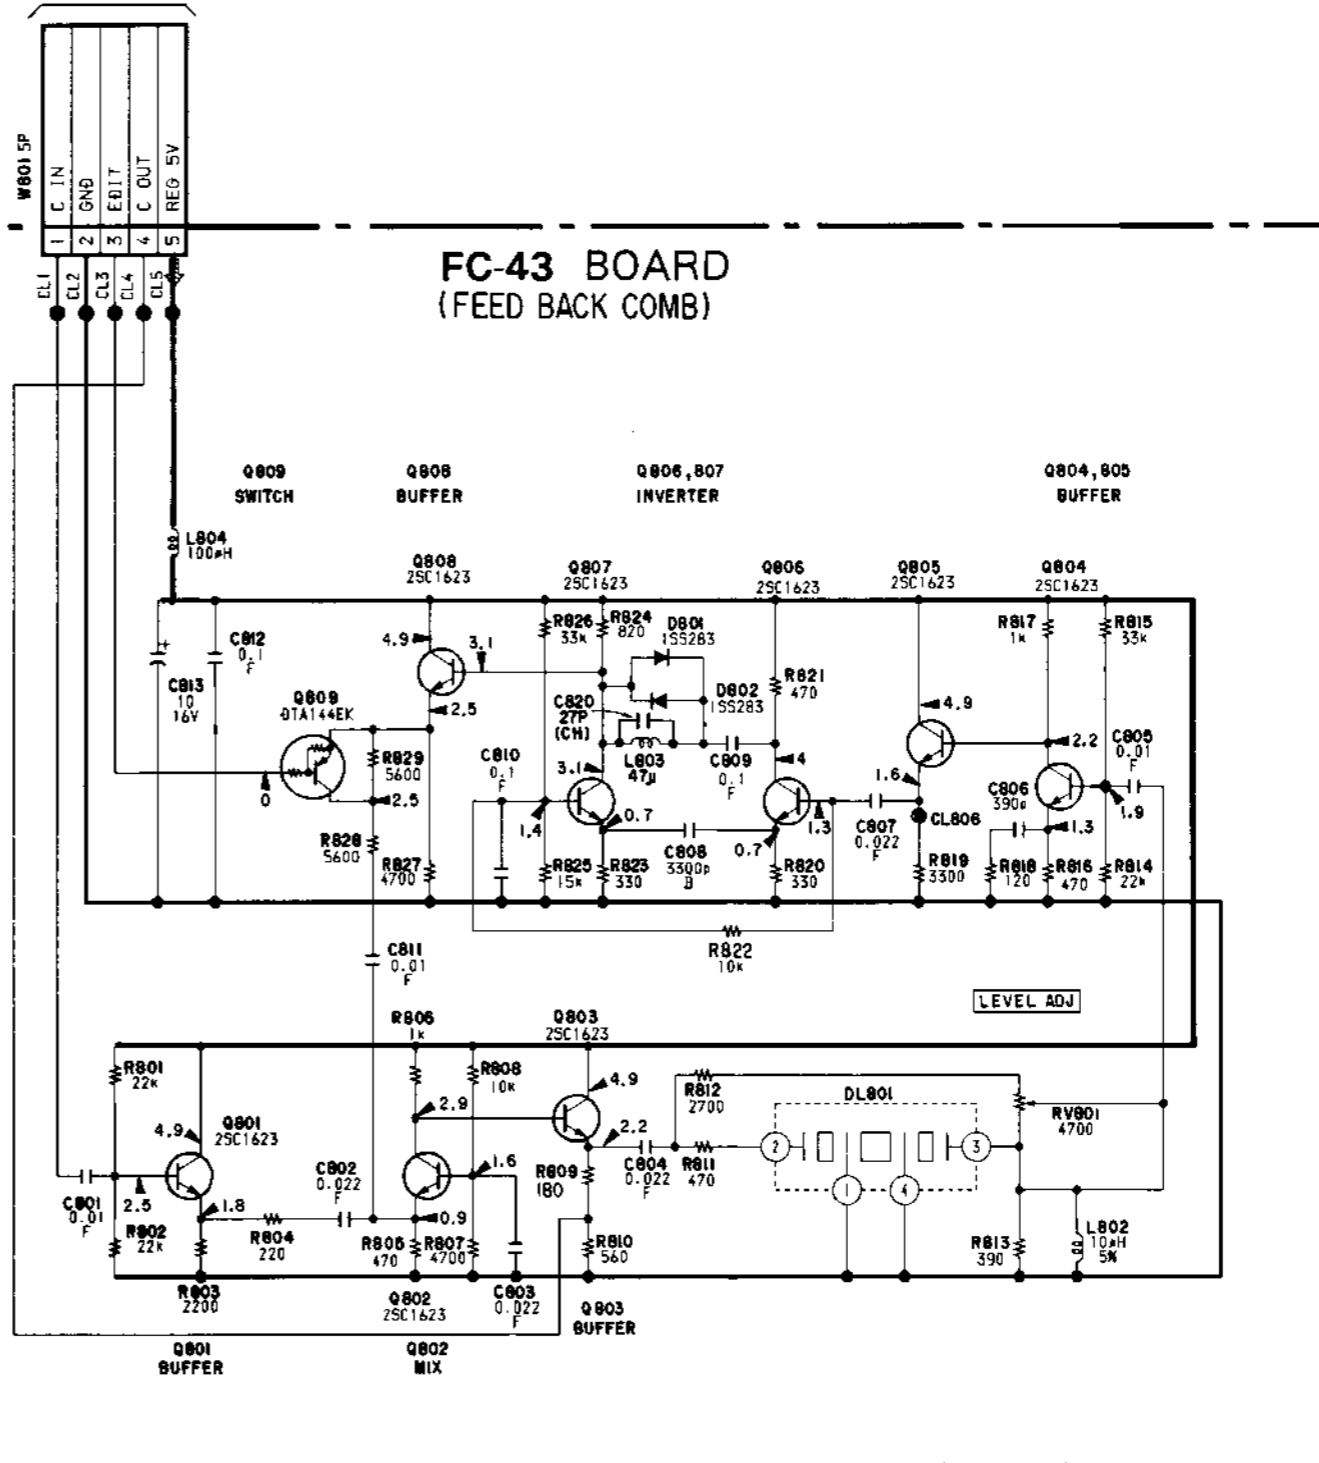TO VI-101 BOARD CN007 (See Page 69)




Note: The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

AF-20 (AFM AUDIO) SCHEMATIC DIAGRAM

—Ref. No. AF-20 BOARD : 5,000 Series—

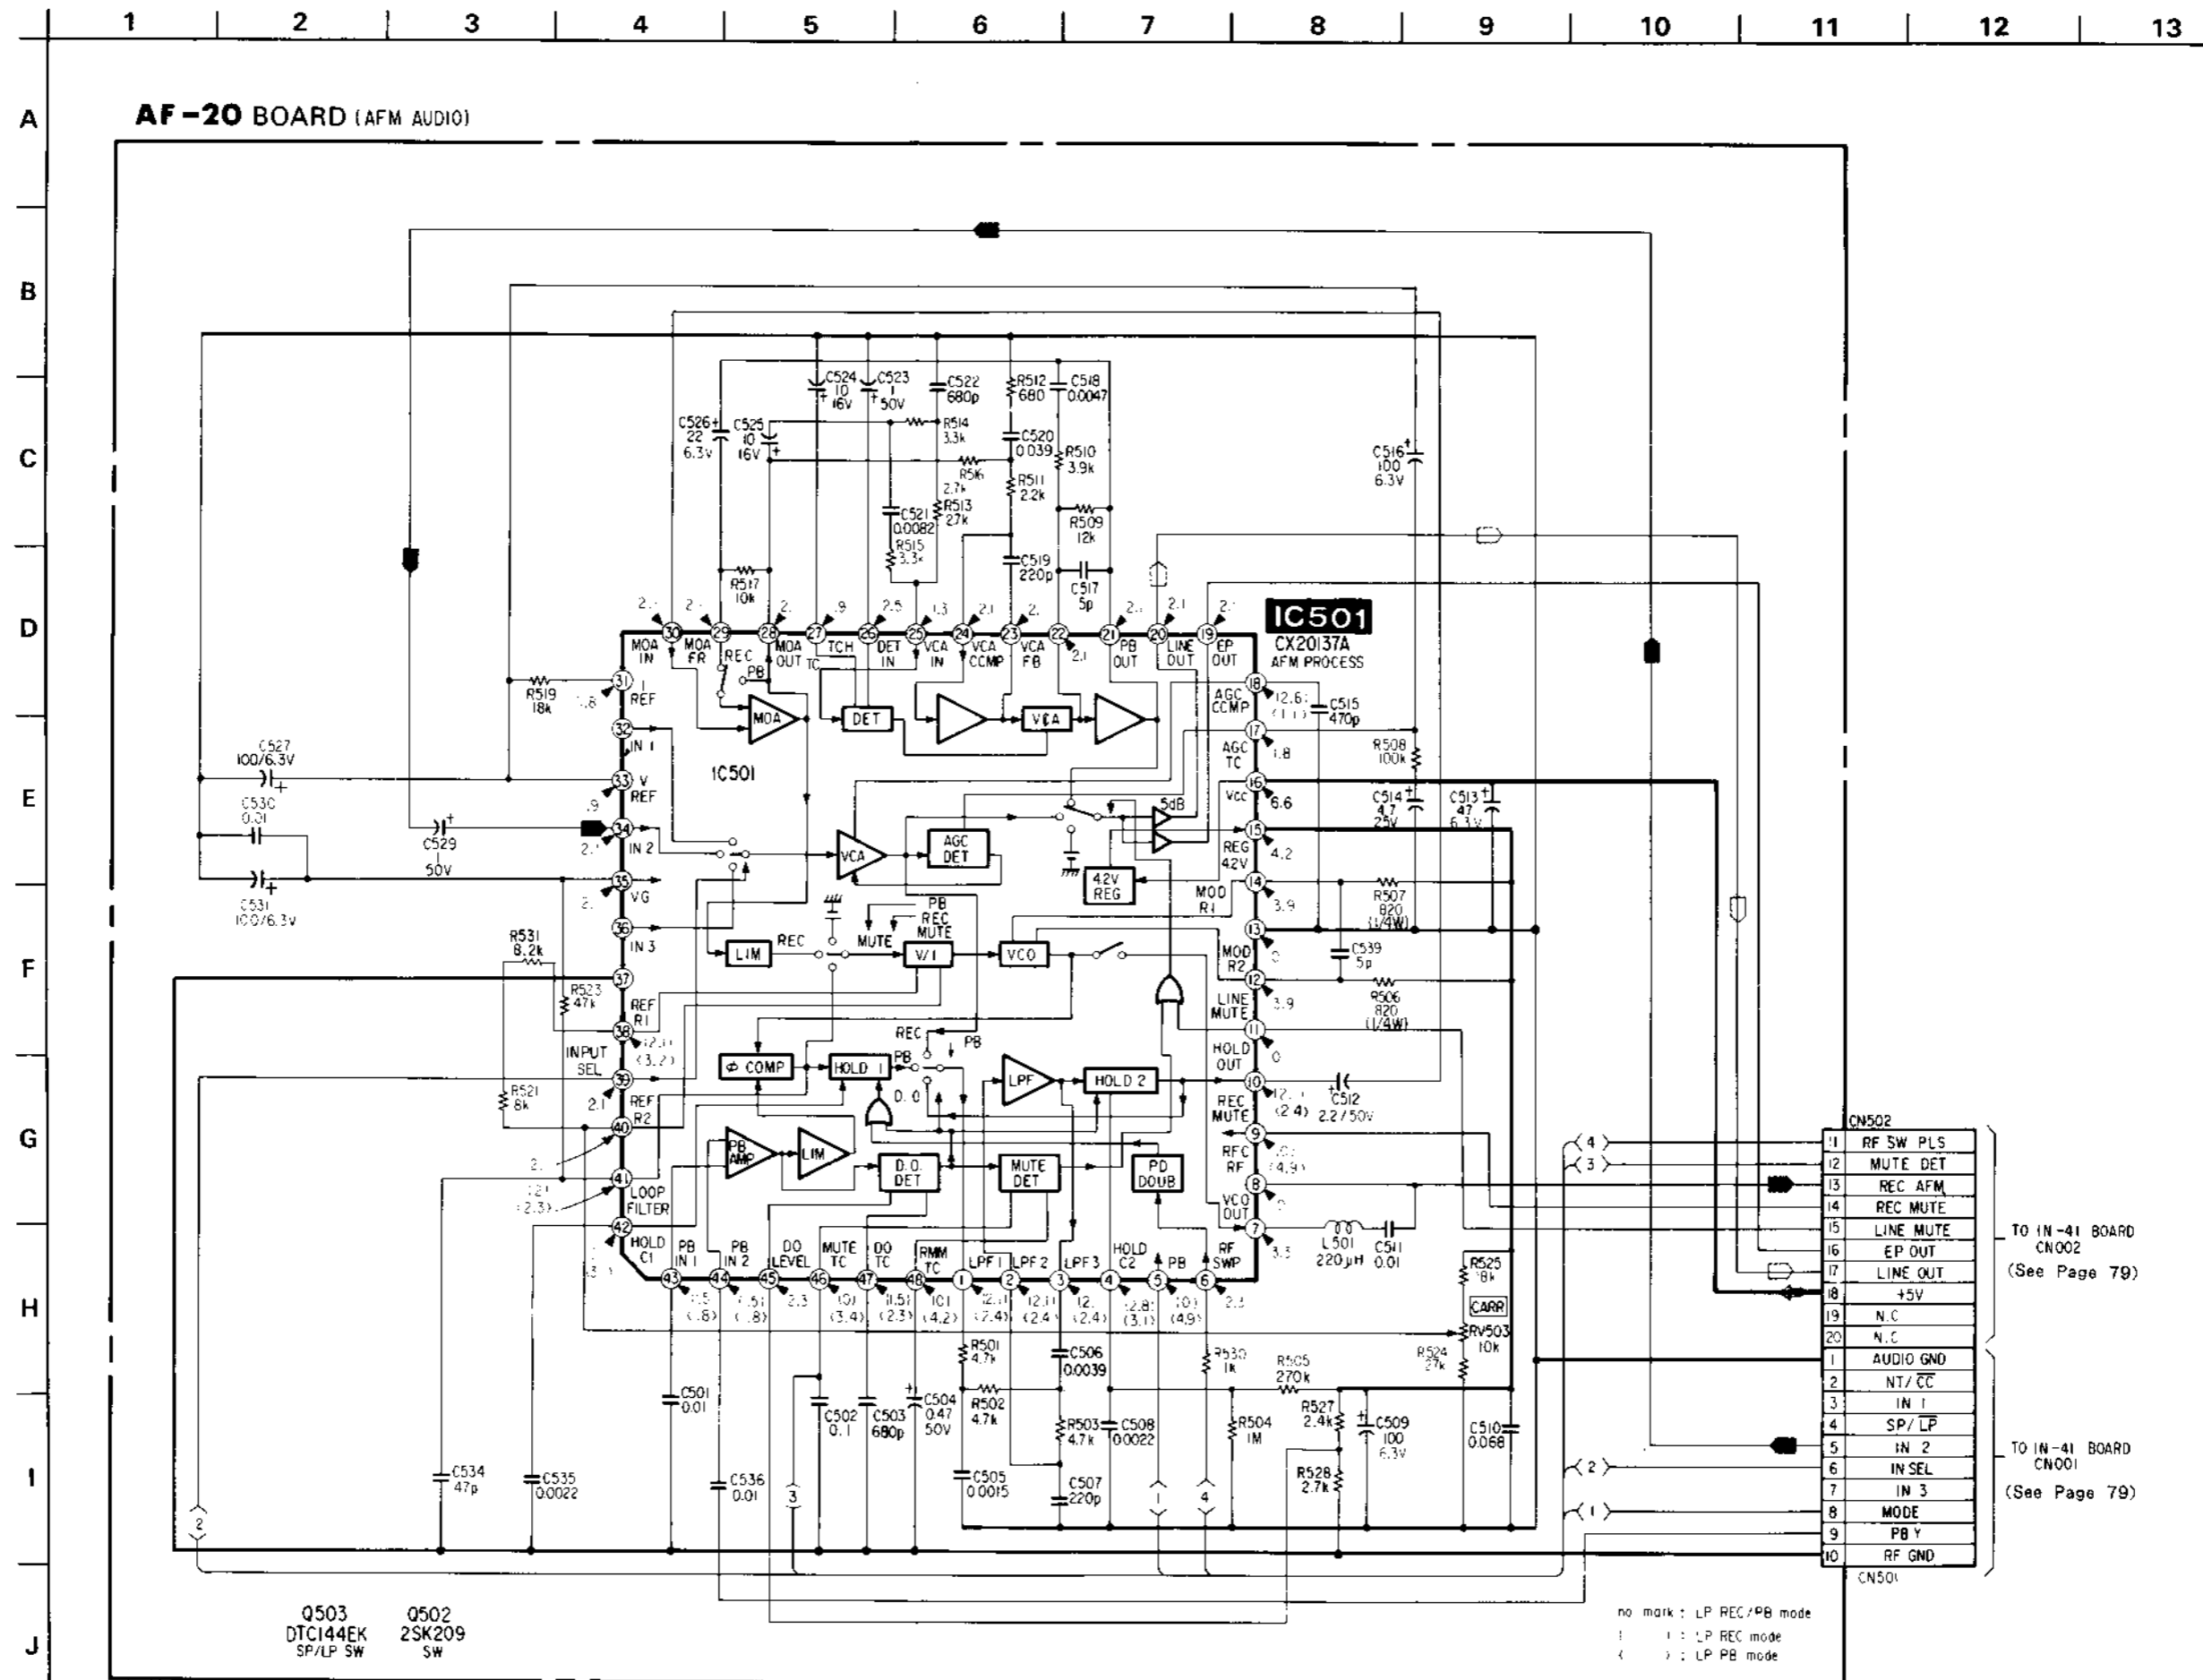

• Signal path
 ■ : REC AUDIO Sig
 □ : PB AUDIO Sig

When indicating parts by
 ence number, please
 the board name.

TO IN-41 BOARD
 CN002
 (See Page 79)


TO IN-41 BOARD
 CN001
 (See Page 79)

no mark : LP REC/PB mode
 1 : LP REC mode
 2 : LP PB mode

AF-20 (AFM AUDIO) PRINTED WIRING BOARD

-Ref. No. AF-20 BOARD : 5.000 Series-

AF-20 BOARD (CONDUCTOR SIDE)

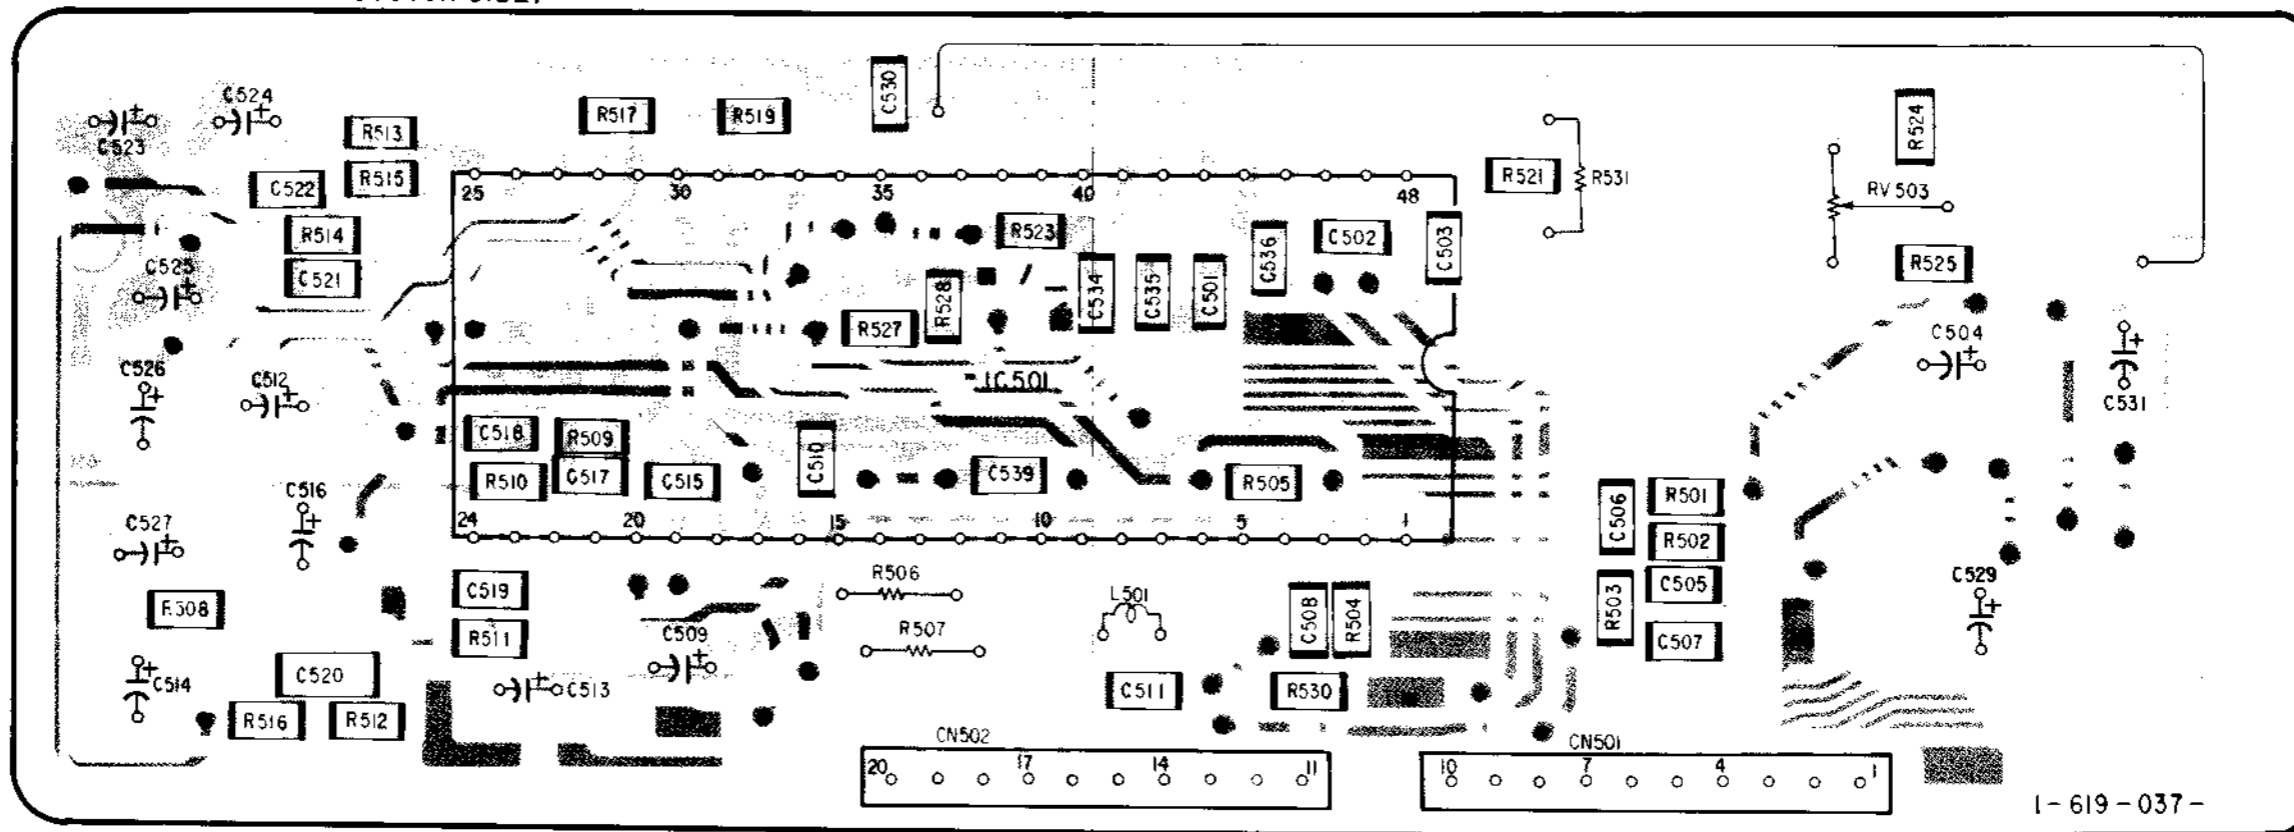

1-619-037-

02

13

For printed wiring boards :

- ○— : indicates a lead wire mounted on the component side.
- ● : Through hole..
- ○ : Pattern from the side which enables seeing.
- ○ : Pattern of the rear side.

Note :

Conductor side : Parts on the conductor side being seen from the conductor are stated.
 Component side : Parts on the component side being seen from the component are stated.

When indicating parts by reference number, please include the board name.

• Signal path

- ▶ : REC AUDIO Signal
- ◁ : PB AUDIO Signal



When indicating parts by reference number, please include the board name.

TO IN-41 BOARD
 CN002
 (See Page 79)

TO IN-41 BOARD
 CN001
 (See Page 79)


RM-44 (CONTROL S/L TERMINAL), PI-24 (INPUT/OUTPUT) PRINTED WIRING BOARDS

-Ref. No. RM-44, PI-24 BOARDS : 4,000 Series-

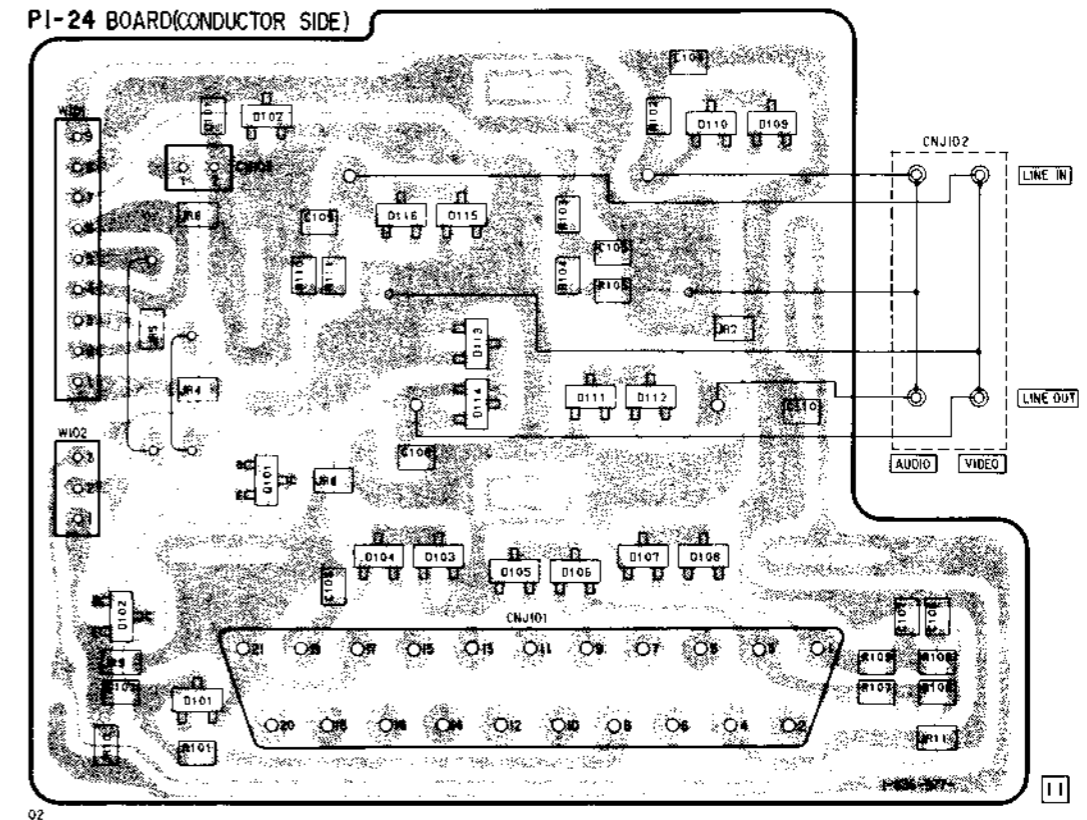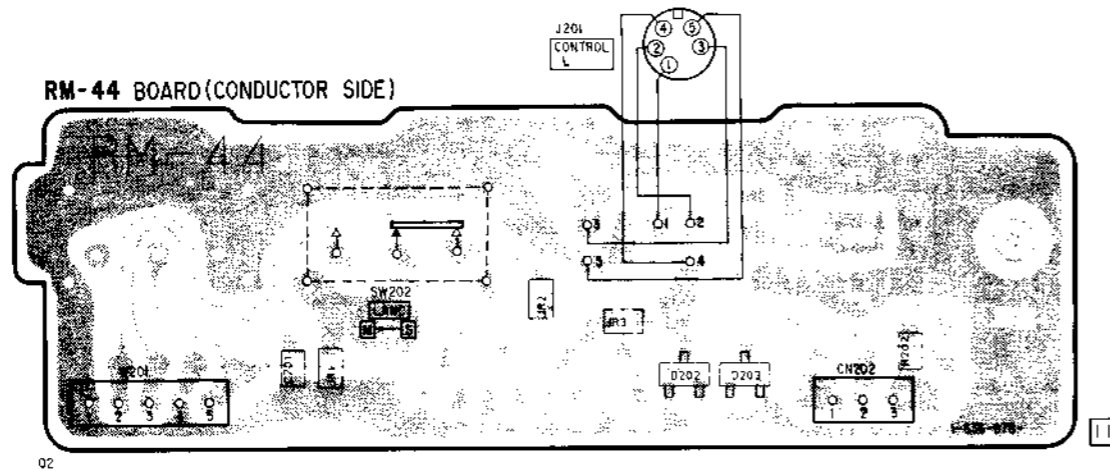



RM-44 (CONTROL S/L TERMINAL), PI-24 (INPUT/OUTPUT) SCHEMATIC DIAGRAMS

-Ref. No. RM-44, PI-24 BOARDS : 4,000 Series-

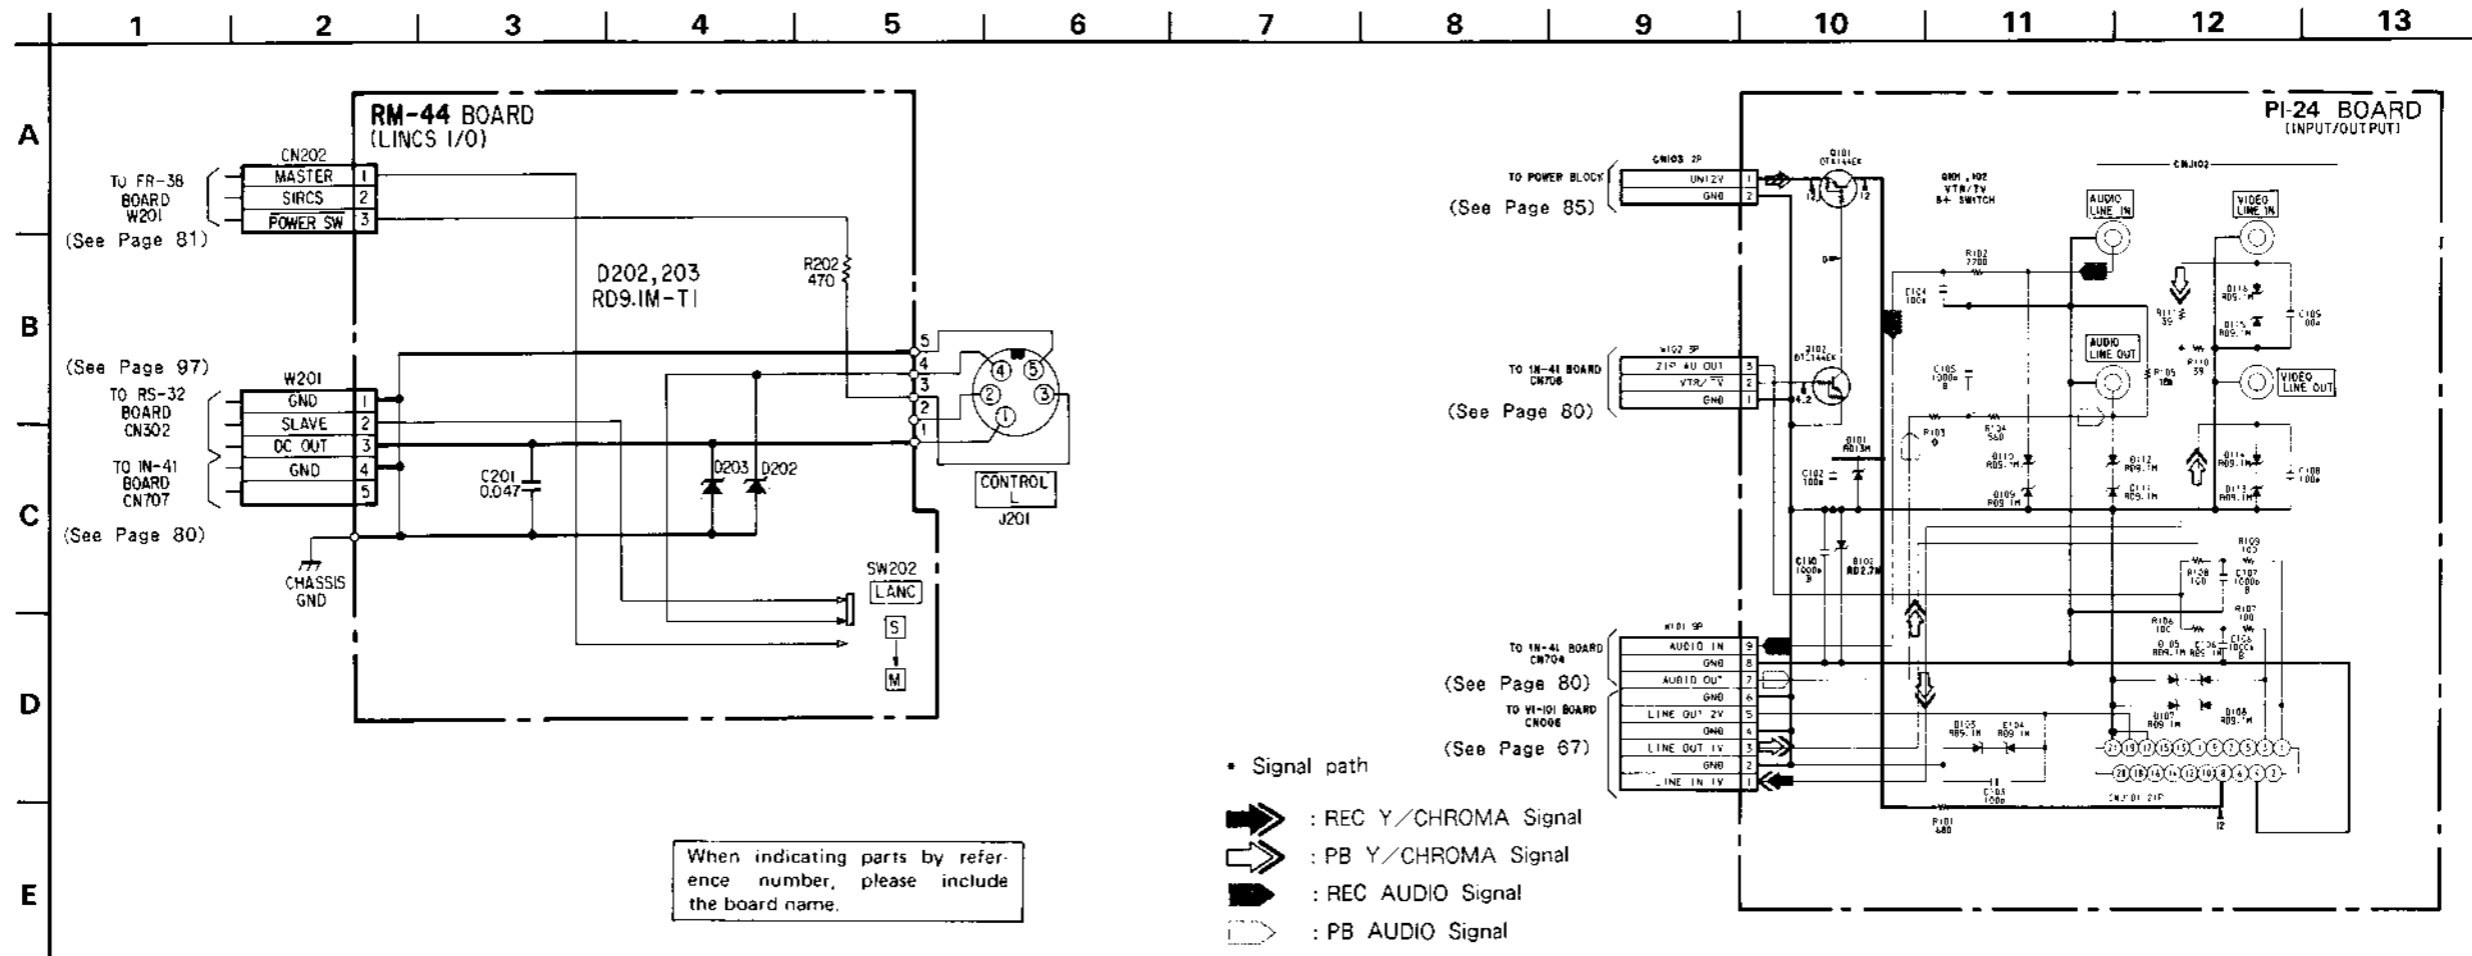

RP-69 (HEAD AMP/FLING ERASE) PRINTED WIRING BOARD

—Ref. No. RP-69 BOARD : 5,000 Series—

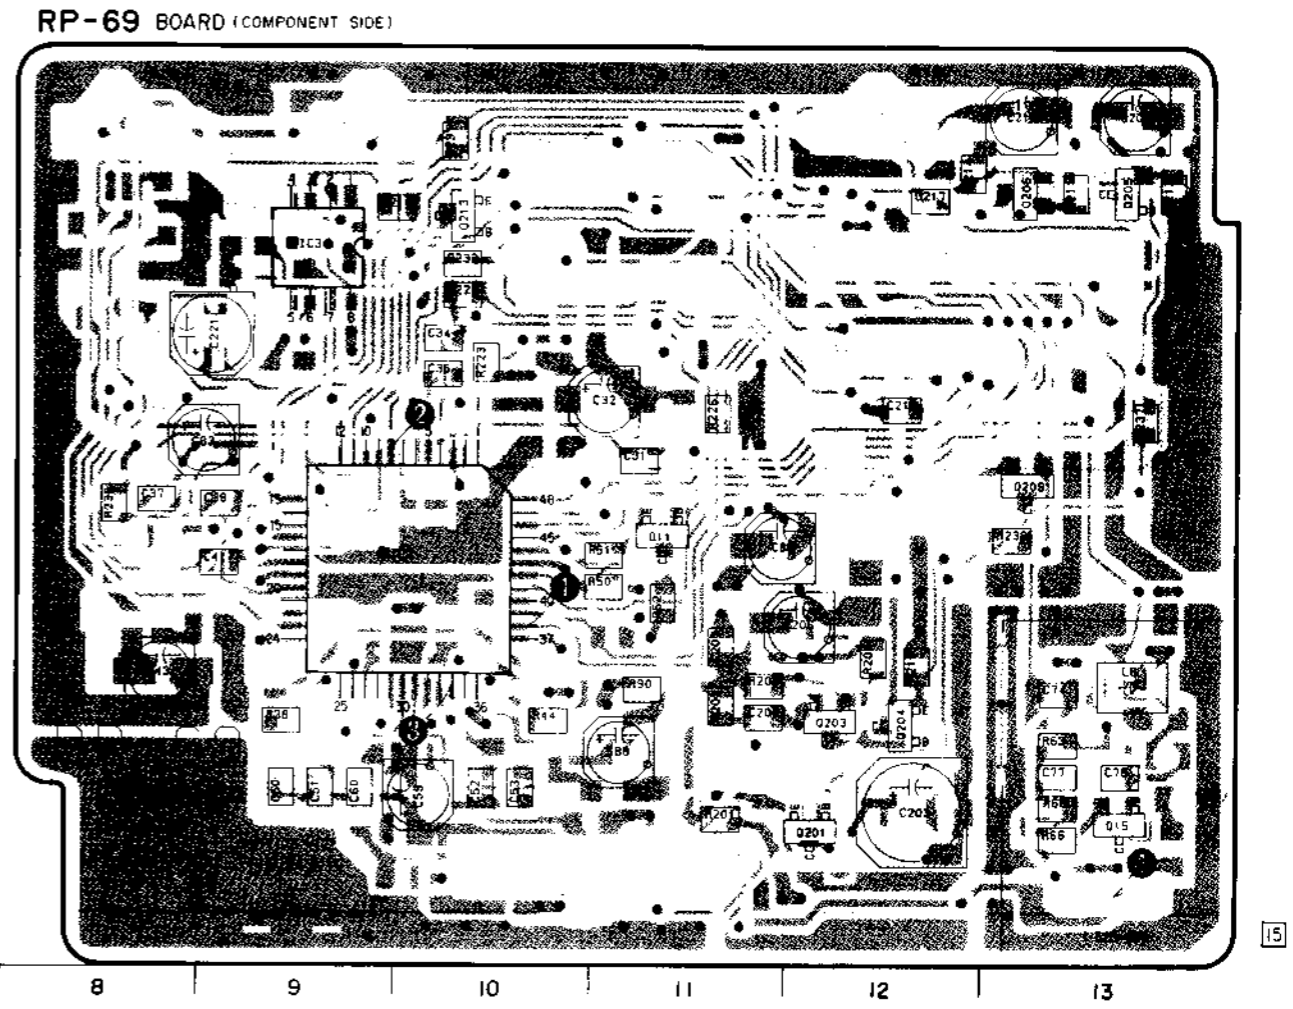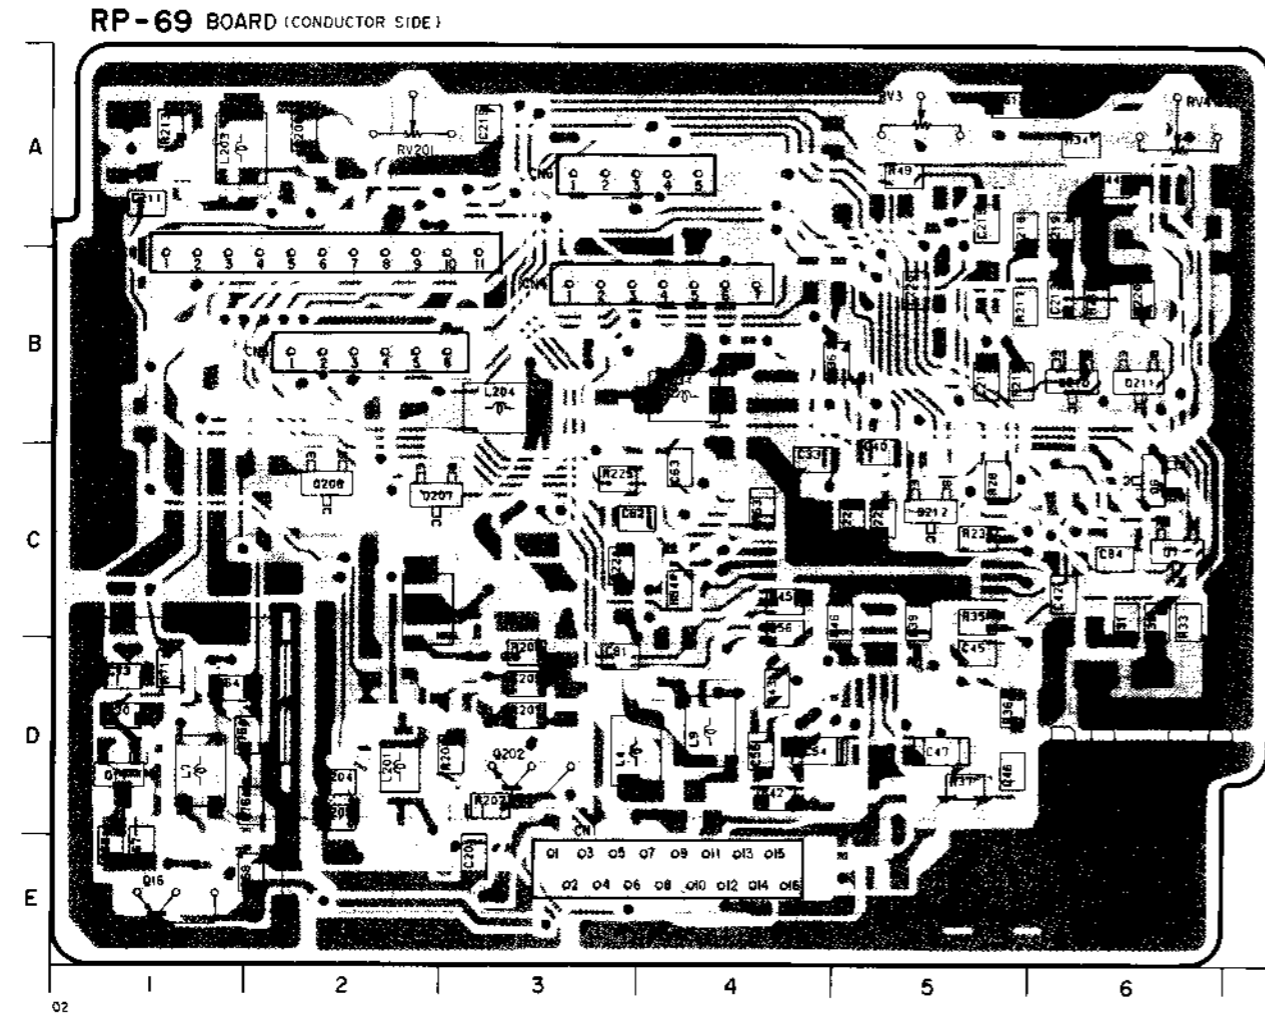

For printed wiring boards :

- —○— : indicates a lead wire mounted on the component side.
- ● : Through hole.
- — : Pattern from the side which enables seeing.
- — : Pattern of the rear side.
- ○ : Circled numbers refer to waveforms.

Note :


Conductor side : Parts on the conductor side being seen from the conductor are stated.
 Component side : Parts on the component side being seen from the component are stated.

When indicating parts by reference number, please include the board name.

RP-69 Board


IC002	C-10
IC003	A-9
Q006	C-6
Q007	C-6
Q011	C-11
Q015	D-13
Q016	E-1
Q017	D-1
Q027	B-8
Q028	A-8
Q201	D-12
Q202	D-3
Q203	D-12
Q204	D-12
Q205	A-13
Q206	A-13
Q207	C-2
Q208	C-2
Q209	C-13
Q210	B-6
Q211	B-6
Q212	C-5
Q213	A-10

RP-69 BOARD

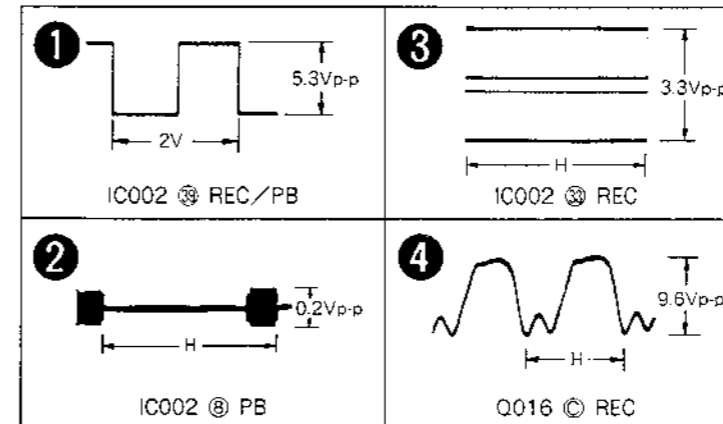

RP-69 (HEAD AMP/FLING ERASE) SCHEMATIC DIAGRAM

-Ref. No. RP-69 BOARD : 5,000 Series-

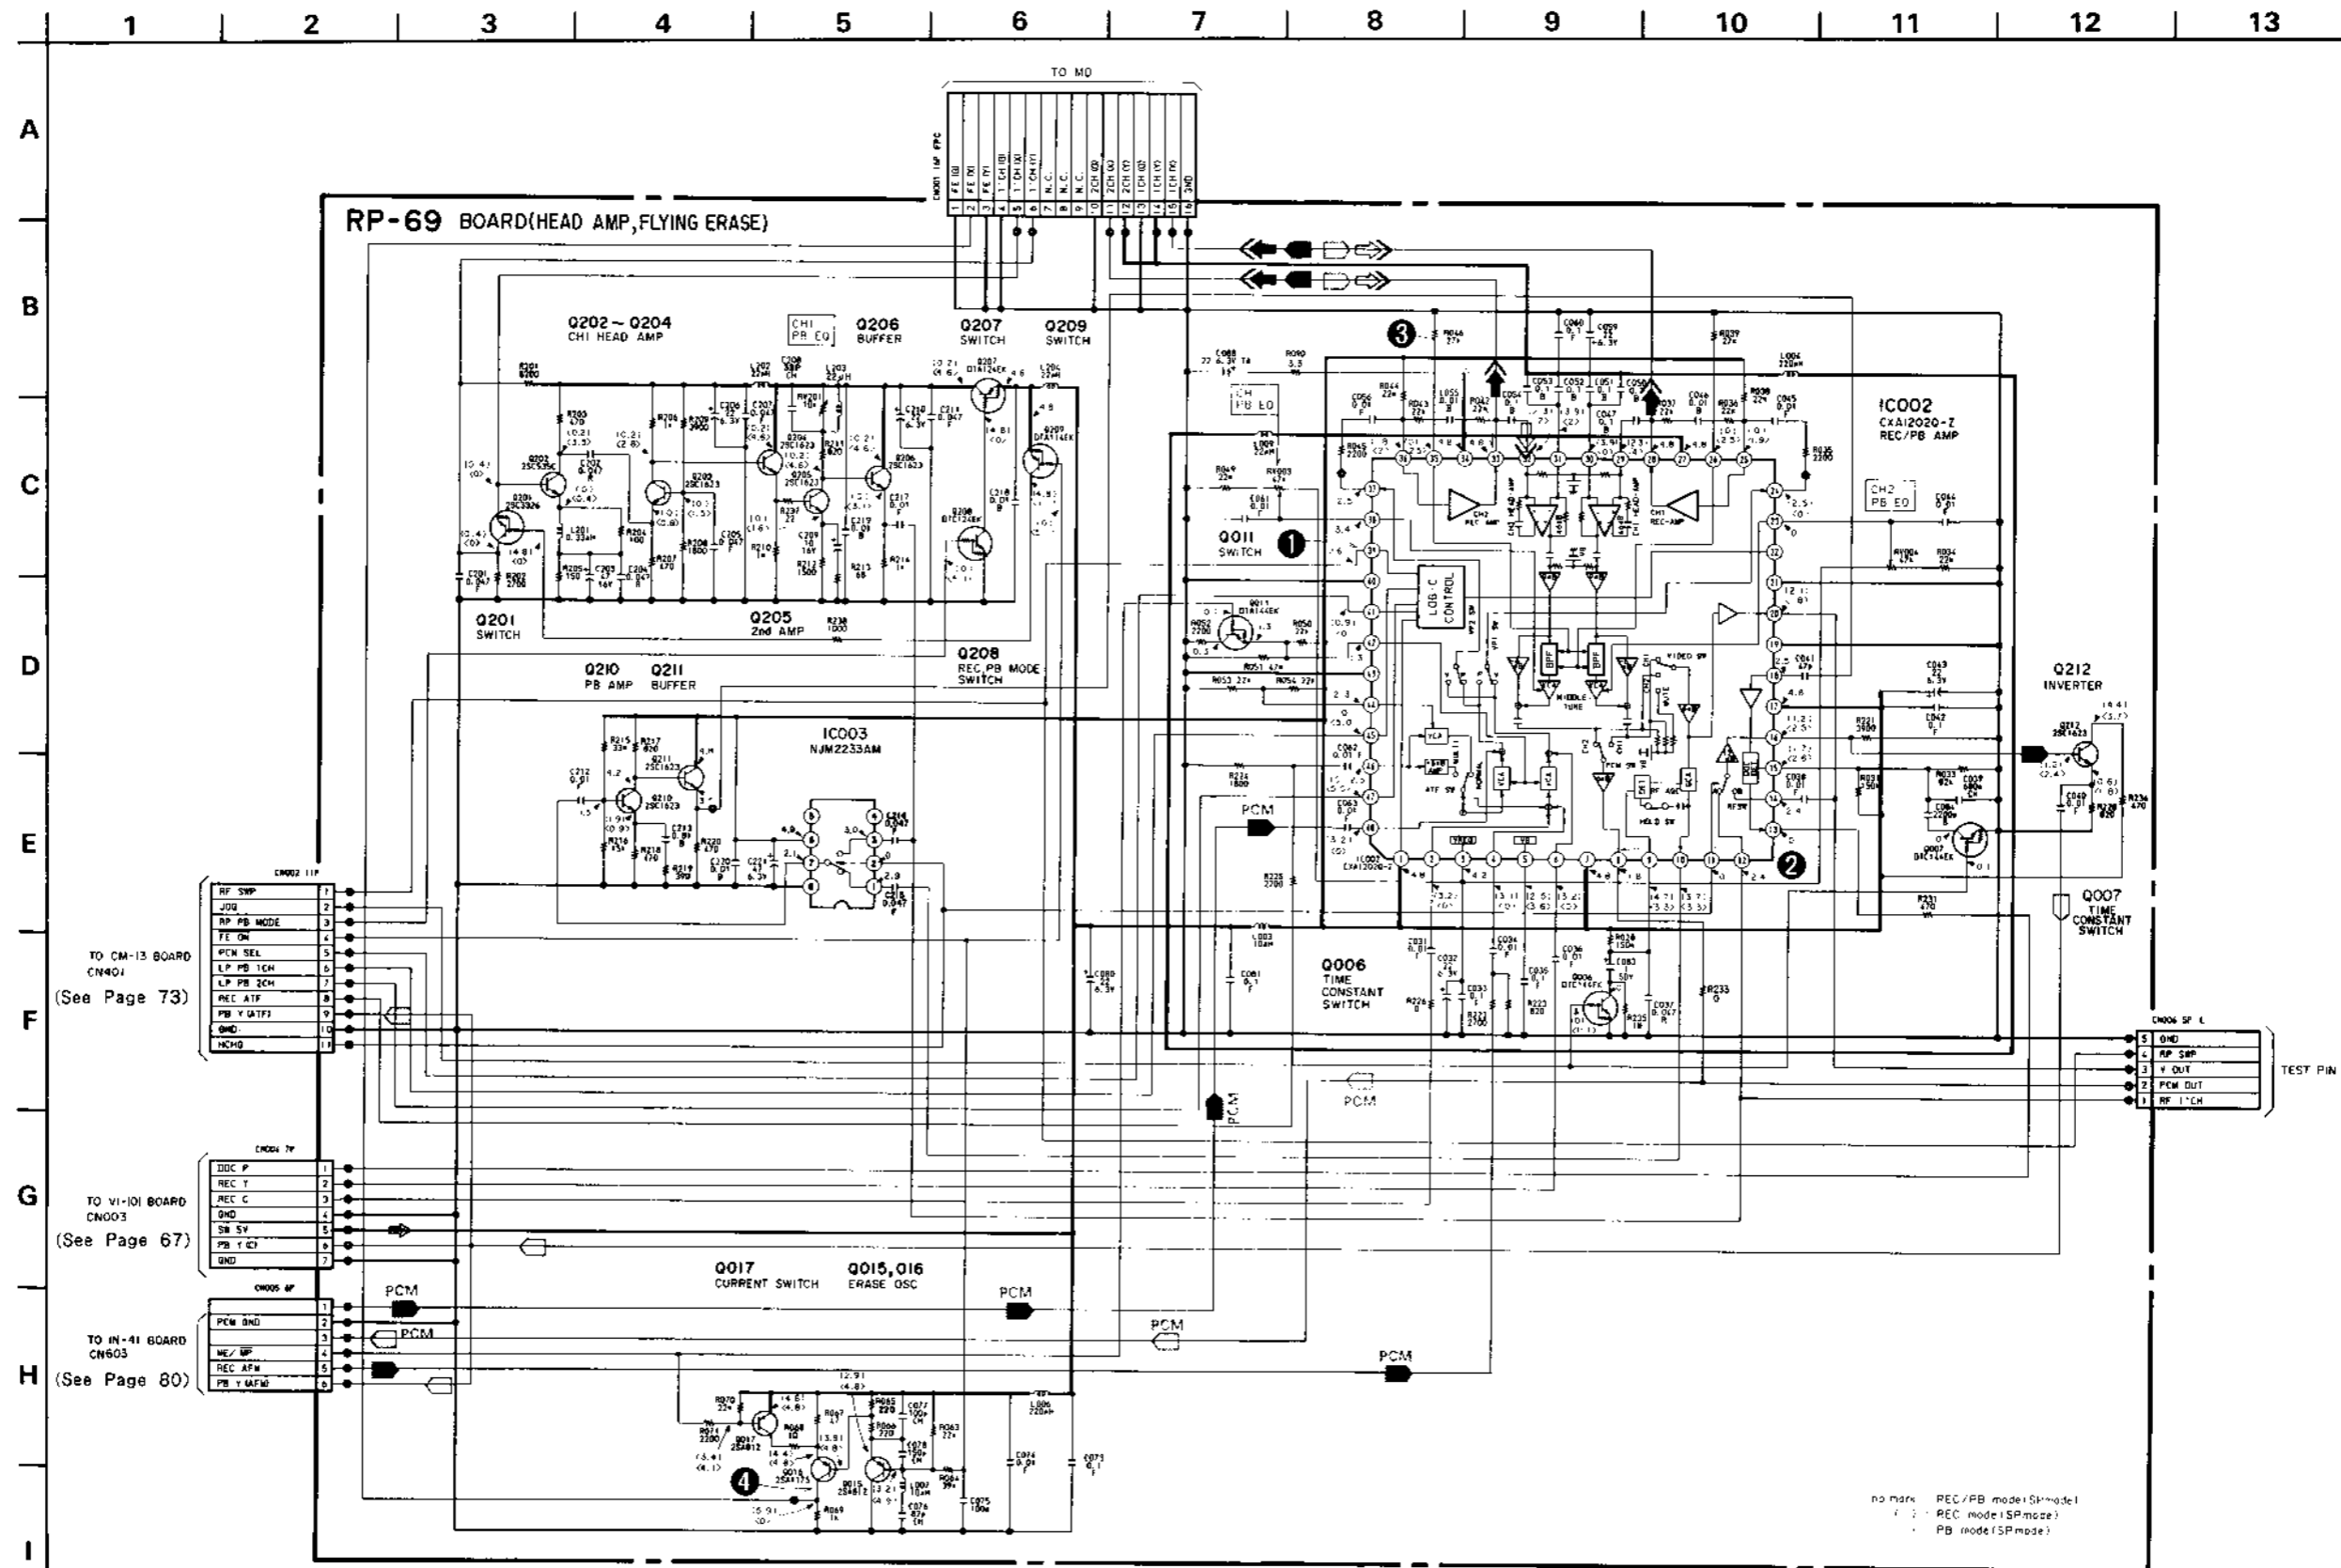

- Signal path
- ➡ : REC Y/CHROMA Signal
- ➡ : REC AUDIO Signal
- ➡ : PB Y/CHROMA Signal
- ➡ : PB AUDIO Signal


When indicating parts by reference number, please include the board name.

no mark : REC/PB mode (SP mode)
 : REC mode (SP mode)
 : PB mode (SP mode)

RS-32 (LINCS CONTROL) PRINTED WIRING BOARD

—Ref. No. RS-32 BOARD : 5,000 Series—

RS-32 BOARD (CONDUCTOR SIDE)

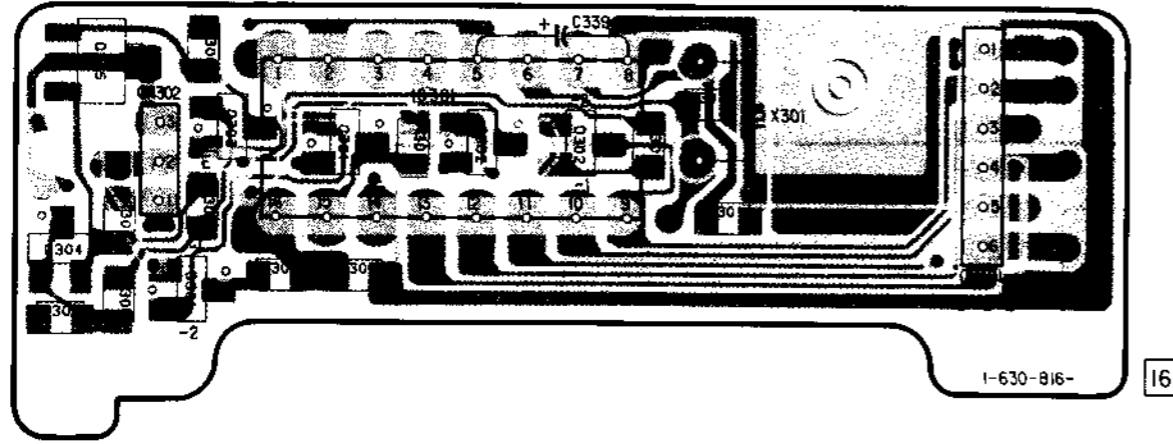

02

For printed wiring boards :

- — : indicates a lead wire mounted on the component side.
- : Through hole.
- (with dot) : Pattern from the side which enables seeing.
- (with horizontal line) : Pattern of the rear side.


When indicating parts by reference number, please include the board name.

Note :

Conductor side : Parts on the conductor side being seen from the conductor are stated.
 Component side : Parts on the component side being seen from the component are stated.


RS-32 (LINCS CONTROL) SCHEMATIC DIAGRAM

—Ref. No. RS-32 BOARD : 5,000 Series—

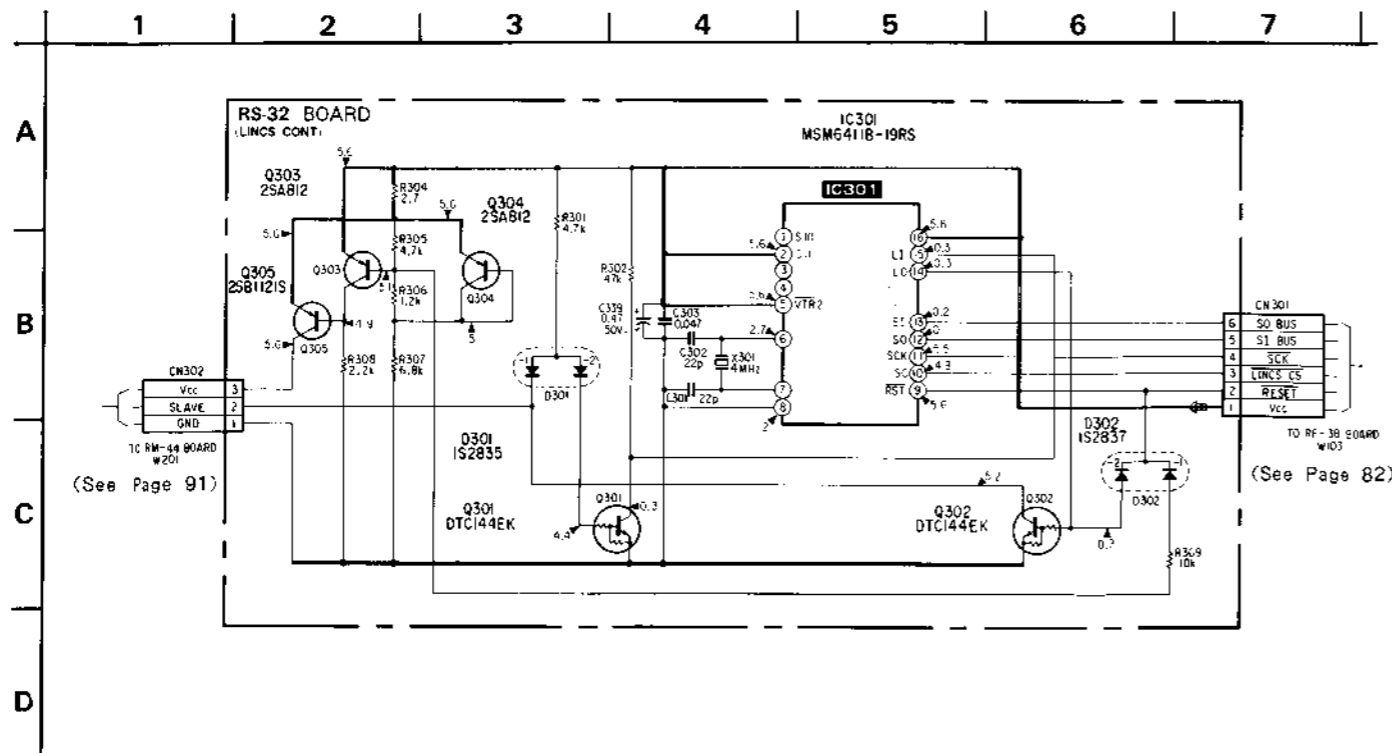

5-3. SEMICONDUCTORS


- DTA144EK
- DTA114EK
- DTA124EK
- DTA144EK
- DTC124EK
- DTC144EK
- 2SA1162
- 2SA1342
- 2SC1623
- 2SC2412K-QR
- 2SC3326N
- 2SC3395
- 2SC3396

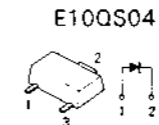


TLP907-0




GL3PR43




TLSG126

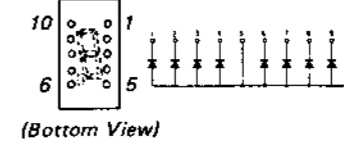

FMS1




GL452S

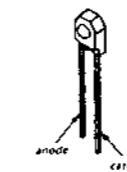

1SS226




1SS283




2SA1175-HFE
2SC2785-HFE




MA152WK
1S2836



2SB1121

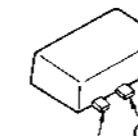


RD13M-B2
RD2.7M-B2
RD9.1M-B1
SB05-05CP
1SS193-TE85L

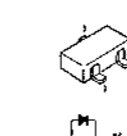

2SD774-34



SLP281C-50
TLY123

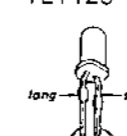

AA3422S



SECTION 6 EXPLODED VIEWS


NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- The construction parts of an assembled part are indicated with a collation number in the remark column.

- Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX, -X mean standardized parts, so they may have some differences from the original one.


The components identified by mark or dotted line with mark are critical for safety. Replace only with part number specified.

6-1. CABINET ASSEMBLY

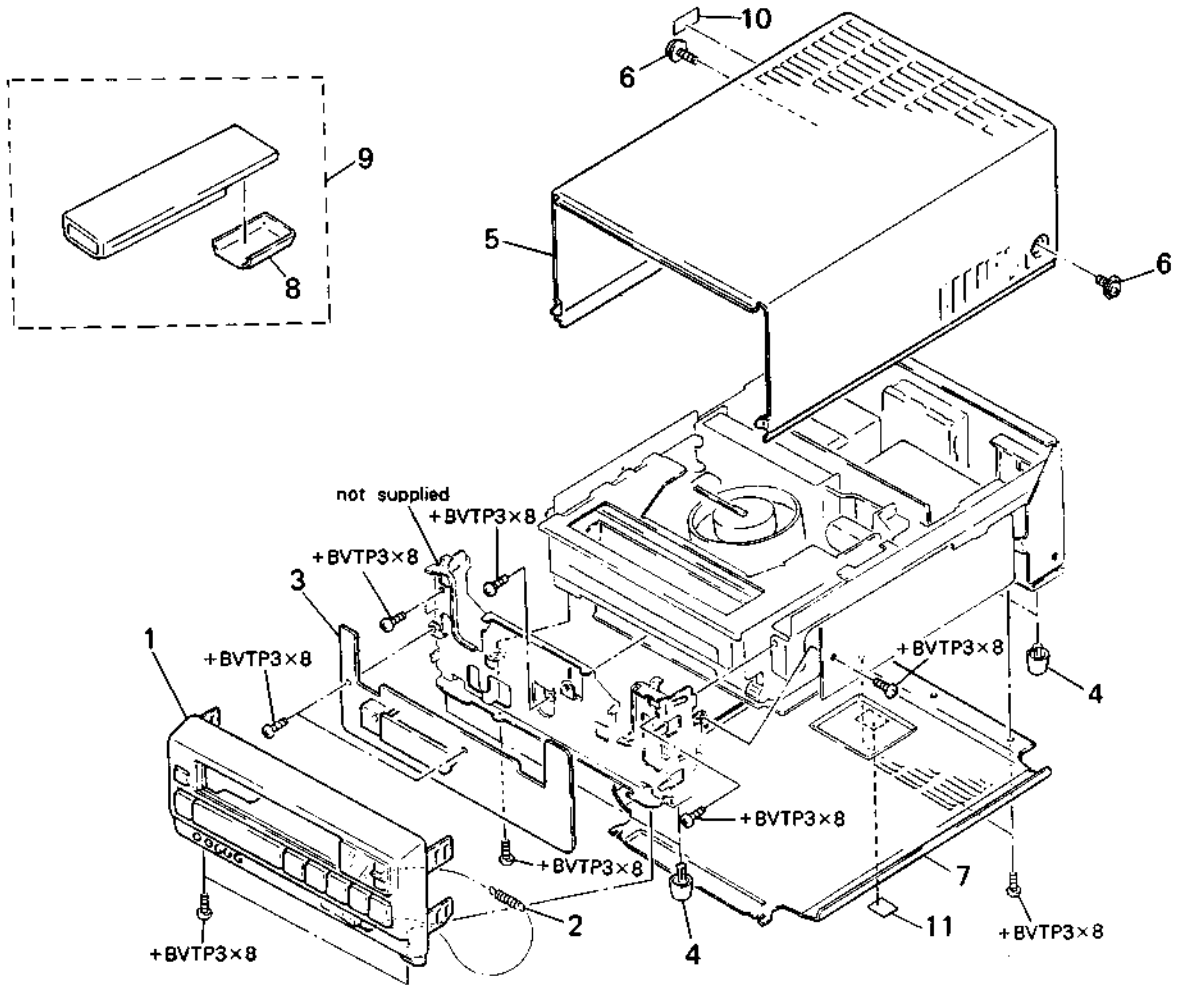

No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
1	X-3940-089-1	PANEL ASSY (PAL), FRONT		7	*3-735-220-01	PLATE, BOTTOM	
2	3-689-531-01	SPRING, TENSION		8	2-181-754-01	LID BATTERY CASE	
3	*A-7062-469-A	FR-38 (P) BOARD, COMPLETE		9	1-465-590-11	REMOTE COMMANDER (RMT-463)	8
4	3-697-937-01	LEG (AEP, E MODEL)		10	3-703-082-21	LABEL, CAUTION (UK MODEL)	
5	*X-3735-210-1	CASE ASSY, UPPER		11	3-703-043-21	LABEL, CAUTION, MAIN (UK MODEL)	
6	4-886-821-01	SCREW, M3 CASE					


6-2. MAIN CHASSIS ASSEMBLY

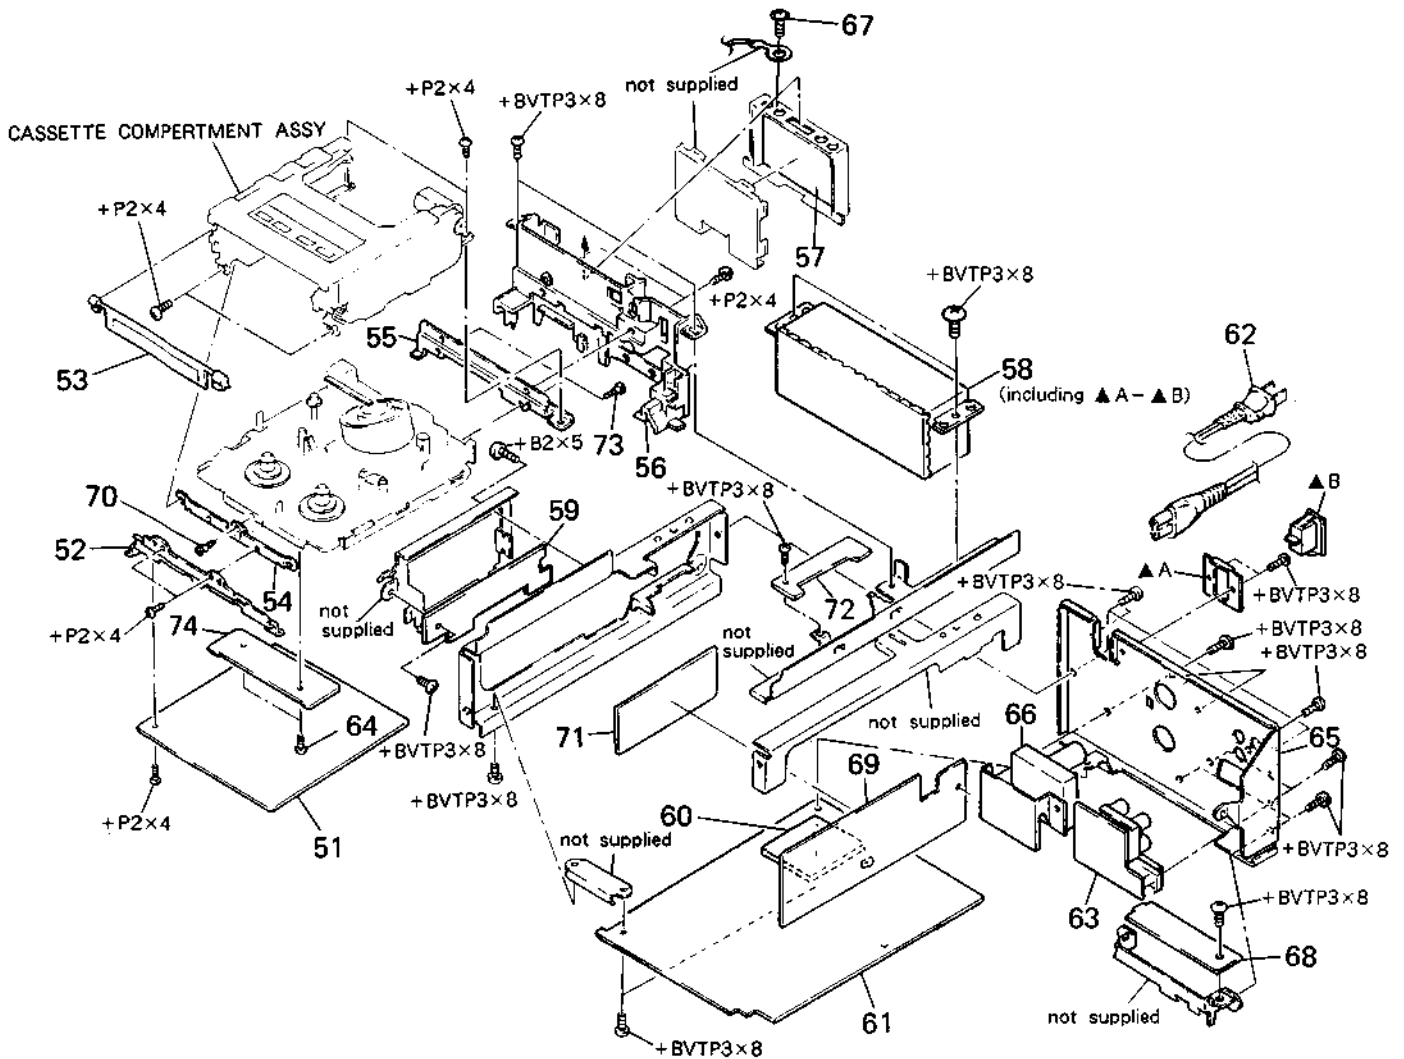

Note: The components identified by mark ▲ or dotted line with mark ▲ are critical for safety. Replace only with part number specified.


No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
51	*A-7062-468-A	CM-13 (P) BOARD, COMPLETE		65	*X-3940-088-1	FRAME ASSY, REAR (AEP MODEL)	
52	*3-731-132-01	FRAME (FRONT), MD			*X-3940-111-1	FRAME ASSY, REAR (UK, E MODEL)	
53	X-3731-119-1	DOOR ASSY, FRONT		66	1-466-328-31	MODULATOR, RF (RFU-2027)	
54	*3-732-810-02	BRACKET (FRONT)			1-466-347-31	MODULATOR, RF (RFU-2028) (UK MODEL)	
55	*3-732-811-01	BRACKET (REAR)		67	3-703-502-01	SCREW	
56	*3-731-141-01	FRAME (REAR), MD		68	*1-636-978-11	RM-44 BOARD	
57	*A-7062-467-A	RP-69 (P) BOARD, COMPLETE		69	*A-7062-473-A	IN-41 (P) BOARD, COMPLETE	
58	▲ 1-413-588-11	POWER BLOCK (SW.REG)		70	3-732-816-01	SCREW, STEP	
59	*A-7062-475-A	FC-43 (P) BOARD, COMPLETE		71	*A-7062-474-A	AF-20 (P) BOARD, COMPLETE	
60	*A-7062-465-A	CC-56 (P) BOARD, COMPLETE		72	*A-7061-590-A	RS-32 BOARD, COMPLETE	
61	*A-7062-470-A	VI-101 (P) BOARD, COMPLETE		73	3-732-817-01	SCREW (2X4.5), TAPPING	
62	▲ 1-558-032-11	CORD, POWER (UK MODEL)		74	*1-628-908-11	UC-3 BOARD	
63	▲ 1-575-132-11	CORD, POWER (AEP, E MODEL)					
64	*A-7062-471-A	PI-24 (P) BOARD, COMPLETE					
	3-713-790-21	SCREW (M2X6), TAPPING, P3					

6-3. CASSETTE COMPARTMENT ASSY

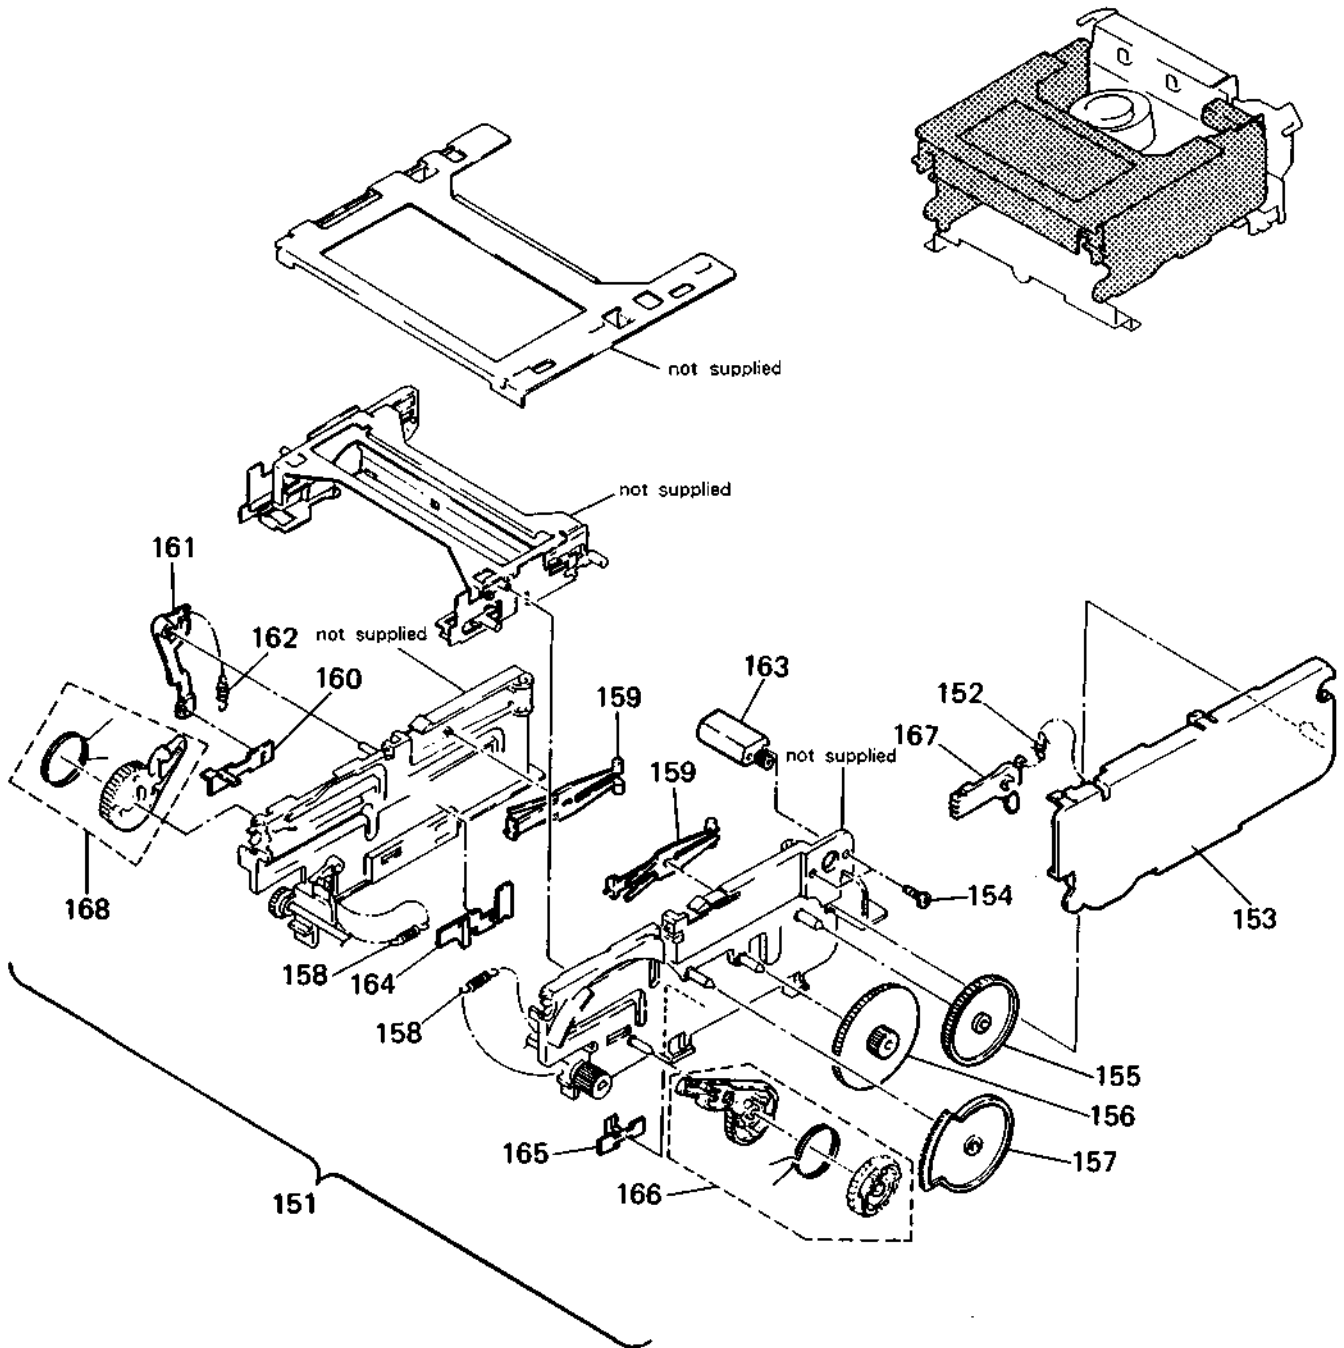


No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
151	A-7090-892-A	CASSETTE COMPARTMENT ASSY, FL		160	3-731-189-01	SLIDER, LOCK	
152	3-731-175-02	SPRING, TENSION		161	3-731-188-01	ARM LOCK, DRIVING	
153	3-732-804-03	COVER, GEAR		162	3-731-174-01	SPRING, TENSION	
154	3-730-141-01	SCREW (PSW) (2X4)		163	X-3731-108-1	MOTOR ASSY, FL (THREADING) (M901)	
155	3-731-182-01	GEAR (B), DECELERATION		164	X-3726-867-1	PRISM (LEFT) ASSY	
156	3-731-181-01	GEAR (A), DECELERATION		165	X-3726-866-1	PRISM (RIGHT) ASSY	
157	3-731-192-01	GEAR, MIDWAY		166	X-3731-109-2	ARM (RIGHT) ASSY, DRIVING	
158	3-731-176-02	SPRING, TENSION		167	3-731-185-01	LINK, SWITCHING, DOOR	
159	3-731-184-02	HOLDER LOCK		168	X-3731-111-1	ARM (LEFT) ASSY, DRIVING	

6-4. MD BLOCK ASSEMBLY-1

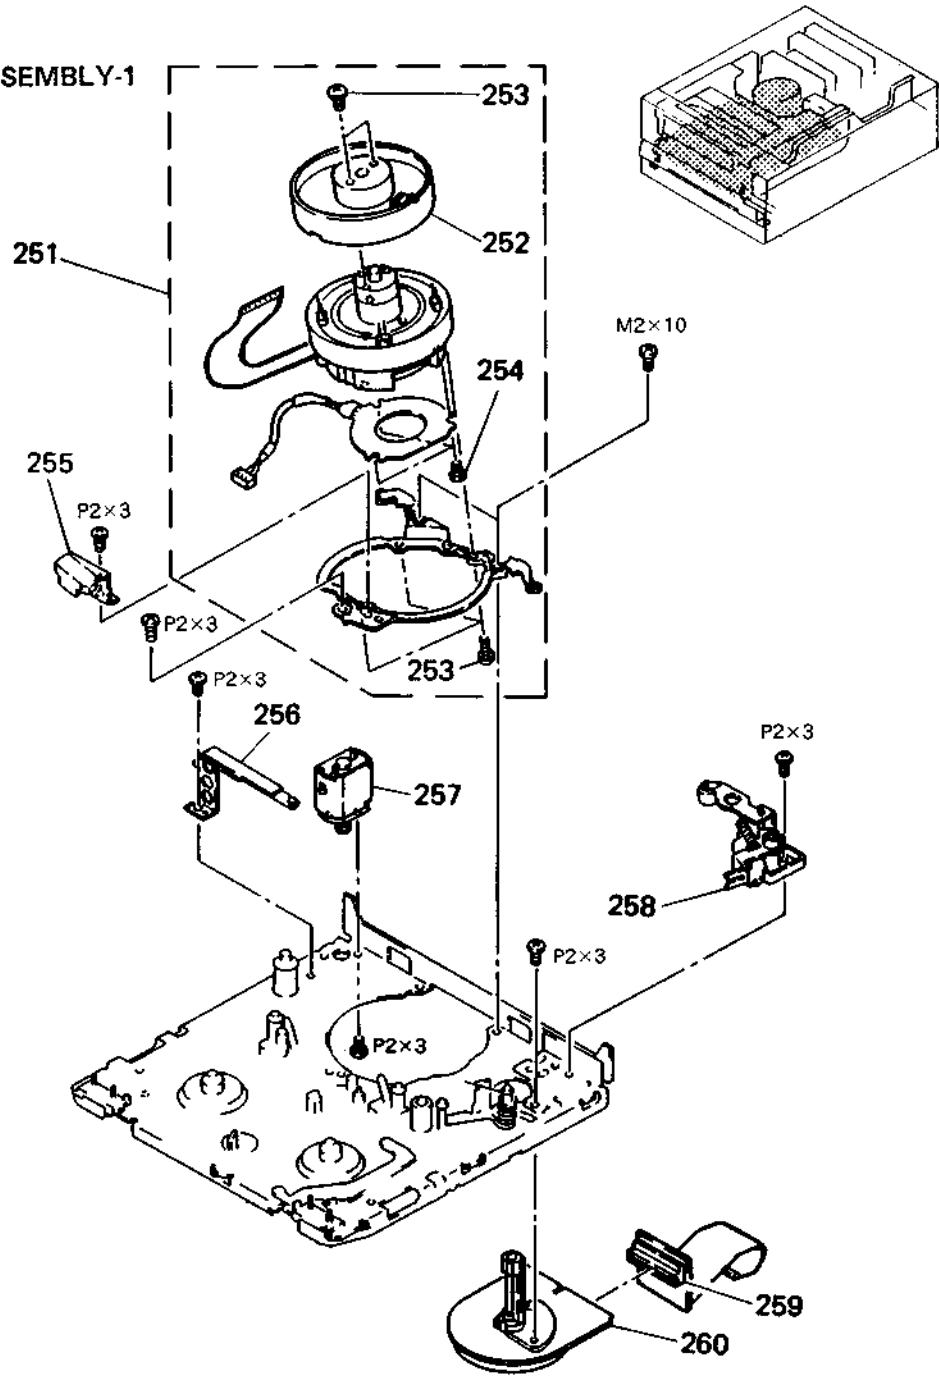


No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
251	A-7048-424-A	DRUM ASSY (DGU-72A-R)	252-254	256	X-3728-864-1	GROUND ASSY, SHAFT	
252	A-7049-335-A	DRUM ASSY, ROTARY UPPER (DGR-72-R)		257	A-7040-160-A	MOTOR ASSY, THREADING (LOADING) ((M903))	
253	3-730-141-01	SCREW (PSW) (2X4)		258	A-7040-161-B	ROLLER BLOCK ASSY, HC	
254	3-895-823-01	SCREW (P1.4X2.5) TAPPING		259	*1-628-694-21	CC-23 BOARD	
255	3-728-868-01	GUARD, GUIDE		260	8-835-331-01	MOTOR, DC U-22A (CAPSTAN MOTOR) (M902)	

6-5. MD BLOCK ASSEMBLY-2

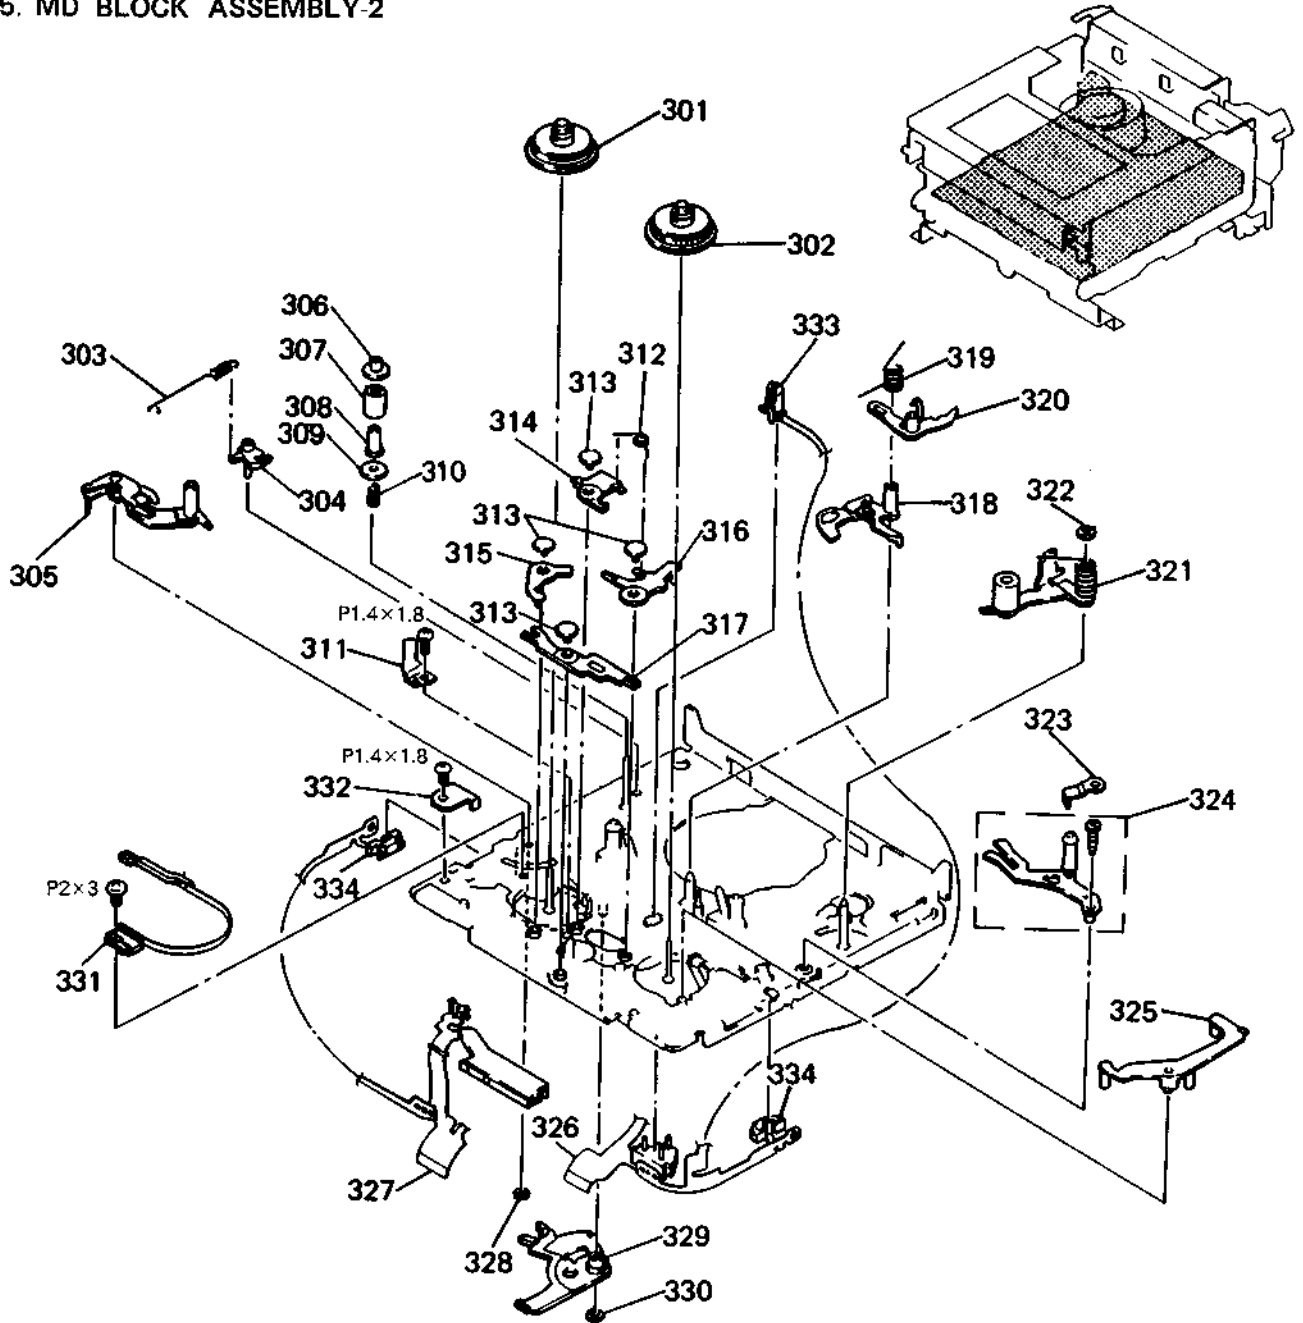

No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
301	X-3728-851-1	TABLE ASSY, REEL, S		318	3-728-875-01	STOPPER, RK	
302	X-3728-855-1	TABLE ASSY, REEL, T		319	3-726-864-01	SPRING (RK), TORSION	
303	3-736-474-01	SPRING, TENSION		320	3-728-852-02	ARM, RK STOPPER	
304	3-728-855-03	ARM, ADJUSTMENT		321	A-7040-219-A	ARM BLOCK ASSY, PINCH	
305	X-3728-867-1	ARM ASSY (S), TENSION REGULATOR		322	3-669-465-00	WASHER (1.5), STOPPER	
306	3-726-884-01	FLANGE, UPPER, TG2		323	3-728-808-01	SPRING, LEAF	
307	3-726-883-01	ROLLER, TG2		324	X-3728-869-1	ARM ASSY, TG7	
308	3-726-885-01	SLEEVE, TG2		325	3-728-848-01	ARM, LB RELEASE	
309	3-726-882-02	FLANGE, LOWER, TG2		326	1-628-061-12	FP-90 FLEXIBLE BOARD	
310	3-726-886-01	SPRING, COMPRESSION		327	1-628-060-12	FP-89 FLEXIBLE BOARD	
311	3-726-848-01	RETAINER, TL		328	3-321-393-11	WASHER, STOPPER	
312	3-726-866-01	SPRING (ST), TORSION		329	X-3726-806-2	LEVER ASSY, SW	
313	3-726-858-01	PIN, SHAFT RETAINER		330	3-726-829-01	WASHER, STOPPER	
314	3-728-849-01	BRAKE, S		331	X-3728-859-1	BAND ASSY, TENSION REGULATOR	
315	3-726-852-01	BRAKE, LB		332	3-730-125-01	RETAINER, SW	
316	3-728-850-01	BRAKE, T		333	3-728-837-01	HOLDER, LED	
317	3-726-853-01	LEVER, LB		334	3-728-869-02	HOLDER, SENSOR	

6-6. MD BLOCK ASSEMBLY-3

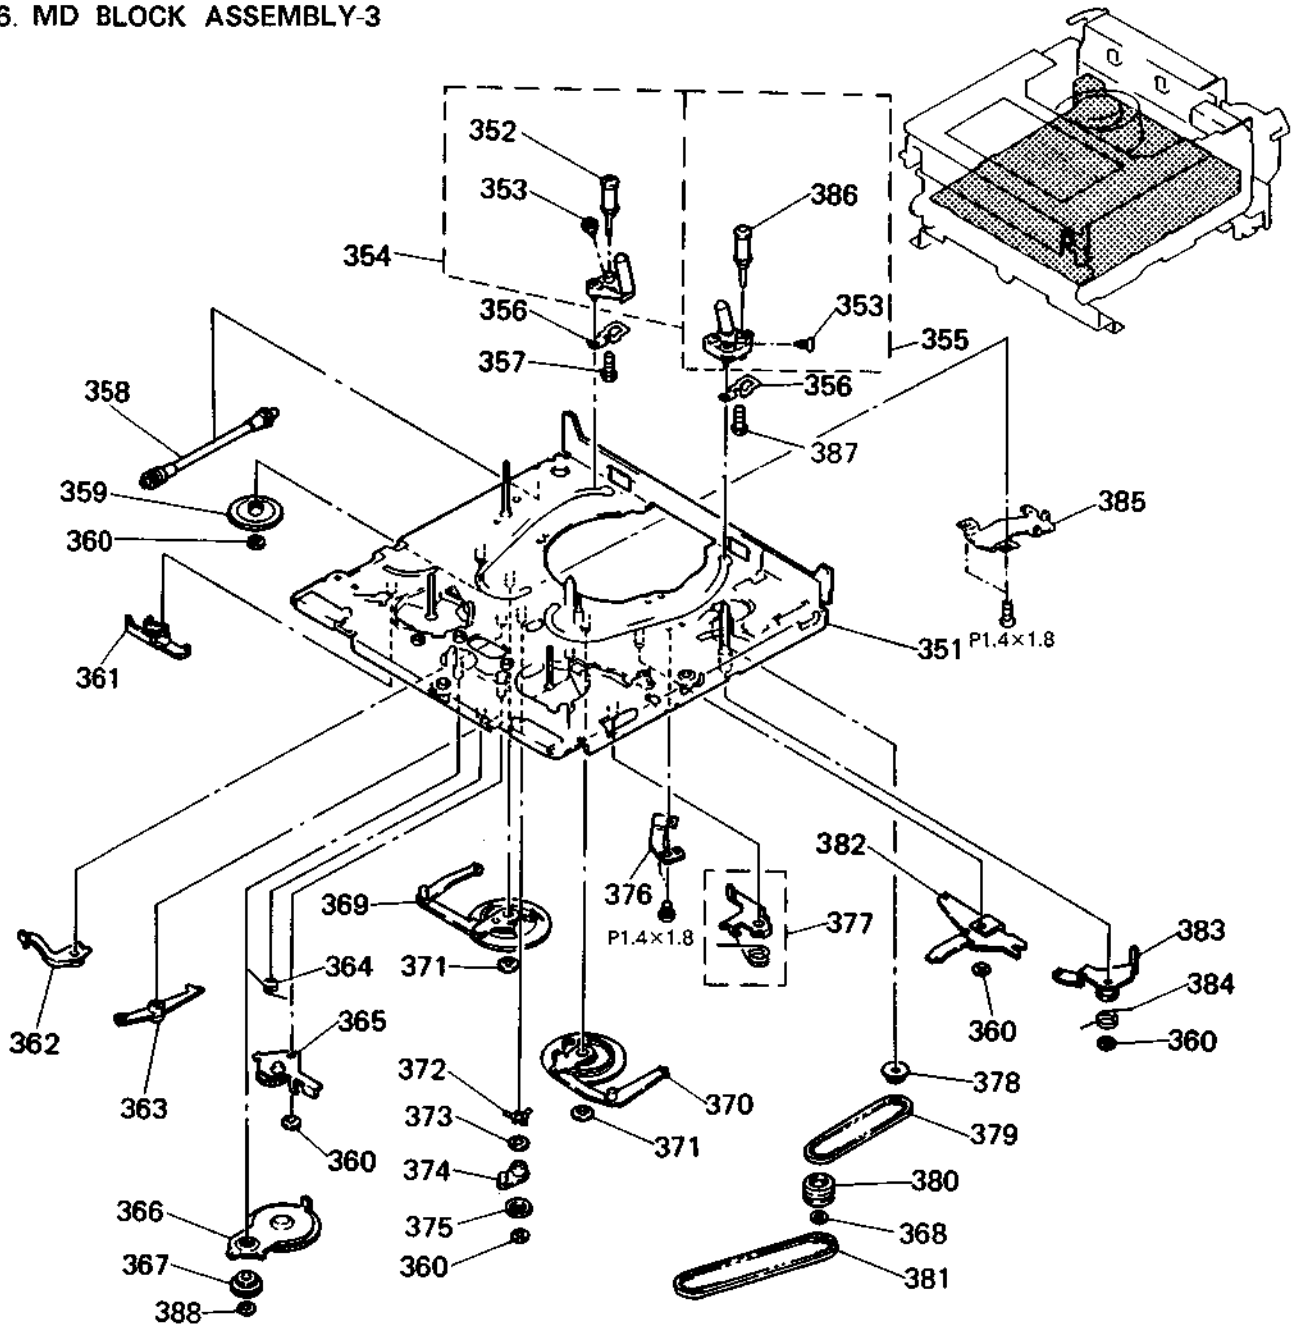

No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
351	*X-3749-038-1	CHASSIS ASSY, MECHANICAL		371	3-669-465-00	WASHER (1.5), STOPPER	
352	X-3726-820-1	ROLLER ASSY (U), GUIDE		372	3-726-867-01	SPRING, LEAF	
353	3-726-822-01	SCREW (M1.4X2) (STEP), HEAD		373	3-701-436-21	WASHER, POLYETHYLENE	
354	A-7040-128-A	COASTER (LEFT) BLOCK ASSY	352, 353	374	3-726-857-02	ARM, UL	
355	A-7040-217-A	COASTER (RIGHT) BLOCK ASSY (NIP)	353, 386	375	3-726-856-02	GEAR, UL	
356	3-736-485-01	SPRING, LEAF, COSTER		376	*3-726-805-01	REINFORCEMENT (TT)	
357	3-726-830-01	SCREW (M1.4X4) (THREE LOCK)		377	X-3726-808-2	BRAKE ASSY, TS	
358	X-3728-868-1	WORM ASSY		378	X-3726-805-1	GEAR ASSY, JOINT	
359	3-744-109-01	GEAR, WHEEL		379	3-728-866-11	BELT (S), TIMING	
360	3-726-829-01	WASHER, STOPPER		380	X-3726-838-1	PULLEY (UPPER) ASSY, MIDWAY	
361	3-728-842-01	LEVER, EJECT		381	3-741-197-01	BELT (L), TIMING	
362	3-728-851-01	BRAKE, UL		382	3-744-145-01	LEVER, THREADING	
363	3-726-954-01	ARM, BRAKE RELEASE		383	X-3726-824-1	ARM ASSY, PINCH SUB	
364	3-726-865-01	SPRING (LB), TORSION		384	3-726-895-01	SPRING	
365	A-7040-130-A	GEAR BLOCK ASSY, LB		385	X-3726-841-1	REINFORCEMENT (SS) ASSY	
366	X-3728-866-1	GEAR ASSY, RK		386	X-3728-810-1	ROLLER ASSY (U)(PLATING), GUIDE	
367	X-3728-858-1	GEAR ASSY, RC		387	3-736-473-01	SCREW (M2X0.25) (THREE LOCK)	
368	3-533-073-01	WASHER		388	3-321-393-11	WASHER, STOPPER	
369	X-3728-842-1	GEAR (LEFT) ASSY, DRIVE					
370	X-3728-843-1	GEAR (RIGHT) ASSY, DRIVE					

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
C053	1-164-633-11	CERAMIC CHIP 0.1MF	10%	25V	<u>COIL</u>		
C054	1-163-077-00	CERAMIC CHIP 0.1MF	10%	25V	L003	1-408-777-00	INDUCTOR CHIP 10UH
C055	1-164-232-11	CERAMIC CHIP 0.01MF	10%	50V	L004	1-408-793-21	INDUCTOR CHIP 220UH
C056	1-164-232-11	CERAMIC CHIP 0.01MF		50V	L006	1-408-793-21	INDUCTOR CHIP 220UH
C059	1-124-778-00	ELECT CHIP 22MF	20%	6.3V	L007	1-408-777-00	INDUCTOR CHIP 10UH
C060	1-163-038-00	CERAMIC CHIP 0.1MF		25V	L009	1-408-781-00	INDUCTOR CHIP 22UH
C061	1-164-232-11	CERAMIC CHIP 0.01MF		50V	L201	1-410-735-21	INDUCTOR CHIP 0.33UH
C062	1-164-232-11	CERAMIC CHIP 0.01MF		50V	L202	1-408-781-00	INDUCTOR CHIP 22UH
C063	1-164-232-11	CERAMIC CHIP 0.01MF		50V	L203	1-408-781-00	INDUCTOR CHIP 22UH
C073	1-163-038-00	CERAMIC CHIP 0.1MF		25V	L204	1-408-781-00	INDUCTOR CHIP 22UH
C074	1-164-232-11	CERAMIC CHIP 0.01MF		50V	<u>TRANSISTOR</u>		
C075	1-163-117-00	CERAMIC CHIP 100PF	5%	50V	Q006	8-729-901-01	TRANSISTOR DTC144EK
C076	1-163-115-00	CERAMIC CHIP 82PF	5%	50V	Q007	8-729-901-01	TRANSISTOR DTC144EK
C077	1-163-117-00	CERAMIC CHIP 100PF	5%	50V	Q011	8-729-901-06	TRANSISTOR DTA144EK
C078	1-163-121-00	CERAMIC CHIP 150PF	5%	50V	Q015	8-729-216-22	TRANSISTOR 2SA1162
C080	1-124-778-00	ELECT CHIP 22MF	20%	6.3V	Q016	8-729-119-76	TRANSISTOR 2SA1175TP-HFE
C081	1-163-038-00	CERAMIC CHIP 0.1MF		25V	Q017	8-729-216-22	TRANSISTOR 2SA1162
C083	1-126-193-11	ELECT CHIP 1MF	20%	50V	Q201	8-729-202-38	TRANSISTOR 2SC3326M
C084	1-164-161-11	CERAMIC CHIP 0.0022MF	10%	50V	Q202	8-729-353-53	TRANSISTOR 2SC535-C
C088	1-124-778-00	ELECT CHIP 22MF	20%	6.3V	Q203	8-729-100-66	TRANSISTOR 2SC1623
C201	1-163-035-00	CERAMIC CHIP 0.047MF		50V	Q204	8-729-100-66	TRANSISTOR 2SC1623
C202	1-163-809-11	CERAMIC CHIP 0.047MF	10%	25V	Q205	8-729-100-66	TRANSISTOR 2SC1623
C203	1-126-204-11	ELECT CHIP 47MF	20%	16V	Q206	8-729-100-66	TRANSISTOR 2SC1623
C204	1-163-809-11	CERAMIC CHIP 0.047MF	10%	25V	Q207	8-729-901-05	TRANSISTOR DTA124EK
C205	1-163-035-00	CERAMIC CHIP 0.047MF		50V	Q208	8-729-901-00	TRANSISTOR DTC124EK
C206	1-124-778-00	ELECT CHIP 22MF	20%	6.3V	Q209	8-729-901-04	TRANSISTOR DTA114EK
C207	1-163-035-00	CERAMIC CHIP 0.047MF		50V	Q210	8-729-100-66	TRANSISTOR 2SC1623
C208	1-163-095-00	CERAMIC CHIP 12PF	5%	50V	Q211	8-729-100-66	TRANSISTOR 2SC1623
C209	1-124-779-00	ELECT CHIP 10MF	20%	16V	Q212	8-729-100-66	TRANSISTOR 2SC1623
C210	1-124-778-00	ELECT CHIP 22MF	20%	6.3V	<u>RESISTOR</u>		
C211	1-163-035-00	CERAMIC CHIP 0.047MF		50V	R028	1-216-101-00	METAL GLAZE 150K 5% 1/10W
C212	1-164-232-11	CERAMIC CHIP 0.01MF		50V	R031	1-216-101-00	METAL GLAZE 150K 5% 1/10W
C213	1-164-232-11	CERAMIC CHIP 0.01MF	10%	50V	R033	1-216-095-00	METAL GLAZE 82K 5% 1/10W
C214	1-163-035-00	CERAMIC CHIP 0.047MF		50V	R034	1-216-081-00	METAL GLAZE 22K 5% 1/10W
C215	1-163-035-00	CERAMIC CHIP 0.047MF		50V	R035	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W
C217	1-164-232-11	CERAMIC CHIP 0.01MF		50V	R036	1-216-081-00	METAL GLAZE 22K 5% 1/10W
C218	1-164-232-11	CERAMIC CHIP 0.01MF	10%	50V	R037	1-216-081-00	METAL GLAZE 22K 5% 1/10W
C219	1-164-232-11	CERAMIC CHIP 0.01MF	10%	50V	R038	1-216-081-00	METAL GLAZE 22K 5% 1/10W
C220	1-164-232-11	CERAMIC CHIP 0.01MF	10%	50V	R039	1-216-083-00	METAL GLAZE 27K 5% 1/10W
C221	1-126-205-11	ELECT CHIP 47MF	20%	6.3V	R042	1-216-081-00	METAL GLAZE 22K 5% 1/10W
<u>CONNECTOR</u>				R043	1-216-081-00	METAL GLAZE 22K 5% 1/10W	
CN001	1-565-073-11	SOCKET, CONNECTOR 16P			R044	1-216-081-00	METAL GLAZE 22K 5% 1/10W
CN002	1-506-476-11	PIN, CONNECTOR 11P			R045	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W
CN004	*1-564-006-21	PIN, CONNECTOR 7P			R046	1-216-083-00	METAL GLAZE 27K 5% 1/10W
CN005	1-506-471-11	PIN, CONNECTOR 6P			R049	1-216-081-00	METAL GLAZE 22K 5% 1/10W
CN006	1-506-484-11	PIN, CONNECTOR 5P			R050	1-216-081-00	METAL GLAZE 22K 5% 1/10W
<u>IC</u>				R051	1-216-089-00	METAL GLAZE 47K 5% 1/10W	
IC002	8-750-032-35	IC CXA1202Q-Z			R052	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W
IC003	8-759-710-09	IC NJM2233AM			R053	1-216-081-00	METAL GLAZE 22K 5% 1/10W
					R054	1-216-081-00	METAL GLAZE 22K 5% 1/10W

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
Q306	8-729-100-66	TRANSISTOR 2SC1623		R313	1-216-121-00	METAL GLAZE 1M 5% 1/10W	
Q307	8-729-920-74	TRANSISTOR 2SC2412K-QR		R314	1-216-047-00	METAL GLAZE 820 5% 1/10W	
Q308	8-729-901-01	TRANSISTOR DTC144EK		R315	1-216-085-00	METAL GLAZE 33K 5% 1/10W	
Q309	8-729-901-01	TRANSISTOR DTC144EK		R316	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W	
Q403	8-729-901-06	TRANSISTOR DTA144EK		R317	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W	
Q404	8-729-901-06	TRANSISTOR DTA144EK		R318	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
Q407	8-729-920-74	TRANSISTOR 2SC2412K-QR		R319	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W	
Q408	8-729-901-01	TRANSISTOR DTC144EK		R320	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W	
Q501	8-729-901-01	TRANSISTOR DTC144EK		R321	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
Q502	8-729-100-66	TRANSISTOR 2SC1623		R322	1-216-085-00	METAL GLAZE 33K 5% 1/10W	
Q503	8-729-805-25	TRANSISTOR 2SB1121		R323	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
Q504	8-729-100-66	TRANSISTOR 2SC1623		R325	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
Q505	8-729-805-25	TRANSISTOR 2SB1121		R326	1-216-029-00	METAL GLAZE 150 5% 1/10W	
Q506	8-729-901-01	TRANSISTOR DTC144EK		R327	1-216-029-00	METAL GLAZE 150 5% 1/10W	
Q507	8-729-901-06	TRANSISTOR DTA144EK		R328	1-216-085-00	METAL GLAZE 33K 5% 1/10W	
Q508	8-729-901-01	TRANSISTOR DTC144EK		R329	1-216-121-00	METAL GLAZE 1M 5% 1/10W	
Q509	8-729-920-74	TRANSISTOR 2SC2412K-QR		R330	1-216-059-00	METAL GLAZE 2.7K 5% 1/10W	
Q510	8-729-920-74	TRANSISTOR 2SC2412K-QR		R331	1-216-055-00	METAL GLAZE 1.8K 5% 1/10W	
RESISTOR				R332	1-216-059-00	METAL GLAZE 2.7K 5% 1/10W	
R101	1-216-296-00	METAL GLAZE 0 5% 1/8W		R333	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R201	1-216-113-00	METAL GLAZE 470K 5% 1/10W		R334	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R202	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W		R335	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R203	1-216-081-00	METAL GLAZE 22K 5% 1/10W		R336-A	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R204	1-216-081-00	METAL GLAZE 22K 5% 1/10W		R336-B	1-216-099-00	METAL GLAZE 120K 5% 1/10W	
R205	1-216-093-00	METAL GLAZE 68K 5% 1/10W		R337	1-216-089-00	METAL GLAZE 47K 5% 1/10W	
R206	1-216-089-00	METAL GLAZE 47K 5% 1/10W		R338	1-216-089-00	METAL GLAZE 47K 5% 1/10W	
R209	1-216-101-00	METAL GLAZE 150K 5% 1/10W		R339	1-216-097-00	METAL GLAZE 100K 5% 1/10W	
R210	1-216-081-00	METAL GLAZE 22K 5% 1/10W		R341	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R211	1-216-073-00	METAL GLAZE 10K 5% 1/10W		R342	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R212	1-216-049-00	METAL GLAZE 1K 5% 1/10W		R343	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R213	1-216-045-00	METAL GLAZE 680 5% 1/10W		R401	1-216-043-00	METAL GLAZE 560 5% 1/10W	
R214	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W		R402	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W	
R215	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W		R403	1-216-172-00	METAL GLAZE 82 5% 1/8W	
R216	1-216-025-00	METAL GLAZE 100 5% 1/10W		R405	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R217	1-216-079-00	METAL GLAZE 18K 5% 1/10W		R406	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R218	1-216-085-00	METAL GLAZE 33K 5% 1/10W		R407	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R219	1-216-089-00	METAL GLAZE 47K 5% 1/10W		R408	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R220	1-216-304-11	METAL GLAZE 3.3 5% 1/10W		R410	1-216-093-00	METAL GLAZE 68K 5% 1/10W	
R221	1-216-304-11	METAL GLAZE 3.3 5% 1/10W		R411	1-216-093-00	METAL GLAZE 68K 5% 1/10W	
R222	1-216-304-11	METAL GLAZE 3.3 5% 1/10W		R414	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W	
R223	1-216-073-00	METAL GLAZE 10K 5% 1/10W		R415	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R224	1-216-295-00	METAL GLAZE 0 5% 1/10W		R416	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R301	1-216-041-00	METAL GLAZE 470 5% 1/10W		R417	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R302	1-216-041-00	METAL GLAZE 470 5% 1/10W		R418	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R303	1-216-085-00	METAL GLAZE 33K 5% 1/10W		R419	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R304	1-216-081-00	METAL GLAZE 22K 5% 1/10W		R420	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R305	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W		R421	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R306	1-216-035-00	METAL GLAZE 270 5% 1/10W		R423	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R307	1-216-031-00	METAL GLAZE 180 5% 1/10W		R428	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R309	1-216-081-00	METAL GLAZE 22K 5% 1/10W		R429	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R310	1-216-083-00	METAL GLAZE 27K 5% 1/10W		R432	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R312	1-216-073-00	METAL GLAZE 10K 5% 1/10W		R435	1-216-295-00	METAL GLAZE 0 5% 1/10W	
				R436	1-216-295-00	METAL GLAZE 0 5% 1/10W	

When indicating parts by reference number, please include the board name.

CM-13

FR-38

Ref.No	Part No.	Description	Remark
R437	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R442	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R444	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R446	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R447	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R448	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R449	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R501	1-216-691-11	METAL CHIP 47K 0.50% 1/10W	
R502	1-216-691-11	METAL CHIP 47K 0.50% 1/10W	
R503	1-216-101-00	METAL GLAZE 150K 5% 1/10W	
R504	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R505	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R506	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R507	1-216-069-00	METAL GLAZE 6.8K 5% 1/10W	
R508	1-216-069-00	METAL GLAZE 6.8K 5% 1/10W	
R510	1-216-063-00	METAL GLAZE 3.9K 5% 1/10W	
R511	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R512	1-216-069-00	METAL GLAZE 6.8K 5% 1/10W	
R513	1-216-063-00	METAL GLAZE 3.9K 5% 1/10W	
R514	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W	
R515	1-216-079-00	METAL GLAZE 18K 5% 1/10W	
R516	1-216-045-00	METAL GLAZE 680 5% 1/10W	
R517	1-216-067-00	METAL GLAZE 5.6K 5% 1/10W	
R518	1-216-055-00	METAL GLAZE 1.8K 5% 1/10W	
R519	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W	
R520	1-216-079-00	METAL GLAZE 18K 5% 1/10W	
R521	1-216-045-00	METAL GLAZE 680 5% 1/10W	
R522	1-216-067-00	METAL GLAZE 5.6K 5% 1/10W	
R523	1-216-055-00	METAL GLAZE 1.8K 5% 1/10W	
R524	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R525	1-216-081-00	METAL GLAZE 22K 5% 1/10W	
R527	1-216-097-00	METAL GLAZE 100K 5% 1/10W	
R531	1-216-097-00	METAL GLAZE 100K 5% 1/10W	
R532	1-216-089-00	METAL GLAZE 47K 5% 1/10W	
R533	1-216-295-00	METAL GLAZE 0 5% 1/10W	

VARIABLE RESISTOR

RV301	1-230-496-11	RES, ADJ, CARBON 10K
RV401	1-230-499-11	RES, ADJ, CARBON 100K
RV501	1-228-993-00	RES, ADJ, CARBON 4.7K

CRYSTAL

X301	1-567-699-11	VIBRATOR, CRYSTAL (5.94755MHz)
X401	1-577-116-21	VIBRATOR, CRYSTAL (16MHz)

Ref.No	Part No.	Description	Remark
*A-7062-469-A	FR-38 (P) BOARD, COMPLETE (Ref.No 6,000 Series)		
1-808-652-11	DISPLAY PANEL, LIQUID CRYSTAL		
*3-674-390-00	HOLDER (B), LED		
3-735-201-01	COVER, LED		
*3-735-208-01	HOLDER, INDICATION TUBE		
*3-940-593-01	HOLDER, LED		

CAPACITOR

C092	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C104	1-163-101-00	CERAMIC CHIP 22PF	5% 50V
C105	1-163-101-00	CERAMIC CHIP 22PF	5% 50V
C106	1-163-009-11	CERAMIC CHIP 0.001MF	50V
C107	1-131-352-00	ELECT(SOLID) 6.8MF	20% 6.3V
C108	1-163-035-00	CERAMIC CHIP 0.047MF	50V
C110	1-163-009-11	CERAMIC CHIP 0.001MF	50V
C201	1-163-105-00	CERAMIC CHIP 33PF	5% 50V
C202	1-163-105-00	CERAMIC CHIP 33PF	5% 50V
C203	1-163-035-00	CERAMIC CHIP 0.047MF	50V

CONNECTOR

CN109	1-506-482-11	PIN, CONNECTOR 3P
-------	--------------	-------------------

DIODE

D001	8-719-920-05	LED SLP281C-50 (PLAY)
D002	8-719-820-51	LED TLSG126 (ON/STANDBY)
D003	8-719-980-83	LED GL3PR43 (REC)
D004	8-719-812-32	LED TLY123 (PAUSE/STILL)
D102	8-719-918-96	LED AA3422S (EDIT)
D103	8-719-812-32	LED TLY123 (SYNCHRO EDIT)
D104	8-719-974-88	LED LT9322E (LCD BACK LIGHT)
D105	8-719-400-18	DIODE MA152WK
D180	8-719-400-18	DIODE MA152WK
D202	8-719-104-34	DIODE 1S2836
D203	8-719-400-18	DIODE MA152WK

IC

IC101	8-752-816-26	IC CXP5078H-056Q
IC102	8-741-100-47	IC SBX1610-09
IC103	8-759-937-56	IC S-8054ALB-LM-S
IC201	8-759-910-84	IC MB88201-170N

JUMPER RESISTOR

JR201	1-216-295-00	METAL GLAZE 0 5% 1/10W
JR202	1-216-295-00	METAL GLAZE 0 5% 1/10W
JR203	1-216-295-00	METAL GLAZE 0 5% 1/10W
JR301	1-216-296-00	METAL GLAZE 0 5% 1/8W
JR302	1-216-296-00	METAL GLAZE 0 5% 1/8W
JR303	1-216-296-00	METAL GLAZE 0 5% 1/8W

COIL

L111	1-410-192-51	INDUCTOR CHIP 10UH
------	--------------	--------------------

When indicating parts by reference number, please include the board name.

VI-101

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
C025	1-163-133-00	CERAMIC CHIP 470PF	5% 50V	C211	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C026	1-163-099-00	CERAMIC CHIP 189F	5% 50V	C212	1-163-123-00	CERAMIC CHIP 180PF	5% 50V
C027	1-163-125-00	CERAMIC CHIP 220PF	5% 50V	C213	1-163-116-00	CERAMIC CHIP 91PF	5% 50V
C031	1-163-103-00	CERAMIC CHIP 27PF	5% 50V	C214	1-163-109-00	CERAMIC CHIP 47PF	5% 50V
C033	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	C253	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C034	1-126-157-11	ELECT 10MF	20% 16V	C254	1-163-119-00	CERAMIC CHIP 120PF	5% 50V
C035	1-126-157-11	ELECT 10MF	20% 16V	C255	1-163-127-00	CERAMIC CHIP 270PF	5% 50V
C037	1-126-157-11	ELECT 10MF	20% 16V	C256	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C039	1-163-033-00	CERAMIC CHIP 0.022MF	50V	C257	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C040	1-163-091-00	CERAMIC CHIP 8PF	0.25PF 50V	C258	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C041	1-163-103-00	CERAMIC CHIP 27PF	5% 50V	C259	1-163-095-00	CERAMIC CHIP 12PF	5% 50V
C042	1-163-038-00	CERAMIC CHIP 0.1MF	25V	C260	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C043	1-164-232-11	CERAMIC CHIP 0.01MF	50V	C262	1-163-111-00	CERAMIC CHIP 56PF	5% 50V
C045	1-124-465-00	ELECT 0.47MF	20% 50V	C263	1-163-111-00	CERAMIC CHIP 56PF	5% 50V
C046	1-126-157-11	ELECT 10MF	20% 16V	C264	1-163-038-00	CERAMIC CHIP 0.1MF	25V
C047	1-124-465-00	ELECT 0.47MF	20% 50V	C267	1-163-109-00	CERAMIC CHIP 47PF	5% 50V
C048	1-163-121-00	CERAMIC CHIP 150PF	5% 50V	C268	1-163-133-00	CERAMIC CHIP 470PF	5% 50V
C049	1-126-301-11	ELECT 1MF	20% 50V	C270	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C050	1-126-301-11	ELECT 1MF	20% 50V	C271	1-164-161-11	CERAMIC CHIP 0.0022MF	10% 50V
C051	1-126-157-11	ELECT 10MF	20% 16V	C274	1-126-157-11	ELECT 10MF	20% 16V
C052	1-126-157-11	ELECT 10MF	20% 16V	C275	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C053	1-126-157-11	ELECT 10MF	20% 16V	C276	1-163-088-00	CERAMIC CHIP 5PF	0.25PF 50V
C054	1-126-157-11	ELECT 10MF	20% 16V	C277	1-163-105-00	CERAMIC CHIP 33PF	5% 50V
C055	1-126-157-11	ELECT 10MF	20% 16V	C300	1-163-097-00	CERAMIC CHIP 15PF	5% 50V
C056	1-163-033-00	CERAMIC CHIP 0.022MF	50V	C315	1-163-123-00	CERAMIC CHIP 180PF	5% 50V
C057	1-163-125-00	CERAMIC CHIP 220PF	5% 50V	C316	1-124-589-11	ELECT 47MF	20% 16V
C060	1-163-035-00	CERAMIC CHIP 0.047MF	50V	C317	1-124-589-11	ELECT 47MF	20% 16V
C061	1-163-035-00	CERAMIC CHIP 0.047MF	50V	C320	1-163-115-00	CERAMIC CHIP 82PF	5% 50V
C101	1-126-160-11	ELECT 1MF	20% 50V	C321	1-163-035-00	CERAMIC CHIP 0.047MF	50V
C102	1-124-463-00	ELECT 0.1MF	20% 50V	C402	1-163-093-00	CERAMIC CHIP 10PF	5% 50V
C103	1-164-232-11	CERAMIC CHIP 0.01MF	50V	C403	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
C104	1-124-239-00	ELECT 6.8MF	20% 10V	C404	1-126-301-11	ELECT 1MF	20% 50V
C105	1-164-232-11	CERAMIC CHIP 0.01MF	50V	C405	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C106	1-126-160-11	ELECT 1MF	20% 50V	C406	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V
C107	1-124-239-00	ELECT 6.8MF	20% 10V	C407	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C109	1-126-160-11	ELECT 1MF	20% 50V	C408	1-126-163-11	ELECT 4.7MF	20% 35V
C110	1-126-160-11	ELECT 1MF	20% 50V	C409	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C111	1-126-160-11	ELECT 1MF	20% 50V	C410	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C112	1-124-239-00	ELECT 6.8MF	20% 10V	C411	1-126-157-11	ELECT 10MF	20% 16V
C113	1-163-033-00	CERAMIC CHIP 0.022MF	50V	C412	1-163-118-00	CERAMIC CHIP 110PF	5% 50V
C114	1-126-160-11	ELECT 1MF	20% 50V	C413	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V
C115	1-126-160-11	ELECT 1MF	20% 50V	C414	1-126-163-11	ELECT 4.7MF	20% 35V
C116	1-126-160-11	ELECT 1MF	20% 50V	C415	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V
C117	1-163-033-00	CERAMIC CHIP 0.022MF	50V	C416	1-163-131-00	CERAMIC CHIP 390PF	5% 50V
C200	1-126-157-11	ELECT 10MF	20% 16V	C500	1-126-157-11	ELECT 10MF	20% 16V
C201	1-126-157-11	ELECT 10MF	20% 16V	C501	1-163-033-00	CERAMIC CHIP 0.022MF	50V
C202	1-163-033-00	CERAMIC CHIP 0.022MF	50V	C502	1-124-465-00	ELECT 0.47MF	20% 50V
C204	1-163-109-00	CERAMIC CHIP 47PF	5% 50V	C503	1-163-033-00	CERAMIC CHIP 0.022MF	50V
C205	1-163-038-00	CERAMIC CHIP 0.1MF	25V	C504	1-126-157-11	ELECT 10MF	20% 16V
C206	1-163-115-00	CERAMIC CHIP 82PF	5% 50V	C507	1-126-157-11	ELECT 10MF	20% 16V
C207	1-164-182-11	CERAMIC CHIP 0.0033MF	10% 50V	C508	1-163-038-00	CERAMIC CHIP 0.1MF	25V
C209	1-163-107-00	CERAMIC CHIP 39PF	5% 50V	C509	1-124-254-00	ELECT 0.68MF	20% 50V
C210	1-163-097-00	CERAMIC CHIP 15PF	5% 50V	C510	1-124-257-00	ELECT 2.2MF	20% 50V

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
C511	1-126-157-11	ELECT 10MF	20% 16V	JR006	1-216-296-00	METAL GLAZE 0 5% 1/8W	
C512	1-126-176-11	ELECT 220MF	20% 6.3V	JR007	1-216-295-00	METAL GLAZE 0 5% 1/10W	
C513	1-164-232-11	CERAMIC CHIP 0.01MF	50V	JR008	1-216-295-00	METAL GLAZE 0 5% 1/10W	
C514	1-126-157-11	ELECT 10MF	20% 16V	JR009	1-216-295-00	METAL GLAZE 0 5% 1/10W	
C515	1-124-589-11	ELECT 47MF	20% 10V	JR010	1-216-295-00	METAL GLAZE 0 5% 1/10W	
C516	1-124-471-00	ELECT 1000MF	20% 6.3V	JR011	1-216-296-00	METAL GLAZE 0 5% 1/8W	
C625	1-127-515-11	ELECT(SOLID) 47MF	20% 6.3V	JR012	1-216-296-00	METAL GLAZE 0 5% 1/8W	
<u>CONNECTOR</u>				JR013	1-216-295-00	METAL GLAZE 0 5% 1/10W	
CN001	1-568-074-11	CONNECTOR (RECEPTALE) 10P		JR014	1-216-296-00	METAL GLAZE 0 5% 1/8W	
CN002	1-568-078-11	CONNECTOR (RECEPTALE) 18P		JR015	1-216-296-00	METAL GLAZE 0 5% 1/8W	
CN003	1-506-472-11	PIN, CONNECTOR 7P		JR016	1-216-296-00	METAL GLAZE 0 5% 1/8W	
CN006	1-506-471-11	PIN, CONNECTOR 6P		JR017	1-216-296-00	METAL GLAZE 0 5% 1/8W	
CN007	1-506-470-11	PIN, CONNECTOR 5P		JR018	1-216-295-00	METAL GLAZE 0 5% 1/10W	
CN101	*1-564-317-11	PIN, BOARD TO BOARD 5P		JR019	1-216-295-00	METAL GLAZE 0 5% 1/10W	
CN102	*1-564-317-11	PIN, BOARD TO BOARD 5P		JR020	1-216-295-00	METAL GLAZE 0 5% 1/10W	
<u>DIODE</u>				JR021	1-216-296-00	METAL GLAZE 0 5% 1/8W	
D001	8-719-800-76	DIODE 1SS226		JR022	1-216-295-00	METAL GLAZE 0 5% 1/10W	
D002	8-719-400-18	DIODE MA152WK		JR023	1-216-295-00	METAL GLAZE 0 5% 1/10W	
D250	8-719-800-76	DIODE 1SS226		JR024	1-216-295-00	METAL GLAZE 0 5% 1/10W	
D400	8-719-400-18	DIODE MA152WK		JR025	1-216-296-00	METAL GLAZE 0 5% 1/8W	
D401	8-719-400-18	DIODE MA152WK		JR026	1-216-296-00	METAL GLAZE 0 5% 1/8W	
D500	8-719-400-18	DIODE MA152WK		JR027	1-216-296-00	METAL GLAZE 0 5% 1/8W	
D501	8-719-400-18	DIODE MA152WK		JR028	1-216-295-00	METAL GLAZE 0 5% 1/10W	
<u>FILTER</u>				JR029	1-216-296-00	METAL GLAZE 0 5% 1/8W	
FL001	1-409-480-11	FILTER, TRAP		JR030	1-216-296-00	METAL GLAZE 0 5% 1/8W	
FL002	1-236-948-11	FILTER, LOW PASS		JR031	1-216-295-00	METAL GLAZE 0 5% 1/10W	
FL003	1-577-162-11	FILTER, CERAMIC		JR032	1-216-296-00	METAL GLAZE 0 5% 1/8W	
FL101	1-236-058-21	ENCAPSULATED COMPONENT		JR033	1-216-295-00	METAL GLAZE 0 5% 1/10W	
FL102	1-236-058-21	ENCAPSULATED COMPONENT		JR034	1-216-295-00	METAL GLAZE 0 5% 1/10W	
FL103	1-236-058-21	ENCAPSULATED COMPONENT		JR035	1-216-295-00	METAL GLAZE 0 5% 1/10W	
FL104	1-236-058-21	ENCAPSULATED COMPONENT		JR036	1-216-296-00	METAL GLAZE 0 5% 1/8W	
FL105	1-236-058-21	ENCAPSULATED COMPONENT		JR037	1-216-296-00	METAL GLAZE 0 5% 1/8W	
FL106	1-236-058-21	ENCAPSULATED COMPONENT		JR038	1-216-295-00	METAL GLAZE 0 5% 1/10W	
FL107	1-236-058-21	ENCAPSULATED COMPONENT		JR039	1-216-296-00	METAL GLAZE 0 5% 1/8W	
FL108	1-236-058-21	ENCAPSULATED COMPONENT		JR040	1-216-295-00	METAL GLAZE 0 5% 1/10W	
FL109	1-236-058-21	ENCAPSULATED COMPONENT		JR041	1-216-296-00	METAL GLAZE 0 5% 1/8W	
<u>IC</u>				JR042	1-216-295-00	METAL GLAZE 0 5% 1/10W	
IC001	8-752-034-40	IC CXA1200BQ		JR043	1-216-296-00	METAL GLAZE 0 5% 1/8W	
IC100	8-752-324-87	IC CXL1502M		JR044	1-216-296-00	METAL GLAZE 0 5% 1/8W	
IC400	8-752-033-86	IC CXA1203M		JR045	1-216-295-00	METAL GLAZE 0 5% 1/10W	
IC500	8-752-033-40	IC CXA1201Q		JR046	1-216-296-00	METAL GLAZE 0 5% 1/8W	
<u>JUMPER RESISTOR</u>				JR047	1-216-295-00	METAL GLAZE 0 5% 1/10W	
JR001	1-216-296-00	METAL GLAZE 0 5%	1/8W	JR048	1-216-295-00	METAL GLAZE 0 5% 1/10W	
JR002	1-216-296-00	METAL GLAZE 0 5%	1/8W	JR049	1-216-296-00	METAL GLAZE 0 5% 1/8W	
JR003	1-216-296-00	METAL GLAZE 0 5%	1/8W	JR050	1-216-296-00	METAL GLAZE 0 5% 1/8W	
JR004	1-216-295-00	METAL GLAZE 0 5%	1/10W	JR051	1-216-296-00	METAL GLAZE 0 5% 1/8W	
JR005	1-216-296-00	METAL GLAZE 0 5%	1/8W	JR052	1-216-296-00	METAL GLAZE 0 5% 1/8W	
				JR053	1-216-295-00	METAL GLAZE 0 5% 1/10W	
				JR054	1-216-296-00	METAL GLAZE 0 5% 1/8W	
				JR055	1-216-296-00	METAL GLAZE 0 5% 1/8W	
				JR056	1-216-295-00	METAL GLAZE 0 5% 1/10W	
				JR057	1-216-296-00	METAL GLAZE 0 5% 1/8W	
				JR058	1-216-296-00	METAL GLAZE 0 5% 1/8W	

When indicating parts by reference number, please include the board name.

VI-101

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
JR059	1-216-295-00	METAL GLAZE	0 5% 1/10W	L204	1-408-987-21	INDUCTOR	330UH
JR060	1-216-296-00	METAL GLAZE	0 5% 1/8W	L205	1-408-983-21	INDUCTOR	120UH
JR061	1-216-296-00	METAL GLAZE	0 5% 1/8W	L253	1-408-963-11	INDUCTOR	2.7UH
JR062	1-216-296-00	METAL GLAZE	0 5% 1/8W	L254	1-408-985-21	INDUCTOR	180UH
JR063	1-216-296-00	METAL GLAZE	0 5% 1/8W	L255	1-408-976-21	INDUCTOR	33UH
JR064	1-216-295-00	METAL GLAZE	0 5% 1/10W	L257	1-408-970-21	INDUCTOR	10UH
JR065	1-216-295-00	METAL GLAZE	0 5% 1/10W	L259	1-408-987-21	INDUCTOR	330UH
JR066	1-216-296-00	METAL GLAZE	0 5% 1/8W	L260	1-407-169-XX	INDUCTOR	100UH
JR067	1-216-295-00	METAL GLAZE	0 5% 1/10W	L261	1-408-989-21	INDUCTOR	470UH
JR068	1-216-296-00	METAL GLAZE	0 5% 1/8W	L262	1-408-987-21	INDUCTOR	330UH
JR069	1-216-296-00	METAL GLAZE	0 5% 1/8W	L304	1-408-981-21	INDUCTOR	82UH
JR070	1-216-296-00	METAL GLAZE	0 5% 1/8W	L306	1-408-968-21	INDUCTOR	6.8UH
JR071	1-216-296-00	METAL GLAZE	0 5% 1/8W	L400	1-408-978-21	INDUCTOR	47UH
JR072	1-216-295-00	METAL GLAZE	0 5% 1/10W	L500	1-407-169-XX	INDUCTOR	100UH
JR073	1-216-295-00	METAL GLAZE	0 5% 1/10W	L501	1-407-169-XX	INDUCTOR	100UH
JR074	1-216-296-00	METAL GLAZE	0 5% 1/8W	<u>LEAD PIN</u>			
JR075	1-216-296-00	METAL GLAZE	0 5% 1/8W	LPO01	4-352-844-01	PIN, LEAD, COATING	
JR076	1-216-295-00	METAL GLAZE	0 5% 1/10W	LPO02	4-352-844-01	PIN, LEAD, COATING	
JR077	1-216-296-00	METAL GLAZE	0 5% 1/8W	<u>IC LINK</u>			
JR078	1-216-295-00	METAL GLAZE	0 5% 1/10W	PS300A	1-532-605-00	LINK, IC	
JR079	1-216-295-00	METAL GLAZE	0 5% 1/10W	<u>TRANSISTOR</u>			
JR080	1-216-296-00	METAL GLAZE	0 5% 1/8W	Q001	8-729-901-06	TRANSISTOR	DTA144EK
JR081	1-216-295-00	METAL GLAZE	0 5% 1/10W	Q003	8-729-100-66	TRANSISTOR	2SC1623
JR082	1-216-295-00	METAL GLAZE	0 5% 1/10W	Q004	8-729-100-66	TRANSISTOR	2SC1623
JR083	1-216-295-00	METAL GLAZE	0 5% 1/10W	Q005	8-729-100-66	TRANSISTOR	2SC1623
JR084	1-216-295-00	METAL GLAZE	0 5% 1/10W	Q006	8-729-100-66	TRANSISTOR	2SC1623
JR085	1-216-295-00	METAL GLAZE	0 5% 1/10W	Q007	8-729-901-01	TRANSISTOR	DTC144EK
JR086	1-216-296-00	METAL GLAZE	0 5% 1/8W	Q008	8-729-901-06	TRANSISTOR	DTA144EK
JR087	1-216-295-00	METAL GLAZE	0 5% 1/10W	Q009	8-729-100-66	TRANSISTOR	2SC1623
JR088	1-216-296-00	METAL GLAZE	0 5% 1/8W	Q010	8-729-100-66	TRANSISTOR	2SC1623
JR089	1-216-296-00	METAL GLAZE	0 5% 1/8W	Q011	8-729-216-22	TRANSISTOR	2SA1162
JR090	1-216-295-00	METAL GLAZE	0 5% 1/10W	Q012	8-729-100-66	TRANSISTOR	2SC1623
JR091	1-216-296-00	METAL GLAZE	0 5% 1/8W	Q013	8-729-100-66	TRANSISTOR	2SC1623
JR092	1-216-296-00	METAL GLAZE	0 5% 1/8W	Q014	8-729-216-22	TRANSISTOR	2SA1162
JR094	1-216-296-00	METAL GLAZE	0 5% 1/8W	Q015	8-729-100-66	TRANSISTOR	2SC1623
JR095	1-216-296-00	METAL GLAZE	0 5% 1/8W	Q019	8-729-100-66	TRANSISTOR	2SC1623
JR096	1-216-295-00	METAL GLAZE	0 5% 1/10W	Q020	8-729-100-66	TRANSISTOR	2SC1623
JR097	1-216-295-00	METAL GLAZE	0 5% 1/10W	Q021	8-729-901-01	TRANSISTOR	DTC144EK
JR098	1-216-295-00	METAL GLAZE	0 5% 1/10W	Q022	8-729-100-66	TRANSISTOR	2SC1623
<u>COIL</u>				Q023	8-729-216-22	TRANSISTOR	2SA1162
L001	1-408-970-21	INDUCTOR	10UH	Q024	8-729-901-01	TRANSISTOR	DTC144EK
L002	1-408-975-21	INDUCTOR	27UH	Q200	8-729-216-22	TRANSISTOR	2SA1162
L003	1-408-978-21	INDUCTOR	47UH	Q201	8-729-901-01	TRANSISTOR	DTC144EK
L004	1-408-974-21	INDUCTOR	22UH	Q202	8-729-216-22	TRANSISTOR	2SA1162
L006	1-408-975-21	INDUCTOR	27UH	Q203	8-729-216-22	TRANSISTOR	2SA1162
L007	1-408-976-21	INDUCTOR	33UH	Q204	8-729-100-66	TRANSISTOR	2SC1623
L100	1-410-393-11	INDUCTOR CHIP	100UH	Q205	8-729-100-66	TRANSISTOR	2SC1623
L101	1-410-393-11	INDUCTOR CHIP	100UH	Q251	8-729-100-66	TRANSISTOR	2SC1623
L200	1-407-169-XX	INDUCTOR	100UH	Q252	8-729-100-66	TRANSISTOR	2SC1623
L201	1-408-984-21	INDUCTOR	150UH	Q254	8-729-901-06	TRANSISTOR	DTA144EK
L202	1-407-169-XX	INDUCTOR	100UH				
L203	1-408-969-21	INDUCTOR	8.2UH				

Note: The components identified by mark or dotted line with mark are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
Q255	8-729-100-66	TRANSISTOR 2SC1623		R035	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
Q256	8-729-216-22	TRANSISTOR 2SA1162		R036	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q257	8-729-100-66	TRANSISTOR 2SC1623		R037	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q260	8-729-100-66	TRANSISTOR 2SC1623		R038	1-216-045-00	METAL GLAZE 680 5%	1/10W
Q309	8-729-140-96	TRANSISTOR 2SD774-34		R039	1-216-059-00	METAL GLAZE 2.7K 5%	1/10W
Q310	8-729-100-66	TRANSISTOR 2SC1623		R040	1-216-035-00	METAL GLAZE 270 5%	1/10W
Q311	8-729-100-66	TRANSISTOR 2SC1623		R041	1-216-063-00	METAL GLAZE 3.9K 5%	1/10W
Q312	8-729-100-66	TRANSISTOR 2SC1623		R042	1-216-047-00	METAL GLAZE 820 5%	1/10W
Q313	8-729-100-66	TRANSISTOR 2SC1623		R044	1-216-047-00	METAL GLAZE 820 5%	1/10W
Q400	8-729-901-01	TRANSISTOR DTC144EK		R045	1-216-113-00	METAL GLAZE 470K 5%	1/10W
Q401	8-729-901-01	TRANSISTOR DTC144EK		R046	1-216-295-00	METAL GLAZE 0 5%	1/10W
Q402	8-729-901-01	TRANSISTOR DTC144EK		R047	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
Q403	8-729-901-01	TRANSISTOR DTC144EK		R048	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q404	8-729-901-06	TRANSISTOR DTA144EK		R049	1-216-025-00	METAL GLAZE 100 5%	1/10W
Q405	8-729-901-06	TRANSISTOR DTA144EK		R050	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
Q500	8-729-901-01	TRANSISTOR DTC144EK		R051	1-216-029-00	METAL GLAZE 150 5%	1/10W
Q501	8-729-100-66	TRANSISTOR 2SC1623		R052	1-216-121-00	METAL GLAZE 1M 5%	1/10W
Q502	8-729-119-78	TRANSISTOR 2SC2785-HFE		R053	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
Q503	8-729-216-22	TRANSISTOR 2SA1162		R056	1-216-069-00	METAL GLAZE 6.8K 5%	1/10W
Q900	8-729-901-01	TRANSISTOR DTC144EK		R059	1-216-067-00	METAL GLAZE 5.6K 5%	1/10W
Q901	8-729-216-22	TRANSISTOR 2SA1162		R062	1-216-041-00	METAL GLAZE 470 5%	1/10W
<u>RESISTOR</u>				R064	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W
R001	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	R065	1-216-021-00	METAL GLAZE 68 5%	1/10W
R002	1-216-051-00	METAL GLAZE 1.2K 5%	1/10W	R066	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R003	1-216-127-11	METAL GLAZE 1.8M 5%	1/10W	R067	1-216-295-00	METAL GLAZE 0 5%	1/10W
R004	1-216-073-00	METAL GLAZE 10K 5%	1/10W	R068	1-216-083-00	METAL GLAZE 27K 5%	1/10W
R005	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	R071	1-216-121-00	METAL GLAZE 1M 5%	1/10W
R006	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R072	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R008	1-216-095-00	METAL GLAZE 82K 5%	1/10W	R073	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
R009	1-216-663-11	METAL CHIP 3.3K 0.50%	1/10W	R074	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
R012	1-216-051-00	METAL GLAZE 1.2K 5%	1/10W	R075	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
R013	1-216-049-00	METAL GLAZE 1K 5%	1/10W	R076	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R016	1-216-049-00	METAL GLAZE 1K 5%	1/10W	R077	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R017	1-216-031-00	METAL GLAZE 180 5%	1/10W	R078	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R018	1-216-033-00	METAL GLAZE 220 5%	1/10W	R079	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R019	1-216-049-00	METAL GLAZE 1K 5%	1/10W	R080	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R020	1-216-049-00	METAL GLAZE 1K 5%	1/10W	R081	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R021	1-216-073-00	METAL GLAZE 10K 5%	1/10W	R082	1-216-051-00	METAL GLAZE 1.2K 5%	1/10W
R022	1-216-079-00	METAL GLAZE 18K 5%	1/10W	R100	1-216-121-00	METAL GLAZE 1M 5%	1/10W
R023	1-216-079-00	METAL GLAZE 18K 5%	1/10W	R101	1-216-029-00	METAL GLAZE 150 5%	1/10W
R024	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	R102	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R025	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R103	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W
R026	1-216-073-00	METAL GLAZE 10K 5%	1/10W	R104	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W
R027	1-216-073-00	METAL GLAZE 10K 5%	1/10W	R105	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W
R028	1-216-651-11	METAL CHIP 1K 0.50%	1/10W	R106	1-216-121-00	METAL GLAZE 1M 5%	1/10W
R029	1-216-643-11	METAL CHIP 470 0.50%	1/10W	R107	1-216-121-00	METAL GLAZE 1M 5%	1/10W
R030	1-216-041-00	METAL GLAZE 470 5%	1/10W	R108	1-216-121-00	METAL GLAZE 1M 5%	1/10W
R031	1-216-045-00	METAL GLAZE 680 5%	1/10W	R109	1-216-027-00	METAL GLAZE 120 5%	1/10W
R032-A	1-216-041-00	METAL GLAZE 470 5%	1/10W	R110	1-216-051-00	METAL GLAZE 1.2K 5%	1/10W
R032-B	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R111	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W
R033	1-216-059-00	METAL GLAZE 2.7K 5%	1/10W	R200	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R034	1-216-071-00	METAL GLAZE 8.2K 5%	1/10W	R201	1-216-073-00	METAL GLAZE 10K 5%	1/10W
				R203	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark
*A-7062-471-A PI-24 (P) BOARD, COMPLETE (Ref.No 4,000 Series)			
<u>CAPACITOR</u>			
C102	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
C103	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
C104	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
C105	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V
C106	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V
C107	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V
C108	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
C109	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
C110	1-163-011-11	CERAMIC CHIP 0.0015MF	10% 50V
<u>CONNECTOR</u>			
CN103	1-506-481-11	PIN, CONNECTOR 2P	
<u>JACK</u>			
CNJ101	1-561-534-41	SOCKET 21P	
CNJ102	1-563-304-21	JACK BLOCK, PIN 4P	
<u>DIODE</u>			
D101	8-719-106-80	DIODE RD13M-B2	
D102	8-719-105-32	DIODE RD2.7M-B2	
D103	8-719-106-43	DIODE RD9.1M-B1	
D104	8-719-106-43	DIODE RD9.1M-B1	
D105	8-719-106-43	DIODE RD9.1M-B1	
D106	8-719-106-43	DIODE RD9.1M-B1	
D107	8-719-106-43	DIODE RD9.1M-B1	
D108	8-719-106-43	DIODE RD9.1M-B1	
D109	8-719-106-43	DIODE RD9.1M-B1	
D110	8-719-106-43	DIODE RD9.1M-B1	
D111	8-719-106-43	DIODE RD9.1M-B1	
D112	8-719-106-43	DIODE RD9.1M-B1	
D113	8-719-106-43	DIODE RD9.1M-B1	
D114	8-719-106-43	DIODE RD9.1M-B1	
D115	8-719-106-43	DIODE RD9.1M-B1	
D116	8-719-106-43	DIODE RD9.1M-B1	
<u>JUMPER RESISTOR</u>			
JR004	1-216-295-00	METAL GLAZE 0	5% 1/10W
JR005	1-216-295-00	METAL GLAZE 0	5% 1/10W
JR006	1-216-295-00	METAL GLAZE 0	5% 1/10W
JR007	1-216-295-00	METAL GLAZE 0	5% 1/10W
JR008	1-216-295-00	METAL GLAZE 0	5% 1/10W
JR009	1-216-295-00	METAL GLAZE 0	5% 1/10W
JR010	1-216-295-00	METAL GLAZE 0	5% 1/10W
JR011	1-216-295-00	METAL GLAZE 0	5% 1/10W
<u>TRANSISTOR</u>			
Q101	8-729-901-06	TRANSISTOR DTA144EK	
Q102	8-729-901-01	TRANSISTOR DTC144EK	

Ref.No	Part No.	Description	Remark
<u>RESISTOR</u>			
R101	1-216-045-00	METAL GLAZE 680	5% 1/10W
R102	1-216-057-00	METAL GLAZE 2.2K	5% 1/10W
R103	1-216-295-00	METAL GLAZE 0	5% 1/10W
R104	1-216-043-00	METAL GLAZE 560	5% 1/10W
R105	1-216-077-00	METAL GLAZE 15K	5% 1/10W
R106	1-216-025-00	METAL GLAZE 100	5% 1/10W
R107	1-216-025-00	METAL GLAZE 100	5% 1/10W
R108	1-216-025-00	METAL GLAZE 100	5% 1/10W
R109	1-216-025-00	METAL GLAZE 100	5% 1/10W
R110	1-216-015-00	METAL GLAZE 39	5% 1/10W
R111	1-216-015-00	METAL GLAZE 39	5% 1/10W

*1-636-978-11 RM-44 BOARD (Ref.No 4,000 Series)			
<u>CAPACITOR</u>			
C201	1-163-809-11	CERAMIC CHIP 0.047MF	10% 25V
<u>CONNECTOR</u>			
CN202	1-506-468-11	PIN, CONNECTOR 3P	
<u>DIODE</u>			
D202	8-719-106-43	DIODE RD9.1M-B1	
D203	8-719-106-43	DIODE RD9.1M-B1	
<u>JACK</u>			
J201	1-562-732-11	SOCKET 5P (CONTROL L)	
<u>JUMPER RESISTOR</u>			
JR001	1-216-295-00	METAL GLAZE 0	5% 1/10W
JR002	1-216-295-00	METAL GLAZE 0	5% 1/10W
JR003	1-216-295-00	METAL GLAZE 0	5% 1/10W
<u>RESISTOR</u>			
R202	1-216-041-00	METAL GLAZE 470	5% 1/10W
<u>SWITCH</u>			
SW202	1-553-725-21	SWITCH, SLIDE (LANC S/M)	

*A-7062-473-A IN-41 (P) BOARD, COMPLETE (Ref.No 7,000 Series)			
<u>CAPACITOR</u>			
C004	1-126-157-11	ELECT 10MF	20% 16V
C005	1-126-301-11	ELECT 1MF	20% 50V
C006	1-124-443-00	ELECT 100MF	20% 10V
C008	1-124-472-11	ELECT 470MF	20% 10V

When indicating parts by reference number, please include the board name.

IN-41

AF-20

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
CO10	1-164-232-11	CERAMIC CHIP 0.01MF	50V	R041	1-216-039-00	METAL GLAZE 390 5%	1/10W
CO11	1-126-157-11	ELECT 10MF	20% 16V	R042	1-216-043-00	METAL GLAZE 560 5%	1/10W
<u>CONNECTOR</u>				R043	1-216-073-00	METAL GLAZE 10K 5%	1/10W
CN001	*1-506-773-11	CONNECTOR, BOARD TO BOARD 10P		R044	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
CN002	*1-506-773-11	CONNECTOR, BOARD TO BOARD 10P		*****			
CN601	*1-568-088-11	CONNECTOR (PLUG) 10P		*A-7062-474-A AF-20 (P) BOARD, COMPLETE (Ref.No 5,000 Series)			
CN602	1-568-092-11	CONNECTOR (PLUG) 18P		*****			
CN603	1-506-469-11	PIN, CONNECTOR 4P		<u>CAPACITOR</u>			
CN604	*1-563-607-11	CONNECTOR, FLEXIBLE 30P		C501	1-164-232-11	CERAMIC CHIP 0.01MF	50V
CN701	1-506-472-11	PIN, CONNECTOR 7P		C502	1-163-038-00	CERAMIC CHIP 0.1NF	25V
CN702	1-506-474-11	PIN, CONNECTOR 9P		C503	1-163-007-11	CERAMIC CHIP 680PF	10% 50V
CN703	*1-564-006-21	PIN, CONNECTOR 7P		C504	1-124-465-00	ELECT 0.47MF	20% 50V
CN704	1-506-468-11	PIN, CONNECTOR 3P		C505	1-163-011-11	CERAMIC CHIP 0.0015MF	10% 50V
CN705	1-506-470-11	PIN, CONNECTOR 5P		C506	1-163-016-00	CERAMIC CHIP 0.0039MF	10% 50V
CN706	1-506-468-11	PIN, CONNECTOR 3P		C507	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
CN707	1-506-481-11	PIN, CONNECTOR 2P		C508	1-164-161-11	CERAMIC CHIP 0.0022MF	10% 50V
<u>FILTER</u>				C509	1-126-177-11	ELECT 100MF	20% 6.3V
FL001	1-235-484-11	FILTER, BAND PASS (1.5MHZ)		C510	1-163-036-00	CERAMIC CHIP 0.068MF	50V
<u>COIL</u>				C511	1-164-232-11	CERAMIC CHIP 0.01MF	50V
L001	1-408-785-21	INDUCTOR CHIP 47UH		C512	1-124-257-00	ELECT 2.2MF	20% 50V
<u>TRANSISTOR</u>				C513	1-126-154-11	ELECT 47MF	20% 6.3V
Q002	8-729-100-66	TRANSISTOR 2SC1623		C514	1-126-163-11	ELECT 4.7MF	20% 25V
Q003	8-729-100-66	TRANSISTOR 2SC1623		C515	1-163-133-00	CERAMIC CHIP 470PF	5% 50V
Q006	8-729-100-66	TRANSISTOR 2SC1623		C516	1-126-177-11	ELECT 100MF	20% 6.3V
Q007	8-729-100-66	TRANSISTOR 2SC1623		C517	1-163-088-00	CERAMIC CHIP 5PF	0.25PF 50V
Q008	8-729-100-66	TRANSISTOR 2SC1623		C518	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V
Q009	8-729-901-05	TRANSISTOR DTA124EK		C519	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
<u>RESISTOR</u>				C520	1-163-079-00	CERAMIC CHIP 0.039MF	10% 25V
R004	1-216-041-00	METAL GLAZE 470 5%	1/10W	C521	1-163-020-00	CERAMIC CHIP 0.0082MF	10% 50V
R005	1-216-073-00	METAL GLAZE 10K 5%	1/10W	C522	1-163-007-11	CERAMIC CHIP 680PF	10% 50V
R006	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C523	1-126-160-11	ELECT 1MF	20% 50V
R007	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C524	1-126-157-11	ELECT 10MF	20% 16V
R008	1-216-071-00	METAL GLAZE 8.2K 5%	1/10W	C525	1-126-157-11	ELECT 10MF	20% 16V
R009	1-216-045-00	METAL GLAZE 680 5%	1/10W	C526	1-124-638-11	ELECT 22MF	20% 6.3V
R011	1-216-039-00	METAL GLAZE 390 5%	1/10W	C527	1-126-177-11	ELECT 100MF	20% 6.3V
R012	1-216-089-00	METAL GLAZE 47K 5%	1/10W	C529	1-126-301-11	ELECT 1MF	20% 50V
R014	1-216-063-00	METAL GLAZE 3.9K 5%	1/10W	C530	1-164-232-11	CERAMIC CHIP 0.01MF	50V
R018	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C531	1-126-177-11	ELECT 100MF	20% 6.3V
R019	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C534	1-163-109-00	CERAMIC CHIP 47PF	5% 50V
R020	1-216-059-00	METAL GLAZE 2.7K 5%	1/10W	C535	1-164-161-11	CERAMIC CHIP 0.0022MF	10% 50V
R021	1-216-099-00	METAL GLAZE 120K 5%	1/10W	C536	1-164-232-11	CERAMIC CHIP 0.01MF	50V
R022	1-216-097-00	METAL GLAZE 100K 5%	1/10W	C539	1-163-088-00	CERAMIC CHIP 5PF	0.25PF 50V
R023	1-216-051-00	METAL GLAZE 1.2K 5%	1/10W	<u>CONNECTOR</u>			
R026	1-216-073-00	METAL GLAZE 10K 5%	1/10W	CN501	1-563-311-11	CONNECTOR, BOARD TO BOARD 10P	
R028	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W	CN502	1-563-311-11	CONNECTOR, BOARD TO BOARD 10P	
R031	1-216-049-00	METAL GLAZE 1K 5%	1/10W	<u>IC</u>			
R040	1-216-071-00	METAL GLAZE 8.2K 5%	1/10W	IC501	8-752-013-71	IC CX20137A	

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark
<u>COIL</u>			
L501	1-408-948-00	INDUCTOR 220UH	
<u>BOARD</u>			
PWB501*1-619-037-11 AF-20 BOARD			
<u>RESISTOR</u>			
R501	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R502	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R503	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R504	1-216-121-00	METAL GLAZE 1M 5%	1/10W
R505	1-216-107-00	METAL GLAZE 270K 5%	1/10W
R506	1-249-416-11	CARBON 820 5%	1/4W
R507	1-249-416-11	CARBON 820 5%	1/4W
R508	1-216-097-00	METAL GLAZE 100K 5%	1/10W
R509	1-216-075-00	METAL GLAZE 12K 5%	1/10W
R510	1-216-063-00	METAL GLAZE 3.9K 5%	1/10W
R511	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
R512	1-216-045-00	METAL GLAZE 680 5%	1/10W
R513	1-216-059-00	METAL GLAZE 2.7K 5%	1/10W
R514	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
R515	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
R516	1-216-059-00	METAL GLAZE 2.7K 5%	1/10W
R517	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R519	1-216-079-00	METAL GLAZE 18K 5%	1/10W
R521	1-216-079-00	METAL GLAZE 18K 5%	1/10W
R523	1-216-089-00	METAL GLAZE 4.7K 5%	1/10W
R524	1-216-083-00	METAL GLAZE 2.7K 5%	1/10W
R525	1-216-079-00	METAL GLAZE 18K 5%	1/10W
R527	1-216-058-00	METAL GLAZE 2.4K 5%	1/10W
R528	1-216-059-00	METAL GLAZE 2.7K 5%	1/10W
R530	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R531	1-249-428-11	CARBON 8.2K 5%	1/4W
<u>VARIABLE RESISTOR</u>			
RV503	1-228-994-00	RES, ADJ, CARBON 10K	

*A-7062-475-A FC-43 (P) BOARD, COMPLETE (Ref.No 1,000 Series)			

<u>CAPACITOR</u>			
C801	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C802	1-163-033-00	CERAMIC CHIP 0.022MF	50V
C803	1-163-033-00	CERAMIC CHIP 0.022MF	50V
C804	1-163-033-00	CERAMIC CHIP 0.022MF	50V
C805	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C806	1-163-131-00	CERAMIC CHIP 390PF	5% 50V
C807	1-163-033-00	CERAMIC CHIP 0.022MF	50V
C808	1-164-182-11	CERAMIC CHIP 0.0033MF	10% 50V
C809	1-163-038-00	CERAMIC CHIP 0.1MF	25V

Ref.No	Part No.	Description	Remark
C810	1-163-038-00	CERAMIC CHIP 0.1MF	25V
C811	1-164-232-11	CERAMIC CHIP 0.01MF	50V
C812	1-163-038-00	CERAMIC CHIP 0.1MF	25V
C813	1-126-157-11	ELECT 10MF	20% 16V
C820	1-163-103-00	CERAMIC CHIP 27PF	5% 50V
<u>DIODE</u>			
D801	8-719-118-21	DIODE 1SS283	
D802	8-719-118-21	DIODE 1SS283	
<u>DELAY LINE</u>			
DL801	1-415-593-11	DELAY LINE, ULTRASONIC GLASS	
<u>JUMPER RESISTOR</u>			
JR801	1-216-296-00	METAL GLAZE 0 5%	1/8W
<u>COIL</u>			
L802	1-408-970-21	INDUCTOR 10UH	
L803	1-408-978-21	INDUCTOR 47UH	
L804	1-407-169-XX	INDUCTOR 100UH	
<u>TRANSISTOR</u>			
Q801	8-729-100-66	TRANSISTOR 2SC1623	
Q802	8-729-100-66	TRANSISTOR 2SC1623	
Q803	8-729-100-66	TRANSISTOR 2SC1623	
Q804	8-729-100-66	TRANSISTOR 2SC1623	
Q805	8-729-100-66	TRANSISTOR 2SC1623	
Q806	8-729-100-66	TRANSISTOR 2SC1623	
Q807	8-729-100-66	TRANSISTOR 2SC1623	
Q808	8-729-100-66	TRANSISTOR 2SC1623	
Q809	8-729-901-06	TRANSISTOR DTA144EK	
<u>RESISTOR</u>			
R801	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R802	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R803	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
R804	1-216-033-00	METAL GLAZE 220 5%	1/10W
R805	1-216-041-00	METAL GLAZE 470 5%	1/10W
R806	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R807	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R808	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R809	1-216-031-00	METAL GLAZE 180 5%	1/10W
R810	1-216-043-00	METAL GLAZE 560 5%	1/10W
R811	1-216-041-00	METAL GLAZE 470 5%	1/10W
R812	1-216-059-00	METAL GLAZE 2.7K 5%	1/10W
R813	1-216-039-00	METAL GLAZE 390 5%	1/10W
R814	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R815	1-216-085-00	METAL GLAZE 33K 5%	1/10W
R816	1-216-041-00	METAL GLAZE 470 5%	1/10W
R817	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R818	1-216-027-00	METAL GLAZE 120 5%	1/10W
R819	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
R820	1-216-037-00	METAL GLAZE 330 5%	1/10W

When indicating parts by reference number, please include the board name.

FC-43

UC-3

CC-23

Ref.No	Part No.	Description	Remark
R821	1-216-041-00	METAL GLAZE 470 5%	1/10W
R822	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R823	1-216-037-00	METAL GLAZE 330 5%	1/10W
R824	1-216-047-00	METAL GLAZE 820 5%	1/10W
R825	1-216-077-00	METAL GLAZE 15K 5%	1/10W
R826	1-216-085-00	METAL GLAZE 33K 5%	1/10W
R827	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R828	1-216-067-00	METAL GLAZE 5.6K 5%	1/10W
R829	1-216-067-00	METAL GLAZE 5.6K 5%	1/10W

VARIABLE RESISTOR

RV801 1-228-993-00 RES, ADJ, CARBON 4.7K (LEVEL)

*1-628-908-11 UC-3 BOARD (Ref.No 3,000 Series) *****

CONNECTOR

CN001 1-566-529-11 CONNECTOR, FPC (ZIF) 13P
CN002 1-566-527-11 CONNECTOR, FPC (ZIF) 11P

JUMPER RESISTOR

JR001	1-216-296-00	METAL GLAZE 0 5%	1/8W
JR002	1-216-295-00	METAL GLAZE 0 5%	1/10W
JR003	1-216-296-00	METAL GLAZE 0 5%	1/8W
JR004	1-216-296-00	METAL GLAZE 0 5%	1/8W
JR005	1-216-296-00	METAL GLAZE 0 5%	1/8W
JR006	1-216-295-00	METAL GLAZE 0 5%	1/10W
JR008	1-216-296-00	METAL GLAZE 0 5%	1/8W
JR009	1-216-296-00	METAL GLAZE 0 5%	1/8W
JR010	1-216-296-00	METAL GLAZE 0 5%	1/8W
JR011	1-216-296-00	METAL GLAZE 0 5%	1/8W
JR012	1-216-296-00	METAL GLAZE 0 5%	1/8W
JR013	1-216-295-00	METAL GLAZE 0 5%	1/10W
JR019	1-216-296-00	METAL GLAZE 0 5%	1/8W
JR022	1-216-295-00	METAL GLAZE 0 5%	1/10W
JR023	1-216-296-00	METAL GLAZE 0 5%	1/8W

CONNECTOR

W001 1-574-353-11 CABLE, FLAT (1.0MM PITCH) 18P

*1-628-694-21 CC-23 BOARD (Ref.No 2,600 Series) *****

CONNECTOR

CN001 *1-562-880-21 CONNECTOR, CARD EDGE 15P

CONNECTOR

W001 1-574-354-11 CABLE, FLAT (1.0MM PITCH) 15P

Ref.No	Part No.	Description	Remark
		MISCELLANEOUS *****	
	1-466-328-31	MODULATOR, RF (RFU-2027)	
	1-466-347-31	MODULATOR, RF (RFU-2028) (UK MODEL)	
M902	8-835-331-01	MOTOR, DC U-22A (CAPSTAN MOTOR)	
M903	A-7040-160-A	MOTOR ASSY, THREADING (LOADING MOTOR)	

ACCESSORIES AND PACKING MATERIALS *****

Part No. Description Remark

1-465-590-11 REMOTE COMMANDER (RMT-463)
1-551-513-00 CORD ASSY, COAXIAL
A 1-558-032-11 CORD, POWER (UK MODEL)
1-574-039-21 CORD, CONNECTION
A 1-575-132-11 CORD, POWER (AEP, E MODEL)



3-695-308-01 DRIVER, VOLUME
*3-704-282-01 BAG (STANDARD), PROTECTION
*3-735-224-31 INDIVIDUAL CARTON
*3-735-225-02 CUSHION (LEFT)
*3-735-226-02 CUSHION (RIGHT)

*3-735-228-01 SPACER
3-750-104-11 MANUAL, INSTRUCTION (ENGLISH)
3-750-104-41 MANUAL, INSTRUCTION (AEP MODEL) (FRENCH/GERMAN/SPANISH)
3-750-104-51 MANUAL, INSTRUCTION (AEP MODEL) (SWEDISH/DUTCH/ITALIAN)
*3-940-469-01 CASE, ACC

HARDWARE LIST *****

SCREW

7-621-772-20 SCREW +B 2X5
7-627-555-88 PRECISION SCREW +P 1.4X1.8
7-627-553-37 PRECISION SCREW +P 2X3 TYPE 3
7-627-553-47 PRECISION SCREW +P 2X4 TYPE 3
7-685-646-79 SCREW +BVTP 3X8 TYPE2 IT-3
7-685-646-79 SCREW +BVTP 3X8 TYPE2

Note: The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

SECTION 8 MECHANICAL ADJUSTMENTS

For mechanical adjustments, refer to the separate "8mm Video Mechanical Adjustments Manual III (U mechanism)"

8-1. Tape pass adjustment

(Track shift)

Based on four types of pilot signals, the 8mm video system controls the tape transport speed instantaneously and uses ATF (Automatic Track Finding) to attain high-precision tracking. This makes a tracking adjustment control knob unnecessary. Accurate tracing has also been realized.

However, the ATF system has caused a problem in adjusting the tape pass system. The tape pass cannot be adjusted completely because the ATF automatically compensates even if the head's tracing fluctuates slightly.

Therefore, to do fine tracking adjustment, first switch to the track shift mode. Since the ATF is forced to operate and the tracking amount (approx. $\frac{1}{4}$) shifts to a constant amount, fine tracking adjustment can be easily done. A track shift jig is unnecessary.

8-1-1. Setting the track shift mode

- 1) Remove the soldering of the CM-13 board's pin ① **A**. Lift up the pin from the pattern and land.
- 2) Short the FR-38 boards CN109 pin ② to CN109 pin ① ③.
- 3) Switch to the test mode.

8-1-2. Preparation for adjustment


- 1) Clean the tape transport surfaces (tape guide, drum, capstan, and pinch roller).
- 2) Connection to an oscilloscope and waveform output.

1ch : The drum head's RF signal output CN006 pin ③ (V RF OUT)


Output method : Connect the external trigger output CN006 pin ④ (RF SW.P) to CN006 pin ⑤ (GND).

- 3) Playback the tracking alignment tape (WR5-1N).
- 4) Check if the entry and exit sides of the oscilloscope's RF waveform are flat.

If they are not flat, make the adjustment by following the separately published U mechanical series mechanical adjustment manual.

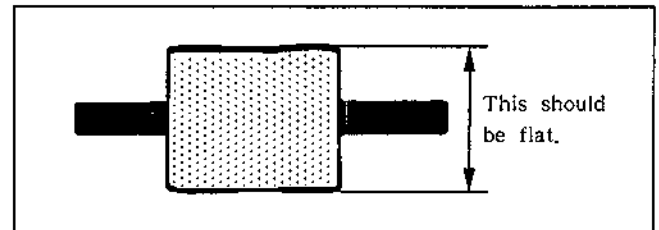

- 5) After the adjustment is completed, solder the CM-13 board's CN401 pin ① **A** and remove from the FR-38 board's CN109.

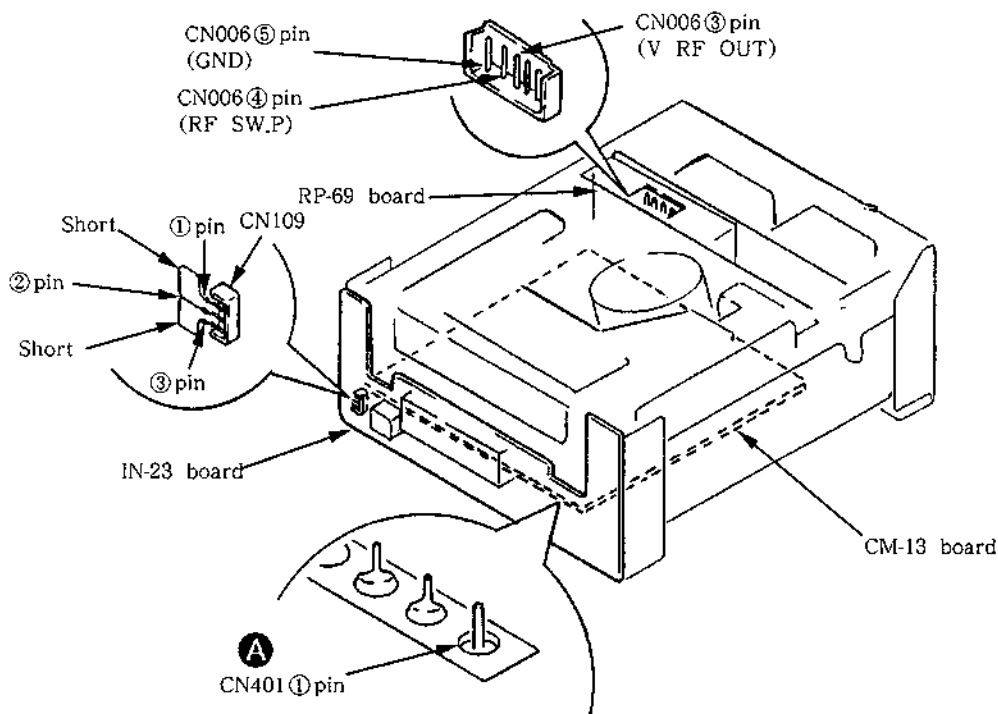

SECTION 9

ELECTRICAL ADJUSTMENTS

9-1. PREPARATION FOR ELECTRICAL SECTION ADJUSTMENT

See adjusting elements location diagram on page 134 for the adjustments.

For electrical adjustment, use the following measuring instruments.

[Instruments to be used]

- 1) Monitor TV
- 2) Oscilloscope : 2 phenomena, band 10MHz or wider, with delay mode (Use probe 10 : 1 unless specified otherwise)
- 3) Frequency counter
- 4) Pattern generator with video output terminal
- 5) Digital voltmeter
- 6) Audio generator
- 7) Audio level meter
- 8) Audio distortion meter
- 9) Audio attenuator
- 10) Alignment tape

For tracking adjustment

(WR5-1C) Part code : 8-967-995-06

For video frequency characteristics adjustment

(WR5-2C) Part code : 8-967-995-16

For operation confirmation (SP mode)

(WR5-3CSP) Part code : 8-967-995-27

For operation confirmation (LP mode)

(WR5-3CL) Part code : 8-967-995-36

[Connection of the instruments]

Unless specified otherwise, perform the adjustment by connecting the measuring instruments as shown in the figure below.

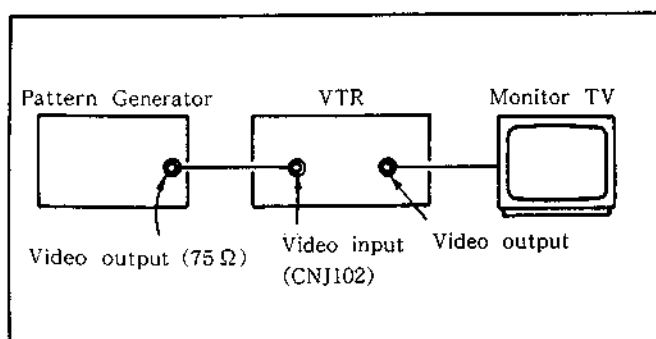


Fig. 9-1.

[Set-up for adjustment]

The video signal from the pattern generator is used as adjustment signal, so it must be within specifications. Connect the oscilloscope to CNJ102 on the PI-24 board (VIDEO IN) and confirm that amplitude of the video signal sync component is approx. 0.3V, amplitude of the video component approx. 0.7V, and amplitude of the burst component approx. 0.3V with a flat shape. Also confirm that the ratio between burst and red levels is 0.30 : 0.66.

The video (color bar) signal used for electrical adjustment is shown in Fig. 9-2.

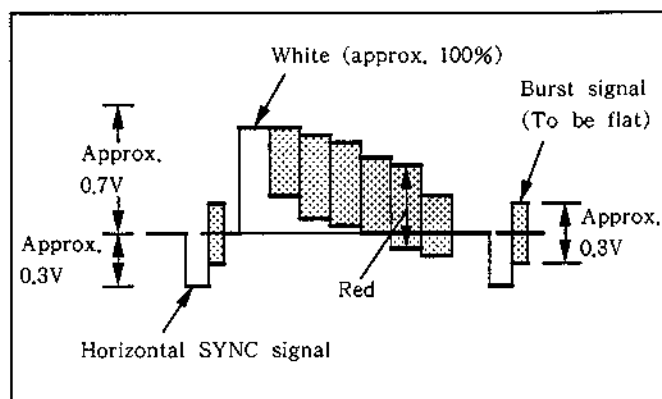


Fig. 9-2.

[Alignment tapes]

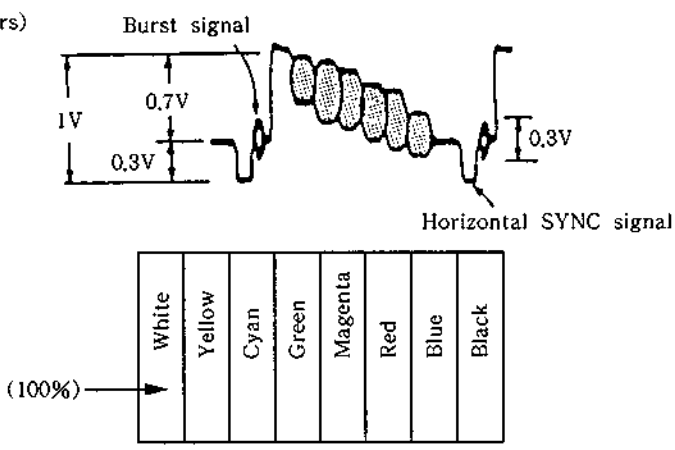
Tape	Content	Use																
Tracking (WR5-1C)	1. Recording area : PCM-video 2. Recording content : CH2 : 1MHz linearity adjustment signal	Drum linearity adjustment																
Video Frequency Response (WR5-2C)	1. Recording area : Video 2. Recording content : RF sweep 0 to 10MHz 3. Maker : 1, 3.58, 5.5 and 7MHz	Frequency response adjustment																
Operation Check SP mode (WR5-3CSP) LP mode (WR5-3CL)	<p>1. Recording area : Video 2. Recording content :</p> <p>■ Video track</p> <ul style="list-style-type: none"> • Video signals <table border="0"> <tr> <td>Color bars</td> <td>10sec</td> <td rowspan="2">} Iterative</td> </tr> <tr> <td>Monoscope</td> <td>8sec</td> </tr> </table> <p>(Color bars)</p>  <ul style="list-style-type: none"> • Audio signals (AFM) <table border="0"> <tr> <td>400Hz</td> <td>60% modulation</td> </tr> </table> ■ PCM area (WR5-3CSP only) <ul style="list-style-type: none"> • Audio signals (PCM) <table border="0"> <tr> <td>1kHz</td> <td>10sec</td> <td rowspan="4">} Iterative</td> </tr> <tr> <td>20Hz</td> <td>2sec</td> </tr> <tr> <td>400Hz</td> <td>4sec</td> </tr> <tr> <td>14kHz</td> <td>2sec</td> </tr> </table> <p>Note : PCM area is not included in WR5-3CL</p>	Color bars	10sec	} Iterative	Monoscope	8sec	400Hz	60% modulation	1kHz	10sec	} Iterative	20Hz	2sec	400Hz	4sec	14kHz	2sec	Operation check
Color bars	10sec	} Iterative																
Monoscope	8sec																	
400Hz	60% modulation																	
1kHz	10sec	} Iterative																
20Hz	2sec																	
400Hz	4sec																	
14kHz	2sec																	

Fig. 9-3.

[Input/output level and impedance]

Video input Pin jack
Input signal : 1Vp-p, 75 Ω unbalanced, negative sync


Video output Pin jack and 21p EURO
Output signal : 1Vp-p, 75 Ω unbalanced, negative sync

Audio input Pin jack
Input level : -10dBs
(0dBs=0.775Vrms)
Input impedance : 47k Ω or over

Audio output Pin jack
Specified output : -7.5dBs
Output impedance : 2.2k Ω or less
21p EURO
Specified output -6dBs
Output impedance : 1k Ω or less

[Adjustment order]

Perform the adjustment in the following order.

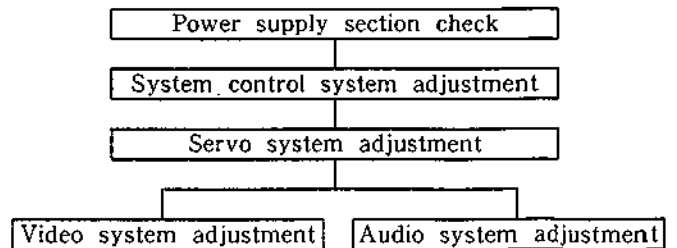

9-2. POWER SUPPLY VOLTAGE CHECK

Perform the measurement in playback mode.

1. UN 5.6V confirmation
Pin ⑤ of CN701(IN-41 board) should be $5.6 \pm 0.2Vdc$.
2. UN 9V confirmation
Pin ④ of CN701 (IN-41 board) should be $9.3 \pm 1Vdc$.
3. SW 5V confirmation
Pin ⑥ of CN701(IN-41 board) should be $5.0 \pm 0.2Vdc$.
4. SW 9V confirmation
Pin ③ of CN701(IN-41 board) should be $9.0 \pm 0.3Vdc$.

9-3. SYSTEM CONTROL SYSTEM ADJUSTMENTS

9-3-1. Mode Control, LCD Drive Microcomputer Oscillator Confirmation (FR-38 Board)

Mode	E-E
Signal	Arbitrary
Measurement Point	Pin ⑩ of IC101
Measuring Instrument	Frequency counter
Specified Value	$4.19 \pm 0.04MHz$

9-3-2. LINGS MASTER Microcomputer Oscillator Confirmation (FR-38 Board)

Mode	E-E
Signal	Arbitrary
Measurement Point	Pin ⑥ of IC201
Measuring Instrument	Frequency counter
Specified Value	$6 \pm 0.006MHz$

9-4. SERVO SYSTEM ADJUSTMENT

9-4-1. Oscillation Frequency Adjustment (CM-13 Board)

Mode	Recording
Signal	Arbitrary
Measurement Point	Pin ⑦ of IC502
Measuring Instrument	Frequency counter
Adjusting Element	RV501
Specified Value	479.89 ± 5.0kHz

9-4-2. Switching Position Adjustment (CM-13 Board)

Mode	Playback
Signal	Alignment tape : For operation confirmation (WR5-3CSP)
Measurement Point	CH-1 : Pin ③ of IC201 (VIDEO OUT) CH-2 : Pin ⑩ of IC401 (RF SWP)
Measuring Instrument	Oscilloscope
Adjusting Element	RV401
Specified Value	6.5 ± 0.3H (410 ± 20 μsec)

Adjusting method :

- 1) Short between Pin ③ and Pin ② on Board FR-38 CN109 (Test 2 mode).
- 2) Set to 6.5 ± 0.3H (410 ± 20 μs) with RV401.

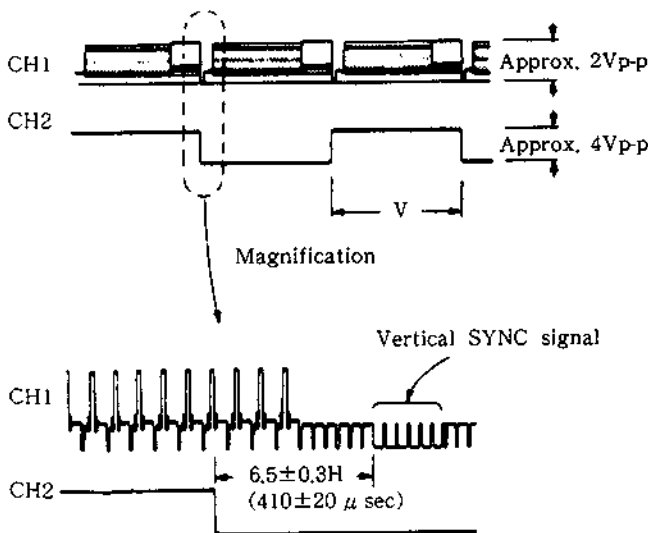


Fig. 9-4. Switching position adjustment

9-4-3. Playback SP/LP mode Adjustment (CM-13 Board)

Mode	Various playback (CUE)
Signal	Alignment tape : For operation confirmation (SP mode : WR5-3CSP) (LP mode : WR5-3CL)
Measurement Point	Pin ② and ③ of IC302
Measuring Instrument	Digital voltmeter
Adjusting Element	RV301
Specified Value	$\frac{(V_s + V_L)}{2}$

Adjusting method :

- 1) Set S602 (SP/LP) to LP, then playback an SP mode tape (WR5-3CSP) in cue mode.
- 2) Measure the voltage at IC302 Pin ② with a digital voltmeter and record. (V_s)
- 3) Set S602 (SP/LP) to SP, then playback an LP mode tape (WR5-3CL) in cue mode.
- 4) Measure the voltage at IC201 Pin ② with a digital voltmeter and record. (V_L)
- 5) Adjust RV301 so that the voltage at Pins ③ of IC302 is $(V_s + V_L) / 2$.

9.5. VIDEO ADJUSTMENT

As a rule, video system adjustment should be performed in accordance with the following order. The color video signal supplied from the pattern generator is used as video input signal for video system adjusting in the recording mode. Confirm that the SYNC signal and color burst signal conform to the set-up specifications during adjustment as shown in Fig. 5-2.

[Adjusting order]

1. Playback frequency characteristics adjustment
2. Flying erase check
3. Crystal oscillator fo adjustment
4. SYNC AGC adjustment
5. Y/C separation adjustment
6. Burst frag adjustment
7. Emphasis Input adjustment
8. PB CCD Input level adjustment
9. PB Y level adjustment
10. Y FM carrier frequency adjustment
11. Y FM deviation adjustment
12. AC clip adjustment
13. Chroma Emphasis fo adjustment
14. REC Y recording current adjustment
15. REC C level adjustment
16. Qvasi burst phase adjustment
17. Delay burst phase adjustment
18. REC ATF level adjustment

9-5-1. Playback Frequency Characteristics Adjustment (RP-69 Board)

1. CH1 and CH2 Adjustment

The adjusting element for CH2 is shown in parenthesis [].

Mode	Playback
Signal	Alignment tape : For frequency characteristics adjustment (WR5-2C)
Measurement Point	Pin ③ of CN006 External trigger : Pin ④ of CN006 Trigger slope : - [+]
Measuring Instrument	Oscilloscope
Adjusting Element	RV004 [RV003]
Specified Value	The ratio between the 5.5MHz level and the 3.58MHz level is 3 : 4.

Adjusting method :

- 1) Adjust RV004 [RV003] so that the ratio of the 3.58MHz level and 5.5MHz level is 4 : 3 [4 : 3].

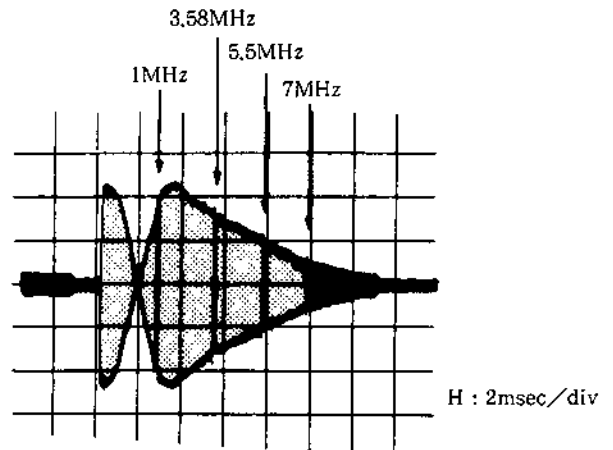


Fig. 9-6. Playback frequency characteristics adjustment

2. CH1' Adjustment

Mode	Playback pause (Still)
Signal	Alignment tape : For frequency characteristics adjustment (WR5-6N)
Measurement Point	Pin ① of CN006 External trigger : Pin ④ of CN006 Trigger slope : +
Measuring Instrument	Oscilloscope
Adjusting Element	RV201
Specified Value	The ratio between the 5.5MHz level and the 3.58MHz level is 3.5 : 4

Adjusting method :

- 1) Short the equivalent to Pin ③ of CN109 on Board FR-38 and Pin ② (Test 2 mode).
- 2) Adjust RV201 so that the ratio between the 5.5MHz level and the 3.58MHz level is 3.5 : 4.

9-5-2. Flying Erase Check (RP-69 Board)

Mode	Recording
Signal	Arbitrary
Measurement Point	Pin ② of CN001
Measuring Instrument	Frequency counter and oscilloscope
Specified Value	Frequency : 8.3 ± 0.5 MHz Voltage : Approx. 8Vp-p or more

- Note :** 1) Use an MP type tape.
2) Connect a frequency counter through a high input impedance ($1M \Omega$ or more), low-capacitance ($10pF$ or less) buffer amp (oscilloscope or the like).

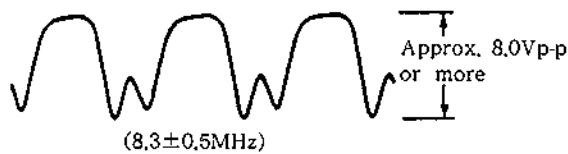


Fig. 9-7. Flying erase check

9-5-3. Crystal Oscillator fo Check (VI-101 Board)

Mode	Playback
Signal	Alignment tape : For operation confirmation (WR5-3CSP)
Measurement Point	Pin ⑩ of IC001
Measuring Instrument	Frequency counter
Specified Value	4433619 ± 150 Hz

- Note :** Connect the frequency counter through a buffer having high impedance (approx. $10M \Omega$) and low capacity (less than $10pF$).

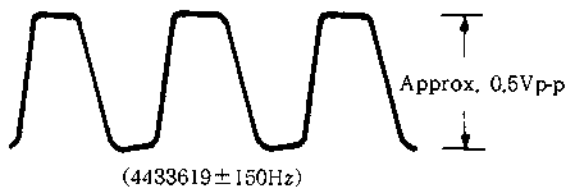


Fig. 9-8. Crystal oscillator fo check

9-5-4. SYNC AGC Adjustment (VI-101 Board)

Mode	E-E
Signal	Color bar
Measurement Point	Pin ⑨ of IC001
Measuring Instrument	Oscilloscope
Adjusting Element	RV500
Specified Value	0.5 ± 0.02 Vp-p

- Note :** VIDEO OUT terminal (CNJ102 on PI-24 board) should be terminated with 75Ω .

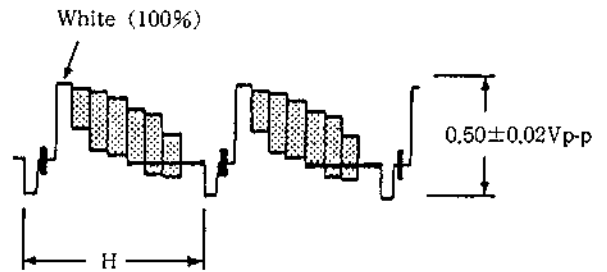


Fig. 9-9. SYNC AGC adjustment

9-5-5. Y/C Separation Adjustment (VI-101 Board)

Mode	E-E
Signal	Color bar
Measurement Point	Pin ⑨ of IC001
Measuring Instrument	Oscilloscope
Adjusting Element	RV001
Specified Value	Under $150mVp-p$ (residual chroma component)

Adjusting method :

- 1) Adjust RV001 so as to minimize the residual chroma component.

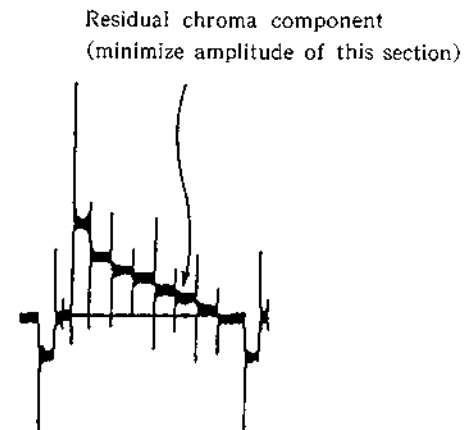


Fig. 9-10. Y/C separation adjustment

9-5-6. Burst Frag Adjustment (VI-101 Board)

Mode	Recording
Signal	Color bar
Measurement Point	CH1 : Pin ⑤ of IC001 (REC C RF OUT) CH2 : Pin ⑧ of IC001 (BF OUT)
Measuring Instrument	Oscilloscope
Adjusting Element	RV002
Specified Value	a=b (Refer to Fig. 5-9.)

Adjusting method :

- 1) Use RV002 to match the falling edge of the CH2 burst pulse to the center of the CH1 burst signal. (See Figure 5-9.)

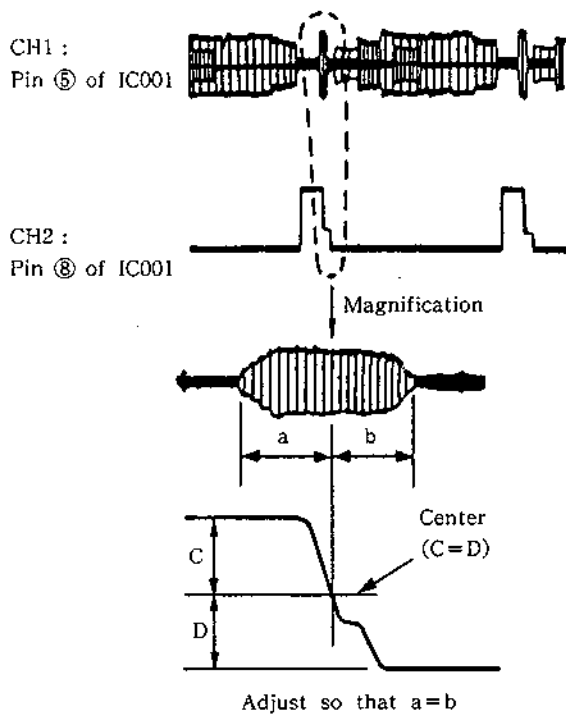


Fig. 9-11. burst frag

9-5-7. Emphasis Adjustment (VI-101 Board)

Mode	E-E
Signal	Color bar
Measurement Point	Pin ④ of IC001
Measuring Instrument	Oscilloscope
Adjusting Element	RV003
Specified Value	$0.5 \pm 0.02V_{p-p}$

Adjusting method :

- 1) Adjust to $0.50 \pm 0.02V_{p-p}$ with RV003.

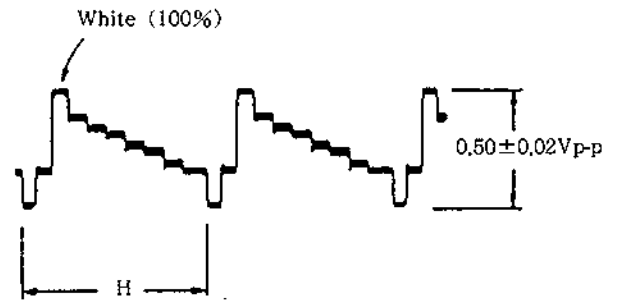


Fig. 9-12. Emphasis input level adjustment

9-5-8. PB CCD Input Level Adjustment (VI-101 Board)

Mode	Playback
Signal	Alignment tape for operation confirmation (WR5-3CSP) color bar section
Measurement Point	Pin ④ of IC001
Measuring Instrument	Oscilloscope
Adjusting Element	RV006
Specified Value	$0.5 \pm 0.02V_{p-p}$

Adjusting method :

- 1) Adjust to $0.50 \pm 0.02V_{p-p}$ with RV006.

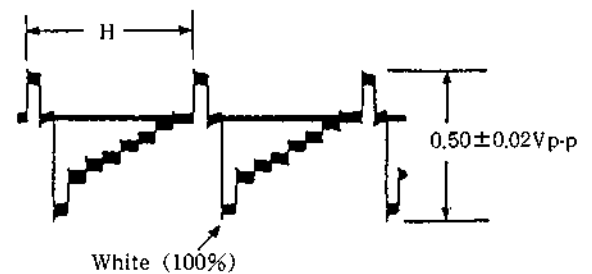


Fig. 9-13. PB CCD input level adjustment

9-5-9. PB Y Level Adjustment (VI-101 Board)

Mode	Playback
Signal	Alignment tape : For operation confirmation (WR5-3CSP) Color bar section
Measurement Point	Pin ③ of CN006
Measuring Instrument	Oscilloscope
Adjusting Element	RV007
Specified Value	$1.00 \pm 0.05V_{p-p}$

Note : 1) The VIDEO OUT terminal (CNJ102 on the PI-24 board) must be terminated in 75Ω .

Adjusting method :

- 1) Adjust to $1.00 \pm 0.05V_{p-p}$ with RV007.

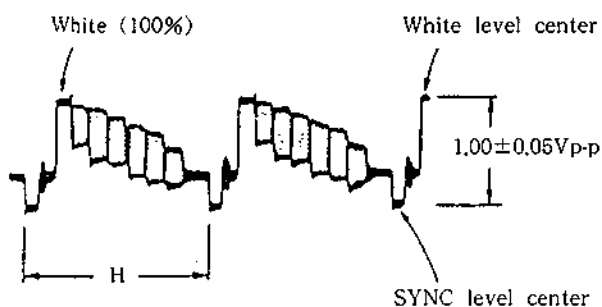


Fig. 9-14. PB Y level adjustment

9-5-10. Y FM Carrier Frequency Adjustment (VI-101 Board)

Mode	E-E
Signal	Non-signal
Measurement Point	Pin ③ of IC001
Measuring Instrument	Frequency counter
Adjusting Element	RV005
Specified Value	$4.38 \pm 0.02MHz$

Adjusting method :

- 1) Adjust to $4.38 \pm 0.02MHz$ with RV005.
- 2) Perform "Deviation Adjustment" and "Emphasis Adjustment" after this adjustment.



Fig. 9-15. Y FM Carrier Frequency Adjustment

9-5-11. Y FM Deviation Adjustment (VI-101 Board)

Mode	E-E
Signal	Color bar
Measurement Point	Pin ③ of CN006 : VIDEO OUT
Measuring Instrument	Oscilloscope
Adjusting Element	RV004
Specified Value	Playback level : $1.00 \pm 0.05V_{p-p}$

- Note :**
- 1) "PB Y Level Adjustment" and "Y FM Carrier Frequency Adjustment" should have been completed.
 - 2) VIDEO OUT terminal (CNJ102 on PI-24 board) should be terminated with 75Ω .
 - 3) EDIT switch (SW022 on FR-38 board) should be turned OFF.

Adjusting method :

- 1) Record color bar signal.
- 2) Play back the recorded signal.
- 3) Confirm the playback output level.
Specified value : $1.00 \pm 0.05V_{p-p}$
- 4) If the specified value is not satisfied, repeat steps 1) to 3) after turning RV004 as shown in the table below. (Table. 9)

	RV004 turning direction
When larger than specified value	Clock wise (○)
When smaller than specified value	Counter clock wise (○)

Table. 9.

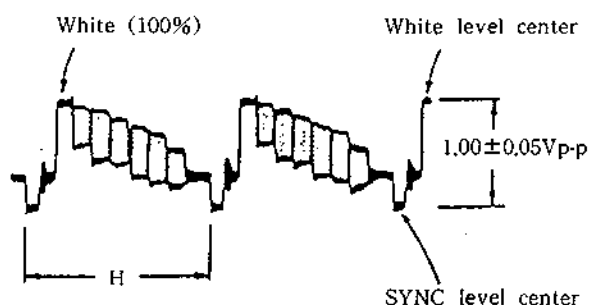


Fig. 9-16. Y FM deviation adjustment

9-5-12. AC Clip Check (VI-101 Board)

Mode	Recording
Signal	Color bar
Measurement Point	Pin ② of IC001
Measuring Instrument	Oscilloscope
Specified Value	$240 \pm 10\%$

Adjusting method :

- 1) Confirm that the white (100%) peak of the waveform output from pin ② of IC001 is $240 \pm 10\%$.

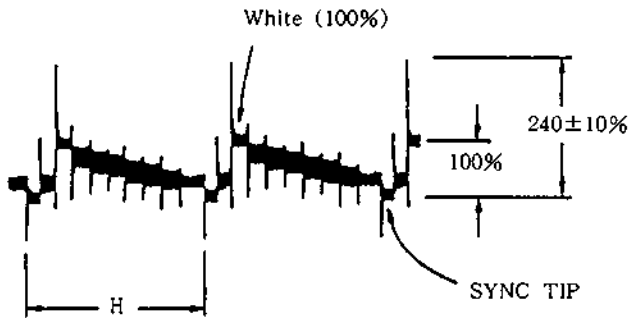


Fig. 9-17. AC clip check

9-5-13. Chroma Emphasis fo Adjustment (VI-101 Board)

Mode	E-E
Signal	Color bar
Measurement Point	Pin ⑤ of IC001
Measuring Instrument	Oscilloscope
Adjusting Element	FL002
Specified Value	Minimum fo component

Adjusting method :

- 1) Adjust FL002 so that the amplitude of the flat section of the red portion become minimum.

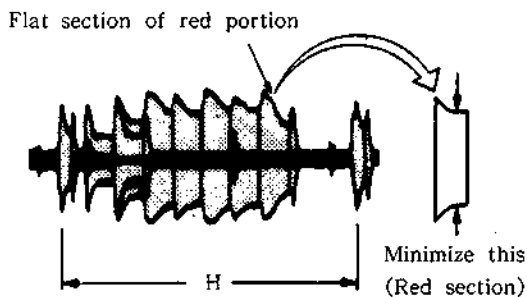


Fig. 9-18. Chroma emphasis fo adjustment

9-5-14. REC Y Level Adjustment (VI-101 Board)

Mode	E-E
Signal	Non-signal
Measurement Point	Pin ② of CN003
Measuring Instrument	Oscilloscope
Adjusting Element	RV200
Specified Value	$0.31 \pm 0.01V_{p-p}$

9-5-15. REC C Level Adjustment (VI-101 Board)

Mode	E-E
Signal	Color bar
Measurement Point	Pin ③ of CN003
Measuring Instrument	Oscilloscope
Adjusting Element	RV201
Specified Value	$150 \pm 10mV_{p-p}$

- Note :**
- 1) Be sure to always perform REC AFM level confirm and REC ATF level confirm after performing REC C level adjustment.
 - 2) Use MP-type tape.

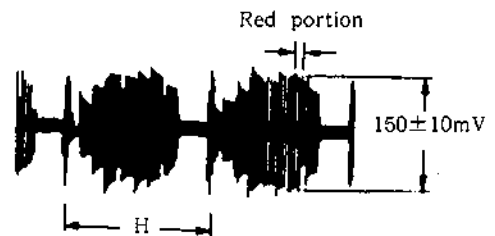


Fig. 9-19. REC C level adjustment

9-5-16. Quasi Burst Phase Adjustment (VI-101 Board)

1. Method using vectorscope

Mode	Playback
Signal	Tape with recorded color bars
Measurement Point	VIDEO OUT terminal
Measuring Instrument	Vectorscope
Adjusting Element	RV402
Specified Value	Phase of color luminance points in quasi burst mode is same as phase of color luminance points in through burst mode

Adjusting method :

- 1) Make a record of the phase of the color luminance points (especially red). (Through burst mode)
- 2) Connect pin ② of IC400 and pin ① of IC400 with a diode (ISS119, etc.). (Quasi burst mode)

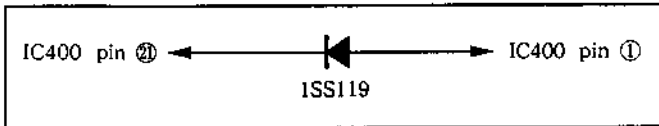


Fig. 9-20.

- 3) Adjust RV402 so that the phase of the color luminance points is the same as the phase recorded in 1).
- 4) Remove the diode.

2. Method using monitor TV

Mode	Playback
Signal	Tape with recorded color bars
Measurement Point	Confirmation on monitor TV screen
Measuring Instrument	screen
Adjusting Element	RV402
Specified Value	Minimum chroma flickering

Connection :

- 1) Connect pin ② of IC400 and pin ④ of CN002 (RF SWP) using a diode (ISS119, etc.).

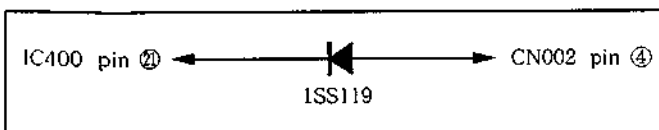


Fig. 9-21.

Adjusting method :

- 1) Set the color level of the monitor TV to maximum.
- 2) Adjust RV402 for minimum chroma flickering.

9-5-17. Delay Burst Phase Adjustment (VI-101 Board)

Mode	Playback pause (LP mode)
Signal	Alignment tape for operation check (WR5-3CL), color bars
Measurement Point	Confirmation on monitor TV screen
Measuring Instrument	screen
Adjusting Element	RV403
Specified Value	Minimum chroma flickering

Adjusting method :

- 1) Set the color level of the monitor TV to maximum.
- 2) Rotate RV403 fully in the counterclockwise direction (○).
- 3) Slowly rotate RV403 in the clockwise direction and stop at the position where there is minimum chroma flicker.

9-5-18. REC ATF Level Confirmation (CM-13 Board)

Mode	REC
Signal	Non-signal
Measurement Point	Pin ⑧ of CN401
Measuring Instrument	Oscilloscope
Specified Value	$380 \pm 40\text{mVp-p}$

Note : Use MP type tape.

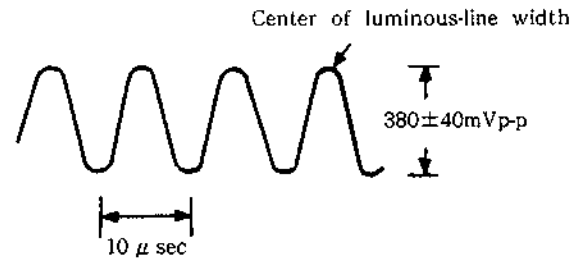


Fig. 9-22. REC ATF level confirmation

9.6. AUDIO SYSTEM ADJUSTMENTS

- Perform the adjustment by using the color bar signal as video signal input.

[Connection of audio measuring instruments]

Connect audio system measuring instruments as shown in the following diagram in addition to the video system measuring instruments.

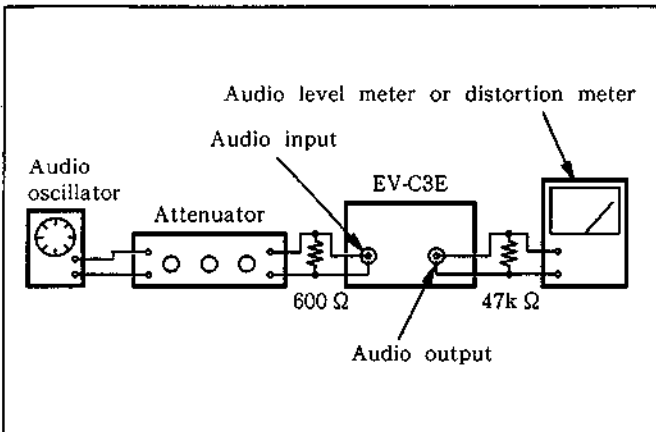


Fig. 9-23.

9-6-1. AFM Audio System Adjustment

[Adjusting order]

1. AFM carrier frequency adjustment
2. PB Level check
3. E-E output level check
4. Overall-level characteristics check
5. Overall-frequency characteristics check
6. Overall-distortion check
7. Overall-noise level check

1. AFM Carrier Frequency Adjustment (AF-20 Board)

Mode	Recording (SP mode)
Signal	Non-signal
Measurement Point	Pin ⑩ of CN502
Measuring Instrument	Frequency counter and oscilloscope
Adjusting Element	RV503
Specified Value	1500±3kHz

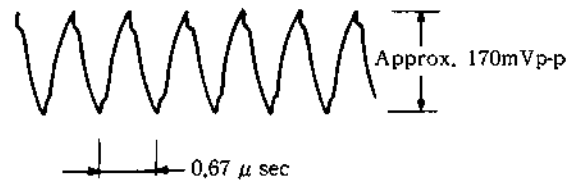


Fig. 9-24. AFM carrier frequency adjustment

2. PB Level Check (AF-20 Board)

Mode	Playback
Signal	Alignment tape (WR5-3CSP)
Measurement Point	CNJ102 RCA JACK Audio output
Measuring Instrument	Audio level meter
Specified Value	-7.5±3dBs

3. E-E Output Level Check

Mode	E-E
Signal	400Hz, -7.5dBs : Audio input
Measurement Point	CNJ102 RCA JACK Audio output
Measuring Instrument	Audio level meter
Specified Value	-7.5±2dBs

4. Overall Level Characteristics Check

Mode	Self-recording (SP mode)
Signal	400Hz, -7.5dBs : Audio input
Measurement Point	CNJ102 RCA JACK Audio output
Measuring Instrument	Audio level meter
Specified Value	-7.5±3dBs

Checking method :

- 1) Record the signal.
- 2) Play back the recorded section.
- 3) Confirm that the audio output level is -7.5±3dBs.

5. Overall Frequency Characteristics Check

Mode	Self-recording
Signal	Ⓐ 400Hz, -20dBs Ⓑ 30Hz, -20dBs Ⓒ 14kHz, -20dBs Audio output
Measurement Point	Audio output
Measuring Instrument	Audio level meter
Specified Value	When 400Hz playback output level is 0dB, 30Hz and 14kHz playback output level should be 0±3dB

Checking method :

- 1) Record signals of Ⓐ to Ⓒ in sequence.
- 2) Play back the recorded section.
- 3) Confirm that when the 400Hz playback output level is 0dB, the 30Hz and 14kHz playback output levels are both 0±3dB.

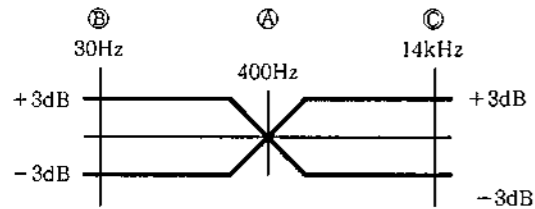


Fig. 9-25. AFM overall frequency characteristics check

6. Overall Distortion Check

Mode	Self-recording
Signal	400Hz, -7.5dBs : Audio input
Measurement Point	Audio output
Measuring Instrument	Distortion meter
Specified Value	Less than 0.5%

Checking method :

- 1) Record the signal.
- 2) Play back the recorded section.
- 3) Distortion should be less than 1.0%.

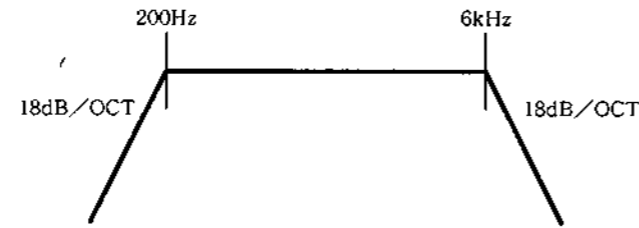


Fig. 9-26. Distortion measuring filter

7. Overall Noise Level Check

Mode	Self-recording and playback
Signal	Non-signal Plug in shorting plugs to Audio input
Measurement Point	Audio output
Measuring Instrument	Audio level meter
Specified Value	Less than -67.5dBs*


Checking method :

- 1) Record the signal.
- 2) Play back the recorded section.
- 3) Noise level should be less than -67.5dBs.*


* This is the value when an IHF-A hearing sensitivity correction filter is used.

9-7. ARRANGEMENT DIAGRAM FOR ADJUSTMENT PARTS

VI-101 BOARD (COMPONENT SIDE)

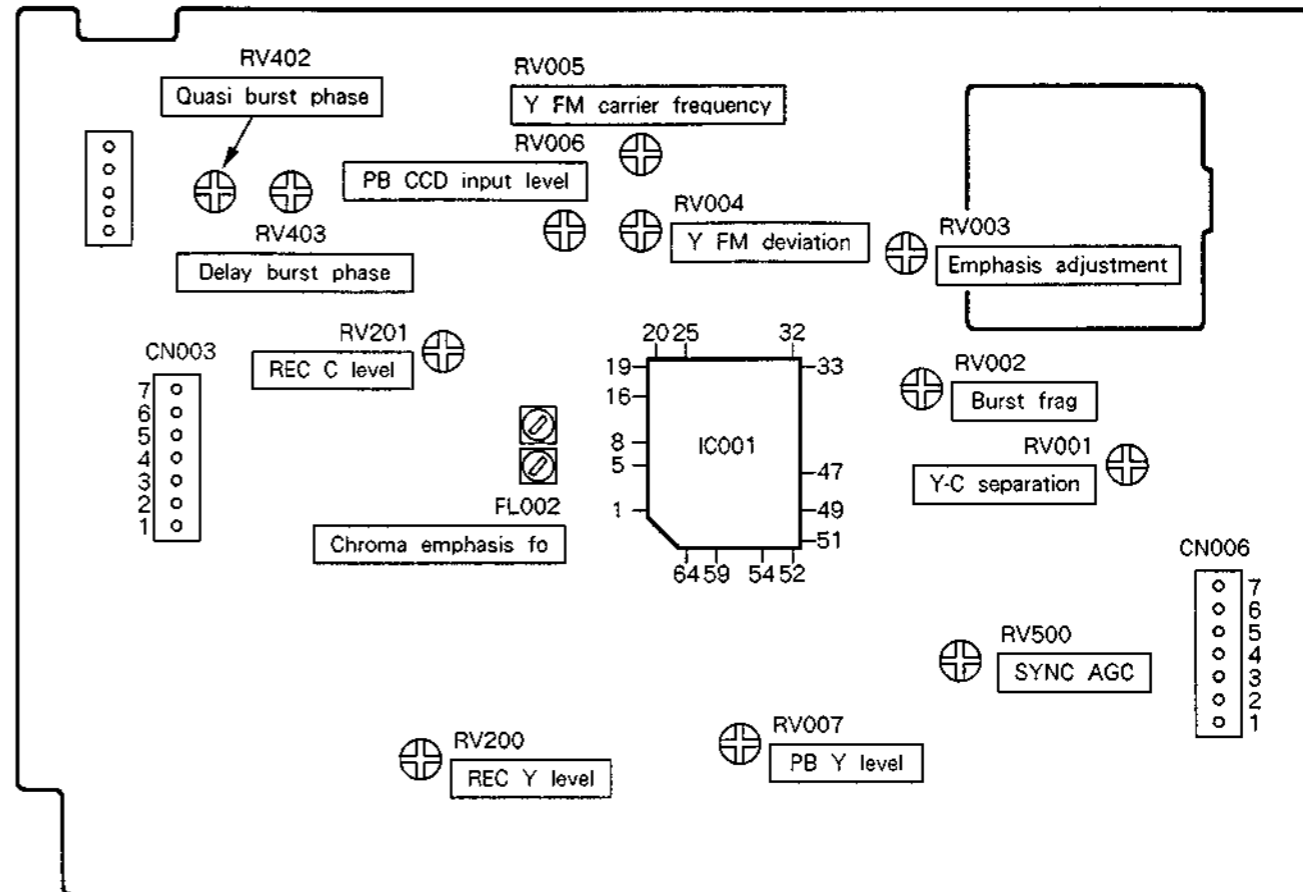


AF-20 BOARD (COMPONENT SIDE)

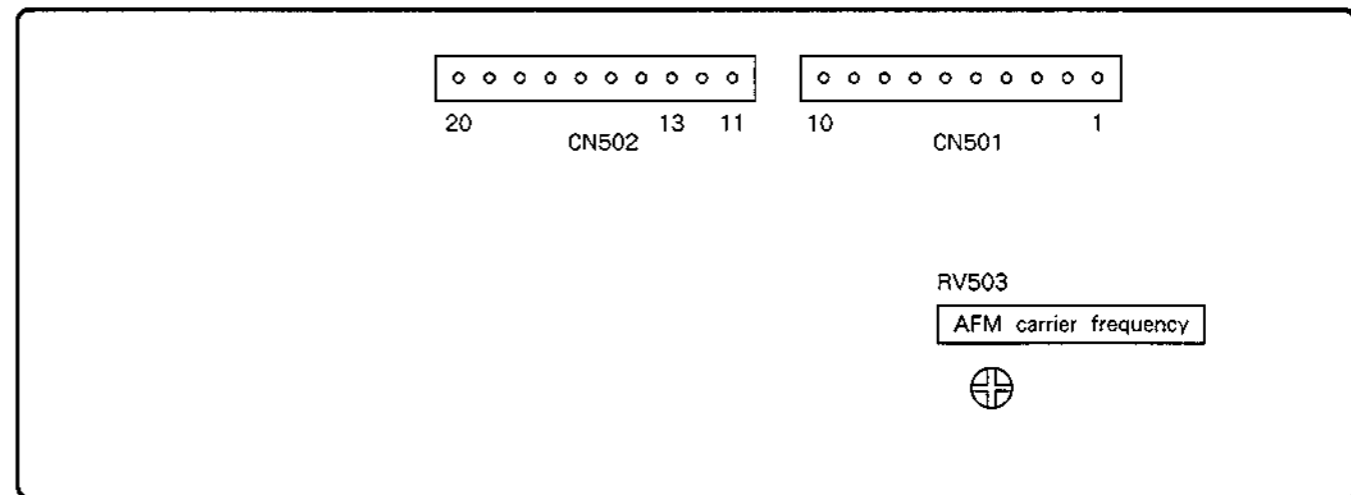


9-7. ARRANGEMENT DIAGRAM FOR ADJUSTMENT PARTS


VI-101 BOARD (COMPONENT SIDE)

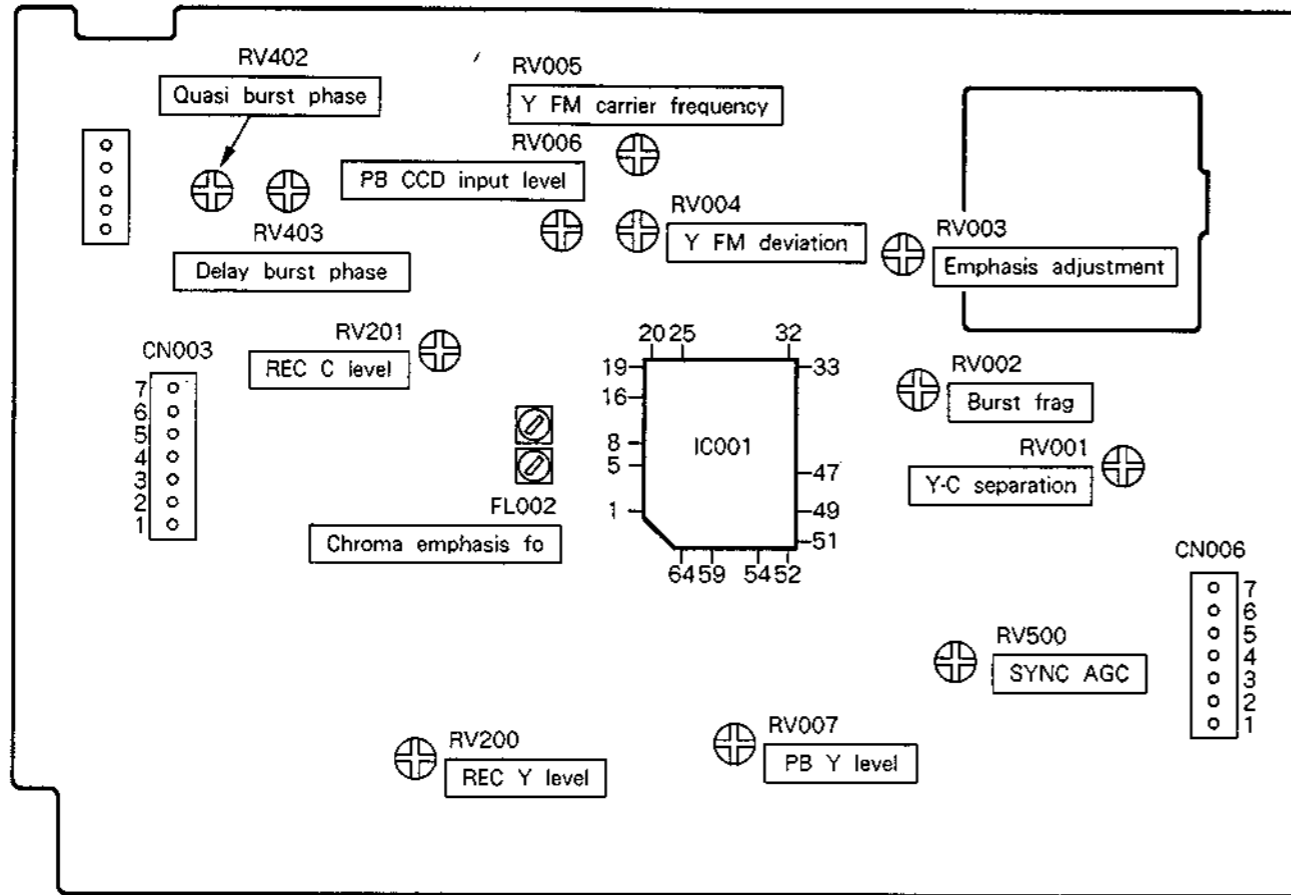


AF-20 BOARD (COMPONENT SIDE)

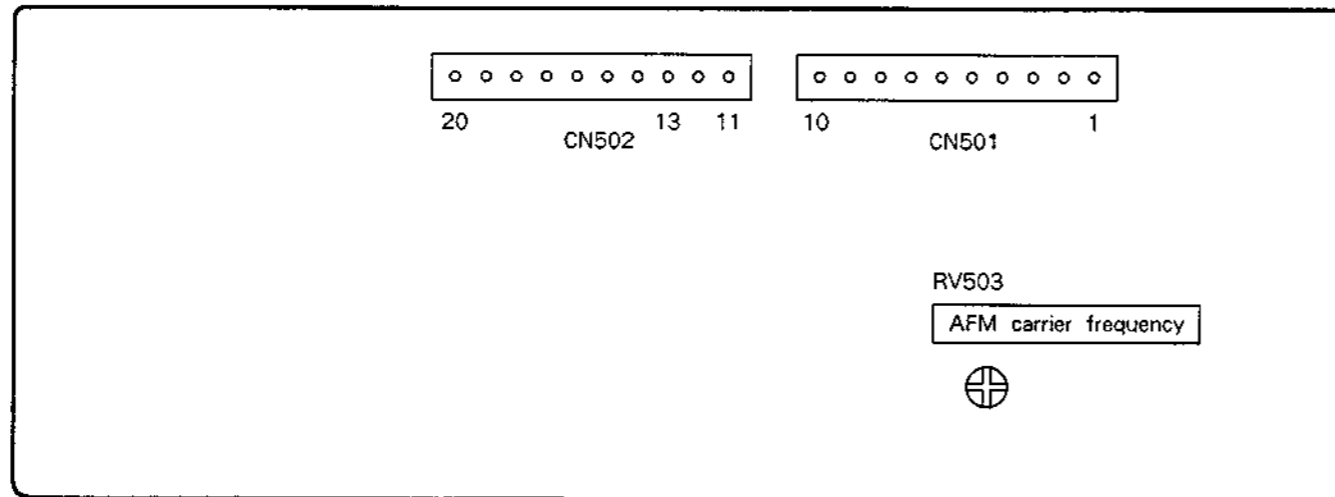


RP-69 BOARD (COMPONENT SIDE)

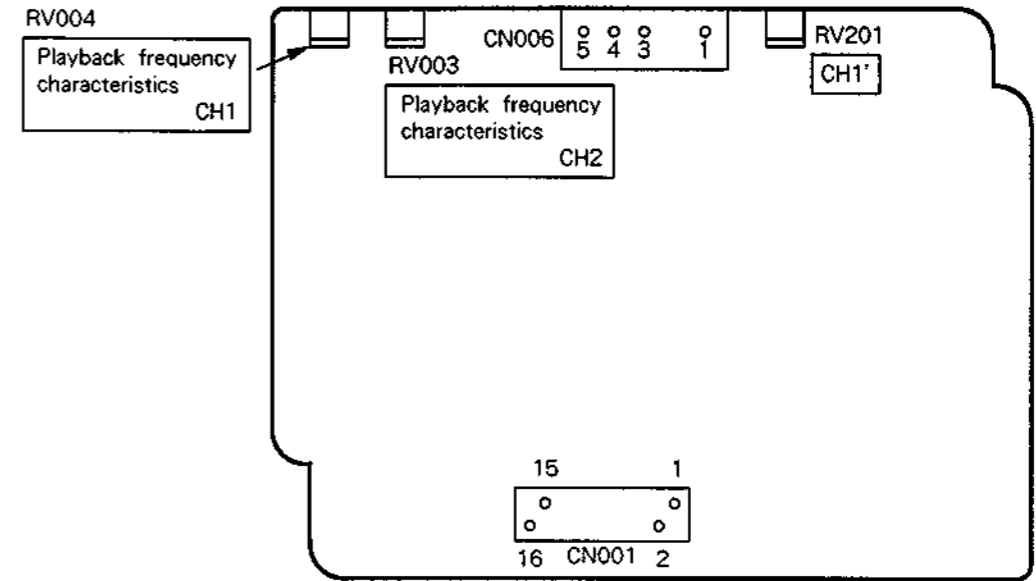


CM-13 BOARD (COMPONENT SIDE)

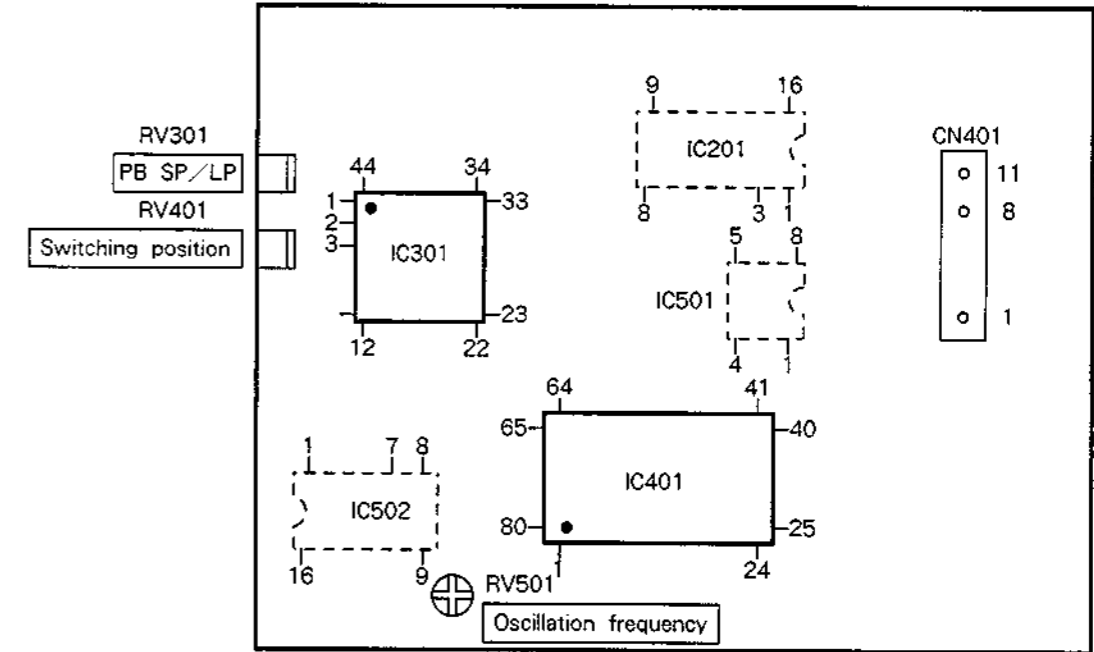

FR-38 BOARD (COMPONENT SIDE)

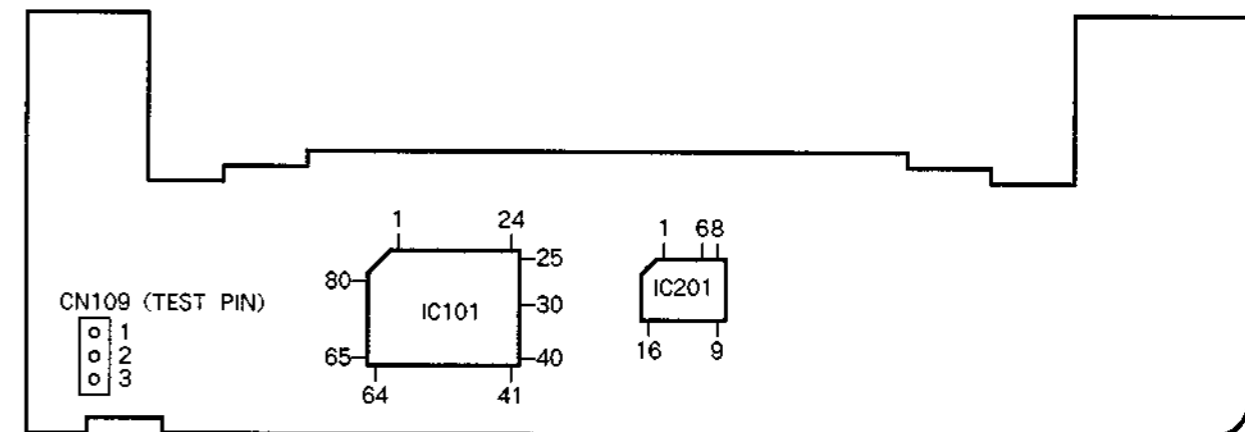


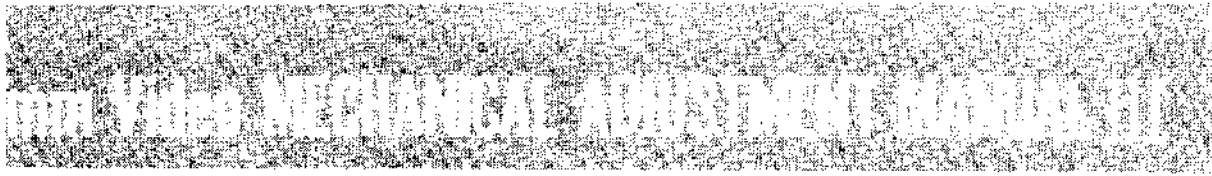

U MECHANISM

Video 8

Please use in conjunction with the SERVICE MANUAL.

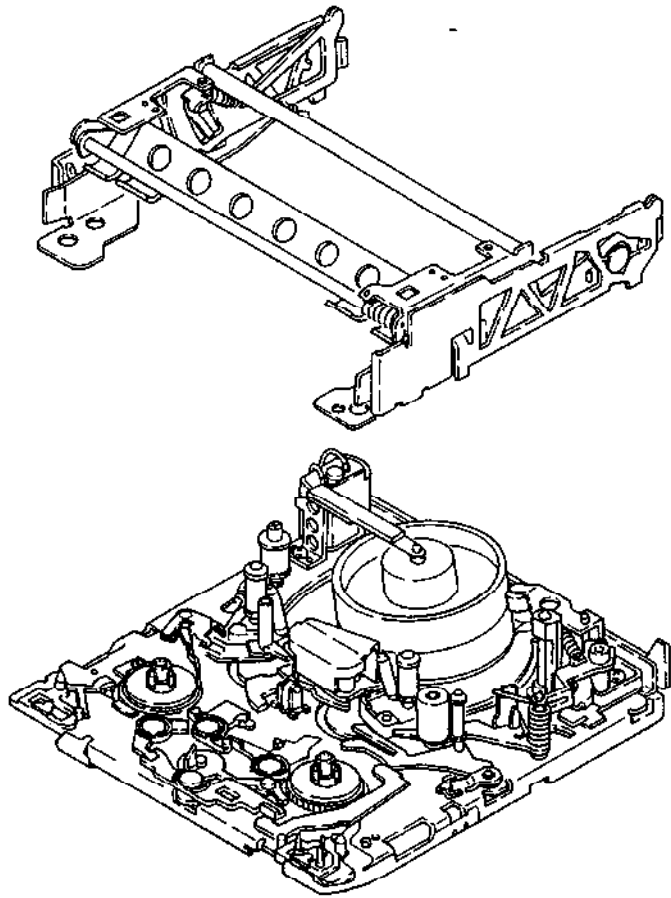

8 MECHANISM DECK
SONY®

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1.	PREPARATIONS FOR MECHANICAL BLOCK CHECK, ADJUSTMENT AND REPLACEMENT		4.	TAPE PATH ADJUSTMENT	
1-1.	Operation without Cassette Compartment Assembly and Tape	3	4-1.	Track Shift Mode Setting	28
1-1-1.	How to Trigger the Loading Operation	3	4-2.	Preparations for Adjustment	29
1-1-2.	Setting the Playback Mode	3	4-3.	Tracking Adjustment	30
1-1-3.	Eject Operation	3	4-4.	Tracking Fine Adjustment	30
1-2.	The Mode Selector	4	4-5.	No.2 Guide (TG-2) Adjustment	30
1-2-1.	Name of Each Part (external)	4	4-5-1.	No.2 Guide (TG-2) Height Presetting	30
1-2-2.	Connections	4	4-5-2.	No.2 Guide (TG-2) Adjustment	31
1-2-3.	Handling	4	4-6.	No.7 Guide (TG-7) Adjustment	31
			4-7.	Cue and REV Waveform Check	31
			4-8.	Check After Adjustment	32
			4-8-1.	Tracking Check	32
2.	PERIODICAL CHECK AND MAINTENANCE		4-8-2.	Rising Check	32
2-1.	Rotary Drum Assembly Cleaning	5	4-8-3.	Tape Path Check	32
2-2.	Tape Path Cleaning	5			
2-3.	Drive System Cleaning	5			
2-4.	Periodical Check Items	6			
2-5.	Servicing Tools	7			
3.	MECHANICAL BLOCK CHECK, ADJUSTMENT AND REPLACEMENT				
3-1.	HC Roller Assembly	8			
3-2.	Guide Guard Assembly	8			
3-3.	DC Motor (Capstan Motor) Assembly	9			
3-4.	S Brake, T Brake	10			
3-5.	LB Brake, Axle Holding Pins	11			
3-6.	LB Release Arm	12			
3-7.	RK Stopper, RK Stopper Arms	12			
3-8.	Pinch Arm Assembly, TG-7 Assembly	13			
3-9.	TG-2 Assembly	14			
3-10.	S Reel Table Assembly, T Reel Table Assembly	15			
3-11.	Tension Regulator Band Assembly, Tension Regulator Arm Assembly	16			
3-12.	Tension Regulator FWD Position Preset	17			
3-13.	Drum Assembly, Dew Sensor	18			
3-14.	Eject Lever, Switch Lever Assembly, Pinch Roller Sub Arm Assembly	19			
3-15.	Timing Belt (L), RC Gear Assembly, Loading Lever Assembly, Timing Belt (S), Connecting Gear Assembly	20			
3-16.	Idler Pulley, TS Brake Assembly, LB Gear Assembly, RK Gear Assembly	21			
3-17.	UL Gear, UL Brake, UL Arm, LB Plate Spring	22			
3-18.	Coaster (Right) Assembly, Drive Gear (Right) Assembly	23			
3-19.	Coaster (Left) Assembly, Drive Gear (Left) Assembly	24			
3-20.	Loading Motor, Brake Release Arm, Wheel Gear, Worm Assembly	25			
3-21.	Rotary Upper Drum Replacement	26			
3-22.	FWD Back Tension	27			
3-23.	Reel Torque Check	27			

1. PREPARATIONS FOR MECHANICAL BLOCK CHECK, ADJUSTMENT AND REPLACEMENT

Note: For removal of the cabinet, the boards, the cassette compartment, etc., refer to the service guides.

1-1. OPERATION WITHOUT CASSETTE COMPARTMENT ASSEMBLY AND TAPE

Note: The unit will not work if exposed to a strong light.

1-1-1. How to Trigger the Loading Operation (See Fig. 1-1.)

- 1) Supply power to the unit after removing the cabinet, the camera block, the cassette compartment assembly, etc., as indicated in the service guides. (This will enable operation of the mechanical deck.)
- 2) Cover the LED assembly with an opaque cap, etc. ①.
- 3) Attach a piece of tape to the RECOG switch ② so that the pin is held down.
- 4) Push the EJECT lever ③ in the direction of the arrow ④.

1-1-2. Setting the Playback Mode (See Fig. 1-1.)

- 1) Follow the procedures in section 1-1-1. above.
- 2) Put the rubber band ⑤ around the S and T reels.
- 3) Press the PLAY switch of unit, then push the tension regulator arm assembly ⑥ in the direction of the arrow ⑦ when the T reel starts to rotate (the tension regulator band will be released, and the S reel will start rotating).
- 4) To stop operation, press the STOP switch.

1-1-3. Eject Operation (See Fig. 1-1.)

- 1) To eject, turn the EJECT switch on.

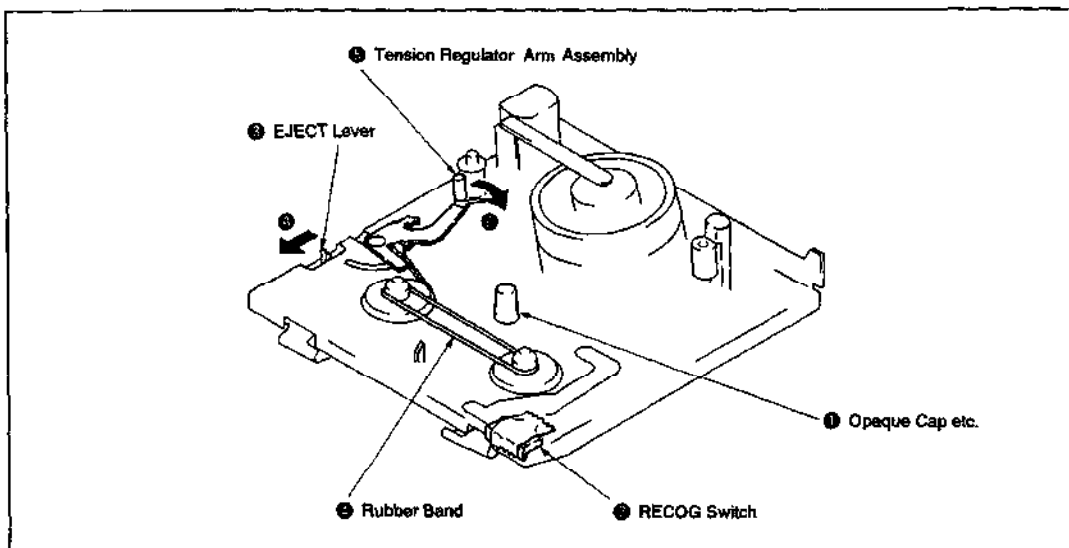


Fig. 1-1.

1-2. THE MODE SELECTOR

1-2-1. Name of Each Part (external) (See Fig. 1-2.)

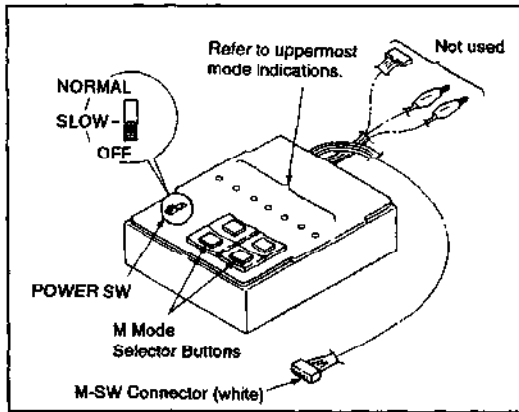


Fig. 1-2.

1-2-2. Connections (See Fig. 1-3.)

- 1) Mount the MODE SELECTOR III panel (Ref. No. J-9) ① onto the mode selector.
- 2) Attach the conversion connector (Ref. No. J-8) ③ of MODE SELECTOR III to the 6-pin connector (white) ② of the mode selector M-SW.
- 3) Remove the FP-89 flexible board ④ from the flexible connector ⑤.
- 4) Attach the FP-89 flexible board ④ to the flexible connector ⑥ of the MODE SELECTOR III conversion connector ③, then attach the 2-pin connector (white) ⑦ of the loading motor to the 2-pin connector (white) ⑧.

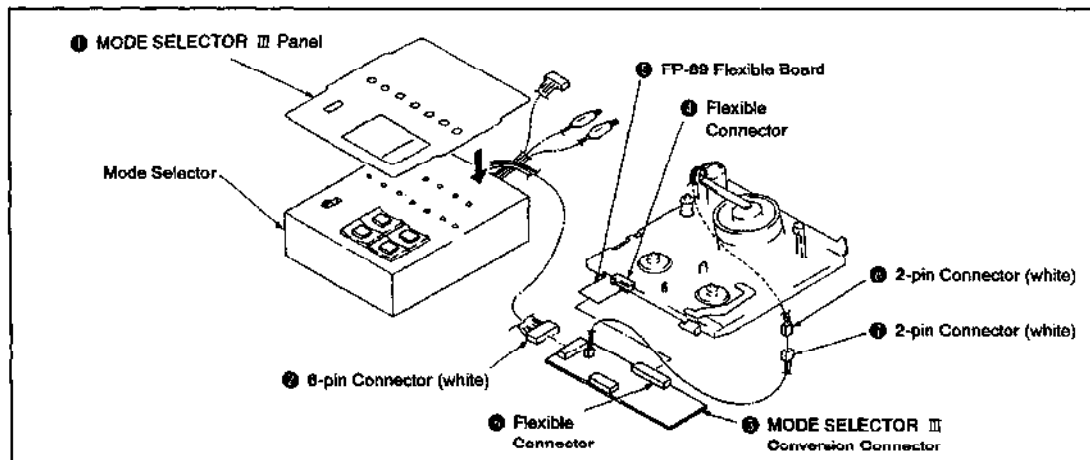


Fig. 1-3.

1-2-3. Handling (See Figs. 1-2. and 1-4.)

- Use only the M mode selector buttons.
- Refer to mode indications on the uppermost part of the MODE SELECTOR III panel.
- If the right M mode selector button is kept pressed, the lit indication will change in the order of EJECT → (IA) → ULD → (IB) → STOP → (IC) → FWD.
- To change modes in the reverse direction (from FWD to EJECT), press the left selector button.

Note: For this U mechanism, the uppermost indicators on the MODE SELECTOR III panel are used. The IA, IB and IC indications light up during mode changes.

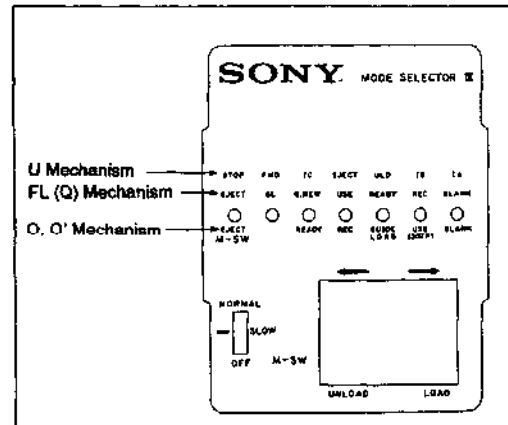


Fig. 1-4.

2. PERIODICAL CHECK AND MAINTENANCE (See Fig. 2-1.)

The following periodical check and maintenance procedures are necessary to ensure proper operation and to protect the tapes as well as the unit, and the following maintenance procedures must be always carried out after repairing regardless of how long the unit has been used.

2-1. ROTARY DRUM ASSEMBLY CLEANING

- 1) While pressing a piece of chamois leather (Ref. No. J-2) moistened in cleaning fluid (Ref. No. J-1) lightly against the rotary drum, turn the rotary upper drum slowly counter-clockwise with your fingers.

Note: Do not drive the drum with the motor, and do not turn it clockwise.

Do not move the chamois leather vertically against the head tip; this can damage the head tip. Strictly follow the cleaning instructions above.

2-2. TAPE PATH CLEANING

- 1) Set the cassette compartment assembly to the eject state, or remove it. Then clean the tape path (guides No. 1 to 7, capstan shaft, pinch rollers) with a piece of chamois leather moistened in cleaning fluid (See Fig. 2-1).

2-3. DRIVE SYSTEM CLEANING

- 1) Clean the drive system (timing belt, reel table surface) with a piece of cloth moistened in cleaning fluid.

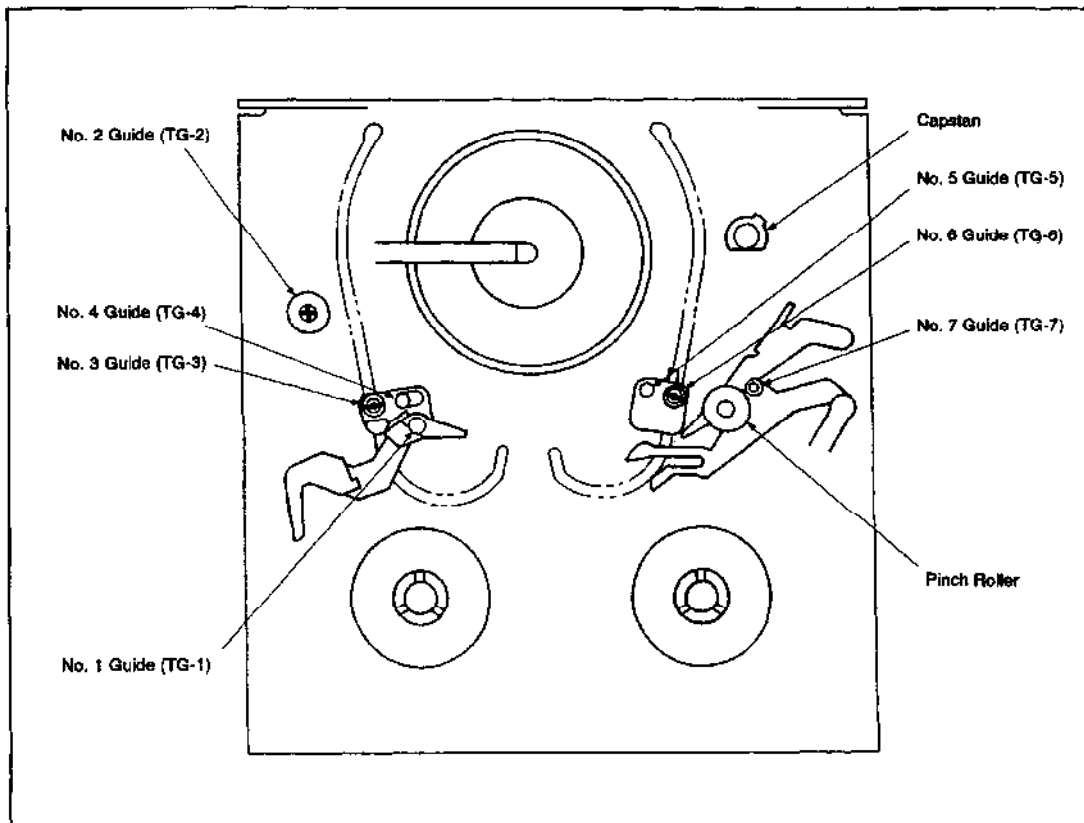


Fig. 2-1.

2-4. PERIODICAL CHECK ITEMS

○Cleaning ◎Lubrication ☆Check

Maintenance and Check Item		Operation time (H)										Remarks
		500	1,000	1,500	2,000	2,500	3,000	3,500	4,000	4,500	5,000	
Cleaning and Demagnetizing	Tape path surfaces Cleaning	○	○	○	○	○	○	○	○	○	○	Do not oil.
	Rotary drum assembly cleaning and demagnetizing	○	○	○	○	○	○	○	○	○	○	Do not oil.
Drive System	Relay belt (short)	-	☆	-	☆	-	☆	-	☆	-	☆	3-728-866-01
	Relay belt (long)	-	☆	-	☆	-	☆	-	☆	-	☆	3-728-865-01
	Capstan shaft	-	◎	-	◎	-	◎	-	◎	-	◎	Take care that no oil gets on tape path surfaces.
	Idler pulley axle	-	◎	-	◎	-	◎	-	◎	-	◎	
Performance Check	Loading motor	-	☆	-	☆	-	☆	-	☆	-	☆	1-541-612-11
	Abnormal noise	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	
	Back tension measurement	-	☆	-	☆	-	☆	-	☆	-	☆	
	Brake system	-	☆	-	☆	-	☆	-	☆	-	☆	
	FWD, RVS torque measurement	-	☆	-	☆	-	☆	-	☆	-	☆	

Notes: When overhauling the unit, perform parts replacement referring to the table above.

Regarding Oil:

- Always use the specified oil (using oil of different viscosity, etc. can cause troubles of several kinds).
Specified oil: Part No. 7-661-018-01
(Mitsubishi Diamond Oil Hydrofluid EP56)
- Be sure that no dirt is mixed in the oil to be used on axle bearings. Use of dirty oil can result in bearing wear and burning.
- By "one drop of oil" is meant the quantity of oil adhering to the end of a 2mm-diameter rod as shown in Fig. 2-2.

On grease:

- Use the specified grease.
Grease: Part No. 7-662-010-08
(Sony grease SGL-701)


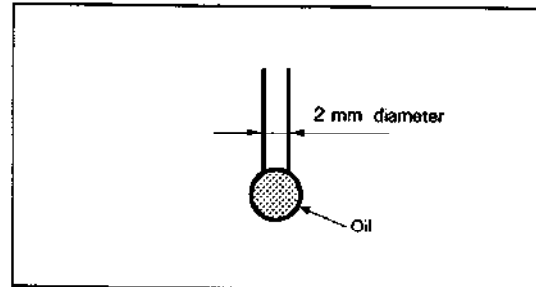


Fig. 2-2.

2-5. SERVICING TOOLS

Ref. No.	Name	Part Code	Marking	Application, etc.
J-1	Cleaning fluid	Y-2031-001-0	—	
J-2	Chamois cloth	2-034-697-00	—	
J-3	Head demagnetizer	Commercially available	—	
J-4	Dental mirror Spare mirror	J-6080-029-A J-6080-030-1	SL-5052	Tape path
J-5	Alignment tape NTSC (WRS-1N) PAL (WRS-1C)	8-967-995-01 8-967-995-06		Tape path
J-6	FWD/RVS takeup torque cassette	J-6080-624-A	GD-2086	
J-7	Rotary drum jig	(Attached to the maintenance rotary upper drum)		
J-8	Mode selector III conversion connector	J-6082-021-A		General
J-9	Mode selector III panel	J-6082-023-A		General
J-10	Mode selector	J-6080-825-A		General
J-11	Hexagonal wrench detection (0.89 mm) or L wrench (0.89 mm)	7-700-766-01 7-700-736-06		Tape path
J-12	Sony grease (SGL-701)	7-662-010-08		

Other devices: Oscilloscope
Analog tester (20 k Ω)

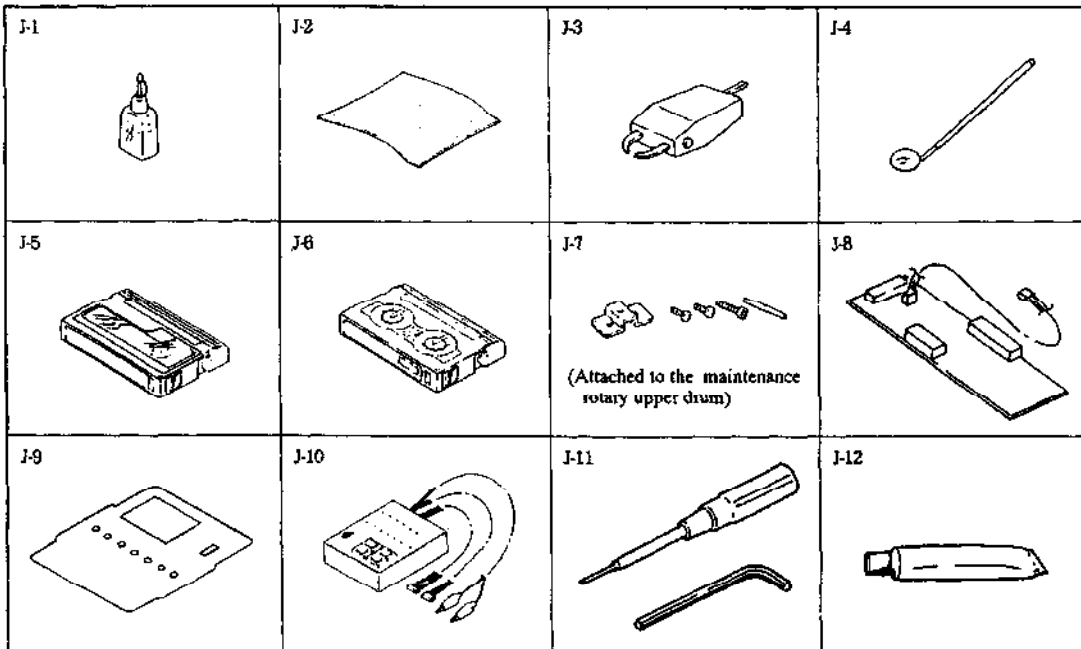

3. MECHANICAL BLOCK CHECK, ADJUSTMENT AND REPLACEMENT

- Notes:**
- Use the mode selector (Ref. No. J-10) for procedures in this chapter.
 - Modes within a frame are those set by pressing the buttons of the mode selector.

3-1. HC ROLLER ASSEMBLY

1. Removal (See Fig. 3-1.)

- 1) Remove the screw ①, then remove the HC roller assembly ②.

2. Installation (See Fig. 3-1.)

- 1) Align the two dowels ③ attached to the HC roller assembly ② with the two holes ④ in the mechanism chassis.
- 2) Secure the HC roller assembly ② with the screw ①.

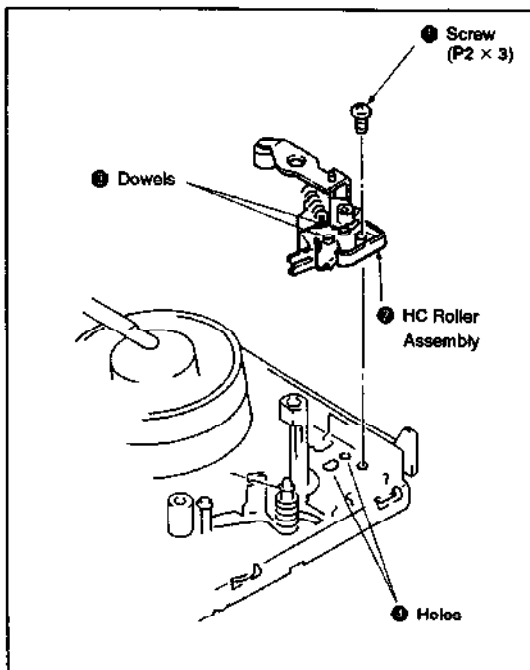


Fig. 3-1.

3-2. GUIDE GUARD ASSEMBLY

1. Removal (See Fig. 3-2.)

- Remove the screw ①, then remove the guide guard assembly ②.

2. Installation (See Fig. 3-2.)

- 1) Align the dowel ③ attached to the guide guard assembly ② with the hole ④.
- 2) Secure the guide guard assembly ② with the screw ①.

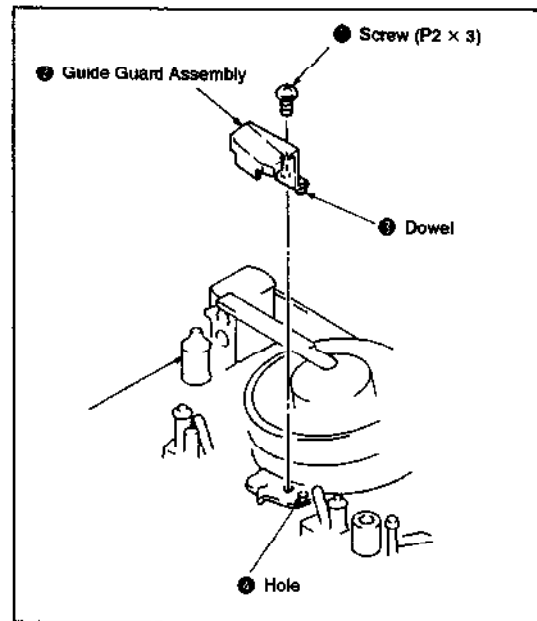


Fig. 3-2.

3-3. DC MOTOR (CAPSTAN MOTOR) ASSEMBLY

1. Removal (See Fig. 3-3.)

- 1) Set the **U/LD** mode.
- 2) Turn the stopper ① in the direction of the arrow ② as far as it will go.
- 3) Remove the two screws ③, then remove the DC motor ④.

2. Installation (See Fig. 3-3.)

- 1) Align the two screwed dowels ⑤ with the two holes ⑥, then engage the toothed part ⑦ with the connecting gear ⑧.
- 2) Secure the DC motor assembly ④ with the two screws ③.
- 3) Turn the stopper ① in the direction of the arrow ② as far as it will go.

- Note:**
- When engaging the gears, take care not to damage their teeth.
 - Do not leave any clearance between the DC motor ④ and the chassis.
 - Do not touch the capstan motor axle*, the oil seal* and the rotor*.

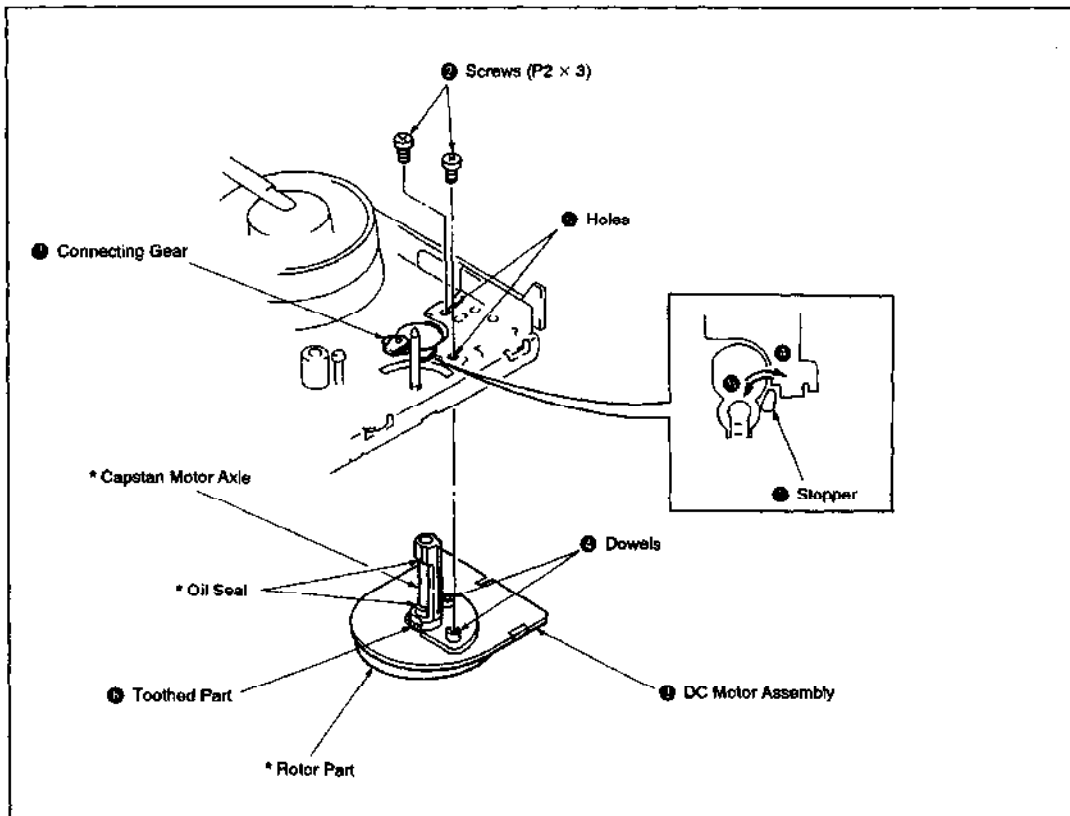


Fig. 3-3.

3-4. S BRAKE, T BRAKE

1. Removal (See Fig. 3-4.)

- 1) Remove the torsion coil spring (ST) ①.
- 2) Remove the axle holding pin ②, then remove the T brake ③.
- 3) Remove the axle holding pin ④, then remove the S brake ⑤.

2. Installation (See Fig. 3-4.)

- 1) While fitting the toothed part ⑥ into the notch ⑦, mount the S brake ⑤.
- 2) Insert the axle holding pin ②.
- 3) Insert the axle ⑧ to the S reel side of the brake release arm ⑨ so that the ⑥ part comes closer to the drum than part ④, and mount the T brake ③.
- 4) Insert the axle holding pin ④.
- 5) Insert the torsion coil spring (ST) ① below the claw ⑩ of the axle ⑧, then hook it to two claws ⑩.

Note: Confirm that the claws of axle holding pins ② and ④ are not broken before assembling.

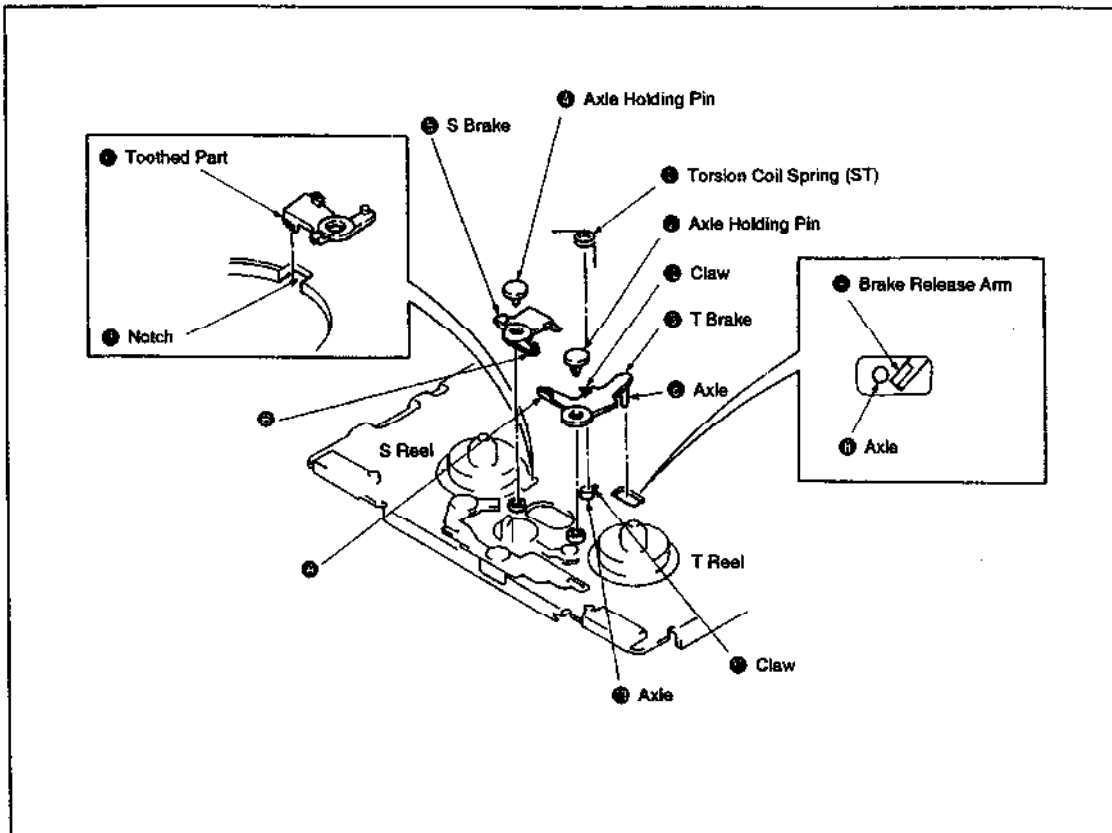


Fig. 3-4.

3-5. LB BRAKE, AXLE HOLDING PINS

1. Removal (See Fig. 3-5.)

- 1) Remove the screw ①, then remove the TL holding plate ②.
- 2) Remove the axle holding pin ③, then remove the LB brake ④.
- 3) Remove the axle holding pin ⑤, then remove the LB lever ⑥.

2. Installation (See Fig. 3-5.)

- 1) Mount the LB lever ⑥ matching it to pin ⑦ of the LB gear, then secure it with the axle holding pin ⑤.
- 2) Insert the pin ⑧ into the notch ⑨ of the LB lever ⑥, then mount the LB brake ④ while inserting the toothed part ⑩ into the notch ⑨.
- 3) Insert the axle holding pin ③.
- 4) Align the dowel ⑪ with the hole ⑫, then mount the TL holding plate and secure it with the screw ①.

Note: Confirm that the claws of axle holding pins ③ and ⑤ are not broken before assembling.

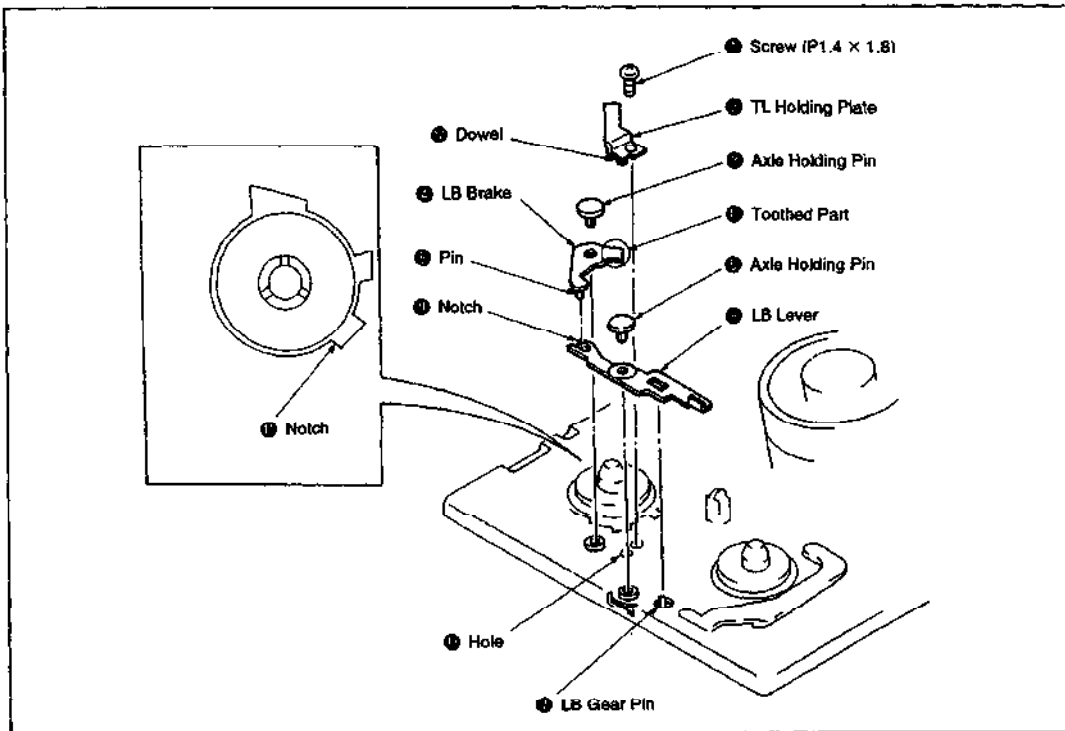


Fig. 3-5.

3-6. LB RELEASE ARM

1. Removal (See Fig. 3-6.)

- 1) While pushing the claw ① in the direction of the arrow, remove the LB release arm ②.

2. Installation (See Fig. 3-6.)

- 1) Fit the LB release arm ② to the axle ③, insert protrusions ④, ⑤, ⑥ into the three holes ⑦, then secure with the claw ①.

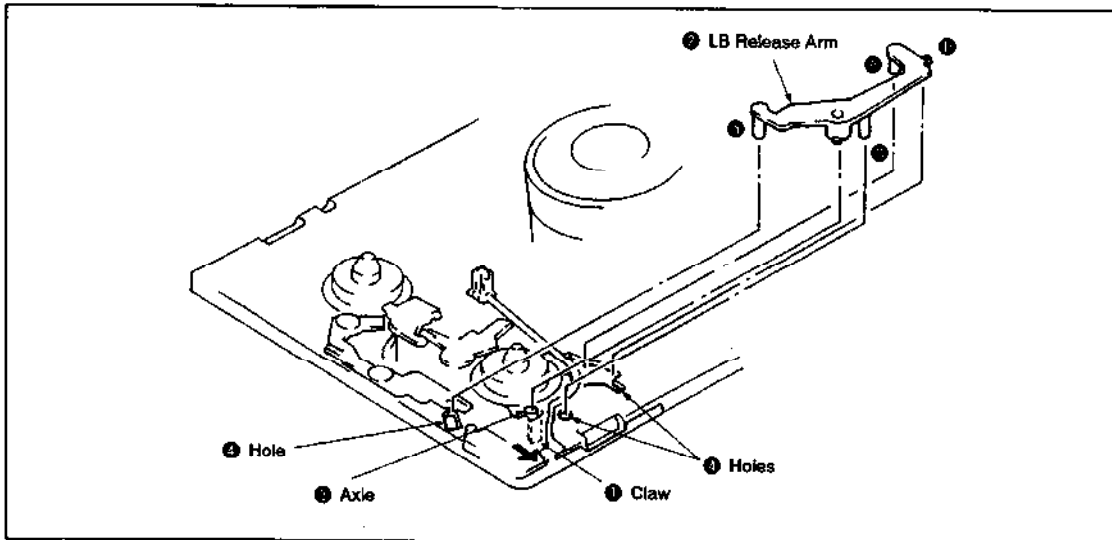


Fig. 3-6.

3-7. RK STOPPER. RK STOPPER ARMS

1. Removal (See Fig. 3-7.)

- 1) Remove the torsion coil spring (RK) ①.
- 2) Open the chassis claw ②, then remove the RK stopper arm ③.
- 3) Remove the RK stopper ④.

2. Installation (See Fig. 3-7.)

- 1) Mount the RK stopper ④ onto the axle ⑤.
- 2) Mount the RK stopper arm ③ onto the axle ⑤, insert Pin ⑥ into hole ⑦, then hook the claw ② of the chassis to the hole ⑦.
- 3) Insert the torsion coil spring (RK) ① into the axle ⑤, then hook it to claws ③ and ④.

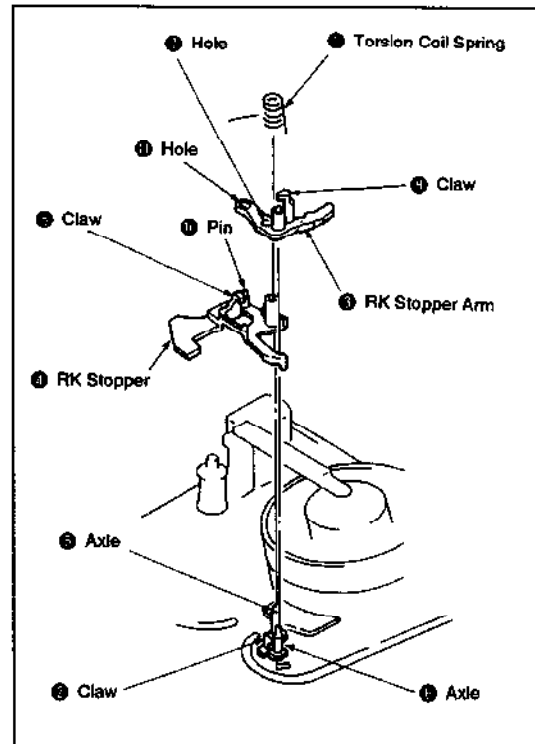


Fig. 3-7.

3-8. PINCH ARM ASSEMBLY, TG-7 ASSEMBLY

1. Removal (See Fig. 3-8.)

- 1) Set the **[B]** mode.
- 2) Remove the stopper washer ①, then remove the pinch arm assembly ②.
- 3) Bend the claw ④ inside hole ③ in the direction of the arrow using a thin screwdriver or the like, then remove the TG-7 plate spring ⑤.
- 4) Remove the TG-7 arm assembly ⑥.

2. Installation (See Fig. 3-8.)

- 1) Grease the inner surfaces of hole ③ (See Fig. A).
- 2) Insert the axle ④ of the TG-7 arm assembly ⑥ into the hole ③.
- 3) Grease the shaded section ④ (See Fig. A).
- 4) Insert the TG-7 plate spring ⑤ into the hole ③, then secure it with the claw ④.
- 5) Apply half a drop of oil to the axle ④ (See Fig. B).
- 6) Fit the pinch arm assembly ② to the axle ④ and insert the pinch roller sub arm assembly tab ⑩ into the ⑪ part.
- 7) Install the stopper washer ①.

- Note:**
- Take care not to grease the screw ① of the TG-7 arm assembly ⑥ (See Fig. A).
 - When fitting the pinch arm assembly ② to the axle ④, make sure that it does not touch the TG-7 guide ⑦ or the rubber roller ⑧.
 - After assembling, be sure to perform tape path adjustment as described in section 4.

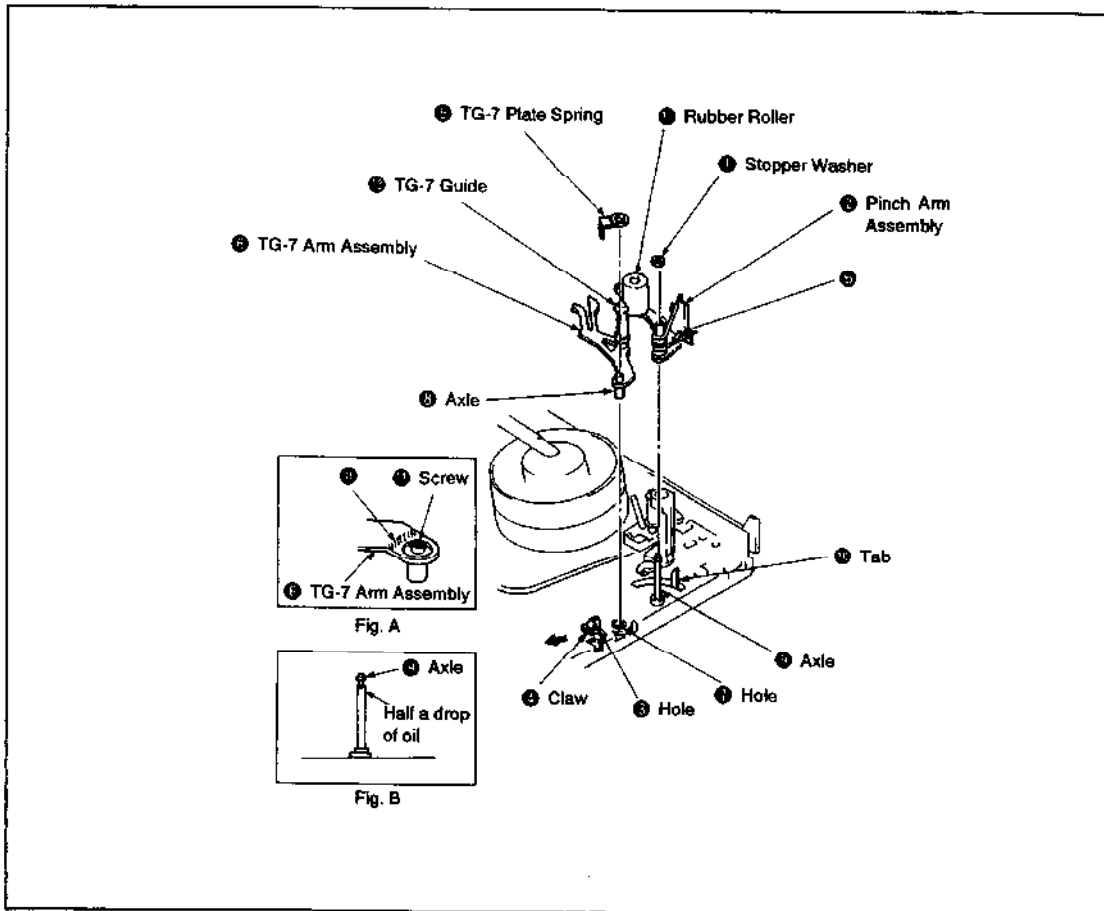


Fig. 3-8.

3-9. TG-2 ASSEMBLY

1. Removal (See Fig. 3-9.)

- 1) Remove the TG-2 upper flange assembly ❶.
- 2) Remove the TG-2 roller ❷, the TG-2 sleeve ❸, the TG-2 lower flange ❹ and the compression spring ❺.

2. Installation (See Fig. 3-9.)

- 1) Mount the compression spring ❺, the TG-2 lower flange ❹, the TG-2 sleeve ❸ and the TG-2 roller ❷ to the axle.
- 2) Secure the TG-2 upper flange ❶ to the axle by rotating it 4 to 6 turns.

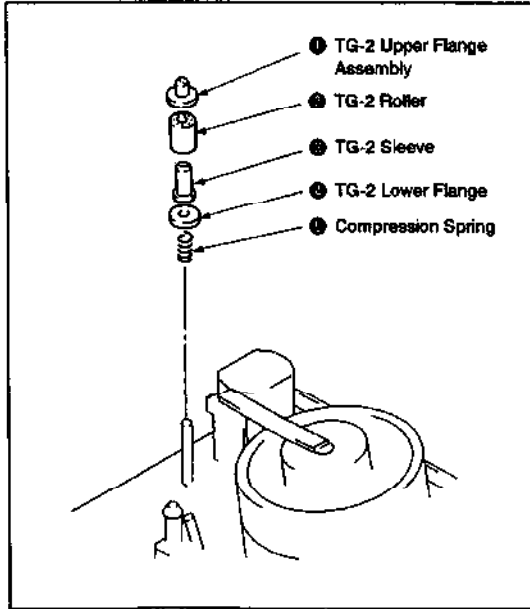


Fig. 3-9.

3. TG-2 Height Preset (see Fig. 3-10.)

- 1) Adjust height from the mechanism chassis upper surface to the TG-2 upper flange ❶ upper surface to 18.6 mm by turning the TG-2 upper flange ❶.

Note: After adjustment, be sure to perform tape path adjustment as described in section 4.

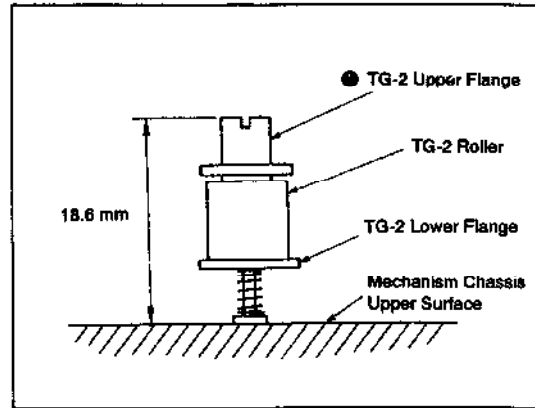


Fig. 3-10.

3-10. S REEL TABLE ASSEMBLY, T REEL TABLE ASSEMBLY

1. Removal (See Fig. 3-11.)

- 1) Remove the S brake and T brake as described in section 3-4.
- 2) Remove the TL holding plate as described in section 3-5.
- 3) Remove the tension regulator band assembly as described in section 3-11.
- 4) Remove the S reel table assembly ①.
- 5) Turn the stopper ② approx. 90° in the direction of the arrow ③.
- 6) While sliding the LB release arm ④ in the direction of the arrow ⑤, remove the T reel table assembly ⑥.

2. Installation (See Fig. 3-11.)

- 1) Apply half a drop of oil to the axle ⑦ (See Fig. A).
- 2) Move the RK gear ⑧ in the direction of the arrow ⑨ and the TS brake ⑩ in the direction of the arrow ⑪, putting them out of the way.
- 3) While sliding the LB release arm ④ in the direction of the arrow ⑫, mount the T reel table assembly ⑥ onto the axle ⑦, then turn the stopper ② in the direction of the arrow ⑬ as far as it will go.
- 4) Apply half a drop of oil to the axle ⑦ (See Fig. B).
- 5) Move the RK gear ⑧ in the direction of the arrow ⑨, the UL brake ⑭ in the direction of the arrow ⑯ and the LB brake ⑰ in the direction of the arrow ⑱, putting them out of the way.
- 6) Mount the S reel table ① onto the axle ⑦.
- 7) Mount the tension regulator band assembly as described in section 3-11.
- 8) Mount the TL holding plate as described in section 3-5.
- 9) Mount the S brake and T brake assemblies as described in section 3-4.

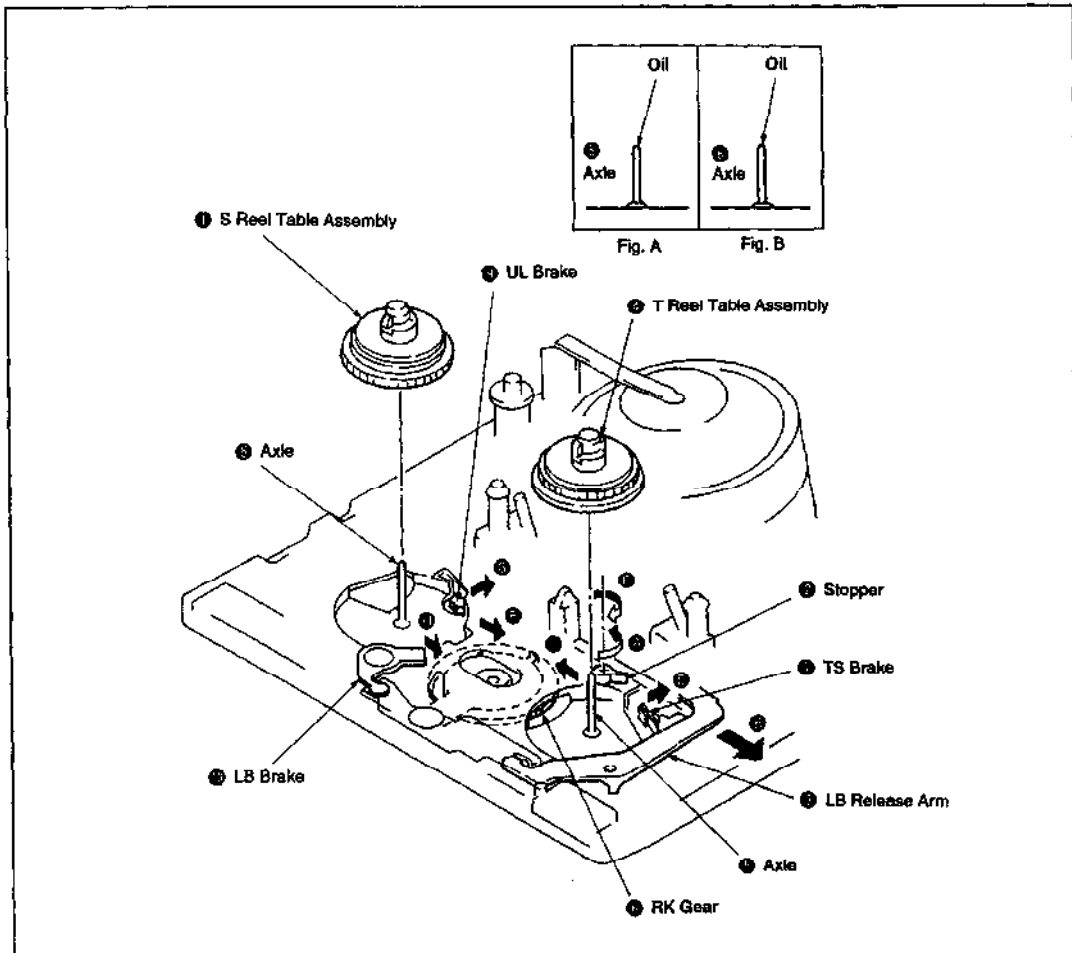


Fig. 3-11.

3-11. TENSION REGULATOR BAND ASSEMBLY, TENSION REGULATOR ARM ASSEMBLY

1. Removal (See Fig. 3-12.)

- 1) Remove the TL holding plate as described in section 3-5.
- 2) Remove the screw ①.
- 3) Using a thin screwdriver or the like, remove the tension regulator band assembly ④ from the axle ⑤ of tension regulator arm assembly ⑦.
- 4) Remove the tension spring ③.
- 5) Remove the stopper washer ⑩ from the back of the mechanism chassis, then remove the tension regulator arm assembly ⑦.
- 6) Open the claw ⑧, then remove the adjust arm ⑥.

Note: When removing the tension regulator band assembly ④, take care not to twist or bend it, and not to touch the felt surface ②.

2. Installation (See Fig. 3-12.)

- 1) Engage the adjust arm ⑥ in the position shown in Fig. A, then close the claw ⑧.
- 2) Apply half a drop of oil to the hole ⑨.
- 3) Mount the tension regulator arm assembly ⑦, then insert it into the slot ⑪ so that the ⑫ part comes to the arrow ⑬ side of the switch lever assembly (See Fig. B).

- 4) While holding the tension regulator arm assembly ⑦ from the mechanism chassis front, secure it with the stopper washer ⑩ from the back.
- 5) Hook the R hook of the tension spring ③ to the adjust arm ⑥ as shown in the figure, then hook the opposite end to the tension regulator arm assembly ⑦.
- 6) Mount the tension regulator band assembly ④ onto the axle ⑤ of tension regulator arm assembly ⑦, and place it so that the felt surface ② comes against the shaded portion of the S reel table assembly ⑭.
- 7) Mount the tension regulator plate ⑮ of the tension regulator band assembly ④ so that it is aligned with the dowel ⑯ of the mechanism chassis, then secure it temporarily with the screw ①.
- 8) Mount the TL holding plate as described in section 3-5.
- 9) Adjust tension regulator FWD position as described in section 3-12.
- 10) Perform adjust arm adjustment as described in section 3-22.

Note: When mounting the tension regulator band assembly ④, take care not to twist or bend it, and not to touch the felt surface ②.

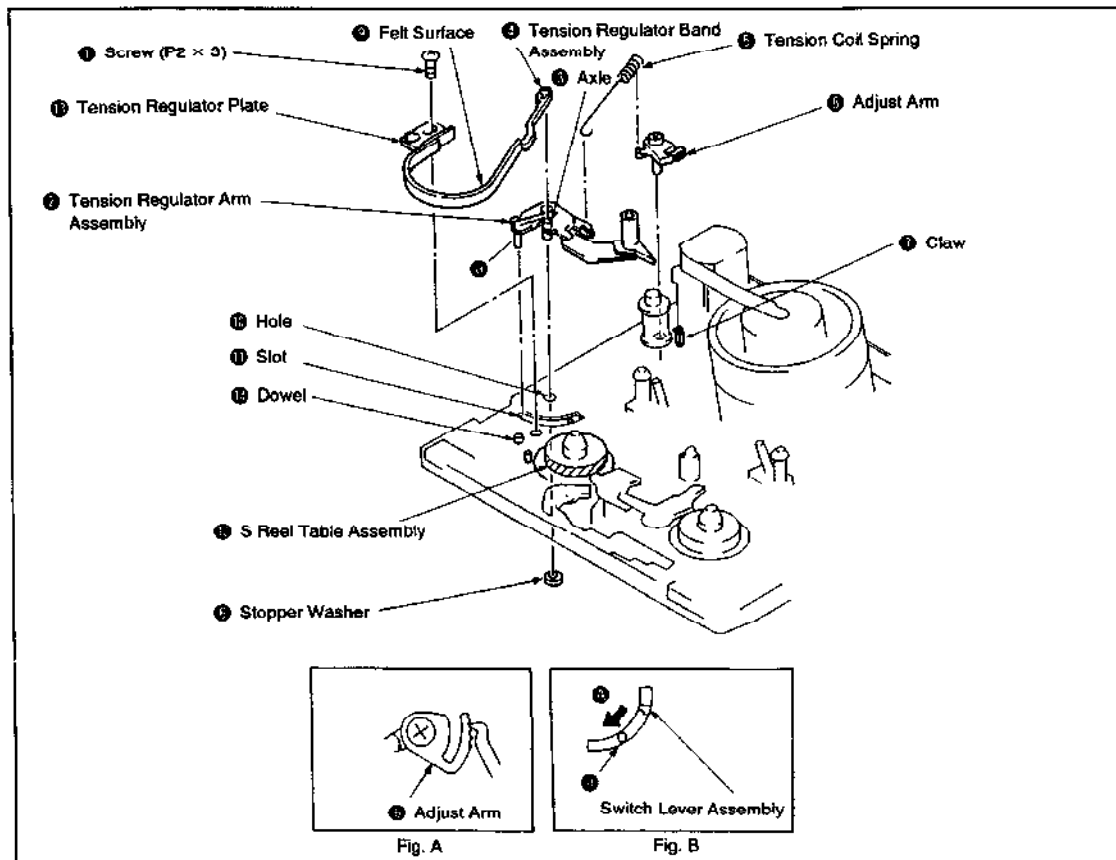


Fig. 3-12.

3-12. TENSION REGULATOR FWD POSITION PRESET (See Fig. 3-13.)

- 1) Load a cassette tape and set the [FWD] mode.
- 2) Confirm whether the distance between ① part of the tension regulator arm and the groove ② of the chassis is 1.1 ± 0.3 mm. If this distance is not within the specified range, remove the cassette tape and perform the following adjustment.
- 3) Loosen the fixing screw ④ of the tension regulator band assembly ③.
- 4) Slide the tension regulator plate ⑤ in the direction of the arrow ⑥ if the measured distance is over the specified range, and in the direction of the arrow ⑦ if it is under that range. Then, fix it with the screw ④.
- 5) Repeat steps 1) and 2) and confirm that the distance is within the specified range.

Note: Use a cassette with the tape advanced halfway.

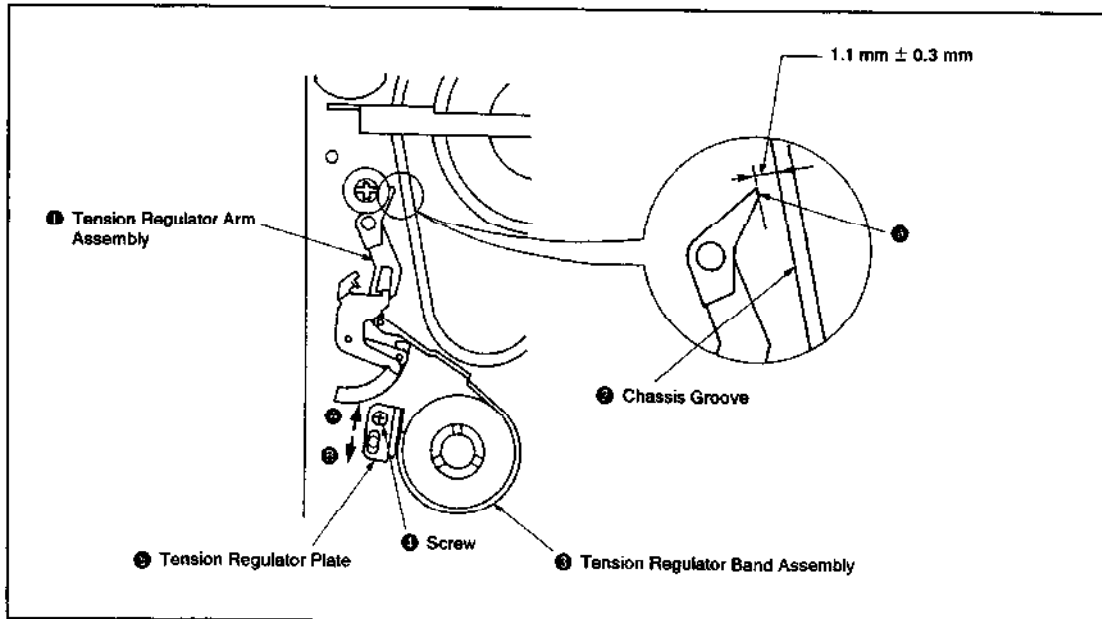


Fig. 3-13.

3-13. DRUM ASSEMBLY, DEW SENSOR

1. Removal (See Fig. 3-14.)

- 1) Set the **EJECT** mode.
- 2) Remove the flexible board ① and the two connectors ②.
- 3) Remove the guide guard assembly as described in section 3-2.
- 4) Remove the screw ③, then remove the axle ground terminal ④.
- 5) Remove the three screws ⑤, then remove the drum assembly ⑥ from the mechanism chassis.
- 6) Remove the connector ⑦.
- 7) Remove the screw ⑧, then remove the dew sensor ⑨.

Note:

- When removing the drum assembly ⑥ from the mechanism chassis, take care not to cut the flexible board ① or the harness.
- Take care not to touch the head tip ⑩.

2. Installation (See Fig. 3-14.)

- 1) Insert part ⑩ of the dew sensor ⑨ into the notch ⑪ of the mechanism chassis, then secure it with the screw ⑧.
- 2) Mount the connector ⑦.
- 3) Clamp the harness ⑬ of the dew sensor ⑨ with the reinforcing the claw ⑭ of the plate SS assembly (See Fig. A).
- 4) Insert the connector ⑦ and the flexible board ① into the hole ⑫ of the mechanism chassis, align the drum assembly ⑥ with the two dowels ⑮ and secure it with the three screws ⑤.
- 5) Align the axle ground terminal ④ with the two dowels ⑮ of the mechanism chassis and secure it with the screw ③.
- 6) Mount the guide guard assembly as described in section 3-2.
- 7) Mount the two connectors ② and the flexible board ①.

Note:

- Take care not to cut the flexible board ① or the harness ⑬.
- Take care not to touch the head tip ⑩.
- After assembling, be sure to perform Tape Path Adjustment following instructions in section 4.

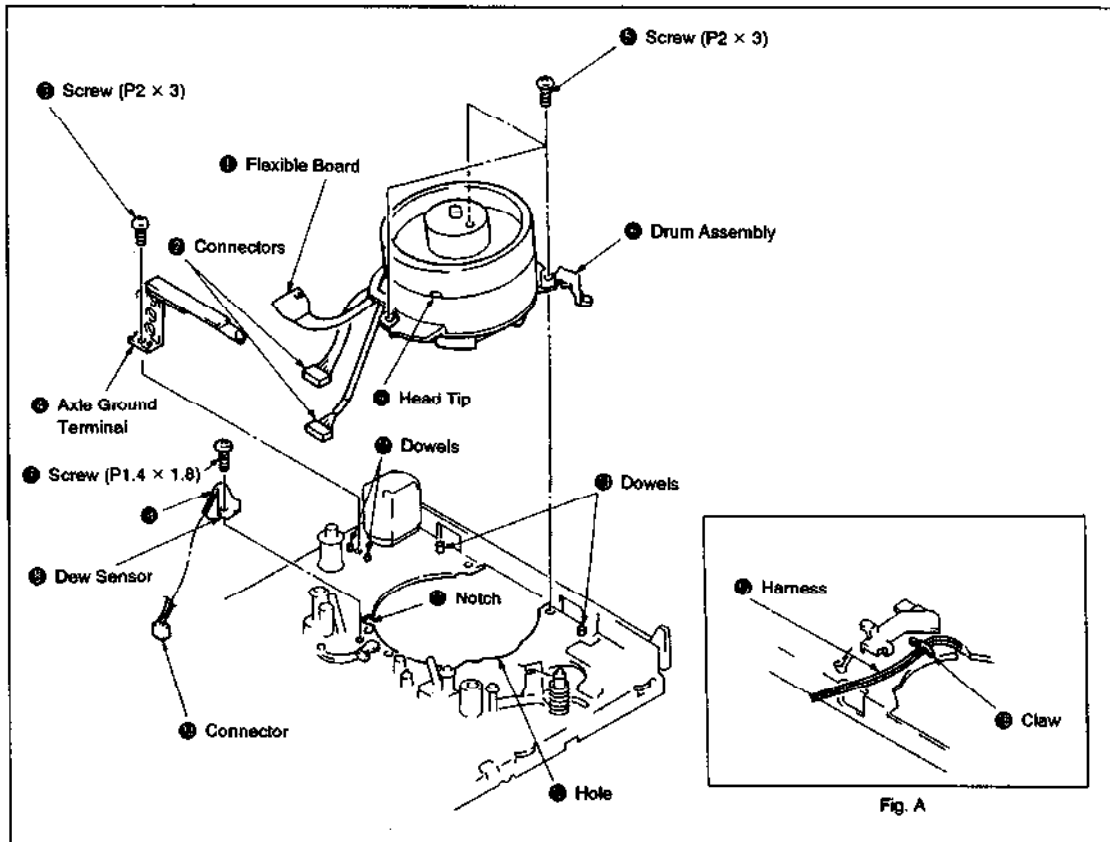


Fig. 3-14.

3-14. EJECT LEVER, SWITCH LEVER ASSEMBLY, PINCH ROLLER SUB ARM ASSEMBLY

1. Removal (See Fig. 3-15.)

- 1) Remove the DC motor (capstan motor) as described in section 3-3.
- 2) Set the **STOP** mode.
- 3) Remove the claw ①, then remove the eject lever ②.
- 4) Remove the stopper washer ③, then remove the switch lever assembly ④.
- 5) Remove the pinch roller load spring ⑤.
- 6) Remove the stopper washer ⑥, then remove the pinch roller sub arm assembly ⑦.

2. Installation (See Fig. 3-15.)

- 1) Grease the axle ⑧ (See Fig. A).
- 2) Assemble by inserting ⑧ part of the pinch roller sub arm assembly ⑦ into the slot ⑨, then insert the pin ⑩ into the loading lever assembly notch ⑪.
- 3) Secure with the stopper washer ③.

- 4) Mount the pinch roller load spring ⑤ by catching its ⑫ end between the claw ① and the chassis side and its ⑬ end to the claw ①.
- 5) Apply half a drop of oil to the axle ⑭ (See Fig. B).
- 6) Align the groove ⑮ of the switch lever assembly ④ with the mode detector switch protrusion ⑯, mount it on the axle ⑭, then insert the pin ⑰ into the drive gear (left) assembly ⑱ outer groove.
- 7) Secure with the stopper washer ③.
- 8) Mount the eject lever ② and close the claw ①.
- 9) Mount the DC motor (capstan motor) as described in section 3-3.

Note: When mounting the switch lever assembly ④ onto the axle ⑭ with the tension regulator arm assembly installed, set the pin ⑰ to the arrow ⑲ side of the switch lever assembly ④.

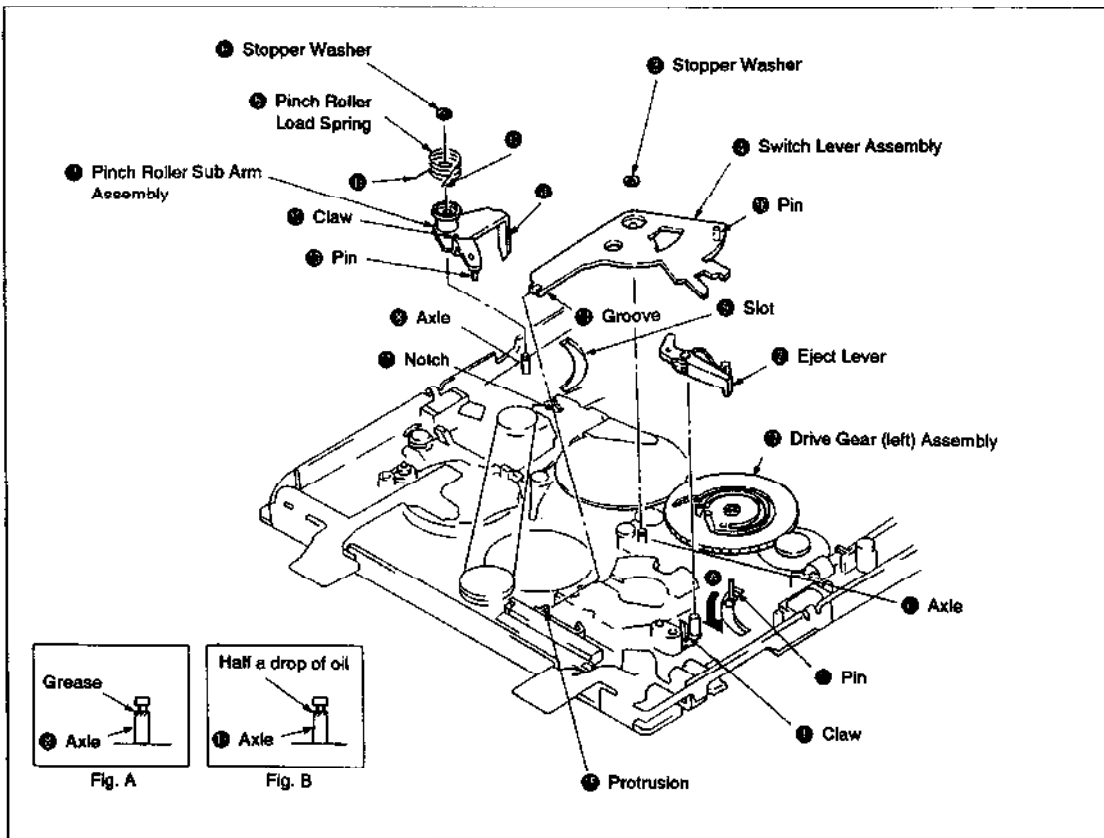


Fig. 3-15.

3-15. TIMING BELT (L) , RC GEAR ASSEMBLY, LOADING LEVER ASSEMBLY, TIMING BELT (S), CONNECTING GEAR ASSEMBLY

1. Removal (See Fig. 3-16.)

- 1) Remove the DC motor (capstan motor) as described in section 3-3.
- 2) Remove the pinch roller sub arm assembly as described in section 3-14.
- 3) Set the **STOP** mode.
- 4) Remove the stopper washer ①, then remove the RC gear assembly ② from the axle ③ with the timing belt (L) ④ attached.
- 5) Remove the timing belt (L) ④ from the idler pulley assembly ⑤.
- 6) Remove the stopper washer ⑥ and remove the loading lever assembly ⑦ while pushing the claw ⑧ in the direction of the arrow ⑨.
- 7) Turn the stopper ⑩ approx. 90° in the direction of the arrow ⑪.
- 8) Remove the connecting gear assembly ⑫ from the axle ⑬ with the timing belt (S) ⑭ attached.
- 9) Remove the timing belt (S) ⑭ from the idler pulley assembly ⑤.

Note: When removing the connecting gear ⑫, take care not to touch the flange section ⑬.

2. Installation (See Fig. 3-16.)

- 1) Apply half a drop of oil to the axle ⑬ (See Fig. F).
- 2) Hook one end of the timing belt (S) ⑭ onto the connecting gear assembly ⑫ and the other end onto gear ⑮ of the idler pulley assembly ⑤. (Refer to the figure.)
- 3) Mount the connecting gear assembly ⑫ with the timing belt (S) ⑭ attached to the axle ⑬.
- 4) Turn the stopper ⑩ in the direction of the arrow ⑪ as far as it will go.
- 5) Apply half a drop of oil to the axle ⑬ (See Fig. A).
- 6) Fit the loading lever assembly ⑦ to the axle ⑬, secure the ⑯ part with the claw ⑧ and place the pin ⑰ into the groove of the drive gear (right) assembly ⑱.
- 7) Install the stopper washer ⑥.
- 8) Place the timing belt (L) ④ around the gears of the RC gear assembly ② indicated in Fig. B, and its opposite side around the gear ⑮ of the idler pulley assembly ⑤. (See Fig. E.)
- 9) Mount the RC gear assembly ② onto the axle ③ with the timing belt (L) ④ attached, and engage it with the gear of the RK gear assembly ⑲.
- 10) Install the stopper washer ⑥.
- 11) Grease parts of the loading lever assembly ⑦ indicated in Fig. C.
- 12) Mount the pinch roller sub arm assembly as described in section 3-14.
- 13) Mount the DC motor (capstan motor) as described in section 3-3.

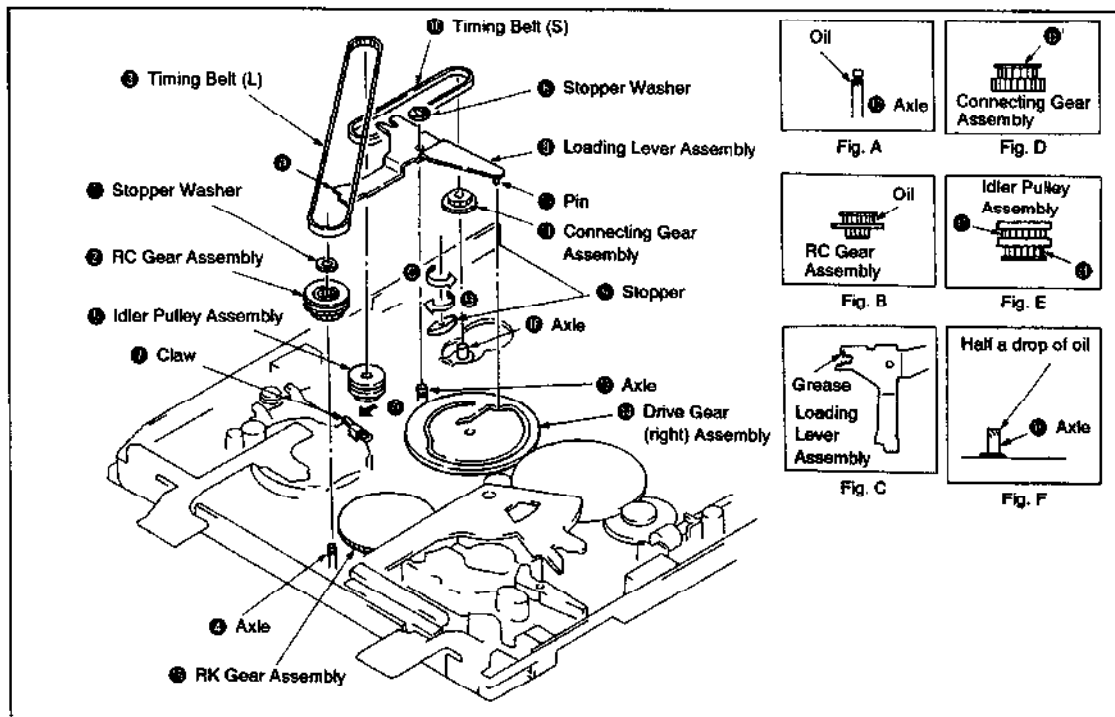


Fig. 3-16.

3-16. IDLER PULLEY, TS BRAKE ASSEMBLY, LB GEAR ASSEMBLY, RK GEAR ASSEMBLY

1. Removal (See Fig. 3-17.)

- 1) Remove the DC motor (capstan motor) as described in section 3-3.
- 2) Remove the switch lever assembly as described in section 3-14.
- 3) Remove the timing belt (L), the RC gear assembly, the loading lever assembly, the timing belt (S) and the connecting gear assembly described in section 3-15.
- 4) Set the **STOP** mode.
- 5) Remove the stopper washer ①, then remove the idler pulley ②.
- 6) Open the claw ③, then remove the TS brake assembly ④.
- 7) Remove the torsion coil spring (L.B) ⑤.
- 8) Remove the stopper washer ⑥, then remove the LB gear assembly ⑦.
- 9) Remove the RK gear assembly ⑧.

Note: When removing the idler pulley ②, take care not to touch the flange section ⑨. (See Fig. C.)

2. Installation (See Fig. 3-17.)

- 1) Apply half a drop of oil to the axle ⑩ (See Fig. A).
- 2) Mount the RK gear assembly ⑧ onto the axle ⑩, keeping it in horizontal position.
- 3) Apply half a drop of oil to the axle ⑪ (See Fig. B).
- 4) Mount the LB gear assembly ⑦ onto the axle ⑪ and secure it with the stopper washer ⑥.
- 5) Insert the torsion coil spring (LB) ⑤ into the axle ⑫, then hook it to the mechanism chassis notch ⑬ and to the tab ⑭.
- 6) Mount the TS brake assembly ④ and close the claw ③.
- 7) Apply half a drop of oil to the axle ⑮ (See Fig. D).
- 8) Mount the idler pulley ② onto the axle ⑮, then secure it with the stopper washer ①.
- 9) Mount the timing belt (L), the RC gear assembly, the loading lever assembly, the timing belt (S) and the connecting gear assembly as described in section 3-15.
- 10) Mount the switch lever assembly as described in section 3-14.
- 11) Mount the DC motor (capstan motor) as described in section 3-3.

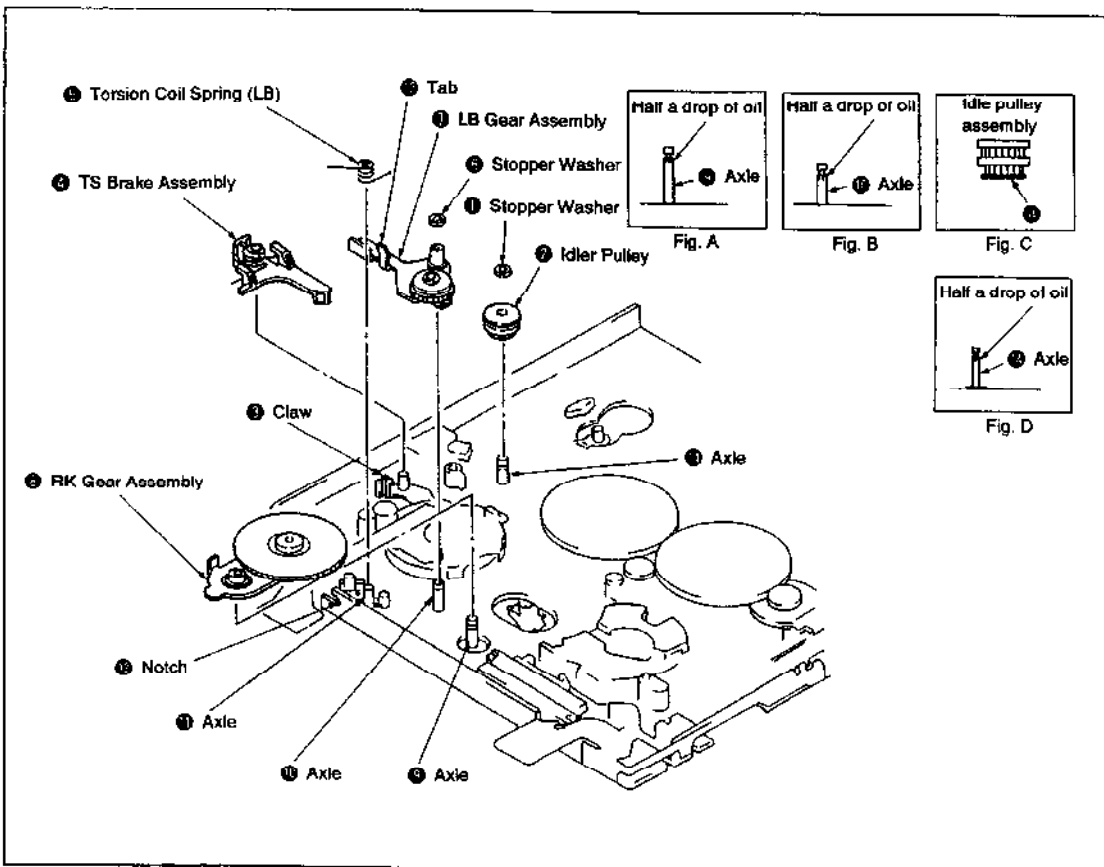


Fig. 3-17.

3-17. UL GEAR, UL BRAKE, UL ARM, LB PLATE SPRING

1. Removal (See Fig. 3-18.)

- 1) Remove the switch lever assembly as described in section 3-14.
- 2) Remove the stopper washer ①, then remove the UL gear ②.
- 3) Remove the UL arm ③, the 1.6 mm-diameter poly washer ④ and the LB plate spring ⑤.
- 4) Remove the UL brake ⑥.

2. Installation (See Fig. 3-18.)

- 1) Mount the UL brake ⑥.
- 2) Apply half a drop of oil to the axle ⑦ (See Fig. A).
- 3) Mount the LB plate spring ⑤ to the axle ⑦ as shown in Fig. B, then install the 1.6mm-diameter poly washer ④.
- 4) Mount the UL arm ③ to the axle ⑦ so that the protrusion ⑧ comes into the groove ⑨ of the UL brake ⑥.
- 5) Mount the UL gear ② to the axle ⑦ and engage it with the gear of the drive gear (left) assembly ⑩.
- 6) Install the stopper washer ①.
- 7) Mount the switch lever assembly as described in section 3-14.

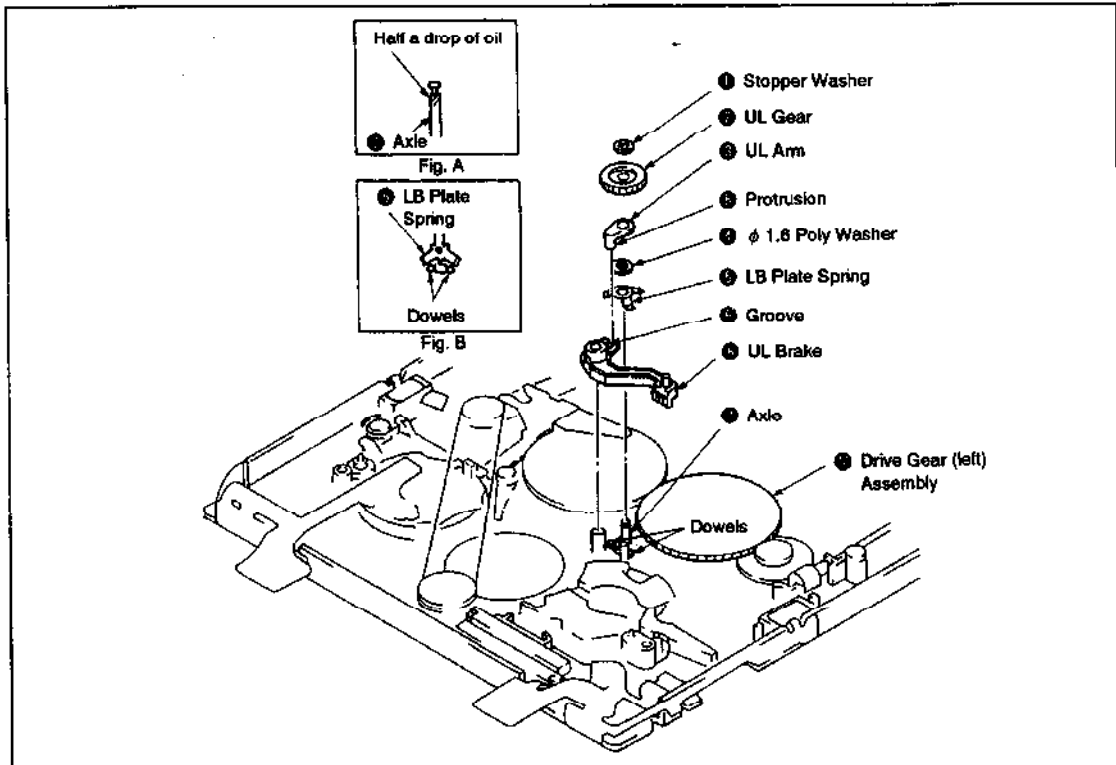


Fig. 3-18.

3-18. COASTER (RIGHT) ASSEMBLY, DRIVE GEAR (RIGHT) ASSEMBLY

1. Removal (See Fig. 3-19.)

- 1) Remove the DC motor (capstan motor) as described in section 3-3.
- 2) Remove the drum unit as described in section 3-13.
- 3) Remove the switch lever assembly as described in section 3-14.
- 4) Remove the timing belt (L), the RC gear assembly and the loading lever assembly as described in section 3-15.
- 5) Set the **STOP** mode.
- 6) Remove the screw ①, then remove the coaster plate spring ② and the coaster (right) assembly ③.
- 7) Remove the two screws ④, then remove the reinforcing plate TT ⑤.
- 8) Remove the stopper washer 1.5 ⑥, then remove the drive gear (right) assembly ⑦.

2. Installation (See Fig. 3-19.)

- 1) Grease the points of the mechanism chassis shown in Fig. A.
- 2) Apply half a drop of oil to the axle ⑧ (See Fig. F).
- 3) Grease pin ⑨, axle ⑧ and dowel ⑩ of the coaster (right) assembly ③ (See Fig. D).
- 4) Mount by aligning the pin ⑨ and the axle ⑧ with the slot ⑪ of the mechanism chassis.
- 5) Move the brake release arm ⑫ in the direction of the arrow ⑬ to put it out of the way.

- 6) Mount the drive gear (right) assembly ⑦ to the axle ⑧, and engage it with the drive gear (left) assembly ⑬ as shown in Fig. B.
- 7) Align the ⑭ part with the ⑮ part, and the hole ⑯ with the pin ⑨ of the coaster (right) assembly ③.
- 8) Install the stopper washer 1.5 ⑥.
- 9) Mount by aligning the coaster plate spring ② with the axle ⑧ of the coaster (right) assembly ③ and pin ⑨, then secure with the screw ①.
- 10) Mount the reinforcing plate TT ⑤ aligning it with the dowel ⑩, then tighten the two screws ④ in the indicated order.
- 11) Grease the points indicated in Figs. C and E.
- 12) Mount the timing belt (L), the RC gear assembly and the loading lever assembly as described in section 3-15.
- 13) Mount the switch lever assembly as described in section 3-14.
- 14) Mount the drum unit as described in section 3-13.
- 15) Mount the DC motor (capstan motor) as described in section 3-3.

- Note:**
- Screw ① should be tightened with a tightening torque of approx. 500g*cm. If tightened too much, the coaster (right) assembly ③ and the coaster plate spring ② will be deformed.
 - After installing, be sure to perform tape path adjustment as described in section 4.

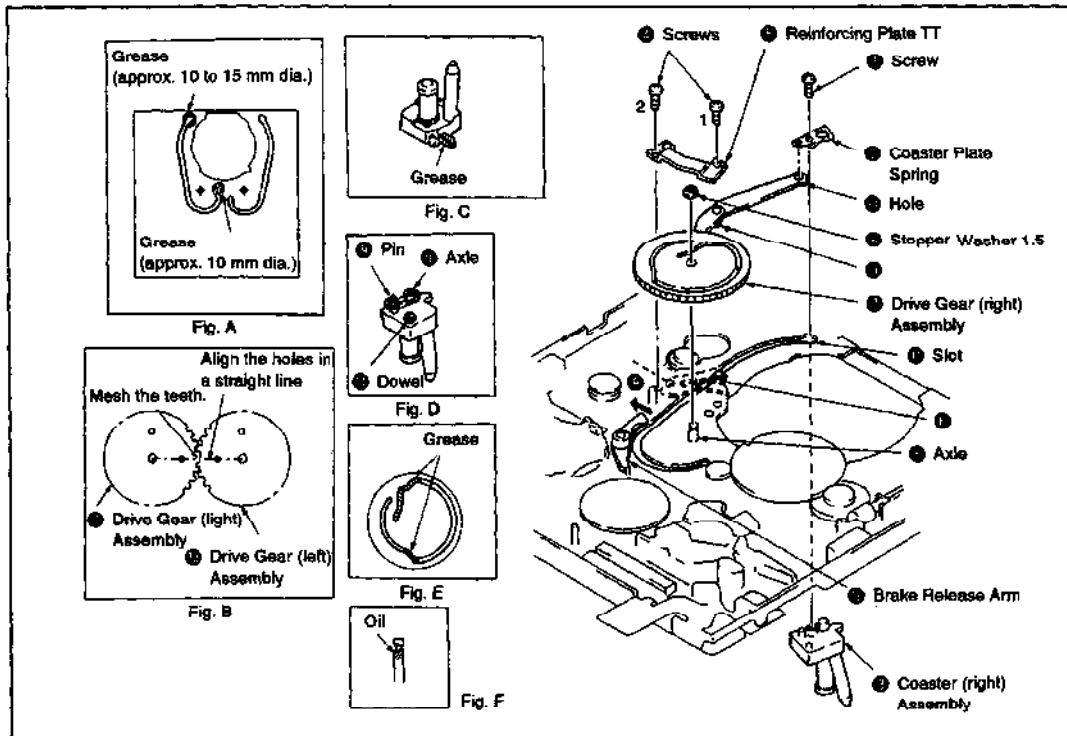


Fig. 3-19.

3-19. COASTER (LEFT) ASSEMBLY, DRIVE GEAR (LEFT) ASSEMBLY

1. Removal (See Fig. 3-20.)

- 1) Remove the DC motor (capstan motor) as described in section 3-3.
- 2) Remove the drum assembly as described in section 3-13.
- 3) Remove the switch lever assembly and the pinch roller sub-arm assembly as described in section 3-14.
- 4) Remove the timing belt (L), the RC gear assembly and the loading lever assembly as described in section 3-15.
- 5) Remove the coaster (right) assembly and the drive gear (right) assembly as described in section 3-18.
- 6) Remove the screw ①, then remove the coaster plate spring ② and the coaster (left) assembly ③.
- 7) Remove the two screws ④, then remove the reinforcing plate SS assembly ⑤.
- 8) Remove the stopper washer 1.5 ⑥, then remove the drive gear (left) assembly ⑦.

2. Installation (See Fig. 3-20.)

- 1) Grease the points of the mechanism chassis shown in Fig. A.
- 2) Apply half a drop of oil to the axle ④ (See Fig. E).
- 3) Grease pin ①, axle ④ and dowel ⑤ of the coaster (left) assembly ③ (See Fig. B).
- 4) Mount by aligning the pin ① and the axle ④ with the slot ⑧ of the mechanism chassis.
- 5) Fit the drive gear (left) assembly ⑦ to the axle ④, and mount so that the gear engages with the wheel gear ⑨ and the UL gear ⑩.

- 6) Align the ⑪ part with the slot ⑧, and the hole ⑫ with the pin ① of the coaster (left) assembly ③.
- 7) Install the stopper washer 1.5 ⑥.
- 8) Mount by aligning the coaster plate spring ② with the axle ④ and pin ① of the coaster (left) assembly ③, then secure with the screw ①.
- 9) Mount the reinforcing plate SS assembly ⑤ aligning it with the dowel ⑤, then tighten the two screws ④ in the indicated order.
- 10) Grease points indicated in Figs. C and D.
- 11) Mount the coaster (right) assembly and the drive gear (right) assembly as described in section 3-18.
- 12) Mount the timing belt (L), the RC gear assembly and the loading lever assembly as described in section 3-15.
- 13) Mount the switch lever assembly and the pinch roller sub arm assembly as described in section 3-14.
- 14) Mount the drum assembly as described in section 3-13.
- 15) Mount the DC motor (capstan motor) as described in section 3-3.

- Note:**
- Screw ① should be tightened with a tightening torque of approx. 500g·cm. If tightened too much, the coaster (right) assembly ③ and the coaster plate spring ② will be deformed.
 - After installing, be sure to perform tape path adjustment as described in section 4.

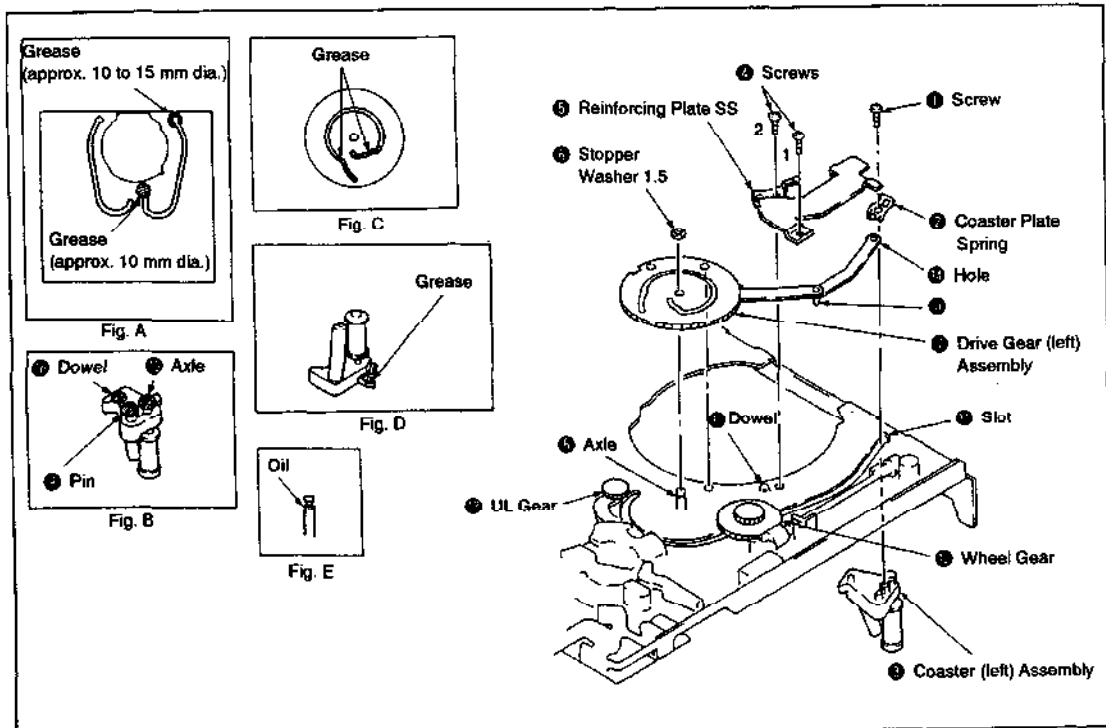


Fig. 3-20.

3-20. LOADING MOTOR, BRAKE RELEASE ARM, WHEEL GEAR, WORM ASSEMBLY

1. Removal (See Fig. 3-21.)

- 1) Remove the DC motor (capstan motor) as described in section 3-3.
- 2) Remove the switch lever assembly and the pinch roller sub arm assembly as described in section 3-14.
- 3) Remove the timing belt (L), the RC gear assembly and the loading lever assembly as described in section 3-15.
- 4) Remove the drive gear (right) assembly as described in section 3-18.
- 5) Remove the drive gear (left) assembly as described in section 3-19.
- 6) Remove the two screws ①, then remove the loading motor assembly ②.
- 7) Remove the brake release arm ③.
- 8) Remove the stopper washer ④, then remove the wheel gear ⑤.
- 9) Remove the worm assembly ⑥ from the six claws ⑦.

2. Installation (See Fig. 3-21.)

- 1) Mount the worm assembly ⑥, matching it to the six claws ⑦.
- 2) Grease the shaded parts of the worm assembly ⑥ (five places) (see Fig. A).
- 3) Apply half a drop of oil to the axle ⑧ (See Fig. B).
- 4) Fit the wheel gear ⑤ to the axle ⑧ and engage it with the gear of the worm assembly ⑥.
- 5) Mount the brake release arm ③.
- 6) Grease the whole perimeter of the gear of the loading motor assembly ②.
- 7) Align the loading motor assembly ② with the mechanism chassis and secure it with the two screws ①.
- 8) Mount the drive gear (left) assembly as described in section 3-19.
- 9) Mount the drive gear (right) assembly as described in section 3-18.
- 10) Mount the timing belt (L), the RC gear assembly and the loading lever assembly as described in section 3-15.
- 11) Mount the switch lever assembly and the pinch roller sub arm assembly as described in section 3-14.
- 12) Mount the DC motor (capstan motor) as described in section 3-3.

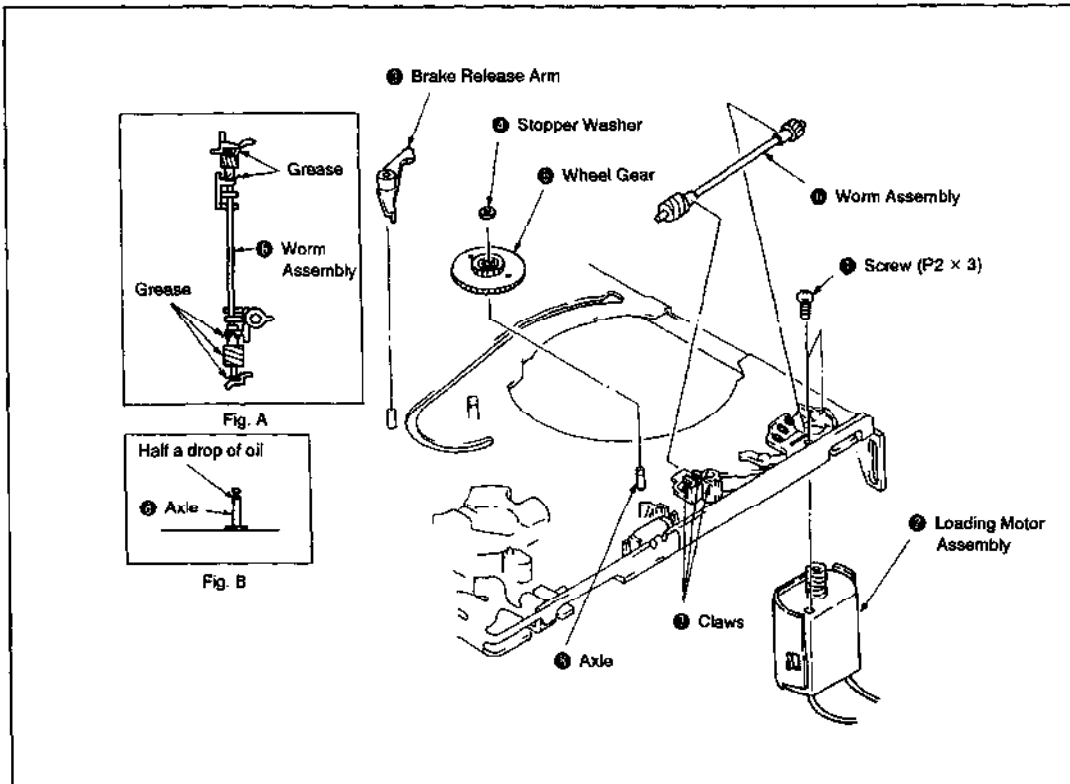


Fig. 3-21.

3-21. ROTARY UPPER DRUM REPLACEMENT

1. Removal

- If possible, make a recording before removal.
- 1) Detach the six solderings ①, then use a pair of tweezers or the like to confirm that the terminals passing through the board holes from below can move freely.
- 2) Remove the two screws ② (See Fig. 3-22).
- 3) Mount the jig ③ (Ref. No. J-7) with the two supplied screws ④, then screw the attached hexagon socket screws ⑤ to the jig ③. The rotary upper drum ⑥ will move upward and come off (See Fig. 3-23).

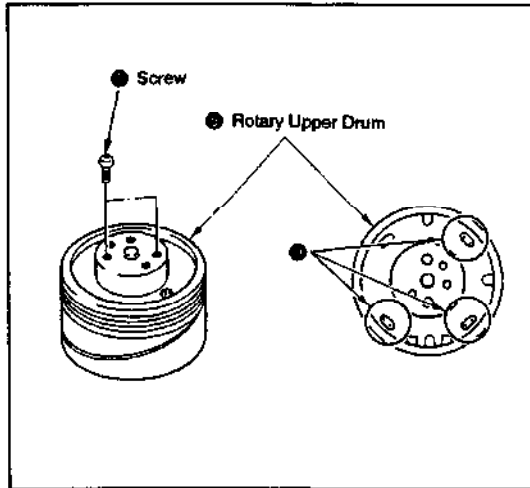


Fig. 3-22.

2. Installation

- 1) Wipe clean the flange surface and the rotary upper drum ⑥ surface that makes contact with it, and confirm that they are free from dirt and scratches.
 - 2) Insert the jig ③ (Ref. No. J-7) into the drum positioning hole, then set the rotary upper drum ⑥ by passing the jig through its positioning hole ⑦.
- Note:** Confirm that the terminals ⑧ protrude slightly from the rotary upper drum board holes (See Fig. 3-24).
- 3) Remove the jig ③ and push down the rotary upper drum ⑥ gently by hand. If it does not go all the way down, secure it temporarily by tightening the two hexagon socket screws ⑤ alternately.
 - 4) Insert the jig ③ into the positioning hole ⑦ again and confirm that it goes in smoothly. If it does not, loosen the two screws ⑤, repeat step 3 of the Removal paragraph and restart the setting procedure.
 - 5) Tighten the screws ④.
 - 6) Solder the terminals ⑧ (< ⑨ in Fig. 3-22).

Note: Take care that no solder flows below the board.

Note: After installing, be sure to perform tape path adjustment as described in section 4.

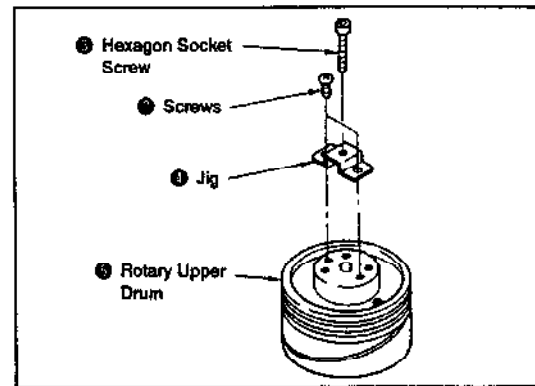


Fig. 3-23.

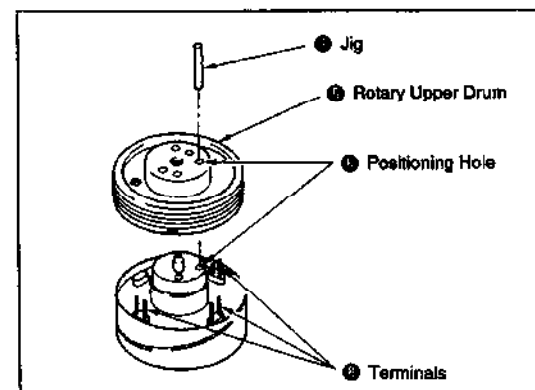


Fig. 3-24.

3-22. FWD BACK TENSION (See Fig. 3-25.)

- 1) Set the torque cassette (Ref. No. J-6).
- 2) Set the FWD mode and confirm that S reel table torque value is within 9 to 13 g[•]cm.
- 3) If the torque value does not meet the specification, adjust the adjust arm ●.

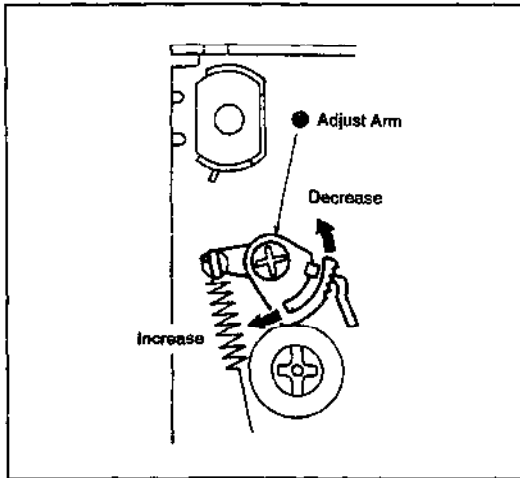


Fig. 3-25.

3-23. REEL TORQUE CHECK

- 1) Set the torque cassette.
- 2) Set the FWD mode and confirm that T reel table torque value is within 7 to 15 g[•]cm.
- 3) Set the REV mode and confirm that S reel table torque value is within 29 ± 6 g[•]cm.
- 4) Set the REV mode and confirm that T reel table torque value is within 13 to 25 g[•]cm.
- 5) If a torque value does not meet the specifications above, replace the corresponding reel table.

4. TAPE PATH ADJUSTMENT

[The Track Shift Mode]

In the 8 mm video system, instantaneous tape speed control is performed using four kinds of pilot signals, and high-precision tracking is achieved through the ATF (Automatic Track Finding) system. This makes a tracking control knob unnecessary and allows for precise tracing.

On the other hand, however, tape path adjustment presents some difficulties when the ATF system is used. Namely, since the ATF system will automatically compensate to some degree for head tracing errors, thorough adjustment is not possible.

This can be solved by setting the track shift mode for tracking fine adjustment. ATF will be compulsorily activated, shifting the tracking amount by a fixed amount (approx. 1/4) and thus making tracking fine adjustment easy. Furthermore, no track shift jigs are required.

4-1. TRACK SHIFT MODE SETTING

[Setting Procedure]

• Connect the TEST A and TEST B terminals to the COM terminal.

Example:

NTSC GV-8

PAL GV-8E

Connect Pins ① and pin ③ of CN017 on the
{ SV-34 board (GV-8) } to pin ② of it. (See Fig. 4-1)

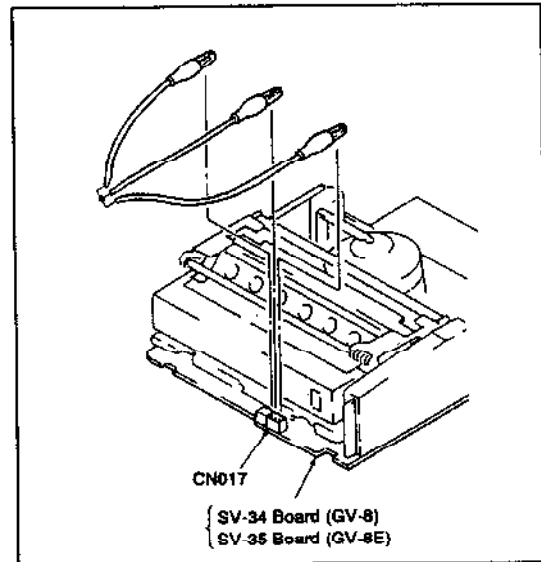


Fig. 4-1.

[Note on Adjustment of No.7 Guide (TG-7)]

The height adjustment screw for No.7 guide (TG-7) is located at some distance from the guide (refer to Fig. 4-2).

Therefore, when performing section 4-6. No.7 Guide (TG-7) Adjustment it is convenient to use the alignment tape for tracking (Ref. No. J-5), modified as follows, and perform adjustment in playback mode.

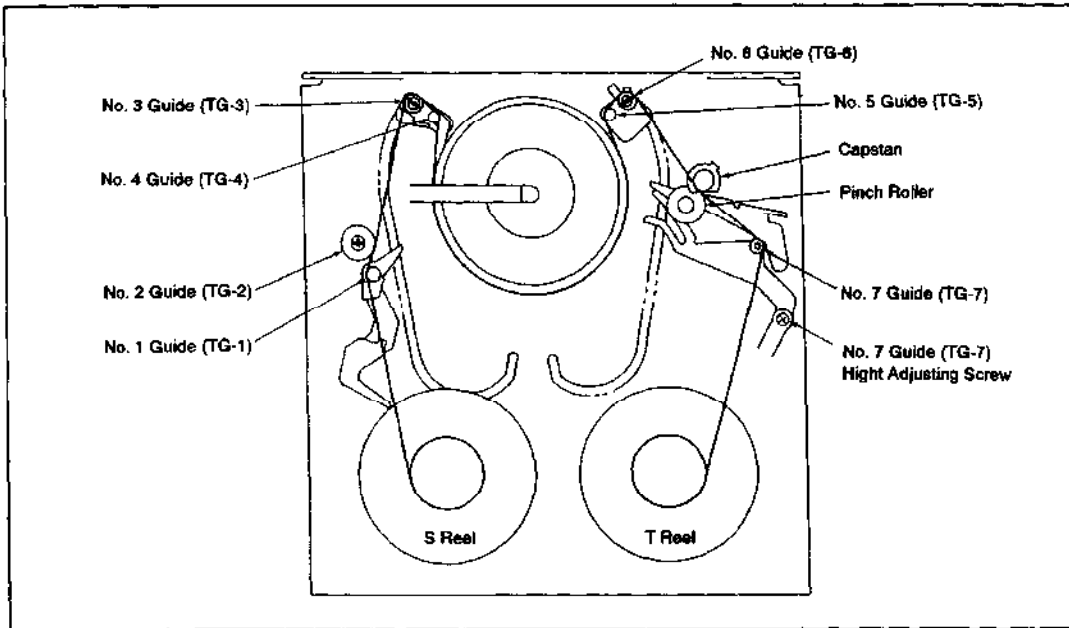
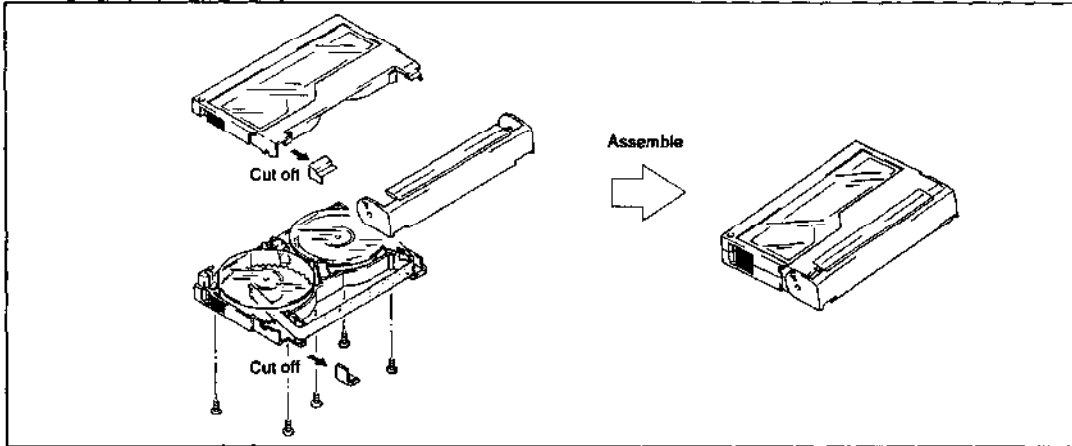


Fig. 4-2.

4-2. PREPARATIONS FOR ADJUSTMENT

- 1) Clean tape path surfaces (tape guides, drum, capstan shaft, pinch roller) (See Fig. 4-2).
- 2) Connection of oscilloscope and output method of waveform.
CH 1: RF signal output of the drum head (V RF OUT)
Method for signal output:
Short-circuit the external trigger output (RF SW. P) and GND.

Example:

NTSC GV-8

PAL GV-8E

CH 1: Pin ③ (V RF OUT) of CN018 on the

{ SV-34 board (GV-8)

{ SV-35 board (GV-8E)

Method for signal output:

Short-circuit pin ① (GND) and pin ② (RF SW.P)

of CN018 on the

{ SV-34 board (GV-8)

{ SV-35 board (GV-8E)

- 3) Play back the alignment tape for tracking adjustment (Ref. No. J-5).
- 4) Confirm that both the entrance and exit side RF waveforms of the oscilloscope are flat (See Fig. 4-4). If they are not, adjust as follows.

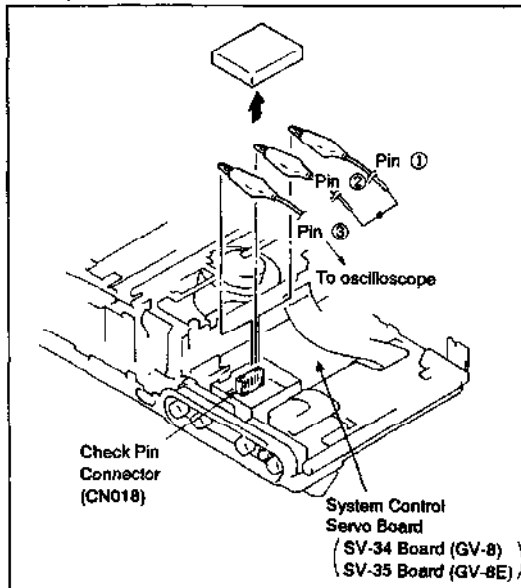


Fig. 4-3.

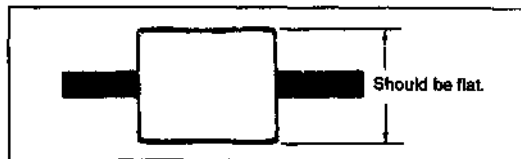


Fig. 4-4.

4-3. TRACKING ADJUSTMENT (See Fig. 4-5.)

- 1) Play back the alignment tape for tracking adjustment.
- 2) Pass a hexagonal wrench, screwdriver (Ref. No. J-11) or the like through the hole ①, loosen the lock screw ② a little, then make the entrance side waveform flat by turning the No. 3 guide (TG-3) ③.
- 3) Pass a hexagonal wrench, screwdriver or the like through the hole ④, loosen the lock screw ⑤ a little, then make the exit side waveform flat by turning the No. 6 guide (TG-6) ⑥.

Note: Take care not to loosen lock screws too much, since guides come loose easily.

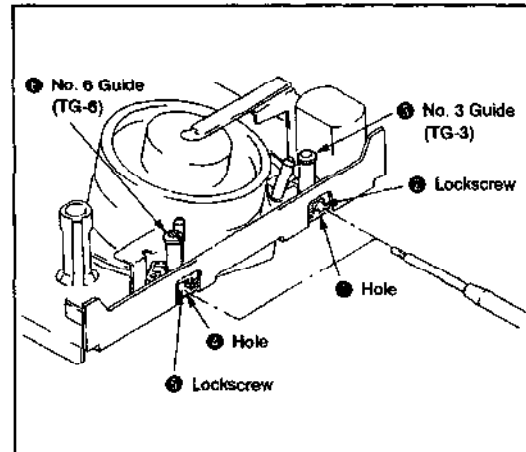


Fig. 4-5.

4-4. TRACKING FINE ADJUSTMENT
(See Figs. 4-5. and 4-6.)

- 1) Play back the alignment tape for tracking adjustment and set the track shift mode.
- 2) Confirm whether the waveform is flat. If it is not, turn the No. 3 (TG-3) and No. 6 (TG-6) guides so that it becomes flat.
- 3) Fix the No. 3 guide ③ by tightening its lock screw ④. Then confirm that the entrance side waveform has not changed.
- 4) Fix the No. 6 guide ⑥ by tightening its lock screw ⑤. Then confirm that the exit side waveform has not changed.

Note: The set screws ④ and ⑤ should be tightened with a tightening torque of approx. 200g·cm ± 10%.
If tightened too much, there is danger of damaging the thread.

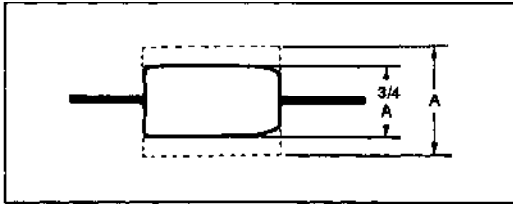


Fig. 4-6.

4-5. No. 2 GUIDE (TG-2) ADJUSTMENT

When the No. 2 guide has been turned or replaced, perform height presetting before this adjustment.

4-5-1. No. 2 Guide (TG-2) Height Presetting
(See Fig. 4-7.)

- 1) Adjust the height from the mechanism chassis upper surface to the TG-2 upper flange ① upper surface to 18.6 mm by rotating the TG-2 upper flange ①.

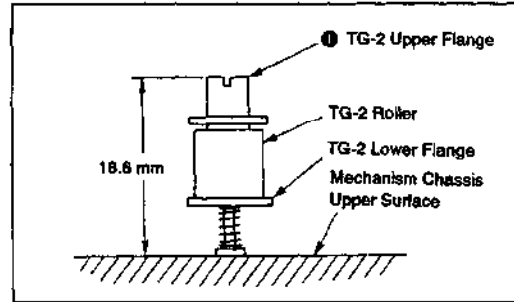


Fig. 4-7.

[Reference]

This U mechanism is equipped with four adjustable guides (TG-2, 3, 6 and 7). To raise or lower the respective guide rotate the corresponding adjustment screw as shown below.

Guide	Guide adjustment	Rotating direction of adjustment screw
TG-2, 3, 6	Raise	Counterclockwise
	Lower	Clockwise
TG-7	Raise	Counterclockwise
	Lower	Clockwise

4-5-2. No. 2 Guide (TG-2) Adjustment
(See Figs. 4-8. and 4-9.)

- 1) Play back a thin tape like the P6-120MP, etc. and set the REV mode.
 - 2) Confirm that the tape is not bent at the lower flange ② of the No. 2 guide (TG-2) ① (See Fig. 4-8). If it is, turn the upper flange ③ of the No. 2 guide (TG-2) ④ clockwise with a screwdriver, lowering it until the tape is straightened.
 - 3) Play back the alignment tape for tracking adjustment.
 - 4) Perform tracking adjustment and tracking fine adjustment as described in sections 4-3. and 4-4.
 - 5) In the track shift mode, CUE/REV the tape, then play it back and confirm that the RF waveform rises flat within 2 seconds.
 - 6) If the waveform is not normal (See Fig. 4-9), turn the upper flange ③ of the No. 2 guide (TG-2) ④ 90° counter-clockwise and repeat step 5.
- Repeat steps 5 and 6 until a normal waveform is obtained. Then, confirm that the tracking waveform has not changed. If it has, perform fine adjustment of entrance side tracking and repeat step 5.

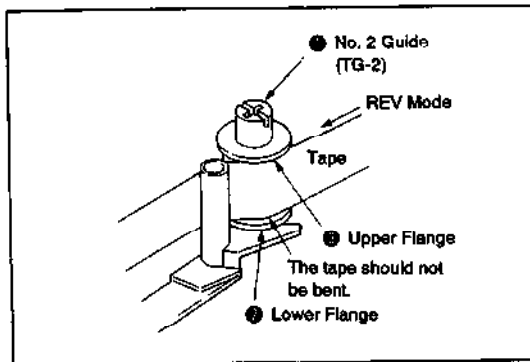


Fig. 4-8.

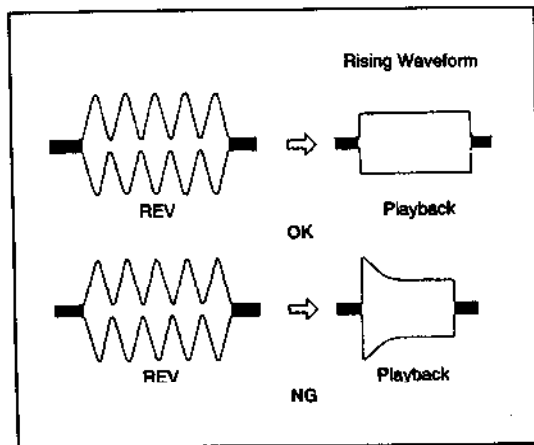


Fig. 4-9.

4-6. No. 7 GUIDE (TG-7) ADJUSTMENT
(See Fig. 4-10.)

- 1) Play back the alignment tape for tracking adjustment and set the REV mode.
- 2) Confirm that the tape is not bent between the No. 6 guide (TG-6) ① and the capstan ②. If it is, turn the high adjusting screw ③ of the No. 7 guide (TG-7) ④ until the tape is straightened.
- 3) Set the playback mode again and confirm that the tape is not bent between the capstan ② and the high adjusting screw ③ of the No. 7 guide (specification: 0.5 mm or less). If the tape is bent beyond the specification, turn the No. 7 guide (TG-7) ④ until bending is within the specification (0.5 mm). If in the REV mode tape bending between the No. 6 guide (TG-6) ① and the capstan ② is 0.3 mm or less, adjustment can be considered completed.

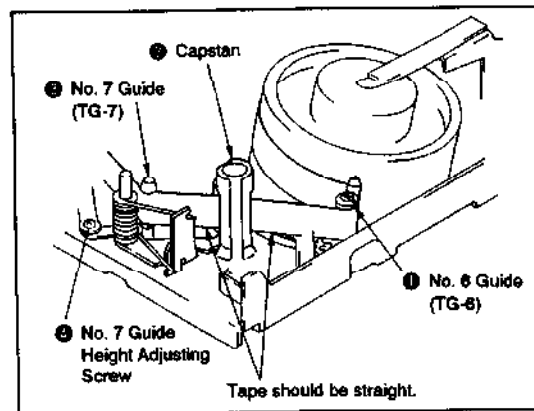


Fig. 4-10.

4-7. CUE AND REV WAVEFORM CHECK
(See Fig. 4-11.)

- 1) Play back the alignment tape for tracking adjustment and set the REV mode. Confirm that waveform peaks maintain a constant pitch of 5 seconds or more (See Fig. 4-11). In case pitch is not constant, perform section 4-4. Tracking Fine Adjustment and section 4-6. No. 7 Guide Adjustment.
- 2) Set the CUE mode. Confirm that waveform peaks still maintain a constant pitch of 5 seconds or more (See Fig. 4-11). Otherwise, perform section 4-4. Tracking Fine Adjustment.

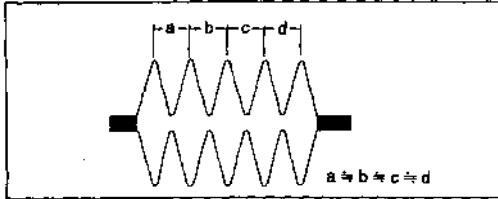


Fig. 4-11.

4-8. CHECK AFTER ADJUSTMENT

4-8-1. Tracking Check

- 1) Confirm that the amplitude of RF waveform is reduced to approx. 3/4 when the track shift mode is set (See Fig. 4-12).
- 2) Then, confirm that the minimum amplitude value (EMIN) is 65% of the maximum value (EMAX) or larger (See Fig. 4-13).
- 3) Confirm that no large fluctuations occur on the waveform (See Fig. 4-14).

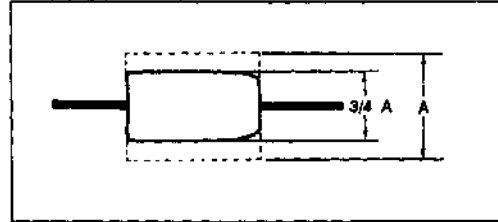


Fig. 4-12.

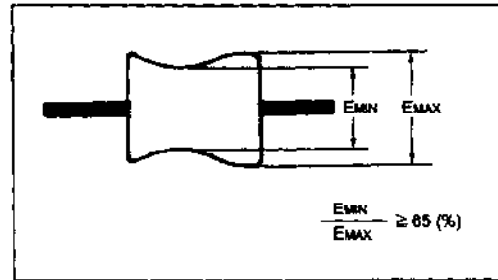


Fig. 4-13.

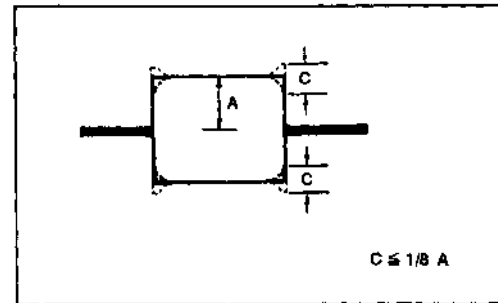


Fig. 4-14.

4-8-2. Rising Check (See Fig. 4-15.)

- 1) Play back the alignment tape for tracking adjustment.
- 2) Cancel the track shift mode.
- 3) Eject the tape, then load it again.
- 4) Set the playback mode and confirm that the RF waveform rises flat within 2 seconds. Also confirm that the tape is not bent around the pinch roller (See Fig. 4-15).
- 5) CUE/REV and FF/REW the tape, then play it back and confirm that the RF waveform rises flat within 2 seconds. Also confirm that the tape is not bent around the pinch roller.
- 6) Repeat steps 3) to 5) once more.

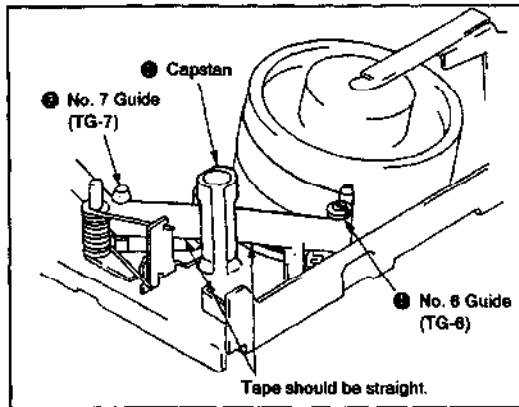


Fig. 4-15.

4-8-3. Tape Path Check (See Fig. 4-16.)

- 1) Play back a thin tape like the P6-120MP (NTSC) or PS-90MP (PAL), etc. and confirm that no tape rising occurs, and that curling is less than 0.3 mm, at the lower flange of the No. 2 guide, the upper flange of the No. 3 guide, the upper flange of the No. 6 guide and the No. 7 guide upper and lower flanges.
- 2) Confirm that no tape rising occurs and that curling is less than 0.3 mm at the flanges of all guide when pressing the FF button in the playback mode to set the CUE mode, or the REV button to set the REV mode.

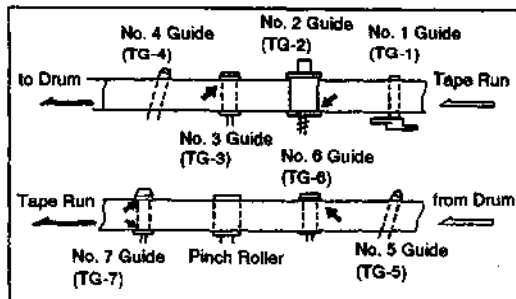


Fig. 4-16.