

GV-200B

SERVICE MANUAL

AEP Model
French Model



VIDEO
WALKMAN

SPECIFICATIONS

System

| | |
|-----------------------------|---|
| Video recording system | Rotary two-head helical scanning FM system |
| Audio recording system | Rotary head, FM system |
| Video signal | CCIR system B, G, H and I, PAL colour CCIR system L, SECAM (transferred to PAL colour) |
| Usable cassettes | 8 mm video format cassettes |
| Tape speed | SP: approx. 2.0051 cm/sec. LP: approx. 1.0056 cm/sec. |
| Recording time | SP mode: 1.5 hours LP mode: 3 hours (with Sony PS-90 cassette) |
| Playback time | SP mode: 1.5 hours LP mode: 3 hours (with Sony PS-90 cassette) |
| Fast forward/rewinding time | Approx. 7 minutes (with Sony PS-90 cassette) |

LCD section

| | |
|-------------------|--|
| Picture | 4 inches measured diagonally 8.2 x 6.2 cm (3 1/4 x 2 1/2 inches) |
| On-screen display | TN LCD/TFT active matrix method Total picture-element number: 112,086 (479 x 234) |

Tuner section

| | |
|------------------|--|
| Channel coverage | B/G, J VHF: E2 - E12 channels UHF: 21 - 69 channels Cable TV channels: S01 - S20 L VHF: 5 - 10 channels UHF: 21 - 69 channels Cable TV channels: B - Q 75-ohm minijack for VHF/UHF |
| Aerial input | |

Inputs/outputs

| | |
|--------------------|---|
| VIDEO/AUDIO IN/OUT | Selectable automatically according to the operation |
| Video input | Phono jack, 1 Vp-p, 75 ohms, unbalanced, sync negative |
| Video output | Phono jack, 1 Vp-p, 75 ohms, unbalanced, sync negative |
| Audio input | Phono jack, -7.5 dBs (0 dBs = 0.775 Vrms), input impedance more than 47 kilohms |
| Audio output | Phono jack, -7.5 dBs (330 mV) at load impedance 47 kilohms, output impedance less than 10 kilohms |
| Speakers | 16 ohms, 150 mW |
| Earphones | Minijack, 8 ohms x 2 |
| CONTROLS | Minijack |
| Camera input | 12-pin |

Timer section

| | |
|-----------------|--------------------------------------|
| Clock | Crystal lock |
| Time indication | 24-hour cycle |
| Timer setting | Only for recording, 1 event/24 hours |

General

| | |
|-----------------------|---|
| Power requirements | Battery mounting surface input: 6.0 V (battery pack) 6.5 V (DC pack DCF-77) 6.9 W (for continuous playback) |
| Power consumption | 0°C to 40°C (32°F to 104°F) |
| Operating temperature | -20°C to 60°C (-4°F to 140°F) |
| Storage temperature | |
| Dimensions | 129 x 71 x 226 mm (wh/d) (5 1/8 x 2 7/8 x 9 inches) |
| Weight | Approx. 1.1 kg (2 lb 7 oz) not incl. battery pack |
| Accessories supplied | Earphone (1) Connecting cord (1) Carrying case (1) Battery pack NP-66H (1) AC power adaptor AC-V30 (1) Lithium battery (1) |

AC-V30

| | |
|-------------------------|---|
| Power consumption | 20 W |
| Power requirements | 100 - 240 V AC, 50/60 Hz |
| Output voltage | DC OUT: 7.5 V, 1.6 A in operating mode |
| Battery charge terminal | 10 V, 1.3 A in charge mode |
| Operating temperature | 0°C to 40°C (32°F to 104°F) |
| Storage temperature | -20°C to 60°C (-4°F to 140°F) |
| Dimensions | Approx. 67 x 39 x 138 mm (wh/d) (2 3/4 x 1 3/8 x 5 1/2 inches) including projecting parts and controls |
| Weight | Approx. 310 g (11 oz) |

Design and specifications are subject to change without notice.

Note

This appliance conforms with EEC Directive 87/308/EEC regarding interference suppression.

— continued on next page —

For MECHANICAL ADJUSTMENT, refer to the "8mm Video MECHANICAL ADJUSTMENT MANUAL III (U MECHANISM)" (9-972-732-11)

8 VIDEO TV RECORDER
SONY®



LIST OF RECOMMENDED ACCESSORIES



| | Model name | Page |
|----------------------------------|--|--------|
| Battery pack | NP-77H, NP-77, NP-55 | 12 |
| AC power adaptor/Battery charger | AC-V55, BC-55 | 12 |
| Car battery charger | DC-V30 | 11 |
| DC pack | DCP-77 | 17 |
| Colour video camera | CCD-G100STE, CCD-G100E, CCD-G1E | 47, 48 |
| Pan tilter | HVR-200 | 51 |
| Connecting cord | VMC-910MS/920MS (1m/2m) VMC-710EM/720EM (1m/2m) | 52, 56 |
| Cleaning cassette | V8-25CLH | 62 |
| RFU adaptor kit | RFL-B9EKA | 55 |

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the B+ voltage to see it is at the values specified.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  OR DOTTED LINE WITH MARK  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!


LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE  SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

TABLE OF CONTENTS

| <u>Section</u> | <u>Title</u> | <u>Page</u> | <u>Section</u> | <u>Title</u> | <u>Page</u> |
|-----------------------|---|-------------|--|---|-------------|
| 1. GENERAL | | | | | |
| • | Features | 5 | 3-14. | Tuner Block Diagram | 52 |
| • | Location of Parts and Controls | 5 | 3-15. | Audio Block Diagram | 55 |
| • | Power Sources | 6 | 3-16. | SECAM-PAL Conversion Block Diagram | 55 |
| • | Setting the Clock | 8 | 3-17. | Power Block Diagram | 57 |
| • | Presetting TV Channels | 9 | 4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS | | |
| • | Watching TV Programmes | 10 | 4-1. | Frame Schematic Diagram | 59 |
| • | Adjusting the Picture and Sound | 11 | 4-2. | Printed Wiring Boards and Schematic Diagrams | 62 |
| • | Using the SLEEP Timer | 11 | • | RP-105 Board | 63 |
| • | Inserting a Cassette | 12 | • | RG-22 Board | 68 |
| • | Recording TV Programmes | 12 | • | CC-55, CN-6P and SV-66 (Video) Boards | 75 |
| • | To Start Recording at the Desired Time | 13 | • | SV-66 (Servo, System Control) Board | 84 |
| • | Playing Back the Recorded Tapes | 14 | • | AU-93 Board | 96 |
| • | Connecting an Outdoor Aerial | 15 | • | SB-3P and TU-126 Boards | 102 |
| • | Connecting other VTRs or Monitors | 15 | • | DC-22P, KB-10P, UC-6, FP-89 and FP-90 Boards | 109 |
| • | Editing Tapes | 18 | 4-3. | Semiconductors | 113 |
| • | Precautions | 19 | 5. EXPLODED VIEWS | | |
| • | Maintenance | 19 | 5-1. | Cabinet (Upper) Assembly | 115 |
| • | Notes on Moisture Condensation | 19 | 5-2. | SC Unit Assembly | 116 |
| • | Using Your Video TV Recorder Abroad | 20 | 5-3. | Cabinet (Lower) Assembly | 117 |
| • | List of On-Screen Displays | 20 | 5-4. | Mechanism Deck Assembly (1) | 118 |
| 2. DISASSEMBLY | | | | | |
| 2-1. | Removal of Cabinet (Upper) Assy | 21 | 5-5. | Mechanism Deck Assembly (2) | 119 |
| 2-2. | Removal of SC Unit | 21 | 5-6. | Mechanism Deck Assembly (3) | 120 |
| 2-3. | Removal of Liquid Crystal Display Module | 21 | 6. ELECTRICAL PARTS LIST | | |
| 2-4. | Removal of Control Switch Block | 22 | | Hardware List | 146 |
| 2-5. | Removal of Cassette Compartment Assy | 22 | 7. MECHANICAL ADJUSTMENTS | | |
| 2-6. | Removal of TU-126 Board | 22 | 7-1. | Setting the Track Shift Mode | 147 |
| 2-7. | Removal of SB Block and Lithium Battery | 23 | 7-2. | Preparation for Adjustment | 147 |
| 2-8. | Removal of DC-22P Board | 23 | 8. ELECTRICAL ADJUSTMENTS | | |
| 2-9. | Removal of Mechanism Deck | 23 | 8-1. | Preparation for Adjustment | 148 |
| 2-10. | Internal Views | 24 | 8-1-1. | Using Instruments | 148 |
| 3. DIAGRAMS | | | | | |
| 3-1. | Circuit Boards Location | 25 | 8-1-2. | Connection of Instruments | 148 |
| 3-2. | Overall Block Diagram | 26 | 8-1-3. | VIDEO/AUDIO Terminal of the Unit | 149 |
| 3-3. | Head Amp Block Diagram | 29 | 8-1-4. | Set-up at the Adjustment | 149 |
| 3-4. | Video Block Diagram | 31 | 8-1-5. | Alignment Tape | 149 |
| 3-5. | LCD Video Block Diagram | 33 | 8-1-6. | Input/Output Level and Impedance | 150 |
| 3-6. | Servo/System Control Block Diagram | 36 | 8-1-7. | Test Mode | 151 |
| 3-7. | Table of SV-66 Board IC206 (CXP-80116) Port | 39 | 8-2. | Power Source Part Adjustment | 154 |
| 3-8. | Test Mode | 41 | 8-2-1. | UNREG Power Source Voltage Check | 154 |
| 3-9. | List of SIRCS Code | 44 | 8-2-2. | Switch 5V Adjustment | 154 |
| 3-10. | System Control—Video • Audio Part Interface | 45 | 8-2-3. | DD Converter Frequency Adjustment | 154 |
| 3-11. | System Control—Servo Peripheral Circuit Interface | 47 | 8-2-4. | −8V Adjustment | 154 |
| 3-12. | System Control—System Control Peripheral Circuit Interface | 49 | 8-2-5. | LCD Power Source Voltage Check | 154 |
| 3-13. | System Control—Mechanism Control Part Interface | 51 | 8-2-6. | CAM UNREG Check | 155 |
| | | | 8-3. | System Control System Adjustment | 155 |

| | |
|--|-----|
| 8-3-1. Clock Precision Adjustment | 155 |
| 8-3-2. Battery Down Adjustment | 155 |
| 8-4. Servo System Adjustment | 155 |
| 8-4-1. CUE/REV Adjustment | 155 |
| 8-4-2. Switching Position Adjustment | 156 |
| 8-5. Video System Adjustment | 156 |
| 8-5-1. Playback Frequency Characteristic Adjustment | 157 |
| 8-5-2. fsc Check | 157 |
| 8-5-3. SYNC AGC Adjustment | 157 |
| 8-5-4. IR Adjustment | 158 |
| 8-5-5. Y/C Separation Adjustment | 158 |
| 8-5-6. Emphasis Y Level Adjustment | 159 |
| 8-5-7. De-emphasis Y Level Adjustment | 159 |
| 8-5-8. Playback Y Level Adjustment | 159 |
| 8-5-9. Playback V Level Adjustment | 159 |
| 8-5-10. Y FM Carrier Adjustment | 160 |
| 8-5-11. Y FM Deviation Adjustment | 160 |
| 8-5-12. Recording Y Level Adjustment | 161 |
| 8-5-13. Chroma Emphasis Adjustment | 161 |
| 8-5-14. Recording Chroma Level Adjustment | 161 |
| 8-6. LCD System Adjustment | 162 |
| 8-6-1. Contrast Adjustment | 162 |
| 8-6-2. R Gain Adjustment | 162 |
| 8-6-3. B Gain Adjustment | 163 |
| 8-6-4. Sub Bright Adjustment | 163 |
| 8-6-5. fsc Adjustment | 163 |
| 8-6-6. White Balance Adjustment | 163 |
| 8-6-7. V COM DC Adjustment | 164 |
| 8-6-8. Character Position Adjustment | 164 |
| 8-7. Tuner System Adjustment | 165 |
| 8-7-1. RF AGC Adjustment | 165 |
| 8-8. Audio System Adjustment | 165 |
| 8-8-1. 1.5MHz Carrier Frequency Adjustment | 166 |
| 8-8-2. E-E Output Level Check | 166 |
| 8-8-3. 1.5MHz Carrier Level Check | 166 |
| 8-8-4. 1.5MHz Deviation Adjustment | 166 |
| 8-8-5. Total Level Characteristic Check | 167 |
| 8-8-6. Total Distortion Rate Check | 167 |
| 8-9. SECAM-PAL Conversion System Adjustment | 167 |
| 8-9-1. Bell Filter Adjustment | 168 |
| 8-9-2. VCO Adjustment | 168 |
| 8-9-3. I REF Adjustment | 168 |
| 8-9-4. R-Y fo Adjustment | 168 |
| 8-9-5. B-Y fo Adjustment | 169 |
| 8-9-6. B-Y Chroma Level Adjustment | 169 |
| 8-9-7. Burst Position Check | 169 |
| 8-9-8. PAL/SECAM Discrimination Check (1) | 169 |
| 8-9-9. PAL/SECAM Discrimination Check (2) | 169 |
| 8-10. Adjusting Parts Location Diagram | 170 |

SECTION 1 GENERAL

This section is extracted from instruction manual.

Features

The "Video Walkman" GV-200B is an 8mm video recorder with a LCD (Liquid Crystal Display). Its compact and lightweight design allows you to watch TV programmes and video tapes anywhere and anytime you like.

- With this video TV recorder, you can:
- view the playback picture of 8 mm video tapes.
 - view TV programmes.
 - record TV programmes.
- In addition, by connecting it to a video camera (not supplied), you can record pictures with the camera, and play back the recorded pictures on it immediately.

Other features

- Programmes based on PAL and SECAM colour systems receivable
- CRYSTAL-CLEAR still/slow picture search on LCD
- Timer-activated recording
- SLEEP timer for turning off the unit automatically

This unit uses 8 mm video format cassettes. It records in the SP mode (approximately 2.0051 cm/second) and the LP mode (approximately 1.0055 cm/second) and can play back in the SP mode and LP mode. The quality of the playback picture in the LP mode, however, will not be as good as that in the SP mode.

Television programmes, films, video tapes and other materials may be copyrighted. Unauthorized recording of such material may be contrary to the provisions of the copyright laws.

PCM recording/playback is not possible with this unit. The PCM sound recorded with another recorder cannot be played back with this unit.

For using this unit abroad, see page 64.


On colour System

This unit is designed to record and play back programmes based on the PAL colour system. Programmes based on the SECAM colour systems is transferred to the PAL colour systems on this unit.

4

5


Location of Parts and Controls

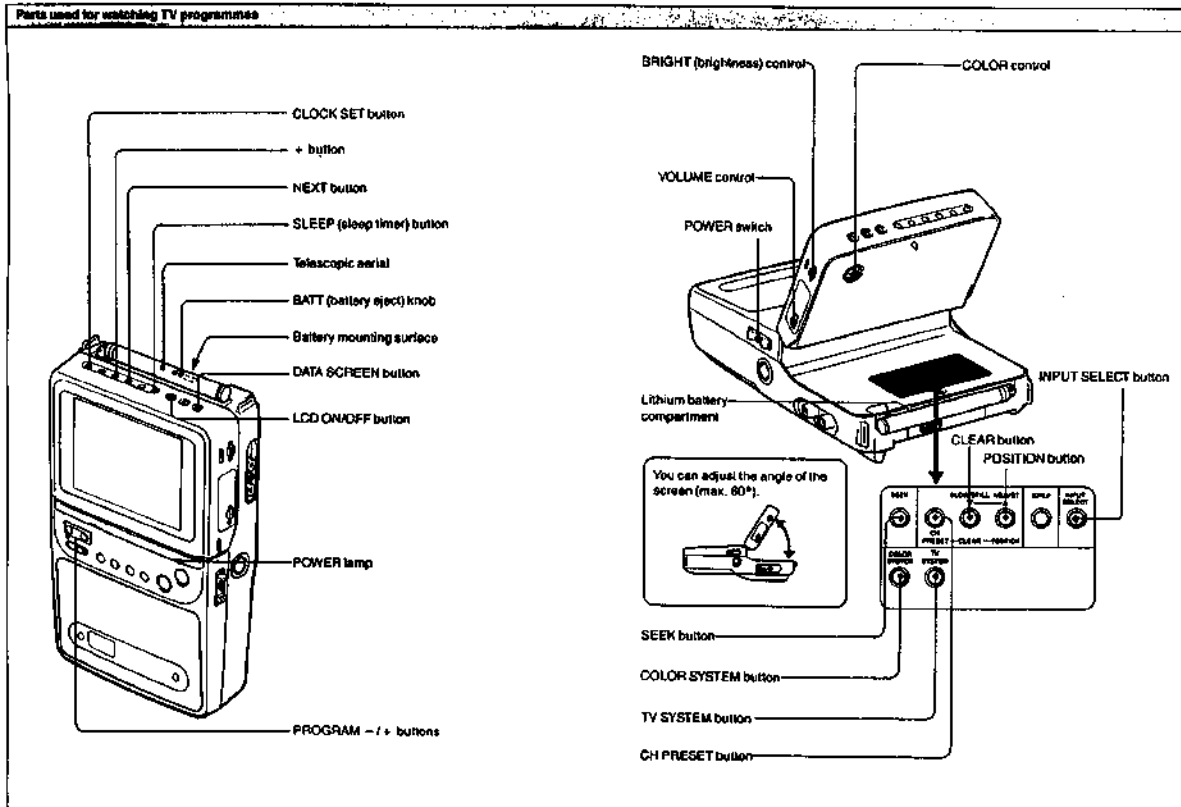

6

7

Parts used for VTR playback/recording

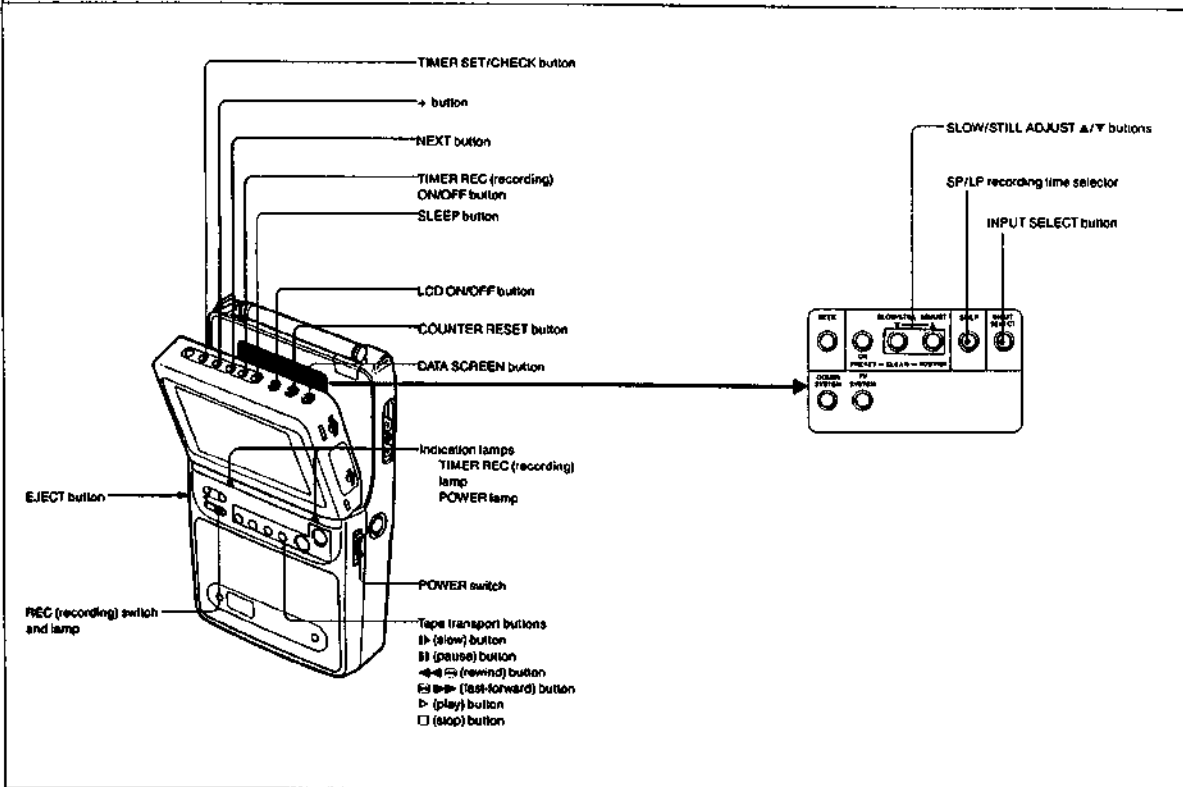


8

9

Get It Ready **Power Sources**

Parts used for connection

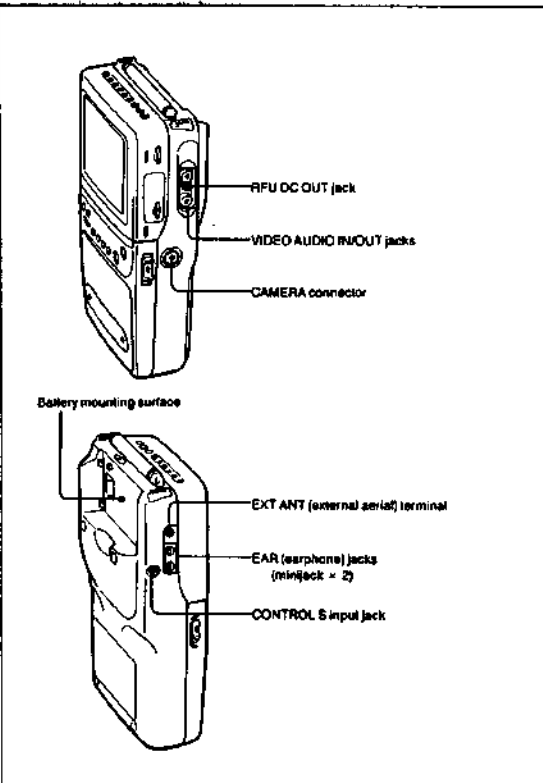

10

Selection of Power Sources

| Place | Power sources | Page |
|------------|---|------|
| Indoors | AC power adaptor AC-V30 (supplied) | 16 |
| Outdoors | Battery pack NP-66H (supplied), NP-77H or NP-77 | 12 |
| In the car | DC pack DCP-77 | 17 |
| | Car battery charger/ adaptor DC-V30 | |


The above accessories, except for the AC-V30 and NP-66H, are not supplied.

Disconnecting the power source during recording or playback operations may damage the cassette tape. If it should happen, supply the power again immediately and turn the power on.

11


Using with Battery Pack — NP-66H, NP-77H, NP-77 or NP-55

- 1 First, charge the battery pack.
Use the supplied AC-V30 AC power adaptor.

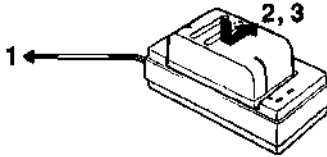


- 1 Connect the AC-V30 to a wall outlet.
- 2 Install the battery pack.
Align the right side of the battery pack with the line on the AC power adaptor.
- 3 While pressing the battery pack, slide it in the direction of the arrow.
The POWER lamp (green) and the CHARGE lamp (orange) on the AC-V30 light up.
The charging begins. (See page 13.)
When the charging is completed, the CHARGE lamp goes out.
Unplug the unit from the wall outlet and the POWER lamp goes out.

- 2 Attach the battery pack to the video TV recorder.
Align the battery pack with the white line on the video TV recorder, then while pressing, slide the battery pack in the direction of the arrow.

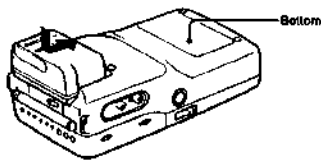

- You cannot charge the battery pack while the AC power adaptor supplies power to the unit.
- You can use the BC-55 or AC-V55 battery charger/AC power adaptor for charging an NP-66H, NP-77, NP-55 or NP-77H.

To remove the battery pack

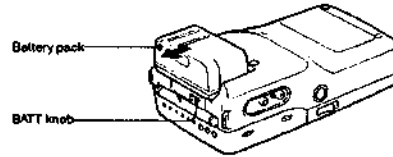

While sliding the BATT knob in the direction of the arrow, slide the battery pack as illustrated.

Charging time

| NP-66H | NP-77H | NP-77 | NP-55 |
|----------|----------|----------|---------|
| 100 min. | 140 min. | 120 min. | 60 min. |

(When AC-V30 is used.)

Operating time

A fully-charged battery pack can operate this unit as follows:

| | LCD ON/OFF | NP-77H | NP-77 | NP-66H | NP-55 |
|------------------------|------------|------------------|------------------|------------------|-----------------|
| | | | | | |
| Watching TV programmes | ON | Approx. 130 min. | Approx. 110 min. | Approx. 100 min. | Approx. 55 min. |
| VTR playing back | ON | Approx. 120 min. | Approx. 100 min. | Approx. 90 min. | Approx. 50 min. |
| TV programme recording | ON | Approx. 95 min. | Approx. 75 min. | Approx. 70 min. | Approx. 40 min. |
| TV programme recording | OFF | Approx. 140 min. | Approx. 120 min. | Approx. 105 min. | Approx. 60 min. |
| Camera recording* | OFF | Approx. 100 min. | Approx. 80 min. | Approx. 75 min. | Approx. 40 min. |

* When connecting the colour video camera CCD-G100E (not supplied).

12

Using the Battery Pack Efficiently

How to prepare the rechargeable battery packs

Have sufficient battery pack power to perform 2 or 3 times the amount of recording that you plan to do.

"Battery life" as indicated in the instruction manual or catalogue of the video TV recorder is measured by the continuous use of the video TV recorder, at room temperature, using a fully charged battery.

Fast winding or rewinding tape operations consumes much more battery power than normal tape transport operation. Consequently, battery life becomes shorter when these operations are performed frequently.

Battery life is shorter in a cold climate.

Cold climates reduce the efficiency of a battery and cause it to run out more quickly.

When to replace the rechargeable battery pack

When the battery pack is exhausted, the POWER lamp (during recording, the "BATTERY DOWN" indication on the screen as well) starts blinking slowly about five minutes before the battery pack is discharged. (When this happens, some of the indications may not appear on the screen.)

Replace the battery when the blinking changes from slow to fast, and the "BATTERY DOWN" indication starts blinking rapidly.

Turn off the power of the video TV recorder before replacing the battery. While replacing the battery, keep the cassette inside the cassette holder. When the battery has been replaced, recording can be resumed smoothly without any picture distortion.



Notes on battery exhaustion when a camera is connected

When the battery is exhausted, the tally lamp (red) displayed in the viewfinder of the camera starts blinking, and the power goes off automatically. Replace the battery pack with a fully charged one when the blinking starts.

Notes on charging

Before using the battery pack, charge it sufficiently. A brand-new battery pack is not charged. Recharge the battery pack when it is fully exhausted.

- If the operation is completed before the BATTERY DOWN indication on the screen or POWER lamp starts blinking, it is recommended that you discharge the battery pack by playing back a tape until BATTERY DOWN or POWER lamp starts blinking rapidly.
- Do not recharge the battery pack before it has been discharged completely. Repeated charging while some capacity remains will reduce the battery capacity. However, the original battery capacity can be recovered if you fully discharge and fully charge the battery pack again.

Keep the terminals clean

If the terminals (metal parts on the back) are soiled, the battery life will become shorter. When the terminals are soiled, or when the battery pack has not been used for a long time, repeatedly attach and remove it several times. This will improve the contact of the battery pack and the video TV recorder. Also, wipe the + and - terminals with a soft cloth or paper.

Notes on the rechargeable battery pack

Battery pack care

- Remove the battery pack from the video TV recorder after use, and keep it in a cool place. When the battery pack is installed on a video TV recorder, a small amount of current flows to the recorder even if the POWER switch is turned off. This causes over-discharge and, consequently, shortens the life of the battery.
- The battery pack is always discharging - even when it is not in use. Thus, the battery should be charged before each use.

How to use the switch on the battery pack

Use this switch as a reminder of the charging condition. Set the switch to the "no mark" position when the charging is completed. Set the switch to the "red mark" position when the battery has been discharged.



How many times can the battery pack be recharged

It can be fully charged and discharged about 500 times under normal temperatures. If the BATTERY DOWN indication blinks rapidly just after turning on the recorder, even though a fully charged battery pack has been installed, replace the battery pack with a brand new one.

Charging temperature

Lower temperatures require a longer charging time. Charging under a temperature ranging from 10°C to 30°C (50°F to 86°F) is recommended.

Why the battery pack heats up

While the battery pack is being charged or used, a chemical change occurs inside the battery pack which generates electric energy. Consequently, the battery pack becomes warm, but this is not dangerous.

Carrying the battery pack

If the + and - terminals are short-circuited with a piece of metal, the battery heat up abnormally. This is very dangerous. Never put an uncovered battery pack in a pocket together with a key holder or other metal object.

If the battery pack is not used for a long time (about 1 year)


Charge it again, but in this case the battery life will be shorter than normal. After several charging and discharging cycles, the battery life will recover its original capacity.

14

13

15

Using with AC Power Adaptor — AC-V30

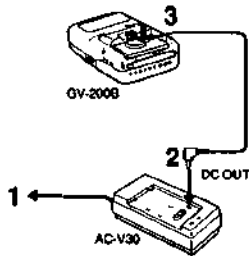

- 1 Connect the AC power adaptor to a wall outlet.
- 2 Insert the plug into the DC OUT jack.
- 3 Align the left side of the connecting plate with the white line on the video TV recorder, and while pressing it, slide in the direction of the ► mark.

To remove the connecting plate
While sliding the BATT knob, slide out the connecting plate.

Notes

- The unit is not disconnected from the AC power source as long as it is connected to the wall outlet.
- While the unit is in use, particularly during charging, keep it away from AM receivers and video equipment because it will disturb AM reception and video operation.


16

Setting the Clock

Before you set the clock, install a lithium battery. With a lithium battery installed, this unit powers the clock and keeps the last channel in memory when the power source is disconnected.

Inserting a Lithium Battery

- 1 Pull out the lithium battery compartment.

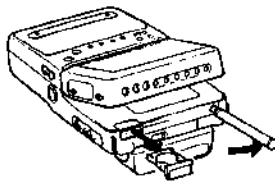

- 2 Install the supplied CR2032 lithium battery with the + side facing out.




- 3 Reinsert the compartment.

To remove the lithium battery
Press the battery upward and remove it as illustrated.



18

Using This Unit with a Car Battery — DCP-77

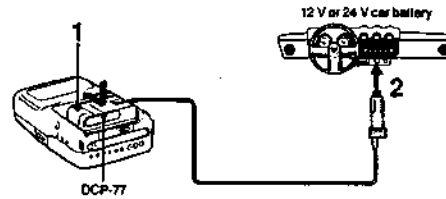

- 1 Attach the DC pack to the video TV recorder.
- 2 Connect the plug to the cigarette lighter socket.

Notes

- Connect the DCP-77 only to a car with a negative ground car batteries of 12 V or 24 V.
- Attach or remove the DC pack in the same way as the battery pack.
- Be careful not to let any metal object touch the metal projection on the battery pack. When the battery pack is not used, keep it in its case.
- Keep the video TV recorder away from the power source. If not, noise may appear on the screen.

Notes on using this unit in a car

- For your safety, do not watch the TV or operate the controls while driving.
- Avoid leaving the unit in a place with very high temperatures. If you do, it may cause distortion of the cabinet or malfunction of the unit.
- If you use this unit while your car is not in use, the car battery will be consumed. Avoid using this unit in such condition for more than 12 hours.

17

Lithium battery life

Approximately one year in normal operation.
If the lithium battery becomes weak, the 0:00 indication appears on the screen when you press the DATA SCREEN button, and the clock does not operate. In this case, replace the battery with a Sony CR2032 lithium battery. Use of another battery may present a risk of fire or explosion. After replacing the battery, reset the clock.

Cautions

- Keep the lithium battery out of the reach of children.
- Should the battery be swallowed, consult a doctor immediately.
- Before use, wipe the battery with a dry cloth to assure a good contact.
- Be sure to observe the correct polarity when installing the battery.
- Do not hold the battery with metallic tweezers, otherwise a short-circuit may occur.
- Do not break up the battery or throw it into a fire because it may explode. Carefully dispose of the used batteries.


Warning

Battery may explode if mistreated. Do not recharge, disassemble or dispose of in fire.

19

Setting the Clock

Before setting
Make sure that the power source is connected correctly.

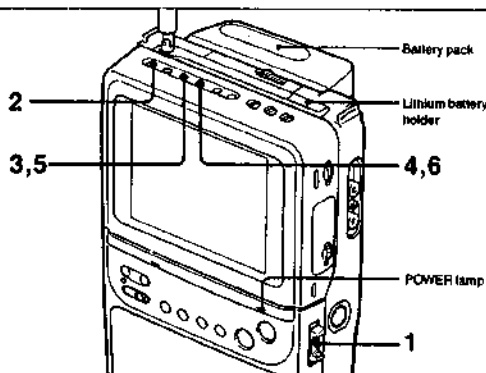


Example: Set to 13:15

1 Turn the power on.
The POWER lamp lights up.

While pressing the green button, slide the POWER switch to the left to turn the power on.




2 Press the CLOCK SET button with a pen or similar.
The screen will enter the time setting mode.
The screen becomes dark.
The next item to be set blinks.



3 Set the hour.
Press the + button repeatedly until you get the desired setting.

If you keep the button pressed, the indication will advance continuously.



4 Press the NEXT button.



5 Set the minute.


Press repeatedly until you get the desired setting.

If you keep the button pressed, the indication will advance continuously.



6 Press the NEXT button.

The clock starts.
The screen goes back to the normal brightness.



If the lithium battery is not installed and the power source is disconnected after setting the time
When DATA SCREEN is pressed and the time is displayed, "0:00" appears and the clock does not gain.

Watching TV


Presetting TV Channels

Your receiver is capable of receiving the channels listed below. Up to 60 channels can be allocated to any desired programme position.

| Channel coverage | VHF channel | UHF channel | CATV channel |
|------------------|-------------|-------------|--------------|
| PAL | E2-E12 | 21-69 | S01-S20 |
| SECAM | 5-10 | 21-69 | B-O |

To Preset Channels

Before you start presetting, pull out the telescopic aerial or connect an external aerial.

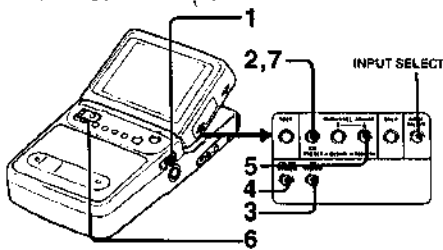


1 Turn the power on.
The POWER lamp lights up.
If the TV programme is not displayed, press the INPUT SELECT button.

While pressing the green button, slide the POWER switch to the left.




2 Press the CH PRESET button.



3 Press the TV SYSTEM button to select the TV system in your area.
The indication changes as follows:

B/G → L → I
L : France
I : UK/Ireland
B/G: Other western European countries



Note
If the TV system is not selected correctly, the sound will be poor or noise may be heard.


4 Press the COLOR SYSTEM button to select the auto mode (no indication).
However, when you select B/G in step 3, and the signal is too weak or the picture is distorted, select PAL.

Auto (no indication) → PAL




Note
When you receive the DDR SECAM, select the auto mode.


5 Press the POSITION button to select the desired programme position where the channel is to be stored.

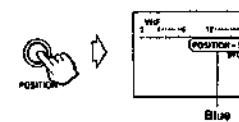

6 Press the PROGRAM +/- buttons repeatedly to select the channel to be stored.
The UHF channel range is displayed after the VHF range*.
Repeat steps 5 and 6 for other channels to be preset.

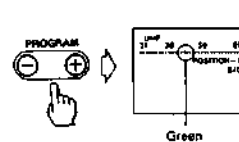

7 Press the CH PRESET button.
Channel presetting is completed.



The on-screen display disappears.

* After the channel range is displayed, wait for about 2 seconds before next operation.

Programme scanning on your video TV recorder
 When the PROGRAM + button is pressed, the channels are scanned in the following order:
 When the PROGRAM - button is pressed, the scanning order is reversed.

[B/G] VHF (E2-E4) → CATV (S01-S10) → VHF (E5-E12) → CATV (S11-S20) → UHF (E21-E69)

[C] CATV (B-F) → VHF (5-10) → CATV (K-Q) → UHF (21-69)
 CATV (G-J)

To change the order of the channel to be stored
 Follow the steps on page 22.

To Erase Channels

The erased programme position is skipped when you press the PROGRAM + / - button

Example: To erase programme position 11

- 1 Press the CH PRESET button.
- 2 Press the POSITION button and select the programme position to be erased.
- 3 Press the CLEAR button. The SKIP indication appears.

 Repeat steps 2 and 3 for other programme position to be erased.
- 4 Press the CH PRESET button. The on-screen display disappears.

To add the erased channels again
 See "To Preset Channels" on page 22.

Watching TV Programmes

- 1 Pull out the aerial fully.
 Be sure to pull out the base of the aerial.
 If you have connected an external aerial or CATV cable, be sure to fold in the telescopic aerial.
- 2 Turn the power on.
 The POWER lamp lights up.
 While pressing the green button, slide the POWER switch to the left.
- 3 If a TV programme is not displayed, press the INPUT SELECT button.
 The display will change as follows:
 TV programme → LINE
 CAMERA

- 4 Select the desired programme.
 Press + for higher-numbered programmes and - for lower-numbered programmes. The programmes will appear in numerical sequence. Press PROGRAM + / - repeatedly until you get the desired programme on the screen.
- 5 Adjust the aerial for the best reception.
- 6 Adjust the volume and brightness.

To turn off the TV

While pressing the green button, slide the POWER switch to the left. The POWER lamp goes out.

To put the aerial away

Slide in the base of the telescopic aerial first, then the center and the point.

To View a TV Programme Without Presetting Channels

When you do not know the channel number of the TV programme you wish to view or if you want to use the unit in the moving car, search for the programme as follows.

- Press the **SEEK** button.
The channel range display appears.
Each time you press the button, the receiving channels changes as follows:

VHF → UHF → normal display

Notes

 - To change the TV system, press the **TV SYSTEM** button after pressing the **SEEK** button.
 - When **SG** is received, press the **COLOR SYSTEM** button and select **PAL**, if necessary.
- Press the **PROGRAM + / -** buttons to select the channel.

After selecting the channel, the channel range display goes out after a few seconds.

28

Adjusting the Picture and Sound

Adjust the picture and sound to your preference.

To adjust the picture

COLOR Adjust the colour intensity. (Set to the center for standard level.)

for more colour intensity for less colour intensity


BRIGHT Adjust the brightness.

for less brightness for more brightness

30

To clear the screen

Press the **LCD ON/OFF** button.
The screen will be cleared.

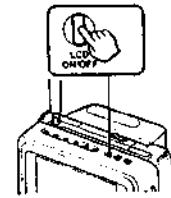

It is recommended that you clear the screen when you view the playback picture with another TV or monitor. The picture noise of the TV or monitor is reduced. Battery life will also last longer if you use the unit with the picture turned off. To restore the picture on this unit, press **LCD ON/OFF** again.


Note

When no picture is displayed and the volume is low, or the earphones are connected, the unit seems to be turned off though it is not. Be sure to turn off the unit with the **POWER** switch when it is not in use.

To display the programme number

Press the **DATA SCREEN** button.

Press the **DATA SCREEN** button again to turn off the display.
When the **SEEK** button is pressed, the VHF or UHF channel range is displayed instead of the programme number. The display is cleared after a few seconds.

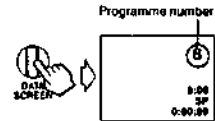

"Last channel" memory function

- While you are watching TV programmes, if the power source is disconnected or the battery pack becomes exhausted, the unit turns off with the last channel being memorized. When you turn on the unit again, the last channel appears on the screen. The lithium battery must be installed for this function.
- The last channel memory function also works when the TV signal is cut off, for example, when you go through a tunnel in a moving car.
- If the lithium battery becomes exhausted but the power source is connected, the last channel is memorized.

29

Using the SLEEP Timer

You can set the unit to turn off automatically after a certain amount of time. You can set the turn-off time as follows. This timer activates while viewing a TV programme, video playback, or while recording.


Each time you press the **SLEEP** button, the display will change as follows:

... 0:30 1:00 1:30 2:00 2:30
5:00 4:30 4:00 3:30 3:00

Example: To turn off the TV after 2 hours

- Make sure the clock is set correctly (page 18).
No indication will appear on the screen if the clock is not set.

- Select the desired time interval by pressing the **SLEEP** button.



The screen becomes dark.
The normal display will be restored after a few seconds.

The TV will be turned off after 2 hours.
The procedure is the same for tape playback and recording. The tape will stop running after the selected time interval.

To cancel the SLEEP timer


Press the **SLEEP** button repeatedly until the "... " display appears.
The **SLEEP** timer can also be canceled by turning off the unit with the **POWER** switch.



To check the remaining time

Press **SLEEP** once.
The remaining time is displayed.
The indication is cleared after a few seconds.

The unit will be turned off after about 1 hour and 52 minutes.




Note
When you use the unit with rechargeable batteries, the unit may turn off before the selected time because the batteries are exhausted.

31

Inserting a Cassette

Make sure that the power source is connected to the unit.

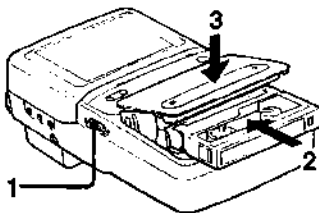

To insert a cassette

- 1 Open the cassette holder with the EJECT button.
While pressing, slide the button to the right.
- 2 Insert the cassette with the window side facing up.
- 3 Close the cassette holder.

When you slide the EJECT button, power is supplied and the cassette holder opens even if the power is turned off. When the cassette holder opens, the power is turned off automatically. Slide POWER if you want to continue operation after closing the cassette holder.

To eject a cassette


Slide the EJECT button. Make sure the tape is not running.

Note

Do not open the cassette holder while the unit is in the vertical position. If you do, the cassette may fall out of the holder and be damaged.

To Prevent Accidental Erasure

When a new recording is made on a previously recorded tape, the previous recording is automatically erased. To protect a recording, slide the red safety tab out to cover the opening.

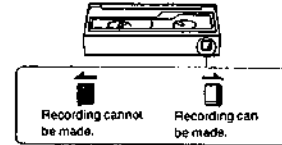

Notes on opening and closing the cassette holder

- Do not insert your finger into the cabinet when the cassette holder is open.
- Be careful not to get your finger caught in the cassette holder.


Notes on the cassette

- Store cassettes in their cases when they are not being used and keep them in an upright position to prevent intrusion of dust and uneven winding.
- Always insert the cassette in the correct position.
- Never insert anything in the small holes on the rear of the cassette.
- Remove the cassette from the video TV recorder when not in use.

32

Recording TV Programmes

You can record a TV programme while viewing it. For optimal picture and sound quality, connecting an external aerial is recommended. (See page 45.)

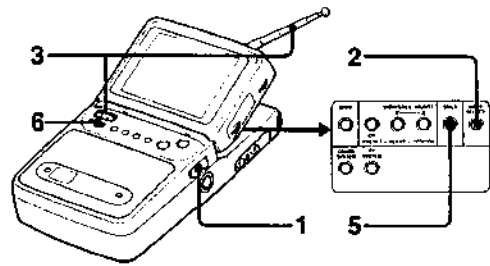

- 1 Turn the power on.
The POWER lamp lights up.
While pressing the green button, slide the POWER switch to the left.
- 2 If the TV programme is not displayed, press INPUT SELECT button.
The display will change as follows:
TV programme → LINE
← CAMERA ←

When the tape is recorded to the end
The tape stops automatically, but the unit is not turned off. If you are not going to continue operation, turn the power off with the POWER switch.

About the recorded sound
The VOLUME control setting has no effect on the recording level.

- 3 Select the desired TV channel. (See page 27.)
Adjust the telescopic aerial for the best reception. (See page 27.)
- 4 Insert the cassette. (See page 32.)
- 5 Select the recording mode, SP or LP.
The recording time of a cassette in the LP mode is twice as long as that in the SP mode. For better picture and sound quality, set to SP.
- 6 Slide the REC switch to the right.
Recording starts.

To stop recording for a moment
Press II.

To resume recording
Press II again.
(If you do not press the II button again for about 5 minutes, the pause mode will be released automatically and the unit will stop. This is to protect the video heads.)

To stop recording
Press □.

Changing the channel during recording

Set the unit in the recording pause mode and then select another channel. You cannot watch another programme while recording.

When recording from the beginning of a tape

Run the video TV recorder for about 15 seconds at the beginning of a cassette before recording. This will prevent missing the starting point or having any previously recorded pictures appear when playing back on another video cassette recorder.

33

34

35

Recording/playback time

You can select two tape speeds with the SPLP selector. The recording time in the LP mode is twice as long as that in the SP mode. For better picture and sound, recording in the SP mode is recommended. During playback, the mode in which the tape was recorded is selected automatically.

Cassettes and their recording time

There are two formats for 8mm video recording, PAL and NTSC. Video-cassette tapes are made to correspond to one of these formats. Use PAL format cassette tapes for this unit. You will find "PS" on the package of PAL cassettes. In some countries, however, only NTSC format cassette tapes with "PS" on the packages are available. If a NTSC format cassette is used with this unit, the actual recording time may differ from the recording time indicated on the cassette.


Note

If you record with this unit on a tape that has been recorded in the PCM mode, and if you play back this tape on a VTR with PCM function, the sound may be cut off occasionally. In this case, set the audio monitor switch of the VTR to the standard position.

To stop recording automatically after a certain time — Quick timer

Press the SLEEP button during recording. You can leave the unit function when you go to bed or when you go out, etc. The unit will be turned off automatically at the preset time. For operation, see page 31.

Are you having trouble?

| Symptom | Possible cause | Correction |
|---|---|---|
| "CASSETTE" indication is displayed when you slide the REC switch. |  The safety tab on the cassette is slid out. | Slide the tab in or use a new cassette. |
| | The tape is at its end. | Rewind the tape or use a new cassette. |
| | No cassette is inserted. | Insert a cassette. |


To Start Recording at the Desired Time

A TV programme within 24 hours can be preset for timer-activated recording. For better recording of picture and sound, use of an external aerial is recommended. See page 45.


Before setting the timer

- Make sure that the power is supplied. (Is the battery pack fully charged? For long recording, use of the AC power source is recommended.)
- Set the clock (see page 18.)
- Insert a cassette (see page 32.) Make sure that the safety tab is slid in.

Example: To record the programme from 20:30 to 21:45.

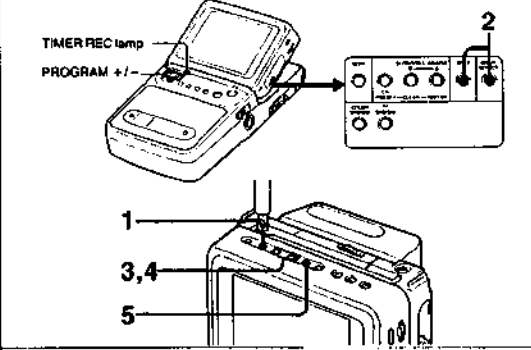

1 Press the **TIMER SET/CHECK** button. The screen becomes dark, programme number

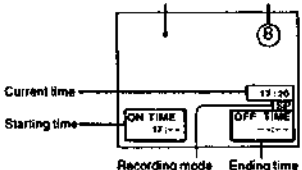

Input mode/ programme number

Current time


Starting time

Recording mode

Ending time

Using the Tape Counter


During recording or playback, the digits on the counter indicate the actual recording or playback time. By noting the counter reading of a particular point, you can easily find that point later by referring to the tape counter.

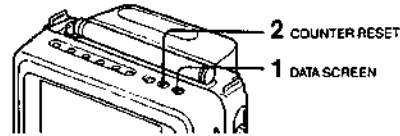

1 Press **DATA SCREEN** so that the counter is displayed.



2 During recording or playback, press **COUNTER RESET** at the point you later want to locate. The counter will be set to 0:00:00.

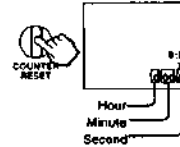

Use the counter to find this point later.

Notes


- The counter reading and the point on the tape may not correspond exactly. Use the counter as a guide.
- There will be a time lag of several seconds on the counter reading after repeated fast-forward and rewind operations.
- There will also be a time lag of several seconds when a tape recorded in both the LP or SP modes or a tape having a blank portion between the recorded portions is played back.

2 Select the input mode with the **INPUT SELECT** button, and the recording mode with the **SPLP** button. For TV programme recording, select the desired channel by pressing the **PROGRAM +/-** buttons.



3 Set the time for the recording to begin.

1) Press the **+** button to set the hour. Each time you press the **+** button, the hour indication increases by one. If you keep the button pressed, the indication will increase continuously.



2) Press the **NEXT** button.




3) Press the **+** button to set the minutes. Each time you press the **+** button, the minutes indication increases by one. If you keep the button pressed, the indication will increase continuously.




4) Press the **NEXT** button. The starting time is now set.




4 Set the time for the recording to stop.
 1) Set the hour with the + button.

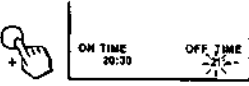


2) Press the NEXT button.

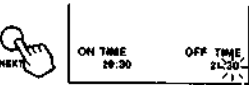

3) Set the minute with the + button.




4) Press the NEXT button.
 The ending time is now set.
 The on-screen display disappears.



If you have made a mistake
 Turn the power off, then on again.
 Repeat steps from 1 to 4.

5 Press the TIMER REC ON/OFF button.
 The power is turned off and the TIMER REC lamp lights up (timer-activated recording standby mode). The recording starts automatically at the preset start time and the power is turned off at the preset end time.



Notes

- During timer-activated recording, both picture and sound will be muted. To listen to the sound and watch the picture, press the LCD ON/OFF button.
- When you press the TIMER REC ON/OFF button, the "CASSETTE" indication will appear if the safety tab on the cassette is slid out or if no cassette is inserted.

40

To stop the timer-activated recording

Press the TIMER REC ON/OFF button again.
 The TIMER REC lamp goes out.

To check the setting

Press the TIMER SET/CHECK button while the TIMER REC lamp is lit.
 The power is turned on and the starting and ending time is displayed for a few seconds.



To change the timer setting after completing the setting

Press the TIMER REC ON/OFF button to cancel the timer recording mode, then turn the unit on and set the timer again.

To set the timer while the tape is running

You can set only the starting and ending time during playback or recording. After stopping the tape, set the recording mode (SP/LP) and programme number, and then press the TIMER REC ON/OFF button.

If a power interruption occurs when the unit is connected to the AC power source


Recording stops. Recording starts again after the power is resupplied. When a power interruption occurs during the timer-activated recording standby mode and the power is resupplied, the timer settings will not be affected as long as the lithium battery is installed.

To record to the end of the tape

Set the starting and ending time the same. When the tape reaches the end, recording will stop and the power is turned off.


41

Playing Back the Recorded Tapes

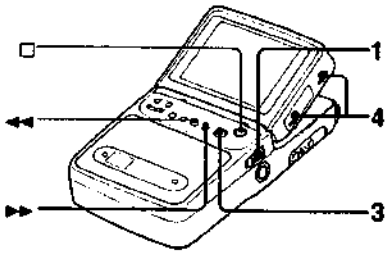


1 Turn the power on.
 The POWER lamp lights up.

While pressing the green button, slide the POWER switch to the left.




2 Insert a recorded tape (see page 32.)

3 Press > to start playback.



4 Adjust the volume and the brightness.

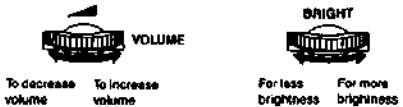

To stop playback Press the □ button.
To rewind the tape Press the <-> button.
To advance the tape Press the >-> button.

42

To rewind the tape and play it back automatically — Auto play

While pressing the <-> button, press the > button.
 The "AUTO PLAY" indication appears.

To clear the screen

Press the LCD ON/OFF button. To restore the picture, press the LCD ON/OFF button again.

To adjust the picture

Adjust the BRIGHT and COLOR controls (see page 30.)

To stop playback at the desired time

Use the SLEEP function.
 You can have the unit turned off at the preset time. (see page 31.)

43

| Various Playback Modes — CRYSTAL-CLEAR still/slow/picture search | | | |
|---|-----------------------|--|----------|
| To stop the tape for a moment — Still picture | During playback | | STILL |
| To view the slow playback picture | During playback | | SLOW 1/5 |
| To locate a particular point while viewing the picture — Picture search | During playback | | (FF) |
| | During playback | | (RF) |
| To view the picture at high speed — FR picture search | While rewinding | | (FF) |
| | While fast forwarding | | (RF) |

* After normal playback is resumed, the R.F. button will not function for about 5 seconds.

If streaks appear in the still and slow playback mode

Adjust the picture as follows:

- 1 Play back the slow motion picture.
- 2 Press the SLOW/STILL, ADJUST \uparrow , \downarrow buttons to adjust the picture so that the noise does not appear.



To adjust the upper portion of the picture, press the \uparrow button. To adjust the lower portion of the picture, press the \downarrow button. The still picture is adjusted at the same time.

When the picture picture is viewed on another TV or monitor

The horizontal bands appear in the still, slow, picture search and FR picture search modes. Noise appears in the still and slow modes. To reduce the horizontal bands, press LCD ON/OFF button to mute the picture of this unit.

Notes on the CRYSTAL-CLEAR still/slow/picture search on LCD

Noiseless pictures can be viewed in the still, slow and picture search modes, owing to the characteristics of the liquid crystal.

Connecting Other VTRs or Monitors

Notes on the VIDEO/AUDIO IN/OUT Jacks

The VIDEO/AUDIO IN/OUT jacks are automatically set to the input or output jacks according to the operating condition of the unit.

Refer to the following diagram:

| Mode selected with INPUT SELECT button | Stop or recording mode | Playback mode |
|--|------------------------|---------------|
| TUNER (TV programme) | output | output |
| LINE * | input | output |
| CAMERA | output | output |

* When the LINE mode is selected with INPUT SELECT, the INPUT or OUTPUT indication appears with LINE.




Note

When the LINE OUT jacks of other equipment are connected to the VIDEO/AUDIO IN/OUT jacks on this unit, and signals are output from the jacks of the other equipment to this unit, the picture and sound of the other equipment may be disturbed. Turn off the power of this unit or disconnect the connection between this unit and another equipment.

Connecting Other Equipment:

Connecting an Outdoor Aerial

If you cannot obtain satisfactory reception with the telescopic aerial, or when recording TV programmes, use an outdoor aerial.

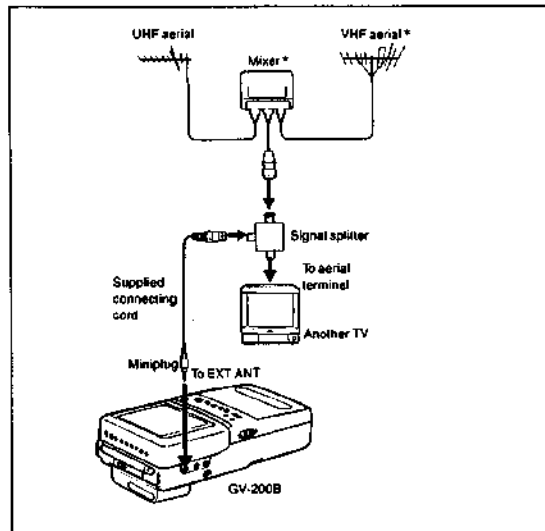


* The mixer and the VHF aerial are not necessary in the United Kingdom as only UHF is available.

Notes

- Before connecting the aerials, turn off the unit.
- Make connections firmly. A loose connection may cause a distorted picture.
- When using the unit in a car, use a commercially available car aerial, etc. For details, refer to the instruction manual of the car antenna.


Camera Recording — Controlling from the Camera

By connecting a Video Camera CCD-G100E or CCD-G100STE (not supplied), you can control the recording from the camera. You can hold the camera and keep this unit in a carrying case while recording. For details, refer to the instruction manual of the video camera.

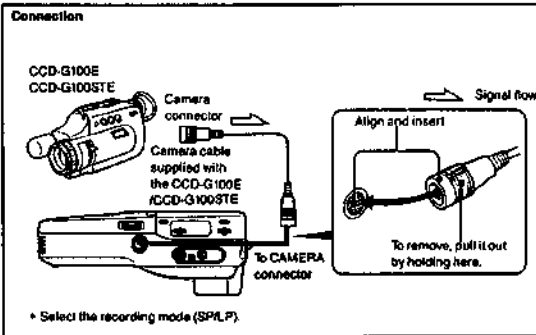

* Select the recording mode (SP/LP).

Recording with CCD-G100E

- 1 Set the POWER switch of this unit to CAMERA. While pressing the green button, slide to the right. 
- 2 Insert the cassette
- 3 Set the STANDBY switch of the camera to STANDBY. The power of this unit is turned on, and the POWER lamp lights up. To have the picture on the screen of this unit, press LCD ON/OFF button.
- 4 Start recording. Press the START/STOP button of the camera.


To stop recording for a moment
Press the START/STOP button. Press it again to start recording.

To stop recording
Set the STANDBY switch to LOCK.

For CCD-G100STE
Operation is the same as CCD-G100E. The sound is recorded in monaural.

For CCD-G1E
You can connect CCD-G1E to this unit. However, you can control only recording/recording pause mode switching on the camera. Control the power on/off and recording stop operations on GV-200B.

Playing back the newly recorded pictures

- 1 Turn the power on of this unit. The POWER lamp lights up. While pressing the green button, slide to the left. 
- 2 Press <←> button of this unit to rewind the tape.
- 3 Press □ button of this unit.
- 4 Press > button of this unit.

Caution
Do not operate this unit for a long time when it is in a carrying case like the one supplied. Internal heat build-up may occur which can cause this unit to malfunction.


When the POWER switch is set to CAMERA, the operable buttons are: POWER switch, EJECT button, LCD ON/OFF button, DATA SCREEN button, COUNTER RESET button, and SP/LP button.

48




49

Camera Recording — Controlling from This Unit

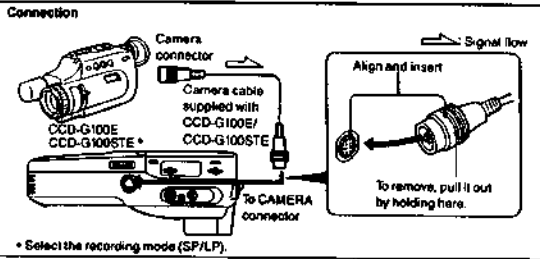By connecting the video camera CCD-G100E or CCD-G100STE (not supplied), you can record with this unit while using the camera in a distant place. For details, refer to the instruction manual of the video camera.



Recording

- 1 Turn the power on of this unit. The POWER lamp lights up. While pressing the green button, slide the POWER switch to the left. 
- 2 Press the INPUT SELECT button of this unit to display "CAMERA" on the screen. The picture to be recorded appears on the screen. If the focus or colour need adjustments, adjust them on the camera. To have the picture disappear, press the LCD ON/OFF button. 
- 3 Slide the REC switch of this unit. Recording starts. 

To stop recording for a moment
Press □ button of this unit.

To stop recording
Press □ button of this unit.

* You can also use the CCD-G1E.

Playing back the newly recorded pictures

- 1 Press <←> button to rewind the tape.
- 2 Press □ button.
- 3 Press > button.

Recording with a camera from a distant place

Use the optional pan-tilt HVR-200 for camera recording from a distant place, a maximum distance of 5m.

To listen to the sound that is being recorded
While recording, no sound is heard from the speaker. Connect the supplied earphone to the EAR jack to listen to the sound.



To start camera recording at the desired time
You can record a desired scene at a designated time, for example, a train passing by at a certain time. To set the timer, see page 38. The recording will start automatically at the time you set.

50

51

Using This Unit as an 8mm Video Camera Recorder Monitor


With the following connection, you can view pictures being recorded by the connected video camera recorder. Also you can view the playback pictures from the video camera recorder on this unit.

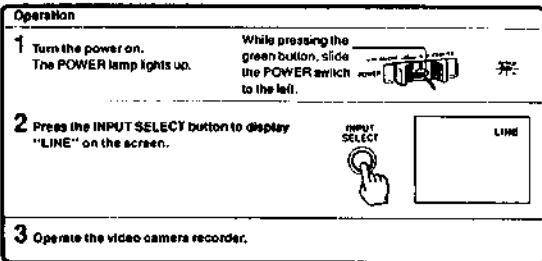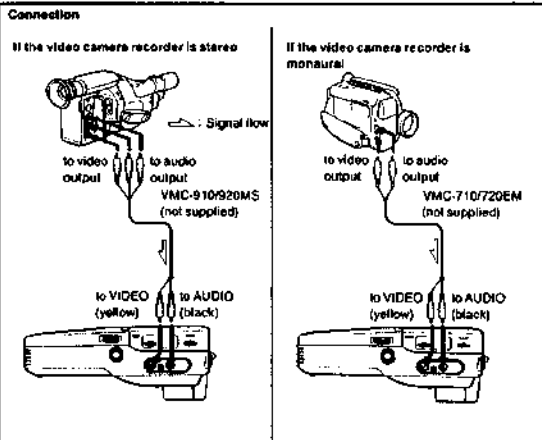

52

When connecting both a video camera recorder and a video camera


Set each unit to different angles, then, using the INPUT SELECT button, switch the picture to be recorded on this unit.

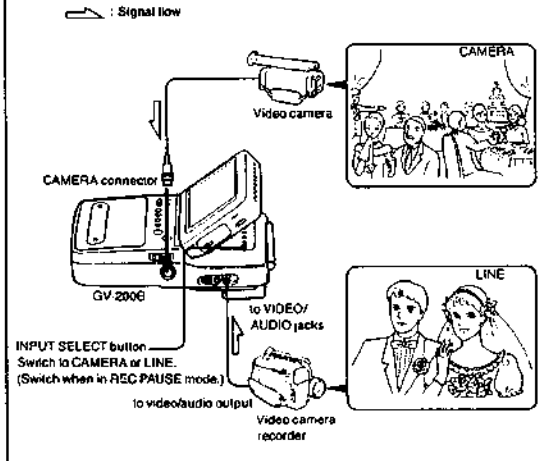

53

To Connect Another TV or Colour Monitor

If you connect this unit to another TV or colour monitor, you can view the playback pictures or the selected TV programme on a larger screen and listen to the dynamic sound. In this case, clear the screen of GV-2008 by pressing the LCD ON/OFF button to reduce horizontal bands and noise in the picture of the TV or colour monitor during various playback modes.

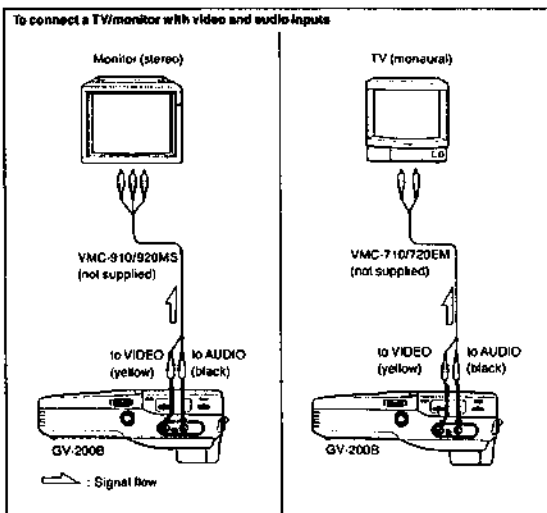


Note
To monitor the playback picture or the selected TV programme on another TV or colour monitor, use one based on the PAL colour systems.

54

To connect a TV without video and audio inputs

Use the RFU-89EKA RFU kit (not supplied).

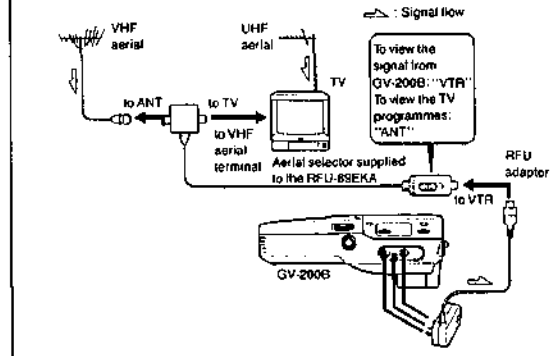


Note on the RFU-89EKA RFU kit

The RFU-89EKA includes the following accessories:
 — RFU adaptor (1)
 — Aerial selector (1)

Channel for VTR

To view the playback picture of this unit, set the RFU unit selector of the RFU adaptor according to your TV system (G or I), then turn on the TV and select a programme position that is not used to receive a TV station.

To connect the RFU adaptor

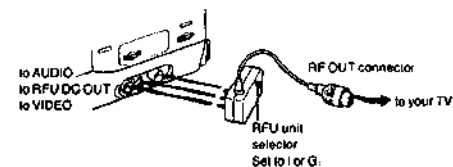


55

Editing Tapes

You can edit tapes by connecting another VTR (8mm, Beta or VHS format) with video/audio inputs.

To Edit from Another VTR to This Unit

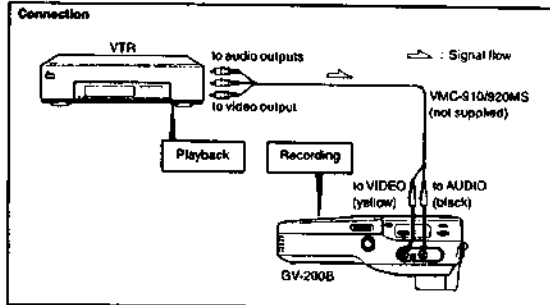

If the VTR to be connected has a monaural audio output only, use a commercially available connecting cord such as the VMC-710/720EM.

56

Operation

- Turn the power on. The POWER lamp lights. While pressing green button, slide the POWER switch to the left.
- Insert the cassette.
- Press the INPUT SELECT button so that the "LINE" indication appears.
- Select the recording mode (SP/LP) by pressing the SP/LP button.
- Play back the tape on another VTR and press the II (PAUSE) button at the point you want to start playing back.
- Set this unit in the recording pause mode.
- Release the II (PAUSE) buttons on both units.
- After editing is completed, press the □ (STOP) buttons on both units to stop recording.


Notes

- When the stereo recorded tape is played back on the other VTR, the mixed sound of the left and right channels are recorded on this unit.
- When the bilingual recorded tape is played back on the other VTR, select the sound to be recorded with the playback VTR.

57

To edit from the VTR equipped with the CONTROL S output


Connect the CONTROL S input jack on this unit and the CONTROL S output jack on the other equipment. Playback/pause on the other VTR and recording/pause on this unit can be operated simultaneously.

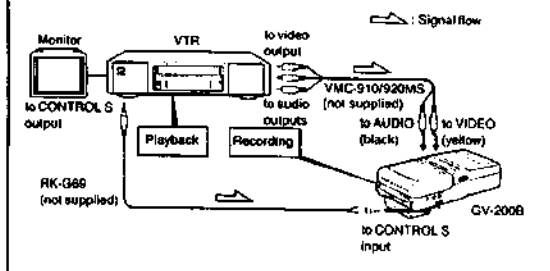

58

To edit with the editing controller

By connecting the editing controller, the recorder and player can be operated easily with the controller.

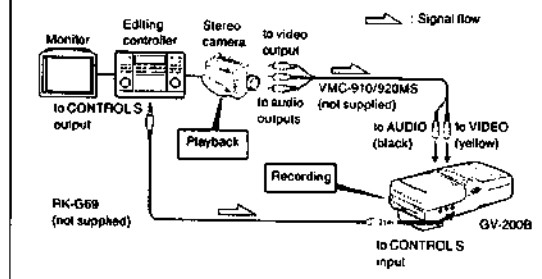


To edit with the wireless remote control kit (not supplied)

When the receiver of the wireless remote control kit is connected to the CONTROL S jack on this unit, it can be controlled remotely. This set up makes it convenient to use this unit as the tuner of a colour monitor.

When the unit is not in use, remove the receiver. If the receiver remains connected, a very small amount of electric current flows.

For details, please read the instruction manual of the wireless remote control kit.

59

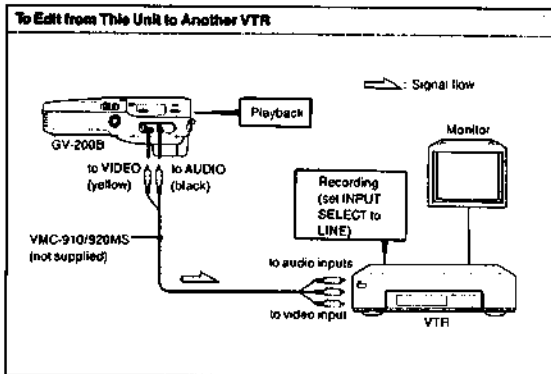

If the VTR to be connected has a monaural audio input only, use a commercially available connecting cord such as VMC-710/720EM.

60

Maintenance

Video Head Cleaning

To ensure a clear picture, clean the video heads periodically. If playback pictures are noisy or hardly visible, the video heads may be contaminated. In this case, clean the video heads with the Sony VB-25CLH cleaning cassette (not supplied) according to the instructions.

Caution

Do not use commercially available wet-type cleaning cassettes. They may damage the video heads.

Note

If the VB-25CLH cleaning cassette is not available in your area, consult your Sony service facility.

If the Video Head is Damaged

When playback pictures are not clear even after using the cleaning cassette, the video head may be damaged. In this case, the video head needs to be replaced with a new one. Consult your Sony service facility for replacing the video head.

Note on the Built-in Lighting System

A built-in lighting system is assembled inside the liquid crystal screen of this unit. The life of the small fluorescent tube used for this built-in lighting system runs out over a period of use. If the lamp becomes dimmer or goes off immediately after you turn it on, even with new batteries, replace the lamp with a new one. To replace the lamp, consult the dealer where you purchased the unit, or a Sony service facility. The expected life of the small fluorescent tube is about three years if this unit is used for an hour each day. When you use this unit in a cold environment, the fluorescent tube will be dimmer at first. As soon as the temperature of the tube rises, it will regain its original brightness.

Notes on the LCD

- Do not push the display forcibly.
- Do not operate the unit where the temperature is below 0°C (32°F) or above 40°C (104°F).
- If the unit is used in a cold place, a residual image may appear on the screen. This is not a malfunction of the unit.
- Constant bright points of light (red, blue, or green) may appear on the screen. This is not a malfunction of the unit.



Others

Precautions

Operation

- Operate the unit on 6.0 V (battery pack)/7.5 V (AC power adaptor)/6.5 V (DC pack DCP-77).
- For DC or AC operation, use the accessories supplied or recommended in this manual.
- Should any solid object or liquid fall into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.
- Avoid rough handling or mechanical shock to the unit.
- Do not apply excessive force to the LCD.
- Remove and store video cassettes after recording or playback.
- Do not wrap up the unit and operate it because heat may build up internally.
- Avoid using and storing the recorder in the following locations:
 - Locations susceptible to vibration
 - Locations exposed to strong magnetic fields
 - Locations near TV or radio transmitters where strong radio waves are generated
- Do not place the unit on the sand.

Care

- When the unit is not used for a long period of time, periodically turn on the power, operate the recorder and play back a tape for about three minutes.
- Clean the recorder body with a dry, soft cloth, or a soft cloth lightly moistened with a mild detergent solution. Do not use any type of solvent which may damage the finish.

61

Notes on Moisture Condensation

If this unit is brought directly from a cold place to a warm place, moisture may condense inside the unit or on the surface of the tape. If this happens, the tape may stick to the head drum, damaging both the tape and the unit. Although this unit is furnished with a moisture sensor to prevent possible damage from condensation, do not leave the tape inside the unit.

If Moisture Condenses inside the Unit

The "DEW" indication appears on the screen. In this case, no button will function except the EJECT button. (However, if you have been watching a TV programme, you can continue to do so.) Eject the cassette, turn off the unit and leave the cassette holder open at least for an hour.



The unit can be used again if the DEW indicator does not appear when one of the tape transport buttons is pressed.

62

63

Using Your Video TV Recorder Abroad

If you prepare fully charged battery packs and the supplied AC power adaptor (which can be used in all areas with a local power supply of 100 V-240 V), you can use your recorder in any country.

Each country has special TV colour broadcast and electricity systems. This unit is designed to record and play back using the PAL and SECAM (transferred to PAL) colour video signals. Recording and playback of video sources based on other colour systems cannot be guaranteed.

PAL system countries:







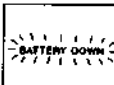
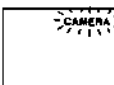
Australia, Austria, Belgium, China, Denmark, Finland, Great Britain, Holland, Hong Kong, Italy, Kuwait, New Zealand, Norway, Portugal, Singapore, Spain, Sweden, Switzerland, Thailand, West Germany, etc.

SECAM system countries:

France, DDR, etc.


List of On-Screen Displays

The following indications appear on the screen indicating the operating condition and cautions

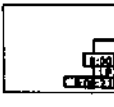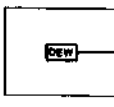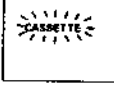
| Indication | Meaning (reference page) | Indication | Meaning |
|---|---|---|--|
|  | Programme number (page 27) |  | Tape transport operation (pages 42-44) |
|  | Current time (page 35) Recording mode (page 37) Counter (page 37) |  | Moisture condensation (page 53) |
|  | Caution for the cassette (page 36) |  | Input from VIDEO/AUDIO jacks (page 46) |
|  | Battery is exhausted (page 14) |  | Input from CAMERA connector (page 50) |

SECTION 2 DISASSEMBLY


2-1. REMOVAL OF CABINET (UPPER) ASSY

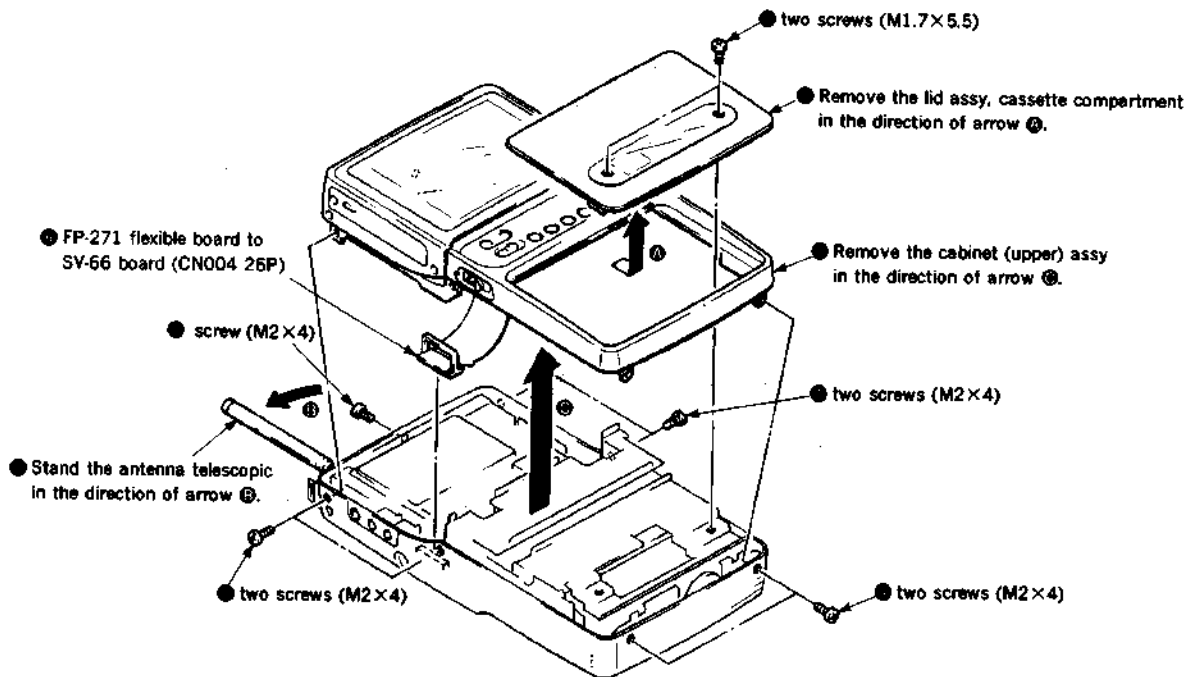


2-2. REMOVAL OF SC UNIT

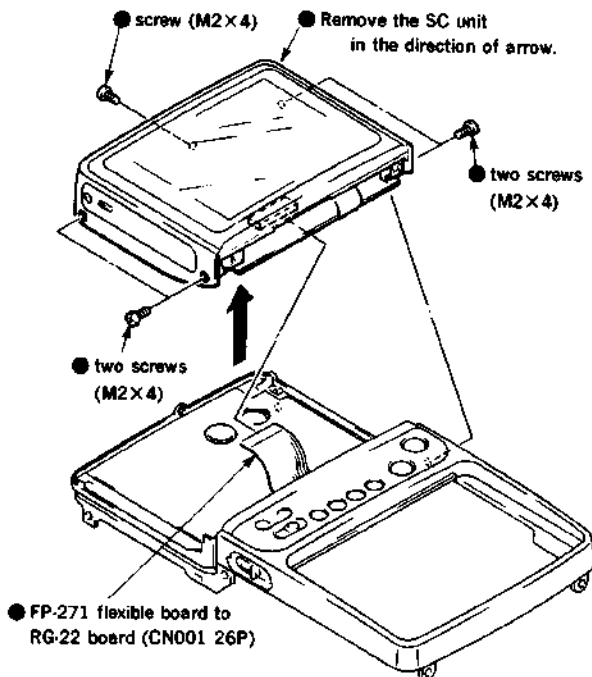


2-3. REMOVAL OF LIQUID CRYSTAL DISPLAY MODULE

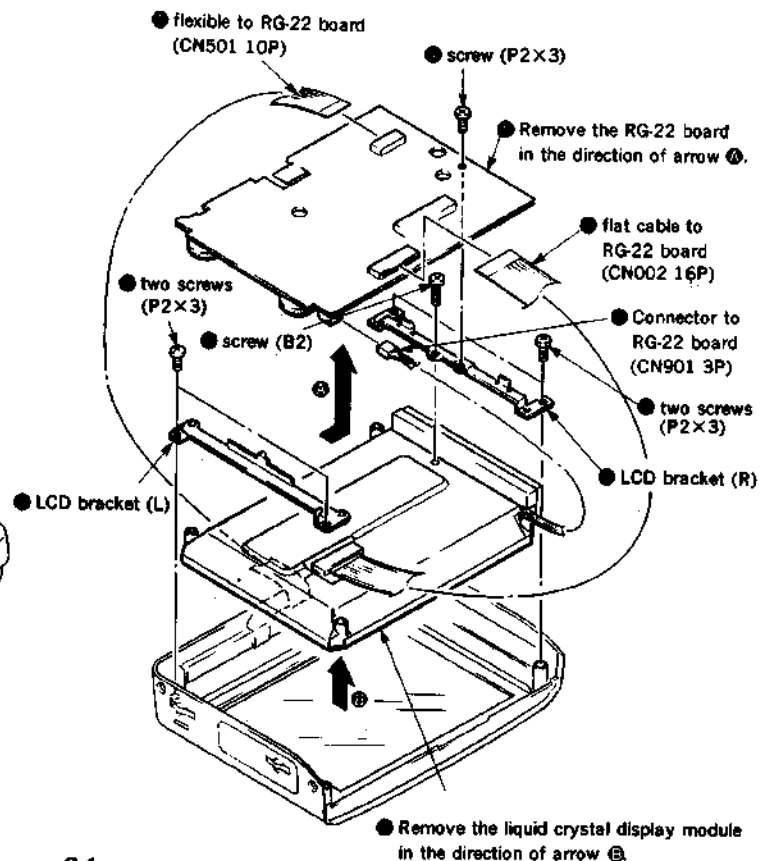


2-4. REMOVAL OF CONTROL SWITCH BLOCK

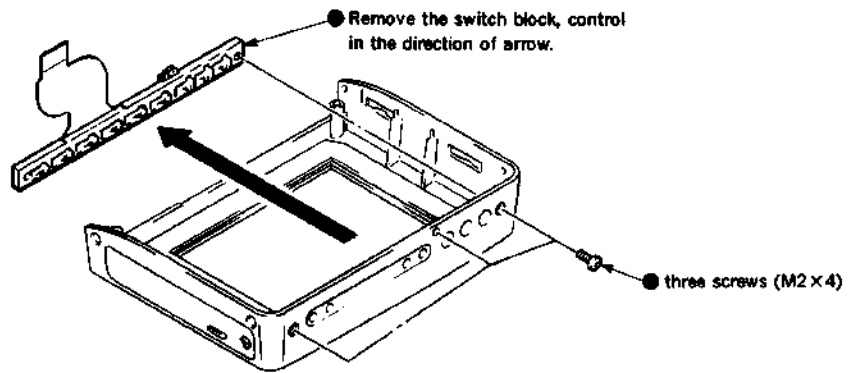


2-5. REMOVAL OF CASSETTE COMPARTMENT ASSY

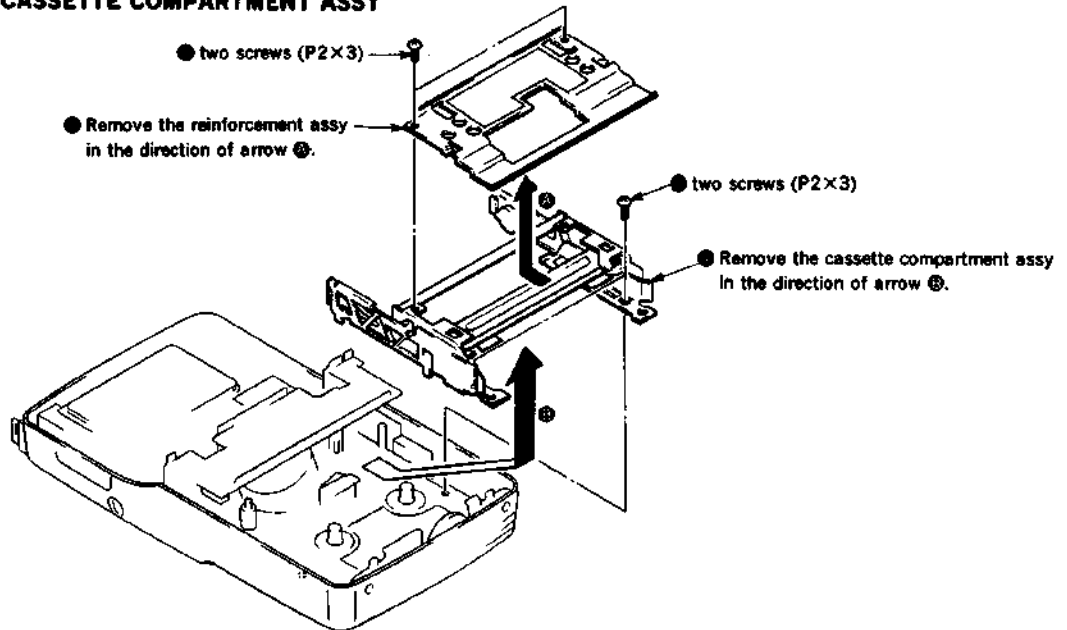


2-6. REMOVAL OF TU-126 BOARD

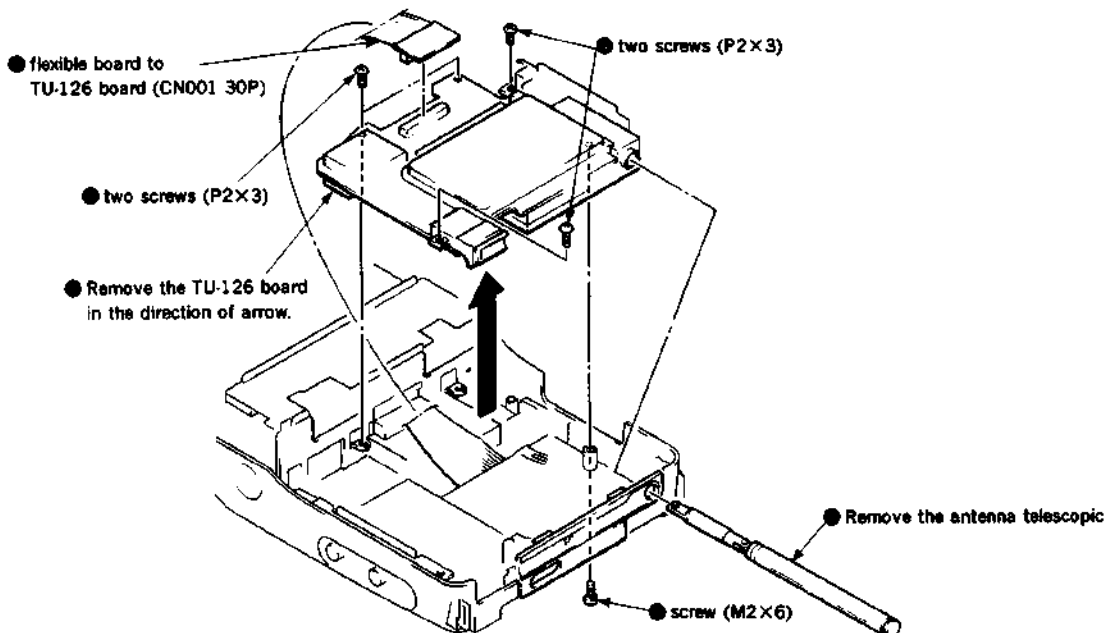


2-7. REMOVAL OF SB BLOCK AND LITHIUM BATTERY

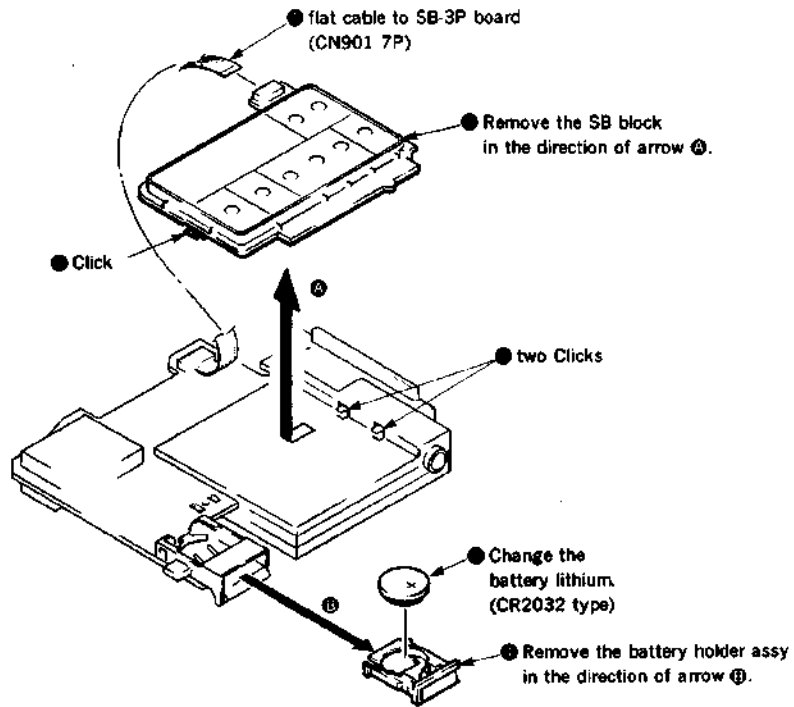

2-8. REMOVAL OF DC-22P BOARD

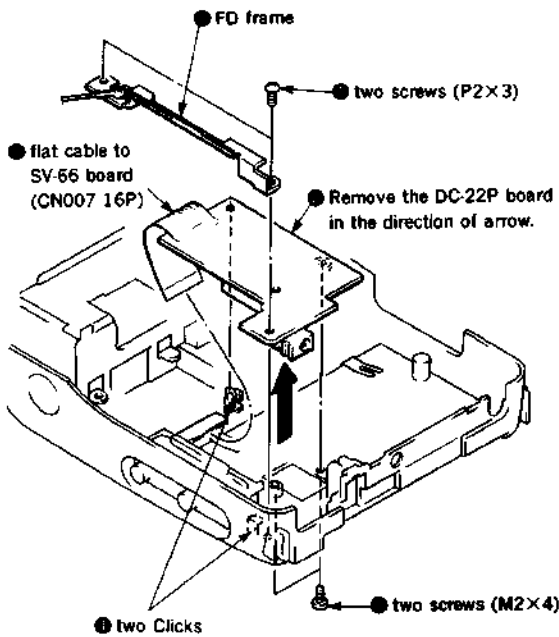

2-9. REMOVAL OF MECHANISM DECK

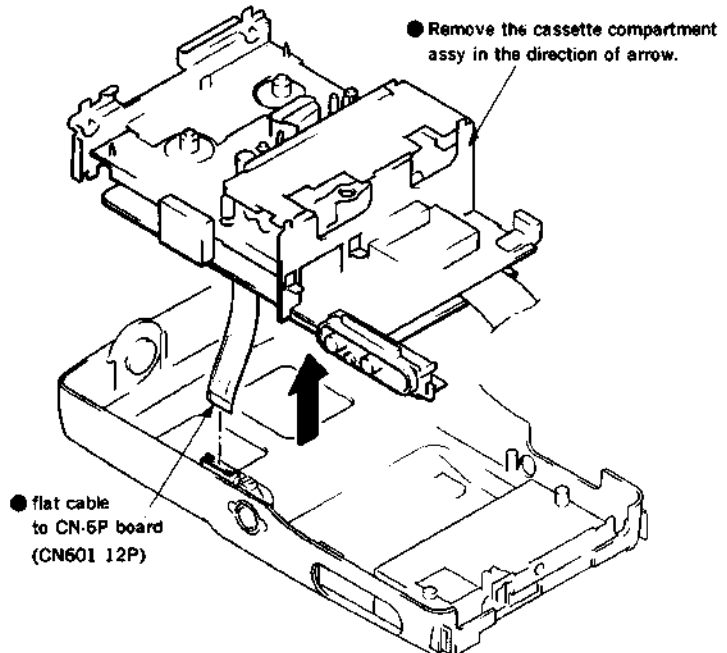

2-10. INTERNAL VIEWS

— UPPER —

Table assy, reel, supply
X-3728-851-1

| | |
|-----------------------|--------------|
| (DGU-64A-R) Drum Assy | A-7048-405-A |
| (DGR-64-R) Drum Upper | A-7049-343-A |

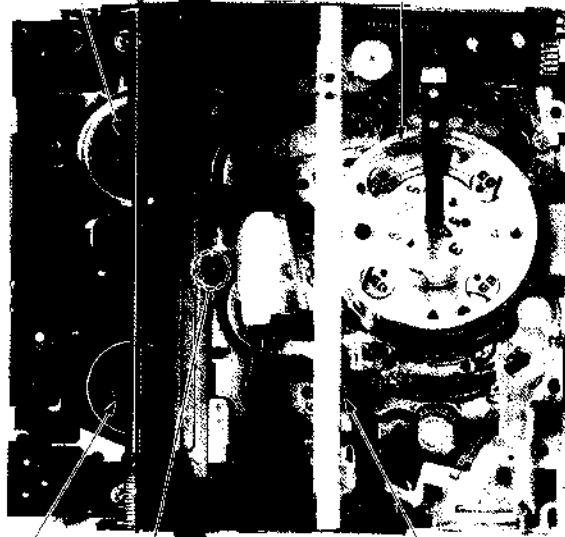


Table assy, reel, take-up
X-3728-855-1

Tape top/Tape end LED
(GL-452S)
8-719-940-81


ARM block assy, pinch
A-7040-219-A

— LOWER —

Tape top sensor
8-729-906-48

Belt (L), timing
3-741-197-01

Belt (S), timing
3-728-866-11

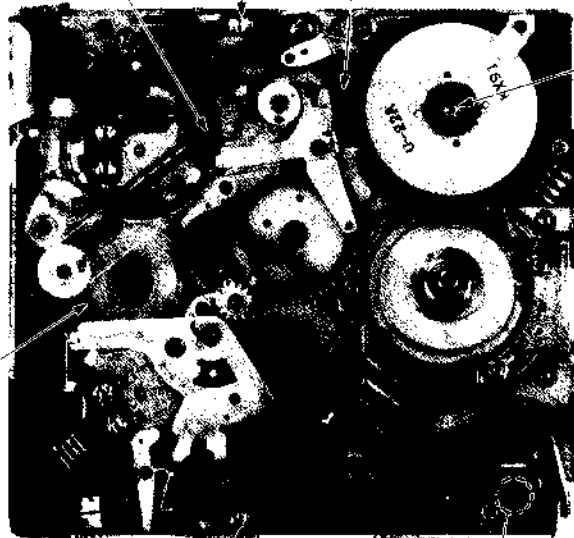

Capstan motor (M902)
8-835-331-01


Gear assy, RK
X-3728-866-1

Tape top sensor (EE-TP109)
8-729-906-48

Loading motor assy (M903)
A-7040-208-A

SECTION 3 DIAGRAMS

3-1. CIRCUIT BOARDS LOCATION

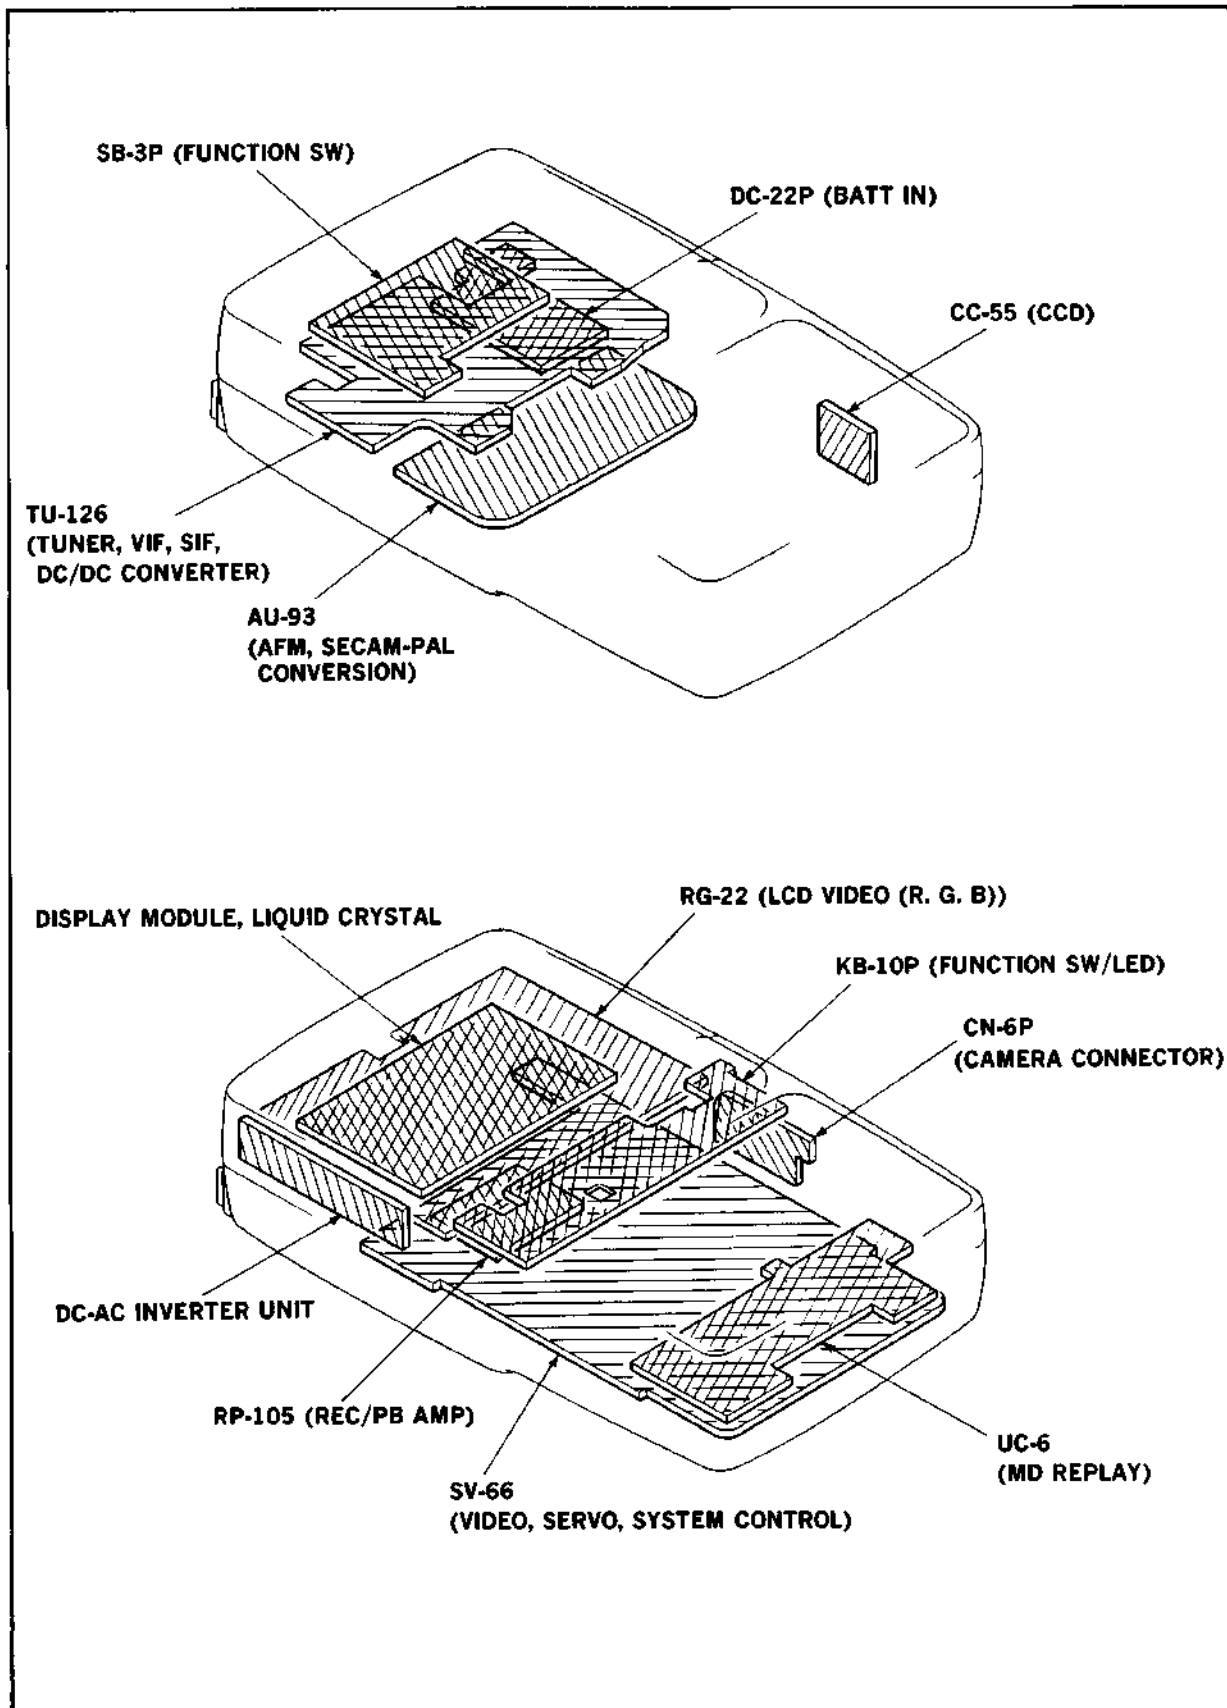

3-7. TABLE OF SV-66 BOARD IC206 (CXP-80116) PORT

| Terminal No. | Signal Name | I/O | Definition | POWOFF |
|--------------|-----------------|-----|--|--------|
| 1 | SEL2 | O | ATF REF SELECT | L |
| 2 | SEL1 | O | ATF REF SELECT | L |
| 3 | TALLY | O | TALLY output for external camera | L |
| 4 | DET P | O | ST/BI determination pulse | L |
| 5 | DRM ACCEL | O | Drum FH acceleration pulse | L |
| 6 | DRM BREAK | O | Drum FH deceleration pulse | L |
| 7 | TUNER ON | O | TUNER 5V power ON/OFF signal | L |
| 8 | JOG | O | H signal at varying speed playback | L |
| 9 | W HOLD | O | Signal for LCD VIDEO HOLD | L |
| 10 | DRUM ON | O | DRUM DRIVER control signal | L |
| 11 | INT VD | O | INTERNAL VD output | L |
| 12 | VIDEO ON | O | VIDEO power ON/OFF signal | L |
| 13 | VIDEO CS | O | Chip select for VIDEO communication | L |
| 14 | LINE MUTE | O | Audio MUTE signal | L |
| 15 | SP/LP | O | SPEED MODE signal | L |
| 16 | VAPB MODE | O | VIDEO, AUDIO REC/PB selecting signal | L |
| 17 | | O | | L |
| 18 | ME/MP | O | ME/MP TAPE determination signal | L |
| 19 | T/E LED | O | TAPE TOP/END detection signal | L |
| 20 | UN LD | O | LOADING MOTOR control signal | L |
| 21 | LD | O | LOADING MOTOR control signal | L |
| 22 | M OUT4 | O | KEY MATRIX output | L |
| 23 | M OUT3 | O | KEY MATRIX output | L |
| 24 | M OUT2 | O | KEY MATRIX output | L |
| 25 | M OUT1 | O | KEY MATRIX output | L |
| 26 | M OUT0 | O | KEY MATRIX output | L |
| 27 | POW ON | O | SW 5V system power source control signal | Hiz |
| 28 | CAMERA ON | O | Power source control signal for CAMERA | Hiz |
| 29 | (POWER)BATT LED | O | POWER LED control signal | Hiz |
| 30 | REC LED | O | REC LED control signal | Hiz |
| 31 | MP | | | — |
| 32 | CC RESET | I | COSMO RESET terminal | — |
| 33 | V _{cc} | | GND | |
| 34 | XTAL | | Terminal for 16MHz Xtal | |
| 35 | EXTAL | | Terminal for 16MHz Xtal | |
| 36 | SYNCON CS | I/O | Chip select for SYSCON | |
| 37 | SYSCON SI | I | Serial data input | — |
| 38 | SYSCON SO | I | Serial data output | — |
| 39 | SYSCON SCK | I/O | Serial clock | — |
| 40 | M IN3 | I | MATRIX input | — |

| Terminal No. | Signal Name | I/O | Definition | POWEROFF |
|--------------|------------------|-----|--|----------|
| 41 | M IN2 | I | MATRIX input | — |
| 42 | M IN1 | I | MATRIX input | — |
| 43 | M IN0 | I | MATRIX input | — |
| 44 | TAPE TOP | I | TAPE TOP A/D | — |
| 45 | TAPE END | I | TAPE END A/D | — |
| 46 | T REEL FG | I | T REEL FG A/D | — |
| 47 | S REEL FG | I | S REEL FG A/D | — |
| 48 | | I | | — |
| 49 | | I | | — |
| 50 | BATT DOWN | I | BATT DOWN A/D | — |
| 51 | ATF ERROR | I | ATF ERROR A/D | — |
| 52 | AD GND | | | |
| 53 | AV REF | | Standard voltage for A/D | |
| 54 | AV _{DD} | | Power source for A/D | |
| 55 | DRUM PG | I | DRUM PG input | — |
| 56 | | | | |
| 57 | CLOG | I | CLOG detection input | — |
| 58 | COMP SYNC | I | COMP SYNC input | — |
| 59 | PB SP/LP | I | FF/REW CUE/REV SP/LP determination input | — |
| 60 | DRUM PG | I | DRUM PG input | — |
| 61 | DRUM FG | I | DRUM FG input | — |
| 62 | CAP FG | I | CAP FG input | — |
| 63 | INPUT SEL1 | O | Input selecting signal for audio | H |
| 64 | INPUT SEL2 | O | Input selecting signal for audio | H |
| 65 | CAP ER | O | CAPSTAN ERROR output | Hiz |
| 66 | DRM ER | O | DRUM 3STATE ERROR output | Hiz |
| 67 | CAP PWM | O | CAPSTAN PWM ERROR output | L |
| 68 | DRUM RVS | O | DRUM direction selecting signal | L |
| 69 | CAP FG | O | CAPSTAN FG input for HMS | — |
| 70 | START/STOP | O | External camera START/STOP input | — |
| 71 | ~NMI | | | |
| 72 | V _{DD} | | Power source for COSMO | |
| 73 | V _{SS} | | GND | |
| 74 | V _{PP} | | | |
| 75 | CAP ON | O | CAPSTAN DRIVER ON OFF signal | L |
| 76 | CAP FWD | O | CAPSTAN direction selecting signal | L |
| 77 | RP PB MODE | O | REC/PB selecting signal | L |
| 78 | FE ON | O | Flying erase oscillation ON/OFF signal | L |
| 79 | JOG VD | O | VD signal inserting to VIDEO at varying speed playback | L |
| 80 | RF CONT | O | RF CONT output | L |

GV-200B

3-8. TEST MODE

Use CN802 on the KB-10P board.

CN802 pin position

| | |
|---|--------|
| 1 | TEST B |
| 2 | GND |
| 3 | TEST A |
| 4 | TEST C |
| 5 | TEST D |

When each terminal of the TEST A, B, C and D is shortened and opened, twelve types of TEST MODE are selected.

When servicing, attaching the "test mode set jig" (J-6082-110-A) to CN802 allows to select twelve types of test mode with the hexadecimal selecting switches of the jig.

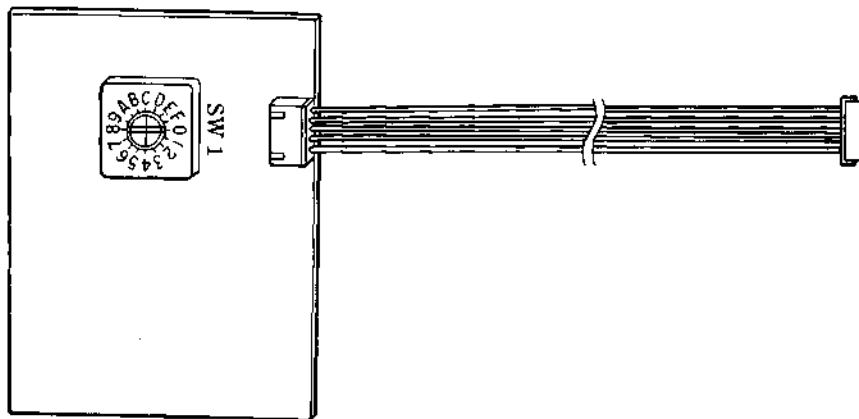


Fig3-1. Test mode set jig

| TEST MODE table | | Switch position of the test mode set jig. |
|-----------------|--------------------|---|
| DCBA | SELECT MODE | |
| 0 0 0 0 | Normal mode | 0 |
| 0 0 0 1 | Emergency off | 1 |
| 0 0 1 0 | TT TEST | 2 |
| 0 0 1 1 | Track shift | 3 |
| 0 1 0 0 | SW POSI L | 4 |
| 0 1 0 1 | SW POSI H | 5 |
| 0 1 1 0 | BATT DOWN PRE | 6 |
| 0 1 1 1 | BATT DOWN END | 7 |
| 1 0 0 0 | VIDEO DATA, MP, SP | 8 |
| 1 0 0 1 | VIDEO DATA, MP, LP | 9 |
| 1 0 1 0 | VIDEO DATA, ME, SP | A |
| 1 0 1 1 | VIDEO DATA, ME, LP | B |

The test code is designated by four figures.

MSB LSB
"D", TEST "C", TEST "B", TEST "A"

At short : 1, At open : 0

VIDEO DATA SELECT MODE is set at the TEST, "D" MAKE.

① Normal mode

Normal set condition

② Emergency off (Release of emergency stop)

③ TT TEST

MODE for extending the SIRCS code (For producing line)

④ Track shift

Run on the ATF track shift condition at the playback mode.

Timer microcomputer is in the clock adjustment mode.

⑤ SW POSI

Adjustment mode of switch position.

SWPOSI is stored in EEPROM as 16bit DATA. This data is adjusted dividing high 8bit and low 8bit. Use CH+/- KEY.

TEST MODE0101 : Varies at 16 μ sec per 1STEP.

TEST MODE0100 : Varies at 1 μ sec per 1STEP. When low 8 bit is incremented from FF. HEX, high 8 bit goes UP. And when it is decremented from 00.HEX, high 8 bit goes DOWN.

When the EEPROM has been replaced, it takes considerable time to adjust it. Therefore, the data must be preset before entering adjustment.

Preset function of the SW POSI is added. The preset function sets to high 8 bit to 07. HEX, when the DATA SCREEN KEY of SC part is pressed in the SW POSI adjustment mode. The low 8 bit is not varied.

<When the SV-66 Board IC206 is CXP80116-805Q>

If SW POSI adjustment has been done (for example, for mechanism deck replacement), IC206 should be replaced by CXP80116-821Q (8-752-818-67).

⑥ BATTERY DOWN ADJUSTMENT

Adjusted with TEST MODE 0111. When this mode is set, the following display is shown on LCD.

| | | |
|------|-------|------|
| PRE | -1.76 | } ex |
| DOWN | -1.74 | |

Supplying voltage for adjusting is performed with applying 5.50V+0.02V to the battery terminal in the TUNER REC SP MODE. When pressing the CH+ KEY on the KB-10P board, the color of display on the LCD turns to blue for few seconds from white, and then returns to white. The voltage of the battery PRE, DOWN is stored in EEPROM as the 8bit DATA by this operation.

⑦ VIDEO DATA ADJUSTMENT MODE

Short the TEST D (Solder the split land at the lower part of the KB-10P board Q803)

The following display is shown on the LCD.

VIDEO DATA

```

CFL1  1  (RESET)
CFL2  1  (DISPLAY)
NCL1  1  (SLEEP)
NCL2  1  (NEXT)
NCLP1 1  (UP)
NCLP2 1  (CLOCK)
    
```

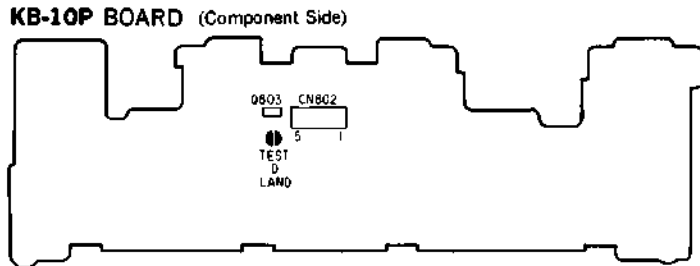


Fig3-2.

Six types of DATA are varied with the KEY on the SC part.

```

RESET    → COUNTER RESET KEY
DISPLAY  → DATA SCREEN KEY
SLEEP    → SLEEP KEY
NEXT     → NEXT KEY
UP       → + KEY
CLOCK    → CLOCK SET KEY
    
```

Pressing each KEY allows to rewrite DATA. ("0" is rewritten to "L", "1" is rewritten to "H".)

Four modes are adjusted by the types of TAPE (ME, MP) and TAPE SPEED (SP, LP), when the CH + KEY is pressed, the color of the display on the LCD turns to blue for few seconds from white and returns to white. The function to store the screen DATA in EEPROM is added by this operation. (See to the Table 3-1. for the data writing to EEPROM.)

Table 3-1. EE P ROM Write Data

| TEST MODE | | | | | | CFL1 | CFL2 | NCL1 | NCL2 | NCLP1 | NCLP2 |
|-----------|---|---|---|--|-------|------|------|------|------|-------|-------|
| D | C | B | A | Switch position of the test mode set jig | | | | | | | |
| 1 | 0 | 0 | 0 | 8 | SP•MP | H | L | H | L | L | L |
| 1 | 0 | 0 | 1 | 9 | LP•MP | L | H | L | H | H | L |
| 1 | 0 | 1 | 0 | A | SP•ME | H | L | H | L | L | L |
| 1 | 0 | 1 | 1 | B | LP•ME | L | H | L | H | H | L |

Note) When EEPROM is replaced, the following adjustment or write should be performed.

1. SW POSI adjustment
2. BATTERY DOWN adjustment
3. VIDEO DATA write
4. Channel preset

3-9. LIST OF SIRCS CODE (CATEGORY : VTR2)

| CODE No. | CODE | COMMAND |
|----------|------|------------------|
| 01 | 00 | CH-1/1 |
| 02 | 01 | CH-2/2 |
| 03 | 02 | CH-3/3 |
| 04 | 03 | CH-4/4 |
| 05 | 04 | CH-5/5 |
| 06 | 05 | CH-6/6 |
| 07 | 06 | CH-7/7 |
| 08 | 07 | CH-8/8 |
| 09 | 08 | CH-9/9 |
| 10 | 09 | CH-10/0 |
| 11 | 0 A | CH-11/ * |
| 12 | 0 B | CH-12/CH/ENTER/# |
| 13 | 0 C | CH-13/1- |
| 14 | 0 D | CH-14/2- |
| 17 | 10 | CH-HIGH(+) |
| 18 | 11 | CH-LOW(-) |
| 22 | 15 | POWER ON/OFF |
| 23 | 16 | EJECT |
| 24 | 17 | MPX MAIN/SUB |
| 25 | 18 | STOP |
| 26 | 19 | PAUSE |

| CODE No. | CODE | COMMAND |
|----------|------|------------------------|
| 27 | 1 A | PB |
| 28 | 1 B | REWIND |
| 29 | 1 C | FF |
| 30 | 1 D | REC |
| 33 | 20 | STILL |
| 36 | 23 | 1/5 SLOW |
| 47 | 2 E | POWER ON |
| 48 | 2 F | POWER OFF |
| 50 | 31 | FORWARD |
| 55 | 36 | SLEEP |
| 71 | 46 | COUNTER RESET |
| 72 | 47 | MEM CNTR ON/OFF |
| 80 | 4F | INPUT SELECT |
| 89 | 58 | SPEED CHANGE |
| 91 | 5A | COUNTER DISPLAY ON/OFF |
| 97 | 60 | TIMER SET |
| 98 | 61 | NEXT |
| 102 | 65 | TIMER REC |

3-10. SYSTEM CONTROL — VIDEO - AUDIO PART INTERFACE

| Signal mode | I/O Terminal No. | VTR. MODE | | | | | | | | | | CAMERA MODE | | | | |
|--------------------|------------------|----------------------|-----|---------------------------|----------|------|-----|-----------|----------|-----|-----|-------------|-----|-----|-----|-----|
| | | PR SEARCH CUE REVIEW | PB | PICTURE SEARCH CUE REVIEW | PB PAUSE | SLOW | REC | REC PAUSE | STAND BY | REC | | | | | | |
| DET P | 0 K206 Ⓟ | H | H | H | H | H | H | H | H | H | H | H | H | H | H | H |
| JOG | 0 K206 Ⓟ | L | L | L | L | L | L | L | L | L | L | L | L | L | L | L |
| W HOLD | 0 K206 Ⓟ | H | H | H | H | H | H | H | H | H | H | H | H | H | H | H |
| VIDEO-ON | 0 K206 Ⓟ | L | L | L | L | L | L | L | L | L | L | L | L | L | L | L |
| VIDEOS | 0 K206 Ⓟ | H | H | H | H | H | H | H | H | H | H | H | H | H | H | H |
| LINE MUTE | 0 K206 Ⓟ | L | L | L | L | L | L | L | L | L | L | L | L | L | L | L |
| SP/UP | 0 K206 Ⓟ | H/L | H/L | H/L | H/L | H/L | H/L | H/L | H/L | H/L | H/L | H/L | H/L | H/L | H/L | H/L |
| VA PB MODE | 0 K206 Ⓟ | L | L | L | L | L | L | L | L | L | L | L | L | L | L | L |
| ME/MP | 0 K206 Ⓟ | H | H | H | H | H | H | H | H | H | H | H | H | H | H | H |
| SYSTEM SO | 0 K206 Ⓟ | H | H | H | H | H | H | H | H | H | H | H | H | H | H | H |
| STATION SCR | 1/0 K206 Ⓟ | H | H | H | H | H | H | H | H | H | H | H | H | H | H | H |
| CLOG | 1 K206 Ⓟ | H | H | H | H | H | H | H | H | H | H | H | H | H | H | H |
| COMP SYNC | 1 K206 Ⓟ | H | H | H | H | H | H | H | H | H | H | H | H | H | H | H |
| PB SP/FP | 1 K206 Ⓟ | L | L | L | L | L | L | L | L | L | L | L | L | L | L | L |
| INPUT SEL1 | 0 K206 Ⓟ | H | H | H | H | H | H | H | H | H | H | H | H | H | H | H |
| INPUT SEL2 | 0 K206 Ⓟ | H | H | H | H | H | H | H | H | H | H | H | H | H | H | H |
| BP PB MODE | 0 K206 Ⓟ | H | H | H | H | H | H | H | H | H | H | H | H | H | H | H |
| FEON | 0 K206 Ⓟ | H | H | H | H | H | H | H | H | H | H | H | H | H | H | H |
| JOG V _h | 0 K206 Ⓟ | L | L | L | L | L | L | L | L | L | L | L | L | L | L | L |
| RF CONT | 0 K206 Ⓟ | L | L | L | L | L | L | L | L | L | L | L | L | L | L | L |

● 1: 2 DET P



● 2: 1/2 pulse every 1V
 REC : "H" at STEREO and MONO
 REC : "L" pulse every 1V at BILGUAL.

● 3: 4 W HOLD



- 4: "L" pulse of 1V period
- 5: By the recording mode of the playback tape.
- 6: "H" pulse of 1V period
- 7: "L" at using MP TAPE.
- 8: "L" pulse of 1V period.
- 9: "L" pulse of 1V period.
- 10: Duty pulse of 50% at 1V period.
- 11: "H" when the video head is loaded, and "L" at normal.
- 12: Positive polarity composite synchronizing signal.
- 13: "H" at the SP recorded tape, "L" at the LP recorded tape.
- 14: "H" Output according to the input mode.

| INPUT MODE | INPUT | INPUT | INPUT |
|------------|-------|-------|-------|
| TUNER | SEL1 | SEL2 | SEL3 |
| LINE | L | L | L |
| CAMERA | H | H | H |
| PB | L | L | L |
| POWER OFF | H | H | H |

3-12. SYSTEM CONTROL — SYSTEM CONTROL PERIPHERAL CIRCUIT INTERFACE

| Signal name | I/O | Terminal No. | Input-output level |
|---------------------|-----|--------------|--|
| TALLY | O | IC206 ③ | "H" at normal, "L" at the CAMERA mode with REC |
| TUNER ON | O | IC206 ⑦ | "H" at TUNER of the INPUT mode, "L" at the other. |
| VIDEO ON | O | IC206 ⑫ | "H" when the operation of VTR part of the REC • PB mode is required, "L" at the other. |
| SP/ \overline{LP} | O | IC206 ⑮ | "H" at playing back of the tape recoded in SP mode and at the SP recorded mode. |
| ME/ \overline{MP} | O | IC206 ⑰ | "L" at using the MP tape. "H" at using the ME tape. |
| T/E LED | O | IC206 ⑲ | Pulse period of which pulse train is PB • REC, 100msec., FF • REW, 4msec., CUE • REV, 8msec. |
| UNLD | O | IC206 ⑳ | "L" at normal, "H" at UNTHREADING. "H" pulse at the mechanical mode transition. |
| LD | O | IC206 ㉑ | "L" at normal, "H" at THREADING. "H" pulse at the mechanical mode transition. |
| M OUT4 | O | IC206 ㉒ | "L" pulse of 19msec period. |
| M OUT3 | O | IC206 ㉓ | "L" pulse of 19msec period. |
| M OUT2 | O | IC206 ㉔ | "H" pulse of 19msec period. |
| M OUT1 | O | IC206 ㉕ | "H" pulse of 19msec period. |
| M OUT0 | O | IC206 ㉖ | "L" pulse of 2msec period. |
| POW ON | O | IC206 ㉗ | "L" at turning ON the power. |
| CAMERA ON | O | IC206 ㉘ | "L" in the camera mode. |
| (POWER)BATT LED | O | IC206 ㉙ | "L" at lightening POWER LED, L pulse train at warning BATTERY DOWN. |
| REC LED | O | IC206 ㉚ | "L" at REC |
| CC RESET | I | IC206 ㉛ | "H" at normal, "L" at reset |
| SYSCON CS | I | IC206 ㉜ | "L" pulse train of 1V period |
| SYSCON SI | I | IC206 ㉝ | "L" pulse train of 1V period |
| SYSCON SO | O | IC206 ㉞ | "L" pulse train of 1V period |
| SYSCON SCK | I/O | IC206 ㉟ | "L" pulse train of 1V period |
| MIN3 | I | IC206 ㊱ | Key matrix input "H" at normal, "L" pulse at input |
| MIN2 | I | IC206 ㊲ | Key matrix input "H" at normal, "L" pulse at input |
| MIN1 | I | IC206 ㊳ | Key matrix input "H" at normal, "L" pulse at input |
| MIN0 | I | IC206 ㊴ | Key matrix input "H" at normal, "L" pulse at input |
| TAPE TOP | | IC206 ㊵ | TAPE TOP determination input Pulse train of 0.5 or more at TOP, "L" at the other. |
| TAPE END | | IC206 ㊶ | TAPE END determination input Pulse train of 0.5 or more at TOP. |
| T REEL FG | | IC206 ㊷ | Pulse of 2.0Vp-p or more generated by rotation of the T REEL |
| S REEL FG | | IC206 ㊸ | Pulse of 2.0Vp-p or more generated by rotation of the S REEL |
| BATT DOWN | | IC206 ㊹ | Input by dividing the main battery. Adjust Battery Down based on this. |
| START/STOP | | IC206 ㊺ | "L" at pressing the camera START/STOP button, "H" at normal |


Matrix table

| | M IN3 | M IN2 | M IN1 | M IN0 |
|----------------------------|---------------------------|---------|--------|----------------|
| $\overline{\text{M OUT4}}$ | REW | FF | PB | LINE STEREO |
| $\overline{\text{M OUT3}}$ | STOP | PAUSE | REC | SW |
| M OUT2 | TUNER/ LINE/ CAMERA | SERVICE | TEST A | TEST B |
| M OUT1 | TEST C | TEST D | ME/MP | REC PROOF |
| $\overline{\text{M OUT0}}$ | CC LOCK | M SW2 | M SW1 | M SW0 |


3-13. SYSTEM CONTROL — MECHANISM CONTROL PART INTERFACE

| Signal Name | I/O | Terminal No. | Input-output Level | | | | | | | | | | | | | | | | | | | | |
|----------------------------|---------|--------------------------|--|------|---|--------------------------|------|---|--------------------|---|---|---|---|--------------------|---|---|---|---|--------------------|---|---|---|---|
| ME/ $\overline{\text{MP}}$ | I | CN001 ② | "L" pulse at using the MP tape, "H" pulse at the other (19msec period) | | | | | | | | | | | | | | | | | | | | |
| REC PROOF | I | CN001 ③ | "L" pulse when the recording cassette is inserted, "H" pulse at the other (19msec period) | | | | | | | | | | | | | | | | | | | | |
| TOP/END LED | O | CN001 ④ | "L" pulse of 1Vp-p, the pulse period is 100msec to 4msec | | | | | | | | | | | | | | | | | | | | |
| TOP SENS | I | CN001 ⑤ | "L" at normal, "L" pulse at TAPE TOP and without a cassette | | | | | | | | | | | | | | | | | | | | |
| T REEL FG | I | CN001 ⑥ | Pulse generated by the T reel rotation (2.0Vp-p or more) | | | | | | | | | | | | | | | | | | | | |
| S REEL FG | I | CN001 ⑦ | Pulse generated by the S reel rotation (2.0Vp-p or more) | | | | | | | | | | | | | | | | | | | | |
| MODE SW2 | I | CN001 ⑩ | <table border="1"> <thead> <tr> <th></th> <th>EJECTED</th> <th>THREADING UNTHREADING</th> <th>STOP</th> <th>REC/PB/FF/ REW/CEU/REV PAUSE/SLOW</th> </tr> </thead> <tbody> <tr> <td>M SW2 (10P-13P)</td> <td>○</td> <td>○</td> <td>×</td> <td>○</td> </tr> <tr> <td>M SW1 (11P-13P)</td> <td>×</td> <td>○</td> <td>○</td> <td>×</td> </tr> <tr> <td>M SW0 (12P-13P)</td> <td>×</td> <td>×</td> <td>○</td> <td>○</td> </tr> </tbody> </table> <p>○ : Short × : Open</p> | | EJECTED | THREADING UNTHREADING | STOP | REC/PB/FF/ REW/CEU/REV PAUSE/SLOW | M SW2 (10P-13P) | ○ | ○ | × | ○ | M SW1 (11P-13P) | × | ○ | ○ | × | M SW0 (12P-13P) | × | × | ○ | ○ |
| | EJECTED | THREADING UNTHREADING | | STOP | REC/PB/FF/ REW/CEU/REV PAUSE/SLOW | | | | | | | | | | | | | | | | | | |
| M SW2 (10P-13P) | ○ | ○ | | × | ○ | | | | | | | | | | | | | | | | | | |
| M SW1 (11P-13P) | × | ○ | | ○ | × | | | | | | | | | | | | | | | | | | |
| M SW0 (12P-13P) | × | × | ○ | ○ | | | | | | | | | | | | | | | | | | | |
| MODE SW1 | I | CN001 ⑪ | | | | | | | | | | | | | | | | | | | | | |
| MODE SW0 | I | CN001 ⑫ | | | | | | | | | | | | | | | | | | | | | |
| MOUT0 (COM) | O | CN001 ⑬ | | | | | | | | | | | | | | | | | | | | | |
| CC DOWN | I | CN001 ⑭ | Between 13P and 14P is shortened when the cassette control goes down. Between 13P and 14P is opened when the cassette control does not go down. | | | | | | | | | | | | | | | | | | | | |
| END SENS | I | CN001 ⑮ | "L" pulse at normal, "H" pulse at the tape end and at having no tape. | | | | | | | | | | | | | | | | | | | | |


3-14. TUNER BLOCK DIAGRAM

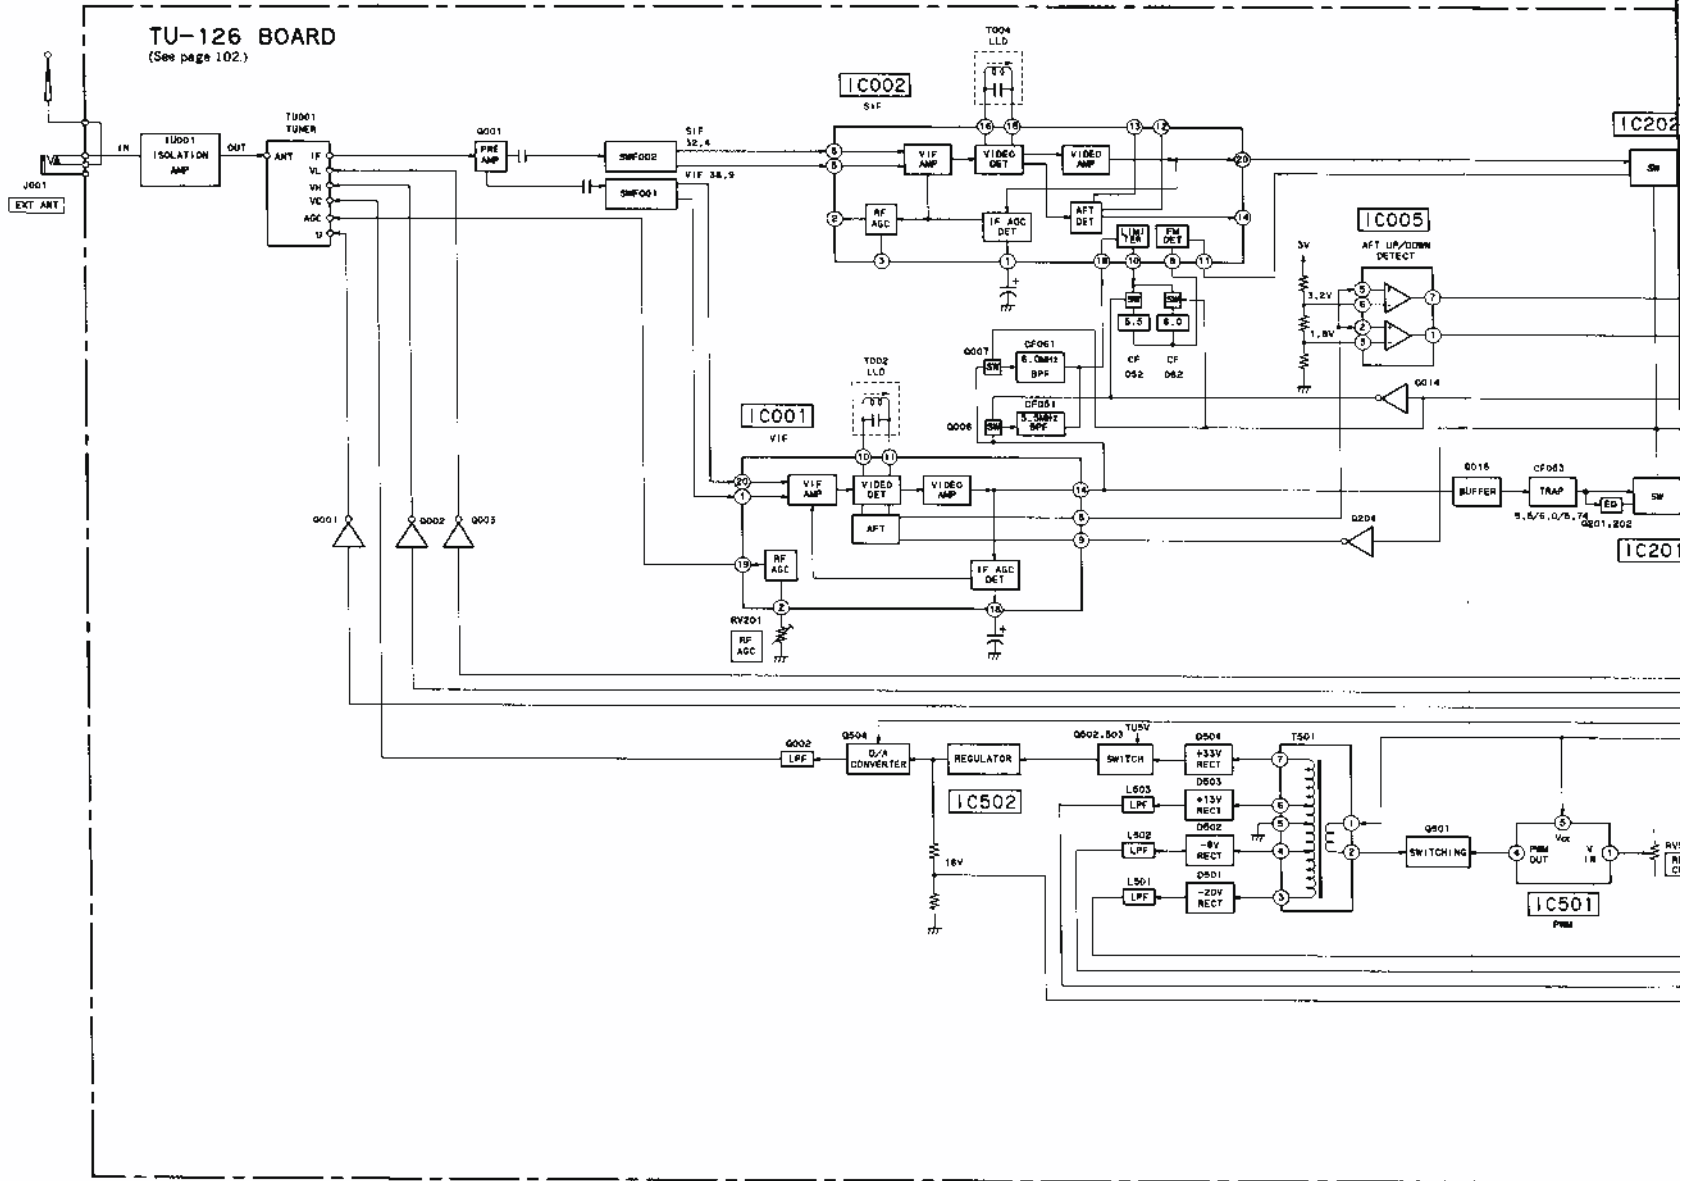


3-17. POWER BLOCK DIAGRAM

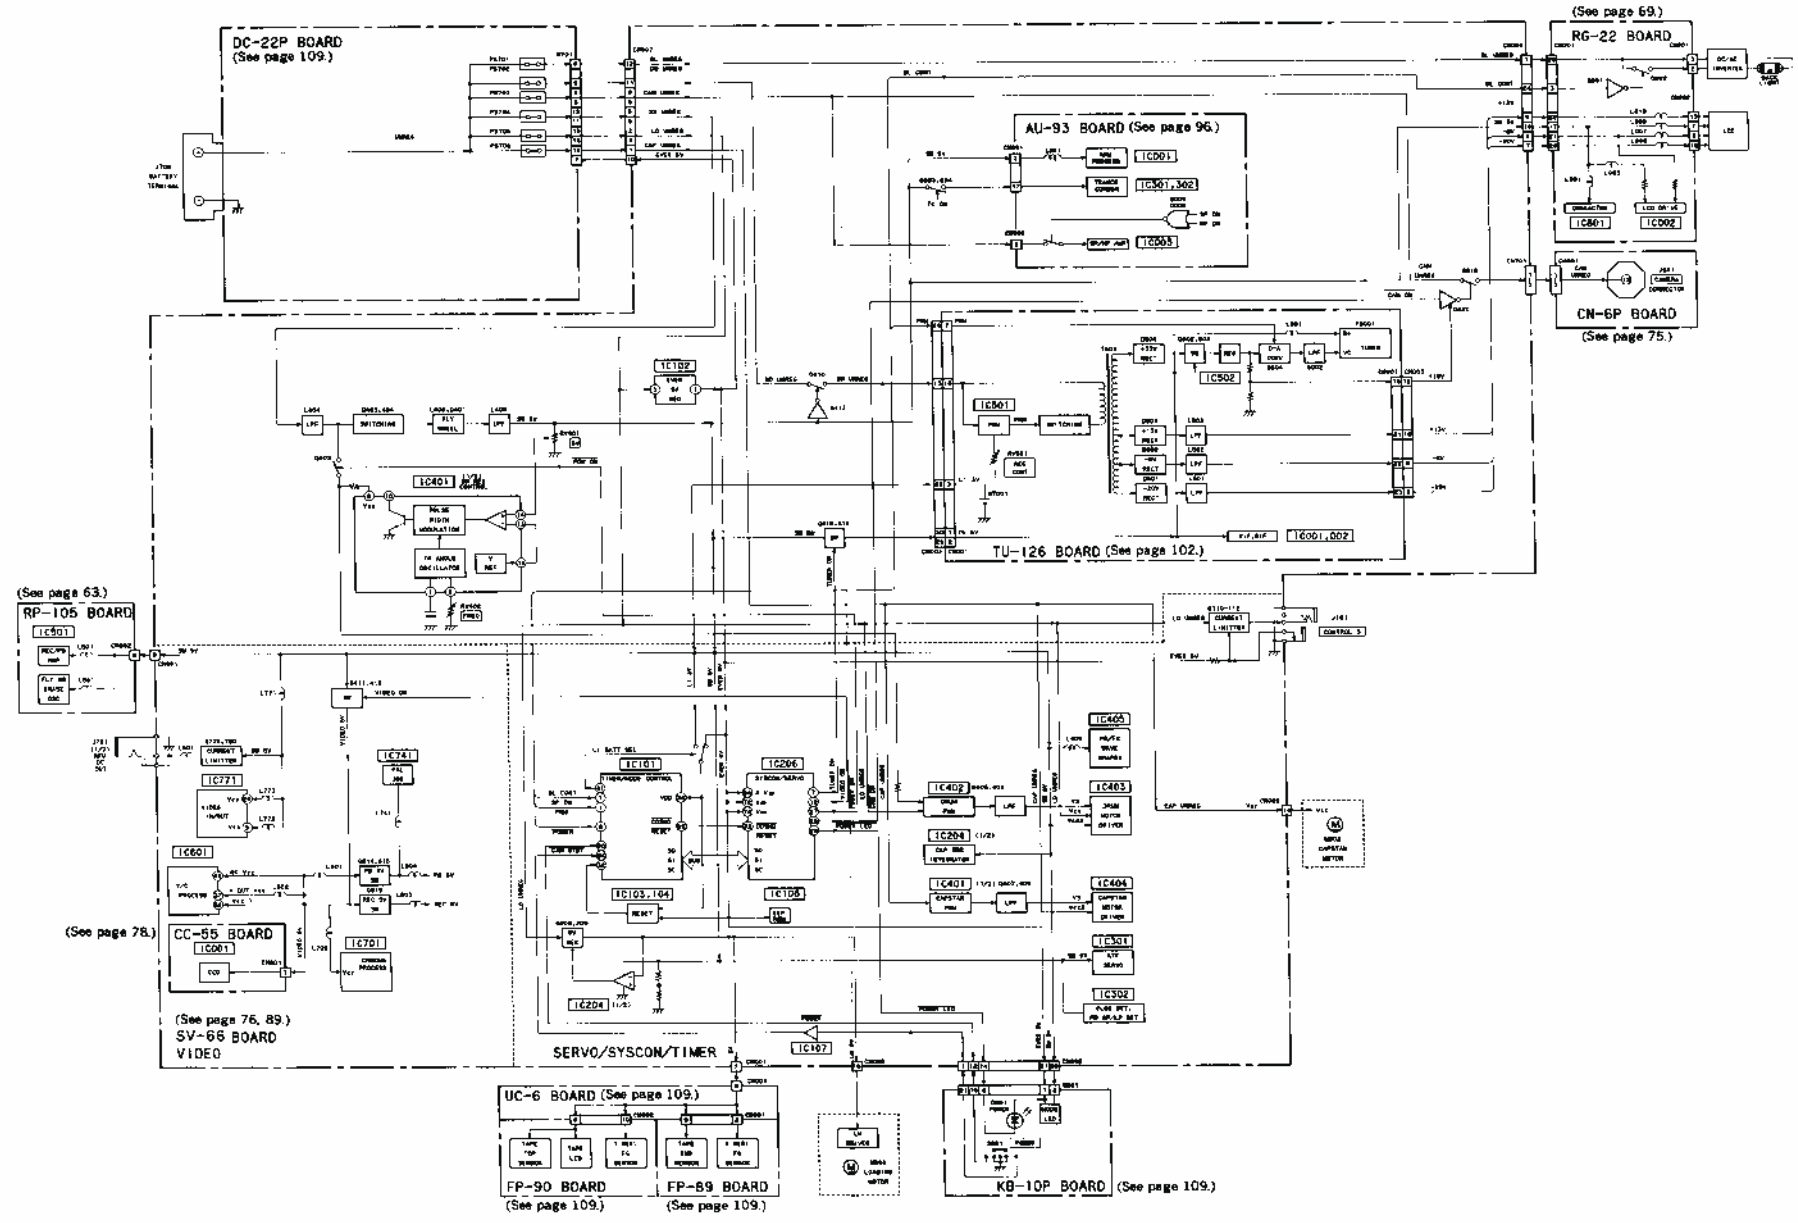



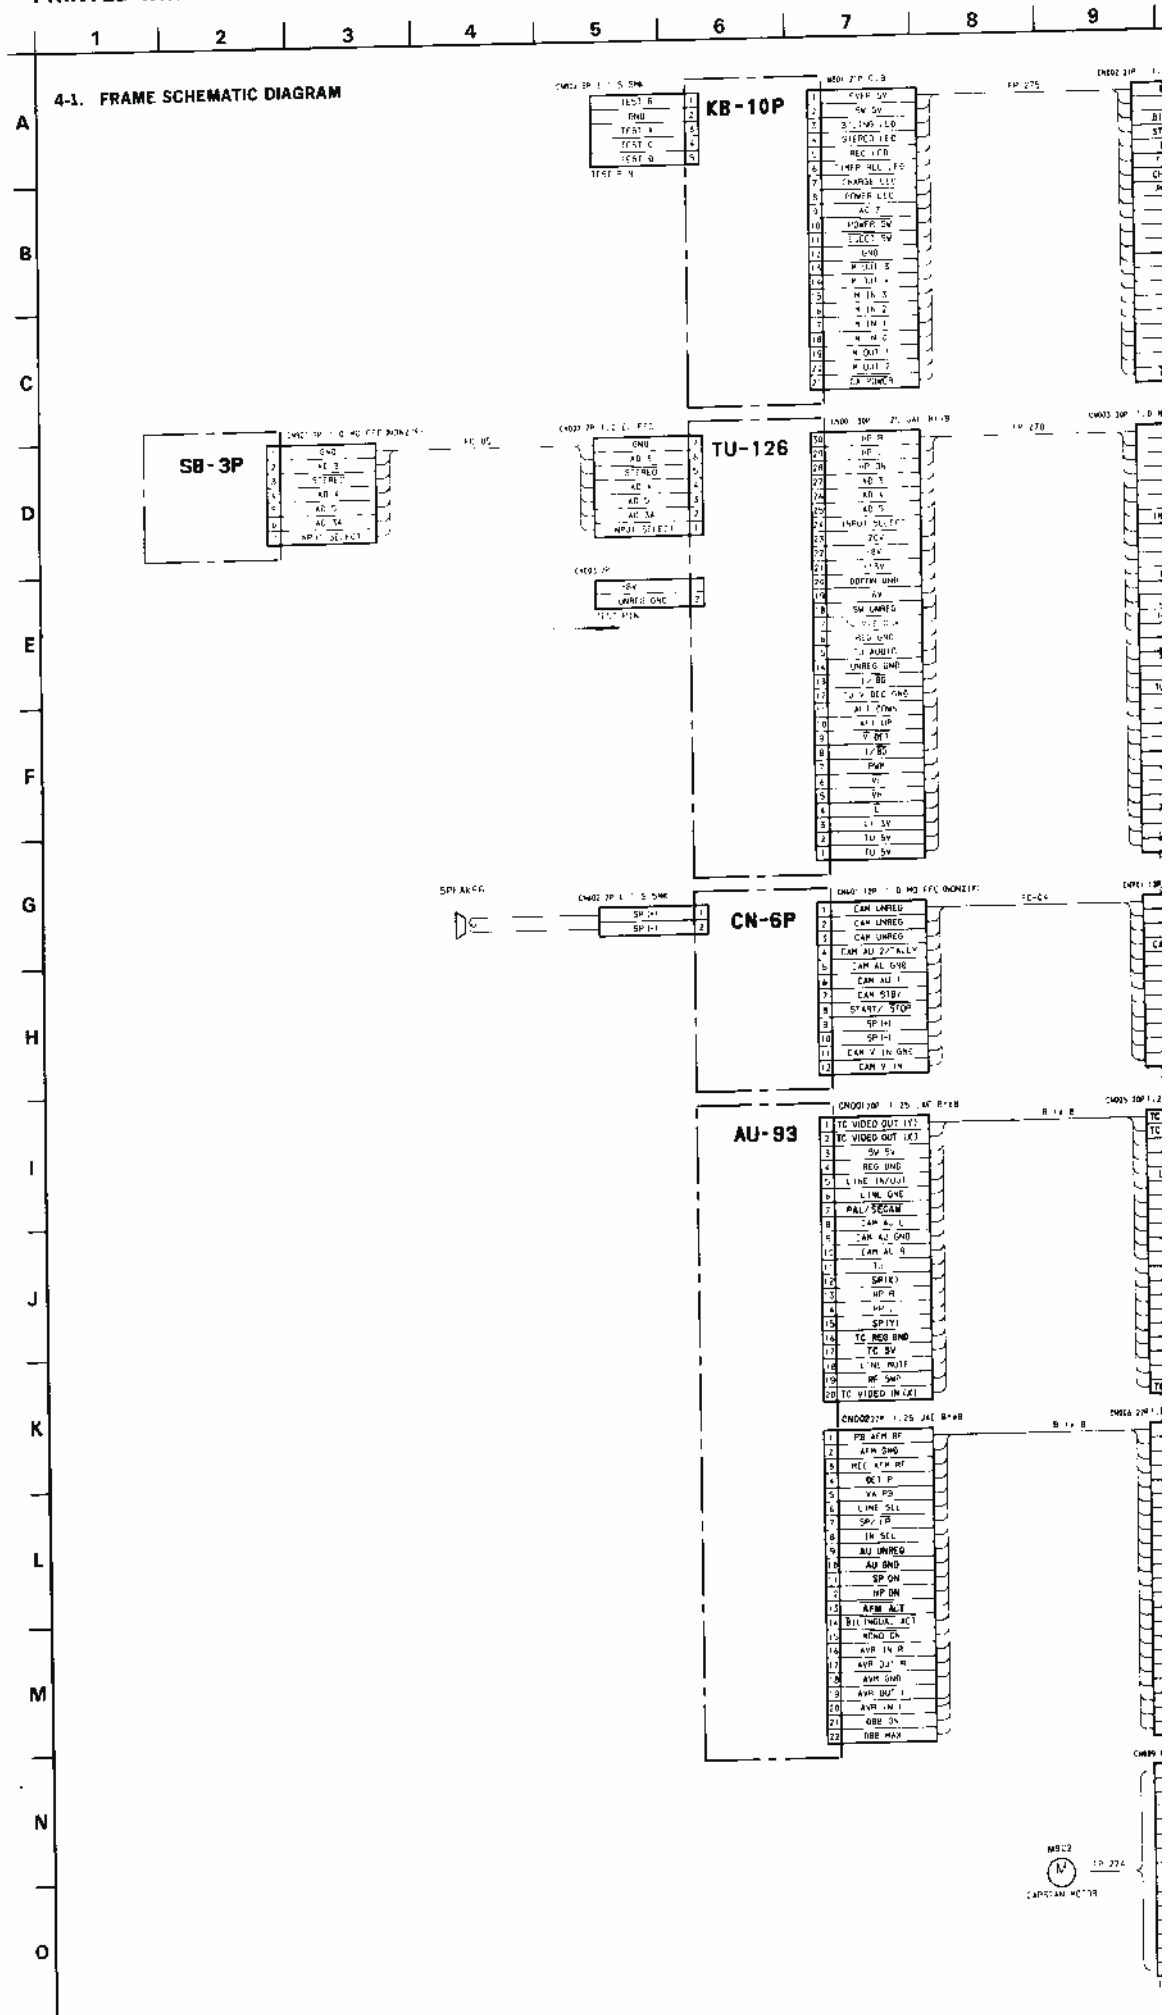

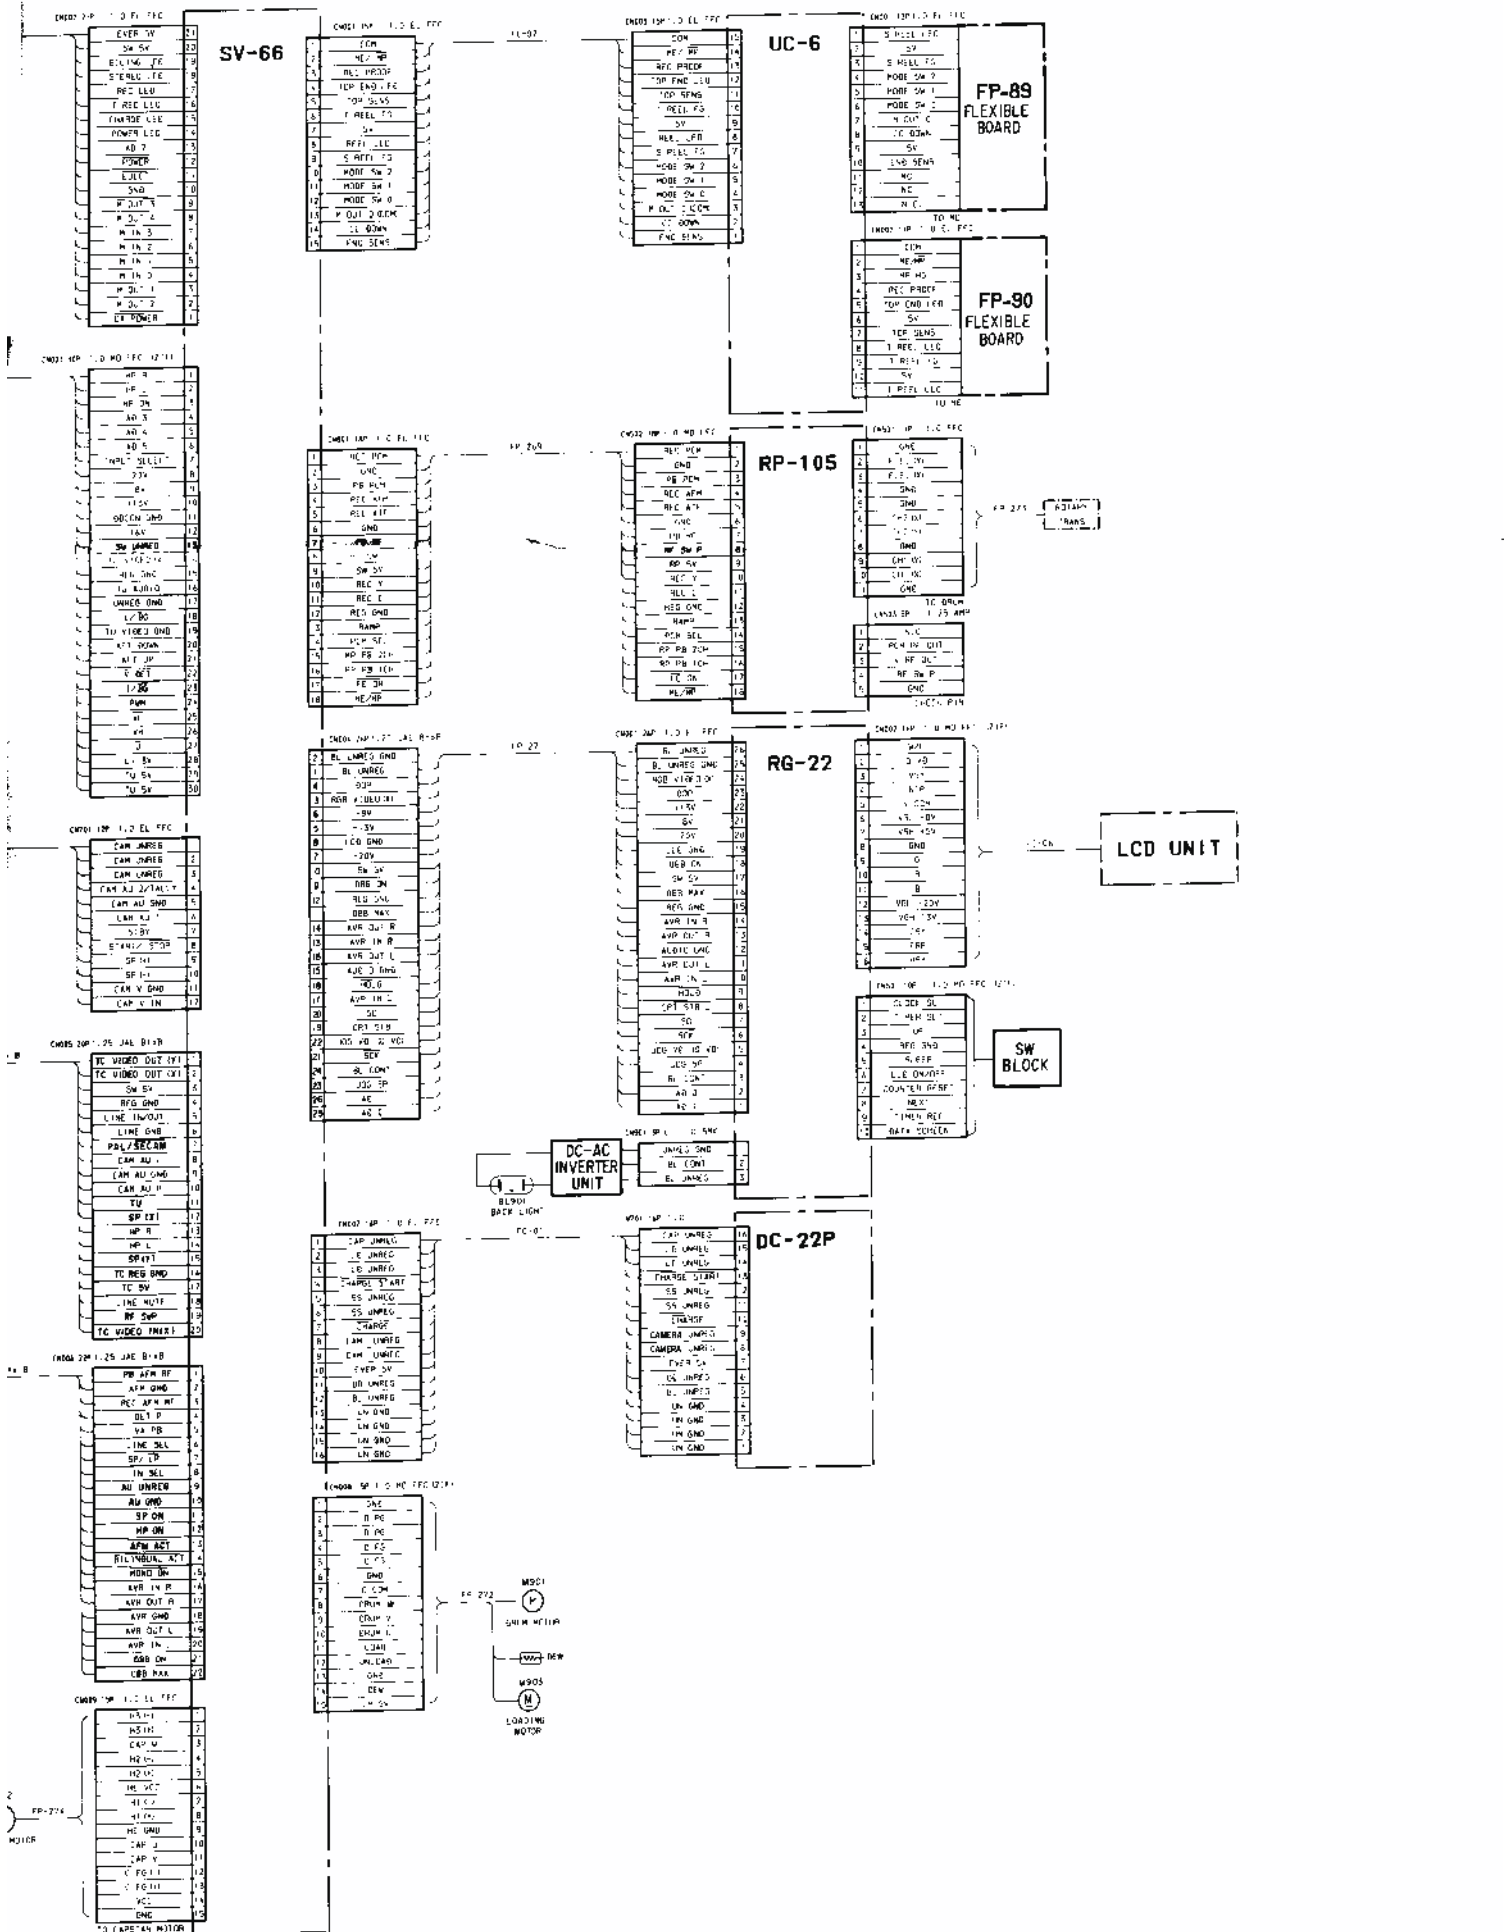






PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS








THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)

- For printed wiring boards.
 -  : Through hole.
 -  : Pattern from the side which enables seeing.
 -  : Pattern of the rear side.
 - Circled numbers refer to waveforms.
 - The part codes and the part names for correction of the semiconductor on the print board are described in the space of each print figure. Please use it when ordering parts.
- For schematic diagram.
 - Caution when replacing chip parts.
 New parts must be attached after removal of chip.
 Be careful not to heat the minus side of tantalum capacitor, because it is damaged by the heat.
 - All resistors are in ohms, 1/4W or less unless otherwise noted.
 k Ω : 1000 Ω , M Ω : 1000k Ω .
 - All capacitors are in μ F unless otherwise noted. pF : μ μ F.
 50V or less are not indicated except for electrolytics and tantalums.
 - All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
 -  : nonflammable resistor.
 -  : fusible resistor.
 -  : panel designation.
 -  : internal component.
 -  : adjustment for repair.
 -  : B + Line
 -  : B - Line.
 - Circled numbers refer to waveforms.
 -  : IN/OUT direction of B (+, -) line.
 - The voltage value is the reference value to the ground when the color bar signal (RF signal) is input tuner from the color bar generator (Tester for use : DC10m Ω)

1C501 3-7
 C501 3-7
 C502 3-7
 C531 8-7
 C522 8-7

| | |
|---|---|
| <p>Note: The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.</p> | <p>Note: Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p> |
|---|---|


When indicating parts by reference number, please include the board name.

[TEST MODE]
 This unit selects the test mode by shorting and opening the terminals of CN802 on the KB-10P BOARD. When servicing, attaching the "test mode set jig" (J-6082-110-A) to the CN802 allows to select twelve types of test mode with the hexadecimal selecting switches. See to "3-8. Test Mode" on page 41 for details.

RP-105 (REC/PB AMP) PRINTED WIRING BOARD
 — Ref. No. RP-105 BOARD : 1000 series —


| | |
|-------|---------------------------|
| | < IC > |
| IC501 | 8-752-033-38 CXA1202R |
| | < TRANSISTOR > |
| Q501 | 8-729-905-12 DTA144EU |
| Q502 | 8-729-905-35 2SC4081-R |
| Q581 | 8-729-905-23 2SA1575-R |
| Q582 | 8-729-820-76 2SA1179-MSM6 |

RP-105 BOARD (CONDUCTOR SIDE)

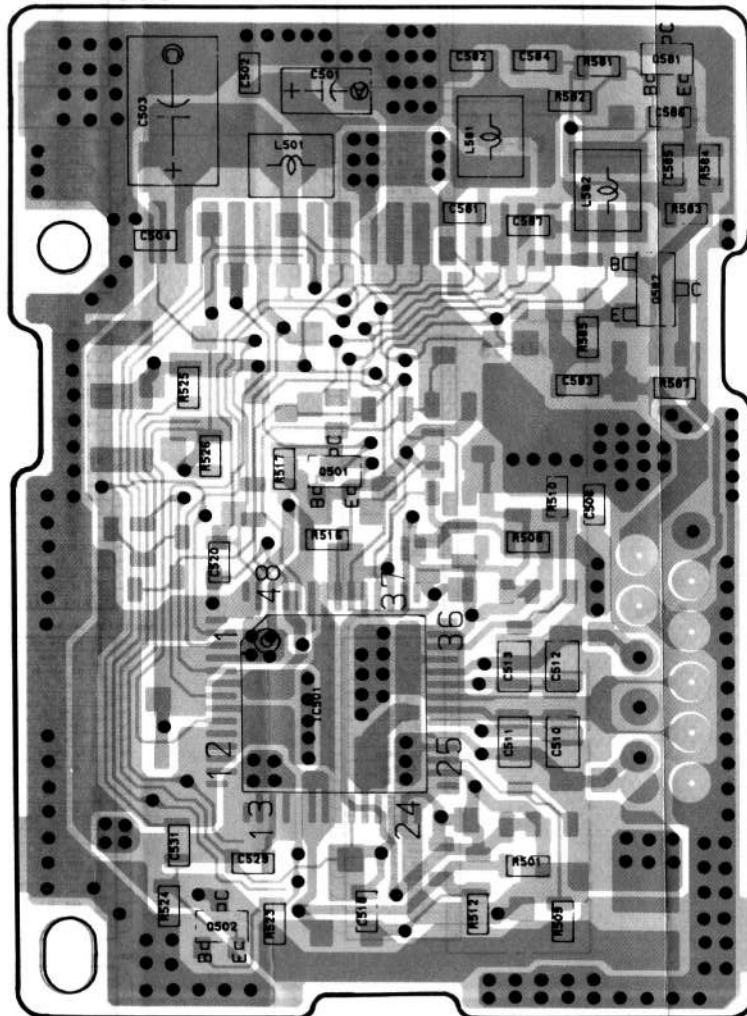


04

RP-105 BOARD (COMPONENT SIDE)


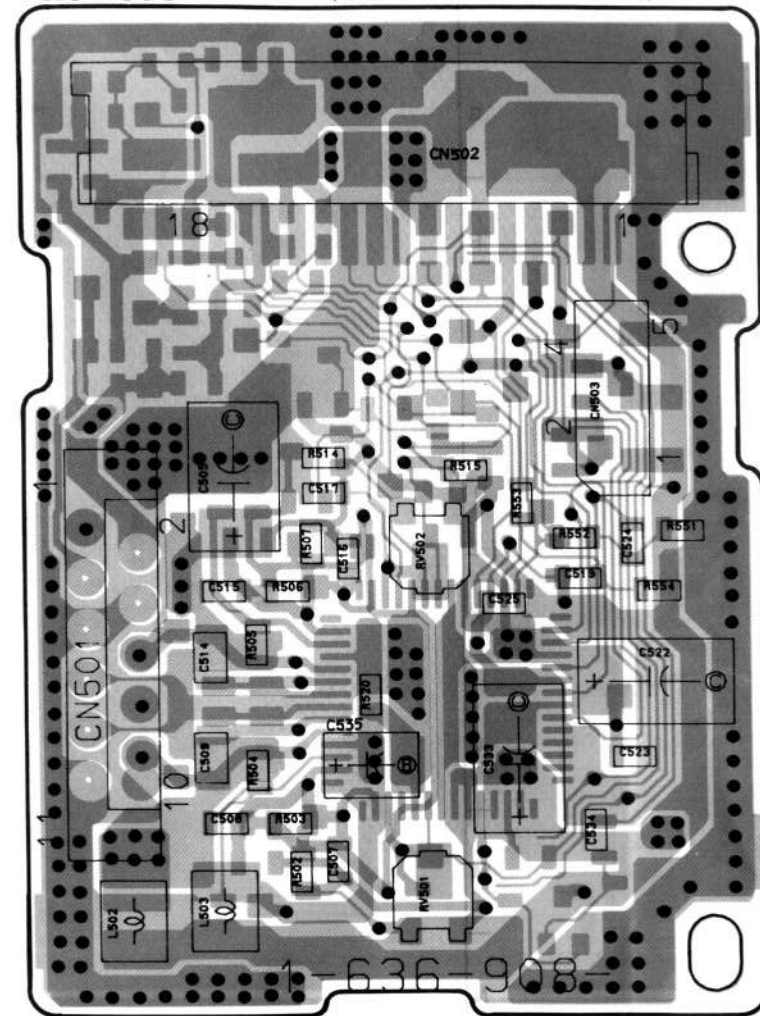


02


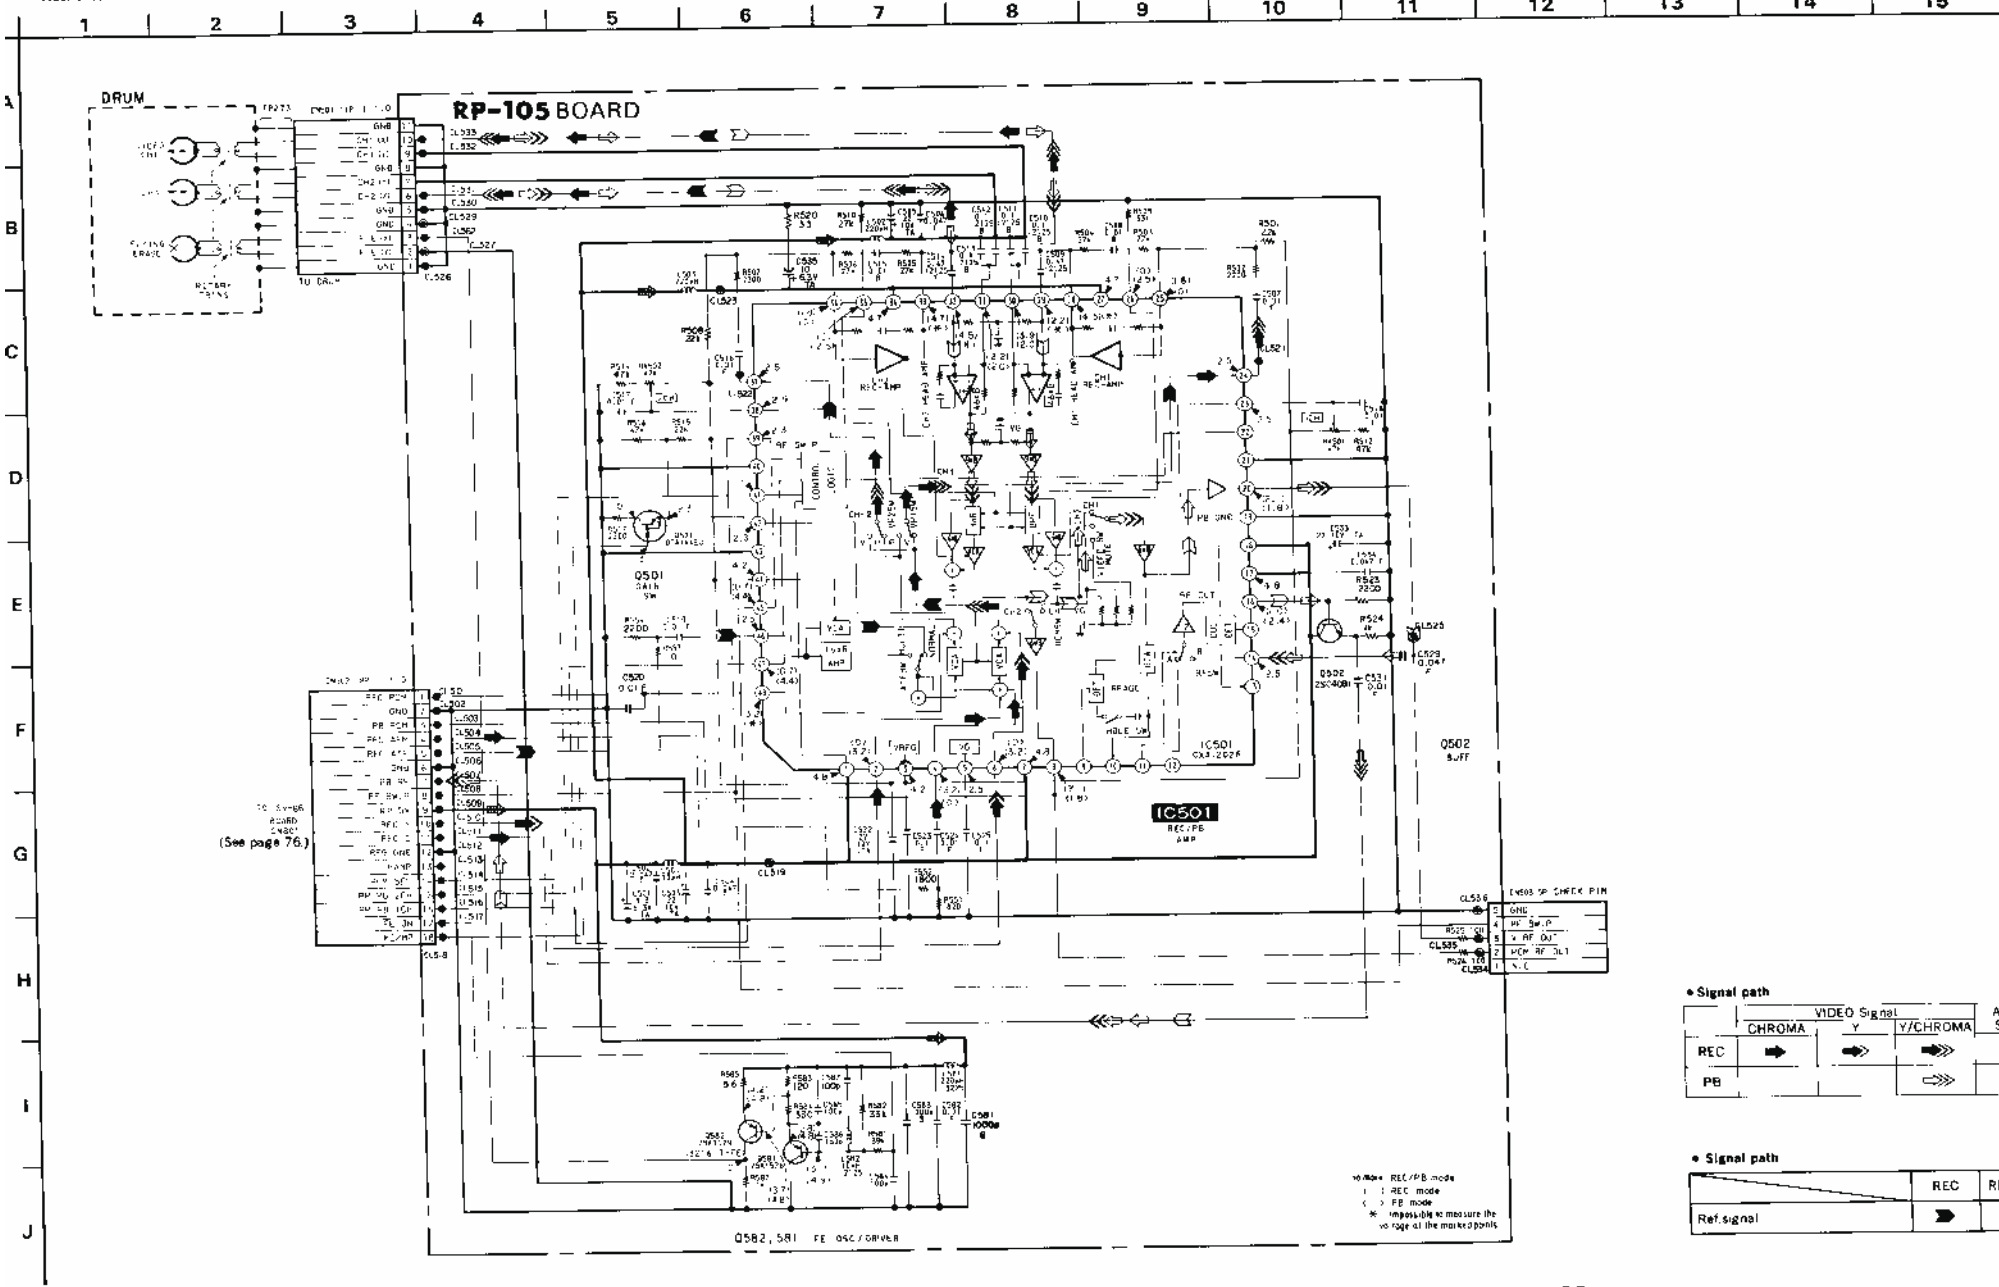


10 5V-66
 #2000
 #2002
 (See page 76.)

WAVE REC/PB mode
 1 REC mode
 2 PB mode
 * impossible to measure the voltage at the markpoints



RG-22 BOARD (E-E mode)

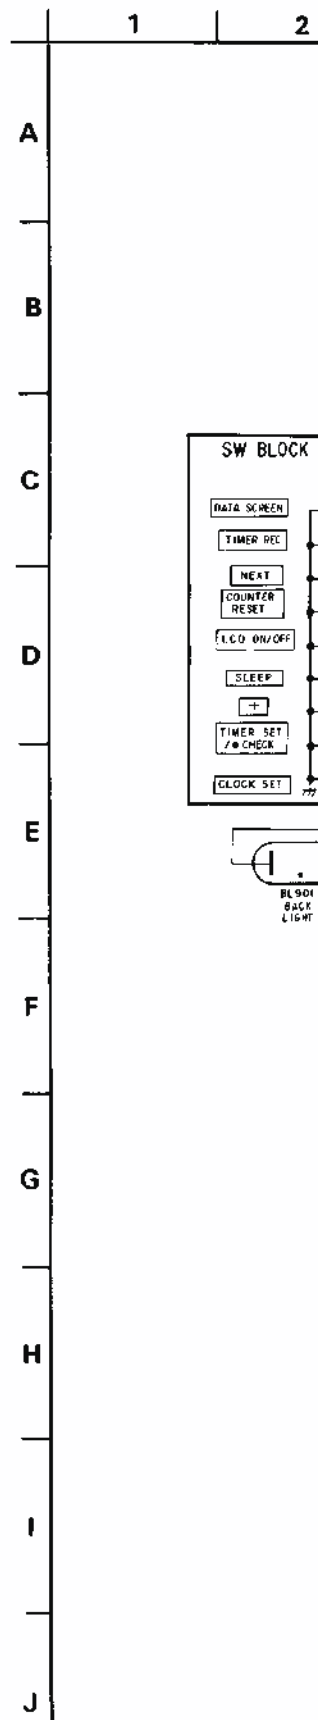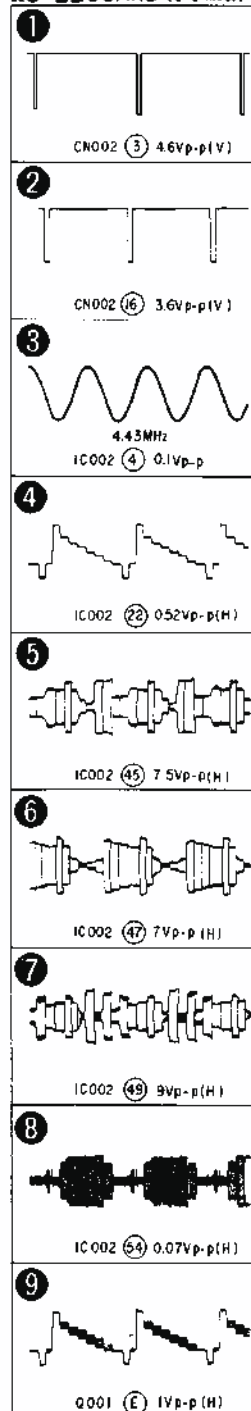

| | |
|---|--|
| <p>Note: The components identified by mark or dotted line with mark are critical for safety. Replace only with part number specified.</p> | <p>Note: Les composants identifiés par une marque sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p> |
|---|--|


• Signal path

| | VIDEO Signal | | |
|----|--------------|---|----------|
| | CHROMA | Y | Y/CHROMA |
| PB | ⇐ | ⇨ | ⇨⇨ |


LCD VIDEO

GV-200B

RG-22 (LCD VIDEO (R. G. B.)) SCHEMATIC DIAGRAM
 — Ref. No. RG-22 BOARD : 2000 series

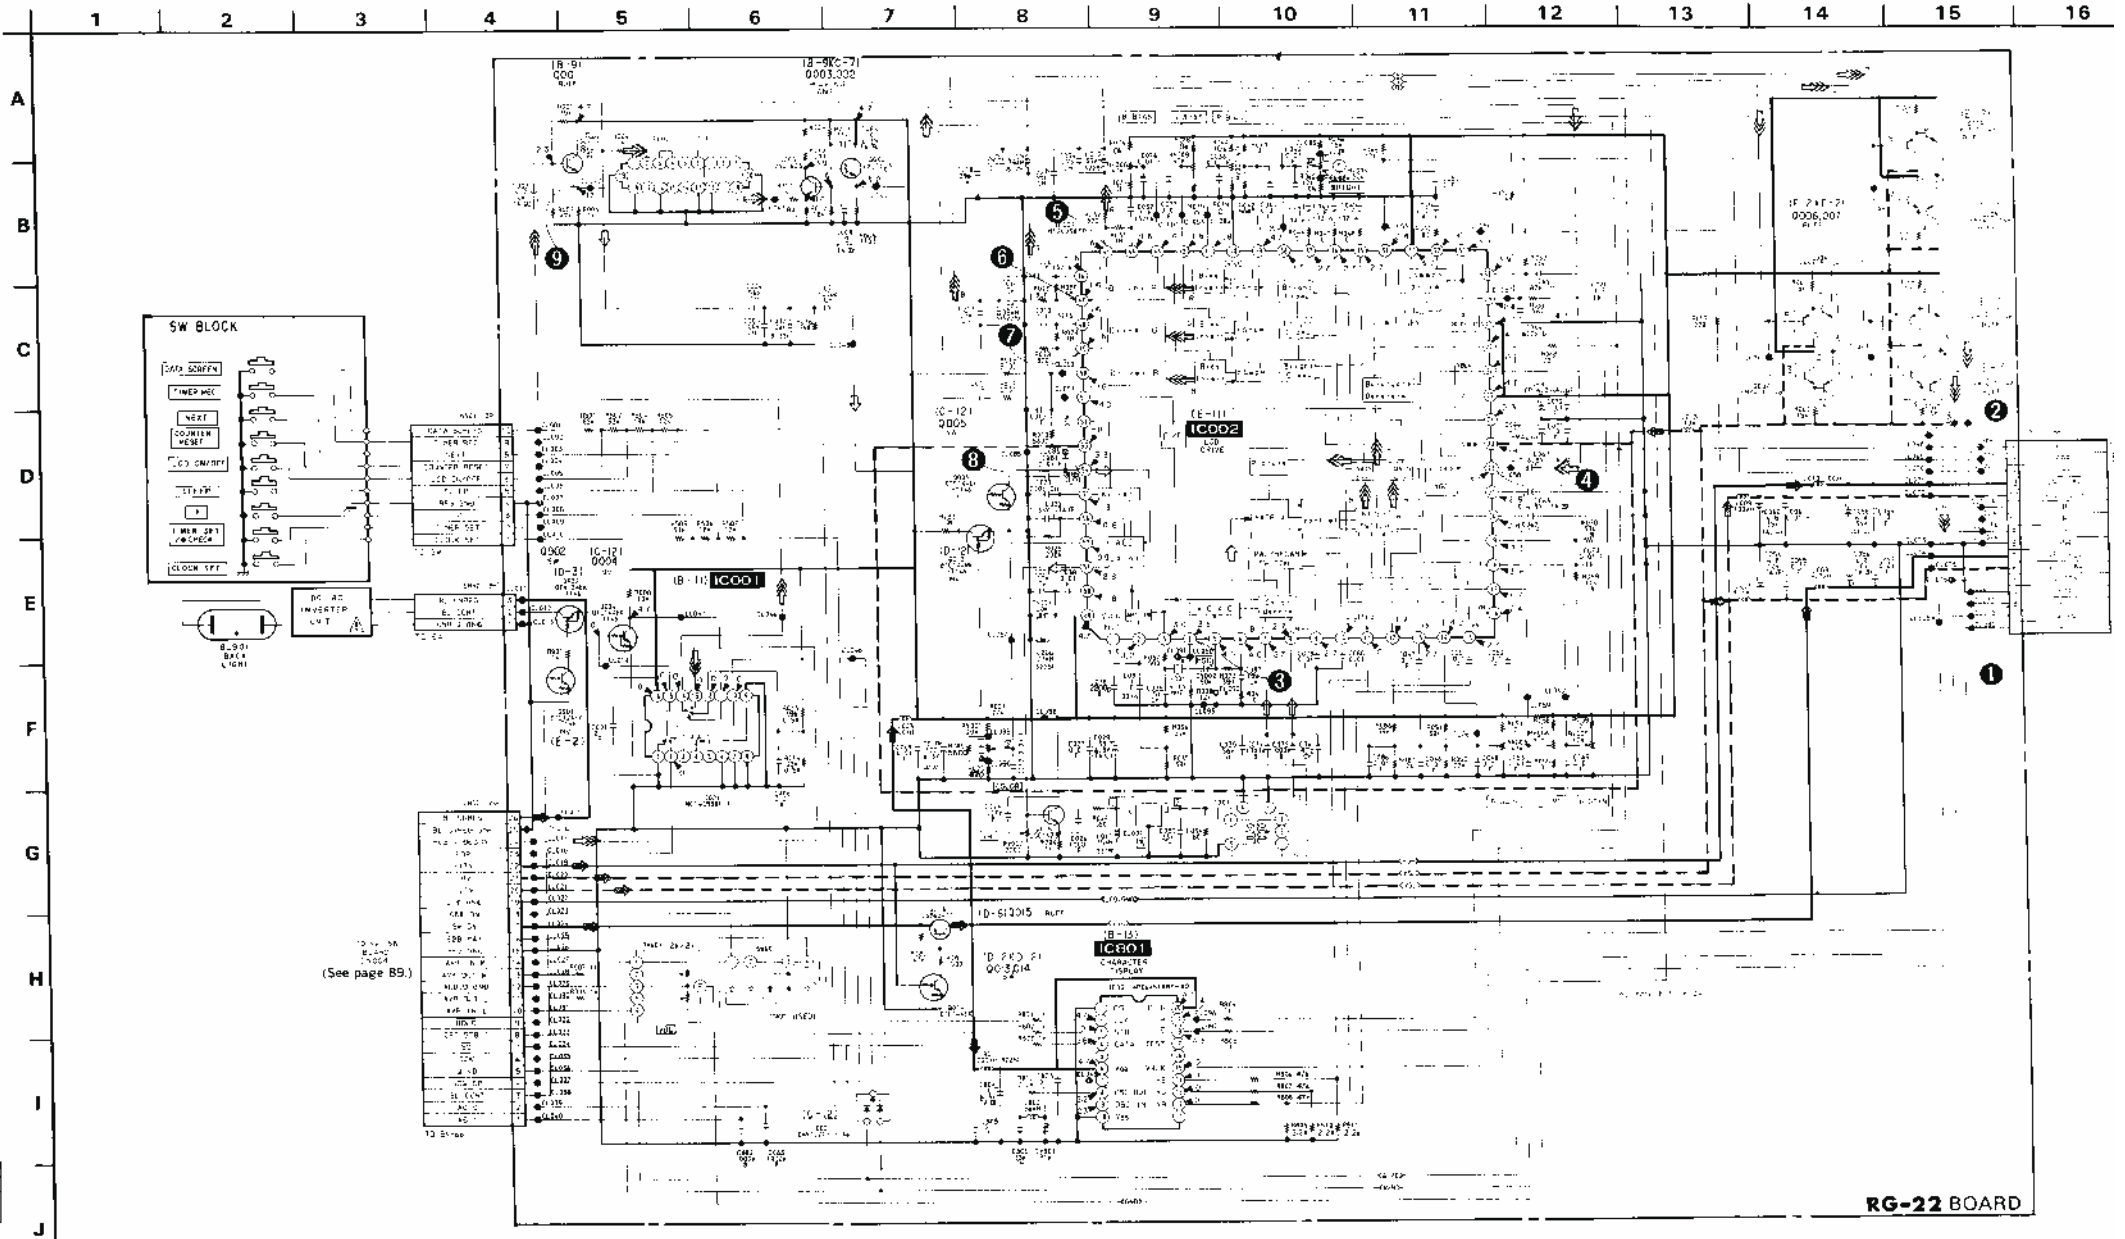

RG-22 BOARD

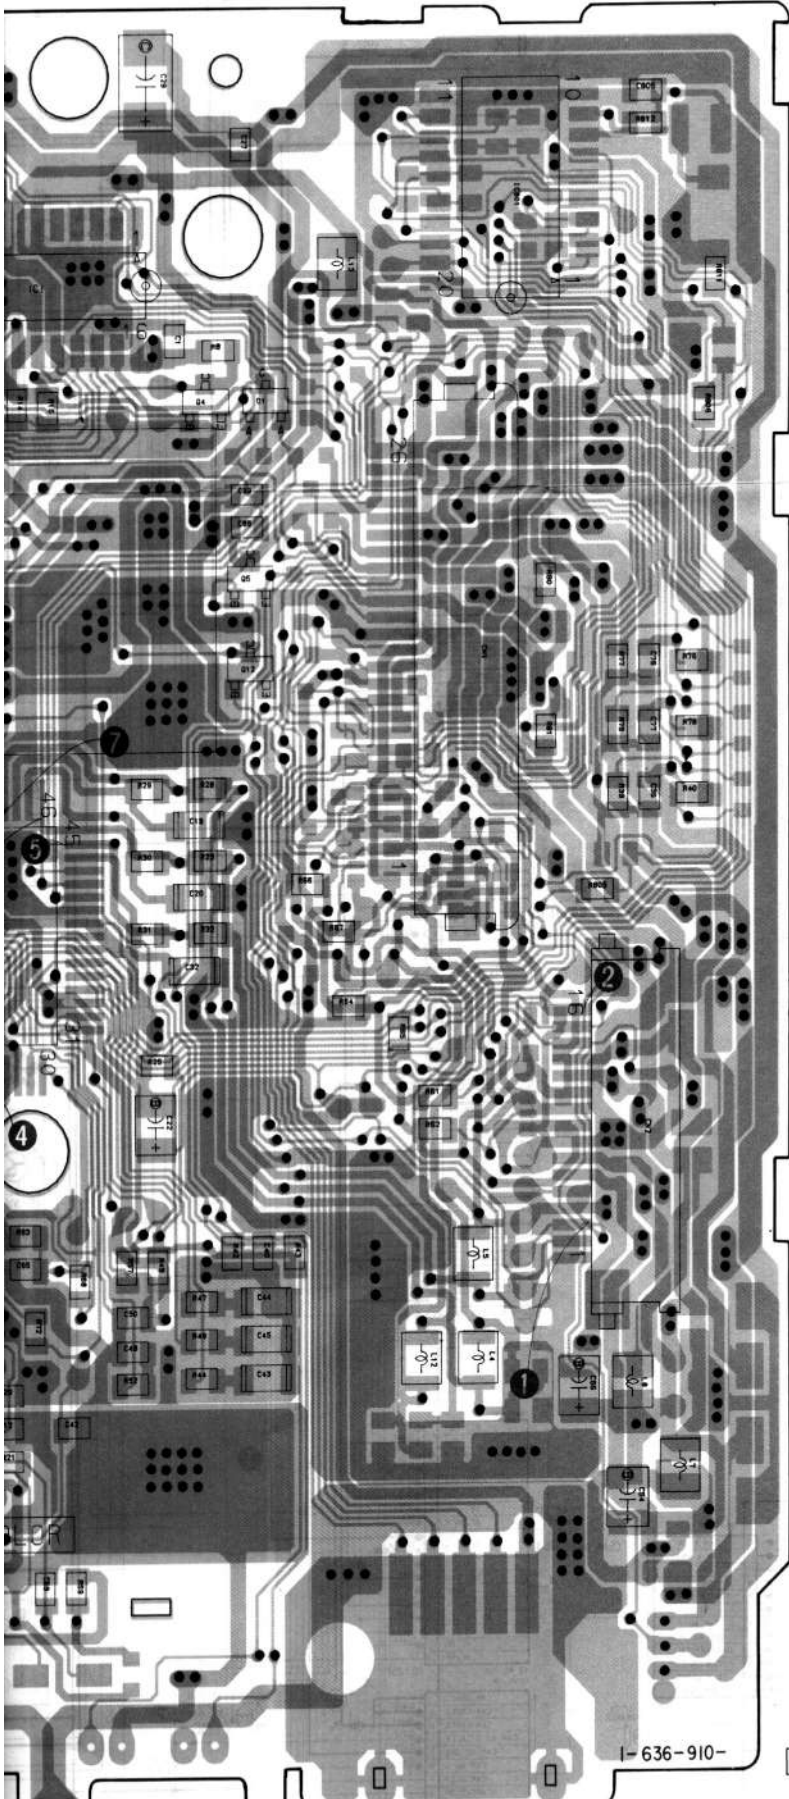

< DIODE >

D001 8-719-400-18 MA152WK

< IC >

IC001 8-759-009-07 MC14053BF
 IC002 8-759-535-37 M52003AFP
 IC801 8-759-150-07 LP06451AGT-601

< TRANSISTOR >

Q001 8-729-100-66 2SC1623
 Q002 8-729-100-66 2SC1623
 Q003 8-729-100-66 2SC1623
 Q004 8-729-901-01 DTC144EK
 Q005 8-729-901-01 DTC144EK

 Q006 8-729-904-41 FMY3
 Q007 8-729-904-44 FMY4
 Q008 8-729-904-41 FMY3
 Q009 8-729-904-44 FMY4
 Q010 8-729-904-41 FMY3

 Q011 8-729-904-44 FMY4
 Q012 8-729-901-03 DTC144WK
 Q013 8-729-141-48 2SB624-BV346
 Q014 8-729-901-01 DTC144EK
 Q015 8-729-100-66 2SC1623
 Q901 8-729-901-00 DTC124EK

 Q902 8-729-901-05 DTA124EK

55 (CCD), CN-6 (CAMERA CONNECTOR), SV-66(VIDEO) PRINTED WIRING BOARDS
 Ref. No. CN-6 BOARD : 3000 series, CC-55 and SV-66 BOARDS : 5000series —


D901 8-719-106-44 RD9, 1M-82
 D902 8-719-106-44 RD9, 1M-82

IC772 8-759-710-86 NJM2238M
 IC773 8-759-234-77 TC4566F
 IC774 8-759-234-77 TC4566F
 IC775 8-759-234-77 TC4566F


Q208 8-729-820-46 2SB1202FAS
 Q209 8-729-905-35 2SC4081-R
 D210 8-729-403-24 XN4210

0410 8-729-805-25 2S
 0410 8-729-805-27 2S
 0411 8-729-805-25 2S
 0411 8-729-805-27 2S
 0412 8-729-905-35 2S

SV-66 BOARD (CONDUCTOR SIDE)

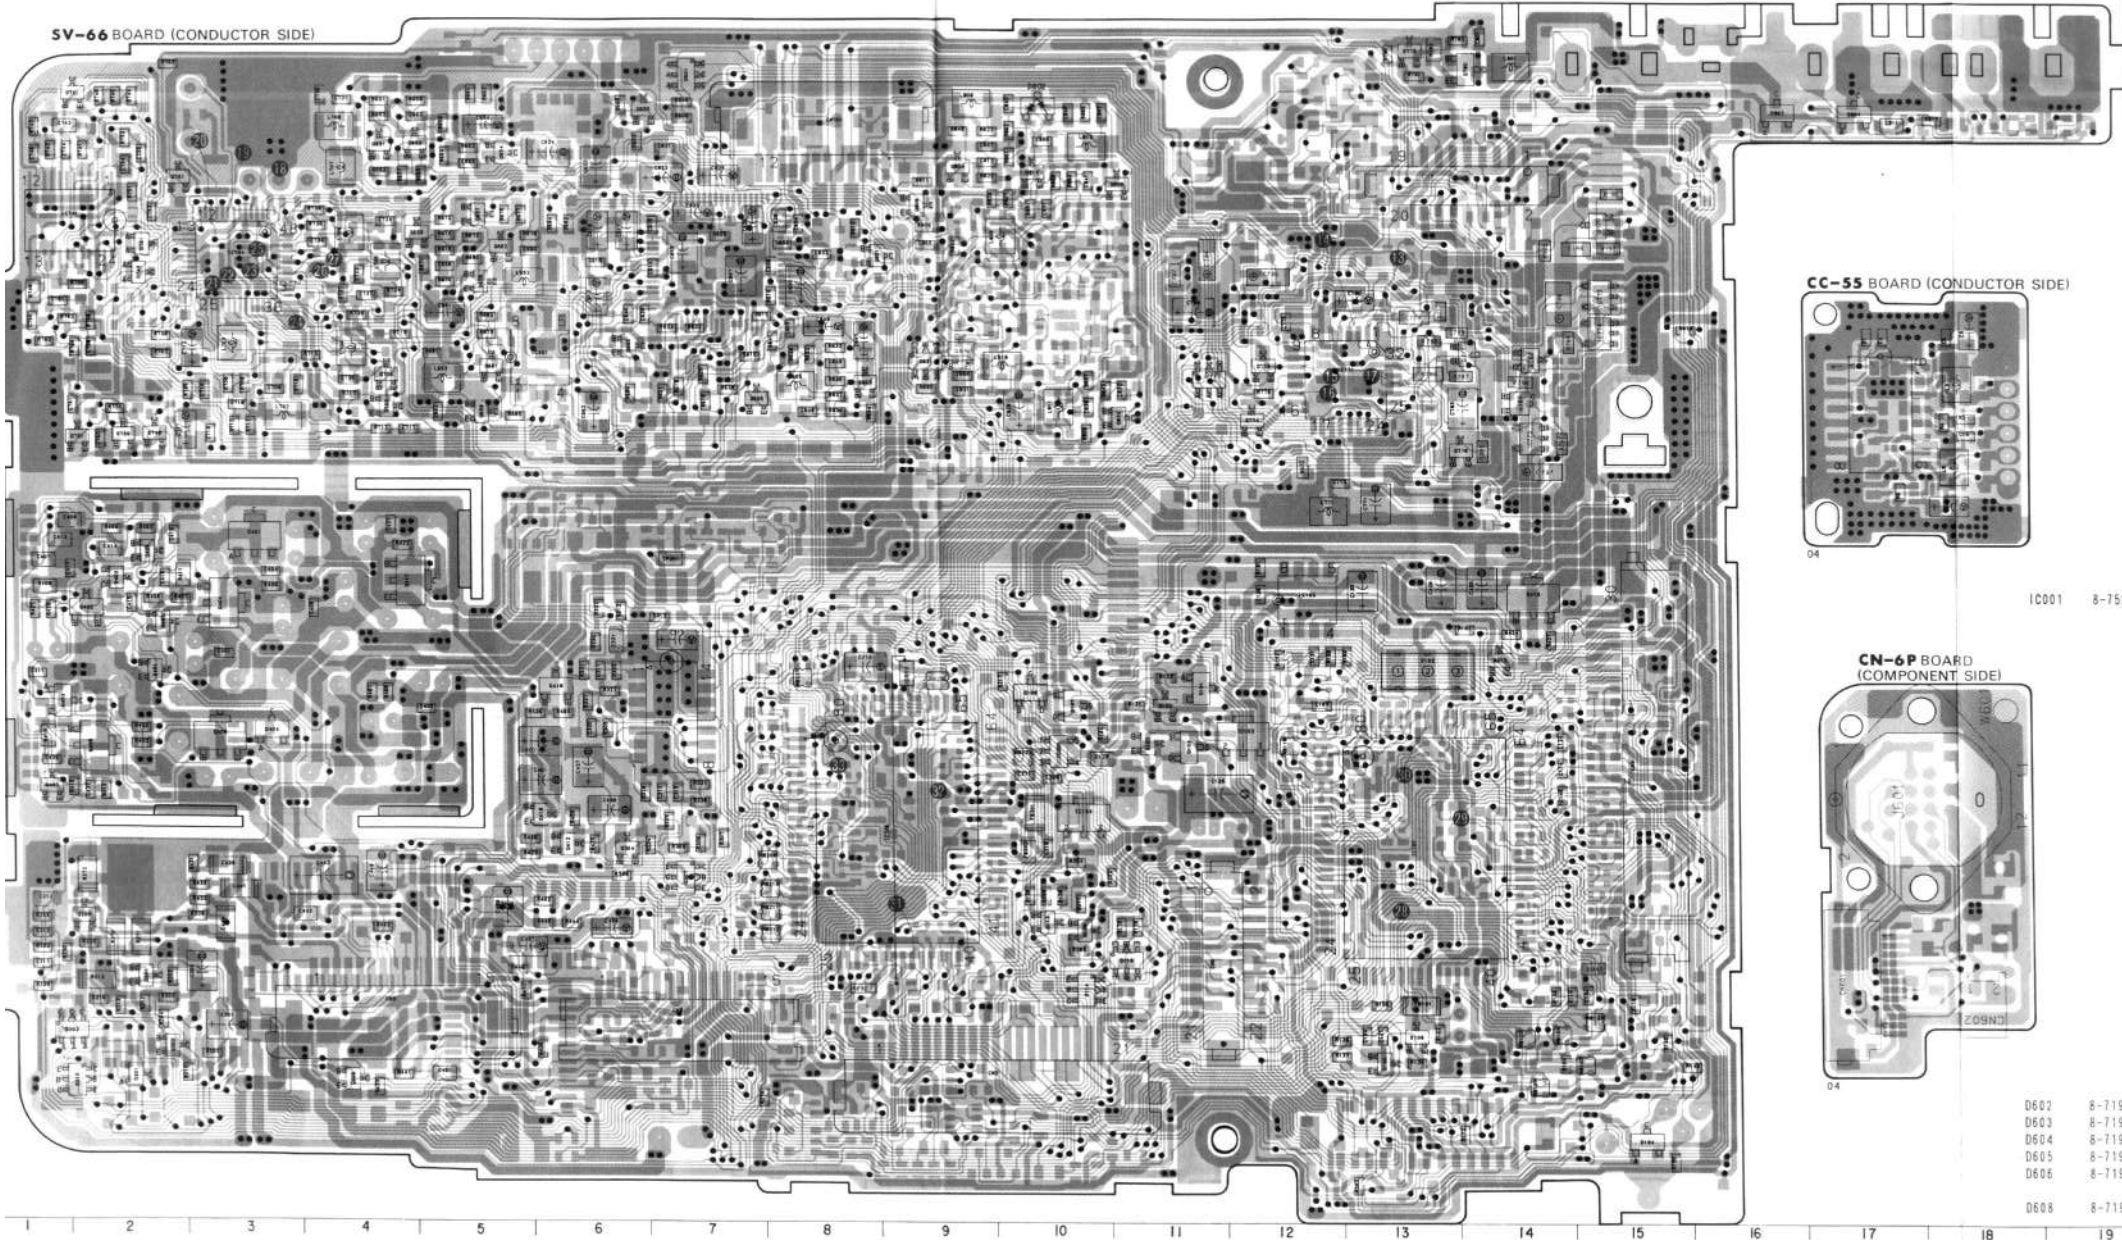


CC-55 BOARD (CONDUCTOR SIDE)

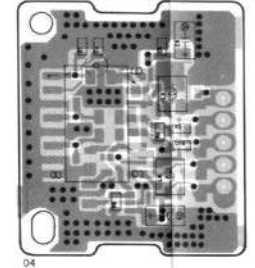

IC001 8-752


CN-6P BOARD (COMPONENT SIDE)

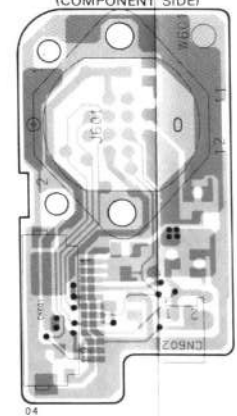


D602 8-719-
 D603 8-719-
 D604 8-719-
 D605 8-719-
 D606 8-719-
 D608 8-719-

0663 8-729-920-48 1MH2
 0665 8-729-905-35 2SC4081-R
 0693 8-729-141-48 2SB624-BV345
 0694 8-729-905-61 DTC124EU
 0781 8-729-905-35 2SC4081-R
 0782 8-729-905-18 DTC144EU
 0783 8-729-905-18 DTC144EU
 0784 8-729-905-35 2SC4081-R


0779 8-729-905-35 2SC4081-R
 0780 8-729-141-48 2SB624-BV345
 0781 8-729-905-18 DTC144EU
 0782 8-729-905-35 2SC4081-R
 0783 8-729-905-18 DTC144EU
 0804 8-729-905-35 2SC4081-R

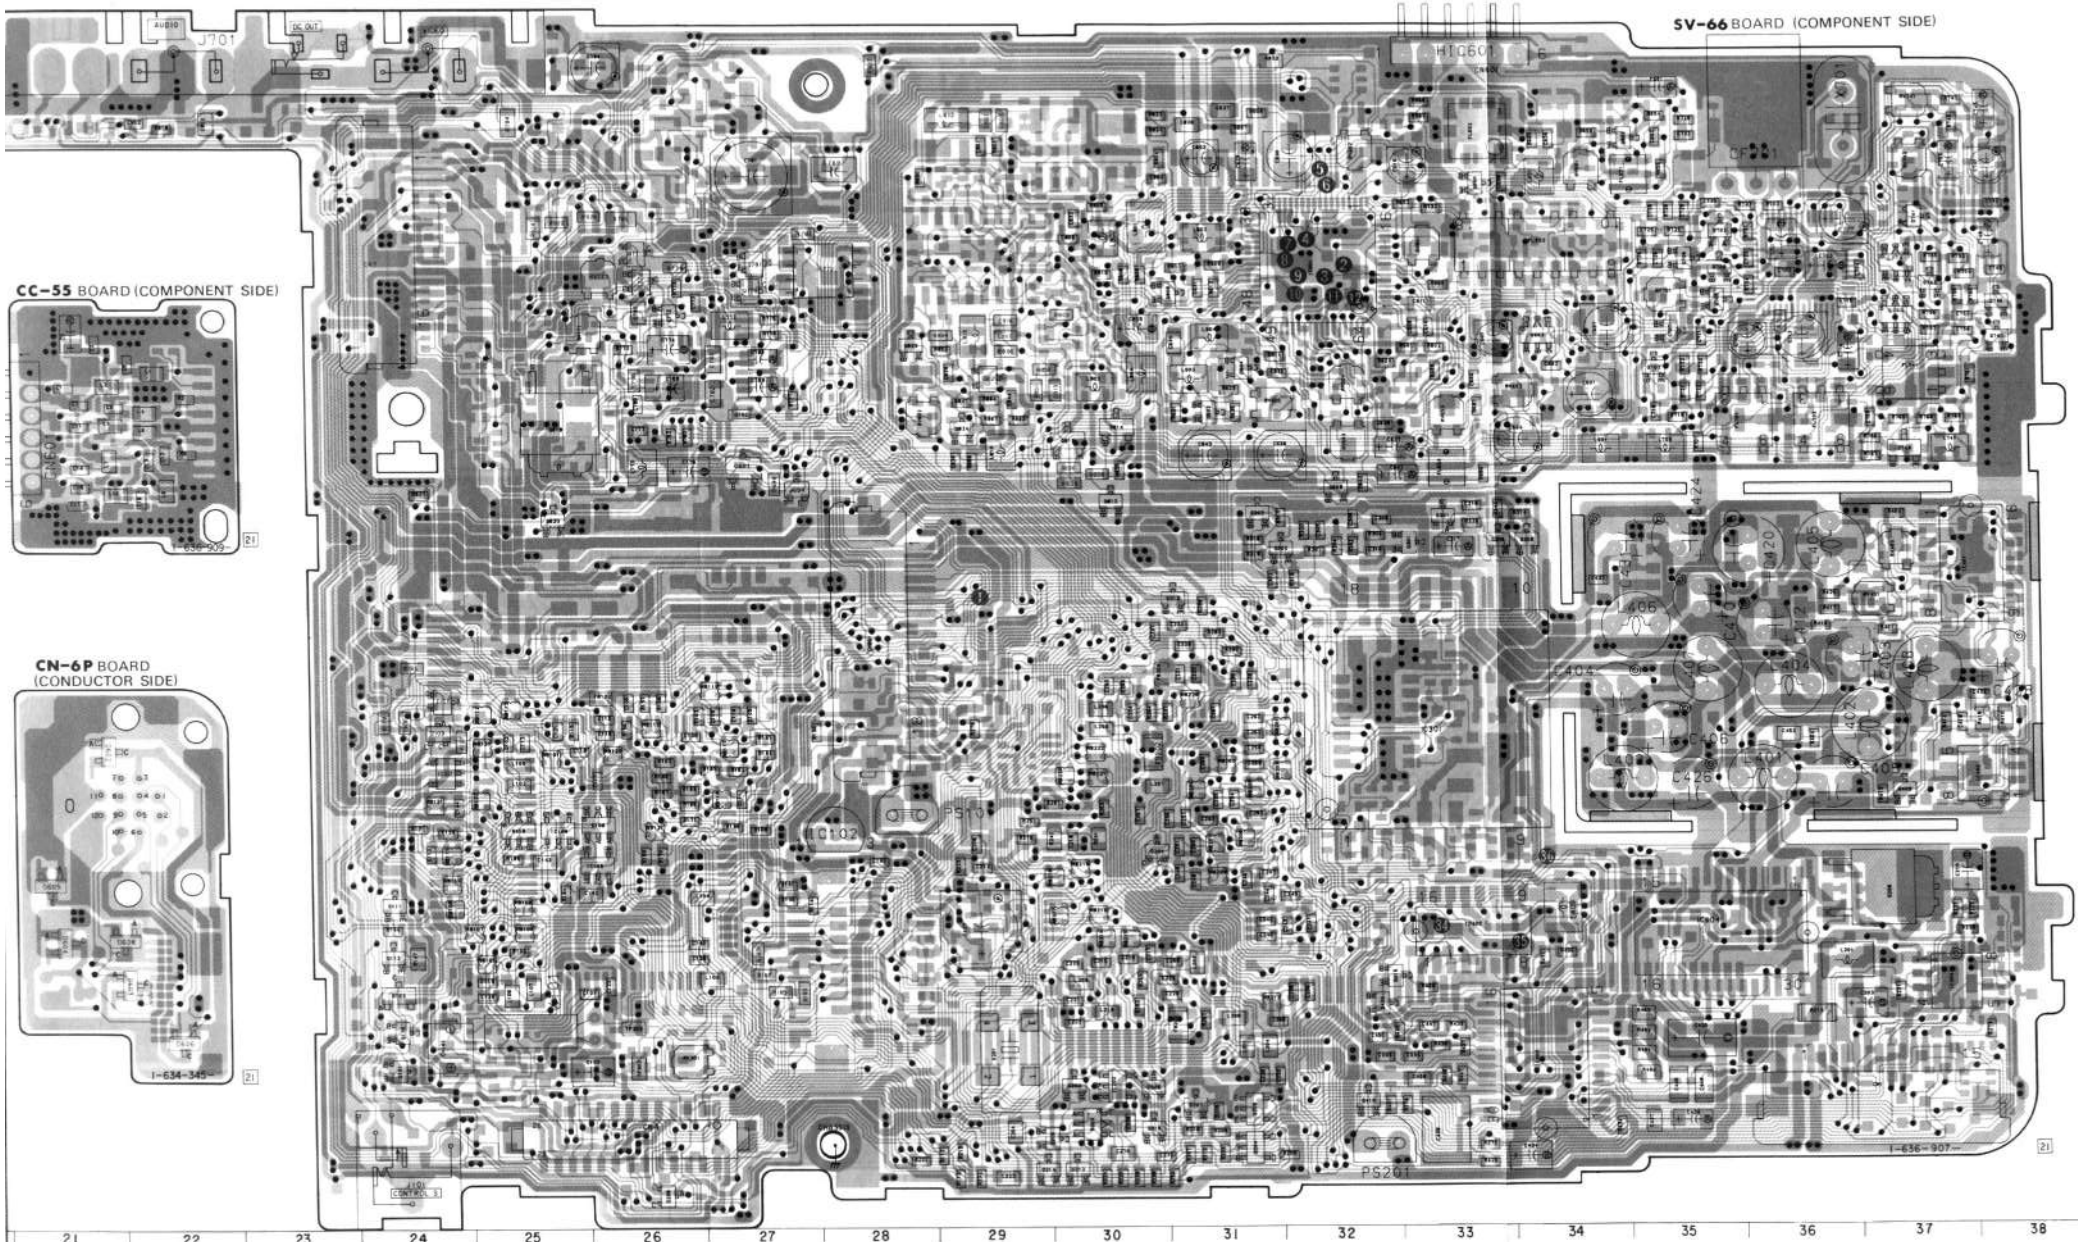


CC-55 BOARD (COMPONENT SIDE)

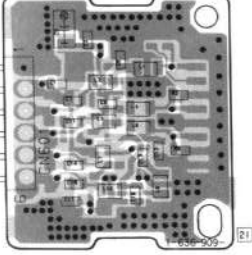

CN-6P BOARD (CONDUCTOR SIDE)

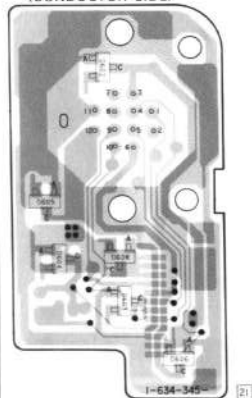

SV-66 BOARD (COMPONENT SIDE)

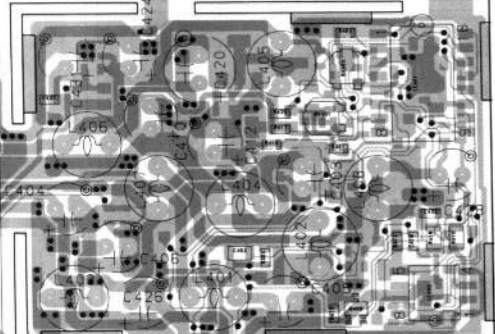


SV-66 (SERVO, SYSTEM CONTROL) PRINTED WIRING BOARD
 - Ref. No. SV-66 BOARD : 5000 series -

D902 8-719-106-44 R09, 1M-B2

IC773 8-759-234-77 TC4S66F
 IC774 8-759-234-77 TC4S66F
 IC775 8-759-234-77 TC4S66F


Q208 8-729-820-46 2SB1202FAS
 Q209 8-729-905-35 2SC4081-R
 Q210 8-729-403-24 XN4210

Q410 8-729-805-25 2SB1121-T-TD
 Q411 8-729-805-27 2SB1121-U
 Q412 8-729-805-25 2SB1121-T-TD
 Q413 8-729-805-27 2SB1121-U
 Q414 8-729-805-25 2SB1121-T-TD
 Q415 8-729-805-27 2SB1121-U

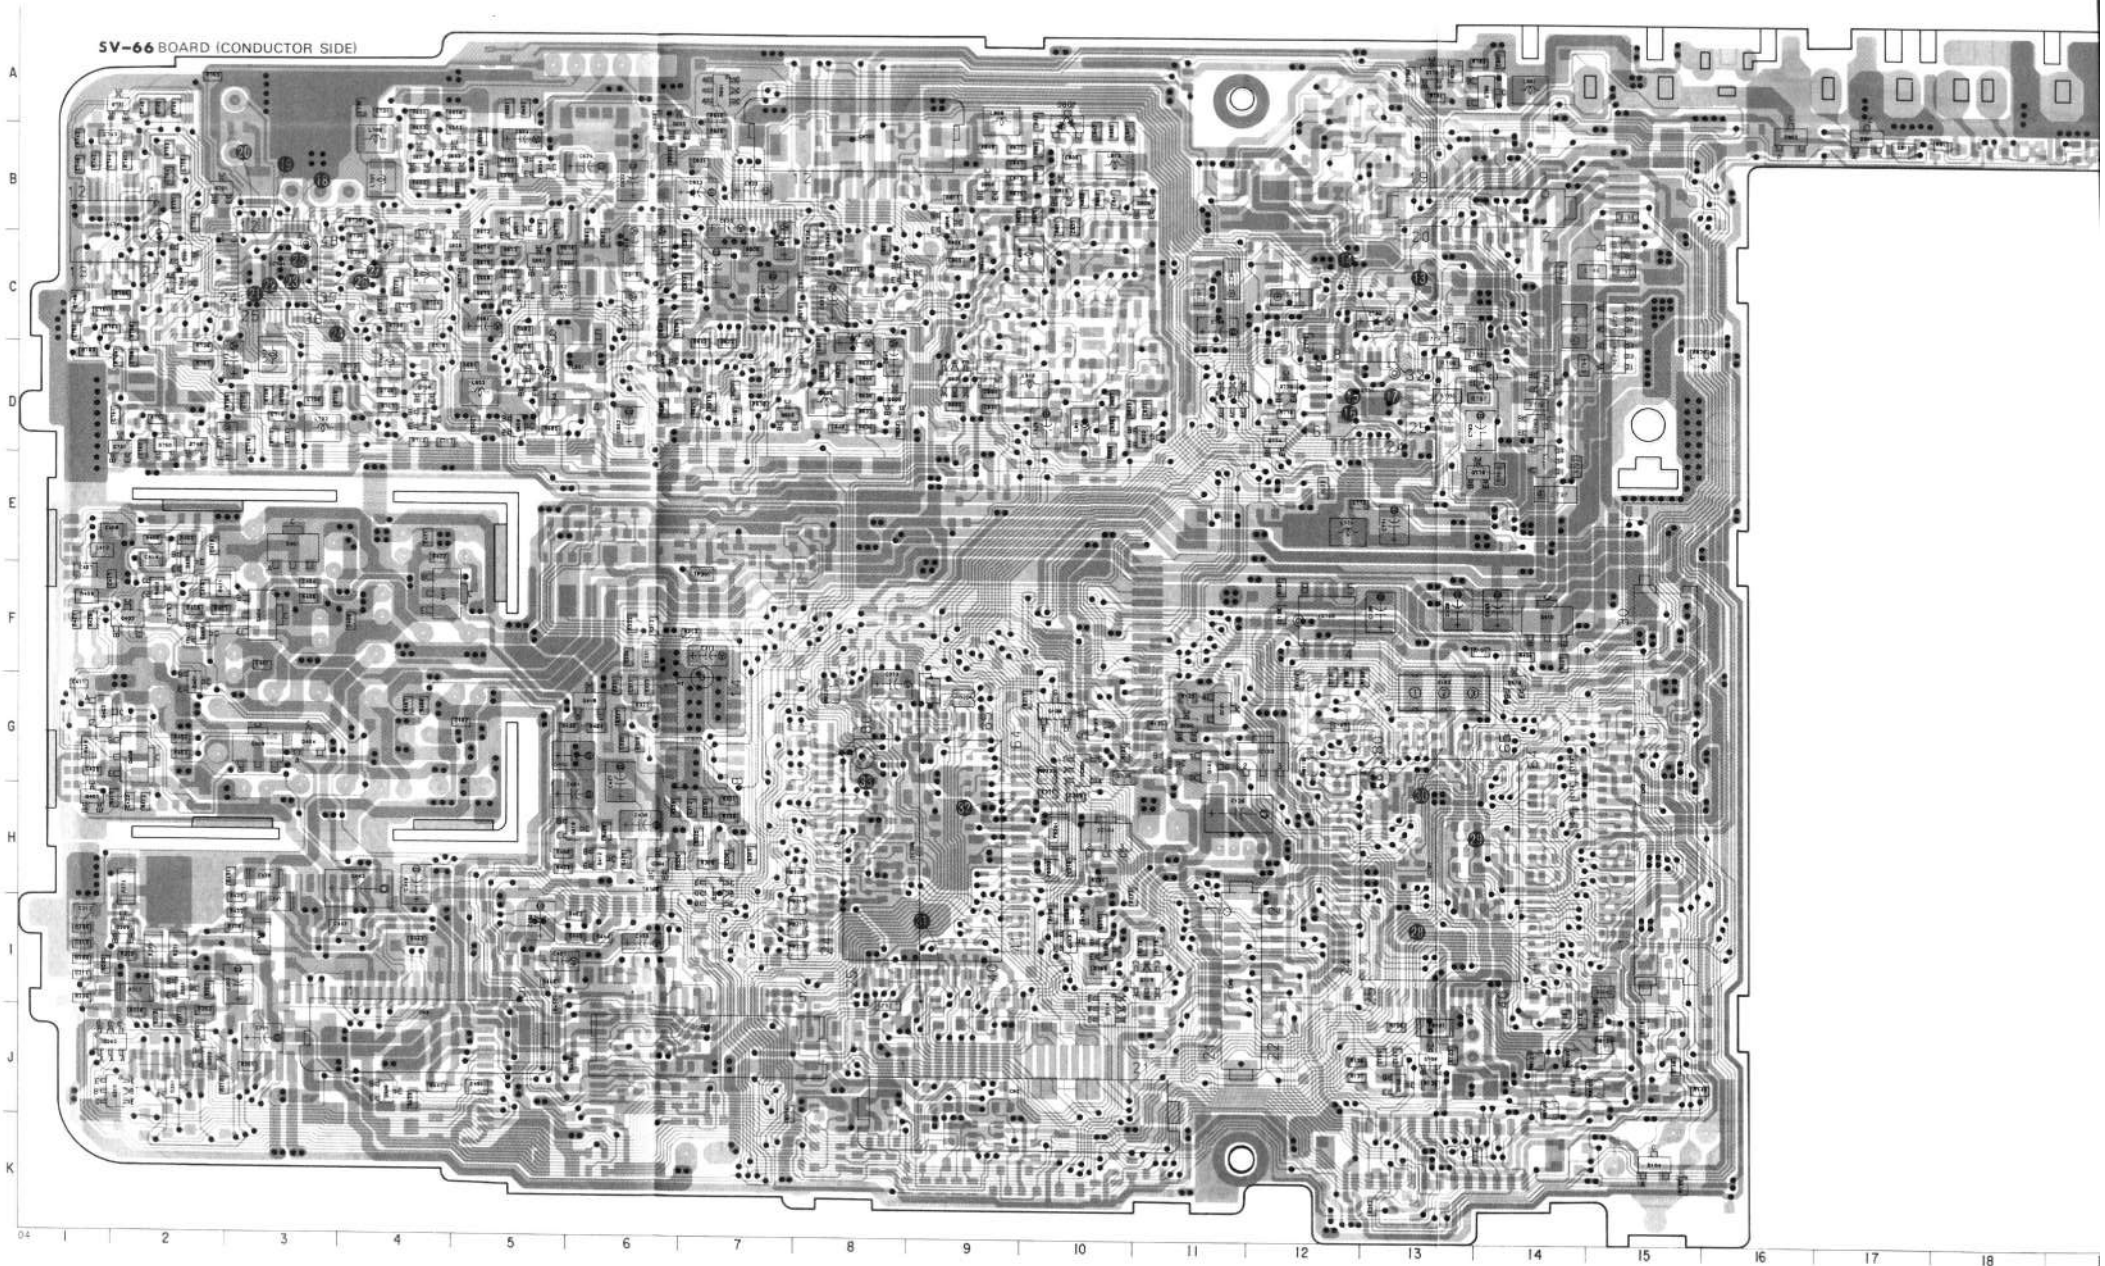

(See page 76.)

(See page 109)

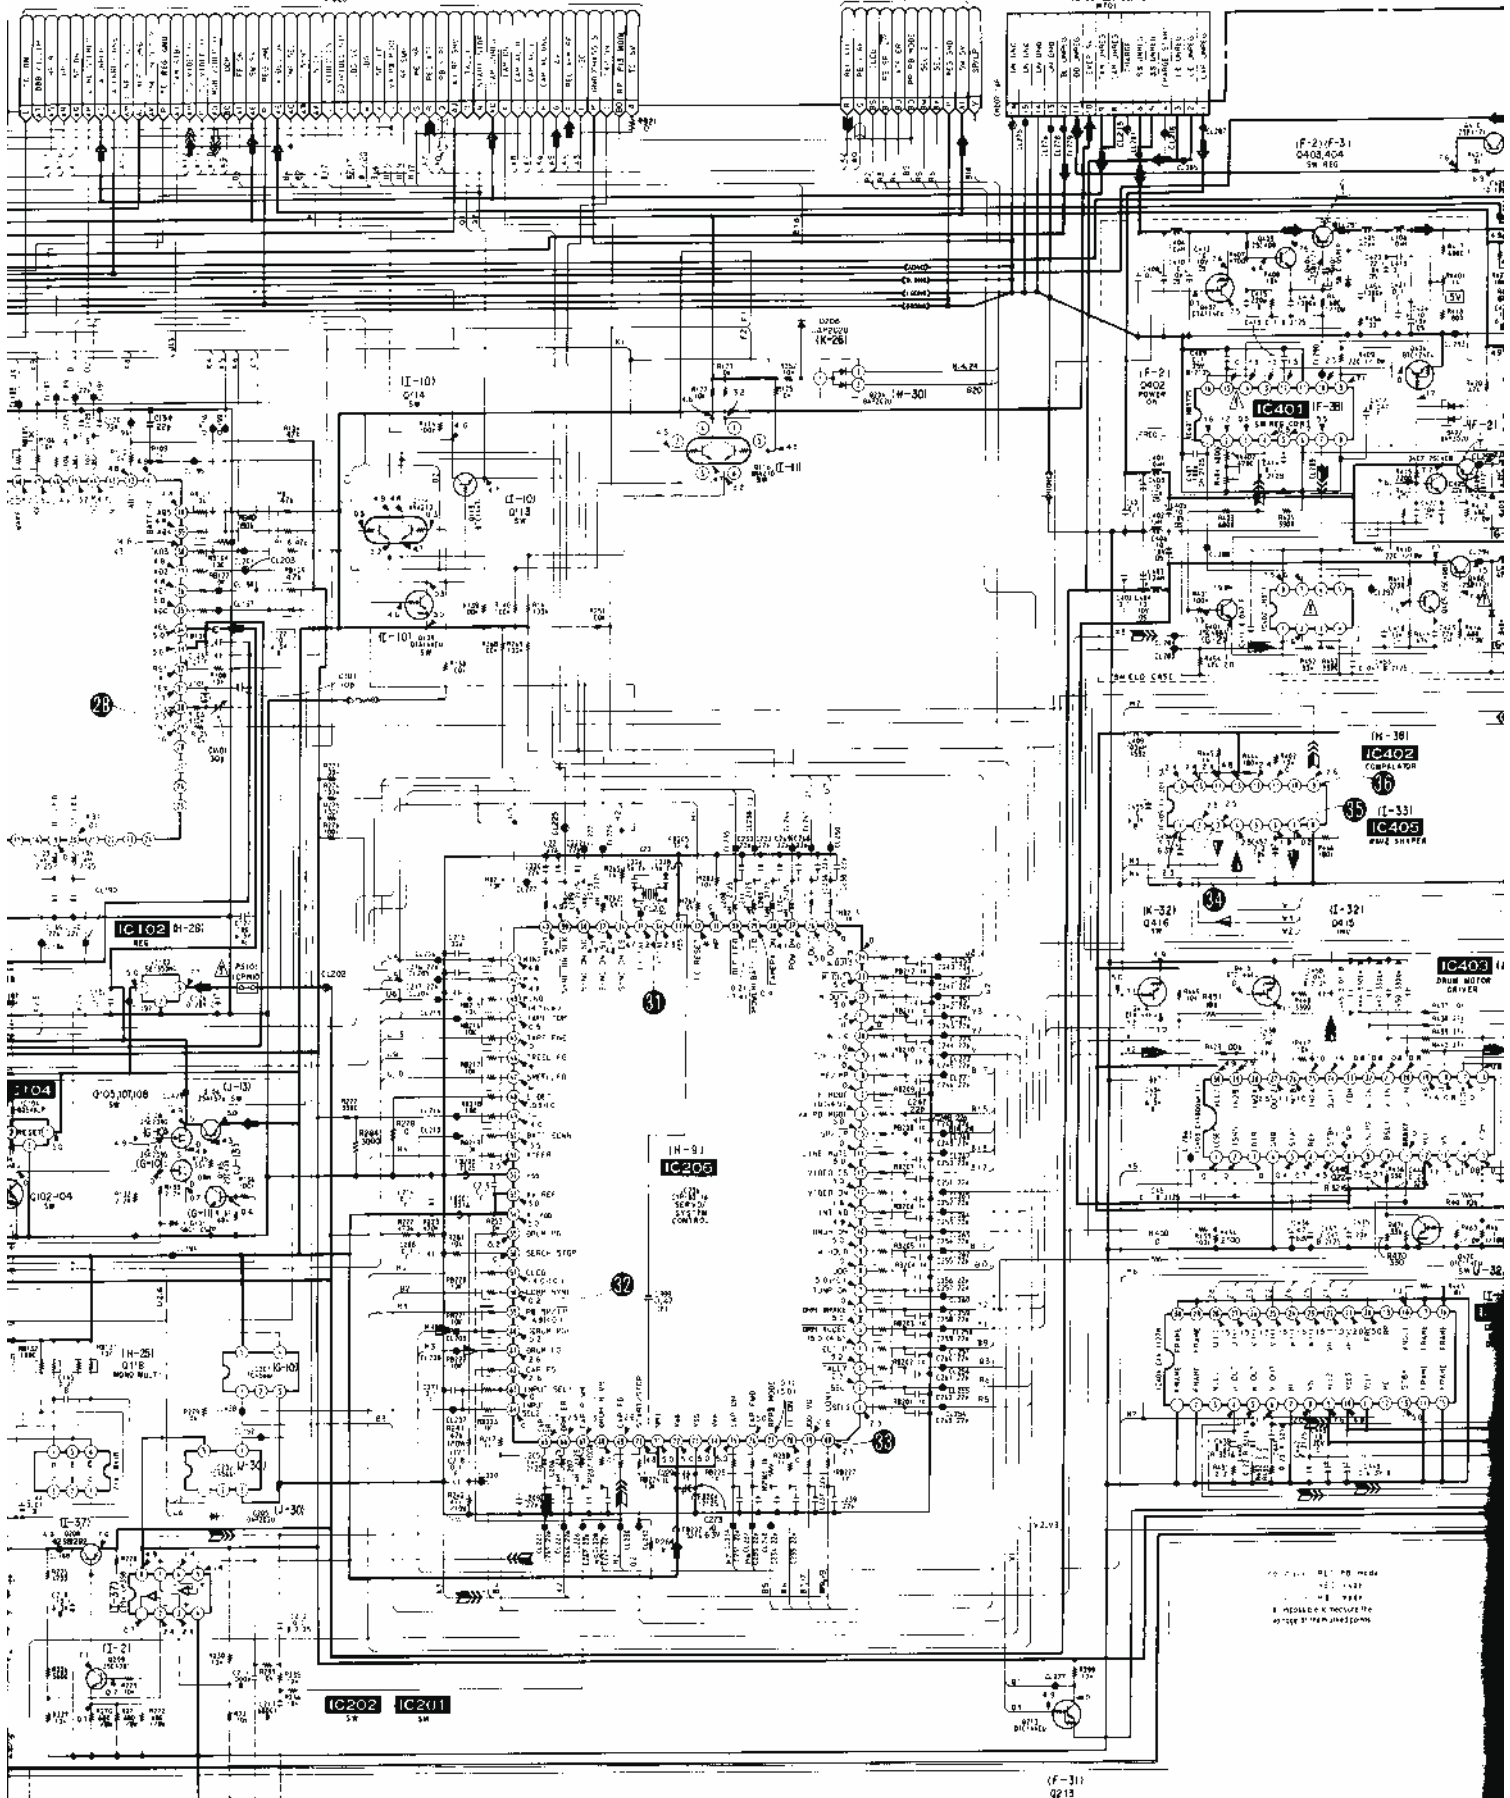


1. ALL PARTS ARE TO BE NEW UNLESS OTHERWISE SPECIFIED.
 2. RESISTOR VALUES ARE IN OHMS UNLESS OTHERWISE SPECIFIED.
 3. CAPACITOR VALUES ARE IN FARADS UNLESS OTHERWISE SPECIFIED.

Q208 200 5V 100
IC204
 CAP TRIP AMP
 5V 100

(F-31)
Q213

(See page 76.)


(See page 109)

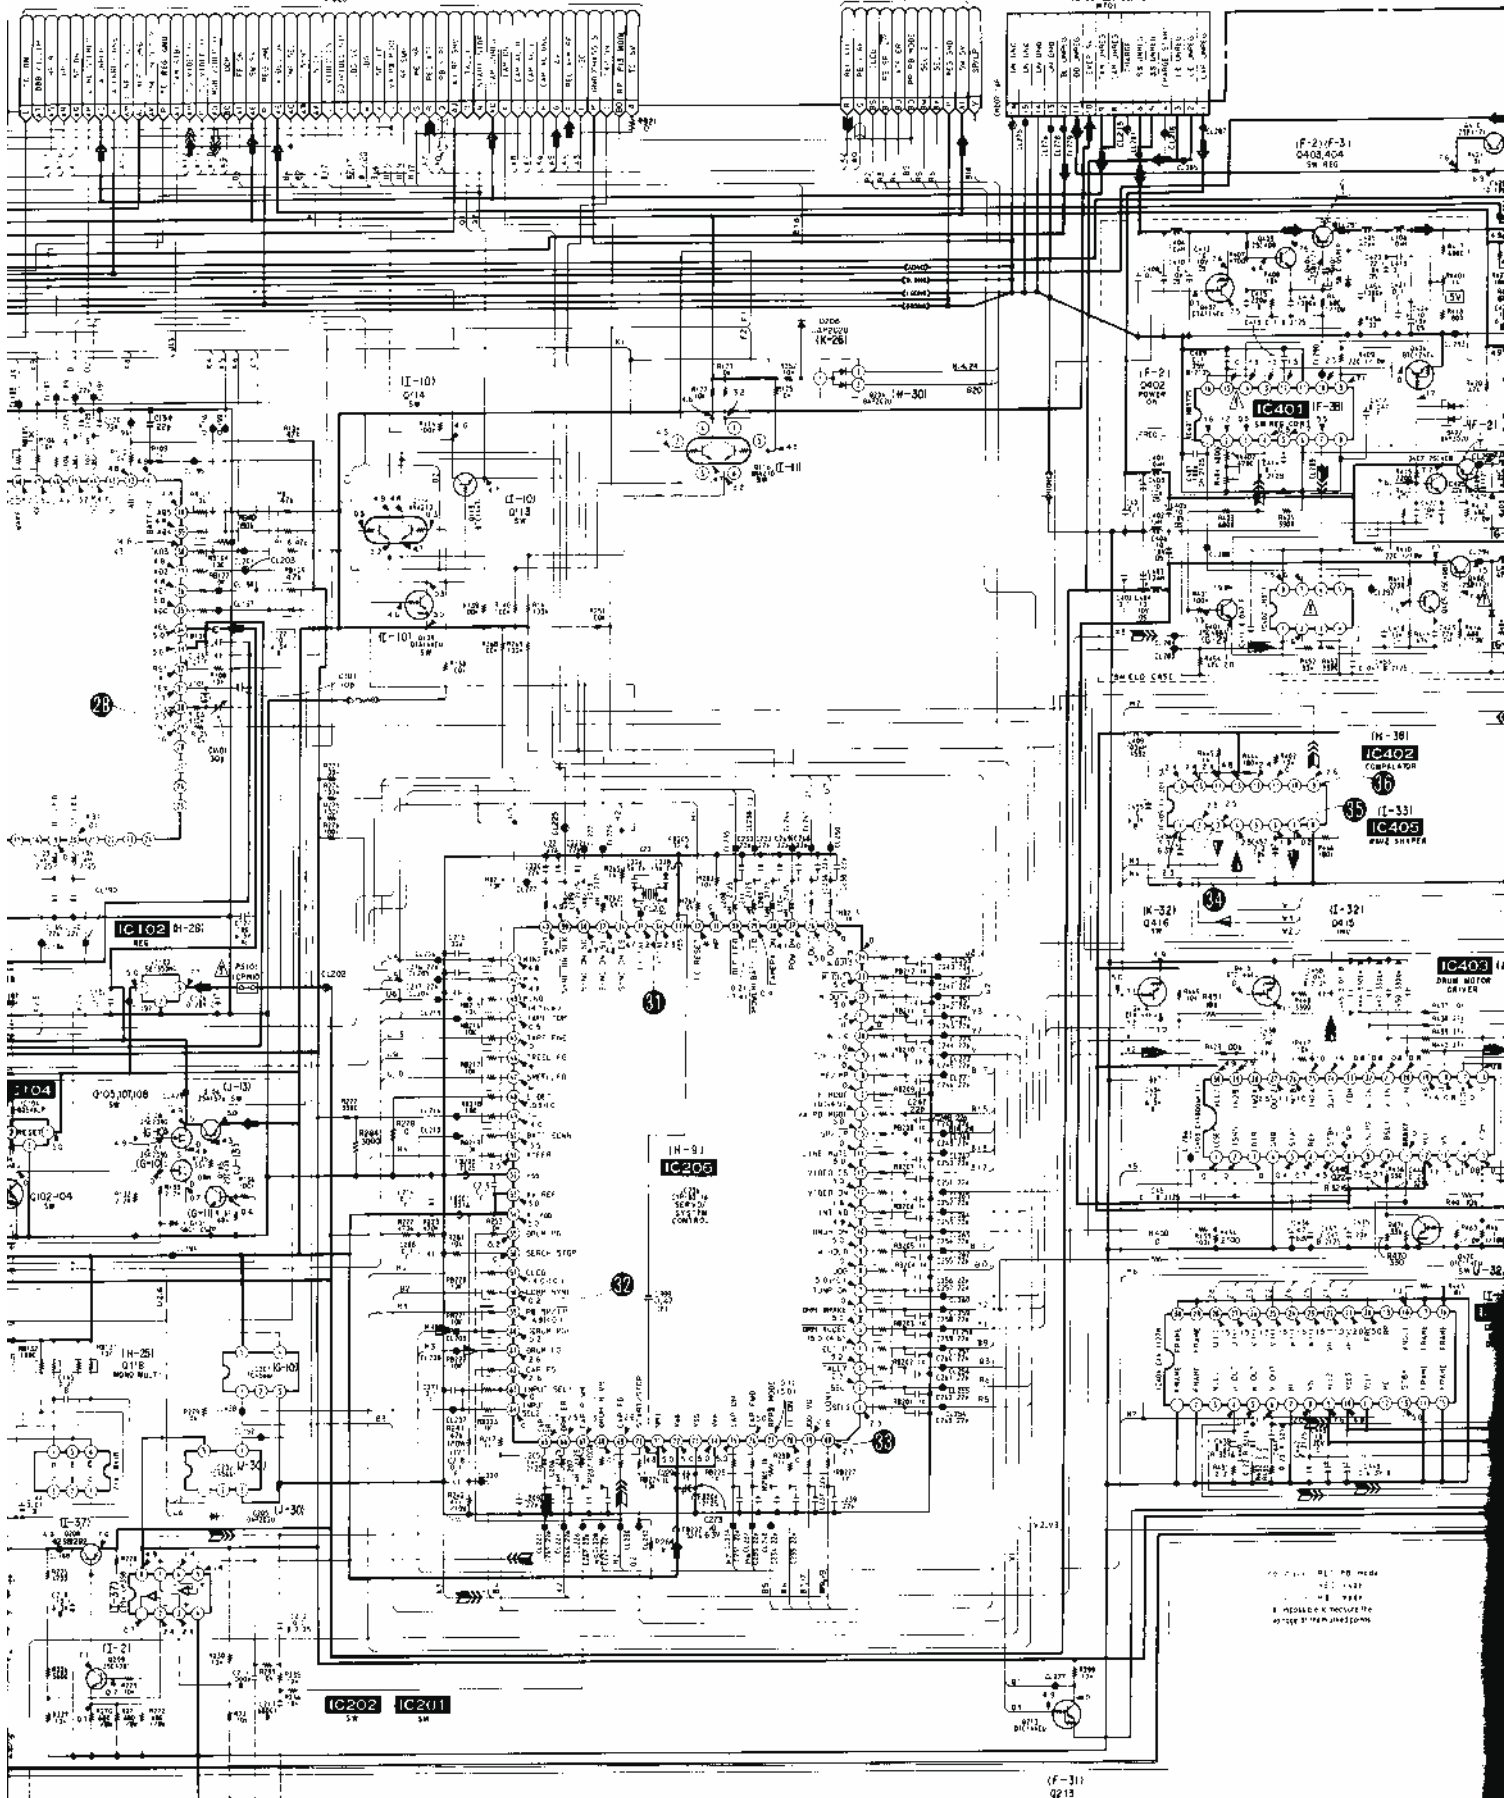

Q208 209 IC204 CAP TRIP AMP 5V PCC

(F-31) Q213

AU-93 (AFM, SECAM-PAL CONVERSION) SCHEMATIC DIAGRAM
 - Ref. No. AU-93 BOARD : 7000 series -

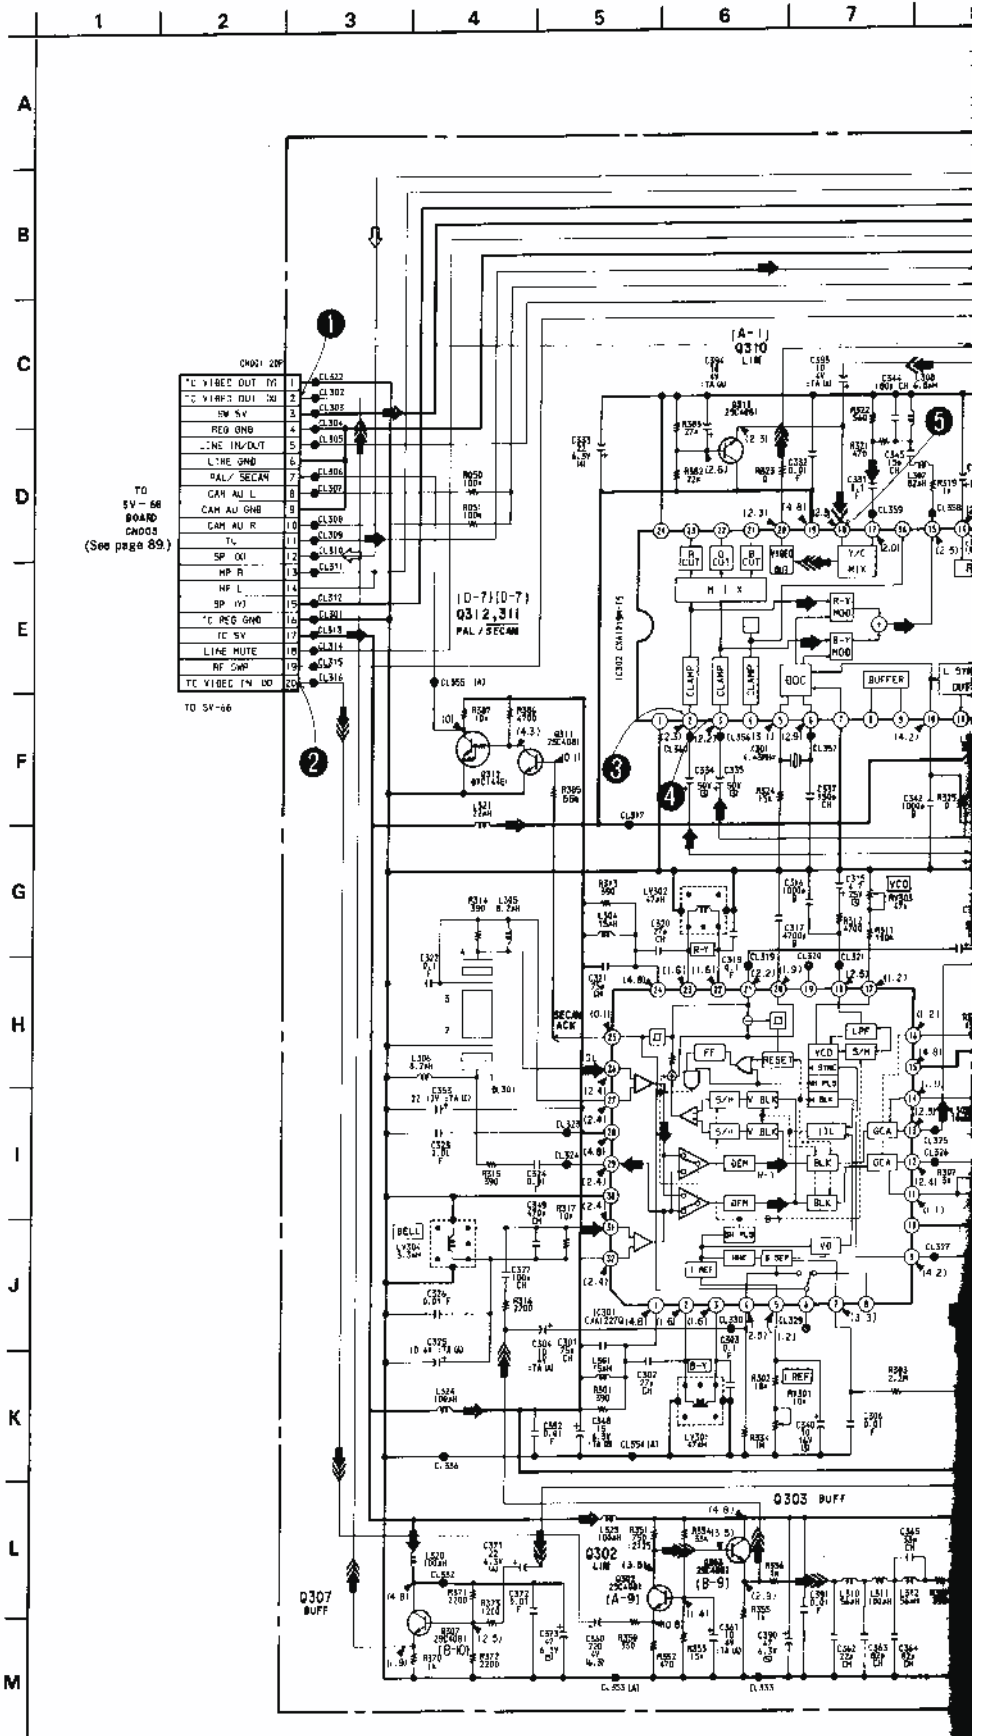

TO
SV-58
BOARD
CNDOS
(See page 89.)


| | | |
|------------------|----|-------|
| *C VIBED OUT (V) | 1 | CL322 |
| *C VIBED OUT (O) | 2 | CL302 |
| SV SV | 3 | CL305 |
| REG GND | 4 | CL305 |
| LINE IN/OUT | 5 | CL305 |
| LINE GND | 6 | CL305 |
| PAL/SECAM | 7 | CL305 |
| CAN AU L | 8 | CL305 |
| CAN AU GNB | 9 | CL305 |
| CAN AU R | 10 | CL305 |
| TC | 11 | CL305 |
| SP OUT | 12 | CL311 |
| HP R | 13 | CL311 |
| HP L | 14 | CL312 |
| SP (V) | 15 | CL311 |
| *C REG GND | 16 | CL313 |
| TC SV | 17 | CL314 |
| LINE MUTE | 18 | CL315 |
| RF SWP | 19 | CL315 |
| TC VIBED IN (O) | 20 | CL316 |

TO SV-66

- Reference voltage value
- The following two types of extension harness are required to measure the voltage of the AU-93 board
- 20P extension harness (J-6082-111.A)
- 22P extension harness (J-6082-112.A)

• Signal path

| | |
|-----|--------------|
| | AUDIO Signal |
| REC | → |
| PB | ⇨ |

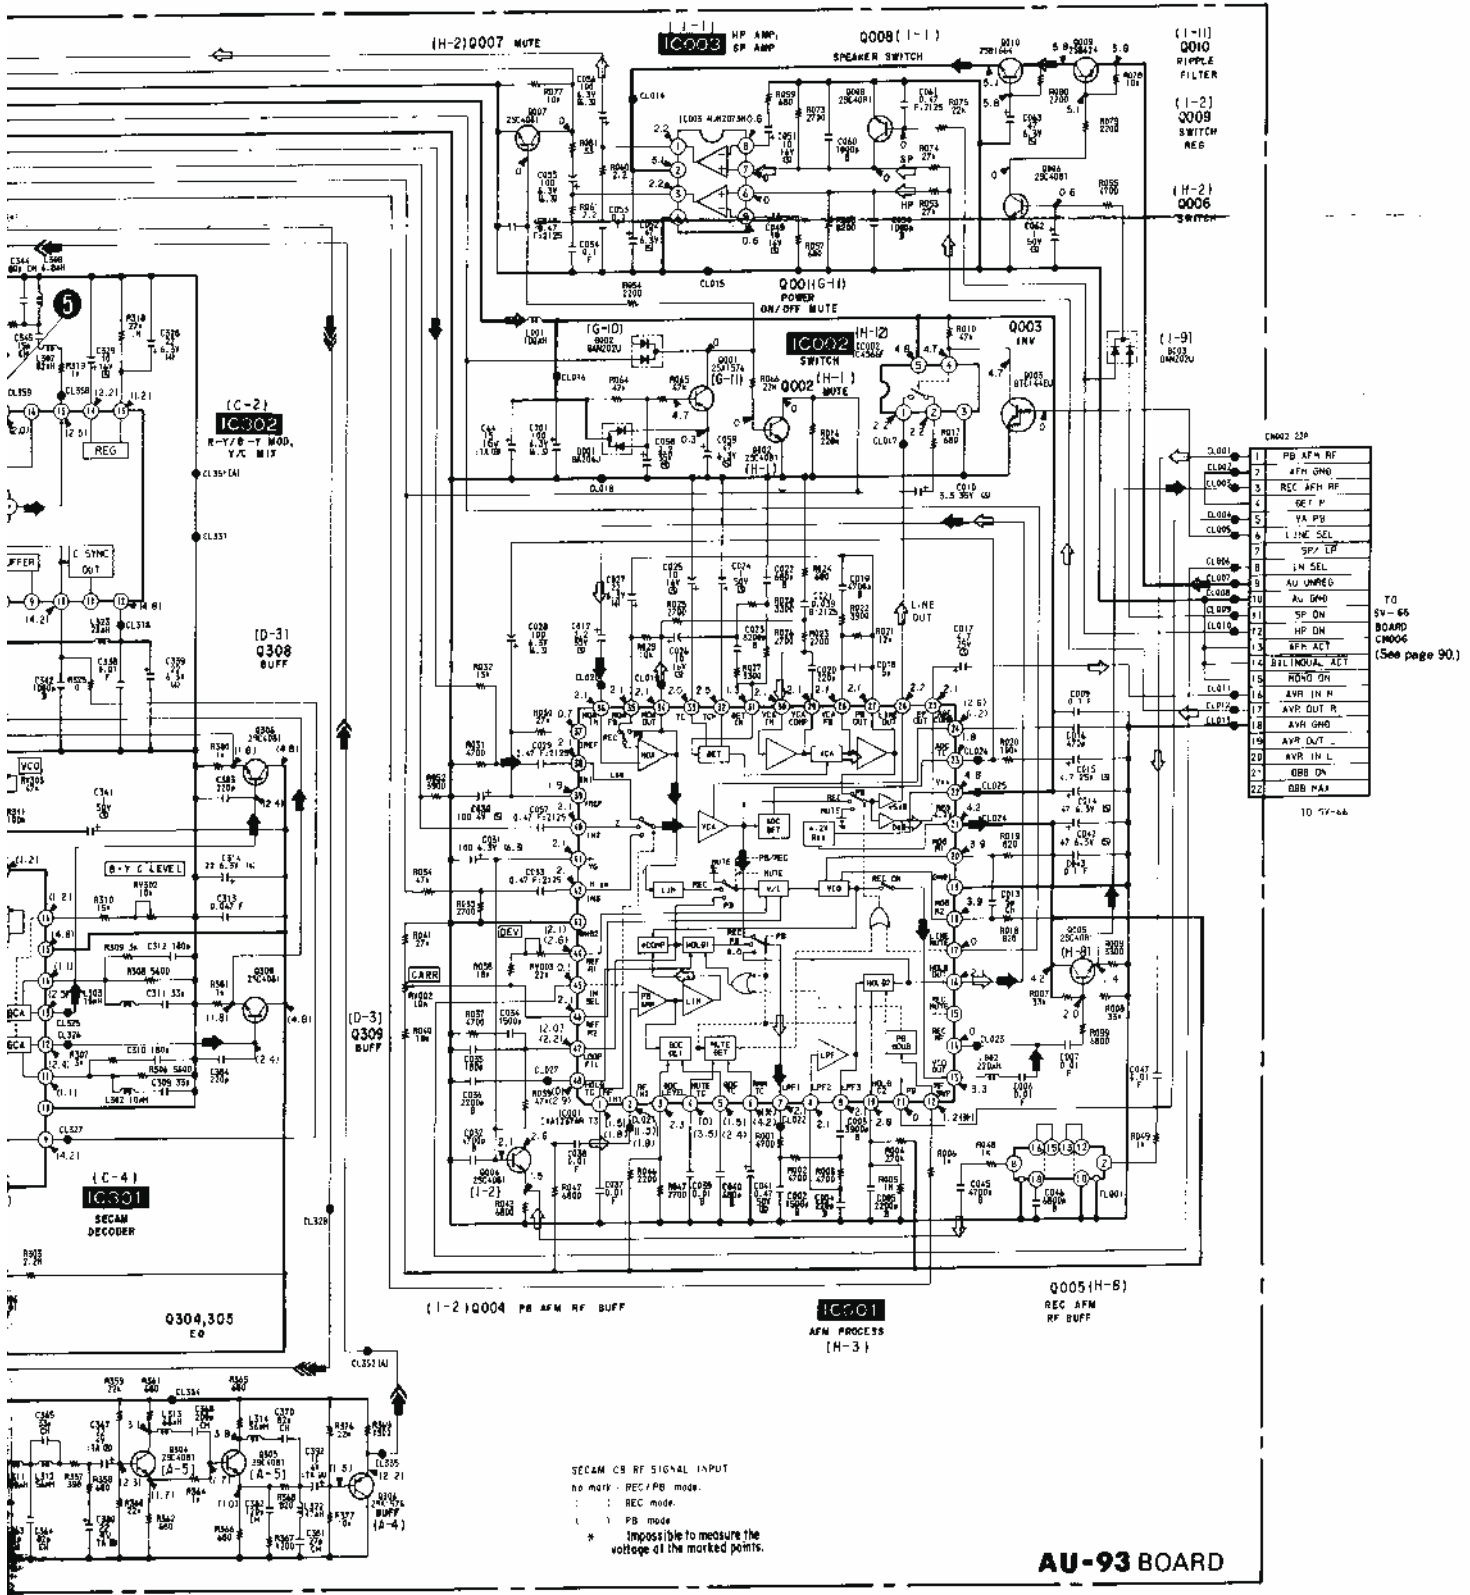

(1-1) Q010
RIPPLE
FILTER

(1-2) Q008
SWITCH
REG

(H-2) Q006
SWITCH

(H-1) Q003
INV

(H-1) Q002
MUTE

CM002 5P

| | |
|----|----------------|
| 1 | PB AFM RF |
| 2 | AFM GND |
| 3 | REC AFM RF |
| 4 | SET P |
| 5 | PA PB |
| 6 | LINE SEL |
| 7 | SPZ LP |
| 8 | LN SEL |
| 9 | AU UNREG |
| 10 | AU GND |
| 11 | SP DN |
| 12 | HP DN |
| 13 | REF ACT |
| 14 | INDIVIDUAL ACT |
| 15 | REC ON |
| 16 | AVR IN H |
| 17 | AVR OUT R |
| 18 | AVR GND |
| 19 | AVR OUT L |
| 20 | AVR IN L |
| 21 | ORB DN |
| 22 | ORB PWR |


TO
SV-65
BOARD
CM006
(See page 90)

10 77-64


SECAM CB RF SIGNAL INPUT
no mark - REC/PB mode.
: : REC mode.
: : PB mode

* Impossible to measure the voltage at the marked points.

J-93BOARD(CONDUCTOR SIDE)

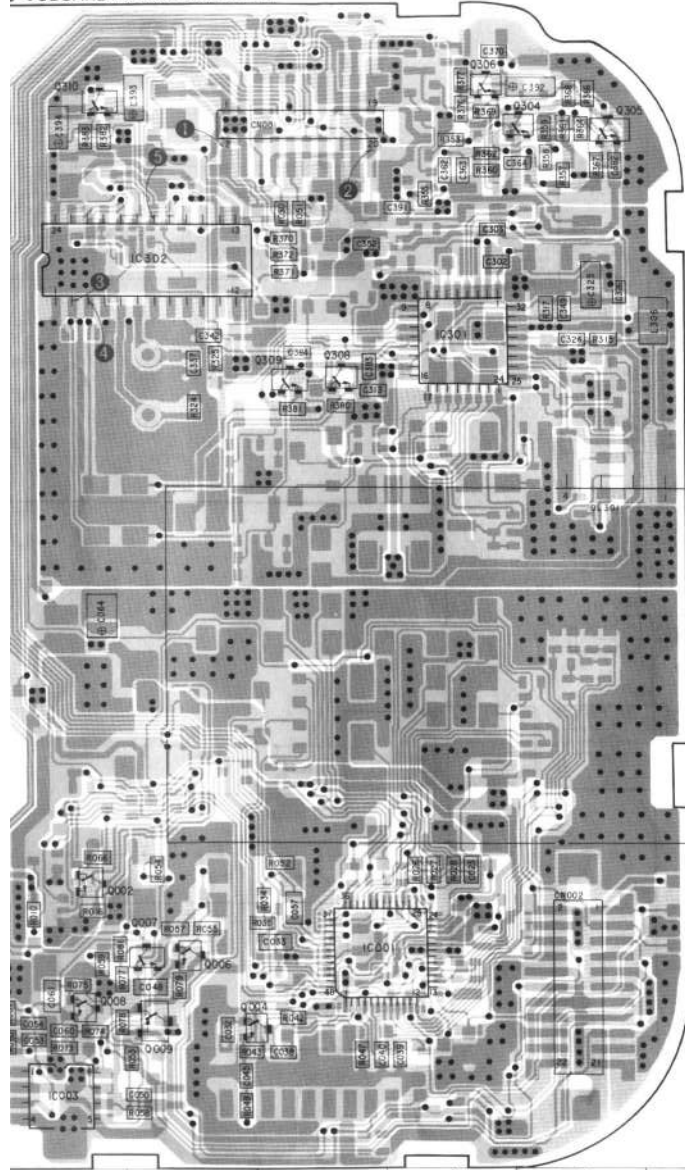

AU-93 BOARD (COMPONENT SIDE)

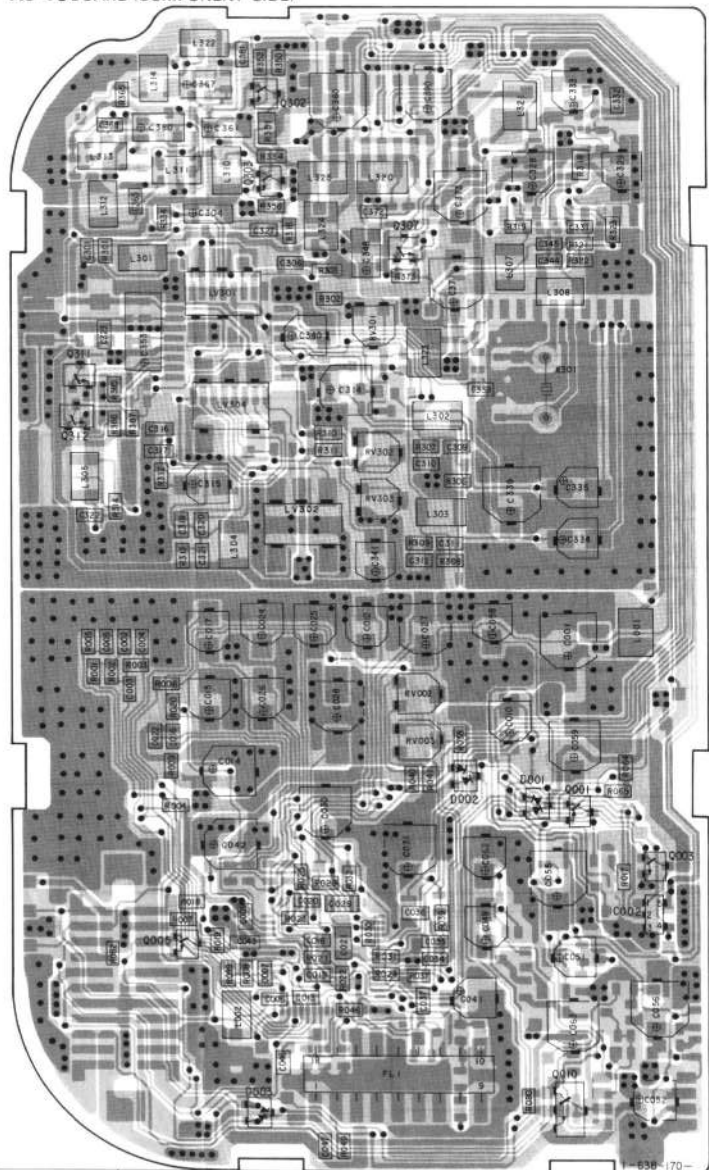

< DIODE >

| | | |
|------|--------------|---------|
| D001 | 8-719-941-23 | DA204U |
| D002 | 8-719-941-86 | DAN202U |
| D003 | 8-719-941-86 | DAN202U |

< IC >


| | | |
|-------|--------------|-----------|
| IC001 | 8-752-033-01 | CXA1237AR |
| IC002 | 8-759-234-77 | TC4366F |
| IC003 | 8-759-701-02 | NJM2073M |
| IC301 | 8-752-035-00 | CXA1227Q |
| IC302 | 8-752-034-04 | CXA1219M |

< TRANSISTOR >

| | | |
|------|--------------|--------------|
| Q001 | 8-729-905-23 | 2SA1576-R |
| Q002 | 8-729-905-35 | 2SC4081-R |
| Q003 | 8-729-905-18 | DTC144EU |
| Q004 | 8-729-905-35 | 2SC4081-R |
| Q005 | 8-729-905-35 | 2SC4081-R |
| Q006 | 8-729-905-35 | 2SC4081-R |
| Q007 | 8-729-905-35 | 2SC4081-R |
| Q008 | 8-729-905-35 | 2SC4081-R |
| Q009 | 8-729-141-48 | 2S8624-BV345 |
| Q010 | 8-729-920-85 | 2SD1664-OR |


| | | |
|------|--------------|-----------|
| Q302 | 8-729-905-35 | 2SC4081-R |
| Q303 | 8-729-905-35 | 2SC4081-R |
| Q304 | 8-729-905-35 | 2SC4081-R |
| Q305 | 8-729-905-35 | 2SC4081-R |
| Q306 | 8-729-905-23 | 2SA1576-R |
| Q307 | 8-729-905-35 | 2SC4081-R |
| Q308 | 8-729-905-35 | 2SC4081-R |
| Q309 | 8-729-905-35 | 2SC4081-R |
| Q310 | 8-729-905-35 | 2SC4081-R |
| Q311 | 8-729-905-35 | 2SC4081-R |
| Q312 | 8-729-905-18 | DTC144EU |


AU-93 BOARD
 SECAM CB RF SIGNAL INPUT

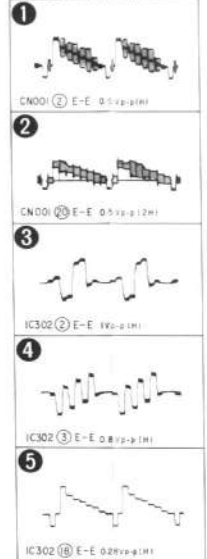

SB-3P (FUNCTION SW), TU-126 (TUNER, VIF, SIF, DC/DC CONVERTER) PRINTED WIRING BOARDS
 — Ref. No. SB-3P and TU-126 BOARDS : 6000 series —


| | | |
|-------|--------------|----------------|
| | | < DIODE > |
| D001 | 8-719-400-18 | MA152WK |
| D501 | 8-719-400-18 | MA152WK |
| D502 | 8-719-400-18 | MA152WK |
| D503 | 8-719-400-18 | MA152WK |
| D504 | 8-719-400-18 | MA152WK |
| D601 | 8-719-106-44 | R09, 1M-B2 |
| | | < IC > |
| IC001 | 8-759-504-58 | TDA3842T |
| IC002 | 8-759-634-94 | M52018FP |
| IC005 | 8-759-998-92 | LM393D |
| IC201 | 8-759-710-86 | NJM22338M |
| IC202 | 8-759-710-86 | NJM22338M |
| IC501 | 8-759-979-50 | FA7610N |
| IC502 | 8-759-157-40 | uPC574J |
| | | < TRANSISTOR > |
| 0001 | 8-729-230-XX | 2SC2669-0Y |
| 0002 | 8-729-100-66 | 2SC1623 |
| 0003 | 8-729-901-47 | DTA143EX |
| 0004 | 8-729-901-47 | DTA143EX |
| 0005 | 8-729-901-47 | DTA143EX |
| 0006 | 8-729-901-01 | DTC144EX |
| 0007 | 8-729-901-01 | DTC144EX |
| 0008 | 8-729-216-22 | 2SA1162 |
| 0009 | 8-729-100-66 | 2SC1623 |
| 0010 | 8-729-216-22 | 2SA1162 |
| 0011 | 8-729-100-66 | 2SC1623 |
| 0012 | 8-729-901-01 | DTC144EX |
| 0013 | 8-729-901-01 | DTC144EX |
| 0014 | 8-729-901-01 | DTC144EX |
| 0015 | 8-729-100-66 | 2SC1623 |
| 0016 | 8-729-100-66 | 2SC1623 |
| Q201 | 8-729-100-66 | 2SC1623 |
| Q202 | 8-729-216-22 | 2SA1162 |
| Q204 | 8-729-901-01 | DTC144EX |
| Q501 | 8-729-421-15 | 2SD1119-0 |
| Q502 | 8-729-901-06 | DTA144EX |
| Q503 | 8-729-901-01 | DTC144EX |
| Q504 | 8-729-601-58 | 2SC3053-C |

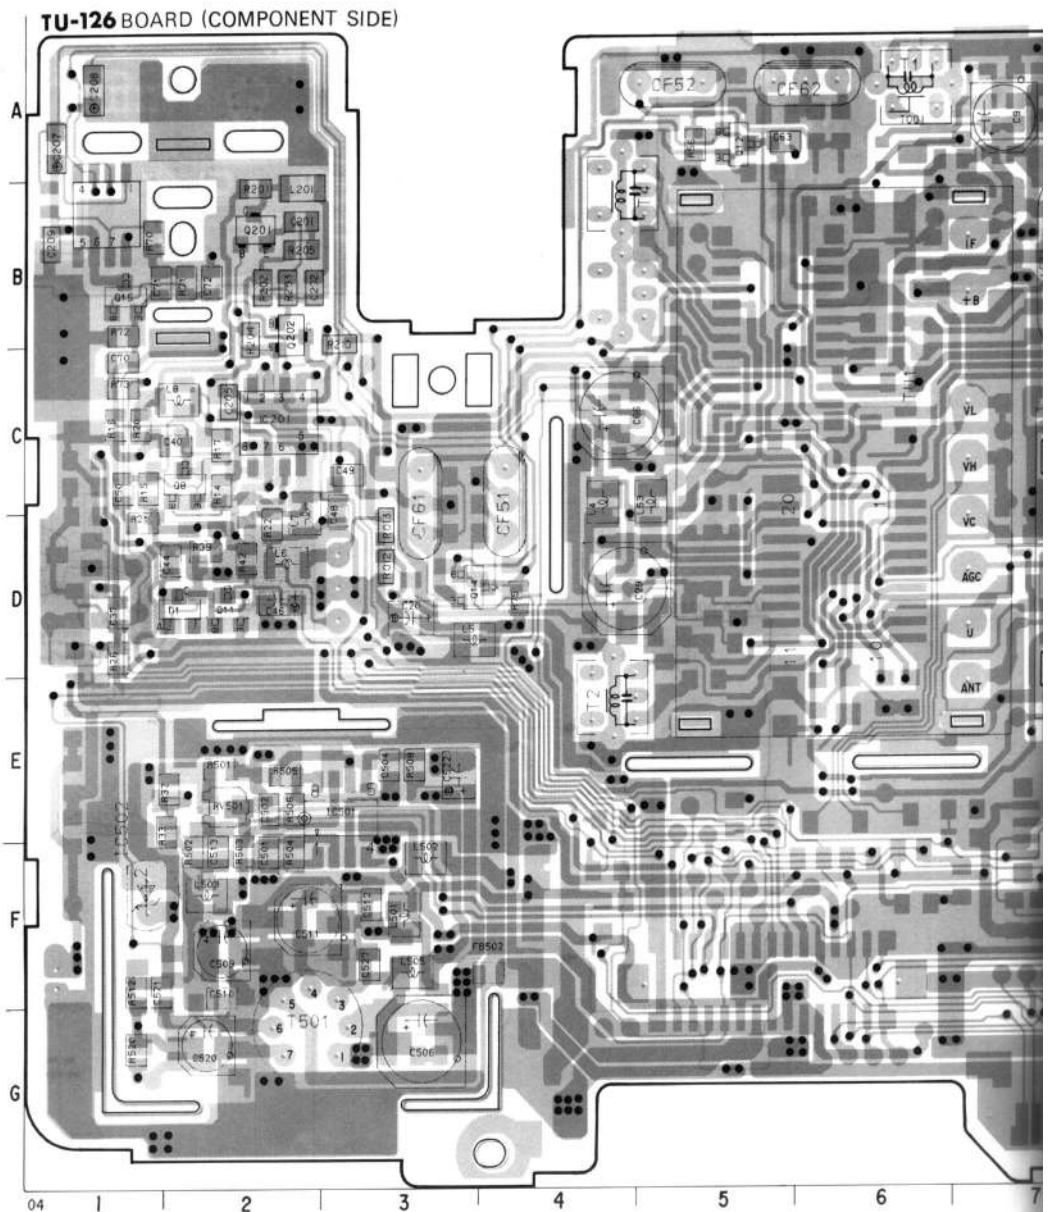

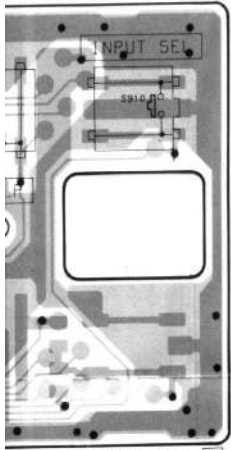

I-634-346- [11]


126BOARD (CONDUCTOR SIDE)

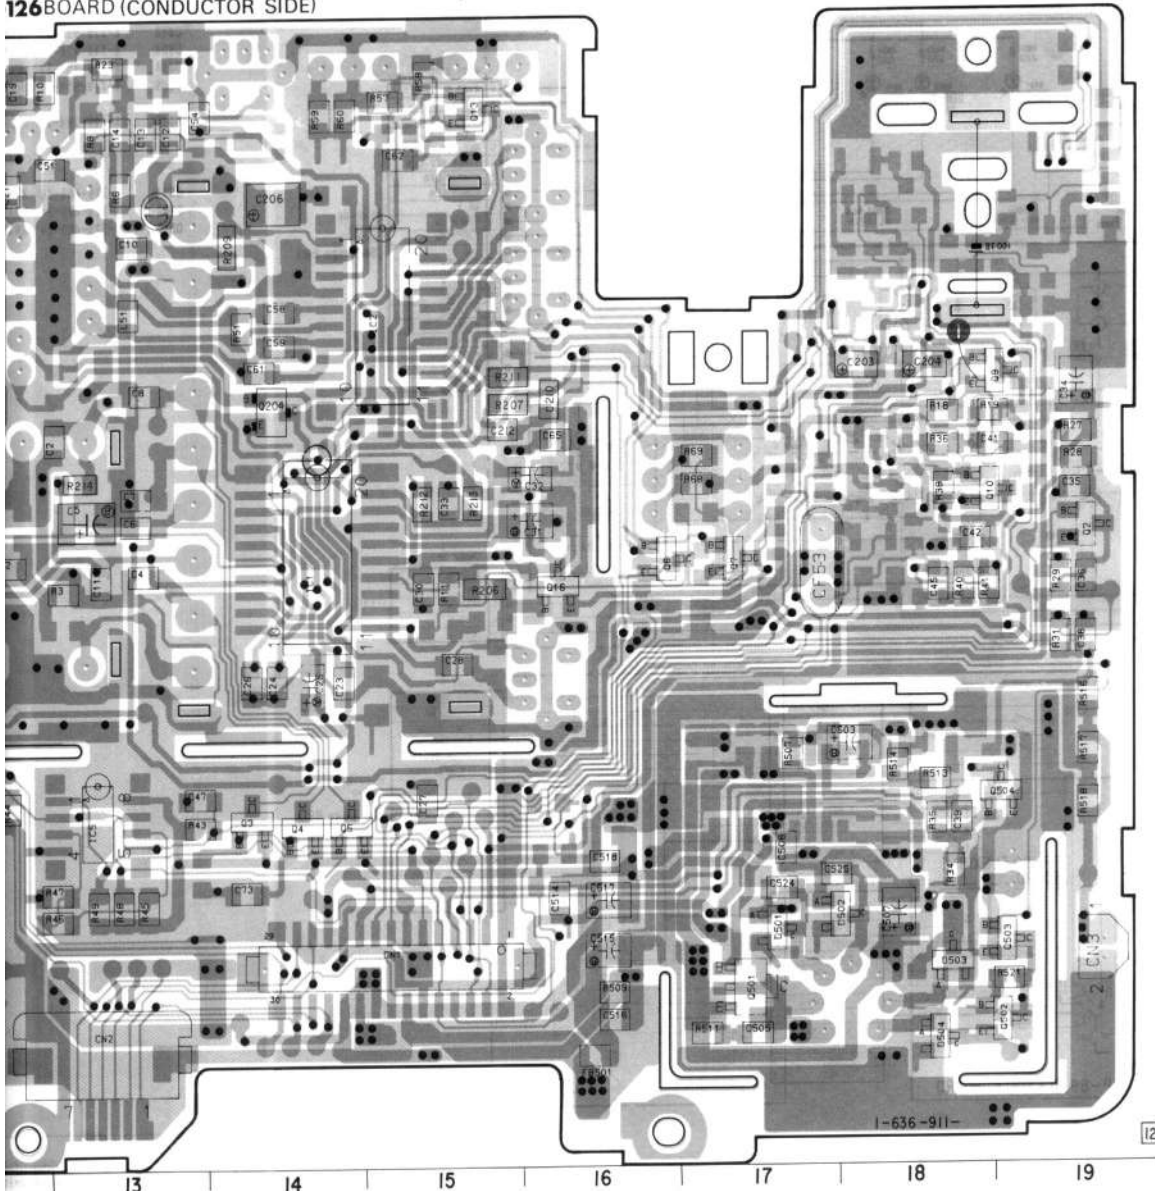

I-636-911-

[12]

DC-22P (BATT IN), KB-10P (FUNCTION SW), UC-6 (MD RELAY), FP-89 and FP-90 (MECHA DECK) PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAM
 - Ref. No. DC-22P, KB-10P and UC-6 BOARDS : 4000 series, FP-89 and FP-90 BOARDS : 8000 series -

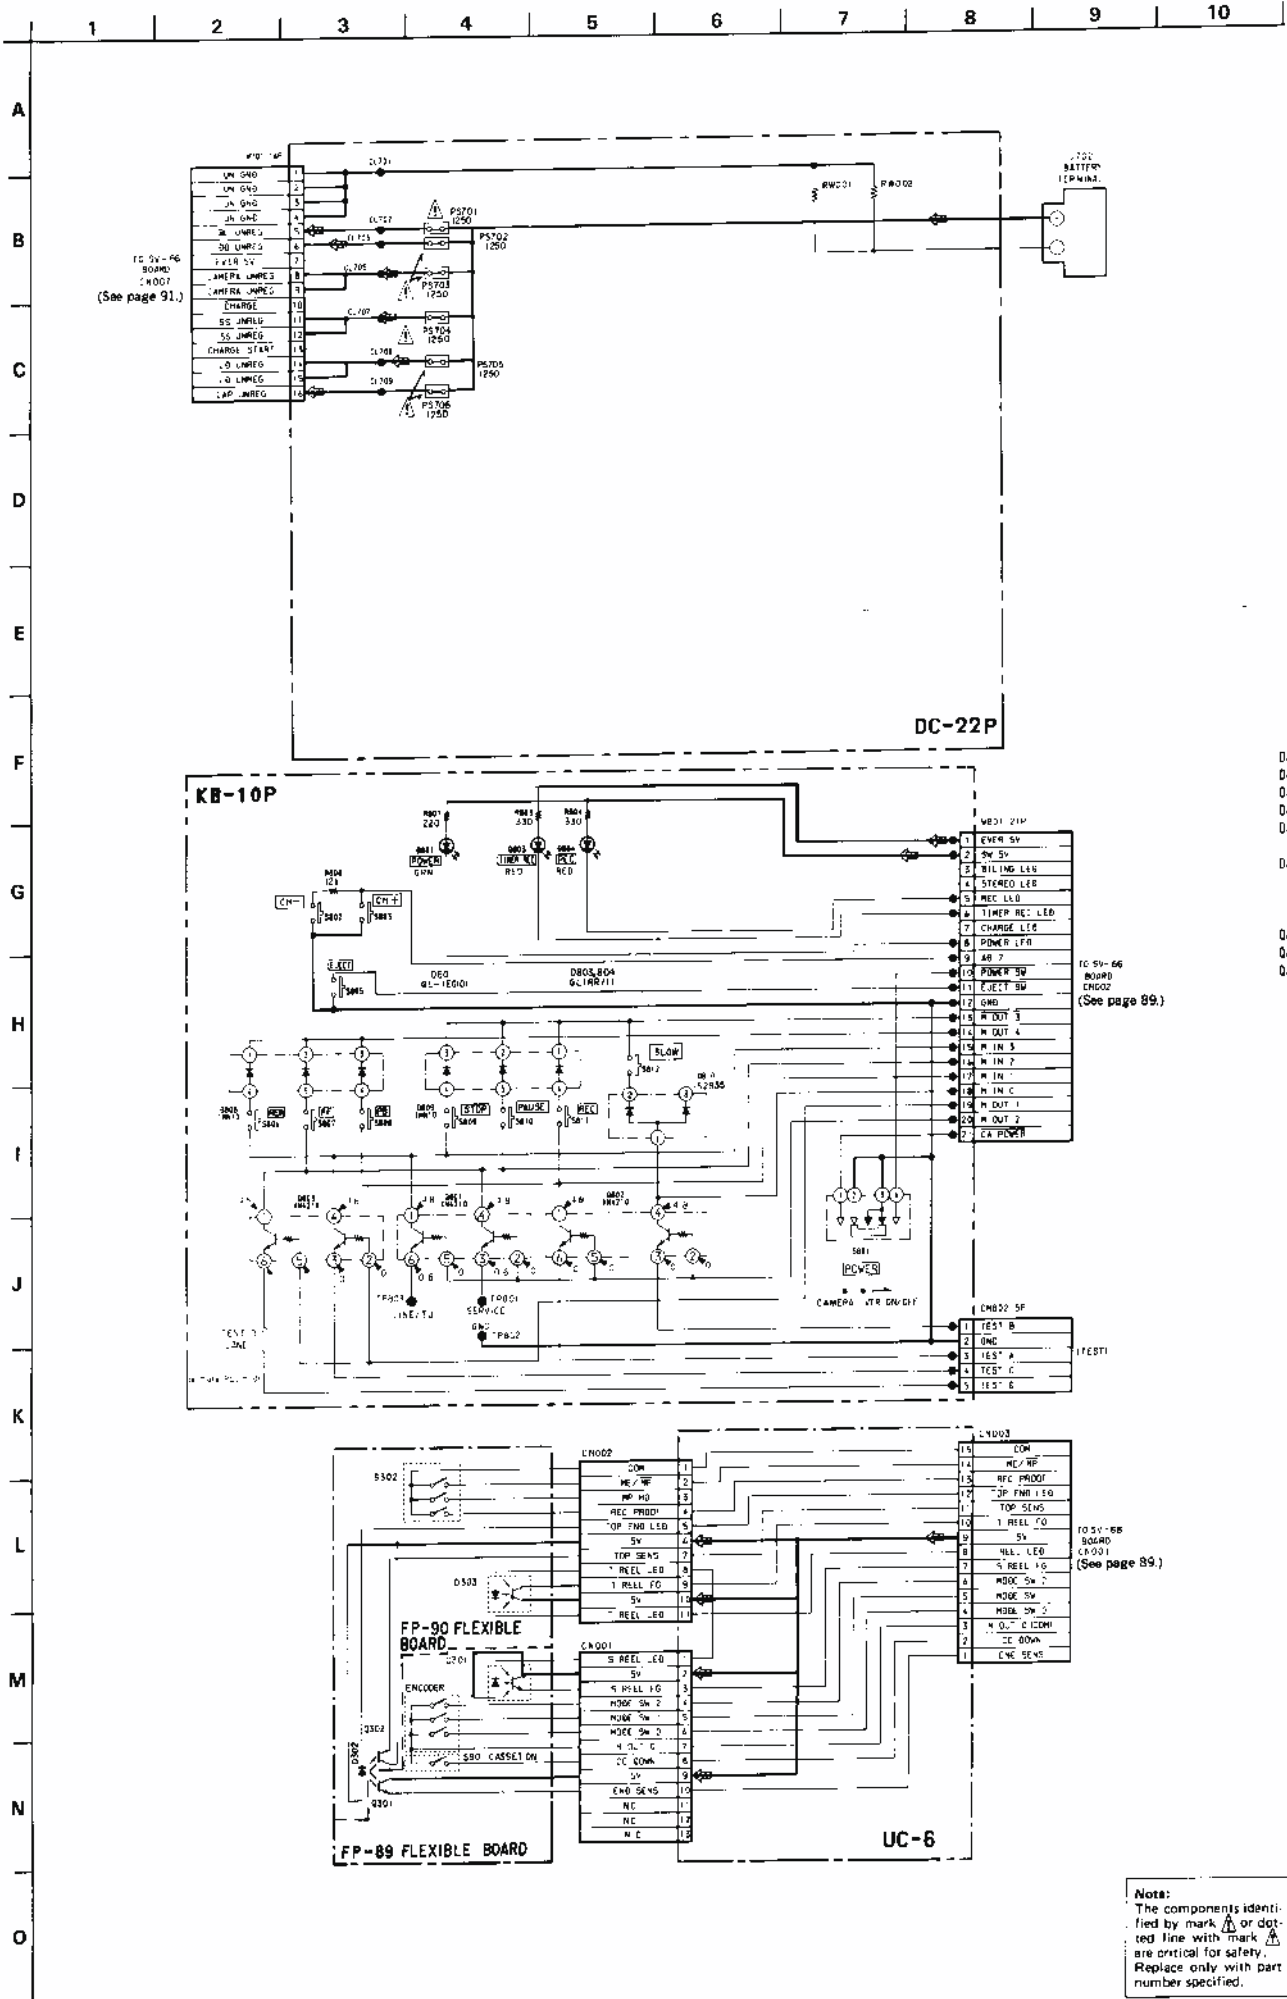


- D801 8-719-970-40 GI
- D803 8-719-918-65 GI
- D804 8-719-918-65 GI
- D808 8-719-951-22 II
- D809 8-719-951-22 II
- D810 8-719-104-34 II
- D801 8-729-403-24 X
- D802 8-729-403-24 X
- D803 8-729-403-24 X

IC 5V-66 BOARD CND02 (See page 89.)


IC 5V-66 BOARD CND01 (See page 89.)

Note:
 The components identified by mark **A** or dotted line with mark **A** are critical for safety. Replace only with part number specified.



Note:
 Les composants marqués **A** ou par une ligne pointillée avec le **A** sont critiques pour la sécurité. Ne les remplacer que par la pièce portant le numéro spécifié.

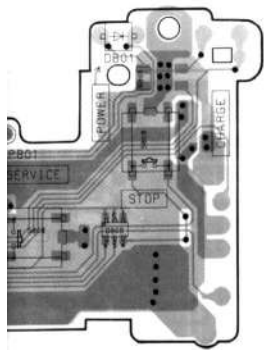

KB-TOP BOARD (CONDUCTOR SIDE)

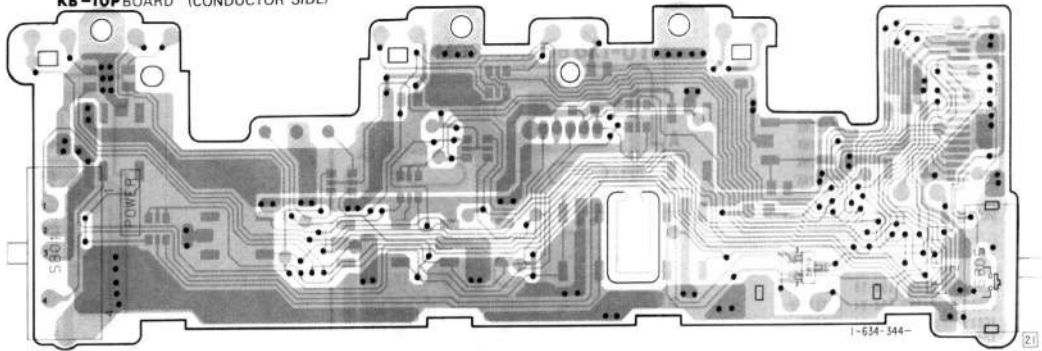

UC-6 BOARD

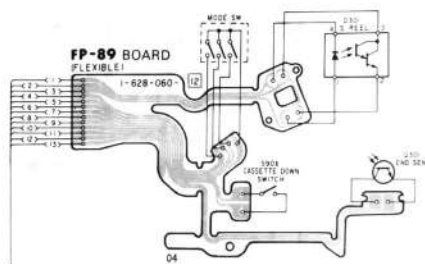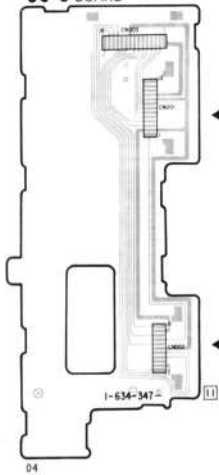

< PHOTO COUPLER >

D301 8-719-820-44 TLP907-0 (SONY2)

< SENSOR >

Q301 8-729-906-48 EE-TP109

< DIODE >


D302 8-719-940-81 GL452S
D303 8-719-820-44 TLP907-0 (SONY2)

< SENSOR >

Q302 8-729-906-48 EE-TP109

4-3. SEMICONDUCTORS

AK93C57F
FA7610N
LM311D
LM358D
LM393D
NJM2073M
NJM2233BM




(TOP VIEW)

CXA1127M
CXA8006M




(TOP VIEW)

CXA1201Q

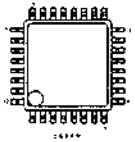


(TOP VIEW)

CXA1202R

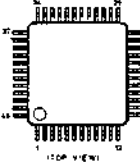


(TOP VIEW)

CXA1203N
CXA1219M

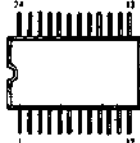


(TOP VIEW)

CXA1207

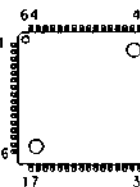


(TOP VIEW)

CXA1208R
CXA1237AR

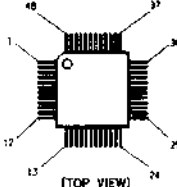


(TOP VIEW)

CXA1227Q

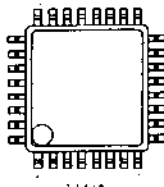


(TOP VIEW)

CXL1506M
CX20115A
MB3775PF
MC14053BF




(TOP VIEW)

CXP50116
CXP80116

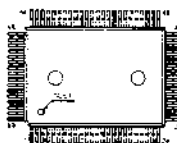


(TOP VIEW)

M52003

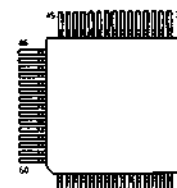

(MARKING SIDE VIEW)

M52018FP
TDA3842T-T

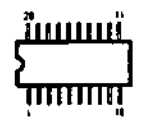

(TOP VIEW)


S-8052ALO-LG-S
S-8054ALR-LN-S




S-81350HG



TC4SU69F
TC4S66F
TC4S81F




PC339G2
PD6451AGT-601




(TOP VIEW)

PC574J




(TOP VIEW)

DTA114EK
DTA124EK
DTA143EK
DTA144EK
DTC114EK
DTC124EK
DTC144EK
DTC144WK
2SA1162
2SA1179
2SA1576
2SB624
2SC1623
2SC2223
2SC3053
2SC4081




IMH2
IMX2



DTA144EU
DTC114EU
DTC124EU
DTC144EU
DTC144TU
2SD1119




EE-TP109




FMS1
FMY3
FMY4



FMW2




IMD2



IMH2
IMX2




XN4210



2SB1121
2SD1664



2SB1202



2SC2669



2SK209G



2SK1469




DAN202U
DA204U




DAP202U




GL-1EG11




GL-1PR102




GL452S




IMN10
MA121




MA152WK




RD3.6M-B2
RD6.2M-B1
RD9.1M-B1
RD9.1M-B2
SB01-05CP
SB05-05CP




SB10-05PCP




TLP-907

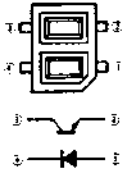

1S5226

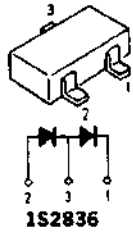


1S2836




5-1. CABINET (UPPER) ASSEMBLY


sécurité.
Ne les remplacer que par une
pièce portant le numéro spécifié.

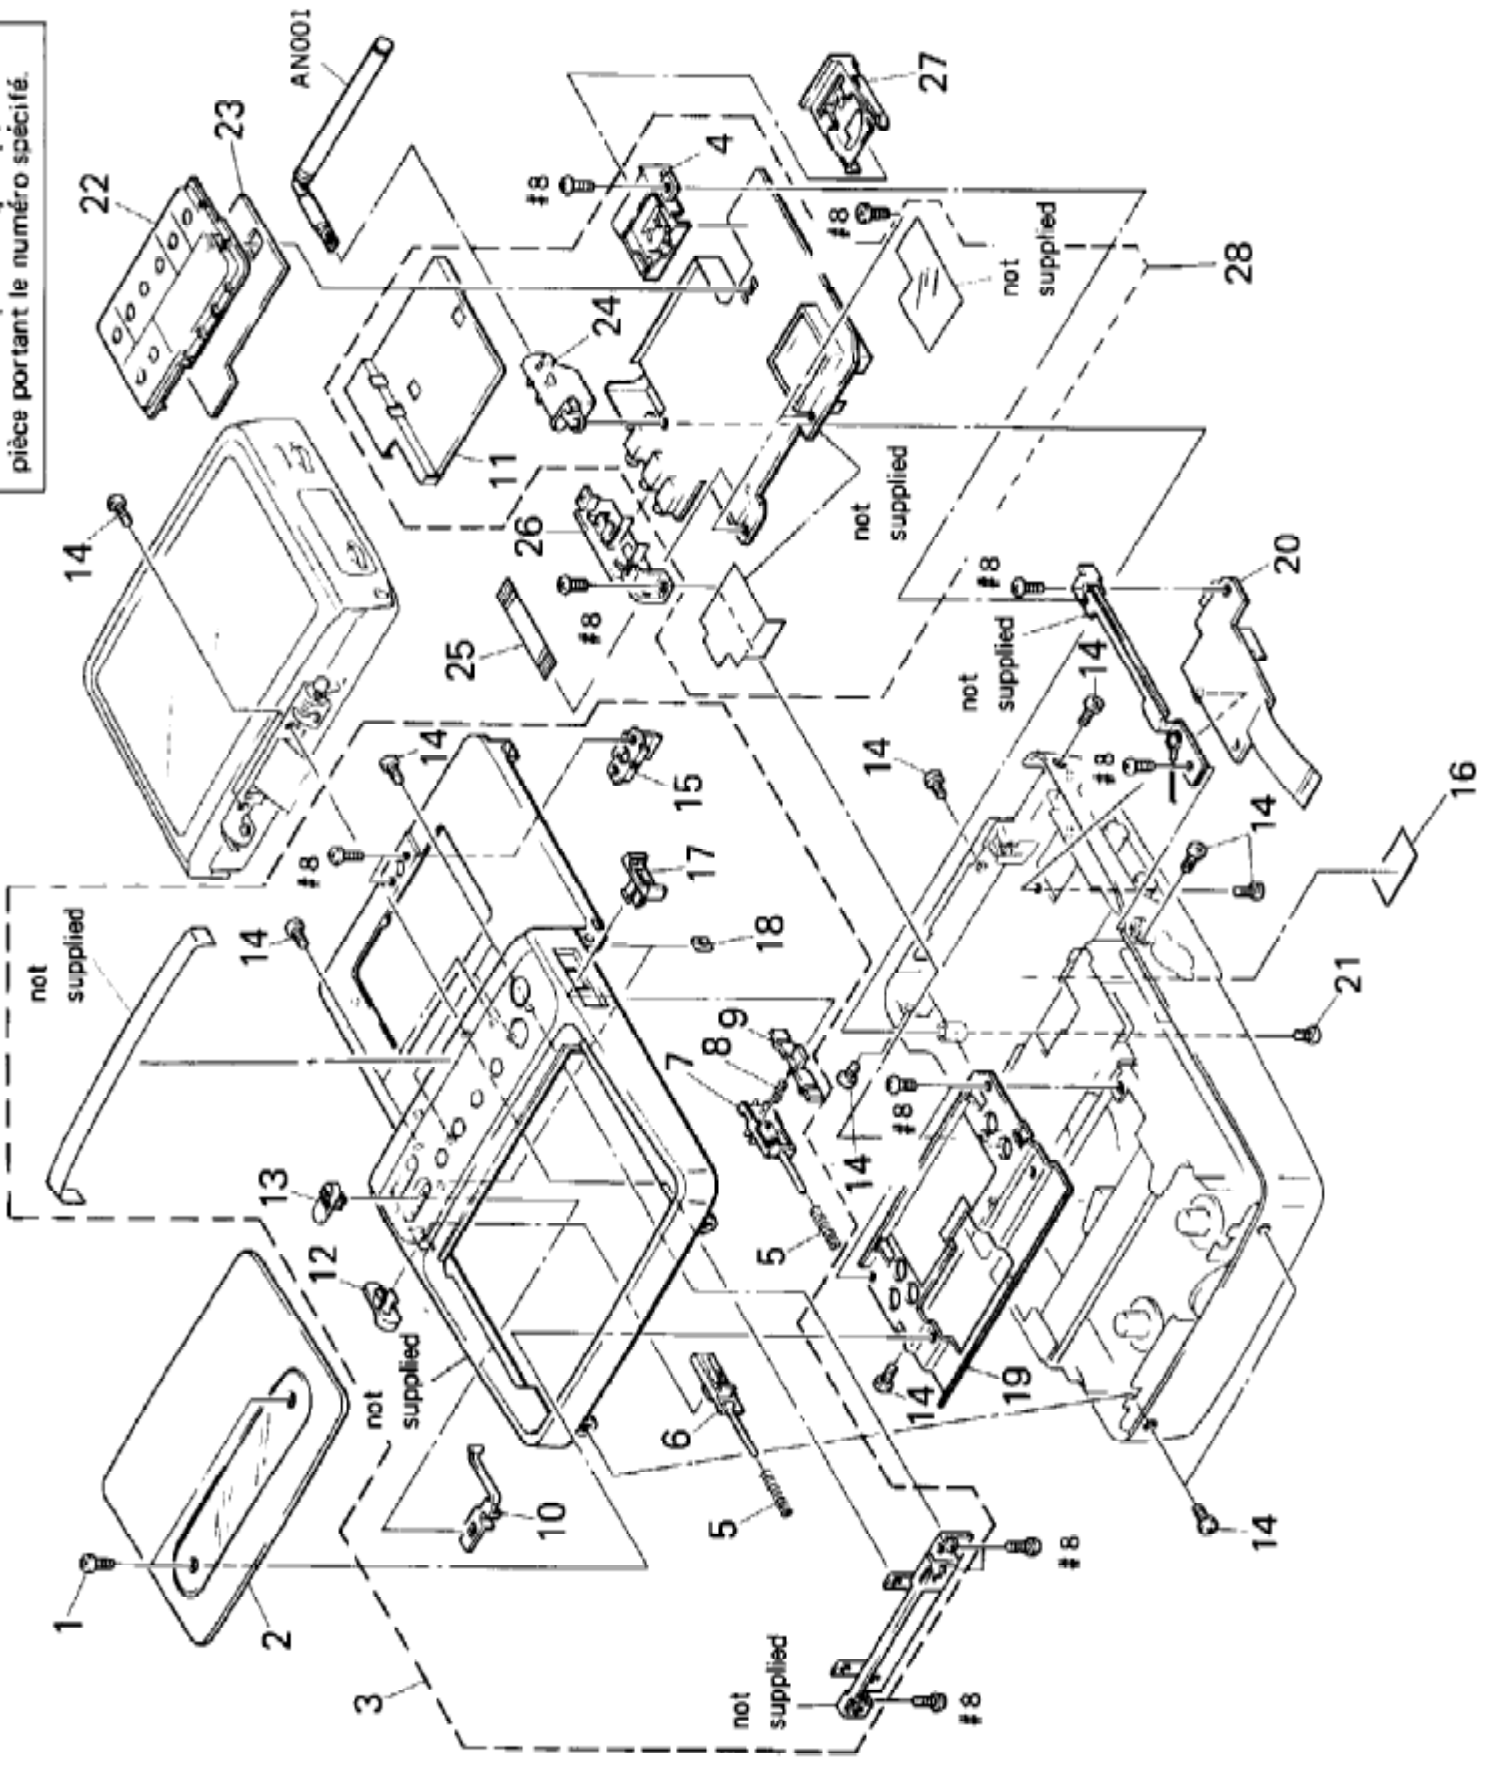


5-3. CABINET (LOWER) ASSEMBLY

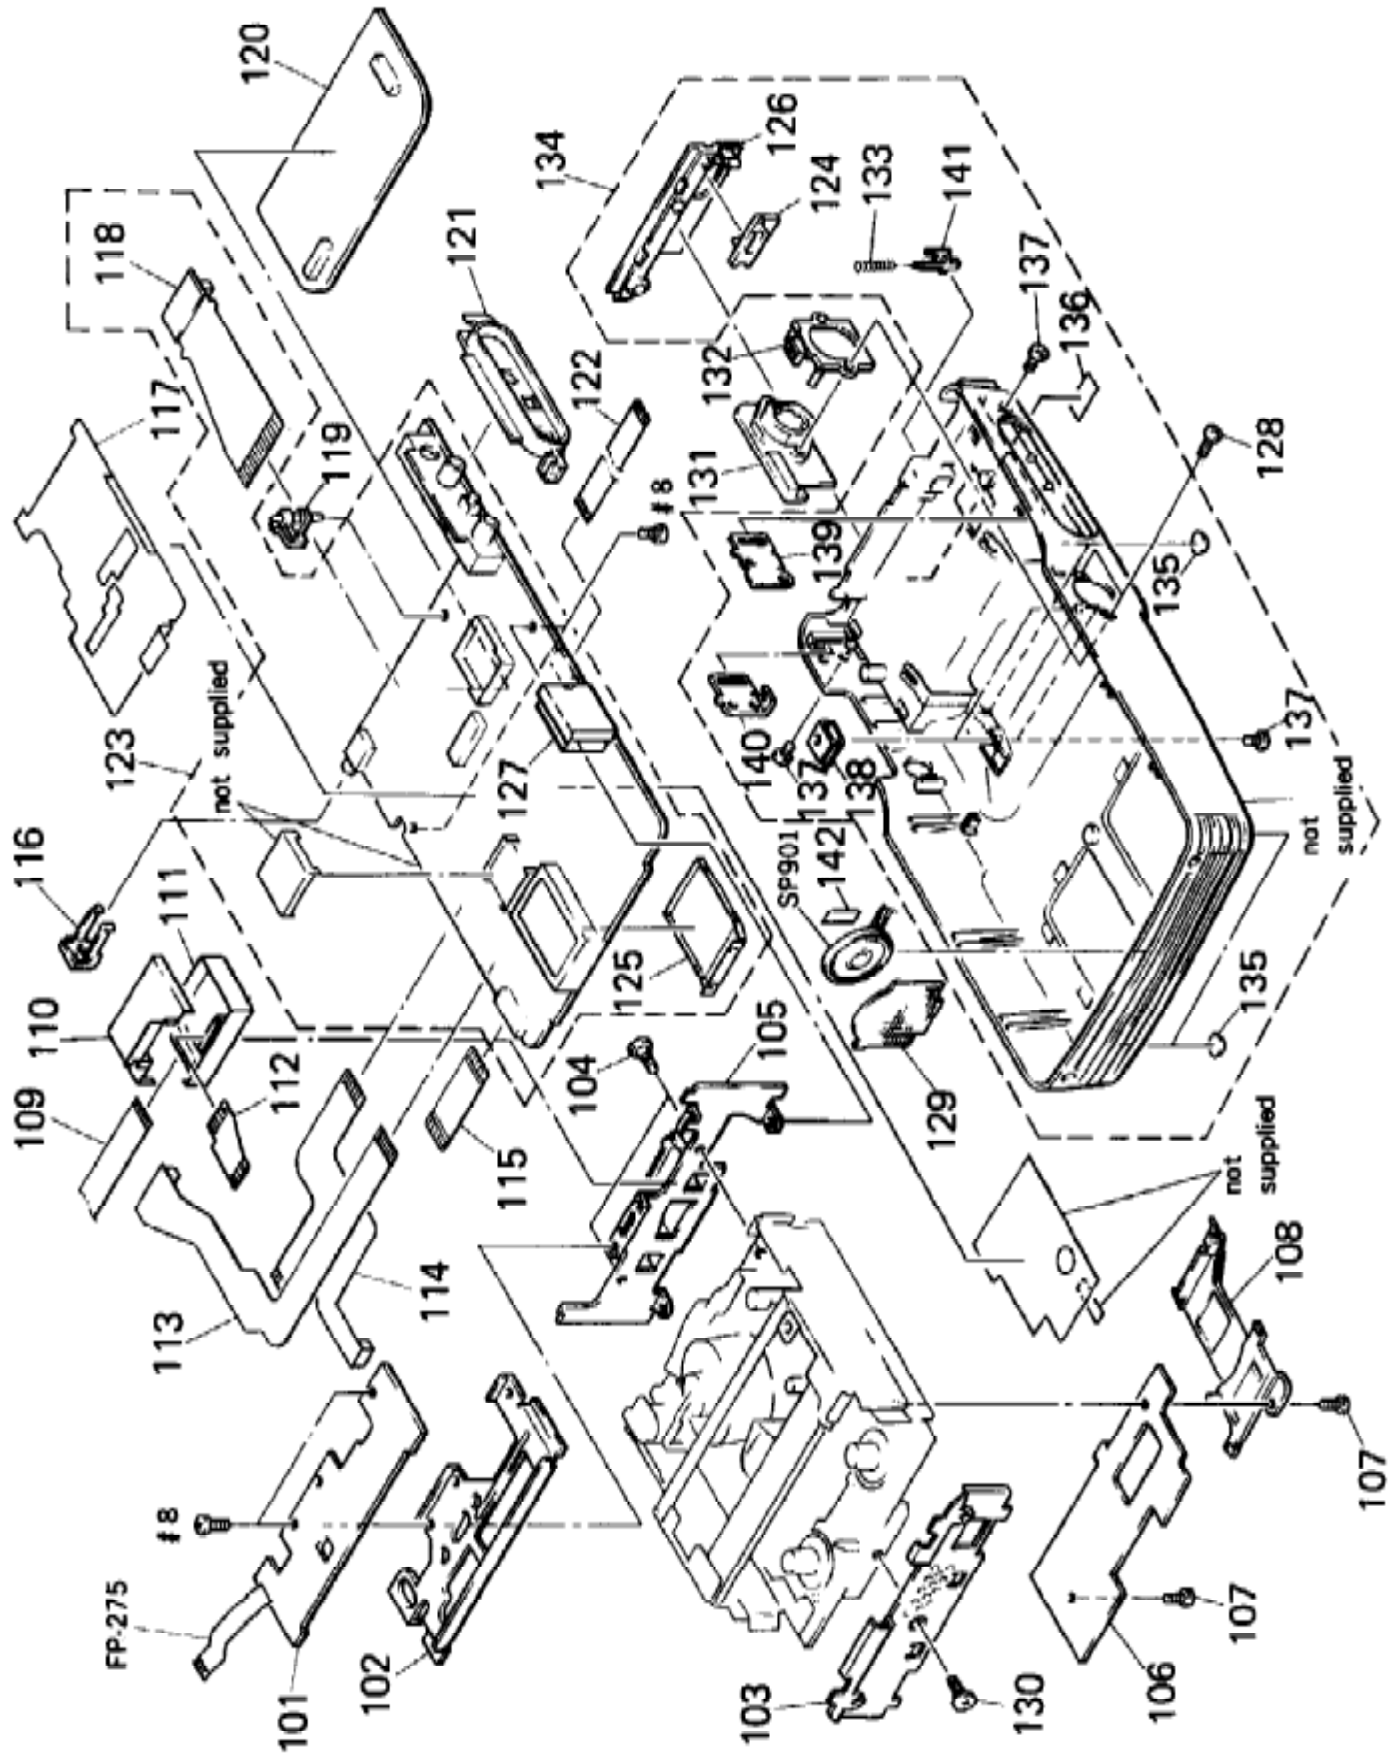


5-4. MECHANISM DECK ASSEMBLY (1)

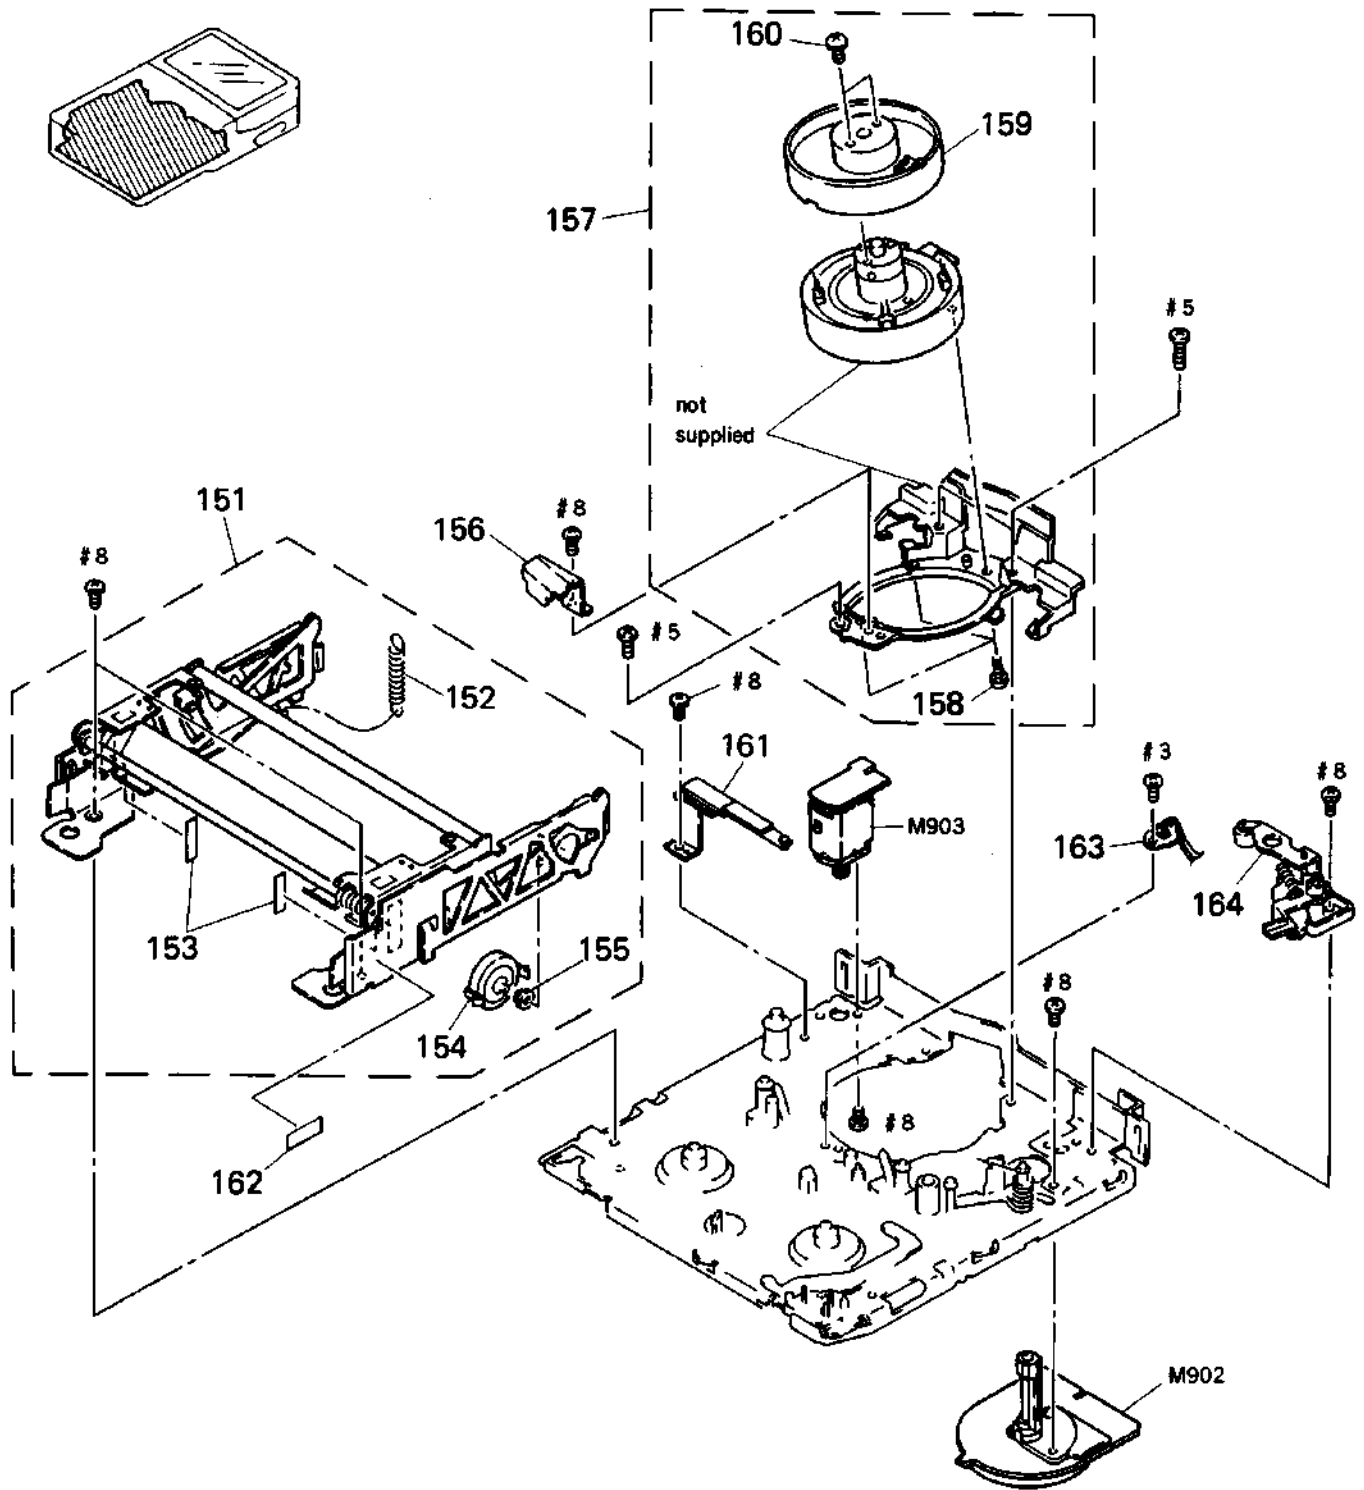

5-5. MECHANISM DECK ASSEMBLY (2)

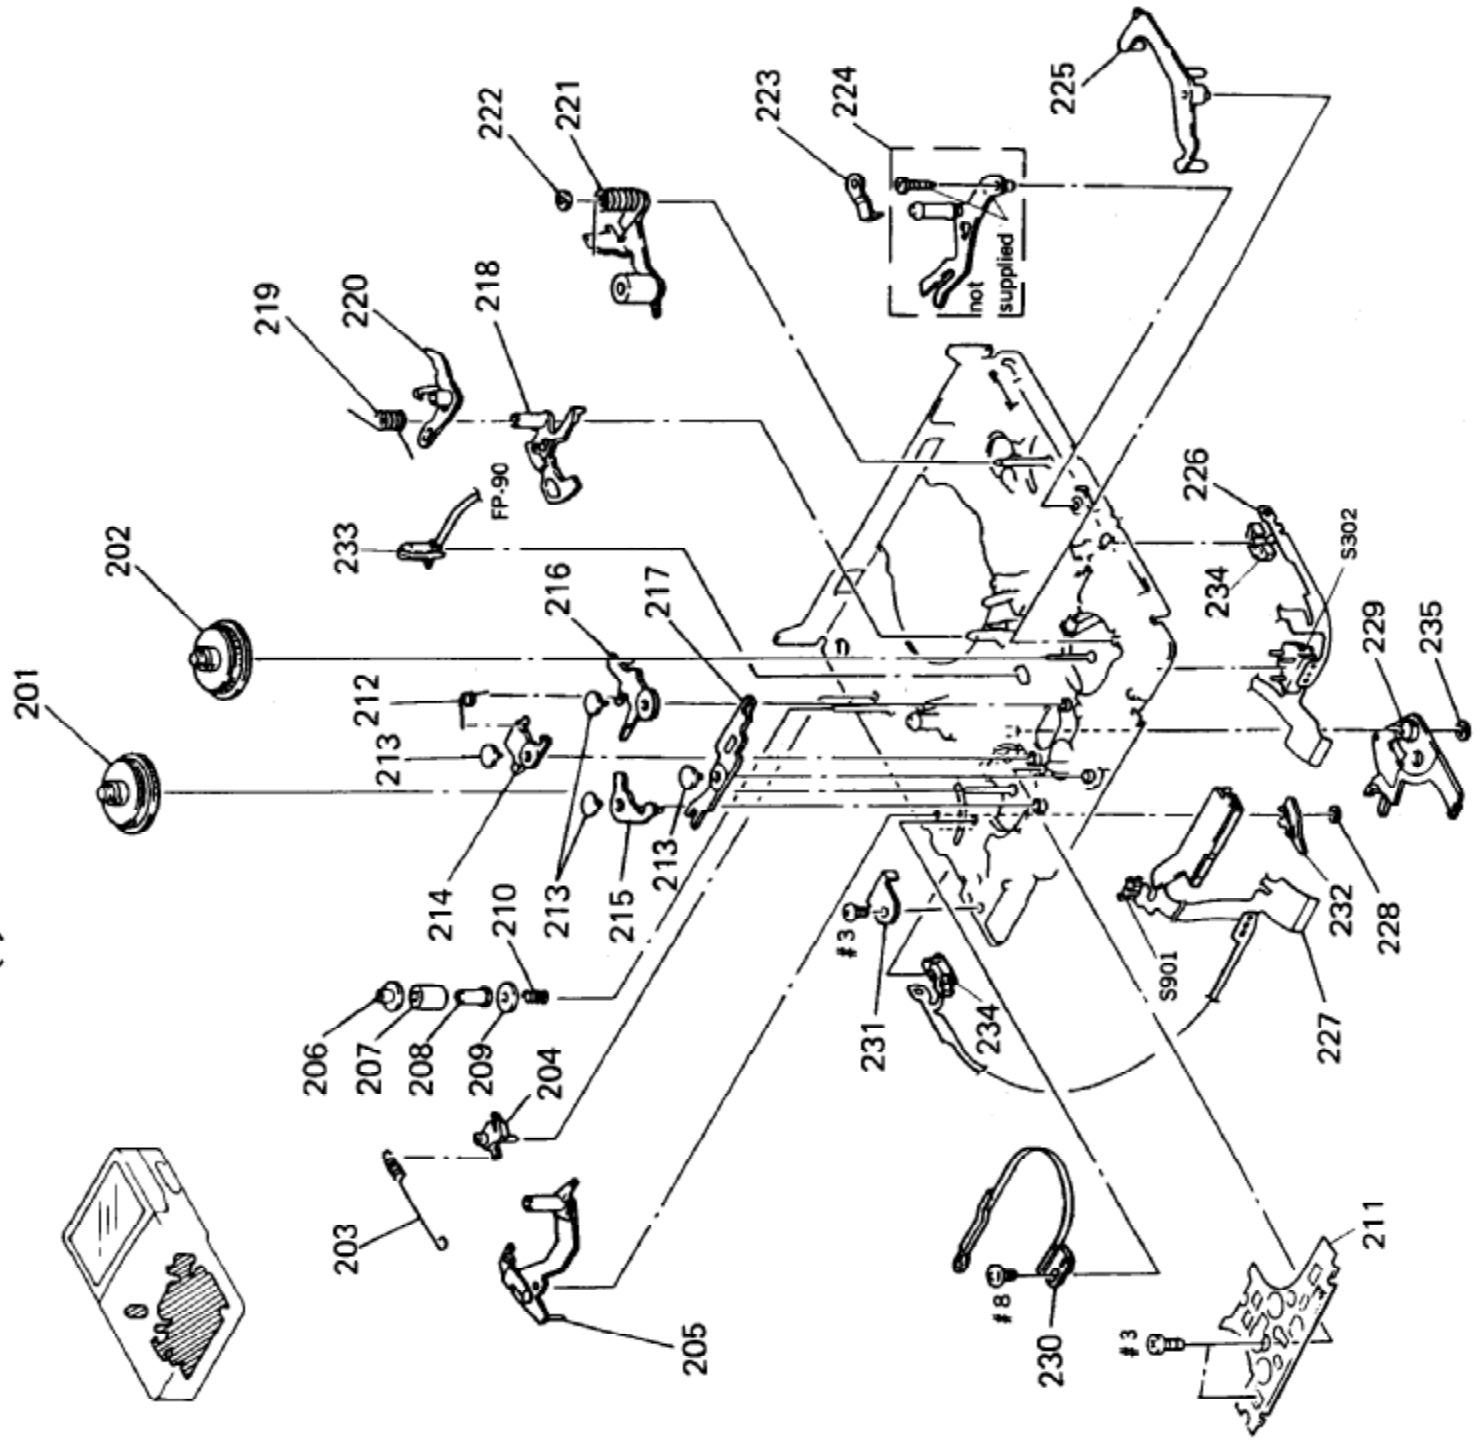

5-6. MECHANISM DECK ASSEMBLY (3)

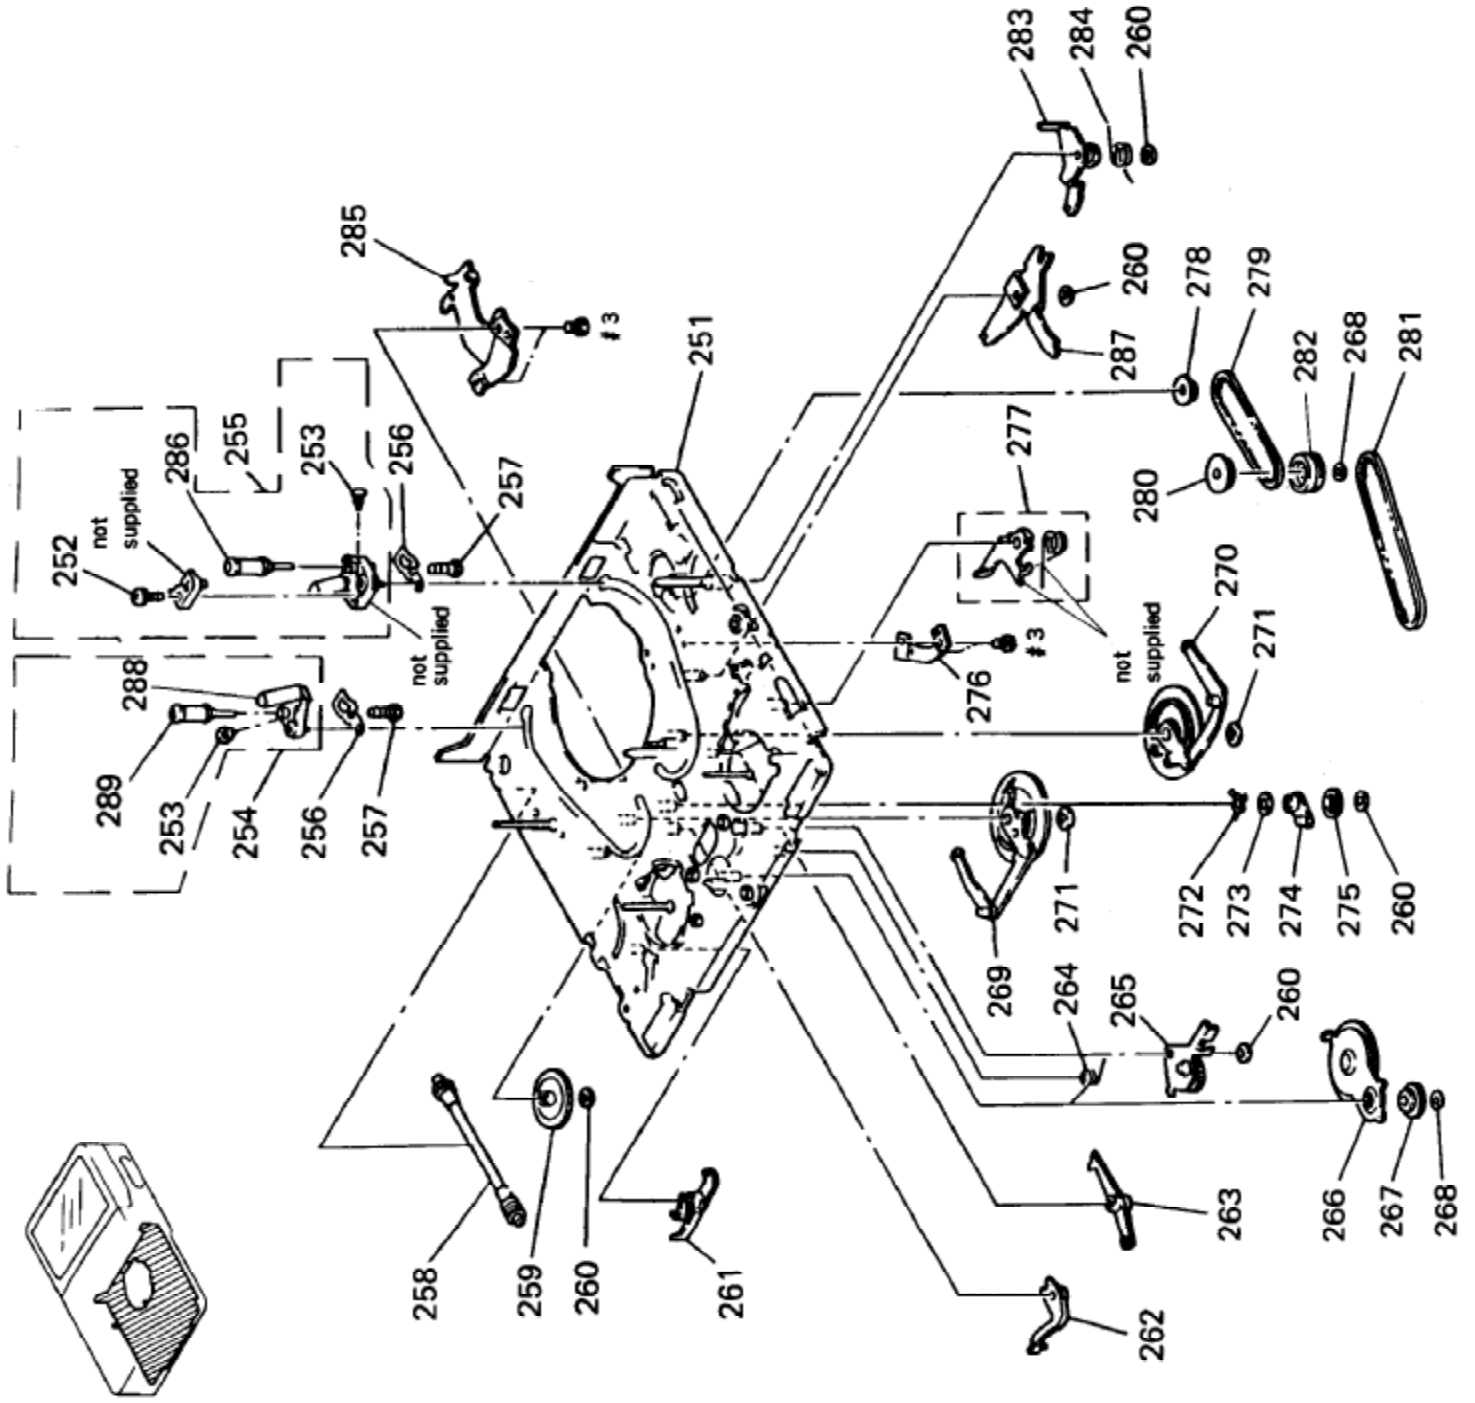

SECTION 5 EXPLODED VIEWS



NOTE:


- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Color Indication of Appearance Parts
Example:
KNOB, BALANCE (WHITE)...(RED)


Parts Color Cabinet's Color

- Hardware (# mark) list is given in the last of this parts list.

The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

5-1. CABINET (UPPER) ASSEMBLY

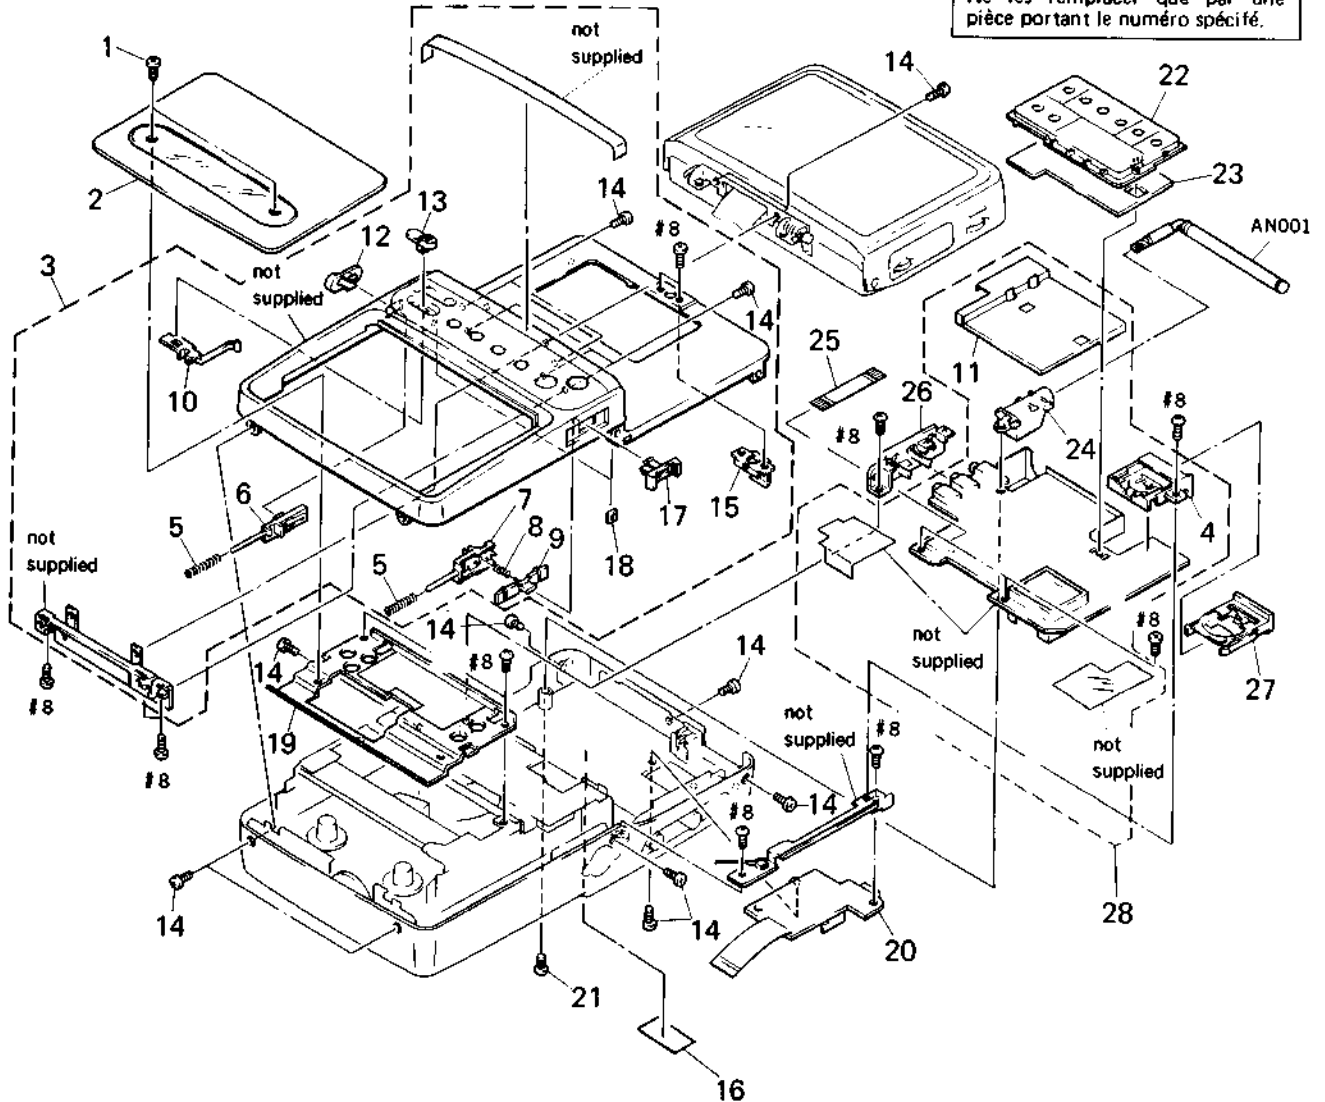

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|--------------------------------|--------|----------|----------------|----------------------------------|--------|
| 1 | 3-719-555-11 | SCREW (M1.7X5.5) | | 16 | * 3-941-662-01 | LABEL, MODEL NUMBER (AE) | |
| 2 | X-3940-351-1 | LID ASSY, CASSETTE COMPARTMENT | | 17 | 3-744-131-01 | BUTTON, POWER | |
| 3 | X-3940-353-1 | CABINET ASSY, UPPER | | 18 | 3-718-233-01 | NUT, PLATE | |
| 4 | X-3728-887-1 | GUIDE ASSY, BATTERY | | 19 | X-3940-021-1 | REINFORCEMENT ASSY | |
| 5 | 3-741-137-01 | SPRING, COMPRESSION | | 20 | * A-7071-288-A | DC-22P BOARD, COMPLETE | |
| 6 | 3-740-655-01 | BUTTON, EJECT LOCK | | 21 | 3-719-381-21 | SCREW (M2X6) | |
| 7 | 3-744-133-01 | PLATE, SLIDE, POWER | | 22 | X-3940-350-1 | HOLDER ASSY, SB | |
| 8 | 3-303-973-00 | SPRING, COMPRESSION | | 23 | * A-7071-318-A | SB-3P BOARD, COMPLETE | |
| 9 | 3-744-128-01 | BUTTON, POWER LOCK | | 24 | 3-744-166-01 | HOLDER, ANTENNA | |
| 10 | 3-744-132-01 | PLATE, SLIDE, REC | | 25 | 1-575-856-11 | CABLE, FLAT (1.0MM PITCH) 7 CORE | |
| 11 | X-3728-886-1 | LID ASSY, TU SHIELD CASE | | 26 | 3-744-165-22 | COVER, HP JACK | |
| 12 | 3-740-647-01 | BUTTON, EJECT | | 27 | X-3728-883-1 | HOLDER ASSY, BATTERY | |
| 13 | 3-740-648-11 | BUTTON, POWER | | 28 | * A-7062-529-A | TU-126 BOARD, COMPLETE | |
| 14 | 3-719-381-01 | SCREW (M2X4) | | AND01 | 1-501-456-11 | ANTENNA, TELESCOPIC | |
| 15 | X-3940-043-1 | PLATE, LOCK ASSY | | | | | |

5-2. SC UNIT ASSEMBLY

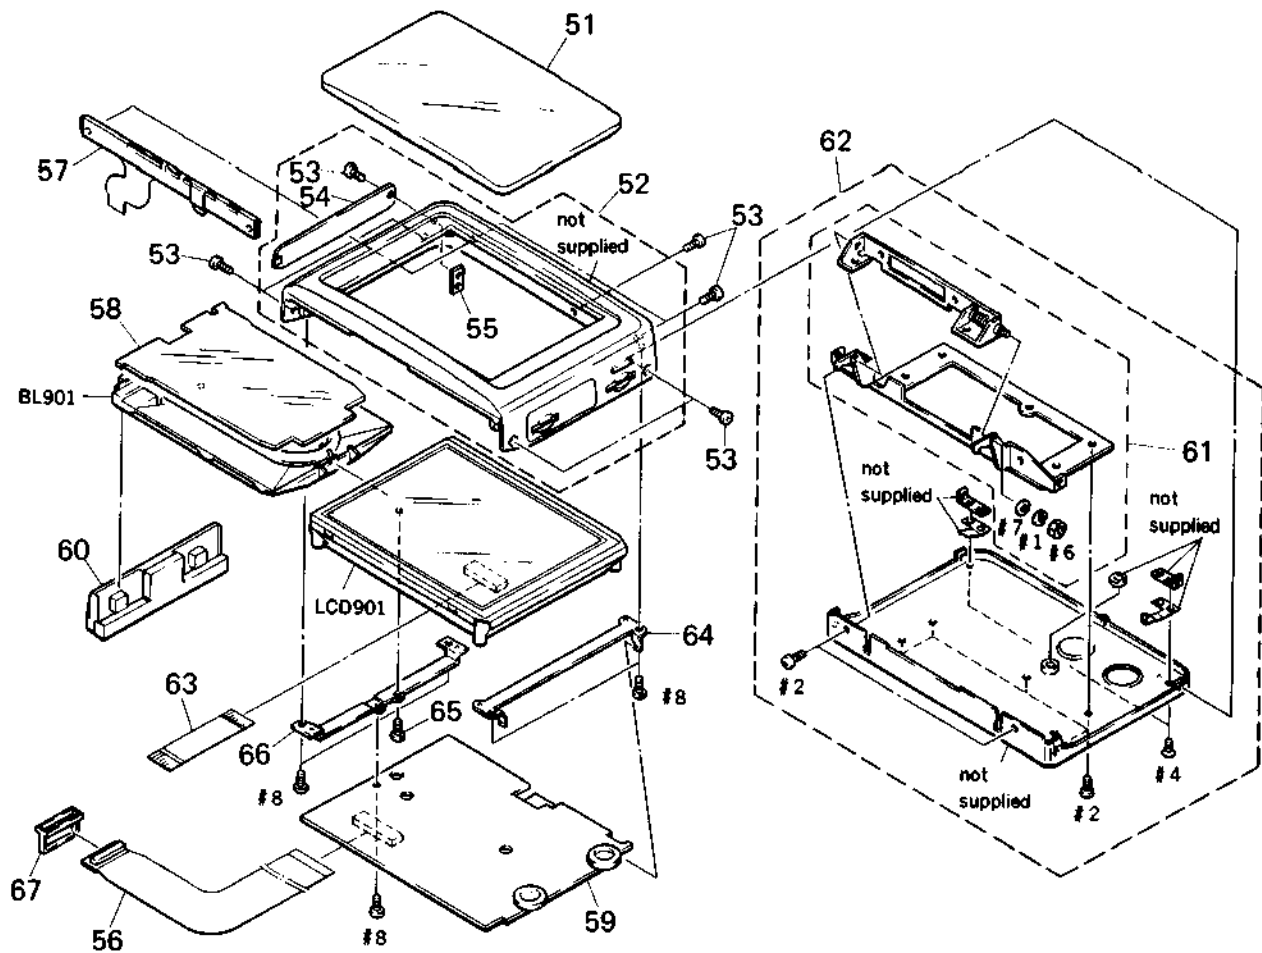


| | |
|--|--|
| <p>Note: The components identified by mark ▲ or dotted line with mark ▲ are critical for safety. Replace only with part number specified.</p> | <p>Note: Les composants identifiés par une marque ▲ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p> |
|--|--|

| Ref. No. | Part No. | Description | Remark |
|----------|----------------|------------------------|--------|
| 51 | 3-941-319-01 | WINDOW (BOARD), SC | |
| 52 | X-3940-352-1 | CABINET ASSY, SC UPPER | |
| 53 | 3-719-381-01 | SCREW (M2X4) | |
| 54 | 3-744-174-01 | COVER, SIDE | |
| 55 | 3-730-103-01 | NUT, PLATE | |
| 56 | 1-634-994-11 | FP-271 FLEXIBLE BOARD | |
| 57 | 1-466-334-11 | SWITCH BLOCK, CONTROL | |
| 58 | 3-744-127-01 | CURTAIN | |
| 59 | * A-7062-437-A | RG-22 BOARD, COMPLETE | |
| 60 | ▲ 1-466-333-11 | INVERTER UNIT, DC-AC | |


| Ref. No. | Part No. | Description | Remark |
|----------|----------------|-----------------------------------|--------|
| 61 | X-3749-223-1 | ARM, HINGE ASSY | |
| 62 | X-3940-019-1 | CABINET (BOTTOM) ASSY, SC | |
| 63 | 1-575-858-11 | CABLE, FLAT (1.0MM PITCH) 16 CORE | |
| 64 | * 3-744-198-01 | BRACKET (R), LCD | |
| 65 | 3-719-408-01 | SCREW (B2), TAPPING, P3 | |
| 66 | * 3-744-199-01 | BRACKET (L), LCD | |
| 67 | 3-744-152-01 | HOLDER, FPC | |
| BL901 | 1-518-668-11 | TUBE UNIT, FLUORESCENT | |
| LCDS01 | 1-809-002-11 | DISPLAY MODULE, LIQUID CRYSTAL | |

5-3. CABINET (LOWER) ASSEMBLY

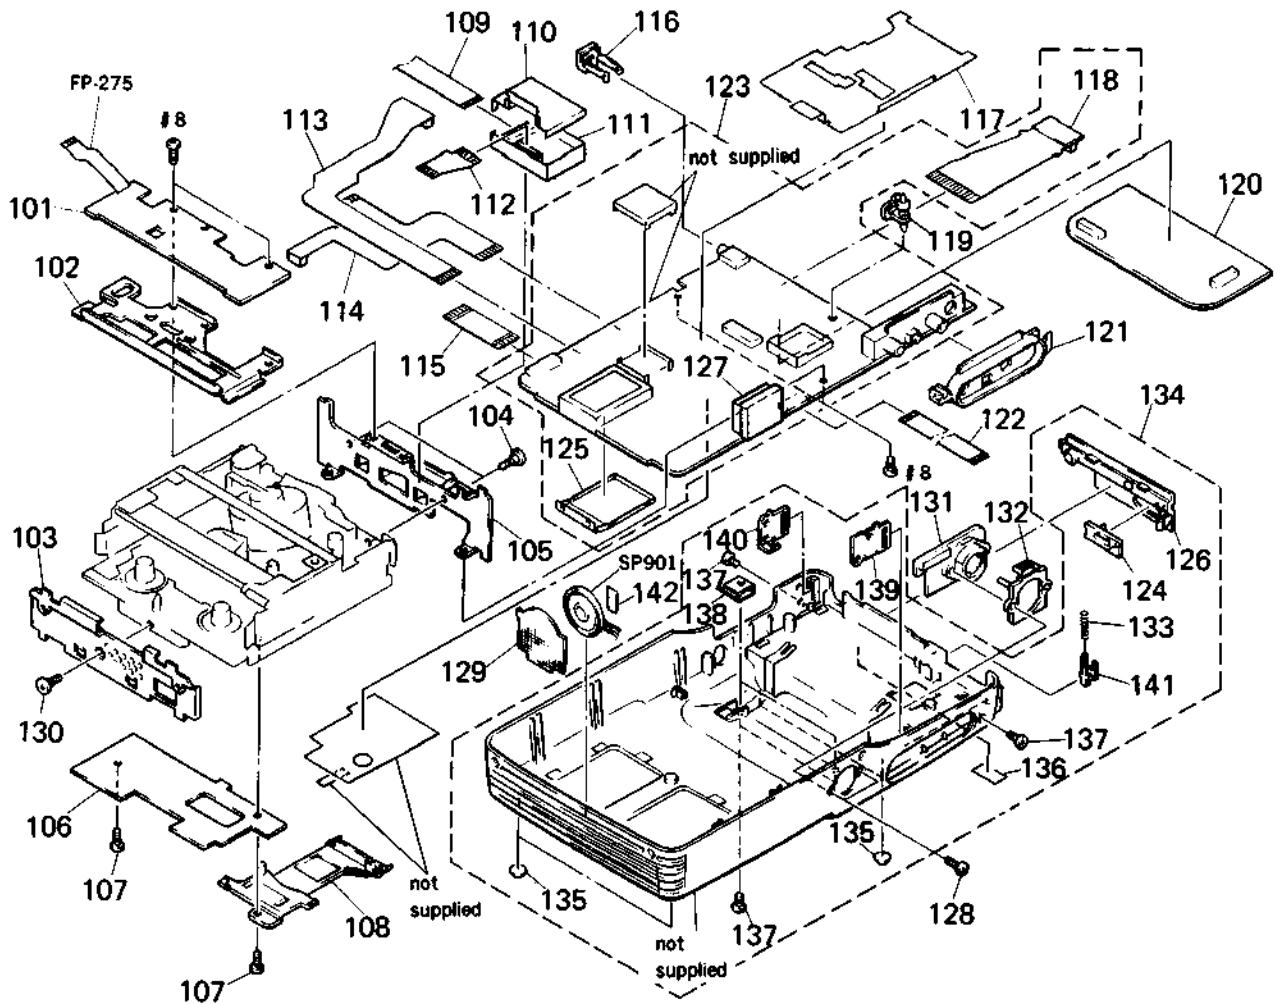


| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|----------------|-----------------------------------|--------|----------|----------------|---------------------------------|--------|
| 101 | * A-7071-319-A | KB-10P BOARD, COMPLETE | | 123 | * A-7062-528-A | SV-66 BOARD, COMPLETE | |
| 102 | X-3728-889-1 | FRAME ASSY, KB | | 124 | 3-744-161-01 | KNOB, RELEASE | |
| 103 | X-3728-884-1 | FRAME (FRONT) ASSY, MD | | 125 | * X-3728-888-1 | LID ASSY, REAR, SDD SHIELD CASE | |
| 104 | 3-732-791-11 | SCREW (M2X3) | | 126 | 3-744-168-01 | COVER, ANTENNA | |
| 105 | X-3728-891-1 | FRAME (REAR) ASSY, MD | | 127 | A-7062-436-A | CC-55 BOARD, COMPLETE | |
| 106 | * 1-634-347-11 | UC-6 BOARD | | 128 | 3-719-381-21 | SCREW (M2X6) | |
| 107 | 3-719-408-01 | SCREW (#2), TAPPING, P3 | | 129 | X-3728-892-1 | SPACER ASSY, SP | |
| 108 | * 3-744-176-01 | COVER, MD | | 130 | 3-744-603-11 | SCREW | |
| 109 | 1-634-992-11 | FP-269 FLEXIBLE BOARD | | 131 | * A-7071-289-A | CN-6P BOARD, COMPLETE | |
| 110 | X-3728-885-1 | LID ASSY, RP SHIELD CASE | | 132 | 3-744-157-01 | SPACER, CN | |
| 111 | * A-7062-433-A | RP-105 BOARD, COMPLETE | | 133 | 3-564-951-00 | SPRING, COMPRESSION | |
| 112 | 1-634-996-11 | FP-273 FLEXIBLE BOARD | | 134 | X-3940-354-1 | CABINET ASSY, LOWER | |
| 113 | 1-634-997-11 | FP-274 FLEXIBLE BOARD | | 135 | 3-740-607-01 | CUSHION | |
| 114 | 1-634-995-11 | FP-272 FLEXIBLE BOARD | | 136 | * 3-747-370-01 | LABEL, BATTERY FITTING | |
| 115 | 1-575-859-11 | CABLE, FLAT (1.0MM PITCH) 15 CORE | | 137 | 3-719-381-01 | SCREW (M2X4) | |
| 116 | 3-744-169-01 | COVER, CS JACK | | 138 | 3-736-496-01 | BRACKET, STAND | |
| 117 | * 3-941-171-01 | COVER (CU), SV | | 139 | 3-744-156-01 | HOOK (R), BELT | |
| 118 | 1-634-993-11 | FP-270 FLEXIBLE BOARD | | 140 | 3-744-155-01 | HOOK (L), BELT | |
| 119 | 3-742-816-01 | SUPPORT (V), PC BOARD | | 141 | 3-744-159-01 | LEVER, RELEASE | |
| 120 | * A-7062-527-A | AU-93 BOARD, COMPLETE | | 142 | 3-846-312-00 | SPACER | |
| 121 | 3-744-175-21 | COVER, IO JACK | | SP901 | 1-544-323-11 | SPEAKER | |
| 122 | 1-575-857-11 | CABLE, FLAT (1.0MM PITCH) 12 CORE | | | | | |

5-4. MECHANISM DECK ASSEMBLY (1)

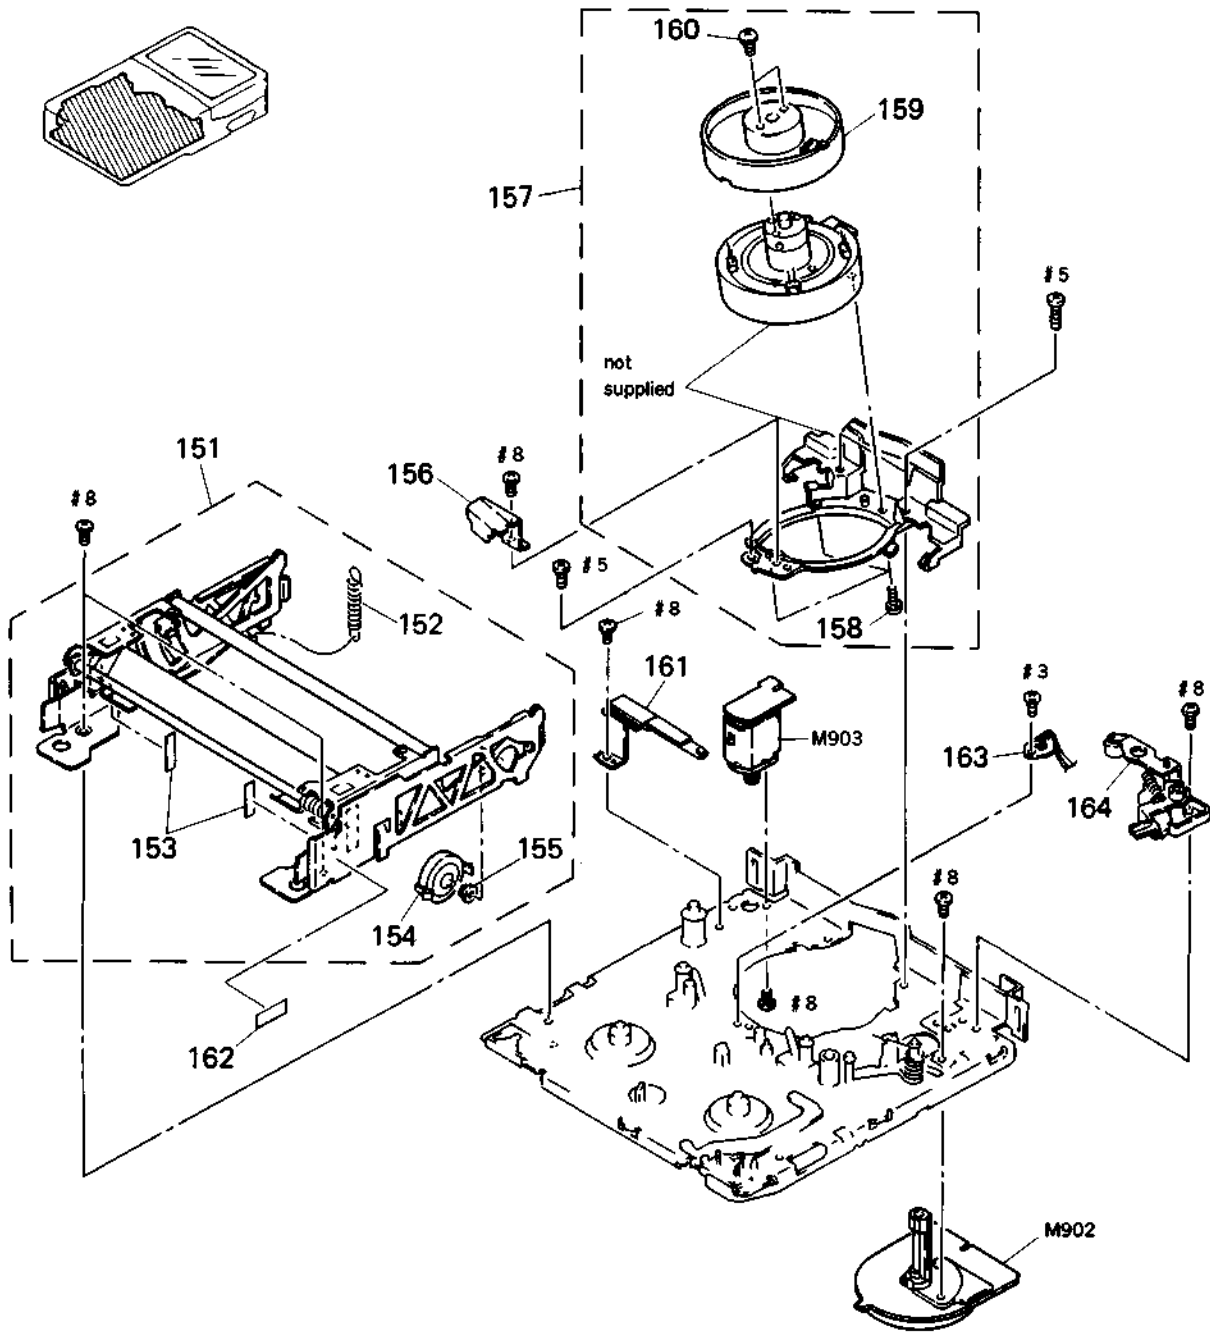


| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|----------------|---------------------------|--------|----------|----------------|--------------------------------------|--------|
| 151 | X-3728-873-1 | CASSETTE COMPARTMENT ASSY | | 159 | A-7049-343-A | DRUM ASSY, ROTARY (UPPER) (DGR-64-R) | |
| 152 | 3-728-825-03 | SPRING, TENSION | | 160 | 3-728-847-01 | SCREW, (M2X4) | |
| 153 | * 3-728-829-01 | TAPE | | 161 | X-3728-854-1 | GROUND ASSY, SHAFT | |
| 154 | 3-728-867-02 | DAMPER, OIL | | 162 | * 3-730-176-11 | SHEET, MD | |
| 155 | 3-728-828-02 | GEAR, DAMPER | | 163 | 1-808-505-12 | SENSOR (DEW) | |
| 156 | 3-728-868-01 | GUARD, GUIDE | | 164 | A-7040-207-A | ROLLER BLOCK ASSY, HC | |
| 157 | A-7048-405-A | DRUM ASSY, (DGU-64A-R) | | M902 | 8-835-331-01 | MOTOR, DC U-22A (CAPSTAN) | |
| 158 | 3-686-493-01 | SCREW, (M2X5), P1 | | M903 | A-7040-208-A | MOTOR ASSY, THREADING (LOADING) | |

5-5. MECHANISM DECK ASSEMBLY (2)

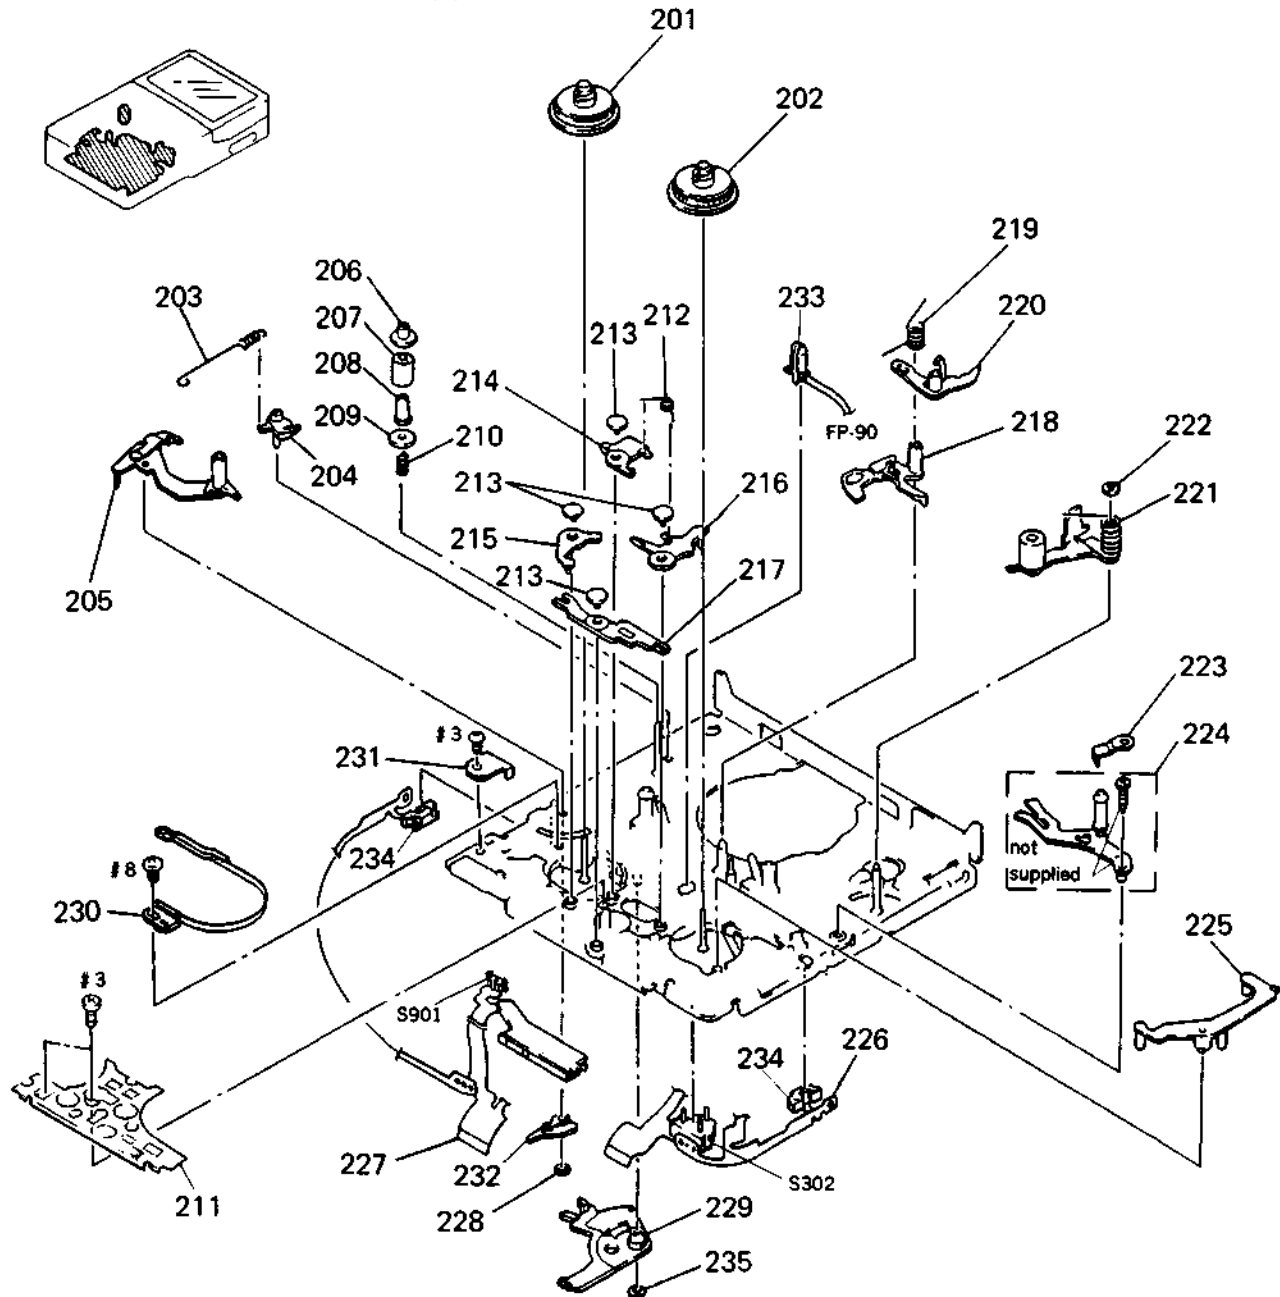

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|---------------------------------|--------|----------|--------------|---------------------------------|--------|
| 201 | X-3728-851-1 | TABLE ASSY, REEL, S | | 220 | 3-728-852-02 | ARM, RK STOPPER | |
| 202 | X-3728-855-1 | TABLE ASSY, REEL, T | | 221 | A-7040-219-A | ARM BLOCK ASSY, PINCH | |
| 203 | 3-736-414-01 | SPRING, TENSION | | 222 | 3-669-465-00 | WASHER (1.5), STOPPER | |
| 204 | 3-728-855-03 | ARM, ADJUSTMENT | | 223 | 3-728-808-01 | SPRING, LEAF | |
| 205 | X-3728-867-1 | ARM ASSY (S), TENSION REGULATOR | | 224 | X-3728-869-1 | ARM ASSY, TG7 | |
| 206 | 3-726-884-01 | FLANGE, UPPER, TG2 | | 225 | 3-728-848-01 | ARM, LB RELEASE | |
| 207 | 3-726-883-01 | ROLLER, TG2 | | 226 | 1-628-061-12 | FP-90 FLEXIBLE BOARD | |
| 208 | 3-726-885-01 | SLEEVE, TG2 | | 227 | 1-628-060-12 | FP-89 FLEXIBLE BOARD | |
| 209 | 3-726-882-02 | FLANGE, LOWER, TG2 | | 228 | 3-321-393-11 | WASHER, STOPPER | |
| 210 | 3-726-886-01 | SPRING, COMPRESSION | | 229 | X-3728-863-1 | LEVER ASSY, SW | |
| 211 | 3-741-195-01 | PLATE, BLIND, RK | | 230 | X-3728-859-1 | BAND ASSY, TENSION REGULATOR | |
| 212 | 3-726-866-01 | SPRING (ST), TORSION | | 231 | 3-730-125-01 | RETAINER, SW | |
| 213 | 3-726-858-01 | PIN, SHAFT RETAINER | | 232 | X-3728-857-1 | STOPPER ASSY, TENSION REGULATOR | |
| 214 | 3-728-849-01 | BRAKE, S | | 233 | 3-728-837-01 | HOLDER, LED | |
| 215 | 3-726-852-01 | BRAKE, LB | | 234 | 3-728-869-02 | HOLDER, SENSOR | |
| 216 | 3-728-850-01 | BRAKE, T | | 235 | 3-726-829-01 | WASHER, STOPPER | |
| 217 | 3-726-853-01 | LEVER, LB | | S302 | 1-572-298-11 | SWITCH, PUSH | |
| 218 | 3-728-875-01 | STOPPER, RK | | S901 | 1-571-099-11 | SWITCH | |
| 219 | 3-726-864-01 | SPRING (RK), TORSION | | | | | |

5-6. MECHANISM DECK ASSEMBLY (3)

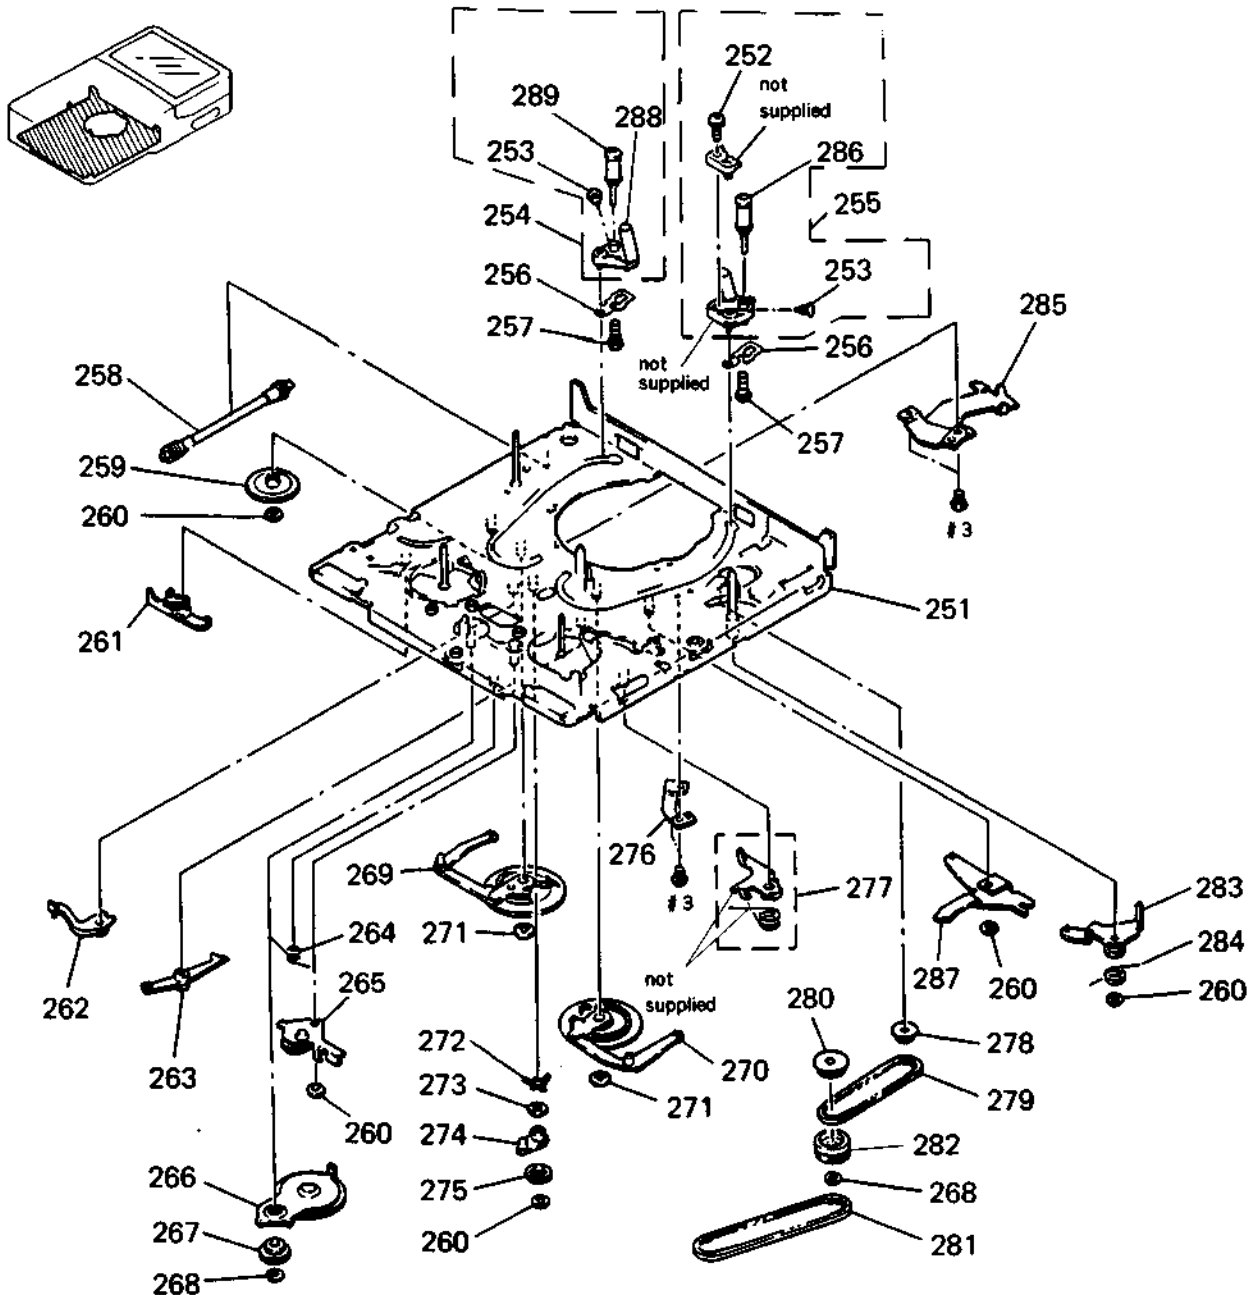

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|----------------------------------|--------|----------|----------------|----------------------------------|--------|
| 251 | X-3728-862-1 | CHASSIS ASSY, MECHANICAL | | 271 | 3-669-465-00 | WASHER (1.5), STOPPER | |
| 252 | 3-736-473-01 | SCREW (M2X0.25) (THREE LOCK) | | 272 | 3-726-867-01 | SPRING, LEAF | |
| 253 | 3-726-822-01 | SCREW (M1.4X2) (STEP), HEAD | | 273 | 3-701-436-21 | WASHER, POLYETHYLENE | |
| 254 | A-7040-128-A | COASTER (LEFT) BLOCK ASSY | | 274 | 3-726-857-03 | ARM, UL | |
| 255 | A-7040-216-A | COASTER (RIGHT) BLOCK ASSY (M1P) | | 275 | 3-726-856-04 | GEAR, UL | |
| 256 | 3-736-485-01 | SPRING, LEAF, COSTER | | 276 | * 3-726-805-01 | REINFORCEMENT (TT) | |
| 257 | 3-726-830-01 | SCREW (M1.4X4) (THREE LOCK) | | 277 | X-3726-808-2 | BRAKE ASSY, TS | |
| 258 | X-3728-868-1 | WORM ASSY | | 278 | X-3726-805-1 | GEAR ASSY, JOINT | |
| 259 | 3-744-109-01 | GEAR, WHEEL | | 279 | 3-728-866-11 | BELT (S), TIMING | |
| 260 | 3-726-829-01 | WASHER, STOPPER | | 280 | X-3726-813-1 | PULLEY (UPPER) ASSY, MIDWAY | |
| 261 | 3-728-842-01 | LEVER, EJECT | | 281 | 3-741-197-01 | BELT (L), TIMING | |
| 262 | 3-728-851-01 | BRAKE, UL | | 282 | 3-741-196-01 | PULLEY (LOWER), BELT MIDWAY | |
| 263 | 3-726-854-01 | ARM, BRAKE RELEASE | | 283 | X-3726-824-1 | ARM ASSY, PINCH SUB | |
| 264 | 3-726-865-01 | SPRING (LB), TORSION | | 284 | 3-726-895-01 | SPRING | |
| 265 | A-7040-225-A | GEAR BLOCK ASSY (M), LB | | 285 | X-3726-841-1 | REINFORCEMENT (SS) ASSY | |
| 266 | X-3728-866-1 | GEAR ASSY, RK | | 286 | X-3728-808-4 | ROLLER ASSY (U) (PLATING), GUIDE | |
| 267 | X-3728-858-1 | GEAR ASSY, RC | | 287 | 3-941-322-01 | LEVER, THREADING | |
| 268 | 3-321-393-11 | WASHER, STOPPER | | 288 | X-3726-818-1 | COASTER (LEFT) ASSY | |
| 269 | X-3728-842-1 | GEAR (LEFT) ASSY, DRIVE | | 289 | X-3726-820-1 | ROLLER ASSY (U), GUIDE | |
| 270 | X-3728-843-1 | GEAR (RIGHT) ASSY, DRIVE | | | | | |

SECTION 6
ELECTRICAL PARTS LIST

AU-93

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX, -X mean standardized parts, so they may have some differences from the original one.
- CAPACITORS
uF: μ F

- RESISTORS
All resistors are in ohms
METAL: Metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
- COILS
uH: μ H
- SEMICONDUCTORS
In each case, u: μ , for example:
uA...: μ A..., uPA...: μ PA...,
uPB...: μ PB..., uPC...: μ PC...,
uPD...: μ PD...

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|---|--------------|--------------|------------------|----------|--------------|---------------|------------------|
| * A-7062-527-A AU-93 BOARD, COMPLETE ***** (Ref. No 7,000 Series) | | | | | | | |
| < CAPACITOR > | | | | | | | |
| C001 | 1-126-206-11 | ELECT CHIP | 100uF 20% 6.3V | C031 | 1-126-206-11 | ELECT CHIP | 100uF 20% 6.3V |
| C002 | 1-162-965-11 | CERAMIC CHIP | 0.0015uF 10% 50V | C032 | 1-162-968-11 | CERAMIC CHIP | 0.0047uF 10% 50V |
| C003 | 1-164-173-11 | CERAMIC CHIP | 0.0039uF 10% 50V | C033 | 1-164-005-11 | CERAMIC CHIP | 0.47uF 25V |
| C004 | 1-162-960-11 | CERAMIC CHIP | 220PF 10% 50V | C034 | 1-162-965-11 | CERAMIC CHIP | 0.0015uF 10% 50V |
| C005 | 1-162-966-11 | CERAMIC CHIP | 0.0022uF 10% 50V | C035 | 1-162-956-11 | CERAMIC CHIP | 180PF 5% 50V |
| C006 | 1-162-974-11 | CERAMIC CHIP | 0.01uF 50V | C036 | 1-162-966-11 | CERAMIC CHIP | 0.0022uF 10% 50V |
| C007 | 1-162-974-11 | CERAMIC CHIP | 0.01uF 50V | C037 | 1-162-974-11 | CERAMIC CHIP | 0.01uF 50V |
| C009 | 1-164-156-11 | CERAMIC CHIP | 0.1uF 25V | C038 | 1-162-974-11 | CERAMIC CHIP | 0.01uF 50V |
| C010 | 1-128-008-11 | ELECT CHIP | 3.3uF 20% 35V | C039 | 1-162-974-11 | CERAMIC CHIP | 0.01uF 50V |
| C012 | 1-128-007-11 | ELECT CHIP | 2.2uF 20% 35V | C040 | 1-162-963-11 | CERAMIC CHIP | 680PF 10% 50V |
| C013 | 1-162-910-11 | CERAMIC CHIP | 5PF 0.25PF 50V | C041 | 1-128-012-11 | ELECT CHIP | 0.47uF 20% 50V |
| C014 | 1-126-205-11 | ELECT CHIP | 47uF 20% 6.3V | C042 | 1-126-205-11 | ELECT CHIP | 47uF 20% 6.3V |
| C015 | 1-128-006-11 | ELECT CHIP | 4.7uF 20% 25V | C043 | 1-164-156-11 | CERAMIC CHIP | 0.1uF 25V |
| C016 | 1-164-362-11 | CERAMIC CHIP | 470PF 50V | C045 | 1-162-968-11 | CERAMIC CHIP | 0.0047uF 10% 50V |
| C017 | 1-128-006-11 | ELECT CHIP | 4.7uF 20% 25V | C046 | 1-162-969-11 | CERAMIC CHIP | 0.0068uF 10% 25V |
| C018 | 1-162-936-11 | CERAMIC CHIP | 5PF 0.25PF 50V | C047 | 1-162-974-11 | CERAMIC CHIP | 0.01uF 50V |
| C019 | 1-162-968-11 | CERAMIC CHIP | 0.0047uF 10% 50V | C048 | 1-164-005-11 | CERAMIC CHIP | 0.47uF 25V |
| C020 | 1-162-957-11 | CERAMIC CHIP | 220PF 5% 50V | C049 | 1-128-004-11 | ELECT CHIP | 10uF 20% 16V |
| C021 | 1-162-587-11 | CERAMIC CHIP | 0.039uF 10% 25V | C050 | 1-162-964-11 | CERAMIC CHIP | 0.001uF 10% 50V |
| C022 | 1-162-963-11 | CERAMIC CHIP | 680PF 10% 50V | C051 | 1-128-004-11 | ELECT CHIP | 10uF 20% 16V |
| C023 | 1-164-174-11 | CERAMIC CHIP | 0.0082uF 10% 25V | C052 | 1-126-205-11 | ELECT CHIP | 47uF 20% 6.3V |
| C024 | 1-128-013-11 | ELECT CHIP | 1uF 20% 50V | C053 | 1-164-156-11 | CERAMIC CHIP | 0.1uF 25V |
| C025 | 1-128-004-11 | ELECT CHIP | 10uF 20% 16V | C054 | 1-164-156-11 | CERAMIC CHIP | 0.1uF 25V |
| C026 | 1-128-004-11 | ELECT CHIP | 10uF 20% 16V | C055 | 1-126-206-11 | ELECT CHIP | 100uF 20% 6.3V |
| C027 | 1-124-778-00 | ELECT CHIP | 22uF 20% 6.3V | C056 | 1-126-206-11 | ELECT CHIP | 100uF 20% 6.3V |
| C028 | 1-126-206-11 | ELECT CHIP | 100uF 20% 6.3V | C057 | 1-164-005-11 | CERAMIC CHIP | 0.47uF 25V |
| C029 | 1-164-005-11 | CERAMIC CHIP | 0.47uF 25V | C058 | 1-128-007-11 | ELECT CHIP | 2.2uF 20% 35V |
| C030 | 1-126-209-11 | ELECT CHIP | 100uF 20% 4V | C059 | 1-126-205-11 | ELECT CHIP | 47uF 20% 6.3V |
| | | | | C060 | 1-162-964-11 | CERAMIC CHIP | 0.001uF 10% 50V |
| | | | | C061 | 1-164-005-11 | CERAMIC CHIP | 0.47uF 25V |
| | | | | C062 | 1-128-013-11 | ELECT CHIP | 1uF 20% 50V |
| | | | | C063 | 1-126-205-11 | ELECT CHIP | 47uF 20% 6.3V |
| | | | | C064 | 1-135-217-21 | TANTALUM CHIP | 15uF 20% 6.3V |

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|-----------------------|------------|
| C301 | 1-164-155-11 | CERAMIC CHIP 75PF | 10% 50V |
| C302 | 1-162-920-11 | CERAMIC CHIP 27PF | 5% 50V |
| C303 | 1-164-156-11 | CERAMIC CHIP 0.1uF | 25V |
| C304 | 1-135-201-11 | TANTALUM CHIP 10uF | 20% 4V |
| C306 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C309 | 1-162-947-11 | CERAMIC CHIP 33PF | 5% 50V |
| C310 | 1-162-956-11 | CERAMIC CHIP 180PF | 5% 50V |
| C311 | 1-162-947-11 | CERAMIC CHIP 33PF | 5% 50V |
| C312 | 1-162-956-11 | CERAMIC CHIP 180PF | 5% 50V |
| C313 | 1-164-361-11 | CERAMIC CHIP 0.047uF | 16V |
| C314 | 1-124-778-00 | ELECT CHIP 22uF | 20% 6.3V |
| C315 | 1-128-006-11 | ELECT CHIP 4.7uF | 20% 25V |
| C316 | 1-162-964-11 | CERAMIC CHIP 0.001uF | 10% 50V |
| C317 | 1-162-968-11 | CERAMIC CHIP 0.0047uF | 10% 50V |
| C319 | 1-164-156-11 | CERAMIC CHIP 0.1uF | 25V |
| C320 | 1-162-920-11 | CERAMIC CHIP 27PF | 5% 50V |
| C321 | 1-164-155-11 | CERAMIC CHIP 75PF | 10% 50V |
| C322 | 1-164-156-11 | CERAMIC CHIP 0.1uF | 25V |
| C323 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C324 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C325 | 1-135-201-11 | TANTALUM CHIP 10uF | 20% 4V |
| C326 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C327 | 1-162-927-11 | CERAMIC CHIP 100PF | 5% 50V |
| C328 | 1-124-778-00 | ELECT CHIP 22uF | 20% 6.3V |
| C329 | 1-128-004-11 | ELECT CHIP 10uF | 20% 16V |
| C331 | 1-164-156-11 | CERAMIC CHIP 0.1uF | 25V |
| C332 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C333 | 1-124-778-00 | ELECT CHIP 22uF | 20% 6.3V |
| C334 | 1-128-013-11 | ELECT CHIP 1uF | 20% 50V |
| C335 | 1-128-013-11 | ELECT CHIP 1uF | 20% 50V |
| C337 | 1-164-217-11 | CERAMIC CHIP 150PF | 0.25PF 50V |
| C338 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C339 | 1-124-778-00 | ELECT CHIP 22uF | 20% 6.3V |
| C340 | 1-128-004-11 | ELECT CHIP 10uF | 20% 16V |
| C341 | 1-128-013-11 | ELECT CHIP 1uF | 20% 50V |
| C342 | 1-162-964-11 | CERAMIC CHIP 0.001uF | 10% 50V |
| C344 | 1-164-218-11 | CERAMIC CHIP 180PF | 0.25PF 50V |
| C345 | 1-162-917-11 | CERAMIC CHIP 15PF | 5% 50V |
| C348 | 1-135-217-21 | TANTALUM CHIP 15uF | 20% 6.3V |
| C349 | 1-164-315-11 | CERAMIC CHIP 470PF | 10% 50V |
| C352 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C353 | 1-135-161-21 | TANTALUM CHIP 22uF | 10% 6.3V |
| C350 | 1-126-246-11 | ELECT CHIP 220uF | 20% 4V |
| C361 | 1-135-201-11 | TANTALUM CHIP 10uF | 20% 4V |
| C362 | 1-162-919-11 | CERAMIC CHIP 22PF | 5% 50V |
| C363 | 1-162-926-11 | CERAMIC CHIP 82PF | 5% 50V |
| C364 | 1-162-926-11 | CERAMIC CHIP 82PF | 5% 50V |
| C365 | 1-162-921-11 | CERAMIC CHIP 33PF | 5% 50V |
| C367 | 1-135-202-21 | TANTAL. CHIP 22uF | 20% 4V |

| Ref. No. | Part No. | Description | Remark |
|----------------|--------------|--------------------------------|------------|
| C368 | 1-164-386-11 | CERAMIC CHIP 0.0002uF | 0.25PF 50V |
| C370 | 1-162-926-11 | CERAMIC CHIP 82PF | 5% 50V |
| C371 | 1-124-778-00 | ELECT CHIP 22uF | 20% 6.3V |
| C372 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C373 | 1-126-205-11 | ELECT CHIP 47uF | 20% 6.3V |
| C380 | 1-135-202-21 | TANTAL. CHIP 22uF | 20% 4V |
| C381 | 1-162-920-11 | CERAMIC CHIP 27PF | 5% 50V |
| C382 | 1-162-928-11 | CERAMIC CHIP 120PF | 5% 50V |
| C383 | 1-162-957-11 | CERAMIC CHIP 220PF | 5% 50V |
| C384 | 1-162-957-11 | CERAMIC CHIP 220PF | 5% 50V |
| C390 | 1-126-205-11 | ELECT CHIP 47uF | 20% 6.3V |
| C391 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C392 | 1-135-201-11 | TANTALUM CHIP 10uF | 20% 4V |
| C393 | 1-135-201-11 | TANTALUM CHIP 10uF | 20% 4V |
| C394 | 1-135-201-11 | TANTALUM CHIP 10uF | 20% 4V |
| < CONNECTOR > | | | |
| CN001 | 1-569-635-41 | CONNECTOR, BOARD TO BOARD 20P | |
| CN002 | 1-569-636-41 | CONNECTOR, BOARD TO BOARD 22P | |
| < DIODE > | | | |
| D001 | 8-719-941-23 | DIODE DA204U | |
| D002 | 8-719-941-86 | DIODE DAN202U | |
| D003 | 8-719-941-86 | DIODE DAN202U | |
| < DELAY LINE > | | | |
| DL301 | 1-415-816-11 | DELAY LINE, ULTRASONIC (GLASS) | |
| < FILTER > | | | |
| FL001 | 1-236-145-11 | FILTER, BAND PASS | |
| < IC > | | | |
| IC001 | 8-752-033-01 | IC CXA1237AR | |
| IC002 | 8-759-234-77 | IC TC4566F | |
| IC003 | 8-759-701-02 | IC NJM2073M | |
| IC301 | 8-752-035-00 | IC CXA1227Q | |
| IC302 | 8-752-034-04 | IC CXA1219M | |
| < COIL > | | | |
| L001 | 1-412-032-11 | INDUCTOR CHIP 100uH | |
| L002 | 1-410-658-31 | INDUCTOR CHIP 220uH | |
| L301 | 1-410-383-31 | INDUCTOR CHIP 15uH | |
| L302 | 1-410-381-11 | INDUCTOR CHIP 10uH | |
| L303 | 1-410-381-11 | INDUCTOR CHIP 10uH | |
| L304 | 1-410-383-31 | INDUCTOR CHIP 15uH | |
| L305 | 1-410-380-31 | INDUCTOR CHIP 8.2uH | |
| L306 | 1-410-380-31 | INDUCTOR CHIP 8.2uH | |
| L307 | 1-410-392-11 | INDUCTOR CHIP 82uH | |
| L308 | 1-410-379-31 | INDUCTOR CHIP 6.8uH | |

| Ref. No. | Part No. | Description | Remark |
|-------------------|--------------|--------------------------|--------|
| L310 | 1-410-390-11 | INDUCTOR CHIP 56uH | |
| L311 | 1-410-393-11 | INDUCTOR CHIP 100uH | |
| L312 | 1-410-390-11 | INDUCTOR CHIP 56uH | |
| L313 | 1-410-391-11 | INDUCTOR CHIP 68uH | |
| L314 | 1-410-390-11 | INDUCTOR CHIP 56uH | |
| L320 | 1-412-032-11 | INDUCTOR CHIP 100uH | |
| L321 | 1-412-030-11 | INDUCTOR CHIP 22uH | |
| L322 | 1-410-389-31 | INDUCTOR CHIP 47uH | |
| L323 | 1-412-030-11 | INDUCTOR CHIP 22uH | |
| L324 | 1-412-032-11 | INDUCTOR CHIP 100uH | |
| L325 | 1-412-032-11 | INDUCTOR CHIP 100uH | |
| < VARIABLE COIL > | | | |
| LV301 | 1-460-144-11 | COIL, VARIABLE 47uH | |
| LV302 | 1-460-144-11 | COIL, VARIABLE 47uH | |
| LV304 | 1-460-143-11 | COIL, VARIABLE 3.3uH | |
| < TRANSISTOR > | | | |
| Q001 | 8-729-905-23 | TRANSISTOR 2SA1576-R | |
| Q002 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| Q003 | 8-729-905-18 | TRANSISTOR DTC144EU | |
| Q004 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| Q005 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| Q006 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| Q007 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| Q008 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| Q009 | 8-729-141-48 | TRANSISTOR 2SB624-BV345 | |
| Q010 | 8-729-920-85 | TRANSISTOR 2SD1664-QR | |
| Q302 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| Q303 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| Q304 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| Q305 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| Q306 | 8-729-905-23 | TRANSISTOR 2SA1576-R | |
| Q307 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| Q308 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| Q309 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| Q310 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| Q311 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| Q312 | 8-729-905-18 | TRANSISTOR DTC144EU | |
| < RESISTOR > | | | |
| R001 | 1-216-829-11 | METAL CHIP 4.7K 5% 1/16W | |
| R002 | 1-216-829-11 | METAL CHIP 4.7K 5% 1/16W | |
| R003 | 1-216-829-11 | METAL CHIP 4.7K 5% 1/16W | |
| R004 | 1-216-850-11 | METAL CHIP 270K 5% 1/16W | |
| R005 | 1-216-857-11 | METAL CHIP 1M 5% 1/16W | |
| R006 | 1-216-821-11 | METAL CHIP 1K 5% 1/16W | |
| R007 | 1-216-839-11 | METAL CHIP 33K 5% 1/16W | |

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|--------------------------|--------|
| R008 | 1-216-839-11 | METAL CHIP 33K 5% 1/16W | |
| R009 | 1-216-827-11 | METAL CHIP 3.3K 5% 1/16W | |
| R010 | 1-216-841-11 | METAL CHIP 47K 5% 1/16W | |
| R016 | 1-216-849-11 | METAL CHIP 220K 5% 1/16W | |
| R017 | 1-216-819-11 | METAL CHIP 680 5% 1/16W | |
| R018 | 1-216-820-11 | METAL CHIP 820 5% 1/16W | |
| R019 | 1-216-820-11 | METAL CHIP 820 5% 1/16W | |
| R020 | 1-216-845-11 | METAL CHIP 100K 5% 1/16W | |
| R021 | 1-216-834-11 | METAL CHIP 12K 5% 1/16W | |
| R022 | 1-216-828-11 | METAL CHIP 3.9K 5% 1/16W | |
| R023 | 1-216-825-11 | METAL CHIP 2.2K 5% 1/16W | |
| R024 | 1-216-819-11 | METAL CHIP 680 5% 1/16W | |
| R025 | 1-216-826-11 | METAL CHIP 2.7K 5% 1/16W | |
| R026 | 1-216-826-11 | METAL CHIP 2.7K 5% 1/16W | |
| R027 | 1-216-827-11 | METAL CHIP 3.3K 5% 1/16W | |
| R028 | 1-216-827-11 | METAL CHIP 3.3K 5% 1/16W | |
| R029 | 1-216-833-11 | METAL CHIP 10K 5% 1/16W | |
| R030 | 1-216-838-11 | METAL CHIP 27K 5% 1/16W | |
| R031 | 1-216-829-11 | METAL CHIP 4.7K 5% 1/16W | |
| R032 | 1-216-835-11 | METAL CHIP 15K 5% 1/16W | |
| R034 | 1-216-841-11 | METAL CHIP 47K 5% 1/16W | |
| R035 | 1-216-828-11 | METAL CHIP 3.9K 5% 1/16W | |
| R037 | 1-216-829-11 | METAL CHIP 4.7K 5% 1/16W | |
| R038 | 1-216-836-11 | METAL CHIP 18K 5% 1/16W | |
| R039 | 1-216-841-11 | METAL CHIP 47K 5% 1/16W | |
| R040 | 1-216-836-11 | METAL CHIP 18K 5% 1/16W | |
| R041 | 1-216-838-11 | METAL CHIP 27K 5% 1/16W | |
| R042 | 1-216-831-11 | METAL CHIP 6.8K 5% 1/16W | |
| R043 | 1-216-831-11 | METAL CHIP 6.8K 5% 1/16W | |
| R046 | 1-216-825-11 | METAL CHIP 2.2K 5% 1/16W | |
| R047 | 1-216-826-11 | METAL CHIP 2.7K 5% 1/16W | |
| R048 | 1-216-821-11 | METAL CHIP 1K 5% 1/16W | |
| R049 | 1-216-821-11 | METAL CHIP 1K 5% 1/16W | |
| R050 | 1-216-845-11 | METAL CHIP 100K 5% 1/16W | |
| R051 | 1-216-845-11 | METAL CHIP 100K 5% 1/16W | |
| R052 | 1-216-835-11 | METAL CHIP 15K 5% 1/16W | |
| R053 | 1-216-838-11 | METAL CHIP 27K 5% 1/16W | |
| R054 | 1-216-825-11 | METAL CHIP 2.2K 5% 1/16W | |
| R055 | 1-216-829-11 | METAL CHIP 4.7K 5% 1/16W | |
| R057 | 1-216-819-11 | METAL CHIP 680 5% 1/16W | |
| R058 | 1-216-832-11 | METAL CHIP 8.2K 5% 1/16W | |
| R059 | 1-216-819-11 | METAL CHIP 680 5% 1/16W | |
| R060 | 1-216-789-11 | METAL CHIP 2.2 5% 1/16W | |
| R061 | 1-216-789-11 | METAL CHIP 2.2 5% 1/16W | |
| R064 | 1-216-841-11 | METAL CHIP 47K 5% 1/16W | |
| R065 | 1-216-841-11 | METAL CHIP 47K 5% 1/16W | |
| R066 | 1-216-837-11 | METAL CHIP 22K 5% 1/16W | |
| R073 | 1-216-826-11 | METAL CHIP 2.7K 5% 1/16W | |

| Ref. No. | Part No. | Description | Remark | | |
|----------|--------------|-------------|--------|------|-------|
| R074 | 1-216-838-11 | METAL CHIP | 27K | 5% | 1/16W |
| R075 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W |
| R077 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W |
| R078 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W |
| R079 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W |
| R080 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W |
| R081 | 1-216-803-11 | METAL CHIP | 33 | 5% | 1/16W |
| R099 | 1-216-831-11 | METAL CHIP | 6.8K | 5% | 1/16W |
| R301 | 1-216-816-11 | METAL CHIP | 390 | 5% | 1/16W |
| R302 | 1-216-836-11 | METAL CHIP | 18K | 5% | 1/16W |
| R303 | 1-216-861-11 | METAL CHIP | 2.2M | 5% | 1/16W |
| R306 | 1-216-830-11 | METAL CHIP | 5.6K | 5% | 1/16W |
| R307 | 1-216-865-11 | METAL CHIP | 3K | 5% | 1/16W |
| R308 | 1-216-830-11 | METAL CHIP | 5.6K | 5% | 1/16W |
| R309 | 1-216-865-11 | METAL CHIP | 3K | 5% | 1/16W |
| R310 | 1-216-835-11 | METAL CHIP | 15K | 5% | 1/16W |
| R311 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R312 | 1-216-829-11 | METAL CHIP | 4.7K | 5% | 1/16W |
| R313 | 1-216-816-11 | METAL CHIP | 390 | 5% | 1/16W |
| R314 | 1-216-816-11 | METAL CHIP | 390 | 5% | 1/16W |
| R315 | 1-216-816-11 | METAL CHIP | 390 | 5% | 1/16W |
| R316 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W |
| R317 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W |
| R318 | 1-216-885-11 | METAL CHIP | 27K | 0.5% | 1/10W |
| R319 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R321 | 1-216-817-11 | METAL CHIP | 470 | 5% | 1/16W |
| R322 | 1-216-818-11 | METAL CHIP | 560 | 5% | 1/16W |
| R323 | 1-216-864-11 | METAL CHIP | 0 | | |
| R324 | 1-216-835-11 | METAL CHIP | 15K | 5% | 1/16W |
| R325 | 1-216-864-11 | METAL CHIP | 0 | | |
| R334 | 1-216-857-11 | METAL CHIP | 1M | 5% | 1/16W |
| R350 | 1-216-815-11 | METAL CHIP | 330 | 5% | 1/16W |
| R351 | 1-216-846-00 | METAL CHIP | 750 | 5% | 1/10W |
| R352 | 1-216-817-11 | METAL CHIP | 470 | 5% | 1/16W |
| R353 | 1-216-835-11 | METAL CHIP | 15K | 5% | 1/16W |
| R354 | 1-216-839-11 | METAL CHIP | 33K | 5% | 1/15W |
| R355 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R356 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R357 | 1-216-816-11 | METAL CHIP | 390 | 5% | 1/16W |
| R358 | 1-216-819-11 | METAL CHIP | 680 | 5% | 1/16W |
| R359 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W |
| R360 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W |
| R361 | 1-216-819-11 | METAL CHIP | 680 | 5% | 1/16W |
| R362 | 1-216-819-11 | METAL CHIP | 680 | 5% | 1/16W |
| R364 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R365 | 1-216-819-11 | METAL CHIP | 680 | 5% | 1/16W |
| R366 | 1-216-819-11 | METAL CHIP | 680 | 5% | 1/16W |
| R367 | 1-216-822-11 | METAL CHIP | 1.2K | 5% | 1/16W |
| R368 | 1-216-820-11 | METAL CHIP | 820 | 5% | 1/16W |

| Ref. No. | Part No. | Description | Remark | | |
|----------|--------------|-------------|--------|----|-------|
| R369 | 1-216-823-11 | METAL CHIP | 1.5K | 5% | 1/16W |
| R370 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R371 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W |
| R372 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W |
| R373 | 1-216-822-11 | METAL CHIP | 1.2K | 5% | 1/16W |
| R376 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W |
| R377 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W |
| R380 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R381 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R382 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W |
| R383 | 1-216-838-11 | METAL CHIP | 27K | 5% | 1/16W |
| R385 | 1-216-842-11 | METAL CHIP | 56K | 5% | 1/16W |
| R386 | 1-216-829-11 | METAL CHIP | 4.7K | 5% | 1/16W |
| R387 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W |

< VARIABLE RESISTOR >

| | | |
|-------|--------------|--------------------|
| RV002 | 1-238-090-11 | RES. ADJ CERMET10K |
| RV003 | 1-238-091-11 | RES. ADJ CERMET22K |
| RV301 | 1-238-090-11 | RES. ADJ CERMET10K |
| RV302 | 1-238-090-11 | RES. ADJ CERMET10K |
| RV303 | 1-238-092-11 | RES. ADJ CERMET47K |

< CRYSTAL >

| | | |
|------|--------------|-----------------------------|
| X301 | 1-577-117-21 | VIBRATOR, CRYSTAL (4.43MHz) |
|------|--------------|-----------------------------|

A-7062-436-A CC-55 BOARD, COMPLETE




 (Ref. No 5.000 Series)

< CAPACITOR >

| | | | | | |
|------|--------------|---------------|--------|-----|------|
| C001 | 1-162-946-11 | CERAMIC CHIP | 27PF | 5% | 50V |
| C002 | 1-162-974-11 | CERAMIC CHIP | 0.01uF | | 50V |
| C003 | 1-135-180-21 | TANTALUM CHIP | 3.3uF | 20% | 6.3V |
| C004 | 1-162-974-11 | CERAMIC CHIP | 0.01uF | | 50V |
| C005 | 1-162-946-11 | CERAMIC CHIP | 27PF | 5% | 50V |
| C006 | 1-162-974-11 | CERAMIC CHIP | 0.01uF | | 50V |
| C007 | 1-162-946-11 | CERAMIC CHIP | 27PF | 5% | 50V |
| C008 | 1-135-180-21 | TANTALUM CHIP | 3.3uF | 20% | 6.3V |
| C009 | 1-162-946-11 | CERAMIC CHIP | 27PF | 5% | 50V |
| C010 | 1-164-360-11 | CERAMIC CHIP | 0.1uF | | 16V |
| C011 | 1-162-946-11 | CERAMIC CHIP | 27PF | 5% | 50V |
| C012 | 1-162-946-11 | CERAMIC CHIP | 27PF | 5% | 50V |
| C013 | 1-162-974-11 | CERAMIC CHIP | 0.01uF | | 50V |
| C014 | 1-162-946-11 | CERAMIC CHIP | 27PF | 5% | 50V |
| C015 | 1-135-180-21 | TANTALUM CHIP | 3.3uF | 20% | 6.3V |
| C016 | 1-162-946-11 | CERAMIC CHIP | 27PF | 5% | 50V |
| C017 | 1-162-974-11 | CERAMIC CHIP | 0.01uF | | 50V |
| C018 | 1-162-946-11 | CERAMIC CHIP | 27PF | 5% | 50V |

| Ref. No. | Part No. | Description | Remark |
|----------|----------------|------------------------------|--------|
| | | < IC > | |
| IC001 | 8-752-333-24 | IC CXL1506M | |
| | | < COIL > | |
| L001 | 1-410-988-11 | INDUCTOR, CHIP 0.39uH | |
| L002 | 1-410-988-11 | INDUCTOR, CHIP 0.39uH | |
| L003 | 1-412-031-11 | INDUCTOR, CHIP 47uH | |
| L004 | 1-410-988-11 | INDUCTOR, CHIP 0.39uH | |
| L005 | 1-410-988-11 | INDUCTOR, CHIP 0.39uH | |
| L006 | 1-410-988-11 | INDUCTOR, CHIP 0.39uH | |
| L007 | 1-410-988-11 | INDUCTOR, CHIP 0.39uH | |
| L008 | 1-412-031-11 | INDUCTOR, CHIP 47uH | |
| L009 | 1-410-988-11 | INDUCTOR, CHIP 0.39uH | |
| L010 | 1-410-988-11 | INDUCTOR, CHIP 0.39uH | |
| | | < RESISTOR > | |
| R001 | 1-216-857-11 | METAL CHIP 1M 5% 1/16W | |
| R002 | 1-216-823-11 | METAL CHIP 1.5K 5% 1/16W | |
| R003 | 1-216-810-11 | METAL CHIP 120 5% 1/16W | |
| R004 | 1-216-844-11 | METAL CHIP 82K 5% 1/16W | |
| R005 | 1-216-823-11 | METAL CHIP 1.5K 5% 1/16W | |
| R006 | 1-216-864-11 | METAL CHIP 0 | |
| ***** | | | |
| | * A-7071-289-A | CN-6P BOARD, COMPLETE | |
| | | ***** | |
| | | (Ref. No 3, 000 Series) | |
| | | < CONNECTOR > | |
| CN601 | 1-566-544-41 | CONNECTOR, FPC (NON ZIF) 12P | |
| CN602 | 1-565-527-11 | PIN, CONNECTOR (PC BOARD) 2P | |
| | | < DIODE > | |
| D602 | 8-719-106-43 | DIODE RD9, 1M-B1 | |
| D603 | 8-719-106-43 | DIODE RD9, 1M-B1 | |
| D604 | 8-719-106-43 | DIODE RD9, 1M-B1 | |
| D605 | 8-719-106-43 | DIODE RD9, 1M-B1 | |
| D606 | 8-719-106-43 | DIODE RD9, 1M-B1 | |
| D608 | 8-719-106-43 | DIODE RD9, 1M-B1 | |
| | | < JACK > | |
| J601 | 1-562-952-12 | CONNECTOR 12P (CAMERA) | |

| Ref. No. | Part No. | Description | Remark |
|----------|----------------|--------------------------------|--------|
| | * A-7071-288-A | DC-22P BOARD, COMPLETE | |
| | | ***** | |
| | | (Ref. No 4, 000 Series) | |
| | * 3-744-170-01 | HOLDER, DC | |
| | 3-746-959-01 | SPACER, DC | |
| | | < JACK > | |
| J702 | 1-537-241-11 | TERMINAL BOARD (BATTERY) | |
| | | < IC LINK > | |
| PS701 | △ 1-532-840-21 | LINK, IC PRF1250 (1.25A) | |
| PS702 | △ 1-532-840-21 | LINK, IC PRF1250 (1.25A) | |
| PS703 | △ 1-532-840-21 | LINK, IC PRF1250 (1.25A) | |
| PS704 | △ 1-532-840-21 | LINK, IC PRF1250 (1.25A) | |
| PS705 | △ 1-532-840-21 | LINK, IC PRF1250 (1.25A) | |
| PS706 | △ 1-532-840-21 | LINK, IC PRF1250 (1.25A) | |
| | | < FLAT CABLE > | |
| W701 | 1-575-823-11 | CABLE, FLAT (1.0MM PITCH) 16P | |
| ***** | | | |
| | 1-628-060-12 | FP-89 FLEXIBLE BOARD | |
| | | ***** | |
| | | (Ref. No 8, 000 Series) | |
| | 1-572-173-11 | SWITCH, SLIDE (ENCODER) | |
| | | < PHOTO COUPLER > | |
| D301 | 8-719-820-44 | PHOTO COUPLER TLP907-0 (SONY2) | |
| | | < SENSOR > | |
| Q301 | 8-729-906-48 | SENSOR EE-TP109 | |
| | | < SWITCH > | |
| S901 | 1-571-099-11 | SWITCH (CASSETTE DOWN) | |
| ***** | | | |
| | 1-628-061-12 | FP-90 FLEXIBLE BOARD | |
| | | ***** | |
| | | (Ref. No 8, 000 Series) | |
| | | < DIODE > | |
| D302 | 8-719-940-81 | DIODE GL452S | |
| D303 | 8-719-820-44 | PHOTO COUPLER TLP907-0 (SONY2) | |

| | |
|--|--|
| <p>Note: The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.</p> | <p>Note: Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p> |
|--|--|

FP-90

KB-10P

RG-22

| Ref. No. | Part No. | Description | Remark |
|----------|----------------|---------------------------------------|--------|
| | | < SENSOR > | |
| Q302 | 8-729-906-48 | SENSOR EE-TP109 | |
| | | < SWITCH > | |
| S302 | 1-572-298-11 | SWITCH PUSH (ME/MP, MP HG, REC PROOF) | |
| ***** | | | |
| | * A-7071-319-A | KB-10P BOARD, COMPLETE | |
| | | ***** | |
| | | (Ref. No 4,000 Series) | |
| | * 3-744-130-01 | HOLDER (PC), LED | |
| | | < CONNECTOR > | |
| CN802 | 1-566-760-11 | PIN, CONNECTOR (PC BOARD) 5P | |
| | | < DIODE > | |
| D801 | 8-719-970-40 | DIODE GL1EG101 | |
| D803 | 8-719-918-65 | DIODE GL1PR102 | |
| D804 | 8-719-918-65 | DIODE GL1PR102 | |
| D808 | 8-719-951-22 | DIODE IMN10 | |
| D809 | 8-719-951-22 | DIODE IMN10 | |
| D810 | 8-719-104-34 | DIODE 1S2836 | |
| | | < TRANSISTOR > | |
| Q801 | 8-729-403-24 | TRANSISTOR XN4210 | |
| Q802 | 8-729-403-24 | TRANSISTOR XN4210 | |
| Q803 | 8-729-403-24 | TRANSISTOR XN4210 | |
| | | < RESISTOR > | |
| R801 | 1-216-033-00 | METAL CHIP 220 5% 1/10W | |
| R803 | 1-216-037-00 | METAL CHIP 330 5% 1/10W | |
| R804 | 1-216-037-00 | METAL CHIP 330 5% 1/10W | |
| R808 | 1-216-075-00 | METAL CHIP 12K 5% 1/10W | |
| | | < SWITCH > | |
| S801 | 1-572-344-21 | SWITCH, SLIDE (POWER) | |
| S802 | 1-572-078-11 | SWITCH, TACTILE (CHANNEL -) | |
| S803 | 1-572-078-11 | SWITCH, TACTILE (CHANNEL +) | |
| S805 | 1-571-102-11 | SWITCH, SLIDE (EJECT) | |
| S806 | 1-572-078-11 | SWITCH, TACTILE (REW) | |
| S807 | 1-572-078-11 | SWITCH, TACTILE (FF) | |
| S808 | 1-572-078-11 | SWITCH, TACTILE (PB) | |
| S809 | 1-572-078-11 | SWITCH, TACTILE (STOP) | |
| S810 | 1-572-078-11 | SWITCH, TACTILE (PAUSE) | |
| S811 | 1-571-102-11 | SWITCH, SLIDE (REC) | |
| S812 | 1-572-078-11 | SWITCH, TACTILE (SLOW) | |

| Ref. No. | Part No. | Description | Remark |
|----------|----------------|------------------------------|--------|
| | * A-7062-437-A | RG-22 BOARD, COMPLETE | |
| | | ***** | |
| | | (Ref. No 2,000 Series) | |
| | | < CAPACITOR > | |
| C001 | 1-163-038-00 | CERAMIC CHIP 0.1uF 25V | |
| C002 | 1-135-151-21 | TANTALUM CHIP 4.7uF 20% 4V | |
| C004 | 1-163-245-11 | CERAMIC CHIP 56PF 5% 50V | |
| C005 | 1-163-251-11 | CERAMIC CHIP 100PF 5% 50V | |
| C006 | 1-164-232-11 | CERAMIC CHIP 0.01uF 50V | |
| C007 | 1-163-141-00 | CERAMIC CHIP 0.001uF 5% 50V | |
| C008 | 1-135-157-21 | TANTALUM CHIP 10uF 20% 6.3V | |
| C009 | 1-164-232-11 | CERAMIC CHIP 0.01uF 50V | |
| C010 | 1-126-206-11 | ELECT CHIP 100uF 20% 6.3V | |
| C011 | 1-164-634-11 | CERAMIC CHIP 1uF 16V | |
| C012 | 1-164-232-11 | CERAMIC CHIP 0.01uF 50V | |
| C013 | 1-163-103-00 | CERAMIC CHIP 27PF 5% 50V | |
| C014 | 1-163-009-11 | CERAMIC CHIP 0.001uF 10% 50V | |
| C015 | 1-164-634-11 | CERAMIC CHIP 1uF 16V | |
| C017 | 1-163-241-11 | CERAMIC CHIP 39PF 5% 50V | |
| C018 | 1-163-241-11 | CERAMIC CHIP 39PF 5% 50V | |
| C019 | 1-162-638-11 | CERAMIC CHIP 1uF 16V | |
| C020 | 1-162-638-11 | CERAMIC CHIP 1uF 16V | |
| C021 | 1-163-103-00 | CERAMIC CHIP 27PF 5% 50V | |
| C022 | 1-135-076-21 | TANTALUM CHIP 1uF 10% 35V | |
| C023 | 1-163-125-00 | CERAMIC CHIP 220PF 5% 50V | |
| C025 | 1-163-103-00 | CERAMIC CHIP 27PF 5% 50V | |
| C026 | 1-163-009-11 | CERAMIC CHIP 0.001uF 10% 50V | |
| C027 | 1-164-232-11 | CERAMIC CHIP 0.01uF 50V | |
| C028 | 1-163-241-11 | CERAMIC CHIP 39PF 5% 50V | |
| C029 | 1-135-162-21 | TANTALUM CHIP 33uF 20% 6.3V | |
| C030 | 1-163-105-00 | CERAMIC CHIP 33PF 5% 50V | |
| C031 | 1-162-638-11 | CERAMIC CHIP 1uF 16V | |
| C032 | 1-162-638-11 | CERAMIC CHIP 1uF 16V | |
| C034 | 1-163-103-00 | CERAMIC CHIP 27PF 5% 50V | |
| C035 | 1-163-097-00 | CERAMIC CHIP 15PF 5% 50V | |
| C036 | 1-164-232-11 | CERAMIC CHIP 0.01uF 50V | |
| C037 | 1-163-115-00 | CERAMIC CHIP 82PF 5% 50V | |
| C038 | 1-164-232-11 | CERAMIC CHIP 0.01uF 50V | |
| C039 | 1-163-111-00 | CERAMIC CHIP 56PF 5% 50V | |
| C040 | 1-164-232-11 | CERAMIC CHIP 0.01uF 50V | |
| C041 | 1-163-109-00 | CERAMIC CHIP 47PF 5% 50V | |
| C042 | 1-164-232-11 | CERAMIC CHIP 0.01uF 50V | |
| C043 | 1-162-638-11 | CERAMIC CHIP 1uF 16V | |
| C044 | 1-162-638-11 | CERAMIC CHIP 1uF 16V | |
| C045 | 1-162-638-11 | CERAMIC CHIP 1uF 16V | |
| C046 | 1-164-232-11 | CERAMIC CHIP 0.01uF 50V | |
| C047 | 1-163-038-00 | CERAMIC CHIP 0.1uF 25V | |
| C048 | 1-164-232-11 | CERAMIC CHIP 0.01uF 50V | |

| Ref. No. | Part No. | Description | Remark |
|---------------|--------------|----------------------------------|----------|
| C049 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C050 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C051 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C052 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C053 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C054 | 1-135-156-21 | TANTALUM CHIP 6.8uF | 10% 6.3V |
| C055 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C056 | 1-135-156-21 | TANTALUM CHIP 6.8uF | 10% 6.3V |
| C057 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C058 | 1-126-199-11 | ELECT CHIP 6.8uF | 20% 35V |
| C059 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C060 | 1-126-199-11 | ELECT CHIP 6.8uF | 20% 35V |
| C061 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C062 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C063 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V |
| C064 | 1-163-139-00 | CERAMIC CHIP 820PF | 5% 50V |
| C065 | 1-163-115-00 | CERAMIC CHIP 82PF | 5% 50V |
| C066 | 1-126-204-11 | ELECT CHIP 47uF | 20% 16V |
| C067 | 1-135-181-21 | TANTALUM CHIP 4.7uF | 20% 6.3V |
| C068 | 1-126-206-11 | ELECT CHIP 100uF | 20% 6.3V |
| C069 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C070 | 1-164-634-11 | CERAMIC CHIP 1uF | 16V |
| C071 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C072 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C073 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C074 | 1-163-009-11 | CERAMIC CHIP 0.001uF | 10% 50V |
| C075 | 1-163-009-11 | CERAMIC CHIP 0.001uF | 10% 50V |
| C076 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C077 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C078 | 1-164-161-11 | CERAMIC CHIP 0.0022uF | 10% 100V |
| C079 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C080 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C081 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C082 | 1-163-009-11 | CERAMIC CHIP 0.001uF | 10% 50V |
| C083 | 1-163-009-11 | CERAMIC CHIP 0.001uF | 10% 50V |
| C084 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V |
| C085 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C086 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C803 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C804 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V |
| C805 | 1-163-105-00 | CERAMIC CHIP 33PF | 5% 50V |
| C809 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| < CONNECTOR > | | | |
| CN001 | 1-565-212-11 | CONNECTOR, FPC (ZIF) 26P | |
| CN002 | 1-568-238-11 | CONNECTOR, FPC (1.0MM) (ZIF) 16P | |
| CN501 | 1-568-235-21 | CONNECTOR, FPC (1.0MM) (ZIF) 10P | |
| CN901 | 1-565-528-11 | PIN, CONNECTOR (PC BOARD) 3P | |

| Ref. No. | Part No. | Description | Remark |
|----------------|--------------|-----------------------------|--------|
| < TRIMMER > | | | |
| CV001 | 1-141-311-11 | CAP. TRIMMER 20PF | |
| CV002 | 1-141-370-11 | CAP. CHIP TRIMMER | |
| CV801 | 1-141-368-11 | CAP. CHIP TRIMMER | |
| < DIODE > | | | |
| D001 | 8-719-400-18 | DIODE MA152WK | |
| < DELAY LINE > | | | |
| DL001 | 1-415-649-11 | DELAY LINE, 1H (ULTRASONIC) | |
| < FILTER > | | | |
| FL001 | 1-236-955-11 | FILTER, LOW PASS (Y:PAL) | |
| < IC > | | | |
| IC001 | 8-759-009-07 | IC MC14053BF | |
| IC002 | 8-759-635-37 | IC M52003AFP | |
| IC801 | 8-759-150-07 | IC uPD6451AGT-601 | |
| < COIL > | | | |
| L002 | 1-410-381-11 | INDUCTOR CHIP 10uH | |
| L003 | 1-412-029-11 | INDUCTOR CHIP 10uH | |
| L004 | 1-410-388-21 | INDUCTOR CHIP 39uH | |
| L005 | 1-410-388-21 | INDUCTOR CHIP 39uH | |
| L006 | 1-410-386-11 | INDUCTOR CHIP 27uH | |
| L007 | 1-412-028-11 | INDUCTOR CHIP 4.7uH | |
| L008 | 1-412-028-11 | INDUCTOR CHIP 4.7uH | |
| L009 | 1-412-032-11 | INDUCTOR CHIP 100uH | |
| L010 | 1-412-032-11 | INDUCTOR CHIP 100uH | |
| L011 | 1-410-383-31 | INDUCTOR CHIP 15uH | |
| L012 | 1-410-388-21 | INDUCTOR CHIP 39uH | |
| L013 | 1-412-029-11 | INDUCTOR CHIP 10uH | |
| L801 | 1-412-066-21 | INDUCTOR CHIP 220uH | |
| L802 | 1-412-192-31 | INDUCTOR 56uH | |
| < TRANSISTOR > | | | |
| Q001 | 8-729-100-66 | TRANSISTOR 2SC1623 | |
| Q002 | 8-729-100-66 | TRANSISTOR 2SC1623 | |
| Q003 | 8-729-100-66 | TRANSISTOR 2SC1623 | |
| Q004 | 8-729-901-01 | TRANSISTOR DTC144EK | |
| Q005 | 8-729-901-01 | TRANSISTOR DTC144EK | |
| Q006 | 8-729-904-41 | TRANSISTOR FMY3 | |
| Q007 | 8-729-904-44 | TRANSISTOR FMY4 | |
| Q008 | 8-729-904-41 | TRANSISTOR FMY3 | |
| Q009 | 8-729-904-44 | TRANSISTOR FMY4 | |
| Q010 | 8-729-904-41 | TRANSISTOR FMY3 | |
| Q011 | 8-729-904-44 | TRANSISTOR FMY4 | |

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|-------------------------|------------|----------|--------------|-----------------|----------|
| Q012 | 8-729-901-03 | TRANSISTOR DTC144WK | | R044 | 1-216-295-00 | METAL CHIP 0 | 5% 1/10W |
| Q013 | 8-729-141-48 | TRANSISTOR 2S0624-8V345 | | R045 | 1-216-542-11 | METAL CHIP 12K | 1% 1/10W |
| Q014 | 8-729-901-01 | TRANSISTOR DTC144EK | | R046 | 1-216-333-11 | METAL CHIP 15K | 1% 1/10W |
| Q015 | 8-729-100-66 | TRANSISTOR 2SC1623 | | R047 | 1-216-295-00 | METAL CHIP 0 | 5% 1/10W |
| Q901 | 8-729-901-00 | TRANSISTOR DTC124EK | | R048 | 1-216-295-00 | METAL CHIP 0 | 5% 1/10W |
| Q902 | 8-729-901-05 | TRANSISTOR DTA124EK | | R049 | 1-216-073-00 | METAL CHIP 10K | 5% 1/10W |
| | | < RESISTOR > | | R050 | 1-216-081-00 | METAL CHIP 22K | 5% 1/10W |
| R001 | 1-216-748-11 | METAL CHIP 39K | 5% 1/10W | R051 | 1-216-748-11 | METAL CHIP 39K | 5% 1/10W |
| R002 | 1-216-089-00 | METAL CHIP 47K | 5% 1/10W | R052 | 1-216-031-00 | METAL CHIP 180 | 5% 1/10W |
| R003 | 1-216-049-00 | METAL CHIP 1K | 5% 1/10W | R054 | 1-216-295-00 | METAL CHIP 0 | 5% 1/10W |
| R004 | 1-216-049-00 | METAL CHIP 1K | 5% 1/10W | R055 | 1-216-295-00 | METAL CHIP 0 | 5% 1/10W |
| R005 | 1-216-061-00 | METAL CHIP 3.3K | 5% 1/10W | R056 | 1-216-295-00 | METAL CHIP 0 | 5% 1/10W |
| R006 | 1-216-049-00 | METAL CHIP 1K | 5% 1/10W | R057 | 1-216-033-00 | METAL CHIP 220 | 5% 1/10W |
| R007 | 1-216-049-00 | METAL CHIP 1K | 5% 1/10W | R059 | 1-216-295-00 | METAL CHIP 0 | 5% 1/10W |
| R008 | 1-216-073-00 | METAL CHIP 10K | 5% 1/10W | R060 | 1-216-043-00 | METAL CHIP 560 | 5% 1/10W |
| R009 | 1-216-295-00 | METAL CHIP 0 | 5% 1/10W | R061 | 1-216-077-00 | METAL CHIP 15K | 5% 1/10W |
| R010 | 1-216-051-00 | METAL CHIP 1.2K | 5% 1/10W | R062 | 1-216-077-00 | METAL CHIP 15K | 5% 1/10W |
| R011 | 1-216-049-00 | METAL CHIP 1K | 5% 1/10W | R063 | 1-216-090-00 | METAL CHIP 51K | 5% 1/10W |
| R012 | 1-216-079-00 | METAL CHIP 18K | 5% 1/10W | R064 | 1-216-077-00 | METAL CHIP 15K | 5% 1/10W |
| R013 | 1-216-085-00 | METAL CHIP 33K | 5% 1/10W | R065 | 1-216-077-00 | METAL CHIP 15K | 5% 1/10W |
| R014 | 1-216-683-11 | METAL CHIP 22K | 0.5% 1/10W | R066 | 1-216-077-00 | METAL CHIP 15K | 5% 1/10W |
| R015 | 1-216-689-11 | METAL CHIP 39K | 0.5% 1/10W | R067 | 1-216-077-00 | METAL CHIP 15K | 5% 1/10W |
| R016 | 1-216-038-00 | METAL CHIP 360 | 5% 1/10W | R068 | 1-216-033-00 | METAL CHIP 220 | 5% 1/10W |
| R017 | 1-216-049-00 | METAL CHIP 1K | 5% 1/10W | R069 | 1-216-332-11 | METAL CHIP 11K | 1% 1/10W |
| R018 | 1-216-067-00 | METAL CHIP 5.6K | 5% 1/10W | R070 | 1-216-747-11 | METAL CHIP 33K | 1% 1/10W |
| R019 | 1-216-066-00 | METAL CHIP 5.1K | 5% 1/10W | R072 | 1-216-101-00 | METAL CHIP 150K | 5% 1/10W |
| R020 | 1-216-047-00 | METAL CHIP 820 | 5% 1/10W | R073 | 1-216-039-00 | METAL CHIP 390 | 5% 1/10W |
| R021 | 1-216-083-00 | METAL CHIP 27K | 5% 1/10W | R076 | 1-216-073-00 | METAL CHIP 10K | 5% 1/10W |
| R023 | 1-216-047-00 | METAL CHIP 820 | 5% 1/10W | R077 | 1-216-295-00 | METAL CHIP 0 | 5% 1/10W |
| R024 | 1-216-043-00 | METAL CHIP 560 | 5% 1/10W | R078 | 1-216-073-00 | METAL CHIP 10K | 5% 1/10W |
| R025 | 1-216-104-00 | METAL CHIP 200K | 5% 1/10W | R079 | 1-216-295-00 | METAL CHIP 0 | 5% 1/10W |
| R027 | 1-216-059-00 | METAL CHIP 2.7K | 5% 1/10W | R080 | 1-216-089-00 | METAL CHIP 47K | 5% 1/10W |
| R028 | 1-216-047-00 | METAL CHIP 820 | 5% 1/10W | R081 | 1-216-053-00 | METAL CHIP 1.5K | 5% 1/10W |
| R029 | 1-216-121-00 | METAL CHIP 1M | 5% 1/10W | R084 | 1-216-049-00 | METAL CHIP 1K | 5% 1/10W |
| R030 | 1-216-121-00 | METAL CHIP 1M | 5% 1/10W | R085 | 1-216-067-00 | METAL CHIP 5.6K | 5% 1/10W |
| R031 | 1-216-121-00 | METAL CHIP 1M | 5% 1/10W | R086 | 1-216-748-11 | METAL CHIP 39K | 5% 1/10W |
| R032 | 1-216-047-00 | METAL CHIP 820 | 5% 1/10W | R087 | 1-216-075-00 | METAL CHIP 12K | 5% 1/10W |
| R033 | 1-216-073-00 | METAL CHIP 10K | 5% 1/10W | R501 | 1-216-095-00 | METAL CHIP 82K | 5% 1/10W |
| R034 | 1-216-043-00 | METAL CHIP 560 | 5% 1/10W | R502 | 1-216-085-00 | METAL CHIP 33K | 5% 1/10W |
| R035 | 1-216-748-11 | METAL CHIP 39K | 5% 1/10W | R503 | 1-216-085-00 | METAL CHIP 33K | 5% 1/10W |
| R036 | 1-216-081-00 | METAL CHIP 22K | 5% 1/10W | R504 | 1-216-079-00 | METAL CHIP 18K | 5% 1/10W |
| R037 | 1-216-053-00 | METAL CHIP 1.5K | 5% 1/10W | R505 | 1-216-075-00 | METAL CHIP 12K | 5% 1/10W |
| R038 | 1-216-075-00 | METAL CHIP 12K | 5% 1/10W | R506 | 1-216-079-00 | METAL CHIP 18K | 5% 1/10W |
| R039 | 1-216-295-00 | METAL CHIP 0 | 5% 1/10W | R507 | 1-216-075-00 | METAL CHIP 12K | 5% 1/10W |
| R040 | 1-216-073-00 | METAL CHIP 10K | 5% 1/10W | R801 | 1-216-049-00 | METAL CHIP 1K | 5% 1/10W |
| R041 | 1-216-295-00 | METAL CHIP 0 | 5% 1/10W | R802 | 1-216-049-00 | METAL CHIP 1K | 5% 1/10W |
| R043 | 1-216-295-00 | METAL CHIP 0 | 5% 1/10W | R803 | 1-216-049-00 | METAL CHIP 1K | 5% 1/10W |
| | | | | R804 | 1-216-049-00 | METAL CHIP 1K | 5% 1/10W |
| | | | | R805 | 1-216-049-00 | METAL CHIP 1K | 5% 1/10W |

| Ref. No. | Part No. | Description | Remark | | |
|----------|--------------|-----------------|--------|-------|--|
| R806 | 1-216-089-00 | METAL CHIP 47K | 5% | 1/10W | |
| R807 | 1-216-089-00 | METAL CHIP 47K | 5% | 1/10W | |
| R808 | 1-216-089-00 | METAL CHIP 47K | 5% | 1/10W | |
| R809 | 1-216-057-00 | METAL CHIP 2.2K | 5% | 1/10W | |
| R810 | 1-216-057-00 | METAL CHIP 2.2K | 5% | 1/10W | |
| R811 | 1-216-057-00 | METAL CHIP 2.2K | 5% | 1/10W | |
| R812 | 1-216-057-00 | METAL CHIP 2.2K | 5% | 1/10W | |
| R901 | 1-216-049-00 | METAL CHIP 1K | 5% | 1/10W | |

< VARIABLE RESISTOR >

| | | | | | |
|-------|--------------|---------------------------------|--|--|--|
| RV001 | 1-241-118-11 | RES. VAR. CARBON 20K (COLOR) | | | |
| RV002 | 1-238-088-11 | RES. ADJ CERMET 2.2K | | | |
| RV003 | 1-238-092-11 | RES. ADJ CERMET 47K | | | |
| RV004 | 1-241-006-11 | RES. VAR. CARBON 50K (BRIGHT) | | | |
| RV005 | 1-238-092-11 | RES. ADJ CERMET 47K | | | |
| RV006 | 1-238-092-11 | RES. ADJ CERMET 47K | | | |
| RV007 | 1-238-092-11 | RES. ADJ CERMET 47K | | | |
| RV008 | 1-238-092-11 | RES. ADJ CERMET 47K | | | |
| RV009 | 1-238-092-11 | RES. ADJ CERMET 47K | | | |
| RV601 | 1-241-029-11 | RES. VAR. CARBON 2K/2K (VOLUME) | | | |

< SWITCH >

| | | | | | |
|-------|--------------|--------------------------|--|--|--|
| SW601 | 1-570-386-21 | SWITCH, SLIDE (NOT USED) | | | |
|-------|--------------|--------------------------|--|--|--|

< COIL >

| | | | | | |
|------|--------------|------|--|--|--|
| T001 | 1-459-949-11 | COIL | | | |
|------|--------------|------|--|--|--|

< CRYSTAL >

| | | | | | |
|------|--------------|-------------------------------|--|--|--|
| X001 | 1-567-504-81 | OSCILLATOR, CRYSTAL (4.43MHZ) | | | |
|------|--------------|-------------------------------|--|--|--|

* A-7062-433-A RP-105 BOARD, COMPLETE

 (Ref. No 1,000 Series)

< CAPACITOR >

| | | | | | |
|------|--------------|----------------------|-----|------|--|
| C501 | 1-135-180-21 | TANTALUM CHIP 3.3uF | 20% | 6.3V | |
| C502 | 1-164-361-11 | CERAMIC CHIP 0.047uF | | 16V | |
| C503 | 1-135-161-21 | TANTALUM CHIP 22uF | 10% | 6.3V | |
| C504 | 1-164-361-11 | CERAMIC CHIP 0.047uF | | 16V | |
| C505 | 1-135-161-21 | TANTALUM CHIP 22uF | 10% | 6.3V | |
| C506 | 1-164-361-11 | CERAMIC CHIP 0.047uF | | 16V | |
| C507 | 1-162-974-11 | CERAMIC CHIP 0.01uF | | 50V | |
| C508 | 1-162-970-11 | CERAMIC CHIP 0.01uF | 10% | 25V | |
| C509 | 1-164-005-11 | CERAMIC CHIP 0.47uF | | 25V | |
| C510 | 1-164-633-11 | CERAMIC CHIP 0.1uF | 10% | 25V | |
| C511 | 1-164-633-11 | CERAMIC CHIP 0.1uF | 10% | 25V | |
| C512 | 1-164-633-11 | CERAMIC CHIP 0.1uF | 10% | 25V | |

| Ref. No. | Part No. | Description | Remark | | |
|----------|--------------|---------------------|--------|-----|--|
| C513 | 1-164-633-11 | CERAMIC CHIP 0.1uF | 10% | 25V | |
| C514 | 1-164-005-11 | CERAMIC CHIP 0.47uF | | 25V | |
| C515 | 1-162-970-11 | CERAMIC CHIP 0.01uF | 10% | 25V | |
| C516 | 1-162-974-11 | CERAMIC CHIP 0.01uF | | 50V | |
| C517 | 1-162-974-11 | CERAMIC CHIP 0.01uF | | 50V | |
| C518 | 1-162-974-11 | CERAMIC CHIP 0.01uF | | 50V | |
| C519 | 1-162-974-11 | CERAMIC CHIP 0.01uF | | 50V | |
| C520 | 1-162-974-11 | CERAMIC CHIP 0.01uF | | 50V | |

| | | | | | |
|------|--------------|----------------------|-----|------|--|
| C522 | 1-135-161-21 | TANTALUM CHIP 22uF | 10% | 6.3V | |
| C523 | 1-164-360-11 | CERAMIC CHIP 0.1uF | | 16V | |
| C524 | 1-162-974-11 | CERAMIC CHIP 0.01uF | | 50V | |
| C525 | 1-164-360-11 | CERAMIC CHIP 0.1uF | | 16V | |
| C529 | 1-164-361-11 | CERAMIC CHIP 0.047uF | | 16V | |

| | | | | | |
|------|--------------|----------------------|-----|------|--|
| C531 | 1-162-974-11 | CERAMIC CHIP 0.01uF | | 50V | |
| C533 | 1-135-161-21 | TANTALUM CHIP 22uF | 10% | 6.3V | |
| C534 | 1-164-361-11 | CERAMIC CHIP 0.047uF | | 16V | |
| C535 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% | 6.3V | |
| C581 | 1-162-964-11 | CERAMIC CHIP 0.001uF | 10% | 50V | |

| | | | | | |
|------|--------------|----------------------|-----|-----|--|
| C582 | 1-162-974-11 | CERAMIC CHIP 0.01uF | | 50V | |
| C583 | 1-162-964-11 | CERAMIC CHIP 0.001uF | 10% | 50V | |
| C584 | 1-162-953-11 | CERAMIC CHIP 100PF | 5% | 50V | |
| C585 | 1-162-953-11 | CERAMIC CHIP 100PF | 5% | 50V | |
| C586 | 1-162-955-11 | CERAMIC CHIP 150PF | 5% | 50V | |

| | | | | | |
|------|--------------|--------------------|----|-----|--|
| C587 | 1-162-953-11 | CERAMIC CHIP 100PF | 5% | 50V | |
|------|--------------|--------------------|----|-----|--|

< CONNECTOR >

| | | | | | |
|-------|--------------|----------------------------------|--|--|--|
| CW501 | 1-565-849-11 | SOCKET, CONNECTOR 11P | | | |
| CW502 | 1-568-740-11 | CONNECTOR, FPC (1.0MM) (ZIF) 18P | | | |
| CW503 | 1-568-340-41 | CONNECTOR, BOARD TO BOARD 5P | | | |

< IC >

| | | | | | |
|-------|--------------|-------------|--|--|--|
| IC501 | 8-752-033-38 | IC CXA1202R | | | |
|-------|--------------|-------------|--|--|--|

< COIL >

| | | | | | |
|------|--------------|----------------------|--|--|--|
| L501 | 1-412-029-11 | INDUCTOR, CHIP 10uH | | | |
| L502 | 1-412-033-11 | INDUCTOR, CHIP 220uH | | | |
| L503 | 1-412-033-11 | INDUCTOR, CHIP 220uH | | | |
| L581 | 1-412-198-11 | INDUCTOR 220uH | | | |
| L582 | 1-412-137-11 | INDUCTOR 10uH | | | |

< TRANSISTOR >

| | | | | | |
|------|--------------|-------------------------|--|--|--|
| Q501 | 8-729-905-12 | TRANSISTOR DTA144EU | | | |
| Q502 | 8-729-905-35 | TRANSISTOR 2SC4081-R | | | |
| Q581 | 8-729-905-23 | TRANSISTOR 2SA1576-R | | | |
| Q582 | 8-729-820-76 | TRANSISTOR 2SA1179-M5M6 | | | |

| Ref. No. | Part No. | Description | Remark |
|--------------|--------------|--------------------------|--------|
| < RESISTOR > | | | |
| R501 | 1-216-837-11 | METAL CHIP 22K 5% 1/16W | |
| R502 | 1-216-825-11 | METAL CHIP 2.2K 5% 1/16W | |
| R503 | 1-216-838-11 | METAL CHIP 27K 5% 1/16W | |
| R504 | 1-216-838-11 | METAL CHIP 27K 5% 1/16W | |
| R505 | 1-216-838-11 | METAL CHIP 27K 5% 1/16W | |
| R506 | 1-216-838-11 | METAL CHIP 27K 5% 1/16W | |
| R507 | 1-216-825-11 | METAL CHIP 2.2K 5% 1/16W | |
| R508 | 1-216-837-11 | METAL CHIP 22K 5% 1/16W | |
| R509 | 1-216-839-11 | METAL CHIP 33K 5% 1/16W | |
| R510 | 1-216-838-11 | METAL CHIP 27K 5% 1/16W | |
| R512 | 1-216-841-11 | METAL CHIP 47K 5% 1/16W | |
| R514 | 1-216-841-11 | METAL CHIP 47K 5% 1/16W | |
| R515 | 1-216-837-11 | METAL CHIP 22K 5% 1/16W | |
| R516 | 1-216-841-11 | METAL CHIP 47K 5% 1/16W | |
| R517 | 1-216-825-11 | METAL CHIP 2.2K 5% 1/16W | |
| R520 | 1-216-791-11 | METAL CHIP 3.3 5% 1/16W | |
| R523 | 1-216-825-11 | METAL CHIP 2.2K 5% 1/16W | |
| R524 | 1-216-821-11 | METAL CHIP 1K 5% 1/16W | |
| R525 | 1-216-809-11 | METAL CHIP 100 5% 1/16W | |
| R526 | 1-216-809-11 | METAL CHIP 100 5% 1/16W | |
| R551 | 1-216-820-11 | METAL CHIP 820 5% 1/16W | |
| R552 | 1-216-824-11 | METAL CHIP 1.8K 5% 1/16W | |
| R553 | 1-216-864-11 | METAL CHIP 0 | |
| R554 | 1-216-825-11 | METAL CHIP 2.2K 5% 1/16W | |
| R581 | 1-216-840-11 | METAL CHIP 39K 5% 1/16W | |
| R582 | 1-216-839-11 | METAL CHIP 33K 5% 1/16W | |
| R583 | 1-216-810-11 | METAL CHIP 120 5% 1/16W | |
| R584 | 1-216-815-11 | METAL CHIP 330 5% 1/16W | |
| R585 | 1-216-794-11 | METAL CHIP 5.6 5% 1/16W | |
| R587 | 1-216-821-11 | METAL CHIP 1K 5% 1/16W | |

< VARIABLE RESISTOR >

| | | | |
|-------|--------------|--------------------|--|
| RV501 | 1-238-092-11 | RES. ADJ CERMET47K | |
| RV502 | 1-238-092-11 | RES. ADJ CERMET47K | |

 * A-7071-318-A SB-3P BOARD, COMPLETE

 (Ref. No 6,000 Series)

< CONNECTOR >

| | | | |
|-------|--------------|-----------------------------|--|
| CN901 | 1-566-539-11 | CONNECTOR, FPC (NOM ZIF) 7P | |
|-------|--------------|-----------------------------|--|

| Ref. No. | Part No. | Description | Remark |
|--------------|--------------|-------------------------|--------|
| < RESISTOR > | | | |
| R903 | 1-216-075-00 | METAL CHIP 12K 5% 1/10W | |
| R904 | 1-216-079-00 | METAL CHIP 18K 5% 1/10W | |
| R906 | 1-216-075-00 | METAL CHIP 12K 5% 1/10W | |
| R907 | 1-216-079-00 | METAL CHIP 18K 5% 1/10W | |
| R908 | 1-216-085-00 | METAL CHIP 33K 5% 1/10W | |

< SWITCH >

| | | | |
|------|--------------|--------------------------------|--|
| S903 | 1-572-078-11 | SWITCH, TACTILE (COLOR SYSTEM) | |
| S904 | 1-572-078-11 | SWITCH, TACTILE (TV SYSTEM) | |
| S905 | 1-572-078-11 | SWITCH, TACTILE (SP/LP) | |
| S906 | 1-572-078-11 | SWITCH, TACTILE (CLEAR) | |
| S907 | 1-572-078-11 | SWITCH, TACTILE (POSITION) | |
| S908 | 1-572-078-11 | SWITCH, TACTILE (PRESET) | |
| S909 | 1-572-078-11 | SWITCH, TACTILE (SEEK) | |
| S910 | 1-572-078-11 | SWITCH, TACTILE (INPUT SELECT) | |

* A-7062-528-A SV-66 BOARD, COMPLETE

 (Ref. No 5,000 Series)
 (Including the CC-55 BOARD)

1-634-993-11 FP-270 FLEXIBLE BOARD
 * 3-746-902-01 CASE (LID), SHIELD, SDD
 3-831-441-XX CUSHION (5)
 3-831-441-XX CUSHION (5)

< CAPACITOR >

| | | | |
|------|--------------|-----------------------------|--|
| C101 | 1-162-915-11 | CERAMIC CHIP 10PF 0.5PF 50V | |
| C102 | 1-162-945-11 | CERAMIC CHIP 22PF 5% 50V | |
| C103 | 1-162-945-11 | CERAMIC CHIP 22PF 5% 50V | |
| C104 | 1-162-945-11 | CERAMIC CHIP 22PF 5% 50V | |
| C105 | 1-162-945-11 | CERAMIC CHIP 22PF 5% 50V | |
| C106 | 1-162-945-11 | CERAMIC CHIP 22PF 5% 50V | |
| C107 | 1-162-945-11 | CERAMIC CHIP 22PF 5% 50V | |
| C108 | 1-162-945-11 | CERAMIC CHIP 22PF 5% 50V | |
| C109 | 1-162-945-11 | CERAMIC CHIP 22PF 5% 50V | |
| C110 | 1-162-945-11 | CERAMIC CHIP 22PF 5% 50V | |
| C111 | 1-162-945-11 | CERAMIC CHIP 22PF 5% 50V | |
| C112 | 1-162-945-11 | CERAMIC CHIP 22PF 5% 50V | |
| C113 | 1-162-945-11 | CERAMIC CHIP 22PF 5% 50V | |
| C114 | 1-162-945-11 | CERAMIC CHIP 22PF 5% 50V | |
| C115 | 1-162-945-11 | CERAMIC CHIP 22PF 5% 50V | |
| C116 | 1-162-945-11 | CERAMIC CHIP 22PF 5% 50V | |
| C117 | 1-162-945-11 | CERAMIC CHIP 22PF 5% 50V | |
| C118 | 1-162-945-11 | CERAMIC CHIP 22PF 5% 50V | |
| C119 | 1-162-945-11 | CERAMIC CHIP 22PF 5% 50V | |
| C120 | 1-162-945-11 | CERAMIC CHIP 22PF 5% 50V | |

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|-----------------------|----------|----------|--------------|-----------------------|----------|
| C121 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V | C233 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C122 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V | C234 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C123 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V | C235 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C124 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V | C236 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C125 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V | C237 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C126 | 1-135-159-21 | TANTALUM CHIP 10uF | 10% 16V | C238 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C127 | 1-126-206-11 | ELECT CHIP 100uF | 20% 6.3V | C239 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C128 | 1-164-633-11 | CERAMIC CHIP 0.1uF | 10% 25V | C240 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C131 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V | C241 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C132 | 1-164-360-11 | CERAMIC CHIP 0.1uF | 16V | C242 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C134 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V | C243 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C135 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V | C244 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C136 | 1-164-360-11 | CERAMIC CHIP 0.1uF | 16V | C245 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C139 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V | C246 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C140 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V | C247 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C141 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V | C248 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C142 | 1-164-633-11 | CERAMIC CHIP 0.1uF | 10% 25V | C249 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C143 | 1-164-633-11 | CERAMIC CHIP 0.1uF | 10% 25V | C250 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C144 | 1-162-970-11 | CERAMIC CHIP 0.01uF | 10% 25V | C251 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C145 | 1-162-970-11 | CERAMIC CHIP 0.01uF | 10% 25V | C252 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C146 | 1-164-634-11 | CERAMIC CHIP 1uF | 16V | C253 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C201 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V | C254 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C202 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V | C255 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C203 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V | C256 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C204 | 1-164-634-11 | CERAMIC CHIP 1uF | 16V | C257 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C206 | 1-162-970-11 | CERAMIC CHIP 0.01uF | 10% 25V | C258 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C208 | 1-164-360-11 | CERAMIC CHIP 0.1uF | 16V | C259 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C209 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V | C260 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C210 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V | C261 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C211 | 1-162-964-11 | CERAMIC CHIP 0.001uF | 10% 50V | C262 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C212 | 1-164-633-11 | CERAMIC CHIP 0.1uF | 10% 25V | C263 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C213 | 1-162-969-11 | CERAMIC CHIP 0.0068uF | 10% 25V | C265 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C214 | 1-164-360-11 | CERAMIC CHIP 0.1uF | 16V | C266 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C215 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V | C267 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C216 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V | C268 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C217 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V | C269 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V |
| C218 | 1-164-360-11 | CERAMIC CHIP 0.1uF | 16V | C270 | 1-164-634-11 | CERAMIC CHIP 1uF | 16V |
| C219 | 1-164-360-11 | CERAMIC CHIP 0.1uF | 16V | C271 | 1-164-360-11 | CERAMIC CHIP 0.1uF | 16V |
| C220 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V | C272 | 1-164-360-11 | CERAMIC CHIP 0.1uF | 16V |
| C221 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V | C273 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V |
| C222 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V | C302 | 1-162-966-11 | CERAMIC CHIP 0.0022uF | 10% 50V |
| C223 | 1-164-634-11 | CERAMIC CHIP 1uF | 16V | C305 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C224 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V | C308 | 1-162-956-11 | CERAMIC CHIP 180PF | 5% 50V |
| C226 | 1-162-917-11 | CERAMIC CHIP 15PF | 5% 50V | C309 | 1-162-947-11 | CERAMIC CHIP 33PF | 5% 50V |
| C228 | 1-162-917-11 | CERAMIC CHIP 15PF | 5% 50V | C310 | 1-162-963-11 | CERAMIC CHIP 680PF | 10% 50V |
| C229 | 1-164-360-11 | CERAMIC CHIP 0.1uF | 16V | C311 | 1-164-360-11 | CERAMIC CHIP 0.1uF | 16V |
| C230 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V | C312 | 1-162-962-11 | CERAMIC CHIP 470PF | 10% 50V |
| C231 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V | C313 | 1-135-149-21 | TANTALUM CHIP 2.2uF | 20% 10V |
| C232 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V | C315 | 1-162-970-11 | CERAMIC CHIP 0.01uF | 10% 25V |

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|-----------------------|-----------|----------|--------------|-----------------------|----------|
| C317 | 1-135-180-21 | TANTALUM CHIP 3.3uF | 20% 6.3V | C445 | 1-162-970-11 | CERAMIC CHIP 0.01uF | 10% 25V |
| C319 | 1-164-360-11 | CERAMIC CHIP 0.1uF | 16V | C446 | 1-164-330-21 | CERAMIC CHIP 0.22uF | 10% 16V |
| C320 | 1-162-970-11 | CERAMIC CHIP 0.01uF | 10% 25V | C447 | 1-162-967-11 | CERAMIC CHIP 0.0033uF | 10% 50V |
| C321 | 1-164-633-11 | CERAMIC CHIP 0.1uF | 10% 25V | C448 | 1-164-330-21 | CERAMIC CHIP 0.22uF | 10% 16V |
| C401 | 1-164-360-11 | CERAMIC CHIP 0.1uF | 16V | C449 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V |
| C402 | 1-164-360-11 | CERAMIC CHIP 0.1uF | 16V | C450 | 1-162-967-11 | CERAMIC CHIP 0.0033uF | 10% 50V |
| C403 | 1-127-558-11 | ELECT (SOLID) 10uF | 20% 10V | C451 | 1-164-633-11 | CERAMIC CHIP 0.1uF | 10% 25V |
| C404 | 1-127-558-11 | ELECT (SOLID) 10uF | 20% 10V | C453 | 1-163-809-11 | CERAMIC CHIP 0.047uF | 10% 25V |
| C405 | 1-127-558-11 | ELECT (SOLID) 10uF | 20% 10V | C454 | 1-162-964-11 | CERAMIC CHIP 0.001uF | 10% 50V |
| C406 | 1-127-558-11 | ELECT (SOLID) 10uF | 20% 10V | C455 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V |
| C407 | 1-163-123-00 | CERAMIC CHIP 180PF | 5% 50V | C456 | 1-135-180-21 | TANTALUM CHIP 3.3uF | 20% 6.3V |
| C408 | 1-164-360-11 | CERAMIC CHIP 0.1uF | 16V | C457 | 1-135-149-21 | TANTALUM CHIP 2.2uF | 20% 10V |
| C409 | 1-164-633-11 | CERAMIC CHIP 0.1uF | 10% 25V | C458 | 1-163-809-11 | CERAMIC CHIP 0.047uF | 10% 25V |
| C410 | 1-127-558-11 | ELECT (SOLID) 10uF | 20% 10V | C460 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V |
| C411 | 1-164-361-11 | CERAMIC CHIP 0.047uF | 16V | C461 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V |
| C412 | 1-127-558-11 | ELECT (SOLID) 10uF | 20% 10V | C601 | 1-124-778-00 | ELECT CHIP 22uF | 20% 6.3V |
| C413 | 1-164-633-11 | CERAMIC CHIP 0.1uF | 10% 25V | C602 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C414 | 1-164-633-11 | CERAMIC CHIP 0.1uF | 10% 25V | C603 | 1-128-004-11 | ELECT CHIP 10uF | 20% 16V |
| C415 | 1-162-960-11 | CERAMIC CHIP 220PF | 10% 50V | C604 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C416 | 1-162-964-11 | CERAMIC CHIP 0.001uF | 10% 50V | C605 | 1-164-361-11 | CERAMIC CHIP 0.047uF | 16V |
| C417 | 1-164-361-11 | CERAMIC CHIP 0.047uF | 16V | C607 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V |
| C418 | 1-162-916-11 | CERAMIC CHIP 12PF | 5% 50V | C608 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C419 | 1-164-360-11 | CERAMIC CHIP 0.1uF | 16V | C609 | 1-162-959-11 | CERAMIC CHIP 330PF | 5% 50V |
| C420 | 1-127-491-00 | ELECT (SOLID) 22uF | 20% 10V | C610 | 1-162-957-11 | CERAMIC CHIP 220PF | 5% 50V |
| C421 | 1-164-360-11 | CERAMIC CHIP 0.1uF | 16V | C611 | 1-164-005-11 | CERAMIC CHIP 0.47uF | 25V |
| C422 | 1-162-915-11 | CERAMIC CHIP 10PF | 0.5PF 50V | C612 | 1-135-201-11 | TANTALUM CHIP 10uF | 20% 4V |
| C423 | 1-162-919-11 | CERAMIC CHIP 22PF | 5% 50V | C613 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V |
| C424 | 1-127-558-11 | ELECT (SOLID) 10uF | 20% 10V | C614 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C425 | 1-162-919-11 | CERAMIC CHIP 22PF | 5% 50V | C615 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C426 | 1-127-558-11 | ELECT (SOLID) 10uF | 20% 10V | C616 | 1-128-004-11 | ELECT CHIP 10uF | 20% 16V |
| C427 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V | C617 | 1-135-180-21 | TANTALUM CHIP 3.3uF | 20% 6.3V |
| C428 | 1-127-558-11 | ELECT (SOLID) 10uF | 20% 10V | C618 | 1-135-201-11 | TANTALUM CHIP 10uF | 20% 4V |
| C429 | 1-135-216-11 | TANTALUM CHIP 10uF | 20% 10V | C619 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C430 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V | C620 | 1-135-180-21 | TANTALUM CHIP 3.3uF | 20% 6.3V |
| C431 | 1-127-558-11 | ELECT (SOLID) 10uF | 20% 10V | C621 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C432 | 1-164-360-11 | CERAMIC CHIP 0.1uF | 16V | C622 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V |
| C433 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V | C623 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V |
| C434 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V | C624 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V |
| C435 | 1-135-159-21 | TANTALUM CHIP 10uF | 10% 16V | C625 | 1-135-177-21 | TANTALUM CHIP 1uF | 20% 20V |
| C436 | 1-135-181-21 | TANTALUM CHIP 4.7uF | 20% 6.3V | C626 | 1-135-201-11 | TANTALUM CHIP 10uF | 20% 4V |
| C437 | 1-163-809-11 | CERAMIC CHIP 0.047uF | 10% 25V | C627 | 1-164-005-11 | CERAMIC CHIP 0.47uF | 25V |
| C438 | 1-136-718-11 | FILM CHIP 0.1uF | 5% 25V | C628 | 1-164-222-11 | CERAMIC CHIP 0.22uF | 25V |
| C439 | 1-164-330-21 | CERAMIC CHIP 0.22uF | 10% 16V | C629 | 1-135-177-21 | TANTALUM CHIP 1uF | 20% 20V |
| C440 | 1-164-330-21 | CERAMIC CHIP 0.22uF | 10% 16V | C630 | 1-126-607-11 | ELECT CHIP 47uF | 20% 4V |
| C441 | 1-164-330-21 | CERAMIC CHIP 0.22uF | 10% 16V | C631 | 1-164-245-11 | CERAMIC CHIP 0.015uF | 10% 25V |
| C442 | 1-164-634-11 | CERAMIC CHIP 1uF | 16V | C632 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V |
| C443 | 1-135-159-21 | TANTALUM CHIP 10uF | 10% 16V | C633 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C444 | 1-162-967-11 | CERAMIC CHIP 0.0033uF | 10% 50V | C634 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| | | | | C635 | 1-162-955-11 | CERAMIC CHIP 150PF | 5% 50V |

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|-----------------------|------------|----------|--------------|-----------------------|------------|
| C636 | 1-126-607-11 | ELECT CHIP 47uF | 20% 4V | C723 | 1-162-967-11 | CERAMIC CHIP 0.0033uF | 10% 50V |
| C637 | 1-135-201-11 | TANTALUM CHIP 10uF | 20% 4V | C724 | 1-162-952-11 | CERAMIC CHIP 82PF | 5% 50V |
| C638 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V | C725 | 1-164-360-11 | CERAMIC CHIP 0.1uF | 16V |
| C639 | 1-162-959-11 | CERAMIC CHIP 330PF | 5% 50V | C726 | 1-162-949-11 | CERAMIC CHIP 47PF | 5% 50V |
| C640 | 1-164-145-11 | CERAMIC CHIP 390PF | 5% 50V | C727 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C641 | 1-135-201-11 | TANTALUM CHIP 10uF | 20% 4V | C728 | 1-162-957-11 | CERAMIC CHIP 220PF | 5% 50V |
| C642 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V | C729 | 1-162-950-11 | CERAMIC CHIP 56PF | 5% 50V |
| C643 | 1-126-607-11 | ELECT CHIP 47uF | 20% 4V | C730 | 1-162-951-11 | CERAMIC CHIP 68PF | 5% 50V |
| C644 | 1-163-135-00 | CERAMIC CHIP 560PF | 5% 50V | C731 | 1-162-954-11 | CERAMIC CHIP 120PF | 5% 50V |
| C645 | 1-162-950-11 | CERAMIC CHIP 56PF | 5% 50V | C732 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C646 | 1-135-201-11 | TANTALUM CHIP 10uF | 20% 4V | C733 | 1-162-953-11 | CERAMIC CHIP 100PF | 5% 50V |
| C647 | 1-135-201-11 | TANTALUM CHIP 10uF | 20% 4V | C734 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C648 | 1-162-944-11 | CERAMIC CHIP 18PF | 5% 50V | C735 | 1-164-217-11 | CERAMIC CHIP 150PF | 0.25PF 50V |
| C651 | 1-135-201-11 | TANTALUM CHIP 10uF | 20% 4V | C741 | 1-128-004-11 | ELECT CHIP 10uF | 20% 16V |
| C652 | 1-162-950-11 | CERAMIC CHIP 56PF | 5% 50V | C742 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C653 | 1-162-953-11 | CERAMIC CHIP 100PF | 5% 50V | C743 | 1-163-118-00 | CERAMIC CHIP 110PF | 5% 50V |
| C654 | 1-135-201-11 | TANTALUM CHIP 10uF | 20% 4V | C744 | 1-162-964-11 | CERAMIC CHIP 0.001uF | 10% 50V |
| C655 | 1-162-952-11 | CERAMIC CHIP 82PF | 5% 50V | C745 | 1-135-149-21 | TANTALUM CHIP 2.2uF | 20% 10V |
| C656 | 1-162-946-11 | CERAMIC CHIP 27PF | 5% 50V | C746 | 1-162-964-11 | CERAMIC CHIP 0.001uF | 10% 50V |
| C657 | 1-126-607-11 | ELECT CHIP 47uF | 20% 4V | C748 | 1-135-210-11 | TANTALUM CHIP 4.7uF | 20% 10V |
| C658 | 1-162-957-11 | CERAMIC CHIP 220PF | 5% 50V | C749 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C659 | 1-162-959-11 | CERAMIC CHIP 330PF | 5% 50V | C750 | 1-162-964-11 | CERAMIC CHIP 0.001uF | 10% 50V |
| C660 | 1-162-950-11 | CERAMIC CHIP 56PF | 5% 50V | C751 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C661 | 1-135-201-11 | TANTALUM CHIP 10uF | 20% 4V | C752 | 1-135-177-21 | TANTALUM CHIP 1uF | 20% 20V |
| C662 | 1-162-944-11 | CERAMIC CHIP 18PF | 5% 50V | C753 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C663 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V | C754 | 1-162-941-11 | CERAMIC CHIP 10PF | 0.5PF 50V |
| C664 | 1-126-607-11 | ELECT CHIP 47uF | 20% 4V | C755 | 1-162-953-11 | CERAMIC CHIP 100PF | 5% 50V |
| C665 | 1-128-004-11 | ELECT CHIP 10uF | 20% 16V | C756 | 1-162-936-11 | CERAMIC CHIP 5PF | 0.25PF 50V |
| C666 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V | C757 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C701 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V | C758 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C702 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V | C759 | 1-162-921-11 | CERAMIC CHIP 33PF | 5% 50V |
| C703 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V | C760 | 1-162-923-11 | CERAMIC CHIP 47PF | 5% 50V |
| C704 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V | C761 | 1-164-360-11 | CERAMIC CHIP 0.1uF | 16V |
| C705 | 1-128-004-11 | ELECT CHIP 10uF | 20% 16V | C769 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V |
| C706 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V | C771 | 1-135-217-21 | TANTALUM CHIP 15uF | 20% 6.3V |
| C707 | 1-126-607-11 | ELECT CHIP 47uF | 20% 4V | C772 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C710 | 1-162-969-11 | CERAMIC CHIP 0.0068uF | 10% 25V | C773 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C711 | 1-135-177-21 | TANTALUM CHIP 1uF | 20% 20V | C774 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V |
| C712 | 1-135-177-21 | TANTALUM CHIP 1uF | 20% 20V | C775 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C713 | 1-135-210-11 | TANTALUM CHIP 4.7uF | 20% 10V | C776 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V |
| C714 | 1-135-146-21 | TANTALUM CHIP 0.68uF | 20% 25V | C777 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V |
| C715 | 1-162-995-11 | CERAMIC CHIP 0.022uF | 50V | C778 | 1-164-361-11 | CERAMIC CHIP 0.047uF | 16V |
| C716 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V | C779 | 1-164-005-11 | CERAMIC CHIP 0.47uF | 25V |
| C717 | 1-162-915-11 | CERAMIC CHIP 10PF | 0.5PF 50V | C780 | 1-135-177-21 | TANTALUM CHIP 1uF | 20% 20V |
| C718 | 1-162-936-11 | CERAMIC CHIP 5PF | 0.25PF 50V | C781 | 1-126-246-11 | ELECT CHIP 220uF | 20% 4V |
| C719 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V | C782 | 1-164-005-11 | CERAMIC CHIP 0.47uF | 25V |
| C720 | 1-162-949-11 | CERAMIC CHIP 47PF | 5% 50V | C783 | 1-164-005-11 | CERAMIC CHIP 0.47uF | 25V |
| C721 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V | C784 | 1-135-201-11 | TANTALUM CHIP 10uF | 20% 4V |
| C722 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V | C785 | 1-135-201-11 | TANTALUM CHIP 10uF | 20% 4V |



| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|-------------------------------|----------|----------|----------|---------------|--------|
| C786 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V | | | < FILTER > | |
| C787 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V | | | | |
| C789 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V | | | | |
| C790 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V | | | < CONNECTOR > | |
| C792 | 1-164-005-11 | CERAMIC CHIP 0.47uF | 25V | | | | |
| C793 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V | | | | |
| C794 | 1-124-778-00 | ELECT CHIP 22uF | 20% 6.3V | | | | |
| C796 | 1-135-216-11 | TANTALUM CHIP 10uF | 20% 10V | | | | |
| C797 | 1-135-201-11 | TANTALUM CHIP 10uF | 20% 4V | | | | |
| C798 | 1-135-149-21 | TANTALUM CHIP 2.2uF | 20% 10V | | | | |
| C799 | 1-135-146-21 | TANTALUM CHIP 0.68uF | 20% 25V | | | | |
| C801 | 1-164-361-11 | CERAMIC CHIP 0.047uF | 16V | | | | |
| C803 | 1-162-947-11 | CERAMIC CHIP 33PF | 5% 50V | | | | |
| C804 | 1-162-965-11 | CERAMIC CHIP 0.0015uF | 10% 50V | | | | |
| C805 | 1-162-958-11 | CERAMIC CHIP 270PF | 5% 50V | | | | |
| C806 | 1-162-943-11 | CERAMIC CHIP 15PF | 5% 50V | | | | |
| C807 | 1-162-950-11 | CERAMIC CHIP 56PF | 5% 50V | | | | |
| C809 | 1-162-945-11 | CERAMIC CHIP 22PF | 5% 50V | | | < TRIMMER > | |
| C813 | 1-162-995-11 | CERAMIC CHIP 0.022uF | 50V | | | | |
| C815 | 1-162-949-11 | CERAMIC CHIP 47PF | 5% 50V | | | | |
| C816 | 1-162-956-11 | CERAMIC CHIP 180PF | 5% 50V | | | | |
| C817 | 1-162-976-11 | CERAMIC CHIP 75PF | 5% 50V | | | < DIODE > | |
| C826 | 1-164-634-11 | CERAMIC CHIP 1uF | 16V | | | | |
| C828 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V | | | | |
| C829 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V | | | | |
| C831 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V | | | | |
| C832 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V | | | | |
| C833 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V | | | | |
| C836 | 1-162-943-11 | CERAMIC CHIP 15PF | 5% 50V | | | | |
| C837 | 1-162-995-11 | CERAMIC CHIP 0.022uF | 50V | | | | |
| C838 | 1-162-948-11 | CERAMIC CHIP 39PF | 5% 50V | | | | |
| C839 | 1-162-917-11 | CERAMIC CHIP 15PF | 5% 50V | | | | |
| C841 | 1-162-995-11 | CERAMIC CHIP 0.022uF | 50V | | | | |
| C843 | 1-162-995-11 | CERAMIC CHIP 0.022uF | 50V | | | | |
| C844 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V | | | | |
| C845 | 1-162-974-11 | CERAMIC CHIP 0.01uF | 50V | | | | |
| C847 | 1-162-942-11 | CERAMIC CHIP 12PF | 5% 50V | | | | |
| C860 | 1-162-943-11 | CERAMIC CHIP 15PF | 5% 50V | | | | |
| C901 | 1-164-361-11 | CERAMIC CHIP 0.047uF | 16V | | | | |
| C902 | 1-162-964-11 | CERAMIC CHIP 0.001uF | 10% 50V | | | | |
| C911 | 1-164-634-11 | CERAMIC CHIP 1uF | 16V | | | | |
| C912 | 1-164-634-11 | CERAMIC CHIP 1uF | 16V | | | | |
| C999 | 1-164-005-11 | CERAMIC CHIP 0.47uF | 25V | | | | |
| CF701 | 1-577-162-11 | FILTER, CERAMIC | | | | | |
| CN001 | 1-566-531-11 | CONNECTOR, FPC (ZIF) 15P | | | | | |
| CN002 | 1-569-030-11 | CONNECTOR, FPC (ZIF) 21P | | | | | |
| CN003 | 1-569-481-11 | CONNECTOR, FPC 30P | | | | | |
| CN004 | 1-569-633-61 | CONNECTOR, BOARD TO BOARD 26P | | | | | |
| CN005 | 1-569-631-41 | CONNECTOR, BOARD TO BOARD 20P | | | | | |
| CN006 | 1-569-632-41 | CONNECTOR, BOARD TO BOARD 22P | | | | | |
| CN007 | 1-566-532-11 | CONNECTOR, FPC (ZIF) 16P | | | | | |
| CN008 | 1-569-363-21 | CONNECTOR, FPC 15P | | | | | |
| CN009 | 1-566-531-11 | CONNECTOR, FPC (ZIF) 15P | | | | | |
| CN601 | 1-566-095-11 | PIN, BOARD TO BOARD 6P | | | | | |
| CN701 | 1-566-528-21 | CONNECTOR, FPC (ZIF) 12P | | | | | |
| CN801 | 1-566-534-11 | CONNECTOR, FPC (ZIF) 18P | | | | | |
| CV101 | 1-141-424-11 | CAP, ADJ | | | | | |
| D101 | 8-719-938-72 | DIODE SB01-05CP | | | | | |
| D103 | 8-719-105-52 | DIODE RD3.6M-B2 | | | | | |
| D104 | 8-719-105-XX | DIODE RD6.2M-B1 | | | | | |
| D107 | 8-719-941-09 | DIODE DAP202U | | | | | |
| D108 | 8-719-404-40 | DIODE MA121 | | | | | |
| D109 | 8-719-941-09 | DIODE DAP202U | | | | | |
| D201 | 8-719-941-86 | DIODE DAN202U | | | | | |
| D202 | 8-719-404-40 | DIODE MA121 | | | | | |
| D203 | 8-719-404-40 | DIODE MA121 | | | | | |
| D204 | 8-719-941-09 | DIODE DAP202U | | | | | |
| D205 | 8-719-941-09 | DIODE DAP202U | | | | | |
| D206 | 8-719-941-09 | DIODE DAP202U | | | | | |
| D301 | 8-719-941-86 | DIODE DAN202U | | | | | |
| D401 | 8-719-938-78 | DIODE SB10-05PCP | | | | | |
| D402 | 8-719-941-09 | DIODE DAP202U | | | | | |
| D403 | 8-719-938-75 | DIODE SB05-05CP | | | | | |
| D404 | 8-719-938-75 | DIODE SB05-05CP | | | | | |
| D601 | 8-719-404-40 | DIODE MA121 | | | | | |
| D701 | 8-719-941-86 | DIODE DAN202U | | | | | |
| D702 | 8-719-941-86 | DIODE DAN202U | | | | | |
| D741 | 8-719-941-86 | DIODE DAN202U | | | | | |
| D742 | 8-719-941-86 | DIODE DAN202U | | | | | |
| D771 | 8-719-404-40 | DIODE MA121 | | | | | |
| D802 | 8-719-800-76 | DIODE 1SS226 | | | | | |
| D901 | 8-719-106-44 | DIODE RD9.1M-B2 | | | | | |
| D902 | 8-719-106-44 | DIODE RD9.1M-B2 | | | | | |


| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|------------------|---------------|--------------------|--------|----------|--------------|------------------------------|--------|
| < FERRITE BEAD > | | | | < JACK > | | | |
| FB101 | 1-543-256-11 | BEAD, FERRITE | | J101 | 1-563-282-11 | JACK, SMALL TYPE (CONTROL S) | |
| FB102 | 1-412-390-21 | INDUCTOR, CHIP 0uH | | J701 | 1-569-639-21 | JACK, PIN 3P (VIDEO/AUDIO) | |
| FB201 | 1-543-256-11 | BEAD, FERRITE | | < COIL > | | | |
| FB202 | 1-543-256-11 | BEAD, FERRITE | | L102 | 1-410-993-11 | INDUCTOR, CHIP 1uH | |
| FB203 | 1-412-390-21 | INDUCTOR, CHIP 0uH | | L103 | 1-410-993-11 | INDUCTOR, CHIP 1uH | |
| FB204 | 1-412-390-21 | INDUCTOR, CHIP 0uH | | L104 | 1-410-993-11 | INDUCTOR, CHIP 1uH | |
| FB205 | 1-543-256-11 | BEAD, FERRITE | | L105 | 1-410-993-11 | INDUCTOR, CHIP 1uH | |
| < FILTER > | | | | L106 | 1-410-993-11 | INDUCTOR, CHIP 1uH | |
| FL651 | 1-236-848-21 | FILTER, LOW PASS | | L107 | 1-410-993-11 | INDUCTOR, CHIP 1uH | |
| FL652 | 1-236-847-21 | FILTER, LOW PASS | | L201 | 1-408-789-21 | INDUCTOR, CHIP 100uH | |
| FL653 | 1-236-751-21 | FILTER, LOW PASS | | L203 | 1-410-993-11 | INDUCTOR, CHIP 1uH | |
| FL654 | 1-415-764-21 | DELAY LINE, LC | | L204 | 1-410-993-11 | INDUCTOR, CHIP 1uH | |
| FL701 | 1-236-849-21 | FILTER, BAND PASS | | L205 | 1-410-993-11 | INDUCTOR, CHIP 1uH | |
| FL702 | 1-236-186-11 | FILTER, BAND PASS | | L206 | 1-410-993-11 | INDUCTOR, CHIP 1uH | |
| FL741 | 1-236-850-21 | FILTER, BAND PASS | | L207 | 1-410-993-11 | INDUCTOR, CHIP 1uH | |
| < IC > | | | | L208 | 1-410-993-11 | INDUCTOR, CHIP 1uH | |
| IC101 | 8-752-818-36 | IC CXP50116-207Q | | L209 | 1-410-993-11 | INDUCTOR, CHIP 1uH | |
| IC102 | 8-759-502-36 | IC S-81350HG | | L210 | 1-410-993-11 | INDUCTOR, CHIP 1uH | |
| IC103 | 8-759-940-33 | IC S-8052ALO-L6-S | | L211 | 1-410-993-11 | INDUCTOR, CHIP 1uH | |
| IC104 | 8-759-946-03 | IC S-8054ALR-LM-S | | L401 | 1-424-104-11 | COIL, CHOKE 10uH | |
| IC105 | 8-759-720-23 | IC AK93C57F | | L402 | 1-410-337-11 | INDUCTOR 1uH | |
| IC107 | 8-759-209-15 | IC TC4SU69F | | L403 | 1-424-104-11 | COIL, CHOKE 10uH | |
| IC108 | 8-759-209-97 | IC TC4S81F | | L404 | 1-424-104-11 | COIL, CHOKE 10uH | |
| IC109 | 8-759-209-97 | IC TC4S81F | | L405 | 1-424-106-11 | COIL, CHOKE 47uH | |
| IC201 | 8-759-234-77 | IC TC4S66F | | L406 | 1-424-104-11 | COIL, CHOKE 10uH | |
| IC202 | 8-759-234-77 | IC TC4S66F | | L407 | 1-424-106-11 | COIL, CHOKE 47uH | |
| IC204 | 8-759-998-98 | IC LM358D | | L408 | 1-424-105-11 | COIL, CHOKE 22uH | |
| IC206 | 8-752-818-67 | IC CXP80116-821Q | | L409 | 1-408-789-21 | INDUCTOR CHIP 100uH | |
| IC301 | 1-809-200-11 | AT F-HIC (PAL) | | L601 | 1-412-029-11 | INDUCTOR CHIP 10uH | |
| IC302 | 8-759-100-97 | IC uPC339G2 | | L602 | 1-412-032-11 | INDUCTOR CHIP 100uH | |
| IC401 | △8-759-945-17 | IC MB3775PF | | L603 | 1-410-379-31 | INDUCTOR CHIP 6.8uH | |
| IC402 | △8-759-998-94 | IC LM311D | | L604 | 1-410-390-11 | INDUCTOR CHIP 56uH | |
| IC403 | 8-759-990-55 | IC CXA8006M | | L605 | 1-410-391-11 | INDUCTOR CHIP 68uH | |
| IC404 | 8-759-805-06 | IC CXA1127M | | L651 | 1-410-388-21 | INDUCTOR CHIP 39uH | |
| IC405 | 8-759-107-68 | IC CX20115A | | L652 | 1-410-390-11 | INDUCTOR CHIP 56uH | |
| IC601 | 8-752-036-19 | IC CXA1207R | | L653 | 1-410-391-11 | INDUCTOR CHIP 68uH | |
| IC651 | 8-759-710-86 | IC NJM2233BM | | L702 | 1-410-386-11 | INDUCTOR CHIP 27uH | |
| IC701 | 8-752-036-20 | IC CXA1208R | | L703 | 1-410-393-11 | INDUCTOR CHIP 100uH | |
| IC741 | 8-759-605-61 | IC CXA1203N | | L704 | 1-410-379-31 | INDUCTOR CHIP 6.8uH | |
| IC771 | 8-752-033-40 | IC CXA1201Q | | L705 | 1-410-393-11 | INDUCTOR CHIP 100uH | |
| IC772 | 8-759-710-86 | IC NJM2233BM | | L706 | 1-410-656-11 | INDUCTOR CHIP 150uH | |
| IC773 | 8-759-234-77 | IC TC4S66F | | L707 | 1-410-655-31 | INDUCTOR CHIP 120uH | |
| IC774 | 8-759-234-77 | IC TC4S66F | | L708 | 1-410-393-11 | INDUCTOR CHIP 100uH | |
| IC775 | 8-759-234-77 | IC TC4S66F | | L709 | 1-412-031-11 | INDUCTOR CHIP 47uH | |
| | | | | L741 | 1-412-031-11 | INDUCTOR CHIP 47uH | |
| | | | | L771 | 1-412-029-11 | INDUCTOR CHIP 10uH | |

Note:
The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------------|----------------|-------------------------|--------|----------|---------------|-------------------------|--------|
| L772 | 1-412-032-11 | INDUCTOR CHIP 100uH | | Q212 | 8-729-905-12 | TRANSISTOR DTA144EU | |
| L773 | 1-412-032-11 | INDUCTOR CHIP 100uH | | Q213 | 8-729-905-18 | TRANSISTOR DTC144EU | |
| L801 | 1-410-167-41 | INDUCTOR CHIP 820uH | | Q214 | 8-729-905-18 | TRANSISTOR DTC144EU | |
| L802 | 1-410-657-21 | INDUCTOR CHIP 180uH | | Q215 | 8-729-905-18 | TRANSISTOR DTC144EU | |
| L803 | 1-412-032-11 | INDUCTOR CHIP 100uH | | Q216 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| L804 | 1-412-032-11 | INDUCTOR CHIP 100uH | | Q301 | 8-729-905-23 | TRANSISTOR 2SA1576-R | |
| L808 | 1-410-386-11 | INDUCTOR CHIP 27uH | | Q302 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| L809 | 1-410-381-11 | INDUCTOR CHIP 10uH | | Q303 | 8-729-905-23 | TRANSISTOR 2SA1576-R | |
| L810 | 1-410-386-11 | INDUCTOR CHIP 27uH | | Q304 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| L811 | 1-410-380-31 | INDUCTOR CHIP 8.2uH | | Q305 | 8-729-905-18 | TRANSISTOR DTC144EU | |
| L812 | 1-412-280-31 | INDUCTOR 330uH | | Q306 | 8-729-905-18 | TRANSISTOR DTC144EU | |
| L813 | 1-410-386-11 | INDUCTOR CHIP 27uH | | Q307 | 8-729-920-48 | TRANSISTOR 1MH2 | |
| L815 | 1-412-280-31 | INDUCTOR 330uH | | Q401 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| L816 | 1-410-655-31 | INDUCTOR CHIP 120uH | | Q402 | 8-729-901-04 | TRANSISTOR DTA114EK | |
| L901 | 1-412-032-11 | INDUCTOR CHIP 100uH | | Q403 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| < IC LINK > | | | | Q404 | △8-729-805-27 | TRANSISTOR 2SB1121-U | |
| PS101 | △ 1-532-605-00 | LINK. IC ICP-M10 (0.4A) | | Q405 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| PS201 | △ 1-532-605-00 | LINK. IC ICP-M10 (0.4A) | | Q406 | 8-729-905-61 | TRANSISTOR DTC124EU | |
| < TRANSISTOR > | | | | Q407 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| Q101 | 8-729-905-18 | TRANSISTOR DTC144EU | | Q408 | △8-729-805-27 | TRANSISTOR 2SB1121-U | |
| Q102 | 8-729-905-35 | TRANSISTOR 2SC4081-R | | Q409 | △8-729-805-27 | TRANSISTOR 2SB1121-U | |
| Q103 | 8-729-220-93 | TRANSISTOR 2SK209-G | | Q410 | 8-729-805-27 | TRANSISTOR 2SB1121-U | |
| Q104 | 8-729-905-18 | TRANSISTOR DTC144EU | | Q411 | 8-729-805-27 | TRANSISTOR 2SB1121-U | |
| Q105 | 8-729-905-35 | TRANSISTOR 2SC4081-R | | Q412 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| Q106 | 8-729-905-23 | TRANSISTOR 2SA1576-R | | Q413 | 8-729-907-00 | TRANSISTOR DTC114EU | |
| Q107 | 8-729-220-93 | TRANSISTOR 2SK209-G | | Q415 | 8-729-905-18 | TRANSISTOR DTC144EU | |
| Q108 | 8-729-220-93 | TRANSISTOR 2SK209-G | | Q416 | 8-729-905-12 | TRANSISTOR DTA144EU | |
| Q109 | 8-729-905-12 | TRANSISTOR DTA144EU | | Q418 | 8-729-141-48 | TRANSISTOR 2SB624-8V345 | |
| Q110 | 8-729-905-35 | TRANSISTOR 2SC4081-R | | Q419 | 8-729-907-00 | TRANSISTOR DTC114EU | |
| Q111 | 8-729-905-23 | TRANSISTOR 2SA1576-R | | Q420 | 8-729-907-00 | TRANSISTOR DTC114EU | |
| Q112 | 8-729-905-23 | TRANSISTOR 2SA1576-R | | Q601 | 8-729-905-12 | TRANSISTOR DTA144EU | |
| Q113 | 8-729-921-08 | TRANSISTOR DTC144TU | | Q602 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| Q114 | 8-729-403-24 | TRANSISTOR XM4210 | | Q603 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| Q116 | 8-729-403-24 | TRANSISTOR XM4210 | | Q604 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| Q118 | 8-729-920-59 | TRANSISTOR 1MX2 | | Q605 | 8-729-905-23 | TRANSISTOR 2SA1576-R | |
| Q120 | 8-729-905-35 | TRANSISTOR 2SC4081-R | | Q609 | 8-729-905-18 | TRANSISTOR DTC144EU | |
| Q201 | 8-729-905-35 | TRANSISTOR 2SC4081-R | | Q651 | 8-729-905-23 | TRANSISTOR 2SA1576-R | |
| Q202 | 8-729-905-35 | TRANSISTOR 2SC4081-R | | Q652 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| Q203 | 8-729-921-08 | TRANSISTOR DTC144TU | | Q653 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| Q204 | 8-729-902-96 | TRANSISTOR FMS1 | | Q654 | 8-729-905-23 | TRANSISTOR 2SA1576-R | |
| Q205 | 8-729-903-82 | TRANSISTOR FMM2 | | Q655 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| Q206 | 8-729-907-00 | TRANSISTOR DTC114EU | | Q656 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| Q207 | 8-729-905-35 | TRANSISTOR 2SC4081-R | | Q657 | 8-729-905-23 | TRANSISTOR 2SA1576-R | |
| Q208 | 8-729-820-46 | TRANSISTOR 2SB1202FAS | | Q658 | 8-729-905-35 | TRANSISTOR 2SC4081-R | |
| Q209 | 8-729-905-35 | TRANSISTOR 2SC4081-R | | | | | |
| Q210 | 8-729-403-24 | TRANSISTOR XM4210 | | | | | |

Note:
The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|-------------|--------------|----------|--------------|--------------|---------------|
| Q659 | 8-729-905-35 | TRANSISTOR | 2SC4081-R | Q819 | 8-729-141-48 | TRANSISTOR | 2SB624-BV345 |
| Q660 | 8-729-905-23 | TRANSISTOR | 2SA1576-R | Q820 | 8-729-905-18 | TRANSISTOR | DTC144EU |
| Q661 | 8-729-905-12 | TRANSISTOR | DTA144EU | Q822 | 8-729-905-35 | TRANSISTOR | 2SC4081-R |
| Q662 | 8-729-905-18 | TRANSISTOR | DTC144EU | Q823 | 8-729-905-23 | TRANSISTOR | 2SA1576-R |
| Q663 | 8-729-920-48 | TRANSISTOR | 1MH2 | Q824 | 8-729-905-35 | TRANSISTOR | 2SC4081-R |
| | | | | Q831 | 8-729-920-48 | TRANSISTOR | 1MH2 |
| Q665 | 8-729-905-35 | TRANSISTOR | 2SC4081-R | | | < RESISTOR > | |
| Q693 | 8-729-141-48 | TRANSISTOR | 2SB624-BV345 | R101 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W |
| Q694 | 8-729-905-61 | TRANSISTOR | DTC124EU | R102 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W |
| Q701 | 8-729-905-35 | TRANSISTOR | 2SC4081-R | R103 | 1-216-851-11 | METAL CHIP | 330K 5% 1/16W |
| Q702 | 8-729-905-18 | TRANSISTOR | DTC144EU | R104 | 1-216-841-11 | METAL CHIP | 47K 5% 1/16W |
| | | | | R105 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| Q703 | 8-729-905-35 | TRANSISTOR | 2SC4081-R | | | | |
| Q704 | 8-729-905-18 | TRANSISTOR | DTC144EU | R106 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| Q705 | 8-729-905-35 | TRANSISTOR | 2SC4081-R | R107 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W |
| Q706 | 8-729-905-23 | TRANSISTOR | 2SA1576-R | R108 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| Q707 | 8-729-905-35 | TRANSISTOR | 2SC4081-R | R109 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W |
| | | | | R110 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| Q709 | 8-729-905-18 | TRANSISTOR | DTC144EU | | | | |
| Q741 | 8-729-905-18 | TRANSISTOR | DTC144EU | R112 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W |
| Q743 | 8-729-905-12 | TRANSISTOR | DTA144EU | R113 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W |
| Q744 | 8-729-907-39 | TRANSISTOR | 1MD2 | R114 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W |
| Q745 | 8-729-920-48 | TRANSISTOR | 1MH2 | R115 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W |
| | | | | R118 | 1-216-841-11 | METAL CHIP | 47K 5% 1/16W |
| Q746 | 8-729-905-35 | TRANSISTOR | 2SC4081-R | | | | |
| Q747 | 8-729-905-35 | TRANSISTOR | 2SC4081-R | R127 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W |
| Q748 | 8-729-905-18 | TRANSISTOR | DTC144EU | R130 | 1-216-861-11 | METAL CHIP | 2.2M 5% 1/16W |
| Q749 | 8-729-102-07 | TRANSISTOR | 2SC2223-F13 | R131 | 1-216-834-11 | METAL CHIP | 12K 5% 1/16W |
| Q750 | 8-729-905-35 | TRANSISTOR | 2SC4081-R | R132 | 1-216-861-11 | METAL CHIP | 2.2M 5% 1/16W |
| | | | | R133 | 1-216-861-11 | METAL CHIP | 2.2M 5% 1/16W |
| Q751 | 8-729-905-35 | TRANSISTOR | 2SC4081-R | | | | |
| Q771 | 8-729-907-00 | TRANSISTOR | DTC114EU | R135 | 1-216-839-11 | METAL CHIP | 33K 5% 1/16W |
| Q772 | 8-729-905-12 | TRANSISTOR | DTA144EU | R136 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W |
| Q773 | 8-729-905-18 | TRANSISTOR | DTC144EU | R137 | 1-216-843-11 | METAL CHIP | 68K 5% 1/16W |
| Q774 | 8-729-905-18 | TRANSISTOR | DTC144EU | R138 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W |
| | | | | R139 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W |
| Q775 | 8-729-905-35 | TRANSISTOR | 2SC4081-R | | | | |
| Q776 | 8-729-905-18 | TRANSISTOR | DTC144EU | R140 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W |
| Q777 | 8-729-905-23 | TRANSISTOR | 2SA1576-R | R141 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W |
| Q778 | 8-729-905-18 | TRANSISTOR | DTC144EU | R144 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| Q779 | 8-729-905-35 | TRANSISTOR | 2SC4081-R | R145 | 1-216-849-11 | METAL CHIP | 220K 5% 1/16W |
| | | | | R146 | 1-216-822-11 | METAL CHIP | 1.2K 5% 1/16W |
| Q780 | 8-729-141-48 | TRANSISTOR | 2SB624-BV345 | | | | |
| Q781 | 8-729-905-18 | TRANSISTOR | DTC144EU | R147 | 1-216-025-00 | METAL CHIP | 100 5% 1/10W |
| Q782 | 8-729-905-35 | TRANSISTOR | 2SC4081-R | R155 | 1-216-849-11 | METAL CHIP | 220K 5% 1/16W |
| Q783 | 8-729-905-18 | TRANSISTOR | DTC144EU | R156 | 1-216-834-11 | METAL CHIP | 12K 5% 1/16W |
| Q804 | 8-729-905-35 | TRANSISTOR | 2SC4081-R | R157 | 1-216-841-11 | METAL CHIP | 47K 5% 1/16W |
| | | | | R158 | 1-216-837-11 | METAL CHIP | 22K 5% 1/16W |
| Q806 | 8-729-905-12 | TRANSISTOR | DTA144EU | | | | |
| Q808 | 8-729-905-35 | TRANSISTOR | 2SC4081-R | R159 | 1-216-834-11 | METAL CHIP | 12K 5% 1/16W |
| Q809 | 8-729-905-23 | TRANSISTOR | 2SA1576-R | R160 | 1-216-834-11 | METAL CHIP | 12K 5% 1/16W |
| Q812 | 8-729-905-35 | TRANSISTOR | 2SC4081-R | R161 | 1-216-834-11 | METAL CHIP | 12K 5% 1/16W |
| Q813 | 8-729-905-18 | TRANSISTOR | DTC144EU | R162 | 1-216-834-11 | METAL CHIP | 12K 5% 1/16W |
| | | | | R163 | 1-216-834-11 | METAL CHIP | 12K 5% 1/16W |
| Q814 | 8-729-141-48 | TRANSISTOR | 2SB624-BV345 | | | | |
| Q815 | 8-729-905-35 | TRANSISTOR | 2SC4081-R | R164 | 1-216-834-11 | METAL CHIP | 12K 5% 1/16W |
| Q816 | 8-729-905-18 | TRANSISTOR | DTC144EU | | | | |
| Q818 | 8-752-822-52 | TRANSISTOR | 2SK1468-TL | | | | |

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|-------------|---------------|----------|--------------|-------------|---------------|
| R165 | 1-216-834-11 | METAL CHIP | 12K 5% 1/16W | R227 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R166 | 1-216-834-11 | METAL CHIP | 12K 5% 1/16W | R228 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W |
| R167 | 1-216-834-11 | METAL CHIP | 12K 5% 1/16W | R229 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R168 | 1-216-834-11 | METAL CHIP | 12K 5% 1/16W | R230 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R169 | 1-216-834-11 | METAL CHIP | 12K 5% 1/16W | R231 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R170 | 1-216-834-11 | METAL CHIP | 12K 5% 1/16W | R232 | 1-216-842-11 | METAL CHIP | 56K 5% 1/16W |
| R171 | 1-216-834-11 | METAL CHIP | 12K 5% 1/16W | R233 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R172 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W | R235 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R173 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W | R236 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R174 | 1-216-841-11 | METAL CHIP | 47K 5% 1/16W | R237 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W |
| R175 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W | R238 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W |
| R179 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W | R239 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R183 | 1-216-864-11 | METAL CHIP | 0 | R241 | 1-216-336-11 | METAL CHIP | 47K 1% 1/10W |
| R185 | 1-216-864-11 | METAL CHIP | 0 | R242 | 1-216-336-11 | METAL CHIP | 47K 1% 1/10W |
| R187 | 1-216-864-11 | METAL CHIP | 0 | R250 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W |
| R189 | 1-216-864-11 | METAL CHIP | 0 | R251 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W |
| R191 | 1-216-857-11 | METAL CHIP | 1M 5% 1/16W | R252 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R193 | 1-216-864-11 | METAL CHIP | 0 | R253 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R194 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W | R262 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R195 | 1-216-857-11 | METAL CHIP | 1M 5% 1/16W | R264 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W |
| R196 | 1-216-815-11 | METAL CHIP | 330 5% 1/16W | R265 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W |
| R197 | 1-216-838-11 | METAL CHIP | 27K 5% 1/16W | R267 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R198 | 1-216-826-11 | METAL CHIP | 2.7K 5% 1/16W | R268 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W |
| R201 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W | R269 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W |
| R202 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W | R270 | 1-216-194-00 | METAL CHIP | 680 5% 1/8W |
| R203 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W | R271 | 1-216-194-00 | METAL CHIP | 680 5% 1/8W |
| R204 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W | R272 | 1-216-194-00 | METAL CHIP | 680 5% 1/8W |
| R205 | 1-216-838-11 | METAL CHIP | 27K 5% 1/16W | R273 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W |
| R206 | 1-216-857-11 | METAL CHIP | 1M 5% 1/16W | R274 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W |
| R207 | 1-216-851-11 | METAL CHIP | 330K 5% 1/16W | R275 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W |
| R208 | 1-216-832-11 | METAL CHIP | 8.2K 5% 1/16W | R276 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W |
| R209 | 1-216-838-11 | METAL CHIP | 27K 5% 1/16W | R277 | 1-216-827-11 | METAL CHIP | 3.3K 5% 1/16W |
| R210 | 1-216-843-11 | METAL CHIP | 68K 5% 1/16W | R278 | 1-216-864-11 | METAL CHIP | 0 |
| R211 | 1-216-843-11 | METAL CHIP | 68K 5% 1/16W | R279 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R212 | 1-216-828-11 | METAL CHIP | 3.9K 5% 1/16W | R280 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W |
| R213 | 1-216-192-00 | METAL CHIP | 560 5% 1/8W | R281 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R214 | 1-216-172-00 | METAL CHIP | 82 5% 1/8W | R282 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R215 | 1-216-835-11 | METAL CHIP | 15K 5% 1/16W | R283 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W |
| R216 | 1-216-828-11 | METAL CHIP | 3.9K 5% 1/16W | R284 | 1-216-865-11 | METAL CHIP | 3K 5% 1/16W |
| R217 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W | R299 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R218 | 1-216-857-11 | METAL CHIP | 1M 5% 1/16W | R301 | 1-216-827-11 | METAL CHIP | 3.3K 5% 1/16W |
| R219 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W | R302 | 1-216-827-11 | METAL CHIP | 3.3K 5% 1/16W |
| R220 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W | R303 | 1-216-827-11 | METAL CHIP | 3.3K 5% 1/16W |
| R221 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W | R304 | 1-216-829-11 | METAL CHIP | 4.7K 5% 1/16W |
| R222 | 1-216-853-11 | METAL CHIP | 470K 5% 1/16W | R305 | 1-216-854-11 | METAL CHIP | 560K 5% 1/16W |
| R223 | 1-216-853-11 | METAL CHIP | 470K 5% 1/16W | R306 | 1-216-827-11 | METAL CHIP | 3.3K 5% 1/16W |
| R224 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W | R307 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R225 | 1-216-829-11 | METAL CHIP | 4.7K 5% 1/16W | R308 | 1-216-823-11 | METAL CHIP | 1.5K 5% 1/16W |
| R226 | 1-216-830-11 | METAL CHIP | 5.6K 5% 1/16W | R309 | 1-216-825-11 | METAL CHIP | 2.2K 5% 1/16W |

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|-----------------|----------|
| R312 | 1-216-833-11 | METAL CHIP 10K | 5% 1/16W |
| R313 | 1-216-847-11 | METAL CHIP 150K | 5% 1/16W |
| R314 | 1-216-833-11 | METAL CHIP 10K | 5% 1/16W |
| R316 | 1-216-839-11 | METAL CHIP 33K | 5% 1/16W |
| R317 | 1-216-833-11 | METAL CHIP 10K | 5% 1/16W |
| R318 | 1-216-821-11 | METAL CHIP 1K | 5% 1/16W |
| R319 | 1-216-809-11 | METAL CHIP 100 | 5% 1/16W |
| R320 | 1-216-811-11 | METAL CHIP 150 | 5% 1/16W |
| R321 | 1-216-831-11 | METAL CHIP 6.8K | 5% 1/16W |
| R322 | 1-216-838-11 | METAL CHIP 27K | 5% 1/16W |
| R323 | 1-216-857-11 | METAL CHIP 1M | 5% 1/16W |
| R325 | 1-216-826-11 | METAL CHIP 2.7K | 5% 1/16W |
| R326 | 1-216-824-11 | METAL CHIP 1.8K | 5% 1/16W |
| R327 | 1-216-857-11 | METAL CHIP 1M | 5% 1/16W |
| R328 | 1-216-833-11 | METAL CHIP 10K | 5% 1/16W |
| R329 | 1-216-826-11 | METAL CHIP 2.7K | 5% 1/16W |
| R330 | 1-216-833-11 | METAL CHIP 10K | 5% 1/16W |
| R331 | 1-216-833-11 | METAL CHIP 10K | 5% 1/16W |
| R332 | 1-216-833-11 | METAL CHIP 10K | 5% 1/16W |
| R334 | 1-216-833-11 | METAL CHIP 10K | 5% 1/16W |
| R342 | 1-216-833-11 | METAL CHIP 10K | 5% 1/16W |
| R401 | 1-216-845-11 | METAL CHIP 100K | 5% 1/16W |
| R402 | 1-216-833-11 | METAL CHIP 10K | 5% 1/16W |
| R403 | 1-216-831-11 | METAL CHIP 6.8K | 5% 1/16W |
| R404 | 1-216-831-11 | METAL CHIP 6.8K | 5% 1/16W |
| R405 | 1-216-828-11 | METAL CHIP 3.9K | 5% 1/16W |
| R407 | 1-216-829-11 | METAL CHIP 4.7K | 5% 1/16W |
| R408 | 1-216-836-11 | METAL CHIP 18K | 5% 1/16W |
| R409 | 1-216-033-00 | METAL CHIP 220 | 5% 1/10W |
| R410 | 1-216-033-00 | METAL CHIP 220 | 5% 1/10W |
| R411 | 1-216-045-00 | METAL CHIP 680 | 5% 1/10W |
| R412 | 1-216-841-11 | METAL CHIP 47K | 5% 1/16W |
| R413 | 1-216-825-11 | METAL CHIP 2.2K | 5% 1/16W |
| R414 | 1-216-841-11 | METAL CHIP 47K | 5% 1/16W |
| R415 | 1-216-825-11 | METAL CHIP 2.2K | 5% 1/16W |
| R416 | 1-216-045-00 | METAL CHIP 680 | 5% 1/10W |
| R417 | 1-216-831-11 | METAL CHIP 6.8K | 5% 1/16W |
| R418 | 1-216-824-11 | METAL CHIP 1.8K | 5% 1/16W |
| R419 | 1-216-045-00 | METAL CHIP 680 | 5% 1/10W |
| R420 | 1-216-841-11 | METAL CHIP 47K | 5% 1/16W |
| R421 | 1-216-833-11 | METAL CHIP 10K | 5% 1/16W |
| R422 | 1-216-833-11 | METAL CHIP 10K | 5% 1/16W |
| R423 | 1-216-819-11 | METAL CHIP 680 | 5% 1/16W |
| R424 | 1-216-823-11 | METAL CHIP 1.5K | 5% 1/16W |
| R425 | 1-216-845-11 | METAL CHIP 100K | 5% 1/16W |
| R426 | 1-216-830-11 | METAL CHIP 5.6K | 5% 1/16W |
| R427 | 1-216-824-11 | METAL CHIP 1.8K | 5% 1/16W |
| R428 | 1-216-837-11 | METAL CHIP 22K | 5% 1/16W |
| R429 | 1-216-845-11 | METAL CHIP 100K | 5% 1/16W |

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|-----------------|----------|
| R430 | 1-216-823-11 | METAL CHIP 1.5K | 5% 1/16W |
| R431 | 1-216-789-11 | METAL CHIP 2.2 | 5% 1/16W |
| R432 | 1-216-789-11 | METAL CHIP 2.2 | 5% 1/16W |
| R433 | 1-216-845-11 | METAL CHIP 100K | 5% 1/16W |
| R434 | 1-216-826-11 | METAL CHIP 2.7K | 5% 1/16W |
| R435 | 1-216-789-11 | METAL CHIP 2.2 | 5% 1/16W |
| R436 | 1-216-815-11 | METAL CHIP 330 | 5% 1/16W |
| R437 | 1-216-833-11 | METAL CHIP 10K | 5% 1/16W |
| R438 | 1-216-838-11 | METAL CHIP 27K | 5% 1/16W |
| R439 | 1-216-838-11 | METAL CHIP 27K | 5% 1/16W |
| R440 | 1-216-838-11 | METAL CHIP 27K | 5% 1/16W |
| R441 | 1-216-833-11 | METAL CHIP 10K | 5% 1/16W |
| R443 | 1-216-836-11 | METAL CHIP 18K | 5% 1/16W |
| R444 | 1-216-848-11 | METAL CHIP 180K | 5% 1/16W |
| R445 | 1-216-821-11 | METAL CHIP 1K | 5% 1/16W |
| R446 | 1-216-848-11 | METAL CHIP 180K | 5% 1/16W |
| R447 | 1-216-833-11 | METAL CHIP 10K | 5% 1/16W |
| R448 | 1-216-827-11 | METAL CHIP 3.3K | 5% 1/16W |
| R450 | 1-216-864-11 | METAL CHIP 0 | |
| R451 | 1-216-836-11 | METAL CHIP 18K | 5% 1/16W |
| R452 | 1-216-839-11 | METAL CHIP 33K | 5% 1/16W |
| R453 | 1-216-827-11 | METAL CHIP 3.3K | 5% 1/16W |
| R454 | 1-216-841-11 | METAL CHIP 47K | 5% 1/16W |
| R455 | 1-216-845-11 | METAL CHIP 100K | 5% 1/16W |
| R456 | 1-216-801-11 | METAL CHIP 22 | 5% 1/16W |
| R460 | 1-217-671-11 | METAL CHIP 1 | 5% 1/10W |
| R461 | 1-217-671-11 | METAL CHIP 1 | 5% 1/10W |
| R462 | 1-217-671-11 | METAL CHIP 1 | 5% 1/10W |
| R463 | 1-217-671-11 | METAL CHIP 1 | 5% 1/10W |
| R464 | 1-216-833-11 | METAL CHIP 10K | 5% 1/16W |
| R466 | 1-216-837-11 | METAL CHIP 22K | 5% 1/16W |
| R467 | 1-216-828-11 | METAL CHIP 3.9K | 5% 1/16W |
| R468 | 1-216-831-11 | METAL CHIP 6.8K | 5% 1/16W |
| R469 | 1-216-833-11 | METAL CHIP 10K | 5% 1/16W |
| R470 | 1-216-815-11 | METAL CHIP 330 | 5% 1/16W |
| R471 | 1-216-839-11 | METAL CHIP 33K | 5% 1/16W |
| R601 | 1-216-821-11 | METAL CHIP 1K | 5% 1/16W |
| R602 | 1-216-821-11 | METAL CHIP 1K | 5% 1/16W |
| R603 | 1-216-838-11 | METAL CHIP 27K | 5% 1/16W |
| R604 | 1-216-857-11 | METAL CHIP 1M | 5% 1/16W |
| R605 | 1-216-825-11 | METAL CHIP 2.2K | 5% 1/16W |
| R606 | 1-216-845-11 | METAL CHIP 100K | 5% 1/16W |
| R607 | 1-216-821-11 | METAL CHIP 1K | 5% 1/16W |
| R608 | 1-216-821-11 | METAL CHIP 1K | 5% 1/16W |
| R609 | 1-216-845-11 | METAL CHIP 100K | 5% 1/16W |
| R610 | 1-216-861-11 | METAL CHIP 2.2M | 5% 1/16W |
| R611 | 1-216-849-11 | METAL CHIP 220K | 5% 1/16W |
| R612 | 1-218-349-11 | METAL CHIP 240K | 5% 1/16W |

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|-------------|---------------|----------|--------------|-------------|---------------|
| R614 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W | R676 | 1-216-841-11 | METAL CHIP | 47K 5% 1/16W |
| R615 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W | R677 | 1-216-825-11 | METAL CHIP | 2.2K 5% 1/16W |
| R616 | 1-216-837-11 | METAL CHIP | 22K 5% 1/16W | R678 | 1-216-815-11 | METAL CHIP | 330 5% 1/16W |
| R617 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W | R679 | 1-216-809-11 | METAL CHIP | 100 5% 1/16W |
| R618 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W | R680 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W |
| R619 | 1-216-832-11 | METAL CHIP | 8.2K 5% 1/16W | R681 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W |
| R620 | 1-216-832-11 | METAL CHIP | 8.2K 5% 1/16W | R682 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W |
| R621 | 1-216-827-11 | METAL CHIP | 3.3K 5% 1/16W | R683 | 1-216-831-11 | METAL CHIP | 6.8K 5% 1/16W |
| R622 | 1-216-822-11 | METAL CHIP | 1.2K 5% 1/16W | R684 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R623 | 1-216-817-11 | METAL CHIP | 470 5% 1/16W | R685 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R624 | 1-216-827-11 | METAL CHIP | 3.3K 5% 1/16W | R686 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W |
| R629 | 1-216-811-11 | METAL CHIP | 150 5% 1/16W | R687 | 1-216-816-11 | METAL CHIP | 390 5% 1/16W |
| R630 | 1-216-813-11 | METAL CHIP | 220 5% 1/16W | R688 | 1-216-813-11 | METAL CHIP | 220 5% 1/16W |
| R631 | 1-216-815-11 | METAL CHIP | 330 5% 1/16W | R690 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W |
| R632 | 1-216-801-11 | METAL CHIP | 22 5% 1/16W | R693 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R633 | 1-216-820-11 | METAL CHIP | 820 5% 1/16W | R694 | 1-216-825-11 | METAL CHIP | 2.2K 5% 1/16W |
| R634 | 1-216-819-11 | METAL CHIP | 680 5% 1/16W | R701 | 1-216-827-11 | METAL CHIP | 3.3K 5% 1/16W |
| R635 | 1-216-830-11 | METAL CHIP | 5.6K 5% 1/16W | R702 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W |
| R636 | 1-216-837-11 | METAL CHIP | 22K 5% 1/16W | R703 | 1-216-825-11 | METAL CHIP | 2.2K 5% 1/16W |
| R637 | 1-216-837-11 | METAL CHIP | 22K 5% 1/16W | R705 | 1-216-827-11 | METAL CHIP | 3.3K 5% 1/16W |
| R638 | 1-216-817-11 | METAL CHIP | 470 5% 1/16W | R706 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W |
| R639 | 1-216-825-11 | METAL CHIP | 2.2K 5% 1/16W | R707 | 1-216-830-11 | METAL CHIP | 5.6K 5% 1/16W |
| R640 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W | R708 | 1-216-830-11 | METAL CHIP | 5.6K 5% 1/16W |
| R641 | 1-216-830-11 | METAL CHIP | 5.6K 5% 1/16W | R709 | 1-216-829-11 | METAL CHIP | 4.7K 5% 1/16W |
| R651 | 1-216-839-11 | METAL CHIP | 33K 5% 1/16W | R710 | 1-216-829-11 | METAL CHIP | 4.7K 5% 1/16W |
| R652 | 1-216-842-11 | METAL CHIP | 56K 5% 1/16W | R711 | 1-216-830-11 | METAL CHIP | 5.6K 5% 1/16W |
| R653 | 1-216-817-11 | METAL CHIP | 470 5% 1/16W | R712 | 1-216-817-11 | METAL CHIP | 470 5% 1/16W |
| R654 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W | R715 | 1-216-838-11 | METAL CHIP | 27K 5% 1/16W |
| R655 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W | R716 | 1-216-834-11 | METAL CHIP | 12K 5% 1/16W |
| R656 | 1-216-825-11 | METAL CHIP | 2.2K 5% 1/16W | R717 | 1-216-834-11 | METAL CHIP | 12K 5% 1/16W |
| R657 | 1-216-825-11 | METAL CHIP | 2.2K 5% 1/16W | R718 | 1-216-837-11 | METAL CHIP | 22K 5% 1/16W |
| R658 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W | R719 | 1-216-816-11 | METAL CHIP | 390 5% 1/16W |
| R659 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W | R720 | 1-216-822-11 | METAL CHIP | 1.2K 5% 1/16W |
| R660 | 1-216-825-11 | METAL CHIP | 2.2K 5% 1/16W | R721 | 1-216-824-11 | METAL CHIP | 1.8K 5% 1/16W |
| R661 | 1-216-839-11 | METAL CHIP | 33K 5% 1/16W | R722 | 1-216-824-11 | METAL CHIP | 1.8K 5% 1/16W |
| R662 | 1-216-842-11 | METAL CHIP | 56K 5% 1/16W | R724 | 1-216-829-11 | METAL CHIP | 4.7K 5% 1/16W |
| R663 | 1-216-817-11 | METAL CHIP | 470 5% 1/16W | R725 | 1-216-818-11 | METAL CHIP | 560 5% 1/16W |
| R664 | 1-216-809-11 | METAL CHIP | 100 5% 1/16W | R726 | 1-216-825-11 | METAL CHIP | 2.2K 5% 1/16W |
| R665 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W | R727 | 1-216-825-11 | METAL CHIP | 2.2K 5% 1/16W |
| R666 | 1-216-825-11 | METAL CHIP | 2.2K 5% 1/16W | R728 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W |
| R667 | 1-216-825-11 | METAL CHIP | 2.2K 5% 1/16W | R729 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W |
| R668 | 1-216-825-11 | METAL CHIP | 2.2K 5% 1/16W | R730 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R669 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W | R731 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R670 | 1-216-822-11 | METAL CHIP | 1.2K 5% 1/16W | R732 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R671 | 1-216-830-11 | METAL CHIP | 5.6K 5% 1/16W | R733 | 1-216-825-11 | METAL CHIP | 2.2K 5% 1/16W |
| R672 | 1-216-819-11 | METAL CHIP | 680 5% 1/16W | R734 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R673 | 1-216-819-11 | METAL CHIP | 680 5% 1/16W | R736 | 1-216-827-11 | METAL CHIP | 3.3K 5% 1/16W |
| R674 | 1-216-813-11 | METAL CHIP | 220 5% 1/16W | R738 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W |
| R675 | 1-216-816-11 | METAL CHIP | 390 5% 1/16W | R739 | 1-216-829-11 | METAL CHIP | 4.7K 5% 1/16W |

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|-------------|-----------------|----------|--------------|-------------|---------------|
| R741 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W | R791 | 1-216-836-11 | METAL CHIP | 18K 5% 1/16W |
| R742 | 1-216-832-11 | METAL CHIP | 8.2K 5% 1/16W | R792 | 1-216-304-11 | METAL CHIP | 3.3 5% 1/10W |
| R743 | 1-216-829-11 | METAL CHIP | 4.7K 5% 1/16W | R793 | 1-216-830-11 | METAL CHIP | 5.6K 5% 1/16W |
| R744 | 1-216-814-11 | METAL CHIP | 270 5% 1/16W | R794 | 1-216-841-11 | METAL CHIP | 47K 5% 1/16W |
| R745 | 1-216-820-11 | METAL CHIP | 820 5% 1/16W | R796 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W |
| R746 | 1-216-699-11 | METAL CHIP | 100K 0.5% 1/10W | R797 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R747 | 1-216-829-11 | METAL CHIP | 4.7K 5% 1/16W | R801 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W |
| R748 | 1-216-829-11 | METAL CHIP | 4.7K 5% 1/16W | R803 | 1-216-864-11 | METAL CHIP | 0 |
| R749 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W | R804 | 1-216-811-11 | METAL CHIP | 150 5% 1/16W |
| R750 | 1-216-825-11 | METAL CHIP | 2.2K 5% 1/16W | R805 | 1-216-837-11 | METAL CHIP | 22K 5% 1/16W |
| R751 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W | R806 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W |
| R752 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W | R807 | 1-216-816-11 | METAL CHIP | 390 5% 1/16W |
| R753 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W | R808 | 1-216-864-11 | METAL CHIP | 0 |
| R754 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W | R809 | 1-216-818-11 | METAL CHIP | 560 5% 1/16W |
| R755 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W | R810 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W |
| R756 | 1-216-841-11 | METAL CHIP | 47K 5% 1/16W | R811 | 1-216-839-11 | METAL CHIP | 33K 5% 1/16W |
| R757 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W | R822 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W |
| R758 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W | R825 | 1-216-836-11 | METAL CHIP | 18K 5% 1/16W |
| R759 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W | R826 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W |
| R760 | 1-216-817-11 | METAL CHIP | 470 5% 1/16W | R832 | 1-216-840-11 | METAL CHIP | 39K 5% 1/16W |
| R761 | 1-216-822-11 | METAL CHIP | 1.2K 5% 1/16W | R833 | 1-216-022-00 | METAL CHIP | 75 5% 1/10W |
| R762 | 1-216-839-11 | METAL CHIP | 33K 5% 1/16W | R834 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W |
| R763 | 1-216-835-11 | METAL CHIP | 15K 5% 1/16W | R835 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R764 | 1-216-825-11 | METAL CHIP | 2.2K 5% 1/16W | R836 | 1-216-829-11 | METAL CHIP | 4.7K 5% 1/16W |
| R765 | 1-216-825-11 | METAL CHIP | 2.2K 5% 1/16W | R837 | 1-216-849-11 | METAL CHIP | 220K 5% 1/16W |
| R766 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W | R838 | 1-216-828-11 | METAL CHIP | 3.9K 5% 1/16W |
| R767 | 1-216-829-11 | METAL CHIP | 4.7K 5% 1/16W | R839 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R768 | 1-216-844-11 | METAL CHIP | 82K 5% 1/16W | R843 | 1-216-825-11 | METAL CHIP | 2.2K 5% 1/16W |
| R769 | 1-216-835-11 | METAL CHIP | 15K 5% 1/16W | R844 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W |
| R770 | 1-216-829-11 | METAL CHIP | 4.7K 5% 1/16W | R847 | 1-216-817-11 | METAL CHIP | 470 5% 1/16W |
| R771 | 1-216-825-11 | METAL CHIP | 2.2K 5% 1/16W | R849 | 1-216-836-11 | METAL CHIP | 18K 5% 1/16W |
| R772 | 1-216-809-11 | METAL CHIP | 100 5% 1/16W | R850 | 1-216-834-11 | METAL CHIP | 12K 5% 1/16W |
| R773 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W | R851 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R774 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W | R852 | 1-216-809-11 | METAL CHIP | 100 5% 1/16W |
| R775 | 1-216-857-11 | METAL CHIP | 1M 5% 1/16W | R854 | 1-216-817-11 | METAL CHIP | 470 5% 1/16W |
| R776 | 1-216-845-11 | METAL CHIP | 100K 5% 1/16W | R855 | 1-216-814-11 | METAL CHIP | 270 5% 1/16W |
| R777 | 1-216-817-11 | METAL CHIP | 470 5% 1/16W | R856 | 1-216-817-11 | METAL CHIP | 470 5% 1/16W |
| R779 | 1-216-857-11 | METAL CHIP | 1M 5% 1/16W | R857 | 1-216-817-11 | METAL CHIP | 470 5% 1/16W |
| R780 | 1-216-828-11 | METAL CHIP | 3.9K 5% 1/16W | R858 | 1-216-818-11 | METAL CHIP | 560 5% 1/16W |
| R781 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W | R859 | 1-216-818-11 | METAL CHIP | 560 5% 1/16W |
| R782 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W | R860 | 1-216-817-11 | METAL CHIP | 470 5% 1/16W |
| R783 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W | R861 | 1-216-818-11 | METAL CHIP | 560 5% 1/16W |
| R784 | 1-216-015-00 | METAL CHIP | 39 5% 1/10W | R862 | 1-216-819-11 | METAL CHIP | 680 5% 1/16W |
| R785 | 1-216-014-00 | METAL GLAZE | 36 5% 1/10W | R863 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R786 | 1-216-699-11 | METAL CHIP | 100K 0.5% 1/10W | R864 | 1-216-831-11 | METAL CHIP | 6.8K 5% 1/16W |
| R787 | 1-216-822-11 | METAL CHIP | 1.2K 5% 1/16W | R865 | 1-216-832-11 | METAL CHIP | 8.2K 5% 1/16W |
| R788 | 1-216-839-11 | METAL CHIP | 33K 5% 1/16W | R866 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W |
| R789 | 1-216-833-11 | METAL CHIP | 10K 5% 1/16W | R867 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W |
| R790 | 1-216-821-11 | METAL CHIP | 1K 5% 1/16W | | | | |

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|-----------------|----------|
| R868 | 1-216-831-11 | METAL CHIP 6.8K | 5% 1/16W |
| R869 | 1-216-864-11 | METAL CHIP 0 | |
| R895 | 1-216-833-11 | METAL CHIP 10K | 5% 1/16W |
| R917 | 1-216-813-11 | METAL CHIP 220 | 5% 1/16W |
| R918 | 1-216-813-11 | METAL CHIP 220 | 5% 1/16W |
| R921 | 1-216-864-11 | METAL CHIP 0 | |
| R922 | 1-216-864-11 | METAL CHIP 0 | |
| R924 | 1-216-864-11 | METAL CHIP 0 | |
| R925 | 1-216-864-11 | METAL CHIP 0 | |
| R926 | 1-216-864-11 | METAL CHIP 0 | |
| R927 | 1-216-864-11 | METAL CHIP 0 | |
| R928 | 1-216-864-11 | METAL CHIP 0 | |
| R940 | 1-216-847-11 | METAL CHIP 150K | 5% 1/16W |

< NETWORK RESISTOR >

| | | | |
|-------|--------------|-------------------|--|
| RB101 | 1-236-412-11 | NETWORK, RES 1.0K | |
| RB102 | 1-236-432-11 | NETWORK, RES 47K | |
| RB103 | 1-236-432-11 | NETWORK, RES 47K | |
| RB104 | 1-236-424-11 | NETWORK, RES 10K | |
| RB105 | 1-236-424-11 | NETWORK, RES 10K | |
| RB106 | 1-236-424-11 | NETWORK, RES 10K | |
| RB107 | 1-236-424-11 | NETWORK, RES 10K | |
| RB108 | 1-236-424-11 | NETWORK, RES 10K | |
| RB109 | 1-236-424-11 | NETWORK, RES 10K | |
| RB110 | 1-236-424-11 | NETWORK, RES 10K | |
| RB111 | 1-236-412-11 | NETWORK, RES 1.0K | |
| RB112 | 1-236-424-11 | NETWORK, RES 10K | |
| RB113 | 1-236-424-11 | NETWORK, RES 10K | |
| RB115 | 1-236-412-11 | NETWORK, RES 1.0K | |
| RB116 | 1-236-412-11 | NETWORK, RES 1.0K | |
| RB117 | 1-236-412-11 | NETWORK, RES 1.0K | |
| RB118 | 1-236-412-11 | NETWORK, RES 1.0K | |
| RB119 | 1-236-412-11 | NETWORK, RES 1.0K | |
| RB120 | 1-236-412-11 | NETWORK, RES 1.0K | |
| RB121 | 1-236-412-11 | NETWORK, RES 1.0K | |
| RB122 | 1-236-424-11 | NETWORK, RES 10K | |
| RB123 | 1-236-424-11 | NETWORK, RES 10K | |
| RB130 | 1-236-424-11 | NETWORK, RES 10K | |
| RB131 | 1-236-424-11 | NETWORK, RES 10K | |
| RB132 | 1-236-436-11 | NETWORK, RES 100K | |
| RB201 | 1-236-412-11 | NETWORK, RES 1.0K | |
| RB202 | 1-236-412-11 | NETWORK, RES 1.0K | |
| RB203 | 1-236-412-11 | NETWORK, RES 1.0K | |
| RB204 | 1-236-412-11 | NETWORK, RES 1.0K | |
| RB205 | 1-236-412-11 | NETWORK, RES 1.0K | |
| RB206 | 1-236-412-11 | NETWORK, RES 1.0K | |
| RB207 | 1-236-412-11 | NETWORK, RES 1.0K | |
| RB208 | 1-236-412-11 | NETWORK, RES 1.0K | |
| RB209 | 1-236-412-11 | NETWORK, RES 1.0K | |

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|-------------------|--------|
| RB210 | 1-236-412-11 | NETWORK, RES 1.0K | |
| RB211 | 1-236-412-11 | NETWORK, RES 1.0K | |
| RB212 | 1-236-412-11 | NETWORK, RES 1.0K | |
| RB213 | 1-236-412-11 | NETWORK, RES 1.0K | |
| RB214 | 1-236-424-11 | NETWORK, RES 10K | |
| RB215 | 1-236-424-11 | NETWORK, RES 10K | |
| RB216 | 1-236-424-11 | NETWORK, RES 10K | |
| RB217 | 1-236-424-11 | NETWORK, RES 10K | |
| RB218 | 1-236-424-11 | NETWORK, RES 10K | |
| RB219 | 1-236-424-11 | NETWORK, RES 10K | |
| RB220 | 1-236-424-11 | NETWORK, RES 10K | |
| RB221 | 1-236-424-11 | NETWORK, RES 10K | |
| RB222 | 1-236-424-11 | NETWORK, RES 10K | |
| RB223 | 1-236-412-11 | NETWORK, RES 1.0K | |
| RB224 | 1-236-424-11 | NETWORK, RES 10K | |
| RB225 | 1-236-412-11 | NETWORK, RES 1.0K | |
| RB227 | 1-236-412-11 | NETWORK, RES 1.0K | |

< VARIABLE RESISTOR >

| | | | |
|-------|--------------|----------------------|--|
| RV301 | 1-238-090-11 | RES, ADJ CERMET 10K | |
| RV401 | 1-238-087-11 | RES, ADJ CERMET 1K | |
| RV402 | 1-238-089-11 | RES, ADJ CERMET 4.7K | |
| RV601 | 1-238-091-11 | RES, ADJ CERMET 22K | |
| RV602 | 1-238-092-11 | RES, ADJ CERMET 47K | |
| RV603 | 1-238-089-11 | RES, ADJ CERMET 4.7K | |
| RV604 | 1-238-088-11 | RES, ADJ CERMET 2.2K | |
| RV605 | 1-238-088-11 | RES, ADJ CERMET 2.2K | |
| RV651 | 1-238-087-11 | RES, ADJ CERMET 1K | |
| RV652 | 1-238-087-11 | RES, ADJ CERMET 1K | |
| RV653 | 1-238-088-11 | RES, ADJ CERMET 2.2K | |
| RV701 | 1-238-087-11 | RES, ADJ CERMET 1K | |
| RV741 | 1-238-090-11 | RES, ADJ CERMET 10K | |
| RV742 | 1-238-089-11 | RES, ADJ CERMET 4.7K | |
| RV771 | 1-238-092-11 | RES, ADJ CERMET 47K | |
| RV772 | 1-238-087-11 | RES, ADJ CERMET 1K | |
| RV802 | 1-238-087-11 | RES, ADJ CERMET 1K | |

< CRYSTAL >

| | | | |
|------|--------------|----------------------------------|--|
| X101 | 1-527-997-21 | VIBRATOR, CRYSTAL (4MHz) | |
| X102 | 1-577-118-11 | VIBRATOR, LITHIUM NIOBATE (4MHz) | |
| X201 | 1-577-349-21 | VIBRATOR, CRYSTAL (16MHz) | |
| X701 | 1-577-117-21 | VIBRATOR, CRYSTAL (4.43MHz) | |

| Ref. No. | Part No. | Description | Remark |
|----------------|------------------------|---------------------------------|-----------|
| * A-7062-529-A | TU-126 BOARD, COMPLETE | ***** (Ref. No 6,000 Series) | |
| | 3-744-166-01 | HOLDER, ANTENNA | |
| | 3-746-907-01 | LID, TOD SHIELD CASE | |
| | 3-746-908-01 | LID, REAR, TOD SHIELD CASE | |
| | 3-746-915-01 | LID, REAR, TU SHIELD CASE | |
| | < CAPACITOR > | | |
| C001 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C002 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C004 | 1-164-005-11 | CERAMIC CHIP 0.47uF | 25V |
| C005 | 1-135-157-21 | TANTALUM CHIP 10uF | ~20% 6.3V |
| C006 | 1-163-035-00 | CERAMIC CHIP 0.047uF | 50V |
| C007 | 1-164-005-11 | CERAMIC CHIP 0.47uF | 25V |
| C008 | 1-164-005-11 | CERAMIC CHIP 0.47uF | 25V |
| C009 | 1-126-205-11 | ELECT CHIP 47uF | 20% 6.3V |
| C010 | 1-163-035-00 | CERAMIC CHIP 0.047uF | 50V |
| C011 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C012 | 1-163-224-11 | CERAMIC CHIP 7PF 0.25PF | 50V |
| C013 | 1-163-224-11 | CERAMIC CHIP 7PF 0.25PF | 50V |
| C014 | 1-163-017-00 | CERAMIC CHIP 0.0047uF | 5% 50V |
| C018 | 1-163-017-00 | CERAMIC CHIP 0.0047uF | 5% 50V |
| C019 | 1-163-017-00 | CERAMIC CHIP 0.0047uF | 5% 50V |
| C020 | 1-135-217-21 | TANTALUM CHIP 15uF | 20% 6.3V |
| C021 | 1-163-017-00 | CERAMIC CHIP 0.0047uF | 5% 50V |
| C023 | 1-164-222-11 | CERAMIC CHIP 0.22uF | 25V |
| C024 | 1-164-336-11 | CERAMIC CHIP 0.33uF | 25V |
| C025 | 1-135-177-21 | TANTALUM CHIP 1uF | 20% 20V |
| C026 | 1-163-017-00 | CERAMIC CHIP 0.0047uF | 5% 50V |
| C027 | 1-163-035-00 | CERAMIC CHIP 0.047uF | 50V |
| C028 | 1-163-095-00 | CERAMIC CHIP 12PF | 5% 50V |
| C029 | 1-126-206-11 | ELECT CHIP 100uF | 20% 6.3V |
| C030 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C031 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V |
| C032 | 1-135-149-21 | TANTALUM CHIP 2.2uF | 20% 10V |
| C033 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C034 | 1-135-157-21 | TANTALUM CHIP 10uF | 20% 6.3V |
| C035 | 1-163-105-00 | CERAMIC CHIP 33PF | 5% 50V |
| C036 | 1-163-036-00 | CERAMIC CHIP 0.068uF | 50V |
| C037 | 1-163-036-00 | CERAMIC CHIP 0.068uF | 50V |
| C038 | 1-163-036-00 | CERAMIC CHIP 0.068uF | 50V |
| C039 | 1-163-121-00 | CERAMIC CHIP 150PF | 5% 50V |
| C040 | 1-163-095-00 | CERAMIC CHIP 12PF | 5% 50V |
| C041 | 1-163-037-11 | CERAMIC CHIP 0.022uF | 10% 25V |
| C042 | 1-163-017-00 | CERAMIC CHIP 0.0047uF | 5% 50V |
| C044 | 1-163-009-11 | CERAMIC CHIP 0.001uF | 10% 50V |
| C045 | 1-163-037-11 | CERAMIC CHIP 0.022uF | 10% 25V |
| C046 | 1-135-181-21 | TANTALUM CHIP 4.7uF | 20% 6.3V |

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|-----------------------|----------|
| C047 | 1-163-017-00 | CERAMIC CHIP 0.0047uF | 5% 50V |
| C048 | 1-163-115-00 | CERAMIC CHIP 82PF | 5% 50V |
| C049 | 1-163-099-00 | CERAMIC CHIP 18PF | 5% 50V |
| C050 | 1-163-109-00 | CERAMIC CHIP 47PF | 5% 50V |
| C051 | 1-163-017-00 | CERAMIC CHIP 0.0047uF | 5% 50V |
| C054 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C058 | 1-163-017-00 | CERAMIC CHIP 0.0047uF | 5% 50V |
| C059 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C060 | 1-135-217-21 | TANTALUM CHIP 15uF | 20% 6.3V |
| C061 | 1-163-016-00 | CERAMIC CHIP 0.0039uF | 10% 50V |
| C062 | 1-163-095-00 | CERAMIC CHIP 12PF | 5% 50V |
| C063 | 1-163-095-00 | CERAMIC CHIP 12PF | 5% 50V |
| C065 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C066 | 1-126-206-11 | ELECT CHIP 100uF | 20% 6.3V |
| C070 | 1-164-005-11 | CERAMIC CHIP 0.47uF | 25V |
| C071 | 1-163-019-00 | CERAMIC CHIP 0.0068uF | 10% 50V |
| C072 | 1-163-011-11 | CERAMIC CHIP 0.0015uF | 10% 50V |
| C073 | 1-163-035-00 | CERAMIC CHIP 0.047uF | 50V |
| C201 | 1-163-113-00 | CERAMIC CHIP 68PF | 5% 50V |
| C202 | 1-163-251-11 | CERAMIC CHIP 100PF | 5% 50V |
| C203 | 1-135-181-21 | TANTALUM CHIP 4.7uF | 20% 6.3V |
| C204 | 1-135-181-21 | TANTALUM CHIP 4.7uF | 20% 6.3V |
| C205 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C206 | 1-135-202-21 | TANTAL. CHIP 22uF | 20% 4V |
| C207 | 1-135-181-21 | TANTALUM CHIP 4.7uF | 20% 6.3V |
| C208 | 1-135-181-21 | TANTALUM CHIP 4.7uF | 20% 6.3V |
| C209 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C210 | 1-163-019-00 | CERAMIC CHIP 0.0068uF | 10% 50V |
| C212 | 1-163-009-11 | CERAMIC CHIP 0.001uF | 10% 50V |
| C501 | 1-164-161-11 | CERAMIC CHIP 0.0022uF | 10% 100V |
| C502 | 1-163-133-00 | CERAMIC CHIP 470PF | 5% 50V |
| C503 | 1-135-217-21 | TANTALUM CHIP 15uF | 20% 6.3V |
| C504 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C505 | 1-163-011-11 | CERAMIC CHIP 0.0015uF | 10% 50V |
| C506 | 1-126-204-11 | ELECT CHIP 47uF | 20% 16V |
| C507 | 1-135-156-21 | TANTALUM CHIP 6.8uF | 10% 6.3V |
| C508 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C509 | 1-124-779-00 | ELECT CHIP 10uF | 20% 16v |
| C510 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C511 | 1-126-200-11 | ELECT CHIP 10uF | 20% 35V |
| C512 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C513 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C514 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C515 | 1-135-156-21 | TANTALUM CHIP 6.8uF | 10% 6.3V |
| C516 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C517 | 1-135-153-21 | TANTALUM CHIP 2.2uF | 10% 20V |
| C518 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C520 | 1-126-602-11 | ELECT CHIP 3.3uF | 20% 50V |
| C521 | 1-163-036-00 | CERAMIC CHIP 0.068uF | 50V |

| Ref. No. | Part No. | Description | Remark |
|-------------------|----------------|-------------------------------|---------|
| C522 | 1-135-155-21 | TANTALUM CHIP 4.7uF | 10% 10V |
| C527 | 1-163-037-11 | CERAMIC CHIP 0.022uF | 10% 25V |
| < DISCRIMINATOR > | | | |
| CF051 | 1-577-560-11 | FILTER, CERAMIC | |
| CF052 | 1-579-217-11 | DISCRIMINATOR, CERAMIC | |
| CF053 | 1-409-478-11 | FILTER, TRAP (CERAMIC) | |
| CF061 | 1-577-561-11 | FILTER, CERAMIC | |
| CF062 | 1-579-218-11 | DISCRIMINATOR, CERAMIC | |
| < CONNECTOR > | | | |
| CN001 | 1-569-634-41 | CONNECTOR, BOARD TO BOARD 30P | |
| CN002 | 1-566-523-11 | CONNECTOR, FPC (ZIF) 7P | |
| CN003 | * 1-565-541-11 | PIN, CONNECTOR (PC BOARD) 2P | |
| < DIODE > | | | |
| D001 | 8-719-400-18 | DIODE MA152WK | |
| D501 | 8-719-400-18 | DIODE MA152WK | |
| D502 | 8-719-400-18 | DIODE MA152WK | |
| D503 | 8-719-400-18 | DIODE MA152WK | |
| D504 | 8-719-400-18 | DIODE MA152WK | |
| D601 | 8-719-106-44 | DIODE R09. 1M-B2 | |
| < INDUCTOR > | | | |
| F8501 | 1-412-390-21 | INDUCTOR, CHIP 0uH | |
| F8502 | 1-412-390-21 | INDUCTOR, CHIP 0uH | |
| < IC > | | | |
| IC001 | 8-759-504-50 | IC TDA3842T | |
| IC002 | 8-759-634-94 | IC M52018FP | |
| IC005 | 8-759-998-92 | IC LM393D | |
| IC201 | 8-759-710-86 | IC NJM2233BM | |
| IC202 | 8-759-710-86 | IC NJM2233BM | |
| IC501 | △8-759-979-50 | IC FA7610H | |
| IC502 | 8-759-157-40 | IC uPC574J | |
| < AMPLIFIER > | | | |
| IU001 | △1-466-330-11 | AMPLIFIER, ISOLATION (RA-1) | |
| < JACK > | | | |
| J001 | 1-507-921-00 | JACK (EXT ANT) | |
| J601 | 1-563-282-11 | JACK, SMALL TYPE (EAR B) | |
| J602 | 1-563-282-11 | JACK, SMALL TYPE (EAR A) | |

| Ref. No. | Part No. | Description | Remark |
|----------------|---------------|--------------------------|--------|
| < COIL > | | | |
| L002 | 1-410-987-11 | INDUCTOR, CHIP 0.33uH | |
| L004 | 1-412-029-11 | INDUCTOR, CHIP 10uH | |
| L005 | 1-412-031-11 | INDUCTOR, CHIP 47uH | |
| L006 | 1-410-377-31 | INDUCTOR, CHIP 4.7uH | |
| L007 | 1-410-380-31 | INDUCTOR, CHIP 8.2uH | |
| L008 | 1-410-393-11 | INDUCTOR, CHIP 100uH | |
| L051 | 1-410-992-11 | INDUCTOR, CHIP 0.82uH | |
| L052 | 1-412-029-11 | INDUCTOR, CHIP 10uH | |
| L053 | 1-412-029-11 | INDUCTOR, CHIP 10uH | |
| L201 | 1-410-387-11 | INDUCTOR, CHIP 33uH | |
| L501 | 1-412-028-11 | INDUCTOR, CHIP 4.7uH | |
| L502 | 1-412-030-11 | INDUCTOR, CHIP 22uH | |
| L503 | 1-412-028-11 | INDUCTOR, CHIP 4.7uH | |
| L505 | 1-412-030-11 | INDUCTOR, CHIP 22uH | |
| < TRANSISTOR > | | | |
| Q001 | 8-729-230-XX | TRANSISTOR 2SC2669-0Y | |
| Q002 | 8-729-100-66 | TRANSISTOR 2SC1623 | |
| Q003 | 8-729-901-47 | TRANSISTOR DTA143EK | |
| Q004 | 8-729-901-47 | TRANSISTOR DTA143EK | |
| Q005 | 8-729-901-47 | TRANSISTOR DTA143EK | |
| Q006 | 8-729-901-01 | TRANSISTOR DTC144EK | |
| Q007 | 8-729-901-01 | TRANSISTOR DTC144EK | |
| Q008 | 8-729-216-22 | TRANSISTOR 2SA1162 | |
| Q009 | 8-729-100-66 | TRANSISTOR 2SC1623 | |
| Q010 | 8-729-216-22 | TRANSISTOR 2SA1162 | |
| Q011 | 8-729-100-66 | TRANSISTOR 2SC1623 | |
| Q012 | 8-729-901-01 | TRANSISTOR DTC144EK | |
| Q013 | 8-729-901-01 | TRANSISTOR DTC144EK | |
| Q014 | 8-729-901-01 | TRANSISTOR DTC144EK | |
| Q015 | 8-729-100-66 | TRANSISTOR 2SC1623 | |
| Q016 | 8-729-100-66 | TRANSISTOR 2SC1623 | |
| Q201 | 8-729-100-66 | TRANSISTOR 2SC1623 | |
| Q202 | 8-729-216-22 | TRANSISTOR 2SA1162 | |
| Q204 | 8-729-901-01 | TRANSISTOR DTC144EK | |
| Q501 | △8-729-421-15 | TRANSISTOR 2SD1119-Q | |
| Q502 | 8-729-901-06 | TRANSISTOR DTA144EK | |
| Q503 | 8-729-901-01 | TRANSISTOR DTC144EK | |
| Q504 | 8-729-601-58 | TRANSISTOR 2SC3053-C | |
| < RESISTOR > | | | |
| R002 | 1-216-295-00 | METAL CHIP 0 5% 1/10W | |
| R003 | 1-216-295-00 | METAL CHIP 0 5% 1/10W | |
| R006 | 1-216-021-00 | METAL CHIP 68 5% 1/10W | |
| R007 | 1-216-057-00 | METAL CHIP 2.2K 5% 1/10W | |
| R008 | 1-216-053-00 | METAL CHIP 1.5K 5% 1/10W | |
| R009 | 1-216-057-00 | METAL CHIP 2.2K 5% 1/10W | |

| | |
|--|---|
| <p>Note: The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.</p> | <p>Note: Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p> |
|--|---|

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|-------------|---------------|----------|--------------|------------------------------|---------------|
| R010 | 1-216-019-00 | METAL CHIP | 56 5% 1/10W | R201 | 1-216-039-00 | METAL CHIP | 390 5% 1/10W |
| R011 | 1-216-049-00 | METAL CHIP | 1K 5% 1/10W | R202 | 1-216-039-00 | METAL CHIP | 390 5% 1/10W |
| R012 | 1-216-037-00 | METAL CHIP | 330 5% 1/10W | R203 | 1-216-047-00 | METAL CHIP | 820 5% 1/10W |
| R013 | 1-216-025-00 | METAL CHIP | 100 5% 1/10W | R204 | 1-216-045-00 | METAL CHIP | 680 5% 1/10W |
| R014 | 1-216-063-00 | METAL CHIP | 3.9K 5% 1/10W | R205 | 1-216-021-00 | METAL CHIP | 68 5% 1/10W |
| R015 | 1-216-045-00 | METAL CHIP | 680 5% 1/10W | R206 | 1-216-025-00 | METAL CHIP | 100 5% 1/10W |
| R016 | 1-216-033-00 | METAL CHIP | 220 5% 1/10W | R207 | 1-216-069-00 | METAL CHIP | 6.8K 5% 1/10W |
| R017 | 1-216-037-00 | METAL CHIP | 330 5% 1/10W | R209 | 1-216-081-00 | METAL CHIP | 22K 5% 1/10W |
| R018 | 1-216-021-00 | METAL CHIP | 68 5% 1/10W | R210 | 1-216-295-00 | METAL CHIP | 0 5% 1/10W |
| R019 | 1-216-029-00 | METAL CHIP | 150 5% 1/10W | R211 | 1-216-295-00 | METAL CHIP | 0 5% 1/10W |
| R020 | 1-216-053-00 | METAL CHIP | 1.5K 5% 1/10W | R212 | 1-216-073-00 | METAL CHIP | 10K 5% 1/10W |
| R021 | 1-216-021-00 | METAL CHIP | 68 5% 1/10W | R213 | 1-216-073-00 | METAL CHIP | 10K 5% 1/10W |
| R022 | 1-216-077-00 | METAL CHIP | 15K 5% 1/10W | R501 | 1-216-055-00 | METAL CHIP | 1.8K 5% 1/10W |
| R023 | 1-216-295-00 | METAL CHIP | 0 5% 1/10W | R502 | 1-216-091-00 | METAL CHIP | 56K 5% 1/10W |
| R026 | 1-216-081-00 | METAL CHIP | 22K 5% 1/10W | R503 | 1-216-069-00 | METAL CHIP | 6.8K 5% 1/10W |
| R027 | 1-216-057-00 | METAL CHIP | 2.2K 5% 1/10W | R504 | 1-216-113-00 | METAL CHIP | 470K 5% 1/10W |
| R028 | 1-216-057-00 | METAL CHIP | 2.2K 5% 1/10W | R505 | 1-216-117-00 | METAL CHIP | 680K 5% 1/10W |
| R029 | 1-216-109-00 | METAL CHIP | 330K 5% 1/10W | R506 | 1-216-748-11 | METAL CHIP | 39K 5% 1/10W |
| R031 | 1-216-081-00 | METAL CHIP | 22K 5% 1/10W | R507 | 1-216-103-00 | METAL CHIP | 180K 5% 1/10W |
| R032 | 1-216-081-00 | METAL CHIP | 22K 5% 1/10W | R508 | 1-216-001-00 | METAL CHIP | 10 5% 1/10W |
| R033 | 1-216-077-00 | METAL CHIP | 15K 5% 1/10W | R509 | 1-216-105-00 | METAL CHIP | 220K 5% 1/10W |
| R034 | 1-216-073-00 | METAL CHIP | 10K 5% 1/10W | R511 | 1-216-009-00 | METAL CHIP | 22 5% 1/10W |
| R035 | 1-216-073-00 | METAL CHIP | 10K 5% 1/10W | R512 | 1-216-043-00 | METAL CHIP | 560 5% 1/10W |
| R036 | 1-216-053-00 | METAL CHIP | 1.5K 5% 1/10W | R513 | 1-216-097-00 | METAL CHIP | 100K 5% 1/10W |
| R038 | 1-216-121-00 | METAL CHIP | 1M 5% 1/10W | R514 | 1-216-097-00 | METAL CHIP | 100K 5% 1/10W |
| R039 | 1-216-065-00 | METAL CHIP | 4.7K 5% 1/10W | R516 | 1-216-043-00 | METAL CHIP | 560 5% 1/10W |
| R040 | 1-216-059-00 | METAL CHIP | 2.7K 5% 1/10W | R517 | 1-216-043-00 | METAL CHIP | 560 5% 1/10W |
| R041 | 1-216-063-00 | METAL CHIP | 3.9K 5% 1/10W | R518 | 1-216-043-00 | METAL CHIP | 560 5% 1/10W |
| R042 | 1-216-053-00 | METAL CHIP | 1.5K 5% 1/10W | R520 | 1-216-067-00 | METAL CHIP | 5.6K 5% 1/10W |
| R043 | 1-216-083-00 | METAL CHIP | 27K 5% 1/10W | R521 | 1-216-081-00 | METAL CHIP | 22K 5% 1/10W |
| R044 | 1-216-083-00 | METAL CHIP | 27K 5% 1/10W | R601 | 1-216-025-00 | METAL CHIP | 100 5% 1/10W |
| R045 | 1-216-079-00 | METAL CHIP | 18K 5% 1/10W | R602 | 1-216-025-00 | METAL CHIP | 100 5% 1/10W |
| R046 | 1-216-077-00 | METAL CHIP | 15K 5% 1/10W | R603 | 1-216-025-00 | METAL CHIP | 100 5% 1/10W |
| R047 | 1-216-079-00 | METAL CHIP | 18K 5% 1/10W | R604 | 1-216-025-00 | METAL CHIP | 100 5% 1/10W |
| R048 | 1-216-089-00 | METAL CHIP | 47K 5% 1/10W | | | < VARIABLE RESISTOR > | |
| R049 | 1-216-089-00 | METAL CHIP | 47K 5% 1/10W | | | | |
| R051 | 1-216-049-00 | METAL CHIP | 1K 5% 1/10W | RV201 | 1-238-091-11 | RES. ADJ CERMET22K | |
| R056 | 1-216-037-00 | METAL CHIP | 330 5% 1/10W | RV501 | 1-238-087-11 | RES. ADJ CERMET1K | |
| R057 | 1-216-035-00 | METAL CHIP | 270 5% 1/10W | | | < FILTER > | |
| R058 | 1-216-025-00 | METAL CHIP | 100 5% 1/10W | | | | |
| R059 | 1-216-017-00 | METAL CHIP | 47 5% 1/10W | SWF001 | 1-577-604-11 | FILTER. SAW | |
| R060 | 1-216-073-00 | METAL CHIP | 10K 5% 1/10W | SWF002 | 1-404-712-11 | SAWF | |
| R068 | 1-216-073-00 | METAL CHIP | 10K 5% 1/10W | | | < TRANSFORMER > | |
| R069 | 1-216-073-00 | METAL CHIP | 10K 5% 1/10W | | | | |
| R070 | 1-216-073-00 | METAL CHIP | 10K 5% 1/10W | T001 | 1-460-079-11 | COIL | |
| R071 | 1-216-073-00 | METAL CHIP | 10K 5% 1/10W | T002 | 1-460-078-11 | COIL | |
| R072 | 1-216-065-00 | METAL CHIP | 4.7K 5% 1/10W | T004 | 1-460-149-11 | COIL | |
| R073 | 1-216-081-00 | METAL CHIP | 22K 5% 1/10W | T501 | 1-450-107-11 | TRANSFORMER. DC-DC CONVERTER | |
| R075 | 1-216-073-00 | METAL CHIP | 10K 5% 1/10W | | | | |

Ref. No. Part No. Description Remark

< TUNER >

TU001 Δ 1-465-569-11 TUNER, ET (BT-K0301)

* 1-634-347-11 UC-6 BOARD (Ref. No 4,000 Series)

* 3-746-939-01 INSULATOR, UC

< CONNECTOR >

CN001 1-566-529-11 CONNECTOR, FPC (ZIF) 13P

CN002 1-566-527-11 CONNECTOR, FPC (ZIF) 11P

CN003 1-566-547-11 CONNECTOR, FPC (NON ZIF) 15P

MISCELLANEOUS

25 1-575-856-11 CABLE, FLAT (1.0MM PITCH) 7 CORE

57 1-466-334-11 SWITCH BLOCK, CONTROL

60 Δ 1-466-333-11 INVERTER UNIT, DC-AC

63 1-575-858-11 CABLE, FLAT (1.0MM PITCH) 16 CORE

115 1-575-859-11 CABLE, FLAT (1.0MM PITCH) 15 CORE

122 1-575-857-11 CABLE, FLAT (1.0MM PITCH) 12 CORE

163 1-808-505-12 SENSOR (DEW)

AN001 1-501-456-11 ANTENNA, TELESCOPIC

BL901 1-518-668-11 TUBE UNIT, FLUORECENT

LCD901 1-809-002-11 DISPLAY MODULE, LIQUID CRYSTAL

M902 8-835-331-01 MOTOR, DC U-22A (CAPSTAN)

M903 A-7040-208-A MOTOR ASSY, THREADING (LOADING)

SP901 1-544-323-11 SPEAKER

Ref. No. Part No. Description Remark

ACCESSORY & PACKING MATERIAL

Δ 1-528-174-31 BATTERY, LITHIUM (CR2032 TYPE)

1-574-517-11 CORD, CONNECTION

2-366-919-00 BAG, PROTECTION

3-728-996-01 CASE, SOFT

* 3-744-184-01 CUSHION (UPPER)

* 3-744-185-01 CUSHION (LOWER)

3-752-067-11 MANUAL, INSTRUCTION (ENGLISH)

3-752-067-41 MANUAL, INSTRUCTION

(GERMAN, FRENCH, SPANISH)

3-752-067-51 MANUAL, INSTRUCTION

(DUTCH, SWEDISH, ITALIAN)

*** ACCESSORY & PACKING MATERIAL (KIT) ***

* 3-746-957-51 INDIVIDUAL CARTON

* 3-749-784-01 CUSHION (UPPER), ACC

* 3-749-785-01 CUSHION (LOWER), ACC

** AC-V30 AC POWER ADAPTOR

*** MDR-E454 HEAD PHONE

*** NP-66H BATTERY PACK

< Note >

** MARK PARTS IS AVAILABLE FOR REPAIR SERVICE.

*** MARK PARTS IS AVAILABLE AS AN OPTIONAL ACCESSORY.

HARDWARE LIST

- # 1 7-623-208-22 SW 3, TYPE 2
- # 2 7-627-553-18 SCREW, PRECISION +P 2X2
- # 3 7-627-555-88 SCREW, PRECISION +P 1.4X1.8
- # 4 7-627-452-48 SCREW, PRECISION +RK 2X2.5
- # 5 7-627-553-68 SCREW, PRECISION +P 2X6 TYPE3
- # 6 7-684-023-04 N 3, TYPE 2
- # 7 7-688-003-01 W 3, SMALL
- # 8 7-627-553-37 SCREW (M2X3), SPECIAL HEAD

| | |
|--|--|
| <p>Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.</p> | <p>Note: Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p> |
|--|--|

SECTION 7 MECHANICAL ADJUSTMENTS

For Mechanical Adjustments

Refer to mechanical adjustment (8 mm Video MECHANICAL ADJUSTMENT MANUAL III) manual for the adjustments and checks of mechanism section and the mechanical parts replacement. (9-972-732-11)

For setting of the track shift mode, however, refer to the following.

7-1. SETTING THE TRACK SHIFT MODE

[Setting Method]

- 1) Setting the test mode* 0011 (Jig switching position 3)

CN802

| | |
|---|--------|
| 1 | TEST B |
| 2 | GND |
| 3 | TEST A |
| 4 | TEST C |
| 5 | TEST D |

Jig switching position 3

*Refer to [8-1-7. Test mode].

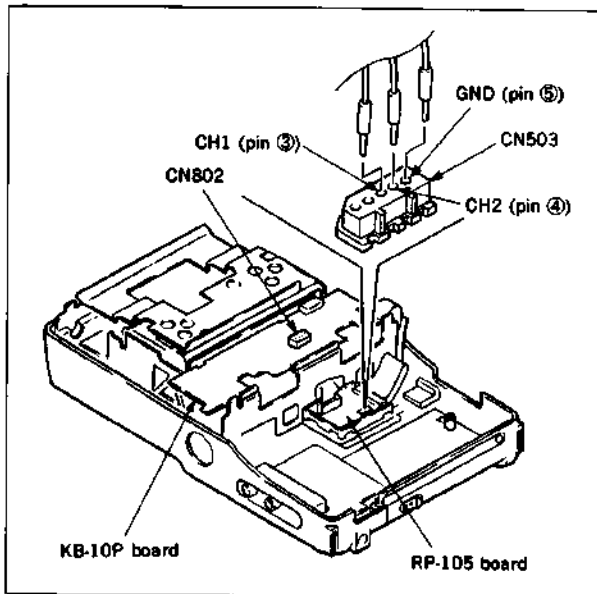


Fig. 7-1.

7-2. PREPARATION FOR ADJUSTMENT

- 1) Clean the tape running surfaces (tape guide, drum, capstan shaft, pinch roller.)
- 2) Connect to the oscilloscope.
CH1 : RP-105 board CN503 pin ③ (PB RF)
CH2 : RP-105 board CN503 pin ④ (SWP)
- 3) Play back the tracking alignment tape (WR5-1CP) (8-967-995-07).
- 4) Check that the RF waveform of the oscilloscope is flat at both inlet and outlet sides. When not flat, make adjustment as follows. (Refer to mechanical adjustment manual.)

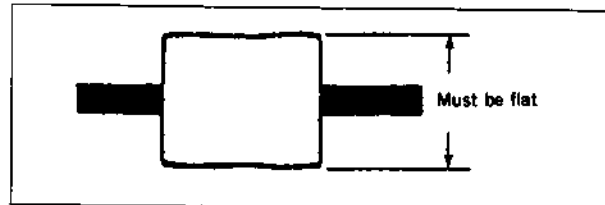


Fig. 7-2.

SECTION 8 ELECTRICAL ADJUSTMENTS

See the adjusting parts location diagram from on page 170 for the adjustment.

8-1. PREPARATION FOR ADJUSTMENT

The following measurement instruments are used for the electric adjustment.

8-1-1. Using Instruments

- 1) Monitor TV
- 2) Oscilloscope having two phenomena, band of 10MHz or more, and the delay mode.
- 3) Frequency counter
- 4) PAL Pattern generator
(having the video output terminal)
SECAM Pattern generator
(Used on SECAM-PAL Conversion System)
- 5) Digital voltmeter
- 6) Audio generator
- 7) Audio level meter
- 8) Audio distortion rate meter
- 9) Audio attenuator
- 10) Stabilized power source
- 11) Alignment tape
 - For tracking adjustment
(WR5-1CP) Part code : 8-967-995-07
 - For checking of SP mode operation
(WR5-5CSP) Part code : 8-967-995-47
(WR5-4CSP) Part code : 8-967-995-46
 - For checking of LP mode operation
(WR5-4CL) Part code : 8-967-995-56
 - For video frequency characteristic adjustment
(WR5-6C) Part code : 8-967-995-17

- 12) Extension harness

Between AU-93 board CN001 and SV-66 board CN005

J-6082-111-A

Between AU-93 board CN002 and SV-66 board CN006

J-6082-112-A

Between RG-22 board CN001 and SV-66 board CN004

J-6082-113-A

- 13) COMMON voltage adjustment jig (J-6082-024-A)

8-1-2. Connection of Instruments

If there is no special direction, connect the measuring instru-

ments as shown in the following figure and perform the adjustment.

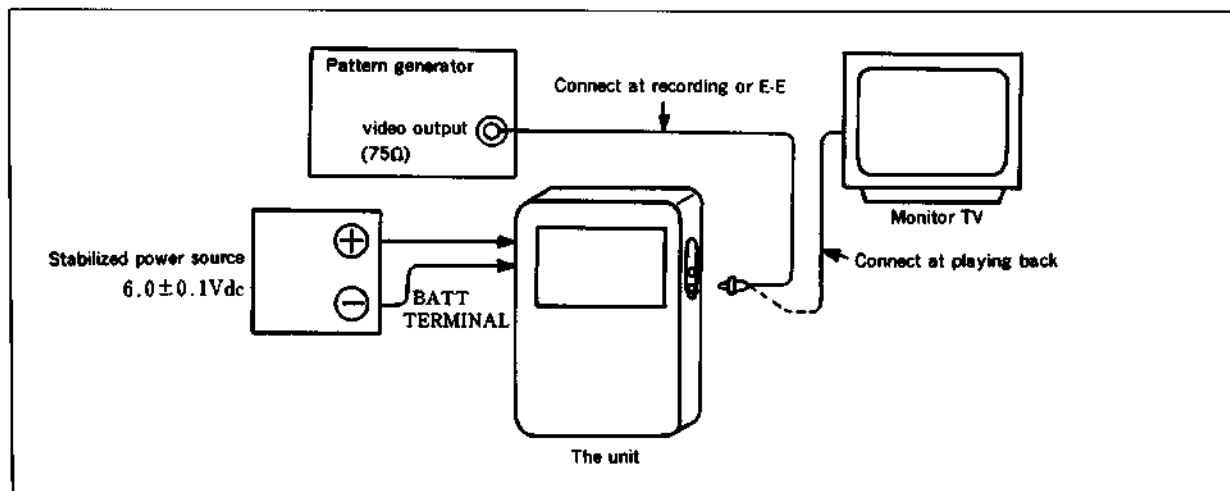


Fig. 8-1.

8-1-3. VIDEO/AUDIO Terminal of the Unit

The VIDEO/AUDIO terminal of the unit has the function of both input and output. The operation as the input terminal or as the output terminal is automatically selected according to the operating condition of the unit.

When connecting with the other instruments, perform the connection according to the input-output of the terminal.

The operation condition of the unit and the automatic input-output selection of the terminal.

| Input mode selected with the INPUT SELECT button | The case that the unit is stopped or the recording mode is selected. | The case that the unit is set to the playback mode. |
|--|--|---|
| TUNER (television screen) | Output | Output |
| LINE* | Input | Output |
| CAMERA | Output | Output |

* When the LINE is selected with the INPUT SELECT button, the display of INPUT or OUTPUT is shown according to the operation condition.

8-1-4. Set-up at the Adjustment

As the video signal obtained from the pattern generator is used as the adjustment signal for adjusting, it is required that the video output signal satisfies the specified value. Connect the pattern generator and the oscilloscope with the VIDEO input-output terminal. Check that the amplitude of the synchronous signal of the video signal is approximately 0.3V, the amplitude of the picture part is approximately 0.7V, the amplitude of the burst signal is approximately 0.3V and is flat, and the level proportion of the burst signal and the red signal is 0.30 : 0.66.

The video signal (color bar) used for the adjustment is shown in the Fig. 8-2.

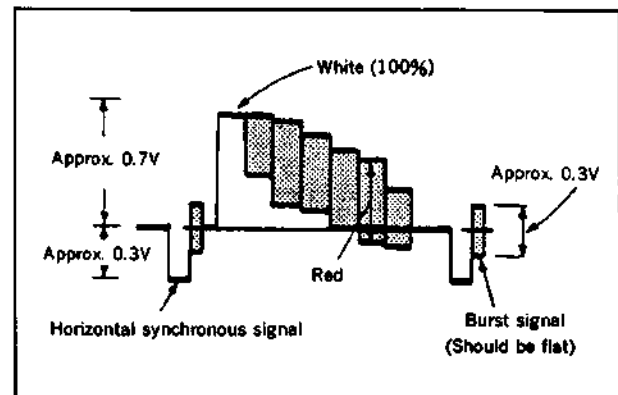


Fig. 8-2. Color bar signal of the pattern generator

8-1-5. Alignment Tape

The following tapes are prepared for the alignment tape.

Use the tape designated in the signal column of each adjustment.

| Name | Recording mode | Type of tape | Speed of tape | Recording contents | | Usage |
|---|----------------|--------------|---------------|---|---|---|
| | | | | Video area | PCM area | |
| Tracking WR5-1CP | L | MP | SP | CH2: 1MHz Signal for tape pass adjustment Marker for switching position adjustment(CH1: 9MHz) | | Tape pass adjustment Switching position adjustment |
| Video frequency characteristic WR5-6C | L | MP | SP | RF sweep 0~15MHz Marker 1, 3.58, 5.5, 7MHz | | Frequency characteristic adjustment |
| Checking operation WR5-4CSP or WR5-5CSP | L | MP | SP | <ul style="list-style-type: none"> Video signal Color bar 4 minutes Monoscope 4 minutes Audio signal (AFM) 400Hz 60% modulation | <ul style="list-style-type: none"> Audio signal (PCM) monoscope part 20Hz, 20sec. Repeat four times 400Hz, 20sec. 14kHz, 20sec. Color bar part 1kHz 4 minutes | Checking operation |
| WR5-4CL | L | MP | LP | <ul style="list-style-type: none"> Video signal Color bar 4 minutes monoscope 4 minutes Audio signal (AFM) 400Hz 60% modulation | | |

Note: Recording mode
L.....Normal mode

Types of tape
MP.....Application type metal tape

Table 8-1.

The color bar signal recorded in the alignment tape is shown in the Fig.8-3.

Note : Measure with the VIDEO INPUT-OUTPUT terminal (75Ω terminal) playback mode.

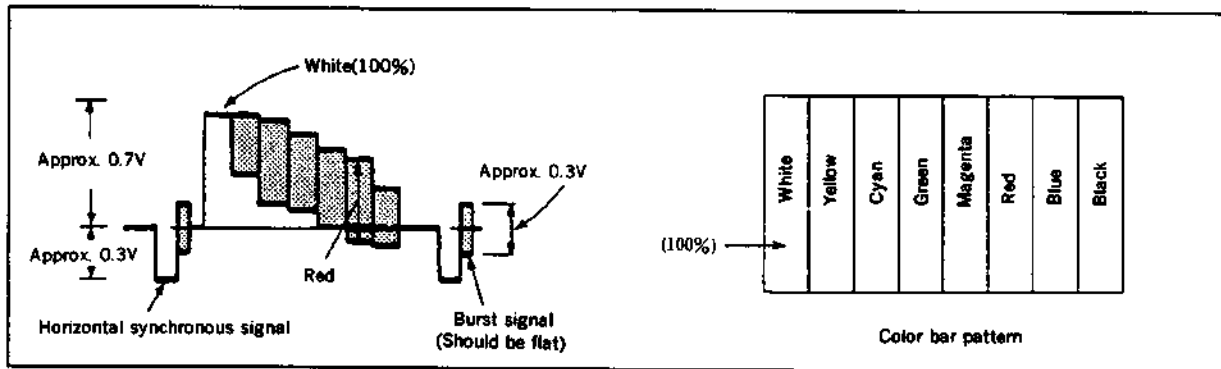


Fig.8-3. Color bar signal of the alignment tape

8-1-6. Input/Output Level and Impedance

VIDEO/AUDIO Input-output terminal (phono jack)

VIDEO input Input signal : 1Vp-p, 75Ω unbalance, Synchronous negative

VIDEO output Output signal : 1Vp-p, 75Ω unbalance, Synchronous negative

AUDIO input Input level : -7.5dBs(0dBs=0.775Vrms)
Input impedance : 47kΩ or more

AUDIO output Specified output : -7.5dBs
Output impedance : 10kΩ or less

① Normal mode

Normal set condition

② Emergency off (Release of emergency stop)

③ TT TEST

MODE for extending the SIRCS code (For producing line)

④ Track shift

Run on the ATF track shift condition at the playback mode.

Timer microcomputer is in the clock adjustment mode.

⑤ SW POSI

Adjustment mode of switch position.

SWPOSI is stored in EEPROM as 16bit DATA. This data is adjusted dividing high 8bit and low 8bit. Use CH+/- KEY.

TEST MODE0101 : Varies at 16 μ sec per 1STEP.

TEST MODE0100 : Varies at 1 μ sec per 1STEP. When low 8 bit is incremented from FF. HEX, high 8 bit goes UP. And when it is decremented from 00.HEX, high 8 bit goes DOWN.

When the EEPROM has been replaced, it takes considerable time to adjust it. Therefore, the data must be preset before entering adjustment.

Preset function of the SW POSI is added. The preset function sets to high 8 bit to 07. HEX, when the DATA SCREEN KEY of SC part is pressed in the SW POSI adjustment mode. The low 8 bit is not varied.

<When the SV-66 Board IC206 is CXP80116-805Q>

If SW POSI adjustment has been done (for example, for mechanism deck replacement), IC206 should be replaced by CXP80116-821Q (8-752-818-67).

⑥ BATTERY DOWN ADJUSTMENT

Adjusted with TEST MODE 0111. When this mode is set, the following display is shown on LCD.

| | | |
|------|-------|------|
| PRE | -1.76 | } ex |
| DOWN | -1.74 | |

Supplying voltage for adjusting is performed with applying 5.50V+0.02V to the battery terminal in the TUNER REC SP MODE. When pressing the CH+ KEY on the KB-10P board, the color of display on the LCD turns to blue for few seconds from white, and then returns to white. The voltage of the battery PRE, DOWN is stored in EEPROM as the 8bit DATA by this operation.

⑦ VIDEO DATA ADJUSTMENT MODE


Short the TEST D (Solder the split land at the lower part of the KB-10P board Q803)

The following display is shown on the LCD.

VIDEO DATA

CFL1 1 (RESET)
 CFL2 1 (DISPLAY)
 NCL1 1 (SLEEP)
 NCL2 1 (NEXT)
 NCLP1 1 (UP)
 NCLP2 1 (CLOCK)

KB-10P BOARD (COMPONENT SIDE)

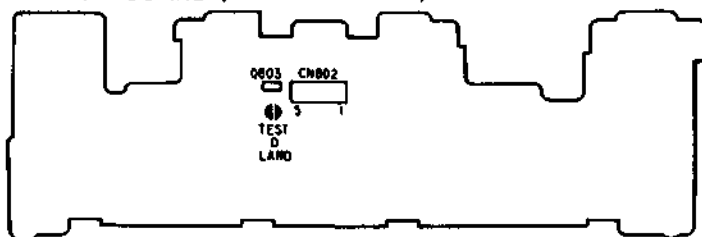

Six types of DATA are varied with the KEY on the SC part.

- RESET → COUNTER RESET KEY
- DISPLAY → DATA SCREEN KEY
- SLEEP → SLEEP KEY
- NEXT → NEXT KEY
- UP → + KEY
- CLOCK → CLOCK SET KEY

Pressing each KEY allows to rewrite DATA. ("0" is rewritten to "L", "1" is rewritten to "H".)

Four modes are adjusted by the types of TAPE (ME, MP) and TAPE SPEED (SP, LP).when the CH+KEY is pressed, the color of the display on the LCD turns to blue for few seconds from white and returns to white. The function to store the screen DATA in EEPROM is added by this operation. (See to the Table 8-2. for the data writing to EEPROM.)

Table 8-2. EE P ROM Write Data

| TEST MODE | | | | | | CFL1 | CFL2 | NCL1 | NCL2 | NCLP1 | NCLP2 |
|-----------|---|---|---|--|-------|------|------|------|------|-------|-------|
| D | C | B | A | Switch position of the test mode set jig | | | | | | | |
| 1 | 0 | 0 | 0 | 8 | SP•MP | H | L | H | L | L | L |
| 1 | 0 | 0 | 1 | 9 | LP•MP | L | H | L | H | H | L |
| 1 | 0 | 1 | 0 | A | SP•ME | H | L | H | L | L | L |
| 1 | 0 | 1 | 1 | B | LP•ME | L | H | L | H | H | L |

Note) When EEPROM is replaced, the following adjustment or write should be performed.

1. SW POSI adjustment
2. BATTERY DOWN adjustment
3. VIDEO DATA write
4. Channel preset

8-2. POWER SOURCE PART ADJUSTMENT

8-2-1. UNREG Power Source Voltage Check (SV-66 board)

| | |
|----------------------|-------------------|
| Mode | Stop (POWER ON) |
| Measuring instrument | Digital voltmeter |
| BL UNREG check | |
| Measurement point | CN007 Pin ② |
| Specified value | $5.9 \pm 0.2Vdc$ |
| DD UNREG check | |
| Measurement point | CN007 Pin ① |
| Specified value | $5.9 \pm 0.2Vdc$ |
| SS UNREG check | |
| Measurement point | CN007 Pin ⑥ |
| Specified value | $5.9 \pm 0.2Vdc$ |
| LD UNREG check | |
| Measurement point | CN007 Pin ③ |
| Specified value | $5.9 \pm 0.2Vdc$ |
| CAP UNREG check | |
| Measurement point | CN007 Pin ① |
| Specified value | $5.9 \pm 0.2Vdc$ |

[Checking method]

- 1) Check that the voltage of the stabilized power source is $6.0 \pm 0.1Vdc$.
- 2) Each specified value should be satisfied.

8-2-2. Switch 5V Adjustment (SV-66 board)

| | |
|----------------------|----------------------------------|
| Mode | Tuner receiver, record (SP mode) |
| Signal | Optional TV broadcast |
| Measurement point | CN009 Pin ④ |
| Measuring instrument | Digital voltmeter |
| Adjustment element | RV401 |
| Specified value | $4.95 \pm 0.05Vdc$ |

[Adjustment Method]

- 1) Adjust with RV401 to $4.95 \pm 0.05Vdc$.

8-2-3. DD Converter Frequency Adjustment (SV-66 board)

| | |
|----------------------|-------------------|
| Mode | Stop (POWER ON) |
| Measurement point | IC401 Pin ① |
| Measuring instrument | Frequency counter |
| Adjustment element | RV402 |
| Specified value | $479 \pm 5kHz$ |

[Adjustment Method]

- 1) Adjust the oscillation frequency to $479 \pm 5Vdc$ with RV402.

8-2-4. -8V Adjustment (TU-126 board)

| | |
|----------------------|-------------------|
| Mode | Stop (POWER ON) |
| Measurement point | CN001 Pin ② |
| Measuring instrument | Digital voltmeter |
| Adjustment element | RV501 |
| Specified value | $-8.0 \pm 0.1Vdc$ |

[Adjustment Method]

- 1) Adjust with RV501 to $-8.0 \pm 0.1Vdc$.

8-2-5. LCD Power Source Voltage Check (RG-22 board)

| | |
|----------------------|--------------------|
| Mode | Stop |
| Measuring instrument | Digital voltmeter |
| +13V check | |
| Measurement point | CN001 Pin ② |
| Specified value | $13.0 \pm 0.7Vdc$ |
| -20V check | |
| Measurement point | CN001 Pin ② |
| Specified value | $-20.0 \pm 1.5Vdc$ |

[Checking Method]

- 1) Each specified value should be satisfied.

8-2-6. CAM UNREG Check (CN-6P board)

| | |
|----------------------|----------------------------|
| Mode | Camera standby |
| Measurement point | CN601 Pin ① |
| Measuring instrument | Digital voltmeter |
| Specified value | $5.75 \pm 0.10 \text{Vdc}$ |

[Connection]

- 1) Connect the CAMERA connector with the camera.
If there is no camera, connect the resistance of 12Ω 5W between CN601 Pin ① and Pin ⑥.

[Checking Method]

- 1) Turn on the power, and input CAMERA with the INPUT SELECT button.
- 2) Check that the voltage of the stabilized power source is $6.0 \pm 0.1 \text{Vdc}$.
- 3) Check that the voltage of the CN601 Pin ① is $5.75 \pm 0.10 \text{Vdc}$.

8-3. SYSTEM CONTROL SYSTEM ADJUSTMENT

8-3-1. Clock Precision Adjustment (SV-66 board)

| | |
|----------------------|------------------------------|
| Mode | Stop (POWER ON) |
| Test mode * | 0011 (Jig switch position 3) |
| Measurement point | CN003 Pin ② |
| Measuring instrument | Frequency counter |
| Adjustment element | CV101 |
| Specified value | $16384.0 \pm 0.2 \text{Hz}$ |

* Refer to [8-1-7. Test mode].

[Adjustment Method]

- 1) Set the test mode * 0011 (jig switch position 3).
- 2) Adjust with CV101 to $16384.0 \pm 0.2 \text{Hz}$.

8-3-2. Battery Down Adjustment

Refer to [8-1-7. Test Mode ⑥ Battery Down Adjustment].

8-4. SERVO SYSTEM ADJUSTMENT

8-4-1. CUE/REV Adjustment (SV-66 board)

| | |
|----------------------|---|
| Mode | CUE and REV |
| Signal | Alignment tape : for checking the SP mode operation (WR5-5CSP) : for checking the LP mode operation (WR5-4CL) |
| Measurement point | IC302 Pin ⑩ and Pin ⑪ and Q306 ③ |
| Measuring instrument | Oscilloscope |
| Adjustment element | RV301 |
| Specified value | WR5-5CSP at CUE/REV Q306 ③ DC voltage level is "H" WR5-4CL at CUE/REV Q306 ③ DC voltage level is "L" |

[Adjustment Method]

- 1) Adjust the IC302 Pin ⑩ to $3.2 \pm 0.1 \text{Vdc}$ with RV301.
- 2) Play back the WR5-5CSP and set the CUE and REV mode, check that the DC voltage level of Q306 ③ is "H" (4Vdc or more). And play back the WR5-4CL and set the CUE and REV mode, check that the DC voltage level of Q306 ③ is "L" (1Vdc or less).
- 3) When the item 2) is not satisfied, play back the WR5-5CSP and set the CUE and REV mode, measure the DC voltage of IC302 Pin ⑩. Set this value as V_{SP} . Play back the WR5-4CL and set the CUE and REV mode, measure the DC voltage of IC302 Pin ⑩. Set this value as V_{LP} .

$$V = \frac{V_{SP} + V_{LP}}{2}$$
 Obtain the value of V, and adjust with RV301 so that the DC voltage of IC302 Pin ⑩ is the value of V.
- 4) Return to the item 2) and reconfirm.

8-4-2. Switching Position Adjustment (RP-105 board)

| | |
|----------------------|---|
| Mode | Playback |
| Test mode * | 0101 (Jig switching position 5) and 0100 (Jig switching position 4) |
| Signal | Alignment tape : for tracking adjustment (WR5-1CP) |
| Measurement point | CH1 : CN503 Pin ④ (RF SW P) CH2 : CN503 Pin ③ (RF OUT) |
| Measuring instrument | Oscilloscope |
| Adjustment KEY | KB-10P board S802 (CH-) and S803 (CH+) |
| Specified value | $t = 0 \pm 10 \mu\text{sec}$ |

* Refer to [8-1-7. Test mode].

[Adjustment Method]

- 1) Set the test mode * 0101 (Jig switching position 5).
- 2) Press the DATA SCREEN button on the upper part of the LCD.
- 3) Press the S802(CH-) and S803(CH+) switches on the KB-10P board so that "t" is nearly 0. (rough adjustment)
- 4) Set the test mode * 0100 (Jig switching position 4).
- 5) Press S802(CH-) and S803 (CH+) switches on the KB-10 board so that $t = 0 \pm 10 \mu\text{sec}$. (fine adjustment)
- 6) Disconnect the test mode jig.

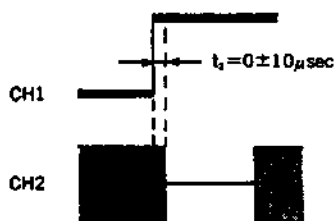


Fig. 8-6.

8-5. VIDEO SYSTEM ADJUSTMENT

Adjust the video system in the following procedures in principle. The color bar signal supplied from the pattern generator is used as the video input signal for the video system adjustment of the recording mode. Check that the synchronous signal and the color burst signal are satisfied with the specified value designated to the adjusting setup as shown in the figure 8-2.

[Adjustment Procedures]

- 1) Playback frequency characteristic adjustment
- 2) fsc check
- 3) SYNC AGC adjustment
- 4) IR adjustment
- 5) Y/C separation adjustment
- 6) Emphasis Y level adjustment
- 7) De-emphasis Y level adjustment
- 8) Playback Y level adjustment
- 9) Playback V level adjustment
- 10) Y FM carrier adjustment
- 11) Y FM deviation adjustment
- 12) Recording Y level adjustment
- 13) Chroma emphasis adjustment
- 14) Recording chroma level adjustment

8-5-1. Playback Frequency Characteristic Adjustment (RP-105 board)

| | |
|----------------------|--|
| Mode | Playback |
| Signal | Alignment tape : for frequency characteristic adjustment(WR5-6C) |
| Measurement point | CH1 : CN503 Pin ④(RF SWP) CH2 : CN503 Pin ③(PB RF) |
| Measuring instrument | Oscilloscope |
| Adjustment element | PB1-CH : RV501 PB2-CH : RV502 |
| Specified value | 3.5MHz level : 5.5MHz level = 4 : 3 |

[Adjustment Method]

- 1) Adjust with each RV so that the PB1-CH, PB2-CH and PB RF OUT satisfy the specified value.

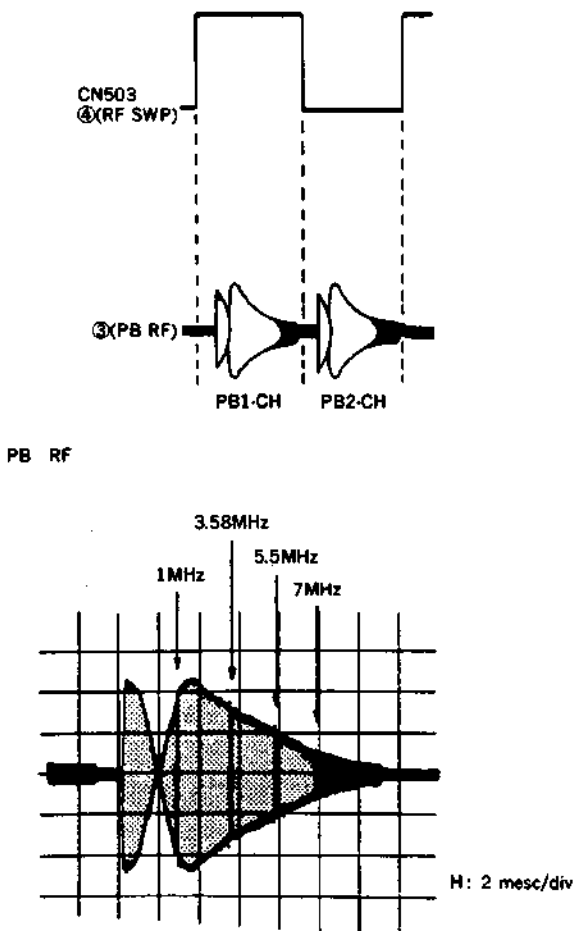


Fig. 8-7

8-5-2. fsc Check (SV-66 board)

| | |
|----------------------|---|
| Mode | Playback |
| Signal | Alignment tape : for operation check(WR5-5CSP) Color bar part |
| Measurement point | IC701 Pin ② |
| Measuring instrument | Oscilloscope Frequency counter |
| Specified value | Oscillation frequency : $4433619 \pm 150\text{Hz}$ Output level : $400 \pm 50\text{mVp-p}$ |

[Checking Method]

- 1) Check that the oscillation frequency of the IC701 Pin ② is $4433619 \pm 150\text{Hz}$ and the output level is $400 \pm 50\text{mVp-p}$.



Fig. 8-8.

8-5-3. SYNC AGC Adjustment (SV-66 board)

| | |
|----------------------|----------------------------|
| Mode | Recording |
| Signal | Color bar |
| Measurement point | IC601 Pin ② |
| Measuring instrument | Oscilloscope |
| Adjustment element | RV771 |
| Specified value | $0.50 \pm 0.02\text{Vp-p}$ |

[Adjustment Method]

- 1) Adjust with RV771 to $0.50 \pm 0.02\text{Vp-p}$.

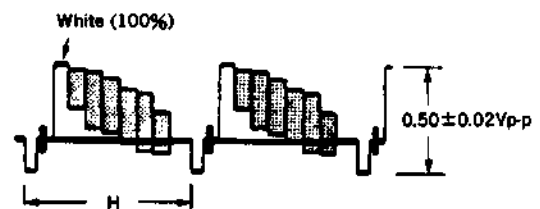


Fig. 8-9.

8-5-4. IR Adjustment (SV-66 board)

| | |
|----------------------|---|
| Mode | Recording |
| Signal | Color bar |
| Measurement point | IC601 Pin ⑦ |
| Measuring instrument | Oscilloscope |
| Adjustment element | RV601 |
| Specified value | Minimize the red remaining chroma element (60mVp-p or less) |

[Preparation]

- 1) Short with the jumper wire between the Pin ④ and Pin ⑤ of IC601.

[Adjustment Method]

- 1) Minimize the red remaining chroma element with RV601. (60mVp-p)
- 2) After the adjustment, disconnect the jumper wire.

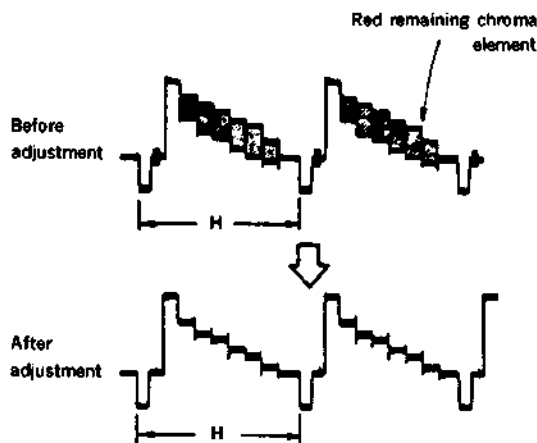


Fig.8-10.

8-5-5. Y/C Separation Adjustment (SV-66 board)

| | |
|----------------------|---|
| Mode | Recording |
| Signal | Color bar |
| Measurement point | IC601 Pin ⑩ |
| Measuring instrument | Oscilloscope |
| Adjustment element | RV602, RV651 (alternate adjustment) |
| Specified value | Minimize the red remaining chroma element (30mVp-p or less) |

[Adjustment Method]

- 1) Adjust RV602 and RV651 alternately, and minimize the red remaining chroma element.

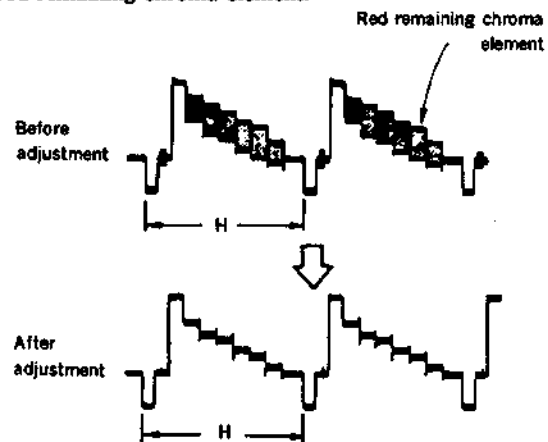


Fig.8-11.

8-5-6. Emphasis Y Level Adjustment (SV-66 board)

| | |
|----------------------|------------------------|
| Mode | Recording |
| Signal | Color bar |
| Measurement point | IC601 Pin ③ |
| Measuring instrument | Oscilloscope |
| Adjustment element | RV652 |
| Specified value | $0.50 \pm 0.02V_{p-p}$ |

[Adjustment Method]

- 1) Adjust with RV652 to $0.50 \pm 0.02V_{p-p}$.

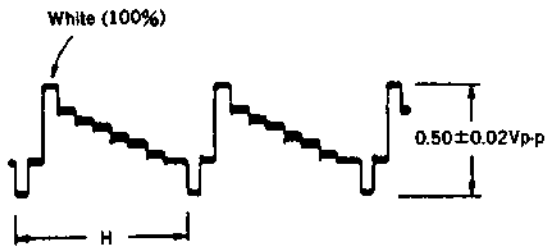


Fig.8-12.

8-5-7. De-emphasis Y Level Adjustment (SV-66 board)

| | |
|----------------------|--|
| Mode | Playback |
| Signal | Alignment tape: for operation check (WR5-5CSP) |
| Measurement point | IC601 Pin ② |
| Measuring instrument | Oscilloscope |
| Adjustment element | RV605 |
| Specified value | $0.50 \pm 0.02V_{p-p}$ |

[Adjustment Method]

- 1) Adjust with RV605 to $0.50 \pm 0.02V_{p-p}$.

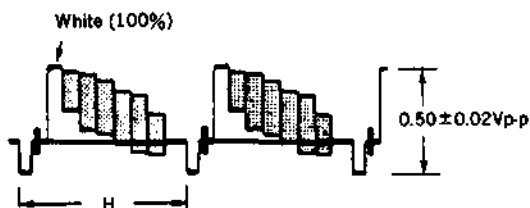


Fig.8-13.

8-5-8. Playback Y Level Adjustment (SV-66 board)

| | |
|----------------------|---|
| Mode | Playback |
| Signal | Alignment tape: for operation check (WR5-5CSP) color bar part |
| Measurement point | IC601 Pin ③ |
| Measuring instrument | Oscilloscope |
| Adjustment element | RV653 |
| Specified value | $0.50 \pm 0.02V_{p-p}$ |

[Adjustment Method]

- 1) Adjust with RV653 to $0.50 \pm 0.02V_{p-p}$.

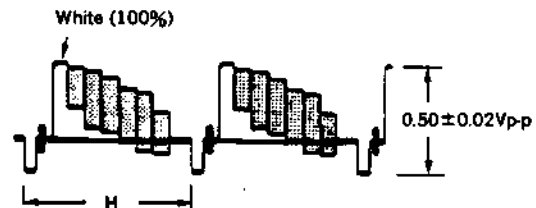


Fig.8-14.

8-5-9. Playback V Level Adjustment (SV-66 board)

| | |
|----------------------|---|
| Mode | Playback |
| Signal | Alignment tape: for operation check (WR5-5CSP) color bar part |
| Measurement point | IC601 Pin ③ |
| Measuring instrument | Oscilloscope |
| Adjustment element | RV772 |
| Specified value | $1.00 \pm 0.05V_{p-p}$ |

[Adjustment Method]

- 1) Adjust with RV772 to $1.00 \pm 0.05V_{p-p}$.

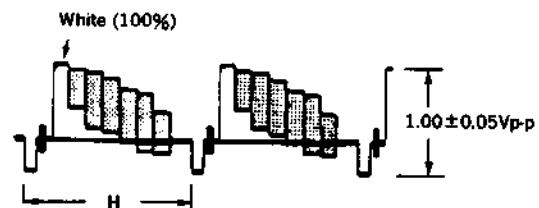


Fig.8-15.

8-5-10. Y FM Carrier Adjustment (SV-66 board)

| | |
|----------------------|---------------------------|
| Mode | Recording |
| Signal | No signal |
| Measurement point | CN801 Pin ⑩ |
| Measuring instrument | Frequency counter |
| Adjustment element | RV603 |
| Specified value | $4.37 \pm 0.02\text{MHz}$ |

[Adjustment Method]

- 1) Adjust with RV603 to $4.37 \pm 0.02\text{MHz}$.
- 2) After the adjustment, be sure to perform [Y FM deviation adjustment].

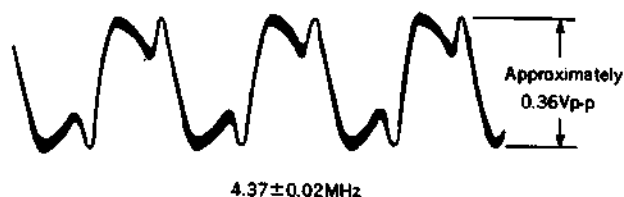


Fig.8-16.

8-5-11. Y FM Deviation Adjustment (SV-66 board)

| | |
|----------------------|--|
| Mode | Recording and playback |
| Signal | Color bar |
| Measurement point | VIDEO input-output terminal (75Ω terminal) |
| Measuring instrument | Oscilloscope |
| Adjustment element | RV604 |
| Specified value | Playback level is $1.00 \pm 0.05\text{Vp-p}$ |

Note) [De-emphasis Y level adjustment], [Playback Y level adjustment] and [Y FM carrier adjustment] should be completed.

[Adjustment Method]

- 1) Record the color bar signal.
- 2) Play back the recorded signal.
- 3) Check the playback output.
Specified value : $1.00 \pm 0.05\text{Vp-p}$
- 4) When the specified value is not satisfied, rotate RV604 as shown in the following table and return to the item 1), and then perform the reconfirmation.

| | |
|---------------------------|-----------------------------|
| | Rotating direction of RV604 |
| Over the specified value | Clockwise (↻) |
| Under the specified value | Counterclockwise (↺) |

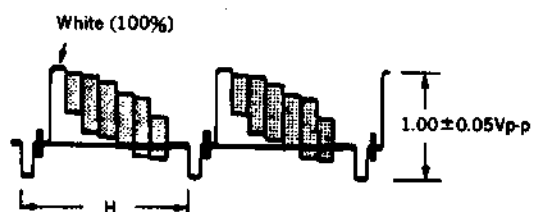


Fig.8-17

8-5-12. Recording Y Level Adjustment (SV-66 board)

| | |
|----------------------|------------------------------------|
| Mode | Recording |
| Signal | No signal |
| Measurement point | CN801 Pin ⑩ |
| Measuring instrument | Oscilloscope (20MHz band limit ON) |
| Adjustment element | RV802 |
| Specified value | $360 \pm 5\text{mV}$ |

[Adjustment Method]

- 1) Adjust with RV802 to $360 \pm 5\text{mV}$.

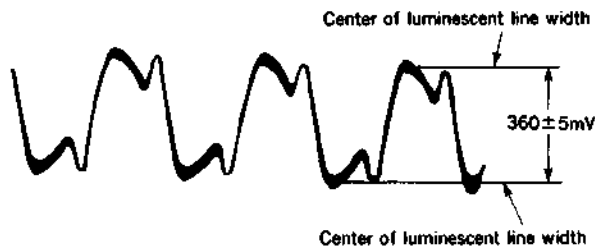


Fig.8-18.

8-5-13. Chroma Emphasis Adjustment (SV-66 board)

| | |
|----------------------|------------------------|
| Mode | Recording |
| Signal | Color bar |
| Measurement point | IC701 Pin ② |
| Measuring instrument | Oscilloscope |
| Adjustment element | FL702 |
| Specified value | Minimize the red level |

[Preparation]

- 1) Connect the resistance of $3.3\text{k}\Omega$ between the IC701 Pin ② and GND.

[Adjustment Method]

- 1) Minimize the red level with FL702.
- 2) After the adjustment, disconnect the resistance connected in the preparation.

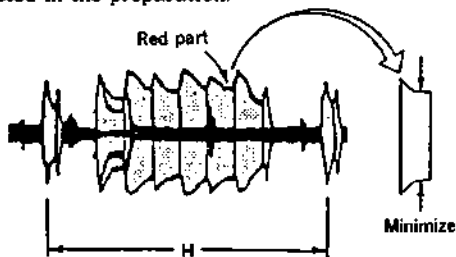


Fig.8-19.

8-5-14. Recording Chroma Level Adjustment (SV-66 board)

| | |
|----------------------|--------------------------------------|
| Mode | Recording |
| Signal | Color bar |
| Measurement point | CN801 Pin ⑩ |
| Measuring instrument | Oscilloscope |
| Adjustment element | RV701 |
| Specified value | Red level : $160 \pm 10\text{mVp-p}$ |

[Adjustment Method]

- 1) Adjust the red level to $160 \pm 10\text{mVp-p}$ with RV701.




Fig.8-20.

8-6. LCD SYSTEM ADJUSTMENT

Caution: If you touch the back light holder, you may receive an electric shock. Be careful to perform the adjustment.

[Preparation]

- 1) The adjustment except for [white balance adjustment] and [V COM DC adjustment], the back light unit is not required. Remove it and perform the adjustment.
- 2) Set the VR as follows if there is no special direction.
 - BRIGHT (RV004)
 -Set the mechanical center position and short among pin ①, ② and ③.

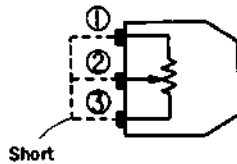

• COLOR (RV001)

.....The position where the voltage of IC002 ⑤ of the RG-22 board is $1.5 \pm 0.1Vdc$.

[Video input signal for adjustment]

Input the color bar signal, which the chroma signal and the burst signal are turned off, to the video input terminal as a video input signal for adjustment. Check with the CN001 pin ② of the RG-22 board.

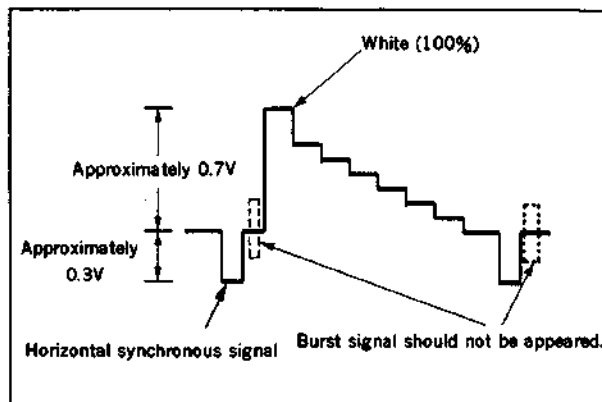


Fig.8-21. Color bar signal which the chroma signal and the burst signal are turned off

8-6-1. Contrast Adjustment (RG-22 board)

| | |
|----------------------|--|
| Mode | POWER ON |
| Signal | Color bar which the chroma signal and the burst signal are turned off. |
| Measurement point | CN002 Pin ⑨ |
| Measuring instrument | Oscilloscope |
| Adjustment element | RV006 |
| Specified value | $3.0 \pm 0.1V$ |

[Adjustment Method]

- 1) Adjust with RV006 so that the voltage between white (100%) and the pedestal is $3.0 \pm 0.1V$.

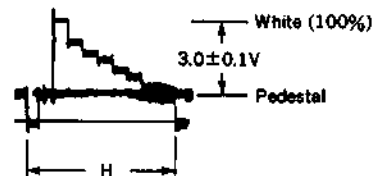


Fig.8-22.

8-6-2. R Gain Adjustment (RG-22 board)

| | |
|----------------------|---|
| Mode | POWER ON |
| Signal | Color bar which the chroma signal and the burst signal are turned off |
| Measurement point | CN002 Pin ⑩ |
| Measuring instrument | Oscilloscope |
| Adjustment element | RV005 |
| Specified value | $3.0 \pm 0.1V$ |

[Adjustment Method]

- 1) Adjust with RV005 so that the voltage between white (100%) and the pedestal is $3.0 \pm 0.1V$.

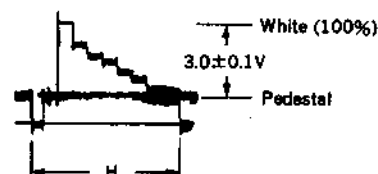


Fig. 8-23.

8-6-3. B Gain Adjustment (RG-22 board)

| | |
|----------------------|---|
| Mode | POWER ON |
| Signal | Color bar which the chroma signal and the burst signal are turned off |
| Measurement point | CN002 Pin ⑩ |
| Measuring instrument | Oscilloscope |
| Adjustment element | RV003 |
| Specified value | $2.6 \pm 0.1V$ |

[Adjustment Method]

- 1) Adjust with RV003 so that the voltage between white (100%) and the pedestal is $2.6 \pm 0.1V$.

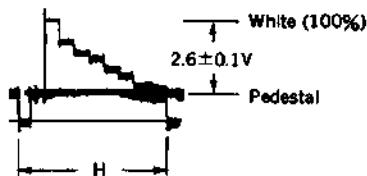


Fig. 8-24.

8-6-4. Sub Bright Adjustment (RG-22 board)

| | |
|----------------------|---|
| Mode | POWER ON |
| Signal | Color bar which the chroma signal and the burst signal are turned off |
| Measurement point | CN002 Pin ⑨, Pin ⑩ and Pin ⑪ (G) (R) (B) |
| Measuring instrument | Oscilloscope (DC range) |
| Adjustment element | RV010, RV007 and RV008 |
| Specified value | $-3.4 \pm 0.1V$ |

[Connection]

- 1) Install the LCD unit and perform the adjustment.

[Adjustment Method]

- 1) Adjust with RV009 so that the DC level of the pedestal part of the positive polarity G signal is $-3.4 \pm 0.1Vdc$.
- 2) Adjust with RV007 so that the DC level of the pedestal part of the positive polarity R signal is $-3.4 \pm 0.1Vdc$.
- 3) Adjust with RV008 so that the DC level of the pedestal part of the positive polarity B signal is $-3.4 \pm 0.1Vdc$.

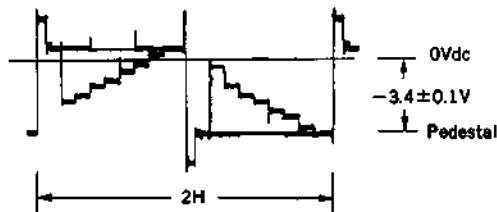


Fig.8-25.

8-6-5. fsc Adjustment (RG-22 board)

| | |
|----------------------|--|
| Mode | POWER ON |
| Signal | Video signal which the chroma signal, the burst signal and the Y signal are turned off.(Video signal with only synchronous signal) |
| Measurement point | IC002 Pin ④ |
| Measuring instrument | Frequency counter |
| Adjustment element | CV002 |
| Specified value | $4433619 \pm 300Hz$ |

Note: Connect the frequency counter through the buffer amplifier (oscilloscope, etc) with high impedance ($1M\Omega$ or more) and low capacity.

[Adjustment Method]

- 1) Adjust with CV002 so that the fsc frequency is $4433619 \pm 300Hz$.

8-6-6. White Balance Adjustment (RG-22 board)

| | |
|----------------------|--|
| Mode | POWER ON |
| Signal | Color bar which the chroma signal and the burst signal are turned off. |
| Measurement point | Check on the LCD screen |
| Measuring instrument | |
| Adjustment element | RV003 (B gain) RV005 (R gain) |
| Specified value | Screen should not be colored. |

[Connection]

- 1) Perform the adjustment connecting the LCD unit and the back light.

[Adjustment Method]

- 1) Check that the LCD screen is not colored. If the screen is colored, adjust with RV003 (B gain) and RV005 (R gain).

8-6-7. V COM DC Adjustment (RG-22 board)

| | |
|----------------------|---|
| Mode | POWER ON |
| Signal | Color bar which the chroma signal and the burst signal are turned off |
| Measurement point | LCD screen |
| Measuring instrument | Oscilloscope |
| Adjustment element | V COM DC VR on the LCD unit |
| Specified value | The amplitude of the flicker waveform is the minimum. |

Note : Perform the [V COM DC adjustment] with assembling the LCD block.

Take care that the external light should not enter into the light receiving part of the COMMON voltage adjustment jig.

[Adjustment Method]

- 1) Expose the light receiving part of the COMMON voltage adjustment jig to the LCD screen. (Point down the LCD screen not to receive the external light.)
- 2) Connect the oscilloscope with the COMMON voltage adjustment jig.
- 3) Turn V COM DC VR and check that the flicker waveform as shown in the fig.8-26 is output.
(When the flicker waveform is not output, check the exposing method of the light receiving part and the external light condition, and check with turning the BRIGHT control.)
- 4) Minimize the flicker waveform amplitude with V COM DC VR.

Note : Turn V COM DC VR slowly because it takes long time to respond to LCD.

The minimum point of the flicker waveform amplitude is nearly coincided with the maximum point of the contrast.

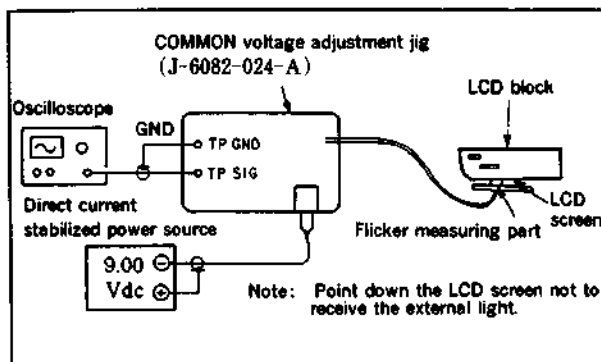


Fig.8-26



Fig.8-27.

8-6-8. Character Position Adjustment (RG-22 board)

| | |
|----------------------|------------|
| Mode | POWER ON |
| Signal | Color bar |
| Measurement point | LCD screen |
| Measuring instrument | |
| Adjustment element | CV801 |
| Specified value | Fig.8-28. |

[Adjustment Method]

- 1) Press the CLOCK SET button of the LCD block and check that black frame and "0 : 00" display on the LCD screen.
- 2) Make black frame on the right end of the LCD screen with CV801 and adjust so that it disappears.
- 3) Press twice the NEXT button of the LCD block and turn off the black frame on the LCD screen. (It takes approximately five seconds to turn off the frame.)

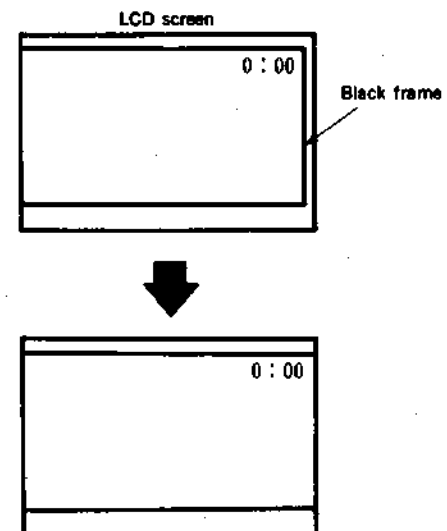


Fig.8-28.

8-7. TUNER SYSTEM ADJUSTMENT

8-7-1. RF AGC Adjustment (TU-126 board)

| | |
|--------------------|---------------------|
| Mode | E-E |
| Signal | Broadcast TV signal |
| Adjustment element | RV201 |

[Adjustment Method]

- 1) Connect the monitor TV.
- 2) Adjust the monitor TV to the most proper contrast and receive the broadcast TV signal.
- 3) Turn RV201 to show the snow noise.
- 4) Turn RV201 in the reverse direction, and set to the point that the snow noise disappears.
- 5) Receive each channel and check that there is no beat by the cross modulation, picture distortion and snow noise.

8-8. AUDIO SYSTEM ADJUSTMENT

- Adjust using the color bar signal as the video signal input.

[Connection of the measuring instruments for audio]

Connect the audio system measuring instruments as shown in the following figure as well as the video system measuring instruments. Set the power switch to the [VTR] side if there is no special direction.

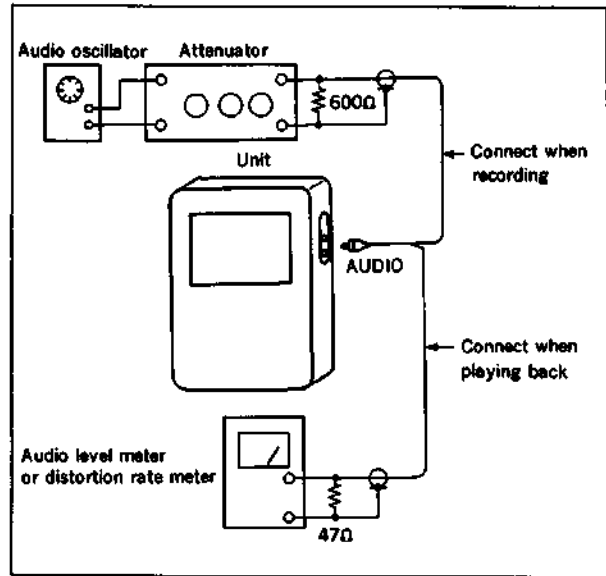


Fig.8-29.

[VIDEO/AUDIO terminal of the unit]

The VIDEO and AUDIO terminal has a function both input and output. The operation as the input terminal or as the output terminal is automatically selected according to the operation mode of the unit.

When connecting with other instruments, perform according to input-output of the terminal.

Operation mode of the unit and the input-output automatic selection of the terminal

| Input mode selected with the INPUT SELECT button | The case that the unit is stopped or the recording mode is set | The case that the unit is set to the playback mode |
|--|--|--|
| TUNER (Television screen) | Output | Output |
| LINE* | Input | Output |
| CAMERA | Output | Output |

* When the LINE is selected with the INPUT SELECT button, the display of INPUT and OUTPUT is shown.

[Setting of the switches]

Set the following mode if there is no special direction.

- SP/LP buttonSP
- INPUT SELECT buttonLINE

[Adjustment Procedures]

- 1.5MHz carrier frequency adjustment
- E-E output level check
- 1.5MHz carrier level check
- 1.5MHz deviation adjustment
- Total level characteristic check
- Total distortion rate check

8-8-1. 1.5MHz Carrier Frequency Adjustment (AU-93 board)

| | |
|----------------------|-------------------|
| Mode | Recording |
| Signal | No signal |
| Measurement point | CN002 Pin ③ |
| Measuring instrument | Frequency counter |
| Adjustment element | RV002 |
| Specified value | 1.500±0.002MHz |

Note : Use the 10 : 1 probe for connecting the frequency counter.

[Adjustment Method]

- 1) Adjust with RV002 to 1.500±0.002MHz.

8-8-2. E-E Output Level Check

| | |
|----------------------|---|
| Mode | Camera recording |
| Signal | CN-6P board J601 Pin ⑤ 400Hz, -15dBs |
| Measurement point | AUDIO Input-output terminal |
| Measuring instrument | Audio level meter |
| Specified value | -7.5±2dBs |

[Checking Method]

- 1) Check that the 400Hz signal is -7.5±2dBs.

8-8-3. 1.5MHz Carrier Level Check (AU-93 board)

| | |
|----------------------|------------------------------------|
| Mode | Recording |
| Signal | No signal (Insert a shorting plug) |
| Measurement point | CN002 Pin ③ |
| Measuring instrument | Oscilloscope |
| Specified value | 120±30mVp-p |

[Checking Method]

- 1) Check that the 1.5MHz REC AFM RF signal level is 120±30mVp-p. (Read the center level of the luminescent width.)

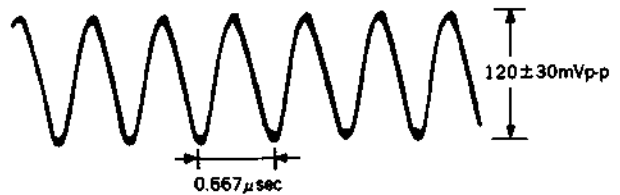


Fig.8-30.

8-8-4. 1.5MHz Deviation Adjustment (AU-93 board)

| | |
|----------------------|--|
| Mode | Playback |
| Signal | Alignment tape: for operation check (WR5-4CSP) |
| Measurement point | CN001 Pin ⑤ |
| Measuring instrument | Oscilloscope |
| Adjustment element | RV003 |
| Specified value | 925±21mVp-p (-7.5±0.2dBs) |

[Adjustment Method]

- 1) Adjust with RV003 so that the 400Hz signal level is 925±21mVp-p.

8-8-5. Total Level Characteristic Check

| | |
|----------------------|---|
| Mode | Self playback |
| Signal | 400Hz, -7.5dBs AUDIO input-output terminal |
| Measurement point | AUDIO input-output terminal |
| Measuring instrument | Audio level meter |
| Specified value | Signal level: -7.5 ± 2 dBs |

[Checking Method]

- 1) Record the signal.
- 2) Connect the audio level meter to the AUDIO input-output terminal.
- 3) Play back the recorded part and check that the output signal level is -7.5 ± 2 dBs.

8-8-6. Total Distortion Rate Check

| | |
|----------------------|-----------------------------|
| Mode | Self playback |
| Signal | 400Hz, -7.5dBs |
| Measurement point | AUDIO input-output terminal |
| Measuring instrument | Distortion Rate Meter |
| Specified value | 1.2% or less |

[Checking Method]

- 1) Record the signal.
- 2) Connect the distortion rate meter to the AUDIO input-output terminal.
- 3) Play back the recorded part and check that the distortion rate is 1.2% or less.

8-9. SECAM-PAL CONVERSION SYSTEM ADJUSTMENT

[Set-up at the adjustment]

As the video signal obtained from the SECAM pattern generator is used as the adjustment signal for adjusting, it is required that the video output signal satisfies the specified value. Connect the pattern generator and the oscilloscope with the VIDEO input-output terminal. Check that the amplitude of the synchronous signal of the video signal is approximately 0.3V, the amplitude of the picture part is approximately 0.7V, the amplitude of the burst signal is flat.

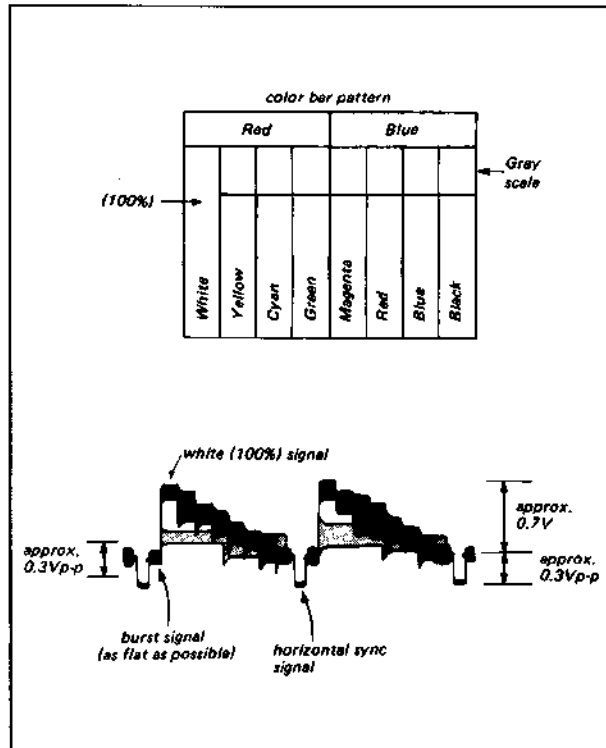


Fig. 8-31.

8-9-1. Bell Filter Adjustment (AU-93 board)

| | |
|----------------------|---|
| Mode | E-E (LINE IN) |
| Signal | SECAM color bar |
| Measurement point | IC301 Pin ② |
| Measuring instrument | Oscilloscope |
| Adjustment element | LV304 |
| Specified value | The level difference is $0 \pm 20\text{mV}$. |

[Adjustment Method]

- 1) Adjust with LV304 so that the level difference is $0 \pm 20\text{mV}$.

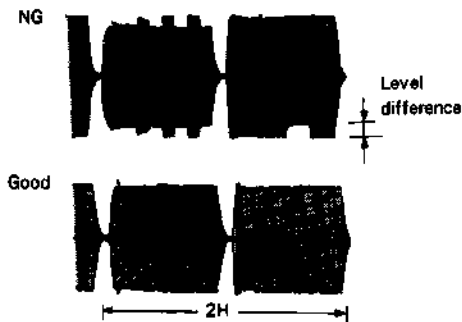


Fig. 8-32.

8-9-2. VCO Adjustment (AU-93 board)

| | |
|----------------------|-------------------------|
| Mode | E-E (LINE IN) |
| Signal | SECAM color bar |
| Measurement point | IC301 Pin ⑨ |
| Measuring instrument | Frequency counter |
| Adjustment element | RV303 |
| Specified value | $15625 \pm 10\text{Hz}$ |

[Preparation]

- 1) Short with the jumper wire between the pin ⑬ and pin ⑭ of IC301.

[Adjustment Method]

- 1) Adjust with RV303 to $15625 \pm 10\text{Hz}$.
- 2) After the adjustment, disconnect the jumper wire.

8-9-3. I REF Adjustment (AU-93 board)

| | |
|----------------------|--------------------------------------|
| Mode | E-E (LINE IN) |
| Signal | SECAM color bar |
| Measurement point | CH1: CN001 Pin ② CH2: IC301 Pin ⑨ |
| Measuring instrument | Oscilloscope |
| Adjustment element | RV301 |
| Specified value | $t = 4.5 \pm 0.1\mu\text{sec}$ |

[Adjustment Method]

- 1) Adjust with RV301 so that $t = 4.5 \pm 0.1\mu\text{sec}$.

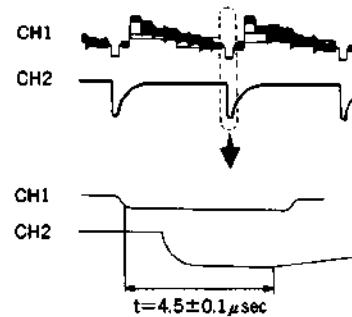


Fig. 8-33.

8-9-4. R-Y fo Adjustment (AU-93 board)

| | |
|----------------------|--|
| Mode | E-E (LINE IN) |
| Signal | SECAM color bar |
| Measurement point | IC302 Pin ② |
| Measuring instrument | Oscilloscope |
| Adjustment element | LV302 |
| Specified value | The level difference is $0 \pm 0.02\text{V}$. |

[Preparation]

- 1) Short with the jumper wire between the pin ⑬ and ⑭ of IC301.

[Adjustment Method]

- 1) Adjust with LV302 so that the level difference between the blank level and the black level is $0 \pm 0.02\text{V}$.

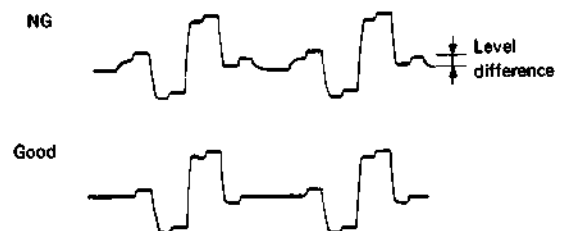


Fig. 8-34.

8-9-5. B-Y fo Adjustment (AU-93 board)

| | |
|----------------------|---|
| Mode | E-E (LINE IN) |
| Signal | SECAM color bar |
| Measurement point | IC302 Pin ③ |
| Measuring instrument | Oscilloscope |
| Adjustment element | LV301 |
| Specified value | The level difference is $0 \pm 0.02V$. |

[Preparation]

- 1) Short with the jumper wire between the pin ① and ② of IC301.

[Adjustment Method]

- 1) Adjust with LV301 so that the level difference between the blank level and the black level is $0 \pm 0.02V$.

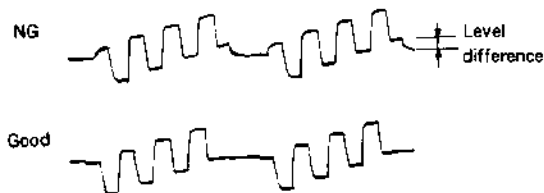


Fig. 8-35.

8-9-6. B-Y Chroma Level Adjustment (AU-93 board)

| | |
|----------------------|------------------------|
| Mode | E-E (LINE IN) |
| Signal | SECAM color bar |
| Measurement point | IC302 Pin ③ |
| Measuring instrument | Oscilloscope |
| Adjustment element | RV302 |
| Specified value | $0.75 \pm 0.05V_{p-p}$ |

[Preparation]

- 1) Short the jumper wire between the pin ① and ② of IC301.

[Adjustment Method]

- 1) Adjust with RV302 to $0.75 \pm 0.05V_{p-p}$.
- 2) After the adjustment, disconnect the jumper wire.



Fig. 8-36.

8-9-7. Burst Position Check (AU-93 board)

| | |
|----------------------|---|
| Mode | E-E (LINE IN) |
| Signal | SECAM color bar |
| Measurement point | CH1 : Q306 emitter CH2 : IC302 Pin ⑩ |
| Measuring instrument | Oscilloscope |
| Specified value | $t = 5.6 \pm 0.1\mu\text{sec}$ |

[Checking Method]

- 1) Check that $t = 5.6 \pm 0.1\mu\text{sec}$.

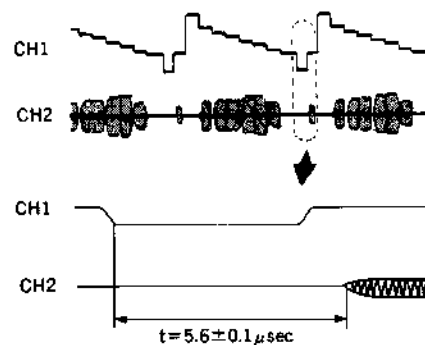


Fig. 8-37.

8-9-8. PAL/SECAM Discrimination Check (1) (AU-93 board)

| | |
|----------------------|-------------------|
| Mode | E-E (LINE IN) |
| Signal | SECAM color bar |
| Measurement point | CN001 Pin ⑦ |
| Measuring instrument | Digital voltmeter |
| Specified value | Less than 0.3Vdc. |

[Checking Method]

- 1) Check that the DC level is less than 0.3V.

8-9-9. PAL/SECAM Discrimination Check (2) (AU-93 board)

| | |
|----------------------|-------------------|
| Mode | E-E (LINE IN) |
| Signal | PAL color bar |
| Measurement point | CN001 Pin ⑦ |
| Measuring instrument | Digital voltmeter |
| Specified value | More than 4.0Vdc. |


[Checking Method]

- 1) Check that the DC level is more than 4.0V.


8-10. ADJUSTING PARTS LOCATION DIAGRAM

SV-66 BOARD
(COMPONENT SIDE)

*: Indicates an adjustment element mounted on the conductor side.

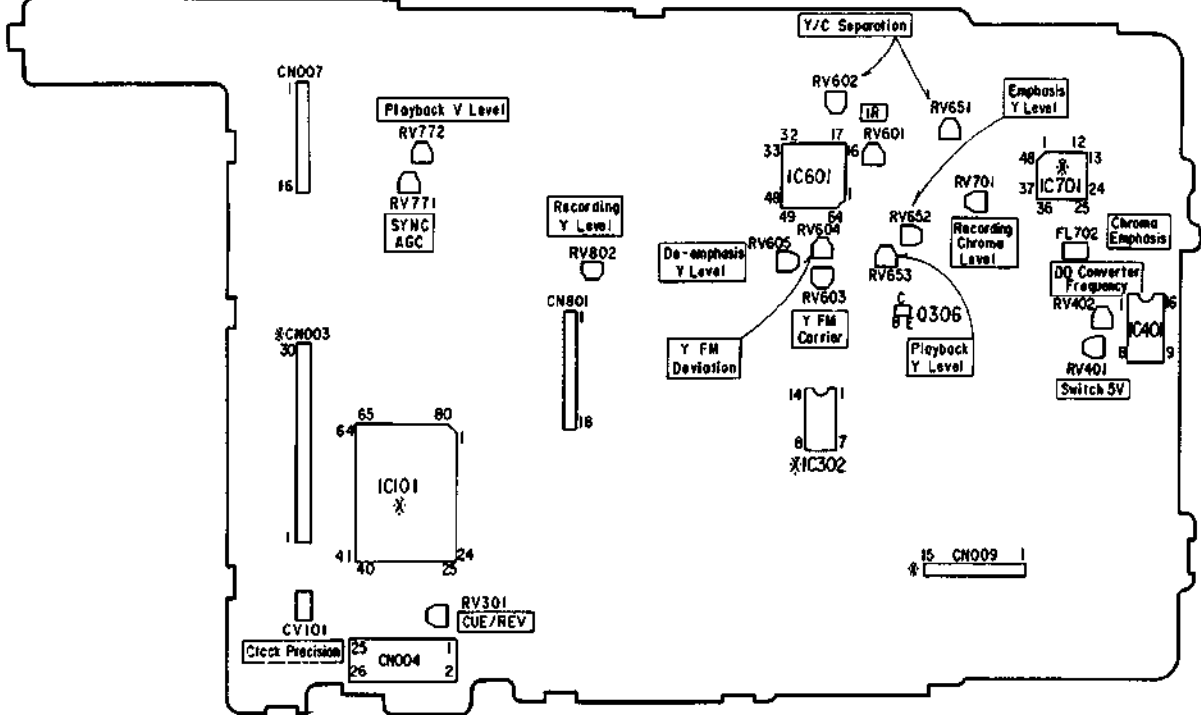


RG-22 BOARD
(COMPONENT SIDE)

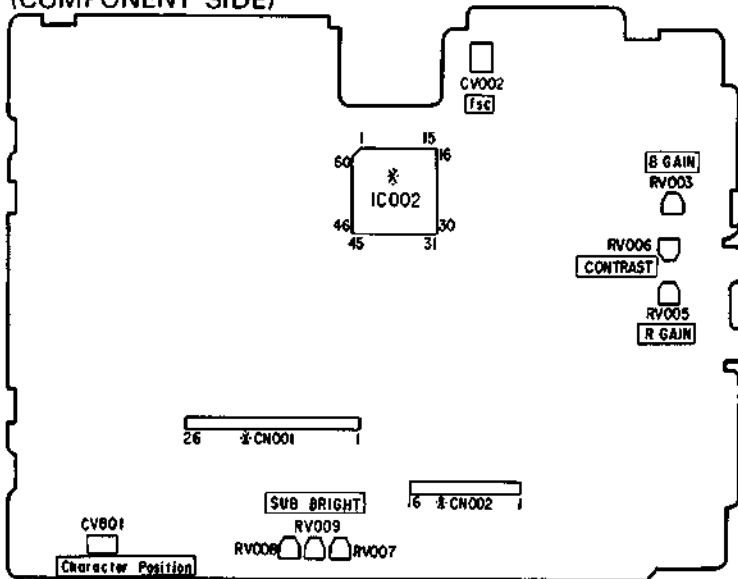


*: Indicates an adjustment element mounted on the conductor side.

RP-105 BOARD
(COMPONENT SIDE)

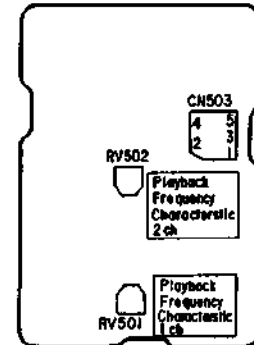


**AU-93 BOARD
(COMPONENT SIDE)**

*: Indicates a adjustment element mounted the conductor side.

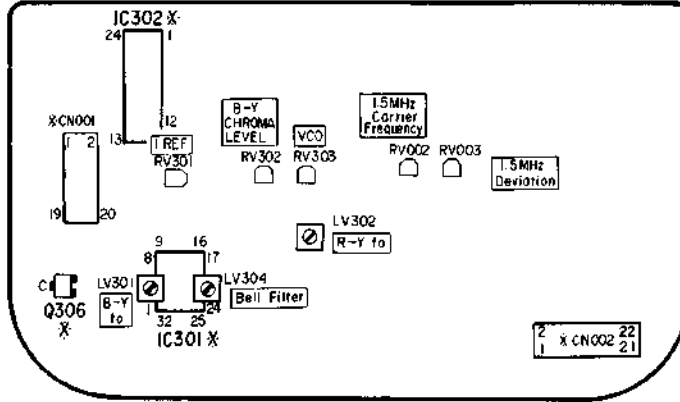

TU-126 BOARD (COMPONENT SIDE)

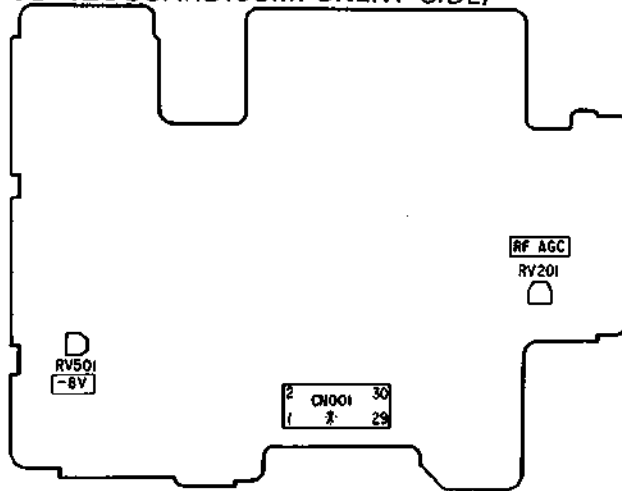

*: Indicates a adjustment element mounted on the conductor side.

**CN-6P BOARD
(COMPONENT SIDE)**

