


ICF-8900

2904

UK Model
AEP Model

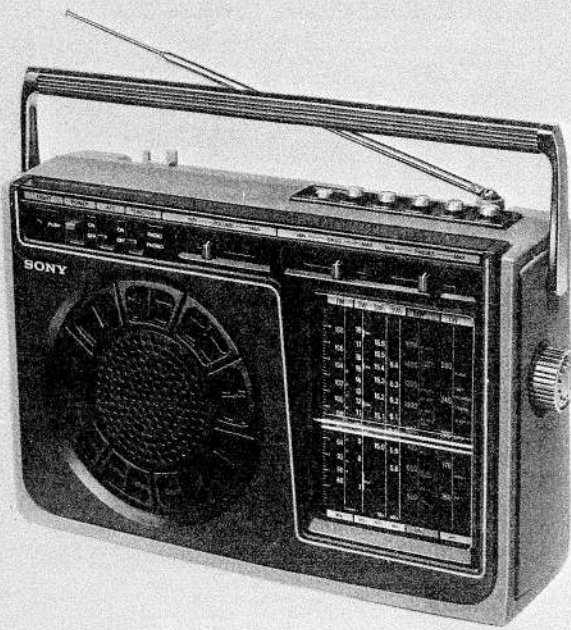


FM-LW-MW-SW 6-BAND PORTABLE RADIO

SPECIFICATIONS


Semiconductors:	6 transistors, 2 ICs
Antennas:	FM/SW1, SW2, SW3: telescopic antenna and EXT ANT contact MW/LW: ferrite bar antenna
Frequency Ranges:	FM: 87.5 – 108 MHz (3.43 – 2.78 m) MW: 530 – 1605 kHz (566 – 187 m) LW: 150 – 285 kHz (2,000 – 1,052 m) SW1: 7 – 18 MHz (16 – 41 m) SW2: 15.0 – 15.6 MHz (19 m Band) SW3: 5.8 – 6.4 MHz (49 m Band)
Intermediate Frequencies:	FM: 10.7 MHz AM: 468 kHz
Power Output:	1.9 W at 10% distortion
Current Drain:	30 mA at no signal
Power Requirements:	AC: 110 V, 127 V, 220 V, 240 V DC: 9 V Battery size-D, 6 pcs.
Weight:	3.0 kg (6 lb 10 oz) with batteries
Dimensions:	341 (w) x 220 (h) x 100 (d) mm 13½ (w) x 8¾ (h) x 4 (d) inches

SONY
SERVICE MANUAL

1. BLOCK DIAGRAM

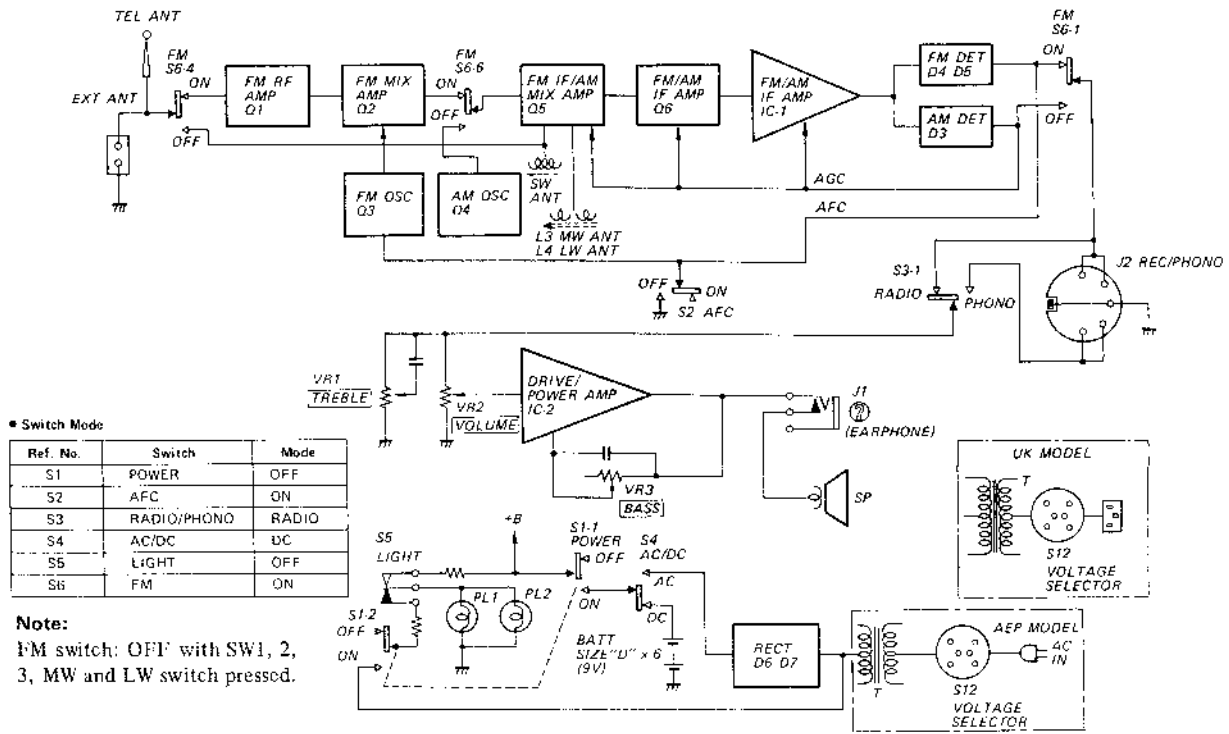

2. INTERNAL VIEW

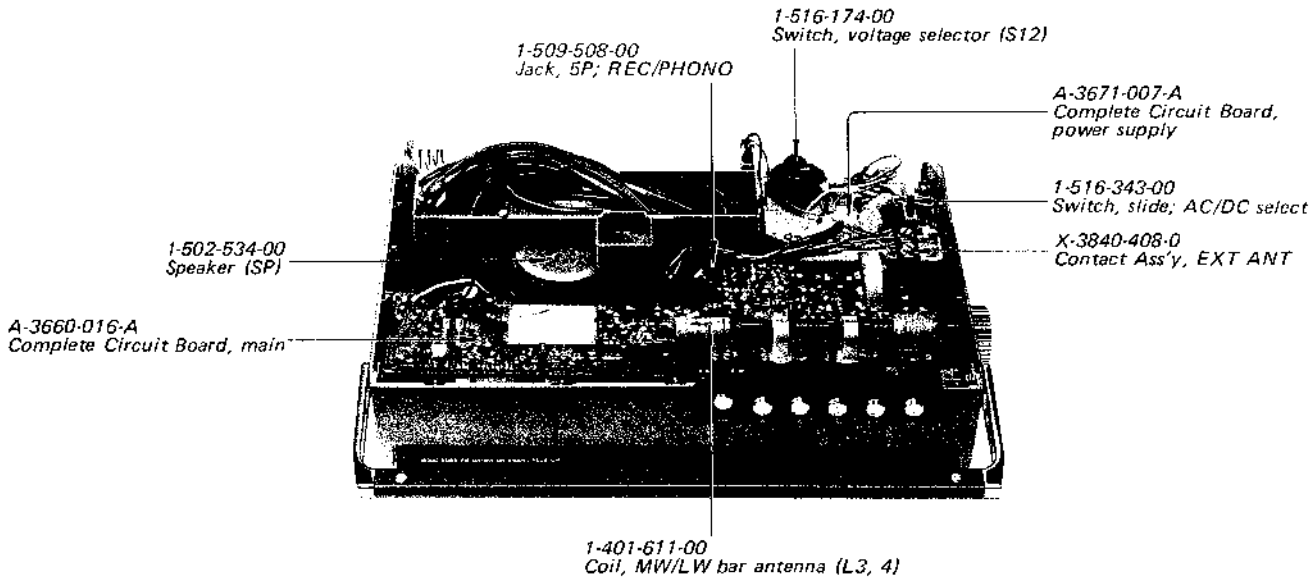

Photograph: AEP Model

3. DISASSEMBLY

Rear Case Removal
Remove five screws. $\oplus P 3 \times 42$, self-tapping

Photograph: UK Model

Front Panel Removal

① Remove three knobs.
② Remove the front panel.

Switch Circuit Board Removal

Remove the switch circuit board.
Switch circuit board
①
② Pull the switch circuit board a little.
 $\oplus B 3 \times 8$, self-tapping

Main Circuit Board Removal

① $\oplus B 3 \times 8$, self-tapping
W3, fiber
② Lift up the main circuit board a little.
③ Pull
④ Remove the main circuit board

Note: With the main circuit board removed, the unit does not operate. For checking the component side of the main circuit board during operation, remove the front panel, the speaker and the dial plate.

Power Supply Circuit Board Removal

① $\oplus P 3 \times 8$, self-tapping
 $\oplus B 3 \times 8$, self-tapping
①
Power Supply Circuit Board

Photograph: AEP Model


Dial Scale Removal

① $\oplus B 2.6 \times 4$, self-tapping
② Remove the dial scale.

4. DIAL CORD STRINGING



Note: Remove the main circuit board, dial scale and tuning shaft bracket from the unit.

4-1. Dial Cord Preparation

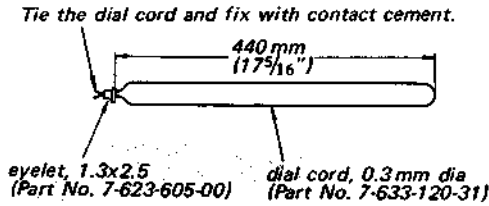

4-2. Dial Cord Stringing


Proceed in numeral order.

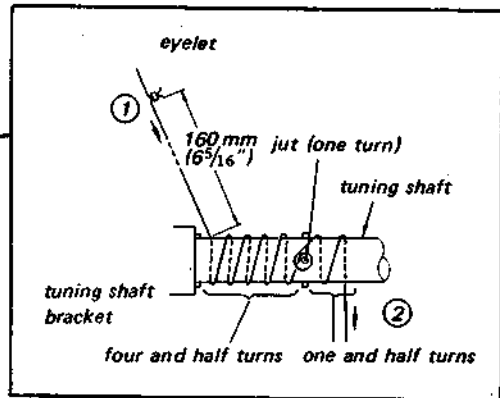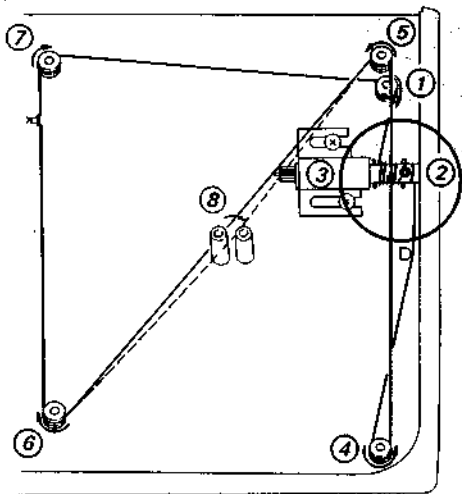


③ Attach the tuning shaft bracket to the unit (in this case, engaging the tuning shaft with dial gear is not needed.)

4-3. Dial Gear Setting

Note: Rotate the dial gear fully counterclockwise.

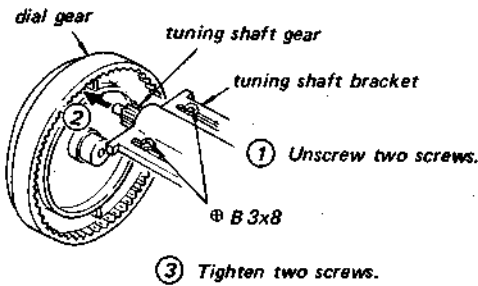


After setting, make sure that the position of dial gear is as shown

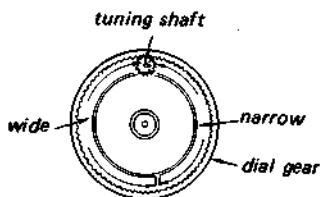

4-4. Dial Pointer Setting


Note: Rotate the tuning shaft fully counterclockwise.

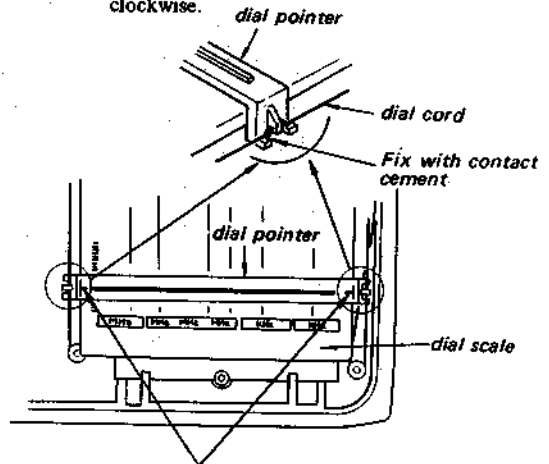


Set the dial pointer at the marks.

5. ADJUSTMENTS


Note: Instead of VOM (range: 0.5~5 V AC), a simple test equipment shown below can be used.

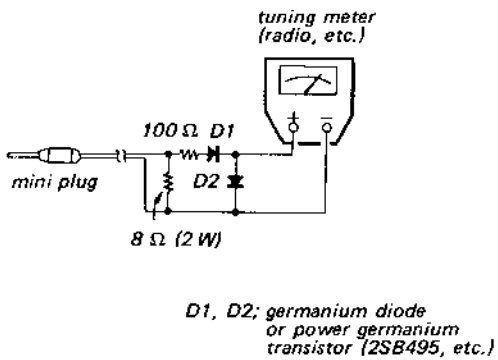


Test Setup:

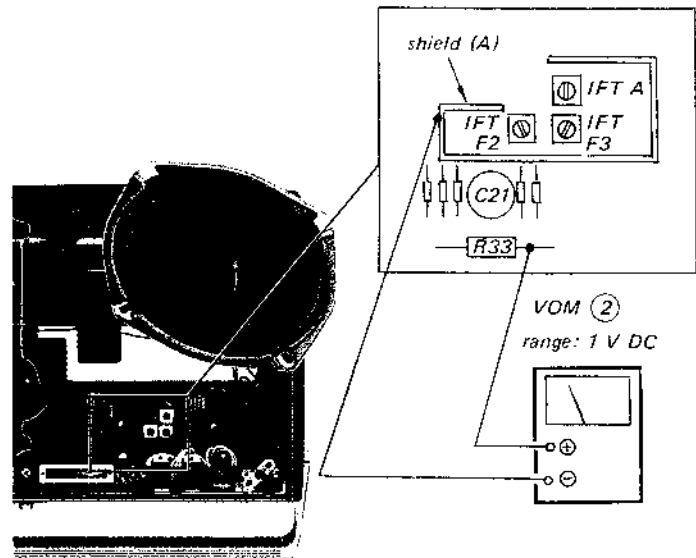

AM rf signal generator

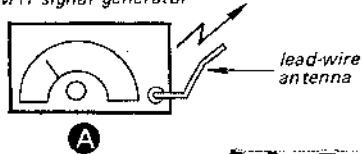


FM or AM rf signal generator

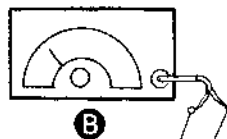

Note: FM rf signal generator: ± 22.5 kHz frequency deviation by 400 Hz signal.
AM rf signal generator: 30% amplitude modulation by 400 Hz signal.


earphone jack

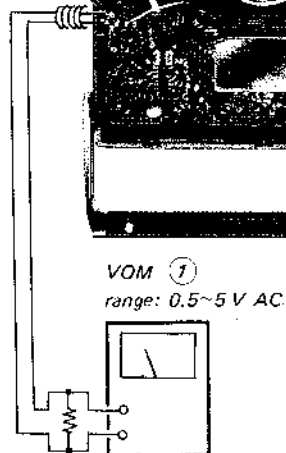

AM IF, MW, LW

AM rf signal generator connection: **A**


- Note: 1. Adjust for maximum reading on VOM **①**
 2. LW adjustments should be performed after MW adjustments.
 3. After the adjustments, fix the coils L3 and L4 with wax.

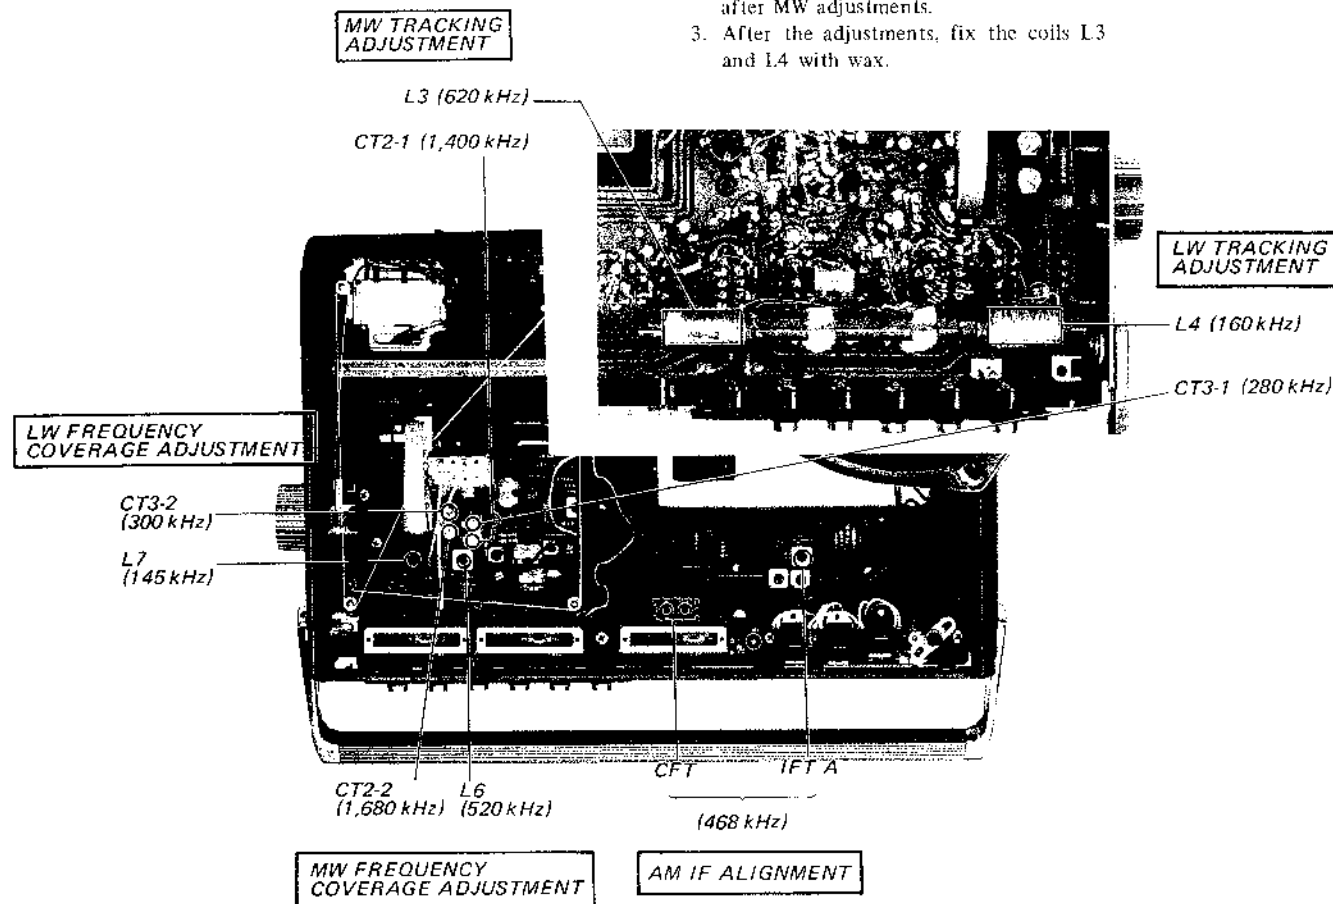

FM

FM rf signal generator connection: **B**

Note: Adjust for maximum reading on VOM **①**

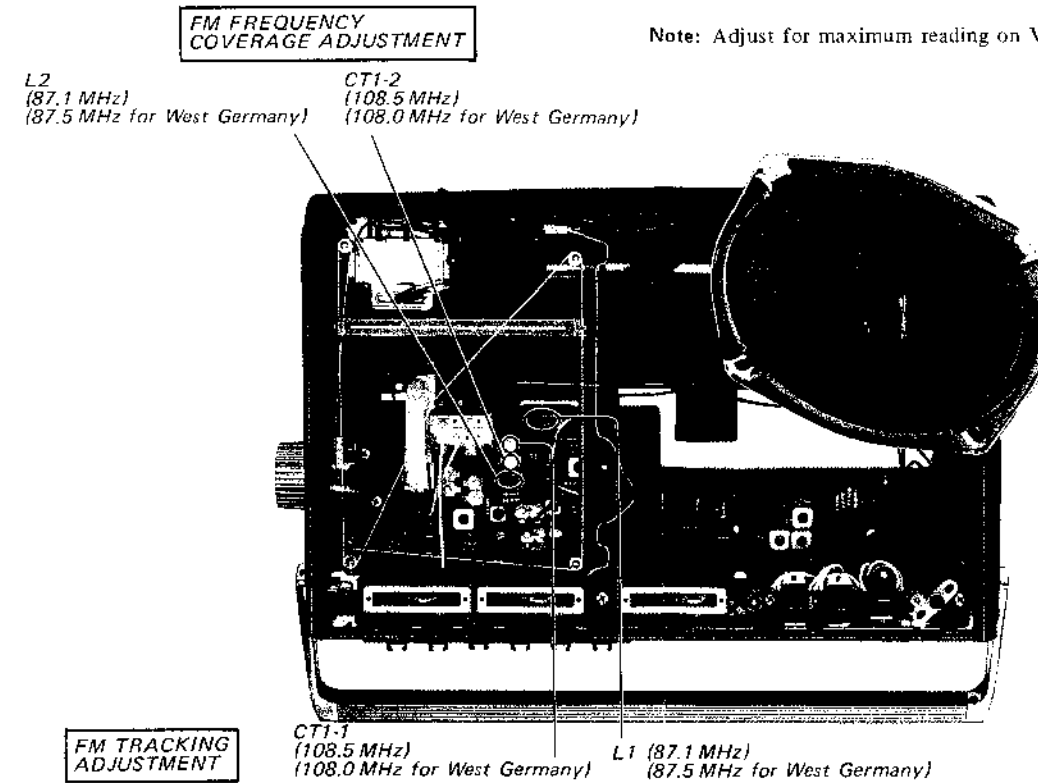


FM IF

FM rf signal generator connection: **B**

FM IF ALIGNMENT

1. Adjust for maximum reading on VOM **①**.

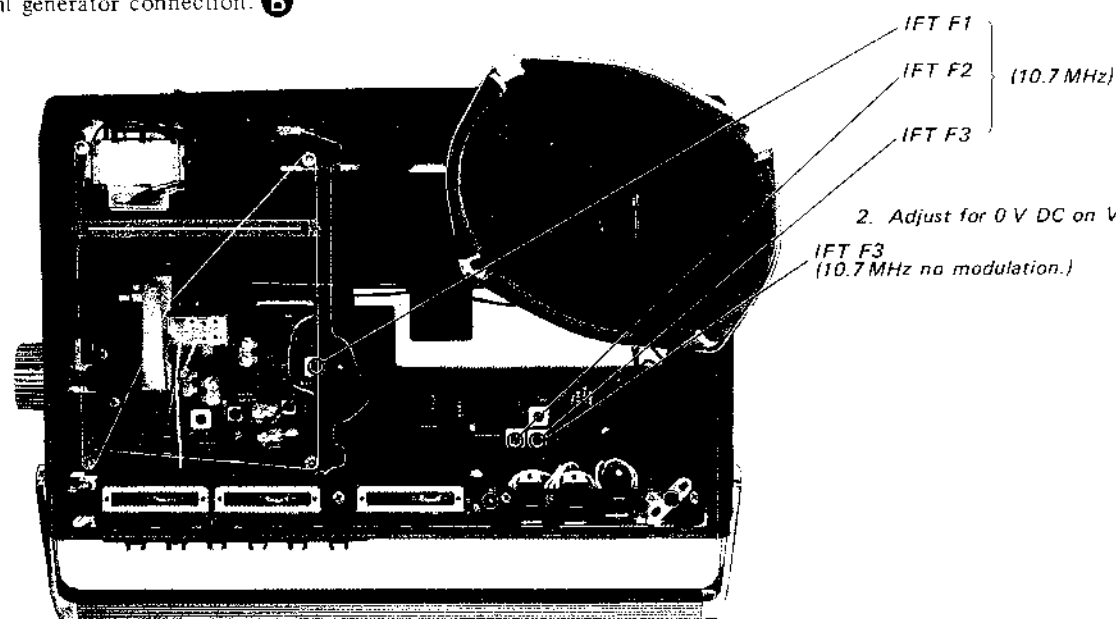


2. Adjust for 0 V DC on VOM **②**.
 IFT F3 (10.7 MHz no modulation.)

SW1, SW2, SW3

AM rf signal generator connection: **B**


Note: Adjust for maximum reading on VOM **①**

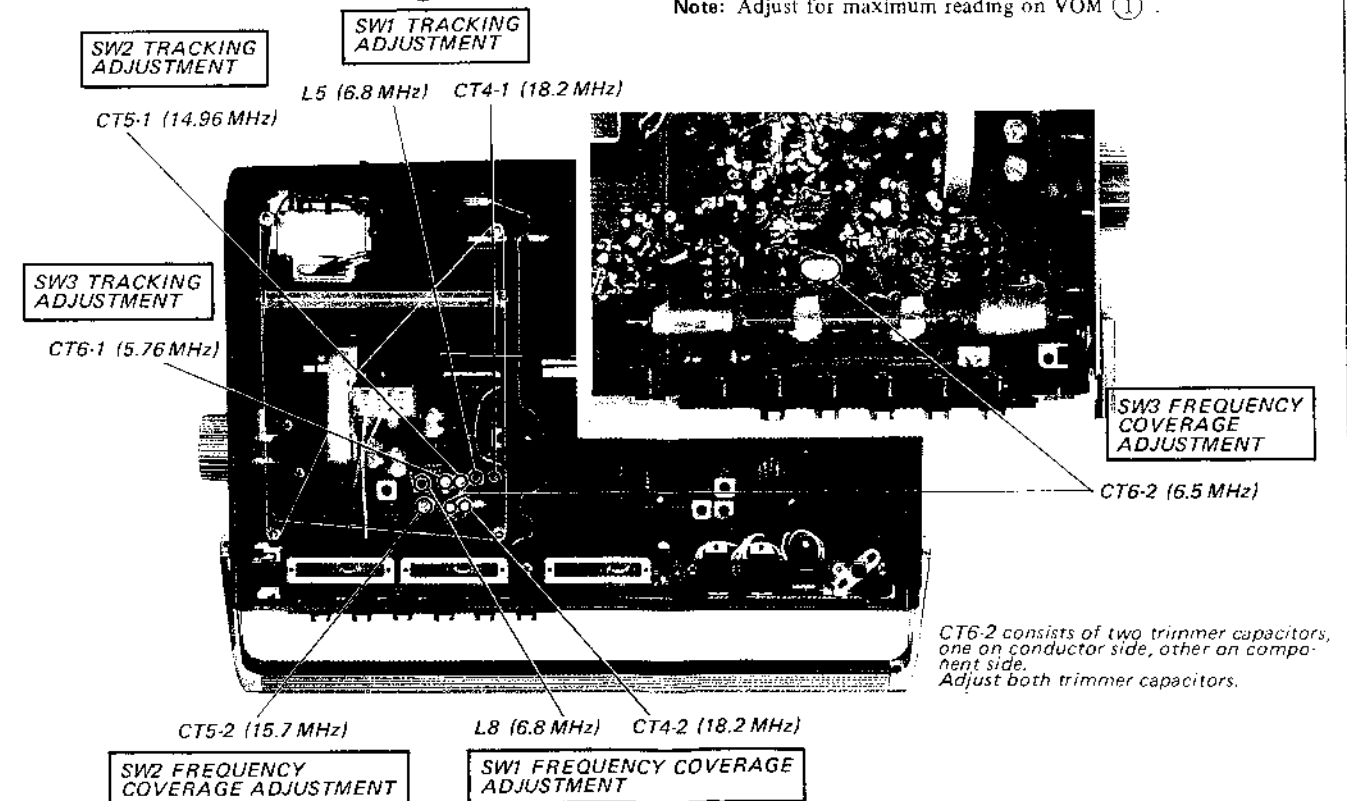

CT6-2 consists of two trimmer capacitors, one on conductor side, other on component side. Adjust both trimmer capacitors.

ICF-8900L ICF-8900L


6. SCHEMATIC DIAGRAM

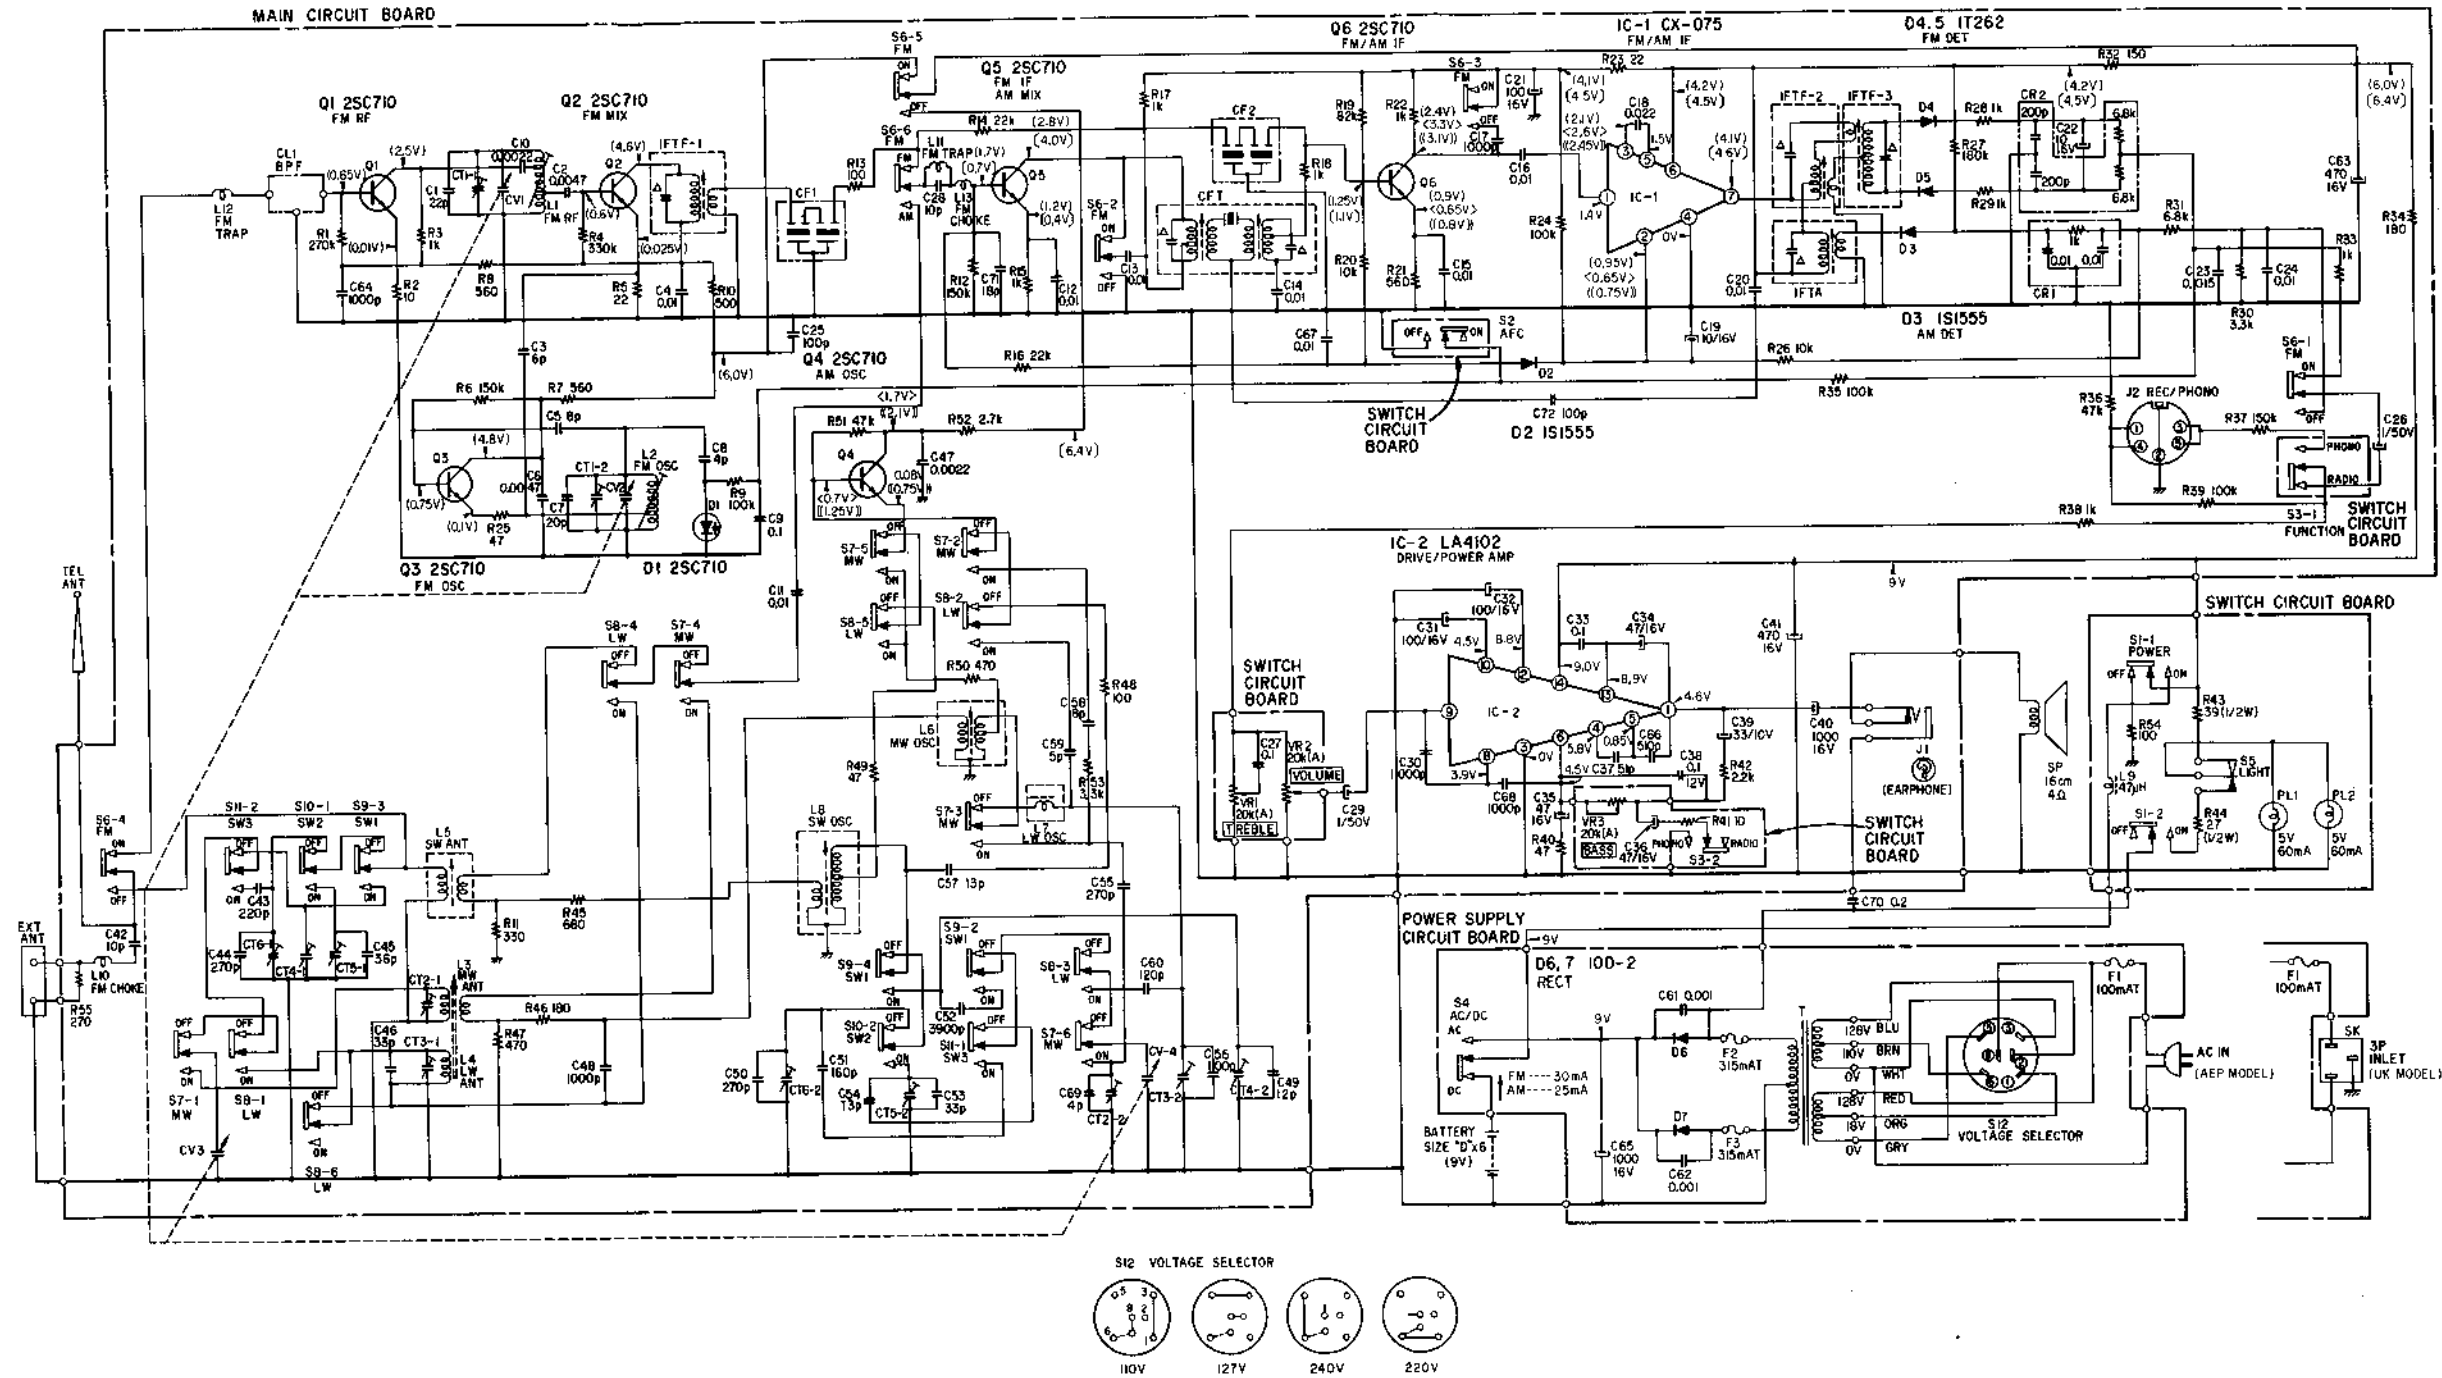

Note:

- All capacitors are in μF unless otherwise noted. $\rho = \mu\text{F}$
- All resistors are in Ω , $\frac{1}{2}W$, unless otherwise noted. $k = 1,000$ $M = 1,000k$
- Δ indicates internal components.
- --- indicates ground.
- Transistor is used for D1 instead of diode.
- Voltages are DC with respect to ground unless otherwise noted. Readings taken under no-signal conditions with a VOM (12k Ω/V)
- () : FM < > : SW (()) : MW, LW
- [] : SW, MW, LW
- no mark: FM, SW, MW, LW
- Voltage variations may be noted due to normal production tolerances.
- Switch Mode


Ref. No.	Switch	Mode
S1	POWER	OFF
S2	AFC	ON
S3	FUNCTION RADIO/PHONO	RADIO
S4	AC/DC	DC
S5	LIGHT	OFF
S6	FM	ON
S7	MW	OFF
S8	LW	OFF
S9	SW1	OFF
S10	SW2	OFF
S11	SW3	OFF
S12	VOLTAGE SELECTOR	—

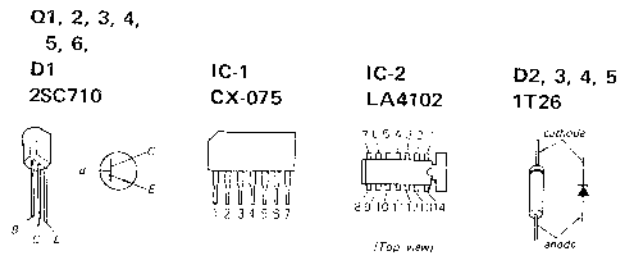


7. MOUNTING DIAGRAMS

7-1. Main Section

— Conductor Side —


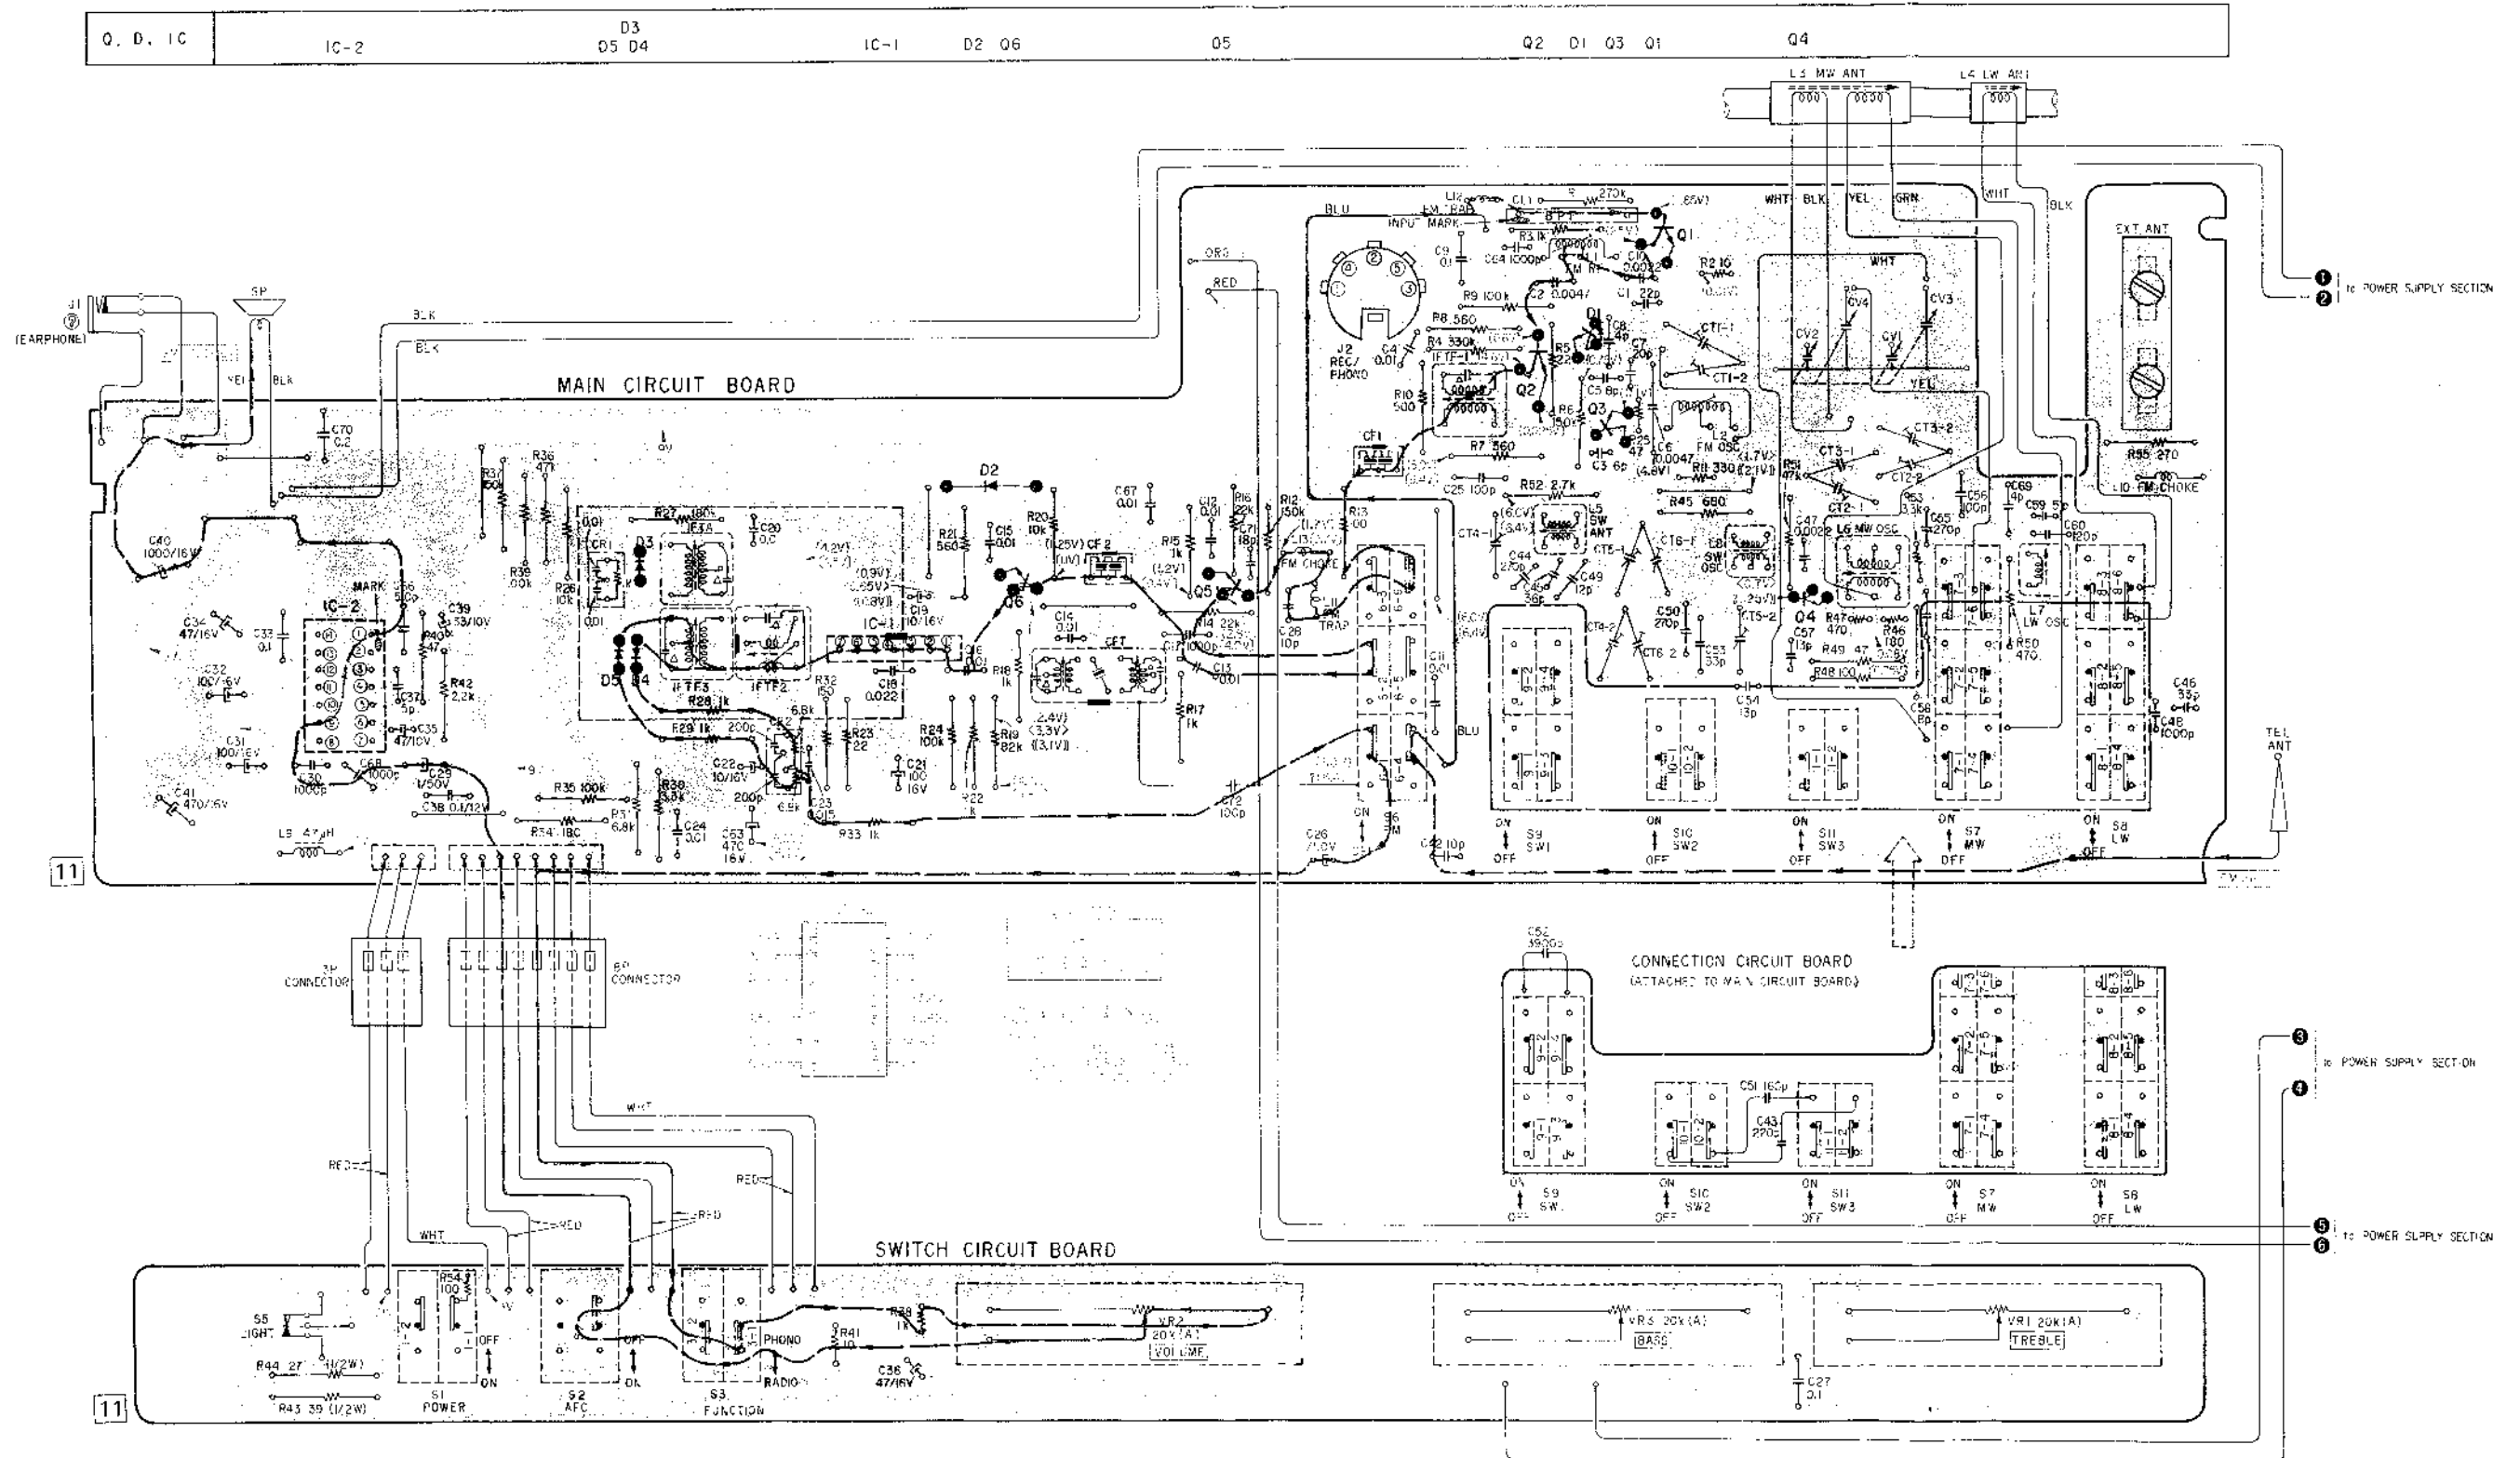


Note:
 Place CF1, CF2, BPF, CFT, IFT F-2 and IC-1, so that the marking side comes as shown.



7-2. Power Supply Section
 - Conductor Side -


D6 D7

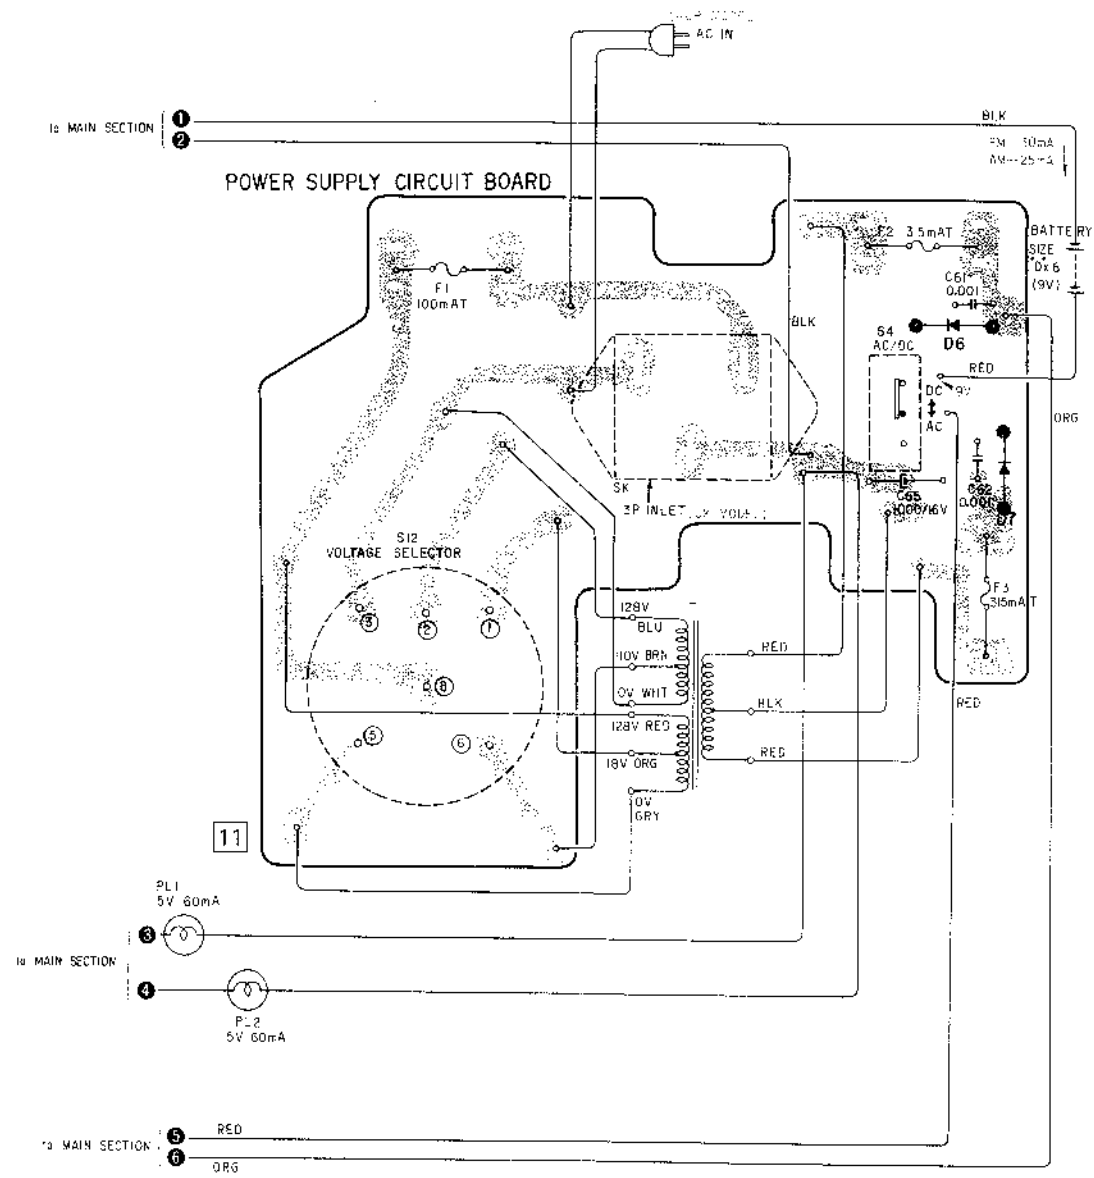

MEMO

A series of horizontal dashed lines for taking notes.

8. EXPLODED VIEW

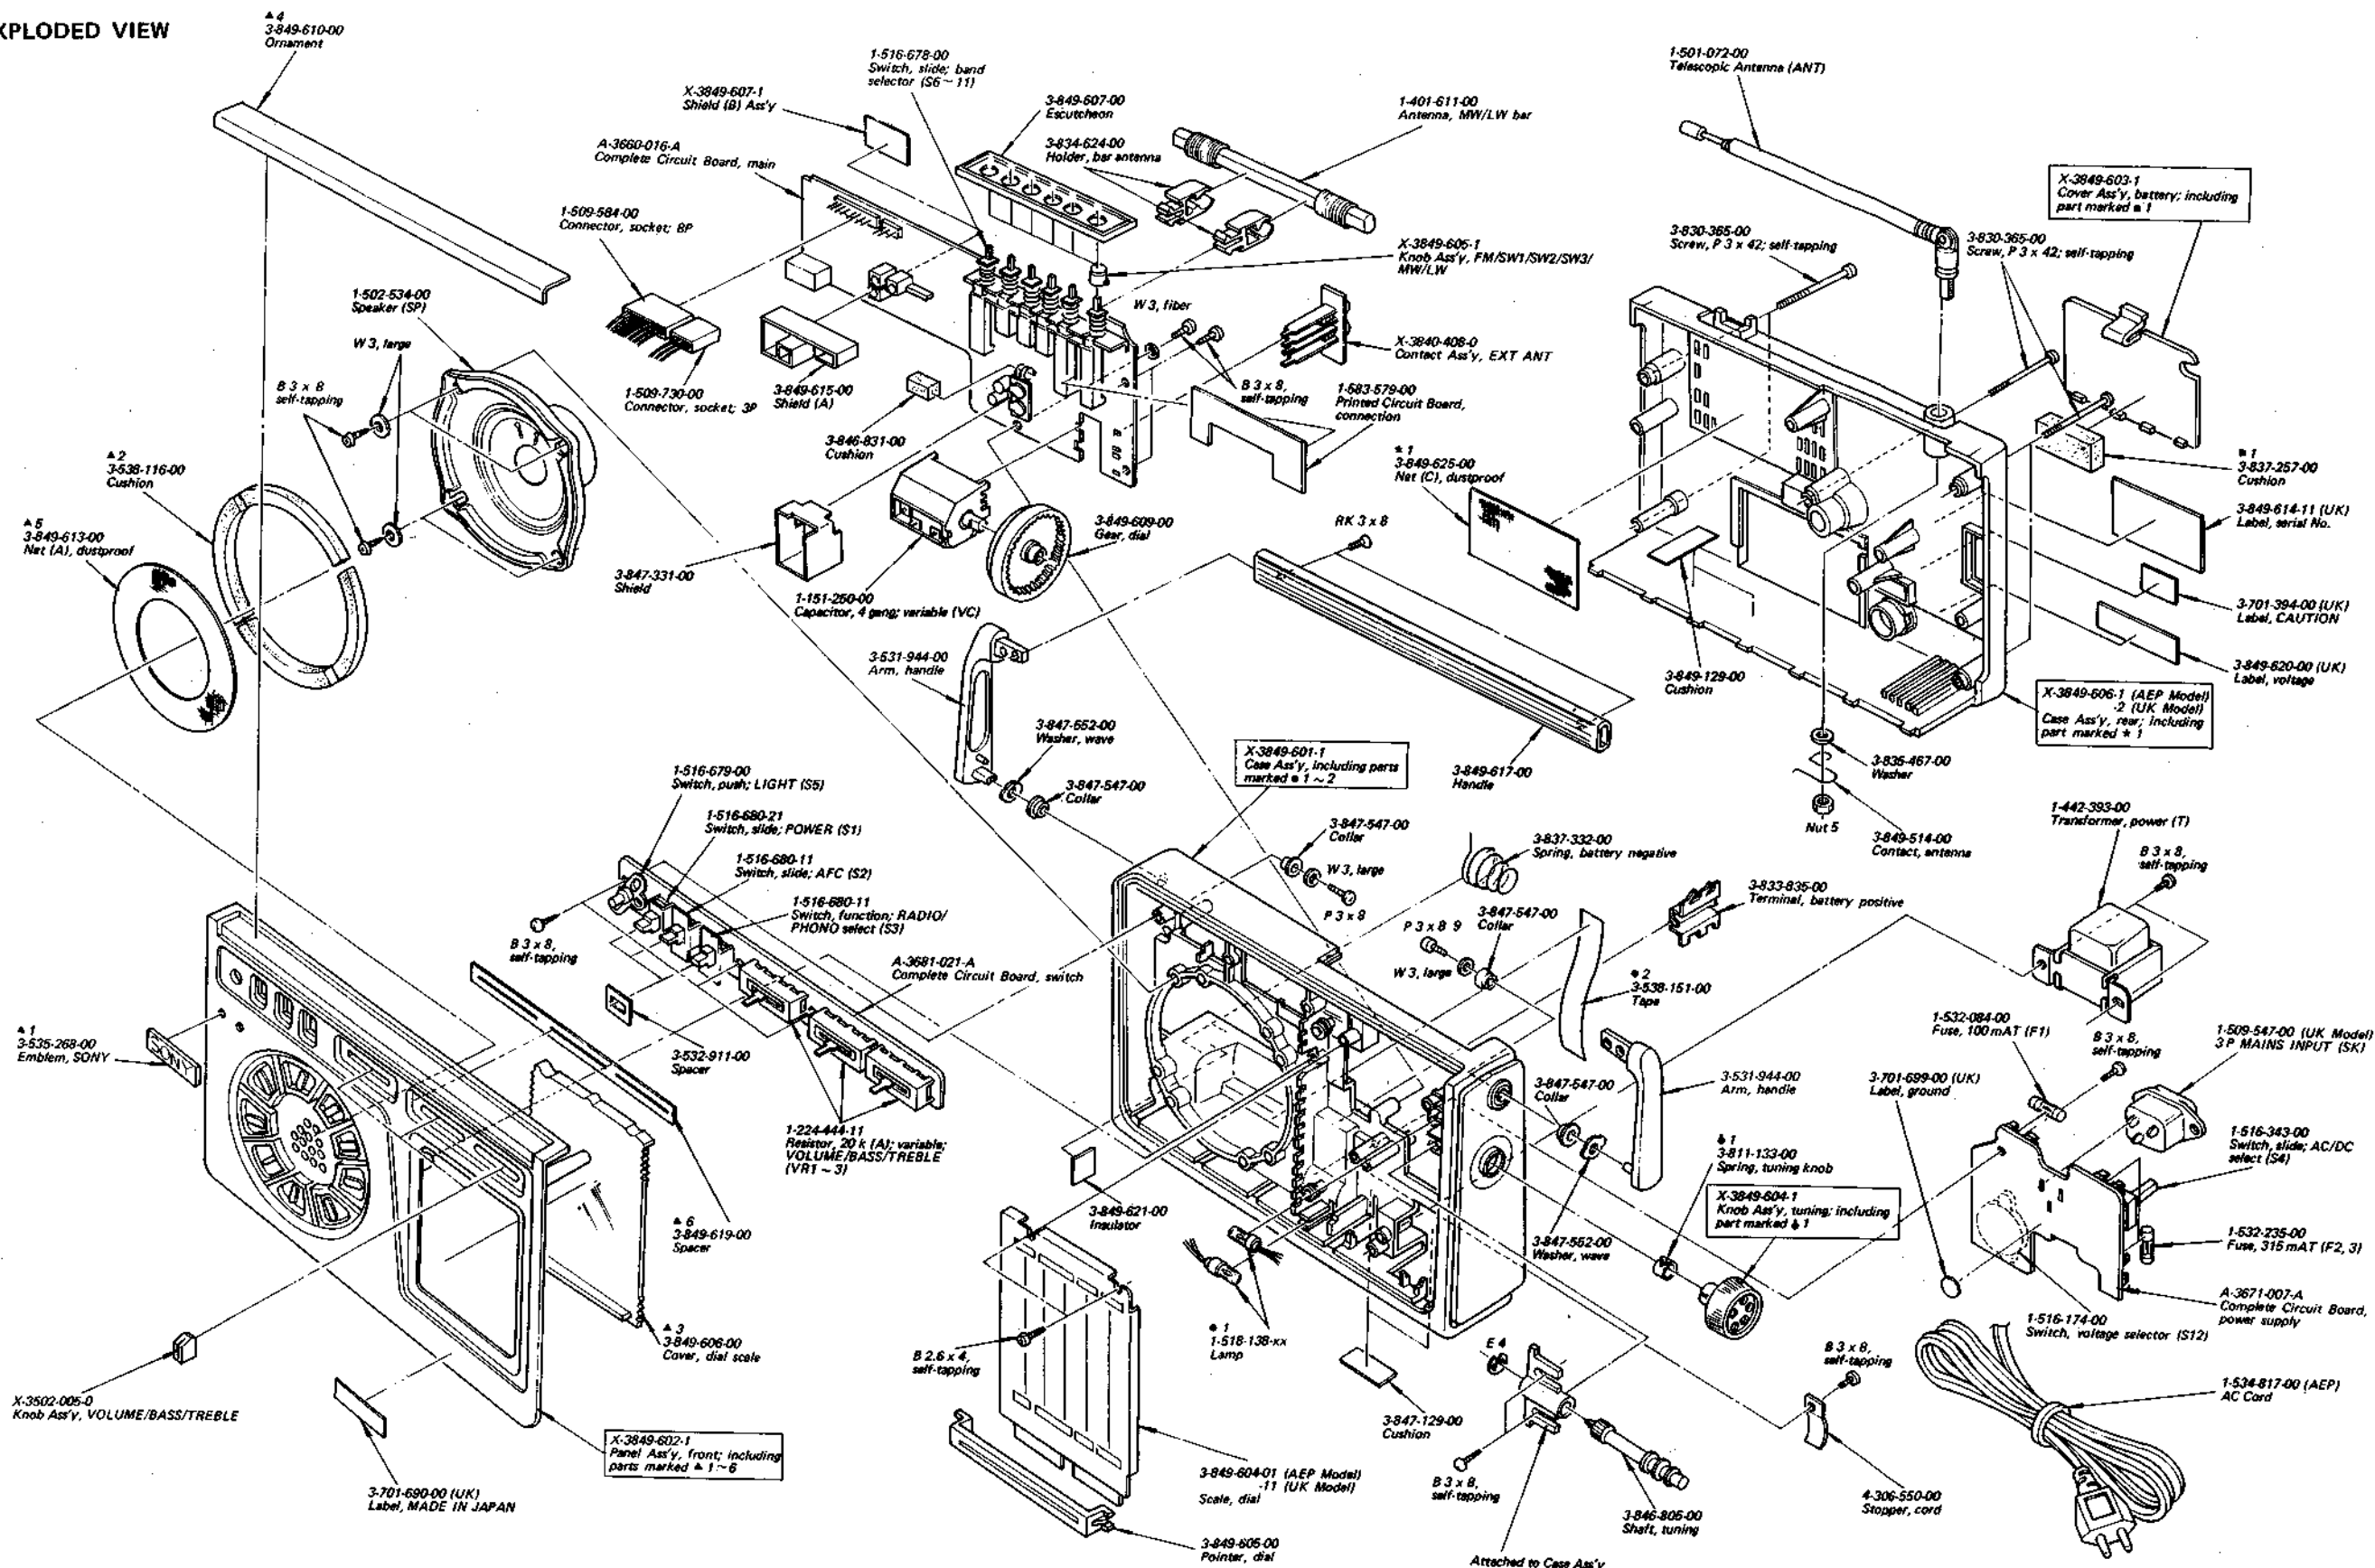

Note: ○ Items without part number and description are not available.
 ○ All screws are Phillips (cross recess) type unless otherwise noted.
 (-) = slotted head

9. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
COMPLETE CIRCUIT BOARDS		
A-3660-016-A	Main	
A-3671-007-A	Power Supply	
A-3681-021-A	Switch	
PRINTED CIRCUIT BOARD		
1-583-579-00	Connection	
SEMICONDUCTORS		
Q1~6	Transistor	2SC710
D1	Diode	2SC710
D2,3	Diode	1S1555
D4,5	Diode	1T262
D6,7	Diode	10D2
IC1	IC (IF), CX-075	
IC2	IC (AF), LA4102	
TRANSFORMERS		
T	1-442-393-00	Power
CFT3	1-403-828-00	468 kHz CF (CFT)
IFT F-1	1-403-899-00	FM IFT (MIX)
IFT F-2	1-403-903-00	FM IFT, DISCRI (primary)
IFT F-3	1-403-902-00	FM IFT, DISCRI (secondary)
IFTA	1-403-965-00	AM IFT (DET)
COILS		
L1	1-425-867-00	FM RF
L2	1-425-792-00	FM Osc
L3,4	1-401-611-00	MW/LW Bar Antenna
L5	1-401-507-00	SW Antenna

Ref. No.	Part No.	Description
L6	1-405-609-00	MW Osc
L7	1-405-671-00	LW Osc
L8	1-405-533-00	SW Osc
L9	1-407-407-00	Microinductor
L10	1-401-526-00	FM CHOKE
L11	1-401-495-00	FM TRAP
L12	1-401-495-00	FM TRAP
L13	1-401-526-00	FM CHOKE
CAPACITORS		
All capacitors are in μ F and ceramic type unless otherwise indicated. (pF = μ μ F, elect = electrolytic)		
C1	1-102-959-11	22p 50V
C2	1-101-922-11	0.0047 25V
C3	1-102-808-11	6p 50V
C4	1-101-923-11	0.01 25V
C5	1-102-810-11	8p 50V
C6	1-101-922-11	0.0047 25V
C7	1-101-981-11	20p 50V
C8	1-102-941-11	4p 50V
C9	1-101-797-11	0.1 12V boundary layer
C10	1-101-919-11	0.0022 25V
C11~16	1-101-923-11	0.01 25V
C17	1-101-455-11	1000p 50V
C18	1-101-924-11	0.022 25V
C19	1-121-651-11	10 16V elect
C20	1-101-923-11	0.01 50V
C21	1-121-414-11	100 16V elect
C22	1-121-651-11	10 16V elect
C23	1-108-279-12	0.015 50V mylar
C24	1-108-278-12	0.01 50V mylar
C25	1-102-973-11	100p 50V
C26	1-121-391-11	1 50V elect
C27	1-101-797-11	0.1 12V boundary layer
C28	1-102-947-11	10p 50V
C29	1-121-391-11	1 50V elect
C30	1-101-455-11	1000p 50V
C31,32	1-121-414-11	100 50V elect

Ref. No.	Part No.	Description
C33	1-101-797-11	0.1 12V boundary layer
C34~36	1-121-352-11	47 16V elect
C37	1-101-882-11	51p 50V
C38	1-101-797-11	0.1 12V boundary layer
C39	1-121-402-11	33 10V elect
C40	1-121-245-11	1000 16V elect
C41	1-121-426-11	470 16V elect
C42	1-102-947-11	10p 50V
C43	1-103-709-11	220p 50V polystyrene
C44	1-107-095-11	270p 50V silvered mica
C45	1-102-964-11	36p 50V
C46	1-102-963-11	33p 50V
C47	1-101-919-11	0.0022 25V
C48	1-101-455-11	1000p 50V
C49	1-102-262-11	12p 50V
C50	1-103-711-11	270p 50V polystyrene
C51	1-103-706-11	160p 50V polystyrene
C52	1-103-739-11	3900p 50V polystyrene
C53	1-102-963-11	33p 50V
C54	1-107-064-11	13p 50V silvered mica
C55	1-107-095-11	270p 50V silvered mica
C56	1-107-085-11	100p 50V silvered mica
C57	1-102-950-11	13p 50V
C58	1-102-810-11	8p 50V
C59	1-102-942-11	5p 50V
C60	1-107-087-11	120p 50V silvered mica
C61,62	1-108-394-12	0.001 100V mylar
C63	1-121-426-11	470 16V elect
C64	1-101-455-11	1000p 50V
C65	1-121-245-11	1000 16V elect
C66	1-101-059-11	510p 50V
C67	1-101-923-11	0.01 50V
C68	1-101-455-11	1000p 50V
C69	1-102-941-11	4p 50V
C70	1-101-798-11	0.2 50V
C71	1-102-953-11	18p 50V
C72	1-102-973-11	100p 50V
CT1~3	1-141-146-00	Trimmer, 2 gang
CT4-1	1-141-097-00	Trimmer, single
CT4-2	1-141-146-00	Trimmer, 2 gang

Ref. No.	Part No.	Description
CT5-1	1-141-146-00	Trimmer, 2 gang
CT5-2	1-141-097-00	Trimmer, single
CT6	1-141-146-00	Trimmer, 2 gang
VC	1-151-250-00	Variable, 4 gang
RESISTORS		
All resistors are in Ω . $\frac{1}{4}$ W, $\pm 5\%$ carbon resistors (except particular type) are omitted. Check the schematic diagram for the resistance values. (k = 1000)		
R43	1-244-839-11	39 $\frac{1}{4}$ W
R44	1-244-835-11	27 $\frac{1}{4}$ W
VR1~3	1-224-444-00	20k (A), variable; VOLUME/BASS/TREBLE
SWITCHES		
S1	1-516-680-21	Slide, POWER
S2	1-516-680-11	Slide, AFC
S3	1-516-680-11	Slide, function; RADIO/PHONO select
S4	1-516-343-00	Slide, AC/DC select
S5	1-516-679-00	Push, LIGHT
S6	1-516-678-00	Slide, band selector
S7		
S8		
S9		
S10		
S11	1-516-174-00	Voltage selector
S12		
JACKS		
J1	1-507-398-00	Phone, earphone
J2	1-509-508-00	5P, REC/PHONO
SK	1-509-547-00	3P, MAINS INPUT (UK Model)

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
MISCELLANEOUS		
ANT	1-501-072-00	Antenna, telescopic
CF1,2	1-527-184-11	Filter, ceramic; 10.7 MHz (SFE)
	-15	
CL1	1-231-286-00	Filter, band pass
CR1	1-231-211-00	Encapsulated Component, C-R
CR2	1-231-202-00	Encapsulated Component, C-R
F1	1-532-084-00	Fuse, 100 mA
F2,3	1-532-235-00	Fuse, 315 mA
SP	1-502-534-00	Speaker
	1-534-817-00	AC cord (AEP Model)
	1-508-647-00	Pin, jumper
	1-508-694-00	Connector, pin
	1-508-742-00	Connector, pin
	1-509-584-00	Connector, socket; 8 p
	1-509-730-00	Connector, socket; 3 p

II. HARDWARE

SCREWS

All screws are Phillips (cross recess) type unless otherwise indicated.

7-681-348-04	RK 3x8
7-682-148-01	P 3x8
7-685-531-15	B 2.6x4, self-tapping
7-685-546-11	B 3x8, self-tapping

WASHERS

7-623-108-21	3, large
7-623-908-01	3, fiber

MISCELLANEOUS

7-623-108-01	Retaining Ring, E-4
7-623-605-00	Eyelet 1.3x2.5
7-633-120-31	Dial Cord, 0.3
7-684-035-00	Nut 5

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
12. ACCESSORIES & PACKING MATERIALS		
X-3849-608-0		Case Ass'y, battery
1-504-034-12		Earphone, ME-20
1-534-819-00		Cord, power; DK-37 (UK Model)
3-532-310-00		Bag, polyethylene
3-701-625-00		Bag, polyethylene
3-849-627-00		Carton
3-849-629-00		Cushion
3-995-705-11		Manual, instruction
3-998-901-00		Label, serial No.