

ICF-C10W

SERVICE MANUAL

*US Model
Canadian Model
AEP Model
E Model
AUS Model
Italy Model*

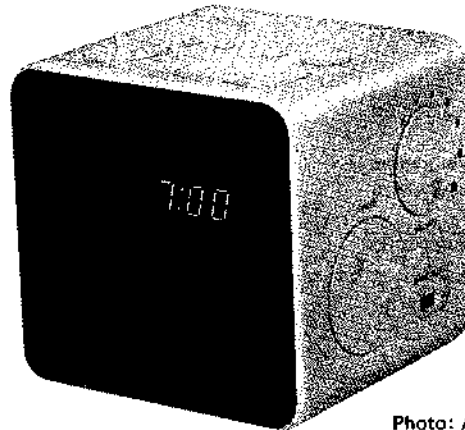


Photo: AEP model
(WHITE type)

This SERVICE MANUAL includes supplement No. 1 to No. 5.
 supplement No. 1 9-950-941-81
 No. 2 9-950-941-82
 No. 3 9-950-941-83
 No. 4 9-950-941-84
 No. 5 9-950-941-85

SPECIFICATIONS

Frequency range:	FM 87.5–108 MHz (US, Canadian, E1, E2, AUS) 87.6–107 MHz (AEP) AM 530–1,605 kHz (US, Canadian, AEP, E1, E2, AUS) 526.5–1,606.5 kHz (Italy)	Power consumption:	5 W ac (2.5 W ac when only the clock is in operation)
Antennas:	FM: Wire antenna AM: Built-in ferrite bar antenna	Dimensions:	Approx. 121 x 118 x 116 mm (w/h/d) (4 ⁷ / ₈ x 4 ³ / ₄ x 4 ⁵ / ₈ inches) incl. projecting parts and controls
Speaker:	Approx. 6.6 cm (2 ¹ / ₂ inches) dia.	Weight:	US, Canadian, E2 Model . . . Approx. 800 g (1 lb 13 oz) E1, AEP, Italy, AUS Model . . . Approx. 910 g (2 lb) incl. battery
Power output:	US, Canadian, E1, E2, AUS Model . . . 250 mW (at 10% harmonic distortion) AEP, Italy Model 400 mW (at 10% harmonic distortion)		
Power requirements:	US, Canadian, E2 Model . . . 120 V ac, 60 Hz AEP, Italy Model 220 V ac, 50 Hz E1 Model 110-120/220-240 V, 50/60 Hz AUS Model 240 V ac, 50 Hz For the power backup function: 9 V dc, one battery, IEC designation 6F22		

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET UNE MARQUE ⚠ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.



FM/AM DIGITAL CLOCK RADIO
SONY®

TR

ICF-C10W


FEATURES

- High quality FM/AM radio combined with an electronic digital alarm clock and sleep timer.
- Easy-to-read blue fluorescent display of time and AM/PM indication. (AM/PM is not indicated in AEP model.)
- Functions of each section are grouped on an appropriate panel.
- Choice of awakening to radio or buzzer alarm.
- 24-hour alarm preset system automatically turns alarm on at same time every day.
- Dream bar, feather light to operate, and having three functions; snooze alarm, sleep timer off, and instant alarm time readout.
- Power backup function to keep the clock operating during a power failure, using an optional 9 V battery.


MODEL IDENTIFICATIONS

— Model No. Label —


- US, Canadian Model (carved rear lid)

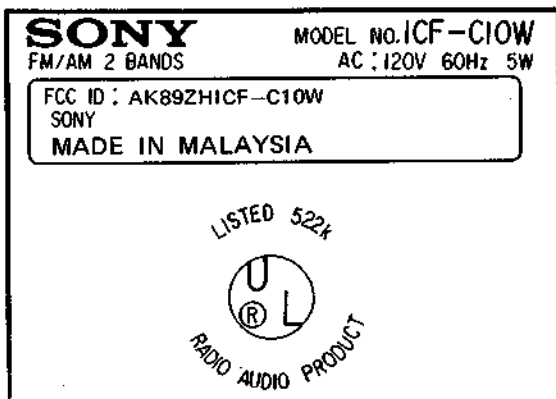

- AEP, Italy Model

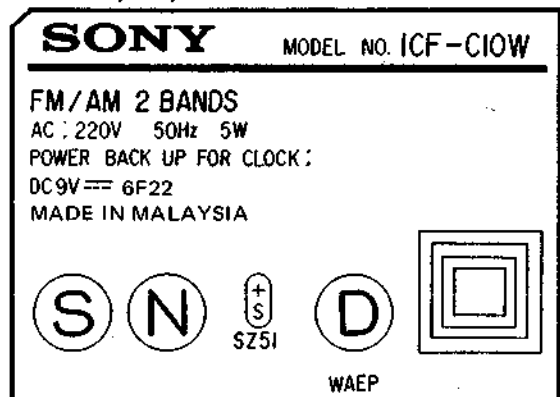

- E, AUS Model

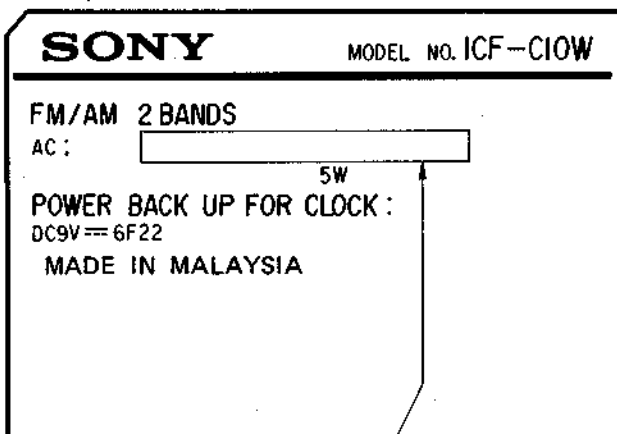

E1 Model: 110-120V/220-240 V
50/60Hz

E2 Model: 120V 60Hz

AUS Model: 240V 50Hz


SAFETY CHECK-OUT (US Model)

After correcting the original service problem, perform the following safety check before releasing the set to the customer:
 Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.


LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)


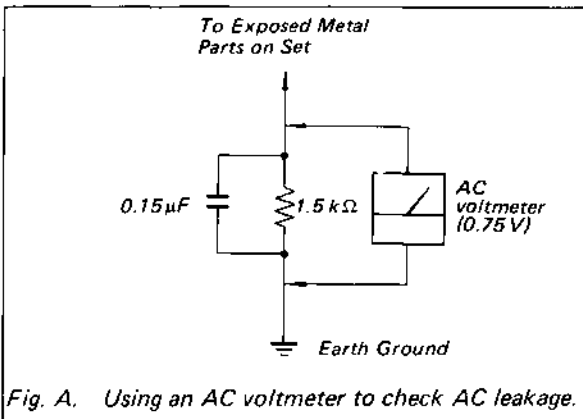


LOCATION AND FUNCTION OF CONTROLS

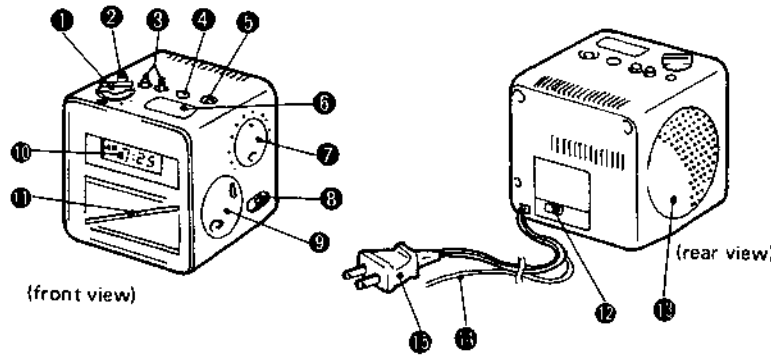


- 1 **Function selector**
Select a position as required.
TIME SET: for setting the current time.
ALARM SET: for setting the alarm time.
OFF: for turning off the radio manually or automatically.
ON: for turning on the radio manually.
RADIO: for radio alarm.
BUZZER: for buzzer alarm, or for radio and buzzer alarm.
- 2 **PUSH button**: This button must be depressed in order to put the function selector in the TIME SET position. To set the time, hold this button down while turning the function selector to TIME SET.
- 3 **Time set buttons [H] (hour) [M] (minute)**: Each time the H or M button is pressed, the hour or minute digit advances by one. While the H or M button is kept pressed, the clock stops operating.
- 4 **SLEEP timer button**: Press the button to set the sleep timer.
- 5 **ALARM RESET button**: Press to turn off the alarm sound manually.
- 6 **DREAM BAR**: Lightly press for an instant readout of the alarm time, for operating the snooze alarm function or for turning off the radio before the preset time of the sleep time.
- 7 **VOLUME control**: Turn clockwise for more volume.
- 8 **BAND selector**: Choose the desired band: FM or AM.
- 9 **TUNING knob**: Turn to select the frequency of the desired station.
- 10 **Time display**: When the function selector is set to ALARM SET, or when the DREAM BAR is pressed, the display on the indicator shows alarm time with an "Alarm" marking. When the SLEEP button is pressed, the display shown is the length of time the radio will keep playing (up to 60 minutes). In other cases, the display is current a.m. or p.m. time.
- 11 **Dial scale and dial pointer**
- 12 **Time display brightness switch [BRIGHT]**: Set this switch to H to brighten the figures on the display and to L to dim.
- 13 **Speaker**
- 14 **FM wire antenna**: Used for FM reception.
- 15 **AC power cord**

BLOCK DIAGRAMS OF ICs

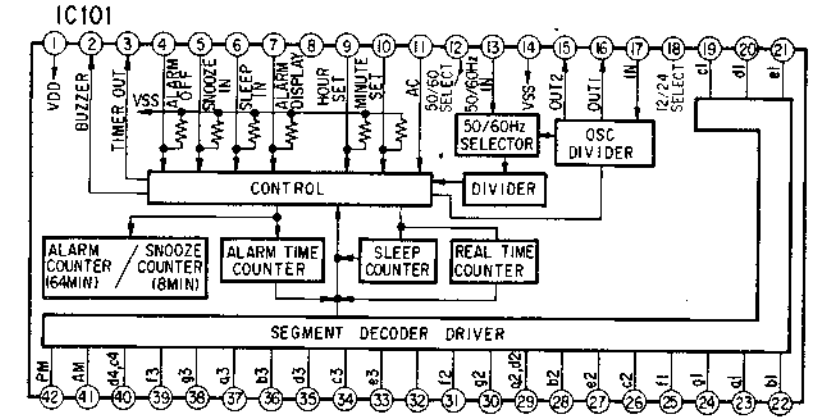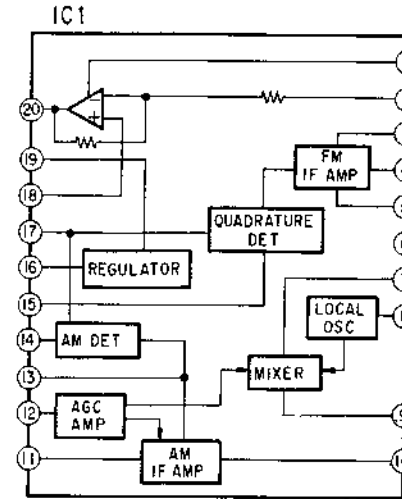

SEMICONDUCTOR LEAD LAYOUTS

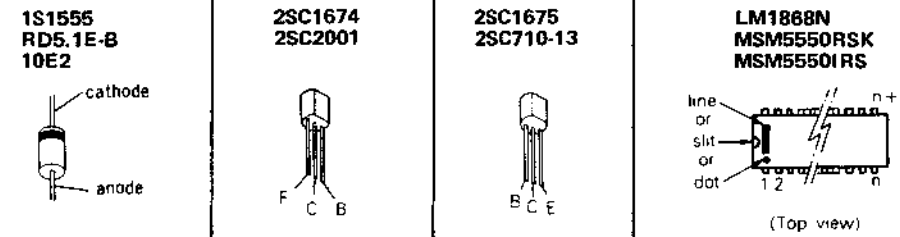

***NOTE ON REPLACING IC101**

When replacing IC101, choose the capacitance value of C108 by the procedure follow.


- 1 Set the certain time under the normal operation.
- 2 Operate the set for two hours with the Back-up power plugging out on the supposition that the power stoppage.
- 3 When plugging in again two hours later, the aberration of clock display should be within ±5% (±3 minutes).
- 4 If necessary, change the capacitance value of C108.

TIME	CAPACITANCE VALUE
faster	small (0 PF)
↑	↓
slower	large (10 PF)

HANDLING DESCRIPTION

HOW TO SET THE CLOCK

The numbers in the illustration refer to the sequence of operations.

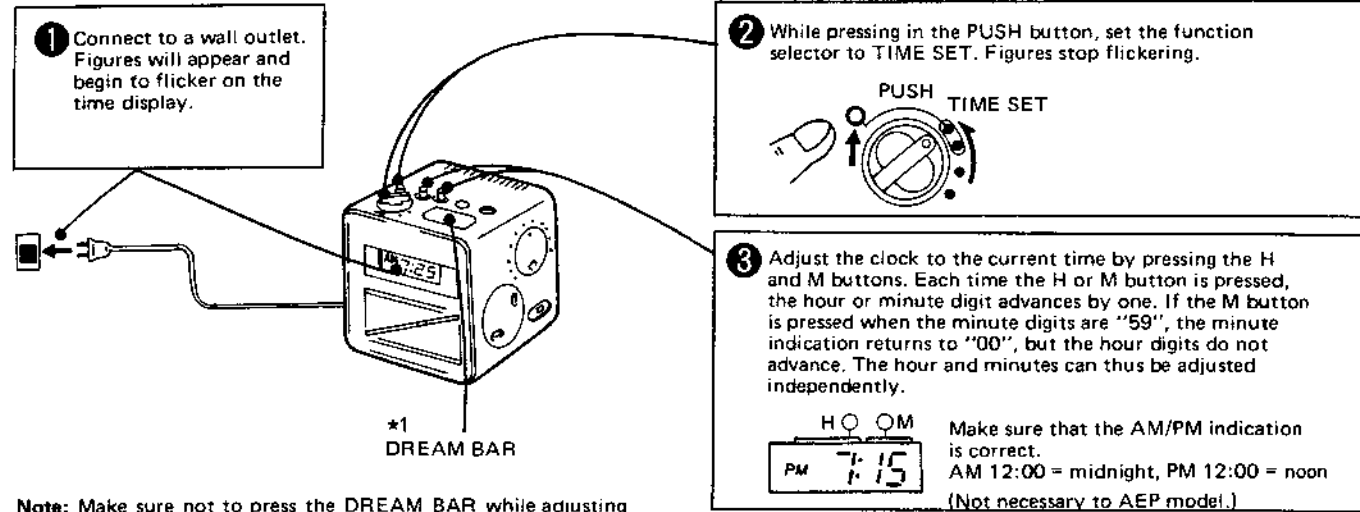

Note: Make sure not to press the DREAM BAR while adjusting the time indication. Otherwise the time display will show the alarm time with an "Alarm" marking.


• After setting the time, be sure to set the function selector to BUZZER, RADIO, ON or OFF. If the selector is set to TIME SET or ALARM SET, accidental pushing of the time set buttons will change the current or alarm time display.

WARNING

When the power backup battery is not inserted.
If the ac power supply is interrupted, even though the interruption might have been very short, the time display will blink (when the function selector is set to a position other than ALARM SET). This shows the time and alarm setting are completely cancelled. In this case, be sure to reset the time and the alarm setting.

RADIO OPERATION


The numbers in the illustration refer to the sequence of operations.

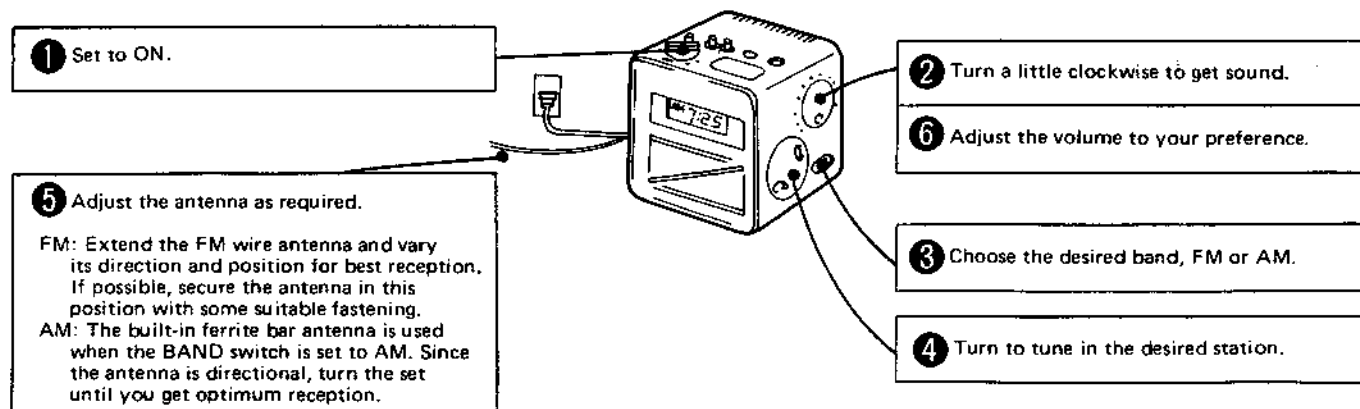

• To turn off the radio, set the function selector to OFF.


HOW TO USE THE SLEEP TIMER

The numbers in the illustration refer to the sequence of operations.

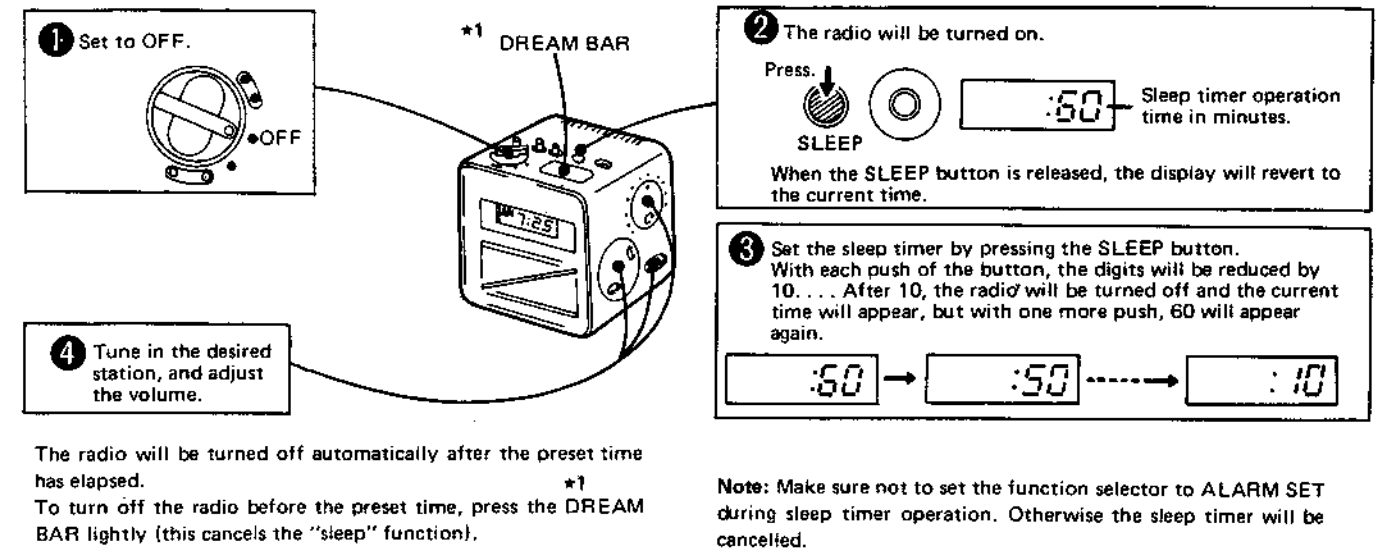

HOW TO SET THE ALARM (RADIO OR BUZZER)

The numbers in the illustration refer to the sequence of operations.

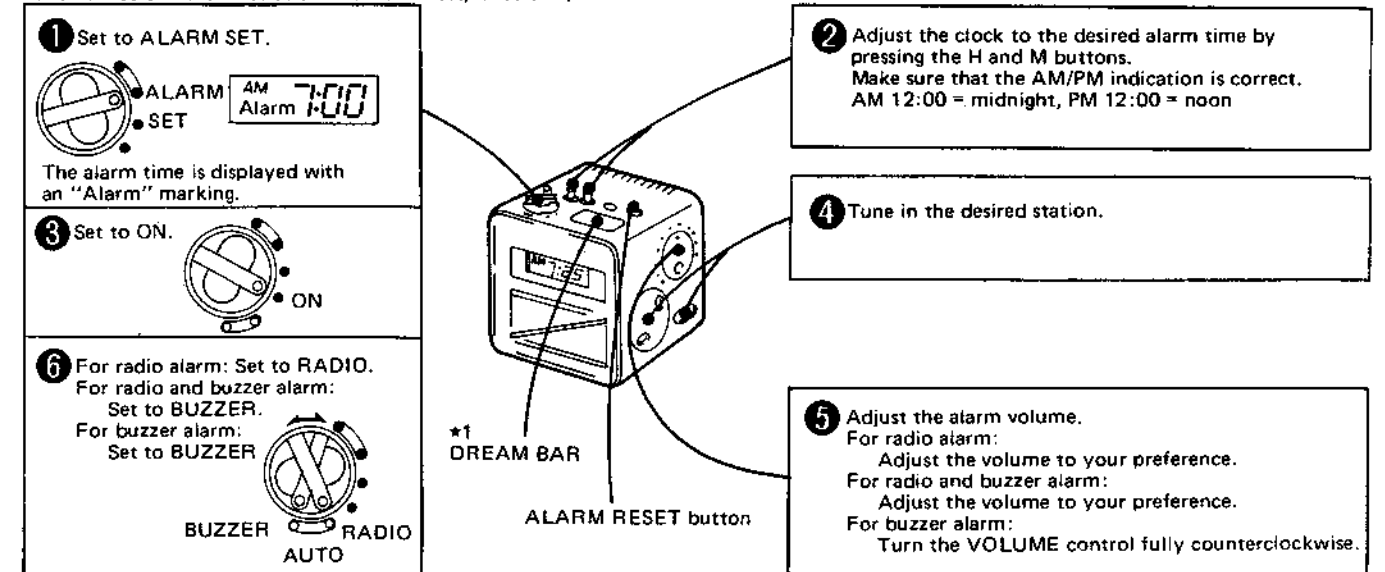

The radio and/or buzzer sound will come on automatically at the preset time, and will shut itself off automatically after about 64 minutes, unless it is shut off manually.

To turn off the alarm sound manually, press the ALARM RESET button. At the same time of the next day, the alarm sound will come on again.

SNOOZE ALARM FUNCTION

If you awake to the radio and/or buzzer in the morning but want to doze for a few more minutes, just lightly press the DREAM BAR. The radio and/or buzzer will be silenced, but will automatically come on again after about eight minutes. If you want to doze more, press the bar again. You can repeat this snooze function as many times as you like.

USE OF SLEEP TIMER AFTER SETTING ALARM


With ICF-C10W, you can fall asleep to music, knowing the radio will turn itself off at the preset time and you will be awakened by the alarm sound at your preset alarm time. For details of each operation and notes, refer to the specified sections described before.

- 1 Set the function selector to ALARM SET, and adjust the time display to your wake-up time with the H and M buttons.
- 2 Set the function selector to BUZZER or RADIO, as required.
- 3 Set the sleep timer by pressing the SLEEP button.
- 4 Tune in the desired station and adjust the volume.

* Panel designation differs according to the model.
*1 DREAM BAR US, Canadian Model
REPEAT ALARM AEP, E1, E2, AUS Model
SNOOZE BAR Italy Model

SECTION 1
OUTLINE




BLOCK DIAGRAM

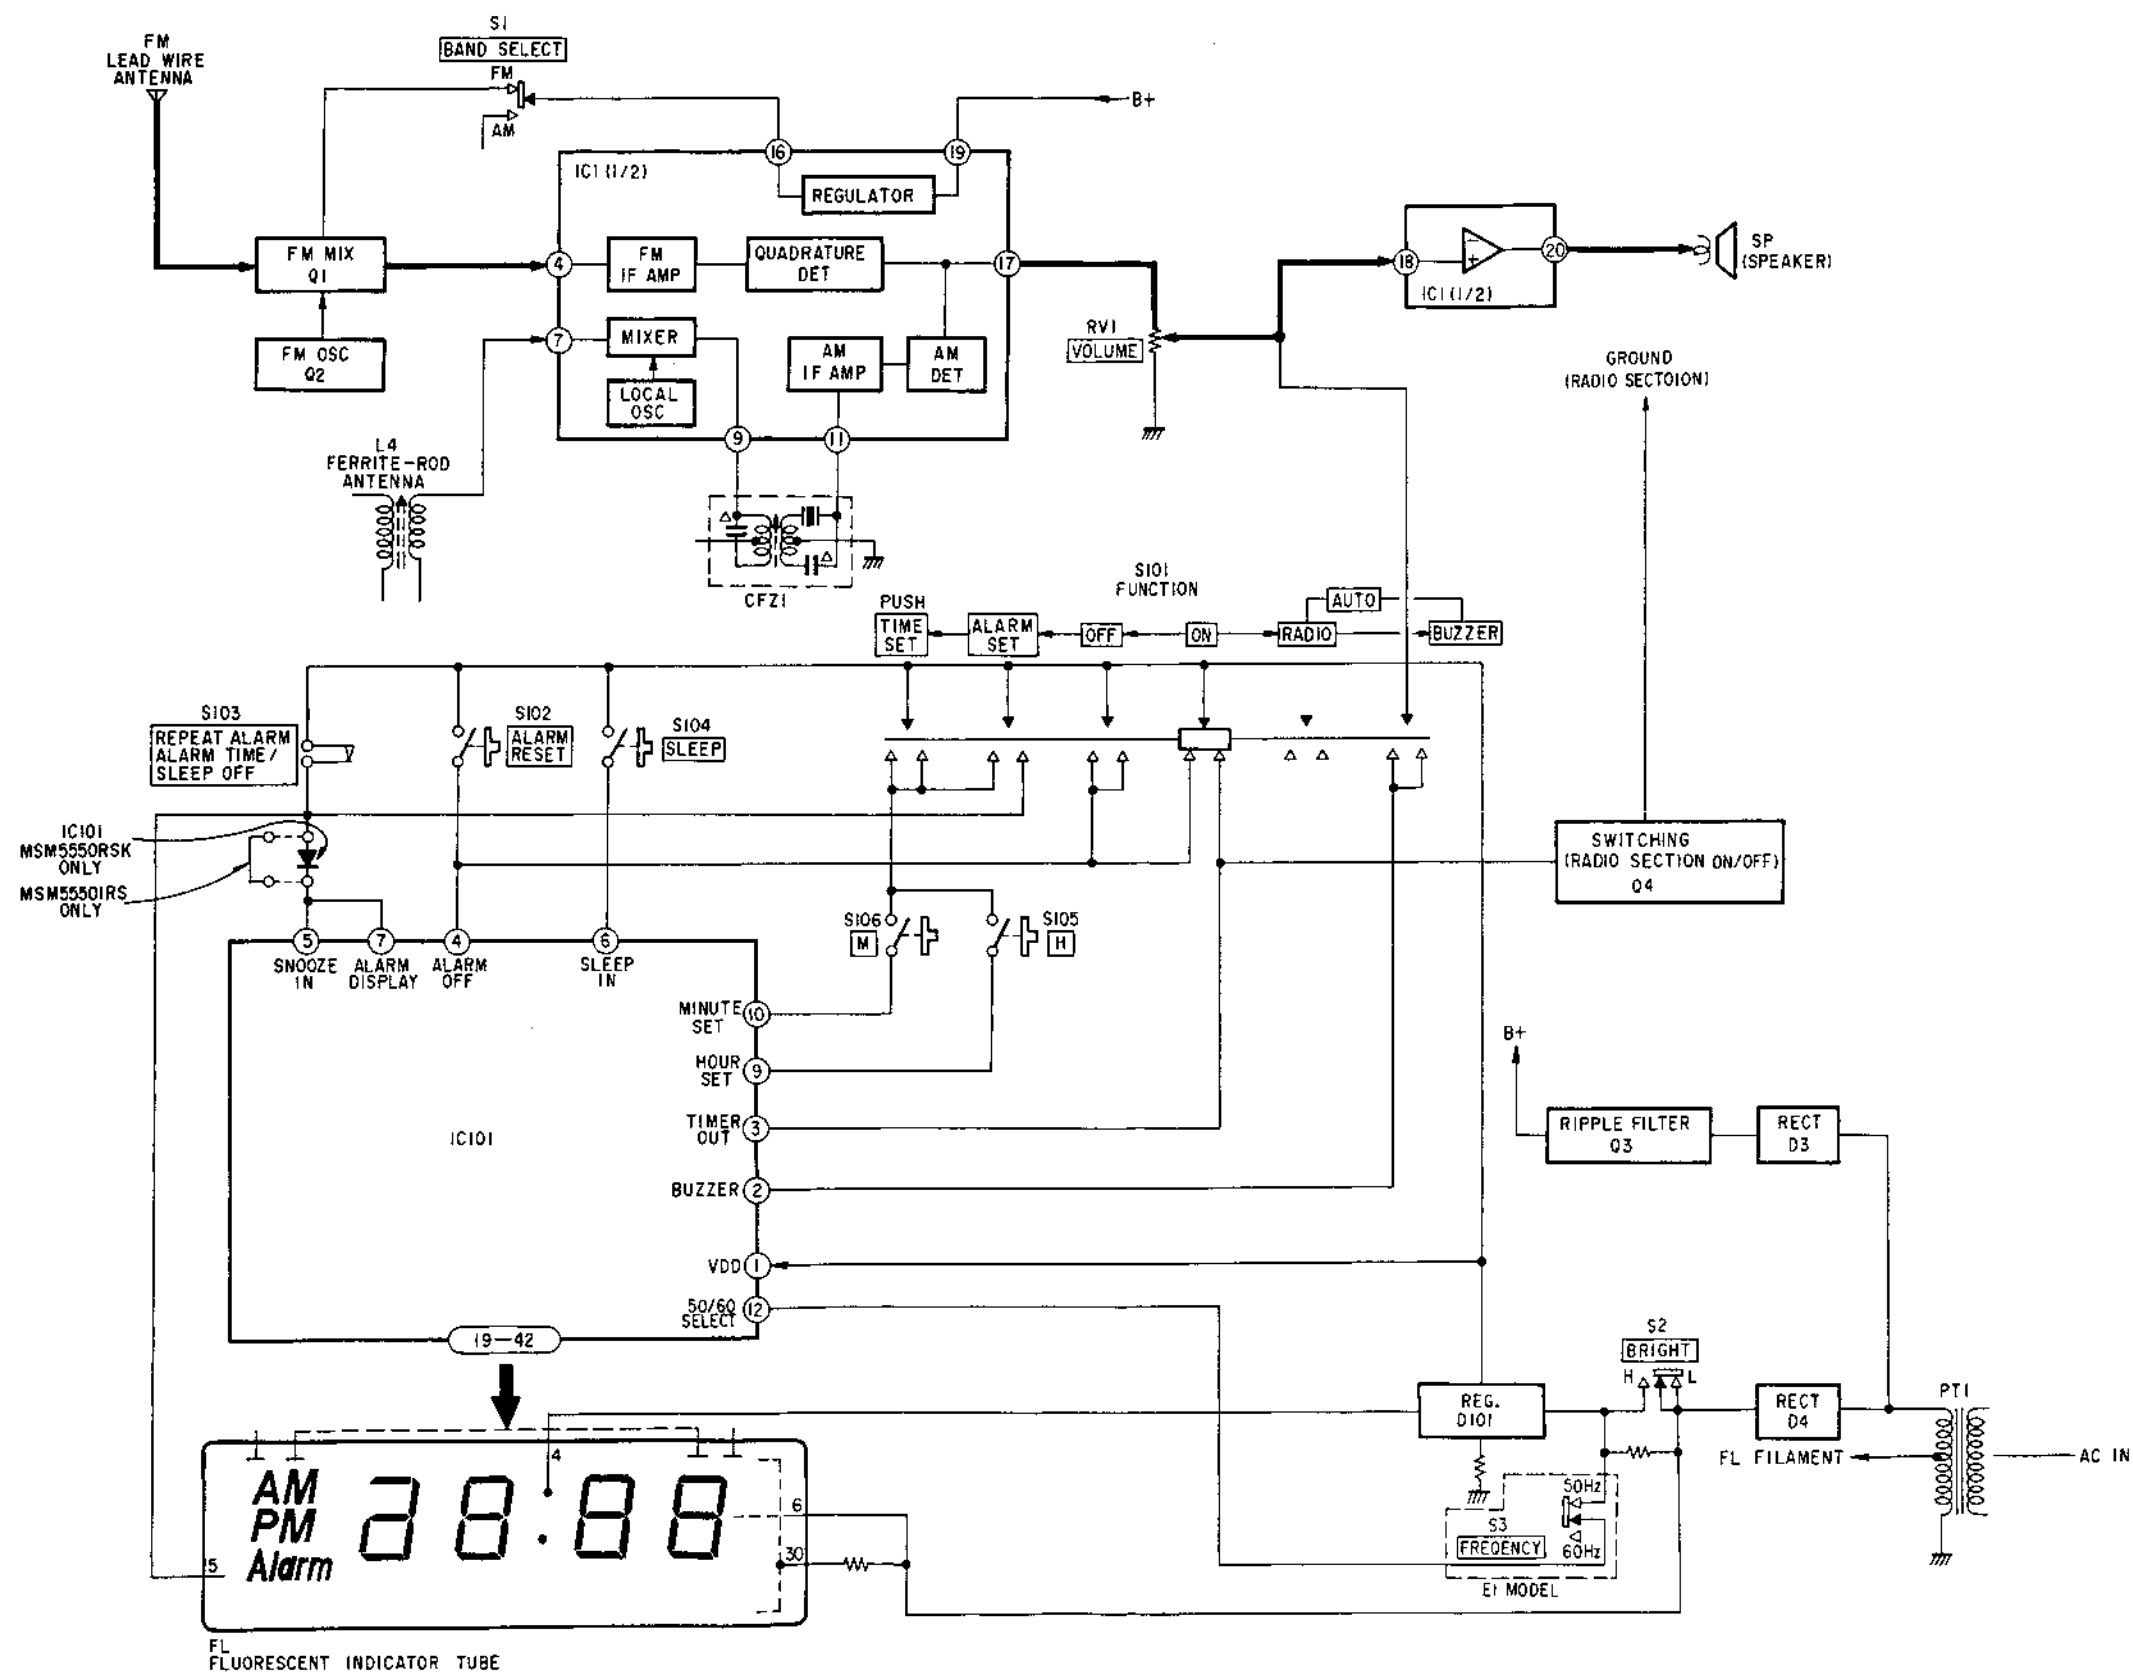

SECTION 2
DISASSEMBLY


2-1. REMOVAL

- Follow the disassembly procedure in the numerical order given.

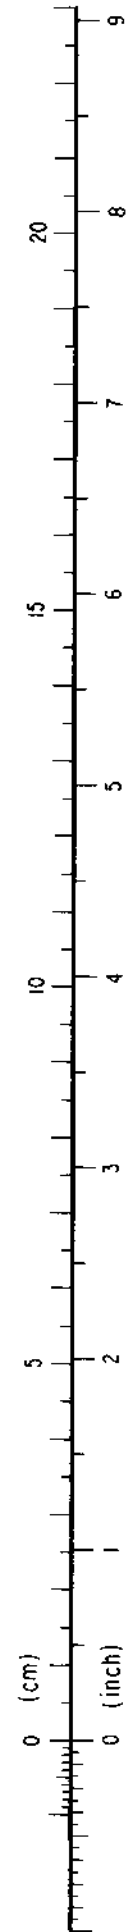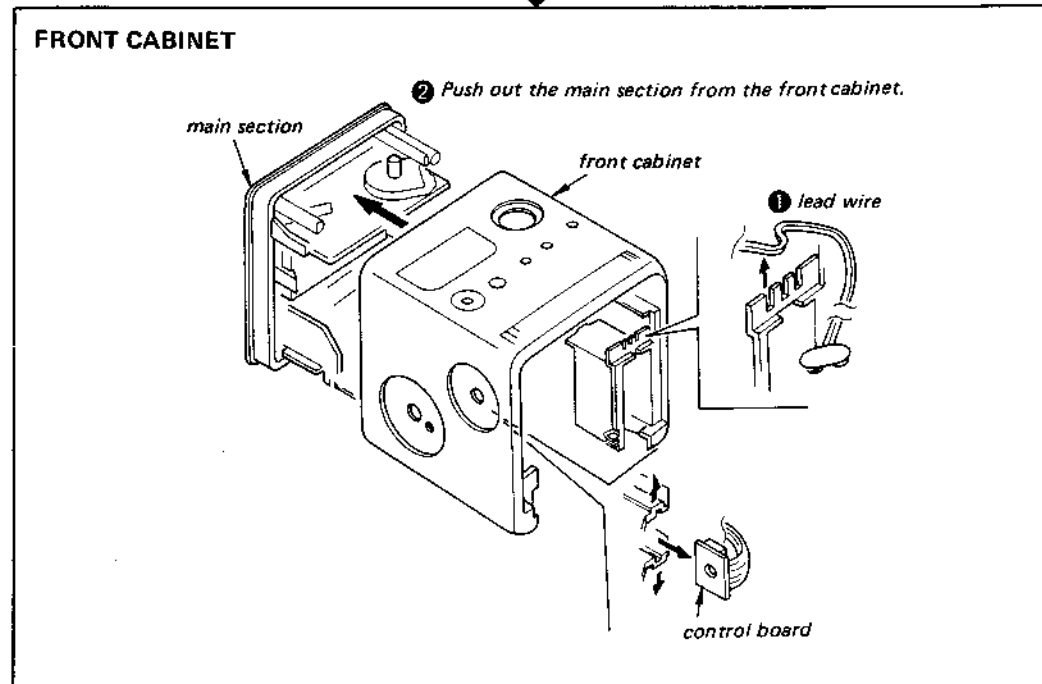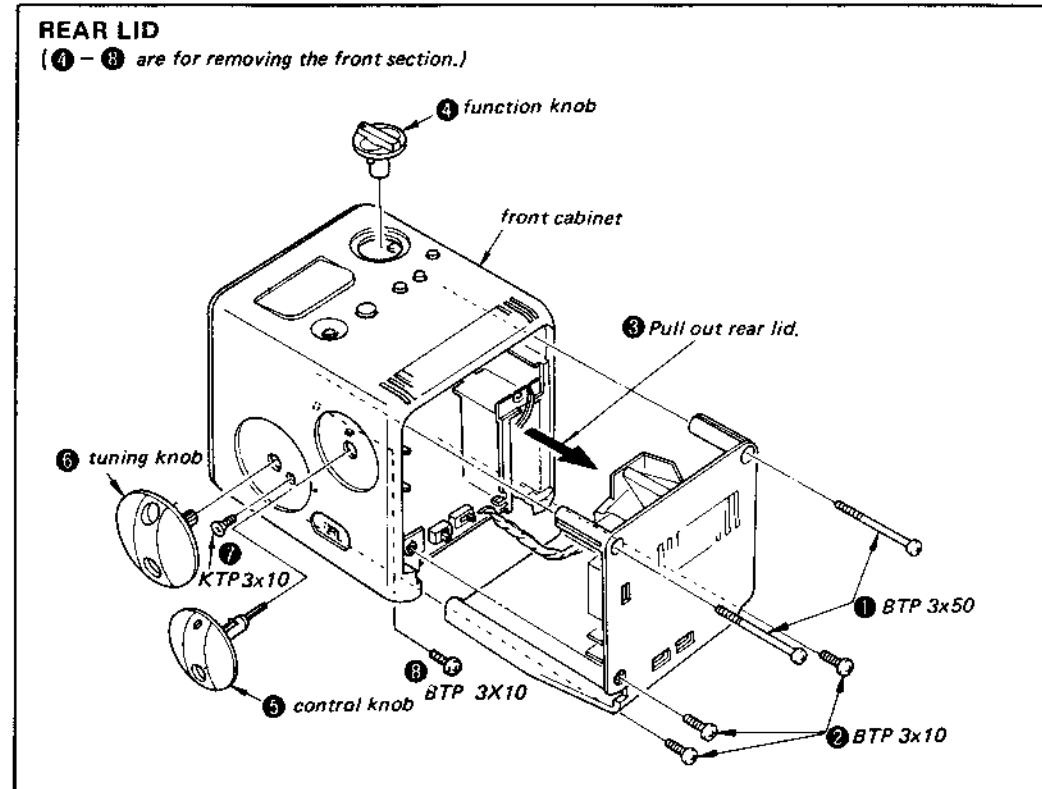


2-2. DIAL CORD STRINGING

1) Dial Cord Preparation

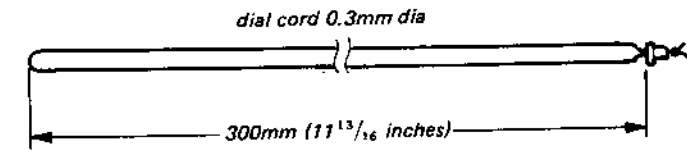


2) Dial Cord Stringing

- 1 Turn the tuning drum fully counter-clockwise.
String the dial cord in the numerical order given.

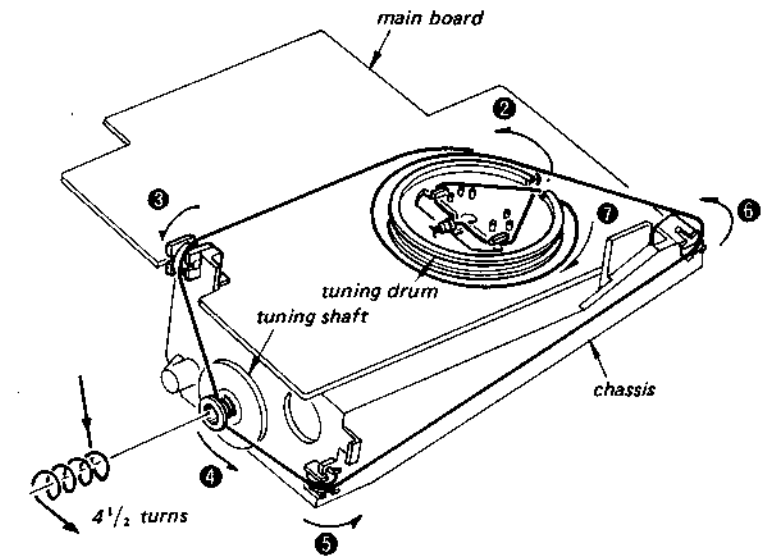



3) Dial Pointer Setting

- Turn the dial drum fully counterclockwise

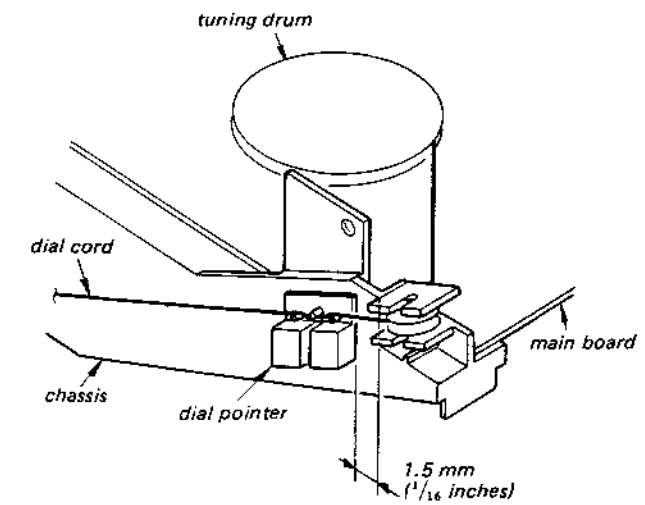



**SECTION 3
ADJUSTMENTS**

AM

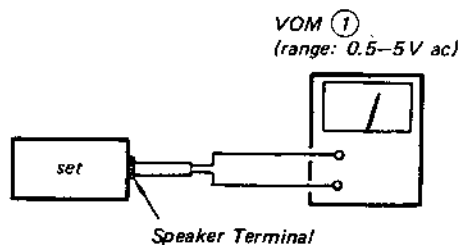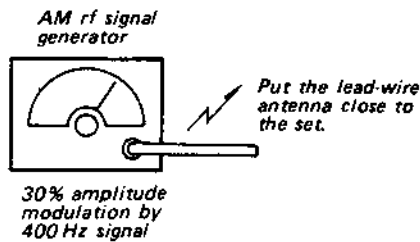

• Repeat the procedures in each adjustment several times, and the frequency coverage and tracking adjustments should be finally done by the trimmer capacitors.

FM

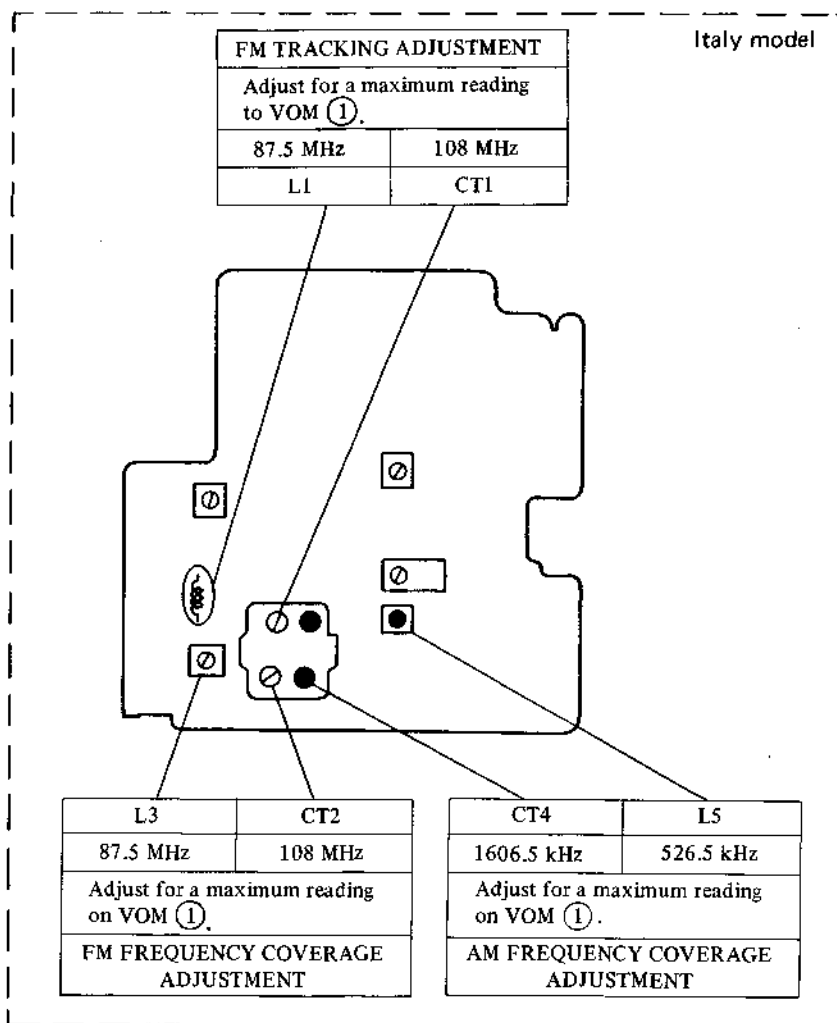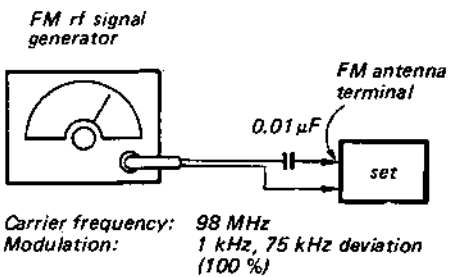

FM IF ALIGNMENT 1 (10.7 MHz with modulation)	
Adjust for a maximum reading on VOM ①.	
T1	T2

FM TRACKING ADJUSTMENT	
Adjust for a maximum reading to VOM ①.	
108.5 MHz	CT1
87.1 MHz ((87.35 MHz))	L1
(()): AEP model	
No mark: US, Canadian, E, AUS model	

FM FREQUENCY COVERAGE ADJUSTMENT	
Adjust for a maximum reading on VOM ①.	
87.1 MHz ((87.35 MHz))	L3
108.5 MHz	CT2
(()): AEP model	
No mark: US, Canadian, E, AUS model	

AM IF ALIGNMENT	
Adjust for a maximum reading on VOM ①.	
CFZ 1	455kHz

L4	CT3
620kHz	1400kHz
Adjust for a maximum reading on VOM ①.	
AM TRACKING ADJUSTMENT	

CT4	L5
1680kHz	520kHz
Adjust for a maximum reading on VOM ①.	
AM FREQUENCY COVERAGE ADJUSTMENT	




US, Canadian, AEP, E, AUS model

SECTION 4
DIAGRAMS





4-1. MOUNTING DIAGRAM
— Conductor Side —

• Refer to page 15 for the block diagrams of ICs and semiconductor lead layouts.

IC	IC101										3	4	1	2	IC	
Q											IC1				Q	
D	102										101	2	4	5	3	D

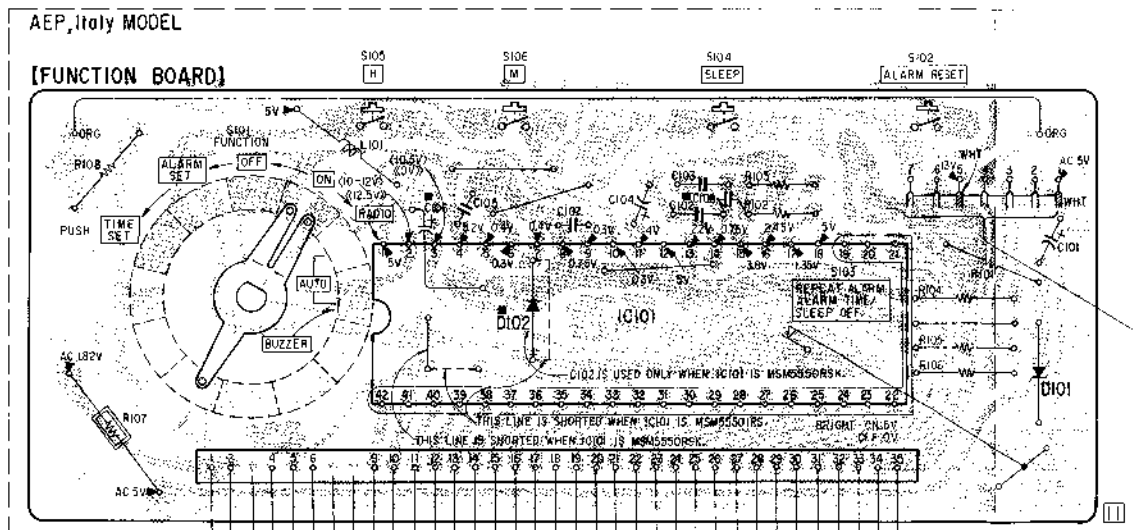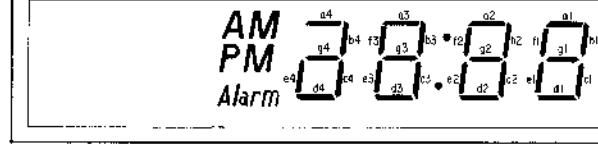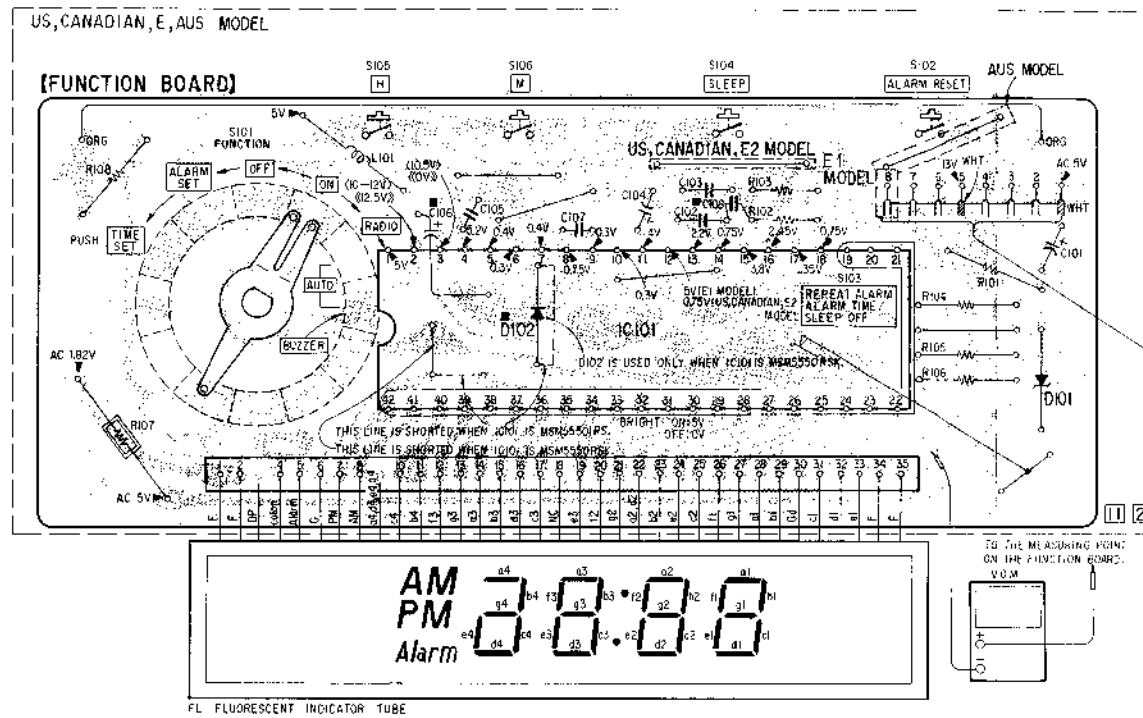


• Color code of sleeving over the end of the jacket.

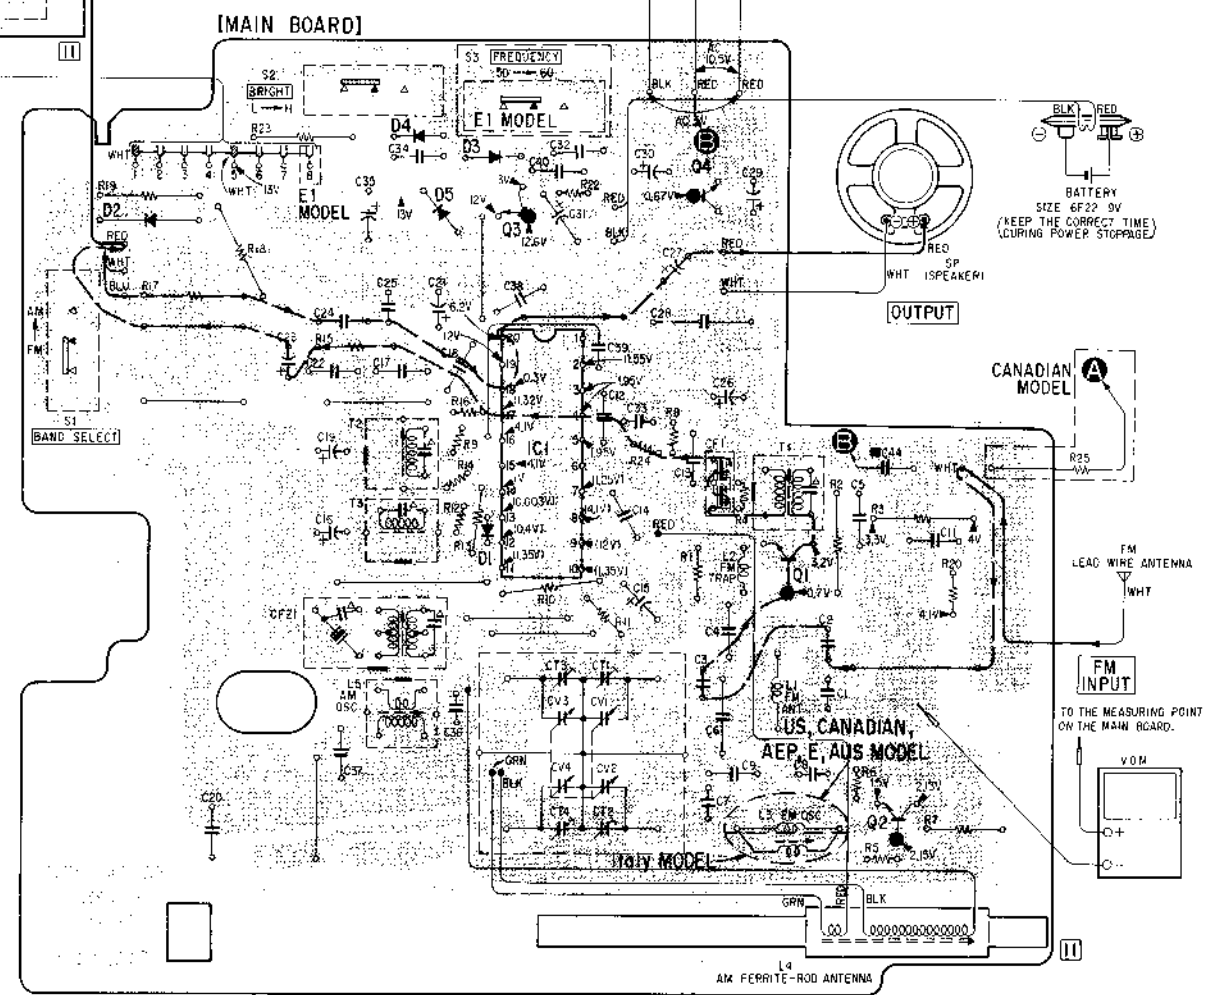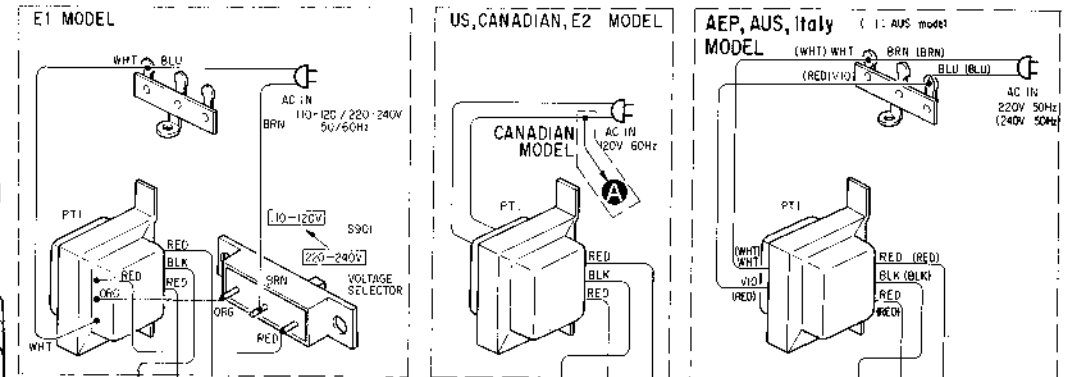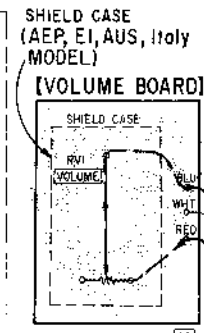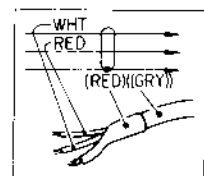

- — : parts extracted from the component side.
- — : parts extracted from the conductor side.
- ■ : part mounted on the conductor side.
- [] : indicates side identified with part number.
- ▲ : nonflammable resistor.
- [] : B+ pattern
- — : signal path

ICF-C10W ICF-C10W

4-2. SCHEMATIC DIAGRAM

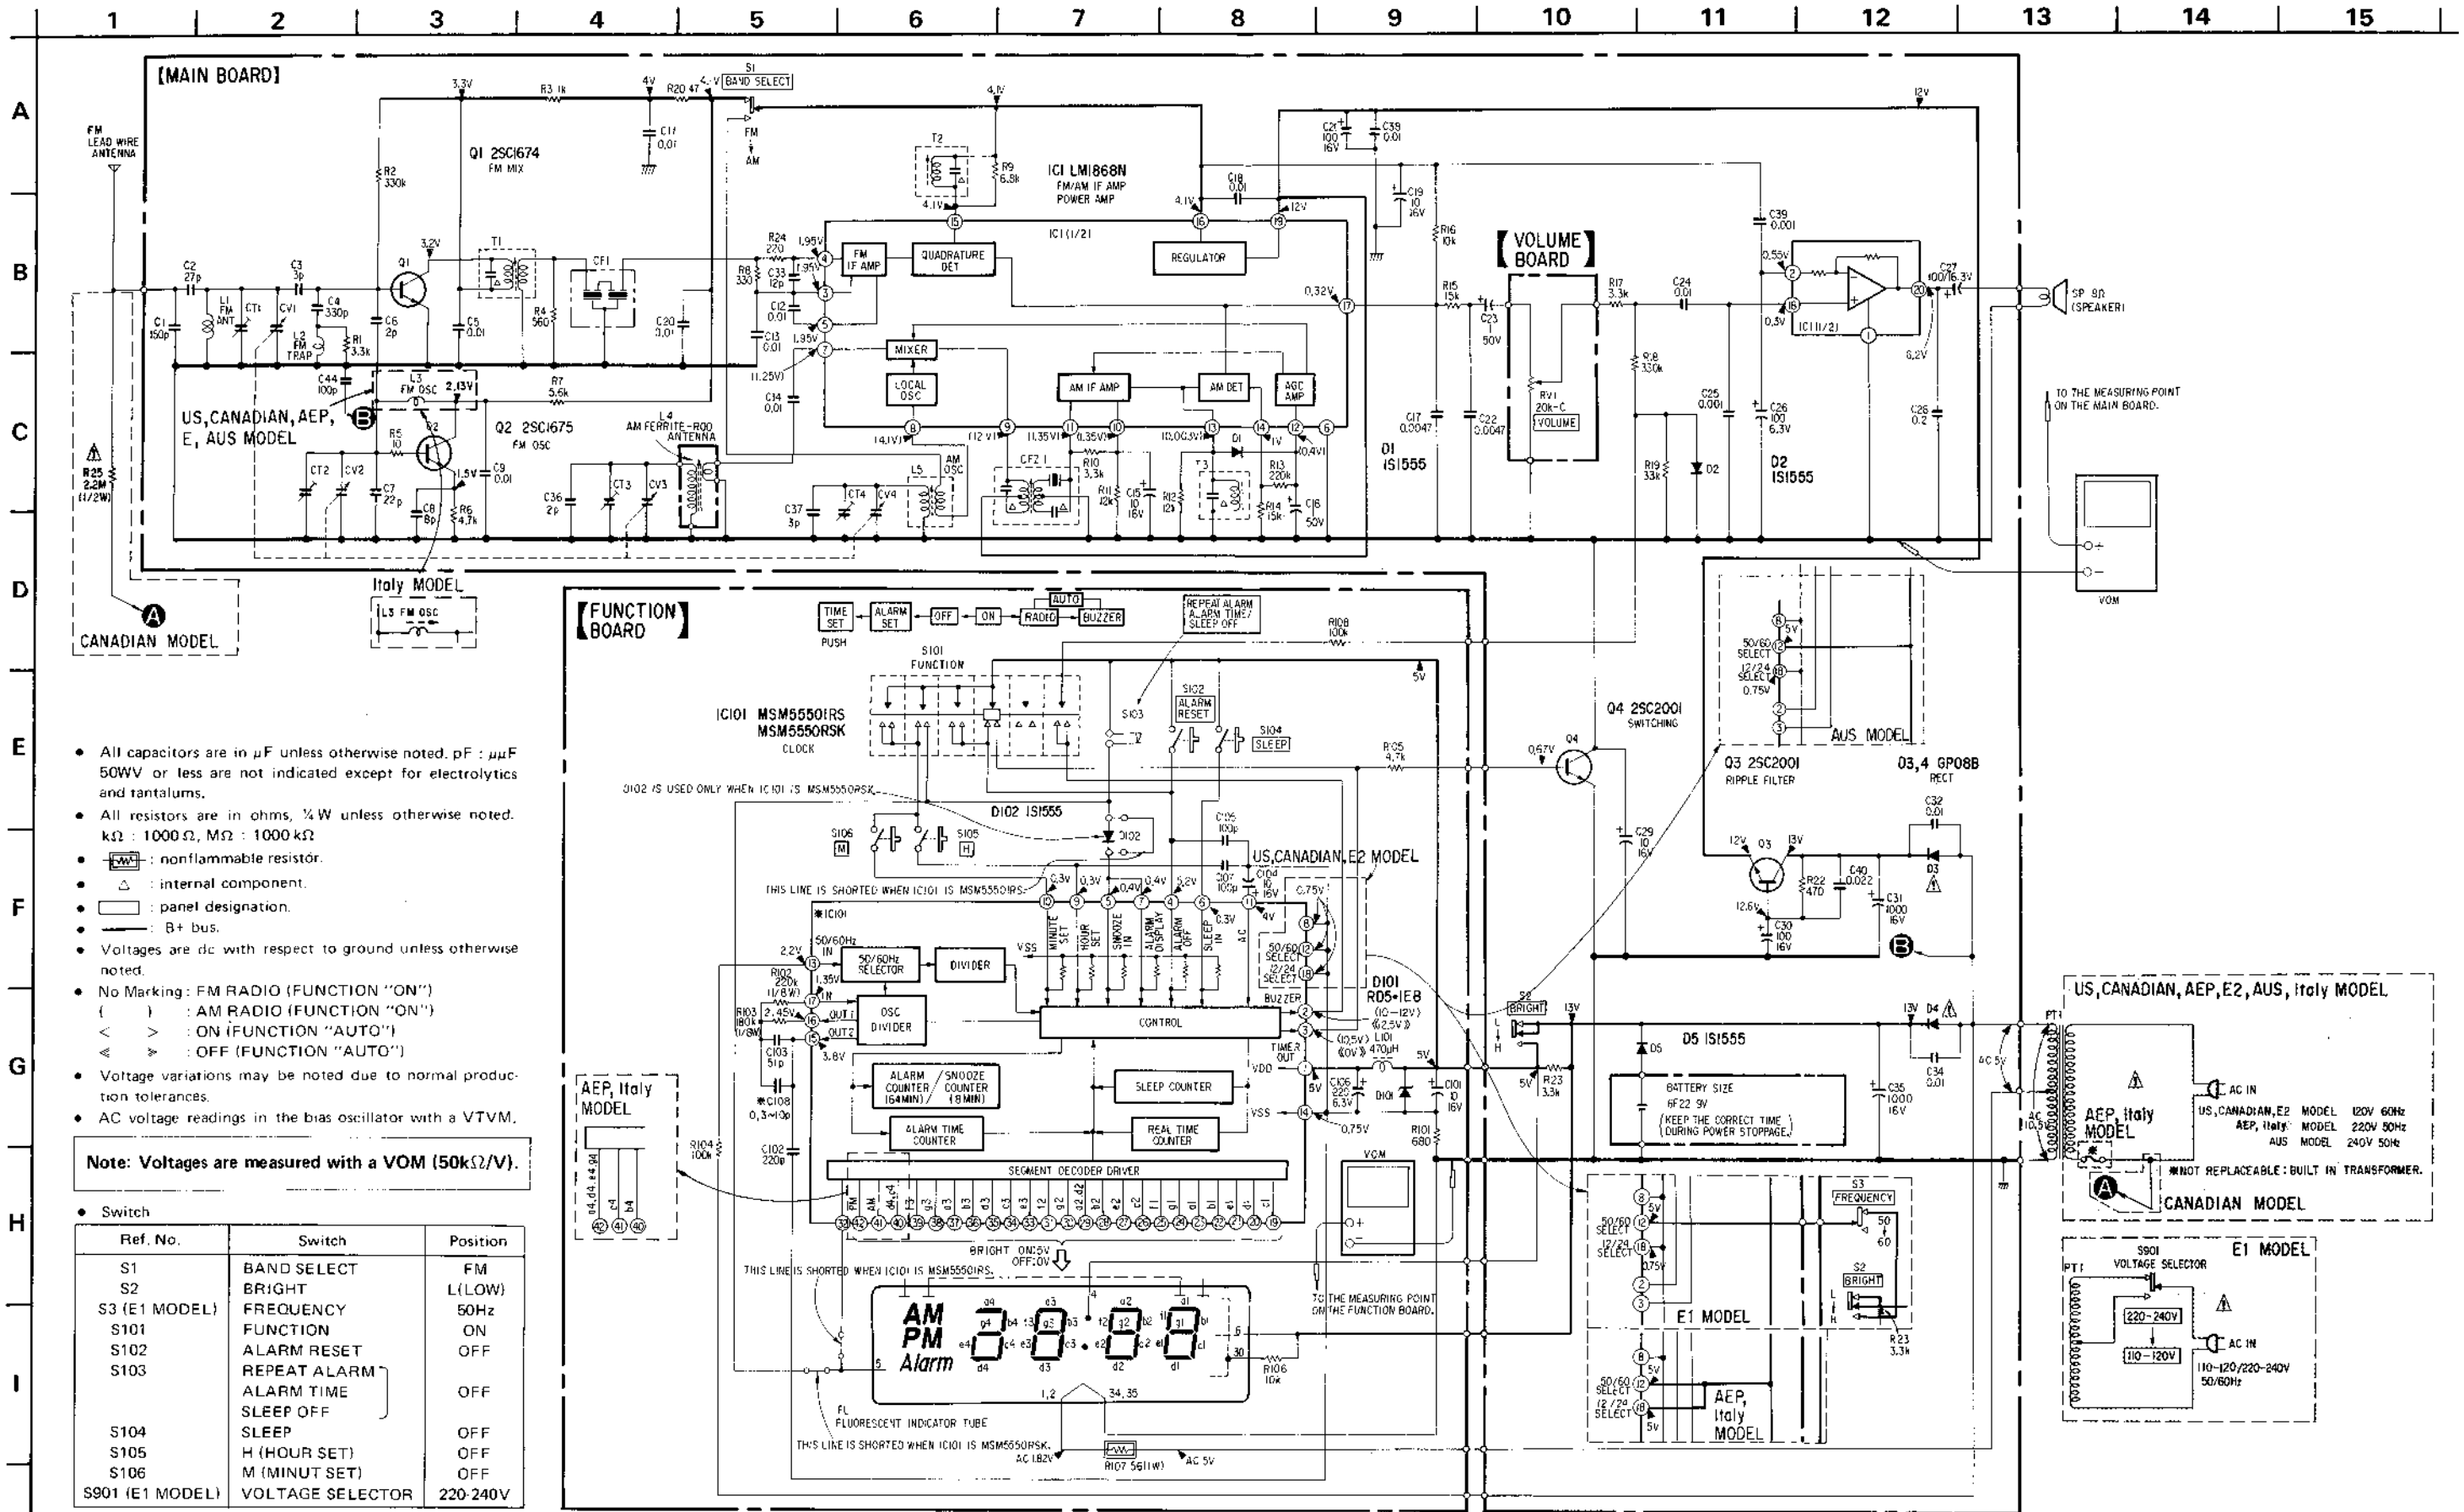

- All capacitors are in μF unless otherwise noted. $\text{pF} : \mu\text{F} \times 10^{-6}$
- All resistors are in ohms, $\frac{1}{4}W$ unless otherwise noted. $k\Omega : 1000 \Omega$, $M\Omega : 1000 k\Omega$
- \square : nonflammable resistor.
- \triangle : internal component.
- \square : panel designation.
- --- : B+ bus.
- Voltages are dc with respect to ground unless otherwise noted.
- No Marking: FM RADIO (FUNCTION "ON")
() : AM RADIO (FUNCTION "ON")
< > : ON (FUNCTION "AUTO")
< > : OFF (FUNCTION "AUTO")
- Voltage variations may be noted due to normal production tolerances.
- AC voltage readings in the bias oscillator with a VTVM.

Note: Voltages are measured with a VOM (50k Ω/V).

Ref. No.	Switch	Position
S1	BAND SELECT	FM
S2	BRIGHT	L (LOW)
S3 (E1 MODEL)	FREQUENCY	50Hz
S101	FUNCTION	ON
S102	ALARM RESET	OFF
S103	REPEAT ALARM ALARM TIME SLEEP OFF	OFF
S104	SLEEP	OFF
S105	H (HOUR SET)	OFF
S106	M (MINUT SET)	OFF
S901 (E1 MODEL)	VOLTAGE SELECTOR	220-240V

* When replacing IC101 refer to the page 16, because the capacitance value of C108 is determined by IC101.


Note: The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par une trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

SECTION 5
EXPLODED VIEWS AND PARTS LIST

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The construction parts of an assembled part are indicated with a collation number in the remark column.

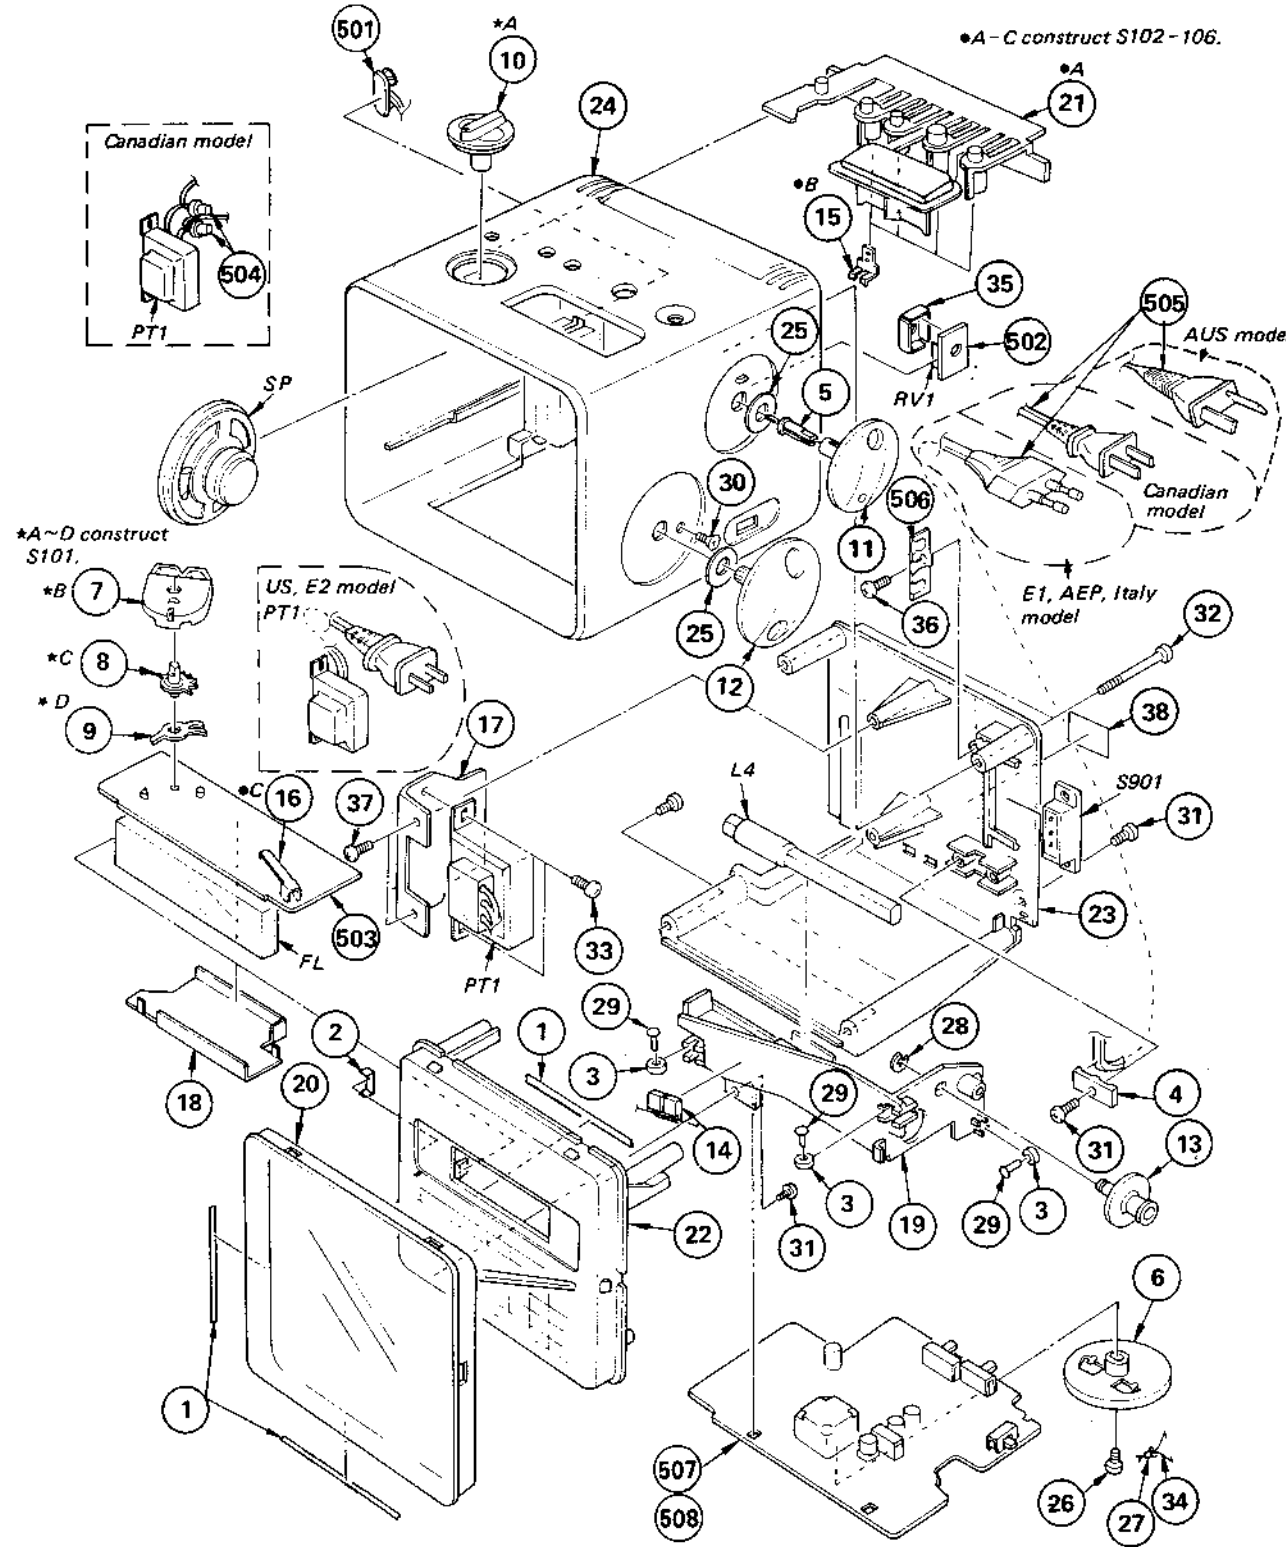

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
1	2-242-926-01	CUSHION, SIDE PLATE		23	3-985-537-01	{WHITE:US,Canadian,AUS}...LID, REAR	
2	3-831-441-11	CUSHION (25X5X0.3)			3-985-617-85	{WHITE:E}...LID, REAR	
3	3-834-636-00	PULLEY			3-985-682-01	{WHITE:Italy,AEP}...LID, REAR	
4	*3-884-408-00	STOPPER, CORD			3-985-537-31	{SILVER:E2}...LID, REAR	
5	3-886-531-00	SHAFT, CONTROL			3-985-537-61	{SILVER:E1}...LID, REAR	
6	3-887-128-00	DRUM, TUNING			3-985-682-11	{SILVER:Italy,AEP}...LID, REAR	
7	3-888-205-00	HOLDER, FUNCTION			3-985-537-15	{RED:AEP}...LID, REAR	
8	3-888-206-00	SHAFT, CLICK			3-985-537-25	{RED:Canadian}...LID, REAR	
9	3-888-207-00	PLATE, CONTACT			3-985-617-95	{RED:E}...LID, REAR	
					3-985-682-21	{RED:US,Italy,AUS}...LID, REAR	
10	3-985-678-01	{WHITE}...KNOB, FUNCTION			3-985-682-31	{BLACK}...LID, REAR	
	3-985-678-11	{SILVER}...KNOB, FUNCTION			3-985-682-41	{BLUE}...LID, REAR	
	3-985-678-21	{RED}...KNOB, FUNCTION			3-985-682-51	{PINK}...LID, REAR	
	3-985-678-31	{BLACK}...KNOB, FUNCTION		24	3-985-538-01	{WHITE:US,Canadian}...CABINET (MAIN)	
	3-985-678-41	{BLUE}...KNOB, FUNCTION			3-985-538-95	{WHITE:AUS,E}...CABINET (MAIN)	
	3-985-678-51	{PINK}...KNOB, FUNCTION			3-985-685-01	{WHITE:Italy,AEP}...CABINET (MAIN)	
11	3-985-680-01	{WHITE}...KNOB, CONTROL			3-985-538-91	{SILVER:E1/2}...CABINET (MAIN)	
	3-985-680-11	{SILVER}...KNOB, CONTROL			3-985-685-11	{SILVER:Italy,AEP}...CABINET (MAIN)	
	3-985-680-21	{RED}...KNOB, CONTROL			3-985-538-25	{RED:Canadian}...CABINET (MAIN)	
	3-985-680-31	{BLACK}...KNOB, CONTROL			3-985-538-35	{RED:AEP}...CABINET (MAIN)	
	3-985-680-41	{BLUE}...KNOB, CONTROL			3-985-538-85	{RED:E}...CABINET (MAIN)	
	3-985-680-51	{PINK}...KNOB, CONTROL			3-985-685-21	{RED:US,Italy,AUS}...CABINET (MAIN)	
12	3-985-679-01	{WHITE}...KNOB, TUNING			3-985-685-31	{BLACK}...CABINET (MAIN)	
	3-985-679-11	{SILVER}...KNOB, TUNING			3-985-685-41	{BLUE}...CABINET (MAIN)	
	3-985-679-21	{RED}...KNOB, TUNING			3-985-685-51	{PINK}...CABINET (MAIN)	
	3-985-679-31	{BLACK}...KNOB, TUNING		25	3-985-625-00	WASHER, KNOB	
	3-985-679-41	{BLUE}...KNOB, TUNING		26	7-621-770-87	SCREW +P 2.6X5	
	3-985-679-51	{PINK}...KNOB, TUNING		27	*7-623-605-01	EYELET, 1.3X2.5	
13	3-985-526-00	SHAFT, TUNING		28	7-624-108-04	STOP RING 4.0, TYPE -E	
14	3-985-527-00	POINTER		29	7-625-712-80	RIVET 2X7	
15	3-985-528-00	SPRING		30	7-685-247-14	SCREW +KTP 3X10 TYPE2 NON-SLIT	
16	3-985-529-00	SPRING		31	7-685-547-14	SCREW +BTP 3X10 TYPE2 N-S	
17	*3-985-530-00	BRACKET, TRANSFORMER		32	3-844-665-00	SCREW, REAR COVER	
18	*3-985-532-00	PLATE (C), SHIELD		33	7-685-750-01	SCREW +PTT 3X5 (S)	
19	3-985-533-00	CHASSIS		34	9-911-825-32	STRING, DIAL	
20	3-985-534-00	PLATE, TRANSPARENT		35	*3-985-607-00	CASE, SHIELD	
21	3-985-681-01	{WHITE}...BUTTON, CONTROL		36	7-685-145-14	SCREW +BTP 3X6 TYPE2 N-S	
	3-985-681-11	{SILVER}...BUTTON, CONTROL		37	7-685-549-14	SCREW +BTP 3X14	
	3-985-681-21	{RED}...BUTTON, CONTROL		38	3-985-601-01	{E1}...LABEL, MODEL NUMBER	
	3-985-681-31	{BLACK}...BUTTON, CONTROL			3-985-602-01	{E2}...LABEL, MODEL NUMBER	
	3-985-681-41	{BLUE}...BUTTON, CONTROL			3-985-603-11	{AEP,Italy}...LABEL, MODEL NUMBER	
	3-985-681-51	{PINK}...BUTTON, CONTROL			3-985-604-11	{AUS}...LABEL, MODEL NUMBER	
22	3-985-536-01	{US,Canadian,E1/2,AUS}...SCALE, DIAL					
	3-985-536-41	{AEP,Italy}...SCALE, DIAL					

SECTION 6
ELECTRICAL PARTS LIST

NOTE:

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:

MF:µF, PF:µµF.

RESISTORS

- All resistors are in ohms.
- F : nonflammable

COILS

MMH : mH, UH : µH

SEMICONDUCTORS

In each case, U : µ, for example:

UA...: µA..., UPA...: µPA..., UPC...: µPC, UPD...: µPD...

The components identified by shading and mark **A** are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque **A** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

ELECTRICAL PARTS

Ref.No.	Part No.	Description
501	1-535-253-00	SNAP, BATTERY
502	*1-607-900-00	PC BOARD, VOLUME
503	*1-607-901-00	(FOR 12H/US,Canadian,E1/2,AUS) ...PC BOARD, FUNCTION
	*1-608-139-00	(FOR 24H/AEP,Italy) ...PC BOARD, FUNCTION
504	A-1-534-506-00	(Canadian)...CONNECTION PRESS TERMINAL
505	A-1-534-815-00	(AUS)...CORD POWER
506	A-1-561-983-00	(Canadian)...CORD POWER
507	A-1-551-958-00	(E1/AEP,Italy)...CORD POWER
508	A-1-536-401-00	(AUS/E1/AEP,Italy)...CORD POWER
		TERMINAL STRIP
507	*A-3660-381-A	(US,Canadian,E2,AEP)...MOUNTED PCB, MAIN
	*A-3660-384-A	(E1)...MOUNTED PCB, MAIN
	*A-3660-411-A	(AUS)...MOUNTED PCB, MAIN
	*A-3660-647-A	(Italy)...MOUNTED PCB, MAIN
508	*1-607-899-00	(Italy)...PC BOARD, MAIN
C1	1-101-361-00	CERAMIC 150PF 5% 50V
C2	1-102-961-00	CERAMIC 27PF 5% 50V
C3	1-102-936-00	CERAMIC 3PF 0.25PF 50V
C4	1-102-820-00	CERAMIC 330PF 5% 50V
C5	1-101-004-00	CERAMIC 0.01MF 50V
C6	1-102-935-00	CERAMIC 2PF 0.25PF 50V
C7	1-102-641-00	CERAMIC 22PF 5% 50V
C8	1-102-945-00	CERAMIC 8PF 1PF 50V
C9	1-161-055-00	CERAMIC 0.022MF 10% 25V
C11	1-101-004-00	CERAMIC 0.01MF 50V
C12	1-161-013-00	CERAMIC 0.01MF 10% 25V
C13	1-161-013-00	CERAMIC 0.01MF 10% 25V
C14	1-101-004-00	CERAMIC 0.01MF 50V
C15	1-123-356-00	ELECT 10MF 20% 16V
C16	1-123-380-00	ELECT 1MF 20% 50V
C17	1-161-047-00	CERAMIC 0.0047MF 10% 25V
C18	1-161-013-00	CERAMIC 0.01MF 10% 25V
C19	1-123-356-00	ELECT 10MF 20% 16V
C20	1-101-004-00	CERAMIC 0.01MF 50V
C21	1-123-333-00	ELECT 100MF 20% 16V
C22	1-161-047-00	CERAMIC 0.0047MF 10% 25V
C23	1-123-380-00	ELECT 1MF 20% 50V
C24	1-161-013-00	CERAMIC 0.01MF 10% 25V
C25	1-161-039-00	CERAMIC 0.001MF 10% 25V
C26	1-123-307-00	ELECT 100MF 20% 6.3V
C27	1-123-307-00	ELECT 100MF 20% 6.3V
C28	1-101-798-00	CERAMIC 0.2MF 12V
C29	1-123-356-00	ELECT 10MF 20% 16V

ELECTRICAL PARTS

Ref.No.	Part No.	Description
C30	1-123-333-00	ELECT 100MF 20% 16V
C31	1-123-324-00	ELECT 1000MF 20% 16V
C32	1-101-004-00	CERAMIC 0.01MF 50V
C33	1-102-949-00	CERAMIC 12PF 5% 50V
C34	1-101-004-00	CERAMIC 0.01MF 50V
C35	1-123-324-00	ELECT 1000MF 20% 16V
C36	1-102-935-00	CERAMIC 2PF 0.25PF 50V
C37	1-102-936-00	CERAMIC 3PF 0.25PF 50V
C38	1-101-004-00	CERAMIC 0.01MF 50V
C39	1-101-001-00	CERAMIC 0.001MF 50V
C40	1-101-005-00	CERAMIC 0.022MF 50V
C44	1-102-973-00	CERAMIC 100PF 5% 50V
C101	1-123-356-00	ELECT 10MF 20% 16V
C102	1-102-978-00	CERAMIC 220PF 5% 50V
C103	1-101-884-00	CERAMIC 56PF 5% 50V
C104	1-123-356-00	ELECT 10MF 20% 16V
C105	1-102-973-00	CERAMIC 100PF 5% 50V
C106	1-123-308-00	ELECT 220MF 20% 6.3V
C107	1-102-973-00	CERAMIC 100PF 5% 50V
*C108	1-102-807-00	CERAMIC 5PF 1PF 50V
C108	1-102-808-00	CERAMIC 6PF 1PF 50V
C108	1-102-944-00	CERAMIC 7PF 1PF 50V
C108	1-102-945-00	CERAMIC 8PF 1PF 50V
C108	1-102-946-00	CERAMIC 9PF 1PF 50V
C108	1-102-936-00	CERAMIC 3PF 0.25PF 50V
C108	1-102-937-00	CERAMIC 4PF 0.25PF 50V
C108	1-102-947-00	CERAMIC 10PF 5% 50V
CF1	1-527-795-71	FILTER, CERAMIC
CFZ1	1-403-163-00	CERAMIC FILTER
CT1-4	1-151-372-00	CAP, TUNING, POLYETHYLENE
CV1-4		
D1	8-719-815-55	DIODE 1S1555
D2	8-719-815-55	DIODE 1S1555
D3	8-719-200-02	DIODE 1N22
D4	8-719-200-02	DIODE 1N22
D5	8-719-815-55	DIODE 1S1555
D101	8-719-151-07	DIODE RD5.1E-B
D102	8-719-815-55	(USED ONLY IN 101 IS MSM5550RSK) ...DIODE 1S1555
FL	1-519-271-00	INDICATOR TUBE, FLUORESCENT
IC1	1-806-474-11	IC LM1868N
IC101	1-806-242-11	IC MSM55501RS (LSI)
IC101	8-759-955-52	IC MSM5550RSK
L1	*1-420-856-00	COIL, FM RF
L2	*1-409-293-00	COIL, AIR CORE

*1 See Note on page 4 for C108 replacement.

ICF-C10W

ELECTRICAL PARTS

Ref.No.	Part No.	Description
L3	1-406-214-11	(Italy)...COIL, FM OSCILLATION
L3	*1-425-795-00	(US,Canadian,AEP,E1/2,AUS) ...COIL, HIGH FREQ TRANSFORMER (FM)
L4	1-401-993-00	ANTENNA, FERRITE-ROD (MW)
L5	1-406-028-00	COIL, OSC (MW)
L101	1-408-096-00	MICRO INDUCTOR 470UH

P11	A-1-446-346-00	(US,E2)	TRANSFORMER, POWER
P11	A-1-446-496-00	(AEP,Italy)	TRANSFORMER, POWER
P11	A-1-446-811-00	(AUS)	TRANSFORMER, POWER
P11	A-1-447-353-00	(E1)	TRANSFORMER, POWER
*P11	A-1-3888-201-1	(Canadian)	TRANSFORMER, POWER

Q1	8-729-167-42	TRANSISTOR 2SC1674	
Q2	8-729-671-13	TRANSISTOR 2SC710-3	
Q3	8-729-100-13	TRANSISTOR 2SC2001	
Q4	8-729-100-13	TRANSISTOR 2SC2001	
R1	1-247-719-11	CARBON 3.3K 5% 1/4W	
R2	1-246-533-00	CARBON 330K 5% 1/4W	
R3	1-247-713-11	CARBON 1K 5% 1/4W	
R4	1-247-710-11	CARBON 560 5% 1/4W	
R5	1-247-688-11	CARBON 10 5% 1/4W	
R6	1-247-721-11	CARBON 4.7K 5% 1/4W	
R7	1-247-149-00	CARBON 5.6K 5% 1/4W	
R8	1-247-706-11	CARBON 330 5% 1/4W	
R9	1-247-151-00	CARBON 6.8K 5% 1/4W	
R10	1-247-719-11	CARBON 3.3K 5% 1/4W	
R11	1-249-459-11	CARBON 12K 5% 1/4W	
R12	1-249-459-11	CARBON 12K 5% 1/4W	
R13	1-246-529-00	CARBON 220K 5% 1/4W	
R14	1-249-460-11	CARBON 15K 5% 1/4W	
R15	1-249-460-11	CARBON 15K 5% 1/4W	
R16	1-247-725-11	CARBON 10K 5% 1/4W	
R17	1-247-719-11	CARBON 3.3K 5% 1/4W	
R18	1-246-533-00	CARBON 330K 5% 1/4W	
R19	1-247-726-11	CARBON 33K 5% 1/4W	
R20	1-247-696-11	CARBON 47 5% 1/4W	
R22	1-247-708-11	CARBON 470 5% 1/4W	
R23	1-247-719-11	CARBON 3.3K 5% 1/4W	
R24	1-247-704-11	CARBON 220 5% 1/4W	
R25	A-1-202-723-11	(Canadian)	RES, 30K 10% 2-20% 1/2W
R101	1-247-711-11	CARBON 680 5% 1/4W	
R102	1-246-529-00	CARBON 220K 5% 1/4W	
R103	1-246-527-00	CARBON 180K 5% 1/4W	
R104	1-249-469-11	CARBON 100K 5% 1/4W	
R105	1-247-721-11	CARBON 4.7K 5% 1/4W	
R106	1-247-725-11	CARBON 10K 5% 1/4W	
R107	1-213-128-00	METAL OXIDE 56 5% 1W F	
R108	1-249-469-11	CARBON 100K 5% 1/4W	

*2 This part includes not only power transformer and two screws but also bracket which is not necessary for ICF-C10W.
So when installing, remove the bracket.

ELECTRICAL PARTS

Ref.No.	Part No.	Description
RV1	1-226-824-00	RES, ADJ, CARBON 20K
S1	1-552-370-00	SWITCH, SLIDE
S2	1-552-370-00	SWITCH, SLIDE
S3	1-552-370-00	(E1)...SWITCH, SLIDE
S901	A-1-554-192-00	(E1)...SWITCH, SLIDE
S101	CONSISTED OF 7 8 9 10 IN GENERAL SECTION	
S102-S106	CONSISTED OF 21 15 IN GENERAL SECTION	
SP	1-503-082-00	SPEAKER
T1	1-403-872-00	I.F.T CONVERTER FM (SMALL TYPE)
T2	1-404-249-00	COIL, FM DETECTOR
T3	1-404-408-00	COIL, DETECTOR IFT

ACCESSORY & PACKING MATERIAL

Part No.	Description
*3-701-999-00	LABEL, SERIAL NUMBER
3-703-390-01	(US)...INSTRUCTION
3-703-920-01	(RED).....LABEL, COLOR
3-703-921-01	(SILVER)...LABEL, COLOR
3-703-923-01	(WHITE)...LABEL, COLOR
3-985-612-00	(US,E1,Canadian,AEP,E2,Italy)...CUSHION
3-985-622-21	MAT, MIRROR, PROTECTION SHEET
3-985-611-11	(US,Canadian)...INDIVIDUAL CARTON
3-985-620-00	(E1/2,AUS).....INDIVIDUAL CARTON
3-985-623-00	(AEP,Italy).....INDIVIDUAL CARTON
3-985-655-01	LABEL, C/C
3-995-928-11	(AEP,Italy).....MANUAL, INSTRUCTION
3-995-928-21	(US,Canadian)...MANUAL, INSTRUCTION
3-995-928-31	(Canadian).....MANUAL, INSTRUCTION
3-995-928-51	(E1/2,AUS).....MANUAL, INSTRUCTION
3-995-928-61	(Italy).....MANUAL, INSTRUCTION

The components identified by shading and mark **A** are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque **A** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Sony Corporation