


ICF-C103L

SERVICE MANUAL

*AEP Model
UK Model*

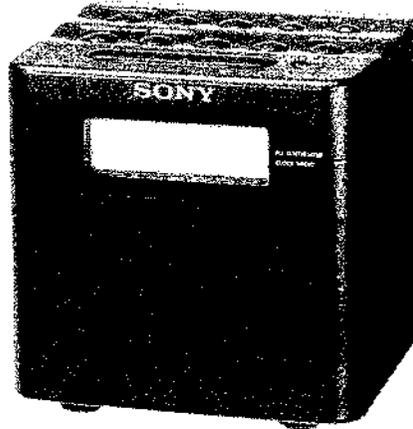

SPECIFICATIONS

| | |
|--------------------|---|
| Frequency range | FM : 87.5 – 108 MHz MW : 531 – 1,602 kHz LW : 153 – 281 kHz Intermediate frequency FM : 10.7 MHz AM : 450 kHz |
| Scan step | FM : 0.05* MHz (fixed) MW : 9 kHz (fixed) LW : 2 kHz \rightleftarrows 7 kHz * The frequency display is raised or lowered by steps of 0.1 MHz. (Example: Frequency 88.05 MHz is displayed as "88.0 MHz".) |
| Antennas | FM: FM wire antenna MW/LW: Built-in ferrite bar antenna |
| Speaker | Approx. 6.6 cm (2 5/8 inches) dia. |
| Power output | 120 mW (at 10% harmonic distortion) |
| Power requirements | 240 V AC, 50 Hz |
| Dimensions | Approx. 115 x 110 x 105 mm (w/h/d) (4 5/8 x 4 3/8 x 4 1/4 inches) incl. projecting parts and controls |
| Weight | Approx. 590 g (1 lb 5 oz) |

Design and specifications are subject to change without notice.

Note

This appliance conforms with EEC Directive 87/308/EEC regarding interference suppression.


**FM/MW/LW PLL SYNTHESIZED
CLOCK RADIO
SONY®**

SAFETY-RELATED COMPONENT WARNING!!
COMPONENTS IDENTIFIED BY MARK  OR DOTTED LINE WITH MARK  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

SECTION 1 GENERAL


This section is extracted from instruction manual.

Location of Controls

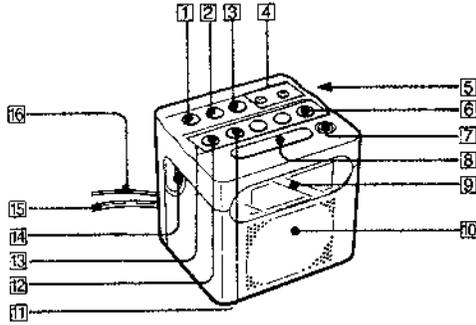

- 1 ALARM RESET/RADIO OFF button
- 2 SLEEP/RADIO ON button
- 3 BAND button
- 4 TIME SET/TUNE (tuning) + and - buttons
- 5 VOL (volume) control (right side)
- 6 ALARM MODE button
- 7 TIMER (count down timer) button
- 8 REPEAT ALARM/SLEEP OFF bar
- 9 Display window
- 10 Speaker
- 11 **B BUZZER** ALARM button
- 12 **A RADIO** ALARM (WAKE UP STATION) button
- 13 Preset number 1 - 5 buttons
- 14 ENTER/CLOCK button
- 15 AC power cord
- 16 FM wire antenna

Display window

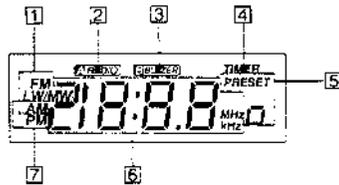

Display window


- 1 Band indication
- 2 **A RADIO** alarm indication
- 3 **B BUZZER** alarm indication
- 4 TIMER indication
- 5 PRESET number indication
- 6 Time/frequency indication
- 7 AM/PM indication



6

7

Setting the Time

After connecting the AC power cord, be sure to set the time.

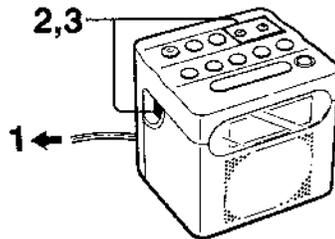

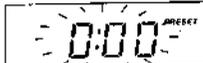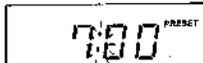
- 1 **Connect the AC power cord to a wall outlet.**
Time indication appears and flashes in the display window. 
- 2 **While keeping the ENTER/CLOCK button pressed, press the TIME SET/TUNE + or - button to set the time.**
The + button advances the hour and minute digits and the - button reverses them. Keep pressing the + or - button to advance or reverse the digit rapidly. 
- 3 **Release the ENTER/CLOCK button.**
The clock starts operating.

12-hour system
AM 12:00 = midnight
PM 12:00 = noon


Note on the time indication

When the radio is on, ":" of the time indication is lit, and when the radio is off, the ":" is flashing.

Radio is on

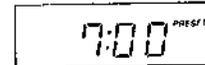

Radio is off.

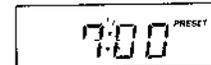



Zero second adjustment

At step 3, release the ENTER/CLOCK button with the time signal.

8

9

Radio Operation (Manual Tuning)
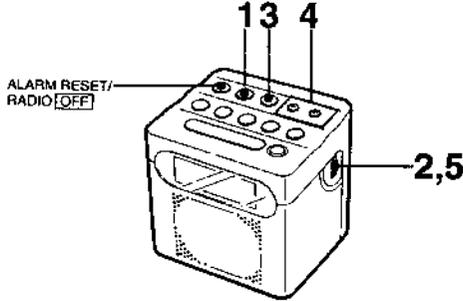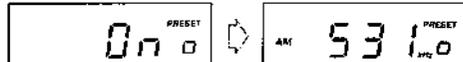
| | |
|---|---|
|  <p>1 Press the SLEEP/RADIO ON button. The band, frequency and the preset number of the station before the radio was turned off appear in the display window. After 10 seconds, the indication becomes the current time.</p> | <p>2 Turn the VOL control a little to get sound.</p> <p>3 Press the BAND button to select the band. Each press of the BAND button changes the band in the following order.</p> <p style="text-align: center;">← LW → MW → FM →</p> <p>(The display window shows the last frequency chosen in each band.)</p>  |
|  <p>4 Tune in the station you want by pressing the TIME SET/TUNE + or - button. The FM tuning interval is set to 0.05 MHz and the AM tuning interval is set to 9 kHz. (The FM frequency indication changes every 0.1 MHz.) The LW tuning interval alternates between 2 kHz and 7 kHz. A beep sounds at the band edge.</p> <p>5 Adjust volume.</p> | |

10

11

Radio Operation (Manual Tuning)

To turn off the radio

Press the **ALARM RESET/RADIO OFF** button.


To improve reception

FM: Extend the FM wire antenna fully to increase the FM sensitivity.

MW/LW: Since the reception is affected by the position of the radio, rotate the unit horizontally for optimum reception.

For the customers supplied with an FM antenna coupler

Pinch the FM wire antenna and the AC power cord together with the coupler supplied and connect it to a wall FM antenna terminal for optimum FM reception.

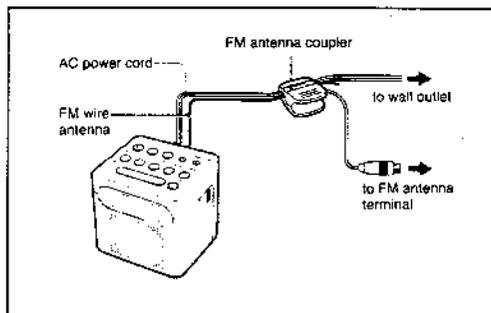


12

To check the station you are listening to

Press the **+** button lightly. The band and frequency appear for 10 seconds.

Notes

- When you turn on the radio or change the frequency, the display shows the band and frequency for 10 seconds, then it shows the current time.
- When you tune in the frequency which is not included in the preset stations, the PRESET number in the display shows □ (out).

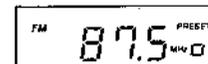

- If the **ALARM** alarm time comes while listening to the radio, the station changes to that preset in number 1.

13

Radio Operation (Preset Tuning)


You can preset up to five FM/MW/LW stations (one station for each number button 1 to 5).

Note

When you use the radio alarm, preset the station you want for the alarm in preset button 1, as the PRESET 1 station is the wake up station.


Presetting the Station


Example: To set MW 1,260 kHz in preset button 2

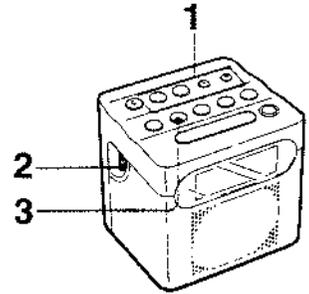

- 1** Tune in the MW 1,260 kHz (see "Radio Operation (Manual Tuning)").


- 2** Press the ENTER/CLOCK button. The P indication flashes for 10 seconds.

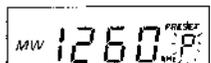
- 3** While P is flashing, press the 2 button. The P indication becomes 2 (the preset number) and the beeps sound. The station is preset. Though the indication becomes the current time after 10 seconds, the preset number remains.

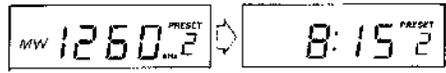
- 4** Repeat steps 1 to 3 for each stations to be preset.

To change the preset station
Preset a new station in the number of which you want to change the station. The previous station is canceled.

Radio Operation (Preset Tuning)

Tuning in a Preset Station

- 1** Press the RADIO **[ON]** button to turn on the radio.
- 2** Press the preset number button of the station. The band, frequency and preset number appear in the display window. After 10 seconds, the indication becomes the current time. The preset number remains.

To turn off the radio
Press the RADIO **[OFF]** button.

To check the station you are listening to
Press the preset number button. The band and frequency appear for 10 seconds.

Setting the Alarm


You can set the radio and buzzer alarms. The wake up station is that preset in number 1.

Setting the Alarm Time

To set the **[A RADIO]** alarm time at 7:00 AM

- 1** Turn off the radio.
- 2** While keeping the **[A RADIO]** ALARM button pressed, set the time by pressing the TIME SET/TUNE + or - button.


- 3** Release the **[A RADIO]** ALARM button. The alarm time is set. The indication becomes the current time.

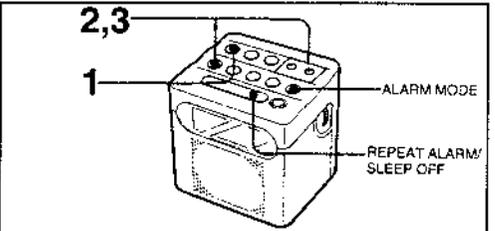


SECTION 3 PIN DESCRIPTION

IC101 μ PD1724GB-589-1A7

| Pin No. | Pin Name | Signal Name | I/O | Description |
|---------|-------------|--------------------------|-----|---|
| 1-10 | LCD10-LCD1 | LCD10-LCD1 | O | LCD drive |
| 11 | NC | | — | |
| 12-14 | COM3-COM1 | COM3-COM1 | O | LCD common |
| 15 | VSS3 | | | Pin for doubler circuit capacitor connection to develop LCD drive voltage |
| 16 | CAP2 | | — | |
| 17 | CAP1 | | | |
| 18 | VSS2 | | | |
| 19 | VDP | $\overline{\text{MUTE}}$ | O | |
| 20 | CGP | BEEP | O | Activates buzzer. |
| 21 | NC | | — | |
| 22 | VDD | | — | 3V power supply input terminal |
| 23 | VCOH | | I | Unused pin |
| 24 | VCOM | FM VCO | I | FM VCO input |
| 25 | VCOL | AM VCO | I | AM VCO input |
| 26 | VSS1 | | — | GND |
| 27 | EO1 | | O | PLL error output pin |
| 28 | EO2 | | | |
| 29 | CE | CE | I | Detects power supply line status. Power supply line OFF : Low Power supply line ON : High |
| 30 | XO | | O | Crystal oscillator connection pin |
| 31 | XI | | I | |
| 32 | VSS4 | | — | Pin for regulator circuit capacitor connection to attain stable drive voltage of the oscillator |
| 33 | PA3 | AC/DC | I | AC/DC select input AC : High DC : Low |
| 34 | PA2 | ALARM OUT | O | Unused pin |
| 35 | PA1 | TV OUT | O | Unused pin |
| 36 | PA0 | BATT/BAND 1 | I/O | BATTERY CHECK input, BAND output FM : Low MW/LW : High |
| 37 | PB3 | LIGHT | O | Unused pin |
| 38 | PB2 | POWER | O | Unused pin |
| 39 | PB1 | INITIALIZE | O | KEY IN control output |
| 40 | PB0 | BAND 2 | O | BAND output FM/MW : Low LW : High |
| 41-44 | PC3-PC0 | KEY SOURCE | O | Conducts Key Scan |
| 45-48 | K3-K0 | KEY RETURN | I | Key Return input |
| 49, 50 | NC | | — | |
| 51-56 | LCD16-LCD11 | LCD16-LCD11 | O | LCD drive |

SECTION 4
DIAGRAMS


4-1. SEMICONDUCTOR LEAD LAYOUTS

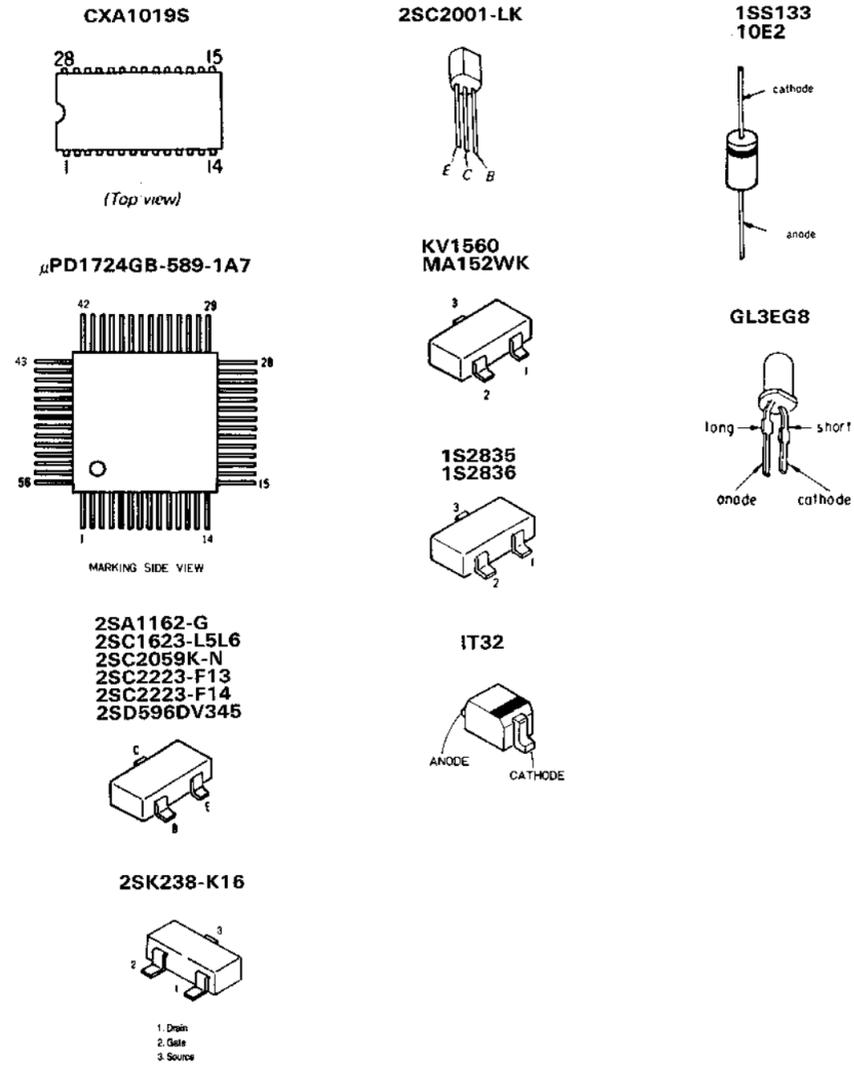

● Semiconductor Location


| Ref. No. | Location |
|----------|----------|
| D1 | D-4 |
| D2 | D-2 |
| D3 | D-3 |
| D4 | D-3 |
| D5 | C-3 |
| D101 | C-9 |
| D102 | B-9 |
| D103 | C-8 |
| D104 | B-8 |
| D105 | C-7 |
| D106 | C-8 |
| D107 | D-6 |
| D110 | D-6 |
| D111 | D-6 |
| D112 | D-6 |
| IC1 | C-3 |
| IC101 | D-7 |
| Q1 | D-3 |
| Q2 | D-3 |
| Q3 | D-3 |
| Q4 | D-2 |
| Q7 | D-2 |
| Q8 | D-3 |
| Q9 | D-4 |
| Q10 | B-4 |
| Q11 | C-3 |
| Q12 | B-3 |
| Q102 | D-9 |
| Q103 | C-9 |
| Q104 | D-8 |
| Q105 | D-8 |
| Q106 | B-9 |

4-2. PRINTED WIRING BOARDS

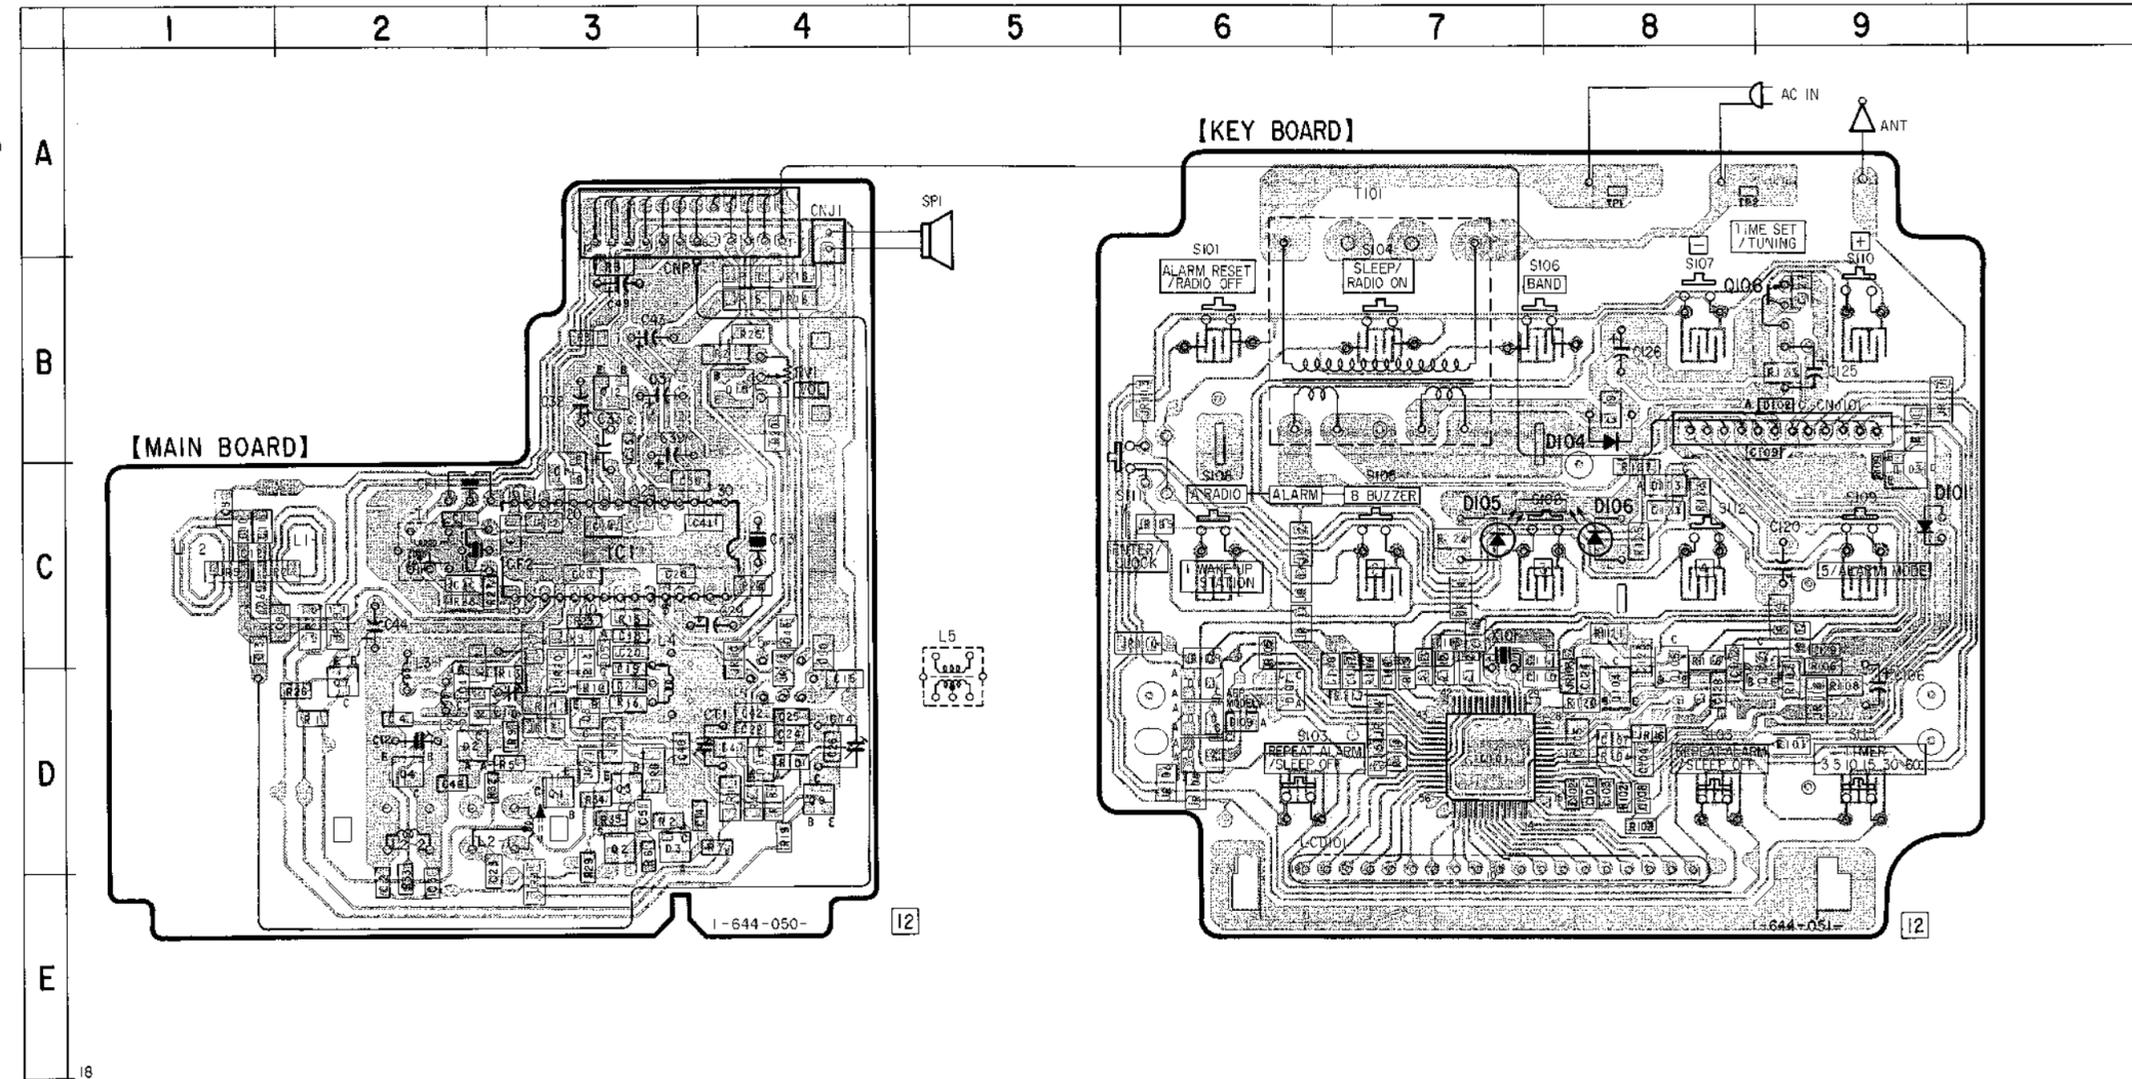


Note:
● ○ : parts extracted from the component side.

4-3. SCHEMATIC DIAGRAMS

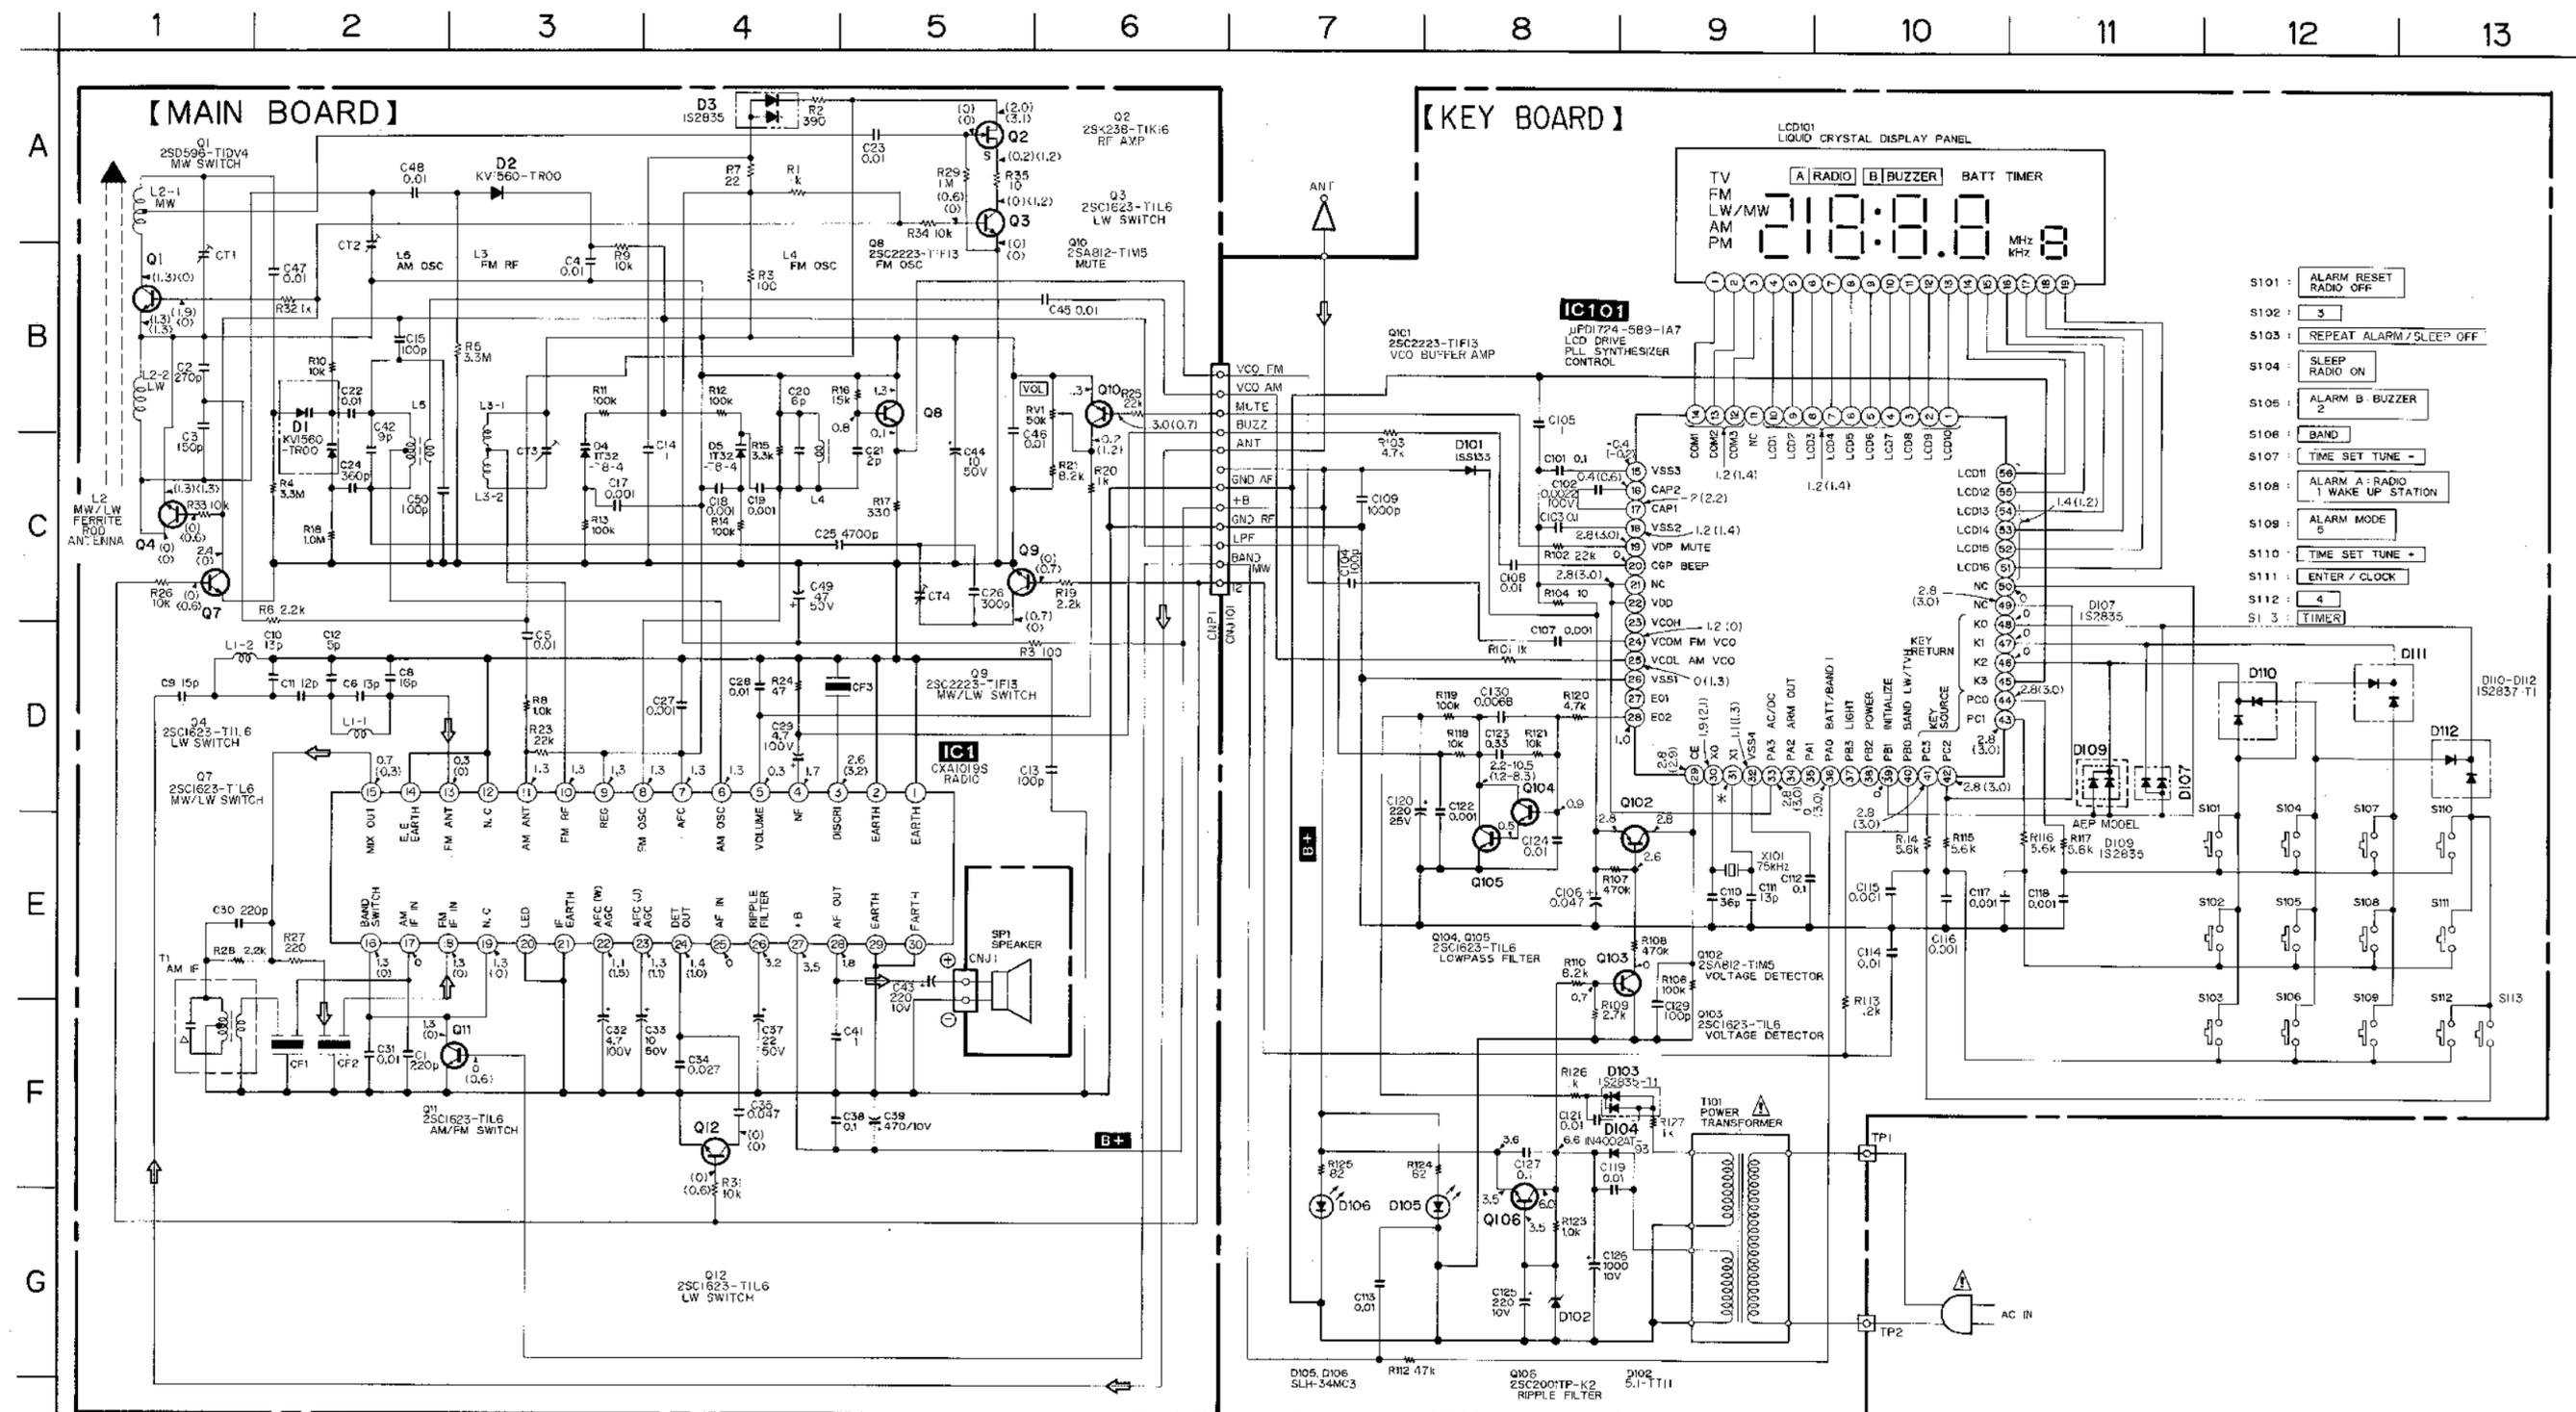

IC Block Diagram

IC1 CXA1019S

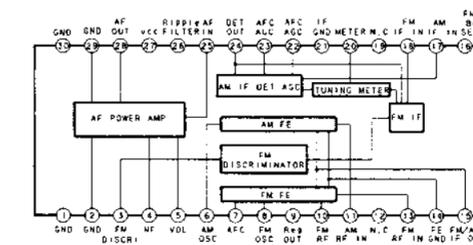

Note:

- All capacitors are in μF unless otherwise noted. pF : μF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
- Δ : internal component.

Note:
The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

- Voltage and waveforms are dc with respect to ground under no-signal (detuned) conditions.
no mark: FM
(): MW
< >: LW
- Voltages are taken with a VOM (Input Impedance $10\text{M}\Omega$). Voltage variations may be noted due to normal production tolerances.
- Signal path:
 \Rightarrow : FM

SECTION 5 EXPLODED VIEWS

NOTE:

• -XX, -X mean standardized parts, so they may have some differences from the original one.

• Color Indication of Appearance Parts
Example:


KNOB, BALANCE(WHITE)...(RED)

↑ ↑
Parts color Cabinet's color

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- hardware (#mark) list is given in the last of this parts list.

The components identified by mark or dotted line with mark are critical for safety. Replace only with part number specified.

AE9 : French model
5AE9 : Swiss, Belgian model

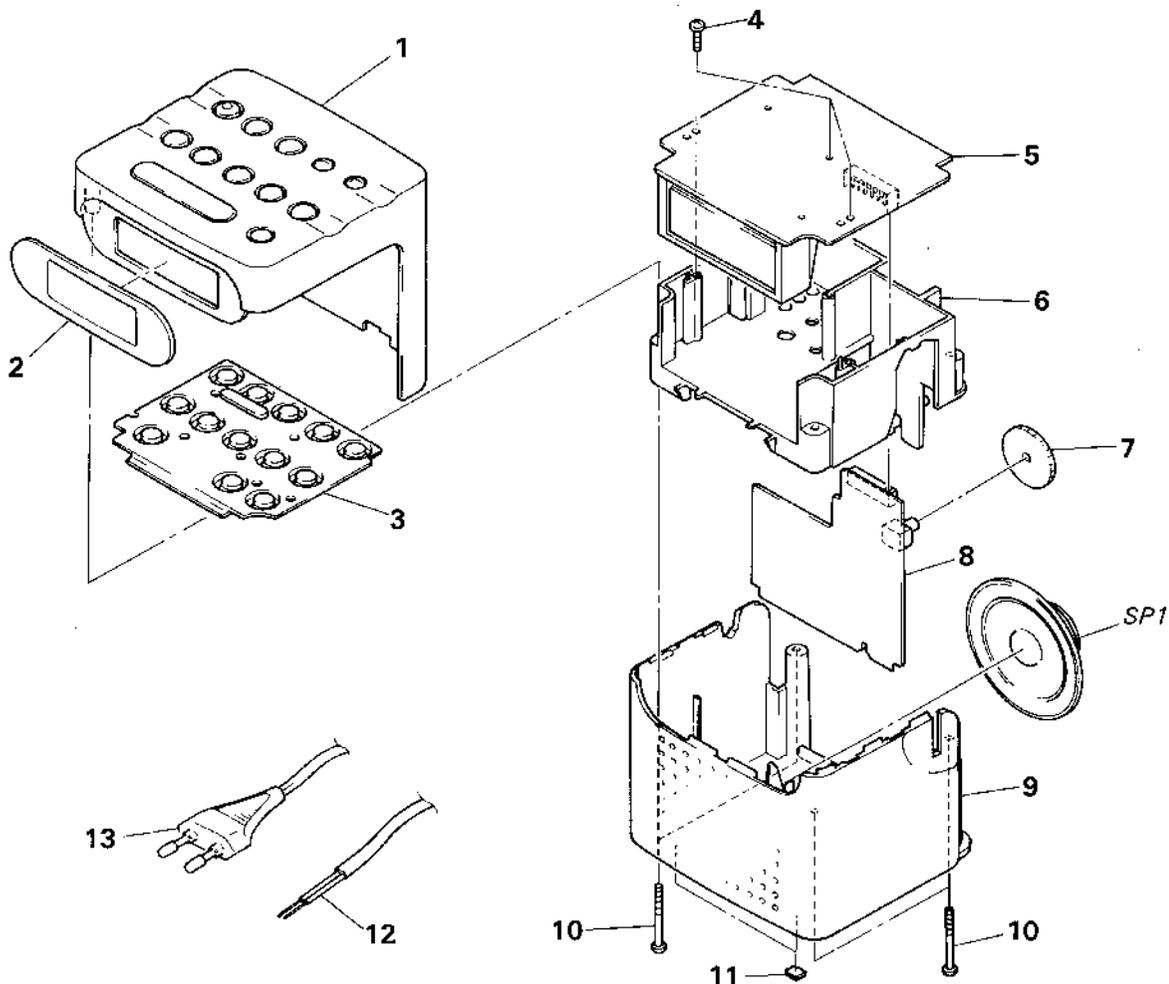

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|----------------------------------|--------|
| 1 | A-3635-751-A | CABINET (UPPER) ASSY (UK) | |
| 1 | A-3635-781-A | CABINET (UPPER) ASSY (AE9, 5AE9) | |
| 2 | 3-377-637-01 | PANEL | |
| 3 | 1-692-143-11 | SWITCH, RUBBER KEY | |
| 4 | 7-685-648-79 | SCREW +P 3X12 TYPE2 NON-SLIT | |
| * 5 | A-3679-396-A | KEY BOARD, COMPLETE (UK) | |
| * 5 | A-3679-420-A | KEY BOARD, COMPLETE (AE9, 5AE9) | |
| * 6 | 3-377-644-01 | CHASSIS | |
| 7 | 3-368-840-21 | KNOB (VOL) | |

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|----------------------------------|-------------------------|
| * 8 | A-3661-574-A | MAIN BOARD, COMPLETE (UK) | |
| * 8 | A-3661-623-A | MAIN BOARD, COMPLETE (AE9, 5AE9) | |
| 9 | 3-377-643-21 | CABINET (LOWER) | |
| 10 | 7-685-154-19 | SCREW +P 3X35 TYPE2 NON-SLIT | |
| 11 | 3-368-852-01 | FOOT | |
| | 12 | 1-556-035-00 | CORD, POWER (UK) |
| | 13 | 1-555-795-00 | CORD, POWER (AE9, 5AE9) |
| | SP1 | 1-503-082-00 | SPEAKER |

SECTION 6 ELECTRICAL PARTS LIST

KEY

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u: μ , for example:
uA...: μ A.. uPA...: μ PA..
uPB...: μ PB.. uPC...: μ PC.. uPD...: μ PD..
- CAPACITORS
uF: μ F
- COILS
uH: μ H

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board.

AE9: French model
5AE9: Swiss, Belgian model

| Ref.No. | Part No. | Description | Remark |
|---------------|--------------|---------------------------------|--------------------|
| * | A-3679-396-A | KEY BOARD, COMPLETE (UK) | |
| * | A-3679-420-A | KEY BOARD, COMPLETE (AE9, 5AE9) | |
| ***** | | | |
| * | 3-377-639-01 | HOLDER (LCD) | |
| | 3-380-732-01 | HOLDER (CRYSTAL) | |
| < CAPACITOR > | | | |
| C101 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C102 | 1-164-161-11 | CERAMIC CHIP 0.0022uF | 10% 100V |
| C103 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C104 | 1-163-117-00 | CERAMIC CHIP 100PF | 5% 50V |
| C105 | 1-162-638-11 | CERAMIC CHIP 1uF | 16V |
| C106 | 1-125-701-11 | CAP, DOUBLE LAYEYER | 0.047F (UK) |
| C106 | 1-125-733-31 | CAP, DOUBLE LAYEYER | 0.047F (AE9, 5AE9) |
| C107 | 1-163-141-00 | CERAMIC CHIP 0.001uF | 5% 50V |
| C108 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 10% 50V |
| C109 | 1-163-009-11 | CERAMIC CHIP 0.001uF | 10% 50V |
| C110 | 1-163-106-00 | CERAMIC CHIP 36PF | 5% 50V |
| C111 | 1-163-096-00 | CERAMIC CHIP 13PF | 5% 50V |
| C112 | 1-164-004-11 | CERAMIC CHIP 0.1uF | 10% 25V |
| C113 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 10% 50V |
| C114 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 10% 50V |
| C115 | 1-163-009-11 | CERAMIC CHIP 0.001uF | 10% 50V |
| C116 | 1-163-009-11 | CERAMIC CHIP 0.001uF | 10% 50V |
| C117 | 1-163-009-11 | CERAMIC CHIP 0.001uF | 10% 50V |
| C118 | 1-163-009-11 | CERAMIC CHIP 0.001uF | 10% 50V |
| C119 | 1-163-031-11 | CERAMIC CHIP 0.01uF | 50V |
| C120 | 1-128-483-11 | ELECT 220uF | 20% 25V |
| C121 | 1-163-031-11 | CERAMIC CHIP 0.01uF | 50V |
| C122 | 1-163-141-00 | CERAMIC CHIP 0.001uF | 5% 50V |
| C123 | 1-164-006-11 | CERAMIC CHIP 0.33uF | 10% 16V |
| C124 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 10% 50V |
| C125 | 1-126-176-11 | ELECT 220uF | 20% 10V |

| Ref.No. | Part No. | Description | Remark |
|---------------------|--------------|--|----------|
| C126 | 1-124-473-11 | ELECT 1000uF | 20% 10V |
| C127 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C129 | 1-163-117-00 | CERAMIC CHIP 100PF | 5% 50V |
| C130 | 1-163-019-00 | CERAMIC CHIP 0.0068uF | 10% 50V |
| < JACK > | | | |
| * | CNJ101 | 1-695-232-11 PIN, CONNECTOR (PC BOARD) 12P | |
| < DIODE > | | | |
| D101 | 8-719-028-22 | DIODE 1SS133 | |
| D102 | 8-719-976-94 | DIODE MA8051-M | |
| D103 | 8-719-104-34 | DIODE 1S2836 | |
| D104 | 8-719-200-02 | DIODE 10E2 | |
| D105 | 8-719-938-67 | LED GL-3EG8 | |
| D106 | 8-719-938-67 | LED GL-3EG8 | |
| D107 | 8-719-104-34 | DIODE DAP202K-T-146 | |
| D109 | 8 719 104-34 | DIODE DAP202K-T-146 (AE9, 5AE9) | |
| D110 | 8-719-400-18 | DIODE MA152WK | |
| D111 | 8-719-400-18 | DIODE MA152WK | |
| D112 | 8-719-400-18 | DIODE MA152WK | |
| < IC > | | | |
| IC101 | 8-759-073-89 | IC uPD1724GB-589-1A7 | |
| < JUMPER RESISTOR > | | | |
| JR102 | 1-216-295-00 | METAL CHIP 0 | 5% 1/10W |
| JR103 | 1-216-295-00 | METAL CHIP 0 | 5% 1/10W |
| JR104 | 1-216-295-00 | METAL CHIP 0 | 5% 1/8W |
| JR105 | 1-216-295-00 | METAL CHIP 0 | 5% 1/10W |
| JR106 | 1-216-295-00 | METAL CHIP 0 | 5% 1/10W |
| JR107 | 1-216-295-00 | METAL CHIP 0 | 5% 1/10W |
| JR108 | 1-216-295-00 | METAL CHIP 0 | 5% 1/10W |
| JR109 | 1-216-295-00 | METAL CHIP 0 | 5% 1/10W |

KEY

| Ref. No. | Part No. | Description | Remark | | |
|----------|--------------|-------------|--------|----|-------|
| JR110 | 1-216-296-00 | METAL CHIP | 0 | 5% | 1/8W |
| JR111 | 1-216-295-00 | METAL CHIP | 0 | 5% | 1/10W |
| JR112 | 1-216-296-00 | METAL CHIP | 0 | 5% | 1/8W |
| JR113 | 1-216-296-00 | METAL CHIP | 0 | 5% | 1/8W |
| JR114 | 1-216-296-00 | METAL CHIP | 0 | 5% | 1/8W |
| JR115 | 1-216-295-00 | METAL CHIP | 0 | 5% | 1/10W |
| JR116 | 1-216-295-00 | METAL CHIP | 0 | 5% | 1/10W |
| JR117 | 1-216-296-00 | METAL CHIP | 0 | 5% | 1/8W |
| JR118 | 1-216-296-00 | METAL CHIP | 0 | 5% | 1/8W |

< LCD >

LCD101 1-809-707-11 DISPLAY PANEL, LIQUID CRYSTAL

< TRANSISTOR >

| | | | |
|------|--------------|------------|--------------|
| Q102 | 8-729-216-22 | TRANSISTOR | 2SA1162-G |
| Q103 | 8-729-120-28 | TRANSISTOR | 2SC1623-L5L6 |
| Q104 | 8-729-120-28 | TRANSISTOR | 2SC1623-L5L6 |
| Q105 | 8-729-120-28 | TRANSISTOR | 2SC1623-L5L6 |
| Q106 | 8-729-142-46 | TRANSISTOR | 2SC2001-LK |

< RESISTOR >

| | | | | | |
|------|--------------|-------------|------|----|-------|
| R101 | 1-216-049-00 | METAL CHIP | 1K | 5% | 1/10W |
| R102 | 1-216-081-00 | METAL CHIP | 22K | 5% | 1/10W |
| R103 | 1-216-065-00 | METAL CHIP | 4.7K | 5% | 1/10W |
| R104 | 1-216-001-00 | METAL CHIP | 10 | 5% | 1/10W |
| R106 | 1-216-097-00 | METAL CHIP | 100K | 5% | 1/10W |
| R107 | 1-216-113-00 | METAL CHIP | 470K | 5% | 1/10W |
| R108 | 1-216-113-00 | METAL CHIP | 470K | 5% | 1/10W |
| R109 | 1-216-059-00 | METAL CHIP | 2.7K | 5% | 1/10W |
| R110 | 1-216-220-00 | METAL GLAZE | 8.2K | 5% | 1/8W |
| R112 | 1-216-089-00 | METAL CHIP | 47K | 5% | 1/10W |
| R113 | 1-216-051-00 | METAL CHIP | 1.2K | 5% | 1/10W |
| R114 | 1-216-067-00 | METAL CHIP | 5.6K | 5% | 1/10W |
| R115 | 1-216-067-00 | METAL CHIP | 5.6K | 5% | 1/10W |
| R116 | 1-216-067-00 | METAL CHIP | 5.6K | 5% | 1/10W |
| R117 | 1-216-067-00 | METAL CHIP | 5.6K | 5% | 1/10W |
| R118 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W |
| R119 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W |
| R120 | 1-216-065-00 | METAL CHIP | 4.7K | 5% | 1/10W |
| R121 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W |
| R123 | 1-216-049-00 | METAL CHIP | 1K | 5% | 1/10W |
| R124 | 1-216-023-00 | METAL CHIP | 82 | 5% | 1/10W |
| R125 | 1-216-023-00 | METAL CHIP | 82 | 5% | 1/10W |
| R126 | 1-216-049-00 | METAL CHIP | 1K | 5% | 1/10W |
| R127 | 1-216-198-00 | METAL CHIP | 1K | 5% | 1/8W |

< SWITCH >

| | | |
|-------|--------------|---------------------------------------|
| SW101 | 1-692-143-11 | RUBBER SWITCH (ALARM RESET/RADIO OFF) |
| SW102 | 1-692-143-11 | RUBBER SWITCH (P3) |

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|--|--------|
| SW103 | 1-692-143-11 | RUBBER SWITCH (REPEAT ALARM/SLEEP OFF) | |
| SW104 | 1-692-143-11 | RUBBER SWITCH (SLEEP/RADIO ON) | |
| SW105 | 1-692-143-11 | RUBBER SWITCH (ALARM B BUZZER/P2) | |
| SW106 | 1-692-143-11 | RUBBER SWITCH (BAND) | |
| SW107 | 1-692-143-11 | RUBBER SWITCH (-) | |
| SW108 | 1-692-143-11 | RUBBER SWITCH (ALARM A RADIO/ P1 WAKE UP STATION) | |
| SW109 | 1-692-143-11 | RUBBER SWITCH (ALARM MODE/P5) | |
| SW110 | 1-692-143-11 | RUBBER SWITCH (+) | |
| SW111 | 1-554-088-00 | SWITCH, KEY BOARD (ENTER/CLOCK) | |
| SW112 | 1-692-143-11 | RUBBER SWITCH (P4) | |
| SW113 | 1-692-143-11 | RUBBER SWITCH (TIMER) | |

< TRANSFORMER >

△T101 1-450-923-11 TRANSFORMER, POWER

< AC TERMINAL >

| | | |
|-------|--------------|-------------------------|
| * TP1 | 1-535-771-11 | AC TERMINAL (AE9, 5AE9) |
| * TP1 | 1-535-771-21 | AC TERMINAL (UK) |
| * TP2 | 1-535-771-11 | AC TERMINAL (AE9, 5AE9) |
| * TP2 | 1-535-771-21 | AC TERMINAL (UK) |

< VIBRATOR >

X101 1-567-769-11 VIBRATOR, CRYSTAL

| | | |
|---|--------------|----------------------------------|
| * | A-3661-574-A | MAIN BOARD, COMPLETE (UK) |
| * | A-3661-623-A | MAIN BOARD, COMPLETE (AE9, 5AE9) |

< CAPACITOR >

| | | | | | |
|-----|--------------|--------------|---------|--------|-----|
| C1 | 1-163-125-00 | CERAMIC CHIP | 220PF | 5% | 50V |
| C2 | 1-163-127-00 | CERAMIC CHIP | 270PF | 5% | 50V |
| C3 | 1-163-121-00 | CERAMIC CHIP | 150PF | 5% | 50V |
| C4 | 1-164-232-11 | CERAMIC CHIP | 0.01uF | 10% | 50V |
| C5 | 1-164-232-11 | CERAMIC CHIP | 0.01uF | 10% | 50V |
| C6 | 1-163-096-00 | CERAMIC CHIP | 13PF | 5% | 50V |
| C8 | 1-163-098-00 | CERAMIC CHIP | 16PF | 5% | 50V |
| C9 | 1-163-097-00 | CERAMIC CHIP | 15PF | 5% | 50V |
| C10 | 1-163-096-00 | CERAMIC CHIP | 13PF | 5% | 50V |
| C11 | 1-163-095-00 | CERAMIC CHIP | 12PF | 5% | 50V |
| C12 | 1-163-097-00 | CERAMIC CHIP | 15PF | 5% | 50V |
| C13 | 1-163-117-00 | CERAMIC CHIP | 100PF | 5% | 50V |
| C14 | 1-164-346-11 | CERAMIC CHIP | 1uF | | 16V |
| C15 | 1-163-117-00 | CERAMIC CHIP | 100PF | 5% | 50V |
| C17 | 1-163-141-00 | CERAMIC CHIP | 0.001uF | 5% | 50V |
| C18 | 1-163-141-00 | CERAMIC CHIP | 0.001uF | 5% | 50V |
| C19 | 1-163-141-00 | CERAMIC CHIP | 0.001uF | 5% | 50V |
| C20 | 1-163-089-00 | CERAMIC CHIP | 6PF | 0.25PF | 50V |
| C21 | 1-163-085-00 | CERAMIC CHIP | 2PF | | 50V |

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

KEY

| Ref. No. | Part No. | Description | Remark |
|---------------|--------------|----------------------------------|--------|
| C22 | 1-164-232-11 | CERAMIC CHIP 0.01uF 10% | 50V |
| C23 | 1-164-232-11 | CERAMIC CHIP 0.01uF 10% | 50V |
| C24 | 1-163-130-00 | CERAMIC CHIP 360PF | |
| C25 | 1-163-017-00 | CERAMIC CHIP 0.0047uF 5% | 50V |
| C26 | 1-163-128-00 | CERAMIC CHIP 300PF 5% | 50V |
| C27 | 1-163-009-11 | CERAMIC CHIP 0.001uF 10% | 50V |
| C28 | 1-163-031-11 | CERAMIC CHIP 0.01uF | 50V |
| C29 | 1-124-927-11 | ELECT 4.7uF 20% | 100V |
| C30 | 1-163-125-00 | CERAMIC CHIP 220PF 5% | 50V |
| C31 | 1-164-232-11 | CERAMIC CHIP 0.01uF 10% | 50V |
| C32 | 1-124-927-11 | ELECT 4.7uF 20% | 100V |
| C33 | 1-124-907-11 | ELECT 10uF 20% | 50V |
| C34 | 1-163-986-00 | CERAMIC CHIP 0.027uF 10% | 25V |
| C35 | 1-163-809-11 | CERAMIC CHIP 0.047uF 10% | 25V |
| C37 | 1-126-233-11 | ELECT 22uF 20% | 50V |
| C38 | 1-164-004-11 | CERAMIC CHIP 0.1uF 10% | 25V |
| C39 | 1-124-472-11 | ELECT 470uF 20% | 10V |
| C41 | 1-164-346-11 | CERAMIC CHIP 1uF | 16V |
| C42 | 1-163-092-00 | CERAMIC CHIP 9PF 0.25PF | 50V |
| C43 | 1-126-176-11 | ELECT 220uF 20% | 10V |
| C44 | 1-124-907-11 | ELECT 10uF 20% | 50V |
| C45 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C46 | 1-163-059-00 | CERAMIC CHIP 0.01uF 10% | 50V |
| C47 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C48 | 1-164-232-11 | CERAMIC CHIP 0.01uF | 50V |
| C49 | 1-124-910-11 | ELECT 47uF 20% | 50V |
| C50 | 1-163-117-00 | CERAMIC CHIP 100PF 5% | 50V |
| < FILTER > | | | |
| CF1 | 1-578-677-21 | FILTER, CERAMIC | |
| CF2 | 1-579-312-81 | FILTER, CERAMIC | |
| CF3 | 1-579-312-81 | FILTER, CERAMIC | |
| < CONNECTOR > | | | |
| CNJ1 | 1-580-181-11 | SOCKET, CONNECTOR 2P | |
| CNP1 | 1-695-237-11 | SOCKET, CONNECTOR (PC BOARD) 12P | |
| < TRIMMER > | | | |
| CT1 | 1-141-304-21 | TRIMMER, CERAMIC | |
| CT2 | 1-141-443-11 | TRIMMER, CERAMIC | |
| CT3 | 1-141-304-21 | TRIMMER, CERAMIC | |
| CT4 | 1-141-444-91 | TRIMMER, CERAMIC | |
| < DIODE > | | | |
| D1 | 8-719-951-05 | DIODE KV1560 | |
| D2 | 8-719-951-05 | DIODE KV1560 | |
| D3 | 8-719-104-34 | DIODE 1S2835 | |
| D4 | 8-719-949-46 | DIODE 1T32 | |
| D5 | 8-719-949-46 | DIODE 1T32 | |

| Ref. No. | Part No. | Description | Remark |
|---------------------|--------------|------------------------------|--------|
| < IC > | | | |
| IC1 | 8-752-035-29 | IC CXA1019S | |
| < JUMPER RESISTOR > | | | |
| JR1 | 1-216-296-00 | METAL CHIP 0 5% | 1/8W |
| JR2 | 1-216-296-00 | METAL CHIP 0 5% | 1/8W |
| JR3 | 1-216-296-00 | METAL CHIP 0 5% | 1/8W |
| JR4 | 1-216-296-00 | METAL CHIP 0 5% | 1/8W |
| JR5 | 1-216-296-00 | METAL CHIP 0 5% | 1/8W |
| JR7 | 1-216-296-00 | METAL CHIP 0 5% | 1/8W |
| JR9 | 1-216-296-00 | METAL CHIP 0 5% | 1/8W |
| JR10 | 1-216-295-00 | METAL CHIP 0 5% | 1/10W |
| JR12 | 1-216-295-00 | METAL CHIP 0 5% | 1/10W |
| JR13 | 1-216-296-00 | METAL CHIP 0 5% | 1/8W |
| JR14 | 1-216-295-00 | METAL CHIP 0 5% | 1/10W |
| JR15 | 1-216-296-00 | METAL CHIP 0 5% | 1/8W |
| JR16 | 1-216-296-00 | METAL CHIP 0 5% | 1/8W |
| JR17 | 1-216-296-00 | METAL CHIP 0 5% | 1/8W |
| JR18 | 1-216-296-00 | METAL CHIP 0 5% | 1/8W |
| JR19 | 1-216-296-00 | METAL CHIP 0 5% | 1/8W |
| JR20 | 1-216-296-00 | METAL CHIP 0 5% | 1/8W |
| JR21 | 1-216-295-00 | METAL CHIP 0 5% | 1/10W |
| JR22 | 1-216-296-00 | METAL CHIP 0 5% | 1/8W |
| < COIL > | | | |
| L2 | 1-402-615-11 | ANTENNA, FERRITE-ROD (MM/LW) | |
| L3-1 | 1-402-654-11 | COIL, AIR-CORE | |
| L3-2 | 1-402-653-11 | COIL, AIR-CORE | |
| L4 | 1-460-335-11 | COIL (WITH CORE) | |
| L5 | 1-406-485-11 | COIL (OSC) | |
| < TRANSISTOR > | | | |
| Q1 | 8-729-141-75 | TRANSISTOR 2SD596DV345 | |
| Q2 | 8-729-123-86 | TRANSISTOR 2SK238-K16 | |
| Q3 | 8-729-120-28 | TRANSISTOR 2SC1623-L5L6 | |
| Q4 | 8-729-120-28 | TRANSISTOR 2SC1623-L5L6 | |
| Q7 | 8-729-120-28 | TRANSISTOR 2SC1623-L5L6 | |
| Q8 | 8-729-102-07 | TRANSISTOR 2SC2223-F13 | |
| Q9 | 8-729-102-07 | TRANSISTOR 2SC2223-F13 | |
| Q10 | 8-729-216-22 | TRANSISTOR 2SA1162-G | |
| Q11 | 8-729-120-28 | TRANSISTOR 2SC1623-L5L6 | |
| Q12 | 8-729-120-28 | TRANSISTOR 2SC1623-L5L6 | |
| < RESISTOR > | | | |
| R1 | 1-216-049-00 | METAL CHIP 1K 5% | 1/10W |
| R2 | 1-216-039-00 | METAL CHIP 390 5% | 1/10W |
| R3 | 1-216-174-00 | METAL GLAZE 100 5% | 1/8W |
| R4 | 1-216-133-00 | METAL CHIP 3.3M 5% | 1/10W |
| R5 | 1-216-133-00 | METAL CHIP 3.3M 5% | 1/10W |

KEY

| Ref. No. | Part No. | Description | Remark | | |
|-----------------------|--------------|-------------------------|--------|----|-------|
| R6 | 1-216-057-00 | METAL CHIP | 2.2K | 5% | 1/10W |
| R7 | 1-216-009-00 | METAL CHIP | 22 | 5% | 1/10W |
| R8 | 1-216-198-00 | METAL CHIP | 1K | 5% | 1/8W |
| R9 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W |
| R10 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W |
| R11 | 1-216-097-00 | METAL CHIP | 100K | 5% | 1/10W |
| R12 | 1-216-097-00 | METAL CHIP | 100K | 5% | 1/10W |
| R13 | 1-216-097-00 | METAL CHIP | 100K | 5% | 1/10W |
| R14 | 1-216-097-00 | METAL CHIP | 100K | 5% | 1/10W |
| R15 | 1-216-061-00 | METAL CHIP | 3.3K | 5% | 1/10W |
| R16 | 1-216-077-00 | METAL CHIP | 15K | 5% | 1/10W |
| R17 | 1-216-186-00 | METAL GLAZE | 330 | | |
| R18 | 1-216-121-00 | METAL CHIP | 1M | 5% | 1/10W |
| R19 | 1-216-057-00 | METAL CHIP | 2.2K | 5% | 1/10W |
| R20 | 1-216-049-00 | METAL CHIP | 1K | 5% | 1/10W |
| R21 | 1-216-220-00 | METAL GLAZE | 8.2K | 5% | 1/8W |
| R23 | 1-216-081-00 | METAL CHIP | 22K | 5% | 1/10W |
| R24 | 1-216-017-00 | METAL CHIP | 47 | 5% | 1/10W |
| R25 | 1-216-081-00 | METAL CHIP | 22K | 5% | 1/10W |
| R26 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W |
| R27 | 1-216-033-00 | METAL CHIP | 220 | 5% | 1/10W |
| R28 | 1-216-057-00 | METAL CHIP | 2.2K | 5% | 1/10W |
| R29 | 1-216-121-00 | METAL CHIP | 1M | 5% | 1/10W |
| R32 | 1-216-049-00 | METAL CHIP | 1K | 5% | 1/10W |
| R33 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W |
| R34 | 1-216-073-00 | METAL CHIP | 10K | 5% | 1/10W |
| R35 | 1-216-001-00 | METAL CHIP | 10 | 5% | 1/10W |
| < VARIABLE RESISTOR > | | | | | |
| RV1 | 1-241-586-11 | RES, VAR, CARBON 50K | | | |
| < TRANSFORMER > | | | | | |
| T1 | 1-404-790-11 | TRANSFORMER, IF | | | |
| ***** | | | | | |
| MISCELLANEOUS | | | | | |
| ***** | | | | | |
| 3 | 1-692-143-11 | SWITCH, RUBBER KEY | | | |
| △12 | 1-556-035-00 | CORD, POWER (UK) | | | |
| △13 | 1-555-795-00 | CORD, POWER (AEG, SAEG) | | | |
| SP1 | 1-503-082-00 | SPEAKER | | | |

| Ref. No. | Part No. | Description | Remark |
|---------------------------------|--------------|---|--------|
| ACCESSORIES & PACKING MATERIALS | | | |
| ***** | | | |
| | 1-501-499-11 | COUPLER, ANTENNA (5AE9) | |
| * | 3-378-685-01 | INDIVIDUAL CARTON | |
| | 3-755-140-11 | MANUAL, INSTRUCTION (ENGLISH, FRENCH, GERMAN) | |
| | 3-755-140-41 | MANUAL, INSTRUCTION (SPANISH, DUTCH, ITALIAN) (5AE9) | |

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.