

SERVICE MANUAL

AA-2U CHASSIS

Self Diagnosis
Supported model

<i>MODEL</i>	<i>COMMANDER</i>	<i>DEST</i>	<i>CHASSIS NO.</i>
KV-32FV16	RM-Y171	US	SCC-S44E-A
KV-32FV26	RM-Y170	US	SCC-S44F-A
KV-32FV26	RM-Y170	CND	SCC-S45D-A
KV-34FV16	RM-Y171	E	SCC-S50A-A
KV-34FV16C	RM-Y171	E	SCC-S50B-A
KV-34FX260	RM-Y170	E	SCC-S50C-A
KV-34FX260C	RM-Y170	E	SCC-S50D-A

SONY[®]

SPECIFICATIONS

	KV-32FV16 KV-32FV26	KV-34FV16 KV-34FV16C KV-34FX260 KV-34FX260C
Power requirements	120V/60Hz	120V-220V / 60Hz, 50Hz
Number of inputs/outputs		
Video ¹⁾		3
S Video ²⁾		2
Y, P _B , P _R ³⁾		1
Audio ⁴⁾		4
Audio Out ⁵⁾		1
Monitor Out		1
S-Link		3
Control-S (IN/OUT)		1
Speaker output(W)		15Wx2
Power Consumption(W)		
In use(Max)		200W
In standby		2W
Dimensions(W/H/D)		
(mm)		882 x 687 x 592 mm
(inches)		34 ^{3/4} x 27 x 23 ^{1/4}
Mass		
(kg)		80 kg
(lbs)		176 lbs.

- ¹⁾ 1 Vp-p 75 ohms unbalanced, sync negative
²⁾ Y: 1 Vp-p 75 ohms unbalanced, sync negative
C: 0.286 Vp-p (Burst signal), 75 ohms
³⁾ Y: 1.0 Vp-p, 75 ohms, sync negative; P_B: 0.7 Vp-p, 75 ohms;
P_R: Vp-p, 75 ohms
⁴⁾ 500 mVrms (100% modulation), Impedance: 47 kilohms
⁵⁾ More than 408 mVrms at the maximum volume setting (variable)
More than 408 mVrms (fix); Impedance (output): 2 kilohms

Television system

American TV standard, NTSC

Channel coverage

VHF: 2-13/ VHF: 14-69/ CATV: 1-125

Picture tube

Flat Trinitron® tube

Visible screen size

32-inch picture measured diagonally

Actual screen size

34-inch measured diagonally

Antenna

75 ohm external terminal for VHF/UHF

Supplied Accessories

RM-Y170 (KV-32FV26/KV-34FX260/34FX260C ONLY)

RM-Y171 (KV-32FV16/34FV16/34FV16C ONLY)

Batteries size AA (R6) (2)

Wireless Stereo Headphones MDR-1F0230

(ALL EXCEPT KV-32FV16/34FV16/34FV16C)

Battery for Headphones size AA (R6) (1)

(ALL EXCEPT KV-32FV16/34FV16/34FV16C)

Optional Assessories

AV Cable: VMC-810/820/830 HG

Audio Cable: RKC-515HG

S-LINK Cable: RK-G69HG

Component Video Cable: VMC-10/30 HG

TV Stand: SU-32FD3

(●) SRS (SOUND RETRIEVAL SYSTEM)

The (●) SRS (SOUND RETRIEVAL SYSTEM) is manufactured by Sony Corporation under license from SRS Labs, Inc. It is covered by U.S. Patent No. 4,748,669. Other U.S. and foreign patents pending.

The word 'SRS' and the SRS symbol (●) are registered trademarks of SRS Labs, Inc.

BBE and BBE symbol are trademarks of BBE Sound, Inc. and are licensed by BBE Sound, Inc. under U.S. Patent No. 4,638,258 and 4,482,866.

Design and specifications are subject to change without notice.

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
	Warnings and Cautions	4
	Self-Diagnostic Function	4
	Safety Check-Out Instructions	7
1.	DISASSEMBLY	
1-1.	Rear Cover Removal	8
1-2.	Chassis Assembly Removal	8
1-3.	Service Position	8
1-4.	Picture Tube Removal	9
2.	SET-UP ADJUSTMENTS	
2-1.	Beam Landing	10
2-2.	Convergence	11
2-3.	Focus	13
2-4.	Screen (G2)	13
2-5.	White Balance Adjustments	13
3.	SAFETY RELATED ADJUSTMENTS	
3-1.	☒ R530, R531 Confirmation Method (HV Hold-Down Confirmation and Readjustments)	14
3-2.	B+ Voltage Confirmation and Adjustment	14
4.	CIRCUIT ADJUSTMENTS	
4-1.	Setting the Service Adjustment Mode	15
4-2.	Memory Write Confirmation Method	15
4-3.	Adjust Buttons and Indicators	15
4-4.	Adjustment Items	16
4-5.	Feature ID Map	21
4-6.	Program Palette Settings	22
4-7.	A Board Adjustments	22
5.	DIAGRAMS	
5-1.	Block Diagram	25
5-2.	Circuit Board Location	33
5-3.	Printed Wiring Boards and Schematic Diagrams	33
	• A Board	34
	• UX (MAIN) Board	41
	• UX (PIP) Board	45
	• AK Board	49
	• HA Board	50
	• G Board	51
	• GA Board	55
	• HX Board	58
	• WA Board	59
	• T Board	61
	• C Board	63
	• HB Board	64
5-4.	Semiconductors	65
6.	EXPLODED VIEW	
6-1.	Chassis	66
6-2.	Picture Tube	67
7.	ELECTRICAL PARTS LIST	68

WARNINGS AND CAUTIONS

CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

WARNING!!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE TO AVOID POSSIBLE SHOCK HAZARD, BECAUSE OF LIVE CHASSIS. THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK \triangle ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS, AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL FOR SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

ATTENTION!!

APRES AVOIR DECONNECTE LE CAP DE L'ANODE, COURT-CIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.

ATTENTION!!

AFIN D'EVITER TOUT RESQUE D'ELECTROCUTION PROVENANT D'UN CHÂSSIS SOUS TENSION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISÉ LORS DE TOUT DÉPANNAGE. LE CHÂSSIS DE CE RÉCEPTEUR EST DIRECTEMENT RACCORDÉ À L'ALIMENTATION SECTEUR.

ATTENTION AUX COMPOSANTS RELATIFS A LA SECURITE!!

LES COMPOSANTS IDENTIFIES PAR UNE TRAME ET PAR UNE MARQUE \triangle SUR LES SCHEMAS DE PRINCIPE, LES VUES EXPLOSEES ET LES LISTES DE PIECES SONT D'UNE IMPORTANCE CRITIQUE POUR LA SECURITE DU FONCTIONNEMENT. NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMERO DE PIECE EST INDIQUE DANS LE PRESENT MANUEL OU DANS DES SUPPLEMENTS PUBLIES PAR SONY. LES REGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SECURITE DU FONCTIONNEMENT SONT IDENTIFIES DANS LE PRESENT MANUEL. SUIVRE CES PROCEDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT SUSPECTE.

SELF-DIAGNOSTIC FUNCTION

The units in this manual contain a self-diagnostic function. If an error occurs, the STANDBY/TIMER LED will automatically begin to flash. The number of times the LED flashes translates to a probable source of the problem. A definition of the STANDBY/TIMER LED flash indicators is listed in the instruction manual for the user's knowledge and reference. If an error symptom cannot be reproduced, the Remote Commander can be used to review the failure occurrence data stored in memory to reveal past problems and how often these problems occur.

Diagnostic Test Indicators

When an error occurs, the STANDBY/TIMER LED will flash a set number of times to indicate the possible cause of the problem. If there is more than one error, the LED will identify the first of the problem areas.

Results for all of the following diagnostic items are displayed on screen. No error has occurred if the screen displays a "0".



Diagnostic Item Description	No. of Times STANDBY/TIMER LED Flashes	Self-diagnostic Display/ Diagnostic Result	Probable Cause Location	Detected Symptoms
Power does not turn on	Does not light	N/A	<ul style="list-style-type: none"> Power cord is not plugged in. Fuse is burned out. (F601) (A Board) 	<ul style="list-style-type: none"> Power does not come on. No power is supplied to the TV. AC power supply is faulty.
+B overcurrent (OCP)*	N/A	N/A	<ul style="list-style-type: none"> H.OUT (Q502) is shorted. (A Board) IC1701 is shorted. (C Board) 	<ul style="list-style-type: none"> Power does not come on. Load on power line is shorted.
+B overvoltage (OVP)*	N/A	N/A	<ul style="list-style-type: none"> IC643 or T603 is open. (G Board) IC6003 or PH6001 is open (GA Board) 	<ul style="list-style-type: none"> Power does not come on.
V-STOP*	4 times	4:0 or 4:1	<ul style="list-style-type: none"> +12V is not supplied. (A Board) IC502 is faulty. (A Board) 	<ul style="list-style-type: none"> Has entered standby state after horizontal raster. Vertical deflection pulse is stopped. Power line is shorted or power supply is stopped.
IK (AKB)	5 times	5:0 or 5:1	<ul style="list-style-type: none"> Video OUT (IC502) is faulty. (A Board) IC355 is faulty. (A Board) Screen (G2) is improperly adjusted.** 	<ul style="list-style-type: none"> No raster is generated. CRT cathode current detection reference pulse output is small.

* If a +B overcurrent is detected, stoppage of the vertical deflection is detected simultaneously.

The symptom that is diagnosed first by the microcontroller is displayed on the screen.

** Refer to Screen (G2) Adjustments in Section 2-4 of this manual.

Display of Standby/Timer LED Flash Count

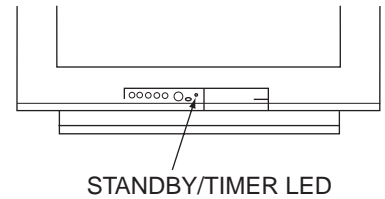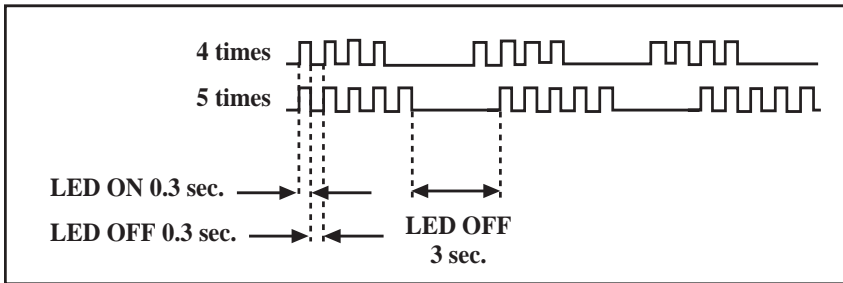

<u>Diagnostic Item</u>	<u>Flash Count*</u>
V-STOP	4 times
IK (AKB)	5 times

*One flash count is not used for self-diagnostic.

Stopping the Standby/Timer LED Flash


Turn off the power switch on the TV main unit or unplug the power cord from the outlet to stop the STANDBY/TIMER LAMP from flashing.

Self-Diagnostic Screen Display

For errors with symptoms such as “power sometimes shuts off” or “screen sometimes goes out” that cannot be confirmed, it is possible to bring up past occurrences of failure on the screen for confirmation.

To Bring Up Screen Test

In standby mode, press buttons on the Remote Commander sequentially, in rapid succession, as shown below:



Note that this differs from entering the service mode (sound volume **+**).

Self-Diagnostic Screen Display

SELF DIAGNOSIS	
2: +B OCP	N/A
3: +B OVP	N/A
4: VSTOP	0
5: AKB	1
101: WDT	24

← Numeral “0” means that no fault was detected.
 ← Numeral “1” means a fault was detected one time only.

Handling of Self-Diagnostic Screen Display

Since the diagnostic results displayed on the screen are not automatically cleared, always check the self-diagnostic screen during repairs. When you have completed the repairs, clear the result display to “0”.

Unless the result display is cleared to “0”, the self-diagnostic function will not be able to detect subsequent faults after completion of the repairs.

Clearing the Result Display


To clear the result display to “0”, press buttons on the Remote Commander sequentially when the diagnostic screen is displayed, as shown below:

Channel **8** → **ENTER**

Quitting the Self-Diagnostic Screen

To quit the entire self-diagnostic screen, turn off the power switch on the Remote Commander or the main unit.

Self-Diagnostic Circuit

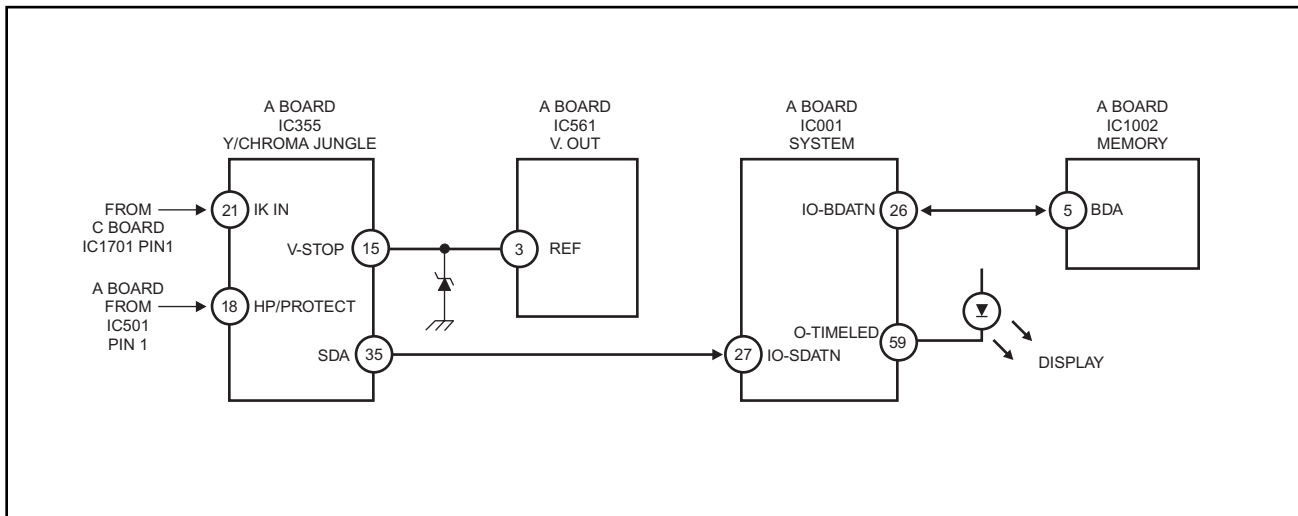

+B overcurrent (OCP)

Occurs when an overcurrent on the +B (135V) line is detected by pin 18 of IC355 (A Board). If the voltage of pin 18 of IC355 (A Board) is less than 1V when V.SYNC is more than seven verticals in a period, the unit will automatically turn off.

+B overvoltage (OVP)

Occurs when the feedback circuit from +B opens IC643 or T603 (G Board)/IC6003 or PH6001 (GA Board) or any other associated feedback components.

V-STOP

Occurs when an absence of the vertical deflection pulse is detected by pin 15 of IC355 (A Board). Power supply will shut down when waveform interval exceeds 2 seconds.

IK (AKB)

If the RGB levels* do not balance within 2 seconds after the power is turned on, this error will be detected by IC355 (A Board). TV will stay on, but there will be no picture.

*(Refers to the RGB levels of the AKB detection Ref pulse that detects 1K).

NOTE:

Watch Dog Timer

Indicates how many times the Watch Dog Timer functions have been activated. Whenever micro is reset by the Watch Dog Timer, this number is incremented. Maximum number is 255.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or touching high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the B+ and HV to see if they are specified values. Make sure your instruments are accurate; be suspicious of your HV meter if sets always have low HV.
8. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

Leakage Test

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instructions.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low voltage scale. The Simpson's 250 and Sanwa SH-63TRD are examples of passive VOMs that are suitable. Nearly all battery-operated digital multimeters that have a 2 VAC range are suitable (see Figure A).

How to Find a Good Earth Ground

A cold-water pipe is a guaranteed earth ground; the cover-plate retaining screw on most AC outlet boxes is also at earth ground. If the retaining screw is to be used as your earth ground, verify that it is at ground by measuring the resistance between it and a cold-water pipe with an ohmmeter. The reading should be zero ohms. If a cold-water pipe is not accessible, connect a 60- to 100-watt trouble- light (not a neon lamp) between the hot side of the receptacle and the retaining screw. Try both slots, if necessary, to locate the hot side on the line; the lamp should light at normal brilliance if the screw is at ground potential (see Figure B).

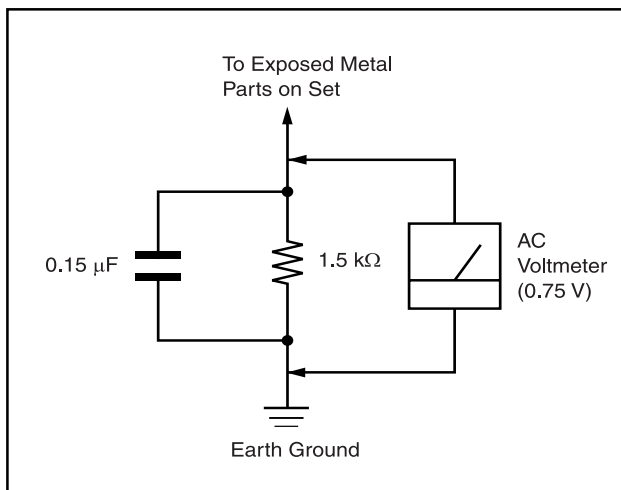


Figure A. Using an AC voltmeter to check AC leakage.


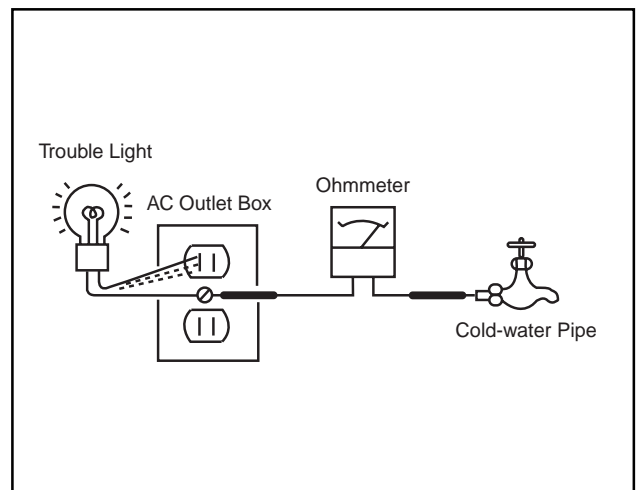



Figure B. Checking for earth ground.

SECTION 2 DISASSEMBLY


1-1. REAR COVER REMOVAL

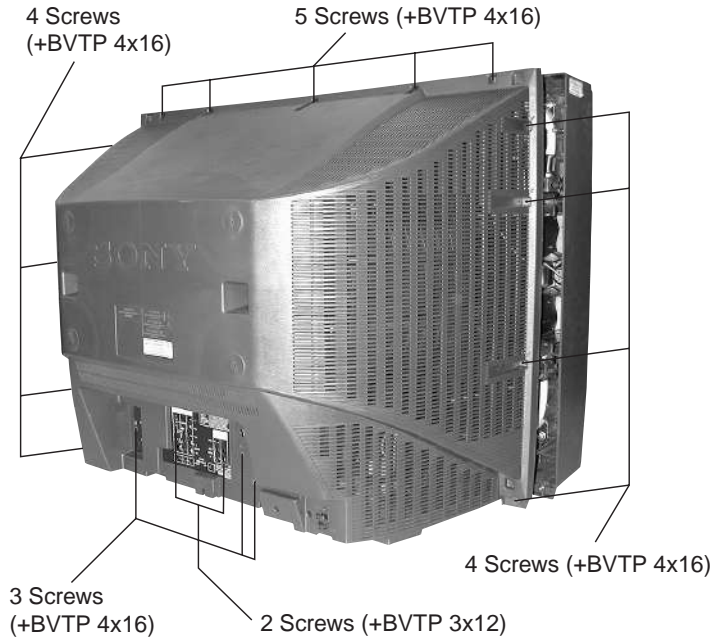

1-2. CHASSIS ASSEMBLY REMOVAL

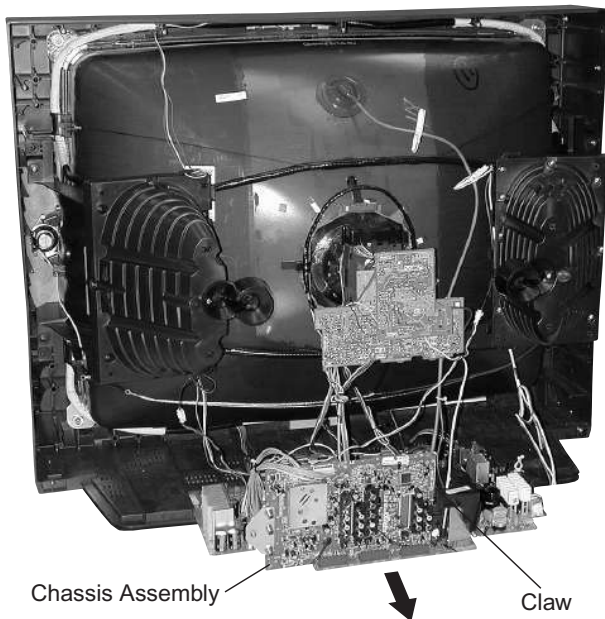



1-3. SERVICE POSITION

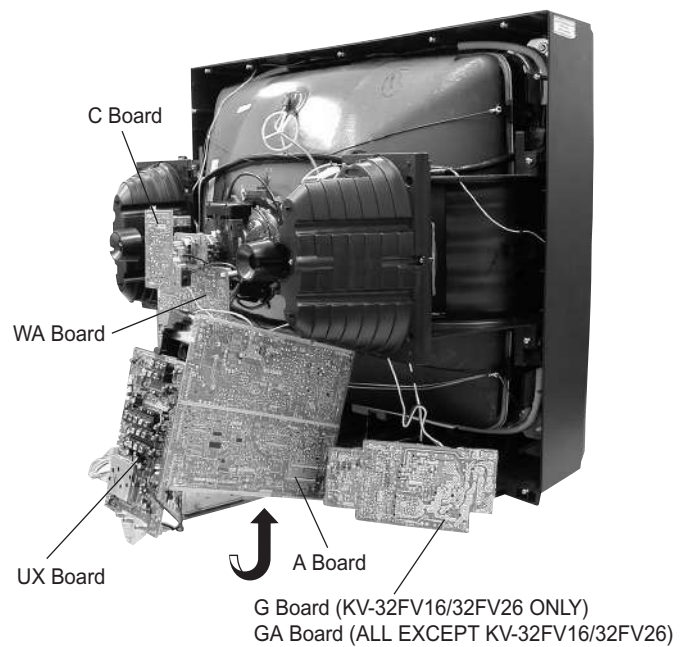

1-4. PICTURE TUBE REMOVAL

**WARNING:
BEFORE REMOVING
THE ANODE CAP**

High voltage remains in the CRT even after the power is disconnected. To avoid electric shock, discharge CRT **before** attempting to remove the anode cap. Short between anode and CRT coated earth ground strap.

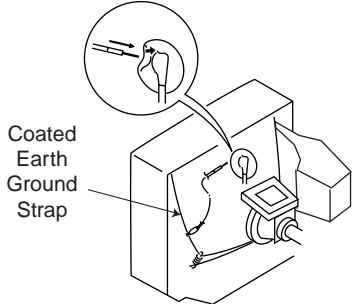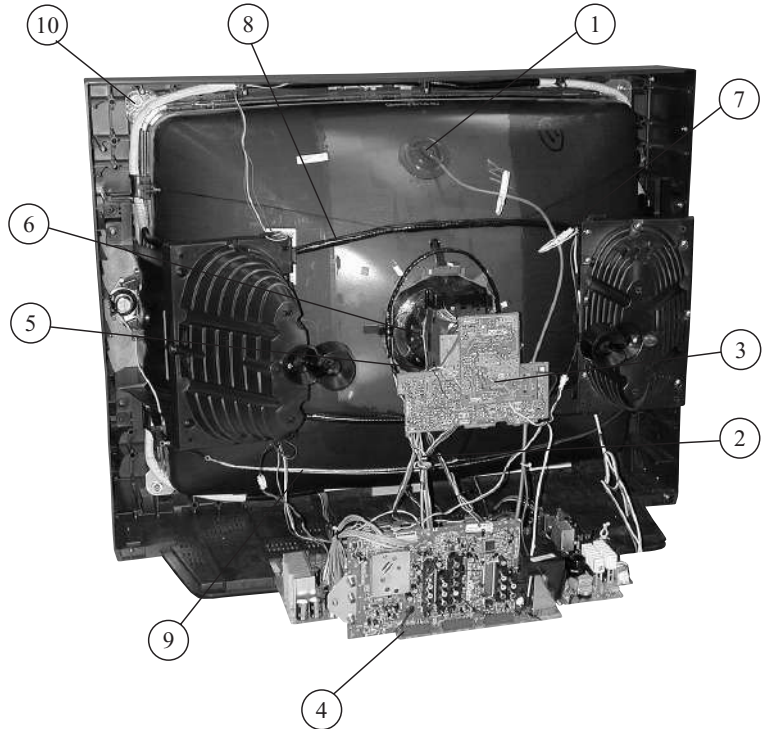
1. Discharge the anode of the CRT and remove the anode cap.
2. Unplug all interconnecting leads from the deflection yoke, neck assembly, degaussing coils and CRT grounding strap.
3. Remove the C Board from the CRT.
4. Remove the chassis assembly.
5. Loosen the neck assembly fixing screw and remove.
6. Loosen the deflection yoke fixing screw and remove.
7. Place the set with the CRT face down on a cushion and remove the degaussing coil holders.
8. Remove the degaussing coils.
9. Remove the CRT grounding strap and spring tension devices.
10. Unscrew the four CRT fixing screws [located on each CRT corner] and remove the CRT [Take care not to handle the CRT by the neck].

ANODE CAP REMOVAL

WARNING: High voltage remains in the CRT even after the power is disconnected. To avoid electrical shock, discharge the CRT **before** attempting to remove the anode cap. Short between anode and coated earth ground strap of CRT.


NOTE: After removing the anode, short circuit the anode of the picture tube and the anode cap to either the metal chassis, CRT shield, or carbon painted on the CRT.

REMOVAL PROCEDURES

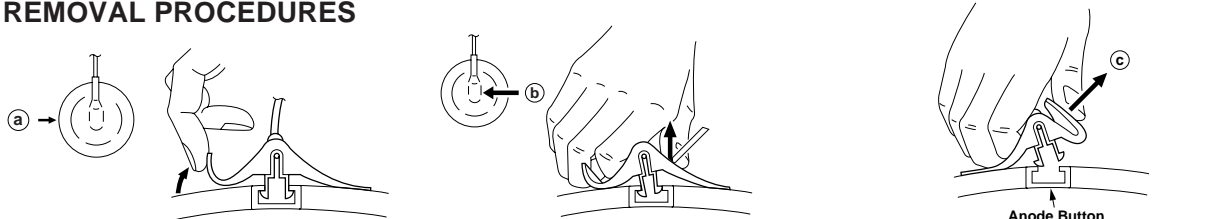- 
- ① Turn up one side of the rubber cap in the direction indicated by arrow (a).
 - ② Use your thumb to pull the rubber cap firmly in the direction indicated by arrow (b).
 - ③ When one side of the rubber cap separates from the anode button, the anode cap can be removed by turning the rubber cap and pulling it in the direction of arrow (c).

HOW TO HANDLE AN ANODE CAP

- ① Do not use sharp objects which may cause damage to the surface of the anode cap.
- ② To avoid damaging the anode cap, do not squeeze the rubber covering too hard. A material fitting called a shatter-hook terminal is built into the rubber.
- ③ Do not force turn the foot of the rubber cover. This may cause the shatter-hook terminal to protrude and damage the rubber.

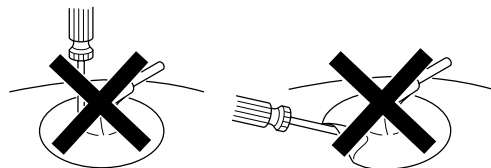

SECTION 2 SET-UP ADJUSTMENTS

The following adjustments should be made when a complete realignment is required or a new picture tube is installed.

These adjustments should be performed with rated power supply voltage unless otherwise noted.

The controls and switch should be set as follows unless otherwise noted:

PICTURE control normal

BRIGHTNESS control normal

Perform the adjustments in order as follows:

1. Beam Landing
2. Convergence
3. Focus
4. Screen (G2)/White Balance

Note: Test Equipment Required:

1. Color Bar Pattern Generator
2. Degausser
3. DC Power Supply
4. Digital Multimeter
5. Oscilloscope
6. CRT Analyzer


2-1. BEAM LANDING

Preparation:


- Input a white pattern signal.
- Face the picture tube in an East or West direction to reduce the influence of geomagnetism.

NOTE: Do not use the hand degausser because it magnetizes the CRT .


1. Input white pattern from pattern generator.
2. Loosen the deflection yoke mounting screw, and set the purity control to the center as shown below:

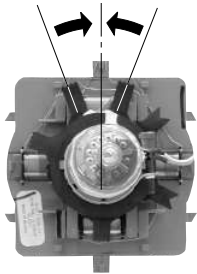


3. Input green pattern from pattern generator.
4. Move the deflection yoke backward, and adjust with the purity control so that green is in the center and red and blue are even on both sides.

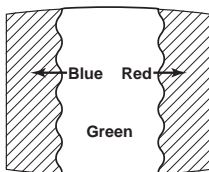

5. Move the deflection yoke forward, and adjust so that the entire screen becomes green.

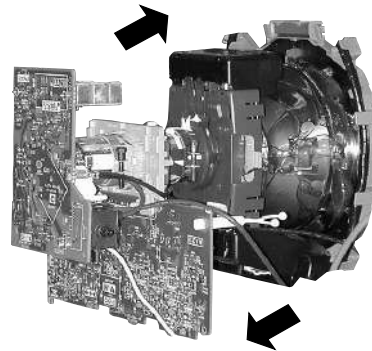


6. Switch over the raster signal to red and blue and confirm the condition.
7. When the position of the deflection yoke is determined, tighten it with the deflection yoke mounting screw.
8. When landing at the corner is not right, adjust by using the disk magnets.

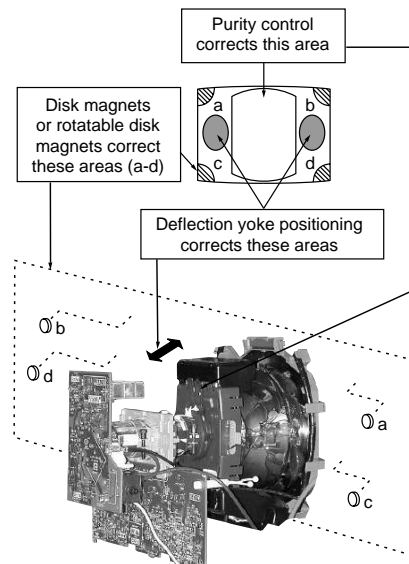

2-2. CONVERGENCE

Preparation:


- Perform FOCUS, V. LIN and V. SIZE adjustments.
- Set BRIGHTNESS control to minimum.
- Input dot pattern.

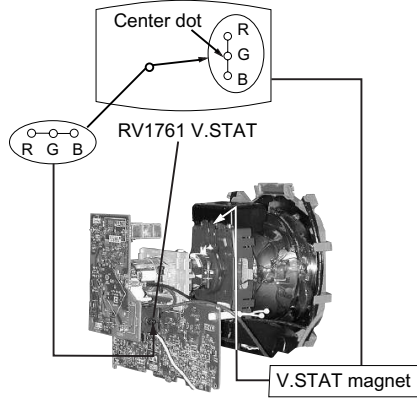


Vertical and Horizontal Static Convergence

1. Adjust V. STAT magnet to converge red, green and blue dots in the center of the screen (Vertical movement).

Tilt the V. STAT magnet and adjust static convergence to open or close the V. STAT magnet.

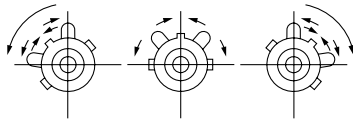


2. When the V. STAT magnet is moved in the direction of arrow a and b, red, green, and blue dots move as shown below:

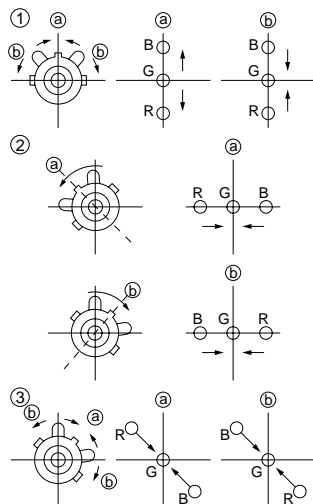

Operation of BMC (Hexapole) Magnet


The respective dot positions resulting from moving each magnet interact, so perform adjustment while tracking.

- 1 Use the V.STAT tabs to adjust the red, green, and blue dots so they line up at the center of the screen (move the dots in a horizontal direction).

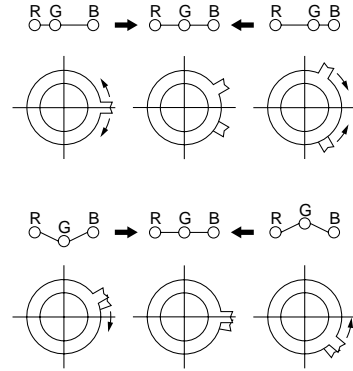

Y Separation Axis Correction Magnet Adjustment

1. Input cross-hatch pattern, adjust PICTURE to minimum and BRIGHTNESS to normal.
2. Adjust the deflection yoke upright so it touches the CRT.
3. Adjust so that the Y separation axis correction magnet on the neck assembly is symmetrical from top to bottom (open state).

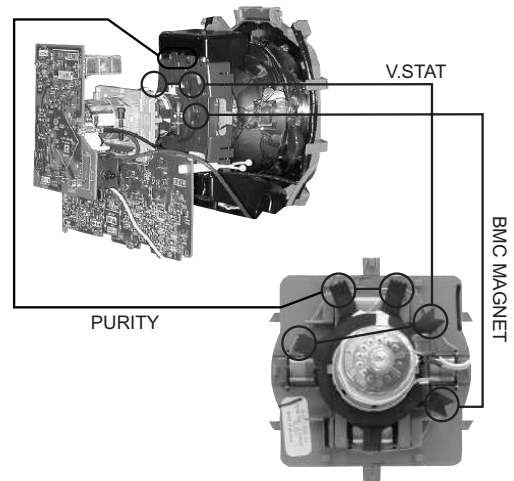


4. Return the deflection yoke to its original position.

Dynamic Convergence Adjustment

Before starting, perform Vertical and Horizontal Static Convergence Adjustment.


1. Slightly loosen deflection yoke screw.
2. Remove deflection yoke spacers.
3. Move the deflection yoke for best convergence as shown below:

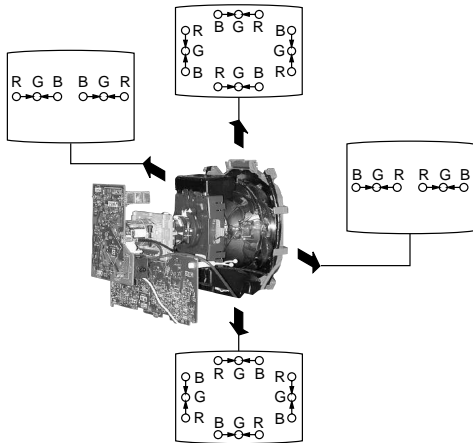

4. Tighten the deflection yoke screw.
5. Install the deflection yoke spacers.


Screen-corner Convergence

1. Affix a permalloy assembly corresponding to the misconverged areas:

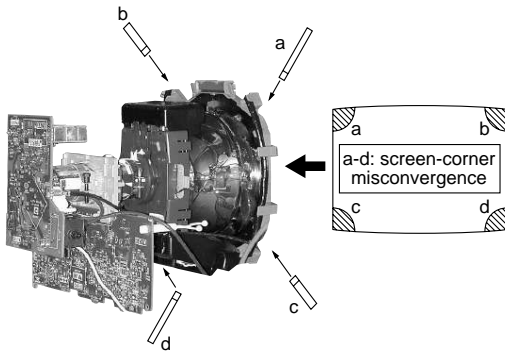

TLH Plate Adjustment

- Input crosshatch pattern.
- Adjust PICTURE QUALITY to standard, PICTURE and BRIGHTNESS to 50%, and OTHER to standard.
- Adjust the Horizontal Convergence of red and blue dots by tilting the TLH plate on the deflection yoke.

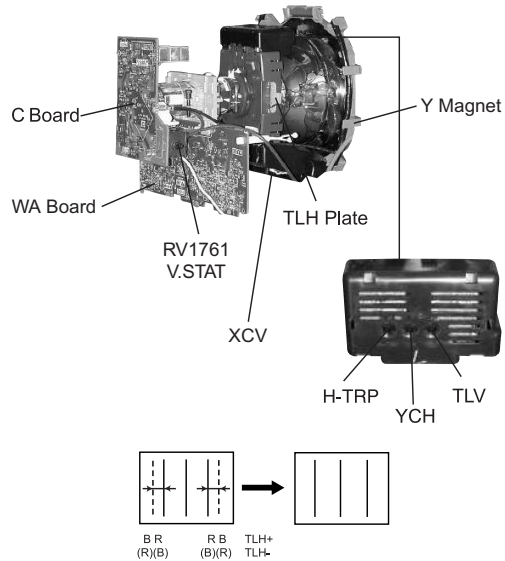


1. Adjust XCV core to balance X axis.
2. Adjust YCH VR to balance Y axis.
3. Adjust vertical red and blue convergence with V.TILT (TLV VR.)
Perform adjustments while tracking items 1 and 2.
4. Adjust Y MAGNET to correct V.BOW Geometry Distortion.
5. Adjust H-TRP to correct H.Trapezoid Geometry Distortion.

After adjusting items 4 and 5, confirm overall geometry again.


2-3. FOCUS

1. Input monoscope signal.
2. Set user controls to normal.
3. Set video mode to STANDARD.
4. Set the PICTURE to maximum.
5. Adjust at 325 Mark for best center/corner focus balance.
6. Receive an entire white signal. Make sure Magenta Ring is at an acceptable level.

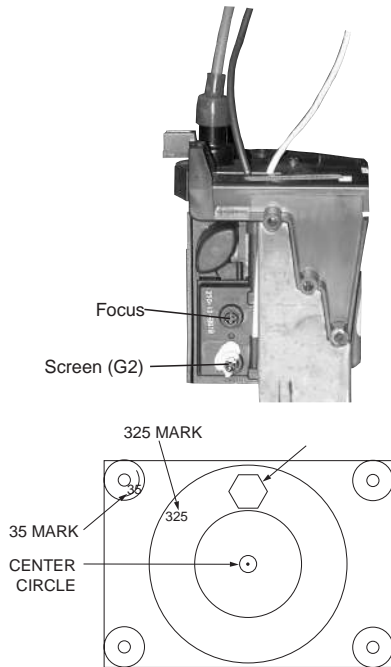

2-4. SCREEN (G2)

1. Input dot pattern from the pattern generator.
2. Set the user controls to NORMAL.
3. Attach the G2-Jig to the C Board.
5. Adjust RCUT, GCUT, BCUT, and SBRT in service mode with an oscilloscope so that voltages on the red, green, and blue cathodes are $170 \pm 2.0V_{dc}$.
5. Observe the screen and adjust SCREEN (G2) VR to obtain the faintly visible background of dot signal.
6. Push the TEST + JUMP (+ Channel) to cut off the signal. The screen should be bright or dark. Brightness of raster must be increased when adjusting.
7. Adjust screen VR until the screen is slightly cut off, or scarcely lights up. A signal cannot be seen when the brightness of the raster is high.
8. Push the JUMP again to release the cut off.

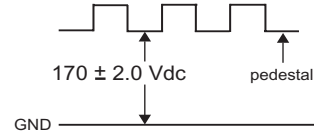

2-5. WHITE BALANCE ADJUSTMENTS

NO.	Disp.	Item	All Models
24	RDRV	Red Drive	*
25	GDRV	Green Drive	44
26	BDRV	Blue Drive	38
27	RCUT	Red Cut-off	14:Fix
28	GCUT	Green Cut-off	7
29	BCUT	Blue Cut-off	6
38	SBRT	Sub Bright	6

1. Set program palette to STANDARD and push RESET.
2. Input an entire white signal.
3. Set to Service Adjustment Mode.
4. Set the PICTURE and BRIGHT to minimum.
5. Adjust with SBRT if necessary.
6. Set RCUT to "14".
7. Select GCUT and BCUT with **[1]** and **[4]**.
8. Adjust with **[3]** and **[6]** for the best white balance.
9. Set the PICTURE and BRIGHT to maximum.
10. Select GDRV and BDRV with **[1]** and **[4]**.
11. Adjust with 3 and 6 for the best white balance.
12. Write into the memory by pressing **[MUTING]** then **[ENTER]**.
13. Repeat steps 1-12 for GDR4, BDR4, GCU4 and BCU4 using Video 4 input.


* Use values from Sub Contrast Adjustments



NOTE:

White balance should be adjusted after Sub Contrast because RDRV is also used in Sub Contrast Adjustment. (See page 22).

SECTION 3 SAFETY RELATED ADJUSTMENTS

3-1. R530, R531 CONFIRMATION METHOD (HOLD-DOWN CONFIRMATION) AND READJUSTMENTS

Always perform the following adjustments when replacing the following components marked with a  mark on the schematic diagram:

Part Replaced ()	Adjustment ()
R387, R550, R529, R530, R531, R532, R533, D519, D520, D521, IC501, C531, C532, T503, IC351, IC355, D302, Q301, R356, R359, R361, A Board	HV HOLD-DOWN R530, R531
IC643, R661 G Board	
IC6003, R6008 GA Board	


Preparation before Confirmation

- Using a Variac, apply AC input voltage: $130 \pm 2.0 / -0.0$ VAC.
- Turn the POWER switch ON.
- Input a white signal and set the PICTURE and BRIGHT controls to maximum.
- Confirm that the voltage of more than 23.0 VDC appears between TP85 and ground on the A Board.

Hold-Down Operation Confirmation

- Connect the current meter between Pin 11 of the FBT (T503) and the PWB land where Pin 11 would normally attach (See Figure 1 above).
- Input a dot signal and set PICTURE and BRIGHTNESS to minimum: $IABL = 2175 + 100 / -325$ μ A.
- Confirm the voltage of A Board TP91 is 135 ± 1.5 VDC.
- Connect the digital voltmeter and the DC power supply to TP85 and ground. (See Figure 1 above).
- Increase the DC power voltage gradually until the picture blanks out.
- Turn DC power source off immediately.
- Read the digital voltmeter indication (standard = $27.24 + 0.0 / - 0.1$ VDC).
- Input a white signal and set PICTURE and BRIGHTNESS to maximum: $IABL = 2175 + 100 / -325$ μ A.
- Repeat steps 4 to 7.

Hold-Down Readjustment

If the setting indicated in Step 2 of Hold-Down Operation Confirmation cannot be met, readjustment should be performed by altering the resistance value of R530, R531 component marked with  .

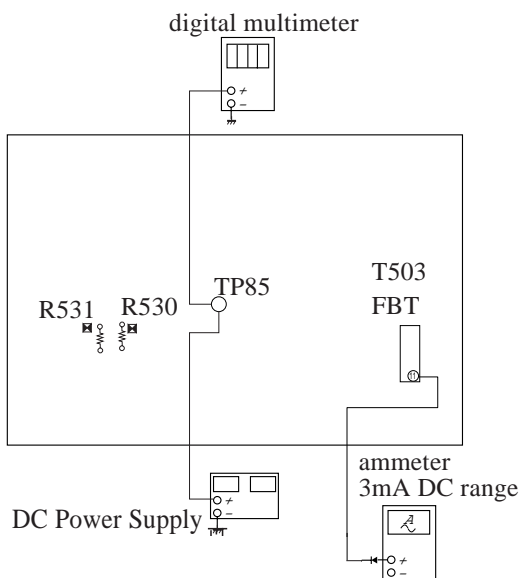



Figure 1

3-2. B+ VOLTAGE CONFIRMATION AND ADJUSTMENT

Note: The following adjustments should always be performed when replacing the following components, which are marked with  on the schematic diagram on the G Board or GA Board.

G BOARD: IC643, R661

GA BOARD: IC6003, R6008

- Using a Variac, apply AC input voltage: $130 + 2.0 / -0.0$ VAC
- Input a monoscope signal.
- Set the PICTURE control and the BRIGHT control to initial reset value.
- Confirm the voltage of G Board CN641 or GA Board CN6007 between pin ① to ground is less than 136.5 VDC.
- If step 4 is not satisfied, replace the R661 on G Board or R1008 on GA Board and repeat the above steps.

SECTION 4 CIRCUIT ADJUSTMENTS

ELECTRICAL ADJUSTMENTS BY REMOTE COMMANDER

Use the Remote Commander (RM-Y170, RM-Y171) to perform the circuit adjustments in this section.


NOTE: Test Equipment Required:

- Pattern generator
- Frequency counter
- Digital multimeter
- Audio oscillator

4-1. SETTING THE SERVICE ADJUSTMENT MODE


1. Standby mode (Power off).
2. Press **Display** → Channel **5** → Sound volume **+** → Power on the Remote Commander (Press each button within a second).

Service Adjustment Mode In

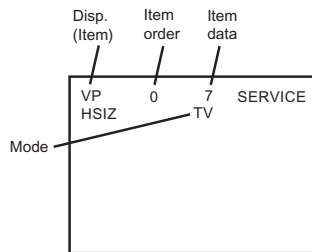


3. The CRT displays the item being adjusted.
4. Press **1** or **4** on the Remote Commander to select the item.
5. Press **3** or **6** on the Remote Commander to change the data.
6. Press **MUTING** then **ENTER** to write into memory.

Service Adjustment Mode Memory

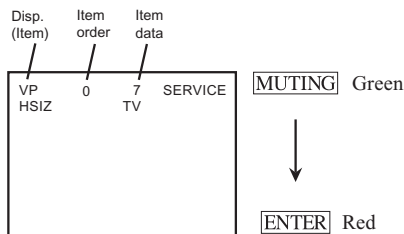

7. Press **8** then **ENTER** on the Remote Commander to initialize.

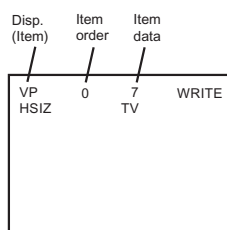


Carry out step 7 when adjusting IDs 0 to 7 and when replacing and adjusting IC002.

8. DO NOT turn off set until SERVICE appears.

4-2. MEMORY WRITE CONFIRMATION METHOD

1. After adjustment, pull out the plug from the AC outlet, then replace the plug in the AC outlet again.
2. Turn the power switch ON and set to Service Mode.
3. Call the adjusted items again to confirm they were adjusted.

4-3. ADJUST BUTTONS AND INDICATORS

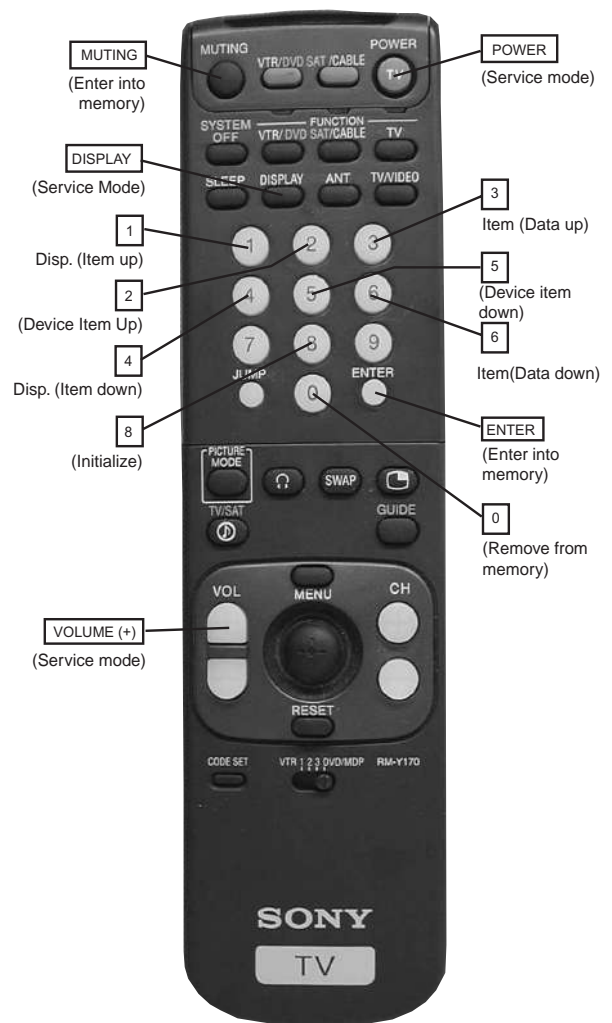

RM-Y170

4-4. ADJUSTMENT ITEMS

KV-32FV16/32FV26/34FV16/34FV16C/34FX260/34FX260C

Register Name	Description	Data Range	Adj/Fix	Initial Data	32"			Comments
					FV16	FV26	FX260	
0	HPOS					10		0: 2ms delay, 63: 2ms advance
1	HSIZ	H-Position	Adj	7		18		EW DC bias, 0: -0.5V, 31: 0V, 63: +0.5V
2	VBOW	H-Size	Adj	10		8		0: top/bottom delay 900ns, 7: center, 15: top/bottom advance 900ns
3	VANG	AFC Bow	Adj	6		6		0: top delay/bottom advance 650ns, 7: center, 15: top advance/bottom delay 650ns
4	TRAP	AFC Angle	Adj	5		7		0: 1.5ms advance, 15: 1.5ms delay
5	PAMP	Trapezium Adjustment	Adj	6		36		0: 0.15Vpp, 31: 0.7Vpp, 63: 1.3Vpp
6	UCPN	Pin Compensation	Adj	32		39		0: -0.4V, 63: +0.4V
7	LCPN	Upper Corner Pin	Adj	36		39		0: -0.4V, 63: +0.4V
8	VSIZ	Lower Corner Pin	Adj	36		9		0: -15%, 31: 0%, 63: +15%
9	VPOS	V-Size	Adj	0		36		0: -0.1V, 31: 0V, 63: +0.1V
10	VLIN	V-Position	Adj	31		6		0: 85% top enlarged, 7: 100% top normal, 15: 115% top compressed
11	VSCO	V-Linearity	Adj	7		11		0: 0V added to VD, 15: 100mVpp added to VD
12	VZOM	S-Correction	Adj	7		0		0: Zoom Off, 1: Zoom On (top/bottom cut by 25% when ASPECT=31, RGB blanked in this interval)
13	EHT	16:9 CRT Zoom Mode On/Off	FIX	0		4		0: Picture adjusted 0%, 15: Picture Adjusted -5%
14	ASP	Vertical Size High Voltage Correction	FIX	4		47		0: 75%(16x9 CRT Full), 31: 100%(4x3 CRT Full), 63: 110%
15	ASP1	Aspect Ration Control 4:3 Mode	FIX	47		47		0: 75%(16x9 CRT Full), 31: 100%(4x3 CRT Full), 63: 110%
16	SCRL	Aspect Ration Control 16:9 Mode	FIX	47		31		0: Scrolled toward top 32H, 63: Scrolled toward bottom 32H
17	HBSW	16:9 Vertical Scroll During Zoom	FIX	31		1		0: OFF, 1: ON
18	LBLK	H Blanking Switch	FIX	1		15		0: +1.2ms, 7: Center, 15: -1.2ms
19	RBLK	Left Blanking	FIX	15		0		0: +1.2ms, 7: Center, 15: -1.2ms
20	HDW	Right Blanking	FIX	0		1		0: Normal Mode (25ms), 1: Narrow Pulse Width
21	EWDC	H Drive Pulse Width	FIX	1		0		0: OFF, 1: ON
22	LVLN	EW/DC Display 4x3 on 16x9 CRT	FIX	0		0		0: 100%, 15: 85% Picture top compressed
23	UVLN	Picture Bottom Lin Adjust	Adj	0		0		0: 100%, 15: 85% Picture bottom compressed
24	RDRV	Picture Top Lin Adjust	Adj	0		52		0: 1.5Vpp, 63: 3.0Vpp Red Signal Output
25	GDRV	Red Drive	Adj	31		44		0: 1.5Vpp, 63: 3.0Vpp Green Signal Output
26	BDRV	Green Drive	Adj	31		38		0: 1.5Vpp, 63: 3.0Vpp Blue Signal Output
27	RCUT	Blue Drive	Adj	31		14		0: 3.5mA IK, 7: 13mA IK, 15: 22.7mA IK
28	GCUT	Red Cutoff	FIX	7		7		0: 3.5mA IK, 7: 13mA IK, 15: 22.7mA IK
29	BCUT	Green Cutoff	Adj	7		6		0: 3.5mA IK, 7: 13mA IK, 15: 22.7mA IK
30	RDR4	Blue Cutoff	Adj	7		42		0: 1.5Vpp, 63: 3.0Vpp Red Signal Output
31	GDR4	Video 4 Red Drive	Adj	31		33		0: 1.5Vpp, 63: 3.0Vpp Green Signal Output
32	BDR4	Video 4 Green Drive	Adj	31		29		0: 1.5Vpp, 63: 3.0Vpp Blue Signal Output
33	RCU4	Video 4 Blue Drive	Adj	31		14		0: 3.5mA IK, 7: 13mA IK, 15: 22.7mA IK
34	GCU4	Video 4 Red Cutoff	FIX	7		7		0: 3.5mA IK, 7: 13mA IK, 15: 22.7mA IK
35	BCU4	Video 4 Green Cutoff	Adj	7		6		0: 3.5mA IK, 7: 13mA IK, 15: 22.7mA IK
36	SBRT	Video 4 Blue Cutoff	Adj	7		6		Sub Brightness
37	RON	Sub Brightness	Adj	15		1		0: OFF, 1: ON
38	GON	Red Off	FIX	1		1		0: OFF, 1: ON
39	BON	Green Off	FIX	1		1		0: OFF, 1: ON
40	AXPL	Blue Off	FIX	1		0		0: Normal Axis, 1: Forced PAL Asix
41	CBPF	Axis PAL	FIX	0		1		0: BPF OFF, 1: BPF ON
42	COFF	Chroma BPF On/Off	FIX	1		0		0: Chroma OFF, 1: Chroma ON
43	TSSP	Color On/Off	FIX	0		6		0=-12dB, 7=+3.5dB, 15=+9dB
44	TSPF	Sub Sharpness for TV Input	Fix by model	6		1		0=2.5MHZ, 1=3.0MHZ
45	VSPF	Sharpness fo for TV Input	FIX	1		7		0=-12dB, 7=+3.5dB, 15=+9dB
46	YSPF	Sub Sharpness for Video Input	Fix by model	7		1		0=2.5MHZ, 1=3.0MHZ
47	YSSP	Sharpness fo for Video Input	FIX	1		7		0=-12dB, 7=+3.5dB, 15=+9dB
48	YSPF	Sub Sharpness for YUV Input	Fix by model	7		1		0=2.5MHZ, 1=3.0MHZ
		Sharpness fo for YUV Input	FIX	1		1		0=2.5MHZ, 1=3.0MHZ

VP SW1312XCS

Register Name	Description	Data Range	Adj/Fix	Initial Data	32"			Comments	
					FV16	FV26	FX260		
49	AXNT	Axis NTSC	0,1	FIX	0			0: Japan Axis, 1: US Axis	
50	PREL	Pre/Overshoot Ratio	0,1	FIX	1			0: 1:1, 1: 2:1	
51	DCT	DC Transmission Ratio	0,1	FIX	1			0:100%, 1:85%	
52	ABLM	ABL Mode	0,1	FIX	1			0:Picture ABL, 1:Picture/Brightness ABL	
53	FSC	FSC Output On/Off	0,1	FIX	1			0: FSC output OFF, 1: FSC output ON	
54	HOSC	H VCO Frequency Adjustment	0-15	FIX	7			0: Low, 15: High (40 Hz Steps)	
55	VSS	Vsync Slice Level	0,1	FIX	0			0: 1/3 from sync tip, 1: 1/4 from sync tip	
56	HSS	Hsync Slice Level	0,1	FIX	0			0: 1/3 from sync tip, 1: 1/4 from sync tip	
57	HMSK	Macrovision Countermeasure	0,1	FIX	1			0: Off, 1: ON	
58	VTMS	Select Signal VTIM Pin	0-3	FIX	0			0: V retrace timing, 1: Hsync signal, 2: Vsync signal, 3: don't use	
59	AFC	AFC	0-3	FIX	0			0: High Gain, 1: Medium Gain, 2: don't use, 3: Extremely low gain	
60	REFP	REFP	0,1	FIX	0			0: R=20H/G=21H/B=22H, 1: R=23H/G=24H/B=25H	
61	VBSW	VBLK Width Control	0-3	FIX	0			0: 9H from B, 1: 10H from B, 2: 11H from B, 3:12H from B (When JUMP SW=1)	
62	BKOF	ABL Signal Detection Level	0,1	FIX	0			0: VTH=3V, 1: VTH=1V	
63	AGN2	Aging Mode 2 - Black Output Mode	0,1	FIX	0			0: Black Output Mode OFF, 1: Black Output Mode ON	
0	SREF	Surround Effect	0-15	FIX	7			0: Min, 15: Max (8-15 LOOP=1)	
1	BBLP	BBE Low PAss	0-15	FIX	5			0: 0.5dB, 15: 10dB	
2	BBHP	BBE High Pass	0-15	FIX	3			0: 0.5dB, 15: 10dB	
3	SVOL	Sub Volume	0-15	FIX	7			0:-0 volume steps, 15:-15 volume steps	
4	SBAL	Sub Balance	0-15	FIX	7			0: +Right, 15:+Left	
5	SBAS	Sub Bass	0-15	Fix by model	5	8	5	5	0:-7 steps, 15: +8 steps
6	STRE	Sub Treble	0-15	Fix by model	3	8	3	5	0:-7 steps, 15: +8 steps
0	SPCA	SRS Space Attenuation	0-63	FIX	0				0: 0dB, 63: -31dB (1dB steps)
1	CENA	SRS Center Attenuation	0-63	FIX	0				0: 0dB, 63: -31dB (1dB steps)
2	INPA	Input Attenuation	0-127	FIX	3				0: 0dB, 127: -31.5dB (0.5dB steps)
0	COU	Chroma Signal Gain / BPF	0-3	FIX	3				Input/Output gain=1 / BPF ON
1	YAPS	Y V-Compensation/Peaking	0-3	FIX	3				Correctin enabled for digital/analog inputs
2	NSDS	Standard/Non-Standard Processing	0-3	FIX	0				Standard adaptive processing
3	MSS	Inter-frame/Inter-line Mode	0-3	FIX	0				Adaptive Processing
4	EXAD	External ADC Insert	0,1	FIX	0				Internal Y-ADC
5	PECS	Pedestal Error Correction	0-3	FIX	0				Standard
6	EXCS	C sync Input	0-3	FIX	1				Use CSI
7	CPP	Y ADC Amplitude/Clamp Method	0-3	FIX	0				Y-ADC & C-ADC Vtb=1.25V
8	HDP	H Phase Fine Adjustment	0-7	FIX	3				Phase +/- Omsec
9	CDL	C Output Delay Fine Adjustment	0-7	FIX	5				Y/C Delay +/- Omsec
10	DYCO	Y Moving Coring Level	0-15	FIX	2				0: Close to moving pictures, 15: Close to still pictures
11	DYGA	Y Moving Coring Gain	0-15	FIX	10				0: Close to still Pictures, 15: Close to moving Pictures
12	DCCO	C Moving Coring Level	0-15	FIX	2				0: Close to moving pictures, 15: Close to still pictures
13	DCGA	C Moving Coring Gain	0-15	FIX	9				0: Close to still Pictures, 15: Close to moving Pictures
14	YNRK	YNR Non-linear Filter Gain	0,1	FIX	1				x7/8 large noise reduction and large after image
15	YNRI	YNR Non-linear Filter Convergence	0,1	FIX	0				6LSB small noise reduction and small after image
16	YNRL	YNR Non-linear Filter Limit Level	0-3	FIX	1				0: YNR Off , 3: 3LSB large noise reduction
17	CNRK	CNR Non-linear Filter Gain	0,1	FIX	1				x7/8 large noise reduction and large after image
18	CNRI	CNR Non-linear Filter Convergence	0,1	FIX	0				6LSB small noise reduction and small after image
19	CNRL	CNR Non-linear Filter Limit Level	0-3	FIX	1				0: CNR OFF , 3: 3LSB large noise reduction
20	ID1O	ID-1 Superimpose Signal	0,1	FIX	0				Through, no superimposition
21	ID1W	Specifies bit A1 of Word 0	0,1	FIX	0				0: 4x3, 1: 16x9
22	ID1N	Spedifies bit A2 of Word 0	0,1	FIX	0				0: normal, 1:letterbox
23	CLK	CLK8 Pin Output	0,1	FIX	1				0: Output 8fsc, 1: Output OFF

VP
CX A2131AS

AP
BH3868

SRS
TDA7464

3D COMB
uPD64082

KV-32FV16/32FV26/34FV16/34FV16C/34FX260/34FX260C

ADJUSTMENT ITEMS (cont.)

Register Name	Description	Data Range	Adj/Fix	Initial Data	32"			Comments
					FV16	FV26	FX260	
24	ST0S	Select ST0 Pin Output Signal	0-3	FIX	1		1	External Y-ADC clamp pulse
25	WSC	Noise Detection Coring	0-3	FIX	1		1	1LSB coring for noise detection circuit
26	VTRH	H-sync Non-Standard Detection Hysteresis	0-3	FIX	1		1	Low hysteresis (2 clock pulses)
27	VTRR	H-sync Non-Standard Detection Sensitivity	0-3	FIX	1		1	Medium sensitivity (+/- 8 clock pulses)
28	LDSR	Frame Sync Non-Std Detection Sensativity	0-3	FIX	2		2	Low sensitivity (1.5 clock pulses)
29	PWRE	Internal ADC Input Range	0,1	FIX	0		0	Same input range on Y-ADC and C-ADC
30	VAPG	Vertical Aperture Compensation Gain	0-7	FIX	4		4	0: Correction OFF, 7: Max Correction
31	VAPI	Vertical Aperture Comp Convergence	0-31	FIX	12		12	0: Correction OFF, 31: Max Correction
32	TEST	Test Bit	0,1	FIX	0		0	Normal Mode
33	YPFT	Y Peaking Filter Center Frequency	0-3	FIX	3		3	4.22 MHz
34	YPIFG	Y Peaking Filter Gain	0-15	FIX	7		6	0: -1 gain, 15: 0.875 gain
35	V1PS	Horizontal Dot Supression Level	0-3	FIX	2		2	Medium suppression
36	VEGS	Vertical Dot Supression Level	0-3	FIX	2		2	Medium suppression
37	CC3N	Line Comb C Separation Filter	0,1	FIX	0		0	Narrow bandwidth
38	C0HS	C Signal Delay Time at NR	0,1	FIX	0		0	1H Delay
39	CLPH	Y-ADC Clamp Test Bit	0,1	FIX	0		0	Normal Mode
40	SEL2	DC Detection High Freq Sensativity	0,1	FIX	0		0	Low sensitivity, Close to still pictures
41	SEL1	DY detection Low Freq Sensativity	0,1	FIX	0		0	Low sensitivity, Close to still pictures
42	YHCO	Y High Freq Coring	0-3	FIX	1		0	Small Amount of coring (+/- 1LSB)
43	YHCG	Y High Freq Coring Gain	0,1	FIX	0		0	Gain = 1
44	OVST	Non Standard Detection Test Bit	0,1	FIX	0		0	Normal Mode
45	CSHD	H/V counter Test Bit	0,1	FIX	0		0	Normal Mode
46	KCTT	H/V counter Test Bit	0-3	FIX	0		0	Normal Mode
47	SHT	Non Standard Detection Test Bits	0,1	FIX	0		0	Normal Mode
48	VCT	H/V counter Test Bit	0,1	FIX	0		0	Normal Mode
49	OTT	H/V counter Test Bit	0,1	FIX	0		0	Normal Mode
50	CL2D	Clock Generator Test Bit	0,1	FIX	1		1	Normal Mode
51	CGGT	Clock Generator Test Bit	0,1	FIX	0		0	Normal Mode
52	CLEB	Clock Generator Test Bit	0,1	FIX	0		0	Normal Mode
53	CGT	Clock Generator Test Bit	0,1	FIX	0		0	Normal Mode
54	HPLL	Horizontal PLL Filter	0,1	FIX	1		1	Quick convergence
55	BPLL	Burst PLL Filter	0,1	FIX	1		1	Quick convergence
56	FSCF	Burst Extraction Gain	0,1	FIX	0		0	High gain
57	PLL	PLL Loop Gain	0,1	FIX	1		1	High gain, quick convergence
58	KILR	Killer Detection Reference	0-15	FIX	3		3	0: Detection off, 15: High detection sensitivity
59	HSSL	Horizontal Sync Slice Level	0-15	FIX	12		12	0: 4LSB, 15: 19LSB
60	VSSL	Vertical Sync Slice Level	0-15	FIX	8		8	0: HSSL + 0LSB, 15: HSSL + 15LSB
61	BGPS	Burst Gate Start Position	0-15	FIX	5		5	0: Hsync center + 2ms, 15: Hsync center +5.75ms
62	BGPW	Internal Burst Gate Pulse Width	0-15	FIX	10		10	0: 0.5ms, 15: 4.25ms
63	ADCL	ADC Clock Delay	0-3	FIX	3		3	0: 0ns, 3: 20.5ns (typical)
64	ADPD	ADC Power Down	0,1	FIX	1		1	Stop ADC when not in use
65	NSDW	Non Standard Detection Test Bit	0,1	FIX	0		0	Normal Mode
66	CNRF	CNR Section Test Bit	0,1	FIX	0		0	Normal Mode
0	SHPR	Controls both DL APACON and SRT	0-127	Fix by Model	52		52	0: Minimum, 127: Maximum
1	BLAD	Black Area Detect	0-3	FIX	0		0	0: 10IRE, 1: 20IRE, 2: 30IRE, 3: 40IRE
2	SRTS	SRT Start Amplitude	0-3	FIX	3		3	0: 7IRE, 1: 10IRE, 2: 14IRE, 3: 28IRE
3	YNR	Controls YNR ON/OFF	0,1	FIX	1		1	YNR ON
4	GIRE	Gamma Correction Start Point	0-3	FIX	3		3	0: 70IRE, 1: 80IRE, 2: 90IRE, 3: OFF
5	DAC1	1 bit DAC Output	0,1	FIX	0		0	Open
6	DAC2	1 bit DAC Output	0,1	FIX	0		0	Open

3D COMB
28099DnPIC IMP
N221V1

Register Name	PIC IMP TA1226N	Description	Data Range	Adj/Fix	Initial Data	32"			Comments
						FV16	FV26	FX260	
7	GCUR	Controls Curve of Gamma Correction	0,1	FIX	0		0		0: -2.4dB, -1.6dB
8	BLKC	Black Compensation	0,1	FIX	1		1		OFF
9	TEST	Test Bit	0-3	FIX	3		3		Pin 20 Output: 0=RS, 1=SHR, 2=RTC, 3=TEST3
10	RS	Gain of DL APACon at 8MHz Peak	0-7	FIX	0		0		0: 0dB, 7: +6dB
11	RTC	Compensation Ratio of SRT and DL APACon	0-7	FIX	4		4		0: Min, 7: Max
12	VMLO	Gain for Menu VM=LOW	0-2	FIX	1		1		0=off, 1=-6dB, 2=-3dB, 3=0dB
0	PIPH	PIP H-position	0-127	FIX	34		34		0:Right, 127:Left
1	PIPV	PIP V-position	0-63	FIX	22		22		0:Up, 63:Down
2	POFV	Position Offset Vertical	0-15	FIX	4		4		Vertical PIP Offset from Center
3	POFH	Position Offset Horizontal	0-31	FIX	17		17		Horizontal PIP Offset from Center
4	VACQ	PIP V-Acquisition Window	0-15	FIX	8		8		0: -8 lines up, 8: Center, 15: +7 pixels down
5	HACQ	PIP H-Acquisition Window	0-15	FIX	8		8		0: -16 pixels right, 8: Center, 15: +14 pixels left
6	PVID	PIP Vsync Delay	0-31	FIX	0		0		Step size 3.56ms< 1 step < 6.4ms
7	VERB	Vertical Blanking	0,1	FIX	0		0		0: DAC Blanking during line blanking interval, 1: DAC Blanking during line AND field intervals
8	PSEL	SELDOWN Bit Control	0,1	FIX	1		1		0:Open out, 1:TTL out
9	SELD	Select PYS Delay	0-15	FIX	8		8		0: -8 clock cycles, 8: NO delay, 15: +7 clock cycles
10	4SLD	Select PYS Delay YUV Input	0-15	FIX	8		8		0: -8 clock cycles, 8: NO delay, 15: +7 clock cycles
11	PCOR	Position Correction	0,1	FIX	1		1		0: OFF, 1: ON (Position correction during varying parent frequency)
12	AGCR	AGC Gain Control Reset	0,1	FIX	1		1		0: Normal, 1: Reset (transition of 0->1 resets AGC)
13	AGCM	AGC Mode	0-3	FIX	0		3		0: Sync height & ADC Overflow, 1: sync height, 2: ADC overflow, 3: AGC Fixed
14	AGCV	ADC Value	0-15	FIX	11		9		0: Input vantage 0.5Vpp, 15: Input Voltage is 1.5Vpp
15	CLMD	Clamp Pulse Duration	0-3	FIX	3		3		0: 0.5ms, 1: 0.9ms, 2: 1.2ms, 3: 1.5ms
16	CLMS	Clamp Pulse Start	0-3	FIX	2		2		0: 1.0ms, 1: 1.5ms, 2: 2.0ms, 3: 2.5ms
17	LMOF	Luminance Offset	0-3	FIX	3		3		0: NO OFFSET, 1: +16LSB, 2: -8LSB, 3: -16LSB
18	PYDL	Y/C Delay	0-15	FIX	8		2		0: -8 pixels, 15: +7 pixels
19	FRMY	Frame Y Level	0-15	Fix by Model	6		5		Adjusts 4 MSB of Frame Y Signal
20	FRSL	Frame Type Select	0,1	FIX	1		1		0: Normal frame, 1: 3D frame
21	FRWH	Frame Width Horizontal	0-7	FIX	4		4		0: No frame, 7: 7 pixels
22	FRWV	Frame Width Vertical	0-3	FIX	1		1		0: No frame, 3: 3 lines
23	PBSW	PIP Block Selection (PIPBG vs PIPBLK)	0,1	FIX	0		1		Blocking Type: 0= PIPBG(gray), 1=PIPBLK(black)
0	CKIL	Color Killer Threshold	0-3	FIX	0		0		0: -30dB, 1: -18dB, 2: -24dB, 3: color always off
1	COLO	Color Killer Off	0,1	FIX	0		0		0: Color killer active, 1: Color always on
2	PSHU	PIP Sub Hue	0-15	FIX	7		7		PIP sub hue
3	4PSU	PIP Sub Hue YUV Input	0-15	FIX	7		7		PIP sub hue
4	CPLL	Chroma PLL Off	0,1	FIX	0		0		0: Chroma PLL active, 1: Chroma PLL free running
5	SCAD	Sub Carrier Freq Fine Adjustment	0-31	FIX	5		6		0: -150 PPM, 7: default, 31: +310 PPM
6	PCON	PIP Contrast	0-15	FIX	0		0		0: nominal, 15: +30% increase
7	4PCN	PIP Contrast YUV Input	0-15	FIX	0		0		0: nominal, 15: +30% increase
8	PBRT	PIP Brightness	0-15	FIX	0		0		0: nominal, 15: +20% increase
9	4PBR	PIP Brightness YUV Input	0-15	FIX	0		0		0: nominal, 15: +20% increase
10	IPER	V Pedestal	0-15	FIX	0		0		0: nominal, 15: +15LSB offset
11	4IPR	V Pedestal YUV Input	0-15	FIX	4		0		0: nominal, 15: +15LSB offset
12	IPEG	Y Pedestal	0-15	FIX	0		0		0: nominal, 15: +15LSB offset
13	4IPG	Y Pedestal YUV Input	0-15	FIX	0		0		0: nominal, 15: +15LSB offset
14	IPEB	U Pedestal	0-15	FIX	1		1		0: nominal, 15: +15LSB offset
15	4IPB	U Pedestal YUV Input	0-15	FIX	1		1		0: nominal, 15: +15LSB offset
16	BLKR	Invert V Pedestal	0,1	FIX	1		0		0: Offset add during blanking, 1: Offset add during active
17	BLKB	Invert U Pedestal	0,1	FIX	0		1		0: Offset add during blanking, 1: Offset add during active
18	PVGA	Peak Level V Output	0-255	FIX	84		84		0: 0.3Vpp, 192: 1.0Vpp, 255: 1.2Vpp
19	4PVG	Peak Level V Output YUV Input	0-255	FIX	69		69		0: 0.3Vpp, 192: 1.0Vpp, 255: 1.2Vpp

PIP
 SDA9588X
PIP-YC
 SDA9588X

KV-32FV16/32FV26/34FV16/34FV16C/34FX260/34FX260C

ADJUSTMENT ITEMS (cont.)

	Register Name	Description	Data Range	Adj/Fix	Initial Data	32"			Comments		
						FV16	FV26	FX260			
20	PUGA	PIP-YC SDA9588X	Peak Level U Output	0-255	FIX	52	52		0: 0.3Vpp, 192: 1.0Vpp, 255: 1.2Vpp		
21	4PUG		Peak Level U Output YUV Input	0-255	FIX	36	36		0: 0.3Vpp, 192: 1.0Vpp, 255: 1.2Vpp		
22	PYGA		Peak Level Y Output	0-255	Fix by Model	104	125		0: 0.3Vpp, 192: 1.0Vpp, 255: 1.2Vpp		
23	4PYG		Peak Level Y Output YUV Input	0-255	Fix by Model	129	135		0: 0.3Vpp, 192: 1.0Vpp, 255: 1.2Vpp		
24	CHRO		UV Output Polarity	0,1	FIX	0	0		0: +U/+V output, 1: -U/-V output		
25	SATA		Color Saturation Adjustment	0-15	FIX	8	9		0: No color, 8: nominal saturation, 15: nominal x 1.875		
26	YPKG		Y Peaking Adjustment	0-7	FIX	7	7		0: No peaking, 7: Strongest Peaking		
27	4YPK		Y Peaking Adjustment YUV Input	0-7	FIX	7	7		0: No peaking, 7: Strongest Peaking		
28	YCOR		Y Coring Enable	0,1	FIX	1	1		0: OFF, 1: ON		
29	CLPL	Clamp Pulse Length	0-3	FIX	0	0		0=5ms, 1=3.75ms, 2=2.5ms, 3=1.25ms			
0	RTCO	Rotation Coil	0-63	FIX	31	31		Rotation coil adjustment for nominal value			
1	T2CO	DAC CXA1315	Sub Color TV Input	0-7	Adj	120	102		TV Sub Color Adjustment (CXA2039 YUV Models AT DAC)		
2	V2CO		Sub Color Video Input	0-7	Adj	120	148		VIDEO1-3 Sub Color Adjustment (CXA2039 YUV Models at DAC)		
3	4COL		Sub Color YUV Input	0-7	Adj	120	145		YUV Sub Color Adjustment (CXA2039 YUV Models at DAC)		
4	T2HU		Sub Hue TV Input	0-7	Adj	15	16		TV Sub HUE Adjustment (CXA2039 YUV Models at DAC)		
5	V2HU		Sub Hue Video Input	0-7	Adj	15	19		VIDEO1-3 Sub HUE Adjustment (CXA2039 YUV Models at DAC)		
6	4SHU		Sub Hue YUV Input	0-7	Adj	15	16		YUV Sub HUE Adjustment (CXA2039 YUV Models at DAC)		
0	XJGL	ID1	Decoding Result Held For VCR Scanning	0,1	FIX	0	0		Hold data during VCR variable speed playback		
1	LNJ1	CXD2085	ID-1 Signal Location	0,1	FIX	0	0		Search for ID-1 data +/- one line in VBI		
0	DUM1	CCD	CCD Dummy Register						Used to display CC data in Service Mode		
1	VOSD		VChip OSD Test Register	0,1	FIX	0	0		Used to display VChip data in Service Mode		
0	DISP	OP M306V5	OSD Position	0-63	Adj	15	17		OSD horizontal position		
1	RAMW		OSD RAM Window	0,1	FIX	0	0				
2	ICMP		OSD Non-interlace Threshold	0-15	FIX	4	4		0: 0 fields, 15: 15 fields		
3	IPOR		OSD Non-interlace Even/Odd Display	0-3	Fix	1	1		0=Even OSD display, 1= Odd OSD display, 2&3=N/A		
4	FAWD		Factory AutoWide Mode	0,1	Fix	0	0		0= No Autowide in RF mode, 1= Autowide in RF Mode		
5	TILT	Tilt Correction Spec	0,1	Fix	0	2		0= New Tilt Spec for AA2U (less VANG offset), 1= AA2W/AA2H Tilt Spec			
PROGRAM FOR EACH PALETTE MODE →						VIVID	STD	MOVIE	SPORTS		
0	VPIC	PROGRAM PALETTE	Set Current Program Palette PICTURE Reset Level	0-63	FIX by Palette	50	63	50	38	63	0=MIN, 63=MAX
1	VBRT		Set Current Program Palette BRIGHTNESS Reset Level	0-63	FIX by Palette	31	31	31	31	31	0=MIN, 63=MAX
2	VCOL		Set Current Program Palette COLOR Reset Level	0-63	FIX by Palette	31	38	31	31	38	0=MIN, 63=MAX
3	VSHP		Set Current Program Palette SHARPNESS Reset Level	0-63	FIX by Palette	31	31	31	31	31	0=MIN, 63=MAX
4	VVM		Set Current Program Palette VM Reset Level	0-3	FIX by Palette	1	2	1	0	2	0=OFF, 1=LOW, 2=HIGH, 3=N/A
5	VTRI		Set Current Program Palette Color Temp Reset Setting	0-3	FIX by Palette	1	0	1	2	0	0=COOL, 1=NEUTRAL, 2=WARM, 3=N/A
6	VGMA		Set Current Program Palette YC/J GAMMA	0-3	FIX by Palette	2	3	2	2	2	0=GAMMA CORRECTION OFF, 3=+12 IRE CORRECTION @ 40 IRE INPUT
7	VBLK		Set Current Program Palette Black Stretch	0,1	FIX by Palette	1	1	1	1	1	0=BLACK STRETCH OFF, 1=BLACK STRETCH ON
8	VAPA		Set Current Program Palette APACON	0,1	FIX by Palette	1	0	1	1	1	0=APACON OFF, 1=APACON ON
9	VSRT		Set Current Program Palette SRT	0,1	FIX by Palette	0	1	0	0	0	0=SRT OFF, 1=SRT ON
10	VNRM	Set Current Program Palette NRMD	0,1	FIX by Palette	0	0	0	0	1	0=3D YCS, 1=2D YCS	
0	RDOF	WARM COLOR TEMP OFFSET	Red Drive offset for WARM	0-63	FIX	0	0		0	Red Drive MOVIE=RDRV(RDR4)-RDOF	
1	GDOF		Green Drive offset for WARM	0-63	FIX	4	4		4	Green Drive MOVIE=GDRV(GDR4)-GDOF	
2	BDOF		Blue Drive offset for WARM	0-63	FIX	15	15		15	Blue Drive MOVIE=BDRV(BDR4)-BDOF	
3	RCOF		Red Cutoff offset for WARM	0-31	FIX	0	0		0	Red Cutoff MOVIE=RCUT(RCU4)-RCOF	
4	GCOF		Green Cutoff offset for WARM	0-31	FIX	2	2		2	GREEN Cutoff MOVIE=GCUT(GCU4)-GCOF	
5	BCOF		Blue Cutoff offset for WARM	0-31	FIX	7	7		7	BLUE Cutoff MOVIE=BCUT(BCU4)-BCOF	
6	DCOF	Dynamic Color setting for WARM	0,1	FIX	0	0		0	0=OFF, 1=ON		

Register Name	Description	Data Range	Adj/Fix	Initial Data	32"			Comments	
					FV16	FV26	FX260		
0	ID-0	ID-0 (Language/Color Systems)	0-255	Fix by model	89	<i>refer to NVM ID Chart</i>			See ID map
1	ID-1	ID-1 (Input/Output Configuration)	0-255	Fix by model	63				See ID map
2	ID-2	ID-2 (Audio)	0-255	Fix by model	239				See ID map
3	ID-3	ID-3 (OSD/Timer/V-chip/Ch Fix)	0-255	Fix by model	99				See ID map
4	ID-4	ID-4 (CC/Spot Killer/etc)	0-255	Fix by model	139				See ID map
5	ID-5	ID-5 (V-series Features/etc)	0-255	Fix by model	181				See ID map
6	ID-6	ID-6 (PiP/Ant Sw related)	0-255	Fix by model	6				See ID map
7	ID-7	ID-7 (Special Models/etc)	0-255	Fix by model	24				See ID map

VALUE = Not Used for AA-2U
 VALUE = Fixed Item For AA-2U

4-5. FEATURE ID MAP

ID	7	24	SERVICE
ID7	TV	00011000	
M306V5ME-1015P		NVM:G	
VERSION: 1.0__			

Note: Check to be sure NVM is good (NVM: G)

Model	Destination	ID-0	ID-1	ID-2	ID-3	ID-4	ID-5	ID-6	ID-7
KV-32FV16	US	89	63	239	99	139	181	6	17
KV-32FV26	US	89	63	239	99	139	181	6	24
KV-32FV26	CND	89	63	239	83	139	181	6	24
KV-34FV16	E	25	63	239	195	187	181	6	81
KV-34FV16C	E	25	63	239	195	187	181	6	81
KV-34FX260	E	25	63	239	195	187	181	6	88
KV-34FX260C	E	25	63	239	195	187	181	6	88

4-6. PROGRAM PALETTE SETTINGS

		Vivid	Standard	Movie	Sports
Picture	(VPIC)	63	50	38	63
Brightness	(VBRT)	31	31	31	31
Color	(VCOL)	38	31	31	38
Sharpness	(VSHP)	31	31	31	31
VM ¹⁾	(VVM)	2	1	0	2
C Temp ¹⁾	(VTRI)	0	1	2	0
Gamma	(VGMA)	3	2	2	2
Blk Comp	(VBLK)	1	1	1	1
V Apa Comp	(VAPA)	0	1	1	1
SRT ON/OFF	(VSRT)	1	0	0	0
NRMD	(VNRM)	0	0	0	1

¹⁾ Setting of 3 is invalid for these registers

To Program Program Palette RESET Levels

1. Switch to Program Palette to edit.
2. Enter Service Mode.
3. Set desired values for current Program Palette settings.
4. Write into memory by **[MUTING]** then **[ENTER]**.
5. Repeat steps 1-4 for each palette.

Example


To Set RESET Level of Standard Mode to 60%

1. Switch to STANDARD Palette.
2. Enter Service Mode.
3. Change value of VPIC to 38 ($38/63 = 60\%$).
4. Write into memory by **[MUTING]** then **[ENTER]**.
5. Enter Video Menu and press **[RESET]**.
6. Reset level of picture for STANDARD PALETTE ONLY is now 38 steps.

4-7. A BOARD ADJUSTMENTS


Sub Contrast Adjustment (RDRV, RDR4)

1. Input a 75% color-bar signal.
2. Set to: VIDEO mode = Standard, COLOR = Minimum, PICTURE = 100%, GON = 0 (OFF), BON = 0 (OFF).
3. Set to Service Adjustment Mode and connect an oscilloscope to pin ① of CN351 on the A Board.
4. Set RDRV with **[1]** and **[4]**.
5. Adjust with **[3]** and **[6]** for: 1.95 ± 0.05 Vp-p.
6. Write into memory by **[MUTING]** then **[ENTER]**.
7. Repeat steps 1-6 for RDR4 using Video 4 input.

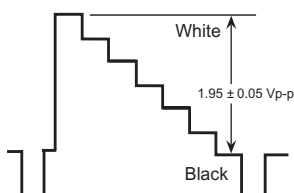

Sub Bright Adjustment (SBRT)


1. Set to Service Adjustment Mode.
2. Input a gray scale pattern signal.
3. Set the PICTURE to minimum, and BRIGHT to normal.
4. Select SBRT with **[1]** and **[4]**.
5. Adjust SUB BRIGHT level with **[3]** and **[6]** so that the stripe second from the right is faintly visible.
6. Write into the memory by pressing **[MUTING]** then **[ENTER]**.

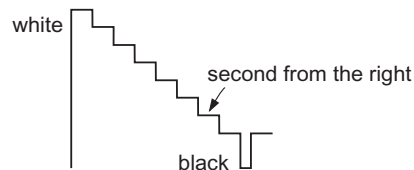

Sub Hue, Sub Color Adjustment (T2HU, T2CO, V2HU, V2CO, 4SHU, 4COL)


Note: T2HU and T2CO are for Tuner inputs.
V2HU and V2CO are for all other Video inputs.
4SHU and 4COL are for Video 4 input.

1. Input a 75% color-bar signal.
2. Set to Service Adjustment Mode and set: VIDEO mode = Standard, PICTURE = 100%, COLOR = 50%, HUE = 50%.
3. Connect an oscilloscope to Pin ③ of CN351 Blue Out on the A Board.
4. Select T2HU and T2CO with **[1]** and **[4]**.
5. Adjust with **[3]** and **[6]** for flat ± 50 mV.
6. Write into memory by **[MUTING]** then **[ENTER]**.
7. Repeat steps 1-6 for V2HU & V2CO and 4SHU & 4COL.

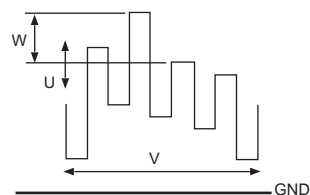


V. Size Adjustment (VSIZ)

1. Input a cross-hatch signal.
2. Set to Service Adjustment Mode.
3. Select VSIZ with **1** and **4**.
4. Adjust with **3** and **6** for the best vertical size.
5. Write into the memory by pressing **MUTING** then **ENTER**.




V. Position Adjustment (VPOS)

1. Input a cross-hatch signal.
2. Set to Service Adjustment Mode.
3. Select VPOS with **1** and **4**.
4. Adjust with **3** and **6** for the best vertical center.
5. Write into the memory by pressing **MUTING** then **ENTER**.



H. Size Adjustment (HSIZ)


1. Input a monoscope signal.
2. Set to Service Adjustment Mode.
3. Select HSIZ with **1** and **4**.
4. Adjust with **3** and **6** for the best vertical size.
5. Write into the memory by pressing **MUTING** then **ENTER**.



H. Position Adjustment (HPOS)

HPOS Range is from 0~15.


1. Input a monoscope signal.
2. Set the Service Adjustment Mode.
3. Select HPOS with **1** and **4**.
4. Adjust with **3** and **6** for the best horizontal center.
5. Write into the memory by pressing **MUTING** then **ENTER**.




V Linearity (VLIN), V Correction (VSCO), Pin Amp (PAMP) And Pin Phase (PPHA) Adjustments

1. Input a cross-hatch signal.
2. Set to Service Adjustment Mode.
3. Select VLIN, VSCO, PAMP, and PPHA with **1** and **4**.
4. Adjust with **3** and **6** for the best picture.
5. Write the memory by pressing **MUTING** then **ENTER**.


V LINEARITY (VLIN)




VS CORRECTION (VSCO)



PIN AMP (PAMP)




PIN PHASE (PPHA)




V Angle (VANG), V Bow (VBOW), Upper Pin (UPIN) And Low Pin (LPIN) Adjustments

1. Input a monoscope signal.
2. Set to Service Adjustment Mode.
3. Select VANG, VBOW, UPIN, and LPIN with **1** and **4**.
4. Adjust with **3** and **6** for the best picture.
5. Write the memory by pressing **MUTING** then **ENTER**.


V ANGLE (VANG)




V BOW (VBOW)



UPPER PIN (UPIN)




LOW PIN (LPIN)



OSD Position Adjustment (DISP)

1. Input a color-bar signal.
2. Set to Service Adjustment Mode.
3. Select DISP with **[1]** and **[4]**.
4. Adjust with **[3]** and **[6]** for adjustment of characters to center.
5. Write the memory by pressing **[MUTING]** then **[ENTER]**.

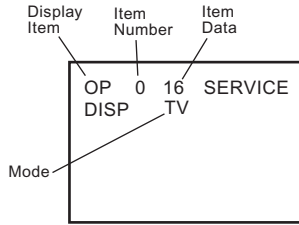


Rotation Coil Adjustment



1. Input a monoscope signal.
2. Push the Menu button on the Remote.
3. Select the "Set-up" mode.
4. Select "Tilt Correction". Confirm that number (0) color changes to red.
5. Push **↑ (+)** on the Remote. Confirm that the number increases up to +5 and the picture rotates clockwise.
6. Push **↓ (-)** on the Remote. Confirm that the number decreases down to -5 and the picture rotates counter-clockwise.
7. Push **↑ (+)** on the Remote. Return the value to 0.

Set-Up


- Channel Set-up
- Favorite Channel
- Video Label
- Language: English
- Tilt Correction:
 - ↻ Menu

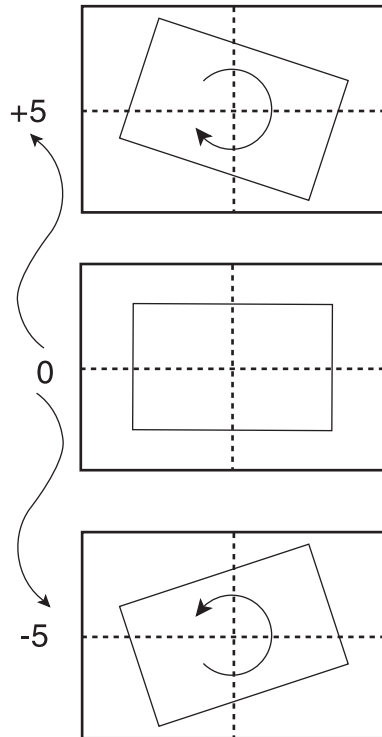


BLOCK DIAGRAM (2/4)

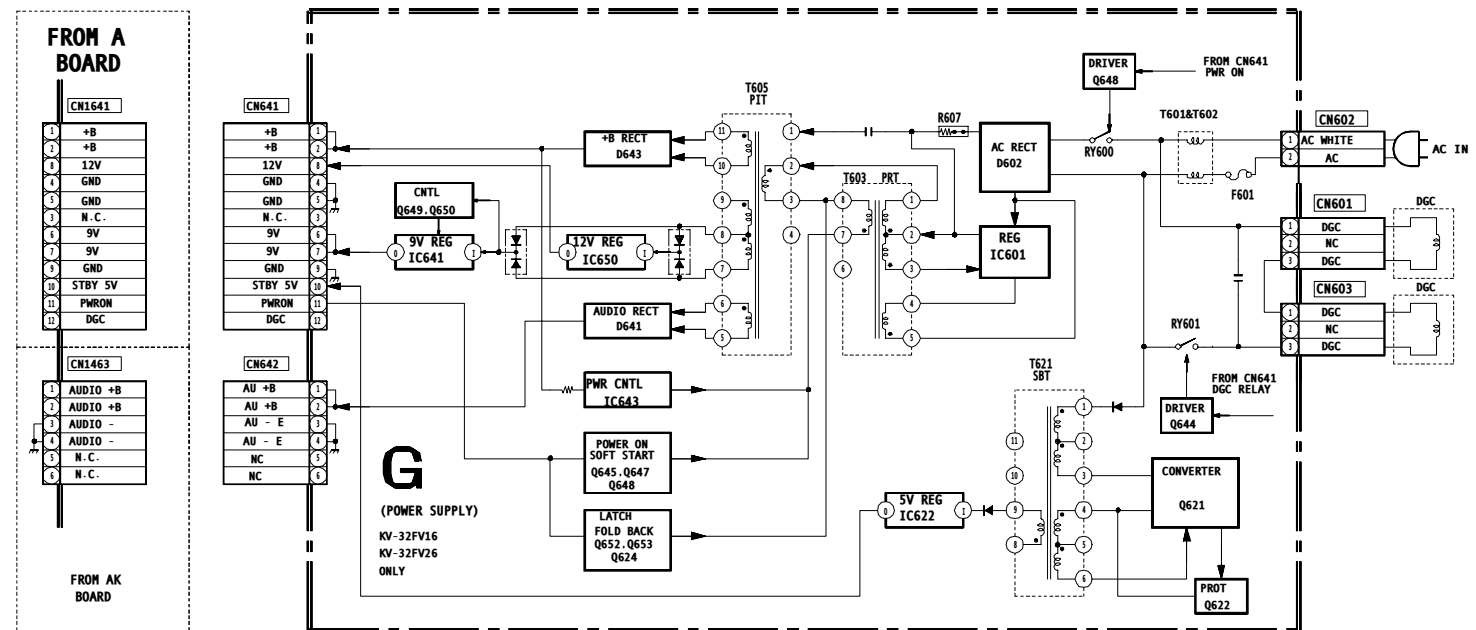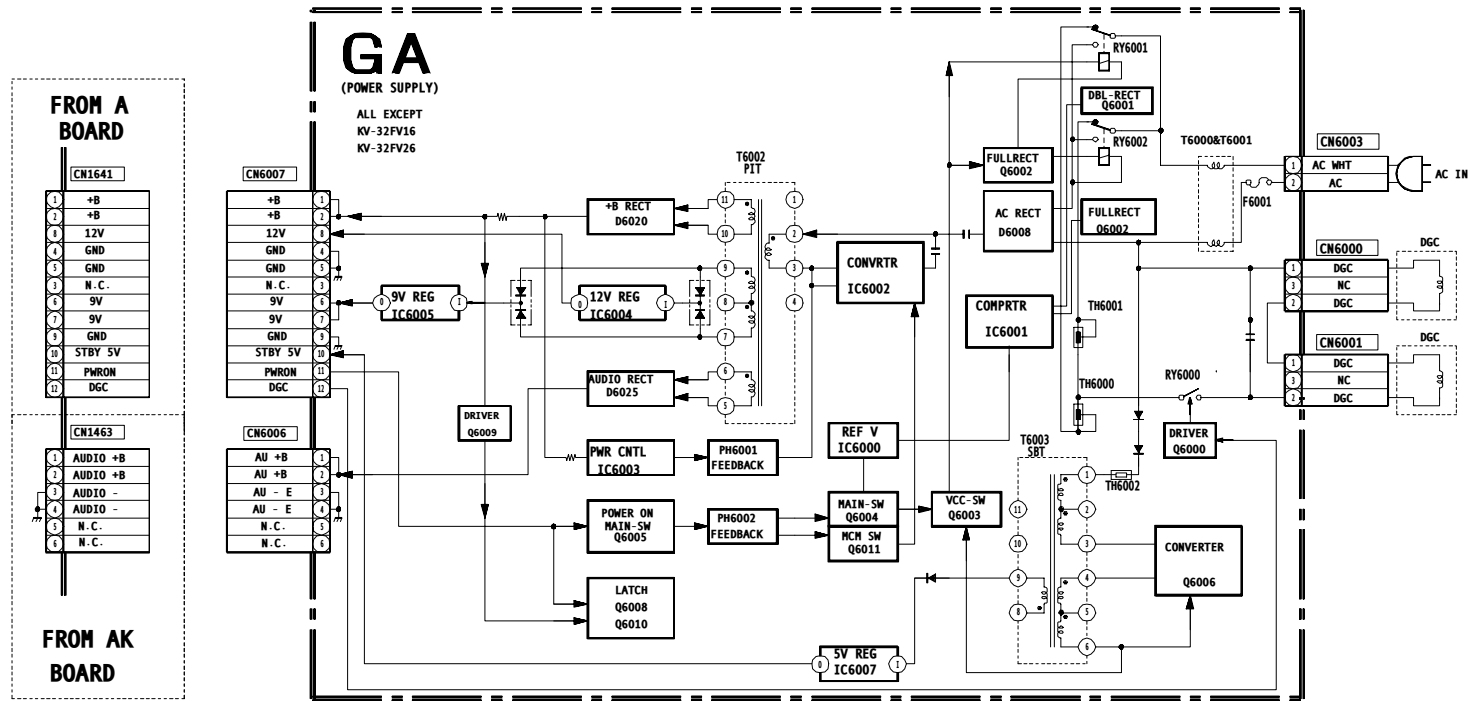


BLOCK DIAGRAM (3/4)

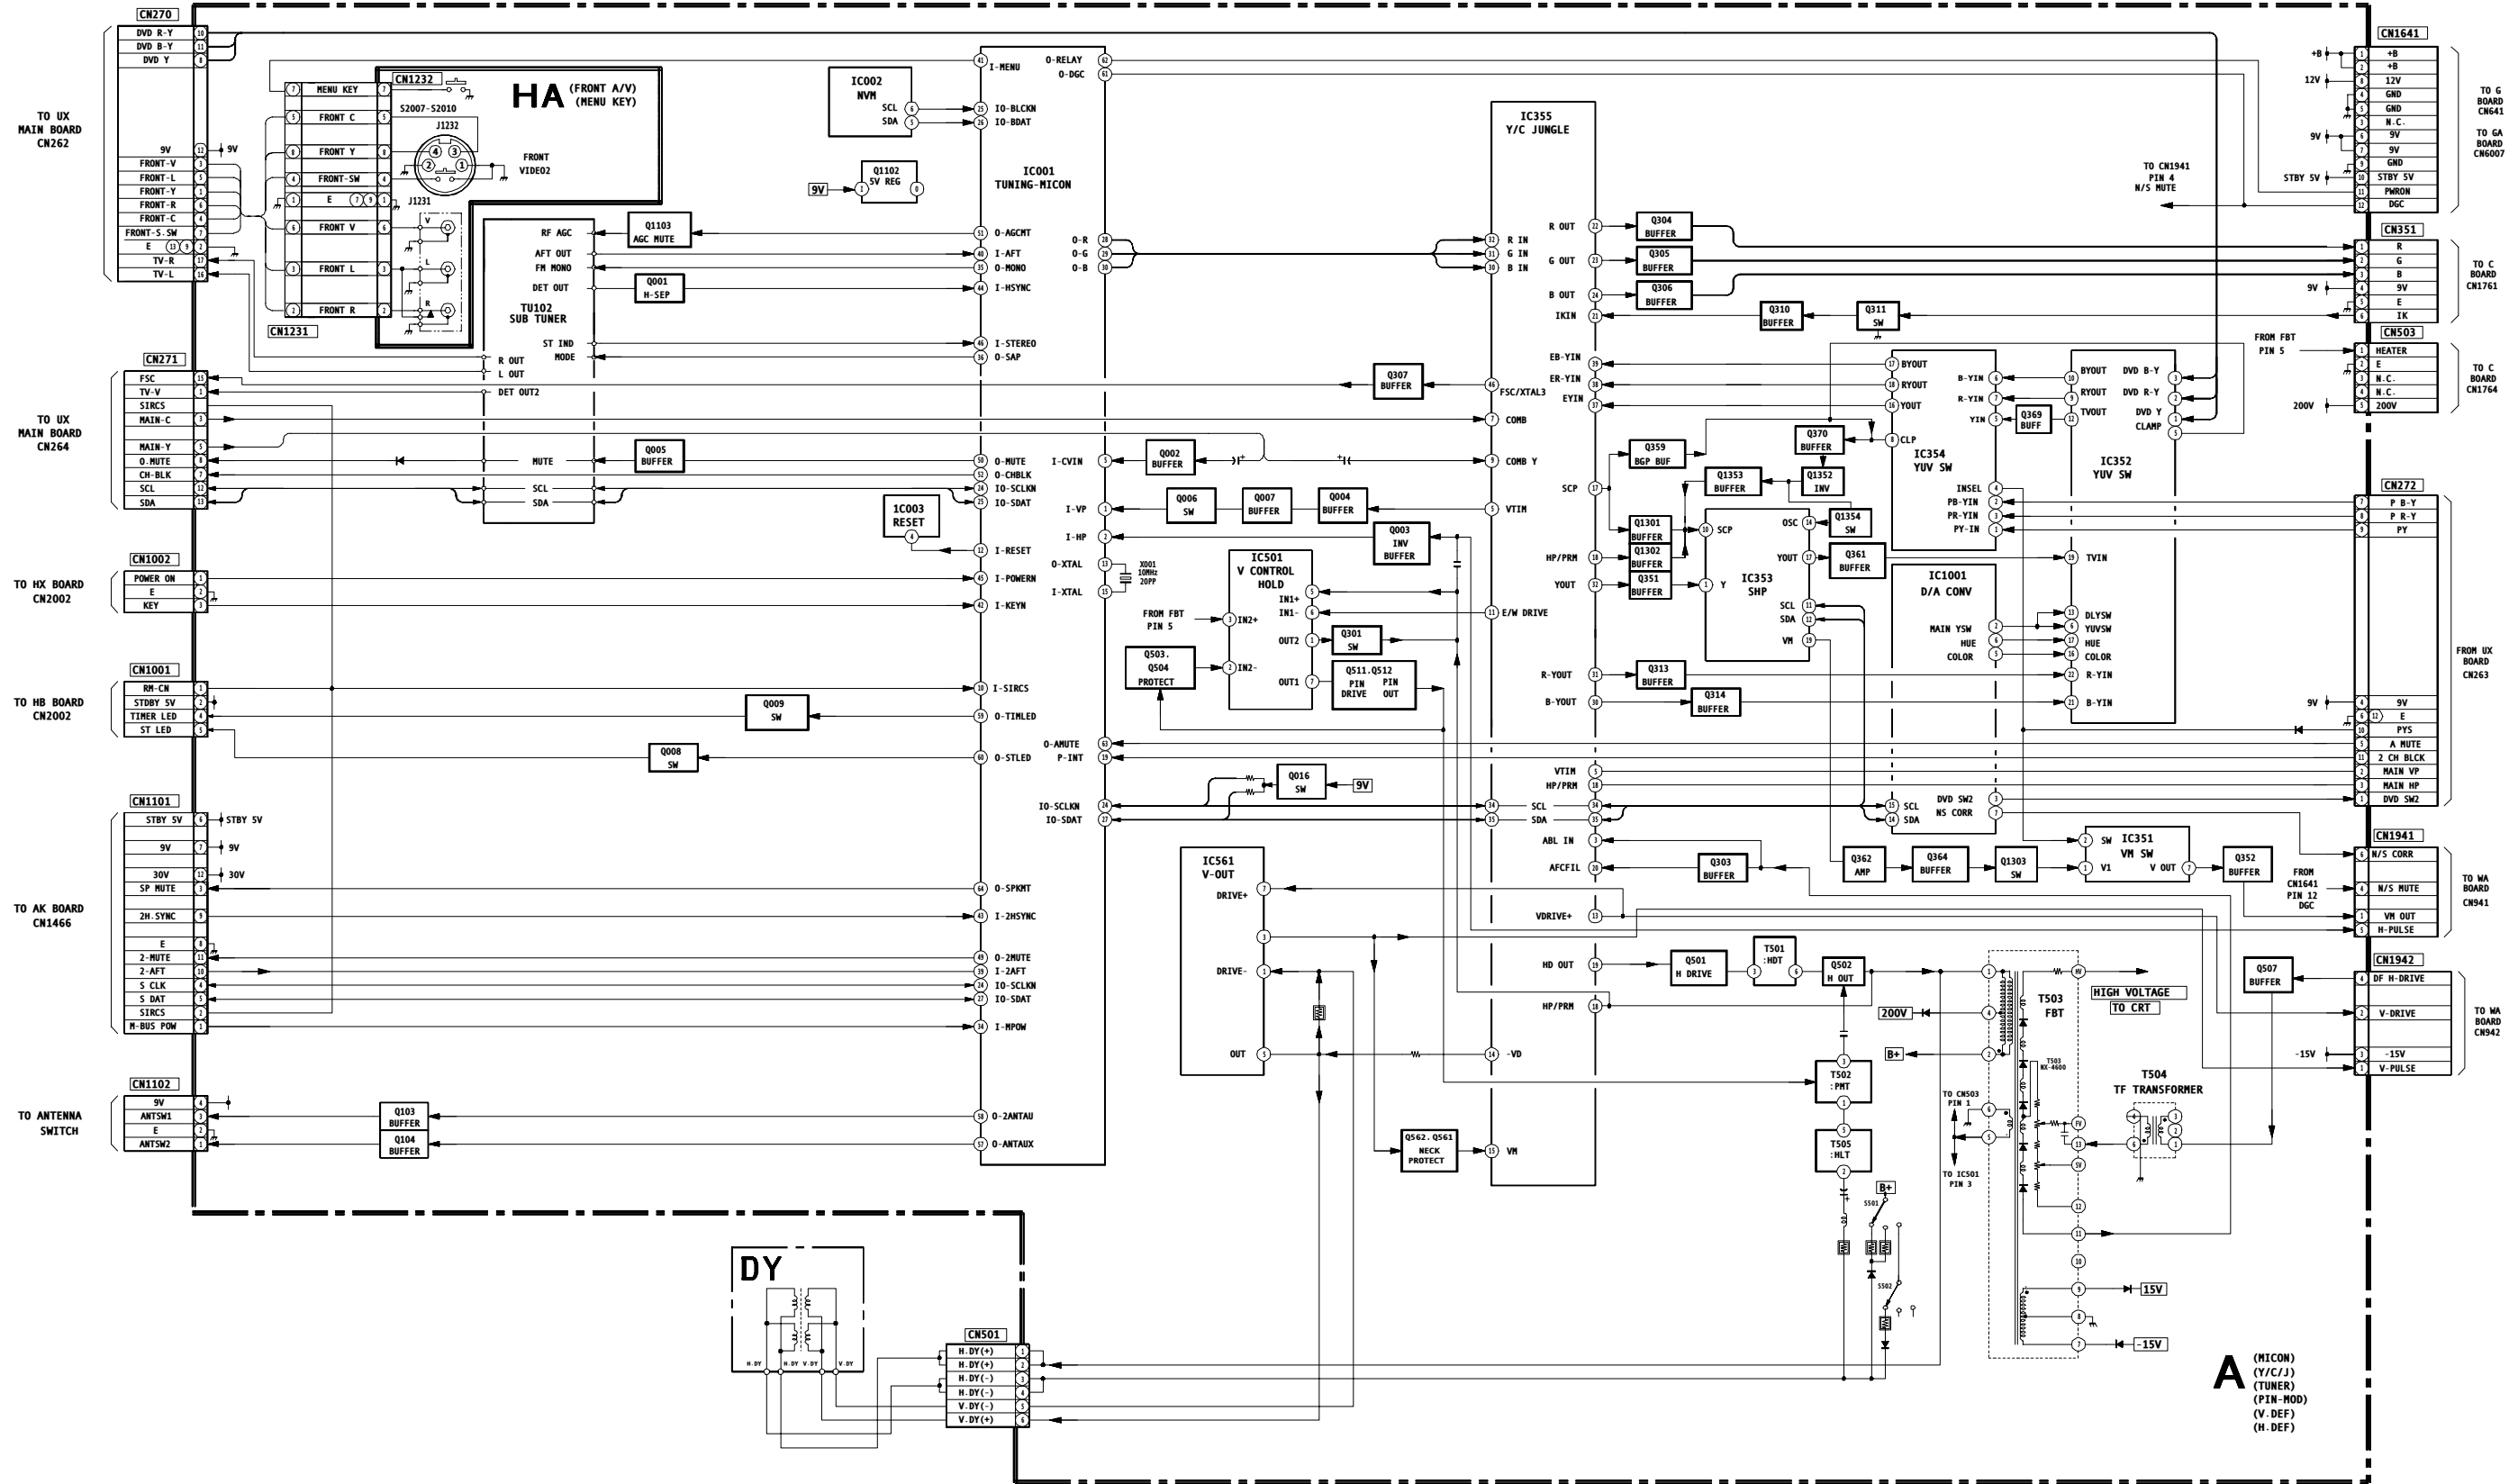

BLOCK DIAGRAM (4/4)

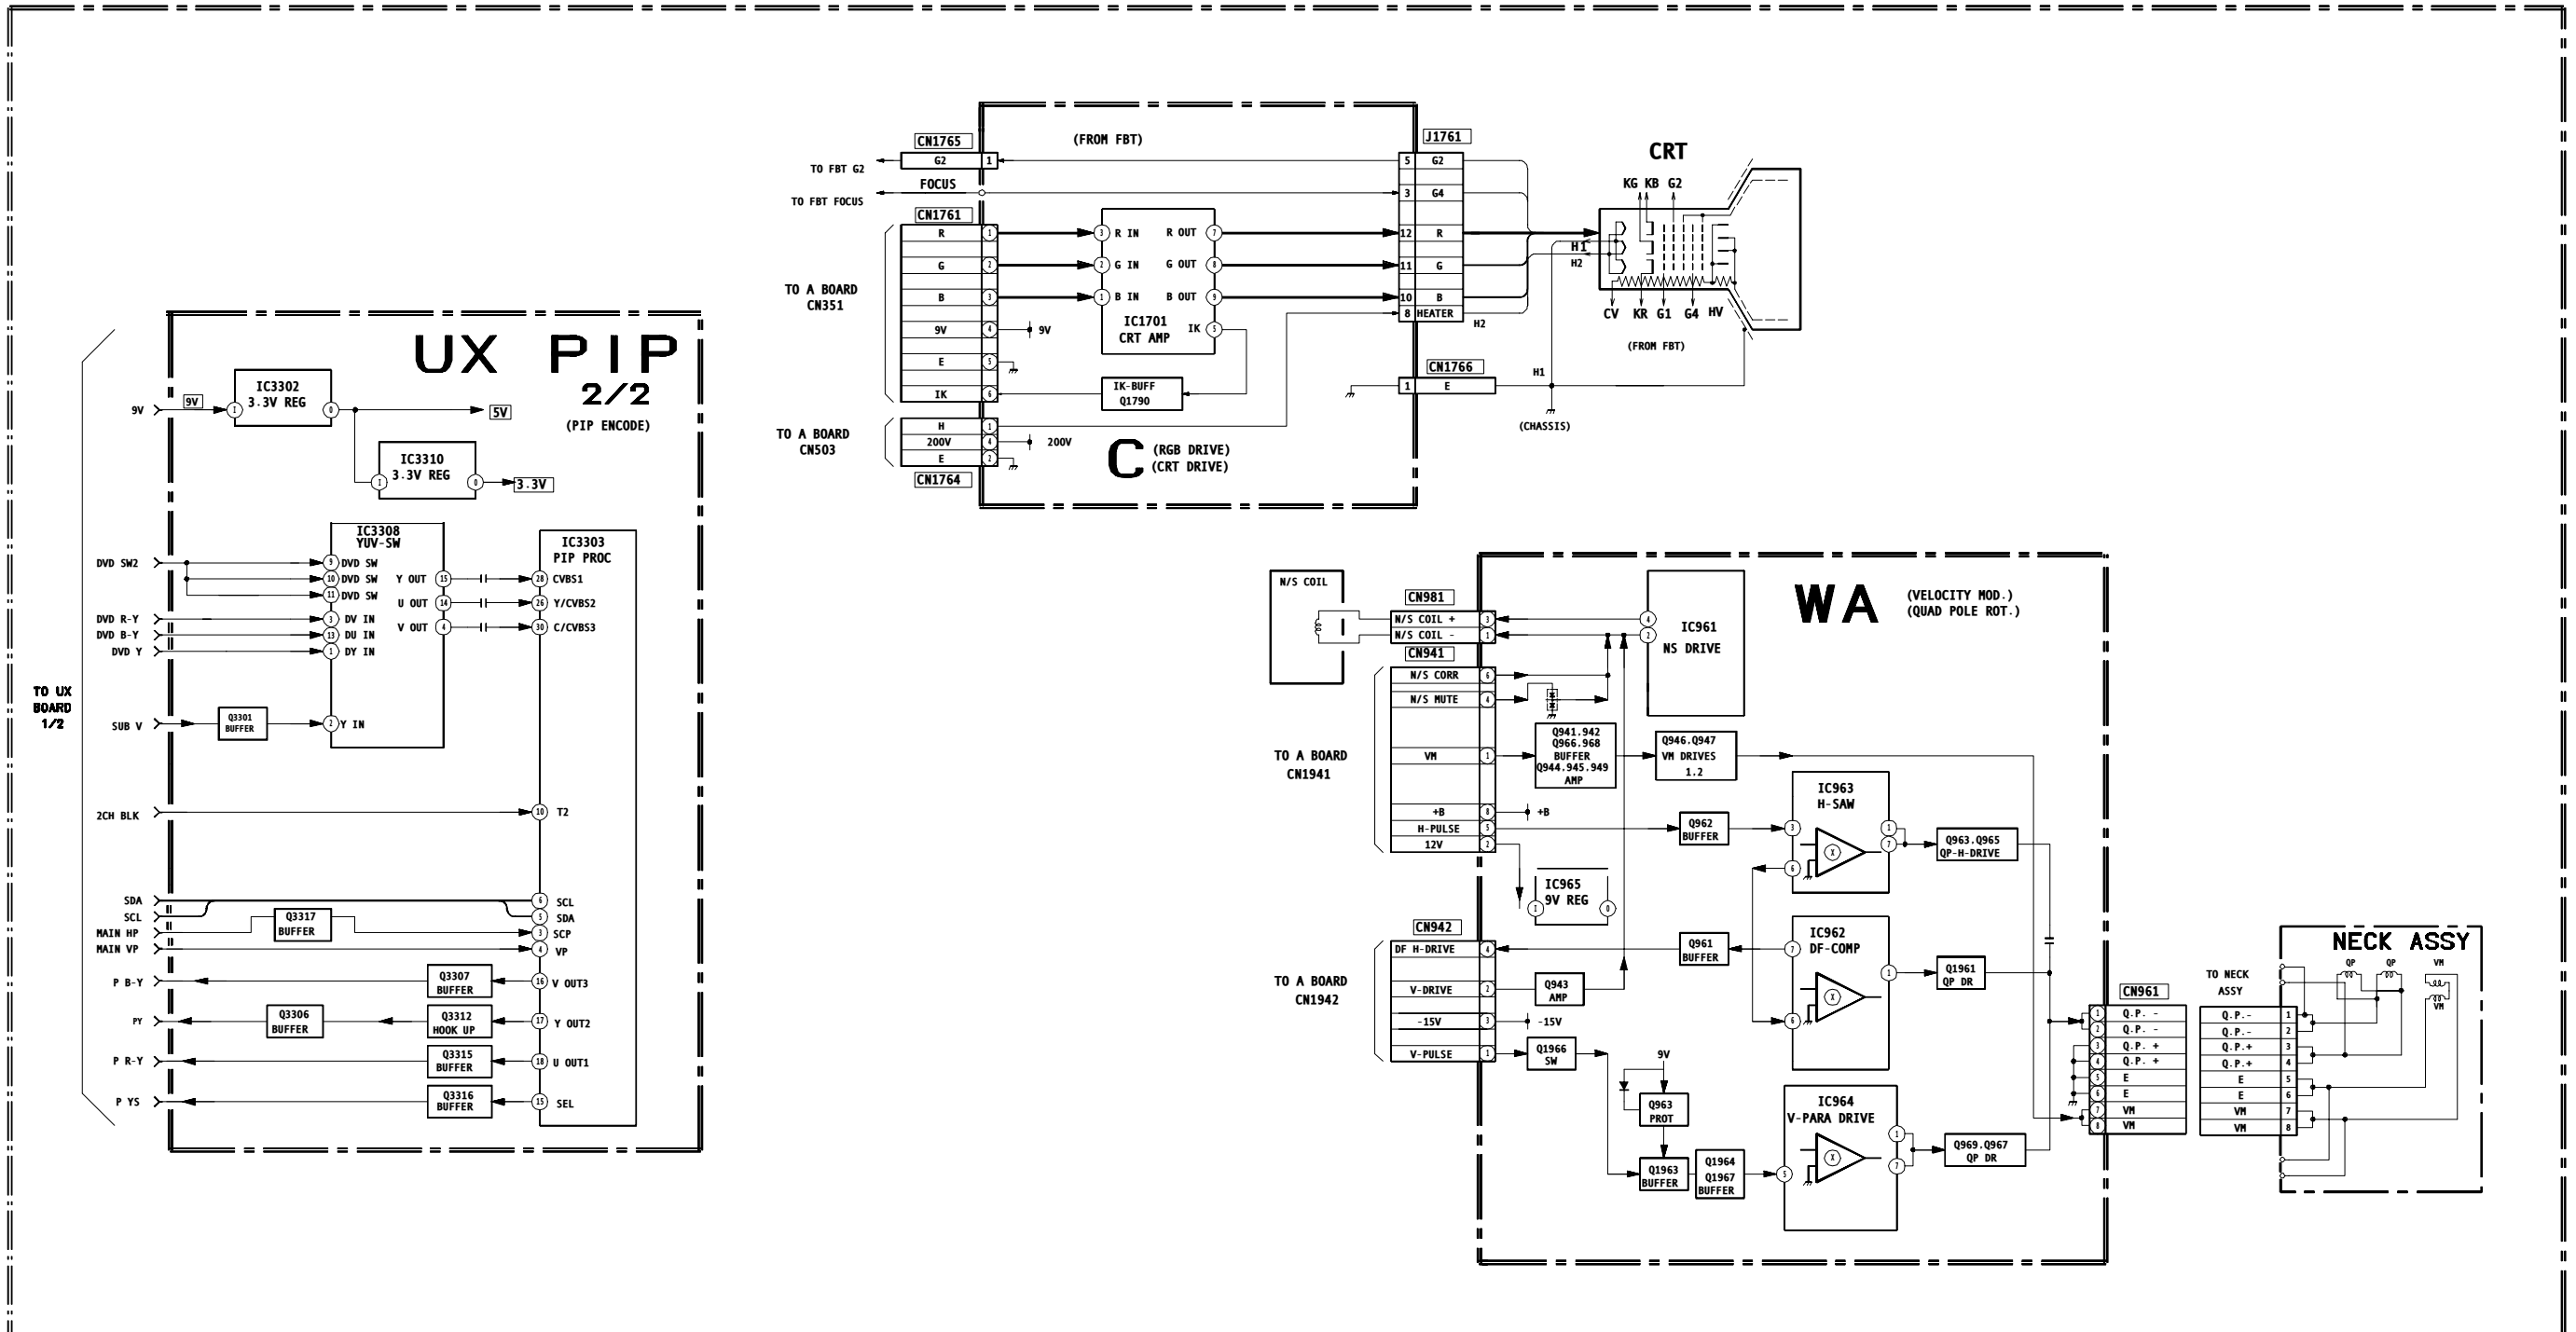

5-2. CIRCUIT BOARD LOCATIONS

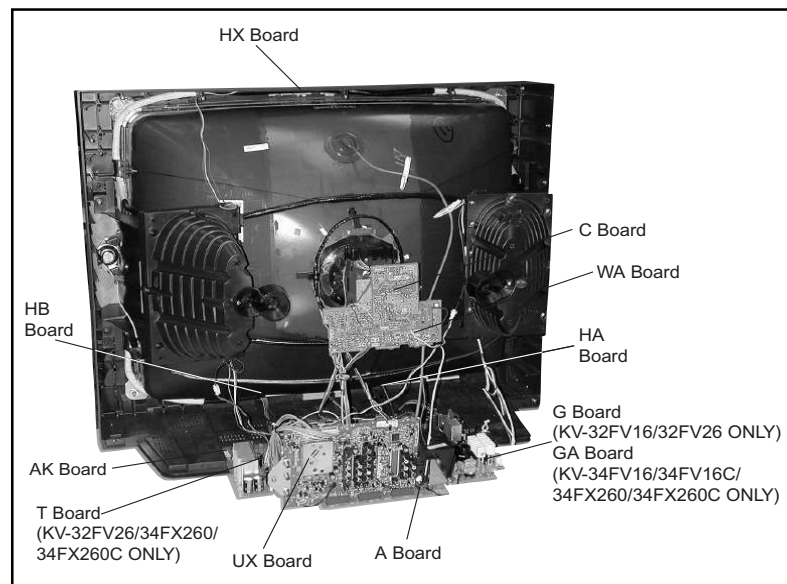

5-3. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

- All capacitors are in mF unless otherwise noted. pF: mmF 50 WV or less are not indicated except for electrolytic and tantalums.
- All electrolytics are 50V unless otherwise specified.
- Indication of resistance, which does not have one for rating electrical power, is as follows:
Pitch: 5mm
Rating electrical power 1/4W (CHIP: 1/10W)
- All resistors are in ohms.
KW = 1000W MW = 1000KW
- : nonflammable resistor
- : fusible resistor
- : internal component
- : panel designation and adjustment for repair
- : earth-ground
- : earth-chassis
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- The components identified by in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.
- When replacing components identified by , make the necessary adjustments indicated. If results do not meet the specified value, change the component identified by and repeat the adjustment until the specified value is achieved (refer to Safety Related Adjustments on page 14).
- When replacing parts shown in the table below, be sure to perform the related adjustments.

Part Replaced ()	Adjustment ()
R387, R550, R529, R530, R531, R532, R533, D519, D520, D521, IC501, C531, C532, T503, IC351, IC355, D302, Q301, R356, R359, R361, A Board	HV HOLD-DOWN R530, R531
IC643, R661 G Board	
IC6003, R6008 GA Board	

- All voltages are in Volts
- Voltage is DC with respect to ground unless otherwise noted.
- Readings are taken with a 10MW digital multimeter.
- Readings are taken with a color-bar signal input.
- Voltage variations may be noted due to normal production tolerance.
- Circled numbers are waveform references.
- * : cannot be measured
- : B + Line
- : B - Line
- : Signal path

Reference Information

RESISTOR	: RN	METAL FILM
	: RC	SOLID
	: FPRD	NON FLAMMABLE CARBON
	: FUSE	NON FLAMMABLE FUSIBLE
	: RW	NON FLAMMABLE WIREWOUND
	: RS	NON FLAMMABLE METAL OXIDE
	: RB	NON FLAMMABLE CEMENT
COIL	:	ADJUSTMENT RESISTOR
CAPACITOR	: LF-8L	MICRO INDUCTOR
	: PS	TANTALUM
	: PP	STYROL
	: PP	POLYPROPYLENE
	: PT	MYLAR
	: MPS	METALIZED POLYESTER
	: MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	: ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE


Note:

The components identified by shading and mark are critical for safety. Replace only with the part number specified. The symbol (displayed on component side of the circuit board) indicates fast operating fuse. Replace only with fuse of the same rating as marked.


Les composants identifiés par un tramé et une marque sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié. Le symbole indique une fusible a action rapide. Doit être remplacée par une fusible de meme valeur, comme marqué.

A BOARD IC BLOCK DIAGRAMS

A BOARD: IC355 CXA2131CS

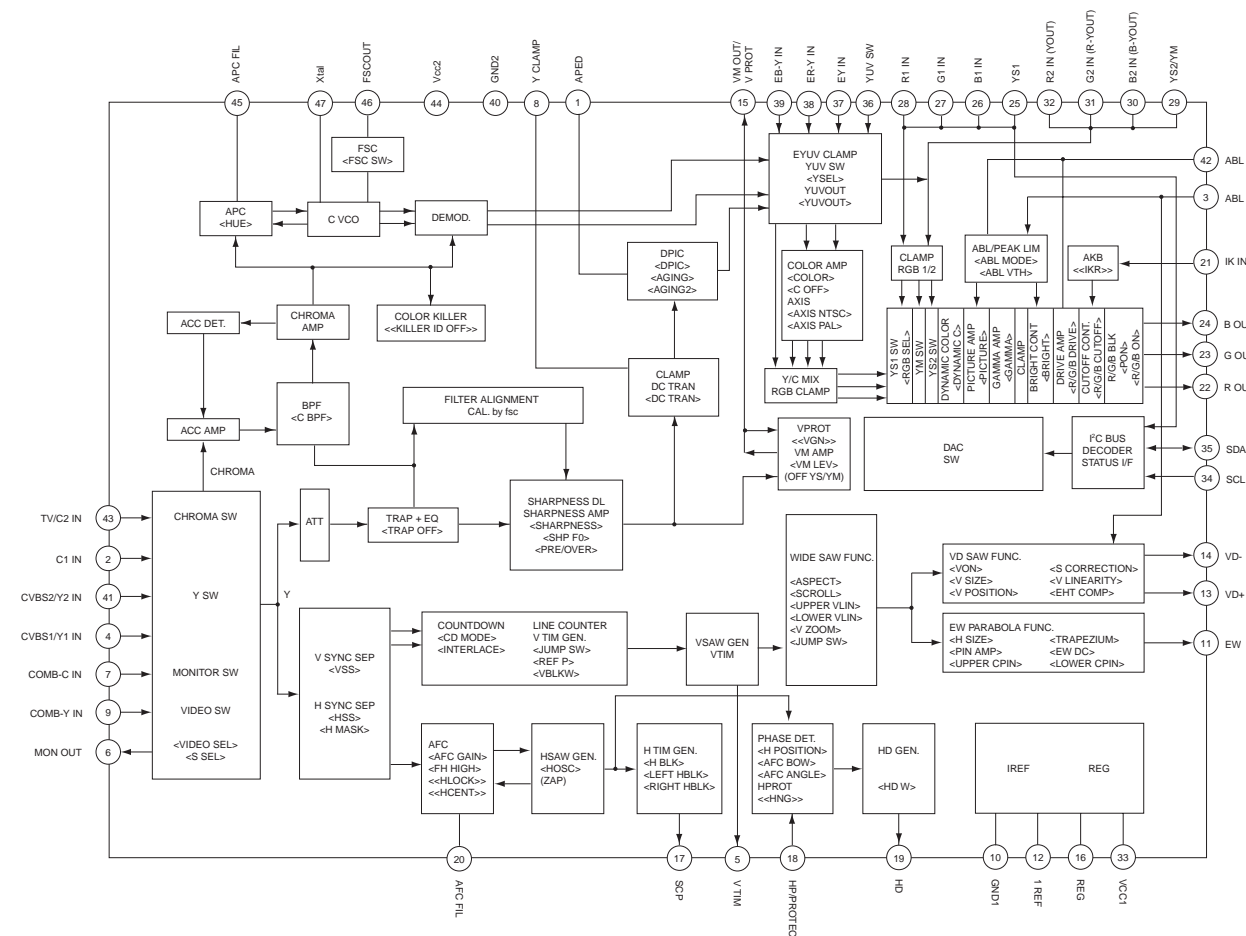


A BOARD: IC561 STV9379

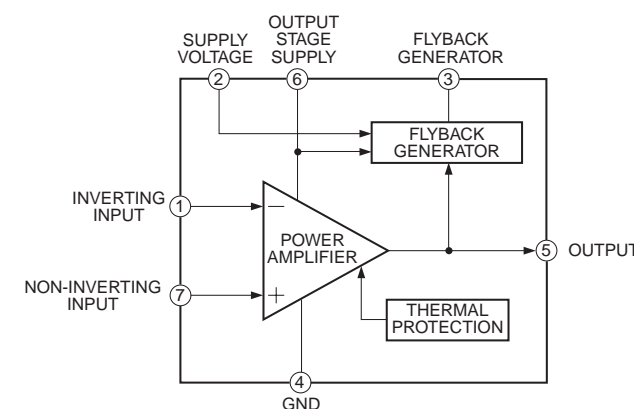

A


[MICON, Y/C/J, TUNER, PIN-MOD, V. DEF, H. DEF]

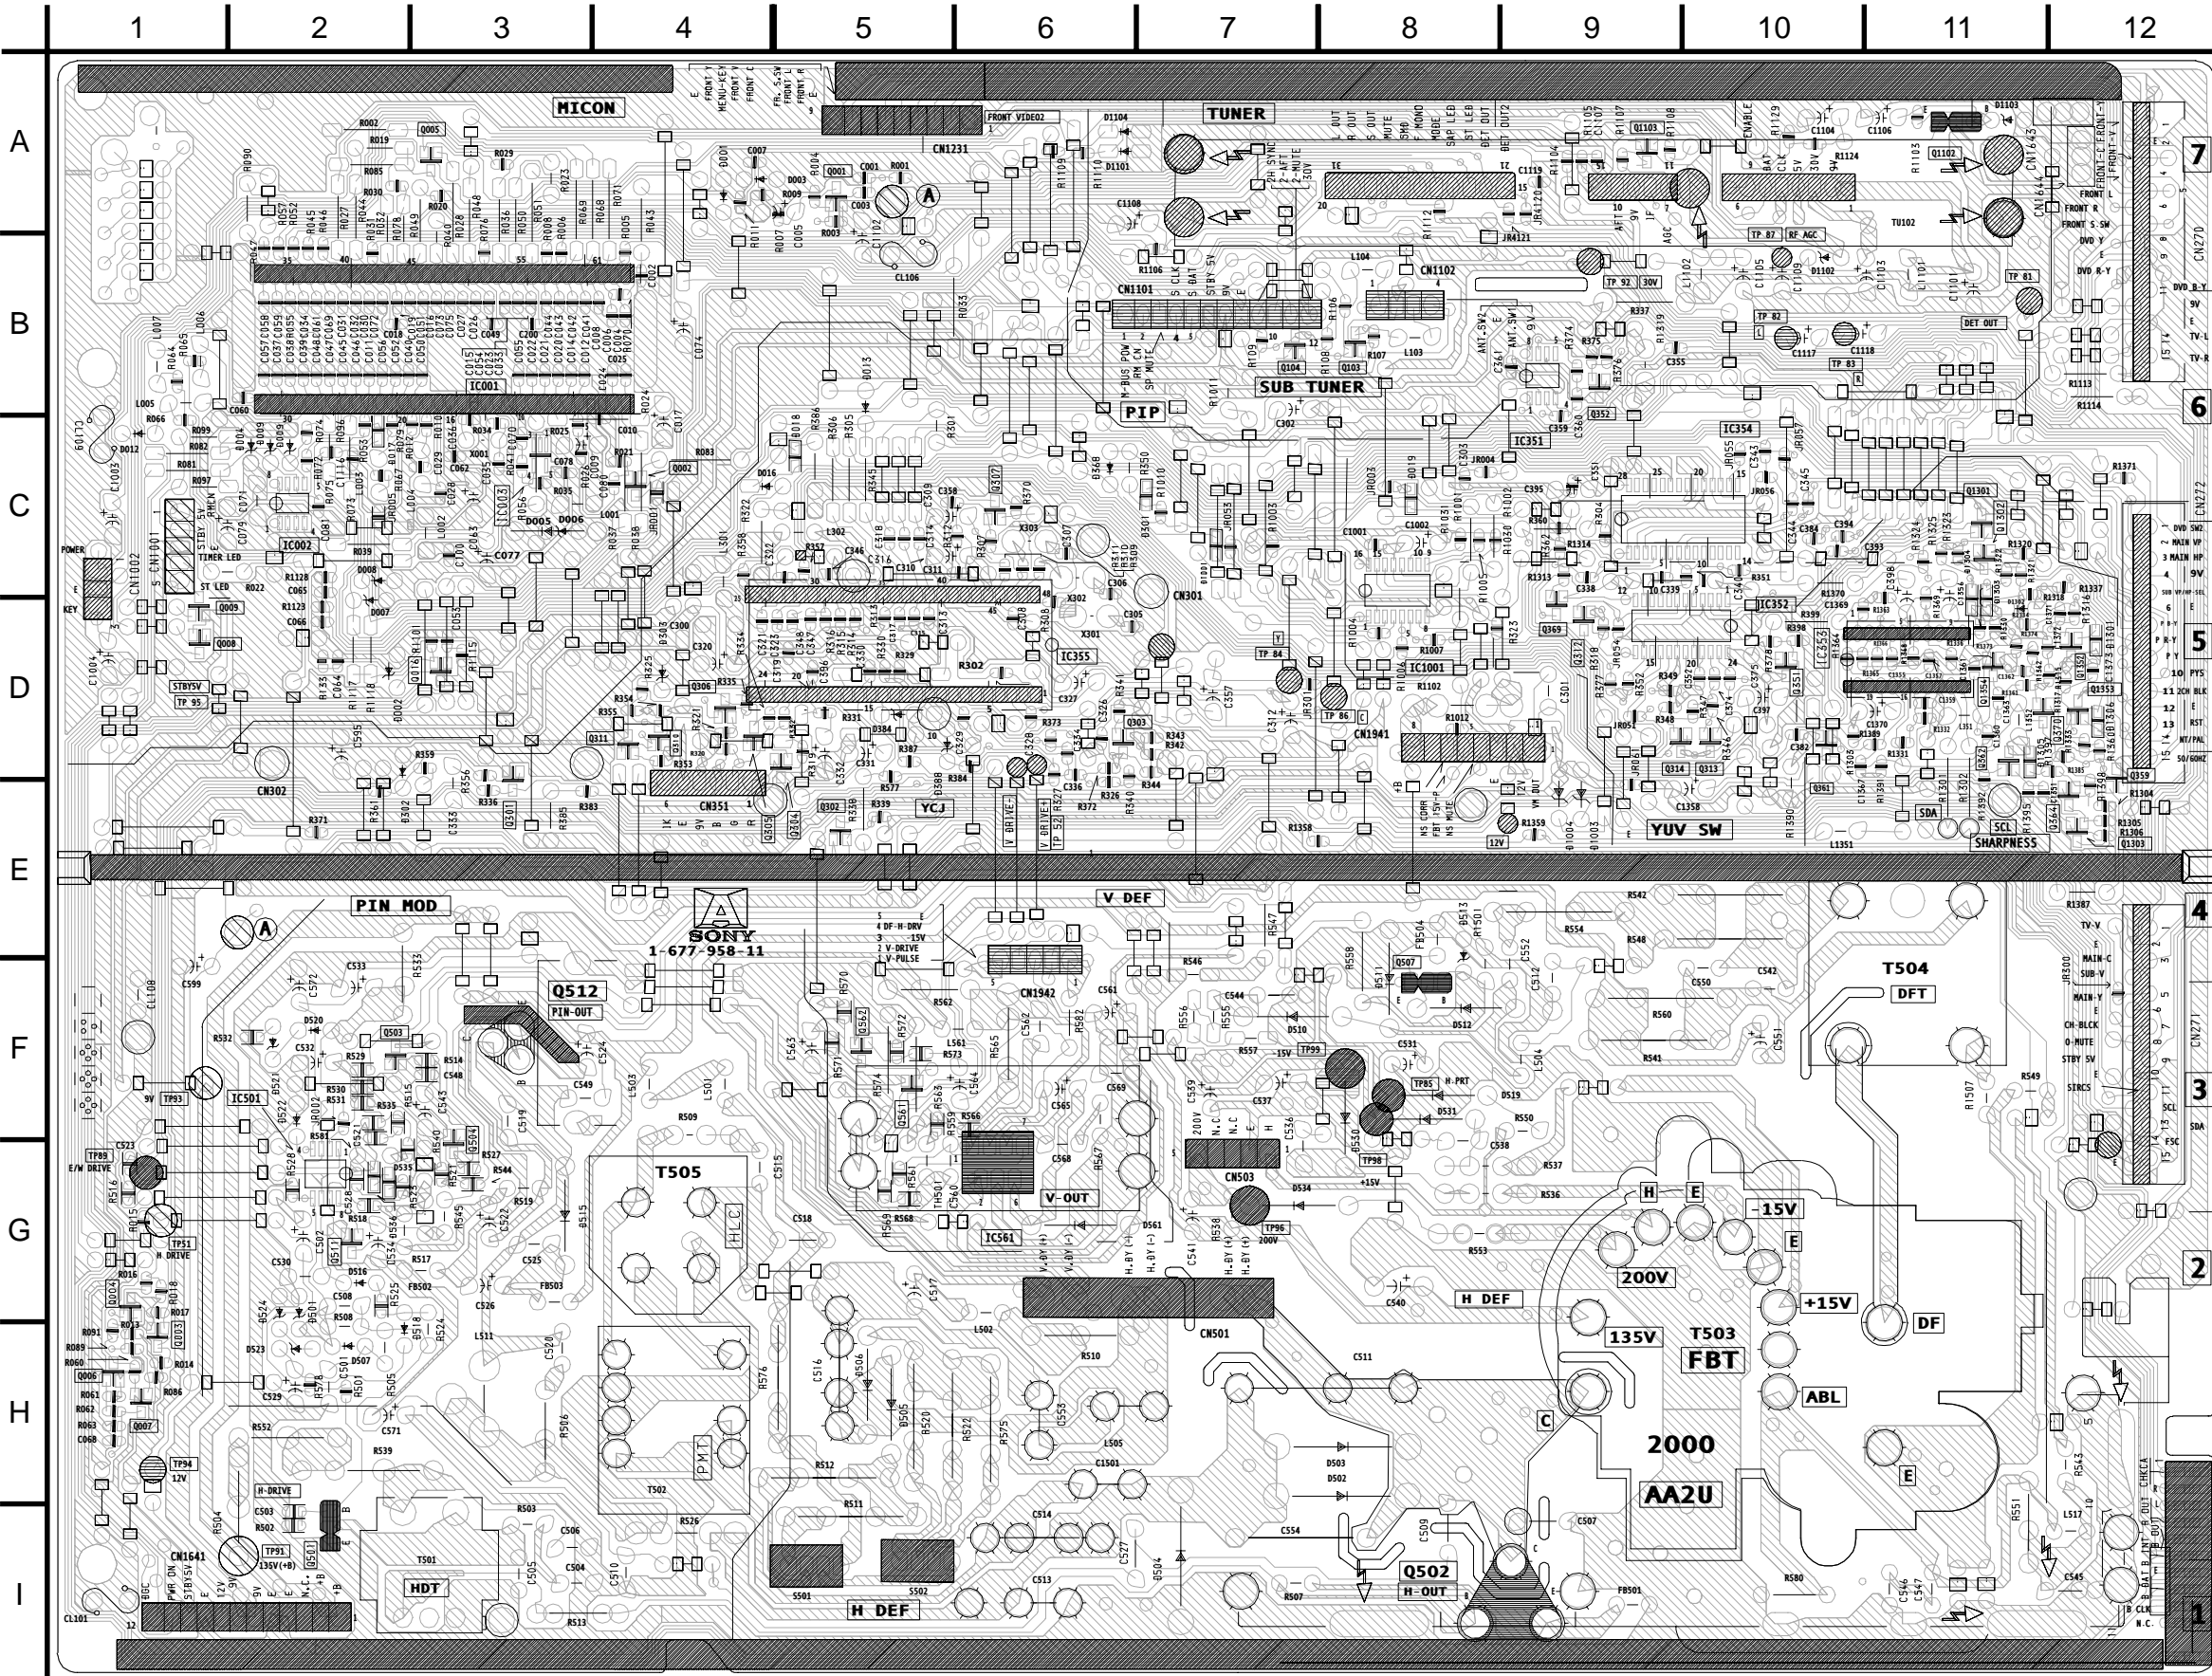


A BOARD LOCATOR LIST

DIODE	IC351	C-9	
D001	A-4	IC352	D-10
D002	D-2	IC353	C-10
D003	A-5	IC354	C-10
D005	C-3	IC355	D-6
D006		IC501	F-2
D012	C-1	IC561	G-6
D013	B-5	IC1001	D-8
D016	C-4	TRANSISTOR	
D018	C-5	Q001	A-5
D019	C-8	Q002	C-4
D301	C-7	Q003	H-1
D302	E-2	Q004	G-1
D303	D-4	Q005	A-3
D368	C-6	Q006	H-1
D384	D-5	Q007	H-1
D388	D-5	Q008	D-10
D501	H-2	Q009	D-10
D502	H-8	Q016	D-2
D503	H-8	Q103	B-8
D504	I-7	Q104	B-7
D505	H-5	Q301	E-3
D506	H-5	Q303	D-6
D507	H-2	Q304	D-4
D510	F-7	Q305	D-4
D511	E-8	Q306	D-4
D512	F-8	Q307	C-6
D513	E-8	Q310	D-4
D515	G-3	Q311	D-3
D516	G-2	Q313	D-10
D518	H-3	Q314	D-9
D519	F-8	Q351	D-10
D520	F-2	Q352	B-9
D521	F-2	Q359	D-12
D522	F-2	Q361	D-10
D523	H-2	Q362	E-11
D524	H-2	Q364	E-12
D530	G-8	Q369	D-9
D531	F-8	Q370	D-11
D534	G-7	Q501	I-2
D535	G-2	Q502	I-8
D536	G-2	Q503	F-2
D561	G-7	Q504	F-3
D1003	E-9	Q507	F-8
D1004	E-9	Q511	G-2
D1101	A-6	Q512	F-3
D1102	B-10	Q561	F-4
D1103	A-11	Q562	F-4
D1104	A-6	Q1102	A-11
D1301	D-12	Q1103	A-9
D1302	C-11	Q1301	C-11
D1303	C-11	Q1302	C-11
D1304	C-11	Q1303	E-12
D1305	D-11	Q1352	D-11
D1306	D-12	Q1353	D-12
	IC	Q1354	D-11
IC001	B-2	CRYSTAL	
IC002	C-2	X001	C-3
IC003	C-3	X302	D-6

UX (MAIN) Board Schematic Diagram

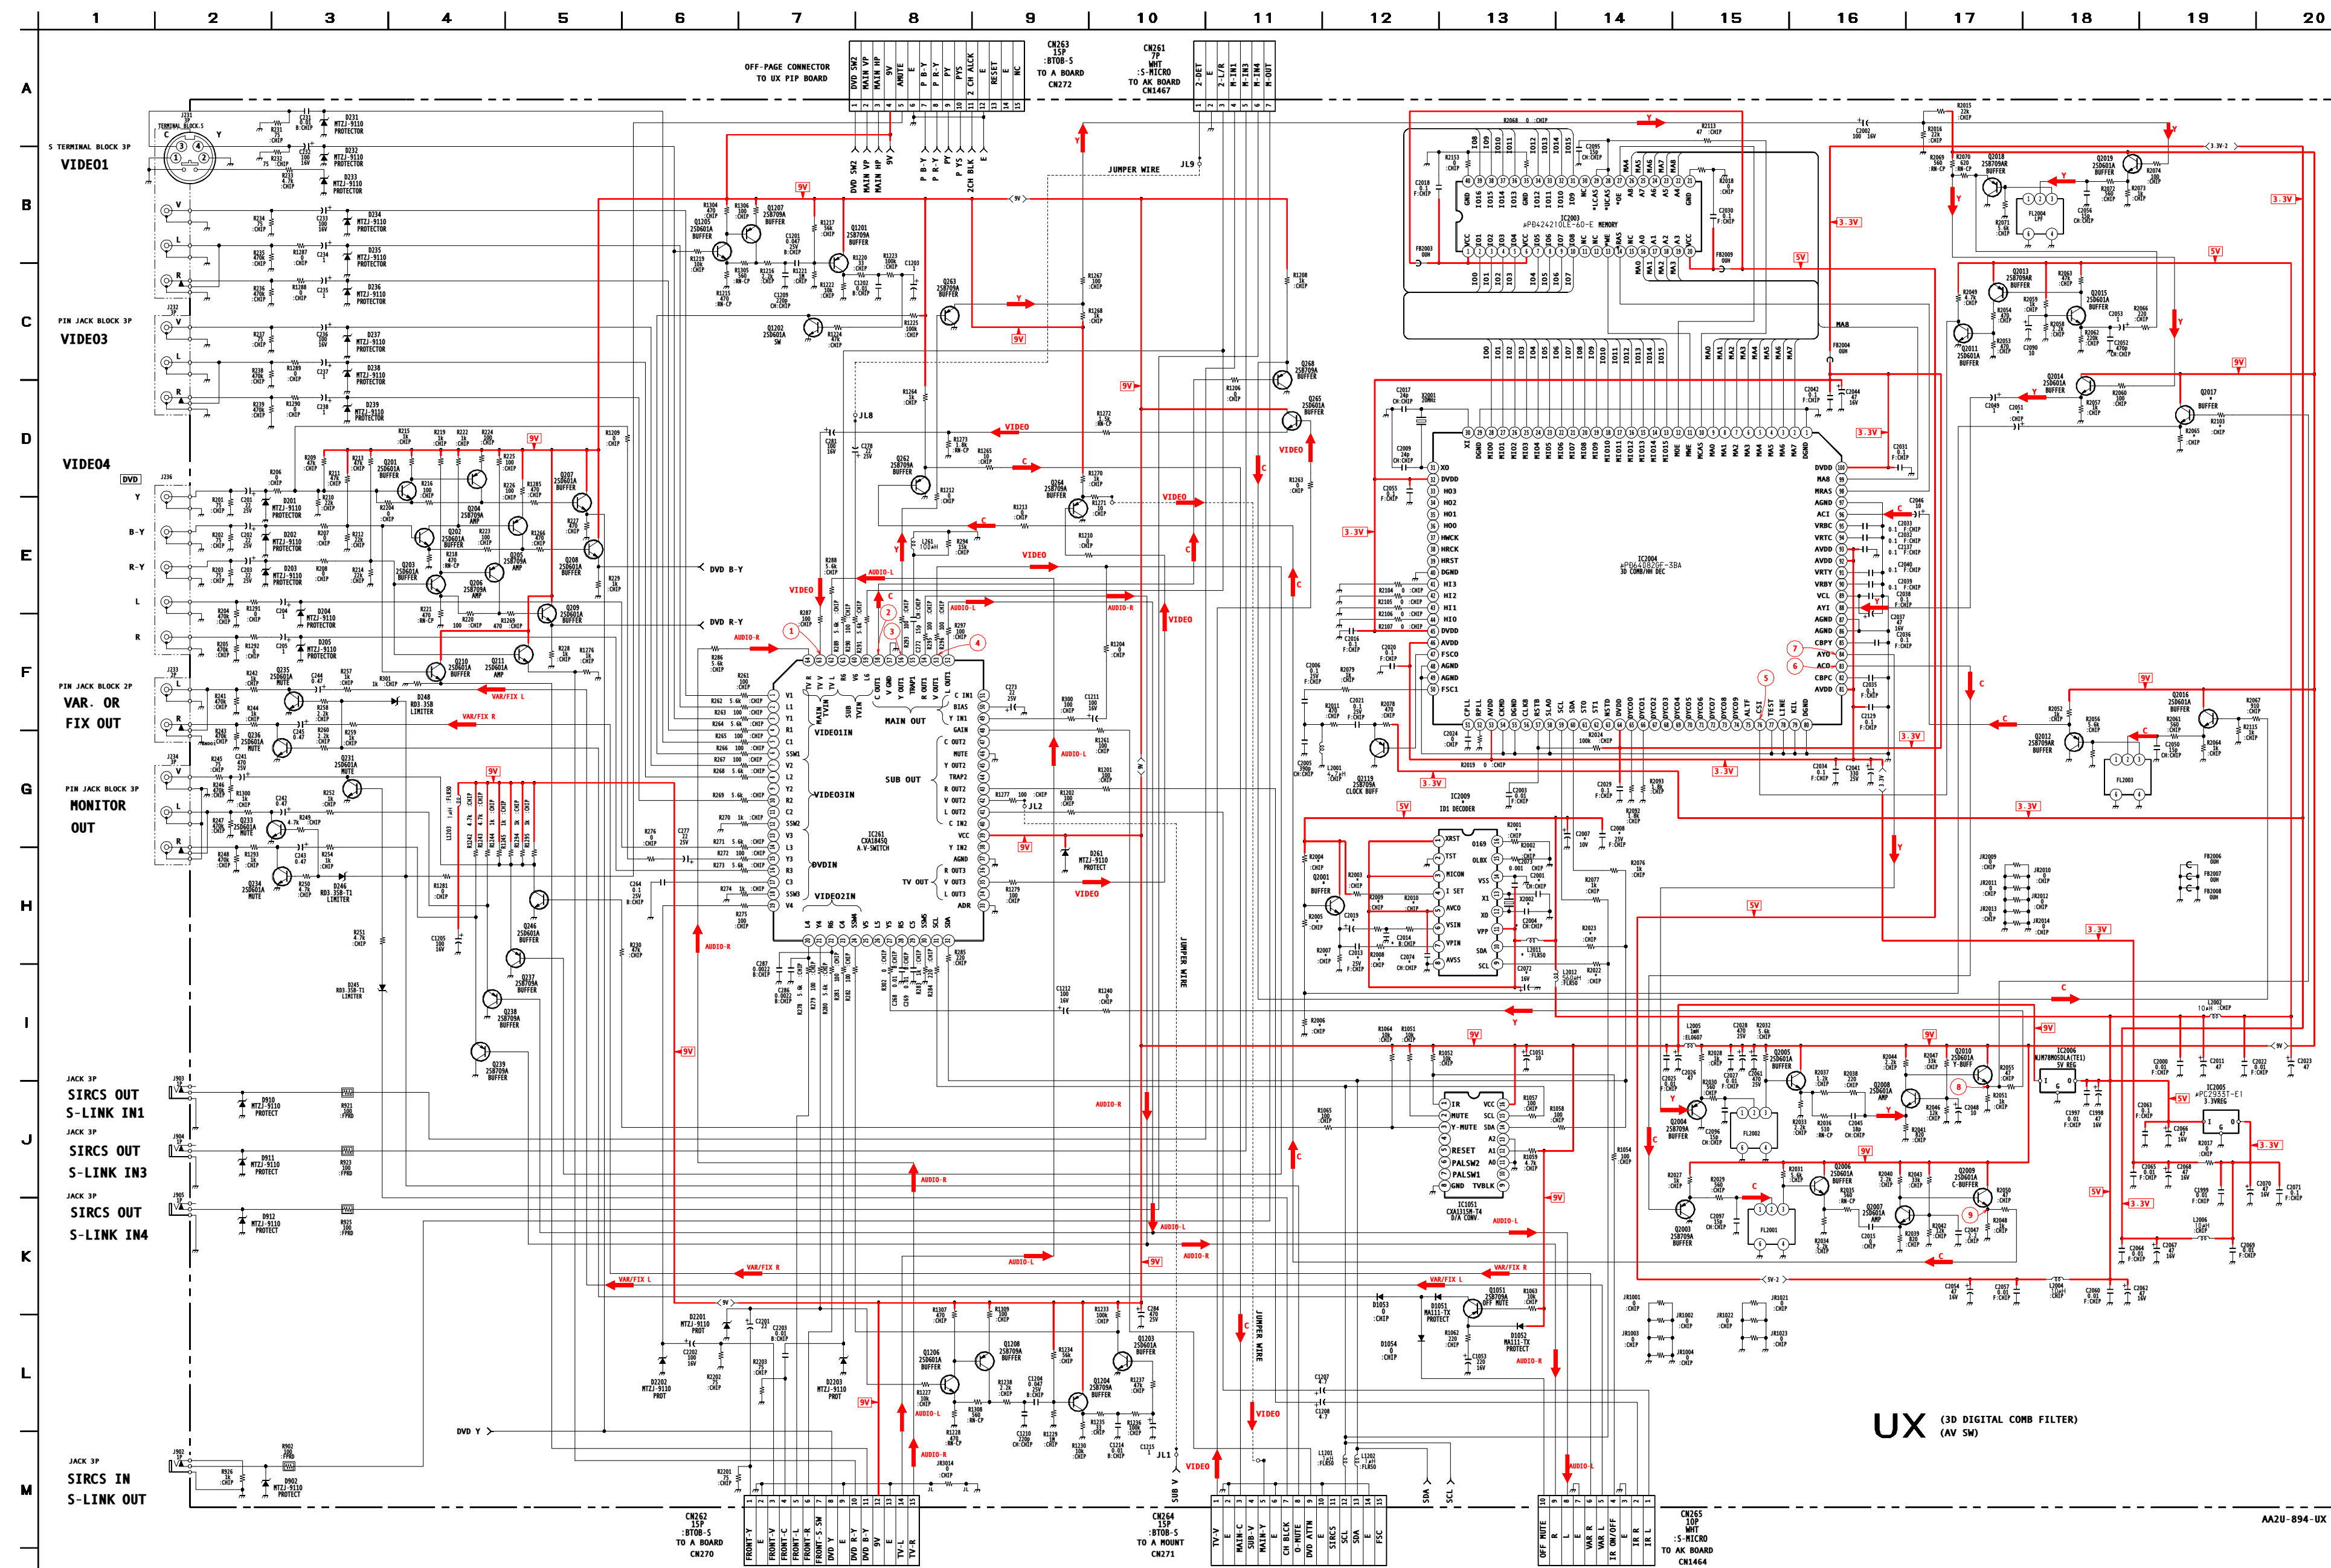

UX (MAIN) BOARD WAVEFORMS

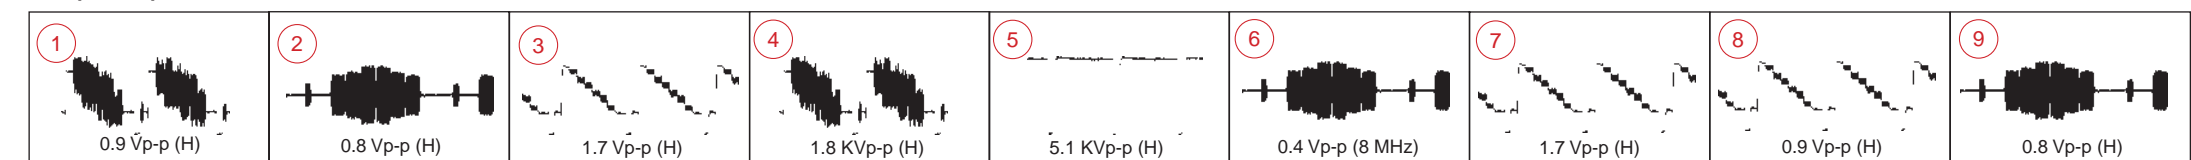

UX (MAIN) BOARD IC VOLTAGE LIST

IC261	29	4.5	59	4.5	5	1.6	35	GND	23	1.5	53	3.3	83	1.7	IC2009	pin	volt	
1	4.5	31	4.7	61	4.5	7	1.4	37	1.7	25	1.5	55	GND	84	1.7	pin	1	4.8
2	4.5	32	4.7	62	4.5	8	1.6	38	1.7	26	1.7	56	N/C	86	GND	2	GND	
3	4.5	33	GND	63	4.5	9	1.7	39	1.7	27	1.7	57	4.0	87	GND	3	4.8	
4	4.5	34	N/C	64	4.5	10	1.0	40	0.0	28	1.7	58	GND	88	2.2	4	1.4	
5	4.5	35	4.2	IC1051	11	N/C	IC2004	29	GND	59	4.7	89	0.0	5	4.8			
6	4.5	36	N/C	pin	volt	12	N/C	pin	volt	30	1.5	60	4.7	90	3.3	6	1.8	
7	4.5	37	GND	1	8.9	13	2.9	1	GND	31	1.5	61	N/C	91	3.3	7	1.6	
8	4.5	38	N/C	2	8.9	14	0.5	2	1.5	32	3.3	62	N/C	92	3.3	8	GND	
9	N/C	39	8.9	3	0.4	15	N/C	3	1.5	33	N/C	63	N/C	93	3.3	9	4.7	
10	4.5	40	N/C	4	N/C	16	1.5	4	1.5	34	N/C	64	3.3	94	3.3	10	4.7	
11	N/C	41	4.6	5	N/C	17	1.5	5	1.5	35	N/C	65	0.0	95	3.3	11	4.8	
12	0.0	42	4.4	6	N/C	18	1.5	6	1.5	36	N/C	66	0.0	96	0.0	12	2.5	
13	N/C	43	4.4	7	N/C	19	1.5	7	1.5	37	N/C	67	N/C	97	GND	13	2.4	
14	4.5	44	N/C	8	GND	20	5.0	8	1.5	38	N/C	68	N/C	98	0.5	14	GND	
15	4.5	45	N/C	9	N/C	21	0.0	9	1.5	39	N/C	69	N/C	99	1.7	15	0	
16	4.5	46	GND	10	N/C	22	1.7	10	1.0	40	GND	70	N/C	100	3.3	16	4.8	
17	4.5	47	N/C	11	GND	23	1.5	11	2.8	41	0.0	71	N/C	IC2005				
18	0.0	48	GND	12	8.9	24	1.6	12	2.5	42	0.0	72	N/C	pin	volt			
19	4.5	49	4.5	13	GND	25	1.6	13	1.3	43	0.0	73	N/C	IN	5.0			
20	4.5	50	4.5	14	4.7	26	1.6	14	1.4	44	0.0	74	N/C	OUT	3.3			
21	4.5	51	N/C	15	4.7	27	2.5	15	1.8	45	3.3	75	N/C	GND	GND			
22	4.5	52	4.6	16	8.9	28	1.0	16	1.6	46	3.3	76	4.4	IC2006				
23	4.5	53	4.4	IC2003	29	1.0	17	1.6	47	1.9	77	GND	pin	volt				
24	4.5	54	4.6	pin	volt	30	N/C	18	1.7	48	GND	78	GND	IN	8.9			
25	N/C	55	4.4	1	5.0	31	1.4	19	1.7	49	GND	79	GND	OUT	5.0			
26	N/C	56	4.4	2	1.7	32	1.5	20	1.7	50	1.5	80	GND	GND	GND			
27	4.5	57	GND	3	1.7	33	1.9	21	1.0	51	0.0	81	3.3					
28	4.5	58	4.4	4	1.7	34	1.6	22	1.6	52	N/C	82	1.0					

All voltages are in V

UX (MAIN) BOARD TRANSISTOR VOLTAGE LIST

Q201	Q208	Q235	Q263	Q1203	Q2003	Q2010	Q2017
pin	volt	pin	volt	pin	volt	pin	volt
B	2.6	B	3.9	B	0.1	B	4.5
C	8.8	C	8.9	C	0.0	C	GND
E	2.6	E	3.2	E	GND	E	5.1
Q202	Q209	Q236	Q264	Q1204	Q2004	Q2011	Q2018
pin	volt	pin	volt	pin	volt	pin	volt
B	2.6	B	3.9	B	0.1	B	4.2
C	7.9	C	8.9	C	0.0	C	GND
E	2.0	E	3.2	E	GND	E	4.8
Q203	Q210	Q237	Q265	Q1205	Q2005	Q2012	Q2019
pin	volt	pin	volt	pin	volt	pin	volt
B	2.6	B	2.6	B	4.4	B	4.4
C	7.9	C	8.9	C	GND	C	8.9
E	2.0	E	2.0	E	5.1	E	4.1
Q204	Q211	Q238	Q268	Q1206	Q2006	Q2013	Q2119
pin	volt	pin	volt	pin	volt	pin	volt
B	8.8	B	2.6	B	4.6	B	4.5
C	2.6	C	8.9	C	GND	C	8.9
E	8.8	E	2.0	E	5.2	E	5.1
Q205	Q231	Q239	Q1051	Q1207	Q2007	Q2014	
pin	volt	pin	volt	pin	volt	pin	volt
B	7.9	B	0.0	B	4.6	B	8.9
C	3.9	C	5.1	C	GND	C	-0.1
E	8.5	E	GND	E	5.2	E	8.8
Q206	Q233	Q246	Q1201	Q1208	Q2008	Q2015	
pin	volt	pin	volt	pin	volt	pin	volt
B	7.9	B	0.2	B	0.4	B	8.4
C	3.9	C	0.0	C	5.1	C	0.0
E	8.6	E	GND	E	GND	E	8.9
Q207	Q234	Q262	Q1202	Q2001	Q2009	Q2016	
pin	volt	pin	volt	pin	volt	pin	volt
B	2.6	B	0.2	B	3.8	B	0.0
C	8.9	C	0.0	C	GND	C	4.4
E	1.9	E	GND	E	4.5	E	GND


All voltages are in V

UX BOARD MARK (*) LIST

REF. NO.	LOCATION	KV-32FV26 KV-34FX260 KV-34FX260C	KV-32FV16 KV-34FV16 KV-34FV16C	REF. NO.	LOCATION	KV-32FV26 KV-34FX260 KV-34FX260C	KV-32FV16 KV-34FV16 KV-34FV16C
C2001	H-13	22PF	#	R2002	H-13	10K	#
C2004	H-13	22PF	#	R2003	H-12	33K	#
C2007	H-14	1000µF 10V	#	R2004	H-11	2.2K	#
C2008	H-14	0.1µF 25V	#	R2005	H-11	0	#
C2013	H-12	0.1µF 25V	#	R2006	I-11	4.7K	#
C2014	H-12	0.001µF	#	R2007	H-12	470	#
C2019	H-12	1µF	#	R2008	H-12	100	#
C2051	D-17	10µF	#	R2009	H-12	100	#
C2072	I-13	100µF 16V	#	R2010	H-12	10	#
C2074	H-12	0.001µF	#	R2022	I-14	1K	#
IC2009	H-13	CXD2085M-T4	#	R2023	H-14	1K	#
L2011	H-13	560µH	#	R2065	D-19	1K	#
Q2001	H-12	2SD601A-QRS-TX	#	R2103	D-19	47	#
Q2017	D-19	2SD601A-QRS-TX	#	X2002	H-13	1-767-367-21	#
R2001	H-13	10K	#				

#: Not Mounted

AK Board Schematic Diagram

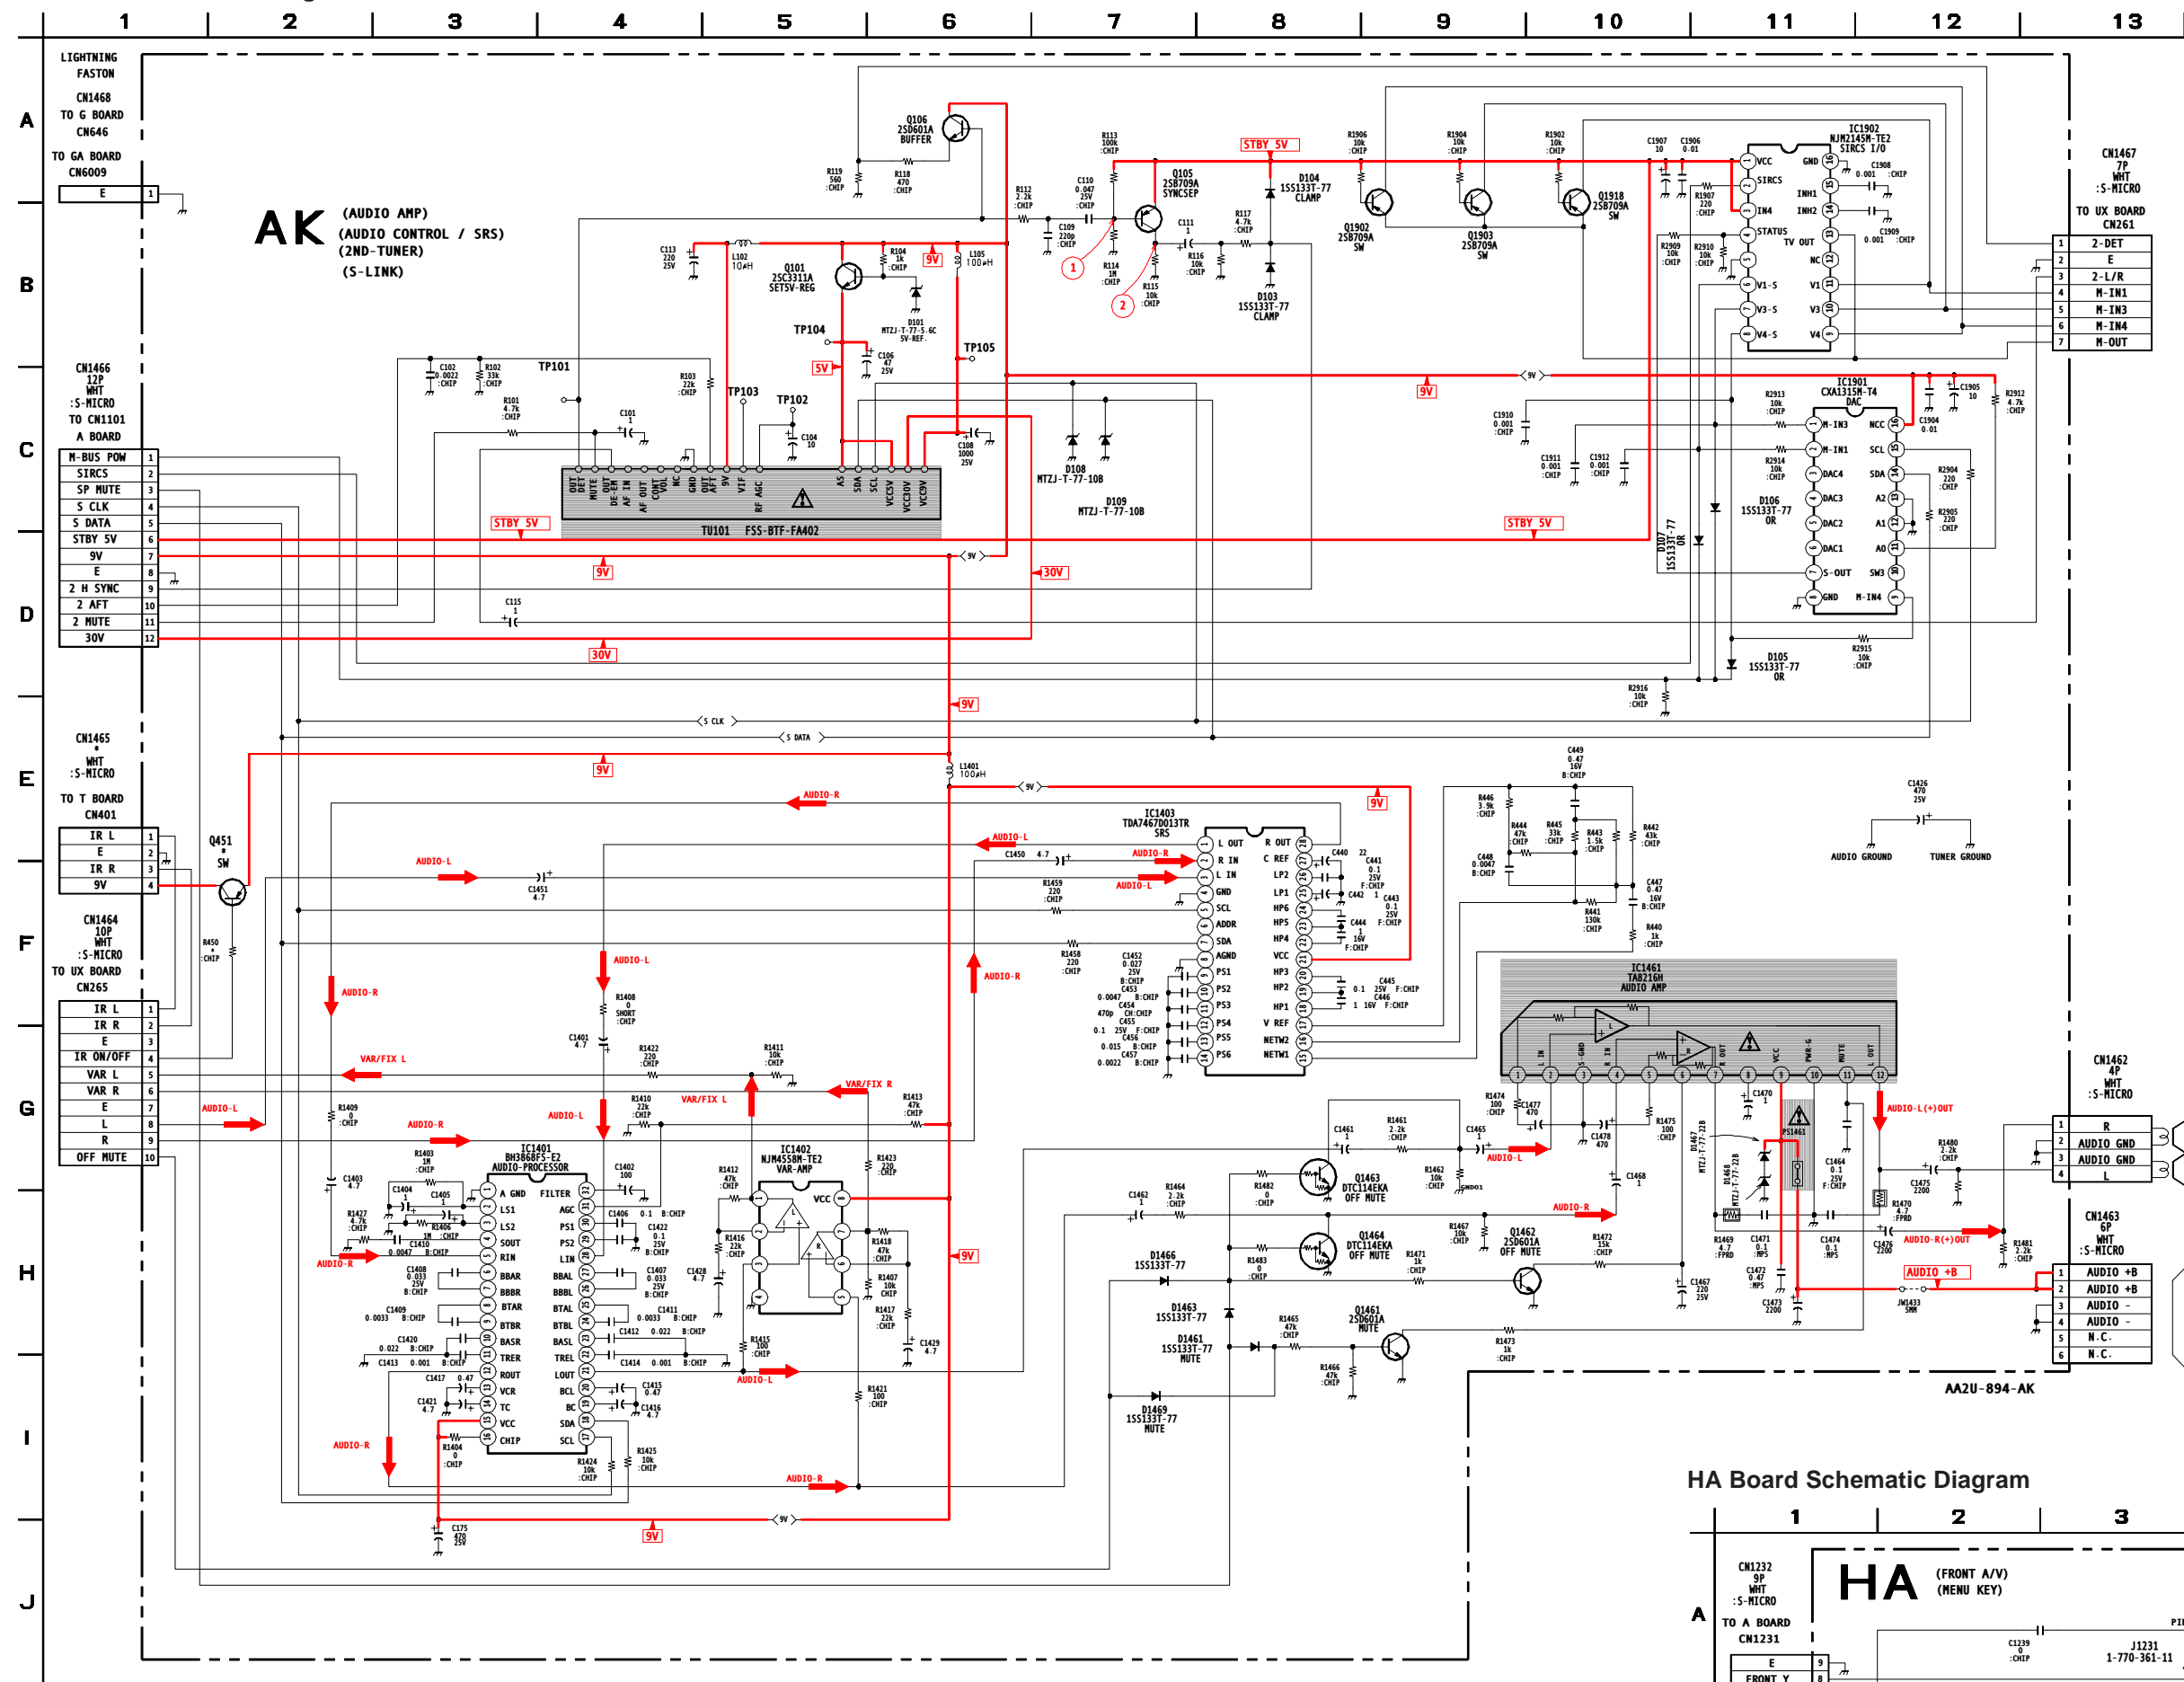

AK BOARD TRANSISTOR VOLTAGE LIST

Q101		Q451		Q1463		Q1903	
pin	volt	pin	volt	pin	volt	pin	volt
B	5.7	B	8.9	B	0.0	B	5.0
C	9.3	C	0.4	C	0.0	C	0.7
E	5.1	E	9.3	E	GND	E	0.0
Q105		Q1461		Q1464		Q1918	
pin	volt	pin	volt	pin	volt	pin	volt
B	5.1	B	0.0	B	0.0	B	5.0
C	1.1	C	1.2	C	0.0	C	0.7
E	5.0	E	GND	E	GND	E	0.0
Q106		Q1462		Q1902			
pin	volt	pin	volt	pin	volt		
B	5.6	B	0.0	B	5.0		
C	9.3	C	11.6	C	0.7		
E	4.9	E	GND	E	0.0		


All voltages are in V

AK BOARD MARK (*) LIST

REF. NO.	LOCATION	KV-32FV26 KV-34FX260 KV-34FX260C	KV-32FV16 KV-34FV16 KV-34FV16C
CN1465	E-1	4P	#
R451	F-1	2SB734-T-34	#
R450	F-2	10K	#


Not Mounted

AK BOARD WAVEFORMS

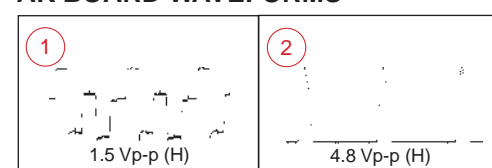

AK

[AUDIO AMP, AUDIO CONTROL/SRS, 2ND-TUNER, S-LINK]

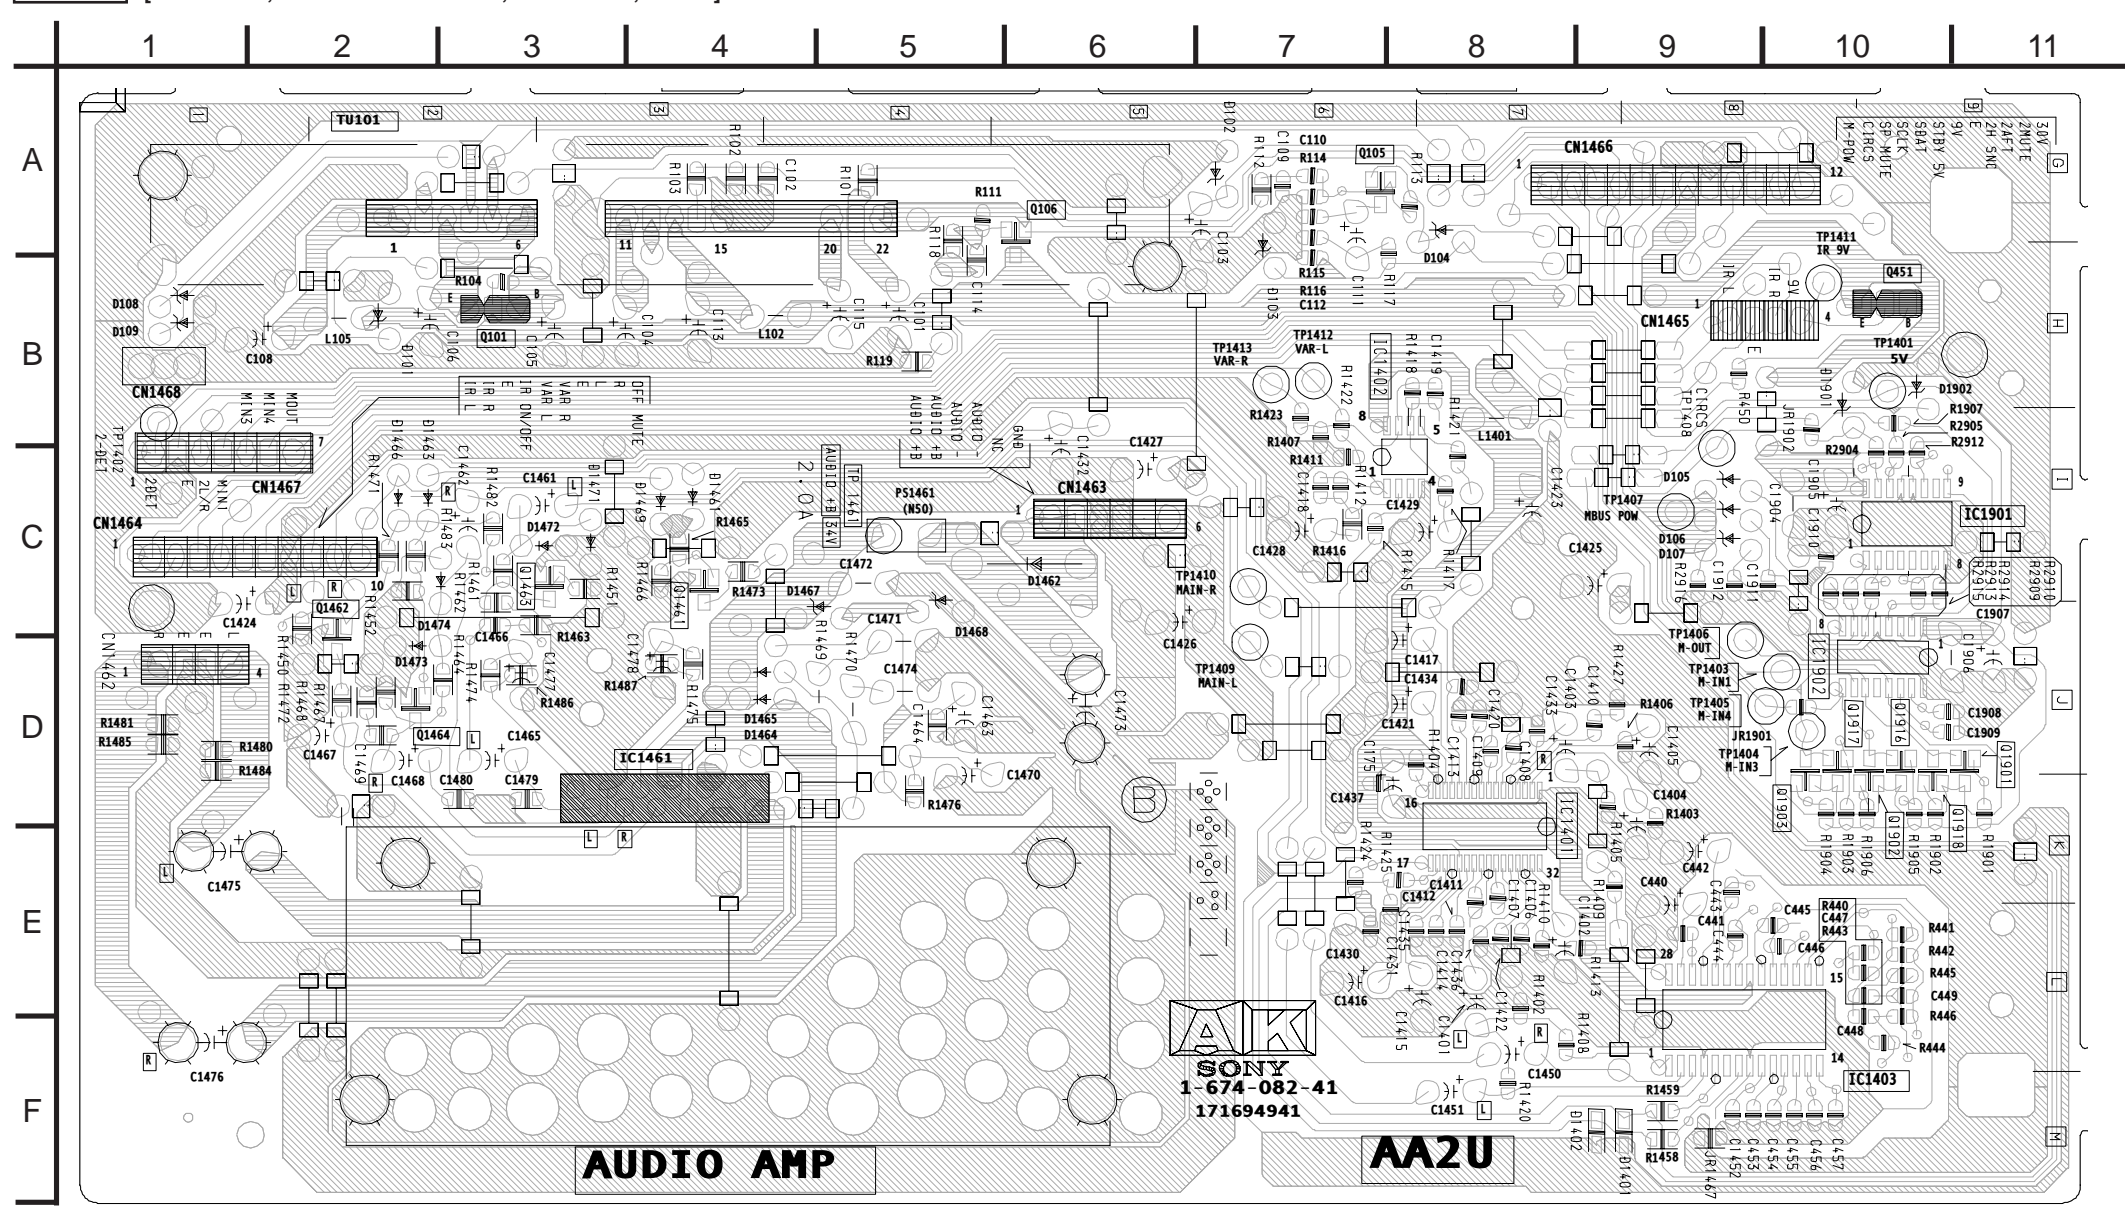

AK BOARD LOCATOR LIST


DIODE		IC1402		B-6	
D101	A-2	IC1403	E-8		
D103	A-6	IC1461	D-3		
D104	A-6	IC1901	B-8		
D105	B-8	IC1902	C-8		
D106	B-8	TRANSISTOR			
D107	C-8	Q101	A-2		
D108	A-1	Q105	A-6		
D109	B-1	Q106	A-4		
D1461	B-3	Q451	B-10		
D1463	B-2	Q1461	C-3		
D1466	B-2	Q1462	C-2		
D1467	C-4	Q1463	C-2		
D1468	C-4	Q1464	C-2		
D1469	C-4	Q1902	D-8		
IC		Q1903		D-9	
IC1401	D-6	Q1918	D-9		

AK BOARD IC VOLTAGE LIST

IC1401		IC1402		IC1403		IC1461		IC1901		IC1902		TU101	
pin	volt	pin	volt	pin	volt	pin	volt	pin	volt	pin	volt	pin	volt
1	GND	7	4.5	15	9.1	23	4.5	31	2.9	5	4.5	3	4.5
2	0.7	8	4.5	16	9.1	24	4.5	32	4.5	6	4.5	4	GND
3	1.2	9	4.5	17	4.7	25	4.5	7	4.5	4	GND	11	4.5
4	4.5	10	4.5	18	4.7	26	4.5	8	9.1	6	N/C	12	4.5
5	4.5	11	0.0	19	1.9	27	4.5	9	4.5	7	16.0	13	4.5
6	4.5	12	4.5	20	1.0	28	4.5	10	GND	8	0.0	14	4.5


All voltages are in V

HA Board Schematic Diagram

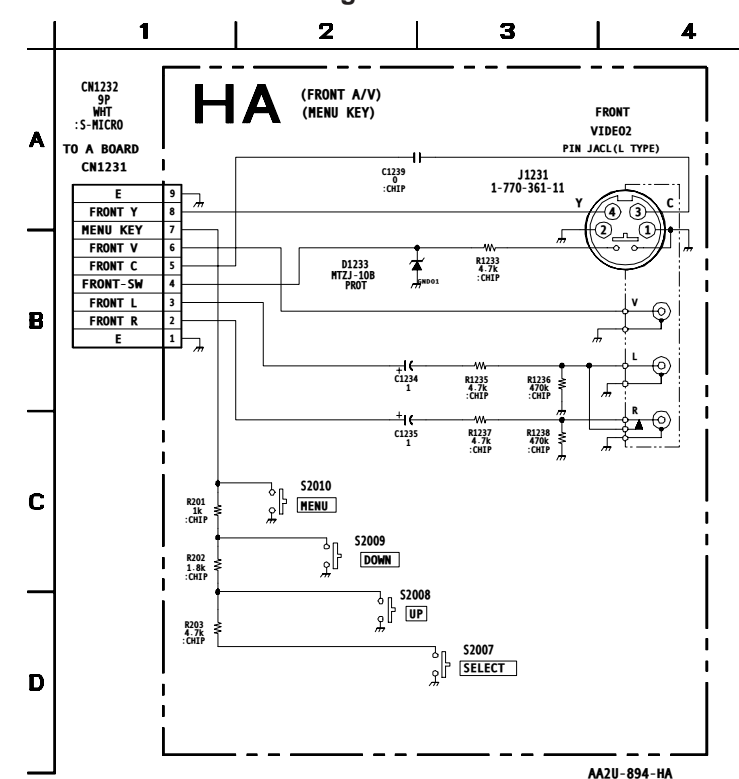


HA

[FRONT AV, MENU KEY]

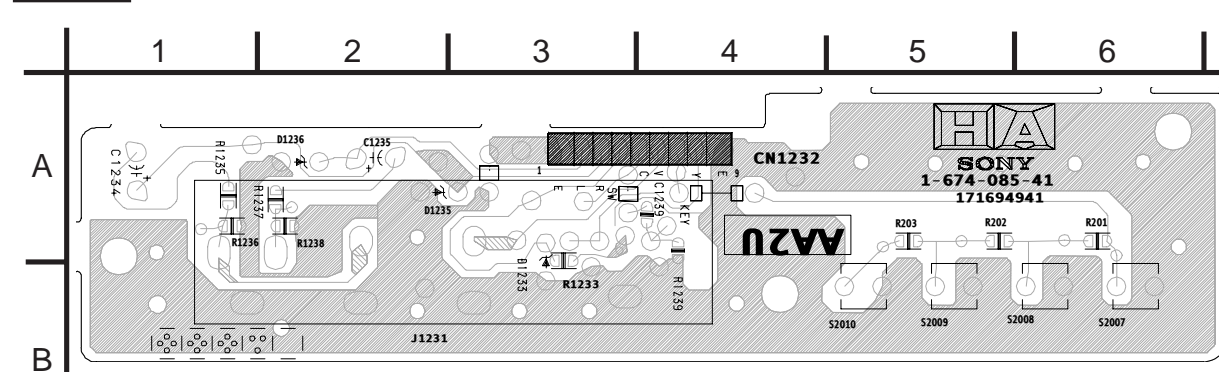

G


[POWER SUPPLY]
(KV-32FV16/32FV26 ONLY)

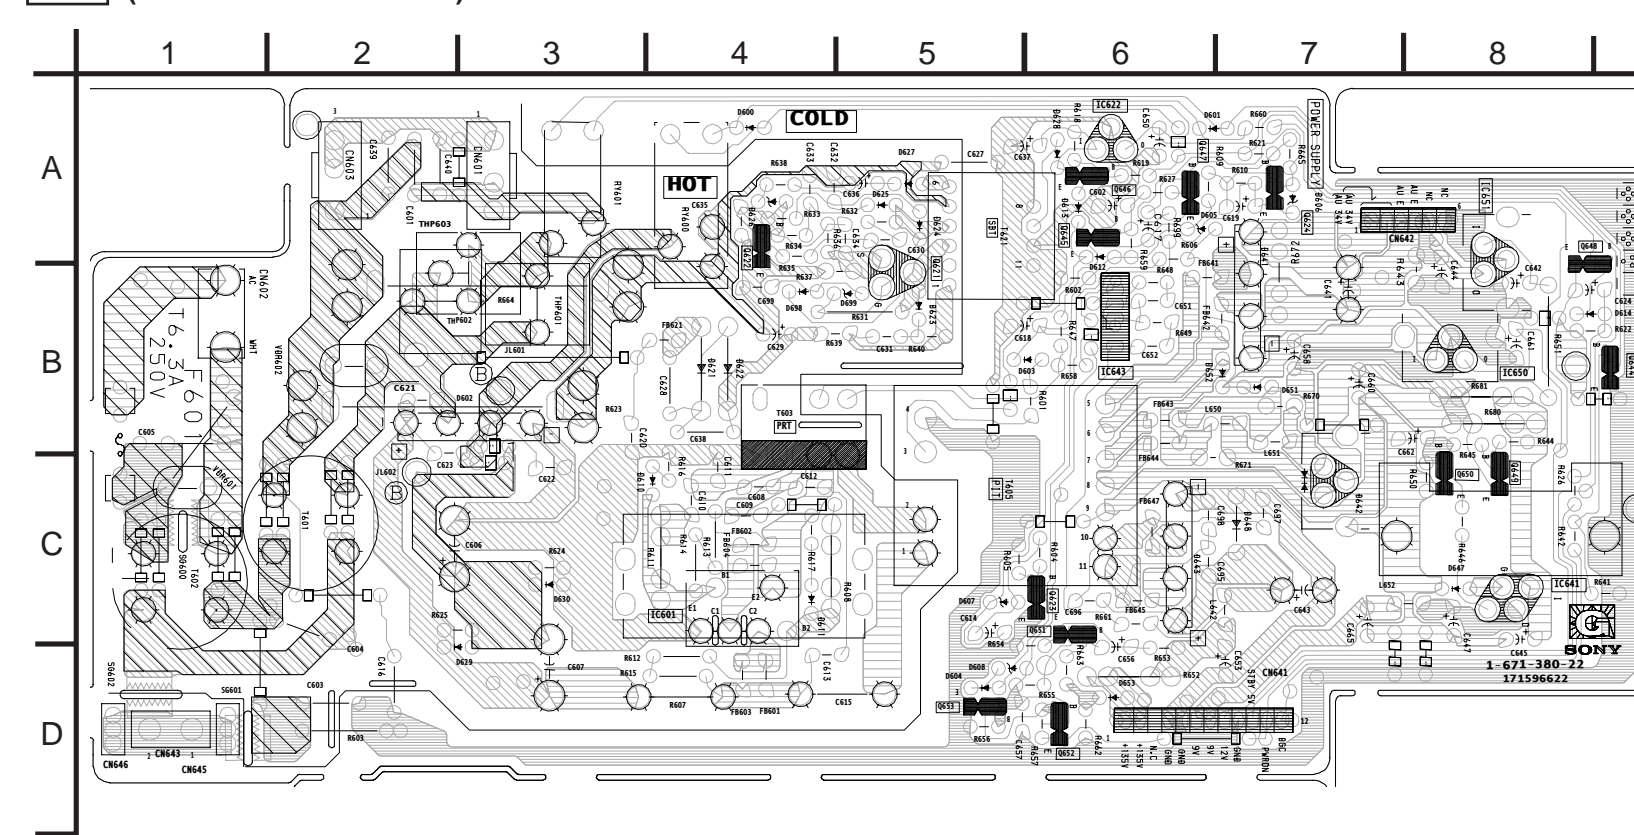

G BOARD LOCATOR LIST


DIODE		D648		C-7	
D600	A-4	D651	B-7		
D601	A-6	D652	B-7		
D602	B-2	D653	D-6		
D603	B-5	D698	B-4		
D604	D-5	D699	B-5		
D605	A-6	IC			
D606	A-7	IC601	C-3		
D607	C-5	IC622	A-6		
D608	D-5	IC641	C-8		
D612	A-6	IC643	B-6		
D613	A-6	IC650	B-8		
D614	B-8	TRANSISTOR			
D621	B-4	Q621	A-5		
D622	B-4	Q622	A-4		
D623	B-5	Q623	C-6		
D624	A-5	Q624	A-7		
D625	A-5	Q644	B-8		
D626	A-4	Q645	A-6		
D627	A-5	Q646	A-6		
D628	A-6	Q647	A-6		
D629	C-2	Q648	A-8		
D630	C-3	Q649	B-8		
D641	B-7	Q650	B-8		
D642	C-7	Q651	C-6		
D643	C-6	Q652	D-6		
D647	C-8	Q653	D-5		

G Board Schematic Diagram (KV-32FV16/32FV26 ONLY)

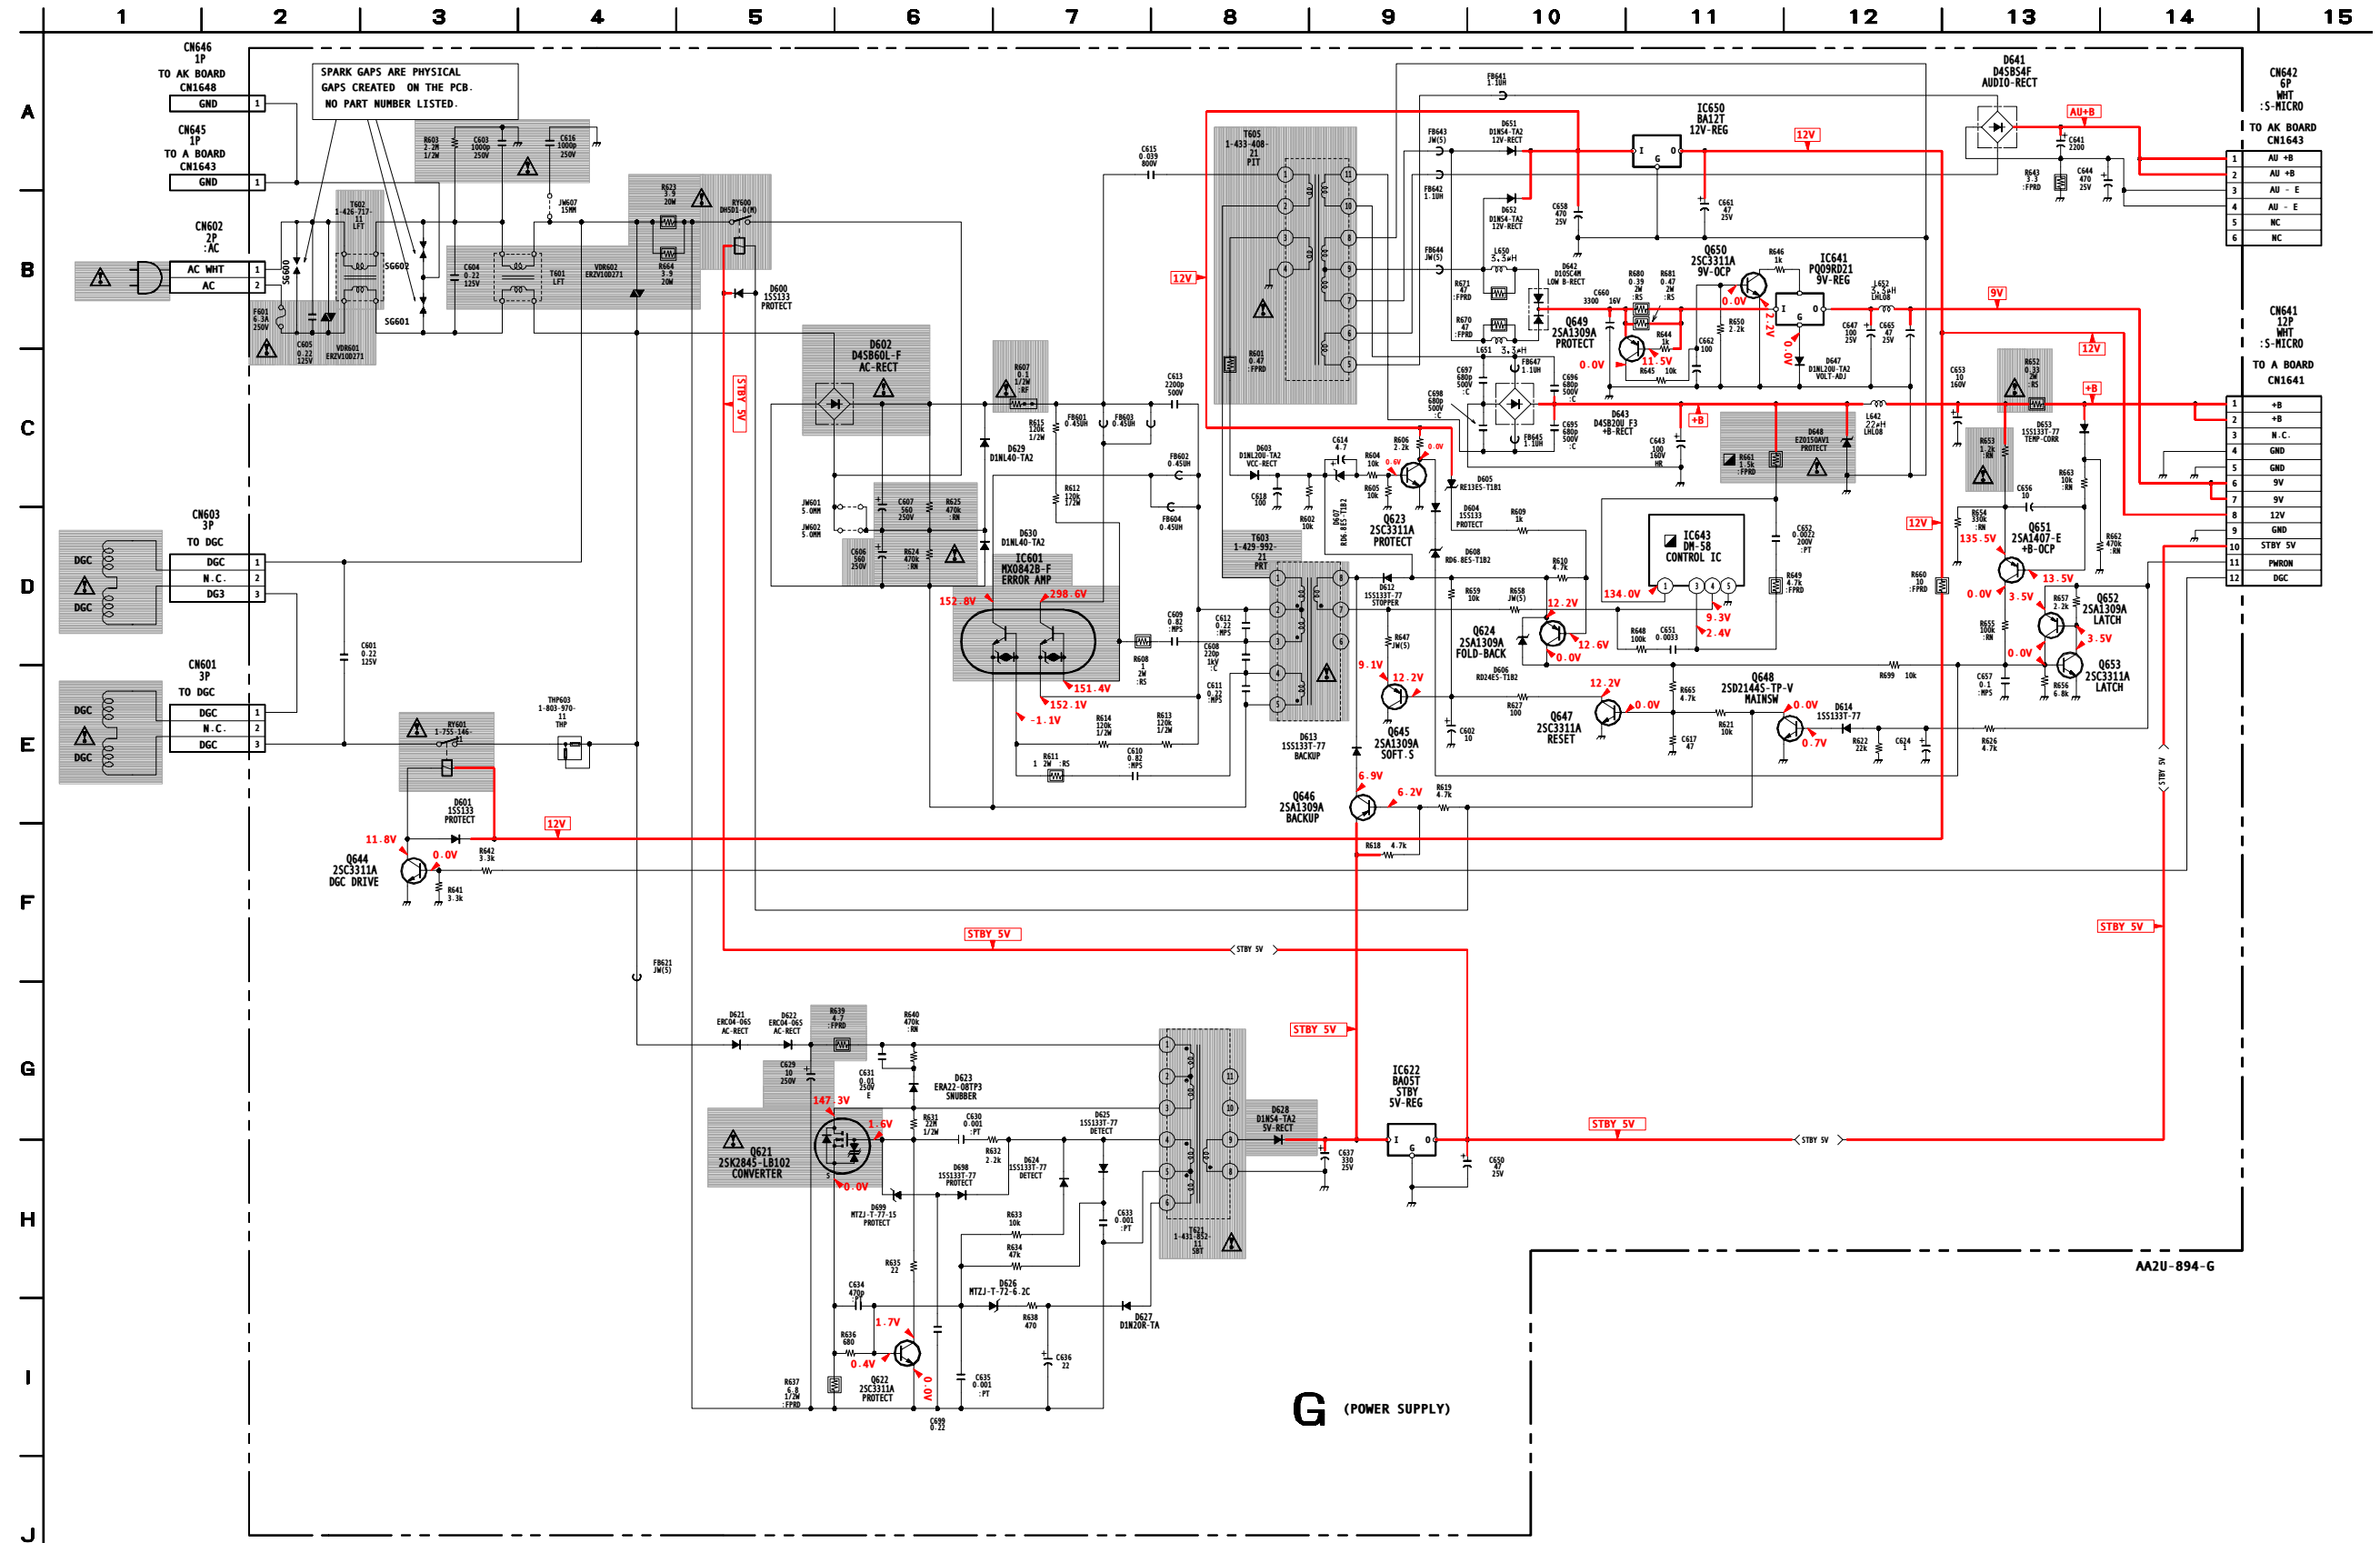

CN642	5P	WHT	TO AK BOARD	1	AU +B
CN642	5P	WHT	TO AK BOARD	2	AU +B
CN642	5P	WHT	TO AK BOARD	3	AU - E
CN642	5P	WHT	TO AK BOARD	4	AU - E
CN642	5P	WHT	TO AK BOARD	5	NC
CN642	5P	WHT	TO AK BOARD	6	NC
CN641	12P	WHT	TO A BOARD	1	+B
CN641	12P	WHT	TO A BOARD	2	+B
CN641	12P	WHT	TO A BOARD	3	N.C.
CN641	12P	WHT	TO A BOARD	4	GND
CN641	12P	WHT	TO A BOARD	5	GND
CN641	12P	WHT	TO A BOARD	6	5V
CN641	12P	WHT	TO A BOARD	7	9V
CN641	12P	WHT	TO A BOARD	8	12V
CN641	12P	WHT	TO A BOARD	9	STBY 5V
CN641	12P	WHT	TO A BOARD	10	STBY 5V
CN641	12P	WHT	TO A BOARD	11	PNORM
CN641	12P	WHT	TO A BOARD	12	DGC


GA Board Schematic Diagram (ALL EXCEPT KV-32FV16/32FV26)

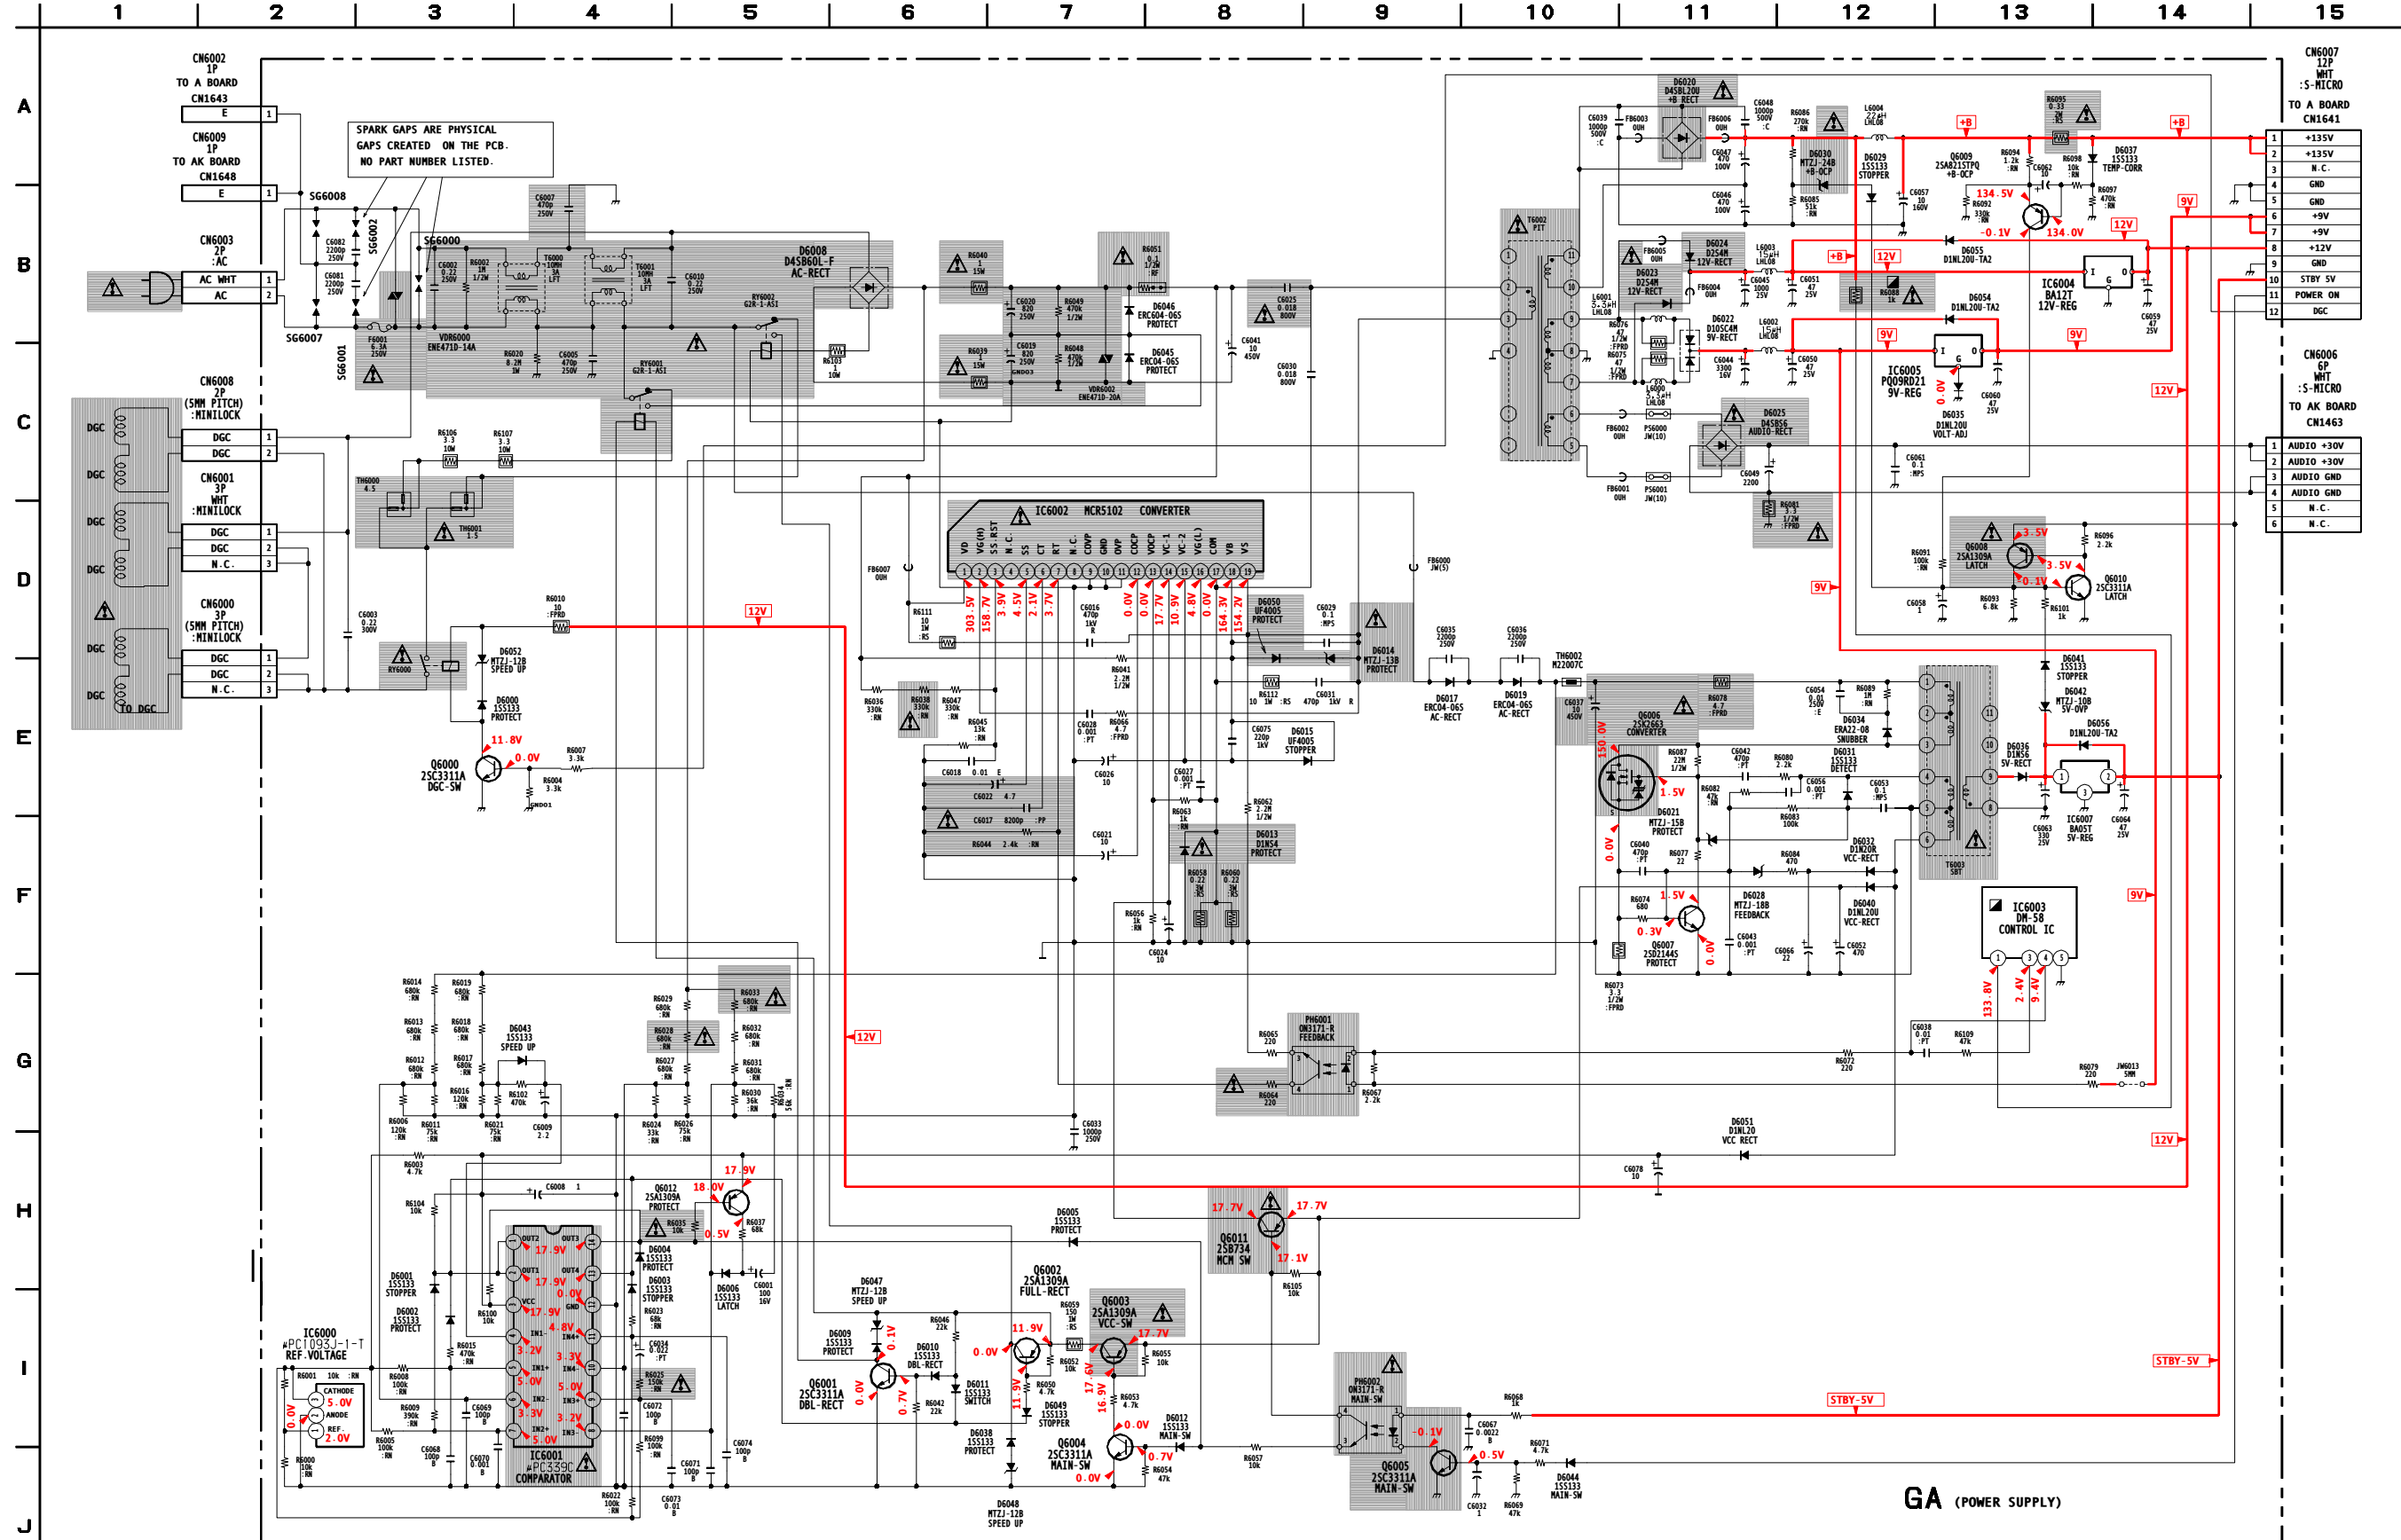

CN6007	12P	WHI	:5-MICRO
1			+135V
2			N.C.
3			GND
4			+9V
5			+12V
6			GND
7			STBY 5V
8			POWER ON
9			DGC
CN6006	6P	WHI	:5-MICRO
1			AUDIO +30V
2			AUDIO +30V
3			AUDIO GND
4			AUDIO GND
5			N.C.
6			N.C.

GA (POWER SUPPLY)



AA2U-894-GA

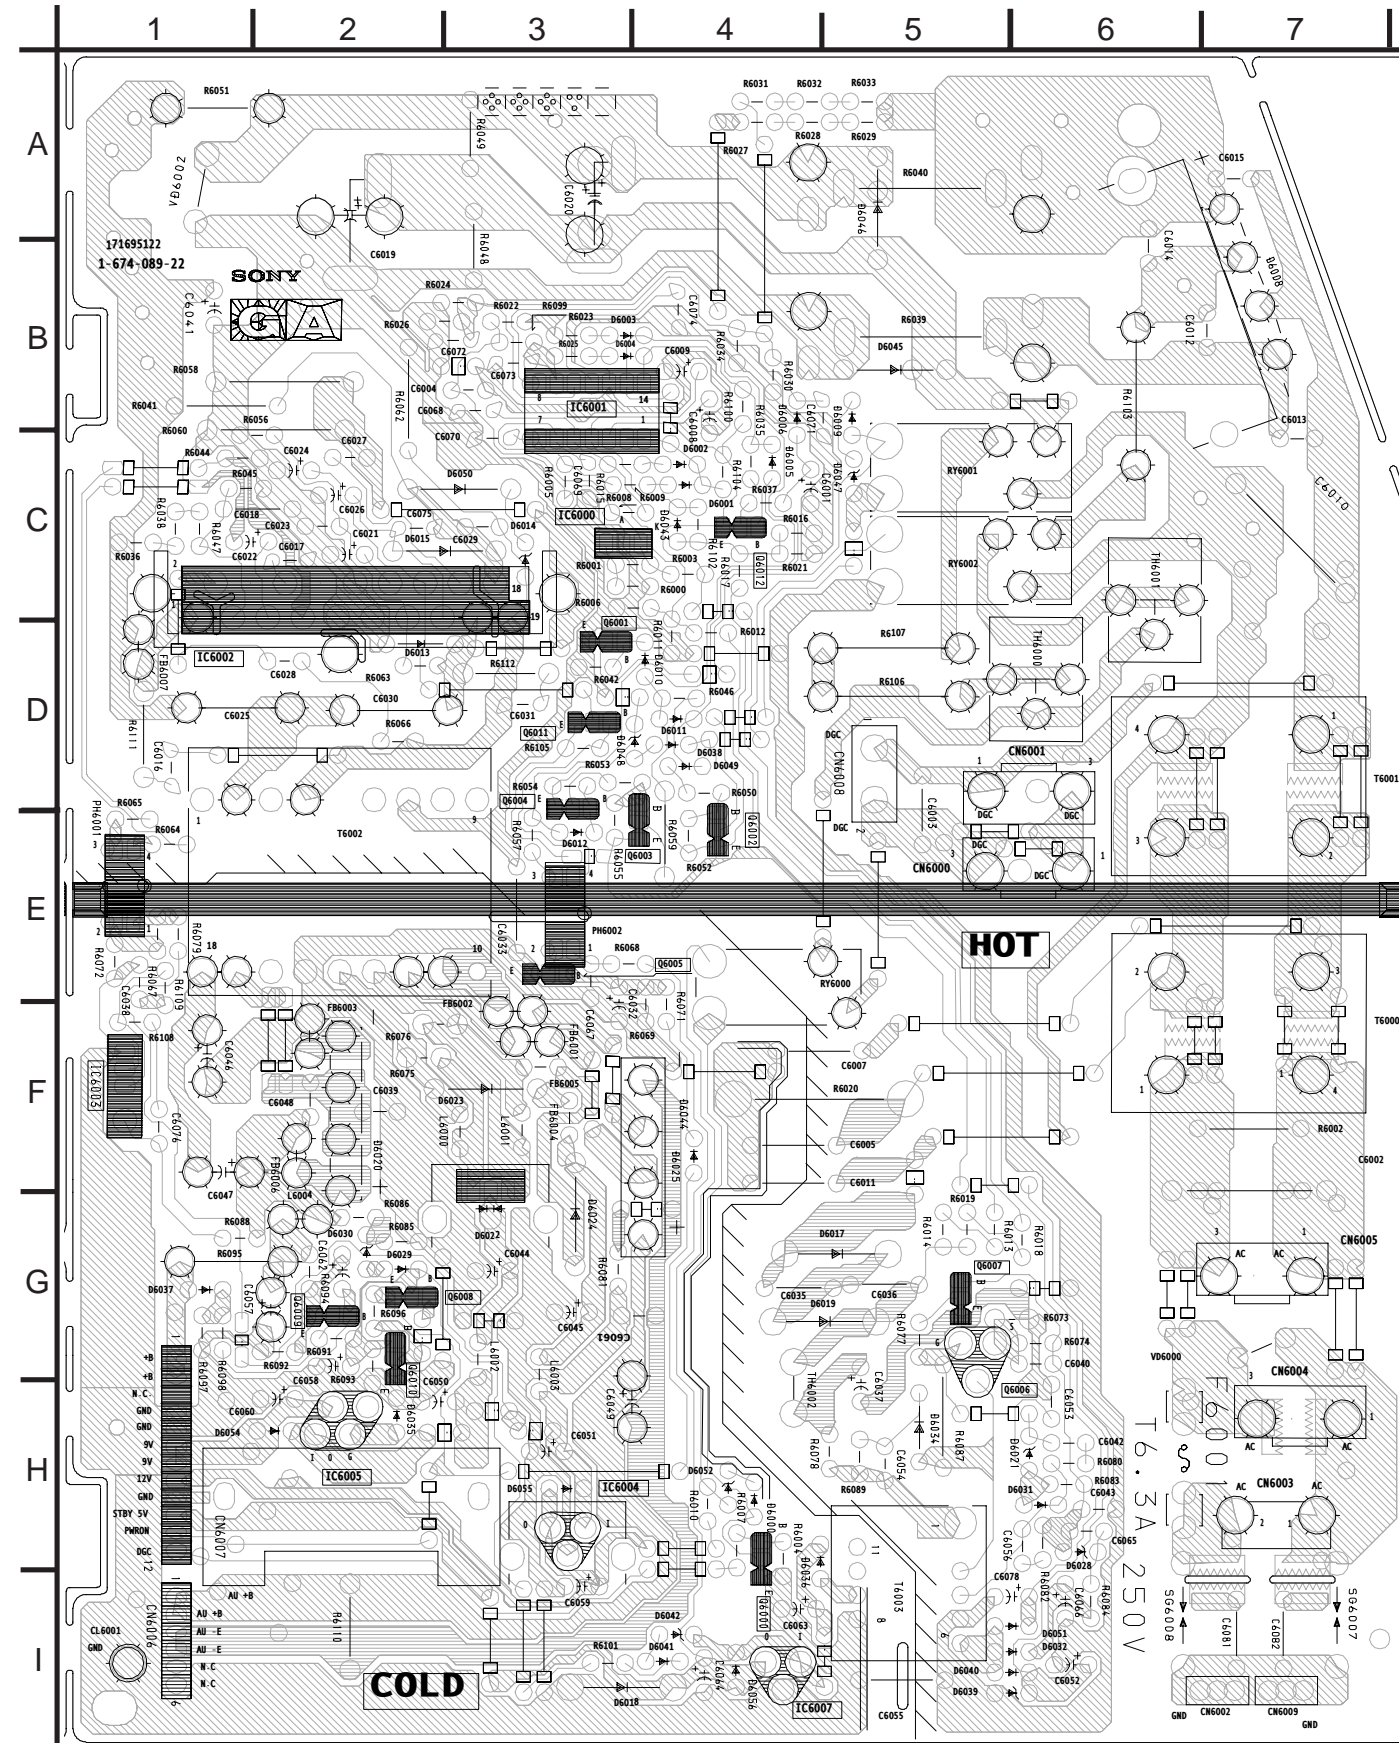


GA BOARD LOCATOR LIST



DIODE	D6012	E-3	D6028	H-2	D6042	I-4	D6055	H-3	Q6001	D-4	
D6000	I-5	D6013	D-3	D6029	H-2	D6043	C-4	D6056	I-4	Q6002	E-4
D6001	C-4	D6014	D-3	D6030	G-2	D6044	G-4	IC		Q6003	H-3
D6002	C-4	D6015	C-2	D6031	I-6	D6045	B-4	IC6000	C-4	Q6004	E-3
D6003	B-4	D6017	H-5	D6032	I-6	D6046	B-5	IC6001	B-3	Q6005	F-3
D6004	B-4	D6019	H-5	D6034	H-5	D6047	C-5	IC6002	D-1	Q6006	H-6
D6005	C-5	D6020	G-2	D6035	H-2	D6048	E-4	IC6003	F-1	Q6007	H-6
D6006	C-5	D6021	I-6	D6036	I-5	D6049	E-4	IC6004	I-3	Q6008	H-3
D6008	B-7	D6022	G-3	D6037	H-1	D6050	C-3	IC6005	H-2	Q6009	H-2
D6009	H-2	D6023	G-3	D6038	E-4	D6051	I-6	IC6007	J-5	Q6010	H-2
D6010	D-4	D6024	G-3	D6040	I-6	D6052	I-4	TRANSISTOR		Q6011	D-3
D6011	B-4	D6025	G-4	D6041	I-4	D6054	H-2	Q6000	I-5	Q6012	C-4

HX Board Schematic Diagram

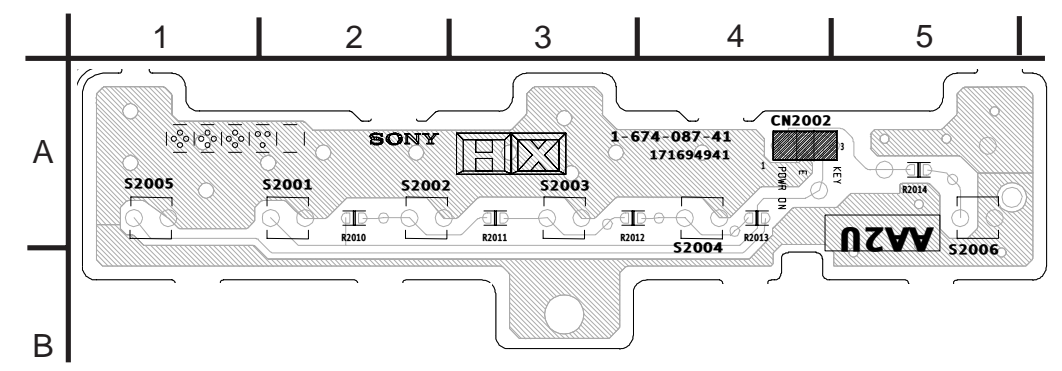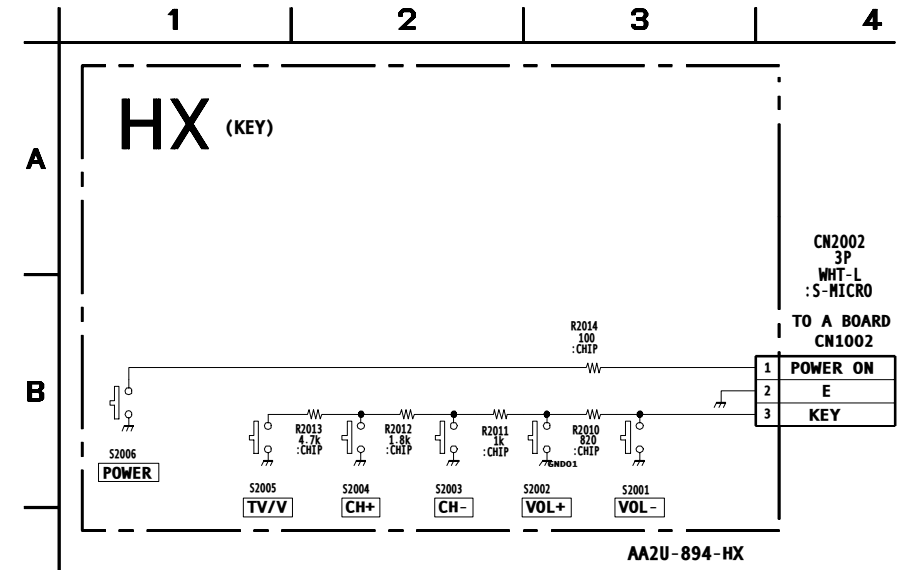


WA Board Schematic Diagram

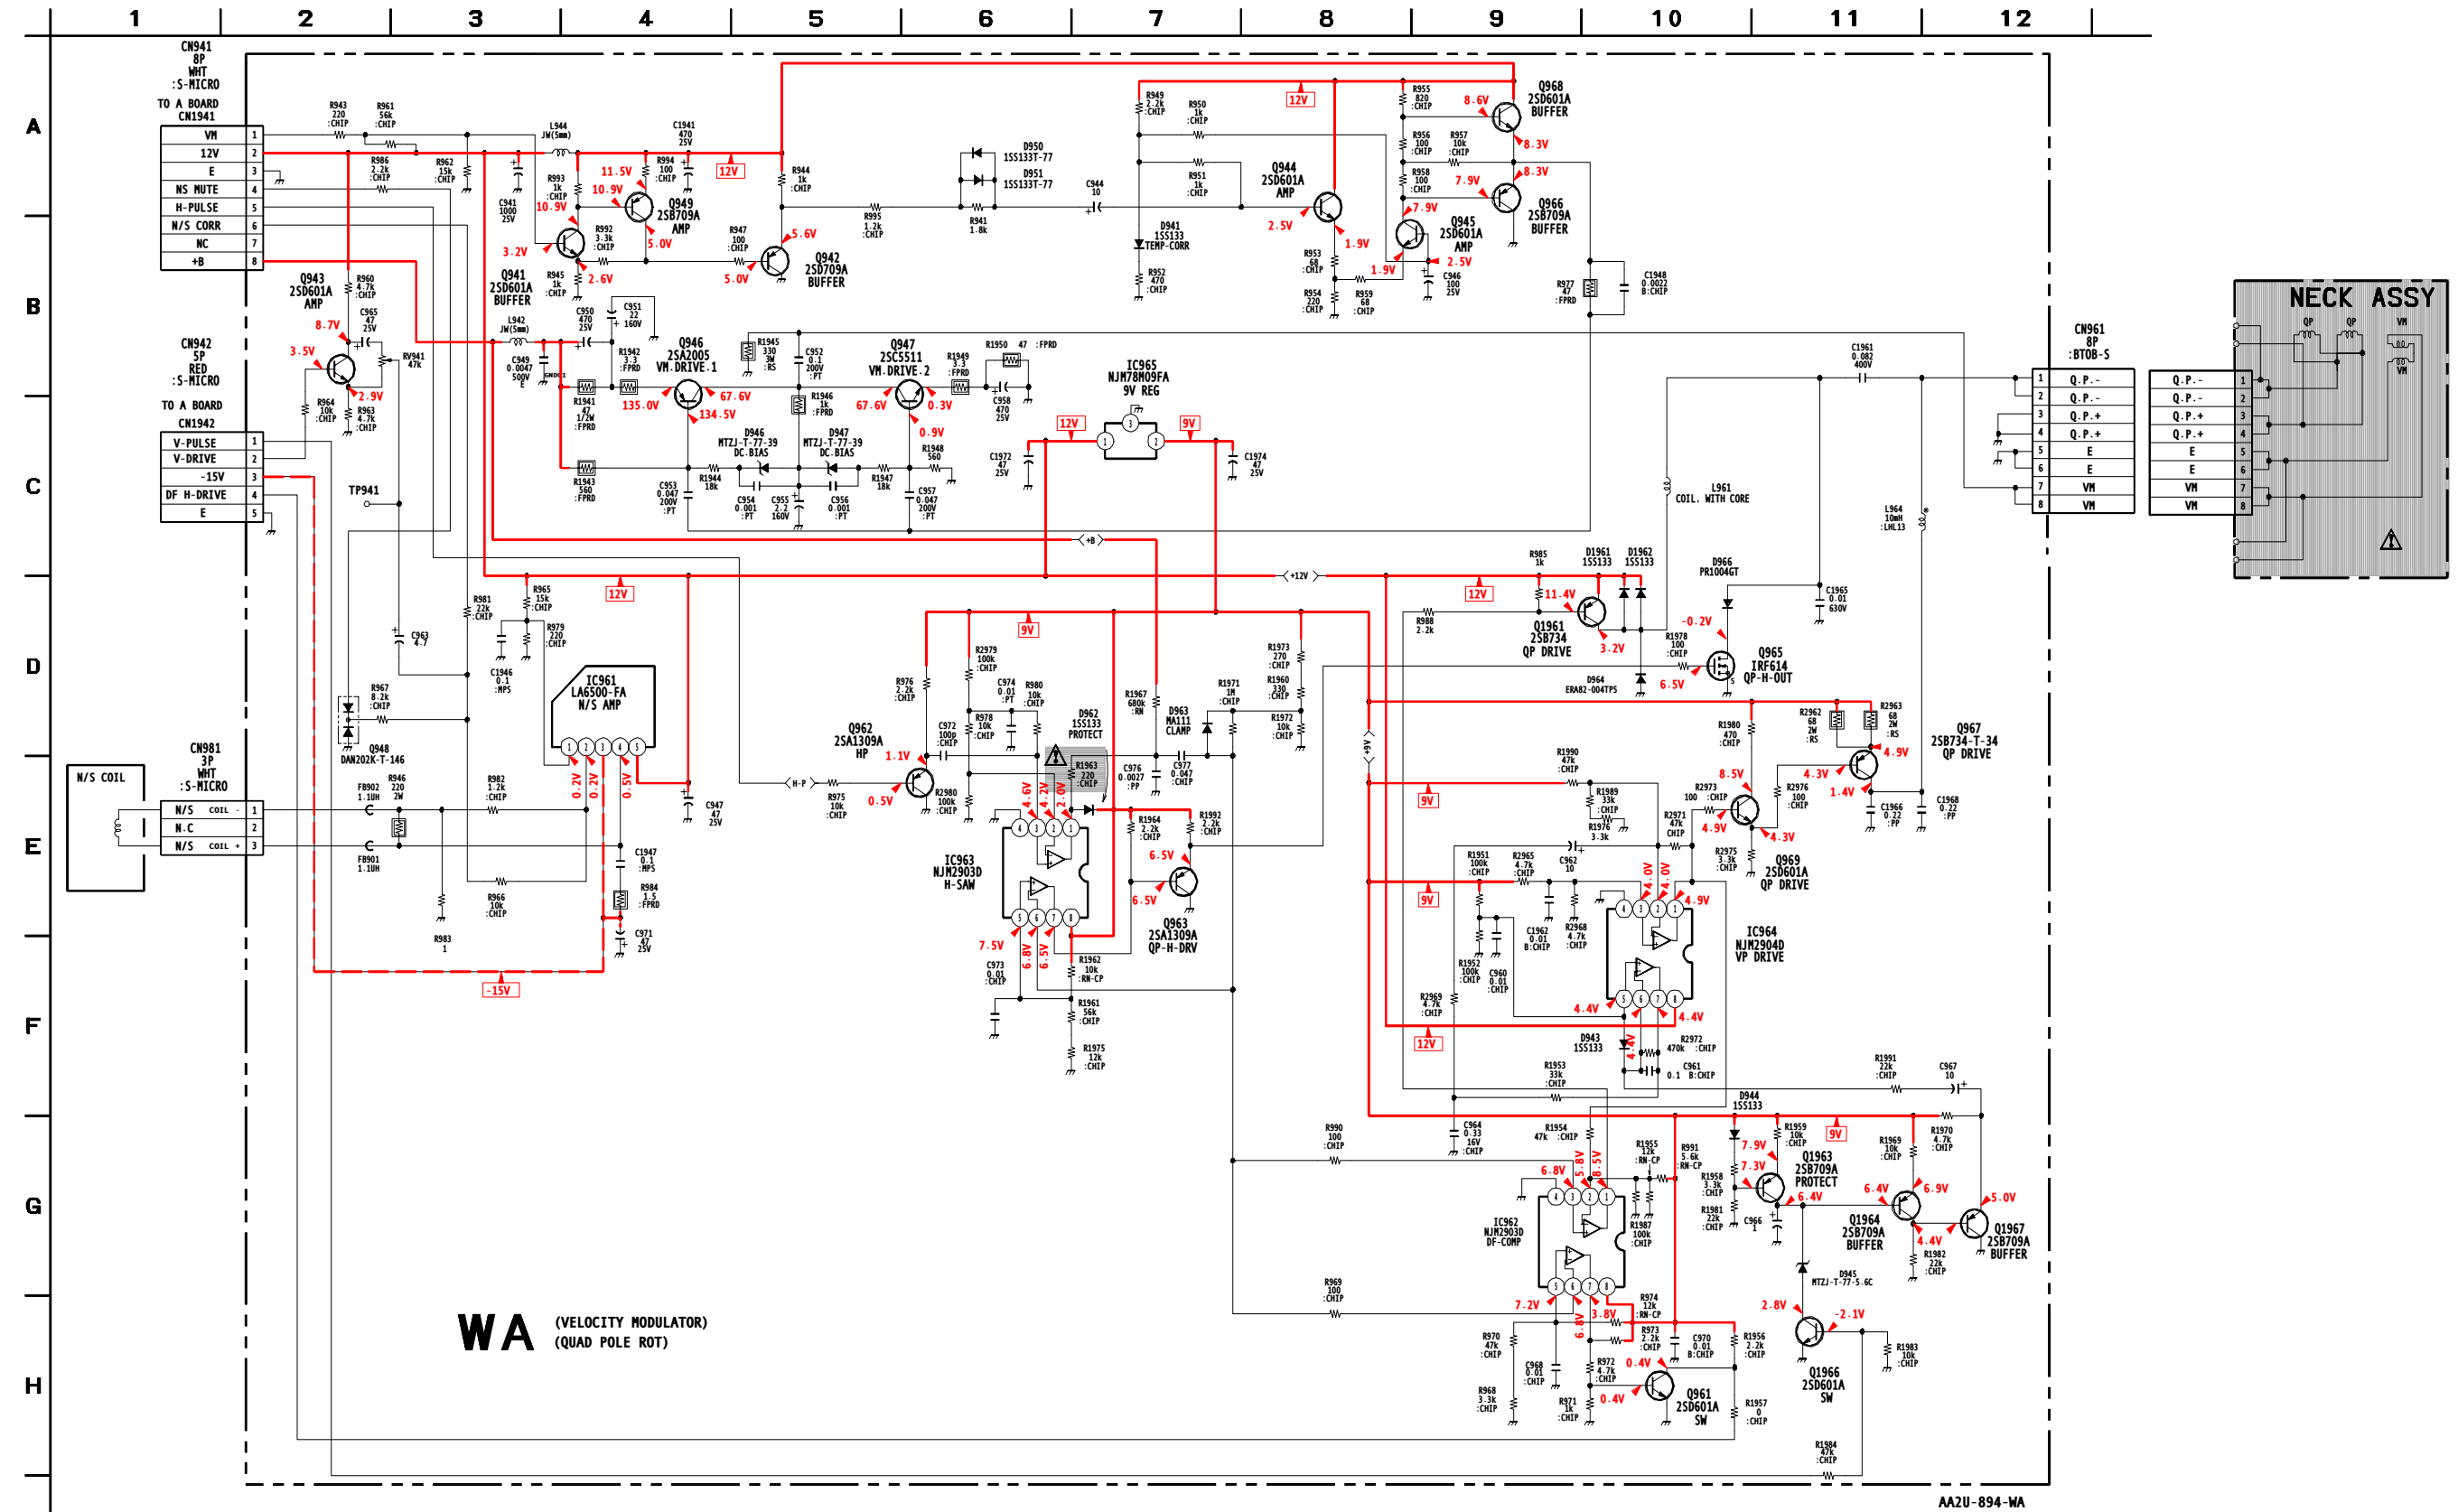


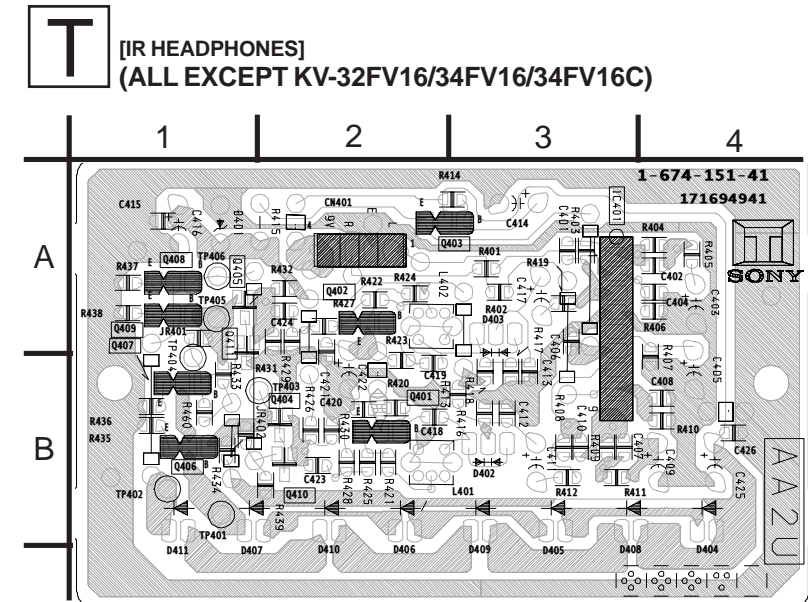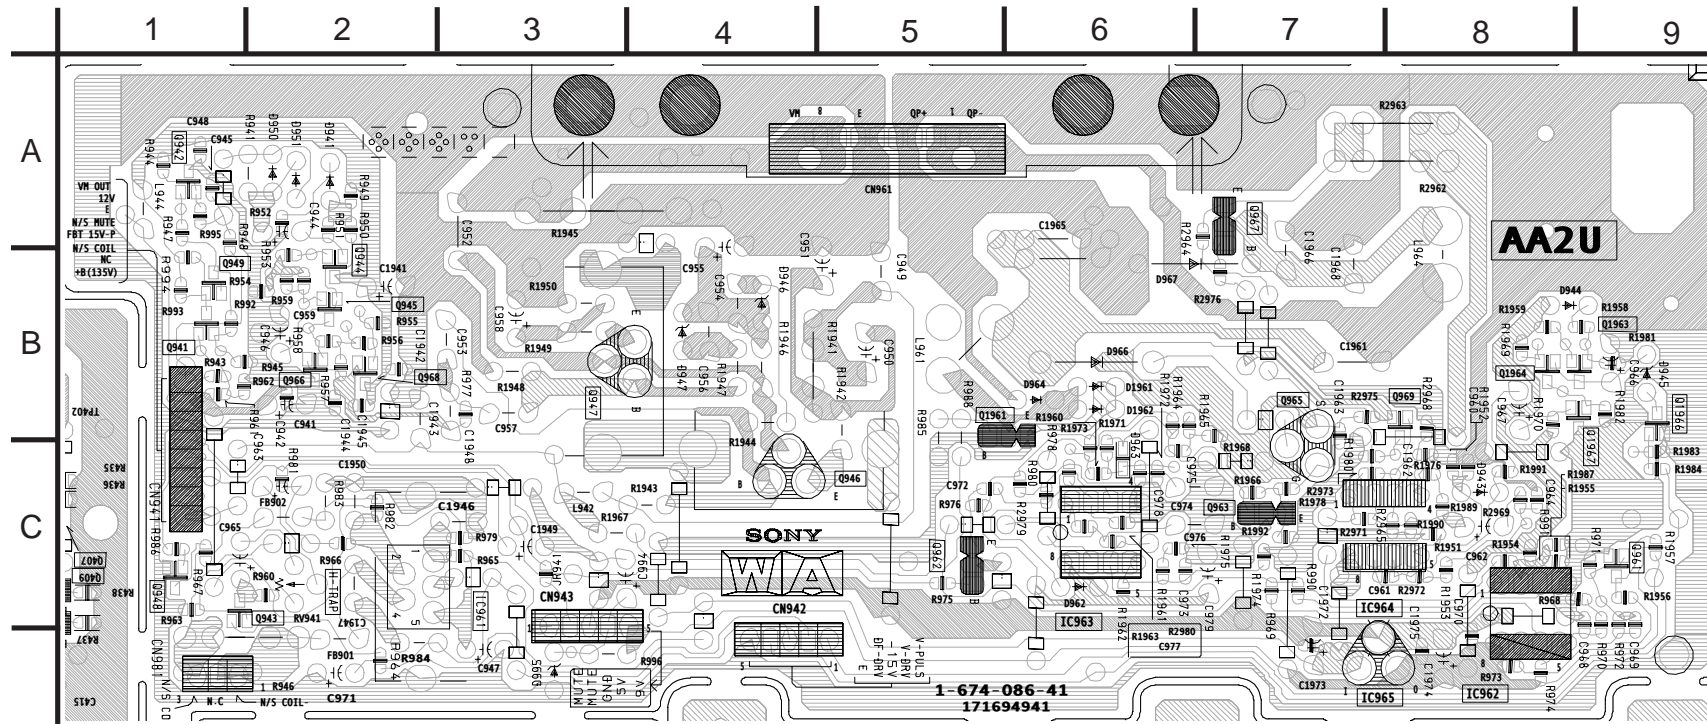


T Board Schematic Diagram (ALL EXCEPT KV-32FV16/34FV16/34FV16C)

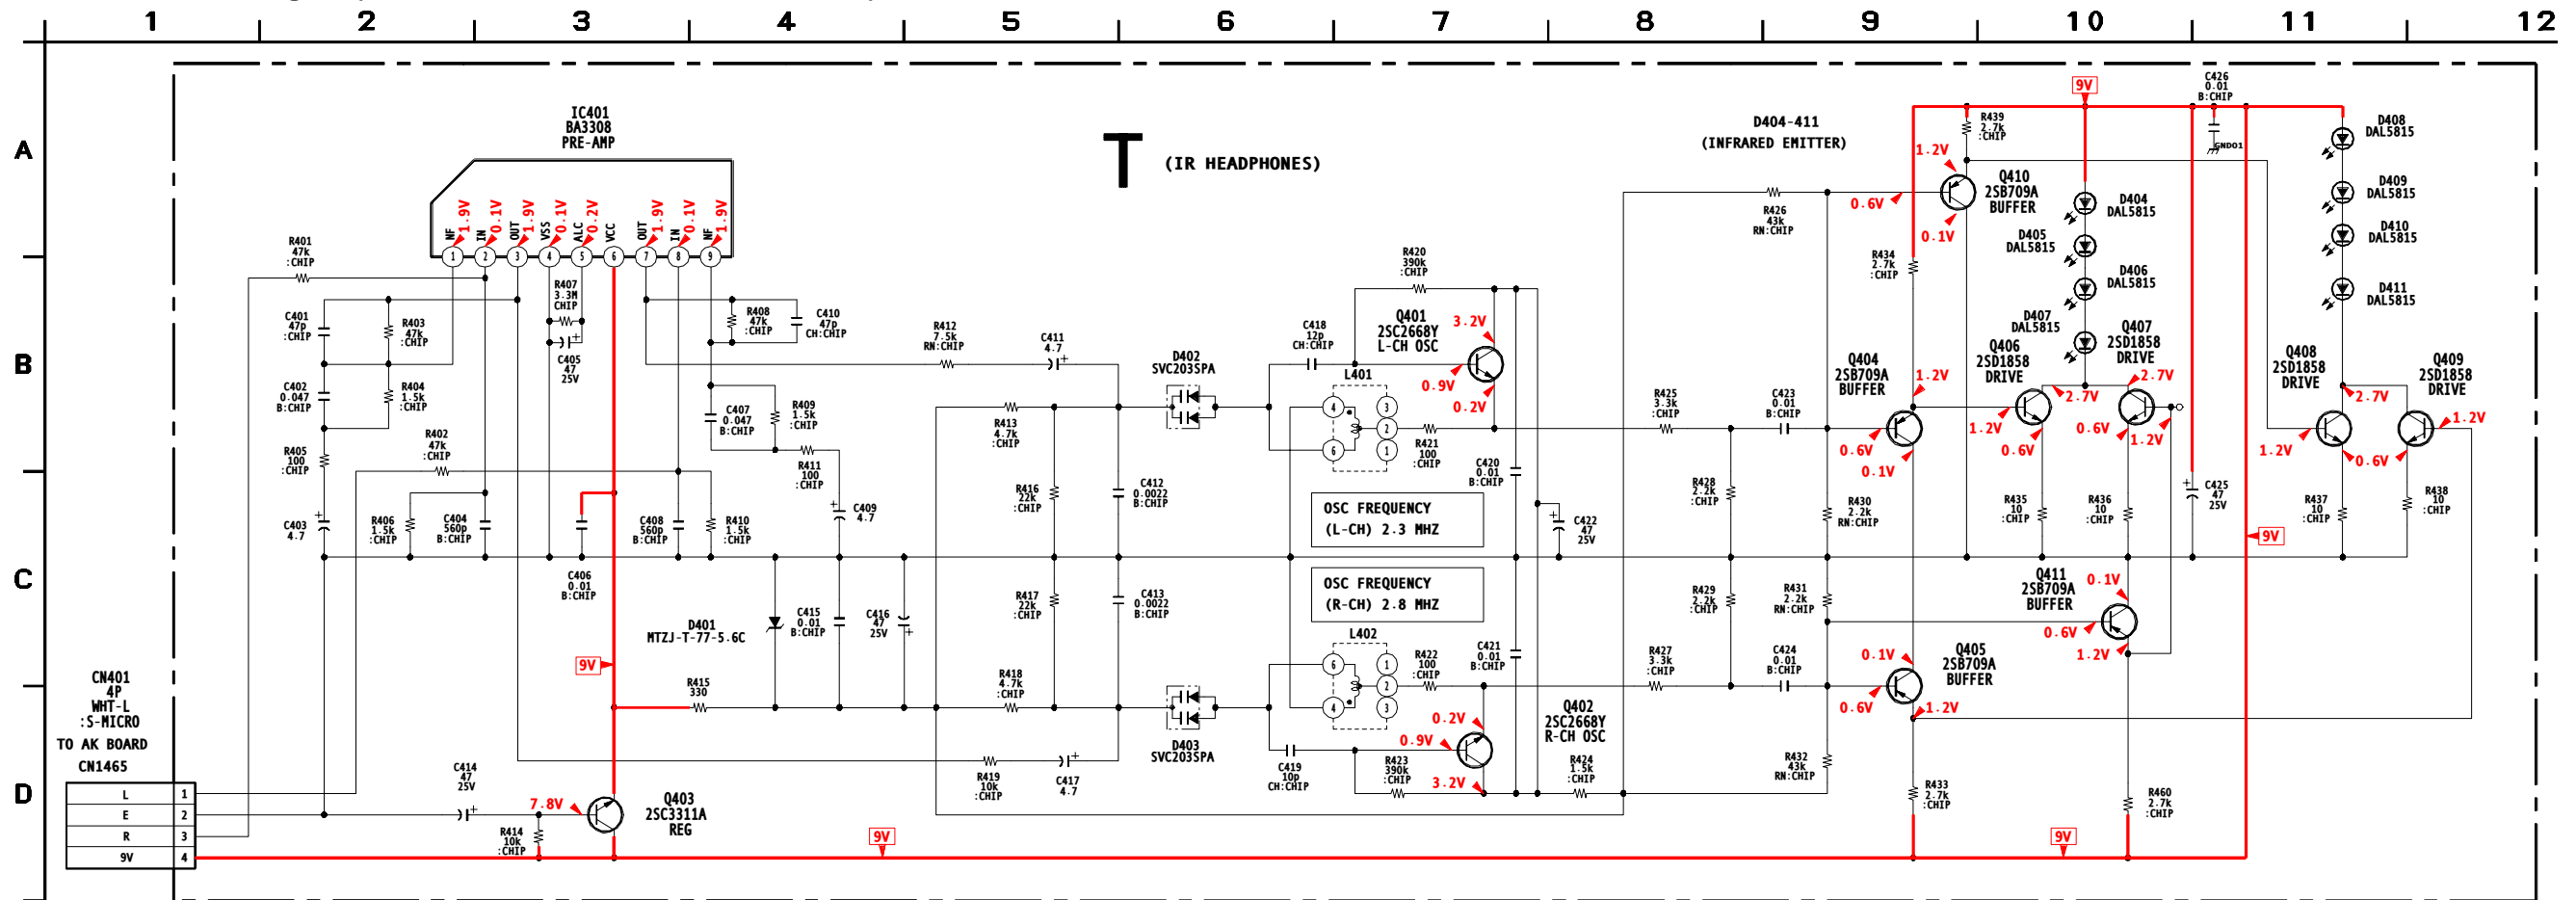


C Board Schematic Diagram

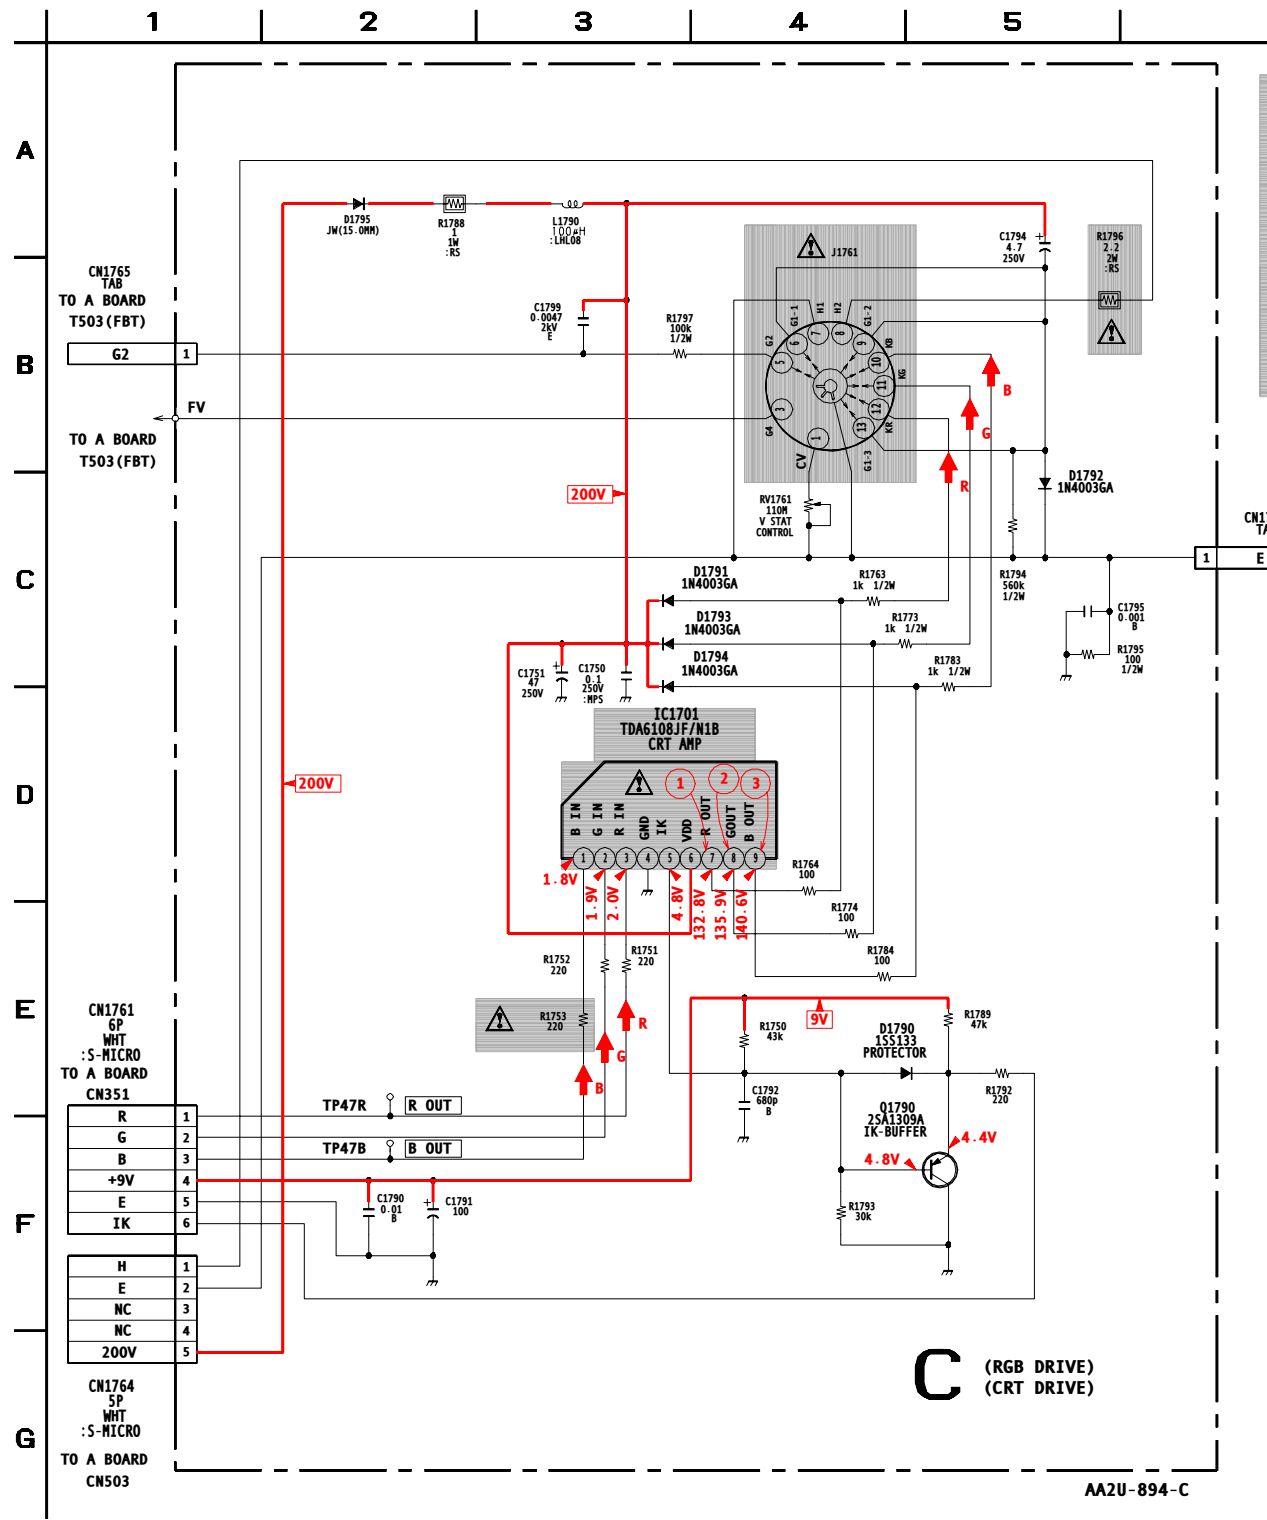


C BOARD WAVEFORMS

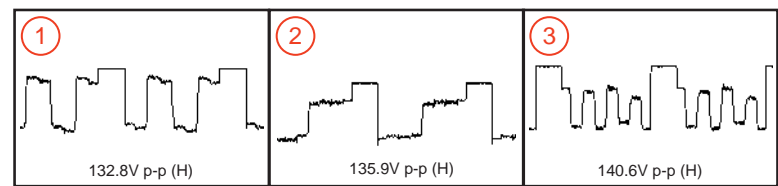


C [RGB DRIVE, CRT DRIVE]

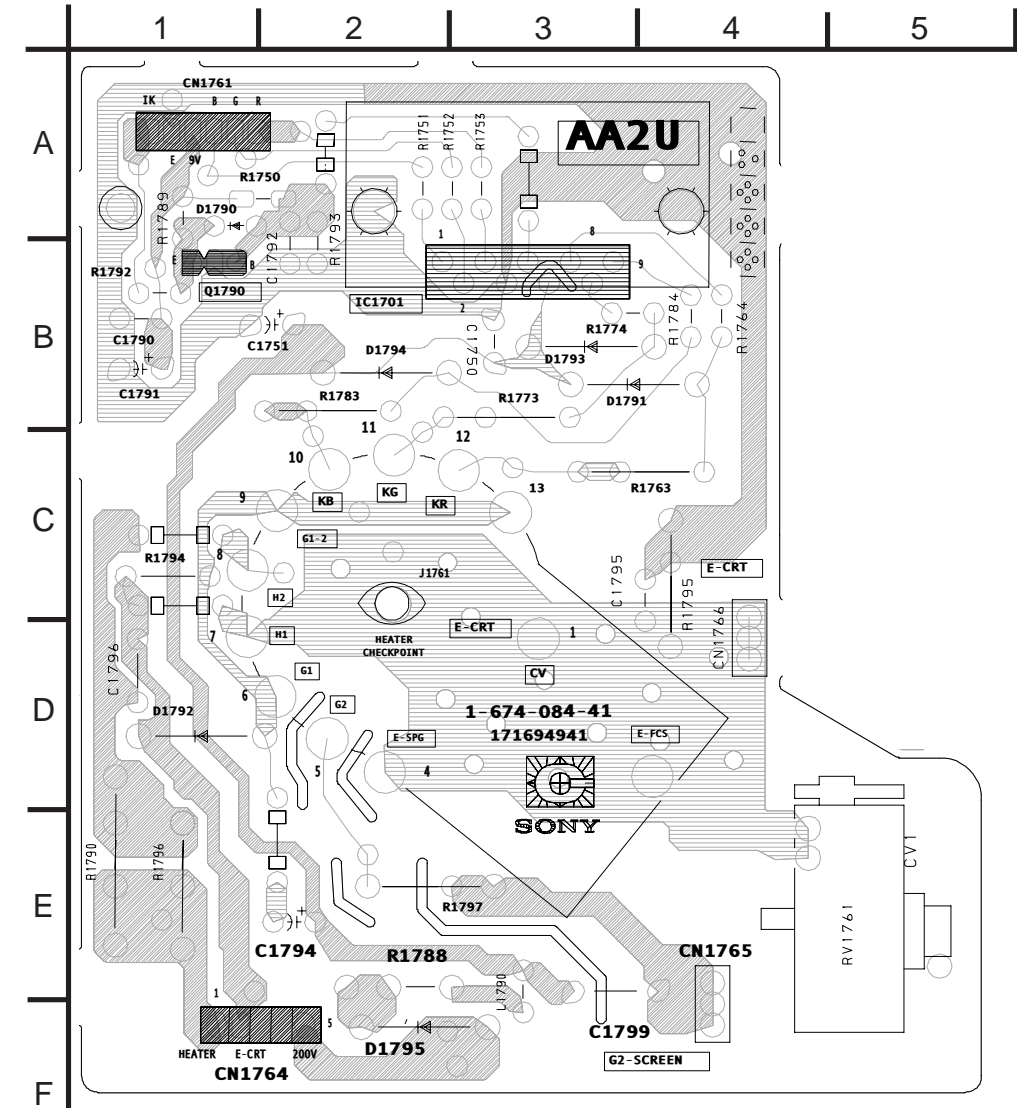

HB Board Schematic Diagram

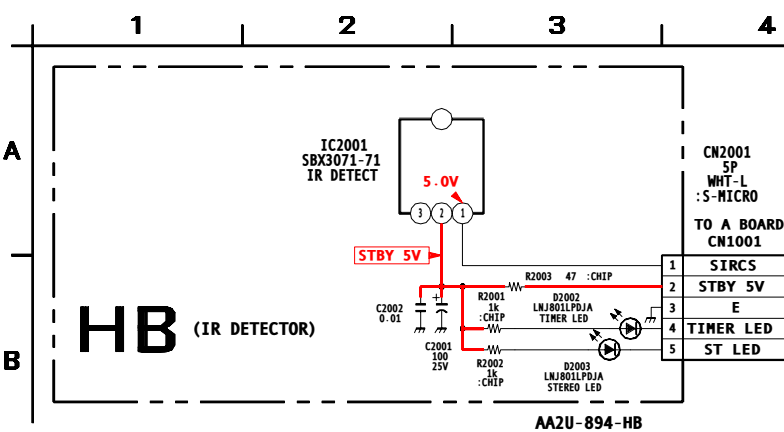


HB [IR DETECTOR]

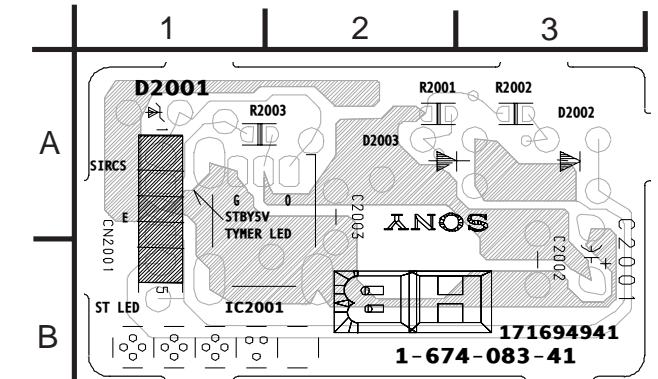


5-4. SEMICONDUCTORS

D1NL20U-TA2
D1NS6-TA2
EL1Z
ERA22-08-TP3
ERB44-06TP1
ERC06-15S
ERD29-08J
EZ0150AV1

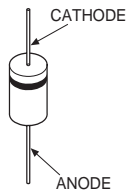


D1NS4-TA2
MTZJ-XXA
MTZJ-XXB
MTZJ-XXC
ERA38-06TP1
ERA82-004TP5
D1N2OR-TA
MTZJ-T77-7.5X
MTZJ-T-7715B
MTZJ-T-77-39

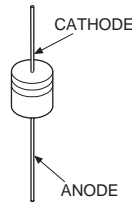


(XX = VALUE)


2SC4159-E




D10SC4M




2SB734-T-34
2SC3209LK-TP
2SB734T-4




2SK2845-LB102




2SA1309A-QRSTA
2SC3311A-QRSTA
2SD2144S-TP-V
2SD1858-QTV2




MA111-TX
RD3.3SB-T1

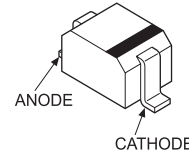


IRF614




2SB709A-QRS-TX
2SD601A-QRS-TX
DTC114EKA-T146




D4SB60L-F
D1NL40TA2

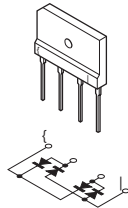



MTZJ-T-77-5.1C
MTZJ-T-7755.6C
MTZJ-T-77-10B
EROC04-06S

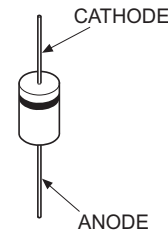


2SK2663




2SC3840K
2SA1407-E

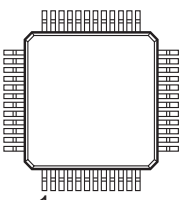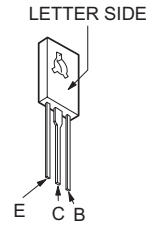

TOP VIEW
40 pin
CXA2019Q

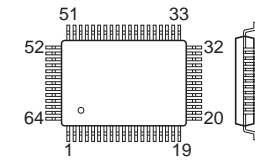


TOP VIEW
CXA1845Q - 64 pin
LC27016 - 80 pin
SAB9076AH
 μ PD6488GF-33A
 μ PD64081BGF-3BA - 100 pin

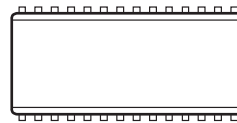


TOP VIEW
32 pin DIP

BH3868FS-E2
V53C16258SHK - 40 pin DIP

DAN202K-T-146

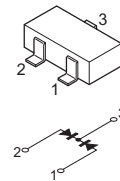

8 pin SOP
NJM2903D
NJM2903M
NJM2904D
ST24C02FM6TR
 μ PC4558G2
X24C04SB

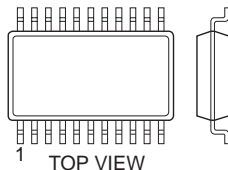


20 pin SOP
NJM2150M

16 pin SOP
BU4053BCF-T2
CXA1315M
MC14052BF
MC14538B
NJM2145M-TE2
CXD2064Q-T6

24 pin SOP
CXA2039M-T6
28 pin SOP
MN47V76ST1
MN47V77ST1
36 pin SOP
 μ PC1862GS-E2

DM-58

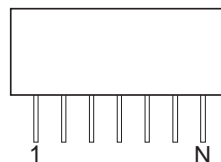

MARKING SIDE VIEW

Epin 1 ' N
EMt (one side, both sides)



TOP VIEW

14 pin DIP
NJM2902M

40 pin DIP
SDA9288XE

16 pin DIP
MM1093N

42 pin DIP
MM1311AD

20 pin DIP
TA1226N

22 pin DIP
CXA2021S

48 pin DIP
CXA2131S

28 pin DIP
TDA7467

64 pin DIP
CXP85856A-029S

30 pin DIP
CXD2073S

**SECTION 6
EXPLODED VIEW**


- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The component parts of an assembly are indicated by the reference numbers in the remarks column.
- Items marked * are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

Note: The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un trame et une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

6-1. CHASSIS

- 7-685-648-79 SCREW +BVTP 3X12
- 7-685-663-79 SCREW +BVTP 4X16

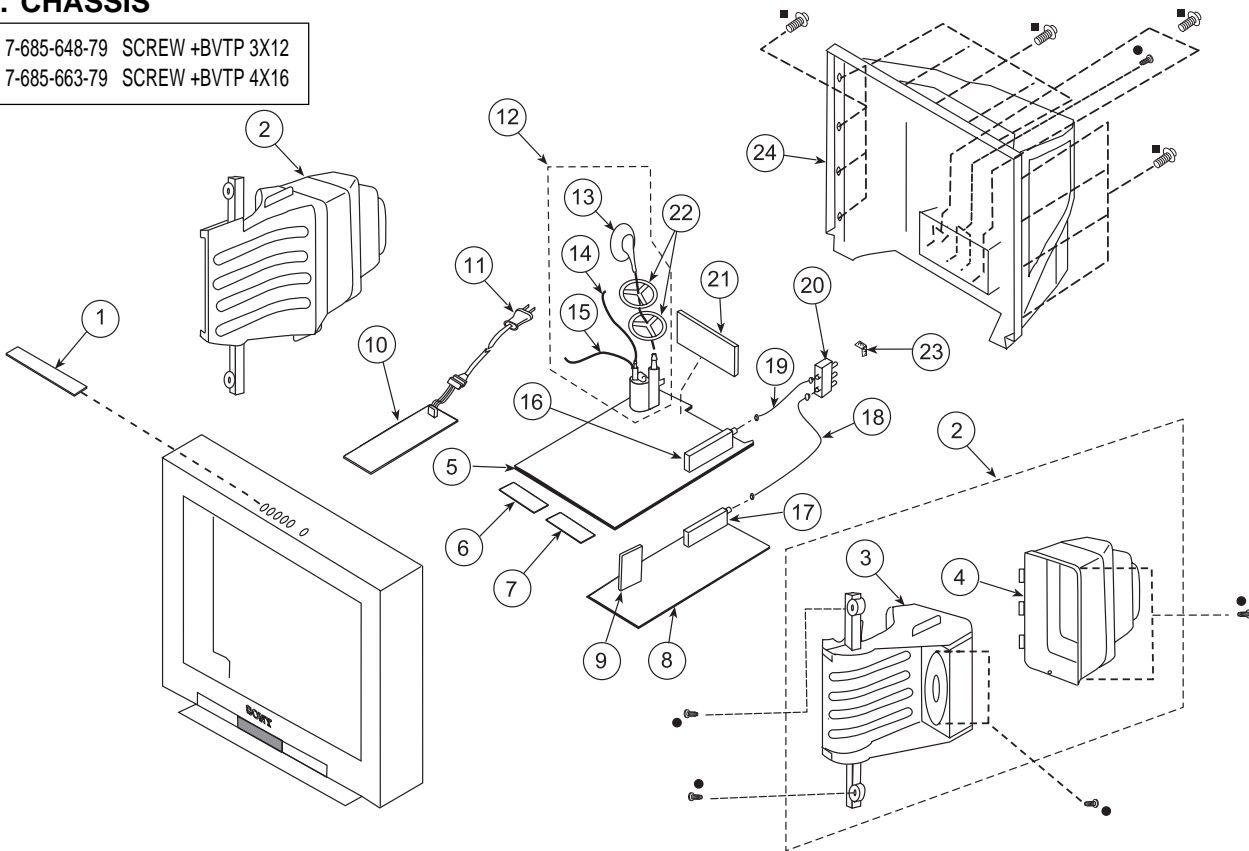

REF.NO.	PART.NO.	DESCRIPTION	REMARK
1	* A-1372-636-A	HX MOUNTED PC BOARD	
2	* 1-529-358-11	SPEAKER, BOX (5,10CM)	3-4
		(ALL EXCEPT KV-32FV16)	
2	1-529-336-11	BOX, 1 WAY SPEAKER (10CM)	3-4
		(KV-32FV16 ONLY)	
3	4-068-988-01	BAFFLE, SPEAKER	
4	* 4-068-987-01	COVER, SPEAKER	
5	* A-1299-304-A	A COMPLETE PC BOARD	
		The high-voltage leads associated with the FBT on this board are not included and must be ordered separately. See (13-15)	
6	* A-1372-634-A	HA MOUNTED PC BOARD	
7	* A-1372-635-A	HB MOUNTED PC BOARD	
8	* A-1299-281-A	AK COMPLETE PC BOARD	
		(KV-32FV16/34FV16/34FV16C ONLY)	
8	* A-1299-282-A	AK COMPLETE PC BOARD	
		(KV-32FV26/34FX260/34FX260C ONLY)	
9	* A-1394-934-A	T COMPLETE PC BOARD	
		(KV-32FV26/34FX260/34FX260C ONLY)	
10	* A-1316-397-A	G COMPLETE PC BOARD	
		(KV-32FV16/32FV26 ONLY)	
10	* A-1316-470-A	GA COMPLETE PC BOARD	
		(KV34FV16/34FV16C/34FX260/34FX260C ONLY)	

REF.NO.	PART.NO.	DESCRIPTION	REMARK
11	⚠ 1-790-316-11	CORD, AC POWER(WITH CONNECTOR)	
		(KV-32FV16/32FV26 ONLY)	
11	⚠ 1-791-936-11	CORD, AC POWER(WITH CONNECTOR)	
		(KV-34FV16/34FX260 ONLY)	
11	⚠ 1-769-796-71	CORD, POWER (WITH CONNECTOR)	
		(KV-34FV16/34FX260C ONLY)	
12	⚠ 1-453-338-21	FBT ASSY NX-4600	13-15
13	1-251-715-22	HV CAP ASSY	
14	1-900-805-19	FOCUS LEAD	
15	1-900-805-22	G2 LEAD	
16	⚠ 8-598-542-20	TUNER, FSS BTF-WA412	
17	⚠ 8-598-501-30	TUNER, FSS BTF-FA402	
18	* 1-556-945-21	CABLE, P-P	
19	* 1-557-056-31	CABLE, P-P	
20	8-598-414-10	CHANGER, ANTENNA AS-2F	
21	* A-1395-003-A	UX COMPLETE PC BOARD	
		(KV-32FV16/34FV16/34FV16C ONLY)	
21	A-1395-004-A	UX COMPLETE PC BOARD	
		(KV-32FV26/34FX260/34FX260C ONLY)	
22	3-704-372-71	HOLDER, HV CABLE	
23	* 3-696-606-02	HINGE, VI	
24	4-069-000-23	COVER, REAR	

Note:


The components identified by shading and mark ▲ are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque ▲ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

6-2. PICTURE TUBE

▲ 4-046-765-12 SCREW (7) TAPPING

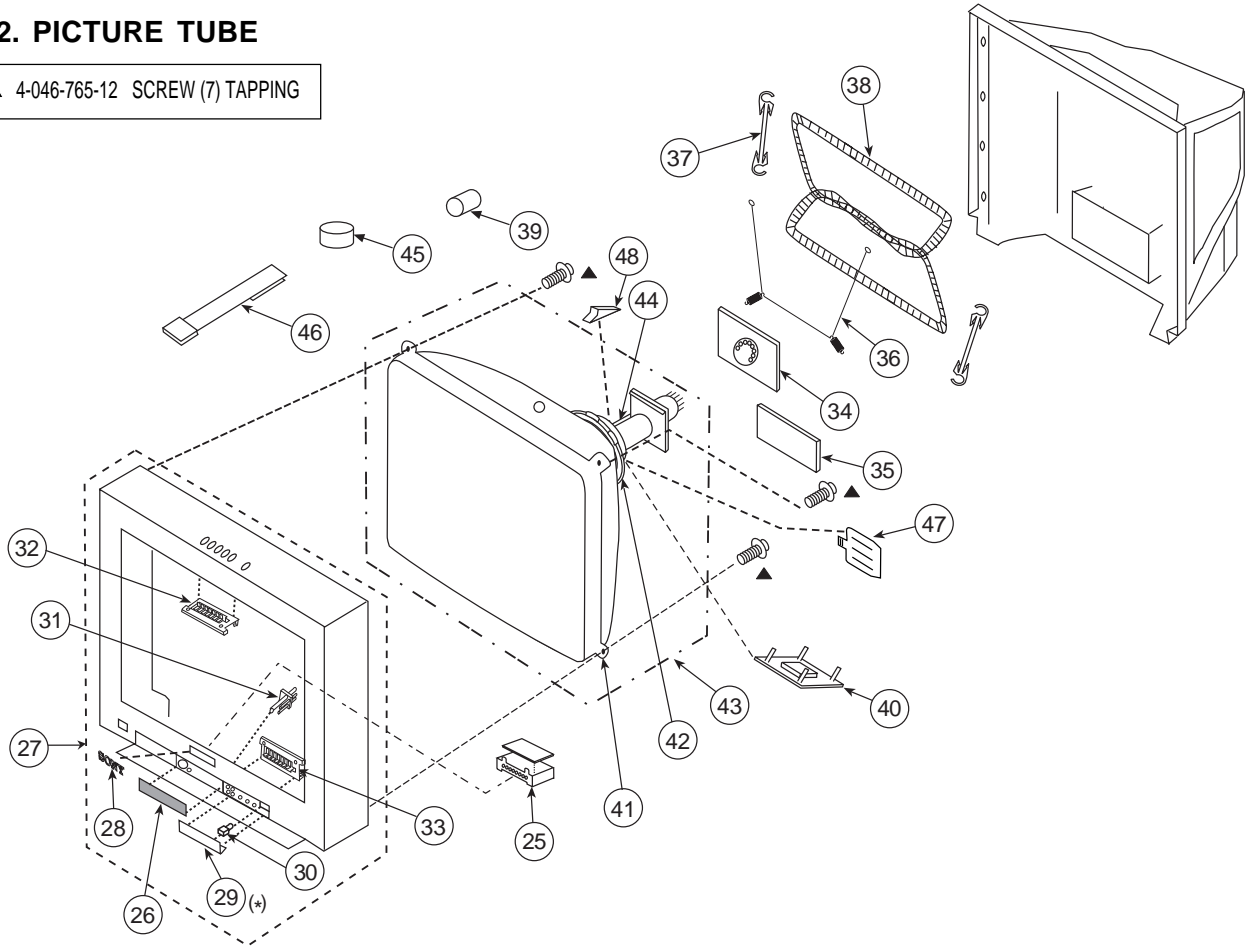

REF.NO.	PART.NO.	DESCRIPTION	REMARK	REF.NO.	PART.NO.	DESCRIPTION	REMARK
25	* 4-068-992-01	CASE, IR SHIELD (KV32FV26/34FX260/34FX260C)		38	▲ 1-416-827-21	COIL, DEGAUSSING (KV-32FV16/32FV26 ONLY)	
26	4-068-991-01	PANEL, IR (KV-32FV26/34FX260/34FX260C ONLY)		38	▲ 1-419-163-11	COIL, DEGAUSSING (KV-34FV16/34FV16C/34FX260/34FX260C)	
27	X-4037-907-1	BEZNET ASSY (KV-32FV16 ONLY)	28-30	39	1-500-497-11	FILTER, CLAMP (FERRITE CORE) (KV-34FV16C/34FX260C)	
27	X-4037-907-2	BEZNET ASSY (KV-34FV16/34FV16C ONLY)	28-30	40	1-452-896-11	COIL, NA ROTATION (RT200)	
27	X-4037-908-1	BEZNET ASSY (KV-32FV26/34FX260/34FX260C ONLY)	28-30	41	▲ 8-735-050-05	CRT 34RSN(FOR EQUATORIAL AREA) (KV-34FV16C/34FX260C ONLY)	
28	3-704-179-31	EMBLEM (NO.9), SONY		41	▲ 8-735-066-05	CRT 34RSN(SDP) (KV-32FV16/32FV26/34FV16/34FX260 ONLY)	
29	3-704-179-31	DOOR (Comes with Beznet Assembly)		42	▲ 8-451-499-21	DY Y34RSA-X (ALL EXCEPT KV-32FV16)	
29	* X-4037-631-1	DOOR ASSY *This part must be ordered when it is necessary to replace the DOOR ONLY.		43	▲ 8-735-047-61	ITC 34RSN-A1 (KV-32FV16 ONLY)	
30	3-703-574-00	RETAINER, DOOR		44	▲ 8-453-007-41	NA324-M4	
31	4-068-986-01	GUIDE, LED		45	1-452-032-00	MAGNET,DISC	
32	4-068-982-02	MULTI-BUTTON (TOP)		46	4-062-047-02	PIECE A(110), CONV CORRECT	
33	4-068-984-01	MULTI-BUTTON (BOTTOM)		47	2-163-920-01	PLATE, TLH CORRECTION	
34	* A-1331-942-A	C (VAR) MOUNTED PC BOARD		48	4-053-005-01	SPACER, DY	
35	* A-1375-187-A	WA COMPLETE PC BOARD					
36	4-036-329-01	SPRING (B), TENSION					
37	4-065-895-04	HOLDER, DGC					

Note:

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

A

REF.NO.	PARTNO.	DESCRIPTION	REMARK	REF.NO.	PARTNO.	DESCRIPTION	REMARK				
C375	1-163-038-11	CERAMIC CHIP	0.1 μ F	25V	C548	1-164-004-11	CERAMIC CHIP	0.1 μ F	10%	25V	
C382	1-163-038-11	CERAMIC CHIP	0.1 μ F	25V	C549	1-106-375-12	MYLAR	0.022 μ F	20%	200V	
C384	1-163-038-11	CERAMIC CHIP	0.1 μ F	25V	C550	1-102-002-00	CERAMIC	680PF	10%	500V	
C393	1-163-038-11	CERAMIC CHIP	0.1 μ F	25V	C551	1-109-954-11	ELECT	0.47 μ F	20%	160V	
C394	1-163-038-11	CERAMIC CHIP	0.1 μ F	25V	C552	1-102-244-00	CERAMIC	220PF	10%	500V	
C395	1-104-664-11	ELECT	47 μ F	20%	25V	C553	1-117-666-11	FILM	0.39 μ F	5%	250V
C396	1-163-021-91	CERAMIC CHIP	0.01 μ F	10%	50V	C554	\triangle 1-104-491-11	FILM	0.0047 μ F	3%	2KV
C397	1-104-664-11	ELECT	47 μ F	20%	25V	C561	1-126-967-11	ELECT	47 μ F	20%	50V
C398	1-126-961-11	ELECT	2.2 μ F	20%	50V	C563	1-104-666-11	ELECT	220 μ F	20%	25V
C501	1-102-110-00	CERAMIC	220PF	10%	50V	C564	1-126-960-11	ELECT	1 μ F	20%	50V
C502	1-126-959-11	ELECT	0.47 μ F	20%	50V	C565	1-126-969-11	ELECT	220 μ F	20%	50V
C503	1-163-133-00	CERAMIC CHIP	470PF	5%	50V	C568	1-136-169-00	FILM	0.22 μ F	5%	50V
C504	1-102-228-00	CERAMIC	470PF	10%	500V	C571	1-126-942-61	ELECT	1000 μ F	20%	25V
C505	1-102-228-00	CERAMIC	470PF	10%	500V	C572	1-126-942-61	ELECT	1000 μ F	20%	25V
C506	1-106-383-00	MYLAR	0.047 μ F	10%	200V	C599	1-126-935-11	ELECT	470 μ F	20%	16V
C507	\triangle 1-162-116-00	CERAMIC	680PF	10%	2KV	C1002	1-126-964-11	ELECT	10 μ F	20%	50V
C508	1-102-228-00	CERAMIC	470PF	10%	500V	C1003	1-126-961-11	ELECT	2.2 μ F	20%	50V
C509	1-162-116-00	CERAMIC	680PF	10%	2KV	C1004	1-126-960-11	ELECT	1 μ F	20%	50V
C510	1-137-150-11	MYLAR	0.01 μ F	10%	100V	C1101	1-126-943-11	ELECT	2200 μ F	20%	25V
C511	\triangle 1-137-347-11	FILM	0.022 μ F	3%	2KV	C1103	1-126-965-11	ELECT	22 μ F	20%	50V
C512	1-129-928-00	FILM	0.0027 μ F	10%	630V	C1104	1-104-664-11	ELECT	47 μ F	20%	25V
C513	\triangle 1-130-118-91	FILM	0.051 μ F	5%	400V	C1105	1-104-664-11	ELECT	47 μ F	20%	25V
C514	\triangle 1-115-521-11	FILM	0.82 μ F	5%	250V	C1106	1-126-964-11	ELECT	10 μ F	20%	50V
C515	1-104-987-11	MYLAR	0.001 μ F	10%	100V	C1107	1-163-037-11	CERAMIC CHIP	0.022 μ F	10%	50V
C516	\triangle 1-115-521-11	FILM	0.82 μ F	5%	250V	C1108	1-128-551-11	ELECT	22 μ F	20%	25V
C517	1-107-649-11	ELECT	2.2 μ F	20%	250V	C1109	1-126-964-11	ELECT	10 μ F	20%	50V
C518	1-106-387-00	MYLAR	0.068 μ F	10%	200V	C1117	1-126-960-11	ELECT	1 μ F	20%	50V
C519	1-107-612-11	CERAMIC	100PF	5%	500V	C1118	1-126-960-11	ELECT	1 μ F	20%	50V
C520	1-164-646-11	CERAMIC	2200PF	10%	500V	C1351	1-163-237-11	CERAMIC CHIP	27PF	5%	50V
C521	1-163-010-11	CERAMIC CHIP	0.0012 μ F	10%	50V	C1355	1-163-009-11	CERAMIC CHIP	0.001 μ F	10%	50V
C522	1-126-960-11	ELECT	1 μ F	20%	50V	C1356	1-126-964-11	ELECT	10 μ F	20%	50V
C525	1-102-244-00	CERAMIC	220PF	10%	500V	C1357	1-164-005-11	CERAMIC CHIP	0.47 μ F	10%	16V
C526	1-107-662-11	ELECT	22 μ F	20%	250V	C1358	1-126-940-11	ELECT	330 μ F	20%	25V
C527	1-162-116-00	CERAMIC	680PF	10%	2KV	C1359	1-163-038-11	CERAMIC CHIP	0.1 μ F	20%	25V
C528	1-164-161-11	CERAMIC CHIP	0.0022 μ F	10%	50V	C1360	1-163-031-11	CERAMIC CHIP	0.01 μ F	10%	50V
C529	1-128-551-11	ELECT	22 μ F	20%	25V	C1361	1-163-241-11	CERAMIC CHIP	39PF	5%	50V
C530	1-137-366-11	MYLAR	0.0022 μ F	5%	50V	C1362	1-163-017-00	CERAMIC CHIP	0.0047 μ F	10%	50V
C531	1-126-965-11	ELECT	22 μ F	20%	50V	C1363	1-163-031-11	CERAMIC CHIP	0.01 μ F	10%	50V
C532	1-126-965-11	ELECT	22 μ F	20%	50V	C1367	1-163-038-11	CERAMIC CHIP	0.1 μ F	20%	25V
C534	1-126-967-11	ELECT	47 μ F	20%	50V	C1369	1-163-038-11	CERAMIC CHIP	0.1 μ F	20%	25V
C537	1-126-941-11	ELECT	470 μ F	20%	25V	C1370	1-126-964-11	ELECT	10 μ F	20%	50V
C539	1-126-941-11	ELECT	470 μ F	20%	25V	C1371	1-163-017-00	CERAMIC CHIP	0.0047 μ F	10%	50V
C540	1-107-995-11	ELECT	100 μ F	10%	160V	C1372	1-163-017-00	CERAMIC CHIP	0.0047 μ F	10%	50V
C541	1-128-560-11	ELECT	22 μ F	20%	100V	C1373	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C543	1-104-666-11	ELECT	220 μ F	20%	25V	C1501	\triangle 1-107-846-11	FILM	0.1 μ F	5%	250V
C544	1-129-718-00	FILM	0.022 μ F	5%	630V						
C545	1-106-387-00	MYLAR	0.068 μ F	10%	200V						
C546	1-104-987-11	MYLAR	0.001 μ F	10%	100V						
C547	1-104-987-11	MYLAR	0.001 μ F	10%	100V						

**Note:**

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
CONNECTOR							
CN270 *	1-774-105-11	CONNECTOR, BOARD TO BOARD 15P		D520	8-719-991-33	DIODE 1SS133T-77	
CN271 *	1-774-105-11	CONNECTOR, BOARD TO BOARD 15P		D521	8-719-921-63	DIODE MTZJ-T-77-7.5X	
CN272 *	1-774-105-11	CONNECTOR, BOARD TO BOARD 15P		D522	8-719-991-33	DIODE 1SS133T-77	
CN302 *	1-508-784-00	PIN, CONNECTOR (5MM PITCH) 1P		D523	8-719-109-69	DIODE MTZJ-T-77-3.6B	
CN351 *	1-564-509-11	PLUG, CONNECTOR 6P		D524	8-719-109-97	DIODE MTZJ-T-77-6.8B	
CN501 *	1-580-798-11	CONNECTOR PIN (DY) 6P		D530 \triangle	8-719-081-01	DIODE ER204	
CN503 *	1-564-508-11	PLUG, CONNECTOR 5P		D531	8-719-081-01	DIODE ER204	
CN1001*	1-564-508-11	PLUG, CONNECTOR 5P		D534	8-719-075-41	DIODE PR1004GT	
CN1002*	1-564-506-11	PLUG, CONNECTOR 3P		D535	8-719-073-01	DIODE MA111-TX	
CN1102*	1-564-507-11	PLUG, CONNECTOR 4P		D536	1-216-295-11	SHORT	
CN1231*	1-564-512-11	PLUG, CONNECTOR 9P		D561	8-719-075-33	DIODE 1N4003GA	
CN1643	1-695-915-11	TAB (CONTACT)		D1003	8-719-110-17	DIODE MTZJ-T-77-10B	
CN1941*	1-564-511-11	PLUG, CONNECTOR 8P		D1004	8-719-110-17	DIODE MTZJ-T-77-10B	
CN1942*	1-564-508-11	PLUG, CONNECTOR 5P		D1101	8-719-110-17	DIODE MTZJ-T-77-10B	
DIODE							
D001	8-719-991-33	DIODE 1SS133T-77		D1102	8-719-982-24	DIODE MTZJ-T-77-33A	
D002	8-719-109-89	DIODE MTZJ-T-77-5.6C		D1103	8-719-109-89	DIODE MTZJ-T-77-5.6C	
D003	8-719-991-33	DIODE 1SS133T-77		D1104	8-719-110-17	DIODE MTZJ-T-77-10B	
D006	8-719-081-27	DIODE P6KE6.8A		D1301	8-719-073-01	DIODE MA111-TX	
D012	8-719-991-33	DIODE 1SS133T-77		D1302	8-719-991-33	DIODE 1SS133T-77	
D013	8-719-991-33	DIODE 1SS133T-77		D1303	8-719-073-01	DIODE MA111-TX	
D016	8-719-991-33	DIODE 1SS133T-77		D1304	8-719-073-01	DIODE MA111-TX	
D018	8-719-073-01	DIODE MA111-TX		D1305	8-719-073-01	DIODE MA111-TX	
D019	8-719-073-01	DIODE MA111-TX		D1306	8-719-073-01	DIODE MA111-TX	
D301	8-719-073-01	DIODE MA111-TX		FERRITE BEAD			
D302	8-719-991-33	DIODE 1SS133T-77		FB501	1-410-397-21	FERRITE	1.1 μ H
D303	8-719-921-44	DIODE MTZJ-T-77-5.1C		FB502	1-410-397-21	FERRITE	1.1 μ H
D368	8-719-991-33	DIODE 1SS133T-77		FB503	1-410-397-21	FERRITE	1.1 μ H
D384	8-719-921-80	DIODE MTZJ-T-77-11B		IC			
D388	8-719-921-80	DIODE MTZJ-T-77-11B		IC001	8-759-667-71	IC M306V5ME-XXXSP	
D501	8-719-109-89	DIODE MTZJ-T-77-5.6C		IC002	8-759-562-42	IC CAT24WC08J-TE13	
D502	8-719-945-80	DIODE ERC06-15S		IC003	8-759-352-91	IC PST9143NL	
D503 \triangle	8-719-945-80	DIODE ERC06-15S		IC351	8-759-710-86	IC NJM2233BM(Te2)	
D504	8-719-900-26	DIODE ERD29-08J		IC352	8-752-080-75	IC CXA2039M-T6	
D505	8-719-075-33	DIODE 1N4003GA		IC353	8-759-462-91	IC TA1226N	
D506	8-719-075-33	DIODE 1N4003GA		IC354	8-752-082-49	IC CXA2119M-T6	
D507	8-719-991-33	DIODE 1SS133T-77		IC355 \triangle	8-752-098-79	IC CXA2131CS	
D510	8-719-300-33	DIODE ERB44-06TP1		IC501	8-759-700-07	IC NJM2903M-TE2	
D511	8-719-970-87	DIODE ERA38-06TP1		IC561 \triangle	8-759-192-71	IC STV9379	
D512	8-719-970-87	DIODE ERA38-06TP1		IC1001	8-752-058-68	IC CXA1315M-T4	
D513	8-719-110-41	DIODE MTZJ-T-77-15B		CHIP CONDUCTOR			
D515 \triangle	8-719-075-41	DIODE PR1004GT		JR001	1-216-295-11	SHORT	
D516	8-719-991-33	DIODE 1SS133T-77		JR002	1-216-295-11	SHORT	
D518	8-719-991-33	DIODE 1SS133T-77		JR003	1-216-295-11	SHORT	
D519 \triangle	8-719-302-43	DIODE EL1Z-V1		JR004	1-216-049-11	RES-CHIP	1K 5% 1/10W

A

Note:

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK			REF.NO.	PART NO.	DESCRIPTION	REMARK		
R020	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	R076	1-216-033-00	RES-CHIP	220	5%	1/10W
R021	1-216-073-00	RES-CHIP	10K	5%	1/10W	R078	1-249-417-11	CARBON	1K	5%	1/4W
R022	1-249-429-11	CARBON	10K	5%	1/4W	R079	1-216-033-00	RES-CHIP	220	5%	1/10W
R023	1-249-437-11	CARBON	47K	5%	1/4W	R081	1-247-807-31	CARBON	100	5%	1/4W
R024	1-249-417-11	CARBON	1K	5%	1/4W	R082	1-247-807-31	CARBON	100	5%	1/4W
R025	1-216-041-00	RES-CHIP	470	5%	1/10W	R083	1-249-429-11	CARBON	10K	5%	1/4W
R026	1-216-121-11	RES-CHIP	1M	5%	1/10W	R085	1-249-425-11	CARBON	4.7K	5%	1/4W
R027	1-249-417-11	CARBON	1K	5%	1/4W	R086	1-216-073-00	RES-CHIP	10K	5%	1/10W
R028	1-249-429-11	CARBON	10K	5%	1/4W	R089	1-216-073-00	RES-CHIP	10K	5%	1/10W
R029	1-216-025-11	RES-CHIP	100	5%	1/10W	R090	1-249-409-11	CARBON	220	5%	1/4W
R030	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	R096	1-216-033-00	RES-CHIP	220	5%	1/10W
R031	1-216-033-00	RES-CHIP	220	5%	1/10W	R097	1-249-425-11	CARBON	4.7K	5%	1/4W
R032	1-249-409-11	CARBON	220	5%	1/4W	R099	1-249-425-11	CARBON	4.7K	5%	1/4W
R033	1-249-425-11	CARBON	4.7K	5%	1/4W	R106	1-216-081-00	RES-CHIP	22K	5%	1/10W
R034	1-216-295-11	SHORT				R107	1-216-081-00	RES-CHIP	22K	5%	1/10W
R035	1-216-041-00	RES-CHIP	470	5%	1/10W	R108	1-216-081-00	RES-CHIP	22K	5%	1/10W
R036	1-249-417-11	CARBON	1K	5%	1/4W	R109	1-216-081-00	RES-CHIP	22K	5%	1/10W
R037	1-249-417-11	CARBON	1K	5%	1/4W	R302	1-208-291-11	RES-CHIP	4.7M	5%	1/10W
R038	1-249-417-11	CARBON	1K	5%	1/4W	R304	1-216-033-00	RES-CHIP	220	5%	1/10W
R040	1-249-409-11	CARBON	220	5%	1/4W	R305	1-249-409-11	CARBON	220	5%	1/4W
R041	1-216-295-11	SHORT				R306	1-249-409-11	CARBON	220	5%	1/4W
R043	1-249-409-11	CARBON	220	5%	1/4W	R307	1-216-295-11	SHORT			
R044	1-249-417-11	CARBON	1K	5%	1/4W	R309	1-216-295-11	SHORT			
R045	1-216-033-00	RES-CHIP	220	5%	1/10W	R311	1-216-073-00	RES-CHIP	10K	5%	1/10W
R046	1-216-033-00	RES-CHIP	220	5%	1/10W	R313	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R047	1-216-049-11	RES-CHIP	1K	5%	1/10W	R314	1-216-073-00	RES-CHIP	10K	5%	1/10W
R048	1-249-417-11	CARBON	1K	5%	1/4W	R315	1-216-073-00	RES-CHIP	10K	5%	1/10W
R049	1-249-417-11	CARBON	1K	5%	1/4W	R316	1-216-073-00	RES-CHIP	10K	5%	1/10W
R052	1-216-049-11	RES-CHIP	1K	5%	1/10W	R319	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R053	1-216-025-11	RES-CHIP	100	5%	1/10W	R320	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R055	1-216-097-11	RES-CHIP	100K	5%	1/10W	R321	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R056	1-249-409-11	CARBON	220	5%	1/4W	R325	1-216-033-00	RES-CHIP	220	5%	1/10W
R057	1-216-049-11	RES-CHIP	1K	5%	1/10W	R326	1-216-085-00	RES-CHIP	33K	5%	1/10W
R060	1-216-073-00	RES-CHIP	10K	5%	1/10W	R327	1-216-033-00	RES-CHIP	220	5%	1/10W
R061	1-216-073-00	RES-CHIP	10K	5%	1/10W	R330	1-208-806-11	METAL CHIP	10K	0.50%	1/10W
R062	1-216-073-00	RES-CHIP	10K	5%	1/10W	R331	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R063	1-216-073-00	RES-CHIP	10K	5%	1/10W	R332	1-216-033-00	RES-CHIP	220	5%	1/10W
R064	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R334	1-216-033-00	RES-CHIP	220	5%	1/10W
R065	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R335	1-216-033-00	RES-CHIP	220	5%	1/10W
R066	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R336	1-216-049-11	RES-CHIP	1K	5%	1/10W
R067	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R337	1-216-347-11	METAL OXIDE	0.68	5%	1W
R068	1-249-429-11	CARBON	10K	5%	1/4W	R340	1-216-105-91	RES-CHIP	220K	5%	1/10W
R069	1-249-429-11	CARBON	10K	5%	1/4W	R341	1-216-073-00	RES-CHIP	10K	5%	1/10W
R070	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R342	1-216-097-11	RES-CHIP	100K	5%	1/10W
R071	1-249-409-11	CARBON	220	5%	1/4W	R343	1-216-093-91	RES-CHIP	68K	5%	1/10W
R072	1-216-033-00	RES-CHIP	220	5%	1/10W	R344	1-216-073-00	RES-CHIP	10K	5%	1/10W
R073	1-249-409-11	CARBON	220	5%	1/4W	R346	1-216-023-00	RES-CHIP	82	5%	1/10W
R074	1-216-033-00	RES-CHIP	220	5%	1/10W	R347	1-216-041-00	RES-CHIP	470	5%	1/10W
R075	1-249-409-11	CARBON	220	5%	1/4W	R348	1-216-033-00	RES-CHIP	220	5%	1/10W

Note:

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Note:

The components identified by \boxtimes in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding x-ray radiation. Should replacement be required, replace only with the value originally used.

A

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R349	1-216-041-00	RES-CHIP	470 5% 1/10W	R528	1-208-814-91	METAL CHIP	22K 0.50% 1/10W
R350	1-247-807-31	CARBON	100 5% 1/4W	R529	1-208-814-91	METAL CHIP	22K 0.50% 1/10W
R352	1-216-073-00	RES-CHIP	10K 5% 1/10W	\boxtimes R530 \triangle	1-208-808-11	METAL CHIP	12K 0.50% 1/10W
R353	1-216-295-11	SHORT		\boxtimes R531 \triangle	1-216-091-00	RES-CHIP	56K 5% 1/10W
R354	1-216-073-00	RES-CHIP	10K 5% 1/10W	R532	1-208-760-11	METAL CHIP	120 0.50% 1/10W
R355	1-216-069-00	RES-CHIP	6.8K 5% 1/10W	R533	1-215-902-11	METAL OXIDE	47K 5% 1W
R356	1-216-025-11	RES-CHIP	100 5% 1/10W	R536 \triangle	1-260-288-11	CARBON	0.47 5% 1/2W
R358	1-216-295-11	SHORT		R537 \triangle	1-260-288-11	CARBON	0.47 5% 1/2W
R359	1-216-073-00	RES-CHIP	10K 5% 1/10W	R538	1-247-887-00	CARBON	220K 5% 1/4W
R360	1-249-409-11	CARBON	220 5% 1/4W	R539	1-215-891-11	METAL OXIDE	680 5% 2W
R361	1-216-049-11	RES-CHIP	1K 5% 1/10W	R540	1-208-826-11	METAL CHIP	68K 0.50% 1/10W
R362	1-216-073-00	RES-CHIP	10K 5% 1/10W	R541	1-215-922-11	METAL OXIDE	6.8K 5% 3W
R370	1-216-049-11	RES-CHIP	1K 5% 1/10W	R542	1-215-921-11	METAL OXIDE	4.7K 5% 3W
R372	1-216-097-11	RES-CHIP	100K 5% 1/10W	R543 \triangle	1-249-377-11	CARBON	0.47 5% 1/4W
R373	1-216-121-11	RES-CHIP	1M 5% 1/10W	R544	1-216-113-00	RES-CHIP	470K 5% 1/10W
R374	1-216-041-00	RES-CHIP	470 5% 1/10W	R545 \triangle	1-249-387-11	CARBON	3.3 5% 1/4W
R375	1-216-049-11	RES-CHIP	1K 5% 1/10W	R546	1-215-453-00	METAL	22K 1% 1/4W
R376	1-216-025-11	RES-CHIP	100 5% 1/10W	R547	1-215-457-00	METAL	33K 1% 1/4W
R378	1-216-083-00	RES-CHIP	27K 5% 1/10W	R548	1-215-921-11	METAL OXIDE	4.7K 5% 3W
R383	1-216-025-11	RES-CHIP	100 5% 1/10W	R549	1-215-437-00	METAL	4.7K 1% 1/4W
R384	1-216-037-00	RES-CHIP	330 5% 1/10W	R550 \triangle	1-249-377-11	CARBON	0.47 5% 1/4W
R385	1-249-425-11	CARBON	4.7K 5% 1/4W	R551	1-215-873-00	METAL OXIDE	4.7K 5% 1W
R386	1-249-429-11	CARBON	10K 5% 1/4W	R552	1-216-455-21	METAL OXIDE	560 5% 2W
R387	1-216-037-00	RES-CHIP	330 5% 1/10W	R553 \triangle	1-260-288-11	CARBON	0.47 5% 1/2W
R398	1-216-095-00	RES-CHIP	82K 5% 1/10W	R554	1-215-894-11	METAL OXIDE	2.2K 5% 2W
R501	1-216-041-00	RES-CHIP	470 5% 1/10W	R555	1-249-441-11	CARBON	100K 5% 1/4W
R502	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R556	1-249-441-11	CARBON	100K 5% 1/4W
R503	1-249-425-11	CARBON	4.7K 5% 1/4W	R557	1-249-441-11	CARBON	100K 5% 1/4W
R504	1-216-455-21	METAL OXIDE	560 5% 2W	R559	1-216-017-91	RES-CHIP	47 5% 1/10W
R505	1-249-433-11	CARBON	22K 5% 1/4W	R560	1-215-922-11	METAL OXIDE	6.8K 5% 3W
R506	1-215-861-00	METAL OXIDE	47 5% 1W	R561	1-208-806-11	METAL CHIP	10K 0.50% 1/10W
R507	1-249-401-11	CARBON	47 5% 1/4W	R563	1-214-798-21	METAL	1.8 1% 1/2W
R508	1-249-425-11	CARBON	4.7K 5% 1/4W	R565	1-215-889-00	METAL OXIDE	330 5% 2W
R509	1-260-328-11	CARBON	1K 5% 1/2W	R566	1-208-802-11	METAL CHIP	6.8K 0.50% 1/10W
R510 \triangle	1-215-883-11	METAL OXIDE	33 5% 2W	R567 \triangle	1-249-385-11	CARBON	2.2 5% 1/4W
R512	1-215-910-00	METAL OXIDE	68 5% 3W	R568	1-208-802-11	METAL CHIP	6.8K 0.50% 1/10W
R514	1-216-081-00	RES-CHIP	22K 5% 1/10W	R569	1-208-806-11	METAL CHIP	10K 0.50% 1/10W
R515	1-208-812-11	METAL CHIP	18K 0.50% 1/10W	R570	1-216-097-11	RES-CHIP	100K 5% 1/10W
R516	1-208-790-11	METAL CHIP	2.2K 0.50% 1/10W	R571	1-216-081-00	RES-CHIP	22K 5% 1/10W
R517	1-249-417-11	CARBON	1K 5% 1/4W	R572	1-216-081-00	RES-CHIP	22K 5% 1/10W
R518	1-216-073-00	RES-CHIP	10K 5% 1/10W	R573	1-216-097-11	RES-CHIP	100K 5% 1/10W
R519	1-249-413-11	CARBON	470 5% 1/4W	R574	1-214-798-21	METAL	1.8 1% 1/2W
R520	1-215-907-11	METAL OXIDE	22 5% 3W	R576	1-215-905-11	METAL OXIDE	10 5% 3W
R521	1-216-081-00	RES-CHIP	22K 5% 1/10W	R577	1-216-049-11	RES-CHIP	1K 5% 1/10W
R523	1-208-808-11	METAL CHIP	12K 0.50% 1/10W	R578	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R524	1-249-429-11	CARBON	10K 5% 1/4W	R580	1-249-441-11	CARBON	100K 5% 1/4W
R525	1-208-804-11	METAL CHIP	8.2K 0.50% 1/10W	R581	1-247-887-00	CARBON	220K 5% 1/4W
R526	1-215-905-11	METAL OXIDE	10 5% 3W	R582	1-249-421-11	CARBON	2.2K 5% 1/4W
R527	1-216-097-11	RES-CHIP	100K 5% 1/10W	R1001	1-247-807-31	CARBON	100 5% 1/4W

Note:

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
<div style="border: 1px solid black; padding: 5px; display: inline-block;">AK</div>				C1412	1-163-037-11	CERAMIC CHIP	0.022 μ F 10% 50V
				C1413	1-163-009-11	CERAMIC CHIP	0.001 μ F 10% 50V
				C1414	1-163-009-11	CERAMIC CHIP	0.001 μ F 10% 50V
				C1415	1-126-959-11	ELECT	0.47 μ F 20% 50V
				C1416	1-126-963-11	ELECT	4.7 μ F 20% 50V
				C1417	1-126-959-11	ELECT	0.47 μ F 20% 50V
				C1420	1-163-037-11	CERAMIC CHIP	0.022 μ F 10% 50V
				C1421	1-126-963-11	ELECT	4.7 μ F 20% 50V
				C1422	1-164-004-11	CERAMIC CHIP	0.1 μ F 10% 25V
				C1426	1-126-941-11	ELECT	470 μ F 20% 25V
				C1428	1-126-963-11	ELECT	4.7 μ F 20% 50V
				C1429	1-126-963-11	ELECT	4.7 μ F 20% 50V
				C1450	1-126-963-11	ELECT	4.7 μ F 20% 50V
				C1451	1-126-963-11	ELECT	4.7 μ F 20% 50V
				C1452	1-163-986-00	CERAMIC CHIP	0.027 μ F 10% 25V
				C1461	1-126-960-11	ELECT	1 μ F 20% 50V
				C1462	1-126-960-11	ELECT	1 μ F 20% 50V
				C1464	1-163-038-11	CERAMIC CHIP	0.1 μ F 25V
				C1465	1-126-960-11	ELECT	1 μ F 20% 50V
				C1467	1-104-666-11	ELECT	220 μ F 20% 25V
				C1468	1-126-960-11	ELECT	1 μ F 20% 50V
				C1470	1-126-960-11	ELECT	1 μ F 20% 50V
				C1471	1-136-165-00	FILM	0.1 μ F 5% 50V
				C1472	1-137-194-81	FILM	0.47 μ F 5% 50V
				C1473	1-128-550-11	ELECT	2200 μ F 20% 50V
				C1474	1-136-165-00	FILM	0.1 μ F 5% 50V
				C1475	1-128-550-11	ELECT	2200 μ F 20% 50V
				C1476	1-128-550-11	ELECT	2200 μ F 20% 50V
				C1477	1-126-971-11	ELECT	470 μ F 20% 50V
				C1478	1-126-971-11	ELECT	470 μ F 20% 50V
				C1904	1-102-129-00	CERAMIC	0.01 μ F 10% 50V
				C1905	1-126-964-11	ELECT	10 μ F 20% 50V
				C1906	1-102-129-00	CERAMIC	0.01 μ F 10% 50V
				C1907	1-126-964-11	ELECT	10 μ F 20% 50V
				C1908	1-163-009-11	CERAMIC CHIP	0.001 μ F 10% 50V
				C1909	1-163-009-11	CERAMIC CHIP	0.001 μ F 10% 50V
				C1910	1-163-009-11	CERAMIC CHIP	0.001 μ F 10% 50V
				C1911	1-163-009-11	CERAMIC CHIP	0.001 μ F 10% 50V
				C1912	1-163-009-11	CERAMIC CHIP	0.001 μ F 10% 50V
				CONNECTOR			
				CN1462*	1-564-507-11	PLUG, CONNECTOR 4P	
				CN1463*	1-564-509-11	PLUG, CONNECTOR 6P	
				CN1464*	1-764-333-11	PLUG, CONNECTOR 10P	
				CN1465*	1-564-507-11	PLUG, CONNECTOR 4P (KV-32FV26/34FX260/34FX260C ONLY)	
				CN1466*	1-564-515-11	PLUG, CONNECTOR 12P	
				CN1467*	1-564-510-11	PLUG, CONNECTOR 7P	
				CN1468	1-695-915-11	TAB (CONTACT)	
* A-1299-281-A	AK COMPLETE PC BOARD (KV-32FV16/34FV16/34FV16C ONLY)						
* A-1299-282-A	AK COMPLETE PC BOARD (KV-32FV26/34FX260/34FX260C ONLY)						
4-382-854-11	SCREW (M3X10), P, SW (+)						
CAPACITOR							
C101	1-126-960-11	ELECT	1 μ F 20% 50V				
C102	1-164-161-11	CERAMIC CHIP	0.0022 μ F 10% 50V				
C104	1-126-964-11	ELECT	10 μ F 20% 50V				
C106	1-104-664-11	ELECT	47 μ F 20% 25V				
C108	1-126-942-61	ELECT	1000 μ F 20% 25V				
C109	1-163-259-91	CERAMIC CHIP	220PF 5% 50V				
C110	1-163-809-11	CERAMIC CHIP	0.047 μ F 10% 25V				
C111	1-126-960-11	ELECT	1 μ F 20% 50V				
C113	1-104-666-11	ELECT	220 μ F 20% 25V				
C115	1-126-960-11	ELECT	1 μ F 20% 50V				
C175	1-126-941-11	ELECT	470 μ F 20% 25V				
C440	1-126-965-11	ELECT	22 μ F 20% 50V				
C441	1-163-038-11	CERAMIC CHIP	0.1 μ F 25V				
C442	1-126-960-11	ELECT	1 μ F 20% 50V				
C443	1-163-038-11	CERAMIC CHIP	0.1 μ F 25V				
C444	1-164-346-11	CERAMIC CHIP	1 μ F 16V				
C445	1-163-038-11	CERAMIC CHIP	0.1 μ F 25V				
C446	1-164-346-11	CERAMIC CHIP	1 μ F 16V				
C447	1-107-823-11	CERAMIC CHIP	0.47 μ F 10% 16V				
C448	1-163-017-00	CERAMIC CHIP	0.0047 μ F 10% 50V				
C449	1-107-823-11	CERAMIC CHIP	0.47 μ F 10% 16V				
C453	1-163-017-00	CERAMIC CHIP	0.0047 μ F 10% 50V				
C454	1-163-133-00	CERAMIC CHIP	470PF 5% 50V				
C455	1-163-038-11	CERAMIC CHIP	0.1 μ F 25V				
C456	1-163-023-00	CERAMIC CHIP	0.015 μ F 10% 50V				
C457	1-164-161-11	CERAMIC CHIP	0.0022 μ F 10% 50V				
C1401	1-126-963-11	ELECT	4.7 μ F 20% 50V				
C1402	1-126-968-11	ELECT	100 μ F 20% 50V				
C1403	1-126-963-11	ELECT	4.7 μ F 20% 50V				
C1404	1-126-960-11	ELECT	1 μ F 20% 50V				
C1405	1-126-960-11	ELECT	1 μ F 20% 50V				
C1406	1-164-004-11	CERAMIC CHIP	0.1 μ F 10% 25V				
C1407	1-163-989-11	CERAMIC CHIP	0.033 μ F 10% 25V				
C1408	1-163-989-11	CERAMIC CHIP	0.033 μ F 10% 25V				
C1409	1-164-182-11	CERAMIC CHIP	0.0033 μ F 10% 50V				
C1410	1-163-017-00	CERAMIC CHIP	0.0047 μ F 10% 50V				
C1411	1-164-182-11	CERAMIC CHIP	0.0033 μ F 10% 50V				

**Note:**

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
DIODE				RESISTOR			
D101	8-719-109-89	DIODE MTZJ-T-77-5.6C		Q1902	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
D103	8-719-991-33	DIODE 1SS133T-77		Q1903	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
D104	8-719-991-33	DIODE 1SS133T-77		Q1918	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
D105	8-719-991-33	DIODE 1SS133T-77					
D106	8-719-991-33	DIODE 1SS133T-77		R101	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
D107	8-719-991-33	DIODE 1SS133T-77		R102	1-216-085-00	RES-CHIP	33K 5% 1/10W
D108	8-719-110-17	DIODE MTZJ-T-77-10B		R103	1-216-081-00	RES-CHIP	22K 5% 1/10W
D109	8-719-110-17	DIODE MTZJ-T-77-10B		R104	1-216-049-11	RES-CHIP	1K 5% 1/10W
D1461	8-719-991-33	DIODE 1SS133T-77		R112	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
D1463	8-719-991-33	DIODE 1SS133T-77		R113	1-216-097-11	RES-CHIP	100K 5% 1/10W
D1466	8-719-991-33	DIODE 1SS133T-77		R114	1-216-121-11	RES-CHIP	1M 5% 1/10W
D1467	8-719-924-13	DIODE MTZJ-T-77-22B		R115	1-216-073-00	RES-CHIP	10K 5% 1/10W
D1468	8-719-924-13	DIODE MTZJ-T-77-22B		R116	1-216-073-00	RES-CHIP	10K 5% 1/10W
D1469	8-719-991-33	DIODE 1SS133T-77		R117	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
IC				R118	1-208-774-11	METAL CHIP	470 0.50% 1/10W
IC1401	8-759-578-88	IC BH3868FS-E2		R119	1-208-776-11	METAL CHIP	560 0.50% 1/10W
IC1402	8-759-100-96	IC NJM4558M-TE2		R440	1-216-049-11	RES-CHIP	1K 5% 1/10W
IC1403	8-759-537-26	IC TDA7467D013TR		R441	1-216-100-00	RES-CHIP	130K 5% 1/10W
IC1461 \triangle	8-759-246-70	IC TA8216H		R442	1-216-088-00	RES-CHIP	43K 5% 1/10W
IC1901	8-752-058-68	IC CXA1315M-T4		R443	1-216-053-00	RES-CHIP	1.5K 5% 1/10W
IC1902	8-759-470-63	IC NJM2145M-TE2		R444	1-216-089-11	RES-CHIP	47K 5% 1/10W
CHIP CONDUCTOR				R445	1-216-085-00	RES-CHIP	33K 5% 1/10W
JR1901	1-216-295-11	SHORT		R446	1-216-063-91	RES-CHIP	3.9K 5% 1/10W
JR1902	1-216-295-11	SHORT		R450	1-216-073-00	RES-CHIP	10K 5% 1/10W
				(KV-32FV26/34FX260/34FX260C ONLY)			
				R1403	1-216-121-11	RES-CHIP	1M 5% 1/10W
				R1404	1-216-295-11	SHORT	
				R1408	1-216-295-11	SHORT	
				R1409	1-216-295-11	SHORT	
COIL				R1406	1-216-121-11	RES-CHIP	1M 5% 1/10W
L102	1-414-856-11	INDUCTOR	10 μ H	R1407	1-216-073-00	RES-CHIP	10K 5% 1/10W
L105	1-414-857-11	INDUCTOR	100 μ H	R1410	1-216-081-00	RES-CHIP	22K 5% 1/10W
L1401	1-414-857-11	INDUCTOR	100 μ H	R1411	1-216-073-00	RES-CHIP	10K 5% 1/10W
IC LINK				R1412	1-216-089-11	RES-CHIP	47K 5% 1/10W
PS1461 \triangle	1-532-984-11	LINK, IC 2A/90V		R1413	1-216-089-11	RES-CHIP	47K 5% 1/10W
TRANSISTOR				R1415	1-216-025-11	RES-CHIP	100 5% 1/10W
Q101	8-729-423-33	TRANSISTOR 2SC3311A-QRSTA		R1416	1-216-081-00	RES-CHIP	22K 5% 1/10W
Q105	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX		R1417	1-216-081-00	RES-CHIP	22K 5% 1/10W
Q106	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		R1418	1-216-089-11	RES-CHIP	47K 5% 1/10W
Q451	8-729-140-97	TRANSISTOR 2SB734-T-34 (KV-32FV26/34FX260/34FX260C ONLY)		R1421	1-216-025-11	RES-CHIP	100 5% 1/10W
Q1461	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		R1422	1-216-033-00	RES-CHIP	220 5% 1/10W
Q1462	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		R1423	1-216-033-00	RES-CHIP	220 5% 1/10W
Q1463	8-729-900-53	TRANSISTOR DTC114EKA-T146		R1424	1-216-073-00	RES-CHIP	10K 5% 1/10W
Q1464	8-729-900-53	TRANSISTOR DTC114EKA-T146		R1425	1-216-073-00	RES-CHIP	10K 5% 1/10W
				R1427	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
				R1458	1-216-033-00	RES-CHIP	220 5% 1/10W
				R1459	1-216-033-00	RES-CHIP	220 5% 1/10W
				R1461	1-216-057-00	RES-CHIP	2.2K 5% 1/10W

Note:

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R1462	1-216-073-00	RES-CHIP	10K 5% 1/10W	C1794	1-107-651-11	ELECT	4.7 μ F 20% 250V
R1464	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	C1795	1-102-074-00	CERAMIC	0.001 μ F 10% 50V
R1465	1-216-089-11	RES-CHIP	47K 5% 1/10W	C1799	1-162-114-00	CERAMIC	0.0047 μ F 2KV
R1466	1-216-089-11	RES-CHIP	47K 5% 1/10W	CONNECTOR			
R1467	1-216-073-00	RES-CHIP	10K 5% 1/10W	CN1761*	1-564-509-11	PLUG, CONNECTOR	6P
R1469	1-249-389-11	CARBON	4.7 5% 1/4W	CN1764*	1-564-508-11	PLUG, CONNECTOR	5P
R1470	1-249-389-11	CARBON	4.7 5% 1/4W	CN1766	1-695-915-11	TAB (CONTACT)	
R1471	1-216-049-11	RES-CHIP	1K 5% 1/10W	DIODE			
R1472	1-216-077-91	RES-CHIP	15K 5% 1/10W	D1790	8-719-991-33	DIODE 1SS133T-77	
R1473	1-216-049-11	RES-CHIP	1K 5% 1/10W	D1791	8-719-075-33	DIODE 1N4003GA	
R1474	1-216-025-11	RES-CHIP	100 5% 1/10W	D1792	8-719-075-33	DIODE 1N4003GA	
R1475	1-216-025-11	RES-CHIP	100 5% 1/10W	D1793	8-719-075-33	DIODE 1N4003GA	
R1480	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	D1794	8-719-075-33	DIODE 1N4003GA	
R1481	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	IC			
R1482	1-216-295-11	SHORT		IC1701 \triangle	8-759-562-43	IC TDA6108JF/N1B	
R1483	1-216-295-11	SHORT		JACK			
R1902	1-216-073-00	RES-CHIP	10K 5% 1/10W	J1761 \triangle	1-251-797-11	SOCKET, CRT	
R1904	1-216-073-00	RES-CHIP	10K 5% 1/10W	COIL			
R1906	1-216-073-00	RES-CHIP	10K 5% 1/10W	L1790	1-412-537-31	INDUCTOR	100 μ H
R1907	1-216-033-00	RES-CHIP	220 5% 1/10W	TRANSISTOR			
R2904	1-216-033-00	RES-CHIP	220 5% 1/10W	Q1790	8-729-119-76	TRANSISTOR 2SA1309A-QRSTA	
R2905	1-216-033-00	RES-CHIP	220 5% 1/10W	RESISTOR			
R2909	1-216-073-00	RES-CHIP	10K 5% 1/10W	R1750	1-247-870-11	CARBON	43K 5% 1/4W
R2910	1-216-073-00	RES-CHIP	10K 5% 1/10W	R1751	1-249-409-11	CARBON	220 5% 1/4W
R2912	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R1752	1-249-409-11	CARBON	220 5% 1/4W
R2913	1-216-073-00	RES-CHIP	10K 5% 1/10W	R1753 \triangle	1-249-409-11	CARBON	220 5% 1/4W
R2914	1-216-073-00	RES-CHIP	10K 5% 1/10W	R1763	1-260-099-11	CARBON	1K 5% 1/2W
R2915	1-216-073-00	RES-CHIP	10K 5% 1/10W	R1764	1-247-807-31	CARBON	100 5% 1/4W
R2916	1-216-073-00	RES-CHIP	10K 5% 1/10W	R1773	1-260-099-11	CARBON	1K 5% 1/2W
TUNER							
TU101 \triangle	8-598-501-30	TUNER, FSS BTF-FA402		R1774	1-247-807-31	CARBON	100 5% 1/4W
CAPACITOR							
C1750	1-137-528-11	MYLAR	0.1 μ F 10% 250V	R1783	1-260-099-11	CARBON	1K 5% 1/2W
C1751	1-107-655-11	ELECT	47 μ F 20% 250V	R1784	1-247-807-31	CARBON	100 5% 1/4W
C1790	1-102-129-00	CERAMIC	0.01 μ F 10% 50V	R1788	1-216-349-00	METAL OXIDE	1 5% 1W
C1791	1-126-968-11	ELECT	100 μ F 20% 50V	R1789	1-249-437-11	CARBON	47K 5% 1/4W
C1792	1-102-116-00	CERAMIC	680PF 10% 50V	R1792	1-249-409-11	CARBON	220 5% 1/4W
				R1793	1-247-866-11	CARBON	30K 5% 1/4W



* A-1331-942-A C (VAR) MOUNTED PC BOARD

4-382-854-11 SCREW (M3X10), P, SW (+)

CAPACITOR

C1750	1-137-528-11	MYLAR	0.1 μ F	10%	250V
C1751	1-107-655-11	ELECT	47 μ F	20%	250V
C1790	1-102-129-00	CERAMIC	0.01 μ F	10%	50V
C1791	1-126-968-11	ELECT	100 μ F	20%	50V
C1792	1-102-116-00	CERAMIC	680PF	10%	50V

**Note:**

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R1794	1-260-132-11	CARBON	560K 5% 1/2W	C644	1-126-941-11	ELECT	470 μ F 20% 25V
R1795	1-260-087-11	CARBON	100 5% 1/2W	C647	1-104-665-11	ELECT	100 μ F 20% 25V
R1796 \triangle	1-216-373-11	METAL OXIDE	2.2 5% 2W	C650	1-104-664-11	ELECT	47 μ F 20% 25V
R1797	1-260-123-11	CARBON	100K 5% 1/2W	C651	1-130-477-00	MYLAR	0.0033 μ F 5% 50V
VARIABLE RESISTOR				C652	1-106-351-00	MYLAR	0.0022 μ F 20% 200V
RV1761	1-241-714-11	RES, ADJ, METAL FILM 110M		C653	1-107-636-11	ELECT	10 μ F 20% 160V
G				C656	1-126-964-11	ELECT	10 μ F 20% 50V
* A-1316-397-A	G COMPLETE PC BOARD (KV-32FV16/32FV26 ONLY)			C657	1-136-165-00	FILM	0.1 μ F 5% 50V
1-533-223-11	HOLDER, FUSE			C658	1-126-941-11	ELECT	470 μ F 20% 25V
4-382-854-11	SCREW (M3X10), P, SW (+)			C660	1-126-936-11	ELECT	3300 μ F 20% 16V
CAPACITOR				C661	1-104-664-11	ELECT	47 μ F 20% 25V
C601	1-136-346-21	MYLAR	0.22 μ F 20% 125V	C662	1-126-933-11	ELECT	100 μ F 20% 16V
C602	1-126-964-11	ELECT	10 μ F 20% 50V	C665	1-104-664-11	ELECT	47 μ F 20% 25V
C603 \triangle	1-127-790-51	CERAMIC	1000PF 20% 250V	C695	1-164-625-11	CERAMIC	680PF 10% 500V
C604 \triangle	1-136-346-21	MYLAR	0.22 μ F 20% 125V	C696	1-164-625-11	CERAMIC	680PF 10% 500V
C605 \triangle	1-136-346-21	MYLAR	0.22 μ F 20% 125V	C697	1-164-625-11	CERAMIC	680PF 10% 500V
C606 \triangle	1-117-894-11	ELECT	560 μ F 20% 250V	C698	1-164-625-11	CERAMIC	680PF 10% 500V
C607 \triangle	1-117-894-11	ELECT	560 μ F 20% 250V	C699	1-136-169-00	FILM	0.22 μ F 5% 50V
C608	1-107-824-11	CERAMIC	220PF 5% 1KV	CONNECTOR			
C609	1-136-176-00	FILM	0.82 μ F 5% 50V	CN601 *	1-573-963-11	PIN, CONNECTOR (PC BOARD) 3P	
C610	1-136-176-00	FILM	0.82 μ F 5% 50V	CN602 *	1-580-844-11	PIN, CONNECTOR (POWER)	
C611	1-136-169-00	FILM	0.22 μ F 5% 50V	CN603 *	1-573-963-11	PIN, CONNECTOR (PC BOARD) 3P	
C612	1-136-169-00	FILM	0.22 μ F 5% 50V	CN641 *	1-564-515-11	PLUG, CONNECTOR 12P	
C613	1-164-646-11	CERAMIC	2200PF 10% 500V	CN642 *	1-564-509-11	PLUG, CONNECTOR 6P	
C614	1-126-963-11	ELECT	4.7 μ F 20% 50V	CN645	1-695-915-11	TAB (CONTACT)	
C615	1-117-976-11	FILM	0.039 μ F 5% 800V	CN646	1-695-915-11	TAB (CONTACT)	
C616 \triangle	1-127-790-51	CERAMIC	1000PF 20% 250V	DIODE			
C617	1-126-967-11	ELECT	47 μ F 20% 50V	D600	8-719-991-33	DIODE 1SS133T-77	
C618	1-126-968-11	ELECT	100 μ F 20% 50V	D601	8-719-991-33	DIODE 1SS133T-77	
C624	1-126-960-11	ELECT	1 μ F 20% 50V	D602 \triangle	8-719-510-53	DIODE D4SB60L-F	
C629 \triangle	1-107-652-11	ELECT	10 μ F 20% 250V	D603	8-719-063-70	DIODE D1N120U-TA2	
C630	1-130-471-00	MYLAR	0.001 μ F 5% 50V	D604	8-719-991-33	DIODE 1SS133T-77	
C631	1-137-605-11	MYLAR	0.01 μ F 10% 250V	D605	8-719-923-83	DIODE MTZJ-T-77-13A	
C633	1-130-471-00	MYLAR	0.001 μ F 5% 50V	D606	8-719-110-60	DIODE MTZJ-T-77-24B	
C634	1-130-467-00	MYLAR	470PF 5% 50V	D607	8-719-109-97	DIODE MTZJ-T-77-6.8B	
C635	1-130-471-00	MYLAR	0.001 μ F 5% 50V	D608	8-719-109-97	DIODE MTZJ-T-77-6.8B	
C636	1-126-965-11	ELECT	22 μ F 20% 50V	D612	8-719-991-33	DIODE 1SS133T-77	
C637	1-126-940-11	ELECT	330 μ F 20% 25V	D613	8-719-991-33	DIODE 1SS133T-77	
C641	1-128-550-11	ELECT	2200 μ F 20% 50V	D614	8-719-991-33	DIODE 1SS133T-77	
C643	1-107-995-11	ELECT	100 μ F 160V	D621	8-719-911-55	DIODE ERC04-06S	
				D622	8-719-911-55	DIODE ERC04-06S	
				D623	8-719-948-45	DIODE ERA22-08TP3	
				D624	8-719-991-33	DIODE 1SS133T-77	
				D625	8-719-991-33	DIODE 1SS133T-77	
				D626	8-719-109-93	DIODE MTZJ-T-77-6.2C	
				D627	8-719-510-48	DIODE D1N20R-TA	

Note:

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
C6046	1-128-566-11	ELECT	470 μ F 20% 100V	D6008 \triangle	8-719-510-53	DIODE D4SB60L-F	
C6047	1-128-566-11	ELECT	470 μ F 20% 100V	D6009	8-719-991-33	DIODE 1SS133T-77	
C6048	1-164-645-11	CERAMIC	1000PF 10% 500V	D6010	8-719-991-33	DIODE 1SS133T-77	
C6049	1-128-550-11	ELECT	2200 μ F 20% 50V	D6011	8-719-991-33	DIODE 1SS133T-77	
C6050	1-104-664-11	ELECT	47 μ F 20% 25V	D6012	8-719-991-33	DIODE 1SS133T-77	
C6051	1-104-664-11	ELECT	47 μ F 20% 25V	D6013 \triangle	8-719-510-02	DIODE D1NS4-TA2	
C6052	1-126-971-11	ELECT	470 μ F 20% 50V	D6014 \triangle	8-719-921-88	DIODE MTZJ-T-77-13B	
C6053	1-136-165-00	FILM	0.1 μ F 5% 50V	D6015	8-719-979-64	DIODE UF4005PKG23	
C6054	1-137-605-11	MYLAR	0.01 μ F 10% 250V	D6017	8-719-911-55	DIODE ERC04-06S	
C6056	1-130-471-00	MYLAR	0.001 μ F 5% 50V	D6019	8-719-911-55	DIODE ERC04-06S	
C6057	1-107-636-11	ELECT	10 μ F 20% 160V	D6020 \triangle	8-719-062-40	DIODE D4SBL20UF3	
C6058	1-126-960-11	ELECT	1 μ F 20% 50V	D6021	8-719-110-41	DIODE MTZJ-T-77-15B	
C6059	1-104-664-11	ELECT	47 μ F 20% 25V	D6022	8-719-510-12	DIODE D10SC4M	
C6060	1-104-664-11	ELECT	47 μ F 20% 25V	D6023 \triangle	8-719-022-97	DIODE D2S4MTA1	
C6061	1-136-165-00	FILM	0.1 μ F 5% 50V	D6024 \triangle	8-719-022-97	DIODE D2S4MTA1	
C6062	1-126-964-11	ELECT	10 μ F 20% 50V	D6025 \triangle	8-719-060-89	DIODE D4SBS6-F	
C6063	1-126-940-11	ELECT	330 μ F 20% 25V	D6028	8-719-110-49	DIODE MTZJ-T-77-18B	
C6064	1-104-664-11	ELECT	47 μ F 20% 25V	D6029	8-719-991-33	DIODE 1SS133T-77	
C6066	1-126-965-11	ELECT	22 μ F 20% 50V	D6030 \triangle	8-719-110-60	DIODE MTZJ-T-77-24B	
C6067	1-102-121-00	CERAMIC	0.0022 μ F 10% 50V	D6031	8-719-991-33	DIODE 1SS133T-77	
C6068	1-102-106-00	CERAMIC	100PF 10% 50V	D6032	8-719-510-48	DIODE D1N20R-TA	
C6069	1-102-106-00	CERAMIC	100PF 10% 50V	D6034	8-719-948-45	DIODE ERA22-08TP3	
C6070	1-102-074-00	CERAMIC	0.001 μ F 10% 50V	D6035	8-719-063-70	DIODE D1NL20U-TA2	
C6071	1-102-106-00	CERAMIC	100PF 10% 50V	D6036	8-719-032-12	DIODE D1NS6-TA2	
C6072	1-102-106-00	CERAMIC	100PF 10% 50V	D6037	8-719-991-33	DIODE 1SS133T-77	
C6073	1-102-129-00	CERAMIC	0.01 μ F 10% 50V	D6038 \triangle	8-719-991-33	DIODE 1SS133T-77	
C6074	1-102-106-00	CERAMIC	100PF 10% 50V	D6040	8-719-063-70	DIODE D1NL20U-TA2	
C6075	1-107-824-11	CERAMIC	220PF 5% 1KV	D6041	8-719-991-33	DIODE 1SS133T-77	
C6078	1-126-964-11	ELECT	10 μ F 20% 50V	D6042	8-719-110-17	DIODE MTZJ-T-77-10B	
C6081	1-127-794-51	CERAMIC	2200PF 20% 250V	D6043	8-719-991-33	DIODE 1SS133T-77	
C6082	1-127-794-51	CERAMIC	2200PF 20% 250V	D6044	8-719-991-33	DIODE 1SS133T-77	
CONNECTOR							
CN6000*	1-573-963-11	PIN, CONNECTOR (PC BOARD) 3P		D6047	8-719-110-31	DIODE MTZJ-T-77-12B	
CN6001*	1-573-963-11	PIN, CONNECTOR (PC BOARD) 3P		D6048	8-719-110-31	DIODE MTZJ-T-77-12B	
CN6002	1-695-915-11	TAB (CONTACT)		D6049	8-719-991-33	DIODE 1SS133T-77	
CN6003*	1-580-843-11	PIN, CONNECTOR (POWER)		D6050 \triangle	8-719-979-64	DIODE UF4005PKG23	
CN6006*	1-564-509-11	PLUG, CONNECTOR 6P		D6051	8-719-063-70	DIODE D1NL20U-TA2	
CN6007*	1-564-515-11	PLUG, CONNECTOR 12P		D6052	8-719-110-31	DIODE MTZJ-T-77-12B	
CN6009	1-695-915-11	TAB (CONTACT)		D6054	8-719-063-70	DIODE D1NL20U-TA2	
DIODE							
D6000	8-719-991-33	DIODE 1SS133T-77		D6055	8-719-063-70	DIODE D1NL20U-TA2	
D6001	8-719-991-33	DIODE 1SS133T-77		D6056	8-719-063-70	DIODE D1NL20U-TA2	
D6002	8-719-991-33	DIODE 1SS133T-77		FUSE			
D6003	8-719-991-33	DIODE 1SS133T-77		F6001 \triangle	1-532-506-51	FUSE 6.3A/250V	
D6004	8-719-991-33	DIODE 1SS133T-77					
D6005	8-719-991-33	DIODE 1SS133T-77					
D6006	8-719-991-33	DIODE 1SS133T-77					

**Note:**

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
CONNECTOR				IC			
CN1232*	1-564-512-11	PLUG, CONNECTOR	9P	IC2001	8-742-211-20	HYB IC SBX3071-71	
DIODE				RESISTOR			
D1233	8-719-110-17	DIODE MTZJ-T-77-10B		R2001	1-216-049-11	RES-CHIP	1K 5% 1/10W
JACK				R2002	1-216-049-11	RES-CHIP	1K 5% 1/10W
J1231	1-770-361-11	TERMINAL BLOCK, S		R2003	1-216-017-91	RES-CHIP	47 5% 1/10W
RESISTOR				HX			
R201	1-216-049-11	RES-CHIP	1K 5% 1/10W	* A-1372-636-A HX MOUNTED PC BOARD			
R202	1-216-055-00	RES-CHIP	1.8K 5% 1/10W	CONNECTOR			
R203	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	CN2002*	1-564-518-11	PLUG, CONNECTOR	3P
R1233	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	RESISTOR			
R1235	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R2010	1-216-047-91	RES-CHIP	820 5% 1/10W
R1236	1-216-113-00	RES-CHIP	470K 5% 1/10W	R2011	1-216-049-11	RES-CHIP	1K 5% 1/10W
R1237	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R2012	1-216-055-00	RES-CHIP	1.8K 5% 1/10W
R1238	1-216-113-00	RES-CHIP	470K 5% 1/10W	R2013	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
SWITCH				R2014	1-216-025-11	RES-CHIP	100 5% 1/10W
S2007	1-572-198-11	SWITCH, KEYBOARD		SWITCH			
S2008	1-572-198-11	SWITCH, KEYBOARD		S2001	1-572-198-11	SWITCH, KEYBOARD	
S2009	1-572-198-11	SWITCH, KEYBOARD		S2002	1-572-198-11	SWITCH, KEYBOARD	
S2010	1-572-198-11	SWITCH, KEYBOARD		S2003	1-572-198-11	SWITCH, KEYBOARD	
HB				S2004	1-572-198-11	SWITCH, KEYBOARD	
* A-1372-635-A HB MOUNTED PC BOARD				S2005	1-572-198-11	SWITCH, KEYBOARD	
CAPACITOR				S2006	1-572-198-11	SWITCH, KEYBOARD	
C2001	1-104-665-11	ELECT	100 μ F 20% 25V	T			
C2002	1-164-096-11	CERAMIC	0.01 μ F 50V	* A-1394-934-A T COMPLETE PC BOARD (KV-32FV26/34FX260/34FX260C)			
CONNECTOR				CAPACITOR			
CN2001*	1-564-520-11	PLUG, CONNECTOR	5P	C401	1-163-243-11	CERAMIC CHIP	47PF 5% 50V
DIODE				C402	1-163-809-11	CERAMIC CHIP	0.047 μ F 10% 25V
D2002	8-719-057-09	DIODE LNJ801LPDJA		C403	1-126-963-11	ELECT	4.7 μ F 20% 50V
D2003	8-719-057-09	DIODE LNJ801LPDJA					

Note:

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

T

REF.NO.	PART NO.	DESCRIPTION	REMARK			REF.NO.	PART NO.	DESCRIPTION	REMARK		
C404	1-163-135-00	CERAMIC CHIP	560PF	5%	50V	TRANSISTOR					
C405	1-104-664-11	ELECT	47 μ F	20%	25V	Q401	8-729-266-83	TRANSISTOR 2SC2668-YTP			
C406	1-163-021-91	CERAMIC CHIP	0.01 μ F	10%	50V	Q402	8-729-266-83	TRANSISTOR 2SC2668-YTP			
C407	1-163-809-11	CERAMIC CHIP	0.047 μ F	10%	25V	Q403	8-729-423-33	TRANSISTOR 2SC3311A-QRSTA			
C408	1-163-135-00	CERAMIC CHIP	560PF	5%	50V	Q404	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX			
C409	1-126-963-11	ELECT	4.7 μ F	20%	50V	Q405	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX			
C410	1-163-243-11	CERAMIC CHIP	47PF	5%	50V	Q406	8-729-931-14	TRANSISTOR 2SD1858-Q-TV2			
C411	1-126-963-11	ELECT	4.7 μ F	20%	50V	Q407	8-729-931-14	TRANSISTOR 2SD1858-Q-TV2			
C412	1-164-161-11	CERAMIC CHIP	0.0022 μ F	10%	50V	Q408	8-729-931-14	TRANSISTOR 2SD1858-Q-TV2			
C413	1-164-161-11	CERAMIC CHIP	0.0022 μ F	10%	50V	Q409	8-729-931-14	TRANSISTOR 2SD1858-Q-TV2			
C414	1-104-664-11	ELECT	47 μ F	20%	25V	Q410	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX			
C415	1-163-021-91	CERAMIC CHIP	0.01 μ F	10%	50V	Q411	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX			
C416	1-104-664-11	ELECT	47 μ F	20%	25V	RESISTOR					
C417	1-126-963-11	ELECT	4.7 μ F	20%	50V	R401	1-216-089-11	RES-CHIP	47K	5%	1/10W
C418	1-163-229-11	CERAMIC CHIP	12PF	5%	50V	R402	1-216-089-11	RES-CHIP	47K	5%	1/10W
C419	1-163-227-11	CERAMIC CHIP	10PF	0.50PF	50V	R403	1-216-089-11	RES-CHIP	47K	5%	1/10W
C420	1-163-021-91	CERAMIC CHIP	0.01 μ F	10%	50V	R404	1-216-053-00	RES-CHIP	1.5K	5%	1/10W
C421	1-163-021-91	CERAMIC CHIP	0.01 μ F	10%	50V	R405	1-216-025-11	RES-CHIP	100	5%	1/10W
C422	1-104-664-11	ELECT	47 μ F	20%	25V	R406	1-216-053-00	RES-CHIP	1.5K	5%	1/10W
C423	1-163-021-91	CERAMIC CHIP	0.01 μ F	10%	50V	R407	1-216-133-00	RES-CHIP	3.3M	5%	1/10W
C424	1-163-021-91	CERAMIC CHIP	0.01 μ F	10%	50V	R408	1-216-089-11	RES-CHIP	47K	5%	1/10W
C425	1-104-664-11	ELECT	47 μ F	20%	25V	R409	1-216-053-00	RES-CHIP	1.5K	5%	1/10W
C426	1-163-021-91	CERAMIC CHIP	0.01 μ F	10%	50V	R410	1-216-053-00	RES-CHIP	1.5K	5%	1/10W
CONNECTOR						R411	1-216-025-11	RES-CHIP	100	5%	1/10W
CN401 *	1-564-519-11	PLUG, CONNECTOR 4P				R412	1-208-803-11	METAL CHIP	7.5K	0.50%	1/10W
DIODE						R413	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
D401	8-719-109-89	DIODE MTZJ-T-77-5.6C				R414	1-216-073-00	RES-CHIP	10K	5%	1/10W
D402	8-719-057-93	DIODE SVC203SPA-AL				R415	1-249-411-11	CARBON	330	5%	1/4W
D403	8-719-057-93	DIODE SVC203SPA-AL				R416	1-216-081-00	RES-CHIP	22K	5%	1/10W
D404	8-719-992-13	DIODE DAL5815				R417	1-216-081-00	RES-CHIP	22K	5%	1/10W
D405	8-719-992-13	DIODE DAL5815				R418	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
D406	8-719-992-13	DIODE DAL5815				R419	1-216-073-00	RES-CHIP	10K	5%	1/10W
D407	8-719-992-13	DIODE DAL5815				R420	1-216-111-00	RES-CHIP	390K	5%	1/10W
D408	8-719-992-13	DIODE DAL5815				R421	1-216-025-11	RES-CHIP	100	5%	1/10W
D409	8-719-992-13	DIODE DAL5815				R422	1-216-025-11	RES-CHIP	100	5%	1/10W
D410	8-719-992-13	DIODE DAL5815				R423	1-216-111-00	RES-CHIP	390K	5%	1/10W
D411	8-719-992-13	DIODE DAL5815				R424	1-216-053-00	RES-CHIP	1.5K	5%	1/10W
IC						R425	1-216-061-00	RES-CHIP	3.3K	5%	1/10W
IC401	8-759-939-73	IC BA3308				R426	1-208-821-11	METAL CHIP	43K	0.50%	1/10W
COIL						R427	1-216-061-00	RES-CHIP	3.3K	5%	1/10W
L401	1-411-987-11	COIL (OSC)				R428	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
L402	1-411-988-11	COIL (OSC)				R429	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
						R430	1-208-790-11	METAL CHIP	2.2K	0.50%	1/10W
						R431	1-208-790-11	METAL CHIP	2.2K	0.50%	1/10W
						R432	1-208-821-11	METAL CHIP	43K	0.50%	1/10W
						R433	1-216-059-00	RES-CHIP	2.7K	5%	1/10W
						R434	1-216-059-00	RES-CHIP	2.7K	5%	1/10W



Note:

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R435	1-216-001-00	RES-CHIP	10 5% 1/10W	C1202	1-163-021-91	CERAMIC CHIP	0.01 μ F 10% 50V
R436	1-216-001-00	RES-CHIP	10 5% 1/10W	C1203	1-126-960-11	ELECT	1 μ F 20% 50V
R437	1-216-001-00	RES-CHIP	10 5% 1/10W	C1204	1-163-809-11	CERAMIC CHIP	0.047 μ F 10% 25V
R438	1-216-001-00	RES-CHIP	10 5% 1/10W	C1205	1-126-933-11	ELECT	100 μ F 20% 16V
R439	1-216-059-00	RES-CHIP	2.7K 5% 1/10W	C1207	1-126-963-11	ELECT	4.7 μ F 20% 50V
R460	1-216-059-00	RES-CHIP	2.7K 5% 1/10W	C1208	1-126-963-11	ELECT	4.7 μ F 20% 50V
				C1209	1-163-259-91	CERAMIC CHIP	220PF 5% 50V
				C1210	1-163-259-91	CERAMIC CHIP	220PF 5% 50V
				C1211	1-126-933-11	ELECT	100 μ F 20% 16V
				C1212	1-126-933-11	ELECT	100 μ F 20% 16V
				C1214	1-163-021-91	CERAMIC CHIP	0.01 μ F 10% 50V
				C1215	1-126-960-11	ELECT	1 μ F 20% 50V
				C1997	1-163-031-11	CERAMIC CHIP	0.01 μ F 50V
				C1998	1-104-664-11	ELECT	47 μ F 20% 16V
				C1999	1-163-031-11	CERAMIC CHIP	0.01 μ F 50V
				C2000	1-163-031-11	CERAMIC CHIP	0.01 μ F 50V
				C2001	1-163-235-11	CERAMIC CHIP	22PF 5% 50V (KV-32FV26/34FX260/34FX260C ONLY)
				C2002	1-126-933-11	ELECT	100 μ F 20% 16V
				C2003	1-163-031-11	CERAMIC CHIP	0.01 μ F 50V
				C2004	1-163-235-11	CERAMIC CHIP	22PF 5% 50V (KV-32FV26/34FX260/34FX260C ONLY)
				C2005	1-163-131-00	CERAMIC CHIP	390PF 5% 50V
				C2006	1-163-038-11	CERAMIC CHIP	0.1 μ F 25V
				C2007	1-126-926-11	ELECT	1000 μ F 20% 10V (KV-32FV26/34FX260/34FX260C ONLY)
				C2008	1-163-038-11	CERAMIC CHIP	0.1 μ F 25V (KV-32FV26/34FX260/34FX260C ONLY)
				C2009	1-163-102-00	CERAMIC CHIP	24PF 5% 50V
				C2011	1-126-967-11	ELECT	47 μ F 20% 50V
				C2013	1-163-038-11	CERAMIC CHIP	0.1 μ F 25V (KV-32FV26/34FX260/34FX260C ONLY)
				C2014	1-163-009-11	CERAMIC CHIP	0.001 μ F 10% 50V (KV-32FV26/34FX260/34FX260C ONLY)
				C2015	1-216-295-11	SHORT	
				C2016	1-165-319-11	CERAMIC CHIP	0.1 μ F 50V
				C2017	1-163-102-00	CERAMIC CHIP	24PF 5% 50V
				C2018	1-165-319-11	CERAMIC CHIP	0.1 μ F 50V
				C2019	1-126-960-11	ELECT	1 μ F 20% 50V (KV-32FV26/34FX260/34FX260C ONLY)
				C2020	1-165-319-11	CERAMIC CHIP	0.1 μ F 50V
				C2021	1-163-038-11	CERAMIC CHIP	0.1 μ F 25V
				C2022	1-163-031-11	CERAMIC CHIP	0.01 μ F 50V
				C2023	1-126-967-11	ELECT	47 μ F 20% 50V
				C2024	1-216-295-11	SHORT	
				C2025	1-163-031-11	CERAMIC CHIP	0.01 μ F 50V
				C2026	1-126-967-11	ELECT	47 μ F 20% 50V
				C2027	1-163-031-11	CERAMIC CHIP	0.01 μ F 50V
				C2028	1-126-941-11	ELECT	470 μ F 20% 25V
				C2029	1-165-319-11	CERAMIC CHIP	0.1 μ F 50V
C201	1-128-551-11	ELECT	22 μ F 20% 25V				
C202	1-128-551-11	ELECT	22 μ F 20% 25V				
C203	1-128-551-11	ELECT	22 μ F 20% 25V				
C204	1-126-960-11	ELECT	1 μ F 20% 50V				
C205	1-126-960-11	ELECT	1 μ F 20% 50V				
C231	1-163-021-91	CERAMIC CHIP	0.01 μ F 10% 50V				
C232	1-126-933-11	ELECT	100 μ F 20% 16V				
C233	1-126-933-11	ELECT	100 μ F 20% 16V				
C234	1-126-960-11	ELECT	1 μ F 20% 50V				
C235	1-126-960-11	ELECT	1 μ F 20% 50V				
C236	1-126-933-11	ELECT	100 μ F 20% 16V				
C237	1-126-960-11	ELECT	1 μ F 20% 50V				
C238	1-126-960-11	ELECT	1 μ F 20% 50V				
C241	1-126-941-11	ELECT	470 μ F 20% 25V				
C242	1-126-959-11	ELECT	0.47 μ F 20% 50V				
C243	1-126-959-11	ELECT	0.47 μ F 20% 50V				
C244	1-126-959-11	ELECT	0.47 μ F 20% 50V				
C245	1-126-959-11	ELECT	0.47 μ F 20% 50V				
C264	1-164-004-11	CERAMIC CHIP	0.1 μ F 10% 25V				
C268	1-163-021-91	CERAMIC CHIP	0.01 μ F 10% 50V				
C269	1-163-021-91	CERAMIC CHIP	0.01 μ F 10% 50V				
C272	1-163-231-11	CERAMIC CHIP	15PF 5% 50V				
C273	1-128-551-11	ELECT	22 μ F 20% 25V				
C277	1-128-551-11	ELECT	22 μ F 20% 25V				
C278	1-128-551-11	ELECT	22 μ F 20% 25V				
C281	1-126-933-11	ELECT	100 μ F 20% 16V				
C284	1-126-941-11	ELECT	470 μ F 20% 25V				
C286	1-164-161-11	CERAMIC CHIP	0.0022 μ F 10% 50V				
C287	1-164-161-11	CERAMIC CHIP	0.0022 μ F 10% 50V				
C1051	1-126-964-11	ELECT	10 μ F 20% 50V				
C1053	1-126-934-11	ELECT	220 μ F 20% 16V				
C1201	1-163-809-11	CERAMIC CHIP	0.047 μ F 10% 25V				



- * A-1395-003-A UX COMPLETE PC BOARD
(KV-32FV16/34FV16/34FV16C ONLY)
- * A-1395-004-A UX COMPLETE PC BOARD
(KV-32FV26/34FX260/34FX260C ONLY)

CAPACITOR

**Note:**

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
D203	8-719-032-47	DIODE MTZJ-T-9110					
D204	8-719-032-47	DIODE MTZJ-T-9110					
D205	8-719-032-47	DIODE MTZJ-T-9110					
D231	8-719-032-47	DIODE MTZJ-T-9110					
D232	8-719-032-47	DIODE MTZJ-T-9110					
D233	8-719-032-47	DIODE MTZJ-T-9110					
D234	8-719-032-47	DIODE MTZJ-T-9110					
D235	8-719-032-47	DIODE MTZJ-T-9110					
D236	8-719-032-47	DIODE MTZJ-T-9110					
D237	8-719-032-47	DIODE MTZJ-T-9110					
D238	8-719-032-47	DIODE MTZJ-T-9110					
D239	8-719-032-47	DIODE MTZJ-T-9110					
D245	8-719-157-94	DIODE RD3.3SB-T1					
D246	8-719-157-94	DIODE RD3.3SB-T1					
D248	8-719-157-94	DIODE RD3.3SB-T1					
D261	8-719-032-47	DIODE MTZJ-T-9110					
D902	8-719-032-47	DIODE MTZJ-T-9110					
D910	8-719-032-47	DIODE MTZJ-T-9110					
D911	8-719-032-47	DIODE MTZJ-T-9110					
D912	8-719-032-47	DIODE MTZJ-T-9110					
D1051	8-719-073-01	DIODE MA111-TX					
D1052	8-719-073-01	DIODE MA111-TX					
D1053	1-216-295-11	SHORT					
D1054	1-216-295-11	SHORT					
D2201	8-719-032-47	DIODE MTZJ-T-9110					
D2202	8-719-032-47	DIODE MTZJ-T-9110					
D2203	8-719-032-47	DIODE MTZJ-T-9110					
FERRITE BEAD							
FB2003	1-414-233-22	INDUCTOR CHIP	0 μ H				
FB2004	1-414-230-22	INDUCTOR CHIP	0 μ H				
FB2006	1-414-230-22	INDUCTOR CHIP	0 μ H				
FB2007	1-414-230-22	INDUCTOR CHIP	0 μ H				
FB2008	1-414-230-22	INDUCTOR CHIP	0 μ H				
FB2009	1-414-233-22	INDUCTOR CHIP	0 μ H				
FB3301	1-216-295-11	SHORT					
FB3302	1-414-230-22	INDUCTOR CHIP	0 μ H				
FB3303	1-414-230-22	INDUCTOR CHIP	0 μ H				
FB3304	1-414-230-22	INDUCTOR CHIP	0 μ H				
FB3305	1-414-230-22	INDUCTOR CHIP	0 μ H				
FILTER							
FL2001	1-239-848-21	FILTER, LOW PASS					
FL2002	1-239-848-21	FILTER, LOW PASS					
FL2003	1-239-848-21	FILTER, LOW PASS					
FL2004	1-239-848-21	FILTER, LOW PASS					
				IC			
				IC261	8-752-066-69	IC CXA1845Q	
				IC1051	8-752-058-68	IC CXA1315M-T4	
				IC2003	8-759-568-27	IC UPD424210LE-60-E2	
				IC2004	8-759-594-44	IC UPD64082GF-3BA	
				IC2005	8-759-583-47	IC UPC2933T-E1	
				IC2006	8-759-358-38	IC NJM78M05DLA(TE1)	
				IC2009	8-752-395-13	IC CXD2085M-T4 (KV-32FV26/34FX260/34FX260C ONLY)	
				IC3302	8-759-358-38	IC NJM78M05DLA(TE1)	
				IC3303	8-759-658-34	IC SDA9588X	
				IC3308	8-759-932-69	IC BU4053BCF-T2	
				IC3310	8-759-583-47	IC UPC2933T-E1	
				JACK			
				J231	1-750-515-11	TERMINAL BLOCK, S 3P	
				J232	1-750-517-11	JACK BLOCK, PIN 3P	
				J233	1-750-516-11	JACK BLOCK, PIN 2P	
				J234	1-750-517-11	JACK BLOCK, PIN 3P	
				J236	1-774-358-11	JACK BLOCK, PIN	
				J902	1-764-143-11	JACK	
				J903	1-764-143-11	JACK	
				J904	1-764-143-11	JACK	
				J905	1-764-143-11	JACK	
				CHIP CONDUCTOR			
				JR1001	1-216-295-11	SHORT	
				JR1002	1-216-295-11	SHORT	
				JR1003	1-216-295-11	SHORT	
				JR1004	1-216-295-11	SHORT	
				JR1021	1-216-295-11	SHORT	
				JR1022	1-216-295-11	SHORT	
				JR1023	1-216-295-11	SHORT	
				JR2009	1-216-295-11	SHORT	
				JR2010	1-216-295-11	SHORT	
				JR2011	1-216-295-11	SHORT	
				JR2012	1-216-295-11	SHORT	
				JR2013	1-216-295-11	SHORT	
				JR2014	1-216-295-11	SHORT	
				JR3014	1-216-295-11	SHORT	
				COIL			
				L261	1-414-857-11	INDUCTOR	100 μ H
				L1201	1-408-591-11	INDUCTOR	1 μ H
				L1202	1-408-591-11	INDUCTOR	1 μ H
				L1203	1-408-591-11	INDUCTOR	1 μ H
				L2001	1-412-056-11	INDUCTOR CHIP	4.7 μ H

Note:

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
L2002	1-412-058-11	INDUCTOR CHIP	10 μ H	Q1205	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L2004	1-412-058-11	INDUCTOR CHIP	10 μ H	Q1206	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L2005	1-410-494-11	INDUCTOR	1mH	Q1207	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
L2006	1-412-058-11	INDUCTOR CHIP	10 μ H	Q1208	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
L2011	1-410-116-11	INDUCTOR (KV-32FV26/34FX260/34FX260C ONLY)	560 μ H	Q2001	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX (KV-32FV26/34FX260/34FX260C ONLY)	
L2012	1-410-116-11	INDUCTOR	560 μ H	Q2003	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
L3301	1-414-856-11	INDUCTOR	10 μ H	Q2004	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
L3302	1-410-473-11	INDUCTOR	18 μ H	Q2005	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L3303	1-410-476-11	INDUCTOR	33 μ H	Q2006	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L3304	1-414-856-11	INDUCTOR	10 μ H	Q2007	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L3305	1-414-856-11	INDUCTOR	10 μ H	Q2008	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L3306	1-414-856-11	INDUCTOR	10 μ H	Q2009	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L3307	1-414-856-11	INDUCTOR	10 μ H	Q2010	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
L3308	1-414-856-11	INDUCTOR	10 μ H	Q2011	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
		TRANSISTOR		Q2012	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
Q201	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		Q2013	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
Q202	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		Q2014	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
Q203	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		Q2015	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
Q204	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX		Q2016	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
Q205	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX		Q2017	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX (KV-32FV26/34FX260/34FX260C ONLY)	
Q206	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX		Q2018	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
Q207	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		Q2019	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
Q208	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		Q2119	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
Q209	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		Q3301	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
Q210	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		Q3306	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
Q211	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		Q3307	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
Q231	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		Q3312	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
Q233	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		Q3315	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
Q234	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		Q3316	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX	
Q235	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		Q3317	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX	
Q236	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX				RESISTOR	
Q237	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX		R201	1-216-022-00	RES-CHIP	75 5% 1/10W
Q238	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX		R202	1-216-022-00	RES-CHIP	75 5% 1/10W
Q239	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX		R203	1-216-022-00	RES-CHIP	75 5% 1/10W
Q246	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		R204	1-216-113-00	RES-CHIP	470K 5% 1/10W
Q262	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX		R205	1-216-113-00	RES-CHIP	470K 5% 1/10W
Q263	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX		R206	1-216-295-11	SHORT	
Q264	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX		R207	1-216-295-11	SHORT	
Q265	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		R208	1-216-295-11	SHORT	
Q268	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX		R209	1-216-089-11	RES-CHIP	47K 5% 1/10W
Q1051	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX		R210	1-216-081-00	RES-CHIP	22K 5% 1/10W
Q1201	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX		R211	1-216-089-11	RES-CHIP	47K 5% 1/10W
Q1202	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		R212	1-216-081-00	RES-CHIP	22K 5% 1/10W
Q1203	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		R213	1-216-089-11	RES-CHIP	47K 5% 1/10W
Q1204	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX		R214	1-216-081-00	RES-CHIP	22K 5% 1/10W



Note:

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R215	1-216-049-11	RES-CHIP	1K 5% 1/10W	R269	1-216-067-00	RES-CHIP	5.6K 5% 1/10W
R216	1-216-025-11	RES-CHIP	100 5% 1/10W	R270	1-216-049-11	RES-CHIP	1K 5% 1/10W
R218	1-208-774-11	METAL CHIP	470 0.50% 1/10W	R271	1-216-067-00	RES-CHIP	5.6K 5% 1/10W
R219	1-216-049-11	RES-CHIP	1K 5% 1/10W	R272	1-216-025-11	RES-CHIP	100 5% 1/10W
R220	1-216-025-11	RES-CHIP	100 5% 1/10W	R273	1-216-067-00	RES-CHIP	5.6K 5% 1/10W
R221	1-208-774-11	METAL CHIP	470 0.50% 1/10W	R274	1-216-049-11	RES-CHIP	1K 5% 1/10W
R222	1-216-049-11	RES-CHIP	1K 5% 1/10W	R275	1-216-025-11	RES-CHIP	100 5% 1/10W
R223	1-216-025-11	RES-CHIP	100 5% 1/10W	R276	1-216-295-11	SHORT	
R224	1-216-025-11	RES-CHIP	100 5% 1/10W	R278	1-216-067-00	RES-CHIP	5.6K 5% 1/10W
R225	1-216-025-11	RES-CHIP	100 5% 1/10W	R279	1-216-025-11	RES-CHIP	100 5% 1/10W
R226	1-216-025-11	RES-CHIP	100 5% 1/10W	R280	1-216-067-00	RES-CHIP	5.6K 5% 1/10W
R227	1-216-041-00	RES-CHIP	470 5% 1/10W	R281	1-216-025-11	RES-CHIP	100 5% 1/10W
R228	1-216-049-11	RES-CHIP	1K 5% 1/10W	R282	1-216-025-11	RES-CHIP	100 5% 1/10W
R229	1-216-049-11	RES-CHIP	1K 5% 1/10W	R283	1-216-049-11	RES-CHIP	1K 5% 1/10W
R230	1-216-089-11	RES-CHIP	47K 5% 1/10W	R284	1-216-033-00	RES-CHIP	220 5% 1/10W
R231	1-216-022-00	RES-CHIP	75 5% 1/10W	R285	1-216-033-00	RES-CHIP	220 5% 1/10W
R232	1-216-022-00	RES-CHIP	75 5% 1/10W	R286	1-216-067-00	RES-CHIP	5.6K 5% 1/10W
R233	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R287	1-216-025-11	RES-CHIP	100 5% 1/10W
R234	1-216-022-00	RES-CHIP	75 5% 1/10W	R288	1-216-067-00	RES-CHIP	5.6K 5% 1/10W
R235	1-216-113-00	RES-CHIP	470K 5% 1/10W	R289	1-216-067-00	RES-CHIP	5.6K 5% 1/10W
R236	1-216-113-00	RES-CHIP	470K 5% 1/10W	R290	1-216-025-11	RES-CHIP	100 5% 1/10W
R237	1-216-022-00	RES-CHIP	75 5% 1/10W	R291	1-216-067-00	RES-CHIP	5.6K 5% 1/10W
R238	1-216-113-00	RES-CHIP	470K 5% 1/10W	R293	1-216-025-11	RES-CHIP	100 5% 1/10W
R239	1-216-113-00	RES-CHIP	470K 5% 1/10W	R294	1-216-077-91	RES-CHIP	15K 5% 1/10W
R241	1-216-113-00	RES-CHIP	470K 5% 1/10W	R295	1-216-025-11	RES-CHIP	100 5% 1/10W
R242	1-216-049-11	RES-CHIP	1K 5% 1/10W	R296	1-216-025-11	RES-CHIP	100 5% 1/10W
R243	1-216-113-00	RES-CHIP	470K 5% 1/10W	R297	1-216-025-11	RES-CHIP	100 5% 1/10W
R244	1-216-049-11	RES-CHIP	1K 5% 1/10W	R300	1-216-025-11	RES-CHIP	100 5% 1/10W
R245	1-216-022-00	RES-CHIP	75 5% 1/10W	R301	1-216-049-11	RES-CHIP	1K 5% 1/10W
R246	1-216-113-00	RES-CHIP	470K 5% 1/10W	R302	1-216-295-11	SHORT	
R247	1-216-113-00	RES-CHIP	470K 5% 1/10W	R902	1-249-405-11	CARBON	100 5% 1/4W
R248	1-216-113-00	RES-CHIP	470K 5% 1/10W	R921	1-249-405-11	CARBON	100 5% 1/4W
R249	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R923	1-249-405-11	CARBON	100 5% 1/4W
R250	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R925	1-249-405-11	CARBON	100 5% 1/4W
R251	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R926	1-216-049-11	RES-CHIP	1K 5% 1/10W
R252	1-216-049-11	RES-CHIP	1K 5% 1/10W	R1051	1-216-073-00	RES-CHIP	10K 5% 1/10W
R254	1-216-049-11	RES-CHIP	1K 5% 1/10W	R1052	1-216-073-00	RES-CHIP	10K 5% 1/10W
R257	1-216-049-11	RES-CHIP	1K 5% 1/10W	R1054	1-216-025-11	RES-CHIP	100 5% 1/10W
R258	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R1057	1-216-025-11	RES-CHIP	100 5% 1/10W
R259	1-216-049-11	RES-CHIP	1K 5% 1/10W	R1058	1-216-025-11	RES-CHIP	100 5% 1/10W
R260	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R1059	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R261	1-216-025-11	RES-CHIP	100 5% 1/10W	R1062	1-216-033-00	RES-CHIP	220 5% 1/10W
R262	1-216-067-00	RES-CHIP	5.6K 5% 1/10W	R1063	1-216-073-00	RES-CHIP	10K 5% 1/10W
R263	1-216-025-11	RES-CHIP	100 5% 1/10W	R1064	1-216-073-00	RES-CHIP	10K 5% 1/10W
R264	1-216-067-00	RES-CHIP	5.6K 5% 1/10W	R1065	1-216-025-11	RES-CHIP	100 5% 1/10W
R265	1-216-025-11	RES-CHIP	100 5% 1/10W	R1201	1-216-025-11	RES-CHIP	100 5% 1/10W
R266	1-216-025-11	RES-CHIP	100 5% 1/10W	R1202	1-216-025-11	RES-CHIP	100 5% 1/10W
R267	1-216-025-11	RES-CHIP	100 5% 1/10W	R1204	1-216-295-11	SHORT	
R268	1-216-067-00	RES-CHIP	5.6K 5% 1/10W	R1206	1-216-295-11	SHORT	

Note:

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R1208	1-216-049-11	RES-CHIP	1K 5% 1/10W	R1289	1-216-295-11	SHORT	
R1209	1-216-295-11	SHORT		R1290	1-216-295-11	SHORT	
R1210	1-216-295-11	SHORT		R1291	1-216-295-11	SHORT	
R1212	1-216-295-11	SHORT		R1292	1-216-295-11	SHORT	
R1213	1-216-295-11	SHORT		R1293	1-216-049-11	RES-CHIP	1K 5% 1/10W
R1215	1-208-774-11	METAL CHIP	470 0.50% 1/10W	R1294	1-216-049-11	RES-CHIP	1K 5% 1/10W
R1216	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R1295	1-216-049-11	RES-CHIP	1K 5% 1/10W
R1217	1-216-091-00	RES-CHIP	56K 5% 1/10W	R1300	1-216-049-11	RES-CHIP	1K 5% 1/10W
R1219	1-216-073-00	RES-CHIP	10K 5% 1/10W	R1304	1-216-041-00	RES-CHIP	470 5% 1/10W
R1220	1-216-013-00	RES-CHIP	33 5% 1/10W	R1305	1-208-776-11	METAL CHIP	560 0.50% 1/10W
R1221	1-216-121-11	RES-CHIP	1M 5% 1/10W	R1306	1-216-025-11	RES-CHIP	100 5% 1/10W
R1222	1-216-073-00	RES-CHIP	10K 5% 1/10W	R1307	1-216-041-00	RES-CHIP	470 5% 1/10W
R1223	1-216-097-11	RES-CHIP	100K 5% 1/10W	R1308	1-208-776-11	METAL CHIP	560 0.50% 1/10W
R1224	1-216-089-11	RES-CHIP	47K 5% 1/10W	R1309	1-216-025-11	RES-CHIP	100 5% 1/10W
R1225	1-216-097-11	RES-CHIP	100K 5% 1/10W	R2001	1-216-073-00	RES-CHIP	10K 5% 1/10W (KV-32FV26/34FX260/34FX260C ONLY)
R1227	1-216-073-00	RES-CHIP	10K 5% 1/10W	R2002	1-216-073-00	RES-CHIP	10K 5% 1/10W (KV-32FV26/34FX260/34FX260C ONLY)
R1228	1-208-774-11	METAL CHIP	470 0.50% 1/10W	R2003	1-216-085-00	RES-CHIP	33K 5% 1/10W (KV-32FV26/34FX260/34FX260C ONLY)
R1229	1-216-121-11	RES-CHIP	1M 5% 1/10W	R2004	1-216-057-00	RES-CHIP	2.2K 5% 1/10W (KV-32FV26/34FX260/34FX260C ONLY)
R1230	1-216-073-00	RES-CHIP	10K 5% 1/10W	R2005	1-216-295-11	SHORT	(KV-32FV26/34FX260/34FX260C ONLY)
R1233	1-216-097-11	RES-CHIP	100K 5% 1/10W	R2006	1-216-065-91	RES-CHIP	4.7K 5% 1/10W (KV-32FV26/34FX260/34FX260C ONLY)
R1234	1-216-091-00	RES-CHIP	56K 5% 1/10W	R2007	1-216-041-00	RES-CHIP	470 5% 1/10W (KV-32FV26/34FX260/34FX260C ONLY)
R1235	1-216-013-00	RES-CHIP	33 5% 1/10W	R2008	1-216-025-11	RES-CHIP	100 5% 1/10W (KV-32FV26/34FX260/34FX260C ONLY)
R1236	1-216-097-11	RES-CHIP	100K 5% 1/10W	R2009	1-216-025-11	RES-CHIP	100 5% 1/10W (KV-32FV26/34FX260/34FX260C ONLY)
R1237	1-216-089-11	RES-CHIP	47K 5% 1/10W	R2010	1-216-001-00	RES-CHIP	10 5% 1/10W (KV-32FV26/34FX260/34FX260C ONLY)
R1238	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R2011	1-216-041-00	RES-CHIP	470 5% 1/10W
R1240	1-216-295-11	SHORT		R2015	1-216-081-00	RES-CHIP	22K 5% 1/10W
R1242	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R2016	1-216-081-00	RES-CHIP	22K 5% 1/10W
R1243	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R2017	1-216-295-11	SHORT	
R1244	1-216-049-11	RES-CHIP	1K 5% 1/10W	R2018	1-216-295-11	SHORT	
R1245	1-216-049-11	RES-CHIP	1K 5% 1/10W	R2019	1-216-295-11	SHORT	
R1261	1-216-025-11	RES-CHIP	100 5% 1/10W	R2022	1-216-049-11	RES-CHIP	1K 5% 1/10W (KV-32FV26/34FX260/34FX260C ONLY)
R1263	1-216-295-11	SHORT		R2023	1-216-049-11	RES-CHIP	1K 5% 1/10W (KV-32FV26/34FX260/34FX260C ONLY)
R1264	1-216-049-11	RES-CHIP	1K 5% 1/10W	R2024	1-216-097-11	RES-CHIP	100K 5% 1/10W
R1265	1-216-001-00	RES-CHIP	10 5% 1/10W	R2027	1-216-049-11	RES-CHIP	1K 5% 1/10W
R1266	1-216-041-00	RES-CHIP	470 5% 1/10W	R2028	1-216-049-11	RES-CHIP	1K 5% 1/10W
R1267	1-216-025-11	RES-CHIP	100 5% 1/10W	R2029	1-216-043-91	RES-CHIP	560 5% 1/10W
R1268	1-216-049-11	RES-CHIP	1K 5% 1/10W	R2030	1-216-043-91	RES-CHIP	560 5% 1/10W
R1269	1-216-041-00	RES-CHIP	470 5% 1/10W	R2031	1-216-067-00	RES-CHIP	5.6K 5% 1/10W
R1270	1-216-049-11	RES-CHIP	1K 5% 1/10W	R2032	1-216-067-00	RES-CHIP	5.6K 5% 1/10W
R1271	1-216-001-00	RES-CHIP	10 5% 1/10W				
R1272	1-216-655-11	METAL CHIP	1.5K 0.50% 1/10W				
R1273	1-208-788-11	METAL CHIP	1.8K 0.50% 1/10W				
R1276	1-216-049-11	RES-CHIP	1K 5% 1/10W				
R1277	1-216-025-11	RES-CHIP	100 5% 1/10W				
R1279	1-216-025-11	RES-CHIP	100 5% 1/10W				
R1281	1-216-295-11	SHORT					
R1285	1-216-041-00	RES-CHIP	470 5% 1/10W				
R1287	1-216-295-11	SHORT					
R1288	1-216-295-11	SHORT					



Note:

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R2033	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R2103	1-216-017-91	RES-CHIP 47 5% 1/10W	
R2034	1-216-057-00	RES-CHIP	2.2K 5% 1/10W			(KV-32FV26/34FX260/34FX260C ONLY)	
R2035	1-208-776-11	METAL CHIP	560 0.50% 1/10W	R2104	1-216-295-11	SHORT	
R2036	1-208-775-11	METAL CHIP	510 0.50% 1/10W	R2105	1-216-295-11	SHORT	
R2037	1-216-051-00	RES-CHIP	1.2K 5% 1/10W	R2106	1-216-295-11	SHORT	
R2038	1-216-033-00	RES-CHIP	220 5% 1/10W	R2107	1-216-295-11	SHORT	
R2039	1-216-047-91	RES-CHIP	820 5% 1/10W	R2113	1-216-017-91	RES-CHIP 47 5% 1/10W	
R2040	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R2115	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R2041	1-216-047-91	RES-CHIP	820 5% 1/10W	R2153	1-216-295-11	SHORT	
R2042	1-216-075-00	RES-CHIP	12K 5% 1/10W	R2201	1-216-022-00	RES-CHIP 75 5% 1/10W	
R2043	1-216-085-00	RES-CHIP	33K 5% 1/10W	R2202	1-216-022-00	RES-CHIP 75 5% 1/10W	
R2044	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R2203	1-216-022-00	RES-CHIP 75 5% 1/10W	
R2046	1-216-075-00	RES-CHIP	12K 5% 1/10W	R2204	1-216-295-11	SHORT	
R2047	1-216-085-00	RES-CHIP	33K 5% 1/10W	R3303	1-216-295-11	SHORT	
R2048	1-216-049-11	RES-CHIP	1K 5% 1/10W	R3304	1-216-295-11	SHORT	
R2049	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R3305	1-216-043-91	RES-CHIP 560 5% 1/10W	
R2050	1-216-017-91	RES-CHIP	47 5% 1/10W	R3308	1-216-033-00	RES-CHIP 220 5% 1/10W	
R2051	1-216-049-11	RES-CHIP	1K 5% 1/10W	R3310	1-216-033-00	RES-CHIP 220 5% 1/10W	
R2052	1-216-049-11	RES-CHIP	1K 5% 1/10W	R3312	1-216-037-00	RES-CHIP 330 5% 1/10W	
R2053	1-216-041-00	RES-CHIP	470 5% 1/10W	R3313	1-216-025-11	RES-CHIP 100 5% 1/10W	
R2054	1-216-041-00	RES-CHIP	470 5% 1/10W	R3314	1-216-025-11	RES-CHIP 100 5% 1/10W	
R2055	1-216-017-91	RES-CHIP	47 5% 1/10W	R3316	1-216-295-11	SHORT	
R2056	1-216-067-00	RES-CHIP	5.6K 5% 1/10W	R3319	1-216-295-11	SHORT	
R2057	1-216-049-11	RES-CHIP	1K 5% 1/10W	R3320	1-216-295-11	SHORT	
R2058	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R3322	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R2059	1-216-049-11	RES-CHIP	1K 5% 1/10W	R3323	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R2060	1-216-025-11	RES-CHIP	100 5% 1/10W	R3324	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R2061	1-216-043-91	RES-CHIP	560 5% 1/10W	R3327	1-216-295-11	SHORT	
R2062	1-216-105-91	RES-CHIP	220K 5% 1/10W	R3343	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R2063	1-216-089-11	RES-CHIP	47K 5% 1/10W	R3344	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R2064	1-216-049-11	RES-CHIP	1K 5% 1/10W	R3345	1-216-295-11	SHORT	
R2065	1-216-049-11	RES-CHIP	1K 5% 1/10W	R3346	1-216-049-11	RES-CHIP 1K 5% 1/10W	
		(KV-32FV26/34FX260/34FX260C ONLY)		R3347	1-216-061-00	RES-CHIP 3.3K 5% 1/10W	
R2066	1-216-033-00	RES-CHIP	220 5% 1/10W	R3348	1-216-057-00	RES-CHIP 2.2K 5% 1/10W	
R2067	1-216-048-00	RES-CHIP	910 5% 1/10W	R3350	1-216-295-11	SHORT	
R2068	1-216-295-11	SHORT		R3355	1-216-295-11	SHORT	
R2069	1-208-776-11	METAL CHIP	560 0.50% 1/10W	R3357	1-216-295-11	SHORT	
R2070	1-216-646-11	METAL CHIP	620 0.50% 1/10W	R3358	1-216-033-00	RES-CHIP 220 5% 1/10W	
R2071	1-216-067-00	RES-CHIP	5.6K 5% 1/10W	R3359	1-216-047-91	RES-CHIP 820 5% 1/10W	
R2072	1-216-043-91	RES-CHIP	560 5% 1/10W	R3360	1-216-053-00	RES-CHIP 1.5K 5% 1/10W	
R2073	1-216-049-11	RES-CHIP	1K 5% 1/10W	R3361	1-216-045-00	RES-CHIP 680 5% 1/10W	
R2074	1-216-025-11	RES-CHIP	100 5% 1/10W	R3370	1-216-295-11	SHORT	
R2076	1-216-049-11	RES-CHIP	1K 5% 1/10W	R3374	1-216-295-11	SHORT	
R2077	1-216-049-11	RES-CHIP	1K 5% 1/10W	R3375	1-216-295-11	SHORT	
R2078	1-216-041-00	RES-CHIP	470 5% 1/10W	R3376	1-216-295-11	SHORT	
R2079	1-216-049-11	RES-CHIP	1K 5% 1/10W	R3377	1-216-295-11	SHORT	
R2092	1-216-055-00	RES-CHIP	1.8K 5% 1/10W	R3378	1-216-295-11	SHORT	
R2093	1-216-055-00	RES-CHIP	1.8K 5% 1/10W	R3379	1-216-043-91	RES-CHIP 560 5% 1/10W	
				R3380	1-216-033-00	RES-CHIP 220 5% 1/10W	

Note:

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
CRYSTAL							
X2001	1-767-606-11	VIBRATOR, CRYSTAL		C1947	1-136-165-00	FILM	0.1 μ F 5% 50V
X2002	1-767-367-21	VIBRATOR, CERAMIC (KV-32FV26/34FX260/34FX260C ONLY)		C1948	1-164-161-11	CERAMIC CHIP	0.0022 μ F 10% 50V
X3302	1-781-929-21	VIBRATOR, CRYSTAL		C1961	1-129-725-00	FILM	0.082 μ F 5% 400V
				C1962	1-163-021-91	CERAMIC CHIP	0.01 μ F 10% 50V
				C1965	1-135-881-11	FILM	0.01 μ F 5% 630V
				C1966	1-137-378-11	MYLAR	0.22 μ F 5% 50V
				C1968	1-137-378-11	MYLAR	0.22 μ F 5% 50V
				C1972	1-104-664-11	ELECT	47 μ F 20% 25V
				C1974	1-104-664-11	ELECT	47 μ F 20% 25V
				CONNECTOR			
				CN941 *	1-564-511-11	PLUG, CONNECTOR 8P	
				CN942 *	1-564-508-11	PLUG, CONNECTOR 5P	
				CN961 *	1-770-723-11	CONNECTOR, BOARD TO BOARD 8P	
				CN981 *	1-564-506-11	PLUG, CONNECTOR 3P	
				DIODE			
				D941	8-719-991-33	DIODE 1SS133T-77	
				D943	8-719-991-33	DIODE 1SS133T-77	
				D944	8-719-991-33	DIODE 1SS133T-77	
				D945	8-719-109-89	DIODE MTZJ-T-77-5.6C	
				D946	8-719-110-88	DIODE MTZJ-T-77-39	
				D947	8-719-110-88	DIODE MTZJ-T-77-39	
				D950	8-719-991-33	DIODE 1SS133T-77	
				D951	8-719-991-33	DIODE 1SS133T-77	
				D962	8-719-991-33	DIODE 1SS133T-77	
				D963	8-719-073-01	DIODE MA111-TX	
				D964	8-719-210-21	DIODE ERA82-004TP5	
				D966	8-719-075-41	DIODE PR1004GT	
				D1961	8-719-991-33	DIODE 1SS133T-77	
				D1962	8-719-991-33	DIODE 1SS133T-77	
				FERRITE BEAD			
				FB901	1-410-397-21	FERRITE	1.1 μ H
				FB902	1-410-397-21	FERRITE	1.1 μ H
				IC			
				IC961	8-759-803-42	IC LA6500-FA	
				IC962	8-759-659-67	IC NJM2903D	
				IC963	8-759-659-67	IC NJM2903D	
				IC964	8-759-700-42	IC NJM2904D	
				IC965	8-759-701-59	IC NJM78M09FA	
				COIL			
				L961	1-459-104-00	COIL, WITH CORE	
				L964	1-406-989-21	INDUCTOR	10mH



* A-1375-187-A WA COMPLETE PC BOARD

4-382-854-11 SCREW (M3X10), P, SW (+)

CAPACITOR

C941	1-126-942-61	ELECT	1000 μ F	20%	25V
C944	1-126-964-11	ELECT	10 μ F	20%	50V
C946	1-104-665-11	ELECT	100 μ F	20%	25V
C947	1-104-664-11	ELECT	47 μ F	20%	25V
C949	1-161-830-00	CERAMIC	0.0047 μ F		500V
C950	1-126-941-11	ELECT	470 μ F	20%	25V
C951	1-107-645-11	ELECT	22 μ F	20%	160V
C952	1-104-999-11	MYLAR	0.1 μ F	10%	200V
C953	1-106-383-00	MYLAR	0.047 μ F	10%	200V
C954	1-130-471-00	MYLAR	0.001 μ F	5%	50V
C955	1-107-667-11	ELECT	2.2 μ F	20%	160V
C956	1-130-471-00	MYLAR	0.001 μ F	5%	50V
C957	1-106-383-00	MYLAR	0.047 μ F	10%	200V
C958	1-126-941-11	ELECT	470 μ F	20%	25V
C960	1-163-021-91	CERAMIC CHIP	0.01 μ F	10%	50V
C961	1-164-004-11	CERAMIC CHIP	0.1 μ F	10%	25V
C962	1-126-964-11	ELECT	10 μ F	20%	50V
C963	1-126-963-11	ELECT	4.7 μ F	20%	50V
C964	1-110-501-11	CERAMIC CHIP	0.33 μ F	10%	16V
C965	1-104-664-11	ELECT	47 μ F	20%	25V
C966	1-126-960-11	ELECT	1 μ F	20%	50V
C967	1-126-964-11	ELECT	10 μ F	20%	50V
C968	1-163-021-91	CERAMIC CHIP	0.01 μ F	10%	50V
C970	1-163-021-91	CERAMIC CHIP	0.01 μ F	10%	50V
C971	1-104-664-11	ELECT	47 μ F	20%	25V
C972	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C973	1-163-021-91	CERAMIC CHIP	0.01 μ F	10%	50V
C974	1-137-150-11	MYLAR	0.01 μ F	5%	50V
C976	1-130-967-00	FILM	0.0027 μ F	5%	50V
C977	1-104-760-11	CERAMIC CHIP	0.047 μ F	10%	50V
C1941	1-126-941-11	ELECT	470 μ F	20%	25V
C1946	1-136-165-00	FILM	0.1 μ F	5%	50V



Note:

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
TRANSISTOR				R965	1-216-077-91	RES-CHIP	15K 5% 1/10W
Q941	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		R966	1-216-073-00	RES-CHIP	10K 5% 1/10W
Q942	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX		R967	1-216-071-00	RES-CHIP	8.2K 5% 1/10W
Q943	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		R968	1-216-061-00	RES-CHIP	3.3K 5% 1/10W
Q944	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		R969	1-216-025-11	RES-CHIP	100 5% 1/10W
Q945	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		R970	1-208-822-11	METAL CHIP	47K 0.50% 1/10W
Q946	8-729-045-05	TRANSISTOR 2SA2005		R971	1-216-049-11	RES-CHIP	1K 5% 1/10W
Q947	8-729-045-04	TRANSISTOR 2SC5511		R972	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
Q948	8-719-914-43	DIODE DAN202K-T-146		R973	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
Q949	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX		R974	1-208-808-11	METAL CHIP	12K 0.50% 1/10W
Q961	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		R975	1-216-073-00	RES-CHIP	10K 5% 1/10W
Q962	8-729-119-76	TRANSISTOR 2SA1309A-QRSTA		R976	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
Q963	8-729-119-76	TRANSISTOR 2SA1309A-QRSTA		R977	1-249-401-11	CARBON	47 5% 1/4W
Q965	8-729-931-45	TRANSISTOR IRF614		R978	1-216-073-00	RES-CHIP	10K 5% 1/10W
Q966	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX		R979	1-216-033-00	RES-CHIP	220 5% 1/10W
Q967	8-729-140-97	TRANSISTOR 2SB734-T-34		R980	1-216-073-00	RES-CHIP	10K 5% 1/10W
Q968	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		R981	1-216-081-00	RES-CHIP	22K 5% 1/10W
Q969	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		R982	1-216-051-00	RES-CHIP	1.2K 5% 1/10W
Q1961	8-729-140-97	TRANSISTOR 2SB734-T-34		R983	1-249-381-11	CARBON	1 5% 1/4W
Q1963	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX		R984	1-249-383-11	CARBON	1.5 5% 1/4W
Q1964	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX		R985	1-215-421-00	METAL	1K 1% 1/4W
Q1966	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX		R986	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
Q1967	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX		R988	1-215-429-00	METAL	2.2K 1% 1/4W
RESISTOR				R990	1-216-025-11	RES-CHIP	100 5% 1/10W
R941	1-249-420-11	CARBON	1.8K 5% 1/4W	R991	1-208-800-11	METAL CHIP	5.6K 0.50% 1/10W
R943	1-216-033-00	RES-CHIP	220 5% 1/10W	R992	1-208-794-11	METAL CHIP	3.3K 0.50% 1/10W
R944	1-216-049-11	RES-CHIP	1K 5% 1/10W	R993	1-216-049-11	RES-CHIP	1K 5% 1/10W
R945	1-216-049-11	RES-CHIP	1K 5% 1/10W	R994	1-216-025-11	RES-CHIP	100 5% 1/10W
R946	1-215-888-00	METAL OXIDE	220 5% 2W	R995	1-216-051-00	RES-CHIP	1.2K 5% 1/10W
R947	1-216-025-11	RES-CHIP	100 5% 1/10W	R1941	1-260-312-11	CARBON	47 5% 1/2W
R949	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R1942	1-249-387-11	CARBON	3.3 5% 1/4W
R950	1-216-049-11	RES-CHIP	1K 5% 1/10W	R1943	1-249-414-11	CARBON	560 5% 1/4W
R951	1-216-049-11	RES-CHIP	1K 5% 1/10W	R1944	1-249-432-11	CARBON	18K 5% 1/4W
R952	1-216-041-00	RES-CHIP	470 5% 1/10W	R1945	1-215-914-11	METAL OXIDE	330 5% 3W
R953	1-216-021-00	RES-CHIP	68 5% 1/10W	R1946	1-249-417-11	CARBON	1K 5% 1/4W
R954	1-216-033-00	RES-CHIP	220 5% 1/10W	R1947	1-249-432-11	CARBON	18K 5% 1/4W
R955	1-216-047-91	RES-CHIP	820 5% 1/10W	R1948	1-249-414-11	CARBON	560 5% 1/4W
R956	1-216-025-11	RES-CHIP	100 5% 1/10W	R1949	1-249-387-11	CARBON	3.3 5% 1/4W
R957	1-216-073-00	RES-CHIP	10K 5% 1/10W	R1950	1-249-401-11	CARBON	47 5% 1/4W
R958	1-216-025-11	RES-CHIP	100 5% 1/10W	R1951	1-216-097-11	RES-CHIP	100K 5% 1/10W
R959	1-216-021-00	RES-CHIP	68 5% 1/10W	R1952	1-216-097-11	RES-CHIP	100K 5% 1/10W
R960	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R1953	1-216-085-00	RES-CHIP	33K 5% 1/10W
R961	1-216-091-00	RES-CHIP	56K 5% 1/10W	R1954	1-216-089-11	RES-CHIP	47K 5% 1/10W
R962	1-216-077-91	RES-CHIP	15K 5% 1/10W	R1955	1-208-808-11	METAL CHIP	12K 0.50% 1/10W
R963	1-216-065-91	RES-CHIP	4.7K 5% 1/10W	R1956	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R964	1-216-073-00	RES-CHIP	10K 5% 1/10W	R1957	1-216-295-11	SHORT	
				R1958	1-216-061-00	RES-CHIP	3.3K 5% 1/10W
				R1959	1-216-073-00	RES-CHIP	10K 5% 1/10W

Note:

The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R1960	1-216-037-00	RES-CHIP	330 5% 1/10W				
R1961	1-208-824-11	METAL CHIP	56K 0.50% 1/10W				
R1962	1-208-806-11	METAL CHIP	10K 0.50% 1/10W				
R1963 \triangle	1-216-033-00	RES-CHIP	220 5% 1/10W				
R1964	1-216-057-00	RES-CHIP	2.2K 5% 1/10W				
R1967	1-215-489-00	METAL	680K 1% 1/4W				
R1969	1-216-073-00	RES-CHIP	10K 5% 1/10W				
R1970	1-216-065-91	RES-CHIP	4.7K 5% 1/10W				
R1971	1-216-121-11	RES-CHIP	1M 5% 1/10W				
R1972	1-216-073-00	RES-CHIP	10K 5% 1/10W				
R1973	1-216-035-00	RES-CHIP	270 5% 1/10W				
R1975	1-208-808-11	METAL CHIP	12K 0.50% 1/10W				
R1976	1-216-061-00	RES-CHIP	3.3K 5% 1/10W				
R1978	1-216-025-11	RES-CHIP	100 5% 1/10W				
R1980	1-216-041-00	RES-CHIP	470 5% 1/10W				
R1981	1-216-081-00	RES-CHIP	22K 5% 1/10W				
R1982	1-216-081-00	RES-CHIP	22K 5% 1/10W				
R1983	1-216-073-00	RES-CHIP	10K 5% 1/10W				
R1984	1-216-089-11	RES-CHIP	47K 5% 1/10W				
R1987	1-216-097-11	RES-CHIP	100K 5% 1/10W				
R1989	1-208-818-11	METAL CHIP	33K 0.50% 1/10W				
R1990	1-216-089-11	RES-CHIP	47K 5% 1/10W				
R1991	1-216-081-00	RES-CHIP	22K 5% 1/10W				
R1992	1-216-057-00	RES-CHIP	2.2K 5% 1/10W				
R2962	1-215-885-00	METAL OXIDE	68 5% 2W				
R2963	1-215-885-00	METAL OXIDE	68 5% 2W				
R2965	1-216-065-91	RES-CHIP	4.7K 5% 1/10W				
R2968	1-216-065-91	RES-CHIP	4.7K 5% 1/10W				
R2969	1-216-065-91	RES-CHIP	4.7K 5% 1/10W				
R2971	1-216-089-11	RES-CHIP	47K 5% 1/10W				
R2972	1-216-113-00	RES-CHIP	470K 5% 1/10W				
R2973	1-216-025-11	RES-CHIP	100 5% 1/10W				
R2975	1-216-061-00	RES-CHIP	3.3K 5% 1/10W				
R2976	1-216-025-11	RES-CHIP	100 5% 1/10W				
R2979	1-216-097-11	RES-CHIP	100K 5% 1/10W				
R2980	1-216-097-11	RES-CHIP	100K 5% 1/10W				
		VARIABLE RESISTOR					
RV941	1-238-019-11	RES, ADJ, CARBON 47K					
						ACCESSORIES	
				*	4-041-259-01	BAG, PROTECTION (ALL EXCEPT KV-32FV16)	
				*	4-053-658-01	BAG, PROTECTION (KV-32FV16 ONLY)	
				*	4-069-471-01	CARTON, INDIVIDUAL (KV-32FV16 ONLY)	
				*	4-069-471-11	CARTON, INDIVIDUAL (ALL EXCEPT KV-32FV16)	
					4-068-786-02	CUSHION ASSY, UPPER (KV-32FV16 ONLY)	
				*	4-068-786-12	CUSHION ASSY, UPPER (ALL EXCEPT KV-32FV16)	
				*	4-068-786-02	CUSHION ASSY, UPPER (KV-32FV16 ONLY)	
				*	4-068-789-01	CUSHION ASSY, LOWER (KV-32FV16 ONLY)	
				*	4-068-789-11	CUSHION ASSY, LOWER (ALL EXCEPT KV-32FV16)	
					8-953-742-90	HEADPHONE MDR-IF0230//K SET (KV-32FV26/34FX260/34FX260C ONLY)	
					4-075-587-21	MANUAL, INSTRUCTION (KV-32FV26 ONLY)	
					4-075-587-31	MANUAL, INSTRUCTION (KV-32FV26CND ONLY)	
					4-075-587-22	MANUAL, INSTRUCTION (KV-32FV16 ONLY)	
					4-075-588-41	MANUAL, INSTRUCTION (KV-34FV16/34FV16C/34FX260/34FX260C ONLY)	
						REMOTE COMMANDER	
					1-418-465-11	REMOTE COMMANDER (RM-Y170) (KV-32FV26/34FX260/34FX260C ONLY)	
					1-418-496-11	REMOTE COMMANDER (RM-Y171) (KV-32FV16/34FV16/34FV16C ONLY)	
					4-978-977-01	BATTERY COVER (RM-Y170/RM-Y171)	

