

# PCM-R500

## SERVICE MANUAL

Ver 1.1 2002.01

US Model  
Canadian Model  
AEP Model



|                                    |         |
|------------------------------------|---------|
| Model Name Using Similar Mechanism | DTC-A8  |
| Tape Transport Mechanism Type      | DATM-55 |

### SPECIFICATIONS

|  |  |
|--|--|
| <b>Recording section</b>               |  |
| <b>Tape</b>                            | Digital audio tape                                       |
| <b>Recording head</b>                  | Rotary head  |
| <b>Recording time</b>                  | Standard: 120 minutes<br>Long-play: 240 minutes (DT-120) |
| <b>Tape speed</b>                      | Standard: 8.15 mm/s<br>Long-play: 4.075 mm/s             |
| <b>Drum rotation</b>                   | Standard: 2,000 rpm<br>Long-play: 1,000 rpm              |
| <b>Error correction</b>                | Double-encoded Reed Solomon code                         |
| <b>Tape section</b>                    |  |
| <b>Track pitch</b>                     | 13.6 $\mu$ m (20.4 $\mu$ m)                              |
| <b>Sampling frequency</b>              | 48 kHz, 44.1 kHz, 32 kHz                                 |
| <b>Modulation system</b>               | 8-10 modulation  |
| <b>Transfer rate</b>                   | 2.46 Mbit/sec  |
| <b>Number of channels</b>              | 2 channels, stereo                                       |
| <b>D / A conversion (quantization)</b> | Standard: 16-bit linear<br>Long-play: 12-bit non-linear  |

#### General section

##### Power requirements

| Where purchased | Power requirements |
|-----------------|--------------------|
| U.S.A./Canada   | 120 V AC, 60 Hz    |
| Europe/U.K.     | 230 V AC, 50/60 Hz |

|  |   |
|--|---|
| <b>Power consumption</b>                   | 34W   |
| <b>Dimensions</b>                          | Approx 482 x 145 x 355 mm (w/h/d)<br>(19 x 5 7/8 x 14 inches)<br>(not including rack mount adaptor) |
| <b>Weight</b>                              | Approx 7.2kg (15 lb 14 oz)  |
| <b>Remote commander RM-D757 (supplied)</b> |   |
| <b>Remote control system</b>               | Infrared control  |
| <b>Power requirements</b>                  | 3V DC, with two size-AA (R6) batteries  |
| <b>Dimensions</b>                          | Approx 45 x 210 x 26 mm (w/h/d)<br>(1 7/8 x 8 1/8 x 1 1/16 inches)                                  |
| <b>Weight</b>                              | Approx 100g (3.5 oz) incl. batteries  |

#### Input connectors

##### Analog input

| Connector          | Type            | Input impedance               | Rated input level*       |
|--------------------|-----------------|-------------------------------|--------------------------|
| ANALOG (UNBALANCE) | Phono-plug jack | 47 kilohms                    | -12 dBs                  |
| ANALOG (BALANCE)   | XLR-3 (FEMALE)  | 10 kilohms or more (balanced) | +4 dBs (factory setting) |

##### Digital input

| Connector | Type            | Input impedance     | Rated input level |
|-----------|-----------------|---------------------|-------------------|
| AES/EBU   | XLR-3 (FEMALE)  | 110 ohms (balanced) | —                 |
| COAXIAL   | Phono-plug jack | 75 ohms             | 0.5 Vp-p          |

— Continued on next page —

## DIGITAL AUDIO TAPE DECK

# SONY®

9-960-833-12  
2002A0500-1  
© 2002.1

**Sony Corporation**  
Home Audio Company  
Published by Sony Engineering Corporation

## Output connectors

### Analog Output

| Connector          | Type                   | Output impedance    | Rated output level <sup>a)</sup> | Load impedance     |
|--------------------|------------------------|---------------------|----------------------------------|--------------------|
| ANALOG (UNBALANCE) | Phono-plug jack        | 1 kilohm            | -12 dBs                          | 47 kilohms         |
| ANALOG (BALANCE)   | XLR-3 (MALE)           | 100 ohms (balanced) | +4 dBs (factory setting)         | 10 kilohms or more |
| PHONES             | Stereo phono-plug jack | 100 ohms            | 0.36 mW                          | 32 ohms            |

### Digital Output

| Connector | Type            | Output impedance   | Rated output level | Load impedance |
|-----------|-----------------|--------------------|--------------------|----------------|
| AES/EBU   | XLR-3 (MALE)    | 35 ohms (balanced) | —                  | 110 ohms       |
| COAXIAL   | Phono-plug jack | 75 ohms            | 0.5 Vp-p           | 75 ohms        |

Variable range of analog (BALANCE) input/output reference level<sup>a)</sup>  
+4 dBs to -12 dBs

Maximum analog (BALANCE) output level  
+24 dBs

Remote switch connectors DIN connector (8-pin, parallel)  
Monaural minijack (serial)

### Audio characteristics

Frequency response<sup>b)</sup> Standard: 20-20,000 Hz ( $\pm 0.5$  dB)  
Long-play: 20-14,500 Hz ( $\pm 0.5$  dB)

Signal-to-noise ratio<sup>b)</sup> 90 dB or more (20 kHz LFF, A-Weight filter ON)

Total harmonic distortion<sup>b)</sup> Standard: 0.05% or less  
Long-play: 0.3% or less  
(1 kHz, Reference level \*\* 20 kHz LFF ON)

Wow and flutter Below measurable limit ( $\pm 0.001\%$  W.PEAK)

a) The reference level corresponds to -20 dB on the peak level meters.

b) During analog input with the SBM function off

### Supplied accessories

- AC power cord (1)
- Remote commander (remote) RM-D757 (1)
- Size-AA (R6) batteries (2)
- Screws (M5x12) (4)
- Decorative washers (4)
- Operating instructions (1)
- Warranty card (U.S.A. and Canadian models only) (1)

Design and specifications are subject to change without notice.

## Flexible Circuit Board Repairing


- Keep the temperature of the soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering .

## Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

## MODEL IDENTIFICATION

– Model Number label (Printed in Back Panel) –

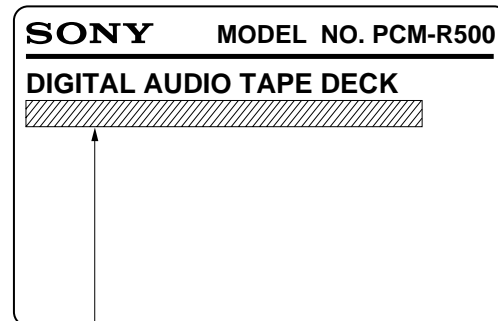

US, Canadian model : AC 120 V 60 Hz 34 W  
AEP Model : AC 230 V ~ 50/60Hz 34 W

## CAUTION

Danger of explosion if battery is incorrectly replaced.  
Replace only with the same or equivalent type recommended by the manufacturer.  
Discard used batteries according to the manufacturer's instructions.

## ADVARSEL!

Lithiumbatteri-Eksplosionsfare ved fejlagtig håndtering.  
Udskiftning må kun ske med batteri af samme fabrikat og type.  
Levér det brugte batteri tilbage til leverandøren.

## ADVARSEL

Ekspløsjonsfare ved feilaktig skifte av batteri.  
Benytt samme batteritype eller en tilsvarende type anbefalt av apparatfabrikanten.  
Brukte batterier kasseres i henhold til fabrikantens instruksjoner.

## VARNING

Explosionsfara vid felaktigt batteribyte.  
Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren.  
Kassera använt batteri enligt fabrikantens instruktion.

## VAROITUS

Paristo voi räjähtää, jos se on virheellisesti asennettu.  
Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin.  
Hävitätä käytetty paristo valmistajan ohjeiden mukaisesti.


**SAFETY CHECK-OUT**

After correcting the original service problem, perform the following safety check before releasing the set to the customer: Check the antenna terminals, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

**LEAKAGE TEST**

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microampers). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers’ instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

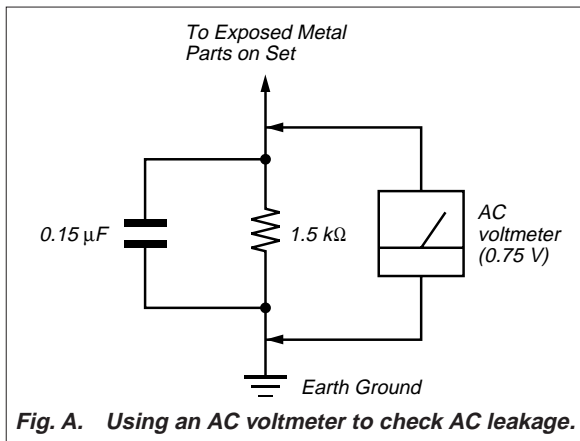

**Fig. A. Using an AC voltmeter to check AC leakage.**

**TABLE OF CONTENTS**

|   |    |
|---|----|
| <b>1. GENERAL</b> .....                               | 4  |
| <b>2. DISASSEMBLY</b> .....                           | 15 |
| <b>3. ADJUSTMENTS</b> .....                           | 19 |
| <b>4. DIAGRAMS</b>                                    |    |
| 4-1. Block Diagrams .....                             | 26 |
| 4-2. Printed Wiring Board – RF Section – .....        | 33 |
| 4-3. Schematic Diagram – RF Section – .....           | 35 |
| 4-4. Printed Wiring Boards – MD Section – .....       | 38 |
| 4-5. Schematic Diagram – MD Section – .....           | 41 |
| 4-6. Printed Wiring Boards – DIGITAL Section – .....  | 45 |
| 4-7. Schematic Diagram – DIGITAL Section – .....      | 49 |
| 4-8. Schematic Diagram – AUDIO Section – .....        | 53 |
| 4-9. Printed Wiring Boards – AUDIO Section – .....    | 57 |
| 4-10. Printed Wiring Boards – DISPLAY Section – ..... | 61 |
| 4-11. Schematic Diagram – DISPLAY Section – .....     | 65 |
| 4-12. IC Pin Function Description .....               | 72 |
| <b>5. EXPLODED VIEWS</b> .....                        | 83 |
| <b>6. ELECTRICAL PARTS LIST</b> .....                 | 91 |

**SAFETY-RELATED COMPONENT WARNING!!**

COMPONENTS IDENTIFIED BY MARK  $\triangle$  OR DOTTED LINE WITH MARK  $\triangle$  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

**ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!**


LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE  $\triangle$  SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

# SECTION 1 GENERAL

## Getting Started

### Hooking Up the System

This section describes how to hook up your deck to an amplifier, stereo mixer, or other digital audio components. Be sure to turn off the power to each component before making the connections.

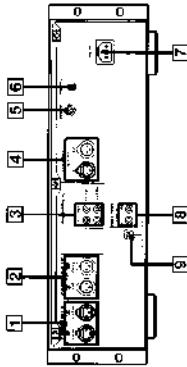


- 1 ANALOG(BALANCE) IN connectors/  
ANALOG(BALANCE) IN LEVEL controls
- 2 ANALOG(BALANCE) OUT connectors/  
ANALOG(BALANCE) OUT LEVEL controls
- 3 ANALOG(BALANCE) IN/OUT connectors
- 4 DIGITAL AES/EBU IN/OUT connectors
- 5 REMOTE 1 connector (For parallel remote)
- 6 REMOTE 2 connector (For serial remote)
- 7 AC IN socket
- 8 DIGITAL COAXIAL IN/OUT connectors
- 9 DIGITAL IN/OUT switch

### Analog connections

For connections through the ANALOG(BALANCE) IN/OUT connectors, use XLR balanced cables.

#### ANALOG(BALANCE) IN/OUT pin polarity



The analog input/output reference level during recording or playback is factory set to +4 dBs within a range of -20 dB to the full for level for both input and output.

To lower the reference level, use a screwdriver to adjust the ANALOG(BALANCE) IN/OUT LEVEL controls on the rear panel for both CH.1 (L) and CH.2 (R). You can adjust the reference level in a range of +4 dBs to -12 dBs. Make sure to set the REC LEVEL CH.1 (L)/2 (R) controls on the front panel to the center point before making this adjustment.

#### For connections through the ANALOG(BALANCE) IN/OUT connectors

Use phono-plug audio connecting cords.


### Digital connections

Use the DIGITAL IN/OUT switch on the rear panel to select the input/output connectors for digital signals. Set the switch to AES/EBU to select the DIGITAL AES/EBU IN/OUT connectors; set it to COAXIAL to select the DIGITAL COAXIAL IN/OUT connectors.

#### For connections through the DIGITAL AES/EBU IN/OUT connectors

Use XLR balanced cables for digital connections.

#### AES/EBU IN/OUT pin polarity



#### For connections through the DIGITAL COAXIAL IN/OUT connectors

Use coaxial digital connecting cords.

### Other connections

To connect a switch box through the REMOTE 1 connector

Refer to "Remote Control Function Using a Parallel Remote Connector" on page 26.

To connect the optional remote through the REMOTE 2 connector

Refer to "The Optional Remote RM-D750" on page 26.

### Connecting AC power cord

Connect the AC power cord (supplied) to the AC IN socket on the rear panel and connect the plug on the other end to a wall outlet.

### Where do I go next?

Now you're ready to use your deck. For basic operations, go to pages 9 to 11; for advanced operations, go to pages after 12.

### Digital Interface

#### Digital input and output connectors

- The following table shows signal formats that correspond to the input and output connectors on the deck.
- The DIGITAL COAXIAL IN connector accepts not only the consumer version of the IEC-958 international digital audio interface standard, but also the broadcasting studio version of the IEC-958 standard used by such DAT decks as the PCM-2300, PCM-2700 or PCM-2700A.

| Type            | Input connector   | Output connector         |
|-----------------|---|--------------------------|
| DIGITAL AES/EBU | AES/EBU format  | AES/EBU format           |
| DIGITAL COAXIAL | IEC-958 for consumer use<br>IEC-958 for broadcasting studio use | IEC-958 for consumer use |

#### Copy information during recording

- Copy information that is recorded on tape during recording varies according to the input connector used and the signal format, as shown in the table below.
- In the case of AES/EBU and the IEC-958 for broadcasting studio use, the digital signal carries no copy information.
- As for the IEC-958 for consumer use, three types of copy information exist: copying possible, first-generation copy permitted, and copying prohibited (Serial Copy Management System).

| Input connector format              | Copy information carried by digital signal | Recording capability on this digital signal | Copy information recorded on tape          |
|-------------------------------------|--|---|--|
| DIGITAL AES/EBU                     | None                                       | Possible                                    | Determined by menu setting pages 24 and 25 |
| IEC-958 for broadcasting studio use | None                                       | Possible                                    | Determined by menu setting pages 24 and 25 |
| DIGITAL COAXIAL                     | Permitted                                  | Possible                                    | Permitted (ID 630)                         |
| IEC-958 for consumer use            | First-generation only                      | Possible                                    | Prohibited (ID 610)                        |
|                                     | Disabled                                   | Possible                                    | Prohibited (ID 610)                        |
| ANALOG(BALANCE/UNBALANCE)           | —  | Possible                                    | Determined by menu setting page 24         |

### Writing start IDs automatically during recording

- When "AUTO" appears in the display during recording, the automatic writing of start IDs takes place according to the input connector used and the signal format, as shown in the table below.
- The condition for the automatic writing of start IDs differs according to the category code in the digital signal, such as an audio input level signal, a DAT start ID code, or a Q-code from a CD track (see pages 24 and 25).

| Input signal (Category) | Signal format (code)              | Automatic writing possible     |                           | Automatic writing prohibited |                    |
|-------------------------|-----------------------------------|--------------------------------|---------------------------|------------------------------|--------------------|
|                         |                                   | audio input level <sup>a</sup> | DAT start ID <sup>b</sup> | Q-code from a CD track       | level <sup>c</sup> |
| DIGITAL AES/EBU         |                                   | ○                              | ○ <sup>d</sup>            | ○                            | ×                  |
|                         | HEC-98 for Broadcasting audio use | ○                              | ○ <sup>e</sup>            | ○                            | ×                  |
| DIGITAL COAXIAL         |                                   | ○                              | ○                         | ○                            | ×                  |
|                         | HEC-98 for consumer use           | ○                              | ○                         | ○                            | ×                  |
|                         | DAT (CD)                          | ○                              | ×                         | ○                            | ○                  |
|                         | (Other)                           | ○                              | ×                         | ×                            | ×                  |
| ANALOG                  |                                   | ○                              | ○                         | ×                            | ×                  |


- a) If the input level remains under the level set in the "L-SY TH" menu longer than the time set in the "L-SY BK" menu (see page 24), the deck writes a start ID when the input level rises above that level.
- b) DAT skip IDs are automatically written in the same way.
- c) Only when connected to the PCM-2600, PCM-2800, PCM-R500 or PCM-R700. When the connected decks consist of a PCM-R500 or PCM-R700, select "on" in the "AES 5-ID" menu of the playback deck.
- d) Only when connected to the PCM-2200, PCM-4700, or PCM-2700A.
- e) Some CD players do not output track information (Q code) in the digital signal.

### Digital signal lock range


- The lock range of a digital signal (signal reception range) is about ±0.1% for a sampling frequency of 48 kHz, 44.1 kHz, or 32 kHz. Variable glitch signals are not receivable.
- When the digital input sampling frequency information does not match the actual sampling frequency, it is possible to record that signal if you change the REC. MODE switch on the front panel to the actual sampling frequency of the signal.

### Setting the Clock

Your deck has a built-in clock to keep track of the current date and time. Once you set the date and time by the menu settings, this information will be recorded on the tape along with the audio signal during recording, allowing you to check the recording date time of the tape during playback at a later time.

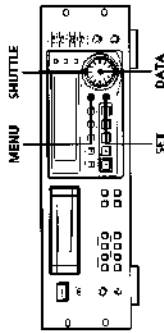

- With the deck stopped, press MENU. The menu appears in the display.
- Turn SHUTTLE to display the "CLK-SET" menu.
- Turn DATA to display "00" and press SET. The year indication flashes.
- Turn DATA to decrease or increase the displayed year, then press SET. The year indication stops flashing and the month indication begins to flash.
- Repeat step 4 until all items have been set. After setting the seconds, press SET to start the clock.



The day of the week is set automatically and is displayed as follows:  
 Sunday: "SU", Monday: "MO", Tuesday: "TU",  
 Wednesday: "WE", Thursday: "TH", Friday: "FR",  
 Saturday: "SA".

### To display the date or time

See "About the Display" on page 16.

You can specify the format (12-hour or 24-hour) for the time display, and display order for the date display.


For details, see "ODEX" or "DATE/IDUR" on page 25.

### For more accurate time recordings

Adjust the clock once a week.

- NOTES**
- When you first set the clock after unpacking the deck, "....." will appear when you press the SET button in step 3. This is normal. Set the clock according to the procedure above.
  - Your deck uses a back-up battery to keep the clock running when the power is turned off. The life of the battery under normal use is approximately seven years. When the battery starts to run down, the clock will stop operating normally. When this occurs, have the battery replaced (for a fee) at your dealer or nearest Sony Service Center.


# Playing a Tape

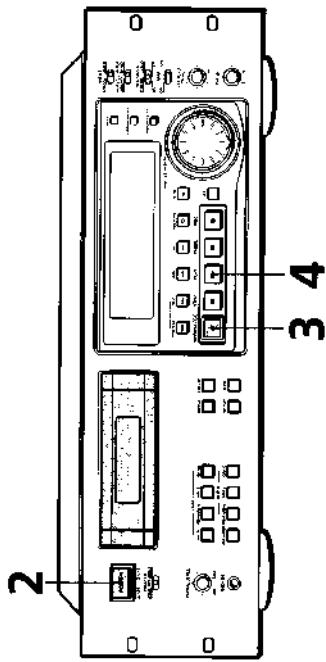

See pages 5 and 6 for hookup information.

- 1 Turn on the amplifier and set the source selector to the position for DALL.
- 2 Press POWER. Make sure that the KEY PROTECT switch is set to OFF (PCM-R700 only) (see page 28).

- 3 Press OPEN/CLOSE  $\blacktriangle$  and insert a cassette.

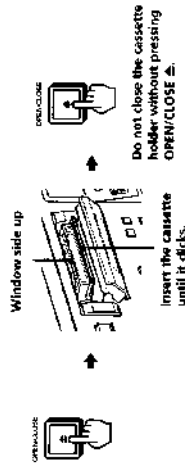

- 4 Press PLAY  $\blacktriangleright$ . The deck starts playing. Adjust the volume on the amplifier.


**To use headphones**

Connect them to the PHONES connector. Use PHONE LEVEL to adjust the volume.

| To  | Press   |
|---|---|
| Stop playing                                      | STOP $\blacksquare$   |
| Pause playing                                     | PAUSE $\blacksquare$ Press the button again or press PLAY $\blacktriangleright$ to resume play.                     |
| Go to the next track or the preceding track       | NEXT $\blacktriangleright$ or PREVIOUS $\blacktriangleleft$   |
| Fast-forward or rewind                            | FF $\blacktriangleright$ or REW $\blacktriangleleft$ when the deck is stopped                                       |
| Fast-forward or rewind while monitoring the sound | FF $\blacktriangleright$ or REW $\blacktriangleleft$ during playback. Release the button to resume normal playback. |
| Take out the cassette                             | OPEN/CLOSE $\blacktriangle$ after stopping playing  |

96W 104M


# Recording on a Tape

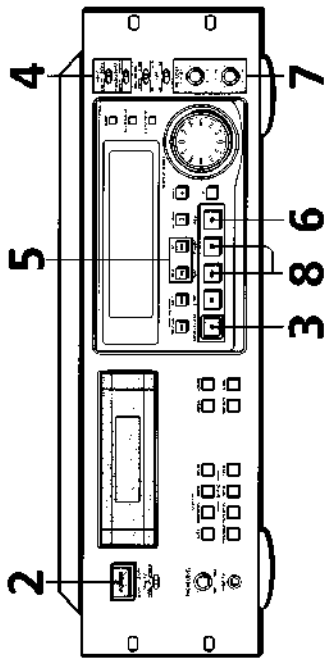

See pages 5 and 6 for hookup information.

- 1 Turn on the amplifier and play the program source you want to record.
- 2 Press POWER. Make sure that the KEY PROTECT switch is set to OFF (PCM-R700 only) (see page 28).

- 3 Press OPEN/CLOSE  $\blacktriangle$  and insert a cassette.

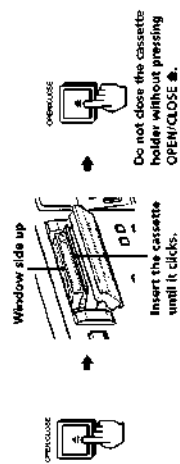


- 4 Use INPUT, ANALOG INPUT, and DIGITAL IN/OUT to select the corresponding input connectors.

| To record through     | INPUT   | ANALOG INPUT | DIGITAL IN/OUT* |
|-----------------------|---------|--------------|-----------------|
| ANALOG (BALANCE) IN   | ANALOG  | BALANCE      | —               |
| ANALOG (UNBALANCE) IN | ANALOG  | UNBALANCE    | —               |
| DIGITAL AES/EBU IN    | DIGITAL | —            | AES/EBU         |
| DIGITAL COAXIAL IN    | DIGITAL | —            | COAXIAL         |


\* The DIGITAL IN/OUT switch is located on the rear panel (see page 3).

- 5 Locate the position where you want to start recording.  
**To record from the beginning of the tape**  
 Press **REW** ◀◀ to rewind the tape to its beginning.  
**To record from the end of the recorded portion**  
 1 Press **REW** ◀◀ to rewind the tape to its beginning.  
 2 Press **FF** ▶▶  
 The deck locates the end of the recorded portion on the tape and stops automatically.  
 6 Press **REC** ●  
 The deck changes to recording pause. Recording does not start yet.  
 7 When recording an analog input signal, adjust the recording level with **REC LEVEL** CH-1(L)/2(R).  
 The recommended recording level is the center point.  
 8 Press **PAUSE** || or **PLAY** ▶▶  
 Recording starts.  
 9 Start playing the program source.  
 When the tape reaches the end, the deck rewinds it automatically to its beginning and stops (Auto Rewind).  
 To  
 Stop recording      **STOP** ■  
 Pause recording      **PAUSE** || Press the button again or press **PLAY** ▶▶ to resume recording.  
 Take out the cassette      **OPEN/CLOSE** ⬇ after stopping recording.

**To prevent accidental erasure**  
 Slide the record-protect tab to the left as shown in the illustration below.

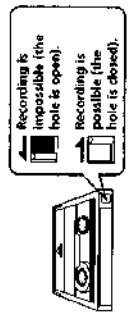

**Things You Should Know Before Recording**  
**The difference between a blank section and a sound-muted section**  
 The deck distinguishes between two kinds of silent sections, which are respectively called a "blank section" or "sound-muted section".

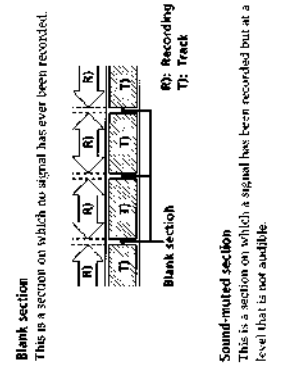

**Important**  
 Make sure no blank sections are created while you are recording. The existence of blank sections within recorded material will make search operations using the **PREVIOUS** ◀◀/**NEXT** ▶▶ buttons impossible or destroy the continuity of the absolute time codes.


**Absolute time codes**  
 The absolute time indicates the elapsed time from the beginning of the tape. Once recorded, the absolute time codes cannot be re-written.

**For accurate recording of absolute time codes**

- If the tape is blank, make sure to start recording from the beginning of the tape.
- Use the Record Muting function (see page 14) to insert spaces between tracks. Do not advance the tape with the **PLAY** ▶▶ or **FF** ▶▶ button.
- To start recording from the middle of a tape, use the End Search function (see page 14) to locate the end of the recorded portion. This will prevent the creation of blank sections.

**Lead-in area**  
 When the deck is loaded with a new cassette tape and it detects the leader tape, the deck can create a lead-in area depending on the menu setting as shown in the figure below. "BB" appears in the display for about 1 second at this time. The lead-in area can be inadvertently erased on another DAT deck if you press the **REC** ● button to start recording from the beginning of the tape without closing the cassette holder first. To prevent this, press the **OPEN/CLOSE** ⬇ button to close the cassette holder before you start recording.

For details on selecting the automatic creation of the lead-in area and the frequency of the signals to be recorded, see "BB-WRT" and "BB-PS" on page 25.

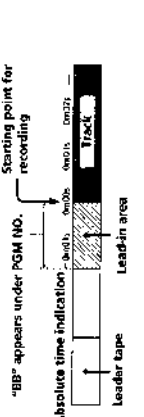


**If "EMPHASIS" appears in the display**  
 The deck is recording a digital signal with emphasis (in the higher frequencies). The recording will also contain the same emphasis.

**If the deck is left in recording pause for more than 10 minutes**  
 Recording pause will be released automatically and the deck will stop for the sake of tape protection. "SOURCE" will appear in the display of the PCM-R500.  
 To resume recording, press the **REC** ● button. The deck will change to recording pause.

**If "UNLOCK" appears in the display**  
 The program source is not connected to the deck properly or is not turned on. Make sure that the program source is properly connected or turned on.

**To adjust the recording level more accurately**  
 While monitoring the sound, turn **REC LEVEL** CH-1 (L)/2 (R) so that the recording level on the peak level meters is at maximum level without entering the **OVER** range.

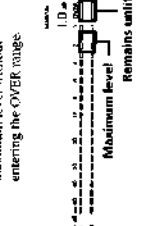

The segments of the peak level meters corresponding to the maximum signal strength remain lit longer than normal. The **MARGIN** indication shows the margin between maximum signal strength and 0dB, changing each time a stronger signal.


**If the level exceeds 0dB**  
 The segments under "OVER" light up and "muddy" flashes in the display. If these segments light steadily, sound distortion may occur. To avoid this, keep the recording level between -12dB and 0dB.

**To reset the margin indication**  
 Press **MARGIN RESET**. The margin indication changes to "...db".

### Setting the Recording Mode

You can select between two recording modes, standard or long, in the following cases:

- When recording an analog input signal with the INPUT switch set to ANALOG
- When recording a digital input signal with a sampling frequency of 32 kHz, with the INPUT switch set to DIGITAL

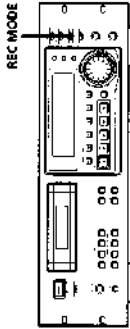

Set REC MODE to select the recording mode.

The following table shows the selectable recording modes and corresponding REC MODE position and sampling frequency for various input signals.

| Input signal      | REC MODE position | Recording mode          |
|-------------------|-------------------|-------------------------|
| Analog            | STANDARD (48)     | Standard play (48kHz)   |
|                   | STANDARD (44)     | Standard play (44.1kHz) |
|                   | LONG              | Long play (52kHz)       |
| Digital (32kHz)   | STANDARD (48)     | Standard play (32kHz)   |
|                   | STANDARD (44)     | Standard play (44.1kHz) |
| Digital (44.1kHz) | STANDARD (48)     | Standard play (44.1kHz) |
|                   | LONG              | Standard play (44.1kHz) |
| Digital (48kHz)   | STANDARD (48)     | Standard play (48kHz)   |
|                   | STANDARD (44)     | Standard play (48kHz)   |
| LONG              | STANDARD (44)     | Standard play (44.1kHz) |
|                   | LONG              | Standard play (48kHz)   |

The recording time in long-play mode (the REC MODE switch set to LONG) is twice as long as standard-play mode.



#### The counter in long-play mode

The displayed tape running time, absolute time and remaining time on the tape are for standard-play mode. Double the time to obtain the corresponding times for long-play mode.




**Note**  
Do not change the INPUT or REC MODE setting while recording. This may cause an error in the "PUSH TIME" display.

### Using the SBM (Super Bit Mapping) Function

The SBM function uses the principles of human hearing and noise-shaping technology to reduce quantizing noise within the frequency band.

You can use the SBM function to record an analog input signal only when the INPUT switch is set to ANALOG and the REC MODE switch to STANDARD (either 48kHz or 44.1kHz).

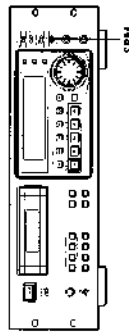


Set SBM to ON. "SBM" appears in the display during recording using the SBM function.



**Note**  
The SBM function operates only during recording. The improved sound produced by the SBM function, however, can be enjoyed during playback, regardless of the SBM switch position or the DAT deck being used.

### Locating the End of the Recorded Portion (End Search)

When recording from the middle of a tape, use End Search to locate the end of the recorded portion. This will prevent the creation of a blank section on the tape.

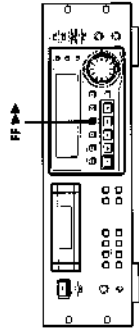

Press FF with the deck stopped. The deck locates the end of the recorded portion (the beginning of the blank portion or the position of the end ID), then stops.

The deck stops at the beginning of any blank section that is 9 seconds or longer, or fast-forwards to the end of the tape if the tape is blank.



#### When you press the REC button while in a blank section


The deck rewinds the tape to the beginning of the blank section and changes to recording pause. "BLANK" and "PUSH" appear in the display while the deck is searching for the beginning of the blank section.



**Note**  
End Search does not operate if you press the FF button while in a blank section.

### Inserting a Sound-Muted Section While Recording (Record Muting)

Use Record Muting to insert a space of about 0.5 to 9.5 seconds between tracks. For details on setting the duration of the blank space, see "REC MUTE" on page 24.

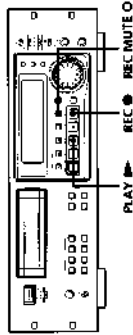

Press REC MUTE where you want to insert a space while the deck is recording or in recording pause. "REC" in the display starts flashing and tape transport continues, but no signal is recorded. After inserting a space, in the display stays on and the deck changes to recording pause.

#### To insert a blank space (of a duration different from that preset by menu setting)

Hold down the REC MUTE button as long as you want. When you release the REC MUTE button, stays on and the deck changes to recording pause. When the preset duration has passed, "PRE" begins to flash faster and the MARGIN indicator shows how long the REC MUTE button has been pressed.

#### To insert a blank space of a duration shorter than the preset value

Press REC while "REC" is flashing. The deck starts recording again.




**Note**  
If you do not create a sound-muted section at the beginning of a tape, you may not be able to move or erase a start II (see page 19) that is recorded within 2 seconds from the beginning of the tape.




## About the Display

You can use the display to show the tape running time, absolute time, playing time of the track, remaining time on the tape, date and time of recording, and current date and time.

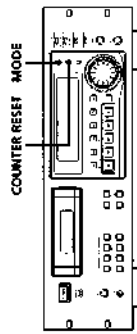

Press MODE repeatedly. Each time you press the MODE button, the displayed information changes as follows.

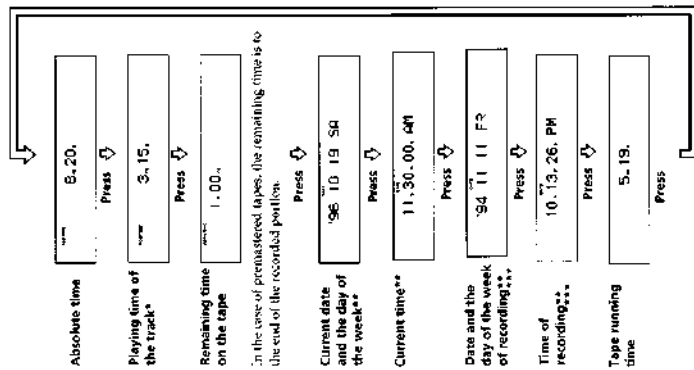

- \* The playing time of the track will not be displayed when the "T-TIMDISP" menu is set to "...". (see page 25).
- \*\* The date and time of recording and the current date and time will not be displayed when the "DATEDISP" menu is set to "...". (see page 25).
- \*\*\* If this information is not recorded on the tape, nothing will appear.

**To reset the tape running time**  
Press COUNTER RESET

When "DATE" appears in the display  
"DATE" remains lit when the date and day of the week or time of recording appears, and flashes when the current date and time appears.

- Notes**
- When playing certain types of premastered tapes, "BIT" may appear momentarily in the display at the beginning of the tape.
  - The playing time of the track does not appear in the following cases:
    - When you start playing from the middle of the track
    - During rewinding
    - In standard-play mode, the remaining time on the tape appears about 10 seconds after you start playing.
    - The displayed remaining time may vary somewhat from the actual remaining time, depending on the tape.

### If "EMPHASIS" appears in the display

The deck is playing an audio signal recorded with emphasis (in the higher frequencies). The deck, however, plays the signal while automatically deemphasizing it (with an attenuation proportional to the degree of emphasis).


### "ERR" appears in the display for 5 seconds or more

- The head is dirty. Clean the head with the DAT cleaning cassette (see page 29).
- The cassette is defective or damaged.



## Locating a Track (AMS\*/Direct Access)

You can locate the tracks in a number of ways, but only after you have recorded start IDs on the tape (see pages 19 to 23). To use Direct Access, program numbers must be recorded on the tape (see pages 19 and 23).

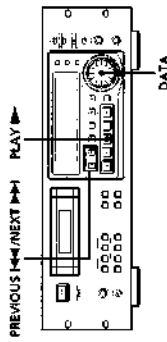

**To locate**

The beginning of the next or succeeding tracks (AMS)  
Press NEXT ▶▶ as many times as you want while playing. For example, to locate the second track ahead, press twice.

The beginning of the current track (AMS)  
Press PREVIOUS ◀◀ once while playing.

The beginning of preceding tracks (AMS)  
Press PREVIOUS ◀◀ as many times as you want while playing. For example, to locate the second track behind, press three times.

- By specifying the program number of a track (Direct Access)
- 1 While the deck is playing or stopped, turn DATA on the display or enter with the program number on the remote.
  - 2 Press PLAY ▶▶.

\* AMS = Automatic Music Sensor


**If you enter the wrong program number during Direct Access**  
If you haven't pressed the PLAY ▶▶ button, turn the DATA dial on the deck (or press the CLEAR button), then enter the correct number on the remote.

**If the deck detects a blank section of 5 seconds or more, end ID, or the end of the tape**  
The deck rewinds the tape automatically to its beginning and stops (Auto Rewind).

**You can make the deck start playing automatically from the beginning of the tape after rewinding (Auto Play)**  
Press the PLAY ▶▶ button while holding down the REW ◀◀ button.

## Locating a Point (Shuttle Play/Mark & Locate)

You can locate a specific point by playing back at a different speed or recording the absolute time code at the point to be located later.

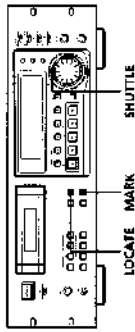

**To locate**

A track using variable speed play (Shuttle Play)  
While the deck is playing, stopped, or paused, turn SHUTTLE.

If the deck was playing or stopped, the deck starts to play when you release the SHUTTLE dial.

If the deck was paused, the deck pauses when you release the SHUTTLE dial.

A particular point on a tape (Mark & Locate)

- 1 While the deck is playing or stopped, press MARK. The absolute time of the point where you pressed the button appears and flashes three times.
- 2 Press LOCATE. The deck locates the point, and stops.

### Playback speed during Shuttle Play

During Shuttle Play, you can vary the playback speed from 0.5 to 2.8 times the normal playback speed, depending on the angle and direction of the SHUTTLE dial. Turn the dial clockwise for forward playback or counterclockwise for reverse playback.

The playback speed will be 4x times normal speed playback when you turn the dial to the left or right fully.

### Note


Shuttle Play should be used only when necessary since prolonged use may damage the tape and drum.

### The point memorized using the Mark & Locate function will be erased when:

- you take out the cassette.
- you turn off the deck.

### Playing Tracks Repeatedly (Repeat Play)

You can play a specific track or all the tracks on the tape repeatedly.

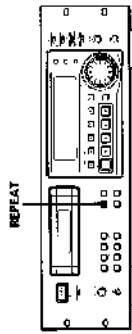

#### Playing all tracks repeatedly

Press REPEAT repeatedly while playing a track until "REPEAT" appears in the display.  
The deck will play all tracks 5 times, then stops.  
If the deck detects either of the following during Repeat Play, it will rewind the tape to its beginning and start playing again.

- A blank section of 9 seconds or more
- The end of the tape or the end ID

#### To stop playing all tracks repeatedly

Press REPEAT repeatedly until "REPEAT" disappears.

#### Note

Repeat Play of all tracks is canceled when you take out the cassette.

#### Playing a track repeatedly

Press REPEAT repeatedly while playing the track you want to repeat until "REPEAT 1" appears in the display.  
The deck plays the current track 5 times and then stops.  
If the deck detects any of the following during Repeat Play, it will rewind the tape to the start ID of the current track and starts playing again from that position.

- The next start ID
- A blank section of 9 seconds or more
- The end of the tape or end ID
- A skip ID with Skip Play activated

#### To stop playing a track repeatedly


Press REPEAT repeatedly until "REPEAT 1" disappears.

#### Note

Repeat Play of a single track is canceled when you take out the cassette.

### Playing Tracks Skipping Specific Portions During Playback (Skip Play)

Please note that skip IDs (see page 19) must be written on the tape before you can use Skip Play.

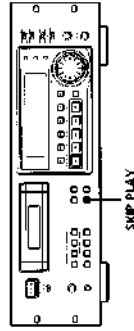

#### Press SKIP PLAY.

"SKIP PLAY" appears in the display. When the deck detects a skip ID, it fast-forwards the tape to next start ID, then resumes playing.

#### To cancel Skip Play


Press SKIP PLAY.  
"SKIP PLAY" disappears.

#### Note

Skip Play is canceled when you take out the cassette.

### Fade-in/Fade-out Playback (Fader) (PCM-R700 only)

You can use the fader to fade-in the beginning of playback or fade-out the end of playback. It's useful when you want to record from DAT.  
You can specify the fade-in and fade-out durations of 0.5 to 9.5 seconds through the menu settings.  
For details, see "FADE IN" and "FADE OUT" on page 25.

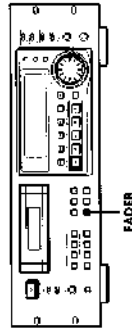

#### Fading in


Press FADER while the deck is in play pause mode.  
"FADE IN" appears in the display and the time display counts backward to "0.0s" as the fade-in takes place.

#### Fading out

Press FADER during playback.  
"FADE OUT" appears in the display and the time display counts backward to "0.0s" as the fade-out takes place. After fading out, the deck automatically enters play pause mode.

### About Sub Codes

In the DAT format, control codes, or sub codes, such as start IDs, skip IDs, and end ID can be recorded on the tape with the audio signal. Since sub codes are written on the tape separately from the audio signal, they have no effect on the audio signal.



#### Start IDs

Start IDs indicate the start of a track, and therefore allow you to locate the position of a track precisely.  
The start IDs are 9 seconds in length (18 seconds in long-play mode) to enable easy detection during fast-forwarding or rewinding.

#### Program numbers

Program numbers serve as track numbers. Occupying the same position as start IDs, a program number allows you to locate specific tracks or play tracks in a specific order.

#### Skip IDs

Skip IDs indicate tracks or recorded portions that are to be skipped while playing. Skip IDs are 1 second in length (2 seconds in long play mode).


#### End ID (when the optional remote is used)

An end ID indicates the end of a recording. An end ID is 9 seconds in length (18 seconds in long-play mode).  
When an end ID is detected during playback, playback stops and the deck rewinds the tape to its beginning. If an end ID is detected during fast-forwarding, the tape stops at that point and deck becomes ready for recording from that point.  
You can write and erase an end ID only with the optional remote RM-D750. For details, see "Writing and Erasing an End ID" on page 27.

#### Notes


- The OPEN/CLOSE ▲, STOP ■ and PAUSE II buttons do not work during the writing or erasing of sub codes.
- Writing and erasing of sub codes and renumbering of program numbers are impossible if the record-protect hole on the DAT cassette is open (see page 11).

### Writing Start IDs During Recording

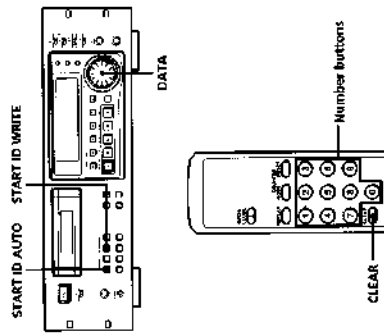

#### Writing start IDs manually during recording

Press **START ID WRITE**.  
 "ID WRITE" appears in the display for a few seconds and the start ID is written on the tape. "START ID" flashes in the display during this time.



**Note**  
 The interval between start IDs must be more than 18 seconds (36 seconds in long-play mode). If the interval is less than 18 seconds (or 36 seconds), the deck may fail to delete the second start ID while playing a tape.

#### Writing start IDs automatically during recording

Press **START ID AUTO** repeatedly until "AUTO" appears in the display.

For details on the condition for the automatic writing of start IDs, see "Writing start IDs automatically during recording" on page 7, and "Memo Operations" on pages 24 and 25.

#### Writing program numbers during recording

Program numbers occupy the same positions as the start IDs and are determined by depending on the following conditions:

- When a program number is displayed**  
 The next program number next by one above when the next start ID is written
- When no program number is displayed ("—" appears instead)**  
 Program numbers are not written even when start IDs are written. To write program numbers, rewind the tape to the nearest start ID to display the program number, and then locate the position where you want to start recording.


#### Specifying the first program number to be assigned

- 1** Pause recording.
- 2** Press the number button(s) on the supplied remote, or turn **DATA** to input the first program number.  
 The number appears in the display.  
 To cancel the number, press the **CLEAR** button on the supplied remote.
- 3** Start recording.  
 A start ID and the assigned program number are written simultaneously.

**Note**  
 During automatic start ID writing, the positioning of some start IDs may be inaccurately or inappropriately positioned away from the beginning of the track. If this happens, you can reposition or erase the start ID later (see "Accurate positioning of sub codes" on pages 21 and 22, and "Erasing Sub Codes" on page 23).

### Writing Sub Codes During Playback

You can write start IDs or skip IDs during playback.

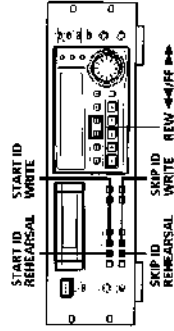


Press **START ID WRITE** or **SKIP ID WRITE**.  
 "ID WRITE" appears in the display for a few seconds and the specified ID is written on the tape at the point you pressed the button.

#### Accurate positioning of sub codes (Rehearsal function)


- 1** During playback, press **REHEARSAL** corresponding to the ID you want when you arrive at the proper position.  
 "REHSL" appears, the corresponding ID indication flashes in the display, and the Rehearsal function repeats a 3-second portion containing the selected position. The repeated portion plays back 8 times, with the remaining number of times appearing to the right of the "REHSL". After 8 times, the deck stops.  
 In the case of a start ID, the 3-second repeated portion starts from the point where you pressed the **REHEARSAL** button.  
 In the case of a skip ID, the 3-second repeated portion ends at the point where you pressed the **REHEARSAL** button.

- 2** Press **REW**, **FF** or **FF** to move the beginning of the repeated portion.  
 Each time you press the **REW**, **FF** or **FF** button, the beginning of the repeated portion shifts backwards or forwards in 0.3-second increments, up to a maximum extent of about 2 seconds (4 seconds in long play mode) in either direction.

When writing a start ID

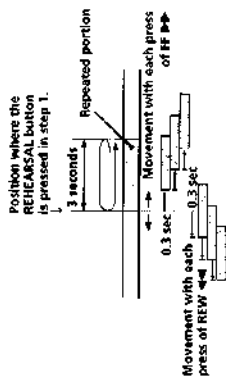

When writing a skip ID

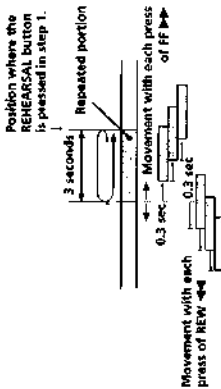


The time in the display shows the shift in position from the time the REHEARSAL button was pressed.

Positioning Start ID




- Press WRITE of the corresponding ID to write the ID. "ID WRITE" appears for a few seconds and the ID is written on the tape at the selected position.
  - Start IDs are 9 seconds long starting from the beginning of the repeated portion.
  - Skip IDs are 1 second long starting from the end of the repeated portion

Newly written IDs positioned by the Rehearsal function



## Adjusting the Position of an Existing Start ID

You can adjust the position of previously recorded start IDs.

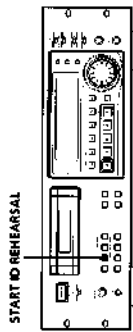


- During playback, press START ID REHEARSAL when you arrive at the existing start ID you want to reposition. The deck rewinds to the beginning of start ID and the Rehearsal function repeats a 3-second portion.
- Do the steps 2 and 3 of "Accurate positioning of sub codes" on pages 21 and 22. You can move the start ID to a maximum extent of about 2 seconds (4 seconds in long play mode) in either direction from its original position.

Notes

- Start IDs written within 10 seconds from the end of the tape may be difficult or impossible to move.
- Existing skip IDs cannot be moved.

## Erasing Sub Codes

You can erase any start ID or skip ID.

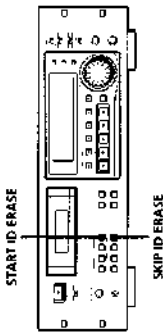

Press either START ID ERASE or SKIP ID ERASE when the ID you want to erase appears in the display. "ERASE" appears in the display as the deck rewinds to the beginning of the ID, then "ID ERASE" appears in the display as the ID is erased.

- In the case of a skip ID, if "SKIP ID" has disappeared by the time you press SKIP ID ERASE, the deck will still erase the skip ID.
- It takes 9 seconds to erase a start ID.
- It takes 1 second to erase a skip ID.
- Program numbers are erased together with start IDs.

You can erase an ID even when it is not displayed

Just press the respective ERASE button. The tape is rewound, and the first ID detected is erased.


Note

A skip ID written at the same position of a start ID is erased when the start ID is erased.

## Renumbering the Program Numbers Automatically (Renumbering Function)

The Renumbering function searches for each start ID from the beginning of the tape and assigns a new program number to each one starting with 1. Use the Renumbering function in the following cases:

- When you've added a start ID while playing the tape.
- When a program number is missing due to an erased start ID.
- When you began recording from the middle of the tape and wrote a program number that already exists, or when one of the start IDs has no program number.

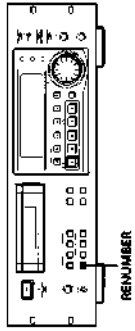

Press RENUMBER while the deck is stopped or playing.

"RENUMBER" flashes in the display and the tape is automatically rewound to its beginning. The deck then starts searching for each successive start ID, writing a new program number for each one starting with 1. "MANUAL REW" stops flashing and "ID WRITE" appears in the display for a few seconds as the deck begins rewriting the program numbers. After renumbering is finished, the deck rewinds the tape automatically to its beginning, then stops.

You can specify any number as the starting number for the renumbering of programs

For details, see "FIRST (PGM. No.)" on page 25.

Note


- The Renumbering function may not function correctly when:
  - A blank section exists on the tape.
  - The interval between two start IDs is less than 18 seconds (36 seconds in long-play mode).
  - A start ID exists within 10 seconds from the end of the tape.




## SECTION 2 DISASSEMBLY

Note: Follow the disassembly procedure in the numerical order given.


### CASE

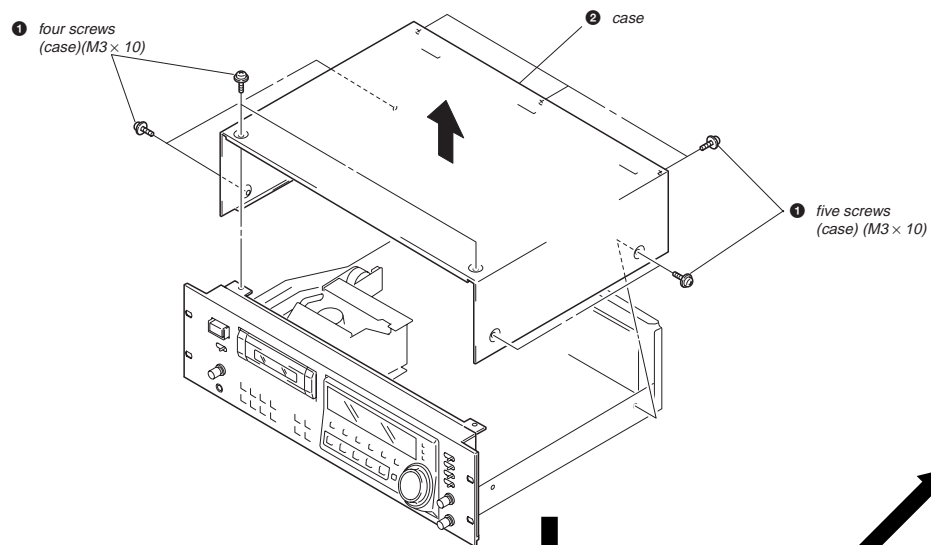


### MECHANISM DECK BLOCK

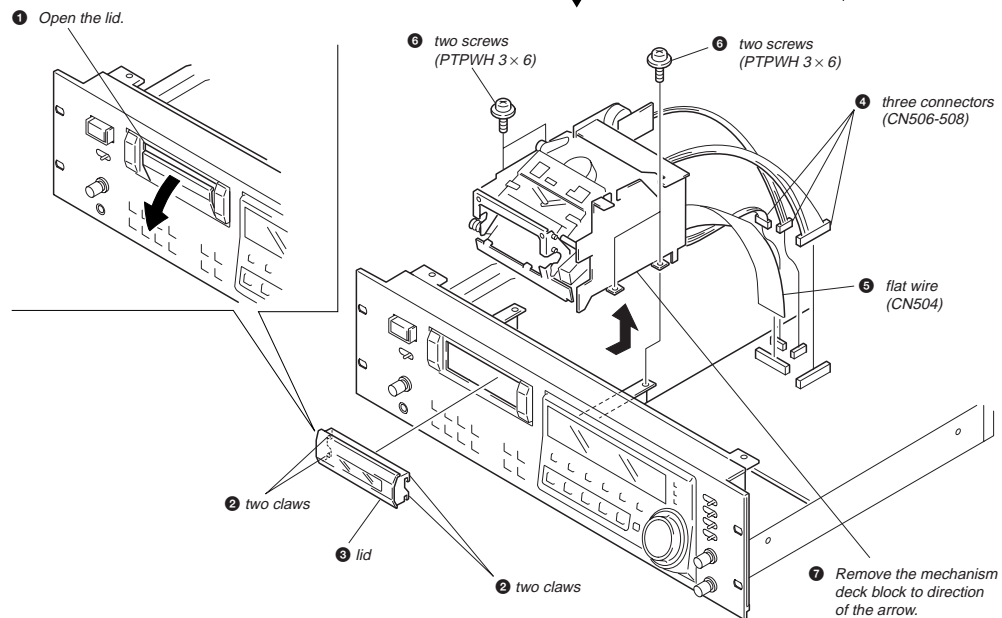


### HOLDER ASS'Y

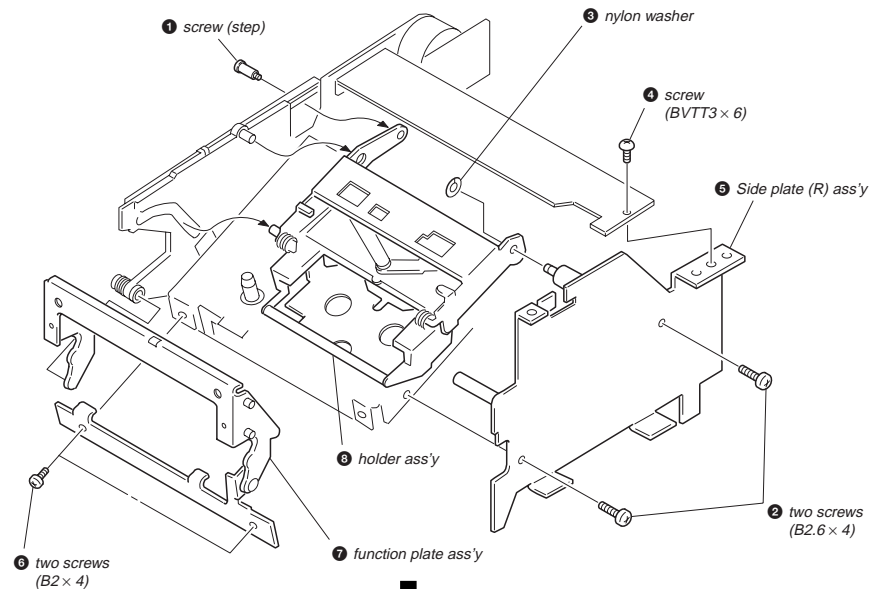


### CASSETTE COMPARTMENT MOTOR ASS'Y

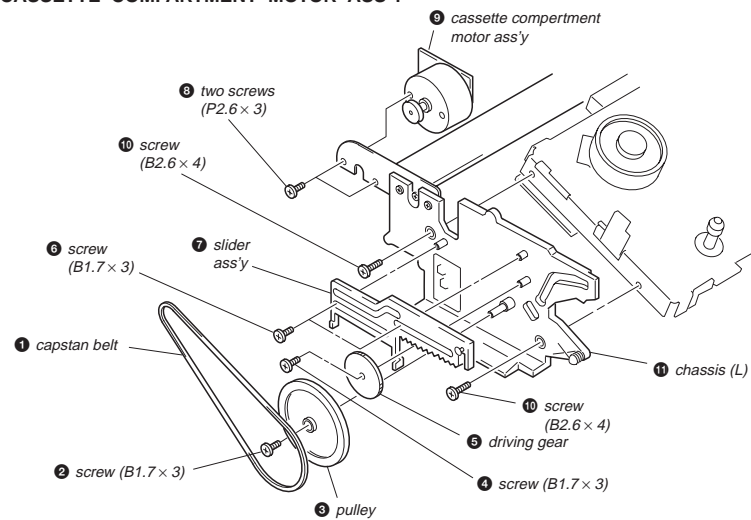


**DRUM**

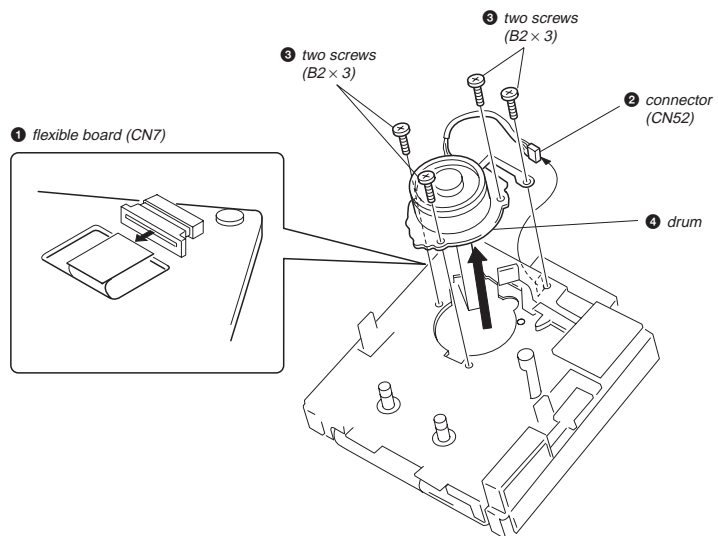

**DRUM DRIVE BOARD, REEL MOTOR**

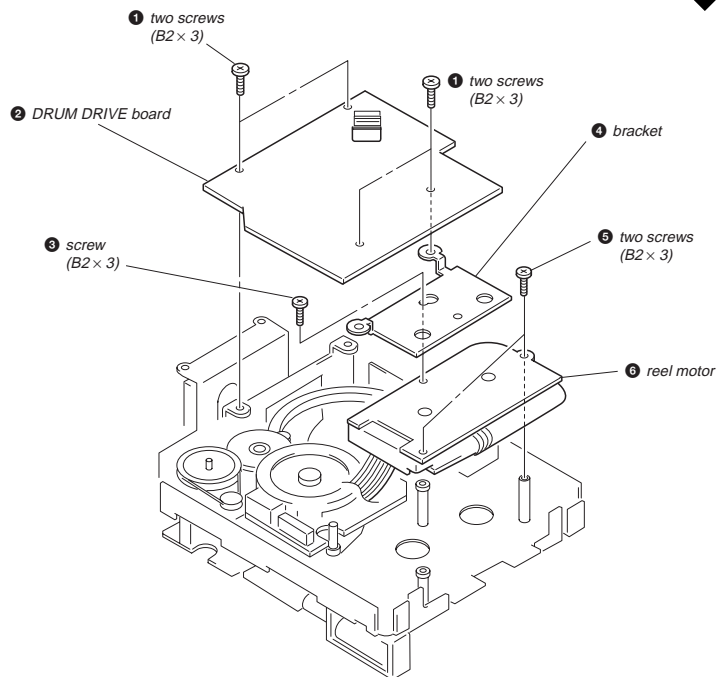


**CAPSTAN MOTOR**

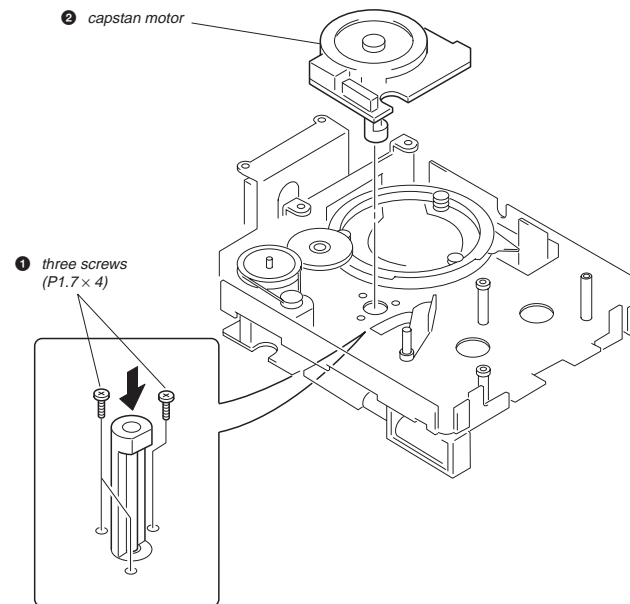


## SECTION 3 ADJUSTMENTS

### PRECAUTION

- The adjustments are performed in the sequence that they are described.
- The required test tapes are:  
 TY-7111 (8-909-812-00) ..... Level  
 TY-7252 (8-909-822-00) ..... Tracking  
 TY-7551 (8-909-814-00) ..... Function  
 TY-30B (8-892-358-00) ..... Blank  
 The required torque meter is:  
 TW-7131 (8-909-708-71) ..... FWD
- Switch and Control Settings  
 REMOTE switch : OFF  
 REC MODE switch : 48k (STANDARD)  
 REC LEVEL control : Minimum  
 PHONE LEVEL control : Minimum
- Preparation of End Sensor Cassette  
 (1) Push the slider locks of a cassette tape and slide the slider in the direction of the arrow.

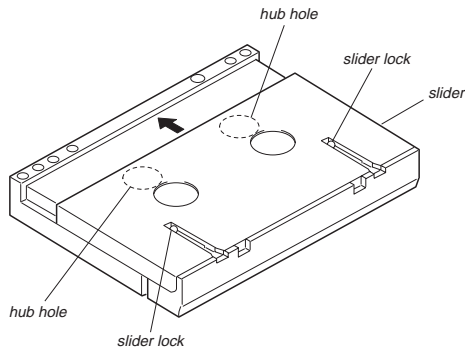


- Open the cassette lid and cut tape.

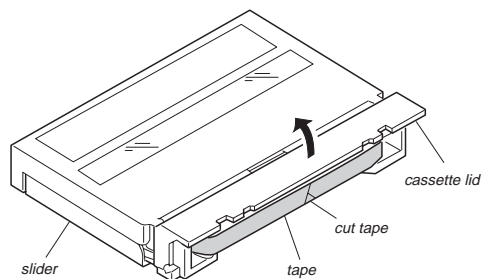

- Turn the hubs to take-up tape (for both T and S sides).  
 The end sensor cassette tape for end sensor adjustment is now prepared.
- Take care never to turn RV1 and RV2 within the RF AMP board of the cassette compartment section.

- When adjusting tape pass and each guide, as shown below, it is a good practice to remove the holder assy and use the DAT cassette holder (J-8000-002-A). This facilitates adjustment work.
  - When removing and installing the holder assy, turn the pulley counterclockwise and set loading OUT condition for easy removal and installation.
  - When adjusting, turn the pulley clockwise and turn on the CASSETTE TABLE IN switch (S2) to set loading IN condition. Then, set the test tape.

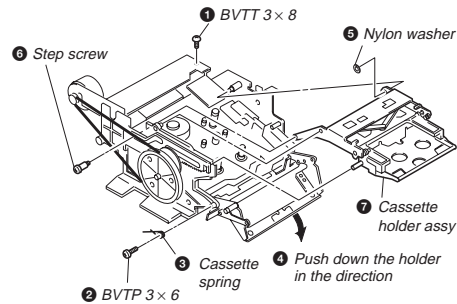

- Test Mode
  - To enter the test mode, short between TP (MAIN-TEST) and the GND on the DIGITAL board, then turn on the power. The meter scale within the fluorescent indicator tube (FL701) will flash. Press the OPEN/CLOSE  $\blacktriangle$  key and set the test tape. (The specified tape should be used for each adjustment.)

Test Mode (Short between TP (MAIN-TEST) and GND)


- Have "DPG" display lit in the fluorescent indicator tube. (Press the AMS  $\blacktriangleright\blacktriangleright$  key.)
  - S2, T2 and F Guide Adjustments
  - End Sensor Adjustment
  - Tape Pass Fine Adjustment ( $\times 1.5$ FWD mode)
  - DPG Adjustment
- Have "TR" display lit in the fluorescent indicator tube. (Press the  $\blacktriangleright$  key.)
  - FWD Torque Adjustment
  - FWD Back Tension Adjustment (Torque measurement mode)

- To release the test mode, remove the short between TP (MAIN-TEST) and GND. After necessary adjustment is completed, be sure to release the test mode.

- After adjustment is completed, perform the following checks to verify the tape speed.
  - Check that with the REC MODE switch set to STANDARD 48k, tape is normally recorded and played back. ( $\times 1$ )
  - Check that with the REC MODE switch set to LONG, tape is normally recorded and played back. ( $\times 0.5$ )
  - Check that in performing the CUE ( $\blacktriangleright + \blacktriangleright\blacktriangleright$ ) or REVIEW ( $\blacktriangleright + \blacktriangleleft\blacktriangleleft$ ) operation, "kyur kyur" sound is heard. ( $\times 3, \times 8$ )

- Check that after performing the FF ( $\blacktriangleright\blacktriangleright$ ) or REW ( $\blacktriangleleft\blacktriangleleft$ ) operation, the time display is appropriate. ( $\times 16$ )
- Check that the AMS ( $\blacktriangleright\blacktriangleright$ ,  $\blacktriangleleft\blacktriangleleft$ ) operation is normal.

Adjustment Location: mechanism deck block

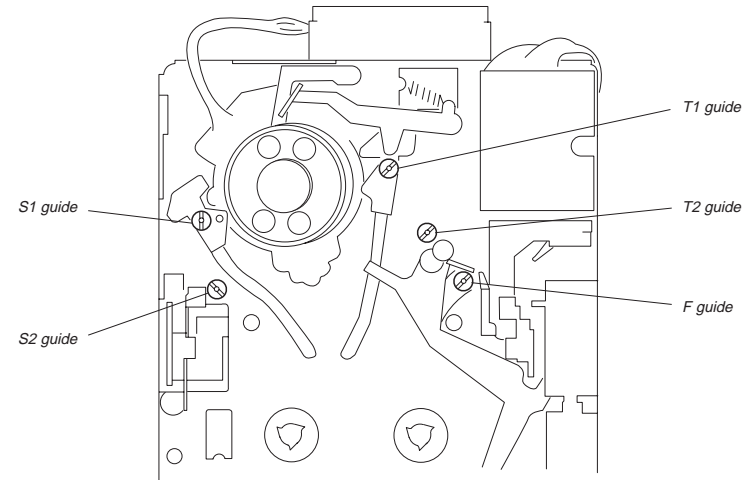



### 3-1. MECHANICAL ADJUSTMENTS

When replacing any drum related parts, after S2, T2 and F guide adjustments have been made, tape pass fine adjustment ( $\times 1.5$ FWD mode) in Electrical adjustment should be performed.


#### S2, T2 and F Guide Adjustments

##### Adjustment Method:

1. Enter the Test Mode ① (see page 19.) and set the test tape TY-7252 (8-909-822-00).
2. Set the REC MODE switch to STANDARD 48k and press the AMS  $\blacktriangleright\blacktriangleright\blacktriangleright$  key.

While in FWD mode, check that there is no curl on the upper and lower flanges of the S2, T2 and F guides.

If any curl is present, put the S2, T2 and F guide of concern back in the high position and adjust by adjusting the direction of tightening.

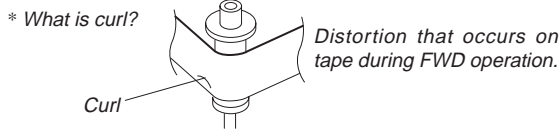


### 3-2. ELECTRICAL ADJUSTMENTS

#### End Sensor Adjustment

When removing the holder assy and when replacing the mechanism deck block, this adjustment should be performed.

##### Adjustment Method:

1. Connect the CH-1 terminal of an oscilloscope to TP (S-END) and the CH-2 terminal to TP (T-END) on the DIGITAL board.
2. Enter the Test Mode ① (see page 19.) and set the end sensor cassette tape (see page 19.)
3. Set the STOP (■) mode.
4. Adjust RV502 (S-END) and RV501 (T-END) on the DIGITAL board so that the respective peak to peak values of the waveforms on the oscilloscope are 1.2 Vp-p.

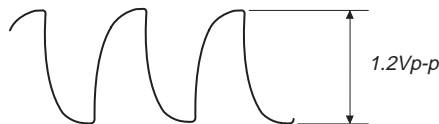

**Adjustment Location:** See page 23.

#### FWD Torque Adjustment

##### Adjustment Method:

1. Enter the Test Mode 2 (Torque Measurement Mode) (see page 19.) and set the torque meter TW-7131 (8-909-708-71).
2. Press the PLAY ( $\blacktriangleright$ ) key.
3. Press the  $\blacktriangleright\blacktriangleright$  key or  $\blacktriangleleft\blacktriangleleft$  key and adjust so that the FWD torque value (T side take-up torque) is within the range of 11 to 13 g $\cdot$ cm.
4. When the torque meter is circulating around, check the indicated value.

#### FWD Back Tension Adjustment

##### Adjustment Method:

1. Enter the Test Mode ② (Torque Measurement Mode) (see page 19.) and set the torque meter TW-7131 (8-909-708-71).
2. Press the PLAY ( $\blacktriangleright$ ) key.
3. Press the AMS  $\blacktriangleright\blacktriangleright\blacktriangleright$  key or  $\blacktriangleleft\blacktriangleleft$  key and adjust so that the back tension (S side) is within the range of  $8.5 \pm 0.5$  g $\cdot$ cm.
4. When the torque meter is circulating around, check the indicated value.
5. Verify that the maximum value is less than 19.5 g $\cdot$ cm.

#### REV Torque Check and REV Back Tension Check

##### Check Method:

1. After FWD torque adjustment and FWD back tension adjustment are completed, press the PLAY ( $\blacktriangleright$ ) key again and set REV ( $\blacktriangleleft$ ) mode.
2. Check that the REV torque value is within the range of 13.5 to 17.5 g $\cdot$ cm and that the REV back tension value is within the range of 7.5 to 11.5 g $\cdot$ cm.


#### Tape Pass Fine Adjustment ( $\times 1.5$ FWD Mode)

When replacing any drum related parts, be sure to perform this adjustment.


##### Adjustment Method:

1. Connect the CH-1 terminal of an oscilloscope to TP (RF) and the CH-2 terminal to TP (SWP) on the DIGITAL board.
2. Enter the Test Mode ① (see page 19.) and set the test tape TY-7252 (8-909-822-00).
3. Press the AMS ( $\blacktriangleright\blacktriangleright\blacktriangleright$ ) key.

Role of each switch in test mode.

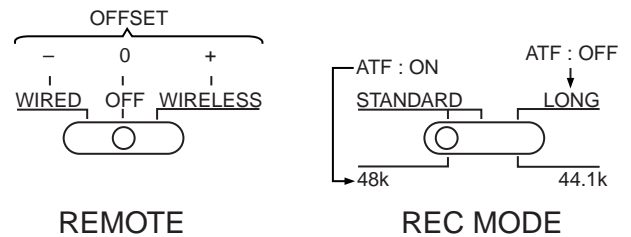


4. Put the REC MODE switch to the LONG (ATF: OFF) position and put the REMOTE switch to either the WIRED or WIRELESS position (OFFSET: - or +), fine adjust both the S1 guide and T1 guide so that the RF signal waveform of the oscilloscope repeatedly contracts and expands in vertical directions as it has the same shape.

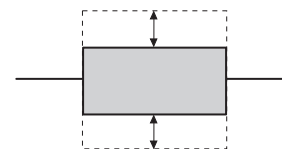


\* Adjust the direction of tightening to complete this adjustment. If there is curl on any of the upper and lower flanges of the S2, T2 and F guides, adjust the guide of concern.

5. Put the REC MODE switch to the STANDARD 48k (ATF: ON) position and put the REMOTE switch to either the WIRED or WIRELESS position (OFFSET: - or +), then check the RF signal waveform.

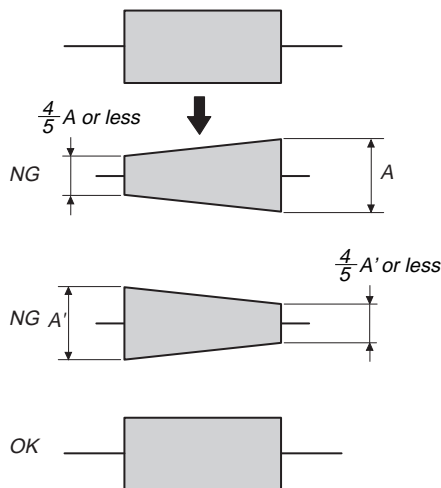

6. Put the REC MODE switch to the STANDARD 48k (AFT: ON) position and put the REMOTE switch to the OFF position (OFFSET: 0), then check the RF signal waveform.
- (1) Verify that the peak value (B) of the RF signal waveform is 60mV or more.
  - (2) Verify that the flat position of the RF signal waveform has undershoots of 10% or less.

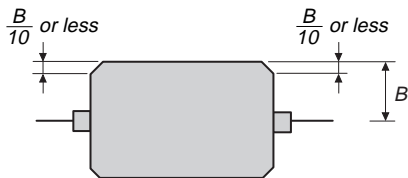

7. If any of the specified values are not satisfied, repeat items 3 to 6.

**Adjustment Location:** See page 20.


### DPG Adjustment

When replacing any drum related parts, be sure to perform this adjustment.

#### Adjustment Method:

1. Connect the CH-1 terminal of an oscilloscope to TP (RF) and the CH-2 terminal to TP (SWP) on the DIGITAL board.
2. Enter the Test Mode ① (see page 19.) and set the test tape TY-7252 (8-909-822-00).
3. Put the REC MODE switch to the STANDARD 48k (ATF: ON) position and put the REMOTE switch to the OFF position (OFFSET: 0).
4. Press the AMS (▶▶) key.
5. Press the PLAY (▶) key.
6. "DPG OK" is displayed in the fluorescent indicator tube.

Check that there is a difference of  $650 \pm 15 \mu\text{sec}$  between the oscilloscope's SWP signal and the RF signal.

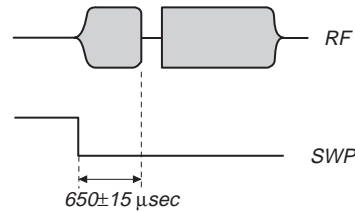

**Adjustment Location:** See page 23.

### CHECK AND REPLACEMENT FOR DATE FNCTION

#### Clock IC Back-up Check

- When replacing the lithium battery (BATT501) or replacing any of the clock IC (IC518) and peripheral parts, the clock will be reset.

(The DATE display will be [ '- - - - ] [ - - - - ] even when the [PRESENT] button is pushed.)

Perform the back-up check by the following procedure.

- (1) Connect a DC voltmeter between the DIGITAL board's TP (BATT+) as (+) side on the TP (BATT-) as (-) side.
- (2) With the POWER switch of the set OFF, check that the voltage (1) is less than +20 mV.  
(If the measured value is more than +20 mV, inspect the IC518 and peripheral parts and replace as needed.)
- (3) With the POWER switch of the set ON, check that the voltage (1) is less than 0 mV (minus indication), (If plus indication, inspect the D510 and peripheral parts and replace as needed.)
- (4) When these voltages are normal, set the clock to the current date and time according to the instruction manual.  
(year/month/day/day of week/hours/minutes/seconds)\*
- (5) After the clock is set in item (4), turn off the POWER switch once and in several seconds, turn on the power again and make sure that the clock is operating.

**Adjustment Location:** See page 23.

### Replacement of Back-up Battery

The back-up battery for clock is designed to serve for more than seven years under normal service conditions (room temperature and ordinary humidity).


When replacing the battery, take note of the following:

- Perform the above “Clock IC Back-up Check” and remedy the cause of battery consumption.
- The open voltage of the battery as removed is 3.0 V or more when it is new. If this voltage is 2.0 V or less, then battery is fully consumed and needs to be replaced.
- After the battery is replaced, perform the “Clock IC Back-up Check” again and set the clock.
- The coin type lithium battery (CR2032) is used for replacement.

\* For description of the clock setting, see page 5.

### Adjustment and Check Locations :

**DIGITAL board** – component side –

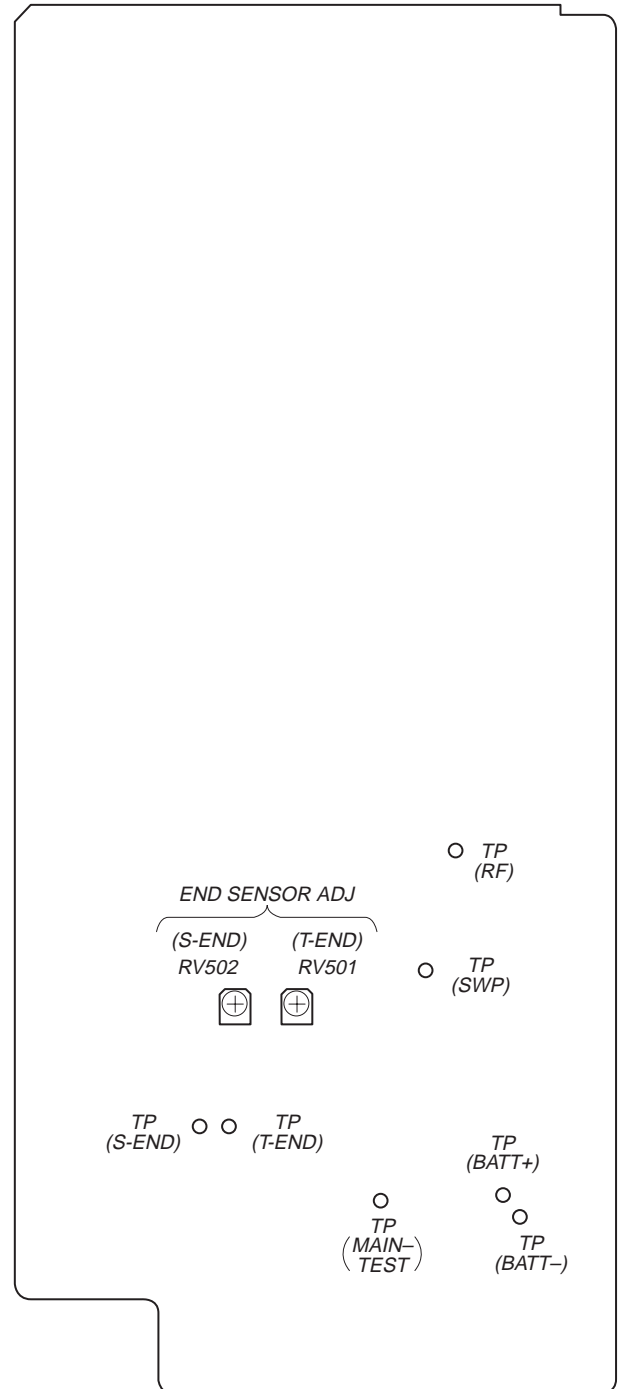




## SECTION 4 DIAGRAMS


### • Circuit Boards Location

**Note:** AUDIO board and DIGITAL board are supplied as MAIN board.

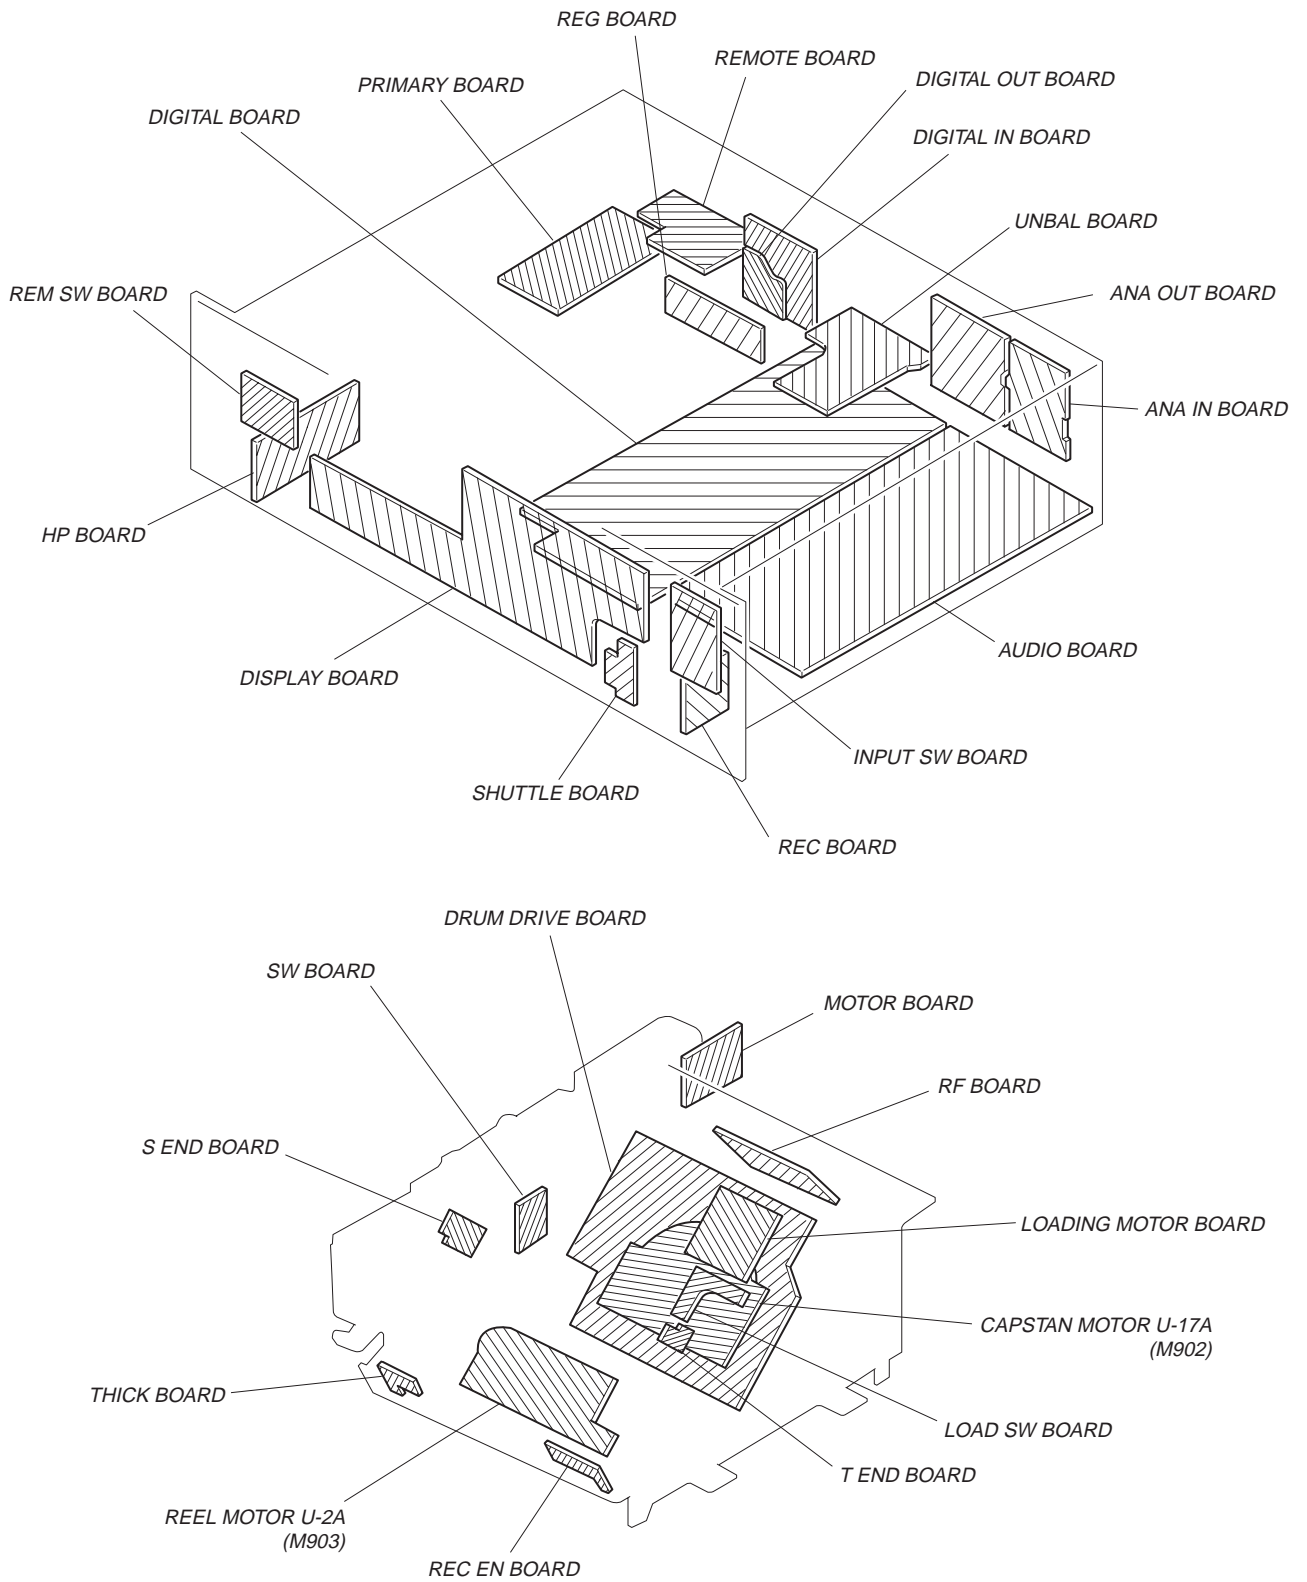


## 4-1. BLOCK DIAGRAMS


### (1) Power Section

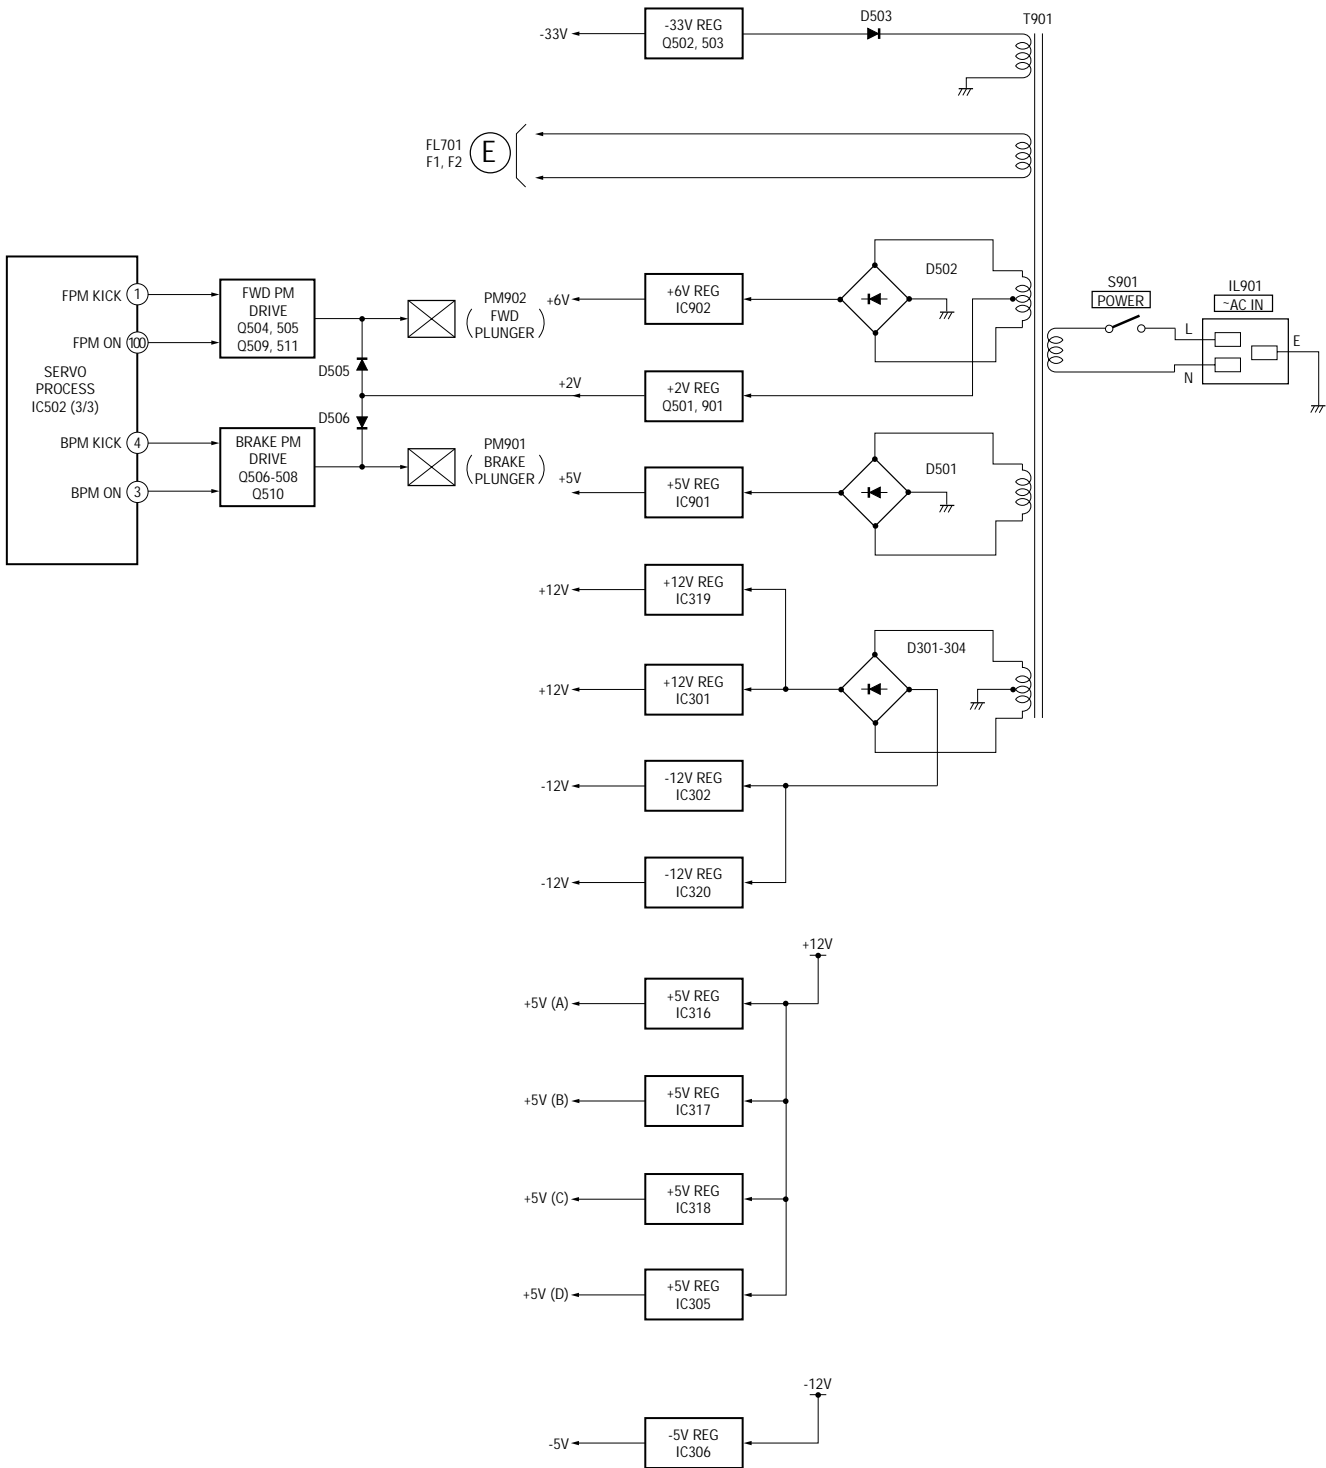

(2) Digital Audio Section

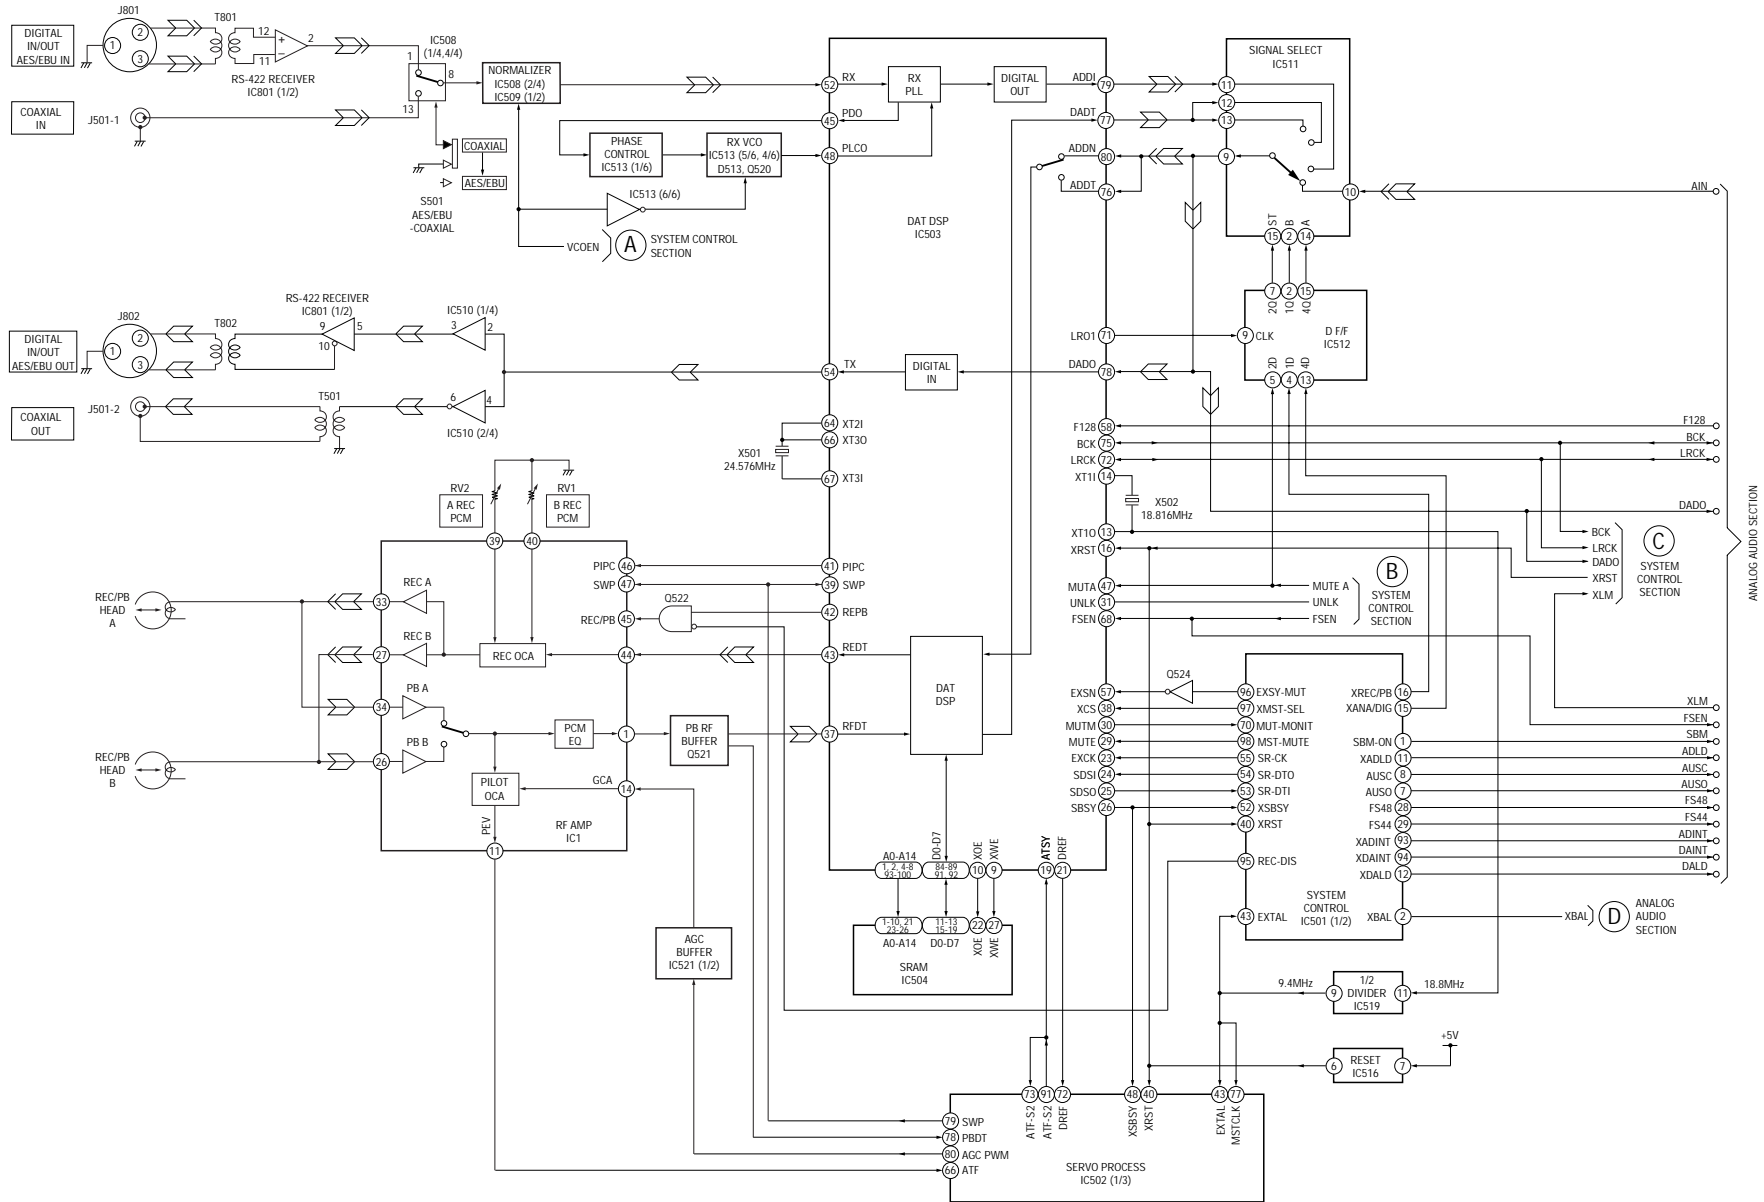


(3) Analog Audio Section

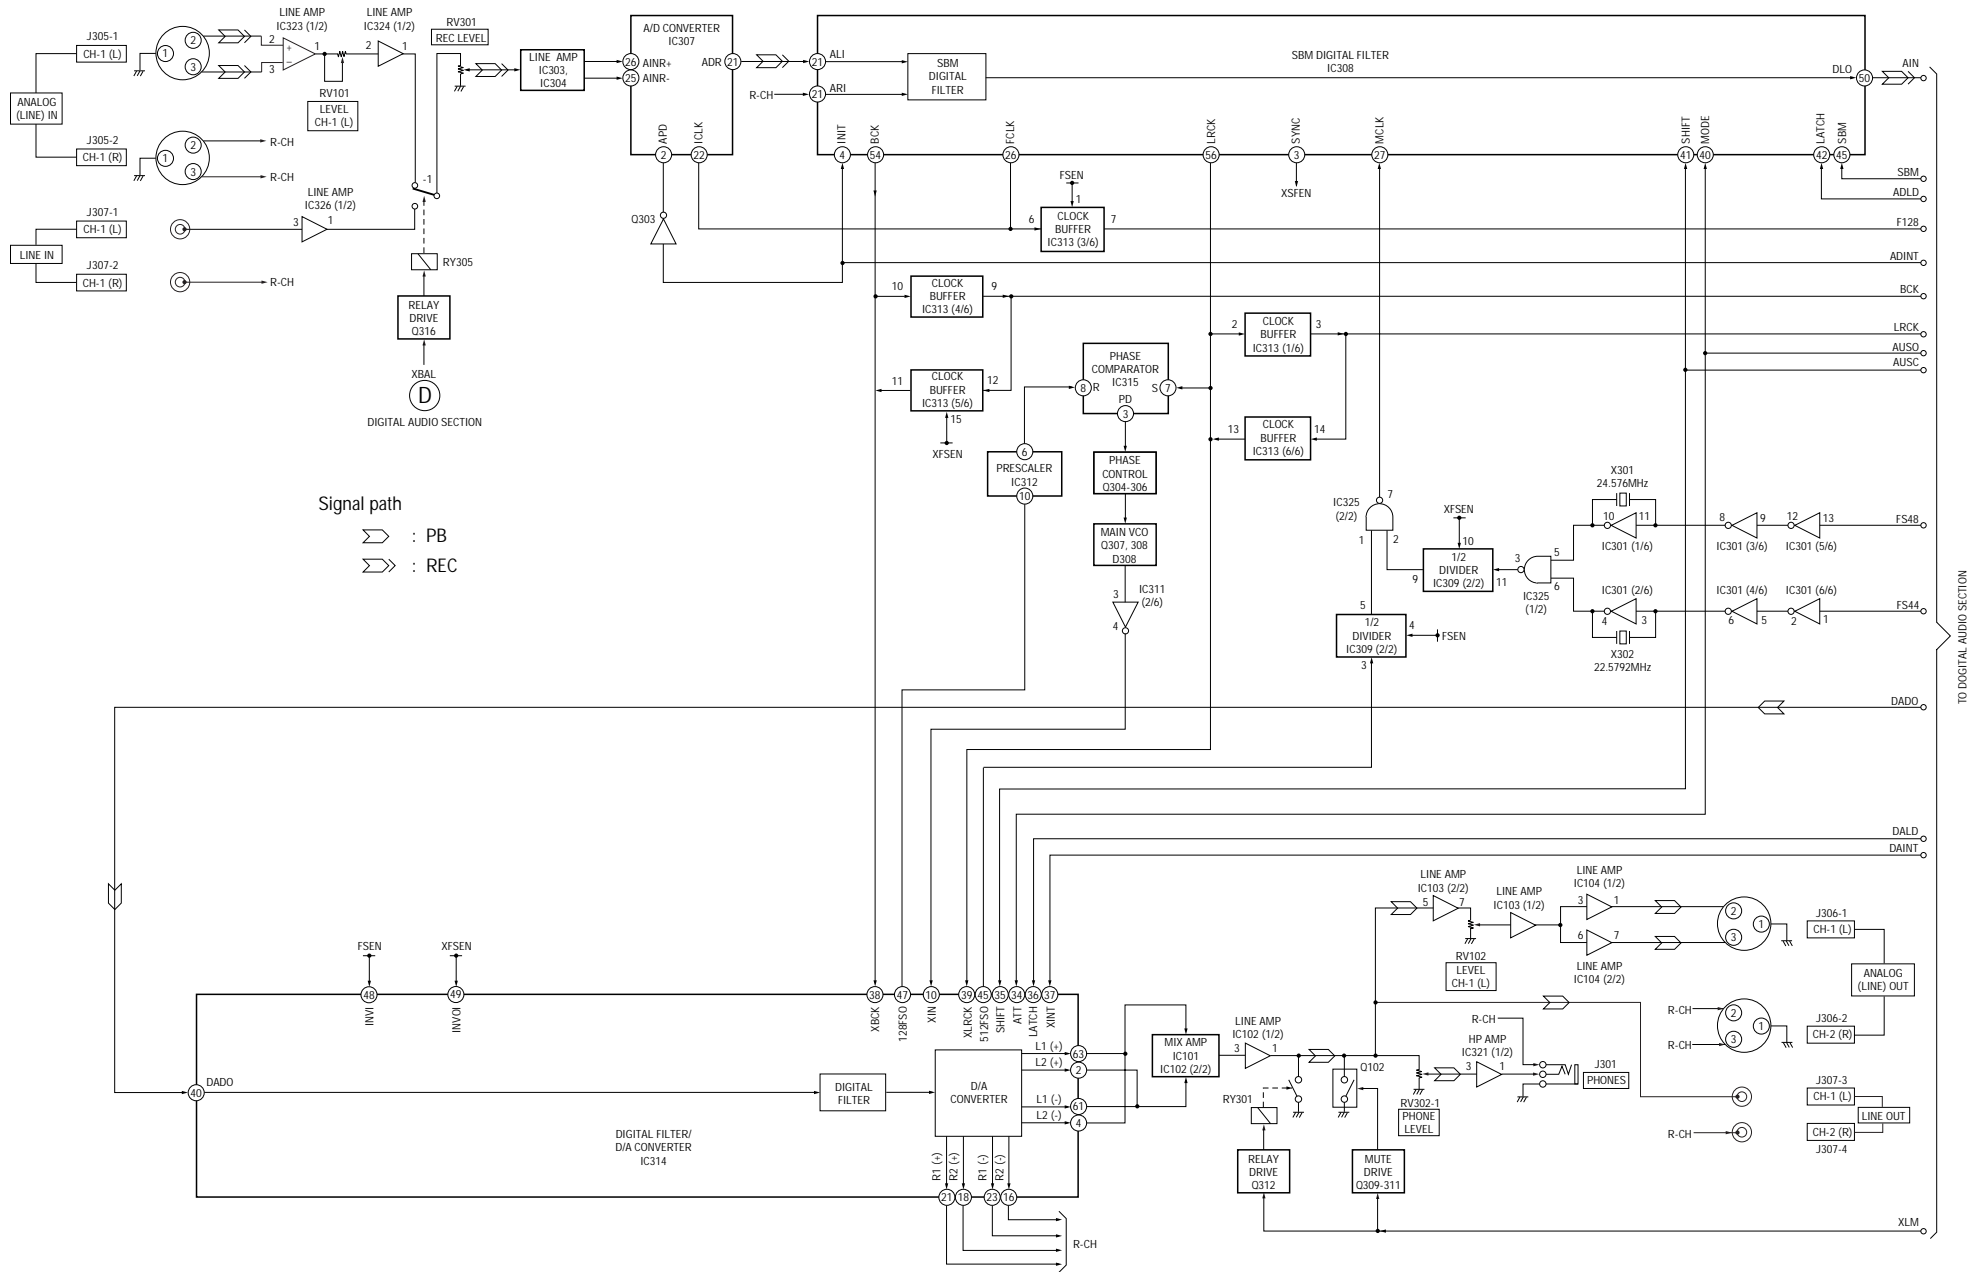




(4) System Control Section

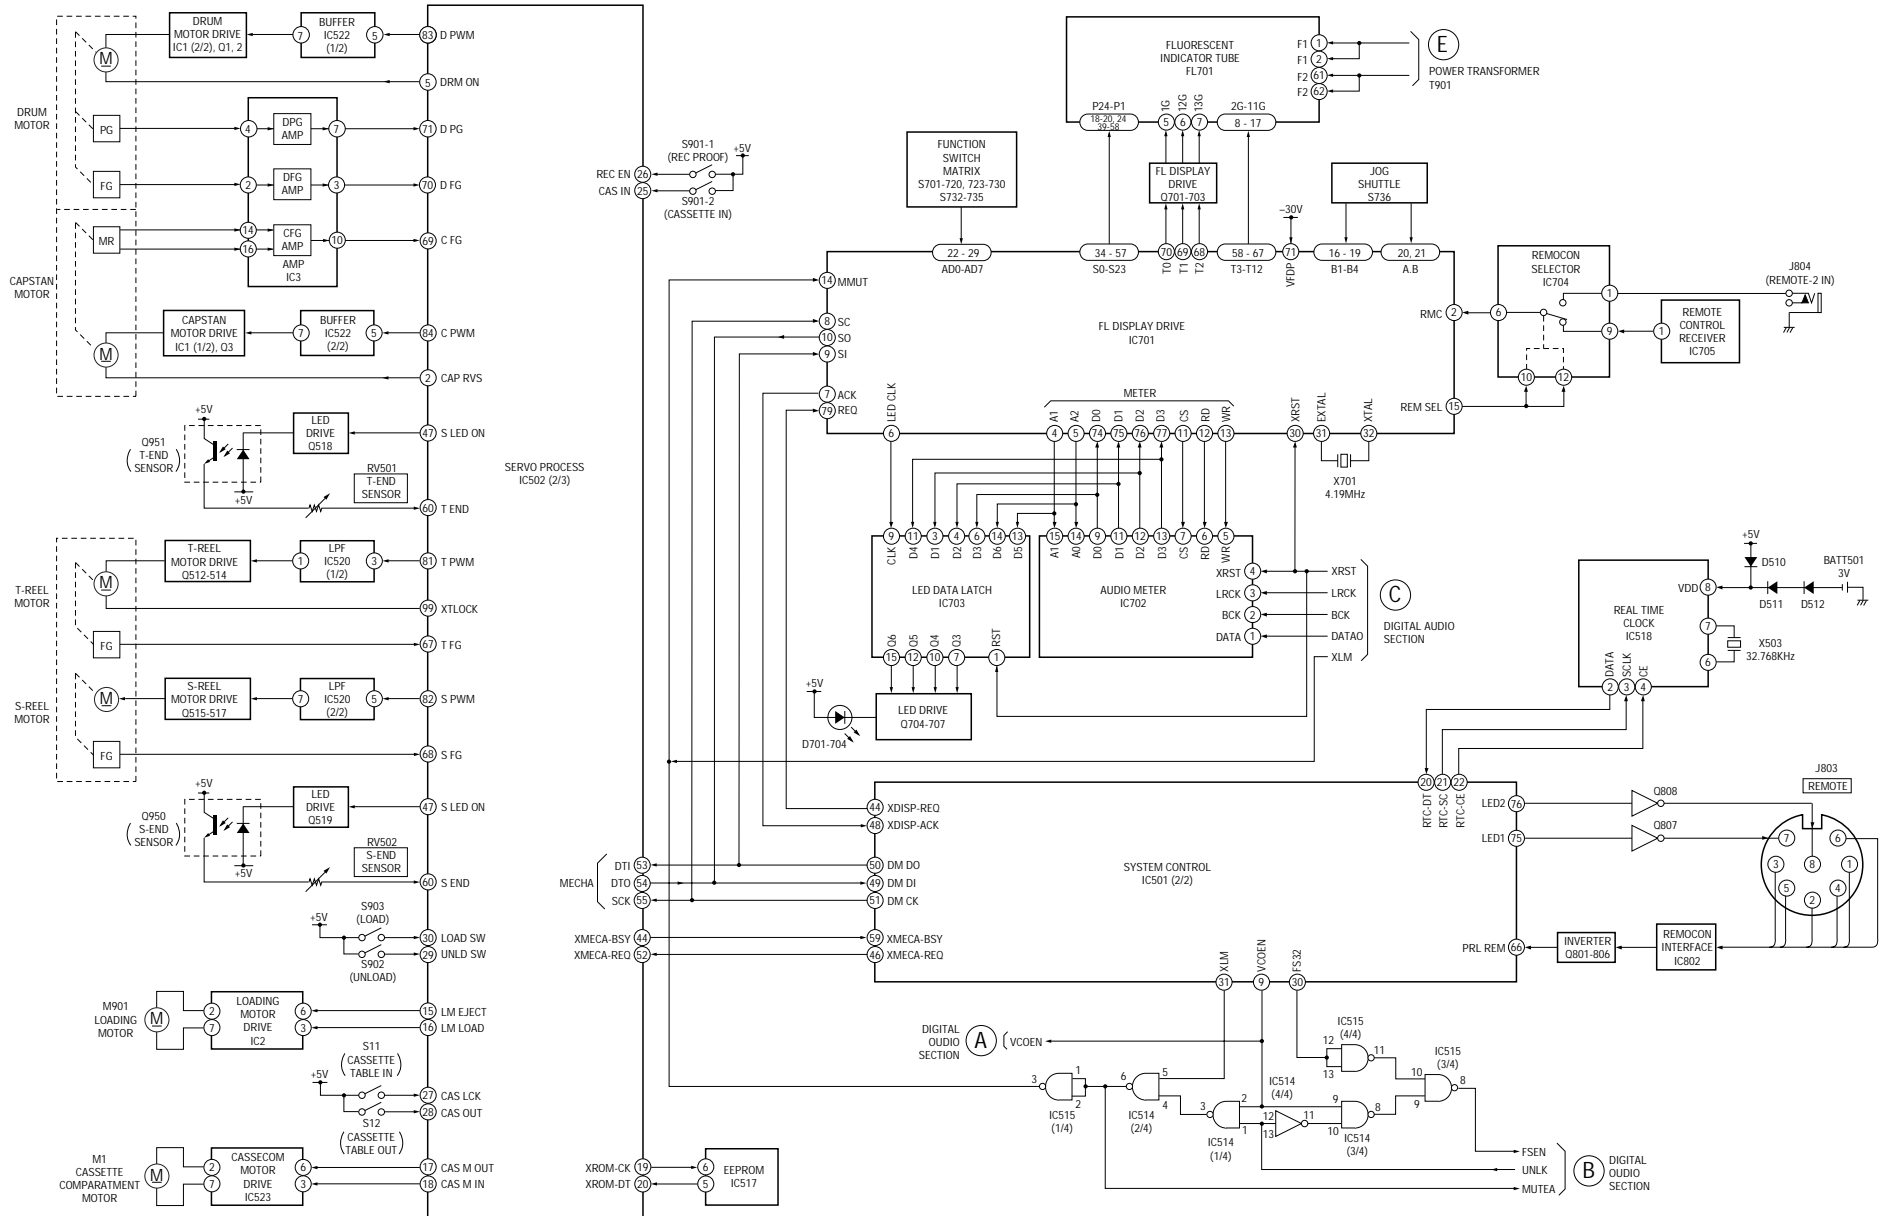

4-2. PRINTED WIRING BOARD - RF Section -

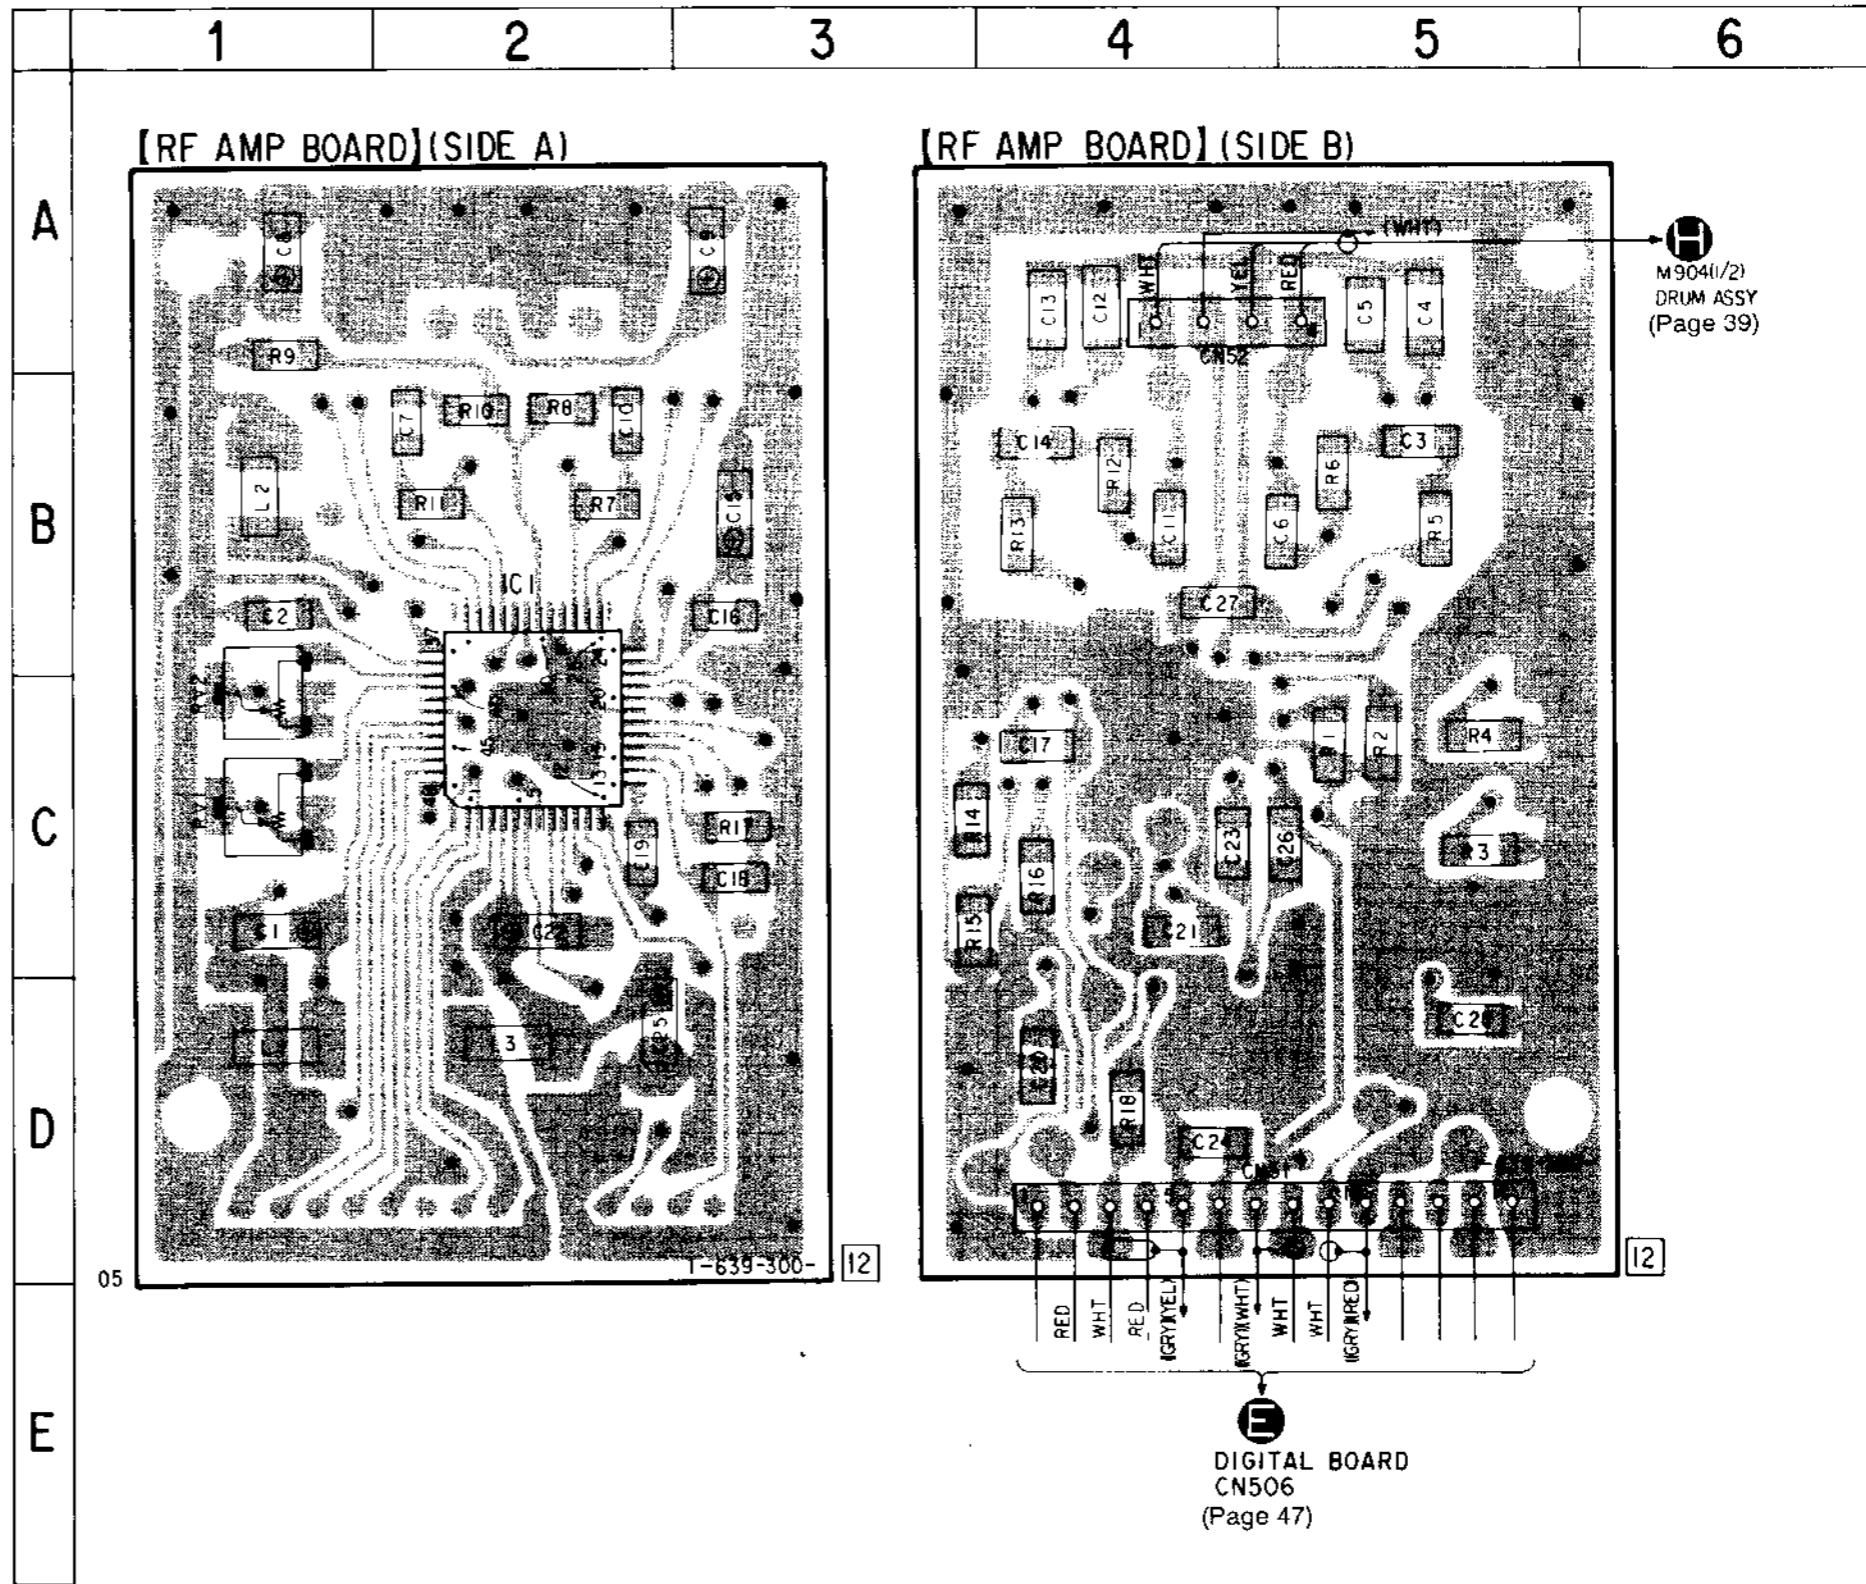


**Note:**

- — : parts extracted from the component side.
- ● : Through hole.
- ▨ : Pattern on the side which is seen.

(The other layers' patterns are not indicated.)

4-3. SCHEMATIC DIAGRAM - RF Section - See page 68 for IC Block Diagrams.

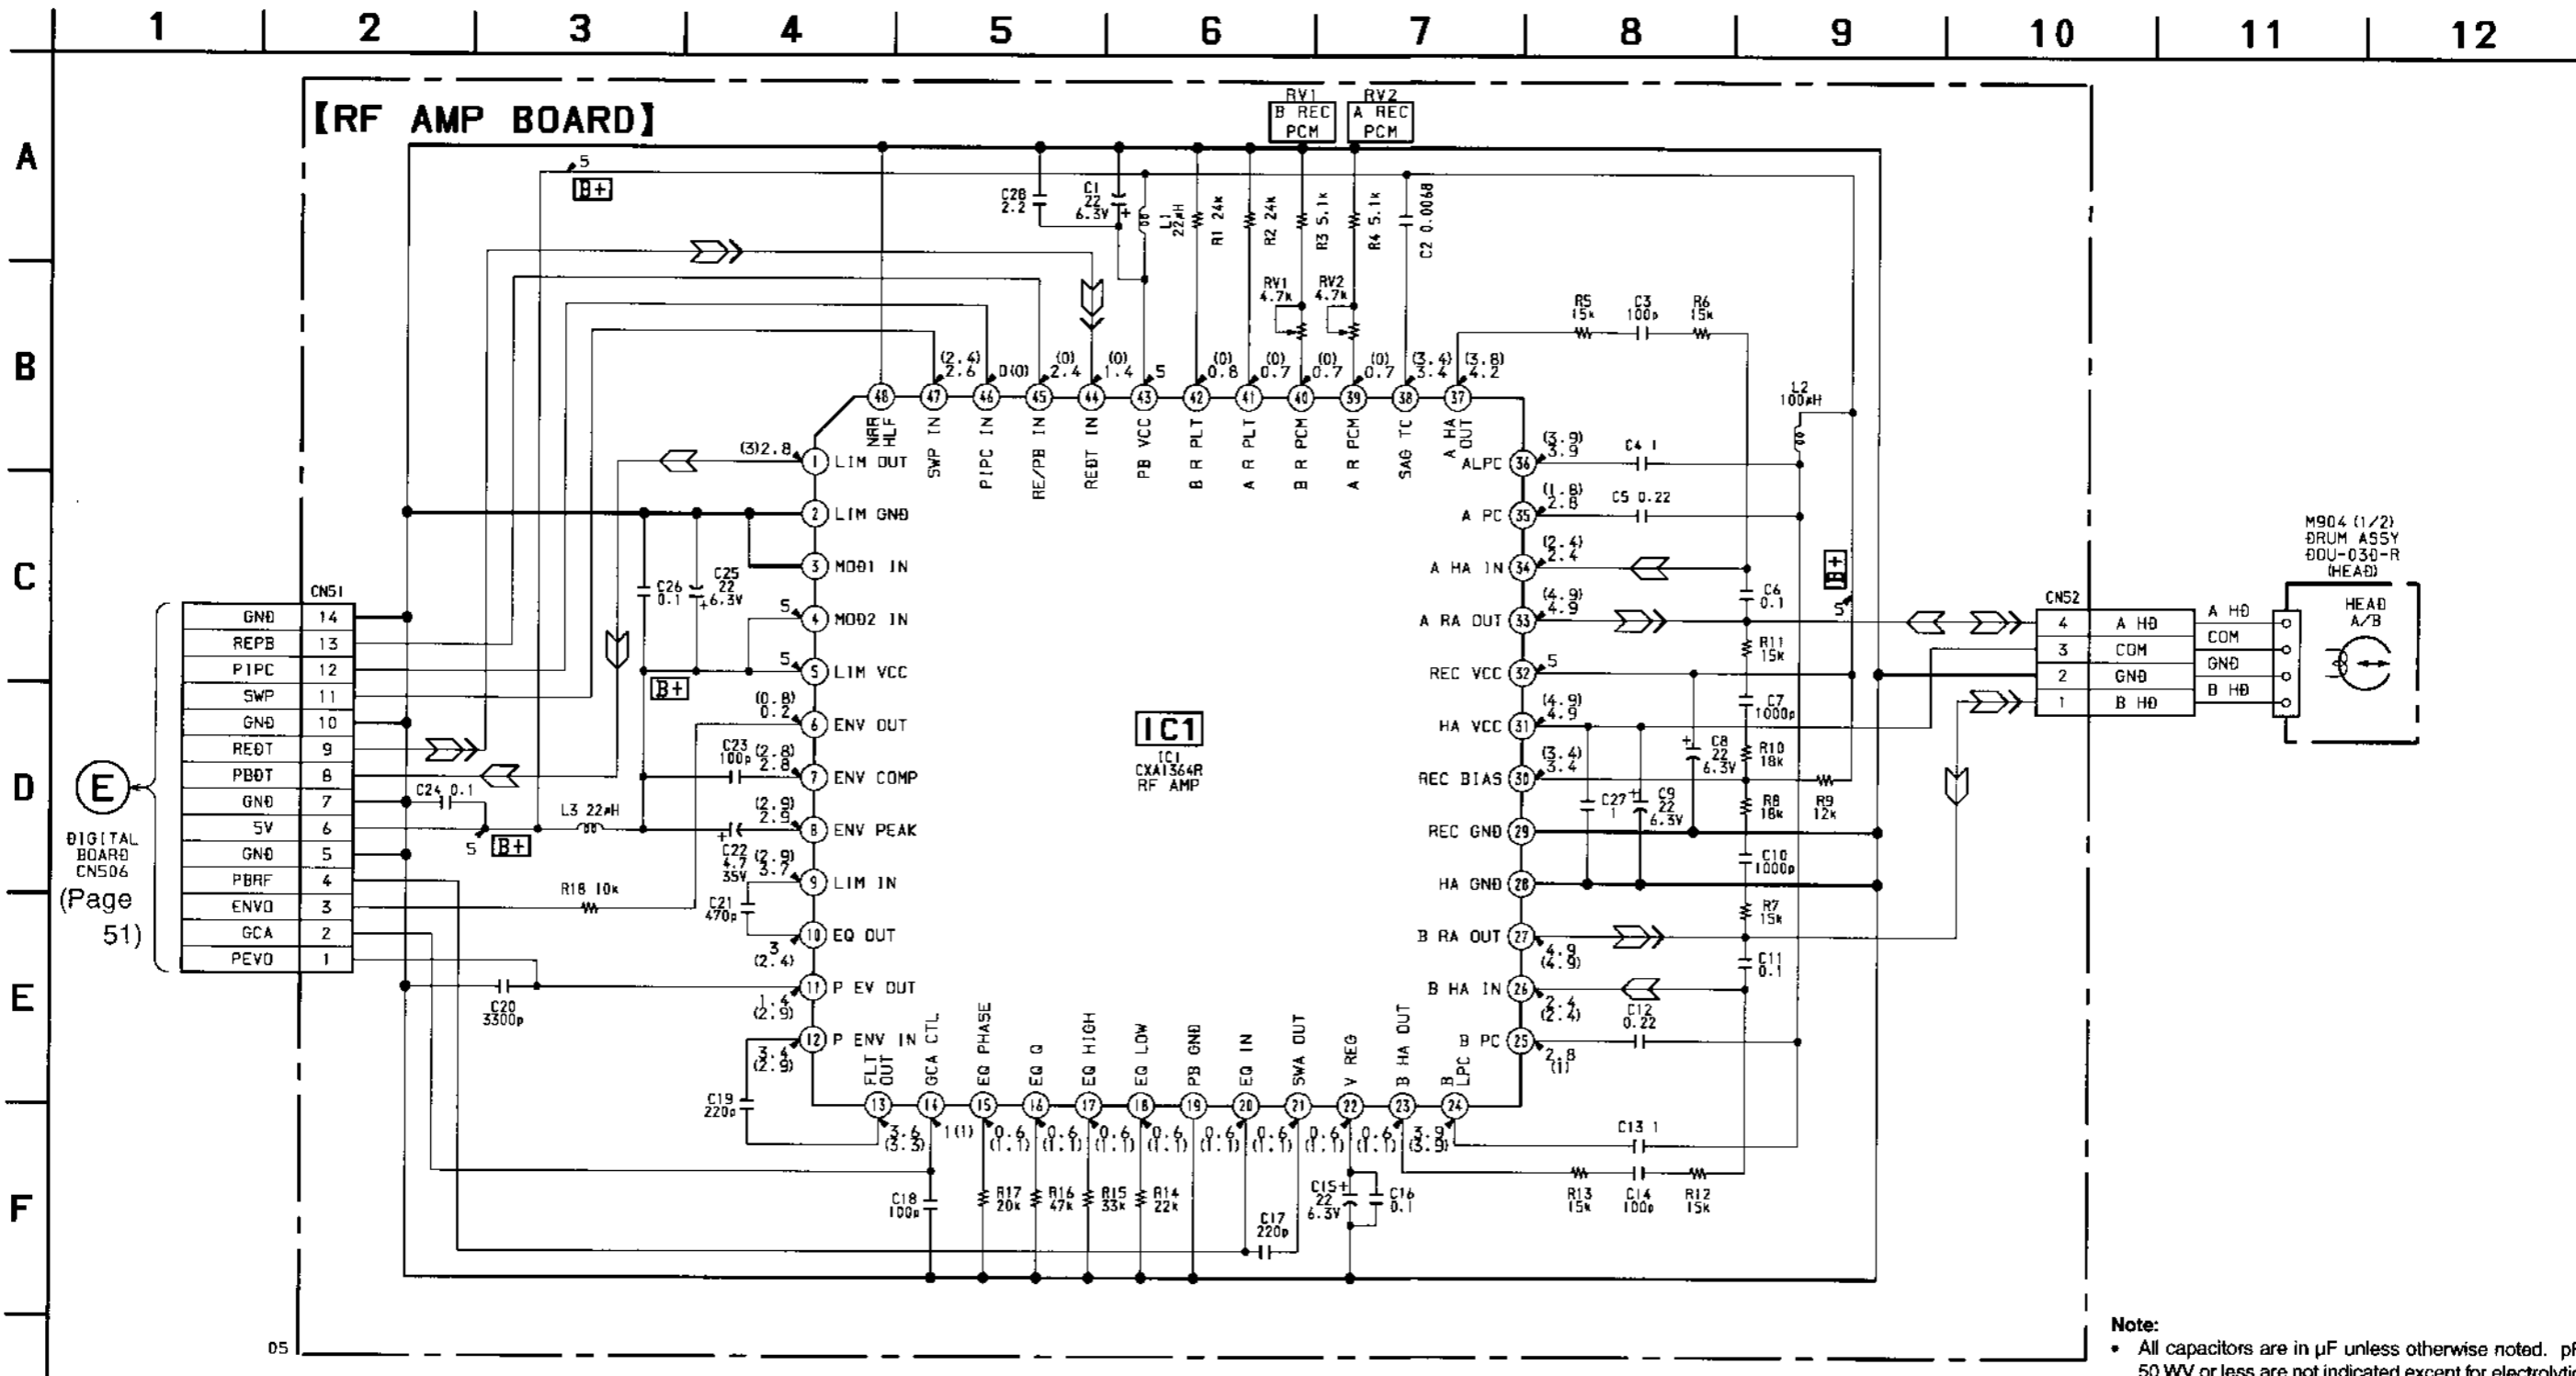

DIGITAL BOARD CNS06 (Page 51)

**Note:**


- All capacitors are in µF unless otherwise noted. pF: µµF
- 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4 W or less unless otherwise specified.
- [B+] : B+ Line.
- Voltage is with respect to ground under no-signal conditions.
- no mark : PB
- ( ) : REC
- Voltages are taken with a VOM (Input impedance 10 MΩ). Voltage variations may be noted due to normal production tolerances.
- Signal path.
- ∩ : PB
- ∩∩ : REC


4-4. PRINTED WIRING BOARDS - MD Section - • See page 25 for Circuit Boards Location.

• Semiconductor Location

| Ref. No. | Location |
|----------|----------|
| D2       | C-9      |
| D3       | D-9      |
| IC1      | C-7      |
| IC2      | B-8      |
| IC3      | B-6      |
| Q1       | B-7      |
| Q2       | B-7      |
| Q3       | C-6      |
| Q950     | D-4      |
| Q951     | G-11     |

Note:  
 • — : parts extracted from the component side.  
 • : Pattern on the side which is seen.

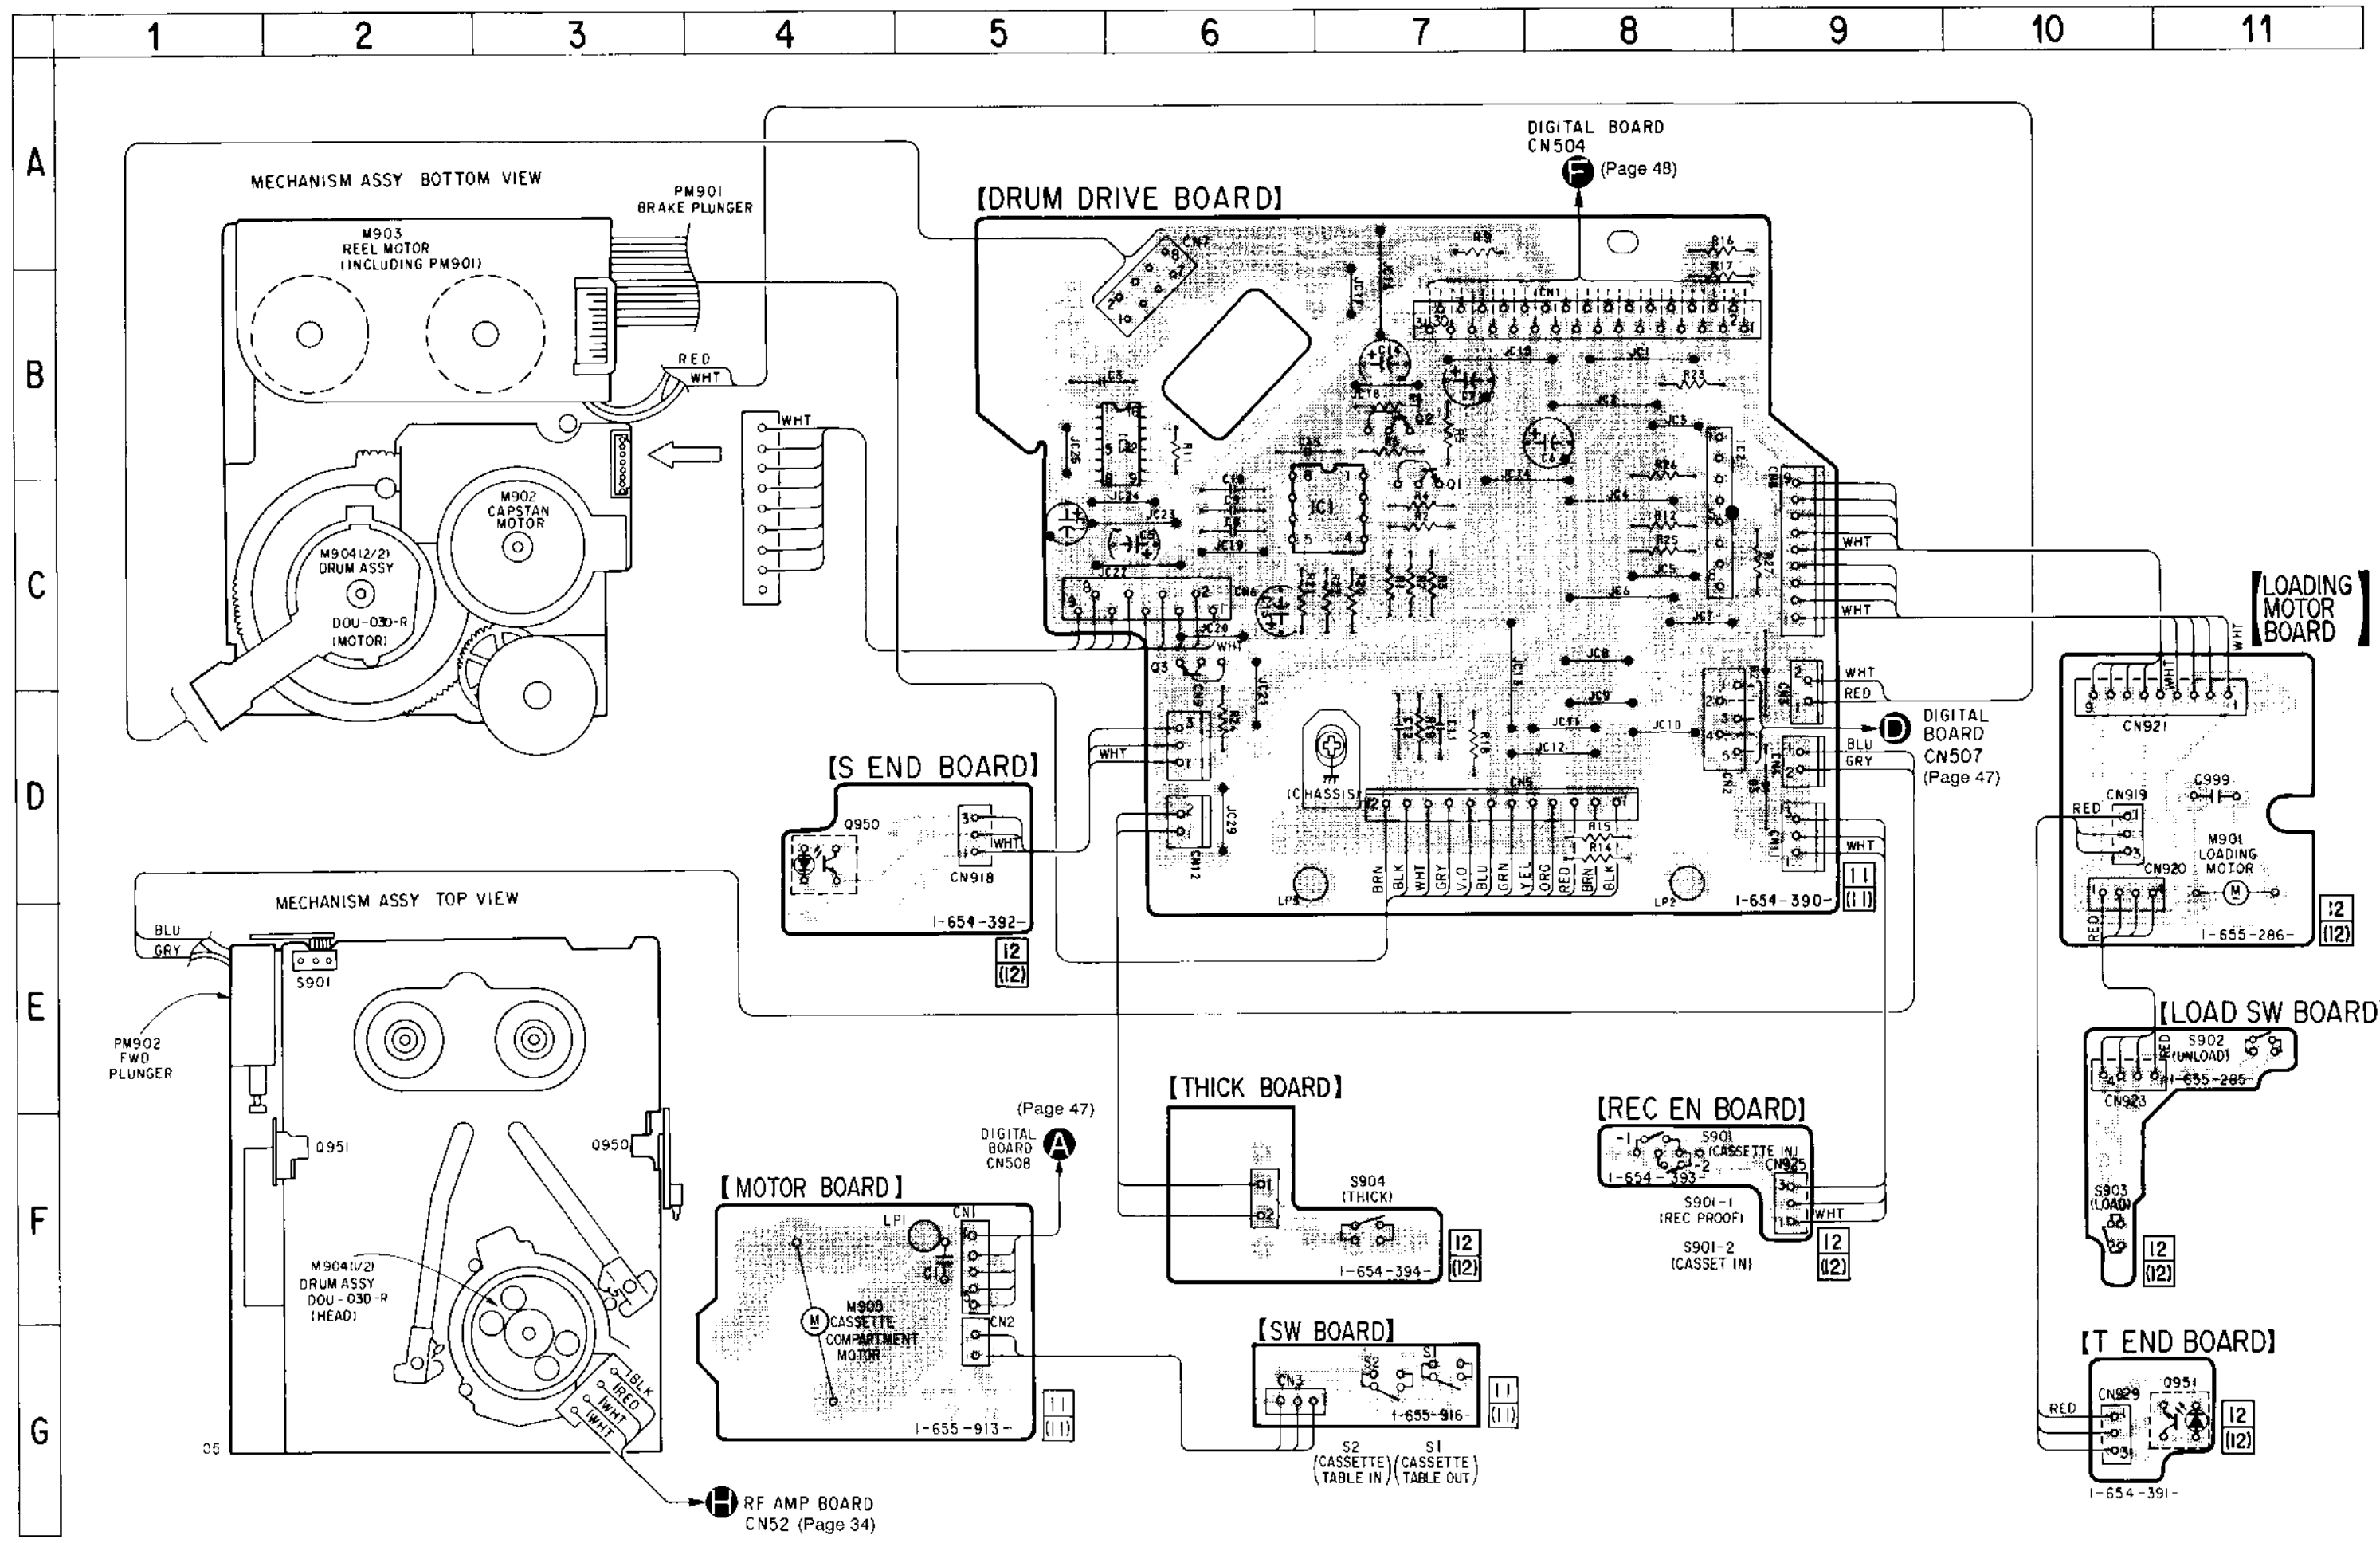

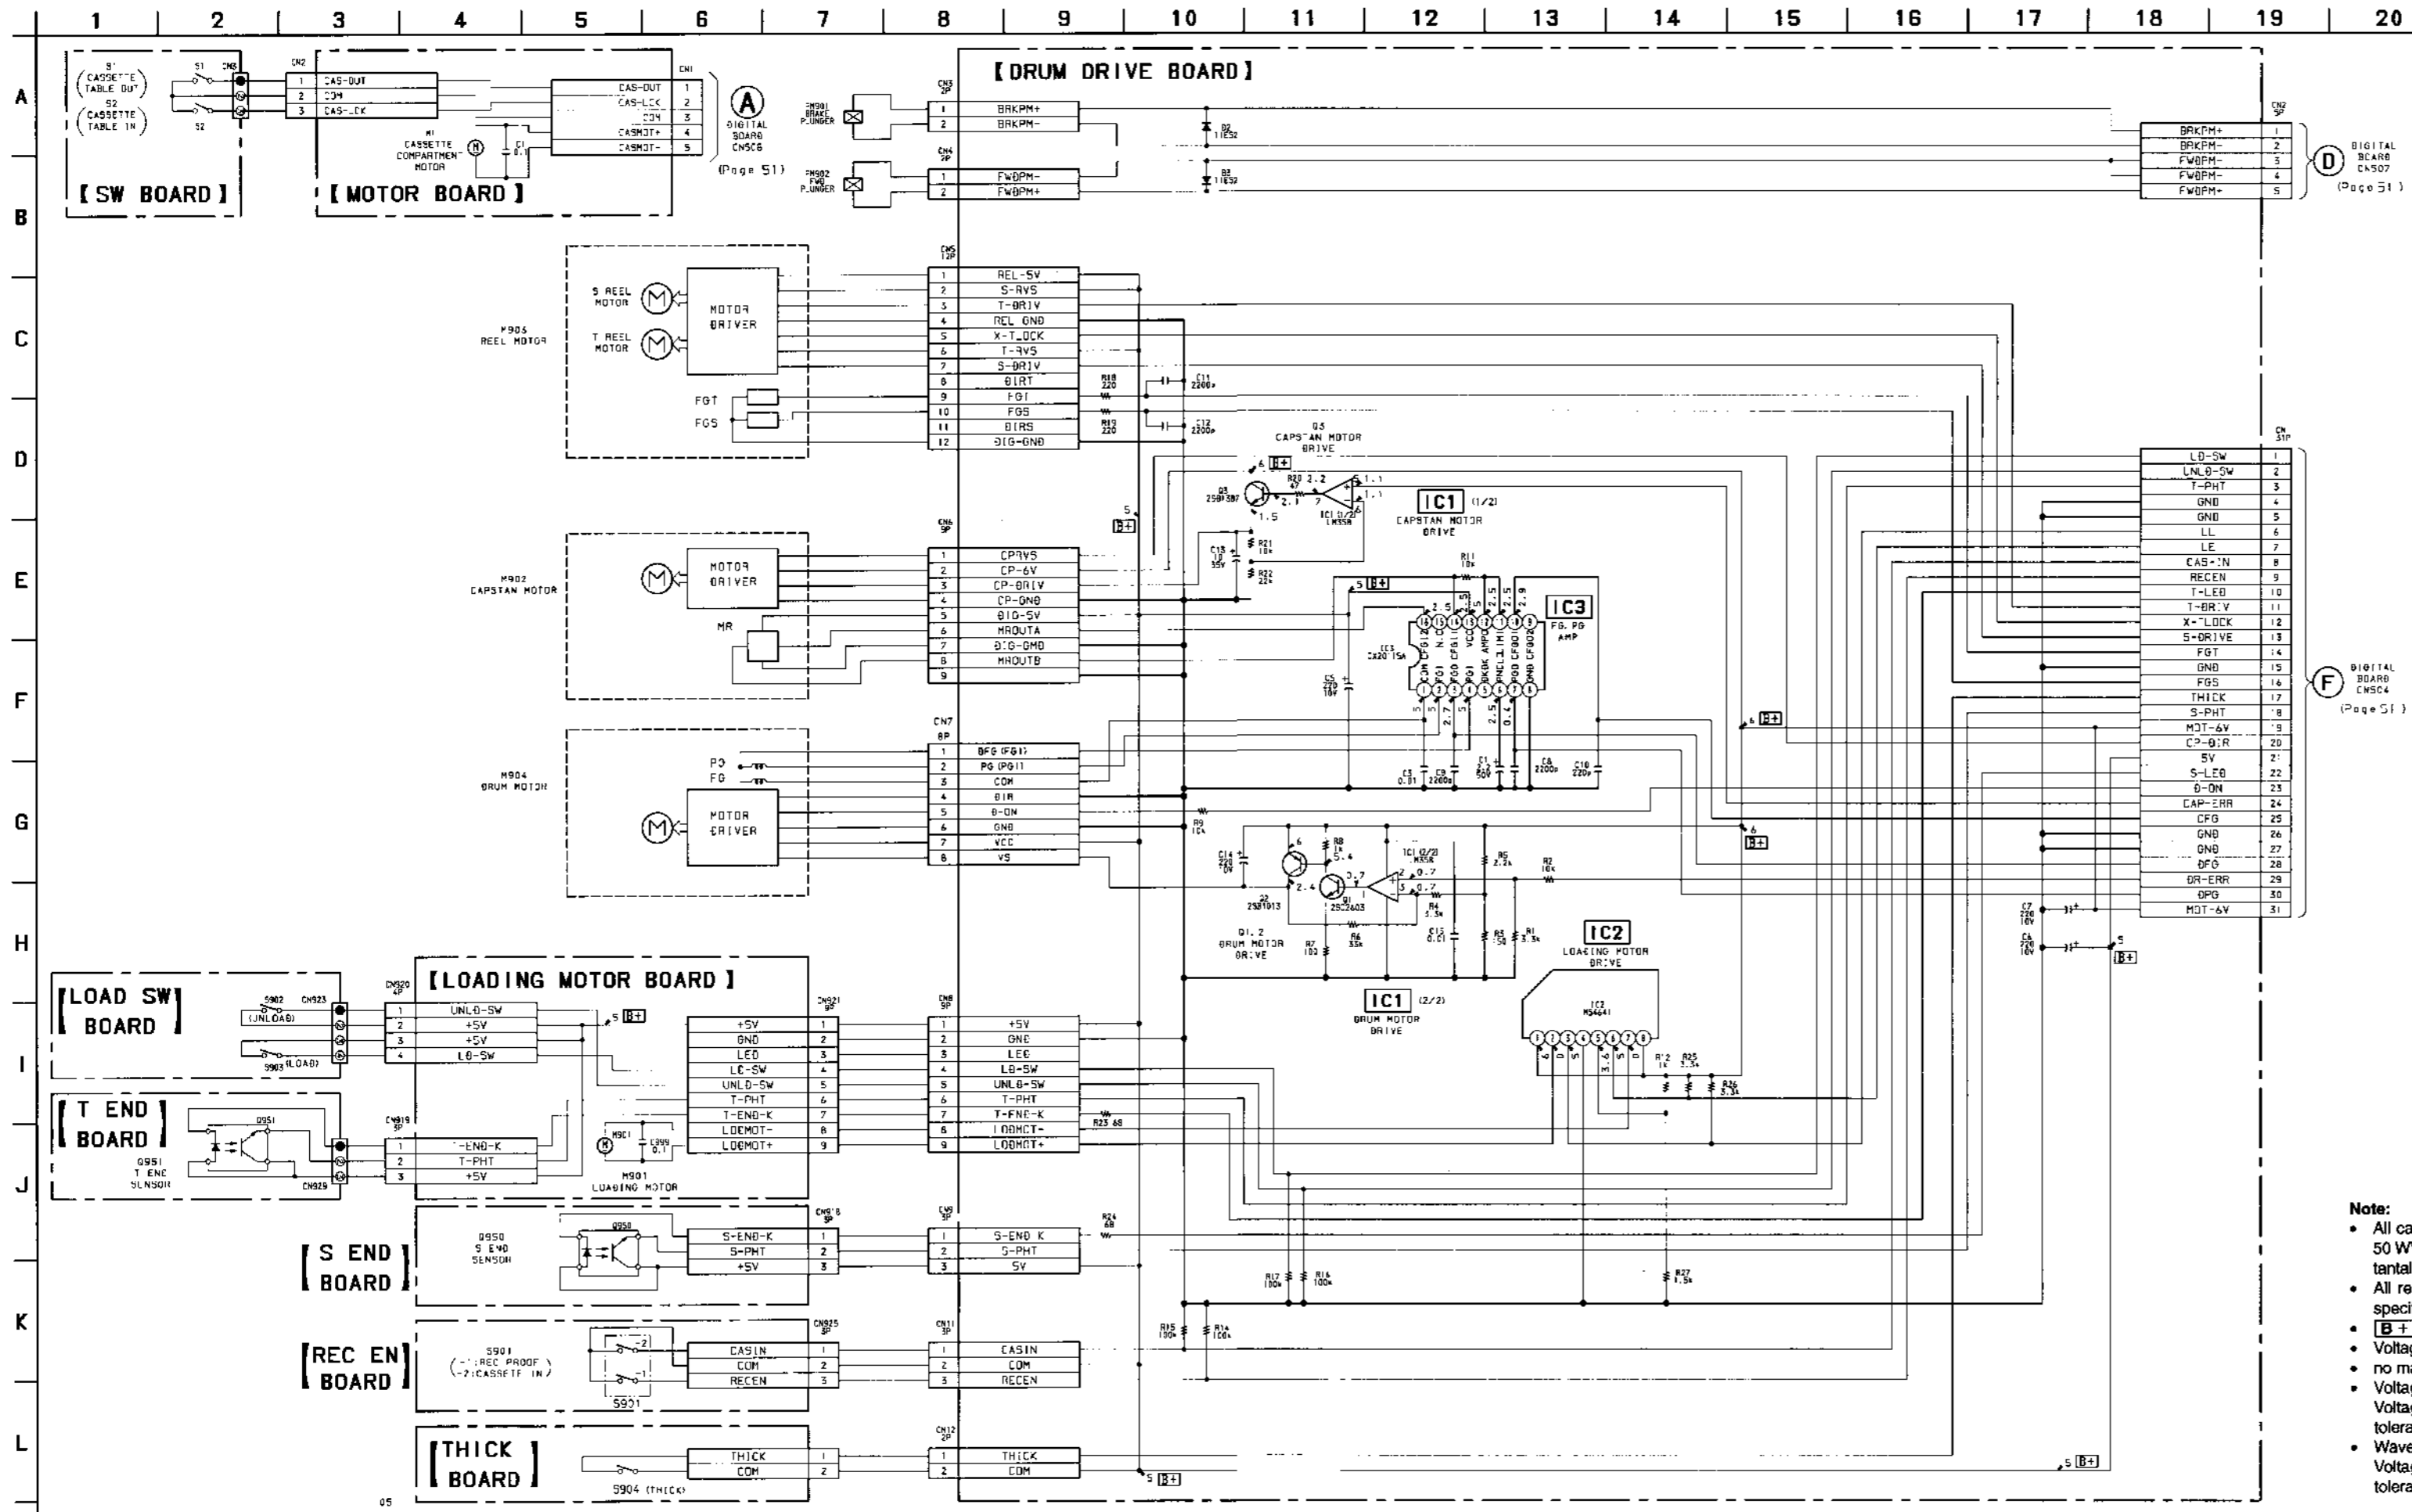


**Note:**

- All capacitors are in  $\mu\text{F}$  unless otherwise noted.  $\text{pF}$ :  $\mu\text{F}$  50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in  $\Omega$  and  $\frac{1}{4}$  W or less unless otherwise specified.
- [B+] : B+ Line.
- Voltage is with respect to ground under no-signal conditions.
- no mark : PB
- Voltages are taken with a VOM (Input impedance 10 M $\Omega$ ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with an oscilloscope. Voltage variations may be noted due to normal production tolerances.


• Semiconductor Location

| Ref. No. | Location | Ref. No. | Location |
|----------|----------|----------|----------|
| D501     | C-9      | IC901    | D-1      |
| D502     | C-9      | IC902    | D-1      |
| D503     | B-11     |          |          |
| D504     | B-12     | Q501     | C-11     |
| D505     | C-12     | Q502     | B-11     |
| D506     | C-12     | Q503     | B-11     |
| D507     | D-12     | Q504     | B-12     |
| D508     | C-8      | Q505     | C-12     |
| D509     | C-8      | Q506     | C-12     |
| D510     | F-17     | Q507     | C-12     |
| D511     | F-16     | Q508     | C-12     |
| D512     | F-16     | Q509     | C-12     |
| D513     | E-14     | Q510     | B-12     |
|          |          | Q511     | B-12     |
| IC501    | E-16     | Q512     | D-13     |
| IC502    | C-16     | Q513     | D-14     |
| IC503    | E-11     | Q514     | D-14     |
| IC504    | F-10     | Q515     | C-13     |
| IC508    | E-8      | Q516     | C-14     |
| IC509    | E-8      | Q517     | C-14     |
| IC510    | C-8      | Q518     | C-17     |
| IC511    | E-9      | Q519     | C-17     |
| IC512    | E-10     | Q520     | E-14     |
| IC513    | D-14     | Q521     | E-13     |
| IC514    | F-17     | Q522     | E-12     |
| IC515    | F-17     | Q524     | D-10     |
| IC516    | E-17     | Q801     | F-5      |
| IC517    | D-16     | Q802     | F-4      |
| IC518    | F-15     | Q803     | F-5      |
| IC519    | F-10     | Q804     | F-5      |
| IC520    | C-14     | Q805     | F-5      |
| IC521    | B-15     | Q806     | F-5      |
| IC522    | B-13     | Q807     | F-4      |
| IC523    | D-12     | Q808     | F-3      |
| IC801    | C-5      | Q901     | E-1      |
| IC802    | G-4      |          |          |


Note on Printed Wiring Board:  
 • — : parts extracted from the component side.  
 • ○ : Through hole.  
 - - - : Pattern of the r.a.r. side.  
 • : Pattern from the side which enables seeing.

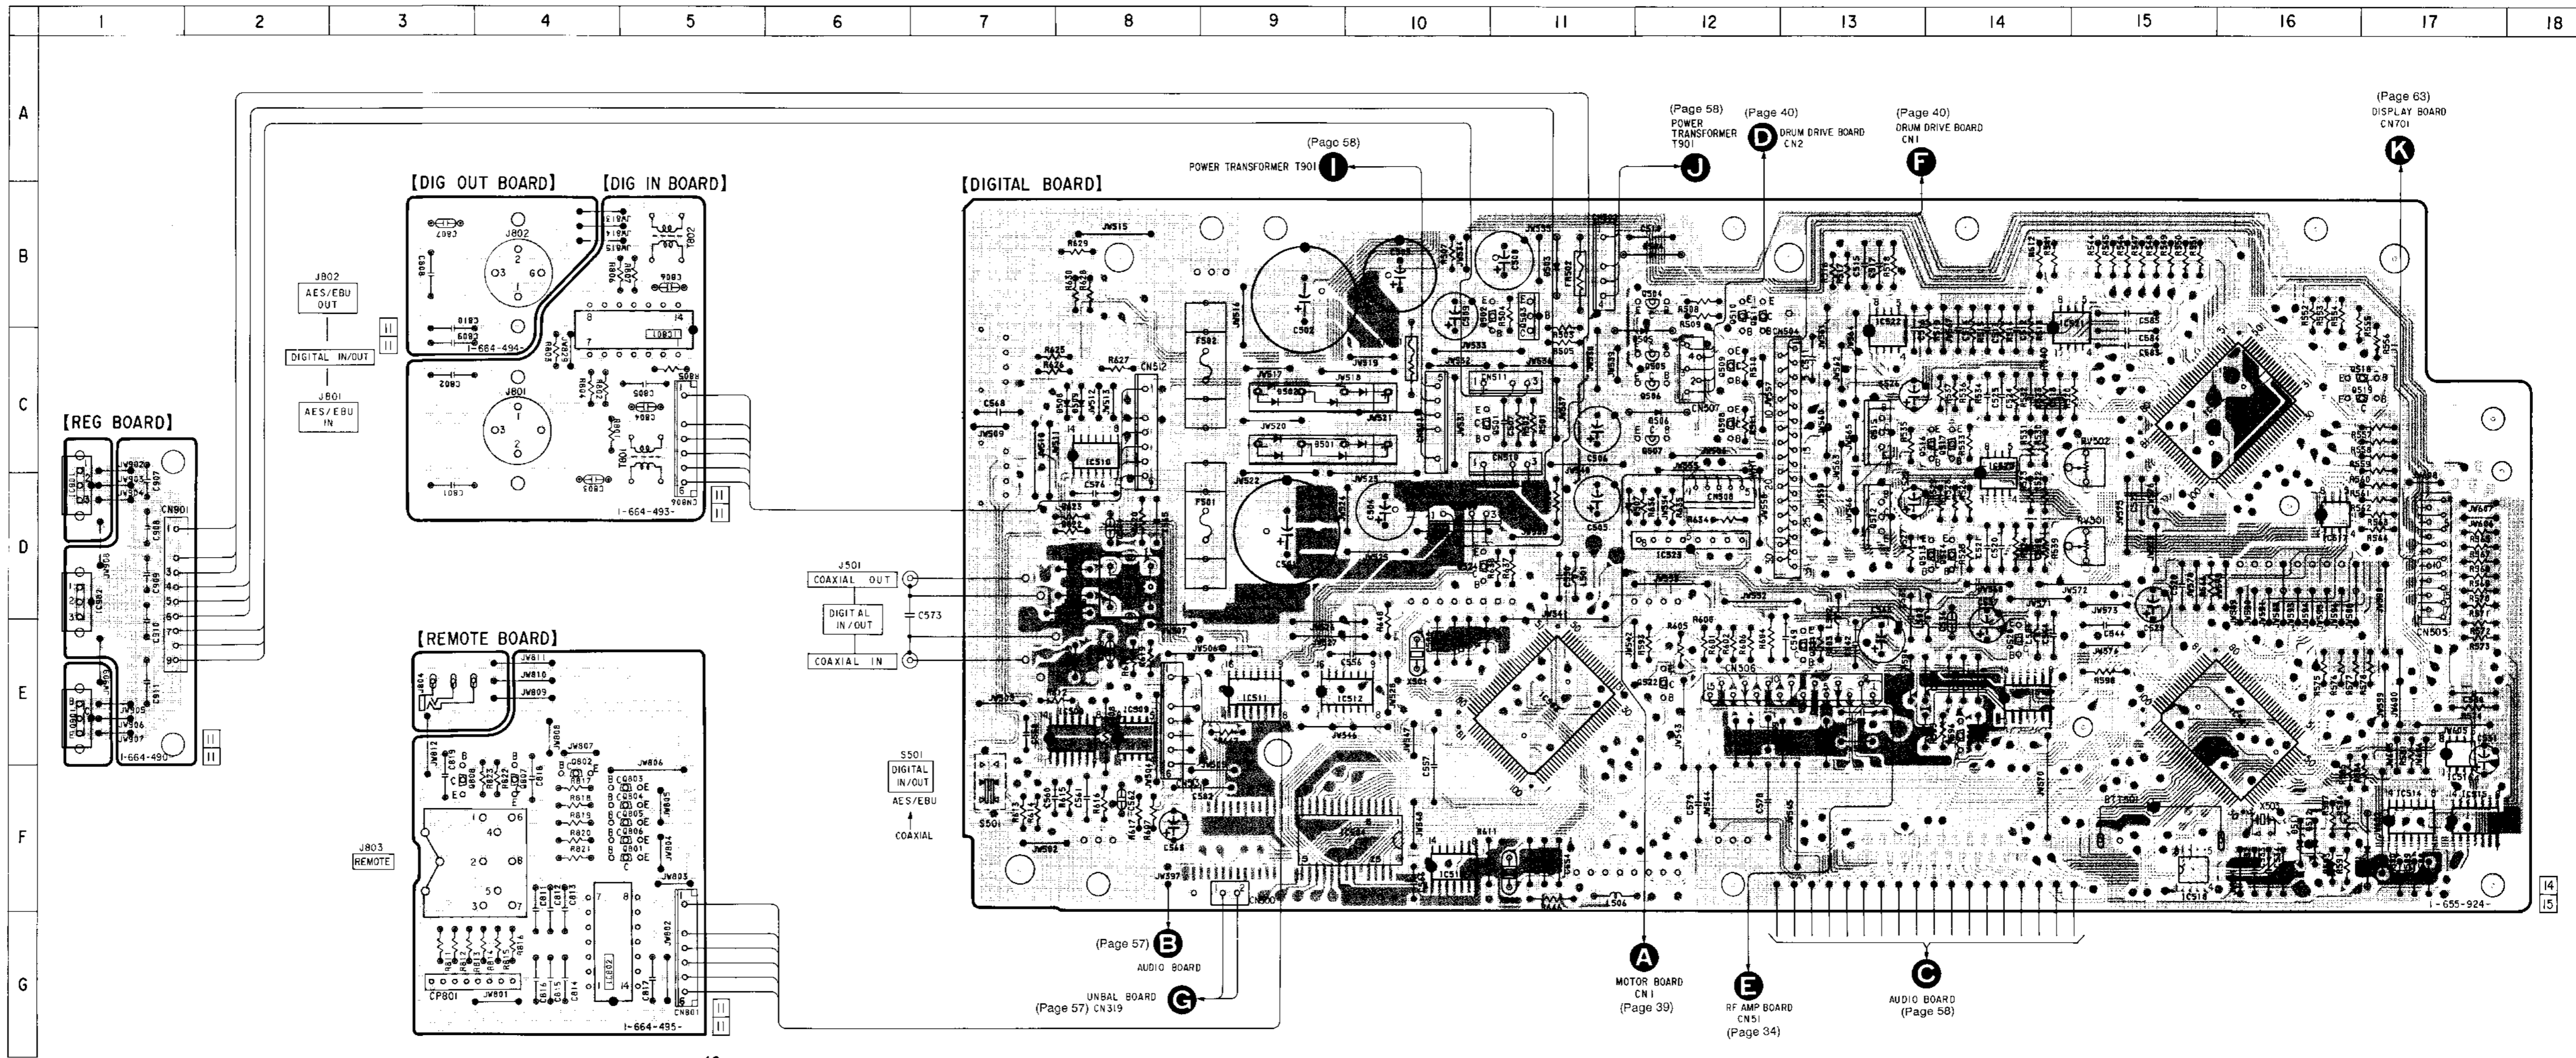

4-7. SCHEMATIC DIAGRAM - DIGITAL Section - See page 68 for IC Block Diagrams.

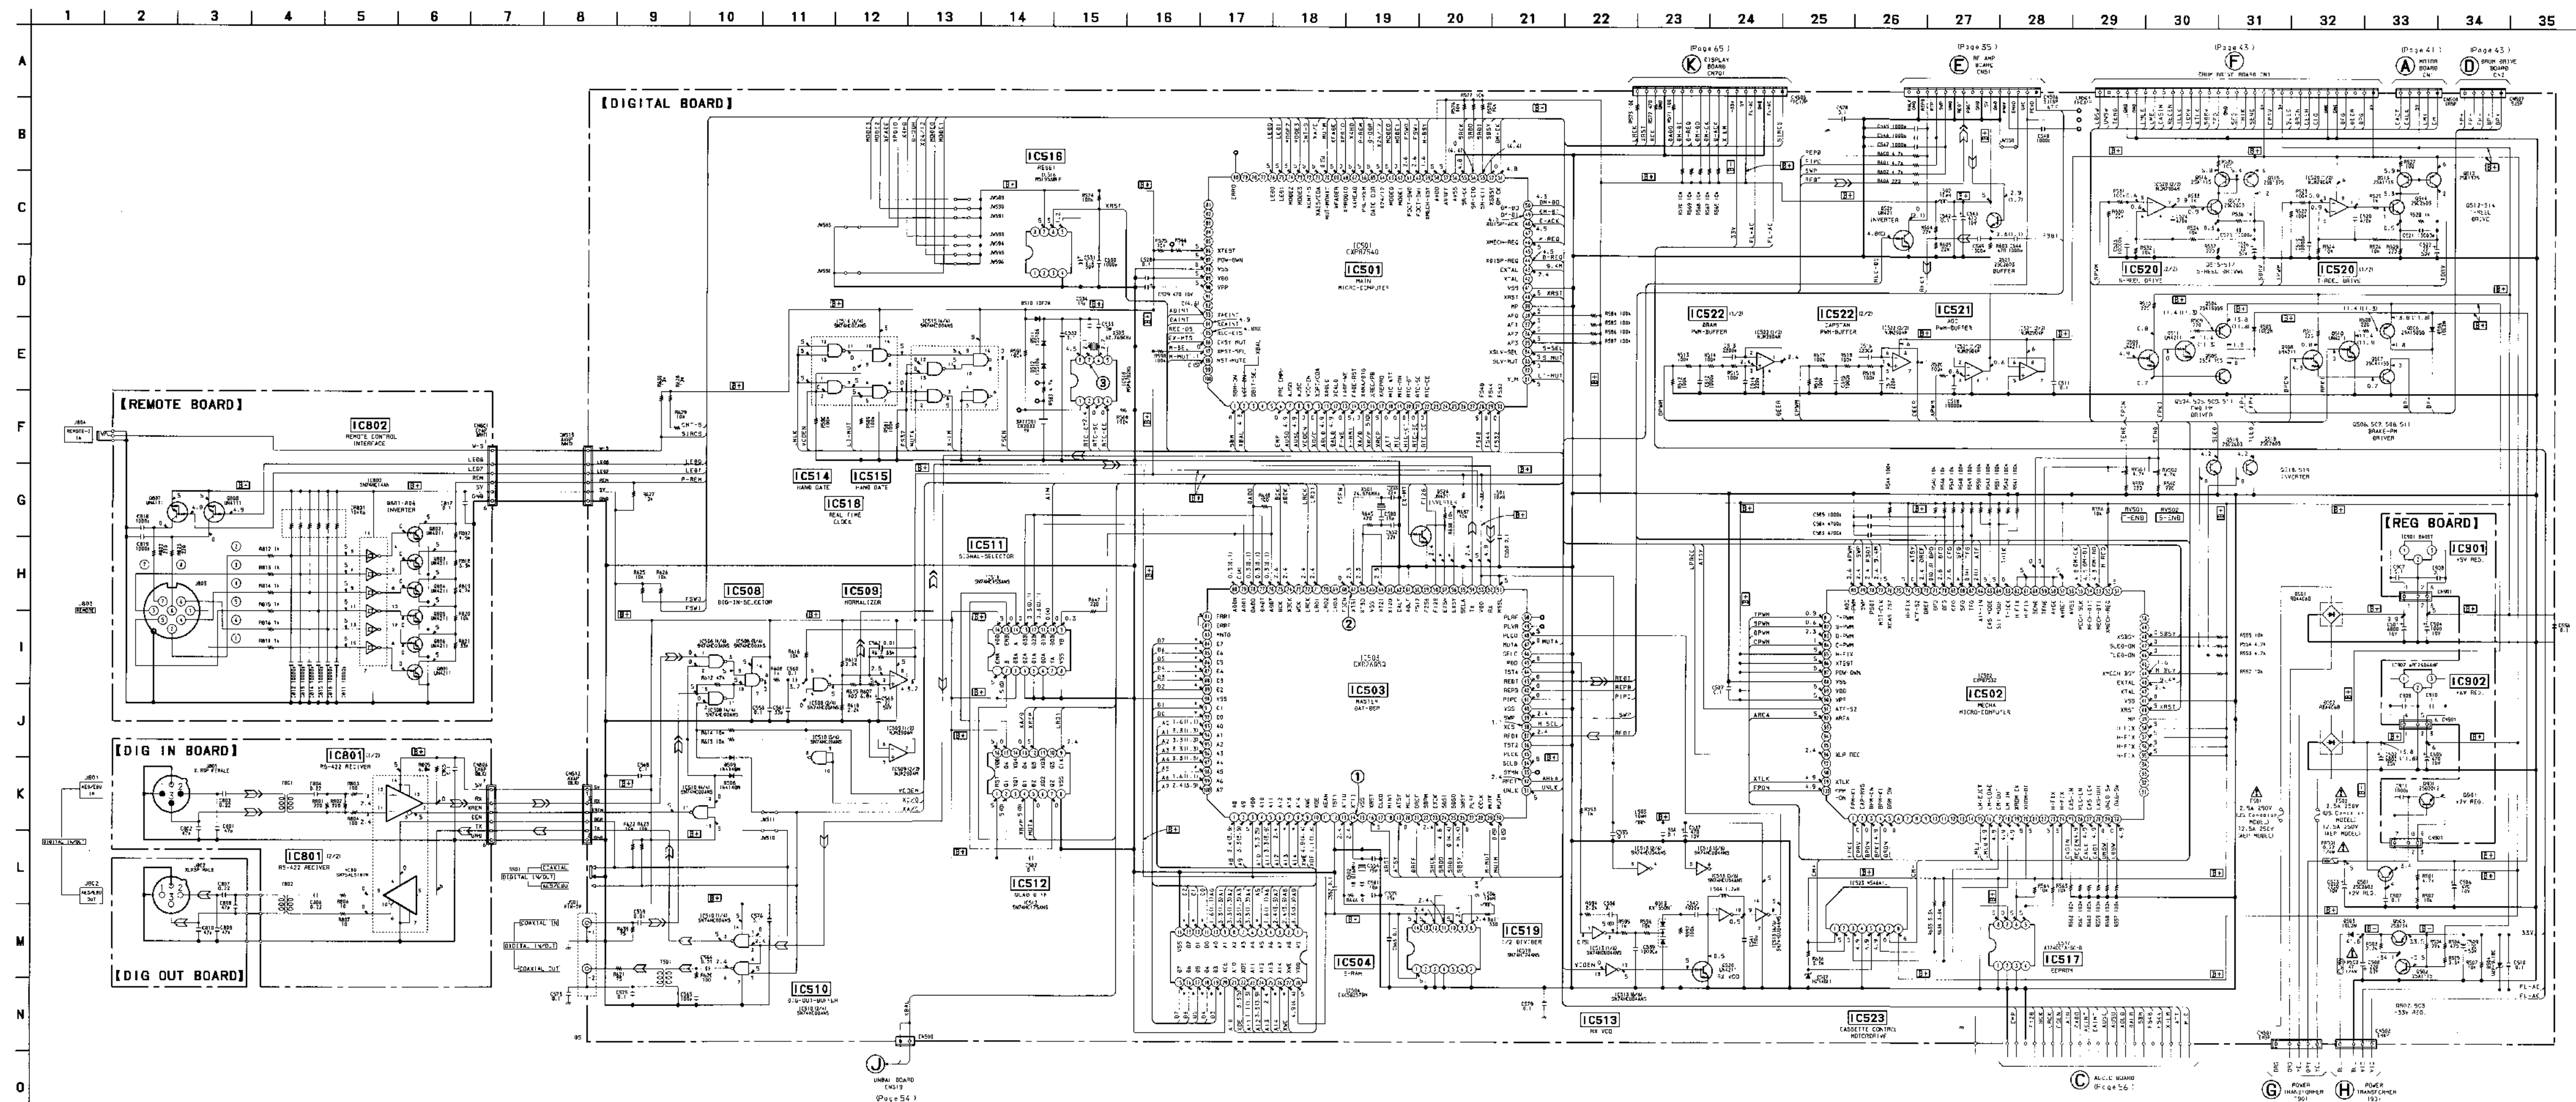

Waveforms

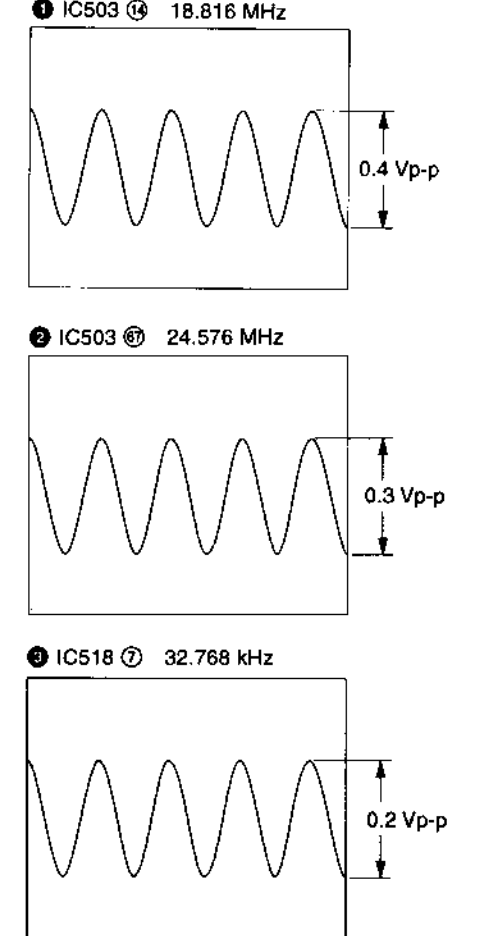

**Note on Schematic Diagram:**


- All capacitors are in  $\mu\text{F}$  unless otherwise noted.  $\text{pF}$ :  $\mu\text{pF}$  50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in  $\Omega$  and  $1/4$  W or less unless otherwise specified.
- $\text{---}$ : fusible resistor.
- $\square$ : panel designation.

**Note:**  
The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.


**Note:**  
Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. ne les remplacer que par une pièce portant le numéro spécifié.

- $\text{B}+$ : B+ Line.
- $\text{B}-$ : B- Line.
- $\text{---}$ : adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal conditions. no mark: PB ( $\square$ ): REC
- Voltages are taken with a VOM (Input impedance 10 M $\Omega$ ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with an oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path:  $\text{---}$ : PB  $\text{---}$ : REC

4-8. SCHEMATIC DIAGRAM - AUDIO Section - See page 68 for IC Block Diagrams.

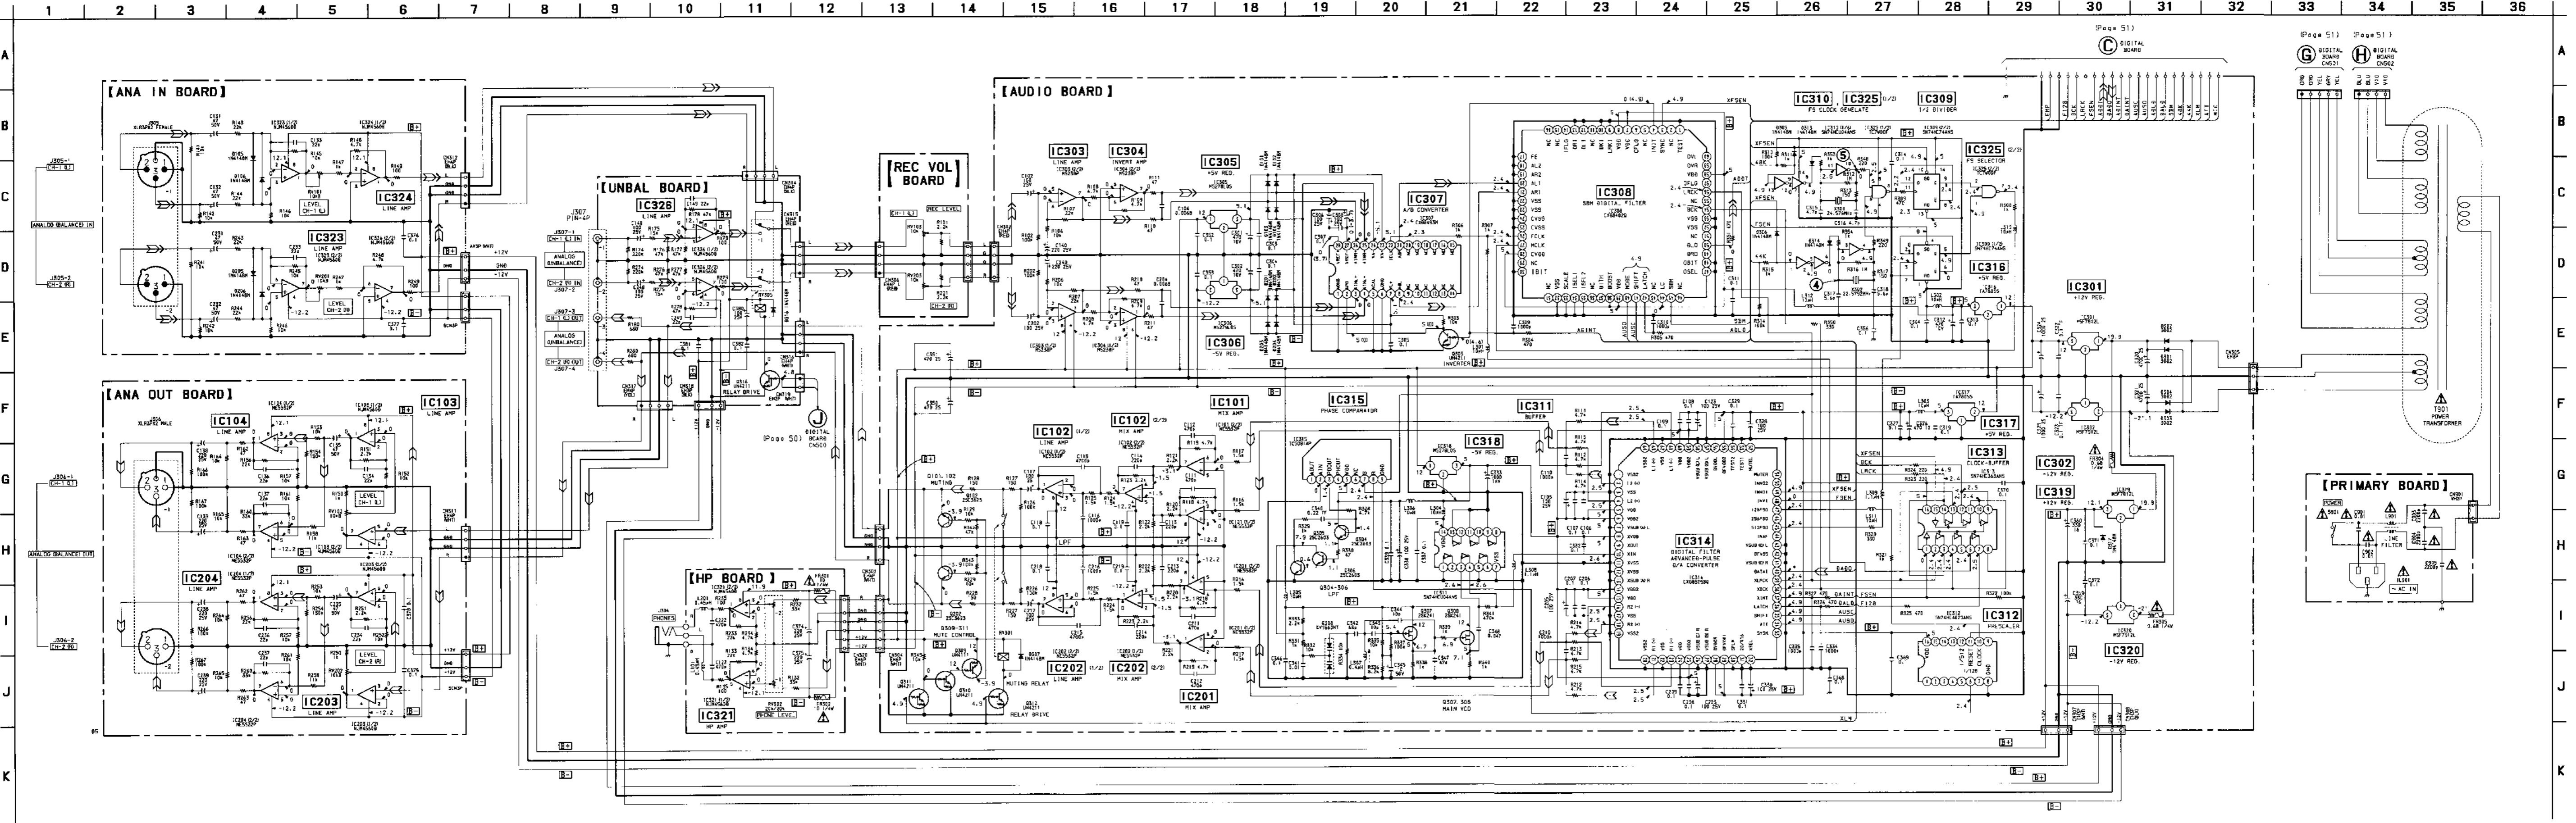



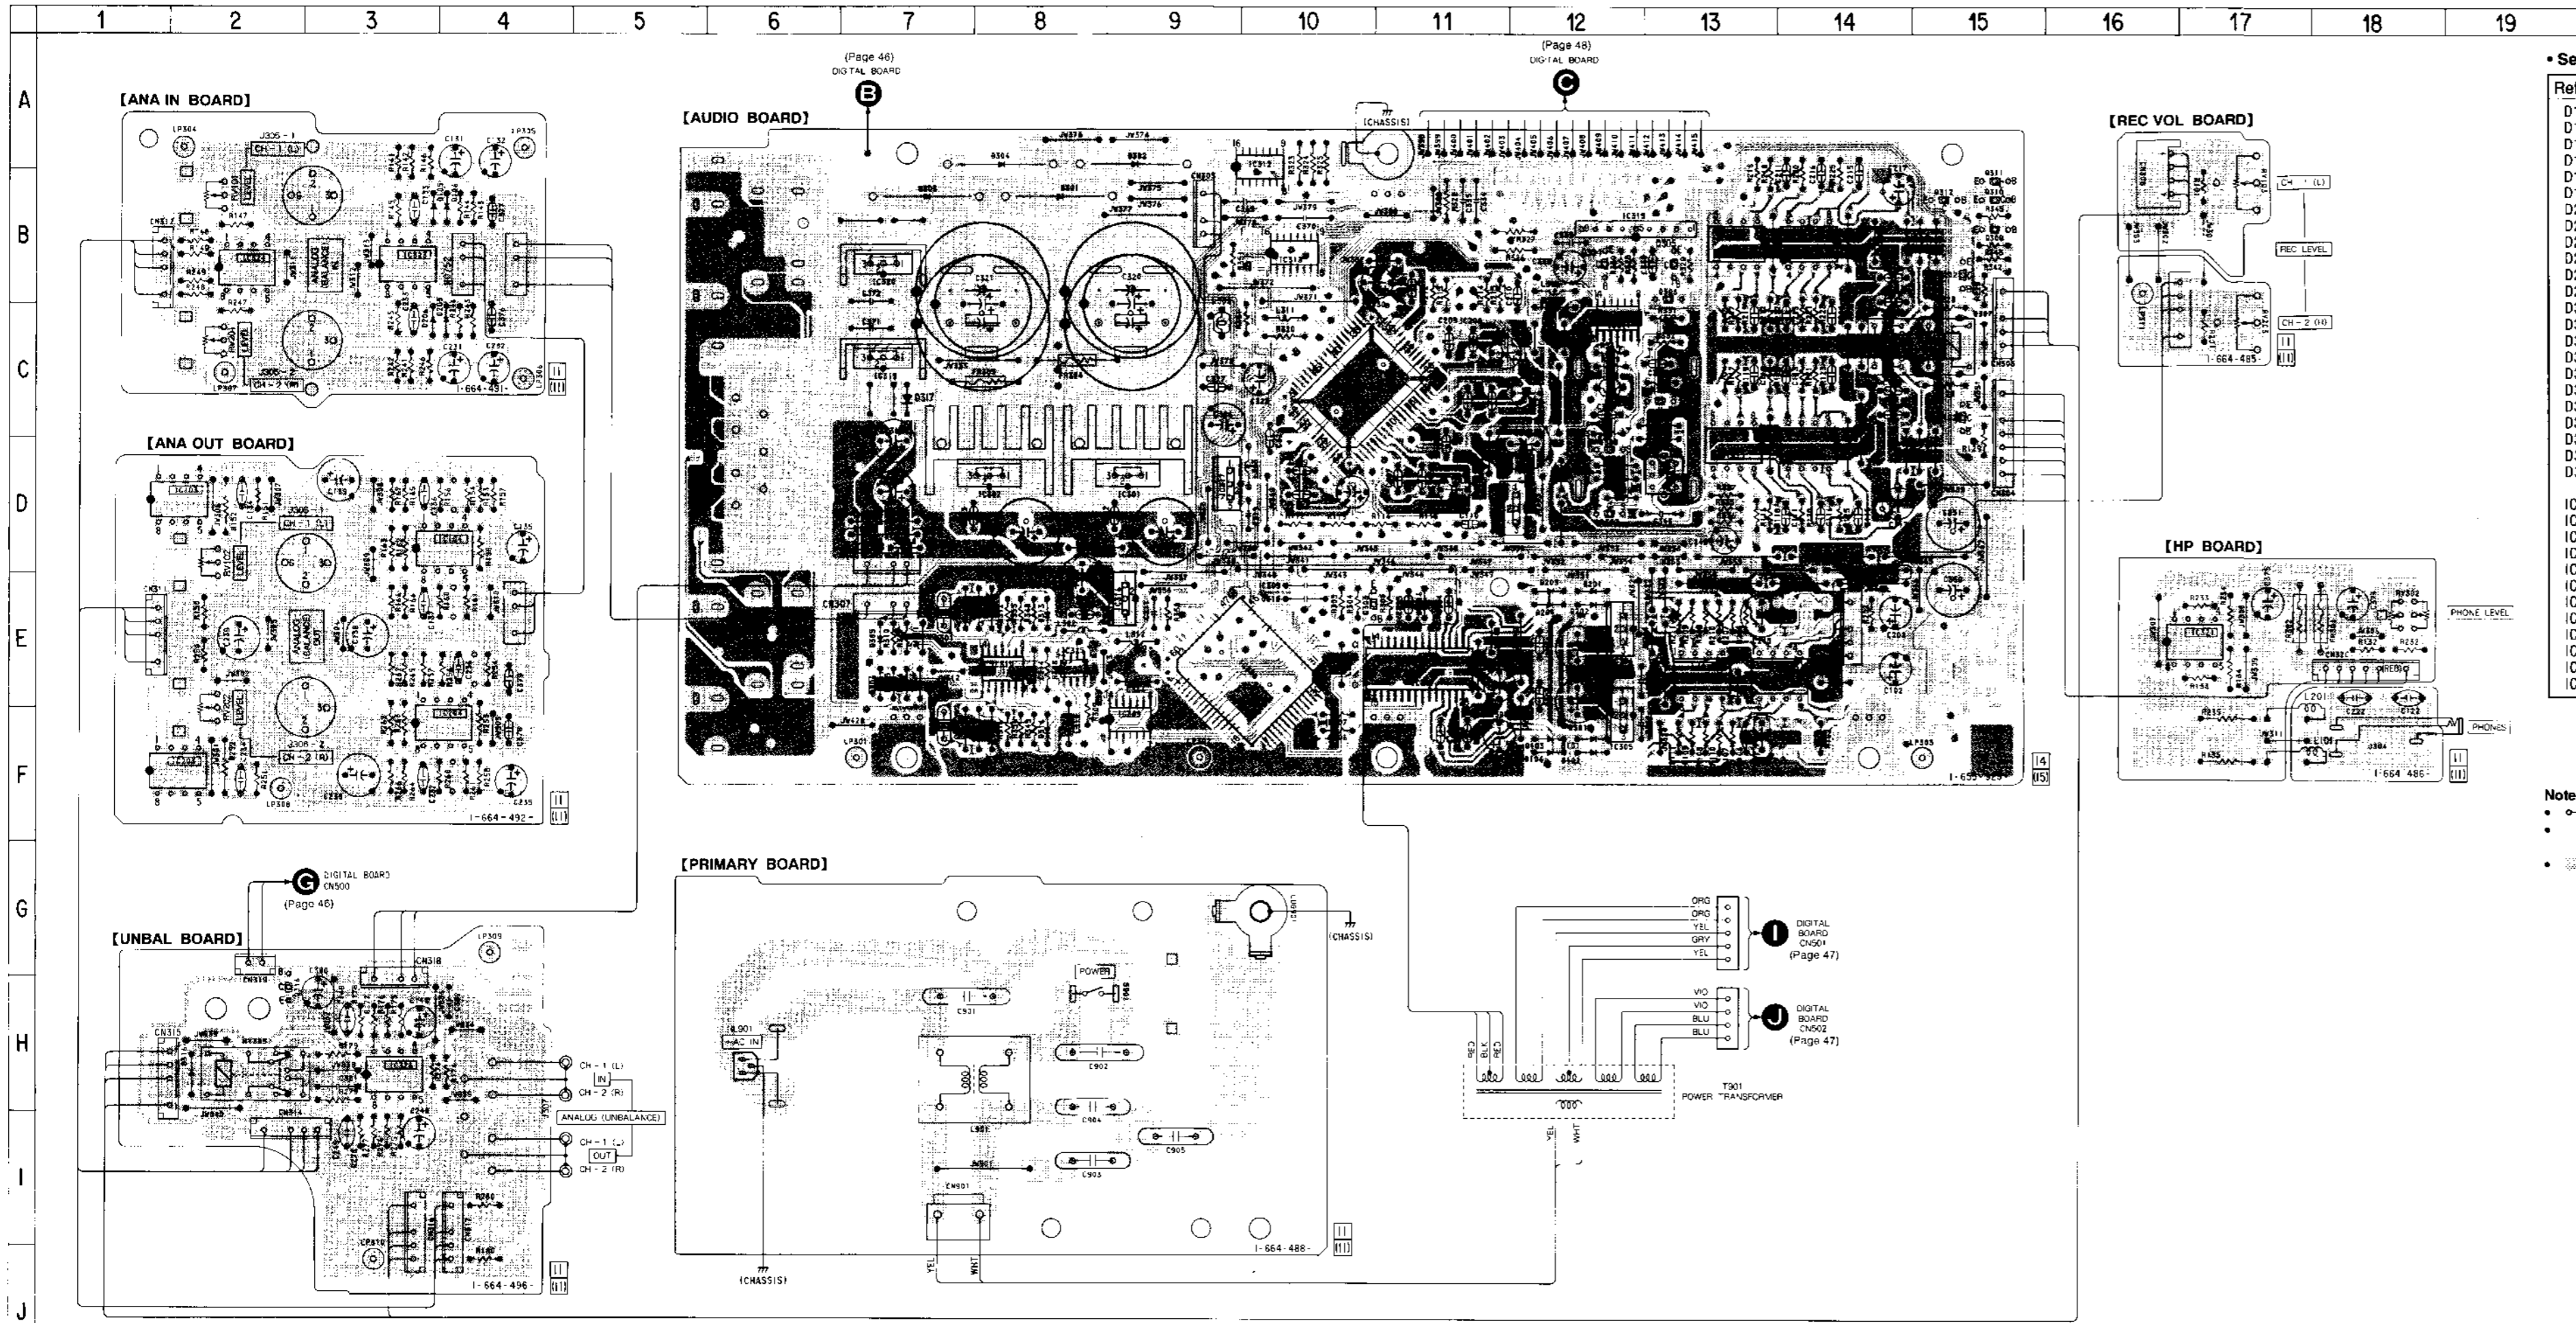



• Semiconductor Location

| Ref. No. | Location | Ref. No. | Location |
|----------|----------|----------|----------|
| D101     | F-12     | IC305    | F-12     |
| D102     | F-12     | IC306    | E-12     |
| D103     | F-12     | IC307    | E-11     |
| D104     | F-12     | IC308    | E-10     |
| D105     | B-3      | IC309    | F-9      |
| D106     | B-4      | IC310    | E-8      |
| D201     | E-12     | IC311    | C-12     |
| D202     | E-12     | IC312    | A-10     |
| D203     | E-12     | IC313    | B-10     |
| D204     | E-12     | IC314    | C-10     |
| D205     | C-4      | IC315    | B-12     |
| D206     | C-3      | IC316    | E-9      |
| D301     | B-8      | IC317    | D-9      |
| D302     | A-9      | IC318    | D-12     |
| D303     | B-7      | IC319    | C-7      |
| D304     | A-8      | IC320    | B-7      |
| D305     | E-7      | IC321    | E-17     |
| D306     | E-7      | IC323    | B-3      |
| D307     | C-15     | IC324    | B-2      |
| D308     | C-13     | IC325    | E-8      |
| D313     | E-8      | IC326    | H-3      |
| D314     | F-8      |          |          |
| D317     | C-7      | Q102     | C-15     |
|          |          | Q202     | B-15     |
| IC101    | D-13     | Q303     | E-11     |
| IC102    | D-14     | Q304     | B-12     |
| IC103    | D-2      | Q305     | B-13     |
| IC104    | D-4      | Q306     | B-13     |
| IC201    | B-13     | Q307     | D-12     |
| IC202    | B-14     | Q308     | D-12     |
| IC203    | F-2      | Q309     | B-15     |
| IC204    | F-4      | Q310     | B-15     |
| IC301    | D-9      | Q311     | B-15     |
| IC302    | D-8      | Q312     | B-15     |
| IC303    | E-14     | Q316     | H-2      |
| IC304    | E-13     |          |          |

**Note on Printed Wiring Board:**

- : parts extracted from the component side.
- : Through hole.
- ⊞ : Pattern from the side which enables seeing.

• Waveforms

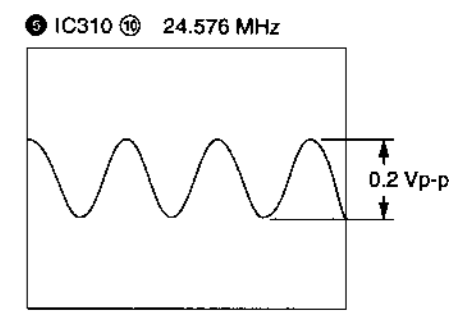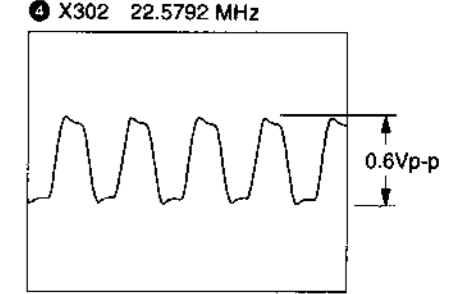

**Note on Schematic Diagram:**

- All capacitors are in  $\mu\text{F}$  unless otherwise noted.  $\text{pF}$ :  $\mu\text{F}$  50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in  $\Omega$  and  $\frac{1}{4}$  W or less unless otherwise specified.
- ⊞ : fusible resistor.
- ⊞ : panel designation.

**Note:** The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.


**Note:** Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. ne les remplacer que par une pièce portant le numéro spécifié.

- ⊞+ : B+ Line.
- ⊞- : B- Line.
- Voltages and waveforms are dc with respect to ground under no-signal conditions. no mark : PB ( ) : REC
- Voltages are taken with a VOM (Input impedance 10 M $\Omega$ ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
- ⊞ : PB
- ⊞ : REC



4-10. PRINTED WIRING BOARDS - DISPLAY Section - See page 25 for Circuit Boards Location.

• Semiconductor Location

| Ref. No. | Location |
|----------|----------|
| D701     | E-10     |
| D702     | E-9      |
| D703     | E-8      |
| D704     | D-7      |
| IC701    | B-8      |
| IC702    | B-9      |
| IC703    | B-10     |
| Q701     | D-11     |
| Q702     | D-11     |
| Q703     | D-12     |
| Q704     | B-12     |
| Q705     | C-12     |
| Q706     | C-12     |
| Q707     | C-12     |

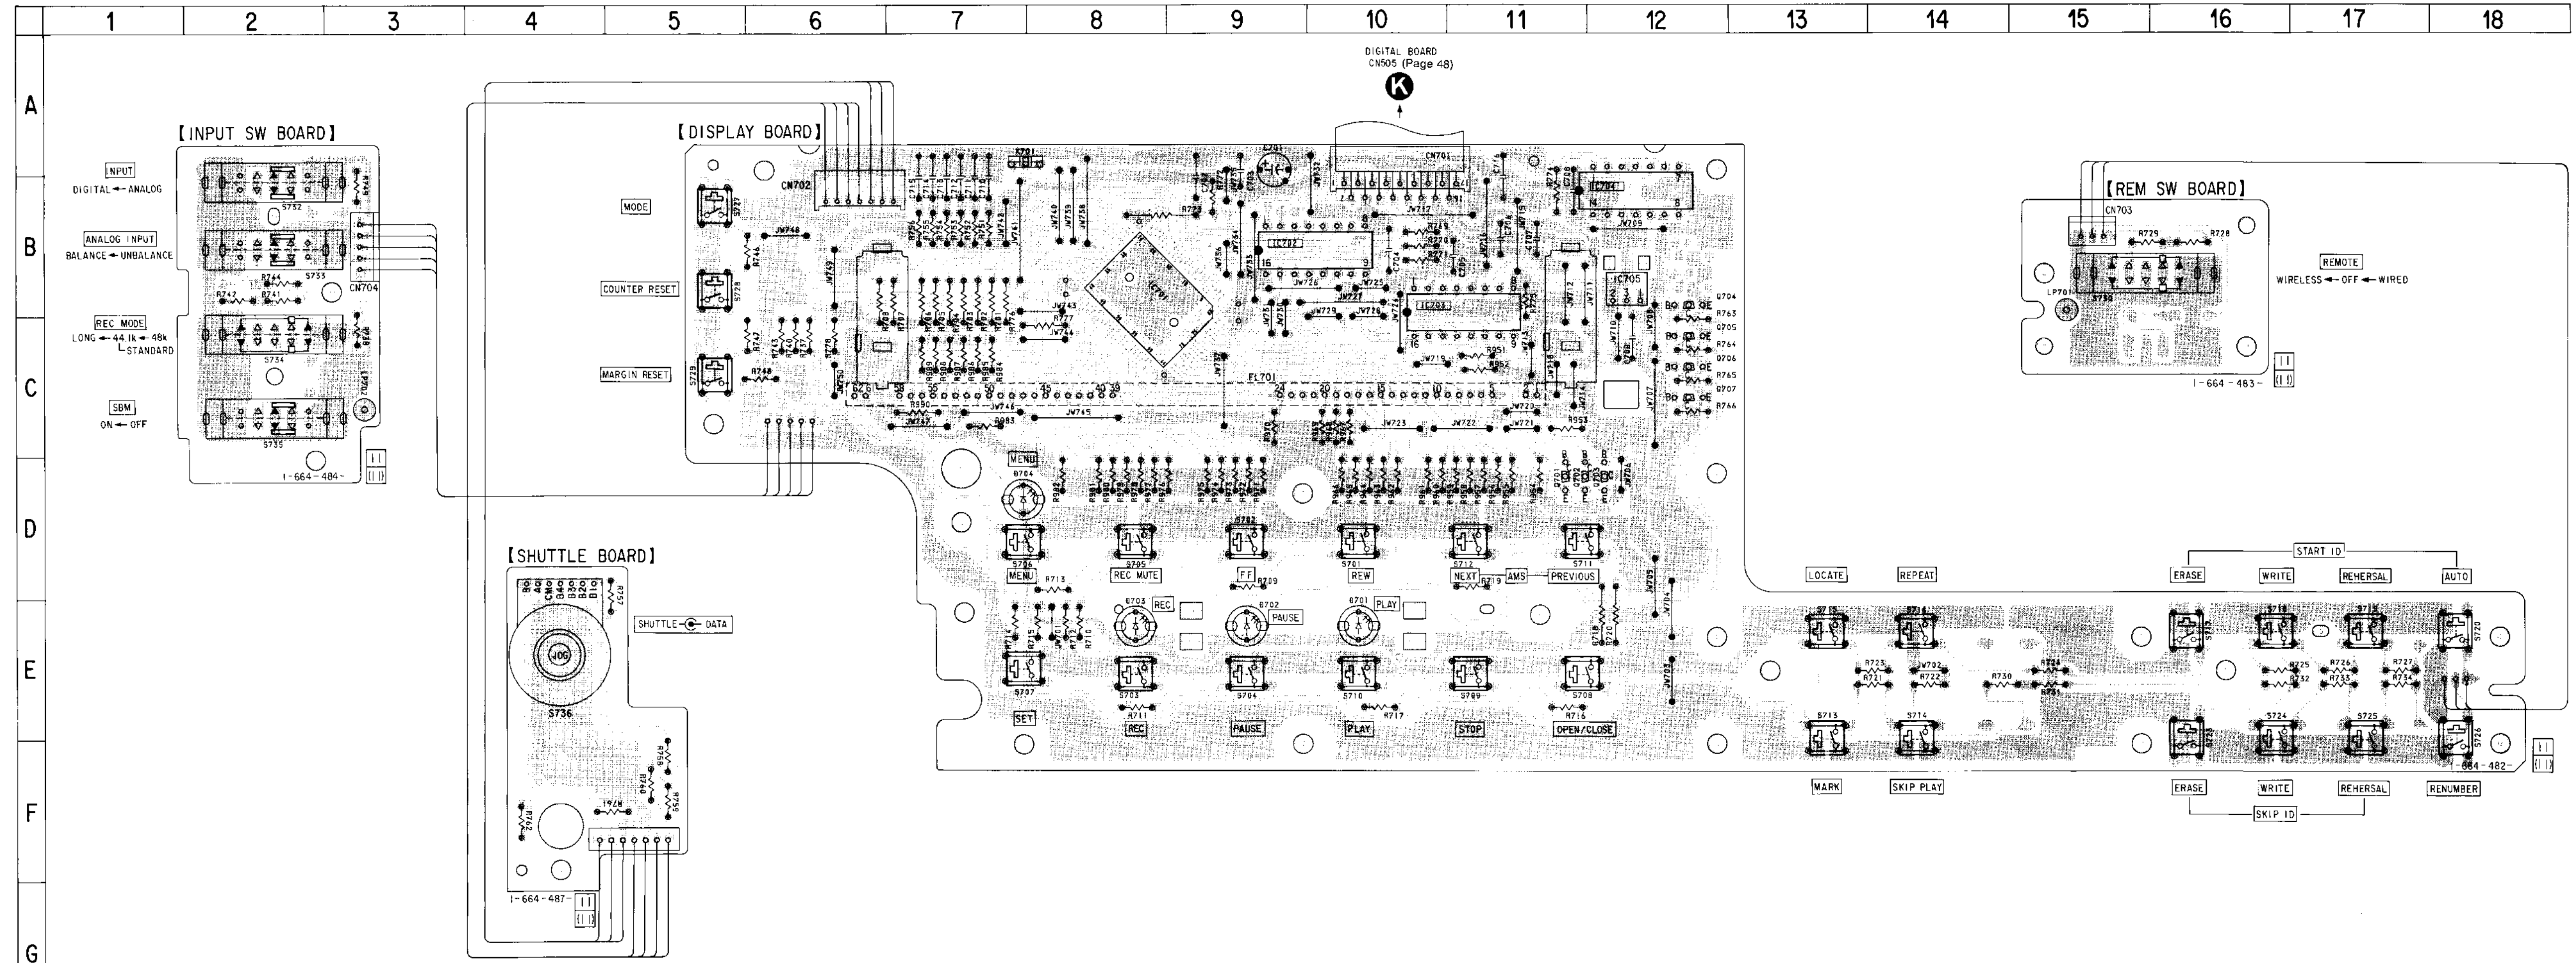

Note on Printed Wiring Board:  
 • : parts extracted from the component side.  
 • : Pattern from the side which enables seeing.

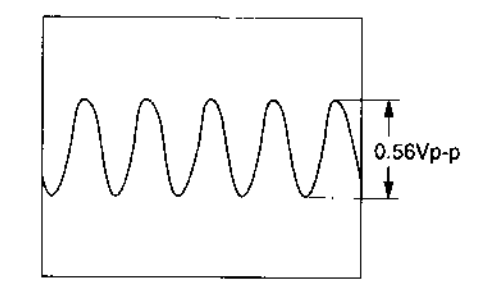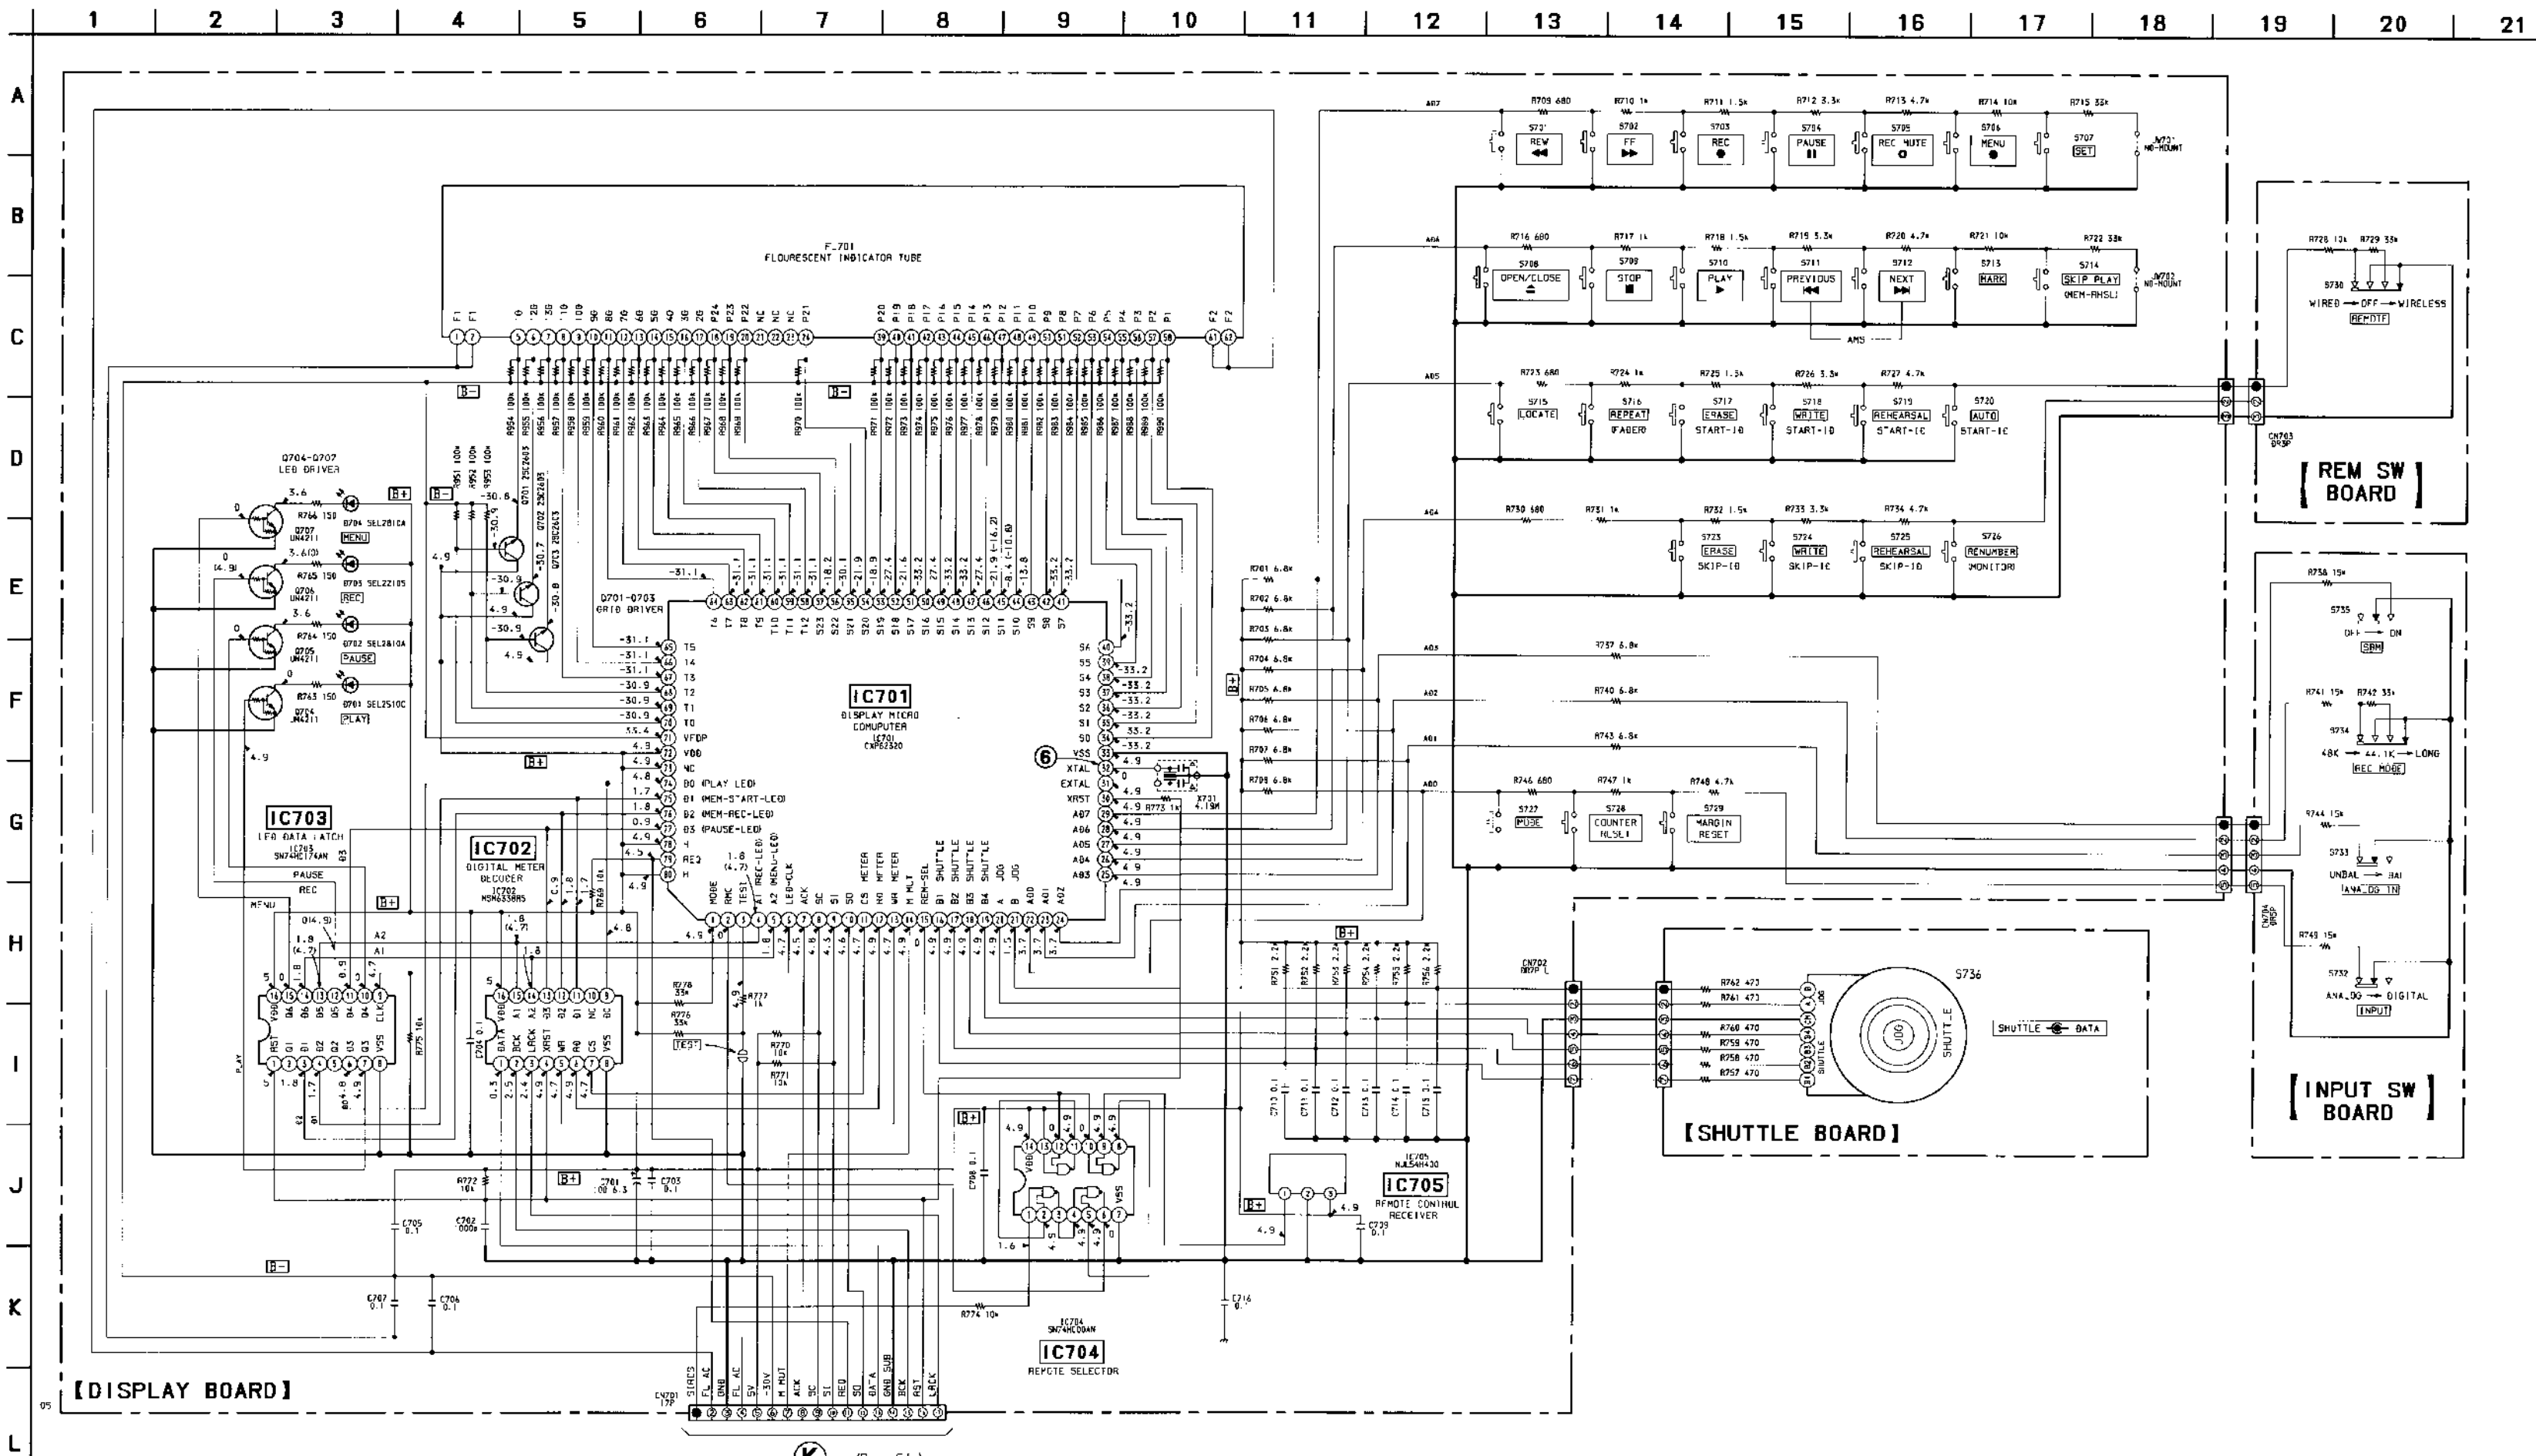

- Note:**
- All capacitors are in  $\mu\text{F}$  unless otherwise noted.  $\text{pF}$ :  $\mu\text{F}$  50 WV or less are not indicated except for electrolytics and tantalums.
  - All resistors are in  $\Omega$  and  $1/4\text{W}$  or less unless otherwise specified.
  - $\Delta$ : internal component.
  - $\square$ : panel designation.


**Note:**  
The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

**Note:**  
Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. ne les remplacer que par une pièce portant le numéro spécifié.


- $\square$  : B+ Line.
- $\square$  : B- Line.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions. no mark : PB ( ) : REC
- Voltages are taken with a VOM (input impedance 10 M $\Omega$ ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with an oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.

• IC Block Diagrams


IC1 CXA1364R (RF AMP board)

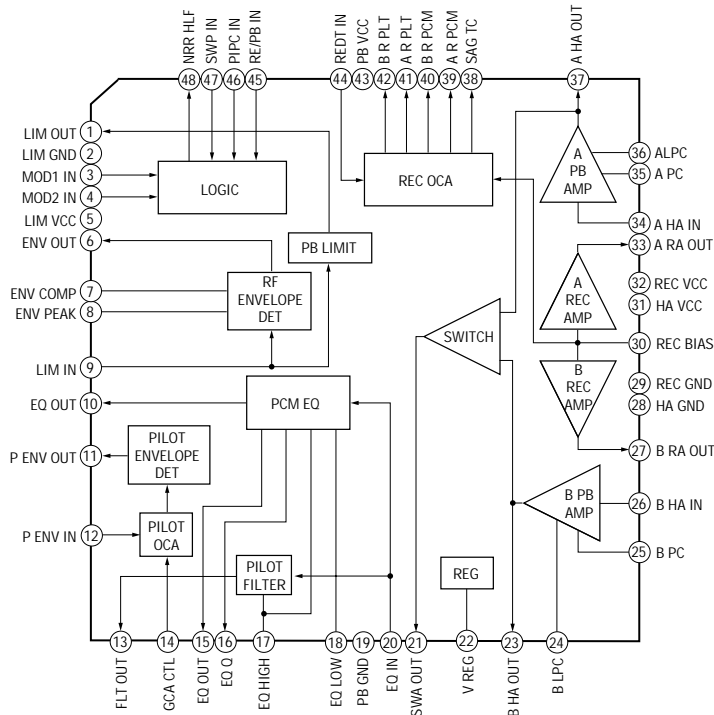


IC3 CX20115A (DRUM DRIVE board)

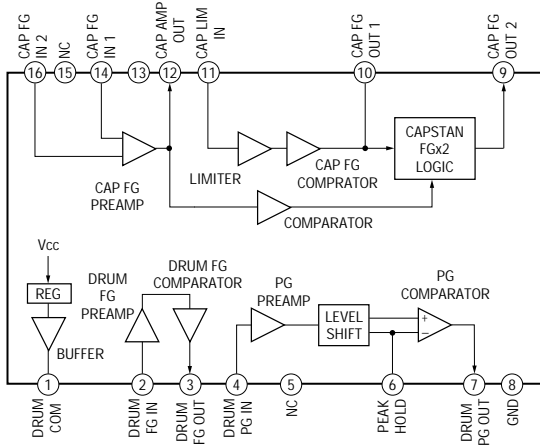


IC307 CXD8493M (AUDIO board)

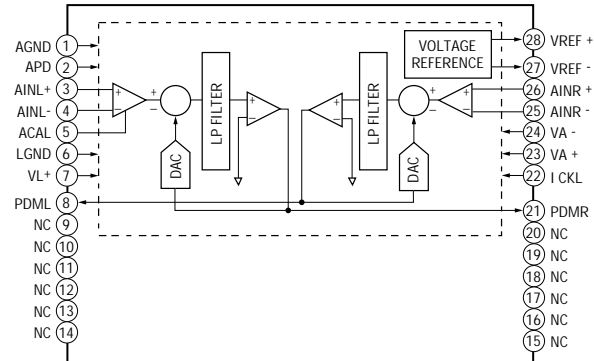


**IC309 SN74HC74AN (AUDIO board)**

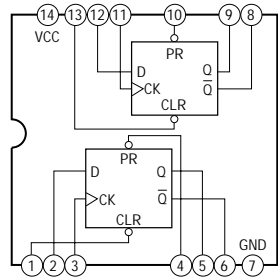


**IC312 SN74HC4020ANS (AUDIO board)**

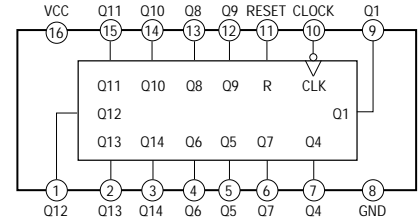


**IC314 CXD8505BQ (AUDIO board)**

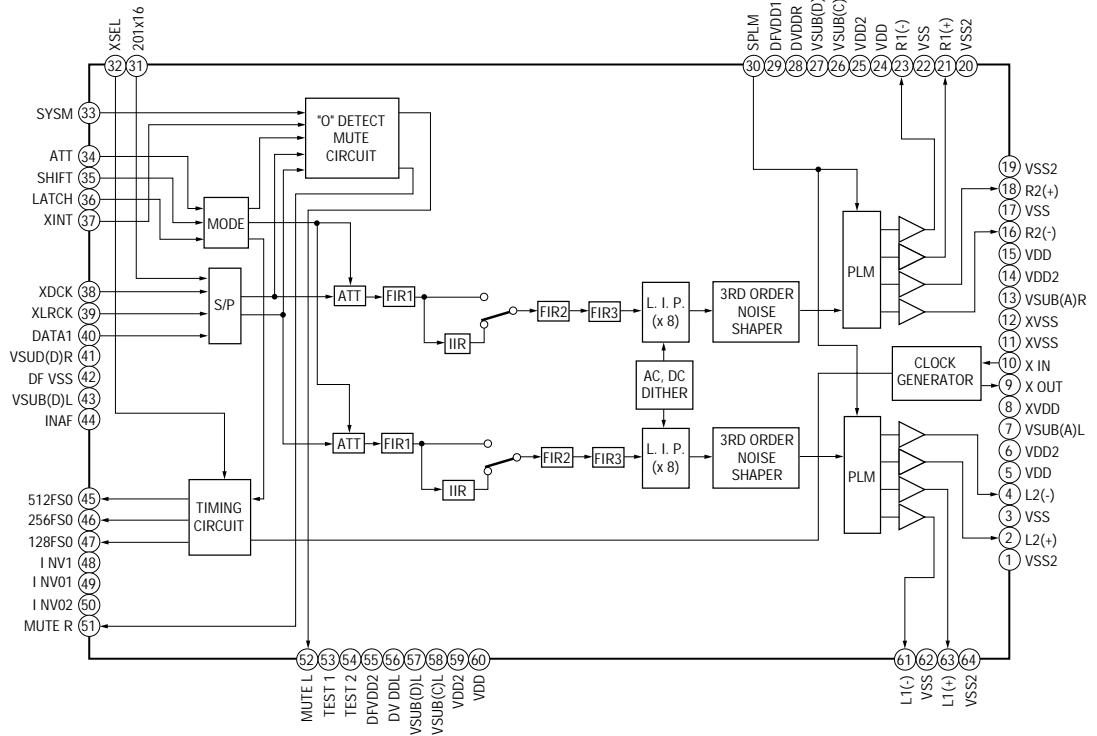


**IC315 TC5081AP (AUDIO board)**

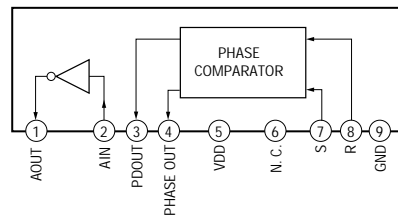


**IC504 CXK58257BM (DIGITAL board)**

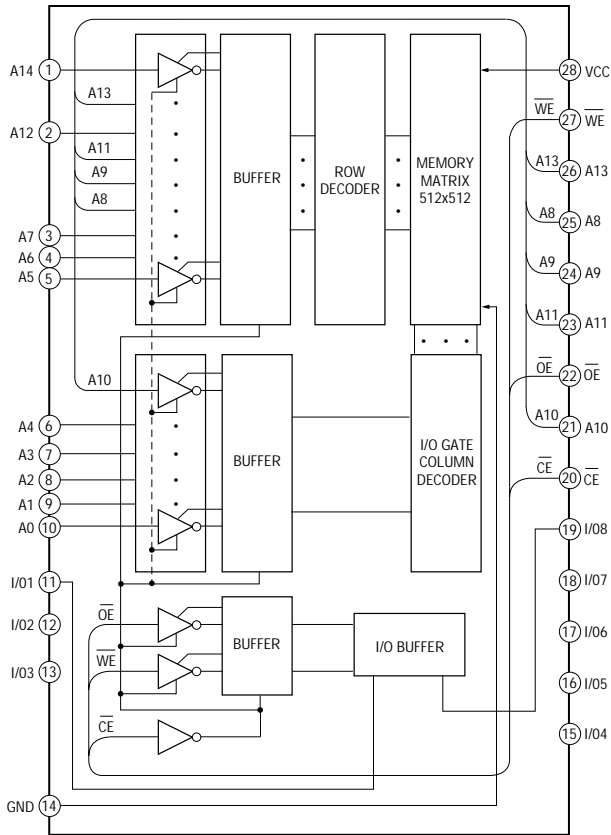


**IC512 MC74HC175F (DIGITAL board)**

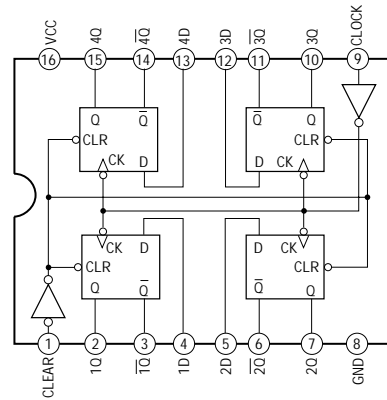


**IC516 M51953BFP (DIGITAL board)**

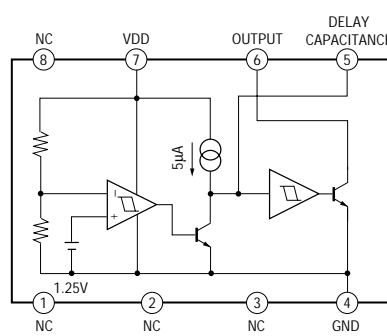


**IC517 AT24C01A-10 SC (DIGITAL board)**

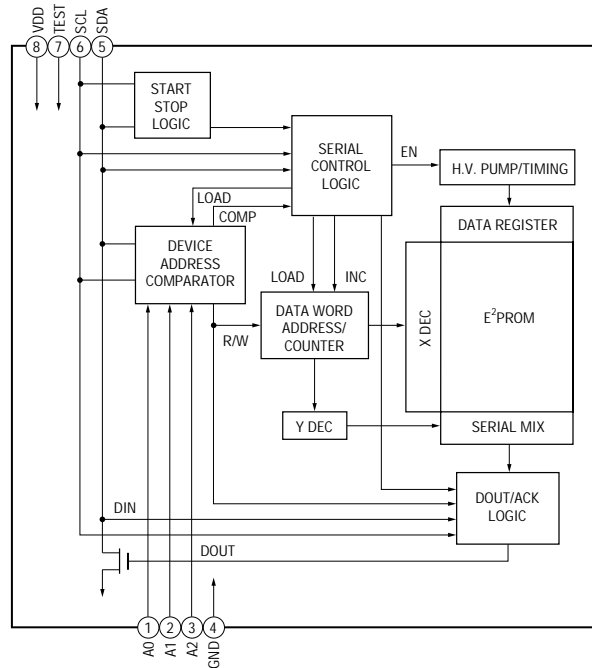


**IC511 SN74HC153ANS (DIGITAL board)**

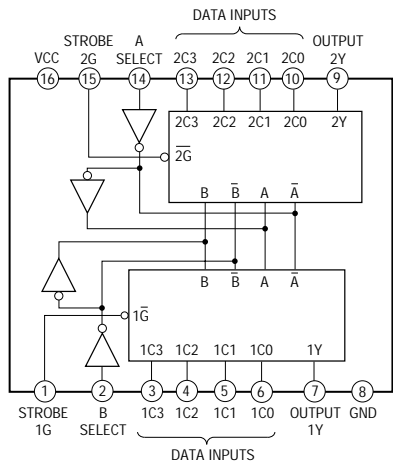


**IC518 MSM6782-01-MS (DIGITAL board)**

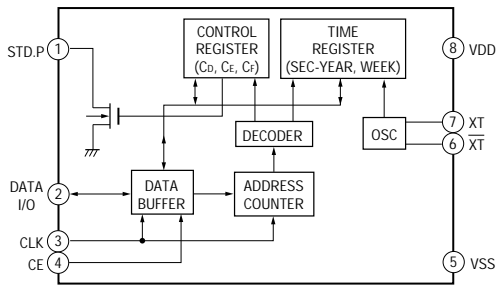


**IC523 M54641L (DIGITAL board)**

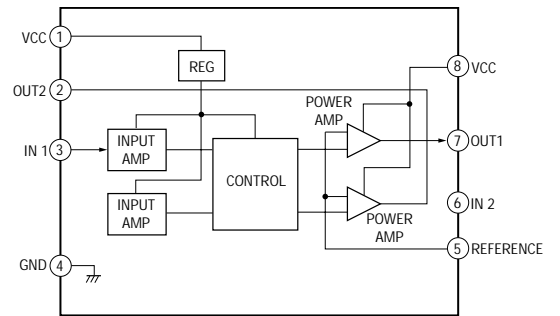

**IC702 MSM6338RS (DISPLAY board)**

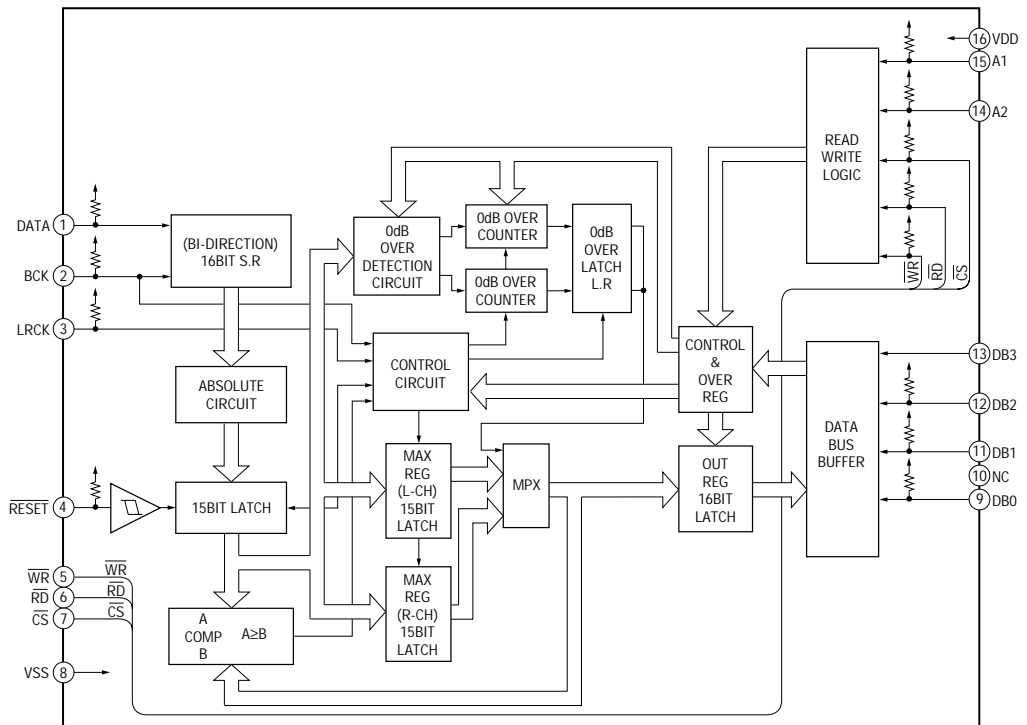

**IC703 SN74HC174AN (DISPLAY board)**

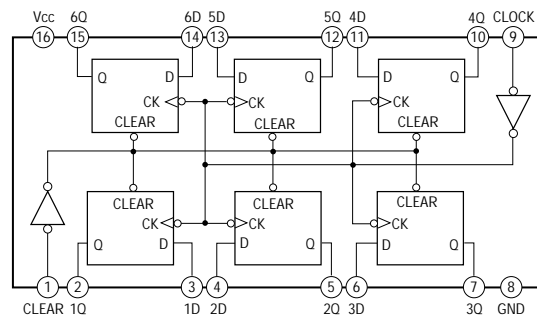

#### 4-12. IC PIN FUNCTION DESCRIPTION

##### • AUDIO BOARD IC308 CXD8482Q (SBM + Digital Filter)

| Pin No. | Pin Name | I/O | Function  |
|---------|----------|-----|---|
| 1       | TEST     | I   | Test input pin. "H" for test mode and "L" for normal mode. (Fixed at "L" level in this set.)  |
| 2       | NC       | —   | Empty pin   |
| 3       | SYNC     | I   | Sync mode setting pin. "H" for INT master mode and "L" for EXT slave mode.  |
| 4       | INIT     | I   | A/D converter power down mode input from main microcomputer (IC501). ("H" active)<br>(This IC is set OFF in digital input/output mode.) |
| 5       | NC       | —   | Empty pin   |
| 6       | CFLG     | O   | FE calibration flag output (Not used in this set, empty pin.)   |
| 7, 8    | VDD      | —   | Power supply pin (+5V)  |
| 9       | LRKI     | I   | L/R clock input (Not used in this set, fixed at "L" level.)   |
| 10      | BKI      | I   | Beat clock input (Not used in this set, fixed at "L" level.)  |
| 11      | NC       | —   | Empty pin   |
| 12      | DLI      | I   | L channel data input (Not used in this set, fixed at "L" level.)  |
| 13      | DRI      | I   | R channel data input (Not used in this set, fixed at "L" level.)  |
| 14      | IFLG     | O   | FE sync flag output (Not used in this set, empty pin.)  |
| 15, 16  | NC       | —   | Empty pin   |
| 17      | FE       | I   | FE select input (Not used in this set, fixed at "L" level.)   |
| 18      | AL2      | I   | Data signal (L) input (Not used in this set, fixed at "L" level.)   |
| 19      | AR2      | I   | Data signal (R) input (Not used in this set, fixed at "L" level.)   |
| 20      | AL1      | I   | Data signal (L) input from A/D converter (IC307).   |
| 21      | AR1      | I   | Data signal (R) input from A/D converter (IC307).   |
| 22, 23  | VSS      | —   | Ground  |
| 24, 25  | CVSS     | —   | Ground  |
| 26      | FCLK     | O   | Output of 128fs master clock for FE to A/D converter (IC307).   |
| 27      | MCLK     | I   | Input of 256fs master clock from FS clock generator (IC325).  |
| 28      | CVDD     | —   | Power supply pin (+5V)  |
| 29      | NC       | —   | Empty pin   |
| 30      | IBIT     | I   | 64fs input data mode select input ("H": 4bit, "L": 1bit) (Fixed at "L" level in this set.)  |
| 31      | NC       | —   | Empty pin   |
| 32      | VSS      | —   | Ground  |
| 33      | SCALE    | I   | Scale select input ("H": ×4, "L": ×5) (Fixed at "L" level in this set.)   |
| 34      | ISEL1    | I   | FS select of input data (Fixed at "L" level in this set.)   |
| 35      | ISEL2    | I   | FS select of input data (Fixed at "L" level in this set.)   |
| 36      | NC       | —   | Empty pin   |
| 37      | DITH     | I   | Dither control input. Dither active when "H" and stopped when "L".<br>(Not used in this set, empty pin.)                                |
| 38      | BOOST    | I   | Boost control input. Boost active when "H" and normal when "L".<br>(Fixed at "H" level in this set.)                                    |
| 39      | VDD      | —   | Power supply pin (+5V)  |
| 40      | MODE     | I   | Serial data signal input from main microcomputer (IC501).   |
| 41      | SHIFT    | I   | Shift clock signal input from main microcomputer (IC501). (Shift when ↓, latch when ↑)  |
| 42      | LATCH    | I   | Latch pulse signal input from main microcomputer (IC501).   |
| 43      | NC       | —   | Empty pin   |
| 44      | LC       | I   | Low cut control input. "H" for low frequency cut and "L" for flat. (Fixed at "H" level in this set.)                                    |
| 45      | SBM      | I   | Super Bit Mapping (SBM) control input from main microcomputer (IC501).<br>("H": ON, "L": OFF)   |



| Pin No. | Pin Name | I/O | Function  |
|---------|----------|-----|---|
| 46      | NC       | —   | Empty pin   |
| 47      | OSEL     | I   | FS select of data output. (“H”: 2FS output or EX mode, “L”: FS output)<br>(Fixed at “L” level in this set.) |
| 48      | OBIT     | I   | Bit select of data output. (“H”: 24 bits, “L”: 16 bits) (Fixed at “L” level in this set.)                   |
| 49      | DRO      | O   | Write clock output (Not used in this set, empty pin.)   |
| 50      | DLO      | O   | L/R channel data signal output  |
| 51      | NC       | —   | Empty pin   |
| 52, 53  | VSS      | —   | Ground  |
| 54      | BCK      | I   | Bit clock input from digital filter (IC314).  |
| 55      | NC       | —   | Empty pin   |
| 56      | LRCK     | I   | L/R clock input from digital filter (IC314).  |
| 57      | OFLG     | O   | Outside sync flag output (Not used in this set, empty pin.)   |
| 58      | VDD      | —   | Power supply pin (+5V)  |
| 59      | OVR      | O   | R channel side overflow flag output (Not used in this set, empty pin.)                                      |
| 60      | OVL      | O   | L channel side overflow flag output (Not used in this set, empty pin.)                                      |

• DIGITAL BOARD IC501 CXP87540-033Q (Main Microcomputer)

| Pin No. | Pin Name  | I/O        | Function  |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
|---------|-----------|------------|---|----------|----------|------------|----------|--------|---|---|---|--------|---|---|---|--------|---|---|---|
| 1       | SBM-ON    | O          | SBM (Super Bit Mapping) ON/OFF select pin (“L”: OFF, “H”: ON)   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 2       | XBAL      | O          | Analog input select (“L”: BAL, “H”: UNBAL)  |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 3       | OBIT-SEL  | O          | Not used.   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 4, 5    | —         | —          | Empty pin   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 6       | PRE-EMPH  | O          | Not used in this set.   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 7       | AUSO      | O          | Digital filter control serial data output pin   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 8       | AUSC      | O          | Digital filter control serial clock output pin  |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 9       | VCO-EN    | O          | DIGITAL IN REC mode only for “H” output.  |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 10      | XOPT/COA  | O          | Select (“L”: COAXIAL, “H”: OPTICAL)   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 11      | XADLD     | O          | A/D digital filter control latch output pin   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 12      | XDALD     | O          | D/A digital filter control latch output pin   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 13      | FADE-WE   | O          | Not used in this set.   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 14      | FADE-RST  | O          | Not used in this set.   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 15      | XANA/DIG  | O          | ANALOG/DIGITAL IN select output pin (“L”: ANALOG IN, “H”: DIGITAL IN)   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 16      | XREC/PB   | O          | Record/playback select output pin (“L”: REC, “H”: PB)   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 17      | XREPRO    | O          | Not used in this set.   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 18      | MIC-ATT   | O          | Not used in this set.   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 19      | MIC-ON    | O          | Not used in this set.   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 20      | RTC-DT    | I/O        | Clock IC serial data input/output pin   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 21      | RTC-SC    | O          | Clock IC serial data output pin   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 22      | RTC-CE    | O          | Clock IC chip enable output pin   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 23 — 27 | —         | —          | Empty pin   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 28      | FS48      | O          | Fs select output pin<br><table border="1" style="display: inline-table; vertical-align: middle;"> <thead> <tr> <th></th> <th>Fs 48kHz</th> <th>Fs 44.1kHz</th> <th>Fs 32kHz</th> </tr> </thead> <tbody> <tr> <td>Pin @,</td> <td>H</td> <td>L</td> <td>L</td> </tr> <tr> <td>Pin @.</td> <td>L</td> <td>H</td> <td>L</td> </tr> <tr> <td>Pin #/</td> <td>L</td> <td>L</td> <td>H</td> </tr> </tbody> </table> |          | Fs 48kHz | Fs 44.1kHz | Fs 32kHz | Pin @, | H | L | L | Pin @. | L | H | L | Pin #/ | L | L | H |
|         | Fs 48kHz  | Fs 44.1kHz |   | Fs 32kHz |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| Pin @,  | H         | L          |   | L        |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| Pin @.  | L         | H          |   | L        |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| Pin #/  | L         | L          | H   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 29      | FS44      | O          |   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 30      | FS32      | O          |   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 31      | XLM       | O          | Line mute output pin (“L”: ON, “H”: OFF)  |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 32      | —         | —          | Empty pin   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 33      | SLV-MUT   | O          | Not used in this set.   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 34      | XSLV-SEL  | O          | Not used in this set.   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 35 — 38 | AF3 — AF0 | I          | Pull-up fixed.  |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 39      | MP        | —          | Connected to Ground.  |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 40      | XRST      | I/O        | System reset input/output pin (“L”: ACTIVE)   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 41      | VSS       | —          | Ground  |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 42      | XTAL      | O          | Not used.   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 43      | EXTAL     | I          | Operating clock input pin (9.408MHz)  |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 44      | XDISP-REQ | O          | Pin for communication request output to display controller.   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 45      | —         | —          | Not used.   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 46      | XMECH-REQ | O          | Pin for communication request output to mechanism microcomputer.  |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 47      | —         | —          | Not used.   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 48      | XDISP-ACK | I          | Pin for communication acknowledge input from display controller.  |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 49      | DM-DI     | I          | Pin for serial data input from another microcomputer.   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 50      | DM-DO     | O          | Pin for serial data output to another microcomputer.  |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 51      | DM-CK     | O          | Pin for serial clock output to another microcomputer.   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 52      | XSBSY     | I          | Pin for SBSY input from master DAT-DSP IC.  |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |
| 53      | SR-DTI    | I          | Pin for serial data input from master DAT-DSP IC.   |          |          |            |          |        |   |   |   |        |   |   |   |        |   |   |   |

| Pin No. | Pin Name  | I/O | Function  |
|---------|-----------|-----|---|
| 54      | SR-DTO    | O   | Pin for serial data output to master DAT-DSP IC.  |
| 55      | SR-CK     | O   | Pin for serial clock output to master DAT-DSP IC.   |
| 56      | AVSS      | —   | Ground  |
| 57      | AVREF     | —   | Reference voltage pin (+5V)   |
| 58      | AVDD      | —   | Power supply pin (+5V)  |
| 59      | XMECH-BSY | I   | Pin for communication busy input from mechanism microcomputer. (“L”: BUSY)  |
| 60      | FOOT-SW1  | I   | Pull-up fixed.  |
| 61      | FOOT-SW0  | I   | Pull-up fixed.  |
| 62      | MODE1     | I   | Fixed at “L” level.   |
| 63      | MODE0     | I   | Fixed at “H” level.   |
| 64      | X24/12    | I   | 24/12-hour system display select input pin (“H”: 12-hour system display (US, Canadian model), “L”: 24-hour system display (AEP, UK, German model)). |
| 65      | DATE-ODR  | I   | YY-MM-DD/DD-MM-YY display select input pin (“L”: Fixed to DD-MM-YY display)   |
| 66      | PRL-REM   | I   | Pull-up fixed. Para-remote A/D input. (At connect with controller.)   |
| 67      | X4HEAD    | I   | Fixed at “H” level.   |
| 68      | XPRODIO   | I   | Fixed at “L” level.   |
| 69      | XFADER    | I   | Fixed at “H” level.   |
| 70      | MUT-MONIT | I   | Pin for mute monitor input from master DAT-DSP IC.  |
| 71      | XAES/COA  | I   | COAX↔AES/EBU Switch signal input.   |
| 72      | XCNT-S    | I   | Pull-up fixed.  |
| 73      | MODE3     | I   | Fixed at “H” level.   |
| 74      | MODE2     | I   | Fixed at “H” level.   |
| 75, 76  | LED1, 0   | O   | Remote commander LED output pin   |
| 77 — 79 | —         | —   | Not used.   |
| 80      | ERRO      | —   | TEST pin. (Not used.)   |
| 81 — 85 | —         | —   | Not used.   |
| 86      | XTEST     | I   | TEST pin (“L”: TEST MODE)   |
| 87      | POW-DWN   | I   | Fixed at “H” level.   |
| 88      | VSS       | —   | Ground  |
| 89      | VDD       | —   | Power supply pin (+5V)  |
| 90      | VPP       | —   | Connect to VDD.   |
| 91, 92  | —         | —   | Not used.   |
| 93      | XADINT    | O   | A/D digital filter initial setting output pin (“L”: INIT)   |
| 94      | XDAINT    | O   | D/A digital filter initial setting output pin (“L”: INIT)   |
| 95      | REC-DIS   | O   | Recording current control output pin (“L”: Normally, “H”: Recording current forced OFF)   |
| 96      | EXSY-MUT  | O   | EXSY output control pin (“L”: Normally, “H”: EXSY forced OFF)   |
| 97      | XMST-SEL  | O   | Signal process IC chip select output pin  |
| 98      | MST-MUTE  | O   | Playback data mute output pin (“L”: OFF, “H”: ON)   |
| 99, 100 | —         | —   | Not used.   |

• DIGITAL BOARD IC502 CXP87532-012Q (Mechanism Microcomputer)

| Pin No. | Pin Name  | I/O | Function   |
|---------|-----------|-----|--|
| 1       | FPM-KI    | O   | FWD plunger kick control output  |
| 2       | CAP-RVS   | O   | Capstan rotation direction control output. "H" for FWD and "L" for REV.      |
| 3       | BPM-ON    | O   | Brake plunger ON control output  |
| 4       | BPM-KI    | O   | Brake plunger kick control output  |
| 5       | DRM-ON    | O   | Drum motor ON control output   |
| 6       | —         | O   | Not used.  |
| 7       | —         | O   |  |
| 8       | —         | O   |  |
| 9       | —         | O   |  |
| 10      | —         | O   |  |
| 11      | —         | O   |  |
| 12      | —         | O   |  |
| 13      | —         | O   |  |
| 14      | —         | O   |  |
| 15      | LM-EJCT   | O   | Loading motor rotation direction control output (Eject direction)            |
| 16      | LM-LOAD   | O   | Loading motor rotation direction control output (Loading direction)          |
| 17      | CM-OUT    | O   | Cassette compartment motor rotation direction control output (OUT direction) |
| 18      | CM-IN     | O   | Cassette compartment motor rotation direction control output (IN direction)  |
| 19      | XROM-CK   | O   | EEPROM serial clock output   |
| 20      | XROM-DT   | I/O | EEPROM serial data input/output  |
| 21      | —         | O   | Not used.  |
| 22      | —         | O   |  |
| 23      | H-FIX     | I   | Not used. (Fixed at "H" level.)  |
| 24      | H-FIX     | I   |  |
| 25      | CAS-IN    | I   | Cassette IN switch input   |
| 26      | REC-EN    | I   | REC enable switch input  |
| 27      | CAS-LCK   | I   | Cassette compartment lock switch input                                       |
| 28      | CAS-OUT   | I   | Cassette compartment OUT switch input  |
| 29      | UNLD-SW   | I   | UNLOAD switch input. "H" in UNLOAD position.                                 |
| 30      | LOAD-SW   | I   | LOAD switch. "H" in STOP position.   |
| 31      | —         | O   | Not used.  |
| 32      | —         | O   |  |
| 33      | —         | O   |  |
| 34      | —         | O   |  |
| 35      | H-FIX     | I   |  |
| 36      | H-FIX     | I   |  |
| 37      | H-FIX     | I   | Not used. (Fixed at "H" level.)  |
| 38      | H-FIX     | I   |  |
| 39      | MP        | —   | Connect to Ground.   |
| 40      | XRST      | I   | Reset input. "L" for reset.  |
| 41      | VSS       | —   | Ground   |
| 42      | XTAL      | O   | Crystal oscillator output pin (9.408MHz). (Not used in this set.)            |
| 43      | EXTAL     | I   | Crystal oscillator input pin (9.408MHz)                                      |
| 44      | XMECH-BSY | O   | Mechanism microcomputer BUSY signal input                                    |
| 45      | —         | O   | Not used.  |
| 46      | TLED-ON   | O   | T-END sensor ON output. "H" for ON.  |
| 47      | SLED-ON   | O   | S-END sensor ON output. "H" for ON.  |
| 48      | XSBSY     | I   | SUB SYNC input from main microcomputer (IC501).                              |

| Pin No. | Pin Name  | I/O | Pin Description   |
|---------|-----------|-----|---|
| 49      | —         | I   | Not used.   |
| 50      | —         | O   |   |
| 51      | —         | O   |   |
| 52      | XMECH-REQ | I   | Communication request input from main microcomputer (IC501).  |
| 53      | MECH-DTI  | I   | Serial data input from main microcomputer (IC501).            |
| 54      | MECH-DTO  | O   | Serial data output to main microcomputer (IC501).             |
| 55      | MECH-SCK  | I   | Serial clock input from main microcomputer (IC501).           |
| 56      | AVSS      | —   | A/D port Ground   |
| 57      | AVREF     | —   | A/D port power supply (+5V)                                   |
| 58      | AVDD      | —   | A/D port power supply (+5V)                                   |
| 59      | TEND      | I   | T-END sensor input  |
| 60      | SEND      | I   | S-END sensor input  |
| 61      | H-FIX     | I   | Fixed at "H" level.   |
| 62      | H-FIX     | I   |   |
| 63      | THICK     | I   | Thick switch input  |
| 64      | SET-MODE  | I   | Fixed at "H" level.   |
| 65      | CAS-MODE  | I   | Fixed at "H" level.   |
| 66      | ATF-IN    | I   | ATF pilot signal input  |
| 67      | TFG       | I   | T reel FG signal input  |
| 68      | SFG       | I   | S reel FG signal input  |
| 69      | CFG       | I   | Capstan FG signal input                                       |
| 70      | DFG       | I   | Drum FG signal input  |
| 71      | DPG       | I   | Drum PG signal input  |
| 72      | DREF      | I   | Drum reference signal input                                   |
| 73      | ATF-S2    | I   | Input of AFT sampling pulse for DPG automatic adjustment.     |
| 74      | H-FIX     | I   | Not used. (Fixed at "H" level.)                               |
| 75      | —         | O   | Not used.   |
| 76      | XCAS-TST  | I   | Test pin. "L" for cassette compartment without test mode.     |
| 77      | MST-CLK   | I   | Master clock input  |
| 78      | PBDT      | I   | PB data for ATF SYNC.   |
| 79      | SWP       | O   | Switching pulse output  |
| 80      | AGC-PWM   | O   | Output of PWM signal for AGC.                                 |
| 81      | T-PWM     | O   | Output of PWM signal for T reel.                              |
| 82      | S-PWM     | O   | Output of PWM signal for S reel.                              |
| 83      | D-PWM     | O   | Output of PWM signal for drum.                                |
| 84      | C-PWM     | O   | Output of PWM signal for capstan.                             |
| 85      | H-FIX     | I   | Not used. (Fixed at "H" level.)                               |
| 86      | XTEST     | I   | Test pin. "L" for test mode. (Used at D PG, PATH and torque.) |
| 87      | POW-DWN   | I   | Not used. (Fixed at "H" level.)                               |
| 88      | VSS       | —   | Ground  |
| 89      | VDD       | —   | +5V power supply  |
| 90      | VPP       | —   | Connect to +5V.   |
| 91      | ATF-S2    | O   | ATF sampling pulse #2 output                                  |
| 92      | AREA      | O   | AREA signal output  |
| 93      | —         | O   | Not used.   |
| 94      | —         | O   |   |
| 95      | —         | O   |   |
| 96      | XLP-REC   | O   | LP REC control output. "L" for LP mode RED.                   |

| Pin No. | Pin Name | I/O | Function  |
|---------|----------|-----|---|
| 97      | —        | O   | Not used.   |
| 98      | —        | O   |   |
| 99      | XTLK     | O   | Reel motor T LOCK control output. “L” for T LOCK. |
| 100     | FPM-ON   | O   | FWD plunger ON control output                     |

• DIGITAL BOARD IC503 CXD2605Q (Master DAT-DSP)

| Pin No. | Pin Name | I/O | Function  |
|---------|----------|-----|---|
| 1       | A8       | O   | External RAM address output   |
| 2       | A9       | O   | External RAM address output   |
| 3       | VDD      | —   | +5V   |
| 4       | A10      | O   | External RAM address output   |
| 5       | A11      | O   | External RAM address output   |
| 6       | A12      | O   | External RAM address output   |
| 7       | A13      | O   | External RAM address output   |
| 8       | A14      | O   | External RAM address output   |
| 9       | XWE      | O   | External RAM write enable signal output   |
| 10      | XOE      | O   | External RAM output enable signal output  |
| 11      | XEAN     | O   | External addressing enable signal output. (Not used in this set.)   |
| 12      | TST1     | I   | Test input (Fixed at "L" level.)  |
| 13      | XT1O     | O   | X'tal oscillation circuit 1 output  |
| 14      | XT1I     | I   | X'tal oscillation circuit 1 input   |
| 15      | VSS      | —   | Ground  |
| 16      | XRST     | I   | Reset input. "L" for reset.   |
| 17      | CLKO     | O   | System clock output. (The frequency is 4.9152 MHz when SELC is set "L" and 8.192 MHz when SELC is set "H".) (Not used in this set.)   |
| 18      | MINT     | O   | Control byte (1). Bit 1: Q code decode (intercurve detection) output when "L" and BCK clock output by RX-PLL when "H". (Not used in this set.)  |
| 19      | ATSY     | I   | ATF sync signal input   |
| 20      | MCLK     | O   | Channel clock (fch) output (Not used in this set.)  |
| 21      | DREF     | O   | SBSY cycled Duty 50 signal output   |
| 22      | SBPM     | O   | Control byte (1). Bit 1: Output of monitor signal for data transfer to and from microcomputer when "L" ("L" to permit transfer) and F256 clock output by RX-PLL when "H". (Not used in this set.) |
| 23      | EXCK     | I   | Input of clock for data transfer to and from main microcomputer (IC501).  |
| 24      | SDSI     | I   | Serial data input from main microcomputer (IC501).  |
| 25      | SDSO     | O   | Serial data output to main microcomputer (IC501).   |
| 26      | SBSY     | O   | Output of frame sync signal for data transfer to and from main microcomputer (IC501).   |
| 27      | PLRF     | O   | Output of PLL clock divided by 5880. (Not used in this set.)  |
| 28      | CCLK     | O   | 9.8304MHz output when SELC is "L" and 12.288MHz output when SELC is "H". (Not used in this set.)  |
| 29      | MUTE     | I   | Mute input. Set "H" to mute, but REC monitor sound will not be muted.   |
| 30      | MUTM     | O   | Mute monitor. "H" in muting.  |
| 31      | UNLK     | O   | RX-PLL lock monitor signal output. "L" in locking.  |
| 32      | RFCT     | I   | Area signal input. ("L" to enable AREA signal and "H" to disable AREA signal.)  |
| 33      | SYMN     | O   | RF associated C1 check result monitor signal output. (Not used in this set.)  |
| 34      | SELB     | I   | Test pin (Fixed at "H" level.)  |
| 35      | PLCK     | O   | Control byte (1). Bit 1: RF-PLL clock output when "L" and F128 clock output by RX-PLL when "H" (Not used in this set.)  |
| 36      | TST2     | I   | Test pin (Fixed at "L" level.)  |
| 37      | RFDT     | I   | Playback RF signal input  |
| 38      | XCS      | I   | Input of chip select signal for data transfer to and from microcomputer. "L" to permit transfer.  |
| 39      | SWP      | I   | RF switching pulse. "L" to select A track and "H" to select B track.  |
| 40      | VSS      | —   | Ground  |
| 41      | PIPC     | O   | Output of ATF pilot signal/discrimination signal for recording signal. "H" to output pilot signal.  |
| 42      | REPB     | O   | REC/PB discrimination signal output. "H" for REC mode.  |
| 43      | REDT     | O   | Recording signal output.  |

| Pin No. | Pin Name | I/O | Function   |
|---------|----------|-----|--|
| 44      | TST4     | I   | Test pin (Fixed at "L" level.)   |
| 45      | PDO      | O   | RX-PLL phase comparator output   |
| 46      | SELC     | I   | Oscillation frequency select signal input (Fixed at "L" level in this set.)  |
| 47      | MUTA     | I   | Mute input. "H" to mute, and REC monitor sound is also muted.  |
| 48      | PLCO     | I   | RX-PLL's external VCO clock input (512fs reference)  |
| 49      | PLVR     | O   | Output of phase comparator signal for RX-PLL. (2fs generated from PLL clock.)<br>(Not used in this set.)                     |
| 50      | PLRF     | O   | Output of phase comparator signal for RX-PLL. (RX SYNC detect signal 2fs)<br>(Not used in this set.)                         |
| 51      | MSSL     | I   | Master mode/slave mode select. "H" for master mode. (Fixed at "H" level in this set.)  |
| 52      | RX       | I   | Digital interface signal input   |
| 53      | VDD      | —   | +5V  |
| 54      | TX       | O   | Digital interface signal output  |
| 55      | SELA     | I   | Test pin (Fixed at "L" level.)   |
| 56      | EXSY     | I/O | External sync signal input/output  |
| 57      | EXSN     | I/O | External sync signal input/output  |
| 58      | F128     | I/O | 128fs signal/256fs signal (high speed) input/output  |
| 59      | F256     | O   | 256fs signal/512fs signal (high speed) output (Not used in this set.)  |
| 60      | F512     | O   | 512fs signal output (Not used in this set.)  |
| 61      | ADLF     | I   | ADDT, ADDI, ADDN serial data LSB/MSB first select input. "L" for LSB first.  |
| 62      | DALF     | I   | DADT, DADO serial data LSB/MSB first select input. "L" for LSB first.  |
| 63      | XT2O     | O   | X'tal oscillation circuit 2 output. (Not used in this set.)  |
| 64      | XT2I     | I   | X'tal oscillation circuit 2 input  |
| 65      | VSS      | —   | Ground   |
| 66      | XT3O     | O   | X'tal oscillation circuit 3 output   |
| 67      | XT3I     | I   | X'tal oscillation circuit 3 input  |
| 68      | FSEN     | I   | F128, BCK, LRCK input/output select input. "H" for output.   |
| 69      | LR03     | O   | Inverted LR02 signal (Not used in this set.)   |
| 70      | LR02     | O   | Control byte (1). Bit 1: 16BCK delayed LRCK signal when "L" and LRCK clock output by RX-PLL when "H" (Not used in this set.) |
| 71      | LR01     | O   | 15BCK delayed LRCK signal  |
| 72      | LRCK     | I/O | fs/2fs (high speed) signal input/output  |
| 73      | WCK      | O   | 2fs/4fs (high speed) signal output (Not used in this set.)   |
| 74      | XBCK     | O   | Inverted BCK signal output   |
| 75      | BCK      | I/O | 64fs/128fs (high speed) signal input/output  |
| 76      | ADDT     | I   | AD serial data input   |
| 77      | DADT     | O   | DA serial data output  |
| 78      | DADO     | I   | DIGITAL OUT audio data input   |
| 79      | ADDI     | O   | DIGITAL IN audio data output   |
| 80      | ADDN     | I   | DIGITAL IN audio data input  |
| 81      | ERRI     | I   | DIGITAL OUT Validity flag data input   |
| 82      | ERRF     | O   | DADT data's interpolation data/discrimination signal output. "H" for interpolation data.                                     |
| 83      | MNTG     | O   | "H" output indicates that error correction status monitor data is being output to D7 to D0.<br>(Not used in this set.)       |
| 84      | D7       | I/O | External RAM data input/output (MSB)   |
| 85      | D6       | I/O | External RAM data input/output   |
| 86      | D5       | I/O | External RAM data input/output   |
| 87      | D4       | I/O | External RAM data input/output   |
| 88      | D3       | I/O | External RAM data input/output   |
| 89      | D2       | I/O | External RAM data input/output   |
| 90      | VSS      | —   | Ground   |



| Pin No. | Pin Name | I/O | Function                             |
|---------|----------|-----|--------------------------------------|
| 91      | D1       | I/O | External RAM data input/output       |
| 92      | D0       | I/O | External RAM data input/output (LSB) |
| 93      | A0       | O   | External RAM address output          |
| 94      | A1       | O   | External RAM address output          |
| 95      | A2       | O   | External RAM address output          |
| 96      | A3       | O   | External RAM address output          |
| 97      | A4       | O   | External RAM address output          |
| 98      | A5       | O   | External RAM address output          |
| 99      | A6       | O   | External RAM address output          |
| 100     | A7       | O   | External RAM address output          |

• DISPLAY BOARD IC701 CXP82320-077Q (Display Controller)



| Pin No. | Pin Name   | I/O | Function   |
|---------|------------|-----|--|
| 1       | MODE       | I   | Fixed at "H" level.  |
| 2       | RMC        | I   | Remote control input from IC704.                                     |
| 3       | TEST       | I   | Test mode setting pin  |
| 4       | A1 METER   | O   | Address 1 output to IC702.   |
| 5       | A2 METER   | O   | Address 2 output to IC702.   |
| 6       | LED-CLK    | O   | Pin for CLK output to IC703.   |
| 7       | ACK        | O   | Pin for acknowledge output to main microcomputer (IC501).            |
| 8       | SC         | I   | Pin for serial clock input from main microcomputer (IC501).          |
| 9       | SI         | I   | Pin for serial data input from main microcomputer (IC501).           |
| 10      | SO         | O   | Pin for serial data output to main microcomputer (IC501).            |
| 11      | CS METER   | O   | Pin for chip select output to IC702.                                 |
| 12      | RD METER   | O   | Pin for read output to IC702.  |
| 13      | WR METER   | O   | Pin for write output to IC702.                                       |
| 14      | M MUT      | I   | Level meter mute input pin   |
| 15      | REM-SEL    | O   | Pin for remote selector output to IC704.                             |
| 16 — 19 | B1 — B4    | I   | Pin for shuttle signal input   |
| 20      | A JOG      | I   | Pin for jog signal input.  |
| 21      | B JOG      | I   |  |
| 22 — 29 | AD0 — AD7  | I   | Key input pins   |
| 30      | XRST       | I/O | System reset pin (active "L")  |
| 31      | EXTAL      | I   | System clock input pin   |
| 32      | XTAL       | O   | System clock output pin (4.19MHz)                                    |
| 33      | VSS        | —   | Ground   |
| 34 — 57 | S0 — S23   | O   | FL tube segment output pins  |
| 58 — 70 | T12 — T0   | O   | FL tube grid output pins   |
| 71      | VFDP       | I   | Power supply pin (-30V)  |
| 72      | VDD        | —   | Power supply pin (+5V)   |
| 73      | NC         | —   | Connect to VDD.  |
| 74 — 77 | D0 — D3    | I/O | Pin for data input/output to and from IC702.                         |
| 78      | H          | I   | Fixed at "H" level.  |
| 79      | X DISP REQ | I   | Pin for communication request input from main microcomputer (IC501). |
| 80      | H          | I   | Fixed at "H" level.  |


## SECTION 5 EXPLODED VIEWS

**NOTE:**


- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts  
Example:  
KNOB, BALANCE (WHITE) . . . (RED)  
                          ↑                          ↑  
                         Parts Color    Cabinet's Color

- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list and accessories and packing materials are given in the last of the electrical parts list.

The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

**(1) CASE SECTION**

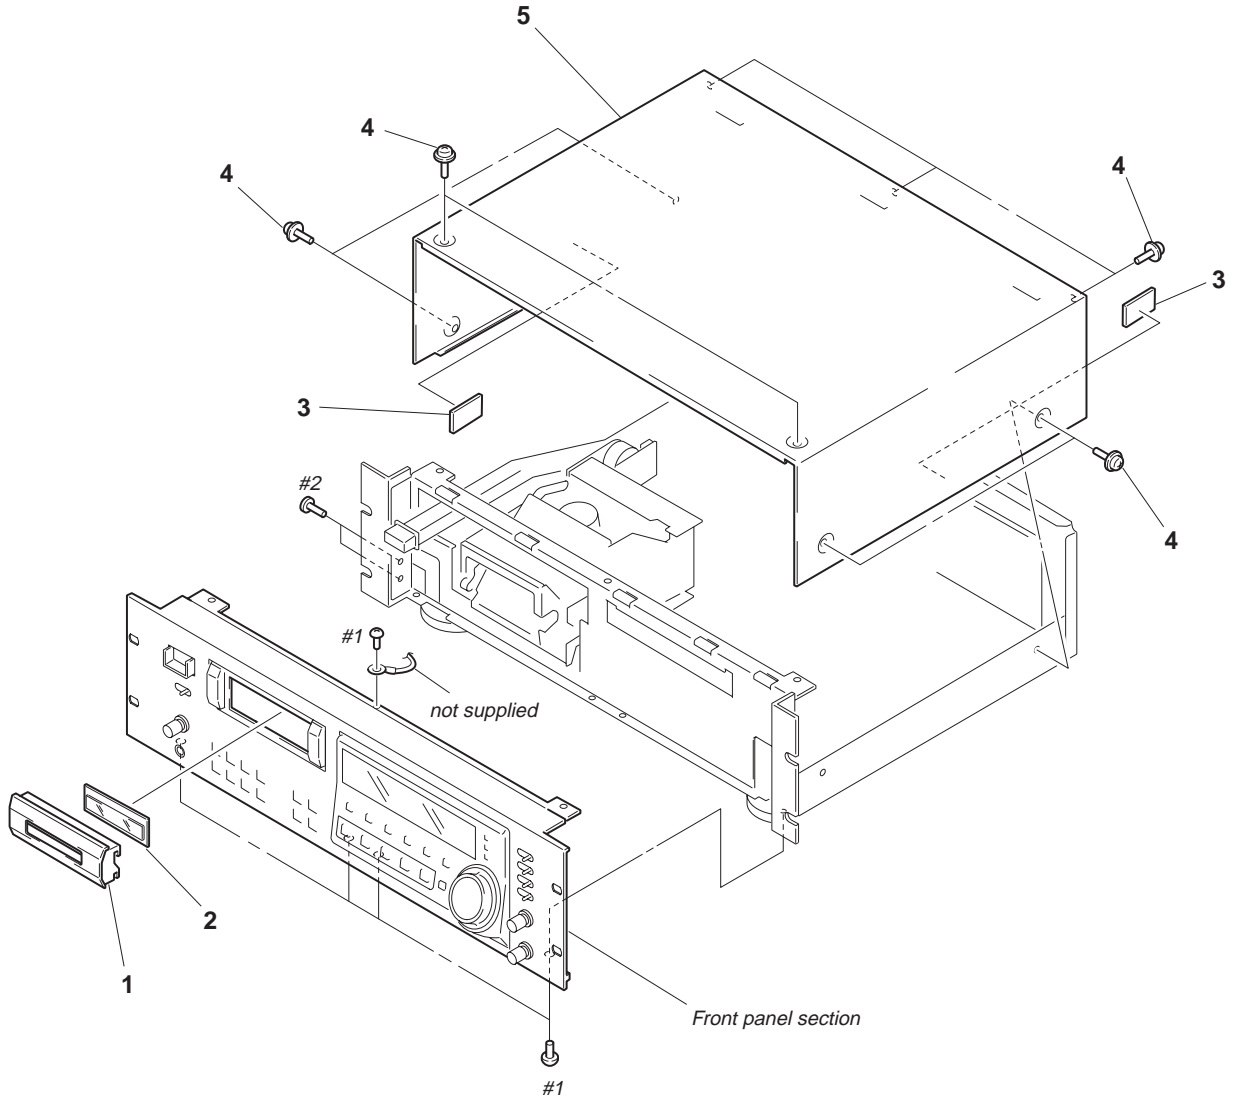

| Ref. No. | Part No.     | Description                   | Remark | Ref. No. | Part No.     | Description          | Remark |
|----------|--------------|-------------------------------|--------|----------|--------------|----------------------|--------|
| 1        | 3-007-485-01 | LID (CASSETTE COMPARTMENT)    |        | 4        | 3-704-366-21 | SCREW (CASE) (M3X10) |        |
| 2        | 3-007-486-01 | WINDOW (CASSETTE COMPARTMENT) |        | * 5      | 4-986-210-01 | CASE                 |        |
| * 3      | 4-951-532-01 | CUSHION                       |        |          |              |                      |        |


## (2) FRONT PANEL SECTION

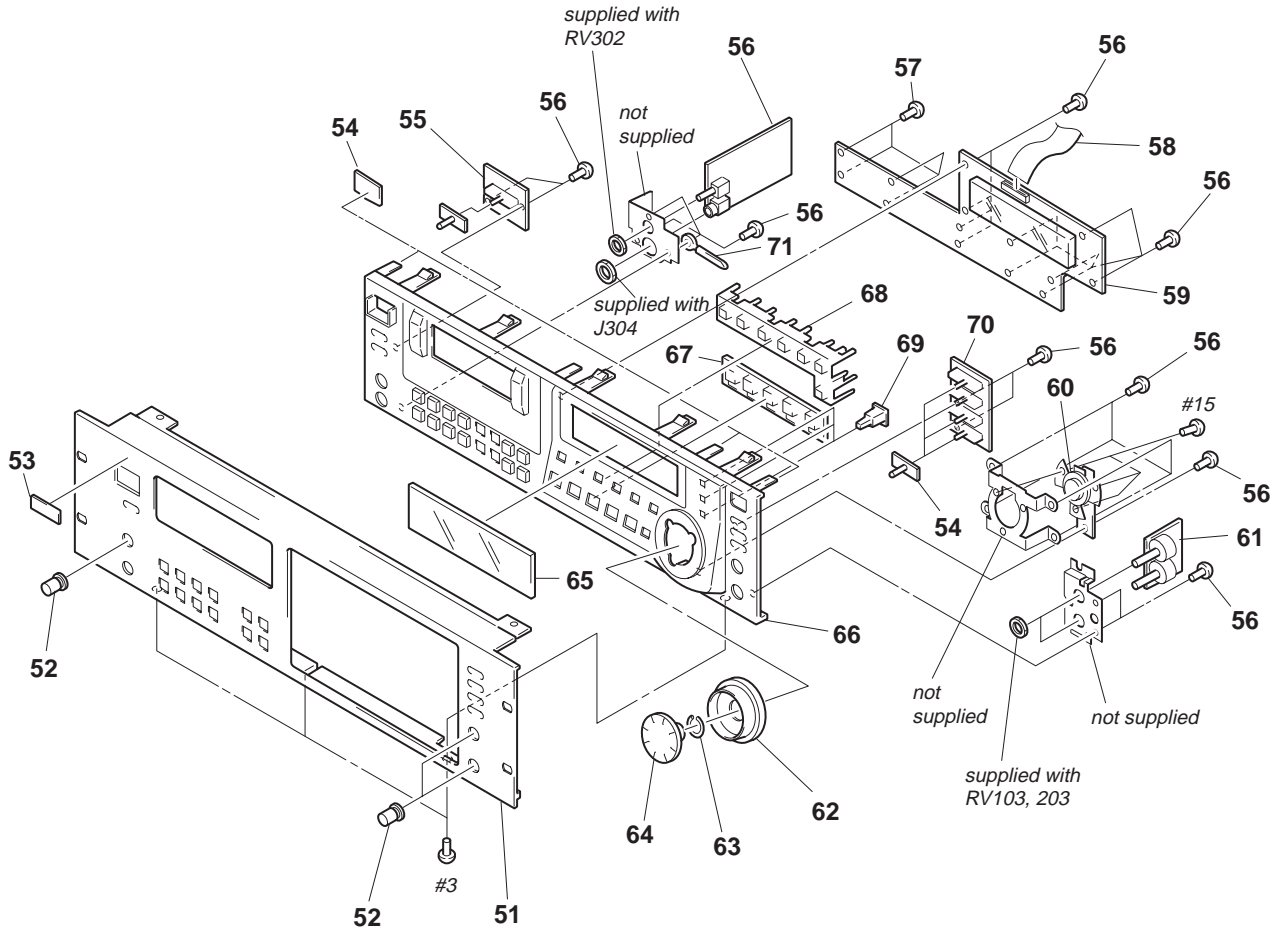

| Ref. No. | Part No.     | Description                | Remark | Ref. No. | Part No.     | Description        | Remark |
|----------|--------------|----------------------------|--------|----------|--------------|--------------------|--------|
| 51       | 3-007-731-01 | PANEL, FRONT               |        | 62       | 4-983-619-11 | RING, SHUTTLE      |        |
| 52       | X-4947-852-1 | KNOB (1) ASSY              |        | 63       | 3-354-981-01 | SPRING (SUS), RING |        |
| 53       | 4-908-848-31 | EMBLEM, SONY               |        | 64       | 4-983-620-01 | DIAL, JOG          |        |
| 54       | 3-917-216-31 | KNOB (TIMER)               |        | 65       | 4-986-398-01 | WINDOW, INDICATION |        |
| * 55     | 1-664-483-11 | REM SW BOARD               |        | 66       | X-3372-928-1 | BASE ASSY, PANEL   |        |
| 56       | 4-951-620-01 | SCREW (2.6X8), +BVTP       |        | 67       | 4-986-220-12 | BUTTON (PLAY)      |        |
| * 57     | 1-664-486-11 | HP BOARD                   |        | 68       | 4-986-217-12 | BUTTON (AMS)       |        |
| 58       | 1-769-541-11 | WIRE (FLAT TYPE) (17 CORE) |        | 69       | 4-986-218-01 | BUTTON (3 KEY)     |        |
| * 59     | A-2007-647-A | DISPLAY BOARD, COMPLETE    |        | * 70     | 1-664-484-11 | INPUT SW BOARD     |        |
| * 60     | 1-664-487-11 | SHUTTLE BOARD              |        | * 71     | 3-703-397-01 | STOPPER, WIRE      |        |
| * 61     | 1-664-485-11 | REC VOL BOARD              |        | 72       | 9-911-863-XX | SHEET              |        |

### (3) CHASSIS SECTION

- A: AUDIO board
- B: DIGITAL board

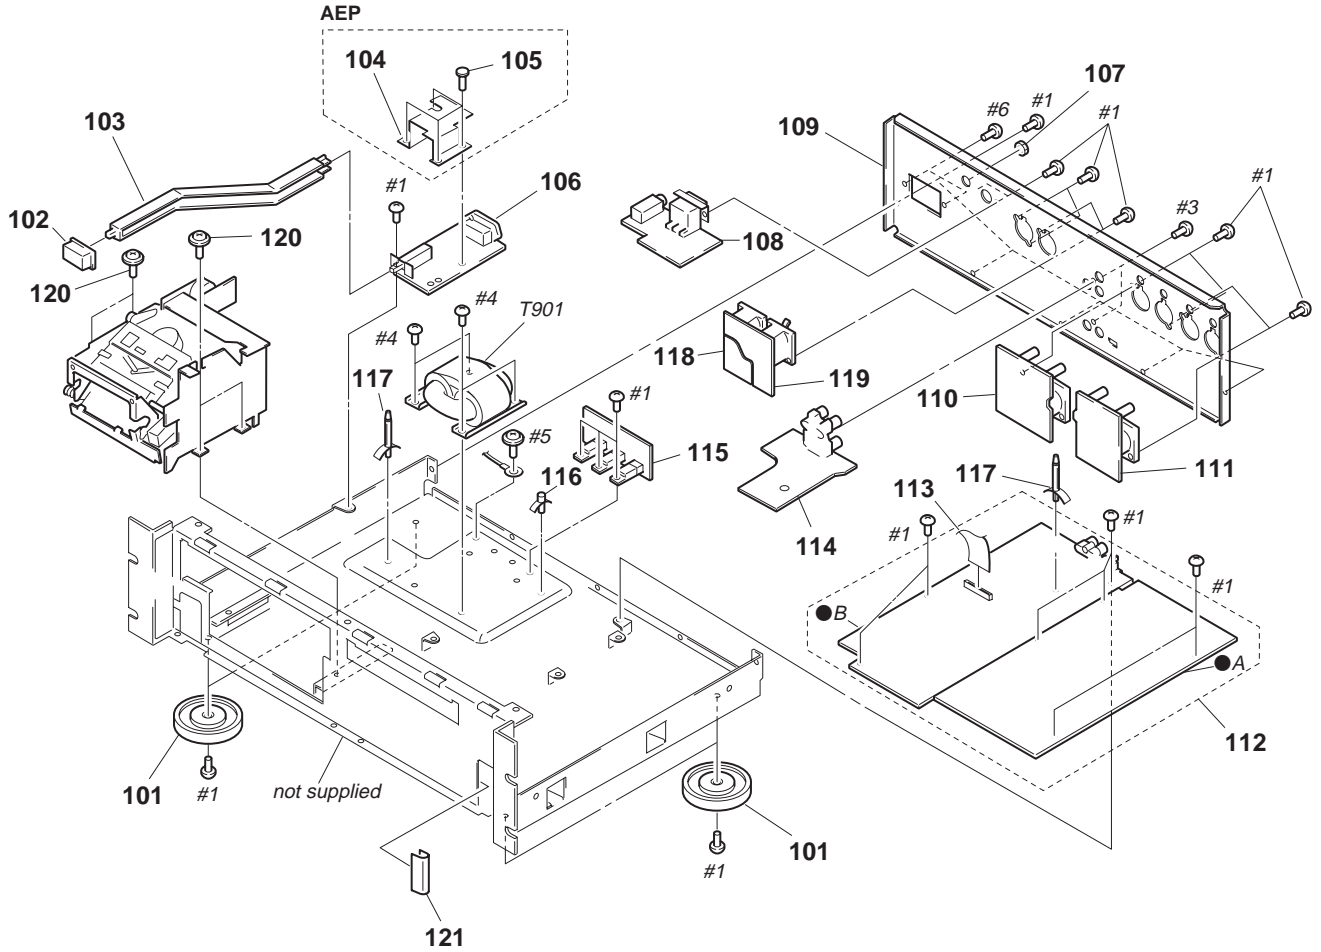


| Ref. No. | Part No.     | Description                   | Remark | Ref. No. | Part No.     | Description                      | Remark |
|----------|--------------|-------------------------------|--------|----------|--------------|----------------------------------|--------|
| 101      | 4-956-885-01 | FOOT (F58175S2W)              |        | * 112    | A-2007-648-A | MAIN BOARD, COMPLETE             |        |
| 102      | 4-923-520-71 | BUTTON,POWER                  |        | 113      | 1-769-542-11 | WIRE (FLAT TYPE) (31 CORE)       |        |
| * 103    | 4-986-225-01 | LEVER (POW)                   |        | * 114    | A-2007-646-A | UNBAL BOARD, COMPLETE            |        |
| 104      | 4-988-365-01 | COVER (D)(AEP)                |        | * 115    | 1-664-490-11 | REG BOARD                        |        |
| 105      | 4-812-134-11 | RIVET (DIA. 3.5), NYLON (AEP) |        | 116      | 3-846-068-00 | SPACER(D)                        |        |
| * 106    | 1-664-488-11 | PRIMARY BOARD                 |        | 117      | 4-924-098-81 | HOLDER, PC BOARD                 |        |
| 107      | 3-724-182-01 | NUT (SMALL JACK), M6          |        | * 118    | 1-664-494-11 | DIG OUT BOARD                    |        |
| * 108    | A-2007-645-A | REMOTE BOARD, COMPLETE        |        | * 119    | A-2007-643-A | DIG IN BOARD, COMPLETE           |        |
| * 109    | 3-007-688-11 | PANEL, BACK (US,Canadian)     |        | 120      | 4-886-821-11 | SCREW,S TIGHT,+PTTWH 3x6         |        |
| * 109    | 3-007-688-21 | PANEL, BACK (AEP)             |        | 121      | 3-831-441-11 | CUSHION (F)                      |        |
| * 110    | A-2007-642-A | ANA OUT BOARD, COMPLETE       |        | △ T901   | 1-431-064-11 | TRANSFORMER, POWER (US,Canadian) |        |
| * 111    | A-2007-651-A | ANA IN BOARD, COMPLETE        |        | △ T901   | 1-431-065-11 | TRANSFORMER, POWER (AEP)         |        |

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

#### (4) CASSETTE COMPARTMENT SECTION-1

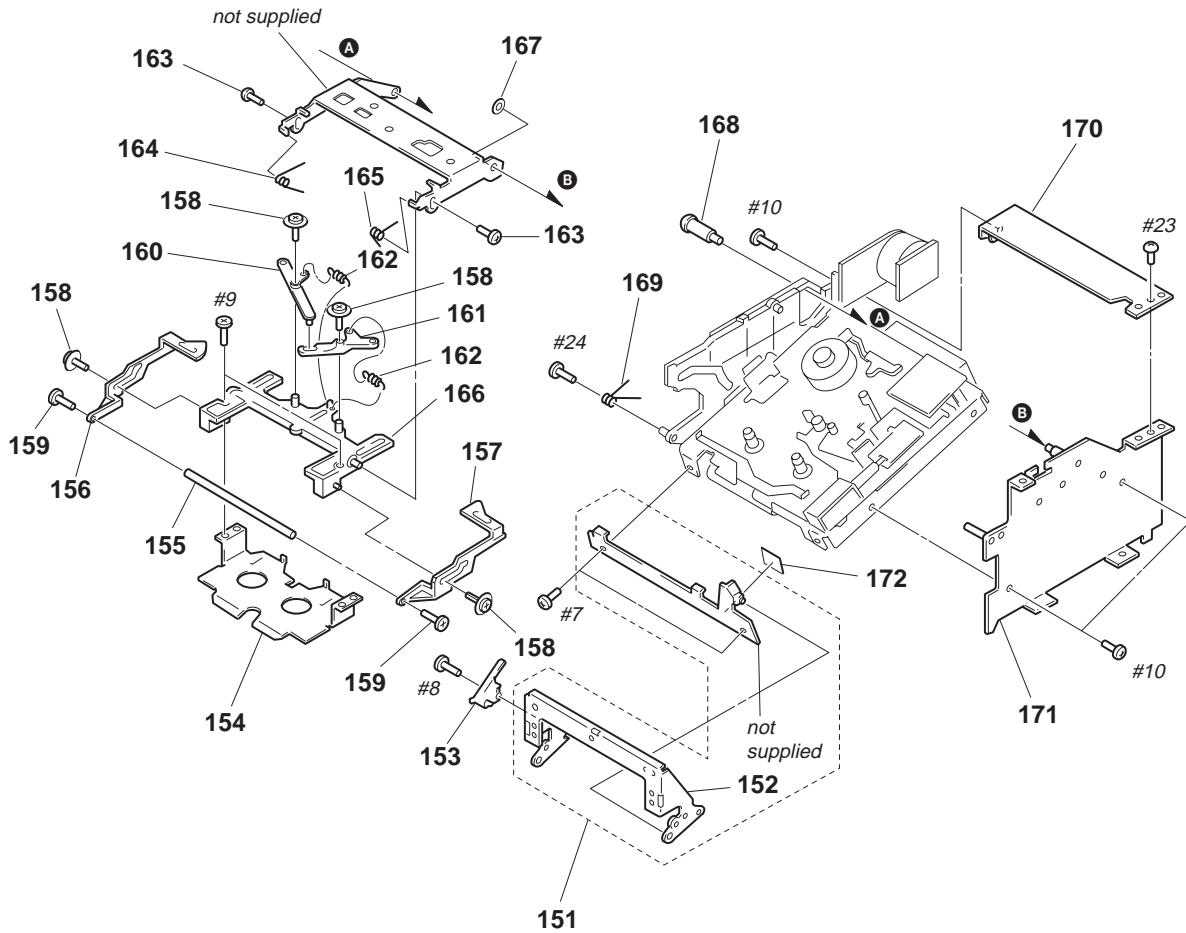


| Ref. No. | Part No.     | Description                | Remark | Ref. No. | Part No.     | Description                | Remark |
|----------|--------------|----------------------------|--------|----------|--------------|----------------------------|--------|
| * 151    | X-3371-758-1 | PLATE ASSY, FULCRUM        |        | 162      | 3-632-859-00 | SPRING, BRAKE LEVER RETURN |        |
| 152      | 3-373-225-01 | HOLDER (WINDOW)            |        | 163      | 3-318-203-61 | SCREW (B1.7X4), TAPPING    |        |
| 153      | 3-373-220-01 | ARM (JOINT)                |        | 164      | 3-373-216-01 | SPRING (L), TORSION        |        |
| 154      | 3-373-224-01 | HOLDER (LOWER)             |        | 165      | 3-373-215-01 | SPRING (R), TORSION        |        |
| * 155    | 3-373-217-01 | SHAFT (JOINT)              |        | 166      | 3-373-237-03 | HOLDER (UPPER), CASSETTE   |        |
| 156      | 3-373-223-01 | SLIDER (L)                 |        | 167      | 3-307-948-21 | WASHER, NYLON              |        |
| 157      | 3-373-222-01 | SLIDER (R)                 |        | 168      | 4-931-471-01 | SCREW (STEP)               |        |
| 158      | 3-318-201-11 | SCREW (B) (1.4X3), TAPPING |        | 169      | 3-373-212-01 | SPRING (CASSETTE)          |        |
| 159      | 3-345-648-61 | SCREW (M1.4), TOOTHED LOCK |        | * 170    | 3-909-720-11 | REINFORCEMENT              |        |
| 160      | 3-373-219-01 | LEVER (L)                  |        | * 171    | X-3371-759-1 | PLATE (R) ASSY, SIDE       |        |
| 161      | 3-373-218-01 | LEVER (R)                  |        | 172      | 3-908-780-01 | SHEET                      |        |

**(5) CASSETTE COMPARTMENT SECTION-2**

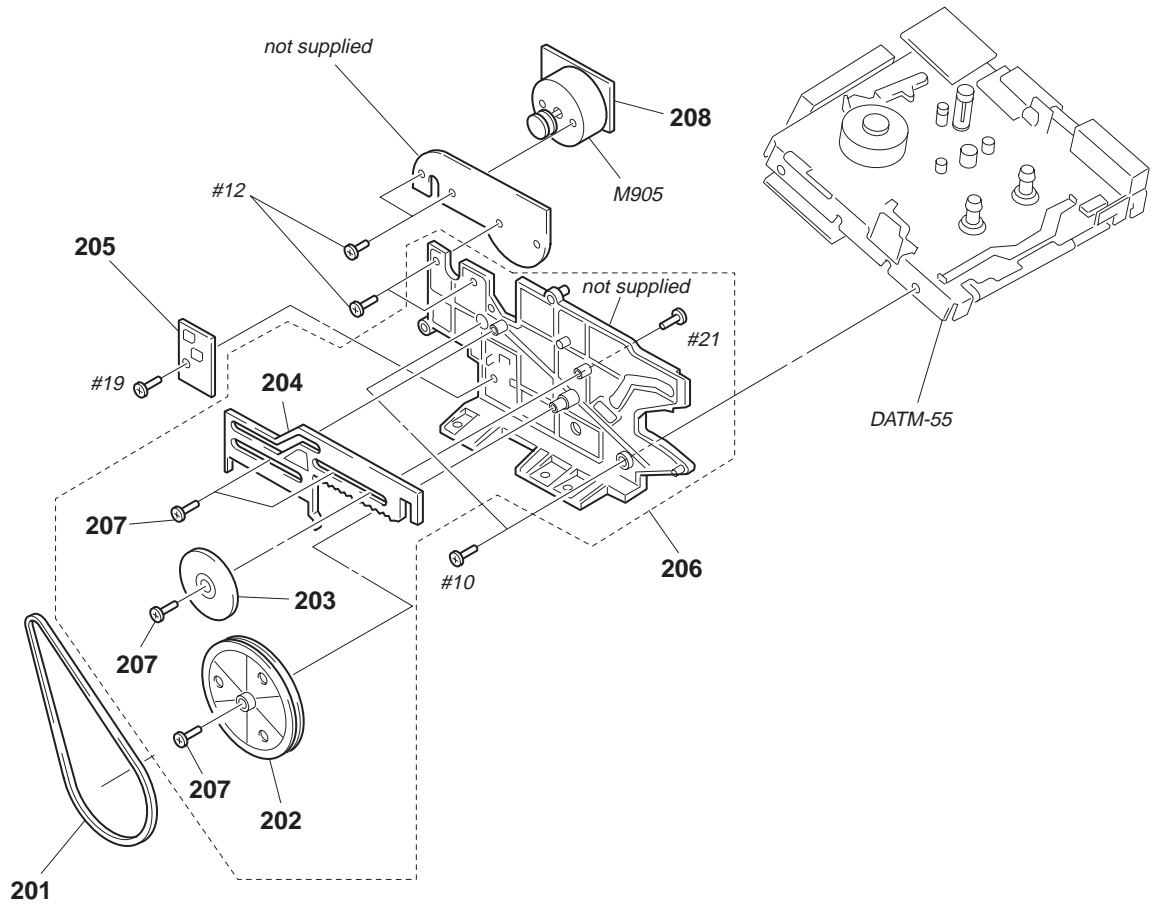

| <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u> | <u>Remark</u> | <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u>                | <u>Remark</u> |
|-----------------|-----------------|--------------------|---------------|-----------------|-----------------|-----------------------------------|---------------|
| 201             | 3-562-462-00    | BELT, CAPSTAN      |               | 206             | A-2003-907-1    | CHASSIS (L) ASSY                  |               |
| 202             | 3-373-214-01    | PULLEY             |               | 207             | 2-623-756-01    | SCREW, (B1.7X3), TAPPING          |               |
| 203             | 3-373-213-01    | GEAR, DRIVING      |               | * 208           | 1-655-913-11    | MOTOR BOARD                       |               |
| * 204           | X-3364-426-1    | SLIDER ASSY        |               | M905            | X-3370-655-1    | MOTOR ASSY (CASSETTE COMPARTMENT) |               |
| * 205           | 1-655-916-11    | SW BOARD           |               |                 |                 |                                   |               |


**(6) MECHANISM DECK SECTION-1  
(DATM-55)**

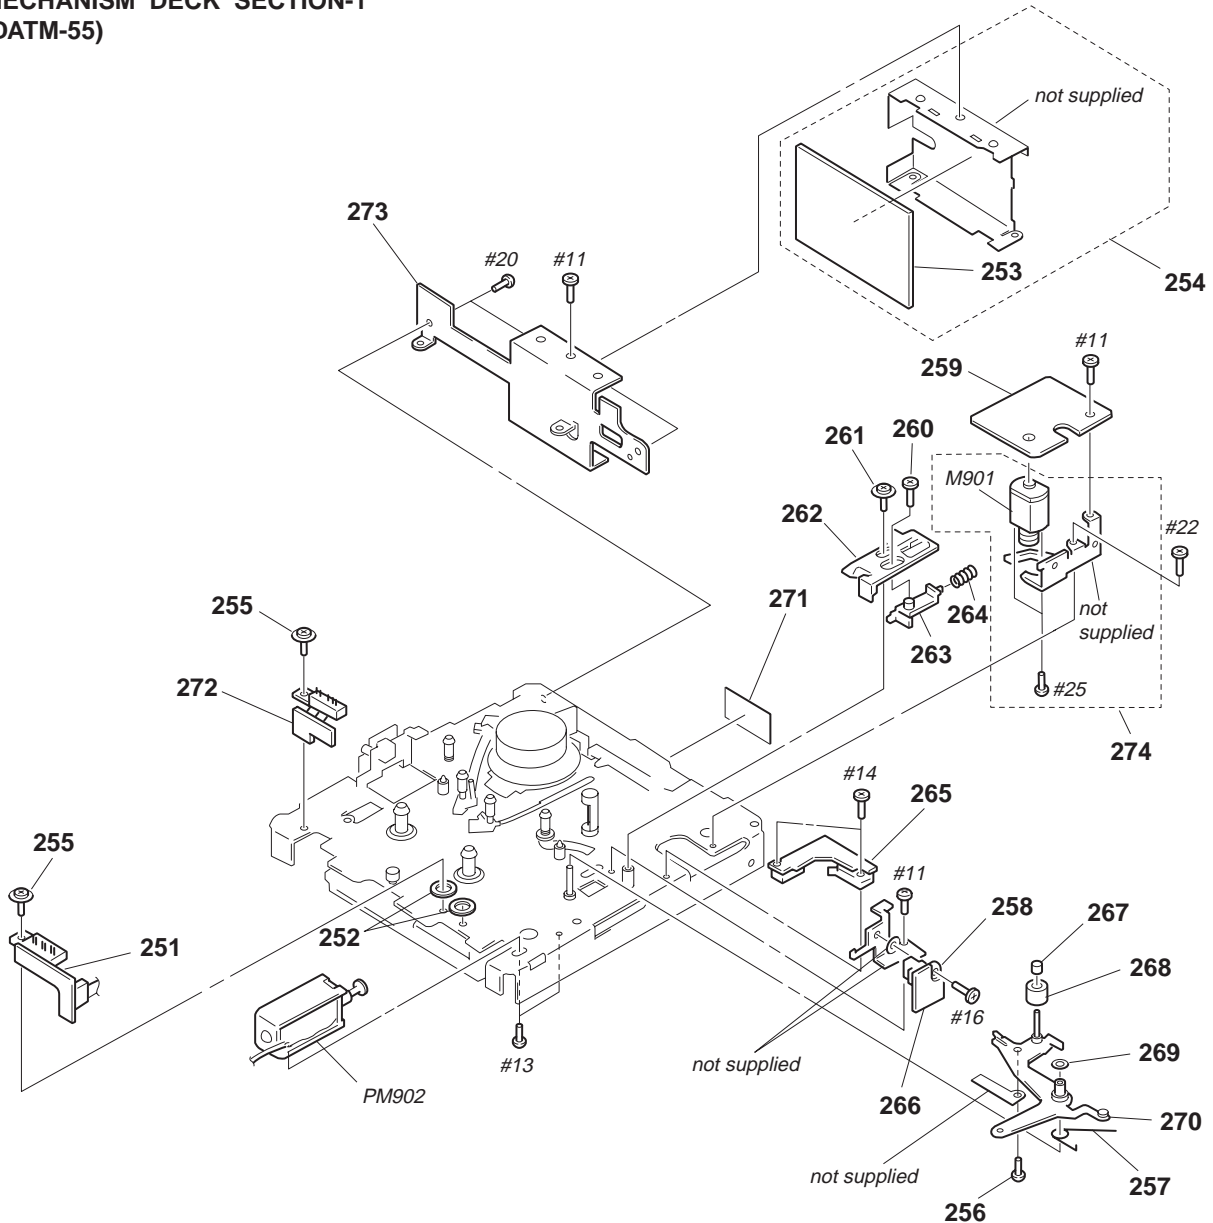

| Ref. No. | Part No.     | Description               | Remark | Ref. No. | Part No.     | Description               | Remark |
|----------|--------------|---------------------------|--------|----------|--------------|---------------------------|--------|
| * 251    | 1-654-393-11 | REC EN BOARD              |        | 264      | 3-564-035-01 | SPRING, COMPRESSION       |        |
| 252      | 3-344-781-01 | WASHER, POLYETHYLENE      |        | * 265    | 1-655-285-11 | LOAD SW BOARD             |        |
| * 253    | A-2006-455-A | RF AMP BOARD, COMPLETE    |        | * 266    | 1-654-391-11 | T END BOARD               |        |
| * 254    | A-2001-587-A | RF COMPLETE ASSY          |        | 267      | 3-337-626-01 | CAP, PINCH ROLLER         |        |
| 255      | 3-321-041-01 | SCREW (M1.7X3.5), TAPPING |        | 268      | X-3337-610-1 | PINCH ROLLER ASSY         |        |
| 256      | 3-704-244-01 | SCREW (P1.7X1.6)          |        | 269      | 3-701-436-11 | WASHER, STOPPER           |        |
| 257      | 3-931-541-01 | SPRING (PINCH)            |        | 270      | X-3362-021-1 | LEVER (PINCH ROLLER) ASSY |        |
| 258      | A-2004-299-A | DETECTION (R) ASSY, E     |        | 271      | 3-366-886-01 | SHEET (RF BRACKET)        |        |
| * 259    | 1-655-286-11 | LOADING MOTOR BOARD       |        | * 272    | 1-654-394-12 | THICK BOARD               |        |
| 260      | 2-623-756-01 | SCREW, (B1.7X3), TAPPING  |        | * 273    | 3-929-800-01 | BRACKET (RF)              |        |
| 261      | 3-703-502-11 | SCREW                     |        | 274      | A-2004-301-A | MOTOR ASSY, CONTROL       |        |
| 262      | 3-362-148-01 | SLIDER (PINCH)            |        | M901     | A-2003-660-A | MOTOR ASSY (LOADING)      |        |
| 263      | 3-362-149-01 | SLIDER (LIMITER)          |        | PM902    | 1-454-522-11 | SOLENOID, PLUNGER         |        |




**(7) MECHANISM DECK SECTION-2  
(DATM-55)**

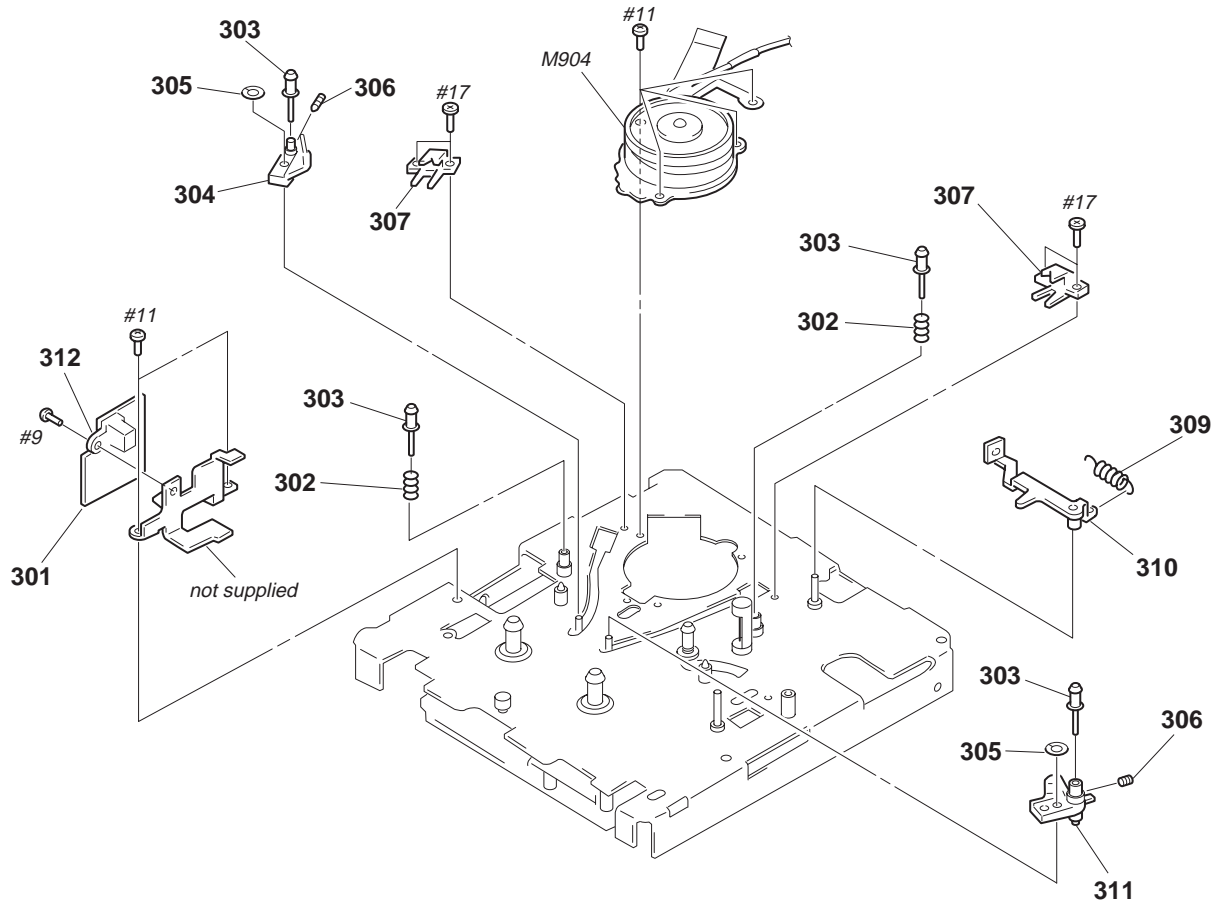

| Ref. No. | Part No.     | Description               | Remark | Ref. No. | Part No.     | Description           | Remark |
|----------|--------------|---------------------------|--------|----------|--------------|-----------------------|--------|
| * 301    | 1-654-392-11 | S END BOARD               |        | 307      | 3-912-011-01 | CATCHER               |        |
| 302      | 3-573-470-00 | SPRING, COMPRESSION       |        | 309      | 3-929-804-01 | SPRING, TENSION       |        |
| 303      | X-3371-518-1 | ROLLER GUIDE ASSY         |        | 310      | X-3371-230-1 | LEVER (CLEANER) ASSY  |        |
| 304      | X-3362-028-1 | SLANT BLOCK (L2) ASSY     |        | 311      | X-3362-029-1 | SLANT BLOCK (R2) ASSY |        |
| 305      | 3-341-752-11 | WASHER, POLYETHYLENE      |        | 312      | A-2004-550-A | DETECTION (L) ASSY, E |        |
| 306      | 3-362-152-01 | SCREW (RETURN GUIDE BOSS) |        | M904     | 8-848-626-11 | DRUM ASSY DOU-03D     |        |

**(8) MECHANISM DECK SECTION-3  
(DATM-55)**

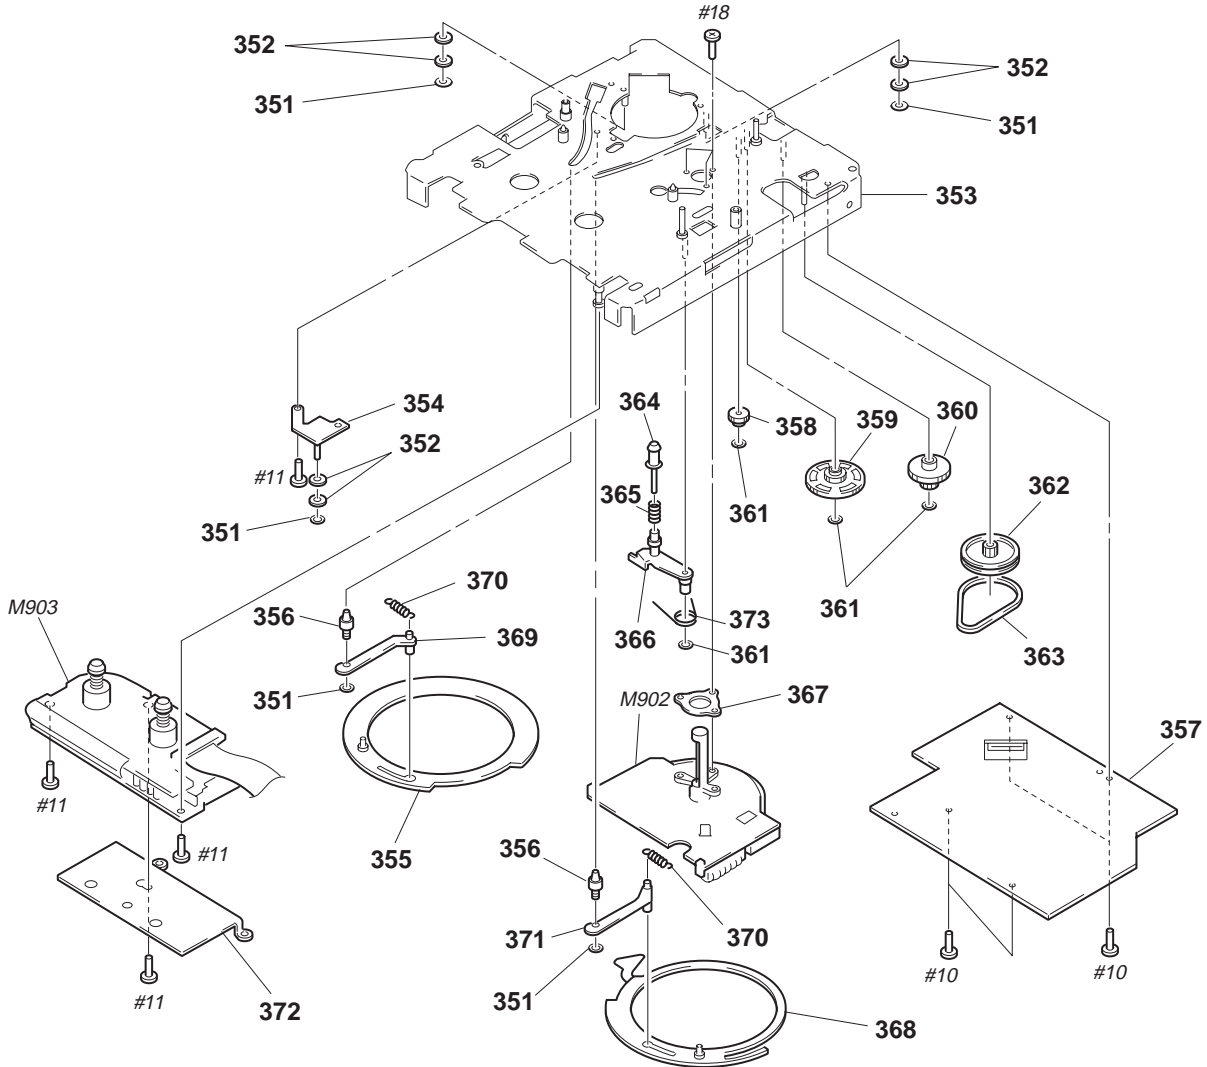

| Ref. No. | Part No.     | Description                   | Remark | Ref. No. | Part No.     | Description                             | Remark |
|----------|--------------|-------------------------------|--------|----------|--------------|---|--------|
| 351      | 3-559-408-11 | WASHER, POLYETHYLENE, DIA.1.2 |        | 364      | X-3371-518-1 | ROLLER GUIDE ASSY                       |        |
| 352      | 3-337-622-01 | ROLLER, RING                  |        | 365      | 3-573-470-00 | SPRING, COMPRESSION                     |        |
| * 353    | X-3362-030-7 | CHASSIS ASSY                  |        | * 366    | X-3362-020-1 | LEVER (F GUIDE) ASSY                    |        |
| 354      | X-3370-186-1 | ARM (RING ROLLER) ASSY        |        | * 367    | 3-362-156-01 | BRACKET (CAPSTAN)                       |        |
| 355      | X-3369-705-1 | RING (L) ASSY, LOADING        |        | 368      | X-3362-204-1 | GEAR (LOAD) ASSY                        |        |
| 356      | 3-362-151-01 | BOSS (GUIDE)                  |        | * 369    | X-3362-024-1 | LEVER (LOADING L) ASSY                  |        |
| * 357    | A-2007-321-A | DRUM DRIVE BOARD, COMPLETE    |        | 370      | 3-337-653-01 | SPRING, TENSION                         |        |
| 358      | 3-372-619-01 | GEAR                          |        | * 371    | X-3362-025-1 | LEVER (LOADING R) ASSY                  |        |
| 359      | 3-345-181-01 | GEAR (LOADING A)              |        | * 372    | 3-929-801-01 | BRACKET (MD PC BOARD)                   |        |
| 360      | 3-362-155-01 | GEAR (A)                      |        | 373      | 3-375-034-01 | SPRING (F GUIDE)                        |        |
| 361      | 3-701-436-11 | WASHER, STOPPER               |        | M902     | 8-835-306-01 | MOTOR, DC U-17A (CAPSTAN)               |        |
| 362      | 4-932-338-01 | PULLEY (A)                    |        | * M903   | 8-835-205-01 | MOTOR, DC U-2A (REEL) (including PM901) |        |
| 363      | 4-913-325-01 | BELT, TAKE-UP                 |        |          |              |   |        |

## SECTION 8 ELECTRICAL PARTS LIST

|               |                |
|---------------|----------------|
| <b>ANA IN</b> | <b>ANA OUT</b> |
|---------------|----------------|

**NOTE:**

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS  
All resistors are in ohms.  
METAL: Metal-film resistor.  
METAL OXIDE: Metal oxide-film resistor.  
F: nonflammable
- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- SEMICONDUCTORS  
In each case, u:  $\mu$ , for example:  
uA. . . :  $\mu$ A. . .    uPA. . . :  $\mu$ PA. . .  
uPB. . . :  $\mu$ PB. . .    uPC. . . :  $\mu$ PC. . .  
uPD. . . :  $\mu$ PD. . .
- CAPACITORS  
uF:  $\mu$ F
- COILS  
uH:  $\mu$ H

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board.

| Ref. No. | Part No.     | Description                                      | Remark | Ref. No. | Part No.     | Description  | Remark |
|----------|--------------|--|--------|----------|--------------|--|--------|
| *        | A-2007-651-A | ANA IN BOARD, COMPLETE<br>*****                  |        | R146     | 1-215-445-00 | METAL 10K 1%                                       | 1/4W   |
|          |              | < CAPACITOR >                                    |        | R147     | 1-215-421-00 | METAL 1K 1%  | 1/4W   |
| C131     | 1-126-051-11 | ELECT 47uF 20% 50V                               |        | R148     | 1-215-437-00 | METAL 4.7K 1%                                      | 1/4W   |
| C132     | 1-126-051-11 | ELECT 47uF 20% 50V                               |        | R149     | 1-215-397-00 | METAL 100 1%                                       | 1/4W   |
| C133     | 1-107-597-11 | CERAMIC 22PF 10% 500V                            |        | R241     | 1-215-445-00 | METAL 10K 1%                                       | 1/4W   |
| C231     | 1-126-051-11 | ELECT 47uF 20% 50V                               |        | R242     | 1-215-445-00 | METAL 10K 1%                                       | 1/4W   |
| C232     | 1-126-051-11 | ELECT 47uF 20% 50V                               |        | R243     | 1-215-453-00 | METAL 22K 1%                                       | 1/4W   |
| C233     | 1-107-597-11 | CERAMIC 22PF 10% 500V                            |        | R244     | 1-215-453-00 | METAL 22K 1%                                       | 1/4W   |
| C376     | 1-136-165-00 | FILM 0.1uF 5% 50V                                |        | R245     | 1-215-445-00 | METAL 10K 1%                                       | 1/4W   |
| C377     | 1-136-165-00 | FILM 0.1uF 5% 50V                                |        | R246     | 1-215-445-00 | METAL 10K 1%                                       | 1/4W   |
|          |              | < CONNECTOR >                                    |        | R247     | 1-215-421-00 | METAL 1K 1%  | 1/4W   |
| CN312    | 1-691-766-21 | PLUG (MICRO CONNECTOR) 4P                        |        | R248     | 1-215-437-00 | METAL 4.7K 1%                                      | 1/4W   |
|          |              | < DIODE >  |        | R249     | 1-215-397-00 | METAL 100 1%                                       | 1/4W   |
| D105     | 8-719-987-63 | DIODE 1N4148M                                    |        |          |              | < VARIABLE RESISTOR >                              |        |
| D106     | 8-719-987-63 | DIODE 1N4148M                                    |        | RV101    | 1-223-877-11 | RES, VAR, CARBON 10K<br>(ANALOG IN CH-1 (L) LEVEL) |        |
| D205     | 8-719-987-63 | DIODE 1N4148M                                    |        | RV201    | 1-223-877-11 | RES, VAR, CARBON 10K<br>(ANALOG IN CH-2 (R) LEVEL) |        |
| D206     | 8-719-987-63 | DIODE 1N4148M                                    |        |          |              | *****  |        |
|          |              | < IC >   |        | *        | A-2007-642-A | ANA OUT BOARD, COMPLETE<br>*****                   |        |
| IC323    | 8-759-981-96 | IC RC4560D                                       |        |          |              | < CAPACITOR >                                      |        |
| IC324    | 8-759-981-96 | IC RC4560D                                       |        | C134     | 1-107-597-11 | CERAMIC 22PF 10% 500V                              |        |
|          |              | < JACK >   |        | C135     | 1-126-051-11 | ELECT 47uF 20% 50V                                 |        |
| J305     | 1-750-786-11 | CONNECTOR (XLR TYPE) 3P<br>(ANALOG (BALANCE) IN) |        | C136     | 1-107-597-11 | CERAMIC 22PF 10% 500V                              |        |
|          |              | < RESISTOR >                                     |        | C137     | 1-107-597-11 | CERAMIC 22PF 10% 500V                              |        |
| R141     | 1-215-445-00 | METAL 10K 1%                                     | 1/4W   | C138     | 1-126-024-11 | ELECT 220uF 20% 25V                                |        |
| R142     | 1-215-445-00 | METAL 10K 1%                                     | 1/4W   | C139     | 1-126-024-11 | ELECT 220uF 20% 25V                                |        |
| R143     | 1-215-453-00 | METAL 22K 1%                                     | 1/4W   | C234     | 1-107-597-11 | CERAMIC 22PF 10% 500V                              |        |
| R144     | 1-215-453-00 | METAL 22K 1%                                     | 1/4W   | C235     | 1-126-051-11 | ELECT 47uF 20% 50V                                 |        |
| R145     | 1-215-445-00 | METAL 10K 1%                                     | 1/4W   | C236     | 1-107-597-11 | CERAMIC 22PF 10% 500V                              |        |
|          |              |  |        | C237     | 1-107-597-11 | CERAMIC 22PF 10% 500V                              |        |
|          |              |  |        | C238     | 1-126-024-11 | ELECT 220uF 20% 25V                                |        |
|          |              |  |        | C239     | 1-126-024-11 | ELECT 220uF 20% 25V                                |        |
|          |              |  |        | C378     | 1-136-165-00 | FILM 0.1uF 5% 50V                                  |        |

**ANA OUT****DIG IN****DIG OUT**

| Ref. No. | Part No.     | Description                                       |       |    | Remark | Ref. No. | Part No.     | Description   |              |   | Remark |    |      |
|----------|--------------|---|-------|----|--------|----------|--------------|---|--------------|---|--------|----|------|
| C379     | 1-136-165-00 | FILM  | 0.1uF | 5% | 50V    |          |              | < VARIABLE RESISTOR >                               |              |   |        |    |      |
|          |              | < CONNECTOR >                                     |       |    |        | RV102    | 1-223-877-11 | RES, VAR, CARBON 10K<br>(ANALOG OUT CH-1 (L) LEVEL) |              |   |        |    |      |
| CN311    | 1-691-766-41 | PLUG (MICRO CONNECTOR) 4P                         |       |    |        | RV202    | 1-223-877-11 | RES, VAR, CARBON 10K<br>(ANALOG OUT CH-2 (R) LEVEL) |              |   |        |    |      |
|          |              | < IC >  |       |    |        | *****    |              |   |              |   |        |    |      |
| IC103    | 8-759-981-96 | IC RC4560D  |       |    |        | *        | A-2007-643-A | DIG IN BOARD, COMPLETE                              |              |   |        |    |      |
| IC104    | 8-759-900-72 | IC NE5532P  |       |    |        |          |              | *****   |              |   |        |    |      |
| IC203    | 8-759-981-96 | IC RC4560D  |       |    |        |          |              | < CAPACITOR >                                       |              |   |        |    |      |
| IC204    | 8-759-900-72 | IC NE5532P  |       |    |        |          |              | C801  | 1-162-215-31 | CERAMIC   | 47PF   | 5% | 50V  |
|          |              | < JACK >  |       |    |        |          |              | C802  | 1-162-215-31 | CERAMIC   | 47PF   | 5% | 50V  |
| J306     | 1-750-785-11 | CONNECTOR (XLR TYPE) 3P<br>(ANALOG (BALANCE) OUT) |       |    |        |          |              | C803  | 1-136-169-00 | FILM  | 0.22uF | 5% | 50V  |
|          |              | < RESISTOR >                                      |       |    |        |          |              | C804  | 1-136-169-00 | FILM  | 0.22uF | 5% | 50V  |
| R150     | 1-215-421-00 | METAL   | 1K    | 1% | 1/4W   |          |              | C805  | 1-164-159-11 | CERAMIC   | 0.1uF  |    | 50V  |
| R151     | 1-215-429-00 | METAL   | 2.2K  | 1% | 1/4W   |          |              | C806  | 1-136-169-00 | FILM  | 0.22uF | 5% | 50V  |
| R152     | 1-215-445-00 | METAL   | 10K   | 1% | 1/4W   |          |              |   |              |   |        |    |      |
| R153     | 1-215-445-00 | METAL   | 10K   | 1% | 1/4W   |          |              | < CONNECTOR >                                       |              |   |        |    |      |
| R154     | 1-215-473-00 | METAL   | 150K  | 1% | 1/4W   |          |              | CN806   | 1-564-510-11 | PLUG (MICRO CONNECTOR) 6P                       |        |    |      |
|          |              |   |       |    |        |          |              | < IC >  |              |   |        |    |      |
| R156     | 1-215-453-00 | METAL   | 22K   | 1% | 1/4W   |          |              | IC801   | 8-759-077-32 | IC SN75ALS181N                                  |        |    |      |
| R157     | 1-215-445-00 | METAL   | 10K   | 1% | 1/4W   |          |              | < JACK >  |              |   |        |    |      |
| R158     | 1-215-446-00 | METAL   | 11K   | 1% | 1/4W   |          |              | J801  | 1-750-788-11 | CONNECTOR (XLR TYPE) 3P<br>(DIGITAL IN AES/EBU) |        |    |      |
| R160     | 1-215-457-00 | METAL   | 33K   | 1% | 1/4W   |          |              | < RESISTOR >  |              |   |        |    |      |
| R161     | 1-215-445-00 | METAL   | 10K   | 1% | 1/4W   |          |              | R801  | 1-249-409-11 | CARBON  | 220    | 5% | 1/4W |
|          |              |   |       |    |        |          |              | R802  | 1-249-409-11 | CARBON  | 220    | 5% | 1/4W |
| R162     | 1-215-389-00 | METAL   | 47    | 1% | 1/4W   |          |              | R803  | 1-247-807-31 | CARBON  | 100    | 5% | 1/4W |
| R163     | 1-215-389-00 | METAL   | 47    | 1% | 1/4W   |          |              | R804  | 1-247-807-31 | CARBON  | 100    | 5% | 1/4W |
| R164     | 1-215-445-00 | METAL   | 10K   | 1% | 1/4W   |          |              | R805  | 1-249-427-11 | CARBON  | 6.8K   | 5% | 1/4W |
| R165     | 1-215-445-00 | METAL   | 10K   | 1% | 1/4W   |          |              |   |              |   |        |    |      |
| R166     | 1-215-469-00 | METAL   | 100K  | 1% | 1/4W   |          |              | R806  | 1-249-393-11 | CARBON  | 10     | 5% | 1/4W |
|          |              |   |       |    |        |          |              | R807  | 1-249-393-11 | CARBON  | 10     | 5% | 1/4W |
| R167     | 1-215-469-00 | METAL   | 100K  | 1% | 1/4W   |          |              | < TRANSFORMER >                                     |              |   |        |    |      |
| R250     | 1-215-421-00 | METAL   | 1K    | 1% | 1/4W   |          |              | T801  | 1-437-194-21 | TRANSFORMER, PULSE                              |        |    |      |
| R251     | 1-215-429-00 | METAL   | 2.2K  | 1% | 1/4W   |          |              | T802  | 1-437-194-21 | TRANSFORMER, PULSE                              |        |    |      |
| R252     | 1-215-445-00 | METAL   | 10K   | 1% | 1/4W   |          |              | *****   |              |   |        |    |      |
| R253     | 1-215-445-00 | METAL   | 10K   | 1% | 1/4W   |          |              | *   | 1-664-494-11 | DIG OUT BOARD                                   |        |    |      |
|          |              |   |       |    |        |          |              | *****   |              |   |        |    |      |
| R254     | 1-215-473-00 | METAL   | 150K  | 1% | 1/4W   |          |              | < CAPACITOR >                                       |              |   |        |    |      |
| R256     | 1-215-453-00 | METAL   | 22K   | 1% | 1/4W   |          |              | C807  | 1-136-169-00 | FILM  | 0.22uF | 5% | 50V  |
| R257     | 1-215-445-00 | METAL   | 10K   | 1% | 1/4W   |          |              | C808  | 1-162-215-31 | CERAMIC   | 47PF   | 5% | 50V  |
| R258     | 1-215-446-00 | METAL   | 11K   | 1% | 1/4W   |          |              | C809  | 1-162-215-31 | CERAMIC   | 47PF   | 5% | 50V  |
| R260     | 1-215-457-00 | METAL   | 33K   | 1% | 1/4W   |          |              | C810  | 1-162-215-31 | CERAMIC   | 47PF   | 5% | 50V  |
|          |              |   |       |    |        |          |              |   |              |   |        |    |      |
| R261     | 1-215-445-00 | METAL   | 10K   | 1% | 1/4W   |          |              |   |              |   |        |    |      |
| R262     | 1-215-389-00 | METAL   | 47    | 1% | 1/4W   |          |              |   |              |   |        |    |      |
| R263     | 1-215-389-00 | METAL   | 47    | 1% | 1/4W   |          |              |   |              |   |        |    |      |
| R264     | 1-215-445-00 | METAL   | 10K   | 1% | 1/4W   |          |              |   |              |   |        |    |      |
| R265     | 1-215-445-00 | METAL   | 10K   | 1% | 1/4W   |          |              |   |              |   |        |    |      |
|          |              |   |       |    |        |          |              |   |              |   |        |    |      |
| R266     | 1-215-469-00 | METAL   | 100K  | 1% | 1/4W   |          |              |   |              |   |        |    |      |
| R267     | 1-215-469-00 | METAL   | 100K  | 1% | 1/4W   |          |              |   |              |   |        |    |      |

DIG OUT

DISPLAY

| Ref. No. | Part No.     | Description                                      | Remark          |
|----------|--------------|--|-----------------|
|          |              | < JACK >   |                 |
| J802     | 1-750-787-11 | CONNECTOR (XLR TYPE) 3P<br>(DIGITAL OUT AES/EBU) |                 |
| *****    |              |  |                 |
| *        | A-2007-647-A | DISPLAY BOARD, COMPLETE                          | *****           |
| *        | 3-362-478-01 | HOLDER (T), LED                                  |                 |
| *        | 4-932-810-11 | CUSHION (FL)                                     |                 |
| *        | 4-947-170-01 | HOLDER   |                 |
|          |              | < CAPACITOR >                                    |                 |
| C701     | 1-126-177-11 | ELECT  | 100uF 20% 10V   |
| C702     | 1-162-294-31 | CERAMIC  | 0.001uF 10% 50V |
| C703     | 1-164-159-11 | CERAMIC  | 0.1uF 50V       |
| C704     | 1-164-159-11 | CERAMIC  | 0.1uF 50V       |
| C705     | 1-164-159-11 | CERAMIC  | 0.1uF 50V       |
| C706     | 1-164-159-11 | CERAMIC  | 0.1uF 50V       |
| C707     | 1-164-159-11 | CERAMIC  | 0.1uF 50V       |
| C708     | 1-164-159-11 | CERAMIC  | 0.1uF 50V       |
| C709     | 1-164-159-11 | CERAMIC  | 0.1uF 50V       |
| C710     | 1-164-159-11 | CERAMIC  | 0.1uF 50V       |
| C711     | 1-164-159-11 | CERAMIC  | 0.1uF 50V       |
| C712     | 1-164-159-11 | CERAMIC  | 0.1uF 50V       |
| C713     | 1-164-159-11 | CERAMIC  | 0.1uF 50V       |
| C714     | 1-164-159-11 | CERAMIC  | 0.1uF 50V       |
| C715     | 1-164-159-11 | CERAMIC  | 0.1uF 50V       |
| C716     | 1-164-159-11 | CERAMIC  | 0.1uF 50V       |
|          |              | < CONNECTOR >                                    |                 |
| CN701    | 1-568-860-11 | SOCKET, CONNECTOR 17P                            |                 |
| * CN702  | 1-564-500-11 | PIN, CONNECTOR 7P                                |                 |
|          |              | < DIODE >  |                 |
| D701     | 8-719-303-02 | LED SEL2510C-D (PLAY)                            |                 |
| D702     | 8-719-301-52 | LED SEL2810A-C (PAUSE)                           |                 |
| D703     | 8-719-301-39 | LED SEL2210S (REC)                               |                 |
| D704     | 8-719-301-52 | LED SEL2810A-C (MENU)                            |                 |
|          |              | < FILTER >                                       |                 |
| FL701    | 1-517-382-11 | INDICATOR TUBE, FLUORESCENT                      |                 |
|          |              | < IC >   |                 |
| IC701    | 8-752-882-29 | IC CXP82320-077Q                                 |                 |
| IC702    | 8-759-995-09 | IC MSM6338RS                                     |                 |
| IC703    | 8-759-916-54 | IC SN74HC174AN                                   |                 |
| IC704    | 8-759-916-12 | IC SN74HC00AN                                    |                 |
| IC705    | 8-759-373-49 | IC NJL54H400                                     |                 |

| Ref. No. | Part No.     | Description           | Remark       |
|----------|--------------|-----------------------|--------------|
|          |              | < TRANSISTOR >        |              |
| Q701     | 8-729-620-05 | TRANSISTOR 2SC2603-EF |              |
| Q702     | 8-729-620-05 | TRANSISTOR 2SC2603-EF |              |
| Q703     | 8-729-620-05 | TRANSISTOR 2SC2603-EF |              |
| Q704     | 8-729-900-80 | TRANSISTOR DTC114ES   |              |
| Q705     | 8-729-900-80 | TRANSISTOR DTC114ES   |              |
| Q706     | 8-729-900-80 | TRANSISTOR DTC114ES   |              |
| Q707     | 8-729-900-80 | TRANSISTOR DTC114ES   |              |
|          |              | < RESISTOR >          |              |
| R701     | 1-249-427-11 | CARBON                | 6.8K 5% 1/4W |
| R702     | 1-249-427-11 | CARBON                | 6.8K 5% 1/4W |
| R703     | 1-249-427-11 | CARBON                | 6.8K 5% 1/4W |
| R704     | 1-249-427-11 | CARBON                | 6.8K 5% 1/4W |
| R705     | 1-249-427-11 | CARBON                | 6.8K 5% 1/4W |
| R706     | 1-249-427-11 | CARBON                | 6.8K 5% 1/4W |
| R707     | 1-249-427-11 | CARBON                | 6.8K 5% 1/4W |
| R708     | 1-249-427-11 | CARBON                | 6.8K 5% 1/4W |
| R709     | 1-249-415-11 | CARBON                | 680 5% 1/4W  |
| R710     | 1-249-417-11 | CARBON                | 1K 5% 1/4W   |
| R711     | 1-249-419-11 | CARBON                | 1.5K 5% 1/4W |
| R712     | 1-247-843-11 | CARBON                | 3.3K 5% 1/4W |
| R713     | 1-249-425-11 | CARBON                | 4.7K 5% 1/4W |
| R714     | 1-249-429-11 | CARBON                | 10K 5% 1/4W  |
| R715     | 1-249-435-11 | CARBON                | 33K 5% 1/4W  |
| R716     | 1-249-415-11 | CARBON                | 680 5% 1/4W  |
| R717     | 1-249-417-11 | CARBON                | 1K 5% 1/4W   |
| R718     | 1-249-419-11 | CARBON                | 1.5K 5% 1/4W |
| R719     | 1-247-843-11 | CARBON                | 3.3K 5% 1/4W |
| R720     | 1-249-425-11 | CARBON                | 4.7K 5% 1/4W |
| R721     | 1-249-429-11 | CARBON                | 10K 5% 1/4W  |
| R722     | 1-249-435-11 | CARBON                | 33K 5% 1/4W  |
| R723     | 1-249-415-11 | CARBON                | 680 5% 1/4W  |
| R724     | 1-249-417-11 | CARBON                | 1K 5% 1/4W   |
| R725     | 1-249-419-11 | CARBON                | 1.5K 5% 1/4W |
| R726     | 1-247-843-11 | CARBON                | 3.3K 5% 1/4W |
| R727     | 1-249-425-11 | CARBON                | 4.7K 5% 1/4W |
| R730     | 1-249-415-11 | CARBON                | 680 5% 1/4W  |
| R731     | 1-249-417-11 | CARBON                | 1K 5% 1/4W   |
| R732     | 1-249-419-11 | CARBON                | 1.5K 5% 1/4W |
| R733     | 1-247-843-11 | CARBON                | 3.3K 5% 1/4W |
| R734     | 1-249-425-11 | CARBON                | 4.7K 5% 1/4W |
| R737     | 1-249-427-11 | CARBON                | 6.8K 5% 1/4W |
| R740     | 1-249-427-11 | CARBON                | 6.8K 5% 1/4W |
| R743     | 1-249-427-11 | CARBON                | 6.8K 5% 1/4W |
| R746     | 1-249-415-11 | CARBON                | 680 5% 1/4W  |
| R747     | 1-249-417-11 | CARBON                | 1K 5% 1/4W   |

# DISPLAY

| Ref. No. | Part No.     | Description | Remark |    |      | Ref. No. | Part No.     | Description                            | Remark |    |      |
|----------|--------------|-------------|--------|----|------|----------|--------------|--|--------|----|------|
| R748     | 1-249-425-11 | CARBON      | 4.7K   | 5% | 1/4W | R799     | 1-249-441-11 | CARBON                                 | 100K   | 5% | 1/4W |
| R751     | 1-249-421-11 | CARBON      | 2.2K   | 5% | 1/4W | R980     | 1-249-441-11 | CARBON                                 | 100K   | 5% | 1/4W |
| R752     | 1-249-421-11 | CARBON      | 2.2K   | 5% | 1/4W | R981     | 1-249-441-11 | CARBON                                 | 100K   | 5% | 1/4W |
| R753     | 1-249-421-11 | CARBON      | 2.2K   | 5% | 1/4W | R982     | 1-249-441-11 | CARBON                                 | 100K   | 5% | 1/4W |
| R754     | 1-249-421-11 | CARBON      | 2.2K   | 5% | 1/4W | R983     | 1-249-441-11 | CARBON                                 | 100K   | 5% | 1/4W |
| R755     | 1-249-421-11 | CARBON      | 2.2K   | 5% | 1/4W | R984     | 1-249-441-11 | CARBON                                 | 100K   | 5% | 1/4W |
| R756     | 1-249-421-11 | CARBON      | 2.2K   | 5% | 1/4W | R985     | 1-249-441-11 | CARBON                                 | 100K   | 5% | 1/4W |
| R763     | 1-249-407-11 | CARBON      | 150    | 5% | 1/4W | R986     | 1-249-441-11 | CARBON                                 | 100K   | 5% | 1/4W |
| R764     | 1-249-407-11 | CARBON      | 150    | 5% | 1/4W | R987     | 1-249-441-11 | CARBON                                 | 100K   | 5% | 1/4W |
| R765     | 1-249-407-11 | CARBON      | 150    | 5% | 1/4W | R988     | 1-249-441-11 | CARBON                                 | 100K   | 5% | 1/4W |
| R766     | 1-249-407-11 | CARBON      | 150    | 5% | 1/4W | R989     | 1-249-441-11 | CARBON                                 | 100K   | 5% | 1/4W |
| R769     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W | R990     | 1-249-441-11 | CARBON                                 | 100K   | 5% | 1/4W |
| R770     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W |          |              |  |        |    |      |
| R771     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W |          |              | < SWITCH >                             |        |    |      |
| R772     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W | S701     | 1-554-937-11 | SWITCH, KEY BOARD (REW)                |        |    |      |
| R773     | 1-249-417-11 | CARBON      | 1K     | 5% | 1/4W | S702     | 1-554-937-11 | SWITCH, KEY BOARD (FF)                 |        |    |      |
| R774     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W | S703     | 1-554-937-11 | SWITCH, KEY BOARD (REC)                |        |    |      |
| R775     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W | S704     | 1-554-937-11 | SWITCH, KEY BOARD (PAUSE)              |        |    |      |
| R776     | 1-249-435-11 | CARBON      | 33K    | 5% | 1/4W | S705     | 1-554-937-11 | SWITCH, KEY BOARD (REC MUTE)           |        |    |      |
| R777     | 1-249-417-11 | CARBON      | 1K     | 5% | 1/4W | S706     | 1-554-937-11 | SWITCH, KEY BOARD (MENU)               |        |    |      |
| R778     | 1-249-435-11 | CARBON      | 33K    | 5% | 1/4W | S707     | 1-554-937-11 | SWITCH, KEY BOARD (SET)                |        |    |      |
| R951     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | S708     | 1-554-937-11 | SWITCH, KEY BOARD (OPEN/CLOSE)         |        |    |      |
| R952     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | S709     | 1-554-937-11 | SWITCH, KEY BOARD (STOP)               |        |    |      |
| R953     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | S710     | 1-554-937-11 | SWITCH, KEY BOARD (PLAY)               |        |    |      |
| R954     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | S711     | 1-554-937-11 | SWITCH, KEY BOARD (PREVIOUS)           |        |    |      |
| R955     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | S712     | 1-554-937-11 | SWITCH, KEY BOARD (NEXT)               |        |    |      |
| R956     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | S713     | 1-554-937-11 | SWITCH, KEY BOARD (MARK)               |        |    |      |
| R957     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | S714     | 1-554-937-11 | SWITCH, KEY BOARD (SKIP PLAY)          |        |    |      |
| R958     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | S715     | 1-554-937-11 | SWITCH, KEY BOARD (LOCATE)             |        |    |      |
| R959     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | S716     | 1-554-937-11 | SWITCH, KEY BOARD (REPEAT)             |        |    |      |
| R960     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | S717     | 1-554-937-11 | SWITCH, KEY BOARD (ERASE-START ID)     |        |    |      |
| R961     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | S718     | 1-554-937-11 | SWITCH, KEY BOARD (WRITE-START ID)     |        |    |      |
| R962     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | S719     | 1-554-937-11 | SWITCH, KEY BOARD (REHEARSAL-START ID) |        |    |      |
| R963     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | S720     | 1-554-937-11 | SWITCH, KEY BOARD (AUTO-START ID)      |        |    |      |
| R964     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | S723     | 1-554-937-11 | SWITCH, KEY BOARD (ERASE-SKIP ID)      |        |    |      |
| R965     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | S724     | 1-554-937-11 | SWITCH, KEY BOARD (WRITE-SKIP ID)      |        |    |      |
| R966     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | S725     | 1-554-937-11 | SWITCH, KEY BOARD (REHEARSAL-SKIP ID)  |        |    |      |
| R967     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | S726     | 1-554-937-11 | SWITCH, KEY BOARD (RENUMBER)           |        |    |      |
| R968     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | S727     | 1-554-937-11 | SWITCH, KEY BOARD (MODE)               |        |    |      |
| R969     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | S728     | 1-554-937-11 | SWITCH, KEY BOARD (COUNTER RESET)      |        |    |      |
| R970     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | S729     | 1-554-937-11 | SWITCH, KEY BOARD (MARGIN RESET)       |        |    |      |
| R971     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |          |              | < VIBRATOR >                           |        |    |      |
| R972     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | X701     | 1-577-359-21 | VIBRATOR, CERAMIC (4.19MHz)            |        |    |      |
| R973     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | *****    |              |  |        |    |      |
| R974     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |          |              |  |        |    |      |
| R975     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |          |              |  |        |    |      |
| R976     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |          |              |  |        |    |      |
| R977     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |          |              |  |        |    |      |
| R978     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |          |              |  |        |    |      |

| Ref. No. | Part No.     | Description                         | Remark           | Ref. No.       | Part No.     | Description               | Remark |
|----------|--------------|-------------------------------------|------------------|----------------|--------------|---------------------------|--------|
| *        | A-2007-321-A | DRUM DRIVE BOARD, COMPLETE<br>***** |                  |                |              | < RESISTOR >              |        |
|          | 1-537-770-21 | TERMINAL BOARD, GROUND              |                  |                |              |                           |        |
|          |              | < CAPACITOR >                       |                  |                |              |                           |        |
| C1       | 1-124-257-00 | ELECT                               | 2.2uF 20% 50V    | R1             | 1-247-843-11 | CARBON 3.3K 5% 1/4W       |        |
| C3       | 1-162-306-11 | CERAMIC                             | 0.01uF 20% 16V   | R2             | 1-249-429-11 | CARBON 10K 5% 1/4W        |        |
| C5       | 1-126-923-11 | ELECT                               | 220uF 20% 10V    | R3             | 1-249-407-11 | CARBON 150 5% 1/4W        |        |
| C6       | 1-126-923-11 | ELECT                               | 220uF 20% 10V    | R4             | 1-247-843-11 | CARBON 3.3K 5% 1/4W       |        |
| C7       | 1-126-923-11 | ELECT                               | 220uF 20% 10V    | R5             | 1-249-421-11 | CARBON 2.2K 5% 1/4W       |        |
| C8       | 1-162-302-11 | CERAMIC                             | 0.0022uF 30% 16V | R6             | 1-249-435-11 | CARBON 33K 5% 1/4W        |        |
| C9       | 1-162-302-11 | CERAMIC                             | 0.0022uF 30% 16V | R7             | 1-247-807-31 | CARBON 100 5% 1/4W        |        |
| C10      | 1-162-286-31 | CERAMIC                             | 220PF 10% 50V    | R8             | 1-249-417-11 | CARBON 1K 5% 1/4W         |        |
| C11      | 1-162-302-11 | CERAMIC                             | 0.0022uF 30% 16V | R9             | 1-249-429-11 | CARBON 10K 5% 1/4W        |        |
| C12      | 1-162-302-11 | CERAMIC                             | 0.0022uF 30% 16V | R11            | 1-249-429-11 | CARBON 10K 5% 1/4W        |        |
| C13      | 1-126-096-11 | ELECT                               | 10uF 20% 35V     | R12            | 1-249-417-11 | CARBON 1K 5% 1/4W         |        |
| C14      | 1-126-923-11 | ELECT                               | 220uF 20% 10V    | R14            | 1-249-441-11 | CARBON 100K 5% 1/4W       |        |
| C15      | 1-162-306-11 | CERAMIC                             | 0.01uF 20% 16V   | R15            | 1-249-441-11 | CARBON 100K 5% 1/4W       |        |
|          |              | < CONNECTOR >                       |                  | R16            | 1-249-441-11 | CARBON 100K 5% 1/4W       |        |
| * CN1    | 1-568-845-11 | SOCKET, CONNECTOR 31P               |                  | R17            | 1-249-441-11 | CARBON 100K 5% 1/4W       |        |
| CN2      | 1-691-461-11 | PIN, CONNECTOR (PC BOARD) 5P        |                  | R18            | 1-249-409-11 | CARBON 220 5% 1/4W        |        |
| CN3      | 1-564-505-11 | PLUG, CONNECTOR 2P                  |                  | R19            | 1-249-409-11 | CARBON 220 5% 1/4W        |        |
| * CN4    | 1-564-704-11 | PIN, CONNECTOR (SMALL TYPE) 2P      |                  | R20            | 1-249-401-11 | CARBON 47 5% 1/4W         |        |
| * CN5    | 1-564-515-11 | PLUG, CONNECTOR 12P                 |                  | R21            | 1-249-429-11 | CARBON 10K 5% 1/4W        |        |
| * CN6    | 1-691-465-11 | PIN, CONNECTOR (PC BOARD) 9P        |                  | R22            | 1-249-433-11 | CARBON 22K 5% 1/4W        |        |
| * CN7    | 1-568-369-11 | HOUSING, CONNECTOR (PC BOARD) 8P    |                  | R23            | 1-249-403-11 | CARBON 68 5% 1/4W         |        |
| * CN8    | 1-506-503-11 | PIN, CONNECTOR 9P                   |                  | R24            | 1-249-403-11 | CARBON 68 5% 1/4W         |        |
| * CN9    | 1-564-337-00 | PIN, CONNECTOR 3P                   |                  | R25            | 1-247-843-11 | CARBON 3.3K 5% 1/4W       |        |
| * CN11   | 1-564-337-61 | PIN, CONNECTOR 3P                   |                  | R26            | 1-247-843-11 | CARBON 3.3K 5% 1/4W       |        |
| * CN12   | 1-564-336-00 | PIN, CONNECTOR 2P                   |                  | R27            | 1-249-419-11 | CARBON 1.5K 5% 1/4W       |        |
|          |              | < DIODE >                           |                  |                |              | *****                     |        |
| D2       | 8-719-200-82 | DIODE 11ES2                         |                  | * 1-664-486-11 | HP BOARD     | *****                     |        |
| D3       | 8-719-200-82 | DIODE 11ES2                         |                  |                |              | < CAPACITOR >             |        |
|          |              | < IC >                              |                  |                |              |                           |        |
| IC1      | 8-759-135-80 | IC uPC358C                          |                  | C122           | 1-102-114-00 | CERAMIC 470PF 10% 50V     |        |
| IC2      | 8-759-633-65 | IC M54641L                          |                  | C222           | 1-102-114-00 | CERAMIC 470PF 10% 50V     |        |
| IC3      | 8-752-060-73 | IC CX20115A-T4                      |                  | C374           | 1-126-024-11 | ELECT 220uF 20% 25V       |        |
|          |              | < TRANSISTOR >                      |                  | C375           | 1-126-024-11 | ELECT 220uF 20% 25V       |        |
| Q1       | 8-729-620-05 | TRANSISTOR 2SC2603-EF               |                  |                |              | < CONNECTOR >             |        |
| Q2       | 8-729-801-84 | TRANSISTOR 2SB1013-4                |                  | CN320          | 1-691-768-11 | PLUG (MICRO CONNECTOR) 6P |        |
| Q3       | 8-729-801-93 | TRANSISTOR 2SD1387                  |                  |                |              | < FUSIBLE >               |        |
|          |              |                                     |                  | △FR301         | 1-212-857-00 | FUSIBLE 10 5% 1/4W F      |        |
|          |              |                                     |                  | △FR302         | 1-212-857-00 | FUSIBLE 10 5% 1/4W F      |        |
|          |              |                                     |                  |                |              | < IC >                    |        |
|          |              |                                     |                  | IC321          | 8-759-981-96 | IC RC4560D                |        |

|  |  |
|--|--|
| The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified. | Les composants identifiés par une marque $\triangle$ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié. |
|--|--|

|           |                 |                |                      |                              |
|-----------|-----------------|----------------|----------------------|------------------------------|
| <b>HP</b> | <b>INPUT SW</b> | <b>LOAD SW</b> | <b>LOADING MOTOR</b> | <b>MAIN (AUDIO, DIGITAL)</b> |
|-----------|-----------------|----------------|----------------------|------------------------------|

| Ref. No. | Part No.     | Description                            | Remark       | Ref. No. | Part No.     | Description                            | Remark          |
|----------|--------------|--|--------------|----------|--------------|--|-----------------|
|          |              | < JACK >                               |              |          |              |  |                 |
| J304     | 1-565-327-11 | JACK, LARGE TYPE 1P (PHONES)           |              | *        | 1-655-286-11 | LOADING MOTOR BOARD<br>*****           |                 |
|          |              | < COIL >                               |              |          |              | < CAPACITOR >                          |                 |
| L101     | 1-410-386-41 | INDUCTOR, FERITE-BEAD                  | 0.45uH       | C999     | 1-136-165-00 | FILM                                   | 0.1uF 5% 50V    |
| L201     | 1-410-386-41 | INDUCTOR, FERITE-BEAD                  | 0.45uH       |          |              | < CONNECTOR >                          |                 |
|          |              | < RESISTOR >                           |              | * CN919  | 1-564-496-11 | PIN, CONNECTOR 3P                      |                 |
| R132     | 1-249-435-11 | CARBON                                 | 33K 5% 1/4W  | * CN920  | 1-564-497-11 | PIN, CONNECTOR 4P                      |                 |
| R133     | 1-249-433-11 | CARBON                                 | 22K 5% 1/4W  | *****    |              |  |                 |
| R134     | 1-249-425-11 | CARBON                                 | 4.7K 5% 1/4W |          |              | < CAPACITOR >                          |                 |
| R135     | 1-247-807-31 | CARBON                                 | 100 5% 1/4W  | *        | A-2007-648-A | MAIN BOARD, COMPLETE<br>*****          |                 |
| R232     | 1-249-435-11 | CARBON                                 | 33K 5% 1/4W  |          |              | (including AUDIO board, DIGITAL board) |                 |
| R233     | 1-249-433-11 | CARBON                                 | 22K 5% 1/4W  |          | 1-533-293-11 | FUSE HOLDER                            |                 |
| R234     | 1-249-425-11 | CARBON                                 | 4.7K 5% 1/4W |          | 1-550-414-21 | HOLDER, BATTERY                        |                 |
| R235     | 1-247-807-31 | CARBON                                 | 100 5% 1/4W  |          | 2-259-121-01 | SCREW, TR                              |                 |
|          |              | < VARIABLE RESISTOR >                  |              | *        | 3-309-144-21 | HEAT SINC                              |                 |
| RV302    | 1-225-374-11 | RES, VAR, CARBON 20K/20K (PHONE LEVEL) |              |          | 7-685-871-01 | SCREW +BVTT 3X6 (S)                    |                 |
| *****    |              |  |              |          |              | < CAPACITOR >                          |                 |
| *        | 1-664-484-11 | INPUT SW BOARD<br>*****                |              | C102     | 1-126-023-11 | ELECT                                  | 100uF 20% 25V   |
|          |              | < CONNECTOR >                          |              | C104     | 1-130-481-00 | MYLAR                                  | 0.0068uF 5% 50V |
| * CN704  | 1-564-339-00 | PIN, CONNECTOR 5P                      |              | C105     | 1-126-023-11 | ELECT                                  | 100uF 20% 25V   |
|          |              | < RESISTOR >                           |              | C106     | 1-136-165-00 | FILM                                   | 0.1uF 5% 50V    |
| R738     | 1-249-431-11 | CARBON                                 | 15K 5% 1/4W  | C107     | 1-136-165-00 | FILM                                   | 0.1uF 5% 50V    |
| R741     | 1-249-431-11 | CARBON                                 | 15K 5% 1/4W  | C108     | 1-136-165-00 | FILM                                   | 0.1uF 5% 50V    |
| R742     | 1-249-435-11 | CARBON                                 | 33K 5% 1/4W  | C109     | 1-136-165-00 | FILM                                   | 0.1uF 5% 50V    |
| R744     | 1-249-431-11 | CARBON                                 | 15K 5% 1/4W  | C110     | 1-106-343-00 | MYLAR                                  | 1000PF 5% 200V  |
| R749     | 1-249-431-11 | CARBON                                 | 15K 5% 1/4W  | C111     | 1-130-467-00 | MYLAR                                  | 470PF 5% 50V    |
|          |              | < SWITCH >                             |              | C112     | 1-130-467-00 | MYLAR                                  | 470PF 5% 50V    |
| S732     | 1-572-269-11 | SWITCH, SLIDE (INPUT)                  |              | C113     | 1-110-339-11 | MYLAR                                  | 220PF 5% 50V    |
| S733     | 1-572-269-11 | SWITCH, SLIDE (ANALOG INPUT)           |              | C114     | 1-110-339-11 | MYLAR                                  | 220PF 5% 50V    |
| S734     | 1-572-268-11 | SWITCH, SLIDE (REC MODE)               |              | C115     | 1-106-359-00 | MYLAR                                  | 4700PF 5% 200V  |
| S735     | 1-572-269-11 | SWITCH, SLIDE (SBM)                    |              | C116     | 1-106-343-00 | MYLAR                                  | 1000PF 5% 200V  |
| *****    |              |  |              | C117     | 1-126-023-11 | ELECT                                  | 100uF 20% 25V   |
| *        | 1-655-285-11 | LOAD SW BOARD<br>*****                 |              | C118     | 1-136-165-00 | FILM                                   | 0.1uF 5% 50V    |
|          |              | < SWITCH >                             |              | C119     | 1-136-165-00 | FILM                                   | 0.1uF 5% 50V    |
| S902     | 1-571-489-11 | SWITCH, SLIDE (UNLOAD)                 |              | C123     | 1-126-023-11 | ELECT                                  | 100uF 20% 25V   |
| S903     | 1-571-489-11 | SWITCH, SLIDE (LOAD)                   |              | C140     | 1-126-024-11 | ELECT                                  | 220uF 20% 25V   |
| *****    |              |  |              | C202     | 1-126-023-11 | ELECT                                  | 100uF 20% 25V   |
|          |              | < SWITCH >                             |              | C204     | 1-130-481-00 | MYLAR                                  | 0.0068uF 5% 50V |
|          |              | < SWITCH >                             |              | C205     | 1-126-023-11 | ELECT                                  | 100uF 20% 25V   |
|          |              | < SWITCH >                             |              | C206     | 1-136-165-00 | FILM                                   | 0.1uF 5% 50V    |
|          |              | < SWITCH >                             |              | C207     | 1-136-165-00 | FILM                                   | 0.1uF 5% 50V    |
|          |              | < SWITCH >                             |              | C208     | 1-136-165-00 | FILM                                   | 0.1uF 5% 50V    |
|          |              | < SWITCH >                             |              | C209     | 1-136-165-00 | FILM                                   | 0.1uF 5% 50V    |
|          |              | < SWITCH >                             |              | C210     | 1-106-343-00 | MYLAR                                  | 1000PF 5% 200V  |



|                              |
|------------------------------|
| <b>MAIN (AUDIO, DIGITAL)</b> |
|------------------------------|

| Ref. No. | Part No.     | Description |         |     | Remark | Ref. No. | Part No.     | Description |          |     | Remark |
|----------|--------------|-------------|---------|-----|--------|----------|--------------|-------------|----------|-----|--------|
| C211     | 1-130-467-00 | MYLAR       | 470PF   | 5%  | 50V    | C339     | 1-164-159-11 | CERAMIC     | 0.1uF    |     | 50V    |
| C212     | 1-130-467-00 | MYLAR       | 470PF   | 5%  | 50V    | C340     | 1-136-169-00 | FILM        | 0.22uF   | 5%  | 50V    |
| C213     | 1-110-339-11 | MYLAR       | 220PF   | 5%  | 50V    | C341     | 1-136-153-00 | FILM        | 0.01uF   | 5%  | 50V    |
| C214     | 1-110-339-11 | MYLAR       | 220PF   | 5%  | 50V    | C342     | 1-162-219-31 | CERAMIC     | 68PF     | 5%  | 50V    |
| C215     | 1-106-359-00 | MYLAR       | 4700PF  | 5%  | 200V   | C343     | 1-162-199-31 | CERAMIC     | 10PF     | 5%  | 50V    |
| C216     | 1-106-343-00 | MYLAR       | 1000PF  | 5%  | 200V   | C344     | 1-162-199-31 | CERAMIC     | 10PF     | 5%  | 50V    |
| C217     | 1-126-023-11 | ELECT       | 100uF   | 20% | 25V    | C345     | 1-126-048-81 | ELECT       | 10uF     | 20% | 50V    |
| C218     | 1-136-165-00 | FILM        | 0.1uF   | 5%  | 50V    | C346     | 1-164-159-11 | CERAMIC     | 0.1uF    |     | 50V    |
| C219     | 1-136-165-00 | FILM        | 0.1uF   | 5%  | 50V    | C347     | 1-162-215-31 | CERAMIC     | 47PF     | 5%  | 50V    |
| C223     | 1-126-023-11 | ELECT       | 100uF   | 20% | 25V    | C348     | 1-136-161-00 | FILM        | 0.047uF  | 5%  | 50V    |
| C240     | 1-126-024-11 | ELECT       | 220uF   | 20% | 25V    | C350     | 1-126-026-11 | ELECT       | 470uF    | 20% | 25V    |
| C301     | 1-124-997-11 | ELECT       | 470uF   | 20% | 10V    | C351     | 1-126-026-11 | ELECT       | 470uF    | 20% | 25V    |
| C302     | 1-124-997-11 | ELECT       | 470uF   | 20% | 10V    | C352     | 1-164-159-11 | CERAMIC     | 0.1uF    |     | 50V    |
| C303     | 1-136-165-00 | FILM        | 0.1uF   | 5%  | 50V    | C353     | 1-164-159-11 | CERAMIC     | 0.1uF    |     | 50V    |
| C304     | 1-136-165-00 | FILM        | 0.1uF   | 5%  | 50V    | C356     | 1-164-159-11 | CERAMIC     | 0.1uF    |     | 50V    |
| C305     | 1-136-165-00 | FILM        | 0.1uF   | 5%  | 50V    | C359     | 1-126-025-11 | ELECT       | 330uF    | 20% | 16V    |
| C306     | 1-126-023-11 | ELECT       | 100uF   | 20% | 25V    | C360     | 1-126-025-11 | ELECT       | 330uF    | 20% | 16V    |
| C307     | 1-136-165-00 | FILM        | 0.1uF   | 5%  | 50V    | C364     | 1-164-159-11 | CERAMIC     | 0.1uF    |     | 50V    |
| C308     | 1-126-023-11 | ELECT       | 100uF   | 20% | 25V    | C369     | 1-164-159-11 | CERAMIC     | 0.1uF    |     | 50V    |
| C309     | 1-162-294-31 | CERAMIC     | 0.001uF | 10% | 50V    | C370     | 1-164-159-11 | CERAMIC     | 0.1uF    |     | 50V    |
| C310     | 1-162-294-31 | CERAMIC     | 0.001uF | 10% | 50V    | C371     | 1-164-159-11 | CERAMIC     | 0.1uF    |     | 50V    |
| C311     | 1-164-159-11 | CERAMIC     | 0.1uF   |     | 50V    | C372     | 1-164-159-11 | CERAMIC     | 0.1uF    |     | 50V    |
| C312     | 1-124-997-11 | ELECT       | 470uF   | 20% | 10V    | C501     | 1-126-017-11 | ELECT       | 6800uF   | 20% | 16V    |
| C313     | 1-136-165-00 | FILM        | 0.1uF   | 5%  | 50V    | C502     | 1-126-946-11 | ELECT       | 6800uF   | 20% | 25V    |
| C314     | 1-164-159-11 | CERAMIC     | 0.1uF   |     | 50V    | C503     | 1-126-927-11 | ELECT       | 2200uF   | 20% | 10V    |
| C315     | 1-162-195-31 | CERAMIC     | 4.7PF   | 10% | 50V    | C504     | 1-126-926-11 | ELECT       | 1000uF   | 20% | 10V    |
| C316     | 1-162-195-31 | CERAMIC     | 4.7PF   | 10% | 50V    | C505     | 1-126-925-11 | ELECT       | 470uF    | 20% | 10V    |
| C317     | 1-162-196-31 | CERAMIC     | 5.6PF   | 10% | 50V    | C506     | 1-126-925-11 | ELECT       | 470uF    | 20% | 10V    |
| C318     | 1-162-196-31 | CERAMIC     | 5.6PF   | 10% | 50V    | C507     | 1-164-159-11 | CERAMIC     | 0.1uF    |     | 50V    |
| C319     | 1-164-159-11 | CERAMIC     | 0.1uF   |     | 50V    | C508     | 1-128-553-11 | ELECT       | 220uF    | 20% | 63V    |
| C320     | 1-124-564-11 | ELECT       | 4700uF  | 20% | 25V    | C509     | 1-126-968-11 | ELECT       | 100uF    | 20% | 50V    |
| C321     | 1-124-564-11 | ELECT       | 4700uF  | 20% | 25V    | C510     | 1-164-159-11 | CERAMIC     | 0.1uF    |     | 50V    |
| C322     | 1-136-165-00 | FILM        | 0.1uF   | 5%  | 50V    | C511     | 1-164-159-11 | CERAMIC     | 0.1uF    |     | 50V    |
| C323     | 1-136-165-00 | FILM        | 0.1uF   | 5%  | 50V    | C512     | 1-162-294-31 | CERAMIC     | 0.001uF  | 10% | 50V    |
| C324     | 1-126-027-11 | ELECT       | 1000uF  | 20% | 25V    | C513     | 1-162-302-11 | CERAMIC     | 0.0022uF | 30% | 16V    |
| C325     | 1-126-027-11 | ELECT       | 1000uF  | 20% | 25V    | C514     | 1-162-286-31 | CERAMIC     | 220PF    | 10% | 50V    |
| C326     | 1-124-997-11 | ELECT       | 470uF   | 20% | 10V    | C515     | 1-162-294-31 | CERAMIC     | 0.001uF  | 10% | 50V    |
| C327     | 1-136-165-00 | FILM        | 0.1uF   | 5%  | 50V    | C516     | 1-162-302-11 | CERAMIC     | 0.0022uF | 30% | 16V    |
| C328     | 1-126-023-11 | ELECT       | 100uF   | 20% | 25V    | C517     | 1-162-286-31 | CERAMIC     | 220PF    | 10% | 50V    |
| C329     | 1-136-165-00 | FILM        | 0.1uF   | 5%  | 50V    | C518     | 1-162-306-11 | CERAMIC     | 0.01uF   | 20% | 16V    |
| C330     | 1-126-023-11 | ELECT       | 100uF   | 20% | 25V    | C519     | 1-162-306-11 | CERAMIC     | 0.01uF   | 20% | 16V    |
| C331     | 1-136-165-00 | FILM        | 0.1uF   | 5%  | 50V    | C520     | 1-162-290-31 | CERAMIC     | 470PF    | 10% | 50V    |
| C332     | 1-136-165-00 | FILM        | 0.1uF   | 5%  | 50V    | C521     | 1-162-306-11 | CERAMIC     | 0.01uF   | 20% | 16V    |
| C333     | 1-126-013-11 | ELECT       | 1000uF  | 20% | 16V    | C522     | 1-126-965-11 | ELECT       | 22uF     | 20% | 50V    |
| C334     | 1-162-294-31 | CERAMIC     | 0.001uF | 10% | 50V    | C523     | 1-162-306-11 | CERAMIC     | 0.01uF   | 20% | 16V    |
| C335     | 1-162-294-31 | CERAMIC     | 0.001uF | 10% | 50V    | C524     | 1-162-290-31 | CERAMIC     | 470PF    | 10% | 50V    |
| C337     | 1-164-159-11 | CERAMIC     | 0.1uF   |     | 50V    | C525     | 1-162-306-11 | CERAMIC     | 0.01uF   | 20% | 16V    |
| C338     | 1-126-023-11 | ELECT       | 100uF   | 20% | 25V    | C526     | 1-126-965-11 | ELECT       | 22uF     | 20% | 50V    |
|          |              |             |         |     |        | C527     | 1-164-159-11 | CERAMIC     | 0.1uF    |     | 50V    |

## MAIN (AUDIO, DIGITAL)

| Ref. No. | Part No.     | Description | Remark       |     |     | Ref. No.      | Part No.     | Description               | Remark       |  |     |
|----------|--------------|-------------|--------------|-----|-----|---------------|--------------|---------------------------|--------------|--|-----|
| C528     | 1-164-159-11 | CERAMIC     | 0.1uF        |     | 50V | C584          | 1-162-600-11 | CERAMIC                   | 0.0047uF 20% |  | 16V |
| C529     | 1-126-925-11 | ELECT       | 470uF        | 20% | 10V | C585          | 1-162-294-31 | CERAMIC                   | 0.001uF 10%  |  | 50V |
| C530     | 1-162-294-31 | CERAMIC     | 0.001uF      | 10% | 50V | < CONNECTOR > |              |                           |              |  |     |
| C531     | 1-126-961-11 | ELECT       | 2.2uF        | 20% | 50V | CN302         | 1-691-766-31 | PLUG (MICRO CONNECTOR)    | 4P           |  |     |
| C532     | 1-164-159-11 | CERAMIC     | 0.1uF        |     | 50V | CN303         | 1-691-766-11 | PLUG (MICRO CONNECTOR)    | 4P           |  |     |
| C533     | 1-162-203-31 | CERAMIC     | 15PF         | 5%  | 50V | CN304         | 1-691-768-11 | PLUG (MICRO CONNECTOR)    | 6P           |  |     |
| C534     | 1-162-203-31 | CERAMIC     | 15PF         | 5%  | 50V | CN305         | 1-691-765-11 | PLUG (MICRO CONNECTOR)    | 3P           |  |     |
| C535     | 1-164-159-11 | CERAMIC     | 0.1uF        |     | 50V | CN307         | 1-691-765-11 | PLUG (MICRO CONNECTOR)    | 3P           |  |     |
| C536     | 1-136-165-00 | FILM        | 0.1uF        | 5%  | 50V | CN308         | 1-691-765-21 | PLUG (MICRO CONNECTOR)    | 3P           |  |     |
| C537     | 1-126-925-11 | ELECT       | 470uF        | 20% | 10V | CN501         | 1-691-767-11 | PLUG (MICRO CONNECTOR)    | 5P           |  |     |
| C538     | 1-164-159-11 | CERAMIC     | 0.1uF        |     | 50V | CN502         | 1-691-766-11 | PLUG (MICRO CONNECTOR)    | 4P           |  |     |
| C539     | 1-162-306-11 | CERAMIC     | 0.01uF       | 20% | 16V | * CN504       | 1-568-845-11 | SOCKET, CONNECTOR         | 31P          |  |     |
| C540     | 1-162-294-31 | CERAMIC     | 0.001uF      | 10% | 50V | * CN505       | 1-568-836-11 | SOCKET, CONNECTOR         | 17P          |  |     |
| C541     | 1-162-284-31 | CERAMIC     | 150PF        | 10% | 50V | CN506         | 1-770-164-11 | PIN, CONNECTOR (PC BOARD) | 15P          |  |     |
| C542     | 1-164-159-11 | CERAMIC     | 0.1uF        |     | 50V | CN507         | 1-691-461-11 | PIN, CONNECTOR (PC BOARD) | 5P           |  |     |
| C543     | 1-126-925-11 | ELECT       | 470uF        | 20% | 10V | * CN508       | 1-564-339-00 | PIN, CONNECTOR            | 5P           |  |     |
| C544     | 1-162-294-31 | CERAMIC     | 0.001uF      | 10% | 50V | CN509         | 1-691-765-31 | PLUG (MICRO CONNECTOR)    | 3P           |  |     |
| C545     | 1-162-294-31 | CERAMIC     | 0.001uF      | 10% | 50V | CN510         | 1-691-765-41 | PLUG (MICRO CONNECTOR)    | 3P           |  |     |
| C546     | 1-162-294-31 | CERAMIC     | 0.001uF      | 10% | 50V | CN511         | 1-691-765-21 | PLUG (MICRO CONNECTOR)    | 3P           |  |     |
| C547     | 1-162-294-31 | CERAMIC     | 0.001uF      | 10% | 50V | CN512         | 1-691-768-31 | PLUG (MICRO CONNECTOR)    | 6P           |  |     |
| C548     | 1-162-294-31 | CERAMIC     | 0.001uF      | 10% | 50V | < DIODE >     |              |                           |              |  |     |
| C549     | 1-162-294-31 | CERAMIC     | 0.001uF      | 10% | 50V | D101          | 8-719-987-63 | DIODE                     | 1N4148M      |  |     |
| C550     | 1-164-159-11 | CERAMIC     | 0.1uF        |     | 50V | D102          | 8-719-987-63 | DIODE                     | 1N4148M      |  |     |
| C552     | 1-162-207-31 | CERAMIC     | 22PF         | 5%  | 50V | D103          | 8-719-987-63 | DIODE                     | 1N4148M      |  |     |
| C553     | 1-162-207-31 | CERAMIC     | 22PF         | 5%  | 50V | D104          | 8-719-987-63 | DIODE                     | 1N4148M      |  |     |
| C554     | 1-162-203-31 | CERAMIC     | 15PF         | 5%  | 50V | D201          | 8-719-987-63 | DIODE                     | 1N4148M      |  |     |
| C555     | 1-162-203-31 | CERAMIC     | 15PF         | 5%  | 50V | D202          | 8-719-987-63 | DIODE                     | 1N4148M      |  |     |
| C556     | 1-164-159-11 | CERAMIC     | 0.1uF        |     | 50V | D203          | 8-719-987-63 | DIODE                     | 1N4148M      |  |     |
| C557     | 1-164-159-11 | CERAMIC     | 0.1uF        |     | 50V | D204          | 8-719-987-63 | DIODE                     | 1N4148M      |  |     |
| C558     | 1-164-159-11 | CERAMIC     | 0.1uF        |     | 50V | D301          | 8-719-230-02 | DIODE                     | 30DF2        |  |     |
| C559     | 1-136-153-00 | FILM        | 0.01uF       | 5%  | 50V | D302          | 8-719-230-02 | DIODE                     | 30DF2        |  |     |
| C560     | 1-164-159-11 | CERAMIC     | 0.1uF        |     | 50V | D303          | 8-719-230-02 | DIODE                     | 30DF2        |  |     |
| C561     | 1-162-211-31 | CERAMIC     | 33PF         | 5%  | 50V | D304          | 8-719-230-02 | DIODE                     | 30DF2        |  |     |
| C562     | 1-136-153-00 | FILM        | 0.01uF       | 5%  | 50V | D305          | 8-719-987-63 | DIODE                     | 1N4148M      |  |     |
| C563     | 1-126-965-11 | ELECT       | 22uF         | 20% | 50V | D306          | 8-719-987-63 | DIODE                     | 1N4148M      |  |     |
| C564     | 1-136-153-00 | FILM        | 0.01uF       | 5%  | 50V | D307          | 8-719-987-63 | DIODE                     | 1N4148M      |  |     |
| C565     | 1-162-282-31 | CERAMIC     | 100PF        | 10% | 50V | D308          | 8-719-976-30 | DIODE                     | KV1560N      |  |     |
| C566     | 1-164-159-11 | CERAMIC     | 0.1uF        |     | 50V | D313          | 8-719-987-63 | DIODE                     | 1N4148M      |  |     |
| C568     | 1-164-159-11 | CERAMIC     | 0.1uF        |     | 50V | D314          | 8-719-987-63 | DIODE                     | 1N4148M      |  |     |
| C573     | 1-162-179-11 | CERAMIC     | 0.1uF        |     | 50V | D317          | 8-719-987-63 | DIODE                     | 1N4148M      |  |     |
| C575     | 1-164-159-11 | CERAMIC     | 0.1uF        |     | 50V | D501          | 8-719-312-47 | DIODE                     | RBA-406B     |  |     |
| C576     | 1-164-159-11 | CERAMIC     | 0.1uF        |     | 50V | D502          | 8-719-312-47 | DIODE                     | RBA-406B     |  |     |
| C578     | 1-164-159-11 | CERAMIC     | 0.1uF        |     | 50V | D503          | 8-719-200-77 | DIODE                     | 10E2N        |  |     |
| C579     | 1-164-159-11 | CERAMIC     | 0.1uF        |     | 50V | D504          | 8-719-015-13 | DIODE                     | UZP-9.1BC-TP |  |     |
| C580     | 1-162-203-31 | CERAMIC     | 15PF         | 5%  | 50V | D505          | 8-719-200-77 | DIODE                     | 10E2N        |  |     |
| C581     | 1-162-205-31 | CERAMIC     | 18PF         | 5%  | 50V | D506          | 8-719-200-77 | DIODE                     | 10E2N        |  |     |
| C582     | 1-164-159-11 | CERAMIC     | 0.1uF        |     | 50V |               |              |                           |              |  |     |
| C583     | 1-162-600-11 | CERAMIC     | 0.0047uF 20% |     | 16V |               |              |                           |              |  |     |

## MAIN (AUDIO, DIGITAL)

| Ref. No. | Part No.     | Description                      | Remark | Ref. No. | Part No.     | Description                                      | Remark |
|----------|--------------|----------------------------------|--------|----------|--------------|--|--------|
| D507     | 8-719-985-57 | DIODE HZS4BLL-TA                 |        | IC504    | 8-752-364-95 | IC CXK58257BM-10LL-T6                            |        |
| D508     | 8-719-987-63 | DIODE 1N4148M                    |        | IC508    | 8-759-927-46 | IC SN74HC00ANS                                   |        |
| D509     | 8-719-987-63 | DIODE 1N4148M                    |        |          |              |  |        |
| D510     | 8-719-200-77 | DIODE 10E2N                      |        | IC509    | 8-759-701-01 | IC NJM2904M                                      |        |
| D511     | 8-719-911-06 | DIODE 1SS106                     |        | IC510    | 8-759-927-46 | IC SN74HC00ANS                                   |        |
|          |              |                                  |        | IC511    | 8-759-926-17 | IC SN74HC153ANS                                  |        |
| D512     | 8-719-911-06 | DIODE 1SS106                     |        | IC512    | 8-759-007-80 | IC MC74HC175F                                    |        |
| D513     | 8-719-045-72 | DIODE KV1550NT                   |        | IC513    | 8-759-269-92 | IC SN74HC004ANS-E20                              |        |
|          |              | < FUSE >                         |        |          |              |  |        |
| △ F501   | 1-532-464-51 | FUSE, TIME-LAG (2.5A/250V) (AEP) |        | IC514    | 8-759-927-46 | IC SN74HC00ANS                                   |        |
| △ F501   | 1-576-105-11 | FUSE (2.5A/250V) (US, Canadian)  |        | IC515    | 8-759-927-46 | IC SN74HC00ANS                                   |        |
| △ F502   | 1-532-464-51 | FUSE, TIME-LAG (2.5A/250V) (AEP) |        | IC516    | 8-759-634-43 | IC M51953BFP                                     |        |
| △ F502   | 1-576-105-11 | FUSE (2.5A/250V) (US, Canadian)  |        | IC517    | 8-759-426-52 | IC AT24C01A-10SC-TP-B                            |        |
|          |              | < FUSIBLE >                      |        | IC518    | 8-759-333-82 | IC MSM6782-01MS-K-R1                             |        |
| △ FR304  | 1-219-139-11 | FUSIBLE 0.68 10% 1/4W F          |        |          |              |  |        |
| △ FR305  | 1-219-139-11 | FUSIBLE 0.68 10% 1/4W F          |        | IC519    | 8-759-925-90 | IC SN74HC74ANS                                   |        |
| △ FR501  | 1-219-136-11 | FUSIBLE 0.22 10% 1/4W F          |        | IC520    | 8-759-701-01 | IC NJM2904M                                      |        |
| △ FR502  | 1-212-873-11 | FUSIBLE 47 5% 1/4W F             |        | IC521    | 8-759-701-01 | IC NJM2904M                                      |        |
|          |              | < IC >                           |        | IC522    | 8-759-701-01 | IC NJM2904M                                      |        |
|          |              |                                  |        | IC523    | 8-759-633-65 | IC M54641L                                       |        |
| IC101    | 8-759-900-72 | IC NE5532P                       |        |          |              | < JACK >   |        |
| IC102    | 8-759-900-72 | IC NE5532P                       |        | J501     | 1-770-162-21 | JACK, PIN 2P<br>(DIGITAL IN/OUT COAXIAL/AES/EBU) |        |
| IC201    | 8-759-900-72 | IC NE5532P                       |        |          |              | < COIL >   |        |
| IC202    | 8-759-900-72 | IC NE5532P                       |        | L301     | 1-410-509-11 | INDUCTOR 10uH                                    |        |
| IC301    | 8-759-231-58 | IC TA7812S                       |        | L302     | 1-410-509-11 | INDUCTOR 10uH                                    |        |
|          |              |                                  |        | L303     | 1-410-509-11 | INDUCTOR 10uH                                    |        |
| IC302    | 8-759-245-86 | IC TA7912S                       |        | L304     | 1-410-509-11 | INDUCTOR 10uH                                    |        |
| IC303    | 8-759-602-83 | IC M5238P                        |        | L305     | 1-410-509-11 | INDUCTOR 10uH                                    |        |
| IC304    | 8-759-602-83 | IC M5238P                        |        |          |              |  |        |
| IC305    | 8-759-602-67 | IC M5278L05                      |        | L306     | 1-410-509-11 | INDUCTOR 10uH                                    |        |
| IC306    | 8-759-189-33 | IC M5279L05-TP                   |        | L307     | 1-426-850-11 | COIL (RF)  |        |
|          |              |                                  |        | L308     | 1-410-397-21 | FERRITE BEAD INDUCTOR                            |        |
| IC307    | 8-759-330-53 | IC CXD8493M-E1                   |        | L309     | 1-410-397-21 | FERRITE BEAD INDUCTOR                            |        |
| IC308    | 8-759-196-21 | IC CXD8482Q                      |        | L310     | 1-410-509-11 | INDUCTOR 10uH                                    |        |
| IC309    | 8-759-925-90 | IC SN74HC74ANS                   |        |          |              |  |        |
| IC310    | 8-759-269-92 | IC SN74HC004ANS-E20              |        | L311     | 1-410-509-11 | INDUCTOR 10uH                                    |        |
| IC311    | 8-759-269-92 | IC SN74HC004ANS-E20              |        | L312     | 1-410-509-11 | INDUCTOR 10uH                                    |        |
|          |              |                                  |        | L501     | 1-410-509-11 | INDUCTOR 10uH                                    |        |
| IC312    | 8-759-926-95 | IC SN74HC4020NS                  |        | L502     | 1-410-509-11 | INDUCTOR 10uH                                    |        |
| IC313    | 8-759-270-50 | IC SN74HC368ANS-E20              |        | L503     | 1-410-509-11 | INDUCTOR 10uH                                    |        |
| IC314    | 8-759-370-62 | IC CXD8505BQ                     |        |          |              |  |        |
| IC315    | 8-759-250-81 | IC TC5081AP                      |        | L504     | 1-410-498-11 | INDUCTOR 1.2uH                                   |        |
| IC316    | 8-759-094-53 | IC TA7805S                       |        | L506     | 1-410-509-11 | INDUCTOR 10uH                                    |        |
|          |              |                                  |        |          |              | < TERMINAL >                                     |        |
| IC317    | 8-759-094-53 | IC TA7805S                       |        | LUG301   | 1-537-770-21 | TERMINAL BOARD, GROUND                           |        |
| IC318    | 8-759-602-67 | IC M5278L05                      |        | LUG302   | 1-537-770-21 | TERMINAL BOARD, GROUND                           |        |
| IC319    | 8-759-231-58 | IC TA7812S                       |        | LUG304   | 1-537-770-21 | TERMINAL BOARD, GROUND                           |        |
| IC320    | 8-759-245-86 | IC TA7912S                       |        | LUG503   | 1-537-770-21 | TERMINAL BOARD, GROUND                           |        |
| IC325    | 8-759-242-72 | IC TC7W00F                       |        |          |              |  |        |
|          |              |                                  |        |          |              |  |        |
| IC501    | 8-752-882-30 | IC CXP87540-033Q                 |        |          |              |  |        |
| IC502    | 8-752-882-31 | IC CXP87532-034Q                 |        |          |              |  |        |
| IC503    | 8-752-355-55 | IC CXD2605Q                      |        |          |              |  |        |

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

## MAIN (AUDIO, DIGITAL)

| Ref. No.       | Part No.     | Description            | Remark | Ref. No. | Part No.     | Description    | Remark |
|----------------|--------------|------------------------|--------|----------|--------------|----------------|--------|
| < TRANSISTOR > |              |                        |        |          |              |                |        |
| Q101           | 8-729-107-85 | TRANSISTOR 2SC3623A-K  |        | R115     | 1-259-444-11 | CARBON 4.7K 1% | 1/6W   |
| Q102           | 8-729-107-85 | TRANSISTOR 2SC3623A-K  |        | R116     | 1-259-432-11 | CARBON 1.5K 1% | 1/6W   |
| Q303           | 8-729-900-80 | TRANSISTOR DTC114ES    |        | R117     | 1-259-432-11 | CARBON 1.5K 1% | 1/6W   |
| Q304           | 8-729-620-05 | TRANSISTOR 2SC2603-EF  |        | R118     | 1-259-444-11 | CARBON 4.7K 1% | 1/6W   |
| Q305           | 8-729-620-05 | TRANSISTOR 2SC2603-EF  |        | R119     | 1-259-444-11 | CARBON 4.7K 1% | 1/6W   |
| Q306           | 8-729-620-05 | TRANSISTOR 2SC2603-EF  |        | R120     | 1-259-436-11 | CARBON 2.2K 1% | 1/6W   |
| Q307           | 8-729-200-56 | TRANSISTOR 2SK241-GR   |        | R121     | 1-259-436-11 | CARBON 2.2K 1% | 1/6W   |
| Q308           | 8-729-200-56 | TRANSISTOR 2SK241-GR   |        | R122     | 1-259-436-11 | CARBON 2.2K 1% | 1/6W   |
| Q309           | 8-729-422-57 | TRANSISTOR UN4111      |        | R123     | 1-259-436-11 | CARBON 2.2K 1% | 1/6W   |
| Q310           | 8-729-900-80 | TRANSISTOR DTC114ES    |        | R124     | 1-249-419-11 | CARBON 1.5K 5% | 1/4W   |
| Q311           | 8-729-900-80 | TRANSISTOR DTC114ES    |        | R125     | 1-249-419-11 | CARBON 1.5K 5% | 1/4W   |
| Q312           | 8-729-900-80 | TRANSISTOR DTC114ES    |        | R126     | 1-249-441-11 | CARBON 100K 5% | 1/4W   |
| Q501           | 8-729-620-05 | TRANSISTOR 2SC2603-EF  |        | R127     | 1-249-407-11 | CARBON 150 5%  | 1/4W   |
| Q502           | 8-729-119-76 | TRANSISTOR 2SA1175-HFE |        | R128     | 1-249-407-11 | CARBON 150 5%  | 1/4W   |
| Q503           | 8-729-140-97 | TRANSISTOR 2SB734-34   |        | R129     | 1-249-429-11 | CARBON 10K 5%  | 1/4W   |
| Q504           | 8-729-927-11 | TRANSISTOR 2SA1585SQR  |        | R202     | 1-249-441-11 | CARBON 100K 5% | 1/4W   |
| Q505           | 8-729-927-12 | TRANSISTOR 2SC4115SQR  |        | R206     | 1-249-429-11 | CARBON 10K 5%  | 1/4W   |
| Q506           | 8-729-927-11 | TRANSISTOR 2SA1585SQR  |        | R207     | 1-249-433-11 | CARBON 22K 5%  | 1/4W   |
| Q507           | 8-729-927-12 | TRANSISTOR 2SC4115SQR  |        | R208     | 1-249-425-11 | CARBON 4.7K 5% | 1/4W   |
| Q508           | 8-729-900-80 | TRANSISTOR DTC114ES    |        | R209     | 1-249-425-11 | CARBON 4.7K 5% | 1/4W   |
| Q509           | 8-729-900-80 | TRANSISTOR DTC114ES    |        | R210     | 1-249-401-11 | CARBON 47 5%   | 1/4W   |
| Q510           | 8-729-900-80 | TRANSISTOR DTC114ES    |        | R211     | 1-249-401-11 | CARBON 47 5%   | 1/4W   |
| Q511           | 8-729-900-80 | TRANSISTOR DTC114ES    |        | R212     | 1-259-444-11 | CARBON 4.7K 1% | 1/6W   |
| Q512           | 8-729-141-83 | TRANSISTOR 2SB1094-LK  |        | R213     | 1-259-444-11 | CARBON 4.7K 1% | 1/6W   |
| Q513           | 8-729-119-76 | TRANSISTOR 2SA1175-HFE |        | R214     | 1-259-444-11 | CARBON 4.7K 1% | 1/6W   |
| Q514           | 8-729-620-05 | TRANSISTOR 2SC2603-EF  |        | R215     | 1-259-444-11 | CARBON 4.7K 1% | 1/6W   |
| Q515           | 8-729-141-83 | TRANSISTOR 2SB1094-LK  |        | R216     | 1-259-432-11 | CARBON 1.5K 1% | 1/6W   |
| Q516           | 8-729-119-76 | TRANSISTOR 2SA1175-HFE |        | R217     | 1-259-432-11 | CARBON 1.5K 1% | 1/6W   |
| Q517           | 8-729-620-05 | TRANSISTOR 2SC2603-EF  |        | R218     | 1-259-444-11 | CARBON 4.7K 1% | 1/6W   |
| Q518           | 8-729-620-05 | TRANSISTOR 2SC2603-EF  |        | R219     | 1-259-444-11 | CARBON 4.7K 1% | 1/6W   |
| Q519           | 8-729-620-05 | TRANSISTOR 2SC2603-EF  |        | R220     | 1-259-436-11 | CARBON 2.2K 1% | 1/6W   |
| Q520           | 8-729-900-80 | TRANSISTOR DTC114ES    |        | R221     | 1-259-436-11 | CARBON 2.2K 1% | 1/6W   |
| Q521           | 8-729-620-05 | TRANSISTOR 2SC2603-EF  |        | R222     | 1-259-436-11 | CARBON 2.2K 1% | 1/6W   |
| Q522           | 8-729-900-80 | TRANSISTOR DTC114ES    |        | R223     | 1-259-436-11 | CARBON 2.2K 1% | 1/6W   |
| Q524           | 8-729-900-80 | TRANSISTOR DTC114ES    |        | R224     | 1-249-419-11 | CARBON 1.5K 5% | 1/4W   |
| < RESISTOR >   |              |                        |        |          |              |                |        |
| R102           | 1-249-441-11 | CARBON 100K 5%         | 1/4W   | R225     | 1-249-419-11 | CARBON 1.5K 5% | 1/4W   |
| R106           | 1-249-429-11 | CARBON 10K 5%          | 1/4W   | R226     | 1-249-441-11 | CARBON 100K 5% | 1/4W   |
| R107           | 1-249-433-11 | CARBON 22K 5%          | 1/4W   | R227     | 1-249-407-11 | CARBON 150 5%  | 1/4W   |
| R108           | 1-249-425-11 | CARBON 4.7K 5%         | 1/4W   | R228     | 1-249-407-11 | CARBON 150 5%  | 1/4W   |
| R109           | 1-249-425-11 | CARBON 4.7K 5%         | 1/4W   | R229     | 1-249-429-11 | CARBON 10K 5%  | 1/4W   |
| R110           | 1-249-401-11 | CARBON 47 5%           | 1/4W   | R303     | 1-249-429-11 | CARBON 10K 5%  | 1/4W   |
| R111           | 1-249-401-11 | CARBON 47 5%           | 1/4W   | R304     | 1-249-413-11 | CARBON 470 5%  | 1/4W   |
| R112           | 1-259-444-11 | CARBON 4.7K 1%         | 1/6W   | R305     | 1-249-413-11 | CARBON 470 5%  | 1/4W   |
| R113           | 1-259-444-11 | CARBON 4.7K 1%         | 1/6W   | R306     | 1-249-417-11 | CARBON 1K 5%   | 1/4W   |
| R114           | 1-259-444-11 | CARBON 4.7K 1%         | 1/6W   | R307     | 1-249-417-11 | CARBON 1K 5%   | 1/4W   |
|                |              |                        |        | R308     | 1-249-417-11 | CARBON 1K 5%   | 1/4W   |
|                |              |                        |        | R309     | 1-249-413-11 | CARBON 470 5%  | 1/4W   |
|                |              |                        |        | R310     | 1-249-441-11 | CARBON 100K 5% | 1/4W   |
|                |              |                        |        | R311     | 1-249-417-11 | CARBON 1K 5%   | 1/4W   |

**MAIN (AUDIO, DIGITAL)**

| Ref. No. | Part No.     | Description | Remark |    |      | Ref. No. | Part No.     | Description | Remark |    |      |
|----------|--------------|-------------|--------|----|------|----------|--------------|-------------|--------|----|------|
| R312     | 1-247-903-00 | CARBON      | 1M     | 5% | 1/4W | R510     | 1-249-409-11 | CARBON      | 220    | 5% | 1/4W |
| R313     | 1-249-407-11 | CARBON      | 150    | 5% | 1/4W | R511     | 1-249-409-11 | CARBON      | 220    | 5% | 1/4W |
| R314     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | R512     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |
| R315     | 1-249-417-11 | CARBON      | 1K     | 5% | 1/4W | R513     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |
| R316     | 1-247-903-00 | CARBON      | 1M     | 5% | 1/4W | R514     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |
| R317     | 1-249-407-11 | CARBON      | 150    | 5% | 1/4W | R515     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |
| R320     | 1-249-411-11 | CARBON      | 330    | 5% | 1/4W | R516     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |
| R321     | 1-249-417-11 | CARBON      | 1K     | 5% | 1/4W | R517     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |
| R322     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | R518     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |
| R323     | 1-249-409-11 | CARBON      | 220    | 5% | 1/4W | R519     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |
| R324     | 1-249-409-11 | CARBON      | 220    | 5% | 1/4W | R520     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |
| R325     | 1-249-413-11 | CARBON      | 470    | 5% | 1/4W | R522     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |
| R326     | 1-249-413-11 | CARBON      | 470    | 5% | 1/4W | R523     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |
| R327     | 1-249-413-11 | CARBON      | 470    | 5% | 1/4W | R524     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W |
| R328     | 1-249-425-11 | CARBON      | 4.7K   | 5% | 1/4W | R525     | 1-249-417-11 | CARBON      | 1K     | 5% | 1/4W |
| R329     | 1-249-417-11 | CARBON      | 1K     | 5% | 1/4W | R526     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W |
| R330     | 1-249-401-11 | CARBON      | 47     | 5% | 1/4W | R527     | 1-247-807-31 | CARBON      | 100    | 5% | 1/4W |
| R331     | 1-249-417-11 | CARBON      | 1K     | 5% | 1/4W | R528     | 1-249-417-11 | CARBON      | 1K     | 5% | 1/4W |
| R332     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W | R529     | 1-249-409-11 | CARBON      | 220    | 5% | 1/4W |
| R333     | 1-249-421-11 | CARBON      | 2.2K   | 5% | 1/4W | R530     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |
| R334     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W | R531     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |
| R335     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W | R532     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W |
| R336     | 1-249-428-11 | CARBON      | 8.2K   | 5% | 1/4W | R533     | 1-249-417-11 | CARBON      | 1K     | 5% | 1/4W |
| R337     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | R534     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W |
| R338     | 1-249-417-11 | CARBON      | 1K     | 5% | 1/4W | R535     | 1-247-807-31 | CARBON      | 100    | 5% | 1/4W |
| R339     | 1-249-417-11 | CARBON      | 1K     | 5% | 1/4W | R536     | 1-249-417-11 | CARBON      | 1K     | 5% | 1/4W |
| R340     | 1-249-417-11 | CARBON      | 1K     | 5% | 1/4W | R537     | 1-249-409-11 | CARBON      | 220    | 5% | 1/4W |
| R341     | 1-247-895-00 | CARBON      | 470K   | 5% | 1/4W | R539     | 1-249-409-11 | CARBON      | 220    | 5% | 1/4W |
| R342     | 1-249-437-11 | CARBON      | 47K    | 5% | 1/4W | R540     | 1-249-409-11 | CARBON      | 220    | 5% | 1/4W |
| R343     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | R541     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |
| R345     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W | R544     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |
| R348     | 1-249-409-11 | CARBON      | 220    | 5% | 1/4W | R545     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W |
| R349     | 1-249-409-11 | CARBON      | 220    | 5% | 1/4W | R546     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W |
| R350     | 1-249-411-11 | CARBON      | 330    | 5% | 1/4W | R547     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W |
| R351     | 1-249-413-11 | CARBON      | 470    | 5% | 1/4W | R548     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |
| R352     | 1-249-417-11 | CARBON      | 1K     | 5% | 1/4W | R549     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |
| R353     | 1-249-417-11 | CARBON      | 1K     | 5% | 1/4W | R550     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |
| R354     | 1-249-417-11 | CARBON      | 1K     | 5% | 1/4W | R551     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |
| R501     | 1-249-425-11 | CARBON      | 4.7K   | 5% | 1/4W | R552     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W |
| R502     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W | R553     | 1-249-425-11 | CARBON      | 4.7K   | 5% | 1/4W |
| R503     | 1-249-421-11 | CARBON      | 2.2K   | 5% | 1/4W | R554     | 1-249-425-11 | CARBON      | 4.7K   | 5% | 1/4W |
| R504     | 1-249-433-11 | CARBON      | 22K    | 5% | 1/4W | R555     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W |
| R505     | 1-247-843-11 | CARBON      | 3.3K   | 5% | 1/4W | R556     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W |
| R506     | 1-249-413-11 | CARBON      | 470    | 5% | 1/4W | R557     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |
| R507     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W | R558     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |
| R508     | 1-249-409-11 | CARBON      | 220    | 5% | 1/4W | R559     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |
| R509     | 1-249-409-11 | CARBON      | 220    | 5% | 1/4W | R560     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |
|          |              |             |        |    |      | R561     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |
|          |              |             |        |    |      | R562     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |

**MAIN (AUDIO, DIGITAL)**

**MOTOR**

| Ref. No. | Part No.     | Description | Remark |    |      | Ref. No. | Part No.     | Description                     | Remark |     |      |
|----------|--------------|-------------|--------|----|------|----------|--------------|---------------------------------|--------|-----|------|
| R563     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W | R619     | 1-249-421-11 | CARBON                          | 2.2K   | 5%  | 1/4W |
| R564     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W |          |              |                                 |        |     |      |
| R565     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W | R620     | 1-247-807-31 | CARBON                          | 100    | 5%  | 1/4W |
| R566     | 1-249-417-11 | CARBON      | 1K     | 5% | 1/4W | R621     | 1-247-804-11 | CARBON                          | 75     | 5%  | 1/4W |
| R567     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W | R622     | 1-249-429-11 | CARBON                          | 10K    | 5%  | 1/4W |
|          |              |             |        |    |      | R623     | 1-249-429-11 | CARBON                          | 10K    | 5%  | 1/4W |
| R568     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W | R625     | 1-249-429-11 | CARBON                          | 10K    | 5%  | 1/4W |
| R569     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W |          |              |                                 |        |     |      |
| R570     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W | R626     | 1-249-429-11 | CARBON                          | 10K    | 5%  | 1/4W |
| R571     | 1-247-807-31 | CARBON      | 100    | 5% | 1/4W | R627     | 1-249-429-11 | CARBON                          | 10K    | 5%  | 1/4W |
| R572     | 1-249-413-11 | CARBON      | 470    | 5% | 1/4W | R628     | 1-249-429-11 | CARBON                          | 10K    | 5%  | 1/4W |
|          |              |             |        |    |      | R629     | 1-249-429-11 | CARBON                          | 10K    | 5%  | 1/4W |
| R573     | 1-247-807-31 | CARBON      | 100    | 5% | 1/4W | R630     | 1-249-429-11 | CARBON                          | 10K    | 5%  | 1/4W |
| R574     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |          |              |                                 |        |     |      |
| R575     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W | R634     | 1-247-843-11 | CARBON                          | 3.3K   | 5%  | 1/4W |
| R576     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W | R635     | 1-247-843-11 | CARBON                          | 3.3K   | 5%  | 1/4W |
| R577     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W | R636     | 1-247-843-11 | CARBON                          | 3.3K   | 5%  | 1/4W |
|          |              |             |        |    |      | R637     | 1-249-429-11 | CARBON                          | 10K    | 5%  | 1/4W |
| R578     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W | R638     | 1-249-429-11 | CARBON                          | 10K    | 5%  | 1/4W |
| R581     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |          |              |                                 |        |     |      |
| R583     | 1-249-425-11 | CARBON      | 4.7K   | 5% | 1/4W | R639     | 1-247-804-11 | CARBON                          | 75     | 5%  | 1/4W |
| R584     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | R645     | 1-249-413-11 | CARBON                          | 470    | 5%  | 1/4W |
| R585     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | R647     | 1-249-409-11 | CARBON                          | 220    | 5%  | 1/4W |
|          |              |             |        |    |      | R648     | 1-247-807-31 | CARBON                          | 100    | 5%  | 1/4W |
| R586     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |          |              |                                 |        |     |      |
| R587     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |          |              | < VARIABLE RESISTOR >           |        |     |      |
| R588     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |          |              |                                 |        |     |      |
| R589     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | RV501    | 1-241-763-11 | RES, ADJ, CARBON 4.7K           |        |     |      |
| R590     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | RV502    | 1-241-763-11 | RES, ADJ, CARBON 4.7K           |        |     |      |
|          |              |             |        |    |      |          |              |                                 |        |     |      |
| R591     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |          |              | < RELAY >                       |        |     |      |
| R593     | 1-249-417-11 | CARBON      | 1K     | 5% | 1/4W |          |              |                                 |        |     |      |
| R594     | 1-249-421-11 | CARBON      | 2.2K   | 5% | 1/4W | RY301    | 1-515-726-11 | RELAY                           |        |     |      |
| R595     | 1-249-417-11 | CARBON      | 1K     | 5% | 1/4W |          |              | < SWITCH >                      |        |     |      |
| R596     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W |          |              |                                 |        |     |      |
|          |              |             |        |    |      |          |              |                                 |        |     |      |
| R597     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W | S501     | 1-572-622-11 | SWITCH, SLIDE (COAXIAL-AES/EBU) |        |     |      |
| R598     | 1-249-441-11 | CARBON      | 100K   | 5% | 1/4W |          |              | < TRANSFORMER >                 |        |     |      |
| R600     | 1-249-425-11 | CARBON      | 4.7K   | 5% | 1/4W |          |              |                                 |        |     |      |
| R601     | 1-249-425-11 | CARBON      | 4.7K   | 5% | 1/4W | T501     | 1-409-594-11 | COIL (WITH CORE)                |        |     |      |
| R602     | 1-249-425-11 | CARBON      | 4.7K   | 5% | 1/4W |          |              | < VIBRATOR >                    |        |     |      |
|          |              |             |        |    |      |          |              |                                 |        |     |      |
| R603     | 1-249-413-11 | CARBON      | 470    | 5% | 1/4W |          |              |                                 |        |     |      |
| R604     | 1-249-433-11 | CARBON      | 22K    | 5% | 1/4W | X301     | 1-567-814-11 | VIBRATOR, CRYSTAL (24.576MHz)   |        |     |      |
| R605     | 1-249-433-11 | CARBON      | 22K    | 5% | 1/4W | X302     | 1-567-815-31 | VIBRATOR, CRYSTAL (22.5792MHz)  |        |     |      |
| R606     | 1-249-409-11 | CARBON      | 220    | 5% | 1/4W | X501     | 1-567-814-11 | VIBRATOR, CRYSTAL (24.576MHz)   |        |     |      |
| R607     | 1-249-427-11 | CARBON      | 6.8K   | 5% | 1/4W | X502     | 1-567-816-31 | VIBRATOR, CRYSTAL (18.816MHz)   |        |     |      |
|          |              |             |        |    |      | X503     | 1-567-098-61 | VIBRATOR, CRYSTAL (32.768KHz)   |        |     |      |
| R608     | 1-249-417-11 | CARBON      | 1K     | 5% | 1/4W | *****    |              |                                 |        |     |      |
| R611     | 1-249-411-11 | CARBON      | 330    | 5% | 1/4W |          |              |                                 |        |     |      |
| R612     | 1-249-437-11 | CARBON      | 47K    | 5% | 1/4W |          |              |                                 |        |     |      |
| R613     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W | *        | 1-655-913-11 | MOTOR BOARD                     |        |     |      |
| R614     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W |          |              | *****                           |        |     |      |
|          |              |             |        |    |      |          |              | < CAPACITOR >                   |        |     |      |
| R615     | 1-247-807-31 | CARBON      | 100    | 5% | 1/4W |          |              |                                 |        |     |      |
| R616     | 1-249-429-11 | CARBON      | 10K    | 5% | 1/4W |          |              |                                 |        |     |      |
| R617     | 1-249-435-11 | CARBON      | 33K    | 5% | 1/4W | C1       | 1-161-772-11 | CERAMIC                         | 0.1uF  | 10% | 25V  |
| R618     | 1-249-421-11 | CARBON      | 2.2K   | 5% | 1/4W |          |              |                                 |        |     |      |

|                |               |                |            |               |               |
|----------------|---------------|----------------|------------|---------------|---------------|
| <b>PRIMARY</b> | <b>REC EN</b> | <b>REC VOL</b> | <b>REG</b> | <b>REM SW</b> | <b>REMOTE</b> |
|----------------|---------------|----------------|------------|---------------|---------------|

| Ref. No. | Part No.     | Description                             | Remark | Ref. No. | Part No.     | Description                       | Remark |
|----------|--------------|---|--------|----------|--------------|-----------------------------------|--------|
|          |              | < CONNECTOR >                           |        |          |              | < VARIABLE RESISTOR >             |        |
| * CN1    | 1-564-498-11 | PIN, CONNECTOR 5P                       |        | RV103    | 1-225-400-11 | RES, VAR 10K (REC LEVEL CH-1 (L)) |        |
| * CN2    | 1-564-337-00 | PIN, CONNECTOR 3P                       |        | RV203    | 1-225-400-11 | RES, VAR 10K (REC LEVEL CH-2 (R)) |        |
| *****    |              |   |        | *****    |              |                                   |        |
| *        | 1-664-488-11 | PRIMARY BOARD<br>*****                  |        | *        | 1-664-490-11 | REG BOARD<br>*****                |        |
| *        | 3-346-266-12 | PLATE, GROUND                           |        |          |              | < CAPACITOR >                     |        |
|          |              | < CAPACITOR >                           |        | C907     | 1-164-159-11 | CERAMIC 0.1uF 50V                 |        |
| △ C901   | 1-113-916-11 | CERAMIC 0.01uF 20% 250V                 |        | C908     | 1-164-159-11 | CERAMIC 0.1uF 50V                 |        |
| △ C902   | 1-113-916-11 | CERAMIC 0.01uF 20% 250V                 |        | C909     | 1-136-177-00 | CERAMIC 1uF 5% 50V                |        |
| △ C903   | 1-113-920-11 | CERAMIC 0.0022uF 20% 250V               |        | C910     | 1-136-177-00 | CERAMIC 1uF 5% 50V                |        |
| △ C904   | 1-113-920-11 | CERAMIC 0.0022uF 20% 250V               |        | C911     | 1-162-294-31 | CERAMIC 0.001uF 10% 50V           |        |
| △ C905   | 1-113-920-11 | CERAMIC 0.0022uF 20% 250V               |        |          |              | < IC >                            |        |
|          |              | < CONNECTOR >                           |        | IC901    | 8-759-450-47 | IC BA05T                          |        |
| CN901    | 1-564-321-00 | PIN, CONNECTOR 2P                       |        | IC902    | 8-759-390-48 | IC uPC2406AHF                     |        |
|          |              | < INLET >                               |        |          |              | < TRANSISTOR >                    |        |
| △ IL901  | 1-251-234-11 | INLET, AC                               |        | Q901     | 8-729-209-15 | TRANSISTOR 2SD2012                |        |
|          |              | < COIL >                                |        | *****    |              |                                   |        |
| △ L901   | 1-424-485-11 | FILTER, LINE                            |        | *        | 1-664-483-11 | REM SW BOARD<br>*****             |        |
|          |              | < SWITCH >                              |        |          |              | < CONNECTOR >                     |        |
| △ S901   | 1-554-920-51 | SWITCH, PUSH (AC POWER) (1 KEY) (POWER) |        | * CN703  | 1-564-337-00 | PIN, CONNECTOR 3P                 |        |
| *****    |              |   |        |          |              | < RESISTOR >                      |        |
| *        | 1-654-393-11 | REC EN BOARD<br>*****                   |        | R728     | 1-249-429-11 | CARBON 10K 5% 1/4W                |        |
|          |              | < SWITCH >                              |        | R729     | 1-249-435-11 | CARBON 33K 5% 1/4W                |        |
| S901     | 1-572-459-11 | SWITCH, PUSH (REC PROOF/CASSETTE IN)    |        |          |              | < SWITCH >                        |        |
| *****    |              |   |        | S730     | 1-572-268-11 | SWITCH, SLIDE (REMOTE)            |        |
| *        | 1-664-485-11 | REC VOL BOARD<br>*****                  |        | *****    |              |                                   |        |
|          |              | < CONNECTOR >                           |        | *        | A-2007-645-A | REMOTE BOARD, COMPLETE<br>*****   |        |
| * CN306  | 1-564-519-11 | PLUG, CONNECTOR 4P                      |        |          |              | < CAPACITOR >                     |        |
|          |              | < RESISTOR >                            |        | C811     | 1-162-306-11 | CERAMIC 0.01uF 20% 16V            |        |
| R101     | 1-249-421-11 | CARBON 2.2K 5% 1/4W                     |        | C812     | 1-162-306-11 | CERAMIC 0.01uF 20% 16V            |        |
| R201     | 1-249-421-11 | CARBON 2.2K 5% 1/4W                     |        | C813     | 1-162-306-11 | CERAMIC 0.01uF 20% 16V            |        |
|          |              |   |        | C814     | 1-162-306-11 | CERAMIC 0.01uF 20% 16V            |        |
|          |              |   |        | C815     | 1-162-306-11 | CERAMIC 0.01uF 20% 16V            |        |
|          |              |   |        | C816     | 1-162-306-11 | CERAMIC 0.01uF 20% 16V            |        |
|          |              |   |        | C817     | 1-164-159-11 | CERAMIC 0.1uF 50V                 |        |

|  |  |
|--|--|
| The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified. | Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié. |
|--|--|

**REMOTE**

**RF AMP**

| Ref. No. | Part No.     | Description                           | Remark  |     |      | Ref. No. | Part No.     | Description                    | Remark   |     |       |
|----------|--------------|---------------------------------------|---------|-----|------|----------|--------------|--------------------------------|----------|-----|-------|
| C818     | 1-162-294-31 | CERAMIC                               | 0.001uF | 10% | 50V  | C2       | 1-163-019-00 | CERAMIC CHIP                   | 0.0068uF | 10% | 50V   |
| C819     | 1-162-294-31 | CERAMIC                               | 0.001uF | 10% | 50V  | C3       | 1-163-251-11 | CERAMIC CHIP                   | 100PF    | 5%  | 50V   |
|          |              | < CONNECTOR >                         |         |     |      | C4       | 1-107-682-11 | CERAMIC CHIP                   | 1uF      | 10% | 16V   |
| CN801    | 1-691-768-11 | PLUG (MICRO CONNECTOR) 6P             |         |     |      | C5       | 1-164-299-11 | CERAMIC CHIP                   | 0.22uF   | 10% | 25V   |
|          |              | < COMPOSITION CIRCUIT BLOCK >         |         |     |      | C6       | 1-164-004-11 | CERAMIC CHIP                   | 0.1uF    | 10% | 25V   |
| CP801    | 1-239-302-11 | COMPOSITION CIRCUIT BLOCK             |         |     |      | C7       | 1-163-009-11 | CERAMIC CHIP                   | 0.001uF  | 10% | 50V   |
|          |              | < IC >                                |         |     |      | C8       | 1-124-778-00 | ELECT CHIP                     | 22uF     | 20% | 6.3V  |
| IC802    | 8-759-916-20 | IC SN74HC14AN                         |         |     |      | C9       | 1-124-778-00 | ELECT CHIP                     | 22uF     | 20% | 6.3V  |
|          |              | < JACK >                              |         |     |      | C10      | 1-163-009-11 | CERAMIC CHIP                   | 0.001uF  | 10% | 50V   |
| J803     | 1-770-355-11 | CONNECTOR (DIN) 8P (REMOTE)           |         |     |      | C11      | 1-164-004-11 | CERAMIC CHIP                   | 0.1uF    | 10% | 25V   |
| J804     | 1-507-743-00 | JACK, STEREO MINIATURE (REMOTE 2)     |         |     |      | C12      | 1-164-299-11 | CERAMIC CHIP                   | 0.22uF   | 10% | 25V   |
|          |              | < TRANSISTOR >                        |         |     |      | C13      | 1-107-682-11 | CERAMIC CHIP                   | 1uF      | 10% | 16V   |
| Q801     | 8-729-900-80 | TRANSISTOR DTC114ES                   |         |     |      | C14      | 1-163-251-11 | CERAMIC CHIP                   | 100PF    | 5%  | 50V   |
| Q802     | 8-729-900-80 | TRANSISTOR DTC114ES                   |         |     |      | C15      | 1-124-778-00 | ELECT CHIP                     | 22uF     | 20% | 6.3V  |
| Q803     | 8-729-900-80 | TRANSISTOR DTC114ES                   |         |     |      | C16      | 1-163-038-91 | CERAMIC CHIP                   | 0.1uF    |     | 25V   |
| Q804     | 8-729-900-80 | TRANSISTOR DTC114ES                   |         |     |      | C17      | 1-163-001-11 | CERAMIC CHIP                   | 220PF    | 10% | 50V   |
| Q805     | 8-729-900-80 | TRANSISTOR DTC114ES                   |         |     |      | C18      | 1-163-251-11 | CERAMIC CHIP                   | 100PF    | 5%  | 50V   |
| Q806     | 8-729-900-80 | TRANSISTOR DTC114ES                   |         |     |      | C19      | 1-163-001-11 | CERAMIC CHIP                   | 220PF    | 10% | 50V   |
| Q807     | 8-729-422-57 | TRANSISTOR UN4111                     |         |     |      | C20      | 1-164-182-11 | CERAMIC CHIP                   | 0.0033uF | 10% | 50V   |
| Q808     | 8-729-422-57 | TRANSISTOR UN4111                     |         |     |      | C21      | 1-163-005-11 | CERAMIC CHIP                   | 470PF    | 10% | 50V   |
|          |              | < RESISTOR >                          |         |     |      | C22      | 1-126-603-11 | ELECT CHIP                     | 4.7uF    | 20% | 35V   |
| R811     | 1-249-417-11 | CARBON                                | 1K      | 5%  | 1/4W | C23      | 1-163-251-11 | CERAMIC CHIP                   | 100PF    | 5%  | 50V   |
| R812     | 1-249-417-11 | CARBON                                | 1K      | 5%  | 1/4W | C24      | 1-163-038-91 | CERAMIC CHIP                   | 0.1uF    |     | 25V   |
| R813     | 1-249-417-11 | CARBON                                | 1K      | 5%  | 1/4W | C25      | 1-124-778-00 | ELECT CHIP                     | 22uF     | 20% | 6.3V  |
| R814     | 1-249-417-11 | CARBON                                | 1K      | 5%  | 1/4W | C26      | 1-163-038-91 | CERAMIC CHIP                   | 0.1uF    |     | 25V   |
| R815     | 1-249-417-11 | CARBON                                | 1K      | 5%  | 1/4W | C27      | 1-107-682-11 | CERAMIC CHIP                   | 1uF      | 10% | 16V   |
| R816     | 1-249-417-11 | CARBON                                | 1K      | 5%  | 1/4W | C28      | 1-164-505-11 | CERAMIC CHIP                   | 2.2uF    |     | 16V   |
| R817     | 1-249-419-11 | CARBON                                | 1.5K    | 5%  | 1/4W |          |              | < CONNECTOR >                  |          |     |       |
| R818     | 1-247-843-11 | CARBON                                | 3.3K    | 5%  | 1/4W | * CN51   | 1-566-207-11 | PIN, CONNECTOR (PC BOARD) 14P  |          |     |       |
| R819     | 1-249-425-11 | CARBON                                | 4.7K    | 5%  | 1/4W | * CN52   | 1-564-720-11 | PIN, CONNECTOR (SMALL TYPE) 4P |          |     |       |
| R820     | 1-249-429-11 | CARBON                                | 10K     | 5%  | 1/4W |          |              | < IC >                         |          |     |       |
| R821     | 1-249-435-11 | CARBON                                | 33K     | 5%  | 1/4W | IC1      | 8-752-039-01 | IC CXA1364R                    |          |     |       |
| R822     | 1-249-409-11 | CARBON                                | 220     | 5%  | 1/4W |          |              | < COIL >                       |          |     |       |
| R823     | 1-249-409-11 | CARBON                                | 220     | 5%  | 1/4W | L1       | 1-408-781-00 | INDUCTOR CHIP                  | 22uH     |     |       |
|          |              | *****                                 |         |     |      | L2       | 1-408-789-21 | INDUCTOR CHIP                  | 100uH    |     |       |
|          |              | * A-2006-455-A RF AMP BOARD, COMPLETE |         |     |      | L3       | 1-408-781-00 | INDUCTOR CHIP                  | 22uH     |     |       |
|          |              | *****                                 |         |     |      |          |              | < RESISTOR >                   |          |     |       |
|          |              | < CAPACITOR >                         |         |     |      | R1       | 1-216-082-00 | METAL GLAZE                    | 24K      | 5%  | 1/10W |
| C1       | 1-124-778-00 | ELECT CHIP                            | 22uF    | 20% | 6.3V | R2       | 1-216-082-00 | METAL GLAZE                    | 24K      | 5%  | 1/10W |
|          |              |                                       |         |     |      | R3       | 1-216-066-00 | METAL CHIP                     | 5.1K     | 5%  | 1/10W |
|          |              |                                       |         |     |      | R4       | 1-216-066-00 | METAL CHIP                     | 5.1K     | 5%  | 1/10W |
|          |              |                                       |         |     |      | R5       | 1-216-077-00 | METAL CHIP                     | 15K      | 5%  | 1/10W |
|          |              |                                       |         |     |      | R6       | 1-216-077-00 | METAL CHIP                     | 15K      | 5%  | 1/10W |
|          |              |                                       |         |     |      | R7       | 1-216-077-00 | METAL CHIP                     | 15K      | 5%  | 1/10W |



RF AMP
S END
SHUTTLE
SW
T END
THICK
UNBAL

| Ref. No.              | Part No.     | Description                              | Remark |    |       |
|-----------------------|--------------|--|--------|----|-------|
| R8                    | 1-216-079-00 | METAL CHIP                               | 18K    | 5% | 1/10W |
| R9                    | 1-216-075-00 | METAL CHIP                               | 12K    | 5% | 1/10W |
| R10                   | 1-216-079-00 | METAL CHIP                               | 18K    | 5% | 1/10W |
|                       |              |  |        |    |       |
| R11                   | 1-216-077-00 | METAL CHIP                               | 15K    | 5% | 1/10W |
| R12                   | 1-216-077-00 | METAL CHIP                               | 15K    | 5% | 1/10W |
| R13                   | 1-216-077-00 | METAL CHIP                               | 15K    | 5% | 1/10W |
| R14                   | 1-216-081-00 | METAL CHIP                               | 22K    | 5% | 1/10W |
| R15                   | 1-216-085-00 | METAL CHIP                               | 33K    | 5% | 1/10W |
|                       |              |  |        |    |       |
| R16                   | 1-216-089-91 | METAL GLAZE                              | 47K    | 5% | 1/10W |
| R17                   | 1-216-080-00 | METAL CHIP                               | 20K    | 5% | 1/10W |
| R18                   | 1-216-073-00 | METAL CHIP                               | 10K    | 5% | 1/10W |
| < VARIABLE RESISTOR > |              |  |        |    |       |
|                       |              |  |        |    |       |
| RV1                   | 1-238-181-11 | RES, ADJ, CERMET 4.7K                    |        |    |       |
| RV2                   | 1-238-181-11 | RES, ADJ, CERMET 4.7K                    |        |    |       |
| *****                 |              |  |        |    |       |
| *                     | 1-654-392-11 | S END BOARD                              | *****  |    |       |
| < TRANSISTOR >        |              |  |        |    |       |
|                       |              |  |        |    |       |
| Q950                  | 1-808-957-11 | TRANSISTOR PHOTO SENSOR (S-END)          | *****  |    |       |
| *****                 |              |  |        |    |       |
| *                     | 1-664-487-11 | SHUTTLE BOARD                            | *****  |    |       |
| < RESISTOR >          |              |  |        |    |       |
|                       |              |  |        |    |       |
| R757                  | 1-249-413-11 | CARBON                                   | 470    | 5% | 1/4W  |
| R758                  | 1-249-413-11 | CARBON                                   | 470    | 5% | 1/4W  |
| R759                  | 1-249-413-11 | CARBON                                   | 470    | 5% | 1/4W  |
| R760                  | 1-249-413-11 | CARBON                                   | 470    | 5% | 1/4W  |
| R761                  | 1-249-413-11 | CARBON                                   | 470    | 5% | 1/4W  |
|                       |              |  |        |    |       |
| R762                  | 1-249-413-11 | CARBON                                   | 470    | 5% | 1/4W  |
| < SWITCH >            |              |  |        |    |       |
|                       |              |  |        |    |       |
| S736                  | 1-692-722-11 | SWITCH, ROTARY (ENCODER)                 |        |    |       |
| (SHUTTLE  DATA)       |              |  |        |    |       |
| *****                 |              |  |        |    |       |
| *                     | 1-655-916-11 | SW BOARD                                 | *****  |    |       |
| < SWITCH >            |              |  |        |    |       |
|                       |              |  |        |    |       |
| S1                    | 1-571-958-11 | SWITCH, PUSH (1 KEY)(CASSETTE TABLE OUT) |        |    |       |
| S2                    | 1-571-958-11 | SWITCH, PUSH (1 KEY)(CASSETTE TABLE IN)  |        |    |       |
| *****                 |              |  |        |    |       |
| *                     | 1-654-391-11 | T END BOARD                              | *****  |    |       |

| Ref. No.       | Part No.     | Description                            | Remark |     |      |
|----------------|--------------|--|--------|-----|------|
| < TRANSISTOR > |              |  |        |     |      |
|                |              |  |        |     |      |
| Q951           | 1-808-957-11 | TRANSISTOR PHOTO SENSOR (T END)        | *****  |     |      |
| *****          |              |  |        |     |      |
| *              | 1-654-394-12 | THICK BOARD                            | *****  |     |      |
| < SWITCH >     |              |  |        |     |      |
|                |              |  |        |     |      |
| S904           | 1-572-458-11 | SWITCH, PUSH (THICK)                   | *****  |     |      |
| *****          |              |  |        |     |      |
| *              | A-2007-646-A | UNBAL BOARD, COMPLETE                  | *****  |     |      |
| *****          |              |  |        |     |      |
| < CAPACITOR >  |              |  |        |     |      |
|                |              |  |        |     |      |
| C148           | 1-126-023-11 | ELECT                                  | 100uF  | 20% | 25V  |
| C149           | 1-107-597-11 | CERAMIC                                | 22PF   | 10% | 500V |
| C248           | 1-126-023-11 | ELECT                                  | 100uF  | 20% | 25V  |
| C249           | 1-107-597-11 | CERAMIC                                | 22PF   | 10% | 500V |
| C380           | 1-126-023-11 | ELECT                                  | 100uF  | 20% | 25V  |
|                |              |  |        |     |      |
| C381           | 1-164-159-11 | CERAMIC                                | 0.1uF  |     | 50V  |
| C382           | 1-164-159-11 | CERAMIC                                | 0.1uF  |     | 50V  |
| < CONNECTOR >  |              |  |        |     |      |
|                |              |  |        |     |      |
| CN314          | 1-691-766-21 | PLUG (MICRO CONNECTOR) 4P              |        |     |      |
| CN315          | 1-691-766-31 | PLUG (MICRO CONNECTOR) 4P              |        |     |      |
| CN316          | 1-691-766-11 | PLUG (MICRO CONNECTOR) 4P              |        |     |      |
| CN317          | 1-691-766-41 | PLUG (MICRO CONNECTOR) 4P              |        |     |      |
| CN318          | 1-691-765-21 | PLUG (MICRO CONNECTOR) 3P              |        |     |      |
|                |              |  |        |     |      |
| CN319          | 1-564-505-11 | PLUG, CONNECTOR 2P                     |        |     |      |
| < DIODE >      |              |  |        |     |      |
|                |              |  |        |     |      |
| D316           | 8-719-987-63 | DIODE 1N4148M                          |        |     |      |
| < IC >         |              |  |        |     |      |
|                |              |  |        |     |      |
| IC326          | 8-759-981-96 | IC RC4560D                             |        |     |      |
| < JACK >       |              |  |        |     |      |
|                |              |  |        |     |      |
| J307           | 1-770-163-21 | JACK, PIN 4P (ANALOG UNBALANCE IN/OUT) |        |     |      |
| < TRANSISTOR > |              |  |        |     |      |
|                |              |  |        |     |      |
| Q316           | 8-729-900-80 | TRANSISTOR DTC114ES                    |        |     |      |

**PCM-R500**

**UNBAL**

| Ref. No. | Part No.     | Description                            |      |    |      | Remark | Ref. No. | Part No.     | Description                    |  |  |  | Remark |
|----------|--------------|--|------|----|------|--------|----------|--------------|--------------------------------|--|--|--|--------|
|          |              | < RESISTOR >                           |      |    |      |        |          |              |                                |  |  |  |        |
| R174     | 1-247-887-00 | CARBON                                 | 220K | 5% | 1/4W |        | #12      | 7-627-556-17 | SCREW,PRECISION +P 2.6X3 TYPE1 |  |  |  |        |
| R175     | 1-249-431-11 | CARBON                                 | 15K  | 5% | 1/4W |        | #13      | 7-621-775-08 | SCREW +B 2.6X3                 |  |  |  |        |
| R176     | 1-249-437-11 | CARBON                                 | 47K  | 5% | 1/4W |        | #14      | 7-627-553-67 | SCREW,PRECISION +P 2X5         |  |  |  |        |
| R177     | 1-249-437-11 | CARBON                                 | 47K  | 5% | 1/4W |        | #15      | 7-685-862-09 | SCREW+BVTT 2.6X6 (S)           |  |  |  |        |
| R178     | 1-249-437-11 | CARBON                                 | 47K  | 5% | 1/4W |        | #16      | 7-621-772-30 | SCREW +B 2X6                   |  |  |  |        |
| R179     | 1-247-807-31 | CARBON                                 | 100  | 5% | 1/4W |        | #17      | 7-627-852-48 | PRECISION SCREW +P1.7X3.5TYPE3 |  |  |  |        |
| R180     | 1-249-415-11 | CARBON                                 | 680  | 5% | 1/4W |        | #18      | 7-627-552-47 | SCREW,PRECISION +P 1.7X4       |  |  |  |        |
| R274     | 1-247-887-00 | CARBON                                 | 220K | 5% | 1/4W |        | #19      | 7-685-102-19 | SCREW +P 2X4 TYPE2 NON-SLIT    |  |  |  |        |
| R275     | 1-249-431-11 | CARBON                                 | 15K  | 5% | 1/4W |        | #20      | 7-627-553-38 | SCREW,PRECISION +P 2X3         |  |  |  |        |
| R276     | 1-249-437-11 | CARBON                                 | 47K  | 5% | 1/4W |        | #21      | 7-685-133-19 | SCREW +BTP 2.6X6 TYPE2 N-S     |  |  |  |        |
| R277     | 1-249-437-11 | CARBON                                 | 47K  | 5% | 1/4W |        | #22      | 7-628-253-00 | SCREW +PS 2X4                  |  |  |  |        |
| R278     | 1-249-437-11 | CARBON                                 | 47K  | 5% | 1/4W |        | #23      | 7-685-871-01 | SCREW +BVTT 3X6 (S)            |  |  |  |        |
| R279     | 1-247-807-31 | CARBON                                 | 100  | 5% | 1/4W |        | #24      | 7-685-645-79 | SCREW +BVTP 3X6 TYPE2 IT-3     |  |  |  |        |
| R280     | 1-249-415-11 | CARBON                                 | 680  | 5% | 1/4W |        | #25      | 7-627-553-27 | SCREW, PRECISION +P2X2.5       |  |  |  |        |
|          |              | *****                                  |      |    |      |        |          |              |                                |  |  |  |        |
|          |              | ACCESSORIES & PACKING MATERIALS        |      |    |      |        |          |              |                                |  |  |  |        |
|          |              | *****                                  |      |    |      |        |          |              |                                |  |  |  |        |
|          |              | < RELAY >                              |      |    |      |        |          |              |                                |  |  |  |        |
| RY305    | 1-515-726-11 | RELAY                                  |      |    |      |        |          |              |                                |  |  |  |        |
|          |              | *****                                  |      |    |      |        |          |              |                                |  |  |  |        |
|          |              | MISCELLANEOUS                          |      |    |      |        |          |              |                                |  |  |  |        |
|          |              | *****                                  |      |    |      |        |          |              |                                |  |  |  |        |
| 58       | 1-769-541-11 | WIRE (FLAT TYPE) (17 CORE)             |      |    |      |        |          |              |                                |  |  |  |        |
| 113      | 1-769-542-11 | WIRE (FLAT TYPE) (31 CORE)             |      |    |      |        |          |              |                                |  |  |  |        |
| M901     | A-2003-660-A | MOTER ASSY (LOADING)                   |      |    |      |        |          |              |                                |  |  |  |        |
| M902     | 8-835-306-01 | MOTOR,DC U-17A (CAPSTAN)               |      |    |      |        |          |              |                                |  |  |  |        |
| M903     | 8-835-205-01 | MOTOR,DC U-2A (REEL) (including PM901) |      |    |      |        |          |              |                                |  |  |  |        |
| M904     | 8-848-626-11 | DRUM ASSY DOU-03D                      |      |    |      |        |          |              |                                |  |  |  |        |
| M905     | X-3370-655-1 | MOTER ASSY (CASSETTE COMPARTMENT)      |      |    |      |        |          |              |                                |  |  |  |        |
| PM902    | 1-454-522-11 | SOLENOID, PLUNGER                      |      |    |      |        |          |              |                                |  |  |  |        |
| △ T901   | 1-431-064-11 | TRANSFORMER, POWER (US, Canadian)      |      |    |      |        |          |              |                                |  |  |  |        |
| △ T901   | 1-431-065-11 | TRANSFORMER, POWER (AEP)               |      |    |      |        |          |              |                                |  |  |  |        |
|          |              | *****                                  |      |    |      |        |          |              |                                |  |  |  |        |
|          |              | *****                                  |      |    |      |        |          |              |                                |  |  |  |        |
|          |              | HARDWARE LIST                          |      |    |      |        |          |              |                                |  |  |  |        |
|          |              | *****                                  |      |    |      |        |          |              |                                |  |  |  |        |
| #1       | 7-685-872-09 | SCREW +BVTT 3X8 (S)                    |      |    |      |        |          |              |                                |  |  |  |        |
| #2       | 7-685-872-09 | SCREW +BVTT 3X8 (S)                    |      |    |      |        |          |              |                                |  |  |  |        |
| #3       | 7-685-646-79 | SCREW +BVTP 3X8 TYPE2 N-S              |      |    |      |        |          |              |                                |  |  |  |        |
| #4       | 7-685-881-01 | SCREW +BVTT 4X8 (S)                    |      |    |      |        |          |              |                                |  |  |  |        |
| #5       | 7-682-660-09 | SCREW +PS 4X6                          |      |    |      |        |          |              |                                |  |  |  |        |
| #6       | 7-685-660-29 | SCREW +BVTP 4X10 TYPE2 SLIT            |      |    |      |        |          |              |                                |  |  |  |        |
| #7       | 7-621-772-18 | SCREW +B 2X4                           |      |    |      |        |          |              |                                |  |  |  |        |
| #8       | 7-682-550-09 | SCREW +B 3X12                          |      |    |      |        |          |              |                                |  |  |  |        |
| #9       | 7-621-772-20 | SCREW +B 2X5                           |      |    |      |        |          |              |                                |  |  |  |        |
| #10      | 7-621-773-86 | SCREW +B 2.6X4                         |      |    |      |        |          |              |                                |  |  |  |        |
| #11      | 7-621-772-08 | SCREW +B 2X3                           |      |    |      |        |          |              |                                |  |  |  |        |

|   |   |
|---|---|
| <p>The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.</p> | <p>Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p> |
|---|---|

## Printing Method for Large Sized Documents Such As Circuit Diagrams

Printing the page that exceeds A4-size two pages (or letter size) is possible by specifying the print range. (Acrobat Reader Version 4.0 or later)

1. The enlarged print is made, if a smaller range than A4 size is specified and the A4 size is selected as a print paper.
2. Almost real sized print is made, if the range is specified, meeting the print paper size.
3. The reduced print is made, if a larger range than the print paper size is specified.

### Printing by Specifying a Range


In printing out the drawings such as a schematic diagram and a printed wiring board larger than the printed paper size, they can be printed by specifying the range. (Acrobat Reader Version 4.0 or later)

1. Display the page to be printed.
2. From the File menu, select [Page Setup] and set the paper size.
3. From the Command bar, select [Graphic Select Tool].

(Keep pressing  , select  )



4. Dragging the cursor, enclose the range on the page to be printed.
5. From the File menu, select [Print] and make sure that the [Selected Graphic] is already checked. Also, if [Fit to page] is checked, the selected range is enlarged or reduced (and rotated as necessary) meeting the paper size.

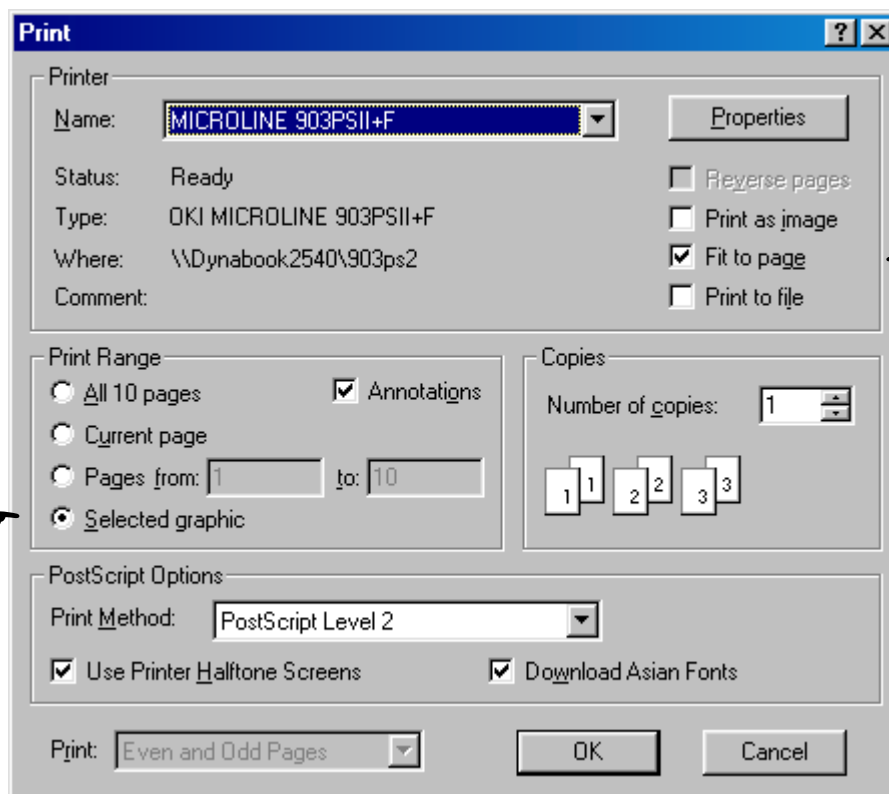

6. To cancel the printed range, click an arbitrary position on the screen.

