

PS-515

AEP Model
E Model



FULL AUTOMATIC STEREO TURNTABLE SYSTEM

SPECIFICATIONS

GENERAL

Power Requirements:	120 or 220V ac adjustable, 50/60 Hz (E model) 110, 120, 220 or 240V ac adjustable, 50/60 Hz (AEP model)
Power Consumption:	8 W
Dimensions:	Approx. 450(w) x 135(h) x 385(d) mm 17 3/4(w) x 5 3/8(h) x 15 1/4(d) inches Including projecting parts and controls
Weight:	Approx. 8 kg, 17 lb 10 oz (net) Approx. 9.6 kg, 21 lb 3 oz (in shipping carton)

TURNTABLE

Platter:	32.6 cm (12 7/8 inches), aluminum-alloy diecasting
Drive System:	Direct drive
Speeds:	33 1/3, 45 rpm
Speed Control Range:	±3%
Wow and Flutter:	0.03% (WRMS) ±0.045% (DIN)
S/N Ratio:	70 dB (DIN-B)

TONEARM


Type:	Statically balanced, universal
Arm Length:	300 mm (11 3/4 inches), overall 216.5 mm (8 1/2 inches), pivot-to-stylus
Overhang:	16.5 mm (2 1/32 inches)
Tracking Error:	+3°, -1°
Tracking-force Adjustment Range:	0 - 3 g
Shell Weight:	7.5 g
Cartridge Weight Range:	4 - 12 g

CARTRIDGE VL-15G (E model)

Type:	Moving magnet type
Frequency Response:	10 Hz - 30 kHz
Channel Separation:	25 dB at 1 kHz
Output Voltage:	4 mV at 1 kHz, 5 cm/sec, 45°
Load Impedance:	50 kΩ
Tracking Force:	1.2 - 2.5 g (1.7 g recommended)
Stylus:	Sony ND-15G (Conical 0.6 mil diamond)
Weight:	5.2 g

0 dB = 0.775 V

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK  ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

- Continued on page 2 -

SONY®

SERVICE MANUAL

PS-515

CARTRIDGE VL-34G (AEP model)

Type: Moving magnet type
Frequency Response: 10 Hz – 30 kHz
Channel Separation: 25 dB at 1 kHz
Output Voltage: 3 mV at 1 kHz, 5 cm/sec, 45°

Load Impedance: 50 k Ω
Tracking Force: 1.5 – 2.5 g (2.0 g recommended)
Stylus: Sony ND-134G (conical 0.6 mil diamond)
Weight: 5.5 g

MODEL IDENTIFICATION

– Specification Label –

E model


SONY	STEREO TURNTABLE SYSTEM
	MODEL NO, PS-515
	AC 110, 120, 220, 240V ~50/60Hz 8W
	SERIAL NO, _____
MADE IN JAPAN	

AEP model

SONY	STEREO TURNTABLE SYSTEM
	MODEL NO, PS-515
	AC 120, 220V ~50/60Hz 8W
	SERIAL NO, _____
MADE IN JAPAN	

SECTION 1 OUTLINE


1-1. BLOCK DIAGRAM

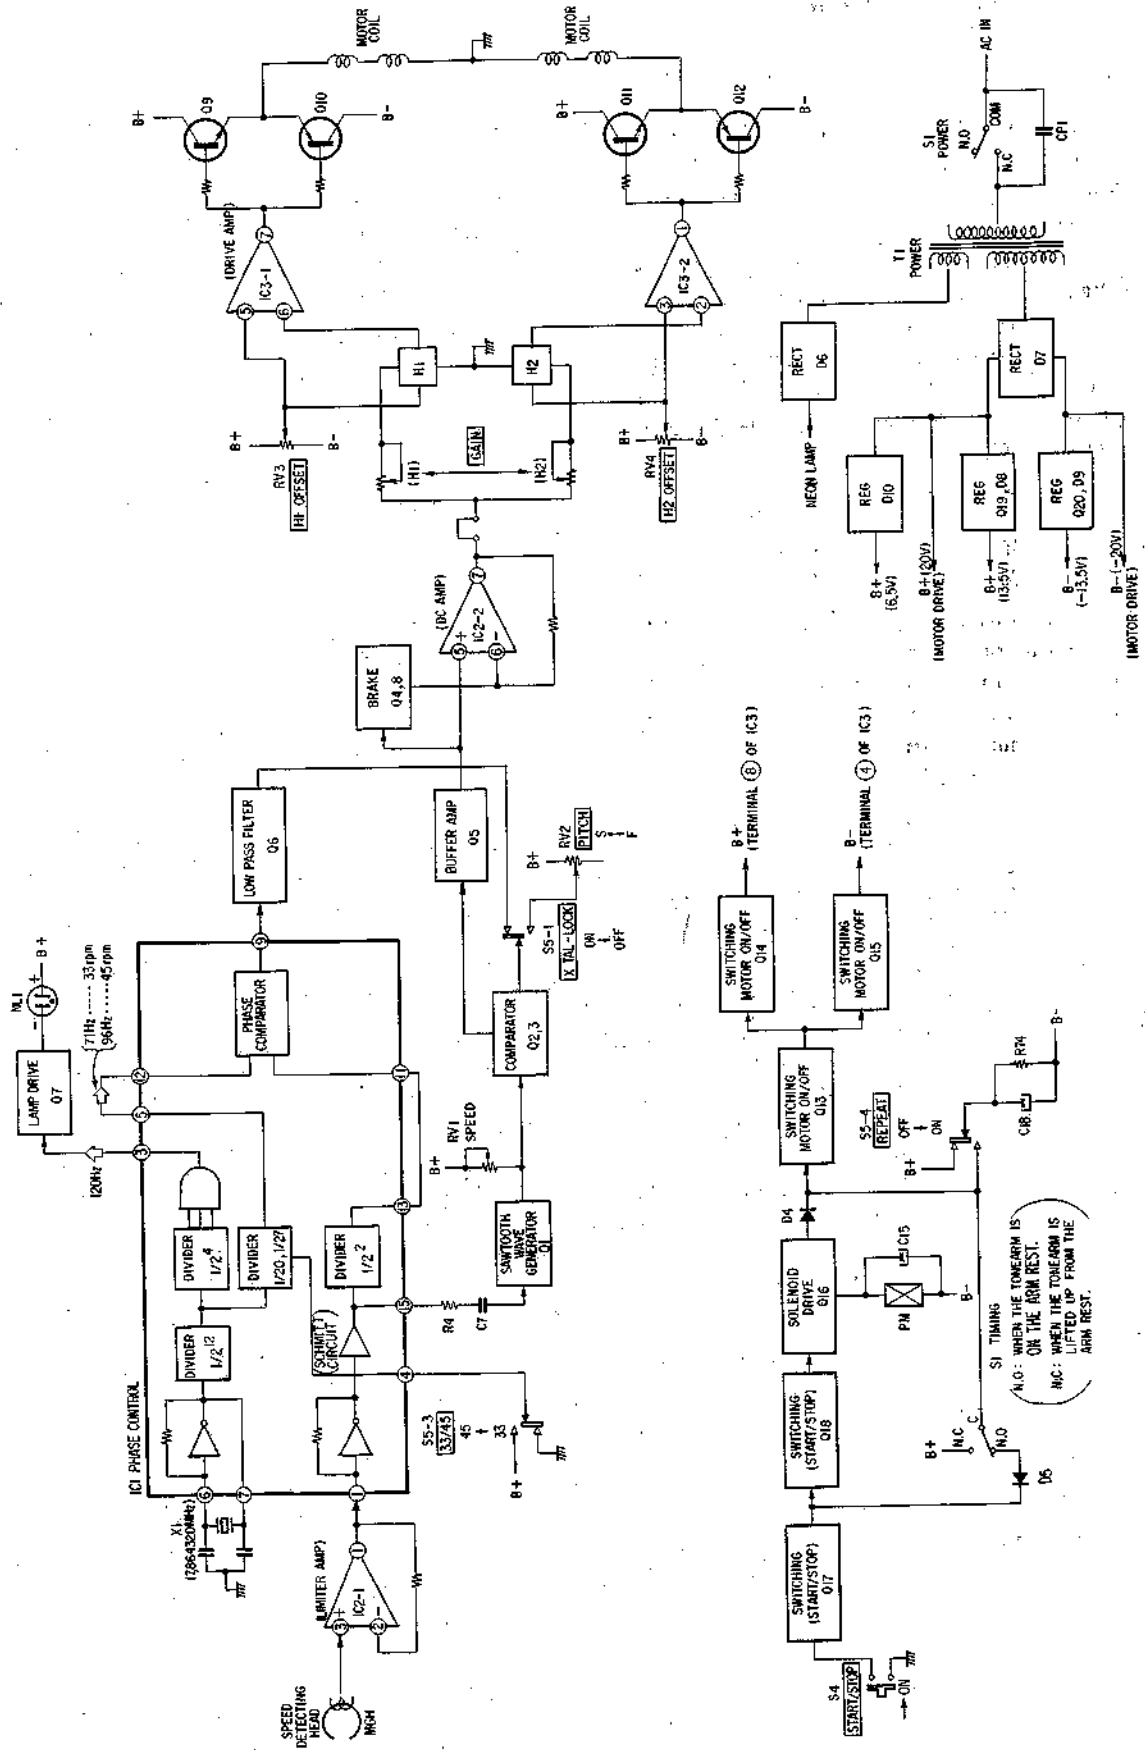

1-2. ELECTRICAL DESCRIPTION

Operation When the START/STOP Button is Pushed

1. When the START/STOP button (S4) is pushed, the current temporarily flows via route ①, turning on Q17 (route ②). Q18 turns on at the same time (route ③).
2. When the current flows via route ④, the bias voltage is applied to Q16, turning it on (route ⑤). At the same time Q13 turns on (route ⑥). This provides bias voltage to Q14 and Q15 by (route ⑦), which then conduct. The power supply is fed to IC3 (route ⑧), and the turntable starts rotating.
3. The solenoid is actuated via route ④ and pushes out the drive-gear pawl. The drive gear rotates half a turn by the rotation of the turntable (for lead-in motion).
4. When the drive gear rotates and starts the lead-in motion, the timing switch (S1) changes to the N.C. position and the current flows via route ⑦ to keep Q13 conducting. The turntable continues to turn.
5. When the tonearm enters the out-of record groove, the clutch lever is pushed by the arm lever, pushing out the drive-gear pawl. (When the START/STOP button (S4) is pushed while playing, the solenoid is actuated via route ④ and the drive-gear pawl is pushed out.)
6. The drive gear rotates half a turn by the drive-gear pawl (for return motion) as the turntable rotates.
7. The timing switch (S1) changes the N.O. position by the mechanism when the tonearm completes the return motion. When the REPEAT switch (S5-4) is off, Q13 is turned off because no current flows via route ⑦. Provided with no bias, Q14 and Q15 do not conduct. Thus the power supply to IC3 is cut out and the turntable stops rotating.

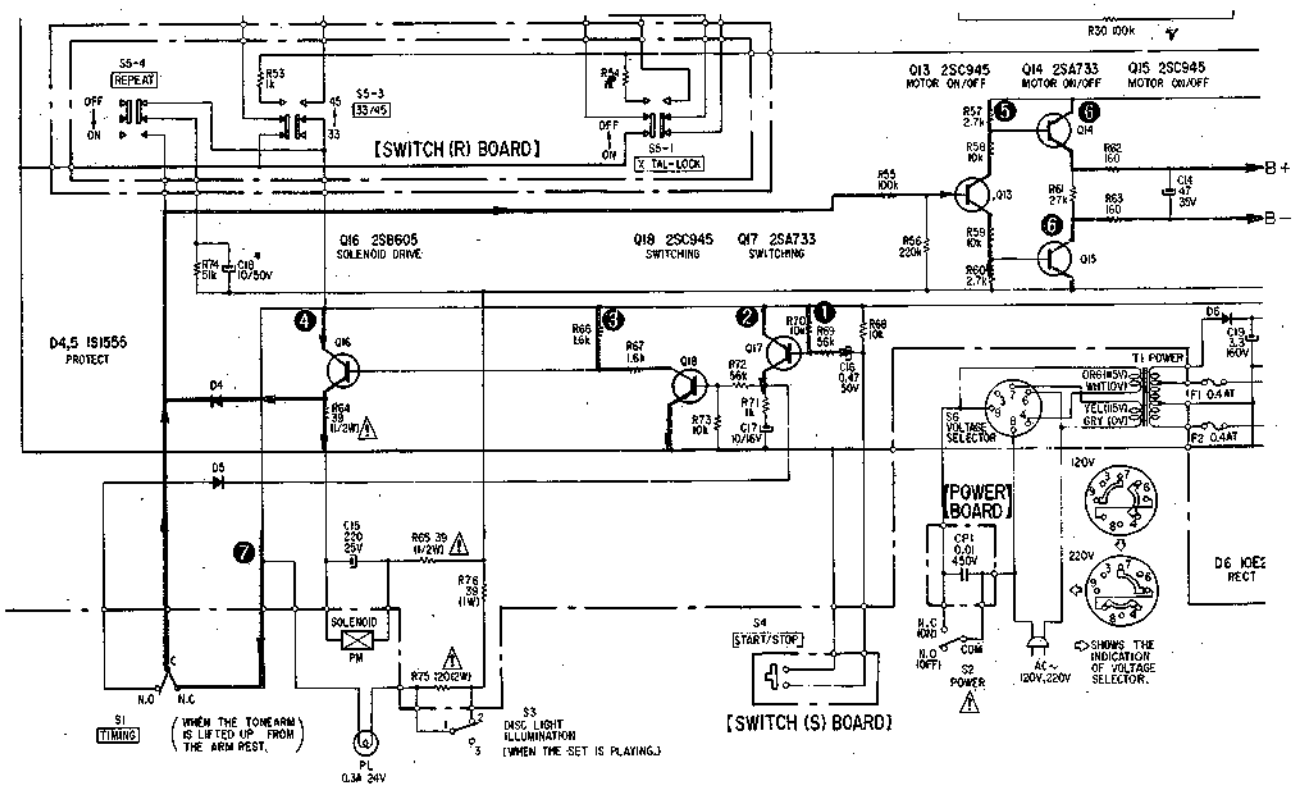


Operation When the REPEAT Switch is ON

- 1-6. The same as when the START/STOP button is pushed.
7. C18 is charged via route 7 while the tonearm is on the arm rest (when S1 is in the N.C. position).
8. When the tonearm ends the return motion, the timing switch (S1) changes to N.O. position

by the mechanism. Q13 keeps conducting at the same time by the discharge (route 8) of C18. The turntable continues to rotate. Q18 and Q16 turn on via route 9, thus actuating the solenoid. (route 9).

9. The drive gear rotates half a turn by the rotation of the turntable (for lead-in motion).

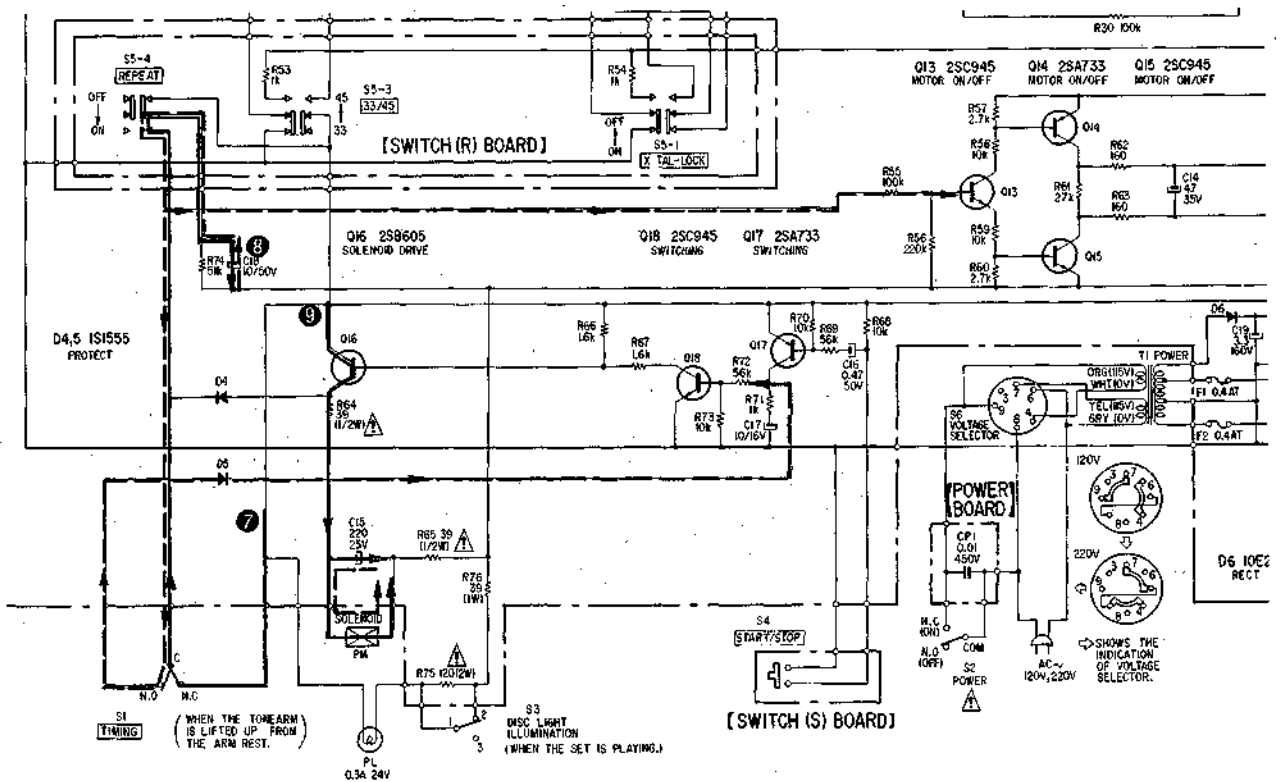


SECTION 2 DISASSEMBLY

REPAIR CAUTION


- Platter handling

backside of platter

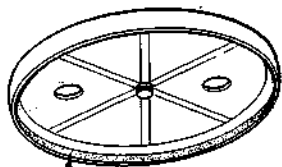

Be sure not to spoil the magnetic coating. (dark brown color).

- Platter installation

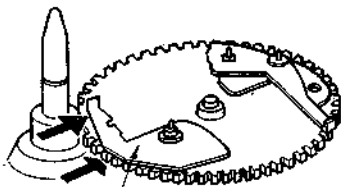


Be sure that the metal plate does not protrude outside the white gear.


- Do not connect the power cord and remove the platter.




Note:
Follow the disassembly procedure in the numerical order given.

BOTTOM COVER REMOVAL

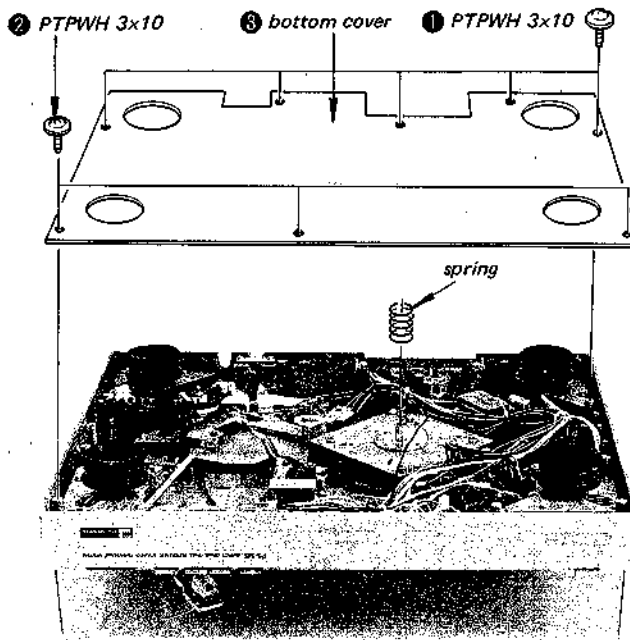

SERVO AMP CIRCUIT BOARD REMOVAL

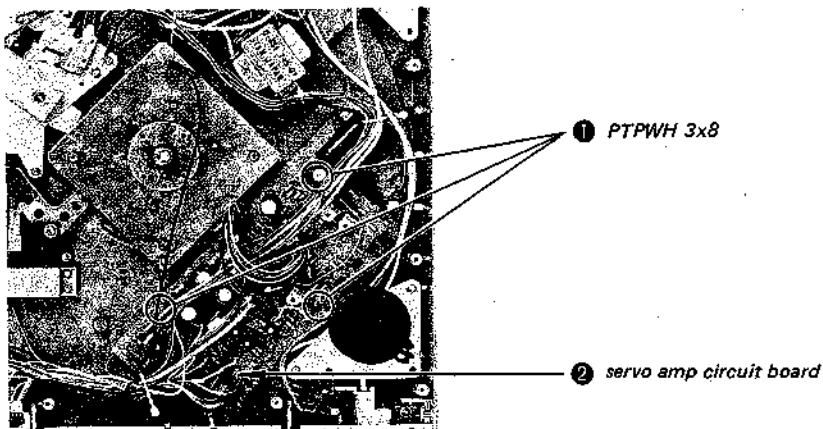

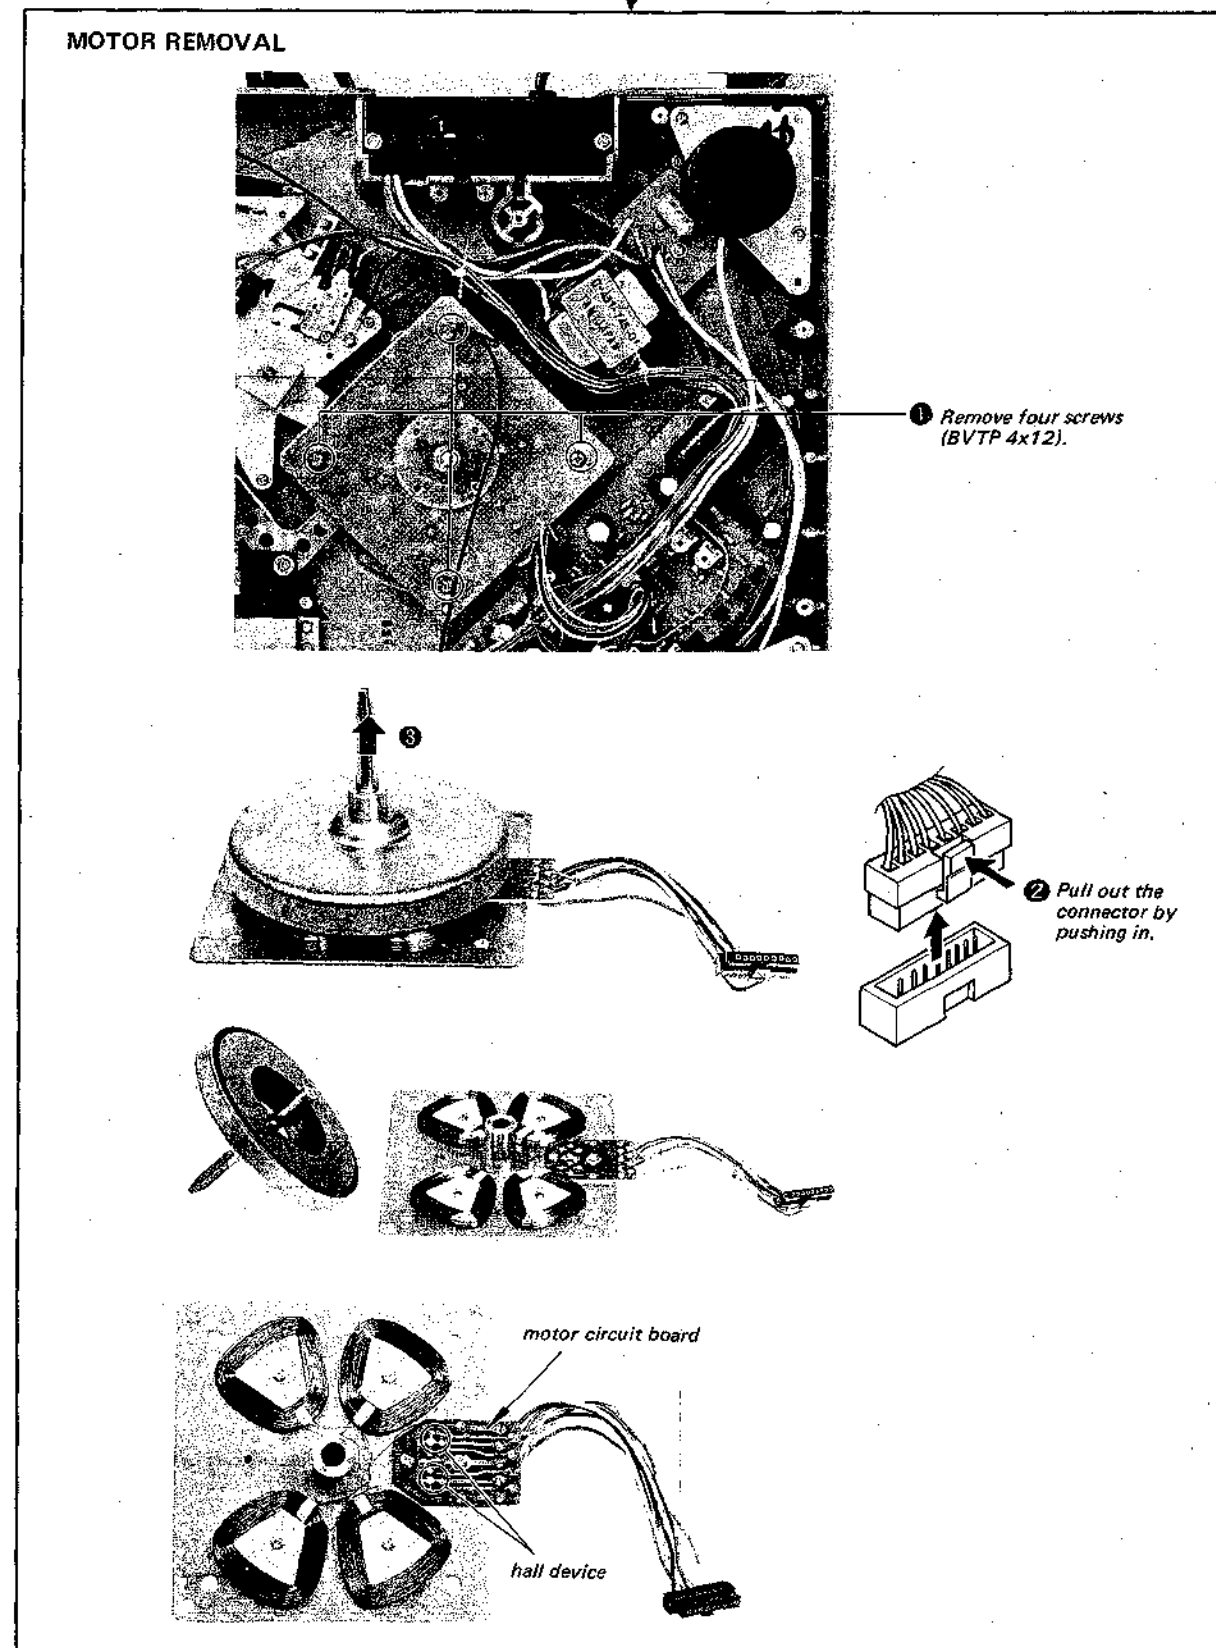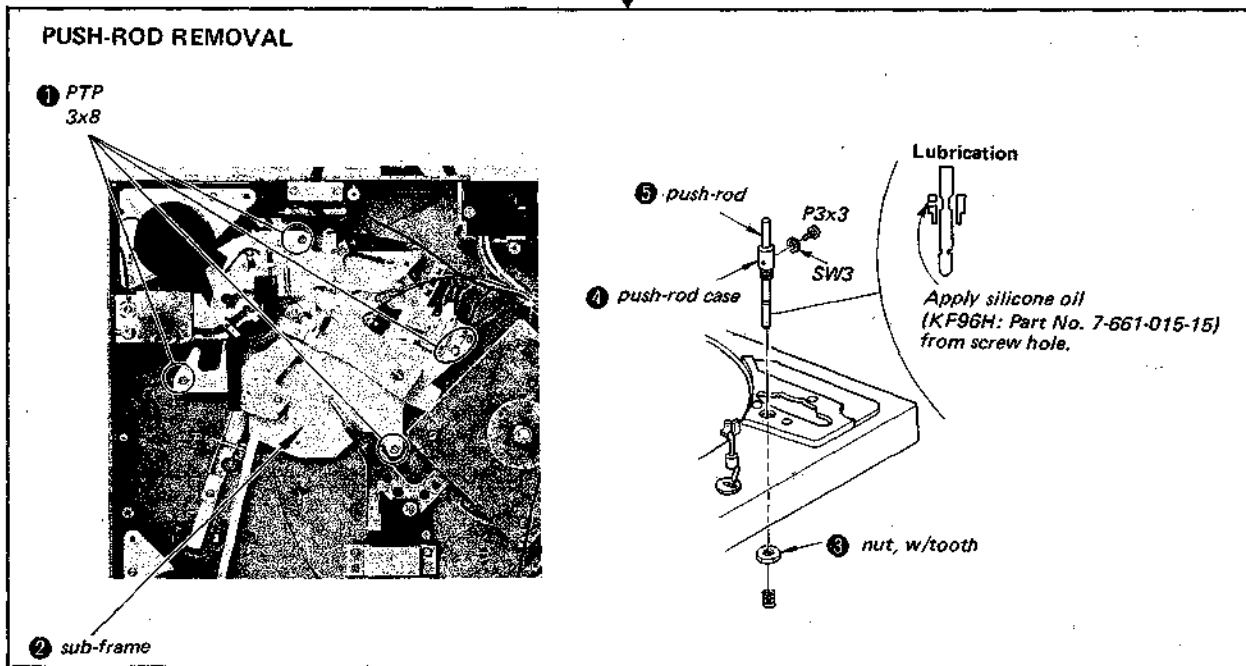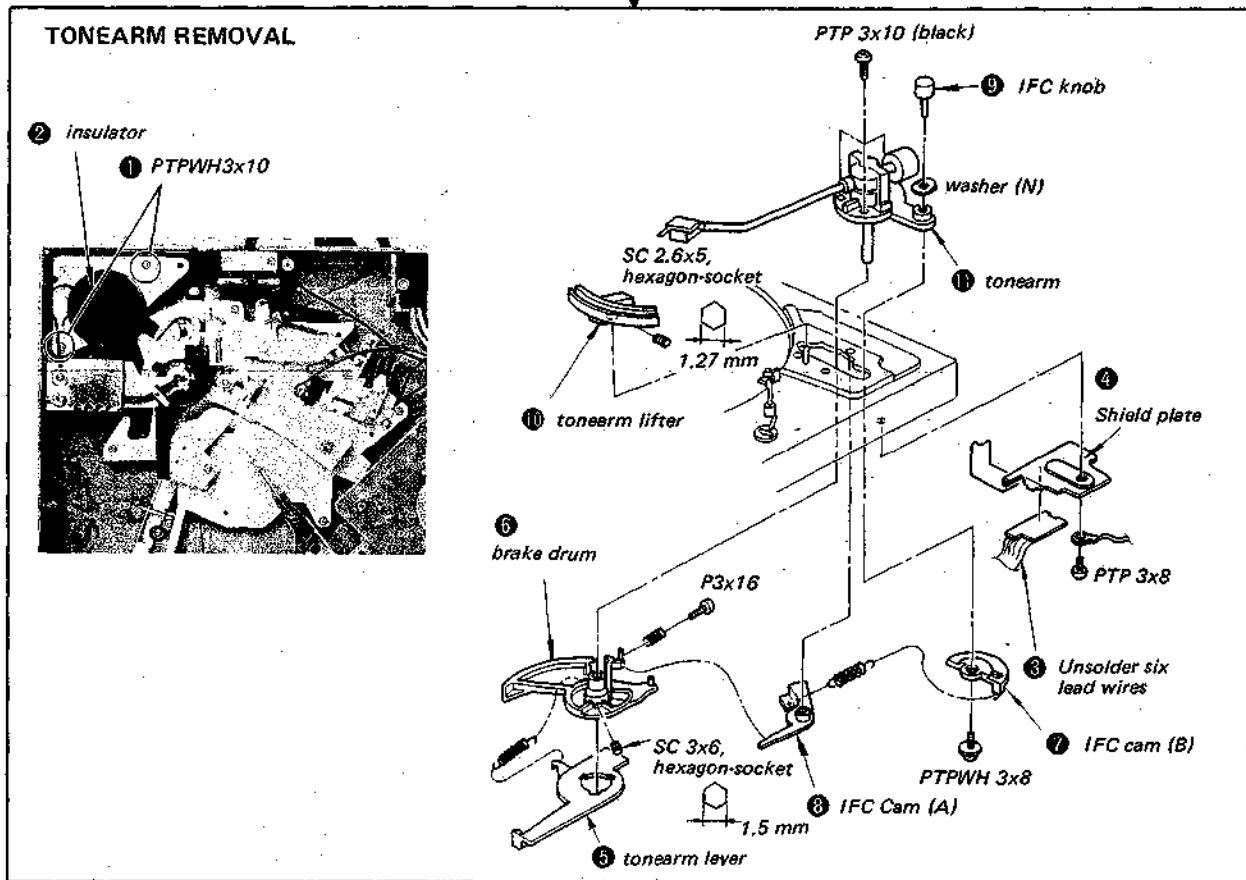

SECTION 3
ADJUSTMENTS


3-1. MECHANICAL ADJUSTMENT

CARTRIDGE REPLACEMENT



• AEP Model

CARTRIDGE INSTALLATION

Install the cartridge into the shell with the mounting screws so that the distance between the shell end and the stylus tip is 49 mm (1 15/16 inches).

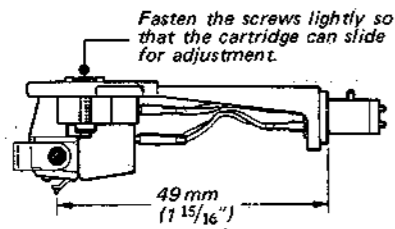

LEAD WIRE CONNECTION

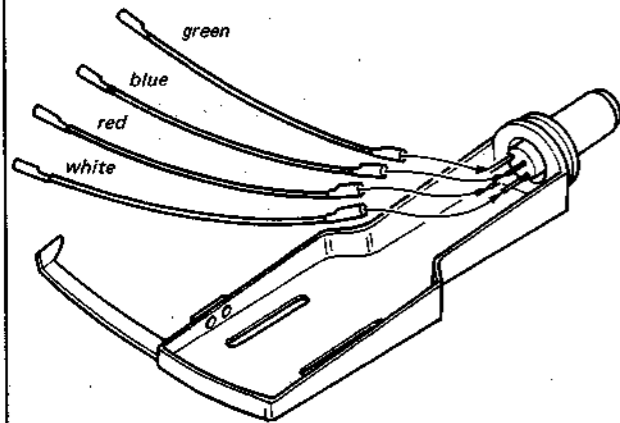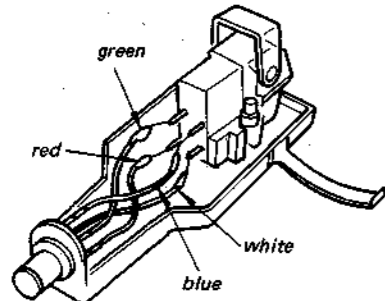


blue: left channel (ground)
white: left channel (signal)
green: right channel (ground)
red: right channel (signal)


• E Model

CARTRIDGE INSTALLATION

Install the cartridge into the shell with the mounting screws so that the distance between the shell end and the stylus tip is 49 mm (1 15/16 inches).

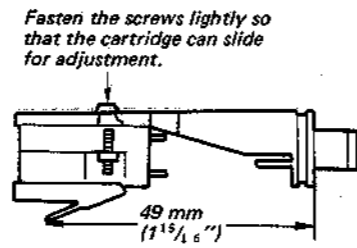


LEAD WIRE CONNECTION

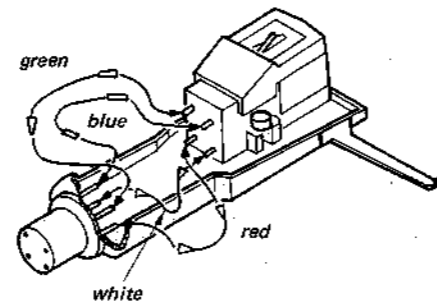



blue: left channel (ground)
white: left channel (signal)
green: right channel (ground)
red: right channel (signal)

Speed Detecting Head Output Level Adjustment

Before this adjustment, set the speed detecting head on the head holder as shown below.

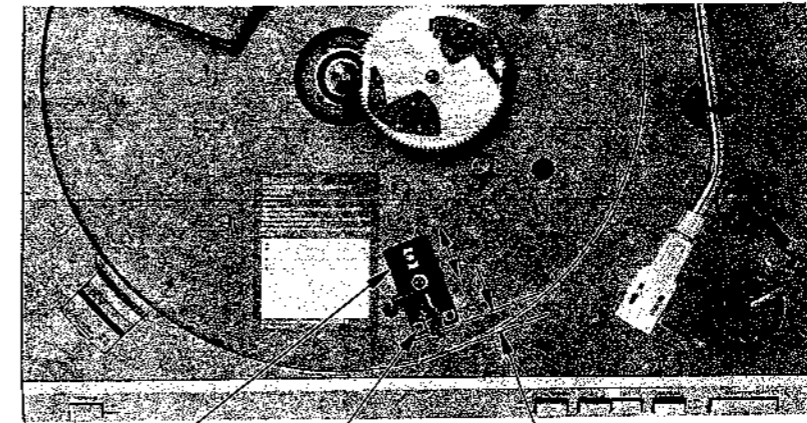


1. Adjust the position of the head holder so that the VTVM reading is 10-50 mV ac at 33 1/3 rpm.
2. Make sure that the head does not touch the turntable and tighten the screws securely.

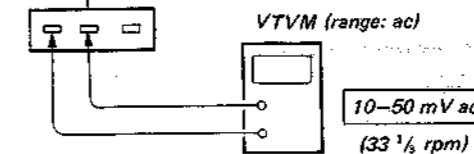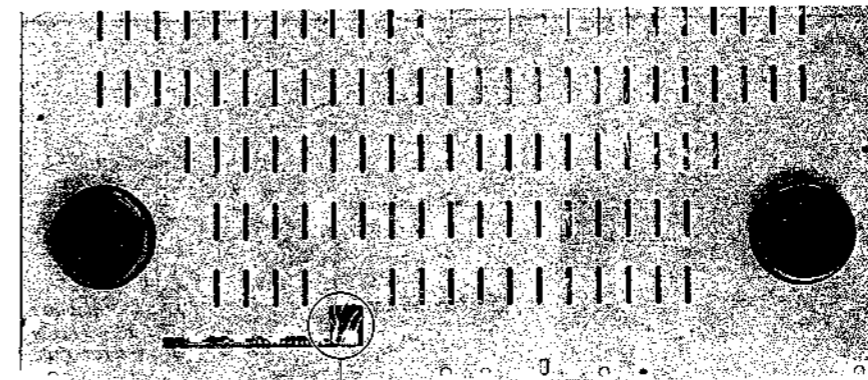

Note: The clearance between the magnet coated rim and the speed detecting head is more than 0.3 mm.

Stylus Height Adjustment
(POWER switch: OFF)

1. Set the record on the turntable.
2. Automatic Operation
 - 1) Set the record size selector to MANUAL position.
 - 2) Bring the tonearm to last groove of the record.
 - 3) Rotate the turntable clockwise slowly by hand, and the tonearm is lifted up automatically.
 - 4) Make sure that the clearance between the stylus tip and the record is 4-12 mm ($\frac{3}{16}$ - $\frac{7}{16}$ inches).
 - 5) If necessary, loosen the set screw and adjust the lifter height.

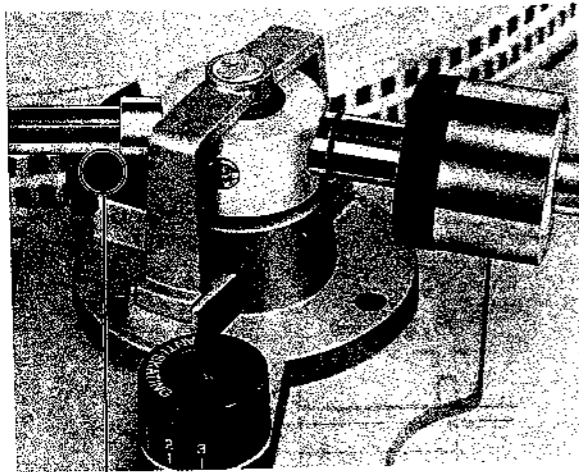

SC 2.6x5 hexagon-socket
1.27 mm

3. Manual Operation


- 1) Set the record size selector to MANUAL position.
- 2) Bring the tonearm on the record.
- 3) Lift the cueing lever and make sure that the clearance between the stylus tip and the record is 4-12 mm ($\frac{3}{16}$ - $\frac{7}{16}$ inches).
- 4) If necessary, adjust the lifter height by turning the adjustment screw as shown below.

tuning direction	lifter height
clockwise	up
counterclockwise	down


Automatic Return Position Adjustment
(POWER switch: ON)

1. Set the test record (YFSB-6) on the turntable.
2. Before this adjustment, automatic return must be done.
3. Bring the tonearm to the return test groove of the record.
4. Make sure that the tonearm starts to return at count of 15-17.
5. If necessary, adjust the automatic return position by turning the adjustment screw as shown below.

turning direction	count of return position
clockwise	18
counterclockwise	1

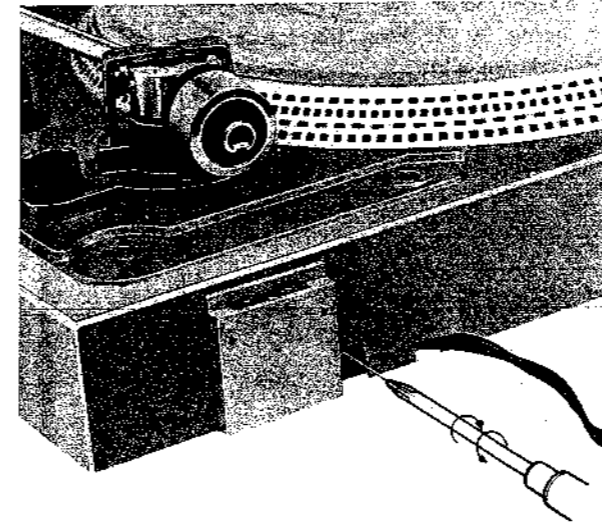

adjustment screw

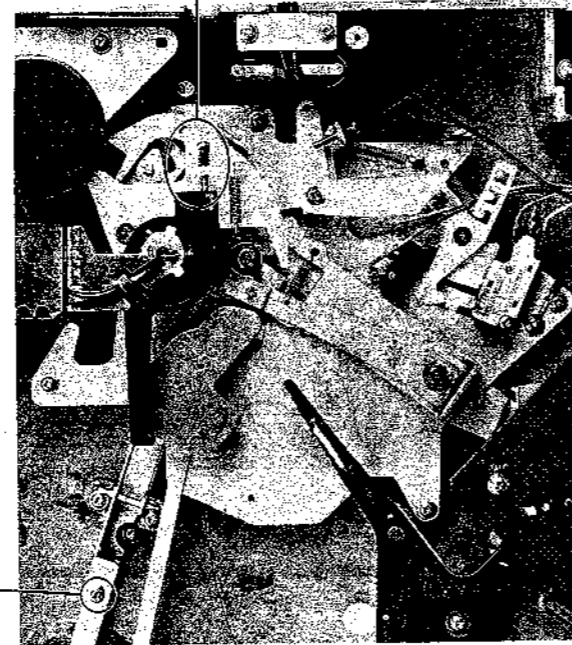

Stylus Drop-point Adjustment
(POWER switch: ON)


1. Set the test record (YFSC-16) on the turntable.
2. Set the record size selector knob to the 30(12") position and make sure that the stylus gets down on the specified point of the test record.

Specification:

Record size selector position	Count of drop-point
30 (12")	6 to 10

3. If necessary, insert the screwdriver into the hole and adjust the drop-point by turning the adjustment screw.
 - To change the drop-point inward:
Turn the adjustment screw slightly counterclockwise (A)
 - To change the drop-point outward:
Turn the adjustment screw slightly clockwise (B)
4. Once it is properly adjusted with a 30 cm (12") record, the drop-point will be correct for 17 cm (7") and 25 cm (10") records as well.


Note: The stylus drop-point is changed to about 12 mm ($\frac{1}{2}$ ") by one turn of the adjustment screw.

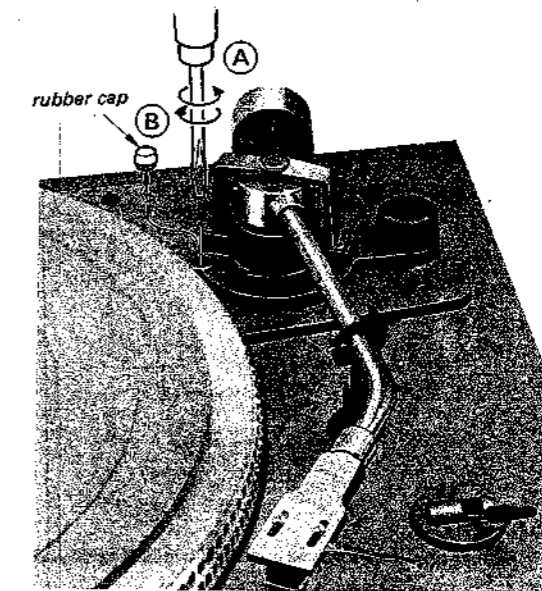


3-2. ELECTRICAL ADJUSTMENTS

Brake Drum Position Adjustment
(POWER switch: OFF)

1. Rotate the drive gear counterclockwise by hand and set the main lever pin as shown below.

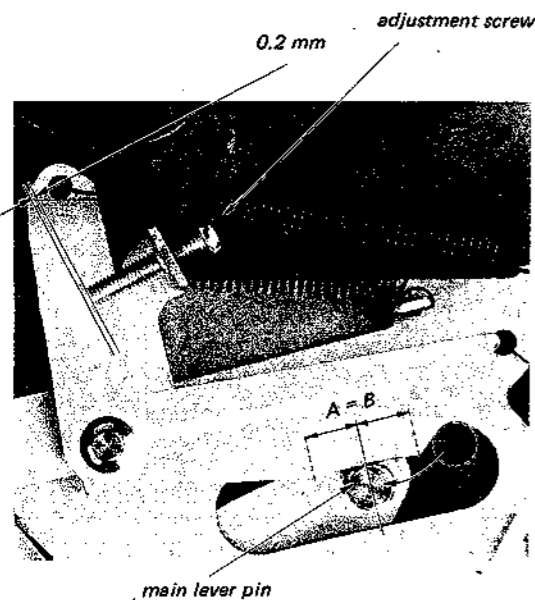




2. Contact the brake lever (1) to the brake drum by loosening the adjustment screw.
3. While pressing the brake lever (1) to the brake drum, tighten the adjustment screw fully clockwise.
4. Then, turn the adjustment screw counterclockwise about 1 turn.

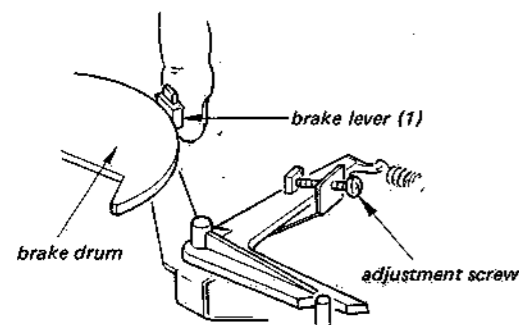

Reset Adjustment

If the tonearm returns during play without depressing the START/STOP button, adjust the tension of the spring by hooking the spring to stronger position as shown below.

position	tension
①	weak
②	↓
③	strong

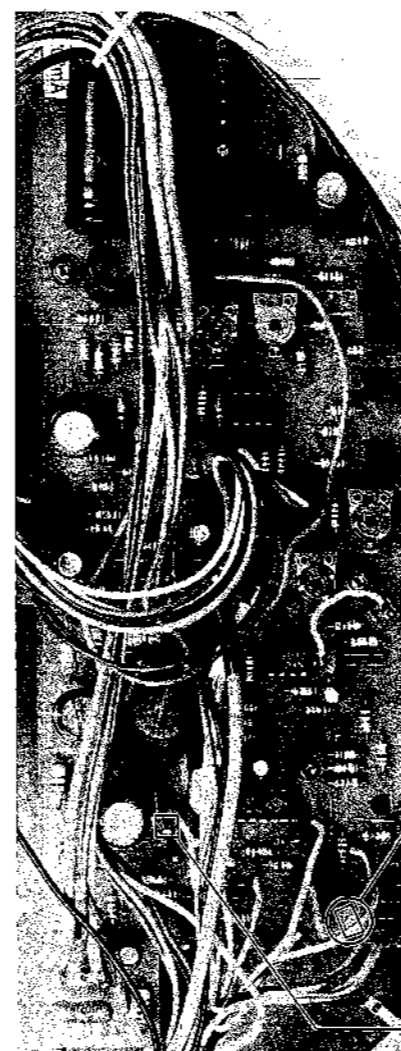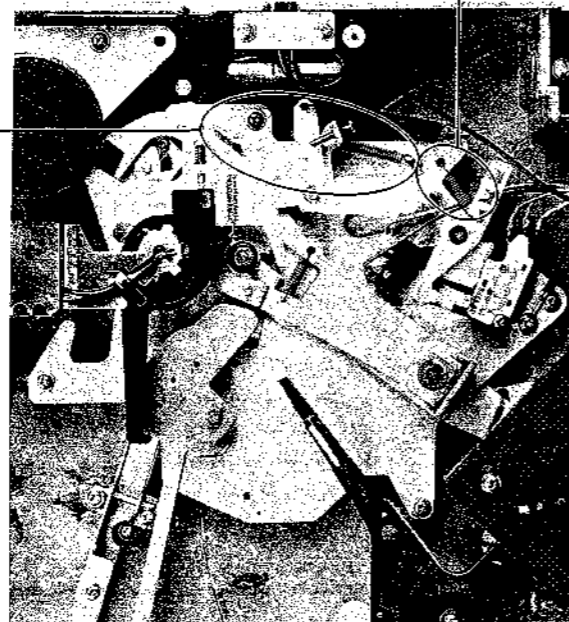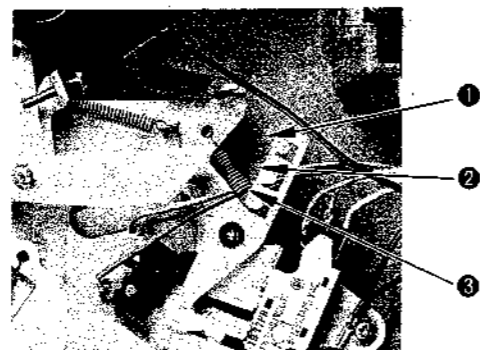


Turntable Speed Adjustment

If correct speed cannot be obtained by adjusting the PITCH controls, adjust RV1.

1. Set the two PITCH control knobs (33 and 45) to the mechanical-mid position.
2. Set the SPEED selector switch to "33" or "45" position and adjust RV1 so that the stroboscope pattern appears stationary.


RV1


Reference waveform: XTAL LOCK "ON" 33 rpm

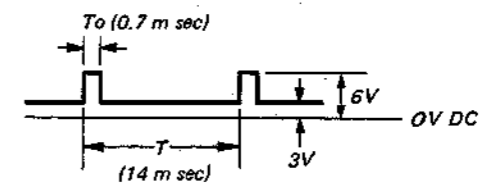

$$\frac{T_o}{T} \times 100 = 5 (\%)$$

oscilloscope

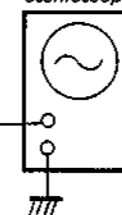


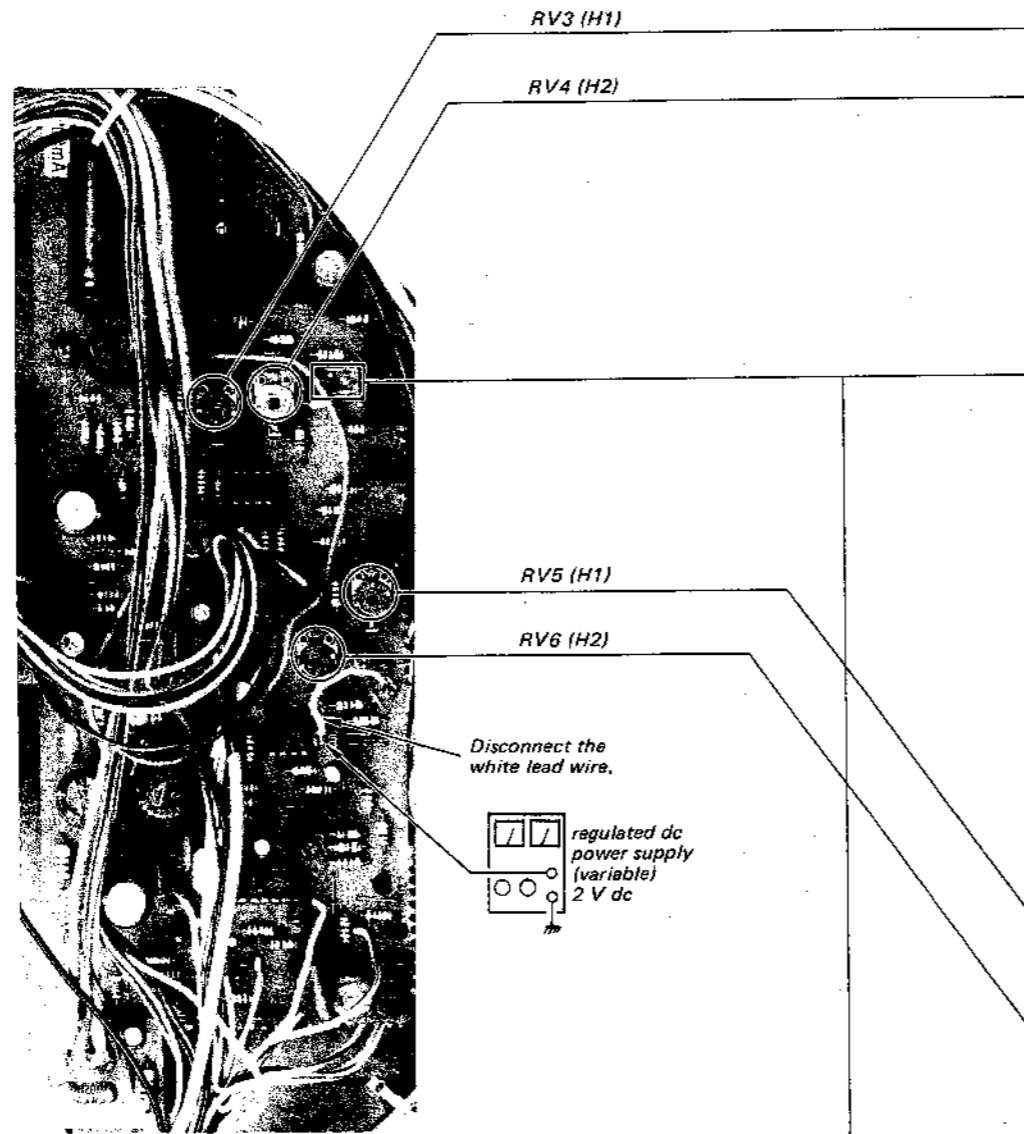


Motor Amp Offset Adjustment ($33\frac{1}{3}$ rpm)

1. Disconnect the white lead wire and connect the regulated power supply as shown below.
2. Connect VTVM or oscilloscope to H1 and adjust RV3 for 0V dc VTVM reading or the waveform on oscilloscope as shown below.
3. Connect VTVM or oscilloscope to H2 and adjust RV4 for 0V dc VTVM reading or the waveform on oscilloscope as shown below.


Waveform on Oscilloscope:

Note: Set the sweep time to longer for easy checking the waveform.

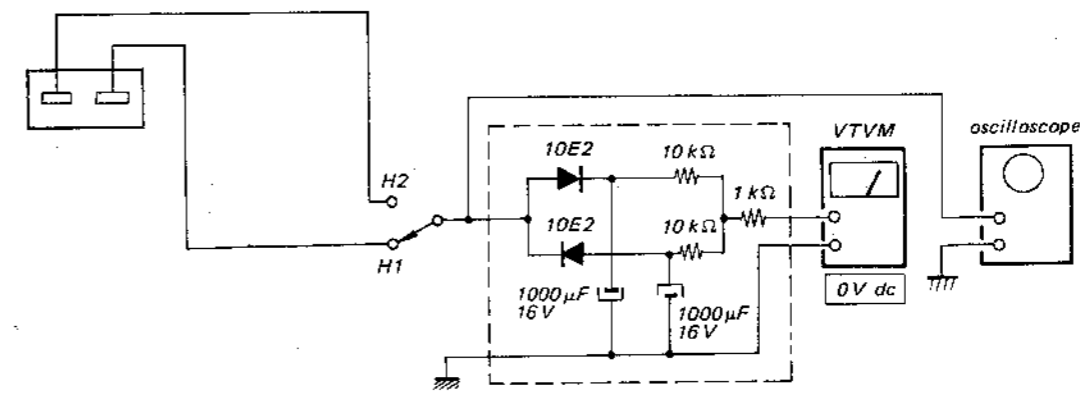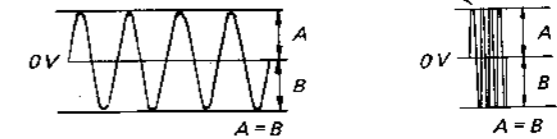

Hall Device Gain Adjustment ($33\frac{1}{3}$ rpm)


1. Disconnect the white lead wire and connect the regulated power supply as shown below.
2. Connect VTVM to H1 and adjust RV5 for 2V ac reading on VTVM.
3. Connect VTVM to H2 and adjust RV6 for 2V ac reading on VTVM.

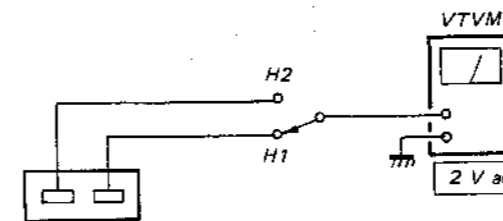


Note: DC resistance measurements are with hall device connected on the circuit board, and are approximate.

4-1. MOUNTING DIAGRAM


SECTION 4
DIAGRAMS

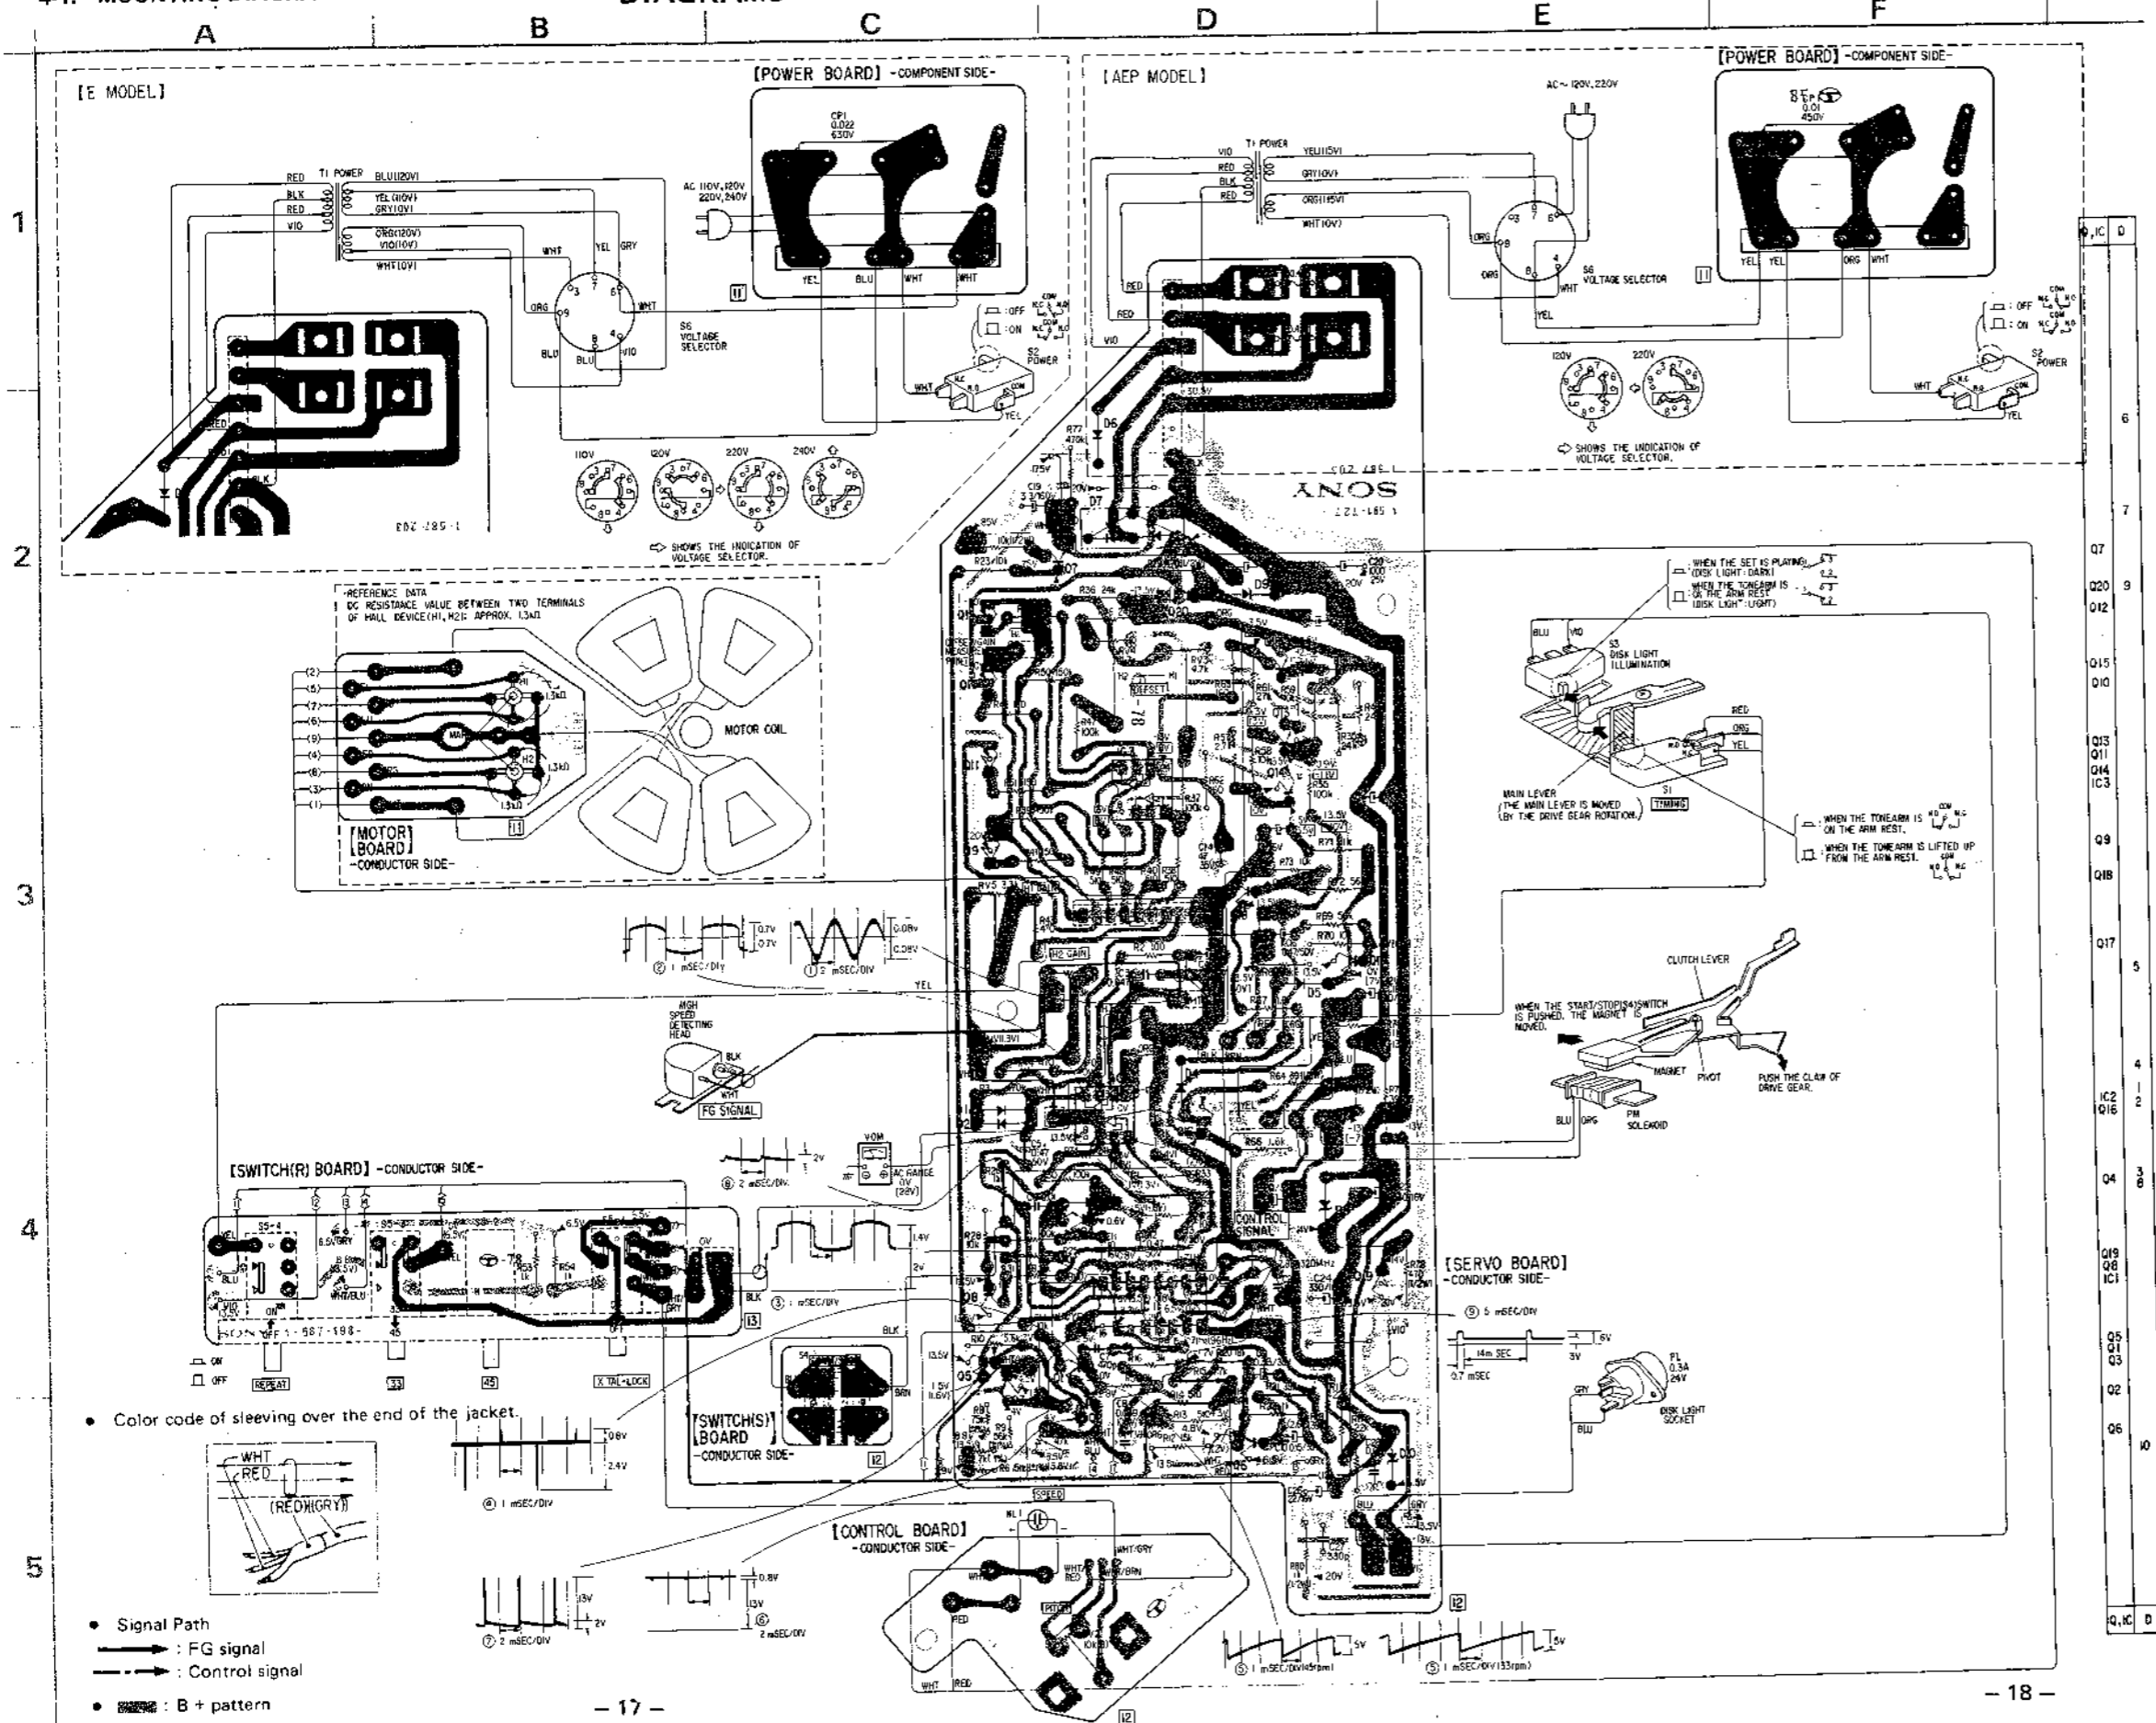


Q1-4 : 2SC1364 (2SC945)
Q6, 13 : 2SC1364 (2SC945)
Q15, 18

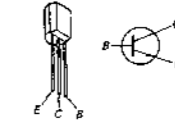



Q5, 8, 14 : 2SA 678 (2SA733)
Q17

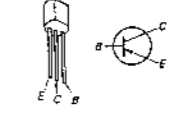



Q7: 2SC926A

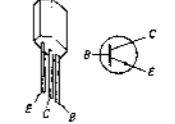



Q9, 11: 2SD414

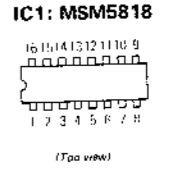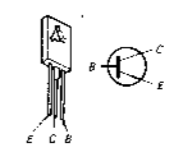



Q10, 12: 2SB548

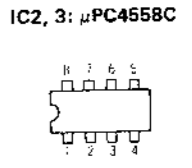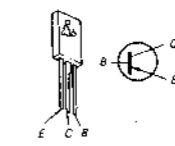


Q16, 20: 2SB605

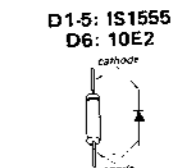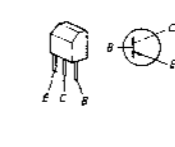


Q19: 2SD571

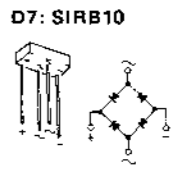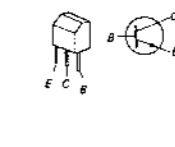

D8, 9: EQB01-14 (EQA01-14R)
D10: FQB01-07 (EQA01-7R)

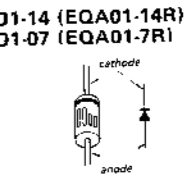



H1, 2: F1409 (HOLL8)

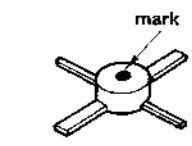

PS-515 PS-515

4-2. SCHEMATIC DIAGRAM

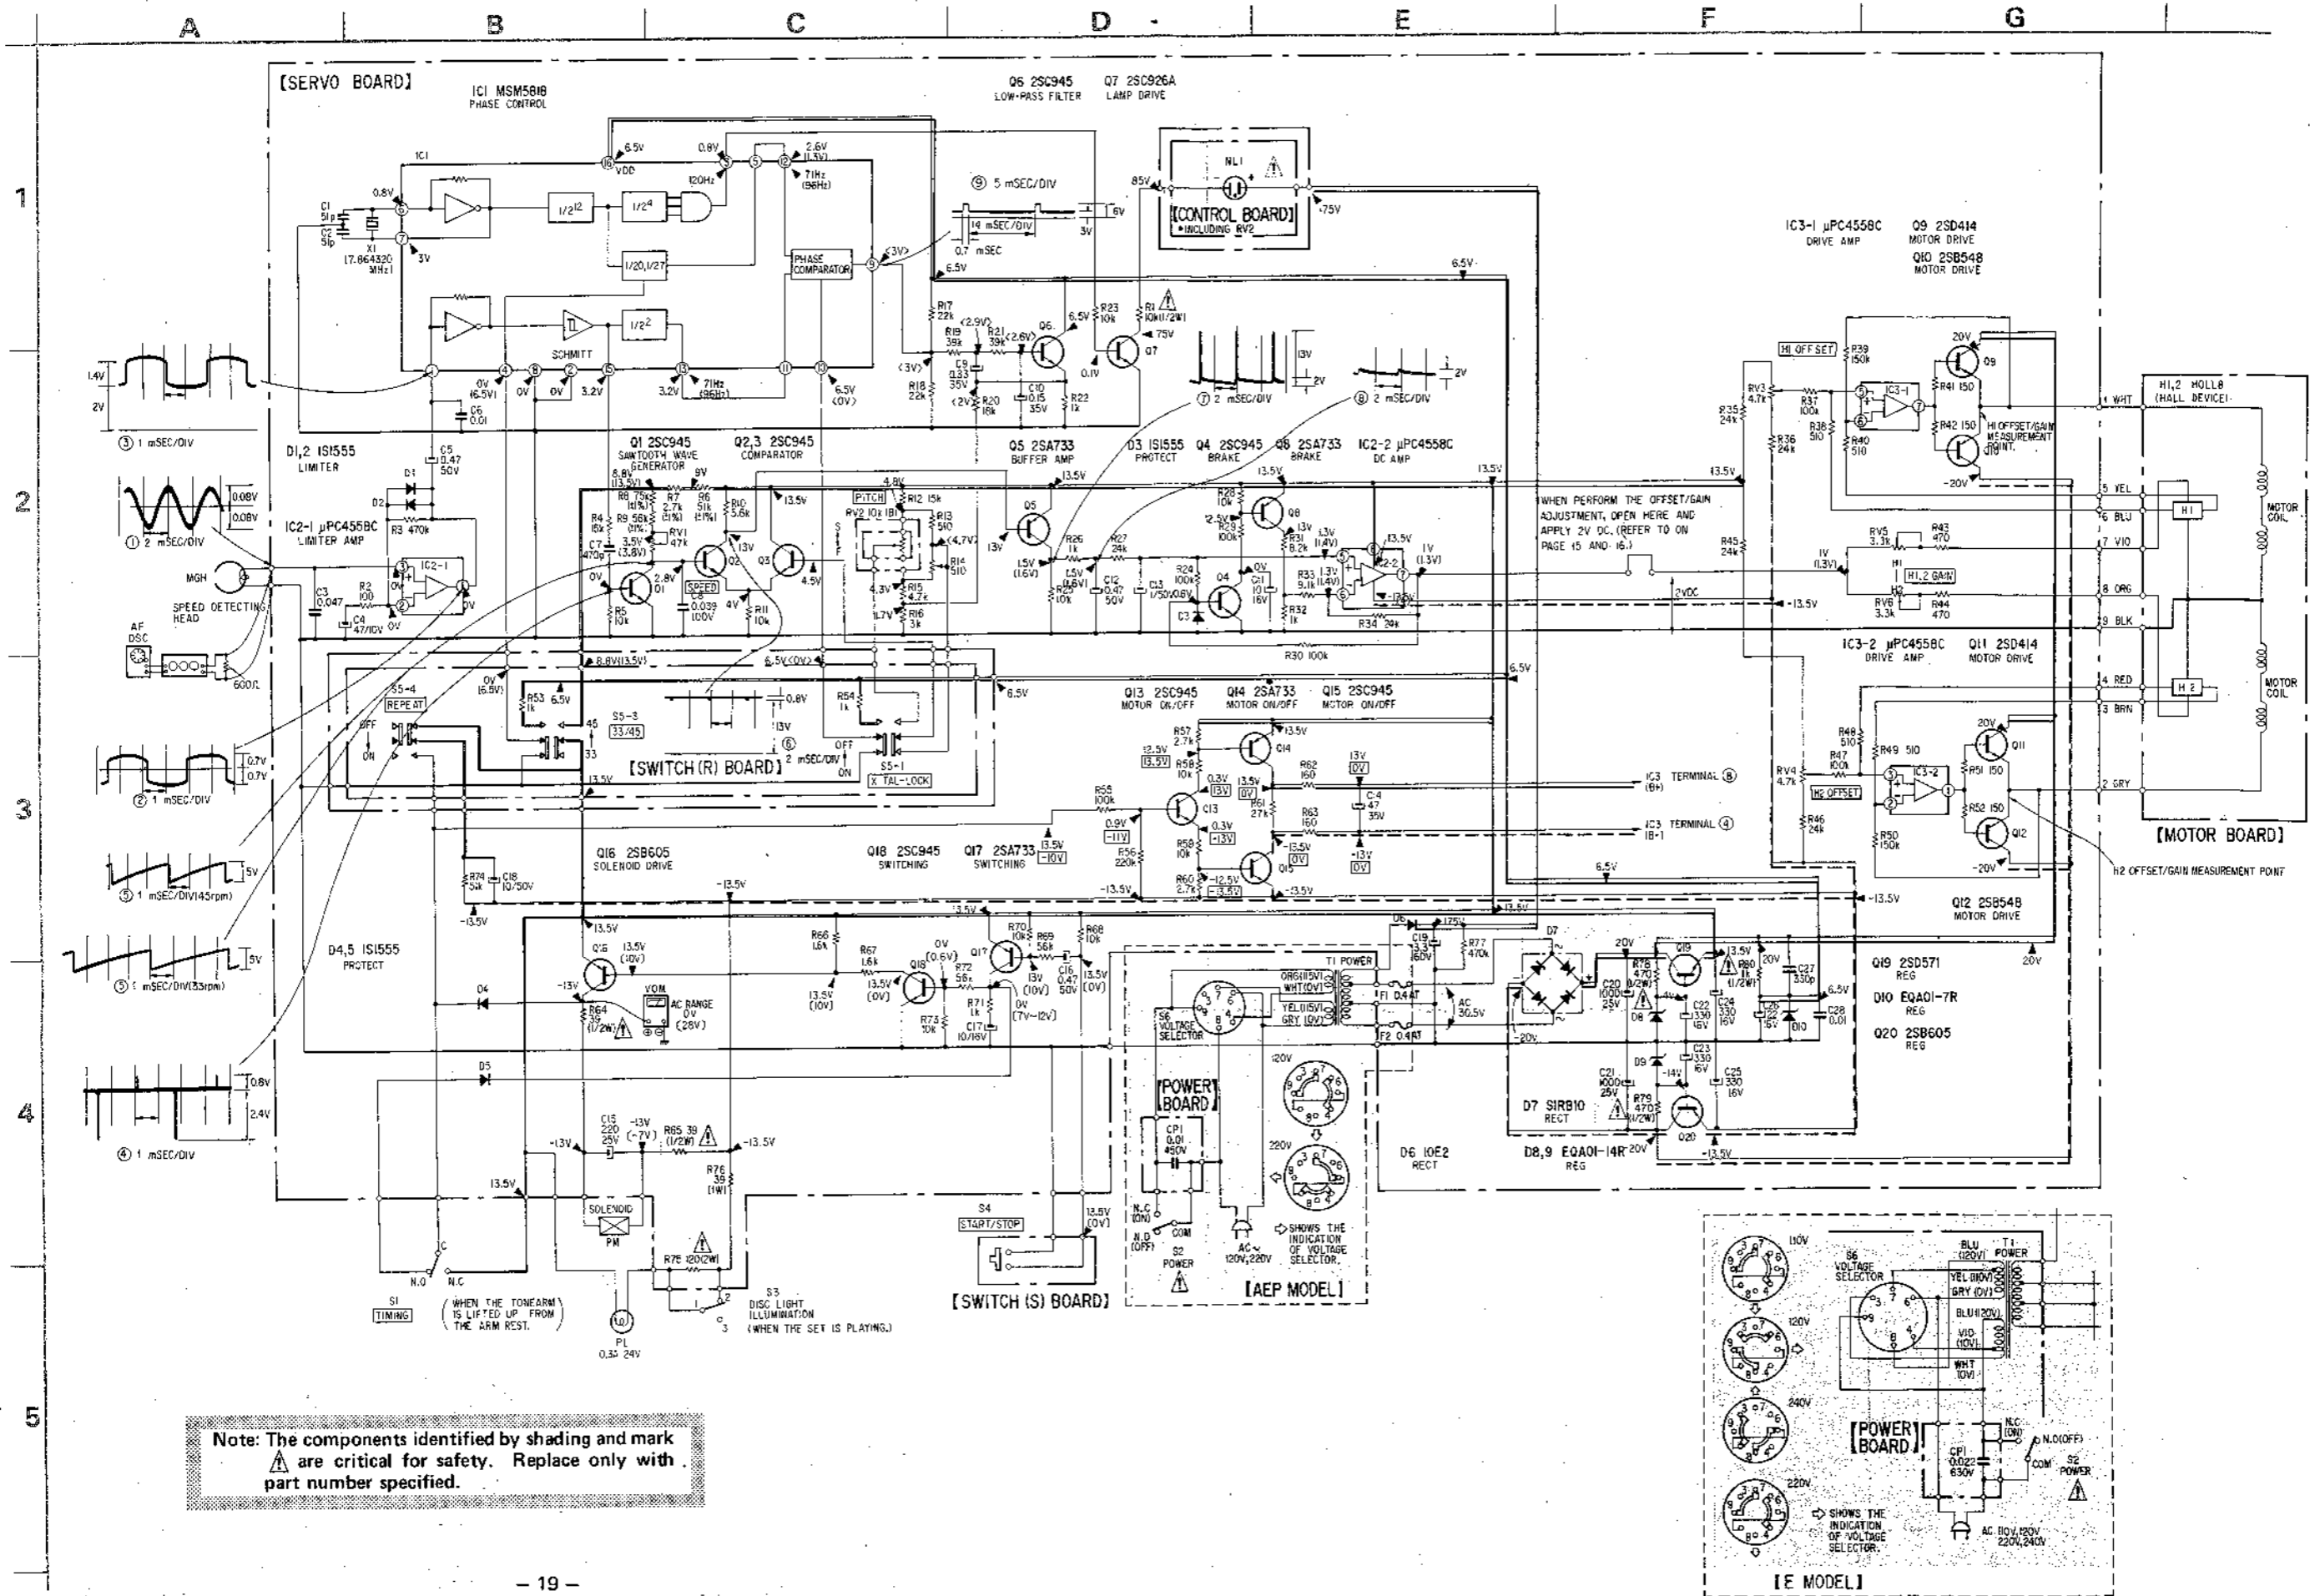

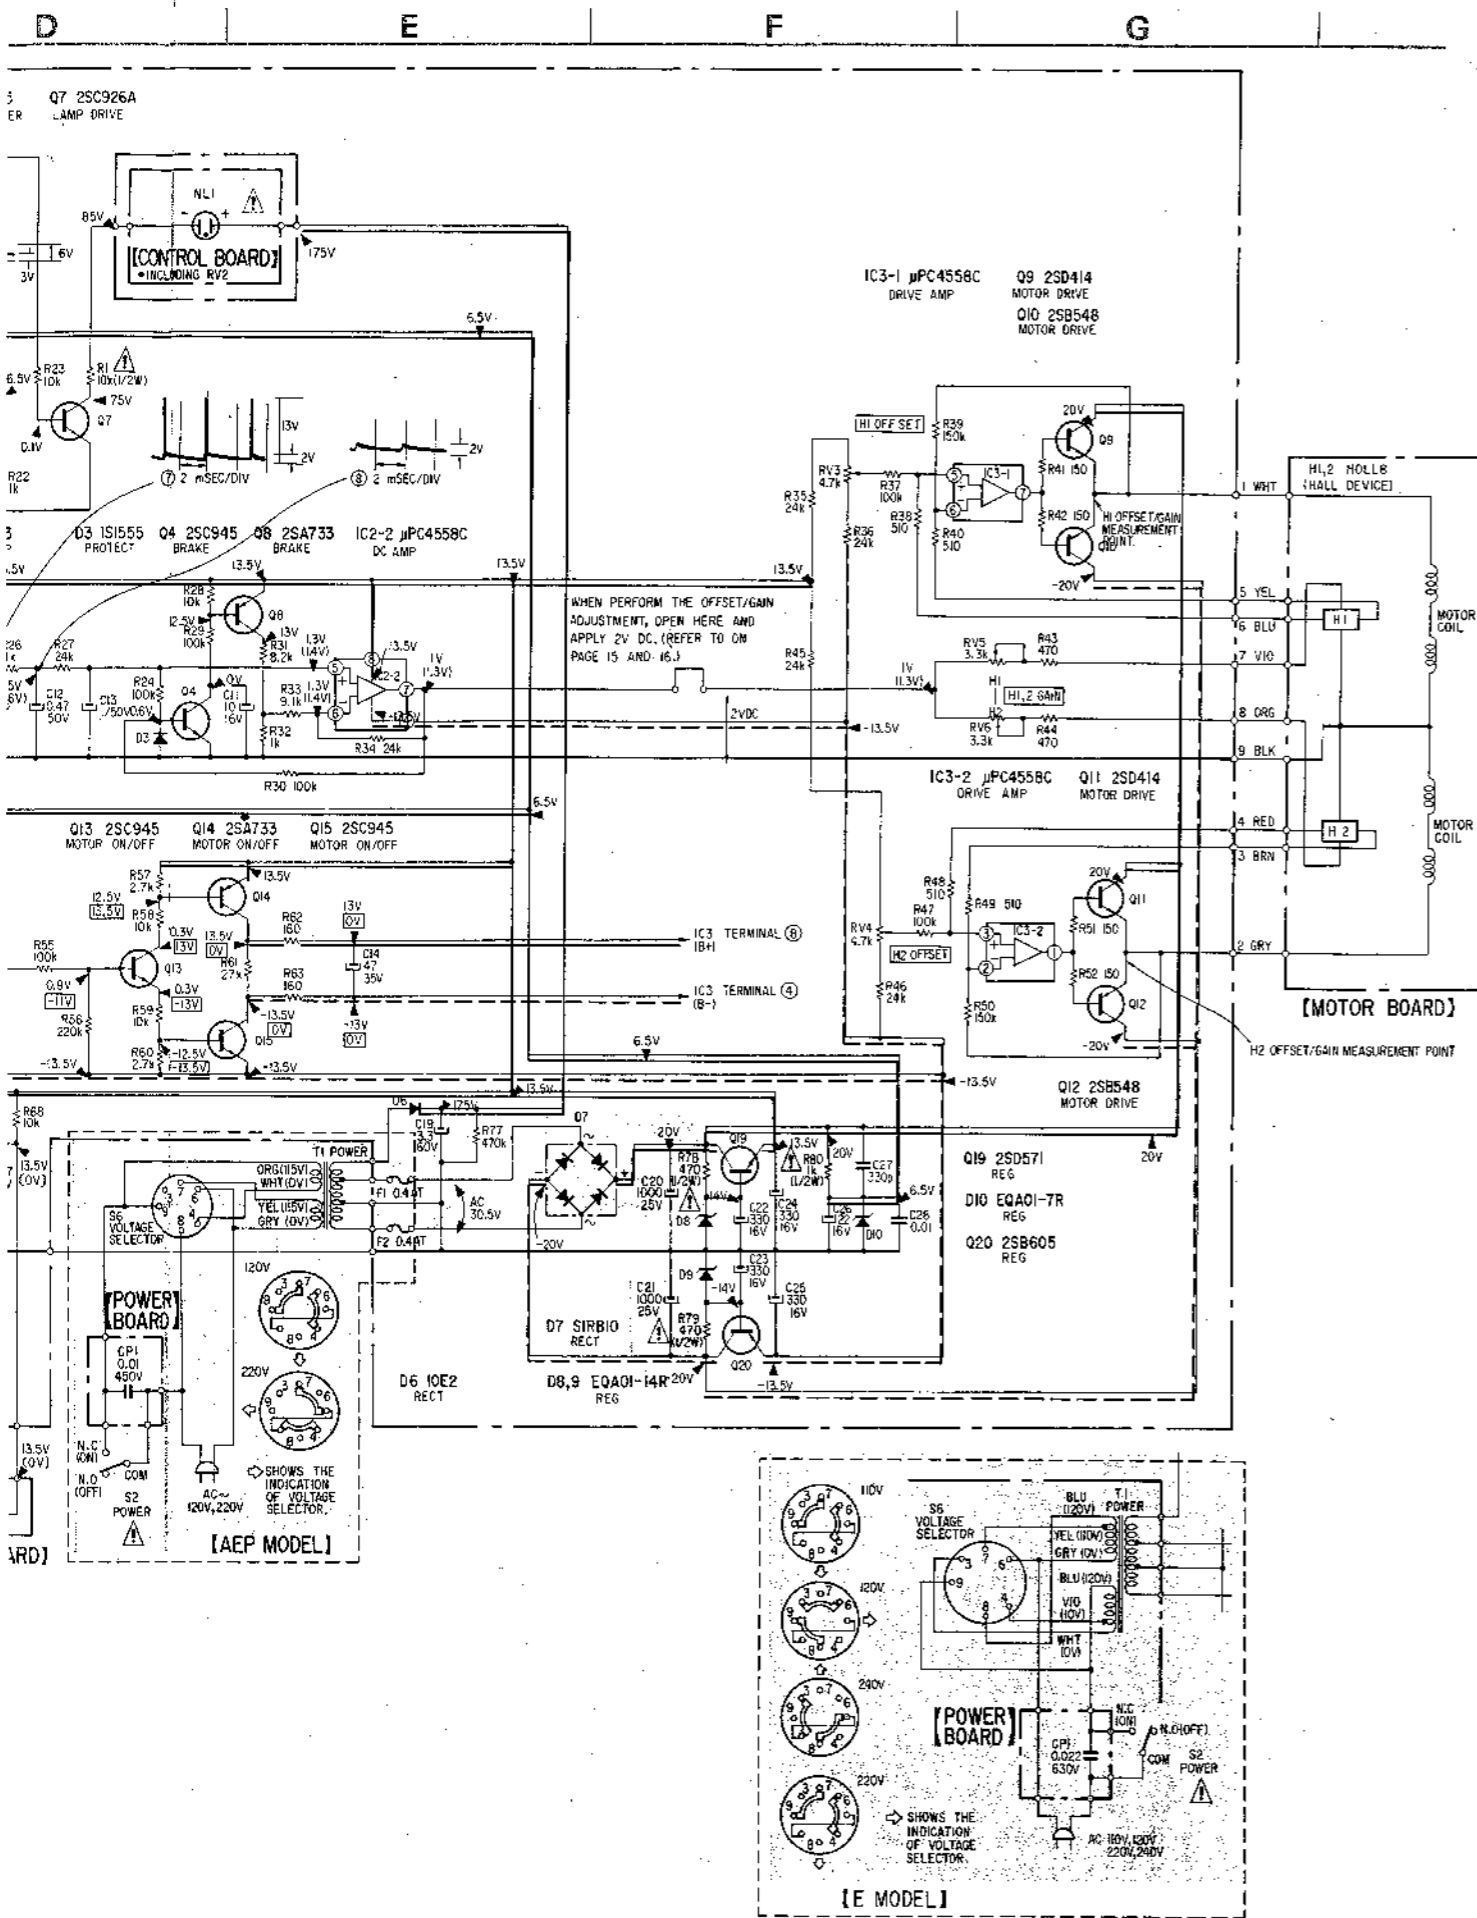

NOTE OF SCHEMATIC DIAGRAM

- All capacitors are in µF unless otherwise noted. pF : µµF
- 50 WV or less are not indicated except for electrolytics.
- All resistors are in ohms, ¼W unless otherwise noted.
- kΩ : 1000Ω; MΩ : 1000 kΩ
- % indicates component tolerance.
- [] : panel designation.

- Voltages are dc with respect to ground unless otherwise noted.
- Readings are taken with a 20,000-ohm-per-volt VOM.
 - V : 33 rpm
 - (V) : 45 rpm
 - (V) : X'TAL LOCK "ON"
 - [V] : START/STOP switch to ON.
 - (V) : STOP


- [] : adjustment for repair.
- — : B + bus.
- - - - : B - bus.

Switch


Ref. No.	Switch	Position
S1	TIMING	NO (When the tonearm is on the arm rest.)
S2	POWER	OFF
S3	DISC LIGHT ILLUMINATION	2 (When the tonearm is on the arm rest.)
S4	START/STOP	ON
S5-1	X'TAL-LOCK	ON
S5-2	33/45	45
S5-3	33/45	33
S5-4	REPEAT	OFF
S6	VOLTAGE SELECTOR	

4-3. PHONO BOARD


• MOUNTING DIAGRAM

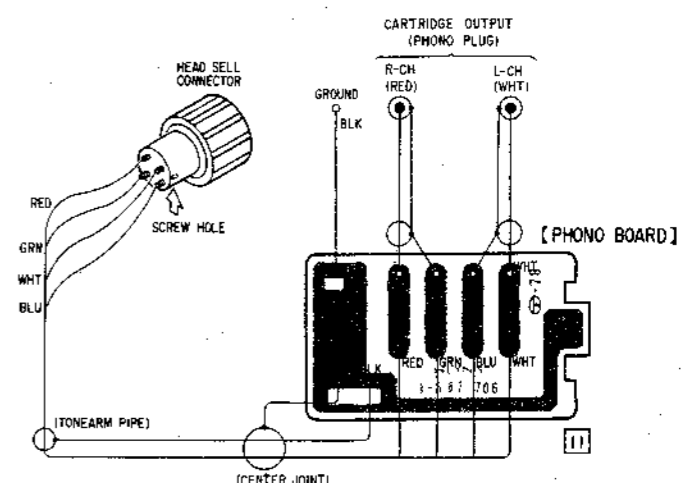

• SCHEMATIC DIAGRAM

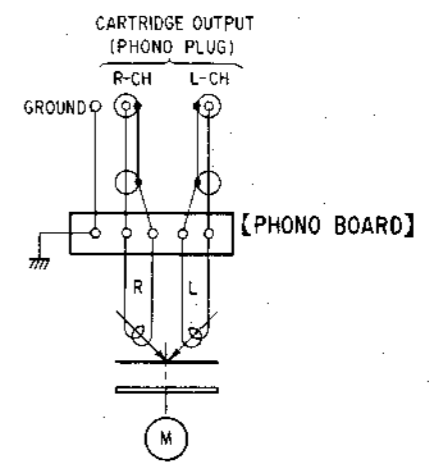


3-4 A B C D

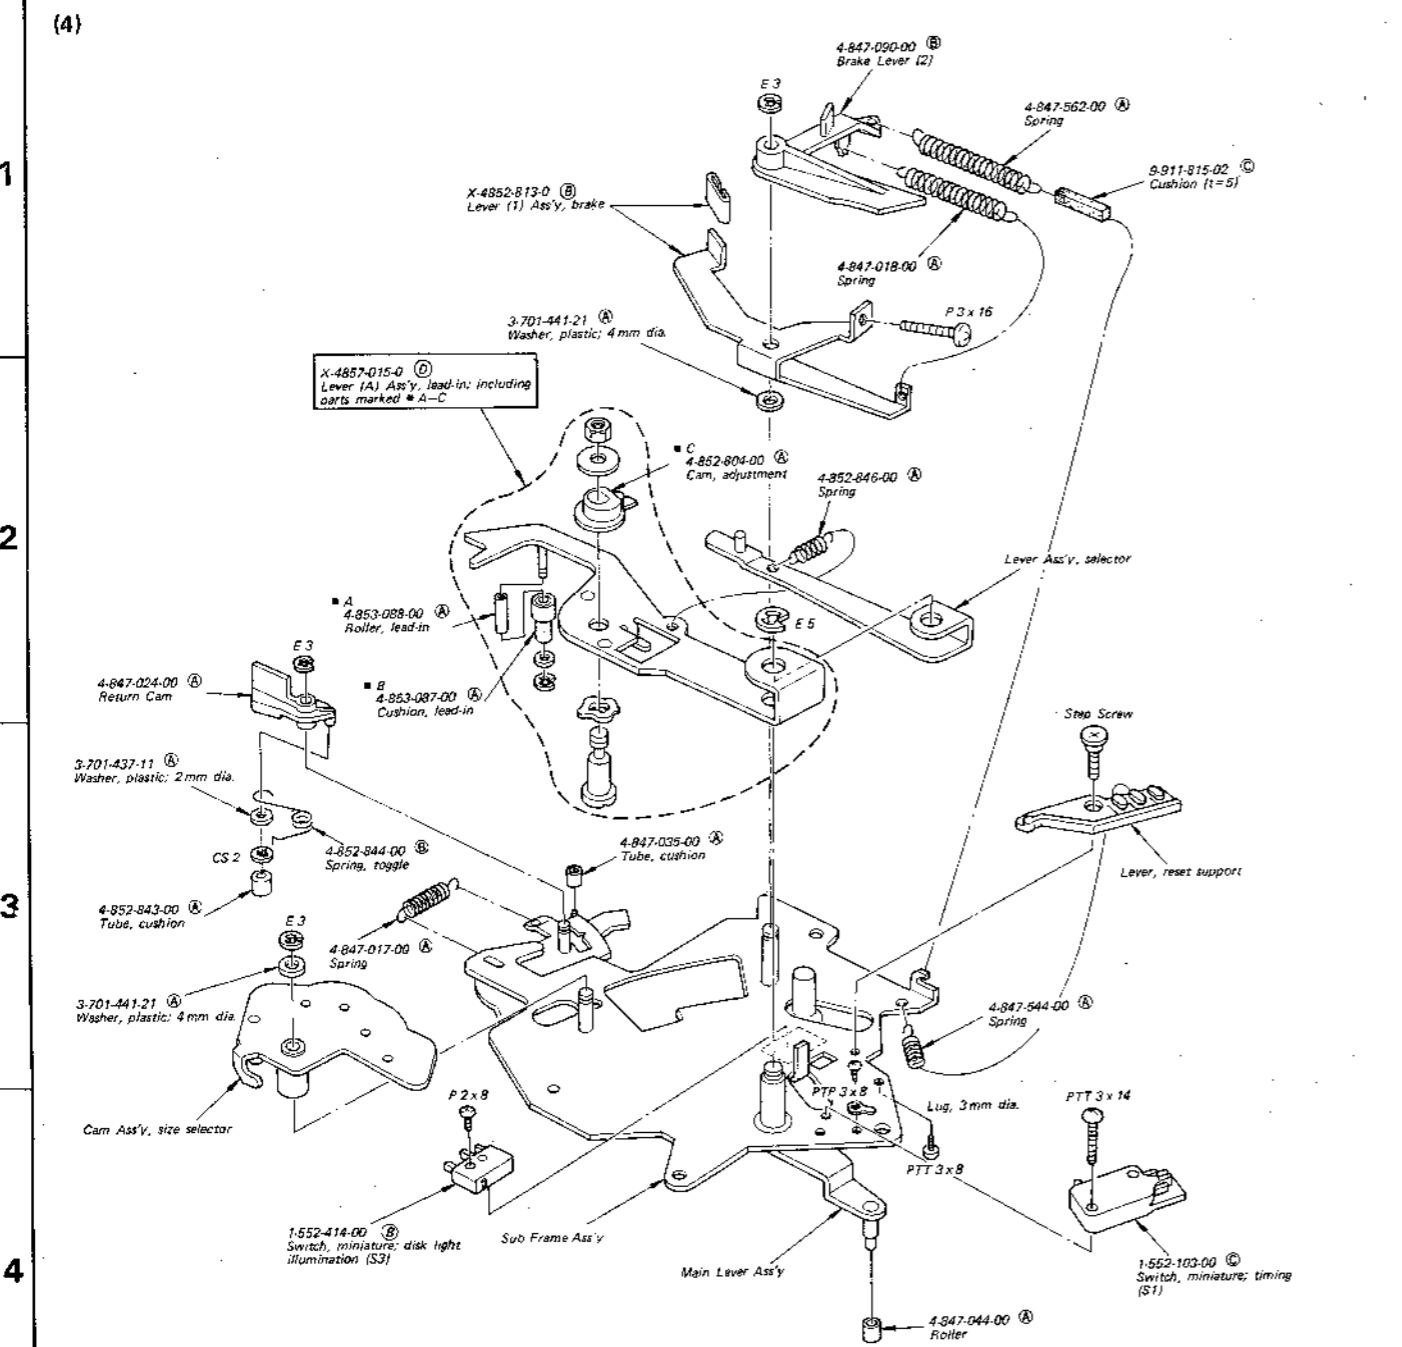

- Note:**
- Items with no part number and/or no description are not stocked because they are seldom required for routine service.
 - All screws are Phillips (cross recess) type unless otherwise noted.
(-) = slotted head
 - Circled letters (A to Z) are applicable to European models only.


3-5 A B C D

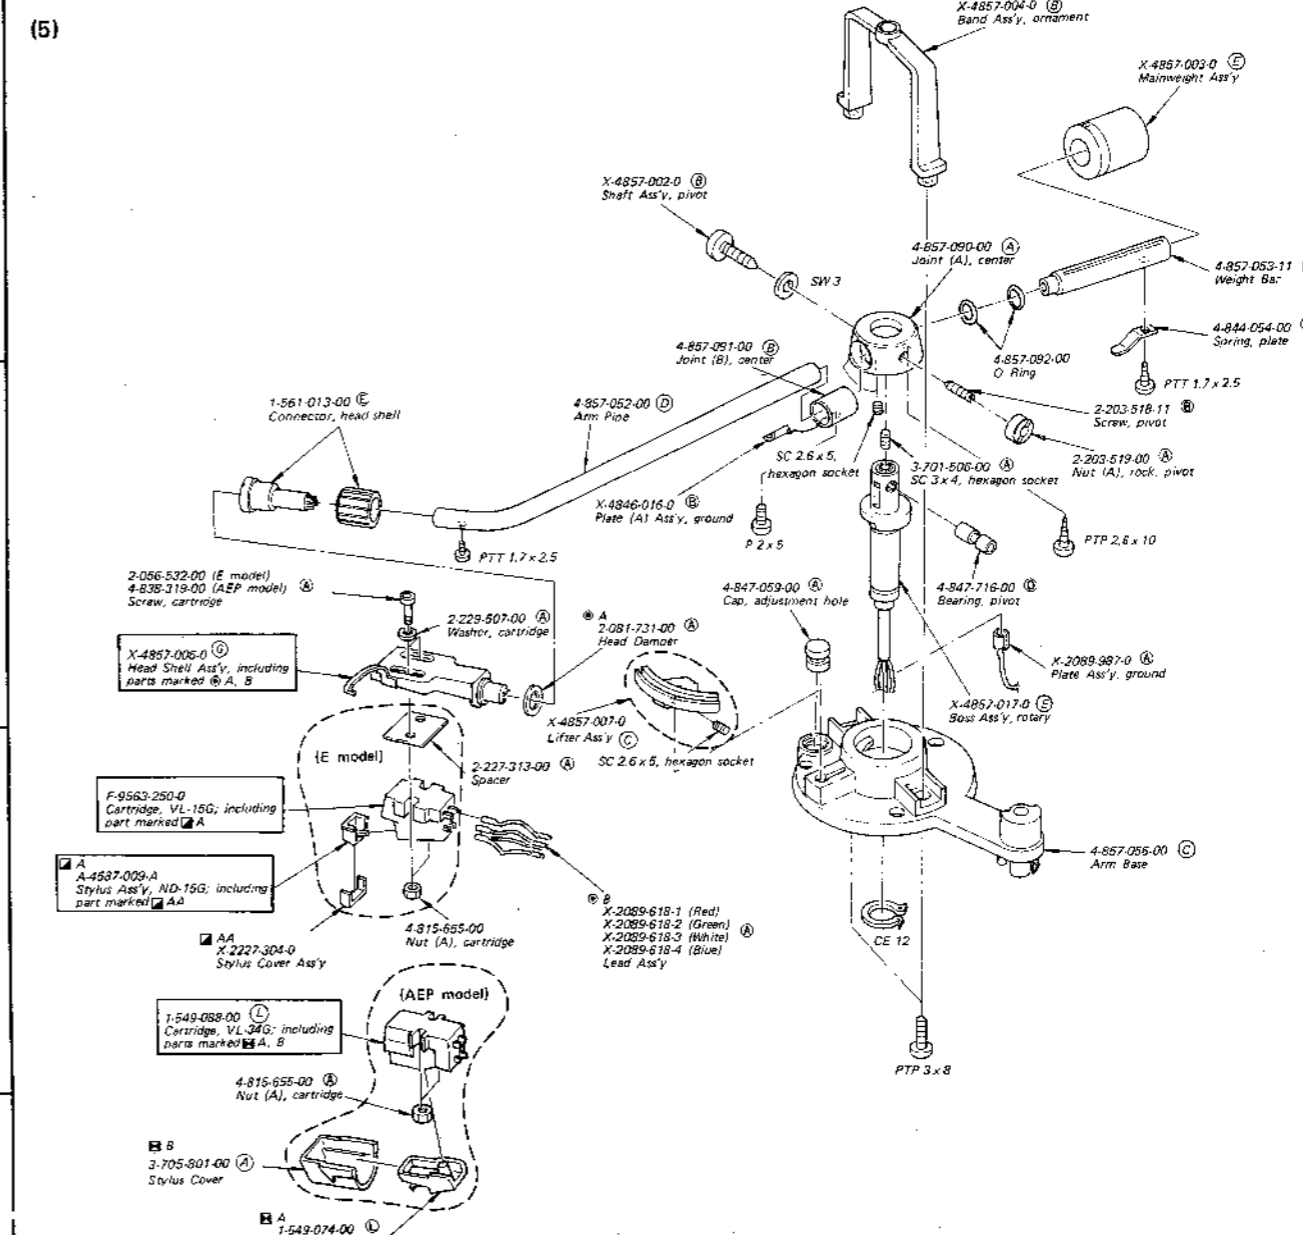

- Note:**
- Items with no part number and/or no description are not stocked because they are seldom required for routine service.
 - All screws are Phillips (cross recess) type unless otherwise noted.
(-) = slotted head
 - Circled letters (A to Z) are applicable to European models only.

SECTION 6
ELECTRICAL PARTS LIST

• Circled letters (A to Z) are applicable to European models only.

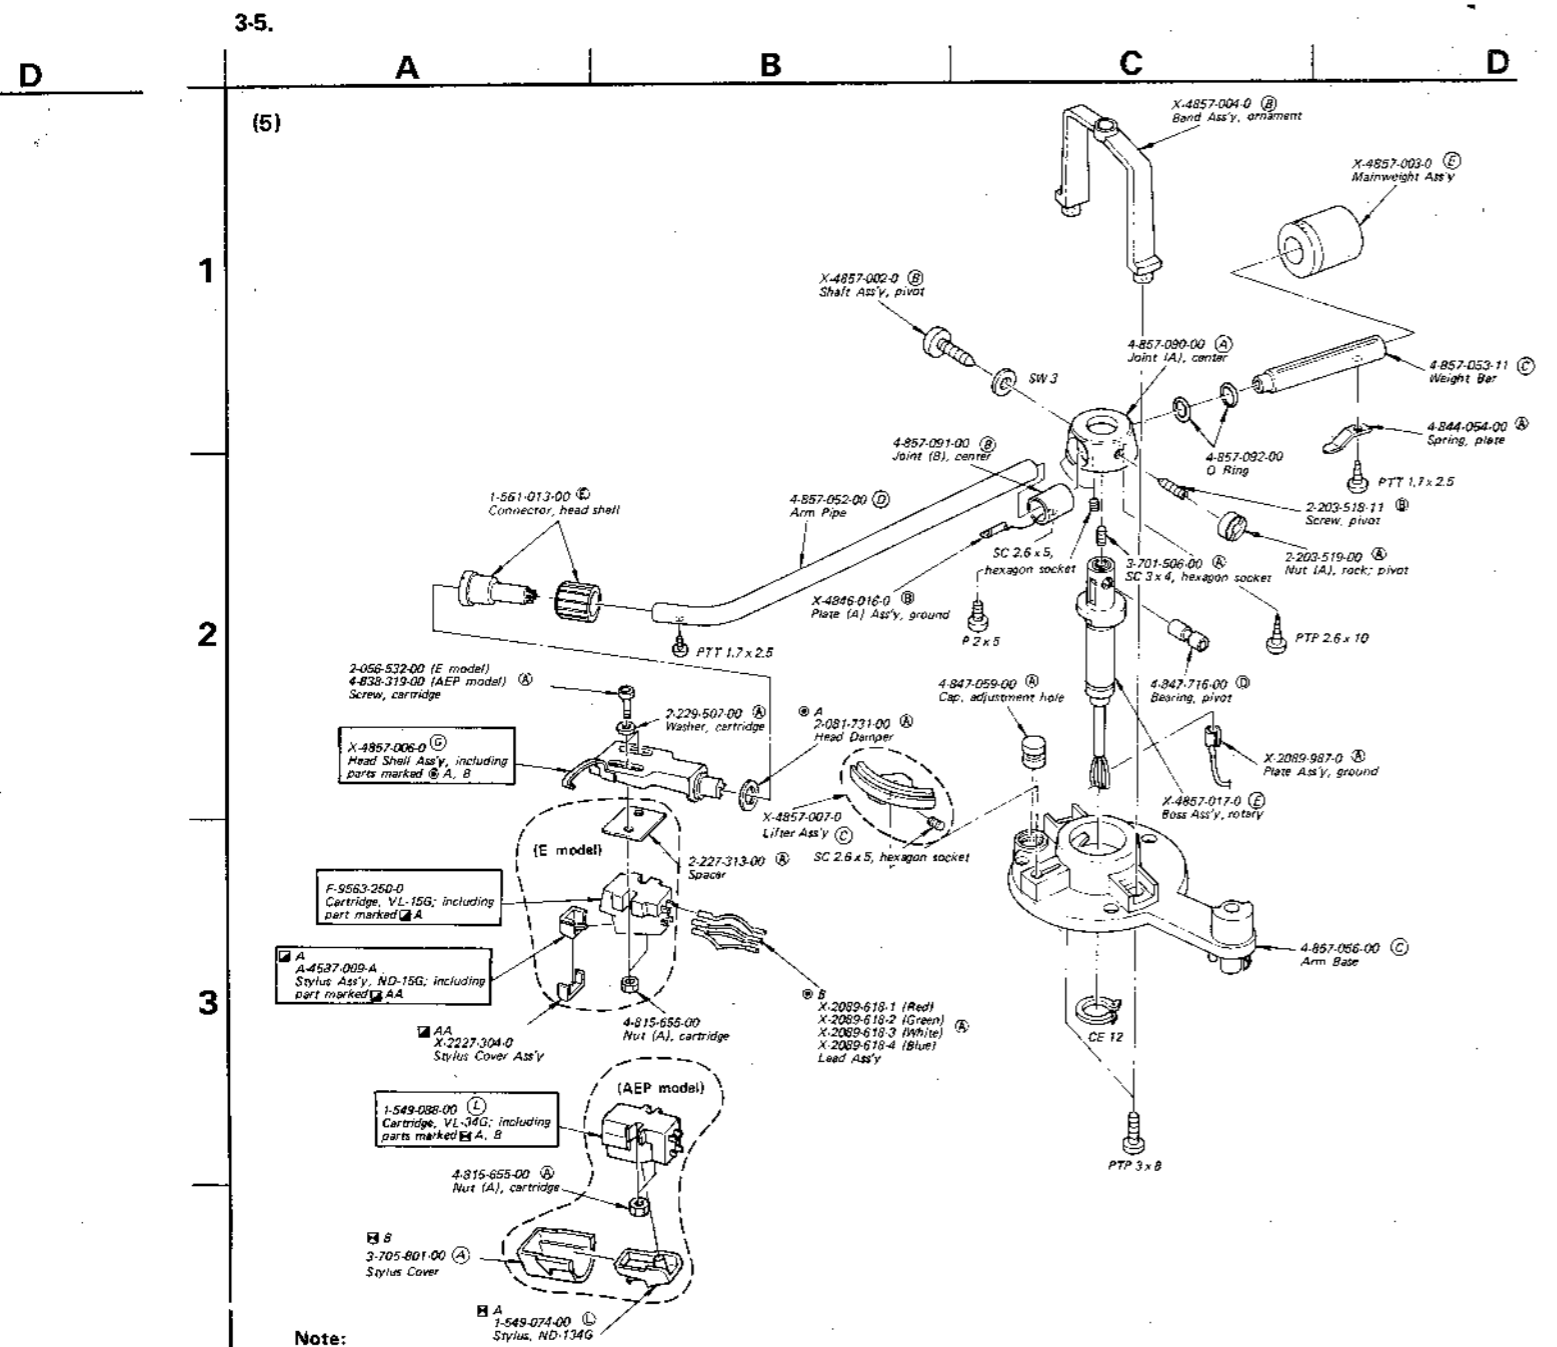

- Note:**
- Items with no part number and/or no description are not stocked because they are seldom required for routine service.
 - All screws are Phillips (cross recess) type unless otherwise noted. (—) = slotted head
 - Circled letters (A to Z) are applicable to European models only.

Ref. No. Part No. Description

Ref. No.	Part No.	Description
SEMICONDUCTORS		
Transistors		
⇒ Q1 - 4	8-729-663-47	(B) 2SC1364
⇒ Q5	8-727-788-00	(B) 2SA678
⇒ Q6	8-729-663-47	(B) 2SC1364
⇒ Q7	8-720-950-03	(C) 2SC926A
⇒ Q8	8-727-788-00	(B) 2SA678
Q9	8-729-141-43	(B) 2SD414
Q10	8-729-154-83	(B) 2SB548
Q11	8-729-141-43	(B) 2SD414
Q12	8-729-154-83	(B) 2SB548
⇒ Q13	8-729-663-47	(B) 2SC1364
⇒ Q14	8-727-788-00	(B) 2SA678
⇒ Q15	8-729-663-47	(B) 2SC1364
Q16	8-729-160-51	(B) 2SB605
⇒ Q17	8-727-788-00	(B) 2SA678
⇒ Q18	8-729-663-47	(B) 2SC1364
Q19	8-729-157-11	(B) 2SD571
Q20	8-729-160-51	(B) 2SB605
ICs		
IC1	8-759-958-18	(K) MSM5818
IC2, 3	8-759-145-58	(D) μPC4558C
Diodes		
D1 - 5	8-719-815-55	(B) 1S1555
D6	(A) 8-719-200-02	(B) 10E2
D7	(A) 8-719-510-10	(C) SIRB10
⇒ D8, 9	8-719-931-14	(B) EQB01-14
⇒ D10	8-719-931-07	(B) EQB01-07
⇒ H1, 2	8-719-814-09	(D) F1409

• ⇒: Due to standardization, interchangeable replacements may be substituted for parts specified in the diagrams.

Note: The components identified by shading and mark **A** are critical for safety. Replace only with part number specified.

Ref. No. Part No. Description

Ref. No.	Part No.	Description
CAPACITORS		
• All capacitors are in μF and ceramic unless otherwise noted. 5CWW or less are not indicated except for electrolytics. pF = μμF, elect = electrolytic		
C1, 2	1-102-491-11	(A) 51p
C3	1-101-006-11	(A) 0.047
C4	1-121-409-11	(A) 47 10V elect
C5	1-121-951-11	(A) 0.47 50V elect
C6	1-101-004-11	(A) 0.01
C7	1-102-114-11	(A) 470p
C8	1-130-140-11	(B) 0.039 100V polyethylene
G9	1-131-212-11	(B) 0.33 35V elect
C10	1-131-210-11	(B) 0.15 35V elect
C11	1-121-651-11	(A) 10 16V elect
C12	1-121-951-11	(A) 0.47 50V elect
C13	1-121-952-11	(A) 1 50V elect
C14	1-123-058-11	(A) 47 35V elect
C15	1-121-936-11	(B) 220 25V elect
C16	1-121-951-11	(A) 0.47 50V elect
C17	1-121-651-11	(A) 10 16V elect
C18	1-121-738-11	(A) 10 50V elect
C19	(A) 1-123-004-11	(B) 3.3 160V elect
C20, 21	(A) 1-123-066-11	(B) 1000 25V elect
C22 - 25	1-123-069-11	(B) 330 16V elect
C26	1-121-479-11	(A) 22 16V elect
C27	1-102-112-11	(A) 330p
C28	1-101-004-11	(A) 0.01
CP1	(A) 1-115-148-11	(C) 0.01 450V paper (AEP model)
CP1	(A) 1-129-718-00	(B) 0.022 630V polyethylene (E model)

RESISTORS
(All resistors are in ohms. Common 1/4W carbon resistors are omitted. Refer to the list on the last page for their part numbers.)

R1	(A) 1-244-897-11	(A) 10k 1/4W carbon
R6	1-214-173-11	(A) 51k ±1% 1/4W metal oxide
R7	1-214-142-11	(A) 2.7k ±1% 1/4W metal oxide
R8	1-214-177-11	(A) 75k ±1% 1/4W metal oxide
R9	1-214-174-11	(A) 56k ±1% 1/4W metal oxide

• Circled letters (A to Z) are applicable to European models only.

Ref. No.	Part No.	Description
R64, 65	⚠ 1-244-839-11	(A) 39 1/2W carbon
R75	⚠ 1-207-913-11	(B) 120 2W wire wound (nonflammable)
R76	⚠ 1-213-126-11	(A) 39 1W metal oxide (nonflammable)
R78, 79	⚠ 1-244-865-11	(A) 470 1/2W carbon
R80	⚠ 1-244-873-11	(A) 1k 1/2W carbon
RV1	1-224-254-XX	(B) 47k, adjustable; SPEED
RV2	1-226-196-00	(B) 10k(B), variable; PITCH
RV3, 4	1-224-644-XX	(B) 4.7k, adjustable; OFFSET
RV5, 6	1-224-644-XX	(B) 4.7k adjustable; GAIN

SWITCHES

S1	1-552-103-00	(C) miniature; TIMING
S2	⚠ 1-516-889-00	(D) miniature; POWER (AEP model)
S2	⚠ 1-552-414-00	miniature; POWER (E model)
S3	1-552-414-00	(B) miniature; disk light illumination
S4	1-552-412-00	(B) key-board; START/STOP
SS-1 - 4	1-552-413-00	(E) push; REPEAT/33/45/ X' TAL-LOCK
S6	⚠ 1-526-576-21	(D) Voltage selector


MISCELLANEOUS

F1, 2	⚠ 1-532-066-00	(A) Fuse, 0.4AT (AEP model)
MGH	1-543-093-00	(E) Speed Detecting Head
NL1	⚠ 1-519-152-00	(B) Lamp, neon
PM	1-454-193-00	(C) Solenoid
T1	⚠ 1-446-132-00	(I) Transformer, power (AEP model)
T1	⚠ 1-446-133-00	Transformer, power (E model)
X1	1-527-348-00	(D) Crystal, 7.864320 MHz
	1-518-325-00	(C) Disk Light
	including:	
PL	1-518-326-00	(B) Lamp, 0.3A 24V
	4-857-094-01	(A) Cap, color
	1-526-563-00	(C) Socket, for disk light
	⚠ 1-534-817-XX	(E) Cord, power; euro-plug (AEP, E model)

Ref. No.	Part No.	Description
	1-549-088-00	(L) Cartridge, VL-34G (AEP model) including:
	1-549-074-00	(L) Stylus, ND-134G (AEP model)
	3-705-801-00	(A) Stylus Cover (AEP model)
	⚠ 1-551-472-00	Cord, power; parallel blade plug (E model)
	1-551-497-00	(D) Shield Cord with Pinjack
	1-552-411-00	(B) Switch, push; lock
	1-561-013-00	(E) Connector, head shell
	1-587-200-00	(B) Printed Circuit Board, Switch (S)

— Power Cord —

euro-plug (1-534-817-XX)



parallel blade plug (1-551-472-00)



Note: The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

PACKING MATERIALS AND ACCESSORIES

Ref. No.	Description
X-4857-003-0	(E) Weight Ass'y, main
2-054-619-00	(A) Spacer, cartridge
3-701-616-00	(A) Bag, polyethylene
3-701-630-00	(A) Bag, polyethylene
3-701-634-00	(A) Bag, polyethylene
3-701-806-00	(A) Adaptor, 45 rpm
3-770-584-11	(E) Manual, instruction
3-793-395-11	(B) Gauge, tracking error
3-794-123-11	(A) Label, caution
4-843-577-02	(A) Sheet, protection, dust cover
4-847-092-00	(C) Screwdriver
4-847-314-00	(C) Bag, polyethylene; main
4-852-078-00	(B) Holder, turntable
4-852-080-00	(B) Cushion, upper
4-852-081-00	(B) Cushion, lower
4-853-409-00	(B) Cushion, arm
4-857-047-00	(C) Sheet, turntable
4-858-284-00	(E) Carton

Reference Designation
P
PWH
PS
PSP
PSW
PSPW
R
K
RK
B
T
F
RF
BV

1/4 WATT CARBON RESISTORS (A)



Note: Circled letter (A) is applicable to European models only.

Ω	Part No.	Ω	Part No.	Ω	Part No.	Ω	Part No.	Ω	Part No.	Ω	Part No.	Ω	Part No.
1.0	1-244-601-11	10	1-244-625-11	100	1-244-649-11	1.0k	1-244-673-11	10k	1-244-697-11	100k	1-244-721-11	1.0M	1-244-745-11
1.1	1-244-602-11	11	1-244-626-11	110	1-244-650-11	1.1k	1-244-674-11	11k	1-244-698-11	110k	1-244-722-11	1.1M	1-244-746-11
1.2	1-244-603-11	12	1-244-627-11	120	1-244-651-11	1.2k	1-244-675-11	12k	1-244-699-11	120k	1-244-723-11	1.2M	1-244-747-11
1.3	1-244-604-11	13	1-244-628-11	130	1-244-652-11	1.3k	1-244-676-11	13k	1-244-700-11	130k	1-244-724-11	1.3M	1-244-748-11
1.5	1-244-605-11	15	1-244-629-11	150	1-244-653-11	1.5k	1-244-677-11	15k	1-244-701-11	150k	1-244-725-11	1.5M	1-244-749-11
1.6	1-244-606-11	16	1-244-630-11	160	1-244-654-11	1.6k	1-244-678-11	16k	1-244-702-11	160k	1-244-726-11	1.6M	1-244-750-11
1.8	1-244-607-11	18	1-244-631-11	180	1-244-655-11	1.8k	1-244-679-11	18k	1-244-703-11	180k	1-244-727-11	1.8M	1-244-751-11
2.0	1-244-608-11	20	1-244-632-11	200	1-244-656-11	2.0k	1-244-680-11	20k	1-244-704-11	200k	1-244-728-11	2.0M	1-244-752-11
2.2	1-244-609-11	22	1-244-633-11	220	1-244-657-11	2.2k	1-244-681-11	22k	1-244-705-11	220k	1-244-729-11	2.2M	1-244-753-11
2.4	1-244-610-11	24	1-244-634-11	240	1-244-658-11	2.4k	1-244-682-11	24k	1-244-706-11	240k	1-244-730-11	2.4M	1-244-754-11
2.7	1-244-611-11	27	1-244-635-11	270	1-244-659-11	2.7k	1-244-683-11	27k	1-244-707-11	270k	1-244-731-11	2.7M	1-244-755-11
3.0	1-244-612-11	30	1-244-636-11	300	1-244-660-11	3.0k	1-244-684-11	30k	1-244-708-11	300k	1-244-732-11	3.0M	1-244-756-11
3.3	1-244-613-11	33	1-244-637-11	330	1-244-661-11	3.3k	1-244-685-11	33k	1-244-709-11	330k	1-244-733-11	3.3M	1-244-757-11
3.6	1-244-614-11	36	1-244-638-11	360	1-244-662-11	3.6k	1-244-686-11	36k	1-244-710-11	360k	1-244-734-11	3.6M	1-244-758-11
3.9	1-244-615-11	39	1-244-639-11	390	1-244-663-11	3.9k	1-244-687-11	39k	1-244-711-11	390k	1-244-735-11	3.9M	1-244-759-11
4.3	1-244-616-11	43	1-244-640-11	430	1-244-664-11	4.3k	1-244-688-11	43k	1-244-712-11	430k	1-244-736-11	4.3M	1-244-760-11
4.7	1-244-617-11	47	1-244-641-11	470	1-244-665-11	4.7k	1-244-689-11	47k	1-244-713-11	470k	1-244-737-11	4.7M	1-244-761-11
5.1	1-244-618-11	51	1-244-642-11	510	1-244-666-11	5.1k	1-244-690-11	51k	1-244-714-11	510k	1-244-738-11	5.1M	1-244-762-11
5.6	1-244-619-11	56	1-244-643-11	560	1-244-667-11	5.6k	1-244-691-11	56k	1-244-715-11	560k	1-244-739-11		
6.2	1-244-620-11	62	1-244-644-11	620	1-244-668-11	6.2k	1-244-692-11	62k	1-244-716-11	620k	1-244-740-11		
6.8	1-244-621-11	68	1-244-645-11	680	1-244-669-11	6.8k	1-244-693-11	68k	1-244-717-11	680k	1-244-741-11		
7.5	1-244-622-11	75	1-244-646-11	750	1-244-670-11	7.5k	1-244-694-11	75k	1-244-718-11	750k	1-244-742-11		
8.2	1-244-623-11	82	1-244-647-11	820	1-244-671-11	8.2k	1-244-695-11	82k	1-244-719-11	820k	1-244-743-11		
9.1	1-244-624-11	91	1-244-648-11	910	1-244-672-11	9.1k	1-244-696-11	91k	1-244-720-11	910k	1-244-744-11		

PACKING MATERIALS AND ACCESSORIES

Ref. No.	Description
X-4857-003-0	(E) Weight Ass'y, main
2-054-619-00	(A) Spacer, cartridge
3-701-616-00	(A) Bag, polyethylene
3-701-630-00	(A) Bag, polyethylene
3-701-634-00	(A) Bag, polyethylene
3-701-806-00	(A) Adaptor, 45 rpm
3-770-584-11	(E) Manual, instruction
3-793-395-11	(B) Gauge, tracking error
3-794-123-11	(A) Label, caution
4-843-577-02	(A) Sheet, protection, dust cover
4-847-092-00	(C) Screwdriver
4-847-314-00	(C) Bag, polyethylene; main
4-852-078-00	(B) Holder, turntable
4-852-080-00	(B) Cushion, upper
4-852-081-00	(B) Cushion, lower
4-853-409-00	(B) Cushion, arm
4-857-047-00	(C) Sheet, turntable
4-858-284-00	(E) Carton

HARDWARE NOMENCLATURE

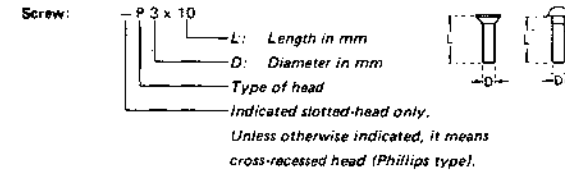

Reference Designation	Shape	Description	Remarks
SCREWS			
P		pan-head screw	binding-head (B) screw for replacement
PWH		pan-head screw with washer face	binding-head (B) screw and flat washer for replacement
PS PSP		pan-head screw with spring washer	binding-head (B) screw and spring washer for replacement
PSW PSPW		pan-head screw with spring and flat washers	binding-head (B) screw and spring and flat washers for replacement
R		round-head screw	binding-head (B) screw for replacement
K		flat-countersunk-head screw	
RK		oval-countersunk-head screw	
B		binding-head screw	
T		truss-head screw	binding-head (B) screw for replacement
F		flat-fillister-head screw	
RF		fillister-head screw	
BV		brazer-head screw	

Reference Designation	Shape	Description	Remarks
SELF-TAPPING SCREWS			
TA		self-tapping screw	ex: TA, P 3 x 10
PTP		pan-head self-tapping screw	binding-head self-tapping (TA, B) screw for replacement
PTPWH		pan-head self-tapping screw with washer face	binding-head self-tapping (TA, B) screw and flat washer for replacement
PTTWH		pan-head thread-rolling screw with washer face	binding-head (B) screw and flat washer for replacement
SET SCREWS			
SC		set screw	
SC		hexagon-socket set screw	ex: SC 2.6 x 4, hexagon socket
NUT			
N		nut	
WASHERS			
W		flat washer	
SW		spring washer	
LW		internal-tooth lock washer	ex: LW3, internal
LW		external-tooth lock washer	ex: LW3, external
RETAINING RINGS			
E		retaining ring	
G		grip-type retaining ring	

Sony Corporation

© 1978

78H0249-1