


SL-200ME

RMT-226

SERVICE MANUAL

ME Model

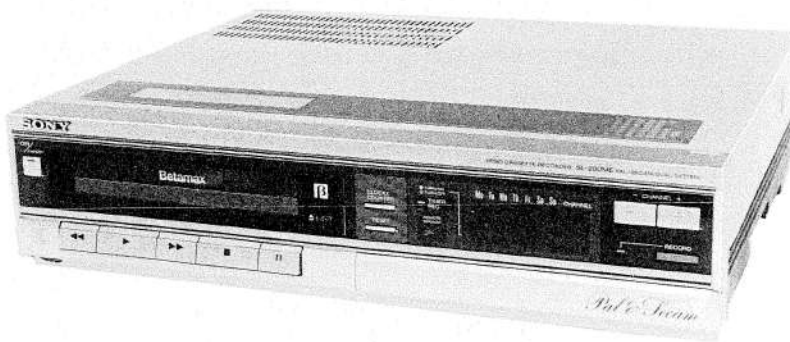

September, 1985

711B2 CHASSIS

This manual contains the adjustment method and SUPPLEMENT-1.

SPECIFICATIONS

System

Video recording system

Rotary two-head helical scanning

Video signal CCIR standards, PAL and SECAM colour

Aerial input 75-ohm, asymmetrical aerial socket

Channel coverage

VHF: Western European channels E2 - E12

UHF: Western European channels E21 - E68

(Up to 8 programmes can be preset.)

RF output signal

UHF channels E30 to E39 (variable)
75 ohms, unbalanced

Video

Input

VIDEO IN: BNC connector
1.0 V (p-p) ± 1.0 V (p-p)
75 ohms, unbalanced,
sync negative

Output

VIDEO OUT: BNC connector
1.0 V (p-p) ± 0.1 V (p-p)
75 ohms, unbalanced,
sync negative

Audio

Input

AUDIO IN: phono jack
47 kilohms, -10 dBs
(0 dBs = 0.775 V rms)

Output

AUDIO OUT: phono jack
Load impedance less than
10 kilohms
-10 dBs with 47 kilohms load,
unbalanced

Tape transport

Tape speed 18.73 mm/sec.

Maximum recording time

2 hours 10 min. (with Sony L-500 cassette)

3 hours 15 min. (with L-750)

Fast forward/rewind time

Within 5 min. (with L-500)

Timer

Clock

Crystal lock

Time indication

24-hour cycle

Timer setting

Only for recording

1 event/week, adjustable for any day or for all 7 days of the week

— Continued on next page —

Beta



VIDEO CASSETTE RECORDER

SONY®



TABLE OF CONTENTS


<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1. GENERAL					
1-1.	Precautions	4	3-13.	System Control Block Diagram	31
1-2.	Location and Function of Controls	5	3-14.	Audio Block Diagram	34
1-3.	Timer-Activated Recording	8	3-15.	Audio Level Diagram	36
1-4.	Clock Setting	10	3-16.	Tuner, Timer Block Diagram	37
2. DISASSEMBLY					
2-1.	Disassembly of Cabinet	11	3-17.	Power Supply Block Diagram	41
2-2.	Removal of the FU-40 Board	12	4. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS		
2-3.	Removal of the TT-13 Board	12	4-1.	Frame Schematic Diagram	43
2-4.	Removal of the VT-1 Board	13	4-2.	VT-1 Board	48
2-5.	Removal of the SA-13 Board	13	4-3.	SA-13, FU-40, LM-16, RD-21, CAPSTAN MOTOR, R STATOR (REEL MOTOR) Board	57
2-6.	Removal of the Power Block	14	4-4.	TT-13, PS-92, PS-93, VS-5 Board	65
2-7.	Removal of the Reel Block Assembly	14	4-5.	Semiconductors	73
2-8.	Removal of the FL Cassette Compartment Assembly	15	5. EXPLODED VIEWS		
2-9.	Internal View	16	5-1.	Front Panel and Cabinet Assemblies	75
3. DIAGRAMS					
3-1.	Circuit Boards Location	17	5-2.	Tuner, Timer and Power Assemblies	76
3-2.	Overall Block Diagram	18	5-3.	Front Loading Assemblies	77
3-3.	Video Block Diagram	21	5-4.	Chassis Assembly (1)	78
3-4.	Servo Block Diagram	23	5-5.	Chassis Assembly (2)	79
3-5.	System Control Circuit and Mechanism Block Interface	25	5-6.	Drum Assembly	80
3-6.	System Control Circuit and Timer Circuit Interface	25	5-7.	Reel Block Assembly	81
3-7.	System Control Circuit and Function Block Interface	26	5-8.	Headware List	82
3-8.	System Control Circuit and ITS Peripheral Circuit Interface	26	6. ELECTRICAL PARTS LIST		
3-9.	System Control Circuit and Reel Motor Control Interface	28	7. ADJUSTMENTS		
3-10.	System Control Circuit and Video Interface	28	REMOTE COMMANDER (RMT-226)		
3-11.	System Control Circuit and Servo Circuit Interface	29	1.	Remote Control Operation	148
3-12.	System Control Circuit and Audio Circuit Interface	29	2.	Schematic Diagram	149
			3.	Printed Wiring Board	150
			4.	Exploded View	151
			5.	Electrical Parts List	152

SECTION 1 GENERAL

OPERATING VOLTAGE

This unit operates on either 110 - 127 V ac or 220 - 240 V ac.

Before operating the unit to the power source, set the voltage selector at the rear to the appropriate position according to your local power supply.

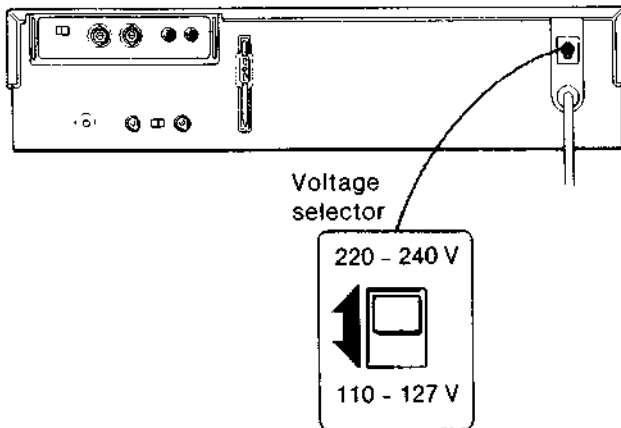

1-1. PRECAUTIONS

On safety

- Before operating the unit, make sure that the operating voltage of your unit is identical with that of your local power supply.
- Should any solid object or liquid fall into the cabinet, turn off the unit and have it checked by qualified personnel before operating it any further.
- To disconnect the mains lead (ac power cord), pull it out by the plug. Never pull the lead itself.
- The unit is not disconnected from the mains (ac power source) as long as it is connected to the mains outlet, even if the unit itself has been turned off.

On installation

- Allow adequate air circulation to prevent internal heat build-up. Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that may block the ventilation grille.
- Do not install the unit near heat sources such as radiators or air ducts or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.
- The unit is designed for operation in a horizontal position. Do not install it in an inclined position.
- Keep the unit and cassette tapes away from equipment with strong magnets, such as a microwave oven, large loudspeakers, etc.

On operation

- When the unit is not to be used for a long period, turn the unit off to conserve energy and to extend the useful life of your unit.
- Remove and store video cassettes after recording or playback. Always store the cassette in its case to keep the tape away from dust.

On cleaning

Clean the cabinet, panel and controls with a dry soft cloth. Do not use a moistened cloth or any type of solvent, such as alcohol or benzine, which might damage the finish.

On repacking

Do not throw away the carton and packing materials. They make an ideal container in which to transport the unit. When shipping the unit to another location, repack it as illustrated on the carton.

On colour broadcasting systems


This unit is designed to receive, record and play back programmes based on the PAL and SECAM colour systems.

- Tapes recorded with the French SECAM colour system can be played back on this unit but it is not possible to receive French TV broadcasts with this unit.
-

If you have any questions about this unit, contact your Sony dealer.

1-2. LOCATION AND FUNCTION OF CONTROLS

Front

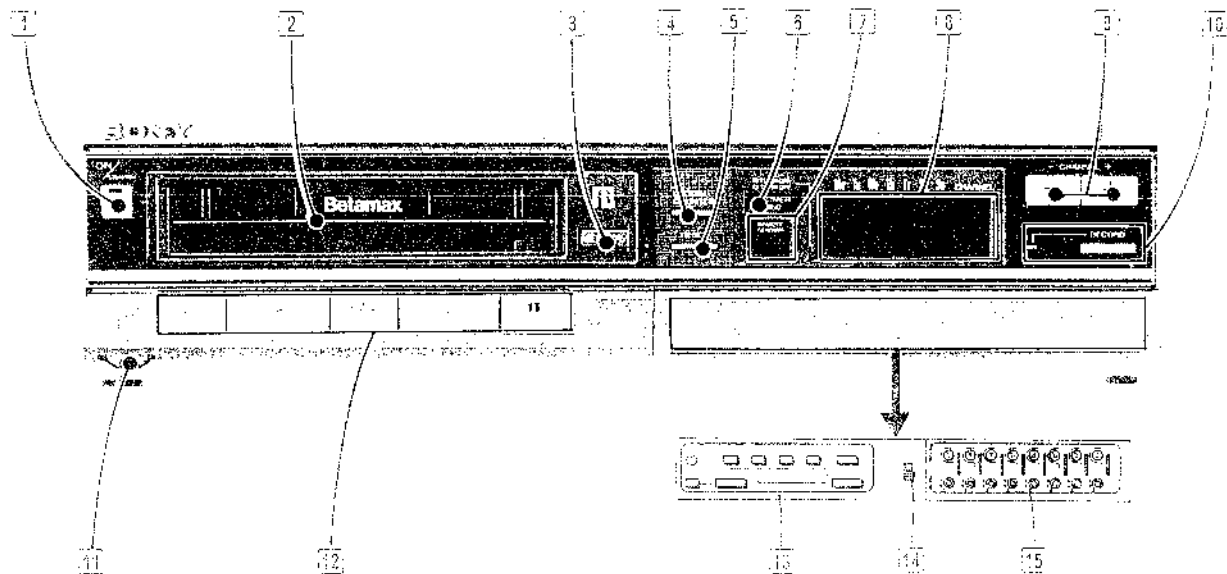

1] ON/STANDBY switch and indicator

Press to turn on the unit. The indicator will light up. Press again to turn it off.

The timer section will continue to operate and the time will be displayed even if the ON/STANDBY switch is off.

2] Cassette compartment

Insert a cassette after turning on the recorder.

3] EJECT button

Press to remove the cassette. This button does not function when the recorder is turned off.

4] CLOCK/COUNTER button

Press to set the display to the tape counter. To reset to clock, press it again.

5] RESET button

Press to set the tape counter reading to "0000" when the tape counter is displayed.


6] TIMER REC indicator

Lights when the TIMER REC ON/OFF button is pressed to set the recorder in timer recording standby mode. It remains lit until the timer recording is finished.

7] REMOTE SENSOR

Detects the remote control signal transmitted from the supplied Remote Commander.

8] Display window

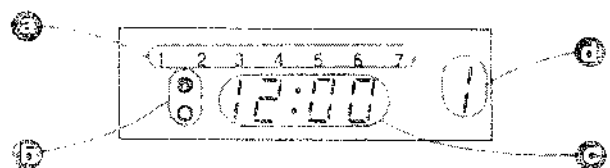

9] Day of the week indications

Turn-on and turn-off setting indications: The "●" mark shows the display is the turn-on time of the timer recording and the "○" mark shows the turn-off time.

Time and counter display: Usually shows the present time. When the CLOCK/COUNTER button is pressed, the display shows the counter number.

Channel number: Shows the channel number selected with the + and - CHANNEL buttons.

9] CHANNEL +/- buttons

Press + to advance or - to reverse the channel numbers.

10] RECORD button and indicator

Press to start recording. The indicator will light.


11] TRACKING control

If streaks or snow appear during the playback of a tape recorded on another recorder, turn this knob to obtain the best possible picture.

12 Function buttons

- ◀◀ **REW button**: Press to rewind the tape. Also used for the reverse picture search, skip scan and auto play operation.
- ▶ **PLAY button**: Press to play the tape back. Also used for auto play operation.
- ▶▶ **FF button**: Press to advance the tape rapidly. Also used for the forward picture search and skip scan operation.
- **STOP button**: Press to stop the tape.
- ⏸ **PAUSE button**: Press to stop the tape for a moment during recording or playback. A still picture will be seen during playback. Press again to release the pause mode. The indicator on the button lights during pause.

13 Buttons for clock and timer settings

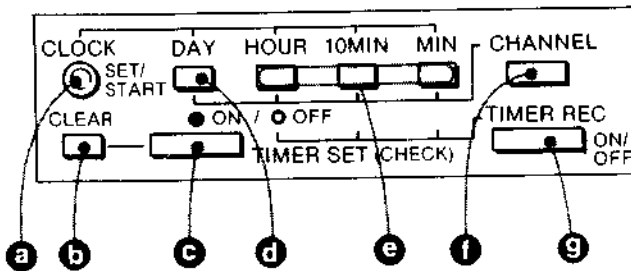


- a** **CLOCK button**: Press to initiate clock setting.
- b** **CLEAR button**: Press to clear the timer programme memorized.
- c** **TIMER SET (CHECK) button**: Press to initiate timer setting. This button is also used for checking, erasing or changing the timer setting.
- d** **DAY button**: Press to set the turn-on day of a timer recording.
- e** **HOUR, 10 MIN an MIN buttons**: Press to set the turn-on/off time of a timer recording.
- f** **CHANNEL button**: Press to select the TV channel to be recorded by the timer.
- g** **TIMER REC ON/OFF button**: Press to set the recorder to timer recording stand-by mode. Press it again to deactivate timer recording.

14 AFT (Automatic Fine Tuning) switch

Normally set to ON. The automatic fine tuning circuit locks in the signal and maintains a sharp picture.


15 Tuning section

Used to preset up to 8 TV stations.

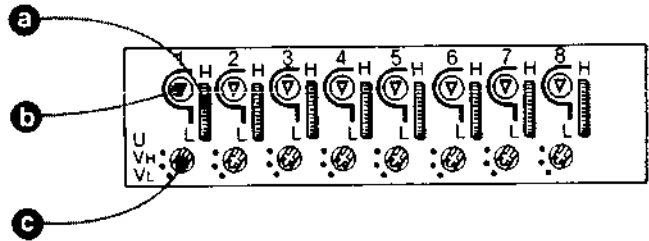

- a** **Tuning knob**: Turn until the desired station is properly tuned in.
- b** **Tuning indicator**: Indicates the approximate location of the channel being tuned in within the band.
- c** **Band select switch**: Using the ⊕ end of the supplied screwdriver, set to VL (VHF low band), Vh (VHF high band) or U (UHF) according to the station to be tuned in.

Rear

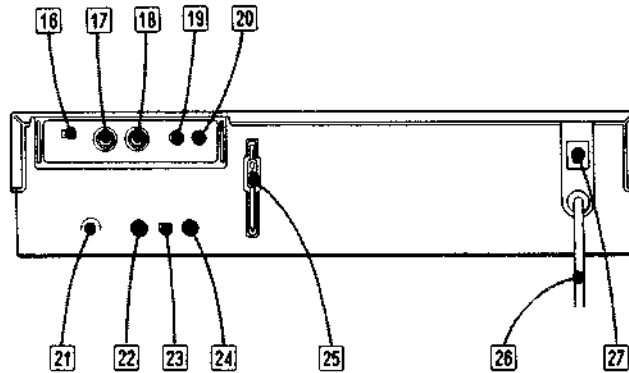

16 TEST SIGNAL switch

Set to ON to obtain the test pattern for adjusting the TV so that it can receive the signal from the recorder.

17 VIDEO OUT jack (BNC type)

Connect to the video input of another video cassette recorder or a video monitor.

18 VIDEO IN jack (BNC type)

Connect to the video output of a camera, another video cassette recorder, etc.

19 AUDIO OUT jack (phono type)

Connect to the audio input of a video monitor or video cassette recorder.

20 AUDIO IN jack (phono type)

Connect to the audio output of a camera or another video cassette recorder.

21 RF CHANNEL screw

If there is interference on the factory-preset channel for RF output and the signal of this recorder cannot be displayed clearly on the TV screen, adjust this screw using the ⊖ end of the supplied screwdriver.

22 AERIAL OUT socket

Connect the aerial input of the TV receiver using the supplied cable.

23 DX/LOCAL switch

Normally set this switch to DX. If the TV signal is very strong, set the switch to LOCAL using the ⊖ end of the supplied screwdriver.

24 AERIAL IN socket

Connect the aerial cable.

25 Screwdriver holder

Keep the supplied screwdriver here when not in use.

26 AC mains lead

27 Voltage selector

Set to 110 - 127 V or 220 - 240 V according to your local power line voltage.

1-3. TIMER-ACTIVATED RECORDING

Using the built-in timer, you can make one recording any day or every day, within 7 days.


Check before setting the timer

- Is the clock set to the correct day and correct time?
Timer setting can only be made after the clock has been set.
- Is a cassette inserted in the recorder?
- Is the cassette long enough to record the programmes?
- Does the cassette have a safety tab on the bottom?


Note: The timer cannot be set during recording or playback.

TO SET THE TIMER

Example: To record channel 2 broadcast from 9:00 AM to 11:25 AM on Friday.

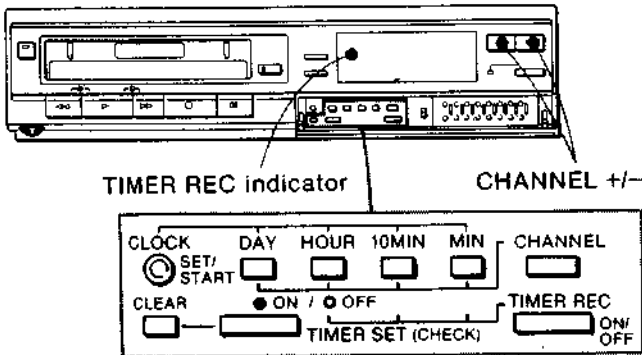


- 1** Press the **TIMER SET (CHECK)** button.
(If the recorder is off, it will be turned on automatically.)




- 2** Set the turn-on day by pressing the **DAY** button.
Day indication changes:
1234567 (every day) → 1 → 2 → ... 7




- 3** Set the turn-on time by pressing the **HOUR**, **10 MIN** and **MIN** buttons.




- 4** Select the channel to be recorded by pressing the **CHANNEL** button.




- 5** Press the **TIMER SET (CHECK)** button.

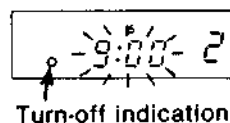

- 6** Set the turn-off time by pressing the **HOUR**, **10 MIN** and **MIN** buttons.



- 7** Press the **TIMER REC ON/OFF** button.



Current day and time

The **TIMER REC** indicator lights and the recorder is turned off.



At the preset turn-on time, recording will start automatically and will stop at the preset turn-off time.

Note

If the inserted cassette is at its end or does not have the safety tab, the cassette will be automatically ejected when the **TIMER REC ON/OFF** button is pressed.

ONCE THE TIMER REC INDICATOR HAS LIT UP, NO FUNCTION OF THE RECORDER CAN BE ACTIVATED, except for checking the timer setting.

To operate the recorder after setting the timer for recording, press the **TIMER REC ON/OFF** button so that the **TIMER REC** indicator goes off. To reactivate the timer recording standby mode, be sure to press the **TIMER REC ON/OFF** button again.

WHILE SETTING TIMER

To change the preset item

Press the **CLEAR** button and repeat the timer setting procedure from step 2.

To record to the end of the tape

Set the turn-off time to a time after the tape will reach its end.

BEFORE OR DURING TIMER RECORDING

To check the timer setting

Press the **TIMER SET (CHECK)** button. Each time the **TIMER SET (CHECK)** button is pressed, the display will change to the preset turn-on time, the turn-off time, then the current time.

During actual timer recording, only the turn-off time can be checked.

To change the settings

- 1 Press the **TIMER REC ON/OFF** button so that the **TIMER REC** indicator goes off.
- 2 Press the **TIMER SET (CHECK)** button.
- 3 Press the **CLEAR** button.
- 4 Repeat the timer setting procedure from step 2.

To erase the timer setting

- 1 Press the **TIMER REC ON/OFF** button so that the **TIMER REC** indicator goes off.
- 2 Press the **TIMER SET (CHECK)** button.
- 3 Press the **CLEAR** button.
The setting will be erased from the memory.

Note: When the **TIMER REC** indicator is lit, the timer setting cannot be erased.

If the tape reaches the end during timer recording

The recording will stop and the tape will be rewound to the beginning. Then after about a second, the recorder will be turned off.

To stop the on-going timer recording

Press the **TIMER REC ON/OFF** button so that the **TIMER REC** indicator goes off. The unit will be turned off automatically after about a second.

When a power interruption occurs

If the clock shows "0:00" and the dots blink, all the timer settings have been erased. Reset the clock time and the timer setting.

AFTER TIMER RECORDING

When a timer recording is finished, the setting (except the everyday setting) will be deleted automatically.

1-4. CLOCK SETTING

When you connect the mains lead to a mains outlet, the clock indicates "0:00" with the two dots blinking.

Example: To set the clock to 7:35 p.m. (19:35) on Tuesday



Time indication

AM		
12:00 (midnight)	1:00	11:00
↓	↓	↓
0:00	1:00	11:00


PM					
12:00 (noon)	1:00	2:00		10:00	11:00
↓	↓	↓		↓	↓
12:00	13:00	14:00		22:00	23:00

Day indication


Mo (Monday)	Tu (Tuesday)	We (Wednesday)	Th (Thursday)	Fr (Friday)	Sa (Saturday)	Su (Sunday)
↓	↓	↓	↓	↓	↓	↓
1	2	3	4	5	6	7

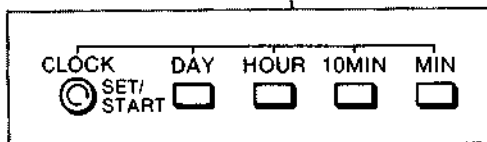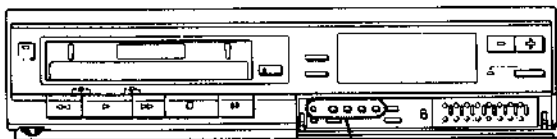


1 Press the CLOCK button.




2 Set the day by pressing the DAY button.




3 Set the hour by pressing the HOUR button.




4 Set the tens-digit of the minute by pressing the 10 MIN button.



5 Set the units-digit of the minute by pressing the MIN button.



6 With the time signal, press and immediately release the CLOCK button.



The clock now starts operating. The dots of the colon alternately blink every 30 seconds.

Note

If you press the CLOCK button for more than a second, "0:00" blinks to show that the clock adjustment is required again.

Zero second adjustment

If the CLOCK button is pressed when the upper dot of the colon is blinking, the clock is set to the time displayed 00 second. For example, if the clock time is 7:30, 20 seconds, it is set to 7:30, 00 second.

If the CLOCK button is pressed when the lower dot is blinking, the clock advances one minute and is set to the time displayed 00 second. For example, if the clock time is 7:30, 40 seconds, it is set to 7:31, 00 second.

To change the actual clock setting

Press the CLOCK button and repeat the clock setting procedure from step 1.

When power has been interrupted, the time indication reverts to "0:00", showing that the clock must be reset.

The DAY, HOUR, 10 MIN and MIN buttons can be pressed in two ways.



When you hold a button down, the digits will advance continuously until the button is released.




When you press and immediately release a button, the digits will advance by one.

SECTION 2 DISASSEMBLY


2-1. DISASSEMBLY OF CABINET

- 1) Remove the two case screws ①.
- 2) Remove the upper case ② in the direction shown by the arrow A.
- 3) Loosen the screw ③.
- 4) Remove the lower case ④ in the direction shown by the arrow B.
- 5) Remove the three claws ⑤ of the front panel in the direction shown by the arrow C.
- 6) Remove the front panel ⑥ in the direction shown by the arrow D.

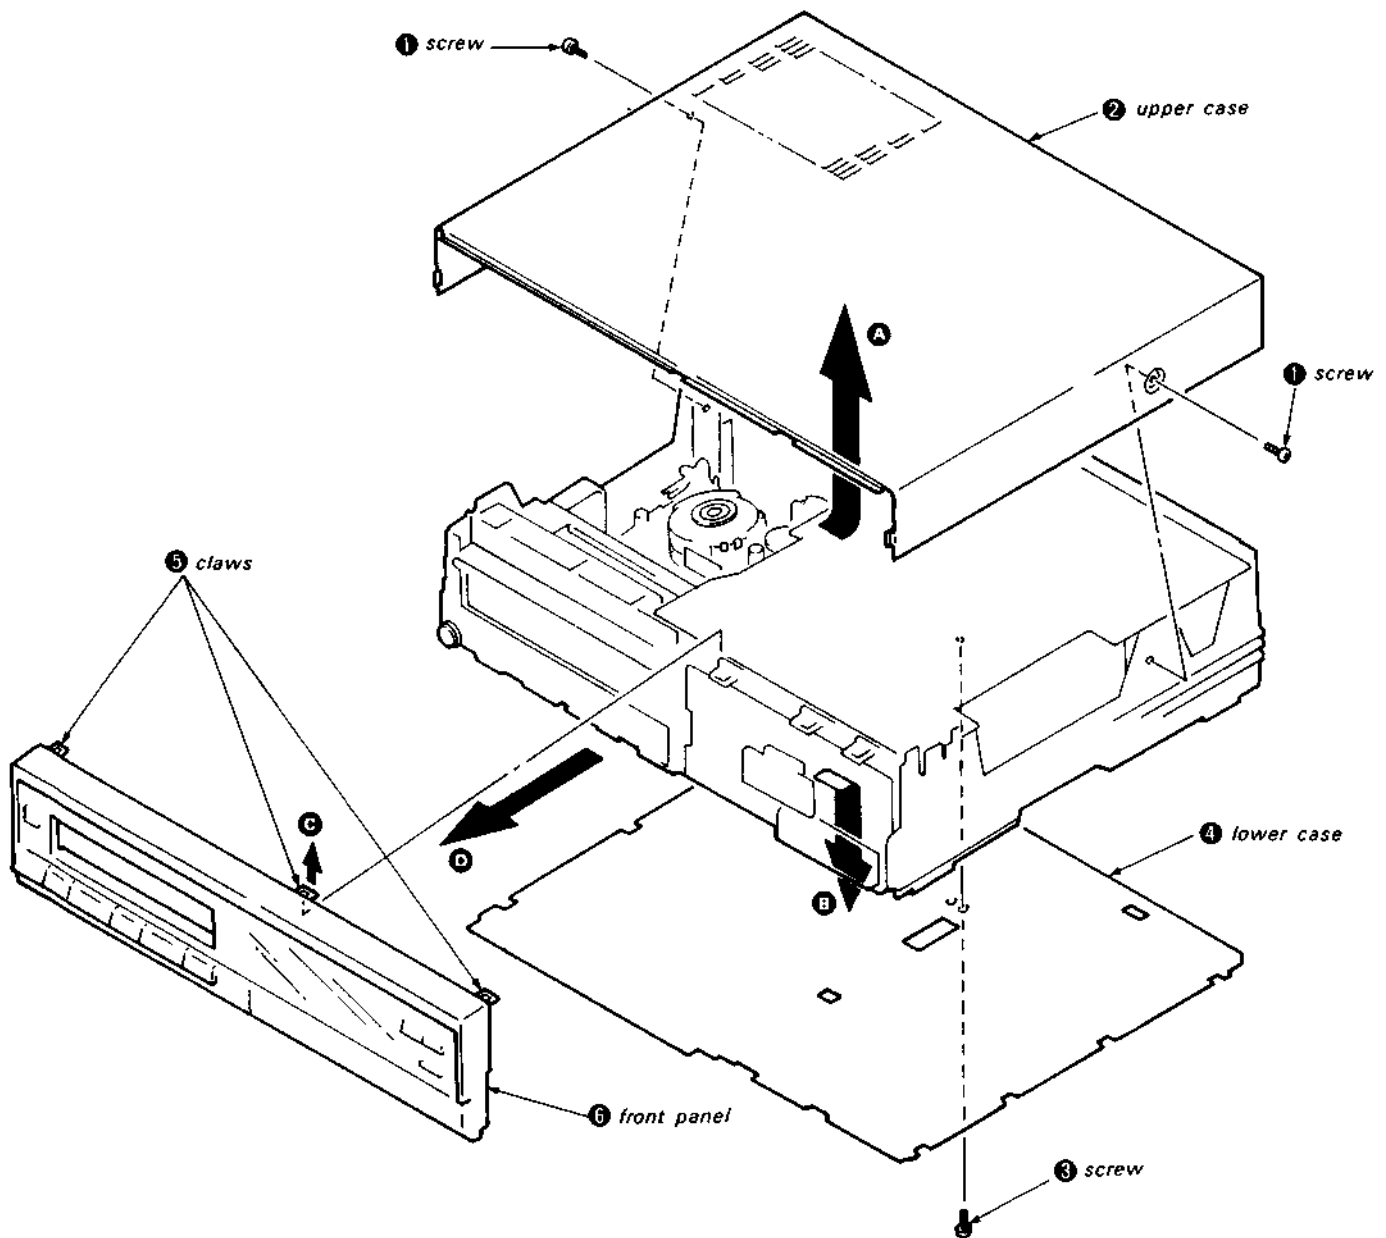


2-2. REMOVAL OF THE FU-40 BOARD

- 1) Remove the four claws ① in the direction shown by the arrow A .
- 2) Remove the FU-40 board ② in the direction shown by the arrow B .

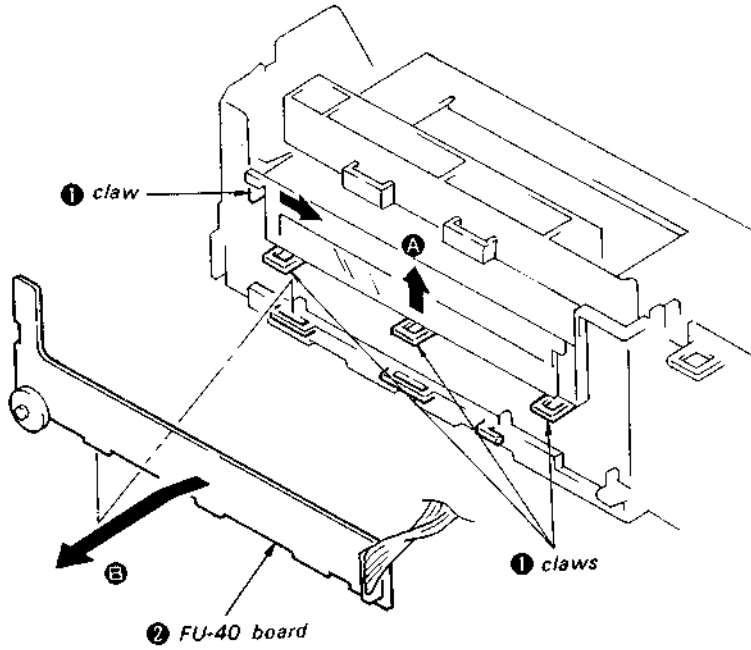


2-3. REMOVAL OF THE TT-13 BOARD

- 1) Remove the three claws ① in the direction shown by the arrow A .
- 2) Remove the TT-13 board ② in the direction shown by the arrow B .

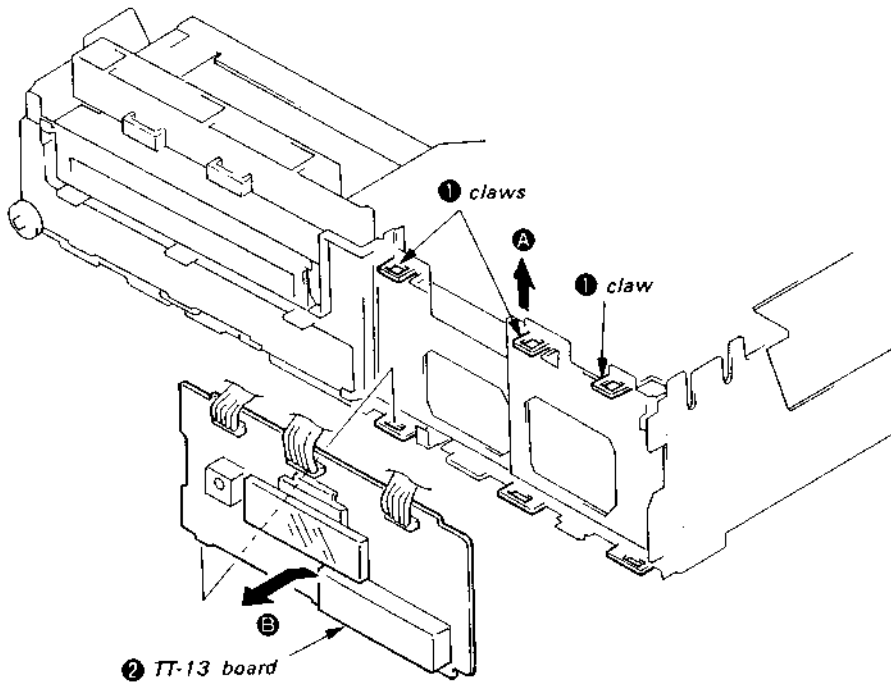


2-4. REMOVAL OF THE VT-1 BOARD

- 1) Remove the five screws ①.
- 2) Remove the two claws ② in the direction shown by the arrow A.
- 3) Open the VT-1 board ③ in the direction shown by the arrow B.

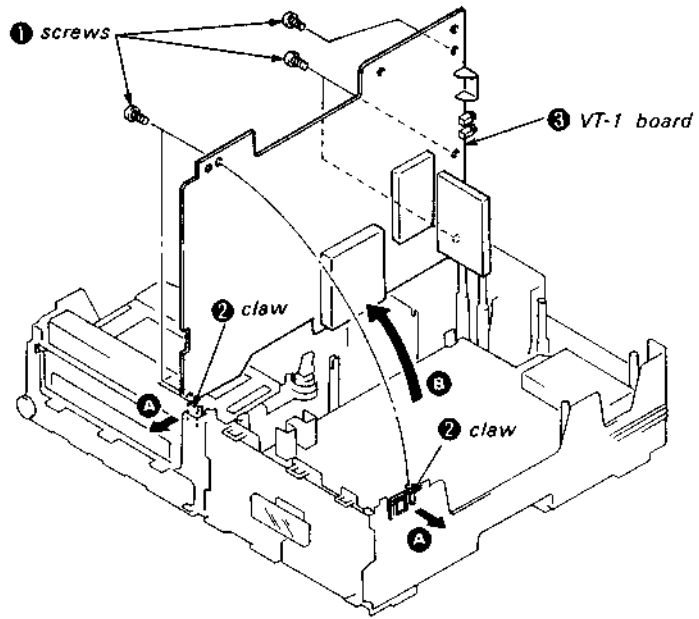


2-5. REMOVAL OF THE SA-13 BOARD

- 1) Refer to the "REMOVAL OF THE VT-1 BOARD" then remove the VT-1 board.
- 2) Remove the screw ①.
- 3) Remove the three claws ② in the direction shown by the arrow A.
- 4) Open the SA-13 board ③ in the direction shown by the arrow B.

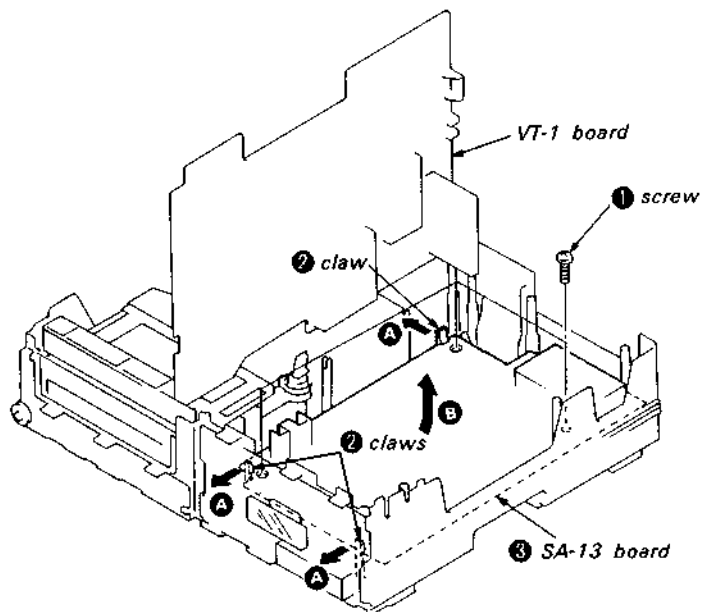


2-6. REMOVAL OF THE POWER BLOCK

- 1) Refer to the "REMOVAL OF THE VT-1 BOARD" then remove the VT-1 board.
- 2) Pull out the connector CN-1 (WHT) ① from the VT-1 board.
- 3) Pull out the connector CN-306 (WHT) ② from the SA-13 board.
- 4) Pull out the connector CN-002 (RED) ③ from the PS-92 board.
- 5) Remove the four screws ④.
- 6) Remove the power block ⑤ in the direction shown by the arrow.

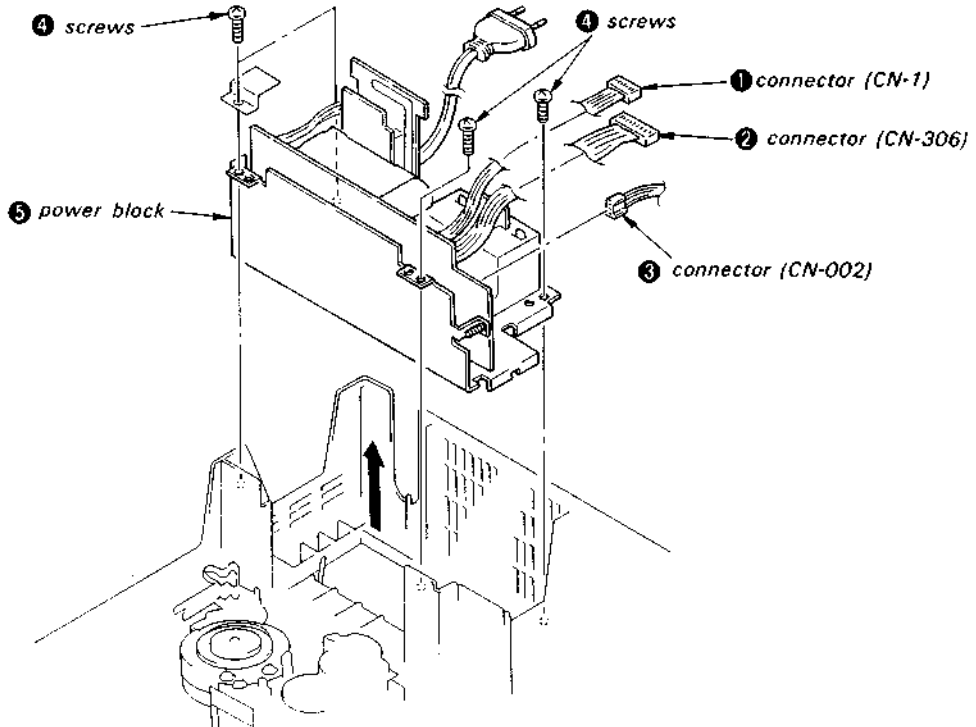


2-7. REMOVAL OF THE REEL BLOCK ASSEMBLY

- 1) Place the set upside down.
- 2) Remove the four screws ①.
- 3) Remove the reel block assembly ② in the direction shown by the arrow.

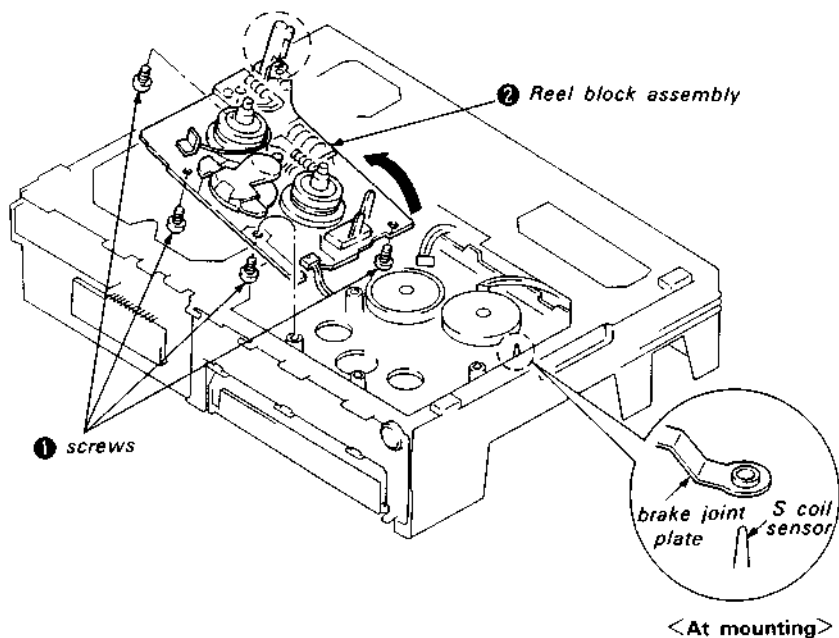


2-8. REMOVAL OF THE FL CASSETTE COMPARTMENT ASSEMBLY

- 1) Refer to the "REMOVAL OF THE VT-1 BOARD" then remove the VT-1 board.
- 2) Remove the screw ① then remove the retainer upper case ②.
- 3) Remove the three screws ③.
- 4) Remove two claws ④ then remove the planet gear holder ⑤.
- 5) Remove the timing belt (loading belt) ⑥ from the internal gear ⑨.
- 6) Pull out the connector CN-9 (BLK) ⑦ from the SA-13 board.
- 7) Remove the FL cassette compartment assembly ⑧ in the direction shown by the arrow.

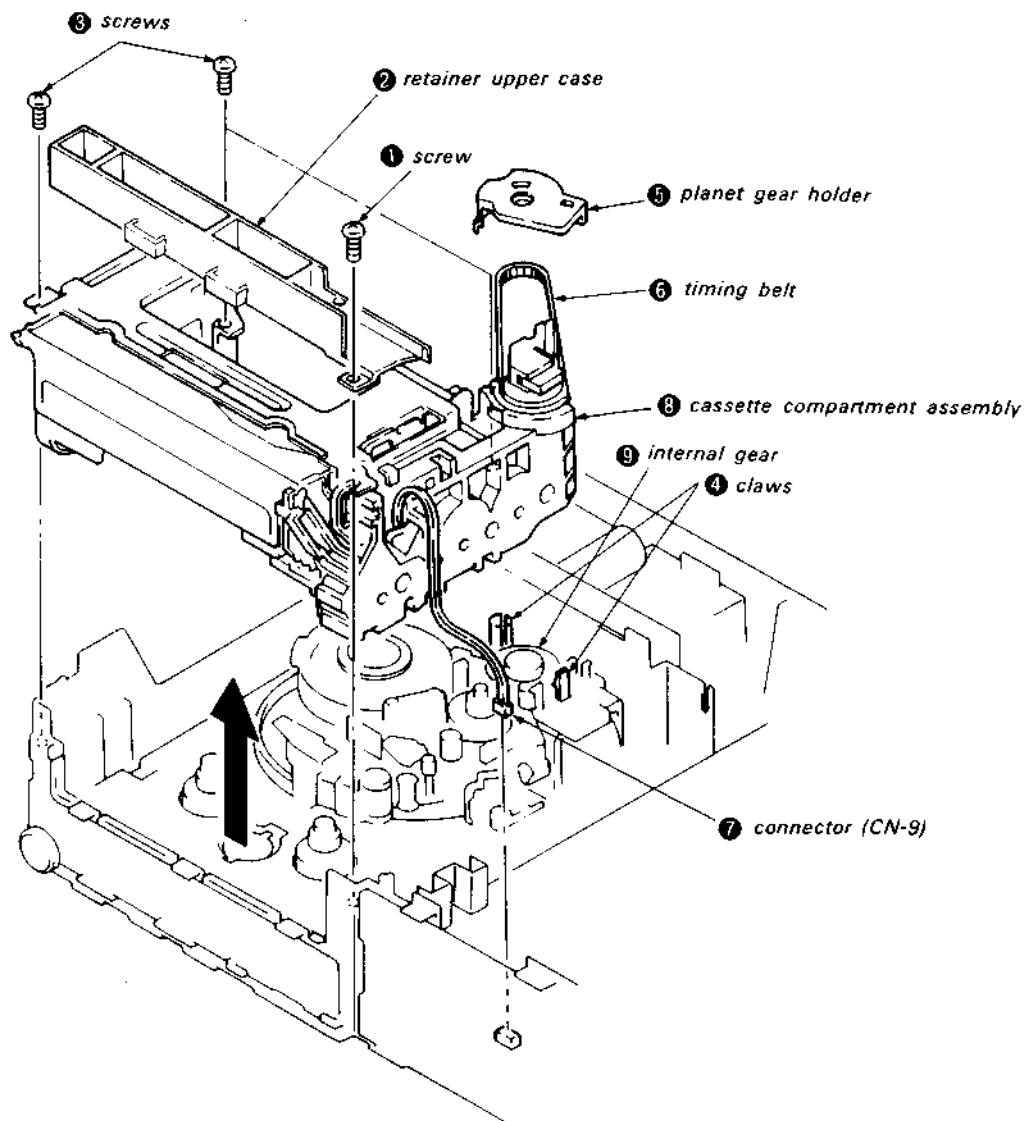


2-9. INTERNAL VIEW

--Top side--

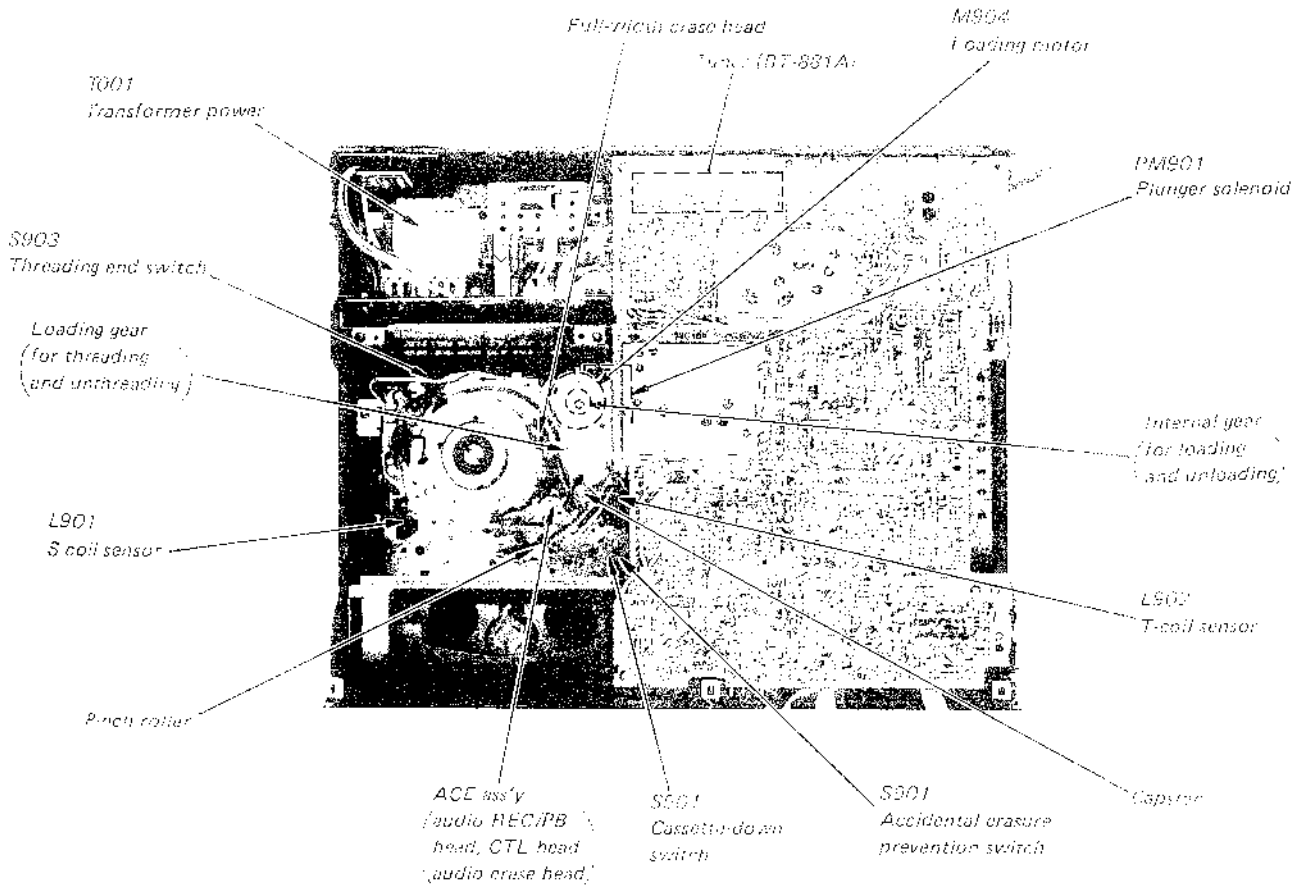


--Bottom side--

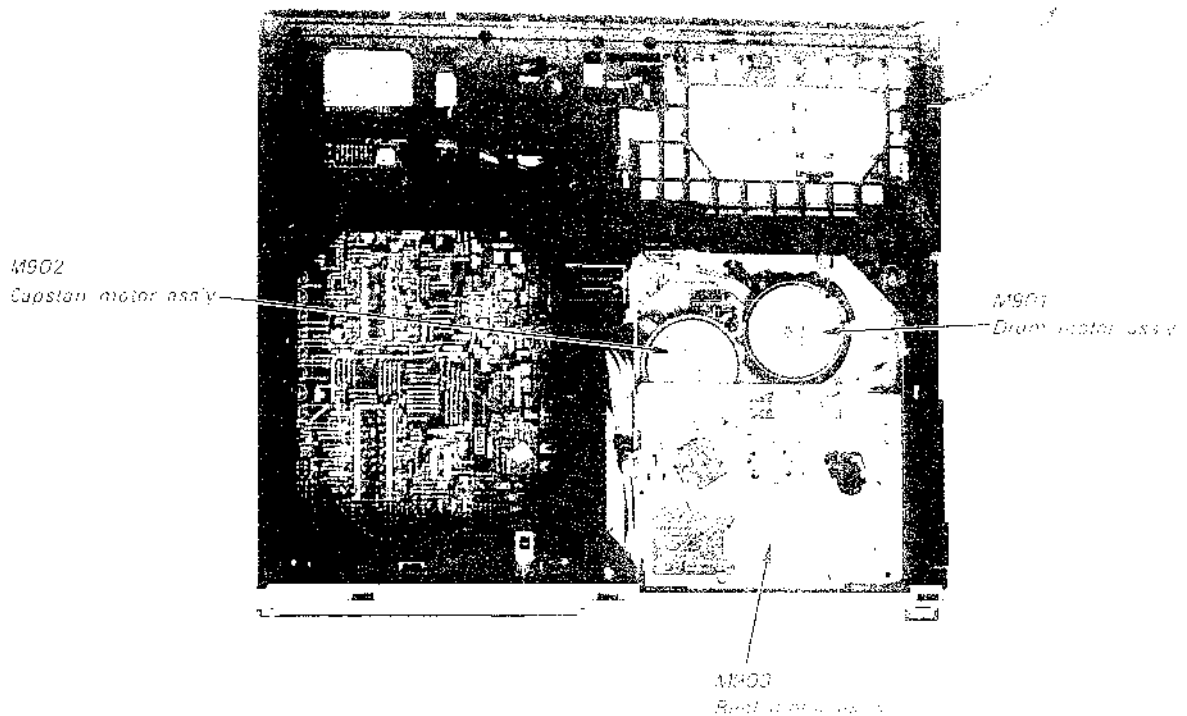



SECTION 3 DIAGRAMS

3-1. CIRCUIT BOARDS LOCATION

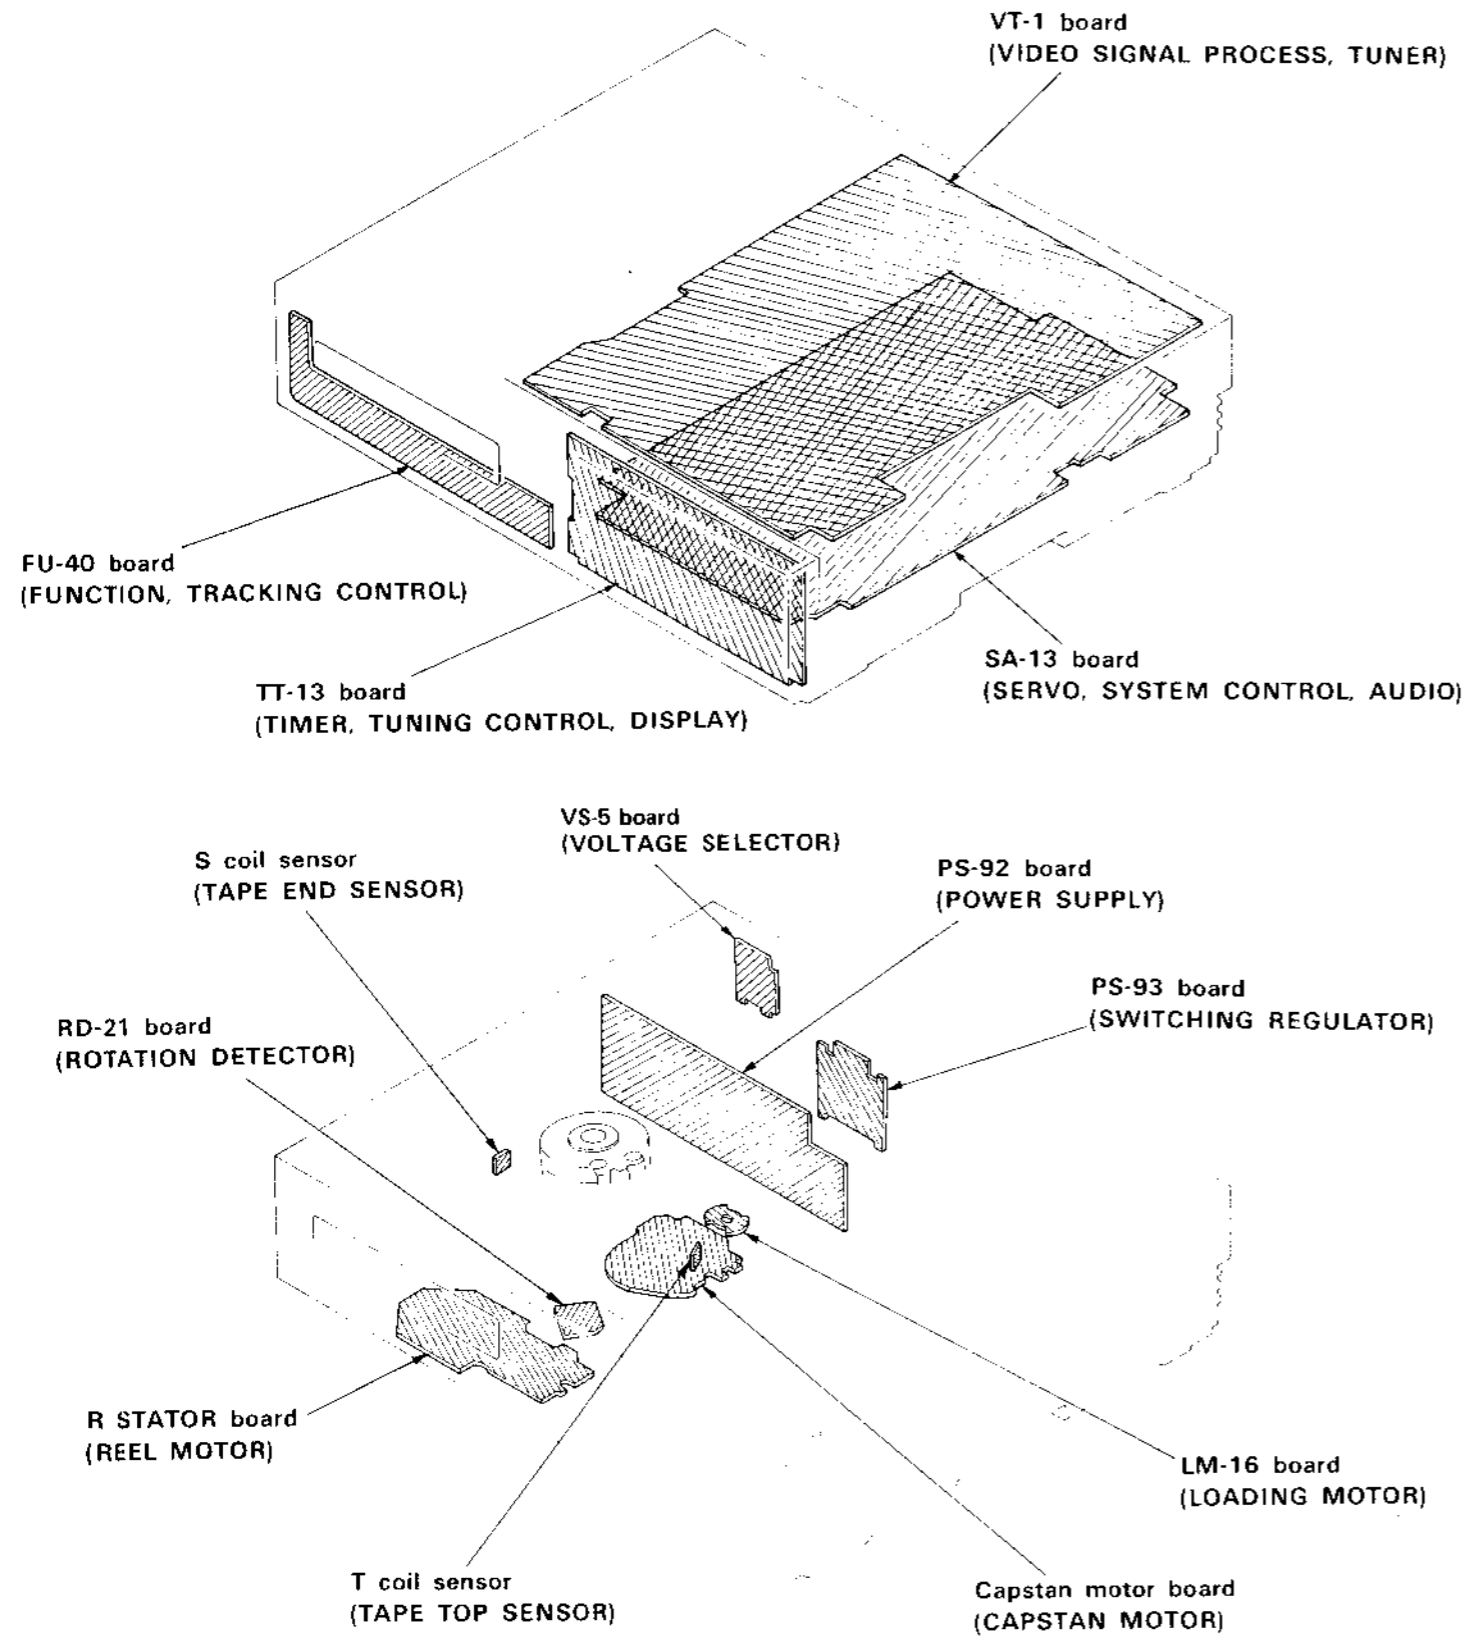


3-2. OVERALL BLOCK DIAGRAM

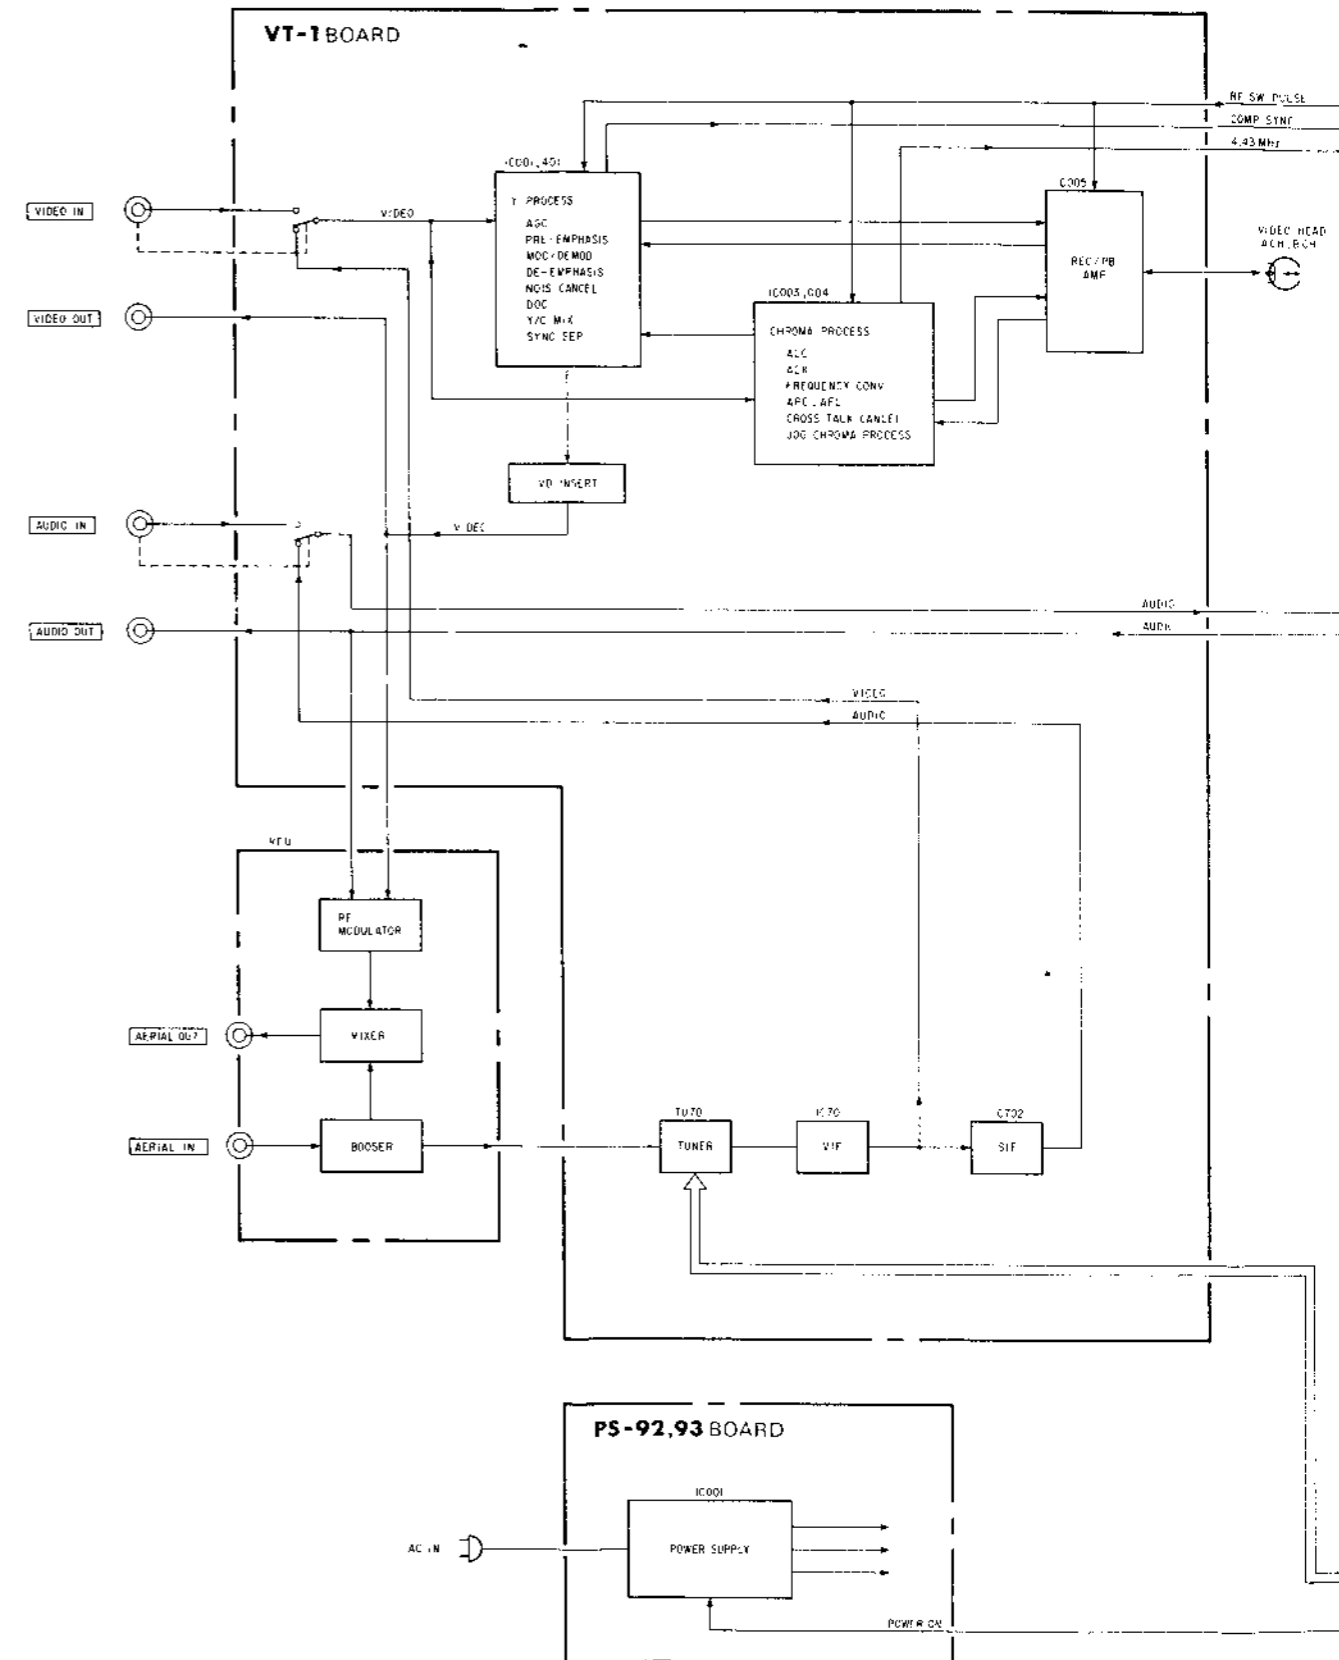

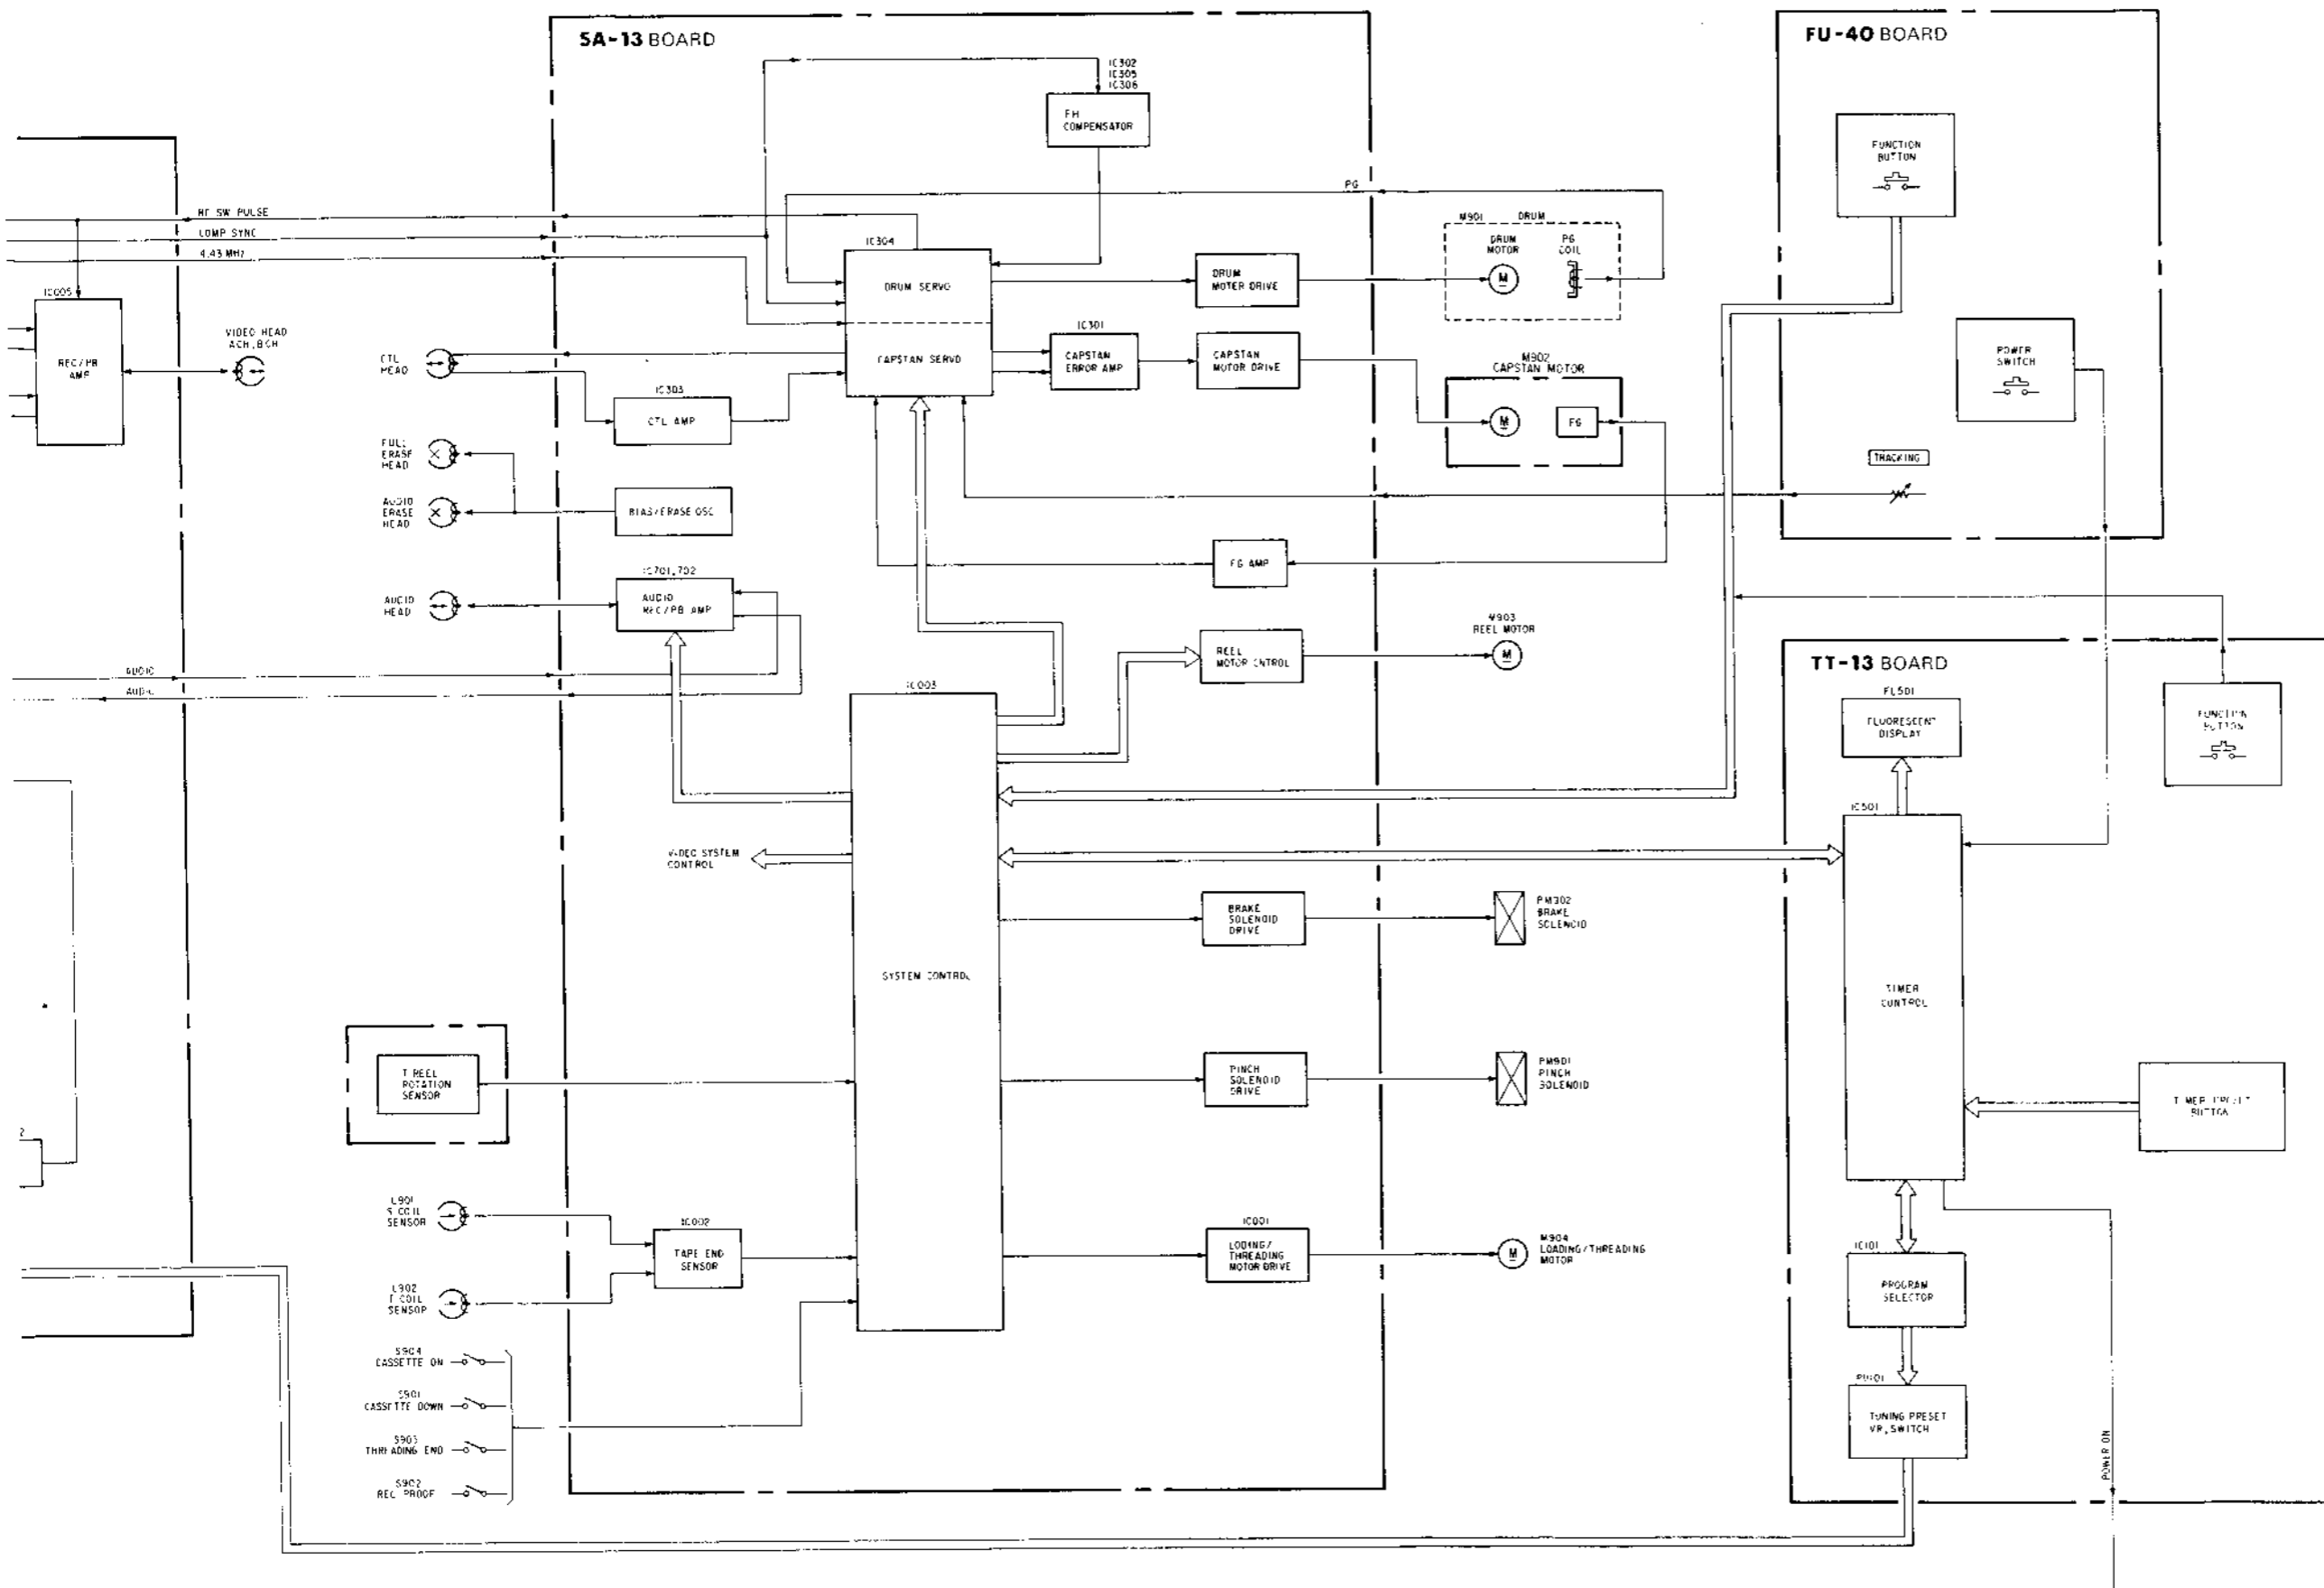

3.4. SERVO BLOCK DIAGRAM

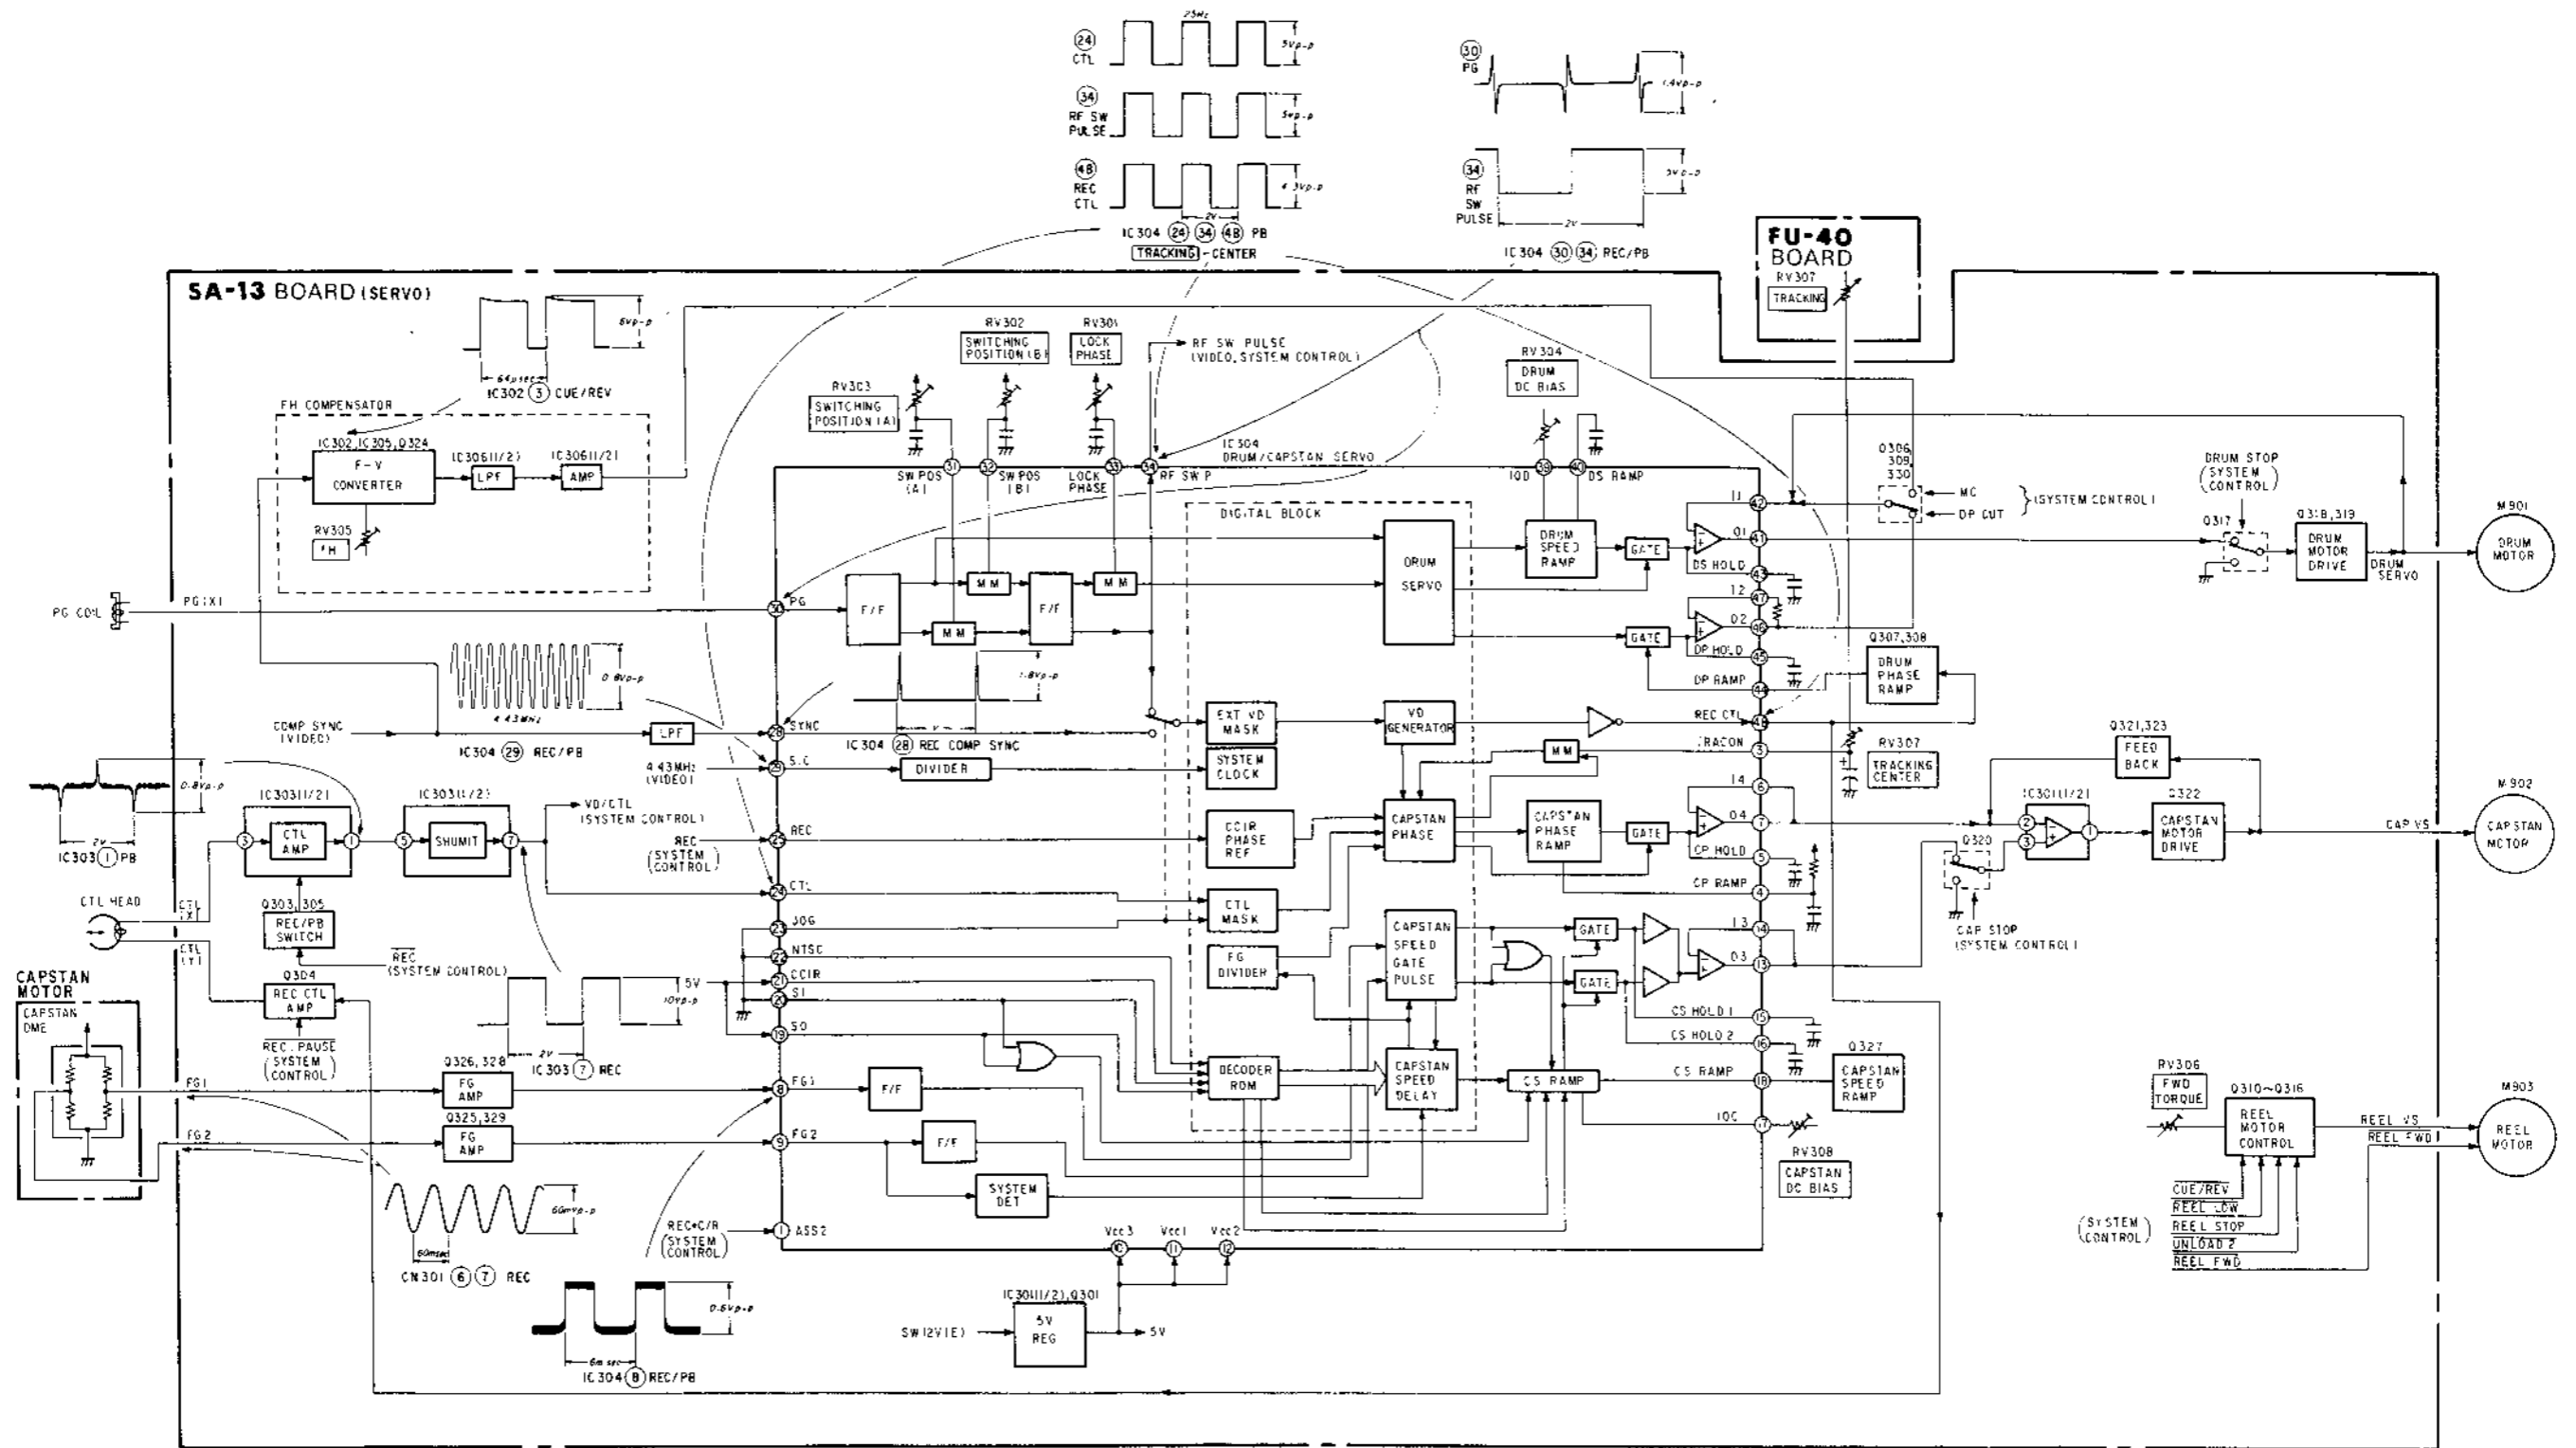

3-5. SYSTEM CONTROL CIRCUIT AND MECHANISM BLOCK INTERFACE

MODE			EJECTED	LOADING	THREADING	STOP	UN-THREADING	UN-LOADING	FF	REW	PB	PB-PAUSE	PICTURE SEARCH		REC	REC-PAUSE	TIMER REC	FR SEARCH	
SIGNAL	I/O	Pin No.											CUE	REV				CUE	REV
TOP/END	I	IC003 3pin	H	H	H	L	H	H	L	H	L	L	L	H	L	L	L	L	H
LOAD	O	IC003 5pin	H	L	L	H	H	H	H	H	H	H	H	H	H	H	H	H	H
UNLOAD	O	IC003 6pin	H	H	H	H	L	L	H	H	H	H	H	H	H	H	H	H	H
REC PROOF	I	IC003 13pin	H	H	H/L	H/L	H/L	H	H/L	H/L	H/L	H/L	H/L	H/L	L	L	L	H/L	H/L
C-ON	I	IC003 15pin	H	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
C-DWN	I	IC003 16pin	H	H	L	L	L	H	L	L	L	L	L	L	L	L	L	L	L
LD END	I	IC003 17pin	H	H	H	L	H	H	L	L	L	L	L	L	L	L	L	L	L
UNBRK S	O	IC003 21pin	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H
UNBRK H	O	IC003 22pin	H	H	L	H	L	H	L	L	L	H	L	L	L	H	L	L	L
PINCH S	O	IC003 23pin	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H
PINCH H	O	IC003 24pin	H	L	H	H	H	L	H	H	L	H	L	L	L	H	L	H	H

3-6. SYSTEM CONTROL CIRCUIT AND TIMER CIRCUIT INTERFACE

MODE			STOP	FF	REW	PB	PB-PAUSE	PICTURE SEARCH		REC	REC-PAUSE	TIMER REC	FR SEARCH	
SIGNAL	I/O	Pin No.						CUE	REV				CUE	REV
COUNTER RESET	I	IC003 19pin												
RT RQST	I	IC003 28pin												
SC	O	IC003 30pin												
RTSD	I	IC003 31pin												
SSD	O	IC003 33pin												
REC READY	O	IC003 42pin	H/L	H	H	H	H	H	H	H	H	L	H	H

3-7. SYSTEM CONTROL CIRCUIT AND FUNCTION BLOCK INTE

MODE			STOP	FF	REW	PB
SIGNAL	I/O	Pin No.				
C-IN LED*1	O	IC003 4pin	L	L	L	L
EJECT-K	I	IC003 34pin	H	H	H	H
STOP-K	I	IC003 35pin	H	H	H	H
FF-K	I	IC003 36pin	H	H	H	H
REW-K	I	IC003 37pin	H	H	H	H
PB-K	I	IC003 38pin	H	H	H	H
PAUSE-K	I	IC003 39pin	H	H	H	H
REC-K	I	IC003 40pin	H	H	H	H
TV/VTR K*1	I	IC003 41pin	H	H	H	H
TV/VTR LED*1	O	IC003 43pin	H/L	H/L	H/L	H/L
FF LED*1	O	IC003 44pin	H	L	H	H
REW LED*1	O	IC003 45pin	H	H	L	H
PB LED*1	O	IC003 46pin	H	H	H	L
PAUSE LED	O	IC003 47pin	H	H	H	H
REC LED	O	IC003 48pin	H	H	H	H

*1 Not used

3-8. SYSTEM CONTROL CIRCUIT AND ITS PERIPHERAL CIRCUIT

MODE			STOP	FF	REW	PB
SIGNAL	I/O	Pin No.				
TOP/END	O	IC003 3pin	L	L	H	L
TEND*1	I	IC003 9pin	H	H	H	H

*1 "L" at tape end.

3-7. SYSTEM CONTROL CIRCUIT AND FUNCTION BLOCK INTERFACE

PB	PB·PAUSE	PICTURE SEARCH		REC	REC·PAUSE	TIMER REC	FR SEARCH	
		CUE	REV				CUE	REV
L	L	L	H	L	L	L	L	H
H	H	H	H	H	H	H	H	H
H	H	H	H	H	H	H	H	H
H/L	H/L	H/L	H/L	L	L	L	H/L	H/L
L	L	L	L	L	L	L	L	L
L	L	L	L	L	L	L	L	L
L	L	L	L	L	L	L	L	L
H	H	H	H	H	H	H	H	H
L	H	L	L	L	H	L	L	L
H	H	H	H	H	H	H	H	H
L	H	L	L	L	H	L	H	H

SIGNAL	MODE		STOP	FF	REW	PB	PB·PAUSE	PICTURE SEARCH		REC	REC·PAUSE	TIMER REC	FR SEARCH	
	I/O	Pin No.						CUE	REV				CUE	REV
C·IN LED*1	O	IC003 4pin	L	L	L	L	L	L	L	L	L	L	L	L
EJECT·K	I	IC003 34pin	H	H	H	H	H	H	H	H	H	H	H	H
STOP·K	I	IC003 35pin	H	H	H	H	H	H	H	H	H	H	H	H
FF·K	I	IC003 36pin	H	H	H	H	H	L	H	H	H	H	L	H
REW·K	I	IC003 37pin	H	H	H	H	H	H	L	H	H	H	H	L
PB·K	I	IC003 38pin	H	H	H	H	H	H	H	H	H	H	H	H
PAUSE·K	I	IC003 39pin	H	H	H	H	H	H	H	H	H	H	H	H
REC·K	I	IC003 40pin	H	H	H	H	H	H	H	H	H	H	H	H
TV/VTR K*1	I	IC003 41pin	H	H	H	H	H	H	H	H	H	H	H	H
TV/VTR LED*1	O	IC003 43pin	H/L	H/L	H/L	H/L	H/L	H/L	H/L	H/L	H/L	H/L	H/L	H/L
FF LED*1	O	IC003 44pin	H	L	H	H	H	L	H	H	H	H	L	H
REW LED*1	O	IC003 45pin	H	H	L	H	H	H	L	H	H	H	H	L
PB LED*1	O	IC003 46pin	H	H	H	L	L	L	L	H	H	H	L	L
PAUSE LED	O	IC003 47pin	H	H	H	H	L	H	H	H	L	H	H	H
REC LED	O	IC003 48pin	H	H	H	H	H	H	H	L	L	L	H	H

*1 Not used

REC·PAUSE	TIMER REC	FR SEARCH	
		CUE	REV
H	L	H	H

3-8. SYSTEM CONTROL CIRCUIT AND ITS PERIPHERAL CIRCUIT INTERFACE

SIGNAL	MODE		STOP	FF	REW	PB	PB·PAUSE	PICTURE SEARCH		REC	REC·PAUSE	TIMER REC	FR SEARCH	
	I/O	Pin No.						CUE	REV				CUE	REV
TOP/END	O	IC003 3pin	L	L	H	L	L	L	H	L	L	L	L	H
TEND*1	I	IC003 9pin	H	H	H	H	H	H	H	H	H	H	H	H

*1 "L" at tape end.

3-9. SYSTEM CONTROL CIRCUIT AND REEL MOTOR CONTROL CIRCUIT INTERFACE

MODE			EJECTED	LOADING	THREADING	STOP	UN-THREADING	UN-LOADING	FF	REW	PB	PB-PAUSE	PICTURE SEARCH		REC	REC-PAUSE	TIMER REC	FR SEARCH		
SIGNAL	I/O	Pin No.											CUE	REV				CUE	REV	
F/R*1	O	IC003 11pin																		
REEL FG	I	IC003 12pin																		
S REEL FG*1	I	IC003 18pin																		
CUE/REV	O	IC003 54pin	L	L	L	L	L	L	L	L	L	L	H	H	L	L	L	H	H	
UNLOAD 2	O	IC003 55pin	H	H	H	H	L	H	H	H	H	H	H	H	H	H	H	H	H	
REEL LOW	O	IC003 58pin	L	L	H	L	L	L	L	L	H	H	L	L	H	H	H	L	L	
REEL FWD	O	IC003 59pin	L	L	L	L	L	L	L	H	L	L	L	H	L	L	L	L	H	
REEL STOP	O	IC003 60pin	H	H	L	H	L	H	L	L	L	H	L	L	L	H	L	L	L	

*1 Not used.

3-10. SYSTEM CONTROL CIRCUIT AND VIDEO CIRCUIT INTERFACE

MODE			STOP (E-E)	FF	REW	PB	PB-PAUSE	PICTURE SEARCH		REC	REC-PAUSE	TIMER REC	FR SEARCH	
SIGNAL	I/O	Pin No.						CUE	REV				CUE	REV
PB	O	IC003 52pin	L	L	L	H	H	H	H	L	L	L	H	H
REC-PAUSE	O	IC003 53pin	H	H	H	H	H	H	H	L	H	L	H	H
V MUTE	O	IC003 56pin	L	L	L	L	L	L	L	L	L	L	L	L
MC	O	IC003 57pin	L	L	L	L	H	H	H	L	L	L	H	H

3-11. SYSTEM CONTROL CURCUIT AND SERVO C

MODE			STOP	FF	R
SIGNAL	I/O	Pin No.			
CAP RVS*1	O	IC003 10pin			
DP CUT	O	IC003 14pin	L	L	
VD/CTL	I	IC003 29pin		CTL	C
REC-LED	O	IC003 48pin	H	H	
DRUM STOP	O	IC003 50pin	H	L	
CAP STOP	O	IC003 51pin	H	H	
PB	O	IC003 52pin	L	L	
REC-PAUSE	O	IC003 53pin	H	H	
CUE/REV	O	IC003 54pin	L	L	
MC	O	IC003 57pin	L	L	
REC C/R	O	IC003 61pin	L	L	

3-12. SYSTEM CONTROL CURCUIT AND AUDIO CII

MODE			STOP (E-E)	FF	R
SIGNAL	I/O	Pin No.			
A MUTE	O	IC003 7pin	L	L	
B CONT	O	IC003 8pin	H	H	
PB	O	IC003 52pin	L	L	

3-11. SYSTEM CONTROL CURCUIT AND SERVO CURCUIT INTERFACE

PB-PAUSE	PICTURE SEARCH		REC	REC-PAUSE	TIMER REC	FR SEARCH	
	CUE	REV				CUE	REV
L	H	H	L	L	L	H	H
H	H	H	H	H	H	H	H
H	L	L	H	H	H	L	L
L	L	H	L	L	L	L	H
H	L	L	L	H	L	L	L


SIGNAL	MODE		STOP	FF	REW	PB	PB-PAUSE	PICTURE SEARCH		REC	REC-PAUSE	TIMER REC	FR SEARCH	
	I/O	Pin No.						CUE	REV				CUE	REV
CAP RVS ⁺¹	O	IC003 10pin												
DP CUT	O	IC003 14pin	L	L	L	L	L	H	H	L	L	L	H	H
VD/CTL	I	IC003 29pin		CTL	CTL	CTL		CTL	CTL	VD		VD	CTL	CTL
REC-LED	O	IC003 48pin	H	H	H	H	H	H	H	L	L	L	H	H
DRUM STOP	O	IC003 50pin	H	L	L	L	L	L	L	L	L	L	L	L
CAP STOP	O	IC003 51pin	H	H	H	L	L	L	L	L	L	L	H	H
PB	O	IC003 52pin	L	L	L	H	H	H	H	L	L	L	H	H
REC-PAUSE	O	IC003 53pin	H	H	H	H	H	H	H	L	H	L	H	H
CUE/REV	O	IC003 54pin	L	L	L	L	L	H	H	L	L	L	H	H
MC	O	IC003 57pin	L	L	L	L	H	H	H	L	L	L	H	H
REC C/R	O	IC003 61pin	L	L	L	L	L	H	H	H	L	H	H	H


TIMER REC	FR SEARCH	
	CUE	REV
L	H	H
L	H	H
L	L	L
L	H	H


3-12. SYSTEM CONTROL CURCUIT AND AUDIO CIRCUIT INTERFACE


SIGNAL	MODE		STOP (E-E)	FF	REW	PB	PB-PAUSE	PICTURE SEARCH		REC	REC-PAUSE	TIMER REC	FR SEARCH	
	I/O	Pin No.						CUE	REV				CUE	REV
A MUTE	O	IC003 7pin	L	L	L	L	H	H	H	L	L	L	H	H
B CONT	O	IC003 8pin	H	H	H	H	H	H	H	L	H	L	H	H
PB	O	IC003 52pin	L	L	L	H	H	H	H	L	L	L	H	H

3-13. SYSTEM CONTROL BLOCK DIAGRAM


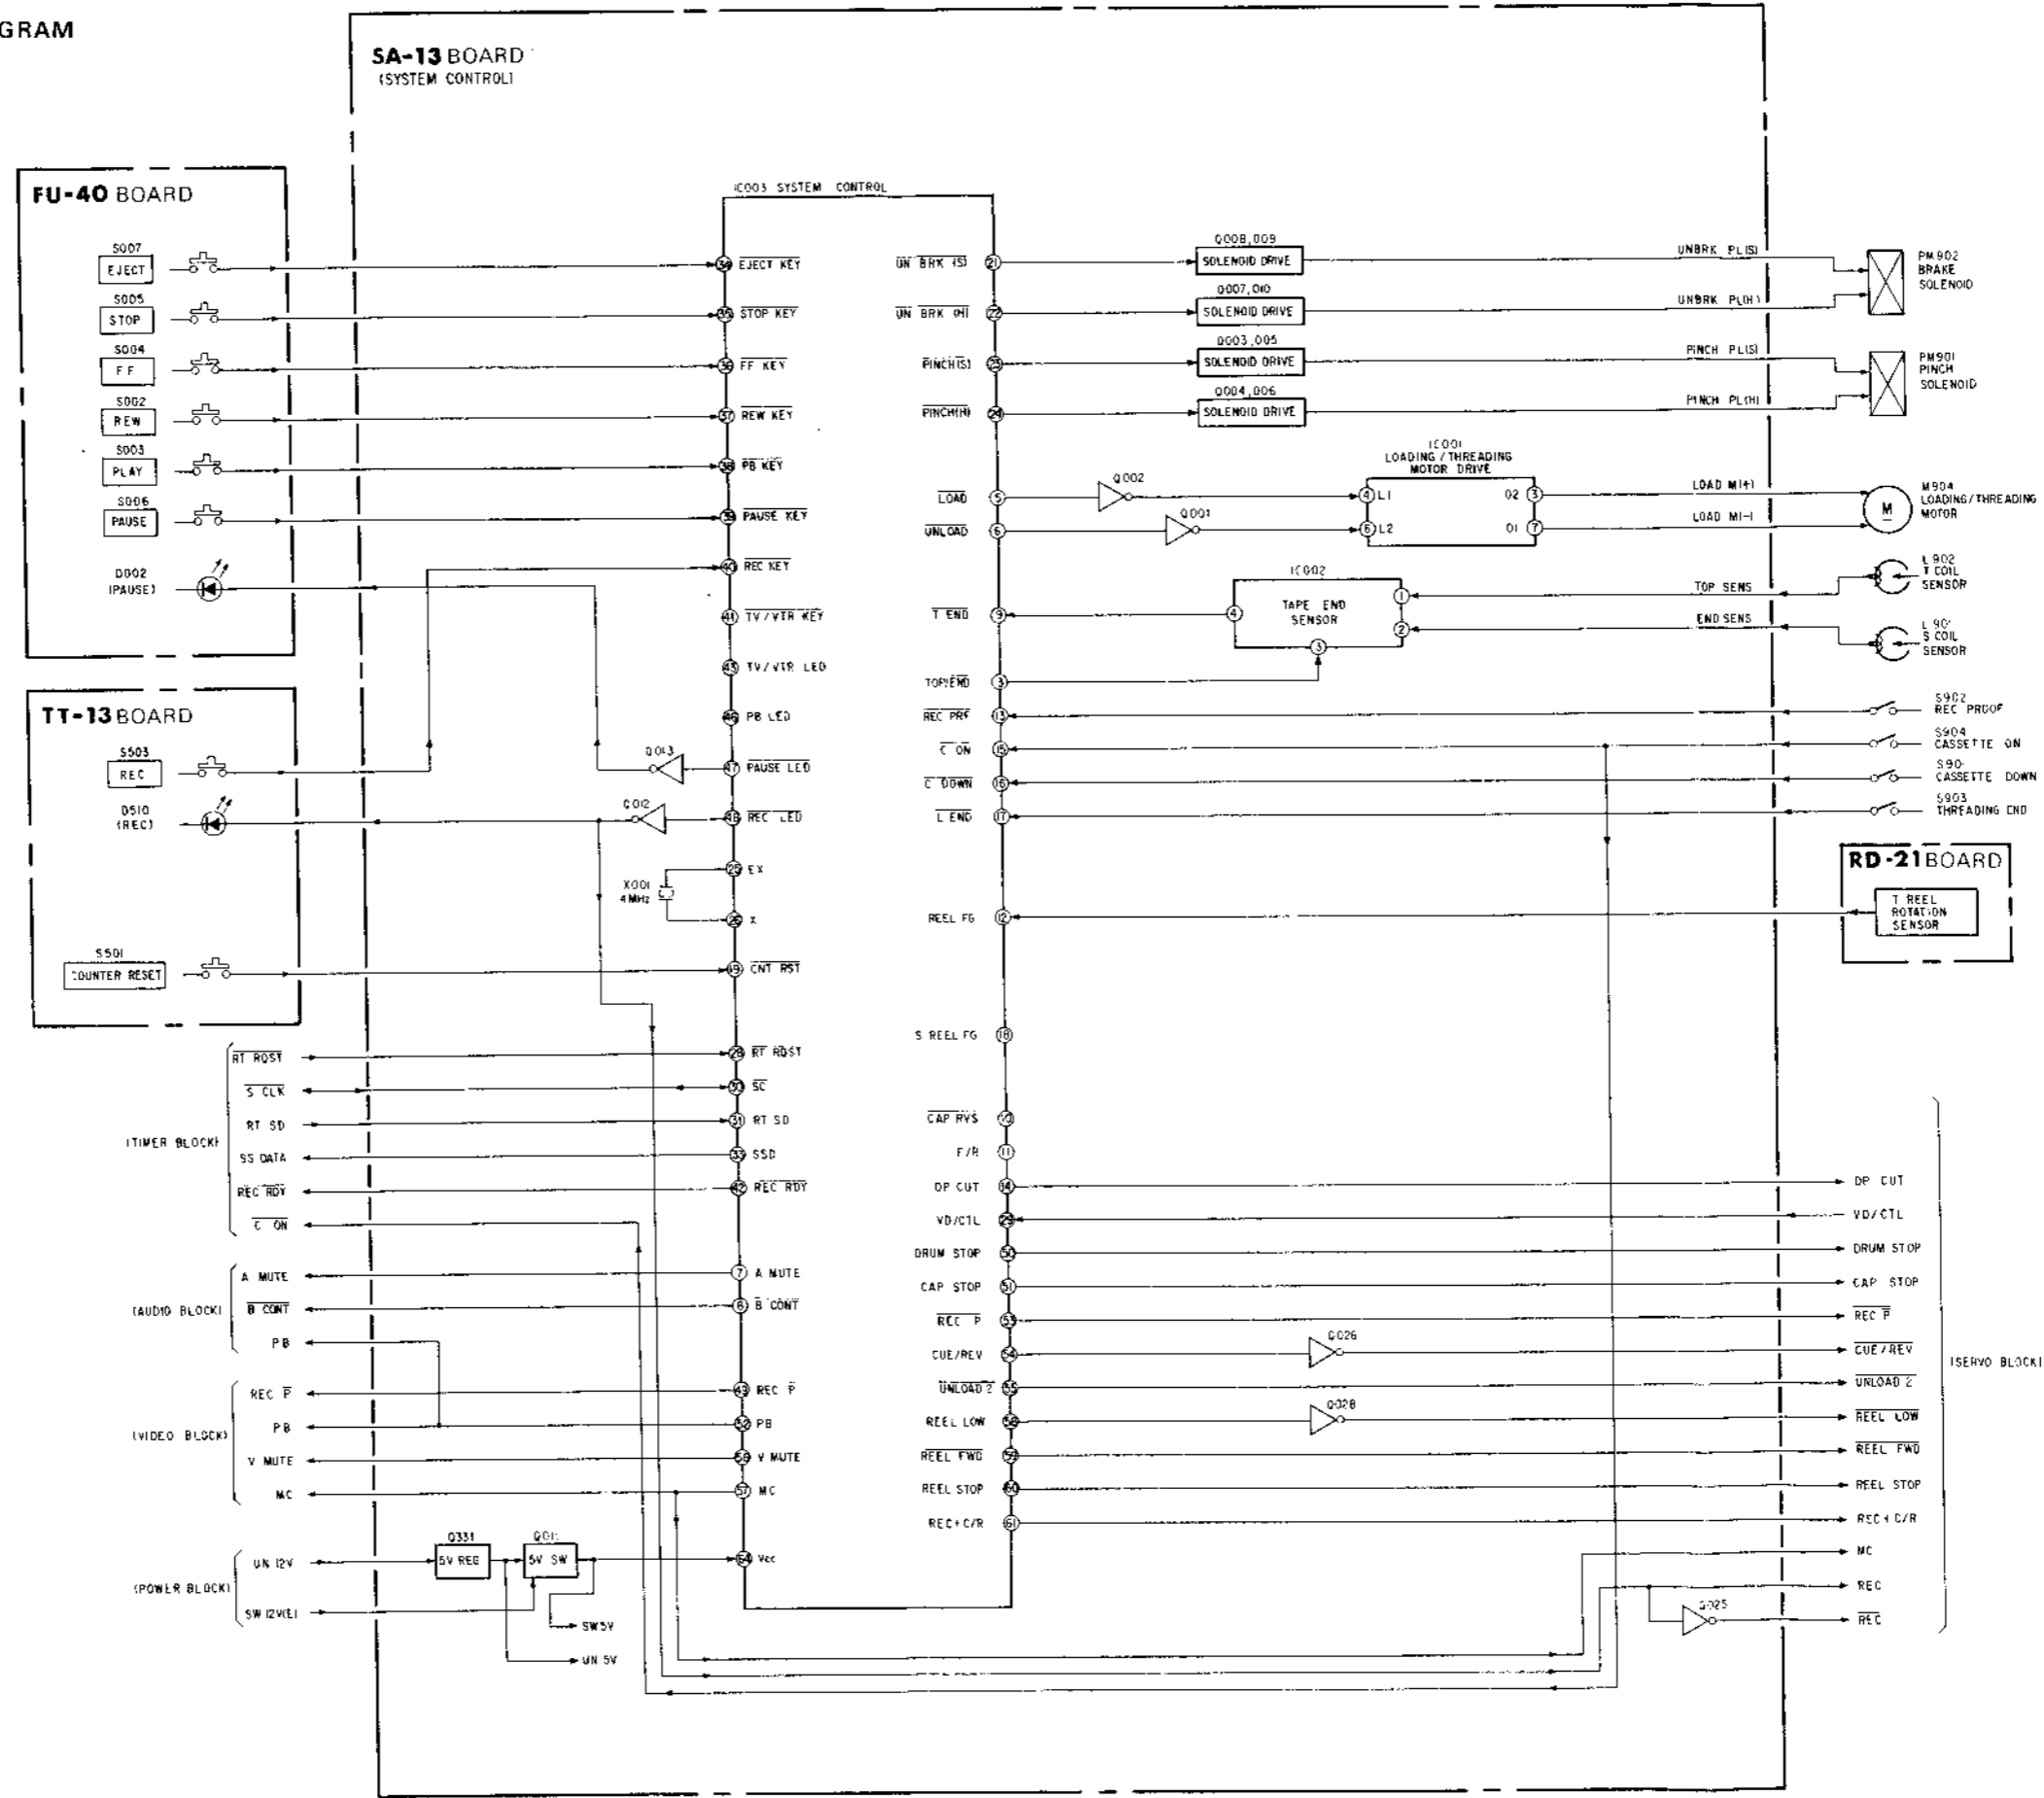


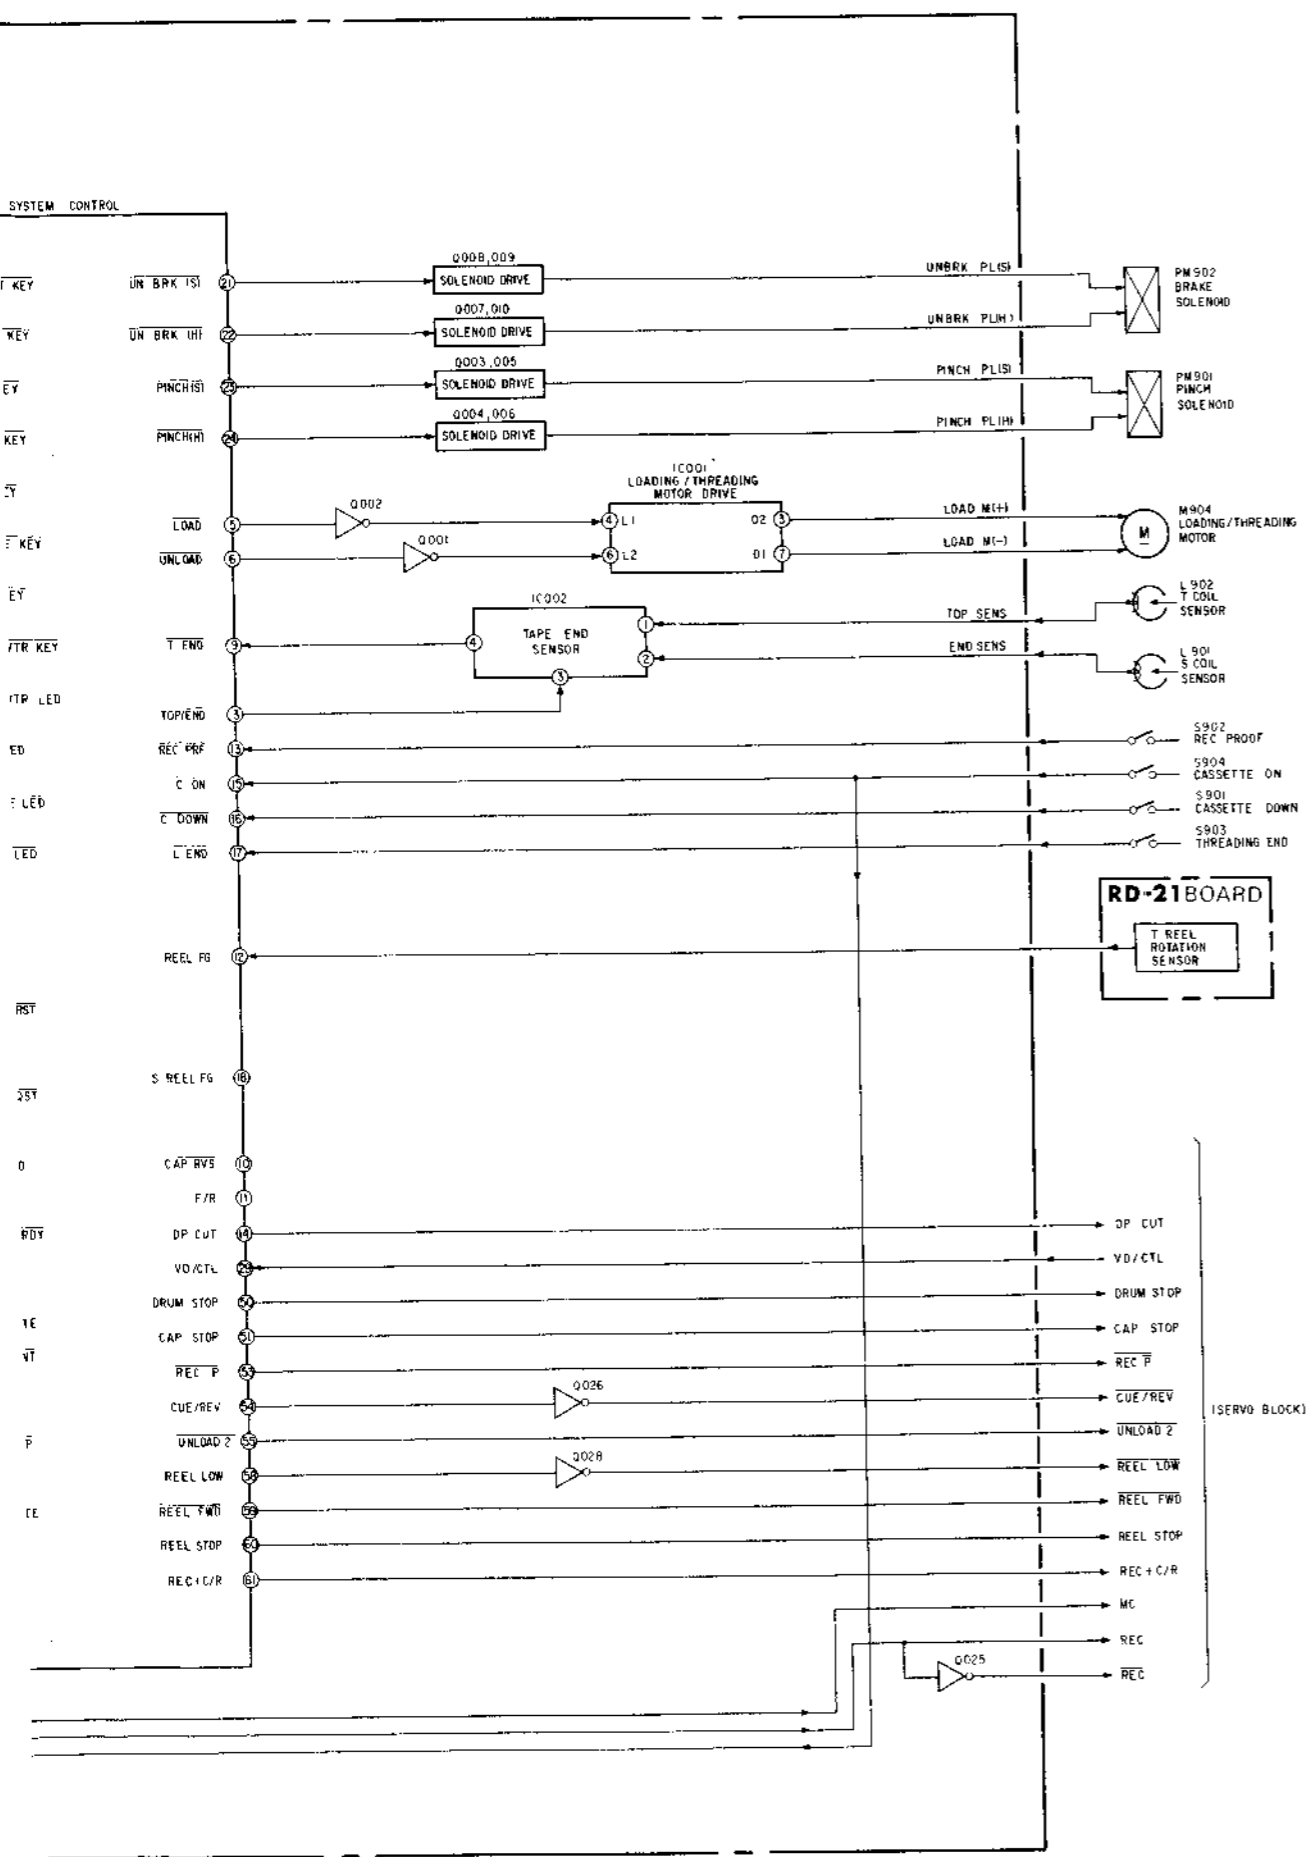

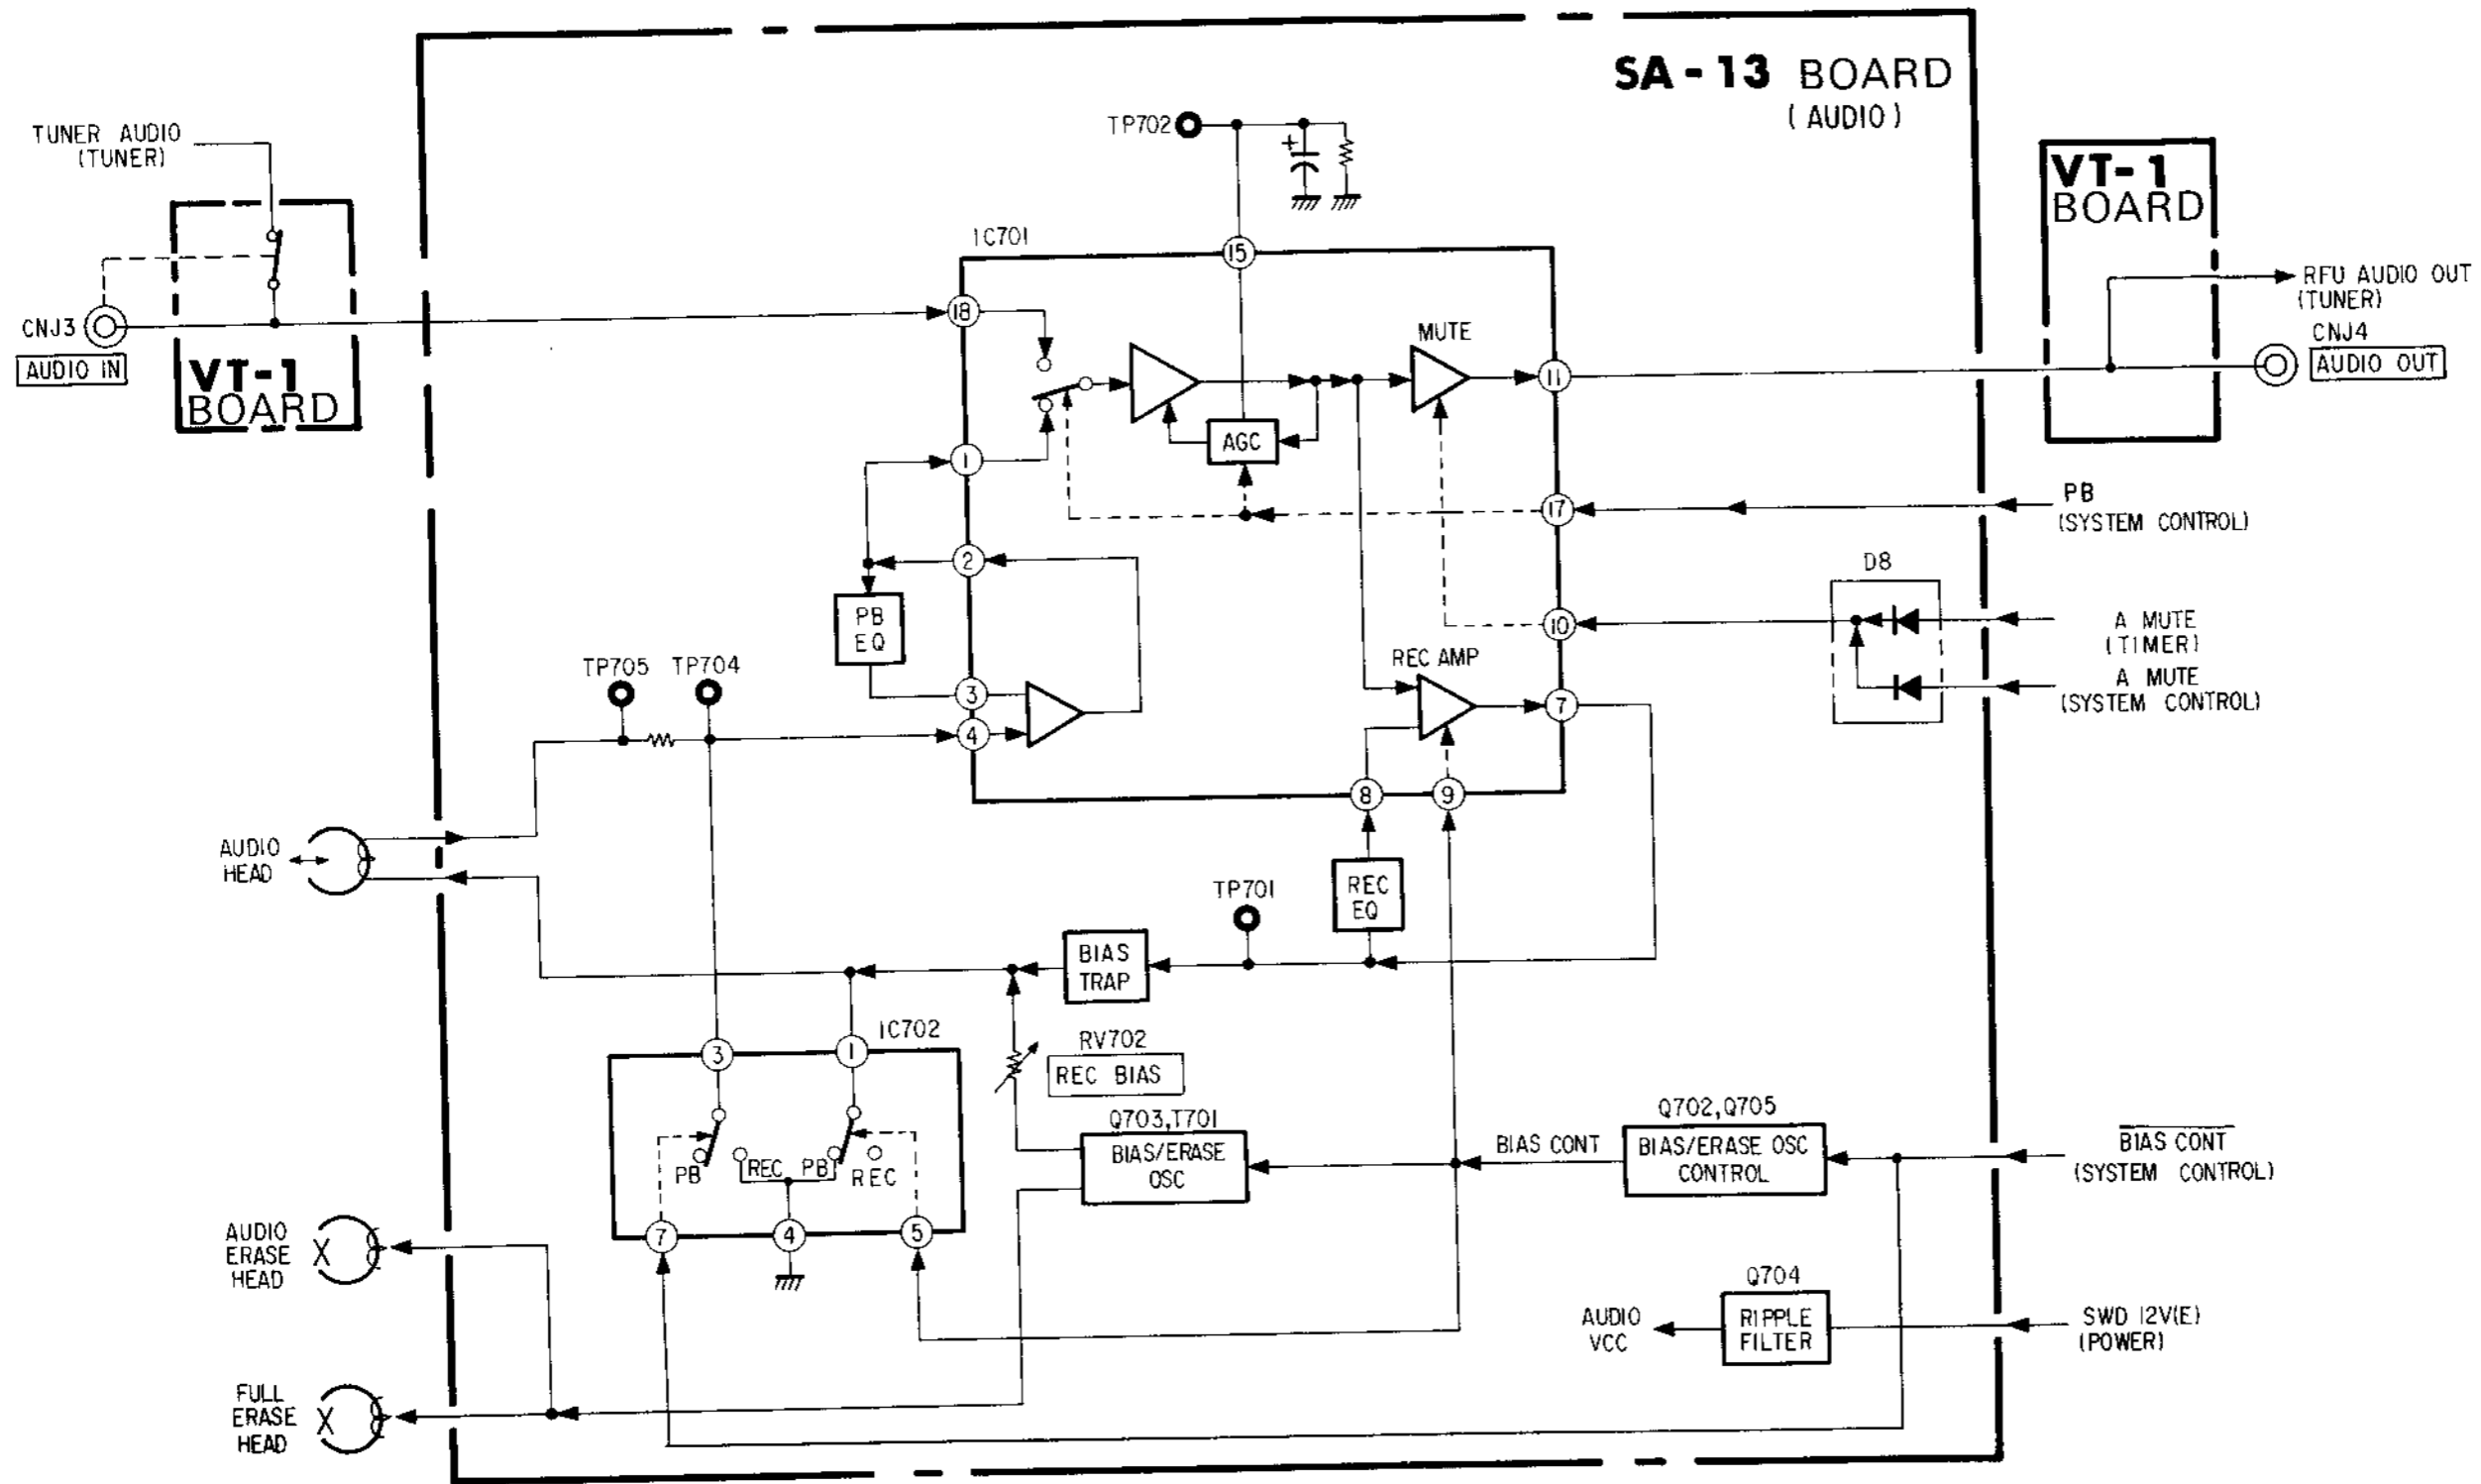


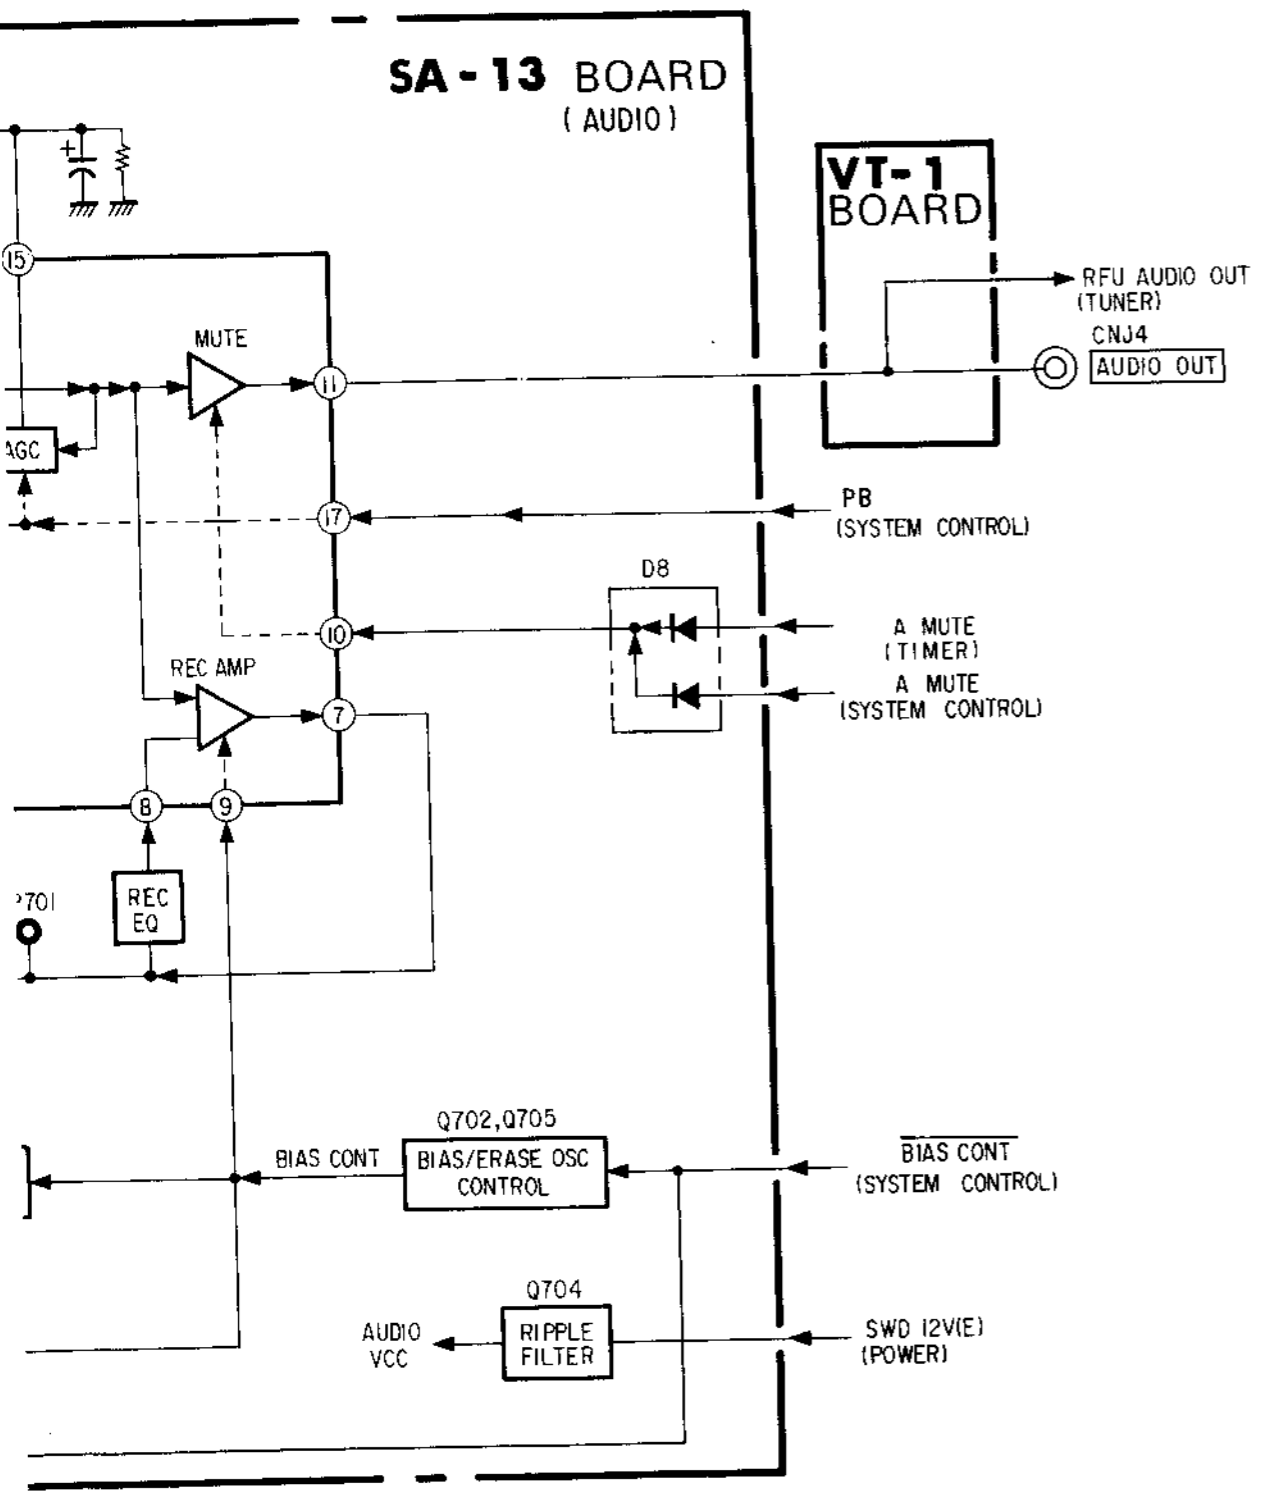


3-15. AUDIO LEVEL DIAGRAM

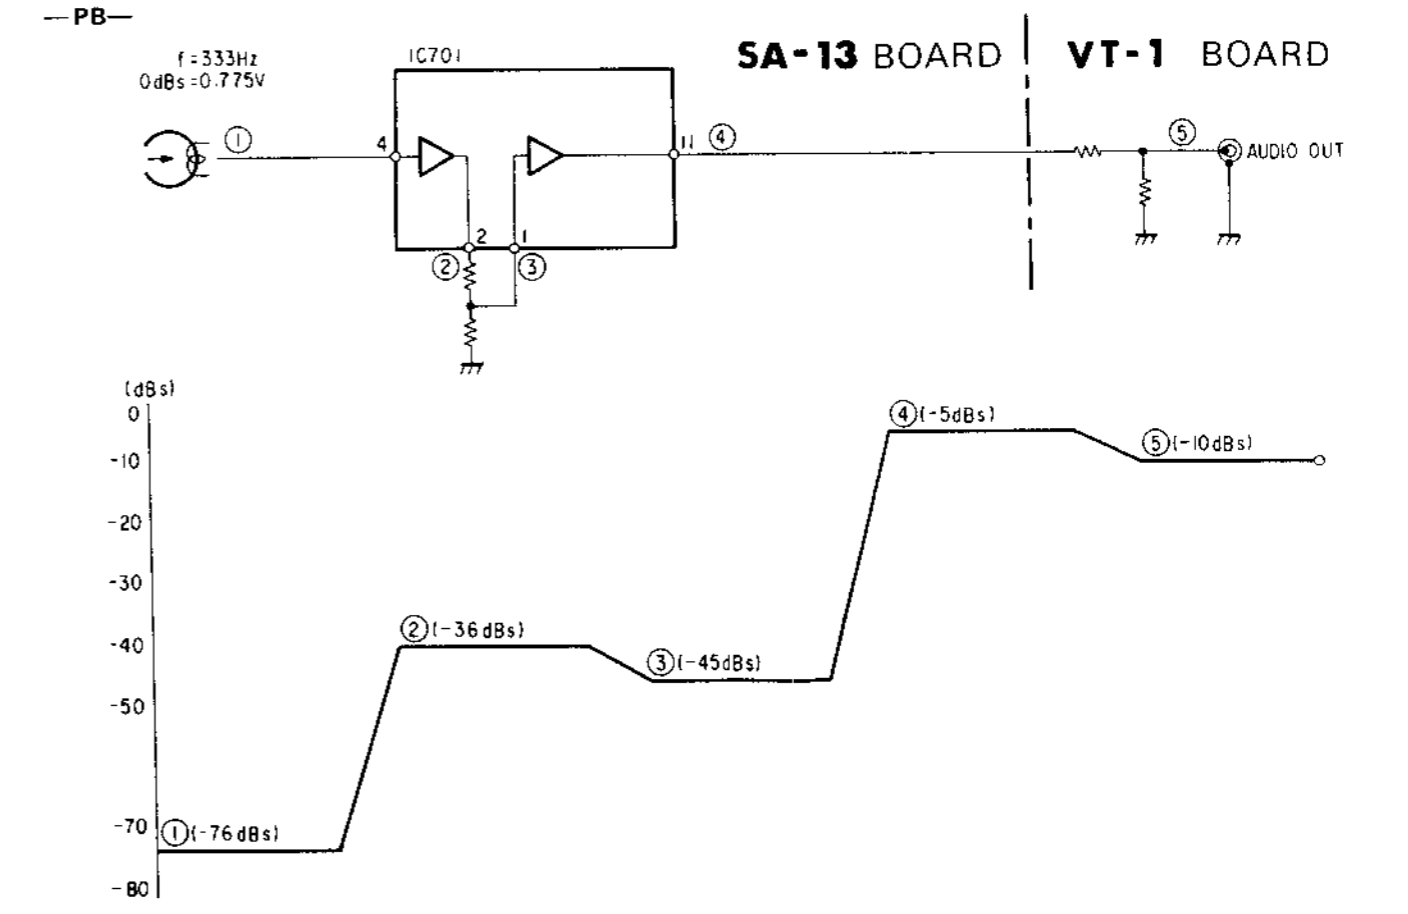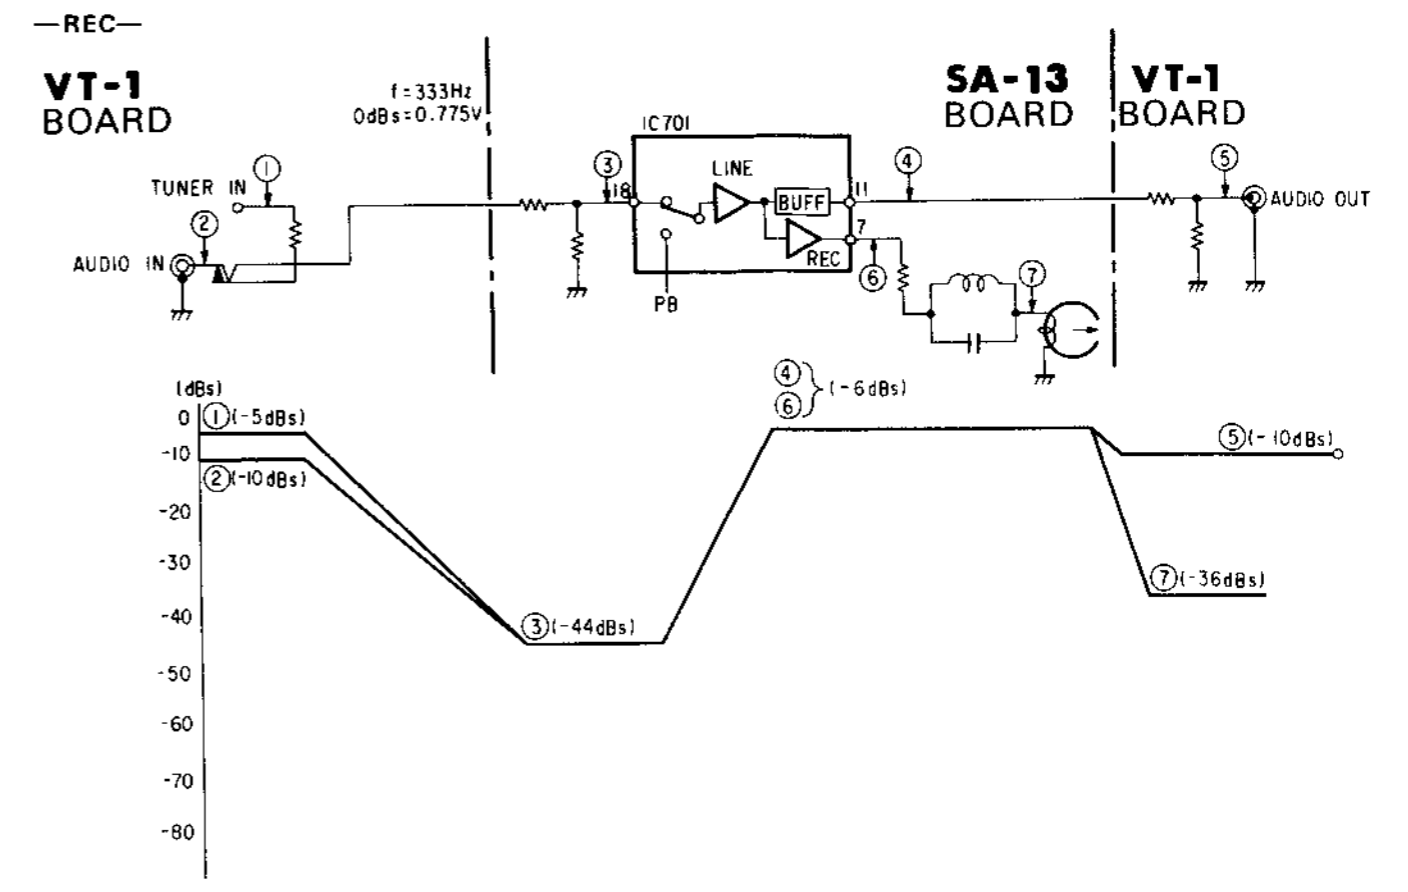


3-16. TUNER, TIMER BLOCK DIAGRAM

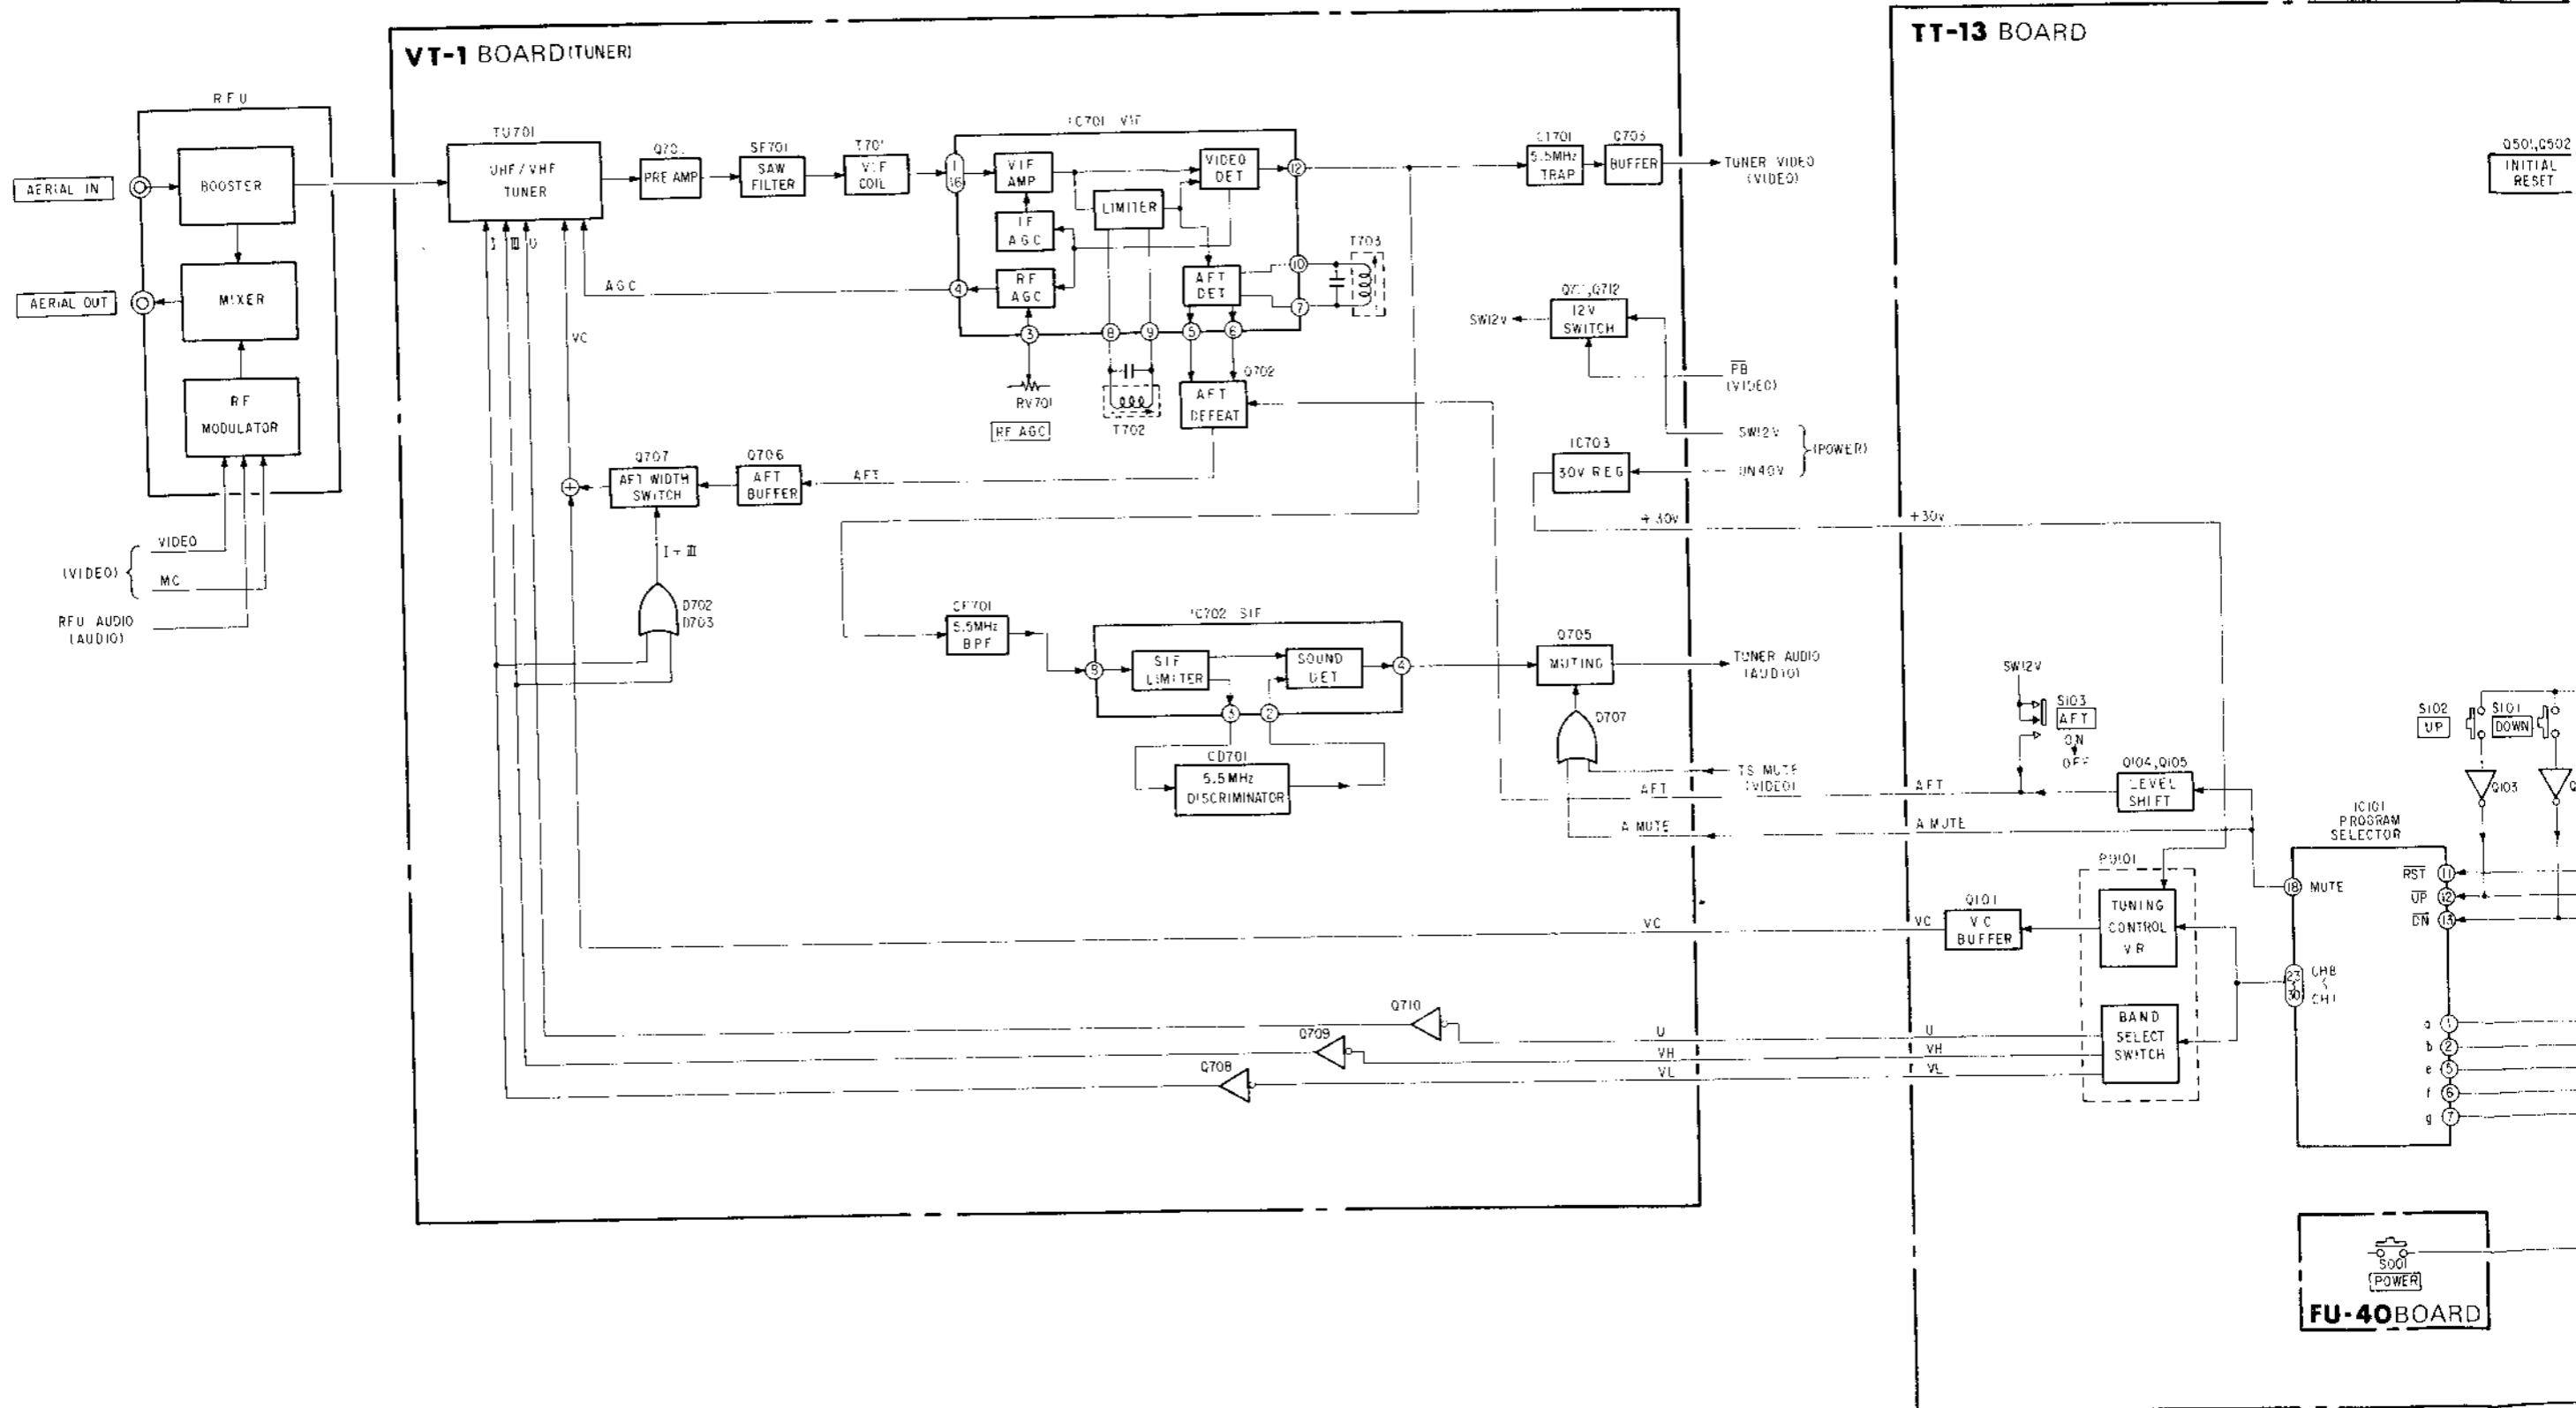


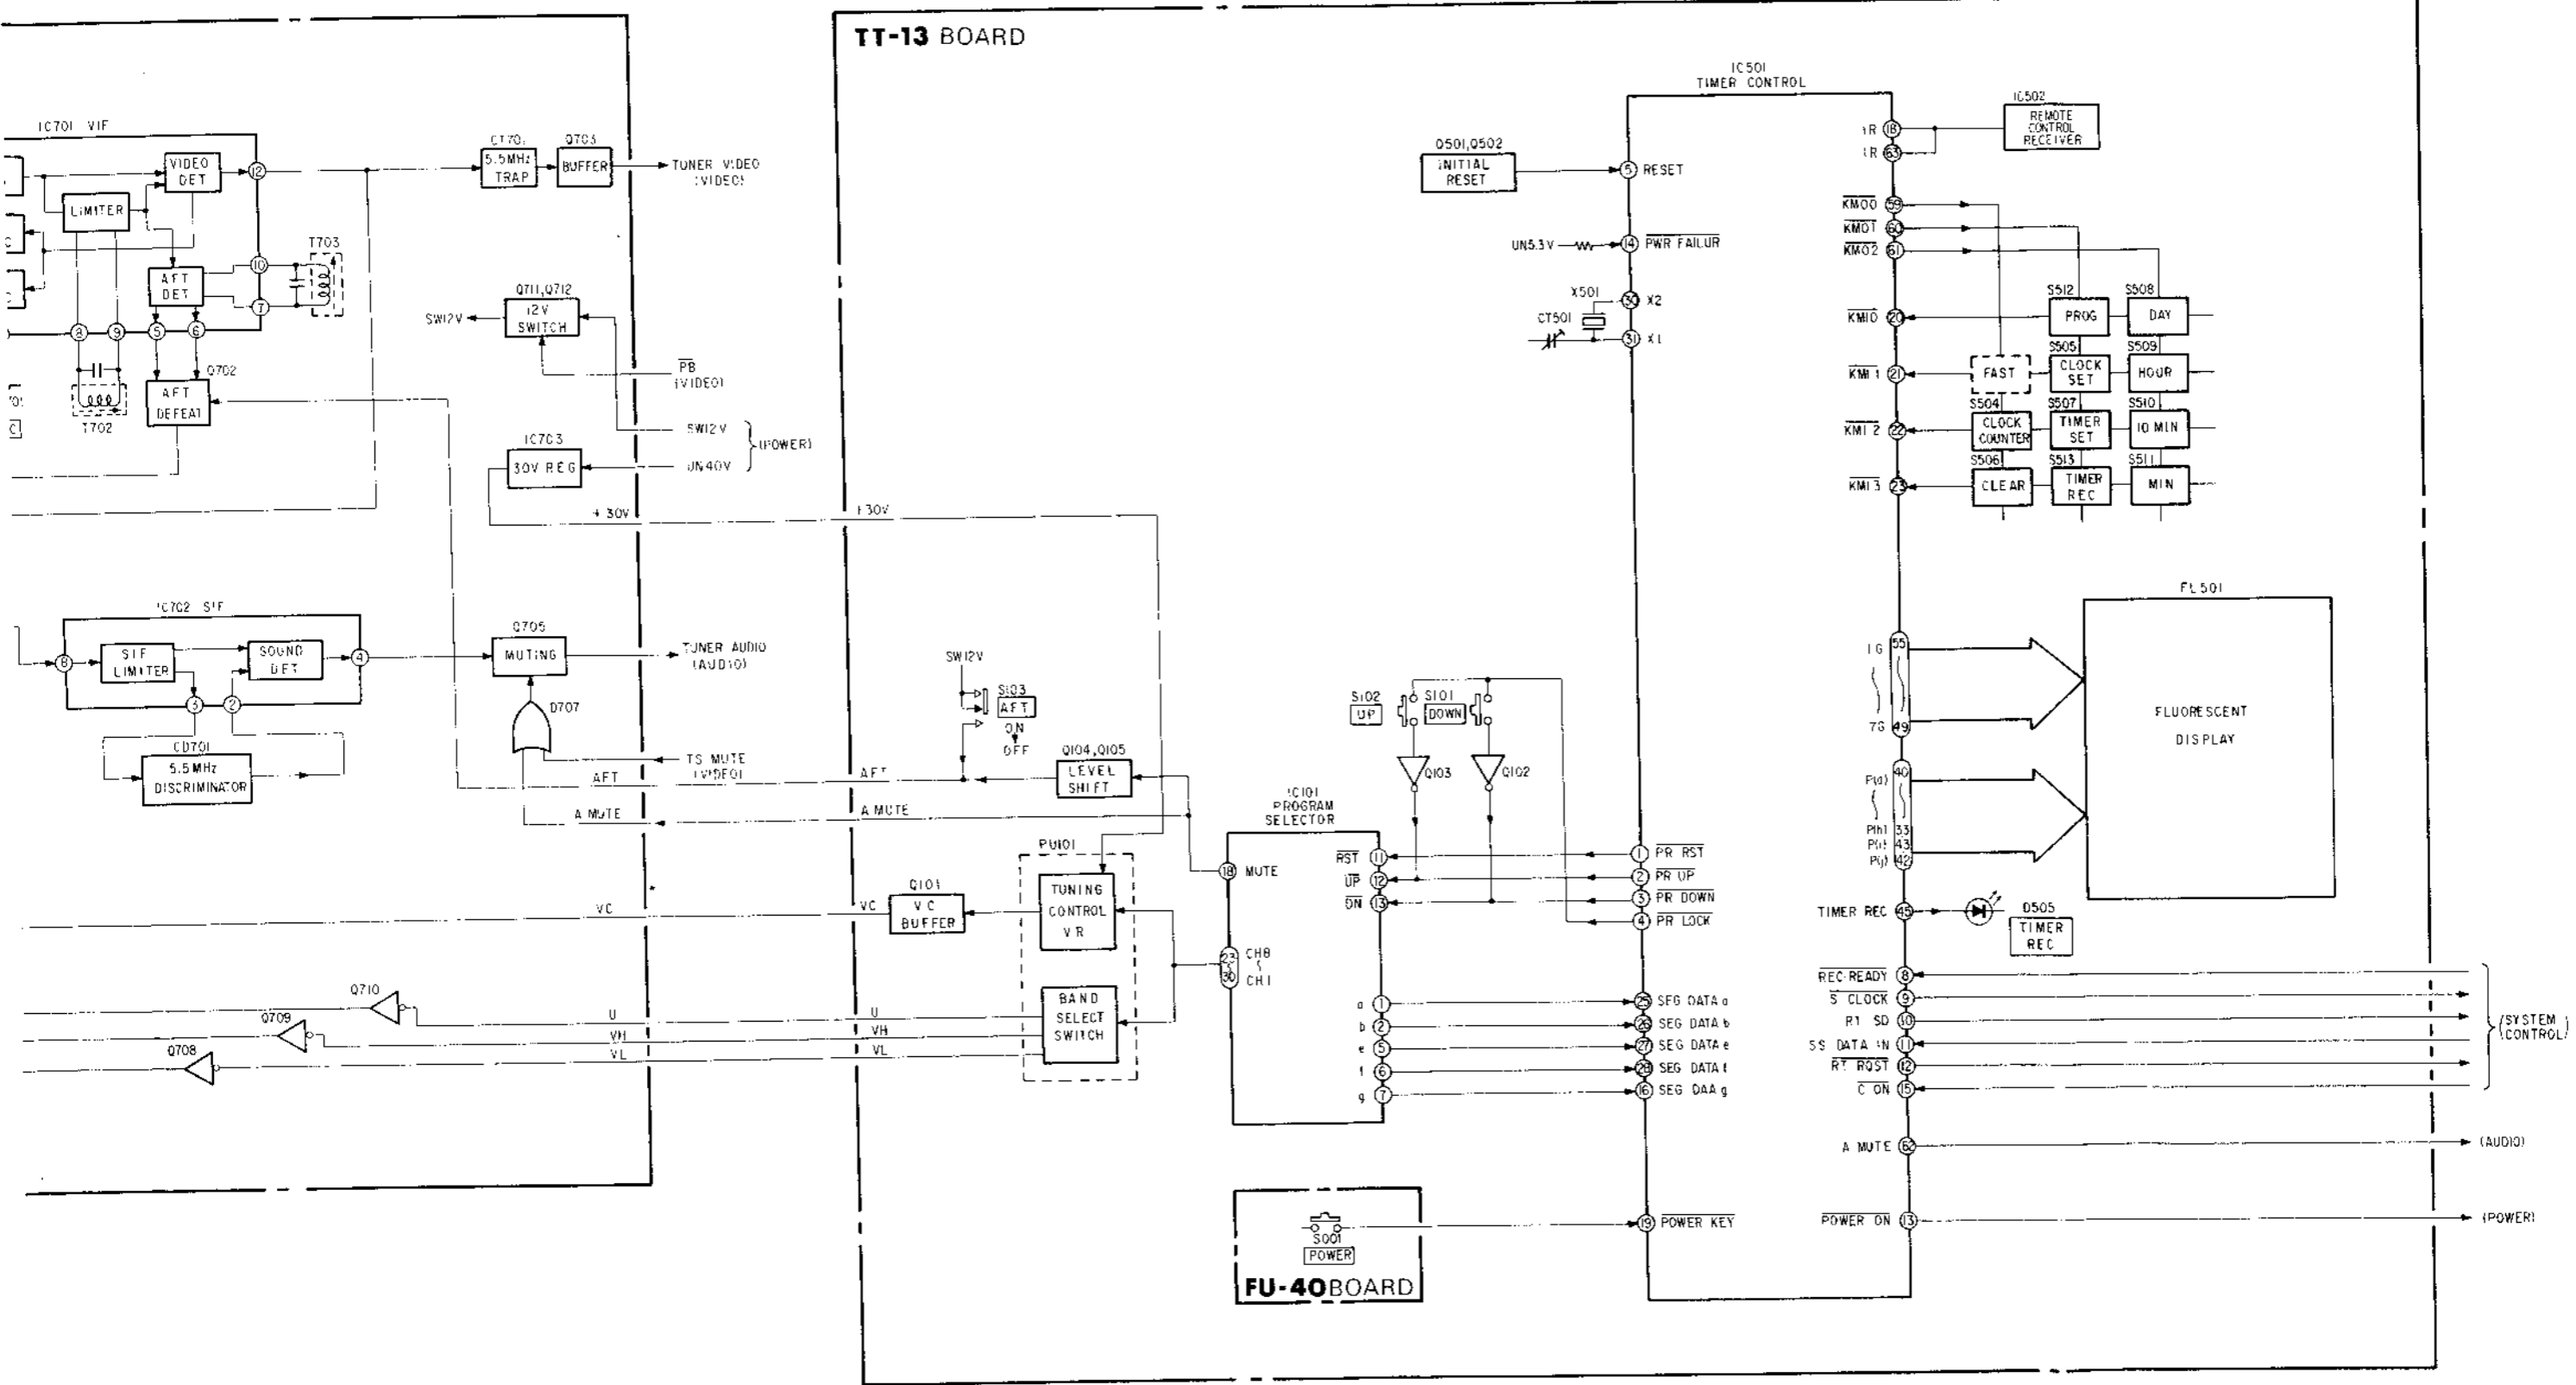

3-17. POWER SUPPLY BLOCK DIAGRAM

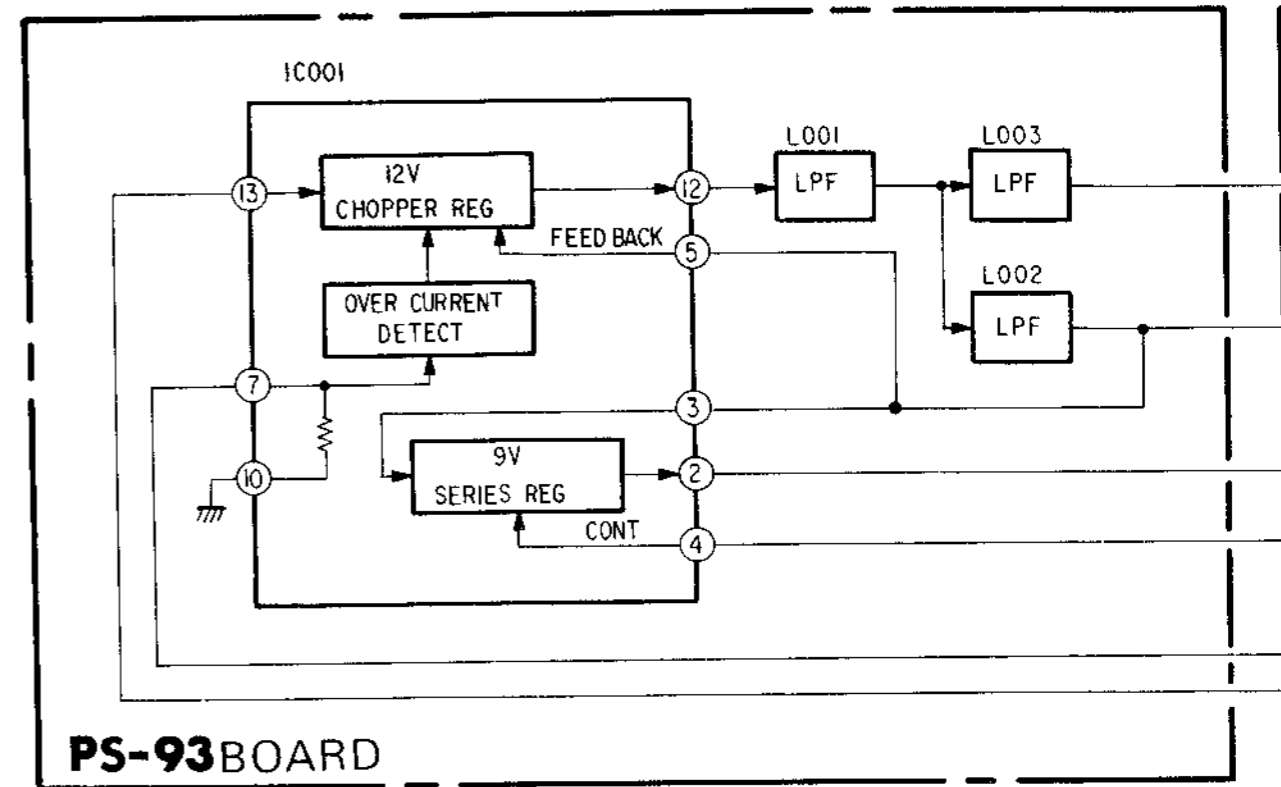


PS-93 BOARD

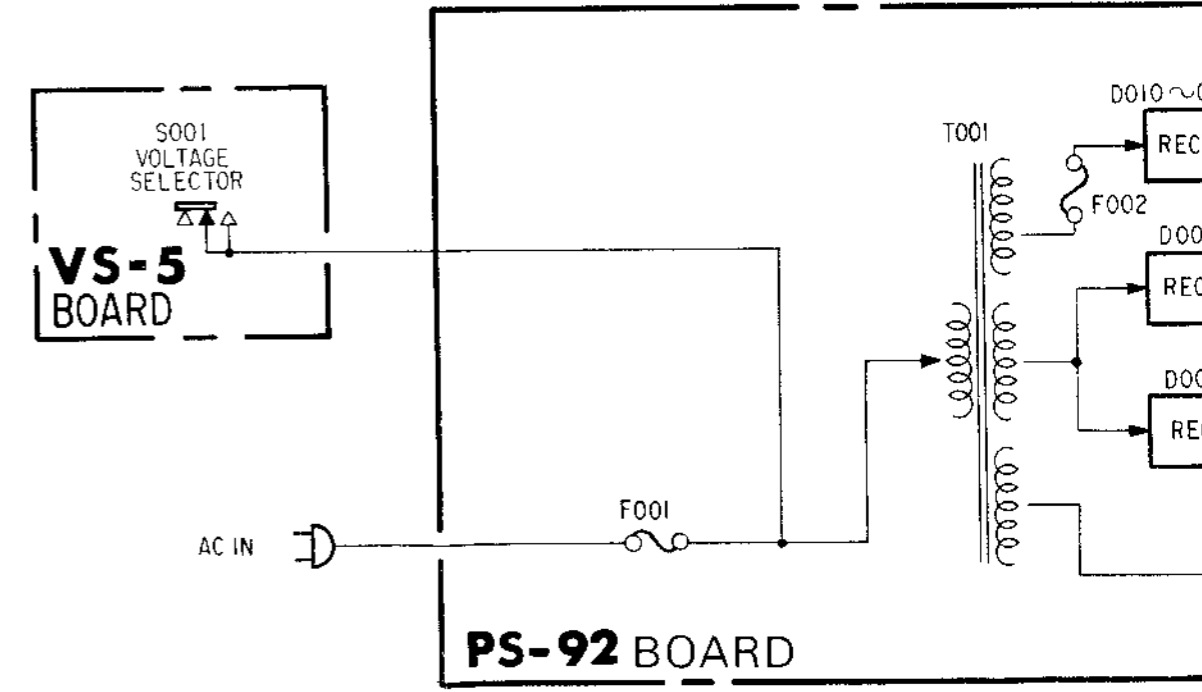


PS-92 BOARD


3-17. POWER SUPPLY BLOCK DIAGRAM

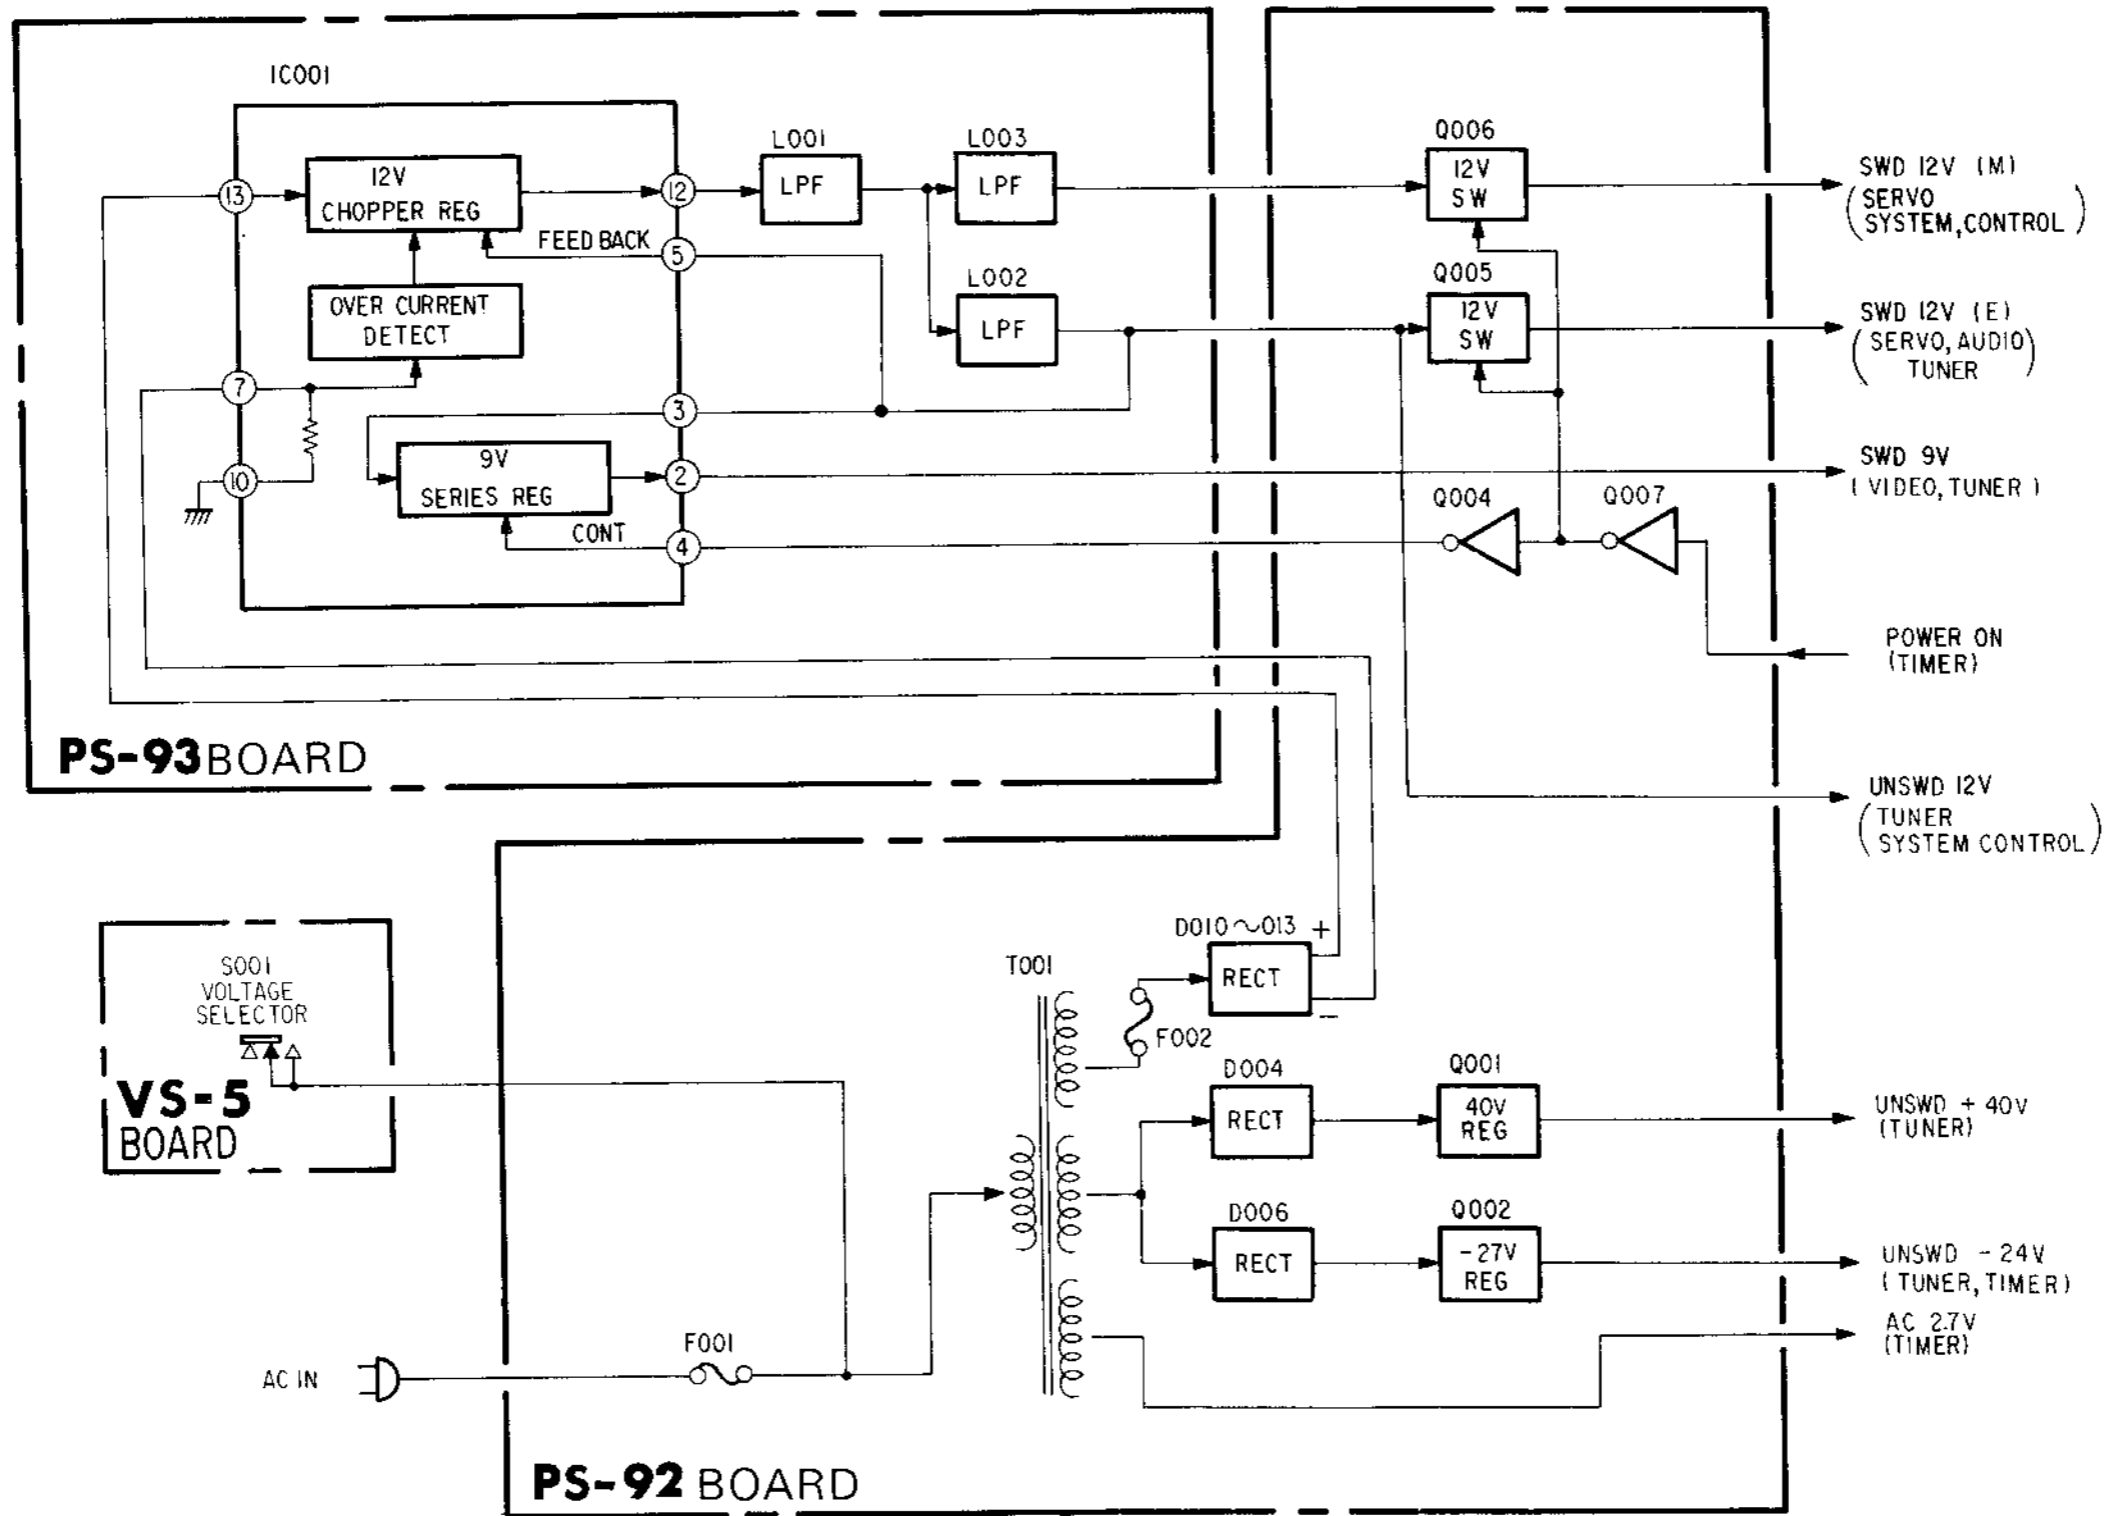

SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

4-1. FRAME SCHEMATIC DIAGRAM

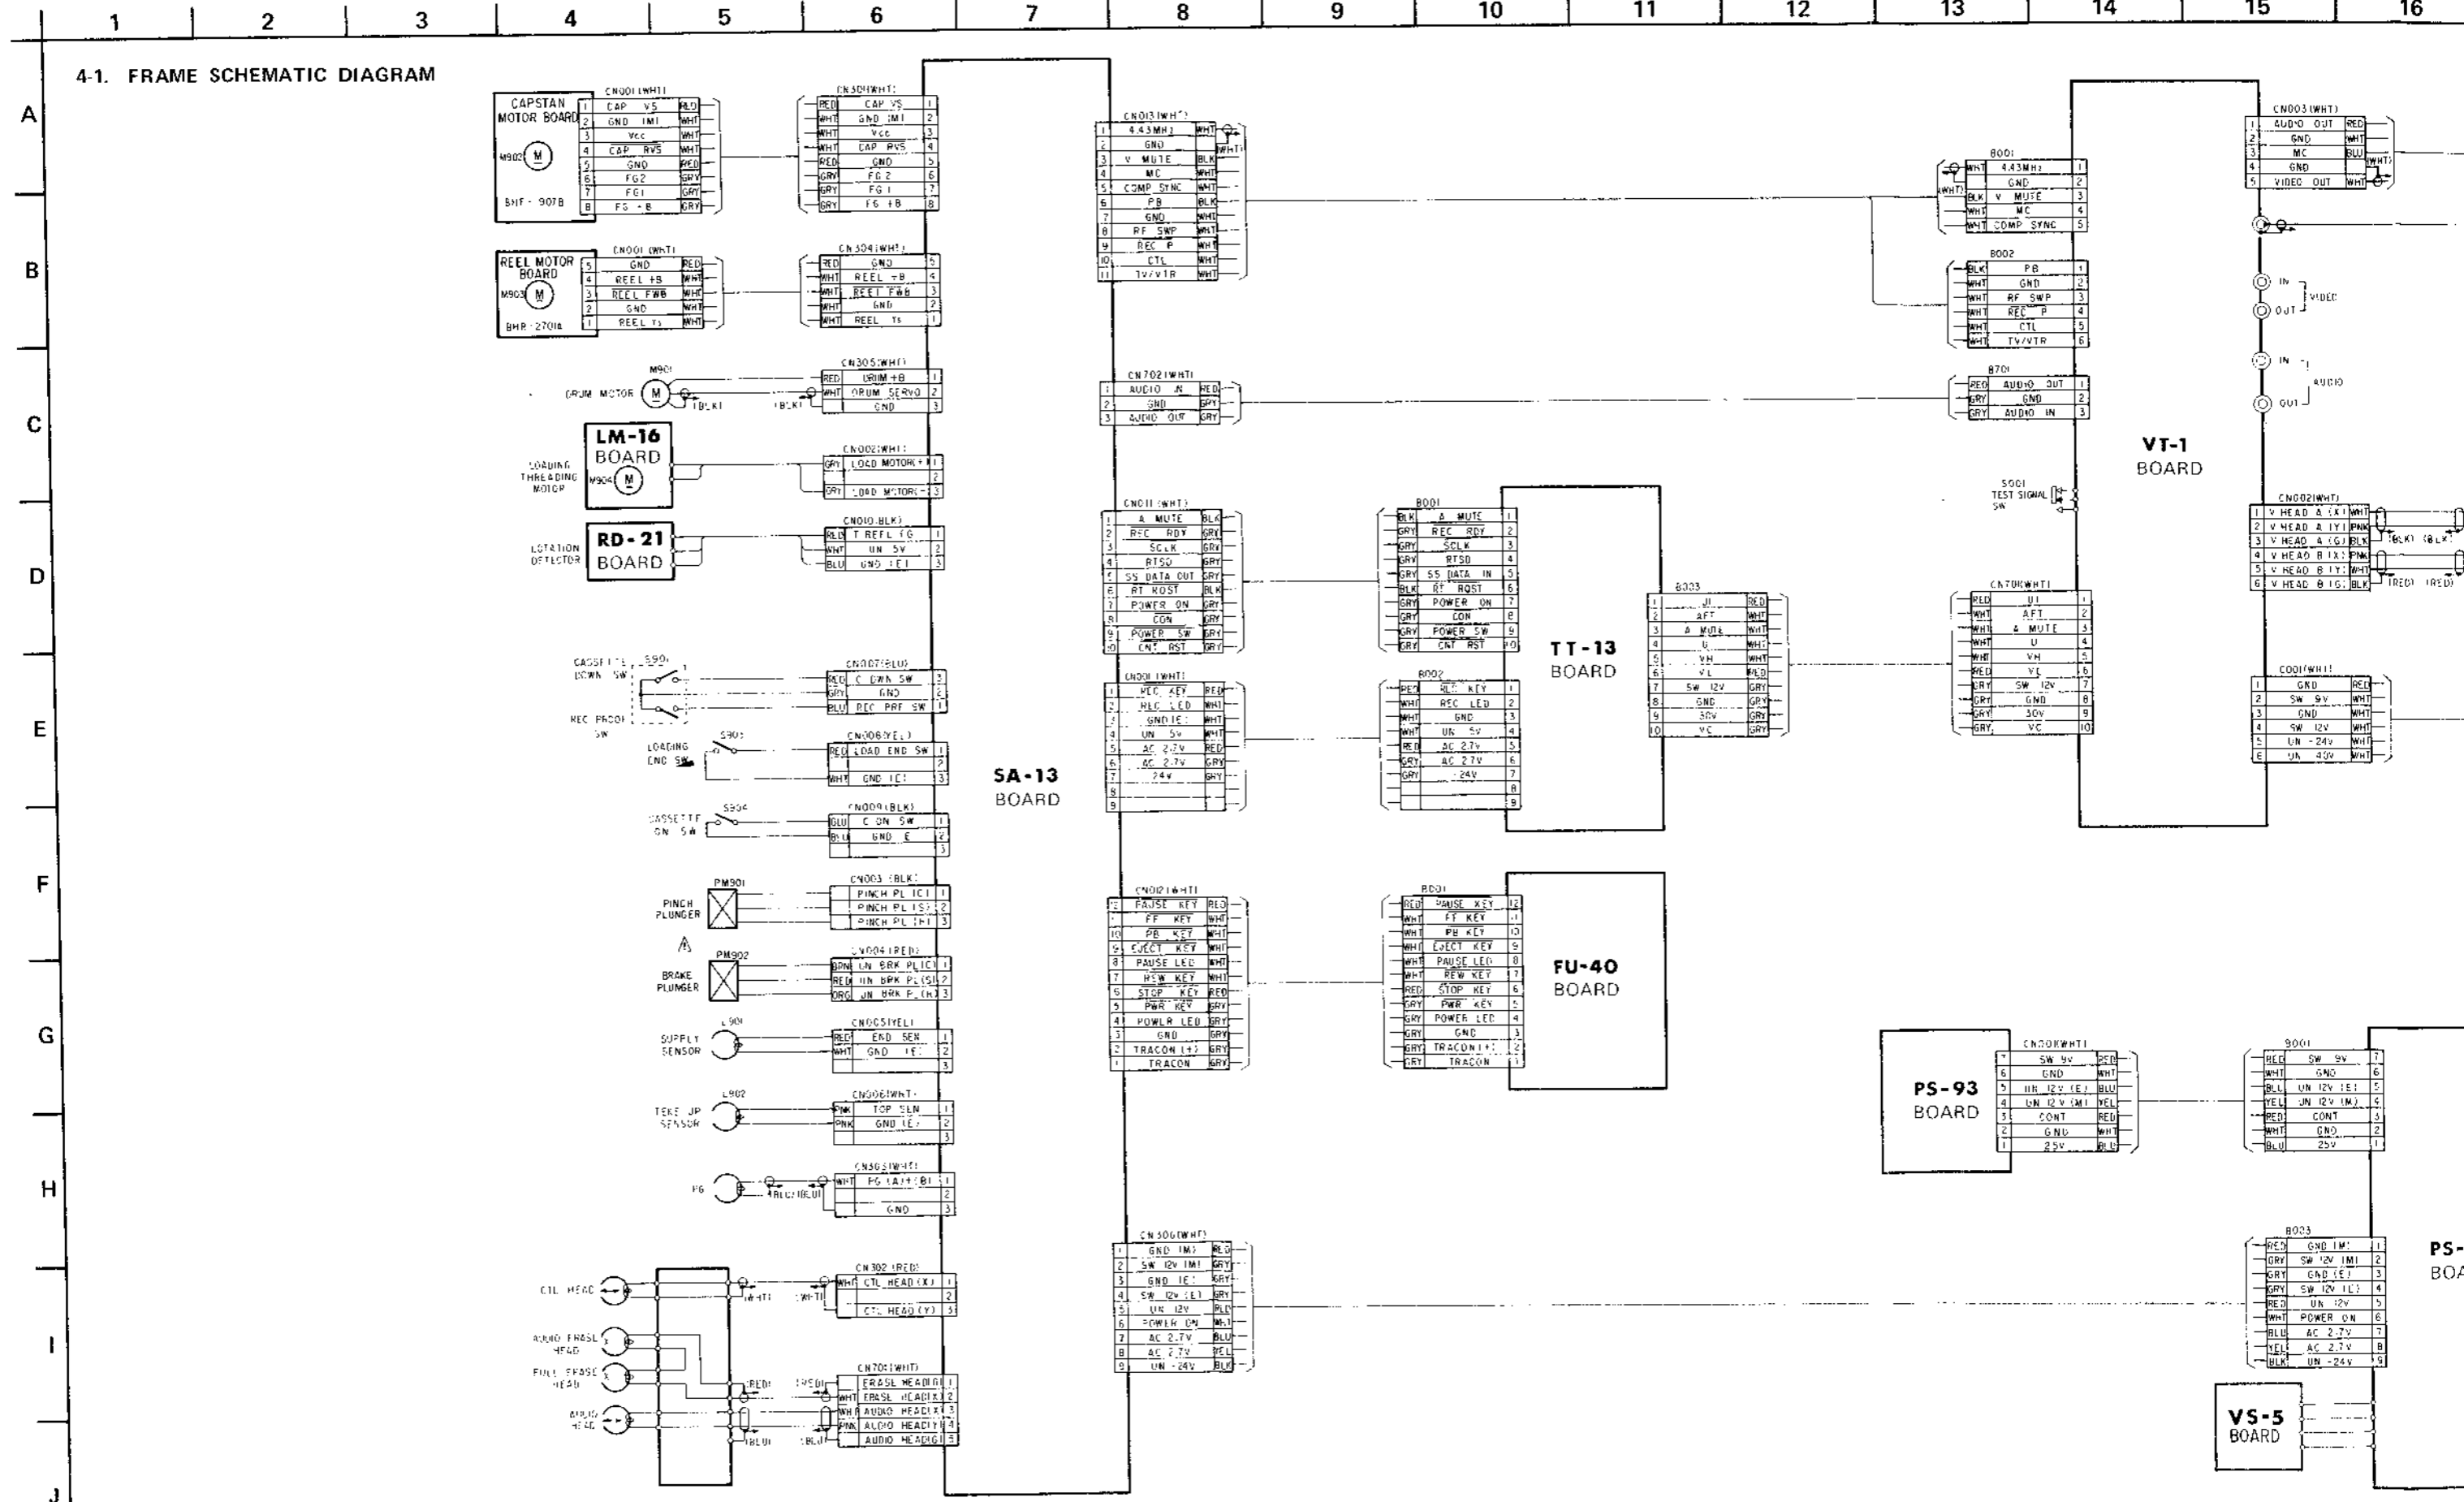

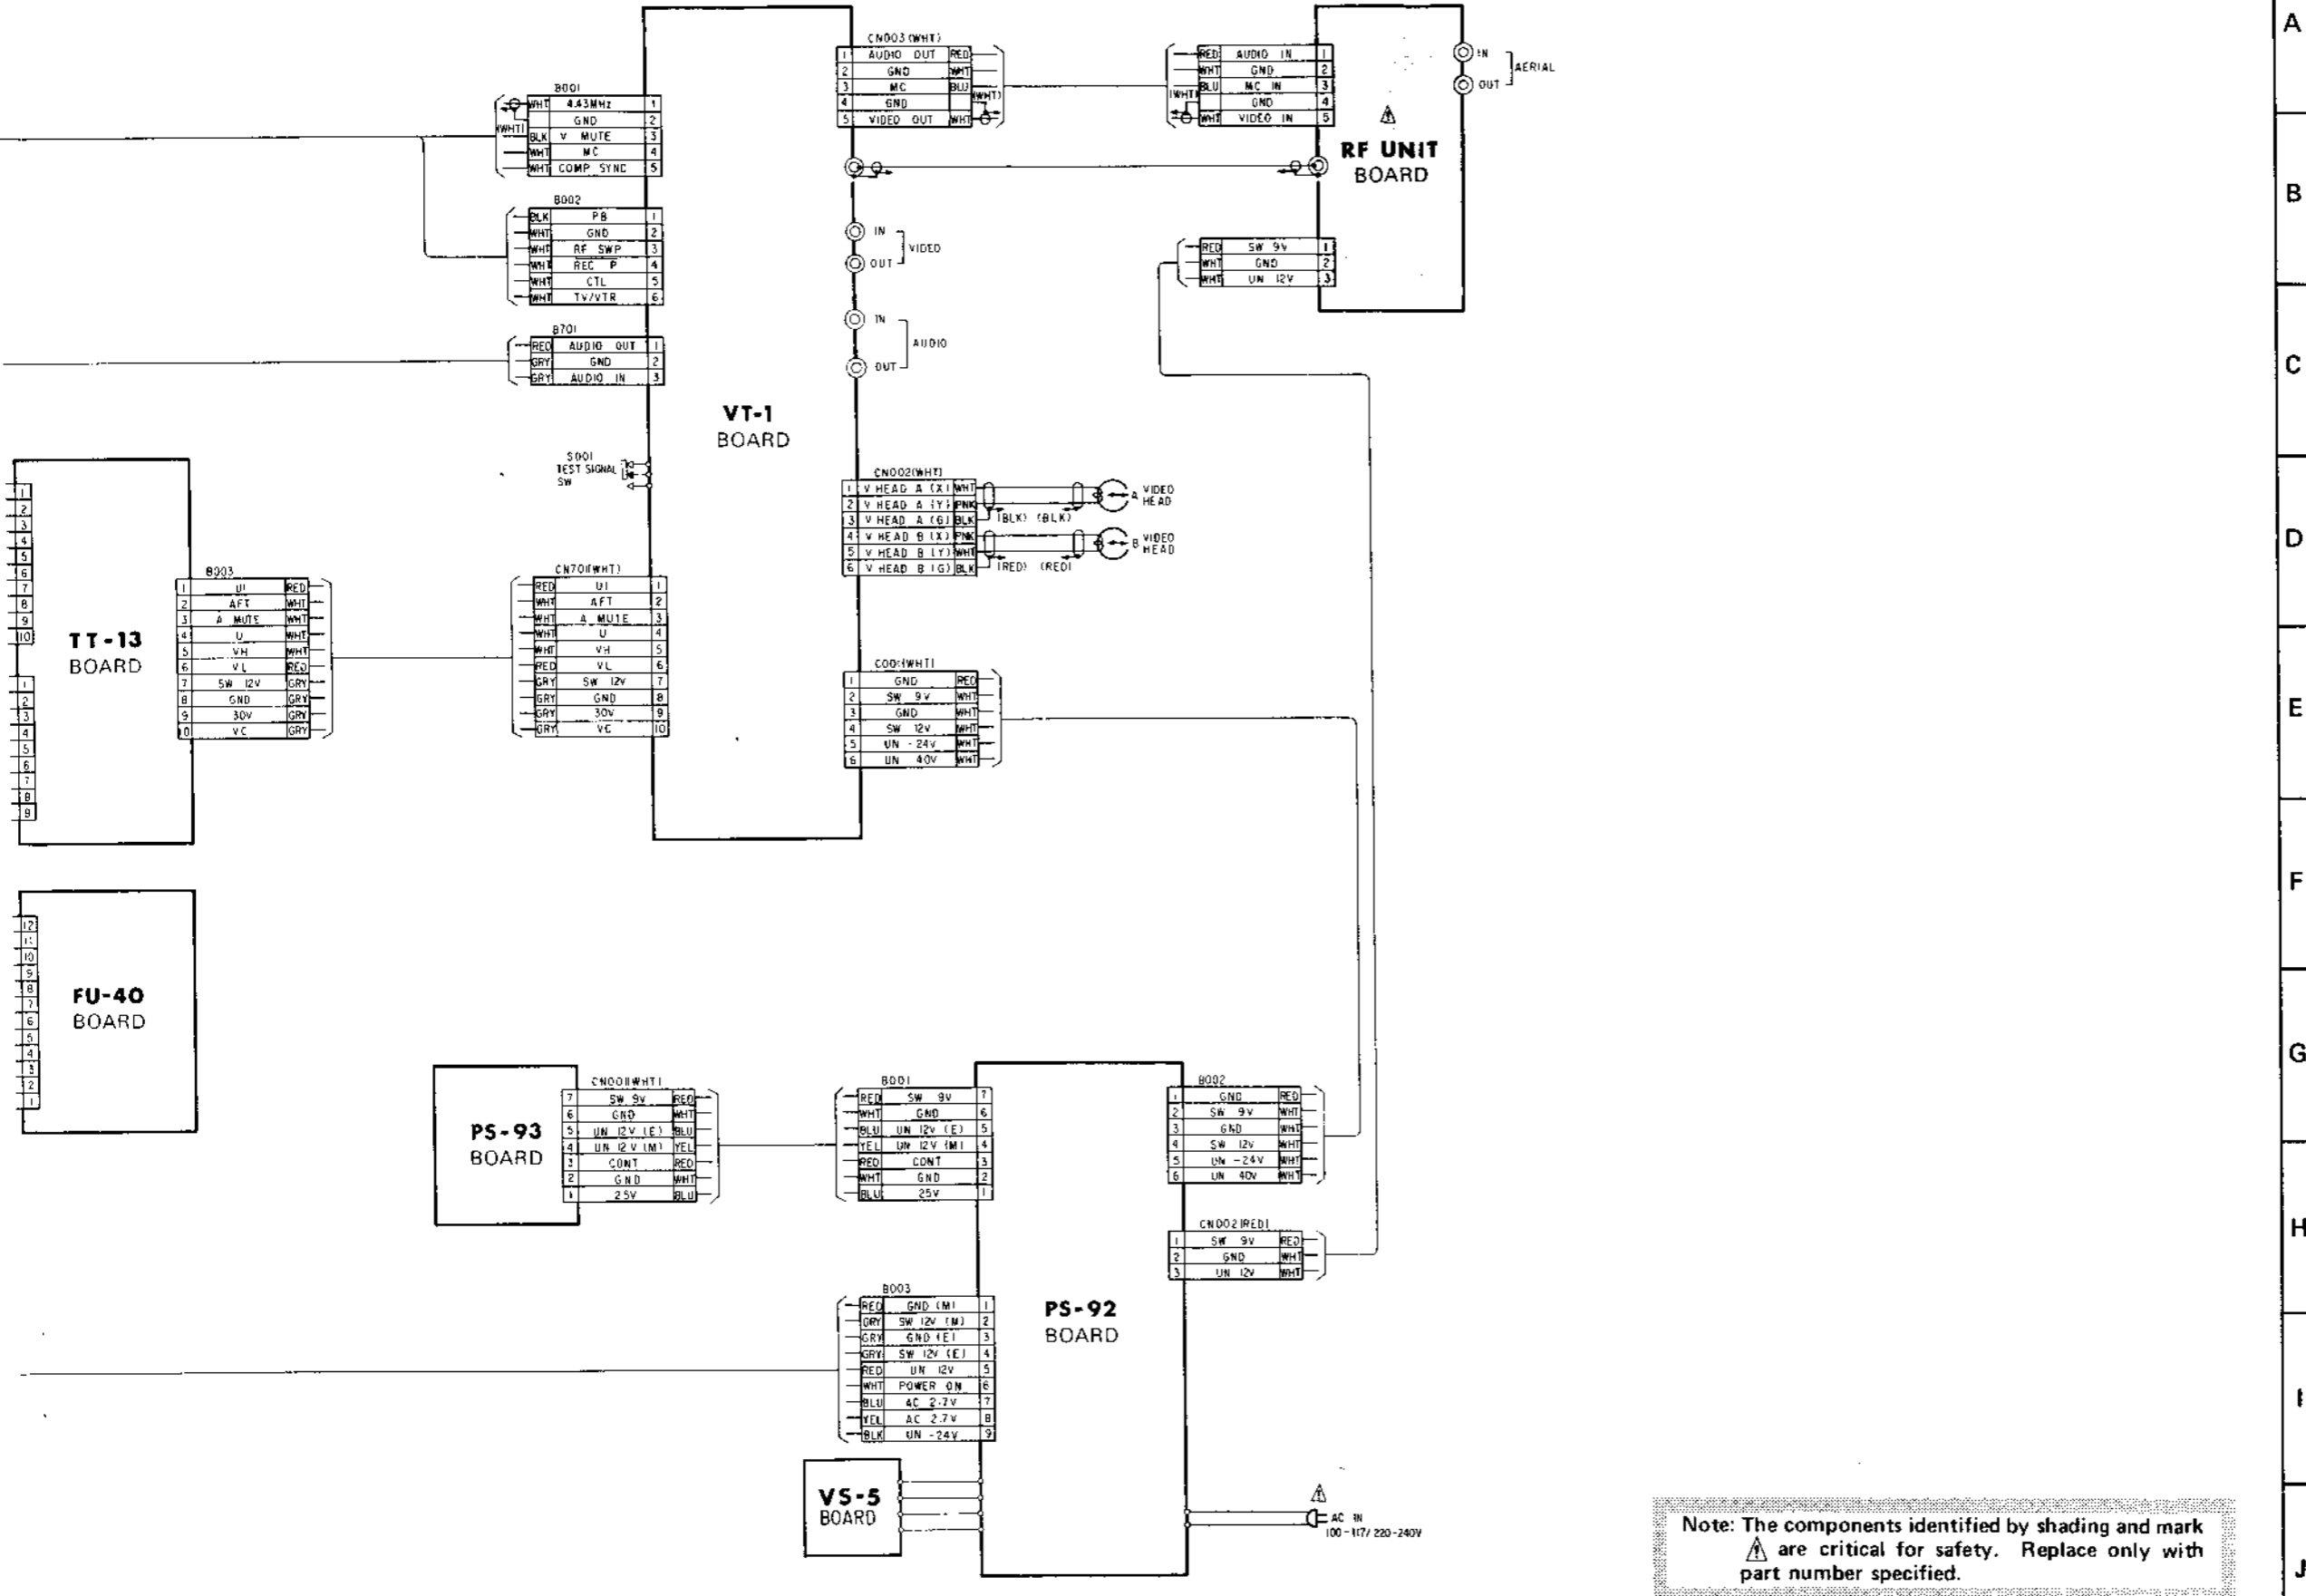

19 | 20 | 21 | 22 | 23

A

B

C

D

E


F

G


H

I

J

Note: The components identified by shading and mark  are critical for safety. Replace only with part number specified.

4-2. VT-1 (VIDEO SIGNAL PROCESS, TUNER) SCHEMATIC DIAGRAM - Ref. No. VT-1 BOARD: 1,000 series -

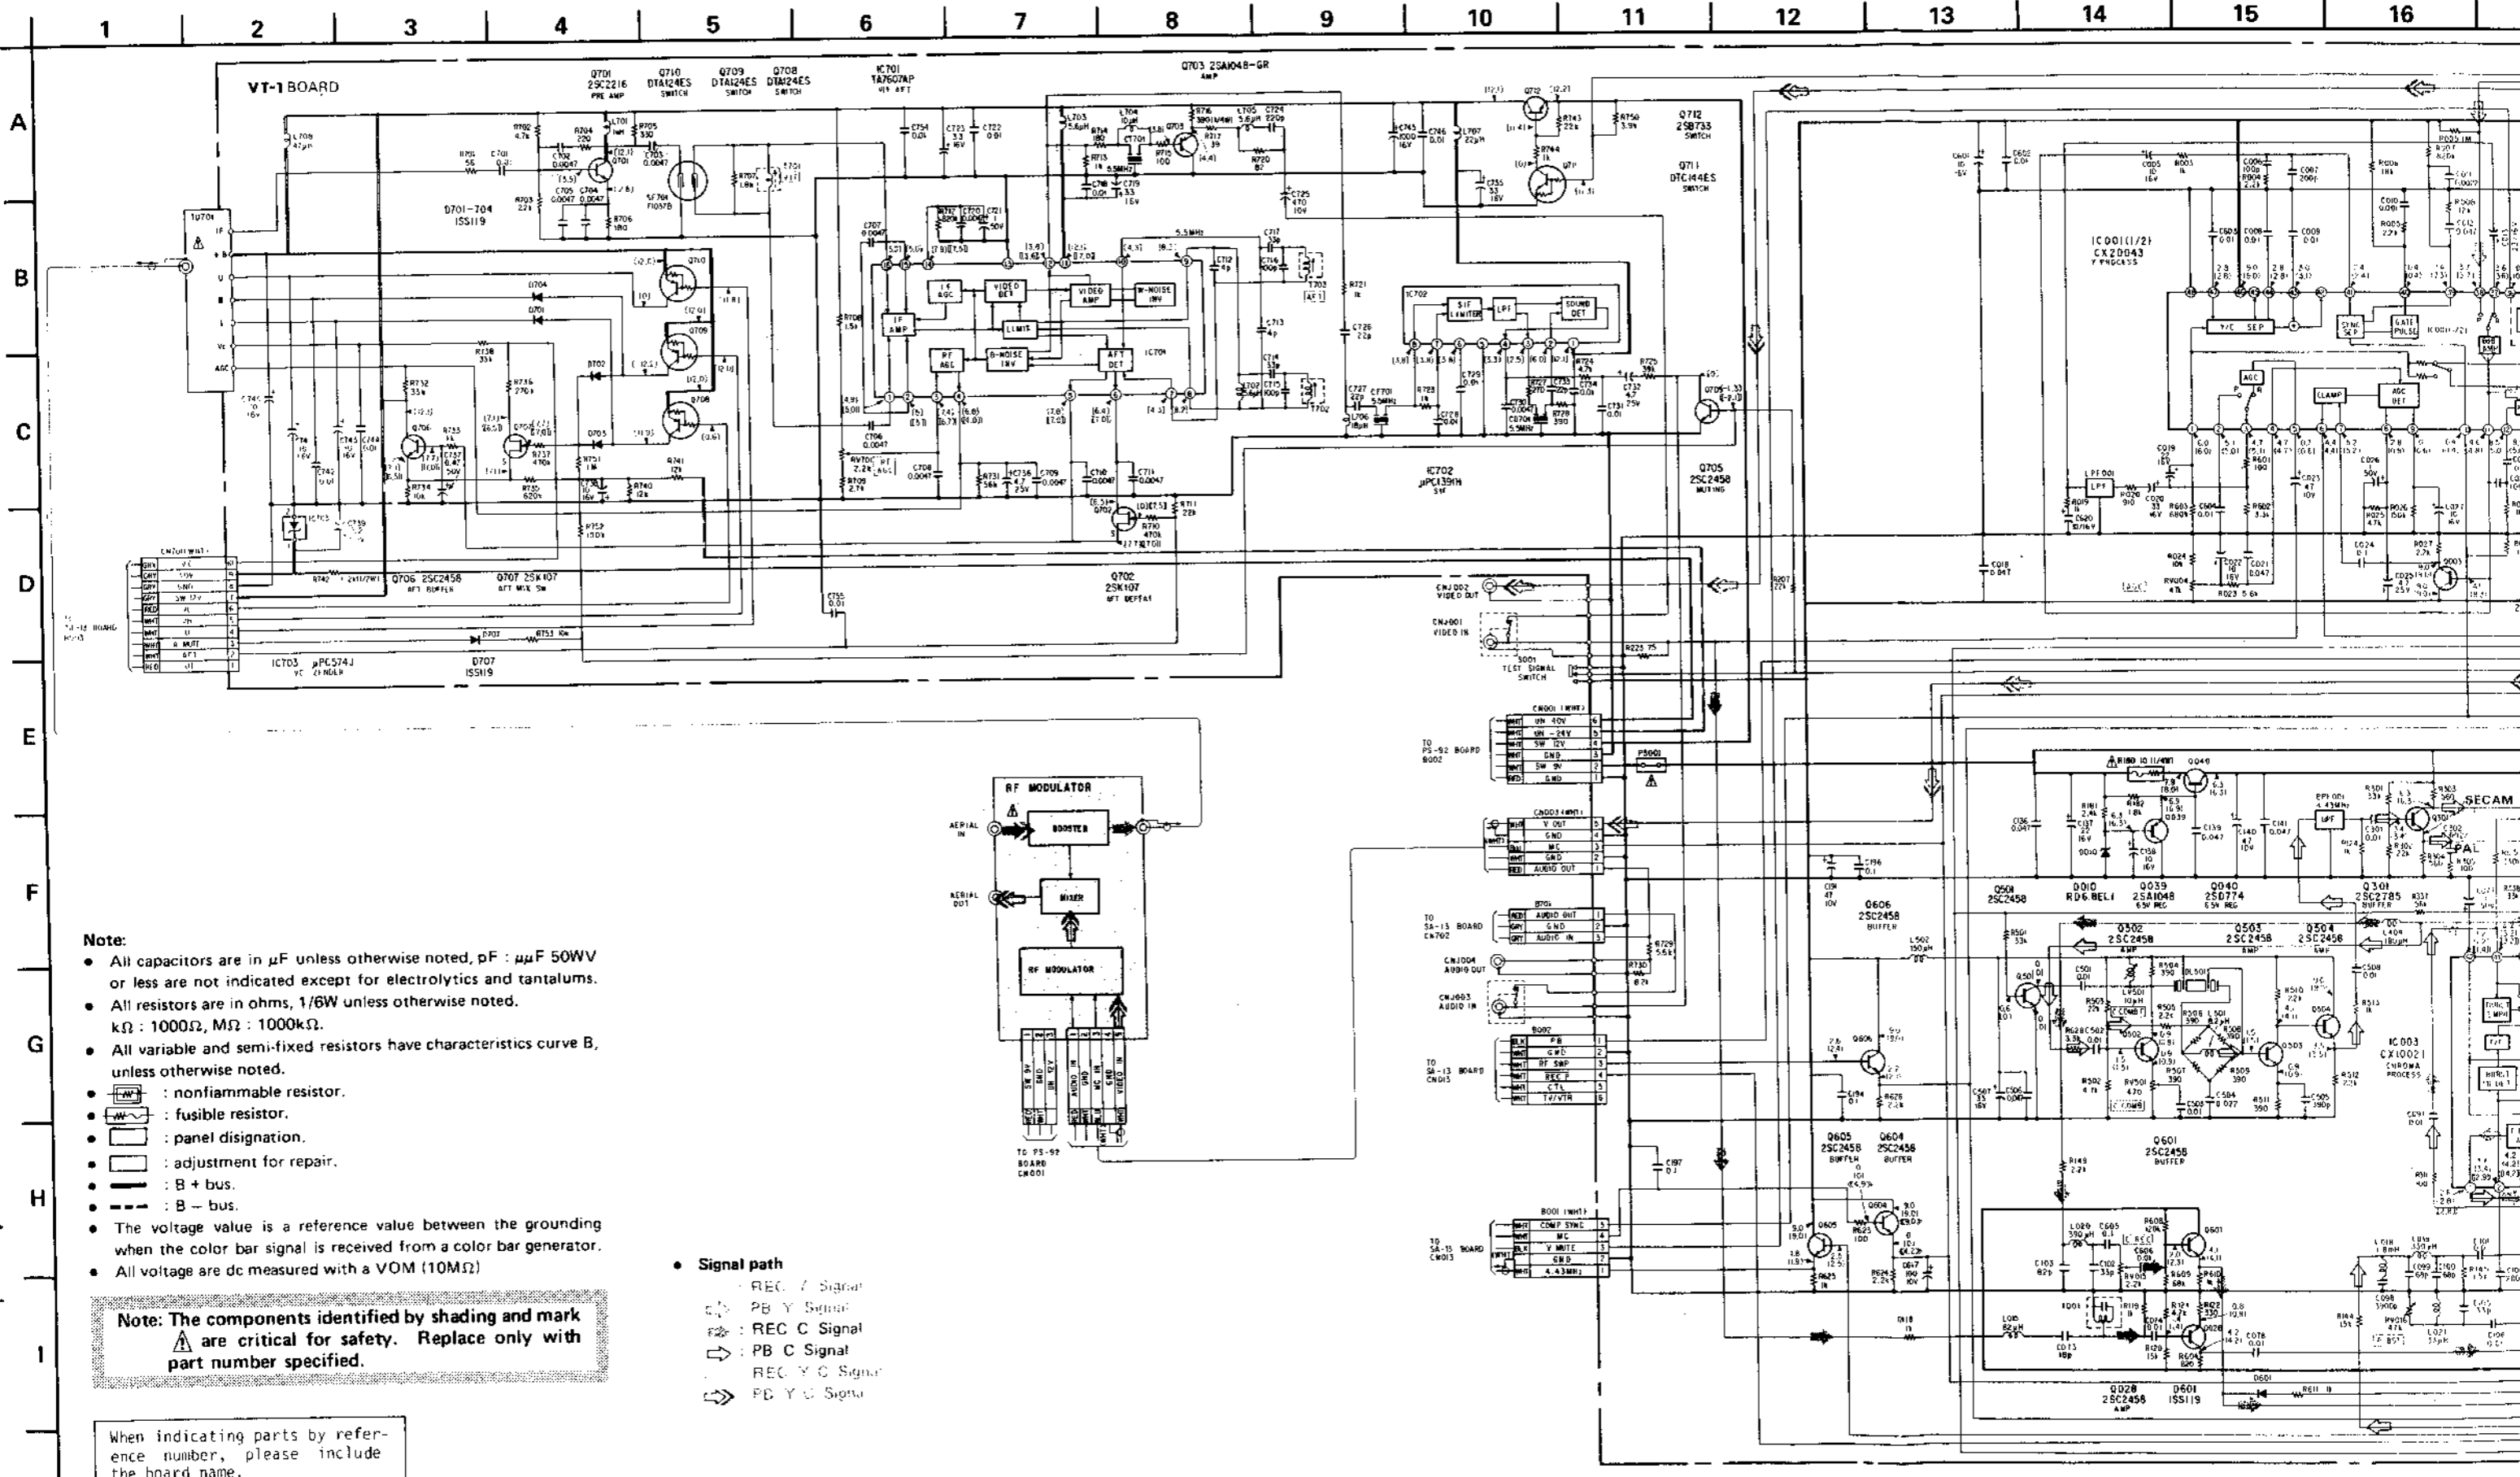


- Note:**
- All capacitors are in μF unless otherwise noted, $\text{pF} : \mu\text{F} 50\text{WV}$ or less are not indicated except for electrolytics and tantalums.
 - All resistors are in ohms, $1/6\text{W}$ unless otherwise noted. $\text{k}\Omega : 1000\Omega, \text{M}\Omega : 1000\text{k}\Omega.$
 - All variable and semi-fixed resistors have characteristics curve B, unless otherwise noted.
 - : nonflammable resistor.
 - : fusible resistor.
 - : panel designation.
 - : adjustment for repair.
 - : B + bus.
 - : B - bus.
 - The voltage value is a reference value between the grounding when the color bar signal is received from a color bar generator.
 - All voltage are dc measured with a VOM (10M Ω)

Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.


- **Signal path**
- REC. A Signal
 - PB Y Signal
 - REC C Signal
 - PB C Signal
 - REC Y C Signal
 - PB Y C Signal

When indicating parts by reference number, please include the board name.

14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30

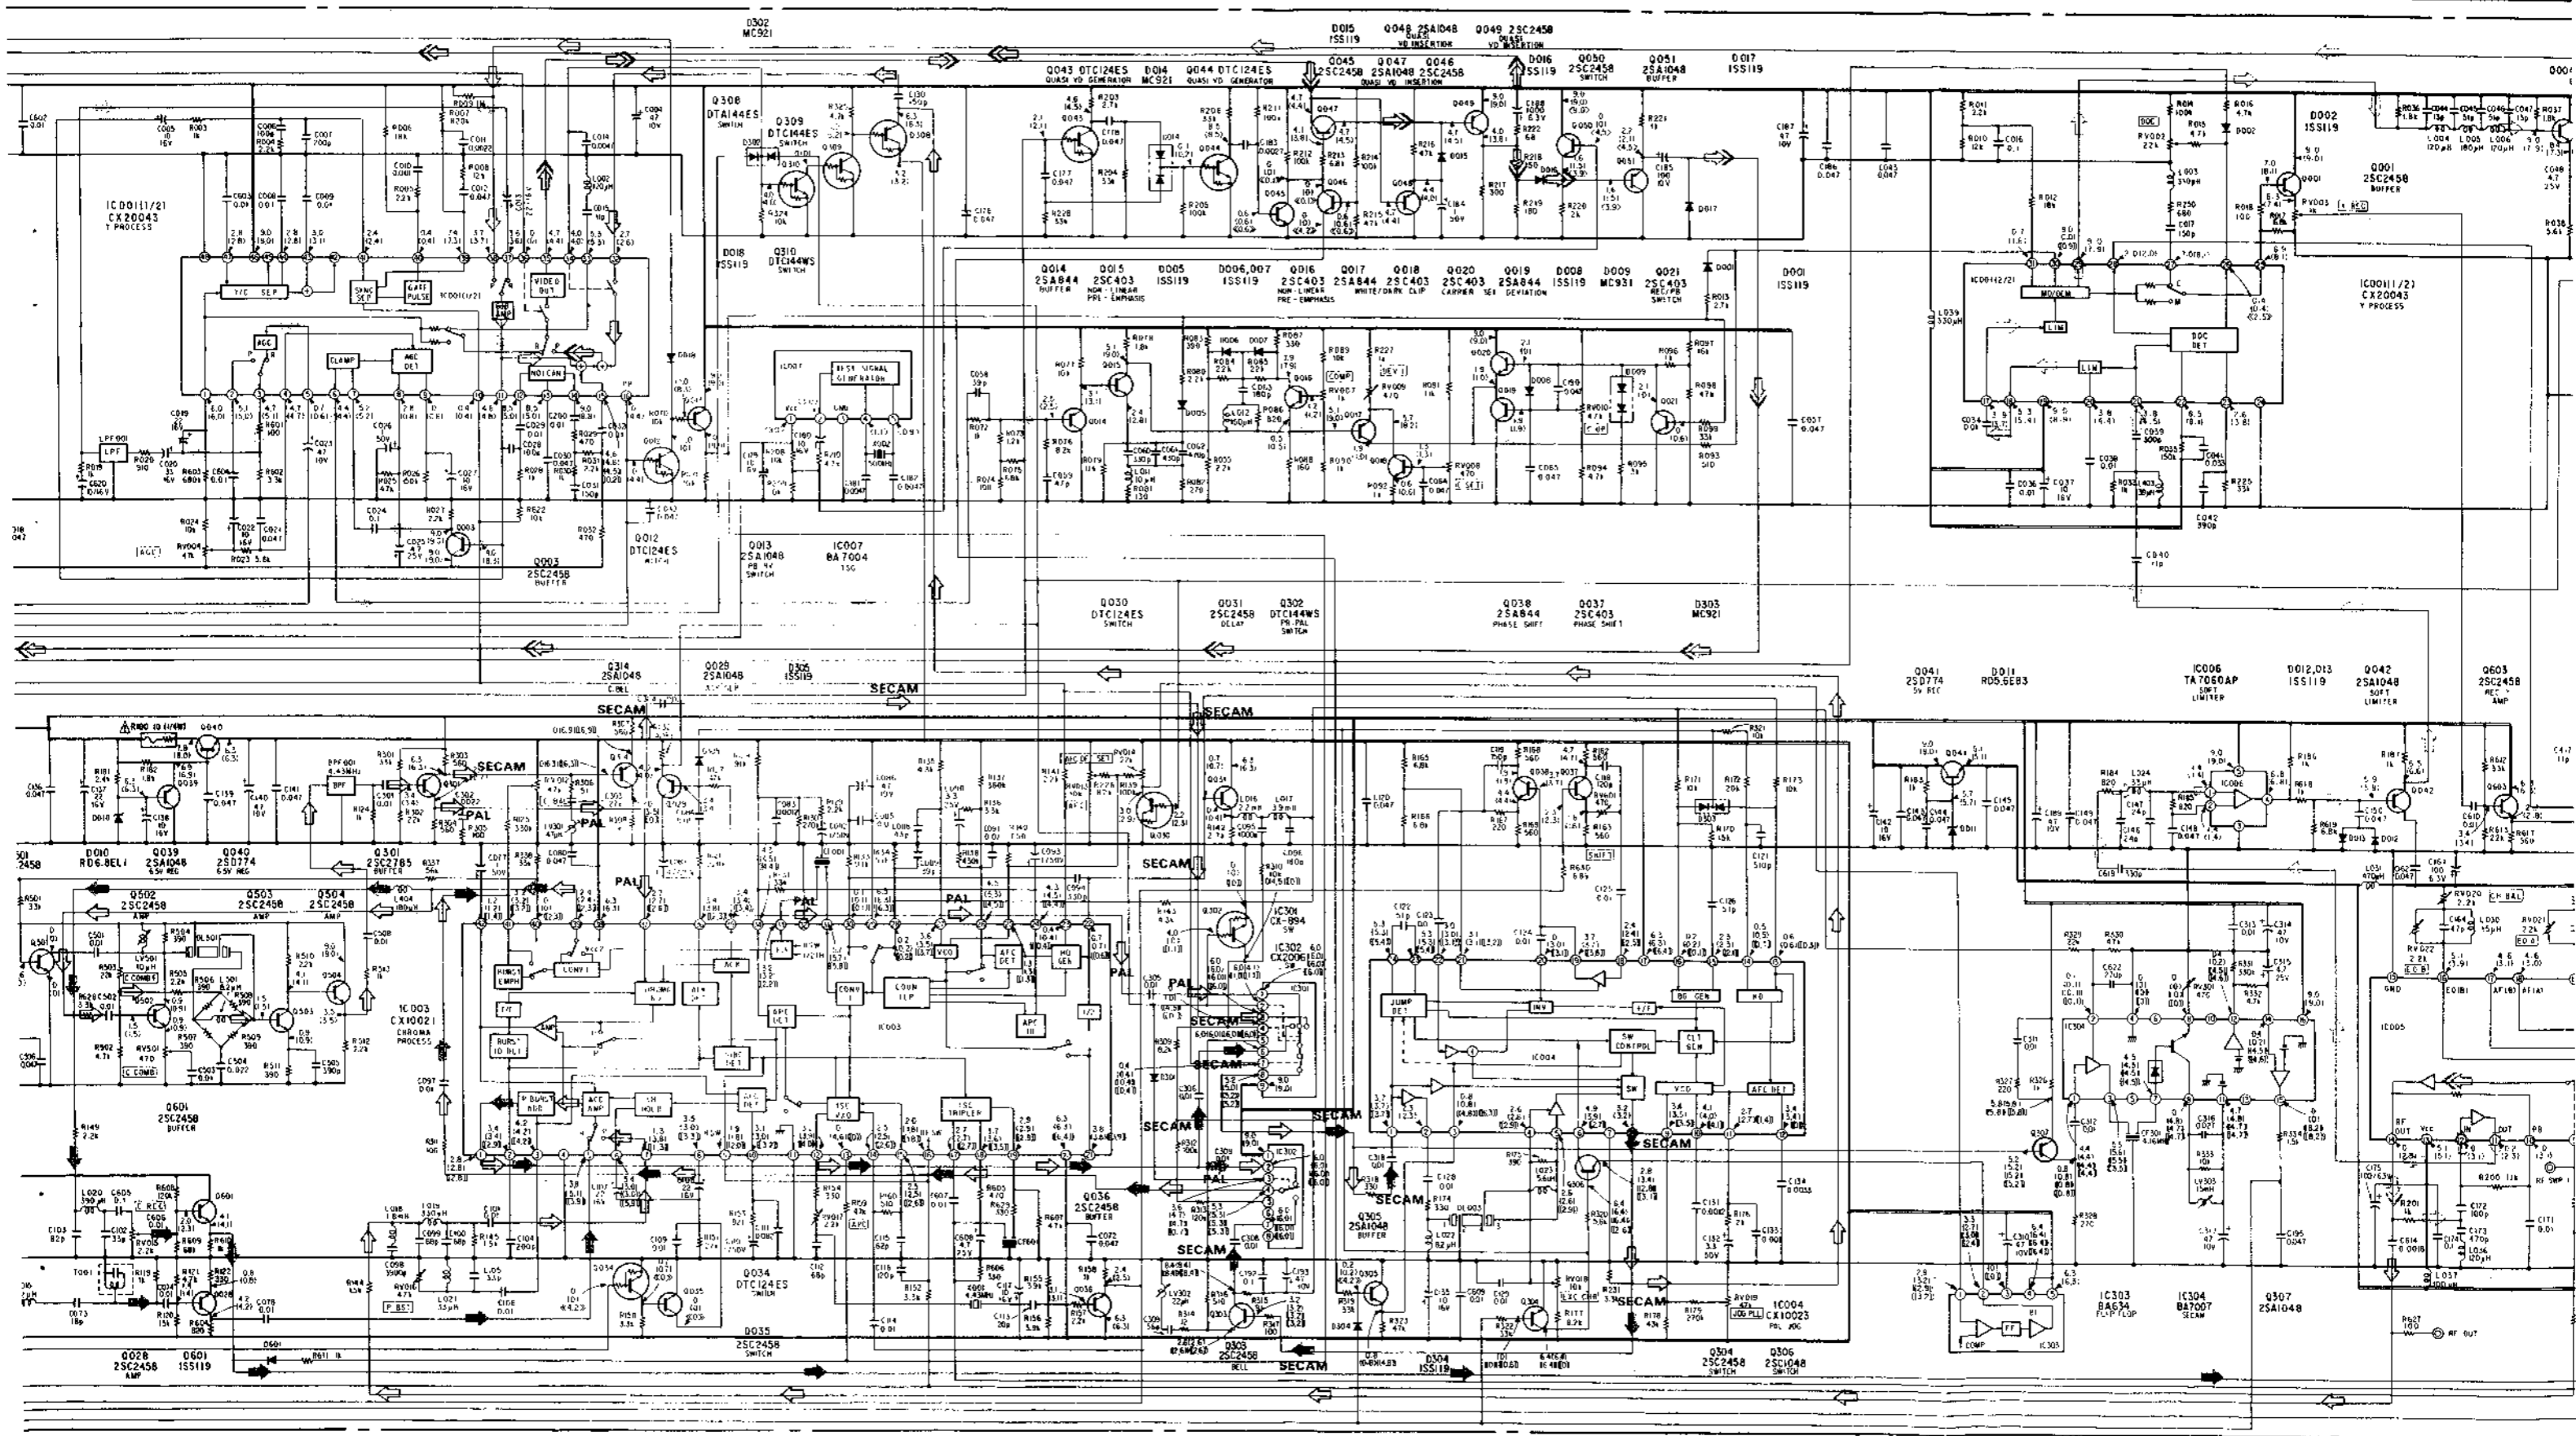

VIDEO, TUNER VIDEO, TUNER

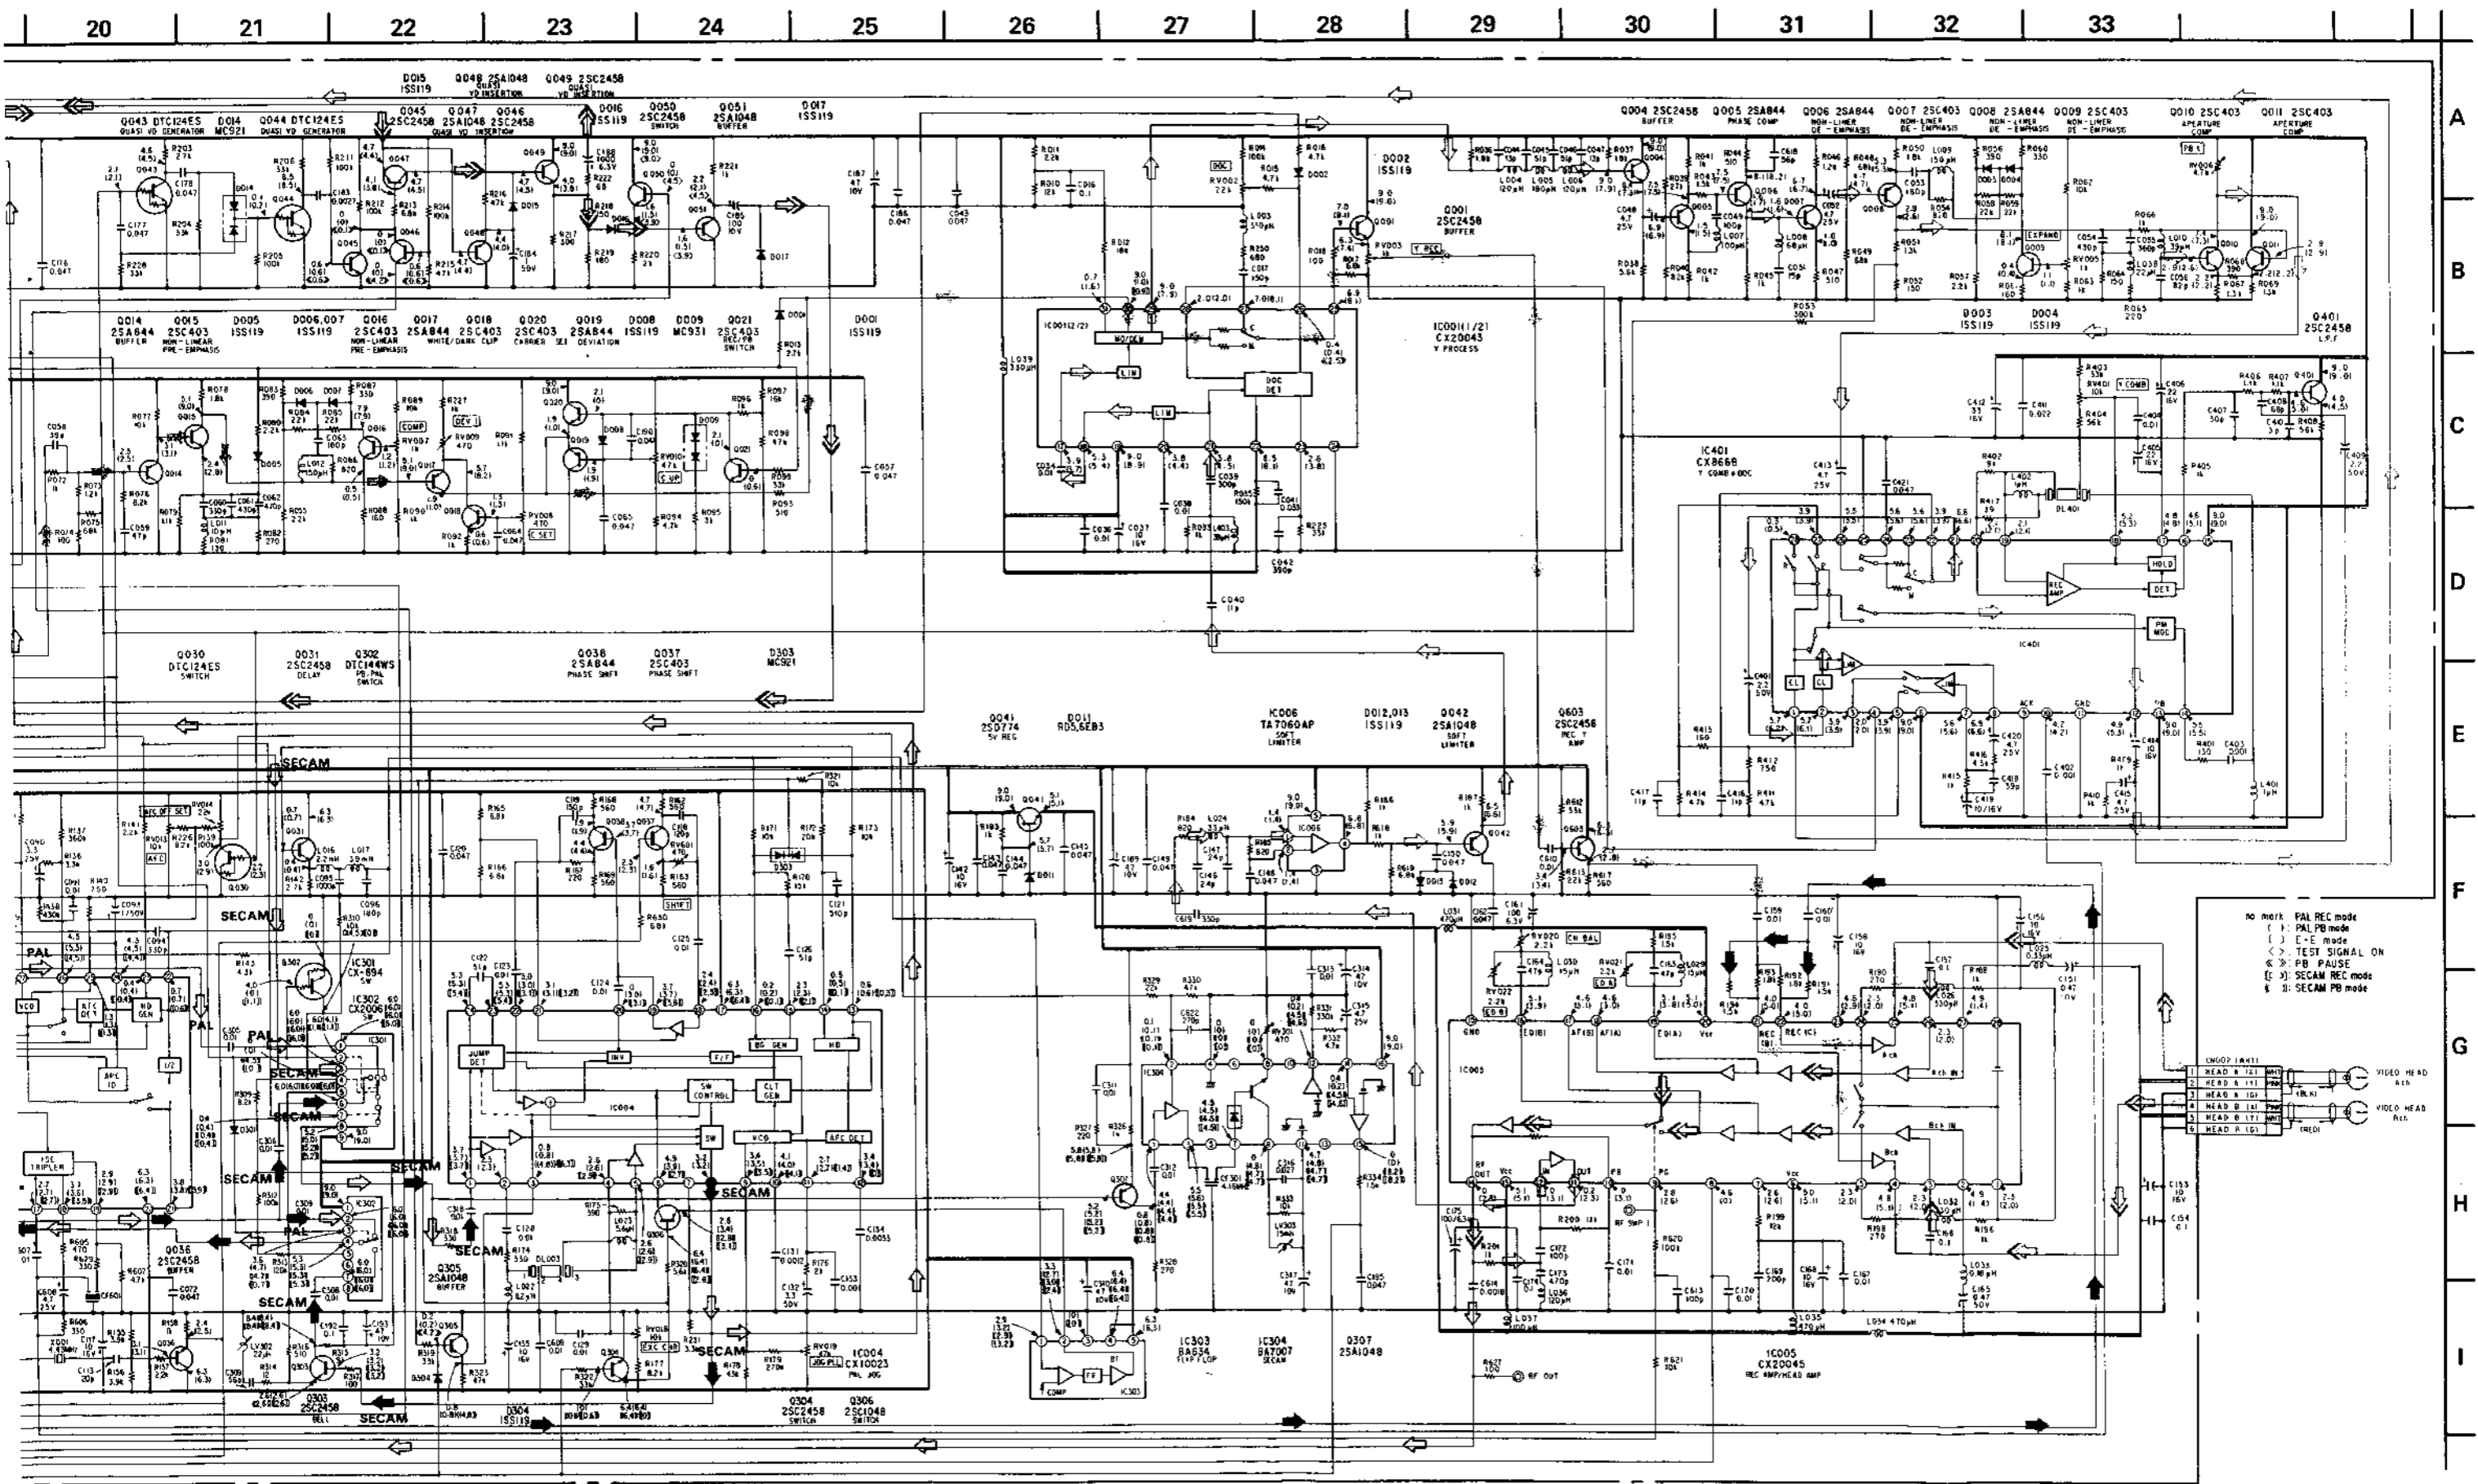

VIDEO, TUNER VIDEO, TUNER


VT-1 (VIDEO SIGNAL PROCESS, TUNER) PRINTED WIRING BOARD

— Ref. No. VT-1 BOARD: 1,000 series —







1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

When indicating parts by reference number, please include the board name.

VT-1 BOARD

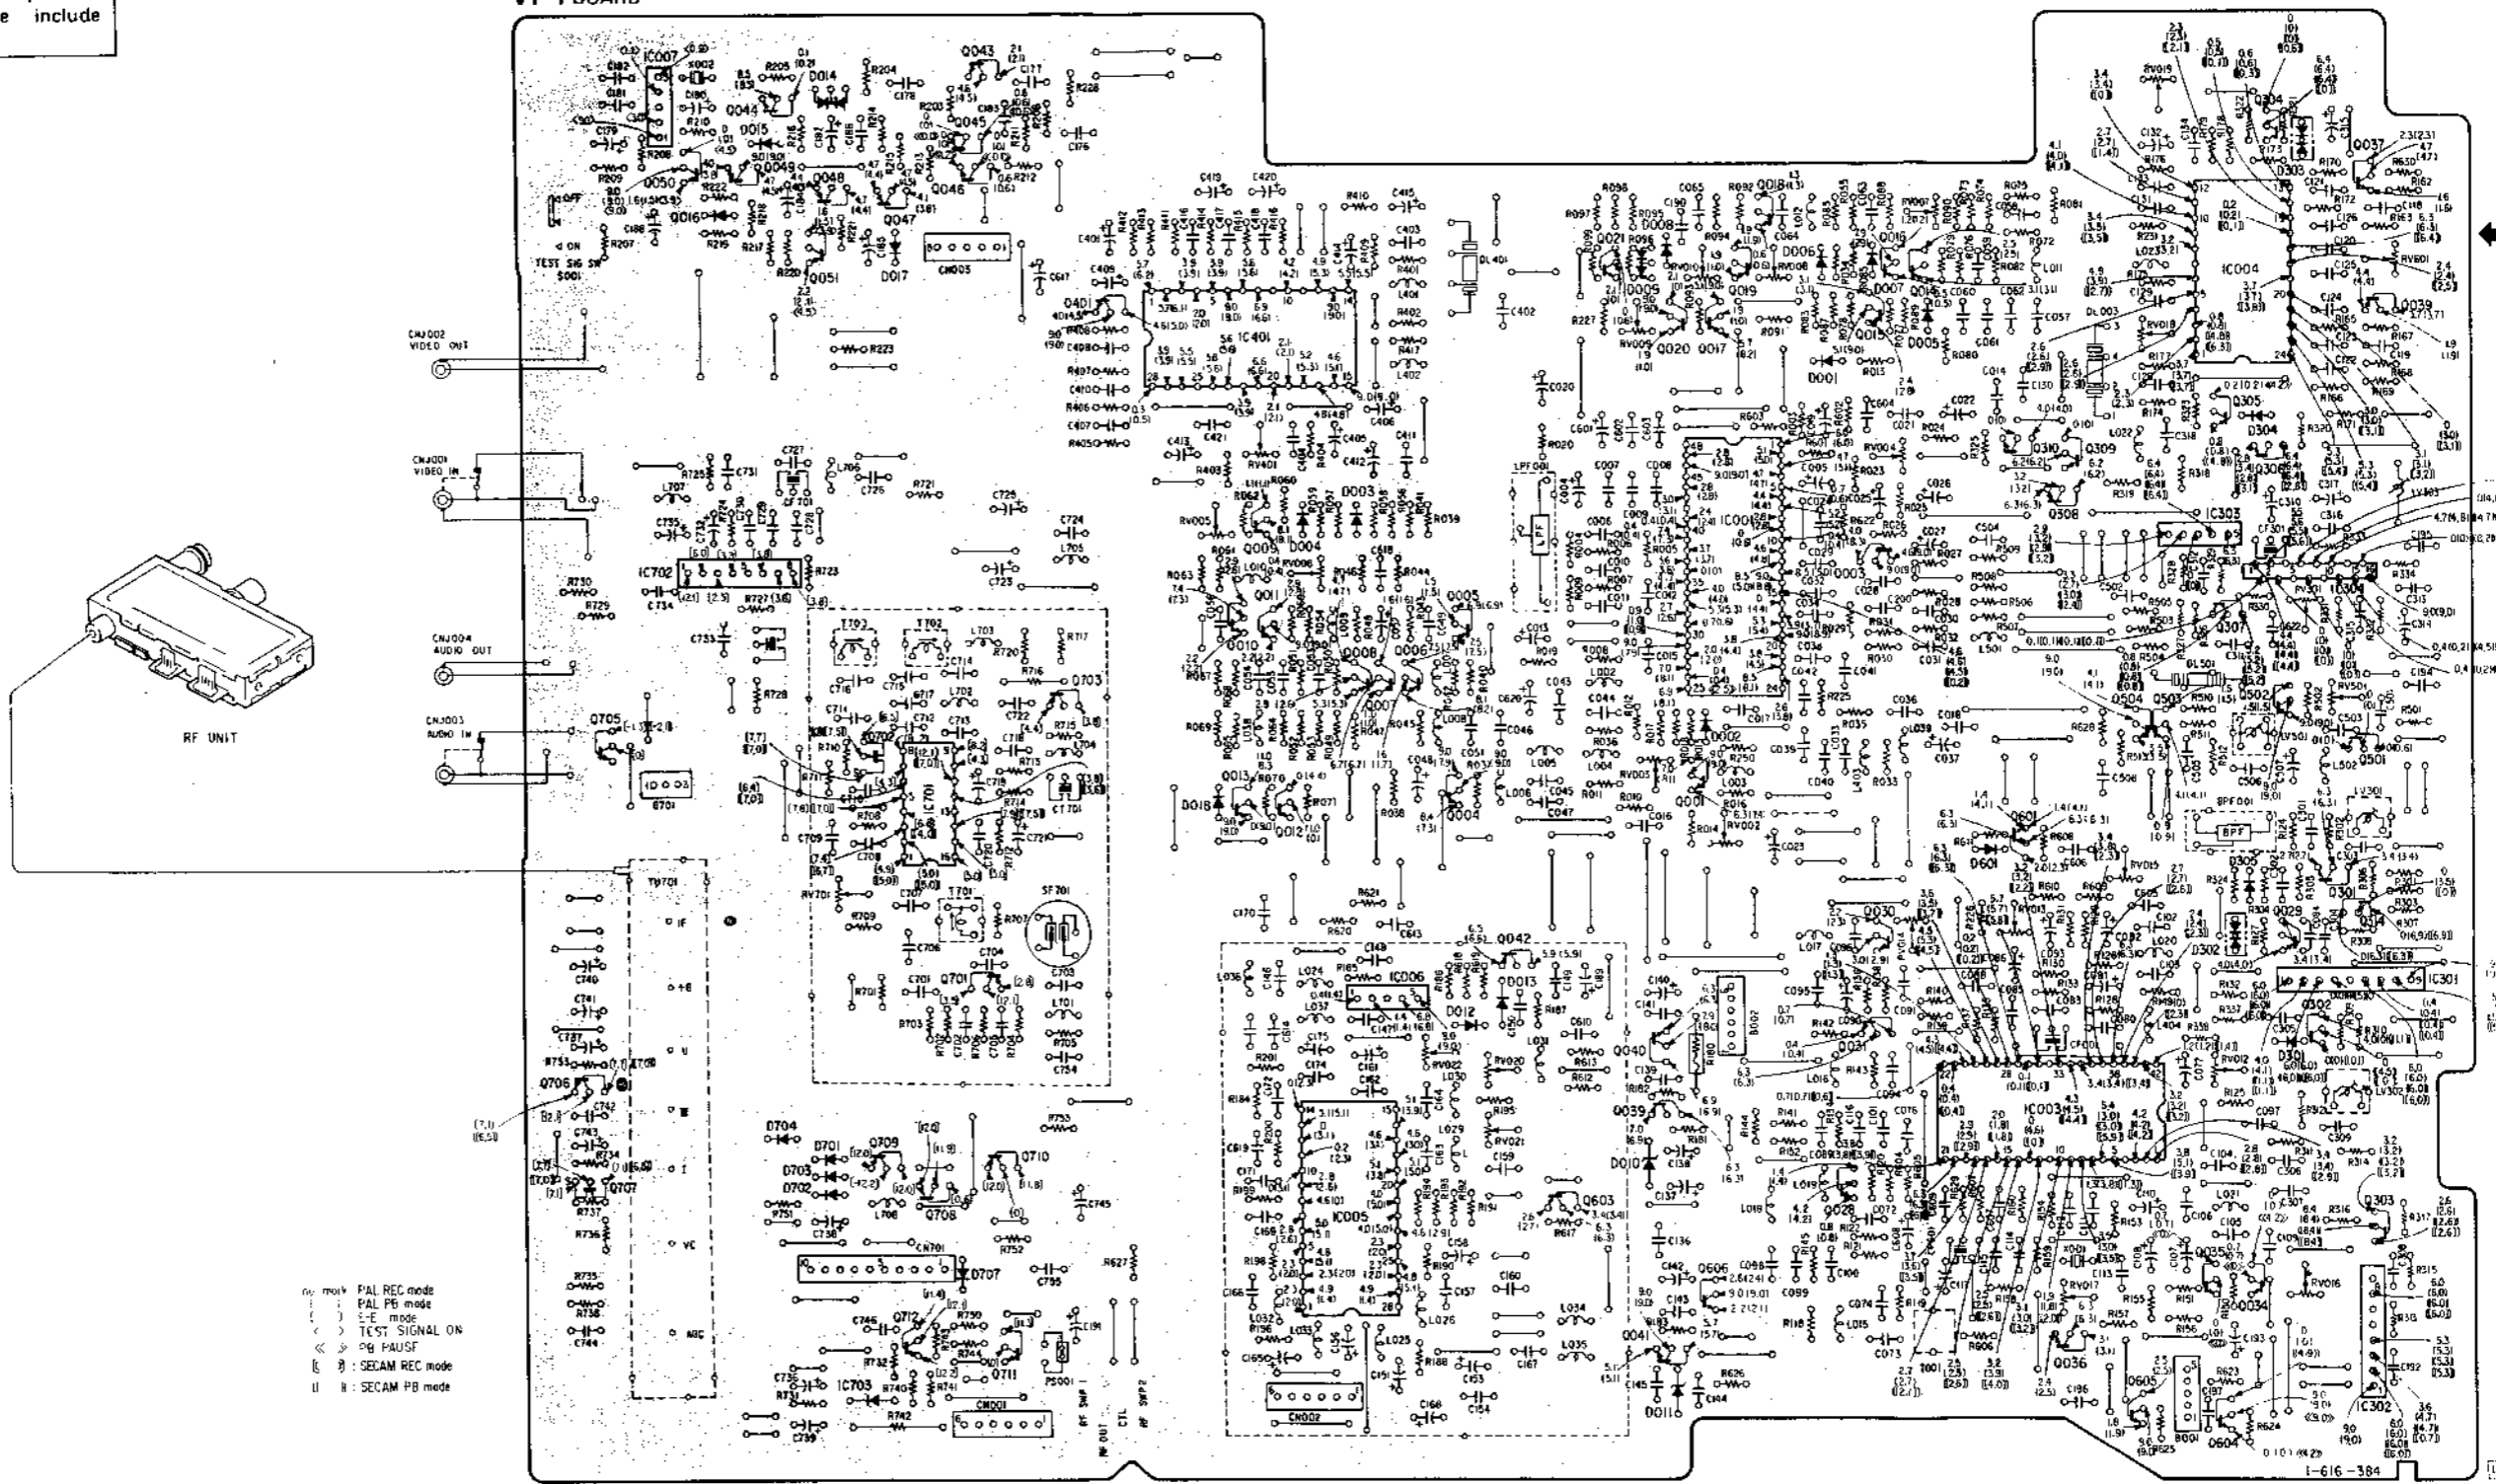


- PAL REC mode
- PAL PB mode
- S-E mode
- TEST SIGNAL ON
- PG PAUSE
- SECAM REC mode
- SECAM PB mode

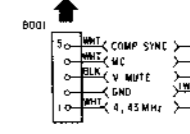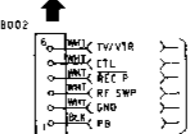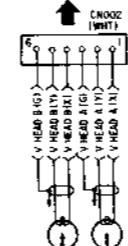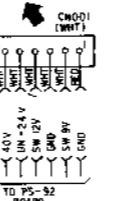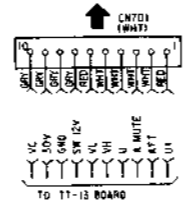


VIDEO, TUNER VIDEO, TUNER

15 | 16 | 17 | 18 | 19

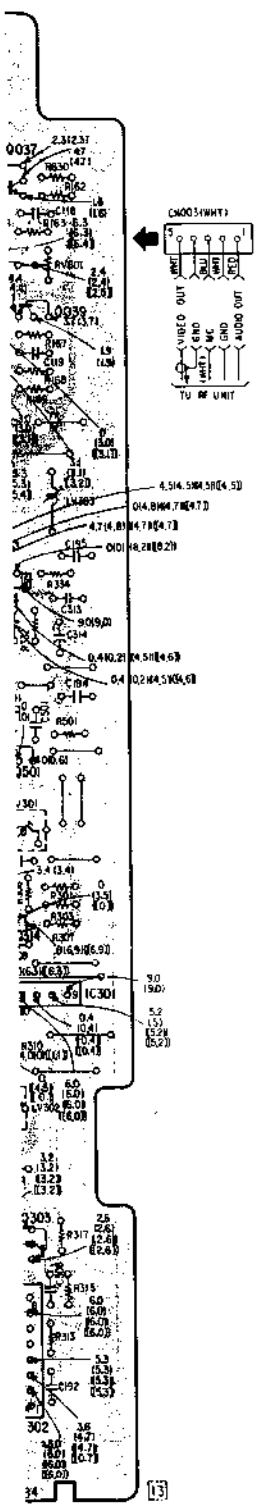


Q	IC	D	ADJ
043	IC007	014	RV019
044	014		
050,045,046,057	304	045	303
048,047,016	045		
051	017	046	RV007
021,019,016,014	RV601		
IC004	RV010		
401, IC401	RV008		
020,017,015,038	RV009	005	RV008
	RV018		
	001		
305	304		
310,309	RV401		RV004
306			
308			
009	004,003		RV005
IC303			
003	RV006		
IC702, IC001			
IC304			
010,011,005			RV301
307			
008,007,006			RV501
703	502		
705	504,503	002	RV003
702	501		
IC701	004		
013,012	008		RV002
601	601		
301	305		RV015
			RV701
314	302		RV014, RV013
030,029			
042			
701	IC006	012	
	IC301		
031	013		
040,302	301		RV022
			RV020
706			RV012
039, IC003			
			RV021
709,710	704		
707	701		
	703,040		
708,603	702		
IC005,303			
606,035,034	707		RV016
			RV017
712,711			
041,036			
IC703	011		
	IC302		
605,604			
Q	IC	D	ADJ

- ○ : Indicates a leadwire mounted on the component side.
 - ● : Indicates a leadwire mounted on the printed side.
 - ■ : soldering side.
 - ■ : B+ pattern.
- Digital transistor (VT-1: Q012, D30, D34, 043, 044, 302, 308, 309, 310, 708, 709, 710, 711) transistor with resistors. Refer to the VT-1 board schematic diagram for digital transistor.

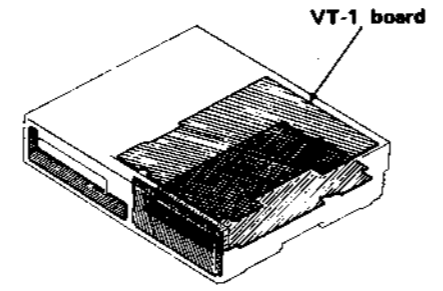


A
B
C
D
E
F
G
H
I
J

VT-1 BOARD




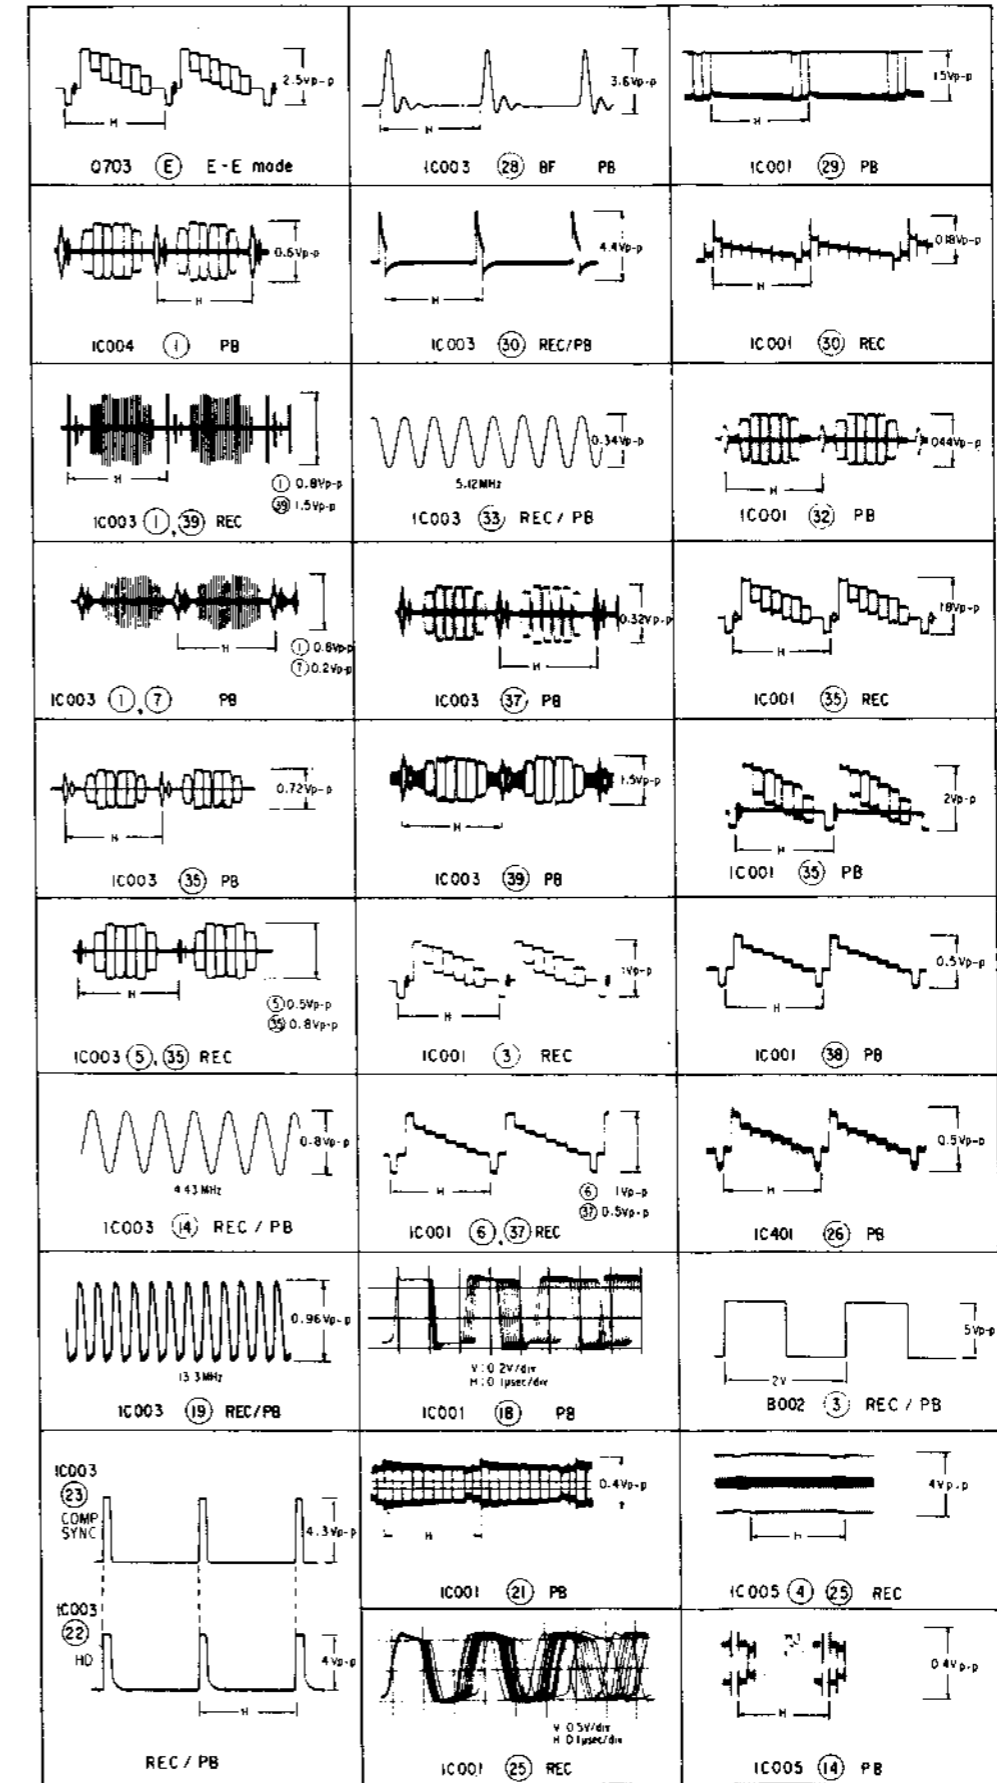


(SECAM)

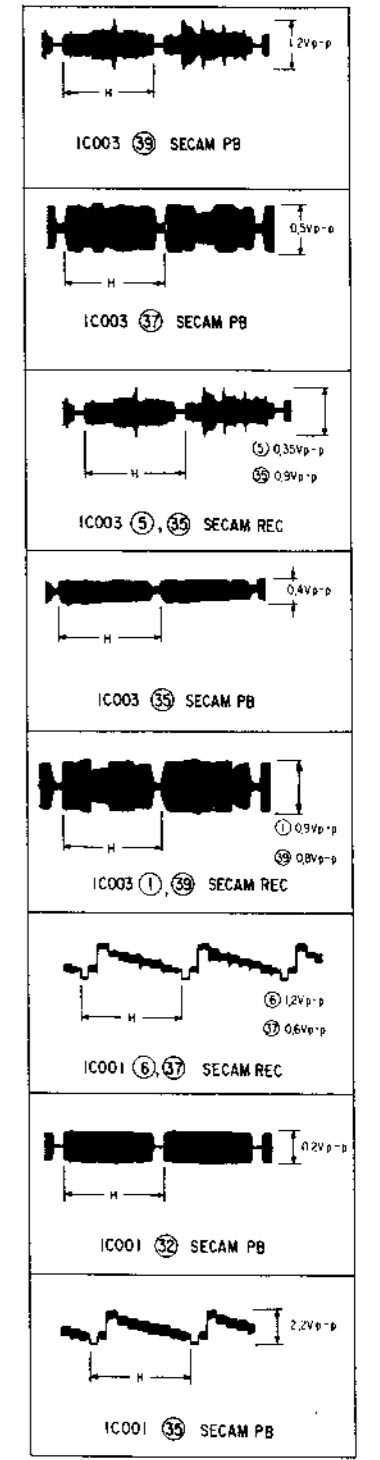

SERVO, SYSTEM CONTROL, AUDIO SERVO, SYSTEM CONTROL, AUDIO

16 17 18 19 20 21 22 23 24 25 26 27 28 29 30

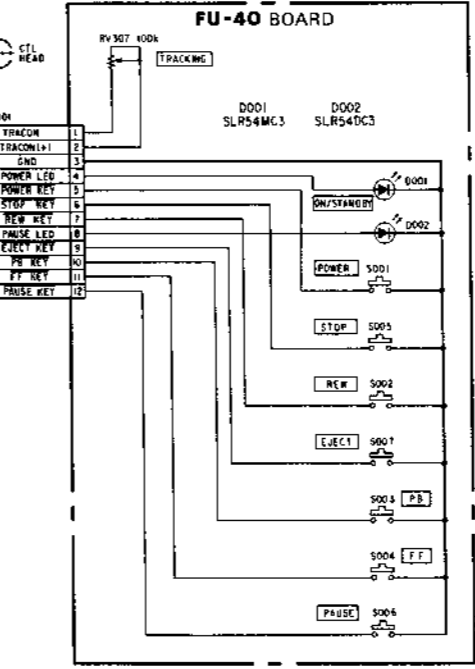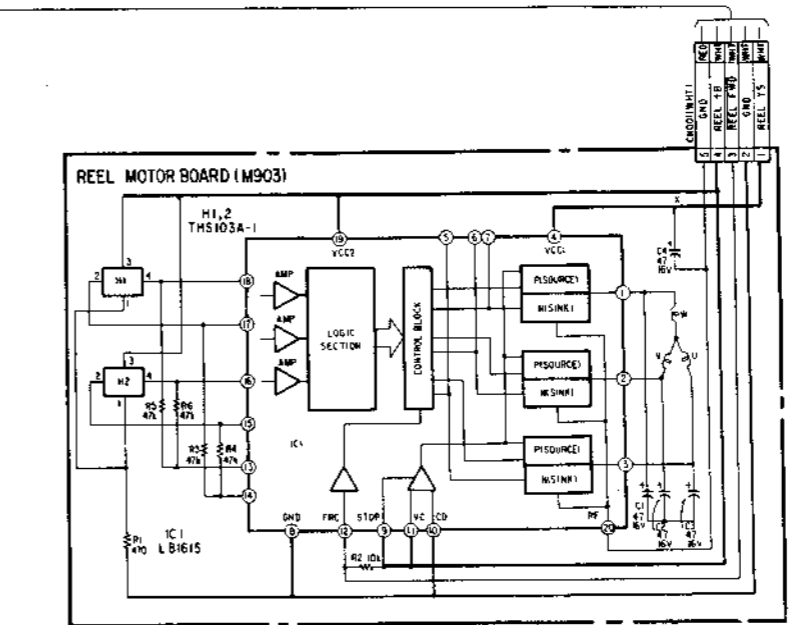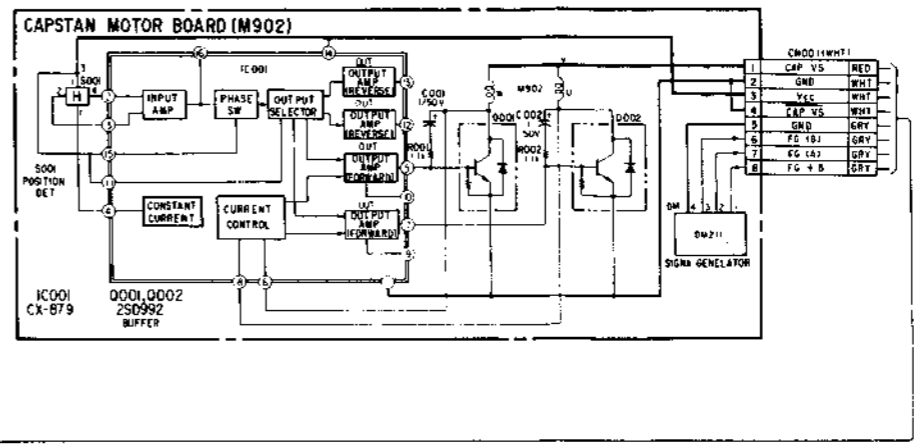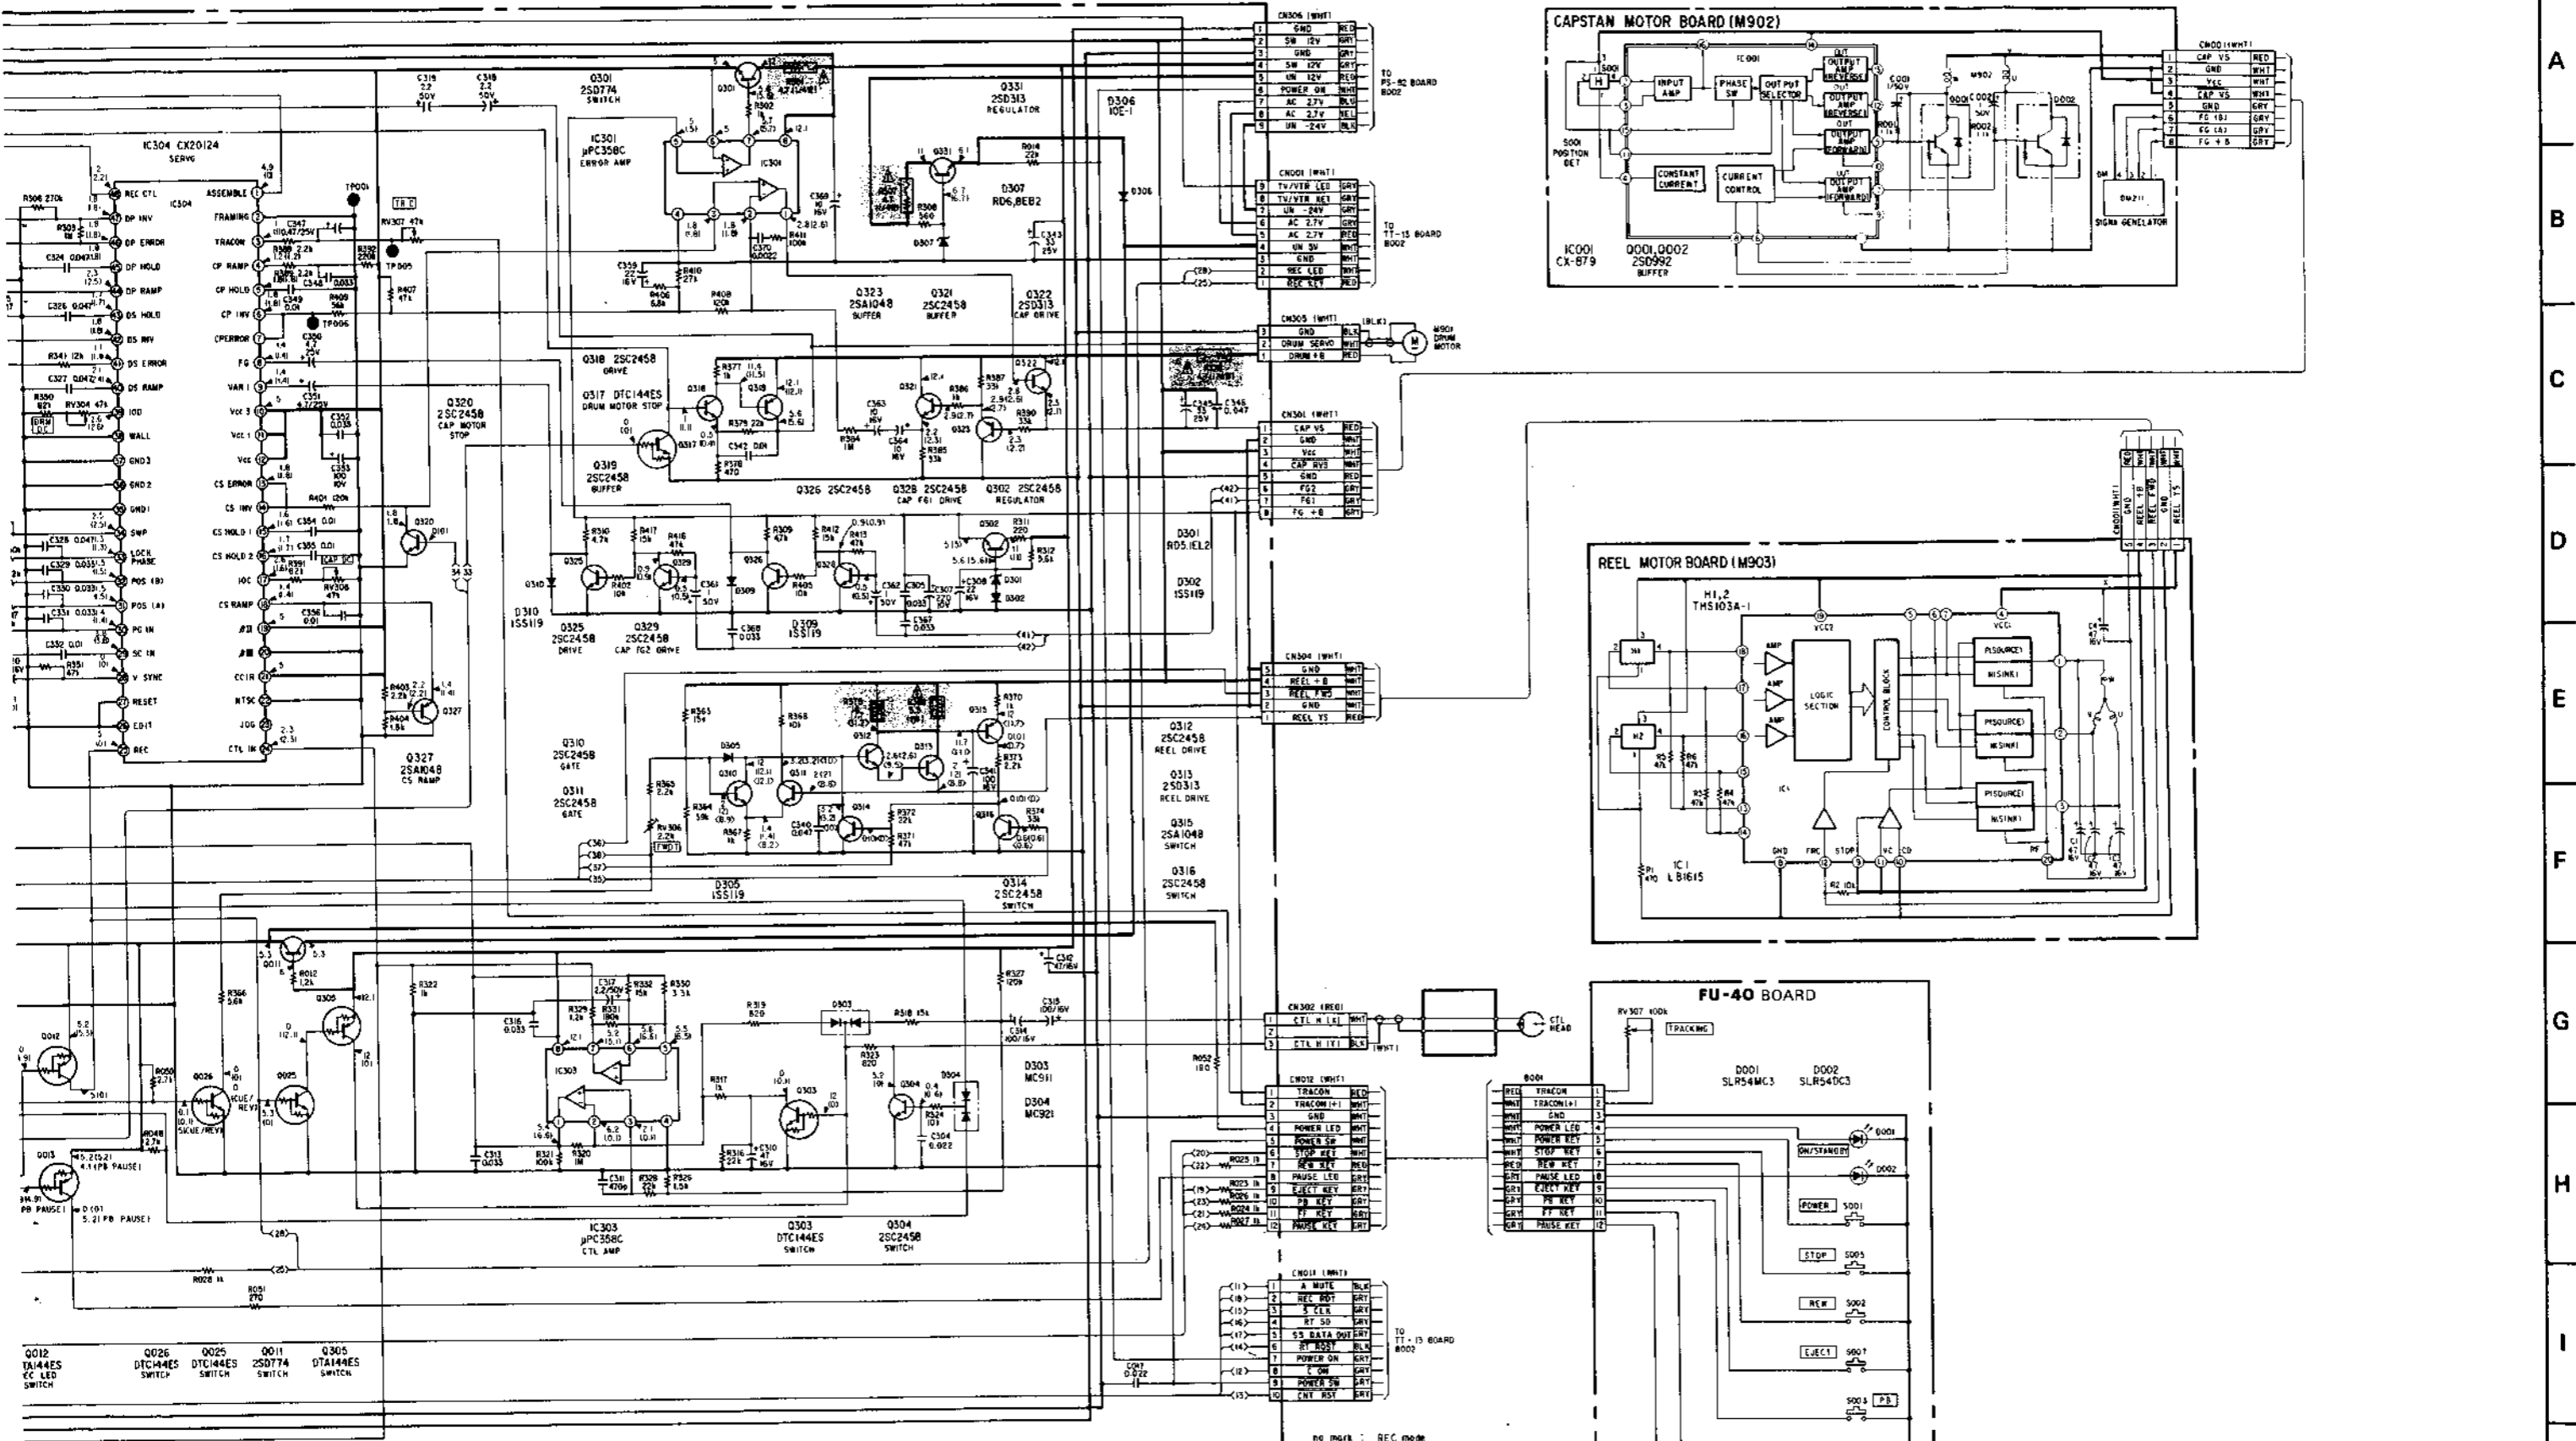

NO MARK : REC mode
 () : PB mode
 < > : FF mode
 [] : REW mode
 || : LOADING mode
 < > : UNLOADING mode
 || : CUE mode
 * : can not be measured

SERVO, SYSTEM CONTROL, AUDIO SERVO, SYSTEM CONTROL, AUDIO

SA-13 (SERVO, SYSTEM CONTROL, AUDIO), FU-40 (FUNCTION, TRACKING CONTROL), LM-16 (LOADING MOTOR), RD-21 (ROTATION DETECTOR), CAPSTAN MOTOR, R STATOR (REEL MOTOR) BOARD: 8,100 series
 - Ref. No. SA-13 BOARD: 4,000 series, FU-40 BOARD: 8,000 series, LM-16 BOARD: 7,300 series, RD-21 BOARD: 3,000 series, CAPSTAN MOTOR: 8,200 series, R STATOR (REEL MOTOR) BOARD: 8,100 series

Note:

SCHEMATIC DIAGRAMS



- All capacitors are in μF unless otherwise noted, pF : μF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in ohms, 1/6W unless otherwise noted. $\text{k}\Omega$: 1000 Ω , $\text{M}\Omega$: 1000k Ω .
- All variable and semi-fixed resistors have characteristics curve B, unless otherwise noted.
- : nonflammable resistor.
- : fusible resistor.
- : panel designation.
- : adjustment for repair.
- : B + bus.
- : B - bus.
- The voltage value is a reference value between the grounding when the color bar signal is received from a color bar generator.
- All voltage are dc measured with a VOM (10M Ω)

Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

PRINTED WIRING BOARDS

- : parts extracted from the component side.
 - : parts extracted from the conductor side.
 - : conductor side pattern.
 - : component side pattern.
 - : B+ pattern.
- Digital transistor (SA-13 : Q001, 002, 003, 004, 007, 008, 012, 013, 025, 026, 303, 305, 307, 309, 324, 330, 705) transistor with resistors.
 Refer to the SA-13 board schematic diagram for digital transistor.

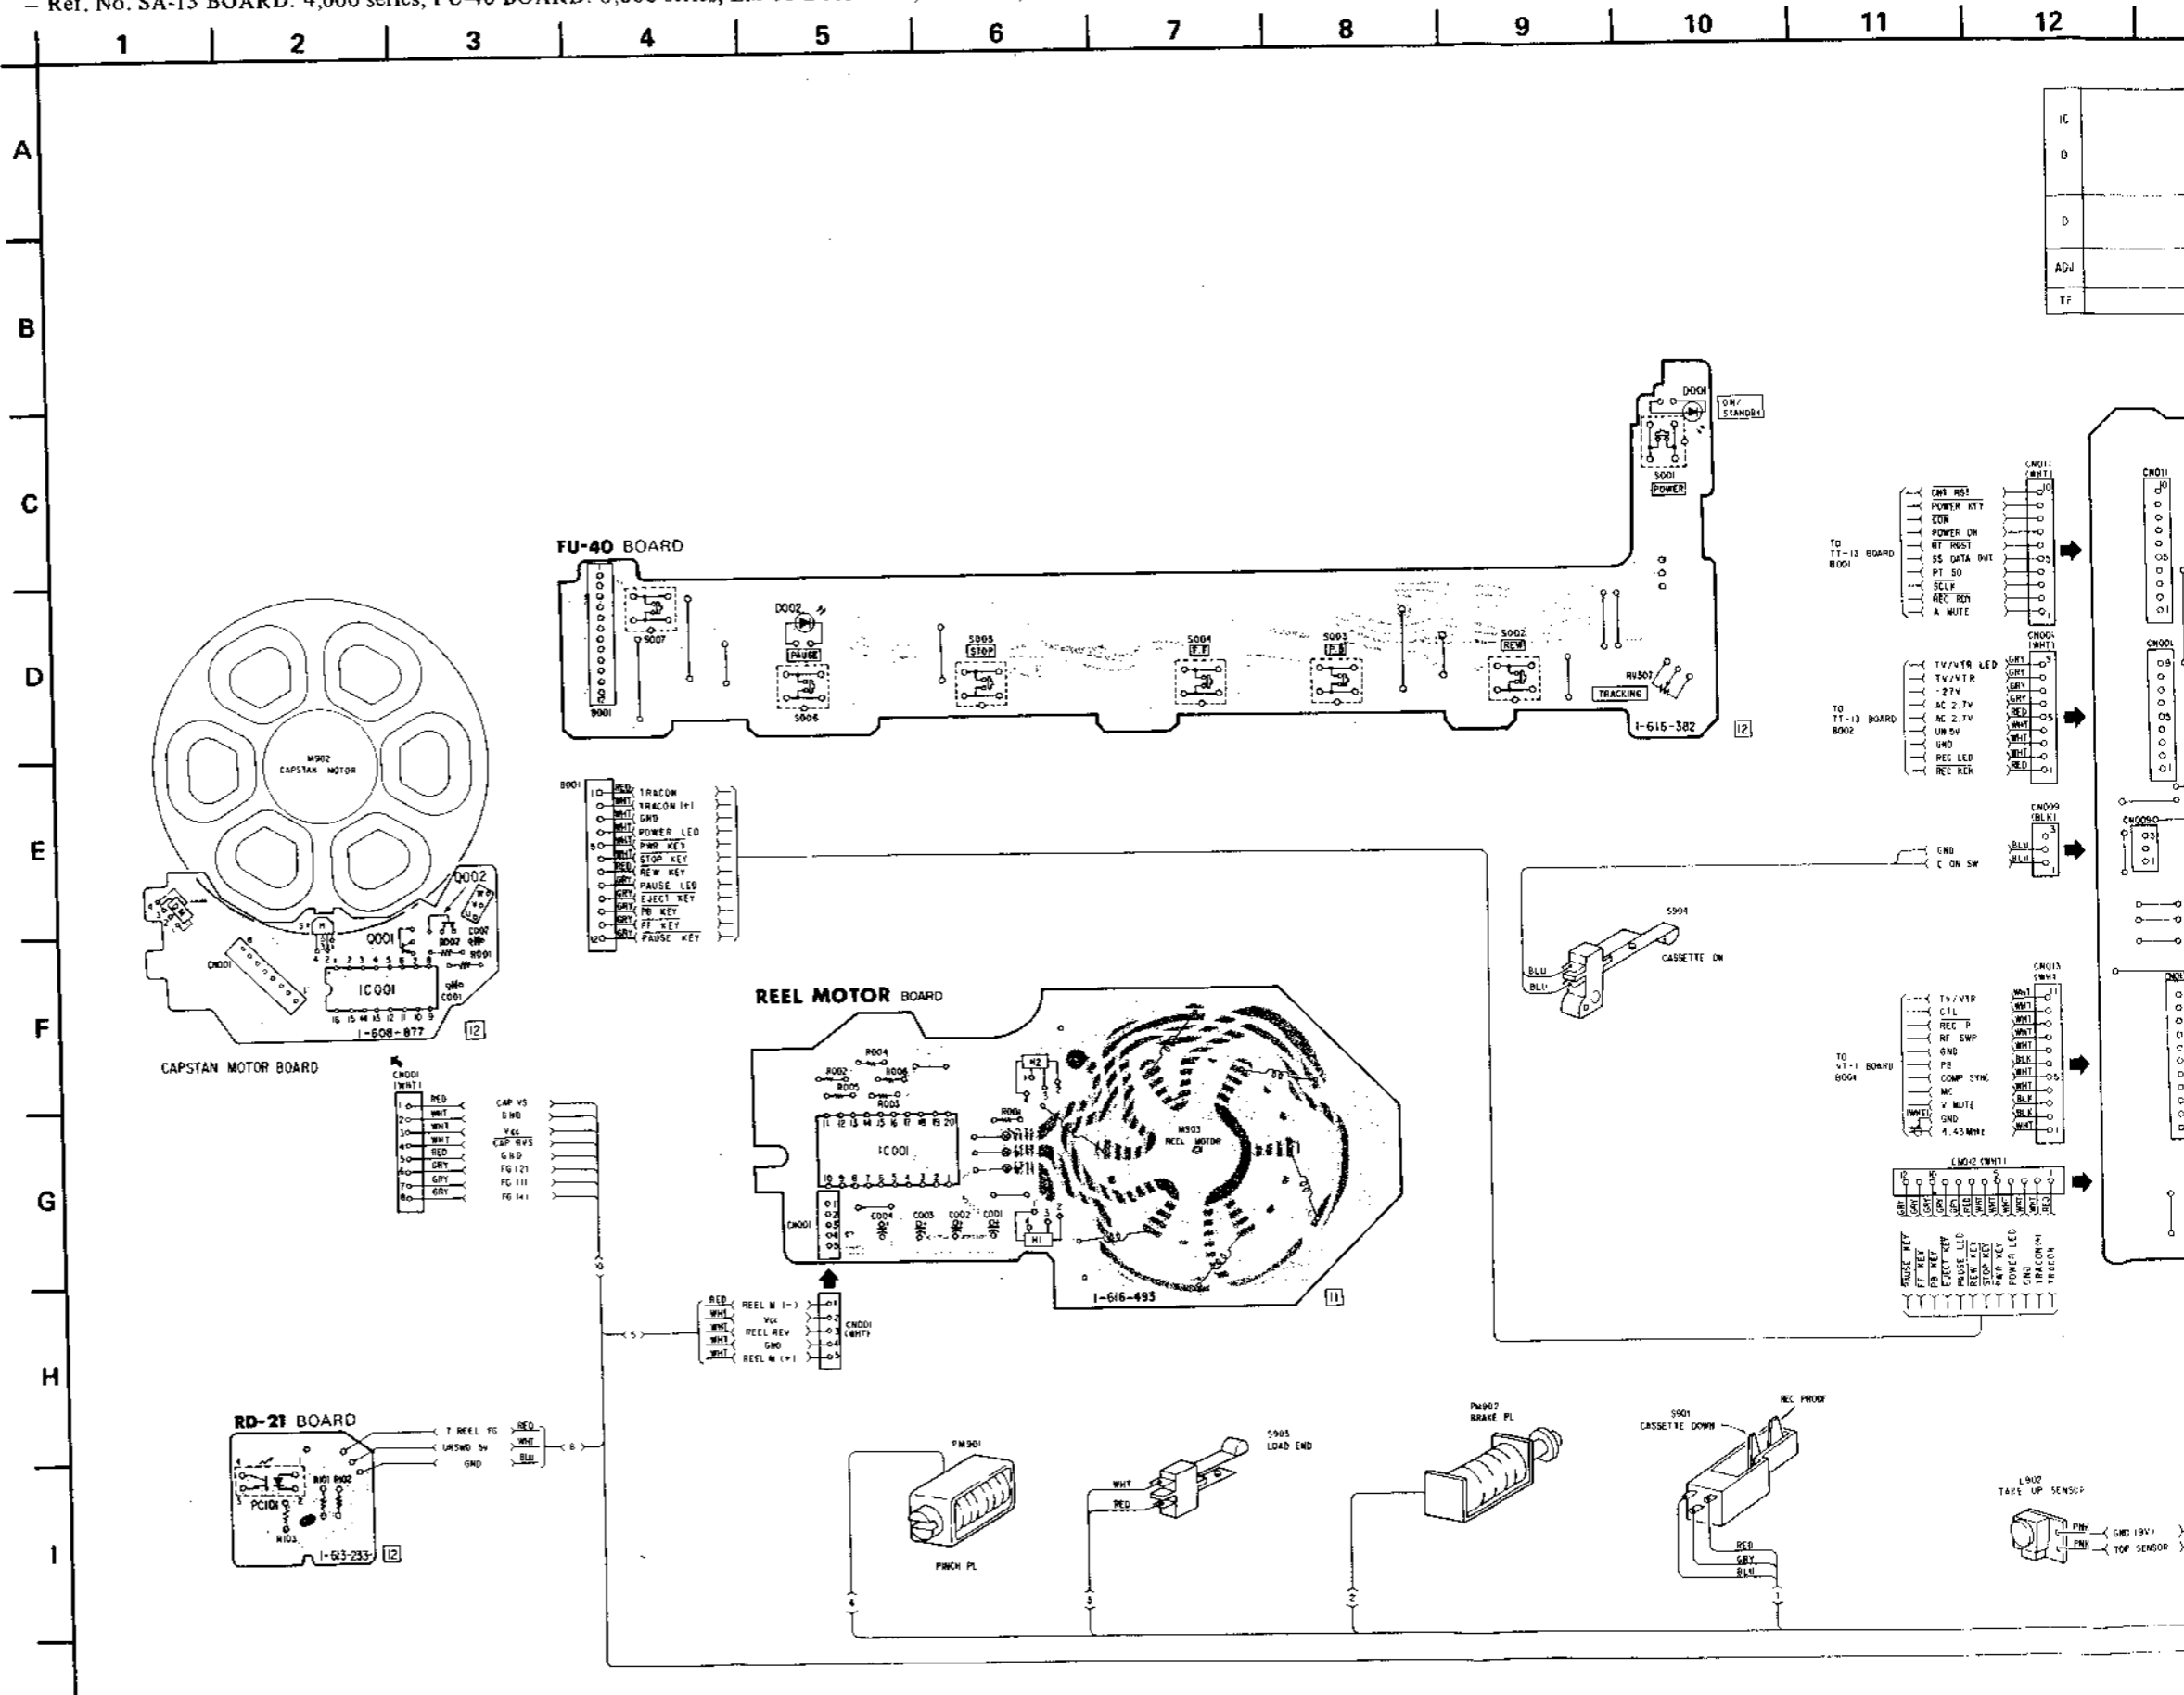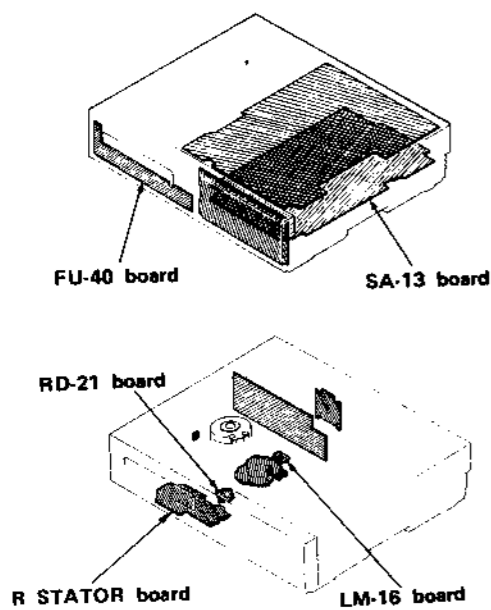



SERVO, SYSTEM CONTROL, AUDIO SERVO, SYSTEM CONTROL, AUDIO

FOR, R STATOR (REEL MOTOR) PRINTED WIRING BOARDS
 MOTOR) BOARD: 8,100 series -

1 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27


IC	013 012	IC003	028 026															324	IC302	IC305			702 705	IC701			
Q																			307	330 308			702 705	IC702			
		314 312 316 310																	309	306	IC306	IC001	704	703		331	
		315 313 311																	317	318			301				
D			306																308	702	701						
ADJ			009	305		004			008										003 001	302	301						307
																			002	303	304						702
TP																			004	005	006	007					

5A-13 BOARD

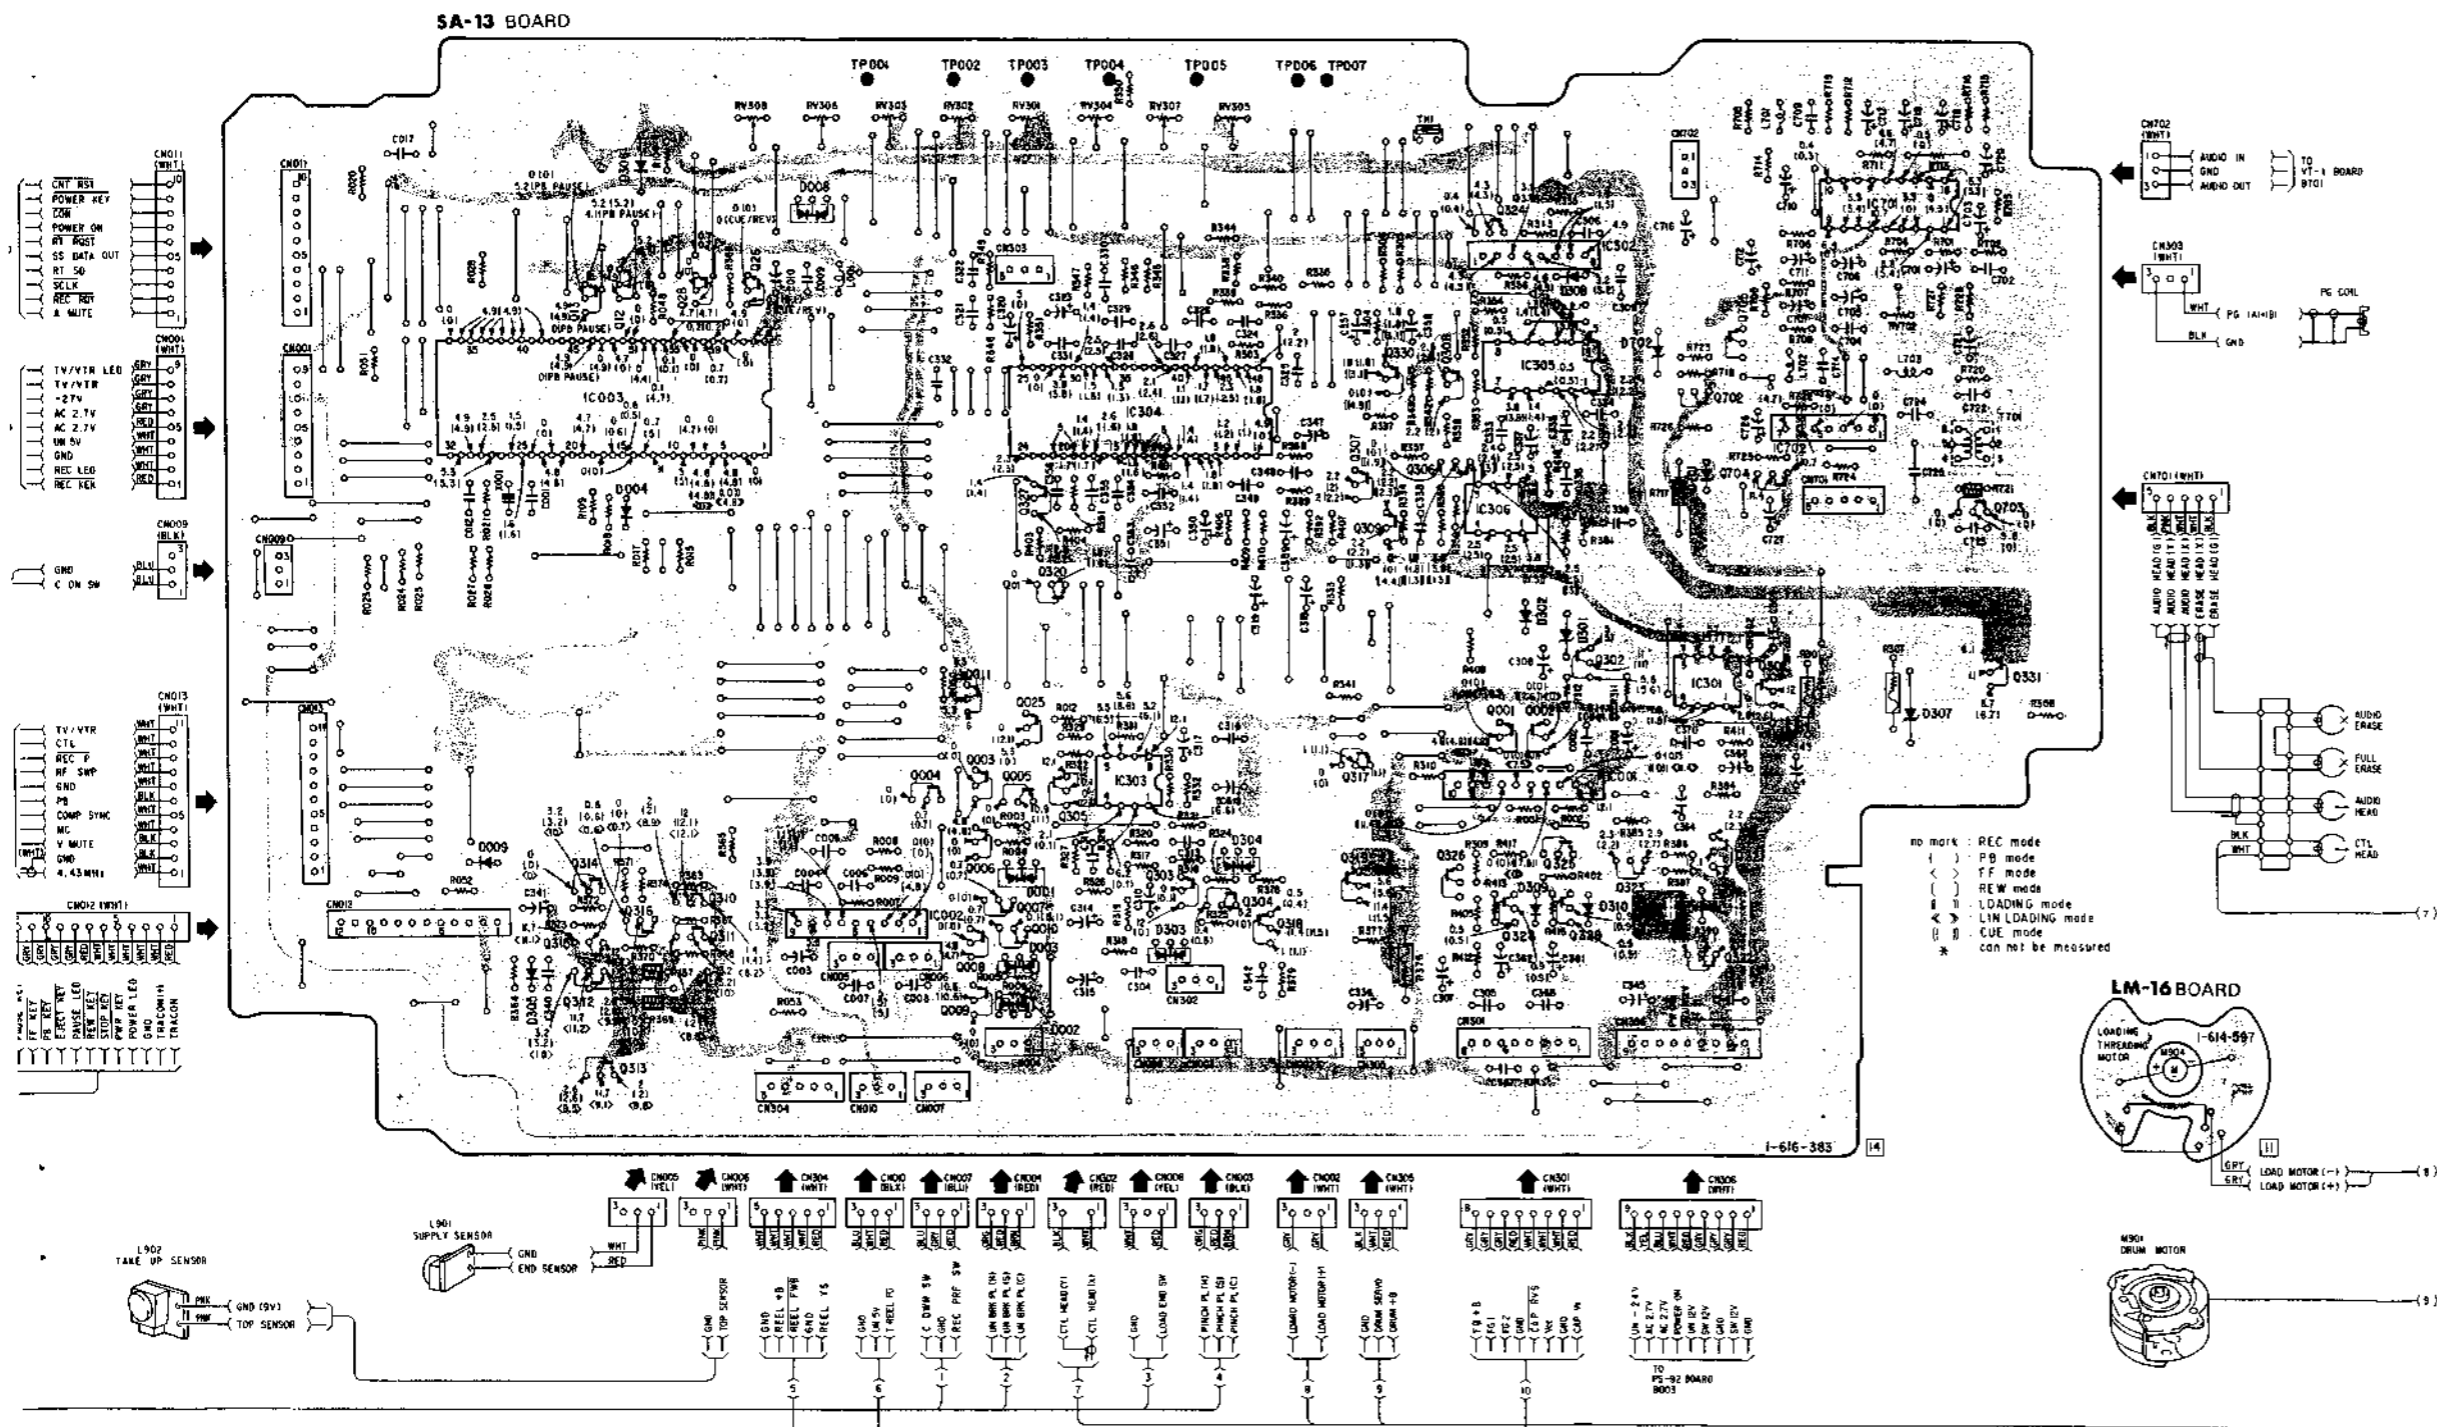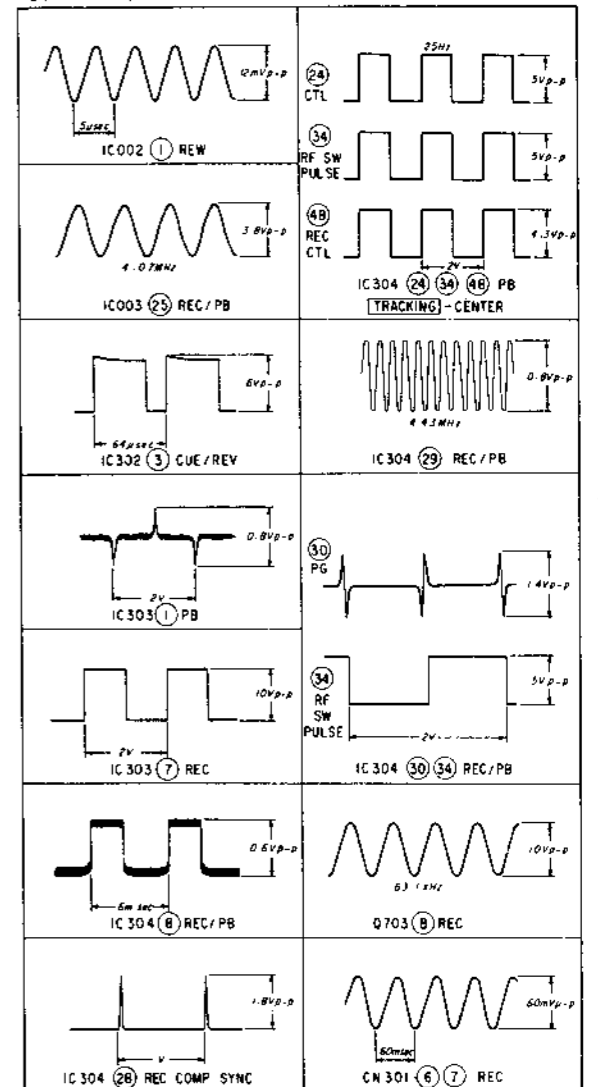

no mark : REC mode
 () : PB mode
 < > : FF mode
 () : REW mode
 # : LOADING mode
 < > : LW LOADING mode
 () : CUE mode
 * : can not be measured

LM-16 BOARD

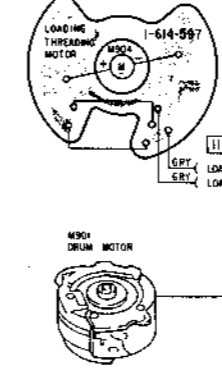







TIMER, POWER SUPPLY TIMER, POWER SUPPLY

4.4. TT-13 (TIMER, TUNING CONTROL, DISPLAY), PS-92 (POWER SUPPLY), PS-93 (SWITCHING REGULATOR), VS-5 (VOLTAGE SELECTOR) SCHEMATIC DIAGRAMS

— Ref. No. TT-13 BOARD: 6,000 series, PS-92 BOARD: 7,200 series, PS-93 BOARD: 7,100 series, VS-5 BOARD: 7,500 series —

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

- Note:**
- All capacitors are in μF unless otherwise noted, $\text{pF} : \mu\text{F} \ 50\text{WV}$ or less are not indicated except for electrolytics and tantalums.
 - All resistors are in ohms, $1/6\text{W}$ unless otherwise noted. $\text{k}\Omega : 1000\Omega$, $\text{M}\Omega : 1000\text{k}\Omega$.
 - All variable and semi-fixed resistors have characteristics curve B, unless otherwise noted.
 -  : nonflammable resistor.
 -  : fusible resistor.
 -  : panel designation.
 -  : adjustment for repair.
 -  : B + bus.
 -  : B - bus.
 - The voltage value is a reference value between the grounding when the color bar signal is received from a color bar generator.
 - All voltage are dc measured with a VOM (10M Ω)


Note: The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

TT-13 BOARD

BO01 (WHT)	
BLK	A MUTE
GRY	REC RDT
GRY	S CLK
GRY	RT SD
GRY	SS DATA IN
BLK	RT RQST
GRY	POWER ON
GRY	CON
GRY	POWER KEY
GRY	CNT RST






BO03	
GRY	V _C
GRY	30V
GRY	GND
GRY	SW 12V
RED	VL
WHT	VH
WHT	U
WHT	A MUTE
WHT	AFT
RED	UI

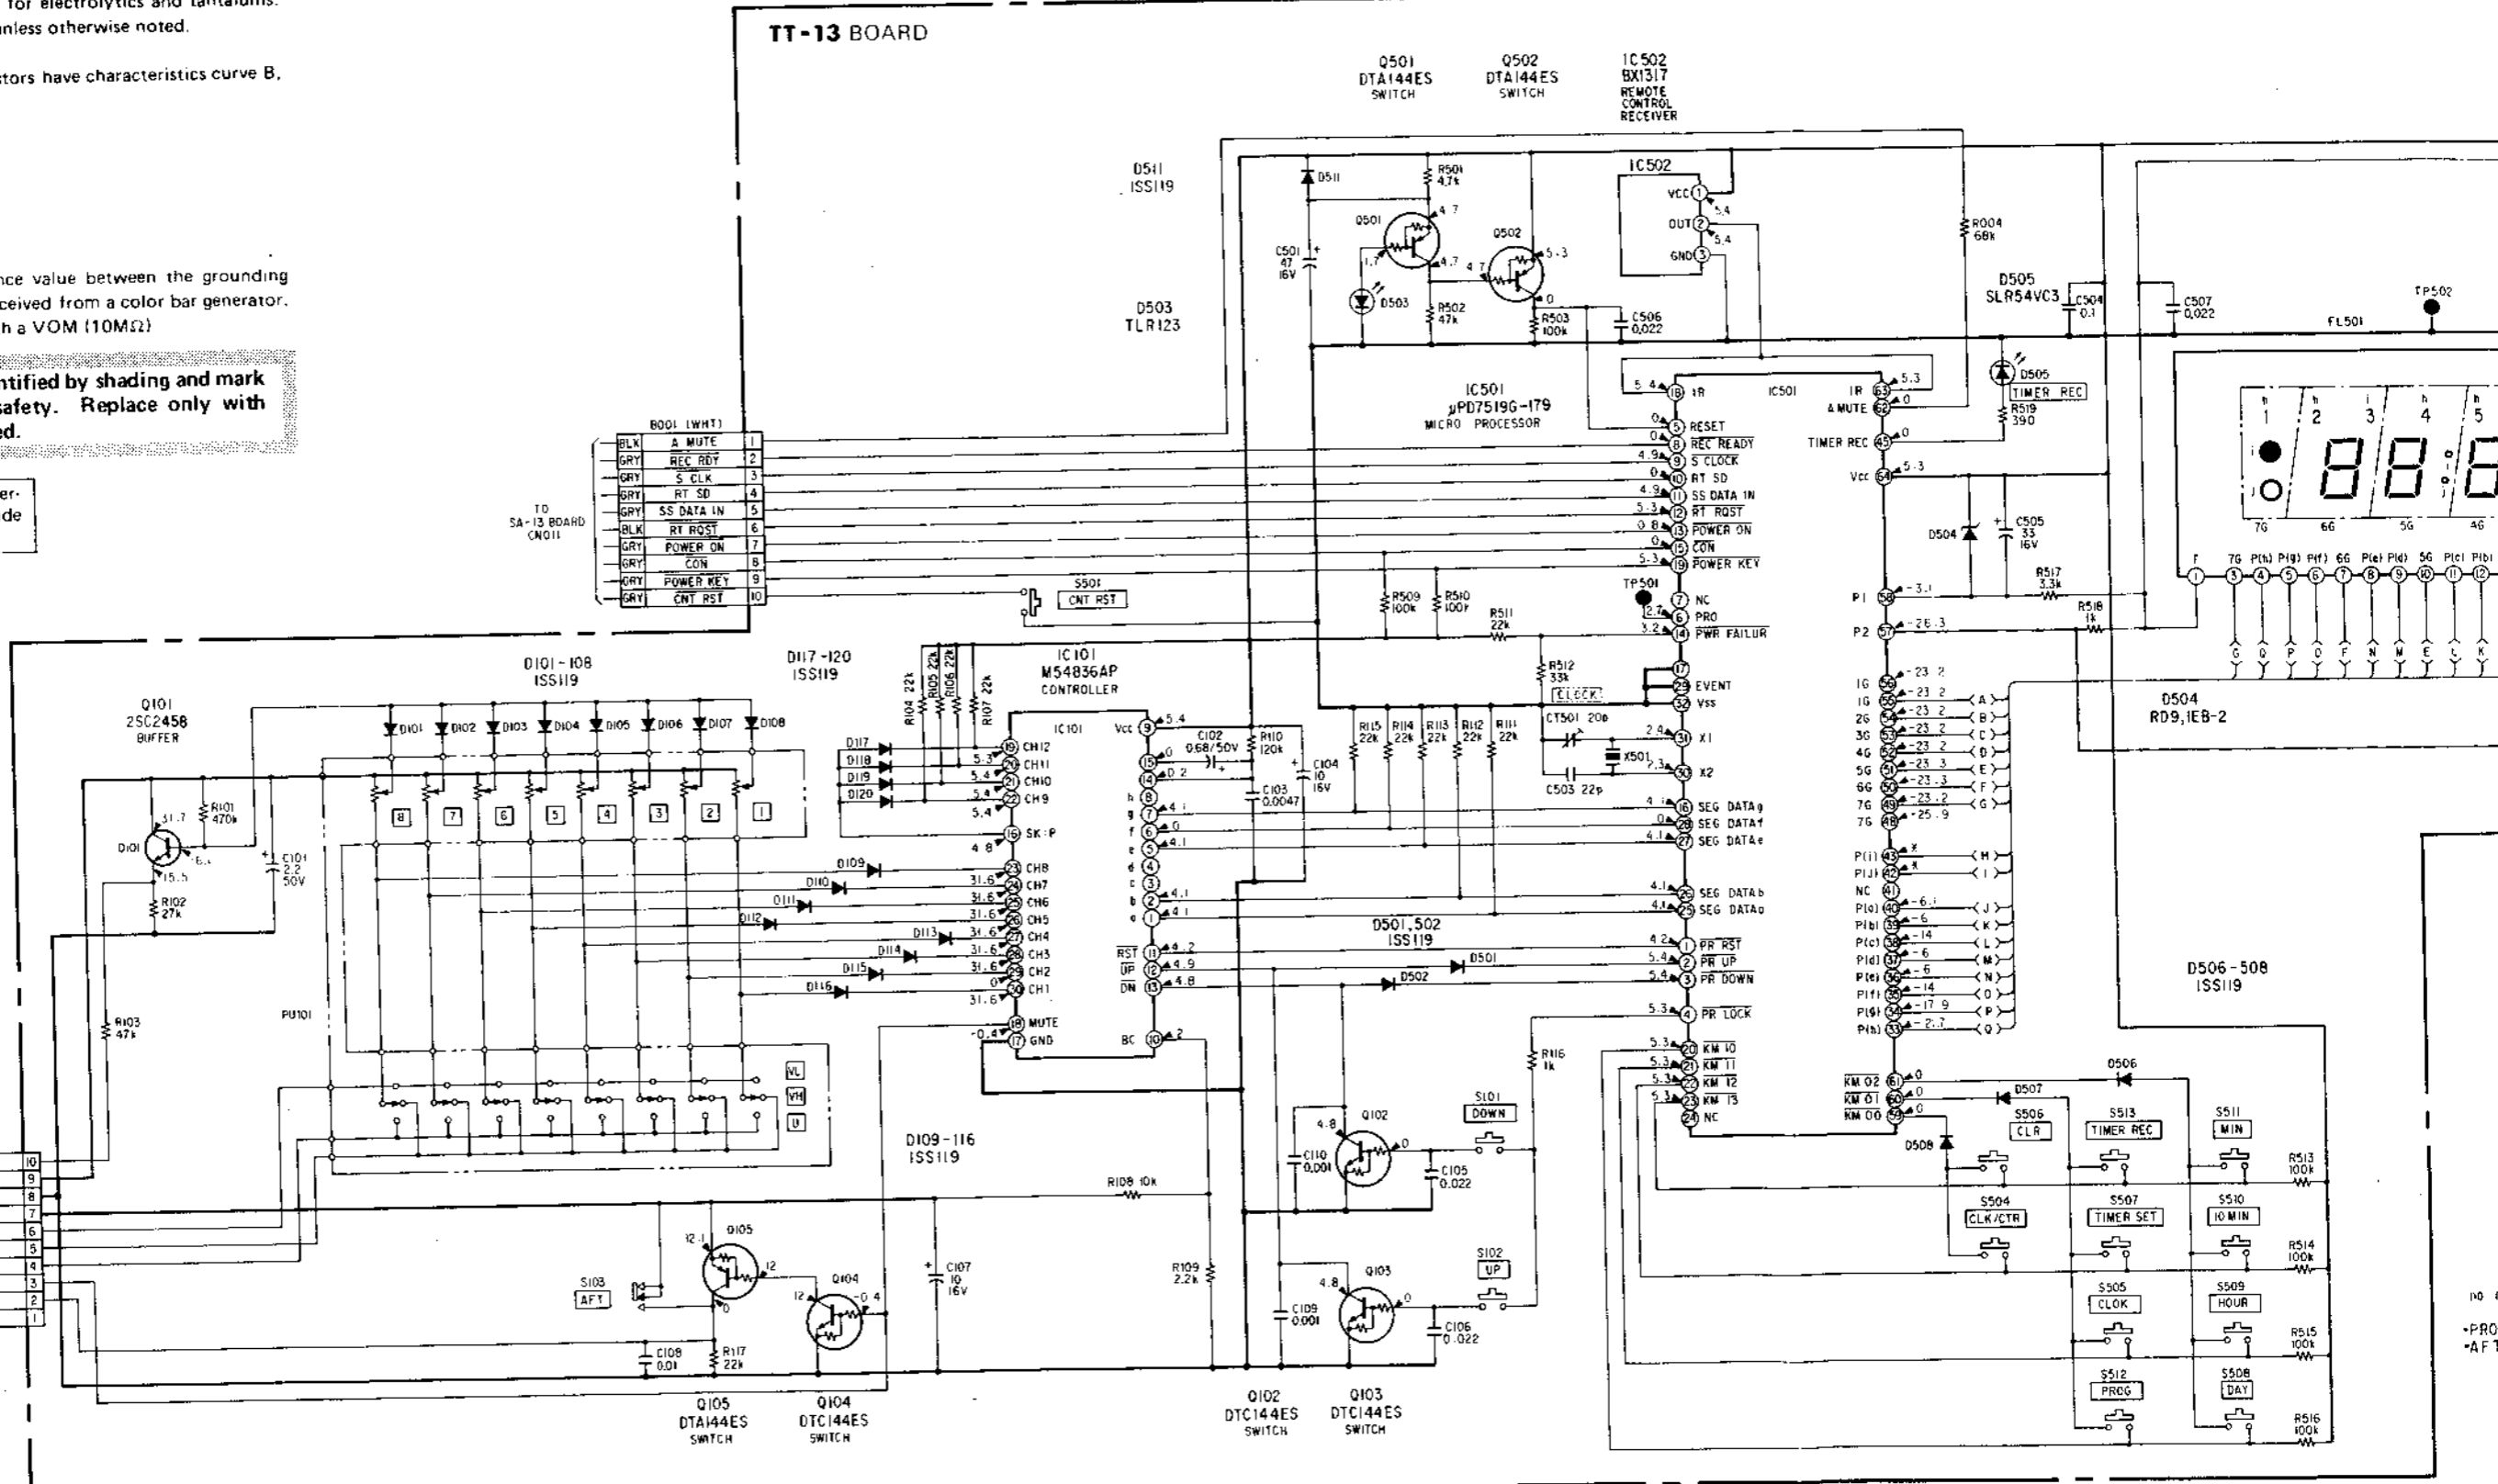


TIMER, POWER SUPPLY TIMER, POWER SUPPLY

16 17 18 19 20 21 22 23 24 25 26 27 28 29 30

A
B
C
D
E
F
G
H
I

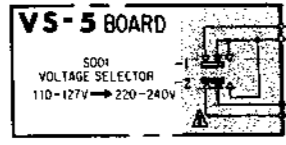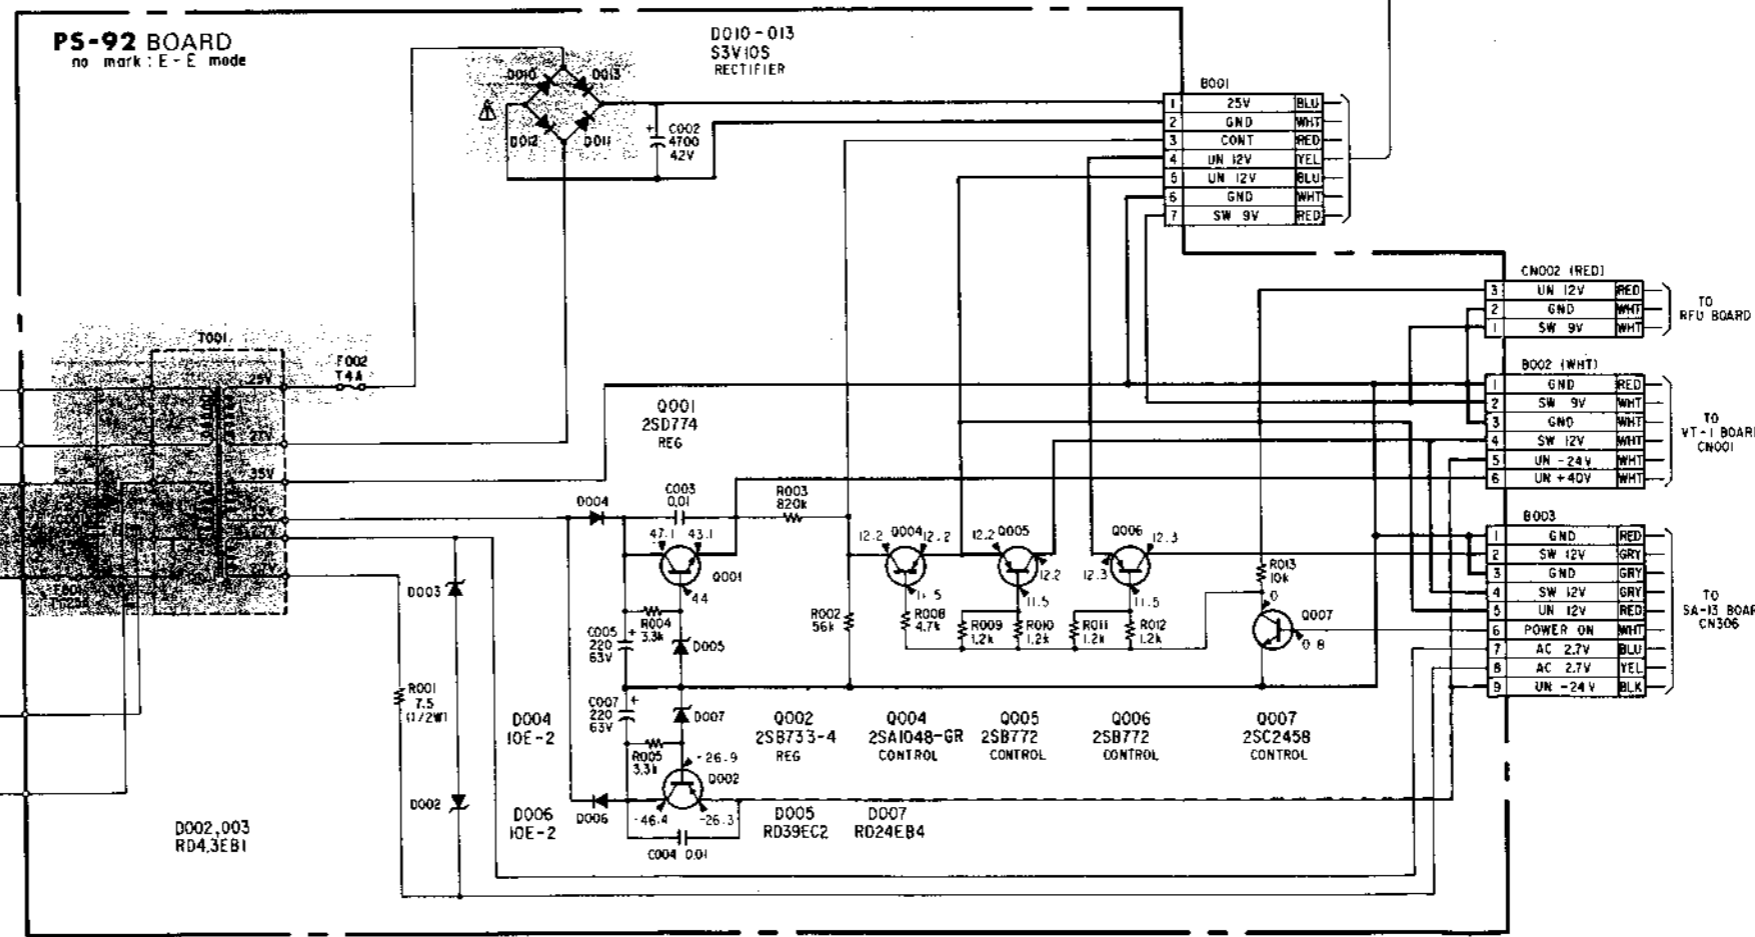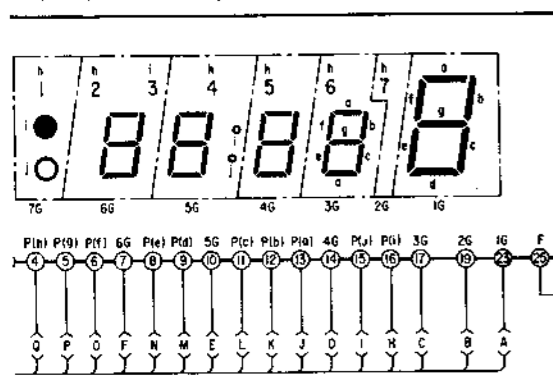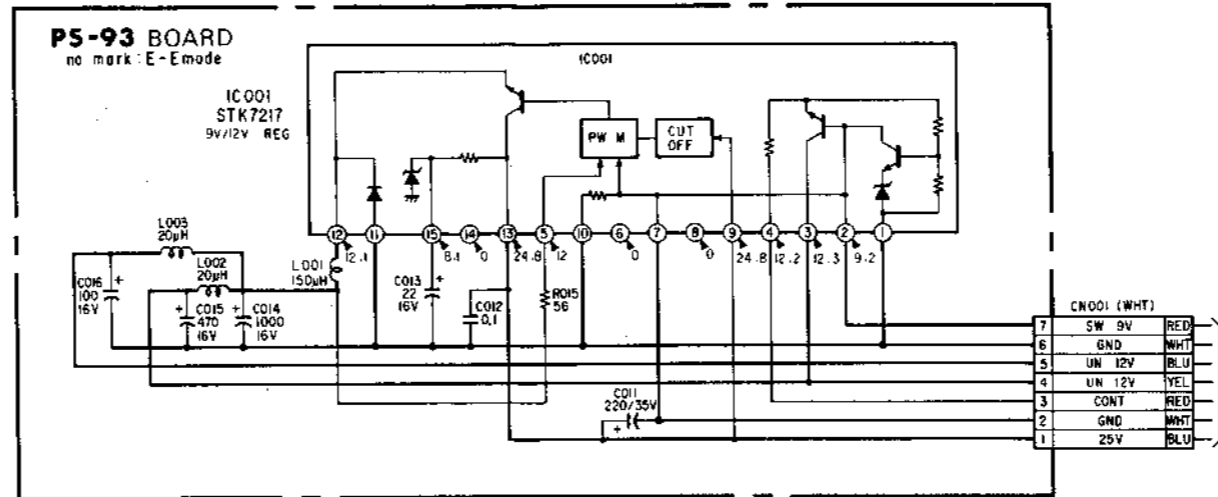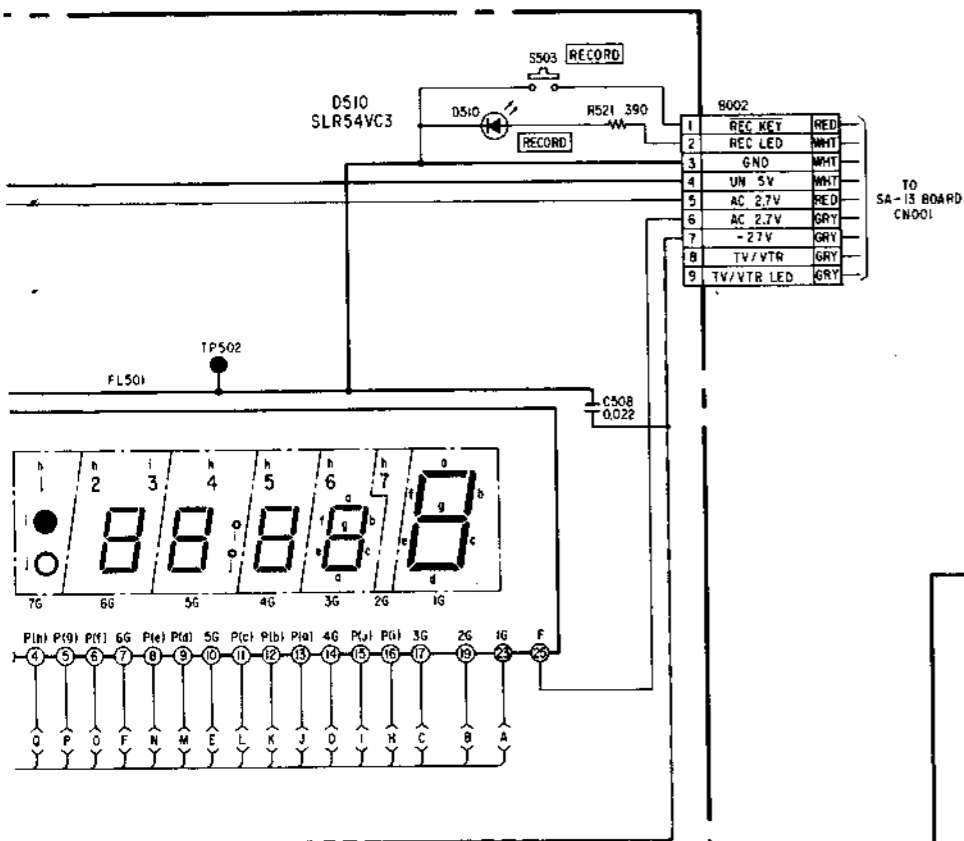


no mark : E-E mode
X : can not be measured
*PROG indicator set to [2]
*AFT switch (S103), ON




TIMER, POWER SUPPLY

TT-13 (TIMER, TUNING CONTROL, DISPLAY), PS-92 (POWER SUPPLY), PS-93 (SWITCHING REGULATOR), VS-5 (VOLTAGE SELECTOR) PRINTED WIRING BOARDS
 - Ref. No. TT-13 BOARD: 6,000 series, PS-92 BOARD: 7,200 series, PS-93 BOARD: 7,100 series, VS-5 BOARD: 7,500 series -


- — : Indicates a leadwire mounted on the component side.
- — : Indicates a leadwire mounted on the printed side.
- ▨ : soldering side.
- ▩ : B+ pattern.
- : Digital transistor (TT-13 : Q102, 103, 104, 105, 501, 502) transistor with resistors. Refer to the TT-13 board schematic diagram for digital transistor.

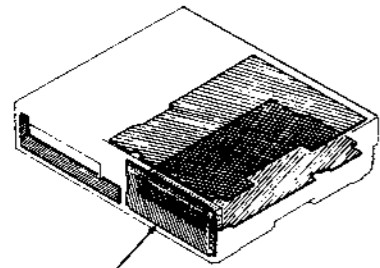


TT-13 board

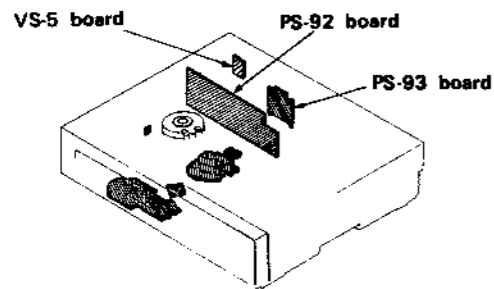

When indicating parts by reference number, please include the board name.

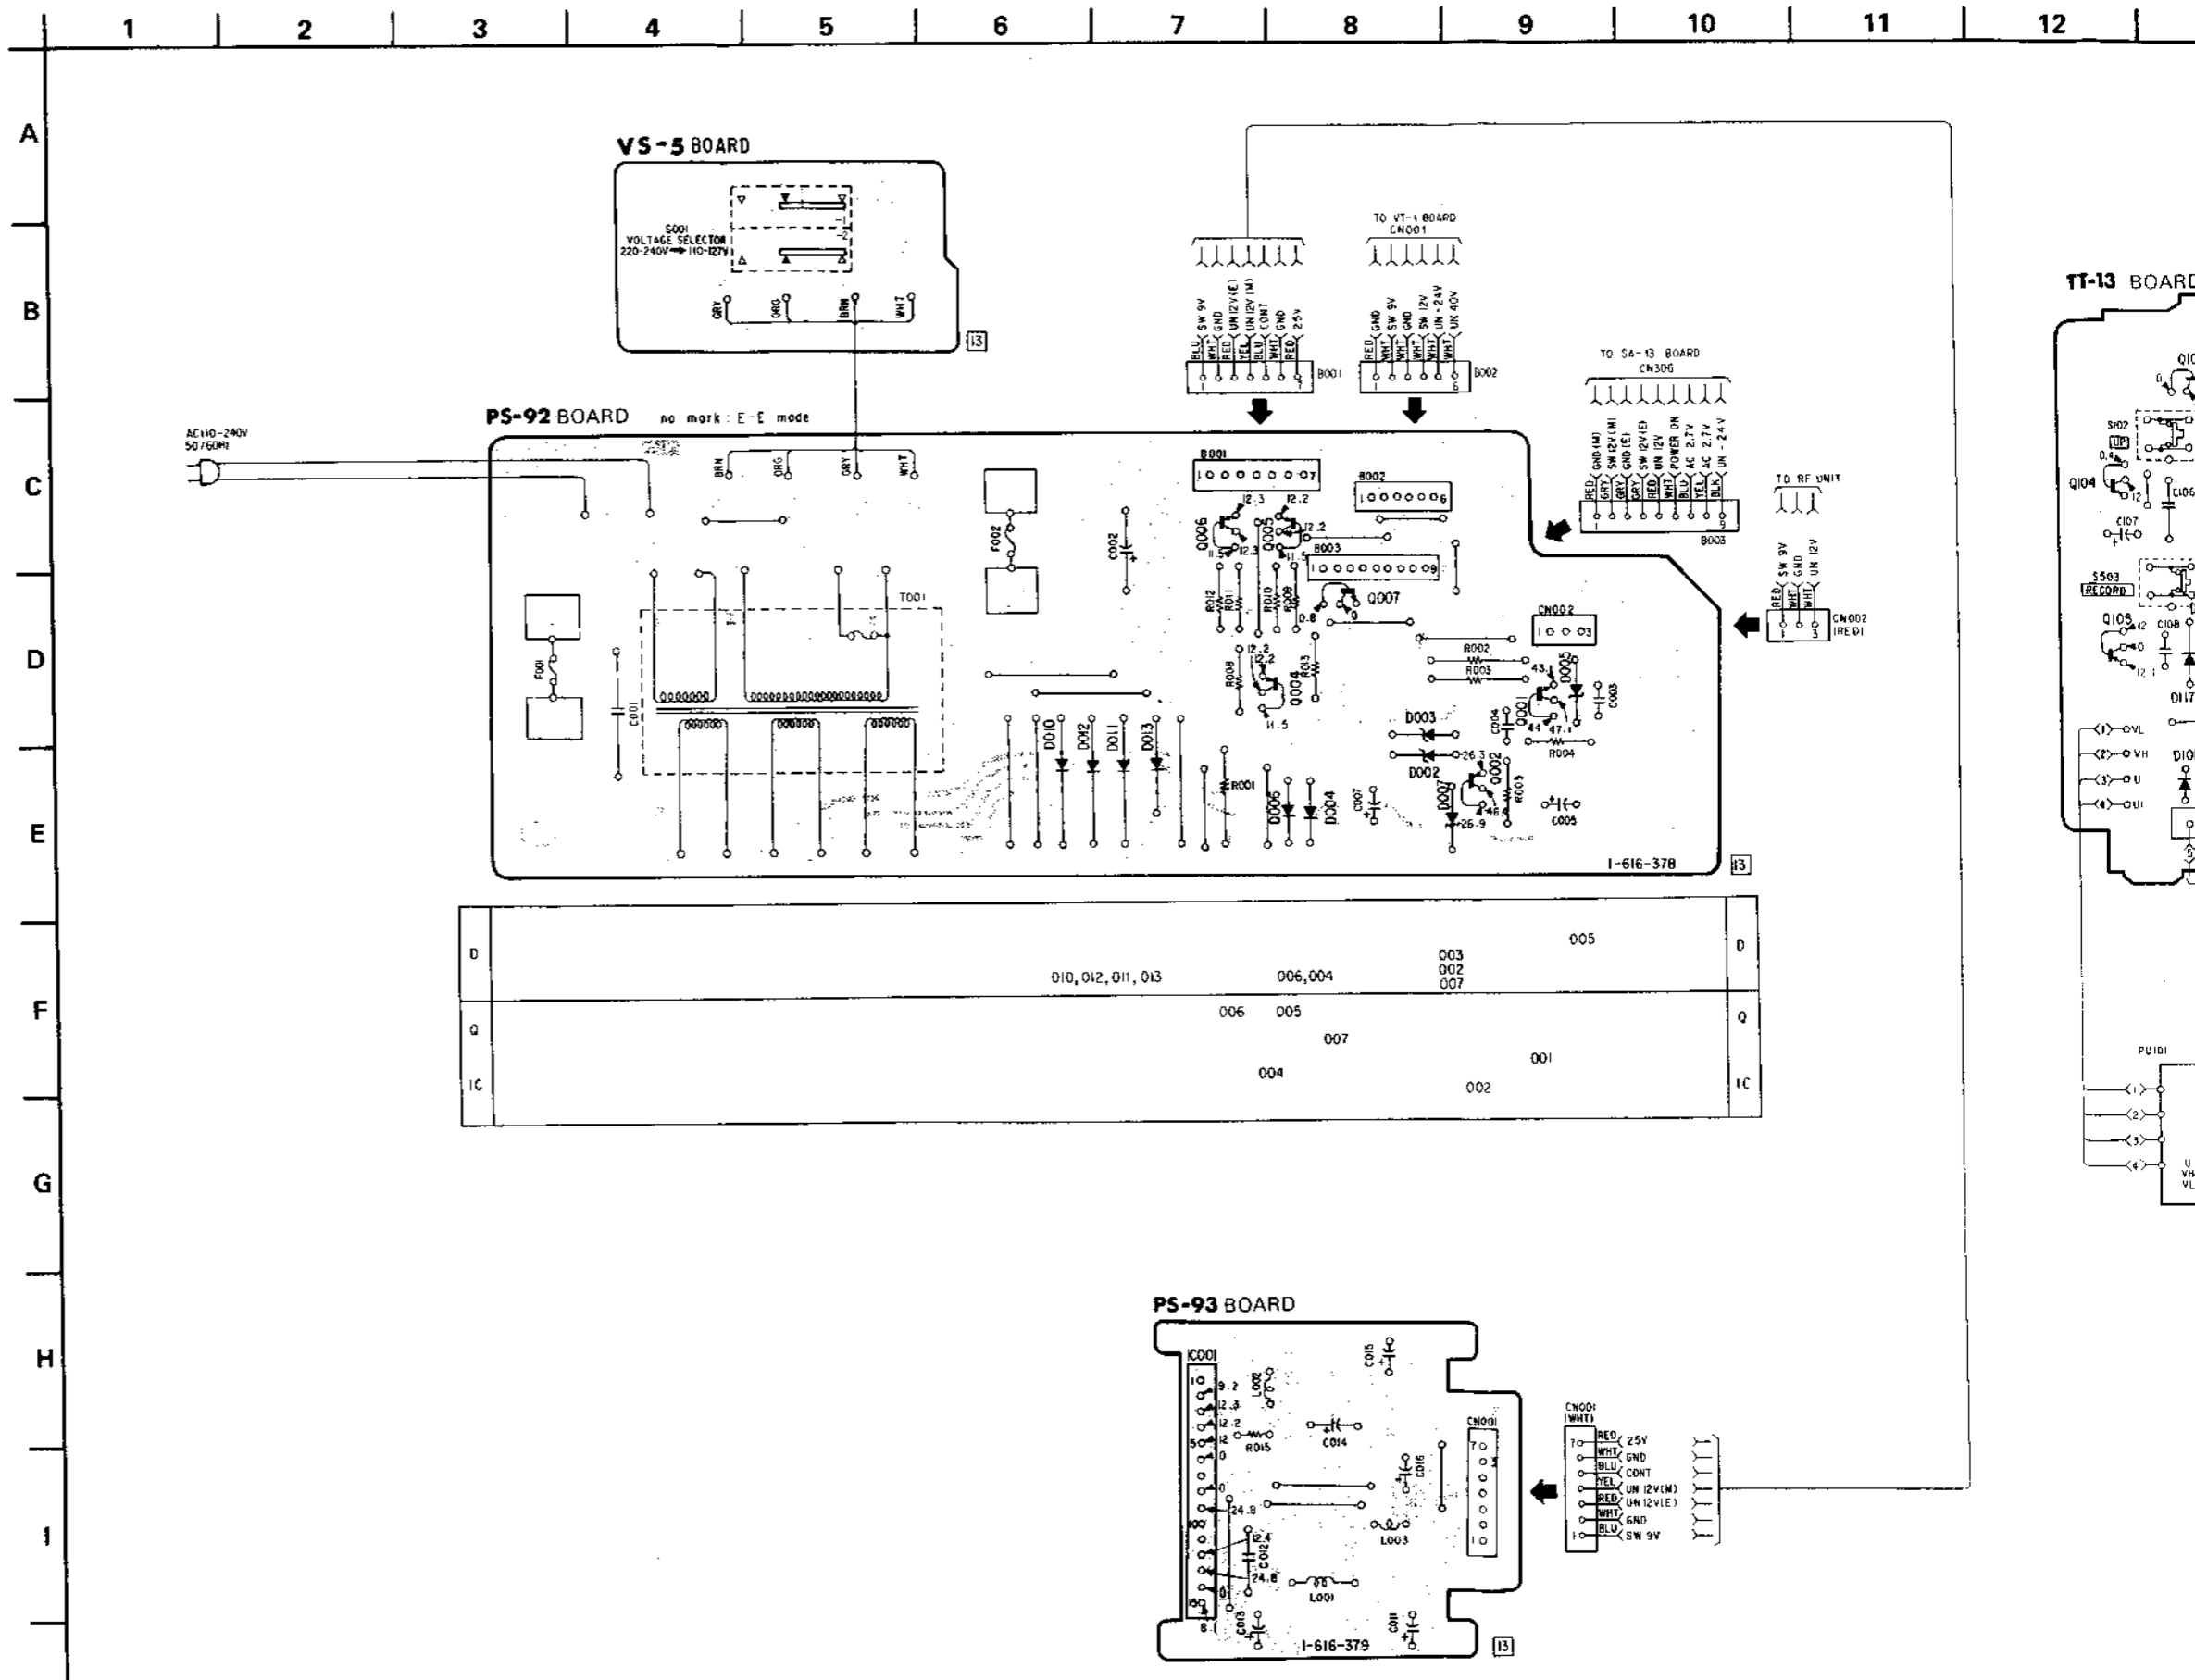


12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27

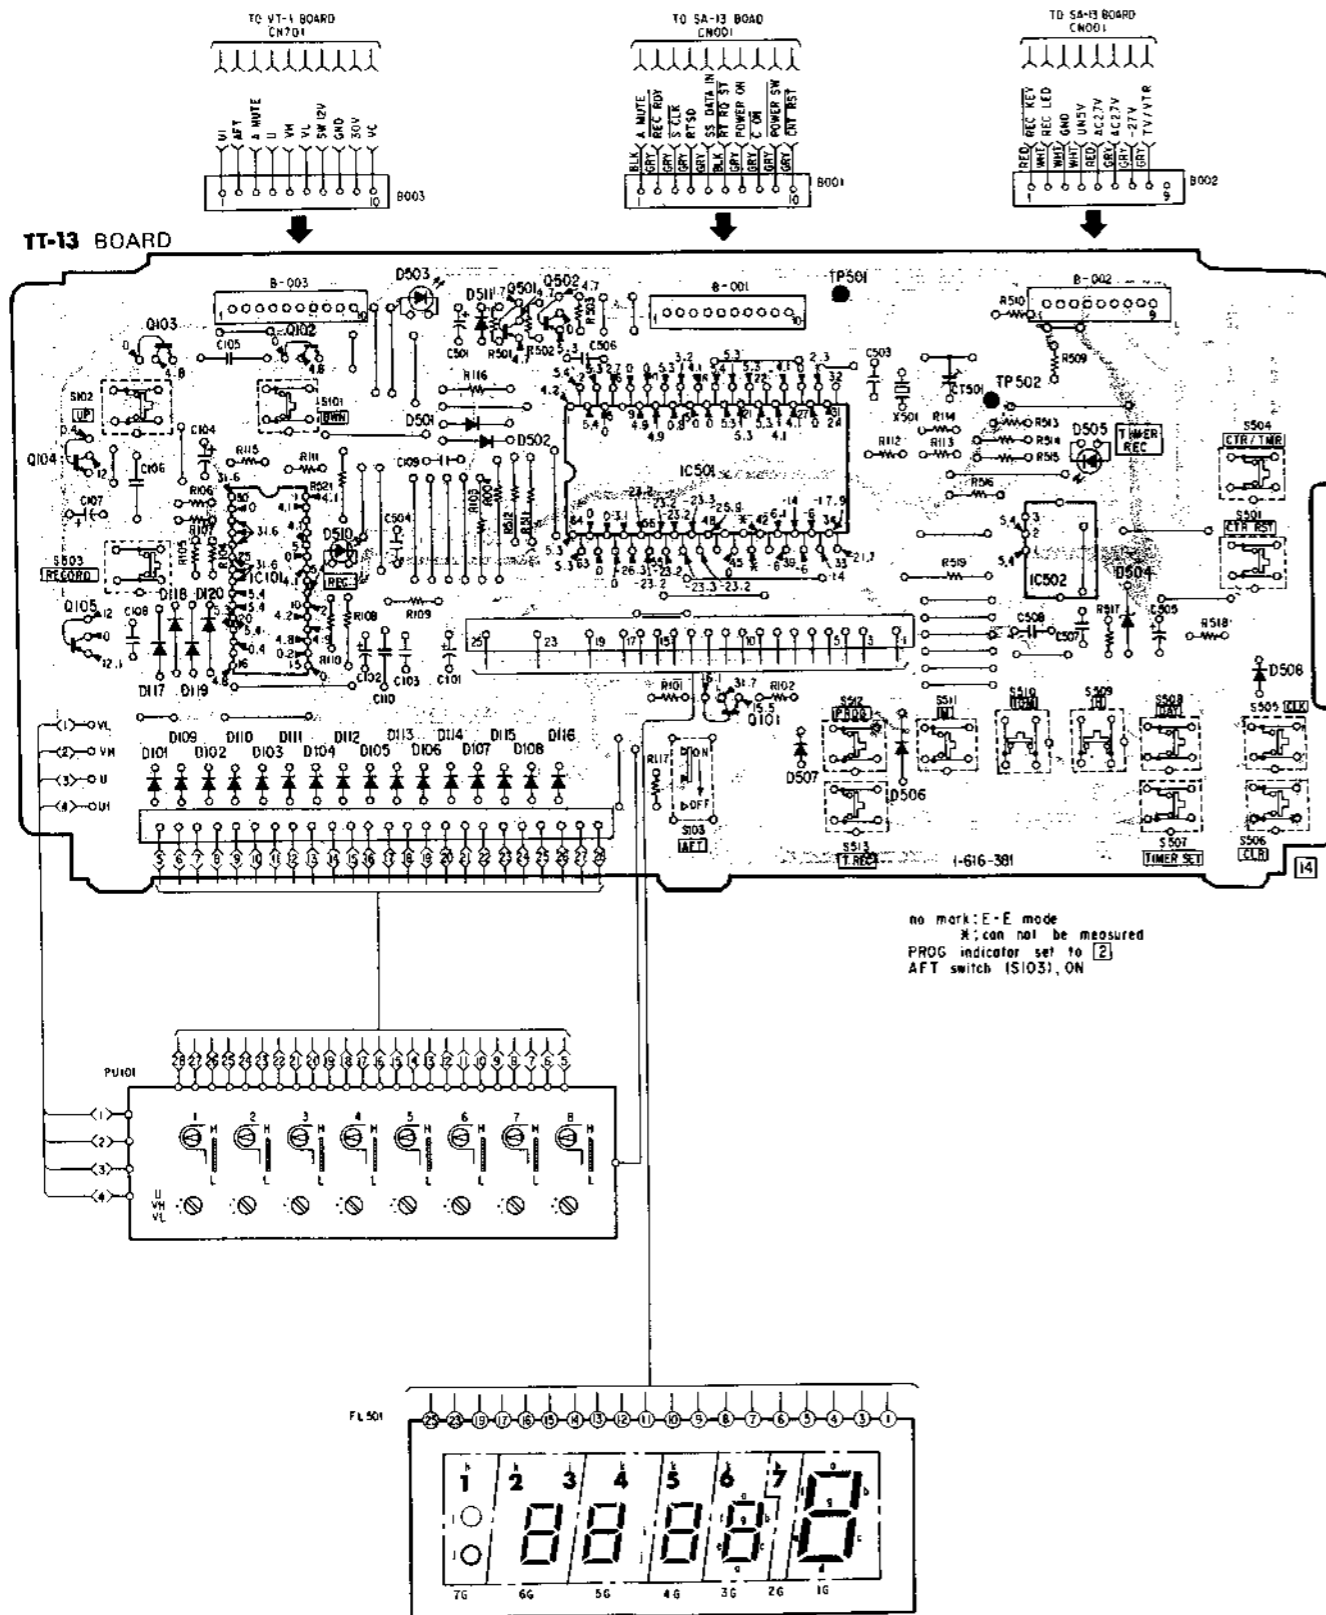

TP	D	Q	IC
TP501	503 511	501 103, 102	502
TP502	501 502 505	104	IC501
	510	IC101	IC502
	118, 120 117, 119	504	105
	508		101
	507, 506		
	D101 ~ 116		
TP	D	Q	IC


no mark: E-E mode
X: can not be measured
PROG indicator set to 2
AFT switch (S103), ON

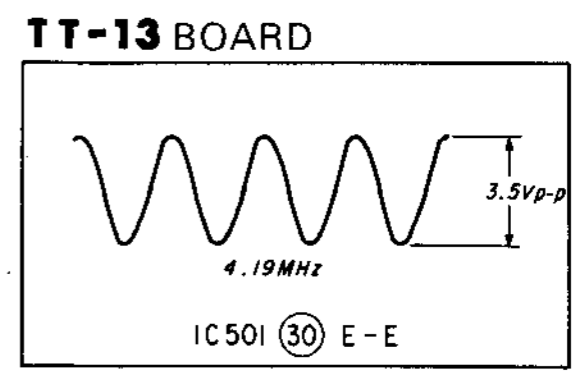


A
B
C
D
E
F
G
H
I

4-5. SEMICONDUCTORS


BA5115

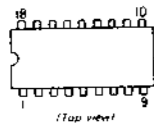

CX10021B-NP
CX10021B-P



MB88421-192M



μPC1513HA



2SA1048-GR
2SA1115
2SC2458
2SC2603
2SC403SP
DTA124ES
DTA144ES
DTC124ES
DTC144ES
DTC144WS

2SB739
2SC1474
2SD788
2SD789




2SK105A



MC911




SLR-54MC3
SLR-54VC3
SLR54DC3




BA634



CX10023



M51848L
μPC1391H
μPC1391HA
CX20061




μPC574J
HZT33-02



2SA1175
2SC2785

2SB772




2SK107
2SK108



MC921




SPI201-22

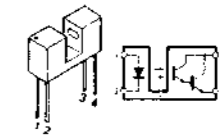


BA7004
TA7060AP



CX20043
CX20124



M54836AP




μPD7519G-179



2SA1175
2SC2785




2SC2216
2SC2717




1SS119
1SS133
1SS148




MC931



TLR123
TLR124

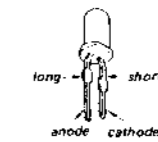


HD14066BP
MSM4066BRS
TC4066BP
μPD4066BC

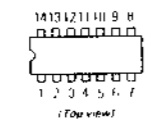

STK7217




LB1640N

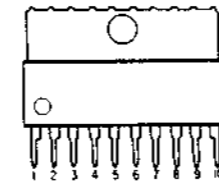

2SA473
2SC1826
2SD313HP
2SD880



2SC2216
2SC2717



10E-1
10E-2
ERB12-02
GP08D
HZT33-02



SIB01-02



BA7007




LA7205
CX894



TA7607AP




M54543L

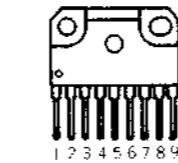

2SA844
2SA933S
2SC1740S



2SC2673




EQA02-05D1
EQA02-23C
HZ23EB4
HZ4.3EB1
HZ4.3EB2
HZ4.3EB3
HZ5.6EB3
HZ9.1EB2
RD24EB4
RD39EC2
RD39EC3
RD4.3EB
RD5.1EL2
RD5.6EB3
RD5.6EN3
RD6.8EB2
RD6.8EL1
RD9.1EB2




S3V10S




CX-866A
CX-866B
CX20045



LM358P
μPC358C



2SA1027R



2SB733
2SB734
2SD773
2SD774




SECTION 5 EXPLODED VIEWS

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.


The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

5-1. FRONT PANEL AND CABINET ASSEMBLIES

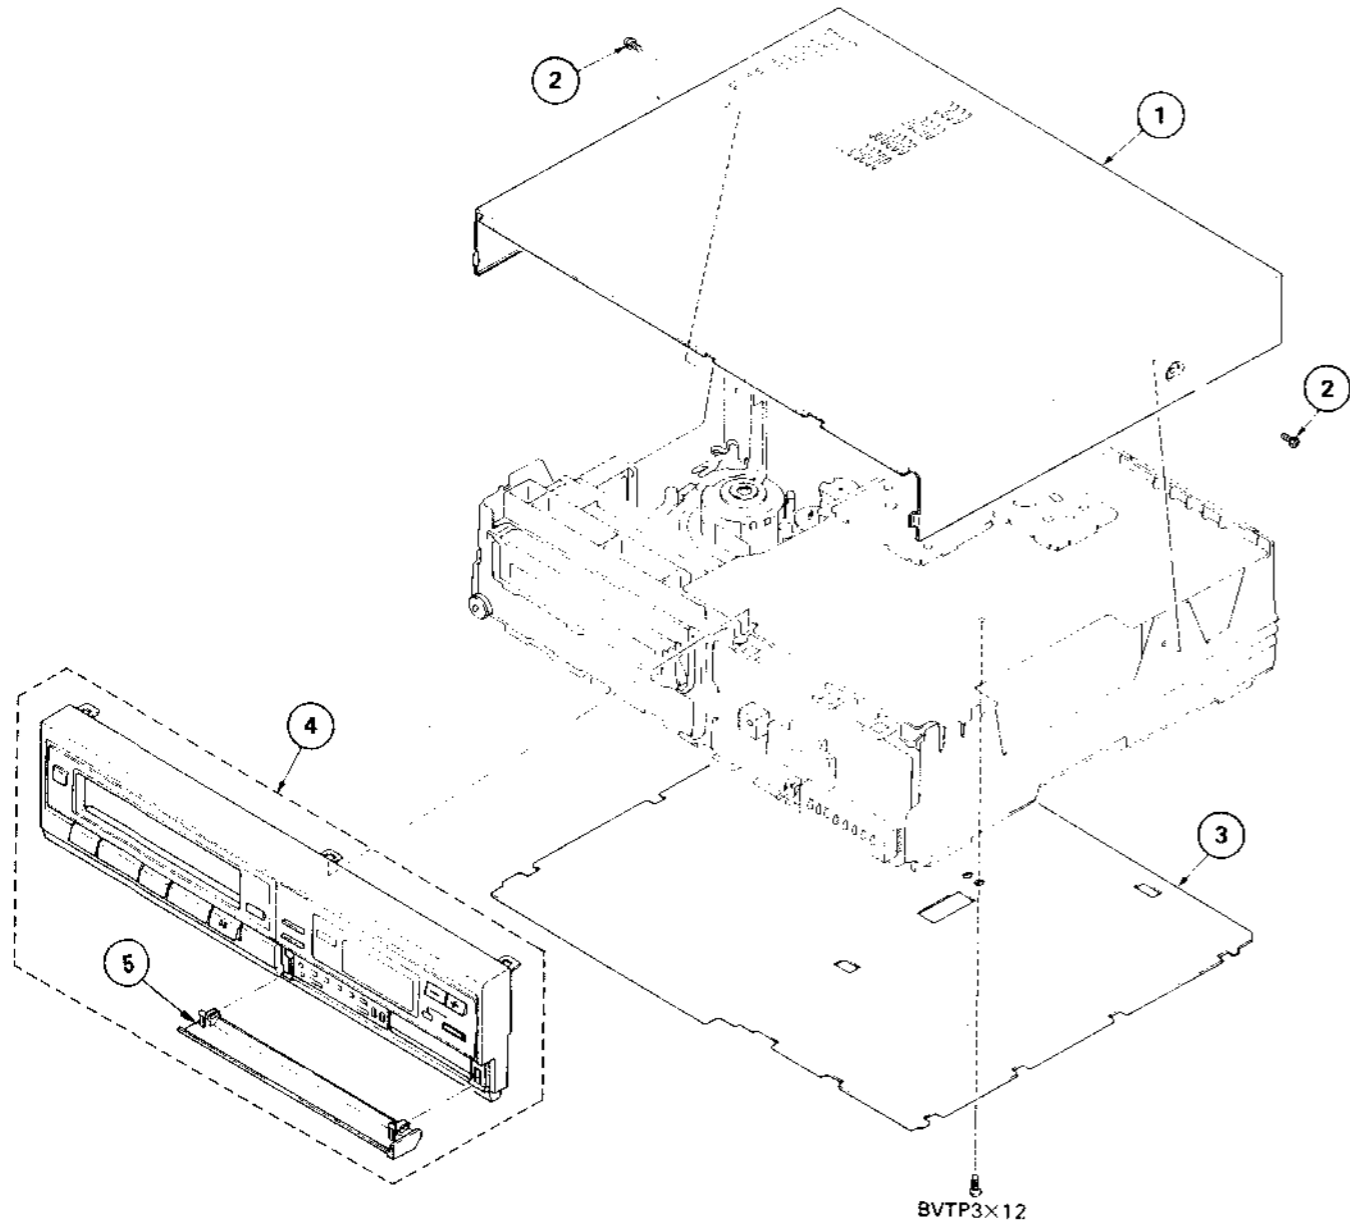

No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
1	X-3695-301-1	CASE ASSY, UPPER (SILVER)		3	*3-695-335-01	PLATE, BOTTOM	
	X-3695-302-1	CASE ASSY, UPPER (GRAY)		4	X-3695-307-1	PANEL ASSY, FRONT (GRAY)	5
	X-3695-324-1	CASE ASSY, UPPER (BLACK)			X-3695-309-1	PANEL ASSY, FRONT (SILVER)	5
	X-3695-375-1	CASE ASSY, UPPER (RED)			X-3695-327-1	PANEL ASSY, FRONT (BLACK)	5
2	4-886-821-31	SCREW, M3 CASE STOPPER (SILVER, RED)			X-3695-374-1	PANEL ASSY, FRONT (RED)	
	4-886-821-21	SCREW, M3 CASE STOPPER (GRAY, BLACK)		5	3-695-329-41	DOOR, TIMER (SILVER)	
					3-695-329-51	DOOR, TIMER (GRAY)	
					3-695-329-91	DOOR, TIMER (BLACK)	
					3-695-329-12	DOOR, TIMER (RED)	


5-2. TUNER, TIMER AND POWER ASSEMBLIES

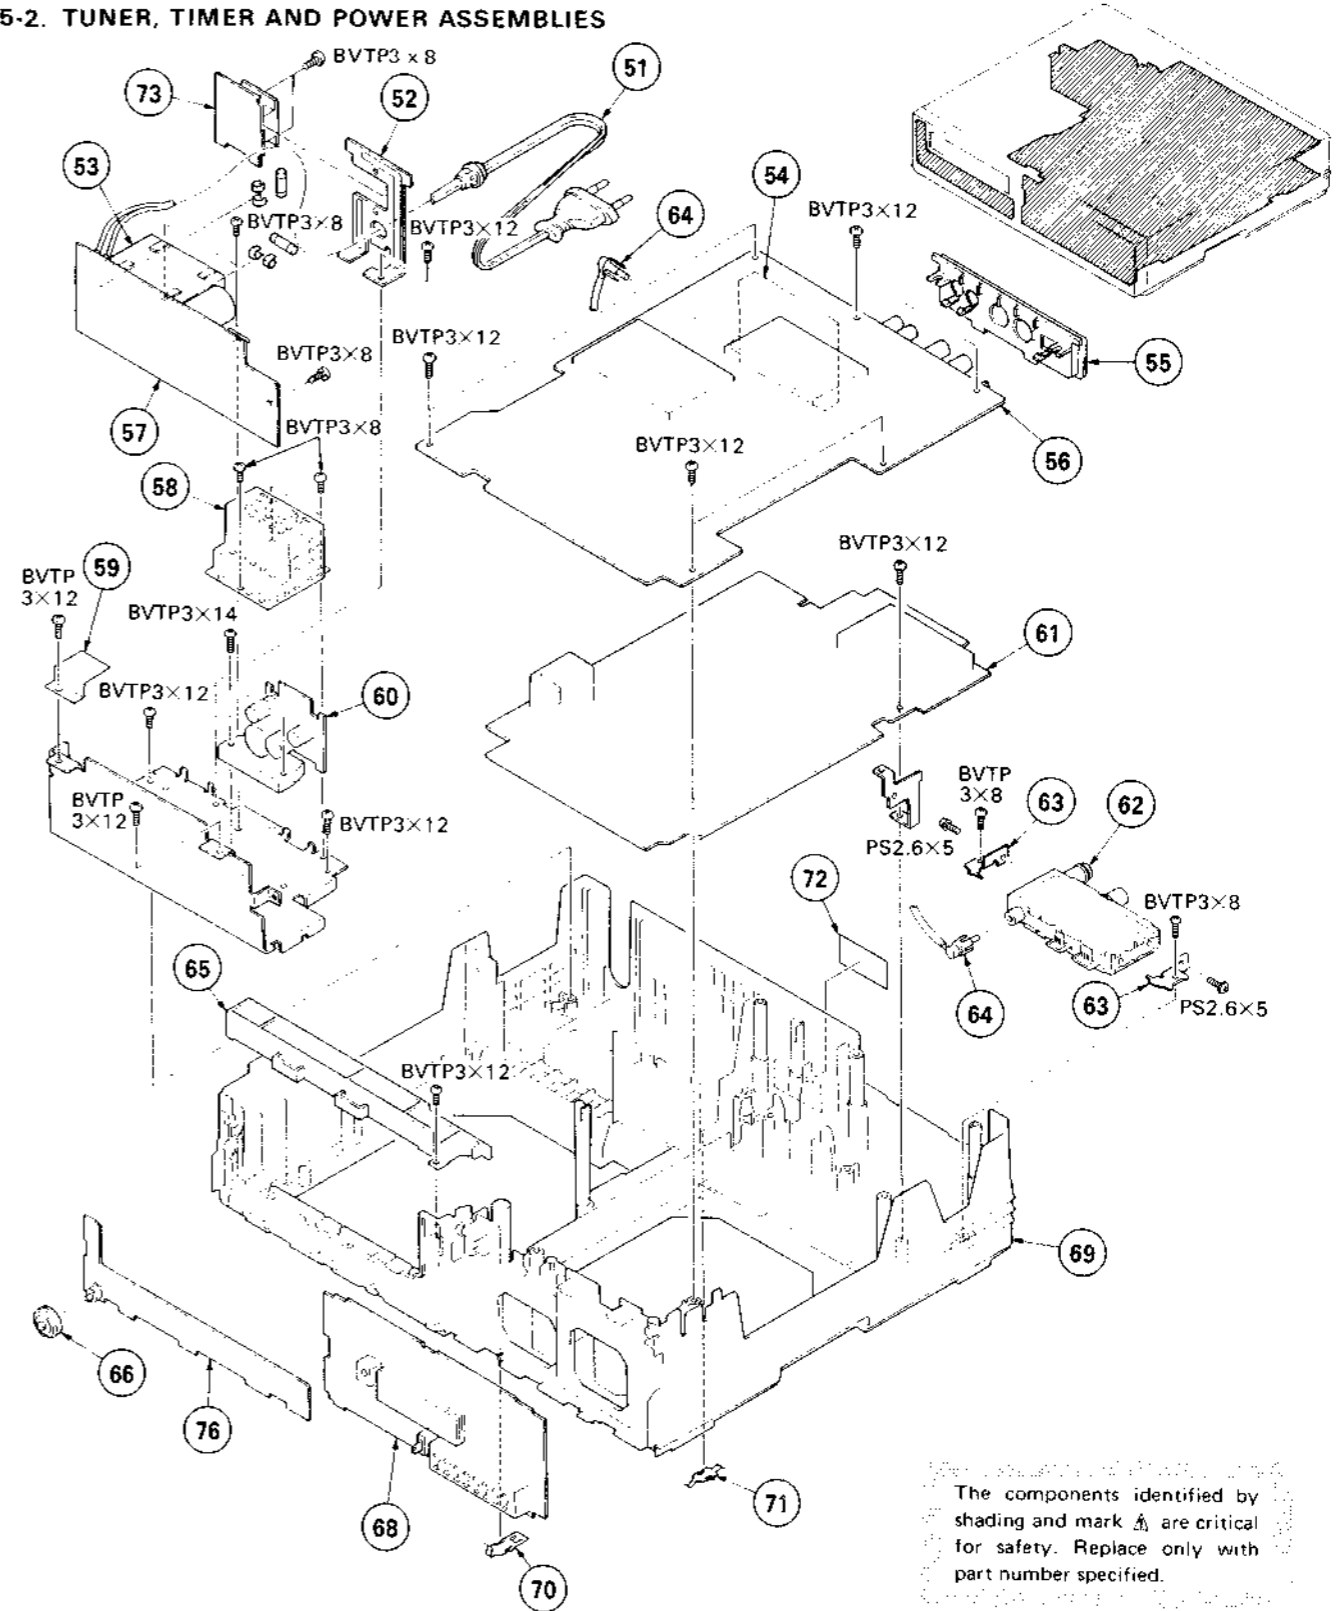

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.


No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
51	Δ 1-558-097-12	CORD, POWER		63	*3-695-309-01	BRACKET, RBM	
52	*3-695-315-11	BRACKET, CORD		64	*1-556-934-00	CABLE, PIN	
53	Δ 1-448-245-11	TRANSFORMER, POWER		65	*3-695-347-01	RETAINER, UPPER CASE	
54	Δ 1-463-584-11	TUNER ET (BT-881A) (TU701)		66	3-679-207-31	KNOB, TRACK CONTROL	
55	*3-695-314-01	PLATE, CONNECTOR		67	*1-616-382-12	FU-40 BOARD	
56	*A-6711-694-A	VT-1 BOARD, COMPLETE		68	*A-6721-256-A	TT-13 BOARD, COMPLETE	
57	*A-6729-221-A	PS-92 BOARD, COMPLETE		69	*3-695-334-21	FRAME, MOLD	
58	*3-687-541-01	CASE, SHIELD		70	*3-695-305-01	PLATE (TT), GROUND	
59	3-687-592-01	SHEET, RADIATION		71	*3-695-303-01	PLATE, GROUND	
60	*1-616-379-12	PS-93 BOARD		72	*3-695-346-01	LABEL, MODEL NUMBER	
61	*A-6715-291-A	SA-13 BOARD, COMPLETE		73	*1-616-381-13	VS-5 BOARD	
62	Δ 1-464-481-11	BOOSTER MIXER, RF MODULATOR (RFU-829)					

5-3. FRONT LOADING ASSEMBLIES

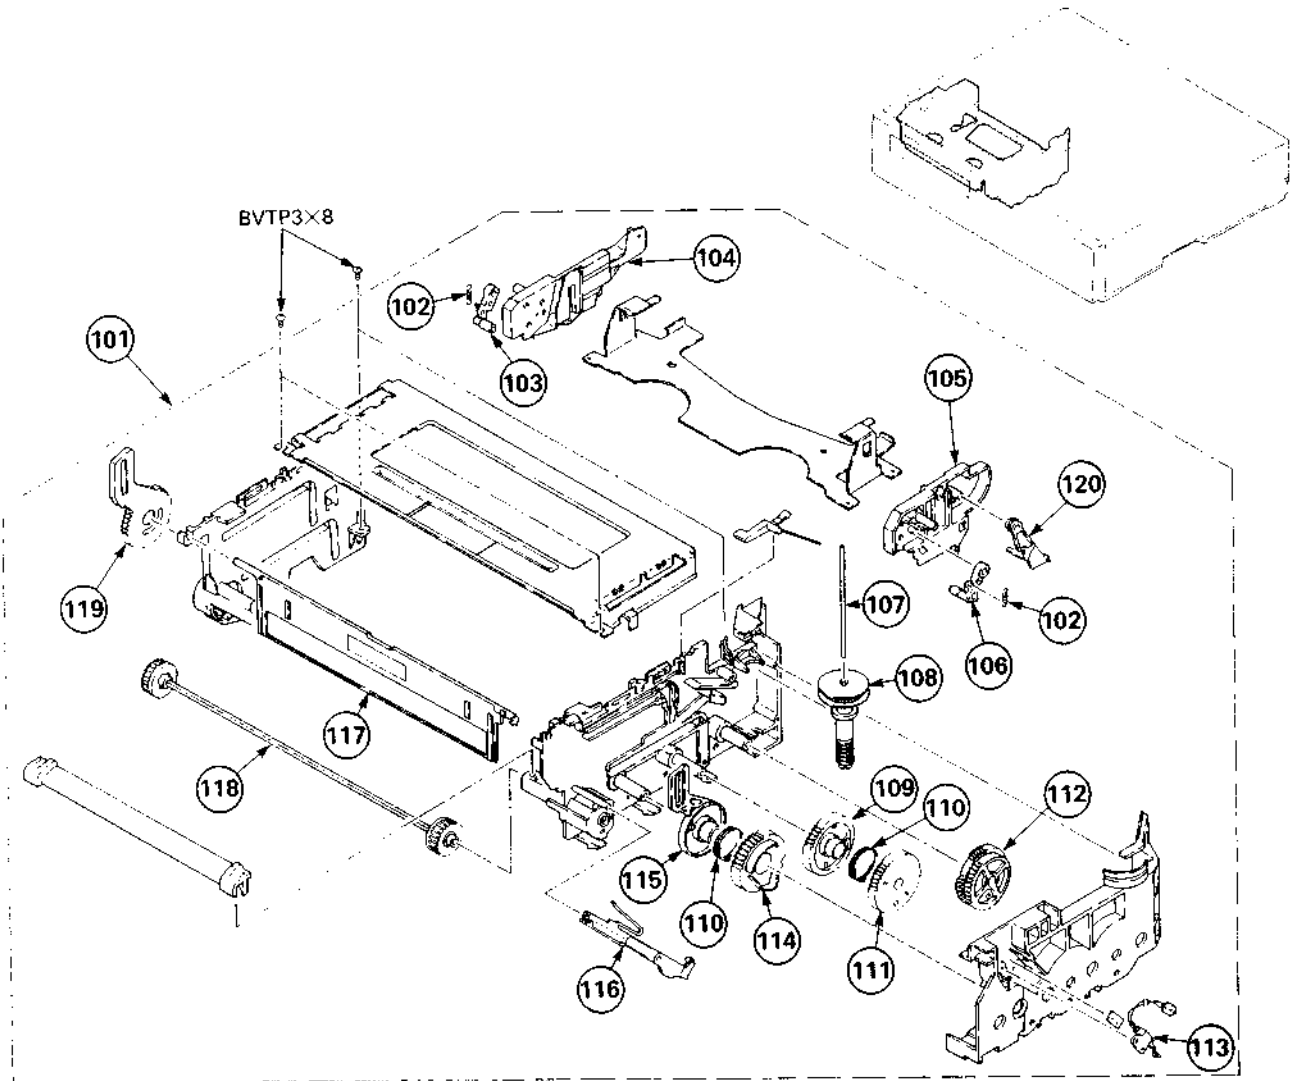

No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
101	A-6751-264-A	THREADING BLOCK ASSY, FRONT	102-120	111	3-684-109-01	GEAR (A), LIMITER	
102	3-684-258-01	SPRING, TENSION		112	X-3684-123-1	GEAR ASSY, DRIVING	
103	X-3684-125-1	RETAINER (LEFT) ASSY, CASSETTE		113	1-554-840-11	SWITCH, LEAF (CASSETTE IN) (S904)	
104	*X-3693-803-1	PLATE ASSY, SIDE, LEFT, BASE		114	3-684-163-01	GEAR, DRIVING ARM	
105	*X-3684-118-1	PLATE ASSY, SIDE, RIGHT		115	3-684-165-01	ARM (RIGHT), DRIVING	
106	X-3684-124-1	RETAINER (RIGHT) ASSY, CASSETTE		116	*3-693-854-01	ARM, SWITCHING, DOOR	
107	3-679-123-00	SHAFT, GEAR, WORM		117	3-684-168-06	DOOR	
108	X-3693-804-1	GEAR ASSY, WORM		118	X-3684-116-1	SHAFT ASSY, MIDWAY GEAR	
109	3-684-111-01	GEAR (B), LIMITER		119	*3-684-166-01	ARM (LEFT), DRIVING	
110	3-684-115-01	SPRING		120	*3-684-108-01	ARM, LID OPEN	


5-4. CHASSIS ASSEMBLY (1)

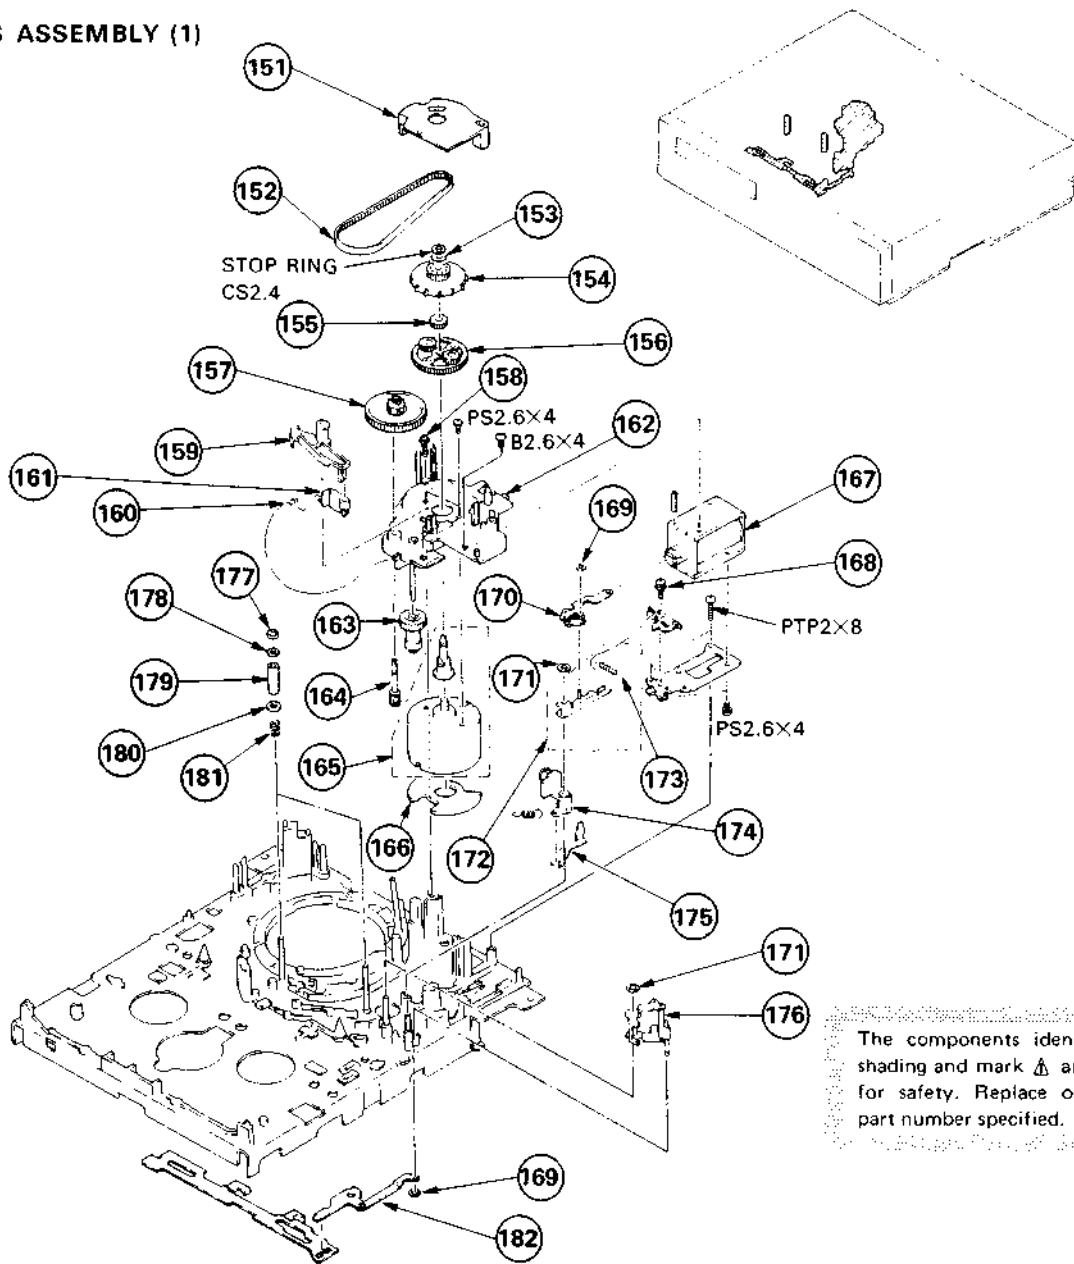

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.


No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
151	*3-693-866-01	HOLDER, GEAR, PLANET		167	Δ 1-454-349-61	SOLENOID, PLUNGER (PINCH) (PM901)	
152	3-684-264-01	BELT, TIMING		168	3-669-607-00	+PSW (SMALL ROUND) 2.6	
153	3-683-454-01	WASHER, POLYETHYLENE		169	3-669-465-00	WASHER (1.5), STOPPER	
154	3-684-178-01	GEAR, INTERNAL		170	X-3684-109-1	ARM ASSY, PINCH SOLENOID	
155	3-679-104-05	GEAR		171	3-669-595-00	WASHER (2), STOPPER	
156	X-3679-111-0	CARRIER ASSY		172	*X-3684-112-1	ARM ASSY, PINCH LIMITER	173
157	3-679-115-00	GEAR (LARGE), LOADING		173	3-515-170-00	SPRING, TENSION	
158	3-669-480-11	+ PTPWH 2		174	X-3693-830-1	SENSOR BLOCK ASSY, T (L902)	
159	3-684-167-01	ARM, STOPPER		175	*3-684-119-01	LINK, TAKE-UP SENSOR	
160	3-684-227-01	SPRING, TENSION		176	*X-3693-807-1	ARM ASSY, PRESS, PINCH	
161	3-684-116-01	LIMITER, STOPPER		177	3-669-318-21	NUT, ADJUSTMENT, GUIDE	
162	X-3693-809-1	CHASSIS ASSY, PLANET GEAR		178	3-684-135-01	WASHER (UPPER), GUIDE, #7, 8	
163	X-3669-321-0	GEAR (C) ASSY		179	3-693-830-01	SLEEVE, GUIDE, #7, #8	
164	3-679-114-00	GEAR (SMALL), LOADING		180	3-693-831-01	WASHER, GUIDE	
165	X-3679-268-1	MOTOR ASSY, L (LOADING/THREADING) (M904)		181	3-693-832-01	SPRING (#7, #8), COMPRESSION	
166	*1-614-597-11	LM-16 BOARD		182	*X-3684-114-1	LEVER ASSY, COMMUNICATION	

5-5. CHASSIS ASSEMBLY (2)

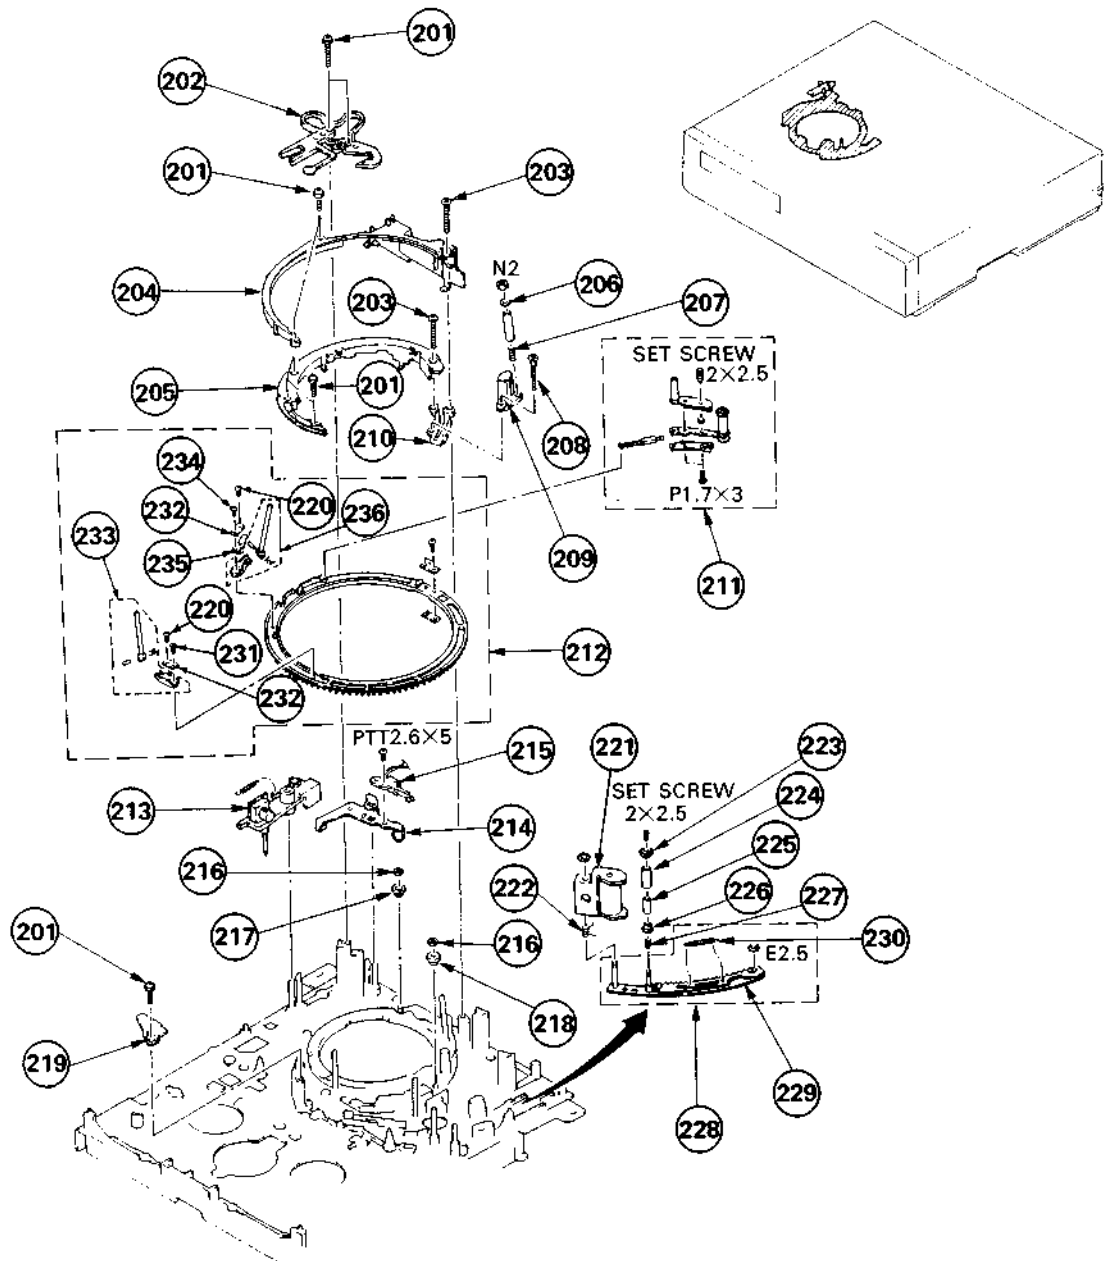


No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
201	3-669-480-11	+ PTPWH 2		219	3-669-476-04	PLATE, GUIDE	
202	3-693-867-01	PLATE (2&3), ADJUSTMENT		220	3-669-478-00	SCREW (1X3), TAPPING	
203	3-669-466-21	SCREW (M 2.6)		221	X-3679-264-1	ARM ASSY, PINCH ROLLER	
204	3-684-217-04	GUIDE (2), SHUTTLE		222	3-683-441-01	SPRING	
205	*3-679-290-00	GUIDE (1-YA), SHUTTLE		223	3-676-650-00	FLANGE (UPPER) (#9), GUIDE	
206	3-679-910-00	FLANGE (S), GUIDE, NUMBER 6		224	3-676-649-11	ROLLER (#9), GUIDE	
207	3-669-615-00	SPRING, COMPRESSION		225	3-672-559-00	SLEEVE, GUIDE	
208	3-669-606-00	SCREW (2.6)		226	3-672-558-00	FLANGE (LOWER) (#9), GUIDE	
209	8-825-508-10	HEAD, FE		227	3-669-452-00	SPRING, COMPRESSION	
210	*X-3679-263-1	BASE ASSY, SLANT		228	A-6750-165-A	GEAR ASSY, SLIDER	229, 230
211	A-6750-158-B	SHUTTLE (2) BLOCK ASSY		229	*X-3679-265-1	SLIDER ASSY (2), T	
212	X-3684-178-1	RING (CF) ASSY, THREADING, S	220, 231-236	230	3-549-014-00	SPRING, TENSION	
213	X-3693-829-1	SENSOR BLOCK ASSY, S (L901)		231	3-672-586-00	SCREW (1.4X3), TAPPING	
214	*X-3684-130-1	ARM ASSY, LOCK		232	*3-669-472-02	RETAINER, SPRING, LEAF	
215	1-554-840-11	SWITCH, LEAF (THREADING END) (S903)		233	*X-3669-429-0	HOLDER BLOCK ASSY, #2 GUIDE	
216	3-669-465-00	WASHER (1.5), STOPPER		234	3-669-479-11	SCREW (1.4X3.5), TAPPING	
217	3-669-360-00	ROLLER, RING		235	3-672-583-00	SPRING	
218	3-669-597-00	ROLLER (B), RING		236	*X-3669-430-0	HOLDER BLOCK ASSY, #3 GUIDE	

5-6. DRUM ASSEMBLY

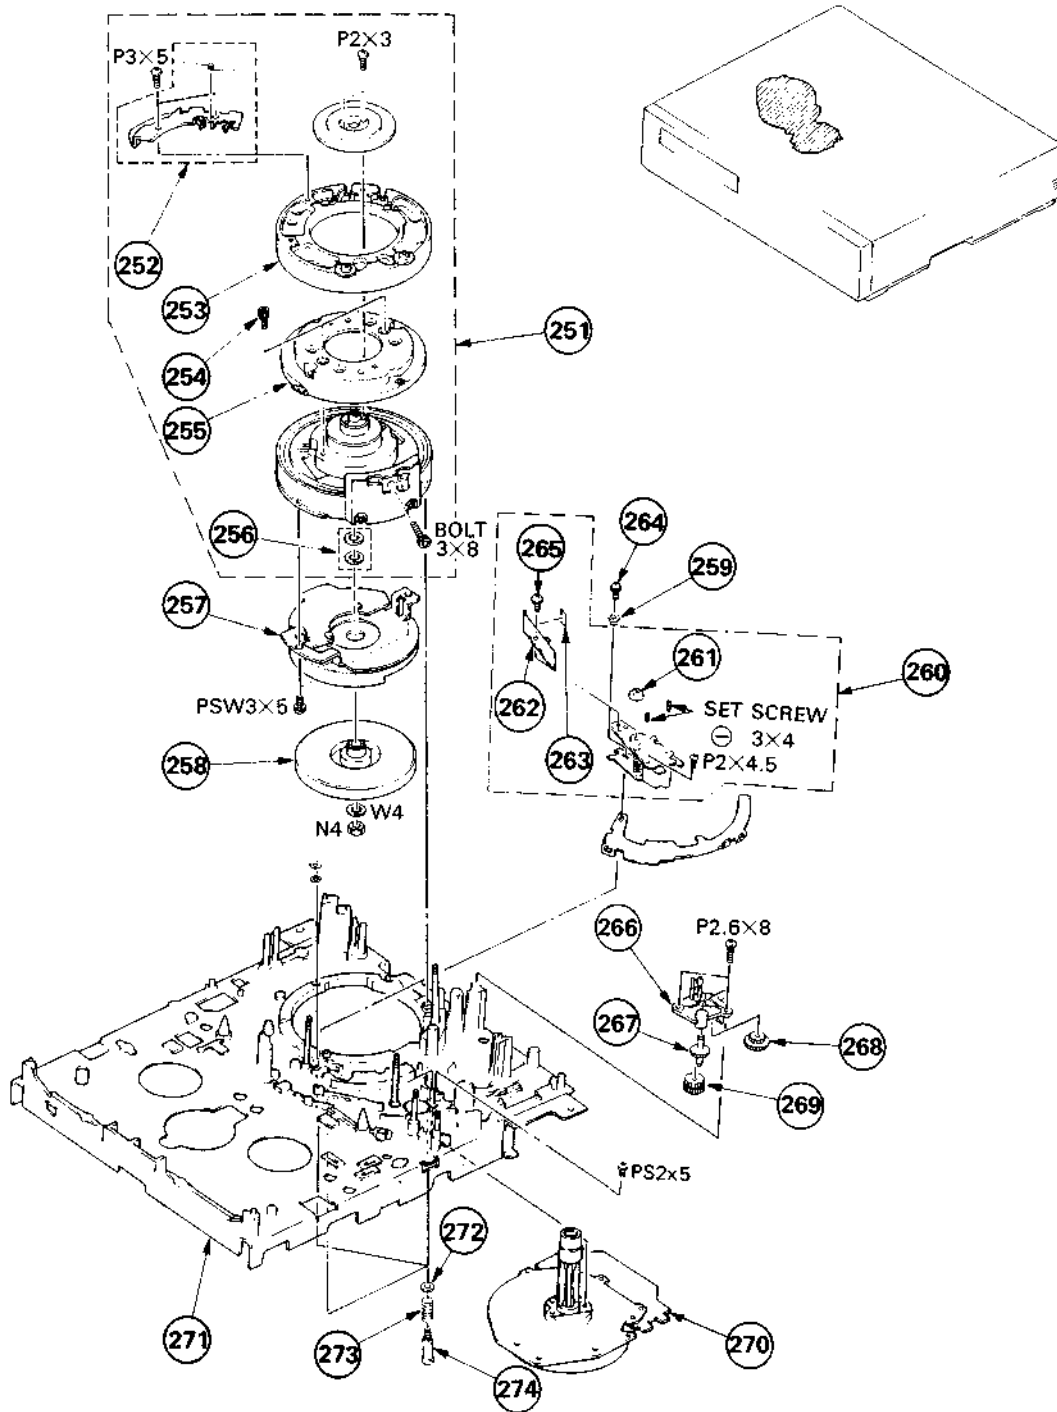

No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
251	A-6050-394-A	DRUM ASSY (DSH-79A-R)		264	3-693-439-01	SCREW (P2.6X12), (+)	
252	A-6760-066-B	SPRING ASSY, TAPE RETAINER	252-256	265	3-693-439-11	SCREW (P2.6X5), (+)	
253	A-6760-119-A	DRUM ASSY, UPPER		266	*X-3693-805-1	CHASSIS ASSY, DRIVE GEAR	
254	3-669-157-00	BOLT (WASHER) (2.6X8)		267	*X-3693-806-1	GEAR (F) ASSY	
255	A-6762-264-A	DISK ASSY (DSR-79-R)		268	3-669-337-00	GEAR (D)	
256	X-3669-105-0	SPACER BLOCK ASSY		269	3-669-338-00	GEAR (E)	
257	X-2621-204-2	D STATOR ASSY		270	8-838-070-01	MOTOR, DC (BHF-1907B) (CAPSTAN MOTOR)	
258	X-2621-202-0	D ROTOR ASSY		271	*X-3693-816-3	CHASSIS ASSY, MECHANICAL	(M902)
259	3-684-247-01	BUSHING, ACE		272	3-669-600-11	WASHER, FLAT (3.5)	
260	A-6761-096-A	ACE ASSY	261-263, 265	273	3-429-123-00	SPRING	
261	*3-684-246-02	NUT, ADJUSTMENT, HEIGHT, ACE		274	3-669-302-00	SCREW, FITTING	
262	3-693-895-01	PROTECTOR (S)					
263	3-693-904-01	SHEET (P), INSULATING					

5-7. REEL BLOCK ASSEMBLY

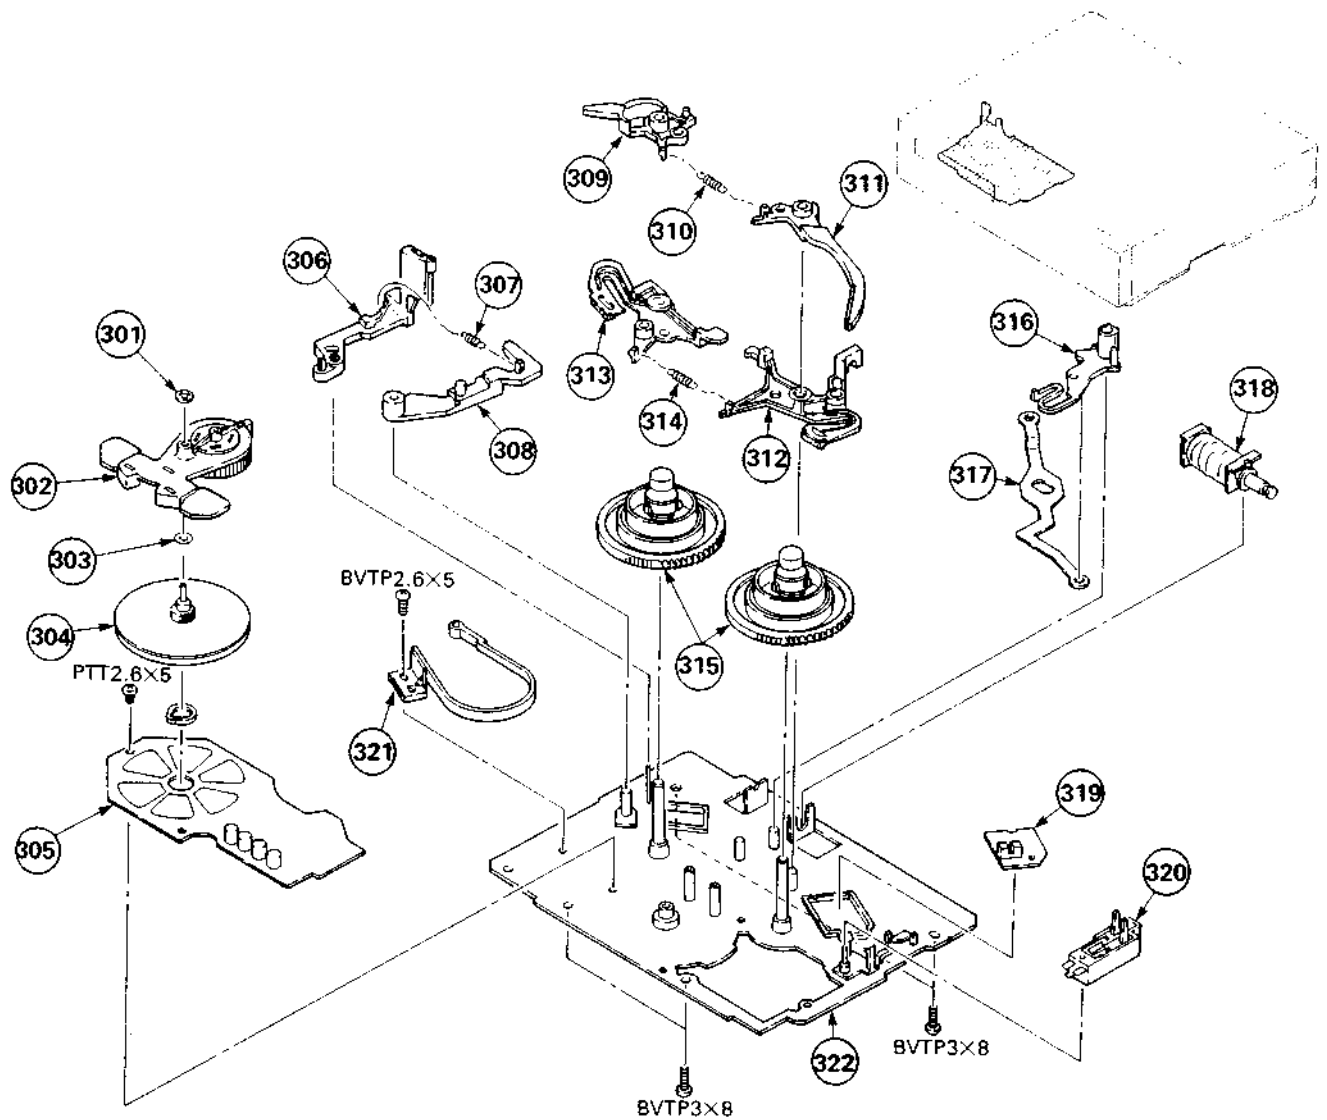

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
301	3-669-595-00	WASHER (2), STOPPER		312	X-3684-108-1	BRAKE ASSY, TAKE-UP	
302	A-6759-074-A	ARM BLOCK ASSY, PENDULUM		313	X-3684-107-1	BRAKE ASSY, SUPPLY	
303	3-679-318-00	WASHER, PENDULUM ARM		314	3-685-772-01	SPRING, TENSION	
304	X-2622-205-1	ROTOR ASSY, R		315	X-3684-106-1	TABLE ASSY, REEL	
305	*A-4910-063-A	R STATOR (REEL MOTOR) BOARD, COMPLETE	(M903)	316	3-684-193-01	ARM, PENDULUM STOPPER	
306	X-3684-121-1	LEVER ASSY, TENSION REGULATOR		317	*3-684-183-01	LINK, L	
307	3-685-749-01	SPRING, TENSION		318	Δ 1-454-371-31	SOLENOID, PLUNGER (BRAKE) (PM902)	
308	3-693-869-01	LEVER, FUNCTION		319	*1-613-233-12	RD-21 BOARD	
309	3-684-192-01	ARM, BRAKE, SUPPLY SOFT		320	1-554-839-11	SWITCH, LEAF (2 GANG) (REC PROOF/CASSETTE DOWN) (S901)	
310	3-684-235-01	SPRING, TENSION		321	X-3679-120-0	BAND ASSY, TENSION REGULATOR	
311	X-3684-137-1	BRAKE ASSY, T SOFT		322	*X-3693-813-1	CHASSIS ASSY, SUB	

5-8. HARDWARE LIST

SCREW

7-621-773-86 SCREW +B 2.6X4
7-627-553-58 SCREW, PRECISION +P 2X4.5
7-627-554-07 SCREW, PRECISION +P 2X2.2
7-628-253-15 SCREW +PS 2X5
7-628-253-95 SCREW +PS 2.6X4

7-628-254-05 SCREW +PS 2.6X5
7-685-134-14 SCREW +P 2.6X8 TYPE 2 NON-SLIT
7-685-646-71 SCREW +BVTP 3X8 TYPE 2 IT-3
7-685-646-79 SCREW +BVTP 3X8 TYPE 2 IT-3
7-685-646-81 SCREW +BVTP 3X8 TYPE 2

7-685-646-89 SCREW +BVTP 3X8 TYPE 2
7-685-648-71 SCREW +BVTP 3X12 TYPE 2 IT-3
7-685-648-81 SCREW +BVTP 3X12 TYPE 2
7-685-649-71 SCREW +BVTP 3X14 TYPE 2 IT-3
7-685-649-81 SCREW +BVTP 3X14 TYPE 2

7-685-791-04 SCREW +PTT 2.6X5 (S)
7-685-791-04 SCREW +BVTT 2.6X5 (S)

NUT

7-622-205-05 NUT M2 TYPE 2

STOP RING

7-624-190-61 STOP RING 2.4, TYPE-CS

SET-SCREW

7-683-174-21 SET-SCREW, SLOT 3X4 CONE POINT

TAPPING

7-685-105-14 IPG +P 2X8, TYPE 2, NON-SLIT

SECTION 6 ELECTRICAL PARTS LIST

R STATOR

VT-1

NOTE:

The components identified by shading and mark **A** are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

- items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- RESISTORS**
- All resistors are in ohms
 - F : nonflammable

- CAPACITORS**
- MF : μ F, PF : μ μ F
- COILS**
- MMH : mH, UH : μ H

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
	A-4910-063-A	R STATOR (REEL MOTOR) BOARD, COMPLETE		C022	1-123-356-00	ELECT	10MF 20% 16V
		*****		C023	1-123-306-00	ELECT	47MF 20% 10V
	*1-560-461-00	PIN, CONNECTOR 5P		C024	1-162-561-11	CERAMIC	0.1MF 16V
		CAPACITOR		C025	1-123-369-00	ELECT	4.7MF 20% 25V
C1	1-123-821-00	ELECT	47MF 20% 16V	C026	1-123-380-00	ELECT	1MF 20% 50V
C2	1-123-821-00	ELECT	47MF 20% 16V	C027	1-123-356-00	ELECT	10MF 20% 16V
C3	1-123-821-00	ELECT	47MF 20% 16V	C028	1-102-973-00	CERAMIC	100PF 5% 50V
C4	1-123-821-00	ELECT	47MF 20% 16V	C029	1-101-004-00	CERAMIC	0.01MF 50V
		DIODE		C030	1-162-560-11	CERAMIC	0.047MF 16V
H1	8-719-800-31	DIODE THS103A-1		C031	1-101-361-00	CERAMIC	150PF 5% 50V
H2	8-719-800-31	DIODE THS103A-1		C032	1-101-004-00	CERAMIC	0.01MF 50V
		IC		C033	1-162-560-11	CERAMIC	0.047MF 16V
IC1	8-759-801-97	IC LB1615		C034	1-101-004-00	CERAMIC	0.01MF 50V
		RESISTOR		C036	1-101-004-00	CERAMIC	0.01MF 50V
R1	1-247-823-00	CARBON	470 5% 1/6W	C037	1-123-356-00	ELECT	10MF 20% 16V
R2	1-249-429-11	CARBON	10K 5% 1/6W	C038	1-101-004-00	CERAMIC	0.01MF 50V
R3	1-249-437-11	CARBON	47K 5% 1/6W	C039	1-102-981-00	CERAMIC	300PF 5% 50V
R4	1-249-437-11	CARBON	47K 5% 1/6W	C040	1-102-948-21	CERAMIC	11PF 5% 50V
R5	1-249-437-11	CARBON	47K 5% 1/6W	C041	1-161-057-00	CERAMIC	0.033MF 10% 25V
R6	1-249-437-11	CARBON	47K 5% 1/6W	C042	1-102-822-00	CERAMIC	390PF 5% 50V
		*****		C043	1-162-560-11	CERAMIC	0.047MF 16V
	*A-6711-694-A	VT-1 BOARD, COMPLETE		C044	1-102-950-21	CERAMIC	13PF 5% 50V
		*****		C045	1-101-882-00	CERAMIC	51PF 5% 50V
		FILTER		C046	1-101-882-00	CERAMIC	51PF 5% 50V
BPF001	1-235-098-00	FILTER, BAND PASS		C047	1-102-950-21	CERAMIC	13PF 5% 50V
		CAPACITOR		C048	1-123-369-00	ELECT	4.7MF 20% 25V
C004	1-123-306-00	ELECT	47MF 20% 10V	C049	1-102-529-00	CERAMIC	100PF 5% 50V
C005	1-123-356-00	ELECT	10MF 20% 16V	C051	1-102-851-00	CERAMIC	15PF 5% 50V
C006	1-102-973-00	CERAMIC	100PF 5% 50V	C052	1-123-369-00	ELECT	4.7MF 20% 25V
C007	1-102-977-00	CERAMIC	200PF 5% 50V	C053	1-102-976-00	CERAMIC	180PF 5% 50V
C008	1-101-004-00	CERAMIC	0.01MF 50V	C054	1-102-823-00	CERAMIC	430PF 5% 50V
C009	1-101-004-00	CERAMIC	0.01MF 50V	C055	1-102-821-00	CERAMIC	360PF 5% 50V
C010	1-130-471-00	MYLAR	0.001MF 5% 50V	C056	1-102-851-00	CERAMIC	15PF 5% 50V
C011	1-161-043-00	CERAMIC	0.0022MF 10% 25V	C057	1-162-560-11	CERAMIC	0.047MF 16V
C012	1-130-491-00	MYLAR	0.047MF 5% 50V	C058	1-102-520-00	CERAMIC	39PF 5% 50V
C013	1-123-330-00	ELECT	22MF 20% 16V	C059	1-102-852-00	CERAMIC	47PF 5% 50V
C014	1-162-560-11	CERAMIC	0.047MF 16V	C060	1-102-820-00	CERAMIC	330PF 5% 50V
C015	1-102-948-21	CERAMIC	11PF 5% 50V	C061	1-102-823-00	CERAMIC	430PF 5% 50V
C016	1-162-561-11	CERAMIC	0.1MF 16V	C062	1-102-824-00	CERAMIC	470PF 5% 50V
C017	1-101-361-00	CERAMIC	150PF 5% 50V	C063	1-102-976-00	CERAMIC	180PF 5% 50V
C018	1-162-560-11	CERAMIC	0.047MF 16V	C064	1-162-560-11	CERAMIC	0.047MF 16V
C019	1-123-330-00	ELECT	22MF 20% 16V	C065	1-162-560-11	CERAMIC	0.047MF 16V
C020	1-123-318-00	ELECT	33MF 20% 16V	C072	1-162-560-11	CERAMIC	0.047MF 16V
C021	1-162-560-11	CERAMIC	0.047MF 16V	C073	1-102-953-00	CERAMIC	18PF 5% 50V
				C074	1-101-004-00	CERAMIC	0.01MF 50V
				C077	1-123-380-00	ELECT	1MF 20% 50V
				C078	1-101-004-00	CERAMIC	0.01MF 50V
				C080	1-162-560-11	CERAMIC	0.047MF 16V
				C081	1-123-369-00	ELECT	4.7MF 20% 25V
				C082	1-123-380-00	ELECT	1MF 20% 50V
				C083	1-161-040-00	CERAMIC	0.0012MF 10% 25V
				C084	1-101-004-00	CERAMIC	0.01MF 50V
				C085	1-101-004-00	CERAMIC	0.01MF 50V

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
C086	1-123-306-00	ELECT	47MF 20%	C142	1-123-356-00	ELECT	10MF 20%
C088	1-102-521-00	CERAMIC	43PF 5%	C143	1-162-560-11	CERAMIC	0.047MF 16V
C089	1-102-965-00	CERAMIC	39PF 5%	C144	1-162-560-11	CERAMIC	0.047MF 16V
C090	1-123-382-00	ELECT	3.3MF 20%	C145	1-162-560-11	CERAMIC	0.047MF 16V
C091	1-130-483-00	MYLAR	0.01MF 5%	C146	1-102-960-00	CERAMIC	24PF 5%
C093	1-123-380-00	ELECT	1MF 20%	C147	1-102-960-00	CERAMIC	24PF 5%
C094	1-102-820-00	CERAMIC	330PF 5%	C148	1-162-560-11	CERAMIC	0.047MF 16V
C095	1-130-471-00	MYLAR	0.001MF 5%	C149	1-162-560-11	CERAMIC	0.047MF 16V
C096	1-130-047-00	FILM	180PF 5%	C150	1-162-560-11	CERAMIC	0.047MF 16V
C097	1-101-004-00	CERAMIC	0.01MF 50V	C151	1-123-379-00	ELECT	0.47MF 20%
C098	1-102-361-00	CERAMIC	0.0039MF 10%	C153	1-123-356-00	ELECT	10MF 20%
C099	1-102-525-00	CERAMIC	68PF 5%	C154	1-162-561-11	CERAMIC	0.1MF 16V
C100	1-102-525-00	CERAMIC	68PF 5%	C156	1-123-356-00	ELECT	10MF 20%
C101	1-101-004-00	CERAMIC	0.01MF 50V	C157	1-130-495-00	MYLAR	0.1MF 5%
C102	1-102-518-00	CERAMIC	33PF 5%	C158	1-123-356-00	ELECT	10MF 20%
C103	1-102-971-00	CERAMIC	82PF 5%	C159	1-101-004-00	CERAMIC	0.01MF 50V
C104	1-102-977-00	CERAMIC	200PF 5%	C160	1-101-004-00	CERAMIC	0.01MF 50V
C105	1-102-963-00	CERAMIC	33PF 5%	C161	1-123-307-00	ELECT	100MF 20%
C106	1-161-013-00	CERAMIC	0.01MF 10%	C162	1-162-560-11	CERAMIC	0.047MF 16V
C107	1-123-330-00	ELECT	22MF 20%	C163	1-102-852-00	CERAMIC	47PF 5%
C108	1-123-330-00	ELECT	22MF 20%	C164	1-102-852-00	CERAMIC	47PF 5%
C109	1-161-013-00	CERAMIC	0.01MF 10%	C165	1-123-379-00	ELECT	0.47MF 20%
C110	1-123-380-00	ELECT	1MF 20%	C166	1-130-495-00	MYLAR	0.1MF 5%
C111	1-161-024-00	CERAMIC	0.082MF 10%	C167	1-161-013-00	CERAMIC	0.01MF 10%
C112	1-102-525-00	CERAMIC	68PF 5%	C168	1-123-356-00	ELECT	10MF 20%
C113	1-101-974-00	CERAMIC	20PF 5%	C169	1-102-977-00	CERAMIC	200PF 5%
C114	1-101-004-00	CERAMIC	0.01MF 50V	C170	1-101-004-00	CERAMIC	0.01MF 50V
C115	1-102-524-00	CERAMIC	62PF 5%	C171	1-101-004-00	CERAMIC	0.01MF 50V
C116	1-102-816-00	CERAMIC	120PF 5%	C172	1-102-973-00	CERAMIC	100PF 5%
C117	1-123-617-00	ELECT	10MF 20%	C173	1-102-824-00	CERAMIC	470PF 5%
C118	1-102-816-00	CERAMIC	120PF 5%	C174	1-162-561-11	CERAMIC	0.1MF 16V
C119	1-101-361-00	CERAMIC	150PF 5%	C175	1-123-307-00	ELECT	100MF 20%
C120	1-162-560-11	CERAMIC	0.047MF 16V	C176	1-162-560-11	CERAMIC	0.047MF 16V
C121	1-101-059-21	CERAMIC	510PF 5%	C177	1-161-059-00	CERAMIC	0.047MF 10%
C122	1-101-882-00	CERAMIC	51PF 5%	C178	1-161-059-00	CERAMIC	0.047MF 10%
C123	1-101-004-00	CERAMIC	0.01MF 50V	C179	1-123-356-00	ELECT	10MF 20%
C124	1-101-004-00	CERAMIC	0.01MF 50V	C180	1-123-356-00	ELECT	10MF 20%
C125	1-101-004-00	CERAMIC	0.01MF 50V	C181	1-161-047-00	CERAMIC	0.0047MF 10%
C126	1-101-882-00	CERAMIC	51PF 5%	C182	1-161-047-00	CERAMIC	0.0047MF 10%
C128	1-101-004-00	CERAMIC	0.01MF 50V	C183	1-130-476-00	MYLAR	0.0027MF 5%
C129	1-161-013-00	CERAMIC	0.01MF 10%	C184	1-123-380-00	ELECT	1MF 20%
C130	1-101-361-00	CERAMIC	150PF 5%	C185	1-123-307-00	ELECT	100MF 20%
C131	1-130-472-00	MYLAR	0.0012MF 5%	C186	1-162-560-11	CERAMIC	0.047MF 16V
C132	1-123-382-00	ELECT	3.3MF 20%	C187	1-123-306-00	ELECT	47MF 20%
C133	1-130-471-00	MYLAR	0.001MF 5%	C188	1-123-299-00	ELECT	1000MF 20%
C134	1-161-045-00	CERAMIC	0.0033MF 10%	C189	1-123-306-00	ELECT	47MF 20%
C135	1-123-356-00	ELECT	10MF 20%	C190	1-162-560-11	CERAMIC	0.047MF 16V
C136	1-162-560-11	CERAMIC	0.047MF 16V	C191	1-123-306-00	ELECT	47MF 20%
C137	1-123-330-00	ELECT	22MF 20%	C192	1-161-025-00	CERAMIC	0.1MF 10%
C138	1-123-356-00	ELECT	10MF 20%	C193	1-123-822-00	ELECT	47MF 20%
C139	1-162-560-11	CERAMIC	0.047MF 16V	C194	1-162-561-11	CERAMIC	0.1MF 16V
C140	1-123-306-00	ELECT	47MF 20%	C195	1-162-560-11	CERAMIC	0.047MF 16V
C141	1-162-560-11	CERAMIC	0.047MF 16V	C196	1-161-025-00	CERAMIC	0.1MF 10%

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark		
C197	1-162-561-11	CERAMIC	0.1MF	16V	C605	1-162-561-11	CERAMIC	0.1MF	16V
C200	1-101-004-00	CERAMIC	0.01MF	50V	C606	1-101-004-00	CERAMIC	0.01MF	50V
C301	1-101-004-00	CERAMIC	0.01MF	50V	C607	1-101-004-00	CERAMIC	0.01MF	50V
C302	1-161-043-00	CERAMIC	0.0022MF	10% 25V	C608	1-123-616-00	ELECT	4.7MF	20% 25V
C303	1-102-516-00	CERAMIC	27PF	5% 50V	C609	1-101-004-00	CERAMIC	0.01MF	50V
C304	1-101-004-00	CERAMIC	0.01MF	50V	C610	1-101-004-00	CERAMIC	0.01MF	50V
C305	1-101-004-00	CERAMIC	0.01MF	50V	C613	1-102-973-00	CERAMIC	100PF	5% 50V
C306	1-101-004-00	CERAMIC	0.01MF	50V	C614	1-102-120-00	CERAMIC	0.0018MF	10% 50V
C307	1-101-004-00	CERAMIC	0.01MF	50V	C617	1-123-307-00	ELECT	100MF	20% 10V
C308	1-101-004-00	CERAMIC	0.01MF	50V	C618	1-101-884-00	CERAMIC	56PF	5% 50V
C309	1-102-523-00	CERAMIC	56PF	5% 50V	C619	1-102-820-00	CERAMIC	330PF	5% 50V
C310	1-123-306-00	ELECT	47MF	20% 10V	C620	1-123-356-00	ELECT	10MF	20% 16V
C311	1-101-004-00	CERAMIC	0.01MF	50V	C622	1-102-980-00	CERAMIC	270PF	5% 50V
C312	1-101-004-00	CERAMIC	0.01MF	50V	C701	1-161-013-00	CERAMIC	0.01MF	10% 25V
C313	1-101-004-00	CERAMIC	0.01MF	50V	C702	1-161-047-00	CERAMIC	0.0047MF	10% 25V
C314	1-123-306-00	ELECT	47MF	20% 10V	C703	1-161-047-00	CERAMIC	0.0047MF	10% 25V
C315	1-123-369-00	ELECT	4.7MF	20% 25V	C704	1-161-047-00	CERAMIC	0.0047MF	10% 25V
C316	1-130-488-00	MYLAR	0.027MF	5% 50V	C705	1-161-047-00	CERAMIC	0.0047MF	10% 25V
C317	1-123-306-00	ELECT	47MF	20% 10V	C706	1-161-047-00	CERAMIC	0.0047MF	10% 25V
C318	1-101-004-00	CERAMIC	0.01MF	50V	C707	1-161-047-00	CERAMIC	0.0047MF	10% 25V
C401	1-123-381-00	ELECT	2.2MF	20% 50V	C708	1-161-047-00	CERAMIC	0.0047MF	10% 25V
C402	1-101-001-00	CERAMIC	0.001MF	50V	C709	1-161-047-00	CERAMIC	0.0047MF	10% 25V
C403	1-101-001-00	CERAMIC	0.001MF	50V	C710	1-161-047-00	CERAMIC	0.0047MF	10% 25V
C404	1-101-004-00	CERAMIC	0.01MF	50V	C711	1-161-047-00	CERAMIC	0.0047MF	10% 25V
C405	1-123-330-00	ELECT	22MF	20% 16V	C712	1-102-504-00	CERAMIC	4PF	0.25PF 50V
C406	1-123-330-00	ELECT	22MF	20% 16V	C713	1-102-504-00	CERAMIC	4PF	0.25PF 50V
C407	1-102-962-21	CERAMIC	30PF	5% 50V	C714	1-102-518-00	CERAMIC	33PF	5% 50V
C408	1-101-888-00	CERAMIC	68PF	5% 50V	C715	1-102-529-00	CERAMIC	100PF	5% 50V
C409	1-123-381-00	ELECT	2.2MF	20% 50V	C716	1-102-529-00	CERAMIC	100PF	5% 50V
C410	1-102-936-00	CERAMIC	3PF	0.25PF 50V	C717	1-102-518-00	CERAMIC	33PF	5% 50V
C411	1-101-005-00	CERAMIC	0.022MF	50V	C718	1-101-004-00	CERAMIC	0.01MF	50V
C412	1-123-318-00	ELECT	33MF	20% 16V	C719	1-123-318-00	ELECT	33MF	20% 16V
C413	1-123-369-00	ELECT	4.7MF	20% 25V	C720	1-161-047-00	CERAMIC	0.0047MF	10% 25V
C414	1-123-356-00	ELECT	10MF	20% 16V	C721	1-123-380-00	ELECT	1MF	20% 50V
C415	1-123-369-00	ELECT	4.7MF	20% 25V	C722	1-101-004-00	CERAMIC	0.01MF	50V
C416	1-102-948-21	CERAMIC	11PF	5% 50V	C723	1-123-318-00	ELECT	33MF	20% 16V
C417	1-102-948-21	CERAMIC	11PF	5% 50V	C724	1-102-978-00	CERAMIC	220PF	5% 50V
C418	1-102-965-00	CERAMIC	39PF	5% 50V	C725	1-123-310-00	ELECT	470MF	20% 10V
C419	1-123-356-00	ELECT	10MF	20% 16V	C726	1-102-959-00	CERAMIC	22PF	5% 50V
C420	1-123-369-00	ELECT	4.7MF	20% 25V	C727	1-102-959-00	CERAMIC	22PF	5% 50V
C421	1-162-560-11	CERAMIC	0.047MF	16V	C728	1-101-004-00	CERAMIC	0.01MF	50V
C501	1-101-004-00	CERAMIC	0.01MF	50V	C729	1-101-004-00	CERAMIC	0.01MF	50V
C502	1-101-004-00	CERAMIC	0.01MF	50V	C730	1-161-047-00	CERAMIC	0.0047MF	10% 25V
C503	1-101-004-00	CERAMIC	0.01MF	50V	C731	1-161-013-00	CERAMIC	0.01MF	10% 25V
C504	1-101-005-00	CERAMIC	0.022MF	50V	C732	1-123-369-00	ELECT	4.7MF	20% 25V
C505	1-102-822-00	CERAMIC	390PF	5% 50V	C733	1-102-959-00	CERAMIC	22PF	5% 50V
C506	1-162-560-11	CERAMIC	0.047MF	16V	C734	1-101-004-00	CERAMIC	0.01MF	50V
C507	1-123-318-00	ELECT	33MF	20% 16V	C735	1-123-318-00	ELECT	33MF	20% 16V
C508	1-101-004-00	CERAMIC	0.01MF	50V	C736	1-123-369-00	ELECT	4.7MF	20% 25V
C601	1-123-356-00	ELECT	10MF	20% 16V	C737	1-123-379-00	ELECT	0.47MF	20% 50V
C602	1-101-004-00	CERAMIC	0.01MF	50V	C738	1-123-356-00	ELECT	10MF	20% 16V
C603	1-101-004-00	CERAMIC	0.01MF	50V	C739	1-123-381-00	ELECT	2.2MF	20% 50V
C604	1-101-004-00	CERAMIC	0.01MF	50V	C740	1-123-356-00	ELECT	10MF	20% 16V

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
C741	1-123-356-00	ELECT	10MF 20%	D302	8-719-000-06	DIODE MC921	
C742	1-101-004-00	CERAMIC	0.01MF 50V	D303	8-719-000-06	DIODE MC921	
C743	1-123-356-00	ELECT	10MF 20%	D304	8-719-911-19	DIODE 1SS119	
C744	1-101-004-00	CERAMIC	0.01MF 50V	D305	8-719-911-19	DIODE 1SS119	
C745	1-123-324-00	ELECT	1000MF 20%	D601	8-719-911-19	DIODE 1SS119	
C746	1-101-004-00	CERAMIC	0.01MF 50V	D701	8-719-911-19	DIODE 1SS119	
C754	1-101-004-00	CERAMIC	0.01MF 50V	D702	8-719-911-19	DIODE 1SS119	
C755	1-101-004-00	CERAMIC	0.01MF 50V	D703	8-719-911-19	DIODE 1SS119	
		<u>DISCRIMINATOR</u>		D704	8-719-911-19	DIODE 1SS119	
CD701	1-404-380-00	DISCRIMINATOR, CERAMIC 5.5MHZ		D707	8-719-911-19	DIODE 1SS119	
		<u>FILTER</u>				<u>DELAY LINE</u>	
CF001	1-527-875-00	FILTER, CERAMIC		DL003	1-415-313-00	DELAY LINE (1H)	
CF301	1-527-998-00	FILTER, CERAMIC		DL401	1-415-352-11	DELAY LINE, 1H	
CF601	1-527-849-00	FILTER, CERAMIC		DL501	1-415-282-00	DELAY LINE	
CF701	1-527-263-00	CERAMIC FILTER (5.5MHZ)				<u>IC</u>	
		<u>CONNECTOR</u>		IC001	8-759-101-62	IC CX20043	
CN001	*1-560-894-00	PIN, CONNECTOR 6P		IC003	8-759-203-99	IC CX10021B-NP	
CN002	*1-560-894-00	PIN, CONNECTOR 6P		IC004	8-759-202-47	IC CX10023	
CN003	*1-560-893-00	PIN, CONNECTOR 5P		IC005	8-752-004-50	IC CX20045	
CN701	*1-560-898-00	PIN, CONNECTOR 10P		IC006	8-759-200-60	IC TA7060AP	
		<u>JACK</u>		IC007	8-759-920-80	IC BA7004	
CNJ001	1-536-936-11	CONNECTOR BOARD, BNC		IC301	8-759-208-94	IC CX-894	
CNJ002	1-536-936-11	CONNECTOR BOARD, BNC		IC302	8-752-006-10	IC CX20061	
CNJ003	1-562-940-11	JACK, PIN		IC303	8-759-909-20	IC BA634	
CNJ004	1-562-941-11	JACK, PIN		IC304	8-759-904-95	IC BA7007	
		<u>TRIMMER</u>		IC401	8-758-662-00	IC CX-866B	
CT701	1-404-134-00	TRAP, CERAMIC (5.5MHZ)		IC701	8-759-276-07	IC TA7607AP	
		<u>DIODE</u>		IC702	8-759-193-91	IC UPC1391H	
D001	8-719-911-19	DIODE 1SS119		IC703	8-759-157-40	IC UPC574J	
D002	8-719-911-19	DIODE 1SS119				<u>COIL</u>	
D003	8-719-911-19	DIODE 1SS119		L002	1-408-422-00	MICRO INDUCTOR 120UH	
D004	8-719-911-19	DIODE 1SS119		L003	1-408-427-00	MICRO INDUCTOR 330UH	
D005	8-719-911-19	DIODE 1SS119		L004	1-408-422-00	MICRO INDUCTOR 120UH	
D006	8-719-911-19	DIODE 1SS119		L005	1-408-424-00	MICRO INDUCTOR 180UH	
D007	8-719-911-19	DIODE 1SS119		L006	1-408-422-00	MICRO INDUCTOR 120UH	
D008	8-719-911-19	DIODE 1SS119		L007	1-408-421-00	MICRO INDUCTOR 100UH	
D009	8-719-000-12	DIODE MC931		L008	1-408-419-00	MICRO INDUCTOR 68UH	
D010	8-719-101-63	DIODE RD6.8EL1		L009	1-408-423-00	MICRO INDUCTOR 150UH	
D011	8-719-100-36	DIODE RD5.6E83		L010	1-408-416-00	MICRO INDUCTOR 39UH	
D012	8-719-911-19	DIODE 1SS119		L011	1-408-409-00	MICRO INDUCTOR 10UH	
D013	8-719-911-19	DIODE 1SS119		L012	1-408-423-00	MICRO INDUCTOR 150UH	
D014	8-719-000-06	DIODE MC921		L015	1-408-420-00	MICRO INDUCTOR 82UH	
D015	8-719-911-19	DIODE 1SS119		L016	1-407-496-00	MICRO INDUCTOR 2.2MMH	
D016	8-719-911-19	DIODE 1SS119		L017	1-407-499-00	MICRO INDUCTOR 3.9MMH	
D017	8-719-911-19	DIODE 1SS119		L018	1-407-495-51	MICRO INDUCTOR 1.8MMH	
D018	8-719-911-19	DIODE 1SS119		L019	1-408-427-00	MICRO INDUCTOR 330UH	
D301	8-719-911-19	DIODE 1SS119		L020	1-408-428-00	MICRO INDUCTOR 390UH	
				L021	1-408-415-00	MICRO INDUCTOR 33UH	
				L022	1-408-408-00	MICRO INDUCTOR 8.2UH	
				L023	1-408-406-00	MICRO INDUCTOR 5.6UH	

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
L024	1-408-415-00	MICRO INDUCTOR 33UH		Q012	8-729-900-36	TRANSISTOR DTC124ES	
L025	1-408-878-00	MICRO INDUCTOR 0.33UH		Q013	8-729-204-83	TRANSISTOR 2SA1048-GR	
L026	1-408-427-00	MICRO INDUCTOR 330UH		Q014	8-729-384-46	TRANSISTOR 2SA844-C	
L029	1-408-411-00	MICRO INDUCTOR 15UH		Q015	8-729-603-30	TRANSISTOR 2SC403SP-3	
L030	1-408-411-00	MICRO INDUCTOR 15UH		Q016	8-729-603-30	TRANSISTOR 2SC403SP-3	
L031	1-408-429-00	MICRO INDUCTOR 470UH		Q017	8-729-384-46	TRANSISTOR 2SA844-C	
L032	1-408-427-00	MICRO INDUCTOR 330UH		Q018	8-729-603-30	TRANSISTOR 2SC403SP-3	
L033	1-408-876-00	MICRO INDUCTOR 0.18UH		Q019	8-729-384-46	TRANSISTOR 2SA844-C	
L034	1-408-429-00	MICRO INDUCTOR 470UH		Q020	8-729-603-30	TRANSISTOR 2SC403SP-3	
L035	1-408-429-00	MICRO INDUCTOR 470UH		Q021	8-729-603-30	TRANSISTOR 2SC403SP-3	
L036	1-408-422-00	MICRO INDUCTOR 120UH		Q028	8-729-245-83	TRANSISTOR 2SC2458	
L037	1-408-421-00	MICRO INDUCTOR 100UH		Q029	8-729-204-83	TRANSISTOR 2SA1048-GR	
L038	1-408-413-00	MICRO INDUCTOR 22UH		Q030	8-729-900-36	TRANSISTOR DTC124ES	
L039	1-408-427-00	MICRO INDUCTOR 330UH		Q031	8-729-245-83	TRANSISTOR 2SC2458	
L401	1-408-397-00	MICRO INDUCTOR 1UH		Q034	8-729-900-36	TRANSISTOR DTC124ES	
L402	1-408-397-00	MICRO INDUCTOR 1UH		Q035	8-729-245-83	TRANSISTOR 2SC2458	
L403	1-408-416-00	MICRO INDUCTOR 39UH		Q036	8-729-245-83	TRANSISTOR 2SC2458	
L404	1-408-424-00	MICRO INDUCTOR 180UH		Q037	8-729-603-30	TRANSISTOR 2SC403SP-3	
L501	1-408-408-00	MICRO INDUCTOR 8.2UH		Q038	8-729-384-46	TRANSISTOR 2SA844-C	
L502	1-408-423-00	MICRO INDUCTOR 150UH		Q039	8-729-204-83	TRANSISTOR 2SA1048-GR	
L701	1-408-397-00	MICRO INDUCTOR 1UH		Q040	8-729-177-43	TRANSISTOR 2SD774	
L702	1-408-406-00	MICRO INDUCTOR 5.6UH		Q041	8-729-177-43	TRANSISTOR 2SD774	
L703	1-408-406-00	MICRO INDUCTOR 5.6UH		Q042	8-729-204-83	TRANSISTOR 2SA1048-GR	
L704	1-408-409-00	MICRO INDUCTOR 10UH		Q043	8-729-900-36	TRANSISTOR DTC124ES	
L705	1-408-406-00	MICRO INDUCTOR 5.6UH		Q044	8-729-900-36	TRANSISTOR DTC124ES	
L706	1-408-412-00	MICRO INDUCTOR 18UH		Q045	8-729-245-83	TRANSISTOR 2SC2458	
L707	1-408-413-00	MICRO INDUCTOR 22UH		Q046	8-729-245-83	TRANSISTOR 2SC2458	
L708	1-408-417-00	MICRO INDUCTOR 47UH		Q047	8-729-204-83	TRANSISTOR 2SA1048-GR	
		<u>LOW PASS FILTER</u>		Q048	8-729-204-83	TRANSISTOR 2SA1048-GR	
LPF001	1-235-097-00	FILTER, LOW PASS		Q049	8-729-245-83	TRANSISTOR 2SC2458	
		<u>VARIABLE COIL</u>		Q050	8-729-245-83	TRANSISTOR 2SC2458	
LV301	1-408-532-00	COIL, VARIABLE		Q051	8-729-204-83	TRANSISTOR 2SA1048-GR	
LV302	1-408-513-00	COIL (VARIABLE)		Q301	8-729-245-83	TRANSISTOR 2SC2458	
LV303	1-407-291-00	MICRO INDUCTOR 15MMH		Q302	8-729-900-85	TRANSISTOR DTC144WS	
LV501	1-408-512-00	COIL (VARIABLE)		Q303	8-729-245-83	TRANSISTOR 2SC2458	
		<u>IC LINK</u>		Q304	8-729-245-83	TRANSISTOR 2SC2458	
PS001A	1-532-685-11	LINK, IC		Q305	8-729-204-83	TRANSISTOR 2SA1048-GR	
		<u>TRANSISTOR</u>		Q306	8-729-204-83	TRANSISTOR 2SA1048-GR	
Q001	8-729-245-83	TRANSISTOR 2SC2458		Q307	8-729-204-83	TRANSISTOR 2SA1048-GR	
Q003	8-729-245-83	TRANSISTOR 2SC2458		Q308	8-729-900-65	TRANSISTOR DTA144ES	
Q004	8-729-245-83	TRANSISTOR 2SC2458		Q309	8-729-900-89	TRANSISTOR DTC144ES	
Q005	8-729-384-46	TRANSISTOR 2SA844-C		Q310	8-729-900-85	TRANSISTOR DTC144WS	
Q006	8-729-384-46	TRANSISTOR 2SA844-C		Q314	8-729-204-83	TRANSISTOR 2SA1048-GR	
Q007	8-729-603-30	TRANSISTOR 2SC403SP-3		Q401	8-729-245-83	TRANSISTOR 2SC2458	
Q008	8-729-384-46	TRANSISTOR 2SA844-C		Q501	8-729-245-83	TRANSISTOR 2SC2458	
Q009	8-729-603-30	TRANSISTOR 2SC403SP-3		Q502	8-729-245-83	TRANSISTOR 2SC2458	
Q010	8-729-603-30	TRANSISTOR 2SC403SP-3		Q503	8-729-245-83	TRANSISTOR 2SC2458	
Q011	8-729-603-30	TRANSISTOR 2SC403SP-3		Q504	8-729-245-83	TRANSISTOR 2SC2458	
				Q601	8-729-245-83	TRANSISTOR 2SC2458	
				Q603	8-729-245-83	TRANSISTOR 2SC2458	
				Q604	8-729-245-83	TRANSISTOR 2SC2458	
				Q605	8-729-245-83	TRANSISTOR 2SC2458	
				Q606	8-729-245-83	TRANSISTOR 2SC2458	

The components identified by shading and mark **A** are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
Q701	8-729-203-28	TRANSISTOR 2SC2216		R046	1-247-833-00	CARBON 1.2K 5%	1/6W
Q702	8-769-200-10	TRANSISTOR 2SK107-1		R047	1-247-824-00	CARBON 510 5%	1/6W
Q703	8-729-204-83	TRANSISTOR 2SA1048-GR		R048	1-247-875-00	CARBON 68K 5%	1/6W
Q705	8-729-245-83	TRANSISTOR 2SC2458		R049	1-247-875-00	CARBON 68K 5%	1/6W
Q706	8-729-245-83	TRANSISTOR 2SC2458		R050	1-247-837-00	CARBON 1.8K 5%	1/6W
Q707	8-769-200-20	TRANSISTOR 2SK107-2		R051	1-247-834-00	CARBON 1.3K 5%	1/6W
Q708	8-729-900-63	TRANSISTOR DTA124ES		R052	1-247-811-00	CARBON 150 5%	1/6W
Q709	8-729-900-63	TRANSISTOR DTA124ES		R053	1-247-890-00	CARBON 300K 5%	1/6W
Q710	8-729-900-63	TRANSISTOR DTA124ES		R054	1-247-829-00	CARBON 820 5%	1/6W
Q711	8-729-900-89	TRANSISTOR DTC144ES		R055	1-249-421-11	CARBON 2.2K 5%	1/6W
Q712	8-729-113-32	TRANSISTOR 2SB733-2		R056	1-247-821-00	CARBON 390 5%	1/6W
		<u>RESISTOR</u>		R057	1-249-421-11	CARBON 2.2K 5%	1/6W
R003	1-247-831-00	CARBON 1K 5%	1/6W	R058	1-247-863-00	CARBON 22K 5%	1/6W
R004	1-249-421-11	CARBON 2.2K 5%	1/6W	R059	1-247-863-00	CARBON 22K 5%	1/6W
R005	1-249-421-11	CARBON 2.2K 5%	1/6W	R060	1-247-819-00	CARBON 330 5%	1/6W
R006	1-247-861-00	CARBON 18K 5%	1/6W	R061	1-247-812-00	CARBON 160 5%	1/6W
R007	1-247-901-00	CARBON 820K 5%	1/6W	R062	1-249-429-11	CARBON 10K 5%	1/6W
R008	1-247-857-00	CARBON 12K 5%	1/6W	R063	1-247-831-00	CARBON 1K 5%	1/6W
R009	1-247-903-00	CARBON 1M 5%	1/6W	R064	1-247-811-00	CARBON 150 5%	1/6W
R010	1-247-857-00	CARBON 12K 5%	1/6W	R065	1-247-815-00	CARBON 220 5%	1/6W
R011	1-249-421-11	CARBON 2.2K 5%	1/6W	R066	1-247-831-00	CARBON 1K 5%	1/6W
R012	1-247-861-00	CARBON 18K 5%	1/6W	R067	1-247-834-00	CARBON 1.3K 5%	1/6W
R013	1-247-841-00	CARBON 2.7K 5%	1/6W	R068	1-247-821-00	CARBON 390 5%	1/6W
R014	1-247-879-00	CARBON 100K 5%	1/6W	R069	1-247-834-00	CARBON 1.3K 5%	1/6W
R015	1-247-847-00	CARBON 4.7K 5%	1/6W	R070	1-249-429-11	CARBON 10K 5%	1/6W
R016	1-247-847-00	CARBON 4.7K 5%	1/6W	R071	1-249-429-11	CARBON 10K 5%	1/6W
R017	1-247-851-00	CARBON 6.8K 5%	1/6W	R072	1-247-831-00	CARBON 1K 5%	1/6W
R018	1-247-807-00	CARBON 100 5%	1/6W	R073	1-247-833-00	CARBON 1.2K 5%	1/6W
R019	1-247-831-00	CARBON 1K 5%	1/6W	R074	1-247-807-00	CARBON 100 5%	1/6W
R020	1-247-830-00	CARBON 910 5%	1/6W	R075	1-247-875-00	CARBON 68K 5%	1/6W
R023	1-247-849-00	CARBON 5.6K 5%	1/6W	R076	1-247-853-00	CARBON 8.2K 5%	1/6W
R024	1-249-429-11	CARBON 10K 5%	1/6W	R077	1-249-429-11	CARBON 10K 5%	1/6W
R025	1-249-437-11	CARBON 47K 5%	1/6W	R078	1-247-837-00	CARBON 1.8K 5%	1/6W
R026	1-247-883-00	CARBON 150K 5%	1/6W	R079	1-247-832-00	CARBON 1.1K 5%	1/6W
R027	1-249-421-11	CARBON 2.2K 5%	1/6W	R080	1-249-421-11	CARBON 2.2K 5%	1/6W
R028	1-247-831-00	CARBON 1K 5%	1/6W	R081	1-247-810-00	CARBON 130 5%	1/6W
R029	1-247-823-00	CARBON 470 5%	1/6W	R082	1-247-817-00	CARBON 270 5%	1/6W
R030	1-247-831-00	CARBON 1K 5%	1/6W	R083	1-247-821-00	CARBON 390 5%	1/6W
R031	1-249-421-11	CARBON 2.2K 5%	1/6W	R084	1-247-863-00	CARBON 22K 5%	1/6W
R032	1-247-823-00	CARBON 470 5%	1/6W	R085	1-247-863-00	CARBON 22K 5%	1/6W
R033	1-247-831-00	CARBON 1K 5%	1/6W	R086	1-247-829-00	CARBON 820 5%	1/6W
R035	1-247-883-00	CARBON 150K 5%	1/6W	R087	1-247-819-00	CARBON 330 5%	1/6W
R036	1-247-837-00	CARBON 1.8K 5%	1/6W	R088	1-247-812-00	CARBON 160 5%	1/6W
R037	1-247-837-00	CARBON 1.8K 5%	1/6W	R089	1-249-429-11	CARBON 10K 5%	1/6W
R038	1-247-849-00	CARBON 5.6K 5%	1/6W	R090	1-247-831-00	CARBON 1K 5%	1/6W
R039	1-249-434-11	CARBON 27K 5%	1/6W	R091	1-247-832-00	CARBON 1.1K 5%	1/6W
R040	1-247-877-00	CARBON 82K 5%	1/6W	R092	1-247-831-00	CARBON 1K 5%	1/6W
R041	1-247-831-00	CARBON 1K 5%	1/6W	R093	1-247-824-00	CARBON 510 5%	1/6W
R042	1-247-831-00	CARBON 1K 5%	1/6W	R094	1-247-847-00	CARBON 4.7K 5%	1/6W
R043	1-247-835-00	CARBON 1.5K 5%	1/6W	R095	1-247-842-00	CARBON 3K 5%	1/6W
R044	1-247-824-00	CARBON 510 5%	1/6W	R096	1-247-831-00	CARBON 1K 5%	1/6W
R045	1-247-831-00	CARBON 1K 5%	1/6W	R097	1-215-450-00	METAL 16K 1%	1/6W
				R098	1-215-461-00	METAL 47K 1%	1/6W

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
R099	1-247-867-00	CARBON	33K 5% 1/6W	R176	1-247-838-00	CARBON	2K 5% 1/6W
R118	1-247-831-00	CARBON	1K 5% 1/6W	R177	1-247-853-00	CARBON	8.2K 5% 1/6W
R119	1-247-831-00	CARBON	1K 5% 1/6W	R178	1-247-870-00	CARBON	43K 5% 1/6W
R120	1-247-859-00	CARBON	15K 5% 1/6W	R179	1-247-889-00	CARBON	270K 5% 1/6W
R121	1-247-847-00	CARBON	4.7K 5% 1/6W	R180	△ 1-217-387-00	FUSIBLE	10 5% 1/4W F
R122	1-247-819-00	CARBON	330 5% 1/6W	R181	1-247-840-00	CARBON	2.4K 5% 1/6W
R124	1-247-831-00	CARBON	1K 5% 1/6W	R182	1-247-837-00	CARBON	1.8K 5% 1/6W
R125	1-247-891-00	CARBON	330K 5% 1/6W	R183	1-247-831-00	CARBON	1K 5% 1/6W
R126	1-247-887-00	CARBON	220K 5% 1/6W	R184	1-247-829-00	CARBON	820 5% 1/6W
R127	1-249-437-11	CARBON	47K 5% 1/6W	R185	1-247-829-00	CARBON	820 5% 1/6W
R128	1-247-878-00	CARBON	91K 5% 1/6W	R186	1-247-831-00	CARBON	1K 5% 1/6W
R129	1-249-421-11	CARBON	2.2K 5% 1/6W	R187	1-247-831-00	CARBON	1K 5% 1/6W
R130	1-247-889-00	CARBON	270K 5% 1/6W	R188	1-247-831-00	CARBON	1K 5% 1/6W
R131	1-247-867-00	CARBON	33K 5% 1/6W	R190	1-247-817-00	CARBON	270 5% 1/6W
R132	1-247-843-00	CARBON	3.3K 5% 1/6W	R191	1-249-419-11	CARBON	1.5K 5% 1/6W
R133	1-247-854-00	CARBON	9.1K 5% 1/6W	R192	1-247-837-00	CARBON	1.8K 5% 1/6W
R134	1-247-848-00	CARBON	5.1K 5% 1/6W	R193	1-247-837-00	CARBON	1.8K 5% 1/6W
R135	1-247-846-00	CARBON	4.3K 5% 1/6W	R194	1-249-419-11	CARBON	1.5K 5% 1/6W
R136	1-247-843-00	CARBON	3.3K 5% 1/6W	R195	1-249-419-11	CARBON	1.5K 5% 1/6W
R137	1-247-892-00	CARBON	360K 5% 1/6W	R196	1-247-831-00	CARBON	1K 5% 1/6W
R138	1-247-894-00	CARBON	430K 5% 1/6W	R198	1-247-817-00	CARBON	270 5% 1/6W
R139	1-247-879-00	CARBON	100K 5% 1/6W	R199	1-247-857-00	CARBON	12K 5% 1/6W
R140	1-247-828-00	CARBON	750 5% 1/6W	R200	1-247-832-00	CARBON	1.1K 5% 1/6W
R141	1-249-421-11	CARBON	2.2K 5% 1/6W	R201	1-247-831-00	CARBON	1K 5% 1/6W
R142	1-247-841-00	CARBON	2.7K 5% 1/6W	R203	1-247-841-00	CARBON	2.7K 5% 1/6W
R143	1-247-846-00	CARBON	4.3K 5% 1/6W	R204	1-247-867-00	CARBON	33K 5% 1/6W
R144	1-249-419-11	CARBON	1.5K 5% 1/6W	R205	1-247-879-00	CARBON	100K 5% 1/6W
R145	1-249-419-11	CARBON	1.5K 5% 1/6W	R206	1-247-867-00	CARBON	33K 5% 1/6W
R149	1-249-421-11	CARBON	2.2K 5% 1/6W	R207	1-247-863-00	CARBON	22K 5% 1/6W
R150	1-247-843-00	CARBON	3.3K 5% 1/6W	R208	1-249-429-11	CARBON	10K 5% 1/6W
R151	1-247-841-00	CARBON	2.7K 5% 1/6W	R209	1-249-429-11	CARBON	10K 5% 1/6W
R152	1-247-843-00	CARBON	3.3K 5% 1/6W	R210	1-247-847-00	CARBON	4.7K 5% 1/6W
R153	1-247-877-00	CARBON	82K 5% 1/6W	R211	1-247-879-00	CARBON	100K 5% 1/6W
R154	1-247-819-00	CARBON	330 5% 1/6W	R212	1-247-879-00	CARBON	100K 5% 1/6W
R155	1-247-845-00	CARBON	3.9K 5% 1/6W	R213	1-247-851-00	CARBON	6.8K 5% 1/6W
R156	1-247-845-00	CARBON	3.9K 5% 1/6W	R214	1-247-879-00	CARBON	100K 5% 1/6W
R157	1-249-421-11	CARBON	2.2K 5% 1/6W	R215	1-249-437-11	CARBON	47K 5% 1/6W
R158	1-247-831-00	CARBON	1K 5% 1/6W	R216	1-249-437-11	CARBON	47K 5% 1/6W
R159	1-249-437-11	CARBON	47K 5% 1/6W	R217	1-247-818-00	CARBON	300 5% 1/6W
R160	1-247-824-00	CARBON	510 5% 1/6W	R218	1-247-811-00	CARBON	150 5% 1/6W
R162	1-247-825-00	CARBON	560 5% 1/6W	R219	1-247-813-00	CARBON	180 5% 1/6W
R163	1-247-825-00	CARBON	560 5% 1/6W	R220	1-247-838-00	CARBON	2K 5% 1/6W
R165	1-247-851-00	CARBON	6.8K 5% 1/6W	R221	1-247-831-00	CARBON	1K 5% 1/6W
R166	1-247-851-00	CARBON	6.8K 5% 1/6W	R222	1-247-803-00	CARBON	68 5% 1/6W
R167	1-247-815-00	CARBON	220 5% 1/6W	R223	1-247-804-00	CARBON	75 5% 1/6W
R168	1-247-825-00	CARBON	560 5% 1/6W	R225	1-247-867-00	CARBON	33K 5% 1/6W
R169	1-247-825-00	CARBON	560 5% 1/6W	R226	1-247-853-00	CARBON	8.2K 5% 1/6W
R170	1-247-859-00	CARBON	15K 5% 1/6W	R227	1-247-831-00	CARBON	1K 5% 1/6W
R171	1-249-429-11	CARBON	10K 5% 1/6W	R228	1-247-867-00	CARBON	33K 5% 1/6W
R172	1-247-862-00	CARBON	20K 5% 1/6W	R231	1-247-843-00	CARBON	3.3K 5% 1/6W
R173	1-249-429-11	CARBON	10K 5% 1/6W	R250	1-247-827-00	CARBON	680 5% 1/6W
R174	1-247-819-00	CARBON	330 5% 1/6W	R301	1-247-867-00	CARBON	33K 5% 1/6W
R175	1-247-821-00	CARBON	390 5% 1/6W	R302	1-247-863-00	CARBON	22K 5% 1/6W

The components identified by shading and mark △ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
R303	1-247-825-00	CARBON	560 5% 1/6W	R503	1-247-863-00	CARBON	22K 5% 1/6W
R304	1-247-825-00	CARBON	560 5% 1/6W	R504	1-247-821-00	CARBON	390 5% 1/6W
R305	1-247-807-00	CARBON	100 5% 1/6W	R505	1-249-421-11	CARBON	2.2K 5% 1/6W
R306	1-247-800-00	CARBON	51 5% 1/6W	R506	1-247-821-00	CARBON	390 5% 1/6W
R307	1-247-825-00	CARBON	560 5% 1/6W	R507	1-247-821-00	CARBON	390 5% 1/6W
R308	1-247-831-00	CARBON	1K 5% 1/6W	R508	1-247-821-00	CARBON	390 5% 1/6W
R309	1-247-853-00	CARBON	8.2K 5% 1/6W	R509	1-247-821-00	CARBON	390 5% 1/6W
R310	1-249-429-11	CARBON	10K 5% 1/6W	R510	1-249-421-11	CARBON	2.2K 5% 1/6W
R311	1-247-807-00	CARBON	100 5% 1/6W	R511	1-247-821-00	CARBON	390 5% 1/6W
R312	1-247-879-00	CARBON	100K 5% 1/6W	R512	1-249-421-11	CARBON	2.2K 5% 1/6W
R313	1-247-881-00	CARBON	120K 5% 1/6W	R513	1-247-831-00	CARBON	1K 5% 1/6W
R314	1-247-785-00	CARBON	12 5% 1/6W	R601	1-247-807-00	CARBON	100 5% 1/6W
R315	1-247-806-00	CARBON	91 5% 1/6W	R602	1-247-843-00	CARBON	3.3K 5% 1/6W
R316	1-247-824-00	CARBON	510 5% 1/6W	R603	1-247-899-00	CARBON	680K 5% 1/6W
R317	1-247-807-00	CARBON	100 5% 1/6W	R604	1-247-829-00	CARBON	820 5% 1/6W
R318	1-247-819-00	CARBON	330 5% 1/6W	R605	1-247-823-00	CARBON	470 5% 1/6W
R319	1-247-867-00	CARBON	33K 5% 1/6W	R606	1-247-819-00	CARBON	330 5% 1/6W
R320	1-247-849-00	CARBON	5.6K 5% 1/6W	R607	1-247-847-00	CARBON	4.7K 5% 1/6W
R321	1-249-429-11	CARBON	10K 5% 1/6W	R608	1-247-881-00	CARBON	120K 5% 1/6W
R322	1-247-867-00	CARBON	33K 5% 1/6W	R609	1-247-875-00	CARBON	68K 5% 1/6W
R323	1-247-847-00	CARBON	4.7K 5% 1/6W	R610	1-247-831-00	CARBON	1K 5% 1/6W
R324	1-249-429-11	CARBON	10K 5% 1/6W	R611	1-247-831-00	CARBON	1K 5% 1/6W
R325	1-247-847-00	CARBON	4.7K 5% 1/6W	R612	1-247-867-00	CARBON	33K 5% 1/6W
R326	1-247-831-00	CARBON	1K 5% 1/6W	R613	1-247-863-00	CARBON	22K 5% 1/6W
R327	1-247-815-00	CARBON	220 5% 1/6W	R617	1-247-825-00	CARBON	560 5% 1/6W
R328	1-247-817-00	CARBON	270 5% 1/6W	R618	1-247-831-00	CARBON	1K 5% 1/6W
R329	1-247-863-00	CARBON	22K 5% 1/6W	R619	1-247-851-00	CARBON	6.8K 5% 1/6W
R330	1-249-437-11	CARBON	47K 5% 1/6W	R620	1-247-879-00	CARBON	100K 5% 1/6W
R331	1-247-891-00	CARBON	330K 5% 1/6W	R621	1-249-429-11	CARBON	10K 5% 1/6W
R332	1-247-847-00	CARBON	4.7K 5% 1/6W	R622	1-249-429-11	CARBON	10K 5% 1/6W
R333	1-249-429-11	CARBON	10K 5% 1/6W	R623	1-247-807-00	CARBON	100 5% 1/6W
R334	1-249-419-11	CARBON	1.5K 5% 1/6W	R624	1-249-421-11	CARBON	2.2K 5% 1/6W
R337	1-247-873-00	CARBON	56K 5% 1/6W	R625	1-247-831-00	CARBON	1K 5% 1/6W
R338	1-247-867-00	CARBON	33K 5% 1/6W	R626	1-249-421-11	CARBON	2.2K 5% 1/6W
R401	1-247-810-00	CARBON	130 5% 1/6W	R627	1-247-807-00	CARBON	100 5% 1/6W
R402	1-247-806-00	CARBON	91 5% 1/6W	R628	1-247-843-00	CARBON	3.3K 5% 1/6W
R403	1-247-867-00	CARBON	33K 5% 1/6W	R629	1-247-819-00	CARBON	330 5% 1/6W
R404	1-247-873-00	CARBON	56K 5% 1/6W	R630	1-247-851-00	CARBON	6.8K 5% 1/6W
R405	1-247-831-00	CARBON	1K 5% 1/6W	R701	1-247-801-00	CARBON	56 5% 1/6W
R406	1-247-832-00	CARBON	1.1K 5% 1/6W	R702	1-247-847-00	CARBON	4.7K 5% 1/6W
R407	1-247-832-00	CARBON	1.1K 5% 1/6W	R703	1-249-421-11	CARBON	2.2K 5% 1/6W
R408	1-247-849-00	CARBON	5.6K 5% 1/6W	R704	1-247-815-00	CARBON	220 5% 1/6W
R409	1-247-831-00	CARBON	1K 5% 1/6W	R705	1-247-819-00	CARBON	330 5% 1/6W
R410	1-247-831-00	CARBON	1K 5% 1/6W	R706	1-247-813-00	CARBON	180 5% 1/6W
R411	1-247-847-00	CARBON	4.7K 5% 1/6W	R707	1-247-837-00	CARBON	1.8K 5% 1/6W
R412	1-247-828-00	CARBON	750 5% 1/6W	R708	1-249-419-11	CARBON	1.5K 5% 1/6W
R413	1-247-812-00	CARBON	160 5% 1/6W	R709	1-247-841-00	CARBON	2.7K 5% 1/6W
R414	1-247-847-00	CARBON	4.7K 5% 1/6W	R710	1-247-895-00	CARBON	470K 5% 1/6W
R415	1-247-831-00	CARBON	1K 5% 1/6W	R711	1-247-863-00	CARBON	22K 5% 1/6W
R416	1-247-846-00	CARBON	4.3K 5% 1/6W	R712	1-247-901-00	CARBON	820K 5% 1/6W
R417	1-247-797-00	CARBON	39 5% 1/6W	R713	1-247-831-00	CARBON	1K 5% 1/6W
R501	1-247-867-00	CARBON	33K 5% 1/6W	R714	1-247-813-00	CARBON	180 5% 1/6W
R502	1-247-847-00	CARBON	4.7K 5% 1/6W	R715	1-247-807-00	CARBON	100 5% 1/6W

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark
R716	1-246-463-00	CARBON 390 5% 1/4W	
R717	1-247-797-00	CARBON 39 5% 1/6W	
R720	1-247-805-00	CARBON 82 5% 1/6W	
R721	1-247-831-00	CARBON 1K 5% 1/6W	
R723	1-247-831-00	CARBON 1K 5% 1/6W	
R724	1-247-847-00	CARBON 4.7K 5% 1/6W	
R725	1-247-869-00	CARBON 39K 5% 1/6W	
R727	1-247-817-00	CARBON 270 5% 1/6W	
R728	1-247-821-00	CARBON 390 5% 1/6W	
R729	1-247-849-00	CARBON 5.6K 5% 1/6W	
R730	1-247-853-00	CARBON 8.2K 5% 1/6W	
R731	1-247-873-00	CARBON 56K 5% 1/6W	
R732	1-247-867-00	CARBON 33K 5% 1/6W	
R733	1-247-831-00	CARBON 1K 5% 1/6W	
R734	1-249-429-11	CARBON 10K 5% 1/6W	
R735	1-247-901-00	CARBON 820K 5% 1/6W	
R736	1-247-889-00	CARBON 270K 5% 1/6W	
R737	1-247-895-00	CARBON 470K 5% 1/6W	
R738	1-247-867-00	CARBON 33K 5% 1/6W	
R740	1-247-857-00	CARBON 12K 5% 1/6W	
R741	1-247-857-00	CARBON 12K 5% 1/6W	
R742	1-247-242-00	CARBON 1.2K 5% 1/2W	
R743	1-247-863-00	CARBON 22K 5% 1/6W	
R744	1-247-831-00	CARBON 1K 5% 1/6W	
R750	1-247-845-00	CARBON 3.9K 5% 1/6W	
R751	1-247-903-00	CARBON 1M 5% 1/6W	
R752	1-247-879-00	CARBON 100K 5% 1/6W	
R753	1-249-429-11	CARBON 10K 5% 1/6W	

VARIABLE RESISTOR

RV002	1-228-995-00	RES, ADJ, CARBON 22K
RV003	1-228-990-00	RES, ADJ, CARBON 1K
RV004	1-228-996-00	RES, ADJ, CARBON 47K
RV005	1-228-990-00	RES, ADJ, CARBON 1K
RV006	1-228-993-00	RES, ADJ, METAL GLAZE 4.7K
RV007	1-228-990-00	RES, ADJ, CARBON 1K
RV008	1-228-989-00	RES, ADJ, CARBON 470
RV009	1-228-989-00	RES, ADJ, METAL GLAZE 470
RV010	1-228-996-00	RES, ADJ, CARBON 47K
RV012	1-228-996-00	RES, ADJ, CARBON 47K
RV013	1-228-994-00	RES, ADJ, CARBON 10K
RV014	1-228-995-00	RES, ADJ, CARBON 22K
RV015	1-228-991-00	RES, ADJ, CARBON 2.2K
RV016	1-228-996-00	RES, ADJ, CARBON 47K
RV017	1-228-991-00	RES, ADJ, CARBON 2.2K
RV018	1-228-994-00	RES, ADJ, CARBON 10K
RV019	1-228-996-00	RES, ADJ, CARBON 47K
RV020	1-228-991-00	RES, ADJ, CARBON 2.2K
RV021	1-228-991-00	RES, ADJ, CARBON 2.2K
RV022	1-228-991-00	RES, ADJ, CARBON 2.2K
RV301	1-228-989-00	RES, ADJ, METAL GLAZE 470
RV401	1-228-994-00	RES, ADJ, METAL GLAZE 10K
RV501	1-228-989-00	RES, ADJ, CARBON 470

Ref.No	Part No.	Description	Remark
RV601	1-228-989-00	RES, ADJ, METAL GLAZE 470	
RV701	1-228-991-00	RES, ADJ, CARBON 2.2K	

FILTER

SF701	1-404-433-00	SAWF
-------	--------------	------

SWITCH

SW001	1-553-725-21	SWITCH, SLIDE
-------	--------------	---------------

TRANSFORMER

T001	1-426-093-00	COIL, REC C BPT
T701	1-404-428-00	VIFT
T702	1-404-427-00	VIFT
T703	1-404-427-00	VIFT

TUNER

TU701A	1-463-884-11	TUNER, ET. (BT-881A)
--------	--------------	----------------------

CRYSTAL

X001	1-527-345-00	CRYSTAL, OSC
X002	1-567-491-11	OSCILLATOR, CERAMIC

*A-6715-291-A SA-13 BOARD, COMPLETE

7-685-646-71 SCREW +BVTP 3X8 TYPE2 1T-3
7-685-646-81 SCREW +BVTP 3X8 TYPE2

CAPACITOR

C001	1-123-381-00	ELECT	2.2MF	20%	50V
C002	1-161-057-00	CERAMIC	0.033MF	10%	25V
C003	1-123-330-00	ELECT	22MF	20%	16V
C004	1-161-055-00	CERAMIC	0.022MF	10%	25V
C005	1-161-059-00	CERAMIC	0.047MF	10%	25V
C006	1-161-059-00	CERAMIC	0.047MF	10%	25V
C007	1-129-794-00	FILM	0.0033MF	5%	100V
C008	1-129-794-00	FILM	0.0033MF	5%	100V
C009	1-161-025-00	CERAMIC	0.1MF	10%	25V
C010	1-123-318-00	ELECT	33MF	20%	10V
C011	1-102-963-00	CERAMIC	33PF	5%	50V
C012	1-102-963-00	CERAMIC	33PF	5%	50V
C017	1-101-005-00	CERAMIC	0.022MF		50V
C304	1-101-005-00	CERAMIC	0.022MF		50V
C305	1-161-057-00	CERAMIC	0.033MF	10%	25V
C306	1-130-020-00	FILM	0.0015MF	5%	50V
C307	1-123-308-00	ELECT	220MF	20%	10V
C308	1-123-330-00	ELECT	22MF	20%	16V
C309	1-101-001-00	CERAMIC	0.001MF		50V
C310	1-123-332-00	ELECT	47MF	20%	16V
C311	1-130-479-00	MYLAR	0.0047MF	5%	50V
C312	1-123-332-00	ELECT	47MF	20%	16V

The components identified by shading and mark **A** are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

SA-13

Ref.No	Part No.	Description		Remark	Ref.No	Part No.	Description		Remark		
C313	1-161-057-00	CERAMIC	0.033MF	10%	25V	C370	1-161-043-00	CERAMIC	0.0022MF	10%	25V
C314	1-124-445-00	ELECT	100MF	20%	16V	C701	1-123-380-00	ELECT	1MF	20%	50V
C315	1-124-445-00	ELECT	100MF	20%	16V	C702	1-130-485-00	MYLAR	0.015MF	5%	50V
C316	1-161-057-00	CERAMIC	0.033MF	10%	25V	C703	1-123-356-00	ELECT	10MF	20%	16V
C317	1-123-381-00	ELECT	2.2MF	20%	50V	C704	1-161-043-00	CERAMIC	0.0022MF	10%	25V
C318	1-123-381-00	ELECT	2.2MF	20%	50V	C705	1-123-380-00	ELECT	1MF	20%	50V
C319	1-123-381-00	ELECT	2.2MF	20%	50V	C706	1-123-318-00	ELECT	33MF	20%	16V
C320	1-123-356-00	ELECT	10MF	20%	16V	C707	1-123-380-00	ELECT	1MF	20%	50V
C321	1-101-001-00	CERAMIC	0.001MF		50V	C709	1-130-485-00	MYLAR	0.015MF	5%	50V
C322	1-102-122-00	CERAMIC	0.0027MF	10%	50V	C710	1-123-369-00	ELECT	4.7MF	20%	25V
C323	1-123-356-00	ELECT	10MF	20%	16V	C711	1-123-607-00	ELECT	0.1MF	20%	50V
C324	1-130-491-00	MYLAR	0.047MF	5%	50V	C712	1-123-380-00	ELECT	1MF	20%	50V
C325	1-130-491-00	MYLAR	0.047MF	5%	50V	C714	1-102-111-00	CERAMIC	270PF	10%	50V
C326	1-130-491-00	MYLAR	0.047MF	5%	50V	C716	1-123-356-00	ELECT	10MF	20%	16V
C327	1-130-491-00	MYLAR	0.047MF	5%	50V	C717	1-123-306-00	ELECT	47MF	20%	6.3V
C328	1-130-491-00	MYLAR	0.047MF	5%	50V	C718	1-123-356-00	ELECT	10MF	20%	16V
C329	1-130-489-00	MYLAR	0.033MF	5%	50V	C719	1-123-380-00	ELECT	1MF	20%	50V
C330	1-130-489-00	MYLAR	0.033MF	5%	50V	C720	1-123-369-00	ELECT	4.7MF	20%	25V
C331	1-161-057-00	CERAMIC	0.033MF	10%	25V	C722	1-161-013-00	CERAMIC	0.01MF	10%	25V
C332	1-161-013-00	CERAMIC	0.01MF	10%	25V	C723	1-161-055-00	CERAMIC	0.022MF	10%	25V
C333	1-136-141-00	FILM	0.001MF	5%	50V	C724	1-107-171-00	MICA	120PF	10%	500V
C334	1-130-467-00	MYLAR	470PF	5%	50V	C725	1-136-215-00	FILM	0.0068MF	10%	400V
C335	1-130-467-00	MYLAR	470PF	5%	50V	C726	1-123-356-00	ELECT	10MF	20%	16V
C336	1-130-467-00	MYLAR	470PF	5%	50V	C727	1-124-445-00	ELECT	100MF	20%	16V
C337	1-123-608-00	ELECT	0.22MF	20%	50V						
C338	1-130-495-00	MYLAR	0.1MF	5%	50V						
C339	1-101-006-00	CERAMIC	0.047MF		50V						
C340	1-161-059-00	CERAMIC	0.047MF	10%	25V						
C341	1-124-445-00	ELECT	100MF	20%	16V						
C342	1-161-013-00	CERAMIC	0.01MF	10%	25V						
C343	1-123-343-00	ELECT	33MF	20%	25V						
C345	1-123-343-00	ELECT	33MF	20%	25V						
C346	1-101-006-00	CERAMIC	0.047MF		50V						
C347	1-127-477-00	ELECT(SOLID)	0.47MF	5%	25V						
C348	1-130-489-00	MYLAR	0.033MF	5%	50V						
C349	1-130-483-00	MYLAR	0.01MF	5%	50V						
C350	1-123-369-00	ELECT	4.7MF	20%	25V						
C351	1-123-369-00	ELECT	4.7MF	20%	25V						
C352	1-161-057-00	CERAMIC	0.033MF	10%	25V						
C353	1-124-443-00	ELECT	100MF	20%	10V						
C354	1-130-483-00	MYLAR	0.01MF	5%	50V						
C355	1-130-483-00	MYLAR	0.01MF	5%	50V						
C356	1-130-483-00	MYLAR	0.01MF	5%	50V						
C357	1-123-369-00	ELECT	4.7MF	20%	25V						
C358	1-123-369-00	ELECT	4.7MF	20%	25V						
C359	1-123-330-00	ELECT	22MF	20%	16V						
C361	1-123-380-00	ELECT	1MF	20%	50V						
C362	1-123-380-00	ELECT	1MF	20%	50V						
C363	1-123-356-00	ELECT	10MF	20%	16V						
C364	1-123-356-00	ELECT	10MF	20%	16V						
C367	1-161-057-00	CERAMIC	0.033MF	10%	25V						
C368	1-161-057-00	CERAMIC	0.033MF	10%	25V						
C369	1-123-356-00	ELECT	10MF	20%	16V						
C705	1-123-380-00	ELECT	1MF	20%	50V						
C706	1-123-318-00	ELECT	33MF	20%	16V						
C707	1-123-380-00	ELECT	1MF	20%	50V						
C709	1-130-485-00	MYLAR	0.015MF	5%	50V						
C710	1-123-369-00	ELECT	4.7MF	20%	25V						
C711	1-123-607-00	ELECT	0.1MF	20%	50V						
C712	1-123-380-00	ELECT	1MF	20%	50V						
C714	1-102-111-00	CERAMIC	270PF	10%	50V						
C716	1-123-356-00	ELECT	10MF	20%	16V						
C717	1-123-306-00	ELECT	47MF	20%	6.3V						
C718	1-123-356-00	ELECT	10MF	20%	16V						
C719	1-123-380-00	ELECT	1MF	20%	50V						
C720	1-123-369-00	ELECT	4.7MF	20%	25V						
C722	1-161-013-00	CERAMIC	0.01MF	10%	25V						
C723	1-161-055-00	CERAMIC	0.022MF	10%	25V						
C724	1-107-171-00	MICA	120PF	10%	500V						
C725	1-136-215-00	FILM	0.0068MF	10%	400V						
C726	1-123-356-00	ELECT	10MF	20%	16V						
C727	1-124-445-00	ELECT	100MF	20%	16V						
CONNECTOR											
CN001	*1-560-897-00	PIN, CONNECTOR	9P			CN006	*1-560-891-00	PIN, CONNECTOR	3P		
CN002	*1-560-891-00	PIN, CONNECTOR	3P			CN007	*1-560-891-00	PIN, CONNECTOR	3P		
CN003	*1-560-891-00	PIN, CONNECTOR	3P			CN008	*1-560-891-00	PIN, CONNECTOR	3P		
CN004	*1-560-891-00	PIN, CONNECTOR	3P			CN009	*1-560-891-00	PIN, CONNECTOR	3P		
CN005	*1-560-891-00	PIN, CONNECTOR	3P			CN010	*1-560-891-00	PIN, CONNECTOR	3P		
CN011	*1-560-898-00	PIN, CONNECTOR	10P			CN012	*1-560-900-00	PIN, CONNECTOR	12P		
CN301	*1-560-896-00	PIN, CONNECTOR	8P			CN302	*1-560-891-00	PIN, CONNECTOR	3P		
CN302	*1-560-891-00	PIN, CONNECTOR	3P			CN303	*1-560-891-00	PIN, CONNECTOR	3P		
CN303	*1-560-891-00	PIN, CONNECTOR	3P			CN304	*1-560-893-00	PIN, CONNECTOR	5P		
CN304	*1-560-893-00	PIN, CONNECTOR	5P			CN305	*1-560-466-00	PIN, CONNECTOR	3P		
CN305	*1-560-466-00	PIN, CONNECTOR	3P			CN306	*1-560-897-00	PIN, CONNECTOR	9P		
CN701	*1-560-893-00	PIN, CONNECTOR	5P			CN702	*1-560-891-00	PIN, CONNECTOR	3P		
CN702	*1-560-891-00	PIN, CONNECTOR	3P								
DIODE											
D001	8-719-000-06	DIODE	MC921			D002	8-719-000-06	DIODE	MC921		
D002	8-719-000-06	DIODE	MC921			D003	8-719-000-04	DIODE	MC911		
D003	8-719-000-04	DIODE	MC911			D004	8-719-911-19	DIODE	1SS119		
D004	8-719-911-19	DIODE	1SS119			D008	8-719-000-06	DIODE	MC921		
D008	8-719-000-06	DIODE	MC921								

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
D301	8-719-101-50	DIODE RD5.1EL2		Q305	8-729-900-65	TRANSISTOR DTA144ES	
D302	8-719-911-19	DIODE 1SS119		Q306	8-729-245-83	TRANSISTOR 2SC2458	
D303	8-719-000-04	DIODE MC911		Q307	8-729-900-89	TRANSISTOR DTC144ES	
D304	8-719-000-06	DIODE MC921		Q308	8-729-245-83	TRANSISTOR 2SC2458	
D305	8-719-911-19	DIODE 1SS119		Q309	8-729-900-65	TRANSISTOR DTA144ES	
D306	8-719-200-02	DIODE 10E-1		Q310	8-729-245-83	TRANSISTOR 2SC2458	
D307	8-719-100-41	DIODE RD6.8EB2		Q311	8-729-245-83	TRANSISTOR 2SC2458	
D308	8-719-911-19	DIODE 1SS119		Q312	8-729-245-83	TRANSISTOR 2SC2458	
D309	8-719-911-19	DIODE 1SS119		Q313	8-729-831-33	TRANSISTOR 2SD313HP	
D310	8-719-911-19	DIODE 1SS119		Q314	8-729-245-83	TRANSISTOR 2SC2458	
D702	8-719-101-50	DIODE RD5.1EL2		Q315	8-729-204-83	TRANSISTOR 2SA1048-GR	
		<u>IC</u>		Q316	8-729-245-83	TRANSISTOR 2SC2458	
IC001	8-759-600-24	IC M54543L		Q317	8-729-900-89	TRANSISTOR DTC144ES	
IC002	8-759-900-72	IC LA7205		Q318	8-729-245-83	TRANSISTOR 2SC2458	
IC003	8-759-920-26	IC M888421-192M		Q319	8-729-247-33	TRANSISTOR 2SA473	
IC301	8-759-135-80	IC UPC358C		Q320	8-729-245-83	TRANSISTOR 2SC2458	
IC302	8-759-618-48	IC M51848L		Q321	8-729-245-83	TRANSISTOR 2SC2458	
IC303	8-759-135-80	IC UPC358C		Q322	8-729-831-33	TRANSISTOR 2SD313HP	
IC304	8-752-012-40	IC CX20124		Q323	8-729-204-83	TRANSISTOR 2SA1048-GR	
IC305	8-759-240-66	IC TC4066BP		Q324	8-729-900-89	TRANSISTOR DTC144ES	
IC306	8-759-135-80	IC UPC358C		Q325	8-729-245-83	TRANSISTOR 2SC2458	
IC701	8-759-911-23	IC BA5115		Q326	8-729-245-83	TRANSISTOR 2SC2458	
IC702	8-759-101-73	IC UPC1513HA		Q327	8-729-204-83	TRANSISTOR 2SA1048-GR	
		<u>COIL</u>		Q328	8-729-245-83	TRANSISTOR 2SC2458	
L001	1-408-418-00	MICRO INDUCTOR 56UH		Q329	8-729-245-83	TRANSISTOR 2SC2458	
L301	1-410-119-11	MICRO INDUCTOR 1MMH		Q330	8-729-900-89	TRANSISTOR DTC144ES	
L701	1-407-963-00	MICRO INDUCTOR 15MMH		Q331	8-729-831-33	TRANSISTOR 2SD313HP	
L702	1-408-221-00	MICRO INDUCTOR 22MMH		Q702	8-729-612-77	TRANSISTOR 2SA1027R	
L703	1-407-174-XX	MICRO INDUCTOR 270UH		Q703	8-729-967-32	TRANSISTOR 2SC2673-R	
		<u>TRANSISTOR</u>		Q704	8-729-245-83	TRANSISTOR 2SC2458	
Q001	8-729-900-89	TRANSISTOR DTC144ES		Q705	8-729-900-89	TRANSISTOR DTC144ES	
Q002	8-729-900-89	TRANSISTOR DTC144ES				<u>RESISTOR</u>	
Q003	8-729-900-89	TRANSISTOR DTC144ES		R001	1-249-429-11	CARBON 10K 5% 1/6W	
Q004	8-729-900-89	TRANSISTOR DTC144ES		R002	1-247-865-00	CARBON 10K 5% 1/6W	
Q005	8-729-116-42	TRANSISTOR 2SD1164-L		R003	1-249-429-11	CARBON 10K 5% 1/6W	
Q006	8-729-177-43	TRANSISTOR 2SD774		R004	1-249-429-11	CARBON 10K 5% 1/6W	
Q007	8-729-900-89	TRANSISTOR DTC144ES		R005	1-249-429-11	CARBON 10K 5% 1/6W	
Q008	8-729-900-89	TRANSISTOR DTC144ES		R006	1-249-429-11	CARBON 10K 5% 1/6W	
Q009	8-729-116-42	TRANSISTOR 2SD1164-L		R007	1-247-873-00	CARBON 56K 5% 1/6W	
Q010	8-729-177-43	TRANSISTOR 2SD774		R008	1-247-861-00	CARBON 18K 5% 1/6W	
Q011	8-729-177-43	TRANSISTOR 2SD774		R009	1-247-861-00	CARBON 18K 5% 1/6W	
Q012	8-729-900-65	TRANSISTOR DTA144ES		R012	1-247-833-00	CARBON 1.2K 5% 1/6W	
Q013	8-729-900-65	TRANSISTOR DTA144ES		R014	1-247-863-00	CARBON 22K 5% 1/6W	
Q025	8-729-900-89	TRANSISTOR DTC144ES		R015	1-247-831-00	CARBON 1K 5% 1/6W	
Q026	8-729-900-89	TRANSISTOR DTC144ES		R017	1-247-831-00	CARBON 1K 5% 1/6W	
Q028	8-729-245-83	TRANSISTOR 2SC2458		R018	1-247-831-00	CARBON 1K 5% 1/6W	
Q301	8-729-177-43	TRANSISTOR 2SD774		R019	1-247-831-00	CARBON 1K 5% 1/6W	
Q302	8-729-245-83	TRANSISTOR 2SC2458		R020	1-247-831-00	CARBON 1K 5% 1/6W	
Q303	8-729-900-89	TRANSISTOR DTC144ES		R021	1-247-827-00	CARBON 680 5% 1/6W	
Q304	8-729-245-83	TRANSISTOR 2SC2458		R023	1-247-831-00	CARBON 1K 5% 1/6W	
				R024	1-247-831-00	CARBON 1K 5% 1/6W	
				R025	1-247-831-00	CARBON 1K 5% 1/6W	

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description			Remark	Ref.No	Part No.	Description			Remark	
R026	1-247-831-00	CARBON	1K	5%	1/6W	R349	1-249-429-11	CARBON	10K	5%	1/6W	
R027	1-247-831-00	CARBON	1K	5%	1/6W	R350	1-215-467-00	METAL	82K	1%	1/6W	
R028	1-247-831-00	CARBON	1K	5%	1/6W	R351	1-249-437-11	CARBON	47K	5%	1/6W	
R048	1-247-841-00	CARBON	2.7K	5%	1/6W	R352	1-247-863-00	CARBON	22K	5%	1/6W	
R050	1-247-841-00	CARBON	2.7K	5%	1/6W	R353	1-247-831-00	CARBON	1K	5%	1/6W	
R051	1-247-817-00	CARBON	270	5%	1/6W	R354	1-249-429-11	CARBON	10K	5%	1/6W	
R052	1-247-813-00	CARBON	180	5%	1/6W	R355	1-247-869-00	CARBON	39K	5%	1/6W	
R053	1-247-847-00	CARBON	4.7K	5%	1/6W	R356	1-249-429-11	CARBON	10K	5%	1/6W	
R301	△.1-212-849-51	FUSIBLE	4.7	5%	1/4W	F	R357	1-249-429-11	CARBON	10K	5%	1/6W
R302	1-247-831-00	CARBON	1K	5%	1/6W	R358	1-247-853-00	CARBON	8.2K	5%	1/6W	
R303	1-247-903-00	CARBON	1M	5%	1/6W	R359	1-249-429-11	CARBON	10K	5%	1/6W	
R304	1-249-437-11	CARBON	47K	5%	1/6W	R360	1-247-879-00	CARBON	100K	5%	1/6W	
R305	1-247-895-00	CARBON	470K	5%	1/6W	R361	1-247-863-00	CARBON	22K	5%	1/6W	
R306	1-247-889-00	CARBON	270K	5%	1/6W	R362	1-247-863-00	CARBON	22K	5%	1/6W	
R307	△.1-212-849-51	FUSIBLE	4.7	5%	1/4W	F	R363	1-247-859-00	CARBON	15K	5%	1/6W
R308	1-247-825-00	CARBON	560	5%	1/6W	R364	1-247-869-00	CARBON	39K	5%	1/6W	
R309	1-247-847-00	CARBON	4.7K	5%	1/6W	R365	1-249-421-11	CARBON	2.2K	5%	1/6W	
R310	1-247-847-00	CARBON	4.7K	5%	1/6W	R366	1-247-849-00	CARBON	5.6K	5%	1/6W	
R311	1-247-815-00	CARBON	220	5%	1/6W	R367	1-247-831-00	CARBON	1K	5%	1/6W	
R312	1-247-849-00	CARBON	5.6K	5%	1/6W	R368	1-249-429-11	CARBON	10K	5%	1/6W	
R313	1-247-879-00	CARBON	100K	5%	1/6W	R369	△.1-212-366-61	METAL OXIDE	3.3	5%	1W	F
R316	1-247-863-00	CARBON	22K	5%	1/6W	R370	1-247-831-00	CARBON	1K	5%	1/6W	
R317	1-247-831-00	CARBON	1K	5%	1/6W	R371	1-249-437-11	CARBON	47K	5%	1/6W	
R318	1-247-859-00	CARBON	15K	5%	1/6W	R372	1-247-863-00	CARBON	22K	5%	1/6W	
R319	1-247-829-00	CARBON	820	5%	1/6W	R373	1-249-421-11	CARBON	2.2K	5%	1/6W	
R320	1-247-903-00	CARBON	1M	5%	1/6W	R374	1-247-867-00	CARBON	33K	5%	1/6W	
R321	1-247-879-00	CARBON	100K	5%	1/6W	R375	△.1-249-396-51	CARBON	18	5%	1/6W	F
R322	1-247-831-00	CARBON	1K	5%	1/6W	R376	△.1-212-849-51	FUSIBLE	4.7	5%	1/4W	F
R323	1-247-829-00	CARBON	820	5%	1/6W	R377	1-247-831-00	CARBON	1K	5%	1/6W	
R324	1-249-429-11	CARBON	10K	5%	1/6W	R378	1-247-823-00	CARBON	470	5%	1/6W	
R326	1-249-419-11	CARBON	1.5K	5%	1/6W	R379	1-247-863-00	CARBON	22K	5%	1/6W	
R327	1-247-881-00	CARBON	120K	5%	1/6W	R384	1-247-903-00	CARBON	1M	5%	1/6W	
R328	1-247-863-00	CARBON	22K	5%	1/6W	R385	1-247-867-00	CARBON	33K	5%	1/6W	
R329	1-247-833-00	CARBON	1.2K	5%	1/6W	R386	1-247-831-00	CARBON	1K	5%	1/6W	
R330	1-247-843-00	CARBON	3.3K	5%	1/6W	R387	1-247-867-00	CARBON	33K	5%	1/6W	
R331	1-247-885-00	CARBON	180K	5%	1/6W	R388	1-249-421-11	CARBON	2.2K	5%	1/6W	
R332	1-247-859-00	CARBON	15K	5%	1/6W	R389	1-249-421-11	CARBON	2.2K	5%	1/6W	
R333	1-247-903-00	CARBON	1M	5%	1/6W	R390	1-247-867-00	CARBON	33K	5%	1/6W	
R334	1-249-429-11	CARBON	10K	5%	1/6W	R391	1-247-877-00	CARBON	82K	5%	1/6W	
R335	1-247-875-00	CARBON	68K	5%	1/6W	R392	1-247-887-00	CARBON	220K	5%	1/6W	
R336	1-247-867-00	CARBON	33K	5%	1/6W	R401	1-247-881-00	CARBON	120K	5%	1/6W	
R337	1-247-881-00	CARBON	120K	5%	1/6W	R402	1-249-429-11	CARBON	10K	5%	1/6W	
R338	1-247-879-00	CARBON	100K	5%	1/6W	R403	1-249-421-11	CARBON	2.2K	5%	1/6W	
R339	1-247-879-00	CARBON	100K	5%	1/6W	R404	1-247-837-00	CARBON	1.8K	5%	1/6W	
R340	1-247-873-00	CARBON	56K	5%	1/6W	R405	1-249-429-11	CARBON	10K	5%	1/6W	
R341	1-247-857-00	CARBON	12K	5%	1/6W	R406	1-247-851-00	CARBON	6.8K	5%	1/6W	
R342	1-249-429-11	CARBON	10K	5%	1/6W	R407	1-249-437-11	CARBON	47K	5%	1/6W	
R343	1-247-841-00	CARBON	2.7K	5%	1/6W	R408	1-247-881-00	CARBON	120K	5%	1/6W	
R344	1-249-429-11	CARBON	10K	5%	1/6W	R409	1-247-873-00	CARBON	56K	5%	1/6W	
R345	1-215-473-00	METAL	150K	1%	1/6W	R410	1-249-434-11	CARBON	27K	5%	1/6W	
R346	1-247-863-00	CARBON	22K	5%	1/6W	R411	1-247-879-00	CARBON	100K	5%	1/6W	
R347	1-247-863-00	CARBON	22K	5%	1/6W	R412	1-247-859-00	CARBON	15K	5%	1/6W	
R348	1-247-859-00	CARBON	15K	5%	1/6W	R413	1-249-437-11	CARBON	47K	5%	1/6W	

When indicating parts by reference number, please include the board name.

The components identified by shading and mark △ are critical for safety. Replace only with part number specified.

Ref.No	Part No.	Description	Remark
D106	8-719-911-19	DIODE 1SS119	
D107	8-719-911-19	DIODE 1SS119	
D108	8-719-911-19	DIODE 1SS119	
D109	8-719-911-19	DIODE 1SS119	
D110	8-719-911-19	DIODE 1SS119	
D111	8-719-911-19	DIODE 1SS119	
D112	8-719-911-19	DIODE 1SS119	
D113	8-719-911-19	DIODE 1SS119	
D114	8-719-911-19	DIODE 1SS119	
D115	8-719-911-19	DIODE 1SS119	
D116	8-719-911-19	DIODE 1SS119	
D117	8-719-911-19	DIODE 1SS119	
D118	8-719-911-19	DIODE 1SS119	
D119	8-719-911-19	DIODE 1SS119	
D120	8-719-911-19	DIODE 1SS119	
D501	8-719-911-19	DIODE 1SS119	
D502	8-719-911-19	DIODE 1SS119	
D503	8-719-812-31	DIODE TLR123	
D504	8-719-100-54	DIODE RD9.1EB2	
D505	8-719-908-54	DIODE SLR-54VC3	
D506	8-719-911-19	DIODE 1SS119	
D507	8-719-911-19	DIODE 1SS119	
D508	8-719-911-19	DIODE 1SS119	
D510	8-719-908-54	DIODE SLR-54VC3	
D511	8-719-911-19	DIODE 1SS119	
<u>INDICATOR TUBE</u>			
FL501	1-519-354-11	INDICATOR TUBE, FLUORESCENT	
<u>IC</u>			
IC101	8-759-600-44	IC M54836AP	
IC501	8-759-104-11	IC UPD7519G-179	
IC502	8-741-131-70	IC 8X-1317	
<u>PRESET UNIT</u>			
PU101	1-230-904-11	PRESET UNIT	
<u>TRANSISTOR</u>			
Q101	8-729-245-83	TRANSISTOR 2SC2458	
Q102	8-729-900-89	TRANSISTOR DTC144ES	
Q103	8-729-900-89	TRANSISTOR DTC144ES	
Q104	8-729-900-89	TRANSISTOR DTC144ES	
Q105	8-729-900-65	TRANSISTOR DTA144ES	
Q501	8-729-900-65	TRANSISTOR DTA144ES	
Q502	8-729-900-65	TRANSISTOR DTA144ES	
<u>RESISTOR</u>			
R004	1-247-875-00	CARBON	68K 5% 1/6W
R101	1-247-895-00	CARBON	470K 5% 1/6W
R102	1-249-434-11	CARBON	27K 5% 1/6W
R103	1-249-437-11	CARBON	47K 5% 1/6W
R104	1-247-863-00	CARBON	22K 5% 1/6W

Ref.No	Part No.	Description	Remark
R105	1-247-863-00	CARBON	22K 5% 1/6W
R106	1-247-863-00	CARBON	22K 5% 1/6W
R107	1-247-863-00	CARBON	22K 5% 1/6W
R108	1-249-429-11	CARBON	10K 5% 1/6W
R109	1-249-421-11	CARBON	2.2K 5% 1/6W
R110	1-247-881-00	CARBON	120K 5% 1/6W
R111	1-247-863-00	CARBON	22K 5% 1/6W
R112	1-247-863-00	CARBON	22K 5% 1/6W
R113	1-247-863-00	CARBON	22K 5% 1/6W
R114	1-247-863-00	CARBON	22K 5% 1/6W
R115	1-247-863-00	CARBON	22K 5% 1/6W
R116	1-247-831-00	CARBON	1K 5% 1/6W
R117	1-247-863-00	CARBON	22K 5% 1/6W
R501	1-247-847-00	CARBON	4.7K 5% 1/6W
R502	1-249-437-11	CARBON	47K 5% 1/6W
R503	1-247-879-00	CARBON	100K 5% 1/6W
R509	1-247-879-00	CARBON	100K 5% 1/6W
R510	1-247-879-00	CARBON	100K 5% 1/6W
R511	1-247-863-00	CARBON	22K 5% 1/6W
R512	1-247-867-00	CARBON	33K 5% 1/6W
R513	1-247-879-00	CARBON	100K 5% 1/6W
R514	1-247-879-00	CARBON	100K 5% 1/6W
R515	1-247-879-00	CARBON	100K 5% 1/6W
R516	1-247-879-00	CARBON	100K 5% 1/6W
R517	1-247-843-00	CARBON	3.3K 5% 1/6W
R518	1-247-831-00	CARBON	1K 5% 1/6W
R519	1-247-821-00	CARBON	390 5% 1/6W
R521	1-247-821-00	CARBON	390 5% 1/6W
<u>SWITCH</u>			
S101	1-553-856-00	SWITCH, KEY BOARD	
S102	1-553-856-00	SWITCH, KEY BOARD	
S103	1-570-338-11	SWITCH, SLIDE	
S501	1-553-856-00	SWITCH, KEY BOARD	
S503	1-553-856-00	SWITCH, KEY BOARD	
S504	1-553-856-00	SWITCH, KEY BOARD	
S505	1-553-856-00	SWITCH, KEY BOARD	
S506	1-553-856-00	SWITCH, KEY BOARD	
S507	1-553-856-00	SWITCH, KEY BOARD	
S508	1-553-856-00	SWITCH, KEY BOARD	
S509	1-553-856-00	SWITCH, KEY BOARD	
S510	1-553-856-00	SWITCH, KEY BOARD	
S511	1-553-856-00	SWITCH, KEY BOARD	
S512	1-553-856-00	SWITCH, KEY BOARD	
S513	1-553-856-00	SWITCH, KEY BOARD	
<u>CRYSTAL</u>			
X501	1-527-647-00	OSCILLATOR, CRYSTAL	

When indicating parts by reference number, please include the board name.

RD-21

LM-16

PS-92

PS-93

Ref.No	Part No.	Description	Remark
	*1-613-233-12	RD-21 BOARD *****	
<u>DIODE</u>			
PC101	8-719-913-41	DIODE SPI201-22	
<u>RESISTOR</u>			
R101	1-247-815-00	CARBON 220 5% 1/6W	
R102	1-247-867-00	CARBON 33K 5% 1/6W	
R103	1-247-859-00	CARBON 15K 5% 1/6W	

	*1-614-597-11	LM-16 BOARD *****	

	*A-6729-312-A	PS-92 BOARD, COMPLETE *****	
	1-247-216-00	CARBON 100 5% 1/2W	
	1-533-189-11	HOLDER, FUSE	
<u>CAPACITOR</u>			
C001	1-130-710-11	FILM 0.1MF 20% 250V	
C002	1-124-362-00	ELECT 4700MF 20% 42V	
C003	1-161-051-00	CERAMIC 0.01MF 10% 50V	
C004	1-161-051-00	CERAMIC 0.01MF 10% 50V	
C005	1-123-375-00	ELECT 220MF 20% 63V	
C007	1-123-375-00	ELECT 220MF 20% 63V	
<u>CONNECTOR</u>			
CN002	*1-564-028-00	PIN, CONNECTOR 3P	
<u>DIODE</u>			
D002	8-719-143-07	DIODE RD4.3E-B	
D003	8-719-143-07	DIODE RD4.3E-B	
D004	8-719-200-02	DIODE 10E-2	
D005	8-719-101-30	DIODE R039EC2	
D006	8-719-200-02	DIODE 10E-2	
D007	8-719-100-92	DIODE RD24EB4	
D010	8-719-500-29	DIODE S3V10S	
D011	8-719-500-29	DIODE S3V10S	
D012	8-719-500-29	DIODE S3V10S	
D013	8-719-500-29	DIODE S3V10S	
<u>FUSE</u>			
F001	1-532-285-11	FUSE, TIME-LAG, T1.25A 250V	
F002	1-532-350-11	FUSE, TIME-LAG, T4A 250V	
<u>TRANSISTOR</u>			
Q001	8-729-177-43	TRANSISTOR 2SD774	
Q002	8-729-113-33	TRANSISTOR 2SB733-4	

Ref.No	Part No.	Description	Remark
Q004	8-729-204-83	TRANSISTOR 2SA1048-GR	
Q005	8-729-177-23	TRANSISTOR 2SB772	
Q006	8-729-177-23	TRANSISTOR 2SB772	
Q007	8-729-245-83	TRANSISTOR 2SC2458	
<u>RESISTOR</u>			
R001	1-211-587-00	CARBON 7.5 5% 1/2W	
R002	1-247-173-00	CARBON 56K 5% 1/4W	
R003	1-246-543-00	CARBON 820K 5% 1/4W	
R004	1-247-143-00	CARBON 3.3K 5% 1/4W	
R005	1-247-143-00	CARBON 3.3K 5% 1/4W	
R008	1-247-721-11	CARBON 4.7K 5% 1/4W	
R009	1-247-133-00	CARBON 1.2K 5% 1/4W	
R010	1-247-133-00	CARBON 1.2K 5% 1/4W	
R011	1-247-133-00	CARBON 1.2K 5% 1/4W	
R012	1-247-133-00	CARBON 1.2K 5% 1/4W	
R013	1-247-725-11	CARBON 10K 5% 1/4W	
<u>TRANSFORMER</u>			
T001	1-448-245-11	TRANSFORMER, POWER	

	*1-616-379-12	PS-93 BOARD *****	
<u>CAPACITOR</u>			
C011	1-123-346-00	ELECT 220MF 20% 35V	
C012	1-161-063-11	CERAMIC 0.1MF 10% 50V	
C013	1-123-330-00	ELECT 22MF 20% 16V	
C014	1-123-850-00	ELECT 1000MF 20% 16V	
C015	1-123-323-00	ELECT 470MF 20% 16V	
C016	1-123-333-00	ELECT 100MF 20% 16V	
<u>CONNECTOR</u>			
CN001	*1-564-032-00	PIN, CONNECTOR 7P	
<u>FERRITE BEAD</u>			
FB001	1-543-236-11	BEAD, FERRITE	
<u>IC</u>			
IC001	8-749-972-17	IC STK7217	
<u>COIL</u>			
L001	1-421-701-11	COIL, CHOKE 150UH	
L002	1-408-944-00	COIL, CHOKE 20UH	
L003	1-408-944-00	COIL, CHOKE 20UH	
<u>RESISTOR</u>			
R015	1-247-801-00	CARBON 56 5% 1/6W	

The components identified by shading and mark **Δ** are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

VS-5

Ref.No	Part No.	Description	Remark
	*1-616-380-13	VS-5 BOARD *****	
	*3-695-351-01	PLATE, INDICATION, VOLTAGE SWITCH	
S001	▲.1-553-011-11	SWITCH, POWER VOLTAGE SELECTION	

MISCELLANEOUS *****			
	A-4910-063-A	R STATOR (REEL MOTOR) BOARD, COMPLETE (M903)	
	A-6761-096-A	ACE ASSY	
	X-3679-268-1	MOTOR ASSY, L (LOADING/THREADING) (M904)	
	X-3693-829-1	SENSOR BLOCK ASSY, S (SUPPLY SENSOR) (L901)	
	X-3693-830-1	SENSOR BLOCK ASSY, T (TAKE-UPSENSOR) (L902)	
▲	.1-454-349-61	SOLENOID, PLUNGER (PINCH) (PM901)	
▲	.1-454-371-31	SOLENOID, PLUNGER (BRAKE) (PM902)	
▲	.1-464-481-12	BOOSTER MIXER, RF MODULATOR (RFU-829)	
	1-554-839-11	SWITCH, LEAF (2 GANG) (REC PROOF/CASSETTE DOWN)	
	1-554-840-11	SWITCH, LEAF (THREADING END) (S903)	
	*1-556-934-11	CABLE, PIN	
▲	.1-558-097-12	CORD, POWER	
	8-825-508-10	HEAD, FE (FULL ERASE HEAD)	
	8-838-070-01	MOTOR, DC (BHF-1907B)	
S904	1-554-840-11	SWITCH, LEAF (CASSETTE IN)	
TU701	▲.1-463-584-11	TUNER ET (BT-881A)	

ACCESSORIES AND PACKING MATERIALS *****		
Part No.	Description	Remark
A-6765-920-A	COMMANDER ASSY (RMT-226) (SILVER)	
A-6765-921-A	COMMANDER ASSY (RMT-226) (GRAY)	
A-6767-079-A	COMMANDER ASSY (RMT-226) (BLACK)	
A-6767-414-A	COMMANDER ASSY (RMT-226) (RED)	
1-556-893-00	CORD ASSY, COAXIAL	
1-551-513-00	CORD CONNECTION	
*3-681-287-01	LID, ACCESSORY CASE	
*3-684-259-01	CASE, ACCESSORY	
3-695-308-01	DRIVER, TUNING	
*3-677-503-00	SHEET, PROTECTION	
*3-695-325-01	CUSHION (UPPER)	
*3-695-326-01	CUSHION (LOWER)	
*3-695-343-01	COVER, DUST	
*3-695-349-01	INDIVIDUAL CARTON (SILVER)	
*3-695-349-11	INDIVIDUAL CARTON (GRAY)	
*3-695-349-21	INDIVIDUAL CARTON (BLACK)	
*3-695-349-71	INDIVIDUAL CARTON (RED)	
3-760-755-41	MANUAL, INSTRUCTION	

When indicating parts by reference number, please include the board name.

The components identified by shading and mark ▲ are critical for safety. Replace only with part number specified.

SECTION 7 ADJUSTMENTS

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1. PREPARATION FOR MECHANICAL SECTION CHECK, ADJUSTMENT AND REPLACEMENT			3-8.	Removal of the No. 2 and No. 3 Guides	113
1-1.	Operation of the Unit with the FL Cassette Compartment Removed	100	3-8-1.	Removal of the No. 2 Guide	113
1-1-1.	How to Put the Unit into Threading Completed State when the FL Cassette Compartment is Removed	100	3-8-2.	Removal of the No. 3 Guide	113
1-1-2.	Playback Without Cassette Installed	100	3-9.	Replacement and Adjustment of the S Threading Ring	114
1-1-3.	How to Put in Recording Mode Without Cassette Installed	100	3-9-1.	Preparation to Remove the S Threading Ring Removal of the ACE Assembly, FE Head and Threading Motor	114
1-2.	How to Load, Thread, Unload and Unthread with the Power Off	101	3-9-2.	Removal of Miscellaneous Parts	115
1-2-1.	Manual Loading and Unloading	101	3-9-3.	Removal of the S Threading Ring	116
1-2-2.	Manual Threading and Unthreading	101	3-9-4.	S Threading Ring Mounting and Position Adjustment	117
1-3.	Tools and Fixtures Required for Servicing	102	3-10.	Pinch Snap-Fit Limiter Gap Check and Adjustment	118
2. PERIODIC CHECK AND MAINTENANCE			3-11.	Threading End Switch and T Coil Sensor	119
2-1.	Post-Repair Maintenance	103	3-11-1.	Threading End Switch (TE Switch) Position Check and Adjustment	119
2-1-1.	Cleaning of Rotating Head Disk Assembly	103	3-11-2.	T Coil Sensor Mounting and Operation Check	120
2-1-2.	Cleaning of the Tape Movement System	103	3-12.	Removal and Adjustment of the Reel Block Assembly	121
2-1-3.	Cleaning the Drive System	103	3-12-1.	Removal of the Reel Block Assembly	121
2-2.	Periodic Check Items	104	3-12-2.	Adjustment of the Position of the Tension Regulating Lever	121
3. CHECK, ADJUSTMENT AND REPLACEMENT PROCEDURES			3-13.	Adjustment of the Forward Back Tension	122
	State of Wear of Video Heads Check		3-14.	Adjustment of the Forward Torque	122
3-1.	Replacement of Rotating Head Disk Assembly	106	4. TAPE PATH ADJUSTMENT		
3-1-1.	Removal of the Rotating Head Disk Assembly	106	4-1.	Tracking Adjustment	123
3-1-2.	Mounting of the Rotating Head Disk Assembly	106	4-1-1.	Preparation for Adjustment	124
3-2.	Video Head Dihedral Check and Adjustment	107	4-1-2.	Entrance Side Adjustment	124
3-3.	Replacement and Adjustment of the Drum Assembly	108	4-1-3.	Exit Side Adjustment	126
3-3-1.	Replacement of the Drum Assembly	108	4-2.	Adjustments After Replacement of the ACE Assembly	127
3-3-2.	Adjustment of the Motor Gap when Replacing the Drum Assembly	109	4-2-1.	Exit Side Tracking Adjustment	127
3-4.	Replacement of the Capstan Motor	109	4-2-2.	CTL head (ACE Assembly) position Adjustment	128
3-5.	Removal of the S Coil Sensor	110	4-2-3.	Audio head (ACE Assembly) Azimuth Adjustment	129
3-6.	Removal of the FL Cassette Compartment Assembly	110	4-2-4.	Audio head (ACE Assembly) height Adjustment	129
3-7.	Adjustment of the FL Cassette Compartment	111	4-3.	How to Inspect the Tape Traveling When Adjustment the Tape Path	130
3-7-1.	Adjustment of the Position of the Right Gear of the FL Cassette Compartment Assembly	111	5. ELECTRICAL ALIGNMENT		
3-7-2.	Cassette ON Switch Operating Check and Adjustment	111	5-1.	Power Supply Check (PS-92 Board)	133
3-7-3.	Checking and Adjustment of the Cassette Door Assembly	112	5-2.	System Control Check (SA-13 Board)	133
3-7-4.	Mounting the FL Cassette Compartment Assembly	112	5-3.	Servo System Adjustment	133
			5-4.	PAL Video System Adjustment	135
			5-4-1.	Y Signal System Adjustment	135
			5-4-2.	Chroma Signal System Adjustment	138
			5-4-3.	SECAM Video System Adjustment	141
			5-5.	Audio System Adjustment (SA-13 Board)	143
			5-6.	Tuner System Adjustment (VI-1 Board)	144
			5-7.	Timer System Adjustment (TT-13 Board)	144

1. PREPARATION FOR MECHANICAL SECTION CHECK, ADJUSTMENT, AND REPLACEMENT

Note: Regarding the removal procedures of the cabinet and board, see Section 2.

1-1. OPERATION OF THE UNIT WITH THE FL CASSETTE COMPARTMENT REMOVED

1-1-1. How to Put the Unit into Threading Completed State when the FL Cassette Compartment is Removed

- 1) Connect ordinary screwdriver to short the leaf switch ① (cassette-on switch).

Note:

Be careful that the ordinary screwdriver do not touch any other parts (use tape or other insulation).

- 2) Press the cassette-down switch ② and leave it pressed in, when the power button is turned ON, threading starts.

* Refer to section 3-6 for instructions on how to removed the FL cassette compartment.

[How to EJECT in this condition]

- Press the EJECT button. When unthreading is completed and the internal gear starts to turn, turn the power OFF.

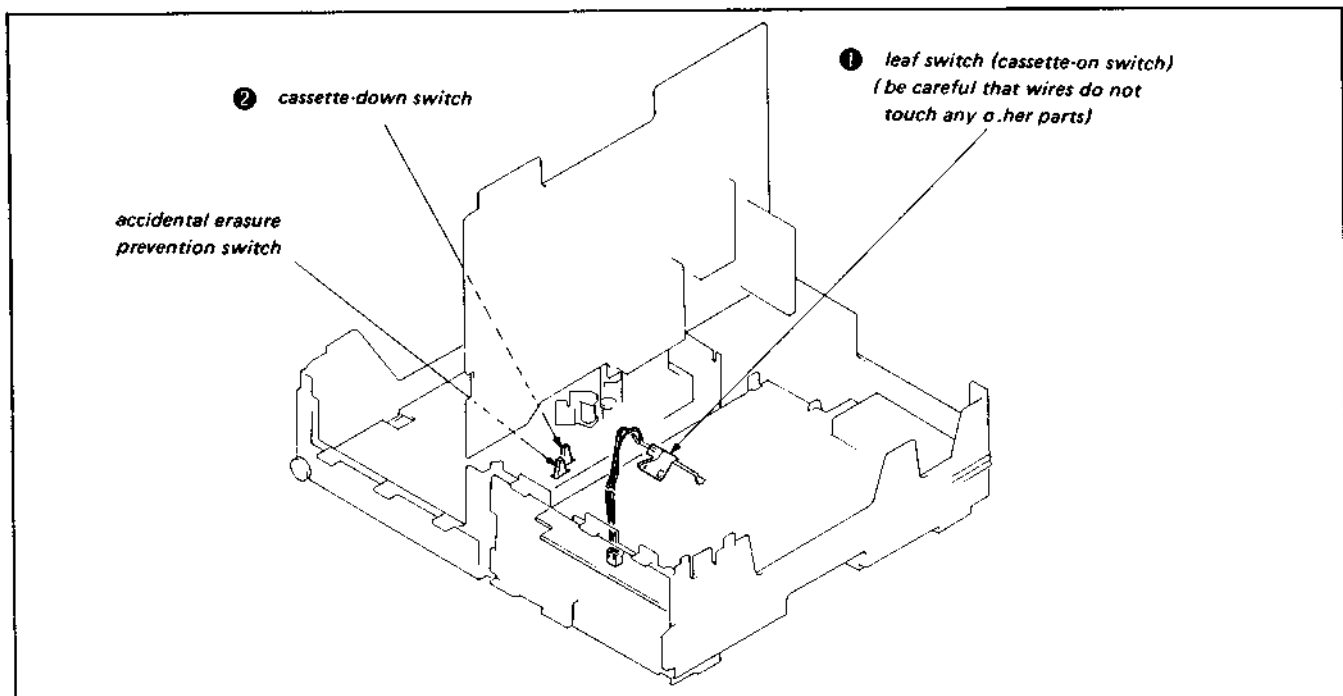


Fig. 1-1. How to thread the tape when the FL cassette compartment has been removed

1-1-2. Playback Without Cassette Installed

Complete threading by the procedure described in 1-1-1, then press the playback button.

1-1-3. How to Put in Recording Mode Without Cassette Installed

- 1) Put the unit into the threading completed state in accordance with the procedure described in 1-1-1.
- 2) Press the recording button while pressing the accidental erasure prevention switch ①.

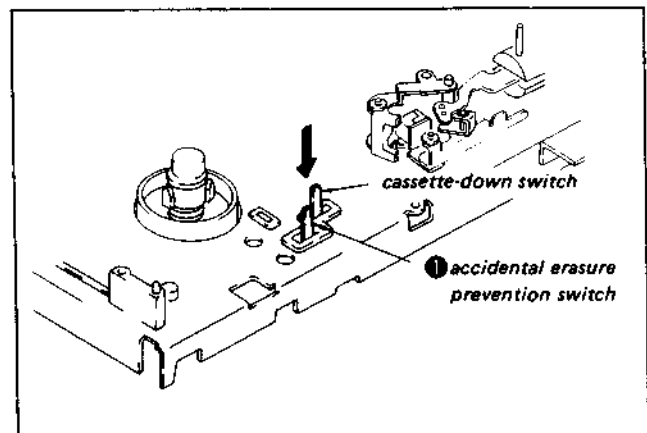


Fig. 1-2. How to put the recorder in recording mode with the FL cassette compartment removed

1-2. HOW TO LOAD, THREAD, UNLOAD AND UNTHREAD WITH THE POWER OFF

1-2.1. Manual Loading and Unloading

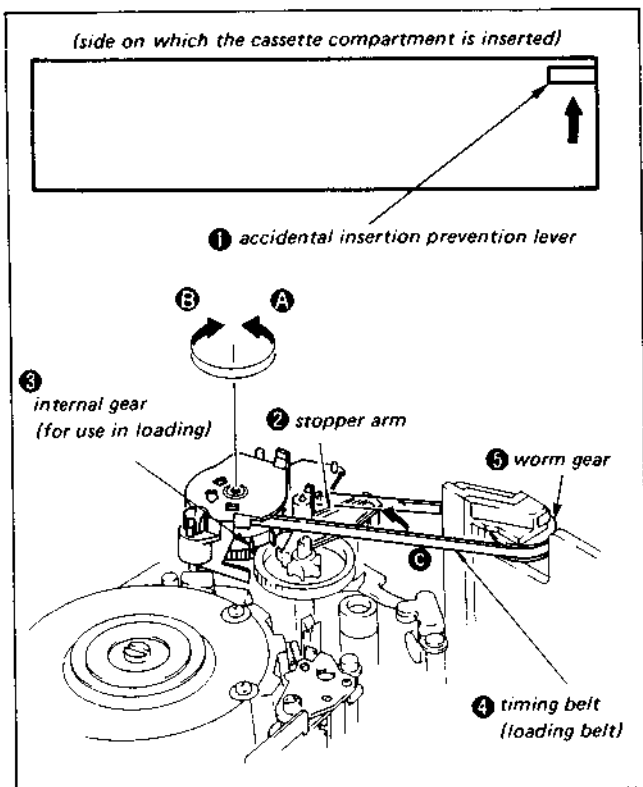


Fig. 1-3. Manual loading and unloading

- 1) Release the right accidental insertion prevention lever ① inside the cassette compartment, then press the stopper arm ② in the direction of arrow ③ and release the internal gear ③ stop.
- 2) Turn the internal gear ③ manually in the direction of arrow ④ until loading is completed.
- 3) To unload, turn the internal gear ③ in the direction of arrow ⑤.

Note.

When the loading belt ④ has been removed, load and unload by turning the worm gear ⑤ manually.

1-2.2. Manual Threading and Unthreading

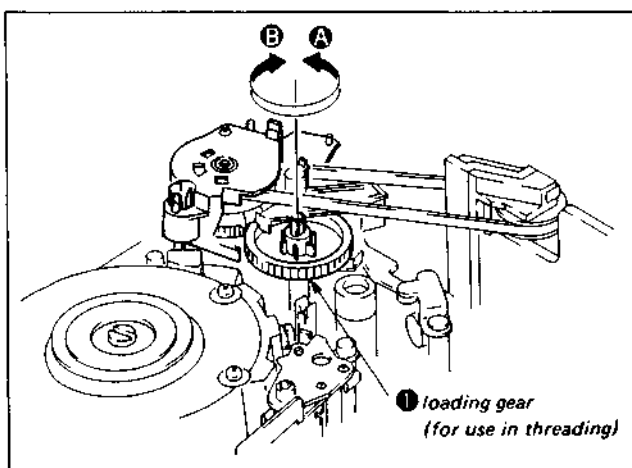


Fig. 1-4. Manual threading and unthreading

- 1) Turn the loading gear ① in the direction of arrow ④ until loading is completed.
- 2) To unthread, turn the loading gear ① in the direction of arrow ⑤.

Note:

Always turn the loading gear sideways by hand.
Never use a screwdriver or other tool.

1-3. TOOLS AND FIXTURES REQUIRED FOR SERVICING

Ref.No.	Name	Part Code	Carved Jig No.	Use and Remarks
J-1	Torque Measurement Tape	J-6080-003-C	SL-0003C	forward torque and back tension measurement
J-2	Parallel Plate	J-6086-570-A	SL-0657	audio/CTL head lateral adjustment capstan shaft vertical adjustment
J-3	Dental Mirror (handle) Dental Mirror (mirror)	J-6080-029-A J-6080-030-1	SL-5052	tape path and tape traveling adjustment check
J-4	Alignment Tape (KR5-2H)	8-969-995-52	---	tracking, overall adjustment of picture quality, etc.
J-5	Cleaning Fluid	Y-2031-001-0	---	
J-6	Thickness Gauge	9-911-053-00		
J-7	Chamois Cloth	2-034-697-00	---	cleaning
J-8	Head Demagnetizer	widely available	---	demagnetization of video head and audio head
J-9	Cleaning Cassette Tape	8-888-004-00	---	video head cleaning
J-10	Dihedral Adjustment Screw	J-6080-013-A	SL-0013	video dihedral adjustment
J-11	Video Head Checker	7-732-080-01	SL-5151	

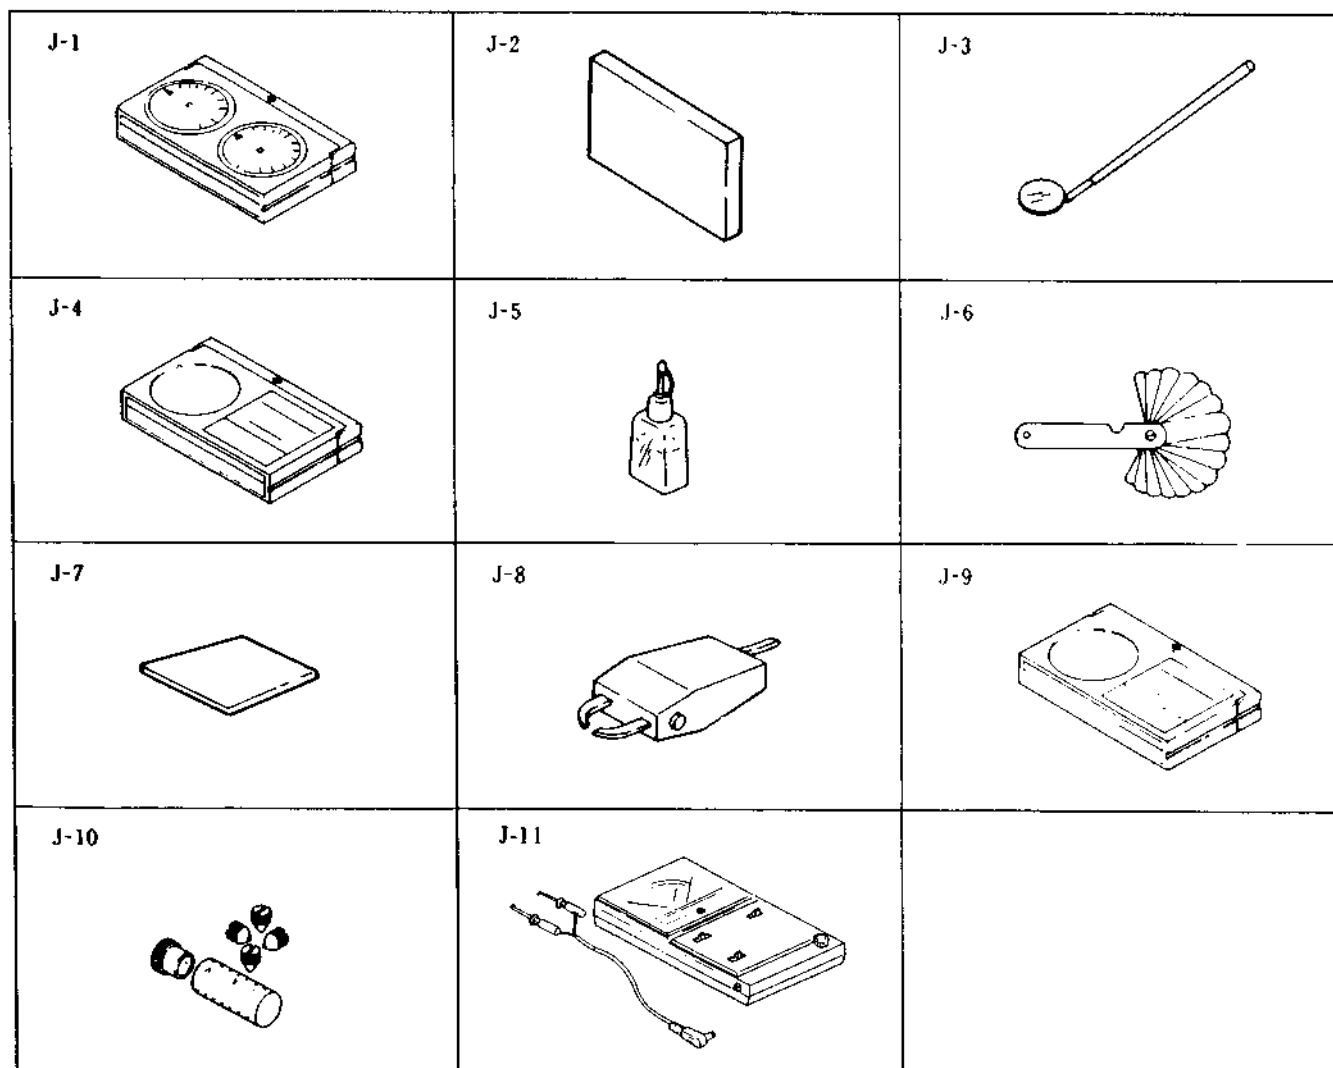


Fig. 1-5. Tools and fixtures required for servicing

2. PERIODIC CHECK AND MAINTENANCE

In order to obtain the best performance from this unit and make full use of its capabilities, and to extend the life of the unit and tapes, it is recommended that the following periodic checks and maintenance be performed.

2-1. POST-REPAIR MAINTENANCE

The following must be done after every repair regardless of how many hours the user has operated the machine.

2-1-1. Cleaning of Rotating Head Disk Assembly

- 1) Press a chamois cloth (Jig Ref. No. J-7) which has been dipped in cleaning fluid (Jig Ref. No. J-5) lightly against the rotating drum assembly, then do the cleaning by slowly rotating the rotating head disk by hand. (Never try to clean by using the motor to turn it.)
- 2) Never try to clean by moving the chamois cloth at a right angle to the head tip. There is a very great danger of damaging the head tip if this is done.

2-1-2. Cleaning of the Tape Movement System

- 1) Clean the surfaces which the tape contacts during its movement (tape guide, drum assembly surface, capstan, pinch roller, etc.) with a chamois cloth that has been dipped in cleaning fluid.

2-1-3. Cleaning the Drive System

- 1) Clean the driving parts with a cloth that has been dipped in cleaning fluid.

parts requiring cleaning

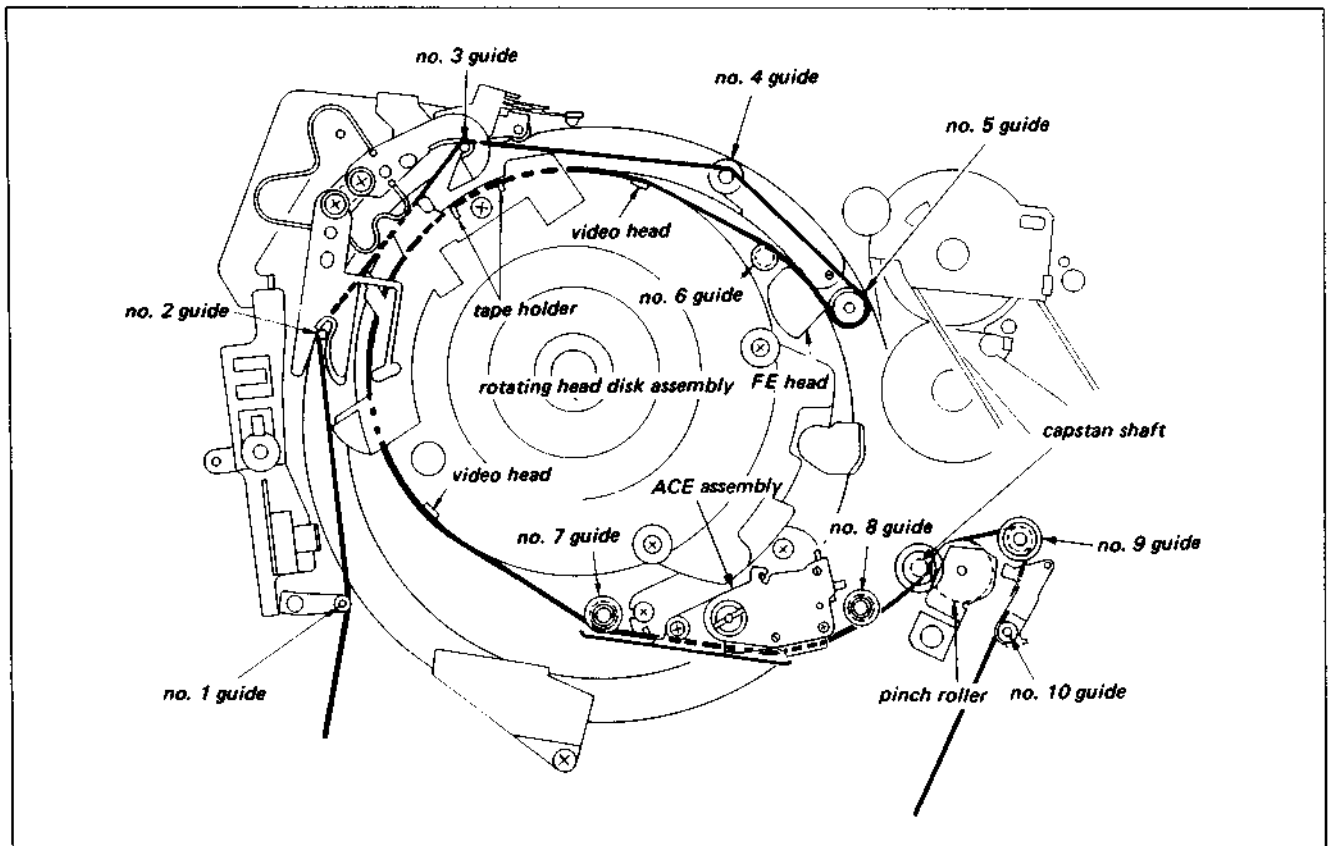


Fig. 2-1. Parts requiring cleaning

2-2. PERIODIC CHECK ITEMS

Perform the maintenance and check listed on the table below, according to user's operating hours.

Maintenance & Check		Replacement Part No.	Operating Hours (H)										Remarks
			500	1,000	1,500	2,000	2,500	3,000	3,500	4,000	4,500	5,000	
Tape Trans- Portation System	Cleaning of tape transportation system	—	○	○	○	○	○	○	○	○	○	○	This cleaning must be done whenever a repair is made.
	Cleaning and degaussing of ACE ass'y	—	○	○	○	○	○	○	○	○	○	○	
	Cleaning & degaussing of video disk ass'y	—	○	○	○	○	○	○	○	○	○	○	The life of the head varies, depending on operational conditions and method.
Driving System	Loading belt (synchro belt)	3-684-264-01	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	This cleaning must be done whenever a repair is made.
	Cleaning of iron core and opening of solenoid	—	-	-	-	○	-	-	-	○	-	-	Wipe iron core and opening of solenoid with dry cloth.
Performance Confirmation	Abnormal sound		☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	Adjust or replace the section which causes abnormal sound.
	Measurement of FWD back tension		-	☆	-	☆	-	☆	-	☆	-	☆	Confirmation must be made according to section 3-13. Specified value: adjust to $35 \pm 3g \cdot cm$ (When measured with torque cassette tape)
	Confirmation of brake system		-	☆	-	☆	-	☆	-	☆	-	☆	
	Confirmation of record & playback functions		☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	Perform the confirmation whenever repair is made.
	Measurement of forward torque		☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	Adjust to $80 \pm 5 g \cdot cm$ (SL-0003C)

○ Cleaning ☆ Replacement ☆ Confirmation

Note:

On overhaul

When overhauling the unit, replace parts as indicated in the above table.

3. CHECK, ADJUSTMENT AND REPLACEMENT PROCEDURES

STATE OF WEAR OF VIDEO HEADS CHECK

As the accuracy of the check depends on the state of the heads and precision of the checker, the results should be taken only as an indication of the state of wear.

[Adjustment of video head checker]

- 1) Mechanical zero
Verify that the pointer of the video head checker is at the mechanical zero position. If it is not at this position, adjust the mechanical zero control.
- 2) Battery voltage check
Set the MODE switch to "BATT" and set the POWER switch to "ON". The deflection of the pointer should be within the range marked "BATT". If not, replace the battery (use a 6F22 battery) as follows.
- 3) Calibration check
Set the POWER switch to "ON" and the MODE switch to "CAL", then adjust the CAL control so that the pointer is on the CAL mark.



Note 1: Be sure to carry out this adjustment whenever the RANGE switch is changed.

Note 2: Be sure to check CAL before measuring the head and proceed the measurement after adjusting CAL, if CAL is not properly set.

[Method of measurement]

- 1) Remove the two screws that hold the damper assembly in place, then remove the damper assembly.
- 2) Detach the lead wires on the 2 video heads.
- 3) Attach the measuring clips to the head leads.
Be sure to separate the leads by at least 1.5 cm.
- 4) Set RANGE switch to "B" and MODE switch to "MEAS".
The pointer will deflect to indicate the state of wear of the heads.

Note: The deflection for the 2 video heads may be different, so be sure to measure both.

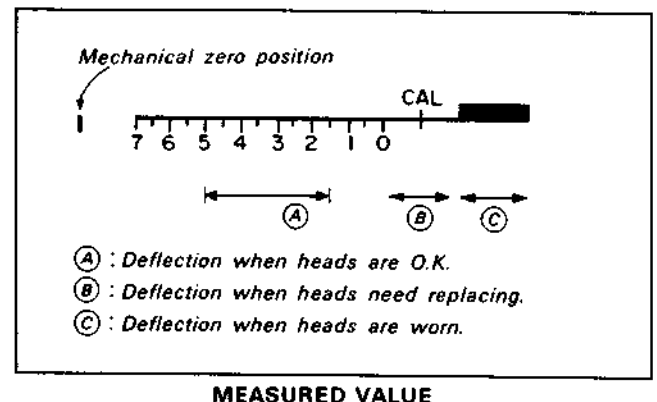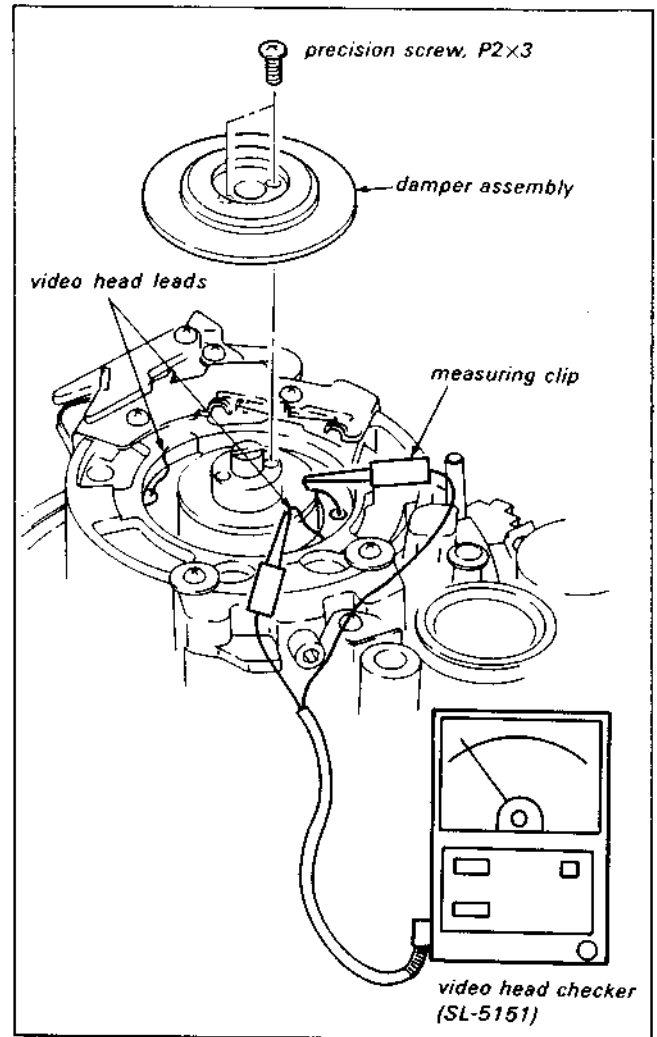

3-1. REPLACEMENT OF ROTATING HEAD DISK ASSEMBLY

3-1-1. Removal of the Rotating Head Disk Assembly (Fig. 3-1)

- 1) Remove the adjustment plates 2 and 3 **A** in accordance with the replacement of the drum assembly 1), 2) and 3) described in 3-3-1.
- 2) Remove the two screws **1** that hold the damper assembly in place, then remove the damper assembly **2**.
- 3) Use a hexagonal wrench to remove the hexagonal socket bolt **3** that holds the upper drum assembly in place, then remove the upper drum assembly **4**.
- 4) Unsolder **6** the rotating head disk **5** relay plate (4 red and white leads).
- 5) Remove the two hexagonal socket bolts **7** holding rotating head disk assembly **5** in place, then remove the rotating head disk assembly.

Note:

Be careful not to touch the head tip with the hand or bang anything against it.

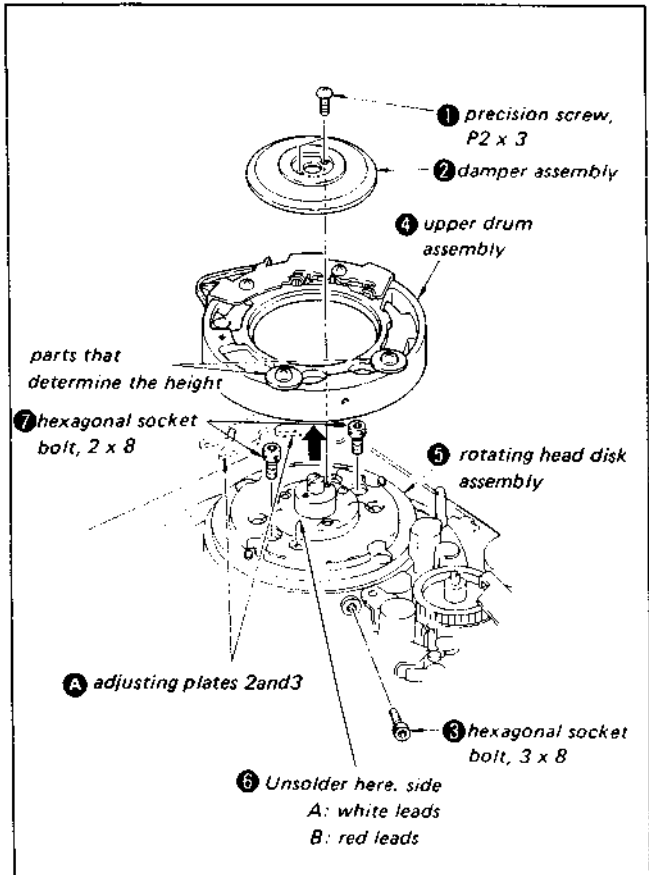


Fig. 3-1. Removal of the rotating head disk assembly I

3-1-2. Mounting of the Rotating Head Disk Assembly (Fig. 3-1)

- 1) Insert rotating head disk **5** in place, being careful of the direction so that the red and white leads are in the right places.
- 2) Tighten hexagonal socket bolt **7** and solder the lead wires.

Note:

Be careful to solder the lead wires correctly and not to break any wires.

- 3) Attach the upper drum, being careful (as during removal) not to move the adjusting plate. While pressing the two points that determine the height, tighten hexagonal socket bolt **3**.

Note:

When inserting the upper drum, be careful that it does not touch the head tip.

Note:

When replacing the rotating drum head, it can happen that the rotating head disk assembly will be hard to remove. In such a case, remove it using the method explained below (Fig. 3-2).

- 1) Remove the hexagonal socket bolts **1** that hold the rotating head disk assembly in place.
- 2) When the head disk is jammed on tight and is hard to remove, screw the hexagonal socket bolts removed in step **2** into the threaded holes removed from the original holes by 90°. Tighten them a little at a time. The head disk will be lifted up by the two screws and will come off easily.

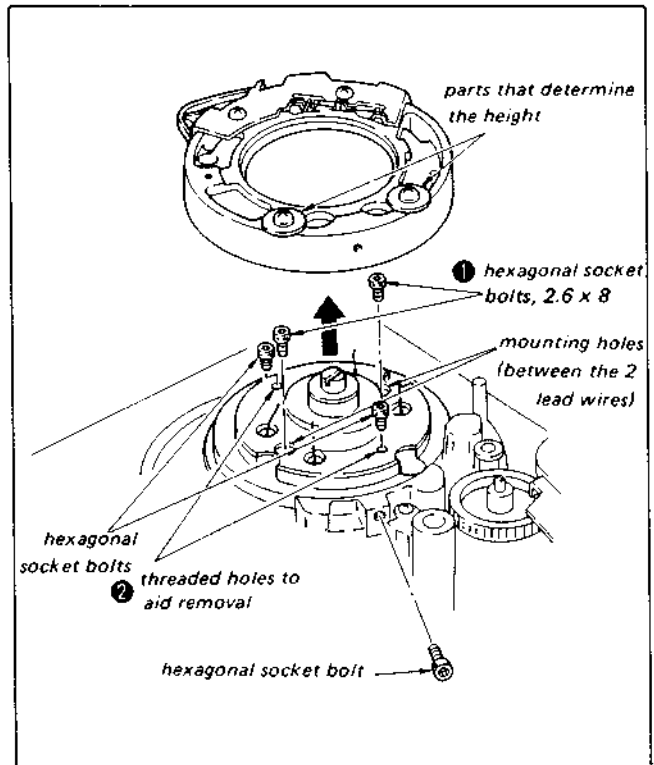


Fig. 3-2. Removal of the rotating head disk assembly II

3-2. VIDEO HEAD DIHEDRAL CHECK AND ADJUSTMENT

This adjustment is generally unnecessary, but it is sometimes necessary when the video head disk is replaced. (The video head disk used for maintenance has been precision adjusted at the factory using a microscope and almost never needs to be readjusted.)

When judging whether the video head dihedral angle is correct, the alignment tape is played back. When this is done the tracking control knob must be in the centering position. If the check is done with this knob in other than the center click position (if the tracking is off-center), even if the dihedral angle is correct the picture will be reproduced as if it were off.

Before this adjustment is performed, the ACE assembly position, play back the monoscope section of the alignment path adjustment is described) must be completed.

[Method of checking]

With the tracking control knob set to the center click position, play back the monoscope section of the alignment tape. Check to see if any of the vertical monoscope lines immediately below the switching pulse are reproduced double. If not, the dihedral angle is correct and does not have to be adjusted. If so, perform the adjustment as explained below.

[Method of adjustment]

- 1) As shown in Fig. 3-3, screw two dihedral angle adjustment screws (Jig Ref. No. J-10) into the adjustment screw holes on the side on which the red lead wires from the video head are connected, until the top of the screw is level with the video head disk. (If they are not screwed in far enough, the video head disk will not turn past the point where the top of the adjustment screw strikes the upper drum. Conversely, if it is screwed in too far, the head base will be moved, throwing the video head dihedral angle way off.)

Note:

The side on which the white lead wires are connected is the reference side and must not be moved.

- 2) Screw one of the two adjustment screws in a little bit farther until resistance is felt. Beyond this point, turning the screw still farther will move the video head, adjusting the dihedral angle.
- 3) With the adjustment screws in place, play the monoscope signal section of the alignment tape and see how the lines are reproduced. If the vertical lines are split apart more than before, turn the screw which was screwed in more tightly counterclockwise to loosen it, then adjust by tightening the other screw.
- 4) After the adjustment is completed, remove the adjustment screws and play the tape again to reconfirm that the adjustment is correct.

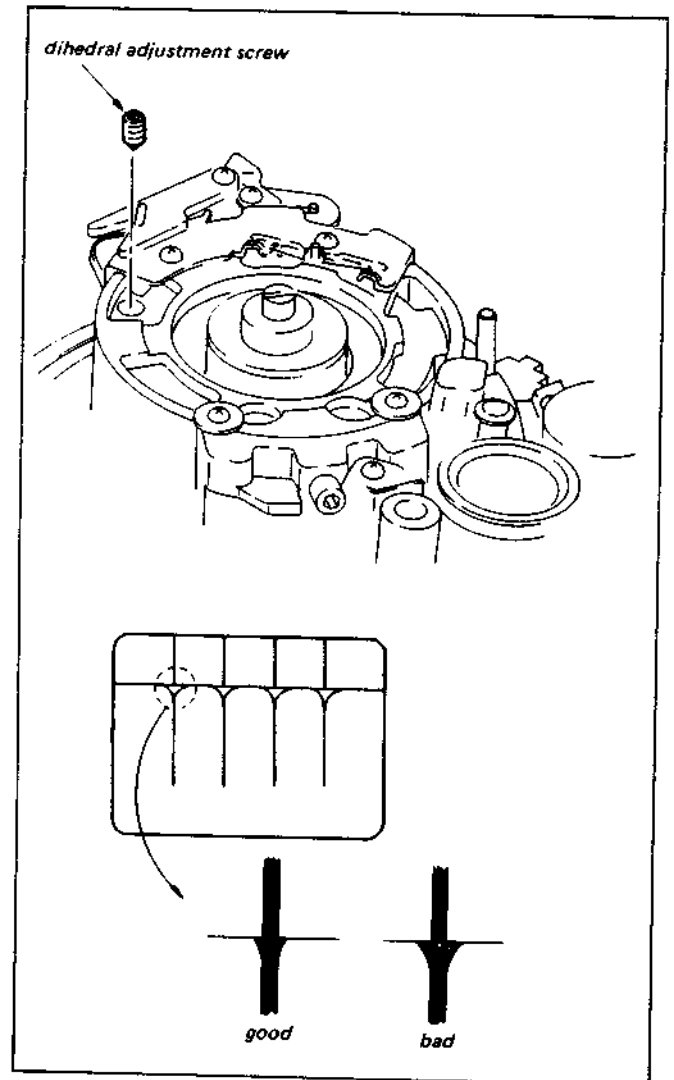


Fig. 3-3. Video head dihedral adjustment

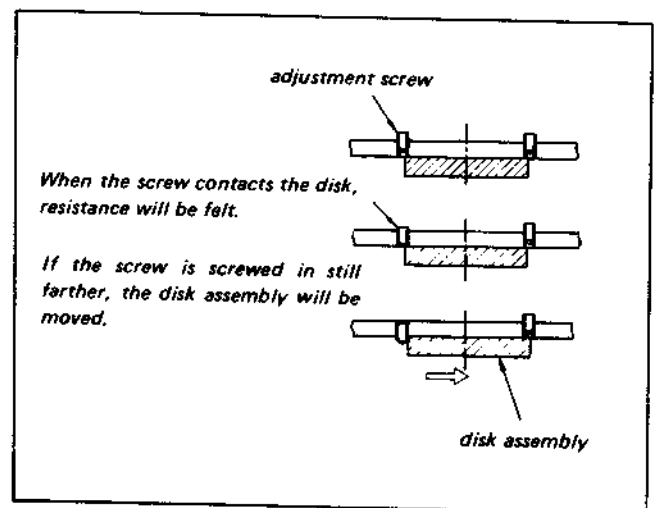


Fig. 3-4.

3-3. REPLACEMENT AND ADJUSTMENT OF THE DRUM ASSEMBLY

3-3-1. Replacement of the Drum Assembly

- 1) Measure gap **A** between adjusting plate 2 and 3 and the upperdrum holder section and record the measurement.

Note:

The position where the adjusting plate is mounted has a large effect on the tape path, so this measurement must be performed.

- 2) Measure gap **B** between adjusting plate 2 and 3 and the upperdrum holder section, and record the measurement.

Note:

The position where the adjusting plate is mounted has a large effect on the tape path, so this measurement must be performed.

- 3) Remove the screws shown in Fig. 3-5, then remove the tape guide ground plate and adjusting plates 2 and 3 **2**.
- 4) Remove the 3 connectors **3** from the rear of the chassis as shown in Fig. 3-6.
- 5) Remove the 3 drum mounting screws **4** from the rear of the chassis, then remove the main body of the drum assembly **5**. After the replacement has been completed, adjust the drum path.

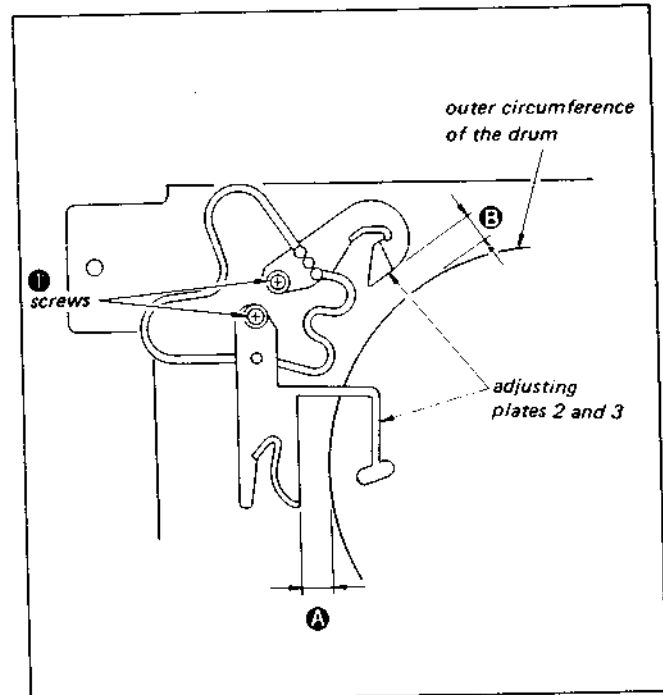


Fig. 3-5. Measurement of the position of adjusting plates 2 and 3

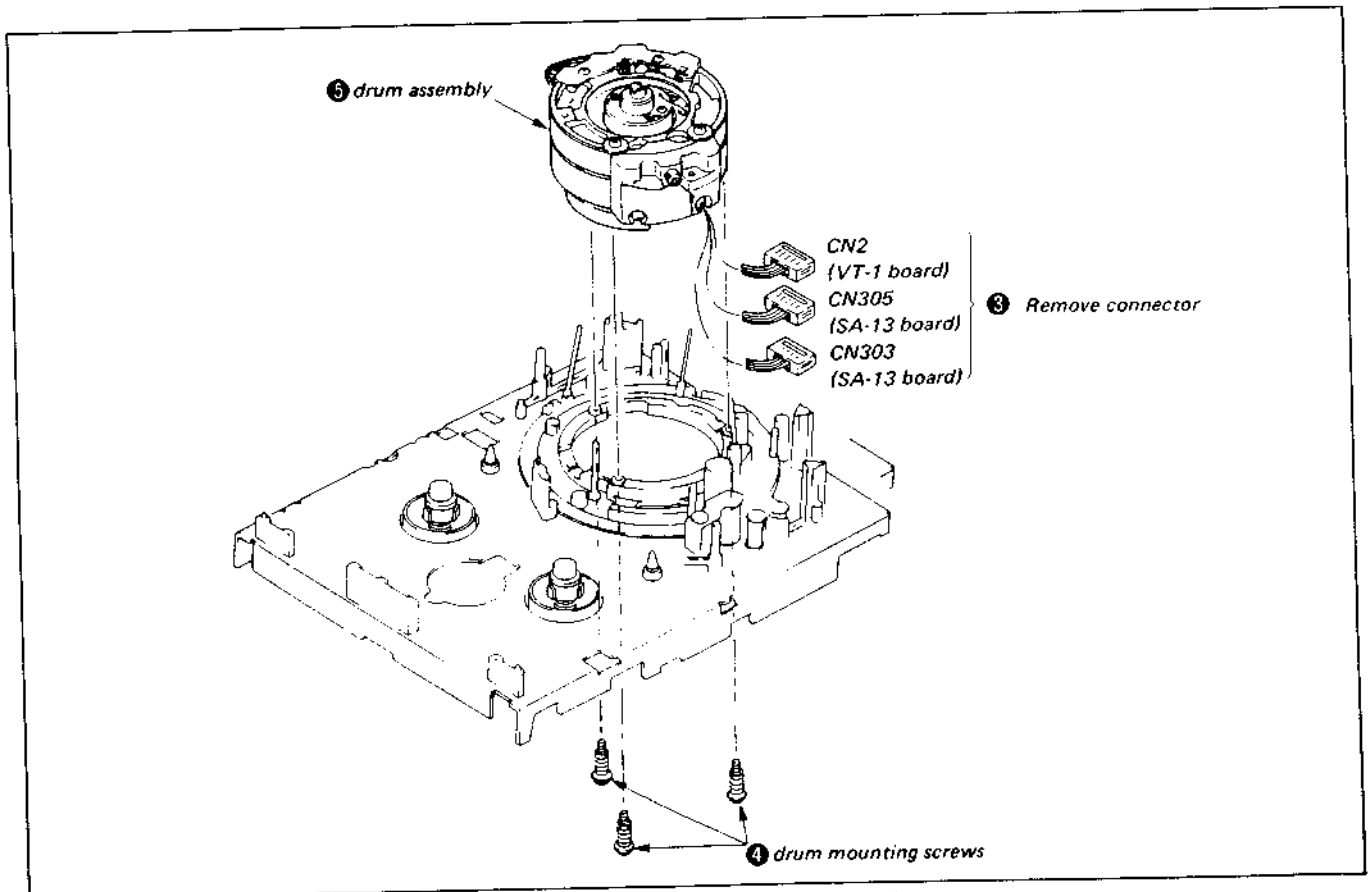


Fig. 3-6. Removal of the drum assembly

3-3.2. Adjustment of the Motor Gap when Replacing the Drum Assembly

After replacing the drum assembly, adjust the gap between the motor rotor and the coil to 0.3 mm to 0.6 mm (Fig. 3-7).

[Procedure]

- 1) When re-assembling the drum, use the spacers which were removed to produce a gap of between 0.3 mm and 0.6 mm. Measure the gap using the gauge that comes with the drum for assembly and maintenance use. One side of the gauge is 0.3 mm and the other side is 0.6 mm. If the gap is adjusted correctly, the 0.3 mm side should fit in and the 0.6 mm side should not.
- 2) If this fails to give the correct gap width, do not use the spacers which were removed, instead, use a combination of the 40.3 mm accessory spacers to obtain the correct width.

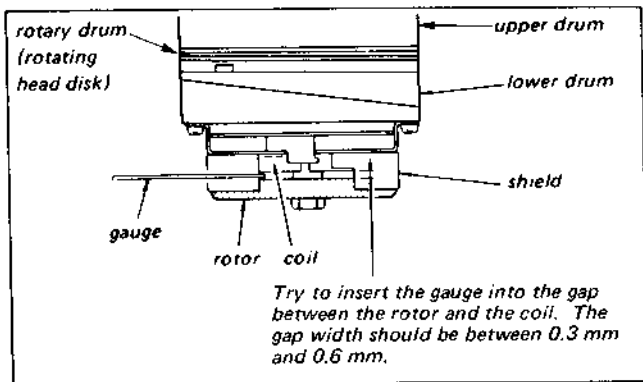


Fig. 3-7. Checking the motor gap width after replacing the drum assembly

Removal of the stator and rotor when replacing the drum

- 1) Remove the nut and washer ❶.
- 2) Remove the rotor ❷ from the stator.
- 3) Remove the 2 screws ❸ then remove the stator from the main body of the drum.

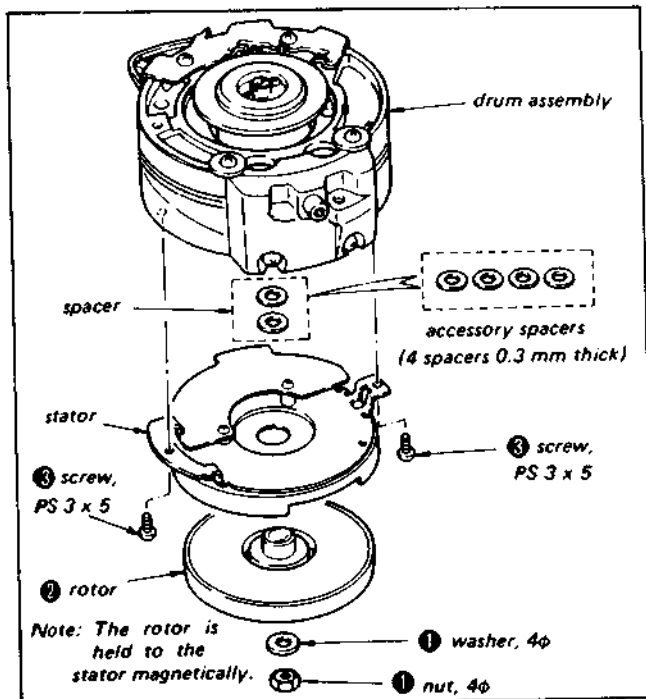


Fig. 3-8. Removal of the stator and rotor when replacing the drum

3-4. REPLACEMENT OF THE CAPSTAN MOTOR

Removal of the Capstan Motor (Fig. 3-9)

- Remove the three screws ❶ then remove the capstan motor from the rear of the mechanical chassis.

Note:

When the capstan motor has been removed or replaced, check the tape path once.

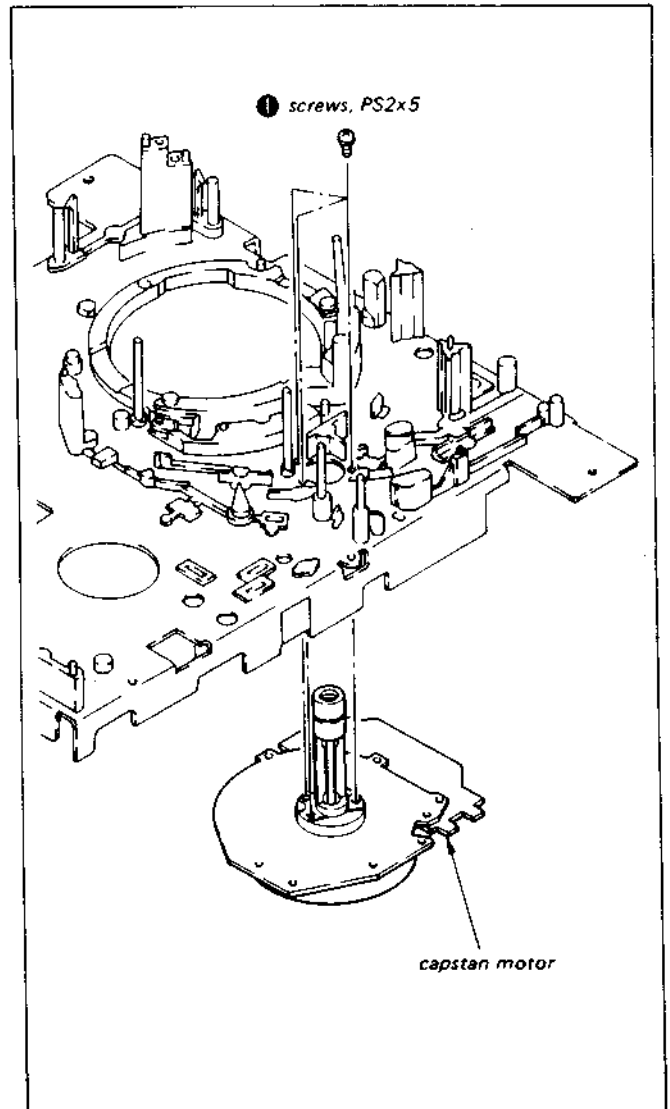


Fig. 3-9 Removal of the capstan motor

3-5. REMOVAL OF THE S COIL SENSOR (Fig. 3-10)

- 1) Remove the spring ① .
- 2) Remove the claw ② in the direction of arrow A , then pull the S coil sensor ③ out.
- 3) Pull out the connector ④ from CN5 on SA-13 board.

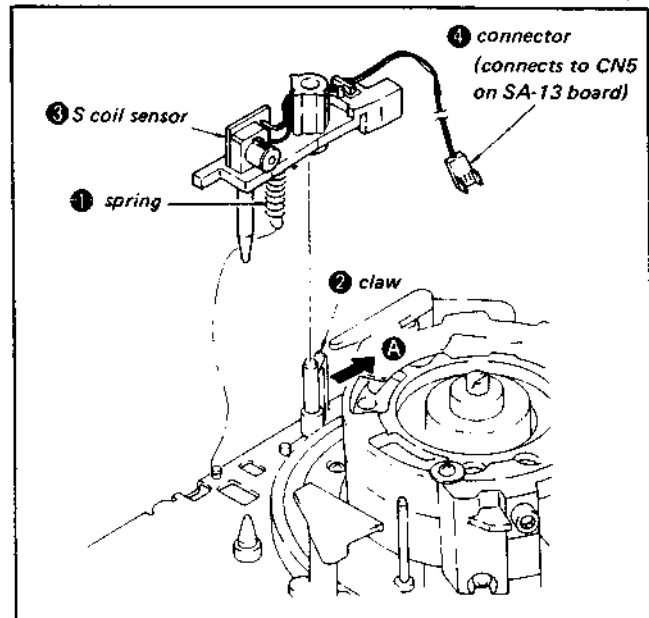


Fig. 3-10. Removal of the S coil sensor

3-6. REMOVAL OF THE FL CASSETTE COMPARTMENT ASSEMBLY (Fig. 3-11)

- 1) Refer to the "REMOVAL OF THE VT-1 BOARD" then remove the VT-1 board.
- 2) Remove the screw ① then remove the retainer upper case ② .
- 3) Remove the three screws ③ .
- 4) Remove two claws ④ then remove the planet gear holder ⑤ .
- 5) Remove the timing belt (loading belt) ⑥ from the internal gear ⑨ .
- 6) Pull out the connector CN-9 (BLK) ⑦ from the SA-13 board.
- 7) Remove the FL cassette compartment assembly ⑧ in the direction shown by the arrow.

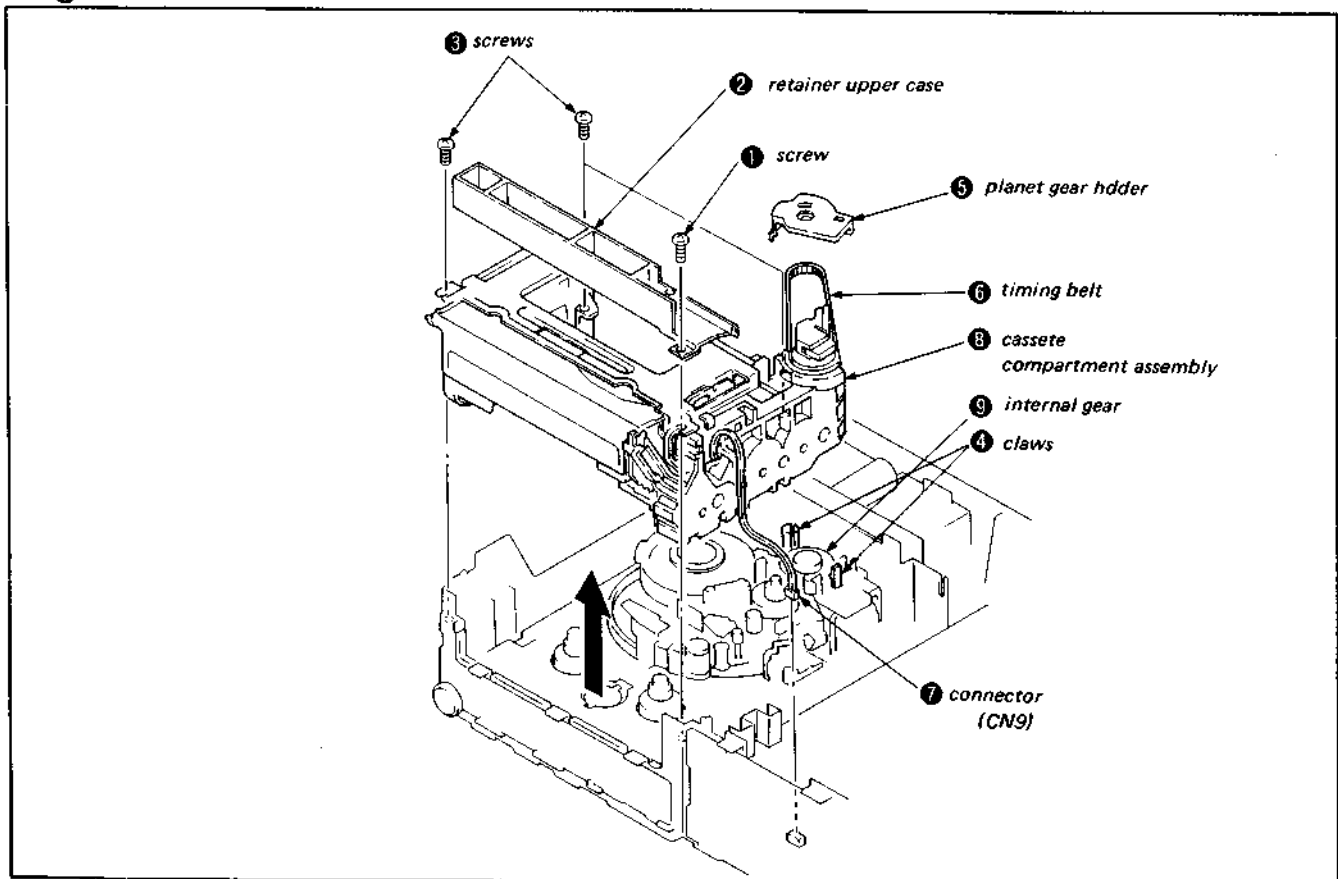


Fig. 3-11. Removal of the FL cassette compartment assembly

3-7. ADJUSTMENT OF THE FL CASSETTE COMPARTMENT

3-7-1. Adjustment of the Position of the Right Gear of the FL Cassette Compartment Assembly

In the FL cassette compartment assembly, the cassette holder must always move parallel to the mechanical chassis. The gear system is used to control the amount by which the cassette holder advances so that this will be the case. Consequently, if the gears in this section slip out of mesh, the next time the unit is assembled the gear mesh must be adjusted to the correct position; otherwise the cassette will not feed properly.

[Adjustment of the gear positions]

- 1) Get a positioning rod ① about 200 mm long and 3 mm in diameter ready.
- 2) While passing the positioning rod through the combination of the drive arm right ② and cassette ON cam, fit the latter on the right side plate. Similarly, fit the drive arm left onto the left side plate.
- 3) Similarly, while passing the positioning rod through the worm wheel ③ fit the latter onto the right side plate.
- 4) Similarly, while passing the positioning rod through the combination of the limiter gear ④ and cassette OFF cam, fit the latter onto the right side plate.

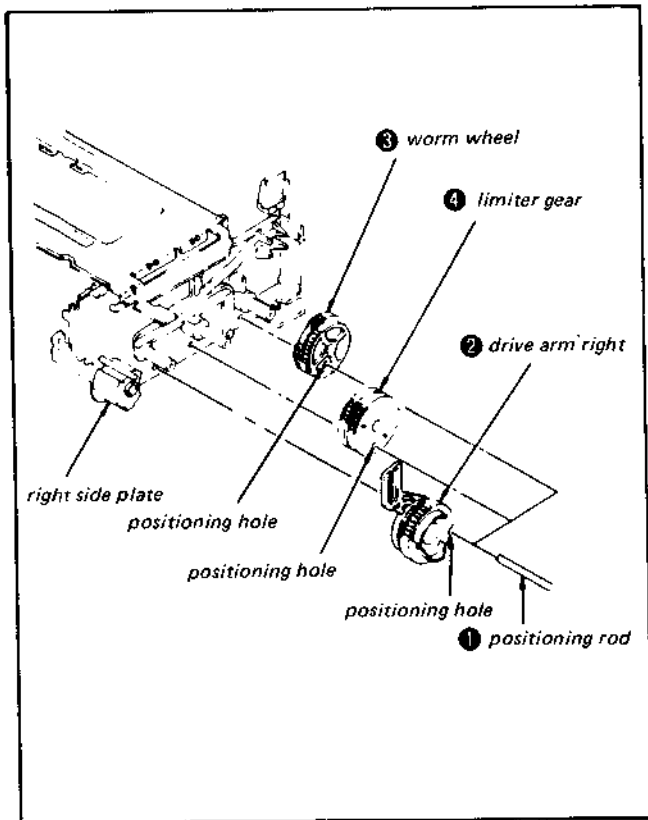


Fig. 3-12. Positioning of the FL cassette compartment gears

3-7-2. Cassette ON Switch Operation Check and Adjustment

[Method of checking]

When inserting a cassette into the FL cassette compartment assembly, confirm that, as the cassette is inserted, the leaf-switch comes ON when the center of the drive roller is 8 to 13 mm from the end of the guide groove, as shown in Fig. 3-13.

[Method of adjustment]

Bend the tip of the cassette ON switch in the direction of the arrow.

Adjust so that the cassette ON switch comes ON when the above distance is 8 to 13 mm, and finally tighten the screw.

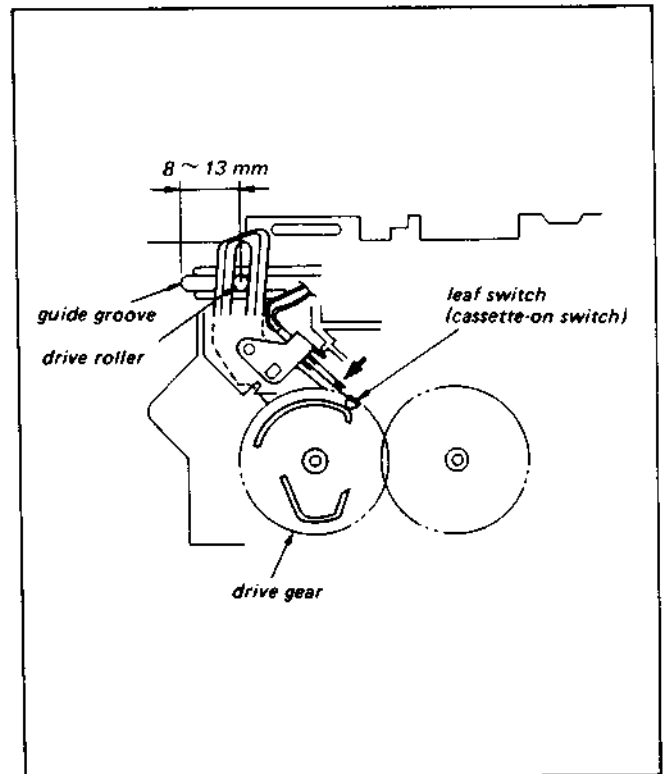


Fig. 3-13. Cassette ON switch operation check and adjustment

3-7-3. Checking and Adjustment of the Cassette Door Assembly

[Method of checking]

With the door opening and closing arm returned all the way in the direction of arrow **A**, check to make sure that the upper and lower doors are vertical.

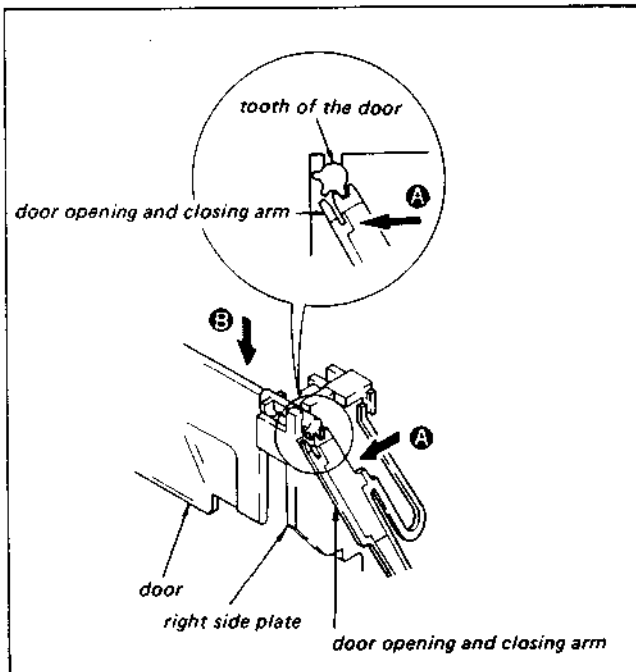


Fig. 3-14. Adjustment of the position of the cassette door assembly

[Method of adjustment]

check to make sure that the door opening and closing rack plate has returned all the way. Then, close the upper door together in the direction of arrow **B** so that it is vertical, and mesh the gears.

3-7-4. Mounting the FL Cassette Compartment Assembly (Fig. 3-15)

- 1) Hook the two holes **1** of the FL cassette compartment assembly onto the mechanical chassis, then place the compartment in the specified position on the chassis.
- 2) Loosely tighten the three mounting screws **2** of the FL cassette compartment assembly.
- 3) Attach the retainer upper case **3** to the specified position on the FL cassette compartment assembly and secure it with screw **4** temporarily.
- 4) Move the FL cassette compartment assembly forward and backward with respect to the mechanical chassis, set it in the correct position, then tighten the mounting screws **2** all the way.
- 5) Connect the timing belt (loading belt) **5** between the loading motor and the worm gear, then hold it in place with the planet gear holder **6**.
- 6) Insert the harness sticking **7** out from the FL cassette compartments into connector **7** CN9 on SA-13 board.

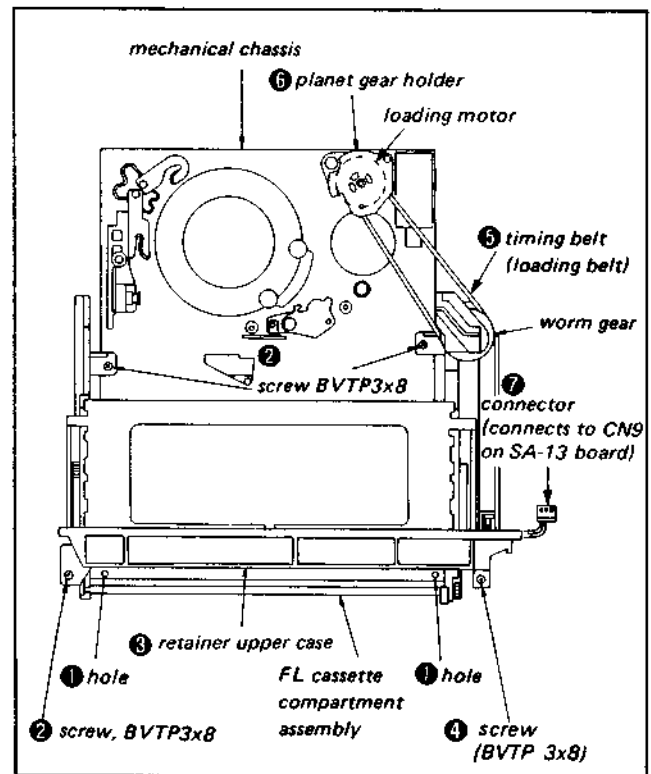


Fig. 3-15. Mounting the FL cassette compartment assembly

3-8. REMOVAL OF THE No. 2 AND No. 3 GUIDES

3-8-1. Removal of the No. 2 Guide

- 1) Remove the 1 x 3 tap-in screw ① .
- 2) Remove the 1.4 x 3 tap-in screw ② .
- 3) Remove the No. 2 guide assembly ③ .

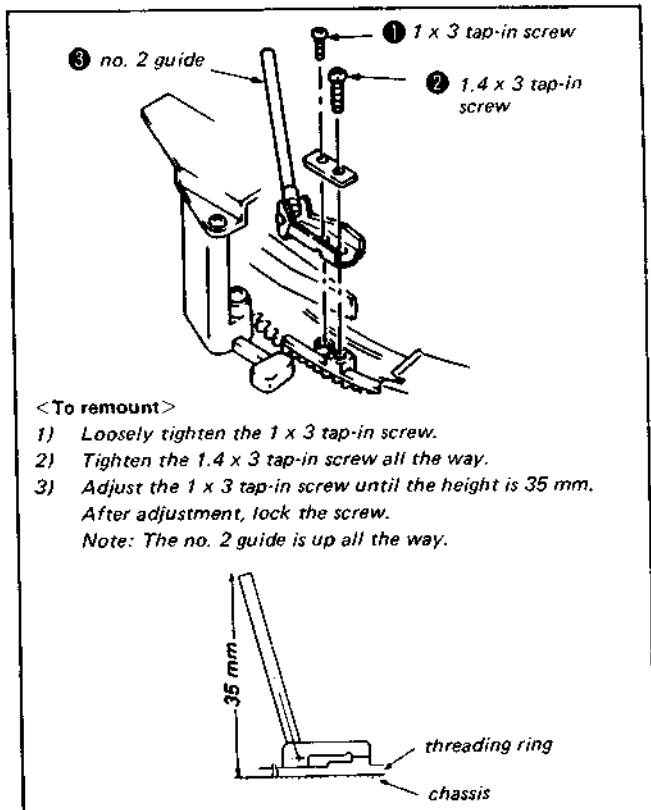


Fig. 3-16. Removal of the no. 2 guide

3-8-2. Removal of the No. 3 Guide

- 1) Remove the 1 x 3 tap-in screw ① .
- 2) Remove the 1.4 x 3.5 tap-in screw ② .
- 3) Remove the limiter spring ③ .
- 4) Remove the No. 3 guide assembly ④ .

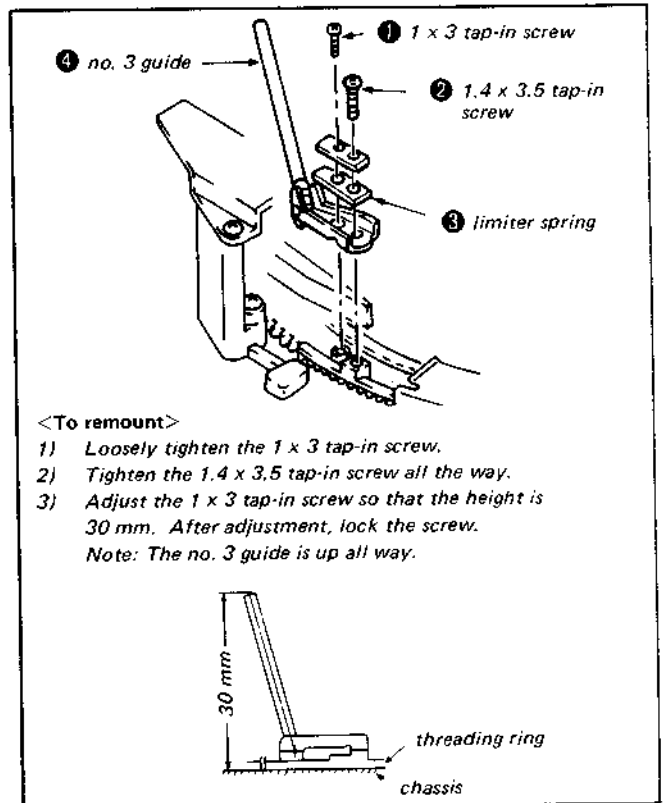


Fig. 3-17. Removal of the no. 3 guide

3-9. REPLACEMENT AND ADJUSTMENT OF THE S THREADING RING

3-9-1. Preparation to Remove the S Threading Ring Removal of the ACE Assembly, FE Head and Threading Motor (Fig. 3-18)

- 1) Remove the cross-recessed head screw ①.
- 2) Remove the No. 6 guide nut ②.
- 3) Remove the No. 6 guide washer ③.
- 4) Remove the No. 6 guide spacer ④.
- 5) Remove the compression coil spring ⑤.
- 6) Remove the 2 guide adjustment screw ⑥, then remove the ACE assembly and the FE head.

Note:

Since the ACE assembly and the FE head are connected by a lead wire, be careful when removing them.

- 7) Remove the 2 screws ⑦, then remove the threading motor assembly by pulling it up and out.

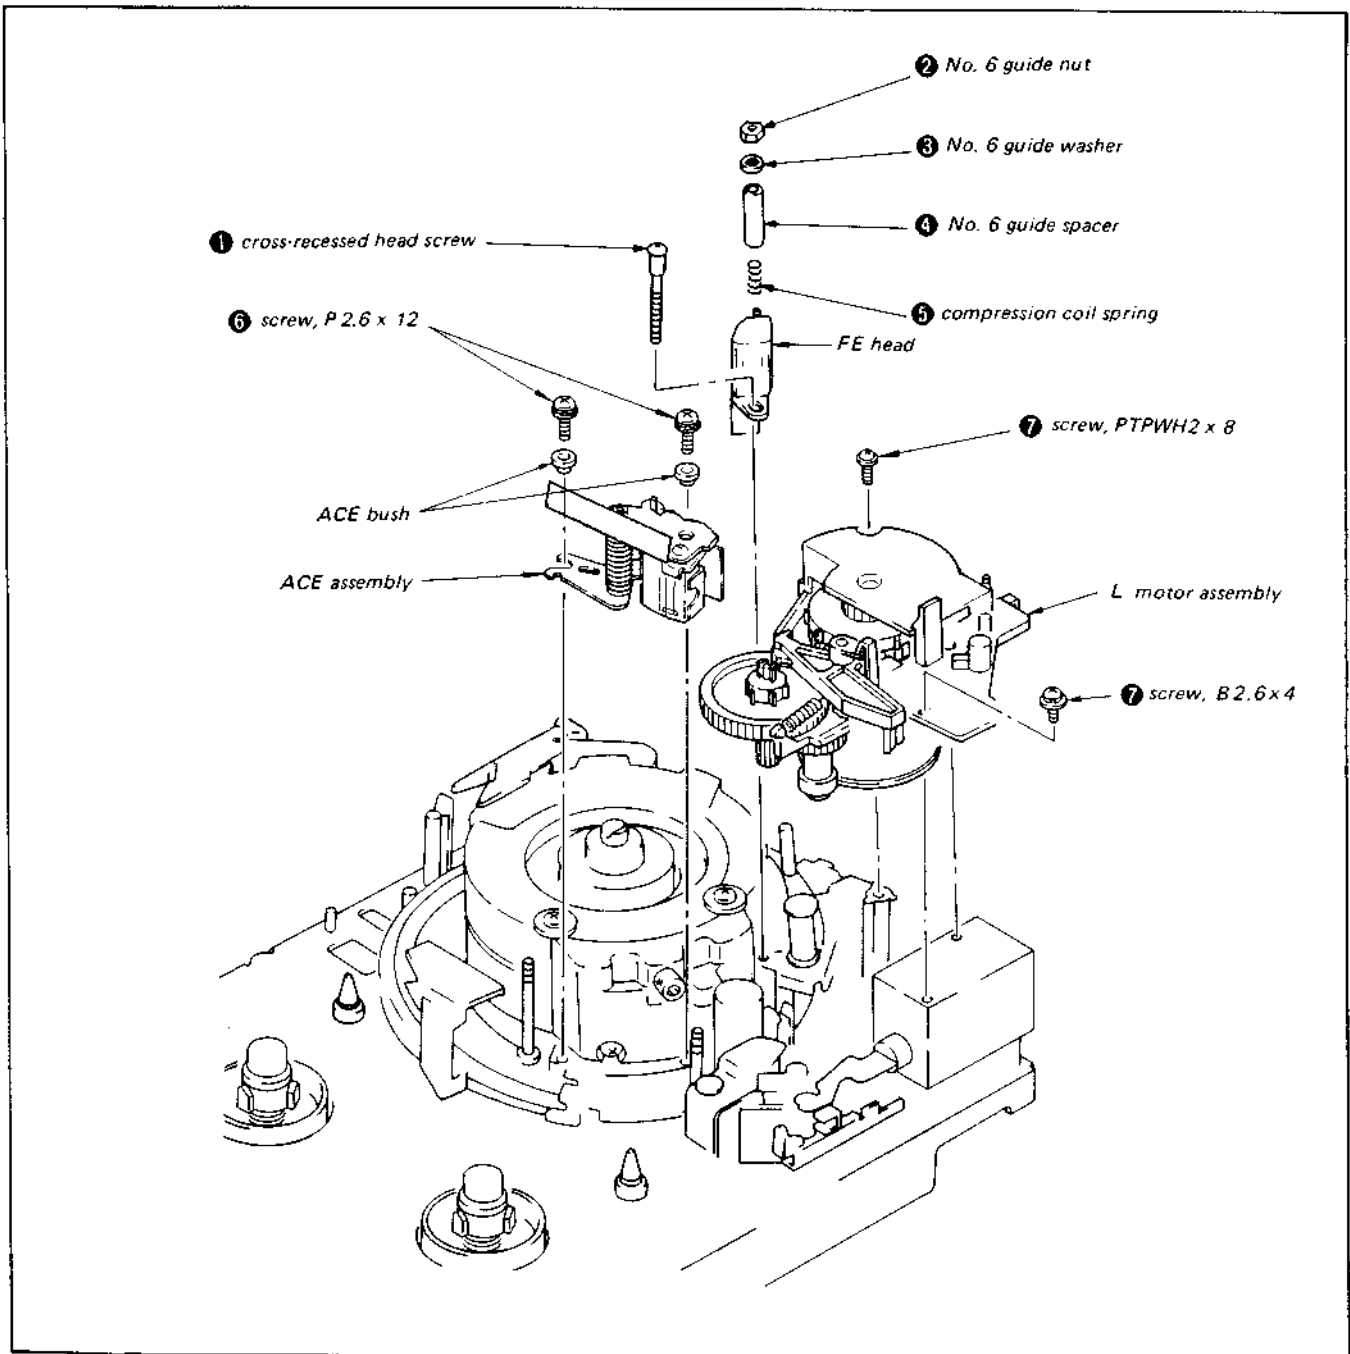


Fig. 3-18. Removal of the ACE assembly, FE head and TE motor assembly

3-9-2. Removal of Miscellaneous Parts (Fig. 3-19)

Proceeding in the same manner as in replacement of the drum assembly, measure the width of the gap between the upper drum and the adjusting plates (Fig. 3-5).

- 1) Remove the screw ①, then remove the tape guide ground plate and adjusting plates 2 and 3 ②.
- 2) Remove the two screws ③, then remove the tape holder assembly ④.
- 3) Remove the screw ⑤, then remove the guide plate ⑥.
- 4) Remove the two screws (PTPWH2 x 8) ⑦ and the screw (2.6 x 24) ⑧, then remove shuttle guide 2 ⑨.

- 5) Remove the two screws (PTPWH2 x 8) ⑩ and the screw (2.6 x 24) ⑪. Then remove the two claws holding shuttle guide 1-YA ⑫ in place, and finally remove shuttle guide 1-YA ⑫.
- 6) Remove the slant base assembly ⑬.
- 7) Remove the pin link liner plate.

Note:

After removing the guide plate, do not thread or unthread a tape with the shuttle guide mounted.

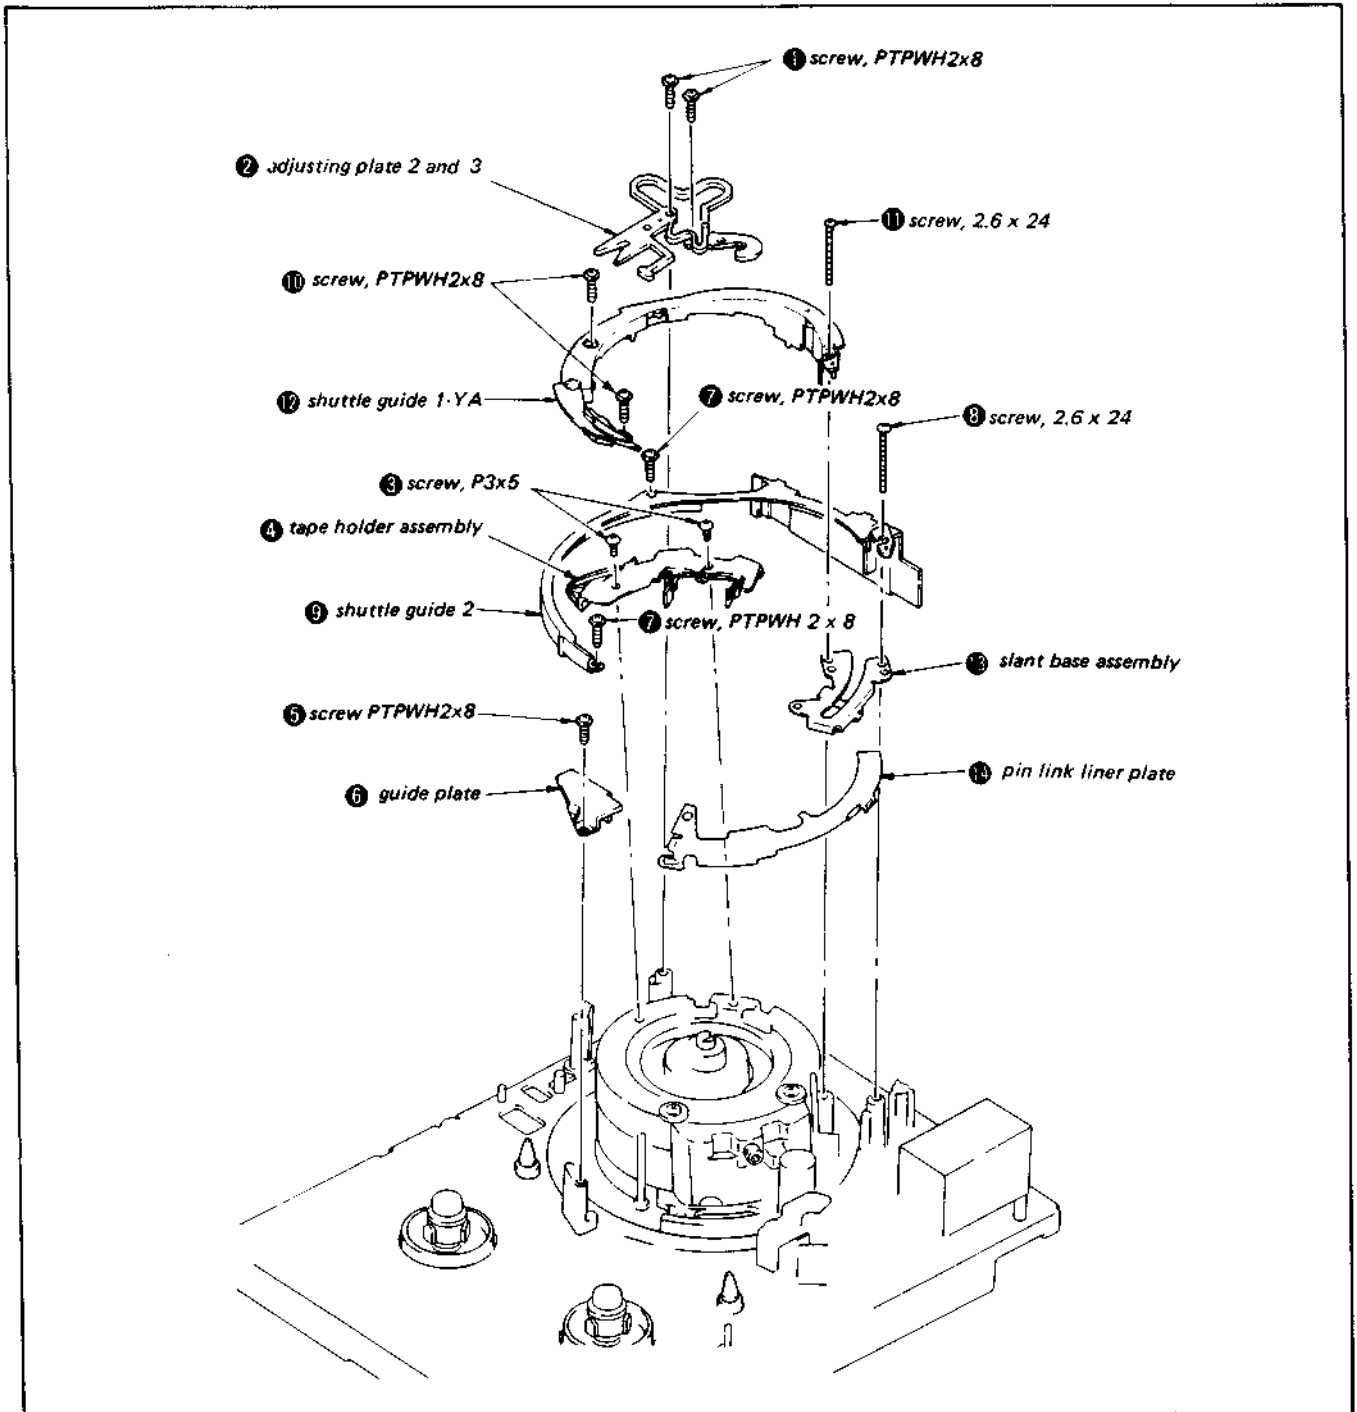


Fig. 3-19. Removal of miscellaneous parts

3-9-3. Removal of the S Threading Ring (Fig. 3-20)

- 1) Turn the stop washer ① and remove the ring roller (B) ② and ring roller ③
- 2) Remove the S threading ring ④.

Note:

Once a stop washer has been removed, do not use it again.

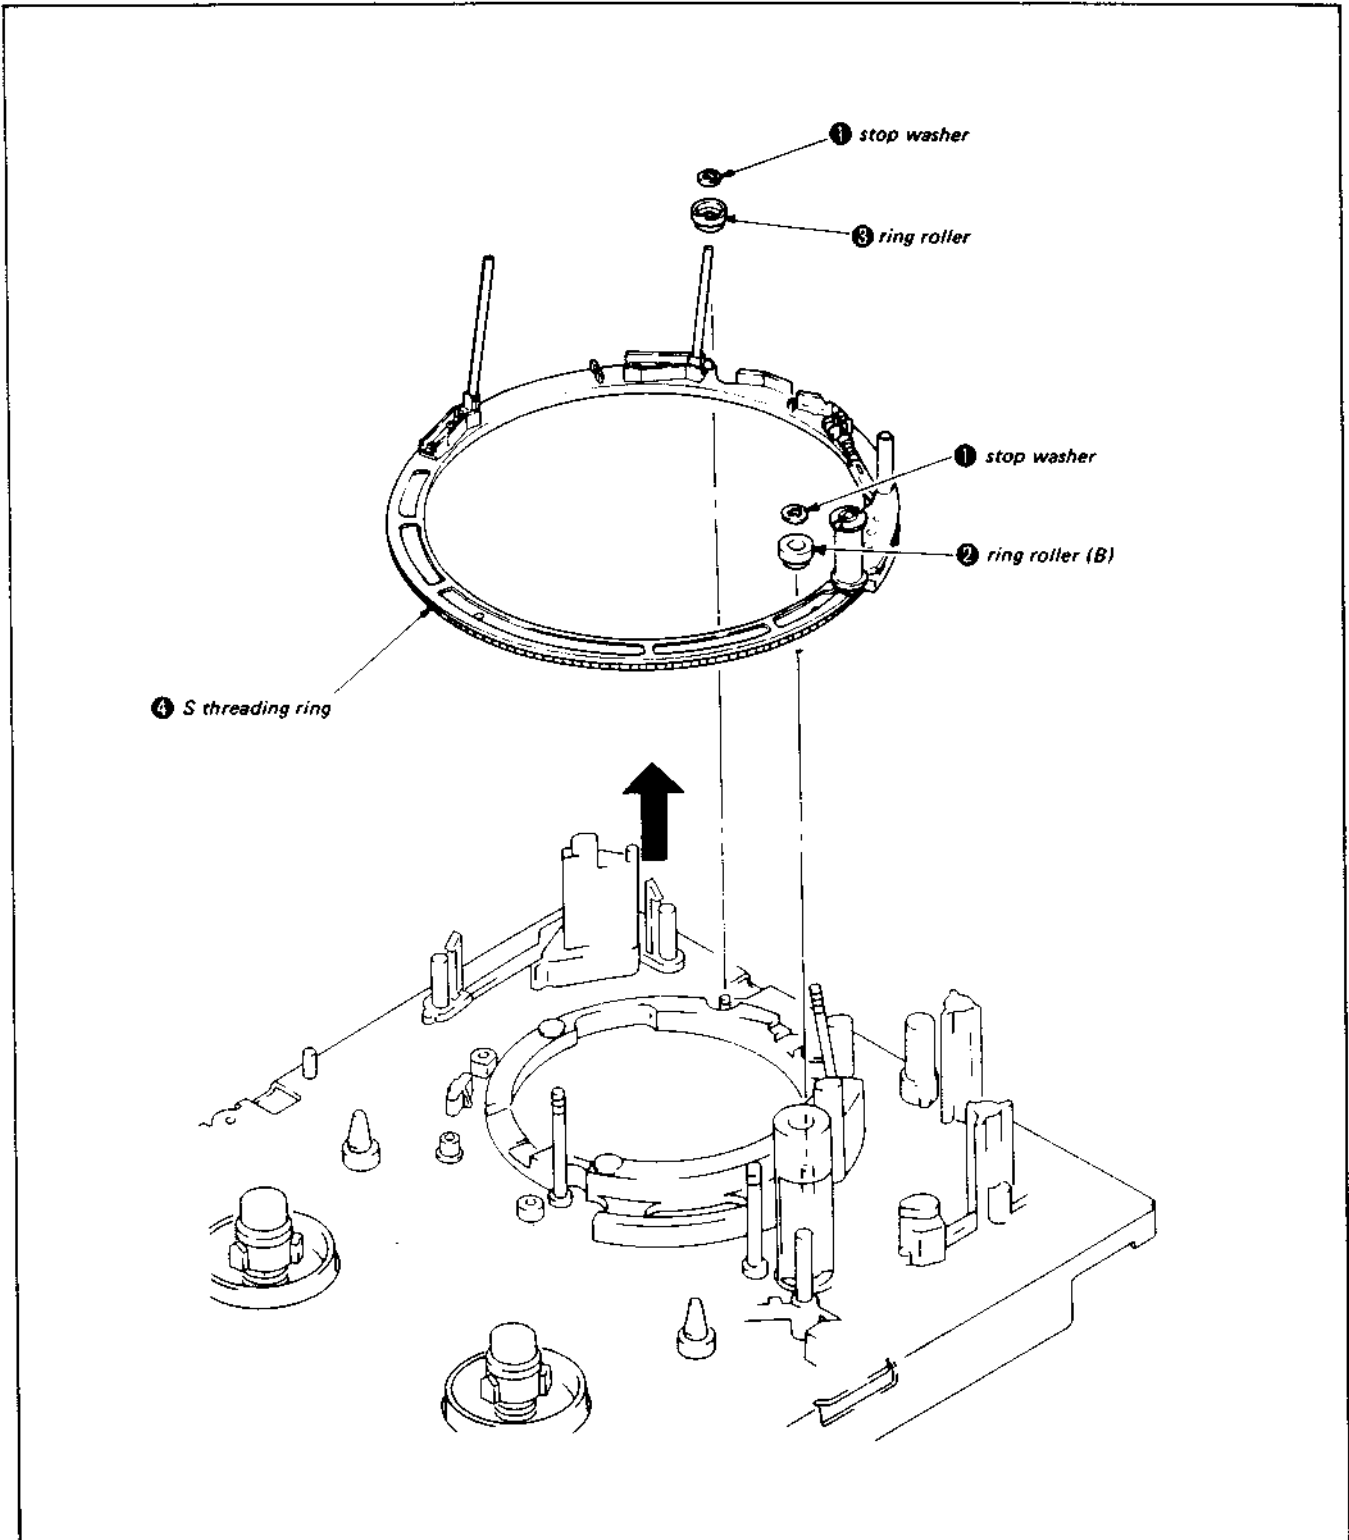


Fig. 3-20. Removal of the S threading ring

3-9-4. S Threading Ring Mounting and Position Adjustment (Fig. 3-21)

- 1) Set the slider gear assembly ① in the unthreading completed position.
(Slider gear assembly ① set so that it is up against part T slider stop mold ②.)
- 2) In this condition, fit the S threading ring ③ into place, match the chassis hole (3ϕ) ④ of part A with the S threading ring hole (1.5ϕ) ⑤ and mesh with the drive gear assembly ⑥ teeth.
- 3) Attach ring roller (B) ⑦ and fix in place with a stop washer ⑧.

Note:

After replacement and mounting are completed, adjust the ACE assembly as explained in the section on tape path adjustment.

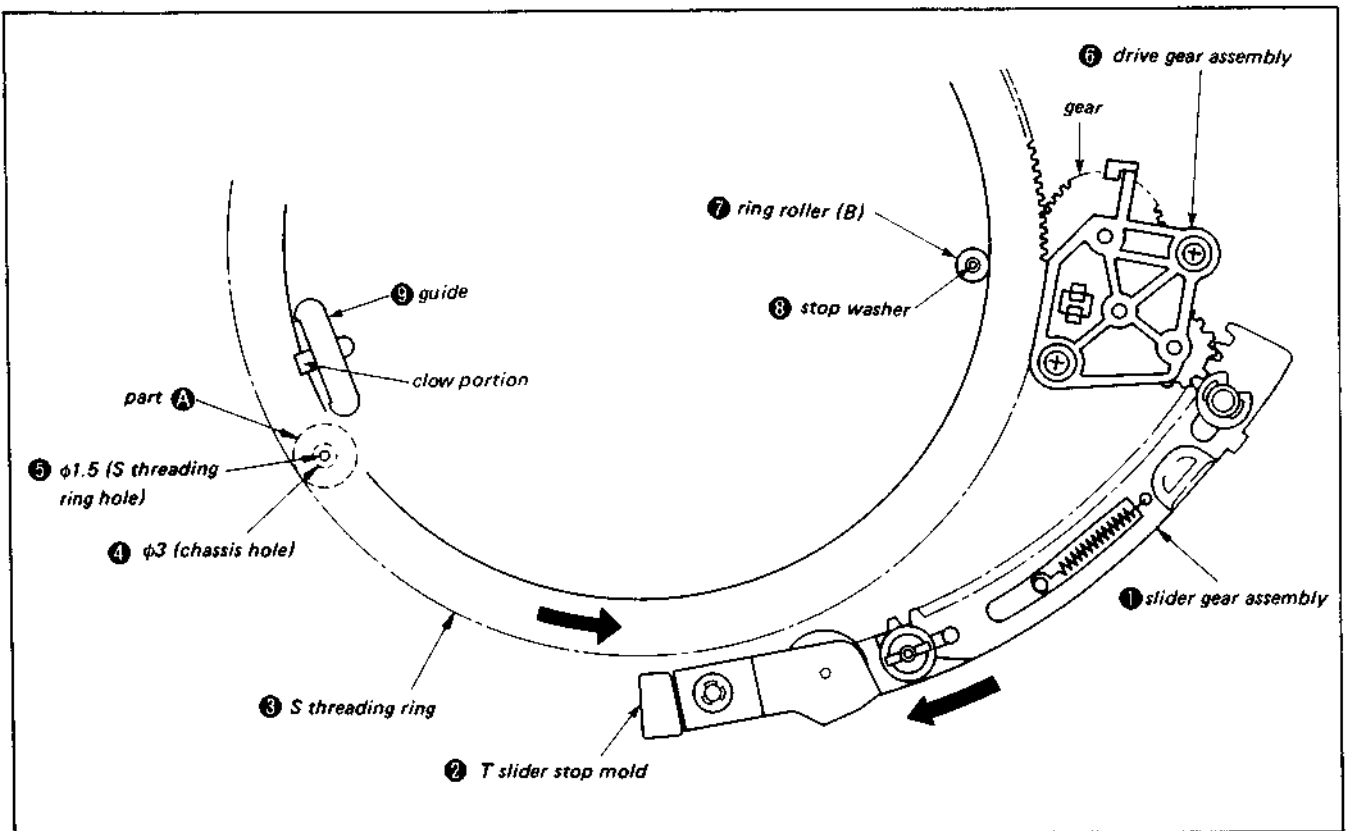


Fig. 3-21. S threading ring position adjustment

3-10. PINCH SNAP-FIT LIMITER GAP CHECK AND ADJUSTMENT

[Method of checking]

- 1) Set in the threading completed condition.
- 2) With the plunger pushed in all the way, confirm that the thickness of the pinch snap-fit limiter gap is 0.4 mm to 0.6 mm. If it is not, adjust as explained under [method of adjustment] below.

[Method of adjustment]

- 1) With the pinch solenoid in the absorbed condition (when the plunger is pushed in all the way), loosen the adjustment screw ①.
- 2) Press the pinch limiter adjustment plate ③ in the direction of arrow ② with an ordinary screwdriver ②, as in section A in the diagram, and adjust until the thickness of the gap in 0.4 mm to 0.6 mm. Tighten the adjustment screw and then lock it to fix everything in place.

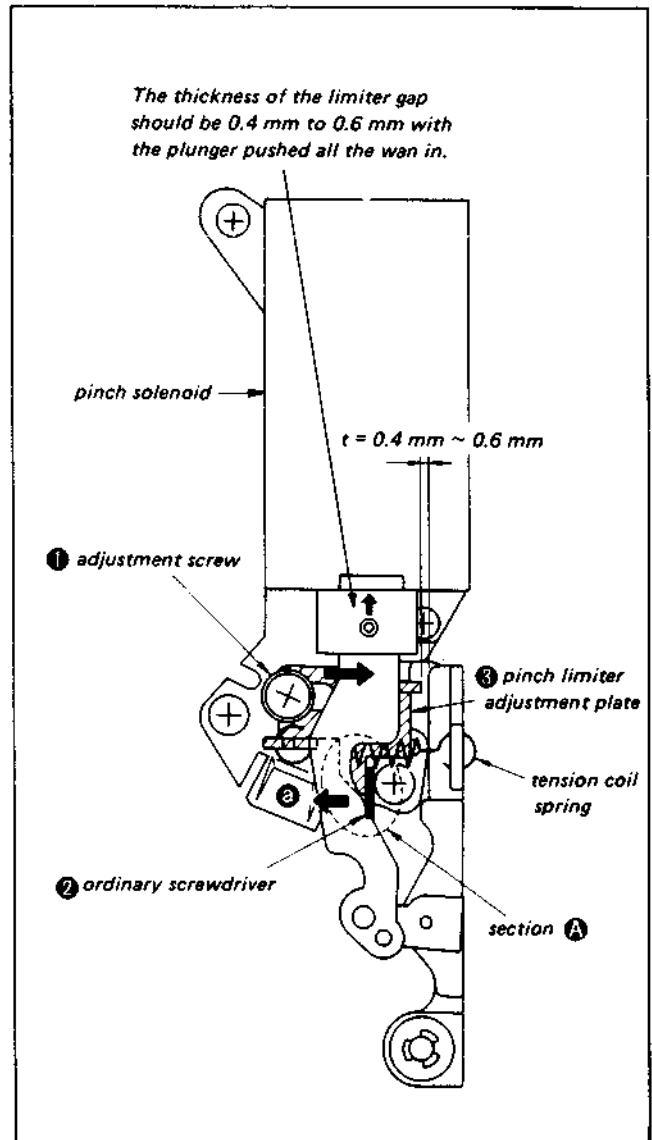


Fig. 3-22. Pinch snap-fit limiter gap adjustment plate

3-11. THREADING END SWITCH AND T COIL SENSOR

3-11-1. Threading End Switch (TE Switch) Position Check and Adjustment

[Method of checking]

Turn the S threading ring manually. Check to make sure that, when the lock roller moves from above the straight line part of the notch in the ring (Fig. 3-23 section A) to 1/3 of the way down it and back, the TE switch turns ON and OFF.

If the lock roller has to move outside of this range before the switch will turn ON and OFF, adjust as explained below.

[Method of adjustment]

- 1) Set the lock roller between the top of the notch in the S threading ring and 1/3 of the way down it turn the TE switch in the direction of the arrow and, when the switch turns ON, fix the TE switch in place.
- 2) When the adjustment is completed, repeat the check as described above [method of checking].

[Removal]

- 1) Remove the tension coil spring that is attached to the S coil sensor assembly, then remove the S coil sensor.
- 2) Remove the lock arm assembly in the direction of arrow A.

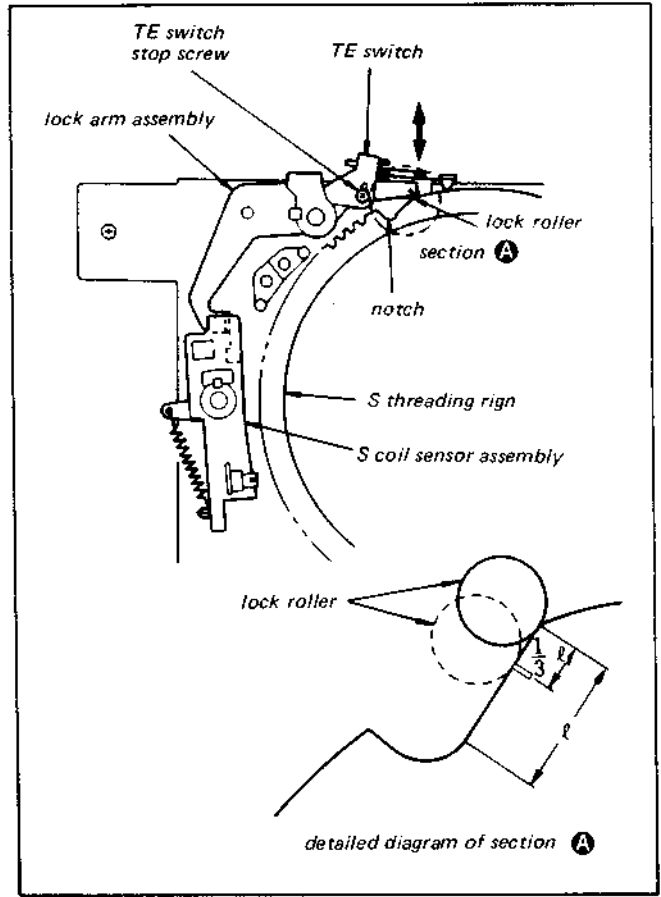


Fig. 3-23. TE switch position adjustment

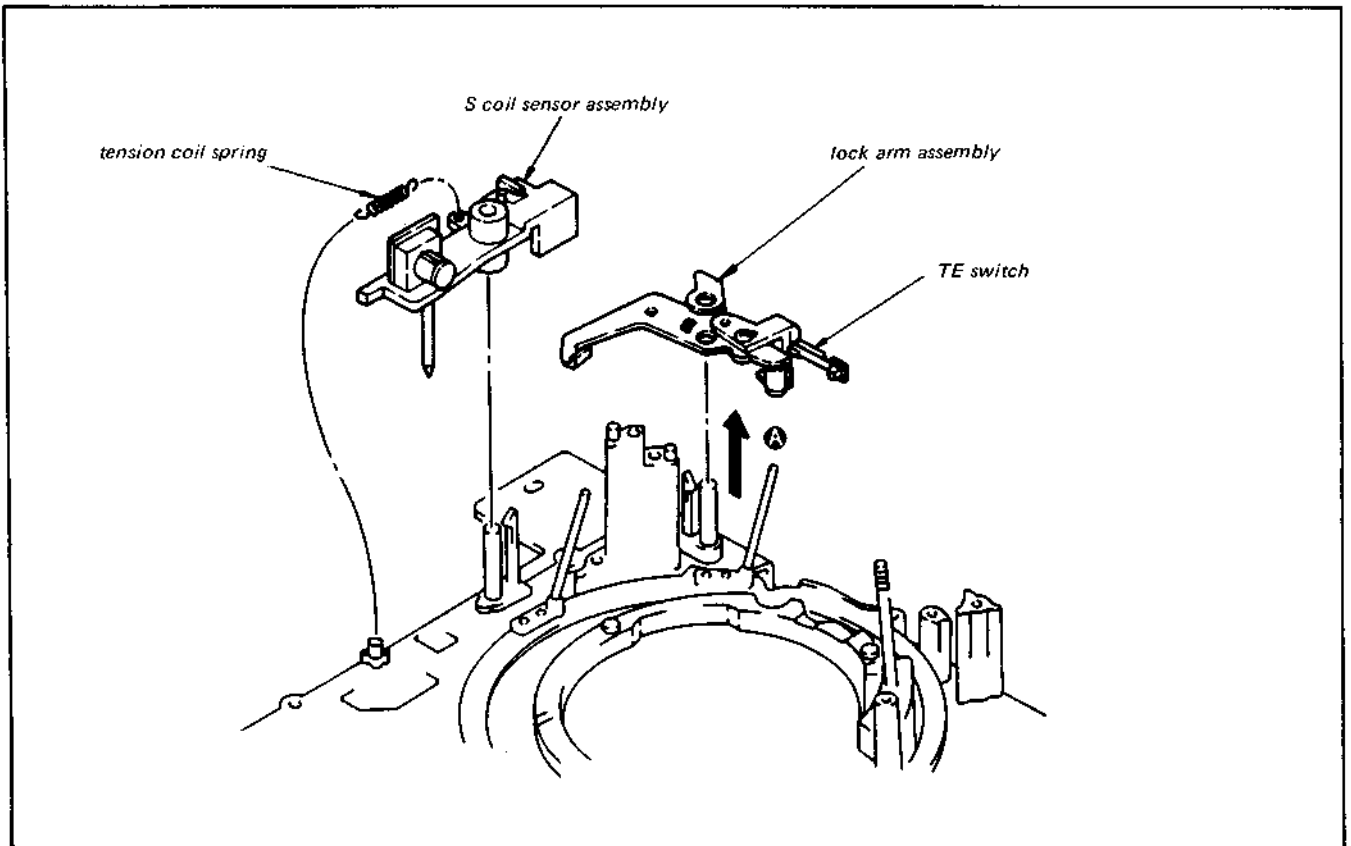


Fig. 3-24. Removal of the TE switch assembly and lock arm assembly

3-11-2. T Coil Sensor Mounting and Operation Check

[Method of checking]

Confirm that T coil sensor link ② is pressed and T coil sensor ③ moves in the direction of arrow ⑤ when the T slider gear assembly ① is moved in the direction of arrow ④.

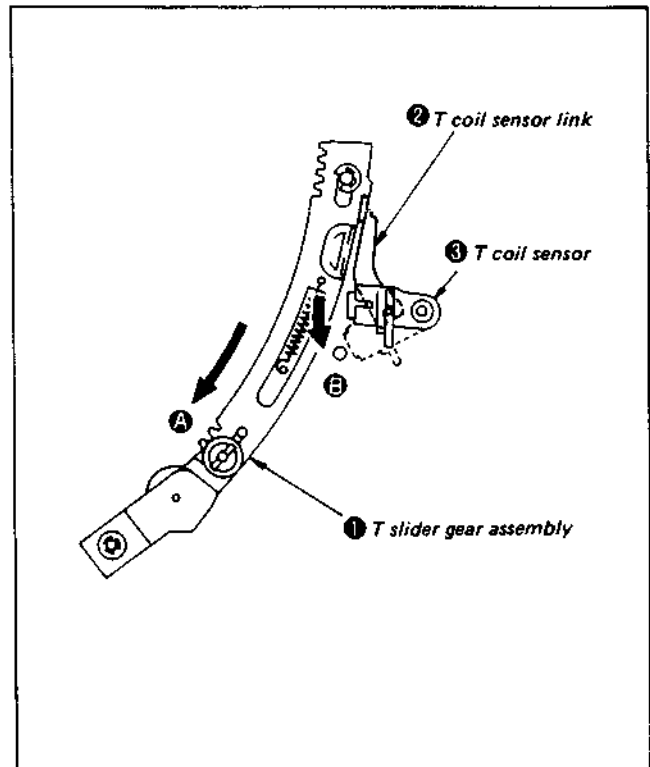


Fig. 3-25. T coil sensor operation check.

[Method of mounting]

- 1) Place T coil sensor link ① in the prescribed position.
- 2) Match up the T coil sensor ② hole with the chassis shaft ③ and insert. Place so that it engages with T coil sensor link ①.
- 3) Hook the tension coil spring ④ on the T coil sensor and chassis claw.

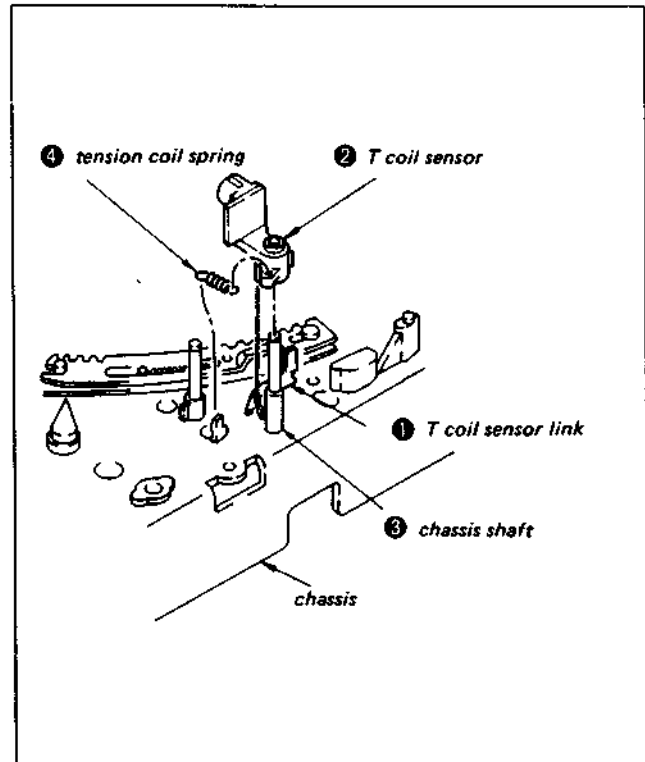


Fig. 3-26. T coil sensor link and T coil sensor mounting.

3-12. REMOVAL AND ADJUSTMENT OF THE REEL BLOCK ASSEMBLY

3-12-1. Removal of the Reel Block Assembly

- 1) Place the set upside down.
- 2) Remove the four screws ①.
- 3) Remove the reel block assembly ② in the direction shown by the arrow.

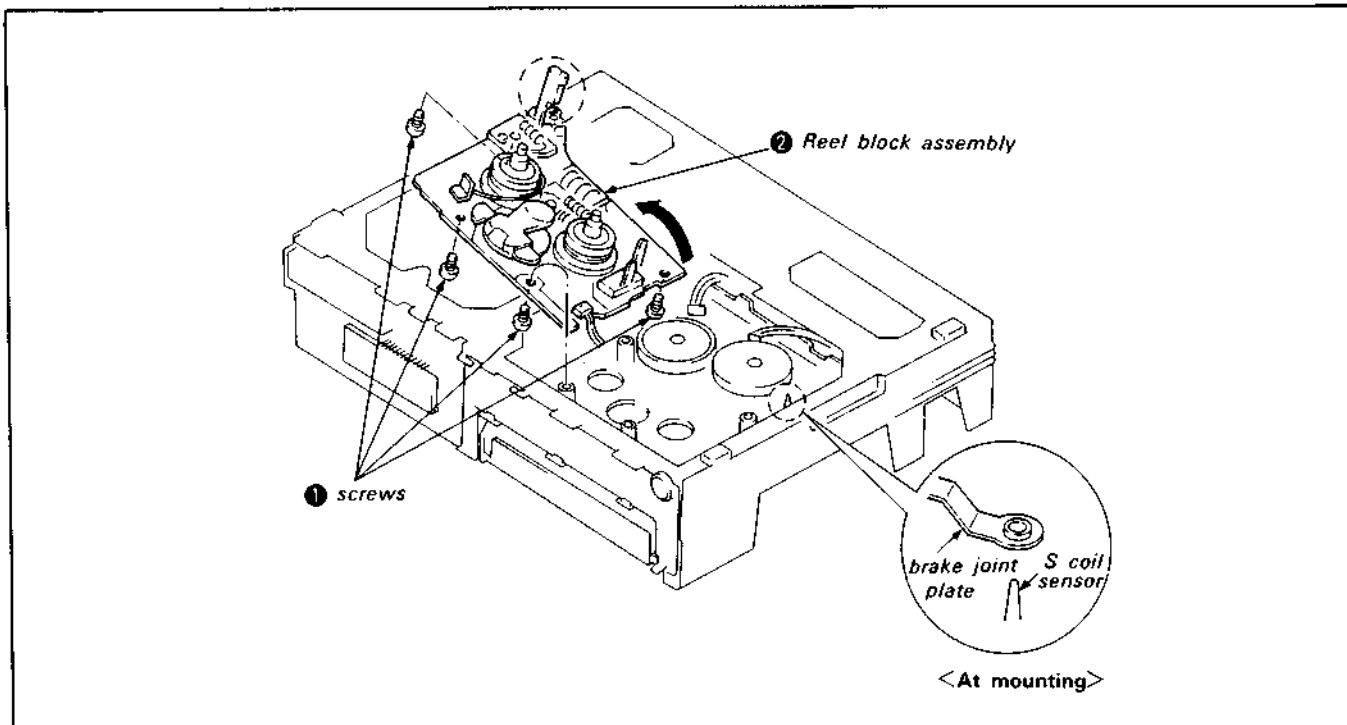


Fig. 3-27 Removal of the reel block assembly

3-12-2. Adjustment of the Position of the Tension Regulating Lever

[Method of adjustment]

- 1) Loosen the adjustment screw ①.
- 2) Adjust by moving the tension regulating band assembly in the direction of arrow A so that the point B of the function lever coincides with the left edge of the hole ② in a straight line.
- 3) After adjustment, tighten the adjustment screw, being careful that the tension regulating band assembly does not move.

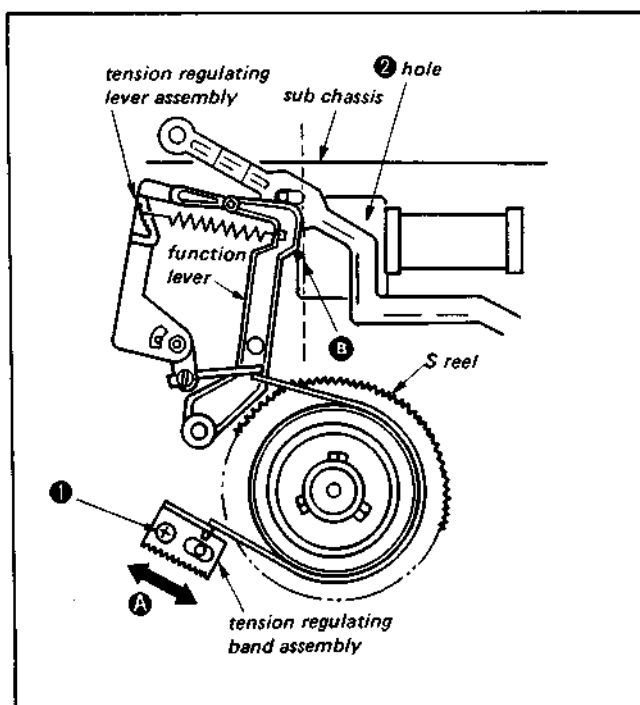


Fig. 3-28 Adjustment of the position of the tension regulating lever

3-13. ADJUSTMENT OF THE FORWARD BACK TENSION

[Method of measurement]

- 1) Insert the torque cassette (SL-0003C) and put the unit in playback mode.
- 2) Read the value on the meter on the S reel side after the needle has gone around about once.
The correct value is $35\text{g}\cdot\text{cm} \pm 3\text{g}\cdot\text{cm}$

Notes:

- i) The set must be perfectly level during this measurement.
- ii) After the measurement, the tape can become slack when the stop button is pressed. If this happens set the unit in forward mode to take up the slack before removing the tape.

[Method of adjustment]

Move the position of the tension coil spring that is hooked on the tension regulating lever assembly in the direction of arrow **A** until the measured value falls within the correct range.

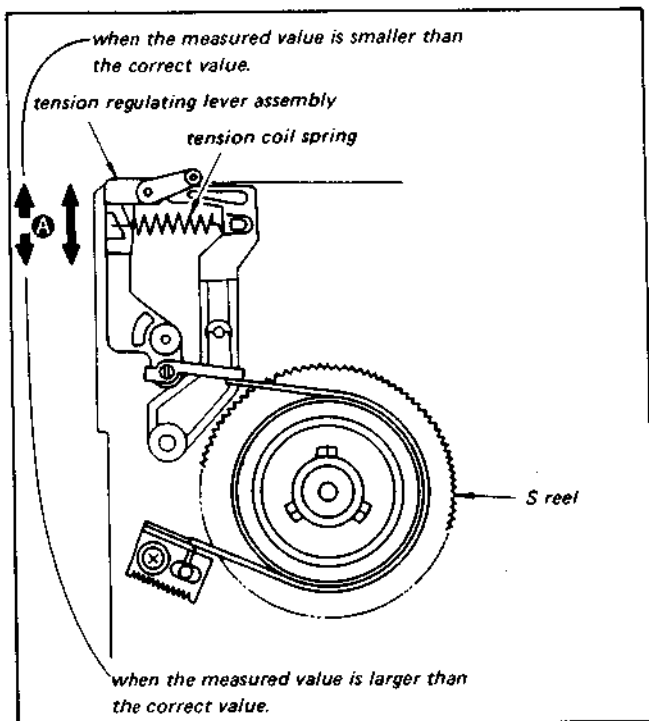


Fig. 3-29 Adjustment of the back tension

3-14. ADJUSTMENT OF THE FORWARD TORQUE

[Method of measurement]

- 1) Insert the torque cassette (SL-0003C) and start to record a telecast.
- 2) Read the value on the meter on the T reel side after the needle has gone around about once. The correct range is $80\text{g}\cdot\text{cm} \pm 5\text{g}\cdot\text{cm}$.

[Method of adjustment]

- 1) Remove the front panel.
- 2) Turn potentiometer RV306 on SA-13 board to adjust the torque until its value falls within the correct range.

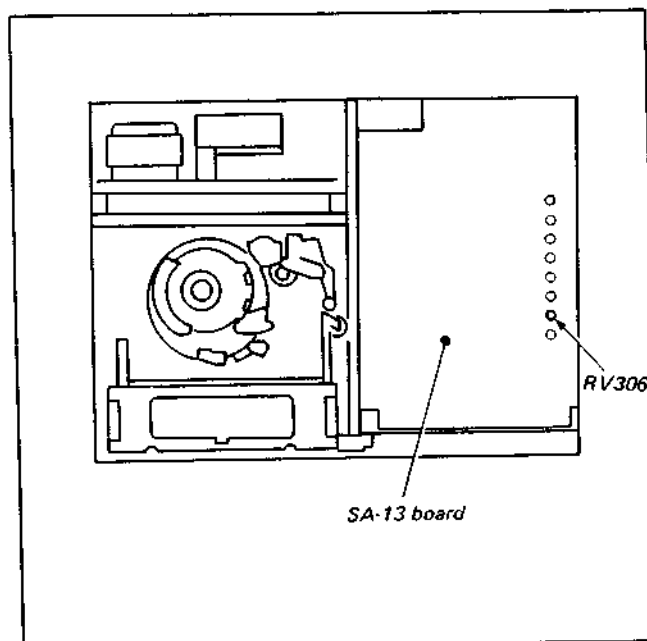


Fig. 3-30. Adjustment of the forward torque

Note:

When the forward torque is weakened during the measurement the tape can become slack, in which case the set will go into emergency stop mode. In such a case, the only switches that will work are the cassette eject switch and the power switch. It is necessary to temporarily remove the cassette, or to turn the power OFF and back ON.

4. TAPE PATH ADJUSTMENT

4-1. TRACKING ADJUSTMENT

This adjustment has a large effect on the picture quality in each mode and on the interchangeability of tapes, so it should be done carefully.

4-1-1. Preparation for adjustment

4-1-2. Entrance side Adjustment

4-1-3. Exit side Adjustment

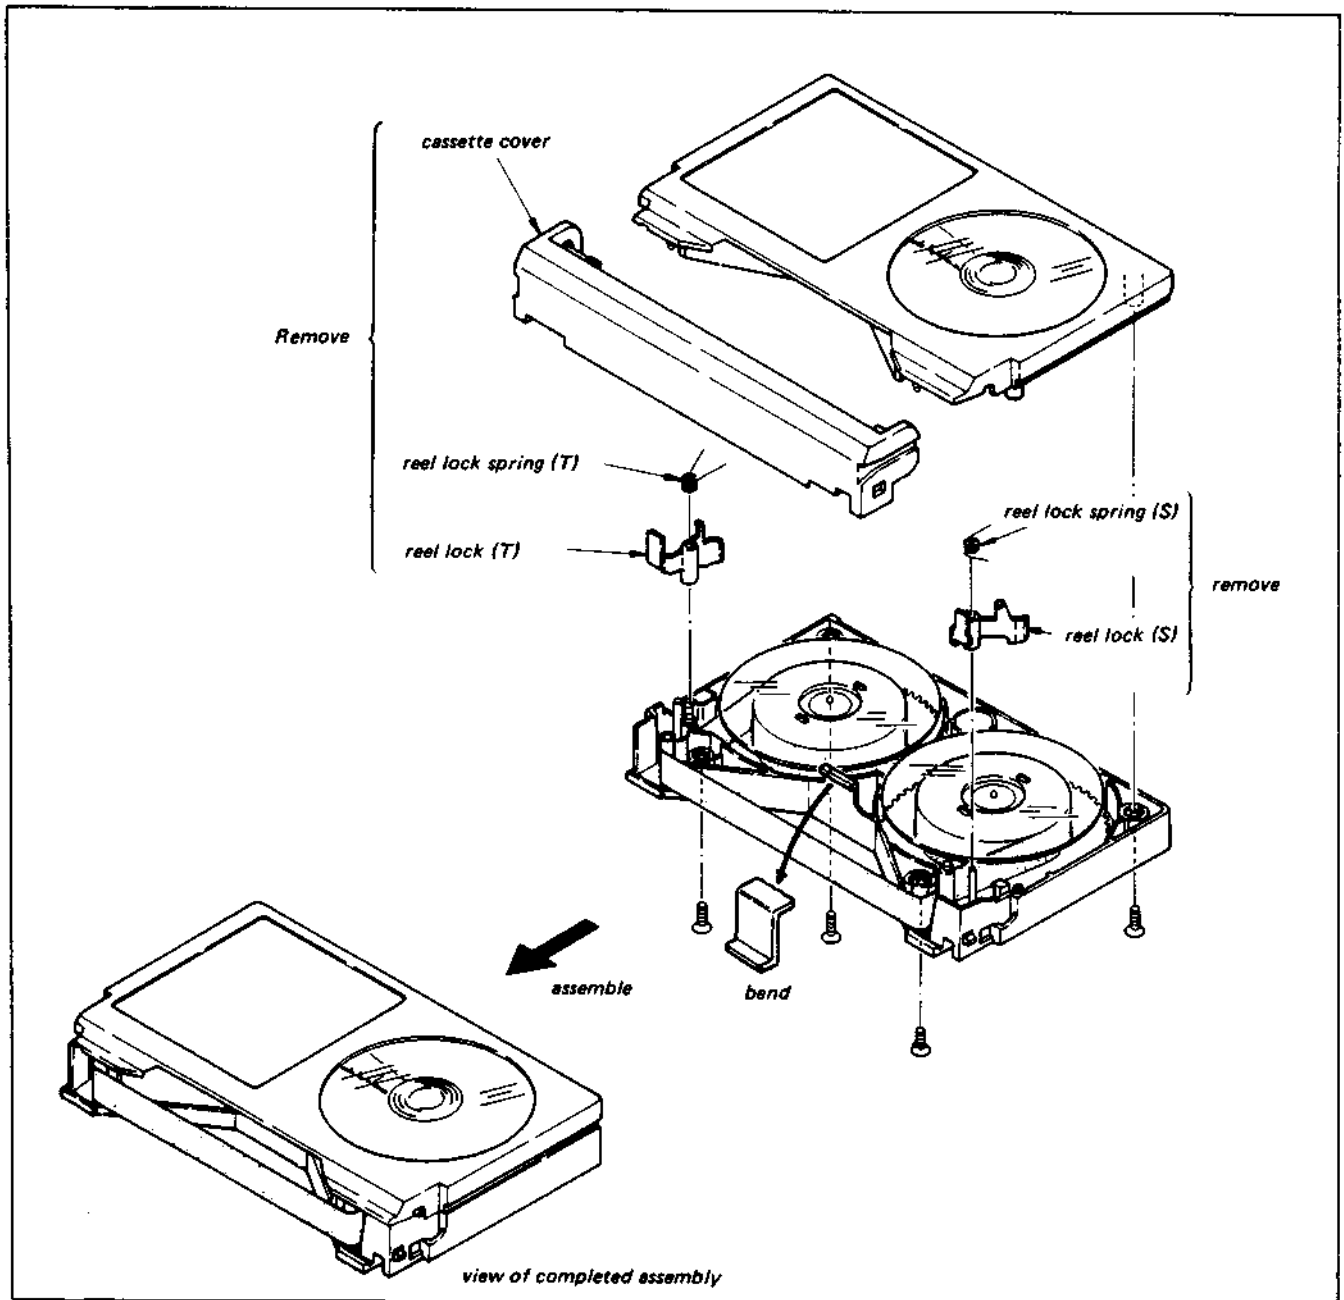


Fig. 4-1.

4-1-1. Preparation for Adjustment

- 1) Remove the cassette cover of the alignment tape in accordance with Fig. 4-1.
- 2) Clean the surface contacted by traveling tape (tape guide, drum tape trailing surface capstan shaft pinch roller, ACE FE head surface) with a chamois cloth dipped in methanol.
- 3) Connect the oscilloscope as follows:
Channel 1: JW42 or Pin ⑭ of IC5 (VT-1 board)
External trigger: JW43 or Pin ③ of B2 (VT-1 board)
- 4) Play back the 1 kHz signal on the tracking section of the alignment tape.
- 5) Confirm that the oscilloscope radio frequency output waveform is flat and that the amplitude is a maximum. (Turn the tracking knob right and left to increase and decrease the amplitude while the waveform remains flat.) When the amplitude of the waveform is a maximum, confirm that the fluctuations and contact of the radio frequency output waveform meet the standards given in Fig. 4-2. If they do not, go through the procedure given in step 6).
- 6) If the entrance waveform cannot be made flat, as shown in Fig. 4-3 (a), by turning the tracking knob, go through the "entrance side adjustment" described in 4-1-2, if the exit waveform shown in Fig. 4-3 (b) cannot be made flat, go through the "exit side adjustment" in 4-1-3.

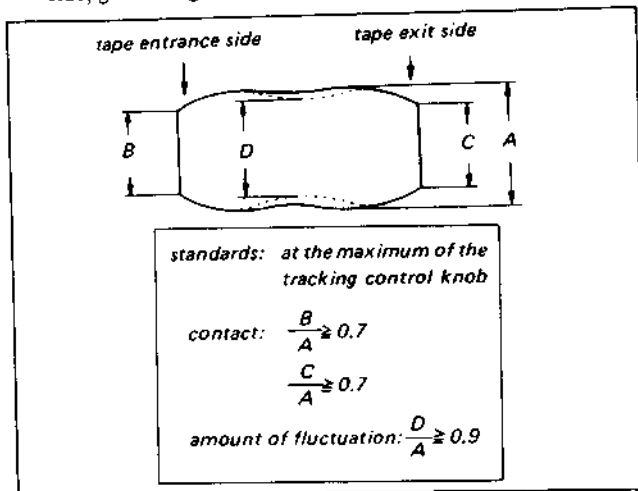


Fig. 4-2.

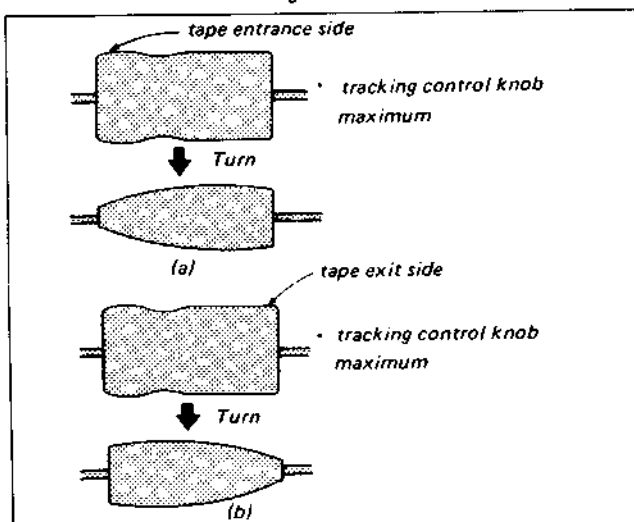


Fig. 4-3.

4-1-2. Entrance Side Adjustment

Whenever the entrance side adjustment is performed, the exit side adjustment must also be performed. The various tape guides and adjustment positions are shown in Fig. 4-5.

- 1) Turn the No. 6 guide counterclockwise to free the movement of the tape as it enters the drum.
- 2) Turn the tracking control knob until the amplitude of the waveform is about 60% of its maximum.
- 3) Loosen No. 5 guide lock screw ① and turn the No. 5 guide until the entrance waveform sticks up a little above flat, as shown in the figure below. Then tighten the No. 5 guide lock screw ① (Fig. 4-6).

Note:

After tightening No. 5 guide lock screw ①, confirm that it is as in the figure below.

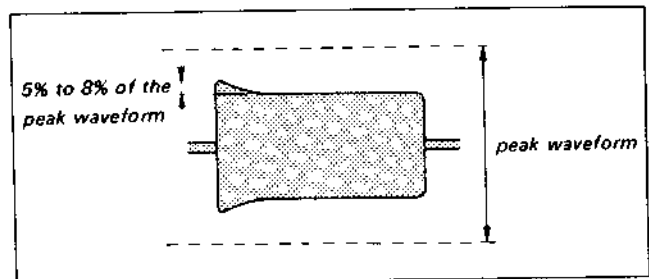


Fig. 4-4.

- 4) Next, lower the No. 6 guide until the waveform is flat.
- 5) Press the tape down between the No. 4 and No. 5 guide with a finger to lower the entrance side radio frequency waveform, then let go and confirm that the waveform returns to what it was before.
- 6) In this condition, check the clearance and curl of the No. 5 guide. If there are clearance and curl, adjust as explained in subsequent sections.

Note:

The tape tension between the No. 3, No. 4 and No. 5 guides must be balanced. If it is not, adjust the tilt of the No. 3 and No. 5 guides. If the waveform cannot be made to look as shown in Fig. 4-4, or if when the tape is pressed and released on the entrance side it takes time for the waveform to return to what it was before, or if it does not return to what it was before, adjust according to the instructions given below.

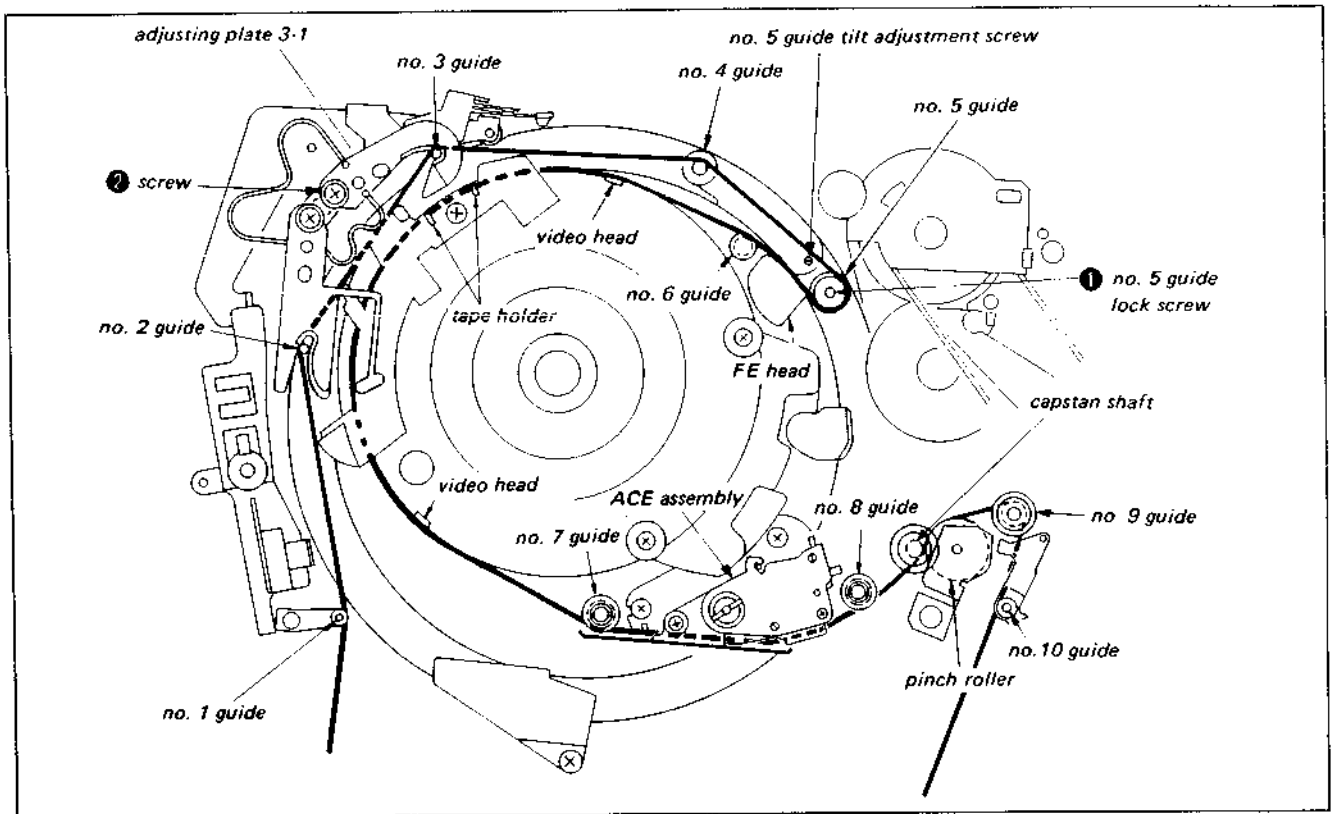


Fig. 4-5. Tape guide layout diagram

[What to do when the waveform entrance output will not rise]

- i) Check to see if the up-down tension between the No. 3, No. 4 and No. 5 guides is uniform. If it is not, adjust the tilt of the No. 3 and No. 5 guides.

Note:

The lower flange of the No. 4 guide must not protrude.

- 2) Raise the lower flange of the No. 4 guide to raise the entrance output.

Note:

It is sufficient to raise the lower flange of the No. 4 guide to 0.4 mm from its lowest position (within a rotation angle of 360°).

- 3) If the operation performed in step 2) fails to raise the waveform output, turn the No. 5 guide tilt adjustment screw slightly to the left, and the entrance output should rise.

[What to do when the waveform entrance output will not drop]

- 1) Remove the adjusting plate 3-1 of the No. 3 guide from the drum. Just before the lower tension of the tape becomes slack, tighten screw (2).
- 2) If the tape is in contact with the lower flange of the No. 4 guide, lower the flange. If the tape is sticking up from the lower flange, adjust the tilt of the No. 5 guide so that the tape does not stick up from the lower flange of the No. 4 guide.

[What to do when there is a clearance in the No. 5 guide]


Turn the No. 4 guide counterclockwise to run the tape upward and eliminate the clearance in the No. 5 guide.

Note:

At this time make sure that a large curl is not produced below the No. 4 guide.

[What to do when there is a curl]

- 1) When there is a gap below the No. 4 guide: Just before the lower tension on the tape becomes slack, move adjusting plate 3-1 of the No. 3 guide to the outside.
- 2) When there is not a gap below the No. 4 guide (when there is a curl below the No. 4 guide):
 - i) Check to see if the No. 4 guide has been raised up too high. If it has been raised up too high, turn the adjusting plate clockwise to lower the No. 4 guide.
 - ii) If the curl still has not been removed after i), tighten the No. 5 guide tilt adjustment screw in the clockwise direction until the curl is removed.

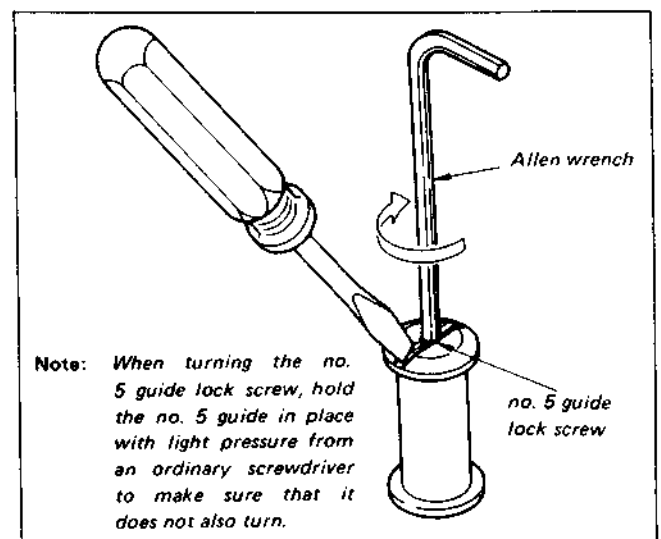

Note: When turning the no. 5 guide lock screw, hold the no. 5 guide in place with light pressure from an ordinary screwdriver to make sure that it does not also turn.

Fig. 4-6.

4-1-3. Exit Side Adjustment

- 1) Connect the oscilloscope to JW42 or Pin ⑭ of IC5 (VT-1 board). Connect the external trigger to JW43 or Pin ③ of B2 (VT-1 board).
- 2) Play the tracking section of the alignment tape. Adjust the tracking knob to reduce the amplitude of the radio frequency output waveform to 60% of its maximum level.
- 3) Watch the radio frequency output waveform when the No. 7 and No. 8 guides are raised (by turning the respective guide nuts counterclockwise) to let the tape run free. This waveform is called to exit free waveform.

Note:

Be careful not to raise the guides too far. They should be raised only about 0.2 to 0.3 mm, and the tape should not contact the lower flange of the AEC head.

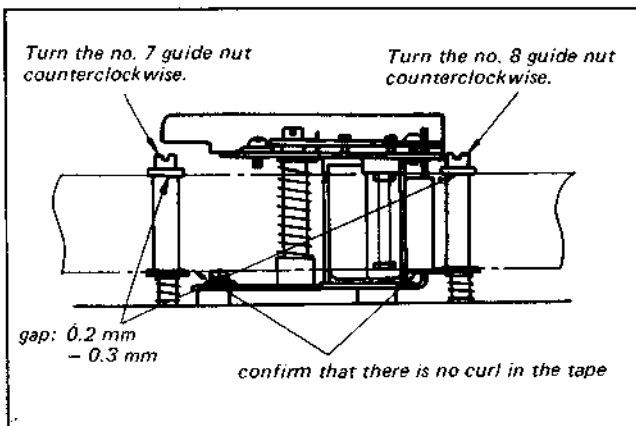


Fig. 4-7.

- 4) At this time, confirm that the exit free waveform is within the range shown in Fig. 4-8 (a) and (b).
 - If it is outside of this range, adjust according to the procedure in 4-3.

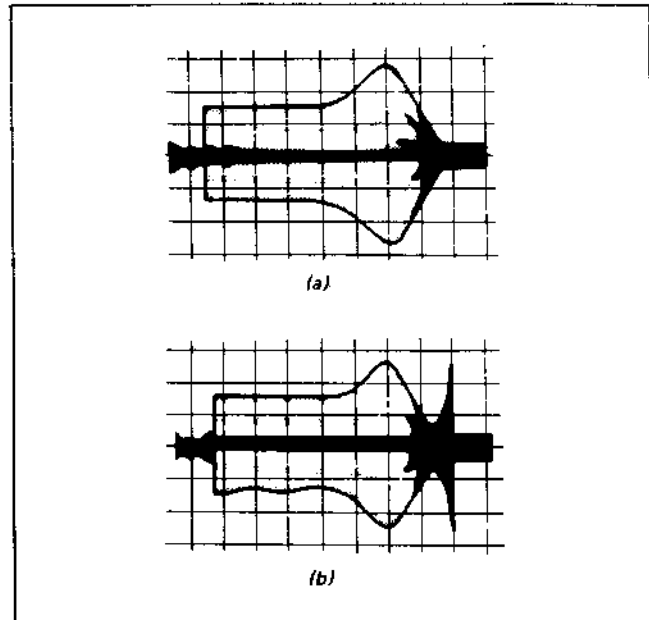


Fig. 4-8.

- 5) Turn the No. 7 guide nut clockwise until the waveform is flat.
- 6) Turn the No. 8 guide nut clockwise until the No. 8 guide is lined up with the tape (just before the waveform starts to change lower the guide until there is no curl).
- 7) During playback, confirm that no curl occurs in the No. 7 guide or the No. 8 guide.
- 8) During rewind, confirm that no curl or clearance occurs in the No. 8 guide. If there is curl or clearance, adjust using the No. 9 guide. After adjustment, lock the guide nut.

4-2. ADJUSTMENTS AFTER REPLACEMENT OF THE ACE ASSEMBLY

After removal or replacement of the ACE assembly perform the adjustments listed below.

- 4-2-1. Exit side tracking adjustment
- 4-2-2. CTL head (ACE assembly) position adjustment
- 4-2-3. Audio head (ACE assembly) azimuth adjustment
- 4-2-4. Audio head (ACE assembly) height adjustment

4-2-1. Exit Side Tracking Adjustment

- 1) Set the parallel plate (SL-0657 in the list of fixtures and tools) up against the unit as shown in Fig. 4-9, and turn the tilt adjustment screw to adjust the audio head vertically.

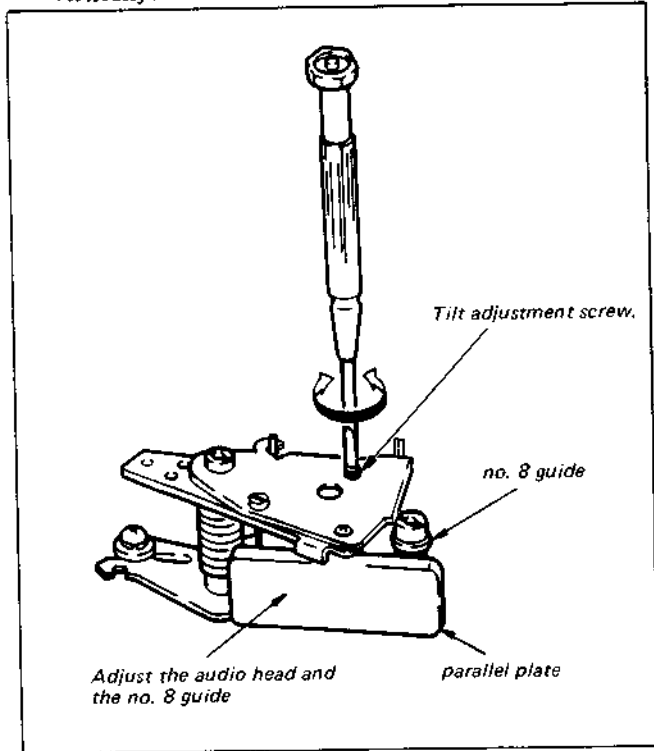


Fig. 4-9.

- 2) Connect the oscilloscope to JW42 or Pin ⑭ of IC5 (VT-1 board). Connect the external trigger to JW43 or Pin ③ of B2 (VT-1 board)
- 3) Play the tracking section of the alignment tape. Turn the tracking knob counterclockwise until the radio frequency output waveform amplitude is reduced to about 60% of its maximum level.
- 4) Raise the No. 7 and No. 8 guides (turn the respective guide nuts counterclockwise) and observe the radio frequency exit free waveform when the tape runs free.

Note:

Be careful not to raise the guide too far. Raise it about 0.2 to 0.3 mm.

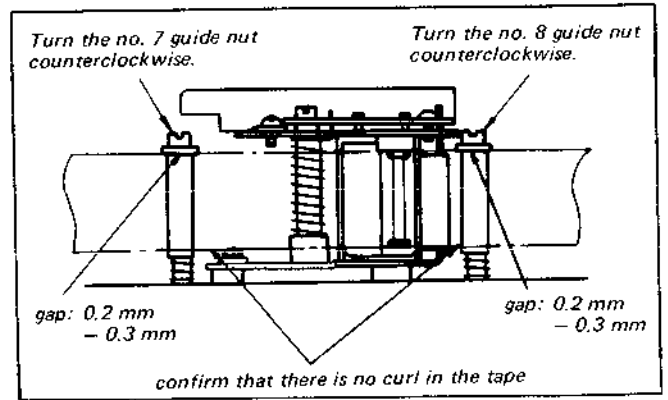


Fig. 4-10.

- 5) At this time, confirm that the exit free waveform is with the range shown in Fig. 4-11 (a) and (b).

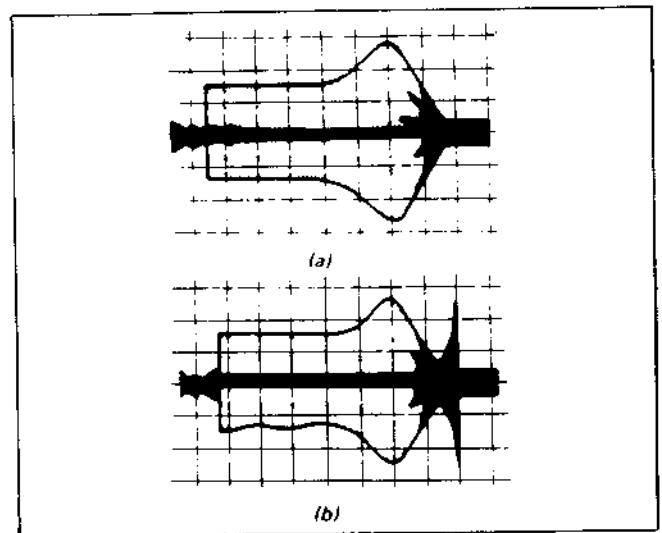


Fig. 4-11.

[When the waveform is outside this range]

- When the waveform is outside this range and has the form shown in Fig. 4-12, turn the tilt adjustment screw clockwise to adjust until the waveform is within the required range.

Note:

Complete the adjustment by turning the adjustment screw in the direction of tightening (clockwise).

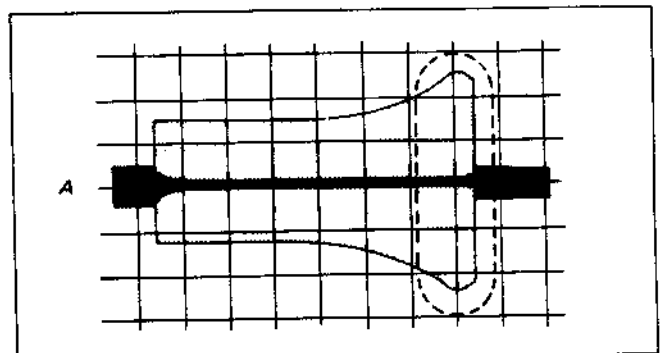


Fig. 4-12.

- When the exit free waveform is outside of the required range and has the form shown in Fig. 4-13, turn the tilt adjustment screw counterclockwise to produce waveform A (Fig. 4-12), then turn it clockwise to bring the waveform within the required range.

Note:

Finish the adjustment by turning the adjustment screw in the direction of tightening (clockwise).

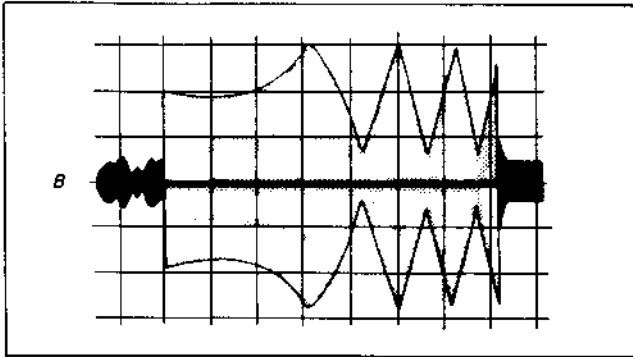


Fig. 4-13.


- Turn the No. 7 guide nut clockwise to flatten the waveform.
- Turn the No. 8 guide nut clockwise to line the No. 8 guide up with the tape (lower it so that there is no curl just before the waveform starts to change).
- If the radio frequency waveform is as shown in Fig. 4-12 on the exit side, repeat the adjustment.

4-2-2. CTL Head (ACE Assembly) Position Adjustment

This adjustment includes the mechanical CTL head mounting position adjustment and the electrical tracking control center adjustment. The tracking control center adjustment is to be performed first, followed by the mechanical adjustment of the head mounting position.

[Connections]

- Playback

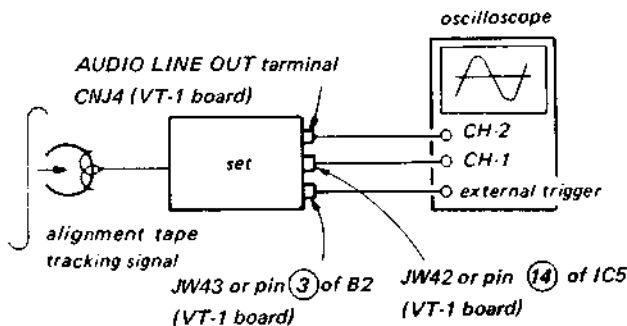

[Method of adjustment]

- Play the tracking signal section of the alignment tape.
- Turn the tracking control knob clockwise or counterclockwise to the center click position. Confirm that the amplitude of the radio frequency output signal is at its maximum level. Also confirm that the audio signal 0 level position occurs at the location of the channel B waveform. If the necessary standards are not met follow the method of adjustment 3), 4)

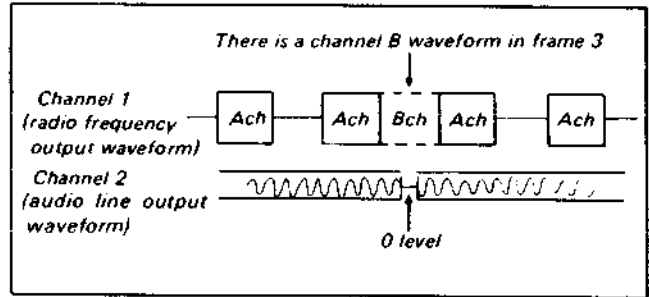


Fig. 4-14.

- Tracking center adjustment
Refer to electrical adjustment 3) in section 5-3-2.
- CTL head position adjustment
 - Set the tracking control knob at the center click position.
 - Loosen the 2 ACE assembly position adjustment screws, then use a tool such as an ordinary screwdriver to slide the ACE assembly to where the radio frequency output waveform amplitude becomes a maximum.
 - Play the color bar signal on the alignment tape and check the picture quality.
 - Tighten the position adjustment screws, then lock them.


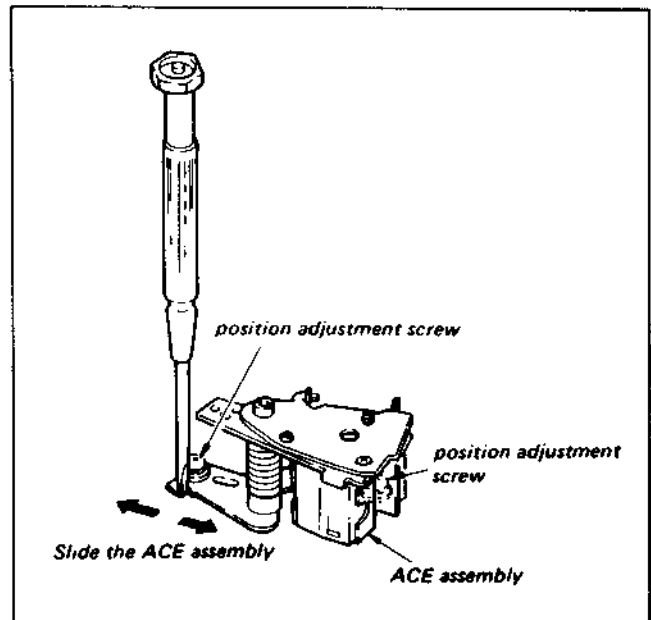


Fig. 4-15.

4-2-3. Audio head (ACE Assembly) Azimuth Adjustment

[Condition]

- 1) Playback

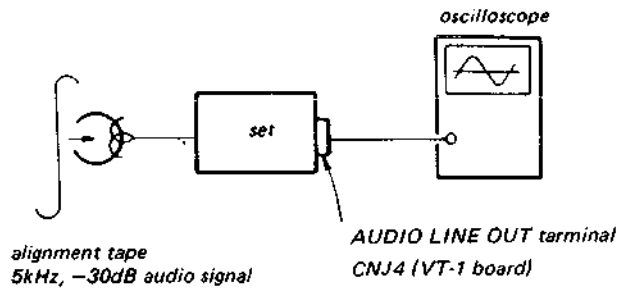

[Method of adjustment]

- 1) Play the 5kHz, -30dB audio signal section (RF sweep section) of the alignment tape.
- 2) Adjust the azimuth adjustment screw until the output level (amplitude of waveform) is a maximum.

Note:

Complete the adjustment by turning the adjustment screw in the direction of tightening (clockwise).

- 3) After adjustment, lock the adjustment screw.

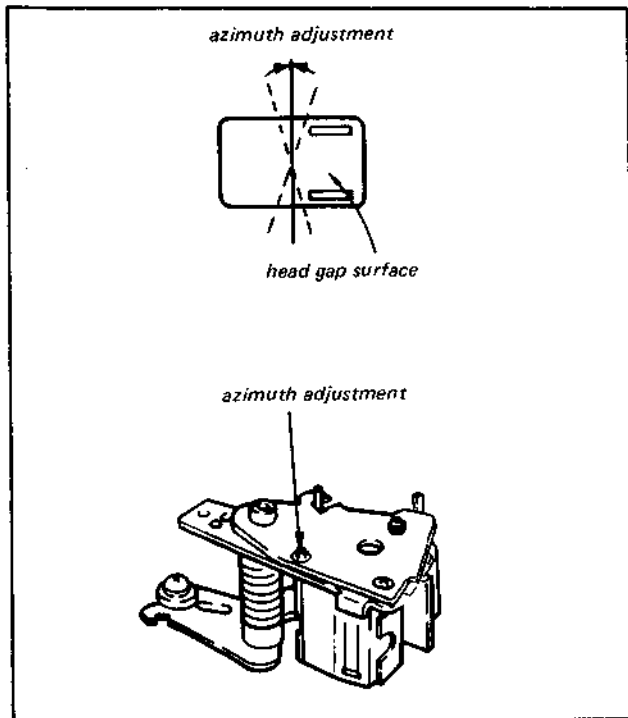


Fig. 4-16.


4-2-4. Audio Head (ACE Assembly) Height Adjustment

[Condition]

This adjustment must only be performed after the exit side tracking adjustment has been completed.

[Connections]

- 1) Playback

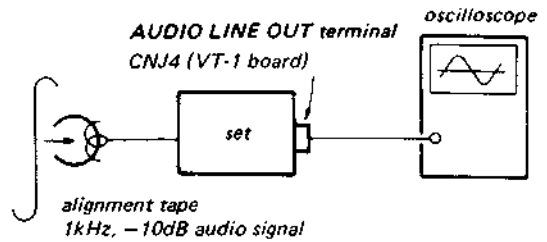

[Method of adjustment]

- 1) Play the 1kHz, -10dB audio signal section (Tracking section) of the alignment tape.
- 2) Adjust the height adjustment nut so that the amplitude of the audio line output waveform (1kHz) becomes a maximum.

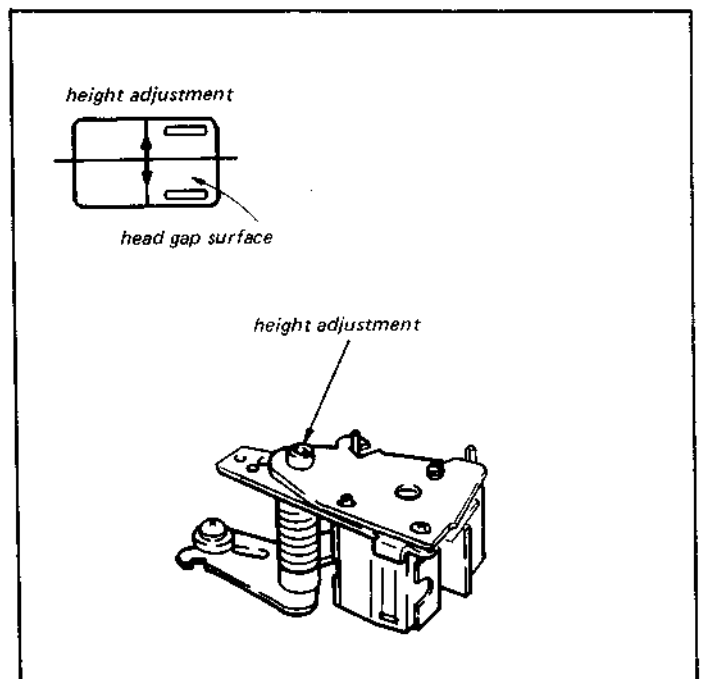


Fig. 4-17.

4-3. HOW TO INSPECT THE TAPE TRAVELING WHEN ADJUSTING THE TAPE PATH

Adjust and check the tape path using the alignment tape following the adjustment guide, then check the tape travel using the procedure below.

- 1) Get one L-830 reel ready (these are widely available commercially). Remove the cassette cover referring to Fig. 4-1 of the adjustment guide.
- 2) Run the L-830 tape in playback mode and check the following points.
 - i) Entrance side
Confirm that the tape contacts the upper flange of the No. 5 and No. 6 guides and the lower flange of the No. 4 guide, and is not damaged or bent. (Some tape curl is allowed but the tape must not be creased.) (Fig. 4-18)
 - ii) Exit side
Confirm that the tape contacts the upper flange of the No. 7 guide and the No. 8 guide. Confirm that the tape does not contact the upper or lower flange of the No. 10 guide, and is not scratched. (Some tape curl is allowed but the tape must not be creased.) (Fig. 4-19)
 - iii) If the tape was found not to be running correctly in step ii), readjust the tape path using the alignment tape, following the adjustment guide.
If the tape is not running correctly on the entrance side, refer to section 4-12 of the adjustment guide. If the tape is not running correctly on the exit side, refer to section 4-13 of the adjustment guide.

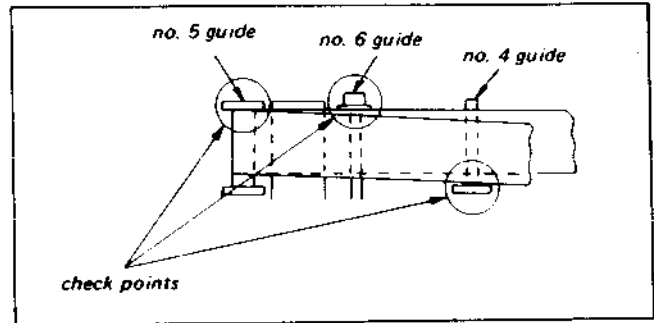


Fig. 4-18.

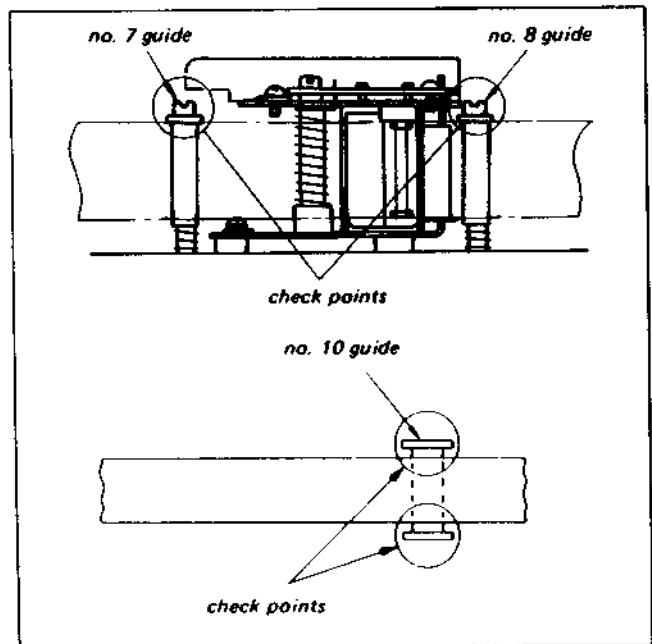


Fig. 4-19.

5. ELECTRICAL ADJUSTMENT

All the electrical adjustment can be performed by using the equipment mentioned below, the alignment tape, and the PAL colour bar signal (100%).

[Equipment Required]

- (1) PAL Colour Monitor TV
- (2) Oscilloscope, Dual-trace, Bandwidth... more than 10 MHz with delay mode
- (3) Frequency Counter
- (4) PAL Colour-Bar Generator
- (5) Digital voltmeter
- (6) Audio Signal Generator
- (7) Audio level meter (VTVM)
- (8) Attenuator
- (9) Alignment Tape, type: KR5-2H, Code No. 8-969-995-52
- (10) Alignment Tool (Adjusting screwdriver for semi-fixed resistors and coils)
Jig No. SL-0001, Code No. 7-700-733-01

[Setup for Adjustment]

The antenna should be connected correctly to the antenna input terminal of the videocassette recorder.

It is important that the video output signal satisfies the specification because the telecast signal received by the incorporated tuner of the videocassette recorder is utilized as the adjustment signal of the machine. The incorporated tuner should be set to the channel with the best reception. The video signal should be checked with an oscilloscope connected to VIDEO OUT (BNC connector). Verify that the sync signal amplitude is approx. 0.3 Vp-p and the video signal amplitude is approx. 0.7 Vp-p at peak. Adjust the fine tuning while observing the signal and the TV screen so that the burst signal amplitude becomes approx. 0.3 Vp-p \pm 0.1 Vp-p. Also confirm that there is not spikes observed at the sync signal portion. (See Fig. 5-1.)

The video (colour-bar) signal for the adjustment is shown in Fig. 5-1.

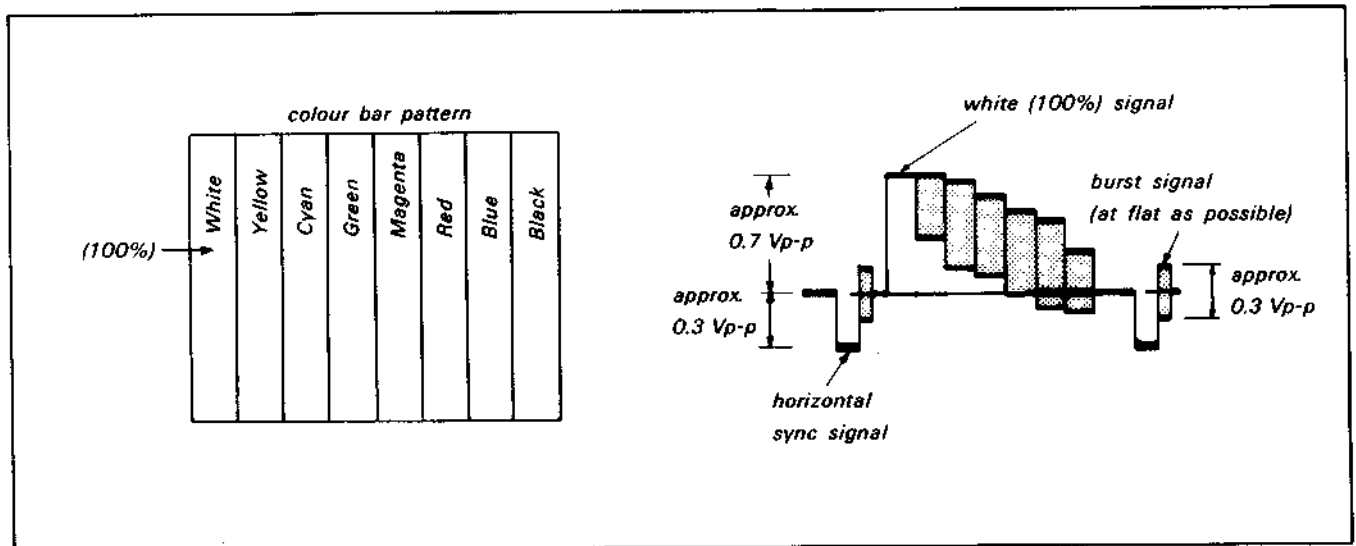


Fig. 5-1. Video (colour-bar) signal

[Alignment Tape]

KR5-2H

	Video signal	Audio signal	Playing time	Use for
1.	Colour bars	3 kHz -10 dB	5 min	General performance, tape speed checks, switching position adjustment.
2.	Monoscope	333 Hz -30 dB	5 min	Video head dihedral, audio level adjustment.
3.	RF sweep	5 kHz -30 dB	5 min	Video, audio frequency characteristics, audio azimuth adjustment marker: 1MHz, 2MHz, 3.58MHz, 4.5MHz, 5.2MHz
4.	Tracking 1 MHz (CH-A) *1 (Channel B is inserted in every 3 frames.)	1 kHz -10 dB *2 (Signal is dropped out in the positions where channel B is inserted.)	5 min	Tracking, Audio height adjustments CTL Position check (Check if *1 and *2 are the same position.)

[Alignment Tool for Semi-fixed Variable Resistors and Coils]

Semi-fixed variable resistors and inductances should be adjusted with the alignment tool exclusively prepared for the adjustment of the components. A common screwdriver is too large for adjusting the components from the conductor side of a printed circuit board.

The metal blade of the alignment tool is used for variable resistors and trimmer capacitors.

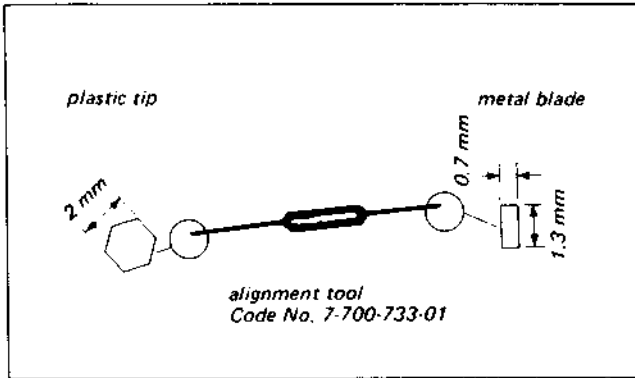


Fig. 5-2. Alignment tool

[Required levels and impedances of Input and Output]

Video

Input VIDEO IN: BNC connector
 $1V_{p-p}$ $+1.0$ -0.5 V_{p-p}
 75Ω unbalanced, sync negative
 VIDEO OUT: BNC connector
 $1V_{p-p} \pm 1.0$ V_{p-p}
 75Ω unbalanced, sync negative

Audio

Input AUDIO IN: phono jack
 47 kΩ, -10 dBs
 (0 dBs = 0.775V rms)
 Output AUDIO OUT: phono jack
 Load impedance less than 10 kΩ
 -10 dBs with 47 kΩ load unbalanced

[Colour Bar Signal]

The 100% colour bar signal recorded on the Alignment tape is shown in Fig. 5-3.


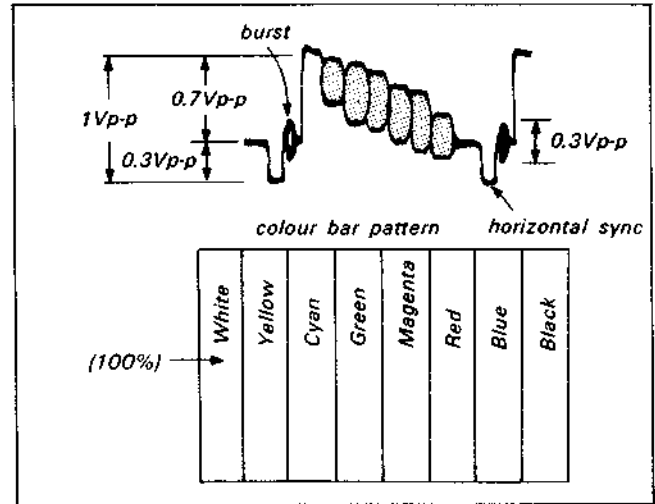


Fig. 5-3. Colour bar signal recorded on the alignment tape

[Adjustment procedure]

Adjust in the order given below.

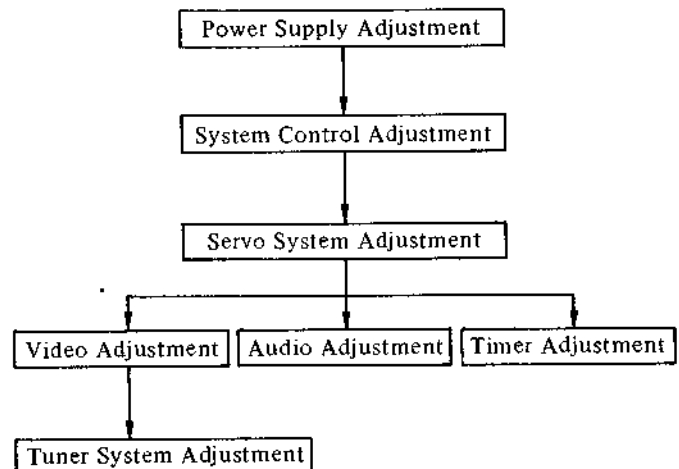

5-1. POWER SUPPLY CHECK (PS-92 Board)

The power requirement is 220 Vac ± 4.4 Vac (VOLTAGE selector: 220 V - 240 V) or 110 Vac ± 2.2 Vac (VOLTAGE selector: 110 V - 127 V).

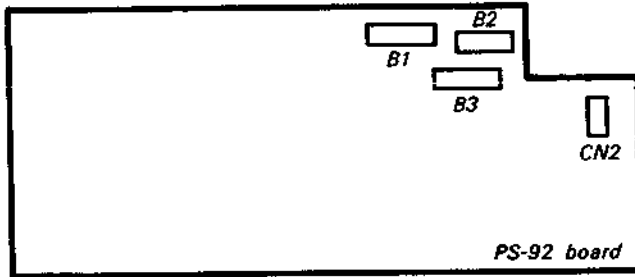


Fig. 5-4. Component layout (Conductor side)

Measure in STANDBY mode.

1. UN 12V Check
Pin ③ of CN2 shall be 12.3Vdc ± 0.2 Vdc
2. UN 40V Check
Pin ⑥ of B2 shall be 39Vdc ± 2 Vdc
3. UN-24V Check
Pin ⑤ of B2 shall be -24Vdc ± 2 Vdc

Measure in E-E mode (power supply switch ON).

4. SW12V (M) Check
Pin ② of B3 shall be 12.2 Vdc ± 0.2 Vdc
5. SW12V (E) Check
Pin ④ of B2 shall be 12.2Vdc ± 0.2 Vdc
6. SW9V Check
Pin ② of B2 shall be 9Vdc ± 0.1 Vdc

5-2. SYSTEM CONTROL CHECK (SA-13 Board)

1. Clock Frequency Check

Mode: E-E
Signal: None
Frequency counter: Pin ②⑥ of IC3
Check: $f = 4.05$ MHz ± 0.08 MHz

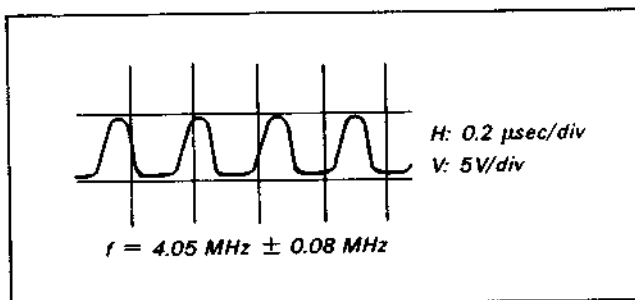


Fig. 5-5. System control check

5-3. SERVO SYSTEM ADJUSTMENT

Alignment Sequence:

- 5-3-1. Reel motor control system adjustment
- 5-3-2. Drum capstan servo system adjustment

5-3-1. Reel Motor Control System Adjustment

- 1) FWD Torque Adjustment (SA-13 Board)
See "Mechanical Adjustment"

5-3-2. Drum/Capstan Servo System Adjustment

- 1) Voltage Check (SA-13 board)
 - i) Pin ① of IC304 shall be 5.00V ± 0.25 V.

- 2) Clock Check (SA-13 board)
 - i) Pin ②⑨ of IC304 shall be about 0.7 Vp-p.

3) Drum DC Bias Adjustment (SA-13 Board)

Mode: Playback
Signal: Alignment tape colour bar or monoscope
Digital voltmeter: Pin ④⑦ of IC304 (TP-7)
[Adjustment method]
Adjust to 1.8Vdc ± 0.1 Vdc with RV304.

4) Capstan DC bias Adjustment (SA-13 Board)

Mode: Playback
Signal: Alignment tape colour bar or monoscope
Digital voltmeter: Pin ⑦ of IC304 (TP-6)

[Adjustment method]

Adjust to 1.8Vdc ± 0.2 Vdc with RV308.

5) Tracking Center Adjustment (SA-13 Board)

Mode: E-E
Signal: Colour bar
Oscilloscope: CH1 Pin ④⑧ of IC304 (TP-4)
CH2 Pin ③ of IC304 (TP-5)

[Adjustment method]

- i) Set the TRACKING knob to the center click position.
- ii) Adjust to 3.2 msec ± 0.1 msec with RV307.

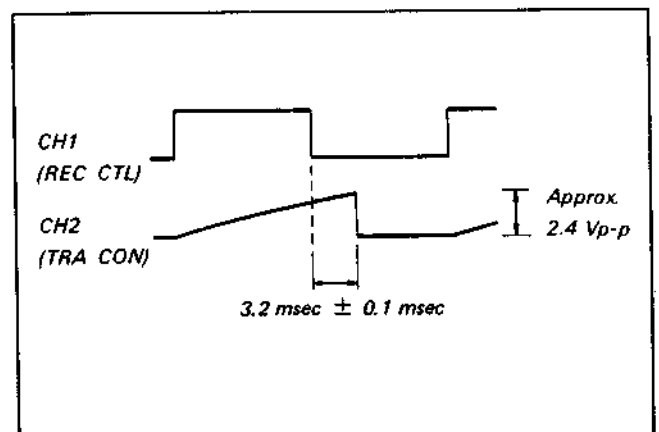



Fig. 5-6. Tracking center adjustment

6) RF Switching Position Adjustment (SA-13 Board)


Mode: Playback
 Signal: Alignment tape colour bar
 Oscilloscope: CH1: Pin ③④ of IC304 (TP-3)
 CH2: Pin ⑤ of CN13 (TP-2)

[Adjustment method]

- 1) Turn the TRACKING knob and set for the optimum state while observing the monitor TV screen.
- 2) Adjust RV303 so that the lock phase of RF SW PULSE (A ch) is $7H \pm 0.5H$ ($448\mu\text{sec} \pm 30\mu\text{sec}$).
- 3) Adjust RV302 so that the lock phase of RF SW PULSE (B ch) is $7H \pm 0.5H$ ($448\mu\text{sec} \pm 30\mu\text{sec}$).

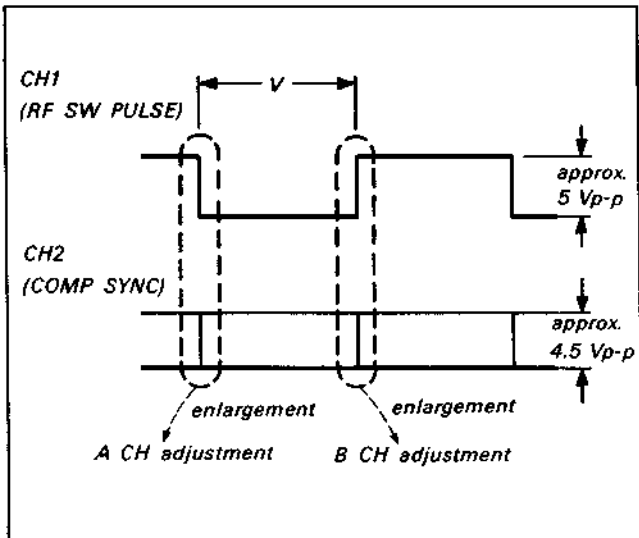

A CH adjustment (RV303)

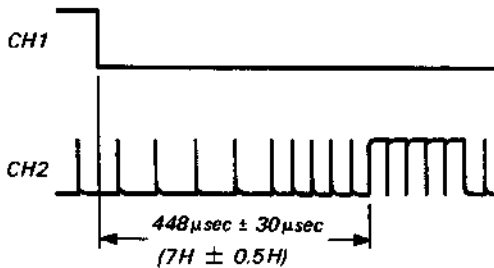

B CH adjustment (RV302)

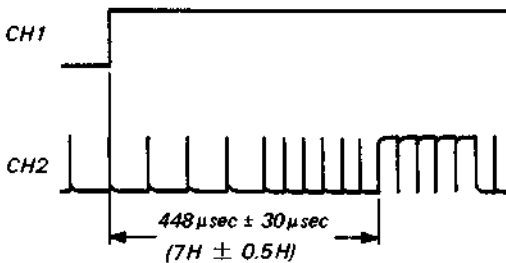


Fig. 5-7. RF switching position adjustment

7) Drum Lock Phase Adjustment (SA-13 Board)

Mode: Record
 Signal: Colour bar
 Oscilloscope: CH1 Pin ③④ of IC304 (TP-3)
 CH2 Pin ⑤ of CN13 (TP-2)

[Adjustment method]

Adjust RV301 so that the Lock Phase of CH1 (RF SW PULSE) and CH2 (COMP SYNC) is $7H \pm 0.5H$ ($448\mu\text{sec} \pm 30\mu\text{sec}$).

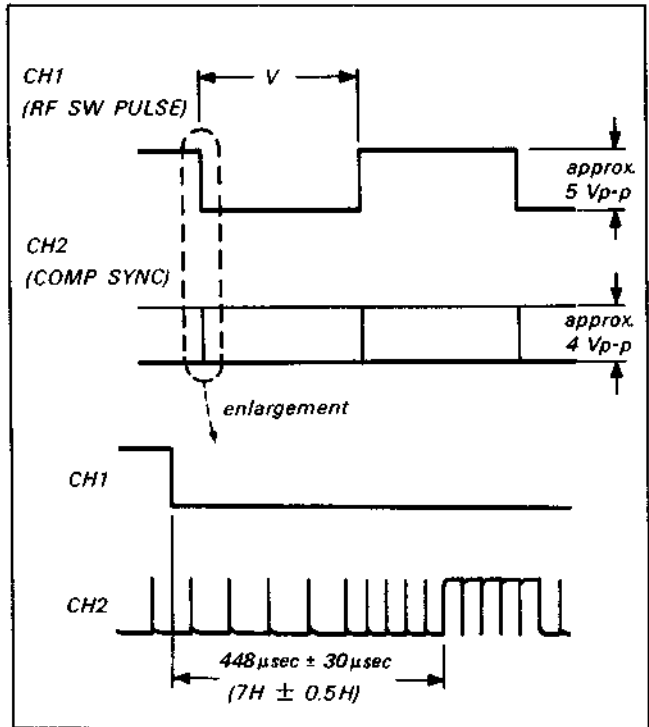


Fig. 5-8. Drum lock phase adjustment

8) PICTURE SEARCH fH Adjustment (SA-13 Board)

Mode: FWD PICTURE SEARCH (CUE)
 Signal: Alignment tape colour bar or monoscope
 Oscilloscope: Pin ⑤ of CN13 (COMP SYNC: TP-2)

[Adjustment method]

Adjust RV305 so that the horizontal waveform interval between CUE and playback become $0 \pm 0.2\mu\text{sec}$.

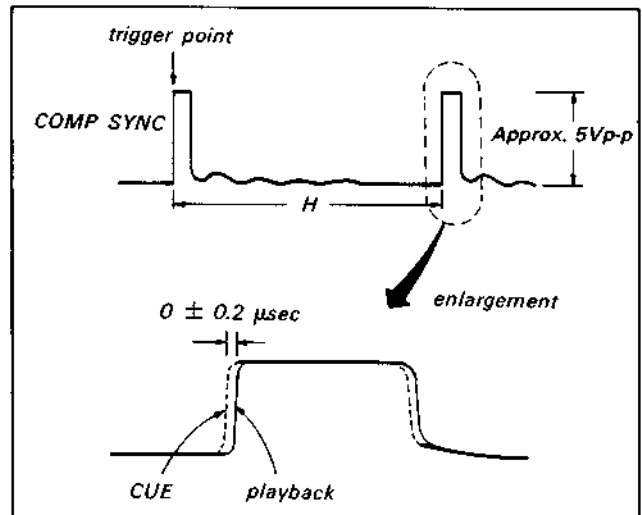


Fig. 5-9. PICTURE SEARCH fH

5-4. PAL VIDEO SYSTEM ADJUSTMENT

As a rule, first, adjust the Y signal system and check that it operates normally, then adjust the chroma signal system.

The adjustment sequence is shown below. The Y signal and chroma signal systems are adjusted for both playback and recording systems.

Colour video signal supplied by the PAL colour-bar generator is used as video input signal for video system adjustment in the record mode. Check that the sync and colour burst signals conform to the specifications designated in "Set-up for Adjustment" in Fig. 5-1.

5-4-1. Y Signal System Adjustment

1. Playback frequency characteristic adjustment
2. Expand adjustment
3. Playback video level adjustment
4. Y-comb adjustment
5. Dropout compensator adjustment
6. Sync AGC adjustment
7. Compress adjustment
8. Sync tip carrier set and deviation adjustment
9. White clip adjustment and dark clip
10. Y record current adjustment

5-4-2. Chroma Signal System Adjustment

1. AFC adjustment
2. AFC offset adjustment
3. APC adjustment
4. Pilot burst signal level adjustment
5. Chroma record current adjustment
6. Carrier balance adjustment
7. Chroma comb filter adjustment
8. JOG PLL adjustment
9. Shift adjustment
10. JOG exchange chroma level adjustment

5-4-1. Y Signal System Adjustment

1) Playback Frequency Characteristic Adjustment (VT-1 Board)

- Adjust both the A and B channels.
- The B channel indicated by ().

Mode: Playback

Signal: Alignment tape RF sweep

Oscilloscope: Pin ⑭ of IC5 (or JW42)

External trigger: Pin ③ of B2 (or JW43)

[Adjustment method]

- i) Turn tracking knob to maximum output.
- ii) Adjust RV20 to make the 2 MHz amplitude of A and B channels equal.
- iii) Set the trigger slope to -(+).
- iv) Adjust the 5.2 MHz amplitude to 56 — 62% of the 2 MHz amplitude with RV21 (RV22).

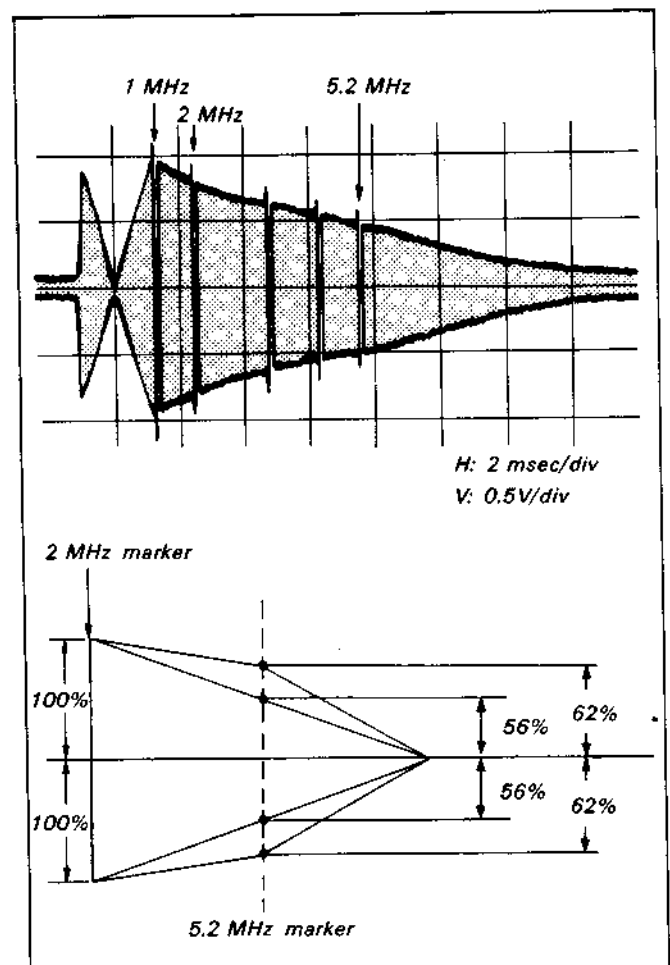


Fig. 5-10. Playback amplifier frequency characteristic adjustment

2) Expand Adjustment (VT-1 Board)

Mode: Playback

Signal: Colour bar

Digital voltmeter: See Fig. 5-11.

[Adjustment method]

- i) Adjust to $0.45 \text{ Vdc} \pm 0.01 \text{ Vdc}$ with RV5.

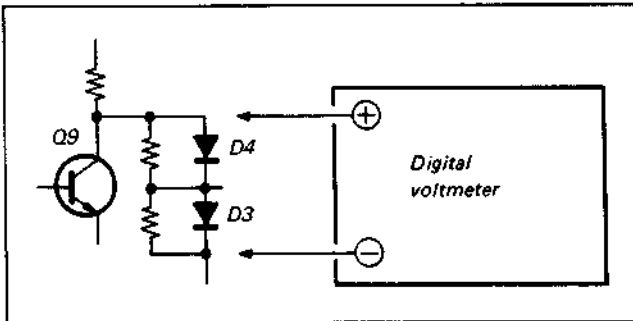


Fig. 5-11.

3) Y-Comb Adjustment (VT-1 Board)

Mode: Playback

Signal: Alignment tape colour bar

Oscilloscope: Pin ⑧ of IC401 (Attach $50 \text{ k}\Omega$ resistor to tip of probe (10:1))

[Adjustment method]

- i) Adjust RV401 for minimum output.

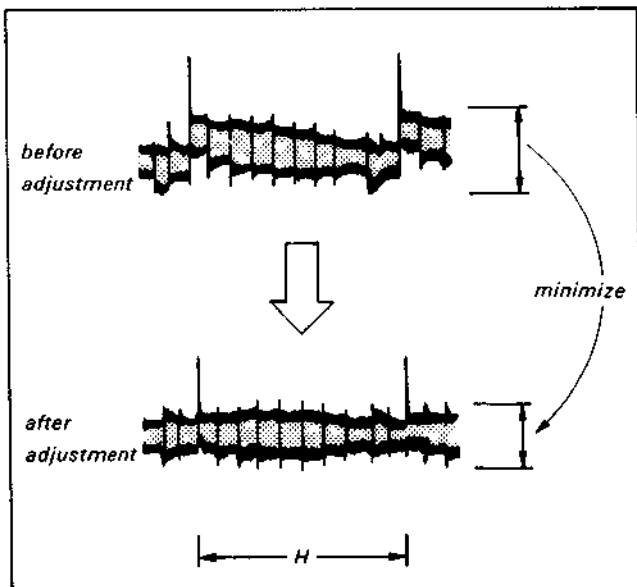


Fig. 5-12. Y-comb adjustment

4) Playback Video Level Adjustment (VT-1 Board)

Mode: Playback

Signal: Alignment tape colour bar

Oscilloscope: VIDEO OUT (CNJ2: 75Ω terminated)

[Adjustment method]

- i) Adjust to $1.0 \text{ Vp-p} \pm 0.05 \text{ Vp-p}$ with RV6.

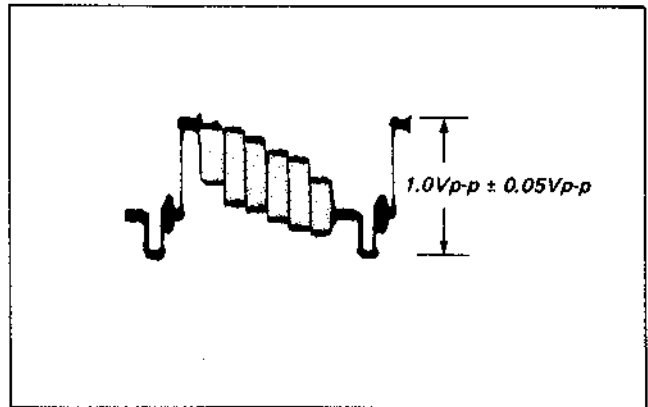


Fig. 5-13. Playback video level adjustment

5) Dropout Compensator Adjustment (VT-1 Board)

Mode: Playback

Signal: A recorded tape with dropouts

[Adjustment method]

- i) Turn RV2 fully counterclockwise (\curvearrowright) as seen from the pattern side. In this state, dropouts appear on the monitor screen.
- ii) Slowly turn RV2 clockwise (\curvearrowleft) and set to make the dropouts disappear.
- iii) Rewind the tape and verify that the dropouts described in (i) above have disappeared.

6) Sync AGC Adjustment (VT-1 Board)

- Mode: E-E
 Oscilloscope: VIDEO OUT (CNJ2: 75Ω terminated)
 Signal: Colour bar (V:S = 7:3)
[Adjustment method]
 i) Adjust to 1.0 Vp-p ± 0.05 Vp-p with RV4.

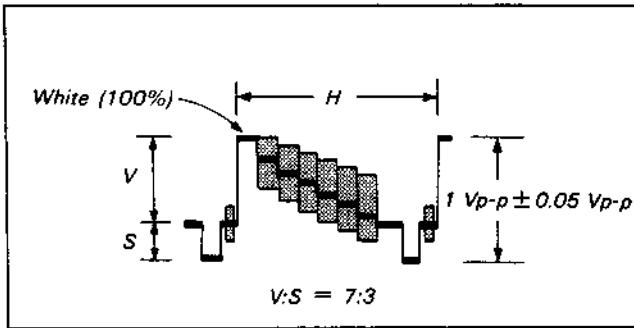


Fig. 5-14. Sync AGC adjustment

7) Compress Adjustment (VT-1 Board)

- Mode: E-E
 Signal: None (Install a shorting plug in VIDEO IN jack)
 Digital voltmeter: See Fig. 5-15.

- [Adjustment method]**
 i) Adjust to 0.3 Vdc ± 0.01 Vdc with RV7.

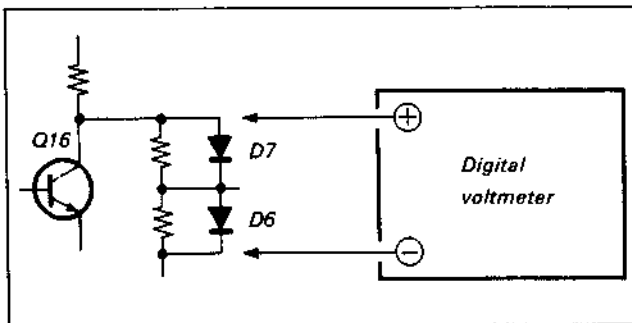


Fig. 5-15.

8) Sync Tip Carrier Set and Deviation Adjustment (VT-1 Board)

- Making this adjustment only after making sure that section 4) "Playback video level adjustment" has been completed.
 Mode: Record (or E-E) and playback
 Signal: Colour bar
 Frequency counter: Pin 25 of IC1
 Oscilloscope: Q17 collector (for REC/E-E mode) and VIDEO OUT (for PB mode, 75Ω terminated)

- [Adjustment method]**
 i) Input the colour bar signal and set up E-E mode.
 ii) Check the Y signal level at Q17 collector.
 (See Fig. 5-16 This Y signal level is proportional to the playback video level (proportional to the deviation) as described later. This Y signal level is 0.4 Vp-p in typical case.)
 iii) Turn off the signal input or install a shorting plug to VIDEO IN jack.
 iv) Connect the frequency counter to Pin 25 of IC1, and adjust RV8 until the reading is 3.8 MHz ± 0.04 MHz.
 v) Input the colour bar signal and record.
 vi) Playback the recorded portion of the tape, and check the playback video level at VIDEO OUT (75Ω terminated).
 Specification: 1.0 Vp-p ± 0.05 Vp-p (See Fig. 5-17.)
 vii) If the specification is not met, input the colour bar signal, set up the E-E mode, and adjust RV9 to correct the playback video level error, while observing the Y signal level at Q17 collector, and repeat steps iii) through vi).

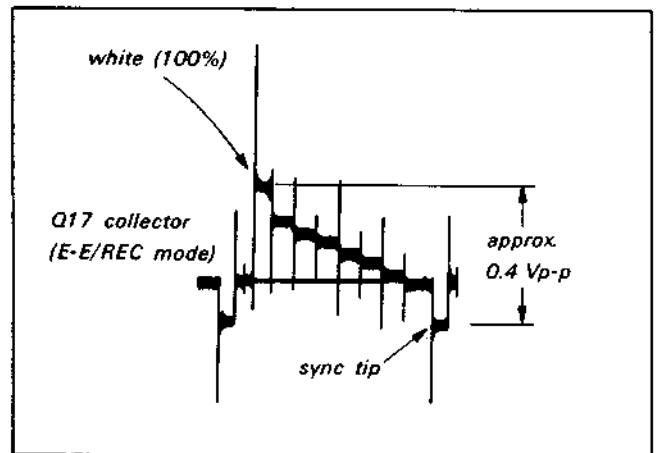


Fig. 5-16. Deviation adjustment (1)

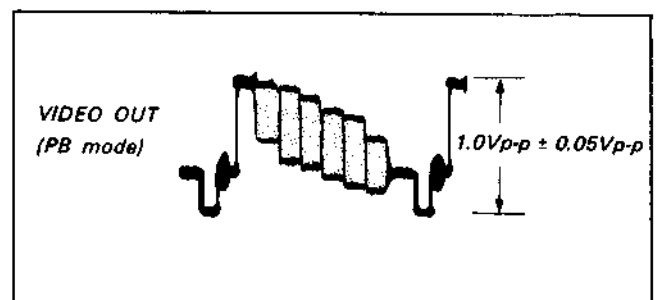


Fig. 5-17. Deviation adjustment (2)

9) **White Clip adjustment and Dark Clip Check (VT-1 Board)**

Mode: E-E
 Signal: Colour bar
 Oscilloscope: Collector of Q17

[Adjustment method]

- i) Check that the signal tip (dark peak) is $70\% \pm 10\%$.
- ii) Adjust RV10 so that the signal tip (white peak) is $200\% \pm 10\%$.

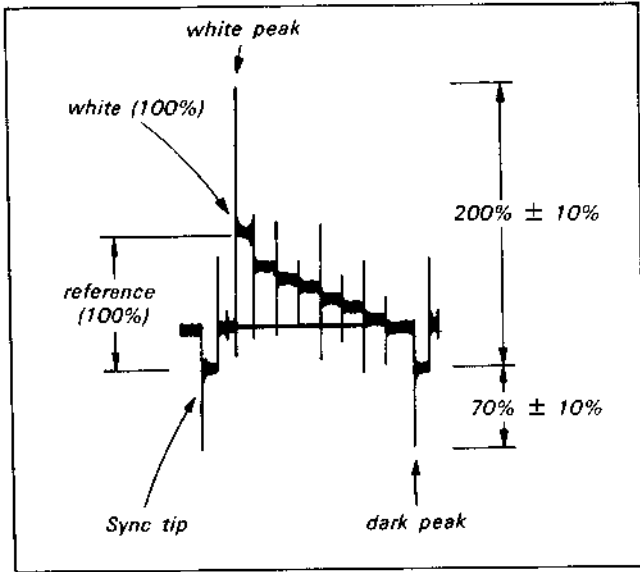


Fig. 5-18. Dark clip and white clip adjustment

10) **Y Record Current Adjustment (VT-1 Board)**

Mode: Record
 Signal: None (Install a shorting plug to VIDEO IN jack.)
 Oscilloscope: Center terminal of RV3 (Base of Q602)

[Adjustment method]

- i) Adjust to $680 \text{ mVp-p} \pm 10 \text{ mVp-p}$ with RV3.

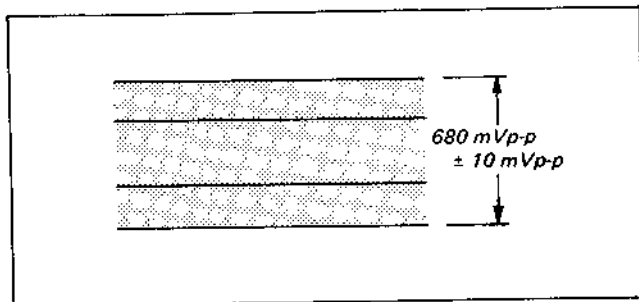


Fig. 5-19. Y record current adjustment

5-4-2. **Chroma Signal System Adjustment**

1) **AFC Adjustment (VT-1 Board)**

Mode: E-E
 Signal: Colour bar
 Oscilloscope: Pin ②⑥ of IC003

[Adjustment method]

- i) Adjust to $4.45 \text{ Vdc} \pm 0.01 \text{ Vdc}$ with RV13.
- ii) Playback the colour bar portion of the alignment tape, and check that the colour on the monitor TV for correct quality.

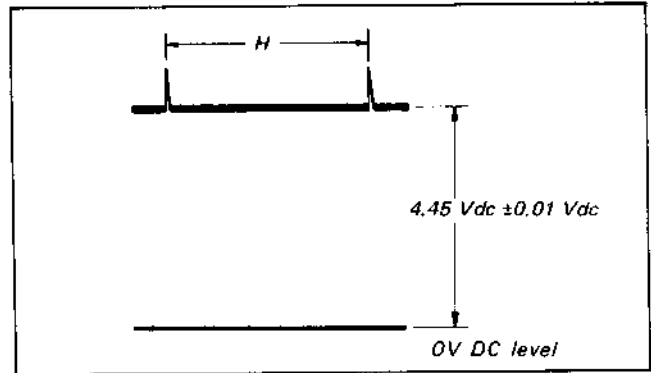


Fig. 5-20. AFC adjustment

2) **AFC Offset Adjustment (VT-1 Board)**

Mode: Record
 Signal: Colour bar
 Oscilloscope: Pin ②⑥ of IC003

[Adjustment method]

- i) Adjust RV14 so that the fluctuation of DC level is minimum.

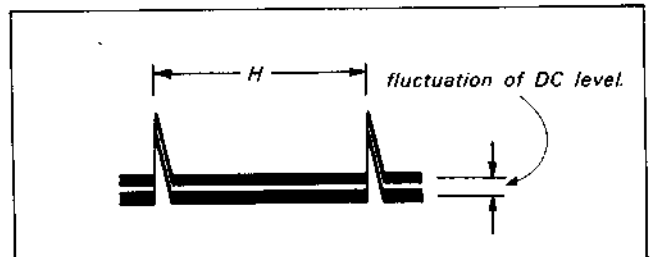


Fig. 5-21. AFC offset adjustment

3) **APC adjustment (VT-1 Board)**

Mode: Playback
Signal: Alignment tape colour bar
Frequency counter: Pin ① of B1 (Emitter of Q605)
[Adjustment method]
i) Adjust to 4.433619 MHz \pm 5 Hz with RV17.

4) **Pilot Burst Signal Level Adjustment (VT-1 Board)**

Mode: E-E
Signal: Colour bar
Oscilloscope: Pin ① of IC3
[Adjustment method]
i) Align the pilot burst signal with the chroma signal level using RV16.

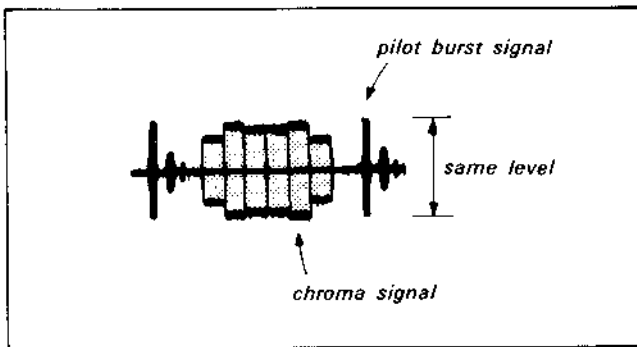


Fig. 5-22. Pilot burst signal level adjustment

5) **Chroma Record Current Adjustment (VT-1 Board)**

Mode: E-E
Signal: Colour bar
Oscilloscope: Emitter of Q601
[Adjustment method]
i) Adjust to 200 mVp-p \pm 5 mVp-p with RV15.

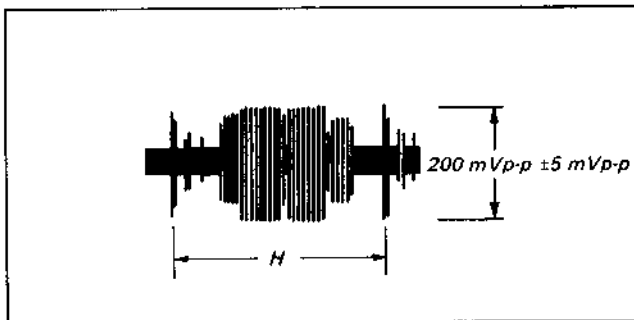


Fig. 5-23. Chroma record current adjustment

6) **Carrier Balance Adjustment (VT-1 Board)**

Mode: Playback
Signal: Alignment tape colour bar
Adjust while observing the monitor TV screen.
[Adjustment method]
i) Minimize beats with RV12.

7) **Chroma Comb Filter Adjustment (VT-1 Board)**

Mode: Playback
Signal: Alignment tape colour bar
Adjust while observing the monitor TV screen.
[Adjustment method]
i) Minimize beats with RV501 and LV501.

8) **JOG PLL Adjustment (VT-1 Board)**

Mode: E-E
Signal: Colour bar
Oscilloscope: Pin ⑩ of IC4
[Adjustment method]
Adjust to 20 μ sec \pm 1 μ sec with RV19.

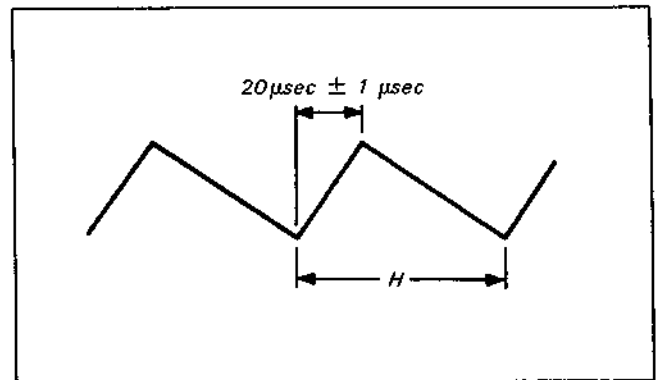


Fig. 5-24. JOG PLL adjustment

9) **Shift Adjustment (VT-1 Board)**

Mode: Playback

Signal: Alignment tape colour bar

Oscilloscope: Pin ⑳ of IC4

[Adjustment method]

- i) Align the signal level (per 1H) with RV601.

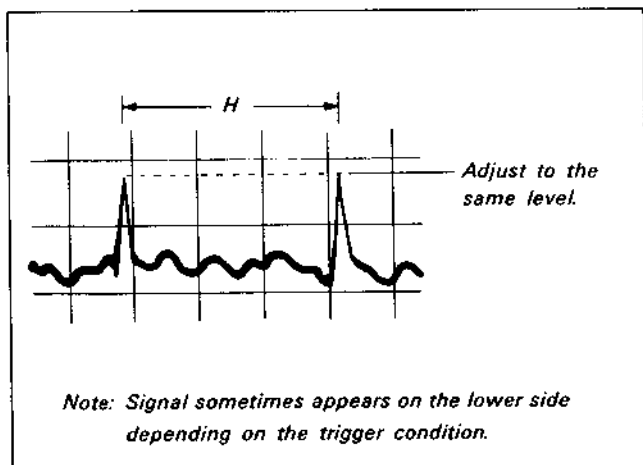


Fig. 5-25. Shift adjustment

10) **JOG Exchange Chroma level Adjustment (VT-1 Board)**

Mode: PB.PAUSE (STILL)

Signal: Colour bar

Oscilloscope: Pin ⑧ of IC4

[Adjustment method]

- i) Adjust RV18 so that the fluctuation of level is minimum.

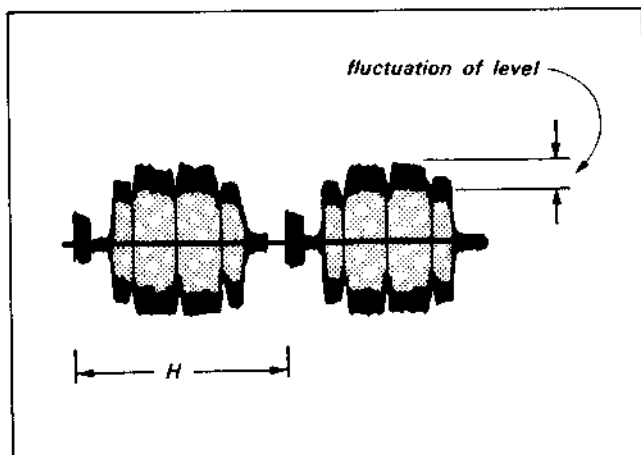


Fig. 5-26. JOG EXCH. C. level adjustment

5-4-3. SECAM Video System Adjustment

- Make this adjustment after aligning the PAL video system.
- For this adjustment, use the equipment listed below in conjunction with an alignment tape and SECAM colour-bar signals.

[Equipment Required]

- (1) SECAM Colour Monitor TV
- (2) Oscilloscope, Dual-trace, Bandwidth . . . more than 10 MHz with delay mode
- (3) SECAM Colour-Bar Generator
- (4) Alignment Tape, Type: KR5-1J, Code No. 8-969-996-03

[Setup for Adjustment]

In this adjustment, video signals obtained from the pattern generator will be used as adjustment signals. Therefore, the video output signals should be within the specifications. Verify video signals by connecting an oscilloscope to VIDEO OUT connector (75 Ω terminated). Check that the video signals are flat when the amplitude of the horizontal sync signal is about 0.3 Vp-p, the amplitude of the video portion is about 0.7 Vp-p, and the amplitude of the burst signal is about 0.3 Vp-p.

The video signal (colour-bar signal) used in this adjustment is shown in Fig. 5-30.

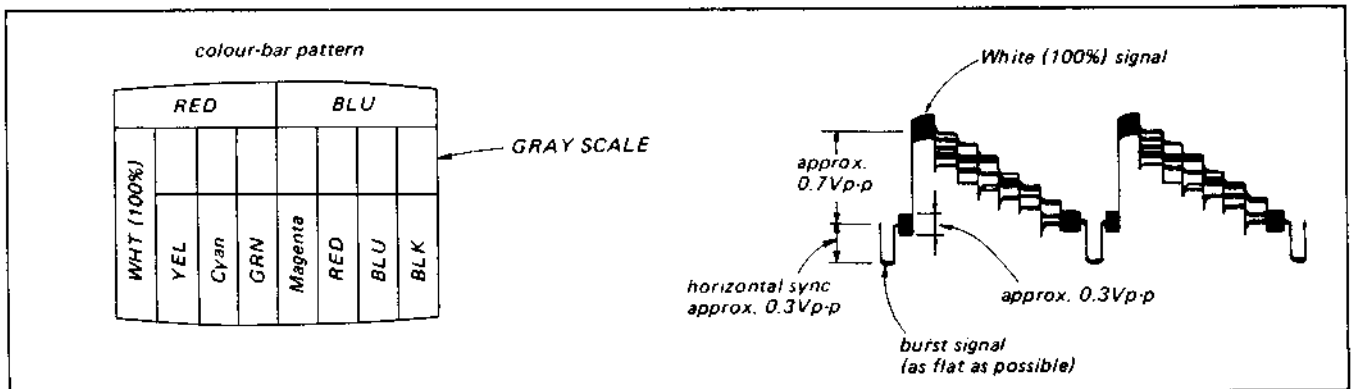


Fig. 5-30. SECAM video (colour-bar) signal

[Alignment Tape]

KR5-1J

	Video signal	Audio signal	Playing time	Use for
1.	Colour-bars	3 kHz -10 dB	5 min	General performance, tape speed checks, switching position adjustment.
2.	Monoscope	333 Hz -30 dB	5 min	Video head dihedral, audio level adjustment.
3.	RF sweep	5 kHz -30 dB	5 min	Video, audio frequency characteristics, audio azimuth adjustment. marker: 1, 2, 3.58, 4.5, 5.2 MHz
4.	Tracking 1 MHz (CH-B) *1 (Channel B is inserted in every 3 frames.)	1 kHz -10 dB *2 (Signal is dropped out in the positions where channel B is inserted.)	5 min	Tracking, Audio height adjustments CTL Position check. (Check if *1 and *2 are the same position.)

[Colour-Bar Signal]

The 100% colour-bar signal recorded on the Alignment tape is shown in Fig. 5-31.

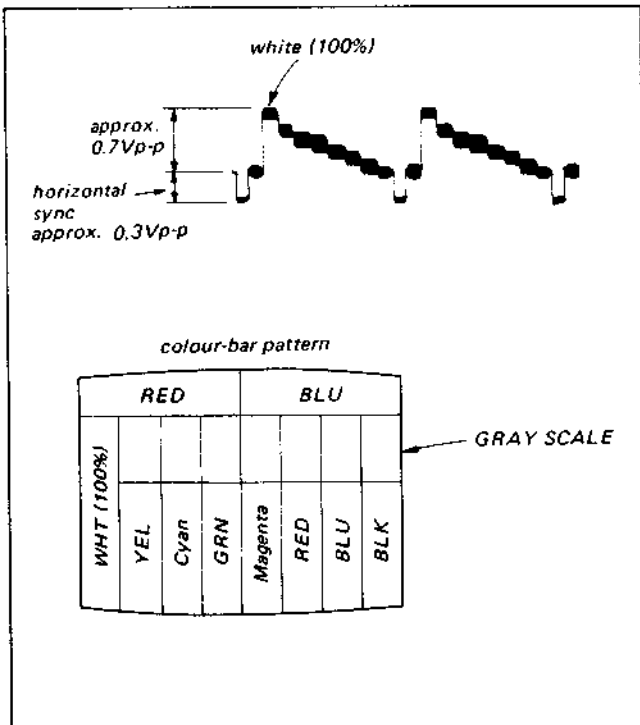


Fig. 5-31. Colour-bar signal recorded on the alignment tape

1) Bell Filter Adjustment (VT-1 Board)

Mode: E-E
Signal: SECAM colour-bar
Oscilloscope: Pin ④ of IC003

[Adjustment method]

Adjust LV302 until the waveform is flat.
(See Fig. 5-32.)

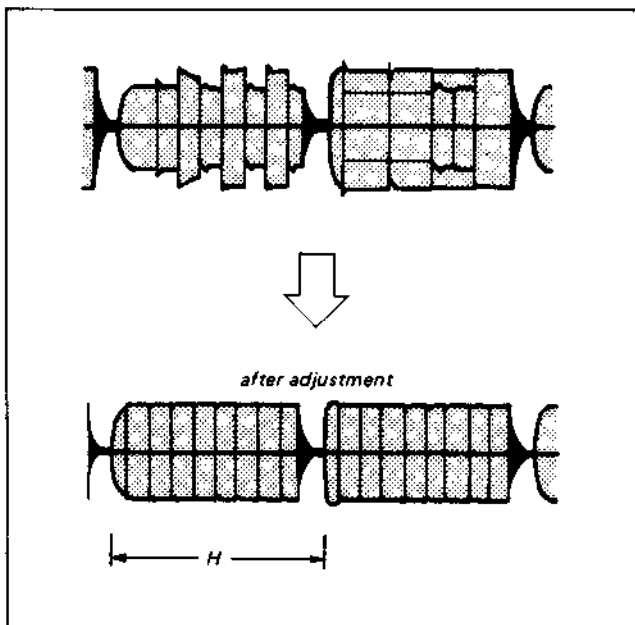


Fig. 5-32. Bell filter adjustment

2) SECAM ACK Adjustment (VT-1 Board)

Mode: E-E
Signal: SECAM colour-bar
Oscilloscope: Pin ⑨ of IC304

[Adjustment method]

- i) Rotate LV303 to make the waveform amplitude to be maximum.
- ii) Adjust RV301 to $5.5 \text{ V} \pm 0.2 \text{ V}_{p-p}$.

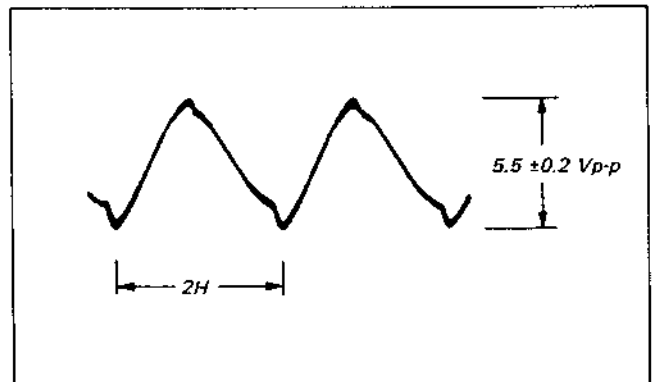


Fig. 5-33. SECAM ACK adjustment

3) Counter Bell Filter Adjustment (VT-1 Board)

Mode: Self-recording and playback
Signal: SECAM colour-bar
Adjust while observing the monitor TV screen.


[Adjustment method]

- i) Record SECAM colour-bar signals.
- ii) Playback the recorded signals.
- iii) While observing the monitor TV screen, adjust LV301 until the border between the red and blue areas is at its cleanest (minimum beats).

5-5. AUDIO SYSTEM ADJUSTMENT (SA-13 Board)

Use a Dynamicron tape for adjustments.

[Connection of Related Equipment]

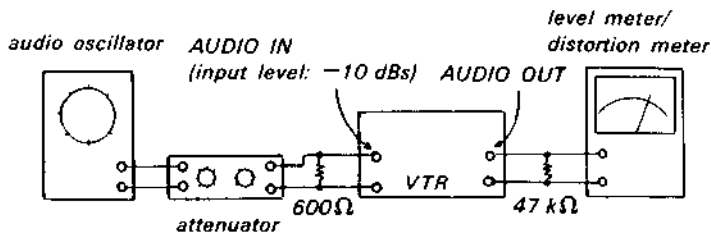

[Adjustment method]

1. ACE head adjustment... See "Mechanical Adjustment"
2. Playback frequency characteristic check
3. Playback output level check
4. Bias oscillator adjustment
5. E-E level check
6. Record bias adjustment
7. Record level check
8. Overall frequency characteristic check
9. Overall S/N check
10. Overall distortion check

1. ACE Head Adjustment

Refer to "Mechanical Adjustment"

2. Playback Frequency Characteristic Check

- (1) Play back 333 Hz and 5 kHz from the alignment tape and check that the level difference between 333 Hz and 5 kHz is within $0 \text{ dB} \pm 1 \text{ dB}$.

3. Playback Output Level Check

- (1) Play back 333 Hz from the alignment tape and check that the output level is $-30 \text{ dBs} \pm 2.5 \text{ dB}$.

4. Bias Oscillator adjustment

- (1) Set the input signal level to zero (install a shorting plug to AUDIO IN jack) and set up the RECORD mode.
- (2) Connect a frequency counter to Base of Q703 and adjust so that the frequency is $65 \text{ kHz} \pm 5 \text{ kHz}$ with T701.

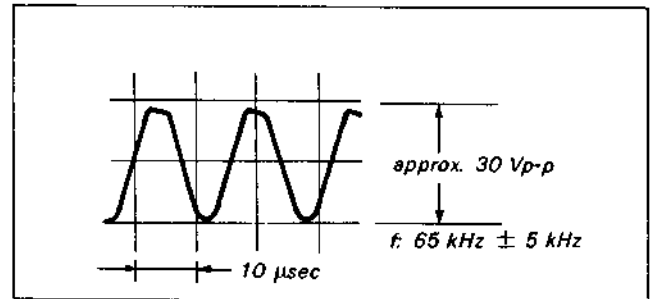


Fig. 5-27. Bias oscillator adjustment

5. E-E Level Check

- (1) Supply a 333 Hz signal at -10 dBs .
- (2) Set up the E-E mode.
- (3) Check that the output level is $-10 \text{ dBs} \pm 2 \text{ dB}$.

6. Record Bias Adjustment

Check that "Playback frequency characteristic check" has been made.

- (1) Connect Pin ⑤ of IC701 and GND with a jumper wire so as to turn off the AGC operation.
- (2) Supply a 333 Hz signal.
- (3) Set up the E-E mode and adjust the oscillator output level so that the level meter reading is -30 dBs .
- (4) Record signals.
- (5) Supply a frequency of 7 kHz and perform Steps (3) and (4) above.
- (6) Play back the recorded section of the tape and check that the output level at 7 kHz is $\pm 1 \text{ dB}$ relative to the output level at 333 Hz. If the level is outside this range, repeat Steps (2) through (5) adjusting with RV702 until the standard is met.
- (7) Remove the jumper wire after making the adjustment.

7. Record Level Check

- (1) Connect Pin ⑮ of IC701 and GND with a jumper wire so as to turn off the AGC operation.
- (2) Supply a 333 Hz signal.
- (3) Set up the E-E mode and adjust the oscillator output level so that the level meter reading is -10 dBs.
- (4) Record signals.
- (5) Play back the recorded section of the tape and check that the output level is -10 dBs ± 2.5 dB.

8. Overall Frequency Characteristic Check

- (1) Connect Pin ⑩ of IC701 and GND with a jumper wire so as to turn off the AGC operation.
- (2) Connect a 333 Hz signal.
- (3) Set up the E-E mode and adjust the oscillator output level so that the level meter reading is -30 dBs.
- (4) Record signals.
- (5) Change the frequency to 50 Hz, 100 Hz, 7 kHz and 10 kHz and repeat Steps (3) and (4).
- (6) Play back the recorded section of the tape and verify that the level is within the specification.

Standard values: With reference to the 333 Hz playback output level.

50 Hz $+2.5$
 -10 dB

100 Hz $+2.5$
 -3 dB

7 kHz $+2.5$
 -2.5 dB

10 kHz $+2.5$
 -10 dB

- (7) If the specified values cannot be attained, perform 6 again. "Record Bias Adjustment".
- (8) Remove the jumper wire after making the adjustment

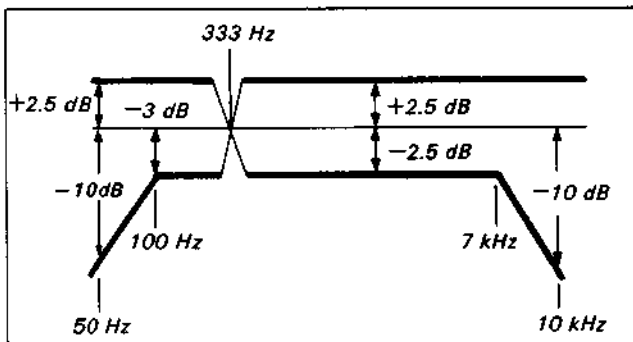


Fig. 5-28. Overall frequency characteristic

9. Overall S/N Check

- (1) Supply a 333 Hz signal at -10 dBs.
- (2) Record signals.
- (3) Set the input signal level to zero (install a shorting plug to AUDIO IN jack) and record signals.
- (4) Play back the recorded section of the tape and check that the output level difference is greater than 38 dB.

10. Overall Distortion Check

- (1) Supply a 333 Hz signal at -10 dBs.
- (2) Record signals.
- (3) Play back the recorded section of the tape and verify that the distortion is below 4%.

5-6. TUNER SYSTEM ADJUSTMENT (VT-1 Board)

1) Tuner AGC Adjustment

- (1) Set the DX/LOCAL switch on the rear panel to DX.
- (2) Input RF signals (VHF channel, 61 dB μ /75 Ω open) from a colour bar generator, etc.
- (3) Connect a digital voltmeter to Pin ④ of IC701.
- (4) Adjust RV701 to 6.7 Vdc ± 0.2 Vdc.

2) AFT Adjustment

- (1) Set the AFT switch to OFF.
- (2) Input RF signals, and adjust PRESET VR finely for the best picture quality, while watching the monitor screen.
- (3) Set the AFT switch to ON.
- (4) Adjust T703 finely for the best picture quality.
- (5) Receive each channel and check to make sure that there is no beat or picture disturbance.

5-7. TIMER SYSTEM ADJUSTMENT (TT-13 Board)

1) Clock Adjustment

- (1) Connect a time interval counter to Pin ⑥ of IC501.
- (2) Adjust to 15624.85 μ sec ± 0.05 μ sec with CT501.



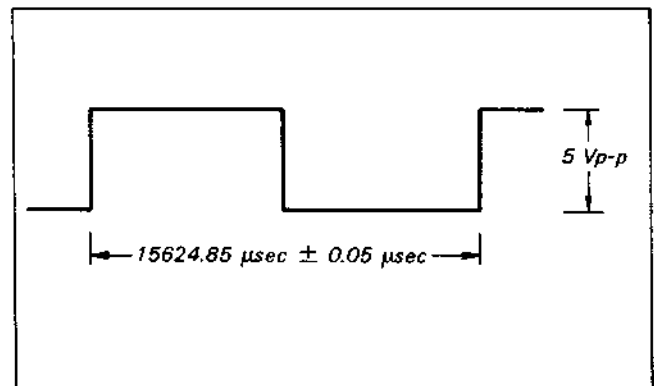


Fig. 5-29. Clock adjustment


VT-1 BOARD (Component side)

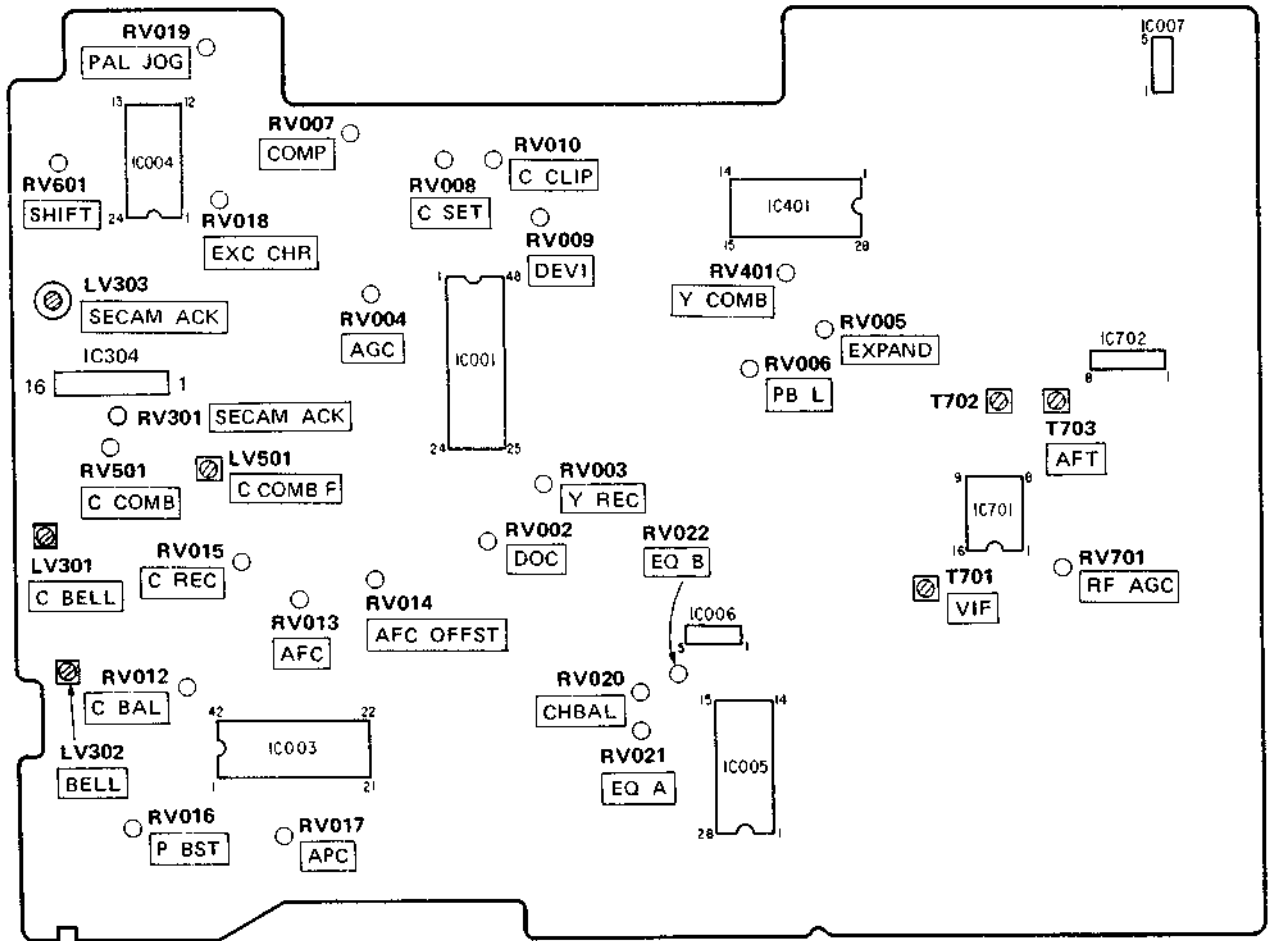

SA-13 BOARD (Component side)

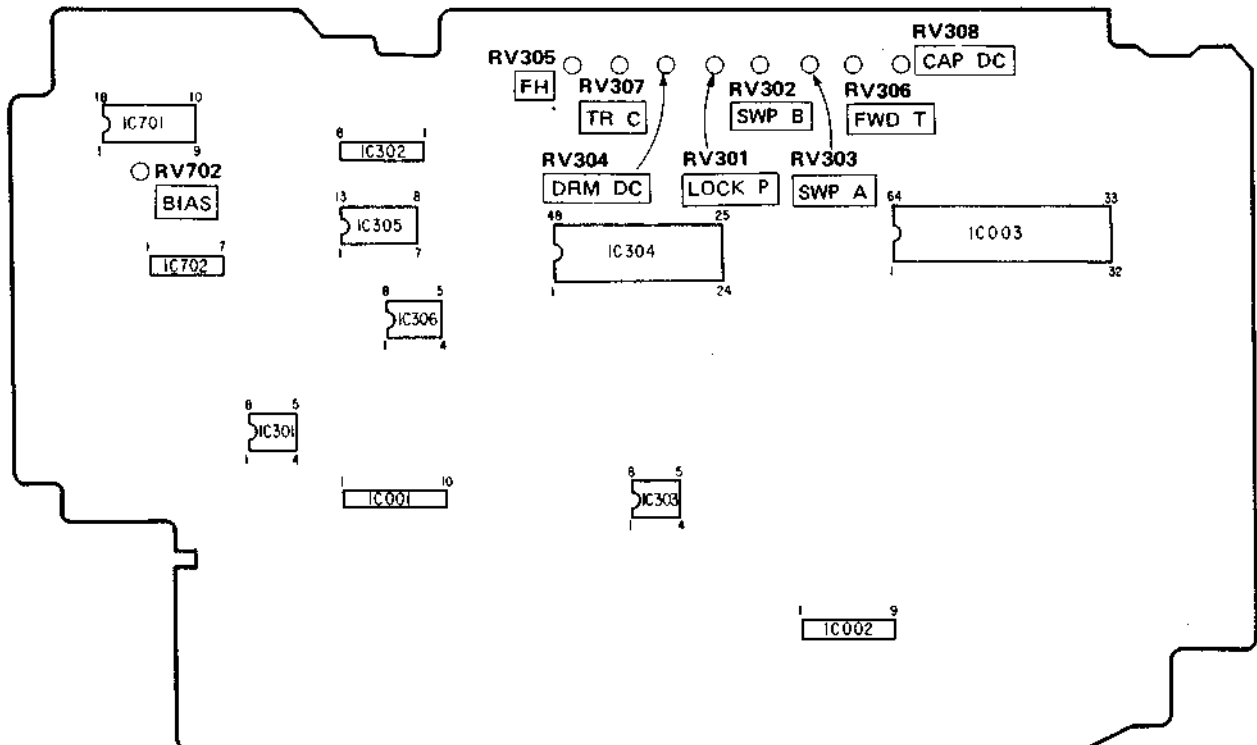

TT-13 BOARD (Component side)

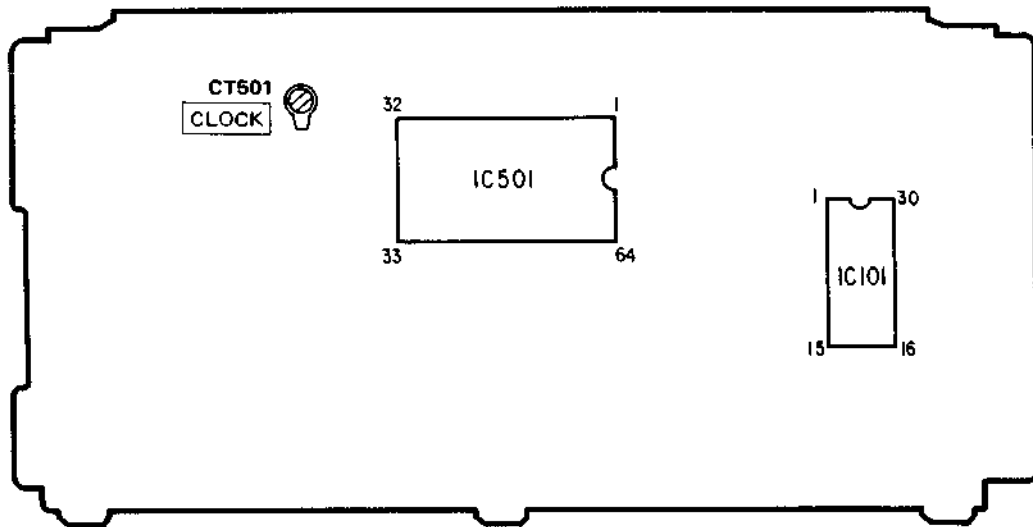

RMT-226

SERVICE MANUAL



SPECIFICATIONS

Remote Commander RMT-226

Remote control system

Infrared control

Power requirements


3 V dc, two IEC designation R6 batteries (size AA)

Dimensions

Approx. 44 × 20 × 17.5 mm (w/h/d)
(1³/₄ × 1³/₁₆ × 7 inches)


Weight

incl. projecting parts and controls
Approx. 110 g (4 oz)
incl. batteries

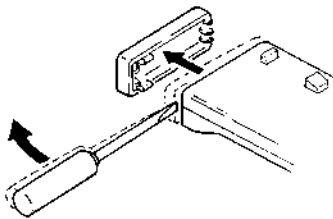


①

Remove the front panel by prying up with a screwdriver.

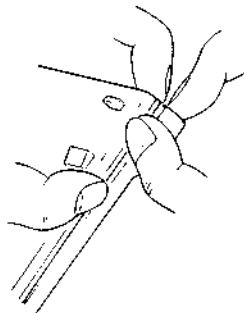

②

While pulling the lower case outward, lift the upper case and free the claw.

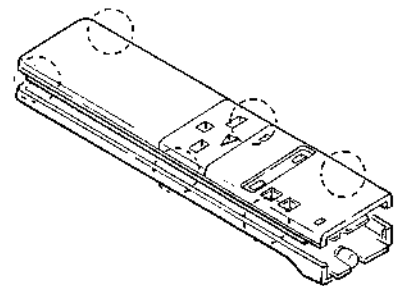

③

Free all 6 claws similarly.

REMOTE COMMANDER


SONY®

1. REMOTE CONTROL OPERATION


You can control almost all the functions of this video cassette recorder from your armchair using the supplied Remote Commander.

BATTERY INSERTION


- 1 Open the lid.

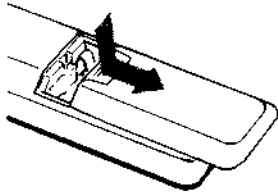

- 2 Insert two IEC designation R6 batteries with correct polarity.

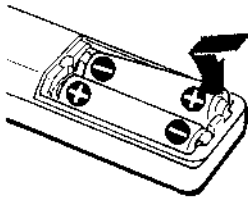

- 3 Close the lid firmly.

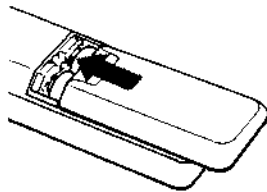

Battery life


In normal operation, batteries will last for about six months. If the range of the Remote Commander becomes noticeably short, replace the batteries with new ones. When the batteries are exhausted, the remote function indicator will not light when the buttons on the Commander are pressed.

If the Commander is not to be used for a long period of time, remove the batteries to avoid possible damage from battery leakage.

Notes

- There should be no obstacles between the Commander and the REMOTE SENSOR of the recorder.
- The shorter the distance between the Commander and the recorder, the wider the angle within which the recorder can be controlled.

OPERATION



Approx.
7 m
(23 feet)

REMOTE SENSOR
Point the infrared transmitter here.

30° 30°

Indicator

Lights up when any of the buttons on the Commander is pressed.

● REC (record) buttons

To start recording, press these buttons simultaneously.

▬ PAUSE button
◀◀ (rewind) button

ON switch


CHANNEL +/- buttons

▶ (play) button

▶▶ (fast-forward) button

■ (stop) button

2. SCHEMATIC DIAGRAM

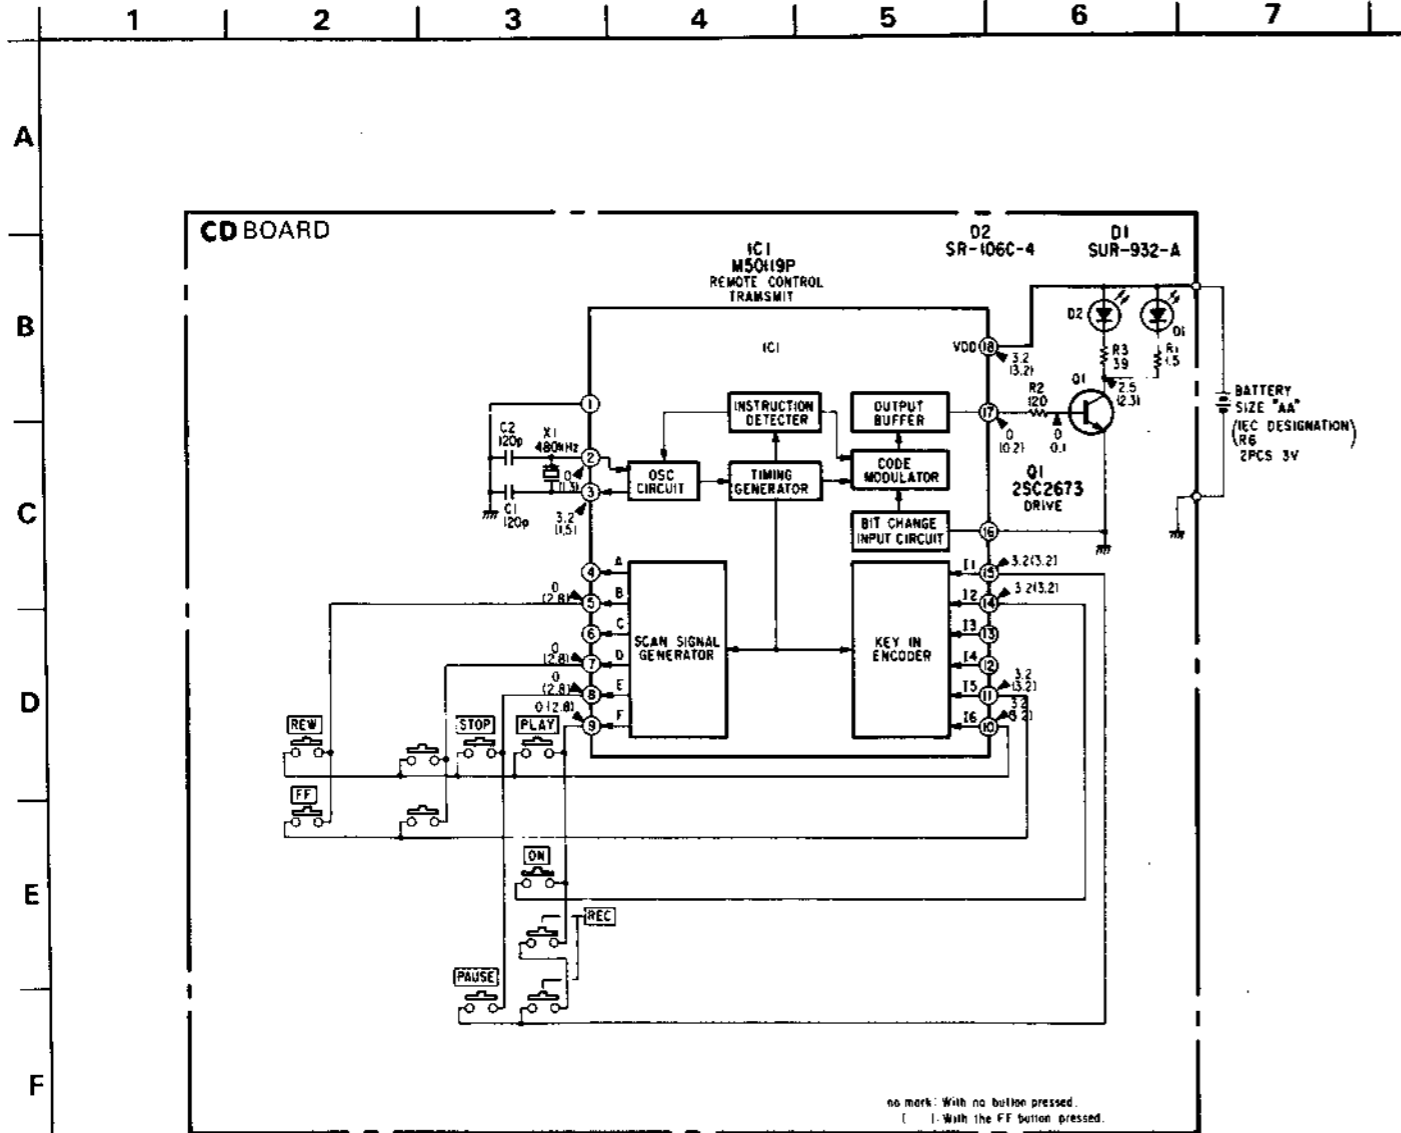


Note:

- All resistors are in ohms, 1/6W unless otherwise noted.
- All capacitors are in μF (p:pF) unless otherwise noted. 50V or less are not indicated except for electrolytic capacitors.
- — : B+ bus.
- The voltage value is measured using a digital tester (10M Ω).

When indicating parts by reference number, please include the board name.

3. PRINTED WIRING BOARD

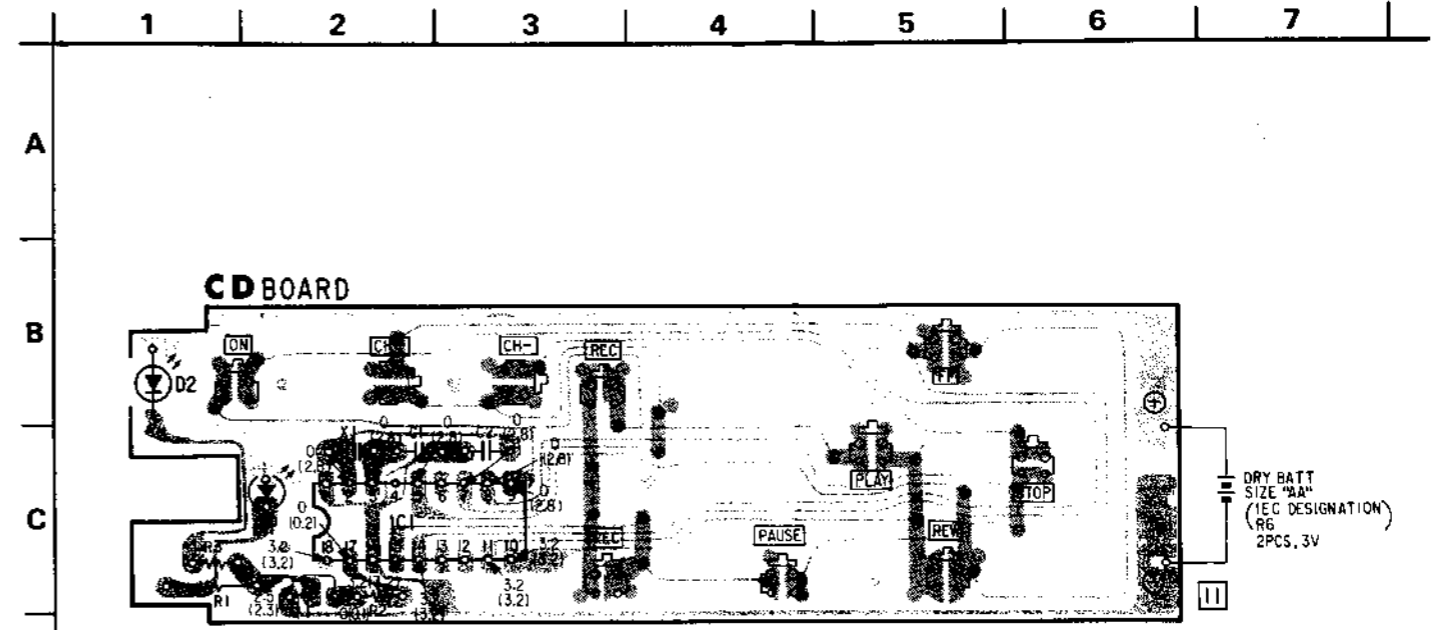


no mark: with no button pressed
(): with the FF button pressed

Note:


- ○ : indicates a lead wire mounted on the component side.
- ■ : soldering side
- ▨ : B+ pattern.
- ■ : Carbon pattern.

SEMICONDUCTORS

M50119P

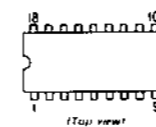

2SC2673



SLR932A




SR106C-4



4. EXPLODED VIEW

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.

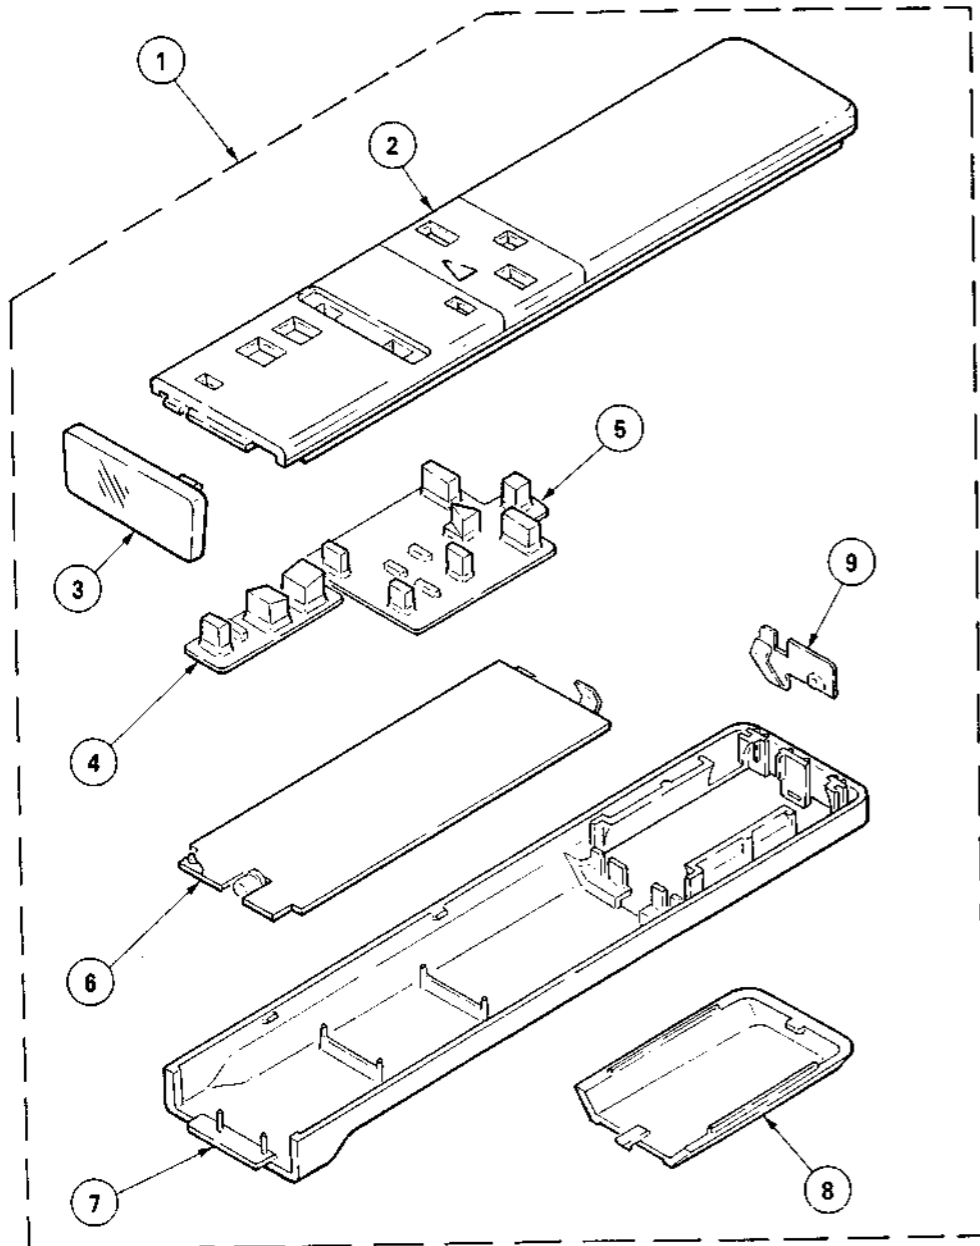

No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
1	A-6765-920-A	COMMANDER ASSY (SILVER)		3	2-357-208-01	PANEL, FRONT, COMMANDER	
	A-6765-921-A	COMMANDER ASSY (GRAY)		4	2-357-209-01	RUBBER (A), CONTACT	
	A-6767-079-A	COMMANDER ASSY (BLACK)		5	2-357-210-01	RUBBER (B), CONTACT	
	A-6767-414-A	COMMANDER ASSY (RED)		6	*1-616-330-11	CD BOARD	
2	X-2357-207-2	CASE ASSY, UPPER (SILVER)		7	2-357-207-01	CASE, LOWER	
	X-2357-208-2	CASE ASSY, UPPER (GRAY)		8	2-387-105-11	COVER, BATTERY	
	X-2357-217-1	CASE ASSY, UPPER (BLACK)					
	X-2357-250-1	CASE ASSY, UPPER (RED)					

5. ELECTRICAL PARTS LIST

NOTE:

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- All resistors are in ohms
- F : nonflammable
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

CAPACITORS
• MF : μ F, PF : μ PF

COILS
• MMH : mH, UH : μ H

Ref.No	Part No.	Description	Remark
	*1-616-330-11	CD BOARD *****	
	2-357-201-01	TERMINAL (A), BATTERY	
	2-357-202-01	TERMINAL (B), BATTERY	
CAPACITOR			
C001	1-102-107-00	CERAMIC 120PF 10% 50V	
C002	1-102-107-00	CERAMIC 120PF 10% 50V	
DIODE			
D001	8-719-912-39	DIODE SLR-932A	
D002	8-719-100-06	DIODE SR106C	
IC			
IC001	8-759-600-07	IC M50119P	
TRANSISTOR			
Q001	8-729-967-32	TRANSISTOR 2SC2673-Q	
RESISTOR			
R001	1-247-073-00	CARBON 1.5 5% 1/4W	
R002	1-247-809-00	CARBON 120 5% 1/6W	
R003	1-247-797-00	CARBON 39 5% 1/6W	
CRYSTAL			
X001	1-527-476-00	OSCILLATOR, CERAMIC	