

SL-F60PS

RMT-231

SERVICE MANUAL

West Germany Model



October, 1984

711B2 CHASSIS

This manual contains the adjustment method.

SPECIFICATIONS

System

Video recording system

Rotary two-head helical scanning

Video signal CCIR standards, PAL and DDR SECAM colour

Aerial input 75-ohm, asymmetrical aerial socket

Channel coverage

VHF: Western European channels
E2-U20

UHF: Western European channels
E21-E68

(Up to 30 programmes can be preset.)

RF output signal

UHF channels E30 to E39 (variable)
75 ohms, unbalanced

Video

Input

VIDEO IN: BNC connector

1.0 V ± 0.5 V (p-p)

75 ohms, unbalanced,

sync negative

Output

VIDEO OUT: BNC connector

1.0 V (p-p) ± 0.1 V (p-p)

75 ohms, unbalanced,

sync negative

Horizontal resolution

260 lines

Signal-to-noise ratio

Colour: Better than 40 dB

B/W: Better than 43 dB

Audio

Input

AUDIO IN: phono jack

47 kilohms, -10 dBs

(0 dBs = 0.775 V rms)

Output

AUDIO OUT: phono jack

Load impedance less than
10 kilohms

-10 dBs with 47 kilohms load,
unbalanced

Frequency response

50 Hz to 10 kHz

Signal-to-noise ratio

40 dB

Audio distortion

Less than 4% at 400 Hz

Tape transport

Tape speed 18.73 mm/sec.

Maximum recording time

2 hours 10 min. (with Sony L-500
cassette)

3 hours 15 min. (with L-750)

Fast forward/rewind time

Within 5 min. (with L-500)

— Continued on next page —



Consumer
VIDEO

Beta
B VIDEO CASSETTE RECORDER
SONY®

Timer

Clock Crystal lock
 Time indication 24-hour cycle
 Timer setting Only for recording
 4 events/3 weeks, adjustable for any
 day or for all 7 days of the week
 Power back-up Back-up duration of 3 minutes at one
 time

General

Power requirements
 220 V AC $\pm 10\%$, 50/60 Hz
 Power consumption
 38 W
 Storage temperature
 -20°C to $+65^{\circ}\text{C}$ (-4°F to $+149^{\circ}\text{F}$)
 Operating temperature
 5°C to 40°C (41°F to 104°F)
 Dimensions Approx. $430 \times 80 \times 382$ mm (w/h/d)
 $(17 \times 3\frac{1}{4} \times 15\frac{1}{8})$ inches
 including projecting parts and controls
 Weight Approx. 8.3 kg (18 lbs 5 oz) net

Accessories supplied

75-ohm coaxial cable for recorder to TV
 connection (1)
 Remote Commander RMT-231 with two
 IEC designation R6 batteries (1)
 RF channel adjustment screwdriver (1)

Design and specifications subject to change without
 notice.

Note

Appliance conforms with EEC Directive 76/889 regard-
 ing interference suppression.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following
 safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the B+ voltage to see it is at the values specified.

SAFETY-RELATED COMPONENT WARNING !!


COMPONENTS IDENTIFIED BY SHADING AND MARK  ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL TO SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1. GENERAL			3-12. PG Signal Timing Chart 41		
1-1.	Precautions	4	3-13.	Audio Level Diagram (REC)	42
1-2.	Location and Function of Controls	5	3-14.	Audio Level Diagram (PB)	42
1-3.	Adjusting the TV	8	3-15.	Audio Block Diagram	43
1-4.	TV Station Programming	9	3-16.	Tuner Block Diagram	45
1-5.	Clock Setting	10	3-17.	Timer Block Diagram	47
1-6.	TV Programme Recording	11	3-18.	Power Block Diagram	49
1-7.	Timer-Activated Recording	13	4. SCHEMATIC DIAGRAM AND PRINTED WIRING BOARDS		
1-8.	Quick Timer Recording	14	4-1.	Flame Schematic Diagram	51
2. DISASSEMBLY			4-2.	YC-31, RP-20 Boards	55
2-1.	Disassembly of Cabinet	15	4-3.	SS-34, RD-20, RD-21, LM-8, FU-35, N, CAPSTAN MOTOR, R. STATOR, ES-3 Boards	63
2-2.	Removal of the RP-20 Board	16	4-4.	TA-22, MT-10, TM-57, TM-70 Boards	72
2-3.	Removal of the TA-22 Board	17	4-5.	PS-45, PS-46, PS-69 Boards	78
2-4.	Removal of the YC-31 Board	17	4-6.	Semiconductors	83
2-5.	Removal of the Timer Block	18	4-7.	UHF and VHF Tuner Schematic Diagram	85
2-6.	Removal of the FU-35 Board	18	5. EXPLODED VIEWS		
2-7.	Removal of the Power Block	19	5-1.	Front Panel and Cabinet Assemblies	86
2-8.	Removal of the FL Cassette Compartment Assembly	20	5-2.	Tuner, Timer and Power Assemblies	87
2-9.	Removal of the Reel Block Assembly	20	5-3.	Front Loading Assembly	88
2-10.	Internal View	21	5-4.	Chassis Assembly 1	89
3. DIAGRAMS			5-5.	Chassis Assembly 2	90
3-1.	Circuit Boards Location	22	5-6.	Drum Assembly	91
3-2.	Overall Block Diagram	23	5-7.	Reel Block Assembly	92
3-3.	Video Block Diagram	26	5-8.	Hardware List	93
3-4.	System Control Block Diagram	29	6. ELECTRICAL PARTS LIST 94		
3-5.	System Control Interface	31	7. ADJUSTMENT 113		
3-6.	Servo Block Diagram	37	REMOTE COMMANDER RMT-231 165		
3-7.	Capstan Phase System Timing Chart (REC)	39			
3-8.	Capstan Phase System Timing Chart (PB)	39			
3-9.	Capstan Speed System Timing Chart	40			
3-10.	Drum Phase System Timing Chart	40			
3-11.	Drum Speed System Timing Chart	41			

SECTION 1 GENERAL

1-1. PRECAUTIONS

On safety

- This unit operates on 220 V AC, 50/60 Hz.
- Should any solid object or liquid fall into the cabinet, turn off the unit and have it checked by qualified personnel before operating it any further.
- To disconnect the mains lead (ac power cord), pull it out by the plug. Never pull the lead itself.
- The unit is not disconnected from the mains (ac power source) as long as it is connected to the mains outlet, even if the unit itself has been turned off.

On installation

- Allow adequate air circulation to prevent internal heat build-up. Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that may block the ventilation grille.
- Do not install the unit near heat sources such as radiators or air ducts or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.
- The unit is designed for operation in a horizontal position. Do not install it in an inclined position.
- Keep the unit and cassette tapes away from equipment with strong magnets, such as a microwave oven, large loudspeakers, etc.

On operation

- When the unit is not to be used for a long period, turn the unit off to conserve energy and to extend the useful life of your unit.
- Remove and store video cassettes after recording or playback. Always store the cassette in its case to keep the tape away from dust.

On cleaning

Clean the cabinet, panel and controls with a dry soft cloth. Do not use a moistened cloth or any type of solvent, such as alcohol or benzine, which might damage the finish.

On repacking

Do not throw away the carton and packing materials. They make an ideal container in which to transport the unit. When shipping the unit to another location, repack it as illustrated on the carton.


On colour broadcasting systems

This machine is designed to record and play back using the PAL and DDR SECAM colour systems. Recording and playback of video sources based on other colour systems cannot be guaranteed.

If you have any questions about this unit, contact your Sony dealer.

1-2. LOCATION AND FUNCTION OF CONTROLS

Front (panel opened)

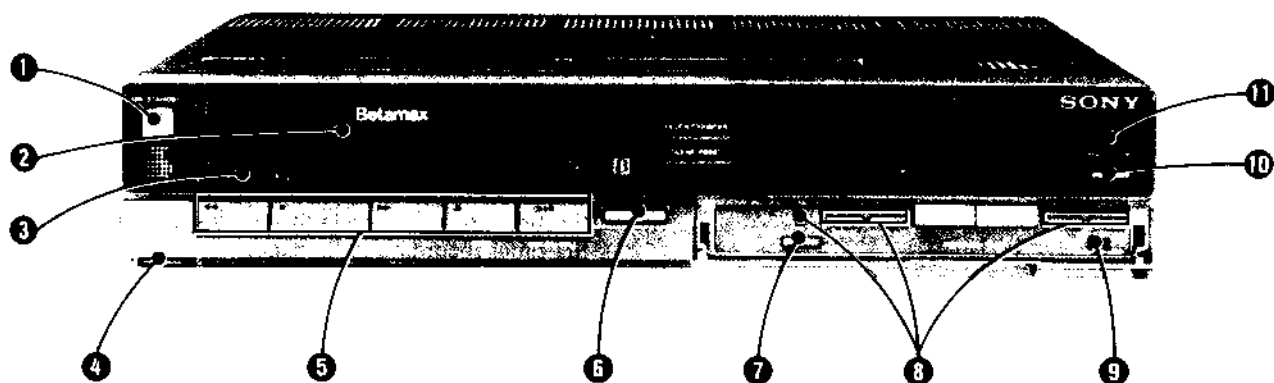


① ON/STANDBY button and indicator

Press to turn on the unit. The indicator will light up. Press again to turn it off.

The timer section will continue to operate and the time will be displayed even if the ON/STANDBY button is off.

② Cassette compartment

Insert a cassette after turning on the recorder. The  indication appears on the display window when a cassette is inside.


③ EJECT button


Press to remove the cassette. This button does not function when the recorder is turned off.


④ TRACKING control

If streaks or snow appear during the playback of a tape recorded on another recorder, turn this knob to obtain the best possible picture.


⑤ Function buttons

 REW button: Press to rewind the tape. Also used for the reverse picture search, skip scan and auto play operation.

 PLAY button: Press to play the tape back. Also used for auto play operation.

 FF button: Press to advance the tape rapidly. Also used for the forward picture search and skip scan operation.

 STOP button: Press to stop the tape.

 PAUSE/STILL button: Press to stop the tape for a moment during recording or playback. A still picture without noise will be seen during playback. Press again to release the pause mode.

⑥ RECORD button

Press to start recording.


⑦ INPUT SELECT button

Press to select the programme to be recorded.

LINE: for recording signals connected to the VIDEO IN and AUDIO IN jacks.

TUNER: for recording TV programmes.

⑧ Buttons for clock and timer setting

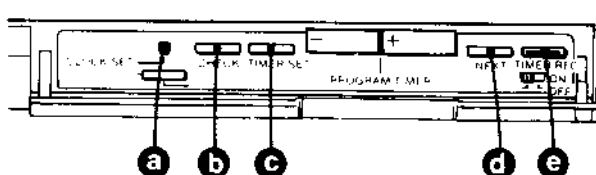

a CLOCK SET button: Press to initiate clock setting.

b CHECK button: Press to check timer settings.

c TIMER SET button: Press to initiate setting of timer recording.

d NEXT button: Press to advance to the next item to be set during clock or timer setting.

e TIMER REC ON/OFF button: Press to activate timer recording. Press it again to deactivate timer recording or quick timer recording in timer standby mode or while recording.

⑨ TONE selector


Normally, set to HIGH. If the high frequencies of playback sound seem exaggerated, set to LOW.

⑩ QUICK TIMER button

Press to set the recording duration up to 4 hours in units of 30 minutes.

⑪ REMOTE SENSOR

Detects the remote control signal transmitted from the supplied Remote Commander.

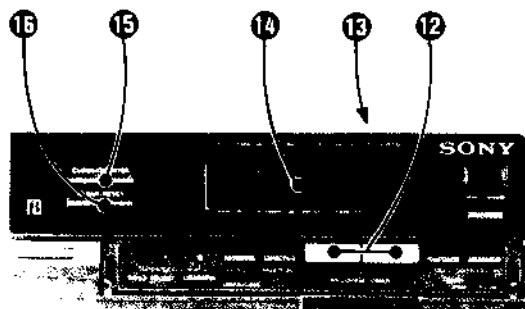


12 PROGRAM/TIMER +/– button

Press + to advance or – to reverse the programme numbers. Also used for clock setting and timer setting.


13 Tuning compartment

All the switches and buttons for programming stations are in this compartment.

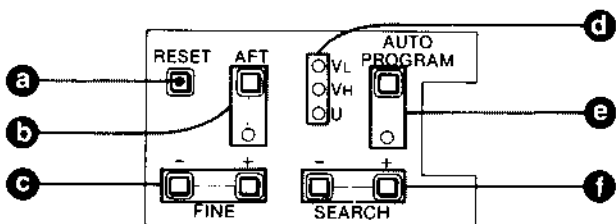

- a RESET button:** To clear the programmed station, press this button.
- b AFT button and lamp:** The AFT circuit activates automatically after the stations are tuned and memorized with automatic and manual programming. The AFT lamp will illuminate. If you wish to restore the AFT on the channel which has been finetuned manually with the FINE buttons, press the AFT button.
- c FINE + and – buttons:** Press to fine tune the station.
- d Tuning indicator:** Indicates the tuning band.
- e AUTO PROGRAM (automatic programming) button and lamp:** To preset the receivable stations automatically, press this button. The corresponding lamp blinks during automatic and manual programming.
- f SEARCH + and – buttons:** Press to tune in a station. Press the – button to get a station of lower frequency and the + button to get a station of higher frequency.

14 Display window

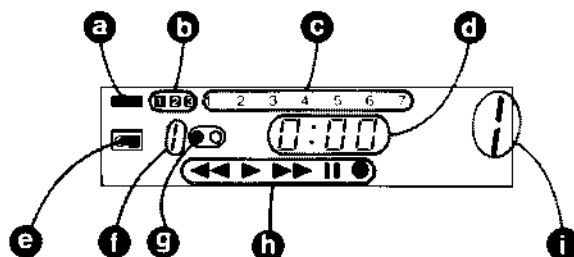


- a TIMER REC indication:** Shows the recorder is in the timer standby mode. It remains displayed until the timer recording is finished.
- b Week indications:** Show the week in which the timer recording will take place.
- c Day of the week indications**
- d Time and counter display:** Usually shows the present time. When the CLOCK/COUNTER button is pressed to COUNTER, the display shows the counter number.
- e Cassette-inside indication:** Shows a cassette is inserted.
- f Event number indication**
- g Turn-on and turn-off setting indications:** The “●” mark shows the display is the turn-on time of the timer recording and the “○” mark shows the turn-off time.
- h Tape operation mode indications:** Show the engaged tape operation mode: ◀ (rewind), ▶ (play-back), ▶▶ (fast-forward), || (pause) or ● (recording).
- i Programme number:** Shows the programme number selected with the PROGRAM/TIMER + and – buttons. When the INPUT SELECT button is pressed to LINE to record signals from the VIDEO IN and AUDIO IN jacks, the indication will change to “AU”.

15 CLOCK/COUNTER button

Press to set the display to the tape counter. To reset to clock, press it again.

16 CLEAR/RESET button

Press to set the tape counter reading to “0000” when the tape counter is displayed. Also used for changing the timer setting or erasing the memory of the timer setting.

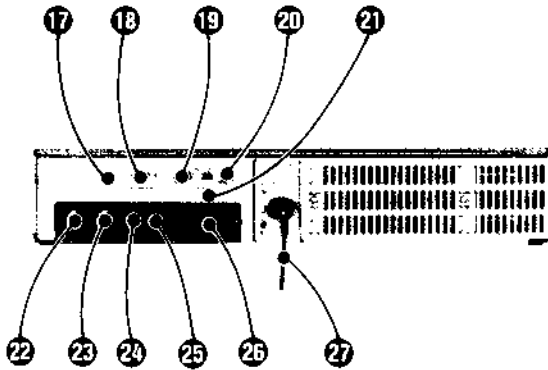

17 RF CHANNEL screw

If there is interference on the factory-preset channel for RF output and the signal of this recorder cannot be displayed clearly on the TV screen, adjust this screw with the supplied screwdriver.

18 AERIAL OUT socket

Connect the aerial input of the TV receiver using the supplied cable.

19 DX/LOCAL switch

Normally set this switch to DX. If the TV signal is very strong, set the switch to LOCAL.

20 AERIAL IN socket

Connect the aerial cable.

21 TV VERT LOCK (TV vertical lock) control

Turn to stabilize the picture in still picture mode.

22 VIDEO OUT jack (BNC type)

Connect to the video input of another video cassette recorder or a video monitor.

23 VIDEO IN jack (BNC type)

Connect to the video output of a camera, another video cassette recorder, etc.

24 AUDIO OUT jack (phono type)

Connect to the audio input of a video monitor or video cassette recorder.

25 AUDIO IN jack (phono type)

Connect to the audio output of a camera or another video cassette recorder.

26 TEST SIGNAL switch

Set to ON to obtain the test pattern for adjusting the TV so that it can receive the signal from the recorder.

27 AC mains lead


1.3. ADJUSTING THE TV

One of the television programme positions must be adjusted to receive the signal from the recorder.

Note that the adjustment is not necessary, however, when the recorder is connected to the video/audio inputs on the TV receiver/monitor.

- 1 After making the connections, press the ON/STANDBY button.
- 2 Make sure that the recorder is in the stop mode.
- 3 Set the TEST SIGNAL switch located at the rear of the recorder to ON. The test signal is transmitted on a channel between UHF channels E30 and E39.
- 4 Turn on the TV and select a programme position which is not being used to receive a TV station. Tune the channel until you see a clear black and white pattern on the TV screen and you hear a continuous tone. This is the recorder's test signal.


—If you are not sure how to adjust your TV, please refer to the TV's instruction manual or consult your dealer.

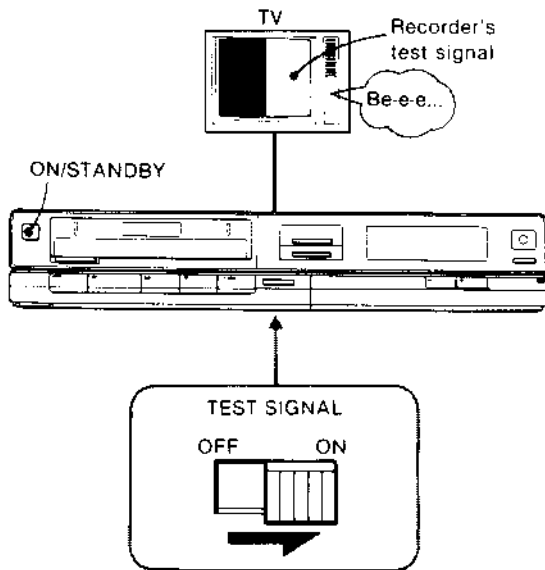

If the test picture is free of disturbance, the TV adjustment is complete. Set the TEST SIGNAL switch to OFF.

If the test picture is not free of disturbance

- 1 Reset the TEST SIGNAL switch to OFF.
- 2 Adjust the channel of the TV to a channel between UHF channels E30 and E39 with the tuning control or the fine tuning control on the TV, so that the TV screen shows no picture and so that a steady rustling sound or no sound is heard.
- 3 Set the TEST SIGNAL switch to ON again.
- 4 Slowly turn the RF CHANNEL screw on the back of the recorder with the supplied screwdriver, until you see an undistorted test pattern on the TV screen.
- 5 Now the TV adjustment is complete. Reset the TEST SIGNAL switch to OFF.

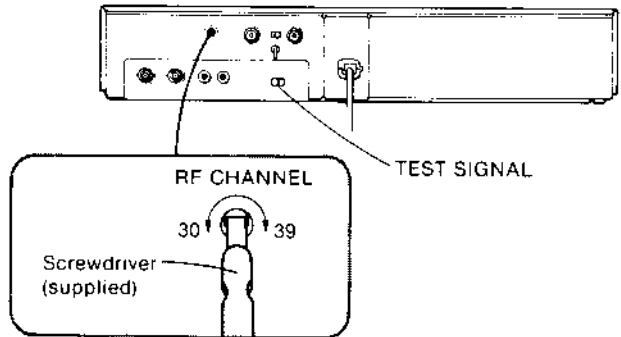


Whenever you use the video recorder, you should set the TV to the programme position selected in this adjustment.

1-4. TV STATION PROGRAMMING

Automatic and manual programming are available. Automatic programming automatically presets up to 30 receivable stations from the lowest frequency to the highest. Manual programming is useful for presetting selected stations in any desired sequence.

To start programming, turn on the recorder by pressing the ON/STANDBY button and set the INPUT SELECT button to TUNER.

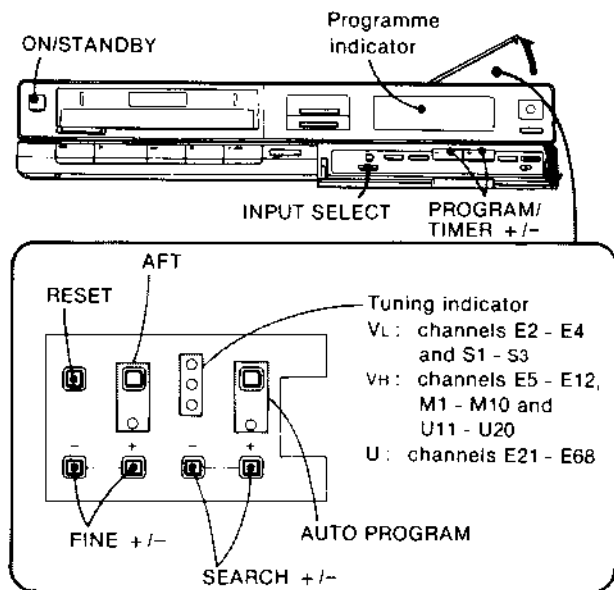

FINE TUNING OF A WEAK STATION

If the picture on a particular programme position is not acceptable, keep the + or - FINE button pressed until the picture becomes clearer. When either of the FINE buttons is pressed, the AFT of the selected station is deactivated and the AFT lamp goes off. To view this particular station, keep the AFT deactivated. (Do not press the AFT button.)

When other memorized stations are selected, the AFT automatically activates.

ELIMINATING NOISE ON UNUSED PROGRAMME POSITIONS

Simply press the RESET button. The annoying noise will be eliminated.

AUTOMATIC PROGRAMMING

Press the AUTO PROGRAM button. Up to 30 receivable stations will be preset one by one from programme position 1. When no more stations can be located, programme number "1" will light on the programme indicator and automatic programming will stop.

MANUAL PROGRAMMING

- 1 Press the + or - PROGRAM/TIMER button to select the programme position.
 - + for a higher-numbered programme position
 - for a lower-numbered programme position
- 2 Press the + SEARCH button to locate a station with higher frequency and the - SEARCH button to locate a station with lower frequency. The tuning indicator will light to show the current tuning band. When a station has been received, the search will stop. Press the + or - SEARCH button again, until the desired station is received.

Repeat these steps for all desired stations.

1.5. CLOCK SETTING

When you connect the mains lead to a mains outlet, the clock indicates "0:00" with the two dots blinking.


Example: To set the clock to 7:35 p.m. (19:35) on Tuesday *

*Time indication

AM				PM					
12:00 (midnight)	1:00		11:00	12:00 (noon)	1:00	2:00		10:00	11:00
↓	↓		↓	↓	↓	↓		↓	↓
0:00	1:00		11:00	12:00	13:00	14:00		22:00	23:00

Day indication

Mo (Monday)	Tu (Tuesday)	We (Wednesday)	Th (Thursday)	Fr (Friday)	Sa (Saturday)	Su (Sunday)
↓	↓	↓	↓	↓	↓	↓
1	2	3	4	5	6	7




CLOCK SET


NEXT

+/- buttons
+ : to advance
- : to reverse


- 1 Press CLOCK SET.




- 2 Set the day by pressing + or -.




- 3 Press NEXT and set the hour by pressing + or -.



- 4 Press NEXT and set the minute by pressing + or -.



- 5 With an announced time signal, press NEXT. The clock now starts operating, showing the correct time.



The dots of the colon alternately blink every 30 seconds.

NEXT button

Each time the NEXT button is pressed, the item to be set blinks to let you know the setting order.

+/- buttons

The + and - PROGRAM/TIMER buttons can be pressed in two ways.



When you hold a button down, the digits will advance continuously until the button is released.



When you press and immediately release a button, the digits will advance by one.

To change the actual clock setting

Press the CLOCK SET button and repeat the clock setting procedure from step 1.

Note


If you have pressed the CLOCK SET button inadvertently, press the NEXT button enough times until the dots of the colon blink.




When power has been interrupted for more than 3 minutes, the time indication "0:00" blinks, showing that the clock must be reset.


If power has been interrupted for less than 3 minutes, the displayed time remains correct.


1-6. TV PROGRAMME RECORDING

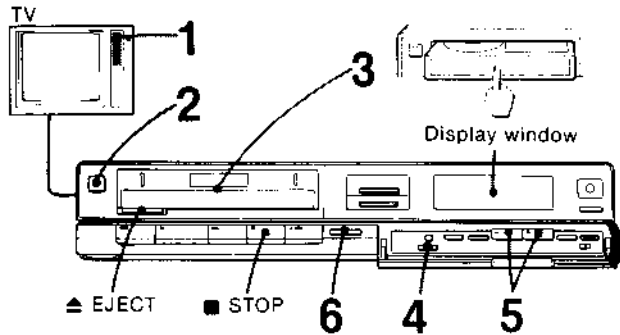Numbers in the illustration show the sequence of operation.



- 1 Turn on the TV and select the programme position for the recorder.
- 2 Press the ON/STANDBY button. The indicator on the button will light up.
- 3 Insert the cassette with the round window to the left. The  indication will appear on the display window.
 - Do not use force when inserting the cassette into the compartment.
- 4 Press the INPUT SELECT button (TUNER) so that a programme number appears on the display window.
- 5 Select the programme to be recorded with the +/- PROGRAM/TIMER buttons.
 - + for higher numbered programmes, and - for lower numbered programmes.
- 6 Press the  RECORD button. The  indication will appear on the display window and recording will begin.
 - If the inserted cassette does not have the safety tab, or if the tape is at its end, the cassette will be automatically ejected.

To stop recording, press the  STOP button.

To eject the cassette, press the  EJECT button after stopping the recording.

To view another programme while recording, simply select the programme you want to view with the TV's programme selector.

When the tape reaches the end during recording, it will be automatically rewound.

Note



The recorder can be automatically turned on by inserting a cassette without pressing the ON/STANDBY button.


CAUTION

Television programmes, films, video tapes and other materials may be copyrighted.

Unauthorized recording of such material may be contrary to the provision of the copyright laws.

TO STOP RECORDING MOMENTARILY

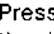Press the  button. The  indicator will appear on the display window. The TV programme can be seen on the TV, but the picture will not be recorded.

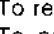To resume recording, press the  button again.

To protect the video heads and the tape, the pause mode will be automatically released after about 8 minutes and recording will stop.

TO KEEP A RECORDED PROGRAMME FROM BEING ACCIDENTALLY ERASED

When a new recording is made on a previously recorded cassette, the previous recording will be automatically erased.


To avoid erasing a recording

Break off the safety tab using a screwdriver or similar object.

To re-record on a cassette which has had the safety tab removed

Cover the slot with a piece of plastic tape.




If you activate the  RECORD button or the TIMER REC ON/OFF button with a cassette with its safety tab removed inserted, the cassette will be automatically ejected.

TO INDEX A RECORDED PROGRAMME USING THE TAPE COUNTER

Turn on the recorder and press the CLOCK/COUNTER button to display the counter reading in the display window.

To return the display to the present time, press the CLOCK/COUNTER button again.

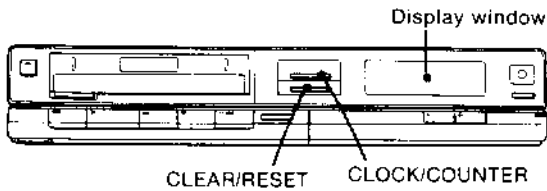

Before starting recording or playback, press the CLEAR/RESET button to set the counter to "0000".

By noting the counter reading at the desired point, you can easily find that point later by referring to the counter.

Notes

- The counter reading is automatically reset to zero when a cassette is newly inserted.
- While the recorder is off, the display shows the present time, regardless of the CLOCK/COUNTER button setting.
- The counter reading will be retained in the memory even after the recorder is turned off, as long as the cassette is in the cassette compartment.
- The tape counter does not operate when a blank, unrecorded tape is played.

AUTOMATIC STOP

When the tape counter is displayed, rewinding stops at the tape counter's "0000" position. To rewind the tape further, press the ◀◀ button again.

When the current time is displayed, rewinding stops at the beginning of the tape.

1.7. TIMER-ACTIVATED RECORDING

Using the built-in timer, you can make four recordings any day or every day, either this week, next week or the week after next.

Possible days for recording

The day you set the timer

Mo	Tu	We	Th	Fr	Sa	Su
			1	2	3	4
5	6	7	8	9	10	11
12	13	14	15	16	17	18
19	20	21	22	23	24	25
26	27	28	29	30		

This week ① (points to 8)
 Next week ② (points to 15)
 The week after next ③ (points to 22)


Check before setting the timer

- Is the clock set to the correct day and correct time? Timer setting can only be made after the clock has been set.
- Is a cassette inserted in the recorder?
- Is the cassette long enough to record the programmes?
- Does the cassette have a safety tab on the bottom?


Note: The timer cannot be set during recording or playback.

TO SET THE TIMER


Example: To record a PROGRAM 2 broadcast from 9:00 AM to 11:25 AM on Friday next week.

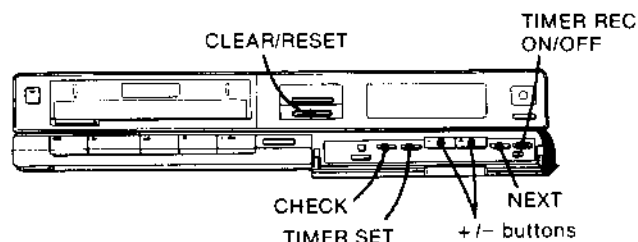


- 1 Press **TIMER SET**.
(If the recorder is off, it will be turned on automatically.) An empty event number for which no timer setting has been made will appear.

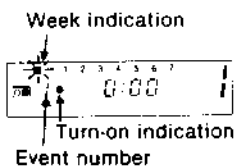


- 2 Set the week by pressing + or −.
Week indication changes:
① → ② → ③




- 3 Press **NEXT** and set the turn-on day by pressing + or −.
Day indication changes:
1234567(everyday) → 1 → 2 → ...7




- 4 Press **NEXT** and set the turn-on hour by pressing + or −.




- 5 Press **NEXT** and set the minute by pressing + or −.
(To set to 00 minutes, there is no need to press + or −.)



- 6 Press **NEXT** and set the turn-off hour and minute with + or − as in turn-on time setting.



- 7 Press **NEXT** and select the programme to be recorded with + or −.




To record the signals from the equipment connected to the VIDEO IN and AUDIO IN jacks, press **INPUT SELECT** so that "AU" indication appears.

- 8 Press **NEXT**.
The display reverts to the current time.



To set more events, press **TIMER SET** again to display the next event number. Repeat steps 2 to 8 above.

- 9 Press **TIMER REC ON/OFF**.
The **TIMER REC** indication appears and the recorder is turned off.



At the preset turn-on time, recording will start automatically and will stop at the preset turn-off time.

Note

If the inserted cassette is at its end or does not have the safety tab, the cassette will be automatically ejected when the **TIMER REC ON/OFF** button is pressed.

ONCE THE TIMER REC INDICATION HAS DISPLAYED, NO FUNCTION OF THE RECORDER CAN BE ACTIVATED, except for checking the timer setting.

To operate the recorder after setting the timer for recording, press the **TIMER REC ON/OFF** button so that the **TIMER REC** indication goes off. To reactivate the timer recording standby mode, be sure to press the **TIMER REC ON/OFF** button again.

WHILE SETTING TIMER

To change the preset item

Press the CLEAR/RESET button and repeat the timer setting procedure from step 2.

To record to the end of the tape

Set the turn-off time to a time after the tape will reach its end.

BEFORE OR DURING TIMER RECORDING

To check the timer settings

Press the CHECK button. Each time the CHECK button is pressed, the display will change to the preset turn-on time and the turn-off time from event 1 to 4, then the current time.

During actual timer recording, only the turn-off time of that event can be checked.

To change the settings of an event

- 1 Press the TIMER REC ON/OFF button so that the TIMER REC indication goes off.
- 2 Press the CHECK button enough times to display the event to be changed.
- 3 Press the CLEAR/RESET button.
- 4 Repeat the timer setting procedure on page 33 from step 2.

To erase the timer setting of an event

- 1 Press the TIMER REC ON/OFF button so that the TIMER REC indication goes off.
- 2 Press the CHECK button enough times to display the event to be erased.
- 3 Press the CLEAR/RESET button.
- 4 Press the TIMER SET button. The event will be erased from the memory.
- 5 If other events have been preset for recording, press the TIMER REC ON/OFF button again to reactivate.

Note: When the TIMER REC indication is displayed, the timer setting cannot be erased.

If the tape reaches the end during timer recording


The recording will stop and the tape will be rewound to the beginning. Then after about a second, the recorder will be turned off.

To stop the on-going timer recording

Press the TIMER REC ON/OFF button so that the TIMER REC indication goes off. The unit will be turned off automatically after about a second.

When two timer settings overlap

If two timer settings are preset as in the following example, the recording of the event 2 will begin after the first recording is completely finished. Consequently, the event 2 will be cut off in the beginning of its recording.

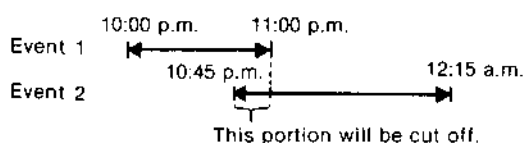

AFTER TIMER RECORDING

When a timer recording is finished, the setting (except the everyday setting) will be eliminated and the next timer settings will move up one event position each.


For example, if you have preset 4 events, when the first timer recording is finished, the fourth event position will be vacant. If the TIMER SET button is pressed, "4" will appear in the window.

1-8. QUICK TIMER RECORDING

—To set the recording duration and to turn off the unit automatically

During recording, you can set the recording duration for up to 4 hours in units of 30 minutes by pressing the QUICK TIMER button. After the preset time has elapsed, recording stops and the recorder is turned off automatically.

- 1 Start recording.
- 2 Press the QUICK TIMER button to set the recording duration. The TIMER REC indication will appear.

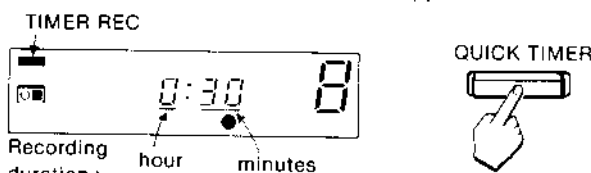

Each time you press the QUICK TIMER button, the indication changes:

0:30 → 1:00 → 1:30 → 2:00 → ... 3:30 → 4:00

As the recording continues, the duration indication decreases minute by minute to 0:00 and the recording stops. The recorder is turned off automatically.

Note

When the TIMER REC indication is displayed, no function of the recorder can be activated.

To extend the recording duration

The on-going recording duration can be extended simply by pressing the QUICK TIMER button. The duration will be extended in units of 30 minutes with each pressing.

Example: When 2:25 is indicated,
2:25 → 2:30 → 3:00 ...

To cancel the quick timer function


Press the TIMER REC ON/OFF button so that the TIMER REC indication goes off. The recorder will be turned off automatically after about a second.

SECTION 2 DISASSEMBLY

2-1. DISASSEMBLY OF CABINET


- 1) Remove the four case set screws **1** .
- 2) Remove the upper case **2** in the direction shown by the arrow **A** .
- 3) Loosen the eight screws (BVTP3 x 8) **3** .
- 4) Remove the lower case **4** in the direction shown by the arrow **B** .
- 5) Remove the three screws (BVTP3 x 8) **5** .
- 6) Remove the two claws **6** in the direction shown by the arrow **C** , then remove the front panel **7** in the direction shown by the arrow **D** .

Note: Follow the disassembly procedure in the numerical order given.

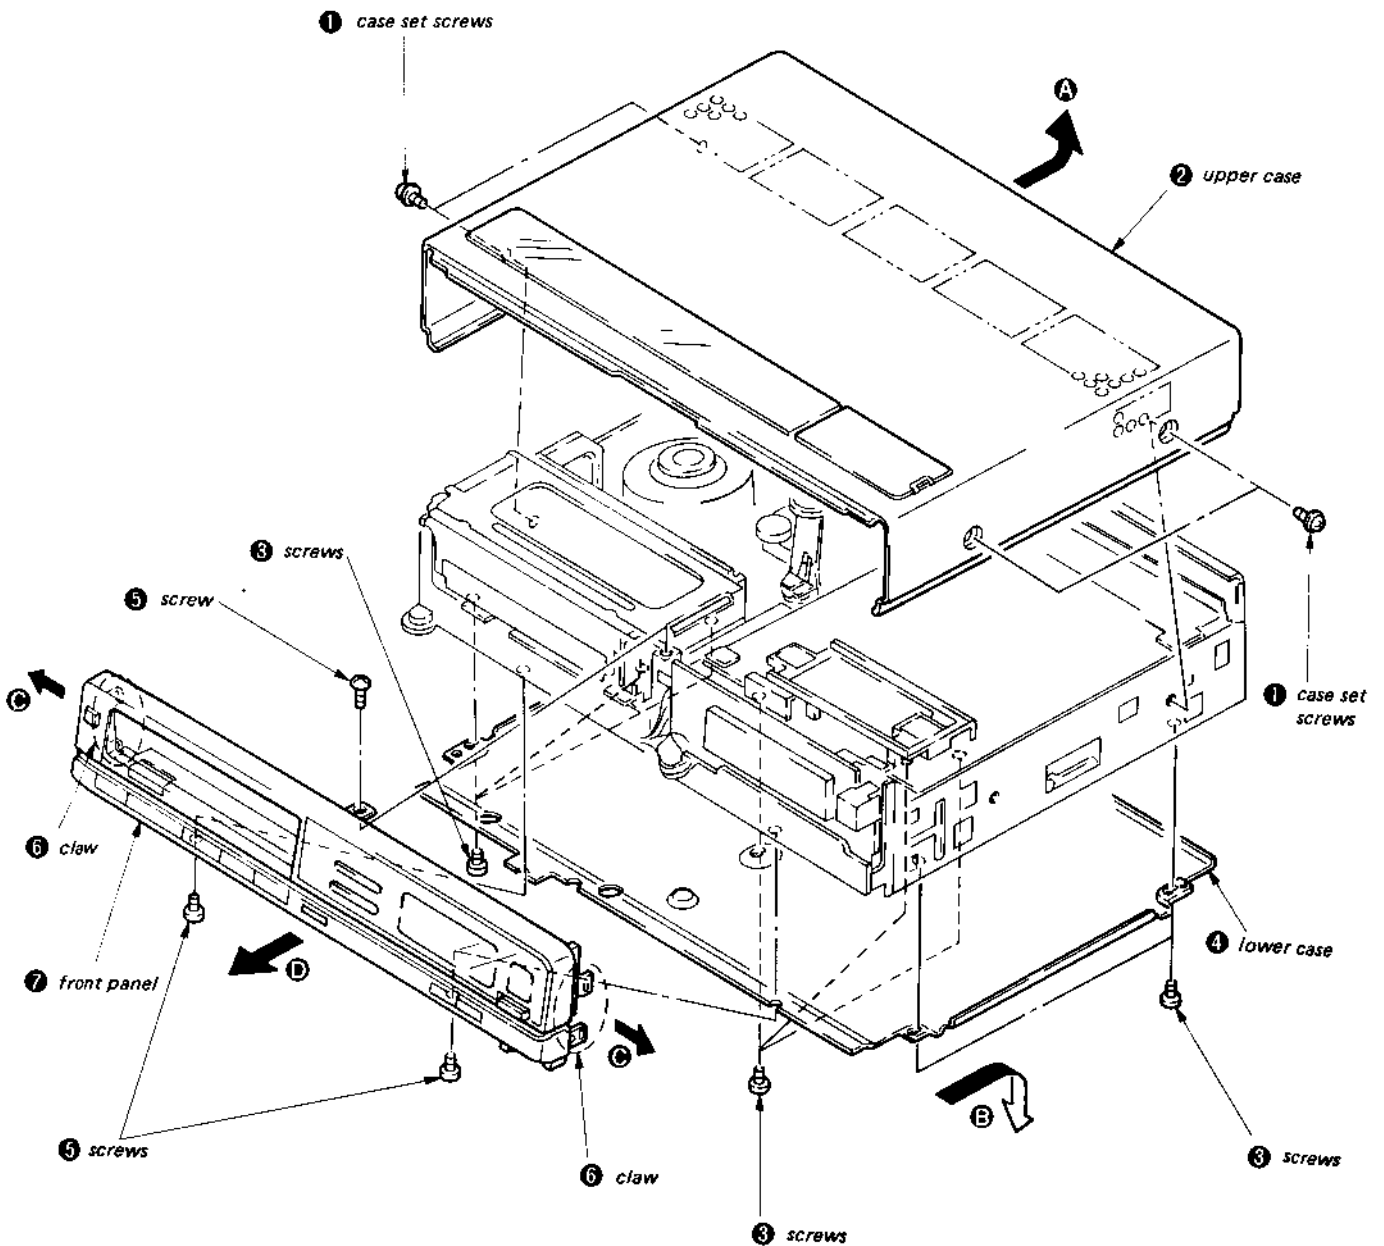


2.2. REMOVAL OF THE RP-20 BOARD

- 1) Pull out the connector CN501 ① .
- 2) Remove the two screws (BVTP3 x 8) ② .
- 3) Pull out the three connectors (CN503, CN504) ③ , ④ .
- 4) Remove the two shield cases ⑤ in the direction shown by the arrows A and B .

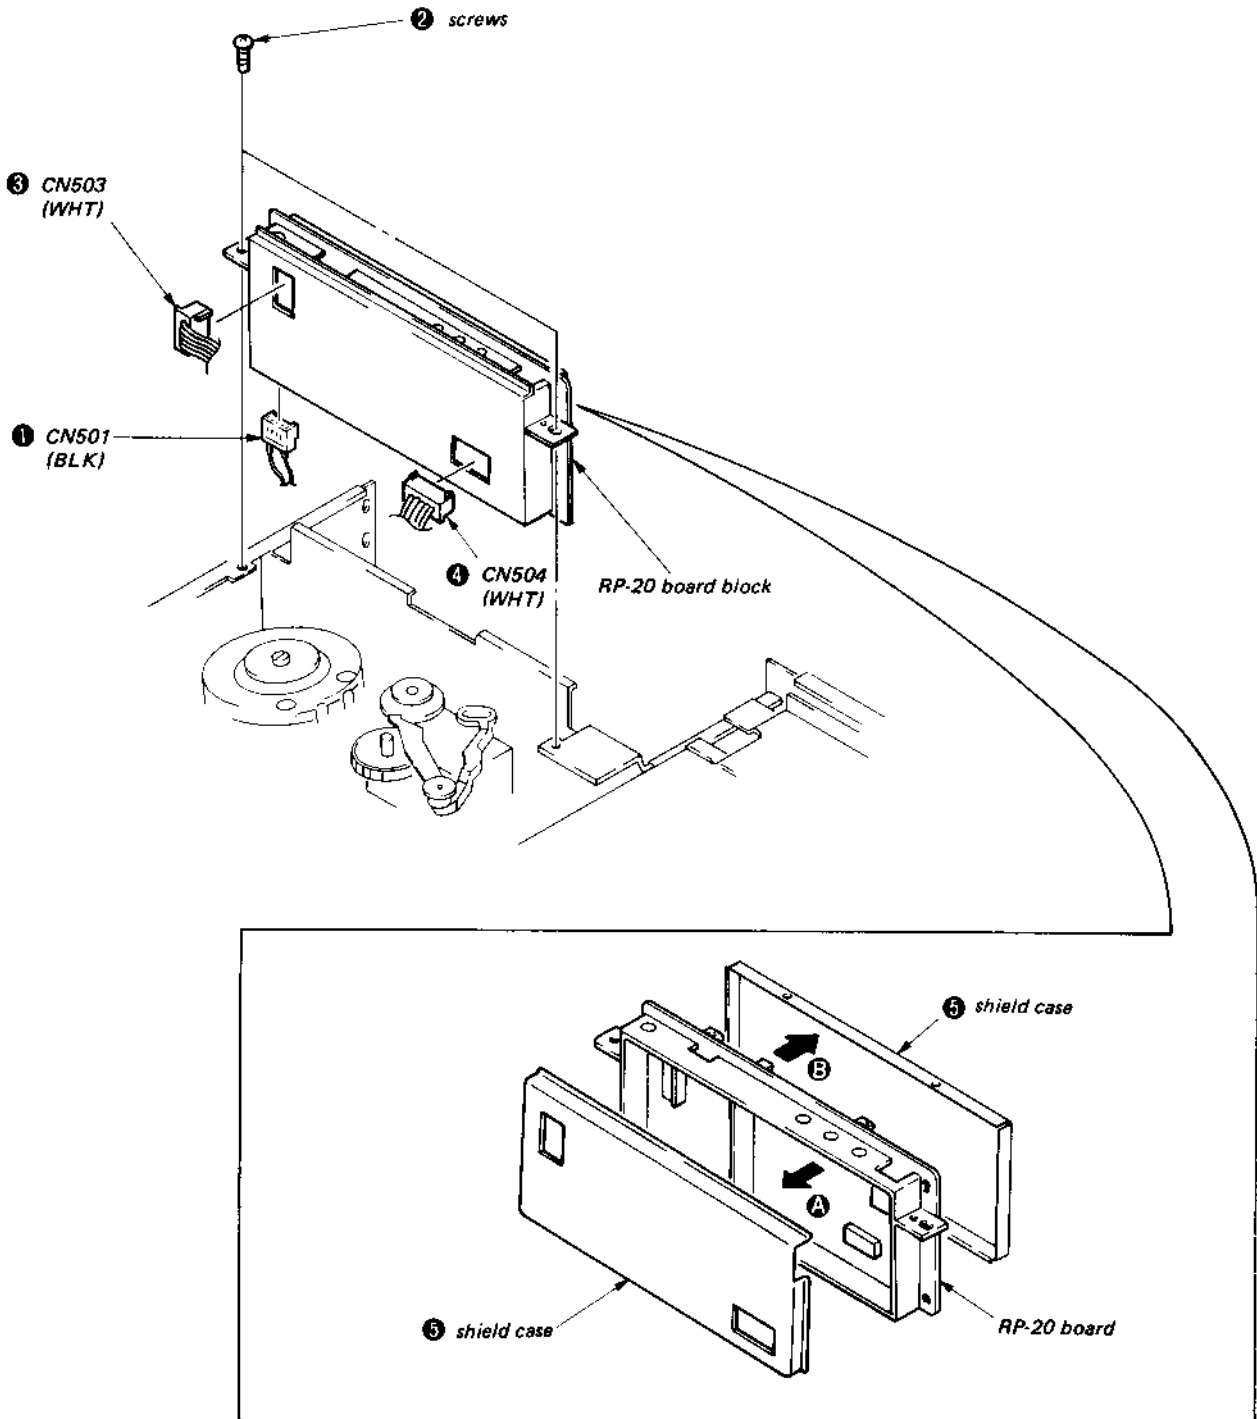


2-3. REMOVAL OF THE TA-22 BOARD

- 1) Remove the two screws (BVTP3 x 8) ① .
- 2) Remove the TA-22 board ② in the direction shown by the arrow.

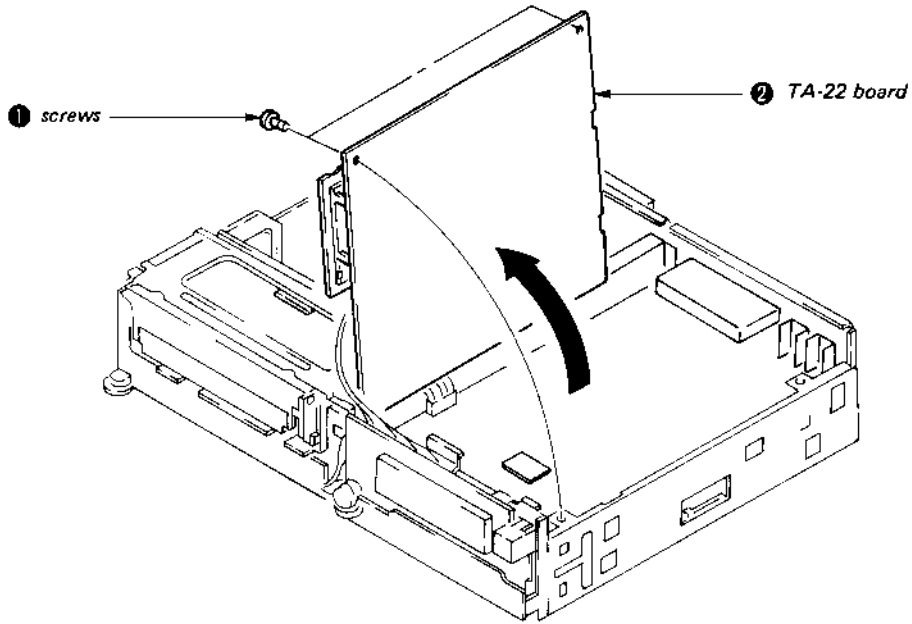


2-4. REMOVAL OF THE YC-31 BOARD

- 1) Stand the set with the left side panel on the bottom.
- 2) Remove the screw (BVTP3 x 8) ① .
- 3) Remove the plate, connector ② in the direction shown by the arrow A .
- 4) Remove the two screws (BVTP3 x 8) ③ .
- 5) Remove the YC-31 board ④ in the direction shown by the arrow B .

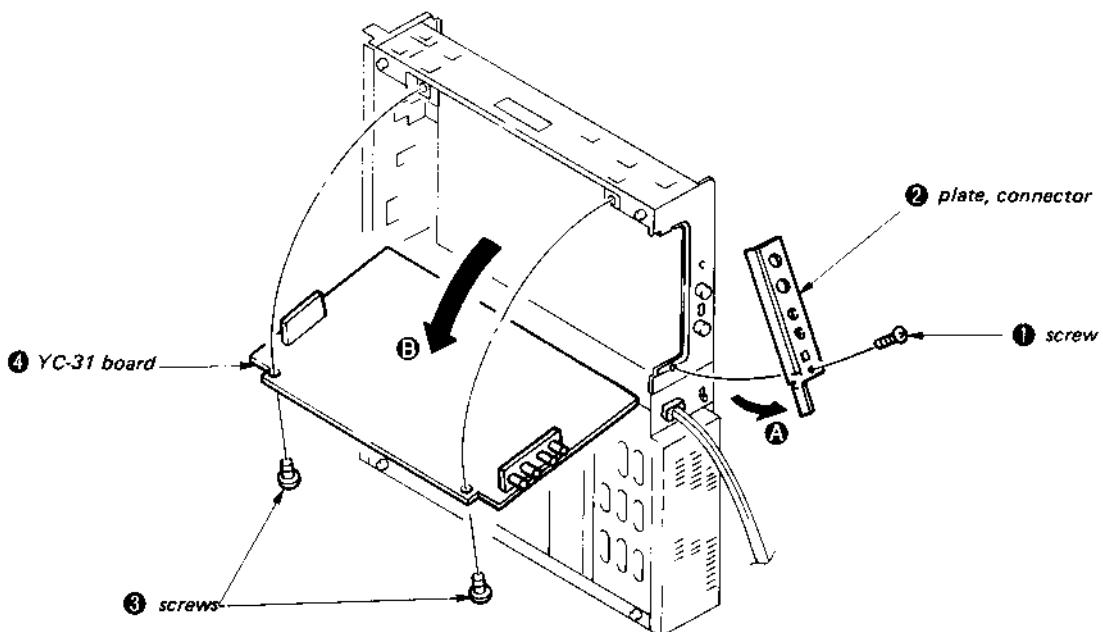


2-5. REMOVAL OF THE TIMER BLOCK

- 1) Remove the screw (BVTP3 x 8) ① .
- 2) Remove the TM-70 board ② in the direction shown by the arrow A .
- 3) Remove the two screws (BVTP3 x 8) ③ .
- 4) Remove the TM-57 board ④ in the direction shown by the arrow B .

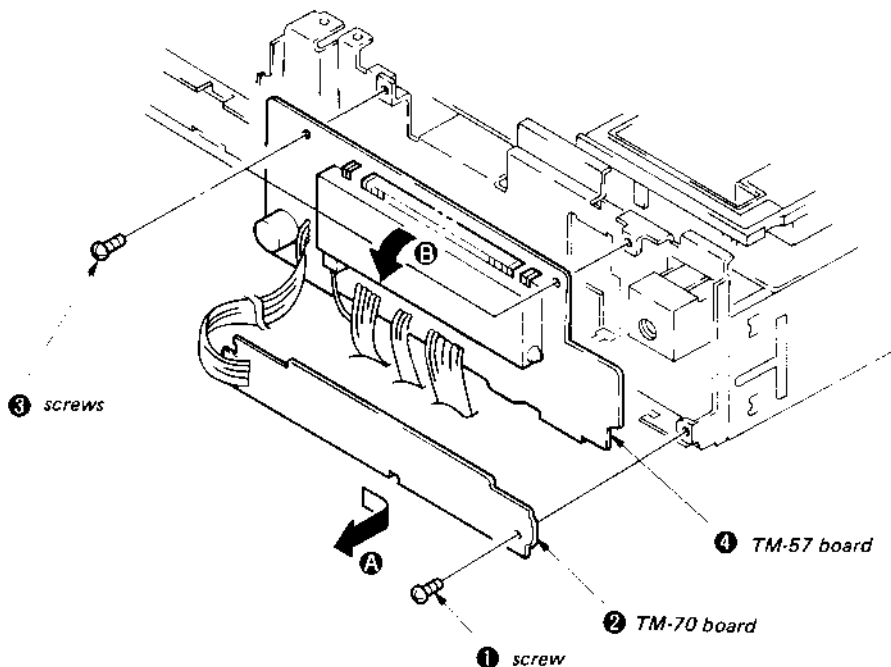


2-6. REMOVAL OF THE FU-35 BOARD

- 1) Remove the screw (BVTP3 x 8) ① .
- 2) Remove the FU-35 board ② in the direction shown by the arrow A , then remove in the direction shown by the arrow B .

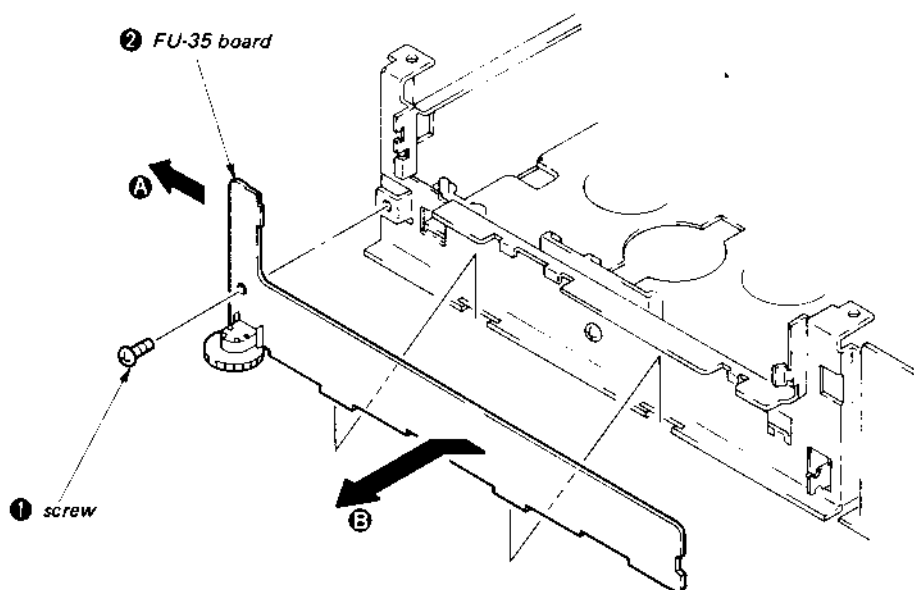


2-7. REMOVAL OF THE POWER BLOCK

- 1) Remove the six screws (BVTP3 x 8) ① .
- 2) Pull out the five connectors (CN101, CN102, CN103, CN104, CN106) ② .
- 3) Remove the power block ③ in the direction shown by the arrow.

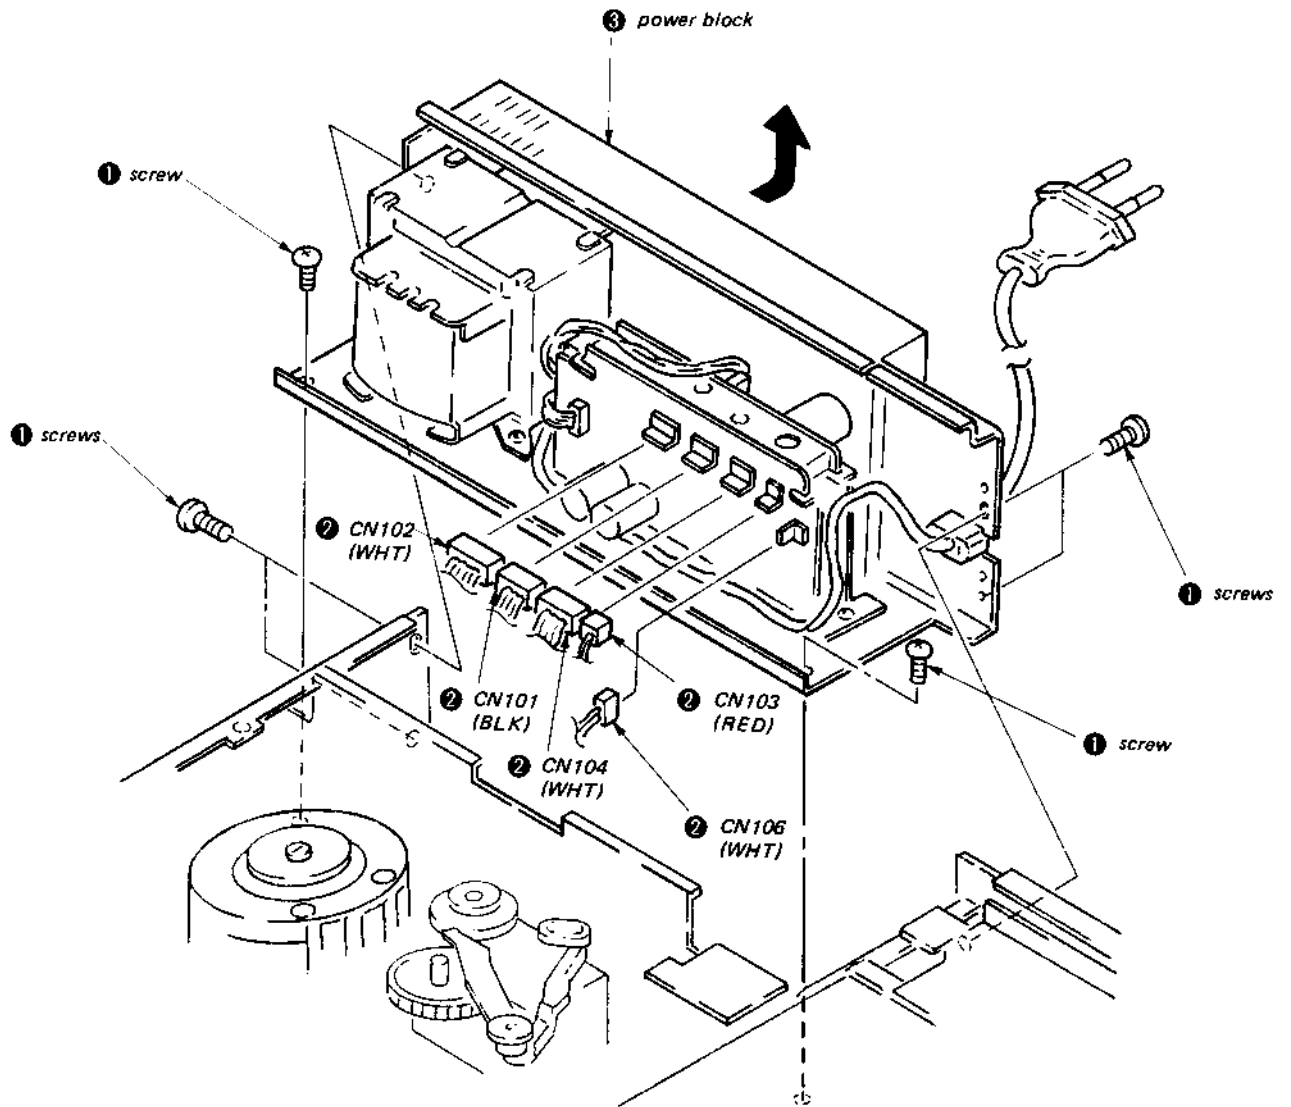


2-8. REMOVAL OF THE FL CASSETTE COMPARTMENT ASSEMBLY

- 1) Remove the four screws (BVTP3 x 8) ① .
- 2) Remove the internal gear flange ② .
- 3) Remove the timing belt (loading belt) ③ .
- 4) Pull out the connector CN606 ④ , on the SS-34 board.
- 5) Remove the FL cassette compartment assembly ⑤ in the direction shown by the arrow.

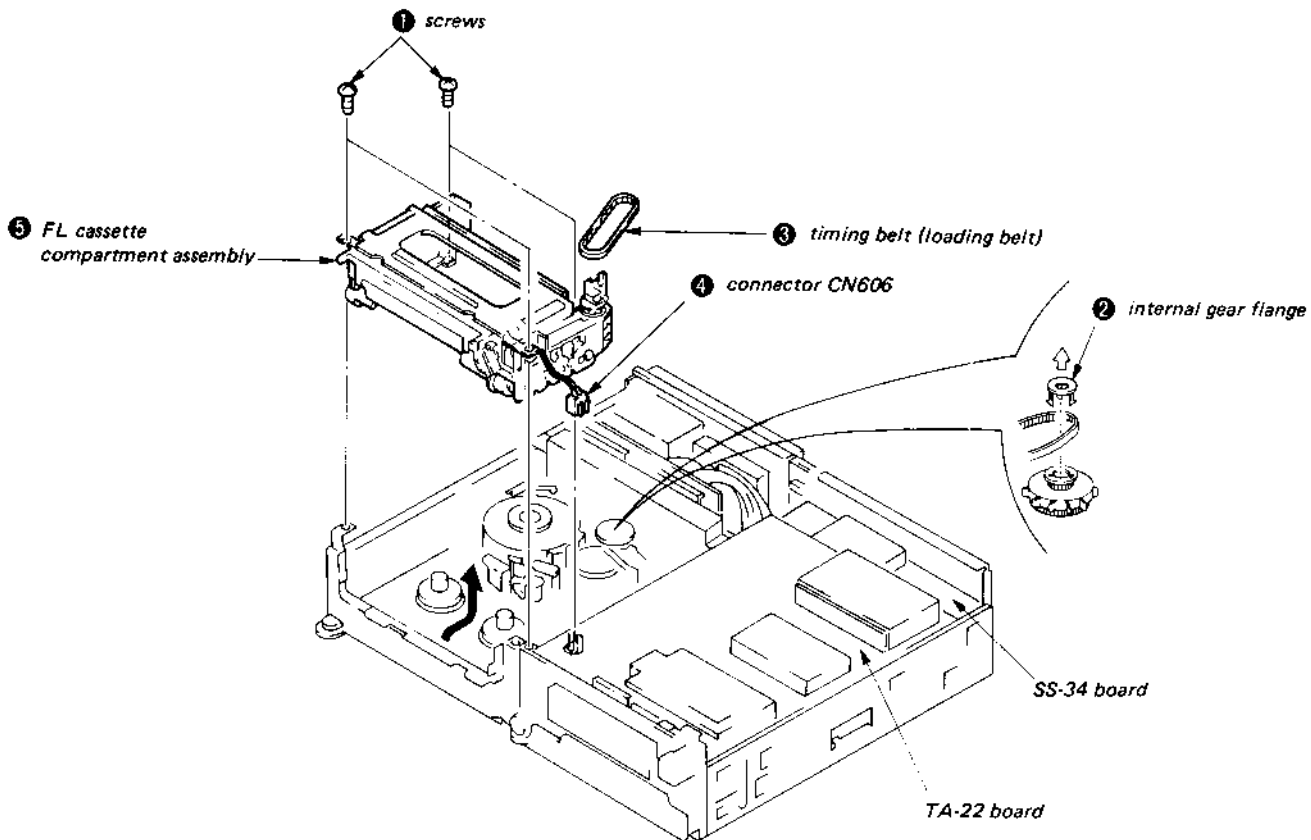


2-9. REMOVAL OF THE REEL BLOCK ASSEMBLY


- 1) Remove the four screws (BVTP3 x 8) ① .
- 2) Remove the reel block assembly ② in the direction shown by the arrow.

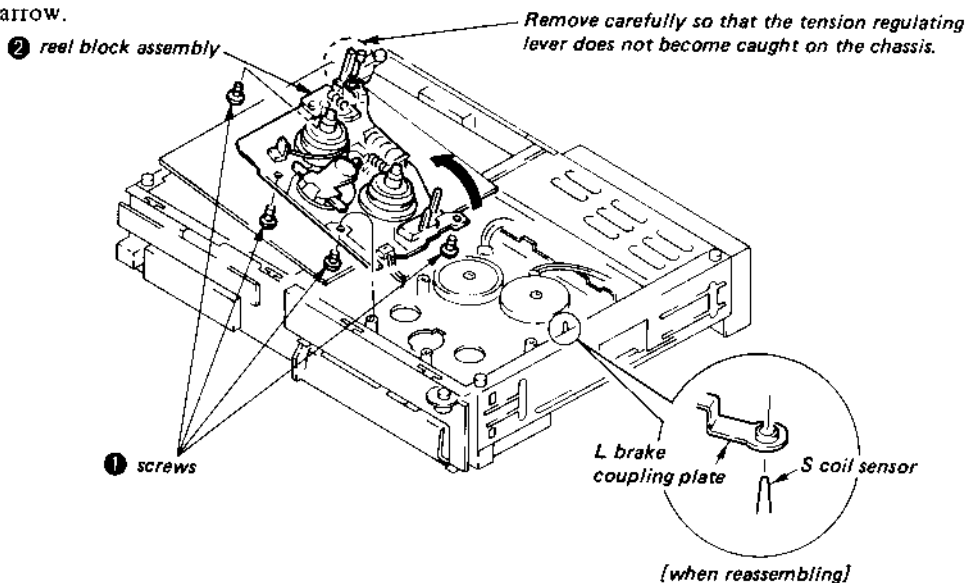

2-10. INTERNAL VIEW
— Top Side —

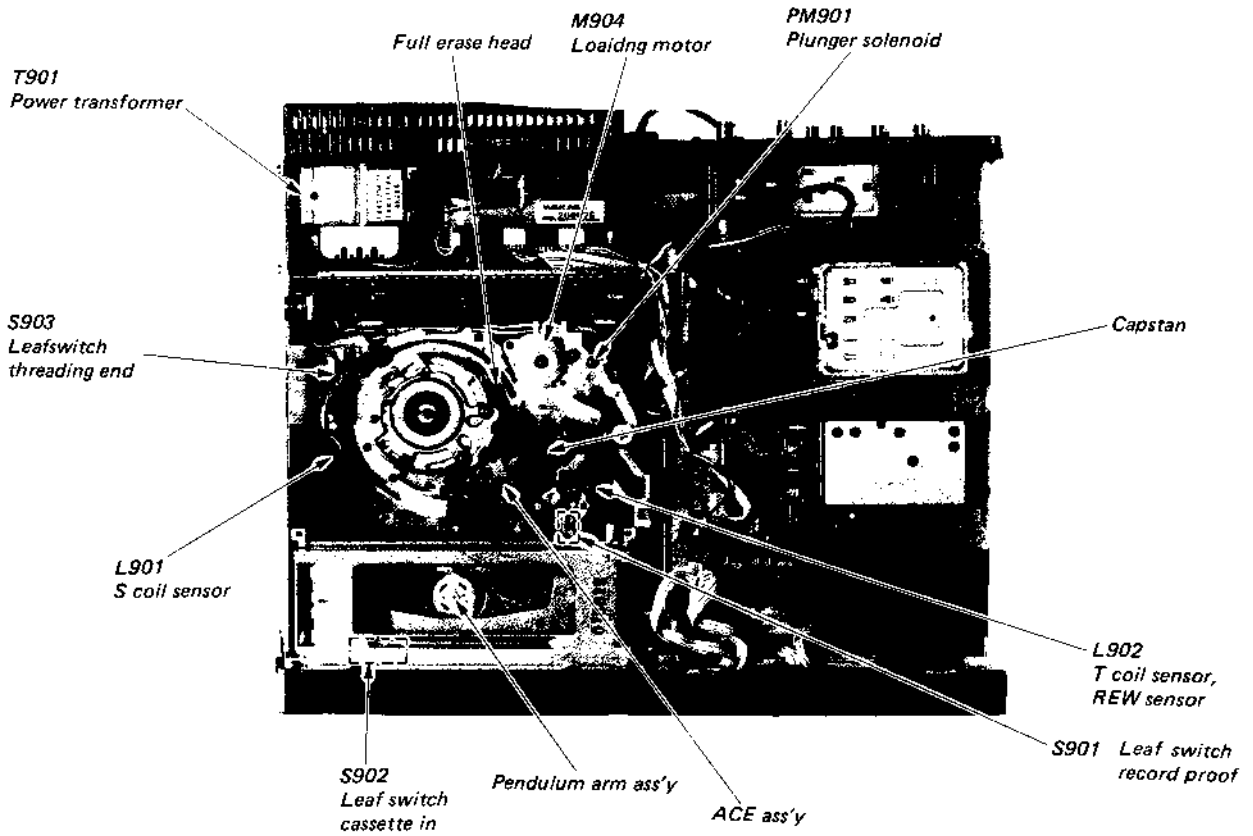


— Bottom Side —

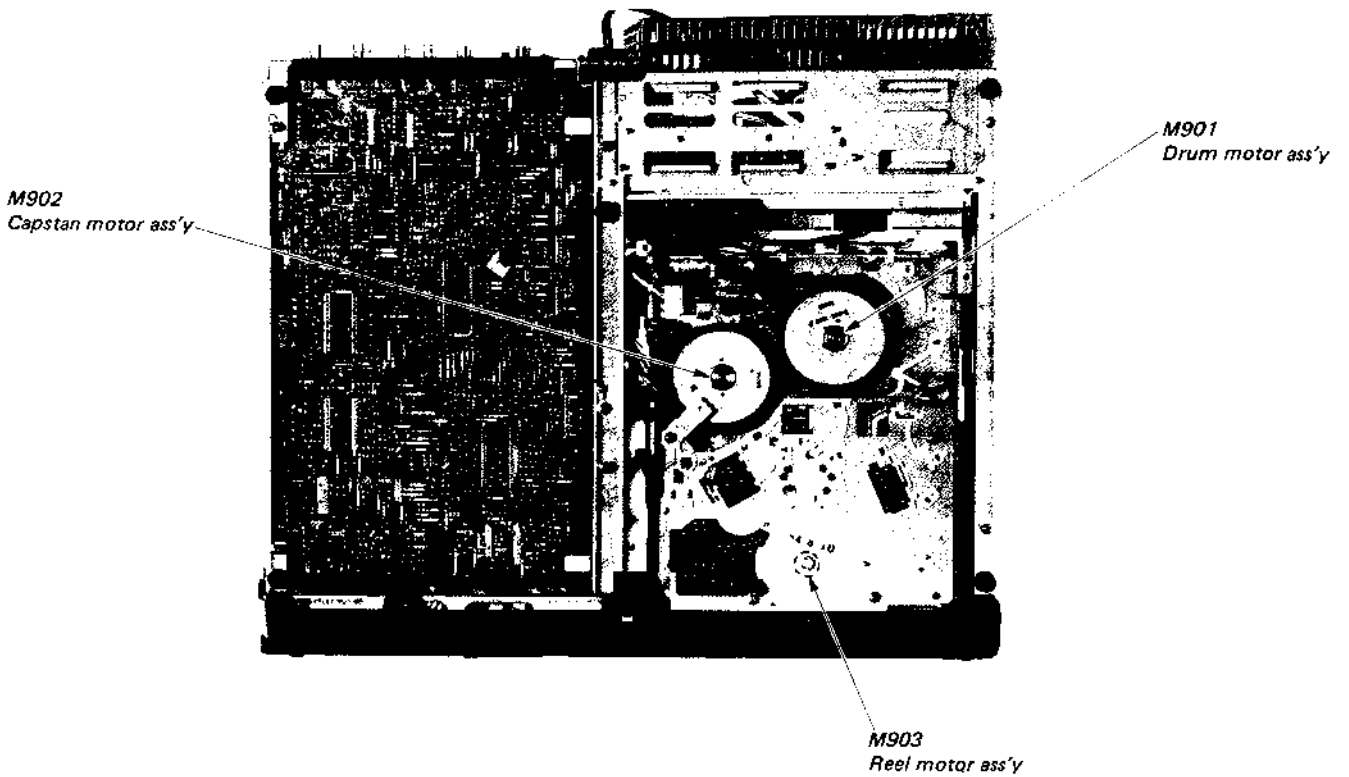


SECTION 3 DIAGRAMS


3-1. CIRCUIT BOARDS LOCATION

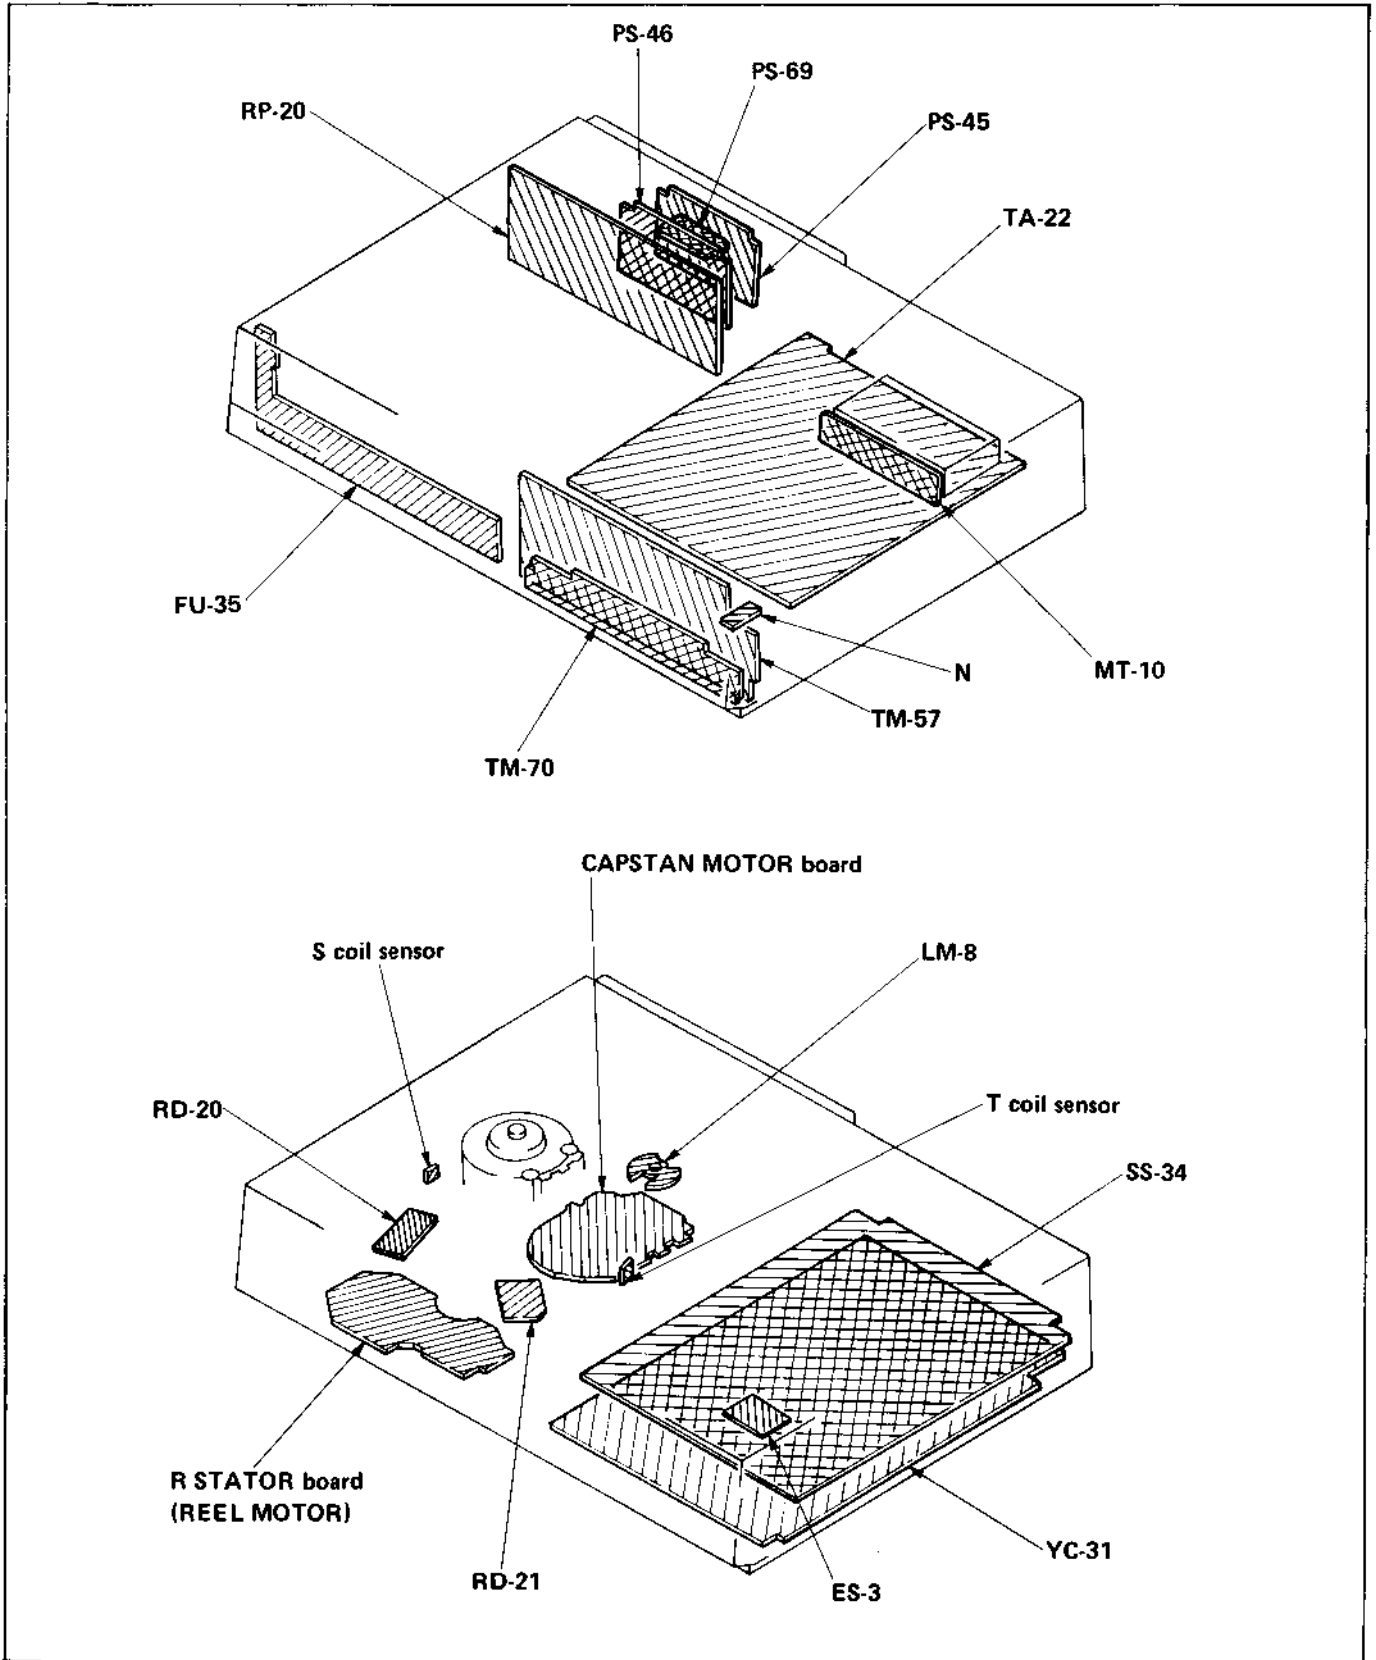


Note: The ES-3 board is mounted on the SS-34 board.


3-2. OVERALL BLOCK DIAGRAM

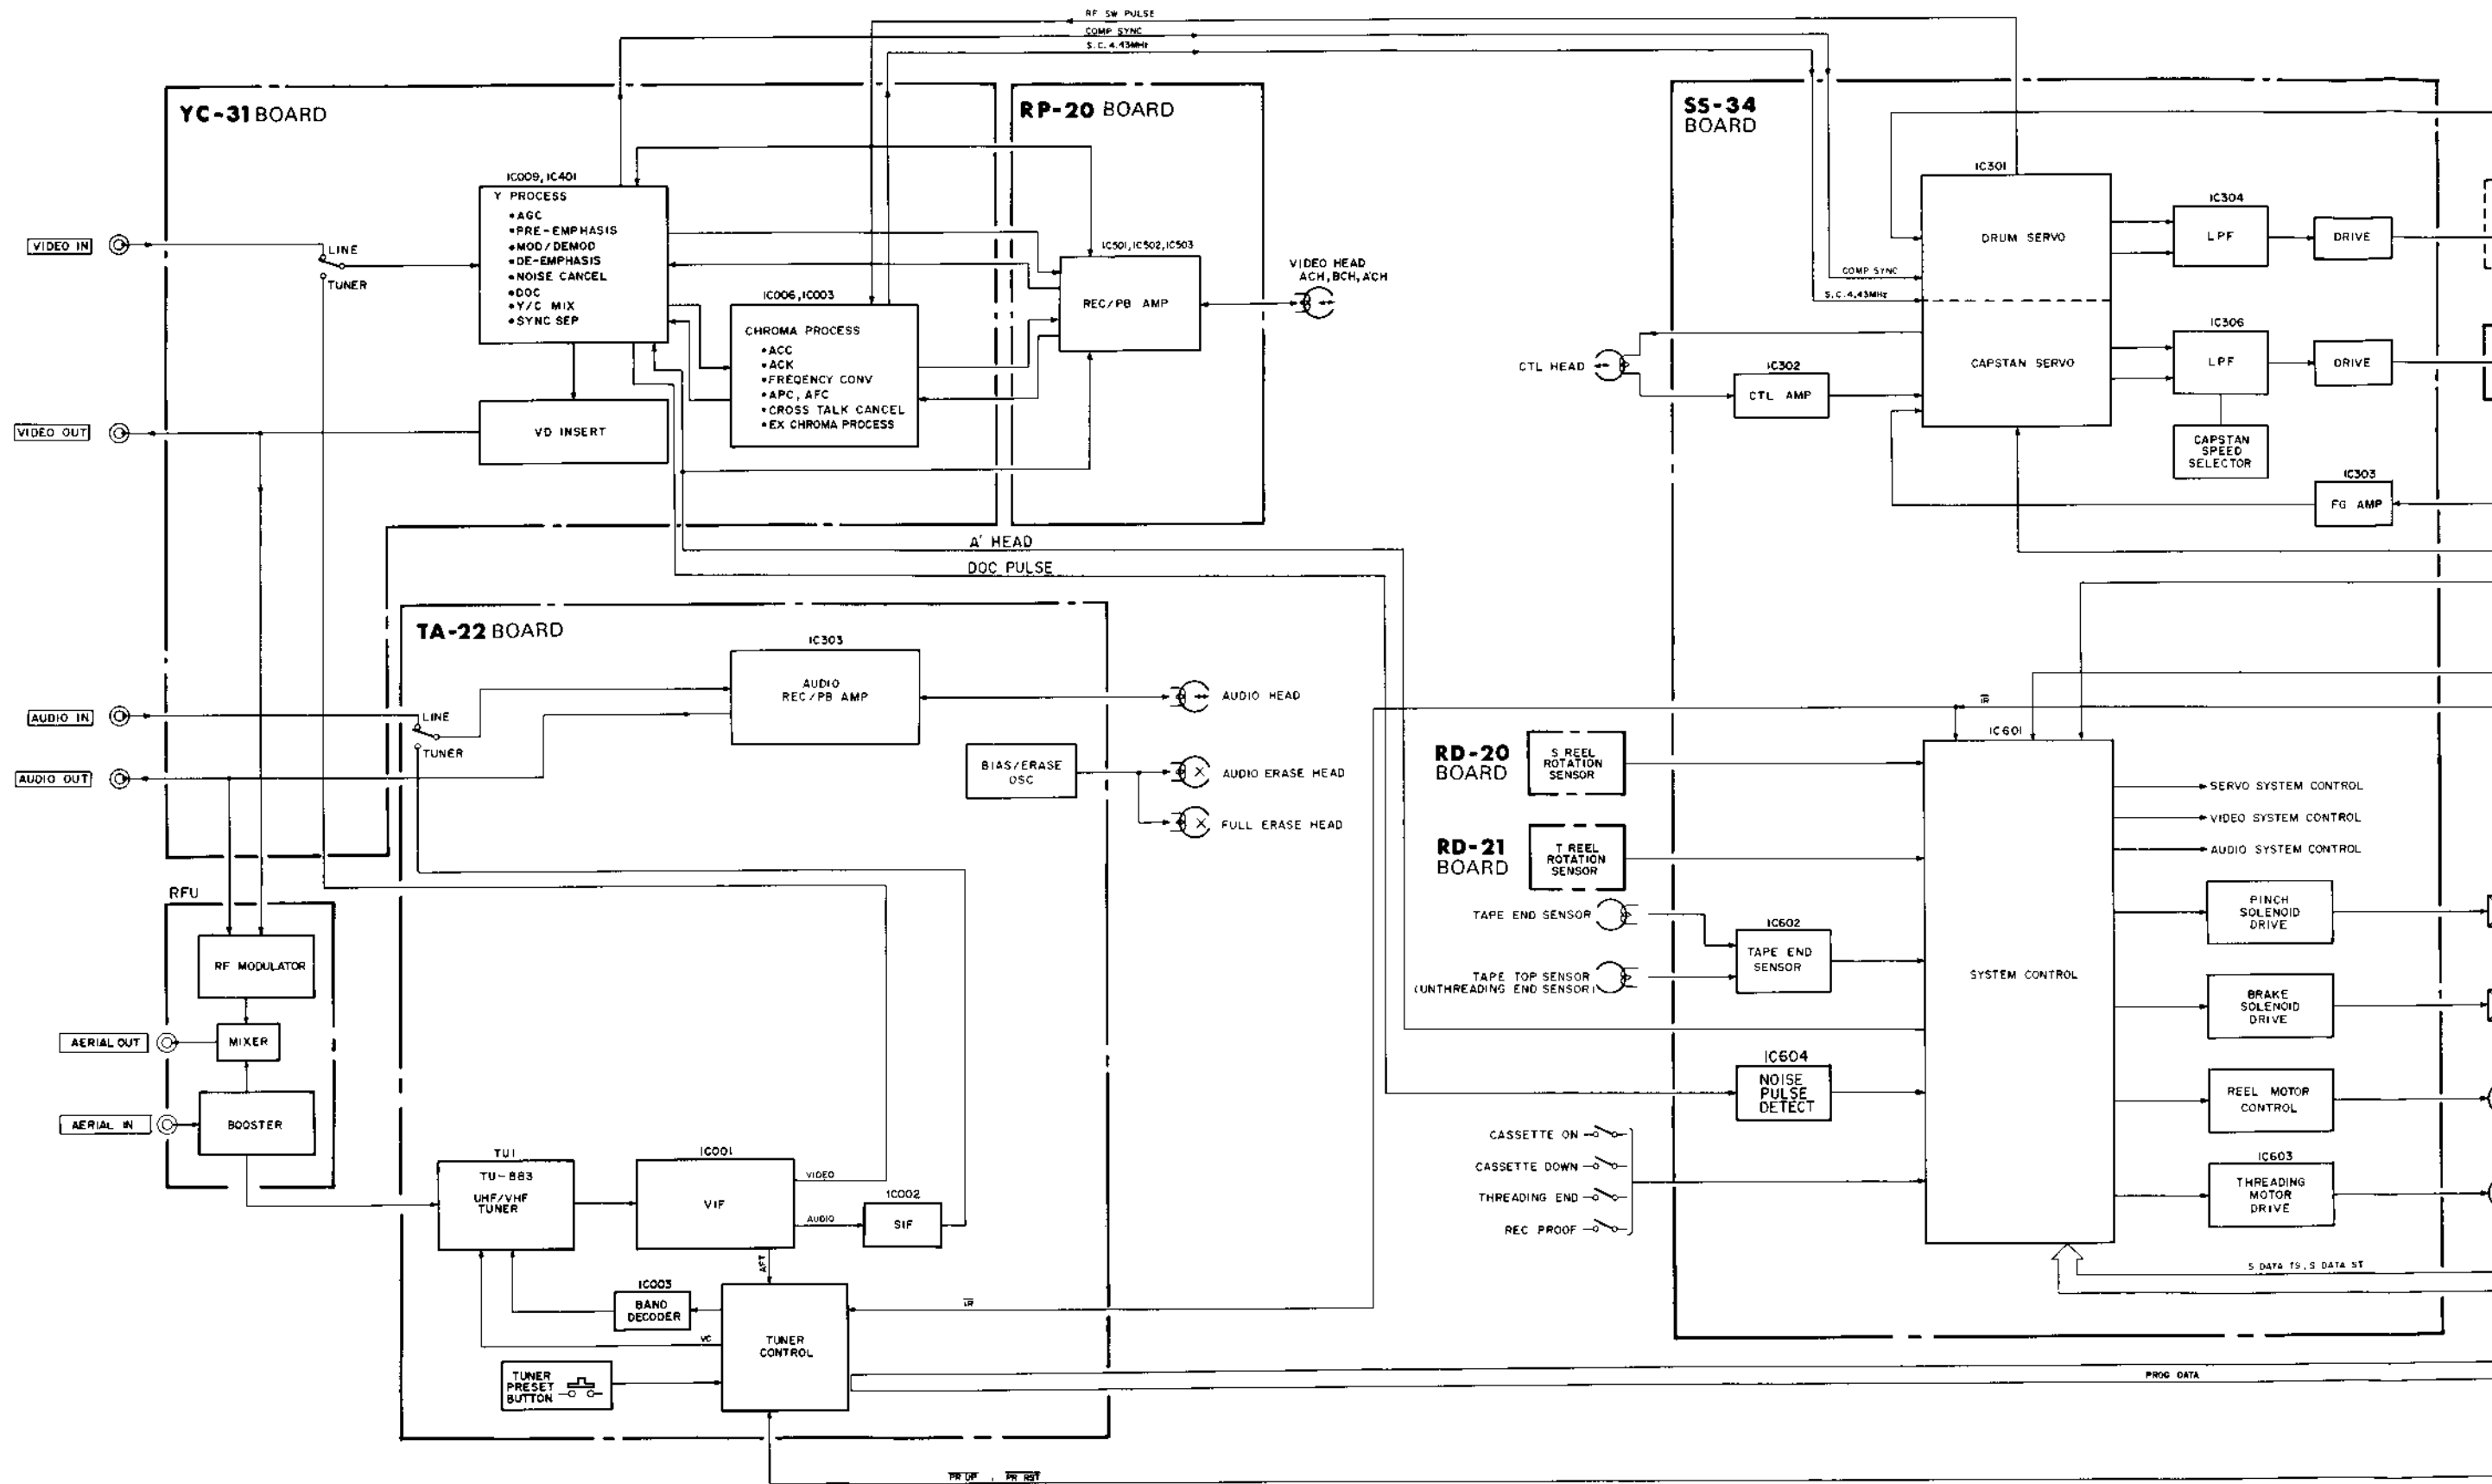

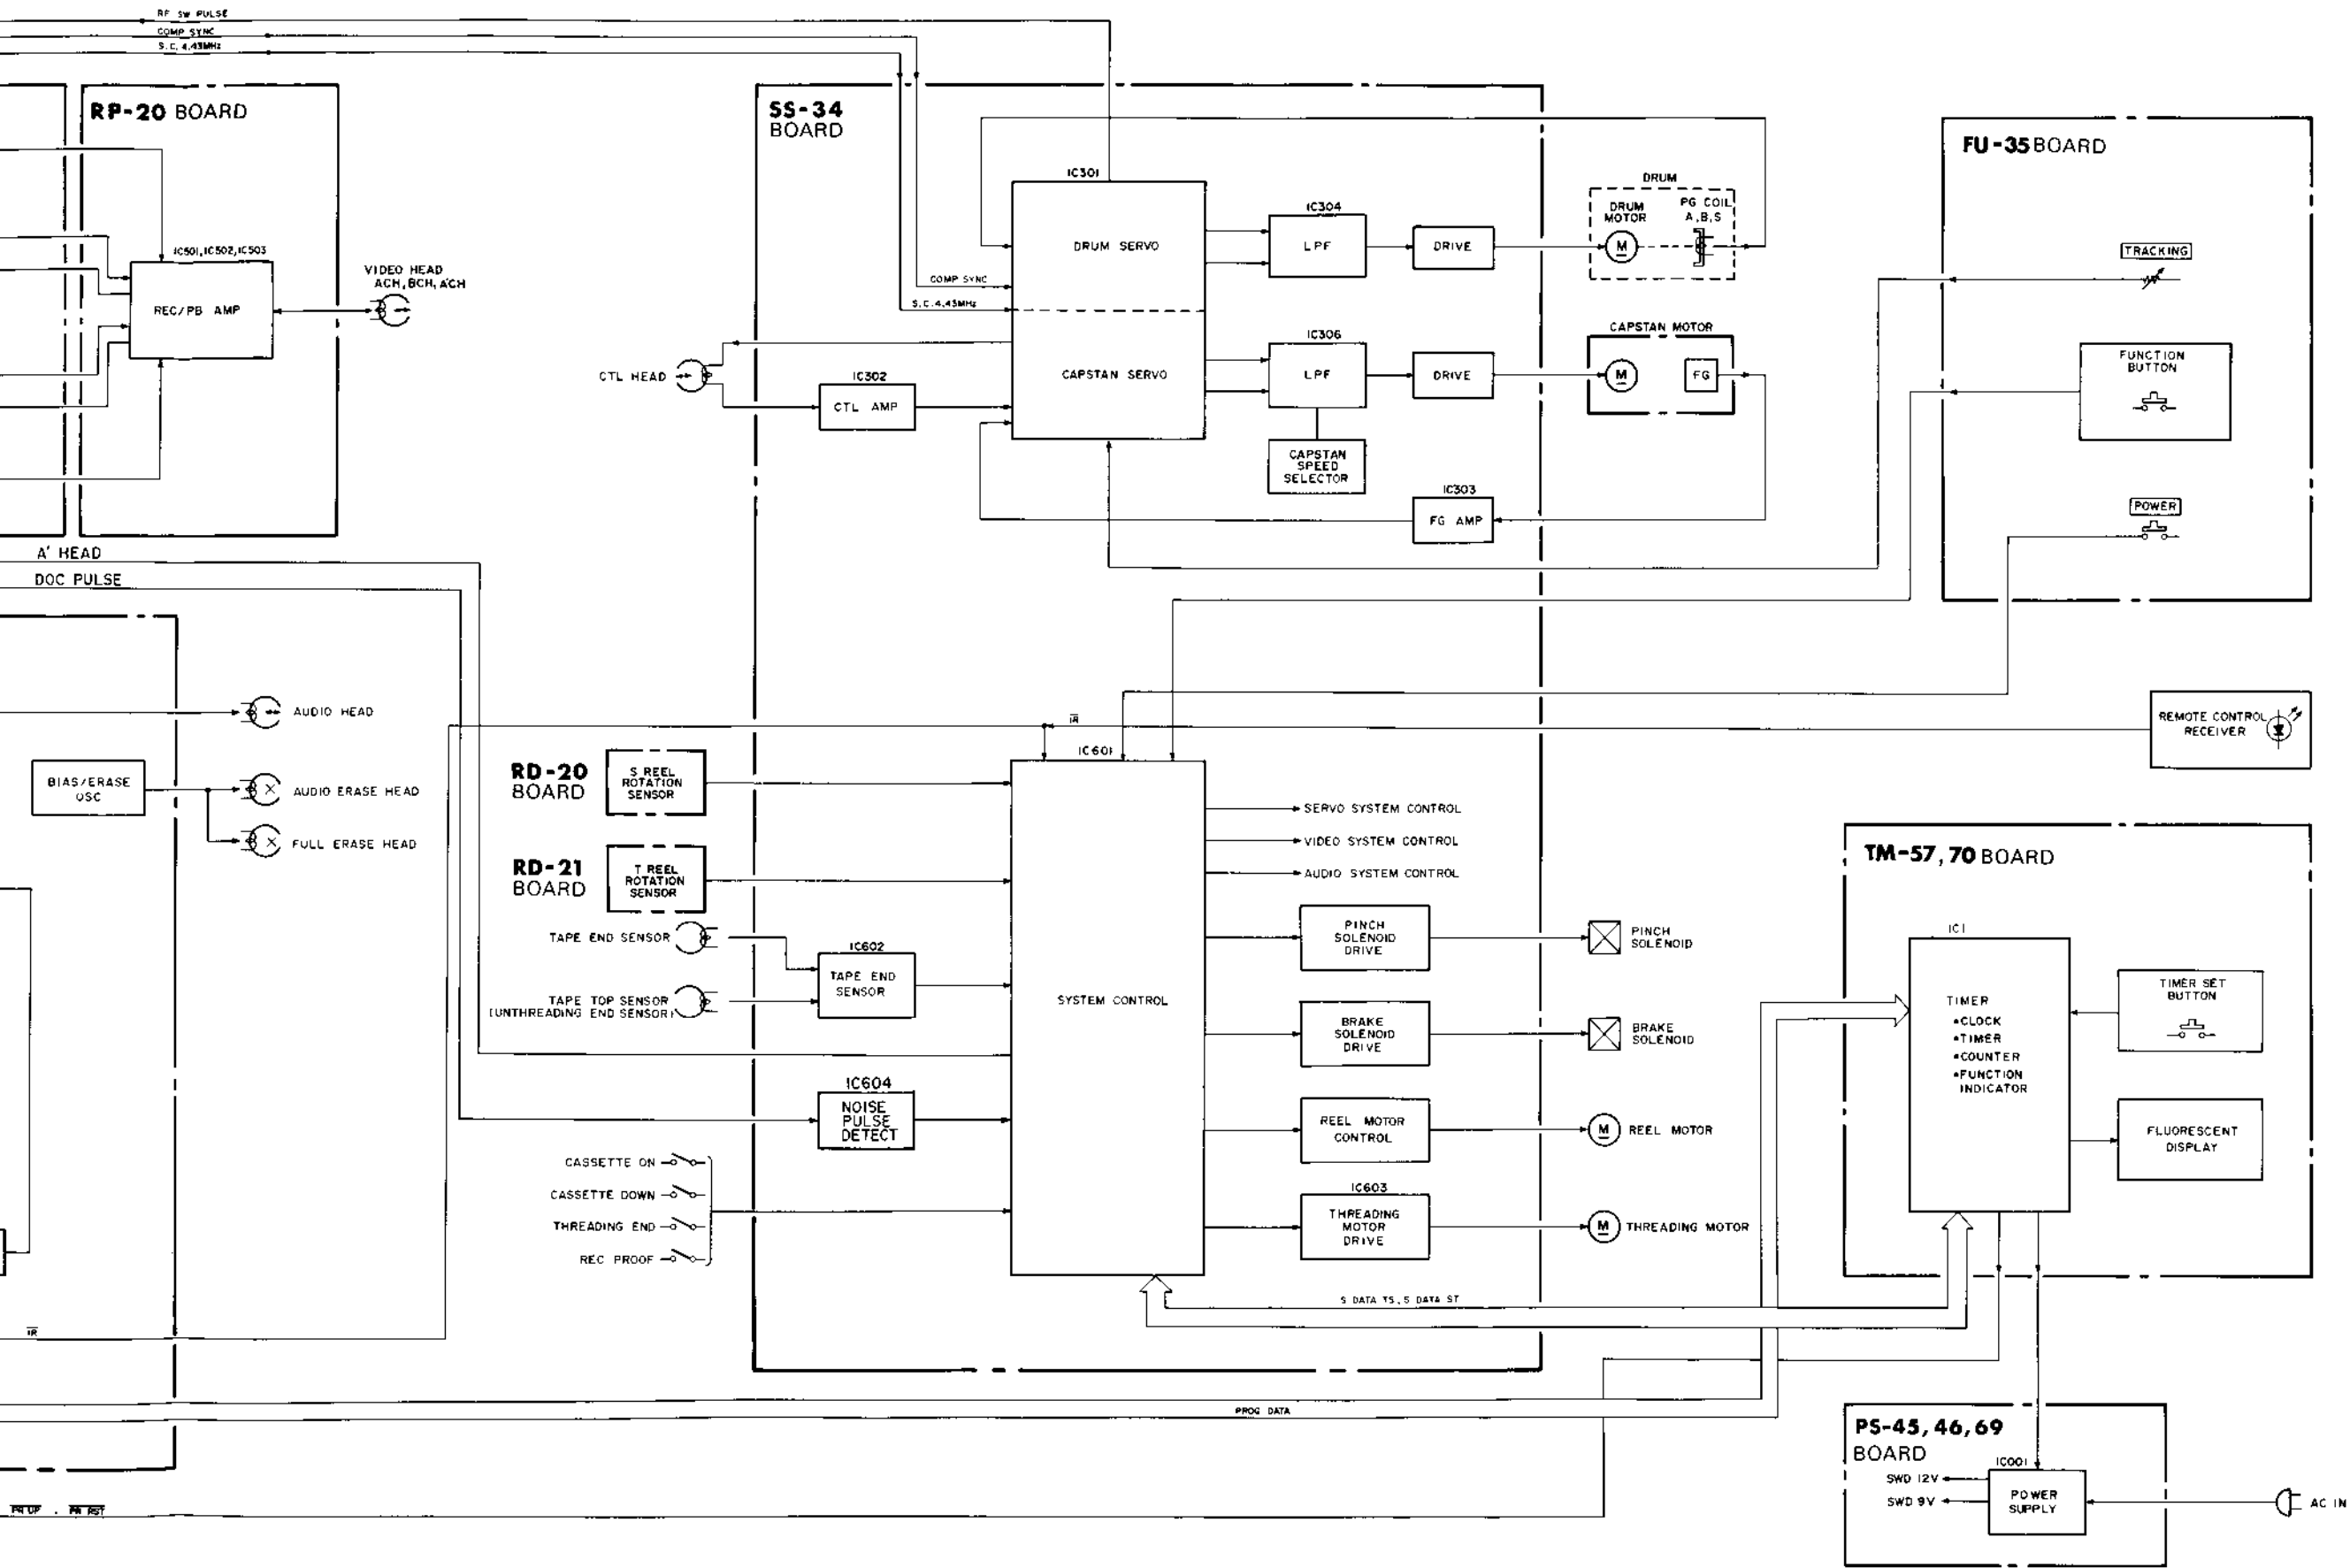


3-3. VIDEO BLOCK DIAGRAM

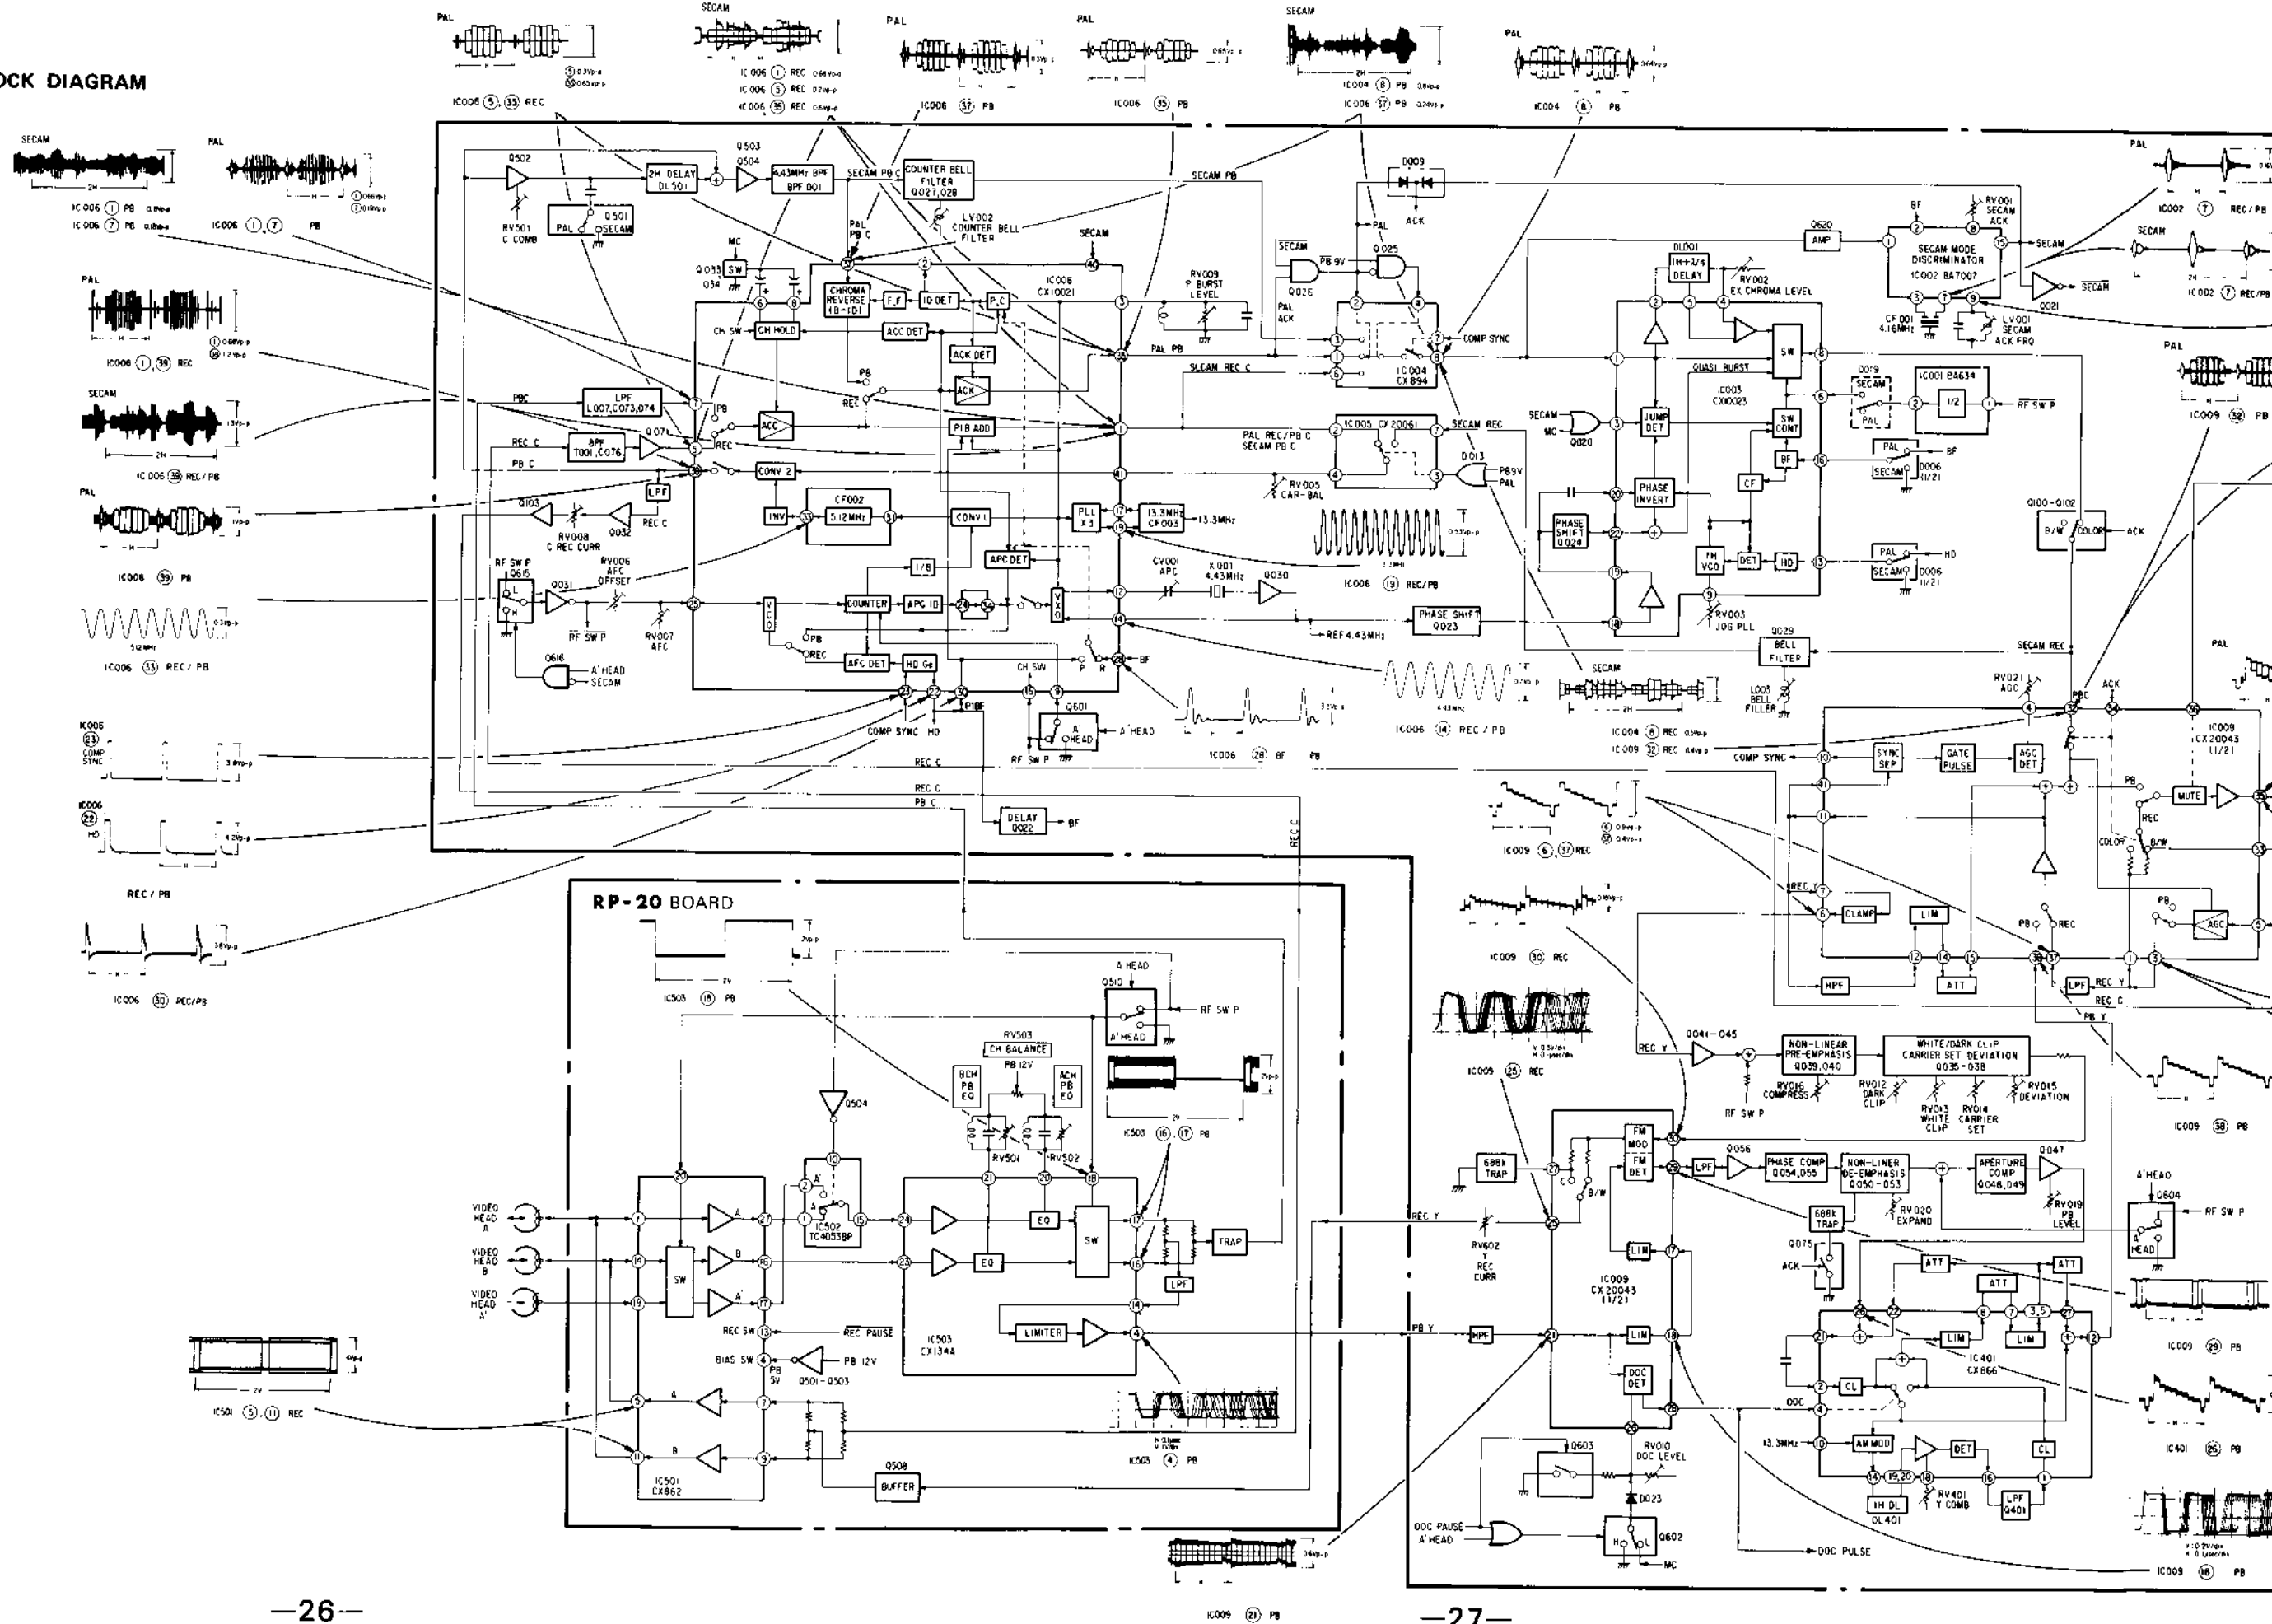

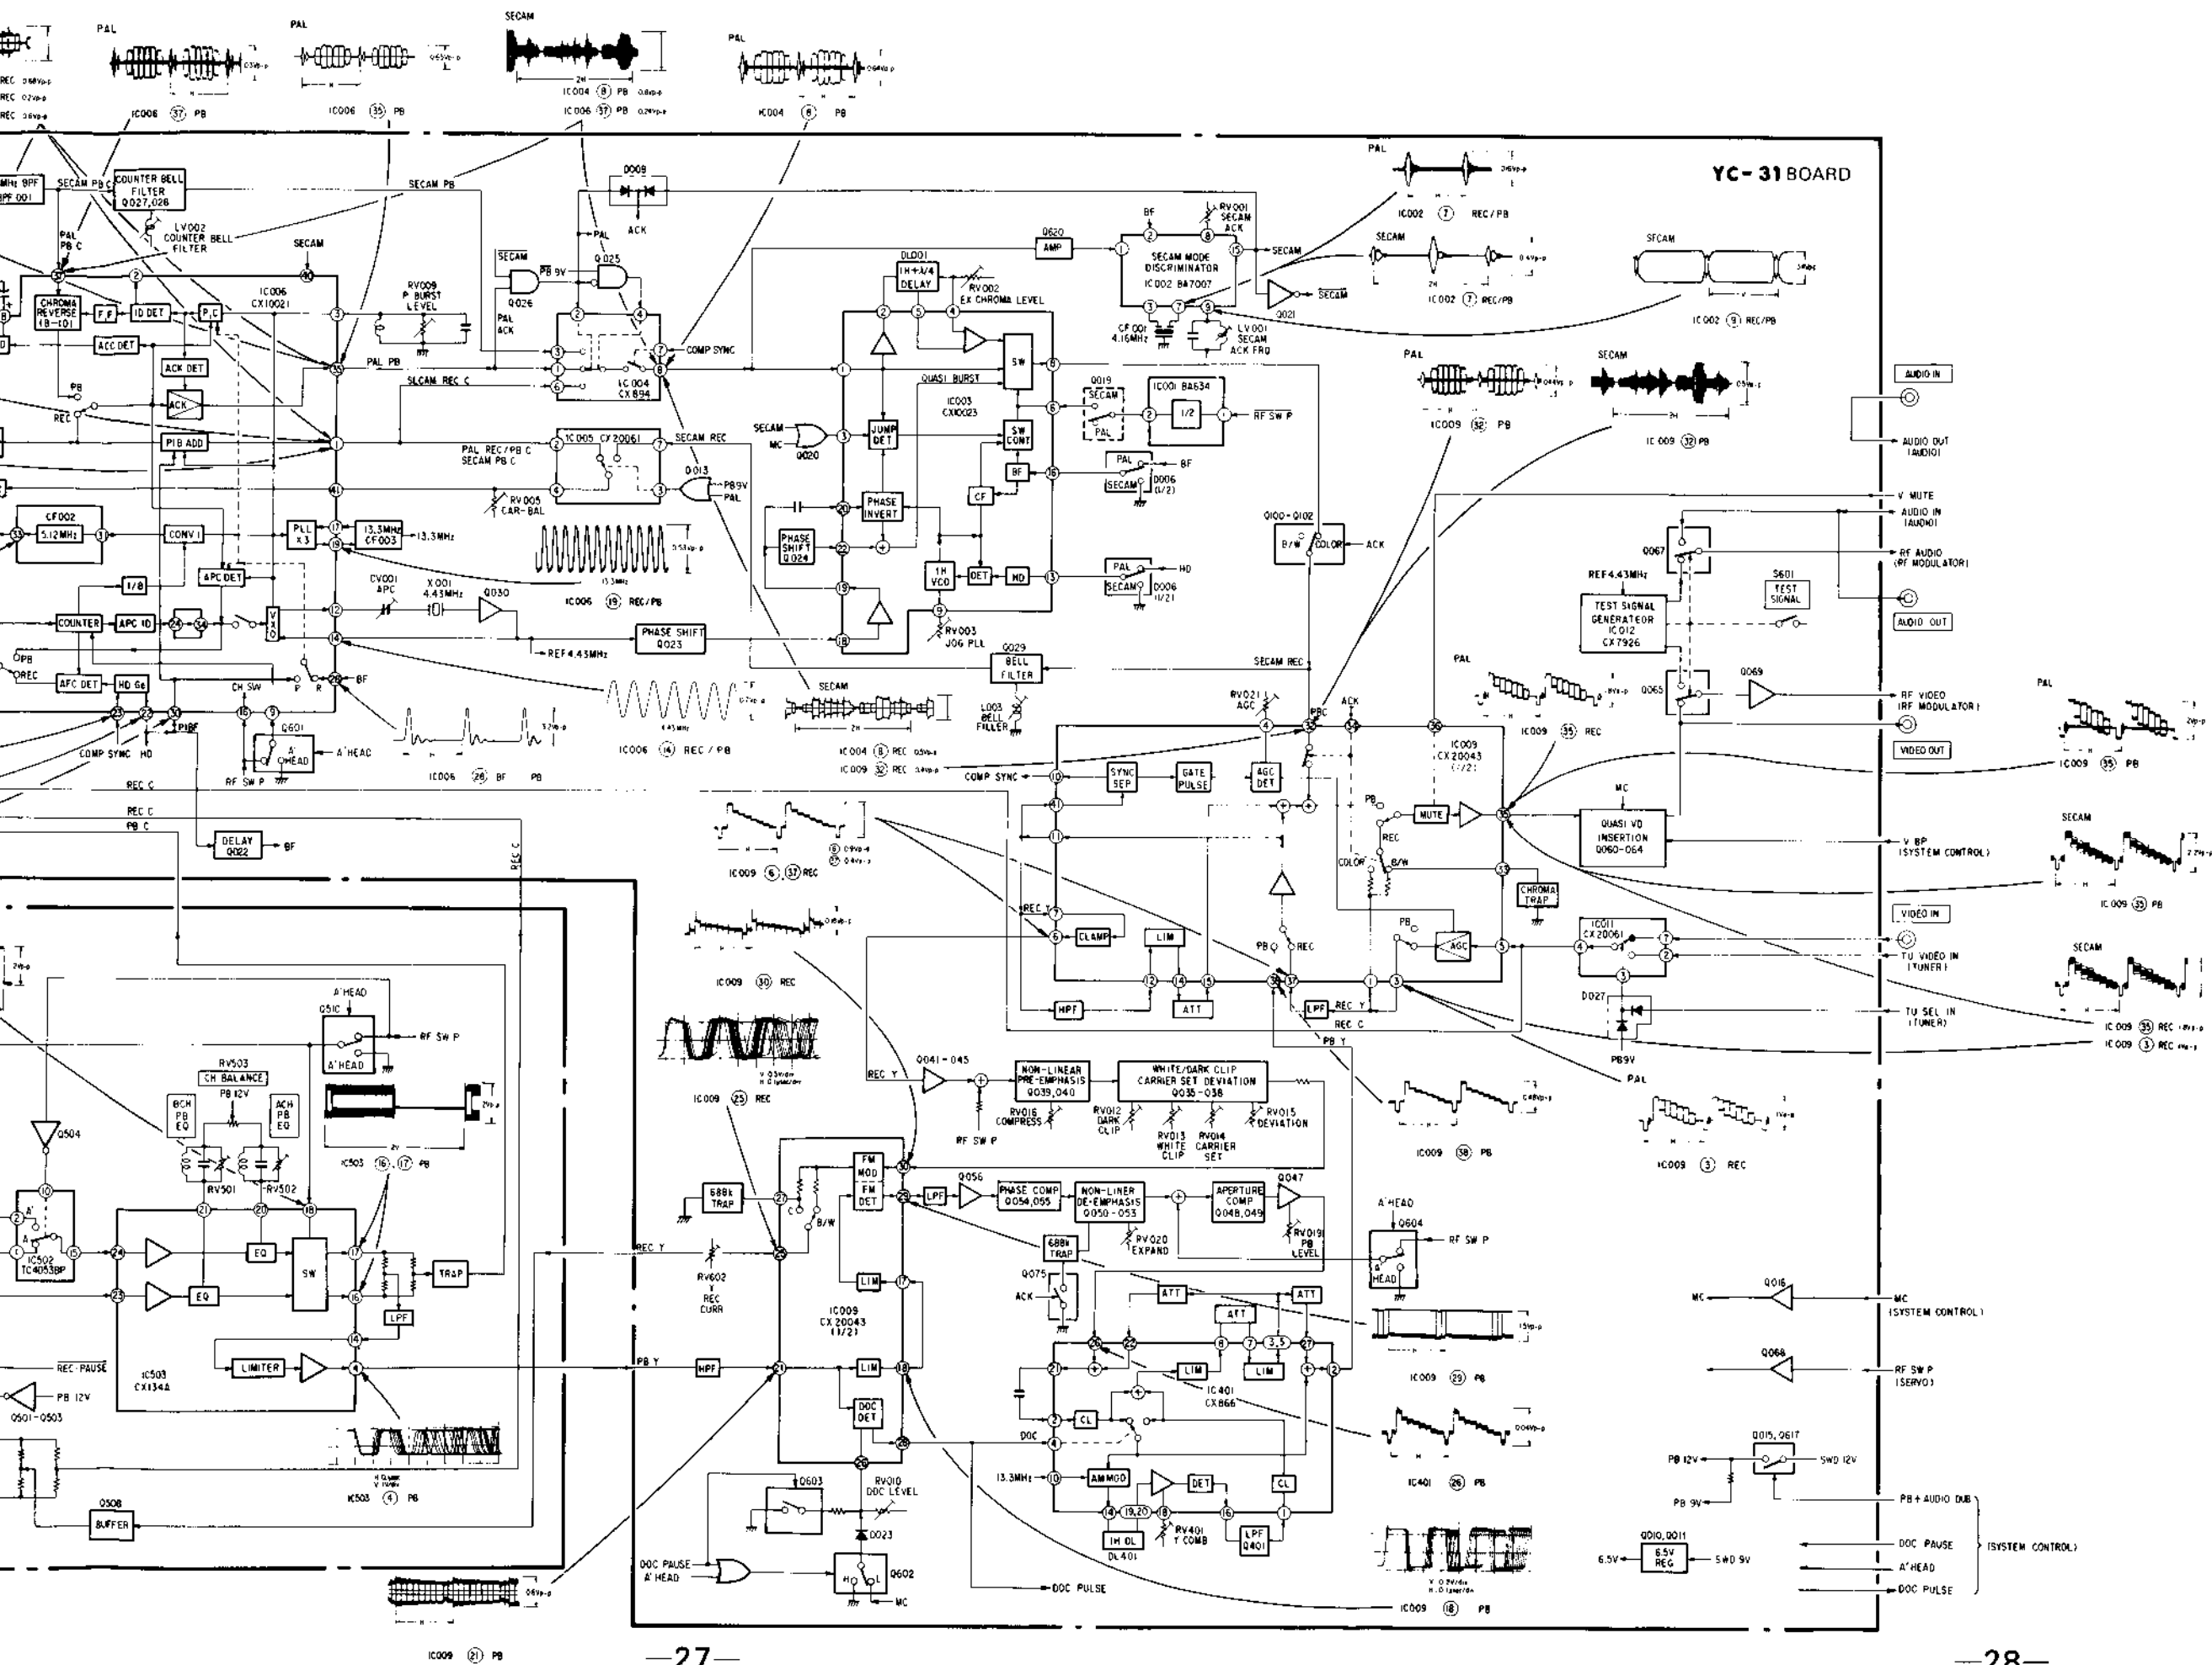

CONTROL BLOCK DIAGRAM

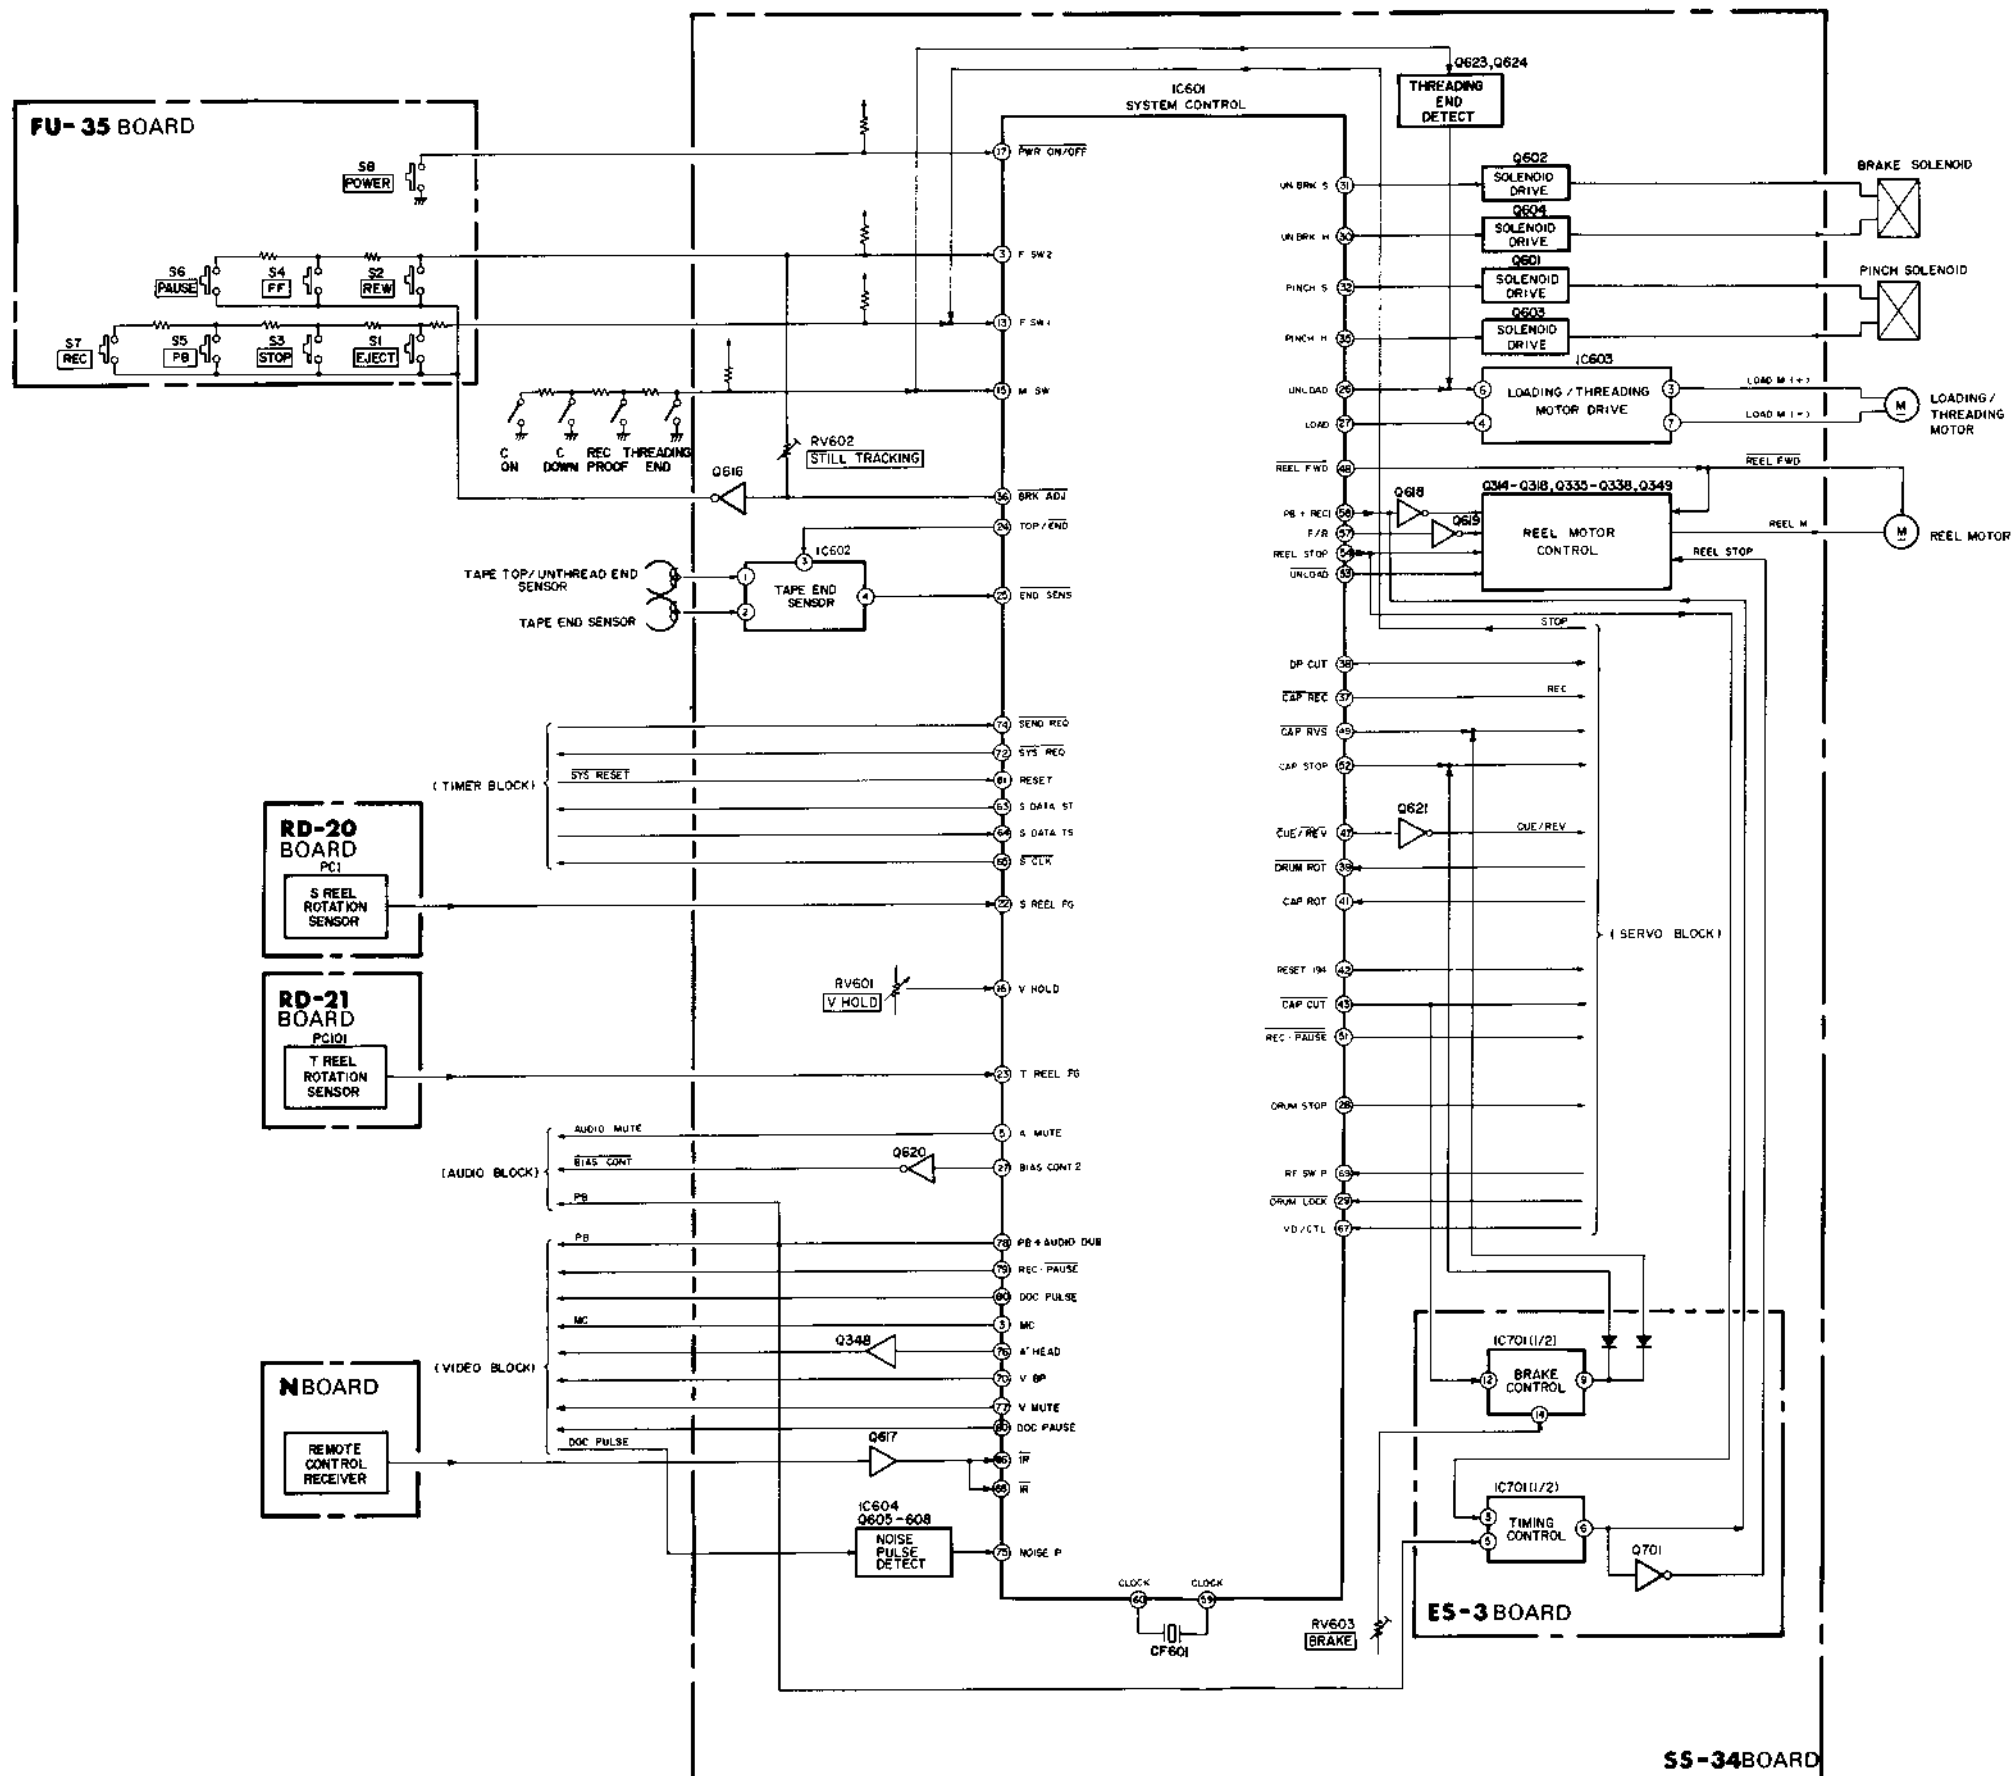

CONTROL INTERFACE
[MULTI-VIDEO BLOCK INTERFACE]

I/O	IC601 Pin No.	STOP	FF	REW	PB	PB PAUSE	PICTURE SEARCH		REC OR TIMER REC	REC PAUSE	WAIT PAUSE	FR SEARCH	
							CUE	REV				CUE	REV
O	①	L	L	L	L	H	L	L	L	H	*1	L	L
O	③	L	L	L	L	H	H	H	L	L	L	H	H
O	⑦⑩	H	H	H	H	H	H	H	H	H	H	H	H
O	⑦⑥	L	L	L	L	H	L	L	L	L	L	L	L
O	⑦⑦	L	L	L	L	L	L	L	L	L	L	L	L
O	⑦⑧	L	L	L	H	H	H	H	L	L	L	H	H
O	⑦⑨	L	L	L	L	L	L	L	H	L	L	L	L
O	⑧①	L	L	L	L	L	L	L	L	L	L	L	L

[SYSTEM CONTROL-SERVO BLOCK INTERFACE]

SIGNAL	I/O	IC601 Pin No.	STOP	FF	REW	PB	PB PAUSE	PICTURE SEARCH		REC OR TIMER REC	REC PAUSE	WAIT PAUSE	FR SEARCH	
								CUE	REV				CUE	REV
S REEL FG	I	②②	H/L	FG	FG	FG	H/L	FG	FG	FG	H/L	H/L	FG	FG
T REEL FG	I	②③	H/L	FG	FG	FG	H/L	FG	FG	FG	H/L	H/L	FG	FG
DRUM STOP	O	②⑧	H	L	L	L	L	L	L	L	L	H	L	L
DRUM LOCK	I	②⑨	L	H	H	H	H	H	H	H	H	L	H	H
BRK ADJ	O	③⑥	H	H	H	H	H	H	H	H	H	H	H	H
REC	O	③⑦	L	L	L	L	L	L	L	H	H	L	L	L
DP CUT	O	③⑧	L	L	L	L	H	H	H	L	L	L	H	H
DRUM ROT	I	③⑨	L	H	H	H	H	H	H	H	H	L	H	H
CAP ROT	I	④①	L	L	L	H	H	H	H	H	H	L	L	L
RESET 194	O	④②	L	L	L	L	L	L	L	L	L	L	L	L
CAP CUT	O	④③	L	L	L	L	L	L	L	L	L	L	L	L
PB + REC 2 *1	O	④④	L	L	L	H	H	L	L	H	H	L	L	L
BIAS CONT 1 *1	O	④⑤	L	L	L	L	L	L	L	H	H	L	L	L
CUE/REV	O	④⑦	H	H	H	H	H	L	L	H	H	H	H	H
CAP RVS	O	④⑨	H	H	H	H	H	H	L	H	H	H	H	H
WITHN/N.LESS	I	⑤①	L	L	L	L	L	L	L	L	L	L	L	L
REC-P	O	⑤①	H	H	H	H	H	H	H	L	H	H	H	H
CAP STOP	O	⑤②	H	H	H	L	L	L	L	L	L	H	H	H
PAUSE	O	⑤⑥	H	H	H	H	L	H	H	H	L	*2	H	H
VD/CTL	I	⑥⑦	L	PB CTL	PB CTL	PB CTL	L	PB CTL	PB CTL	VD	L	L	PB CTL	PB CTL
RF SW P	I	⑥⑨	H/L	RF SWP	RF SWP	RF SWP	RF SWP	RF SWP	RF SWP	RF SWP	RF SWP	H/L	RF SWP	RF SWP
NOISE P	I	⑦⑤	L	L	L	L	L	L	L	L	L	L	L	L

*1 : NOT USED

*2 : T=2(SEC).

50% duty ratio pulse

CONTROL-REEL MOTOR BLOCK INTERFACE]

L	I/O	IC601 Pin No.	EJECTED	LOADING	THREADING	STOP	UN- THREADING	UN- LOADING	FF	REW	PB	PB PAUSE	PICTURE SEARCH		REC	REC PAUSE	FR SEARCH	
													CUE	REV			CUE	REV
	O	④7	H	H	H	H	H	H	H	H	H	H	L	L	H	H	H	H
	O	④8	L	L	L	L	H	L	L	H	L	L	L	H	L	L	L	H
	O	⑤4	H	H	L	H	L	H	L	L	L	H	L	L	L	H	L	L
	O	⑤7	L	L	L	L	L	L	L	L	L	L	L	L	L	L	H	H
	O	⑤8	L	L	L	L	L	L	L	L	H	H	L	L	H	H	L	L
	O	⑤3	H	H	H	H	L	H	H	H	H	H	H	H	H	H	H	H

CONTROL-MECHANISM BLOCK INTERFACE]

L	I/O	IC601 Pin No.	EJECTED	LOADING	THREADING	STOP	UN- THREADING	UN- LOADING	FF	REW	PB	PB PAUSE	PICTURE SEARCH		REC	REC PAUSE	FR SEARCH	
													CUE	REV			CUE	REV
	I	①5	5V	3V	1V (2V)	0V	1V (2V)	3V	0V	0V	0V	0V	0V	0V	0V	0V	0V	0V
	O	②4	L	L	L	L	H	H	L	H	L	L	L	H	L	L	L	H
	I	②5	H	H/L	H/L	H	H	L	H	H	H	H	H	H	H	H	H	H
	O	②6	L	L	L	L	H	H	L	L	L	L	L	L	L	L	L	L
	O	②7	L	H	H	L	L	L	L	L	L	L	L	L	L	L	L	L
	O	③0	L	L	L	L	L	L	H	H	H	H	H	H	H	H	H	H
	O	③1	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
	O	③2	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
	O	③5	L	H	L	L	L	H	L	L	H	H	H	H	H	H	L	L

*1 (): THE SAFTY TAB OF THE CASSETTE IS BROKEN

CONTROL-AUDIO BLOCK INTERFACE]

L	I/O	IC601 Pin No.	MODE											FR SEARCH			
			STOP	FF	REW	PB	PB- PAUSE	PICTURE SEARCH		REC OR TIMER REC	REC- PAUSE	WAIT PAUSE	CUE	REV			
								CUE	REV								
*1	O	④	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
	O	⑤	L	L	L	L	H	H	H	L	L	L	L	H	H		
2	O	⑤5	L	L	L	L	L	L	L	H	L	L	L	L	L		
DUB	O	⑦8	L	L	L	H	H	H	H	L	L	L	L	H	H		

*1 NOT USED

[ROL-ITS PERIPHERAL CIRCUIT INTERFACE]

I/O	IC601 Pin No.	MODE										
		USUAL	PRESSED BUTTON									
			EJECT	STOP	PB	REC		REW	FF	PAUSE	POWER	
I	⑬	5V	0V	1V	2V	3V		-	-	-	-	
I	⑭	5V	-	-	-	-		0V	1V	2V	-	
I	⑯	0V - 5V *1	-	-	-	-		-	-	-	-	
I	⑰	5V	-	-	-	-		-	-	-	0V	
I	⑱, ⑲	5V	-	-	-	-		-	-	-	-	

[TIMER-TUNER INTERFACE (2)]

PROG. No.	IC001 INPUT						IC001 OUTPUT (INDICATION)		PROG. No.	IC001 INPUT						IC001 OUTPUT (INDICATION)	
	P11	P10	P03	P02	P01	P00	10 digit	1 digit		P11	P10	P03	P02	P01	P00	10 digit	1 digit
1	H	H	L	L	L	H		1	18	L	H	H	L	L	L	1	8
2	H	H	L	L	H	L		2	19	L	H	H	L	L	H	1	9
3	H	H	L	L	H	H		3	20	H	L	L	L	L	L	2	0
4	H	H	L	H	L	L		4	21	H	L	L	L	L	H	2	1
5	H	H	L	H	L	H		5	22	H	L	L	L	H	L	2	2
6	H	H	L	H	H	L		6	23	H	L	L	L	H	H	2	3
7	H	H	L	H	H	H		7	24	H	L	L	H	L	L	2	4
8	H	H	H	L	L	L		8	25	H	L	L	H	L	H	2	5
9	H	H	H	L	L	H		9	26	H	L	L	H	H	L	2	6
10	L	H	L	L	L	L	1	0	27	H	L	L	H	H	H	2	7
11	L	H	L	L	L	H	1	1	28	H	L	H	L	L	L	2	8
12	L	H	L	L	H	L	1	2	29	H	L	H	L	L	H	2	9
13	L	H	L	L	H	H	1	3	0	H	H	L	L	L	L		0
14	L	H	L	H	L	L	1	4	LINE	L	L	H	H	L	L	A	U
15	L	H	L	H	L	H	1	5	BLANK	H	H	H	H	H	H		
16	L	H	L	H	H	L	1	6	1-	L	H	H	H	H	H	1	
17	L	H	L	H	H	H	1	7	2-	H	L	H	H	H	H	2	

[ROL-TIMER INTERFACE]


IC601 Pin No.	MODE
	USUAL
⑳	L
㉑	L
㉒	H
㉓	H
㉔	H

[TIMER-TUNER INTERFACE (1)]

SIGNAL	I/O	IC001 Pin No.	FL DISPLAY INDICATION		
			PROG. No.	AU	BLANK
P00	I	①	*1	L	L
P01	I	②	*1	L	L
P02	I	③	*1	L	L
P03	I	④	*1	L	L
P10	I	⑤	*1	L	L
P11	I	⑥	*1	L	L
PR RESET	O	⑤⑧	H	H	H
PR UP	O	⑤⑨	H	H	H
PR LOCK	O	⑥⑩	L	L	L
TU SEL	O	⑥⑪	H	L	L

*1 REFER TO "TIMER-TUNER INTERFACE (2)".

3.4. SYSTEM CONTROL BLOCK DIAGRAM

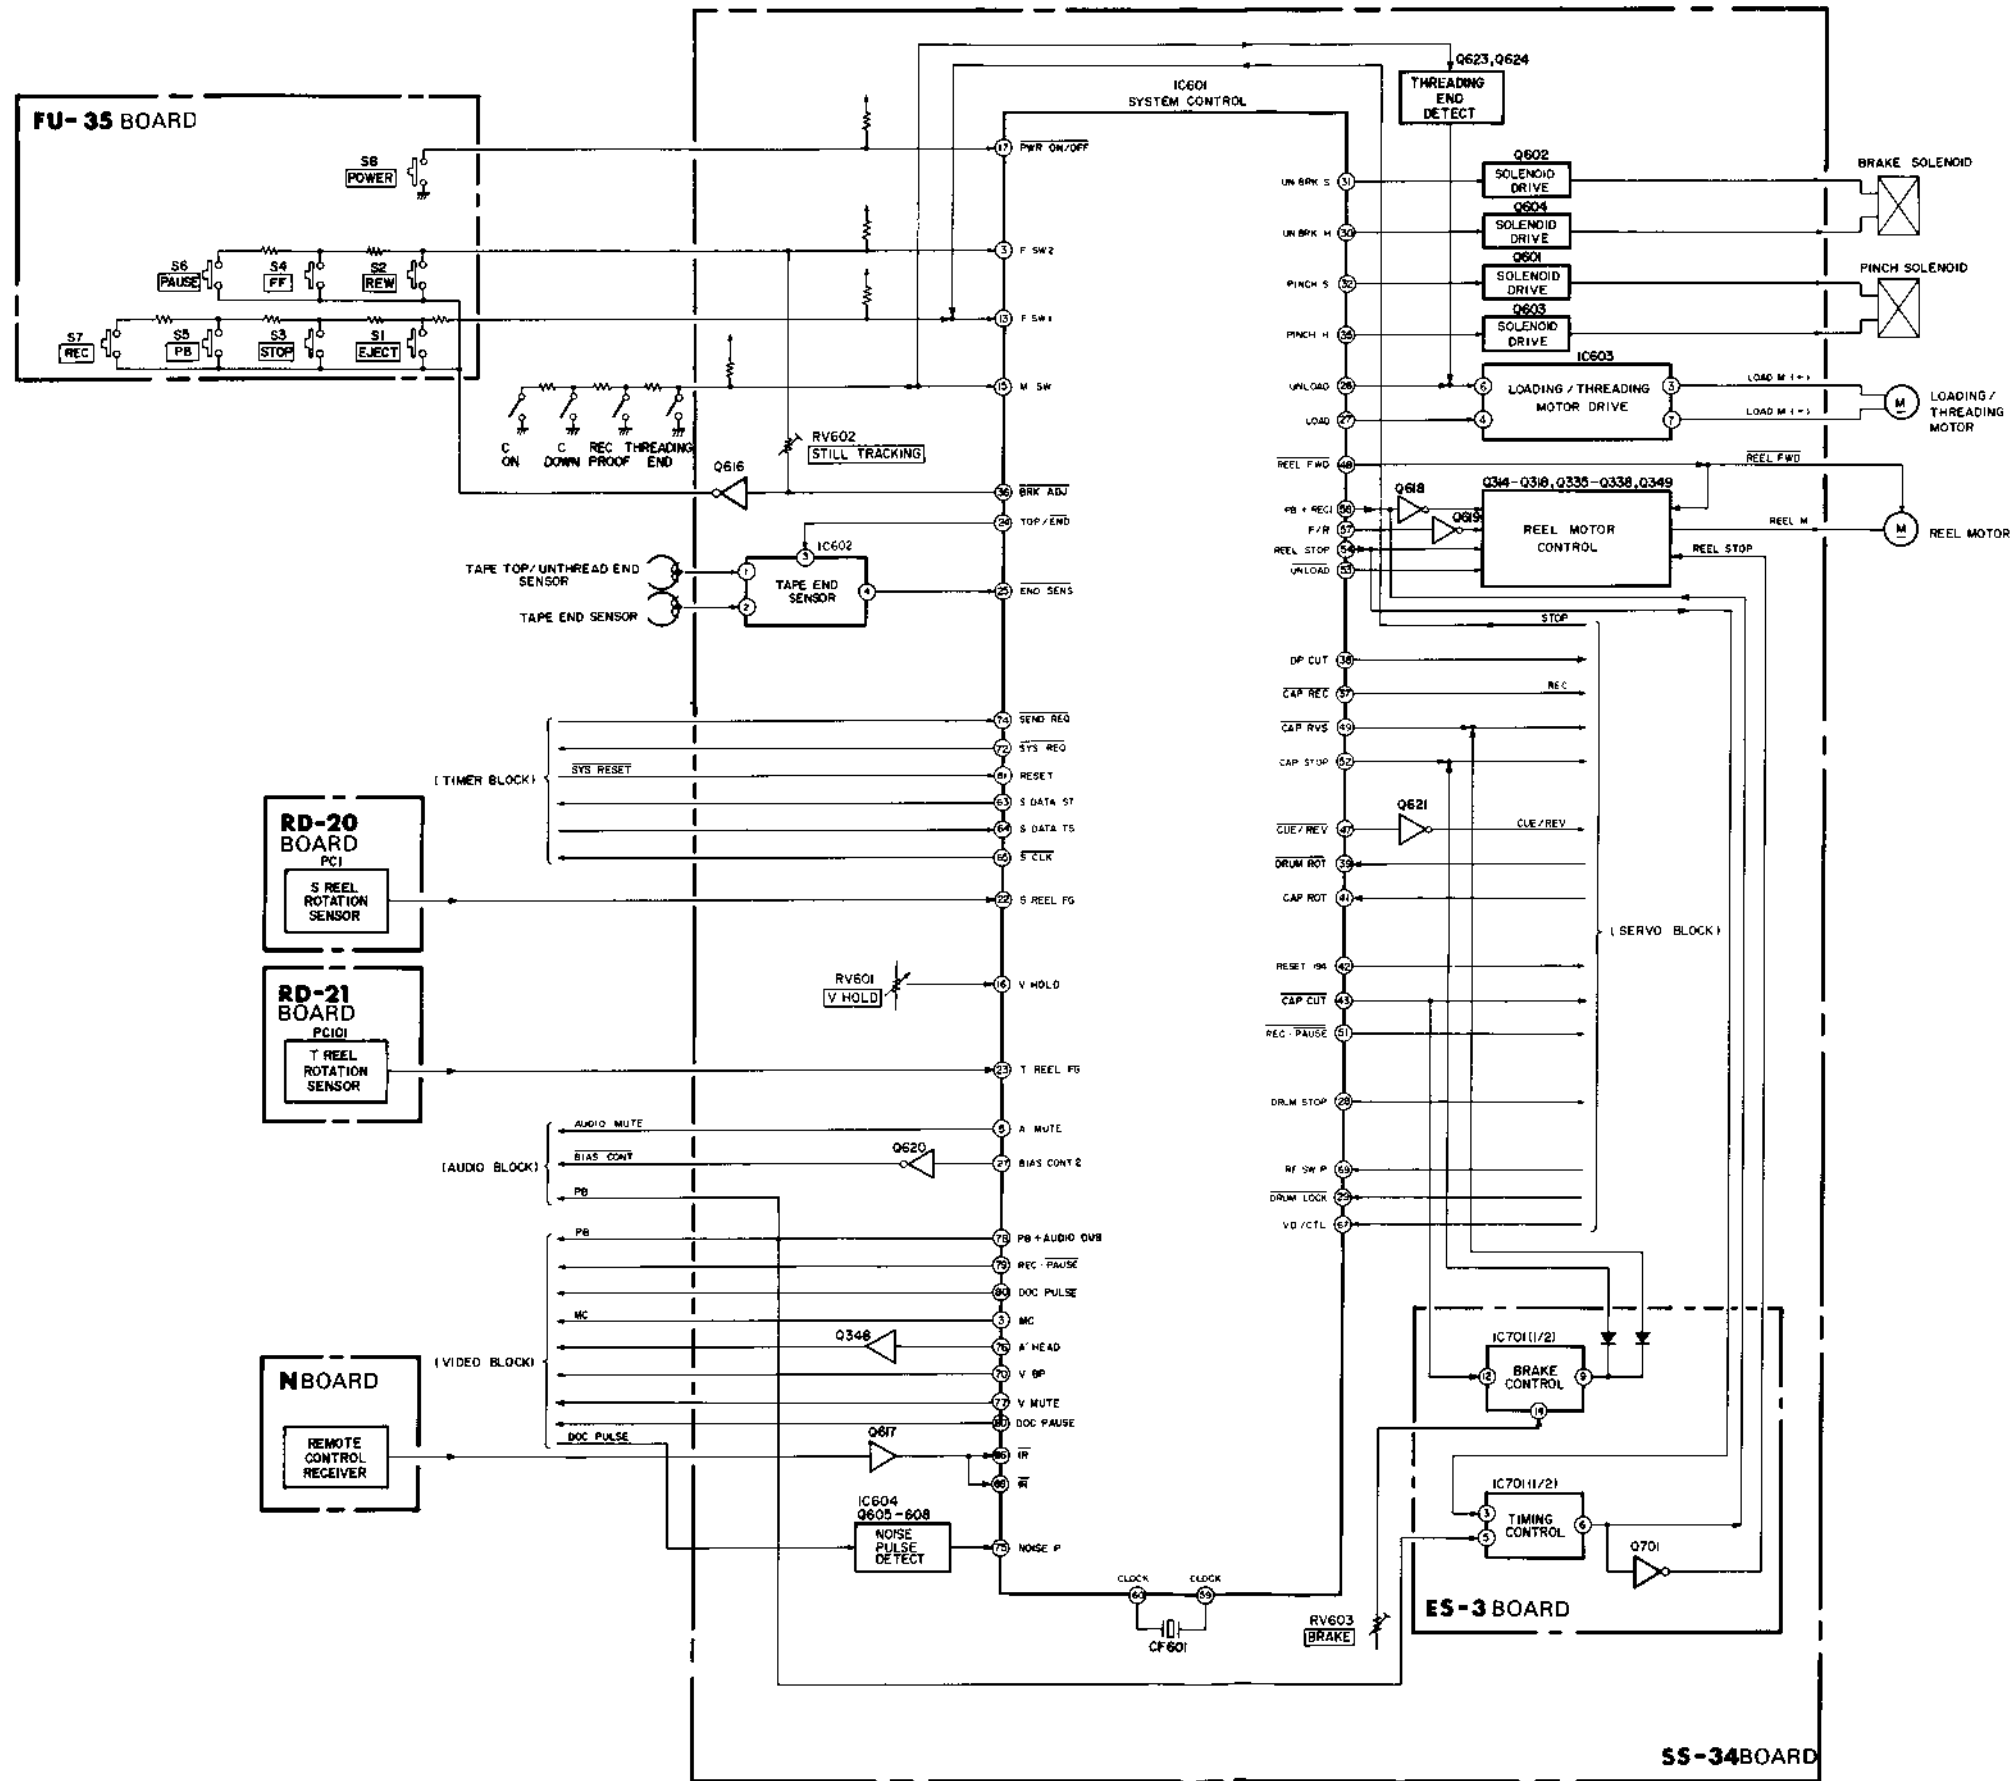

3-5. SYSTEM CONTROL INTERFACE
[SYSTEM CONTROL-VIDEO BLOCK INTERFACE]

SIGNAL	I/O	IC601 Pin No.	STOP	FF	REW	PB	PB PAUSE	PICTURE SEARCH		REC OR TIMER REC	REC PAUSE	WAIT PAUSE	FR SEARCH	
								CUE	REV				CUE	REV
PAUSE	O	①	L	L	L	L	H	L	L	L	H	*1	L	L
MC	O	③	L	L	L	L	H	H	H	L	L	L	H	H
VBP	O	⑦⑩	H	H	H	H	H	H	H	H	H	H	H	H
A'HEAD	O	⑦⑥	L	L	L	L	H	L	L	L	L	L	L	L
V MUTE	O	⑦⑦	L	L	L	L	L	L	L	L	L	L	L	L
PB + AUDIO DUB	O	⑦⑧	L	L	L	H	H	H	H	L	L	L	H	H
REC · \bar{P}	O	⑦⑨	L	L	L	L	L	L	L	H	L	L	L	L
DOC PAUSE	O	⑧⑩	L	L	L	L	L	L	L	L	L	L	L	L

*1 : T = 2(SEC),
50% duty ratio pulse

[SYSTEM CONTROL-SERVO BLOCK INTERFACE]

SIGNAL	I/O	IC601 Pin No.	STOP	FF	REW	PB	PB PAUSE	PICTURE SEARCH		REC OR TIMER REC	REC PAUSE	WAIT PAUSE	FR SEARCH	
								CUE	REV				CUE	REV
S REEL FG	I	②②	H/L	FG	FG	FG	H/L	FG	FG	FG	H/L	H/L	FG	FG
T REEL FG	I	②③	H/L	FG	FG	FG	H/L	FG	FG	FG	H/L	H/L	FG	FG
DRUM STOP	O	②⑧	H	L	L	L	L	L	L	L	L	H	L	L
DRUM LOCK	I	②⑨	L	H	H	H	H	H	H	H	H	L	H	H
BRK ADJ	O	③⑥	H	H	H	H	H	H	H	H	H	H	H	H
REC	O	③⑦	L	L	L	L	L	L	L	H	H	L	L	L
DP CUT	O	③⑧	L	L	L	L	H	H	H	L	L	L	H	H
DRUM ROT	I	③⑨	L	H	H	H	H	H	H	H	H	L	H	H
CAP ROT	I	④①	L	L	L	H	H	H	H	H	H	L	L	L
RESET 194	O	④②	L	L	L	L	L	L	L	L	L	L	L	L
CAP CUT	O	④③	L	L	L	L	L	L	L	L	L	L	L	L
PB + REC 2 *1	O	④④	L	L	L	H	H	L	L	H	H	L	L	L
BIAS CONT 1 *1	O	④⑤	L	L	L	L	L	L	L	H	H	L	L	L
CUE/REV	O	④⑦	H	H	H	H	H	L	L	H	H	H	H	H
CAP RVS	O	④⑨	H	H	H	H	H	H	L	H	H	H	H	H
WITHN/N.LESS	I	⑤①	L	L	L	L	L	L	L	L	L	L	L	L
REC-P	O	⑤①	H	H	H	H	H	H	H	L	H	H	H	H
CAP STOP	O	⑤②	H	H	H	L	L	L	L	L	L	H	H	H
PAUSE	O	⑤⑥	H	H	H	H	L	H	H	H	L	*2	H	H
VD/CTL	I	⑥⑦	L	PB CTL	PB CTL	PB CTL	L	PB CTL	PB CTL	VD	L	L	PB CTL	PB CTL
RF SWP	I	⑥⑨	H/L	RF SWP	RF SWP	RF SWP	RF SWP	RF SWP	RF SWP	RF SWP	RF SWP	H/L	RF SWP	RF SWP
NOISE P	I	⑦⑤	L	L	L	L	L	L	L	L	L	L	L	L

*1 : NOT USED

*2 : T=2(SEC),
50% duty ratio pulse

[SYSTEM CONTROL-REEL MOTOR BLOCK INTERFACE]

SIGNAL	I/O	IC601 Pin No.	EJECTED	LOADING	THREADING	STOP	UN- THREADING	UN- LOADING	FF	REW	PB	PB PAUSE	PICTURE SEARCH		REC	REC PAUSE	FR SEARCH	
													CUE	REV			CUE	REV
CUE/REV	O	47	H	H	H	H	H	H	H	H	H	H	L	L	H	H	H	H
REEL FWD	O	48	L	L	L	L	H	L	L	H	L	L	L	H	L	L	L	H
REEL STOP	O	54	H	H	L	H	L	H	L	L	L	H	L	L	L	H	L	L
F/R	O	57	L	L	L	L	L	L	L	L	L	L	L	L	L	L	H	H
PB + REC 1	O	58	L	L	L	L	L	L	L	L	H	H	L	L	H	H	L	L
UNLOAD	O	53	H	H	H	H	L	H	H	H	H	H	H	H	H	H	H	H

[SYSTEM CONTROL-MECHANISM BLOCK INTERFACE]

SIGNAL	I/O	IC601 Pin No.	EJECTED	LOADING	THREADING	STOP	UN- THREADING	UN- LOADING	FF	REW	PB	PB PAUSE	PICTURE SEARCH		REC	REC PAUSE	FR SEARCH	
													CUE	REV			CUE	REV
MSW *1	I	15	5V	3V	1V (2V)	0V	1V (2V)	3V	0V	0V	0V	0V	0V	0V	0V	0V	0V	0V
TOP/END	O	24	L	L	L	L	H	H	L	H	L	L	L	H	L	L	L	H
END SENS	I	25	H	H/L	H/L	H	H	L	H	H	H	H	H	H	H	H	H	H
UNLOAD	O	26	L	L	L	L	H	H	L	L	L	L	L	L	L	L	L	L
LOAD	O	27	L	H	H	L	L	L	L	L	L	L	L	L	L	L	L	L
UNBRK (H)	O	30	L	L	L	L	L	L	H	H	H	H	H	H	H	H	H	H
UNBRK (S)	O	31	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
PINCH (S)	O	32	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
PINCH (H)	O	35	L	H	L	L	L	H	L	L	H	H	H	H	H	H	L	L

*1 (): THE SAFTY TAB OF THE CASSETTE IS BROKEN

[SYSTEM CONTROL-AUDIO BLOCK INTERFACE]

SIGNAL	I/O	IC601 Pin No.	MODE											FR SEARCH			
			STOP	FF	REW	PB	PB- PAUSE	PICTURE SEARCH		REC OR TIMER REC	REC- PAUSE	WAIT PAUSE	CUE	REV			
								CUE	REV								
AUDIO DUB *1	O	4	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
A MUTE	O	5	L	L	L	L	H	H	H	L	L	L	L	H	H	L	L
BIAS CONT 2	O	55	L	L	L	L	L	L	L	H	L	L	L	L	L	L	L
PB + AUDIO DUB	O	78	L	L	L	H	H	H	H	L	L	L	L	H	H	L	L

*1 NOT USED

[SYSTEM CONTROL-ITS PERIPHERAL CIRCUIT INTERFACE]

SIGNAL	I/O	IC601 Pin No.	MODE												
			USUAL	PRESSED BUTTON								REW	FF	PAUSE	POWER
				EJECT	STOP	PB	REC								
F SW 1	I	⑬	5V	0V	1V	2V	3V			-	-	-	-		
F SW 2	I	⑭	5V	-	-	-	-			0V	1V	2V	-		
V HOLD	I	⑯	0V - 5V*1	-	-	-	-			-	-	-	-		
POWER ON/OFF	I	⑰	5V	-	-	-	-			-	-	-	0V		
IR	I	⑥⑥, ⑥⑧	5V	-	-	-	-			-	-	-	-		

*1: BY V HOLD VR

[SYSTEM CONTROL-TIMER INTERFACE]

SIGNAL	I/O	IC601 Pin No.	MODE
			USUAL
S DATA ST	O	⑥③	L
S DATA TS	I	⑥④	L
S CLK	I	⑥⑤	H
SYS REQ	O	⑦②	H
SEND REQ	I	⑦④	H

[TIMER-TUNER INTERFACE (1)]


SIGNAL	I/O	IC001 Pin No.	FL DISPLAY INDICATION		
			PROG. No.	AU	BLANK
P00	I	①	*1	L	L
P01	I	②	*1	L	L
P02	I	③	*1	L	L
P03	I	④	*1	L	L
P10	I	⑤	*1	L	L
P11	I	⑥	*1	L	L
PR RESET	O	⑤⑧	H	H	H
PR UP	O	⑤⑨	H	H	H
PR LOCK	O	⑥①	L	L	L
TU SEL	O	⑥①	H	L	L

*1 REFER TO "TIMER-TUNER INTERFACE (2)".


[TIMER-TUNER INTERFACE (2)]

PROG. No.	IC001 INPUT						IC001 OUTPUT (INDICATION)		PROG. No.	IC001 INPUT						IC001 OUTPUT (INDICATION)	
	P11	P10	P03	P02	P01	P00	10 digit	1 digit		P11	P10	P03	P02	P01	P00	10 digit	1 digit
1	H	H	L	L	L	H		1	18	L	H	H	L	L	L	1	8
2	H	H	L	L	H	L		2	19	L	H	H	L	L	H	1	9
3	H	H	L	L	H	H		3	20	H	L	L	L	L	L	2	0
4	H	H	L	H	L	L		4	21	H	L	L	L	L	H	2	1
5	H	H	L	H	L	H		5	22	H	L	L	L	H	L	2	2
6	H	H	L	H	H	L		6	23	H	L	L	L	H	H	2	3
7	H	H	L	H	H	H		7	24	H	L	L	H	L	L	2	4
8	H	H	H	L	L	L		8	25	H	L	L	H	L	H	2	5
9	H	H	H	L	L	H		9	26	H	L	L	H	H	L	2	6
10	L	H	L	L	L	L	1	0	27	H	L	L	H	H	H	2	7
11	L	H	L	L	L	H	1	1	28	H	L	H	L	L	L	2	8
12	L	H	L	L	H	L	1	2	29	H	L	H	L	L	H	2	9
13	L	H	L	L	H	H	1	3	0	H	H	L	L	L	L		0
14	L	H	L	H	L	L	1	4	LINE	L	L	H	H	L	L	A	U
15	L	H	L	H	L	H	1	5	BLANK	H	H	H	H	H	H		
16	L	H	L	H	H	L	1	6	1-	L	H	H	H	H	H	1	
17	L	H	L	H	H	H	1	7	2-	H	L	H	H	H	H	2	


3.6. SERVO BLOCK DIAGRAM

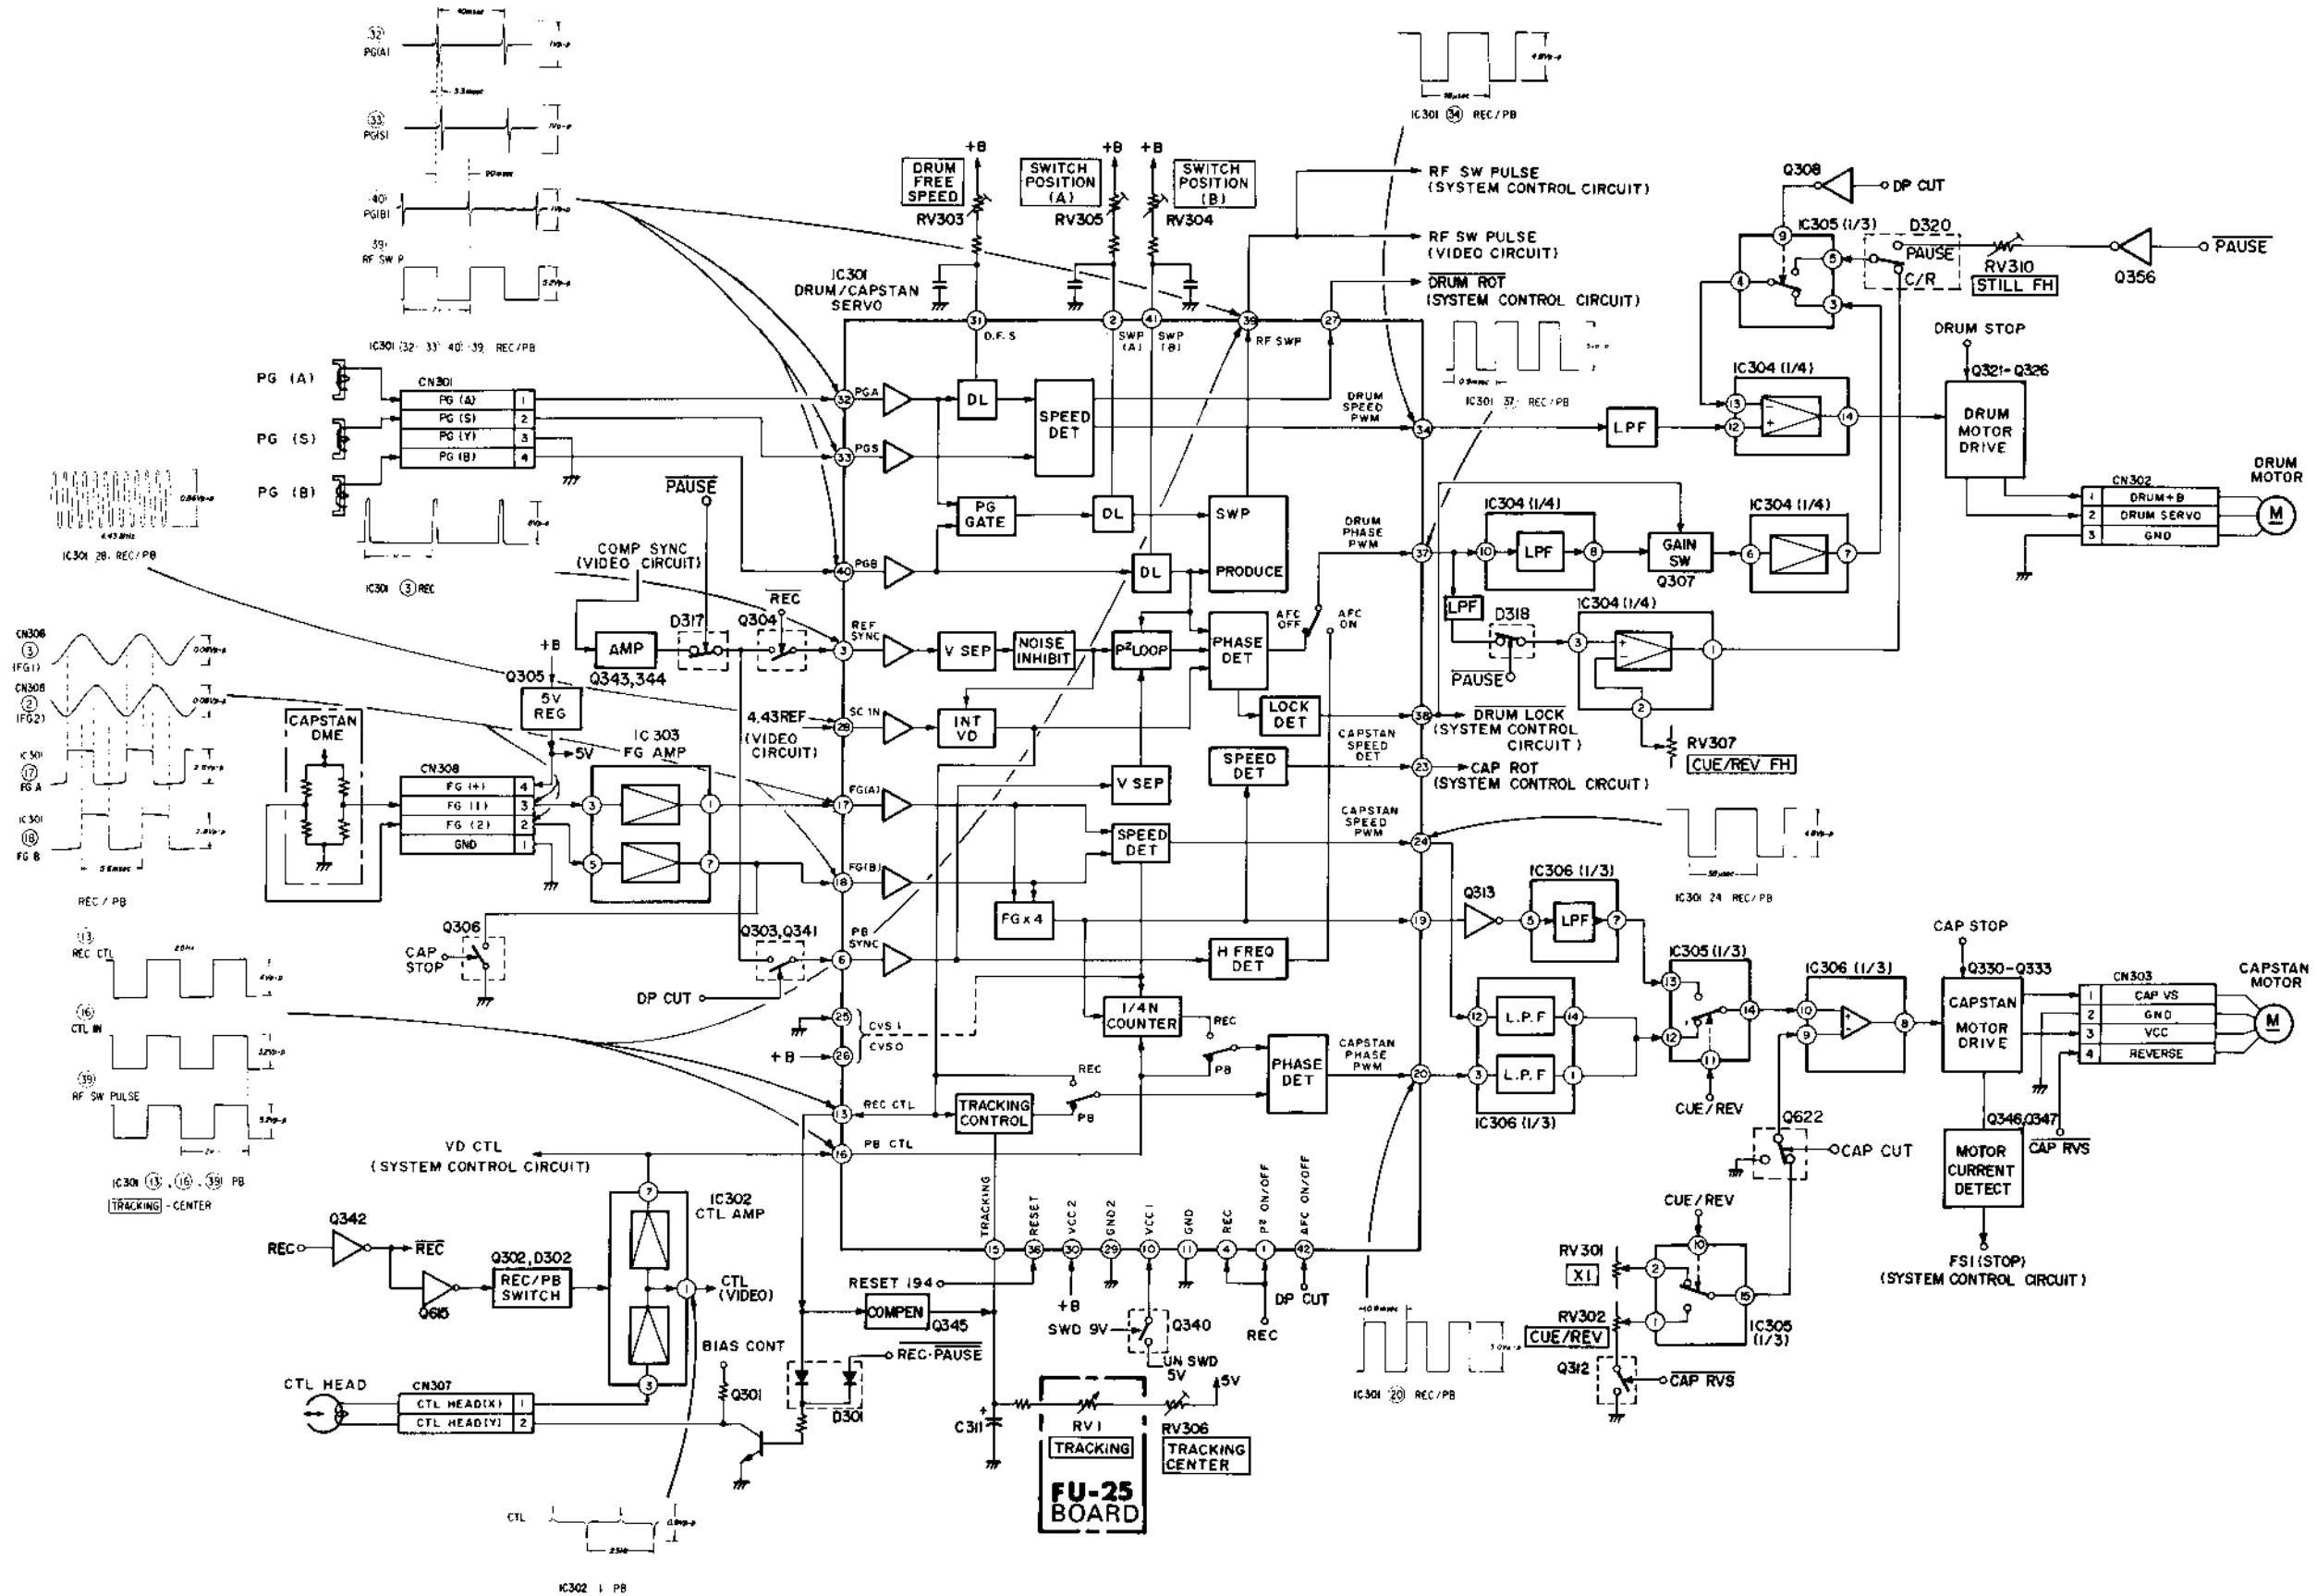


3-7. CAPSTAN PHASE SYSTEM TIMING CHART (REC)

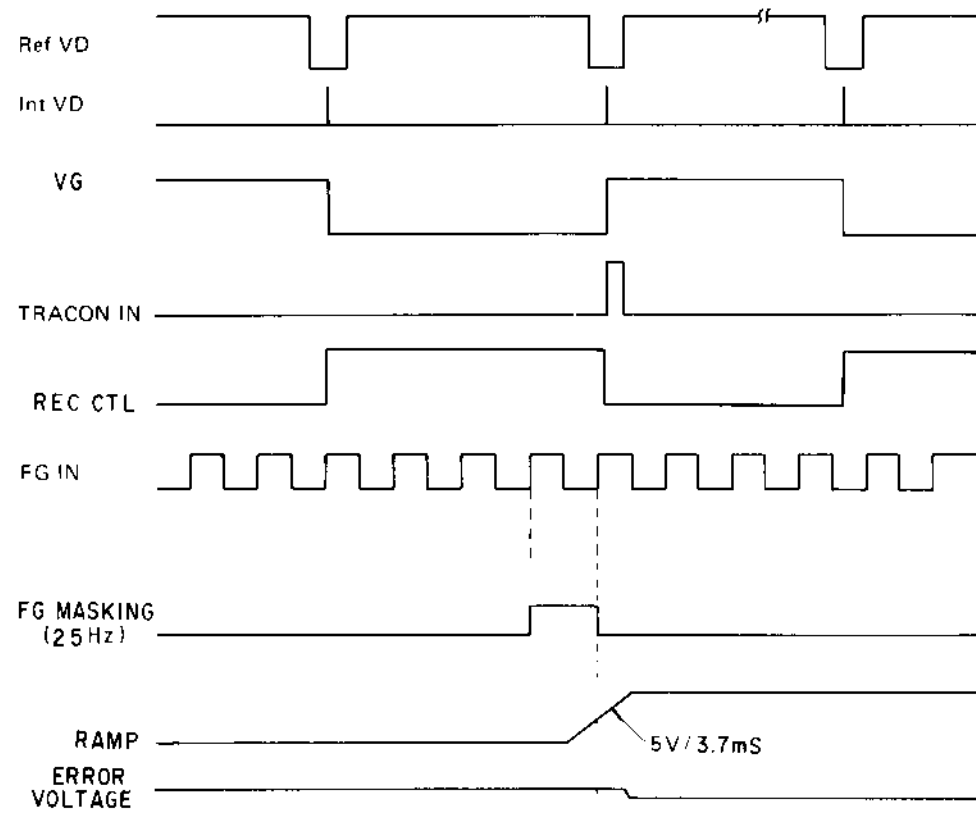


3-8. CAPSTAN PHASE SYSTEM TIMING CHART (PB)

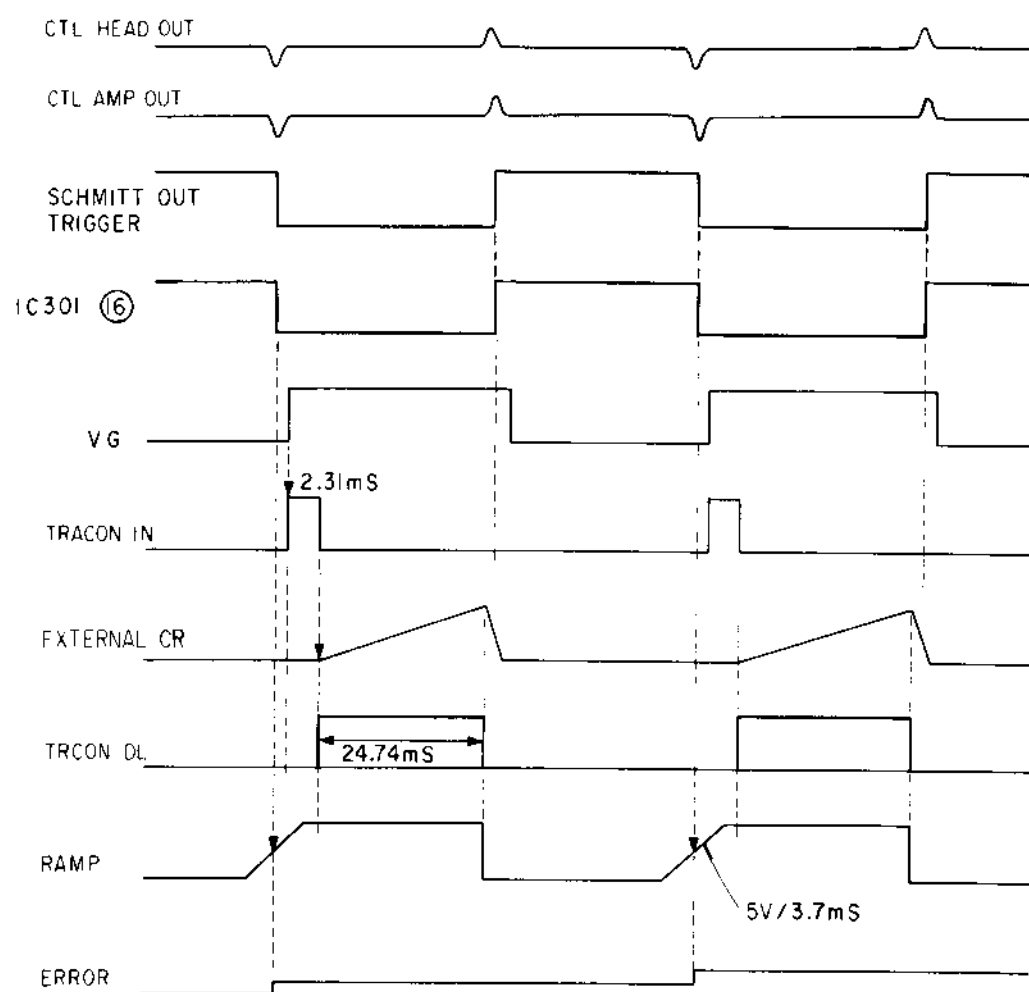


3-9. CAPSTAN SPEED SYSTEM TIMING CHART

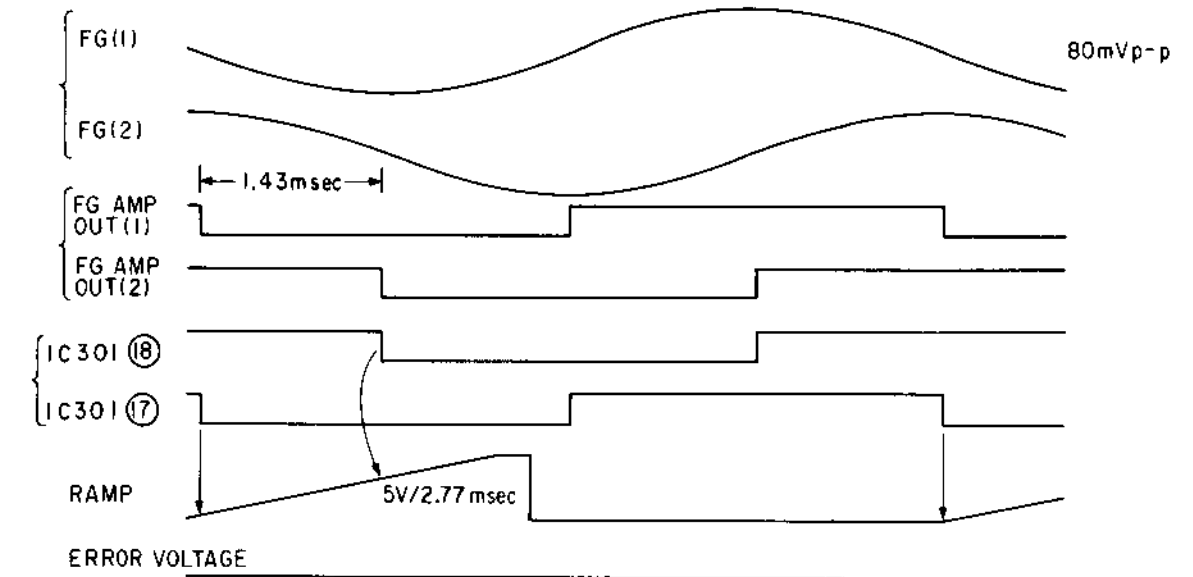


3-10. DRUM PHASE SYSTEM TIMING CHART

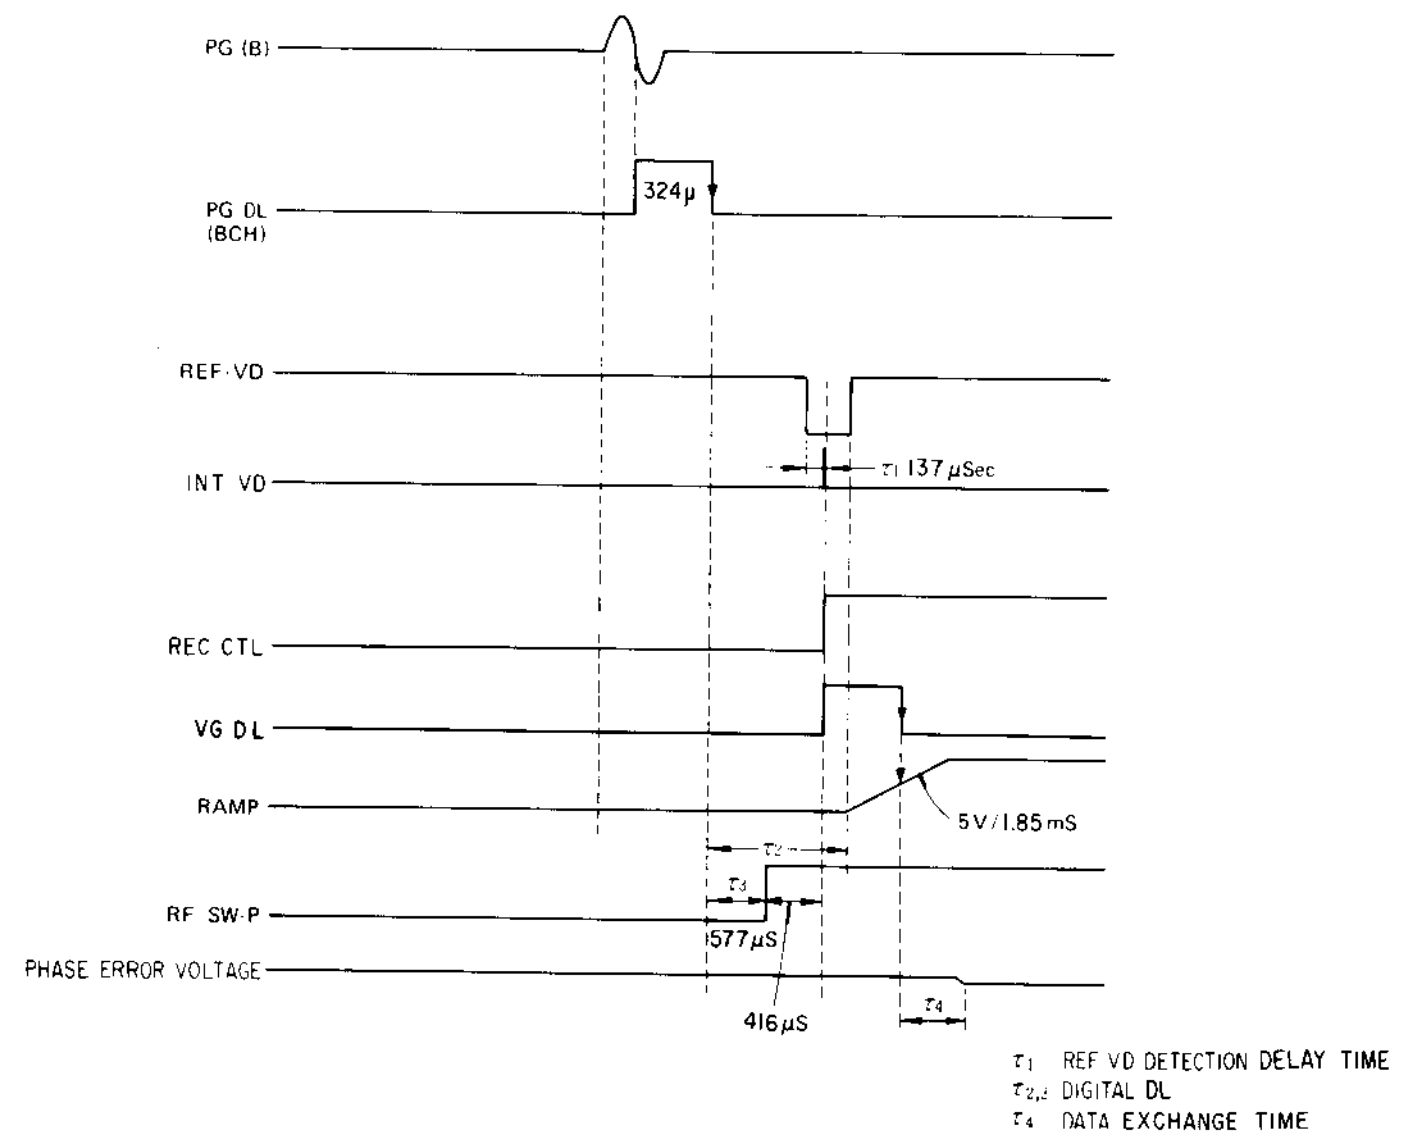


3-11. DRUM SPEED SYSTEM TIMING CHART

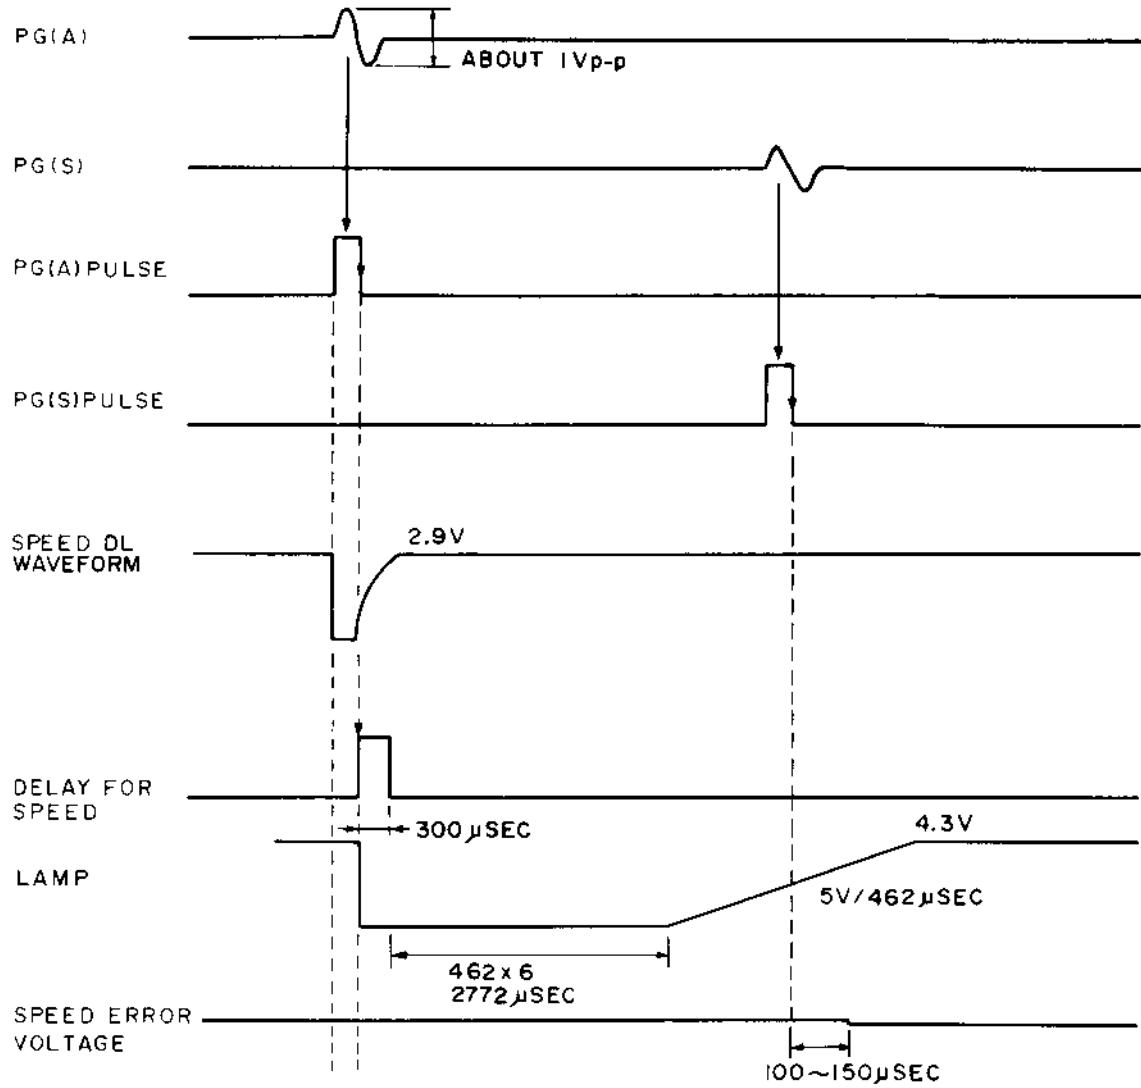


3-12. PG SIGNAL TIMING CHART

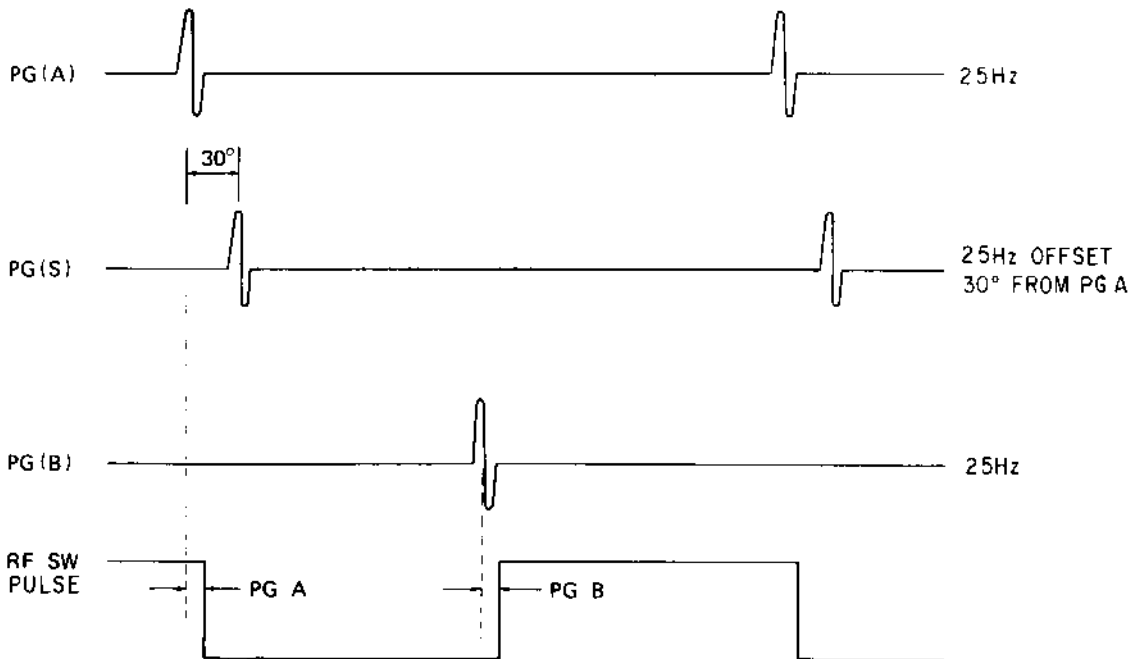


3-13. AUDIO LEVEL DIAGRAM (REC)

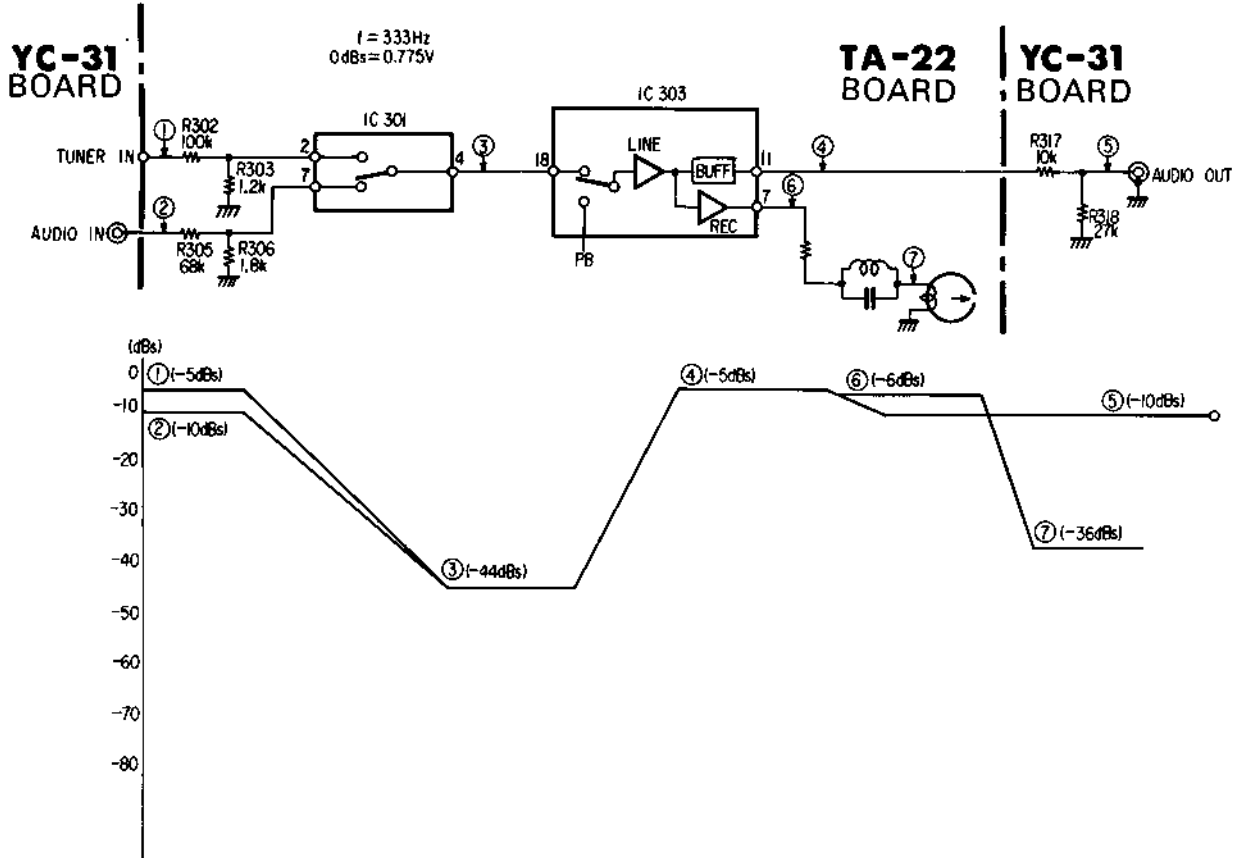


3-14. AUDIO LEVEL DIAGRAM (PB)

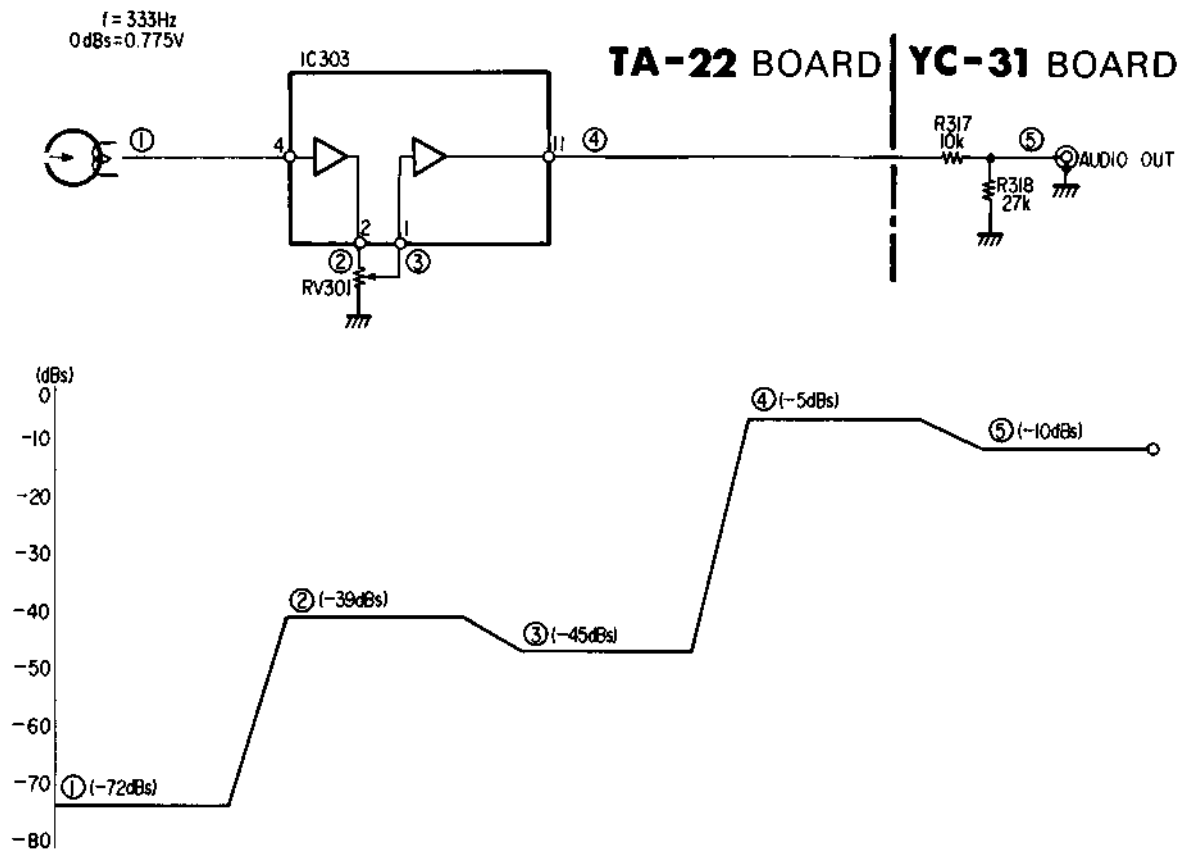


3-15. AUDIO BLOCK DIAGRAM

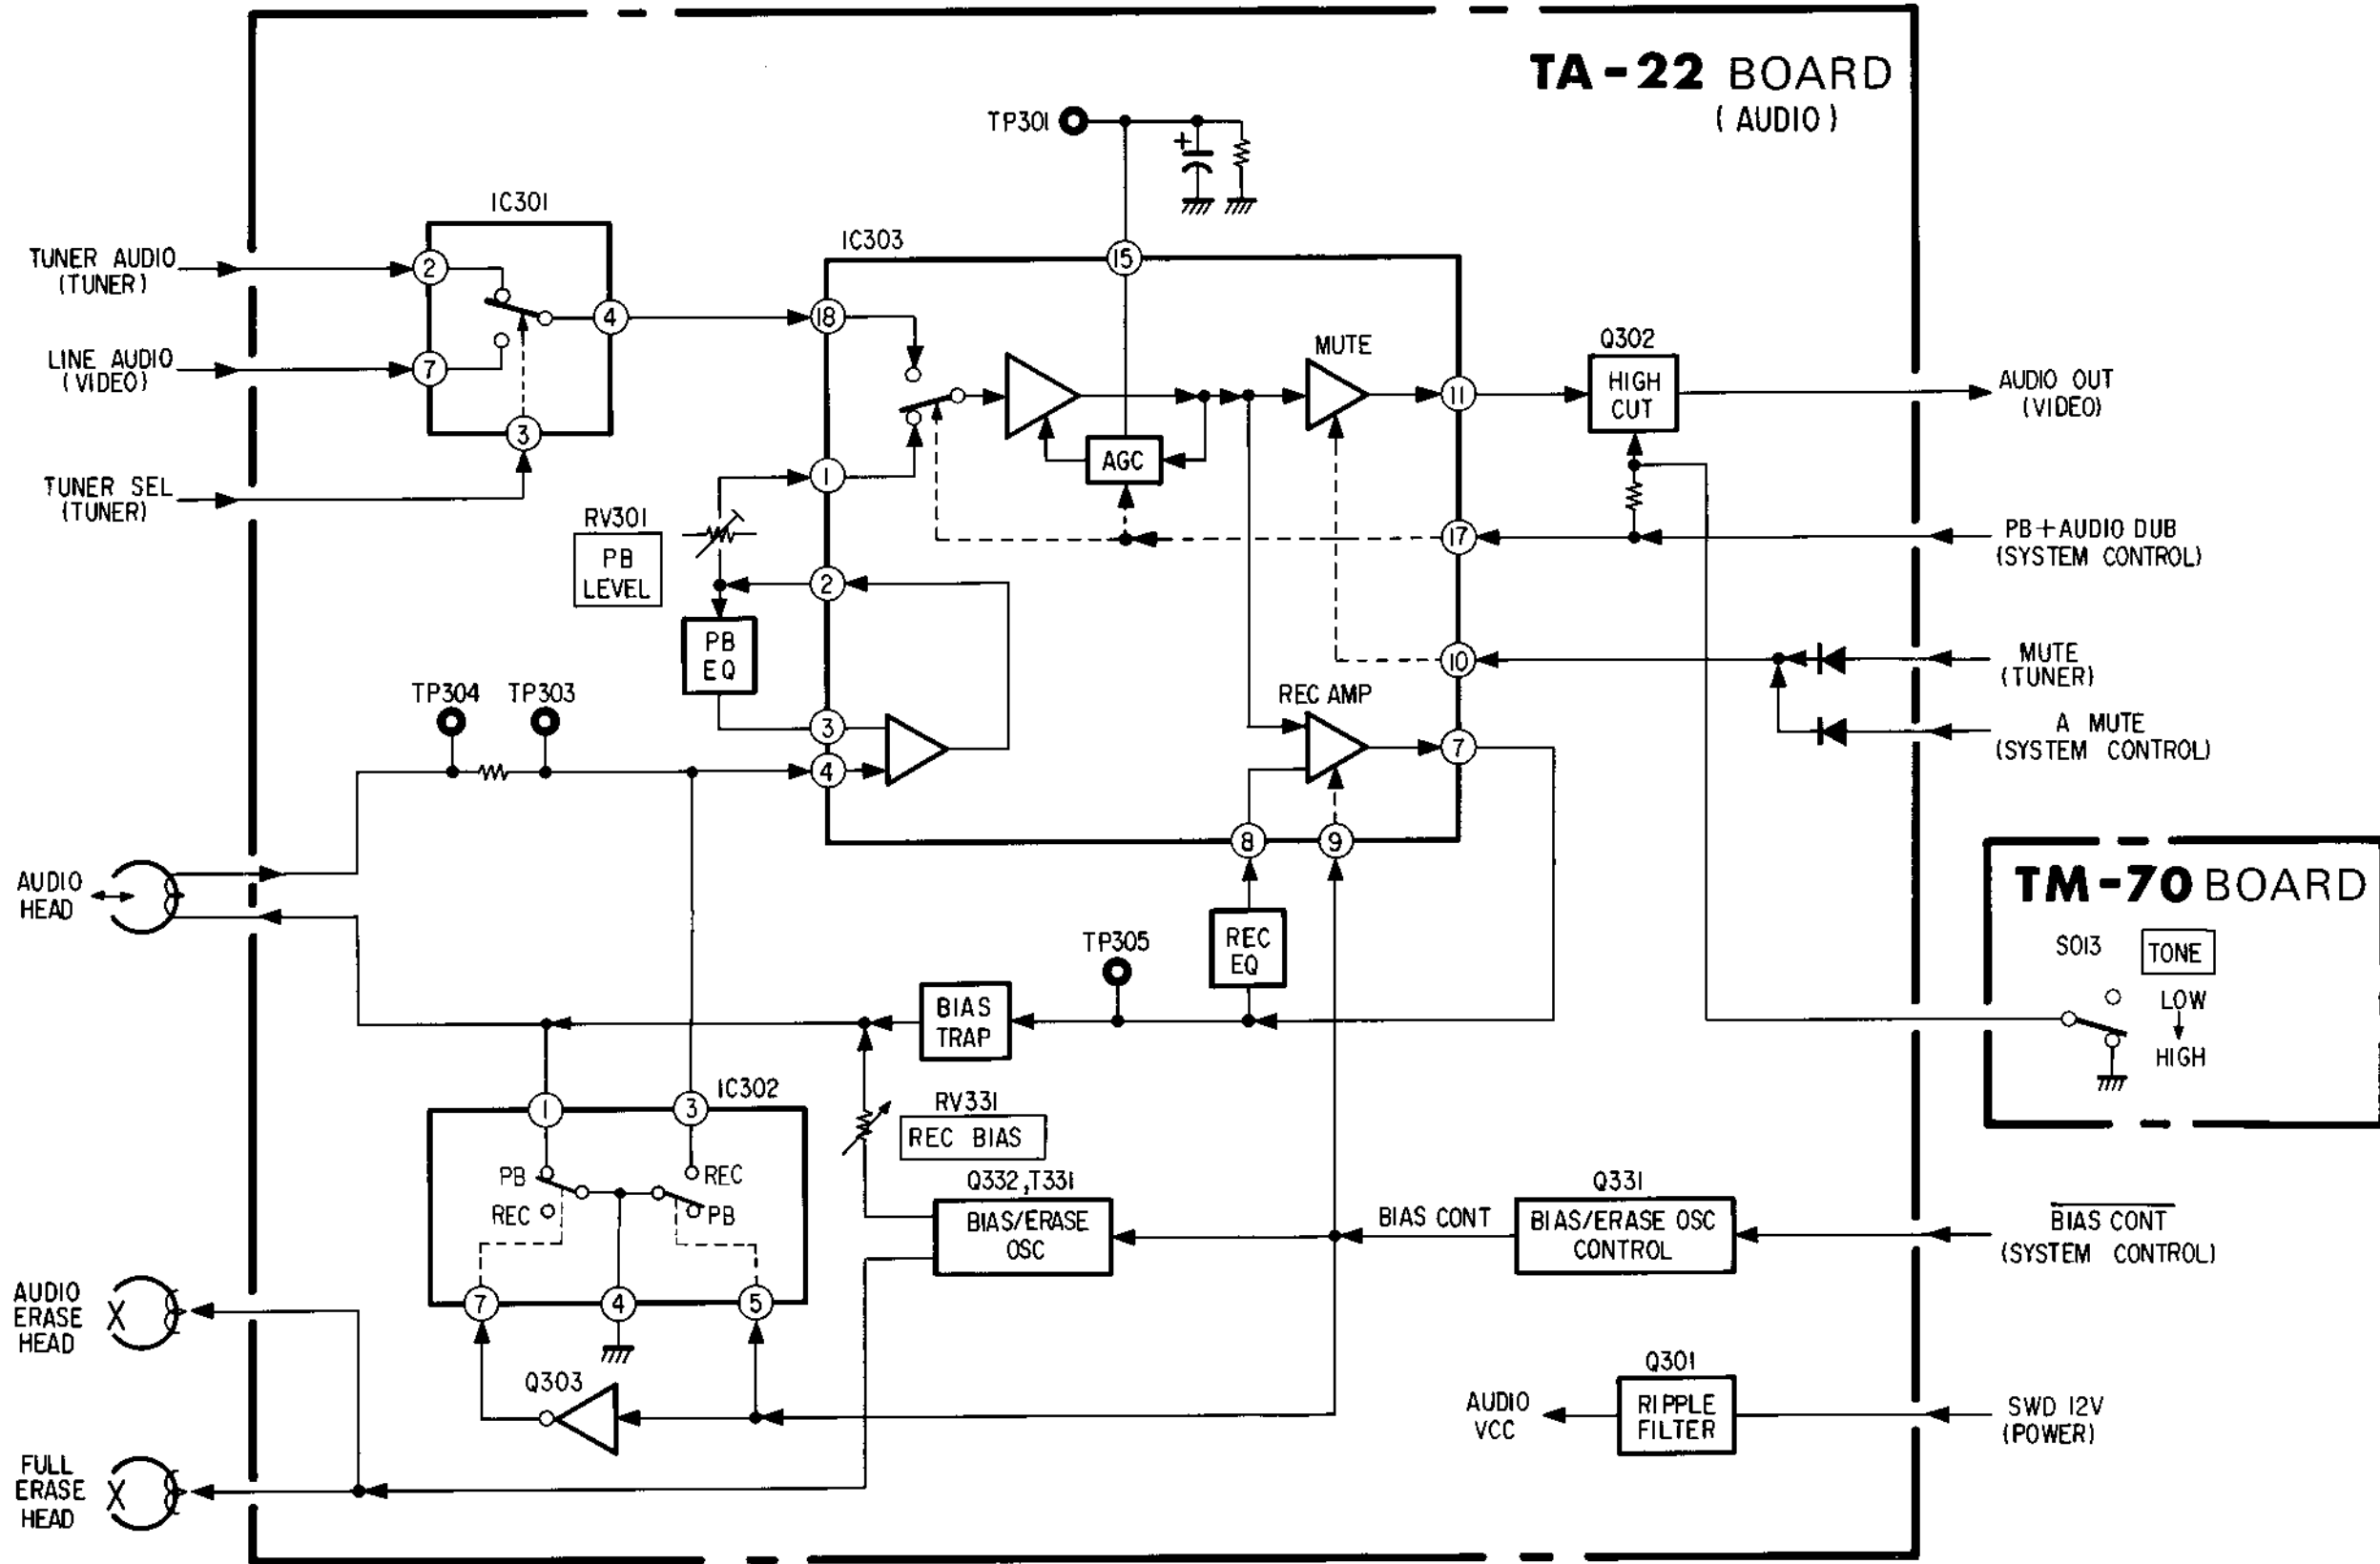


3-16. TUNER BLOCK DIAGRAM

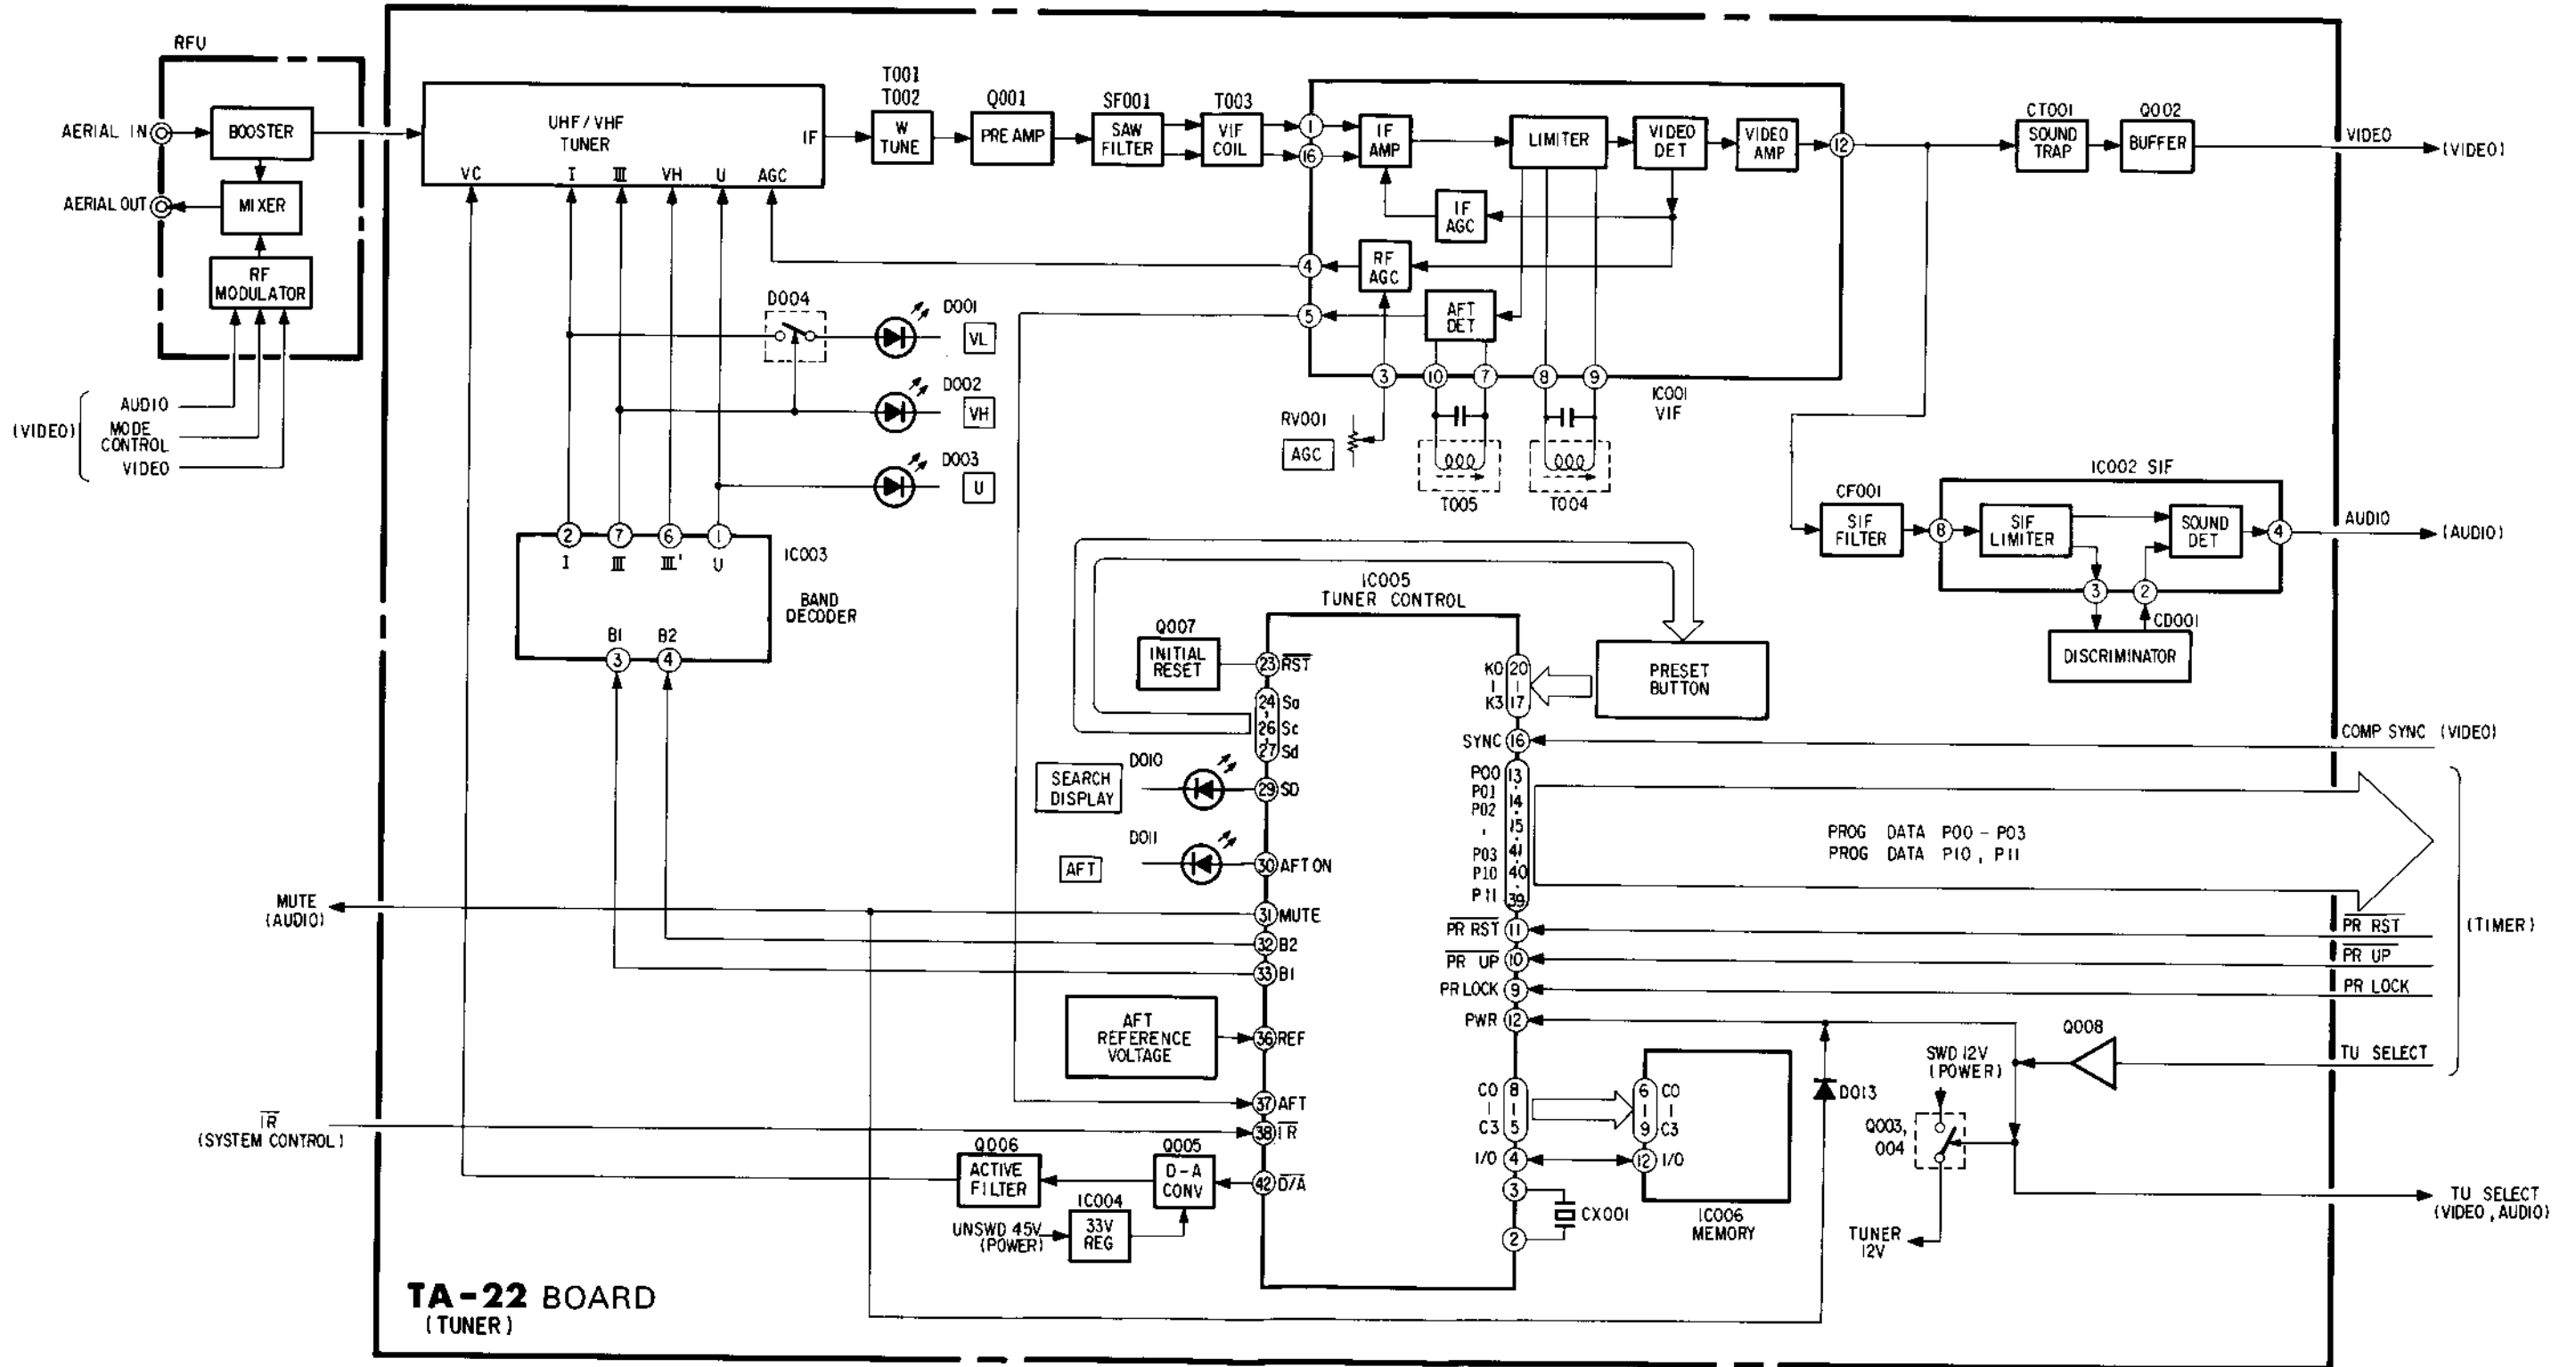

3-17. TIMER BLOCK DIAGRAM

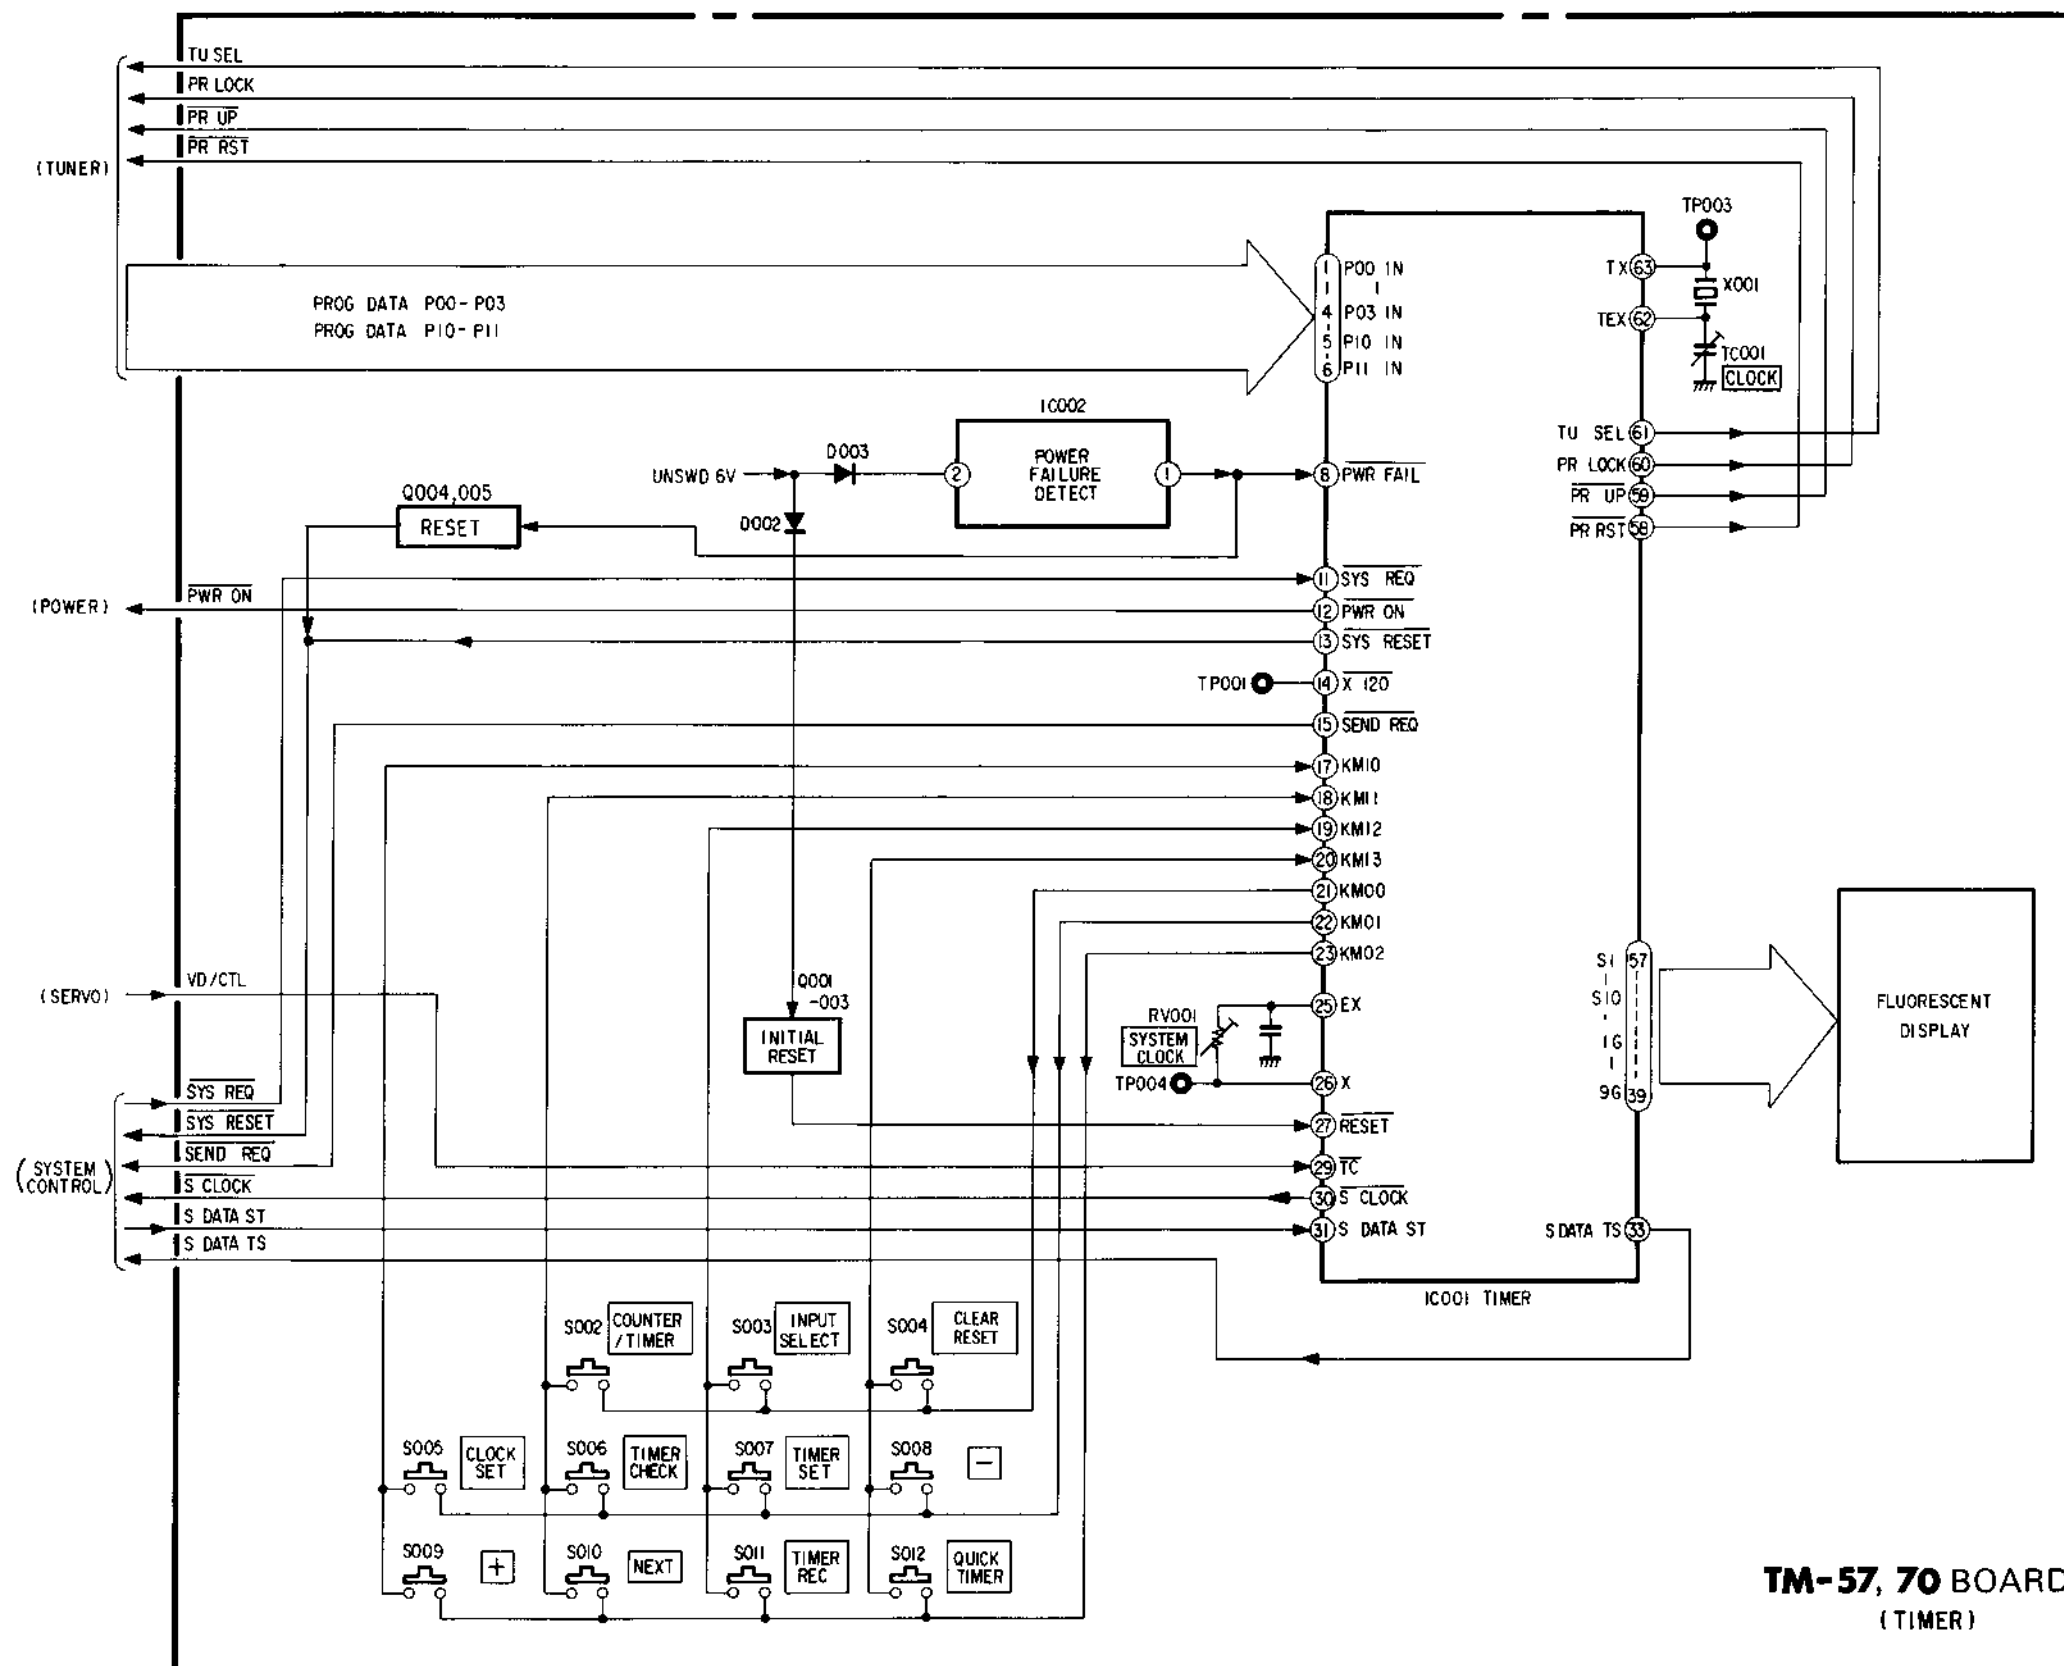


3-18. POWER BLOCK DIAGRAM

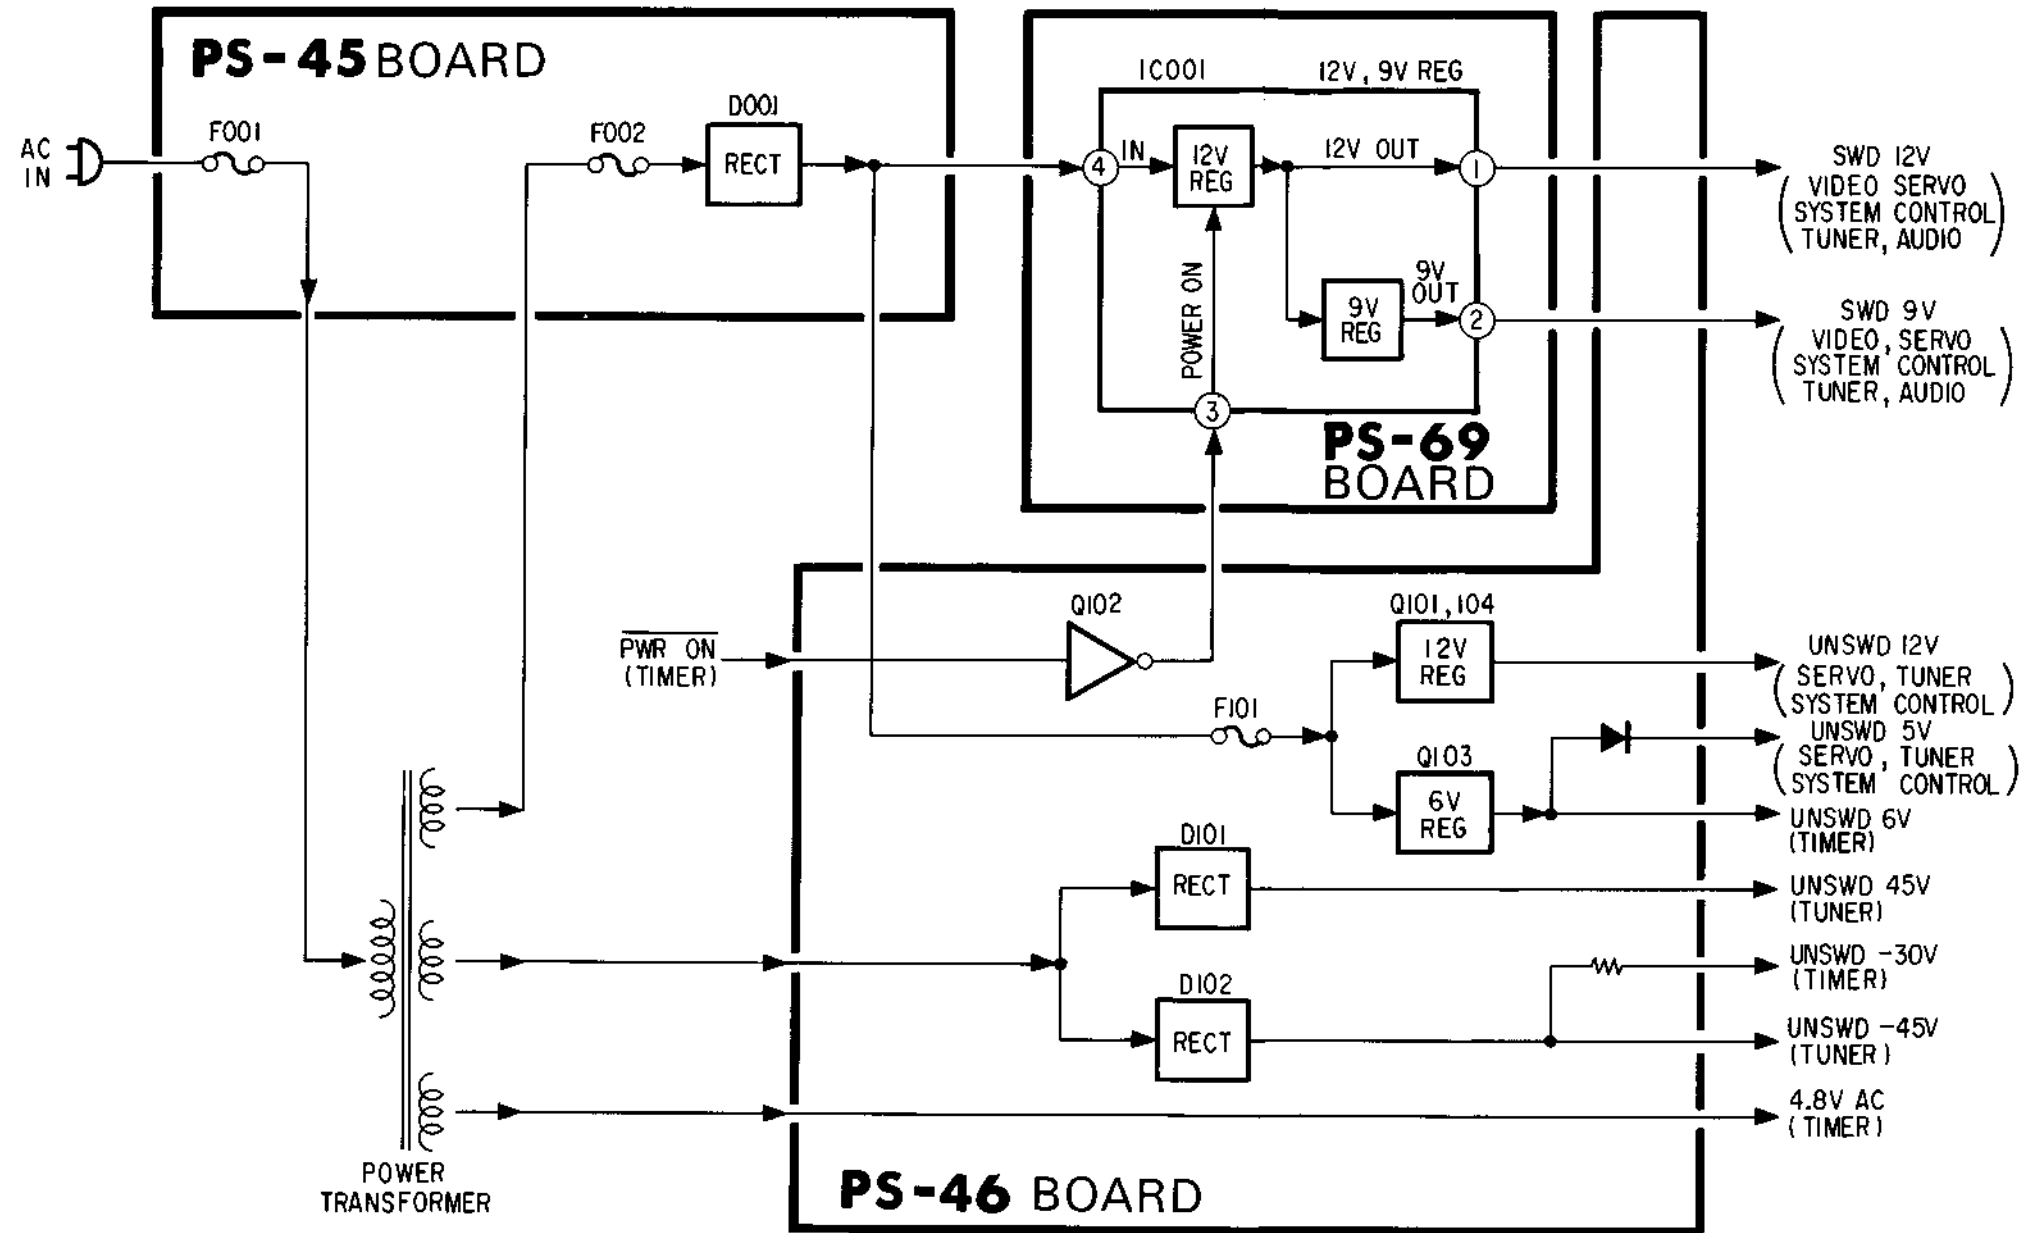

SECTION 4
SCHEMATIC DIAGRAM AND PRINTED WIRING BOARDS

FRAME FRAME


4-1. FRAME SCHEMATIC DIAGRAM

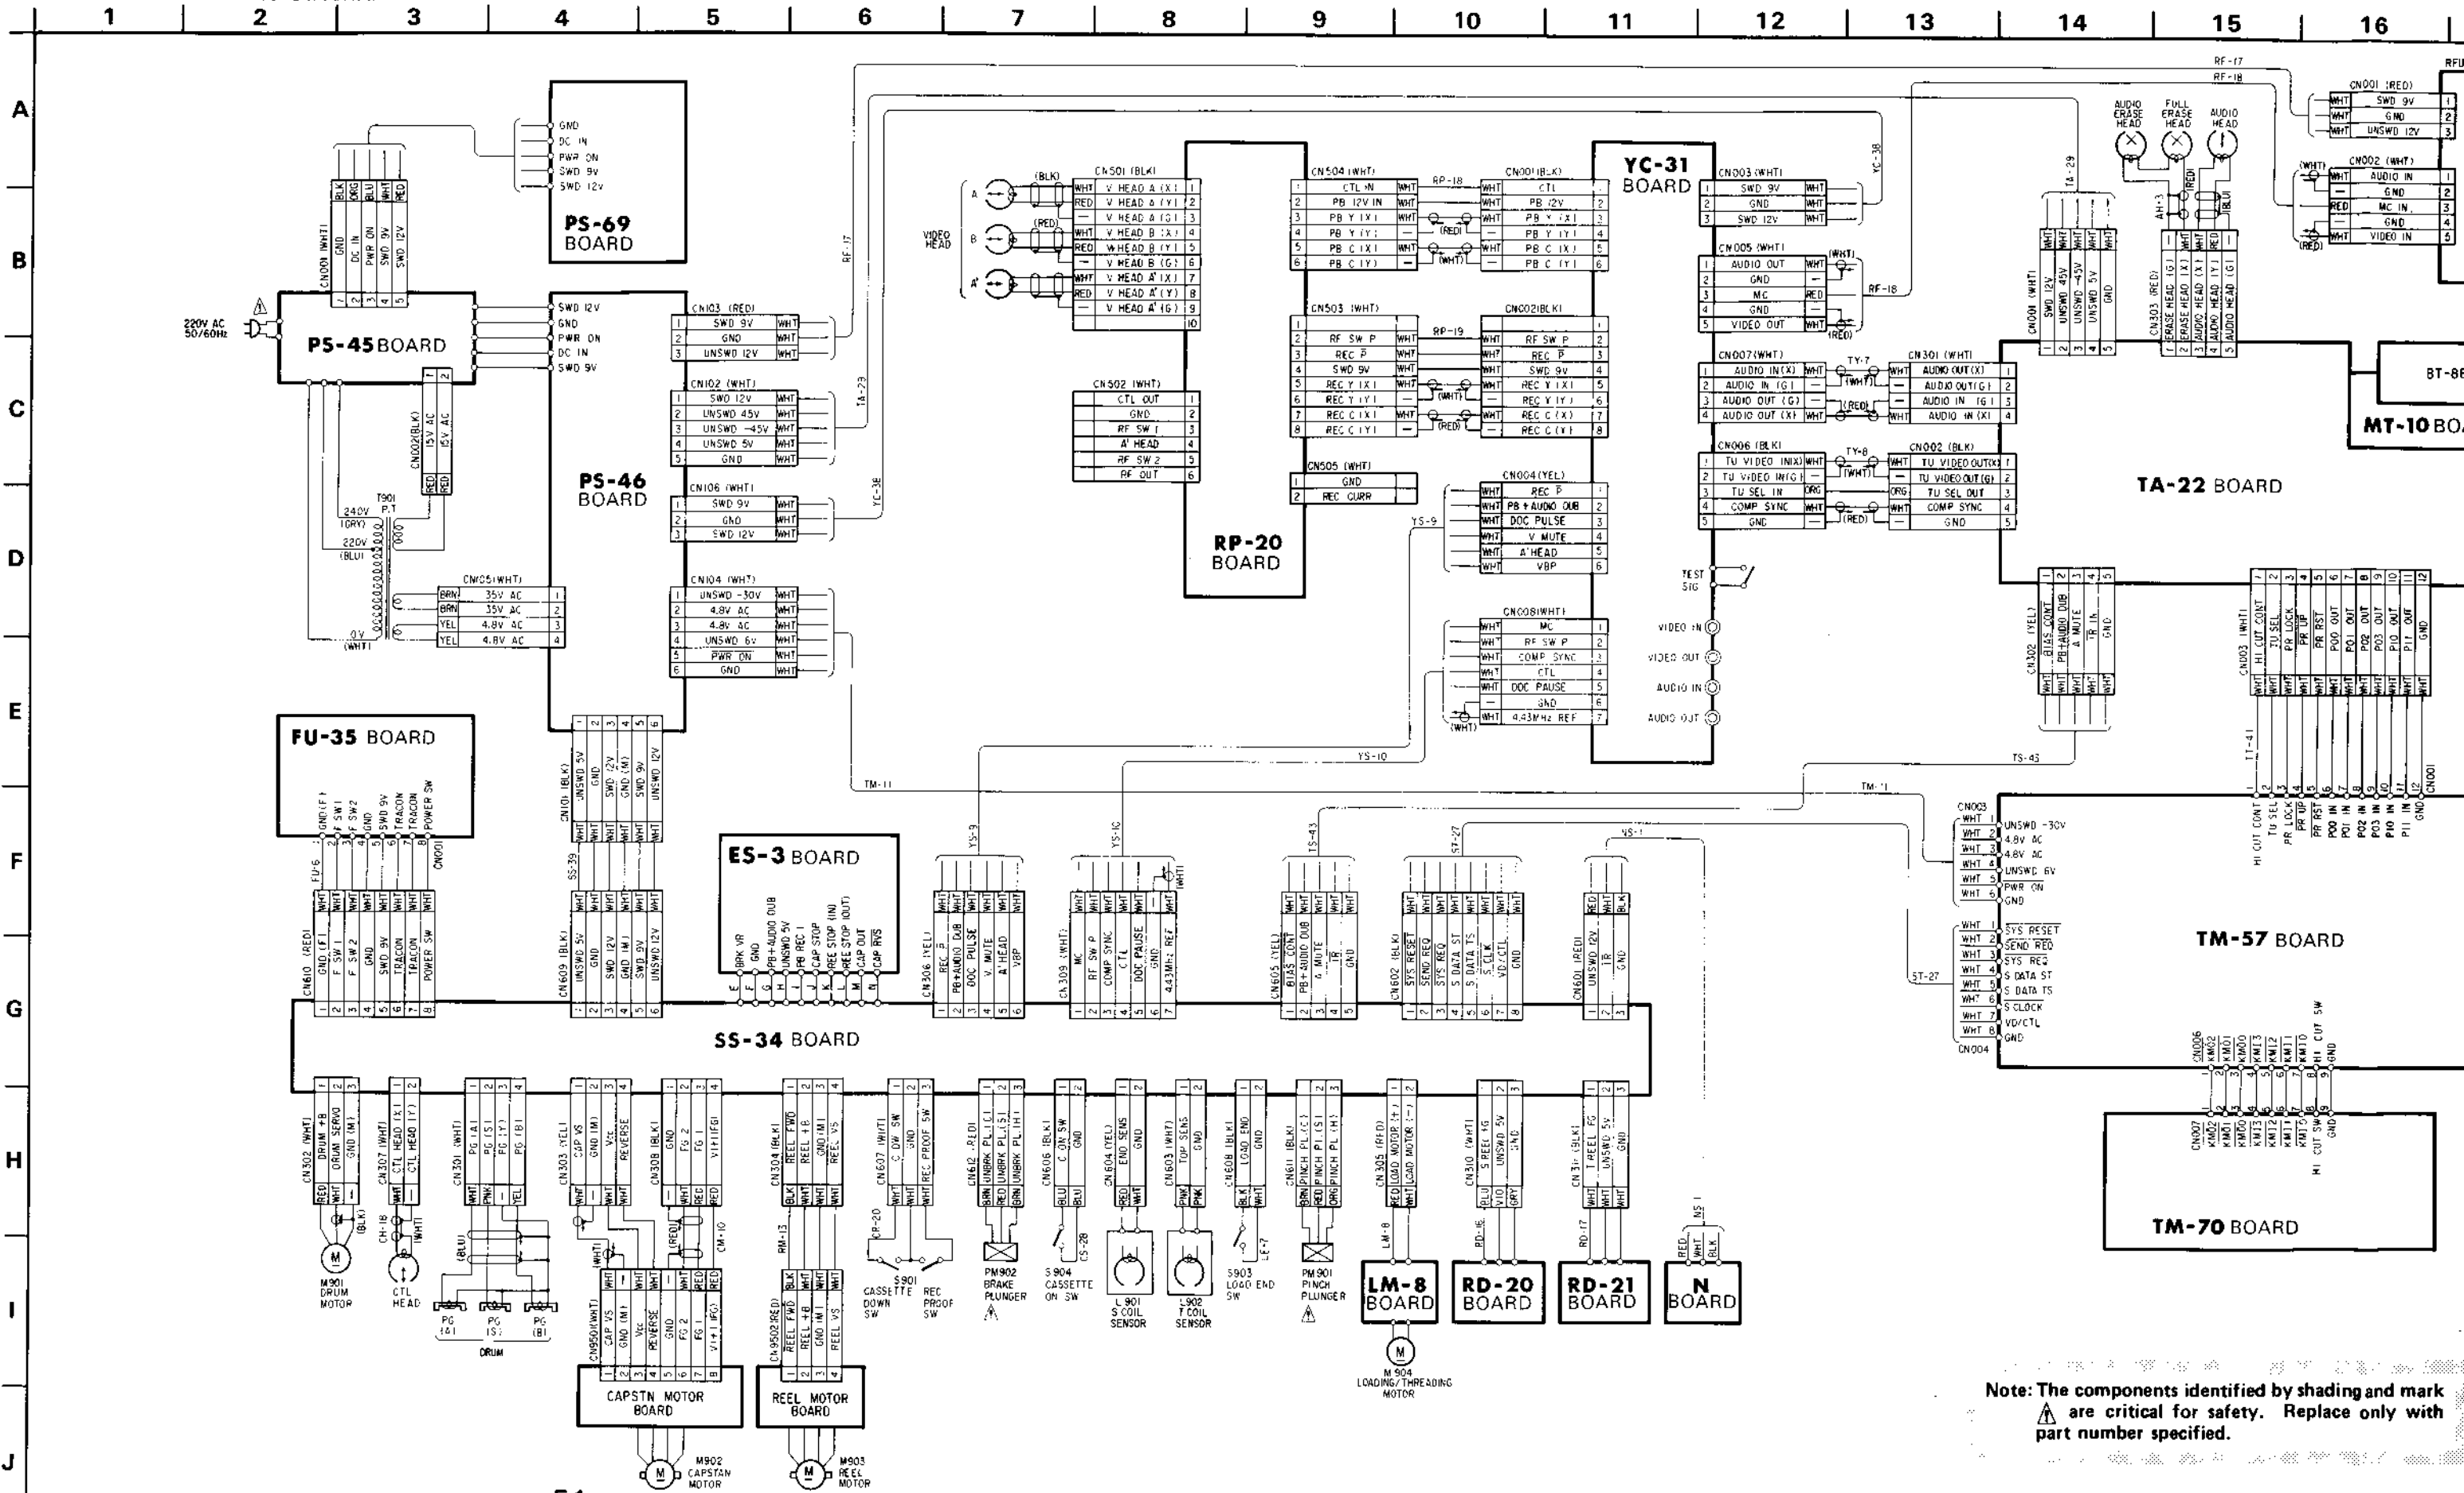


SECTION 4
SCHEMATIC DIAGRAM AND PRINTED WIRING BOARDS

FRAME FRAME

4-1. FRAME SCHEMATIC DIAGRAM

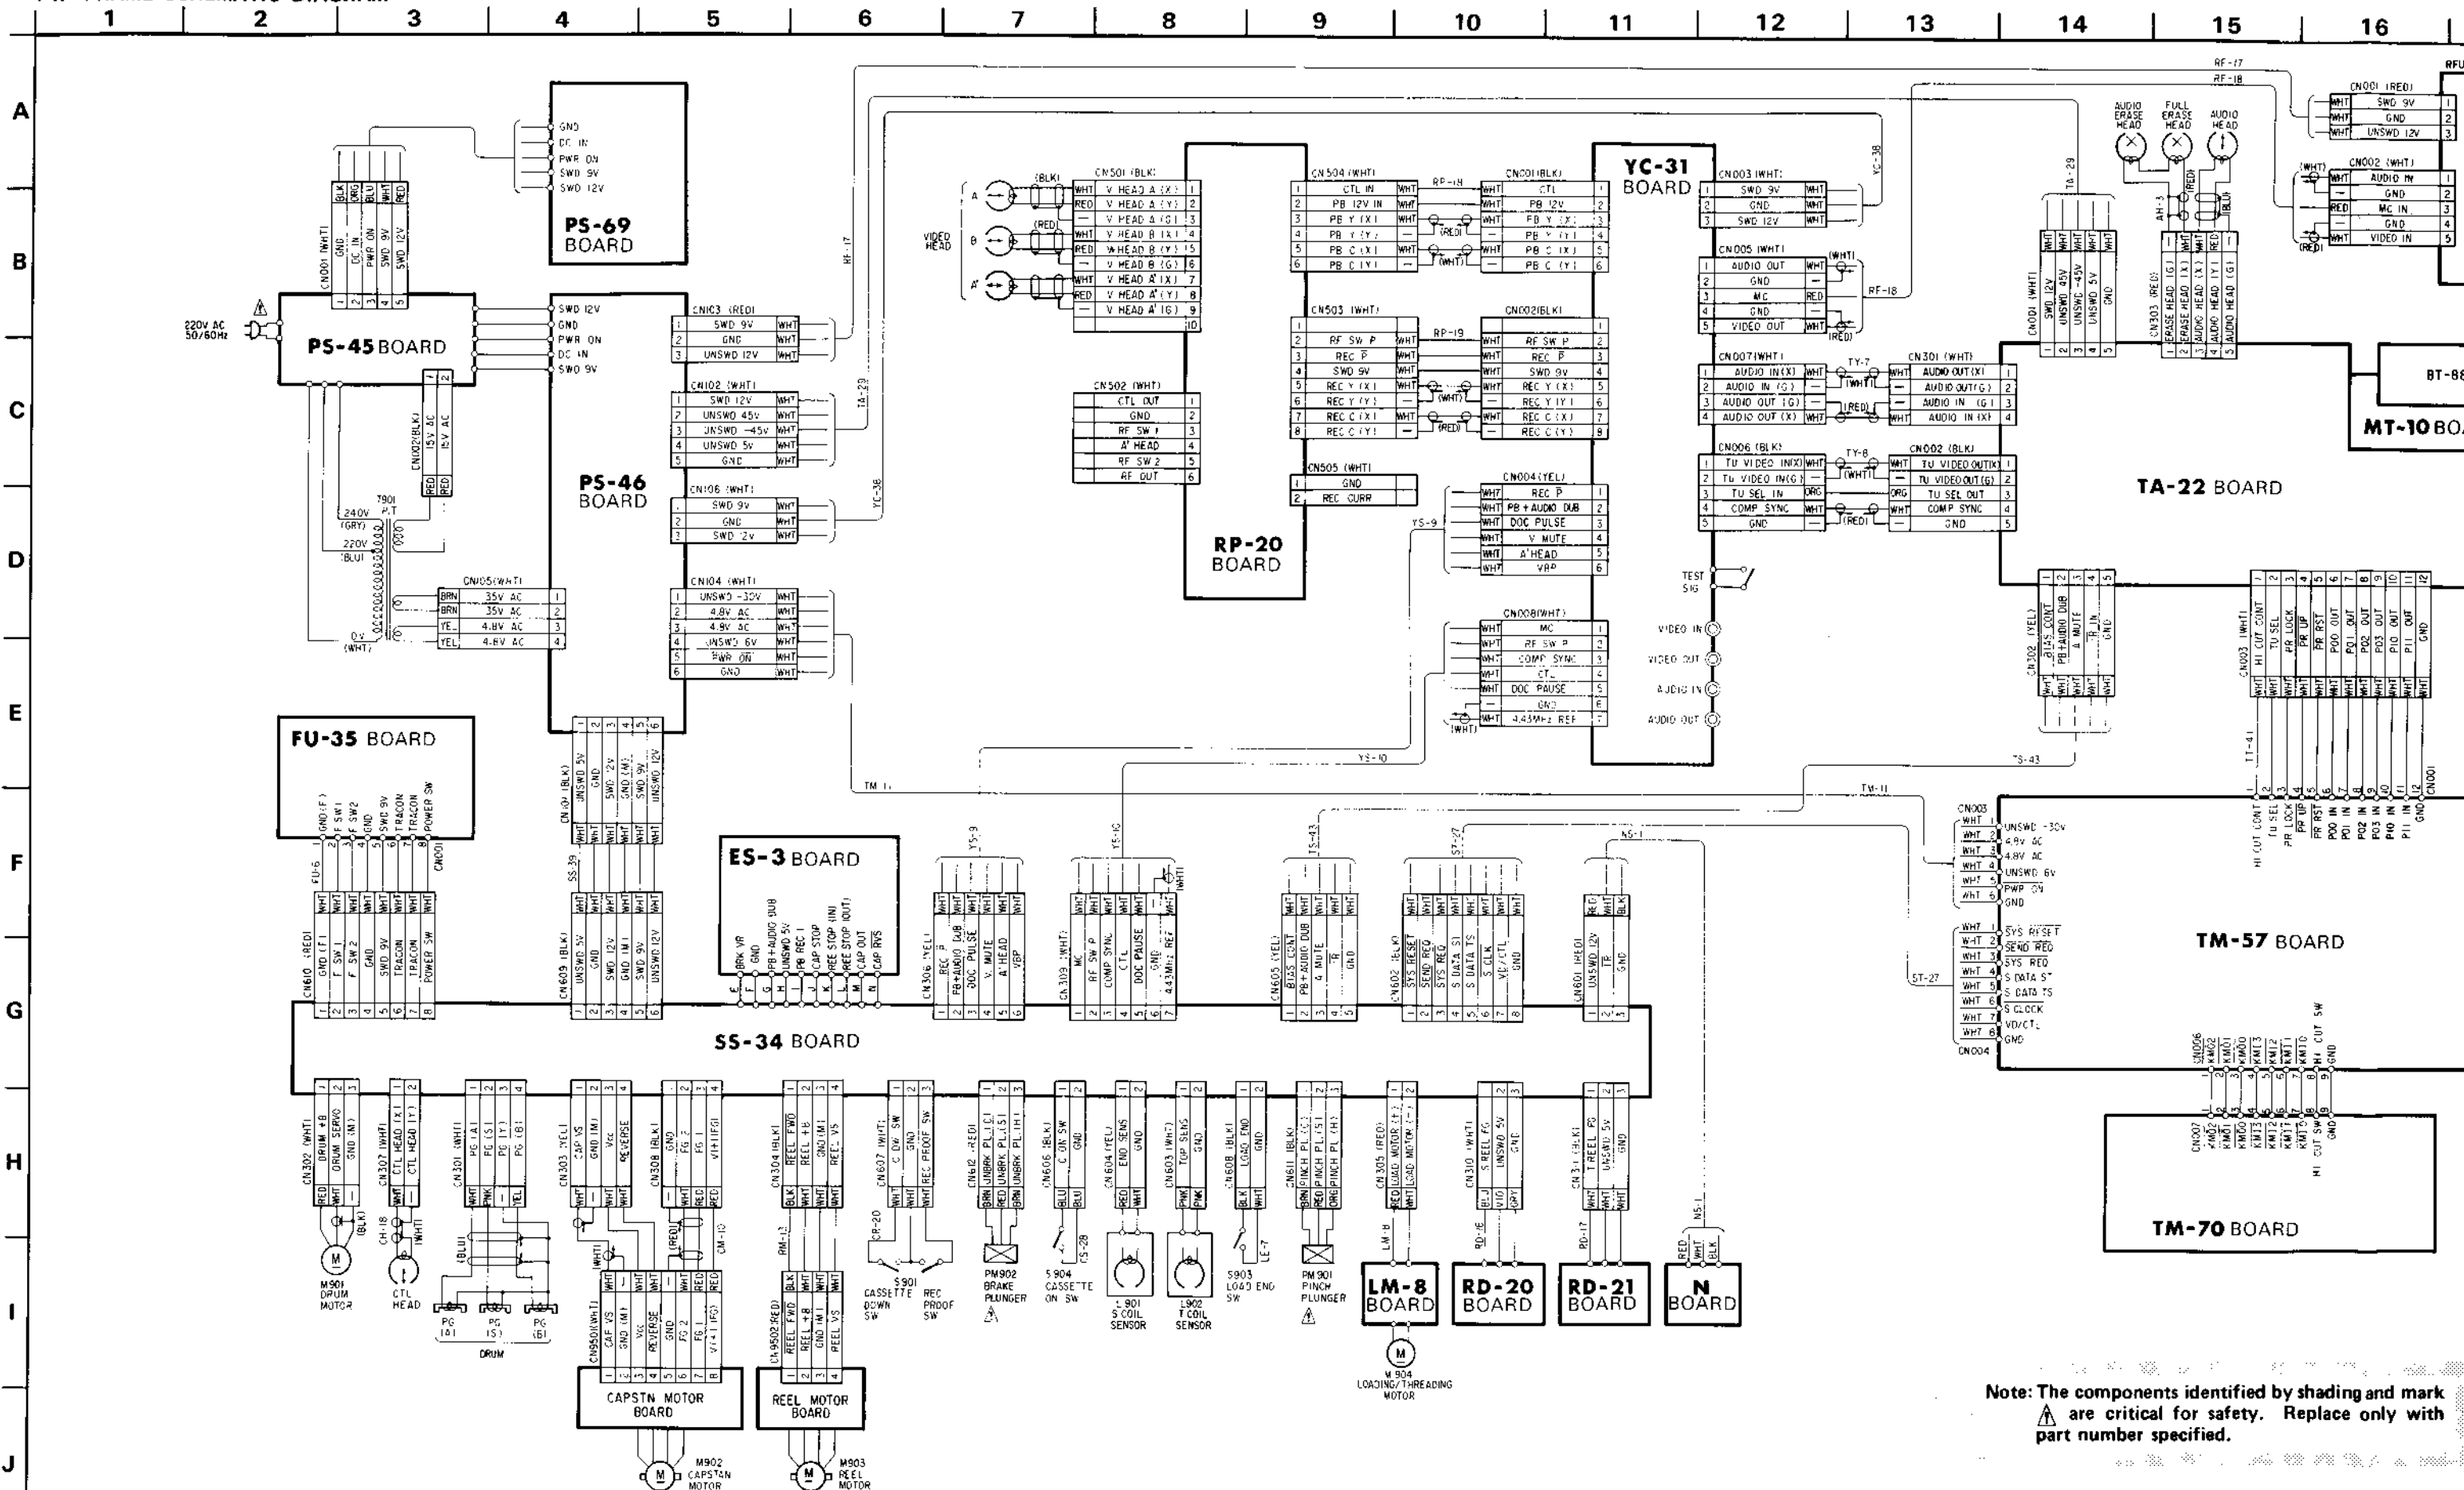


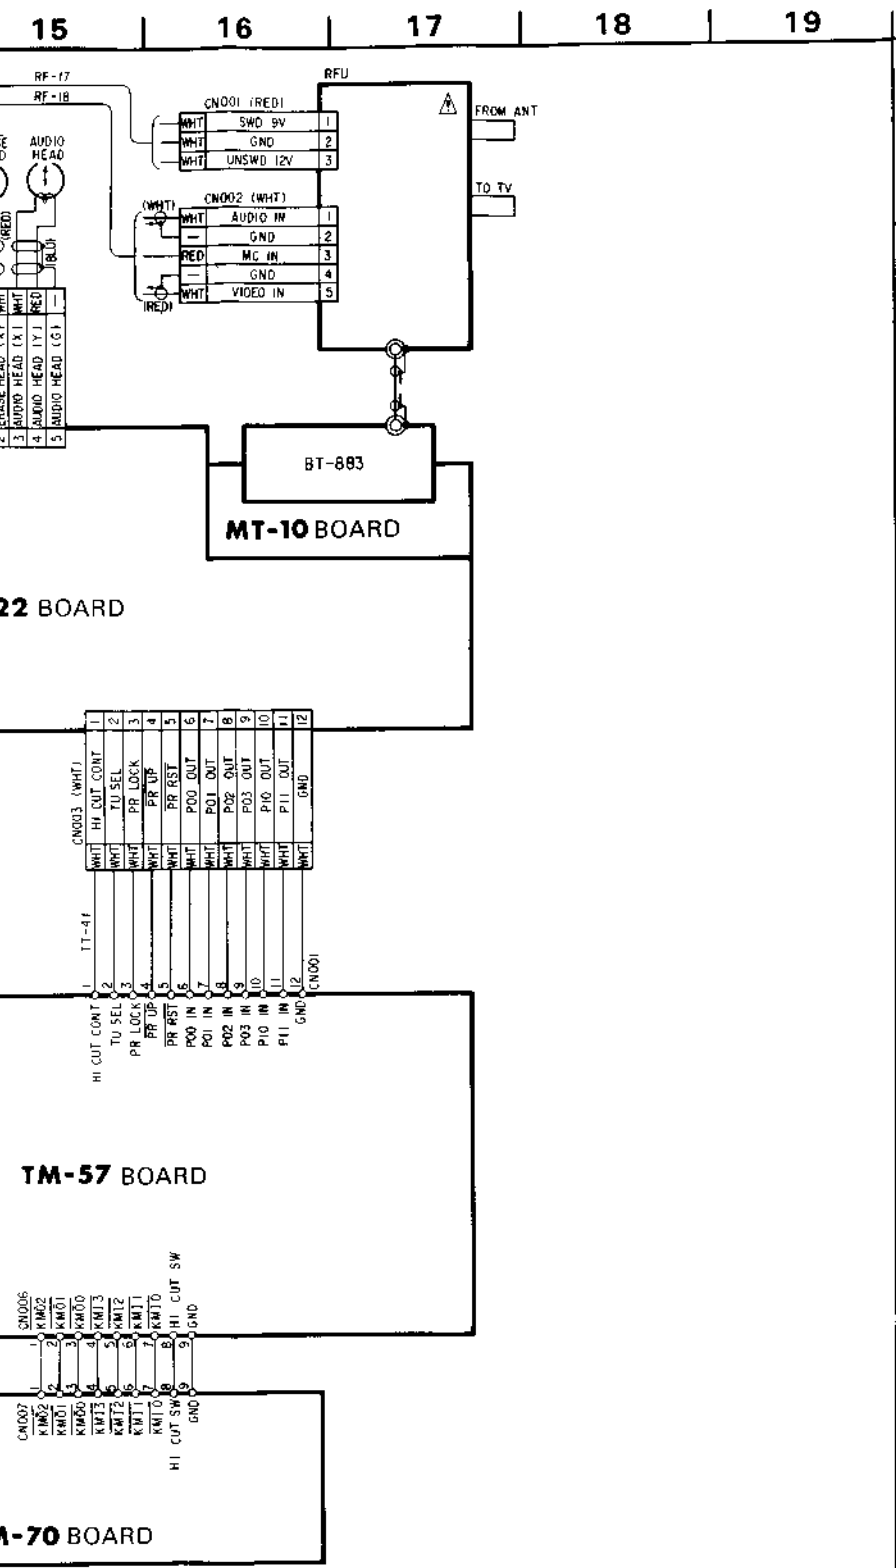


Identified by shading and mark for safety. Replace only with specified.

When indicating parts by reference number, please include the board name.


YC-31 BOARD (PAL/SECAM)

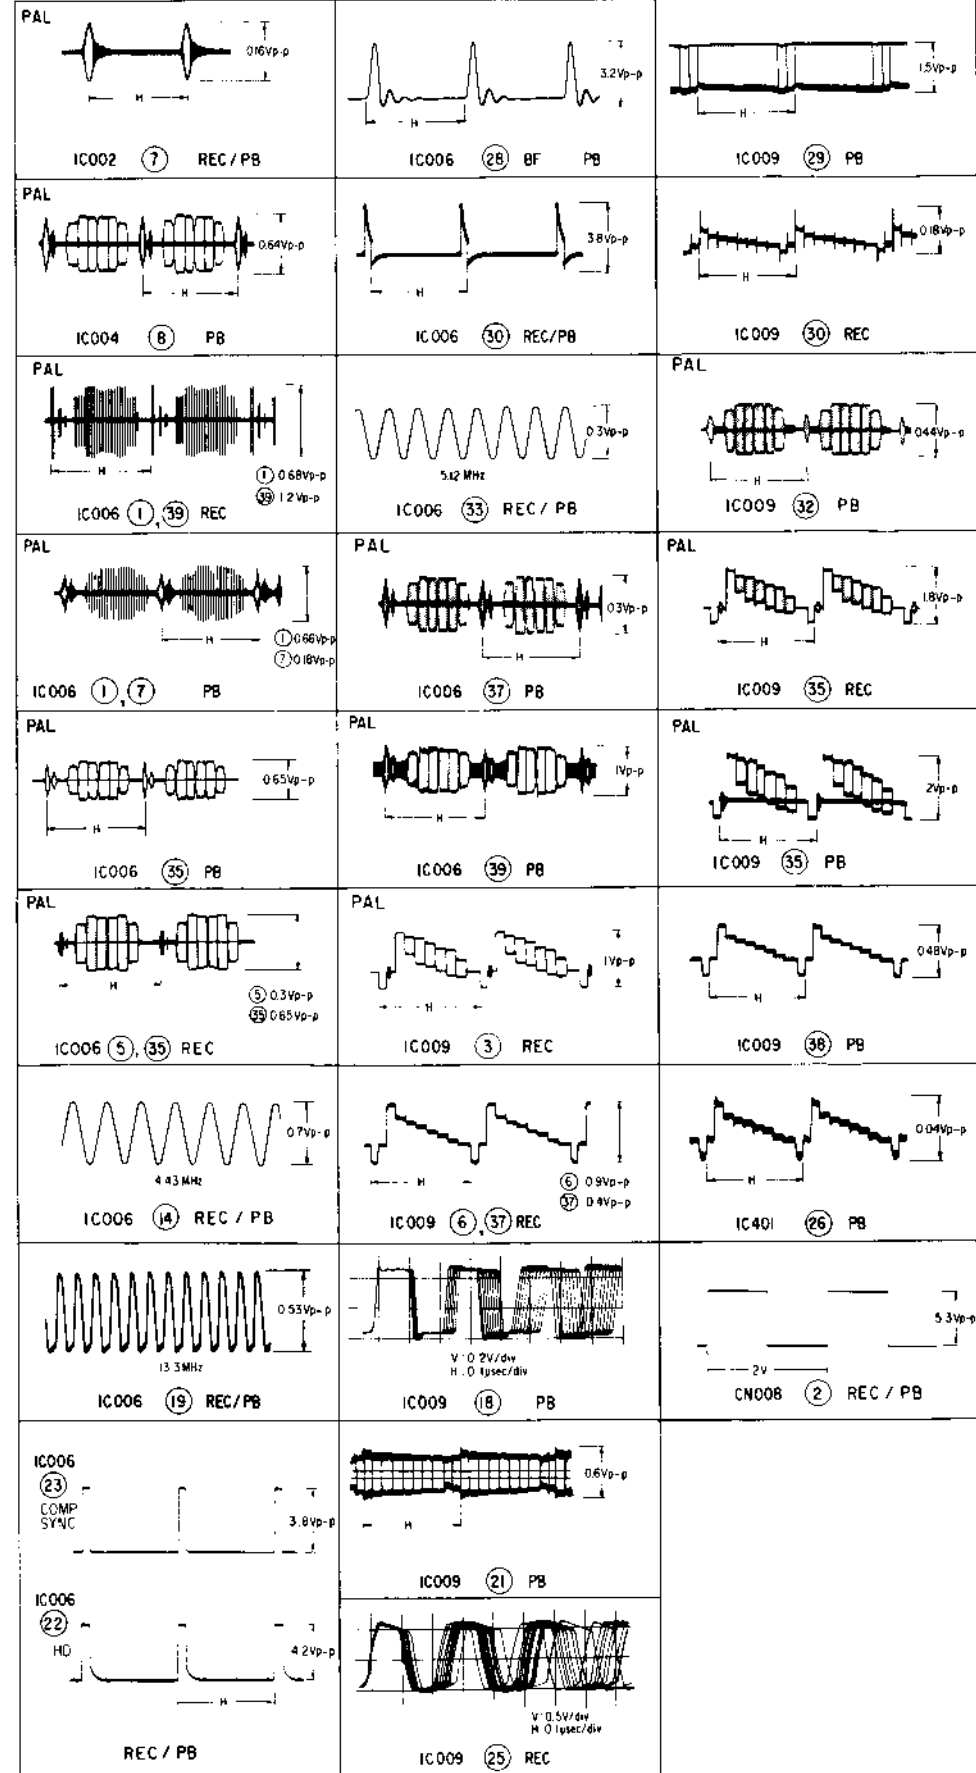

YC-31 BOARD (SECAM)

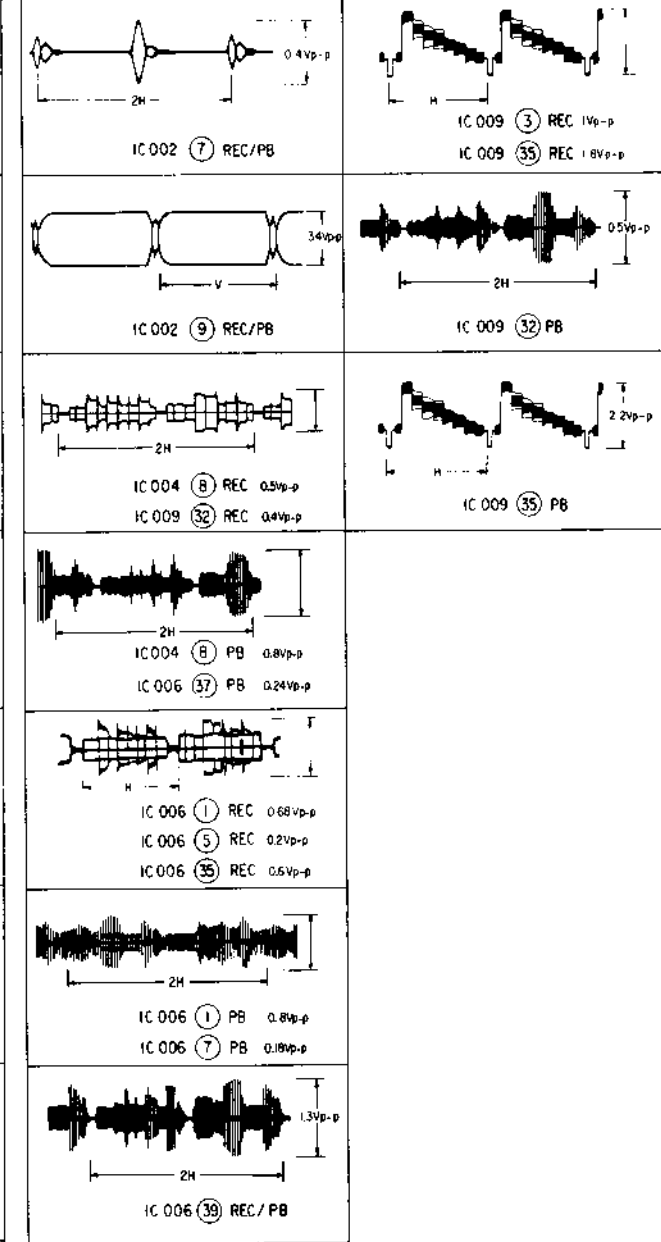

RP-20 BOARD

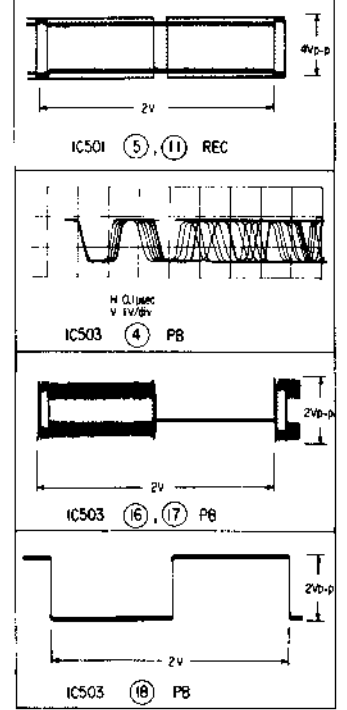



4.2. YC-31 (Y, CHROMA SIGNAL PROCESS), RP-20 (VIDEO SIGNAL, REC/PB AMP) PRINTED WIRING BOARDS

- Ref. No. YC-31 BOARD : 1000 series, RP-20 BOARD : 2000 series -

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

A
B
C
D
E
F
G
H
I
J


Q, IC	D	ADJ
075		
501	031	RV002
047		LV001
620		RV003
10002		RV401
102,048,049		RV501
502	030	RV001
10003		LV501
10004		RV019
050	021,022	
055		RV020
020,401	005	029
024	006	
10001		
504		027
503,019		
023		018
10001		
022		018
10012		
044,043		RV021
010		
045,040		
011		RV602
	012	
030		RV014
		LV003
033,034		RV016
10009		CV001
039	019	RV015
071,038	015	
029		020
035		RV009
036,067		RV010
601	013	
10005		016
037		017
		RV012
025		
026		011
		RV013
10004		036
101		
100		023
602		RV005
016		
027		023
031		RV006
028		
068		RV007
603		LV002
616		RV008
604		
617	607	
103		
032	014	
Q, IC	D	ADJ

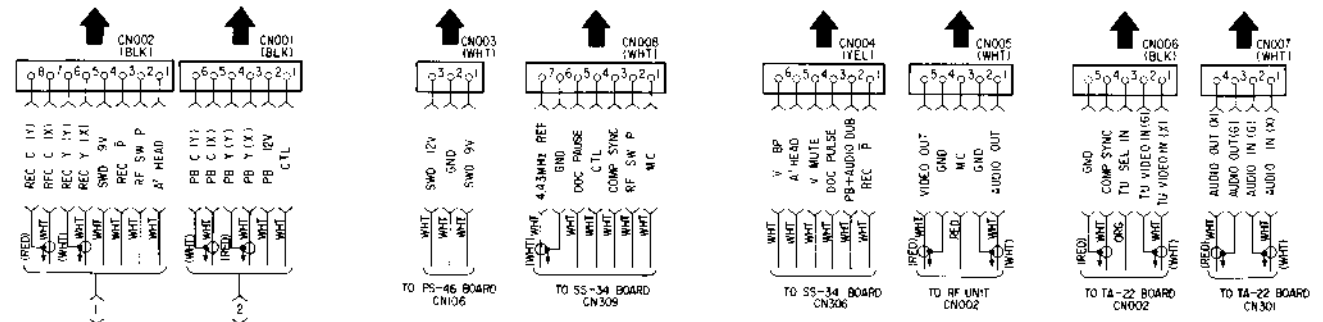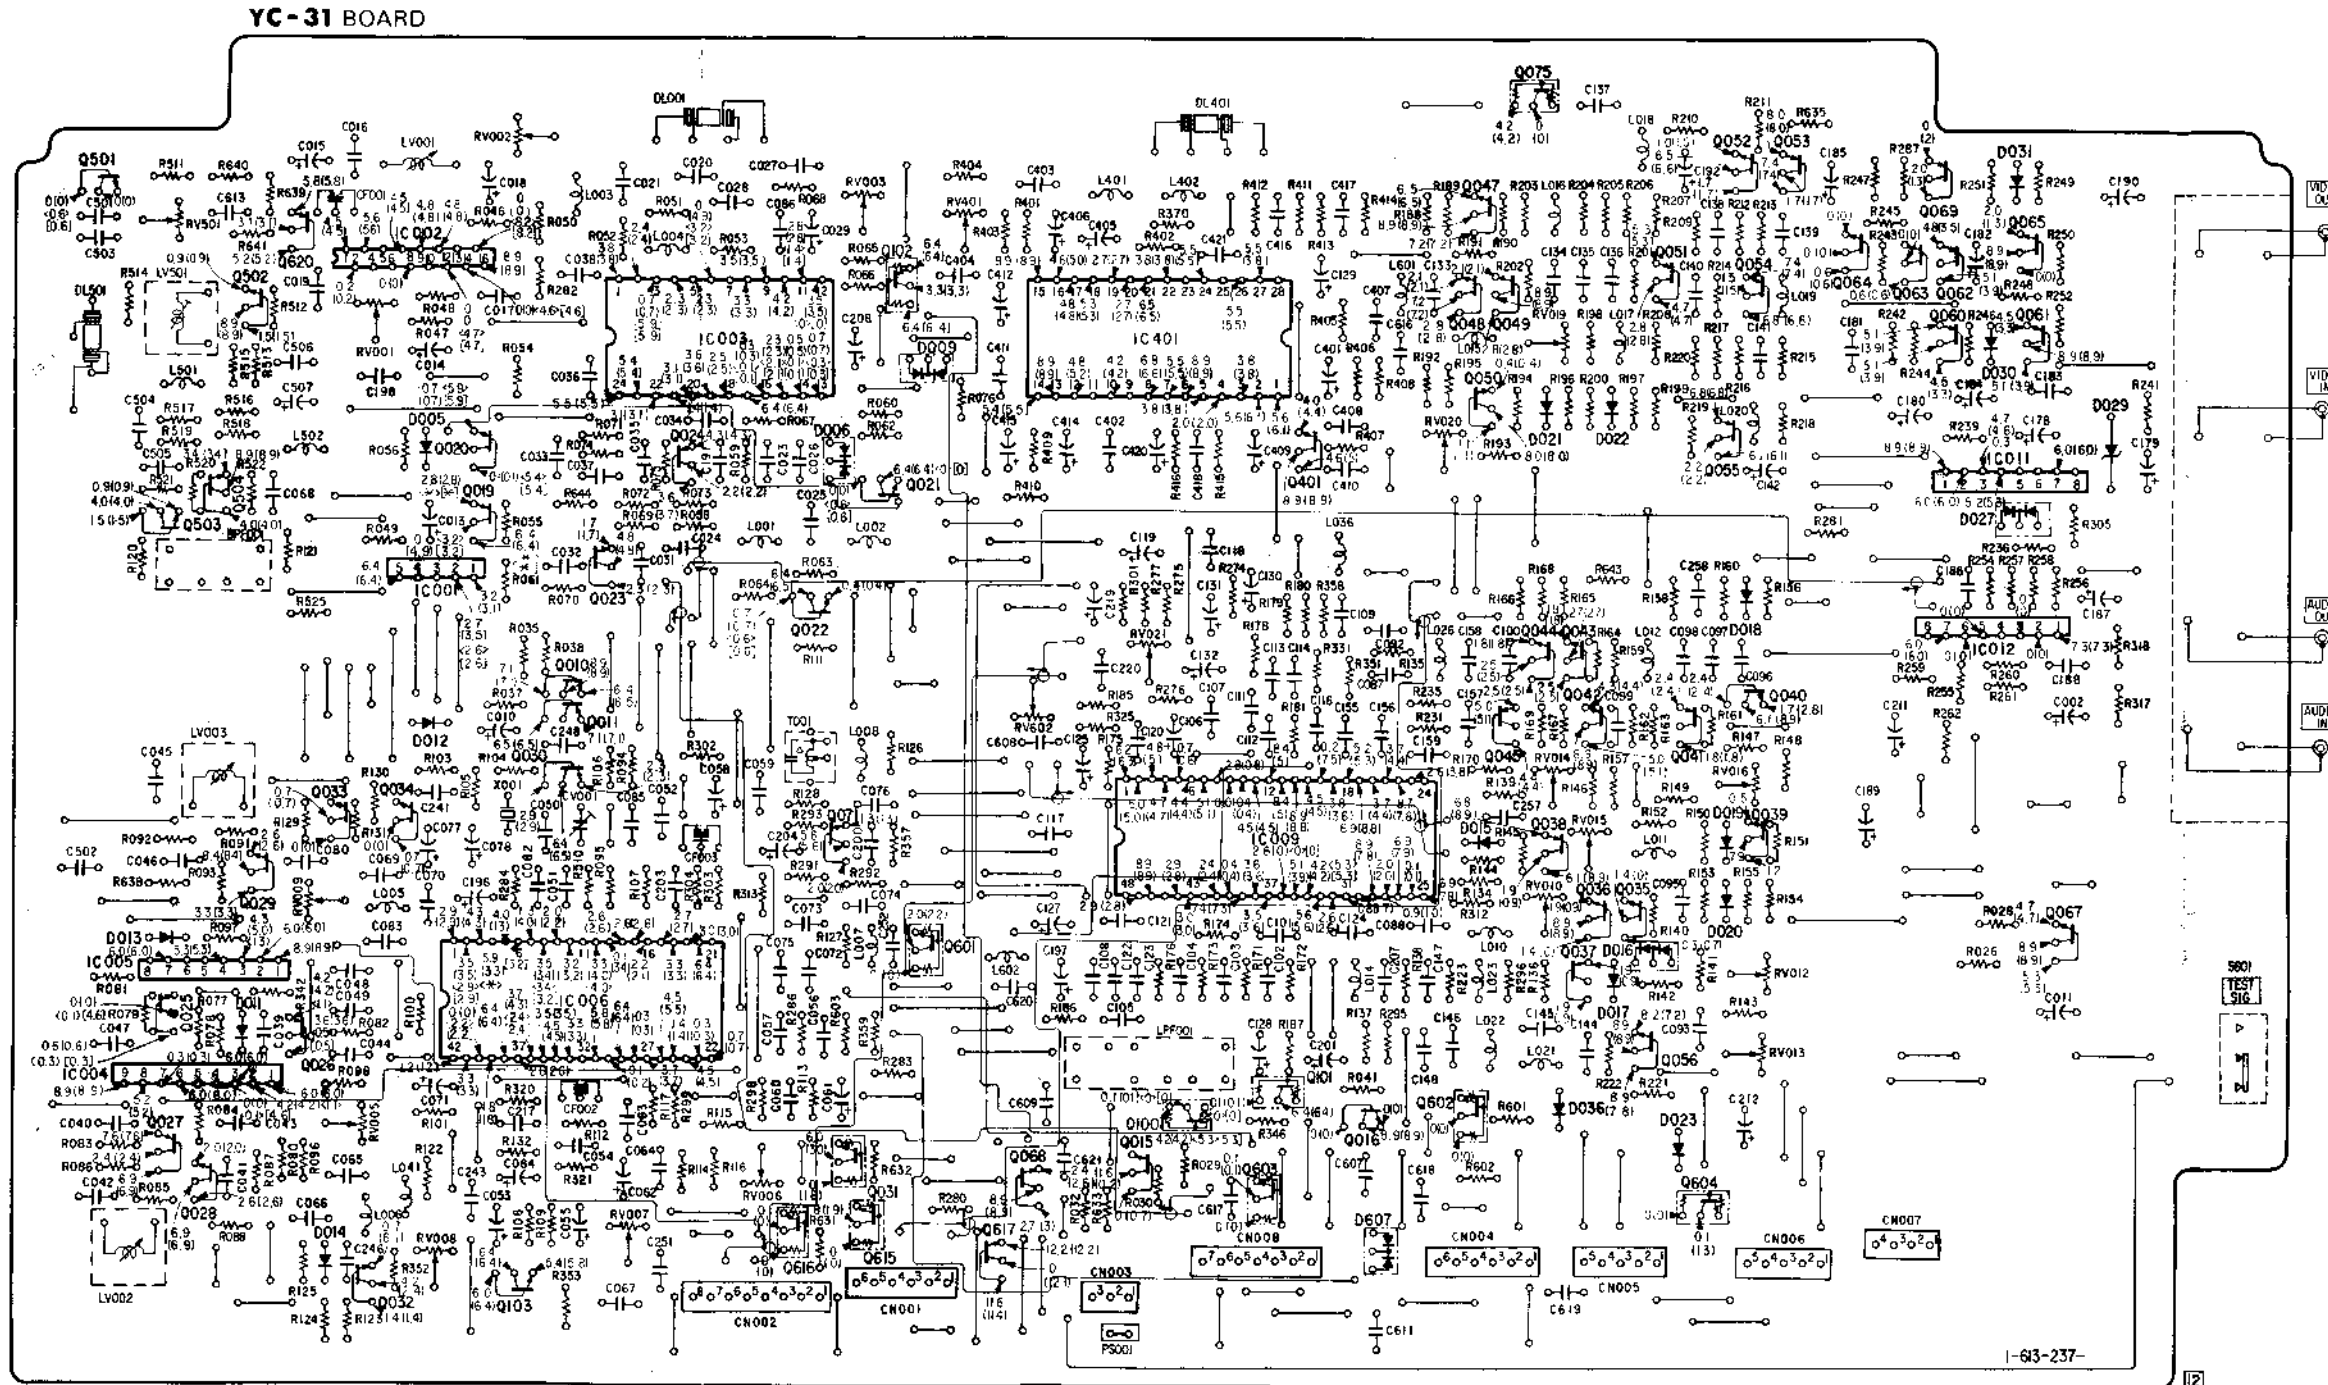


No mark PAL RE mode
 I PAL PB mode
 < SECAM REC mode
 [] SECAM PB mode
 Marked * is not ab c to measure the voltage of it's position

Q	510					Q
IC	IC503	504	IC502	501	IC501	502 503 508
ADJ	RV502	RV503	RV501			



RP-20 BOARD

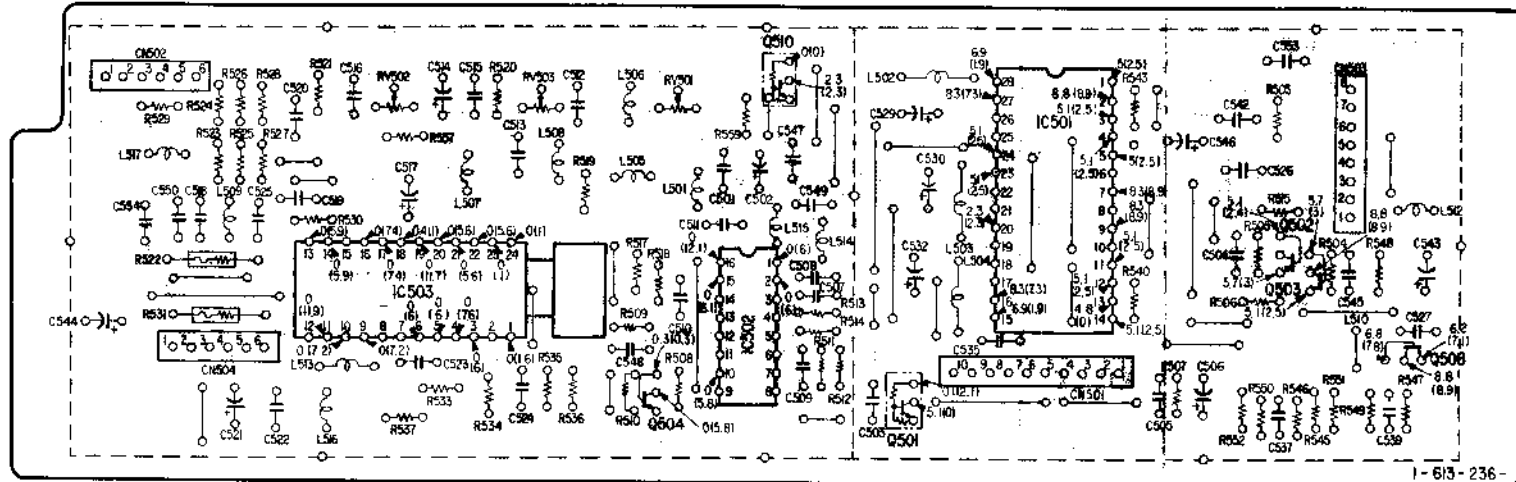

1-613-236-12

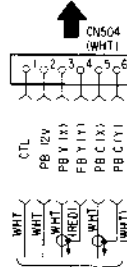

no mark REC mode
I - PB mode

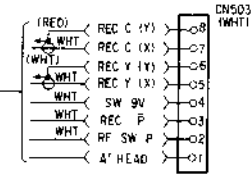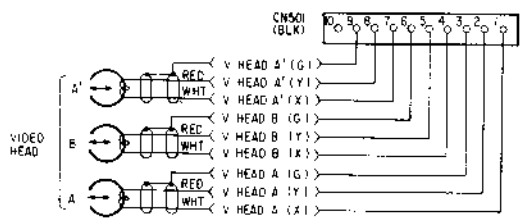

No mark : PAL REC mode
 () : PAL PB mode
 < > : SECAM REC mode
 [] : SECAM PB mode
 Marked * is not able to measure the voltage of it's 005-pin

- Note:**
- — : indicates a lead wire mounted on the component side.
 - — : indicates a lead wire mounted on the printed side.
 - : soldering side
 - : B+ pattern

When indicating parts by reference number, please include the board name.

A
B
C
D
E
F
G
H
I
J



VIDEO VIDEO

YC-31 (Y, CHROMA SIGNAL PROCESS), RP-20 (VIDEO SIGNAL, REC/PB AMP) SCHEMATIC DIAGRAM

- Ref. No. YC-31 BOARD : 1000 series, RP-20 BOARD : 2000 series -

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

A
B
C
D
E
F
G
H
I
J

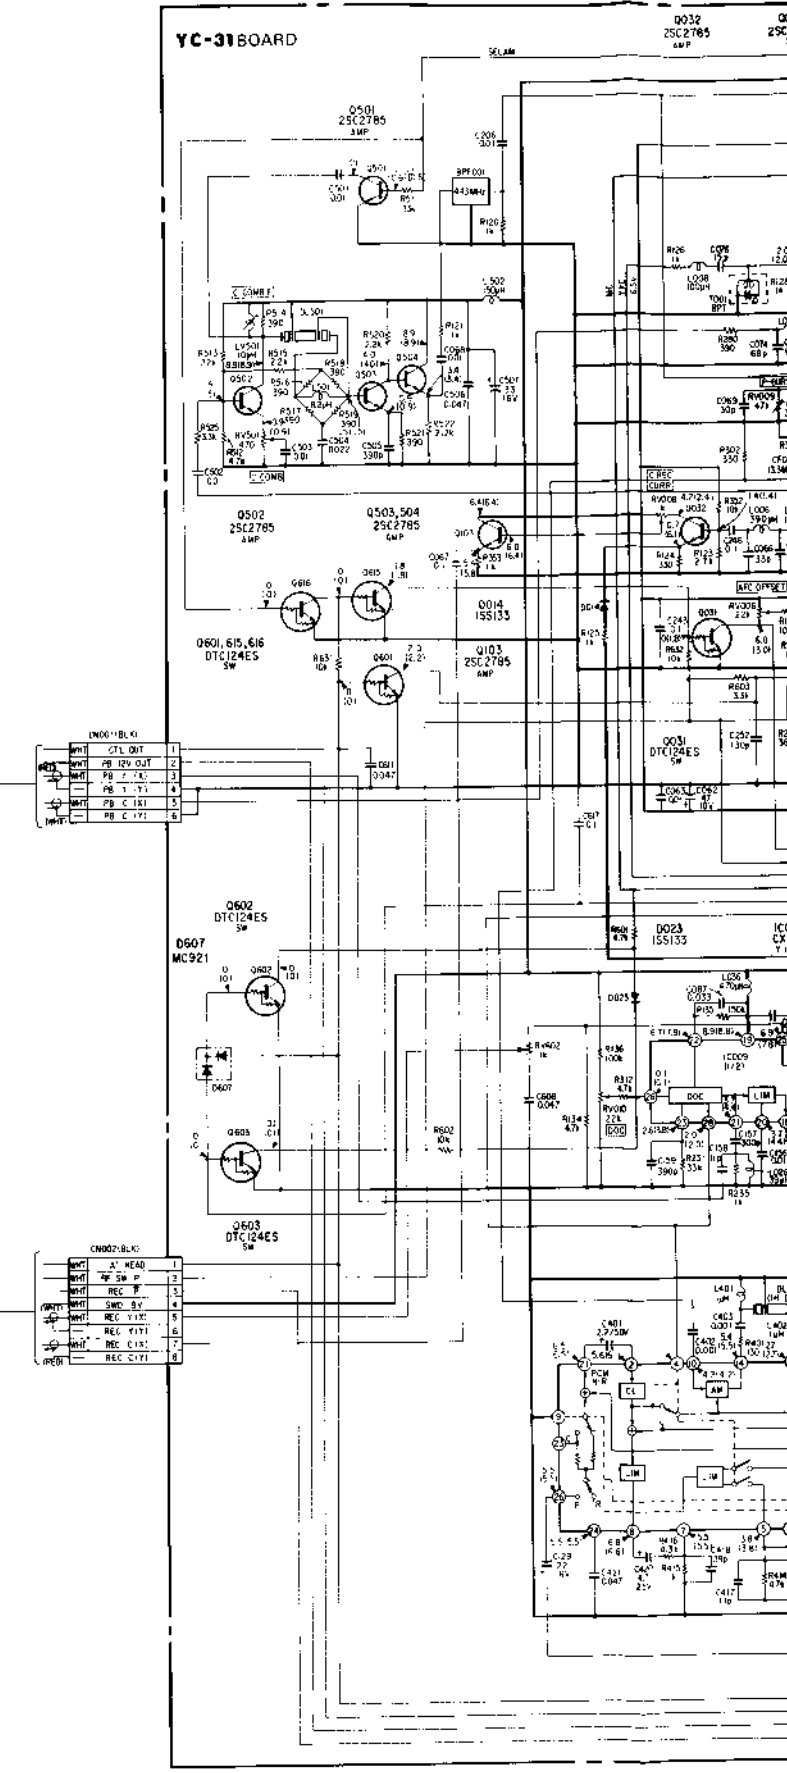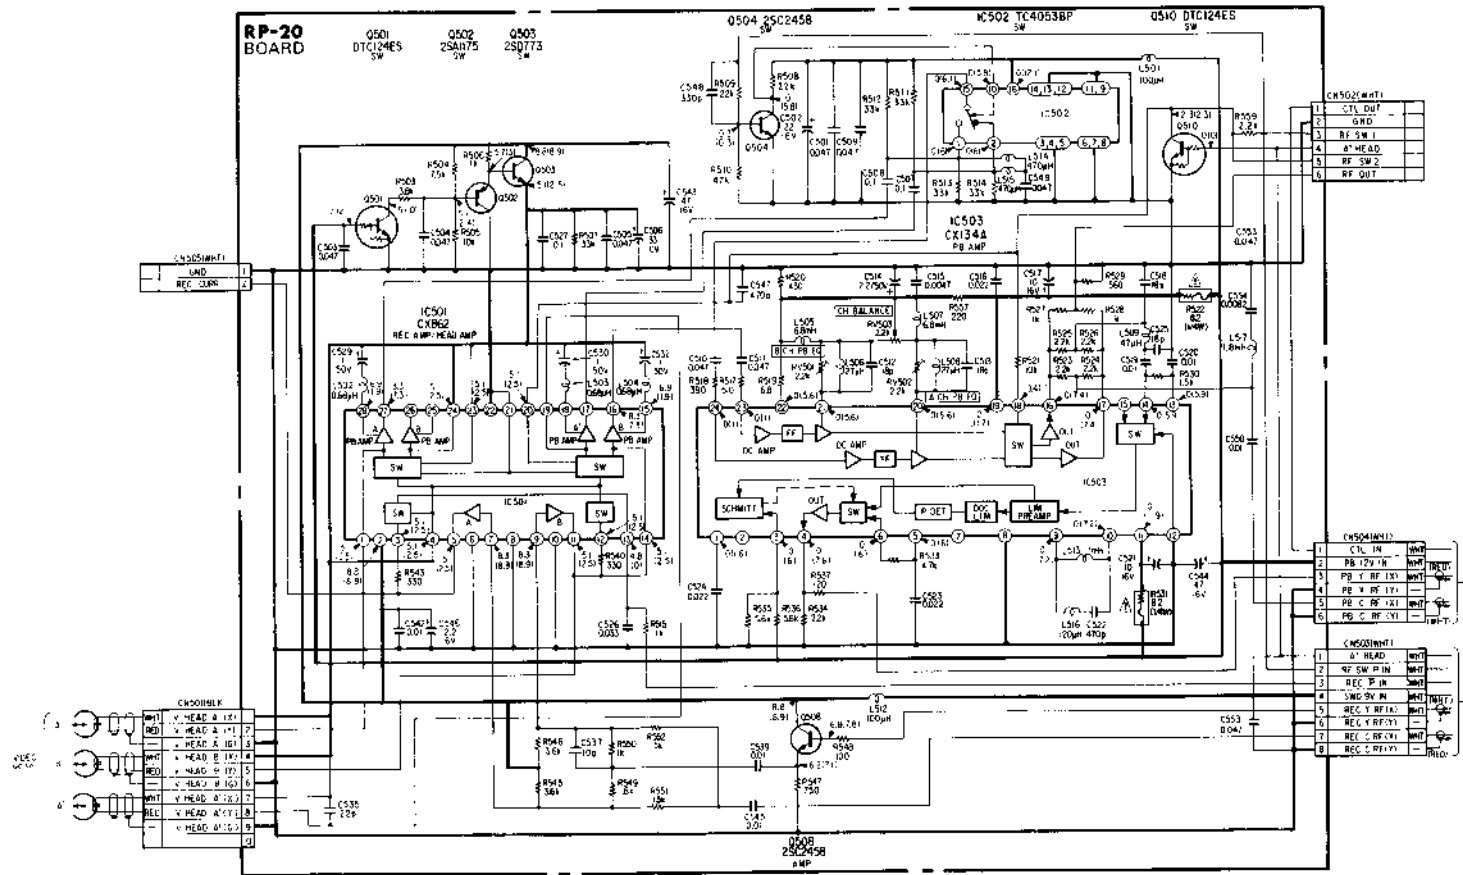


- Note:**
- All resistors are in ohms, 1/6W unless otherwise noted.
 - All capacitors are in μF (p:pF) unless otherwise noted. 50V or less are not indicated except for electrolytic capacitors.
 - All variable and semi-fixed resistors have characteristic curve B, unless otherwise noted.
 - : Nonflammable resistor
 - : Fusible resistor
 - : B+ bus.
 - The voltage value is reference value between the grounding when the color bar signal is received from a color bar generator.
 - The voltage value is measured using a digital tester (10M Ω).

Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

VIDEO VIDEO

15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30

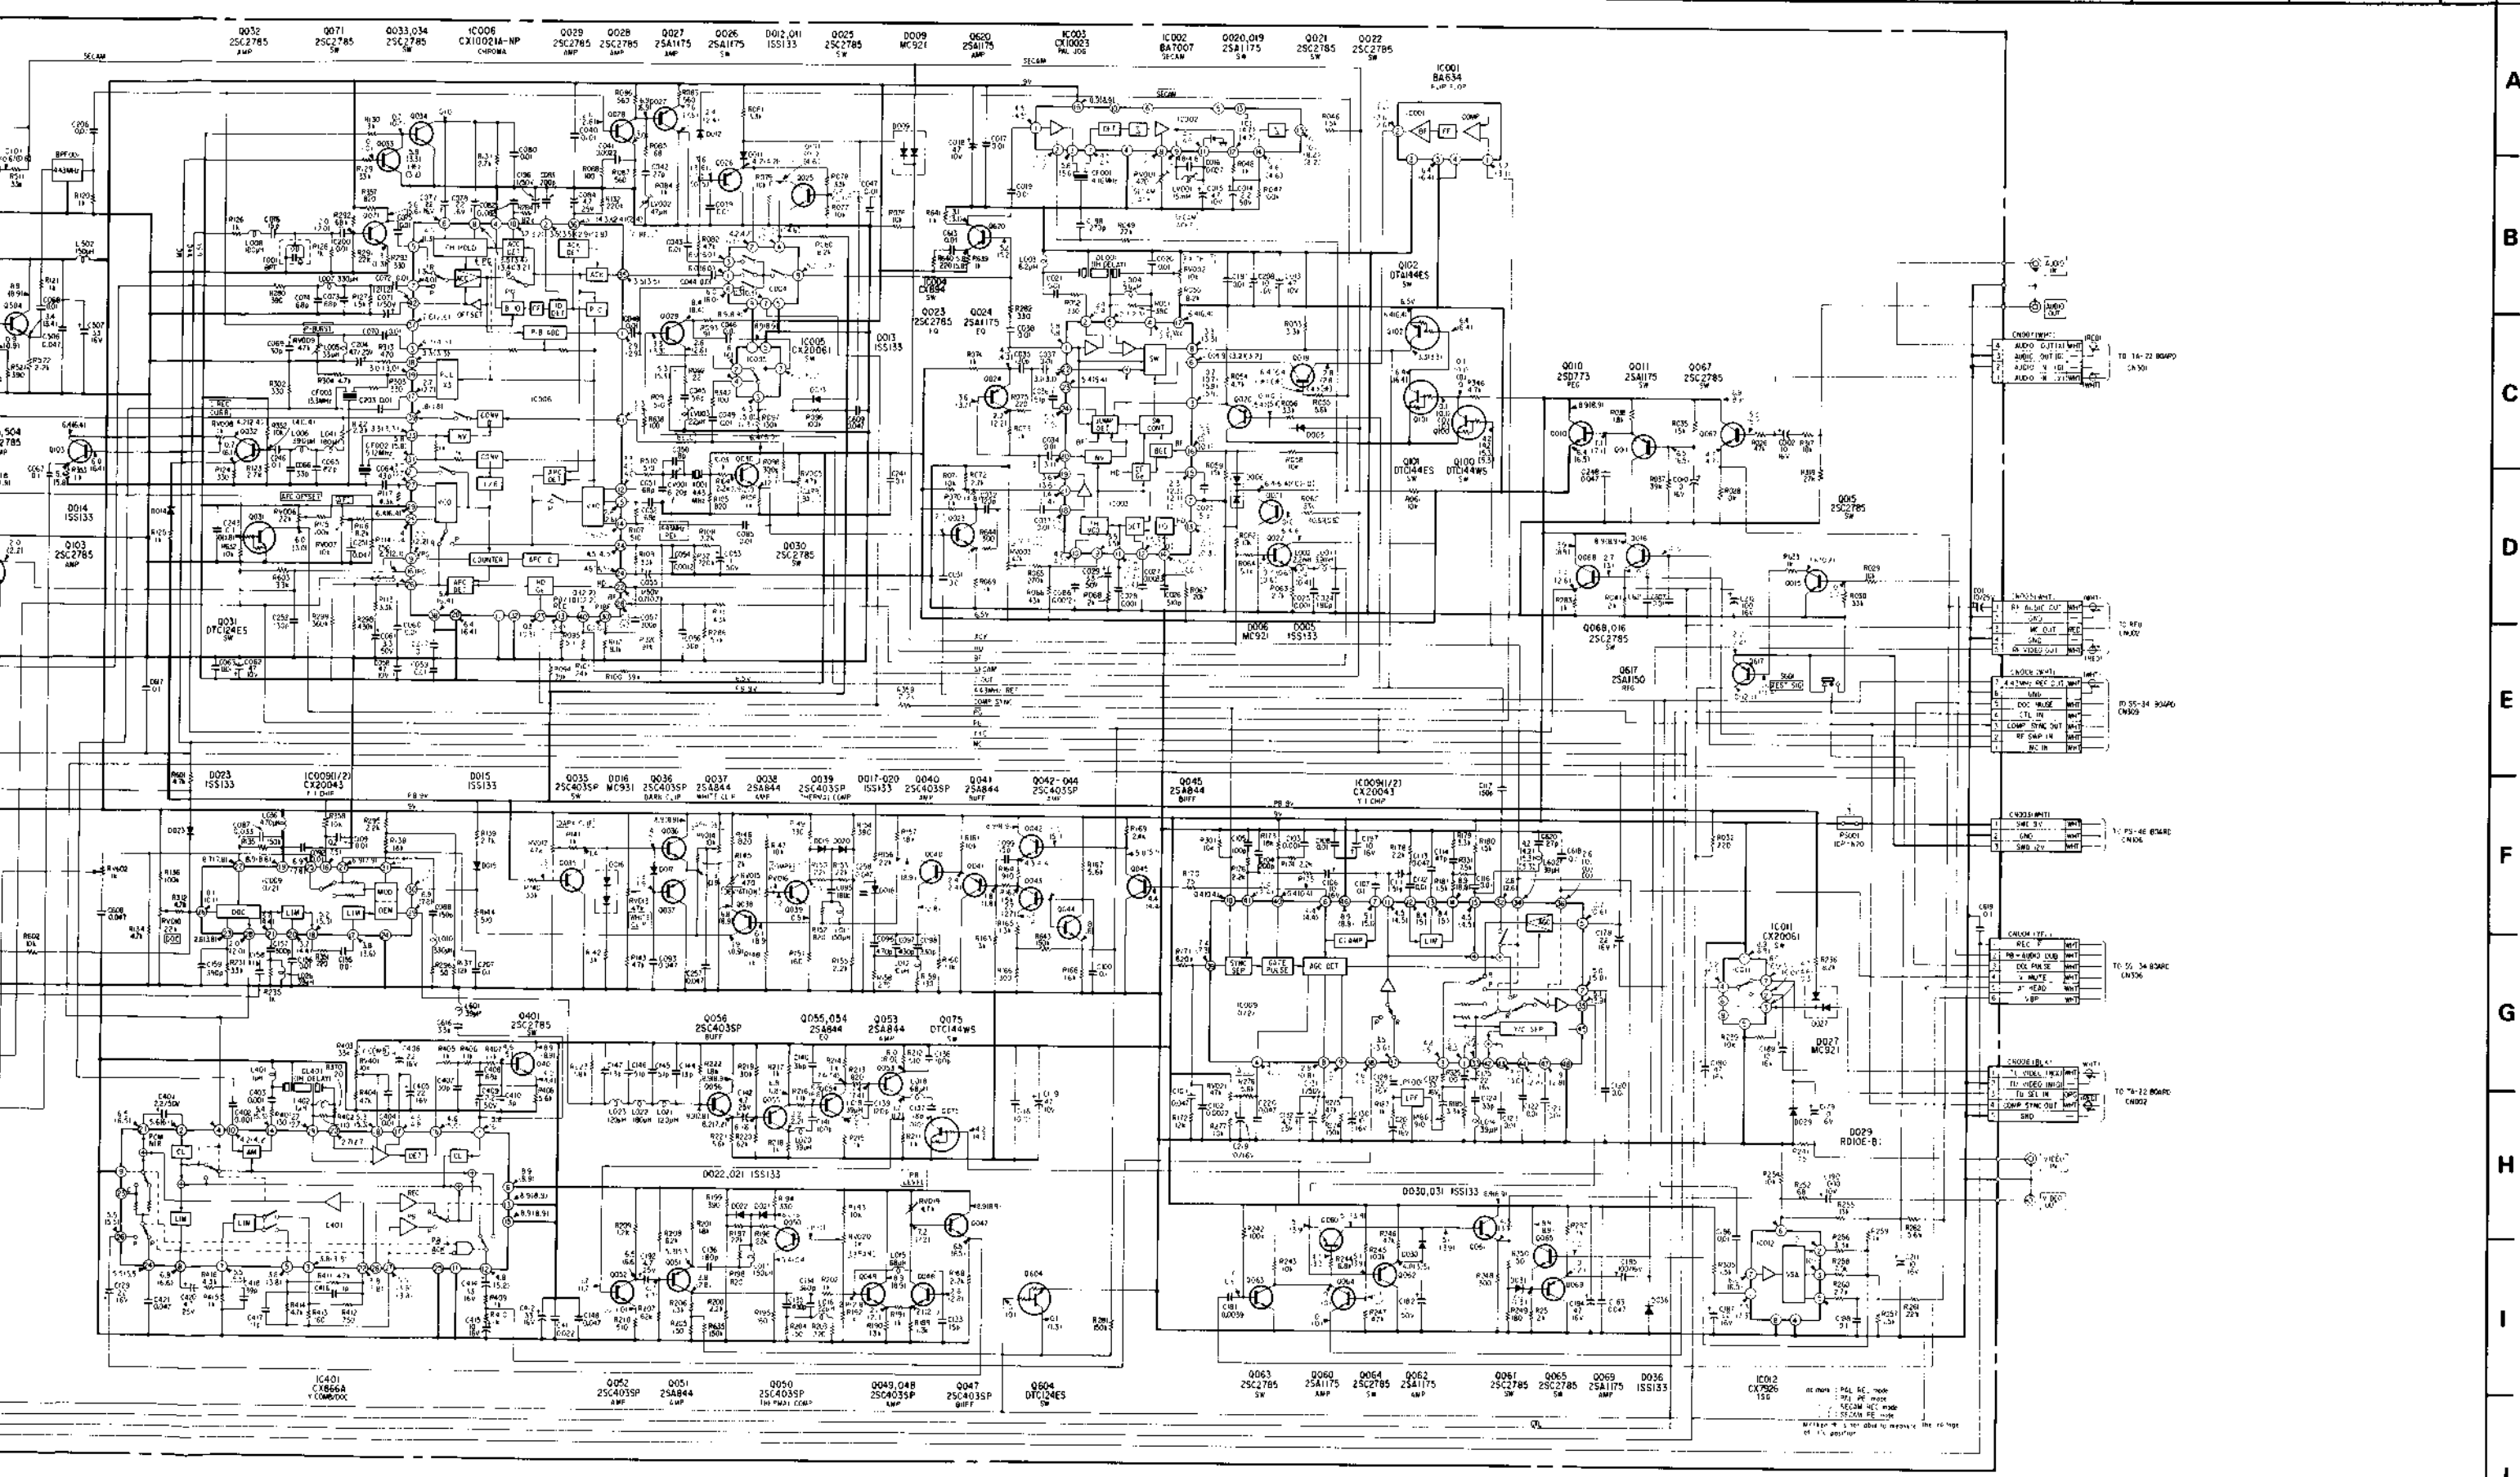

A
B
C
D
E
F
G
H
I
J

SERVO/SYSTEM CONTROL SERVO/SYSTEM CONTROL

4-3. SS-34 (SYSTEM CONTROL, SERVO), RD-20 (ROTATION DETECTOR), RD-21 (ROTATION DETECTOR), LM-8 (LOADING MOTOR), FU-35 (FUNCTION, TRACKING CONTROL), N (INFRARED AMP), CAPSTAN MOTOR (CAPSTAN MOTOR), R. STATOR BOARD



- Ref. No. SS-34, ES-3, RD-20, RD-21 BOARD : 4000 series, LM-8 BOARD : 9000 series, FU-35 BOARD : 8000 series, CAPSTAN MOTOR BOARD : 8200 series, R. STATOR BOARD : 8100 series -

- Note:**
- ○ : indicates a lead wire mounted on the component side.
 - ● : indicates a lead wire mounted on the printed side.
 - : soldering side
 - : B+ pattern
 - : component side



When indicating parts by reference number, please include the board name.

A
B
C
D
E
F
G
H
I
J





CAPSTAN MOTOR BOARD

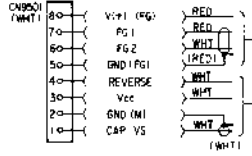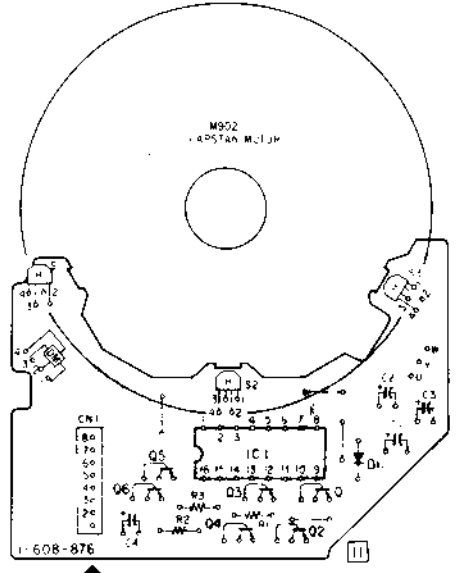





R. STATOR BOARD

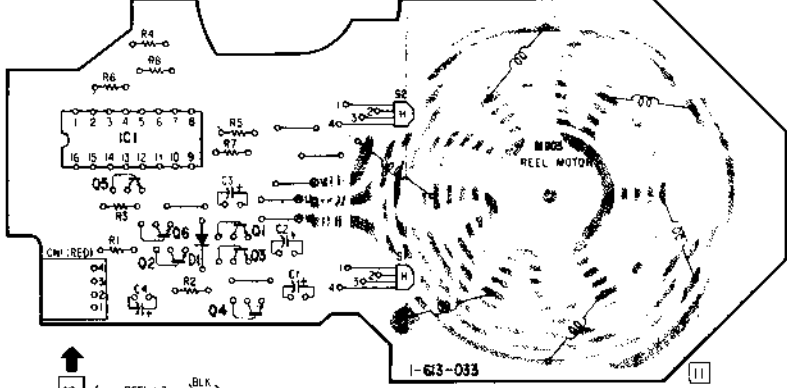



FU-35 BOARD

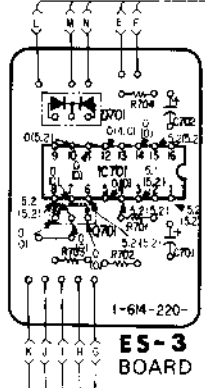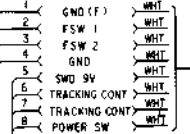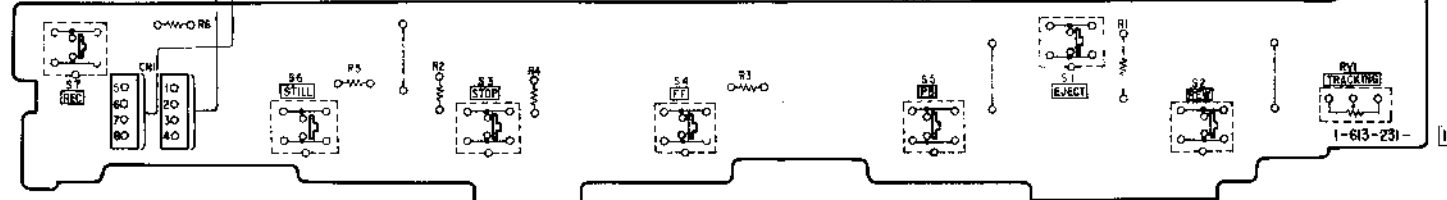


N BOARD

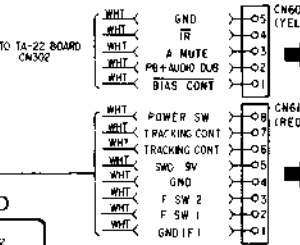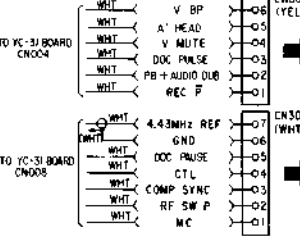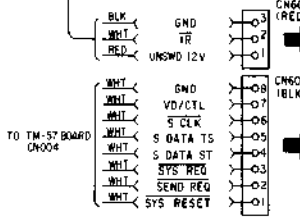



RD-20 BOARD





RD-21 BOARD



LM-8 BOARD

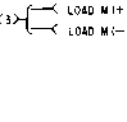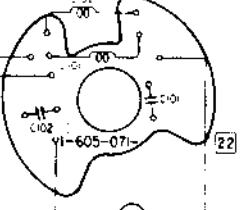

SS-34 BOARD

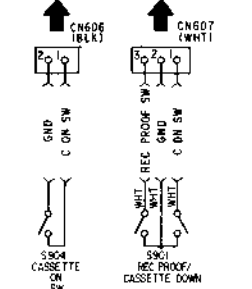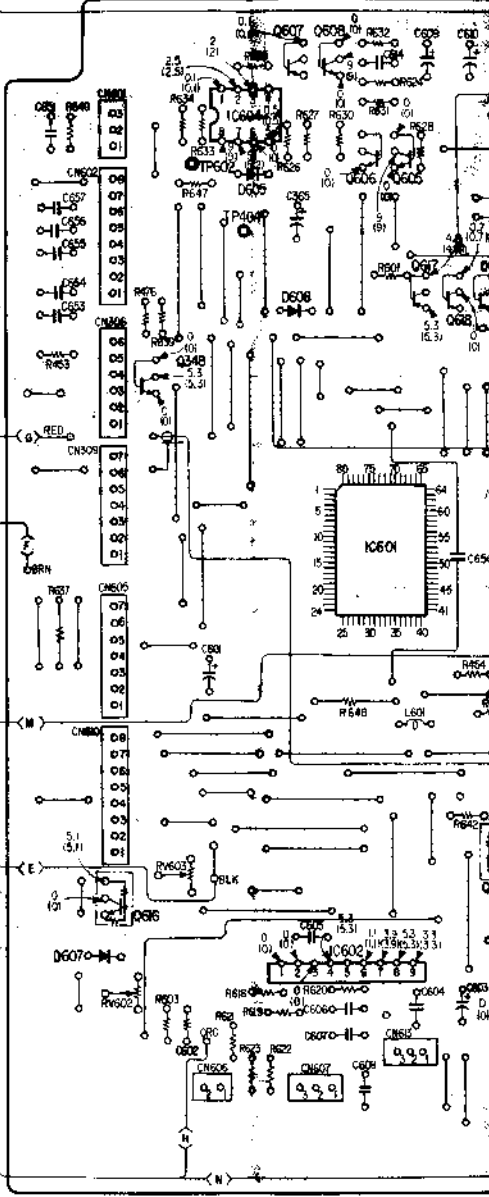


SERVO/SYSTEM CONTROL SERVO/SYSTEM CONTROL

DR (CAPSTAN MOTOR), R. STATOR (REEL MOTOR), ES-3 (BRAKE CONTROL) PRINTED WIRING BOARDS

15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30



SS-34 BOARD

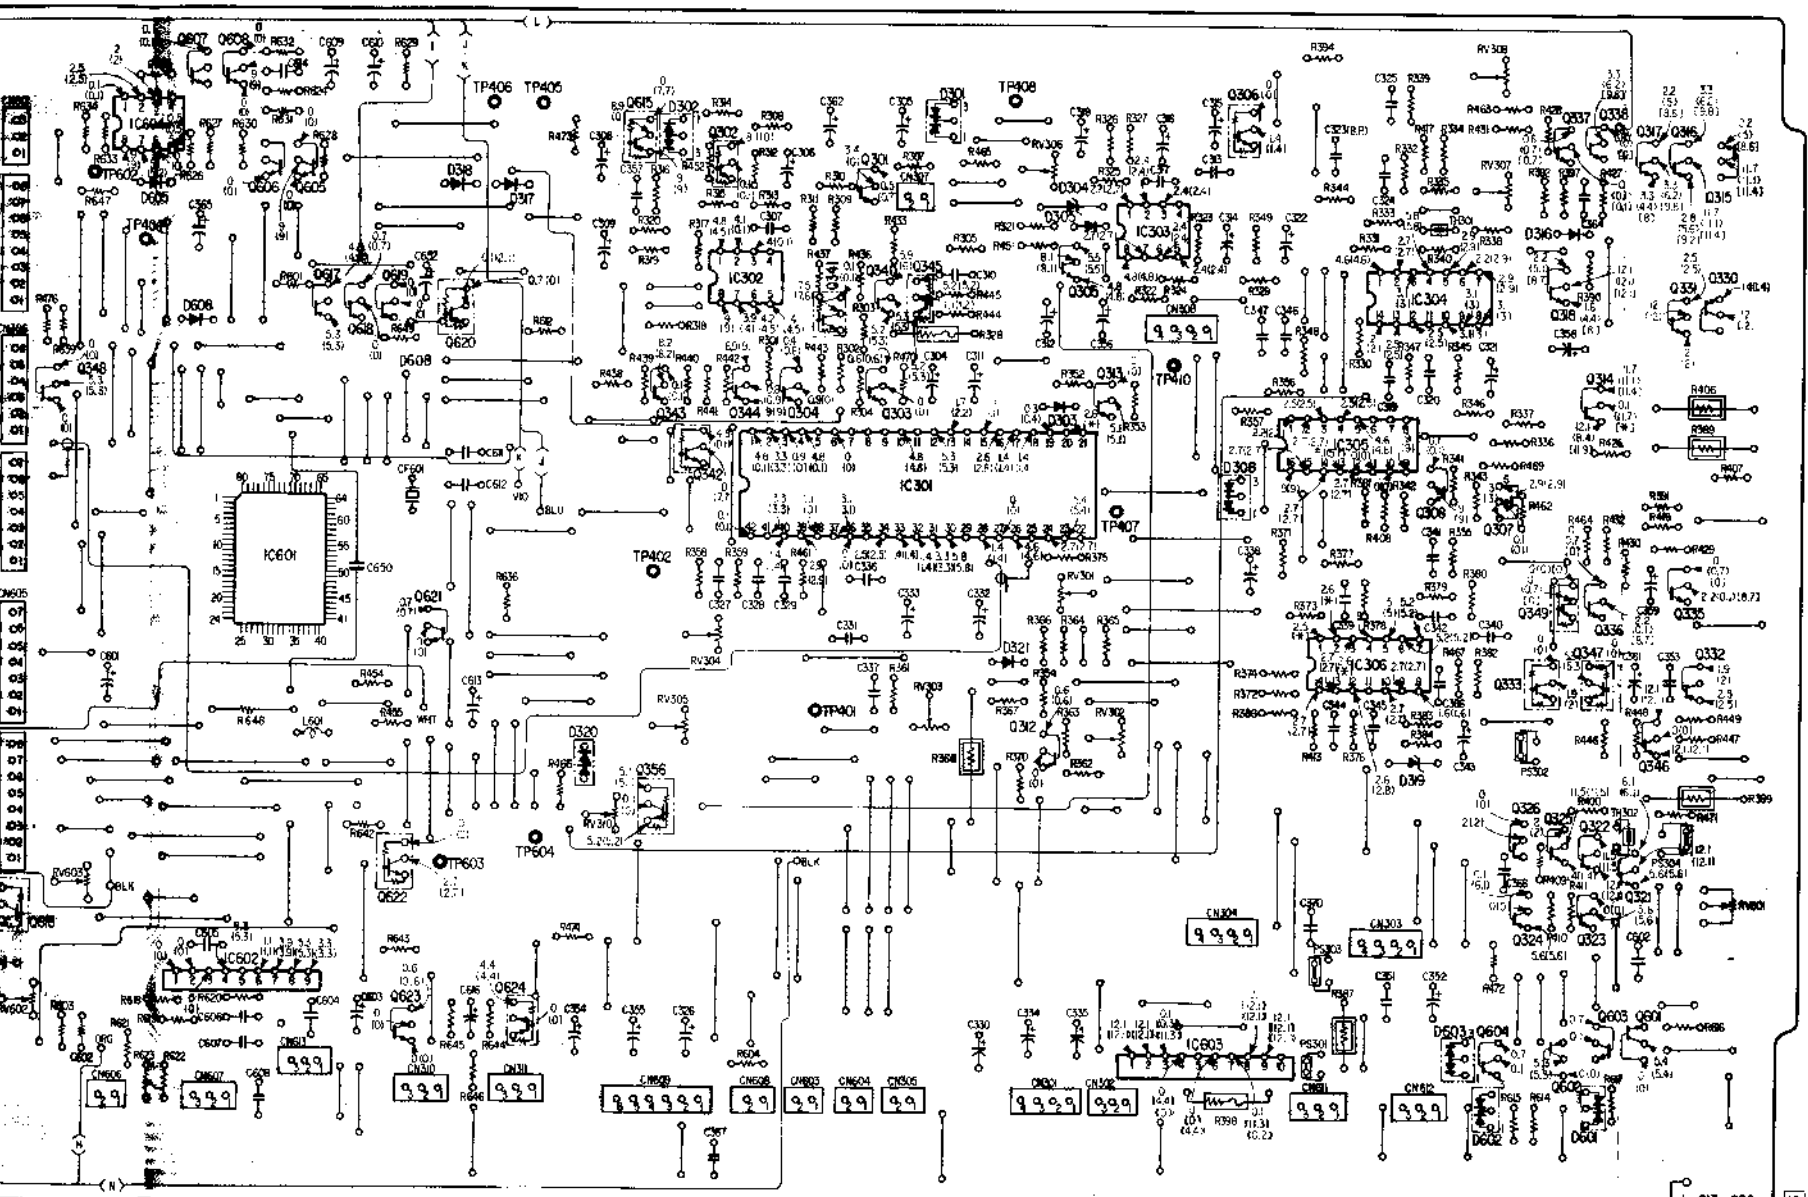

1. 1 mode
 2. 2 mode
 3. CLK mode
 4. FF/REV mode
 5. LOADING + READING mode
 6. EJECT mode
 7. REV mode
 Marked with a dot indicates to measure the voltage at its position

Q, IC	D	ADJ, TP
607, 608		
IC604 606, 605	RV308 TP408 TP406, TP405	
306	301	
615 337, 338 317, 316 302, 303, 305	RV306 RV307	
IC303	318, 317 304, 316 305	TP602 TP404
305		
IC302, 345 616, 620, 630, 634 617, 618, 318, 333, 341, 331	608	
315 343, 344 342	303	TP410
348 IC305		
308, 307 IC301	308	TP407
IC601	335 349, 336	TP402 RV301
621		
IC306 333, 332 347	321	RV304 TP401
346		
312	320	RV303 RV302
356 326, 322 325		
622	321	TP310 TP604 RV604
324	323	
616	607	
IC602		
623, 624 603, 601 604, 602 IC603	603	RV603 RV602
	601 602	

SS-34 BOARD (SERVO/SYSTEM CONTROL)

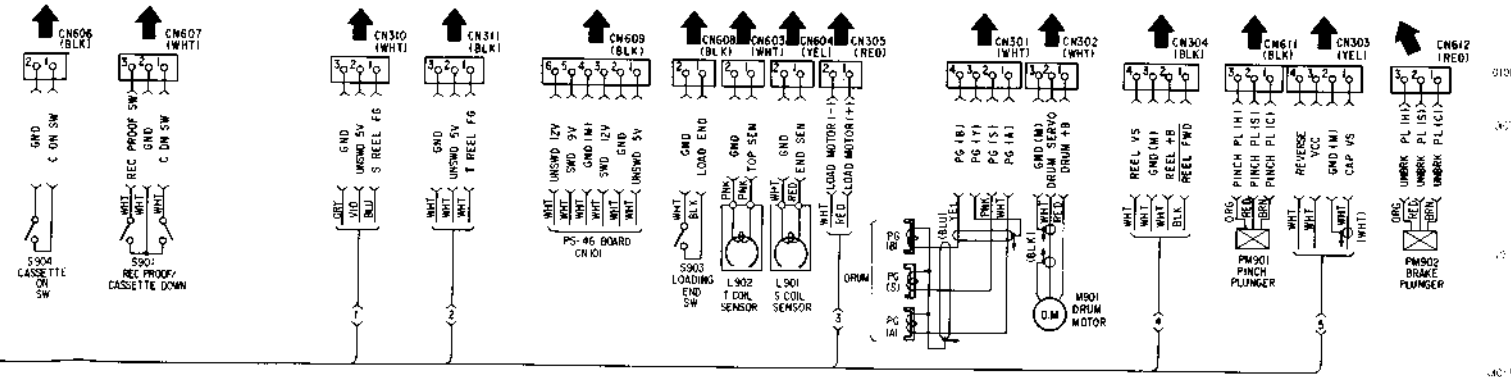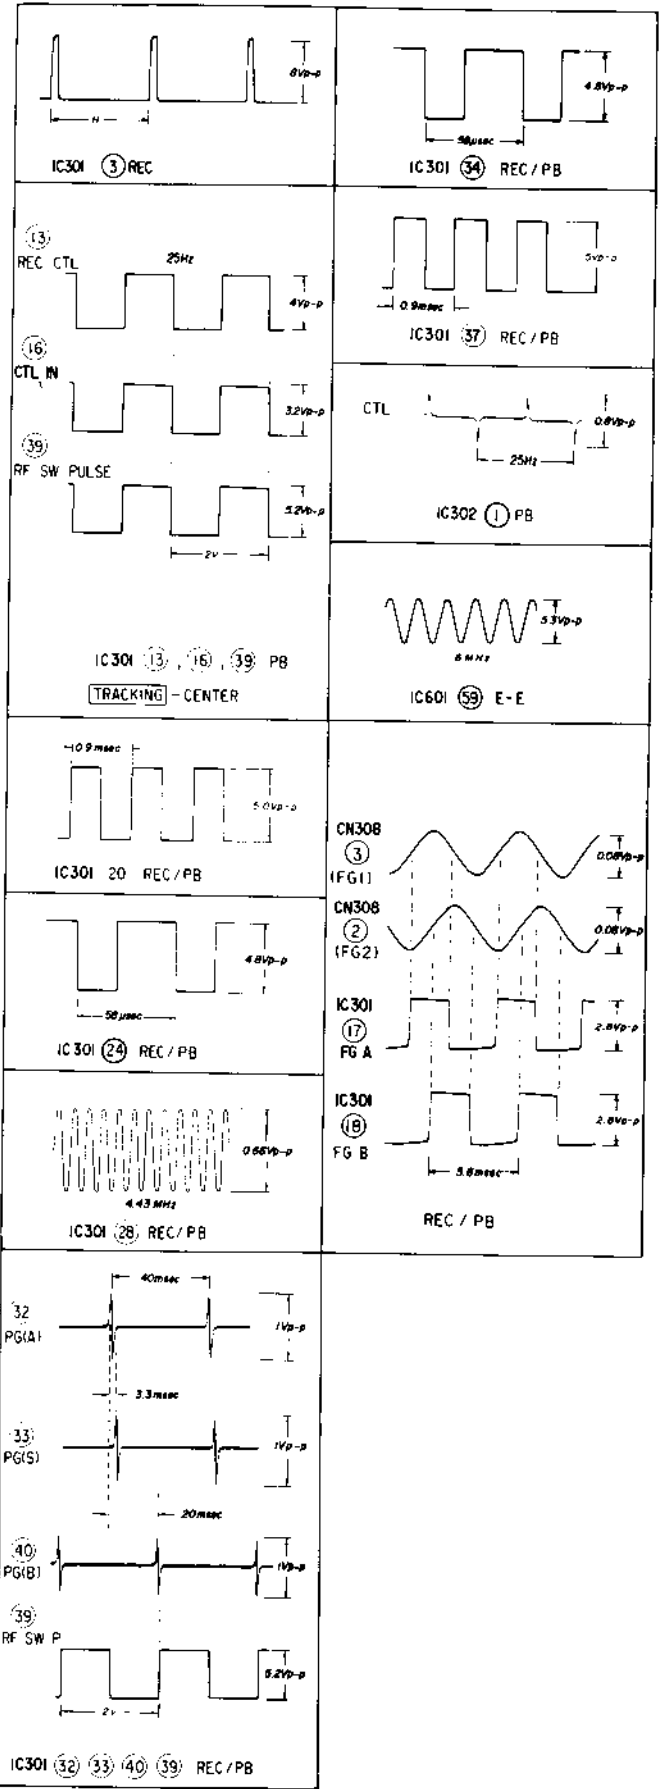



SERVO/SYSTEM CONTROL SERVO/SYSTEM CONTROL

SS-34 (SYSTEM CONTROL, SERVO), RD-20 (ROTATION DETECTOR), RD-21 (ROTATION DETECTOR), LM-8 (LOADING MOTOR), FU-35 (FUNCTION, TRACKING CONTROL), N (INFRARED AMP), CAPSTAN MOTOR (CAPSTAN MOTOR), R. STATOR (R. STATOR)


— Ref. No. SS-34, ES-3, RD-20, RD-21 BOARD : 4000 series, LM-8 BOARD : 9000 series, FU-35 BOARD : 8000 series, CAPSTAN MOTOR BOARD : 8200 series, R. STATOR BOARD : 8100 series —

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

A
B
C
D
E
F
G
H
I
J

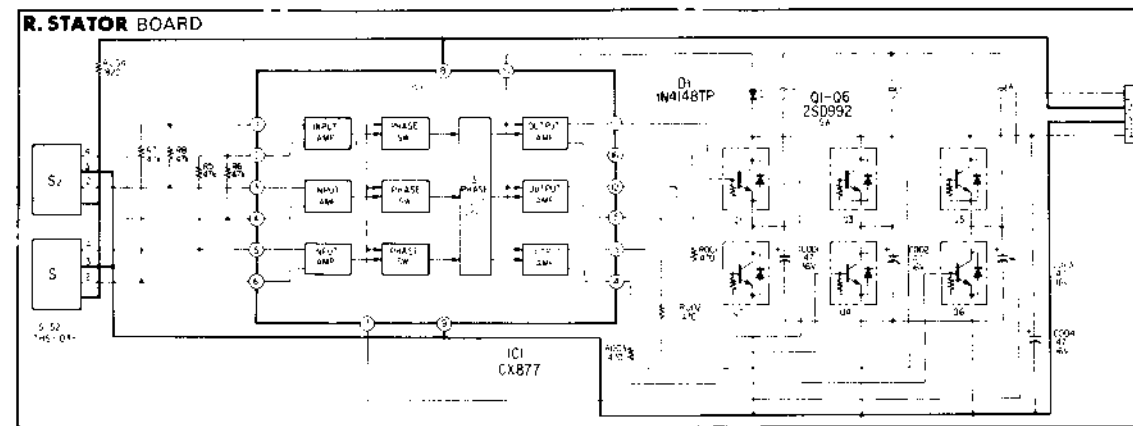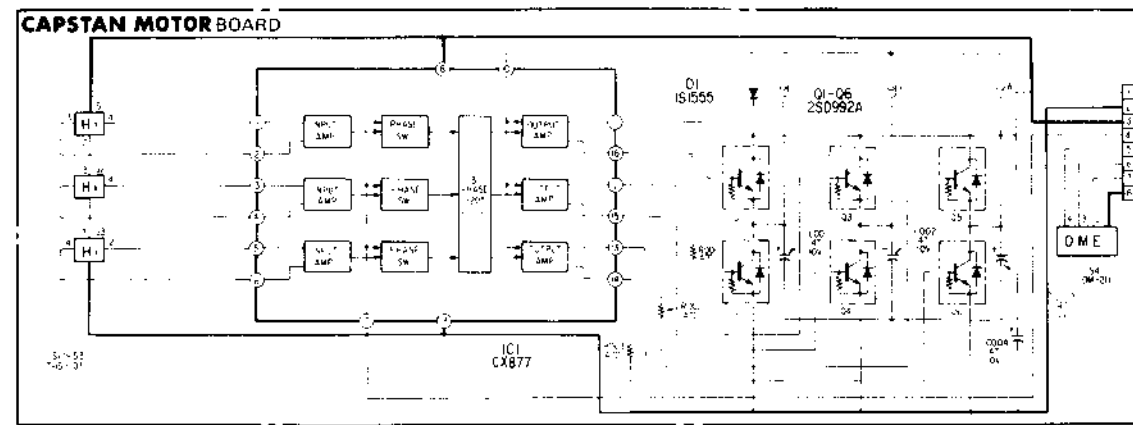

SS-34 BOARD

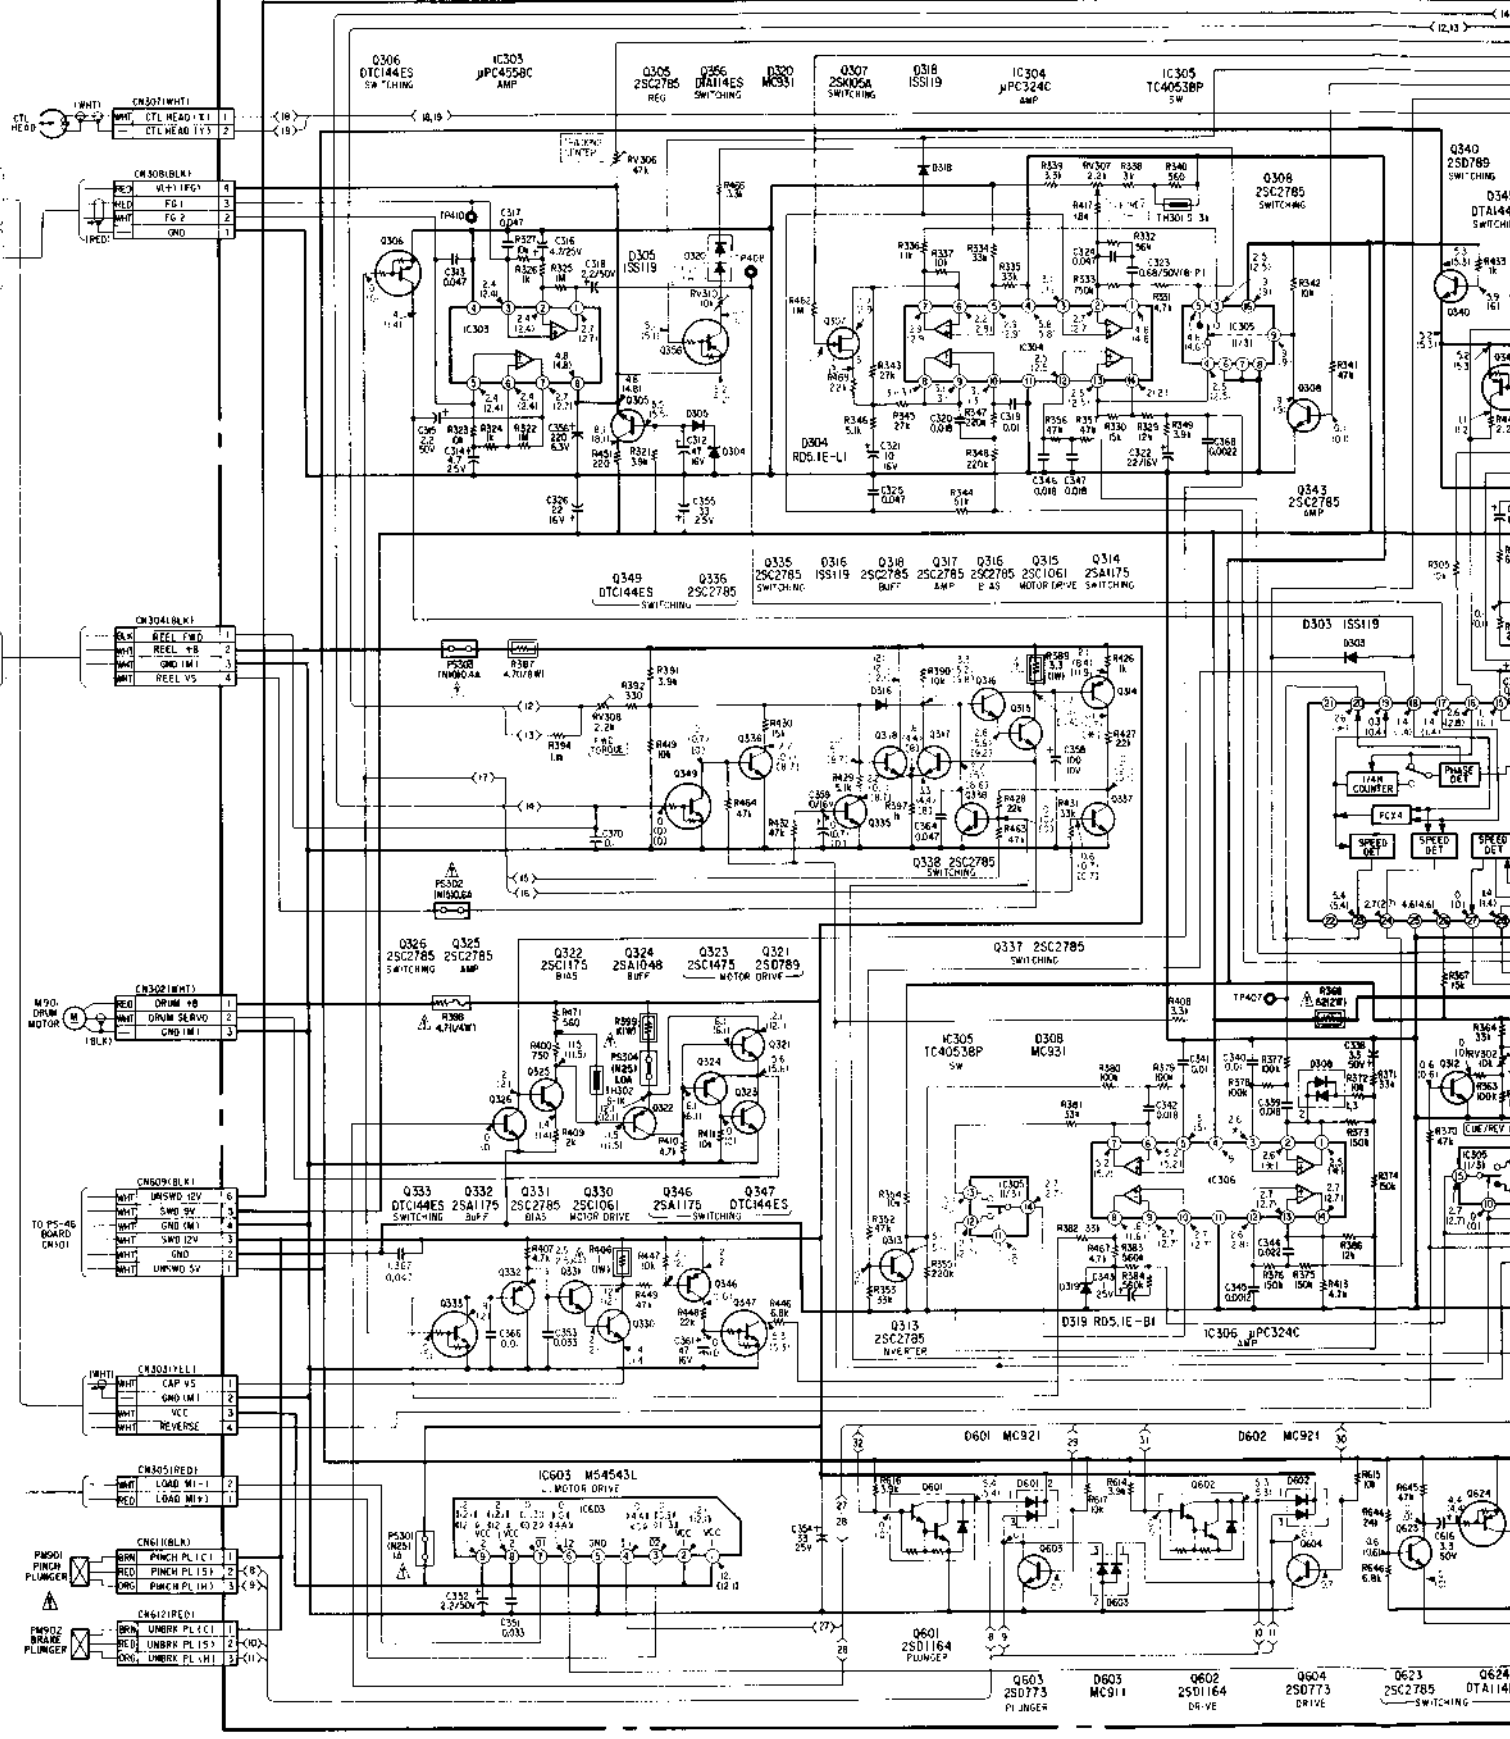


- Note:**
- All resistors are in ohms, 1/6W unless otherwise noted.
 - All capacitors are in μ F (p:pF) unless otherwise noted. 50V or less are not indicated except for electrolytic capacitors.
 - All variable and semi fixed resistors have characteristic curve B, unless otherwise noted.
 - : Nonflammable resistor
 - : Fusible resistor
 - : B+ bus.
 - The voltage value is reference value between the grounding when the color bar signal is received from a color bar generator.
 - The voltage value is measured using a digital tester (10M Ω).

Note: The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.


When indicating parts by reference number, please include the board name.

LM-8 BOARD

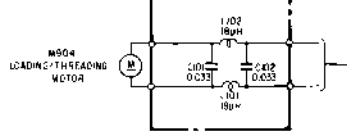

TAN MOTOR), R. STATOR (REEL MOTOR), ES-3 (BRAKE CONTROL) SCHEMATIC DIAGRAM

15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30


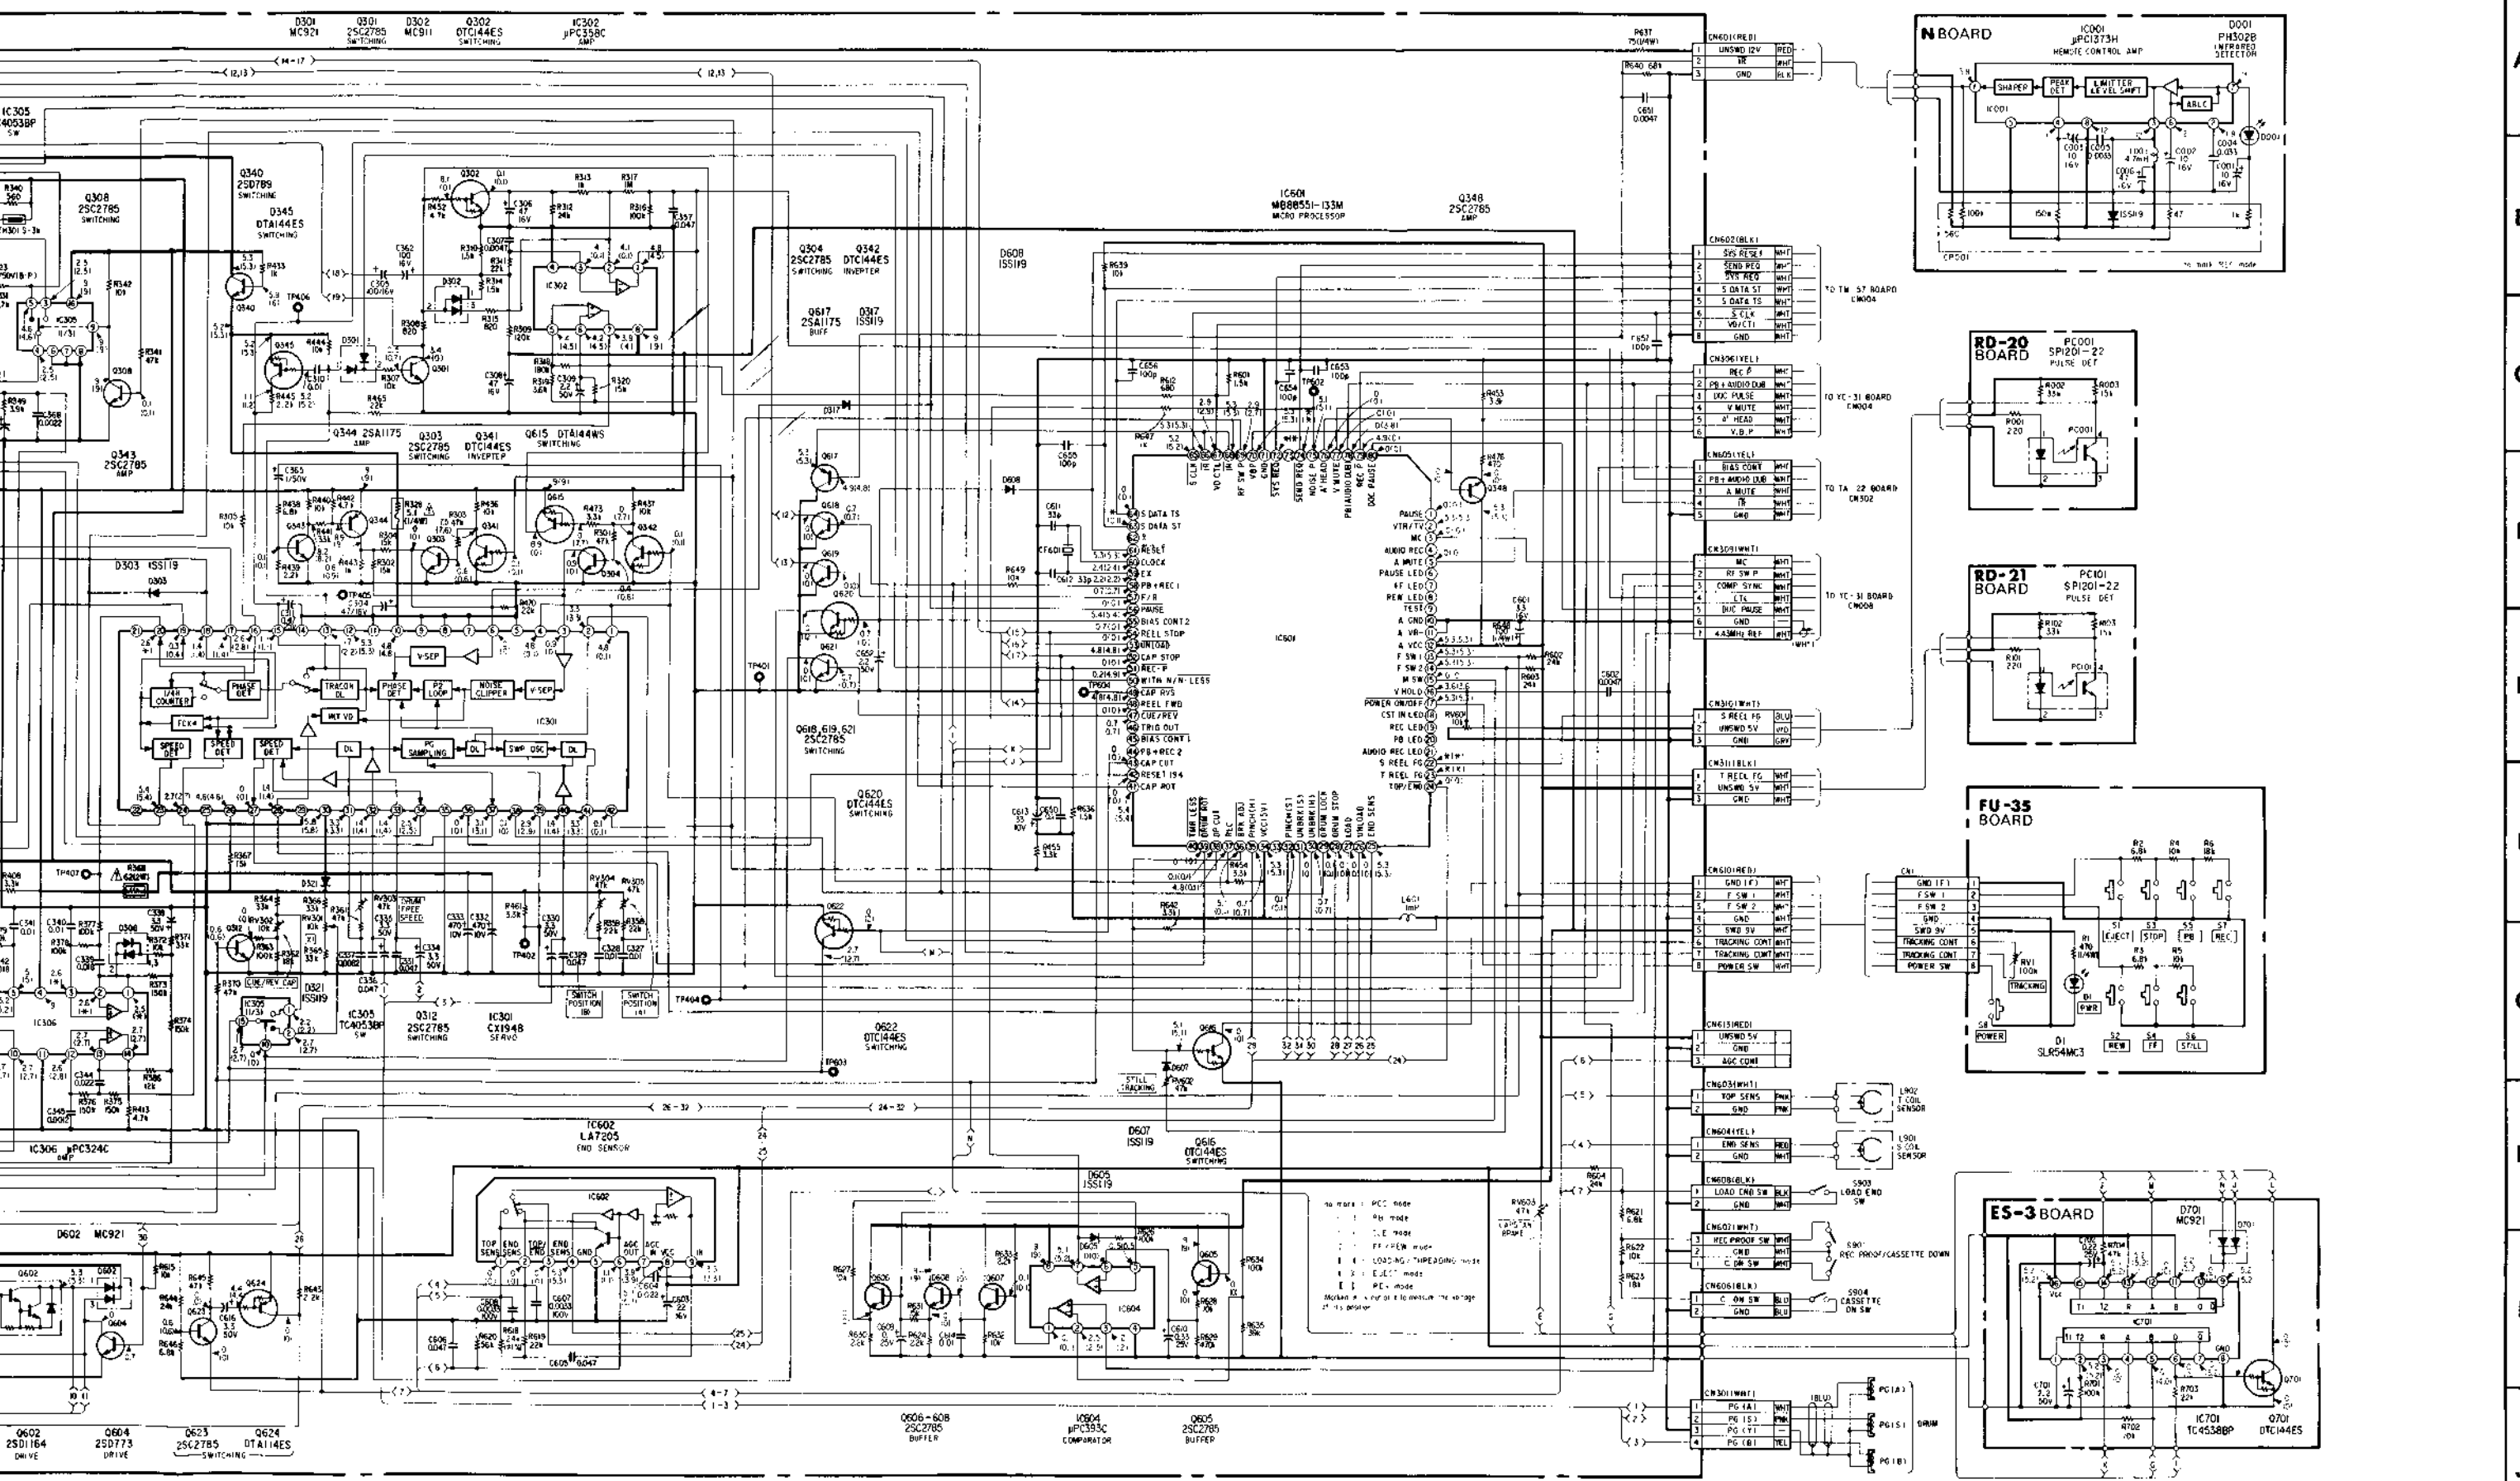


A
B
C
D
E
F
G
H
I
J

TUNER/TIMER TUNER/TIMER









4-4. TA-22 (VIF, AFT, SIF, AUTO PROGRAM AUDIO), MT-10 (TUNER), TM-57 (TIMER INDICATOR), TM-70 (SWITCH) PRINTED WIRING BOARDS

- Ref. No. TA-22, MT-20 BOARD : 5000 series, TM-57, TM-70 BOARD : 6000 series -

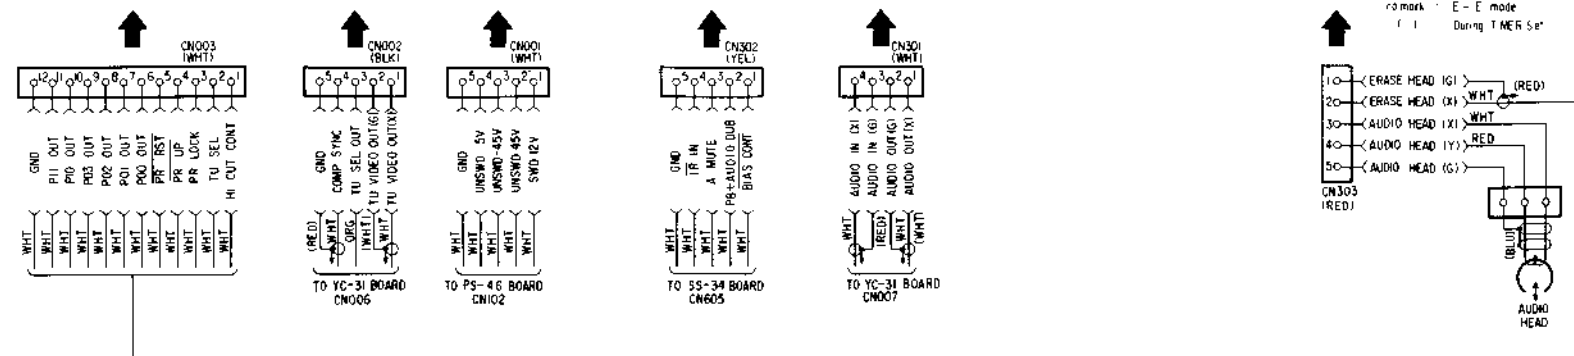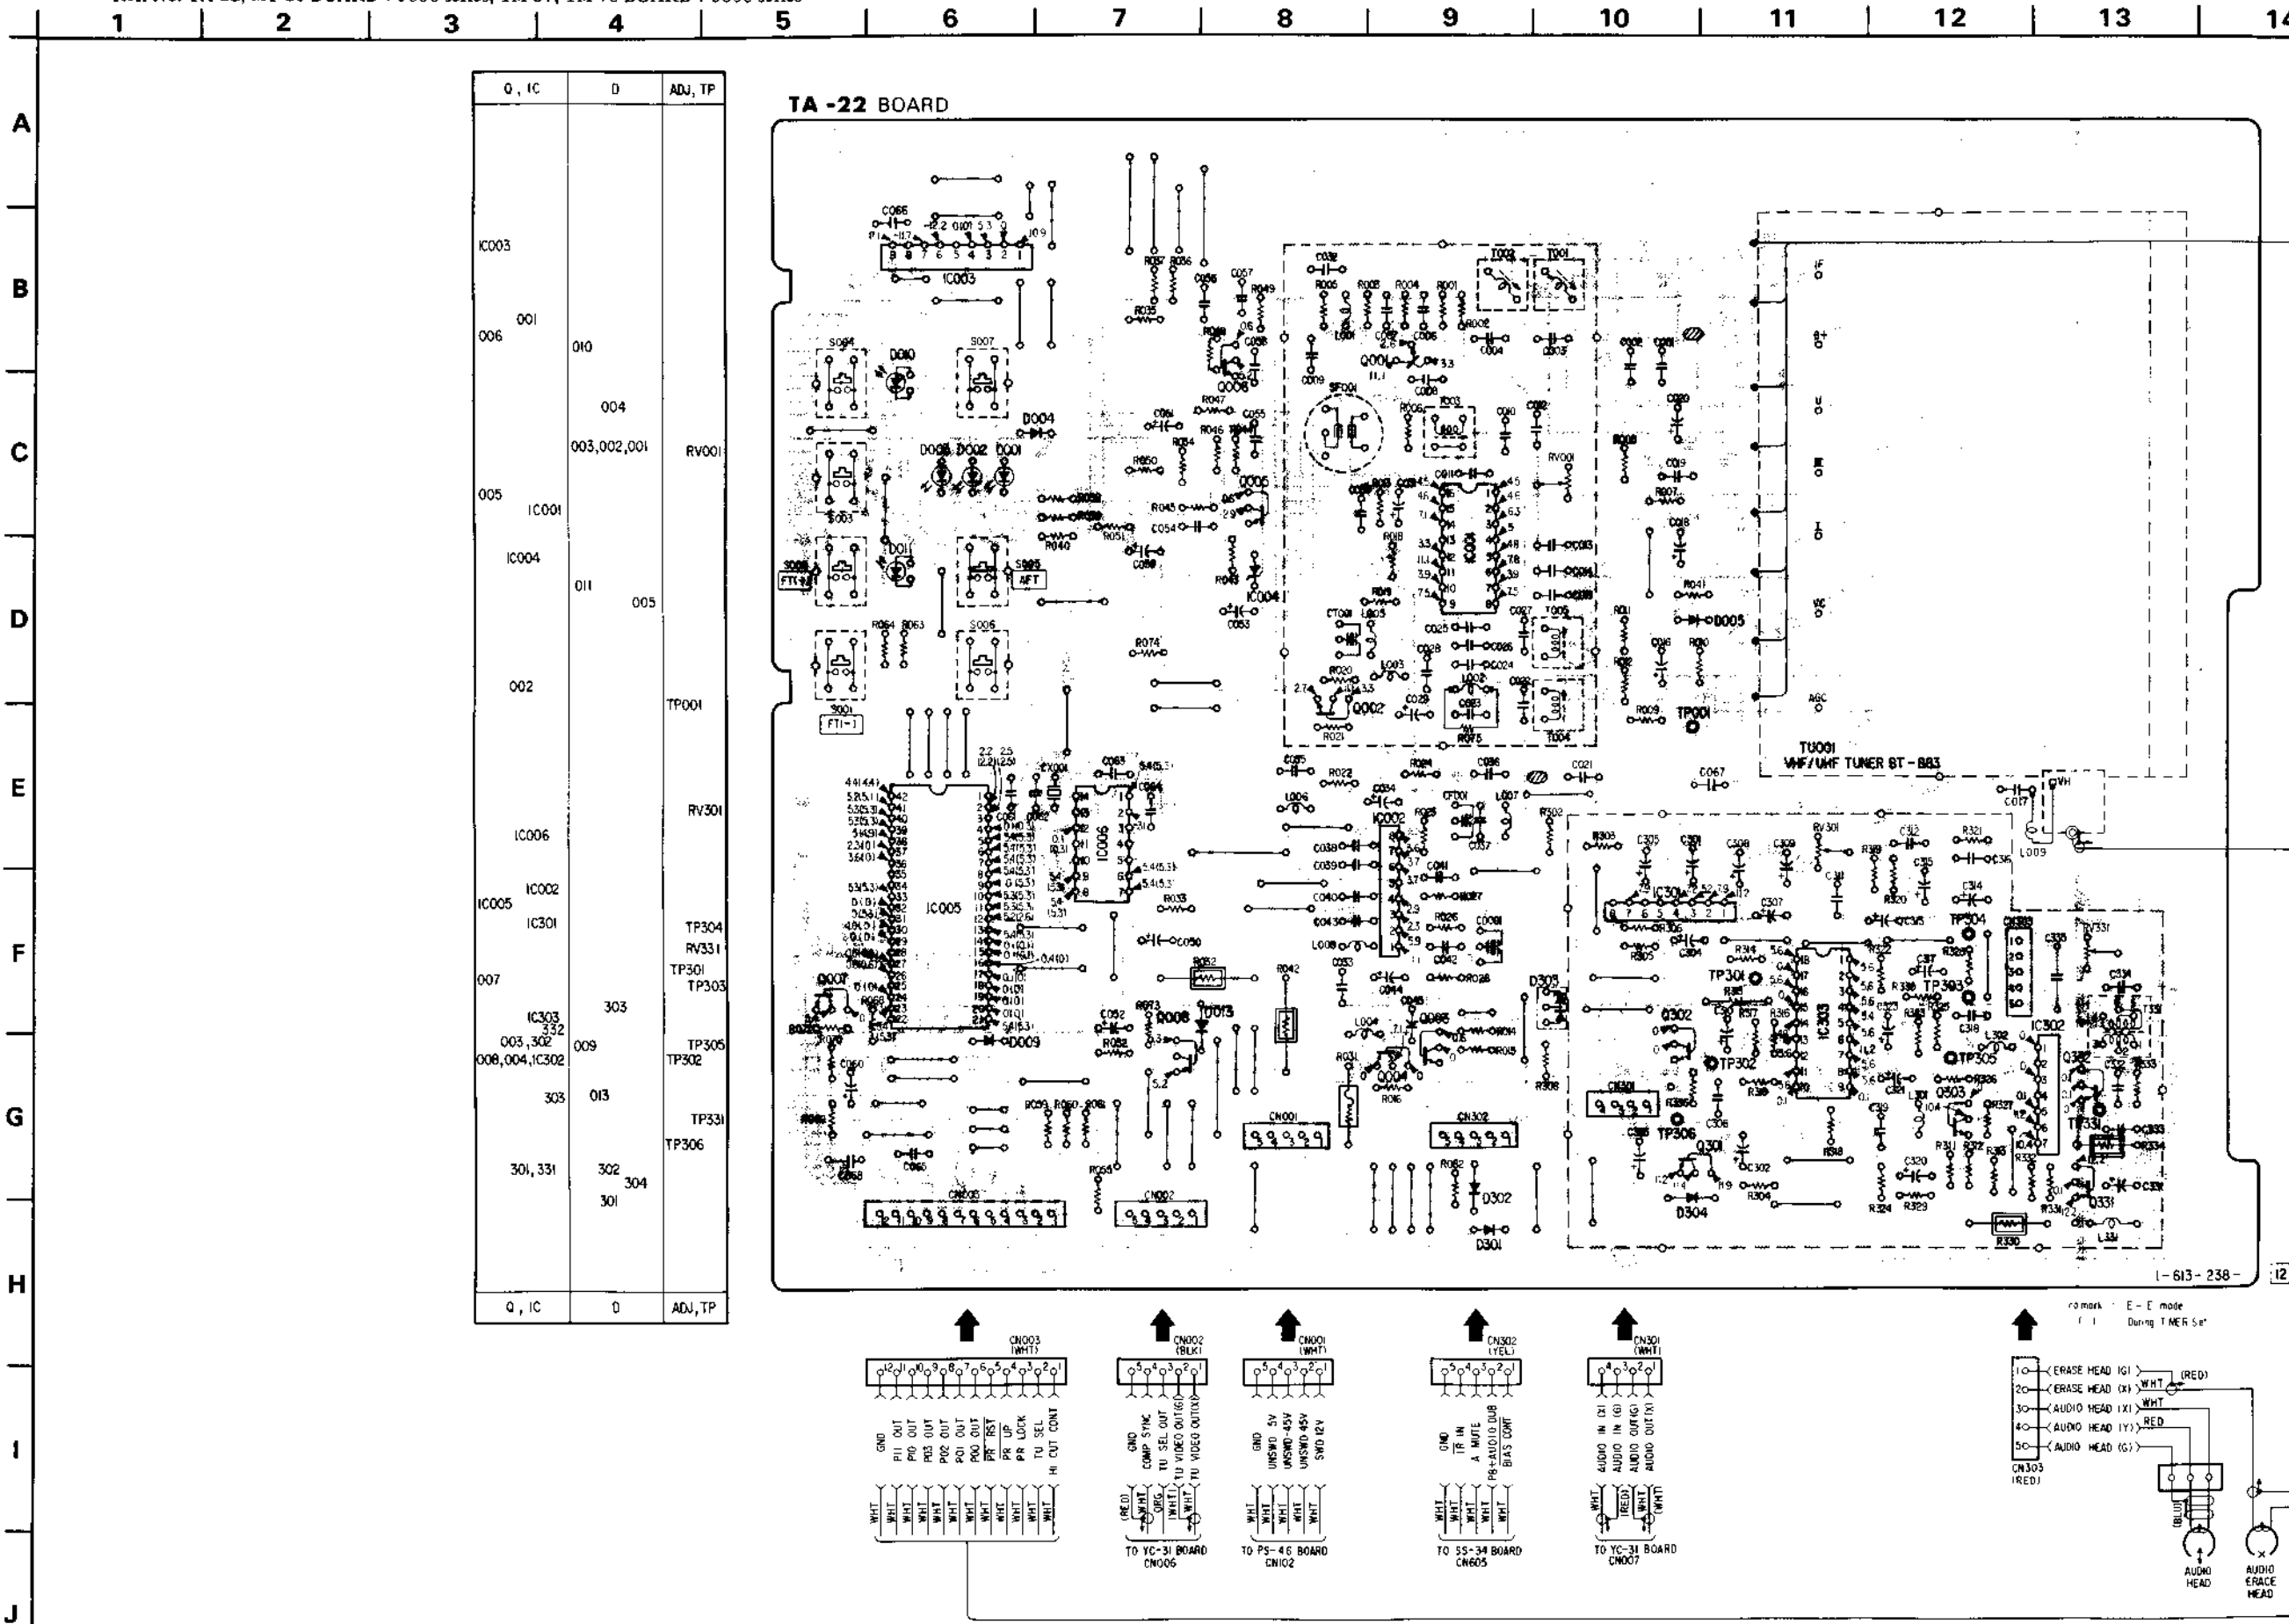

TUNER/TIMER TUNER/TIMER

12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28

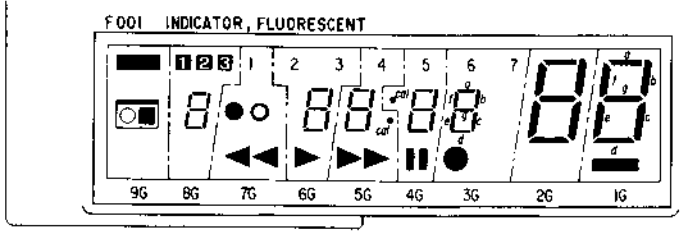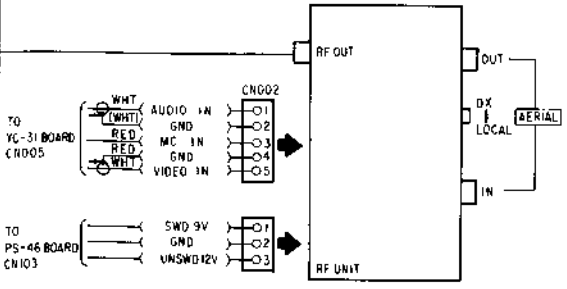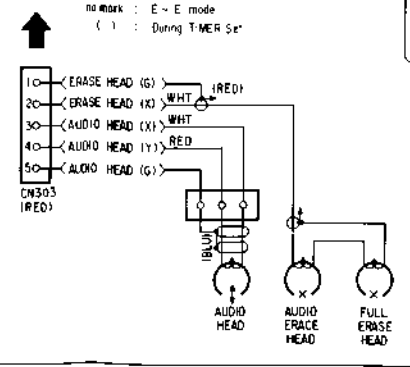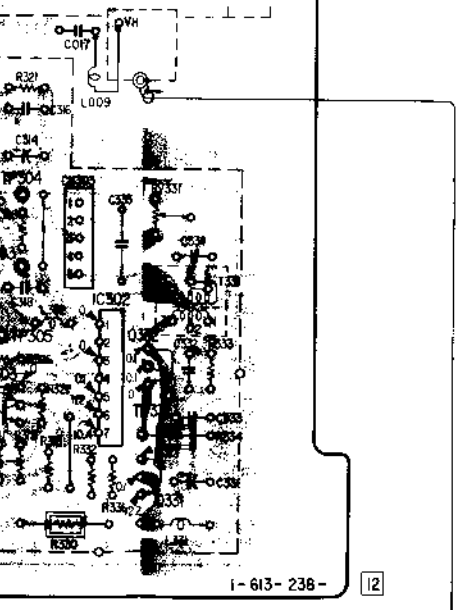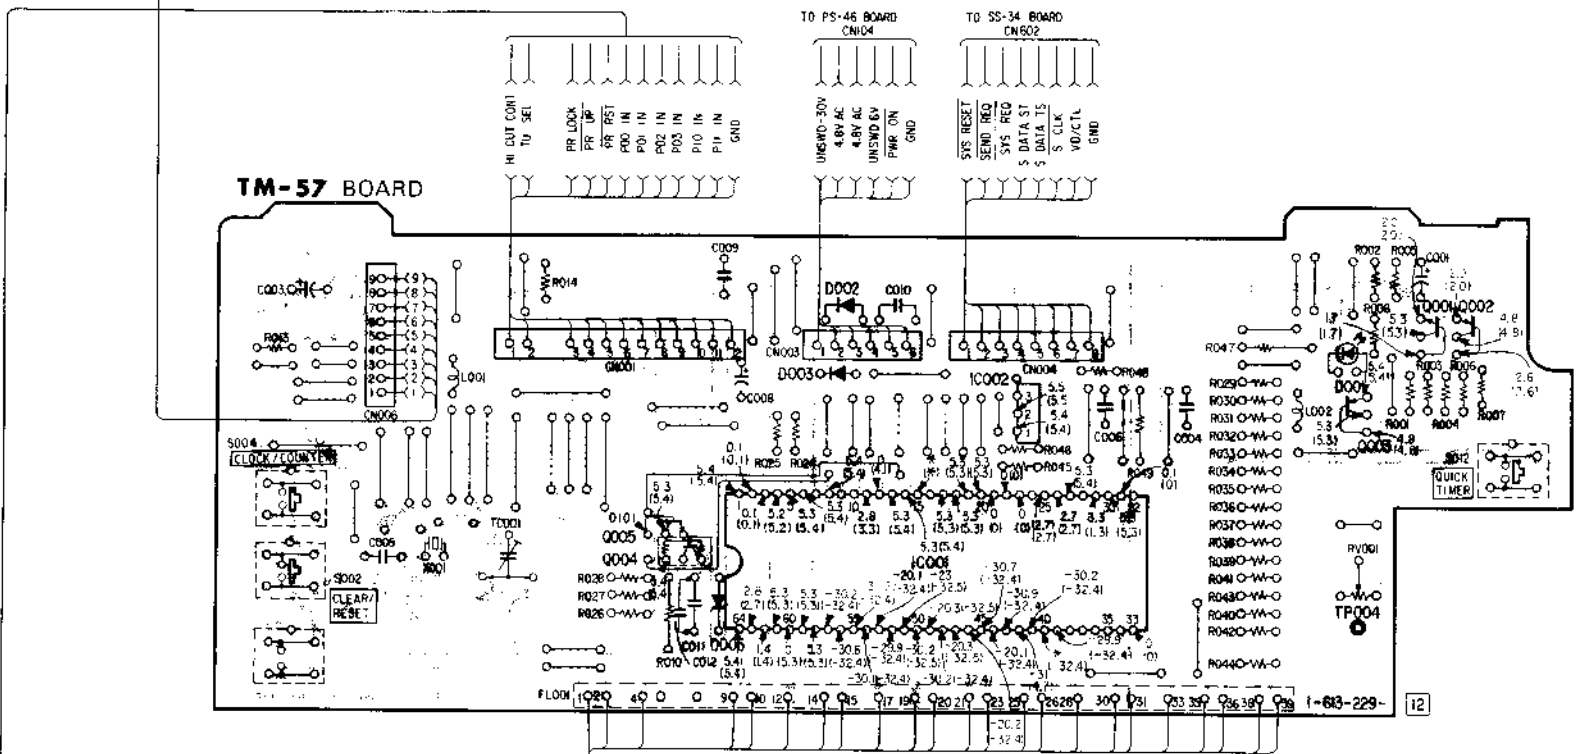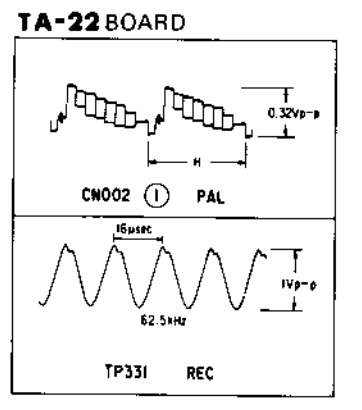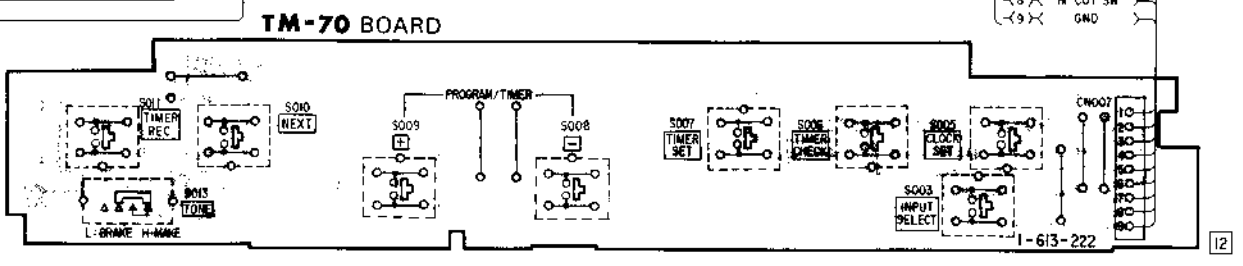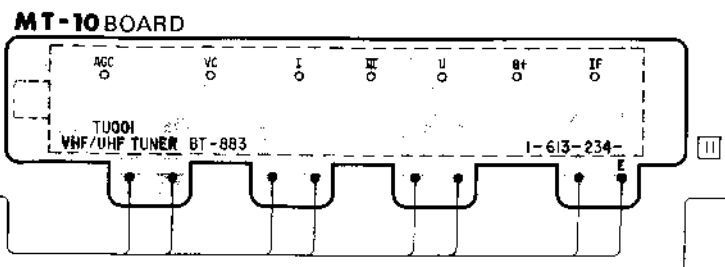

Note: Marked X is not able to measure the voltage of its position.

- Note:**
- : indicates a lead wire mounted on the component side.
 - : indicates a lead wire mounted on the printed side.
 - ⊙ : soldering side
 - ⊙ : B+ pattern


When indicating parts by reference number, please include the board name.

A
B
C
D
E
F
G
H
I
J

TUNER/TIMER TUNER/TIMER

TA-22 (VIF, AFT, SIF, AUTO PROGRAM AUDIO), MT-10 (TUNER), TM-57 (TIMER INDICATOR), TM-70 (SWITCH) SCHEMATIC DIAGRAM

— Ref. No. TA-22, MT-20 BOARD : 5000 series, TM-57, TM-70 BOARD : 6000 series —


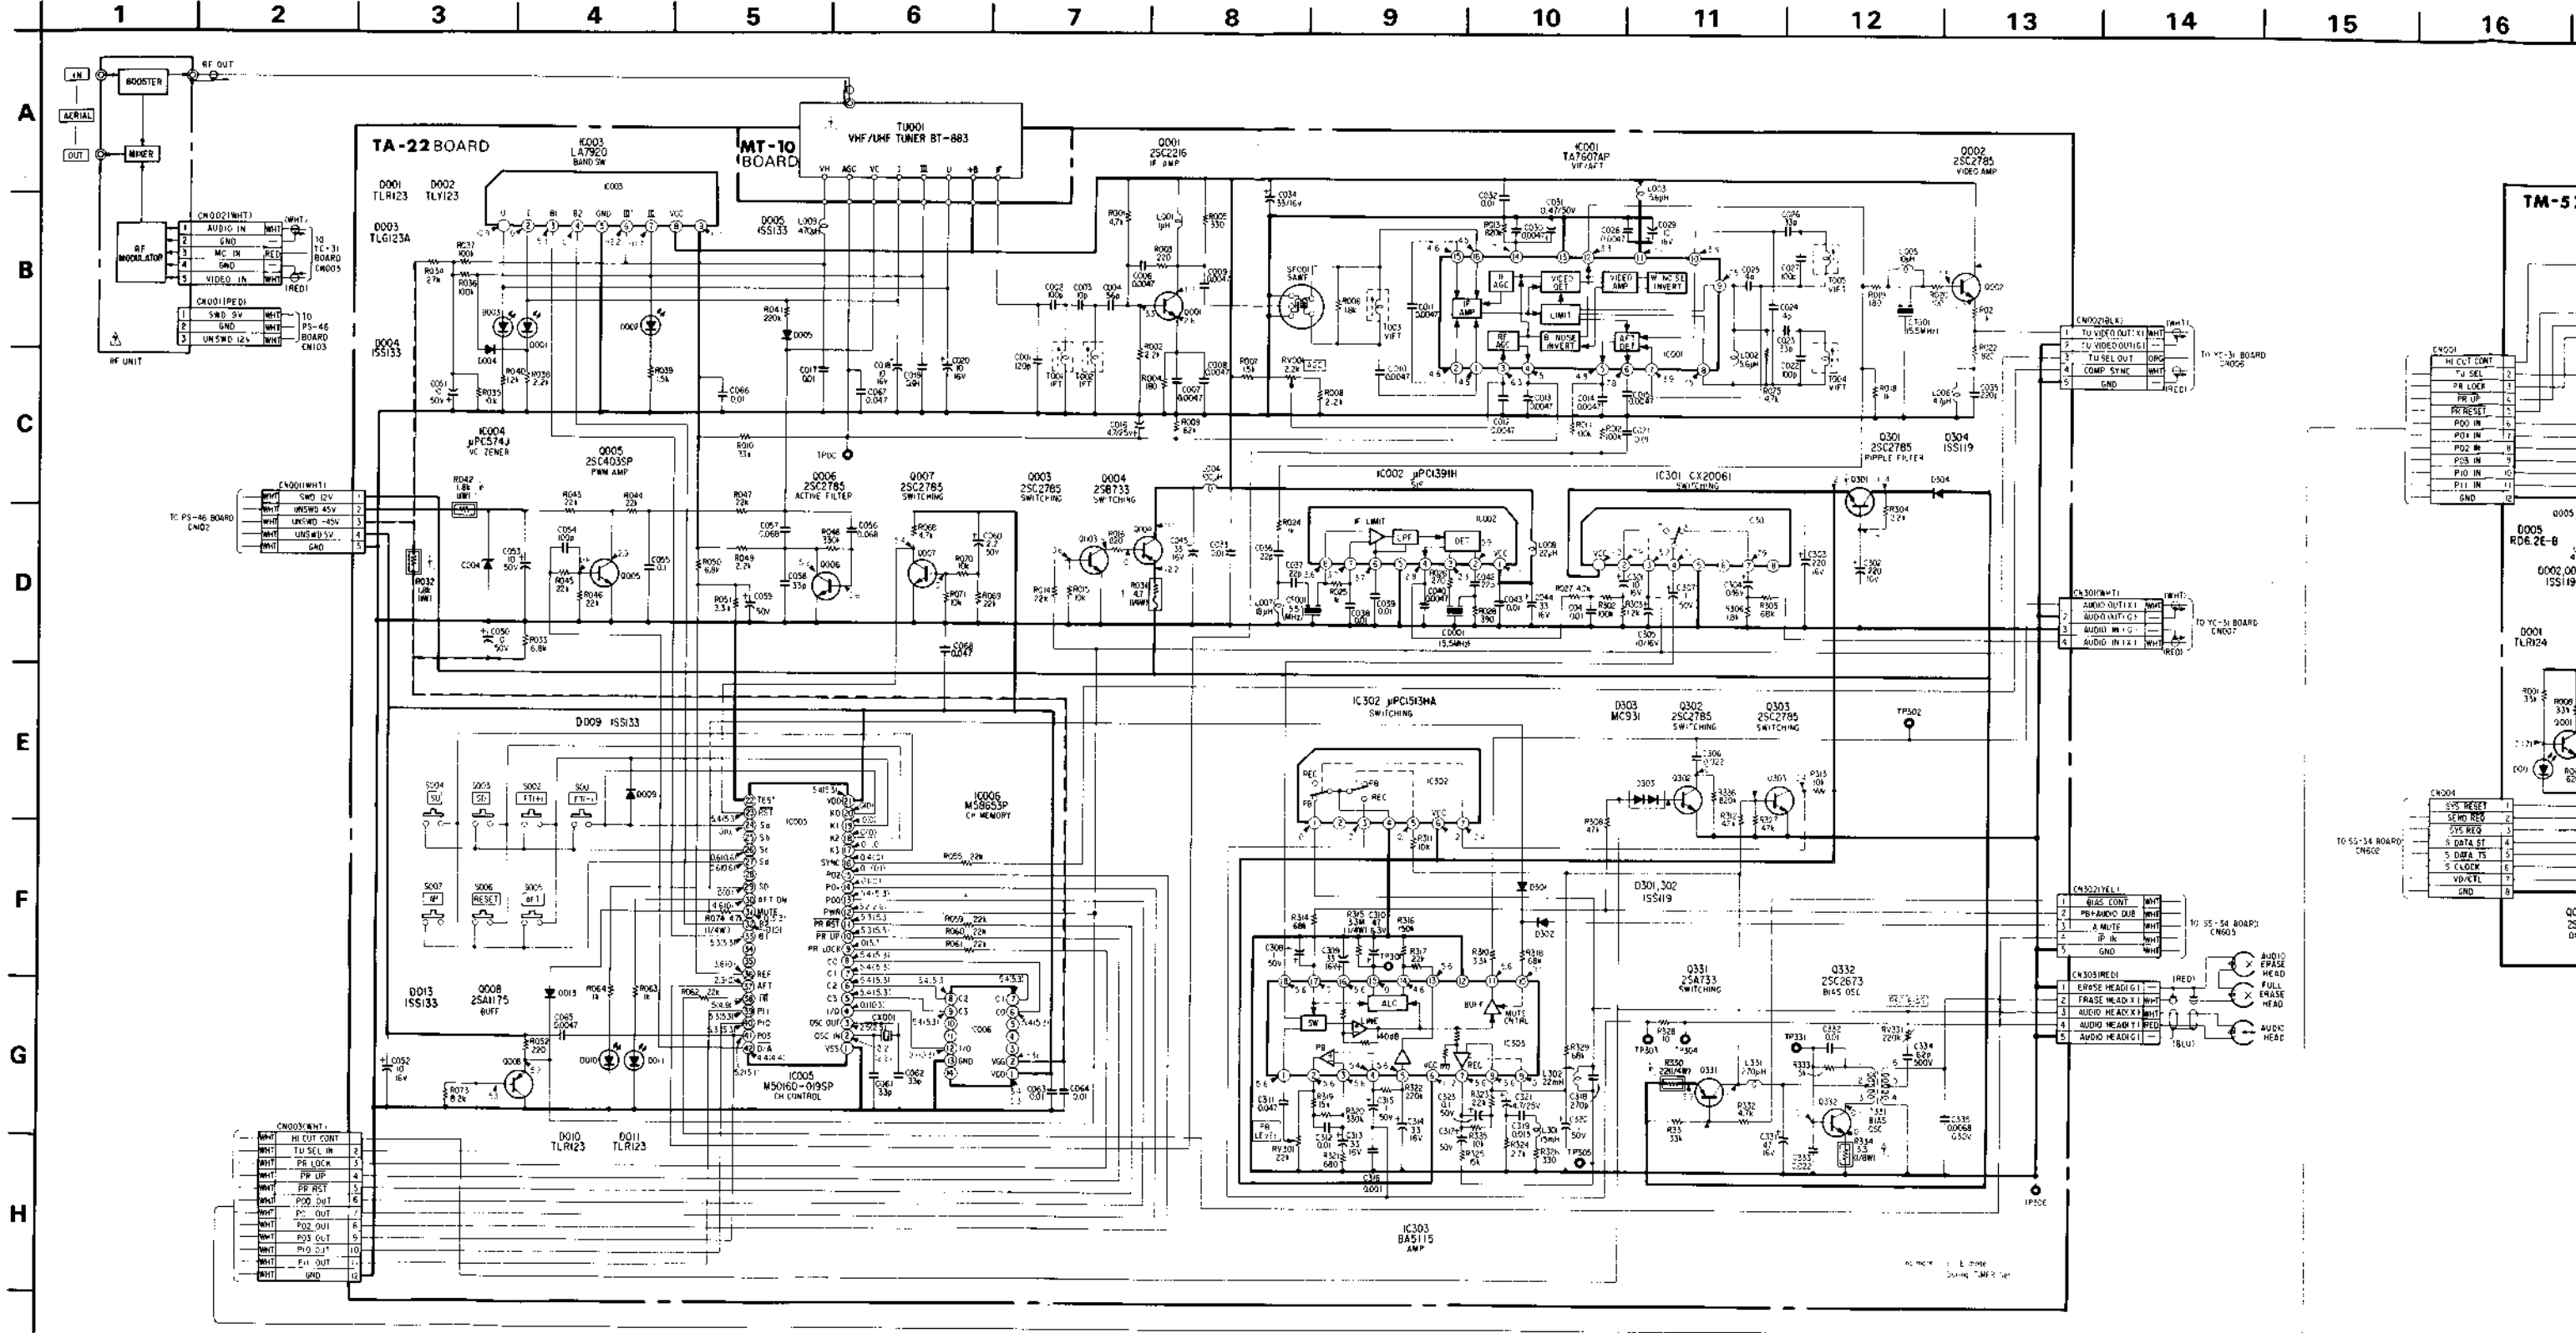


Note:

- All resistors are in ohms, 1/6W unless otherwise noted.
- All capacitors are in μF (p:pF) unless otherwise noted.
- 50V or less are not indicated except for electrolytic capacitors.
- All variable and semi-fixed resistors have characteristic curve B, unless otherwise noted.
- : Nonflammable resistor
- : Fusible resistor
- : B+ bus.
- : B- bus.
- The voltage value is reference value between the grounding when the color bar signal is received from a color bar generator.
- The voltage value is measured using a digital tester (10M Ω).

Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

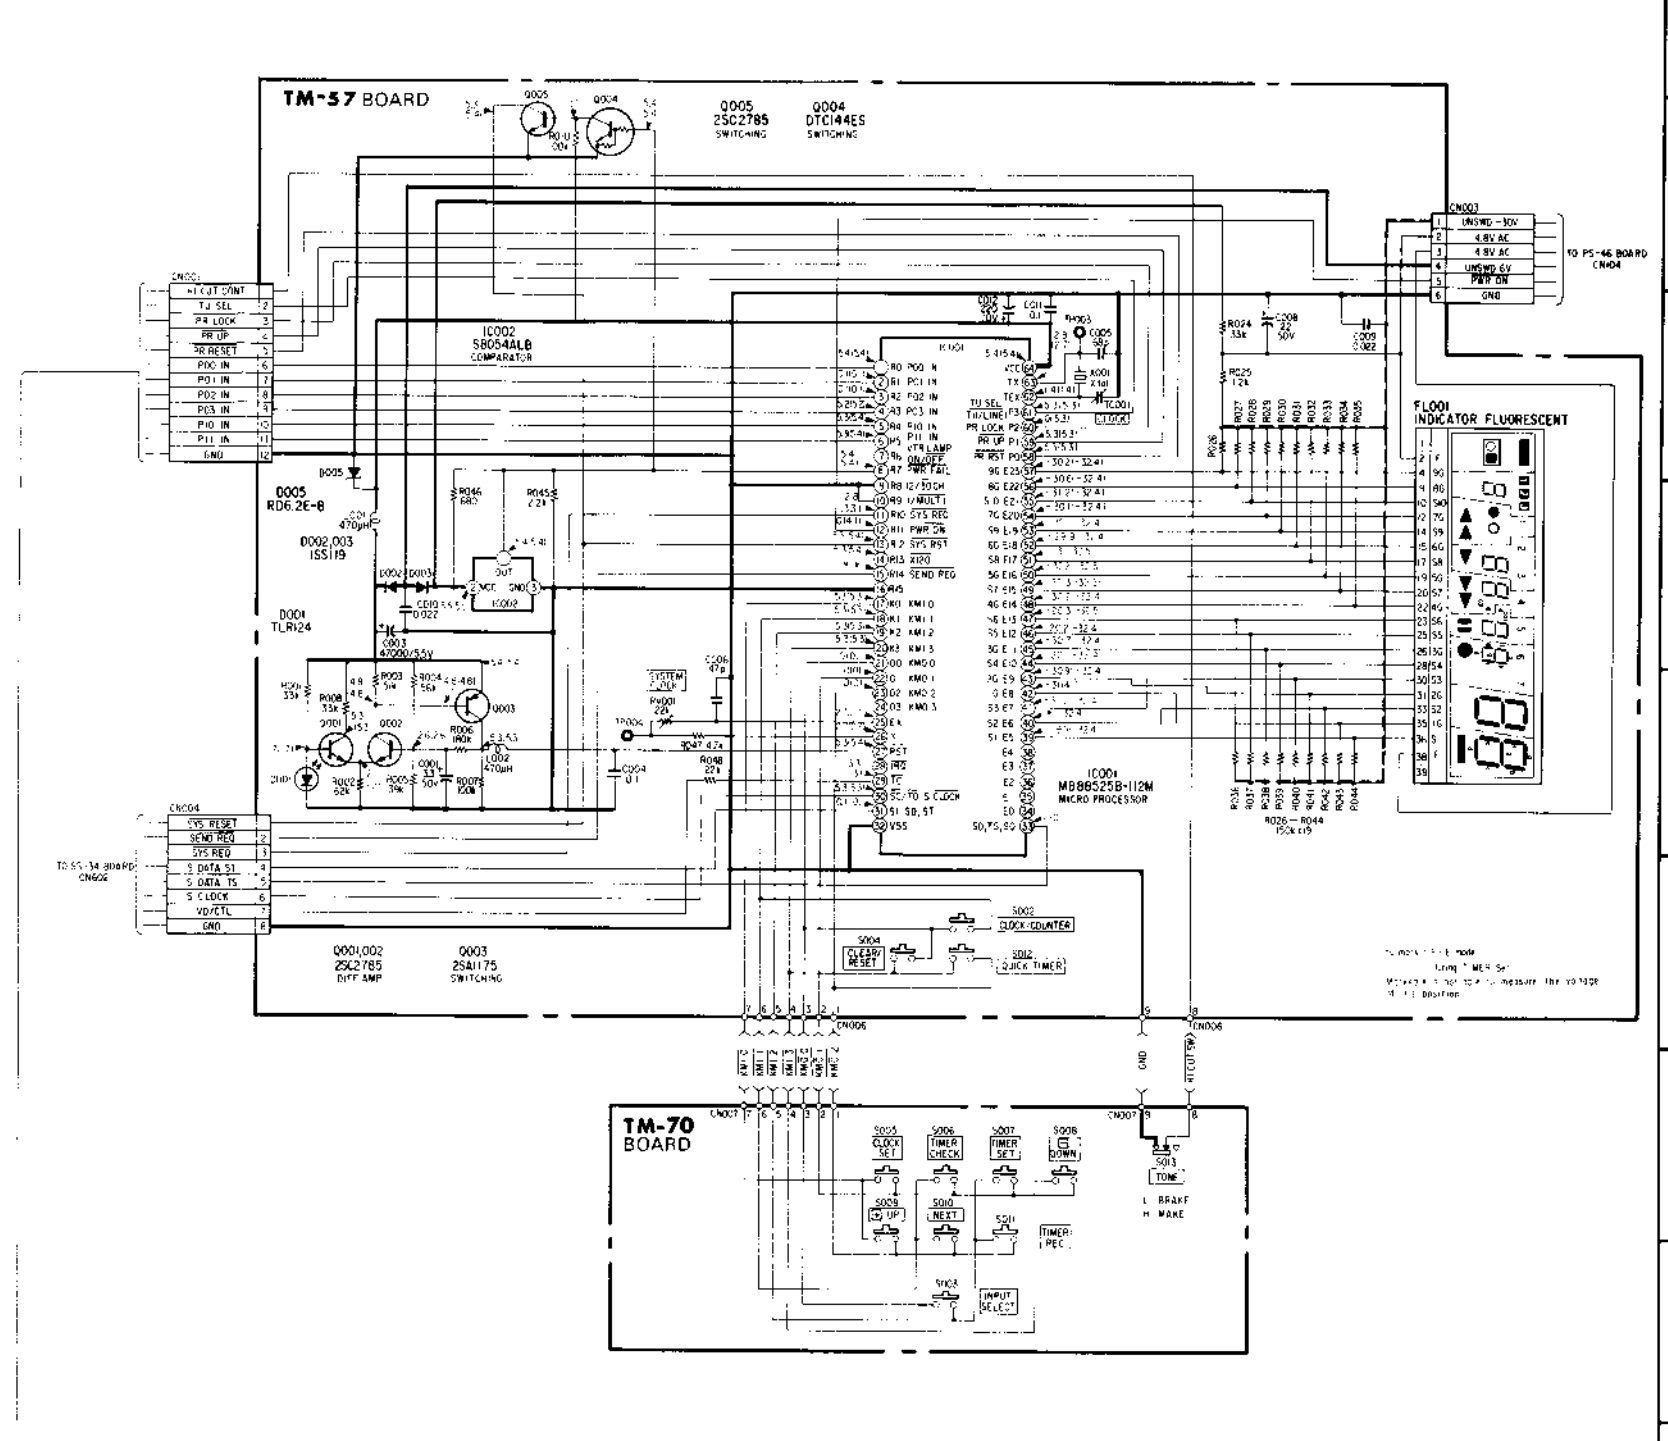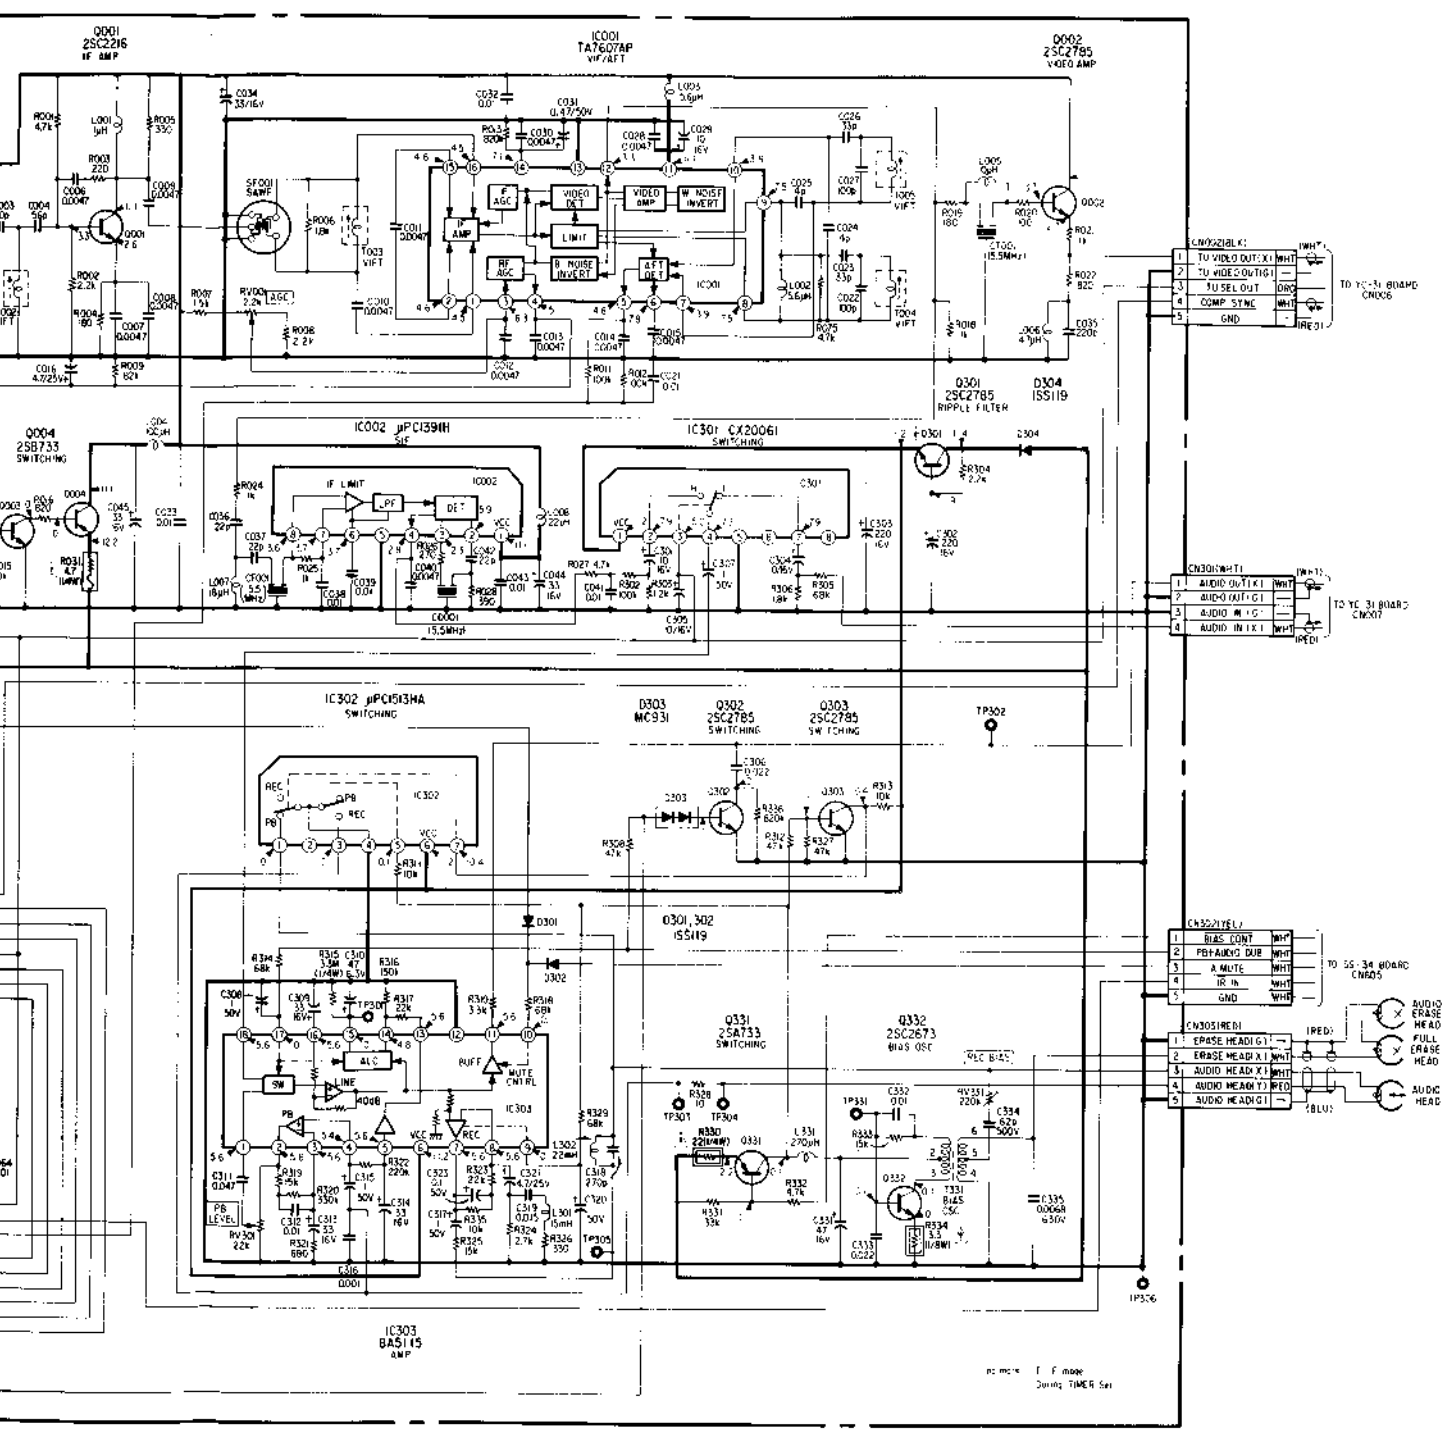


Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.



4-5. PS-45 (POWER SUPPLY), PS-46 (POWER) PS-69 PRINTED WIRING BOARDS

- Ref. No. PS-45 BOARD : 7000 series, PS-46, PS-69 BOARD : 7100 series -

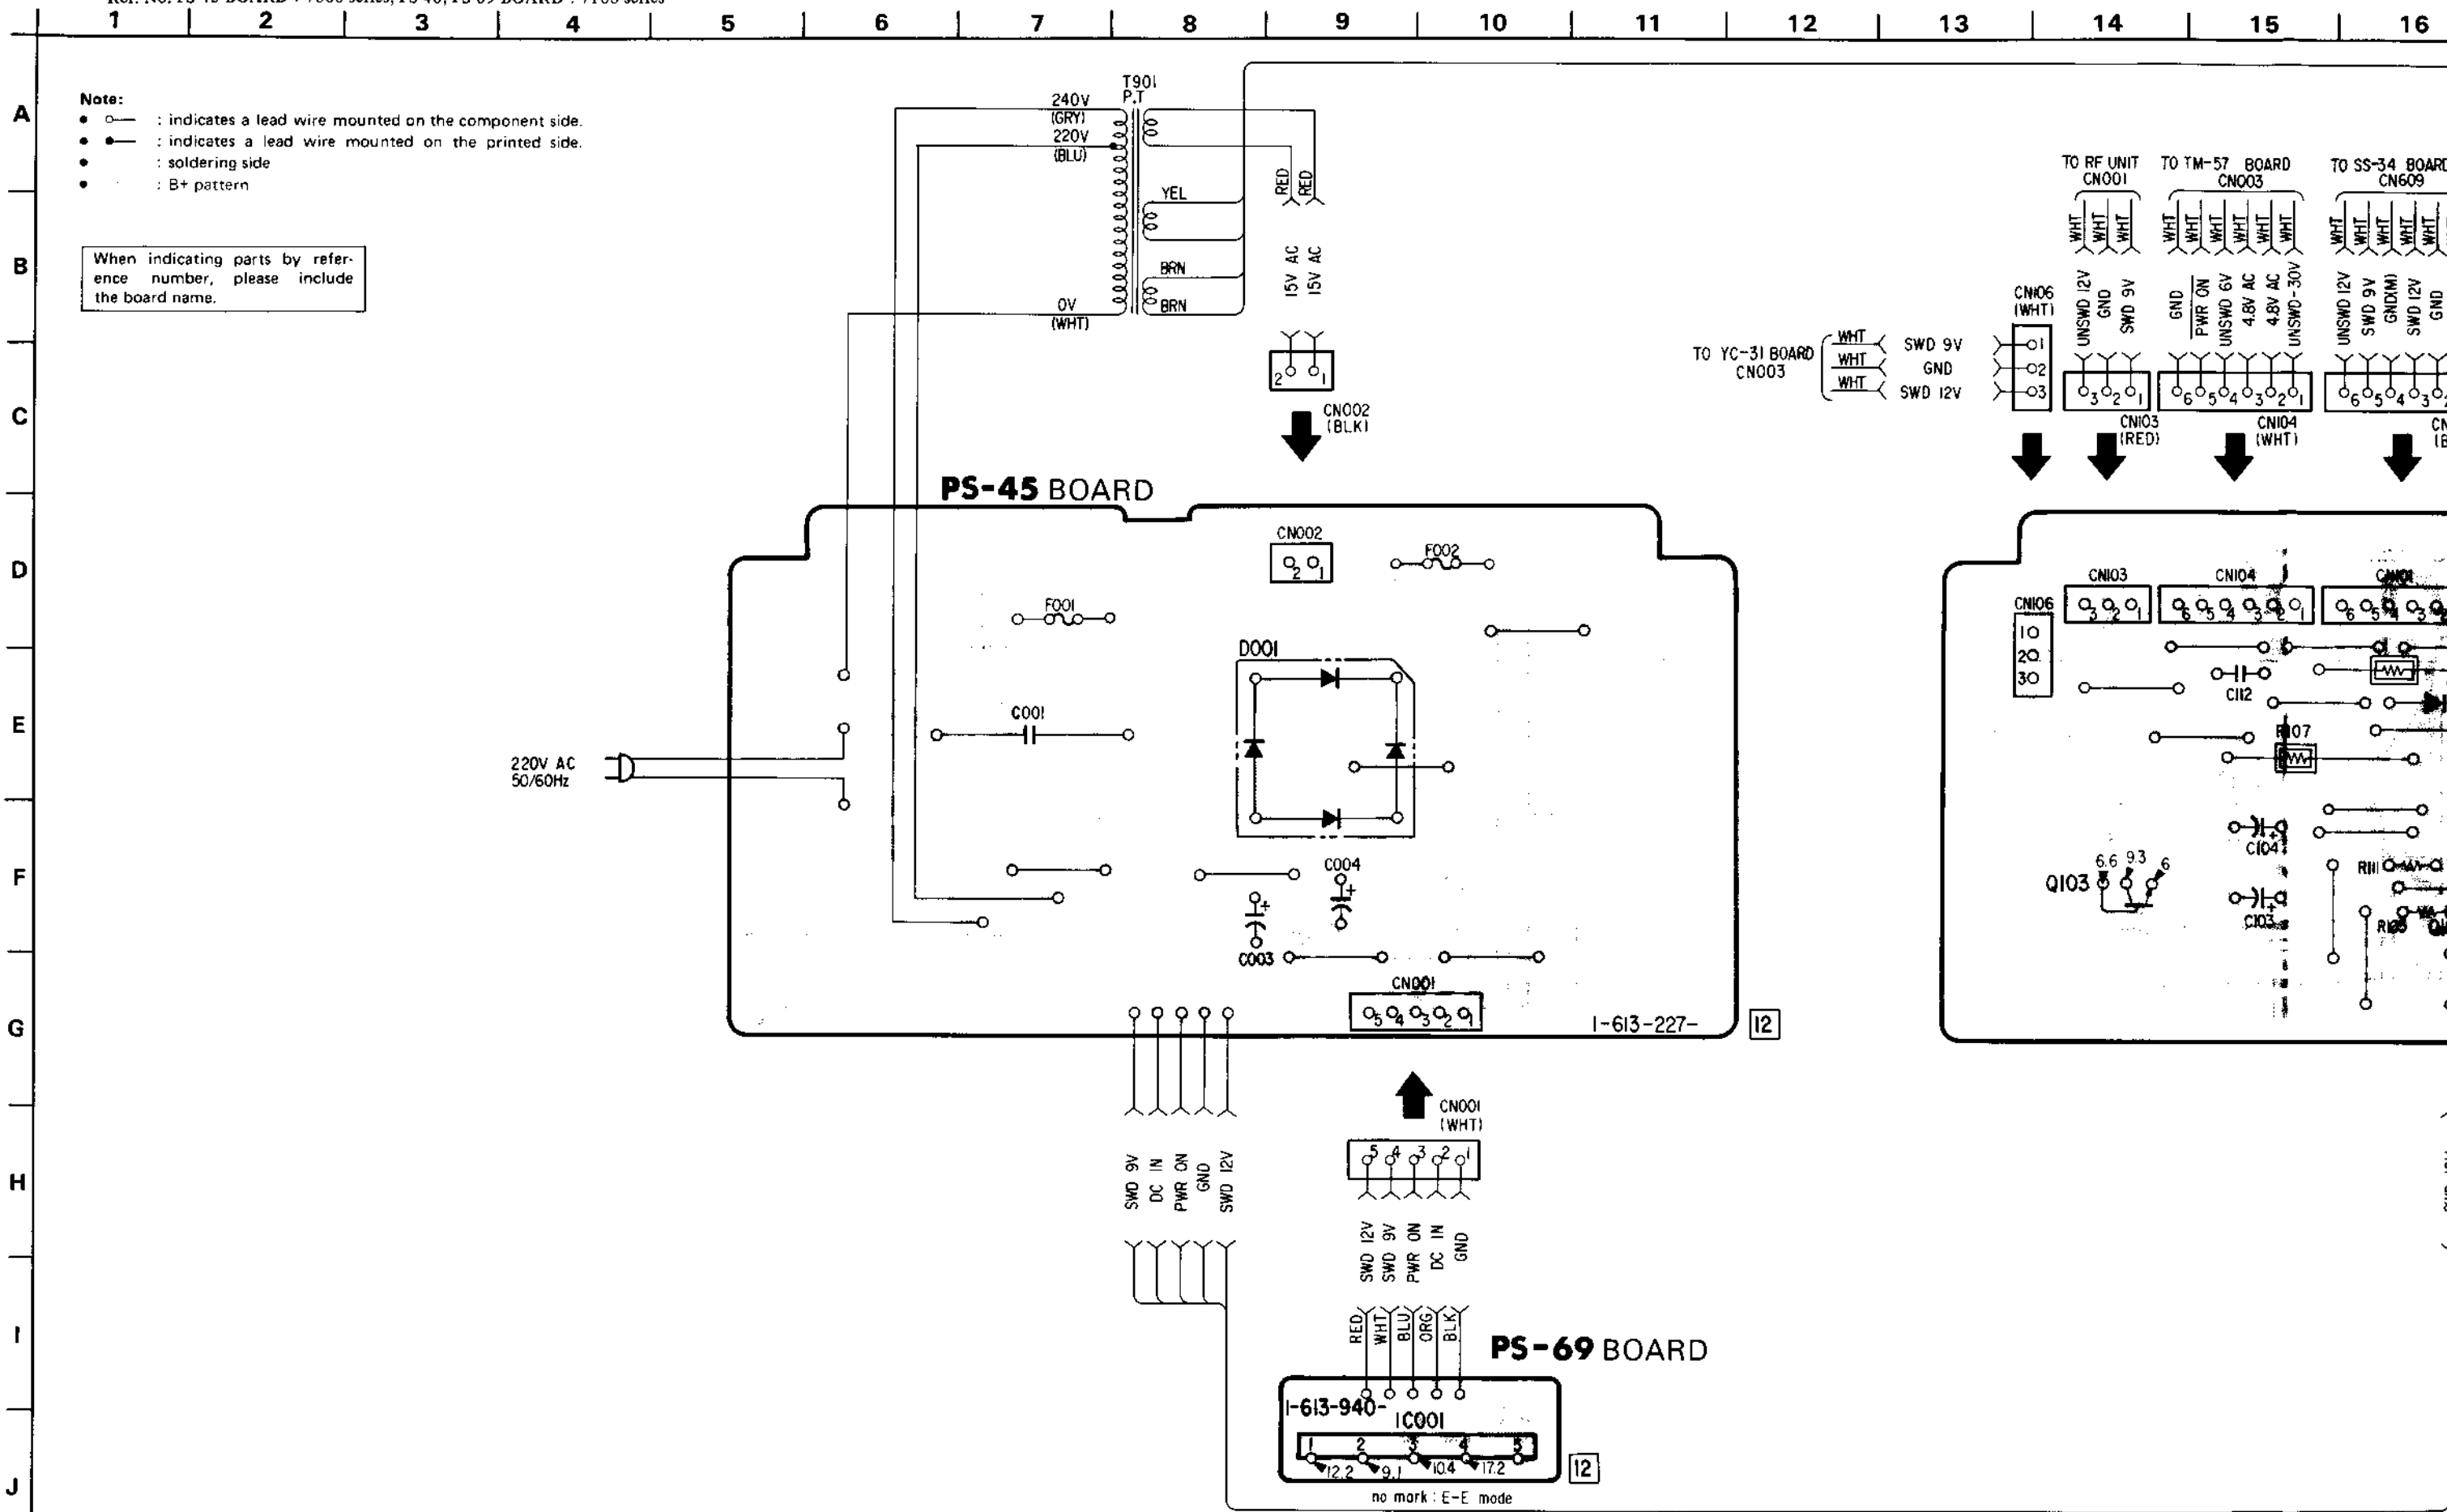

POWER SUPPLY POWER SUPPLY

7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22

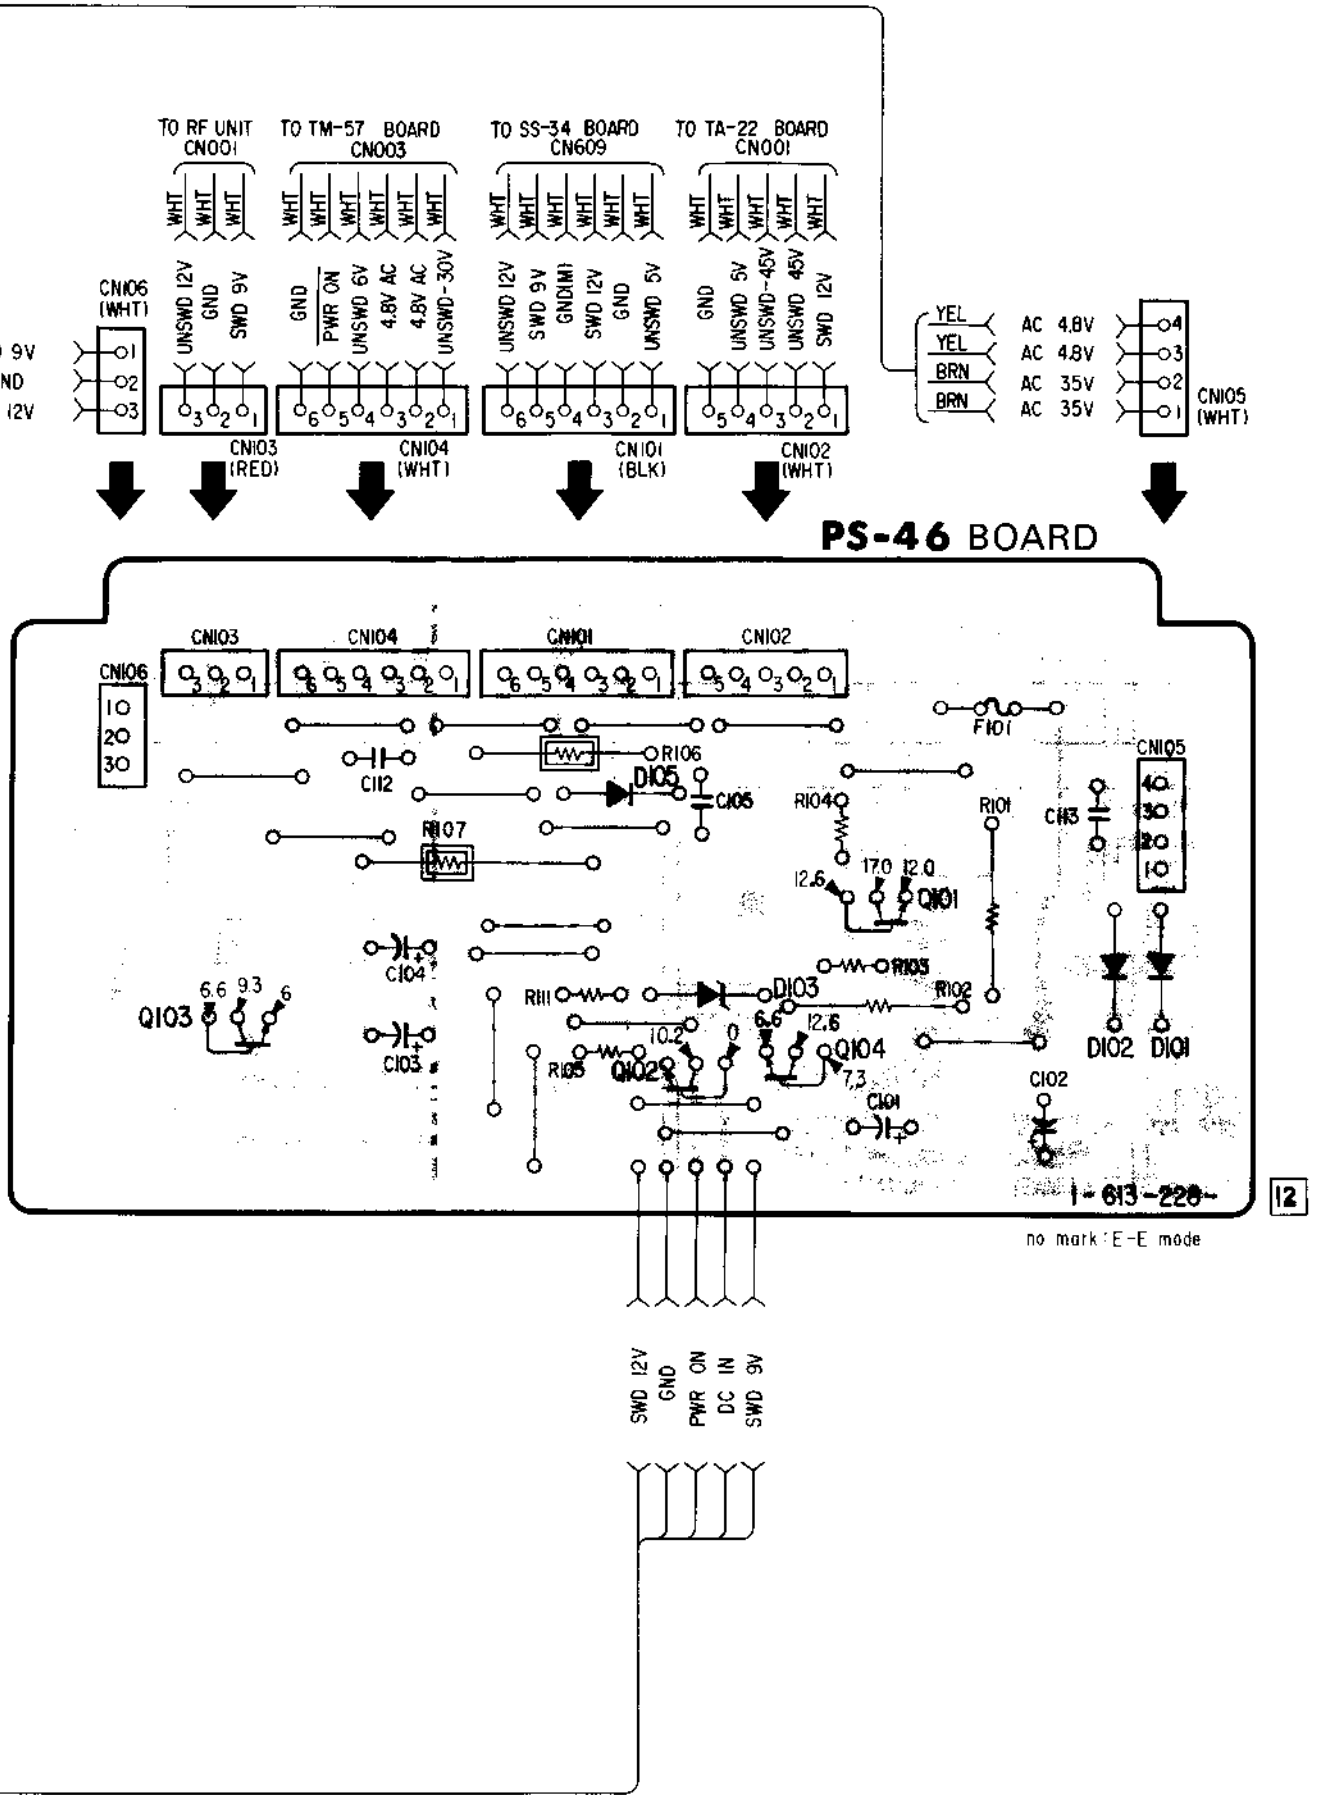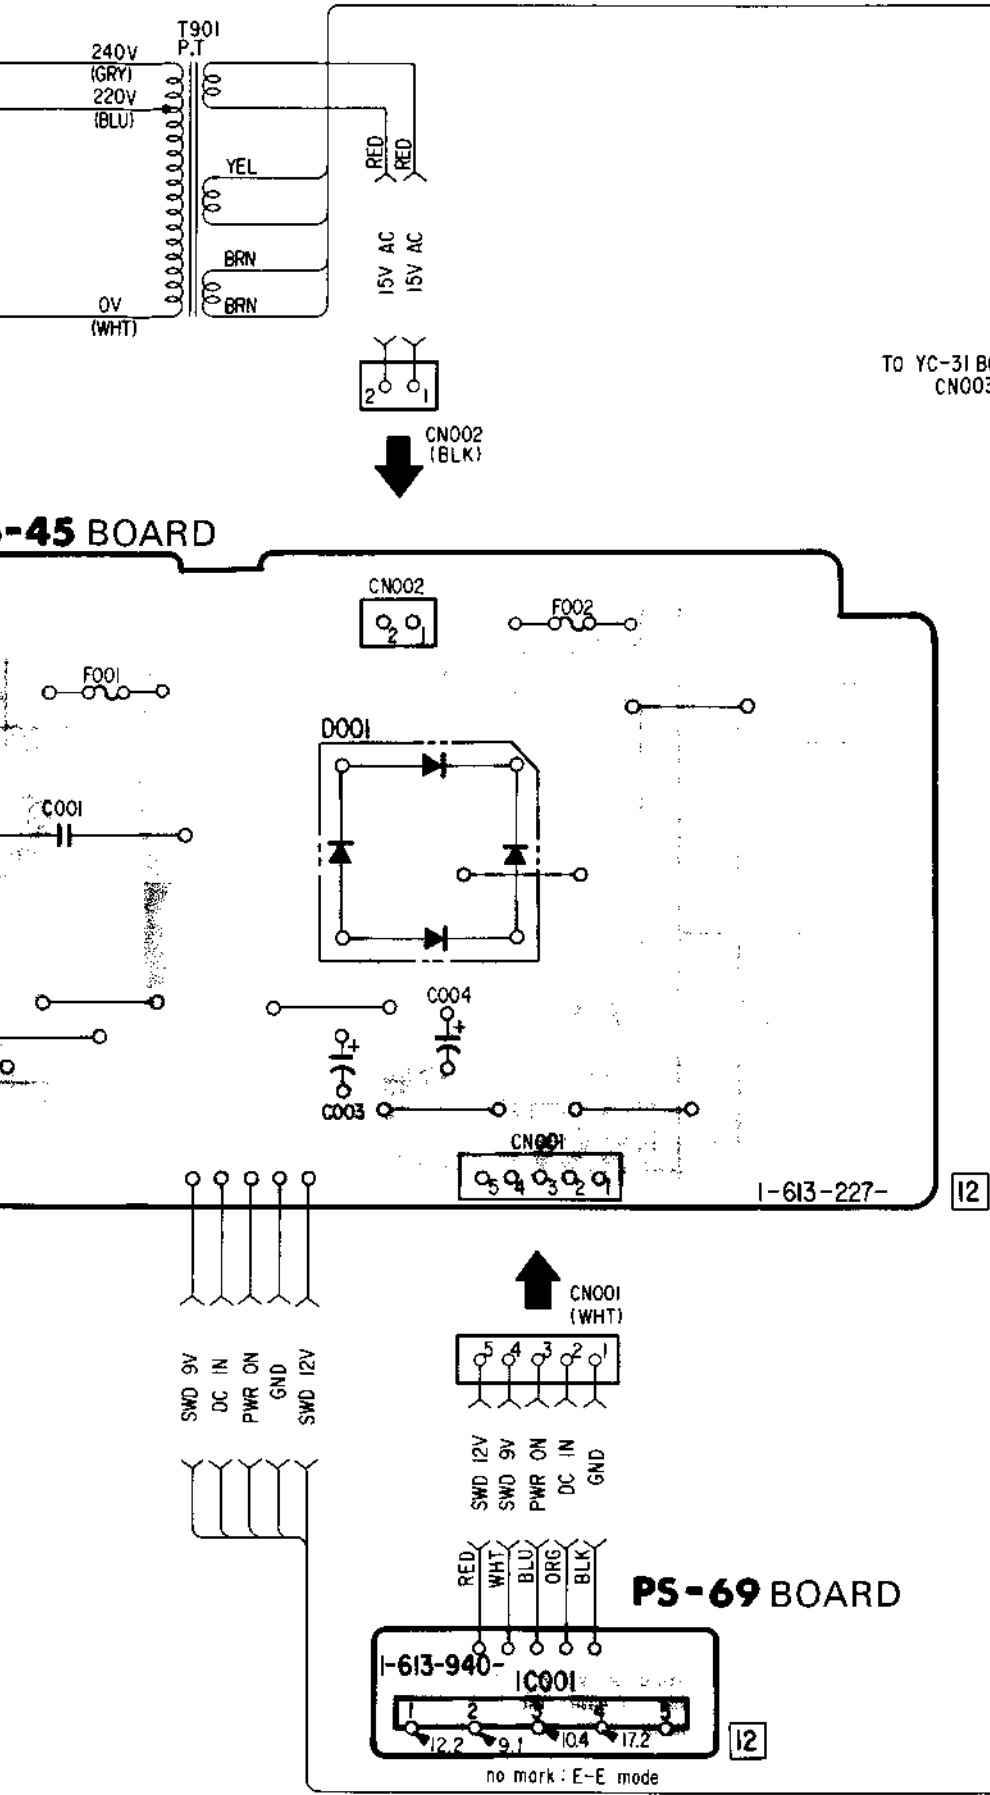


A
B
C
D
E
F
G
H
I
J

POWER SUPPLY POWER SUPPLY

PS-45 (POWER SUPPLY), PS-46 (POWER) PS-69 SCHEMATIC DIAGRAM

- Ref. No. PS-45 BOARD : 7000 series, PS-46, PS-69 BOARD : 7100 series -

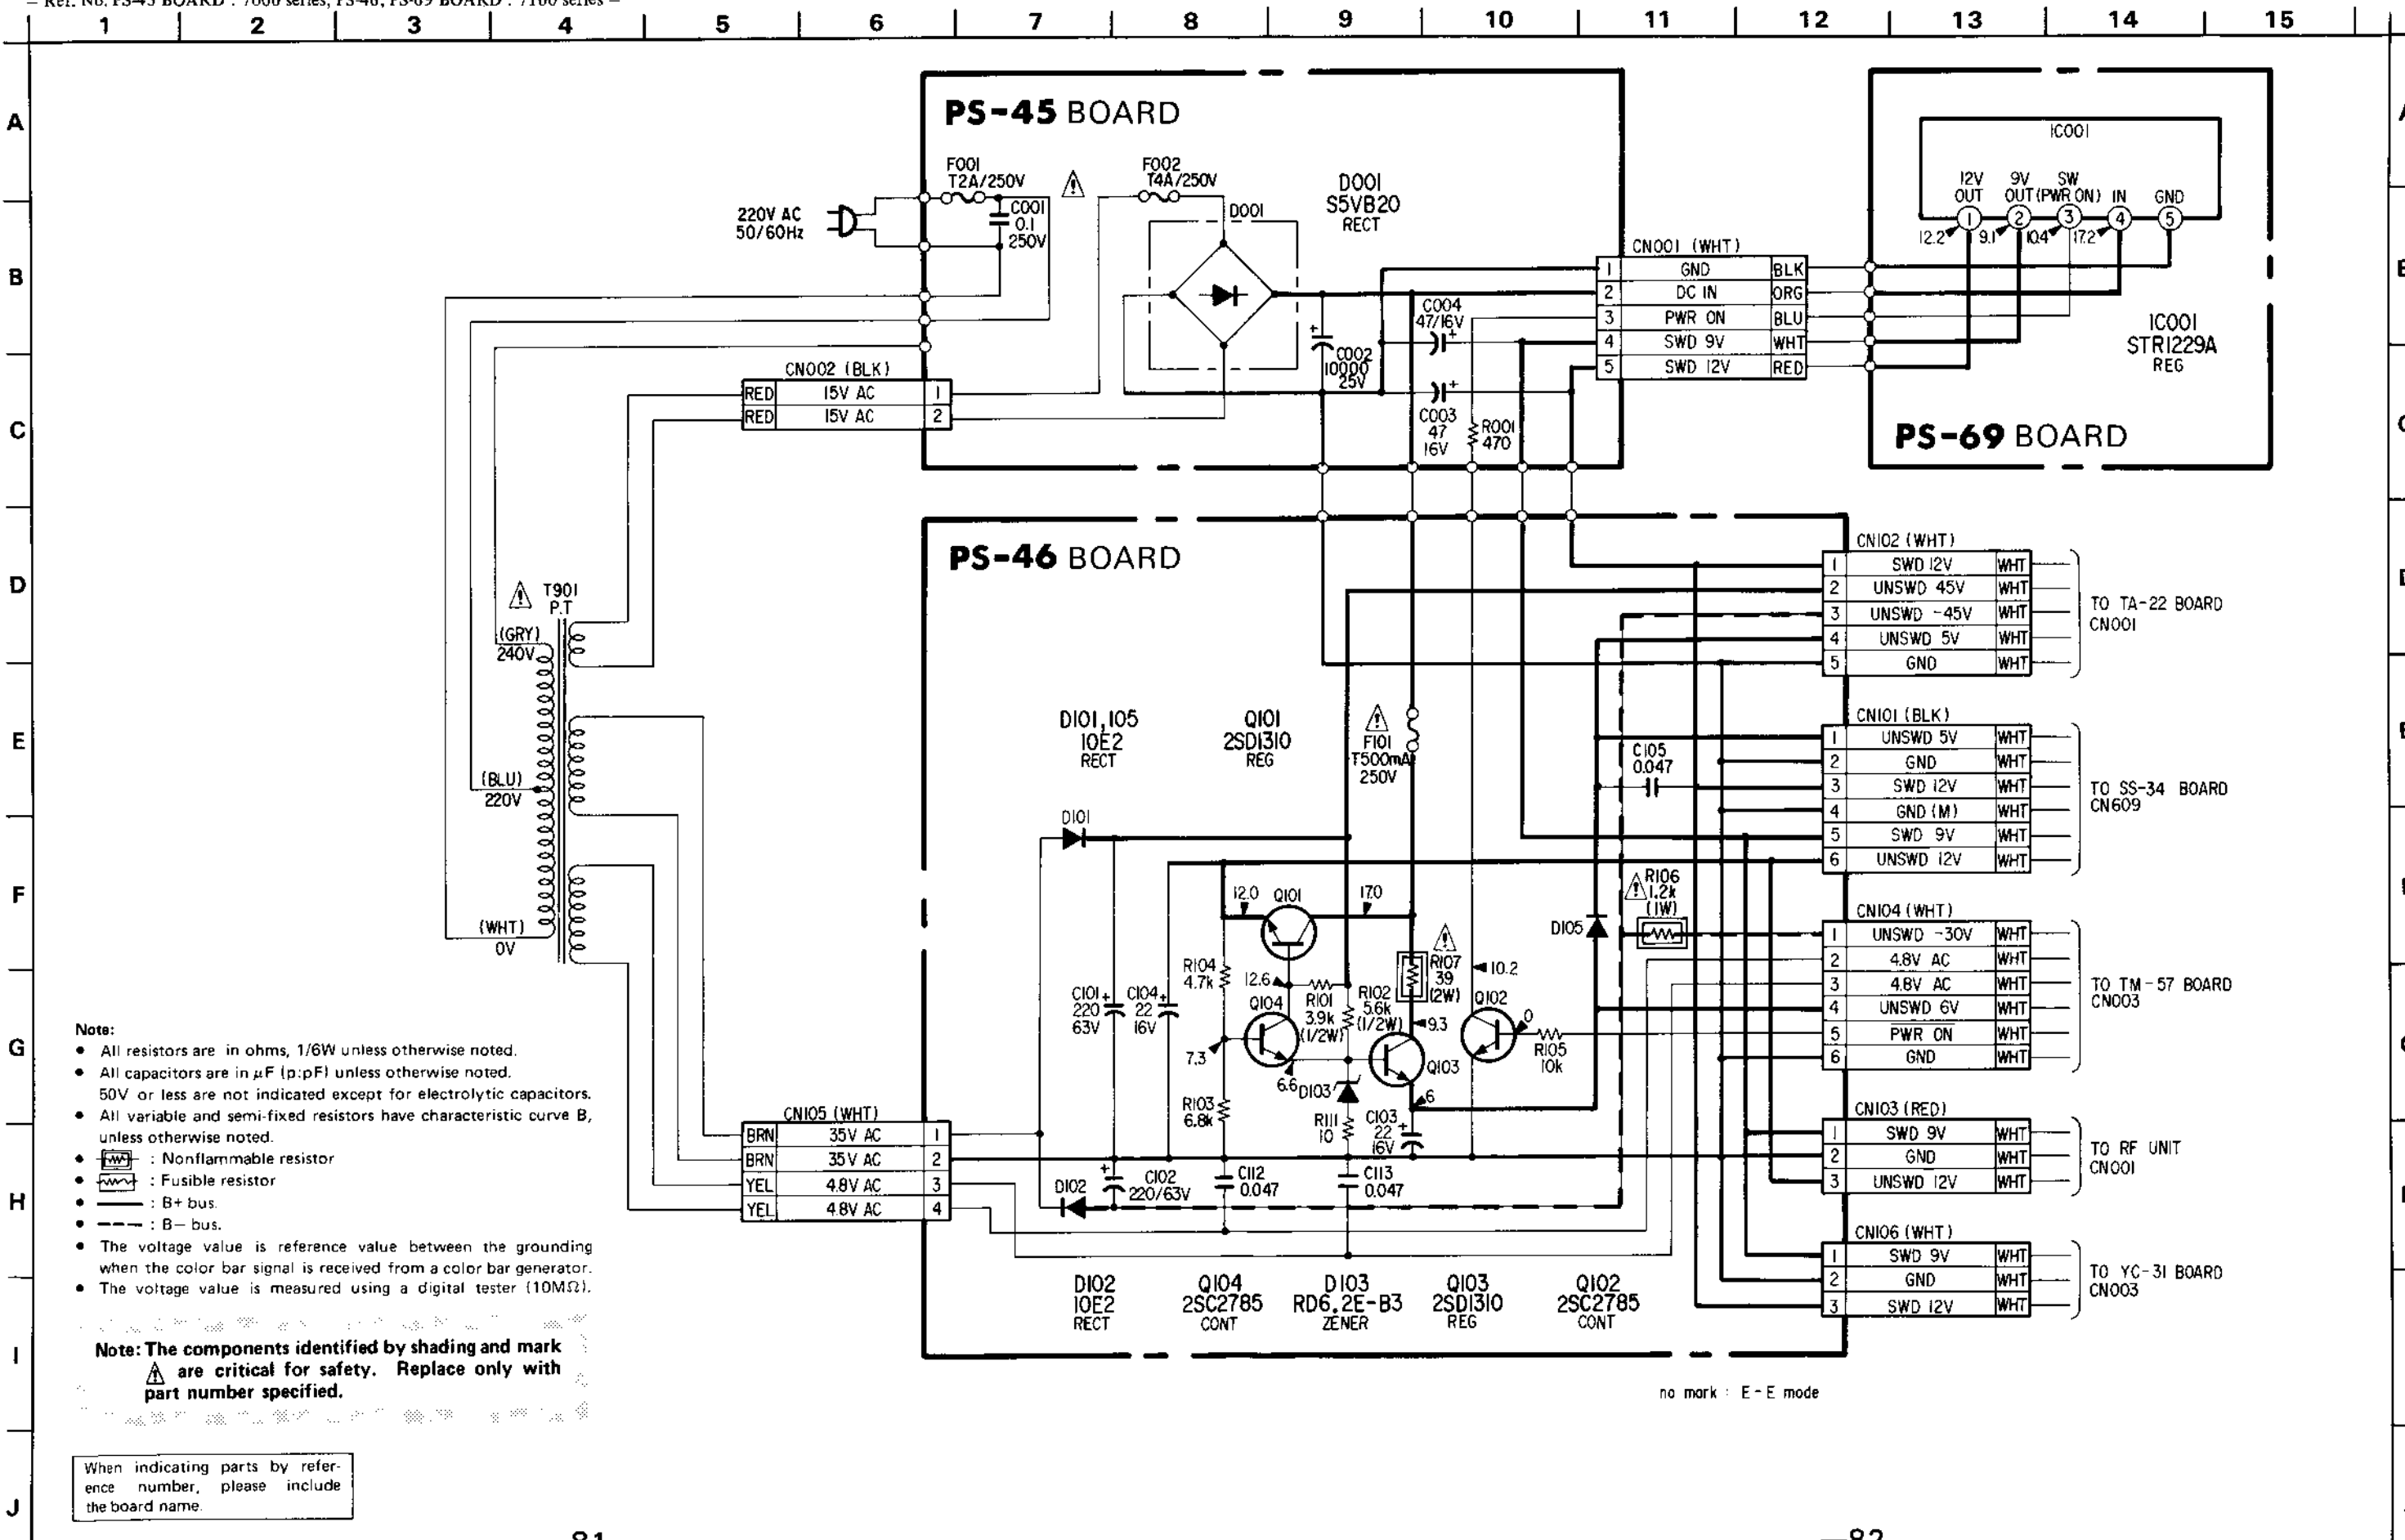


4-6. SEMICONDUCTORS


BA634



BA4558
HA17558
LM358P
NJM4558D
μPC358C
μPC393C
μPC4558C




BA5115

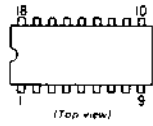


BA7007




CX134A




CX862
CX866A
CX866B

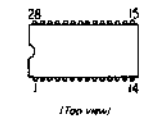

CX894
LA7205



CX10021A-P
CX10021A-NP
CX1021B-P
CX1021B-NP
CX194B-0
CX194B-6
M50160-019SP




(Top view)

CX10023




(Top view)

CX20043



(Top view)


CX20061
CX7926
μPC1373H
μPC1391H



HZT33-02
μPC574J



LB1640N

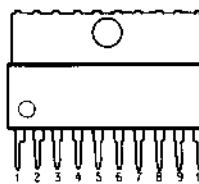

M54543L




M58653P
MB3614
μPC324C




(Top view)

MB88525B-112M

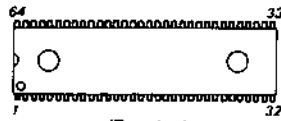

(Top view)

MB88551-133M

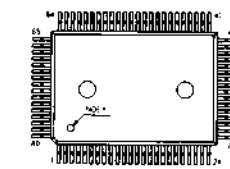

HD14538BP
MB84053B
MC14538BCP
TA7607AP
TC4053BP
TC4538BP
μPD4053BC




(Top view)

μPC1513HA



STR1229A
STR1229



2SA733-K
2SA733-P
2SA844-C
2SA844-D
2SA844-E
2SC1740S



2SA772
2SB739
2SC1474
2SC1475-13
2SC1475-14
2SC1475-15
2SD788
2SD789



2SA933S
2SA1048-GR
2SA1115
2SC403SP
2SC2458
2SC2603
2SD1310
DTA114ES
DTA144ES
DTA144WS
DTC124ES
DTC144ES
DTC144WS



2SA1026




2SA1150
2SA1175
2SC2785



2SB733
2SB733-4
2SD773
2SD774



2SC1061
2SC1826
2SC1827
2SD313HP



2SC2216
2SC2717



2SC2673



2SD1164



2SK107-1
2SK107-2
2SK107-3
2SK105A



10E2
ERB12-02RK




1SS119
1SS133
1SS148



EQA02-06E
EQA02-09D
EQA02-10A
EQA02-10B
HZ10E-B1
HZ10E-B2
HZ10E-B3
HZ6.2E-B3
RD10E-B1
RD10E-B2
RD10E-B3
RD5.1E-B1
RD5.1E-L1
RD5.1E-L2
RD5.1E-L3
RD6.2E-B3



GP08D




MC911




MC921




MC931




PH302B




S5VB10
S5VB20

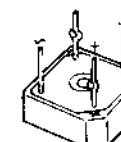


SIB01-02




SPI201-22

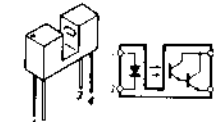

TLG123A
TLR123
TLR124
TLY123

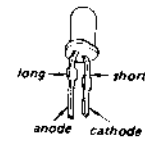


SLR-54MC3



4-7. UHF AND VHF TUNER SCHEMATIC DIAGRAM

— BT-883 tuner —

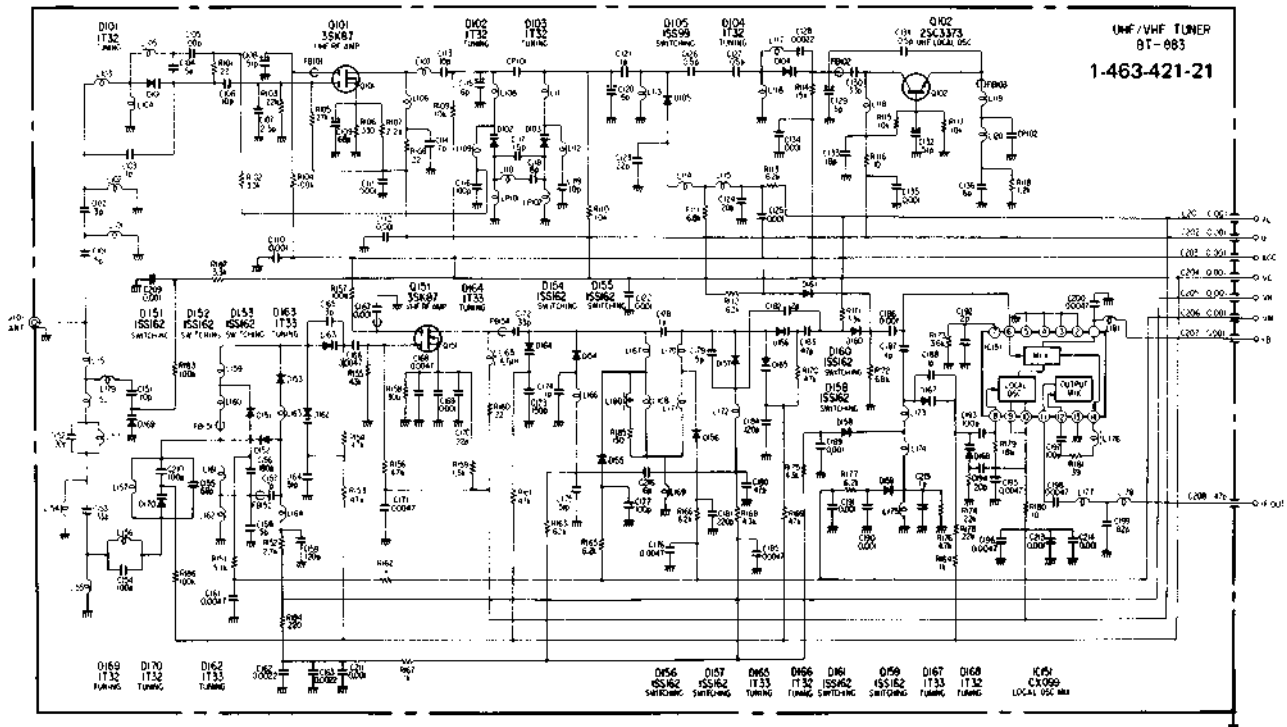

Note: Tuner reference numbers are not included in the Electrical Parts List.


SECTION 5 EXPLODED VIEWS

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.


The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

5-1. FRONT PANEL AND CABINET ASSEMBLIES

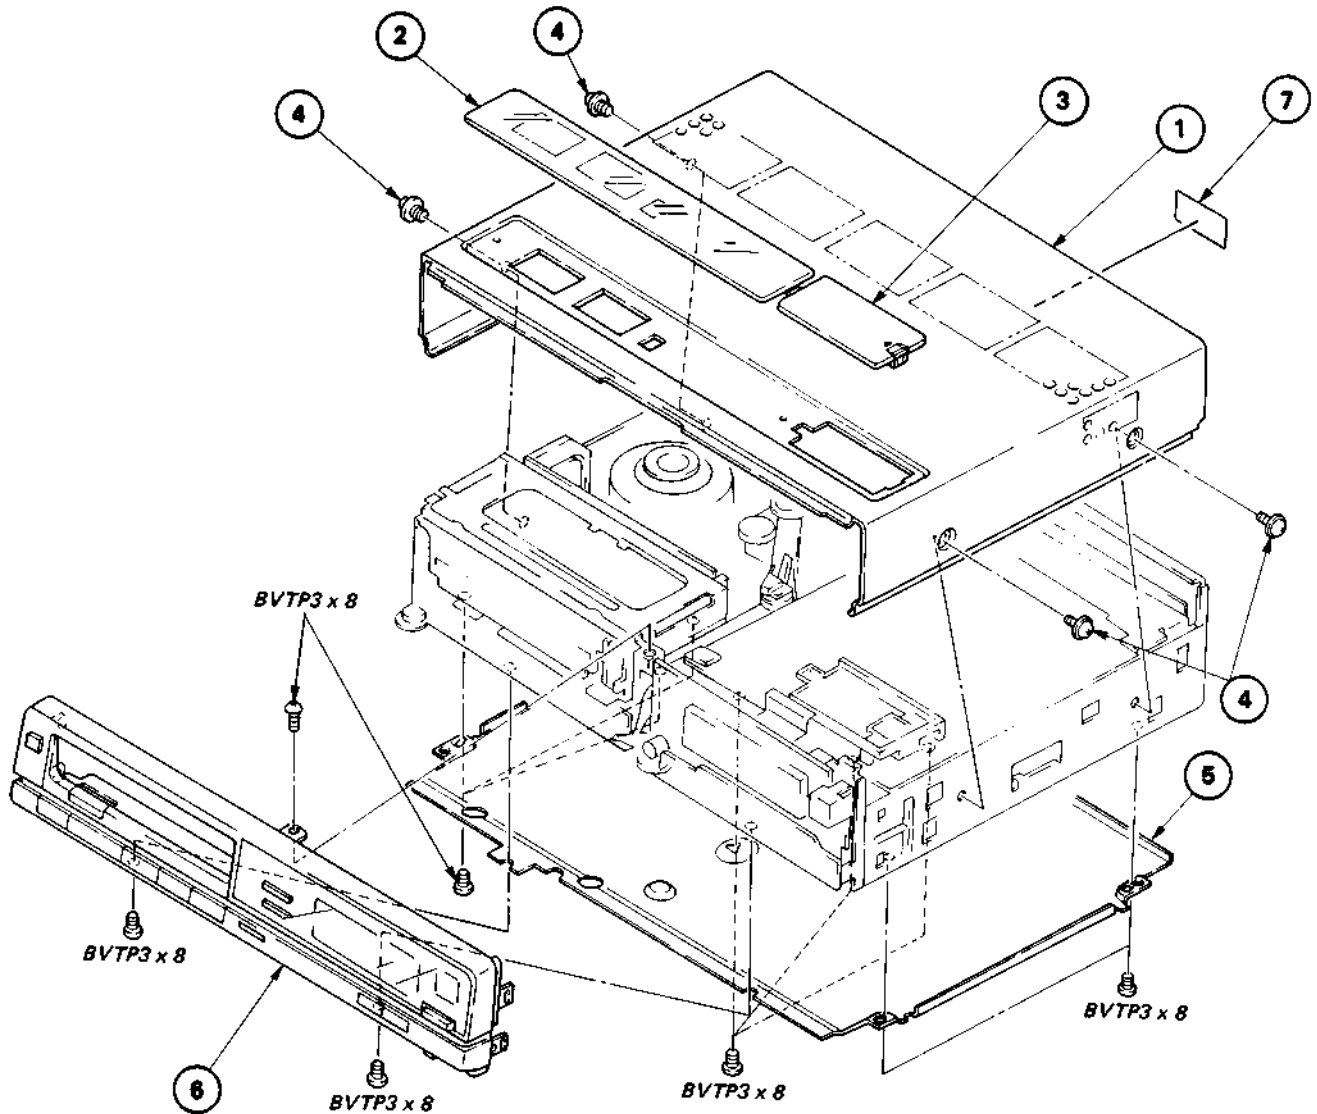


No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
1	X-3687-504-1	CASE ASSY, UPPER (GRAY)		5	*X-3684-133-1	PLATE ASSY, BOTTOM	
	X-3687-521-1	CASE ASSY, UPPER (SILVER)	2	6	X-3687-509-1	PANEL ASSY, FRONT (GRAY)	
2	3-684-184-01	PLATE, TRANSPARENT			X-3687-526-1	PANEL ASSY, FRONT (SILVER)	
3	X-3684-146-1	LID ASSY, PRESET		7	*3-687-505-01	LABEL, MODEL NUMBER	
4	4-886-821-01	SCREW, M3 CASE (GRAY MODEL)					
	4-886-821-11	SCREW, M3 CASE (SILVER MODEL)					

5-2. TUNER, TIMER AND POWER ASSEMBLIES

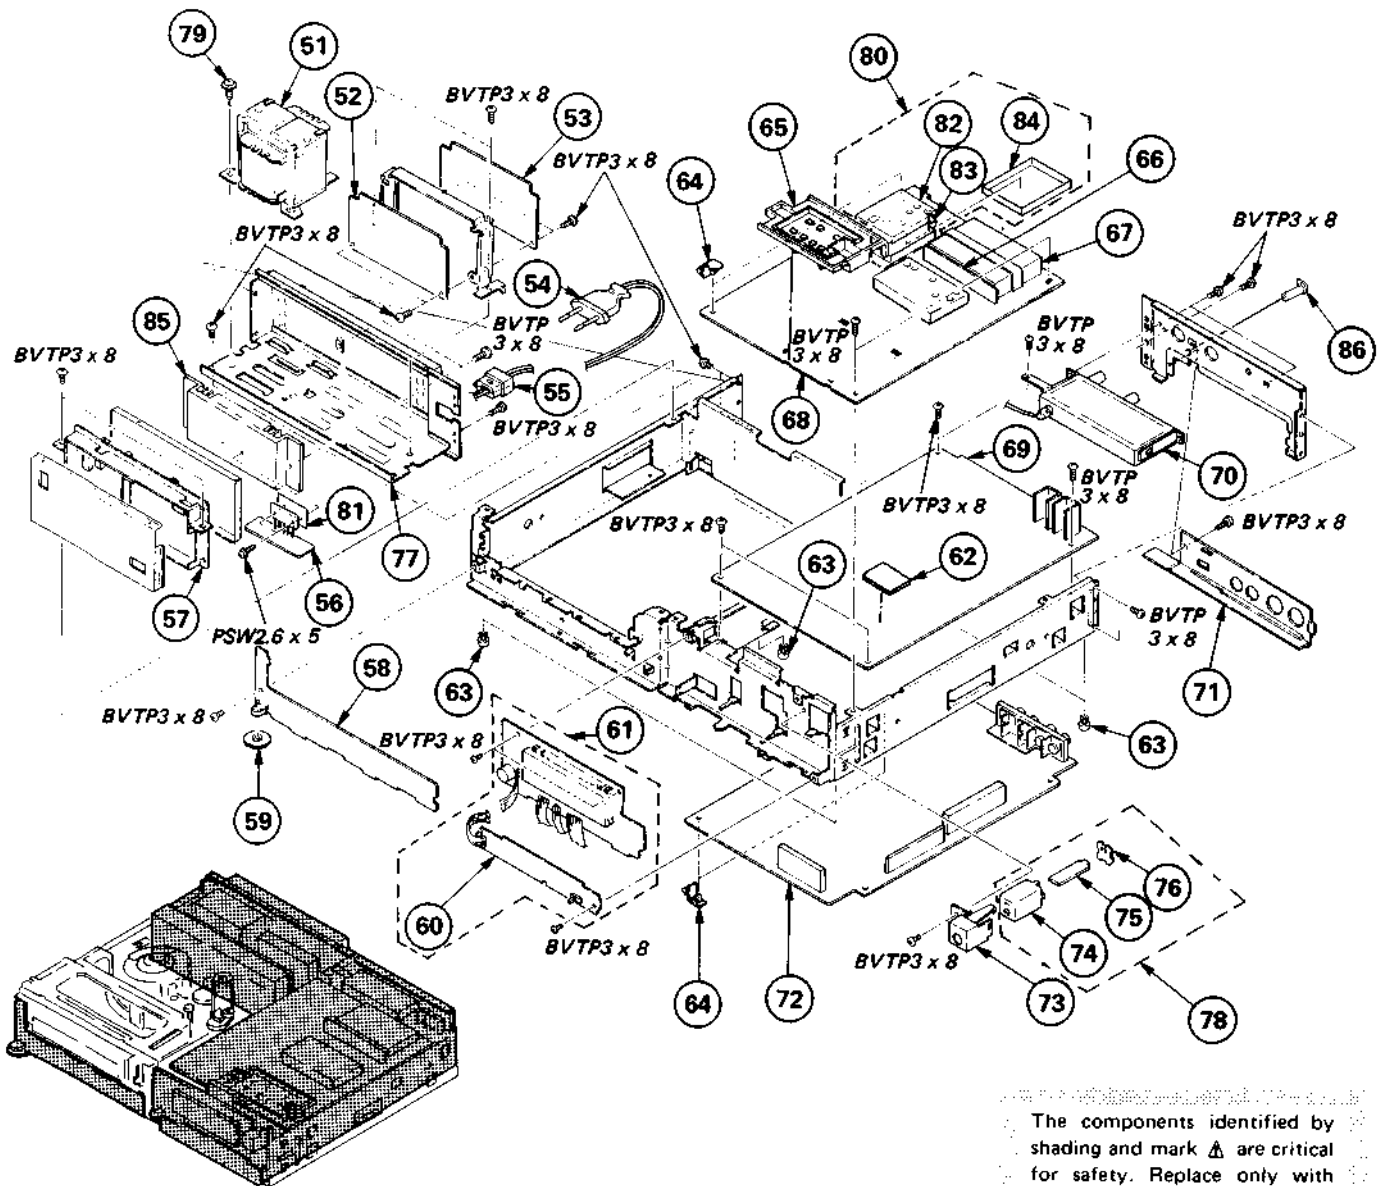


No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
51	Δ 1-447-894-11	TRANSFORMER, POWER (T901)		69	*A-6715-226-A	SS-34 BOARD, COMPLETE	
52	*1-613-228-11	PS-46 BOARD		70	Δ 1-464-388-11	BOOSTER MIXER, RF MODULATOR (RFU-821)	
53	*1-613-227-11	PS-45 BOARD		71	*3-687-535-01	PLATE, CONNECTOR	
54	Δ 1-551-908-41	CORD, POWER		72	*A-6711-535-A	YC-31 BOARD, COMPLETE	
55	Δ 3-703-244-02	BUSHING, CORD		73	*3-684-182-01	FRAME, FITTING, RAY CATCHER	
56	*1-613-940-11	PS-69 BOARD		74	*4-342-117-00	CASE, SHIELD (MAIN), R	
57	*A-6711-534-A	RP-20 BOARD, COMPLETE		75	*1-606-794-00	N BOARD	
58	*1-613-224-11	FU-35 BOARD		76	*4-342-118-00	LID, SHIELD CASE, R	
59	3-687-561-01	KNOB, TRACK CONTROL		77	X-3687-502-1	FRAME ASSY, POWER	
60	*1-613-222-11	TM-70 BOARD		78	A-6734-213-A	CATCHER BLOCK ASSY, RAY	74-76
61	*A-6707-439-A	TM BOARD, COMPLETE	60	79	4-886-821-11	SCREW, M3 CASE	
62	*1-614-220-11	ES-3 BOARD		80	*X-3687-527-1	LID ASSY, BOTTOM, SHIELD CASE, AU 82-84	
63	3-670-155-11	LEG		81	3-687-589-01	SHEET, RADIATION	
64	*3-701-832-00	HINGE, CIRCUIT BOARD		82	*3-687-550-01	CASE (UPPER LID), SHIELD, AU	
65	X-3687-501-1	COVER ASSY, PRESET		83	*3-687-558-01	CASE (MAIN), SHIELD, AU	
66	*1-613-234-11	MT-10 BOARD		84	*3-687-559-01	CASE (BOTTOM LID), SHIELD, AU	
67	Δ 1-463-421-21	TUNER, ET (BT-883)(TU001)		85	*3-687-588-01	HEAT SINK (K)	
68	*A-6721-205-A	TA-22 BOARD, COMPLETE	66, 67, 80, 85-88	86	3-670-149-00	KNOB, V SYNCHRONOUS	

5.3. FRONT LOADING ASSEMBLY

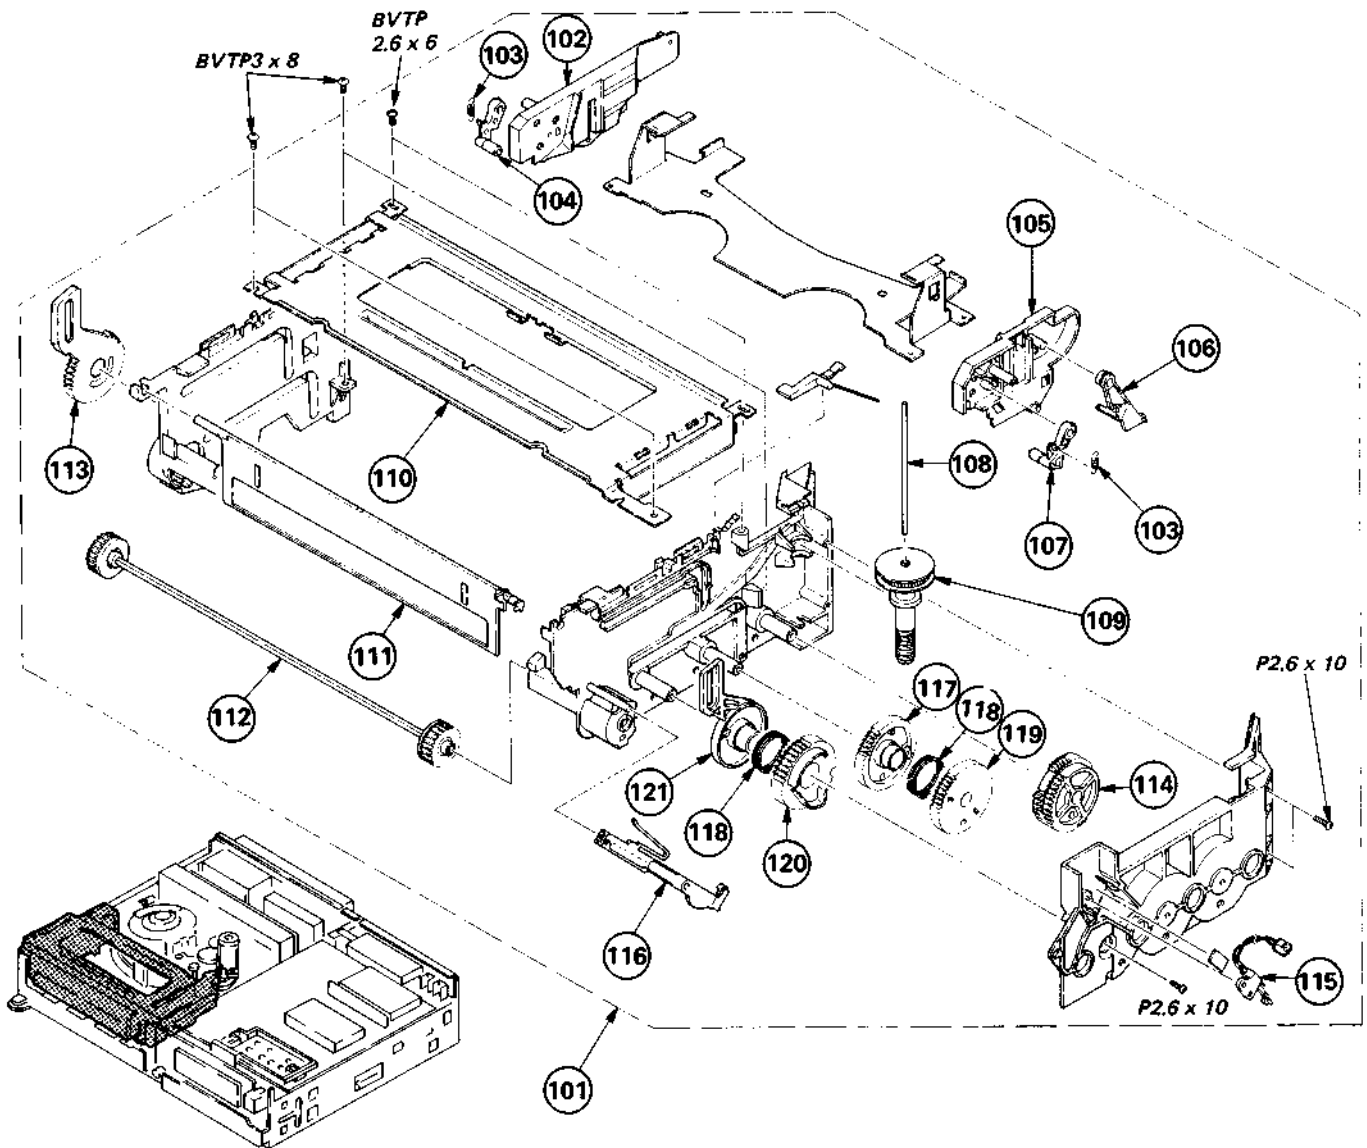


No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
101	A-6751-186-A	LOADING BLOCK ASSY, FRONT	102-121	112	X-3684-116-1	SHAFT ASSY, MIDWAY GEAR	
102	*X-3684-117-1	PLATE ASSY, SIDE, BASE (LEFT)		113	*3-684-166-01	ARM (LEFT), DRIVING	
103	3-684-258-01	SPRING, TENSION		114	X-3684-123-1	GEAR ASSY, DRIVING	
104	X-3684-125-1	RETAINER (LEFT) ASSY, CASSETTE		115	1-554-840-11	SWITCH, LEAF (CASSETTE ON)(S904)	
105	*X-3684-118-1	PLATE ASSY, SIDE, RIGHT		116	3-684-162-01	ARM, SWITCHING, DOOR	
106	*3-684-108-01	ARM, LID OPEN		117	3-684-111-01	GEAR (B), LIMITER	
107	X-3684-124-1	RETAINER (RIGHT) ASSY, CASSETTE		118	3-684-115-01	SPRING	
108	3-679-123-00	SHAFT, GEAR, WORM		119	3-684-109-01	GEAR (A), LIMITER	
109	3-684-164-01	GEAR, WORM		120	3-684-163-01	GEAR, DRIVING ARM	
110	*3-684-195-01	PLATE, TOP		121	3-684-165-01	ARM (RIGHT), DRIVING	
111	3-684-168-01	DOOR					

5.4. CHASSIS ASSEMBLY 1

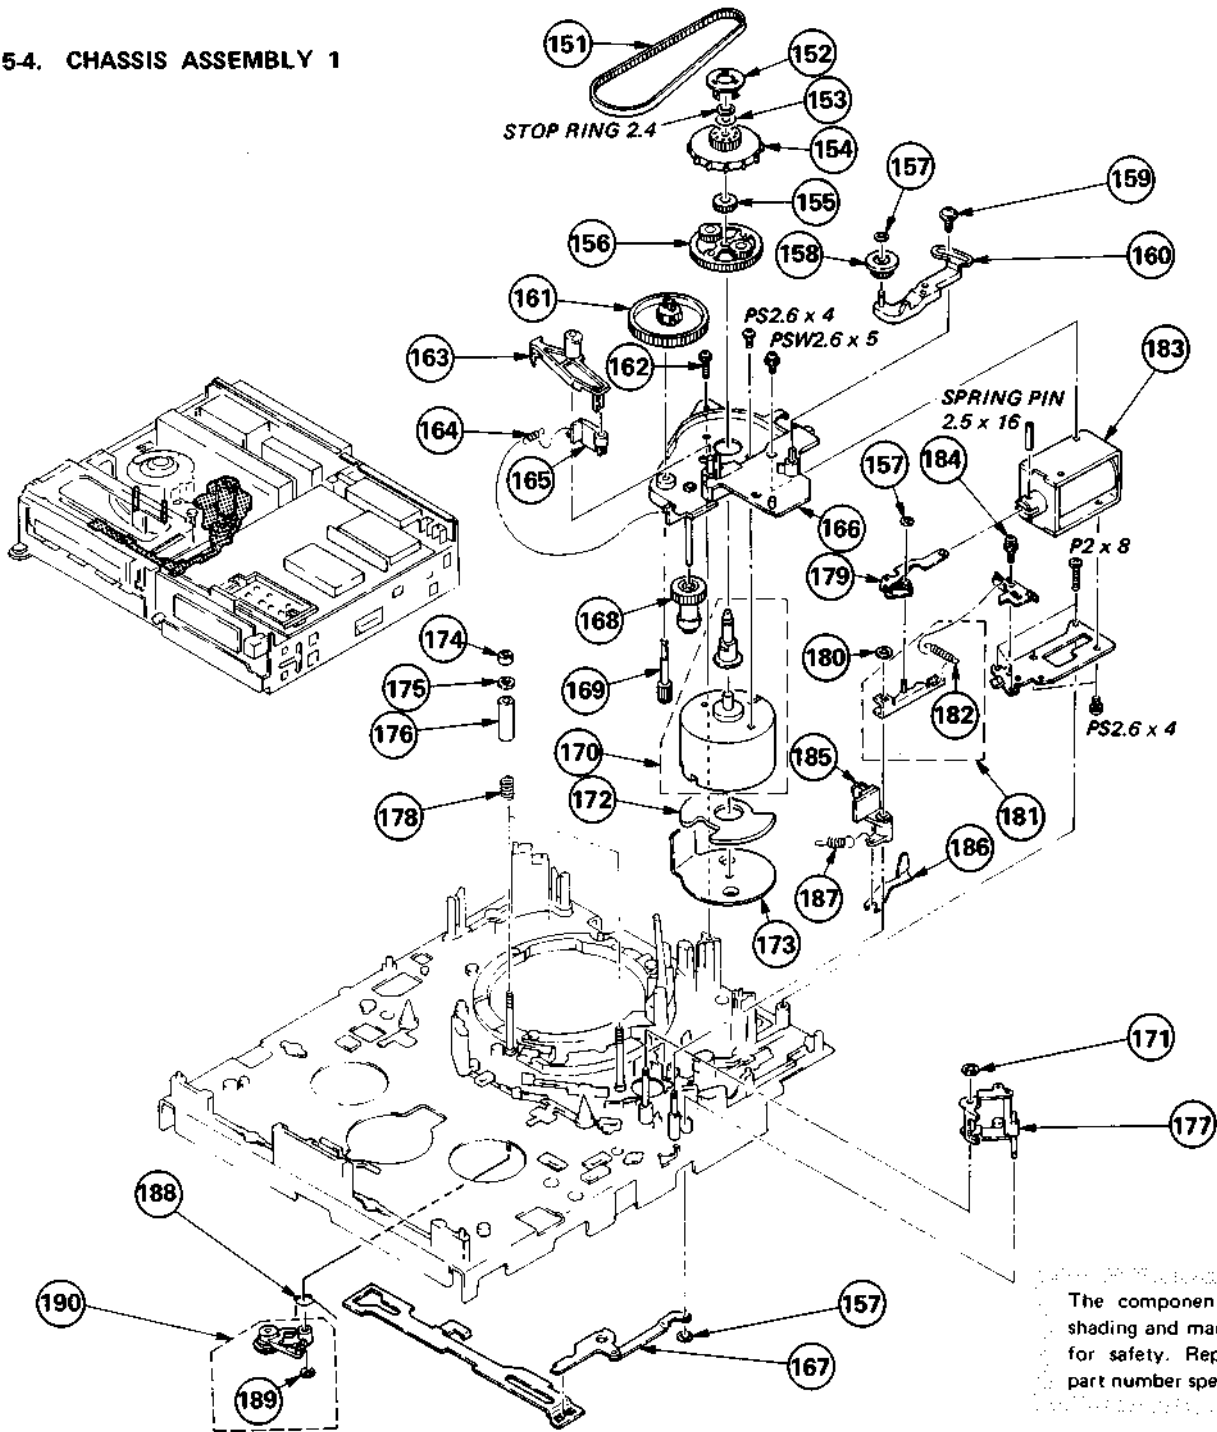


No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
151	3-684-264-01	BELT, TIMING		171	3-669-596-00	WASHER (2.3), STOPPER	
152	3-684-152-01	FLANGE, INTERNAL GEAR		172	*1-605-071-00	LM-8 BOARD	
153	3-683-454-01	WASHER, POLYETHYLENE		173	*3-669-613-00	INSULATOR, L MOTOR	
154	3-684-178-01	GEAR, INTERNAL		174	3-669-318-21	NUT, ADJUSTMENT, GUIDE	
155	3-679-104-05	GEAR		175	3-684-135-01	WASHER (UPPER), GUIDE, #7, 8	
156	X-3679-111-0	CARRIER ASSY		176	3-684-133-01	SLEEVE, GUIDE, #7, 8	
157	3-669-465-00	WASHER (1.5), STOPPER		177	X-3684-113-1	ARM ASSY, PINCH PRESS	
158	3-684-151-01	GEAR		178	3-684-290-01	SPRING, COMPRESSION	
159	3-681-231-00	SCREW (+PW 2.6X8), TAPPING		179	X-3684-109-1	ARM ASSY, PINCH SOLENOID	
160	X-3684-119-1	ARM ASSY, GEAR		180	3-669-595-00	WASHER (2), STOPPER	
161	3-679-115-00	GEAR (LARGE), LOADING		181	*X-3684-112-1	ARM ASSY, PINCH LIMITER	182
162	3-669-480-11	+ PTPWH 2		182	3-515-170-00	SPRING, TENSION	
163	3-684-167-01	ARM, STOPPER		183	Δ1-454-349-41	SOLENOID, PLUNGER (PINCH)(PM901)	
164	3-684-227-01	SPRING, TENSION		184	3-669-607-00	+PSW (SMALL ROUND) 2.6	
165	3-684-116-01	LIMITER, STOPPER		185	1-464-329-31	SENSOR, T COIL (L902)	
166	X-3684-129-1	CHASSIS ASSY, PLANET GEAR		186	*3-684-119-01	LINK, TAKE-UP SENSOR	
167	*X-3684-114-1	LEVER ASSY, COMMUNICATION		187	3-684-157-04	SPRING (T SENSOR), TENSION	
168	X-3669-321-0	GEAR (C) ASSY		188	3-681-154-00	SPRING, TORSION	
169	3-679-114-00	GEAR (SMALL), LOADING		189	3-701-436-11	WASHER, 1.6	
170	X-3679-268-1	MOTOR ASSY, L (LOADING/THREADING) (M904)		190	X-3687-503-1	ARM ASSY, REVIEW BRAKE	189

5-5. CHASSIS ASSEMBLY 2

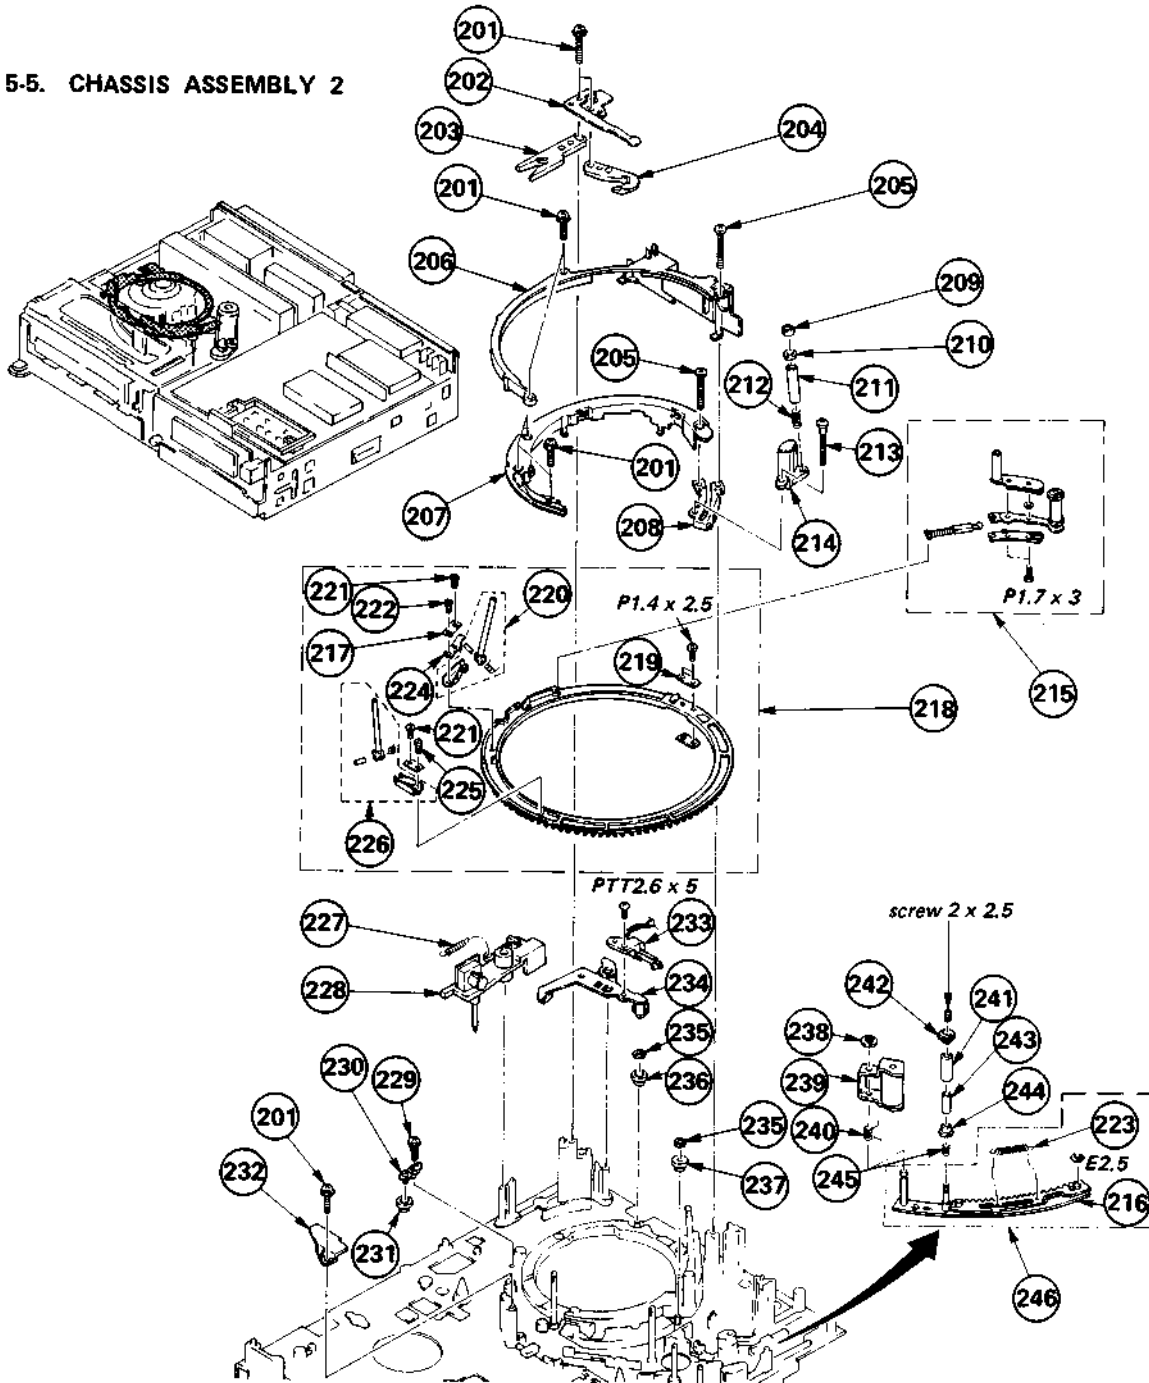


No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
201	3-669-480-11	+ PTPWH 2		224	3-672-583-00	SPRING	
202	*3-684-158-01	PLATE, GROUND, TAPE GUIDE		225	3-672-586-00	SCREW (1.4X3), TAPPING	
203	*3-669-618-00	PLATE (2), ADJUST		226	*X-3669-429-0	HOLDER BLOCK ASSY, #2 GUIDE	
204	*3-672-507-00	PLATE (3-1), ADJUSTMENT		227	3-684-161-01	SPRING (S SENSOR), TENSION	
205	3-669-466-21	SCREW (M 2.6)		228	1-464-330-11	SENSOR, S COIL (L901)	
206	3-684-217-01	GUIDE (2), SHUTTLE		229	3-669-607-31	+PSW (SMALL ROUND) (2.6)	
207	*3-679-290-00	GUIDE (1-YA), SHUTTLE		230	*X-3669-329-0	PLATE ASSY, ADJUSTMENT	
208	*X-3679-263-1	BASE ASSY, SLANT		231	3-669-360-00	ROLLER, RING	
209	3-669-446-00	NUT, GUIDE, NO. 6		232	3-669-476-04	PLATE, GUIDE	
210	3-679-910-00	FLANGE (S), GUIDE, NUMBER 6		233	1-554-840-11	SWITCH, LEAF (THREADING END) (S903)	
211	3-669-445-00	SPACER, GUIDE, NO. 6		234	*X-3684-130-1	ARM ASSY, LOCK	
212	3-669-615-00	SPRING, COMPRESSION		235	3-669-465-00	WASHER (1.5), STOPPER	
213	3-669-606-00	SCREW (2.6)		236	3-669-630-00	ROLLER (C), RING	
214	8-825-508-10	HEAD, FE (FULL ERASE HEAD)		237	3-669-597-00	ROLLER (B), RING	
215	A-6750-158-8	SHUTTLE (2) BLOCK ASSY		238	3-669-596-00	WASHER (2.3), STOPPER	
216	*X-3679-265-1	SLIDER ASSY (2), T		239	X-3679-264-1	ARM ASSY, PINCH ROLLER	
217	*3-669-472-02	RETAINER, SPRING, LEAF		240	3-683-441-01	SPRING	
218	X-3679-150-0	RING (YA) ASSY, S LOADING	217, 219-222 224-226	241	3-676-649-11	ROLLER (#9), GUIDE	
219	*3-669-616-00	RETAINER		242	3-676-650-00	FLANGE (UPPER) (#9), GUIDE	
220	*X-3669-430-0	HOLDER BLOCK ASSY, #3 GUIDE		243	3-672-559-00	SLEEVE, GUIDE	
221	3-669-478-00	SCREW (1X3), TAPPING		244	3-672-558-00	FLANGE (LOWER) (#9), GUIDE	
222	3-669-479-11	SCREW (1.4X3.5), TAPPING		245	3-669-452-00	SPRING, COMPRESSION	
223	3-549-014-00	SPRING, TENSION		246	A-6750-165-A	GEAR ASSY, SLIDER	216, 223

5-6. DRUM ASSEMBLY

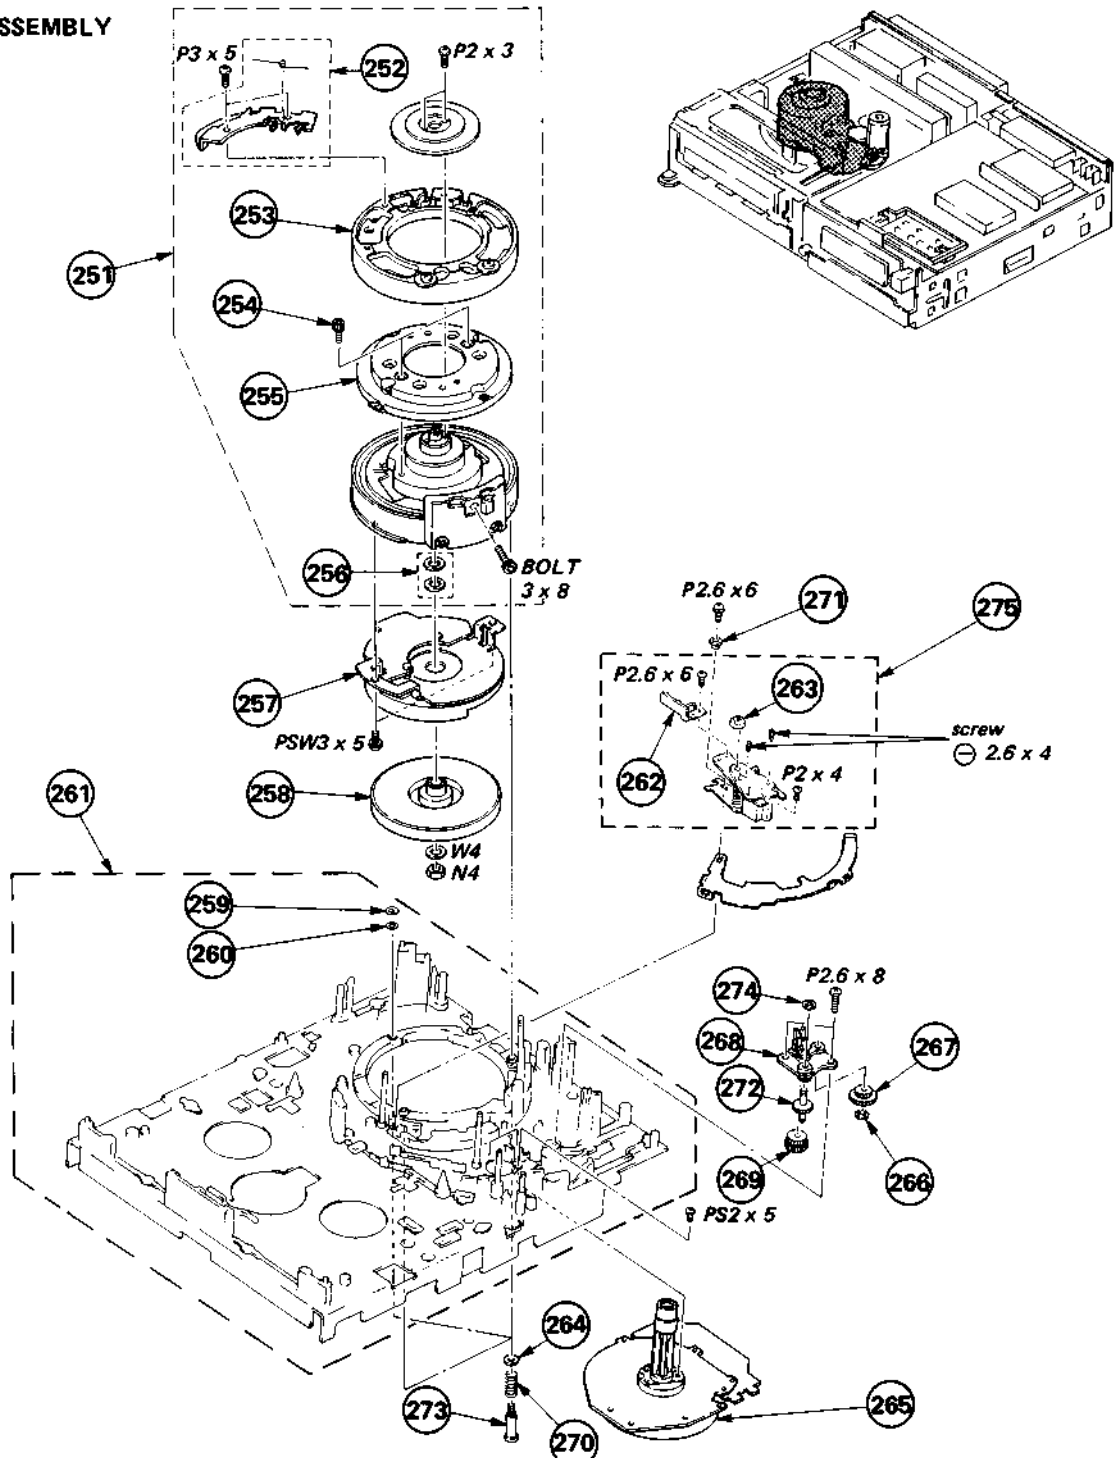

No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
251	A-6050-282-A	DRUM ASSY (DSM-52A-R)		264	3-669-600-11	WASHER, FLAT(3,5)	
252	A-6760-066-B	SPRING ASSY, TAPE RETAINER	252-256	265	8-838-080-01	MOTOR, DC(BHF-1908B)(CAPSTAN MOTOR)(M902)	
253	A-6760-138-A	DRUM ASSY, UPPER		266	3-669-465-00	WASHER (1,5), STOPPER	
254	3-669-157-00	BOLT (WASHER)(2.6X8)		267	3-669-337-00	GEAR (D)	
255	A-6762-190-A	DISK ASSY		268	X-3679-147-0	CHASSIS (B) ASSY, DRIVE GEAR	
256	X-3669-105-0	SPACE BLOCK ASSY		269	3-669-338-00	GEAR (E)	
257	X-2621-204-2	STATOR ASSY, D		270	3-429-123-00	SPRING	
258	X-2621-202-0	ROTOR ASSY, D		271	3-684-247-01	BUSHING, ACE	
259	3-669-646-00	SPACER, DRUM		272	X-3684-166-1	GEAR(F) ASSY(C)	
260	3-669-646-11	SPACER, DRUM		273	3-669-302-00	SCREW, FITTING	
261	*X-3687-505-1	CHASSIS ASSY, MECHANICAL	259, 260	274	3-669-595-00	WASHER (2), STOPPER	
262	3-684-140-01	PROTECTOR		275	A-6761-075-A	ACE ASSY	262, 263
263	*3-684-246-02	NUT, ADJUSTMENT, HEIGHT, ACE					

5-7. REEL BLOCK ASSEMBLY

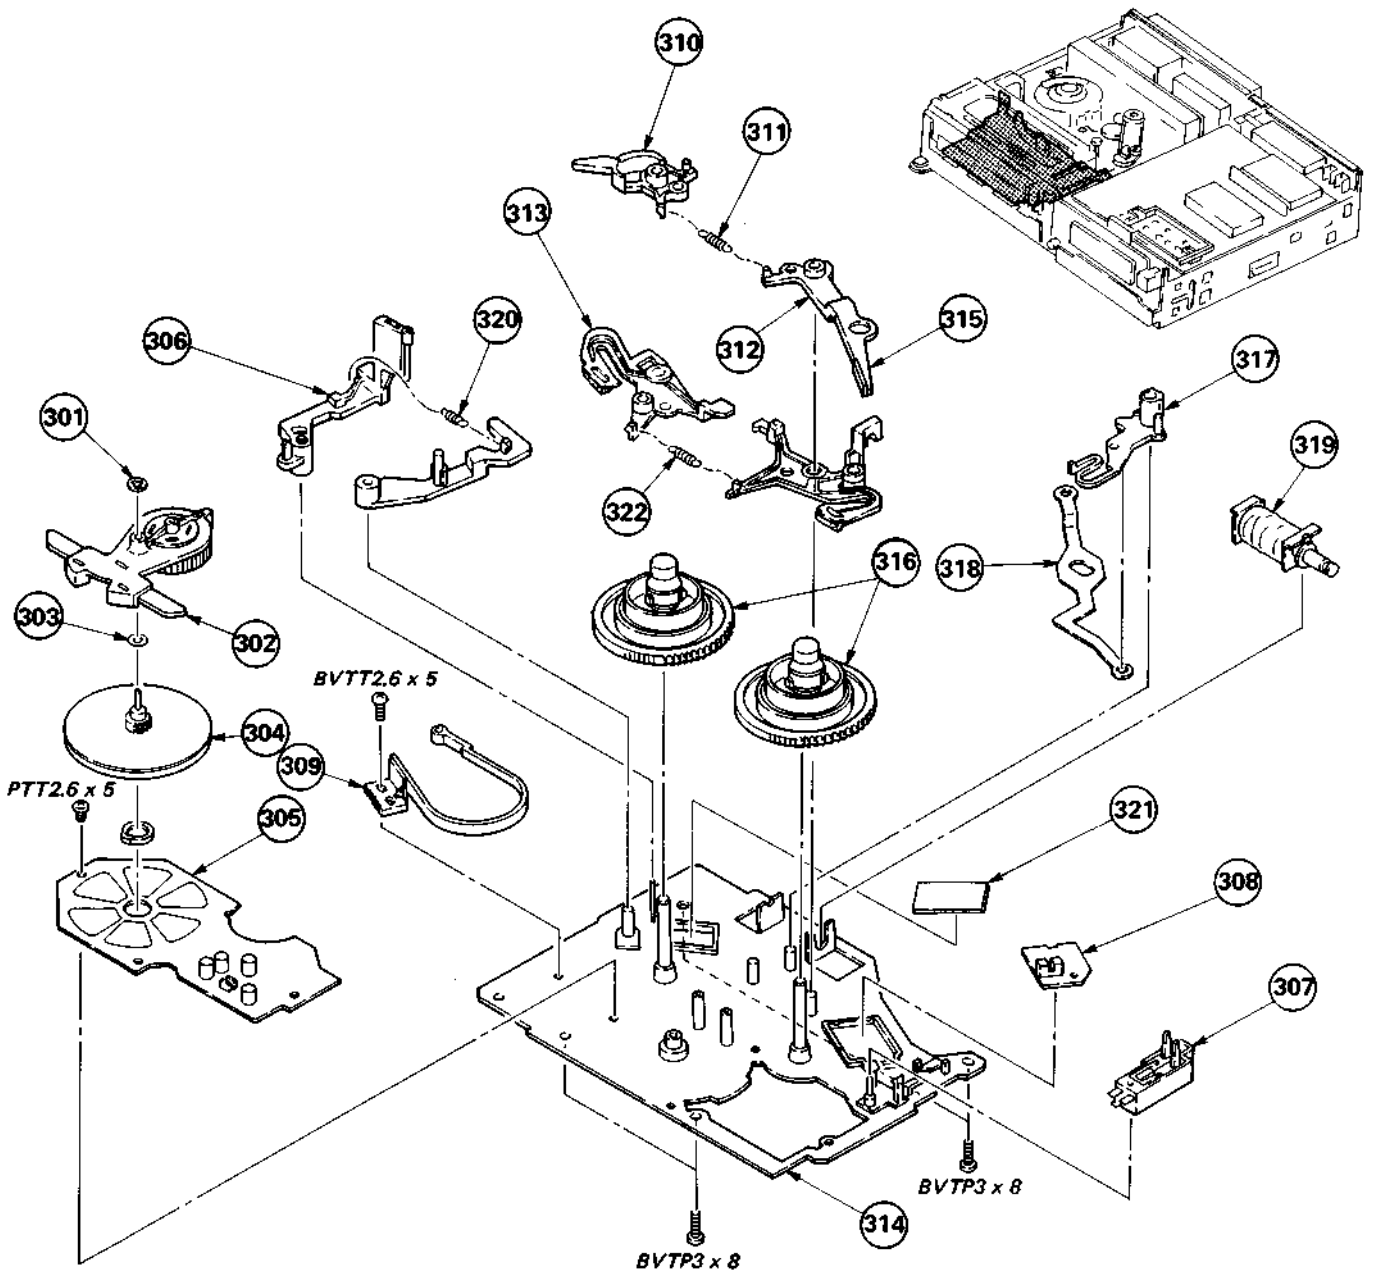

No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
301	3-669-595-00	WASHER (2), STOPPER		312	X-3684-137-1	BRAKE ASSY, T SOFT	
302	A-6759-074-A	ARM BLOCK ASSY, PENDULUM		313	X-3684-107-1	BRAKE ASSY, SUPPLY	
303	3-679-318-00	WASHER, PENDULUM ARM		314	*X-3684-131-1	CHASSIS ASSY, SUB	
304	X-2622-201-0	ROTOR ASSY, R		315	X-3684-108-1	BRAKE ASSY, TAKE-UP	
305	*A-4910-049-A	R STATOR BOARD, COMPLETE (REEL MOTOR) (M903)		316	X-3684-106-1	TABLE ASSY, REEL	
306	X-3684-121-1	LEVER ASSY, TENSION REGULATOR		317	3-684-193-01	ARM, PENDULUM STOPPER	
307	1-554-839-11	SWITCH, LEAF (2 GANG) (S901) (REC PROOF/CASSETTE DOWN)		318	*3-684-183-01	LINK, L	
308	*1-613-233-11	RD-21 BOARD		319	Δ 1-454-371-31	SOLENOID, PLUNGER (BRAKE) (PM902)	
309	X-3679-120-0	BAND ASSY, TENSION REGULATOR		320	3-679-151-00	SPRING, TENSION	
310	3-684-192-01	ARM, BRAKE, SUPPLY SOFT		321	*1-613-232-11	RD-20 BOARD	
311	3-684-235-01	SPRING, TENSION		322	3-685-772-01	SPRING, TENSION	

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

5.8. HARDWARE LIST

SCREW

7-621-770-67 SCREW +P 2.6X6
7-621-759-35 +PSW, 2.6X5
7-621-759-85 +PSW, 2.6X12
7-627-551-28 SCREW, PRECISION +P 1.4X2.5
7-627-552-38 SCREW, PRECISION +P 1.7X3

7-627-553-18 SCREW, PRECISION +P 2X2
7-627-553-47 SCREW, PRECISION +P 2X4
7-628-253-15 SCREW +PS 2X5
7-628-253-95 SCREW +PS 2.6X4
7-628-254-15 SCREW +PS 2.6X6

7-685-134-14 SCREW +P 2.6X8 TYPE2 NON-SLIT
7-685-135-14 SCREW +P 2.6X10 TYPE2 NON-SLIT
7-685-645-71 SCREW +BVTP 3X6 TYPE2 IT-3
7-685-645-81 SCREW +BVTP 3X6 TYPE2
7-685-646-71 SCREW +BVTP 3X8 TYPE2 IT-3

7-685-646-79 SCREW +BVTP 3X8 TYPE2 IT-3
7-685-646-81 SCREW +BVTP 3X8 TYPE2
7-685-646-89 SCREW +BVTP 3X8 TYPE2
7-685-790-04 SCREW +PTT 2.6X4 (S)
7-685-791-04 SCREW +PTT 2.6X5 (S)

7-685-791-04 SCREW +BVTT 2.6X5 (S)

SET-SCREW

7-621-710-25 SET-SCREW, SLOT 2X3 CONE POINT
7-621-731-08 SET-SCT, HEX. 2X2.5, FLAT POINT
7-621-732-08 SET-SCT, HEX. 2X3 FLAT POINT
7-683-174-21 SET-SCREW, SLOT 3X4 CONE POINT

RING

7-624-118-01 RING, RETAINING E-2.5
7-624-190-61 STOP RING 2.4, TYPE-CS

TAPPING

7-685-105-14 TPG +P 2X8, TYPE 2, NON-SLIT

R STATOR TM

SECTION 6 ELECTRICAL PARTS LIST

NOTE:

The components identified by shading and mark **△** are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
 - All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
 - Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS**
- MF : μ F, PF : μ μ F
- COILS**
- MMH : mH, Ω H : μ H
- RESISTORS**
- All resistors are in ohms
 - F : nonflammable

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
	*A-4910-049-A	R STATOR BOARD, COMPLETE (REEL MOTOR)		C011	1-161-773-00	CERAMIC	0.1MF 20% 25V
		*****		C012	1-123-308-00	ELECT	220MF 20% 10V
	*1-560-460-00	PIN, CONNECTOR 4P		<u>DIODE</u>			
		<u>CAPACITOR</u>		D001	8-719-812-31	DIODE TLR123	
C1	1-123-821-00	ELECT	47MF 20% 16V	D002	8-719-911-19	DIODE 1SS119	
C2	1-123-821-00	ELECT	47MF 20% 16V	D003	8-719-911-19	DIODE 1SS119	
C3	1-123-821-00	ELECT	47MF 20% 16V	D004	8-719-162-07	DIODE RD6.2E-B	
C4	1-123-821-00	ELECT	47MF 20% 16V	D005	8-719-162-07	DIODE RD6.2E-B	
		<u>DIODE</u>		<u>FLUORESCENT INDICATOR</u>			
D1	8-719-941-48	DIODE 1N4148TP		FLO01	1-519-322-11	INDICATOR, FLUORESCENT	
		<u>IC</u>		<u>IC</u>			
IC1	8-759-108-77	IC CX877		IC001	8-759-911-09	IC MB88525B-112M	
		<u>TRANSISTOR</u>		IC002	8-759-913-41	IC S-8054ALB	
Q1	8-729-100-01	TRANSISTOR 2SD992-N		<u>COIL</u>			
Q2	8-729-100-01	TRANSISTOR 2SD992-N		L001	1-407-492-00	MICRO INDUCTOR 1MMH	
Q3	8-729-100-01	TRANSISTOR 2SD992-N		L002	1-407-177-XX	MICRO INDUCTOR 470UH	
Q4	8-729-100-01	TRANSISTOR 2SD992-N		<u>TRANSISTOR</u>			
Q5	8-729-100-01	TRANSISTOR 2SD992-N		Q001	8-729-245-83	TRANSISTOR 2SC2458	
Q6	8-729-100-01	TRANSISTOR 2SD992-N		Q002	8-729-245-83	TRANSISTOR 2SC2458	
		<u>RESISTOR</u>		Q003	8-729-204-83	TRANSISTOR 2SA1048-GR	
R1	1-247-823-00	CARBON	470 5% 1/6W	Q004	8-729-900-89	TRANSISTOR DTC144ES	
R2	1-247-823-00	CARBON	470 5% 1/6W	Q005	8-729-245-83	TRANSISTOR 2SC2458	
R3	1-247-823-00	CARBON	470 5% 1/6W	<u>RESISTOR</u>			
R4	1-247-829-00	CARBON	820 5% 1/6W	R001	1-247-867-00	CARBON	33K 5% 1/6W
R5	1-247-871-00	CARBON	47K 5% 1/6W	R002	1-247-874-00	CARBON	62K 5% 1/6W
R6	1-247-871-00	CARBON	47K 5% 1/6W	R003	1-247-872-00	CARBON	51K 5% 1/6W
R7	1-247-871-00	CARBON	47K 5% 1/6W	R004	1-247-873-00	CARBON	56K 5% 1/6W
R8	1-247-871-00	CARBON	47K 5% 1/6W	R005	1-247-869-00	CARBON	39K 5% 1/6W
		<u>DIODE</u>		R006	1-247-885-00	CARBON	180K 5% 1/6W
S1	8-719-810-31	DIODE THS103-1		R007	1-247-879-00	CARBON	100K 5% 1/6W
S2	8-719-810-31	DIODE THS103-1		R008	1-247-867-00	CARBON	33K 5% 1/6W
*****				R010	1-247-879-00	CARBON	100K 5% 1/6W
	*A-6707-439-A	TM BOARD, COMPLETE		R024	1-247-867-00	CARBON	33K 5% 1/6W
		*****		R025	1-247-833-00	CARBON	1.2K 5% 1/6W
		<u>CAPACITOR</u>		R026	1-247-883-00	CARBON	150K 5% 1/6W
C001	1-123-382-00	ELECT	3.3MF 20% 50V	R027	1-247-883-00	CARBON	150K 5% 1/6W
C003	1-125-299-00	DOUBLE LAYER	47000MF 5.5V	R028	1-247-883-00	CARBON	150K 5% 1/6W
C004	1-161-773-00	CERAMIC	0.1MF 20% 25V	R029	1-247-883-00	CARBON	150K 5% 1/6W
C005	1-102-525-00	CERAMIC	68PF 5% 50V	R030	1-247-883-00	CARBON	150K 5% 1/6W
C006	1-102-852-00	CERAMIC	47PF 5% 50V	R031	1-247-883-00	CARBON	150K 5% 1/6W
C008	1-123-357-00	ELECT	22MF 20% 50V	R032	1-247-883-00	CARBON	150K 5% 1/6W
C009	1-161-055-00	CERAMIC	0.022MF 10% 50V	R033	1-247-883-00	CARBON	150K 5% 1/6W
C010	1-161-055-00	CERAMIC	0.022MF 10% 50V	R034	1-247-883-00	CARBON	150K 5% 1/6W
				R035	1-247-883-00	CARBON	150K 5% 1/6W
				R036	1-247-883-00	CARBON	150K 5% 1/6W
				R037	1-247-883-00	CARBON	150K 5% 1/6W
				R038	1-247-883-00	CARBON	150K 5% 1/6W

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
R039	1-247-883-00	CARBON	150K 5% 1/6W	C506	1-123-318-00	ELECT	33MF 20% 10V
R040	1-247-883-00	CARBON	150K 5% 1/6W	C507	1-161-773-00	CERAMIC	0.1MF 20% 25V
R041	1-247-883-00	CARBON	150K 5% 1/6W	C508	1-161-773-00	CERAMIC	0.1MF 20% 25V
R042	1-247-883-00	CARBON	150K 5% 1/6W	C509	1-161-059-00	CERAMIC	0.047MF 20% 25V
R043	1-247-883-00	CARBON	150K 5% 1/6W	C510	1-161-059-00	CERAMIC	0.047MF 20% 25V
R044	1-247-883-00	CARBON	150K 5% 1/6W	C511	1-161-059-00	CERAMIC	0.047MF 20% 25V
R045	1-247-839-00	CARBON	2.2K 5% 1/6W	C512	1-102-953-00	CERAMIC	18PF 5% 50V
R046	1-247-827-00	CARBON	680 5% 1/6W	C513	1-102-953-00	CERAMIC	18PF 5% 50V
R047	1-247-847-00	CARBON	4.7K 5% 1/6W	C514	1-123-381-00	ELECT	2.2MF 20% 50V
R048	1-247-863-00	CARBON	22K 5% 1/6W	C515	1-161-047-00	CERAMIC	0.0047MF 10% 25V
<u>VARIABLE RESISTOR</u>				C516	1-161-055-00	CERAMIC	0.022MF 10% 25V
RV001	1-228-749-00	RES, ADJ, CARBON 22K		C517	1-123-356-00	ELECT	10MF 20% 16V
<u>SWITCH</u>				C518	1-102-953-00	CERAMIC	18PF 5% 50V
S002	1-554-174-00	SWITCH, KEY BOARD		C519	1-161-013-00	CERAMIC	0.01MF 20% 25V
S004	1-554-174-00	SWITCH, KEY BOARD		C520	1-161-013-00	CERAMIC	0.01MF 20% 25V
S012	1-554-174-00	SWITCH, KEY BOARD		C521	1-123-356-00	ELECT	10MF 20% 16V
<u>CERAMIC TRIMMER</u>				C522	1-102-114-00	CERAMIC	470PF 10% 50V
TC001	1-141-022-21	CAP, TRIMMER, CERAMIC		C523	1-161-055-00	CERAMIC	0.022MF 10% 25V
<u>CRYSTAL</u>				C524	1-161-055-00	CERAMIC	0.022MF 10% 25V
X001	1-567-098-00	VIBRATOR, CRYSTAL		C525	1-102-953-00	CERAMIC	18PF 5% 50V
*****				C526	1-161-057-00	CERAMIC	0.033MF 10% 25V
*1-613-222-11 TM-70 BOARD				C527	1-161-773-00	CERAMIC	0.1MF 20% 25V
*****				C529	1-123-380-00	ELECT	1MF 20% 50V
<u>SWITCH</u>				C530	1-123-380-00	ELECT	1MF 20% 50V
S003	1-554-174-00	SWITCH, KEY BOARD		C532	1-123-380-00	ELECT	1MF 20% 50V
S005	1-554-174-00	SWITCH, KEY BOARD		C535	1-102-959-00	CERAMIC	22PF 5% 50V
S006	1-554-174-00	SWITCH, KEY BOARD		C537	1-102-947-00	CERAMIC	10PF 5% 50V
S007	1-554-174-00	SWITCH, KEY BOARD		C539	1-161-013-00	CERAMIC	0.01MF 20% 25V
S008	1-554-174-00	SWITCH, KEY BOARD		C542	1-161-013-00	CERAMIC	0.01MF 20% 25V
S009	1-554-174-00	SWITCH, KEY BOARD		C543	1-123-332-00	ELECT	47MF 20% 16V
S010	1-554-174-00	SWITCH, KEY BOARD		C544	1-123-332-00	ELECT	47MF 20% 16V
S011	1-554-174-00	SWITCH, KEY BOARD		C545	1-161-013-00	CERAMIC	0.01MF 20% 25V
S013	1-554-377-51	SWITCH, SLIDE		C546	1-131-500-51	TANTALUM	2.2MF 20% 16V
*****				C547	1-102-114-00	CERAMIC	470PF 10% 50V
*A-6711-534-A RP-20 BOARD, COMPLETE				C548	1-102-112-00	CERAMIC	330PF 10% 50V
*****				C549	1-161-059-00	CERAMIC	0.047MF 20% 50V
*3-687-522-01	LID, BOTTOM, SHIELD CASE, RP			C550	1-161-013-00	CERAMIC	0.01MF 20% 25V
*3-687-533-01	CASE (MAIN), SHIELD, RP			C553	1-161-059-00	CERAMIC	0.047MF 20% 25V
<u>CAPACITOR</u>				C554	1-102-128-00	CERAMIC	0.0082MF 10% 50V
C501	1-161-059-00	CERAMIC	0.047MF 20% 25V	<u>CONNECTOR</u>			
C502	1-123-330-00	ELECT	22MF 20% 16V	CN501	*1-508-736-21	PIN, CONNECTOR 10P	
C503	1-161-059-00	CERAMIC	0.047MF 20% 25V	CN502	*1-564-031-00	PIN, CONNECTOR 6P	
C504	1-161-059-00	CERAMIC	0.047MF 20% 25V	CN503	*1-508-846-00	PIN, CONNECTOR 8P	
C505	1-161-059-00	CERAMIC	0.047MF 20% 25V	CN504	*1-508-845-00	PIN, CONNECTOR 6P	
				CN505	*1-564-027-00	PIN, CONNECTOR 2P	
				<u>IC</u>			
				IC501	8-758-620-00	IC CX862	
				IC502	8-759-240-53	IC TC4053BP	
				IC503	8-751-340-00	IC CX134A	

When indicating parts by reference number, please include the board name.

RP-20 YC-31

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
<u>COIL</u>							
L501	1-408-454-00	MICRO INDUCTOR 100UH		R530	1-247-835-00	CARBON 1.5K 5%	1/6W
L502	1-408-030-00	MICRO INDUCTOR 0.68UH		R531	▲ 1-212-855-00	FUSIBLE 8.2 5%	1/4W F
L503	1-408-030-00	MICRO INDUCTOR 0.68UH		R533	1-247-847-00	CARBON 4.7K 5%	1/6W
L504	1-408-030-00	MICRO INDUCTOR 0.68UH		R534	1-247-839-00	CARBON 2.2K 5%	1/6W
L505	1-408-158-00	MICRO INDUCTOR 6.8MMH		R535	1-247-849-00	CARBON 5.6K 5%	1/6W
L506	1-408-414-00	MICRO INDUCTOR 27UH		R536	1-247-849-00	CARBON 5.6K 5%	1/6W
L507	1-408-158-0	MICRO INDUCTOR 6.8MMH		R537	1-247-809-00	CARBON 120 5%	1/6W
L508	1-408-414-00	MICRO INDUCTOR 27UH		R540	1-247-819-00	CARBON 330 5%	1/6W
L509	1-408-417-00	MICRO INDUCTOR 47UH		R543	1-247-819-00	CARBON 330 5%	1/6W
L512	1-408-454-00	MICRO INDUCTOR 100UH		R545	1-247-844-00	CARBON 3.6K 5%	1/6W
L513	1-407-717-00	MICRO INDUCTOR 1MMH		R546	1-247-844-00	CARBON 3.6K 5%	1/6W
L514	1-408-462-11	MICRO INDUCTOR 470UH		R547	1-247-828-00	CARBON 750 5%	1/6W
L515	1-408-462-11	MICRO INDUCTOR 470UH		R548	1-247-807-00	CARBON 100 5%	1/6W
L516	1-408-422-00	MICRO INDUCTOR 120UH		R549	1-247-831-00	CARBON 1K 5%	1/6W
L517	1-407-495-00	MICRO INDUCTOR 1.8MMH		R550	1-247-831-00	CARBON 1K 5%	1/6W
<u>TRANSISTOR</u>							
Q501	8-729-900-36	TRANSISTOR DTC124ES		R551	1-247-835-00	CARBON 1.5K 5%	1/6W
Q502	8-729-204-83	TRANSISTOR 2SA1048-GR		R552	1-247-835-00	CARBON 1.5K 5%	1/6W
Q503	8-729-177-43	TRANSISTOR 2SD774		R557	1-247-815-00	CARBON 220 5%	1/6W
Q504	8-729-245-83	TRANSISTOR 2SC2458		R559	1-247-839-00	CARBON 2.2K 5%	1/6W
Q508	8-729-245-83	TRANSISTOR 2SC2458		<u>VARIABLE RESISTOR</u>			
Q510	8-729-900-36	TRANSISTOR DTC124ES		RV501	1-228-920-00	RES, ADJ, CARBON 2.2K	
<u>RESISTOR</u>				RV502	1-228-920-00	RES, ADJ, CARBON 2.2K	
R503	1-247-844-00	CARBON 3.6K 5%	1/6W	RV503	1-228-920-00	RES, ADJ, CARBON 2.2K	
R504	1-247-852-00	CARBON 7.5K 5%	1/6W	*****			
R505	1-247-855-00	CARBON 10K 5%	1/6W	*A-6711-535-A	YC-31 BOARD, COMPLETE	*****	
R506	1-247-831-00	CARBON 1K 5%	1/6W	*1-536-870-11	TERMINAL BOARD, CONTROL PANEL		
R507	1-247-867-00	CARBON 33K 5%	1/6W	<u>BAND PASS FILTER</u>			
R508	1-247-863-00	CARBON 22K 5%	1/6W	BPF001	1-235-098-00	FILTER, BAND PASS	
R509	1-247-863-00	CARBON 22K 5%	1/6W	<u>CAPACITOR</u>			
R510	1-247-871-00	CARBON 47K 5%	1/6W	C002	1-123-356-00	ELECT 10MF 20%	16V
R511	1-247-867-00	CARBON 33K 5%	1/6W	C010	1-123-356-00	ELECT 10MF 20%	16V
R512	1-247-867-00	CARBON 33K 5%	1/6W	C011	1-123-356-00	ELECT 10MF 20%	25V
R513	1-247-867-00	CARBON 33K 5%	1/6W	C013	1-123-306-00	ELECT 47MF 20%	10V
R514	1-247-867-00	CARBON 33K 5%	1/6W	C014	1-123-381-00	ELECT 2.2MF 20%	50V
R515	1-247-831-00	CARBON 1K 5%	1/6W	C015	1-123-306-00	ELECT 47MF 20%	10V
R517	1-247-824-00	CARBON 510 5%	1/6W	C016	1-108-589-00	MYLAR 0.027MF 5%	50V
R518	1-247-821-00	CARBON 390 5%	1/6W	C017	1-101-004-00	CERAMIC 0.01MF 50V	
R519	1-247-779-00	CARBON 6.8 5%	1/6W	C018	1-123-306-00	ELECT 47MF 20%	10V
R520	1-247-822-00	CARBON 430 5%	1/6W	C019	1-101-004-00	CERAMIC 0.01MF 50V	
R521	1-247-855-00	CARBON 10K 5%	1/6W	C020	1-101-004-00	CERAMIC 0.01MF 50V	
R522	▲ 1-212-855-00	FUSIBLE 8.2 5%	1/4W F	C021	1-101-004-00	CERAMIC 0.01MF 50V	
R523	1-247-839-00	CARBON 2.2K 5%	1/6W	C023	1-101-882-00	CERAMIC 51PF 5%	50V
R524	1-247-839-00	CARBON 2.2K 5%	1/6W	C024	1-130-047-00	FILM 180PF 5%	50V
R525	1-247-839-00	CARBON 2.2K 5%	1/6W	C025	1-106-172-00	MYLAR 0.001MF 5%	50V
R526	1-247-839-00	CARBON 2.2K 5%	1/6W	C026	1-101-059-00	CERAMIC 510PF 5%	50V
R527	1-247-831-00	CARBON 1K 5%	1/6W	C027	1-161-045-00	CERAMIC 0.0033MF 10%	25V
R528	1-247-831-00	CARBON 1K 5%	1/6W	C028	1-106-172-00	MYLAR 0.001MF 5%	50V
R529	1-247-825-00	CARBON 560 5%	1/6W				

The components identified by shading and mark ▲ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description		Remark	Ref.No	Part No.	Description		Remark		
C029	1-123-382-00	ELECT	3.3MF	20%	50V	C085	1-101-004-00	CERAMIC	0.01MF	50V	
C031	1-101-004-00	CERAMIC	0.01MF		50V	C086	1-108-557-00	MYLAR	0.0012MF	5%	50V
C032	1-102-816-00	CERAMIC	120PF	5%	50V	C087	1-161-057-00	CERAMIC	0.033MF	10%	25V
C033	1-101-004-00	CERAMIC	0.01MF		50V	C088	1-101-361-00	CERAMIC	150PF	5%	50V
C034	1-101-004-00	CERAMIC	0.01MF		50V	C092	1-101-004-00	CERAMIC	0.01MF		50V
C035	1-102-816-00	CERAMIC	120PF	5%	50V	C093	1-101-006-00	CERAMIC	0.047MF		50V
C036	1-101-882-00	CERAMIC	51PF	5%	50V	C095	1-102-976-00	CERAMIC	180PF	5%	50V
C037	1-101-004-00	CERAMIC	0.01MF		50V	C096	1-102-824-00	CERAMIC	470PF	5%	50V
C038	1-101-004-00	CERAMIC	0.01MF		50V	C097	1-102-823-00	CERAMIC	430PF	5%	50V
C039	1-101-004-00	CERAMIC	0.01MF		50V	C098	1-102-820-00	CERAMIC	330PF	5%	50V
C040	1-101-004-00	CERAMIC	0.01MF		50V	C099	1-102-851-00	CERAMIC	15PF	5%	50V
C041	1-161-043-00	CERAMIC	0.0022MF	10%	25V	C100	1-161-025-00	CERAMIC	0.1MF	10%	25V
C042	1-102-516-00	CERAMIC	27PF	5%	50V	C101	1-108-595-00	MYLAR	0.047MF	5%	50V
C043	1-101-004-00	CERAMIC	0.01MF		50V	C102	1-161-043-00	CERAMIC	0.0022MF	10%	25V
C044	1-101-004-00	CERAMIC	0.01MF		50V	C103	1-106-172-00	MYLAR	0.001MF	5%	50V
C045	1-102-523-00	CERAMIC	56PF	5%	50V	C104	1-102-977-00	CERAMIC	200PF	5%	50V
C046	1-101-004-00	CERAMIC	0.01MF		50V	C105	1-102-973-00	CERAMIC	100PF	5%	50V
C047	1-101-004-00	CERAMIC	0.01MF		50V	C106	1-123-356-00	ELECT	10MF	20%	16V
C048	1-101-004-00	CERAMIC	0.01MF		50V	C107	1-161-025-00	CERAMIC	0.1MF	10%	25V
C049	1-101-004-00	CERAMIC	0.01MF		50V	C108	1-101-004-00	CERAMIC	0.01MF		50V
C050	1-102-865-00	CERAMIC	8PF	0.5PF	50V	C109	1-101-004-00	CERAMIC	0.01MF		50V
C051	1-102-525-00	CERAMIC	68PF	5%	50V	C111	1-101-882-00	CERAMIC	51PF	5%	50V
C052	1-102-525-00	CERAMIC	68PF	5%	50V	C112	1-101-004-00	CERAMIC	0.01MF		50V
C053	1-123-380-00	ELECT	1MF	20%	50V	C113	1-101-006-00	CERAMIC	0.047MF		50V
C054	1-161-002-00	CERAMIC	0.0012MF	10%	25V	C114	1-101-880-00	CERAMIC	47PF	5%	50V
C055	1-123-380-00	ELECT	1MF	20%	50V	C116	1-101-004-00	CERAMIC	0.01MF		50V
C056	1-102-962-00	CERAMIC	30PF	5%	50V	C117	1-101-361-00	CERAMIC	150PF	5%	50V
C057	1-102-981-00	CERAMIC	300PF	5%	50V	C118	1-101-004-00	CERAMIC	0.01MF		50V
C058	1-123-306-00	ELECT	47MF	20%	10V	C119	1-123-306-00	ELECT	47MF	20%	10V
C059	1-101-004-00	CERAMIC	0.01MF		50V	C120	1-101-004-00	CERAMIC	0.01MF		50V
C060	1-108-579-00	MYLAR	0.01MF	5%	50V	C121	1-101-004-00	CERAMIC	0.01MF		50V
C061	1-123-382-00	ELECT	3.3MF	20%	50V	C122	1-101-004-00	CERAMIC	0.01MF		50V
C062	1-123-306-00	ELECT	47MF	20%	10V	C123	1-101-004-00	CERAMIC	0.01MF		50V
C063	1-101-004-00	CERAMIC	0.01MF		50V	C124	1-102-518-00	CERAMIC	33PF	5%	50V
C064	1-102-521-00	CERAMIC	43PF	5%	50V	C125	1-123-330-00	ELECT	22MF	20%	16V
C065	1-102-527-00	CERAMIC	82PF	5%	50V	C127	1-123-318-00	ELECT	33MF	20%	16V
C066	1-102-518-00	CERAMIC	33PF	5%	50V	C128	1-123-330-00	ELECT	22MF	20%	16V
C067	1-161-025-00	CERAMIC	0.1MF	10%	25V	C129	1-123-330-00	ELECT	22MF	20%	16V
C068	1-101-004-00	CERAMIC	0.01MF		50V	C130	1-123-356-00	ELECT	10MF	20%	16V
C069	1-102-962-00	CERAMIC	30PF	5%	50V	C131	1-123-380-00	ELECT	1MF	20%	50V
C070	1-101-004-00	CERAMIC	0.01MF		50V	C132	1-123-369-00	ELECT	4.7MF	20%	25V
C071	1-123-380-00	ELECT	1MF	20%	50V	C133	1-102-851-00	CERAMIC	15PF	5%	50V
C072	1-101-004-00	CERAMIC	0.01MF		50V	C134	1-102-821-00	CERAMIC	360PF	5%	50V
C073	1-102-525-00	CERAMIC	68PF	5%	50V	C135	1-102-823-00	CERAMIC	430PF	5%	50V
C074	1-102-525-00	CERAMIC	68PF	5%	50V	C136	1-102-976-00	CERAMIC	180PF	5%	50V
C075	1-101-004-00	CERAMIC	0.01MF		50V	C137	1-102-513-00	CERAMIC	18PF	5%	50V
C076	1-102-951-00	CERAMIC	15PF	5%	50V	C138	1-102-529-00	CERAMIC	100PF	5%	50V
C077	1-123-330-00	ELECT	22MF	20%	16V	C139	1-102-530-00	CERAMIC	120PF	5%	50V
C078	1-123-330-00	ELECT	22MF	20%	16V	C140	1-102-519-00	CERAMIC	36PF	5%	50V
C080	1-101-004-00	CERAMIC	0.01MF		50V	C141	1-102-529-00	CERAMIC	100PF	5%	50V
C082	1-161-024-00	CERAMIC	0.082MF	10%	25V	C142	1-123-369-00	ELECT	4.7MF	20%	25V
C083	1-102-977-00	CERAMIC	200PF	5%	50V	C144	1-102-511-00	CERAMIC	13PF	5%	50V
C084	1-123-369-00	ELECT	4.7MF	20%	25V	C145	1-102-522-00	CERAMIC	51PF	5%	50V

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description			Remark	Ref.No	Part No.	Description			Remark
C146	1-102-522-00	CERAMIC	51PF	5%	50V	C408	1-101-888-00	CERAMIC	68PF	5%	50V
C147	1-102-511-00	CERAMIC	13PF	5%	50V	C409	1-123-381-00	ELECT	2.2MF	20%	50V
C148	1-101-006-00	CERAMIC	0.047MF		50V	C410	1-102-936-00	CERAMIC	3PF	0.25PF	50V
C156	1-101-004-00	CERAMIC	0.01MF		50V	C411	1-101-005-00	CERAMIC	0.022MF		50V
C156	1-101-004-00	CERAMIC	0.01MF		50V	C412	1-123-318-00	ELECT	33MF	20%	16V
C157	1-102-981-00	CERAMIC	300PF	5%	50V	C414	1-123-318-00	ELECT	33MF	20%	16V
C158	1-102-948-00	CERAMIC	11PF	5%	50V	C415	1-123-356-00	ELECT	10MF	20%	16V
C159	1-102-822-00	CERAMIC	390PF	5%	50V	C416	1-102-948-00	CERAMIC	11PF	5%	50V
C178	1-123-330-00	ELECT	22MF	20%	16V	C417	1-102-948-00	CERAMIC	11PF	5%	50V
C179	1-123-356-00	ELECT	10MF	20%	16V	C418	1-102-965-00	CERAMIC	39PF	5%	50V
C180	1-123-332-00	ELECT	47MF	20%	16V	C420	1-123-369-00	ELECT	4.7MF	20%	25V
C181	1-106-186-00	MYLAR	0.0039MF	5%	50V	C421	1-101-006-00	CERAMIC	0.047MF		50V
C182	1-123-380-00	ELECT	1MF	20%	50V	C501	1-101-004-00	CERAMIC	0.01MF		50V
C183	1-101-006-00	CERAMIC	0.047MF		50V	C502	1-101-004-00	CERAMIC	0.01MF		50V
C184	1-123-332-00	ELECT	47MF	20%	16V	C503	1-101-004-00	CERAMIC	0.01MF		50V
C185	1-123-333-00	ELECT	100MF	20%	16V	C504	1-101-005-00	CERAMIC	0.022MF		50V
C186	1-101-004-00	CERAMIC	0.01MF		50V	C505	1-102-822-00	CERAMIC	390PF	5%	50V
C187	1-123-330-00	ELECT	22MF	20%	16V	C506	1-101-006-00	CERAMIC	0.047MF		50V
C188	1-161-025-00	CERAMIC	0.1MF	10%	25V	C507	1-123-318-00	ELECT	33MF	20%	16V
C189	1-123-356-00	ELECT	10MF	20%	16V	C607	1-101-004-00	CERAMIC	0.01MF		50V
C190	1-123-311-00	ELECT	1000MF	20%	10V	C608	1-161-059-00	CERAMIC	0.047MF	10%	25V
C191	1-101-004-00	CERAMIC	0.01MF		50V	C609	1-101-006-00	CERAMIC	0.047MF		50V
C192	1-123-369-00	ELECT	4.7MF	20%	25V	C611	1-101-006-00	CERAMIC	0.047MF		50V
C196	1-123-380-00	ELECT	1MF	20%	50V	C613	1-101-004-00	CERAMIC	0.01MF		50V
C197	1-123-356-00	ELECT	10MF	20%	16V	C616	1-101-518-00	CERAMIC	33PF	5%	50V
C198	1-102-973-00	CERAMIC	100PF	5%	50V	C617	1-161-025-00	CERAMIC	0.1MF	10%	25V
C200	1-101-004-00	CERAMIC	0.01MF		50V	C618	1-161-025-00	CERAMIC	0.1MF	10%	25V
C201	1-123-356-00	ELECT	10MF	20%	16V	C619	1-161-025-00	CERAMIC	0.1MF	10%	25V
C203	1-101-004-00	CERAMIC	0.01MF		50V	C620	1-102-516-00	CERAMIC	27PF	5%	50V
C204	1-123-369-00	ELECT	4.7MF	20%	25V						
C206	1-101-004-00	CERAMIC	0.01MF		50V	<u>FILTER</u>					
C207	1-161-025-00	CERAMIC	0.1MF	10%	25V	CF001	1-527-998-00	FILTER, CERAMIC			
C208	1-123-356-00	ELECT	10MF	20%	16V	CF002	1-527-875-00	FILTER, CERAMIC			
C211	1-123-356-00	ELECT	10MF	20%	16V	CF003	1-527-849-00	FILTER, CERAMIC			
C212	1-123-333-00	ELECT	100MF	20%	16V	<u>CONNECTOR</u>					
C217	1-161-025-00	CERAMIC	0.1MF	10%	25V	CN001	*1-560-894-00	PIN, CONNECTOR 6P			
C219	1-123-356-00	ELECT	10MF	20%	16V	CN002	*1-560-896-00	PIN, CONNECTOR 8P			
C220	1-161-059-00	CERAMIC	0.047MF	10%	25V	CN003	*1-560-891-00	PIN, CONNECTOR 3P			
C241	1-161-025-00	CERAMIC	0.1MF	10%	25V	CN004	*1-560-894-00	PIN, CONNECTOR 6P			
C243	1-161-025-00	CERAMIC	0.1MF	10%	25V	CN005	*1-560-893-00	PIN, CONNECTOR 5P			
C246	1-161-025-00	CERAMIC	0.1MF	10%	25V	CN006	*1-560-893-00	PIN, CONNECTOR 5P			
C248	1-161-059-00	CERAMIC	0.047MF	10%	25V	CN007	*1-560-892-00	PIN, CONNECTOR 4P			
C251	1-161-059-00	CERAMIC	0.047MF	10%	25V	CN008	*1-560-895-00	PIN, CONNECTOR 7P			
C252	1-101-081-00	CERAMIC	130PF	5%	50V	<u>TRIMMER</u>					
C257	1-161-059-00	CERAMIC	0.047MF	10%	25V	CV001	1-141-275-00	CAP, TRIMMER			
C258	1-161-059-00	CERAMIC	0.047MF	10%	25V	<u>DIODE</u>					
C401	1-123-381-00	ELECT	2.2MF	20%	50V	D005	8-719-911-19	DIODE 1SS119			
C402	1-101-001-00	CERAMIC	0.001MF		50V	D006	8-719-000-06	DIODE MC921			
C403	1-101-001-00	CERAMIC	0.001MF		50V	D009	8-719-000-06	DIODE MC921			
C404	1-101-004-00	CERAMIC	0.01MF		50V	D011	8-719-911-19	DIODE 1SS119			
C405	1-123-330-00	ELECT	22MF	20%	16V						
C406	1-123-330-00	ELECT	22MF	20%	16V						
C407	1-102-962-00	CERAMIC	30PF	5%	50V						

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description
D012	8-719-911-19	DIODE 1SS119
D013	8-719-911-19	DIODE 1SS119
D014	8-719-911-19	DIODE 1SS119
D015	8-719-911-19	DIODE 1SS119
D016	8-719-000-12	DIODE MC931
D017	8-719-911-19	DIODE 1SS119
D018	8-719-911-19	DIODE 1SS119
D019	8-719-911-19	DIODE 1SS119
D020	8-719-911-19	DIODE 1SS119
D021	8-719-911-19	DIODE 1SS119
D022	8-719-911-19	DIODE 1SS119
D023	8-719-911-19	DIODE 1SS119
D027	8-719-000-06	DIODE MC921
D029	8-719-100-57	DIODE RD10E-82
D030	8-719-911-19	DIODE 1SS119
D031	8-719-911-19	DIODE 1SS119
D036	8-719-911-19	DIODE 1SS119
D607	8-719-000-06	DIODE MC921
D702	8-719-911-19	DIODE 1SS119

DELAY LINE

DL001	1-415-313-00	DELAY LINE (1H)
DL401	1-415-352-11	DELAY LINE, 1H
DL501	1-415-282-00	DELAY LINE

IC

IC001	8-759-909-20	IC BA634
IC002	8-759-904-95	IC BA7007
IC003	8-759-202-47	IC CX10023
IC004	8-759-208-94	IC CX894
IC005	8-752-006-10	IC CX20061
IC006	8-759-203-99	IC CX10021B-NP
IC009	8-759-101-62	IC CX20043
IC011	8-752-006-10	IC CX20061
IC012	8-759-979-26	IC CX7926
IC401	8-758-662-00	IC CX8668

COIL

L001	1-407-499-00	MICRO INDUCTOR 3.9MMH
L002	1-407-496-00	MICRO INDUCTOR 2.2MMH
L003	1-408-408-00	MICRO INDUCTOR 8.2UH
L004	1-408-406-00	MICRO INDUCTOR 5.6UH
L005	1-408-415-00	MICRO INDUCTOR 33UH
L006	1-408-428-00	MICRO INDUCTOR 390UH
L007	1-408-427-00	MICRO INDUCTOR 330UH
L008	1-408-421-00	MICRO INDUCTOR 100UH
L010	1-408-427-00	MICRO INDUCTOR 330UH
L011	1-408-423-00	MICRO INDUCTOR 150UH
L012	1-408-409-00	MICRO INDUCTOR 10UH
L014	1-408-416-00	MICRO INDUCTOR 39UH
L015	1-408-419-00	MICRO INDUCTOR 68UH
L016	1-408-413-00	MICRO INDUCTOR 22UH
L017	1-408-423-00	MICRO INDUCTOR 150UH

Remark

Ref.No Part No. Description Remark

L018	1-408-419-00	MICRO INDUCTOR 68UH
L019	1-408-416-00	MICRO INDUCTOR 39UH
L020	1-408-416-00	MICRO INDUCTOR 39UH
L021	1-408-422-00	MICRO INDUCTOR 120UH
L022	1-408-424-00	MICRO INDUCTOR 180UH
L023	1-408-422-00	MICRO INDUCTOR 120UH
L026	1-408-416-00	MICRO INDUCTOR 39UH
L036	1-408-429-00	MICRO INDUCTOR 470UH
L041	1-408-424-00	MICRO INDUCTOR 180UH
L401	1-408-397-00	MICRO INDUCTOR 1UH
L402	1-408-397-00	MICRO INDUCTOR 1UH
L501	1-408-408-00	MICRO INDUCTOR 8.2UH
L502	1-408-423-00	MICRO INDUCTOR 150UH
L601	1-408-416-00	MICRO INDUCTOR 39UH
L602	1-408-416-00	MICRO INDUCTOR 39UH

LOW PASS FILTER

LPF001	1-235-097-00	FILTER, LOW PASS
--------	--------------	------------------

VARIABLE COIL

LV001	1-407-291-00	MICRO INDUCTOR 15MMH
LV002	1-407-573-00	COIL, VARIABLE 47UH
LV003	1-407-571-00	COIL, VARIABLE 22UH
LV501	1-407-569-00	COIL, VARIABLE 10UH

IC LINK

PS001A	1-532-685-00	LINK, IC 0.8A
--------	--------------	---------------

TRANSISTOR

Q010	8-729-177-43	TRANSISTOR 2SD774
Q011	8-729-204-83	TRANSISTOR 2SA1048-GR
Q015	8-729-245-83	TRANSISTOR 2SC2458
Q016	8-729-245-83	TRANSISTOR 2SC2458
Q019	8-729-204-83	TRANSISTOR 2SA1048-GR
Q020	8-729-204-83	TRANSISTOR 2SA1048-GR
Q021	8-729-245-83	TRANSISTOR 2SC2458
Q022	8-729-245-83	TRANSISTOR 2SC2458
Q023	8-729-245-83	TRANSISTOR 2SC2458
Q024	8-729-204-83	TRANSISTOR 2SA1048-GR
Q025	8-729-245-83	TRANSISTOR 2SC2458
Q026	8-729-204-83	TRANSISTOR 2SA1048-GR
Q027	8-729-204-83	TRANSISTOR 2SA1048-GR
Q028	8-729-245-83	TRANSISTOR 2SC2458
Q029	8-729-245-83	TRANSISTOR 2SC2458
Q030	8-729-245-83	TRANSISTOR 2SC2458
Q031	8-729-900-36	TRANSISTOR DTC124ES
Q032	8-729-245-83	TRANSISTOR 2SC2458
Q033	8-729-245-83	TRANSISTOR 2SC2458
Q034	8-729-245-83	TRANSISTOR 2SC2458
Q035	8-729-603-30	TRANSISTOR 2SC403SP-3
Q036	8-729-603-30	TRANSISTOR 2SC403SP-3
Q037	8-729-384-46	TRANSISTOR 2SA844-C
Q038	8-729-384-46	TRANSISTOR 2SA844-C

The components identified by shading and mark **▲** are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
Q039	8-729-603-30	TRANSISTOR 2SC403SP-3		R032	1-247-815-00	CARBON 220 5%	1/6W
Q040	8-729-603-30	TRANSISTOR 2SC403SP-3		R035	1-247-859-00	CARBON 15K 5%	1/6W
Q041	8-729-384-46	TRANSISTOR 2SA844-C		R037	1-247-869-00	CARBON 39K 5%	1/6W
Q042	8-729-603-30	TRANSISTOR 2SC403SP-3		R038	1-247-837-00	CARBON 1.8K 5%	1/6W
Q043	8-729-603-30	TRANSISTOR 2SC403SP-3		R041	1-247-838-00	CARBON 2K 5%	1/6W
Q044	8-729-603-30	TRANSISTOR 2SC403SP-3		R046	1-247-835-00	CARBON 1.5K 5%	1/6W
Q045	8-729-384-46	TRANSISTOR 2SA844-C		R047	1-247-879-00	CARBON 100K 5%	1/6W
Q047	8-729-603-30	TRANSISTOR 2SC403SP-3		R048	1-247-831-00	CARBON 1K 5%	1/6W
Q048	8-729-603-30	TRANSISTOR 2SC403SP-3		R049	1-247-863-00	CARBON 22K 5%	1/6W
Q049	8-729-603-30	TRANSISTOR 2SC403SP-3		R050	1-247-853-00	CARBON 8.2K 5%	1/6W
Q050	8-729-603-30	TRANSISTOR 2SC403SP-3		R051	1-247-821-00	CARBON 390 5%	1/6W
Q051	8-729-384-46	TRANSISTOR 2SA844-C		R052	1-247-819-00	CARBON 330 5%	1/6W
Q052	8-729-603-30	TRANSISTOR 2SC403SP-3		R053	1-247-843-00	CARBON 3.3K 5%	1/6W
Q053	8-729-384-46	TRANSISTOR 2SA844-C		R054	1-247-847-00	CARBON 4.7K 5%	1/6W
Q054	8-729-384-46	TRANSISTOR 2SA844-C		R055	1-247-849-00	CARBON 5.6K 5%	1/6W
Q055	8-729-384-46	TRANSISTOR 2SA844-C		R056	1-247-867-00	CARBON 33K 5%	1/6W
Q056	8-729-603-30	TRANSISTOR 2SC403SP-3		R058	1-247-855-00	CARBON 10K 5%	1/6W
Q060	8-729-204-83	TRANSISTOR 2SA1048-GR		R059	1-247-859-00	CARBON 15K 5%	1/6W
Q061	8-729-245-83	TRANSISTOR 2SC2458		R060	1-247-867-00	CARBON 33K 5%	1/6W
Q062	8-729-204-83	TRANSISTOR 2SA1048-GR		R061	1-247-855-00	CARBON 10K 5%	1/6W
Q063	8-729-245-83	TRANSISTOR 2SC2458		R062	1-247-855-00	CARBON 10K 5%	1/6W
Q064	8-729-245-83	TRANSISTOR 2SC2458		R063	1-247-841-00	CARBON 2.7K 5%	1/6W
Q065	8-729-245-83	TRANSISTOR 2SC2458		R064	1-247-848-00	CARBON 5.1K 5%	1/6W
Q067	8-729-245-83	TRANSISTOR 2SC2458		R065	1-247-889-00	CARBON 270K 5%	1/6W
Q068	8-729-245-83	TRANSISTOR 2SC2458		R066	1-247-870-00	CARBON 43K 5%	1/6W
Q069	8-729-204-83	TRANSISTOR 2SA1048-GR		R067	1-247-862-00	CARBON 20K 5%	1/6W
Q071	8-729-245-83	TRANSISTOR 2SC2458		R068	1-247-838-00	CARBON 2K 5%	1/6W
Q075	8-729-900-85	TRANSISTOR DTC144WS		R069	1-247-831-00	CARBON 1K 5%	1/6W
Q076	8-729-204-83	TRANSISTOR 2SA1048-GR		R070	1-247-831-00	CARBON 1K 5%	1/6W
Q077	8-729-245-83	TRANSISTOR 2SC2458		R071	1-247-855-00	CARBON 10K 5%	1/6W
Q100	8-729-900-85	TRANSISTOR DTC144WS		R072	1-247-841-00	CARBON 2.7K 5%	1/6W
Q101	8-729-900-89	TRANSISTOR DTC144ES		R073	1-247-831-00	CARBON 1K 5%	1/6W
Q102	8-729-900-65	TRANSISTOR DTA144ES		R074	1-247-831-00	CARBON 1K 5%	1/6W
Q103	8-729-245-83	TRANSISTOR 2SC2458		R075	1-247-815-00	CARBON 220 5%	1/6W
Q401	8-729-245-83	TRANSISTOR 2SC2458		R076	1-247-855-00	CARBON 10K 5%	1/6W
Q501	8-729-245-83	TRANSISTOR 2SC2458		R077	1-247-855-00	CARBON 10K 5%	1/6W
Q502	8-729-245-83	TRANSISTOR 2SC2458		R078	1-247-867-00	CARBON 33K 5%	1/6W
Q503	8-729-245-83	TRANSISTOR 2SC2458		R079	1-247-855-00	CARBON 10K 5%	1/6W
Q504	8-729-245-83	TRANSISTOR 2SC2458		R080	1-247-853-00	CARBON 8.2K 5%	1/6W
Q601	8-729-900-36	TRANSISTOR DTC124ES		R081	1-247-843-00	CARBON 3.3K 5%	1/6W
Q602	8-729-900-36	TRANSISTOR DTC124ES		R082	1-247-871-00	CARBON 47K 5%	1/6W
Q603	8-729-900-36	TRANSISTOR DTC124ES		R083	1-247-825-00	CARBON 560 5%	1/6W
Q604	8-729-900-36	TRANSISTOR DTC124ES		R084	1-247-831-00	CARBON 1K 5%	1/6W
Q615	8-729-900-36	TRANSISTOR DTC124ES		R085	1-247-803-00	CARBON 68 5%	1/6W
Q616	8-729-900-36	TRANSISTOR DTC124ES		R086	1-247-825-00	CARBON 560 5%	1/6W
Q617	8-729-205-02	TRANSISTOR 2SA1150		R087	1-247-825-00	CARBON 560 5%	1/6W
Q620	8-729-204-83	TRANSISTOR 2SA1048-GR		R088	1-247-807-00	CARBON 100 5%	1/6W
<u>RESISTOR</u>				R091	1-247-824-00	CARBON 510 5%	1/6W
R026	1-247-871-00	CARBON 47K 5%	1/6W	R092	1-247-791-00	CARBON 22 5%	1/6W
R028	1-247-855-00	CARBON 10K 5%	1/6W	R093	1-247-806-00	CARBON 91 5%	1/6W
R029	1-247-855-00	CARBON 10K 5%	1/6W	R094	1-247-869-00	CARBON 39K 5%	1/6W
R030	1-247-867-00	CARBON 33K 5%	1/6W	R095	1-247-872-00	CARBON 51K 5%	1/6W
				R096	1-247-879-00	CARBON 100K 5%	1/6W

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description			Remark	Ref.No	Part No.	Description			Remark
R097	1-247-882-00	CARBON	130K	5%	1/6W	R156	1-247-839-00	CARBON	2.2K	5%	1/6W
R098	1-247-890-00	CARBON	300K	5%	1/6W	R157	1-247-837-00	CARBON	1.8K	5%	1/6W
R100	1-247-869-00	CARBON	39K	5%	1/6W	R158	1-247-817-00	CARBON	270	5%	1/6W
R101	1-247-864-00	CARBON	24K	5%	1/6W	R159	1-247-810-00	CARBON	130	5%	1/6W
R103	1-247-831-00	CARBON	1K	5%	1/6W	R160	1-247-832-00	CARBON	1.1K	5%	1/6W
R104	1-247-839-00	CARBON	2.2K	5%	1/6W	R161	1-247-855-00	CARBON	10K	5%	1/6W
R105	1-247-829-00	CARBON	820	5%	1/6W	R162	1-247-835-00	CARBON	1.5K	5%	1/6W
R106	1-247-831-00	CARBON	1K	5%	1/6W	R163	1-247-842-00	CARBON	3K	5%	1/6W
R107	1-247-824-00	CARBON	510	5%	1/6W	R164	1-247-830-00	CARBON	910	5%	1/6W
R108	1-247-839-00	CARBON	2.2K	5%	1/6W	R165	1-247-834-00	CARBON	1.3K	5%	1/6W
R109	1-247-867-00	CARBON	33K	5%	1/6W	R166	1-247-818-00	CARBON	300	5%	1/6W
R111	1-247-846-00	CARBON	4.3K	5%	1/6W	R167	1-247-849-00	CARBON	5.6K	5%	1/6W
R112	1-247-854-00	CARBON	9.1K	5%	1/6W	R168	1-247-836-00	CARBON	1.6K	5%	1/6W
R113	1-247-843-00	CARBON	3.3K	5%	1/6W	R169	1-247-840-00	CARBON	2.4K	5%	1/6W
R114	1-247-828-00	CARBON	750	5%	1/6W	R170	1-247-804-00	CARBON	75	5%	1/6W
R115	1-247-879-00	CARBON	100K	5%	1/6W	R171	1-247-901-00	CARBON	820K	5%	1/6W
R116	1-247-853-00	CARBON	8.2K	5%	1/6W	R172	1-247-857-00	CARBON	12K	5%	1/6W
R117	1-247-846-00	CARBON	4.3K	5%	1/6W	R173	1-247-861-00	CARBON	18K	5%	1/6W
R120	1-247-831-00	CARBON	1K	5%	1/6W	R174	1-247-839-00	CARBON	2.2K	5%	1/6W
R121	1-247-831-00	CARBON	1K	5%	1/6W	R175	1-247-831-00	CARBON	1K	5%	1/6W
R122	1-247-839-00	CARBON	2.2K	5%	1/6W	R176	1-247-839-00	CARBON	2.2K	5%	1/6W
R123	1-247-841-00	CARBON	2.7K	5%	1/6W	R178	1-247-839-00	CARBON	2.2K	5%	1/6W
R124	1-247-819-00	CARBON	330	5%	1/6W	R179	1-247-843-00	CARBON	3.3K	5%	1/6W
R125	1-247-831-00	CARBON	1K	5%	1/6W	R180	1-247-835-00	CARBON	1.5K	5%	1/6W
R126	1-247-831-00	CARBON	1K	5%	1/6W	R181	1-247-835-00	CARBON	1.5K	5%	1/6W
R127	1-247-835-00	CARBON	1.5K	5%	1/6W	R185	1-247-843-00	CARBON	3.3K	5%	1/6W
R128	1-247-831-00	CARBON	1K	5%	1/6W	R186	1-247-830-00	CARBON	910	5%	1/6W
R129	1-247-867-00	CARBON	33K	5%	1/6W	R187	1-247-831-00	CARBON	1K	5%	1/6W
R130	1-247-842-00	CARBON	3K	5%	1/6W	R188	1-247-839-00	CARBON	2.2K	5%	1/6W
R131	1-247-841-00	CARBON	2.7K	5%	1/6W	R189	1-247-834-00	CARBON	1.3K	5%	1/6W
R132	1-247-887-00	CARBON	220K	5%	1/6W	R190	1-247-834-00	CARBON	1.3K	5%	1/6W
R134	1-247-847-00	CARBON	4.7K	5%	1/6W	R191	1-247-831-00	CARBON	1K	5%	1/6W
R135	1-247-883-00	CARBON	150K	5%	1/6W	R192	1-247-831-00	CARBON	1K	5%	1/6W
R136	1-247-879-00	CARBON	100K	5%	1/6W	R193	1-247-855-00	CARBON	10K	5%	1/6W
R137	1-247-857-00	CARBON	12K	5%	1/6W	R194	1-247-819-00	CARBON	330	5%	1/6W
R138	1-247-861-00	CARBON	18K	5%	1/6W	R195	1-247-812-00	CARBON	160	5%	1/6W
R139	1-247-841-00	CARBON	2.7K	5%	1/6W	R196	1-247-863-00	CARBON	22K	5%	1/6W
R140	1-247-867-00	CARBON	33K	5%	1/6W	R197	1-247-863-00	CARBON	22K	5%	1/6W
R141	1-247-831-00	CARBON	1K	5%	1/6W	R198	1-247-829-00	CARBON	820	5%	1/6W
R142	1-247-842-00	CARBON	3K	5%	1/6W	R199	1-247-821-00	CARBON	390	5%	1/6W
R143	1-247-847-00	CARBON	4.7K	5%	1/6W	R200	1-247-839-00	CARBON	2.2K	5%	1/6W
R144	1-247-824-00	CARBON	510	5%	1/6W	R201	1-247-837-00	CARBON	1.8K	5%	1/6W
R145	1-247-838-00	CARBON	2K	5%	1/6W	R202	1-247-831-00	CARBON	1K	5%	1/6W
R146	1-247-829-00	CARBON	820	5%	1/6W	R203	1-247-815-00	CARBON	220	5%	1/6W
R147	1-247-855-00	CARBON	10K	5%	1/6W	R204	1-247-811-00	CARBON	150	5%	1/6W
R148	1-247-831-00	CARBON	1K	5%	1/6W	R205	1-247-811-00	CARBON	150	5%	1/6W
R149	1-247-819-00	CARBON	330	5%	1/6W	R206	1-247-834-00	CARBON	1.3K	5%	1/6W
R150	1-247-863-00	CARBON	22K	5%	1/6W	R207	1-247-874-00	CARBON	62K	5%	1/6W
R151	1-247-812-00	CARBON	160	5%	1/6W	R208	1-247-874-00	CARBON	62K	5%	1/6W
R152	1-247-829-00	CARBON	820	5%	1/6W	R209	1-247-833-00	CARBON	1.2K	5%	1/6W
R153	1-247-863-00	CARBON	22K	5%	1/6W	R210	1-247-824-00	CARBON	510	5%	1/6W
R154	1-247-821-00	CARBON	390	5%	1/6W	R211	1-247-831-00	CARBON	1K	5%	1/6W
R155	1-247-839-00	CARBON	2.2K	5%	1/6W	R212	1-247-824-00	CARBON	510	5%	1/6W

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
R213	1-247-829-00	CARBON	820 5% 1/6W	R299	1-247-892-00	CARBON	360K 5% 1/6W
R214	1-247-831-00	CARBON	1K 5% 1/6W	R301	1-247-855-00	CARBON	10K 5% 1/6W
R215	1-247-831-00	CARBON	1K 5% 1/6W	R302	1-247-819-00	CARBON	330 5% 1/6W
R216	1-247-832-00	CARBON	1.1K 5% 1/6W	R303	1-247-819-00	CARBON	330 5% 1/6W
R217	1-247-831-00	CARBON	1K 5% 1/6W	R304	1-247-847-00	CARBON	4.7K 5% 1/6W
R218	1-247-831-00	CARBON	1K 5% 1/6W	R305	1-247-835-00	CARBON	1.5K 5% 1/6W
R219	1-247-866-00	CARBON	30K 5% 1/6W	R312	1-247-847-00	CARBON	4.7K 5% 1/6W
R220	1-247-874-00	CARBON	62K 5% 1/6W	R313	1-247-823-00	CARBON	470 5% 1/6W
R221	1-247-849-00	CARBON	5.6K 5% 1/6W	R317	1-247-855-00	CARBON	10K 5% 1/6W
R222	1-247-837-00	CARBON	1.8K 5% 1/6W	R318	1-247-865-00	CARBON	27K 5% 1/6W
R223	1-247-837-00	CARBON	1.8K 5% 1/6W	R320	1-247-878-00	CARBON	91K 5% 1/6W
R231	1-247-867-00	CARBON	33K 5% 1/6W	R321	1-247-887-00	CARBON	220K 5% 1/6W
R235	1-247-831-00	CARBON	1K 5% 1/6W	R325	1-247-807-00	CARBON	100 5% 1/6W
R236	1-247-853-00	CARBON	8.2K 5% 1/6W	R331	1-247-852-00	CARBON	7.5K 5% 1/6W
R239	1-247-855-00	CARBON	10K 5% 1/6W	R342	1-247-807-00	CARBON	100 5% 1/6W
R241	1-247-804-00	CARBON	75 5% 1/6W	R346	1-247-847-00	CARBON	4.7K 5% 1/6W
R242	1-247-879-00	CARBON	100K 5% 1/6W	R351	1-247-815-00	CARBON	220 5% 1/6W
R243	1-247-855-00	CARBON	10K 5% 1/6W	R352	1-247-855-00	CARBON	10K 5% 1/6W
R244	1-247-851-00	CARBON	6.8K 5% 1/6W	R353	1-247-831-00	CARBON	1K 5% 1/6W
R245	1-247-879-00	CARBON	100K 5% 1/6W	R357	1-247-829-00	CARBON	820 5% 1/6W
R246	1-247-871-00	CARBON	47K 5% 1/6W	R358	1-247-855-00	CARBON	10K 5% 1/6W
R247	1-247-871-00	CARBON	47K 5% 1/6W	R359	1-247-839-00	CARBON	2.2K 5% 1/6W
R248	1-247-818-00	CARBON	300 5% 1/6W	R370	1-247-790-00	CARBON	20 5% 1/6W
R249	1-247-813-00	CARBON	180 5% 1/6W	R401	1-247-810-00	CARBON	130 5% 1/6W
R250	1-247-811-00	CARBON	150 5% 1/6W	R402	1-247-808-00	CARBON	110 5% 1/6W
R251	1-247-838-00	CARBON	2K 5% 1/6W	R403	1-247-867-00	CARBON	33K 5% 1/6W
R252	1-247-803-00	CARBON	68 5% 1/6W	R404	1-247-871-00	CARBON	47K 5% 1/6W
R254	1-247-855-00	CARBON	10K 5% 1/6W	R405	1-247-831-00	CARBON	1K 5% 1/6W
R255	1-247-858-00	CARBON	13K 5% 1/6W	R406	1-247-832-00	CARBON	1.1K 5% 1/6W
R256	1-247-843-00	CARBON	3.3K 5% 1/6W	R407	1-247-832-00	CARBON	1.1K 5% 1/6W
R257	1-247-835-00	CARBON	1.5K 5% 1/6W	R408	1-247-849-00	CARBON	5.6K 5% 1/6W
R258	1-247-852-00	CARBON	7.5K 5% 1/6W	R409	1-247-831-00	CARBON	1K 5% 1/6W
R259	1-247-831-00	CARBON	1K 5% 1/6W	R410	1-247-831-00	CARBON	1K 5% 1/6W
R260	1-247-841-00	CARBON	2.7K 5% 1/6W	R411	1-247-847-00	CARBON	4.7K 5% 1/6W
R261	1-247-863-00	CARBON	22K 5% 1/6W	R412	1-247-828-00	CARBON	750 5% 1/6W
R262	1-247-849-00	CARBON	5.6K 5% 1/6W	R413	1-247-812-00	CARBON	160 5% 1/6W
R274	1-247-883-00	CARBON	150K 5% 1/6W	R414	1-247-847-00	CARBON	4.7K 5% 1/6W
R275	1-247-871-00	CARBON	47K 5% 1/6W	R415	1-247-831-00	CARBON	1K 5% 1/6W
R276	1-247-849-00	CARBON	5.6K 5% 1/6W	R416	1-247-846-00	CARBON	4.3K 5% 1/6W
R277	1-247-855-00	CARBON	10K 5% 1/6W	R510	1-247-824-00	CARBON	510 5% 1/6W
R280	1-247-821-00	CARBON	390 5% 1/6W	R511	1-247-867-00	CARBON	33K 5% 1/6W
R281	1-247-883-00	CARBON	150K 5% 1/6W	R512	1-247-847-00	CARBON	4.7K 5% 1/6W
R282	1-247-819-00	CARBON	330 5% 1/6W	R513	1-247-863-00	CARBON	22K 5% 1/6W
R283	1-247-831-00	CARBON	1K 5% 1/6W	R514	1-247-821-00	CARBON	390 5% 1/6W
R284	1-247-877-00	CARBON	82K 5% 1/6W	R515	1-247-839-00	CARBON	2.2K 5% 1/6W
R286	1-247-848-00	CARBON	5.1K 5% 1/6W	R516	1-247-821-00	CARBON	390 5% 1/6W
R287	1-247-831-00	CARBON	1K 5% 1/6W	R517	1-247-821-00	CARBON	390 5% 1/6W
R291	1-247-863-00	CARBON	22K 5% 1/6W	R518	1-247-821-00	CARBON	390 5% 1/6W
R292	1-247-875-00	CARBON	68K 5% 1/6W	R519	1-247-821-00	CARBON	390 5% 1/6W
R293	1-247-819-00	CARBON	330 5% 1/6W	R520	1-247-839-00	CARBON	2.2K 5% 1/6W
R295	1-247-839-00	CARBON	2.2K 5% 1/6W	R521	1-247-821-00	CARBON	390 5% 1/6W
R296	1-247-811-00	CARBON	150 5% 1/6W	R522	1-247-839-00	CARBON	2.2K 5% 1/6W
R298	1-247-894-00	CARBON	430K 5% 1/6W	R525	1-247-843-00	CARBON	3.3K 5% 1/6W

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
R601	1-247-847-00	CARBON 4.7K 5% 1/6W		<u>CAPACITOR</u>			
R602	1-247-855-00	CARBON 10K 5% 1/6W		C304	1-123-332-00	ELECT 47MF 20% 16V	
R603	1-247-843-00	CARBON 3.3K 5% 1/6W		C305	1-123-333-00	ELECT 10UMF 20% 16V	
R631	1-247-855-00	CARBON 10K 5% 1/6W		C306	1-123-332-00	ELECT 47MF 20% 16V	
R632	1-247-855-00	CARBON 10K 5% 1/6W		C307	1-130-479-00	MYLAR 0.0047MF 5% 50V	
R633	1-247-831-00	CARBON 1K 5% 1/6W		C308	1-123-332-00	ELECT 47MF 20% 16V	
R635	1-247-883-00	CARBON 150K 5% 1/6W		C309	1-123-381-00	ELECT 2.2MF 20% 50V	
R638	1-247-807-00	CARBON 100 5% 1/6W		C310	1-161-013-00	CERAMIC 0.01MF 10% 25V	
R639	1-247-831-00	CARBON 1K 5% 1/6W		C311	1-127-477-00	ELECT(SOLID) 0.47MF 5% 25V	
R640	1-247-815-00	CARBON 220 5% 1/6W		C312	1-123-332-00	ELECT 47MF 20% 16V	
R641	1-247-831-00	CARBON 1K 5% 1/6W		C313	1-161-059-00	CERAMIC 0.047MF 10% 25V	
R643	1-247-883-00	CARBON 150K 5% 1/6W		C314	1-131-357-00	TANTALUM 4.7MF 20% 25V	
R644	1-247-818-00	CARBON 300 5% 1/6W		C315	1-123-381-00	ELECT 2.2MF 20% 50V	
R646	1-247-859-00	CARBON 15K 5% 1/6W		C316	1-131-357-00	TANTALUM 4.7MF 20% 25V	
<u>VARIABLE RESISTOR</u>				C317	1-161-059-00	CERAMIC 0.047MF 10% 25V	
RV001	1-228-989-00	RES, ADJ, METAL GLAZE 470		C318	1-123-381-00	ELECT 2.2MF 20% 50V	
RV002	1-228-748-00	RES, ADJ, CARBON 10K		C319	1-161-013-00	CERAMIC 0.01MF 10% 25V	
RV003	1-228-750-00	RES, ADJ, CARBON 47K		C320	1-161-054-00	CERAMIC 0.018MF 10% 25V	
RV005	1-228-750-00	RES, ADJ, CARBON 47K		C321	1-123-356-00	ELECT 10MF 20% 16V	
RV006	1-228-749-00	RES, ADJ, CARBON 22K		C322	1-123-330-00	ELECT 22MF 20% 16V	
RV007	1-228-748-00	RES, ADJ, CARBON 10K		C323	1-124-429-00	ELECT 0.68MF 20% 50V	
RV008	1-228-745-00	RES, ADJ, CARBON 1K		C324	1-161-059-00	CERAMIC 0.047MF 10% 25V	
RV009	1-228-996-00	RES, ADJ, METAL GLAZE 47K		C325	1-161-059-00	CERAMIC 0.047MF 10% 25V	
RV010	1-228-749-00	RES, ADJ, CARBON 22K		C326	1-123-330-00	ELECT 22MF 20% 16V	
RV012	1-228-750-00	RES, ADJ, CARBON 47K		C327	1-130-483-00	MYLAR 0.01MF 5% 50V	
RV013	1-228-750-00	RES, ADJ, CARBON 47K		C328	1-130-483-00	MYLAR 0.01MF 5% 50V	
RV014	1-228-748-00	RES, ADJ, CARBON 10K		C329	1-161-059-00	CERAMIC 0.047MF 10% 25V	
RV015	1-228-989-00	RES, ADJ, METAL GLAZE 470		C330	1-123-382-00	ELECT 3.3MF 20% 50V	
RV016	1-228-745-00	RES, ADJ, CARBON 1K		C331	1-161-059-00	CERAMIC 0.047MF 10% 25V	
RV019	1-228-993-00	RES, ADJ, METAL GLAZE 4.7K		C332	1-123-310-00	ELECT 470MF 20% 10V	
RV020	1-228-745-00	RES, ADJ, CARBON 1K		C333	1-123-310-00	ELECT 470MF 20% 10V	
RV021	1-228-750-00	RES, ADJ, CARBON 47K		C334	1-123-382-00	ELECT 3.3MF 20% 50V	
RV401	1-228-994-00	RES, ADJ, METAL GLAZE 10K		C335	1-123-382-00	ELECT 3.3MF 20% 50V	
RV501	1-228-989-00	RES, ADJ, METAL GLAZE 470		C336	1-161-059-00	CERAMIC 0.047MF 10% 25V	
RV602	1-228-990-00	RES, ADJ, METAL GLAZE 1K		C337	1-130-482-00	MYLAR 0.0082MF 5% 50V	
<u>SWITCH</u>				C338	1-123-382-00	ELECT 3.3MF 20% 50V	
S601	1-553-725-21	SWITCH, SLIDE		C339	1-161-054-00	CERAMIC 0.018MF 10% 25V	
<u>TRANSFORMER</u>				C340	1-161-013-00	CERAMIC 0.01MF 10% 25V	
T001	1-426-093-00	COIL, REC C BPT		C341	1-161-013-00	CERAMIC 0.01MF 10% 25V	
<u>CRYSTAL</u>				C342	1-161-054-00	CERAMIC 0.018MF 10% 25V	
X001	1-527-345-00	CRYSTAL, OSC		C343	1-127-479-51	ELECT(SOLID) 1MF 5% 25V	
*****				C344	1-161-055-00	CERAMIC 0.022MF 10% 25V	
*A-6715-226-A	SS-34 BOARD, COMPLETE	*****		C345	1-161-002-00	CERAMIC 0.0012MF 10% 25V	
*3-681-170-00	HEAT SINK, S			C346	1-161-054-00	CERAMIC 0.018MF 10% 25V	
*3-846-049-11	PIN, LEAD			C347	1-161-054-00	CERAMIC 0.018MF 10% 25V	
7-621-770-87	SCREW +B 2.6X5			C351	1-161-057-00	CERAMIC 0.033MF 10% 25V	
				C352	1-123-381-00	ELECT 2.2MF 20% 50V	
				C353	1-161-057-00	CERAMIC 0.033MF 10% 25V	
				C354	1-123-331-00	ELECT 33MF 20% 25V	
				C355	1-123-331-00	ELECT 33MF 20% 25V	
				C356	1-123-308-00	ELECT 220MF 20% 6.3V	
				C357	1-161-059-00	CERAMIC 0.047MF 10% 25V	

When indicating parts by reference number, please include the board name.

<u>Ref.No</u>	<u>Part No.</u>	<u>Description</u>				<u>Remark</u>	<u>Ref.No</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
C358	1-123-333-00	ELECT	100MF	20%	16V	CN605	*1-560-893-00	PIN, CONNECTOR 5P		
C359	1-123-617-00	ELECT	10MF	20%	16V	CN606	*1-560-890-00	PIN, CONNECTOR 2P		
C361	1-123-821-00	ELECT	47MF	20%	16V	CN607	*1-560-891-00	PIN, CONNECTOR 3P		
C362	1-123-333-00	ELECT	100MF	20%	16V	CN608	*1-560-890-00	PIN, CONNECTOR 2P		
C364	1-161-059-00	CERAMIC	0.047MF	10%	25V	CN609	*1-560-894-00	PIN, CONNECTOR 6P		
C365	1-123-380-00	ELECT	1MF	20%	50V	CN610	*1-560-896-00	PIN, CONNECTOR 8P		
C366	1-161-013-00	CERAMIC	0.01MF	10%	25V	CN611	*1-560-891-00	PIN, CONNECTOR 3P		
C367	1-161-059-00	CERAMIC	0.047MF	10%	25V	CN612	*1-560-891-00	PIN, CONNECTOR 3P		
C368	1-161-043-00	CERAMIC	0.0022MF	10%	50V	CN613	*1-560-466-00	PIN, CONNECTOR 3P		
C370	1-161-063-00	CERAMIC	0.1MF	20%	25V	<u>DIODE</u>				
C601	1-123-318-00	ELECT	33MF	20%	16V	D301	8-719-000-06	DIODE MC921		
C602	1-161-047-00	CERAMIC	0.0047MF	10%	25V	D302	8-719-000-04	DIODE MC911		
C603	1-123-330-00	ELECT	22MF	20%	16V	D303	8-719-911-19	DIODE 1SS119		
C604	1-161-055-00	CERAMIC	0.022MF	10%	25V	D304	8-719-101-50	DIODE RD5.1E-L2		
C605	1-161-059-00	CERAMIC	0.047MF	10%	25V	D305	8-719-911-19	DIODE 1SS119		
C606	1-161-059-00	CERAMIC	0.047MF	10%	25V	D308	8-719-000-12	DIODE MC931		
C607	1-129-794-00	FILM	0.0033MF	5%	100V	D316	8-719-911-19	DIODE 1SS119		
C608	1-129-794-00	FILM	0.0033MF	5%	100V	D317	8-719-911-19	DIODE 1SS119		
C609	1-127-473-00	ELECT(SOLID)	0.1MF	5%	25V	D318	8-719-911-19	DIODE 1SS119		
C610	1-131-409-00	ELECT(SOLID)	0.33MF	5%	25V	D319	8-719-100-29	DIODE RD5.1E-81		
C611	1-102-518-00	CERAMIC	33PF	5%	50V	D320	8-719-000-12	DIODE MC931		
C612	1-102-518-00	CERAMIC	33PF	5%	50V	D321	8-719-911-19	DIODE 1SS119		
C613	1-123-318-00	ELECT	33MF	20%	10V	D601	8-719-000-06	DIODE MC921		
C614	1-161-013-00	CERAMIC	0.01MF	10%	25V	D602	8-719-000-06	DIODE MC921		
C616	1-123-382-00	ELECT	3.3MF	20%	50V	D603	8-719-000-04	DIODE MC911		
C650	1-161-773-00	CERAMIC	0.1MF	20%	25V	D605	8-719-911-19	DIODE 1SS119		
C651	1-161-047-00	CERAMIC	0.0047MF	10%	25V	D607	8-719-911-19	DIODE 1SS119		
C652	1-123-381-00	ELECT	2.2MF	20%	50V	D608	8-719-911-19	DIODE 1SS119		
C653	1-102-973-00	CERAMIC	100PF	5%	50V	D609	8-719-100-41	DIODE RD6.8E-82		
C654	1-102-973-00	CERAMIC	100PF	5%	50V	D610	8-719-100-41	DIODE RD6.8E-82		
C655	1-102-973-00	CERAMIC	100PF	5%	50V	<u>IC</u>				
C656	1-102-973-00	CERAMIC	100PF	5%	50V	IC301	8-751-941-05	IC CX194B-5		
C657	1-102-973-00	CERAMIC	100PF	5%	50V	IC302	8-759-135-80	IC UPC358C		
<u>FILTER</u>						IC303	8-759-145-58	IC UPC4558C		
CF601	1-527-992-11	OSCILLATOR, CERAMIC				IC304	8-759-132-40	IC UPC324C		
<u>CONNECTOR</u>						IC305	8-759-240-53	IC TC40538P		
CN301	*1-560-892-00	PIN, CONNECTOR 4P				IC306	8-759-132-40	IC UPC324C		
CN302	*1-560-466-00	PIN, CONNECTOR 3P				IC601	8-759-911-08	IC MB88551-133M		
CN303	*1-560-892-00	PIN, CONNECTOR 4P				IC602	8-759-800-72	IC LA7205		
CN304	*1-560-892-00	PIN, CONNECTOR 4P				IC603	8-759-600-24	IC M54543L		
CN305	*1-560-890-00	PIN, CONNECTOR 2P				IC604	8-759-103-93	IC UPC393C		
CN306	*1-560-894-00	PIN, CONNECTOR 6P				<u>COIL</u>				
CN307	*1-560-890-00	PIN, CONNECTOR 2P				L601	1-407-492-00	MICRO INDUCTOR 1MMH		
CN308	*1-560-892-00	PIN, CONNECTOR 4P				<u>IC LINK</u>				
CN309	*1-560-895-00	PIN, CONNECTOR 7P				PS301A	1-532-637-00	LINK, IC 1A		
CN310	*1-560-891-00	PIN, CONNECTOR 3P				PS302A	1-532-679-00	LINK, IC 0.6A		
CN311	*1-560-891-00	PIN, CONNECTOR 3P				PS303A	1-532-605-00	LINK, IC 0.4A		
CN601	*1-560-891-00	PIN, CONNECTOR 3P				PS304A	1-532-637-00	LINK, IC 1A		
CN602	*1-560-896-00	PIN, CONNECTOR 8P								
CN603	*1-560-890-00	PIN, CONNECTOR 2P								
CN604	*1-560-890-00	PIN, CONNECTOR 2P								

The components identified by shading and mark **Δ** are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
TRANSISTOR							
Q301	8-729-245-83	TRANSISTOR 2SC2458		Q618	8-729-245-83	TRANSISTOR 2SC2458	
Q302	8-729-900-89	TRANSISTOR DTC144ES		Q619	8-729-245-83	TRANSISTOR 2SC2458	
Q303	8-729-245-83	TRANSISTOR 2SC2458		Q620	8-729-900-89	TRANSISTOR DTC144ES	
Q304	8-729-245-83	TRANSISTOR 2SC2458		Q621	8-729-245-83	TRANSISTOR 2SC2458	
Q305	8-729-245-83	TRANSISTOR 2SC2458		Q622	8-729-900-89	TRANSISTOR DTC144ES	
Q306	8-729-900-89	TRANSISTOR DTC144ES		Q623	8-729-245-83	TRANSISTOR 2SC2458	
Q307	8-729-200-20	TRANSISTOR 2SK107-2		Q624	8-729-900-61	TRANSISTOR DTA114ES	
Q308	8-729-245-83	TRANSISTOR 2SC2458		RESISTOR			
Q312	8-729-245-83	TRANSISTOR 2SC2458		R301	1-247-871-00	CARBON 47K 5% 1/6W	
Q313	8-729-245-83	TRANSISTOR 2SC2458		R302	1-247-859-00	CARBON 15K 5% 1/6W	
Q314	8-729-204-83	TRANSISTOR 2SA1048-GR		R303	1-247-871-00	CARBON 47K 5% 1/6W	
Q315	8-729-316-16	TRANSISTOR 2SC1061		R304	1-247-859-00	CARBON 15K 5% 1/6W	
Q316	8-729-245-83	TRANSISTOR 2SC2458		R305	1-247-855-00	CARBON 10K 5% 1/6W	
Q317	8-729-245-83	TRANSISTOR 2SC2458		R307	1-247-855-00	CARBON 10K 5% 1/6W	
Q318	8-729-245-83	TRANSISTOR 2SC2458		R308	1-247-829-00	CARBON 820 5% 1/6W	
Q321	8-729-177-43	TRANSISTOR 2SD774		R309	1-247-881-00	CARBON 120K 5% 1/6W	
Q322	8-729-204-83	TRANSISTOR 2SA1048-GR		R310	1-247-835-00	CARBON 1.5K 5% 1/6W	
Q323	8-729-805-13	TRANSISTOR 2SC1475-13		R311	1-247-863-00	CARBON 22K 5% 1/6W	
Q324	8-729-117-54	TRANSISTOR 2SA1175		R312	1-247-864-00	CARBON 24K 5% 1/6W	
Q325	8-729-245-83	TRANSISTOR 2SC2458		R313	1-247-831-00	CARBON 1K 5% 1/6W	
Q326	8-729-245-83	TRANSISTOR 2SC2458		R314	1-247-835-00	CARBON 1.5K 5% 1/6W	
Q330	8-729-316-16	TRANSISTOR 2SC1061		R315	1-247-829-00	CARBON 820 5% 1/6W	
Q331	8-729-245-83	TRANSISTOR 2SC2458		R316	1-247-879-00	CARBON 100K 5% 1/6W	
Q332	8-729-204-83	TRANSISTOR 2SA1048-GR		R317	1-247-903-00	CARBON 1M 5% 1/6W	
Q333	8-729-900-89	TRANSISTOR DTC144ES		R318	1-247-885-00	CARBON 180K 5% 1/6W	
Q335	8-729-245-83	TRANSISTOR 2SC2458		R319	1-247-844-00	CARBON 3.6K 5% 1/6W	
Q336	8-729-245-83	TRANSISTOR 2SC2458		R320	1-247-859-00	CARBON 15K 5% 1/6W	
Q337	8-729-245-83	TRANSISTOR 2SC2458		R321	1-247-845-00	CARBON 3.9K 5% 1/6W	
Q338	8-729-245-83	TRANSISTOR 2SC2458		R322	1-247-903-00	CARBON 1M 5% 1/6W	
Q340	8-729-177-43	TRANSISTOR 2SD774		R323	1-247-855-00	CARBON 10K 5% 1/6W	
Q341	8-729-900-89	TRANSISTOR DTC144ES		R324	1-247-831-00	CARBON 1K 5% 1/6W	
Q342	8-729-900-89	TRANSISTOR DTC144ES		R325	1-247-903-00	CARBON 1M 5% 1/6W	
Q343	8-729-245-83	TRANSISTOR 2SC2458		R326	1-247-831-00	CARBON 1K 5% 1/6W	
Q344	8-729-204-83	TRANSISTOR 2SA1048-GR		R327	1-247-855-00	CARBON 10K 5% 1/6W	
Q345	8-729-900-65	TRANSISTOR DTA144ES		R328	△ 1-212-850-00	FUSIBLE 5.1 5% 1/4W F	
Q346	8-729-204-83	TRANSISTOR 2SA1048-GR		R329	1-247-857-00	CARBON 12K 5% 1/6W	
Q347	8-729-900-89	TRANSISTOR DTC144ES		R330	1-247-859-00	CARBON 15K 5% 1/6W	
Q348	8-729-245-83	TRANSISTOR 2SC2458		R331	1-247-847-00	CARBON 4.7K 5% 1/6W	
Q349	8-729-900-89	TRANSISTOR DTC144ES		R332	1-247-873-00	CARBON 56K 5% 1/6W	
Q356	8-729-900-61	TRANSISTOR DTA114ES		R333	1-247-900-00	CARBON 750K 5% 1/6W	
Q601	8-729-116-42	TRANSISTOR 2SD1164		R334	1-247-867-00	CARBON 33K 5% 1/6W	
Q602	8-729-116-42	TRANSISTOR 2SD1164		R335	1-247-867-00	CARBON 33K 5% 1/6W	
Q603	8-729-177-43	TRANSISTOR 2SD774		R336	1-247-856-00	CARBON 11K 5% 1/6W	
Q604	8-729-177-43	TRANSISTOR 2SD774		R337	1-247-855-00	CARBON 10K 5% 1/6W	
Q605	8-729-245-83	TRANSISTOR 2SC2458		R338	1-247-842-00	CARBON 3K 5% 1/6W	
Q606	8-729-245-83	TRANSISTOR 2SC2458		R339	1-247-843-00	CARBON 3.3K 5% 1/6W	
Q607	8-729-245-83	TRANSISTOR 2SC2458		R340	1-247-825-00	CARBON 560 5% 1/6W	
Q608	8-729-245-83	TRANSISTOR 2SC2458		R341	1-247-871-00	CARBON 47K 5% 1/6W	
Q615	8-729-900-69	TRANSISTOR DTA144ES		R342	1-247-855-00	CARBON 10K 5% 1/6W	
Q616	8-729-900-89	TRANSISTOR DTC144ES		R343	1-247-865-00	CARBON 27K 5% 1/6W	
Q617	8-729-204-83	TRANSISTOR 2SA1048-GR		R344	1-247-872-00	CARBON 51K 5% 1/6W	
				R345	1-247-865-00	CARBON 27K 5% 1/6W	

The components identified by shading and mark **△** are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

SS-34

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
R346	1-247-848-00	CARBON	5.1K 5% 1/6W	R417	1-247-837-00	CARBON	1.8K 5% 1/6W
R347	1-247-887-00	CARBON	220K 5% 1/6W	R419	1-247-855-00	CARBON	10K 5% 1/6W
R348	1-247-887-00	CARBON	220K 5% 1/6W	R426	1-247-831-00	CARBON	1K 5% 1/6W
R349	1-247-845-00	CARBON	3.9K 5% 1/6W	R427	1-247-863-00	CARBON	22K 5% 1/6W
R352	1-247-871-00	CARBON	47K 5% 1/6W	R428	1-247-863-00	CARBON	22K 5% 1/6W
R353	1-247-867-00	CARBON	33K 5% 1/6W	R429	1-247-848-00	CARBON	5.1K 5% 1/6W
R354	1-247-855-00	CARBON	10K 5% 1/6W	R430	1-247-859-00	CARBON	15K 5% 1/6W
R355	1-247-887-00	CARBON	220K 5% 1/6W	R431	1-247-867-00	CARBON	33K 5% 1/6W
R356	1-247-871-00	CARBON	47K 5% 1/6W	R432	1-247-871-00	CARBON	47K 5% 1/6W
R357	1-247-871-00	CARBON	47K 5% 1/6W	R433	1-247-831-00	CARBON	1K 5% 1/6W
R358	1-247-863-00	CARBON	22K 5% 1/6W	R436	1-247-855-00	CARBON	10K 5% 1/6W
R359	1-247-863-00	CARBON	22K 5% 1/6W	R437	1-247-855-00	CARBON	10K 5% 1/6W
R361	1-247-871-00	CARBON	47K 5% 1/6W	R438	1-247-851-00	CARBON	6.8K 5% 1/6W
R362	1-247-861-00	CARBON	18K 5% 1/6W	R439	1-247-839-00	CARBON	2.2K 5% 1/6W
R363	1-247-879-00	CARBON	100K 5% 1/6W	R440	1-247-855-00	CARBON	10K 5% 1/6W
R364	1-247-867-00	CARBON	33K 5% 1/6W	R441	1-247-867-00	CARBON	33K 5% 1/6W
R365	1-247-867-00	CARBON	33K 5% 1/6W	R442	1-247-847-00	CARBON	4.7K 5% 1/6W
R366	1-247-867-00	CARBON	33K 5% 1/6W	R443	1-247-831-00	CARBON	1K 5% 1/6W
R367	1-247-859-00	CARBON	15K 5% 1/6W	R444	1-247-855-00	CARBON	10K 5% 1/6W
R368	△ 1-206-482-00	METAL OXIDE	62 5% 2W F	R445	1-247-839-00	CARBON	2.2K 5% 1/6W
R370	1-247-871-00	CARBON	47K 5% 1/6W	R446	1-247-851-00	CARBON	6.8K 5% 1/6W
R371	1-247-867-00	CARBON	33K 5% 1/6W	R447	1-247-855-00	CARBON	10K 5% 1/6W
R372	1-247-855-00	CARBON	10K 5% 1/6W	R448	1-247-863-00	CARBON	22K 5% 1/6W
R373	1-247-883-00	CARBON	150K 5% 1/6W	R449	1-247-871-00	CARBON	47K 5% 1/6W
R374	1-247-883-00	CARBON	150K 5% 1/6W	R451	1-247-815-00	CARBON	220 5% 1/6W
R375	1-247-883-00	CARBON	150K 5% 1/6W	R452	1-247-847-00	CARBON	4.7K 5% 1/6W
R376	1-247-883-00	CARBON	150K 5% 1/6W	R453	1-247-843-00	CARBON	3.3K 5% 1/6W
R377	1-247-879-00	CARBON	100K 5% 1/6W	R454	1-247-843-00	CARBON	3.3K 5% 1/6W
R378	1-247-879-00	CARBON	100K 5% 1/6W	R455	1-247-843-00	CARBON	3.3K 5% 1/6W
R379	1-247-879-00	CARBON	100K 5% 1/6W	R461	1-247-843-00	CARBON	3.3K 5% 1/6W
R380	1-247-879-00	CARBON	100K 5% 1/6W	R462	1-247-903-00	CARBON	1M 5% 1/6W
R381	1-247-867-00	CARBON	33K 5% 1/6W	R463	1-247-871-00	CARBON	47K 5% 1/6W
R382	1-247-867-00	CARBON	33K 5% 1/6W	R464	1-247-871-00	CARBON	47K 5% 1/6W
R383	1-247-897-00	CARBON	560K 5% 1/6W	R465	1-247-863-00	CARBON	22K 5% 1/6W
R384	1-247-897-00	CARBON	560K 5% 1/6W	R466	1-247-843-00	CARBON	3.3K 5% 1/6W
R386	1-247-857-00	CARBON	12K 5% 1/6W	R467	1-247-847-00	CARBON	4.7K 5% 1/6W
R387	1-246-981-00	CARBON	4.7 5% 1/8W F	R469	1-247-863-00	CARBON	22K 5% 1/6W
R389	△ 1-212-366-00	METAL OXIDE	3.3 5% 1W F	R470	1-247-863-00	CARBON	22K 5% 1/6W
R390	1-247-855-00	CARBON	10K 5% 1/6W	R471	1-247-825-00	CARBON	560 5% 1/6W
R391	1-247-845-00	CARBON	3.9K 5% 1/6W	R473	1-247-843-00	CARBON	3.3K 5% 1/6W
R392	1-247-819-00	CARBON	330 5% 1/6W	R476	1-247-823-00	CARBON	470 5% 1/6W
R394	1-247-832-00	CARBON	1.1K 5% 1/6W	R601	1-247-835-00	CARBON	1.5K 5% 1/6W
R397	1-247-831-00	CARBON	1K 5% 1/6W	R602	1-247-864-00	CARBON	24K 5% 1/6W
R398	△ 1-212-849-00	FUSIBLE	4.7 5% 1/4W F	R603	1-247-864-00	CARBON	24K 5% 1/6W
R399	△ 1-212-360-00	METAL OXIDE	1 5% 1W F	R604	1-247-864-00	CARBON	24K 5% 1/6W
R400	1-247-828-00	CARBON	750 5% 1/6W	R612	1-247-827-00	CARBON	680 5% 1/6W
R406	△ 1-212-360-00	METAL OXIDE	1 5% 1W F	R614	1-247-845-00	CARBON	3.9K 5% 1/6W
R407	1-247-847-00	CARBON	4.7K 5% 1/6W	R615	1-247-855-00	CARBON	10K 5% 1/6W
R408	1-247-843-00	CARBON	3.3K 5% 1/6W	R616	1-247-845-00	CARBON	3.9K 5% 1/6W
R409	1-247-838-00	CARBON	2K 5% 1/6W	R617	1-247-855-00	CARBON	10K 5% 1/6W
R410	1-247-847-00	CARBON	4.7K 5% 1/6W	R618	1-215-454-00	METAL	24K 1% 1/6W
R411	1-247-855-00	CARBON	10K 5% 1/6W	R619	1-247-863-00	CARBON	22K 5% 1/6W
R413	1-247-847-00	CARBON	4.7K 5% 1/6W	R620	1-247-873-00	CARBON	56K 5% 1/6W

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description				Remark	Ref.No	Part No.	Description				Remark
R621	1-247-851-00	CARBON	6.8K	5%	1/6W		*1-614-220-11	ES-3 BOARD					
R622	1-247-855-00	CARBON	10K	5%	1/6W			*****					
R623	1-247-861-00	CARBON	18K	5%	1/6W			<u>CAPACITOR</u>					
R624	1-247-839-00	CARBON	2.2K	5%	1/6W		C701	1-123-381-00	ELECT	2.2MF	20%	50V	
R626	1-247-879-00	CARBON	100K	5%	1/6W		C702	1-127-475-00	ELECT(SOLID)	0.22MF	5%	25V	
R627	1-247-855-00	CARBON	10K	5%	1/6W			<u>DIODE</u>					
R628	1-247-855-00	CARBON	10K	5%	1/6W		D701	8-719-000-06	DIODE	MC921			
R629	1-247-895-00	CARBON	470K	5%	1/6W			<u>IC</u>					
R630	1-247-839-00	CARBON	2.2K	5%	1/6W		IC701	8-759-045-38	IC	MC14538BCP			
R631	1-247-859-00	CARBON	15K	5%	1/6W			<u>TRANSISTOR</u>					
R632	1-247-855-00	CARBON	10K	5%	1/6W		Q701	8-729-900-89	TRANSISTOR	DTC144ES			
R633	1-247-839-00	CARBON	2.2K	5%	1/6W			<u>RESISTOR</u>					
R634	1-247-879-00	CARBON	100K	5%	1/6W		R701	1-247-879-00	CARBON	100K	5%	1/6W	
R635	1-247-869-00	CARBON	39K	5%	1/6W		R702	1-247-855-00	CARBON	10K	5%	1/6W	
R636	1-247-835-00	CARBON	1.5K	5%	1/6W		R703	1-247-863-00	CARBON	22K	5%	1/6W	
R637	1-247-104-00	CARBON	75	5%	1/4W		R704	1-247-871-00	CARBON	47K	5%	1/6W	
R639	1-247-855-00	CARBON	10K	5%	1/6W			*****					
R640	1-247-875-00	CARBON	68K	5%	1/6W		*1-613-224-11	FU-35 BOARD					
R642	1-247-843-00	CARBON	3.3K	5%	1/6W			*****					
R643	1-247-839-00	CARBON	2.2K	5%	1/6W			<u>DIODE</u>					
R644	1-247-864-00	CARBON	24K	5%	1/6W		D001	8-719-908-50	DIODE	SLR-54MC3			
R645	1-247-871-00	CARBON	47K	5%	1/6W			<u>RESISTOR</u>					
R646	1-247-851-00	CARBON	6.8K	5%	1/6W		R001	1-247-123-00	CARBON	470	5%	1/4W	
R647	1-247-831-00	CARBON	1K	5%	1/6W		R002	1-247-851-00	CARBON	6.8K	5%	1/6W	
R648	1-246-449-00	CARBON	100	5%	1/6W		R003	1-247-851-00	CARBON	6.8K	5%	1/6W	
R649	1-247-855-00	CARBON	10K	5%	1/6W		R004	1-247-855-00	CARBON	10K	5%	1/6W	
		<u>VARIABLE RESISTOR</u>					R005	1-247-855-00	CARBON	10K	5%	1/6W	
RV301	1-228-994-00	RES, ADJ, METAL GLAZE	10K				R006	1-247-161-00	CARBON	18K	5%	1/4W	
RV302	1-228-994-00	RES, ADJ, METAL GLAZE	10K					<u>VARIABLE RESISTOR</u>					
RV303	1-228-996-00	RES, ADJ, METAL GLAZE	47K				RV001	1-230-421-11	RES, VAR, CARBON	100K			
RV304	1-228-750-00	RES, ADJ, CARBON	47K					<u>SWITCH</u>					
RV305	1-228-750-00	RES, ADJ, CARBON	47K				S001	1-554-174-00	SWITCH, KEY BOARD				
RV306	1-228-750-00	RES, ADJ, CARBON	47K				S002	1-554-174-00	SWITCH, KEY BOARD				
RV307	1-228-991-00	RES, ADJ, METAL GLAZE	2.2K				S003	1-554-174-00	SWITCH, KEY BOARD				
RV308	1-228-990-00	RES, ADJ, METAL GLAZE	1K					*****					
RV310	1-228-994-00	RES, ADJ, METAL GLAZE	10K										
RV601	1-228-270-00	RES, VAR, CARBON	10K										
RV602	1-228-996-00	RES, ADJ, METAL GLAZE	47K										
RV603	1-228-996-00	RES, ADJ, METAL GLAZE	47K										
		<u>THERMISTOR</u>											
TH301	1-800-200-00	THERMISTOR	S-3K										
TH302	1-800-198-XX	THERMISTOR	S-1K										

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
S004	1-554-174-00	SWITCH, KEY BOARD		C032	1-101-004-00	CERAMIC 0.01MF	50V
S005	1-554-174-00	SWITCH, KEY BOARD		C033	1-101-004-00	CERAMIC 0.01MF	50V
S006	1-554-174-00	SWITCH, KEY BOARD		C034	1-123-318-00	ELECT 33MF	20% 16V
S007	1-554-174-00	SWITCH, KEY BOARD		C035	1-102-978-00	CERAMIC 220PF	5% 50V
S008	1-554-174-00	SWITCH, KEY BOARD		C036	1-102-959-00	CERAMIC 22PF	5% 50V

*A-6721-205-A	TA-22 BOARD, COMPLETE			C037	1-102-959-00	CERAMIC 22PF	5% 50V

*1-556-934-00	CABLE, PIN			C038	1-101-004-00	CERAMIC 0.01MF	50V
*3-662-227-00	HOLDER (R-3), LED			C039	1-101-004-00	CERAMIC 0.01MF	50V
*3-662-383-00	BAND, RETAINER, TUNER			C040	1-161-030-00	CERAMIC 0.0047MF	20% 25V
*3-674-390-00	HOLDER (B), LED			C041	1-161-013-00	CERAMIC 0.01MF	20% 25V
*3-687-523-01	LID, UPPER, SHIELD CASE, TU			C042	1-102-959-00	CERAMIC 22PF	5% 50V
*3-687-524-01	LID, BOTTOM, SHIELD CASE, TU			C043	1-101-004-00	CERAMIC 0.01MF	50V
*3-687-525-01	CASE (MAIN), SHIELD, TU			C044	1-123-318-00	ELECT 33MF	20% 16V
*3-687-550-01	CASE (UPPER LID), SHIELD, AU			C045	1-123-318-00	ELECT 33MF	20% 16V
*3-687-558-01	CASE (MAIN), SHIELD, AU			C050	1-123-356-00	ELECT 10MF	20% 50V
*3-687-559-01	CASE (BOTTOM LID), SHIELD, AU			C051	1-123-356-00	ELECT 10MF	20% 50V
*4-336-029-00	PLATE, SHIELD			C052	1-123-356-00	ELECT 10MF	20% 16V
<u>CAPACITOR</u>				C053	1-123-356-00	ELECT 10MF	20% 50V
C001	1-102-530-00	CERAMIC	120PF 5% 50V	C054	1-102-973-00	CERAMIC 100PF	5% 50V
C002	1-102-529-00	CERAMIC	100PF 5% 50V	C055	1-130-495-51	MYLAR 0.1MF	5% 50V
C003	1-102-508-00	CERAMIC	10PF 0.5PF 50V	C056	1-130-493-51	MYLAR 0.068MF	5% 50V
C004	1-102-523-00	CERAMIC	56PF 5% 50V	C057	1-130-493-51	MYLAR 0.068MF	5% 50V
C006	1-102-125-00	CERAMIC	0.0047MF 10% 50V	C058	1-102-963-00	CERAMIC 33PF	5% 50V
C007	1-102-125-00	CERAMIC	0.0047MF 10% 50V	C059	1-123-380-00	ELECT 1MF	20% 50V
C008	1-102-125-00	CERAMIC	0.0047MF 10% 50V	C060	1-123-381-00	ELECT 2.2MF	20% 50V
C009	1-102-125-00	CERAMIC	0.0047MF 10% 50V	C061	1-102-518-00	CERAMIC 33PF	5% 50V
C010	1-102-125-00	CERAMIC	0.0047MF 10% 50V	C062	1-102-518-00	CERAMIC 33PF	5% 50V
C011	1-102-125-00	CERAMIC	0.0047MF 10% 50V	C063	1-101-004-00	CERAMIC 0.01MF	50V
C012	1-102-125-00	CERAMIC	0.0047MF 10% 50V	C064	1-101-004-00	CERAMIC 0.01MF	50V
C013	1-102-125-00	CERAMIC	0.0047MF 10% 50V	C065	1-102-125-00	CERAMIC 0.0047MF	10% 50V
C014	1-102-125-00	CERAMIC	0.0047MF 10% 50V	C066	1-101-004-00	CERAMIC 0.01MF	50V
C015	1-102-125-00	CERAMIC	0.0047MF 10% 50V	C067	1-101-006-00	CERAMIC 0.047MF	50V
C016	1-123-369-00	ELECT	4.7MF 20% 25V	C068	1-101-006-00	CERAMIC 0.047MF	50V
C017	1-161-013-00	CERAMIC	0.01MF 20% 25V	C301	1-123-356-00	ELECT 10MF	20% 16V
C018	1-123-356-00	ELECT	10MF 20% 16V	C302	1-123-321-51	ELECT 220MF	20% 16V
C019	1-161-013-00	CERAMIC	0.01MF 20% 25V	C303	1-123-321-51	ELECT 220MF	20% 16V
C020	1-123-356-00	ELECT	10MF 20% 16V	C304	1-123-356-00	ELECT 10MF	20% 16V
C021	1-102-129-00	CERAMIC	0.01MF 10% 50V	C305	1-123-356-00	ELECT 10MF	20% 16V
C022	1-102-529-00	CERAMIC	100PF 5% 50V	C306	1-130-487-00	MYLAR 0.022MF	5% 50V
C023	1-102-518-00	CERAMIC	33PF 5% 50V	C307	1-123-380-00	ELECT 1MF	20% 50V
C024	1-102-504-00	CERAMIC	4PF 0.25PF 50V	C308	1-123-380-00	ELECT 1MF	20% 50V
C025	1-102-504-00	CERAMIC	4PF 0.25PF 50V	C309	1-123-318-00	ELECT 33MF	20% 16V
C026	1-102-518-00	CERAMIC	33PF 5% 50V	C310	1-123-306-00	ELECT 47MF	20% 6.3V
C027	1-102-529-00	CERAMIC	100PF 5% 50V	C311	1-130-491-51	MYLAR 0.047MF	5% 50V
C028	1-102-125-00	CERAMIC	0.0047MF 10% 50V	C312	1-130-483-00	MYLAR 0.01MF	5% 50V
C029	1-123-356-00	ELECT	10MF 20% 16V	C313	1-123-318-00	ELECT 33MF	20% 16V
C030	1-102-125-00	CERAMIC	0.0047MF 10% 50V	C314	1-123-318-00	ELECT 33MF	20% 16V
C031	1-123-379-00	ELECT	0.47MF 20% 50V	C315	1-123-380-00	ELECT 1MF	20% 50V
				C316	1-130-471-00	MYLAR 0.001MF	5% 50V
				C317	1-123-380-00	ELECT 1MF	20% 50V
				C318	1-102-111-00	CERAMIC 270PF	10% 50V
				C319	1-130-485-51	MYLAR 0.015MF	5% 50V
				C320	1-123-380-00	ELECT 1MF	20% 50V

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
C321	1-123-369-00	ELECT 4.7MF 20%	25V	IC302	8-759-101-73	IC UPC1513HA	
C323	1-123-607-00	ELECT 0.1MF 20%	50V	IC303	8-759-911-23	IC BA5115	
C331	1-123-332-00	ELECT 47MF 20%	16V				
C332	1-161-013-00	CERAMIC 0.01MF 10%	25V			<u>COIL</u>	
C333	1-161-055-00	CERAMIC 0.022MF 10%	25V	L001	1-408-591-00	MICRO INDUCTOR 1UH	
C334	1-107-166-00	MICA 62PF 5%	500V	L002	1-408-600-00	MICRO INDUCTOR 5.6UH	
C335	1-129-712-00	FILM 0.0068MF 10%	630V	L003	1-408-600-00	MICRO INDUCTOR 5.6UH	
		<u>CERAMIC DISCRIMINATOR</u>		L004	1-408-615-00	MICRO INDUCTOR 100UH	
C001	1-404-380-00	DISCRIMINATOR, CERAMIC 5.5MHZ		L005	1-408-603-00	MICRO INDUCTOR 10UH	
		<u>FILTER</u>		L006	1-408-599-00	MICRO INDUCTOR 4.7UH	
CF001	1-527-263-00	CERAMIC FILTER (5.5MHZ)		L007	1-408-606-00	MICRO INDUCTOR 18UH	
		<u>CONNECTOR</u>		L008	1-408-607-00	MICRO INDUCTOR 22UH	
CN001	*1-560-893-00	PIN, CONNECTOR 5P		L009	1-407-177-XX	MICRO INDUCTOR 470UH	
CN002	*1-560-893-00	PIN, CONNECTOR 5P		L301	1-407-963-00	MICRO INDUCTOR 15MMH	
CN003	*1-560-900-00	PIN, CONNECTOR 12P		L302	1-408-221-00	MICRO INDUCTOR 22MMH	
CN301	*1-508-797-00	PIN, CONNECTOR 4P		L331	1-407-710-00	MICRO INDUCTOR 270UH	
CN302	*1-560-893-00	PIN, CONNECTOR 5P				<u>TRANSISTOR</u>	
CN303	*1-508-743-00	PIN, CONNECTOR 5P		Q001	8-729-203-28	TRANSISTOR 2SC2216	
		<u>TRIMMER</u>		Q002	8-729-245-83	TRANSISTOR 2SC2458	
CT001	1-404-134-00	TRAP, CERAMIC (5.5MHZ)		Q003	8-729-245-83	TRANSISTOR 2SC2458	
		<u>CERAMIC</u>		Q004	8-729-113-32	TRANSISTOR 2SB733	
CX001	1-527-822-00	OSCILLATOR, CERAMIC		Q005	8-729-603-50	TRANSISTOR 2SC403SP	
		<u>DIODE</u>		Q006	8-729-245-83	TRANSISTOR 2SC2458	
D001	8-719-812-31	DIODE TLR123		Q007	8-729-245-83	TRANSISTOR 2SC2458	
D002	8-719-812-32	DIODE TLY123		Q008	8-729-204-83	TRANSISTOR 2SA1048-GR	
D003	8-719-812-33	DIODE TLG123A		Q301	▲8-729-178-54	TRANSISTOR 2SC2785	
D004	8-719-911-19	DIODE 1SS119		Q302	8-729-245-83	TRANSISTOR 2SC2458	
D005	8-719-911-19	DIODE 1SS119		Q303	8-729-245-83	TRANSISTOR 2SC2458	
D009	8-719-911-19	DIODE 1SS119		Q331	8-729-173-37	TRANSISTOR 2SA733-P	
D010	8-719-812-31	DIODE TLR123		Q332	8-729-967-32	TRANSISTOR 2SC2673	
D011	8-719-812-31	DIODE TLR123				<u>RESISTOR</u>	
D013	8-719-911-19	DIODE 1SS119		R001	1-247-847-00	CARBON 4.7K 5% 1/6W	
D301	8-719-911-19	DIODE 1SS119		R002	1-247-839-00	CARBON 2.2K 5% 1/6W	
D302	8-719-911-19	DIODE 1SS119		R003	1-247-815-00	CARBON 220 5% 1/6W	
D303	8-719-000-12	DIODE MC931		R004	1-247-813-00	CARBON 180 5% 1/6W	
D304	8-719-911-19	DIODE 1SS119		R005	1-247-819-00	CARBON 330 5% 1/6W	
		<u>IC</u>		R006	1-247-837-00	CARBON 1.8K 5% 1/6W	
IC001	8-759-276-07	IC TA7607AP		R007	1-247-835-00	CARBON 1.5K 5% 1/6W	
IC002	8-759-193-91	IC UPC1391H		R008	1-247-839-00	CARBON 2.2K 5% 1/6W	
IC003	8-759-800-12	IC LA7920		R009	1-247-877-00	CARBON 82K 5% 1/6W	
IC004	8-759-157-40	IC UPC574J		R010	1-247-867-00	CARBON 33K 5% 1/6W	
IC005	8-759-602-05	IC M50160-019SP		R011	1-247-879-00	CARBON 100K 5% 1/6W	
IC006	8-759-600-66	IC M58653P		R012	1-247-879-00	CARBON 100K 5% 1/6W	
IC301	8-752-006-10	IC CX20061		R013	1-247-901-00	CARBON 820K 5% 1/6W	
				R014	1-247-863-00	CARBON 22K 5% 1/6W	
				R015	1-247-855-00	CARBON 10K 5% 1/6W	
				R016	1-247-829-00	CARBON 820 5% 1/6W	
				R018	1-247-831-00	CARBON 1K 5% 1/6W	
				R019	1-247-813-00	CARBON 180 5% 1/6W	
				R020	1-247-807-00	CARBON 100 5% 1/6W	
				R021	1-247-831-00	CARBON 1K 5% 1/6W	

The components identified by shading and mark ▲ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
R022	1-247-829-00	CARBON	820 5% 1/6W	R315	1-210-825-00	SOLID	3.3M 5% 1/4W
R024	1-247-831-00	CARBON	1K 5% 1/6W	R316	1-247-883-00	CARBON	150K 5% 1/6W
R025	1-247-831-00	CARBON	1K 5% 1/6W	R317	1-247-863-00	CARBON	22K 5% 1/6W
R026	1-247-817-00	CARBON	270 5% 1/6W	R318	1-247-875-00	CARBON	68K 5% 1/6W
R027	1-247-847-00	CARBON	4.7K 5% 1/6W	R319	1-247-859-00	CARBON	15K 5% 1/6W
R028	1-247-821-00	CARBON	390 5% 1/6W	R320	1-247-891-00	CARBON	330K 5% 1/6W
R031	△ 1-212-849-00	FUSIBLE	4.7 5% 1/4W F	R321	1-247-827-00	CARBON	680 5% 1/6W
R032	△ 1-213-146-00	METAL OXIDE	1.8K 5% 1W F	R322	1-247-887-00	CARBON	220K 5% 1/6W
R033	1-247-851-00	CARBON	6.8K 5% 1/6W	R323	1-247-863-00	CARBON	22K 5% 1/6W
R034	1-247-865-00	CARBON	27K 5% 1/6W	R324	1-247-841-00	CARBON	2.7K 5% 1/6W
R035	1-247-855-00	CARBON	10K 5% 1/6W	R325	1-247-859-00	CARBON	15K 5% 1/6W
R036	1-247-879-00	CARBON	100K 5% 1/6W	R326	1-247-819-00	CARBON	330 5% 1/6W
R037	1-247-879-00	CARBON	100K 5% 1/6W	R327	1-247-871-00	CARBON	47K 5% 1/6W
R038	1-247-839-00	CARBON	2.2K 5% 1/6W	R328	1-247-783-00	CARBON	10 5% 1/6W
R039	1-247-835-00	CARBON	1.5K 5% 1/6W	R329	1-247-875-00	CARBON	68K 5% 1/6W
R040	1-247-833-00	CARBON	1.2K 5% 1/6W	R330	△ 1-246-873-11	CARBON	22 5% 1/4W F
R041	1-247-887-00	CARBON	220K 5% 1/6W	R331	1-247-867-00	CARBON	33K 5% 1/6W
R042	△ 1-213-146-00	METAL OXIDE	1.8K 5% 1W F	R332	1-247-847-00	CARBON	4.7K 5% 1/6W
R043	1-247-863-00	CARBON	22K 5% 1/6W	R333	1-247-859-00	CARBON	15K 5% 1/6W
R044	1-247-863-00	CARBON	22K 5% 1/6W	R334	△ 1-247-771-00	CARBON	3.3 5% 1/6W F
R045	1-247-863-00	CARBON	22K 5% 1/6W	R335	1-247-855-00	CARBON	10K 5% 1/6W
R046	1-247-863-00	CARBON	22K 5% 1/6W	R336	1-247-901-00	CARBON	820K 5% 1/6W
R047	1-247-863-00	CARBON	22K 5% 1/6W	<u>VARIABLE RESISTOR</u>			
R048	1-247-891-00	CARBON	330K 5% 1/6W	RV001	1-228-746-00	RES, ADJ, CARBON 2.2K	
R049	1-247-839-00	CARBON	2.2K 5% 1/6W	RV301	1-228-749-00	RES, ADJ, CARBON 22K	
R050	1-247-851-00	CARBON	6.8K 5% 1/6W	RV331	1-228-998-00	RES, ADJ, METAL GLAZE 220K	
R051	1-247-843-00	CARBON	3.3K 5% 1/6W	<u>SWITCH</u>			
R052	1-247-815-00	CARBON	220 5% 1/6W	S001	1-553-997-00	SWITCH, KEY BOARD	
R055	1-247-863-00	CARBON	22K 5% 1/6W	S002	1-553-997-00	SWITCH, KEY BOARD	
R059	1-247-863-00	CARBON	22K 5% 1/6W	S003	1-553-997-00	SWITCH, KEY BOARD	
R060	1-247-863-00	CARBON	22K 5% 1/6W	S004	1-553-997-00	SWITCH, KEY BOARD	
R061	1-247-863-00	CARBON	22K 5% 1/6W	S005	1-553-997-00	SWITCH, KEY BOARD	
R062	1-247-863-00	CARBON	22K 5% 1/6W	S006	1-553-997-00	SWITCH, KEY BOARD	
R063	1-247-831-00	CARBON	1K 5% 1/6W	S007	1-553-997-00	SWITCH, KEY BOARD	
R064	1-247-831-00	CARBON	1K 5% 1/6W	<u>FILTER</u>			
R068	1-247-847-00	CARBON	4.7K 5% 1/6W	SF001	1-404-433-00	SAWF	
R069	1-247-863-00	CARBON	22K 5% 1/6W	<u>TRANSFORMER</u>			
R070	1-247-855-00	CARBON	10K 5% 1/6W	T001	1-404-476-00	COIL, 1F	
R071	1-247-855-00	CARBON	10K 5% 1/6W	T002	1-404-476-00	COIL, 1F	
R073	1-247-853-00	CARBON	8.2K 5% 1/6W	T003	1-404-428-00	VIFT	
R074	1-247-147-00	CARBON	4.7K 5% 1/4W	T004	1-404-427-00	VIFT	
R075	1-247-847-00	CARBON	4.7K 5% 1/6W	T005	1-404-427-00	VIFT	
R302	1-247-879-00	CARBON	100K 5% 1/6W	T331	1-433-275-00	TRANSFORMER, BIAS OSCILLATOR	
R303	1-247-833-00	CARBON	1.2K 5% 1/6W	*****			
R304	1-247-839-00	CARBON	2.2K 5% 1/6W				
R305	1-247-875-00	CARBON	68K 5% 1/6W				
R306	1-247-837-00	CARBON	1.8K 5% 1/6W				
R308	1-247-871-00	CARBON	47K 5% 1/6W				
R310	1-247-843-00	CARBON	3.3K 5% 1/6W				
R311	1-247-855-00	CARBON	10K 5% 1/6W				
R312	1-247-871-00	CARBON	47K 5% 1/6W				
R313	1-247-855-00	CARBON	10K 5% 1/6W				
R314	1-247-875-00	CARBON	68K 5% 1/6W				

The components identified by shading and mark **△** are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

MT-10**RD-21****RD-20****N****PS-45****PS-46**

Ref.No	Part No.	Description	Remark	Ref.No	Part No.	Description	Remark
	*1-613-234-11	MT-10 BOARD *****					
		<u>TUNER</u>				<u>IC</u>	
	TU001	1-463-421-21 TUNER, ET (BT-883)		IC001	8-759-102-84	IC UPC1373HA	
		*****				<u>COIL</u>	
				L001	1-404-310-00	COIL	

	*1-613-233-11	RD-21 BOARD *****				*1-613-227-11	PS-45 BOARD *****
		<u>DIODE</u>				1-533-162-00	HOLDER, FUSE
	PC101	8-719-913-41 DIODE SPI201-22				<u>CAPACITOR</u>	
		<u>RESISTOR</u>				C001	1-130-710-00 FILM 0.1MF 20% 250V
	R101	1-247-815-00 CARBON 220 5% 1/6W				C002	1-125-298-00 ELECT(BLOCK) 10000MF 20% 25V
	R102	1-247-867-00 CARBON 33K 5% 1/6W				C003	1-123-332-00 ELECT 47MF 20% 16V
	R103	1-247-859-00 CARBON 15K 5% 1/6W				C004	1-123-332-00 ELECT 47MF 20% 16V
		*****					<u>CONNECTOR</u>
	*1-613-232-11	RD-20 BOARD *****				CN001	*1-560-893-00 PIN, CONNECTOR 5P
		<u>DIODE</u>				CN002	*1-560-890-00 PIN, CONNECTOR 2P
	PC001	8-719-913-41 DIODE SPI201-22					<u>DIODE</u>
		<u>RESISTOR</u>				D001	1-8-719-505-20 DIODE S5VB20
	R001	1-247-815-00 CARBON 220 5% 1/6W					<u>FUSE</u>
	R002	1-247-867-00 CARBON 33K 5% 1/6W				F001	1-532-203-11 FUSE, TIME-LAG T2A 250V
	R003	1-247-859-00 CARBON 15K 5% 1/6W				F002	1-532-350-11 FUSE, TIME-LAG T4A 250V
		*****					<u>RESISTOR</u>
	*1-606-794-00	N BOARD *****				R001	1-247-823-00 CARBON 470 5% 1/6W
		<u>CAPACITOR</u>					*****
	C001	1-123-617-00 ELECT 10MF 20% 16V					*1-613-228-11
	C002	1-123-617-00 ELECT 10MF 20% 16V					PS-46 BOARD *****
	C003	1-123-617-00 ELECT 10MF 20% 16V					1-533-162-00
	C004	1-161-057-00 CERAMIC 0.033MF 10% 25V					HOLDER, FUSE
	C005	1-106-184-00 MYLAR 0.0033MF 5% 50V					*3-660-552-00
							HEAT SINK
	C006	1-123-821-00 ELECT 47MF 20% 16V					7-685-647-71
							SCREW +BVTP 3X10 TYPE2 IT-3
		<u>DIODE</u>					<u>CAPACITOR</u>
	D001	8-719-110-32 DIODE PH302B				C101	1-123-375-00 ELECT 220MF 20% 63V
						C102	1-123-375-00 ELECT 220MF 20% 63V
						C103	1-123-330-00 ELECT 22MF 20% 16V
						C104	1-123-330-00 ELECT 22MF 20% 16V
							<u>CONNECTOR</u>
						CN101	*1-560-894-00 PIN, CONNECTOR 6P
						CN102	*1-560-893-00 PIN, CONNECTOR 5P
						CN103	*1-560-891-00 PIN, CONNECTOR 3P
						CN104	*1-560-894-00 PIN, CONNECTOR 6P
						CN105	*1-560-892-00 PIN, CONNECTOR 4P

The components identified by shading and mark **Δ** are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

PS-46

PS-69

LM-8

Ref.No	Part No.	Description	Remark
CN106	*1-560-891-00	PIN, CONNECTOR 3P	
<u>DIODE</u>			
D101	8-719-200-02	DIODE 10E2	
D102	8-719-200-02	DIODE 10E2	
D103	8-719-100-39	DIODE RD6.2E-B3	
D105	8-719-200-02	DIODE 10E2	
<u>FUSE</u>			
F101	△.1-532-279-11	FUSE, TIME-LAG T500mA 250V	
<u>TRANSISTOR</u>			
Q101	8-729-316-16	TRANSISTOR 2SC1061	
Q102	8-729-245-83	TRANSISTOR 2SC2458	
Q103	8-729-316-16	TRANSISTOR 2SC1061	
Q104	8-729-178-54	TRANSISTOR 2SC2785	
<u>RESISTOR</u>			
R101	1-244-887-51	CARBON 3.9K 5% 1/2W	
R102	1-244-891-51	CARBON 5.6K 5% 1/2W	
R103	1-247-851-00	CARBON 6.8K 5% 1/6W	
R104	1-247-847-00	CARBON 4.7K 5% 1/6W	
R105	1-247-855-00	CARBON 10K 5% 1/6W	
R106	△.1-213-144-00	METAL OXIDE 1.2K 5% 1W F	
R107	△.1-206-477-00	METAL OXIDE 39 5% 2W F	
R111	1-247-783-00	CARBON 10 5% 1/6W	

	*1-613-940-11	PS-69 BOARD	
<u>IC</u>			
IC001	8-749-912-29	IC STR1229	

	*1-605-071-00	LM-8 BOARD	
<u>CAPACITOR</u>			
C101	1-161-057-00	CERAMIC 0.033MF 10% 50V	
C102	1-161-057-00	CERAMIC 0.033MF 10% 50V	
<u>COIL</u>			
L101	1-408-120-00	MICRO INDUCTOR 18UH	
L102	1-408-120-00	MICRO INDUCTOR 18UH	

Ref.No	Part No.	Description	Remark
MISCELLANEOUS			

	A-6710-075-A	ACE ASSY	
	△.1-464-388-11	BOOSTER MIXER, RF MODULATOR (RFU-821)	
	△.1-551-908-41	CORD, POWER	
	8-825-508-10	HEAD, FE (FULL ERASE HEAD)	
L901	1-464-330-11	SENSOR, S COIL	
L902	1-464-329-31	SENSOR, T COIL	
M902	8-838-080-01	MOTOR, DC (BHF-1908B)(CAPSTAN MOTOR)	
M903	*A-4910-049-A	R STATOR BOARD, COMPLETE (REEL MOTOR)	
M904	X-3679-268-1	MOTOR ASSY, L (LOADING/THREADING)	
PM901	△.1-454-349-41	SOLENOID, PLUNGER (PINCH)	
PM902	△.1-454-371-31	SOLENOID, PLUNGER (BRAKE)	
S901	1-554-839-11	SWITCH, LEAF (2 GANG) (REC PROOF/CASSETTE DOWN)	
S903	1-554-840-11	SWITCH, LEAF (THREADING END)	
S904	1-554-840-11	SWITCH, LEAF (CASSETTE ON)	
T901	△.1-447-894-11	TRANSFORMER, POWER	

ACCESSORIES AND PACKING MATERIALS			

	Part No.	Description	Remark
	A-6765-566-A	COMMANDER ASSY RMT-231/SILVER	
	A-6765-639-A	COMMANDER ASSY RMT-231/GRAY	
	1-556-893-00	CORD ASSY, COAXIAL	
	3-656-301-00	SCREWDRIVER, CONTROL	
	*3-677-503-00	SHEET, PROTECTION	
	3-681-287-01	LID, ACCESSORY CASE	
	3-684-259-01	CASE, ACCESSORY	
	*3-687-580-01	CUSHION (UPPER)	
	*3-687-581-01	CUSHION (LOWER)	
	*3-687-584-01	INDIVIDUAL CARTON (GRAY MODEL)	
	*3-687-584-11	INDIVIDUAL CARTON (SILVER MODEL)	
	3-701-630-00	BAG, POLYETHYLENE	
	3-760-099-41	MANUAL, INSTRUCTION (ENGLISH/GERMAN)	

The components identified by shading and mark △ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

SECTION 7 ADJUSTMENT

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1.	PREPARATION FOR MECHANICAL SECTION CHECK, ADJUSTMENT AND REPLACEMENT		3-7-4.	Mounting the FL Cassette Compartment Assembly	129
1-1.	Disassembly of Cabinet	114	3-8.	Removal of the No. 2 and No. 3 Guides	
1-2.	Removal of the RP-20 Board	115	3-8-1.	Removal of the No. 2 Guide	130
1-3.	Removal of the TA-22 Board	116	3-8-2.	Removal of the No. 3 Guide	130
1-4.	Removal of the YC-31 Board	116	3-9.	Replacement and Adjustment of the S Threading Ring	
1-5.	Removal of the Power Block	117	3-9-1.	Preparation to Remove the S Threading Ring Removal of the ACE Assembly, FE Head and Threading Motor	131
1-6.	Operation of the Unit With the FL Cassette Compartment Removed		3-9-2.	Removal of the S Threading Ring	133
1-6-1.	How to put the Unit into Threading Completed Mode when the FL Cassette Compartment is Removed	118	3-9-3.	S Threading Ring Mounting and Position Adjustment	134
1-6-2.	Playback Without Cassette Installed	118	3-10.	Pinch Snap-Fit Limiter Gap Check and Adjustment	135
1-6-3.	How to put in Recording Mode Without Cassette Installed	118	3-11.	Threading End Switch and T Coil Sensor	
1-7.	How to Load, Thread, Unload and Unthread With the Power Off	119	3-11-1.	Threading End Switch (TE Switch) Position Check and Adjustment	136
1-7-1.	Manual Loading and Unloading	119	3-11-2.	T Coil Sensor Mounting and Operation Check	137
1-7-2.	Manual Threading and Unthreading	119	3-12.	Removal and Adjustment of the Reel Block Assembly	
1-8.	Tools and Fixtures Required For Servicing	120	3-12-1.	Removal of the Reel Block Assembly	138
			3-12-2.	Adjustment of the Position of the Tension Regulation Lever	138
2.	PERIODIC CHECK AND MAINTENANCE		3-13.	Adjustment of the Forward Back Tension	139
2-1.	Post-Repair Maintenance		3-14.	Adjustment of the Forward Torque	139
2-1-1.	Cleaning of Rotating Head Disk Assembly	121			
2-1-2.	Cleaning of the Tape Movement System	121	4.	TAPE PATH ADJUSTMENT	
2-1-3.	Cleaning the Drive System	121	4-1.	Tracking Adjustment	140
2-2.	Periodic Check Items	122	4-1-1.	Preparation for Adjustment	141
			4-1-2.	Entrance Side Adjustment	141
			4-1-3.	Exit Side Adjustment	143
3.	CHECK, ADJUSTMENT AND REPLACEMENT PROCEDURES		4-2.	Adjustments After Replacement of the Ace Assembly	
3-1.	Replacement of Rotating Head Disk Assembly		4-2-1.	Exit Side Tracking Adjustment	144
3-1-1.	Removal of the Rotating Head Disk Assembly	123	4-2-2.	CTL Head (ACE Assembly) Position Adjustment	145
3-1-2.	Mounting of the Rotating Head Disk Assembly	123	4-2-3.	Audio Head (ACE Assembly) Azimuth Adjustment	146
3-2.	Video Head Dihedral Check and Adjustment	124	4-2-4.	Audio Head (ACE Assembly) Height Adjustment	146
3-3.	Replacement and Adjustment of the Drum Assembly		4-3.	How to Inspect the Tape Traveling When Adjusting the Tape Path	147
3-3-1.	Replacement of the Drum Assembly	125			
3-3-2.	Adjustment of the Motor Gap when Replacing the Drum Assembly	126	5.	ELECTRICAL ALIGNMENT	
3-4.	Replacement of the Capstan Motor		5-1.	Power Supply Check (PS-46 Board)	150
3-4-1.	Removal of the Capstan Motor	126	5-2.	System Control Check (SS-34 Board)	150
3-5.	Removal of the S Coil Sensor	127	5-3.	Servo System Alignment	
3-6.	Removal of the FL Cassette Compartment Assembly	127	5-3-1.	Drum Servo System Alignment	150
3-7.	Adjustment of the FL Cassette Compartment		5-3-2.	Capstan Servo System Alignment	151
3-7-1.	Adjustment of the Position of the Right Gear of the FL Cassette Compartment Assembly	128	5-3-3.	STILL Servo System Alignment.	152
3-7-2.	Cassette ON Switch Operation Check and Adjustment	128	5-4.	PAL Video System Alignment.	153
3-7-3.	Checking and Adjustment of the Cassette Door Assembly	129	5-4-1.	Playback System Alignment	153
			5-4-2.	Record System Alignment	155
			5-5.	Audio System Adjustment (TA-22 Board)	157
			5-6.	Tuner System Adjustment (TA-22 Board)	158
			5-7.	Timer System Adjustment (TM-57 Board)	158
			5-8.	SECAM Video System Alignment.	159

1. PREPARATION FOR MECHANICAL SECTION CHECK, ADJUSTMENT AND REPLACEMENT

1-1. DISASSEMBLY OF CABINET

- 1) Remove the four case set screws ① .
- 2) Remove the upper case ② in the direction shown by the arrow A .
- 3) Loosen the eight screws (BVTP3 x 8) ③ .
- 4) Remove the lower case ④ in the direction shown by the arrow B .
- 5) Remove the three screws (BVTP3 x 8) ⑤ .
- 6) Remove the two claws ⑥ in the direction shown by the arrow C , then remove the front panel ⑦ in the direction shown by the arrow D .

Note: Follow the disassembly procedure in the numerical order given.

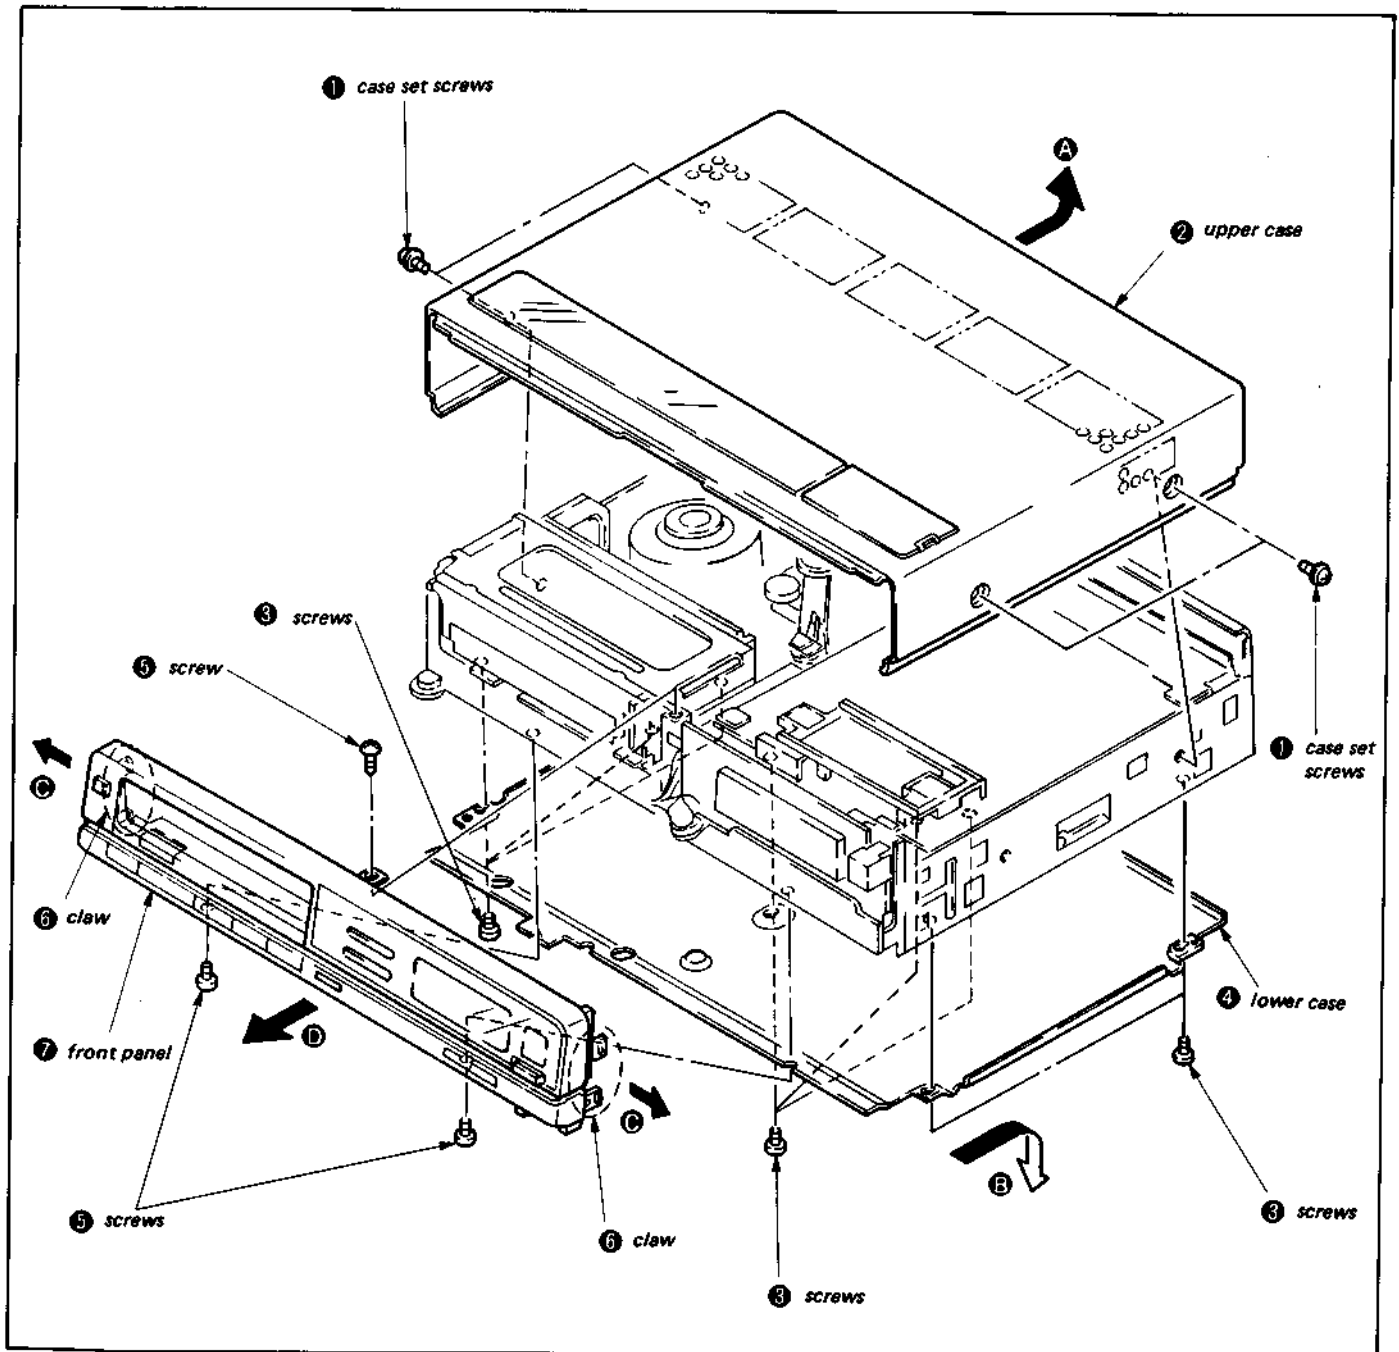


Fig. 1-1. Disassembly of Cabinet

1-2. REMOVAL OF THE RP-20 BOARD

- 1) Pull out the connector CN501 ① .
- 2) Remove the two screws (BVTP3 x 8) ② .
- 3) Pull out the three connectors (CN503, CN504) ③ , ④ .
- 4) Remove the two shield cases ⑤ in the direction shown by the arrows A and B .

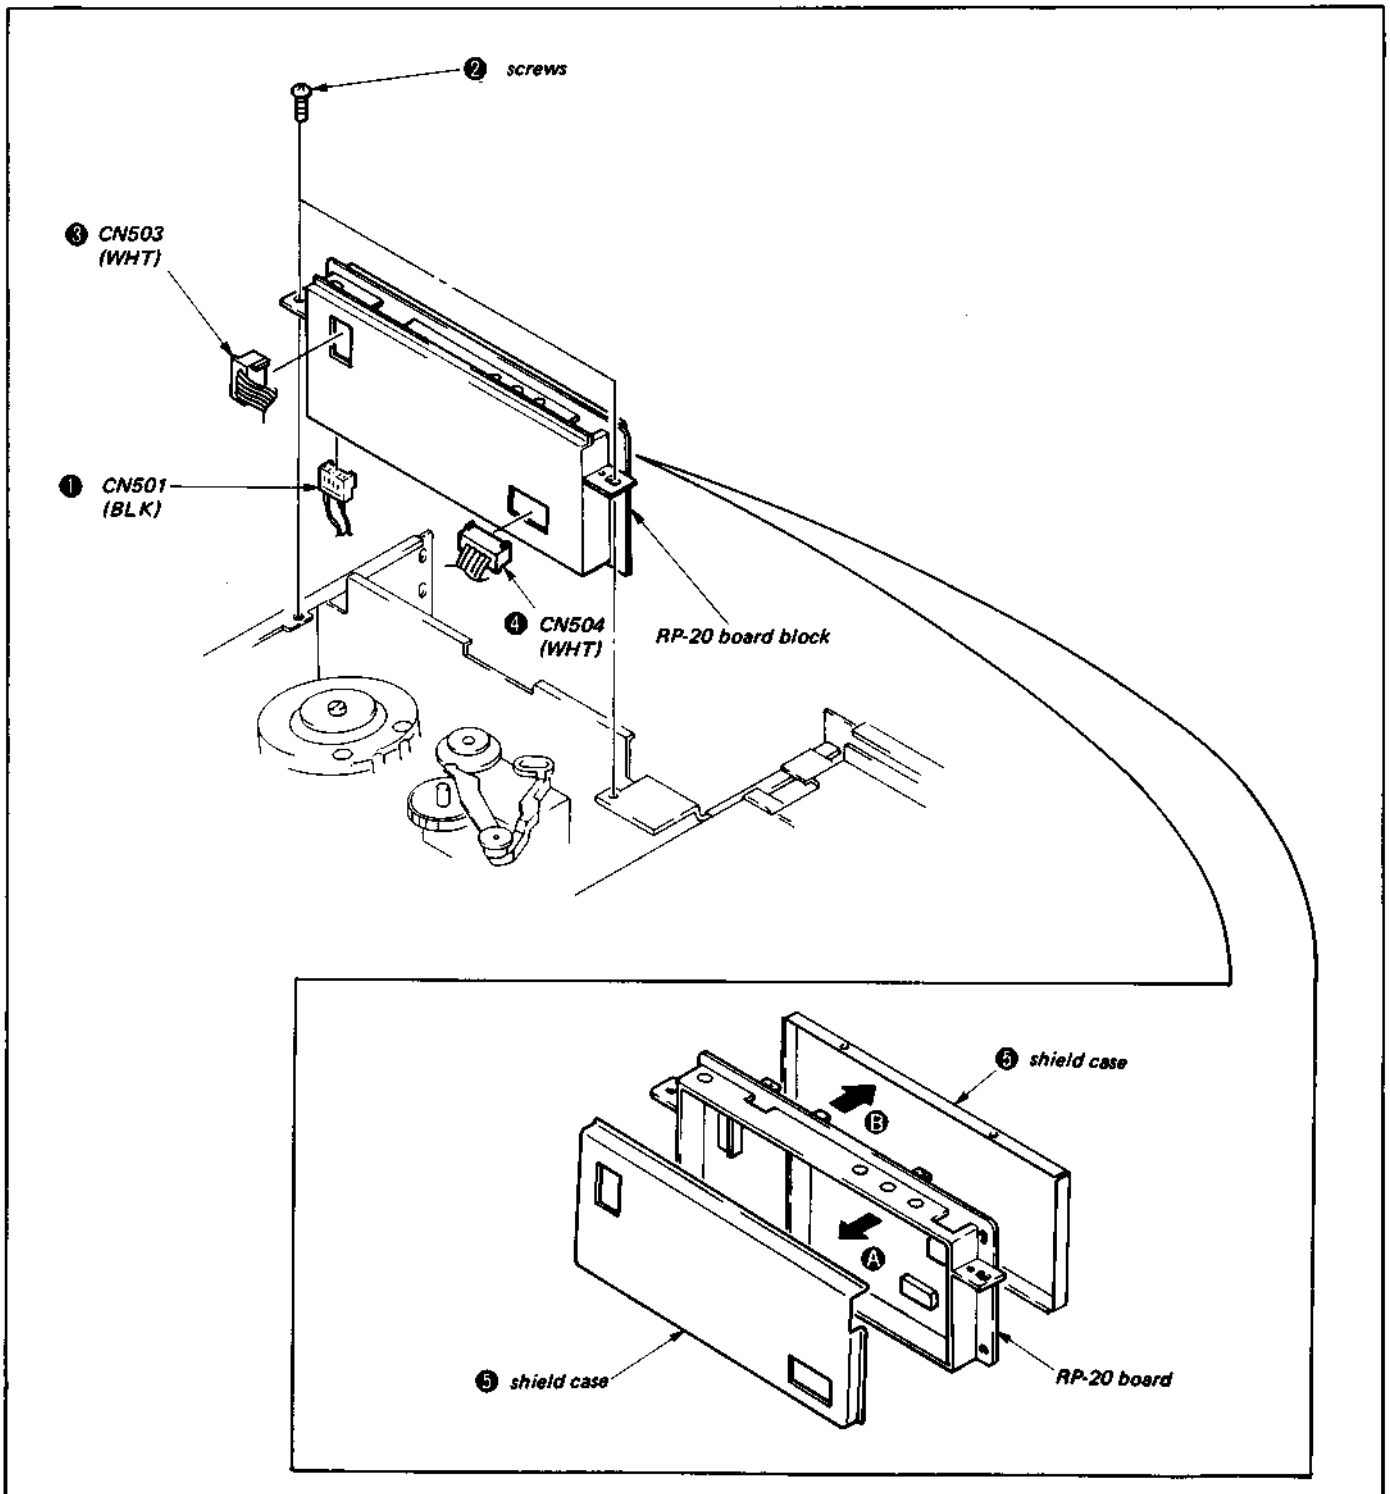


Fig. 1-2. Removal of the RP-20 Board

1-3. REMOVAL OF THE TA-22 BOARD

- 1) Remove the two screws (BVTP3 x 8) ① .
- 2) Remove the TA-22 board ② in the direction shown by the arrow.

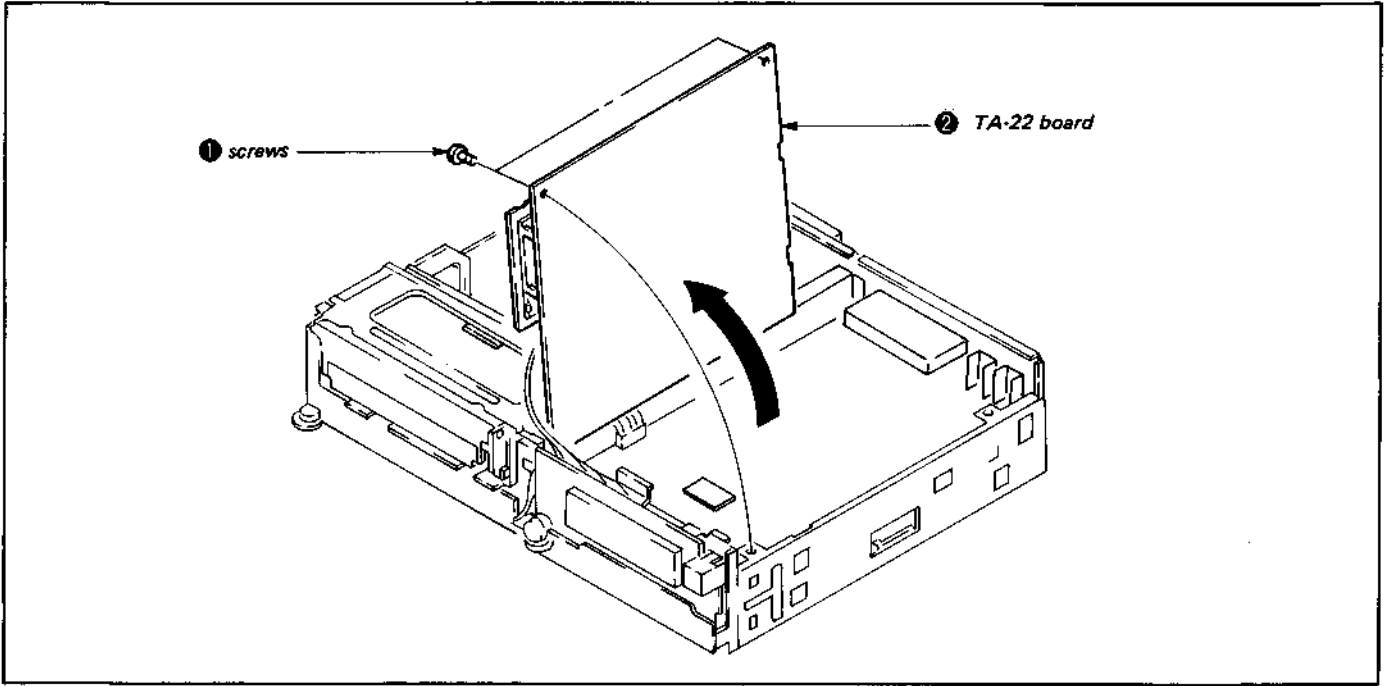


Fig. 1-3. Removal of the TA-22 Board

1-4. REMOVAL OF THE YC-31 BOARD

- 1) Stand the set with the left side panel on the bottom.
- 2) Remove the screw (BVTP3 x 8) ① .
- 3) Remove the plate, connector ② in the direction shown by the arrow A .
- 4) Remove the two screws (BVTP3 x 8) ③ .
- 5) Remove the YC-31 board ④ in the direction shown by the arrow B .

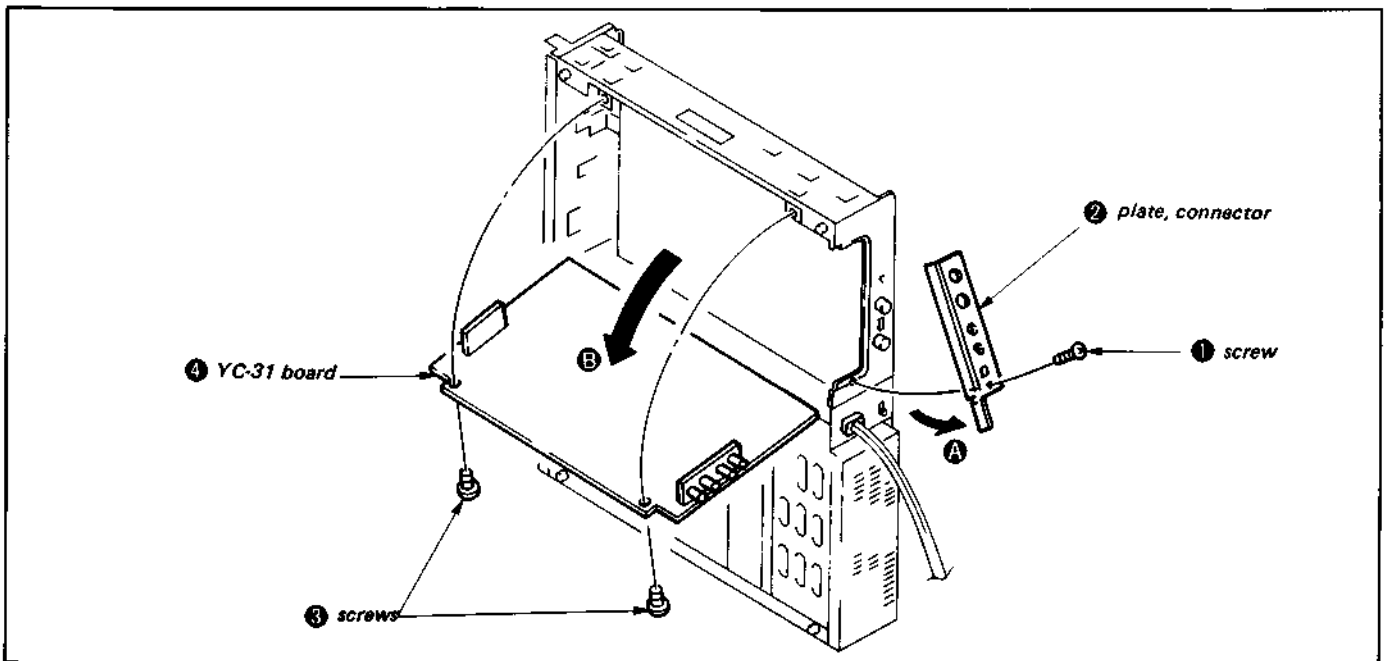


Fig. 1-4. Removal of the YC-31 Board

1-5. REMOVAL OF THE POWER BLOCK

- 1) Remove the six screws (BVTP3 x 8) ❶ .
- 2) Pull out the five connectors (CN101, CN102, CN103, CN104, CN106) ❷ .
- 3) Remove the power block ❸ in the direction shown by the arrow.

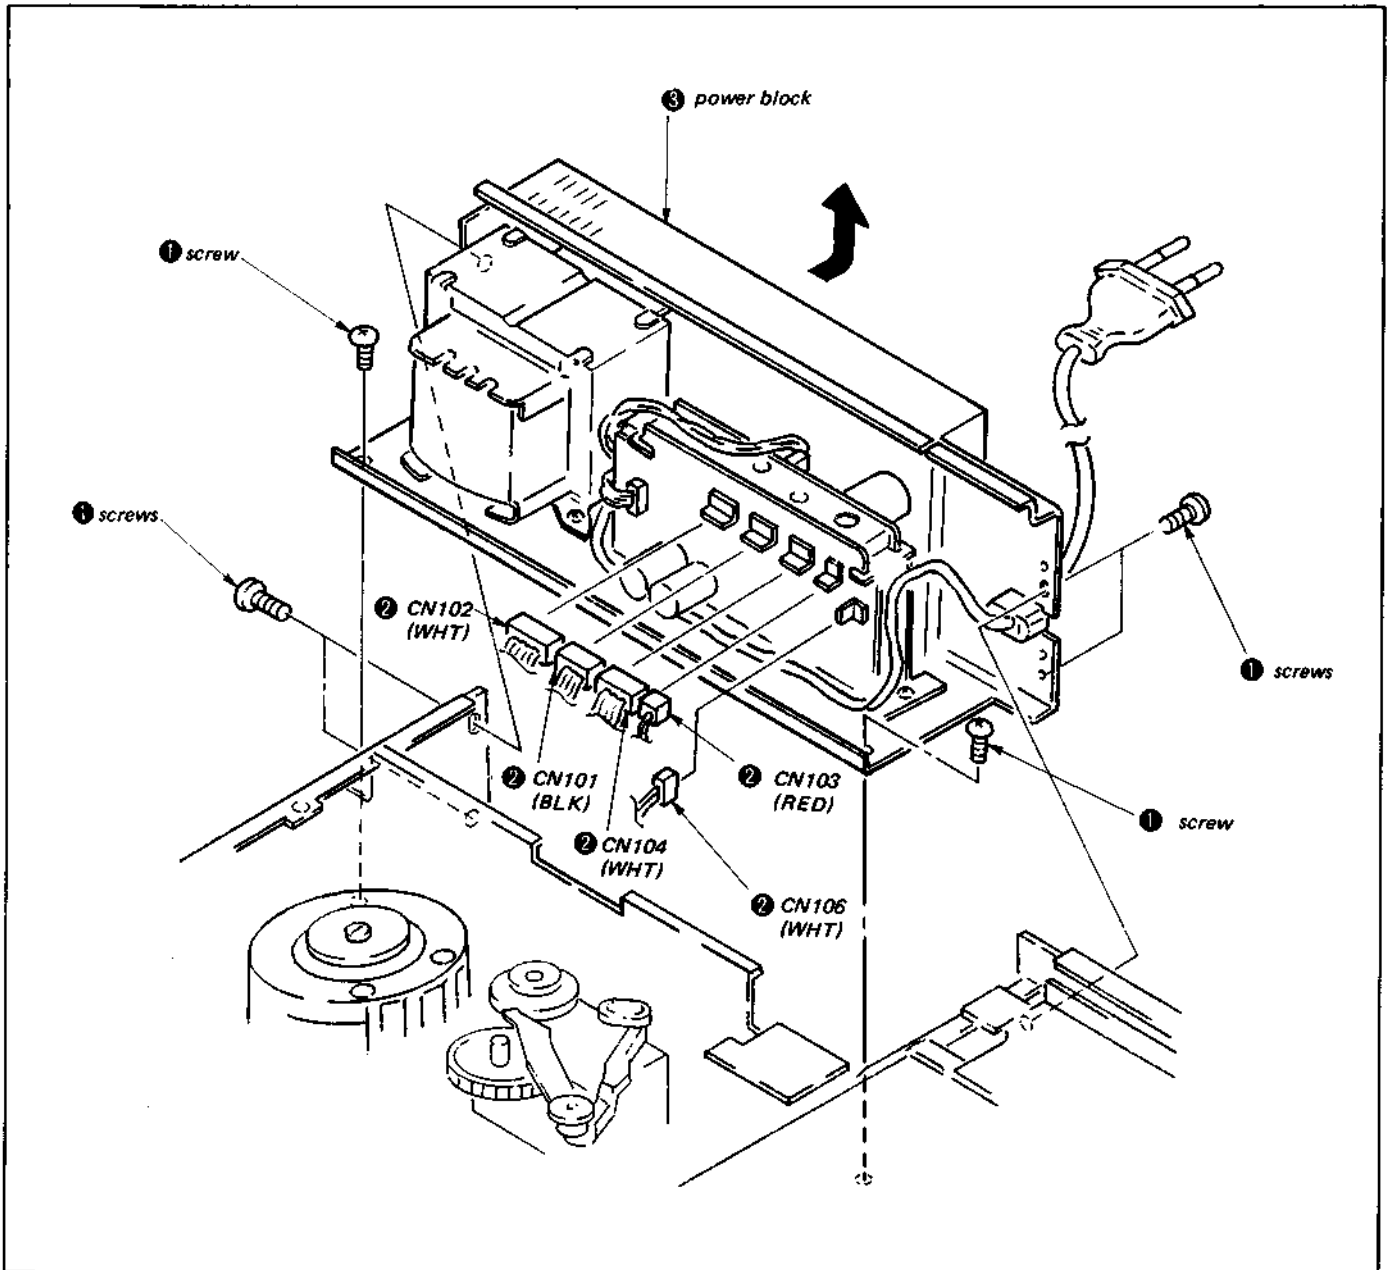


Fig. 1-5. Removal of the Power Block

1-6. OPERATION OF THE UNIT WITH THE FL CASSETTE COMPARTMENT REMOVED

1-6-1. How to Put the Unit into Threading Completed Mode when the FL Cassette Compartment is Removed

- 1) Connect ordinary screwdriver to short the leaf switch (cassette-on switch).

Note:

Be careful that the ordinary screwdriver do not touch any other parts (use tape or other insulation).

- 2) Press the cassette-down switch and leave it pressed in. When the power button is turned ON, threading starts.

* Refer to 3-6 for instructions on how to remove the FL cassette compartment.

[How to EJECT in this condition]

- Press the EJECT button. When unthreading is completed and the internal gear starts to turn, turn the power OFF.

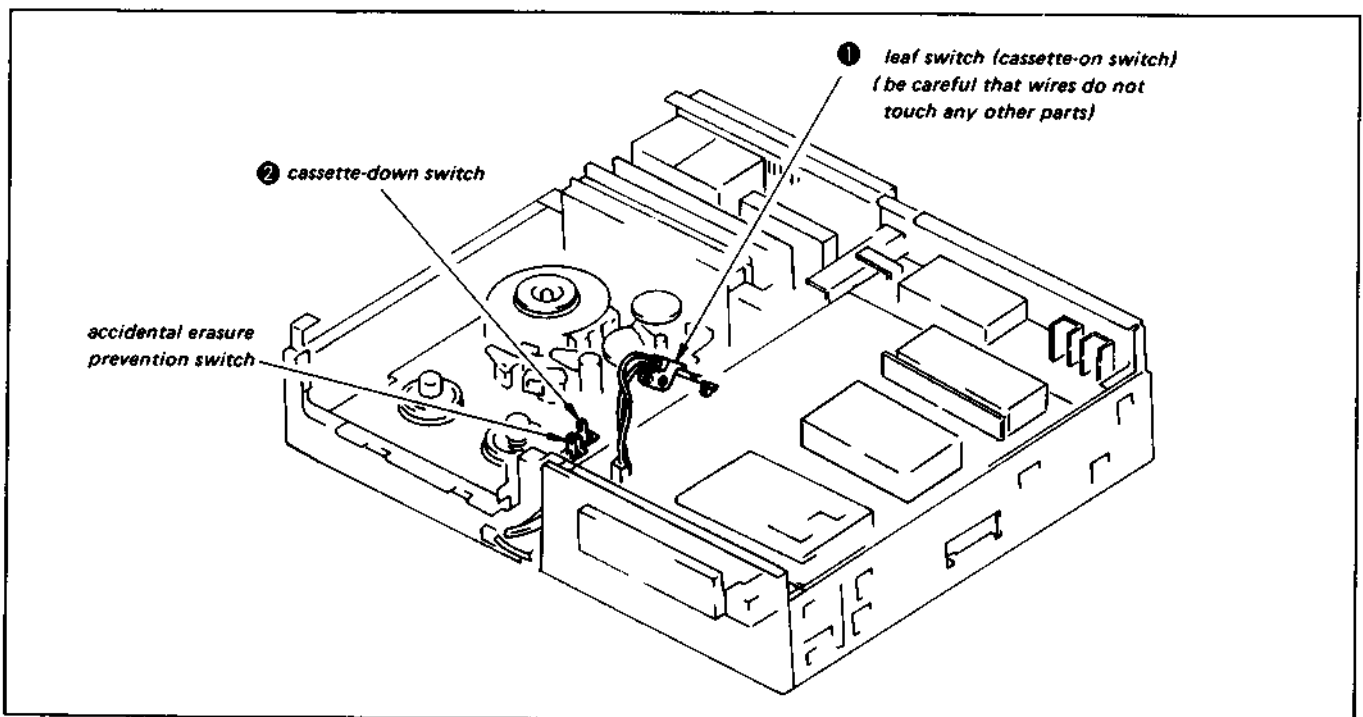


Fig. 1-6. How to thread the tape when the FL cassette compartment has been removed

1-6-2. Playback Without Cassette Installed

Complete threading by the procedure described in 1-6-1, then press the playback button.

1-6-3. How to Put in Recording Mode Without Cassette Installed

1. Thread by the procedure in 1-6-1 then press the accidental erasure prevention switch shown in Fig. 1-7.
2. With the accidental erasure prevention switch pressed down, press the recording button.

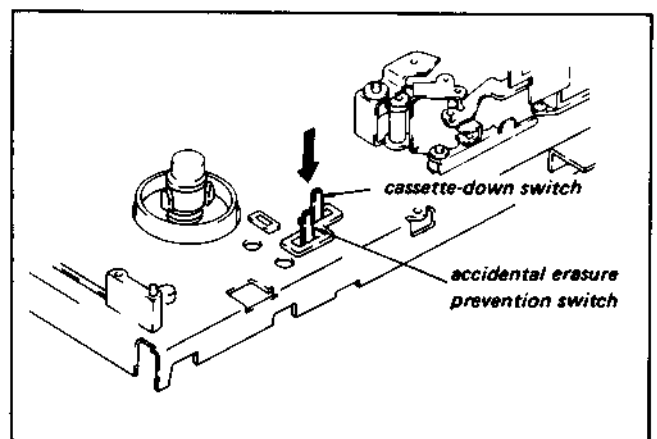


Fig. 1-7. How to put the recorder in recording mode with the FL cassette compartment removed

1-7. HOW TO LOAD, THREAD, UNLOAD AND UNTHREAD WITH THE POWER OFF

1-7-1. Manual Loading and Unloading

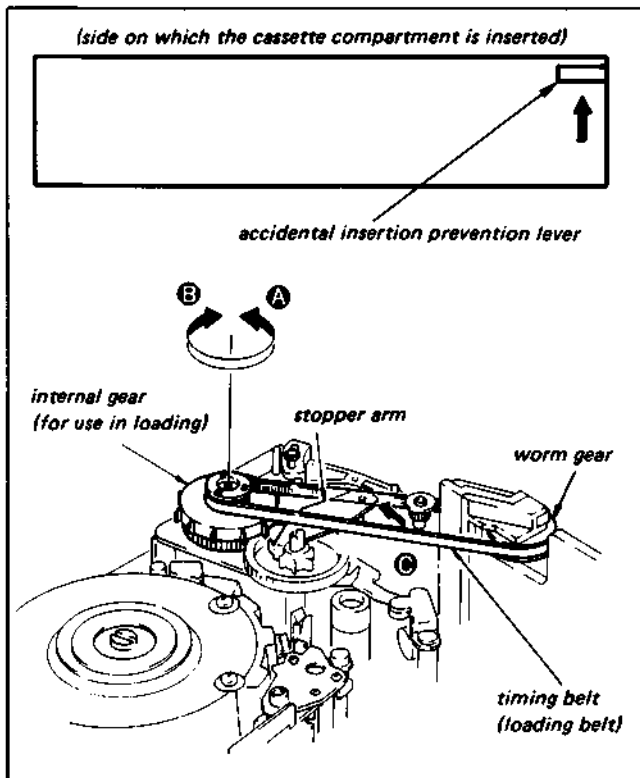


Fig. 1-8. Manual loading and unloading

- 1) Release the right accidental insertion prevention lever inside the cassette compartment, then press the stopper arm in the direction of arrow **A** and release the internal gear stop.
- 2) Turn the internal gear manually in the direction of arrow **B** until loading is completed.
- 3) To unload, turn the internal gear in the direction of arrow **B**.

Note:

When the loading belt has been removed, load and unload by turning the worm gear manually.

1-7-2. Manual Threading and Unthreading

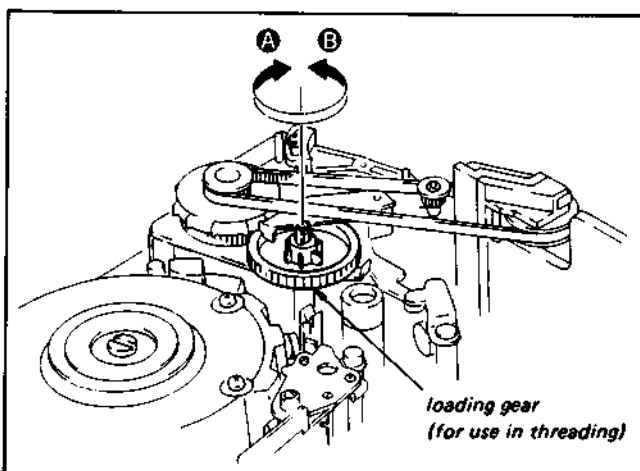


Fig. 1-9. Manual threading and unthreading

- 1) Turn the loading gear in the direction of arrow **A** until loading is completed.
- 2) To unthread, turn the loading gear in the direction of arrow **B**.

Note:

Always turn the loading gear sideways by hand.
Never use a screwdriver or other tool.

1-8. TOOLS AND FIXTURES REQUIRED FOR SERVICING

Ref.No.	Name	Part Code	Carved Jig No.	Use and Remarks
J-1	Torque Measurement Tape	J-6080-003-C	SL-0003C	forward torque and back tension measurement
J-2	Parallel Plate	J-6086-570-A	SL-0657	audio/CTL head lateral adjustment capstan shaft vertical adjustment
J-3	Dental Mirror (handle) Dental Mirror (mirror)	J-6080-029-A J 6080 030 1	SL-5052	tape path and tape traveling adjustment check
J-4	Alignment Tape (KR5-2H)	8-969-995-52	----	tracking, overall adjustment of picture quality, etc.
J-5	Cleaning Fluid	Y-2031-001-0	----	
J-6	Thickness Gauge	9-911-053-00		
J-7	Chamois Cloth	2-034-697-00	----	cleaning
J-8	Head Demagnetizer	widely available	----	demagnetization of video head and audio head
J-9	Cleaning Cassette Tape	8-888-004-00	----	video head cleaning
J-10	Dihedral Adjustment Screw	J-6080-013-A	SL-0013	video dihedral adjustment

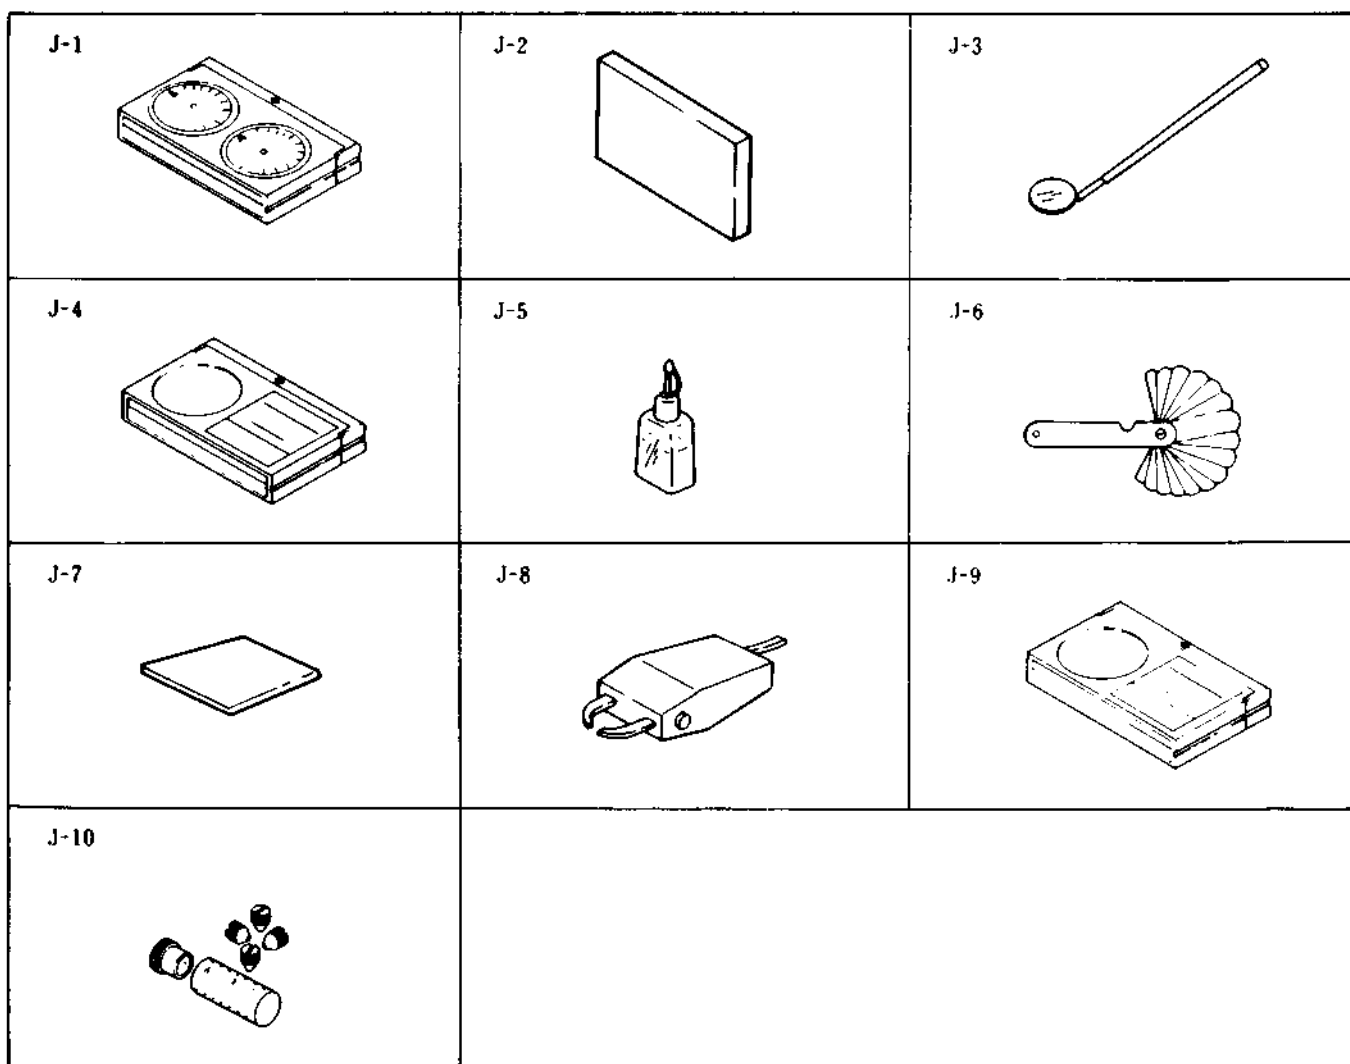


Fig. 1-10. Tools and fixtures required for servicing

2. PERIODIC CHECK AND MAINTENANCE

In order to obtain the best performance from this unit and make full use of its capabilities, and to extend the life of the unit and tapes, it is recommended that the following periodic checks and maintenance be performed.

2-1. POST-REPAIR MAINTENANCE

The following must be done after every repair regardless of how many hours the user has operated the machine.

2-1-1. Cleaning of Rotating Head Disk Assembly

- 1) Press a chamois cloth (Jig Ref. No. J-7) which has been dipped in cleaning fluid (Jig Ref. No. J-5) lightly against the rotating drum assembly, then do the cleaning by slowly rotating the rotating head disk by hand. (Never try to clean by using the motor to turn it.)
- 2) Never try to clean by moving the chamois cloth at a right angle to the head tip. There is a very great danger of damaging the head tip if this is done.

2-1-2. Cleaning of the Tape Movement System

- 1) Clean the surfaces which the tape contacts during its movement (tape guide, drum assembly surface, capstan, pinch roller, etc.) with a chamois cloth that has been dipped in cleaning fluid.

2-1-3. Cleaning the Drive System

- 1) Clean the driving parts with a cloth that has been dipped in cleaning fluid.

parts requiring cleaning

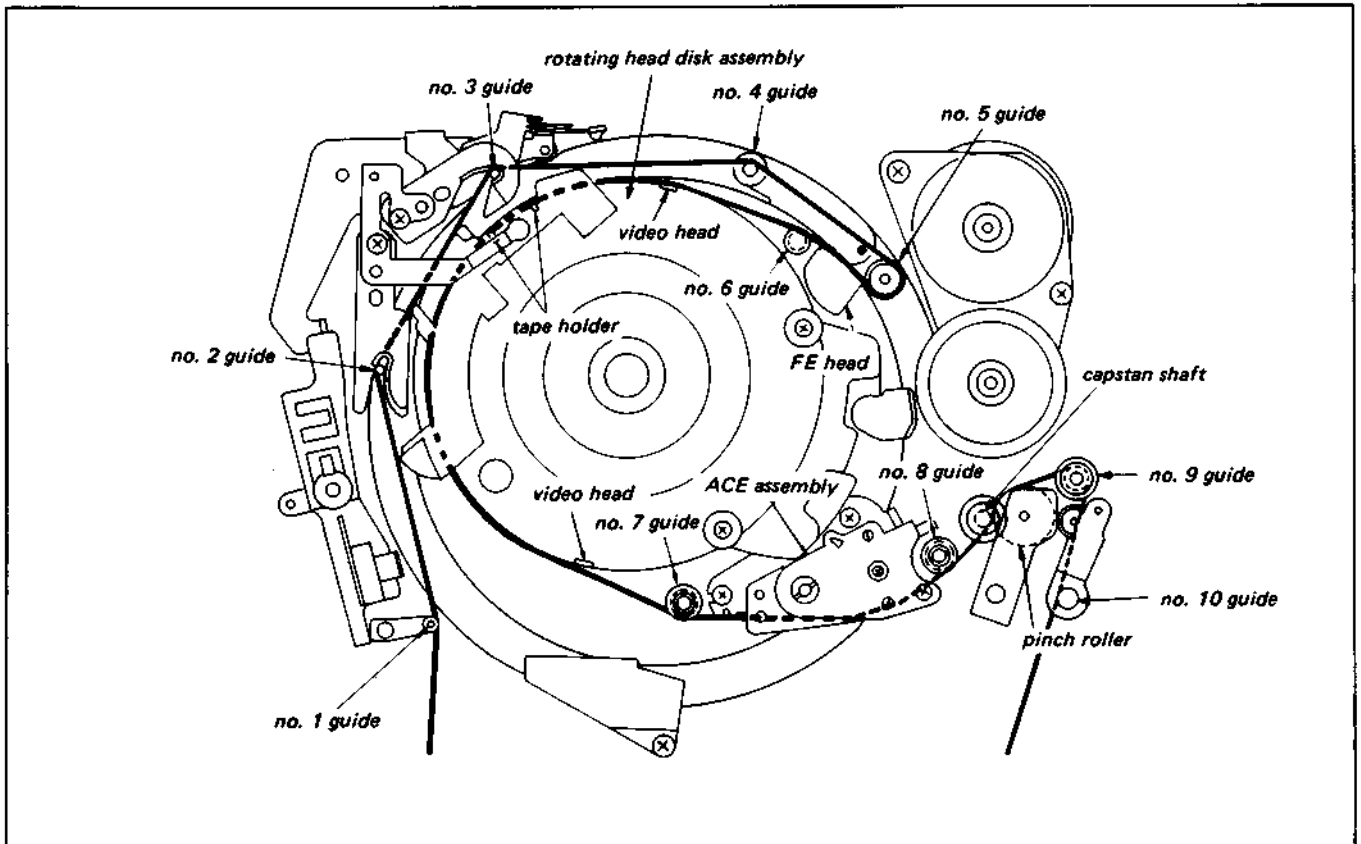


Fig. 2-1. Parts requiring cleaning

2-2. PERIODIC CHECK ITEMS

Perform the maintenance and check listed on the table below, according to user's operating hours.

Maintenance & Check		Replacement Part No.	Operating Hours (H)										Remarks
			500	1,000	1,500	2,000	2,500	3,000	3,500	4,000	4,500	5,000	
Tape Trans- portation System	Cleaning of tape transportation system	—	○	○	○	○	○	○	○	○	○	○	This cleaning must be done whenever a repair is made.
	Cleaning and degaussing of ACE ass'y	—	○	○	○	○	○	○	○	○	○	○	
	Cleaning & degaussing of video disk ass'y	—	○	○	○	○	○	○	○	○	○	○	
Driving System	Loading belt (synchro belt)	3-684-264-01	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	This cleaning must be done whenever a repair is made.
	Cleaning of iron core and opening of solenoid	—	-	-	-	○	-	-	-	○	-	-	Wipe iron core and opening of solenoid with dry cloth.
Performance Confirmation	Abnormal sound		☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	Adjust or replace the section which causes abnormal sound.
	Measurement of FWD back tension		-	☆	-	☆	-	☆	-	☆	-	☆	Confirmation must be made according to 3-13. Specified value: adjust to 31 – 35 g·cm (When measured with torque cassette tape)
	Confirmation of brake system		-	☆	-	☆	-	☆	-	☆	-	☆	
	Confirmation of record & playback functions		☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	Perform the confirmation whenever repair is made.
	Measurement of forward torque		☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	Adjust to 80 ± 5 g·cm (SL-0003C)

○ Cleaning ☆ Replacement ☆ Confirmation

Note:

On overhaul

When overhauling the unit, replace parts as indicated in the above table.

3. CHECK, ADJUSTMENT AND REPLACEMENT PROCEDURES

3-1. REPLACEMENT OF ROTATING HEAD DISK ASSEMBLY

3-1-1. Removal of the Rotating Head Disk Assembly (Fig. 3-1)

- 1) Remove the two screws that hold the damper assembly in place, then remove the damper assembly.
- 2) Use a hexagonal wrench to remove the hexagonal socket bolt that holds the upper drum assembly in place, then remove the upper drum assembly.

Note:

Turn the upper drum to remove, being careful not to move the adjusting plate. Movement of the adjusting plate will have a great effect on the tape path, so caution is required.

- 3) Unsolder the rotating head disk relay plate (4 red and white leads).
- 4) Remove the two hexagonal socket bolts holding rotating head disk assembly ⑤ in place, then remove the rotating head disk assembly.

Note:

Be careful not to touch the head tip with the hand or bang anything against it.

3-1-2. Mounting of the Rotating Head Disk Assembly (Fig. 3-1)

- 1) Insert rotating head disk ⑤ in place, being careful of the direction so that the red and white leads are in the right places.
- 2) Tighten hexagonal socket bolt ④ and solder the lead wires.

Note:

Be careful to solder the lead wires correctly and not to break any wires.

- 3) Attach the upper drum, being careful (as during removal) not to move the adjusting plate. While pressing the two points that determine the height, tighten hexagonal socket bolt ②.

Note:

When inserting the upper drum, be careful that it does not touch the head tip.

Note:

When replacing the rotating drum head, it can happen that the rotating head disk assembly will be hard to remove. In such a case, remove it using the method explained below (Fig. 3-2).

- 1) Remove the hexagonal socket bolts that hold the rotating head disk assembly in place.
- 2) When the head disk is jammed on tight and is hard to remove, screw the hexagonal socket bolts removed in step ① into the threaded holes removed from the original holes by 90°. Tighten them a little at a time.

The head disk will be lifted up by the two screws and will come off easily.

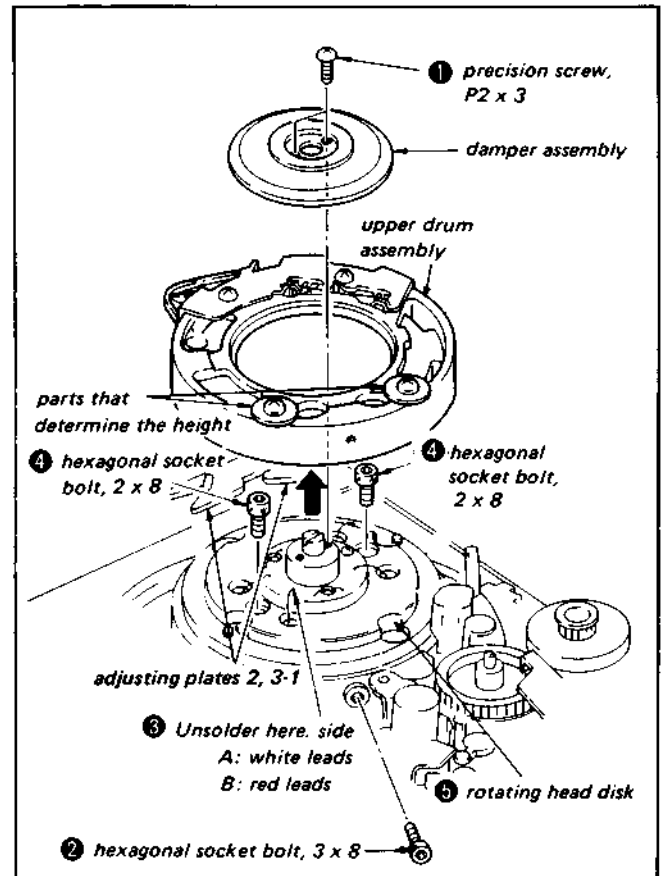


Fig. 3-1. Removal of the rotating head disk assembly I

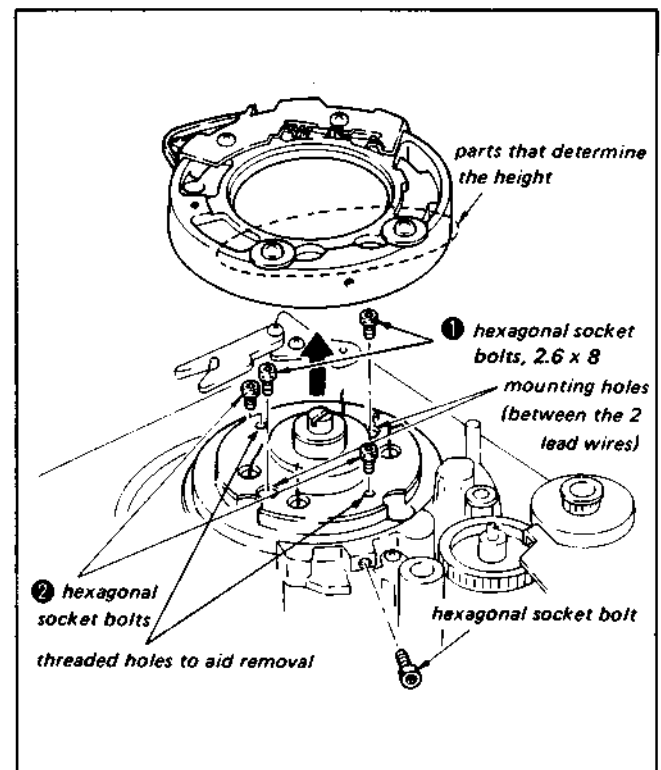


Fig. 3-2. Removal of the rotating head disk assembly II

3-2. VIDEO HEAD DIHEDRAL CHECK AND ADJUSTMENT

This adjustment is generally unnecessary, but it is sometimes necessary when the video head disk is replaced. (The video head disk used for maintenance has been precision adjusted at the factory using a microscope and almost never needs to be readjusted.)

When judging whether the video head dihedral angle is correct, the alignment tape is played back. When this is done the tracking control knob must be in the centering position. If the check is done with this knob in other than the center click position (if the tracking is off-center), even if the dihedral angle is correct the picture will be reproduced as if it were off.

Before this adjustment is performed, the ACE assembly position adjustment (refer to the section where the tape path adjustment is described) must be completed.

[Method of checking]

With the tracking control knob set to the center click position, play back the monoscope section of the alignment tape. Check to see if any of the vertical monoscope lines immediately below the switching pulse are reproduced double. If not, the dihedral angle is correct and does not have to be adjusted. If so, perform the adjustment as explained below.

[Method of adjustment]

- 1) As shown in Fig. 3-3, screw two dihedral angle adjustment screws (Jig Ref. No. J-10) into the adjustment screw holes on the side on which the red lead wires from the video head are connected, until the top of the screw is level with the video head disk. (If they are not screwed in far enough, the video head disk will not turn past the point where the top of the adjustment screw strikes the upper drum. Conversely, if it is screwed in too far, the head base will be moved, throwing the video head dihedral angle way off.)

Note:

The side on which the white lead wires are connected is the reference side and must not be moved.

- 2) Screw one of the two adjustment screws in a little bit farther until resistance is felt. Beyond this point, turning the screw still farther will move the video head, adjusting the dihedral angle.
- 3) With the adjustment screws in place, play the monoscope signal section of the alignment tape and see how the lines are reproduced. If the vertical lines are split apart more than before, turn the screw which was screwed in more tightly counterclockwise to loosen it, then adjust by tightening the other screw.
- 4) After the adjustment is completed, remove the adjustment screws and play the tape again to reconfirm that the adjustment is correct.

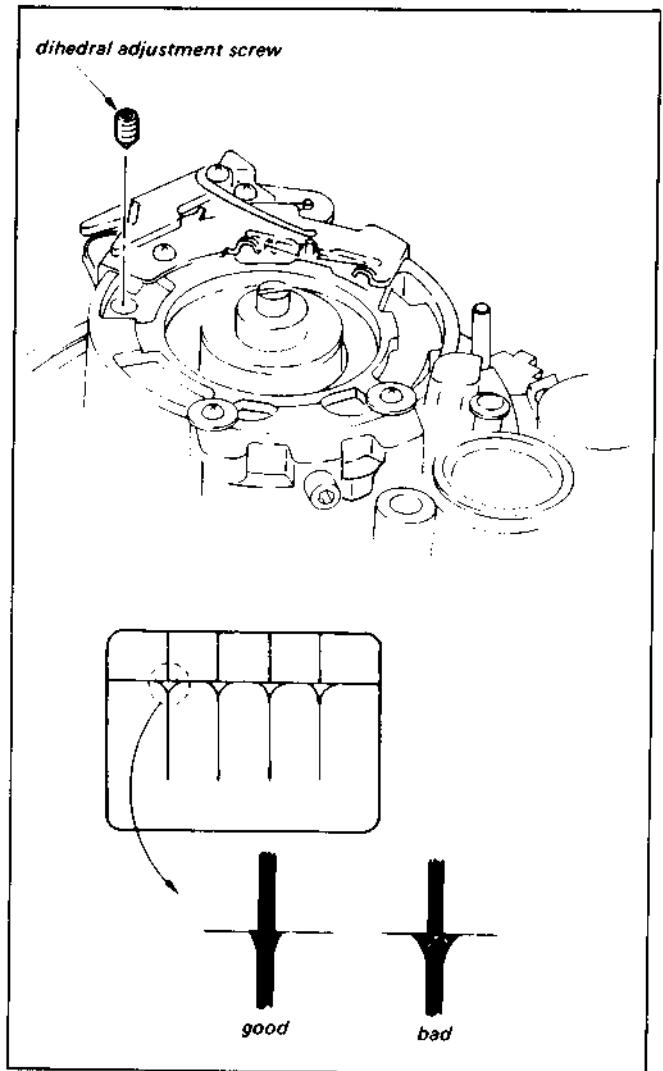


Fig. 3-3. Video head dihedral adjustment

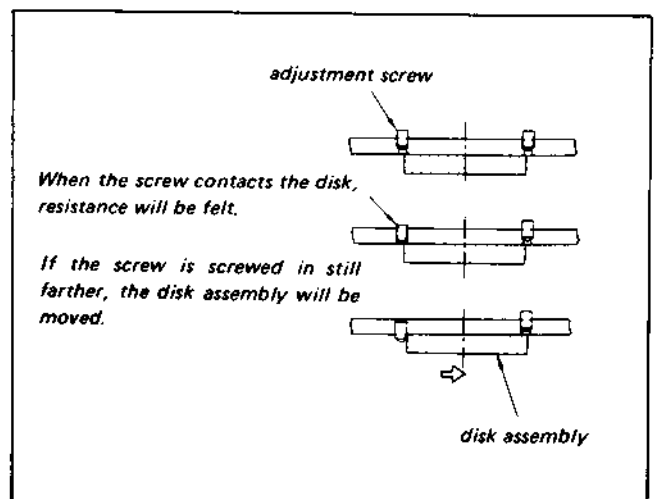


Fig. 3-4.

3-3. REPLACEMENT AND ADJUSTMENT OF THE DRUM ASSEMBLY

3-3-1. Replacement of the Drum Assembly

- 1) Measure gap **A** between adjusting plate 2 and the upperdrum holder section and record the measurement.
Note:
 The position where the adjusting plate is mounted has a large effect on the tape path, so this measurement must be performed.
- 2) Measure gap **B** between adjusting plate 3-1 and the upper drum holder section, and record the measurement.
Note:
 The position where the adjusting plate is mounted has a large effect on the tape path, so this measurement must be performed.
- 3) Remove the screws shown in Fig. 3-5, then remove the tape guide ground plate and adjusting plates 2 and 3-1.
- 4) Remove the 3 connectors from the rear of the chassis as shown in Fig. 3-6.
- 5) Remove the 3 drum mounting screws from the rear of the chassis, then remove the main body of the drum assembly.
 After the replacement has been completed, adjust the drum path.

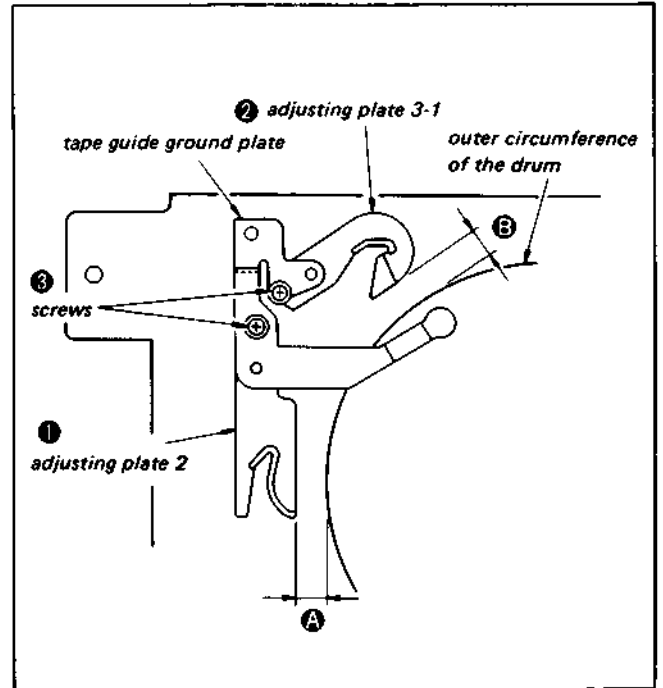


Fig. 3-5. Measurement of the position of adjusting plates 2 and 3-1

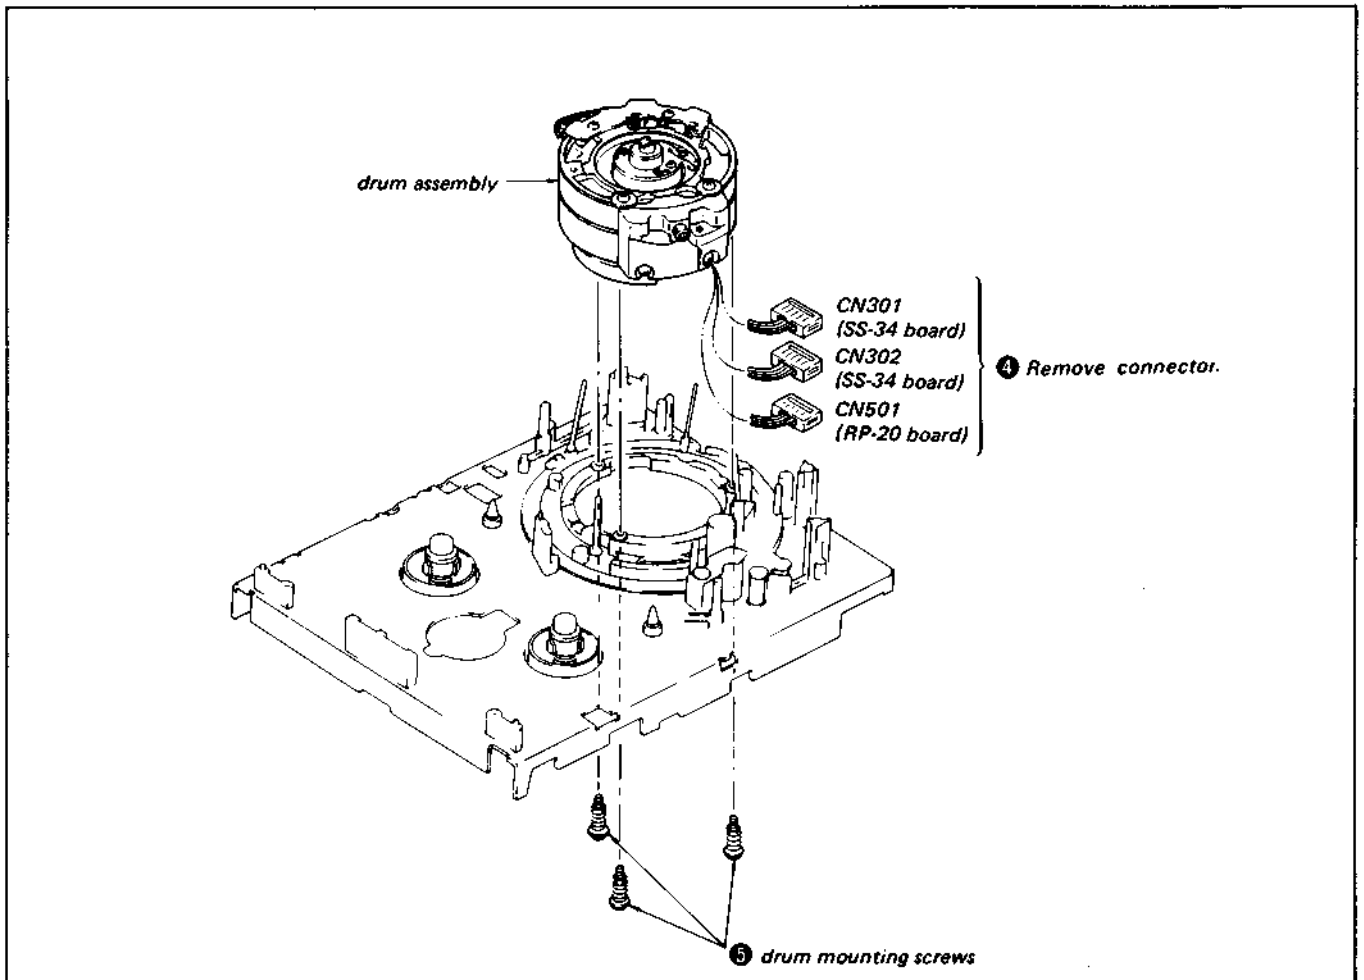


Fig. 3-6. Removal of the drum assembly

3-3-2. Adjustment of the Motor Gap when Replacing the Drum Assembly

After replacing the drum assembly, adjust the gap between the motor rotor and the coil to 0.3 mm to 0.6 mm (Fig. 3-7).

[Procedure]

- 1) When re-assembling the drum, use the spacers which were removed to produce a gap of between 0.3 mm and 0.6 mm. Measure the gap using the gauge that comes with the drum for assembly and maintenance use. One side of the gauge is 0.3 mm and the other side is 0.6 mm. If the gap is adjusted correctly, the 0.3 mm side should fit in and the 0.6 mm side should not.
- 2) If this fails to give the correct gap width, do not use the spacers which were removed; instead, use a combination of the 4 0.3 mm accessory spacers to obtain the correct width.

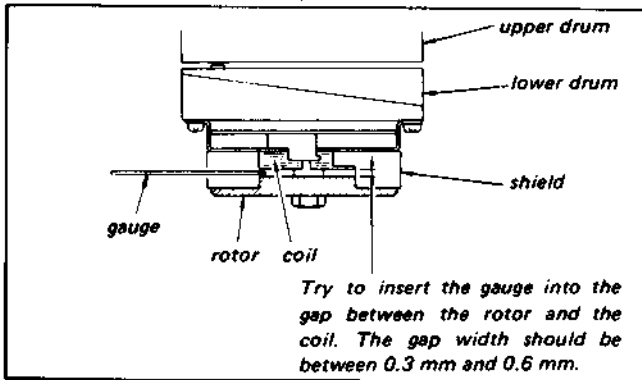


Fig. 3-7. Checking the motor gap width after replacing the drum assembly

Removal of the stator and rotor when replacing the drum

- 1) Remove the nut and washer.
- 2) Remove the rotor from the stator.
- 3) Remove the 2 screws, then remove the stator from the main body of the drum.

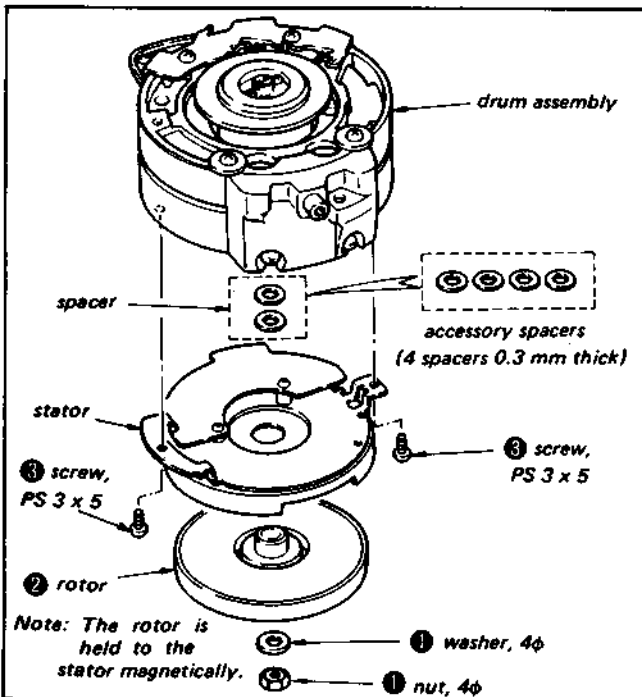


Fig. 3-8. Removal of the stator and rotor when replacing the drum

3-4. REPLACEMENT OF THE CAPSTAN MOTOR

3-4-1. Removal of the Capstan Motor (Fig. 3-9)

- Remove the three screws ① then remove the capstan motor from the rear of the mechanical chassis.

Note:

When the capstan motor has been removed or replaced, check the tape path once.

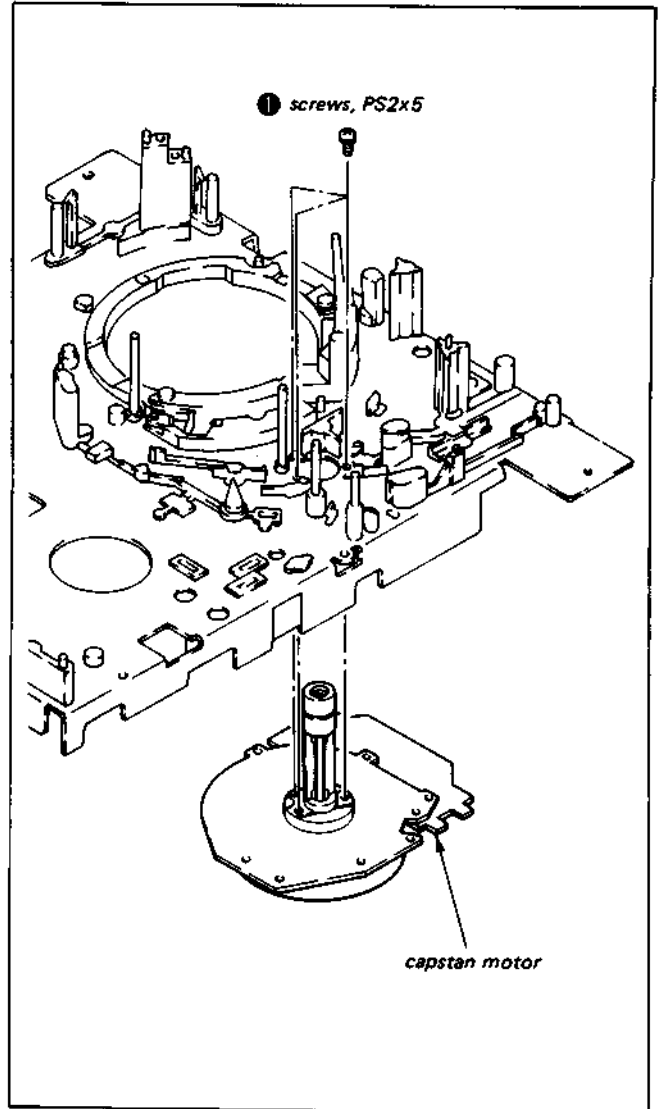


Fig. 3-9 Removal of the capstan motor

3-5. REMOVAL OF THE S COIL SENSOR (Fig. 3-10)

- 1) Remove the spring.
- 2) Remove the claw in the direction of arrow **A**, then pull the S coil sensor out.
- 3) Pull out the connector from CN604 on SS-34 board.

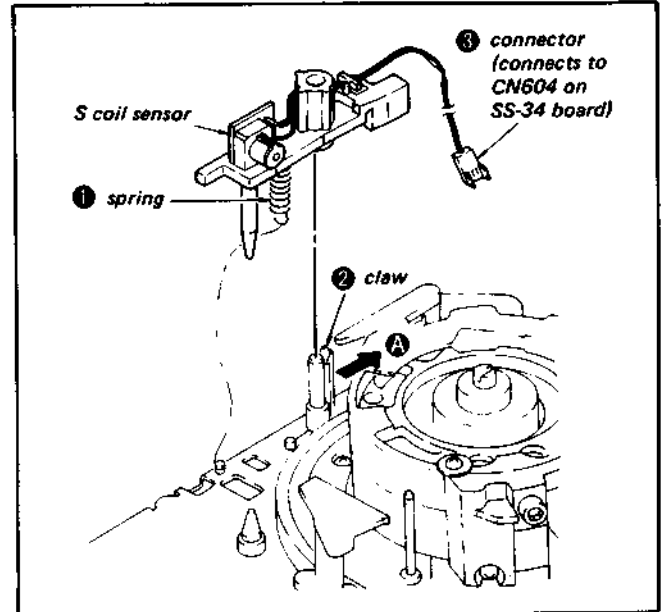


Fig. 3-10. Removal of the S coil sensor

3-6. REMOVAL OF THE FL CASSETTE COMPARTMENT ASSEMBLY (Fig. 3-11)

- 1) Remove the four screws (BVTP3 x 8) **1**.
- 2) Remove the internal gear flange **2**.
- 3) Remove the timing belt (loading belt) **3**.
- 4) Pull out the connector CN606 **4**, on the SS-34 board.
- 5) Remove the FL cassette compartment assembly **5** in the direction shown by the arrow.

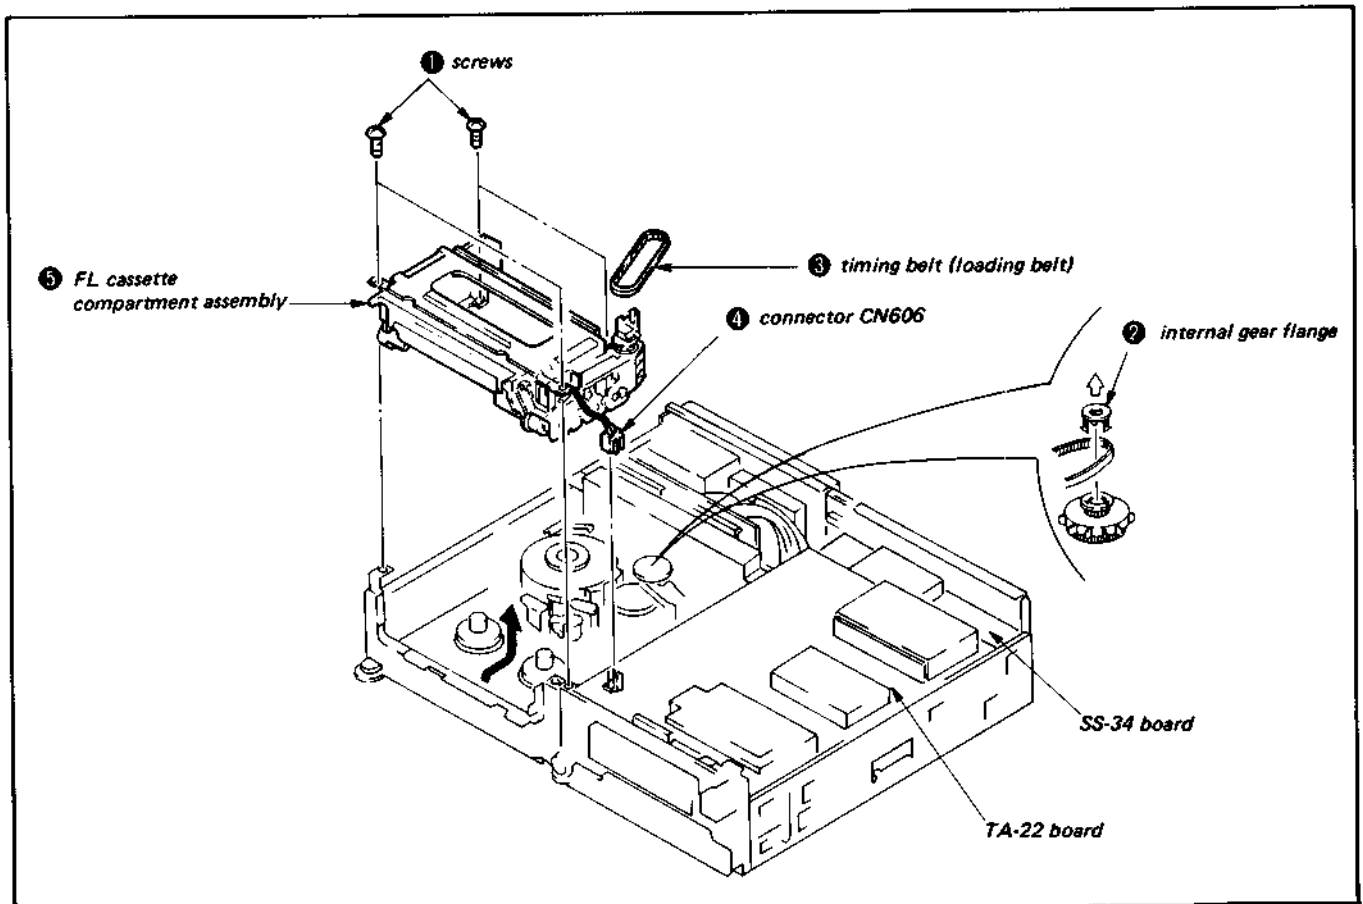


Fig. 3-11. Removal of the FL cassette compartment assembly

3-7. ADJUSTMENT OF THE FL CASSETTE COMPARTMENT

3-7-1. Adjustment of the Position of the Right Gear of the FL Cassette Compartment Assembly

In the FL cassette compartment assembly, the cassette holder must always move parallel to the mechanical chassis. The gear system is used to control the amount by which the cassette holder advances so that this will be the case. Consequently, if the gears in this section slip out of mesh, the next time the unit is assembled the gear mesh must be adjusted to the correct position; otherwise the cassette will not feed properly.

[Adjustment of the gear positions]

- 1) Get a positioning rod about 200 mm long and 1.5 mm in diameter ready.
- 2) While passing the positioning rod through the combination of the drive arm right and cassette ON cam, fit the latter on the right side plate. Similarly, fit the drive arm left onto the left side plate.
- 3) Similarly, while passing the positioning rod through the worm wheel, fit the latter onto the right side plate.
- 4) Similarly, while passing the positioning rod through the combination of the limiter gear and cassette OFF cam, fit the latter onto the right side plate.

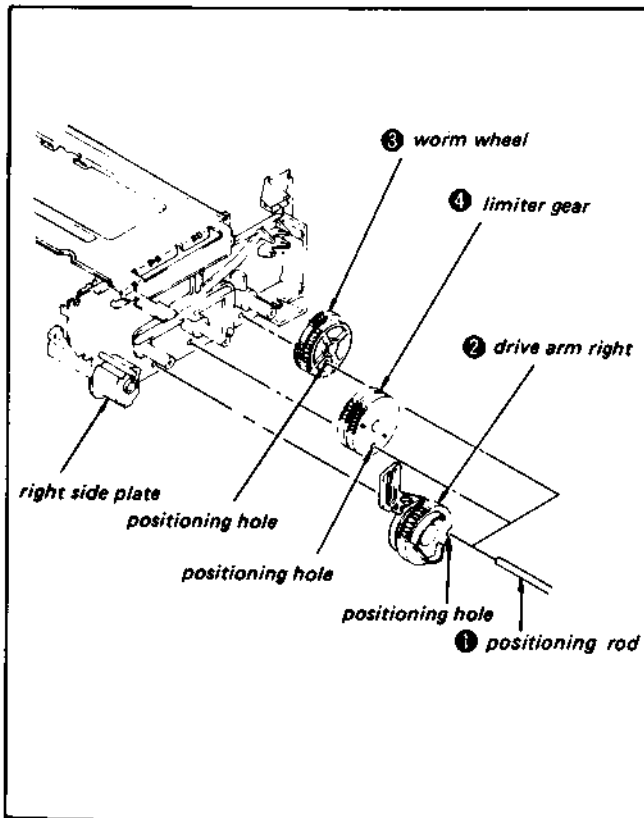


Fig. 3-12. Positioning of the FL cassette compartment gears

3-7-2. Cassette ON Switch Operation Check and Adjustment

[Method of checking]

When inserting a cassette into the FL cassette compartment assembly, confirm that as the cassette is inserted, the leafswitch comes ON when the center of the drive roller is 8 to 13 mm from the end of the guide groove, as shown in Fig. 3-13.

[Method of adjustment]

Bend the tip of the cassette ON switch in the direction of the arrow.

Adjust so that the cassette ON switch comes ON when the above distance is 8 to 13 mm, and finally tighten the screw.

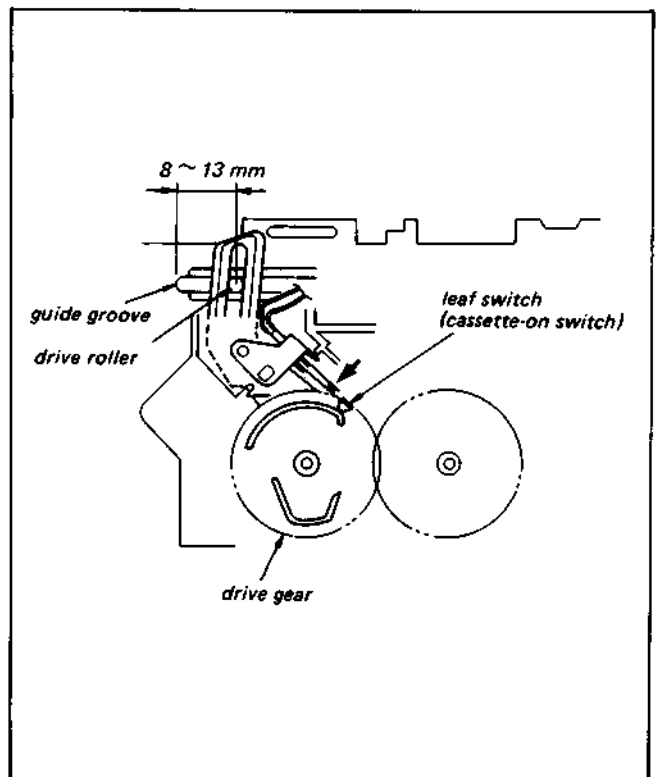


Fig. 3-13. Cassette ON switch operation check and adjustment

3-7-3. Checking and Adjustment of the Cassette Door Assembly

[Method of checking]

With the door opening and closing arm returned all the way in the direction of arrow **A**, check to make sure that the door is vertical.

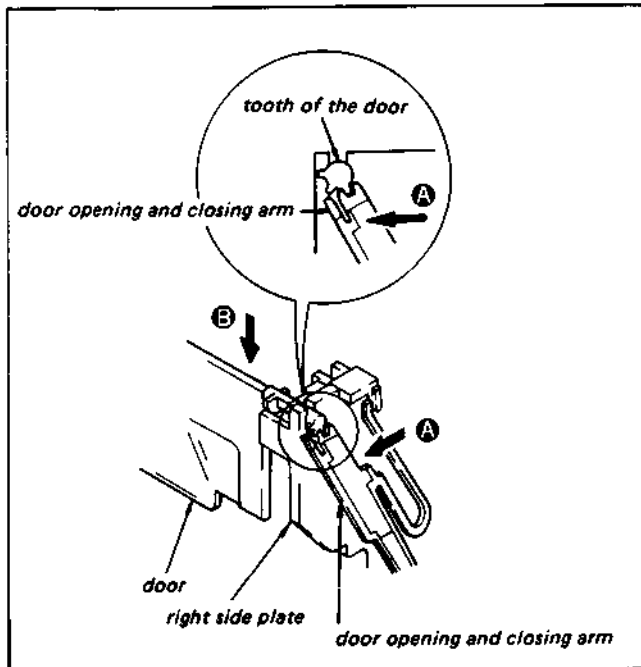


Fig. 3-14. Adjustment of the position of the cassette door assembly

[Method of adjustment]

check to make sure that the door opening and closing rack plate has returned all the way. Then, close the door together in the direction of arrow **B** so that it is vertical, and mesh the gears.

3-7-4. Mounting the FL Cassette Compartment Assembly (Fig. 3-15)

- 1) Hook the two holes of the FL cassette compartment assembly onto the mechanical chassis, then place the compartment in the specified position on the chassis.
- 2) Loosely tighten the 4 mounting screws of the FL cassette compartment assembly. Move the FL cassette compartment assembly forward and backward with respect to the mechanical chassis, set it in the correct position, then tighten the mounting screws all the way.
- 3) Connect the timing belt (loading belt) between the threading motor and the internal gear flange, then hold it in place with the internal gear flange.
- 4) Press the tension roller arm in the direction of the arrow to adjust the tension of the timing belt (loading belt), then fix it in place with the arm fixing screw.
- 5) Insert the harness sticking out from the FL cassette compartment into connector CN606 on SS-34 board.

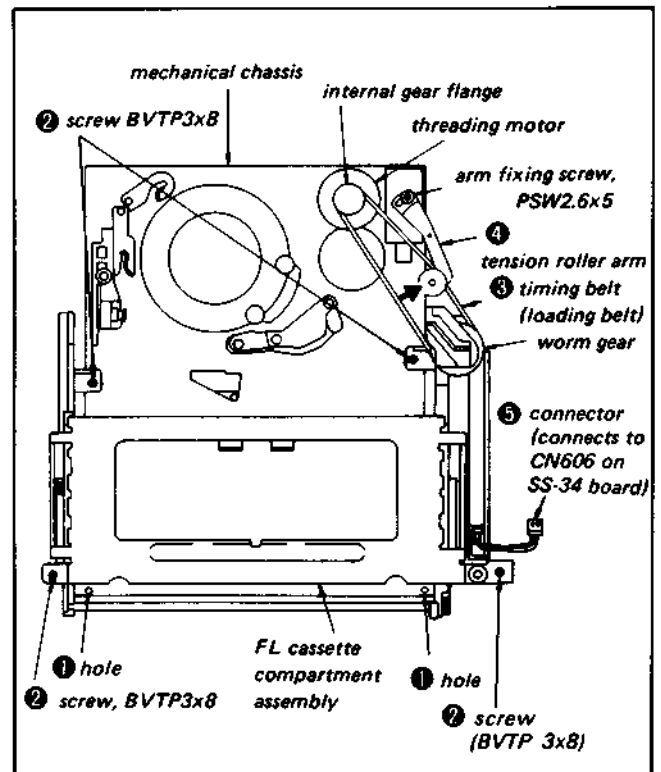


Fig. 3-15. Mounting the FL cassette compartment assembly

3-8. REMOVAL OF THE No. 2 AND No. 3 GUIDES

3-8-1. Removal of the No. 2 Guide

- 1) Remove the 1x3 tap-in screw.
- 2) Remove the 1.4x3 tap-in screw.
- 3) Remove the No. 2 guide assembly.

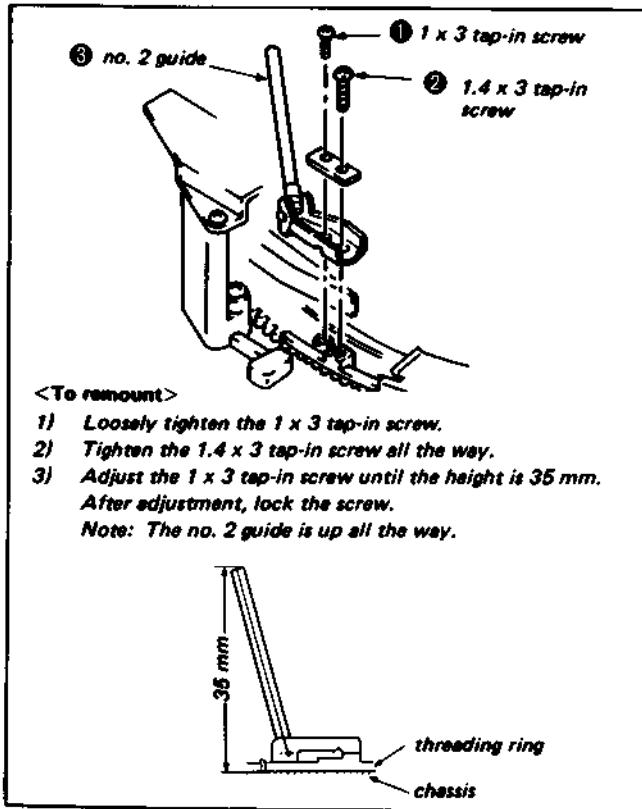


Fig. 3-16. Removal of the no. 2 guide

3-8-2. Removal of the No. 3 Guide

- 1) Remove the 1x3 tap-in screw.
- 2) Remove the 1.4x3.5 tap-in screw.
- 3) Remove the limiter spring.
- 4) Remove the No. 3 guide assembly.

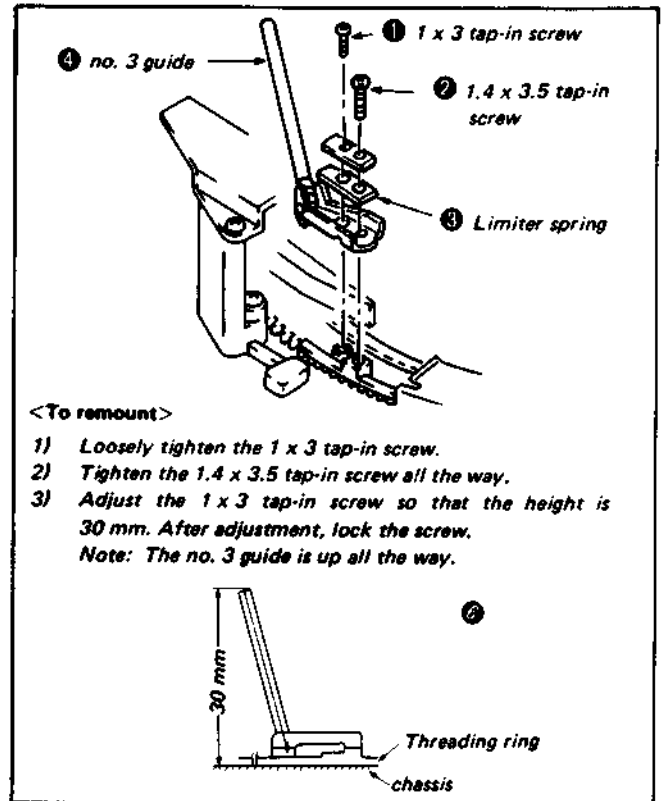


Fig. 3-17. Removal of the no. 3 guide

3-9. REPLACEMENT AND ADJUSTMENT OF THE S THREADING RING

3-9-1. Preparation to Remove the S Threading Ring Removal of the ACE Assembly, FE Head and Threading Motor (Fig. 3-18)

- 1) Remove the cross-recessed head screw.
- 2) Remove the No. 6 guide nut.
- 3) Remove the No. 6 washer.
- 4) Remove the No. 6 guide spacer.
- 5) Remove the compression coil spring.
- 6) Remove the 2 guide adjustment screws, then remove the ACE assembly and the FE head.

Note:

Since the ACE assembly and the FE head are connected by a lead wire, be careful when removing them. It is not necessary to remove the compression coil spring below the ACE assembly, but be careful not to use it.

- 7) Remove the 3 screws, then remove the threading motor assembly by pulling it up and out.

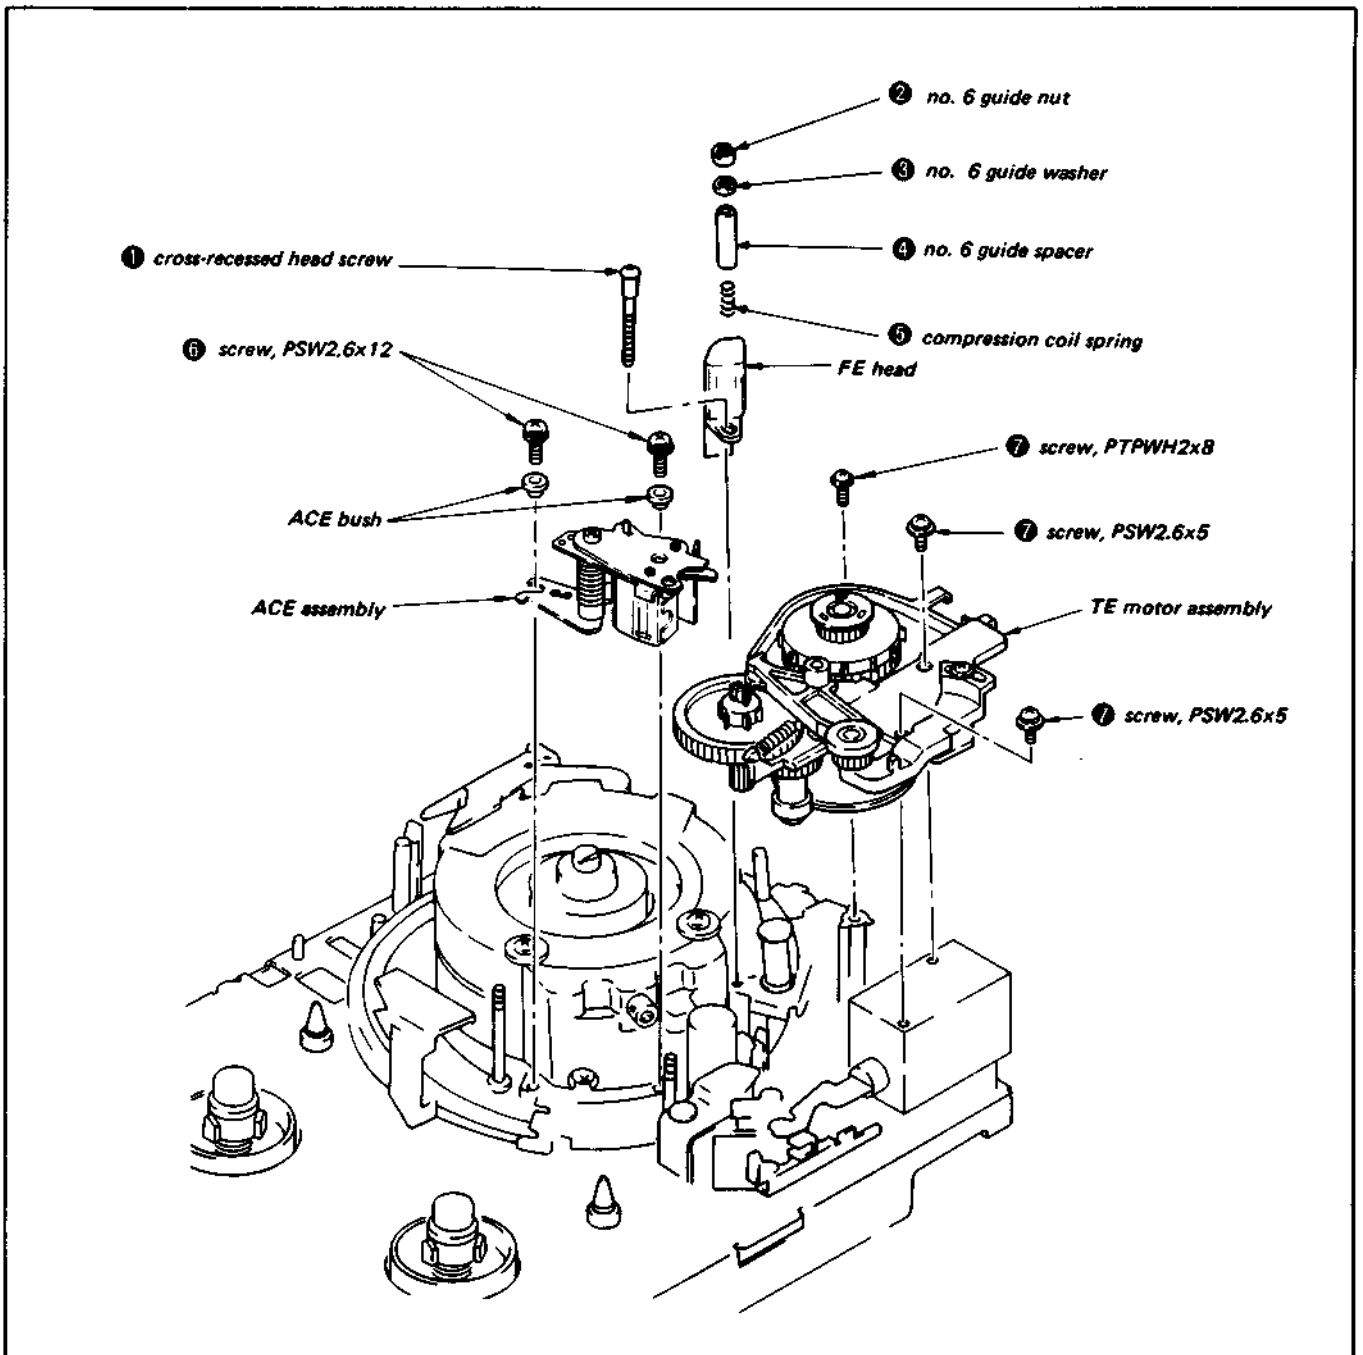


Fig. 3-18. Removal of the ACE assembly, FE head and TE motor assembly.

Removal of Miscellaneous Parts (Fig. 3-19)

Proceeding in the same manner as in replacement of the drum assembly, measure the width of the gap between the upper drum and the adjusting plates (Fig. 3-5).

- 1) Remove the screw, then remove the tape guide ground plate and adjusting plates 1 and 2.
- 2) Remove the two screws, then remove the tape holder assembly.
- 3) Remove the screw, then remove the guide plate.
- 4) Remove the 2 PTPWH2×8 screws and the M2.6 screw, then remove shuttle guide 2.

- 5) Remove the 3 PTPWH2×8 screws and the M2.6 screw. Then remove the 2 claws holding shuttle guide 1-YA in place, and finally remove shuttle guide 1-YA.
- 6) Remove the slant base assembly.
- 7) Remove the BVTT2.6×6 screw, then remove the pinch liner link.

Note:

After removing the guide plate, do not thread or unthread a tape with the shuttle guide mounted.

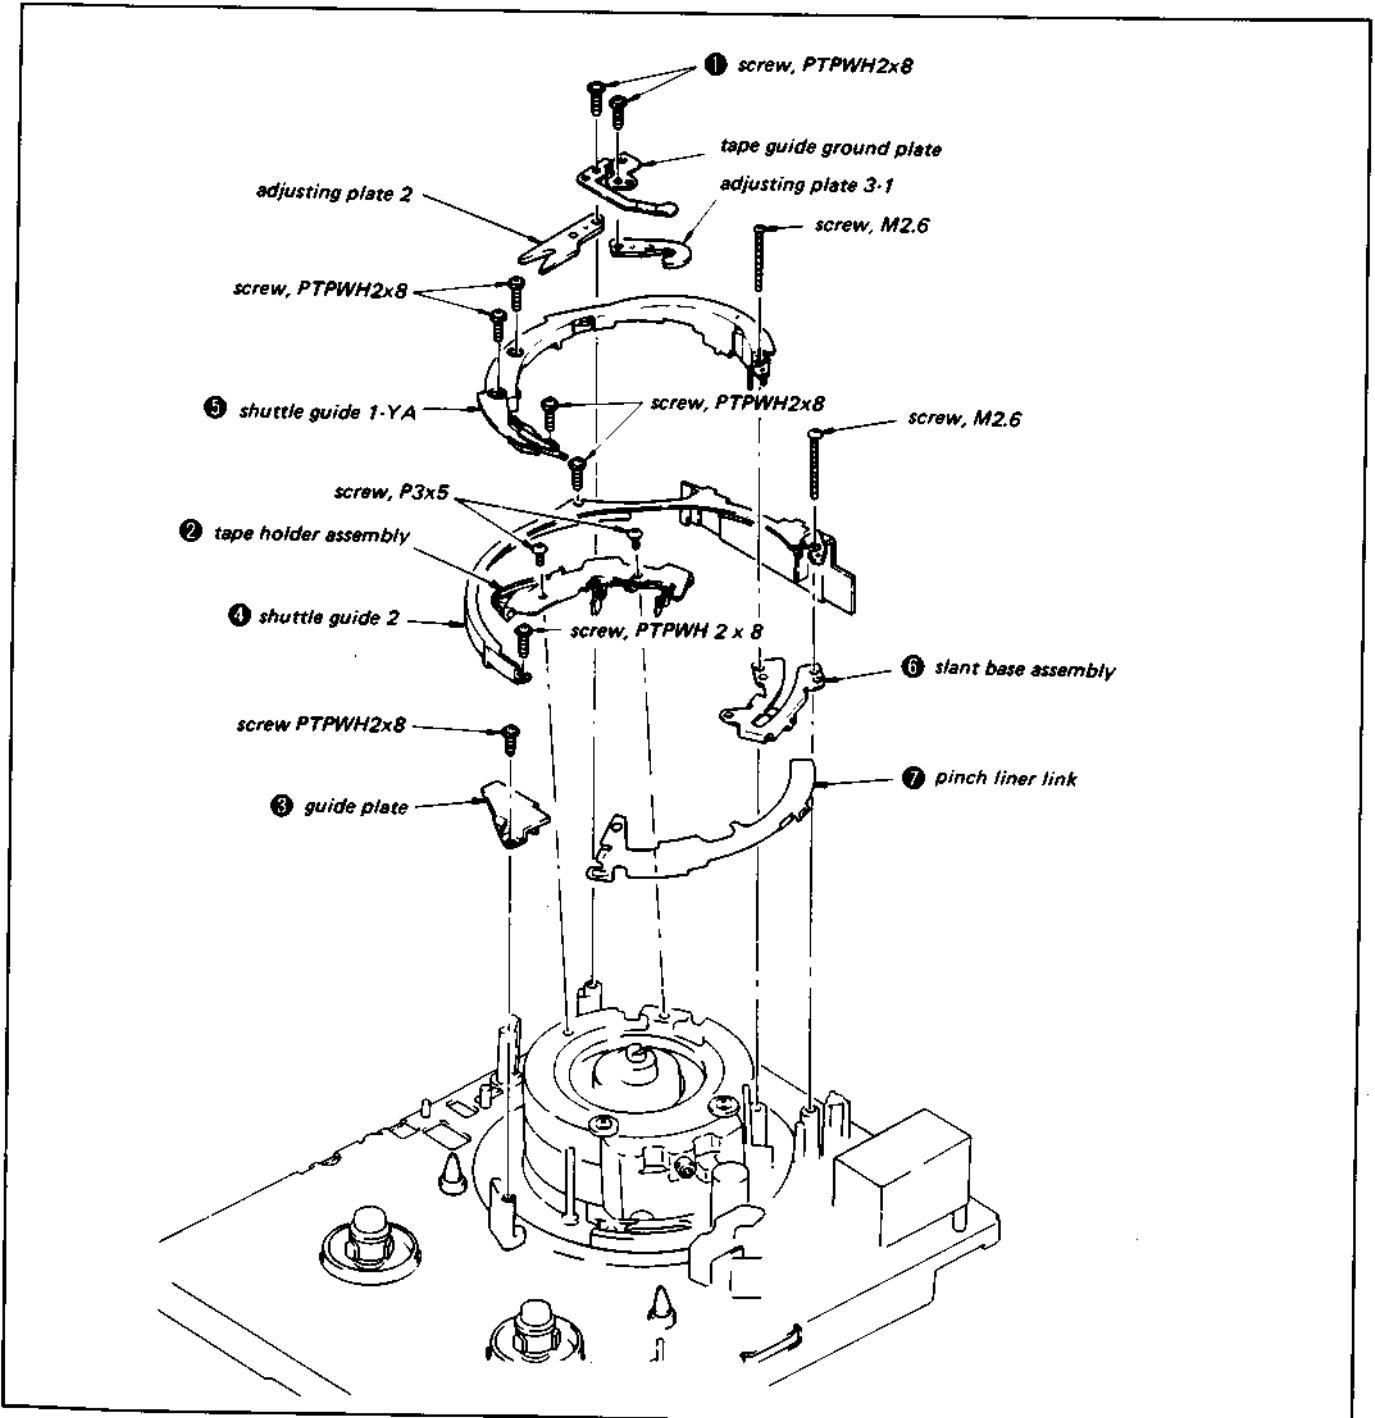


Fig. 3-19. Removal of miscellaneous parts

3-9-2. Removal of the S Threading Ring (Fig. 3-20)

- 1) Turn the stop washer and remove the ring roller (B) and (C).
- 2) Remove the screw, then remove the ring roller adjustment plate.
- 3) Remove the S threading ring.

Note:

Once a stop washer has been removed, do not use it again.

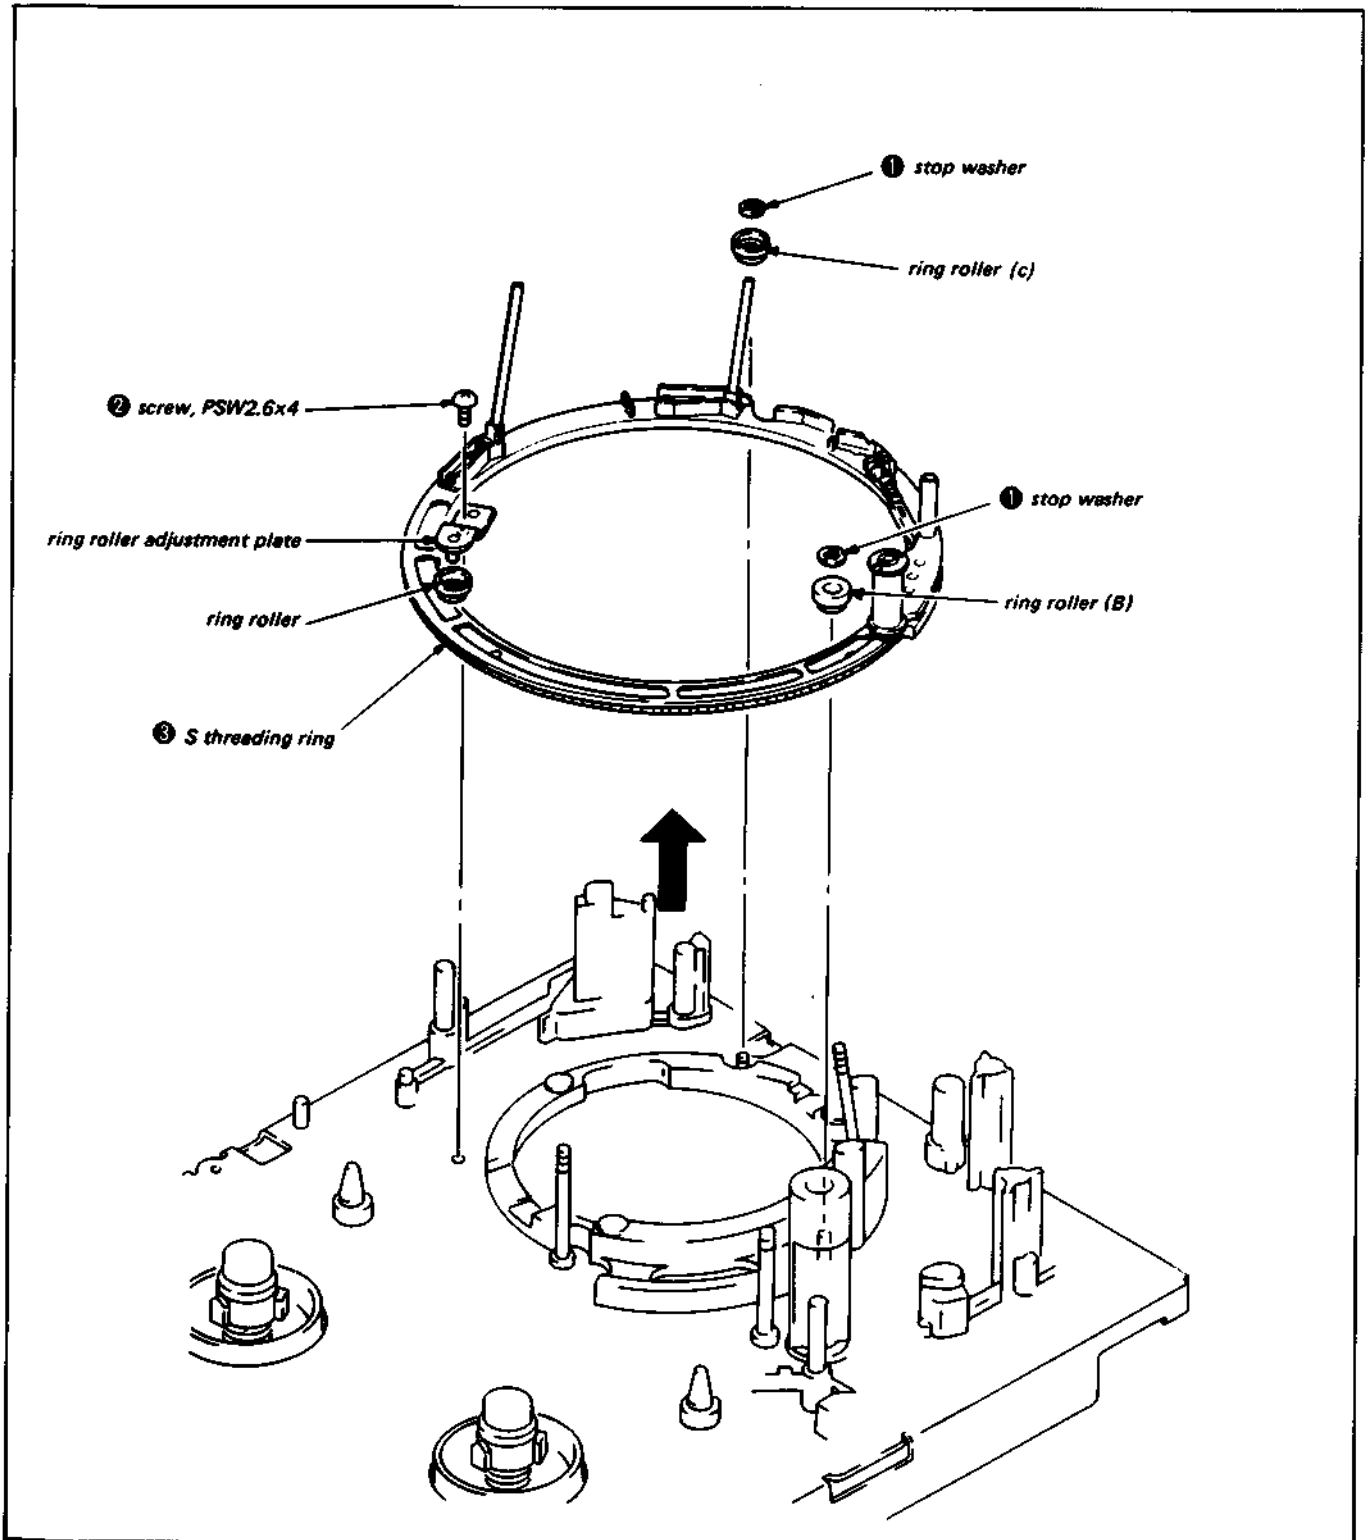


Fig. 3-20. Removal of the S threading ring

3-9-3. S Threading Ring Mounting and Position Adjustment (Fig. 3-21)

- 1) Set the slider gear assembly in the unthreading completed position.
(Slider gear assembly set so that it is up against part T slider stop mold.)
- 2) In this condition, fit the threading ring into place, match the chassis hole (3ϕ) of part A with the S threading ring hole (1.5ϕ), and mesh with the drive gear teeth.
- 3) Attach ring roller (B) and fix in place with a stop washer.
- 4) Attach the ring roller, and fix in place with the adjustment plate.

Note:

After replacement and mounting are completed, adjust the ACE assembly as explained in the section on tape path adjustment.

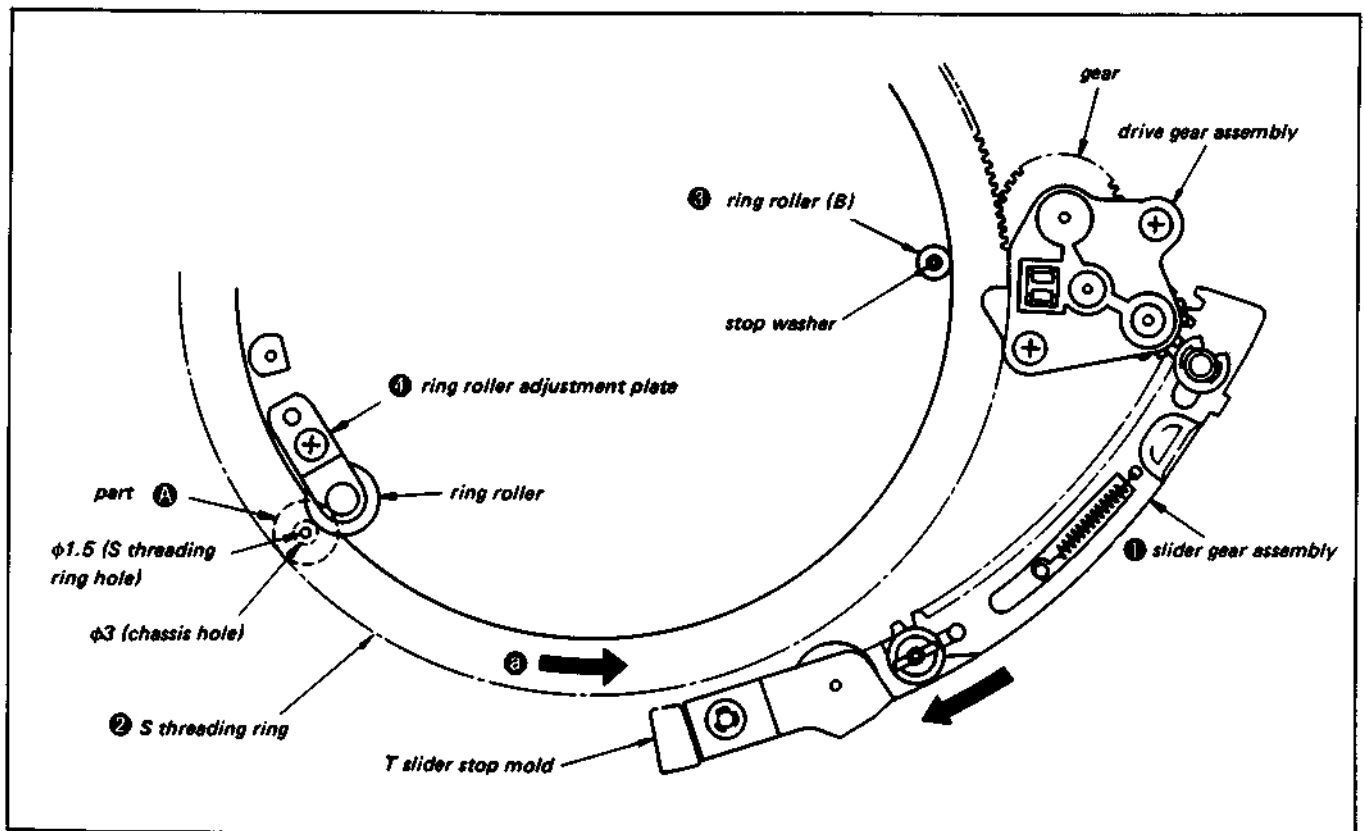


Fig. 3-21. S threading ring position adjustment

3-10. PINCH SNAP-FIT LIMITER GAP CHECK AND ADJUSTMENT

[Method of checking]

- 1) Set in the threading completed condition.
- 2) With the plunger pushed in all the way, confirm that the thickness of the pinch snap-fit limiter gap is 0.4 mm to 0.6 mm. If it is not, adjust as explained under [method of adjustment] below.

[Method of adjustment]

- 1) With the pinch solenoid in the absorbed condition (when the plunger is pushed in all the way), loosen the adjustment screw.
- 2) Press the pinch limiter adjustment plate in the direction of arrow ② with an ordinary screwdriver, as in section A in the diagram, and adjust until the thickness of the gap in 0.4 mm to 0.6 mm.
Tighten the adjustment screw and then lock it to fix everything in place.

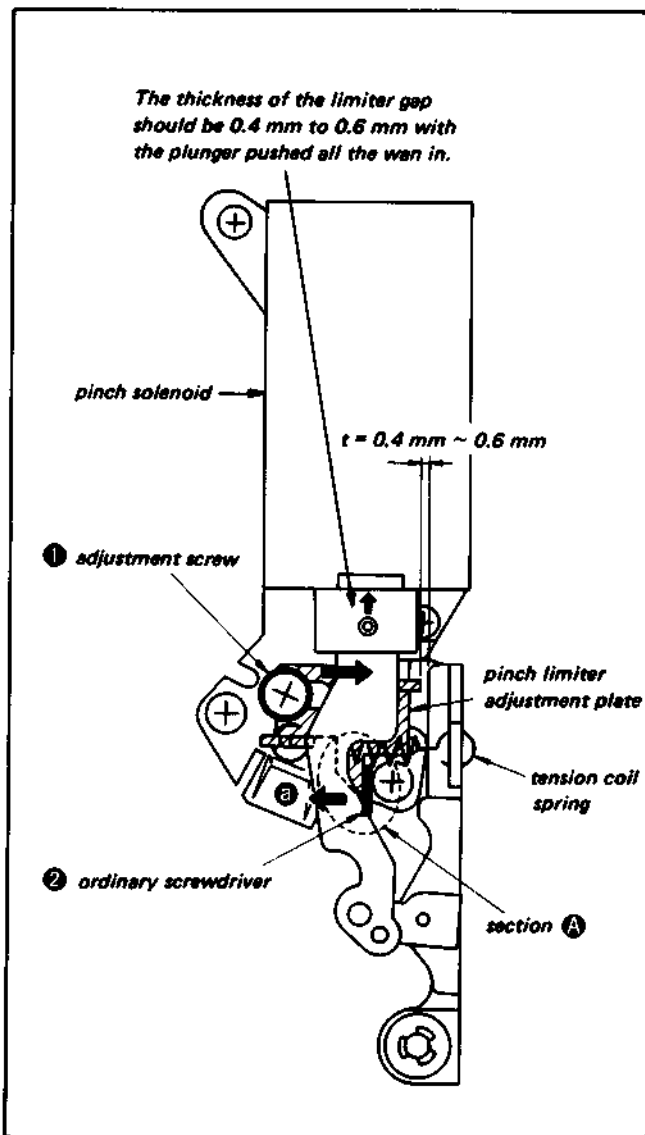


Fig. 3-22. Pinch snap-fit limiter gap adjustment plate

3-11. THREADING END SWITCH AND T COIL SENSOR

3-11-1. Threading End Switch (TE Switch) Position Check and Adjustment

[Method of checking]

Turn the S threading ring manually. Check to make sure that, when the lock roller moves from above the straight line part of the notch in the ring (Fig. 3-23 section A) to 1/3 of the way down it and back, the TE switch turns ON and OFF.

If the lock roller has to move outside of this range before the switch will turn ON and OFF, adjust as explained below.

[Method of adjustment]

- 1) Set the lock roller between the top of the notch in the S threading ring and 1/3 of the way down it, turn the TE switch in the direction of the arrow and, when the switch turns ON, fix the TE switch in place.
- 2) When the adjustment is completed, repeat the check as described above [method of checking].

[Removal]

- 1) Remove the tension coil spring that is attached to the S coil sensor assembly, then remove the S coil sensor.
- 2) Remove the lock arm assembly in the direction of arrow A.

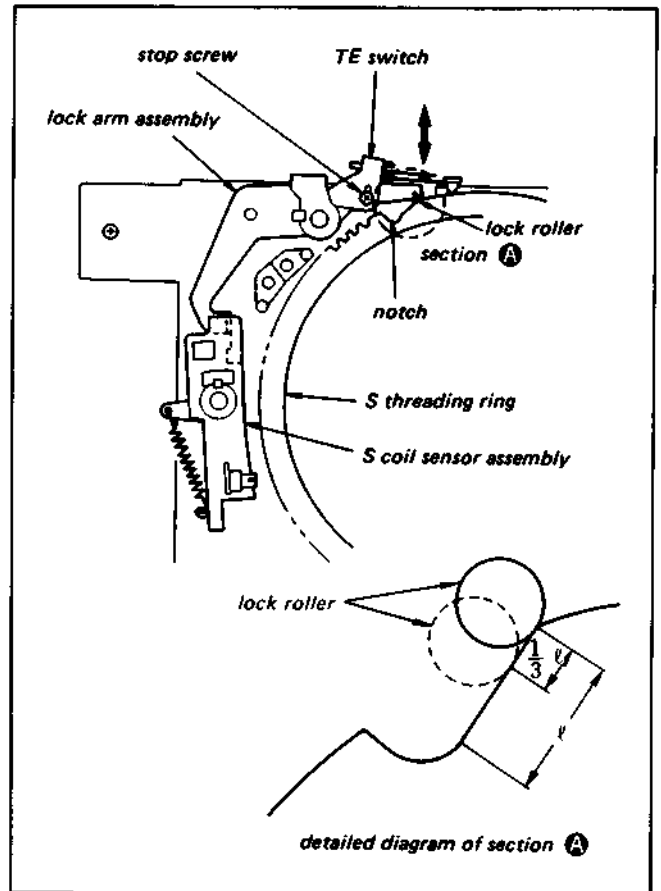


Fig. 3-23. TE switch position adjustment

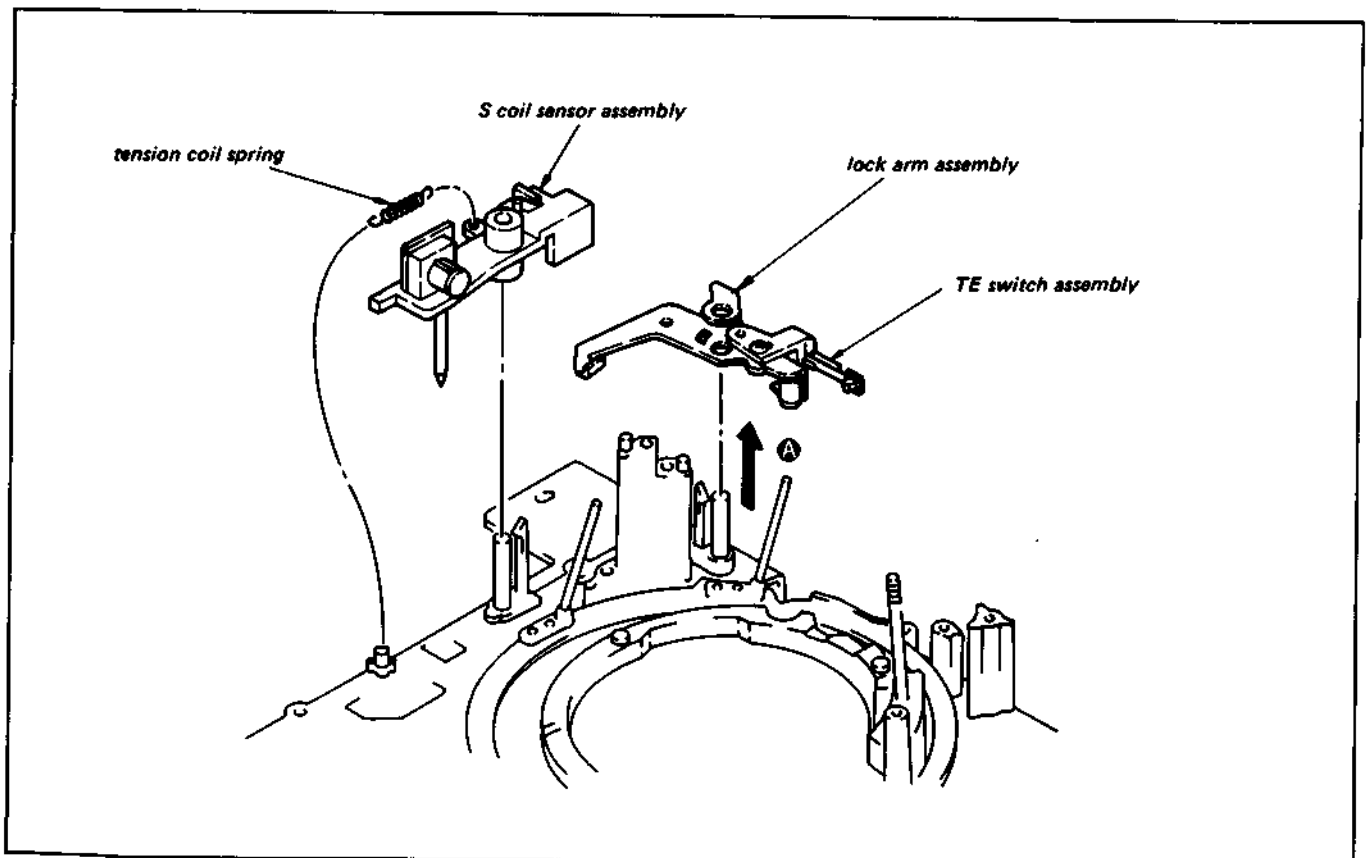


Fig. 3-24. Removal of the TE switch assembly and lock arm assembly

3-11-2. T Coil Sensor Mounting and Operation Check

[Method of checking]

Confirm that T coil sensor link ① is pressed and T coil sensor ② moves in the direction of arrow ③ when the T slider gear assembly is moved in the direction of arrow ④.

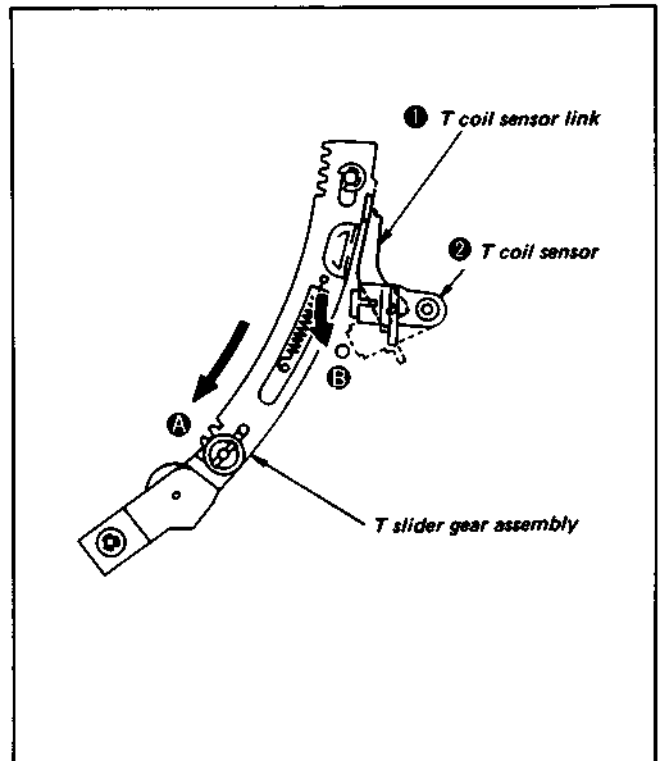


Fig. 3-25. T coil sensor operation check.

[Method of mounting]

- 1) Place T coil sensor link in the prescribed position.
- 2) Match up the T coil sensor hole with the chassis shaft ④ and insert. Place so that it engages with T coil sensor link.
- 3) Hook the tension coil spring on the T coil sensor and chassis claw.

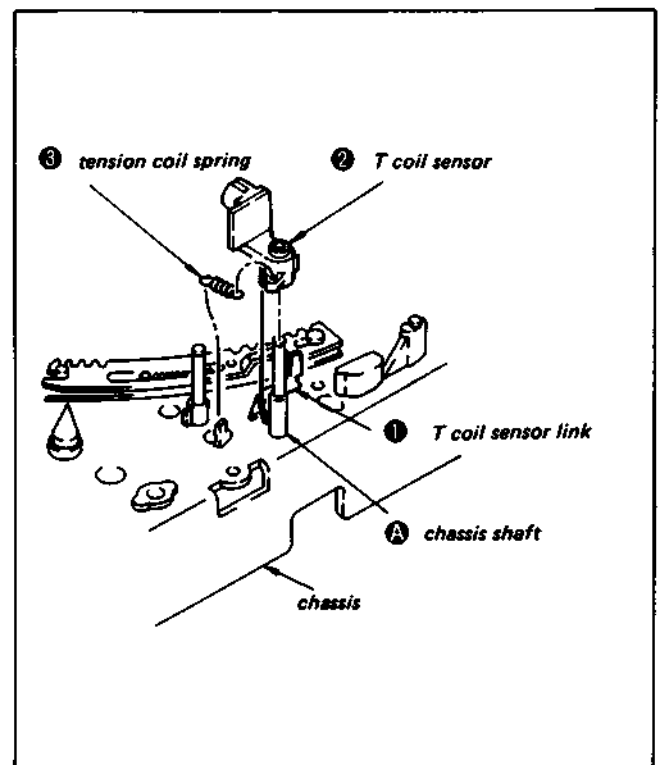


Fig. 3-26 T coil sensor link and T coil sensor mounting.

3-12. REMOVAL AND ADJUSTMENT OF THE REEL BLOCK ASSEMBLY

3-12-1. Removal of the Reel Block Assembly

- 1) Remove the four screws (BVTP3 x 8) ❶.
- 2) Remove the reel block assembly ❷ in the direction shown by the arrow.

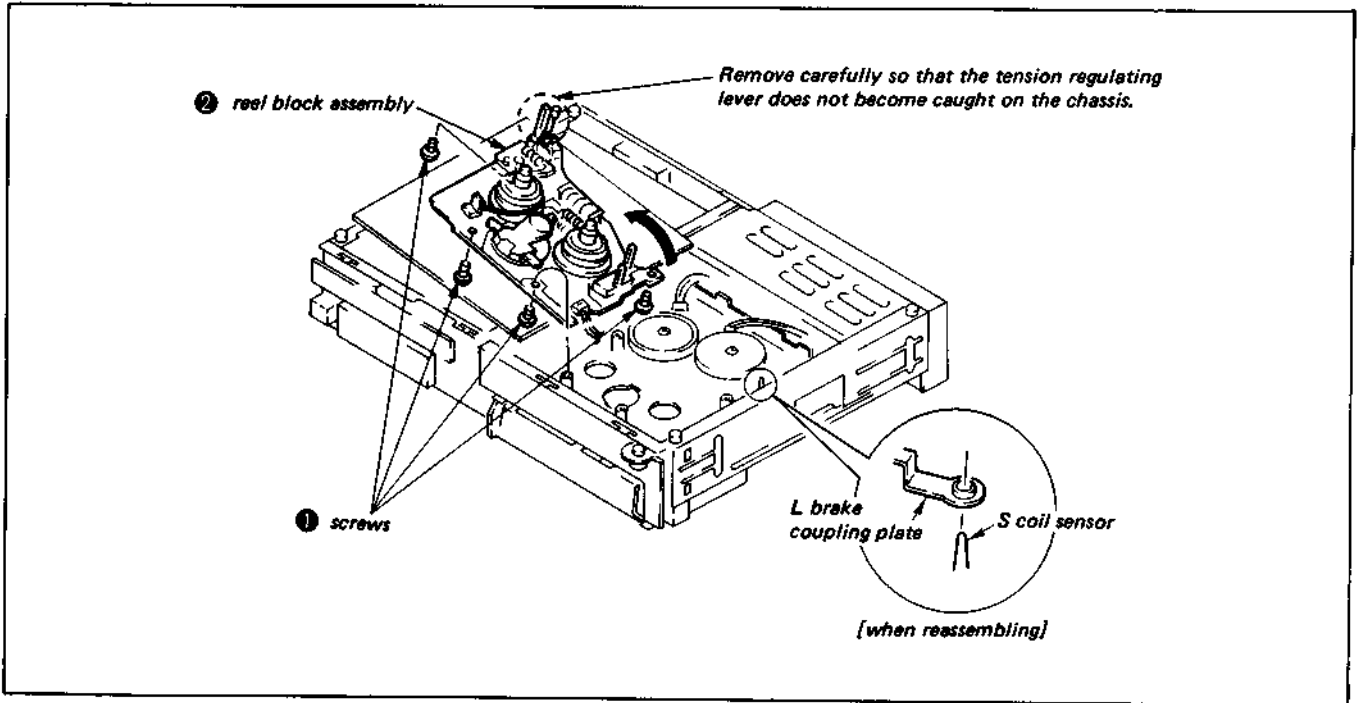


Fig. 3-27 Removal of the reel block assembly

3-12-2. Adjustment of the Position of the Tension Regulating Lever

[Method of adjustment]

- 1) Put the unit in playback mode.
- 2) Loosen the adjustment spring until the tape guide pin of the tension regulating lever assembly is positioned to the outside of the outer circumference of shuttle guide 2, as shown in Fig. 3-28. Then adjust by moving the tension regulating band assembly in the direction of arrow A.
- 3) After adjustment, tighten the adjustment screw, being careful that the tension regulating band assembly does not move.

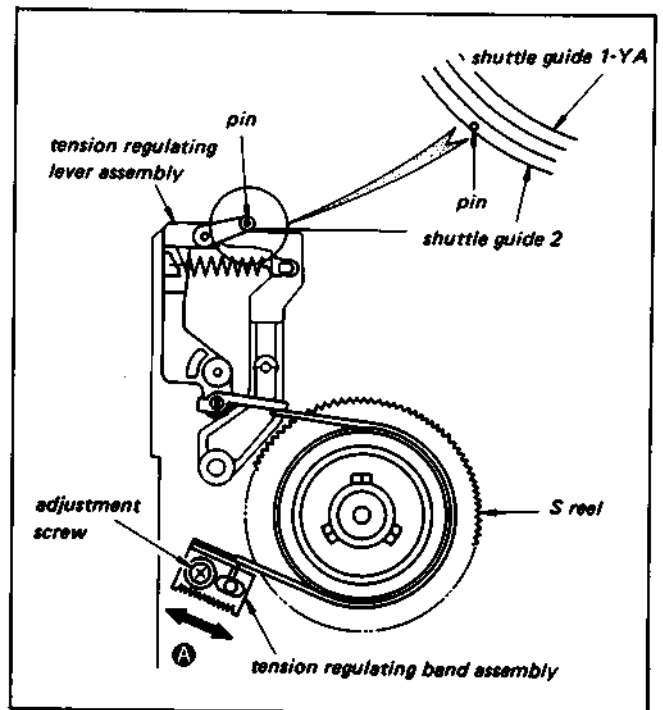


Fig. 3-28 Adjustment of the position of the tension regulating lever

3-13. ADJUSTMENT OF THE FORWARD BACK TENSION

[Method of measurement]

- 1) Insert the torque cassette (SL-0003C) and put the unit in playback mode.
- 2) Read the value on the meter on the S reel side after the needle has gone around about once.

The correct value is 31 g·cm – 35 g·cm

Notes:

- i) The set must be perfectly level during this measurement.
- ii) After the measurement, the tape can become slack when the stop button is pressed. If this happens set the unit is forward mode to take up the slack before removing the tape.

[Method of adjustment]

Move the position of the tension coil spring that is hooked on the tension regulating lever assembly in the direction of arrow **A** until the measured value falls within the correct range.

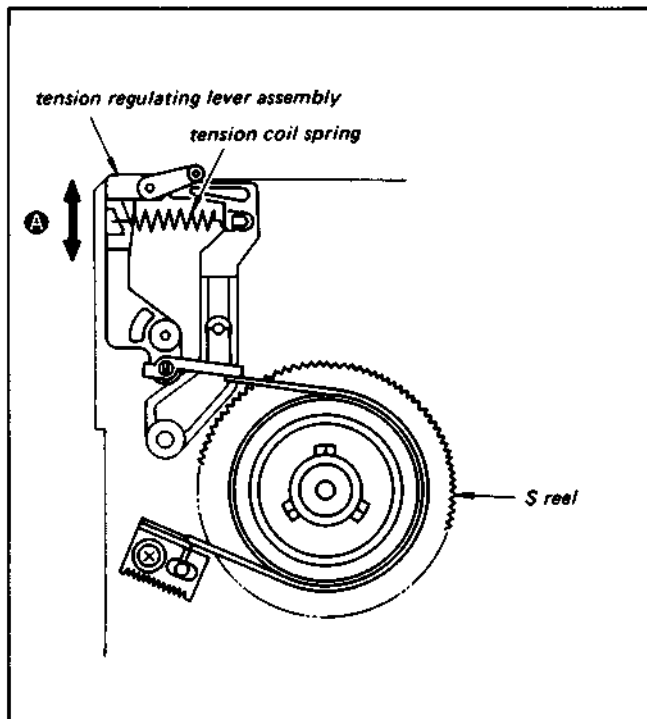


Fig. 3-29 Adjustment of the back tension

3-14. ADJUSTMENT OF THE FORWARD TORQUE

[Method of measurement]

- 1) Insert the torque cassette (SL-0003C) and start to record a telecast.
- 2) Read the value on the meter on the T reel side after the needle has gone around about once. The correct range is $80\text{g}\cdot\text{cm} \pm 5\text{g}\cdot\text{cm}$.

[Method of adjustment]

- 1) Remove the front panel.
- 2) Turn potentiometer RV308 on SS-34 board to adjust the torque until its value falls within the correct range.

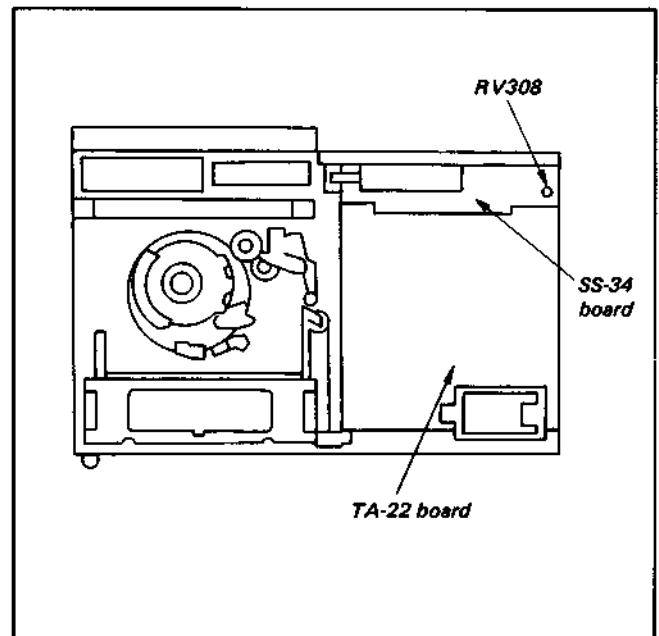


Fig. 3-30. Adjustment of the forward torque

Note:

When the forward torque is weakened during the measurement the tape can become slack, in which case the set will go into emergency stop mode. In such a case, the only switches that will work are the cassette eject switch and the power switch. It is necessary to temporarily remove the cassette, or to turn the power OFF and back ON.

4. TAPE PATH ADJUSTMENT

4-1. TRACKING ADJUSTMENT

This adjustment has a large effect on the picture quality in each mode and on the interchangeability of tapes, so it should be done carefully.

- 4-1-1. Preparation for adjustment
- 4-1-2. Adjustment on the entrance side
- 4-1-3. Adjustment on the exit side

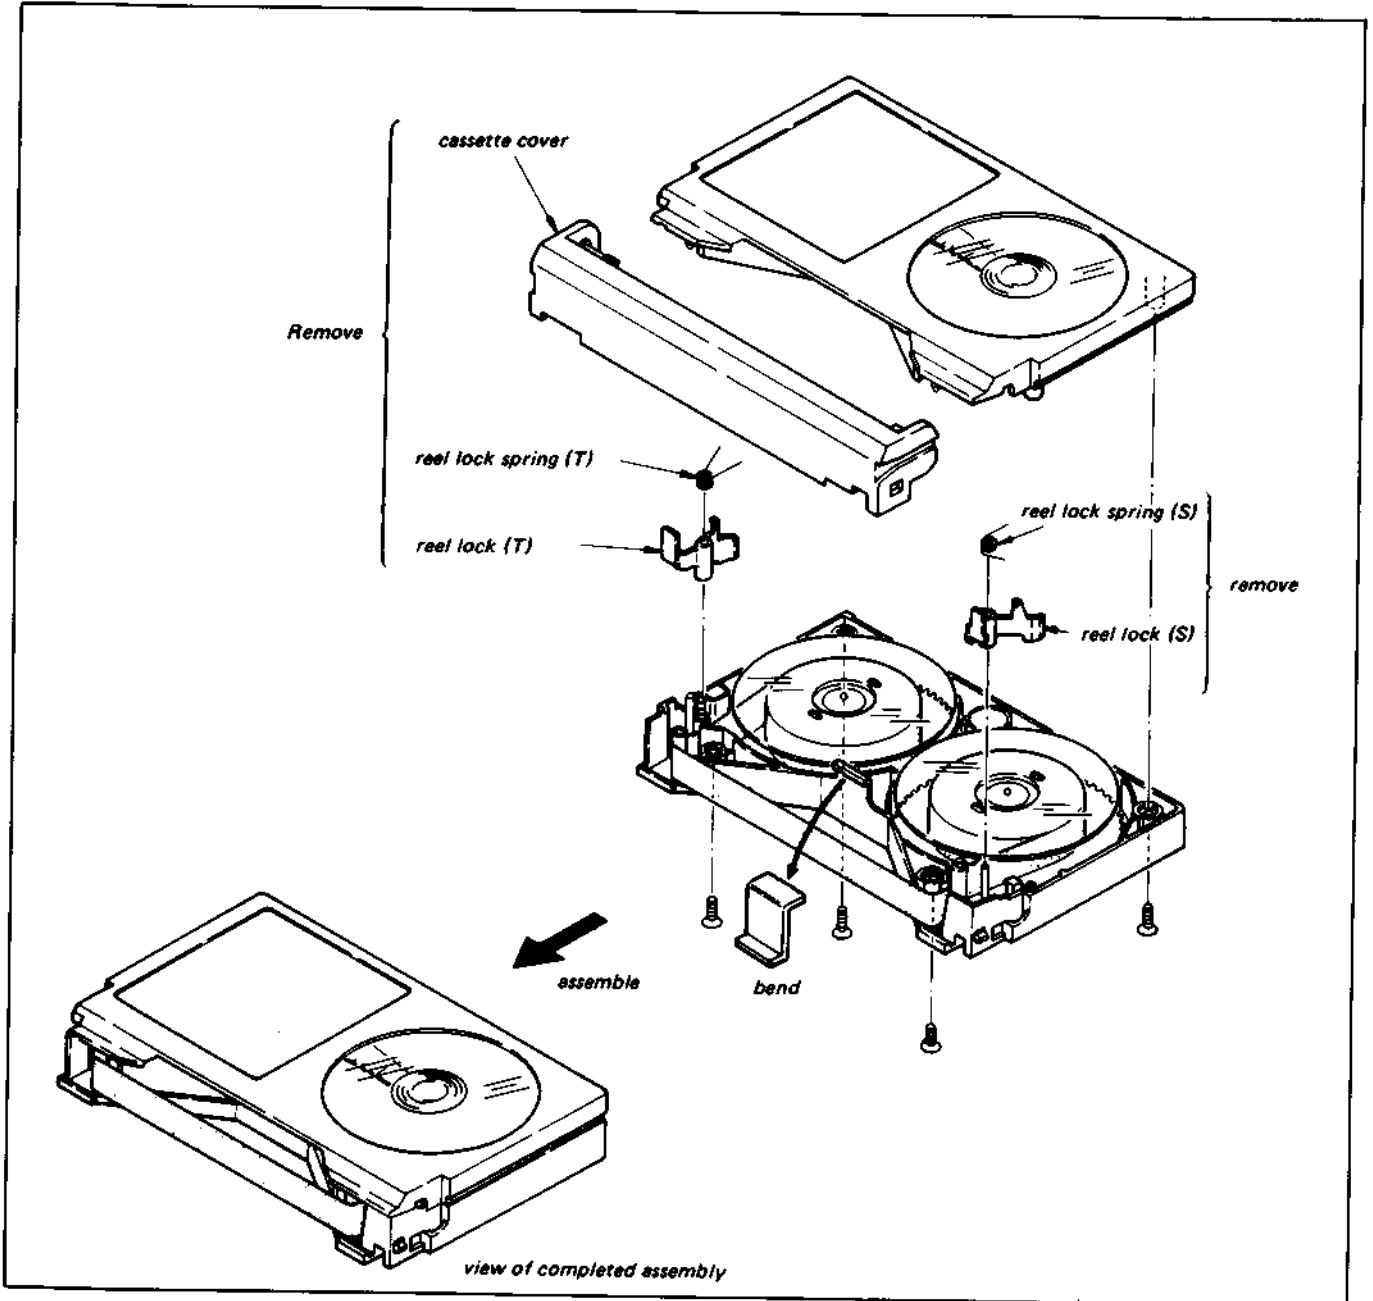


Fig. 4-1.

4-1-1. Preparation for Adjustment

- 1) Remove the cassette cover of the alignment tape in accordance with Fig. 4-1.
- 2) Clean the surface contacted by traveling tape (tape guide, drum tape trailing surface capstan shaft pitch roller, ACE FE head surface) with a chamois cloth dipped in methanol.
- 3) Connect the oscilloscope as follows:
Channel 1: Pin ⑥ of CN502 (RP-20 board)
External trigger: Pin ③ of CN502 (RP-20 board)
- 4) Play back the 1 kHz signal on the tracking section of the alignment tape.
- 5) Confirm that the oscilloscope radio frequency output waveform is flat and that the amplitude is a maximum. (Turn the tracking knob right and left to increase and decrease the amplitude while the waveform remains flat.) When the amplitude of the waveform is a maximum, confirm that the fluctuations and contact of the radio frequency output waveform meet the standards given in Fig. 4-2. If they do not, go through the procedure given in step 6).
- 6) If the entrance waveform cannot be made flat, as shown in Fig. 4-3 (a), by turning the tracking knob, go through the "entrance side adjustment" described in 4-1-2; if the exit waveform shown in Fig. 4-3 (b) cannot be made flat, go through the "exit side adjustment" in 4-1-3.

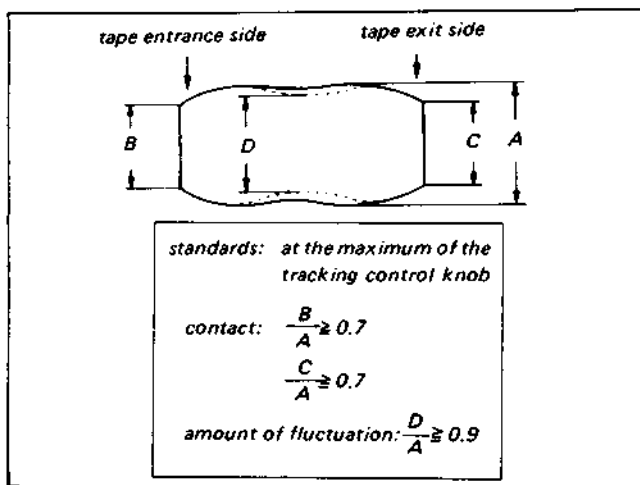


Fig. 4-2.

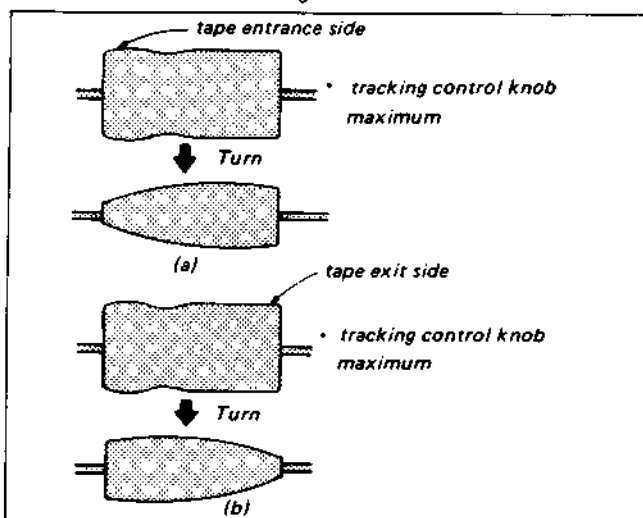


Fig. 4-3.

4-1-2. Entrance Side Adjustment

Whenever the entrance side adjustment is performed, the exit side adjustment must also be performed. The various tape guides and adjustment positions are shown in Fig. 4-5.

- 1) Turn the No. 6 guide counterclockwise to free the movement of the tape as it enters the drum.
- 2) Turn the tracking control knob to the right until the amplitude of the waveform is about 60% of its maximum.
- 3) Loosen No. 5 guide lock screw ① and turn the No. 5 guide until the entrance waveform sticks up a little above flat, as shown in the figure below. Then tighten the No. 5 guide lock screw (Fig. 4-6).

Note:

After tightening No.5 guide lock screw ①, confirm that it is as in the figure below.

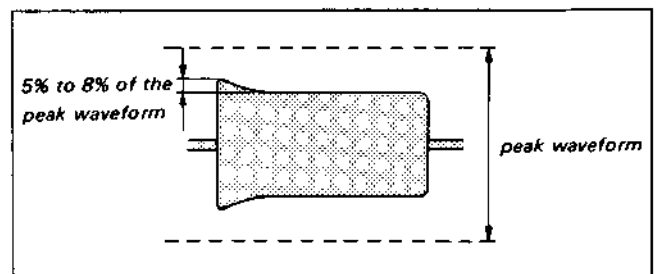


Fig. 4-4.

- 4) Next, lower the No. 6 guide until the waveform is flat.
- 5) Press the tape down between the No. 4 and No. 5 guide with a finger to lower the entrance side radio frequency waveform, then let go and confirm that the waveform returns to what it was before.
- 6) In this condition, check the clearance and curl of the No. 5 guide. If there are clearance and curl, adjust as explained in subsequent sections.

Note:

The tape tension between the No. 3, No. 4 and No. 5 guides must be balanced. If it is not, adjust the tilt of the No. 3 and No. 5 guides.

If the waveform cannot be made to look as shown in Fig. 4-4, or if when the tape is pressed and released on the entrance side it takes time for the waveform to return to what it was before, or if it does not return to what it was before, adjust according to the instructions given below.

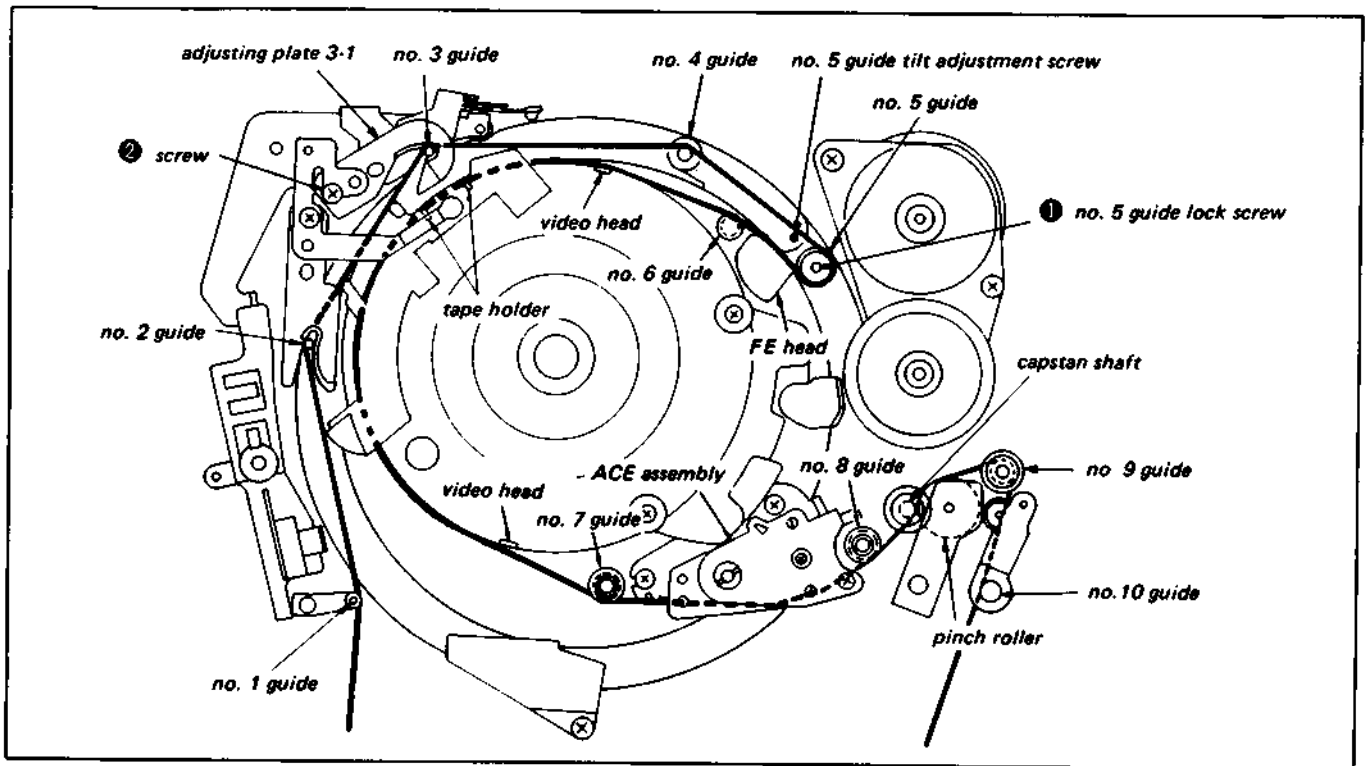


Fig. 4-5. Tape guide layout diagram

[What to do when the waveform entrance output will not rise]

- 1) Check to see if the up-down tension between the No. 3, No. 4 and No. 5 guides is uniform. If it is not, adjust the tilt of the No. 3 and No. 5 guides.

Note:

The lower flange of the No. 4 guide must not protrude.

- 2) Raise the lower flange of the No. 4 guide to raise the entrance output.

Note:

It is sufficient to raise the lower flange of the No. 4 guide to 0.4 mm from its lowest position (within a rotation angle of 360°).

- 3) If the operation performed in step 2) fails to raise the waveform output, turn the No. 5 guide tilt adjustment screw slightly to the left, and the entrance output should rise.

[What to do when the waveform entrance output will not drop]

- 1) Remove the adjusting plate 3-1 of the No. 3 guide from the drum. Just before the lower tension of the tape becomes slack, tighten screw ②.
- 2) If the tape is in contact with the lower flange of the No. 4 guide, lower the flange. If the tape is sticking up from the lower flange, adjust the tilt of the No. 5 guide so that the tape does not stick up from the lower flange of the No. 4 guide.

[What to do when there is a clearance in the No. 5 guide]


Turn the No. 4 guide counterclockwise to run the tape upward and eliminate the clearance in the No. 5 guide.

Note:

At this time make sure that a large curl is not produced below the No. 4 guide.

[What to do when there is a curl]

- 1) When there is a gap below the No. 4 guide: Just before the lower tension on the tape becomes slack, move adjusting plate 3-1 of the No. 3 guide to the outside.
- 2) When there is not a gap below the No. 4 guide (when there is a curl below the No. 4 guide):
 - i) Check to see if the No. 4 guide has been raised up too high. If it has been raised up too high, turn the adjusting plate clockwise to lower the No. 4 guide.
 - ii) If the curl still has not been removed after i), tighten the No. 5 guide tilt adjustment screw in the clockwise direction until the curl is removed.

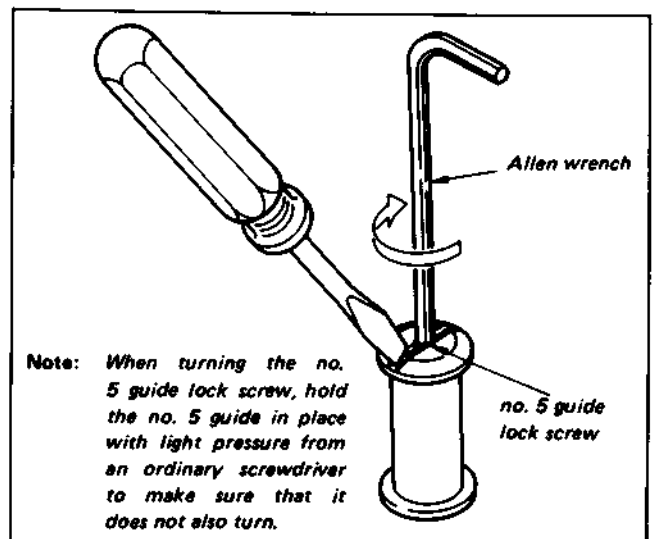

Note: When turning the no. 5 guide lock screw, hold the no. 5 guide in place with light pressure from an ordinary screwdriver to make sure that it does not also turn.

4-1-3. Exit Side Adjustment

- 1) Connect the oscilloscope to pin ⑥ of CN502 (RP-20 board). Connect the external trigger to pin ③ of CN502.
- 2) Play the tracking section of the alignment tape. Adjust the tracking knob to reduce the amplitude of the radio frequency output waveform to 60% of its maximum level.
- 3) Watch the radio frequency output waveform when the No. 7 and No. 8 guides are raised (by turning the respective guide nuts counterclockwise) to let the tape run free. This waveform is called to exit free waveform.

Note:

Be careful not to raise the guides too far. They should be raised only about 0.2 to 0.3mm.

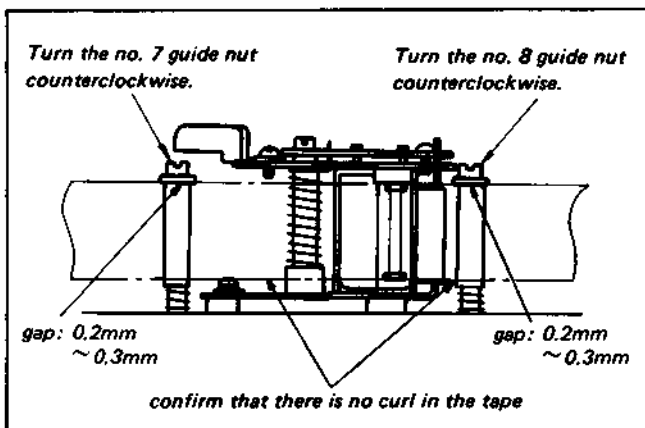


Fig. 4-7.

- 4) At this time, confirm that the exit free waveform is within the range shown in Fig. 4-8(a) and (b).
 - If it is outside of this range, adjust according to the procedure in 4-3.

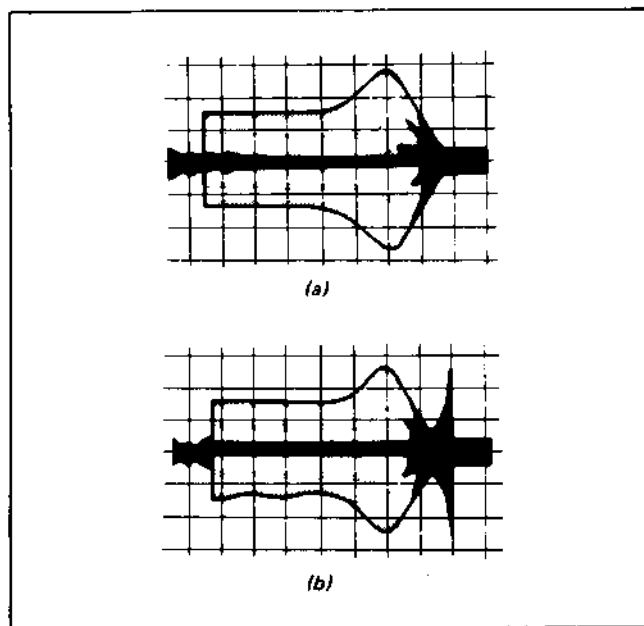


Fig. 4-8.

- 5) Turn the No. 7 guide nut clockwise until the waveform is flat.
- 6) Turn the No. 8 guide nut clockwise until the No. 8 guide is lined up with the tape (just before the waveform starts to change lower the guide until there is no curl).
- 7) During playback, confirm that no curl occurs in the No. 7 guide or the No. 8 guide.
- 8) During review confirm that no curl or clearance occurs in the No. 8 guide. If there is a curl or clearance, adjust using the No. 9 guide. After adjustment, lock the guide nut.

4-2. ADJUSTMENTS AFTER REPLACEMENT OF THE ACE ASSEMBLY

After removal or replacement of the ACE assembly perform the adjustments listed below.

- 4-2-1. Exit side tracking adjustment
- 4-2-2. CTL head (ACE assembly) position adjustment
- 4-2-3. Audio head (ACE assembly) azimuth adjustment
- 4-2-4. Audio head (ACE assembly) height adjustment

4-2-1. Exit Side Tracking Adjustment

- 1) Set the parallel plate (SL-0657 in the list of fixtures and tools) up against the unit as shown in Fig. 4-9, and turn the tilt adjustment screw to adjust the audio head vertically.

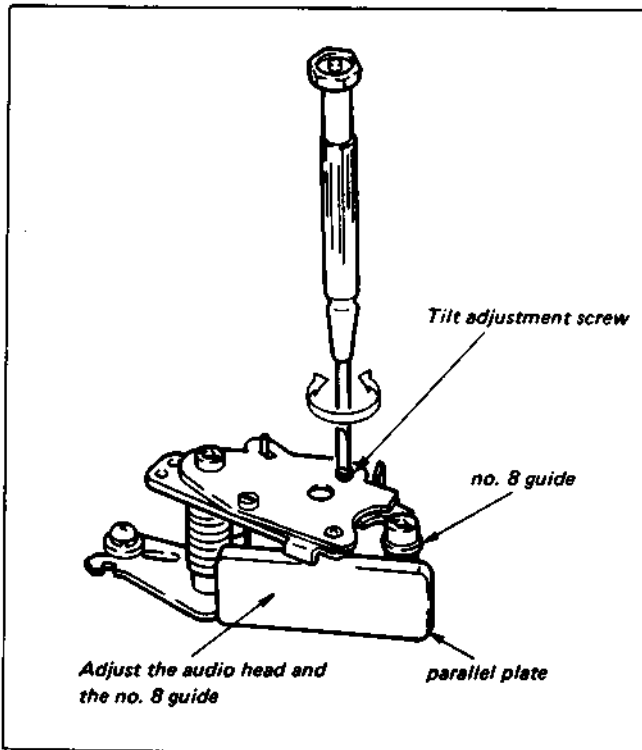


Fig. 4-9.

- 2) Connect the oscilloscope to pin ⑥ of connector CN502 (RP-20 board). Connect the external trigger to pin ③ of CN502.
- 3) Play the tracking section of the alignment tape. Adjust the tracking knob until the radio frequency output waveform amplitude is reduced to about 60% of its maximum level, maximum level.
- 4) Raise the No. 7 and No. 8 guides (turn the respective guide nuts counterclockwise) and observe the radio frequency exit free waveform when the tape runs free.

Note:

Be careful not to raise the guide too far. Raise it about 0.2 to 0.3 mm.

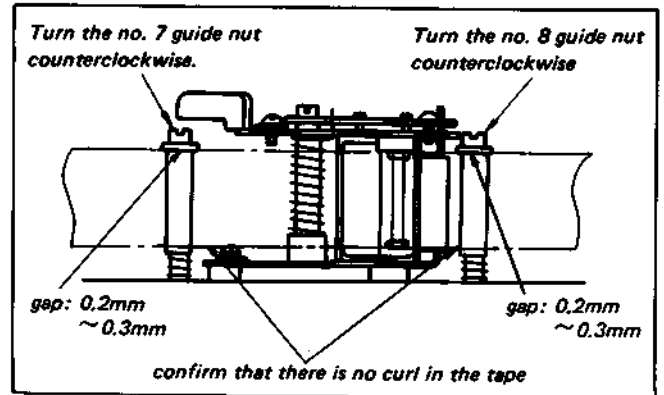


Fig. 4-10.

- 5) At this time, confirm that the exit free waveform is within the range shown in Fig. 4-11(a) and (b).

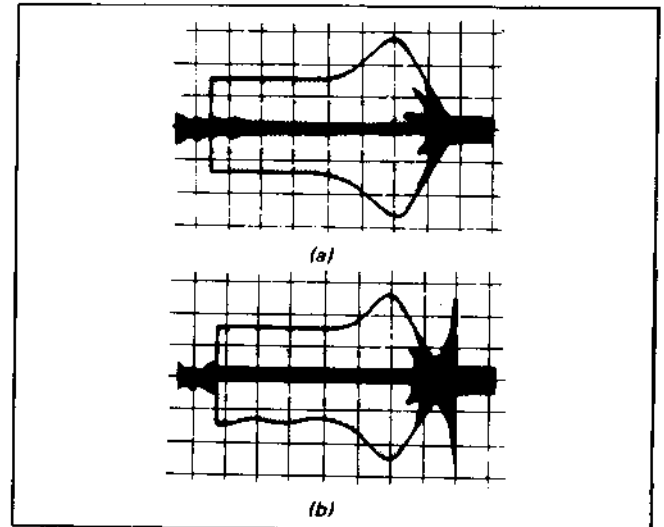


Fig. 4-11.

[When the waveform is outside this range]

- When the waveform is outside this range and has the form shown in Fig. 4-12, turn the tilt adjustment screw clockwise to adjust until the waveform is within the required range.

Note:

Complete the adjustment by turning the adjustment screw in the direction of tightening (clockwise).

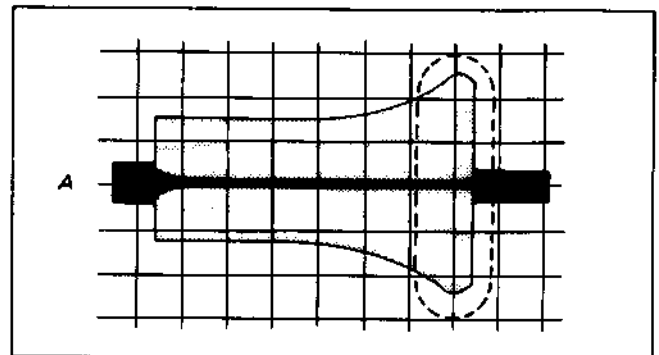


Fig. 4-12.

- When the exit free waveform is outside of the required range and has the form shown in Fig. 4-13, turn the tilt adjustment screw counterclockwise to produce waveform A (Fig. 4-12), then turn it clockwise to bring the waveform within the required range.

Note:

Finish the adjustment by turning the adjustment screw in the direction of tightening (clockwise).

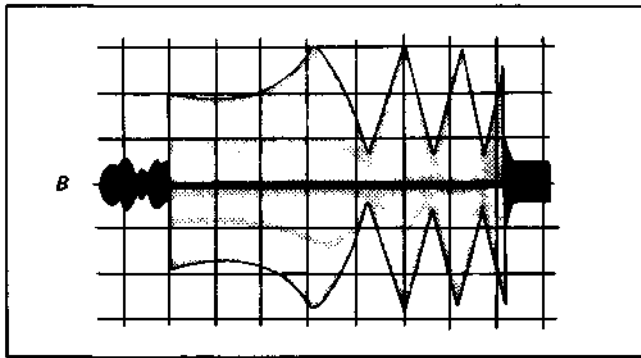


Fig. 4-13.


- 6) Turn the No. 7 guide nut clockwise to flatten the waveform.
- 7) Turn the No. 8 guide nut clockwise to line the No. 8 guide up with the tape (lower it so that there is no curl just before the waveform starts to change).
- 8) If the radio frequency waveform is as shown in Fig. 4-12 on the exit side, repeat the adjustment.

4-2-2. CTL Head (ACE Assembly) Position Adjustment

This adjustment includes the mechanical CTL head mounting position adjustment and the electrical tracking control center adjustment. The tracking control center adjustment is to be performed first, followed by the mechanical adjustment of the head mounting position.

[Connections]

- 1) Playback

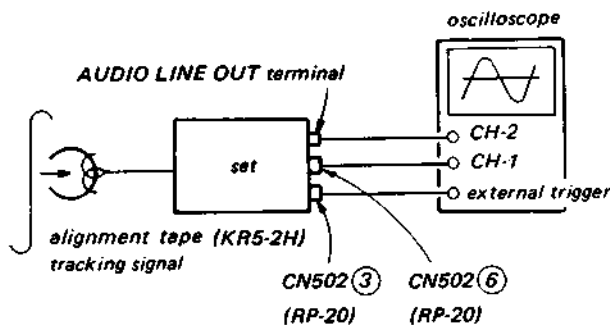

[Method of adjustment]

- 1) Play the tracking signal section of the alignment tape.
- 2) Turn the tracking control knob clockwise or counterclockwise to the center click position. Confirm that the amplitude of the radio frequency output signal is at its maximum level. Also confirm that the audio signal 0 level position occurs at the location of the channel B waveform. If the necessary standards are not met follow the procedure in 3).

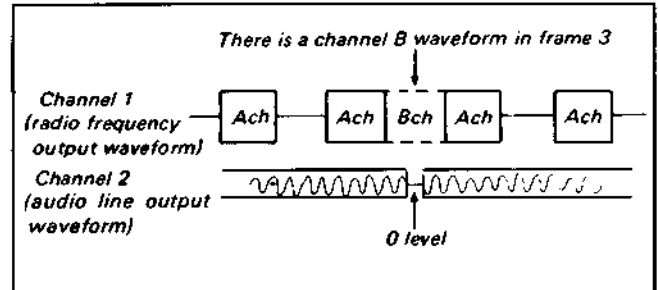


Fig. 4-14.

- 3) Tracking center adjustment
Refer to electrical adjustment 3) in section 5-3-2.
- 4) CTL head position adjustment
 - a. Set the tracking control knob at the center click position.
 - b. Loosen the 2 ACE assembly position adjustment screws, then use a tool such as an ordinary screwdriver to slide the ACE assembly to where the radio frequency output waveform amplitude becomes a maximum.
 - c. Play the color bar signal on the alignment tape and check the picture quality.
 - d. Tighten the position adjustment screws, then lock them.


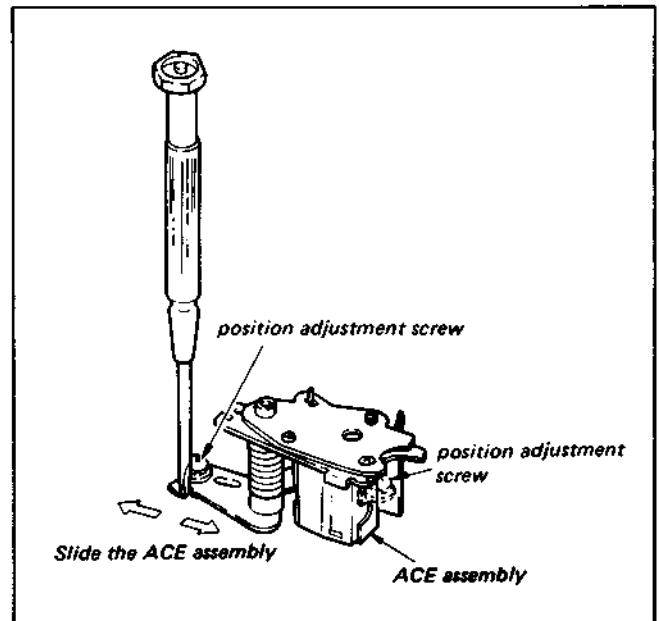


Fig. 4-15.

4-2-3. Audio head (ACE Assembly) Azimuth Adjustment

[Connections]

- 1) Playback

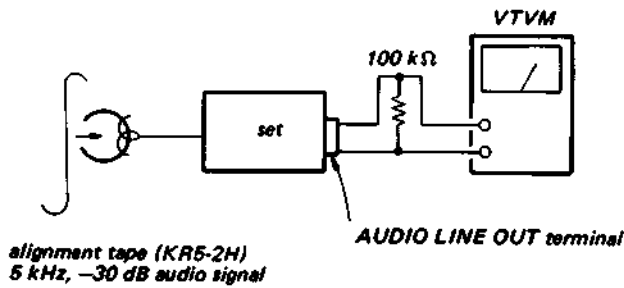

[Method of adjustment]

- 1) Play the 5kHz. -30dB audio signal section (RF sweep section) of the alignment tape.
- 2) Adjust the azimuth adjustment screw until the output level (VTVM indication) is a maximum.

Note:

Complete the adjustment by turning the adjustment screw in the direction of tightening (clockwise).

- 3) After adjustment, lock the adjustment screw.

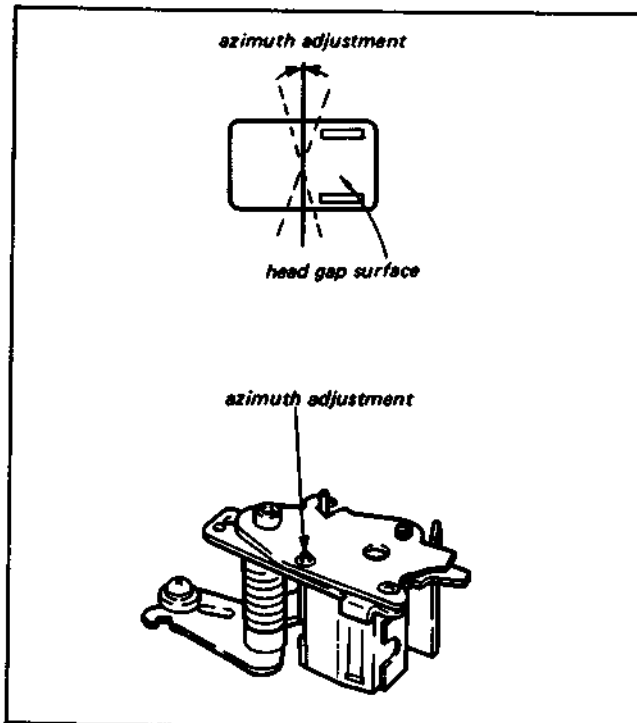


Fig. 4-16.


4-2-4. Audio Head (ACE Assembly) Height Adjustment

[Condition]

This adjustment must only be performed after the exit side tracking adjustment has been completed.

[Connections]

- 1) Playback

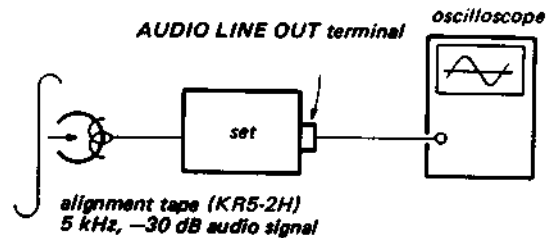

[Method of adjustment]

- 1) Play the 5kHz. -30dB audio signal section (RF sweep section) of the alignment tape.
- 2) Adjust the height adjustment nut so that the amplitude of the audio line output waveform (5 kHz) becomes a maximum.

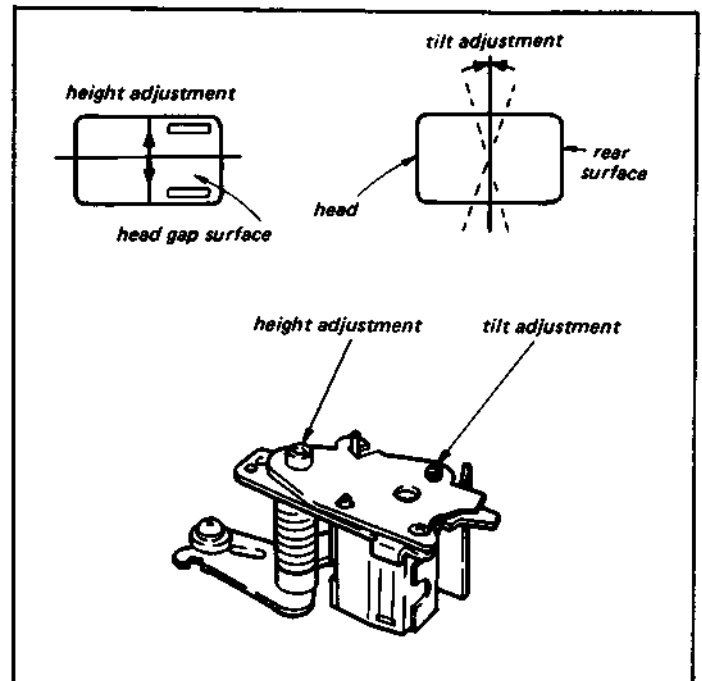


Fig. 4-17.

4-3. HOW TO INSPECT THE TAPE TRAVELING WHEN ADJUSTING THE TAPE PATH

Adjust and check the tape path using the alignment tape following the adjustment guide, then check the tape travel using the procedure below.

- 1) Get one L-830 reel ready (these are widely available commercially). Remove the cassette cover referring to Fig. 4-1 of the adjustment guide.
- 2) Run the L-830 tape in playback mode and check the following points.
 - i) Entrance side
Confirm that the tape contacts the upper flange of the No. 5 and No. 6 guides and the lower flange of the No. 4 guide, and is not damaged or bent. (Some tape curl is allowed but the tape must not be creased.) (Fig. 4-18)
 - ii) Exit side
Confirm that the tape does not contact the upper flange of the No. 7 guide or the No. 8 guide, or the upper or lower flange of the No. 10 guide, and is not scratched. (Some tape curl is allowed but the tape must not be creased.) (Fig. 4-19)
 - iii) If the tape was found to not be running correctly in step ii), readjust the tape path using the alignment tape, following the adjustment guide.
If the tape is not running correctly on the entrance side, refer to section 4-1-2 of the adjustment guide.
If the tape is not running correctly on the exit side, refer to section 4-1-3 of the adjustment guide.

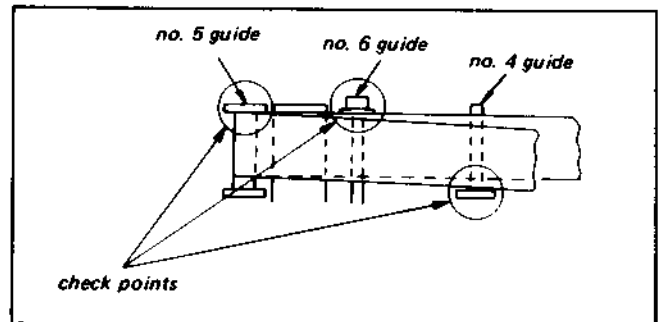


Fig. 4-18.

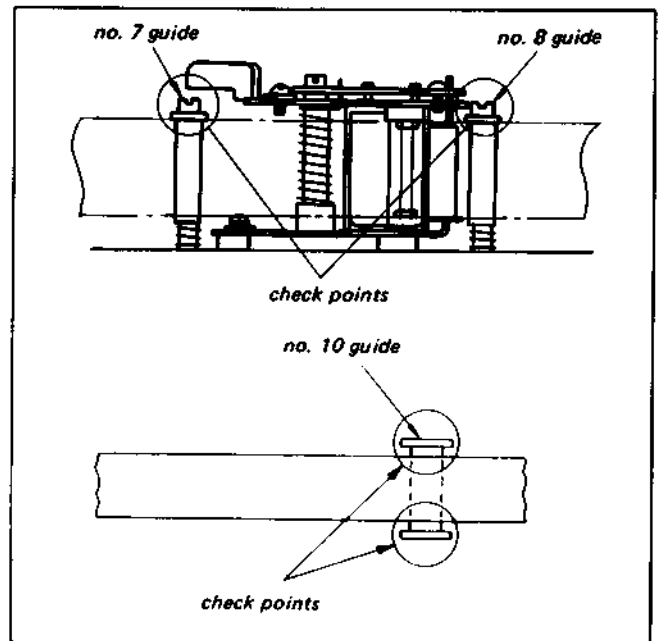


Fig. 4-19.

5. ELECTRICAL ALIGNMENT

All the electrical alignment can be performed by using the equipment mentioned below, the alignment tape, and the PAL colour bar signal (100%).

[Equipment Required]

- (1) PAL Colour Monitor TV
- (2) Oscilloscope, Dual-trace, Bandwidth ... more than 10 MHz with delay mode
- (3) Frequency Counter
- (4) PAL Colour-Bar Generator
- (5) Digital voltmeter
- (6) Audio Signal Generator
- (7) Audio level meter (VTVM)
- (8) Attenuator
- (9) Alignment Tape, type: KR5-2H, Code No. 8-969-995-52
- (10) Alignment Tool (Adjusting screwdriver for semi-fixed resistors and coils)
Jig No. SL-0001, Code No. J-6080-001-A

[Setup for Alignment]

The antenna should be connected correctly to the antenna input terminal of the videocassette recorder.

It is important that the video output signal satisfies the specification because the telecast signal received by the incorporated tuner of the videocassette recorder is utilized as the adjustment signal of the machine. The incorporated tuner should be set to the channel with the best reception. The video signal should be checked with an oscilloscope connected to VIDEO OUT (BNC connector). Verify that the sync signal amplitude is approx. 0.3 Vp-p and the video signal amplitude is approx. 0.7 Vp-p at peak. Adjust the fine tuning while observing the signal and the TV screen so that the burst signal amplitude becomes approx. $0.3V \pm 0.1$ Vp-p. Also confirm that there is not spikes observed at the sync signal portion. (See Fig. 5-1.)

The video (colour bar) signal for the alignment is shown in Fig. 5-1.

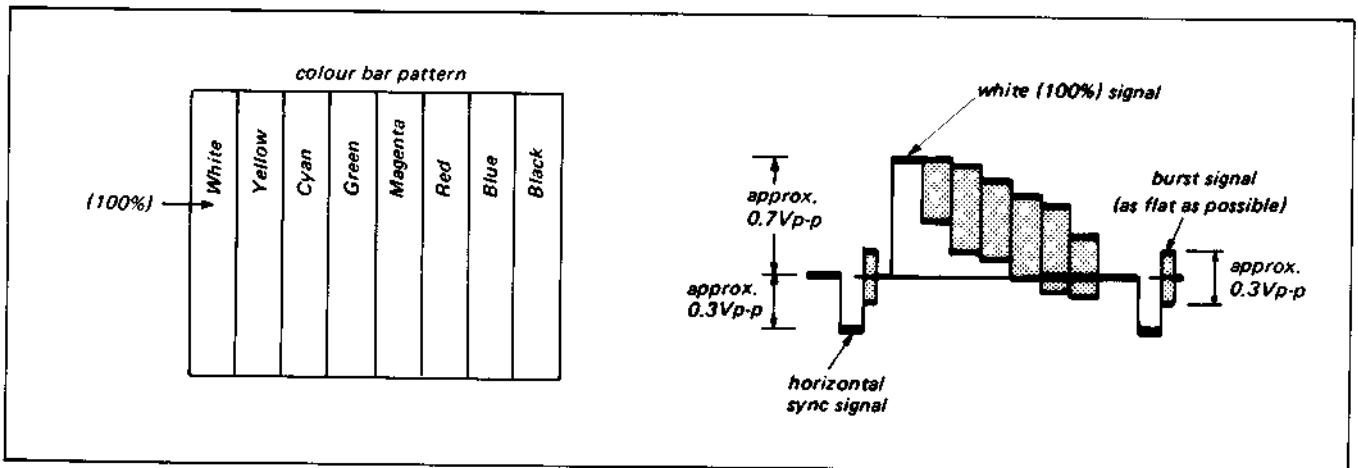


Fig. 5-1. Video (colour-bar) signal

[Alignment Tape]

KR5-2H

	Video signal	Audio signal	Playing time	Use for
1.	Colour bars	3 kHz - 5 dB	5 min	General performance, tape speed checks, switching position adjustment.
2.	Monoscope	333 Hz - 25 dB	5 min	Video head dihedral, audio level adjustment.
3.	RF sweep	5 kHz - 25 dB	5 min	Video, audio frequency characteristics, audio azimuth adjustment marker: 1, 2, 3.58, 4.5, 5.2 MHz
4.	Tracking 1 MHz (CH-B) *1 (Channel B is inserted in every 3 frames.)	1 kHz - 5 dB *2 (Signal is dropped out in the positions where channel B is inserted.)	5 min	Tracking, Audio height adjustments CTL Position check (Check if *1 and *2 are the same position.)

[Alignment Tool for Semi-fixed Variable Resistors and Coils]

Semi-fixed variable resistors and inductances should be adjusted with the alignment tool exclusively prepared for the adjustment of the components. A common screwdriver is too large for adjusting the components from the conductor side of a printed circuit board.

The metal blade of the alignment tool is used for variable resistors and trimmer capacitors and the plastic tip is used for variable inductances.

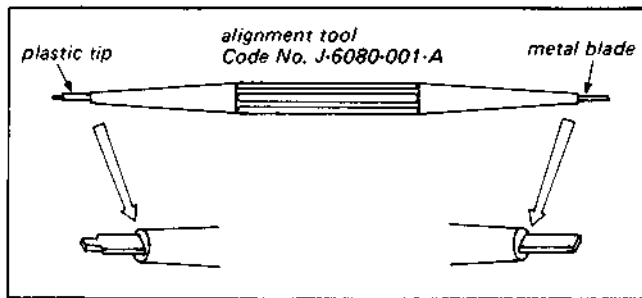


Fig. 5-2. Alignment tool

[Colour Bar Signal]

The 100% colour bar signal recorded on the Alignment tape is shown in Fig. 5-3.

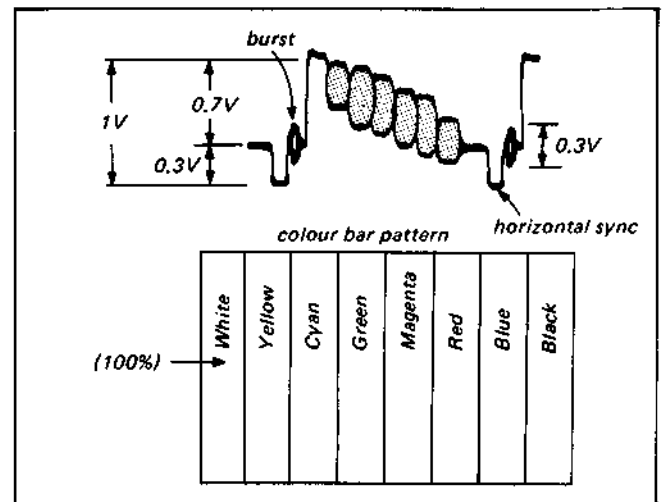


Fig. 5-3. Colour bar signal recorded on the alignment tape

[Required levels and Impedances of Input and Output]

Video


Input VIDEO IN: BNC connector
 $1\text{ V}_{p-p} \begin{matrix} +1.0 \\ -0.5 \end{matrix} \text{ V}_{p-p}$
 75Ω unbalanced, sync negative
 VIDEO OUT: BNC connector
 $1\text{ V}_{p-p} \pm 0.1\text{ V}_{p-p}$
 75Ω unbalanced, sync negative

Audio

Input AUDIO IN: phono jack
 47 kΩ, -10 dBs
 (0 dBs = 0.775V rms)
 Output AUDIO OUT: phono jack
 Load impedance less than 10 kΩ
 -10 dBs with 47 kΩ load unbalanced

[Adjustment procedure]

Adjust in the order given below.

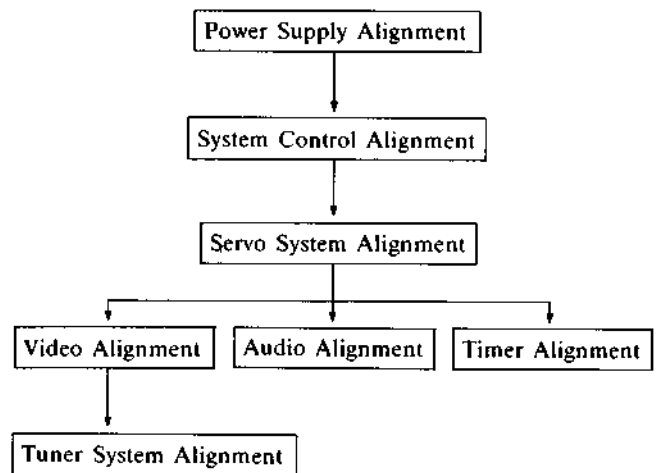

5-1. POWER SUPPLY CHECK (PS-46 Board)

Measure in E-E mode (power supply switch ON).

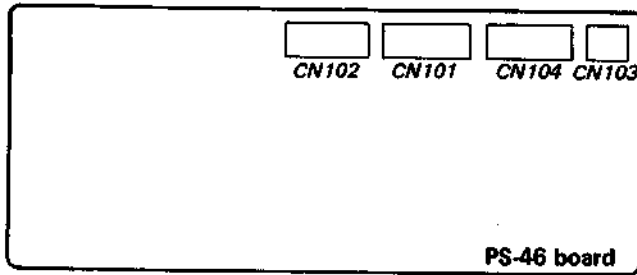


Fig. 5-4. Component layout

1. UN 12V Check
Pin ⑥ of CN101 shall be $12 \pm 0.5V$
2. SW 12V Check
Pin ③ of CN101 shall be $12.2 \pm 0.2V$
3. SW 9V Check
Pin ⑤ of CN101 shall be $9.0 \pm 0.2V$
4. UN 5V Check
Pin ① of CN101 shall be $5.1 \pm 0.5V$
5. UN 45V Check
Pin ② of CN102 shall be $44 \pm 3V$
6. UN -45V Check
Pin ③ of CN102 shall be $-44 \pm 3V$

5-2. SYSTEM CONTROL CHECK (SS-34 Board)

1. Clock Frequency Check
Mode: E-E
Signal: None
Frequency counter: Pin ⑥⑩ of IC601
Check: $f = 6\text{MHz}$

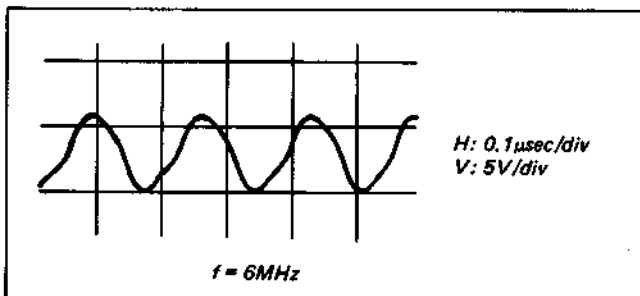


Fig. 5-5.

5-3. SERVO SYSTEM ALIGNMENT

Alignment Sequence

1. Drum servo system alignment
2. Capstan servo system alignment
3. STILL servo system alignment

5-3-1. Drum Servo System Alignment

- 1) Drum Free Speed Adjustment (SS-34 Board)
Mode: Playback
Signal: Alignment tape colour bar. or monoscope
Oscilloscope: CH-1 TP405 (Pin ⑬ of IC301)
CH-2 TP402 (Pin ③⑨ of IC301)

[Alignment method]

Adjust to $553\mu\text{sec} \pm 10\mu\text{sec}$ with RV303.

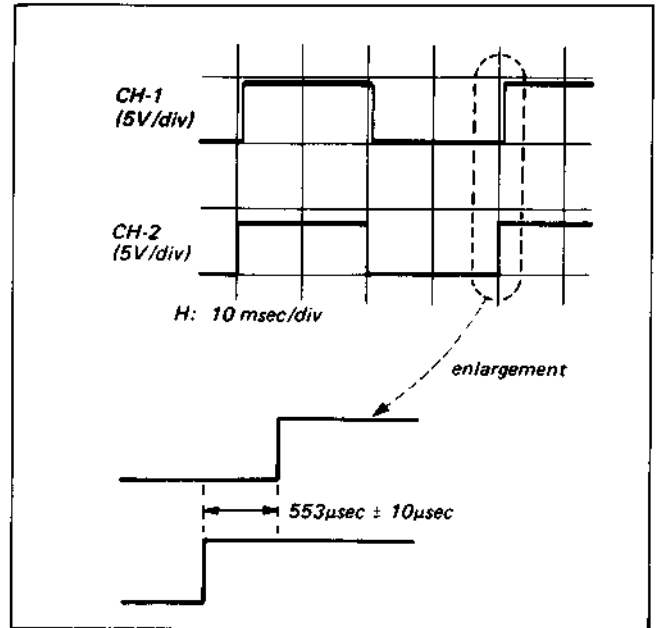


Fig. 5-6. Drum free speed adjustment

- 2) RF Switching Position Adjustment (SS-34 Board)
Mode: Playback
Signal: Alignment tape colour bar or monoscope
Oscilloscope: CH-1 TP402 (Pin ③⑨ of IC301)
CH-2 Pin ④⑩ of IC301

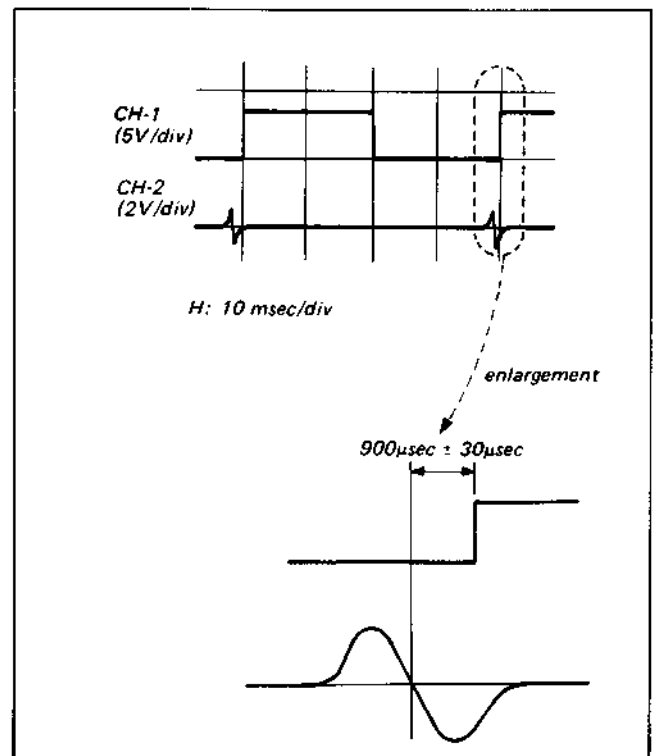


Fig. 5-7. RF switching position adjustment (1)

[Adjustment method]

- i) Adjust to $900 \mu\text{sec} \pm 30 \mu\text{sec}$ with RV304 (See Fig. 5-7.)
- ii) Change connection of CH-2 only to Pin ⑩ of IC301.
- iii) Adjust to $900 \mu\text{sec} \pm 30 \mu\text{sec}$ with RV305 (See Fig. 5-8.)

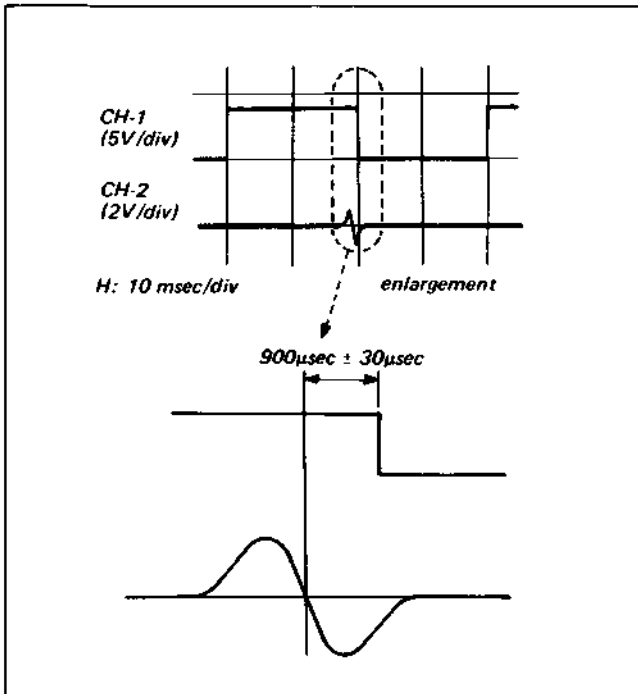


Fig. 5-8. RF switching position adjustment (2)

3) PICTURE SEARCH, f_H Adjustment (SS-34 Board)

Mode: PICTURE SEARCH (FWD)
 Signal: Alignment tape colour bar or monoscope
 Frequency counter: Pin ③ of CN309 (TP404)

[Adjustment method]

Adjust to $64 \mu\text{sec} \pm 0.3 \mu\text{sec}$ with RV307.

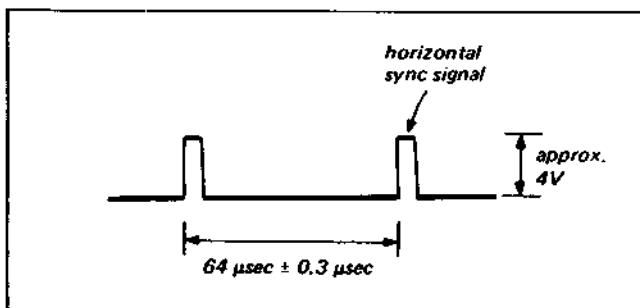


Fig. 5-9. PICTURE SEARCH, drum free speed adjustment

5-3-2. Capstan Servo System Alignment

1) Capstan Free Speed Adjustment (SS-34 Board)

Mode: playback
 Signal: Alignment tape colour bar or monoscope
 Oscilloscope: TP407 (Pin ⑩ of IC301)

[Adjustment method]

Adjust the duty (ratio for A and B) to $50\% \pm 5\%$ with the RV301.

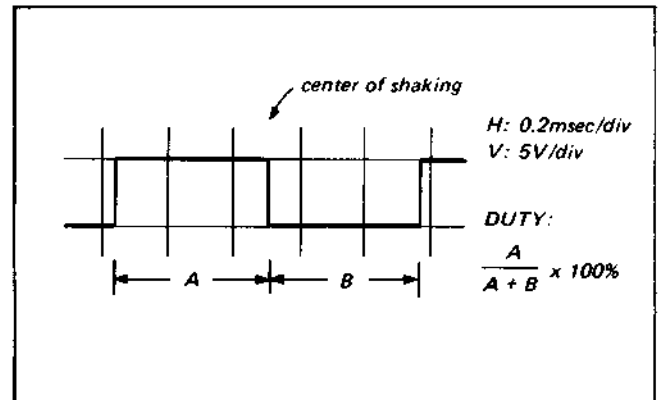


Fig. 5-10. Capstan free speed adjustment

2) PICTURE SEARCH, Capstan Free Speed Adjustment (SS-34 Board)

Mode: PICTURE SEARCH (FWD)
 Signal: Alignment tape colour bar or monoscope

[Adjustment method]

- i) Set up the picture search (forward) mode and adjust with RV302 so that the progression of noise bars becomes as slow as possible.
- ii) Set up the picture search (reverse) mode and check that noise bars do not progress very quickly.

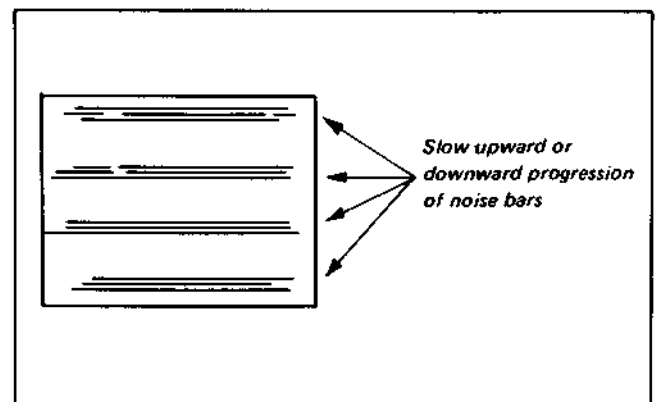


Fig. 5-11. PICTURE SEARCH, capstan free speed adjustment

3) Tracking Center Adjustment (SS-34 Board)

Mode: Playback
 Signal: Alignment tape colour bar, or monoscope
 Oscilloscope: CH-1 TP405 (Pin ⑬ of IC301)
 CH-2 TP406 (Pin ⑮ of IC301)

[Adjustment method]

- i) Set the TRACKING knob to the center click position.
- ii) Adjust to $7.05 \text{ msec} \pm 0.05 \text{ msec}$ with RV306. (See Fig. 5-12.)

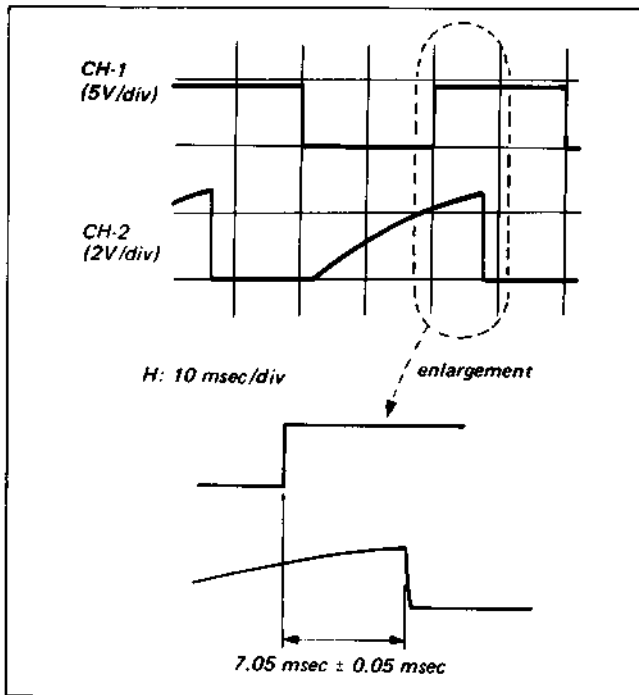


Fig. 5-12. Tracking center adjustment

5-3-3. STILL Servo System Alignment

1) Capstan Brake Adjustment (SS-34 Board)

Mode: PB → PB · PAUSE
 Signal: Alignment tape colour bar or monoscope
 Oscilloscope: Pin ④ of CN303, (CAP RVS)
 External trigger: Pin ⑮ of IC305, (CAP CUT)
 Sweep mode: Normal
 Trigger slope: - (minus)

[Adjustment method]

- i) Adjust trigger level so the oscilloscope sweeps only when the VTR shifts from the PB mode to the PB PAUSE mode.
- ii) Adjust to $16.7 \text{ msec} \pm 0.5 \text{ msec}$ with RV603.

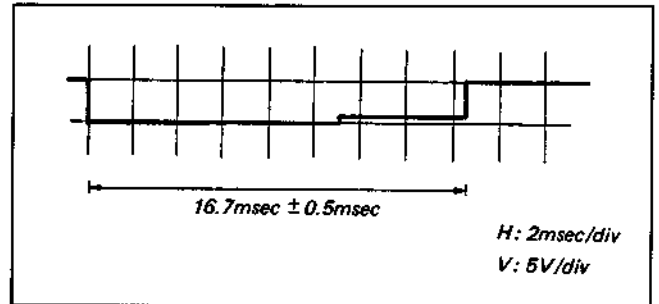


Fig. 5-13. Capstan brake adjustment

2) STILL Tracking Adjustment (SS-34 Board)

Mode: PB → PB · PAUSE
 Signal: Alignment tape colour bar or monoscope
 Oscilloscope: CH-1: Pin ④ of CN303, (CAP RVS)
 CH-2: TP402, (RF SW PULSE)
 External trigger: Pin ⑮ of IC305, (CAP CUT)
 Sweep mode: Normal
 Trigger slope: - (minus)

[Adjustment method]

- i) Adjust trigger level so the oscilloscope sweeps only when the VTR shifts from the PB mode to the PB PAUSE mode.
- ii) Adjust to $2.9 \text{ msec} \pm 0.5 \text{ msec}$ with RV602.

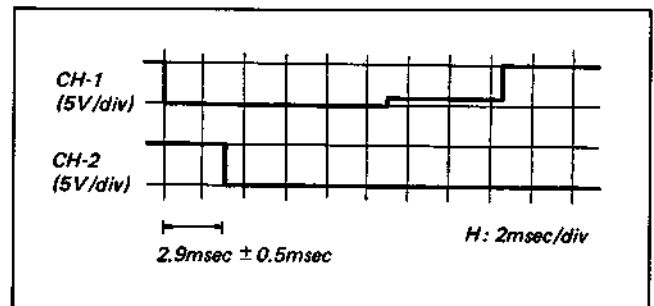


Fig. 5-14. STILL tracking adjustment

3) STILL, f_H Adjustment (SS-34 Board)

Mode: PB · PAUSE (STILL)
 Signal: Alignment tape colour bar or monoscope
 Oscilloscope: Pin ③ of CN309 (TP404)

[Adjustment method]

- i) Adjust to $64 \mu\text{sec} \pm 0.1 \mu\text{sec}$ with RV310.

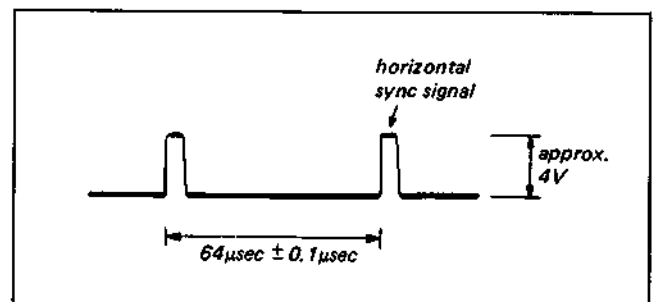


Fig. 5-15. STILL, f_H Adjustment

5-4. PAL VIDEO SYSTEM ALIGNMENT

As a rule, first the playback system is aligned with an alignment tape to check that it operates normally, then the recording system is aligned.

The alignment sequence is shown below. The Y signal and chroma signal systems are aligned for both playback and recording systems.

Colour video signal supplied by the PAL colour bar generator is used as video input signal for video system alignment in the record mode. Check that the sync and colour burst signals conform to the specifications designated in "Set-up for Alignment" in Fig. 5-1.

5-4-1. Playback System Alignment

1. Playback frequency characteristic adjustment
2. Expand adjustment
3. Playback video level adjustment
4. Y-comb adjustment
5. Dropout compensator adjustment
6. AFC adjustment
7. AFC offset adjustment
8. 4.43MHz REF adjustment
9. Chroma comb filter adjustment
10. Carrier balance adjustment
11. JOG PLL adjustment
12. JOG exchange chroma level adjustment

5-4-2. Record System Alignment

1. Sync AGC adjustment
2. Compress adjustment
3. Carrier set adjustment
4. Deviation adjustment
5. Dark clip and white clip adjustment
6. Y record current adjustment
7. Pilot burst signal level adjustment
8. Chroma record current adjustment

5-4-1. Playback System Alignment

1) Playback Frequency Characteristic Adjustment (RP-20 Board)

- Adjust both the A and B channels.
 - The B channel indicated by ().
- Mode: Playback
Signal: Alignment tape RF sweep
Oscilloscope: Pin ⑥ of CN502
External trigger: Pin ③ of CN502

[Adjustment method]

- i) Turn tracking knob to maximum output.
- ii) Adjust RV503 to make the 2MHz amplitude of A and B channels equal. (See Fig. 5-16)
- iii) Set the trigger slope to -(+).
- iv) Adjust the 5.2MHz amplitude to $1/2 - 2/3$ of the 2MHz amplitude with RV502 (RV501).

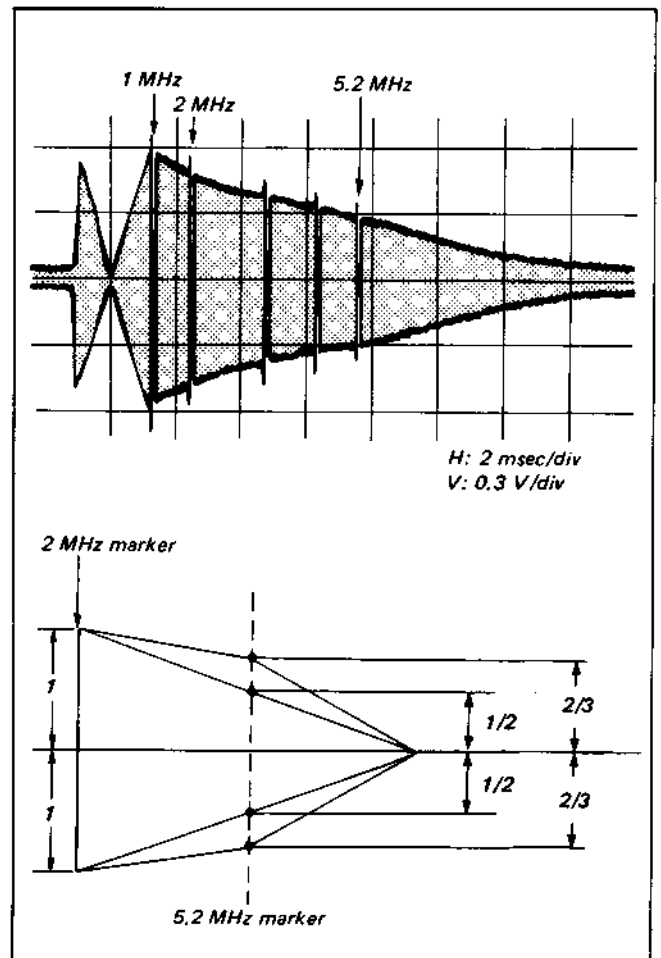


Fig. 5-16. Playback amplifier frequency characteristic adjustment

2) Expand Adjustment (YC-31 Board)

- Mode: Playback
Signal: Colour bar
Digital voltmeter: See Fig. 5-17.

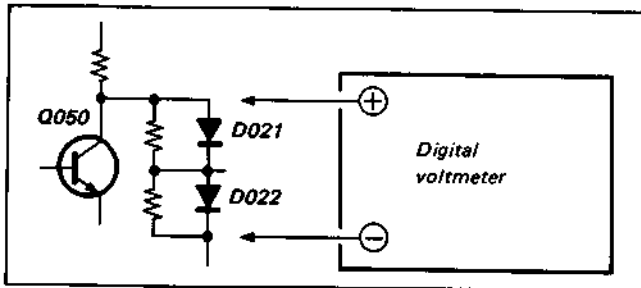


Fig. 5-17.

[Adjustment method]

- i) Adjust to 0.45 ± 0.01 Vdc with RV020.

3) Playback Video Level Adjustment (YC-31 Board)

Mode: Playback

Signal: Alignment tape colour bar

Oscilloscope: VIDEO OUT (75Ω terminated) on YC-31 Board

[Adjustment method]

- i) Adjust to $1.0V \pm 0.05V_{p-p}$ with RV019 on YC-31 Board.

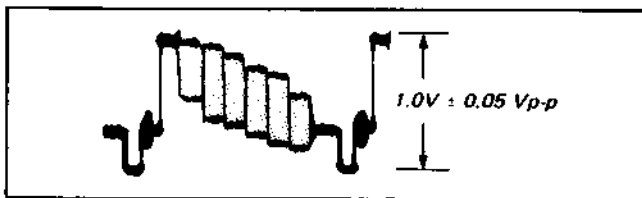


Fig. 5-18. Playback video level adjustment

4) Y-Comb Adjustment (YC-31 Board)

Mode: Playback

Signal: Colour bar

Oscilloscope: Pin ⑧ of IC401 (Attach 100kΩ resistor to tip of probe (10:1)).

[Adjustment method]

- i) Adjust RV401 for minimum output.

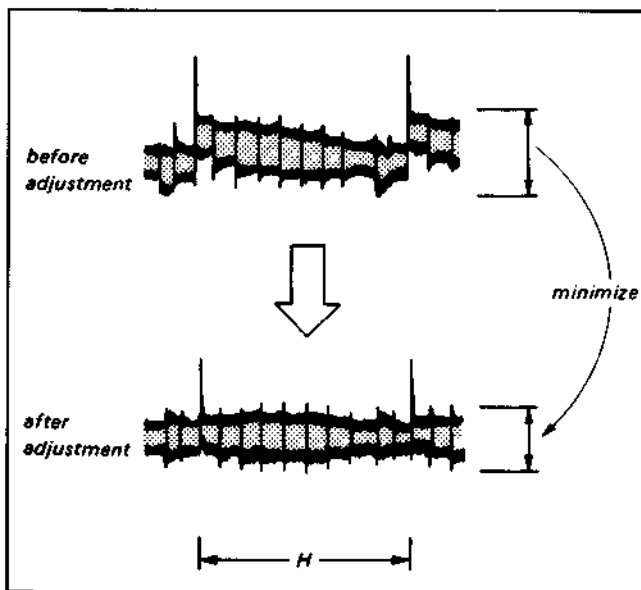


Fig. 5-19. Y-comb adjustment

5) Dropout Compensator Threshold Adjustment (YC-31 Board)

Mode: Playback

Signal: A recorded tape with dropouts

[Adjustment method]

- i) Turn RV010 fully clockwise (⌚) as seen from the pattern side. In this state, dropouts appear on the monitor screen.
- ii) Slowly turn RV010 counterclockwise (⌚) and set to make the dropouts disappear.
- iii) Rewind the tape and verify that the dropouts described in (i) above have disappeared.

6) AFC Adjustment (YC-31 Board)

Mode: E-E

Signal: Colour bar

Oscilloscope: Pin ⑫ of IC006

[Adjustment method]

- i) Adjust to $4.50V_{dc} \pm 0.01$ Vdc with RV007.

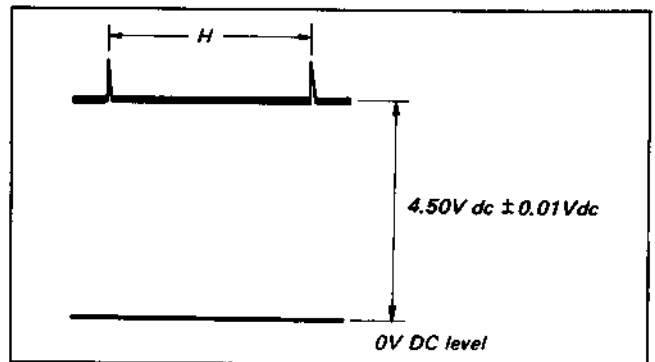


Fig. 5-20. AFC adjustment

7) AFC Offset Adjustment (YC-31 Board)

Mode: Record

Signal: Colour bar

Oscilloscope: Pin ⑫ of IC006

[Adjustment method]

- i) Adjust RV006 so that the fluctuation of DC level is minimum.
- ii) After this adjustment, check the AFC adjustment.

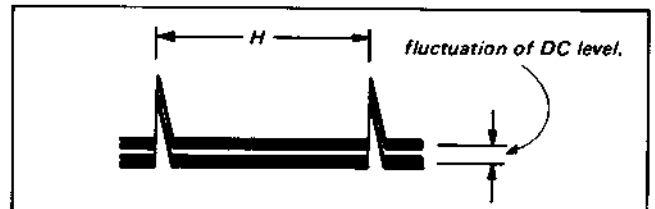


Fig. 5-21. AFC offset adjustment

8) 4.43MHz REF. adjustment (YC-31 Board)

Mode: PB

Signal: Colour bar

Frequency counter: Pin ⑭ of IC006

[Adjustment method]

- i) Adjust to $4.433619MHz \pm 5$ Hz with CV001.

- 9) Chroma Comb Filter Adjustment (YC-31 Board)
 Mode: Playback
 Signal: Alignment tape colour bar
 Adjust while observing the monitor TV screen.

[Adjustment method]

- i) Minimize beats with RV501 and LV501.

- 10) Carrier Balance Adjustment (YC-31 Board)
 Mode: Playback
 Signal: Alignment tape colour bar
 Adjust while observing the monitor TV screen.

[Adjustment method]

- i) Minimize beats with RV005.

- 11) JOG PLL Adjustment (YC-31 Board)

Mode: E-E
 Signal: Colour bar
 Oscilloscope: Pin ⑩ of IC003

[Adjustment method]

Adjust to $20\mu\text{sec} \pm 1\mu\text{sec}$ with RV003. (See Fig. 5-28.)

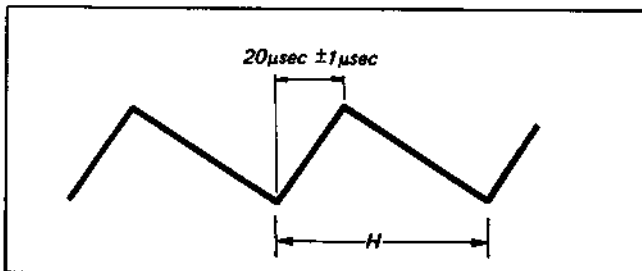


Fig. 5-22. JOG PLL adjustment

- 12) JOG Exchange Chroma level Adjustment (YC-31 Board)

Mode: PB · PAUSE (STILL)
 Signal: colour bar
 Oscilloscope: Pin ⑧ of IC003

[Adjustment method]

- i) Adjust RV002 so that the fluctuation of level is minimum.

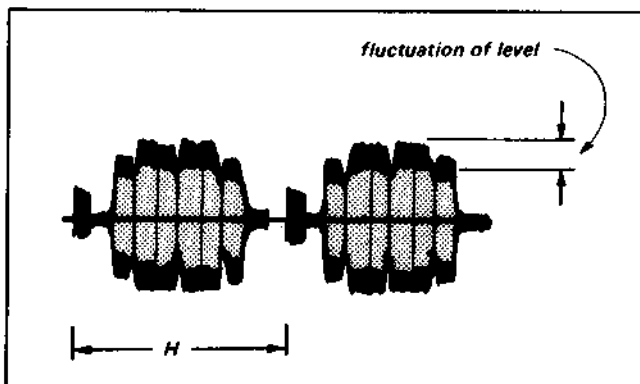


Fig. 5-23. JOG EXCH. C. level adjustment

5-4-2. Record System Alignment

- 1) Sync AGC Adjustment (YC-31 Board)

Mode: E-E
 Oscilloscope: VIDEO OUT (75Ω terminated)
 Signal: Colour bar (V : S = 7 : 3)

[Adjustment method]

- i) Adjust to $1.0V \pm 0.05V_{p-p}$ with RV021.

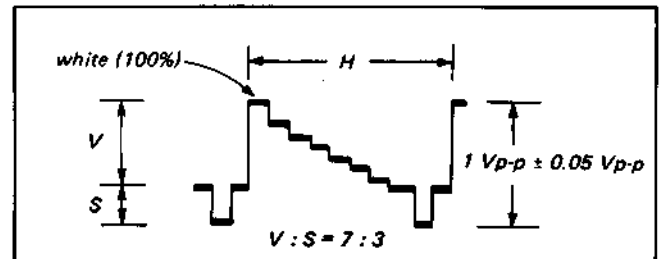


Fig. 5-24. Sync AGC adjustment

- 2) Compress Adjustment (YC-31 Board)

Mode: E-E
 Signal: None
 Digital voltmeter: See Fig. 5-25.

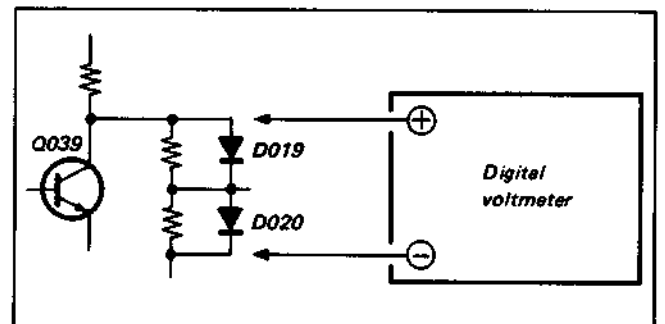


Fig. 5-25.

[Adjustment method]

- i) Adjust to $0.3V \pm 0.01 V_{dc}$ with RV016.

- 3) Carrier Set Adjustment (YC-31 Board)

Mode: E-E
 Signal: None
 Frequency counter: Pin ⑳ of IC009

[Adjustment method]

- 1) Adjust to $3.8\text{MHz} \pm 0.04\text{MHz}$ with RV014.

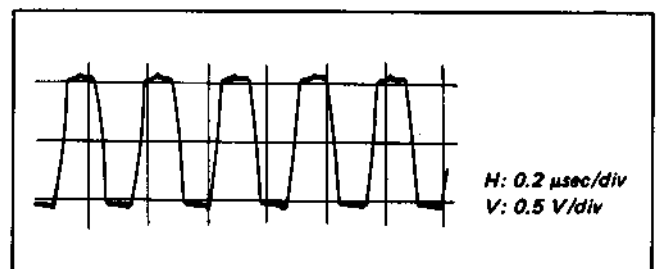


Fig. 5-26. Carrier set adjustment

4) Deviation Adjustment (YC-31 Board)

- The playback system adjustment and the carrier set adjustment in Paragraph 3) above must be completed before making this adjustment.

Mode: Self-recording and playback
 Signal: Colour bar
 Oscilloscope: Collector of Q038, VIDEO OUT (75Ω terminated)

[Adjustment method]

- Supply the colour bar signal and set up E-E mode.
- Connect the oscilloscope to Collector of Q038.
- Adjust the Y signal level to 0.4Vp-p with RV015.
- Set up RECORD mode.
- Playback the recorded section of the tape.
- Connect the oscilloscope to VIDEO OUT.
- Check that the video signal level is 1.0 Vp-p ± 0.05 Vp-p. if the level is outside of this range, repeat Steps iv) through vi) above adjusting with RV015 until the standard value is obtained.

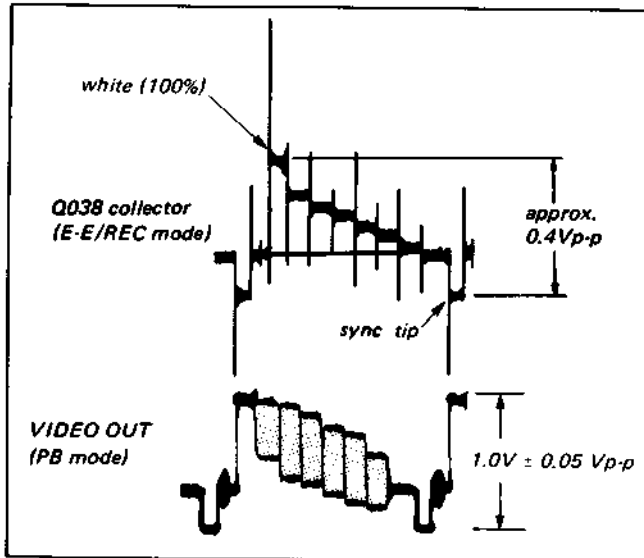


Fig. 5-27. Deviation adjustment

5) Dark Clip and White Clip Adjustment (YC-31 Board)

Mode: E-E
 Signal: None
 Frequency counter: Pin 23 of IC009

[Adjustment method]

- Connect a jumper wire between the base of Q041 and ground.
- Adjust to 2.82MHz ± 0.1MHz with RV012.
- Check that the voltage of the collector of Q038 is 1.5V ± 0.3V dc.
- Remove the jumper wire.
- Connect a jumper wire between the base of Q041 and the 9V line (collector of Q042).
- Adjust to 6.66MHz ± 0.1MHz with RV013.
- Remove the jumper wire.

6) Y Record Current Adjustment (YC-31 Board)

Mode: Record
 Signal: Colour bar
 Oscilloscope: Pin 5 of CN002

[Adjustment method]

- Adjust to 450mV ± 20mVp-p with RV602.

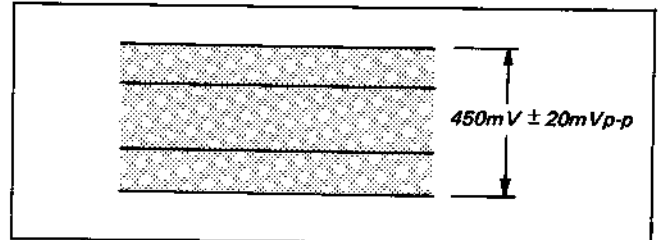


Fig. 5-28. Y record current adjustment

7) Pilot Burst Signal Level Adjustment (YC-31 Board)

Mode: E-E
 Signal: Colour bar
 Oscilloscope: Pin 1 of IC006

[Adjustment method]

- Align the pilot burst signal with the chroma signal level using RV009.

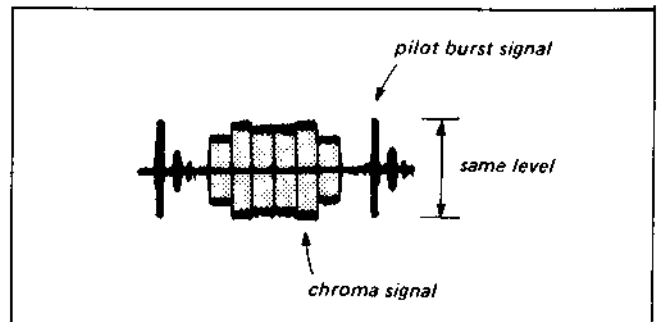


Fig. 5-29. Pilot burst signal level adjustment

8) Chroma Record Current Adjustment (YC-31 Board)

Mode: E-E
 Signal: Colour bar
 Oscilloscope: Pin 7 of CN002

[Adjustment method]

- Adjust to 180mV ± 10mVp-p with RV008.

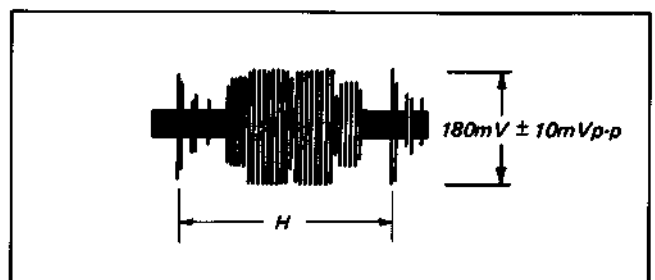



Fig. 5-30. Chroma record current adjustment

5-5. AUDIO SYSTEM ADJUSTMENT (TA-22 Board)

Use a Dynamicron tape for adjustments.

[Connection of Related Equipment]

Note: Set the INPUT SELECT switch to LINE.
Set the TONE switch to HIGH.

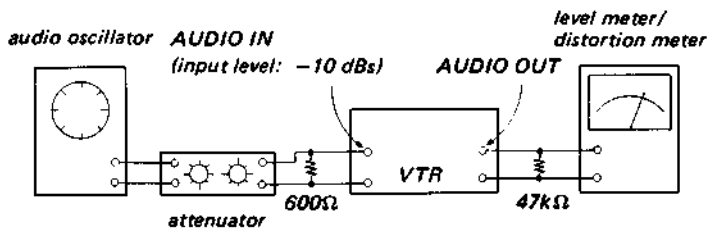

[Adjustment method]

1. ACE head adjustment... See "Mechanical Adjustment"
2. Playback frequency characteristic check
3. Playback output level adjustment
4. Bias oscillator check
5. Record bias adjustment
6. Record level check
7. Overall frequency characteristic check
8. Overall S/N check
9. Overall distortion check

1. ACE Head Adjustment

Refer to "Mechanical Adjustment"

2. Playback Frequency Characteristic Check

- (1) Play back 333 Hz and 5 kHz from the alignment tape and check that the level difference between 333Hz and 5kHz is within 0dB \pm 1dB.

3. Playback Output Level Adjustment

- (1) Play back 333 Hz from the alignment tape and adjust so that the output level is -30 dBs \pm 0.5 dB with RV301.

4. Bias Oscillator Check

- (1) Set the input signal level to zero and set up the RECORD mode.
- (2) Connect a frequency counter to Pin ② of CN303. The reading should be 65kHz \pm 6.5kHz.

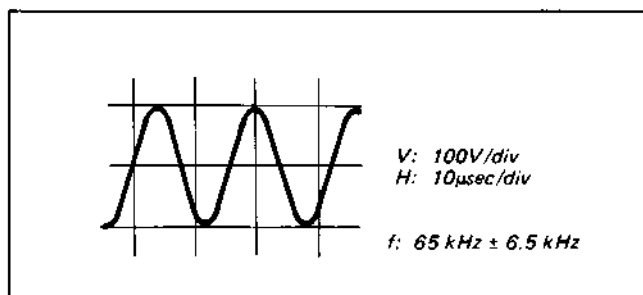


Fig. 5-31. Bias oscillator check

5. Record Bias Adjustment

Check that "Playback frequency characteristic check has been made.

- (1) Connect TP301 and TP306 (GND) with a jumper wire so as to turn off the AGC operation.
- (2) Supply a 333 Hz signal.
- (3) Set up the E-E mode and adjust the oscillator output level so that the level meter reading is -30 dBs.
- (4) Record signals.
- (5) Supply a frequency of 7 kHz and perform Steps (3) and (4) above.
- (6) Play back the recorded section of the tape and check that the output level at 7 kHz is ± 1 dB relative to the output level at 333 Hz. If the level is outside this range, repeat Steps (2) through (5) adjusting with RV331 until the standard is met.
- (7) Remove the jumper wire after making the adjustment.

6. Record Level Check

- (1) Supply a 333Hz signal at -10 dBs.
- (2) Set up the E-E mode.
- (3) Check that the output level is -10 dBs ± 3 dB.
- (4) Record signals.
- (5) Play back the recorded section of the tape and check that the output level is -9 dBs ± 3 dB.

7. Overall Frequency Characteristic Check

- (1) Connect TP301 and TP306 (GND) with a jumper wire so as to turn off the AGC operation.
- (2) Connect a 333 Hz signal.
- (3) Set up the E-E mode and adjust the oscillator output level so that the level meter reading is -30 dBs.
- (4) Record signals.
- (5) Change the frequency to 50 Hz, 100 Hz, 7 kHz and 10 kHz and repeat Steps (3) and (4).
- (6) Play back the recorded section of the tape and verify that the level is within the specification.

Standard values: With reference to the 333 Hz playback output level.

50 Hz	+2.5 -10 dB
100 Hz	+2.5 -3 dB
7 kHz	+2.5 -2.5 dB
10 kHz	+2.5 -6 dB

- (7) If the specified values cannot be attained, perform 5 again. "Record Bias Adjustment".
- (8) Remove the jumper wire after making the adjustment.

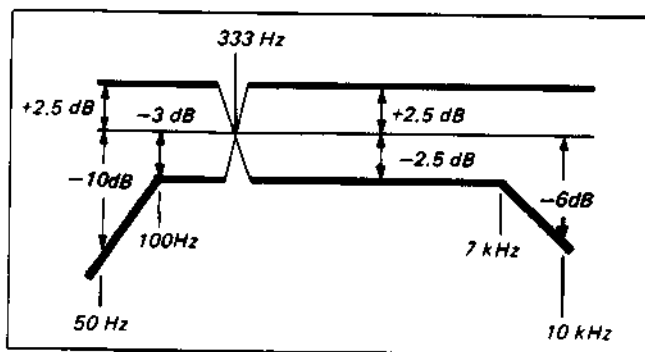


Fig. 5-32. Overall frequency characteristic

8. Overall S/N Check

- (1) Supply a 333 Hz signal at -10 dBs.
- (2) Record signals.
- (3) Set the input signal level to zero and record signals.
- (4) Play back the recorded section of the tape and check that the output level difference is greater than 38 dB.

9. Overall Distortion Check

- (1) Supply a 333 Hz signal at -10 dBs.
- (2) Record signals.
- (3) Play back the recorded section of the tape and verify that the distortion is below 4%.

5-6. TUNER SYSTEM ADJUSTMENT (TA-22 Board)

1) Tuner AGC Adjustment

- (1) Set the DX/LOCAL switch on the rear panel to DX.
- (2) Input RF signals (West germany model: 52dB μ /75 Ω terminated, other models: 55dB μ /75 Ω terminated) from a colour bar generator, etc.
- (3) Connect a digital voltmeter to TP001 (Pin ④ of IC001).
- (4) Adjust RV001 to 7.2V \pm 0.1V dc.

2) AFT Adjustment

- (1) Input RF signals, and press FINE + or FINE - button finely for the best picture quality, while watching the monitor screen.
- (2) Connect a digital voltmeter to pin ⑤ of IC001.
- (3) Adjust T005 to 6V dc.
- (4) Press AFT button to turn on the AFT operation, receive each channel and check to make sure that there is no beat or picture disturbance.

5-7. TIMER SYSTEM ADJUSTMENT (TM-57 Board)

1) Clock Adjustment

- (1) Connect a frequency counter to pin ③ of IC001.
- (2) Adjust oscillation period (T) with TC001 so the value will be as follows.

$$T = (30.51750 + 0.000015 \times C_p) \mu\text{sec} \pm 0.0001 \mu\text{sec}$$

C_p : Probe capacity (PF) of the frequency counter

2) System Clock Adjustment

- (1) Connect a frequency counter to pin ②⑥ of IC001.
- (2) Adjust oscillation frequency (f) to the following value with RV001.

$$f = (2.60 - 0.0041 \times C_p) \text{MHz} \pm 0.05 \text{MHz}$$

C_p : Probe capacity (PF) of the frequency counter

5-8. SECAM VIDEO SYSTEM ALIGNMENT

- Make this adjustment after aligning the PAL video system.
- For this adjustment, use the equipment listed below in conjunction with an alignment tape and SECAM colour bar signals.

[Equipment Required]

- (1) SECAM Colour Monitor TV
- (2) Oscilloscope, Dual-trace, Bandwidth ... more than 10 MHz with delay mode
- (3) SECAM Colour-Bar Generator
- (4) Alignment Tape, Type: KR5-1J, Code No. 8-969-996-03

[Setup for Alignment]

In this alignment, video signals obtained from the pattern generator will be used as alignment signals. Therefore, the video output signals should be within the specifications. Verify video signals by connecting an oscilloscope to VIDEO OUT connector (75Ω terminated). Check that the video signals are flat when the amplitude of the horizontal sync signal is about 0.3 Vp-p, the amplitude of the video portion is about 0.7 Vp-p, and the amplitude of the burst signal is about 0.3 Vp-p. The video signal (colour-bar signal) used in this alignment is shown in Fig. 5-33.

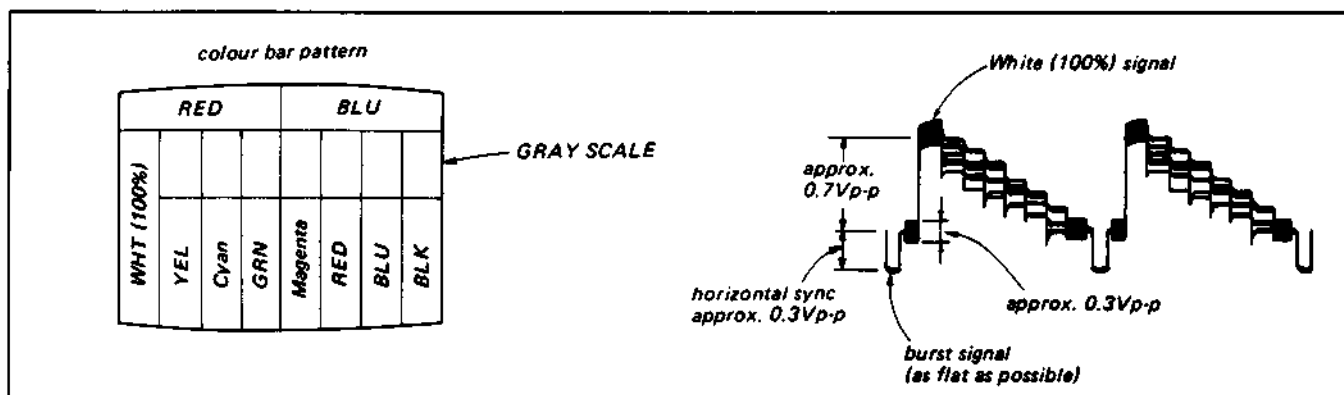


Fig. 5-33. SECAM video (colour bar) signal

[Alignment Tape]

KR5-1J

	Video signal	Audio signal	Playing time	Use for
1.	Colour bars	3 kHz - 5 dB	5 min	General performance, tape speed checks, switching position adjustment.
2.	Monoscope	333 Hz - 25 dB	5 min	Video head dihedral, audio level adjustment.
3.	RF sweep	5 kHz - 25 dB	5 min	Video, audio frequency characteristics, audio azimuth adjustment marker: 1, 2, 3.58, 4.5, 5.2 MHz
4.	Tracking 1 MHz (CH-A) *1 (Channel B is inserted in every 3 frames.)	1 kHz - 5 dB *2 (Signal is dropped out in the positions where channel B is inserted.)	5 min	Tracking, Audio height adjustments CTL Position check (Check if *1 and *2 are the same position.)

[Colour Bar Signal]

The 100% colour bar signal recorded on the Alignment tape is shown in Fig. 5-34.

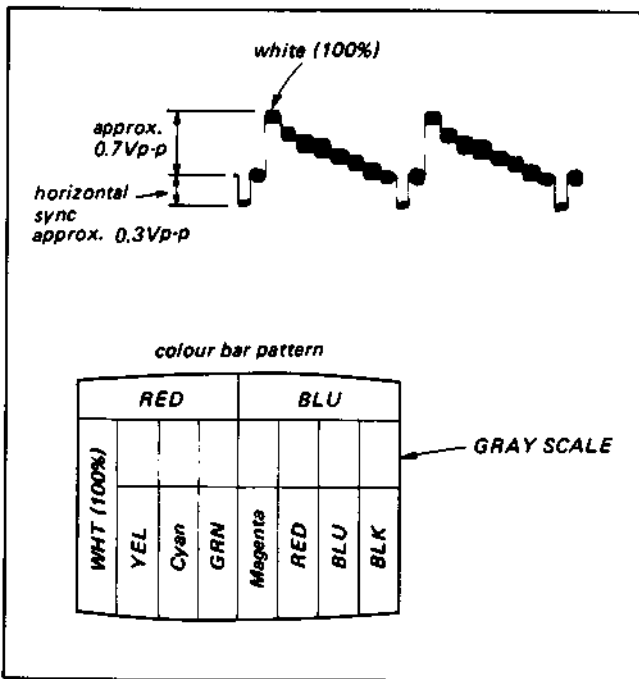


Fig. 5-34. Colour bar signal recorded on the alignment tape

1) Bell Filter Adjustment (YC-31 Board)

Mode: E-E
Signal: SECAM colour bar
Oscilloscope: Pin ⑦ of CN002

[Adjustment method]

- i) Adjust LV003 until the waveform is flat.

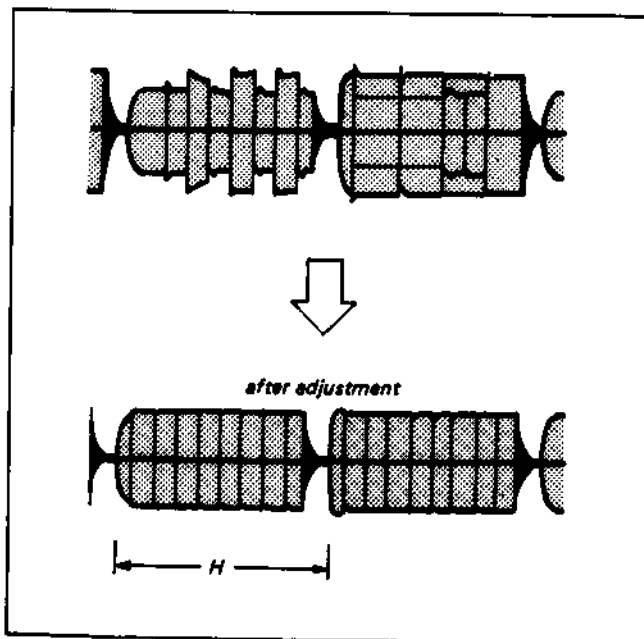


Fig. 5-35. Bell filter adjustment

2) SECAM ACK Adjustment (YC-31 Board)

Mode: E-E
Signal: SECAM colour bar
Oscilloscope: Pin ⑨ of IC002

[Adjustment method]

- i) Adjust LV001 until the amplitude is a maximum.
- ii) Adjust RV001 to $4.0V \pm 0.2Vp-p$.

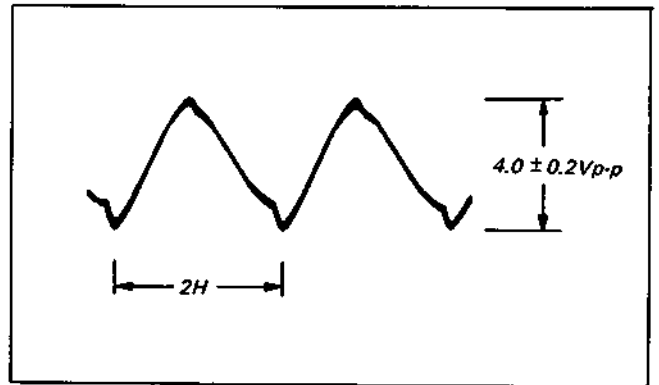


Fig. 5-36. SECAM ACK adjustment


3) Counter Bell Filter Adjustment (YC-31 Board)

Mode: Self-recording and playback
Signal: SECAM colour bar
Adjust while observing the monitor TV screen.


[Adjustment method]

- i) Record SECAM colour bar signals.
- ii) Playback the recorded signals.
- iii) While observing the monitor TV screen, adjust LV002 until the border between the red and blue areas is at its cleanest (minimum beats).


YC-31 BOARD (CONDUCTOR SIDE)

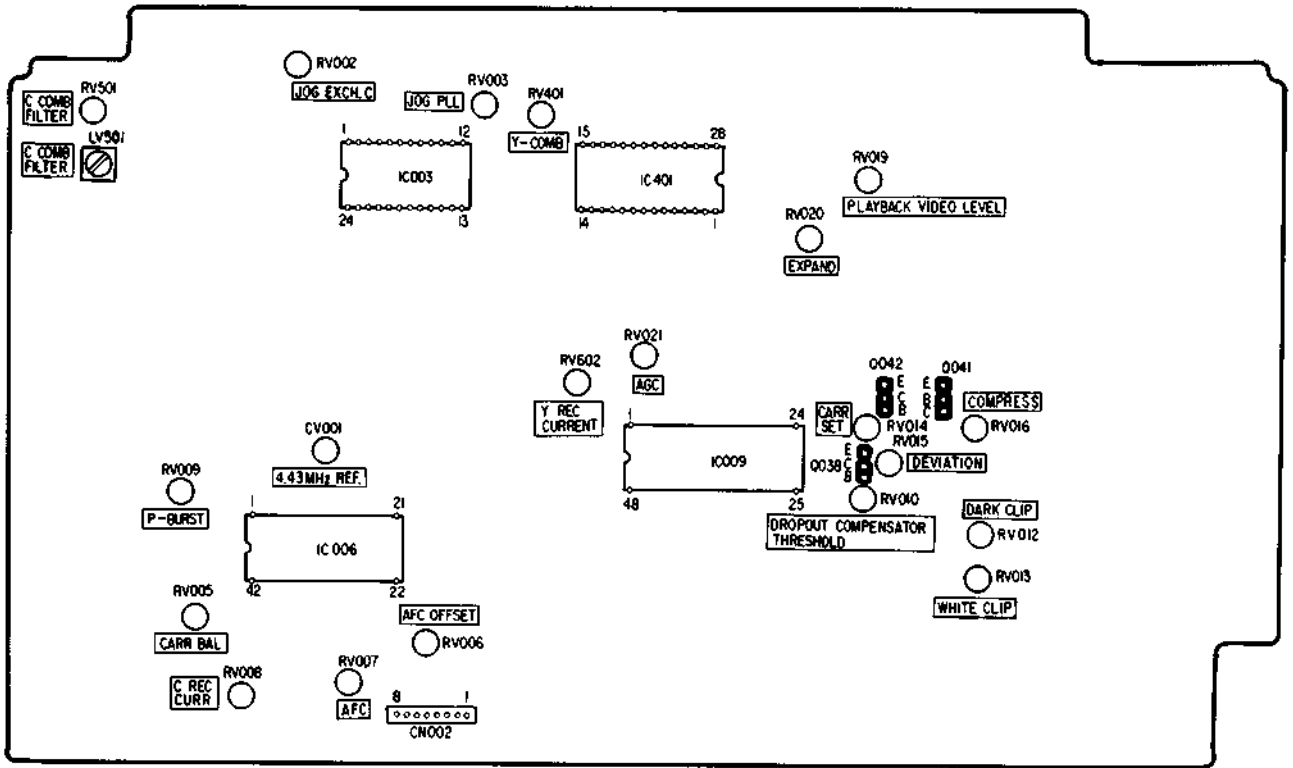


SS-34 BOARD (COMPONENT SIDE)

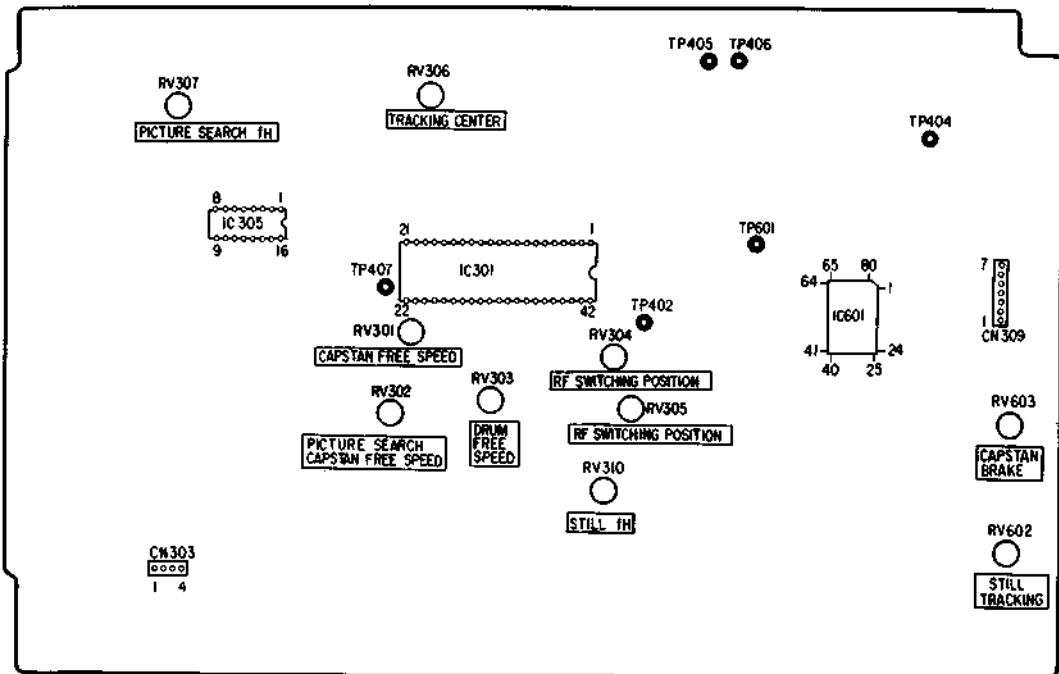


TA-22 BOARD (COMPONENT SIDE)

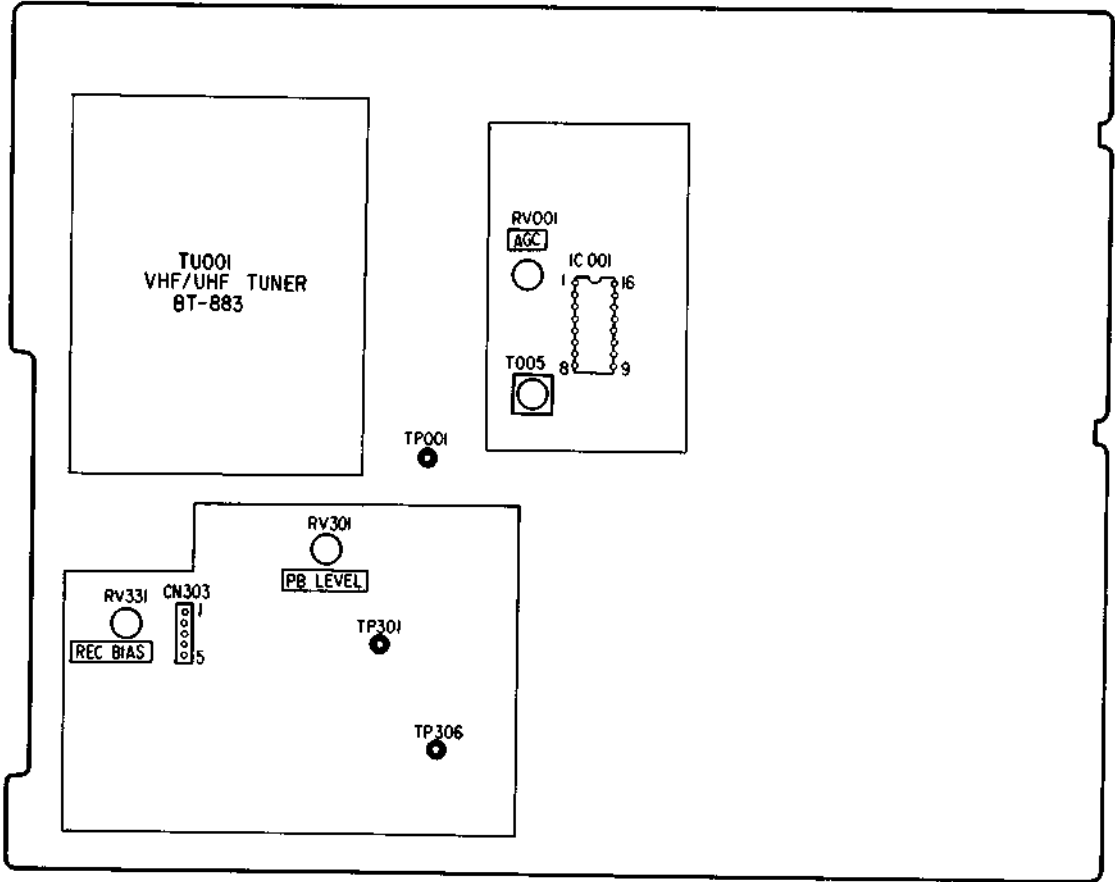

RP-20 BOARD (COMPONENT SIDE)

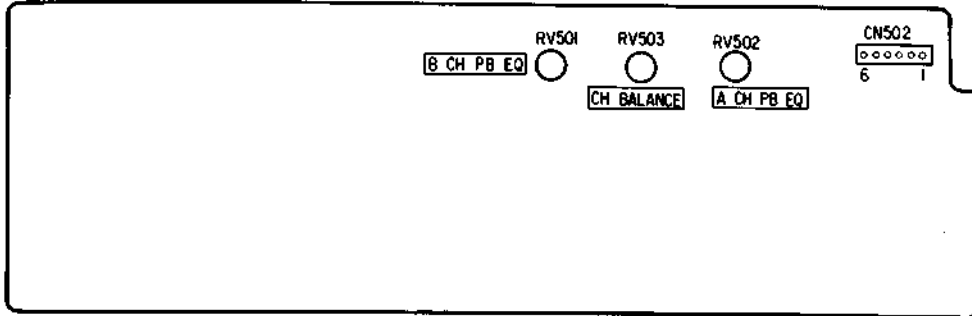

TM-57 BOARD (COMPONENT SIDE)

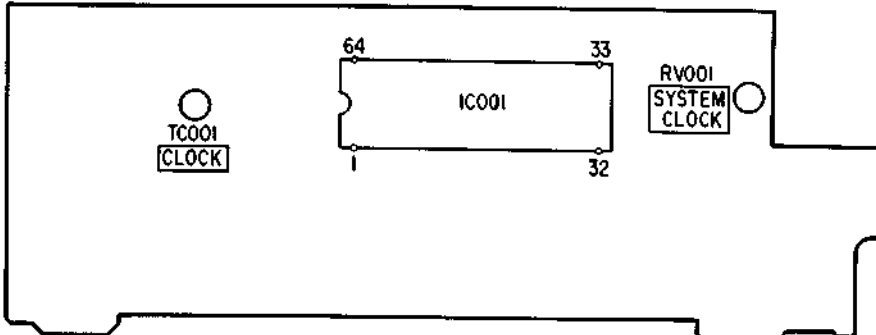

RMT-231


SERVICE MANUAL




SPECIFICATIONS

Remote Commander RMT-231	
Remote control system	Infrared control
Power requirements	3V DC, 2 IEC designation R6 batteries (size AA)
Dimensions	Approx. 45 × 20 × 175 mm (w/h/d) (1 ³ / ₄ × 3 ¹ / ₄ × 7 inches)
Weight	incl. projecting parts and controls Approx. 105 g (3.7 oz) incl. batteries


Disassembly

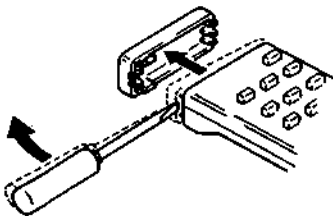

- ① Remove the front panel by prying up with a screwdriver.

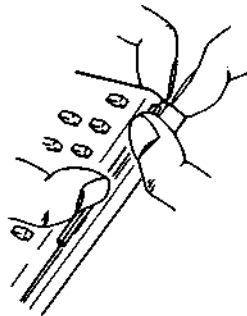

- ② While pulling the lower case outward, lift the upper case and free the claw.

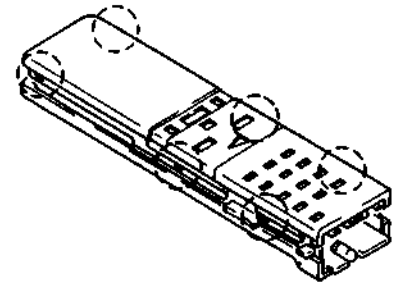

- ③ Free all 6 claws similarly.


REMOTE COMMANDER
SONY®

1. REMOTE CONTROL OPERATION


You can control almost all the functions of this video cassette recorder from your armchair using the supplied Remote Commander.

BATTERY INSERTION

- 1 Open the lid.

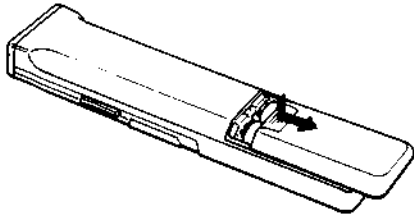

- 2 Insert two IEC designation R6 batteries with correct polarity.

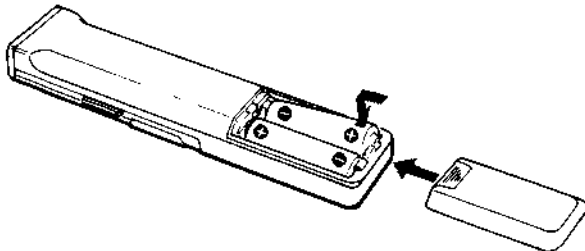

- 3 Close the lid firmly.

Battery life


In normal operation, batteries will last for about six months. If the range of the Remote Commander becomes noticeably short, replace the batteries with new ones. When the batteries are exhausted, the remote function indicator will not light when the buttons on the Commander are pressed.

If the Commander is not to be used for a long period of time, remove the batteries to avoid possible damage from battery leakage.

Notes

- There should be no obstacles between the Commander and the REMOTE SENSOR of the recorder.
- The shorter the distance between the Commander and the recorder, the wider the angle within which the recorder can be controlled.

OPERATION

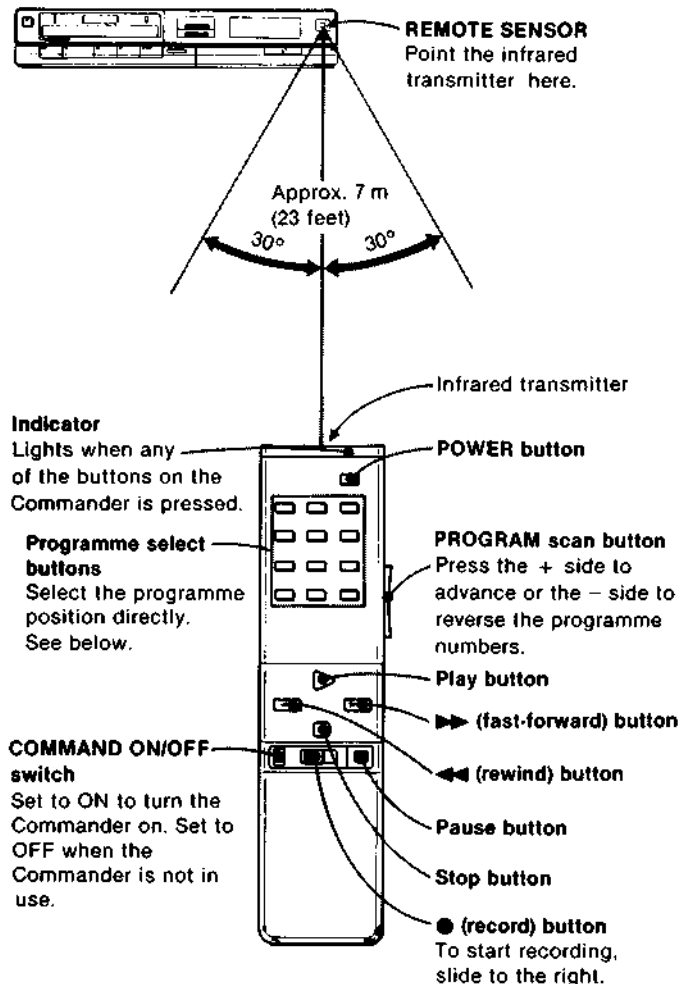

How to press the programme select buttons

For programmes 1 through 9, press the corresponding single-digit button.

For 10 through 19, press "1-" for the tens-digit and then the corresponding single-digit button.


For 20 through 29, press "2-" and then the corresponding single-digit button.

For 30, press "0".


● If you do not press a single-digit button within several seconds after pressing "1-" or "2-", the previous programme position will be recalled.

2. PRINTED WIRING BOARDS
- Conductor Side -

B BOARD

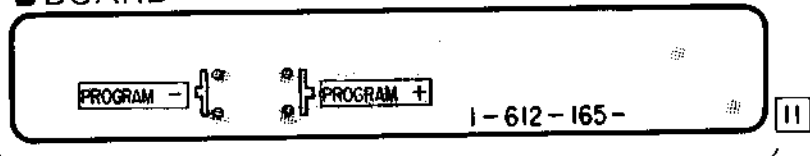

KA BOARD

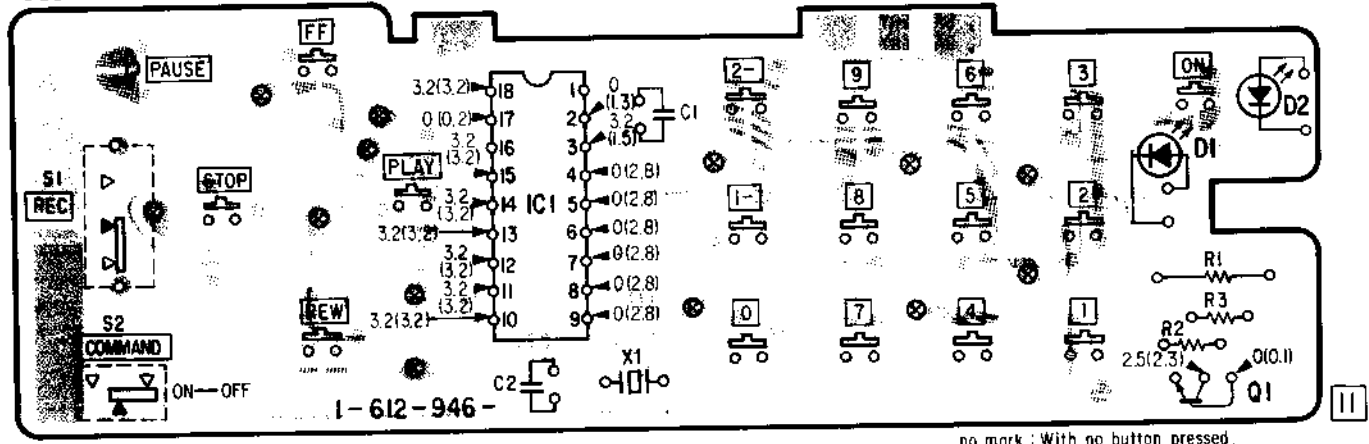


no mark : With no button pressed.
() : With the FF button pressed.

- Note:
- : indicates a lead wire mounted on the component side.
 - : indicates a lead wire mounted on the printed side.
 - ⊗ : Through hole.
 - : soldering side
 - : B+ pattern
 - : carbon pattern

When indicating parts by reference number, please include the board name.

2. SCHEMATIC DIAGRAM

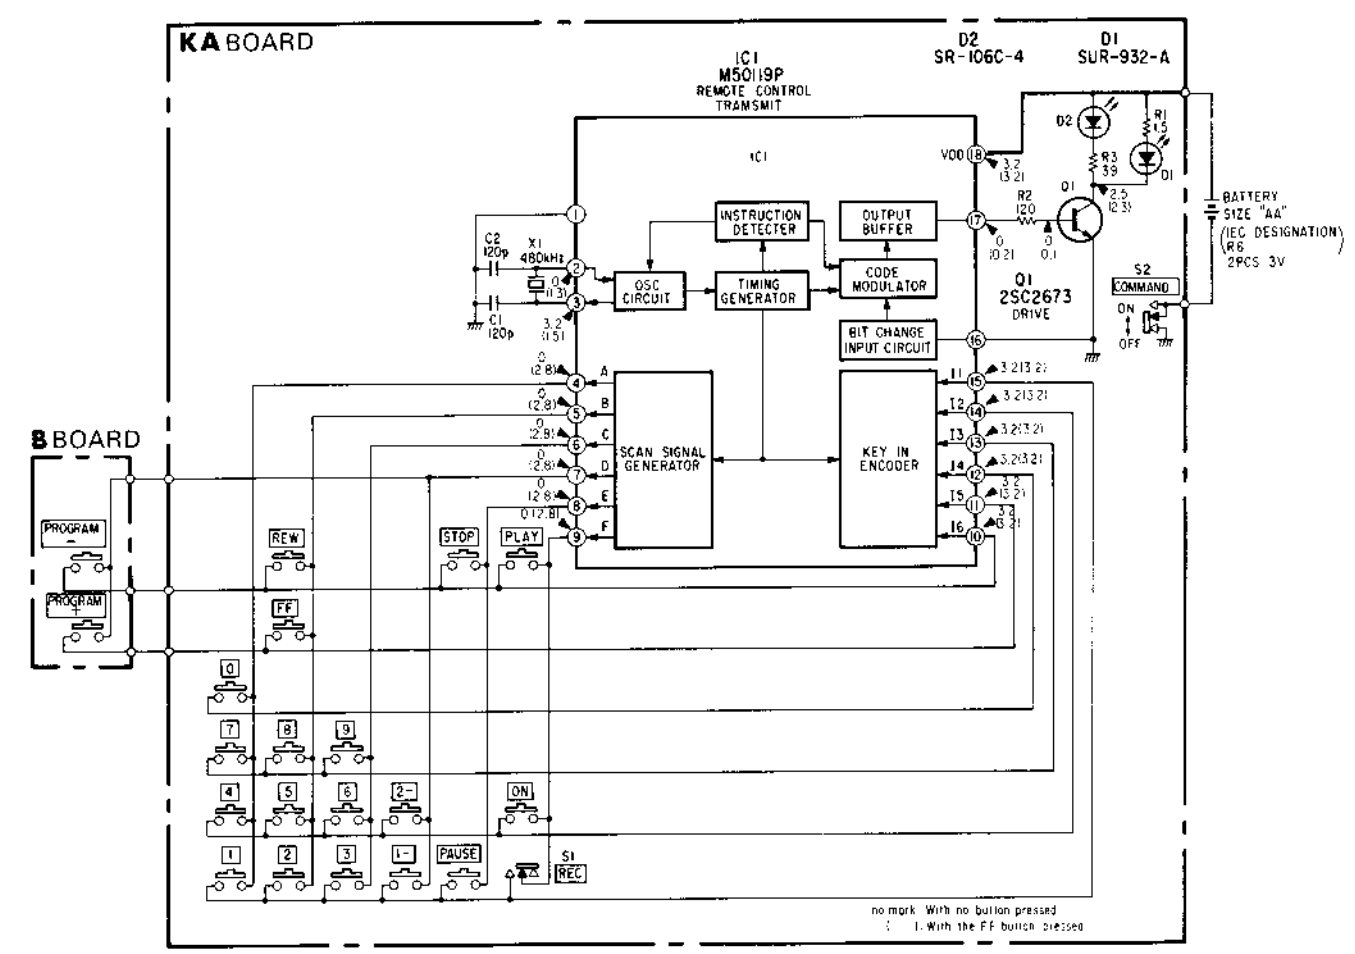


- Note:
- All resistors are in ohms, 1/6W unless otherwise noted.
 - All capacitors are in μF (μpF) unless otherwise noted.
 - 50V or less are not indicated except for electrolytic capacitors.
 - : B+ bus.
 - The voltage value is measured using a digital tester (10M Ω).


When indicating parts by reference number, please include the board name.

SEMICONDUCTORS


M50119P

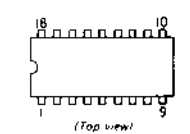


2SC2673

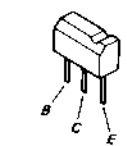

SLR932A

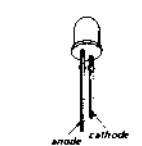


SR106C

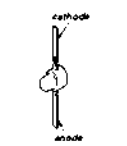

4. EXPLODED VIEW

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.

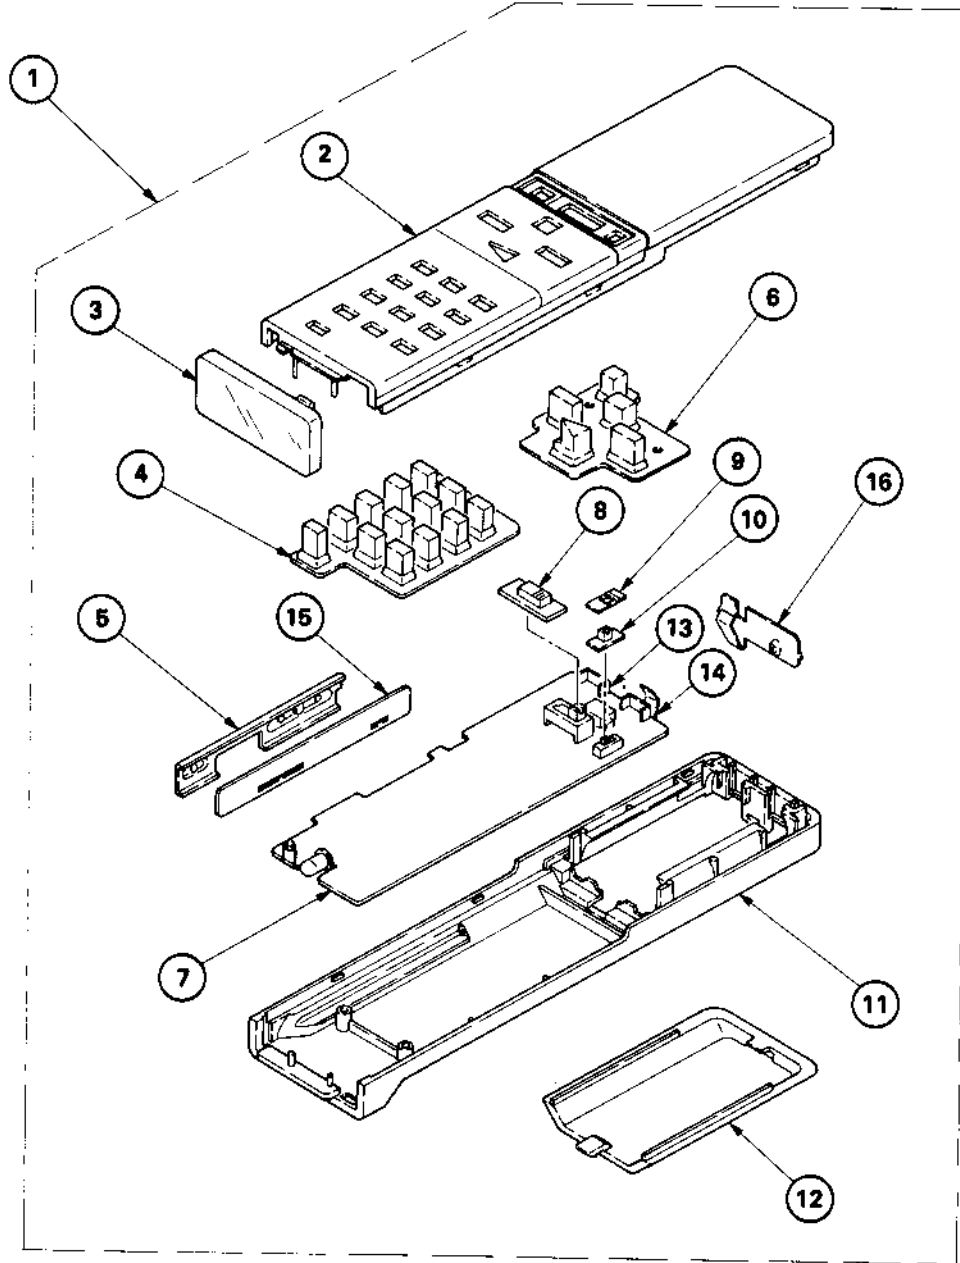

No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
1	A-6765-566-A	COMMANDER ASSY (RMT-231/SILVER)	2-16	8	2-387-101-01	BUTTON, RECORDING	
	A-6765-639-A	COMMANDER ASSY (RMT-231/GRAY)	2-16	9	2-387-113-11	PLATE, COLOR	
2	2-383-130-12	CASE (UPPER), COMMANDER (SILVER)		10	2-383-127-01	BUTTON, SLIDE	
	2-383-130-22	CASE (UPPER), COMMANDER (GRAY)		11	2-387-123-01	CASE (LOWER), COMMANDER	
3	2-387-107-01	PANEL, COMMANDER (FRONT)		12	2-387-105-01	COVER, BATTERY	
4	2-383-128-01	RUBBER (A), CONTACT		13	2-387-104-01	TERMINAL (B), BATTERY	
5	2-389-303-01	RUBBER (B), CONTACT		14	2-387-103-01	TERMINAL (A), BATTERY	
6	2-383-129-01	RUBBER (C), CONTACT		15	*1-612-165-11	B BOARD	
7	*1-612-946-11	KA BOARD		16	4-350-925-00	TERMINAL (C), BATTERY	

5. ELECTRICAL PARTS LIST

NOTE:

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- All resistors are in ohms
- F : nonflammable
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

CAPACITORS

- MF : μ F, PF : μ μ F


COILS

- MMH : mH, UH : μ H

Ref.No	Part No.	Description	Remark
	*1-612-946-11	KA BOARD	*****
	2-387-103-01	TERMINAL (A), BATTERY	
	2-387-104-01	TERMINAL (B), BATTERY	
CAPACITOR			
C1	1-102-107-00	CERAMIC 120PF 10% 50V	
C2	1-102-107-00	CERAMIC 120PF 10% 50V	
DIODE			
D1	8-719-912-39	DIODE SLR-932A	
D2	8-719-100-06	DIODE SR106C	
IC			
IC1	8-759-600-07	IC M50119P	
TRANSISTOR			
Q1	8-729-967-32	TRANSISTOR 2SC2673	
RESISTOR			
R1	1-246-405-25	CARBON 1.5 5% 1/4W	
R2	1-246-772-00	CARBON 120 5% 1/8W	
R3	1-246-766-00	CARBON 39 5% 1/8W	
SWITCH			
S1	1-554-364-00	SWITCH, SLIDE	
S2	1-553-977-00	SWITCH, SLIDE	
CRYSTAL			
X1	1-527-476-00	OSCILLATOR, CERAMIC	

	*1-612-165-11	B BOARD	*****

OPERATION MANUAL

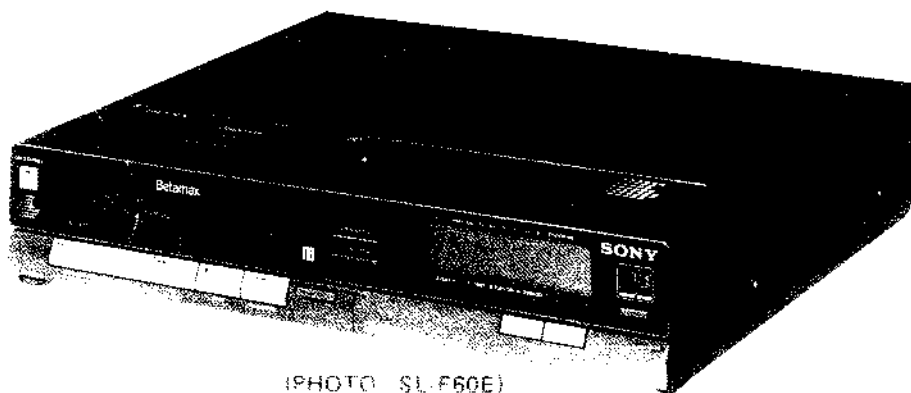

(PHOTO SL-F60E)

*AEP Model
UK Model
E Model
West Germany Model
Australian Model
South African Model
ME Model*

April 1985

711B2 CHASSIS

APPLICABLE MODELS

SL-F60E
SL-F60L
SL-F60M
SL-F60EC
SL-F60P
SL-F60S
SL-F60SH
SL-F60T
SL-F60V
SL-F60W
SL-F60X
SL-F60Y
SL-F60Z



MICROFILM

Consumer
VIDEO



VIDEO CASSETTE RECORDER
SONY

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1. VIDEO CIRCUIT					
1-1.	YC-31 Board	6	4-3.	UNSWD 6V and UNSWD 5V Systems	43
1-1-1.	Y Recording System	6	4-4.	UNSWD +45V, UNSWD -45V and UNSWD -30V Systems	43
1-1-2.	Y Playback System	7	4-5.	4.8V AC Systems	43
1-1-3.	Chroma REC System (PAL)	9	4-6.	UNSWD 12V, SWD 12V, and SWD 9V Systems Power Supply (SL-F30E(E), SL-F60E(E), SL-T25ME)	43
1-1-4.	Chroma REC System (SECAM)	10	4-7.	UNSWD 6V System, 5V System	44
1-1-5.	Chroma PB System (PAL)	11	4-8.	UNSWD 39V System, UNSWD -39V System	44
1-1-6.	Chroma PB System (SECAM)	13	4-9.	AC 4.8V System	44
1-1-7.	Chroma Recording Current Muting Circuit (Only for PAL Model)	13	4-10.	SL-F30UB Protective Circuit	44
1-1-8.	AFC, APC System (PAL)	13	5. AUDIO CIRCUIT		
1-1-9.	AFC System (SECAM)	14	5-1.	E-E System	45
1-2.	RP-20 Board	15	5-2.	Recording System	45
1-2-1.	Video Signal Recording System	15	5-3.	Playback System	45
1-2-2.	Video Signal Playback System	16	6. TIMER BLOCK		
1-3.	Circuit for Noiseless Still Playback (SL-F60 Series)	16	6-1.	General	48
1-3-1.	Playback Head Selection Circuit (RP-20 Board)	16	6-2.	Clock Oscillation Circuit	48
1-3-2.	Drop Out Compensation Circuit (YC-31 Board)	17	6-3.	Reset Circuit	48
1-3-3.	½FH Shift Return Circuit (YC-31 Board)	17	6-4.	Power Failure Detection Circuit	49
1-3-4.	APC and AFC Circuits (YC-31 Board)	18	6-5.	Other Circuits	50
2. SYSTEM CONTROL CIRCUIT			7. TUNER CIRCUIT		
2-1.	Configuration	19	7-1.	Signal System	51
2-2.	Loading Control	21	7-2.	Tuning System	51
2-3.	Mode Transition Change	24	7-3.	Other Circuits	52
2-4.	Trouble Detection Control	25	8. MECHANICAL DESCRIPTION		
2-5.	Noiseless Still Playback (SL-F60 Series Only)	26	8-1.	Cassette Loading	53
3. SERVO CIRCUIT			8-2.	Tape Threading	57
3-1.	Drum Servo System	31	8-3.	Tape Path	60
3-1-1.	Drum Speed System	31	8-4.	Play Mode	63
3-1-2.	Drum Phase System	32	8-5.	FF Mode	66
3-1-3.	½FH Correction Circuit	35	8-6.	REW Mode	68
3-2.	Capstan Servo System	36	8-7.	Record Mode	71
3-2-1.	Capstan Speed System	36	8-8.	Picture Search (CUE)	74
3-2-2.	Capstan Phase System	38	8-9.	Picture Search (REVIEW)	76
3-3.	Reel Motor Control Circuit	41	8-10.	FR Picture Search (CUE)	78
4. POWER SUPPLY CIRCUIT			8-11.	FR Picture Research (REVIEW)	80
4-1.	SWD 12V and SWD 9V System	43	8-12.	Pause (PLAY) Mode	83
4-2.	UNSWD 12V System	43	8-13.	Pause (RECORD) Mode	87
			8-14.	Eject	91
			8-15.	Mode Change Chart	95

1. VIDEO CIRCUIT

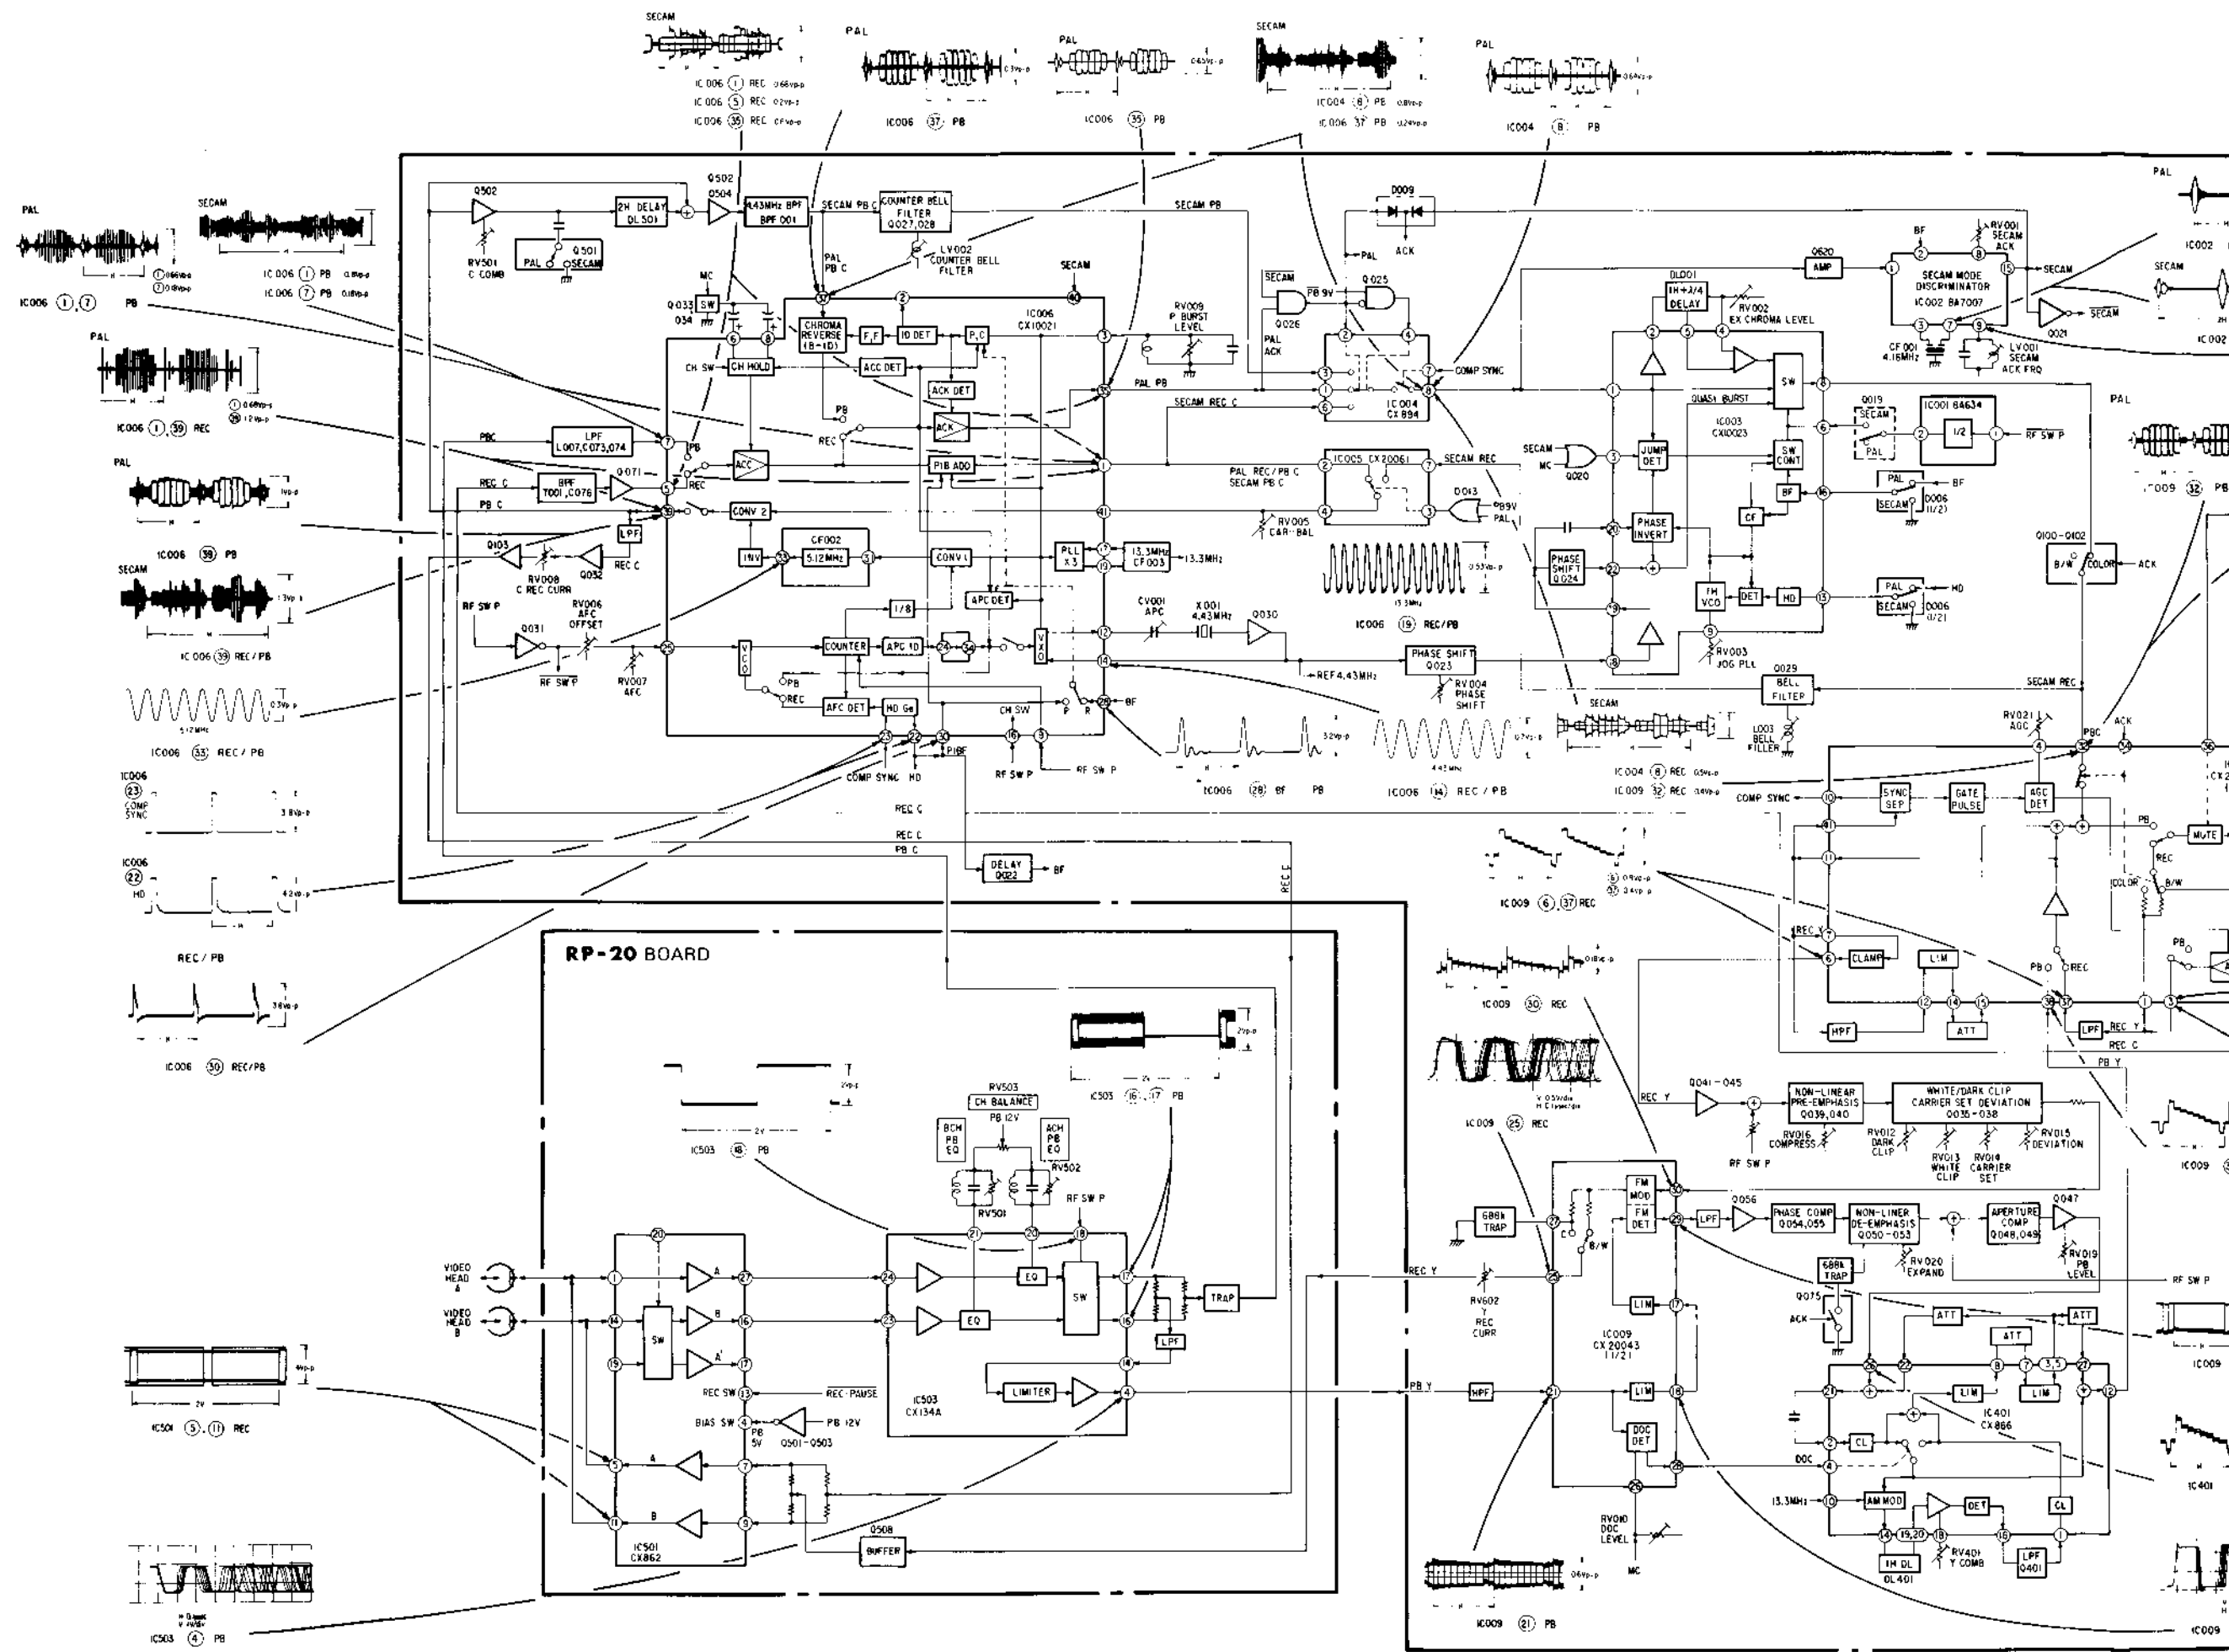


Fig. 1-1 Video Circuit Block Diagram (SL-F30PS)

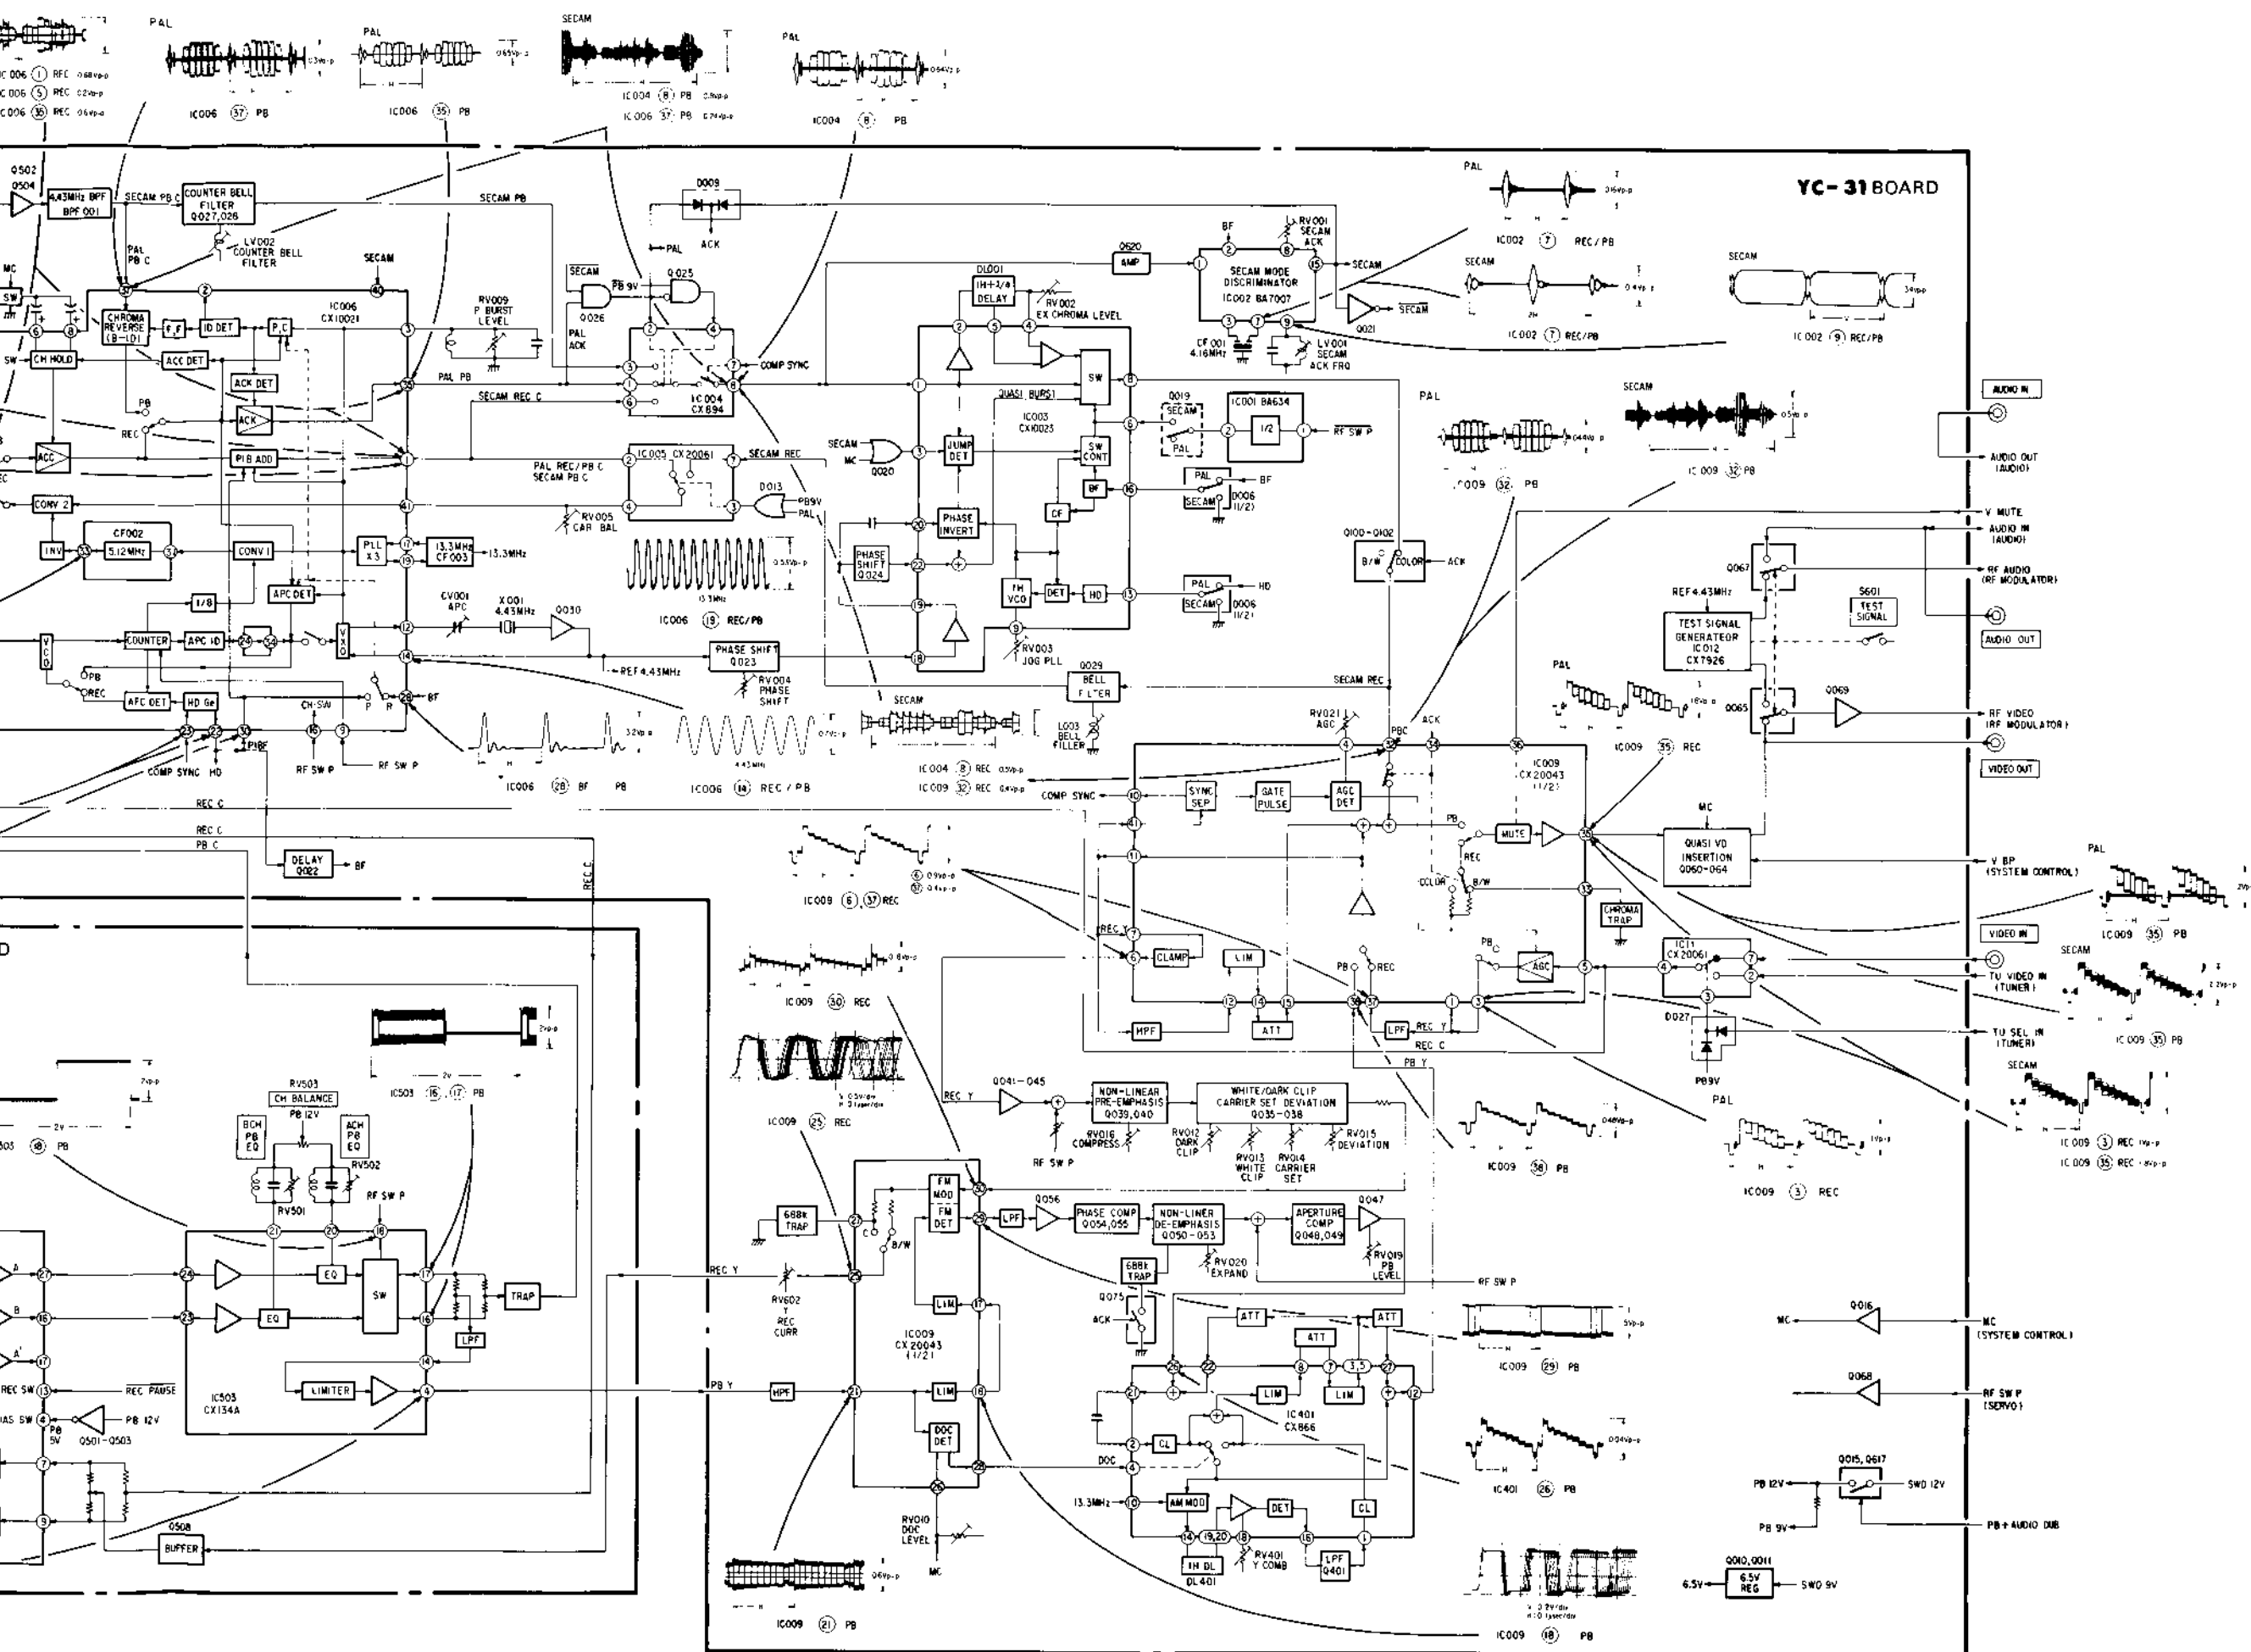


Fig. 1-1 Video Circuit Block Diagram (SL-F30PS)

The operation of the SL-F30/F60/T25 video circuit is generally the same as that of the SL-C30 series circuit. Some chips of the latter are integrated into single chips, and some discrete circuits are replaced by ICs.

	SL-C30	SL-F30/F60/T25
AGC, SYNC SEP	CX867	CX20043
NOISE CANCELL, Y/C MIX, MUTING	CX868	
MOD/DEMODO, DOC	CX864	
ACC, APC, ACK	CX869	CX10021
FREQUENCY CONVERTER, VCO, COUNTER	CX882	
COUNTER	CX7945	
AFDR, VCO or VXO	CX20008, CX870A	
JOG CHROMA, 1H EXCHANGE	discret	CX10023
VIDEO REC/PB AMP	CX862, CX134A	CX862, CX134A

Table 1-1

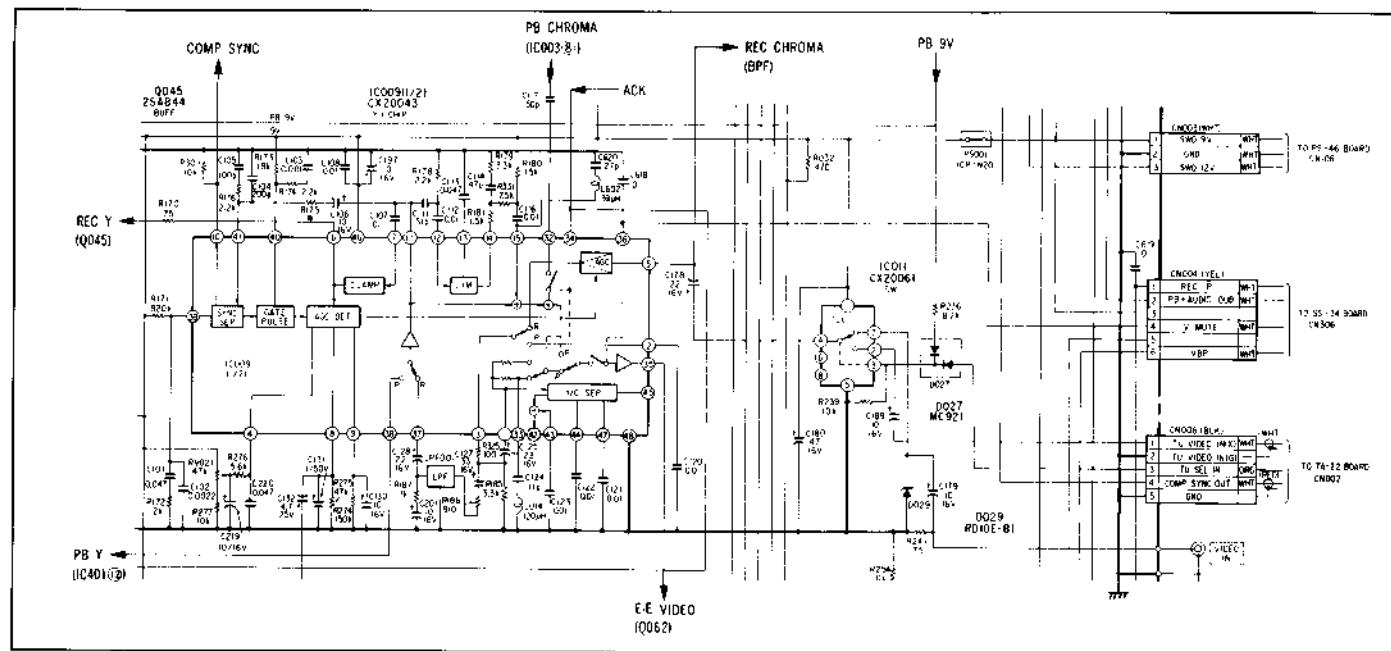


Fig. 1-2 Input Select, AGC, and Sync Separation Circuit Diagram

is further divided into two parts, one part being branched to the sync separation circuit through pin ④, and the other part being reinput through pin ⑦ for sync tip clamping and then for outputting to the pre-emphasis circuit from pin ⑥. This sync tip clamping is designed to fix the sync tip frequency of the Y-FM signals by fixing the sync tip level of the Y signals input to the pre-emphasis circuit.

The signal input to the pre-emphasis circuit flows through Q045, Q042, Q041 in this sequence and is shifted by $\frac{1}{2}f_H$ by RF SW pulse signal (PG signal). Then, the signal is given pre-emphasis non-linearly by Q040, and input to the base

1-1. YC-31 BOARD

1-1-1. Y Recording System

The video signals input to the LINE IN terminal are input to IC011 at pin ⑦, and output at pin ④. In the IC, the input video signals are switched over with the tuner video signals input at pin ②, by the TUNER SELECT +PB signal. The signals output from pin ④ of IC011 are divided into two parts, one part being reinput to pin ⑤ of chroma processing IC006 via the band pass filter to become recording chroma signals, and the other part being input to pin ⑤ of IC009 for AGC processing and subsequent outputting from pin ③.

The signals output from pin ③ of IC009 are divided into two parts, one part being reinput to IC009 through pin ①, and for outputting to the video output circuit via the REC/PB select switch for use as the video signals for the E-E system, and the other part being reinput to IC009 through pin ③ after the elimination of the chroma signals through low pass filter (LPF001), for outputting as the recording Y signals from pin ① via REC/PB select switch. This signal

of Q038. RV016 serves to set the signal compression by setting the bias voltage applied to D019 and D020 via Q039.

The signal input to the Q038 base is input to IC009 through pin ⑩ from the Q038 collector, and current-drives the FM modulator in IC009.

RV015 is used to set the frequency deviation, RV014 the sync tip carrier frequency, RV012 the dark clip level, and RV013 the white clip level.

The signal frequency-modulated in IC009 (Y-FM signals) is output from pin ⑬ to the RP20 board via RV602.

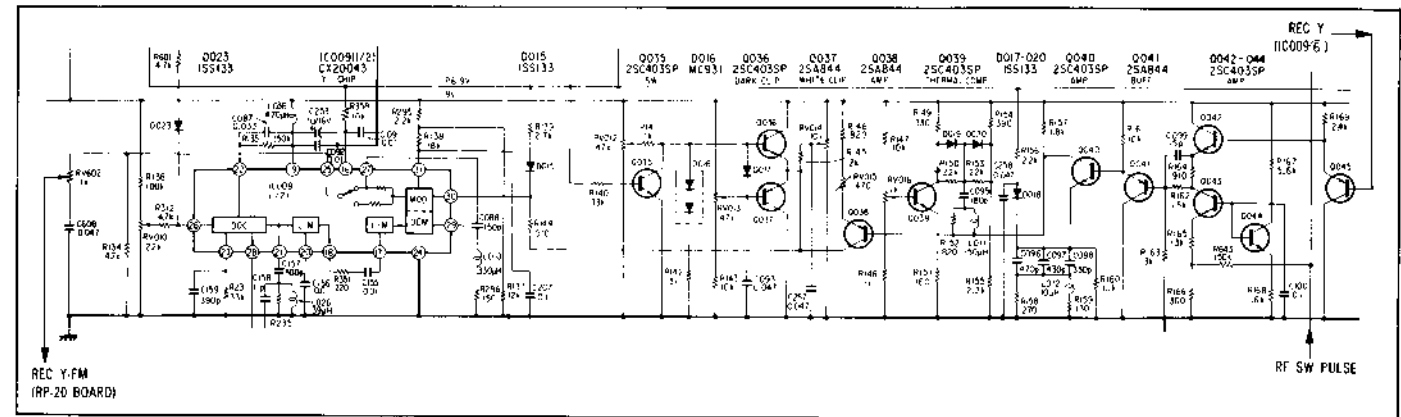


Fig. 1-3 PRE-EMPHASIS and FM Modulation Circuit Diagram

1-1-2. Y Playback System

The Y-FM signal amplified by the RP-20 board is input to IC009 through pin ⑪, and is output through pin ⑮ via a limiter and then, reinput through pin ⑦. Then, the signal is input to the FM demodulator via a limiter, and is output from pin ⑲ as Y signals. The Y signal flows through the low-pass filter consisting of L021 through L023, C144 through C147, and Q056, and enter the equalizer circuit consisting of Q054 and Q055, where the phase deformation caused by the low-pass filter is corrected. The L and C connected to the collector of Q053 are a 4.43MHz trap that operates during color playback.

Subsequently, the Y signal enter the de-emphasis circuit, where it is amplified by Q053 and Q052, and then, de-emphasized non-linearly by Q051. RV020 sets the bias voltage to be applied to D021 and D022 via Q050, to set the expand quantity of the Y signal. To the collector of Q051, the RF SW PULSE signal voltage divided by R635 and R205 is applied to cancel the field-by-field DC level fluctuation caused by $\frac{1}{2}f_H$ shift for recording. The signal is further aperture compensated by Q048 and Q049, and is input to IC401 through pin ⑳ via Q047. RV019 is for setting the playback Y signal level.

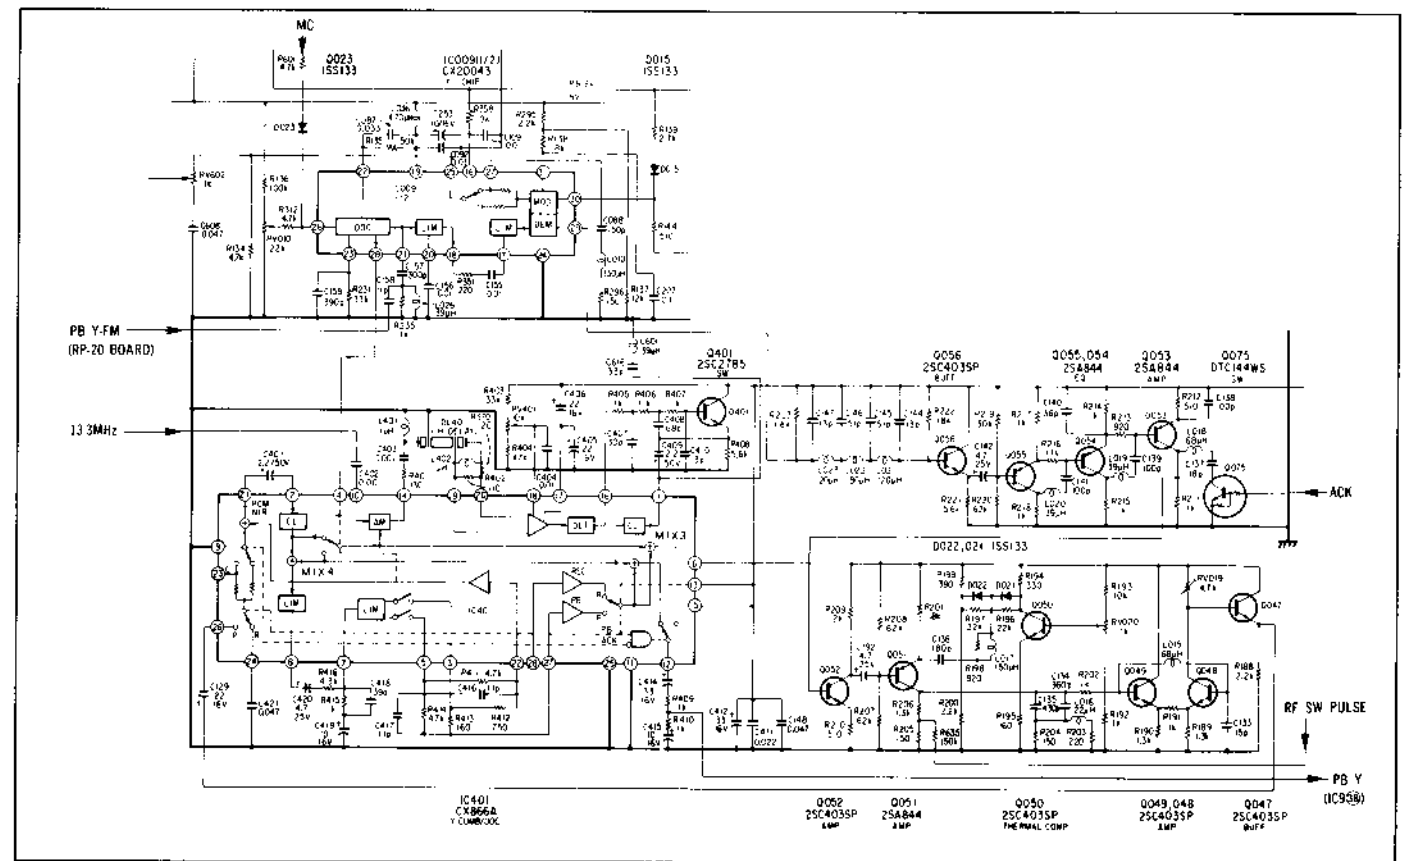


Fig. 1-4 FM De-Modulation, De-Emphasis and Y-COMB Filter Circuit Diagram

IC401 con-
sation circ
istics are
compensat
Y signal in
C30 series
from the
noise can
The Y sig
from pin
Then, it is
the subtra
divided in
switch. On
subtraction
an AM sig
at pin ⑩
AM signal
to pins ⑫
circuit, the
filtered by

PB Y
(IC401)

The output
through pi
input to t
ponent fr
across pin
component
passed thro
⑬, and

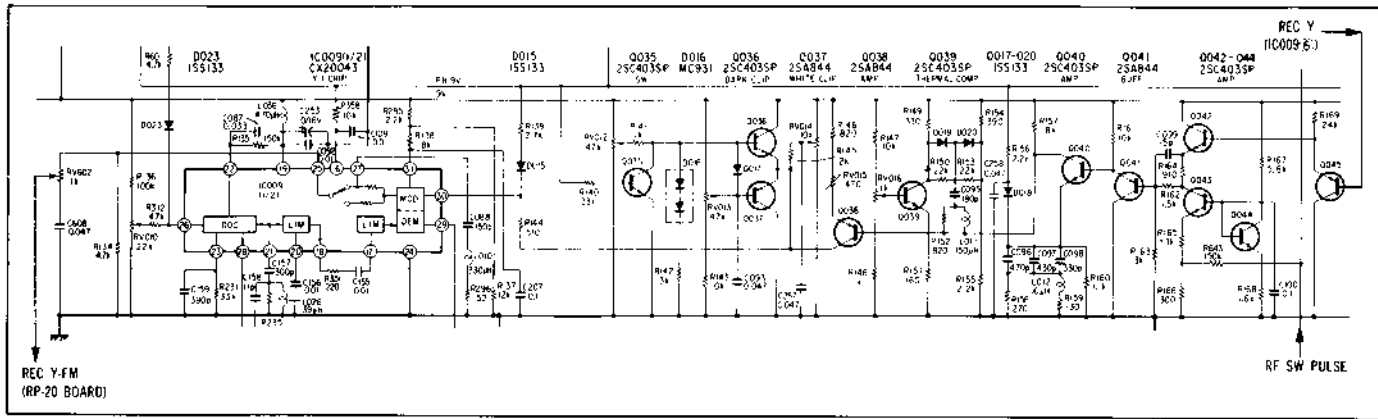


Fig. 1-3 PRE-EMPHASIS and FM Modulation Circuit Diagram

1-1-2. Y Playback System

The Y-FM signal amplified by the RP-20 board is input to IC009 through pin 21, and is output through pin 18 via a limiter and then, reinput through pin 17. Then, the signal is input to the FM demodulator via a limiter, and is output from pin 29 as Y signals. The Y signal flows through the low-pass filter consisting of L021 through L023, C144 through C147, and Q056, and enter the equalizer circuit consisting of Q054 and Q055, where the phase deformation caused by the low-pass filter is corrected. The L and C connected to the collector of Q053 are a 4.43MHz trap that operates during color playback.

Subsequently, the Y signal enter the de-emphasis circuit, where it is amplified by Q053 and Q052, and then, de-emphasized non-linearly by Q051. RV020 sets the bias voltage to be applied to D021 and D022 via Q050, to set the expand quantity of the Y signal. To the collector of Q051, the RF SW PULSE signal voltage divided by R635 and R205 is applied to cancel the field-by-field DC level fluctuation caused by 1/2f_H shift for recording. The signal is further aperture compensated by Q048 and Q049, and is input to IC401 through pin 26 via Q047. RV019 is for setting the playback Y signal level.

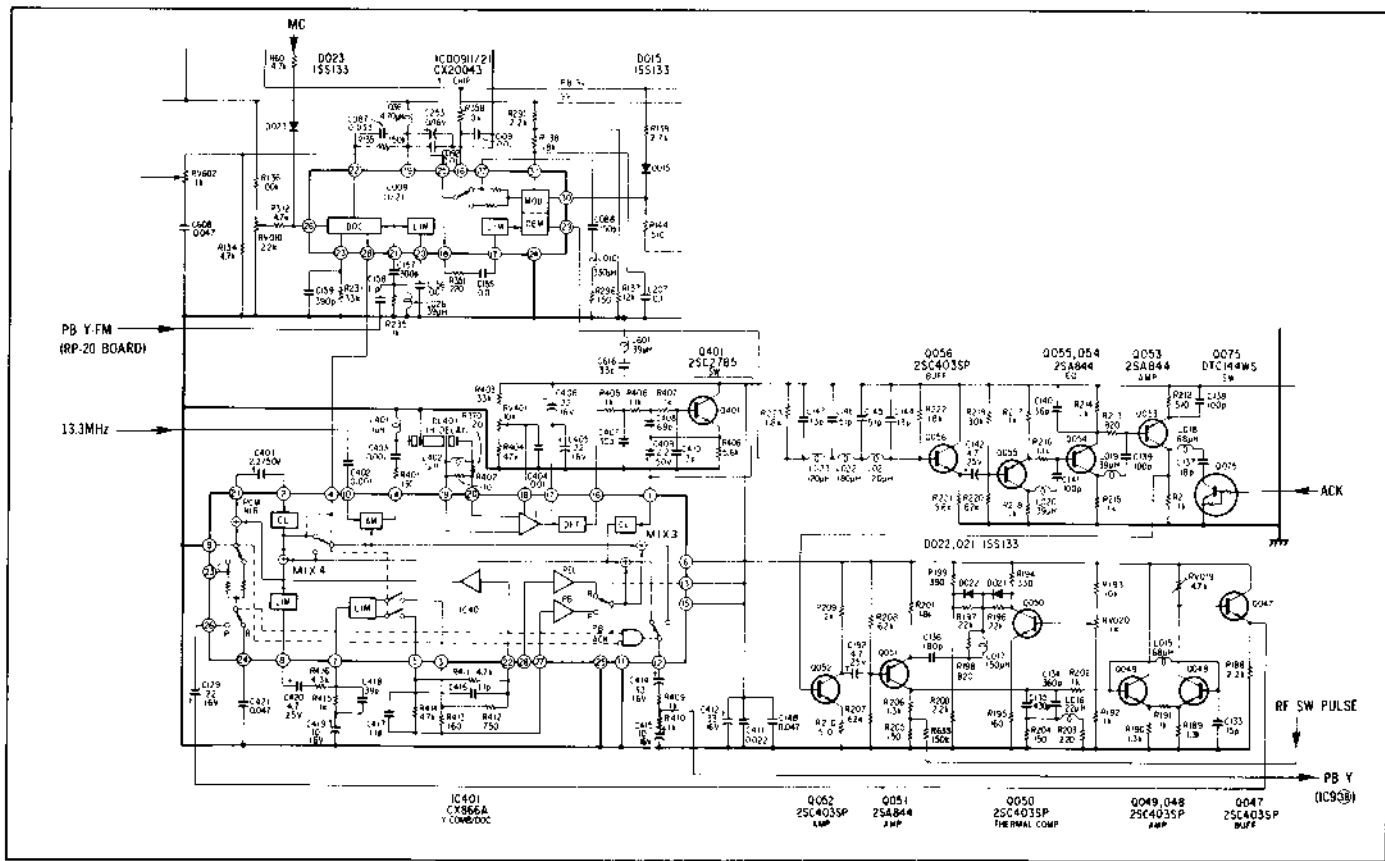


Fig. 1-4 FM De-Modulation, De-Emphasis and Y-COMB Filter Circuit Diagram

IC401 contains a Y-COMB filter and a dropout compensation circuit. Here, the Y signal line correlation characteristics are utilized to cancel noise, cancel crosstalk, and compensate for dropout. While noise is canceled from the Y signal immediately after FM demodulation with the SL-C30 series, noise is cancelled in the SL-F30/F60/T25 from the perfect Y signals after de-emphasis, for better noise cancelling effect at the contour lines of the picture. The Y signal input to IC401 at pin 26 is output once from pin 21, and reinput through pin 2, and clamped. Then, it is divided into two parts, with one part input to the subtraction circuit (MIX4), and the other further divided into two parts after passing through the DOC switch. One part is the main signal part, for input to the subtraction circuit (MIX3), and the other is converted into an AM signal using the 13.3MHz (4.43MHz x 3) wave input at pin 10 as the carrier, for output from pin 14. This AM signal is then delayed by 1H in DL401, and input to pins 20 and 19. Then, its level is adjusted by the AGC circuit, then, detected, then, output from pin 16, then, filtered by the low pass filter Q401, then, input to pin 1

of IC401, then, clamped, and then, input to the DOC switch mentioned above, and at the same time, also input to the subtraction circuit (MIX4). The DOC switch switches automatically to the 1H delay side when a dropout occurs to turn the DOC pulses to H. As the dropout is compensated for in the Y signal stage in the SL-F30/F60/T25, unlike the SL-C30 Series circuits in which the dropout compensation is made in the Y-FM stage, the switching noise is less conspicuous. In the subtraction circuit (MIX4), the 1H delayed Y signal is subtracted from the undelayed Y signal. This output signal of the subtraction (MIX4) is output through pin 8 via the limiter, and reinput from pin 7 after passing through the filter, then, output via another limiter from pins 5 and 3, and then, input to pin 27 after phase compensation. Since this signal consists almost entirely of the noise component and the cross-talk component from the adjacent track, when this signal is subtracted from the main signal in the subtraction circuit (MIX3), the Y signal output from pin 12 of IC401 is free from noise and cross-talk.

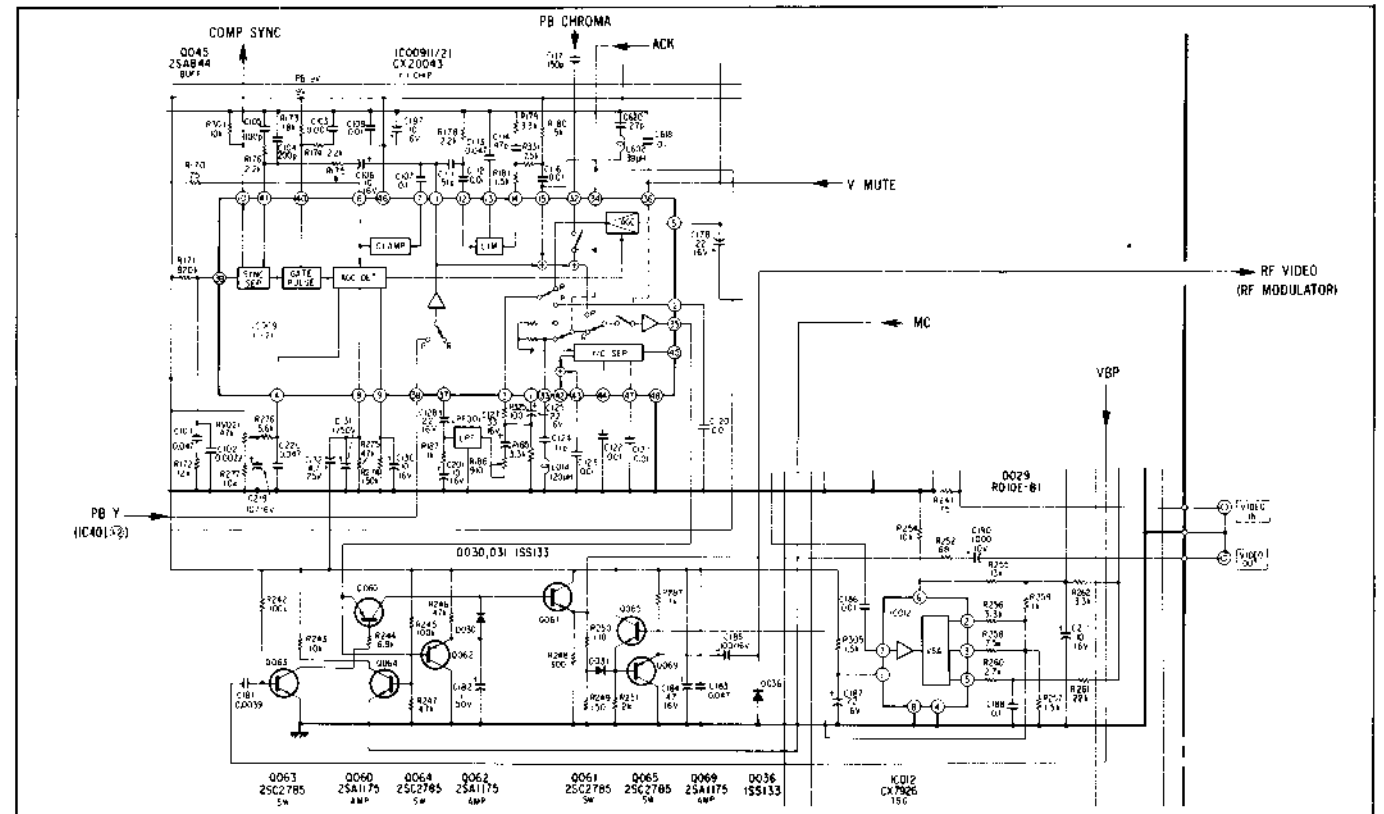


Fig. 1-5 Noise Canceller, Y/C Mix and Video Out Circuit Diagram

The output signal from pin 12 of IC401 is input to IC009 through pin 33, passes through the REC/PB select switch, input to the noise cancel circuit, freed of high range component from the Y signal by the high pass filter connected across pins 11 and 12 of IC009, and have the noise component removed by a limiter. This noise component is passed through a compensation circuit across pins 14 and 15, and added to the subtraction circuit to subtract it

from the main signal for noise cancellation. The noise-cancelled Y signal is mixed with the chroma signal input to pin 32, and output from pin 33 after flowing through the REC/PB select circuit, muting circuit, and the buffer circuit. The signal is then output from the VIDEO OUT terminal via the quasi VD insertion circuit of Q060 through Q064. The quasi VD is inserted only during a speed-change playback by an MC signal.

1-1-3. Chroma REC System (PAL)

The video signal is output from pin ④ of IC011. From this signal, the 4.43MHz chroma signal is taken out through BPF. The chroma signal is input to IC006 via Q071 through pin ⑤. In IC006, the chroma signal enters the ACC amp via the REC/PB switch for ACC processing. Then, the signal enters the PILOT BURST ADD circuit where a pilot burst signal is inserted in the sync signal portion, and output from pin ①. This chroma signal flows through pins ②

and ④ of the PAL/SECAM select switch (IC005), and then, reenters IC006 through pin ④. In IC006, the signal is converted to a low band convert chroma signal (C-RF signal) by the converter II circuit, and output from pin ③. The C-RF signal flows through the low pass filter Q032, set for a recording current level by RV008, and is output to the RP-20 board via the buffer Q103.


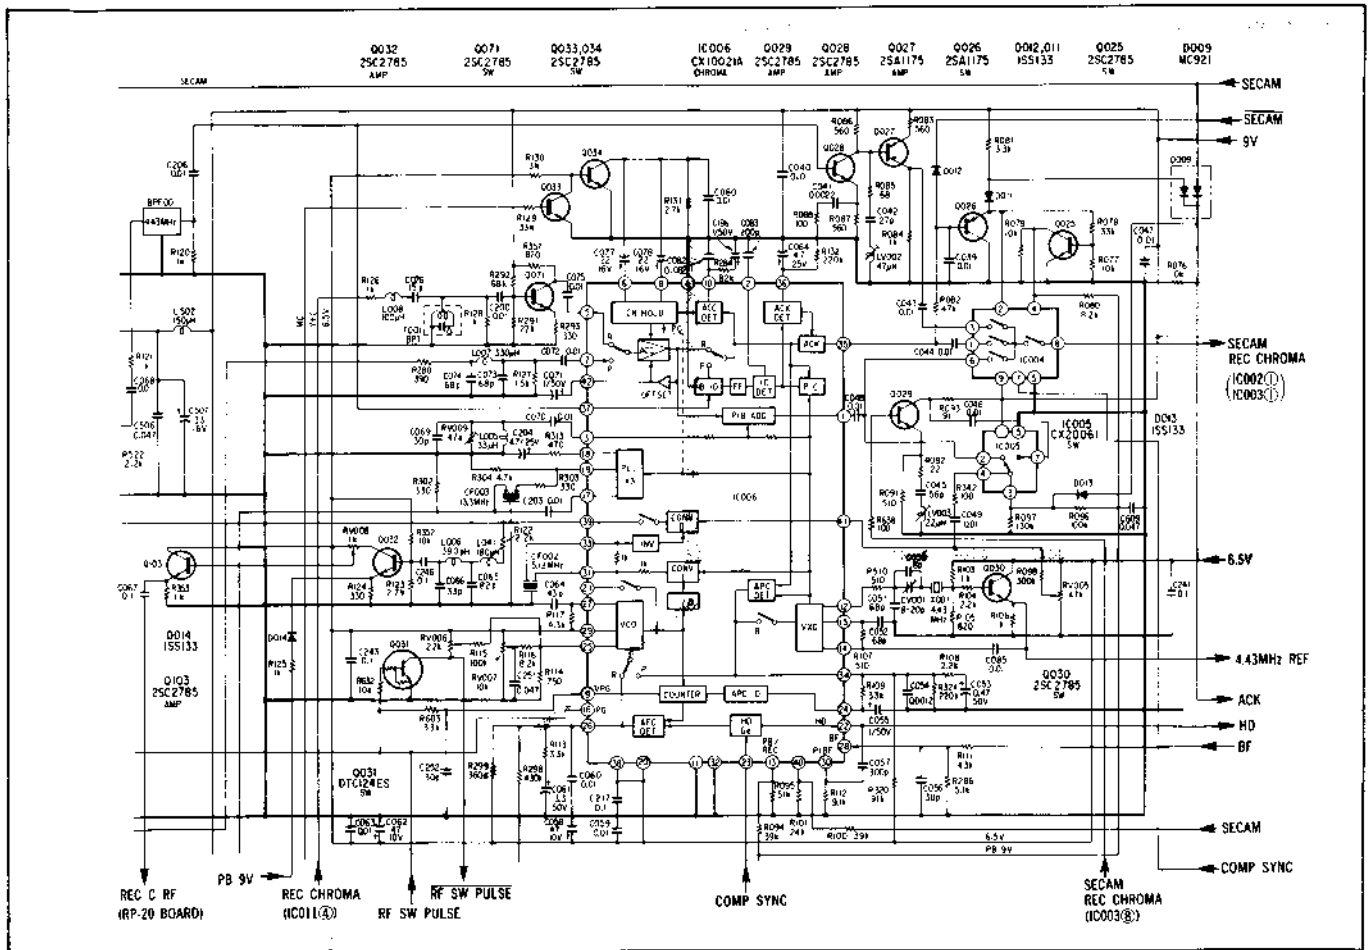


Fig. 1-6 REC CHROMA Process Circuit Diagram (PAL/SECAM MODEL)

(PAL MODEL)

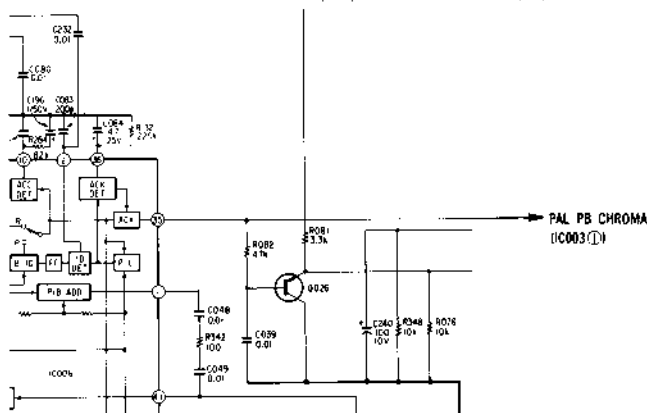

1-1-4. Chroma REC System (SECAM)

The circuit operation is the same as the PAL signal up to the ACC processing. After the ACC processing in IC006, the signal passes the PILOT BURST ADD circuit without any change, and is output from pin ①. This signal is input to the PAL/SECAM select switch IC004, at pin ⑥ and output from pin ⑧. This output of pin ⑧ in IC004 is then input to pin ① of IC003 and pin ① of IC002 via Q620. IC002 discriminates between PAL and SECAM. IC003 is for the 1H-exchange-chroma-process, i.e., the chroma signal input through pin ① of IC003 and the chroma

signal which has been delayed by 1H by DL001 across pins ②, ⑤ and ④ are switched over by the frequency $\frac{1}{2}$ divided RF SW PULSE signal input from pin ⑥ for color sequence correction. The 1H-exchange-chroma-processed signal is output from pin ⑧. This signal is brought back to a perfect FM signal without amplitude change in the bell filter of Q029, and enters the converter II circuit in IC006 at pin ④ after passing through the PAL/SECAM select switch IC005. From then on, the process is the same as the PAL system.


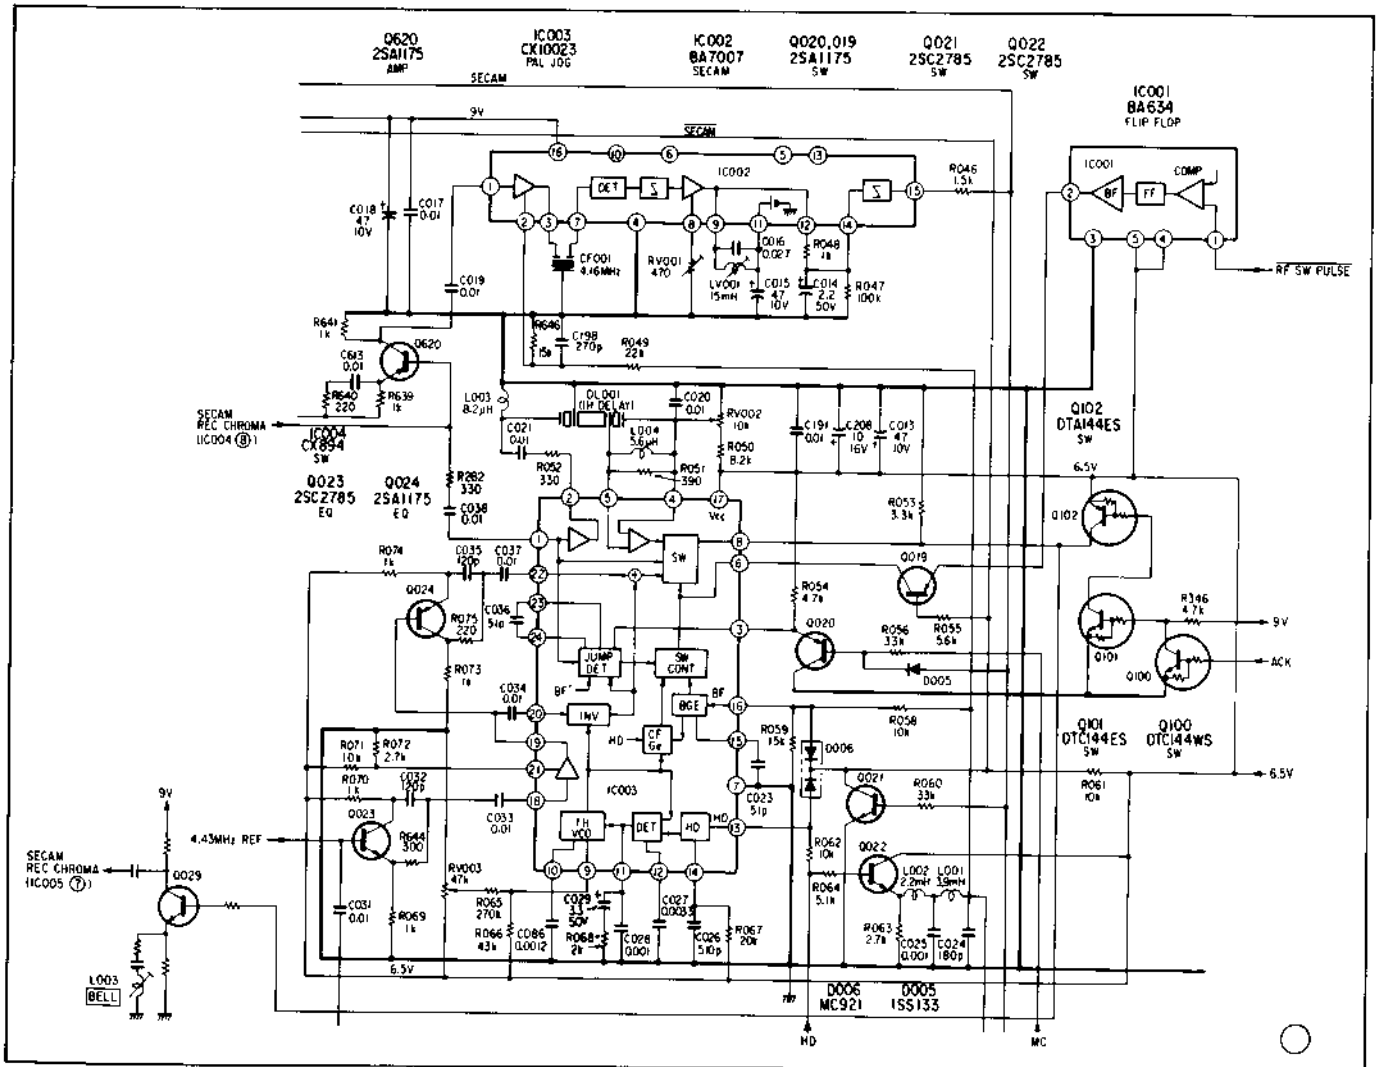


Fig. 1-7 1H Exchange and PAL/SECAM Det Circuit Diagram

1-1-5. Chroma PB System (PAL)


The C-RF signal is output from the RP-20 board, and input to IC006 through pin ⑦ after flowing through the BPF (L007, C073, C074). This signal is ACC-processed in the IC, and is output from pin ① after passing the PILOT BURST ADD circuit without receiving any effect. The signal passes through the PAL/SECAM select switch IC005 and reinput to IC006 through pin ④①. It is frequency-converted in the converter II circuit into a 4.43MHz chroma signal, and output from pin ③⑨. In IC006, also the APC circuit removes jitter from the chroma signal. The chroma signal output from pin ③⑨ of IC006 is input to the comb filter consisting of Q502 through Q504 and DL501 (2H delay

line), and the cross talk component from the adjacent track is eliminated in the filter. The chroma signal output from the comb filter is input to IC006 through pin ③⑦ via the 4.43MHz BPF (BPF001). Then, it flows through the burst ID circuit and the ACK circuit, and is output from pin ③⑤. The burst ID circuit serves to reverse the chroma signal phase when the APC is unlocked to shorten the time before the locking of APC. The ACK circuit serves to output an ACK signal (approx. 3.5V DC) by superposing it on the chroma signal, during the color mode. These two circuits are not used with the SECAM signal.

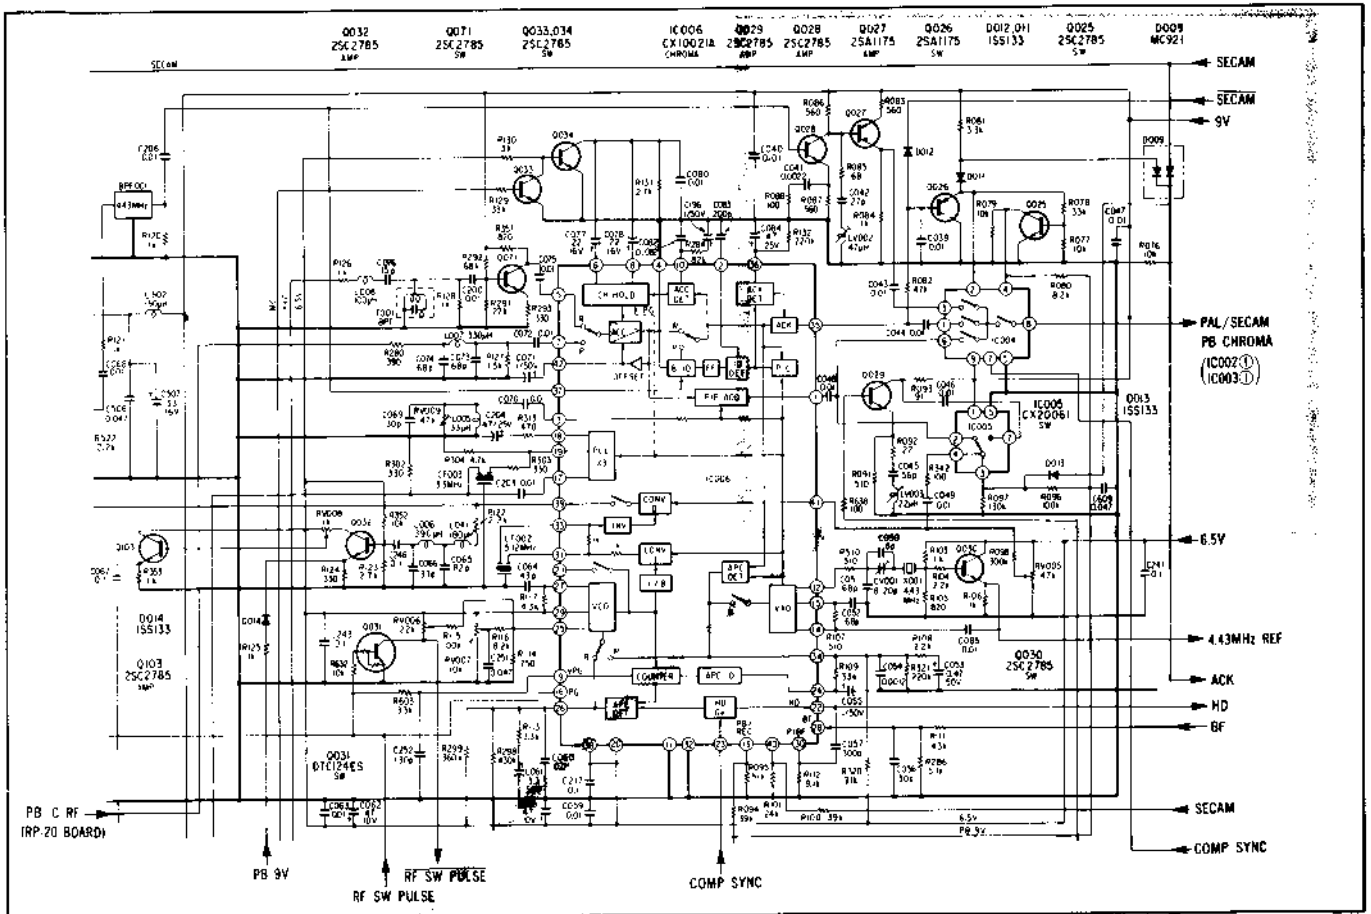

(PAL MODEL)

Fig. 1-8 PB CHROMA Process Circuit Diagram (PAL/SECAM MODEL)

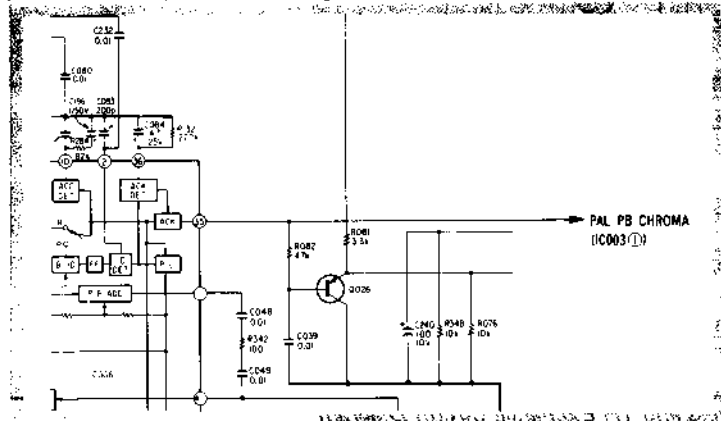

The chroma signal output from pin ③ of IC006 is input to IC003 through pin ① via the PAL/SECAM select switch. Since the R-Y signal phase is reversed at each 1H with the PAL chroma signal, the sequence of (R-Y) and -(R-Y) may be reversed during speed-change PB, resulting in color inverting. To prevent this, a special jog chroma process is required. During the normal PB, the PILOT BURST signal only is cleaned in IC003, but during the speed-change PB, the following three operations are performed.

1) A stable internal burst signal is formed with the 4.43 MHz REF signal (Q030 emitter output) and the HD signal (IC006 pin ② output), and this signal is inserted

to the PB chroma signal to replace the burst signal (PB burst signal).

2) The PB burst signal and the internal burst signal are compared for phase to detect any color reversal, and the undelayed chroma signal and the 1H delayed chroma signal are switched over to correct the color of the PB chroma signal.

3) The PILOT BURST signal is cleaned as with the normal playback process.

The chroma signal output from pin ⑧ of IC003 is input to IC009 through pin ③ for mixing with the Y signal.

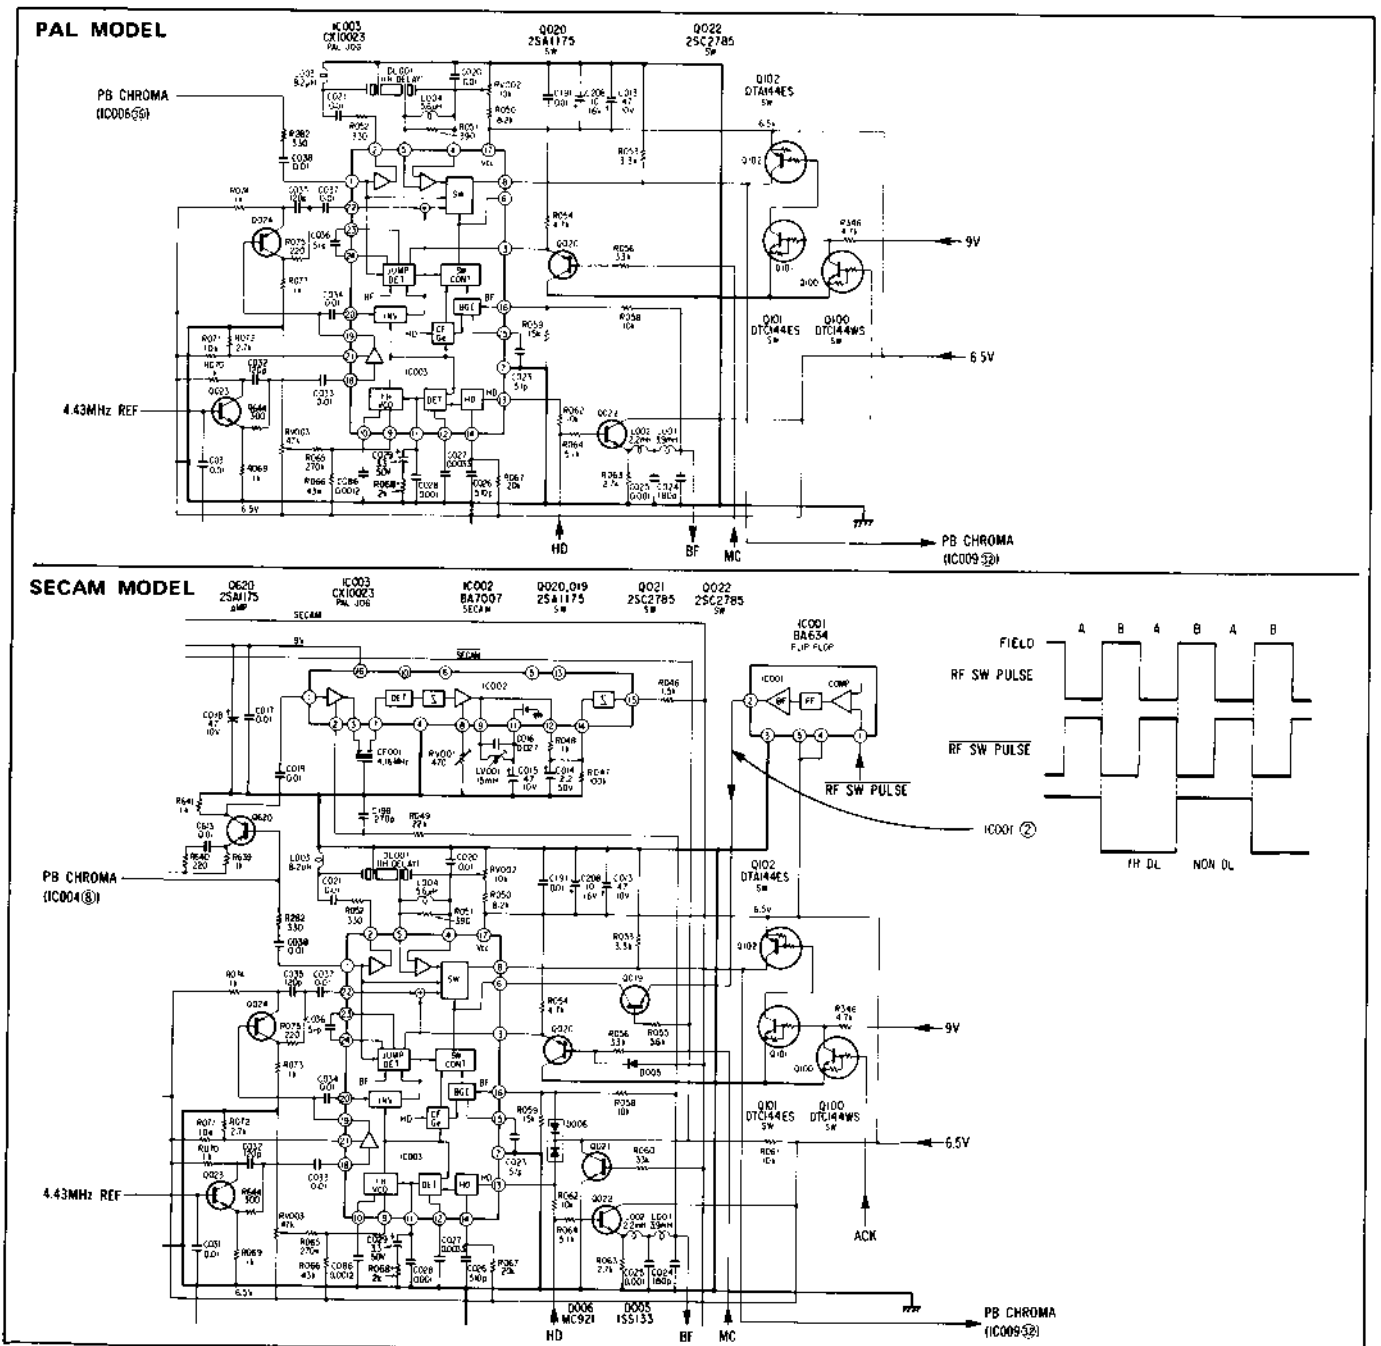


Fig. 1-9 Jog CHROMA Process and 1H Exchange Circuit Diagram

1-1-6. Chroma PB System (SECAM)

The process is the same with the PAL signal until the frequency conversion by the converter II in IC006. The frequency converted and jitter-freed chroma signal is output from IC006 through pin 39, and input to the PAL comb filter (Q502 through Q504, DL501). In the SECAM mode, Q501 is on, and therefore, the comb filter is inoperative, allowing the chroma signal to pass unchanged, via the BPF (BPF001), to the counter-bell filter consisting of Q028 and Q027. Here the signal is brought back to the normal SECAM chroma signal in this filter. Then the signal is input to IC003 through pin 1 via the PAL/SECAM select switch IC004. In IC003, the signal is 1H-exchange-processed to recover the color sequence of the normal SECAM chroma signal, output from pin 8, and input to IC009 through pin 32 for mixing with the Y signal.

1-1-7. Chroma Recording Current Muting Circuit (Only for PAL Model)

SECAM system signals recorded and played back by a PAL model set become very ugly pictures because color synchronization is not possible. When SECAM signals are recorded to prevent this, the chroma signal recording current is forcibly muted to record in the black-and-white mode. When SECAM color signals are input, chroma signals and DC voltage (approx. 3.5Vdc) are output overlapping each other from pin 39 of IC006 as in the PAL system. Therefore, the voltage at the emitter of Q076 reaches approx. 3.7Vdc. The voltage of the Q076 base is increased to approximately 3.75Vdc by R340 and R350.

ID detection pulses are generated on pin 2 of IC006. These pulses are positive pulses only when signals are PAL chroma signals. Positive and negative pulses are always produced with SECAM chroma signals. Therefore, Q076 is switched OFF with PAL chroma signals. Q076 is switched

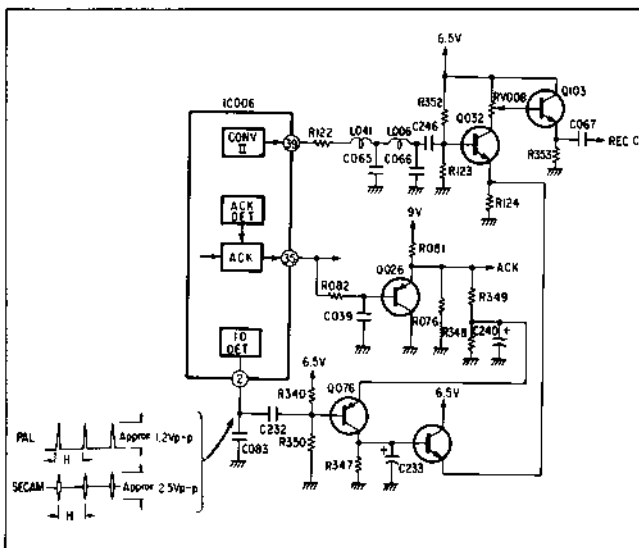


Fig. 1-10

ON by a negative pulse of the ID detection pulse with SECAM chroma signals, and C233 is charged to approximately 4.2V. Therefore, the Q077 base voltage is higher than the Q032 base voltage (approx. 1.4V dc), and Q032 is switched OFF, and chroma recording signals are muted.

1-1-8. AFC, APC System (PAL)

REC System

The 4.43MHz chroma signal input through pin 5 and the 4.43MHz VXO output are applied to the APC DET for phase comparison between the chroma signal burst and the VXO output, and the error voltage is applied to the VXO via the low pass filter pin 34. As a result, the VXO oscillation frequency is locked to the 4.43MHz chroma burst signal. This is the APC system.

From the COMP SYNC signal input at pin 23, HD pulses are generated and applied to the AFC DET, to which also the frequency-divided $\frac{1}{351}$ (field A) or $\frac{1}{353}$ (field B) output of VCO is applied. These two signals are phase-shift-detected by AFC DET and the error voltage is applied to VCO via the low pass filter pin 26 to cause the VCO to oscillate at $351 \cdot f_H$ (field A) or $353 \cdot f_H$ (field B). This is the AFC system.

The VCO output is frequency-divided to 1/8 and applied to the converter I, and together with the VXO output, produces the carrier for the converter II.

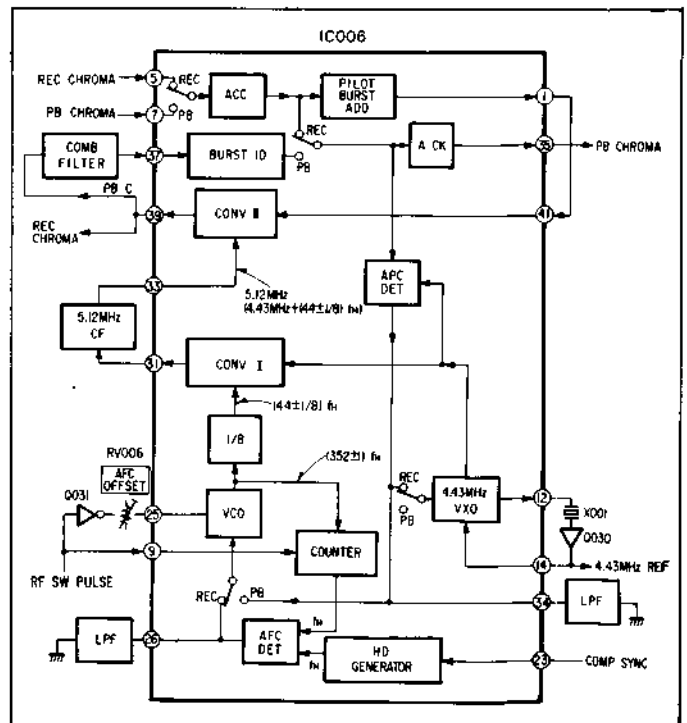


Fig. 1-11 AFC and APC System (PAL Mode) Diagram

PB System

The VXO serves as a 4.43MHz fixed oscillator. The PB chroma signal input at pin ⑦ is converted to a 4.43MHz chroma signal in the converter II, flows through the comb filter connected across pins ③⑨ and ③⑦, and is input to the APC DET via the burst ID circuit. In the APC DET, the chroma signal is phase-shift-detected with the 4.43MHz reference signal during the pilot burst period, and the error voltage is input to the VCO via the LPF pin ③④. As a result, the VCO frequency is corrected so that the 4.43MHz chroma signal frequency after the frequency conversion in converter II conforms to the 4.43MHz reference signal. In this way, jitter is eliminated

1-1-9. AFC System (SECAM)

In the SECAM mode, the PAL system is not used, and the VXO is used as a fixed frequency oscillator, and the AFC system operation is similar to the PAL REC. During the PB, the jitter component of COMP SYNC is brought into the 5.12MHz frequency conversion carrier unchanged. In the converter II, the jitter component in the low conversion chroma signal input from pin ④① and that in the 5.12MHz frequency converted carrier cancel each other, and the chroma signal output from pin ③⑨ is free from jitter.

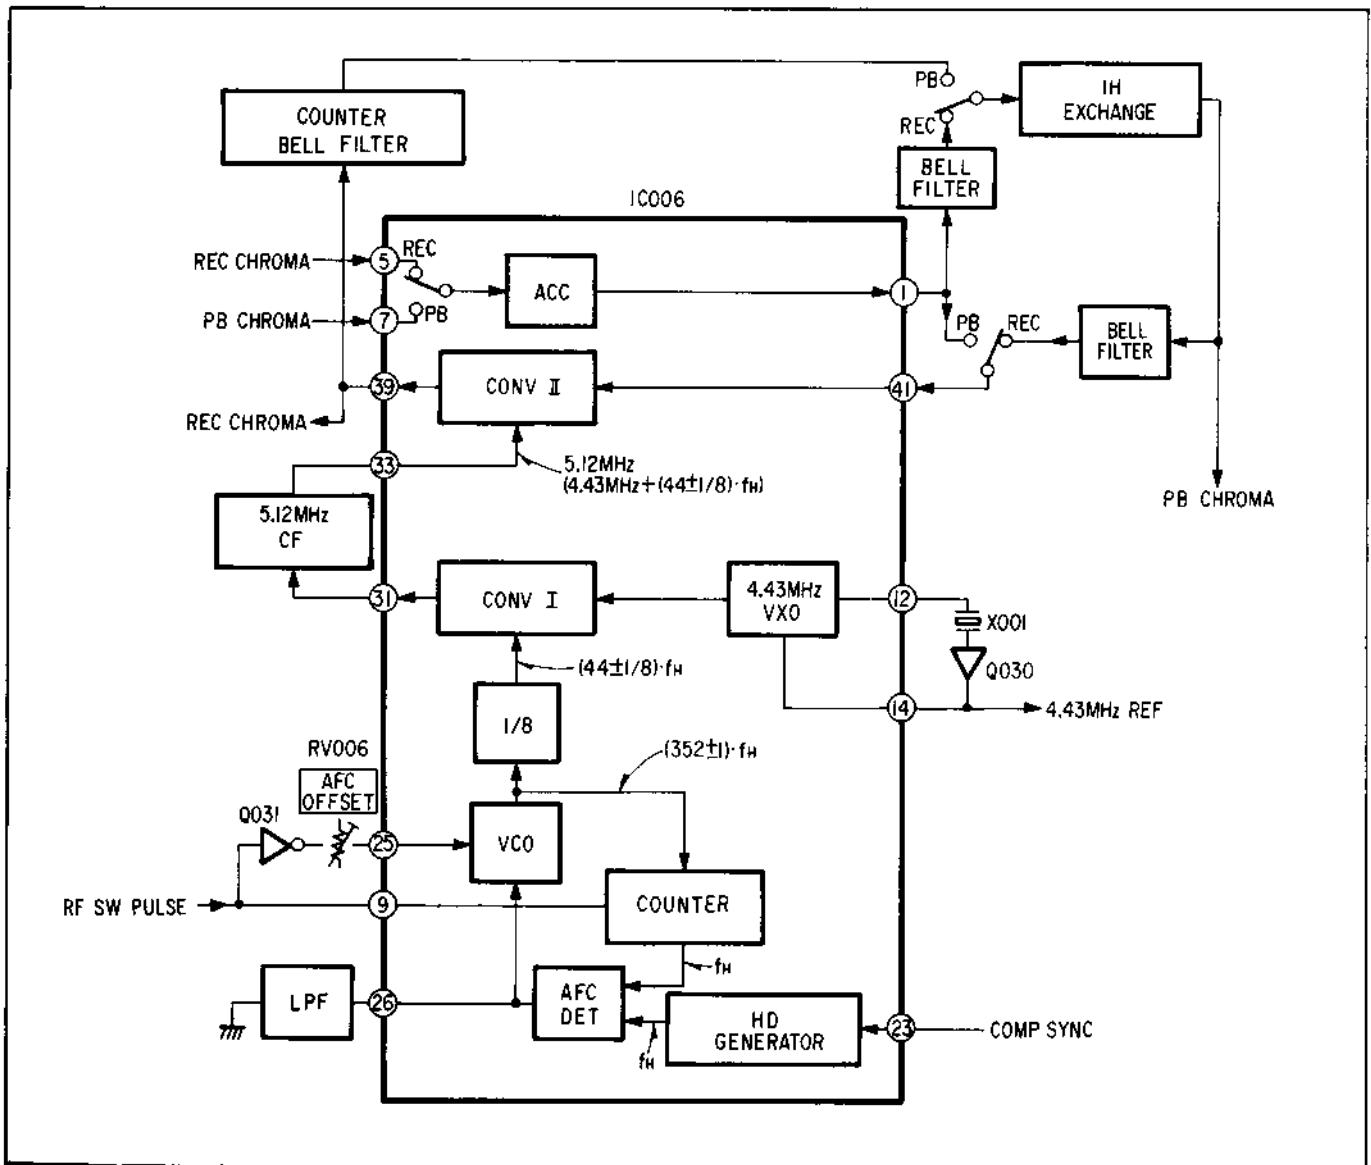


Fig. 1-12 AFC System (SECAM Mode) Diagram

1-2. RP-20 BOARD

1-2-1. Video Signal Recording System

The Y-FM signal input to the RP-20 Board are fed to the buffer Q508 and are divided in R549 and R550, to be input to the Ach recording Amp (pin ⑦ of IC501) and Bch recording Amp (pin ⑨ of IC501). Chroma signals are also input to these amplifiers after being divided by R551 and R552, and Y and chroma signals are mixed. The mixed signals are amplified by the respective recording amplifiers and are fed to the video head.

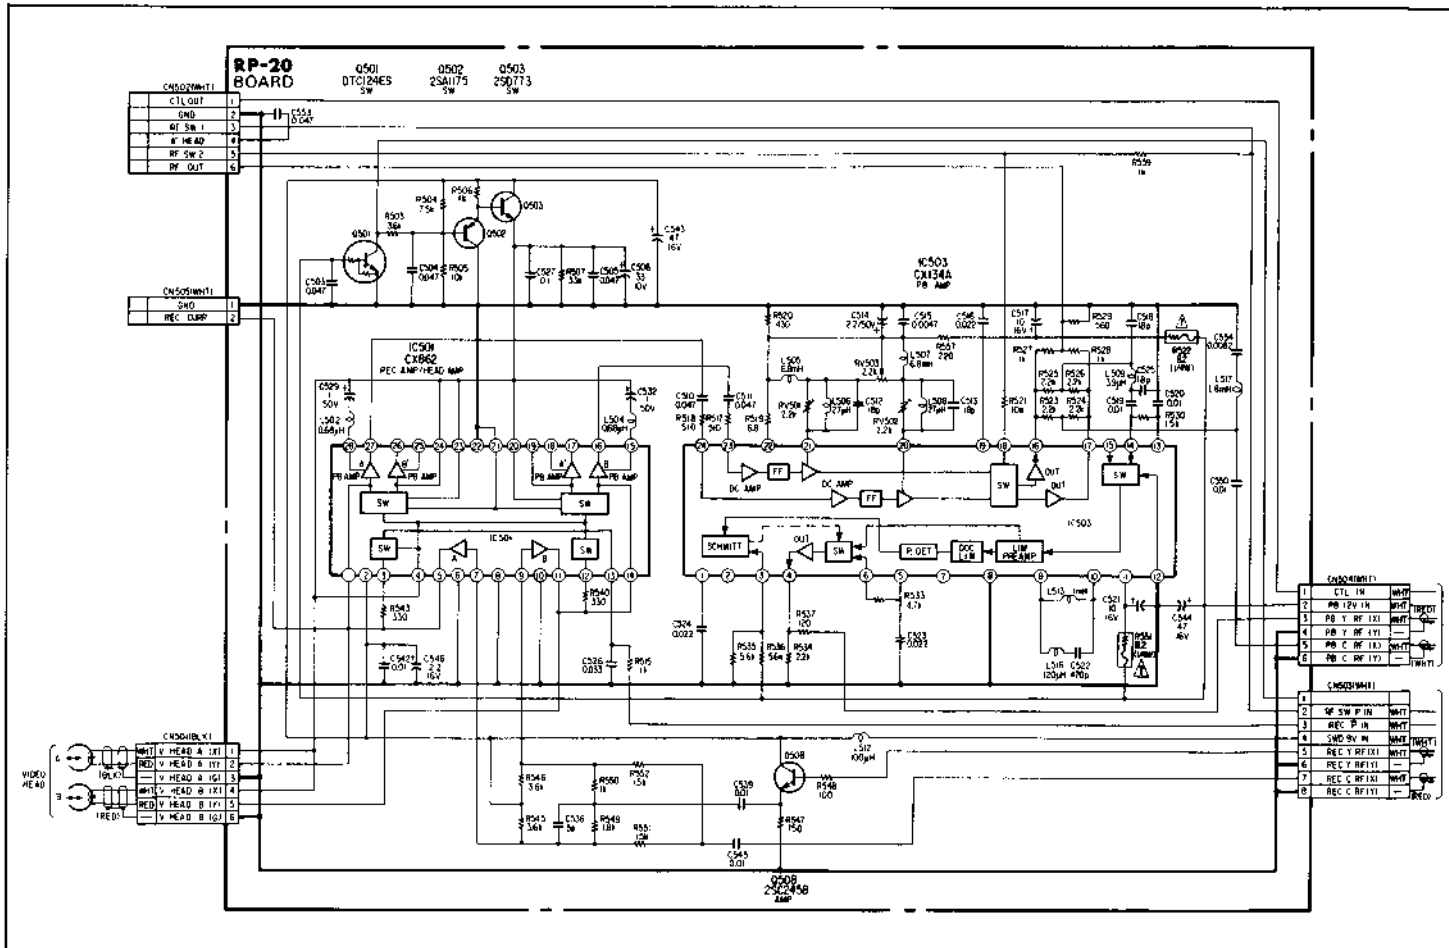


Fig. 1-13 Video Signal REC/PB Process Circuit Diagram

1-2-2. Video Signal Playback System

The signals played back by the A and B ch video heads are amplified by playback head amplifier IC501 and are input to IC503. The signals are adjusted by the equalizer amplifier for playback frequency characteristic and to achieve a balance between A and B chs. The overlapping portion of the A and B ch signals is removed in the switching circuit by an RF SW PULSE, and the signals are output from pin 17 (Ach) and pin 16 (Bch). The signals are then divided into Y and chroma signal systems. The chroma signal system signals are mixed in R523 and R524 and are output to the YC-31 Board. The Y signal system signals are mixed in R525 and R526 and are reinput to pin 14 after being fed to the LPF. The signals are then output to YC-31 Board from pin 4 after being amplified inside the IC.

1-3. CIRCUIT FOR NOISELESS STILL PLAYBACK (SL-F60 Series)

1-3-1. Playback Head Selection Circuit (RP-20 Board)

(Playback mode other than noiseless still)

The level of the A' HEAD signal is "L", and Q510 is switched OFF. Therefore, the phase of the RF SW PULSE is inverted by pins 20 of IC501 and 18 of IC503, and by Q504, and is input to pin 10 of IC502.

Therefore, the Ach head output is output to the YC-31 Board when the level of the RF SW PULSE is "L", and the Bch head output is output to the YC-31 Board when the level of the RF SW PULSE is "H".

(Noiseless still playback mode)

The level of the A' HEAD signal is "H", and Q510 switches ON. The levels of pin 20 of IC501 and of pin 18 of IC503 both change to "L". Therefore, the head is selected by IC502. The A'ch head output is output to the YC-31 Board when the levels of the RF SW PULSE and of Ach head output are "L" and "H", respectively.

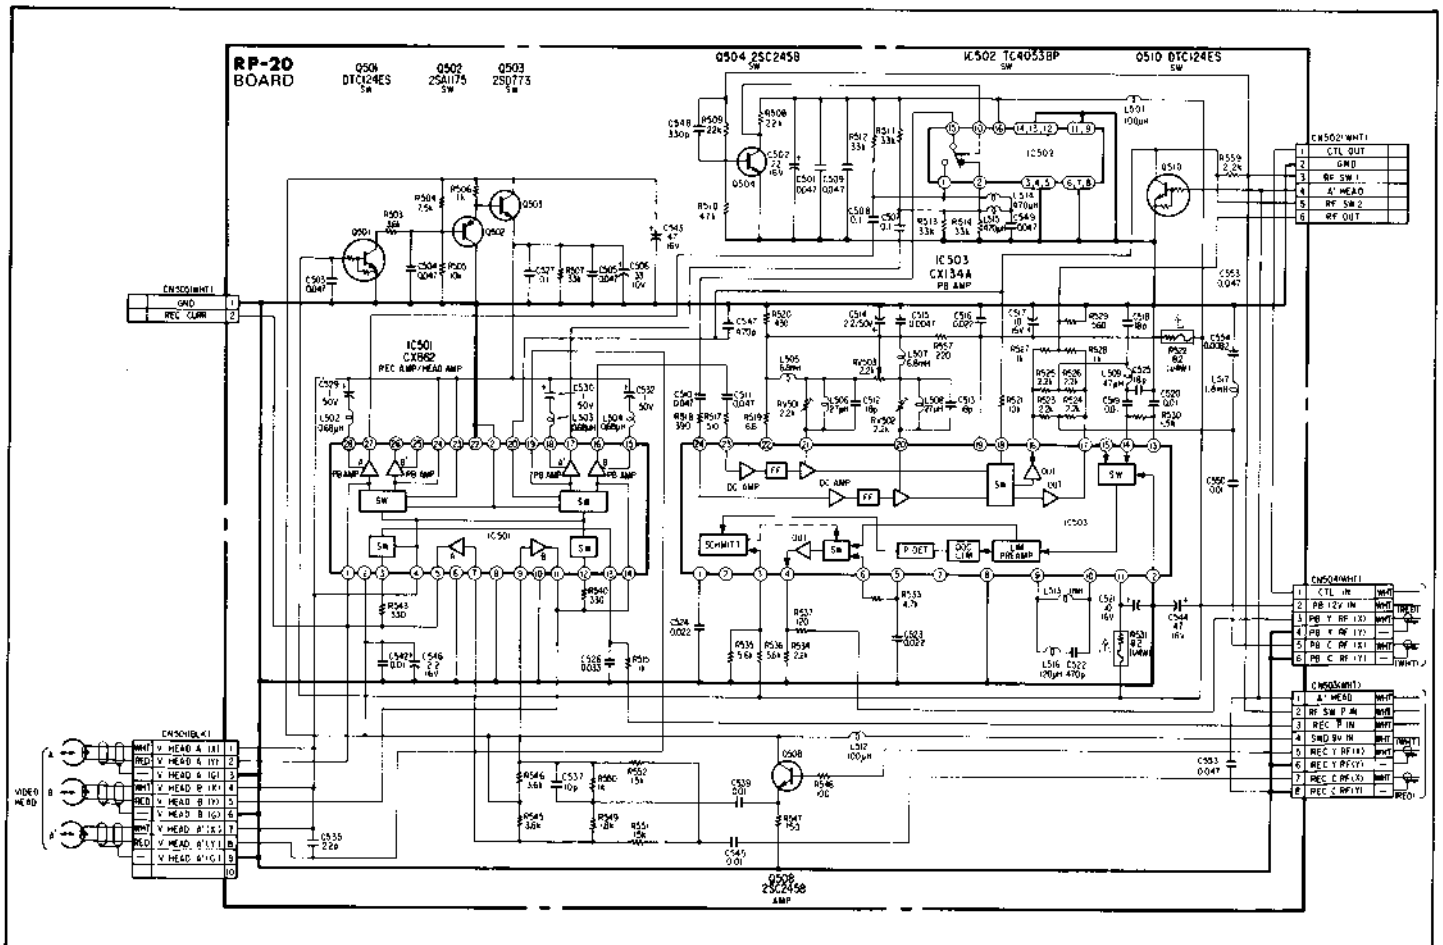


Fig. 1-14

1-3-2. Drop Out Compensation Circuit (YC-31 Board)

The DOC PULSE output by the drop out detection circuit output (pin 28 of IC009) detects noise.

The SL-F30 Series disables output of the DOC PULSE by changing the level of pin 26 of IC009 to "H" by the MC signal during the PB PAUSE mode to inhibit drop out compensation operation. The drop out detection sensitivity is increased with the SL-F60 Series during the change from the PB mode to the PB PAUSE mode in order to detect the noise position. Drop out is compensated after completing the change by resetting to the same sensitivity as that of the PB mode. The various modes are described below.

PB Mode:

The levels of the MC, DOC PAUSE, and A' HEAD signals are all "L", and Q602, Q603, and D023 are all switched OFF.

The voltage set by RV010 is input to pin 26 of IC009. During transition from PB to PB PAUSE mode:

The levels of the MC, DOC PAUSE, and A' HEAD signals are "H", "H", and "L". Q602 and Q603 are switched ON, and D023 is switched OFF. The voltage set by RV010 is input to pin 26 of IC009 after being divided by R312 and R602. Therefore, the drop out detection sensitivity increases and the DOC PULSE width widens.

When transition is completed: Noiseless still playback mode:

The levels of the MC, DOC PAUSE, and A' HEAD signals are "H", "L", and "H", respectively. Q602 is switched ON, while Q603 and D023 are switched OFF. The voltage set by RV010 is input to pin 26 of IC009. Therefore, the drop out detection sensitivity equals that of the PB mode.

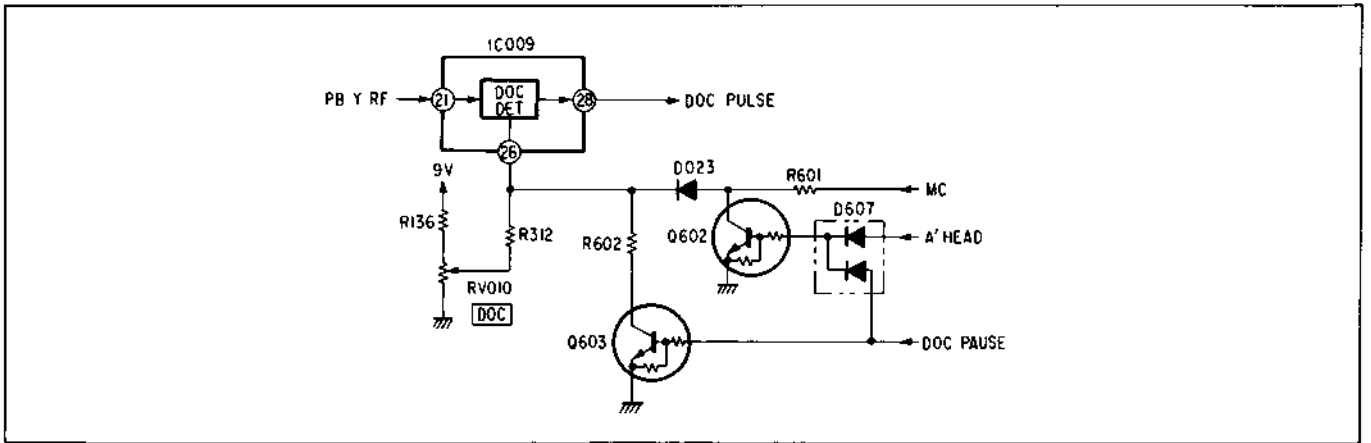


Fig. 1-15

1-3-3. 1/2fH Shift Return Circuit (YC-31 Board)

DC level variations of the Y signal in vertical synchronization during the PB mode caused by 1/2fH shift processing during recording is cancelled by inputting an RF SW PULSE to the collector of Q051 in the de-emphasis circuit by dividing its voltage by R281, R635, and R205. This

signal processing is not required when playing back only those tracks that are recorded by the Ach head as in noiseless still playback, and the RF SW PULSE is cancelled by Q604.

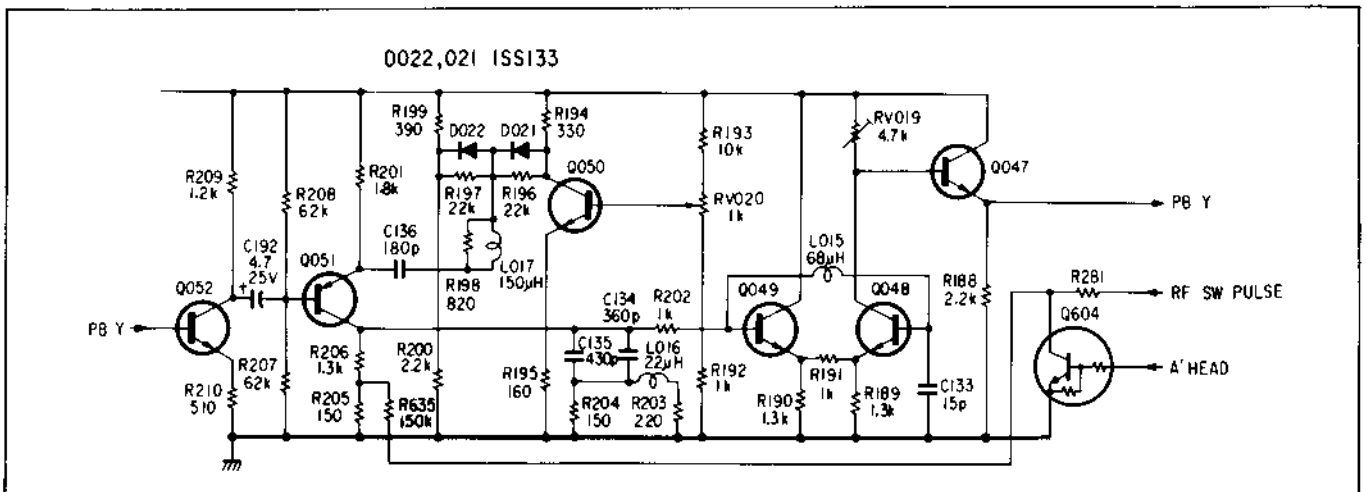


Fig. 1-16

1-3-4. APC and AFC Circuits (YC-31 Board)

The frequencies of the low frequency conversion chroma signals differ between the tracks recorded by the Ach and Bch heads. For this, an RF SW PULSE is applied to pin ⑨ of IC006 and Q031 to change the counter demultiplication ratio and to make an offset correction of the AFC voltage in playback modes other than noiseless still playback. This operation is not required in the noiseless playback mode, and the RF SW PULSE is muted using Q601 and Q615.

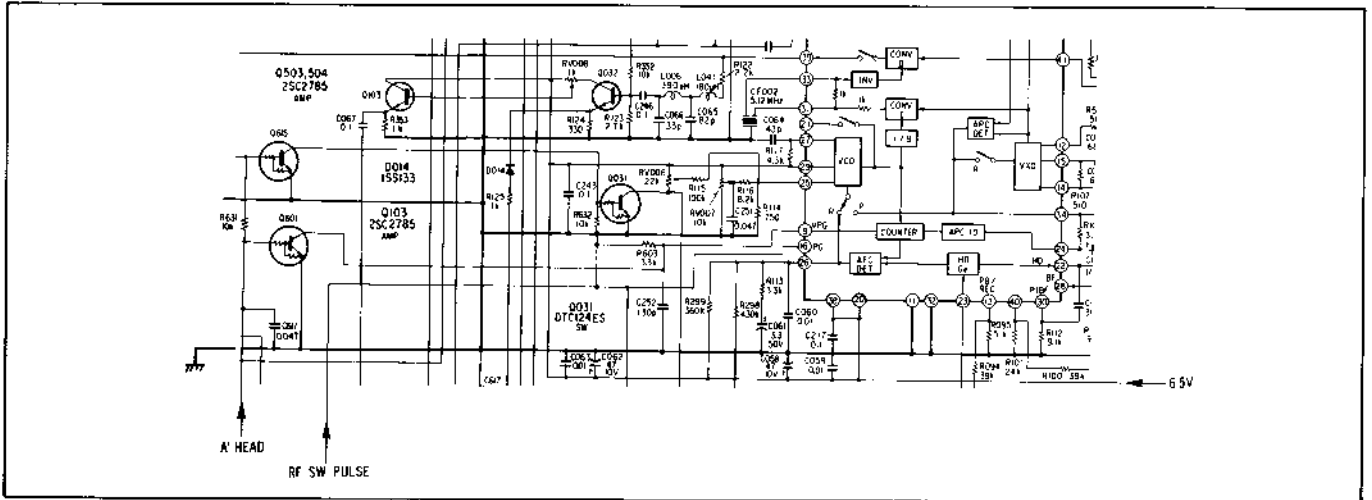


Fig. 1-17

2. SYSTEM CONTROL CIRCUIT

2.1. CONFIGURATION

The system control circuit consists of SS-34, FU-25*1 RD-20, RD-21, and N Boards centering the microcomputer IC601 (MB88551).

Its peripheral circuits consist of the tape end and top sensor, loading motor drive, and solenoid drive circuits. The SL-F60 series additionally has a noise pulse detection circuit for noiseless still playback and a timing control circuit (ES-3 Board).

*1: FU-35 Board with the SL-F60 series.

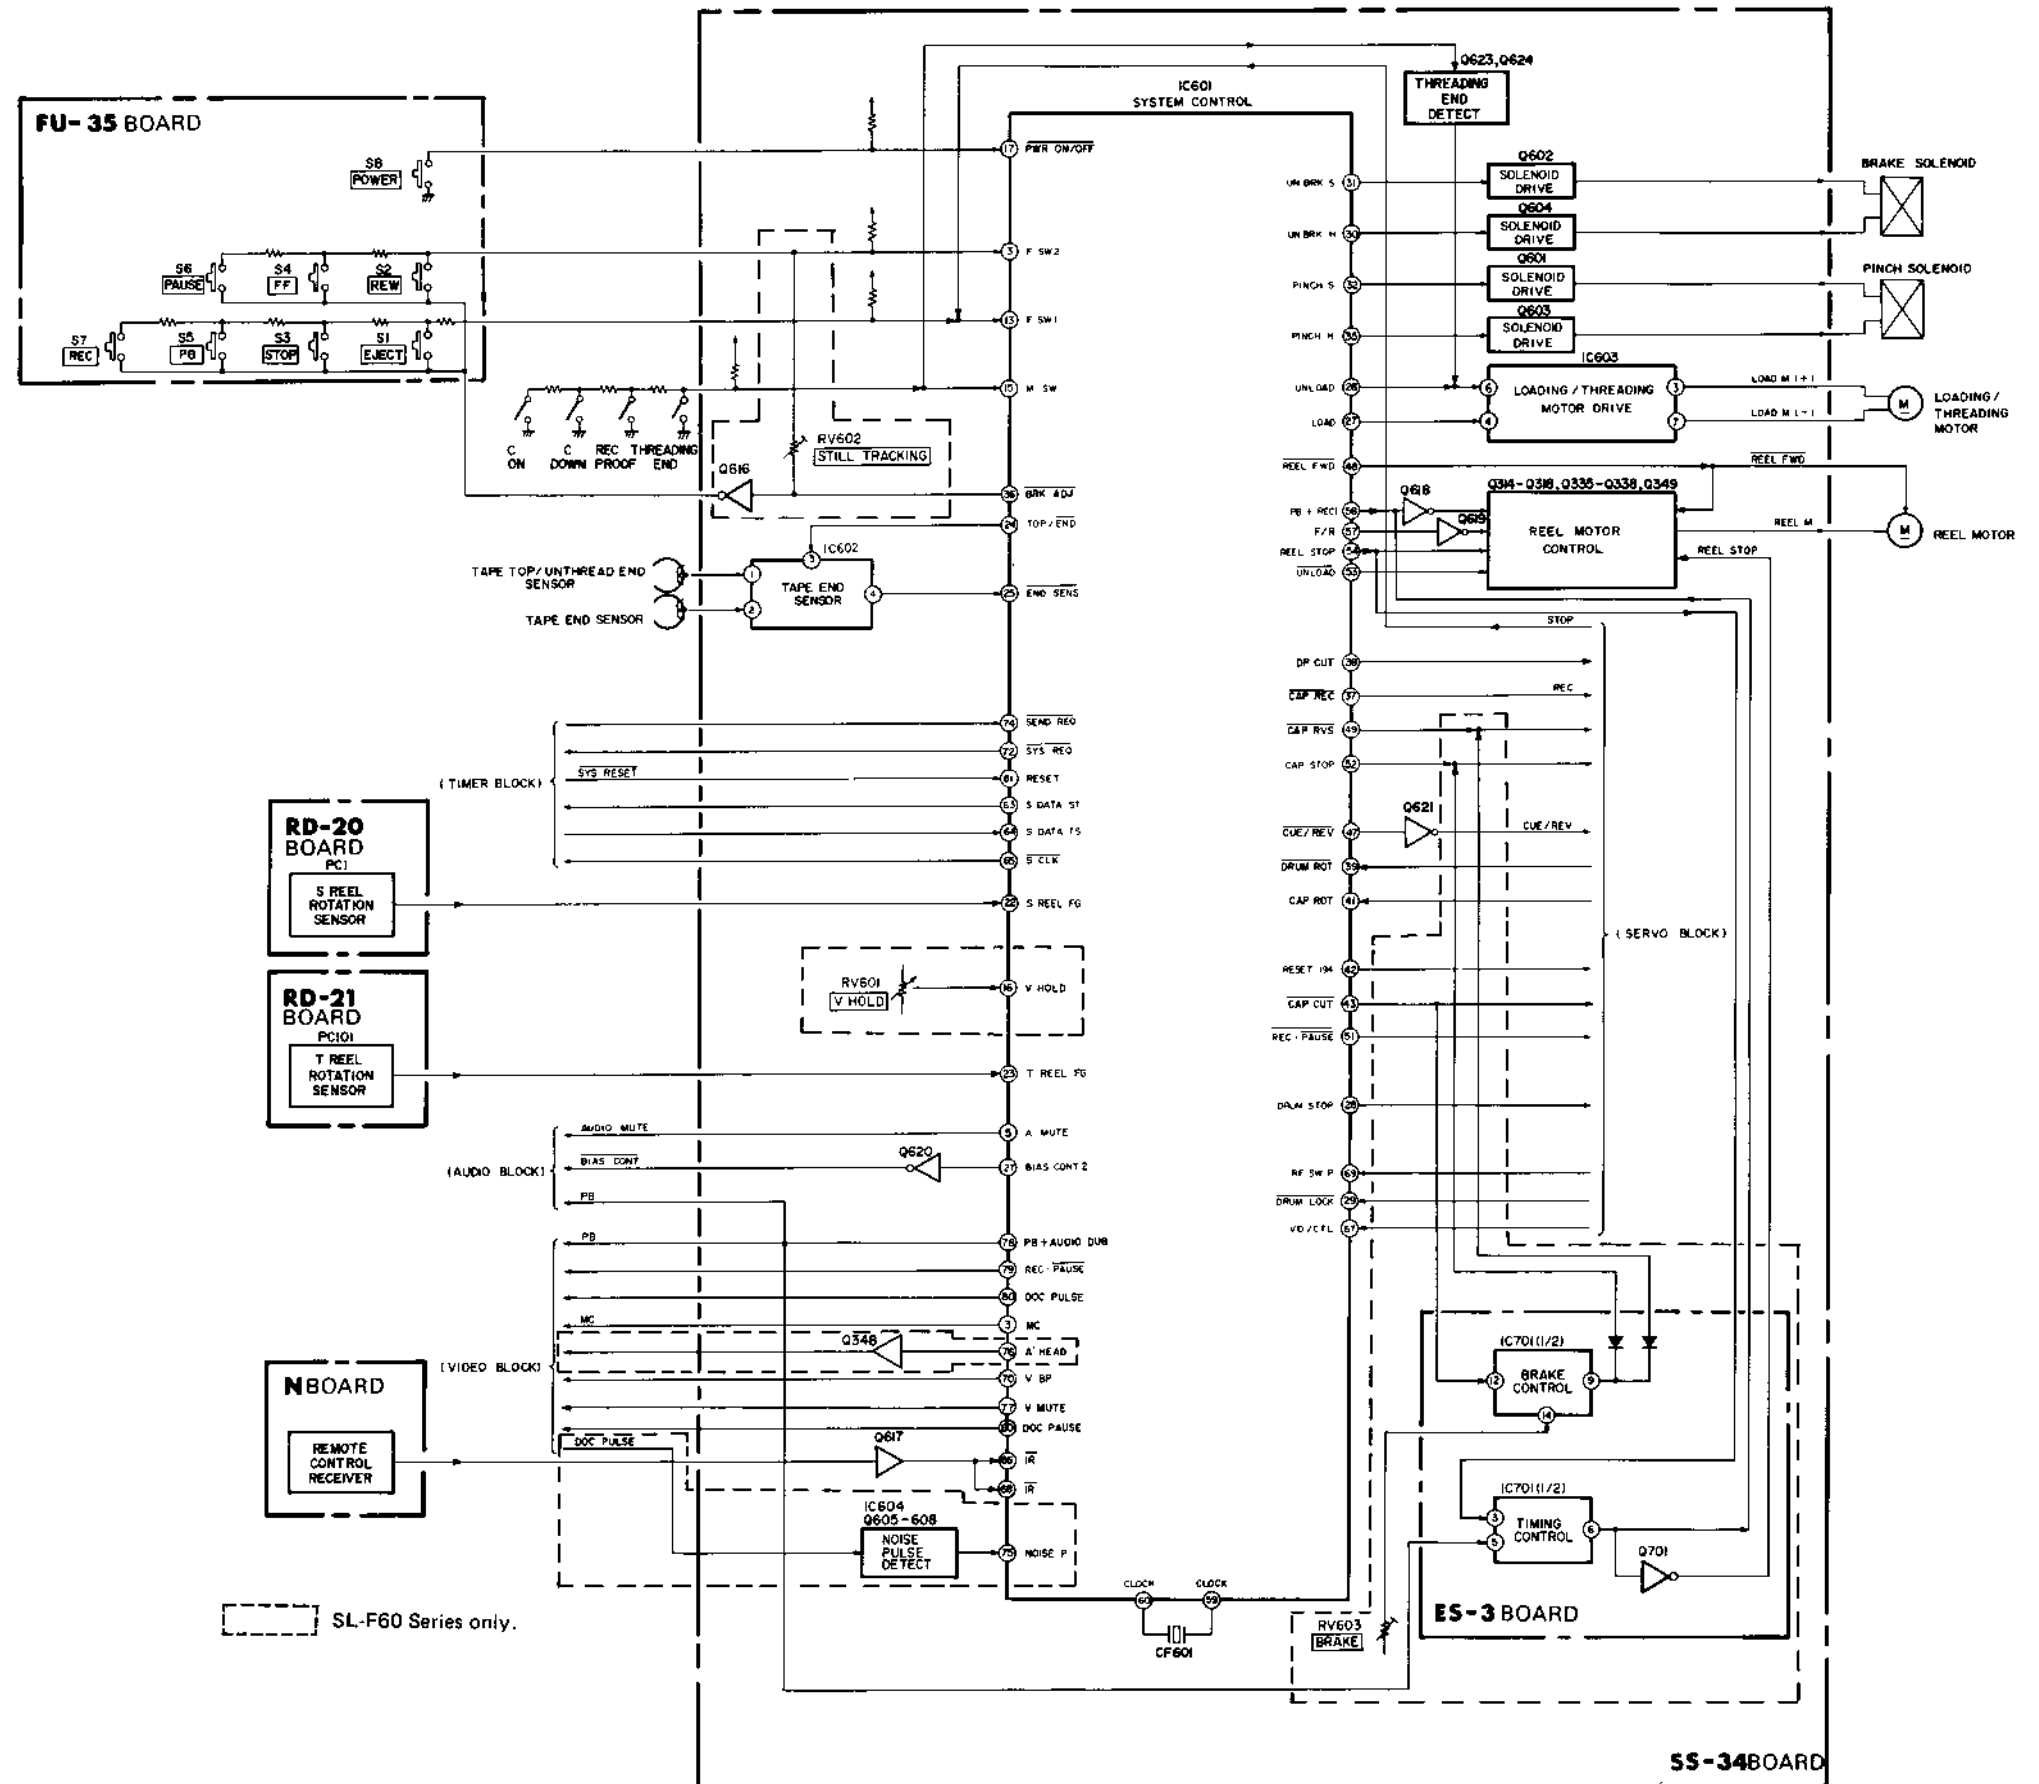


Fig. 2-1 System Control Block Diagram

2-2. LOADING CONTROL

Loading and threading have the following four switches and sensors.

- i) CASSETTE ON switch
Loading of a cassette is detected.
- ii) CASSETTE DOWN switch
Downing of a cassette is detected.
- iii) THREADING END switch
End of threading is detected.
- iv) T (TAPE TOP) sensor
Completion of unthreading is detected.

The CASSETTE ON, CASSETTE DOWN, THREADING END, and REC PROOF (error erasing prevention) switches are connected respectively and input different output voltages to pin ⑤ (M SW) of the microcomputer by ON/OFF of these switches. (See Table 2-1.) The microcomputer reads these voltages and outputs signals to the motors, etc.

1. Loading

See the timing chart in Fig. 2-2.

- 1) The pinch solenoid is pulled and the drive force of the loading motor is ready to be transferred to the cassette compartment when power is switched ON.
- 2) The CASSETTE ON switch turns on, the loading motor rotates, and the cassette is pulled down and is placed on the reel table when a cassette is inserted in the cassette compartment. The CASSETTE DOWN switch switches ON to detect that the cassette has arrived on the reel table.
- 3) The reel motor rotates approximately 200msec to eliminate tape sagging. The loading motor then stops.

Switched that are switched ON		CASSETTE ON (S904)	CASSETTE DOWN (S901-1)	REC PROOF (S902-2)	THREADING END (S903)
Voltage at pin ⑤ (M SW) of IC601	5V	3V	2V	1V	0V

Table 2-1

- 4) The pinch solenoid turns OFF, the driving force of the loading motor is transferred to the threading ring side to rotate the loading and reel motors successively and to start threading.
- 5) The THREADING END switch turns on, end of threading is detected, the loading motor is driven by pulses for a short period of time after the reel motor is stopped, and threading becomes definite. The reel motor then stops to finish loading.

2. Unloading (Ejection)

See the timing chart in Fig. 2-3.

- 1) By pressing the EJECT button, a voltage (0V) is read at pin ⑬ (FSW1) of the microcomputer. The microcomputer changes the level of pin ⑳ (TOP/END) to "H" at this time and reads pin ㉕ (END SENS). If END SENS = "L" (TAPE TOP), the tape is fed in the FWD direction until the level of END SENS becomes "H". The loading motor then starts unthreading, and the reel motor winds the tape. The reel motor is driven by a quasiconstant current at this time.
- 2) The T sensor faces the No. 10 guide mechanically when unthreading completes, and the same signal as that when TAPE STOP is detected is input to the microcomputer (pin ㉕ of IC601) through IC602 to detect completion of unthreading.
- 3) The loading and reel motors are stopped, pinch solenoid is pulled, and the cassette is lifted by driving the loading motor.
- 4) The CASSETTE ON switch turns OFF, cassette ejection is detected, and unloading is finished.

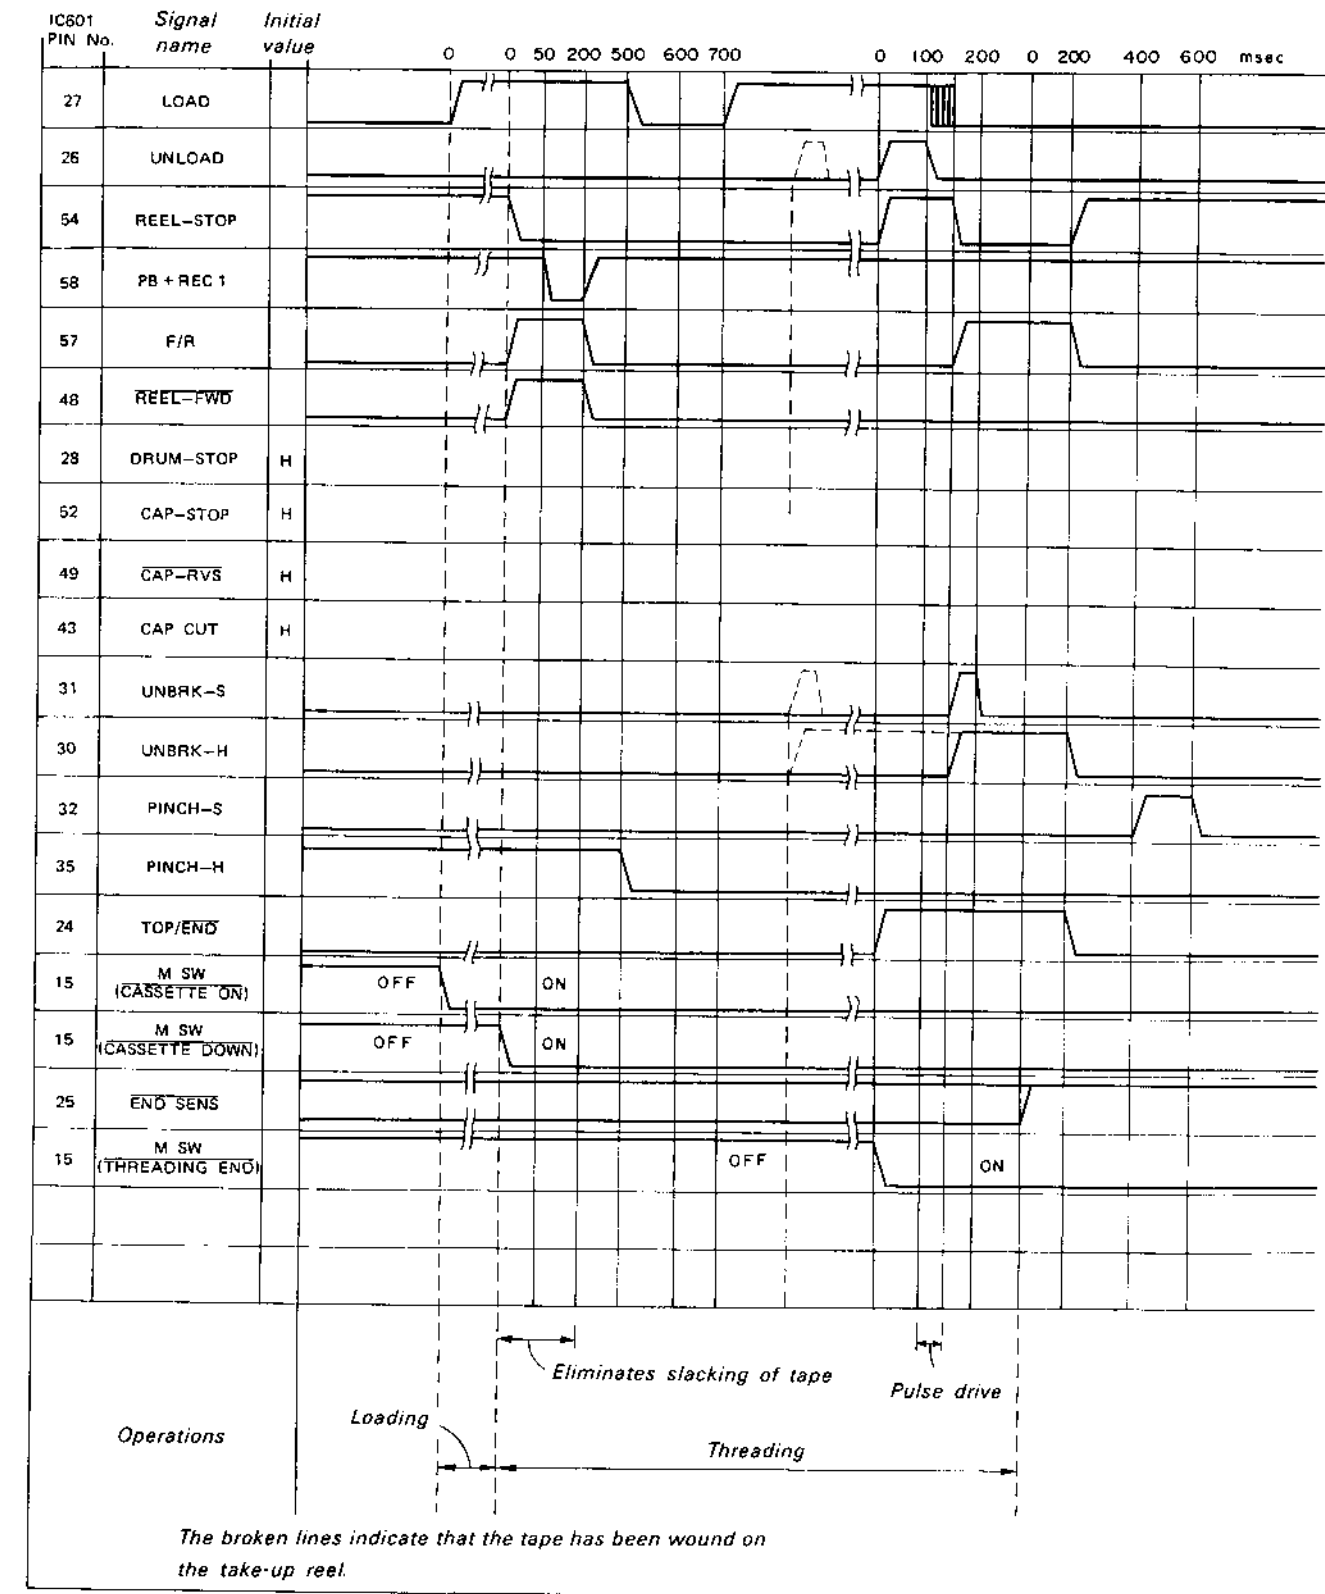


Fig. 3-2. Loading operation timing chart

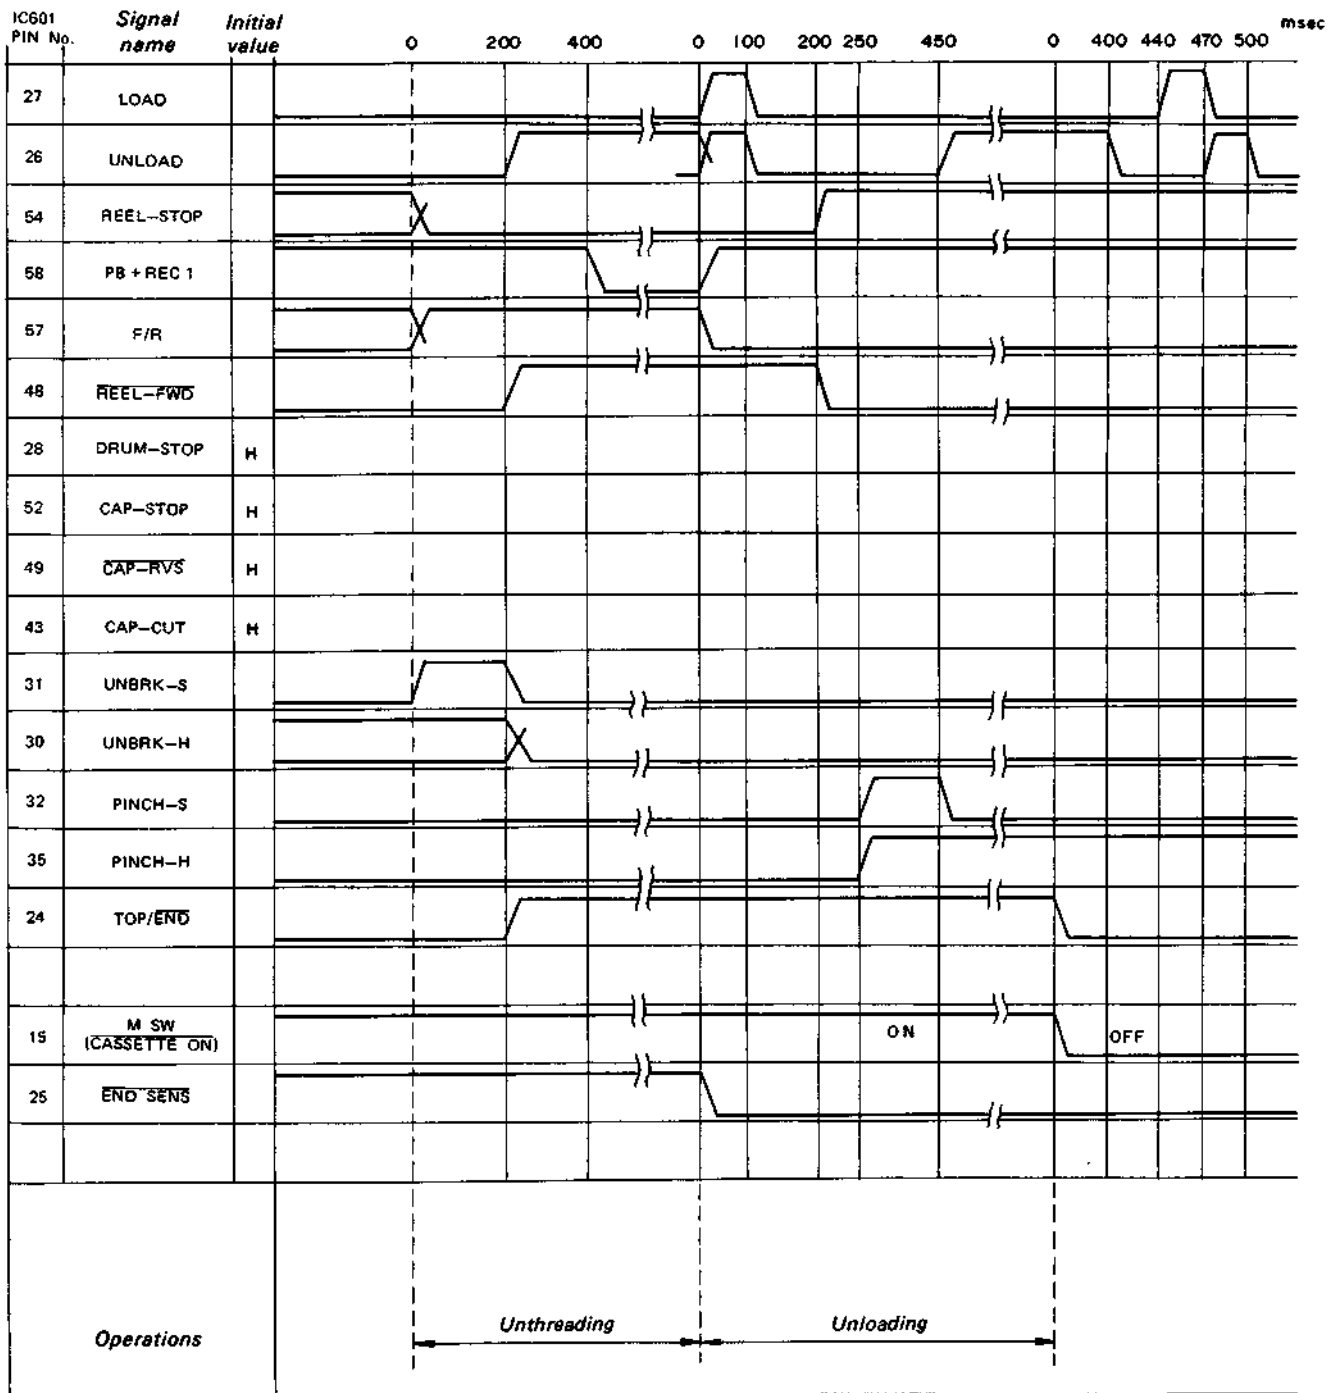


Fig. 3-3. Unloading operation timing chart

2-3. MODE TRANSITION CHANGE

Transition to the PB, REC, FF, REW, CUE, REV, and PB PAUSE modes is described. See the block diagram in Fig. 2-1.

1. PLAY Mode

- 1) By pressing the PB button, the required voltage (approx. 2V) is input to pin ⑬ of the microcomputer (IC601) to set up the PLAY mode. First, the mute signals of audio and video are output from pins ⑤ and ⑦ in the "H" level to mute the audio and video outputs. The capstan and drum motors are then rotated. Pin ⑦ outputs PB + AUDIO DUB to notify each block that the PB mode has been set up.
- 2) Pins ⑩ and ⑪ of the microcomputer (IC601) output an unbrake signal to release reel braking. Pins ⑫ and ⑬ output a PINCH SOLENOID ON signal to press the pinch roller to the capstan.
- 3) The reel motor starts rotating. Video and audio muting is released in 2.8 and 3.3 seconds after pressing the PB button to complete the transition to the PLAY mode.

2. REC Mode

- 1) By pressing the REC button, the required voltage (approx. 3V) is input to pin ⑬ of the microcomputer (IC601) to set up the REC mode. First, the REC signal is output from pin ⑦ in the "H" level to notify the servo block that the REC mode has been set up.
- 2) The drum motor, capstan motor, reel motor, pinch solenoid, and brake solenoid operate in the same sequence as that in the PB mode.
- 3) The level of pin ⑲ (DRUM LOCK) of the microcomputer (IC601) changes to "L", and the levels of pin ⑩ (REC. PAUSE) and of pin ⑦ (REC. PAUSE) change to both "H" successively, to start recording of CTL and video signals when the drum motor servo mechanism locks. In 200msec, the level of pin ⑥ BIAS CONT 2 changes to "H" to start recording voice signals and to complete the transition to the REC mode.

3. FF Mode

- 1) Pin ⑤ of the microcomputer (IC601) outputs an audio mute signal in the "H" level to mute the audio output when the FF button is pressed. At the same time, the reel brake solenoid is switched ON by the output of pins ⑩ and ⑪.
- 2) In 200msec after the FF button is pressed, the level of pin ④ (REEL STOP) changes to L and that of pin ⑦ (F/R) changes to "H" for 500msec when the FF button is pressed. For 500msec, the drum rotates at the CUE speed, then changing to the FF speed. The level of pin ⑲ (DRUM STOP) changes to "L", the drum motor starts rotating, and the transition to the FF mode is completed.

4. REW Mode

In 200msec after the REW button is pressed, pin ④ (REEL FWD) is output. Except for reel motor rotation in a direction opposite that in the FF mode, operation is the same as in the FF mode.

5. Picture Search Mode

Picture search operation starts when the FF or REW button is pressed during PB operation.

- 1) The picture search (CUE) mode is set up when the FF button is pressed during PL operation. The levels of pin ⑤ (AUDIO MUTE) and pin ③ (MC) of the microcomputer (IC601) both become "H", the audio output is muted, and video circuit is set up in the variable-speed PB mode.
- 2) The VD signal is inserted by outputting the VD signal generated inside the microcomputer to the video circuit from pin ⑩ (VBP). The level of pin ④ (CUE/REV) changes to L, and the capstan motor and reel motor start rotating at the picture search (CUE) speed.
- 3) In the picture search (REV) mode, the levels of pin ④ (CAP RVS) and of pin ④ (REEL FWD) change to "L" and "H" respectively, while the capstan motor and reel motor rotate in a direction opposite that of CUE.

6. FR Search (Peep Search: Skip Scan) Mode

By pressing the FF or REW button during FF or REW operation, FR search operation continues while the button is kept pressed.

- 1) The levels of pins ⑤ (AUDIO MUTE) and ③ (MC) of the microcomputer (IC601) become "H" and "H" when the FF button is pressed during FF operation. The audio output is muted, and the video circuit sets in the variable-speed PB mode.
- 2) The VD signal generated inside the microcomputer is output to the video circuit from pin ⑩ (VBP) to insert the VD signal. The reel brake solenoid is operated instantaneously by the output of pins ⑩ and ⑪ to reduce the reel rotation speed. Then pin ⑦ (F/R) is changed to the "H" level to reduce the reel motor rotation speed and to set up the FR search (CUE) mode.
- 3) In the FR search (REV) mode, the level of pin ④ (REEL FWD) is "H" and the reel motor rotates in a direction opposite that in the CUE mode.

2-4. TROUBLE DETECTION CONTROL

This function detects tape end, tape top, and abnormal stop of the take-up reel and maintains the set in a stop status.

1. Tape End and Tape Top Detection

This detection is performed by an S (tape end) sensor, T (tape top) sensor, and IC602 (LA7205), and their output is input to pin ②③ of the microcomputer (END SENS). Pin ④ (TOP/END) selects the S and T sensors, and a sensor in accordance with the operation mode is selected.

Fig. 2-4 is a circuit diagram. Both S and T sensors are of a resonance oscillation stop type, and the oscillation level is kept to approximately 8mVp-p by the internal AGC circuit.

Pin ④ of IC602 outputs a signal of the "L" level when TAPE TOP or END is detected and oscillation is stopped. The microcomputer (IC601) changes to the STOP mode after this signal is received.

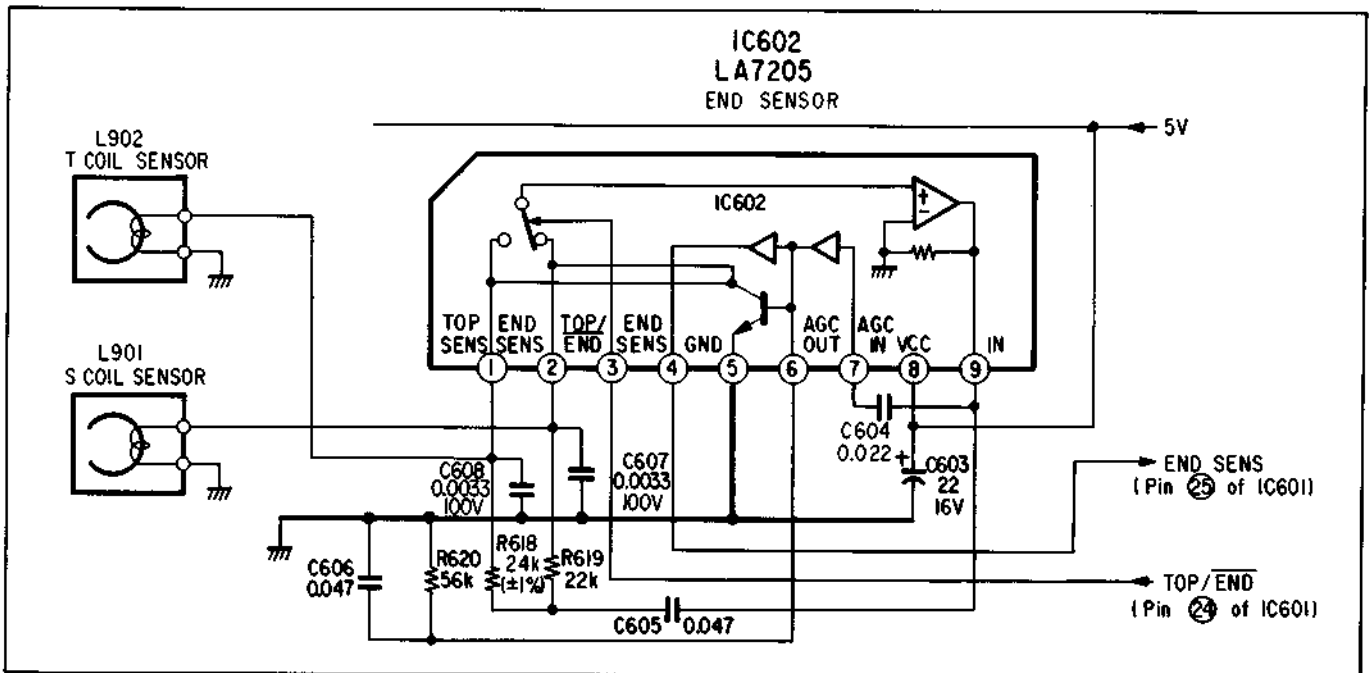


Fig. 2-4 Tape Top and Tape End Detection

2. Reel Rotation Detection

Reel rotation is detected by nine slits under the reel table passing a photointerrupter (PC001 or PC101) on the RD-20 or RD-21 Board. The photointerrupter output is directly input to pins ② (S REEL FG) and ③ (T REEL FG) of the microcomputer (IC601). Reel rotation is detected faulty and the trouble stop mode is immediately set up if the signals do not change in 1.0sec.

After stopping, only the EJECT button can be operated, and the normal mode is set up after EJECT operation is completed. See Fig. 2-5 for the mechanism construction.

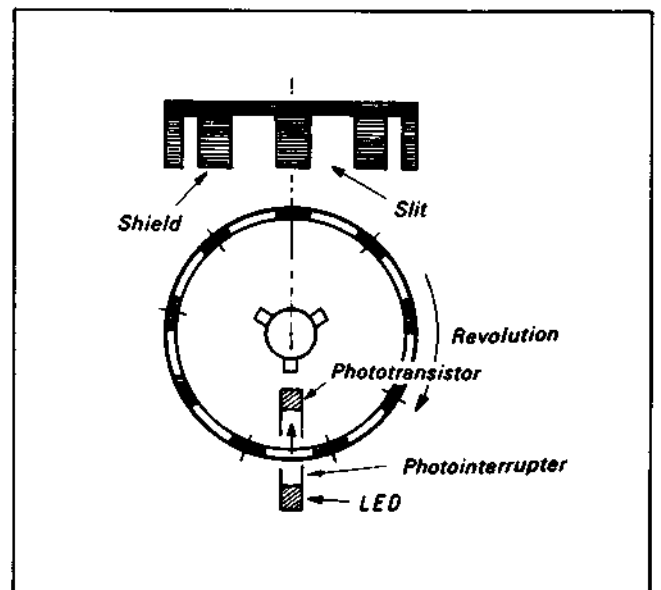


Fig. 2-5 Rotation Detection Mechanism

2-5. NOISELESS STILL PLAYBACK (SL-F60 Series Only)

Noiseless still is a phenomenon in which no noise is produced on the screen after completing the change from the PB mode to the PB-PAUSE mode.

Noiseless still playback is performed by detection of a playback RF signal and capstan motor control by the microcomputer (IC601) on the SS-34 Board.

The microcomputer (IC601) detects the level of a playback RF signal (PLAYBACK Y-FM signal) of Bch by RF SW PULSE (H when Bch is replayed) and DOC PULSE (H when the PLAYBACK Y-FM signal is low) and controls the capstan motor so that the playback RF signal level become minimum at the center of Bch. The microcomputer then stops the tape.

Next, the microcomputer outputs an A' HEAD signal to the video circuit and switches the circuit to use the A'ch video head instead of the Bch video head. By this, noiseless still playback is performed.

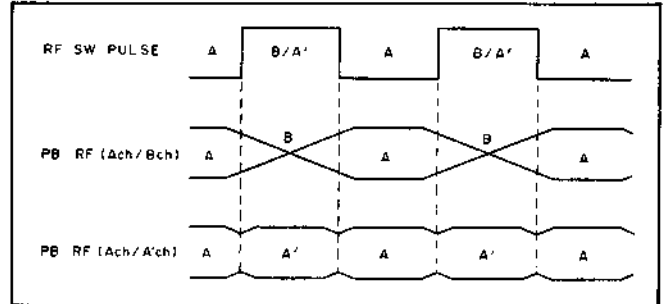


Fig. 2-6 Playback RF Signal Level

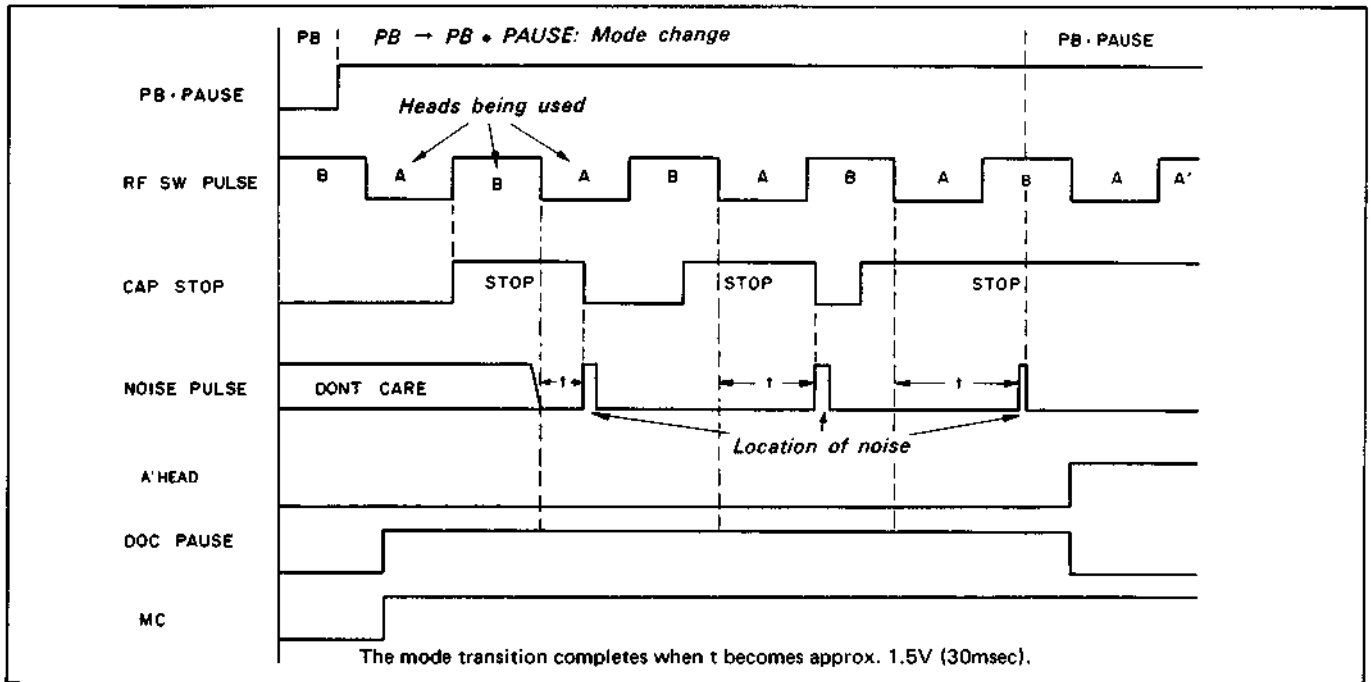


Fig. 2-7 PB to PB-PAUSE Timing Chart

1. Microcomputer (IC601) Operation

The microcomputer (IC601) synchronizes to the RF SW PULSE and changes the levels of pins ⑤ (AUDIO MUTE) and ③ (MC) to both "H" to change audio signal muting and video circuit to the variable-speed playback mode when the PAUSE button is pressed during the PB mode. The level of pin ⑧⑩ (DOC PAUSE) is changed to "H" to increase the DROP OUT detection sensitivity, and the level of pin ④③ (CAP OUT) is changed to "H" to discontinue capstan servo mechanism operation. The level of pin ④⑨ (CAP RVS) is changed to "L" for approximately 17msec to give the capstan motor a backward rotation torque to brake the capstan.

When the capstan motor stops and tape stands still, the microcomputer receives a noise pulse from the pulse detection circuit at pin ⑦③ (NOISE P) and detects the noise position. The capstan motor is pulse driven to feed

the tape in accordance with the noise deviation if noise is not at the center of Bch (a position 30msec from the rising edge of the RF SW PULSE). The noise position is then re-detected.

The level of pin ⑦⑥ (A' HEAD) is changed to "H" and the video signal is played back by the A and A'ch heads when noise comes to the center of Bch by repeating pulse driving as mentioned above to set up a noiseless still playback mode. The level of pin ⑧⑩ (DOC PAUSE) is returned to "L", and the DROP OUT detection sensitivity is returned to its original level.

In pulse driving, the capstan motor is driven by changing pin ⑤② (CAP STOP) to "L" while maintaining level of pin ④⑨ (CAP RVS) to "H", and the capstan motor is braked by changing the level of pin ④⑨ (CAP RVS) to "L" while maintaining the level of pin ⑤② (CAP STOP) to "L".

2. Noise Pulse Detection Circuit

The system control microcomputer (IC601 on the SS-34 Board) cannot detect the noise position directly from DOC PULSES, and the NOISE PULSE detection circuit processes these NOISE PULSES to convert them into signals that can be handled easier by the microcomputer.

The DOC PULSE (See Fig. 2-9 (A)) from the YC-31 Board is compared in IC604 with the fixed voltage. (See Fig. 2-9 (B)). This signal is input to a pulse stretcher circuit which charges quickly, but discharges slowly, to expand the pulse width. (See Fig. 2-9 (C)). This output is input to L.P.F for integration. (See Fig. 2-9 (D)). The output is fed to the pulse stretcher circuit and L.P.F to distinguish between the pulse generated when the playback RF signal is switch-

ed and that generated by noise, using an RF SW PULSE. Next, this output signal is divided into two parts. One part is input to the positive input of the comparator, and the other, to the negative input of the comparator through the peak hold circuit. The peak hold output (See Fig. 2-9 (E)) is used as a comparison voltage, instead of the fixed voltage, in order to suppress variations of the output pulse width by level variations of the integrated waveform (See Fig. 2-9 (D)) by the L.P.F.

By this, the comparator output (Pin (7) of IC604) becomes a pulse with a certain width as shown by (F) in Fig. 2-9. This pulse is input to pin (73) of the microcomputer (IC 601) as a noise pulse.

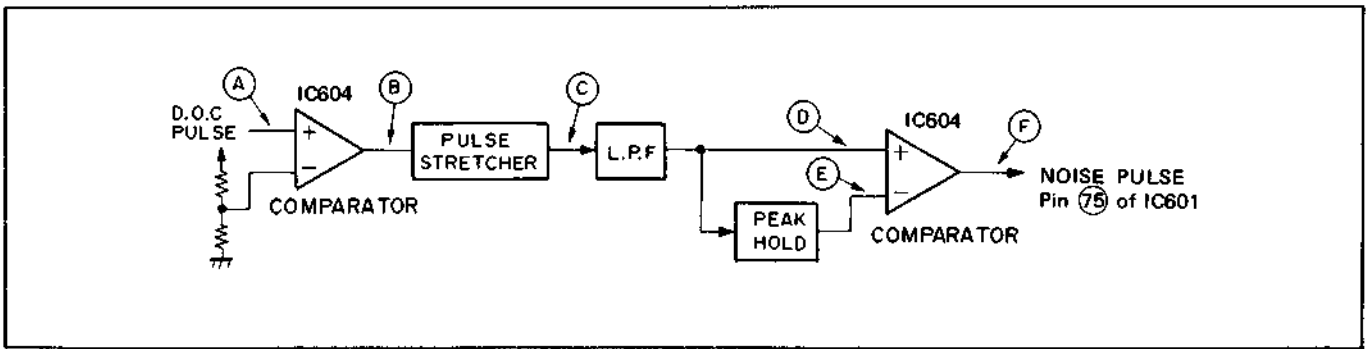


Fig. 2-8 Block Diagram of Noise Pulse Detection Circuit

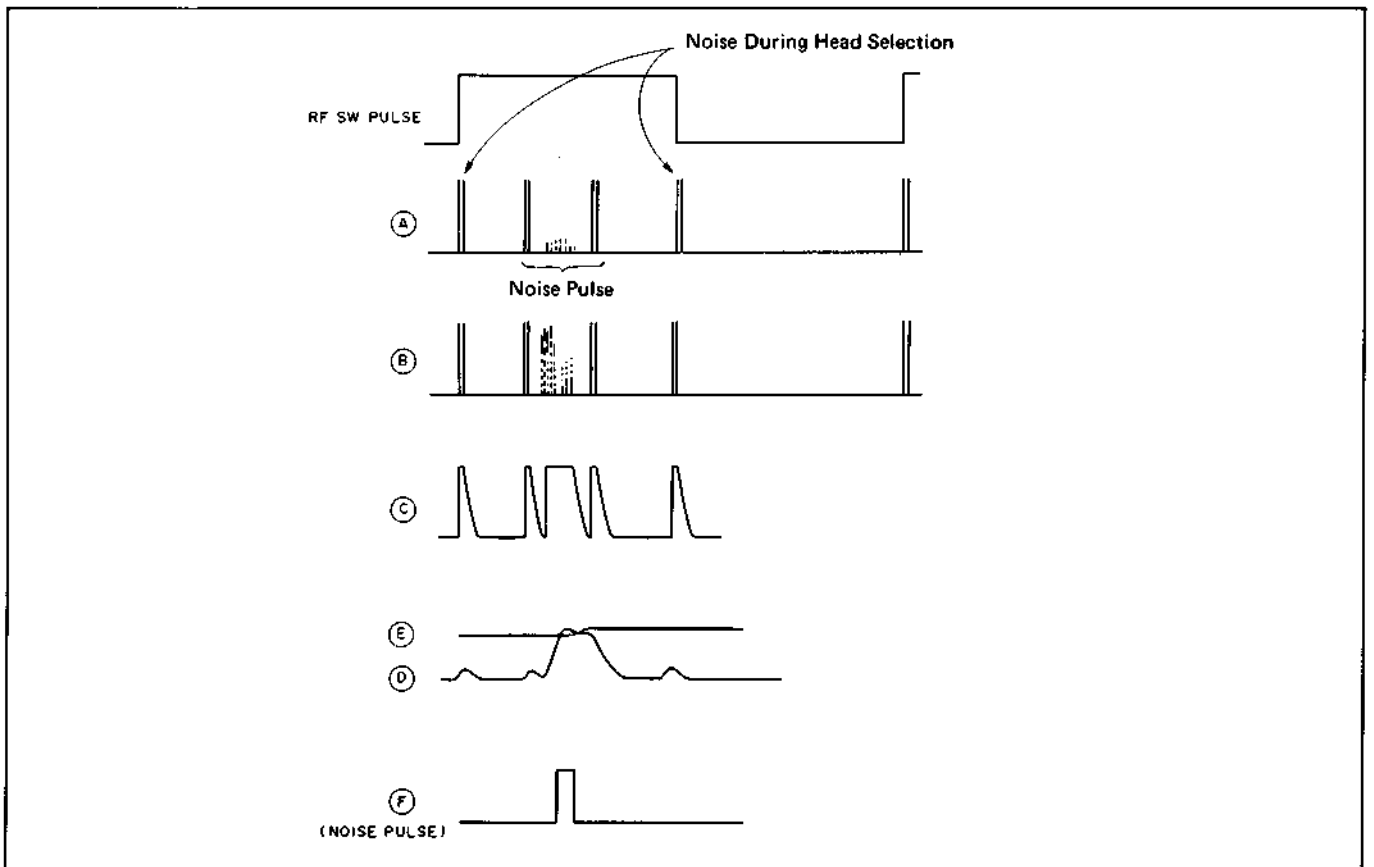


Fig. 2-9 Noise Pulse Detection Timing Chart

3. Setting of Brake Timing

The first brake timing (the time between RF SW PULSE rising edge and output of a brake pulse) is optimally set (approx. 17msec) by RV602 to reduce the transition time from the PB mode to the PB-PAUSE mode.

The voltage set by RV602 is input to pin ⑭ (FSW 2) of IC601. This pin is the input pin of the FF, REW, and STILL function switches, and the selection is performed by pin ⑮ (BRK ADJ).

Normally, the level of pin ⑮ (BRK ADJ) is "H", and Q616 is ON, while D607 is OFF. The function switch output voltage is input to pin ⑭ (FSW 2) of IC601. The level of pin ⑮ changes to "L" only immediately after the STILL button is pressed. Q616 switches OFF and D607 switches ON to input the voltage set by RV602 to pin ⑭.

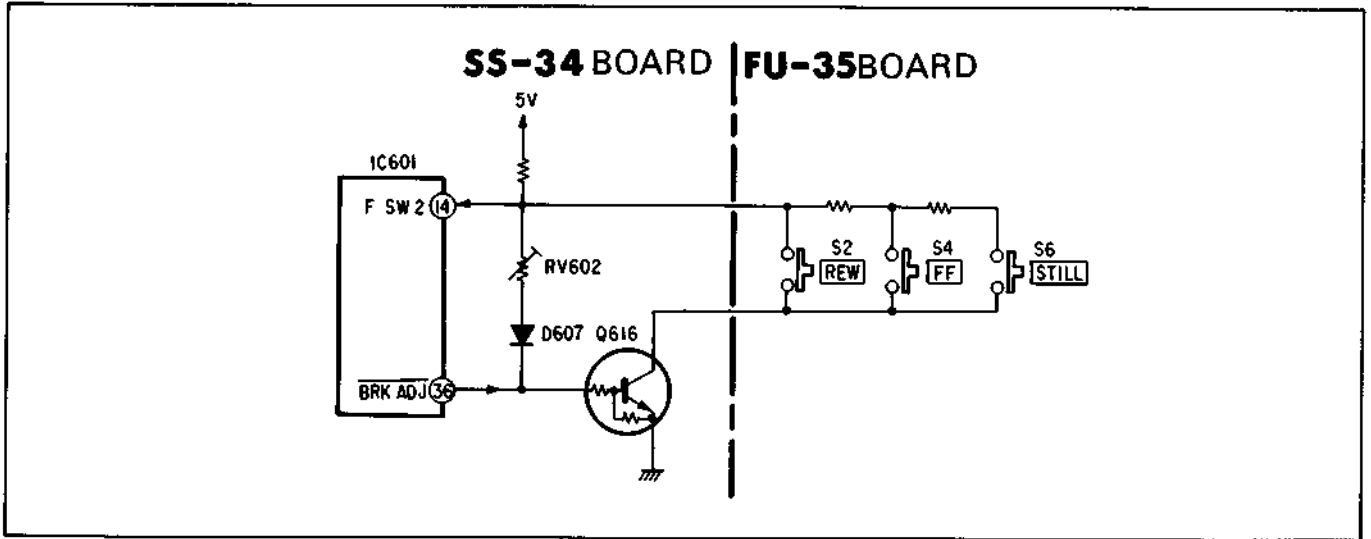


Fig. 2-10

4. Setting Brake Pulse Width

The width of the first brake pulse during the transition from the PB mode to the PB-PAUSE mode is set by RV603. When the PAUSE button is pressed and the level of CAP OUT (pin ⑬ of IC601) changes to "H", the monostable multi-vibrator (IC701) on the ES-3 Board is triggered by the rising edge of the level change of CAP OUT. The level

of pin ⑨ changes to "L" by the time set by RV603 (approx. 16msec). During this time, the levels of CAP RVS (pin ⑫ of IC601) and CAP STOP (pin ⑭ of IC601) are forcibly changed to "L" to apply braking after an inverse torque applies to the capstan motor.

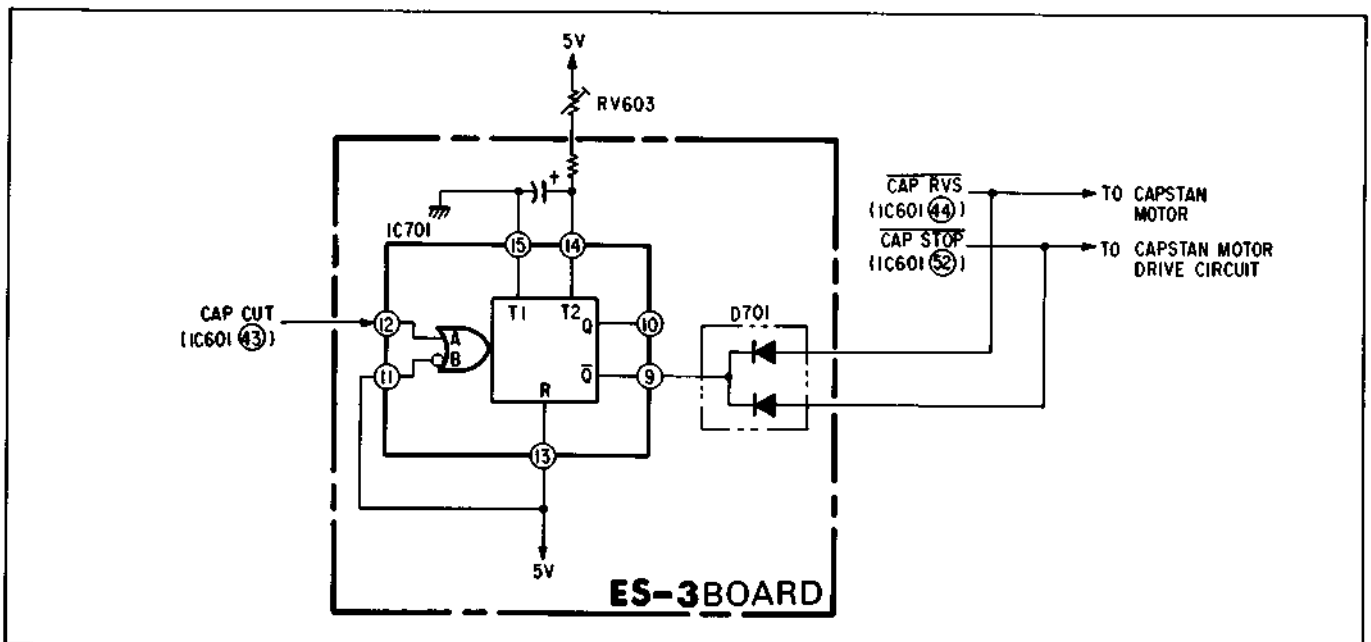


Fig. 2-11

3. SERVO CIRCUIT

The servo circuit mainly consists of IC301 on the SS-34 Board, CX-194B digital servo IC.

CX-194B contains the following four servo circuits:

- Drum speed system
- Drum phase system
- Capstan speed system
- Capstan phase system

Each servo circuit requires two inputs. The phase and time differences between these signals are measured, and error outputs are output as PWM (pulse wave modulation) signals.

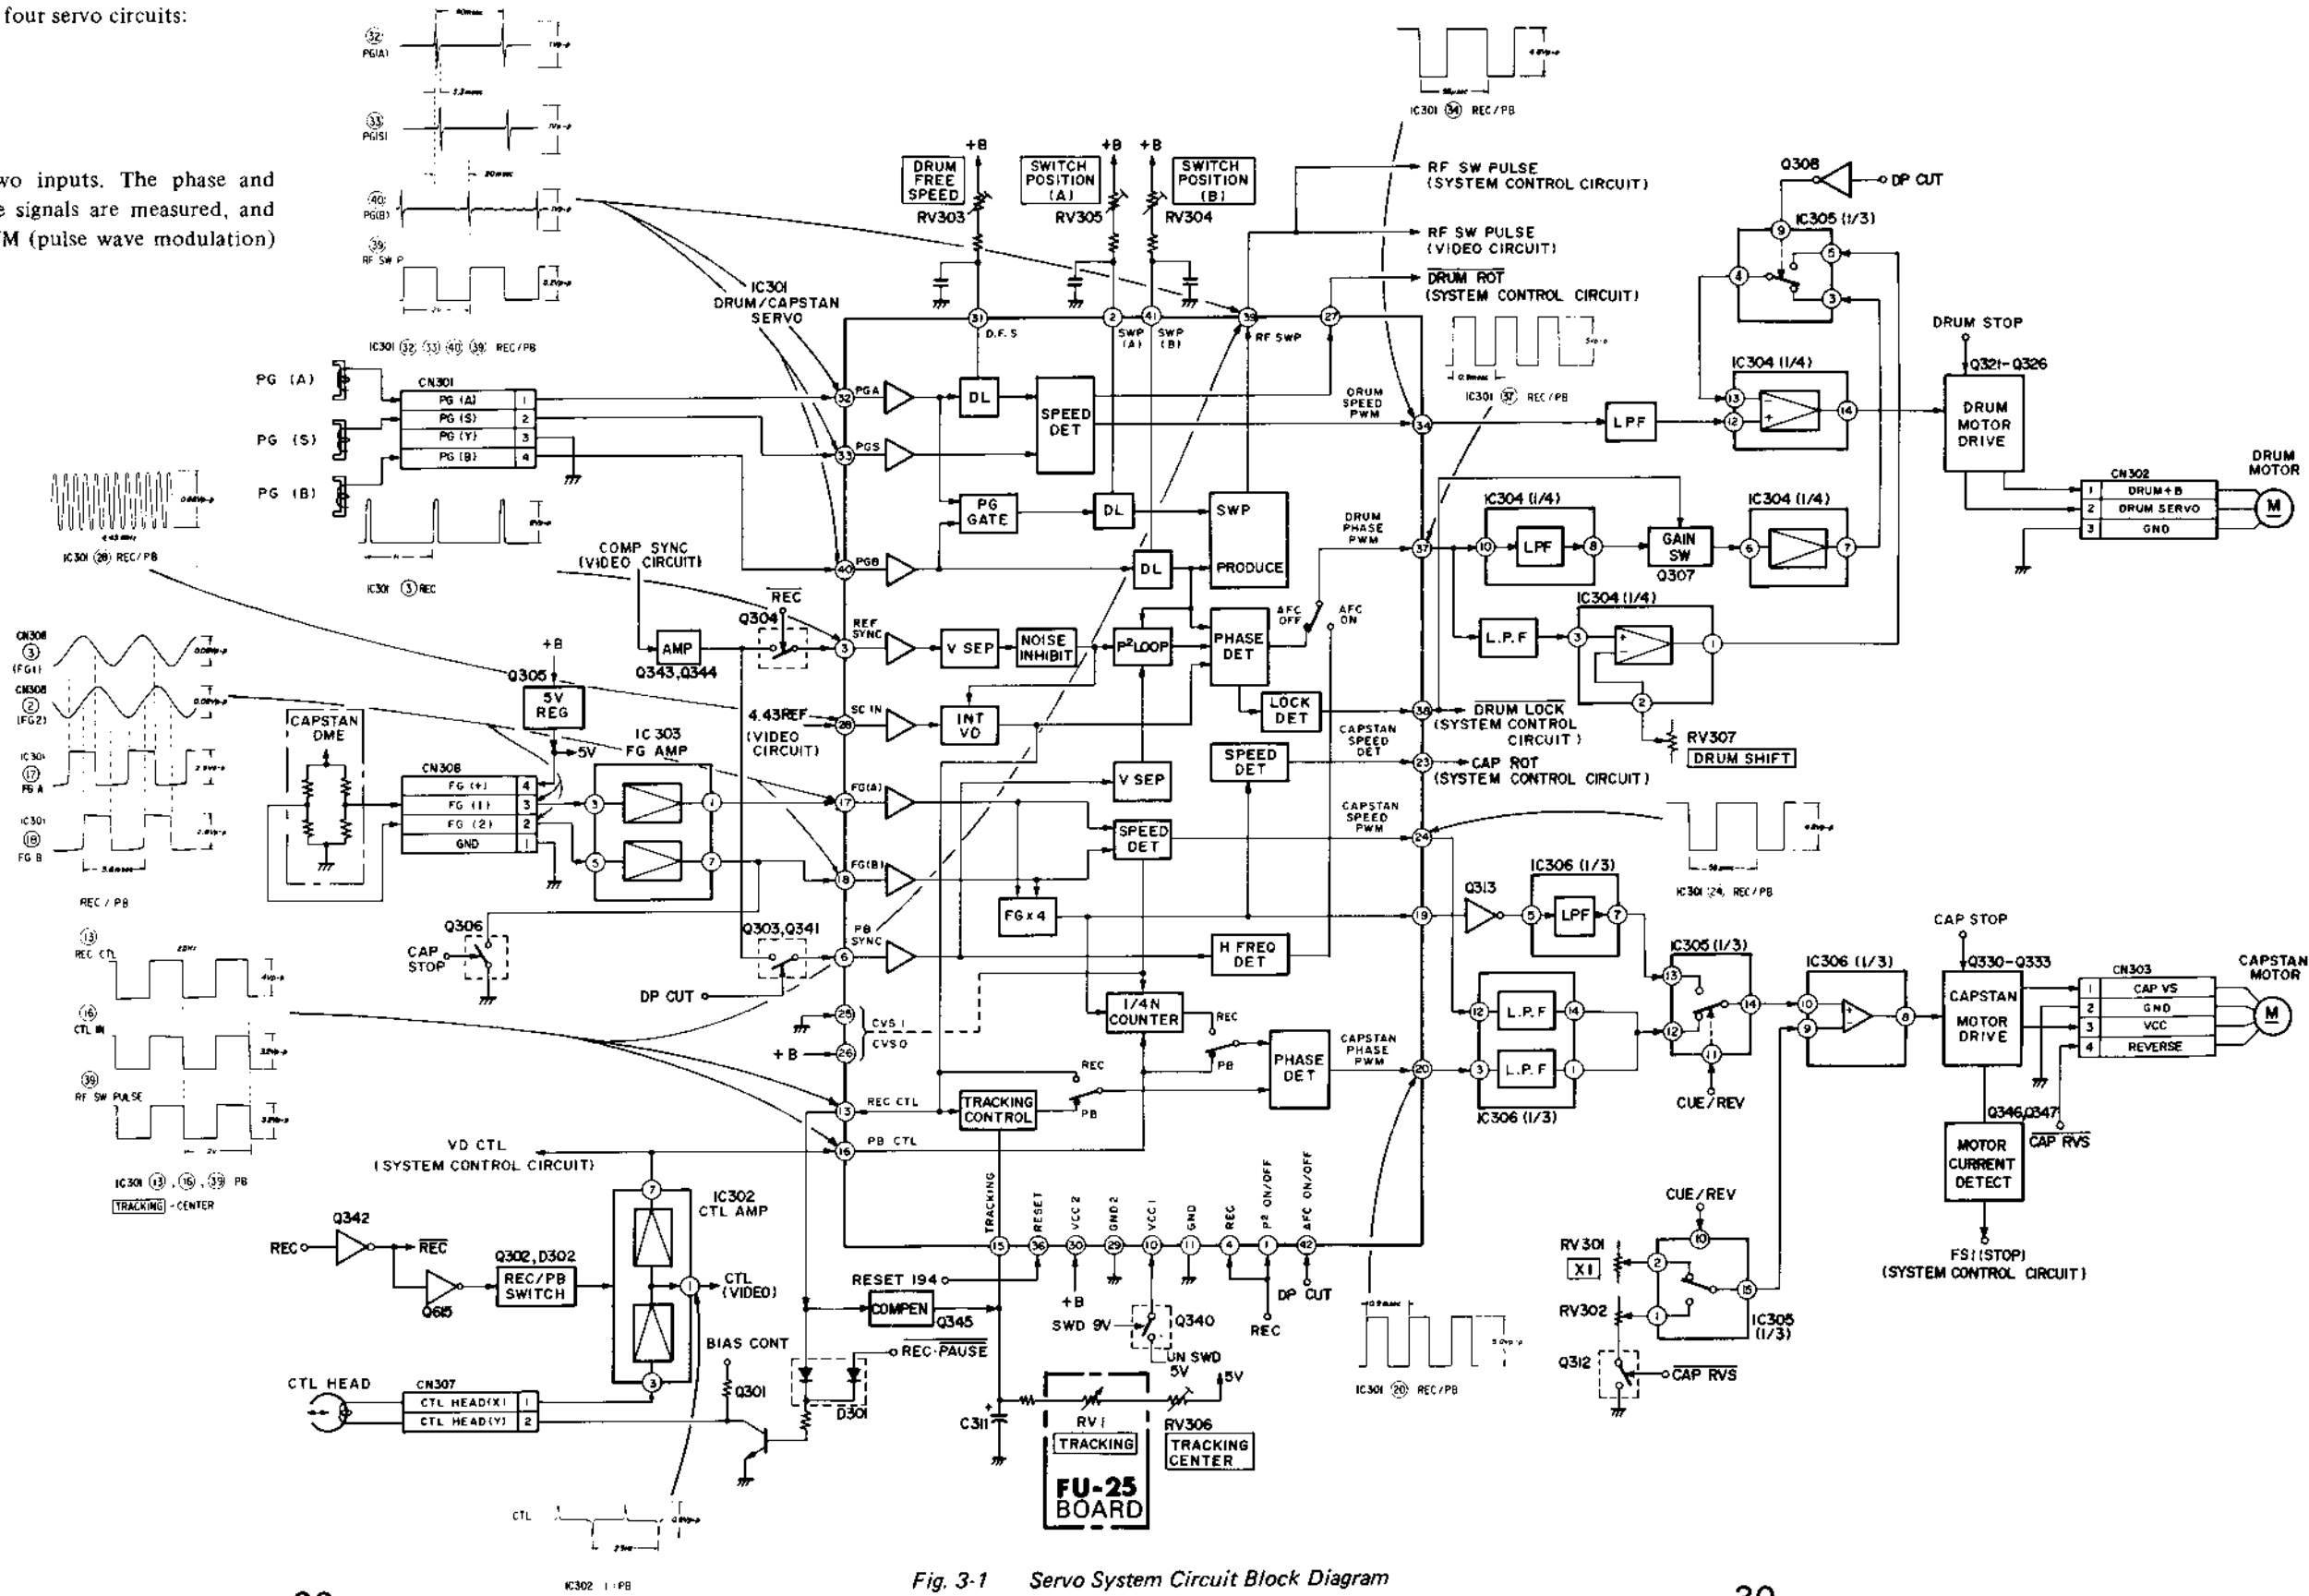


Fig. 3-1 Servo System Circuit Block Diagram

3-1. DRUM SERVO SYSTEM

The drum servo system consists of speed and phase systems. The drum speed is controlled by the FH correction circuit during CUE/REV.

3-1-1. Drum Speed System

The drum speed system controls the drum motor to obtain a constant rotation speed by detecting the time difference of two PG signals that can be obtained from PG (A) and PG (S) coils during recording and playback.

The PG (A) and (S) signals are input to pins 32 and 33 of

IC301. The time difference between these PG signals is detected by the speed detection circuit and is output to pin 34 as a drum speed PWM signal. This drum speed PWM signal is fed to a low-pass filter consisting of R365, R367, C346, and C347 and is converted to a DC voltage. After being converted to a DC voltage, the speed error signal is input to pin 12 of IC304, is mixed with the phase error signal, and is output from pin 14 as a drum motor drive signal.

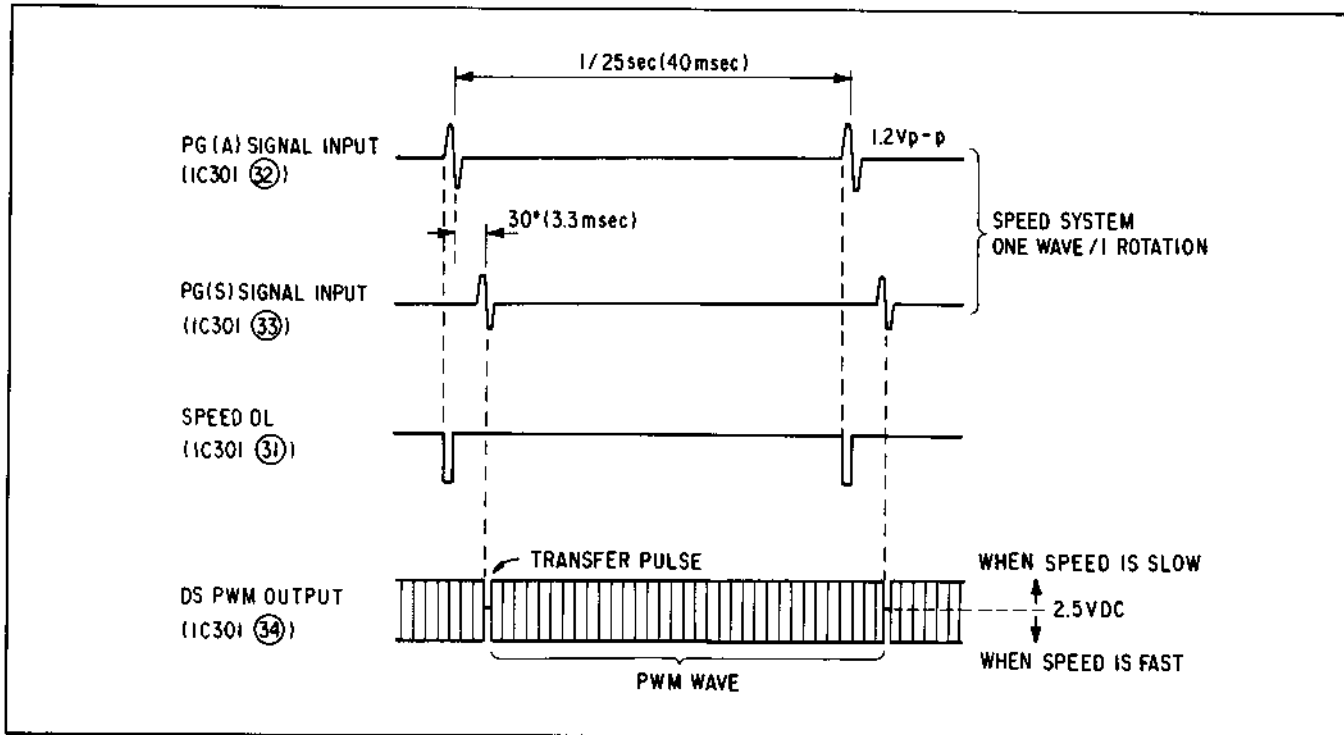


Fig. 3-2 Drum Speed System Timing Chart

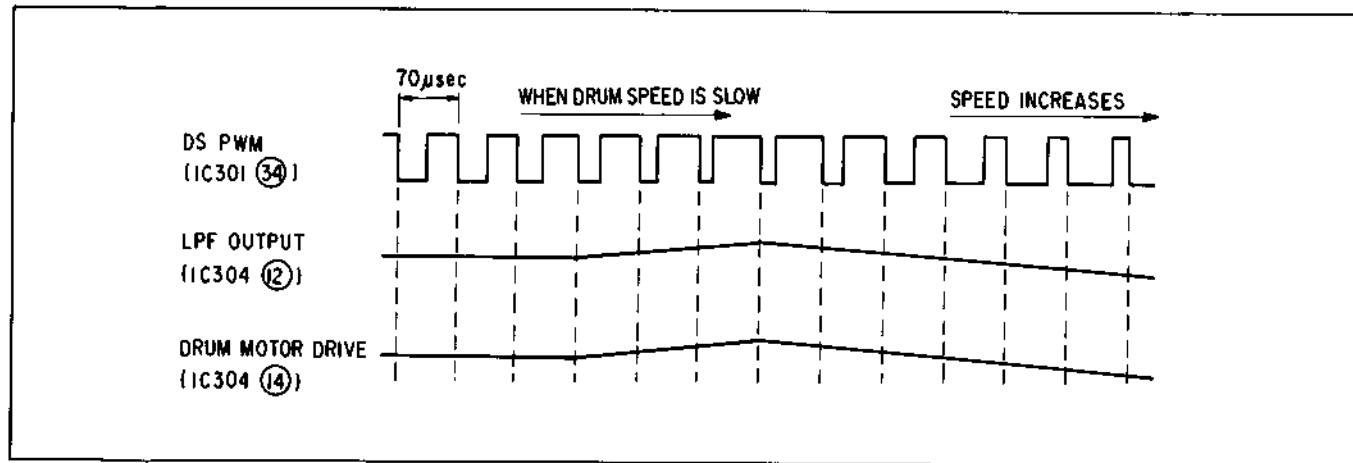


Fig. 3-3 Relationship Between DS PWM and Error Voltage

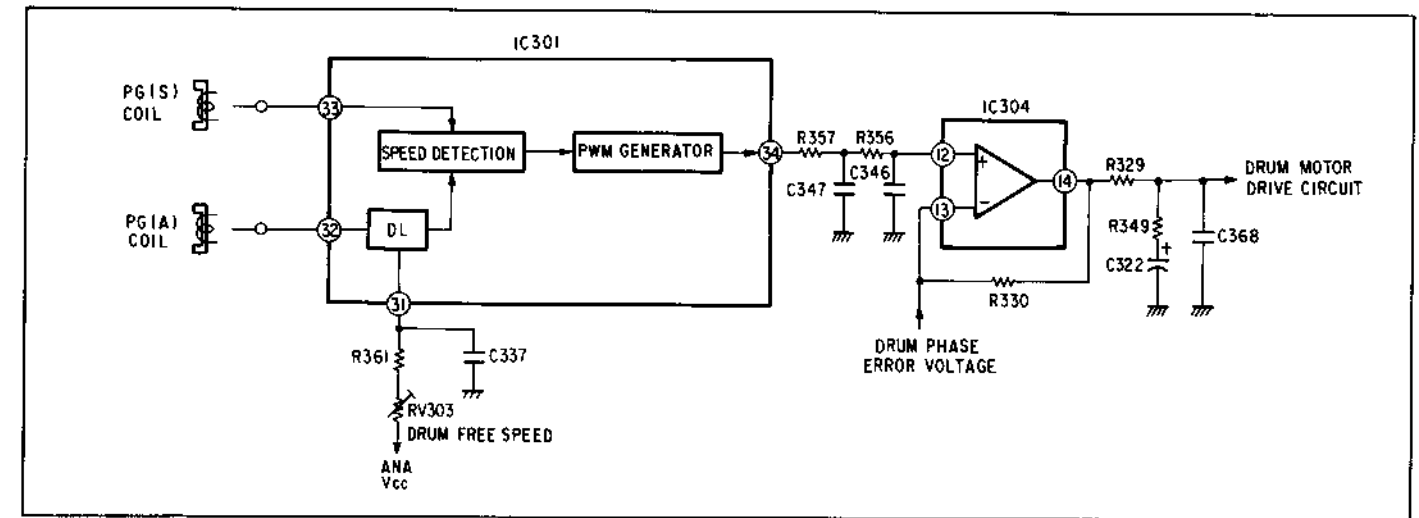


Fig. 3-4 Drum Speed System Circuit

3-1-2. Drum Phase System

The drum phase system controls the drum to make the drum rotation phase constant.

Mode	Reference Signal	Comparison Signal
Recording	Vertical SYNC signal	PG (B) signal
Playback	INT VD	PG (B) signal

Table 3-1

During REC mode

A composite synchronising signal (COMPOSITE SYNC) is input to pin 3 of IC301, and the vertical SYNC signal is separated. The X'tal oscillator of the video circuit inputs a 4.43MHz signal to pin 28 and becomes INT VD after being counted down to 1/177200. This INT VD signal is reset by the vertical SYNC signal and becomes a reference signal.

The PG (B) signal from the drum is input to pin 40 of IC301. The phases of the reference and PG (B) signals are compared by the phase detection circuit, and the signal is output to pin 37 as a drum phase PWM wave.

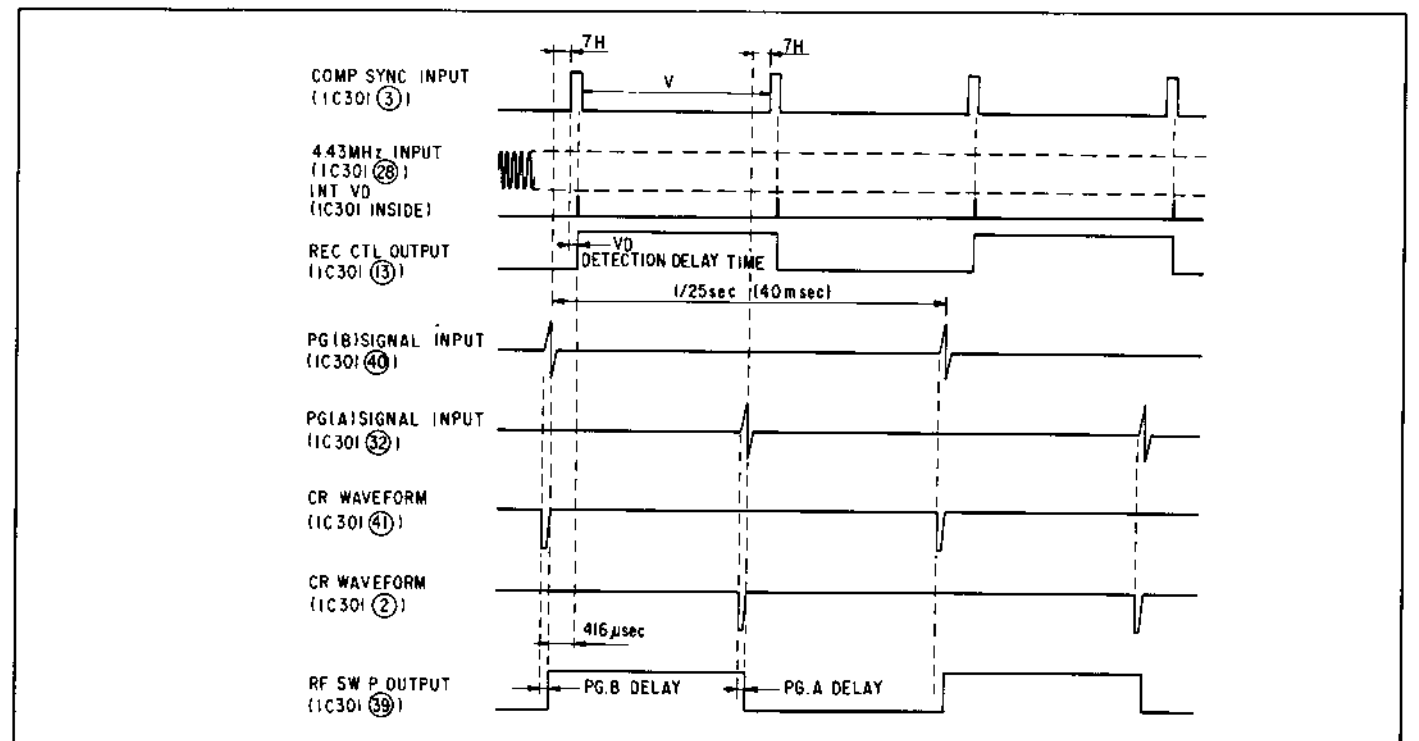


Fig. 3-5 Drum Phase System Timing Chart

During PB mode

The phases of the INT VD signal generated by counting down the 4.43MHz signal from the X'tal oscillator and of PG (B) signal are compared with the phase detection circuit, and the signals are output to pin 37 as a phase PWM wave.

The drum phase PWM wave is first converted to a DC voltage by an active low-pass filter (pins 8, 9, and 10 of IC304) and is output to pin 8 of IC304. The wave is fed to the phase compensation circuit, is input to pin 6 of IC304 to be inverted, and is fed to pin 13 of IC304 after being fed to the normal/vari-speed PB selection switch (pins 3, 4, and 5 of IC305). The wave is then mixed with the speed system voltage.

A drum lock signal is used to add R469 to R343 in parallel to increase the gain of the phase system and to quicken pulling of the phase system to improve drum rising during a change from stop to PB.

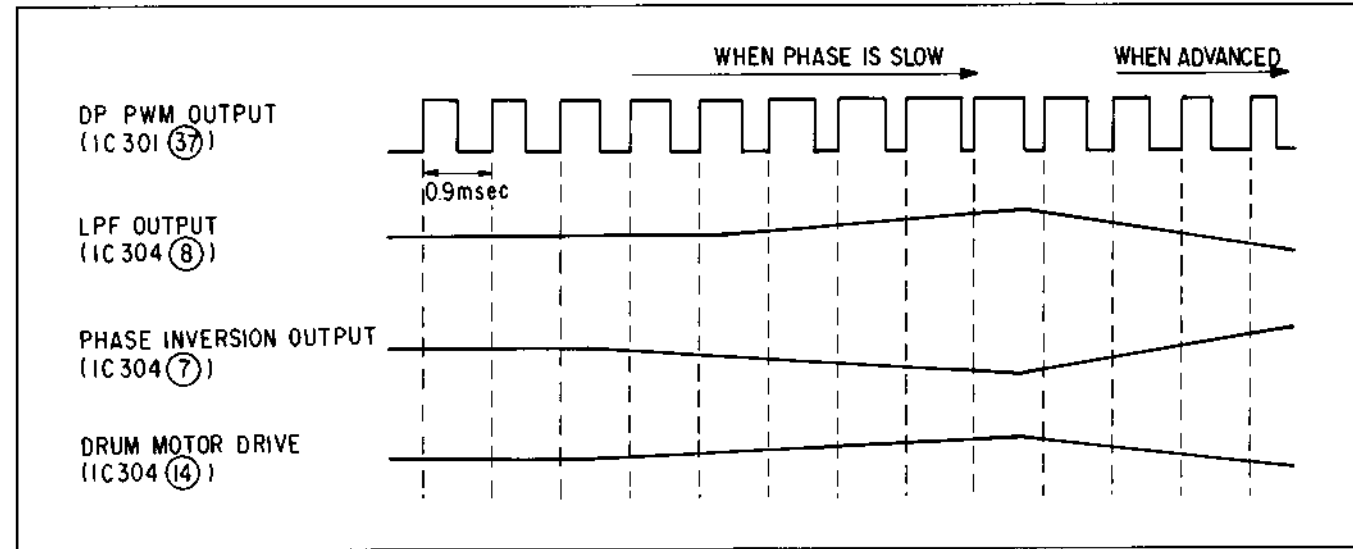


Fig. 3-6 Relationship Between DP PWM Wave and Drum Phase Error Voltage

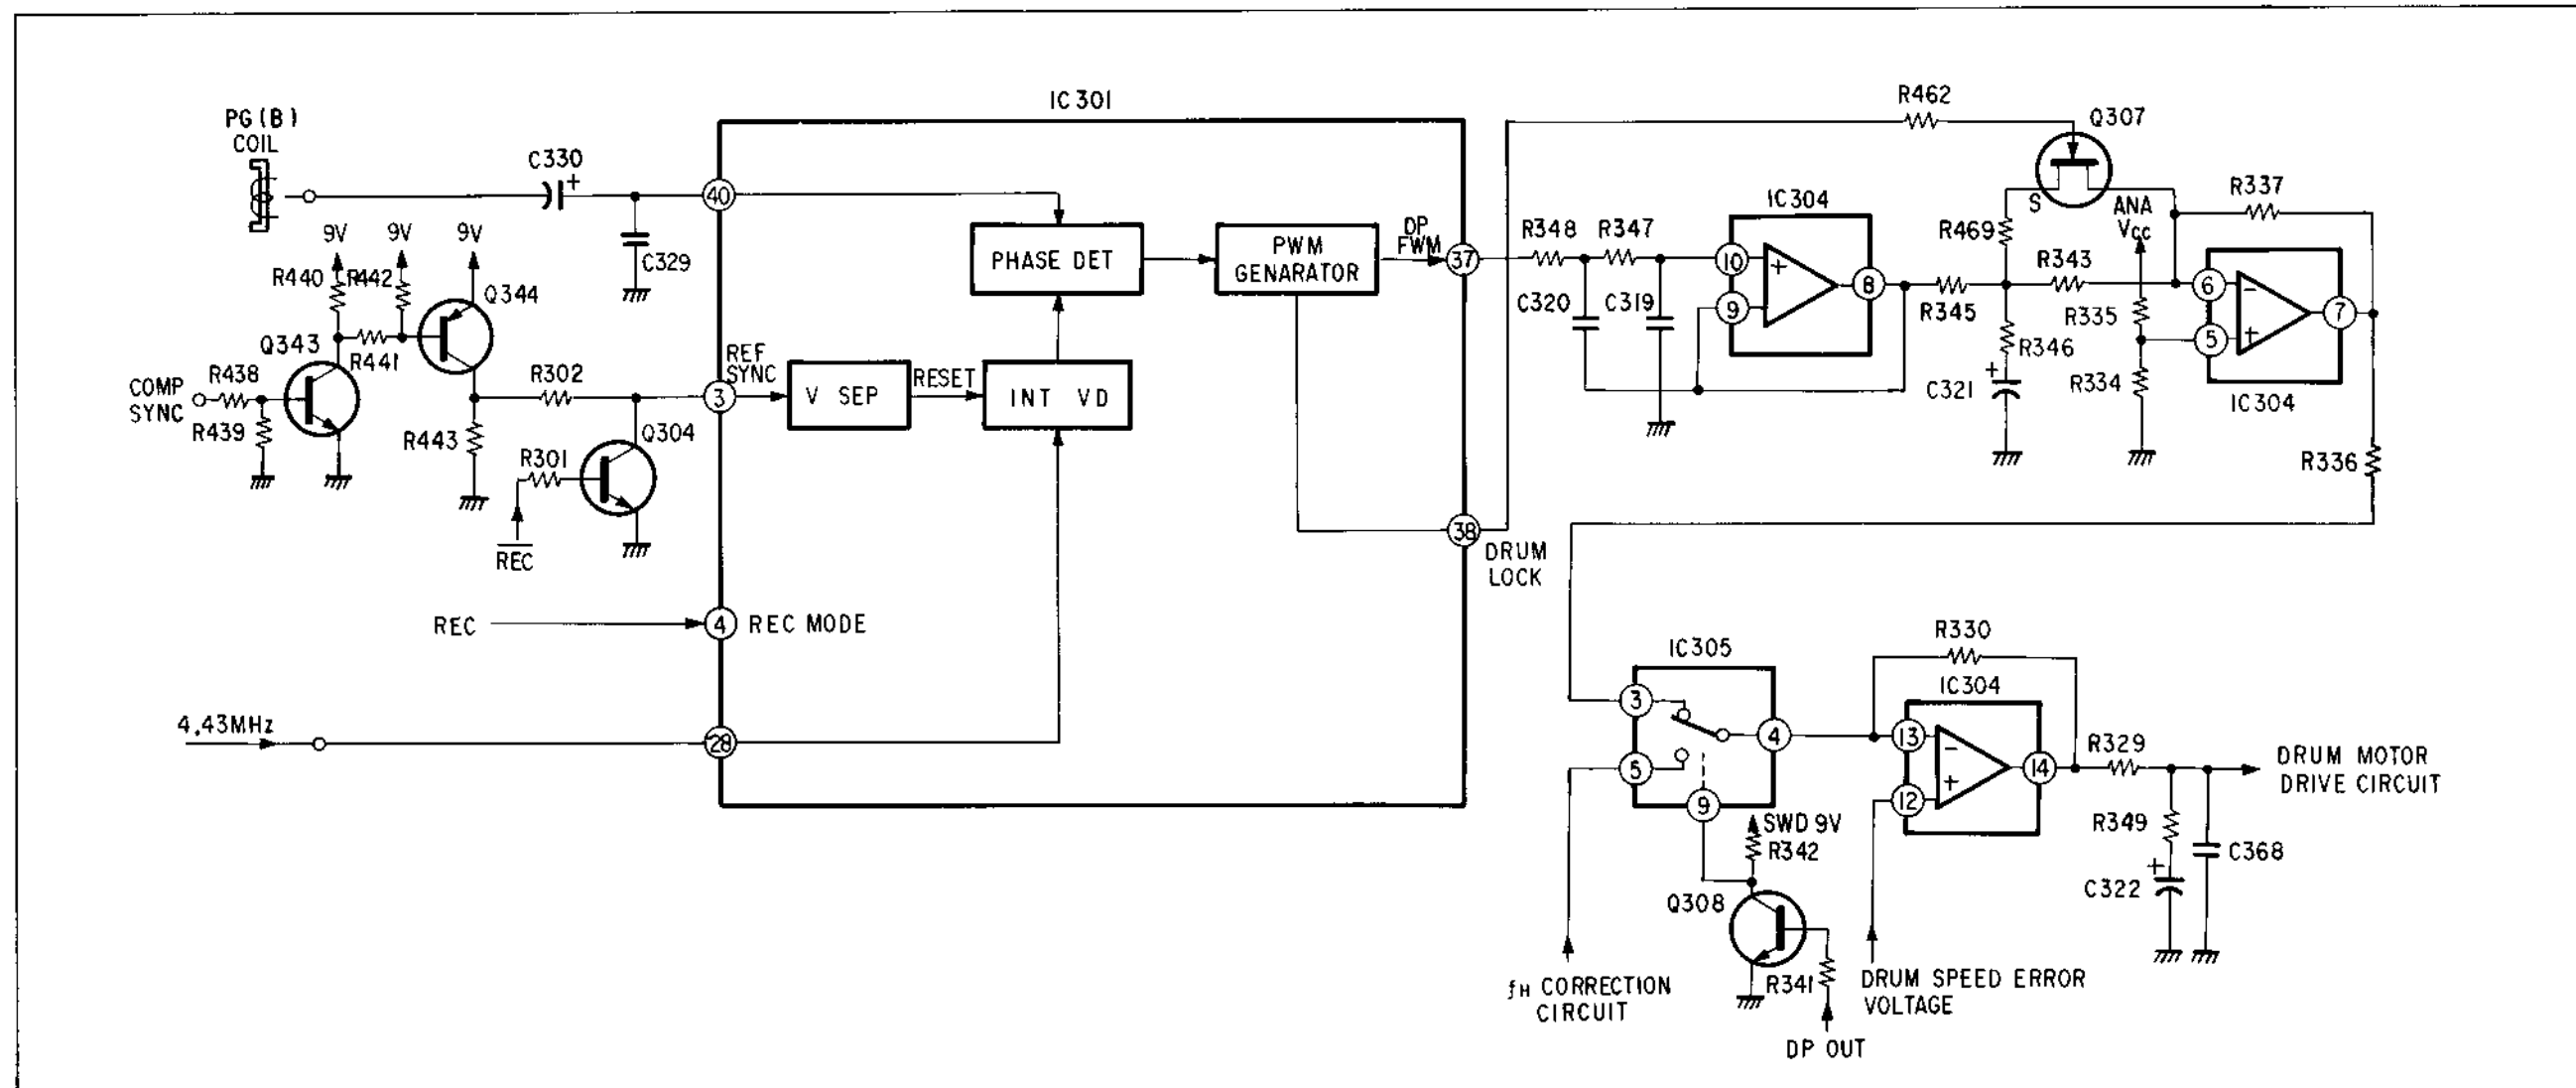


Fig. 3-7

3-1-3. fH Correction Circuit

1. fH correction during CUE/REV mode

The tape runs during picture search at a speed approximately nine times the normal playback speed and approximately 3 to 15 times during the F/R search mode (peep search). Therefore, the relative speeds of the head and tape greatly vary. As a result, fH (horizontal frequency) changes, and horizontal synchronization of the TV receiver cannot be secured. The fH correction circuit controls the head drum rotation speed so that fH remains in the TV SYNC range during picture search and FR search to correct the fH deviation and to obtain pictures that have balanced synchronization.

The L level is applied to pin ⑨ of IC305 during picture search and F/R search, and the circuit is selected to the fH correction side. The DP CUT signal switches Q341 ON and

Q303 OFF, and COMP SYNC is input to pin ⑥ of IC301. When the level H is input to pin ④, the AFC circuit of IC301 switches ON. By this, the output with a constant pulse width triggered by the horizontal SYNC signal of COMP SYNC input to pin ⑥ is output from pin ⑦ as AFC OUT.

This AFC OUT signal is integrated by R344, C325, pins ①, ②, and ③ of IC304, C323, and R332, and the duty variations of AFC OUT are output from pin ① of IC304 as a DC variation component. This DC variation component is fed to the normal/vari-speed PB selection switch (pins ③, ④, and ⑤ of IC305) and is input to pin ⑬ of IC304. The component is then mixed with the drum speed error voltage, is output to pin ⑭ as a motor drive signal to control the drum rotation speed.

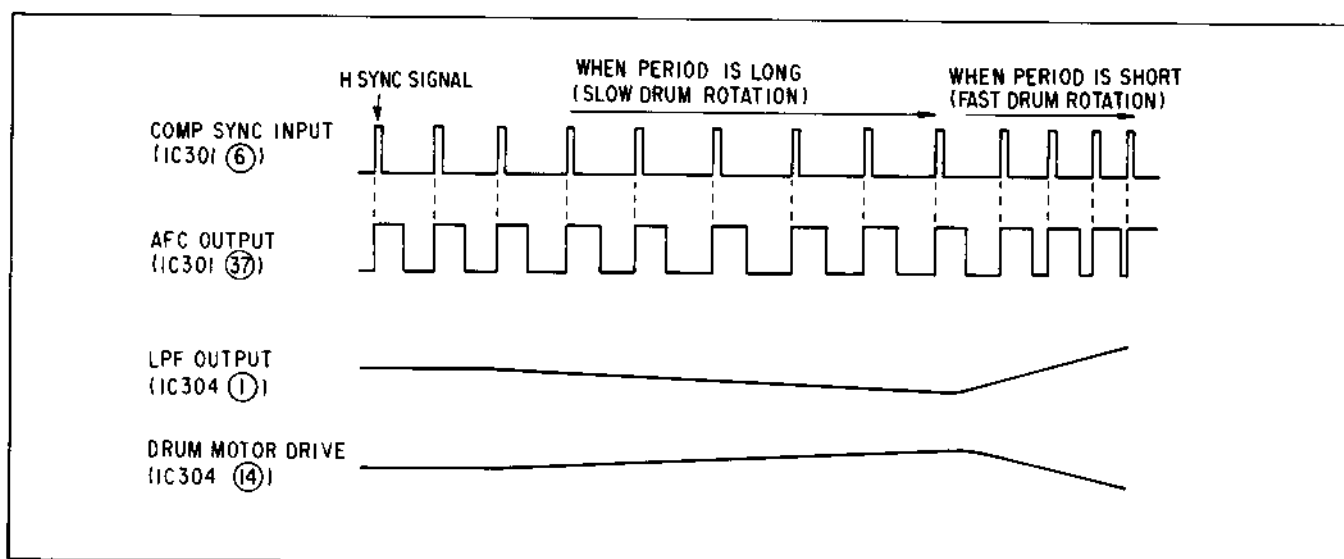


Fig. 3-8

If the COMP SYNC period during replay become long, for example, the output of pin ① of IC304 decreases, and the voltage applied the drum motor drive circuit decreases. The drum motor rotation speed increases, and the period shortens.

Thus, the fH deviation is converted to DC variations to change the drum rotation speed for correction.

2. fH correction during PB-PAUSE

(SL-F30 Series and SL-T25ME)

The same fH correction as that in the CUE/REV mode is performed.

(SL-F60 Series)

Operation is different from that for the SL-F30/T25 series because of noiseless still playback. The level of the PAUSE signal (pin ⑥ of IC601) changes to "L" and D318 and Q356 switch ON. As D318 switches ON, the level of pin ③ of IC304 changes to "L" and pin ①, to "L" (0Vdc). Therefore, instead of AFC OUT of the output of pin ⑦ of IC301 being cut, the fixed voltage obtained by dividing the V (+) FG power voltage by RV310 and R331 is input to pin ⑬ of IC304 and is mixed with the drum speed error voltage for fH correction. D320 compensates the temperature characteristic.

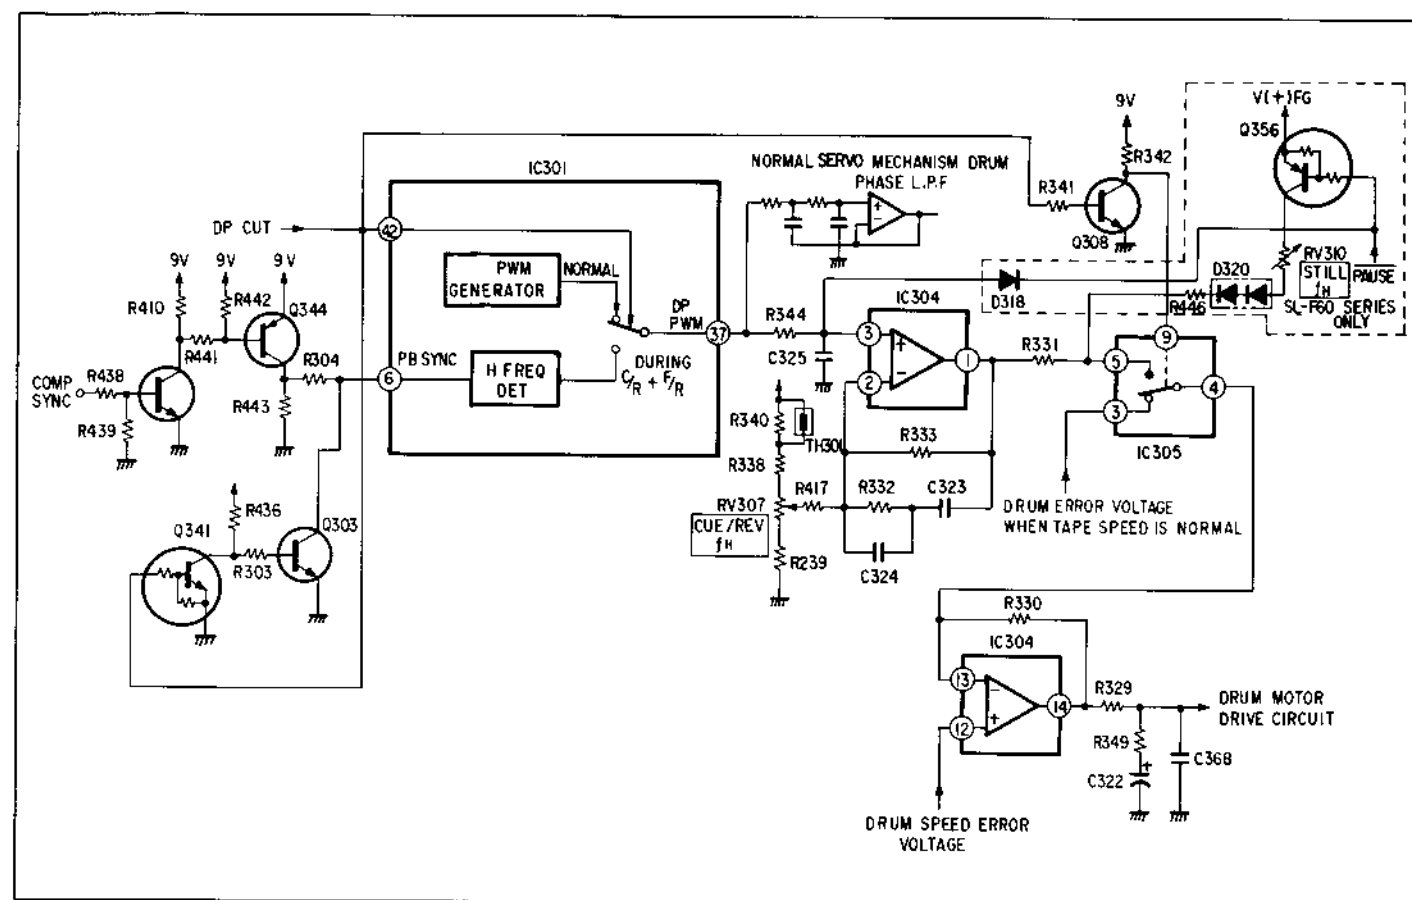


Fig. 3-9 Drum fH Correction Circuit

3-2. CAPSTAN SERVO SYSTEM

As in the drum servo system, the capstan servo system consists of a speed and phase systems and controls the tape speed so that the video track and video head positions are constant.

3-2-1. Capstan Speed System

This servo system detects passing time of the FG (1) and FG (2) signals from the capstan both during recording and replaying to control the capstan motor.

First, the FG signal is detected using a DME (dividing type magnet resistance element) to detect the magnetism magnetized on the capstan motor, and a sine wave is then generated.

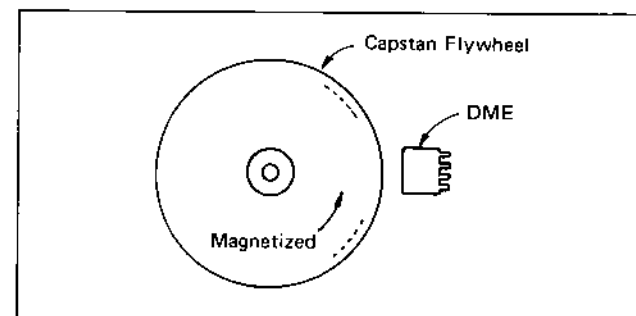


Fig. 3-10

The FG (1) and (2) signals have a phase differential of 90°. The FG outputs are small and are shaped to a rectangle by an amplifier (IC303).

IC301 measures the passing time for waveform trailing edge input to pins ⑦ and ⑧, and the time is output from pin ④ as a capstan speed PWM wave.

The PWM wave is fed to the active low-pass filter (pins ②, ③, and ④ of IC306) and is converted to a DC voltage. The wave is output to pin ④ of IC306 and is mixed with the voltage of the phase system and is applied to pin ⑩ of IC306 after passing through the selection switch (pins ②, ③, and ④ of IC305.) The wave is output from pin ⑧ as a capstan drive signal.

The level of pin ⑪ of IC305 changes to "H" during CUE/REV, and the speed servo system is selected to the CUE/REV side. The output of FG, which is four times larger, from pin ⑨ of IC301 is inverted by Q313, is fed to pin ⑩ of IC306 through the active low-pass filter (pins ⑤, ⑥, and ⑦ of IC306), and is output from pin ⑧ as a capstan drive signal, to drive the capstan motor at a speed approximately nine times faster than in normal operation. The normal and CUE/REV speeds are applied to pin ⑨ of IC306 by selecting by IC305 the capstan free speed voltage set by RV301 and RV302 to change the tape speed.

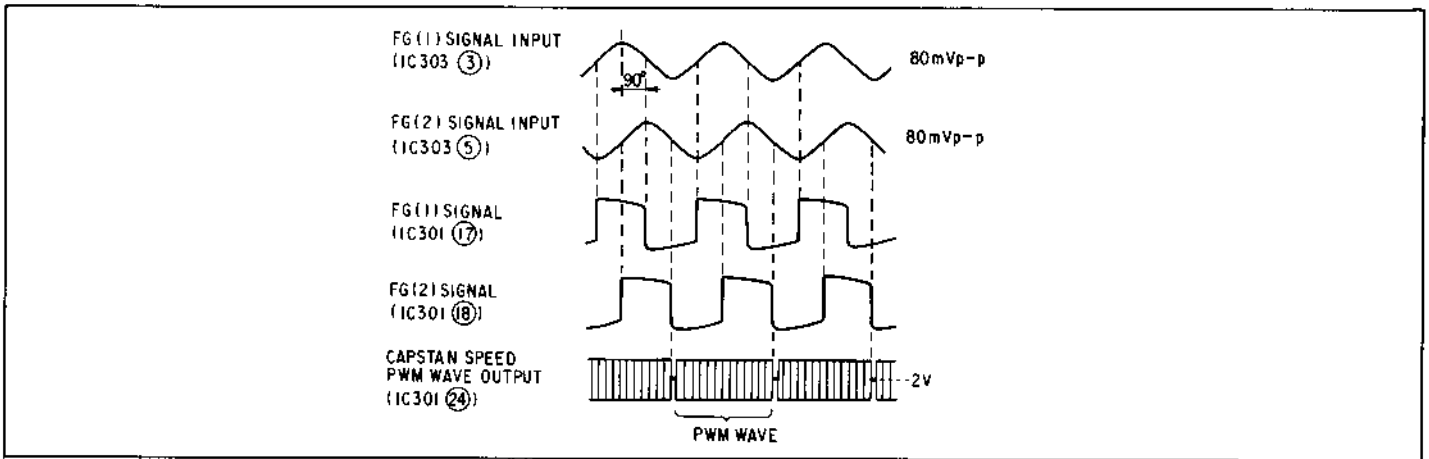


Fig. 3-11 Capstan Speed System Timing Chart

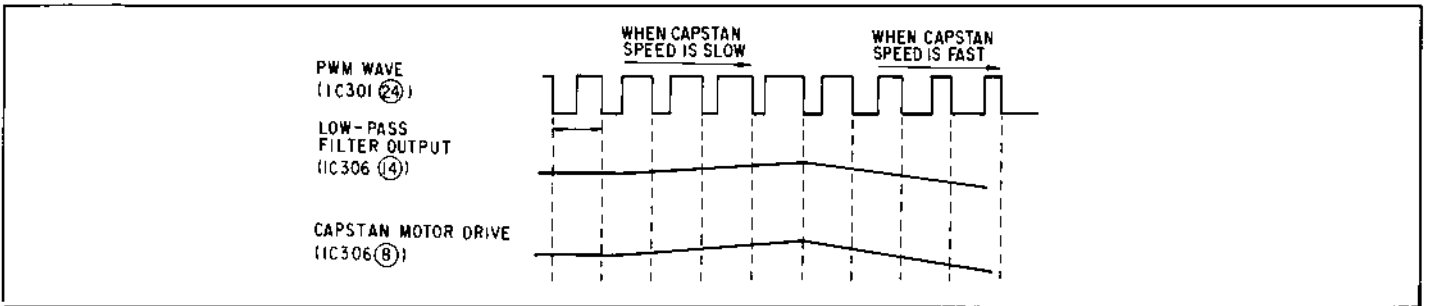


Fig. 3-12 Relationship Between PWM Wave and Capstan Speed Error Voltage

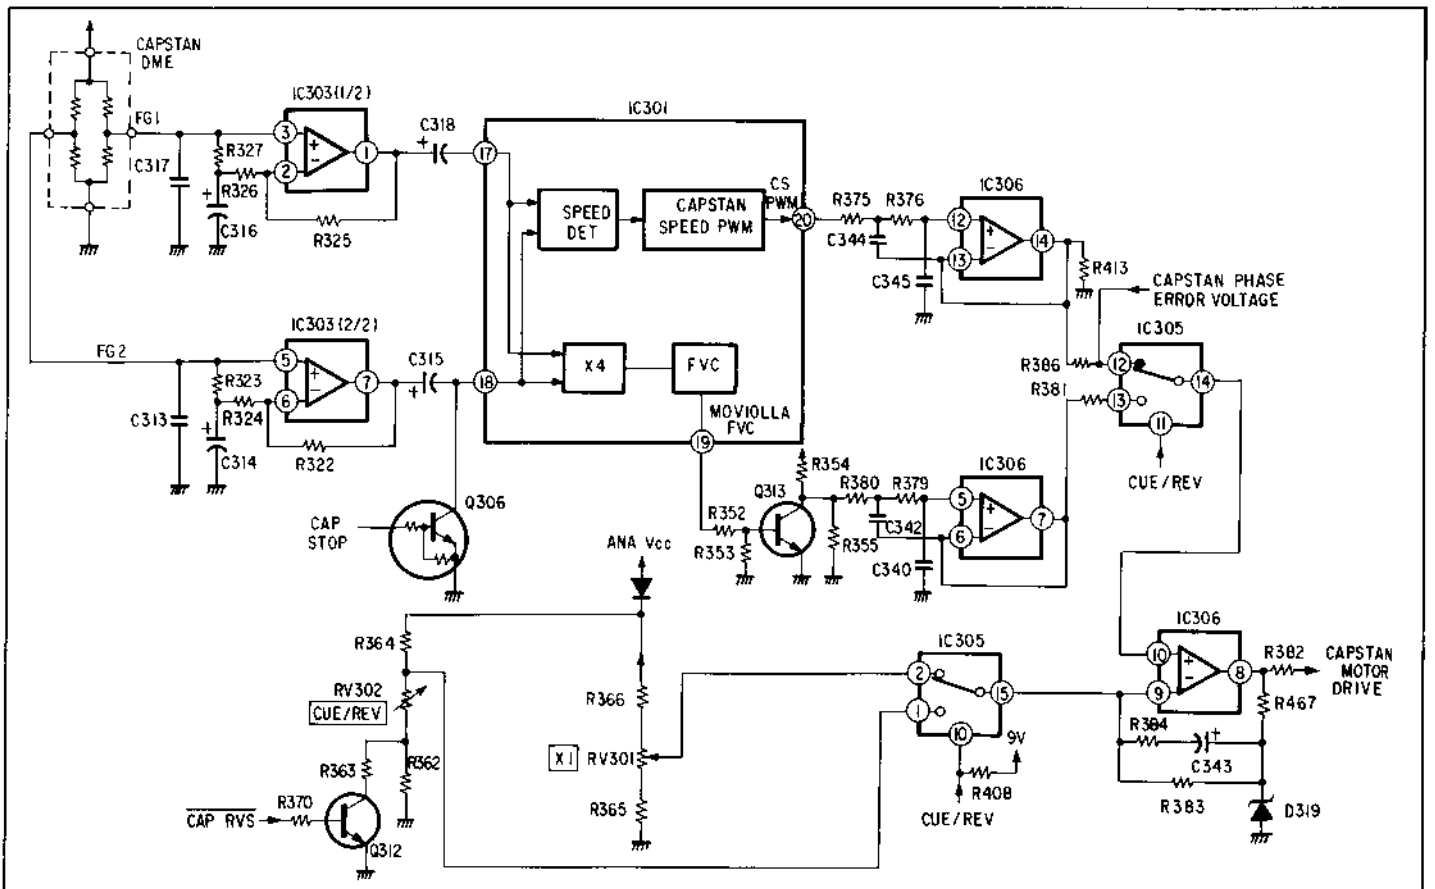


Fig. 3-13

3-2-2. Capstan Phase System

The tape speed may deviate due to temperature and aging variations if only a speed servomechanism is used during recording or replay. The tape speed is accurately controlled by phase comparing the vertical SYNC signal of video input signals and capstan FG signal using the speed servo system during recording.

During replay, the error voltage obtained by phase comparing the reference signal contained and CTL signal is applied to the capstan motor to control the tape feed phase so that the video head traces the correct track.

Mode	Reference Signal	Comparison Signal
Playback	INT VD delay signal	CTL signal
Recording	Vertical SYNC signal	FG signal

Playback mode

The phases of the PB CTL signal to be input to pin ① of IC307 as the tape position signal and INT VD counted

down from reference 4.43MHz are compared, and the result is output from pin ⑳ of IC301 as a capstan phase PWM wave.

INT VD as a reference signal is delayed by the tracking control delay circuit, and tracking is controlled by varying the delay amount by the tracking volume knob. The capstan phase PWM wave from pin ⑳ is fed to the active low-pass filter (pins ①, ②, and ③ of IC306), is converted to a DC voltage, and is output from pin ① of IC306. This capstan phase voltage is fed to the phase compensation circuit where it is mixed with the capstan speed voltage, is input to pin ⑩ of IC306, and is output from pin ⑧ of IC306 to as a capstan motor drive signal.

CUE/REV mode

The pin ③ side of IC305 switches ON to disengage the normal servomechanism to switch to the CUE/REV speed servo-mechanism. D308, R372, and D319 quicken pulling of the capstan phase system when returning from CUE/REV to PB.

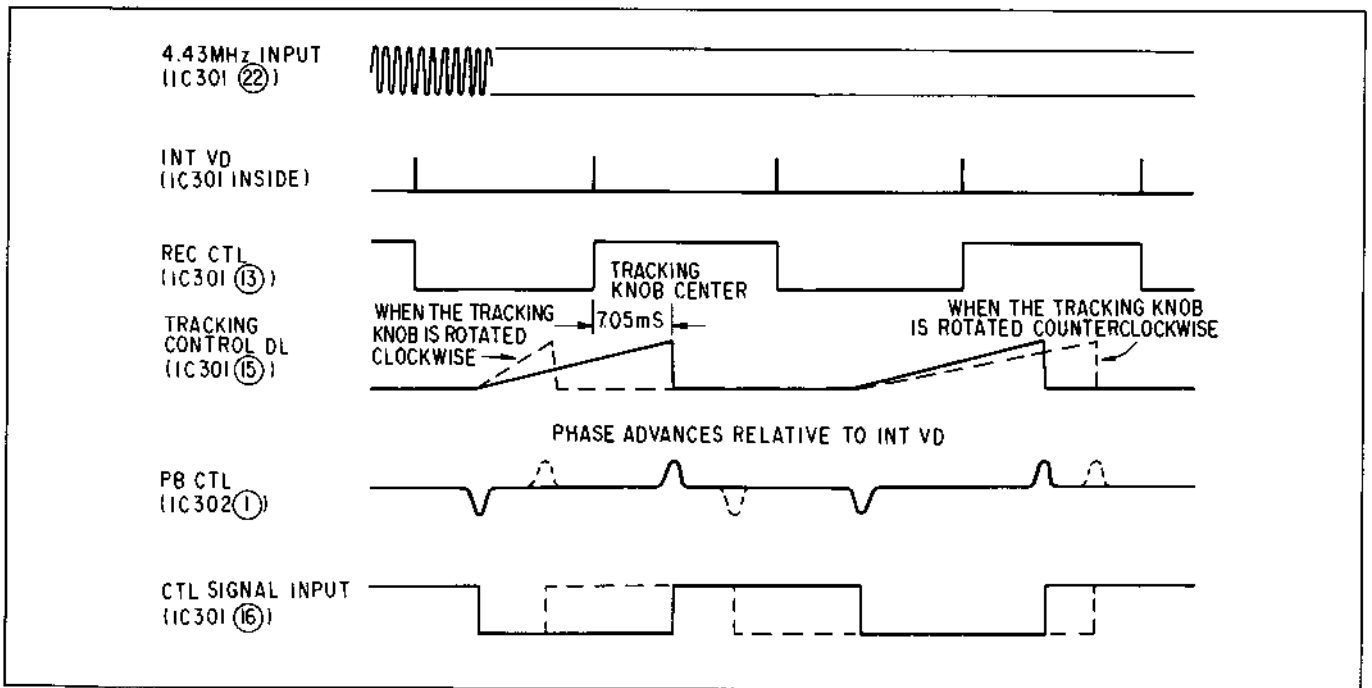


Fig. 3-14 Capstan Phase System Timing Chart (PB)

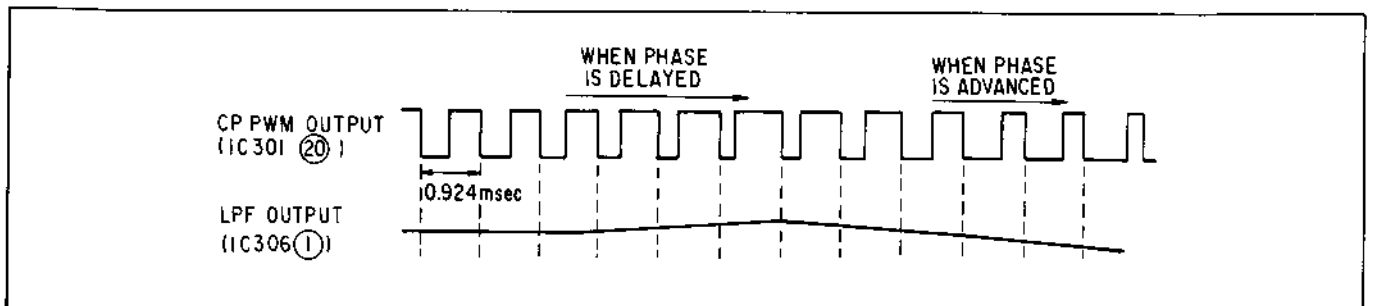


Fig. 3-15 Relationship Between CP PWM Waveform and Phase Error Voltage

REC Mode

During recording, Q304 switches OFF, COMP SYNC is input to pin ③ of IC301 to separate the vertical SYNC signal inside IC301. INT VD is reset by the vertical SYNC signal to apply external synchronization. This becomes the reference signal of the phase detection circuit inside IC301. The FG signal from the capstan is counted down inside IC301 and is input to the phase detection circuit in which the phase is compared. The result is output from pin ⑳ as the capstan phase PWM signal. INT VD is output from pin ⑬ as a REC CTL signal and is recorded on the tape.

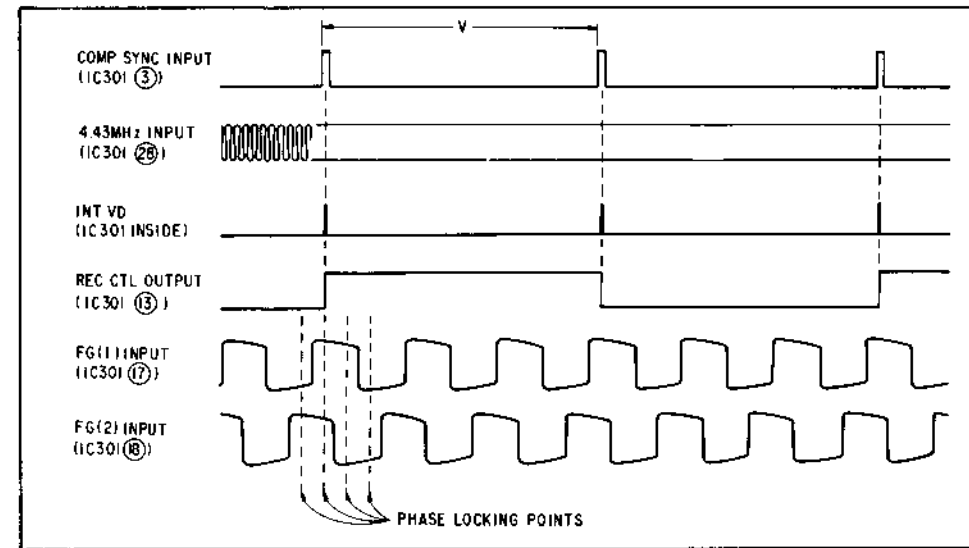


Fig. 3-16 Capstan Phase System Timing Chart (REC)

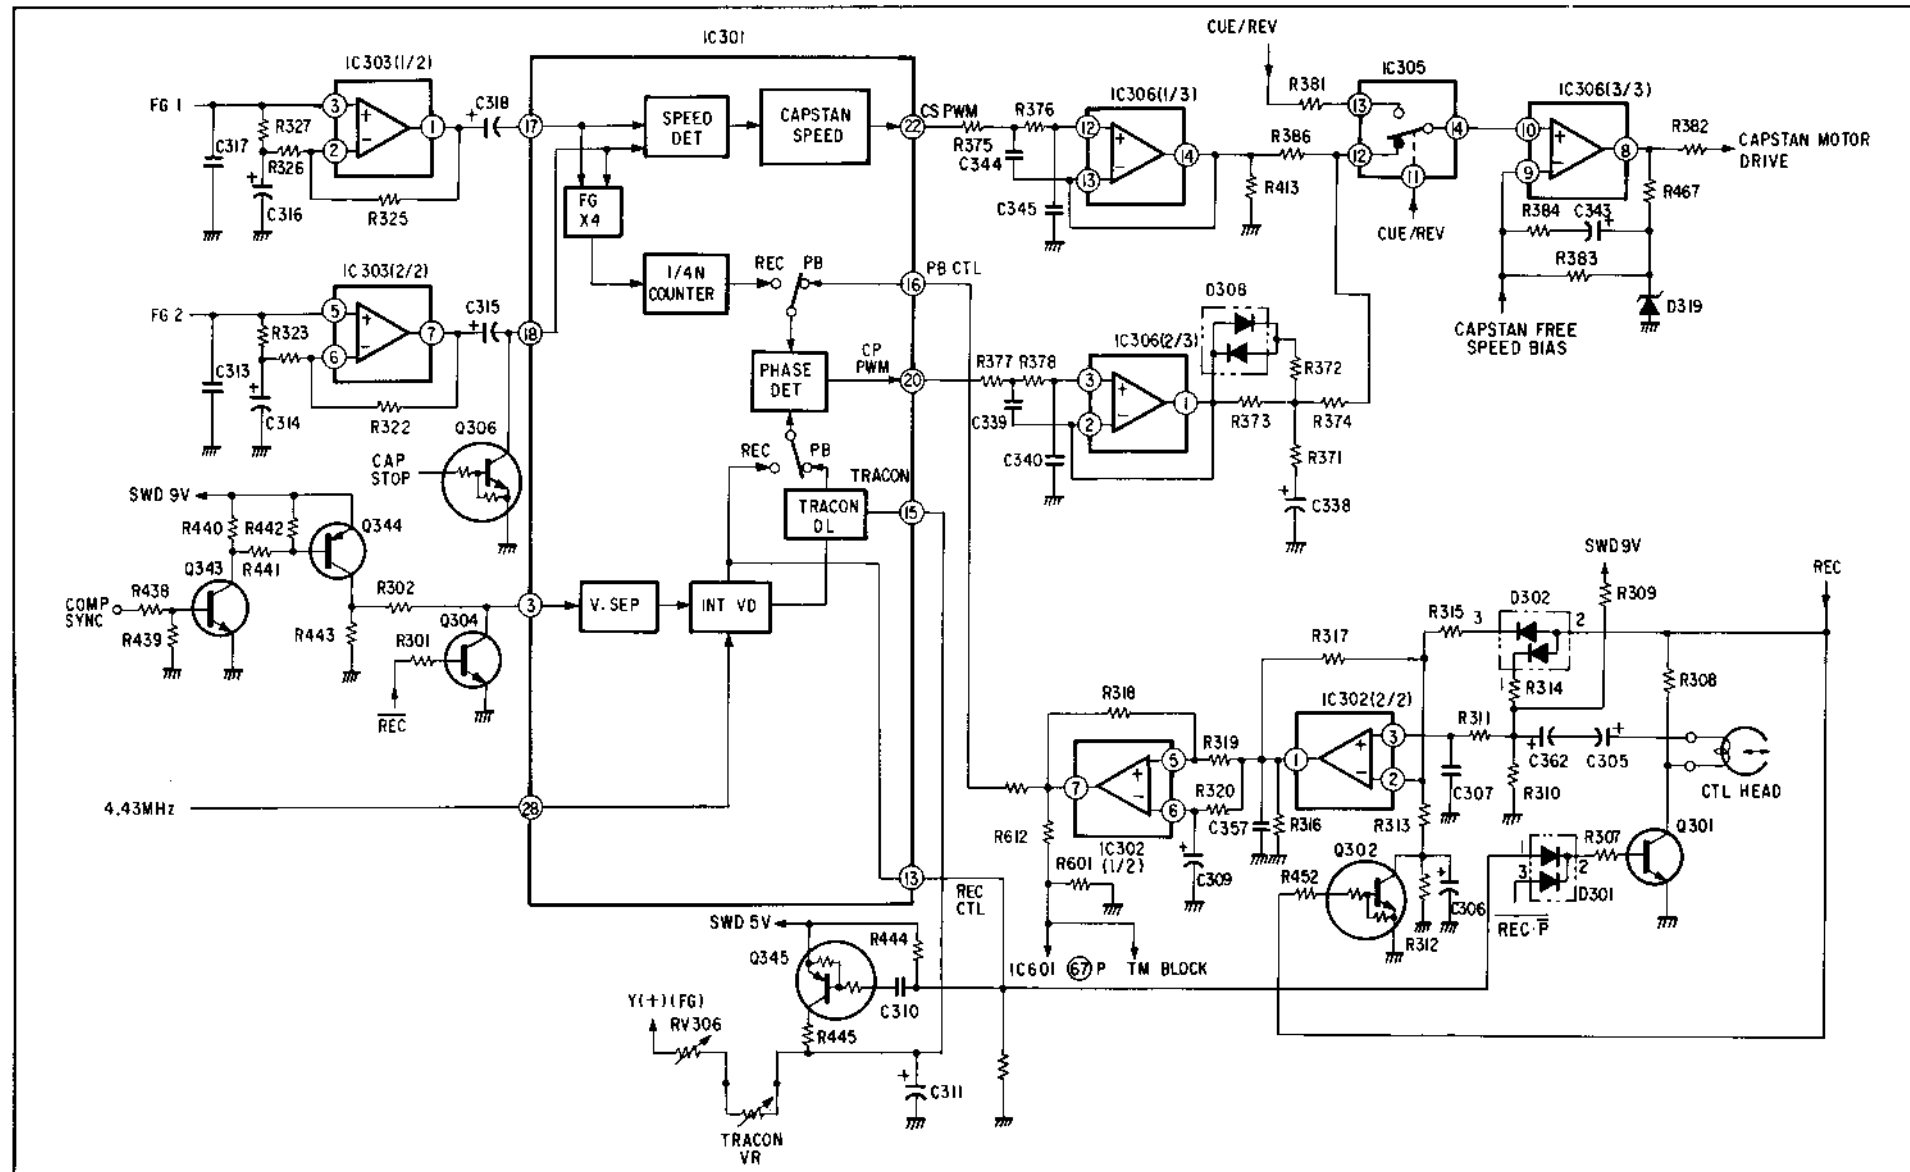


Fig. 3-17.

3-3. REEL MOTOR CONTROL CIRCUIT

This circuit controls reel table rotation matching the following six major modes.

1. STOP and PAUSE mode
2. PB and REC mode
3. TAPE UNLOAD mode
4. F/R search mode
5. CUE/REV mode
6. FF/REW mode

1. STOP and PAUSE mode

The level of the REEL STOP signal changes to "H" and Q338 switches ON during the STOP or PAUSE mode. The reel motor drive signal is muted, and the reel motor stops. If D316 is not mounted, approximately 9V is applied to the Q318 base side, and the emitter voltage reaches approximately 8V. An inverse withstanding voltage is applied between the base and emitter of Q317. D316 reduces the Q318 base voltage to less than 0.6V only during stopping to prevent an inverse withstanding voltage to be applied.

2. PB and REC mode

The level of PB + REC-1 becomes "H" during the PB or REC mode, and Q618 switches ON. The voltage divided by R391 and a combined resistor of R419, R392, and RV308 is applied to the base of Q318. The output of it is current amplified by Q316 and Q315 and becomes a reel motor drive signal to rotate the reel motor. When the pinch plunger clinches, the F/R search mode is set up for only 10msec to increase the reel motor voltage and not to sag the tape.

3. TAPE UNLOAD mode

The level of the UNLOAD signal becomes "L", and Q337 switches OFF. By this, the current flowing to R389 and R389 voltage drops increase, and a current flows through R426, Q314, R427, and R428. Q338 switches ON to suppress the reel motor voltage. The motor torque is limited by restricting the motor current in order to prevent tape damage.

4. F/R search mode

In the F/R search mode, Q618 switches OFF, Q619 switches ON, and the reel motor is driven by a voltage divided by R391 and a combined resistor of R419, R392, RV308, and R394.

5. Picture search mode

(For CUE)

The level of the CUE/REV signal becomes "H", Q336 and Q335 turn ON, and the reel motor is driven by the voltage divided by R391 and a combined resistor of R419, R430, and R429.

(For REV)

The level of the CUE/REV and REEL FWD signals both become "H", while Q336 is switched OFF. Q335 only is in an ON state. The reel motor is driven by the voltage divided by R391 and a combined resistor of R419 and R429.

6. FF/REW mode

The voltage divided by R391 and R419 is applied to the Q318 base to drive the reel motor.

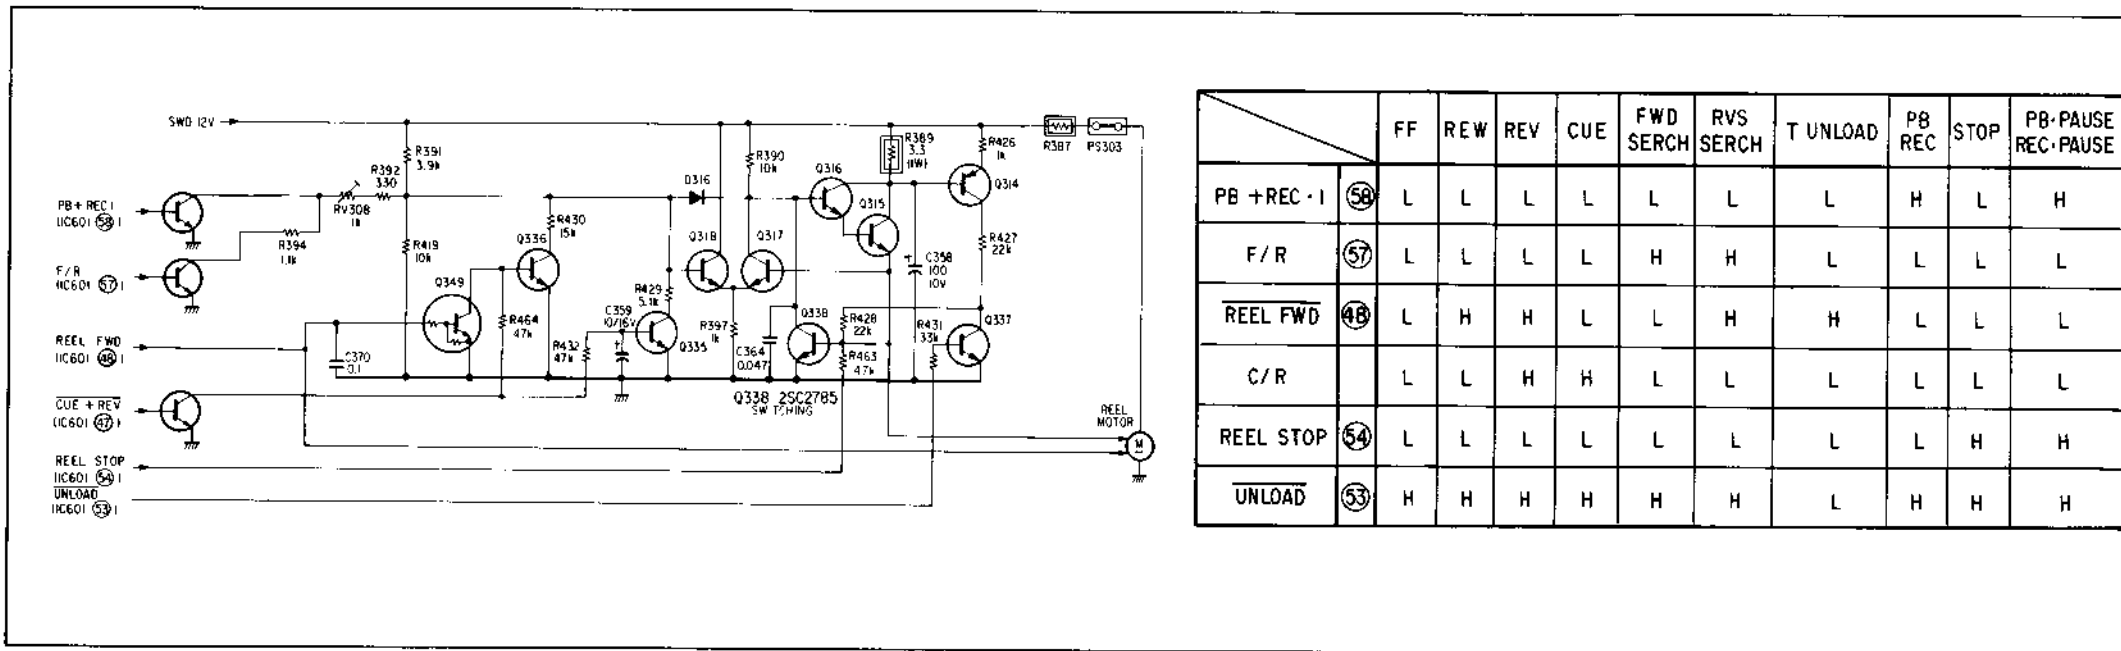


Fig. 3-18 Reel Motor Control Circuit

4. POWER SUPPLY CIRCUIT

4-1. SWD 12V AND SWD 9V SYSTEM

The secondary side output of the power supply transformer, 15V AC, is rectified by D001 on the PS-45 Board. The rectified voltage is input to pin ④ of IC001 packaged on the PS-69 Board.

Pins ① and ② of IC001 have 12 and 9V outputs, respectively. Pin ③ is a control pin for outputs of pins ① and ②.

Outputs can be obtained at pins ① and ② when the level of this control pin is high or is floating. Outputs cannot be obtained when the level of this pin is low. It is actually operated by an inverter (Q102) after obtaining a control signal from the timer circuit through pin ⑤ (PWR ON) of CN104 by ON/OFF switching of the ON/STANDBY switch.

4-2. UNSWD 12V SYSTEM

The voltage rectified by D001 on the PS-45 Board is input to the collector of Q101 on the PS-46 Board.

The base bias of Q101 is provided through R101. Q104 on the PS-46 Board is for constant-voltage control of UNSWD 12V, and the emitter of Q104 is connected to the cathode of the constant voltage diode D103, and this voltage is used as a reference voltage. The output voltage of Q101 is fed to the base of Q104 after being divided by R104 and R103. Q104 compares the reference and output voltages and fetches the differential current from the collector of Q104 to control Q101.

4-3. UNSWD 6V AND UNSWD 5V SYSTEMS

The rectified current output of D001 on the PS-45 Board is input to the collector of Q101 on the PS-46 Board through R107. R107 (39Ω 2W) is connected to reduce P_c (collector loss) of Q101. The cathode of the constant voltage diode D103 is connected to the base of Q101, at which the voltage remains constant at approximately 6.6V. Therefore, output of 6V is obtained at the emitter of Q101 to be the UNSWD 6V system voltage. The anode of D105 is connected to this 6V, and the output voltage on the cathode side is used as the UNSWD 5V system.

The Q101 base bias resistor R101 and Q103 base bias resistor R103 are connected to the UNSWD 45V system power supply. By this, a sufficient bias current flows to the bases of Q101 and Q103 to stabilize the output voltages at these voltages even when the AC voltage is lowered.

4-4. UNSWD +45V, UNSWD -45V, AND UNSWD -30V SYSTEMS

35V AC is rectified by D101 and D102 to obtain UNSWD +45V and UNSWD -45V system voltages. The UNSWD -30V system voltage is obtained by lowering the UNSWD -45V system voltage through R106.

4-5. 4.8V AC SYSTEM

The secondary side output of the power transformer is used as it is.

4-6. UNSWD12V, SWD12V, AND SWD9V SYSTEMS POWER SUPPLY (SL-F30E(E), SL-F60E(E), SL-T25ME)

A combination of a switching regulator (chopper regulator) and a voltage selector are used in the power supply section of an E model in the SL-F30E and SL-T25ME in order to respond easily and effectively to the different voltages of each country. The voltage selector, with the help of a two-stage device, can change the winding ratio of a transformer for 110V-127V input to the one for 220V-240V. Therefore, secondary voltages are different according to the voltage of a power supply. For example, in the case of 220V and 240V power inputs, the latter will have some 10% higher secondary voltage. Switching regulators are used instead of series ones to reduce the power supply efficiency difference caused by an input power supply voltage difference (viz. the differences in caloric value of the regulator).

IC001 on the PS-76 board consists of a switching regulator for D.C. 12V output and a series regulator for D.C. 9V output. Secondary A.C. 25V of the power supply transformer will be rectified by D001 on the PS-67 board (as mentioned before, this voltage can be different depending upon the power supply voltage) and be fed to pin ⑬. The direct current voltage fed to pin ⑬ will be switched by a transistor within the IC and will be converted to about 54kHz pulse at pin ⑫. This pulse will be smoothed by L002 and C012 and will convert to a D.C. voltage again. It will be fed back inside the IC through pin ⑤ of the IC001 and will convert the duty ratio of the switching pulse. By this feedback loop, a direct current will be stabilized at 12V. This stabilized D.C. 12V voltage, through LPF of the L003 and C013, will become a power supply for a UNSWD12V system. At the same time, passing a LPF of the L004 and C014, and through the power supply switch Q006 on the PS-67 board, it will also become a SWD12V system power supply for a servo-system control system. And the UNSWD12V system power supply will also be fed to the series regulator inside the IC001 pin ③, will be stabilized at 9V, and will be output from pin ②. The 9V power supply turns on when the control signal being fed to pin ④ is "H". Thus, the pin ② output will become a power supply for a SWD9V system. Furthermore, the UNSWD12V system power supply, through the power switch Q005 on the PS-67 board will become a SWD 12V system power supply, a video, tuner and audio system. Also, IC001 has an overcurrent detective circuit inside. The negative side of the PS-67 board is connected with IC001 pin ⑦. The GND of a VTR is connected with IC001 pin ⑩. Thus, all the IC001 output current will flow through

the resistance existing between the IC001 pin ⑩ and pin ⑦ inside the IC. Inside the IC, this voltage produced between both the ends of the resistances will be detected, and when the IC001 output current is above the fixed value (of about 4.7A), switching pulses will be stopped and a switching transistor will be turned off to protect the switching regulators.

4-7. UNSWD6V SYSTEM, 5V SYSTEM

UNSWD12V system power supply output is fed to a 6V series regulator consisting of Q003 and D008 and becomes a UNSWD6V system power supply. The UNSWD6V system power supply becomes a UNSWD5V system power supply through D009.

4-8. UNSWD39V SYSTEM, UNSWD-39V SYSTEM

The secondary A.C. 35V output from the power supply transformer will be rectified by D002 and become a UNSWD39V system power supply through a regulator composed of Q001 and D003. Also the A.C. 35V output will be rectified by D004, and become a UNSWD-39V system power supply through the regulator consisting of Q002 and D005.

4-9. AC4.8V SYSTEM

The secondary output from the power supply transformer is directly used.

4-10. SL-F30UB PROTECTIVE CIRCUIT

In the SL-F30UB power supply circuit, protective circuits of the PS-46 board, Q105-Q106 and PS-45 board F003 are added to meet the British Safety Standards.

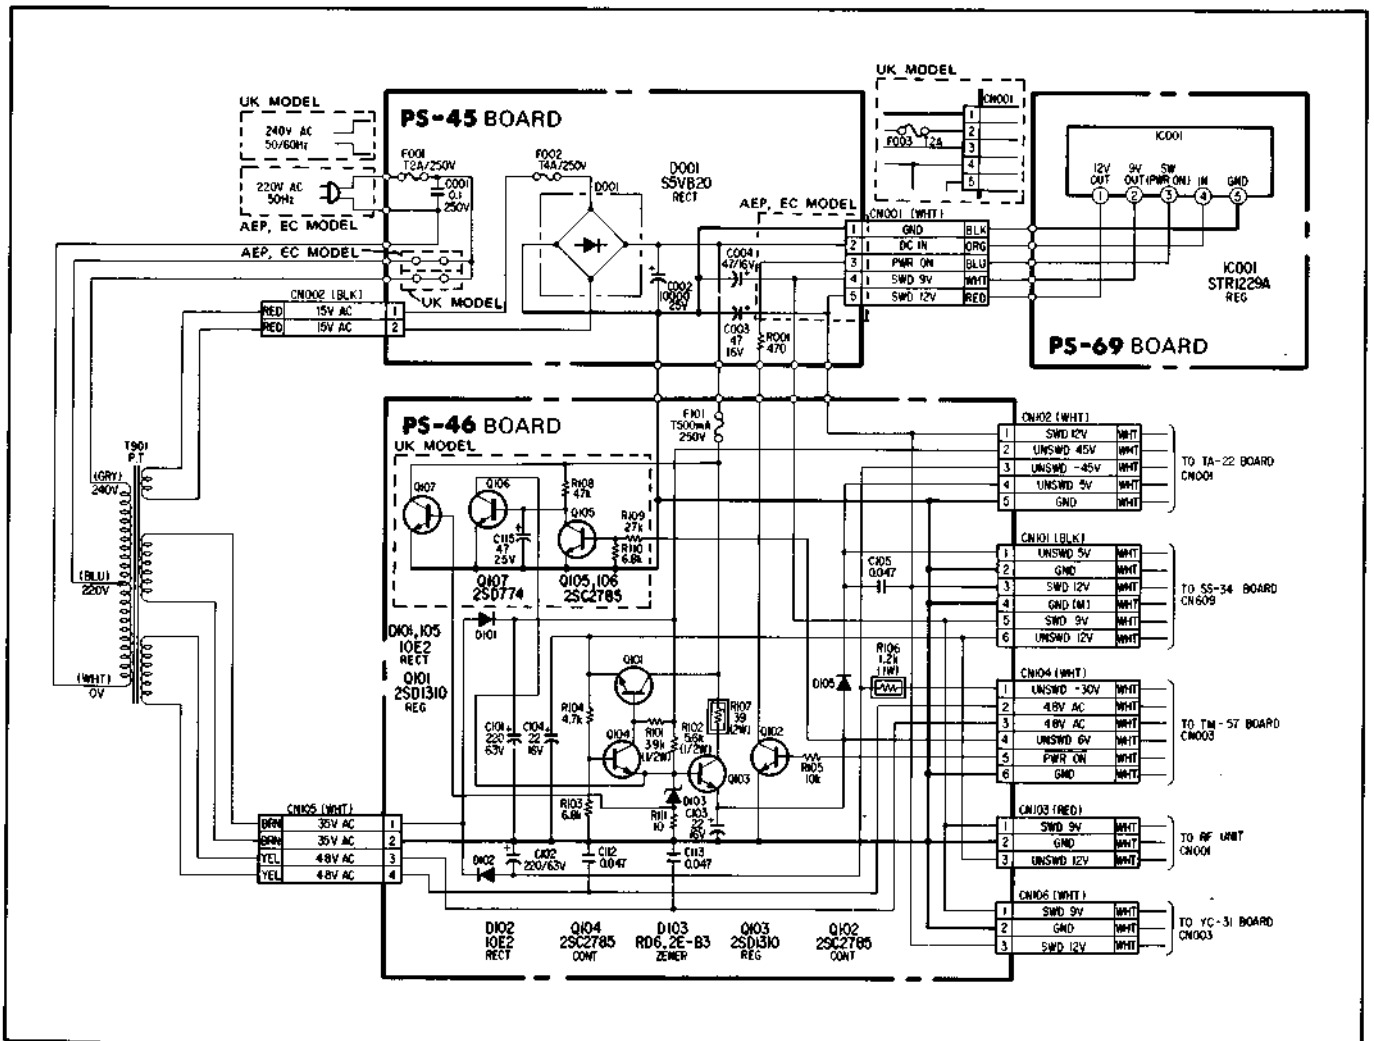


Fig. 4-1

5. AUDIO CIRCUIT

5-1. E-E SYSTEM

The signal input to the AUDIO LINE INPUT terminal is input to the TA-22 Board from pin ④ of CN301. After passing through the attenuator, which consists of R305 and R306, and C304, the signal is input to pin ⑦ of IC301. A TUNER signal is selected when the level of pin ③ of IC301 is high, while a LINE signal is selected when the level is low, for output from pin ④.

The output of pin ④ of IC302 is input to pin ⑱, which is an input pin of IC303, after passing through C307. The signal passes through the SWITCH circuit (the E-E side (Pin ⑱ is selected when the level of pin ⑰ (PB + AUDIO DUB) is low, while the PB side (pin ①) is selected when the level is high) and is amplified by the LINE AMPLIFIER (approximately 40dB). The signal is then output to pin ① and is fed to the LINE OUT terminal and RF modulator after passing through R310 and being connected to pin ① (AUDIO OUT) of CN301.

5-2. RECORDING SYSTEM

The flow of the E-E signal is the same as that of the E-E system. The level of pin ① (BIAS CONT) of CN302 becomes L during recording. Q331 then switches ON and the bias oscillation circuit consisting of T331 and Q332 operates. The level of pin ⑨ of IC303 turns, and the recording amplifier inside IC303 operates. The level of pin ⑤ of IC302 becomes high and Q303 switches ON, to change the level of pin ⑦ of IC302 to low. By this, pin ③ of IC302 is connected to the GND side (pin ④ side) to set up pin ① in an OPEN state. As a result, the voice signal and recording bias signal are fed to the audio head.

5-3. PLAYBACK SYSTEM

The level of pin ② (PB + AUDIO DUB) of CN302 changes to high during replaying. By this, the level of pin ⑰ of IC303 becomes high, and the internal switch of IC303 switches to the pin ① side. The level of the BIAS CONT is high, and Q331 is switched OFF, while Q303 is switched ON. By this, the level of pin ⑤ of IC302 changes to low, and that of pin ⑦, to high. Therefore, pin ① is connected to GND and pin ③ opens.

As a result, the voice signals played back by the audio head are input to pin ④ of IC303. The signals are amplified by the playback equalizer amplifier and are output to pin ②. The signals are fed to Semi-Fixed Resistor RV301 and pin ① and are output from pin ① after being amplified by the line amplifiers.

Q302 is for high cutting during replaying. As shown in Fig. 5-1, the high-cut circuit operates only during replaying.

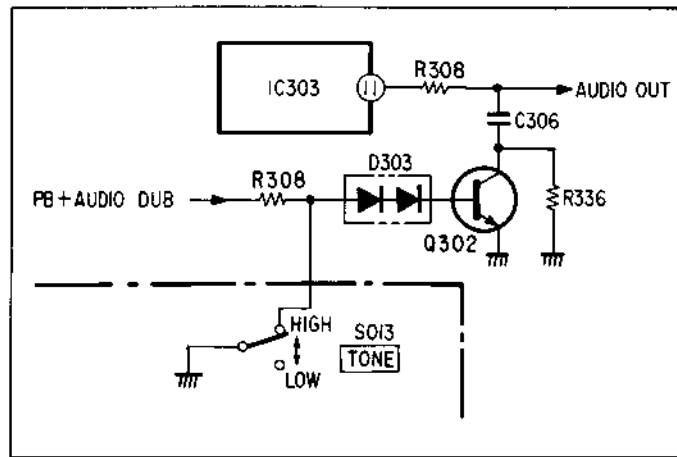


Fig. 5-1

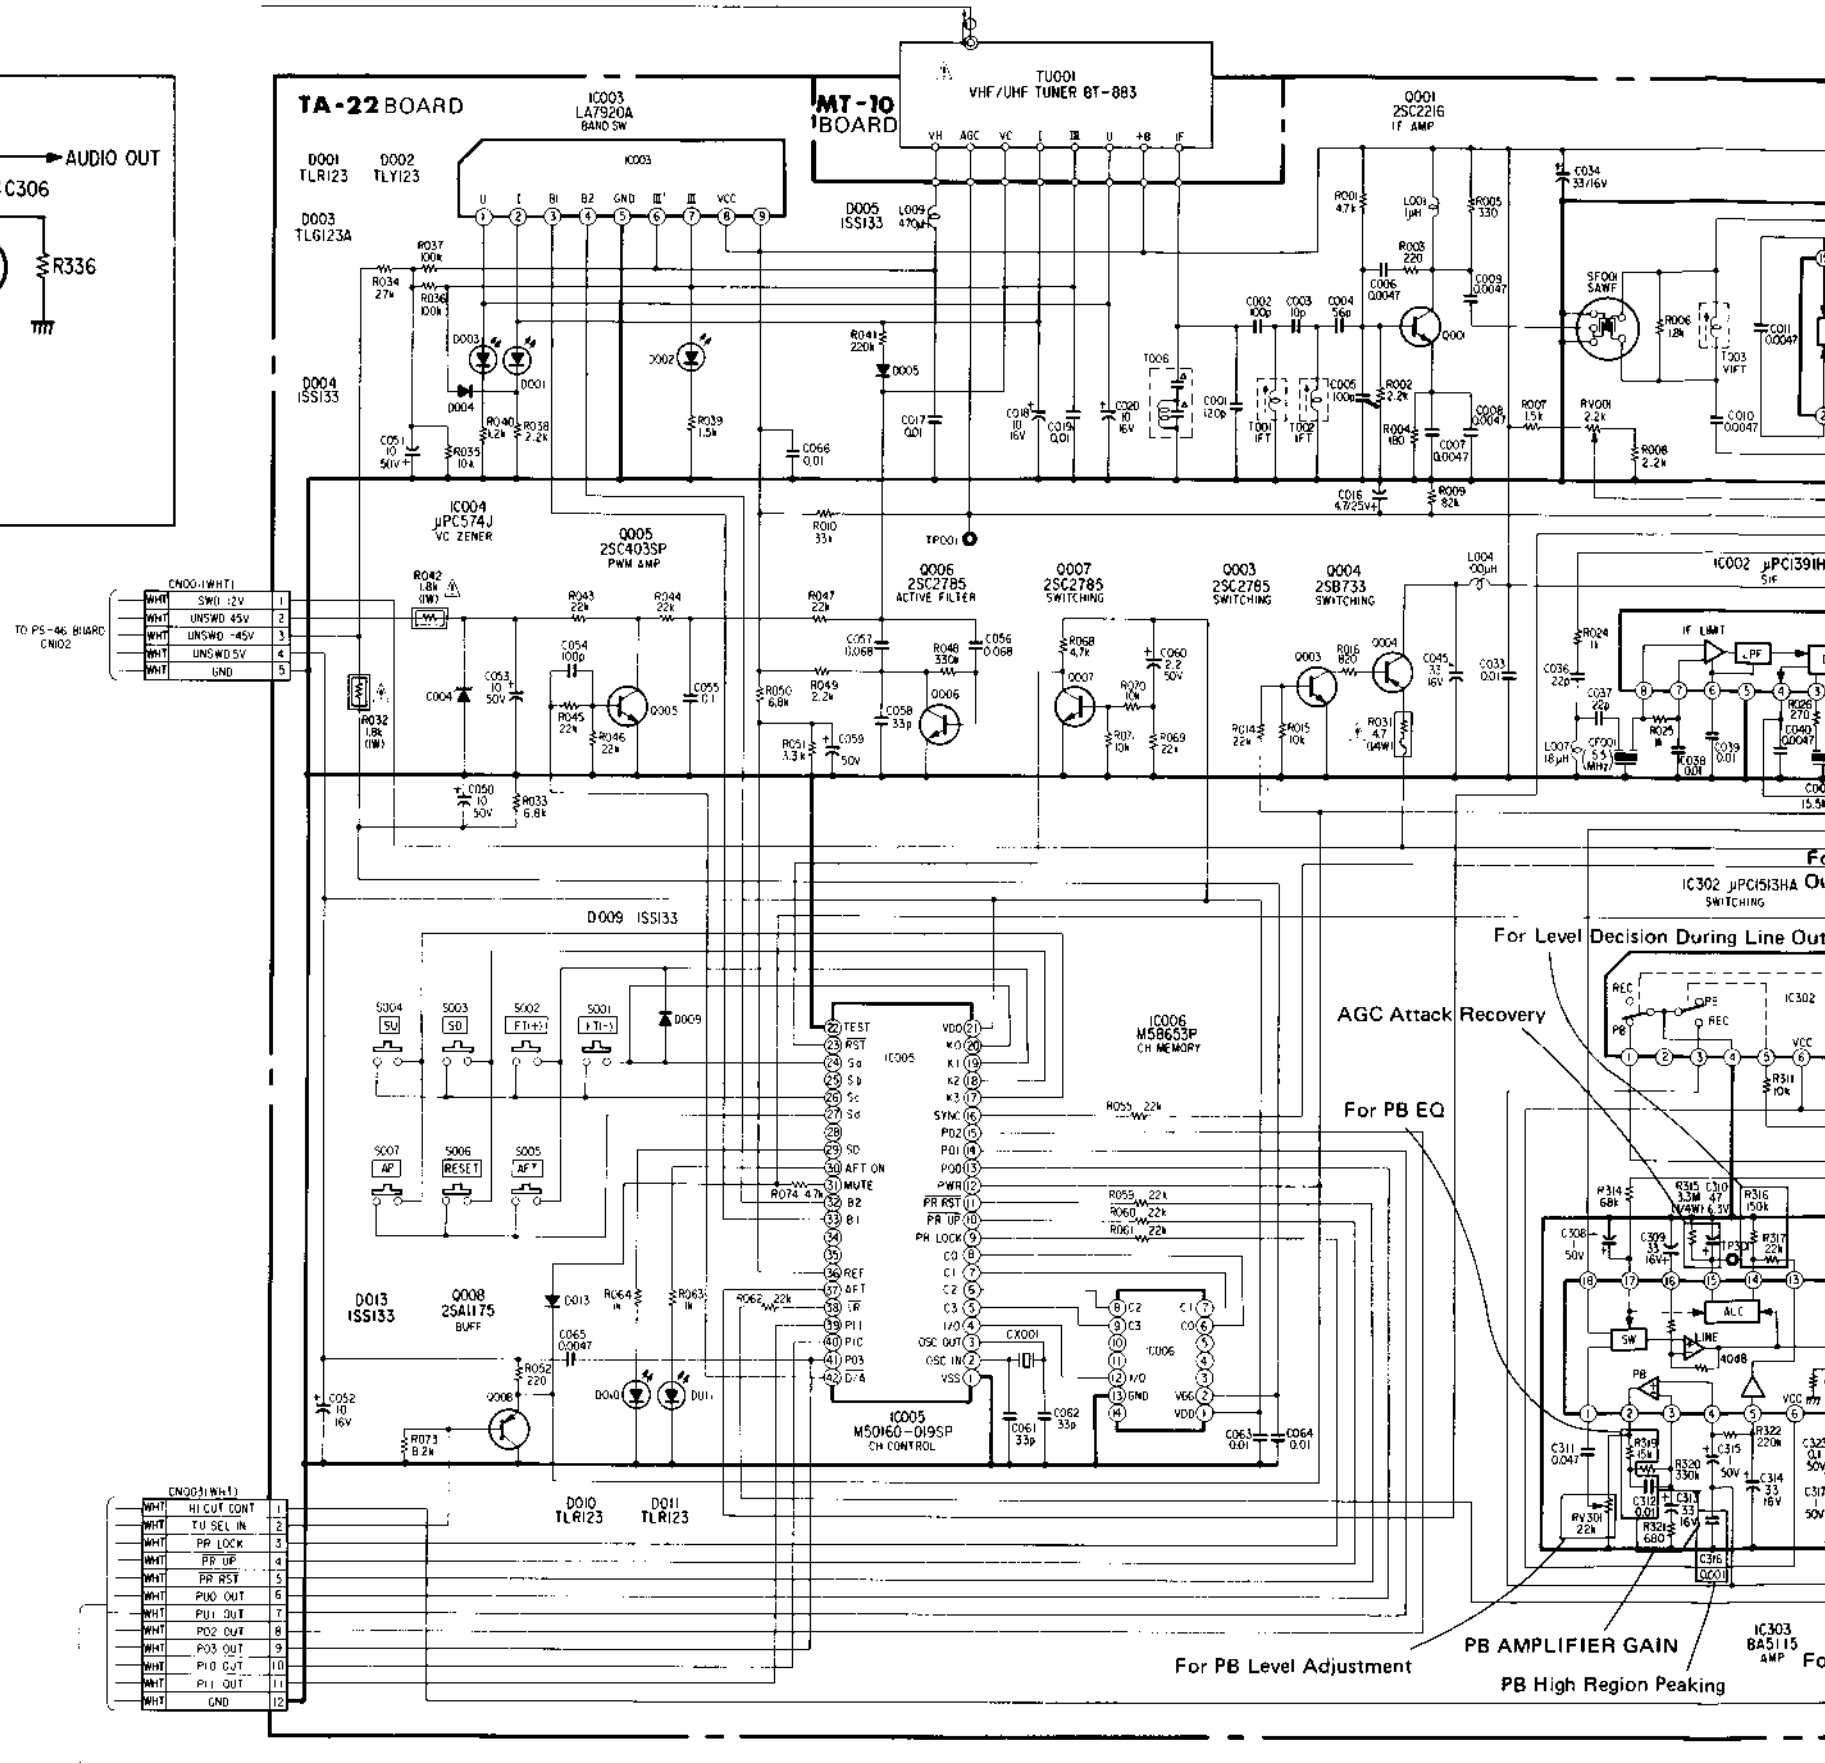


Fig. 5-2

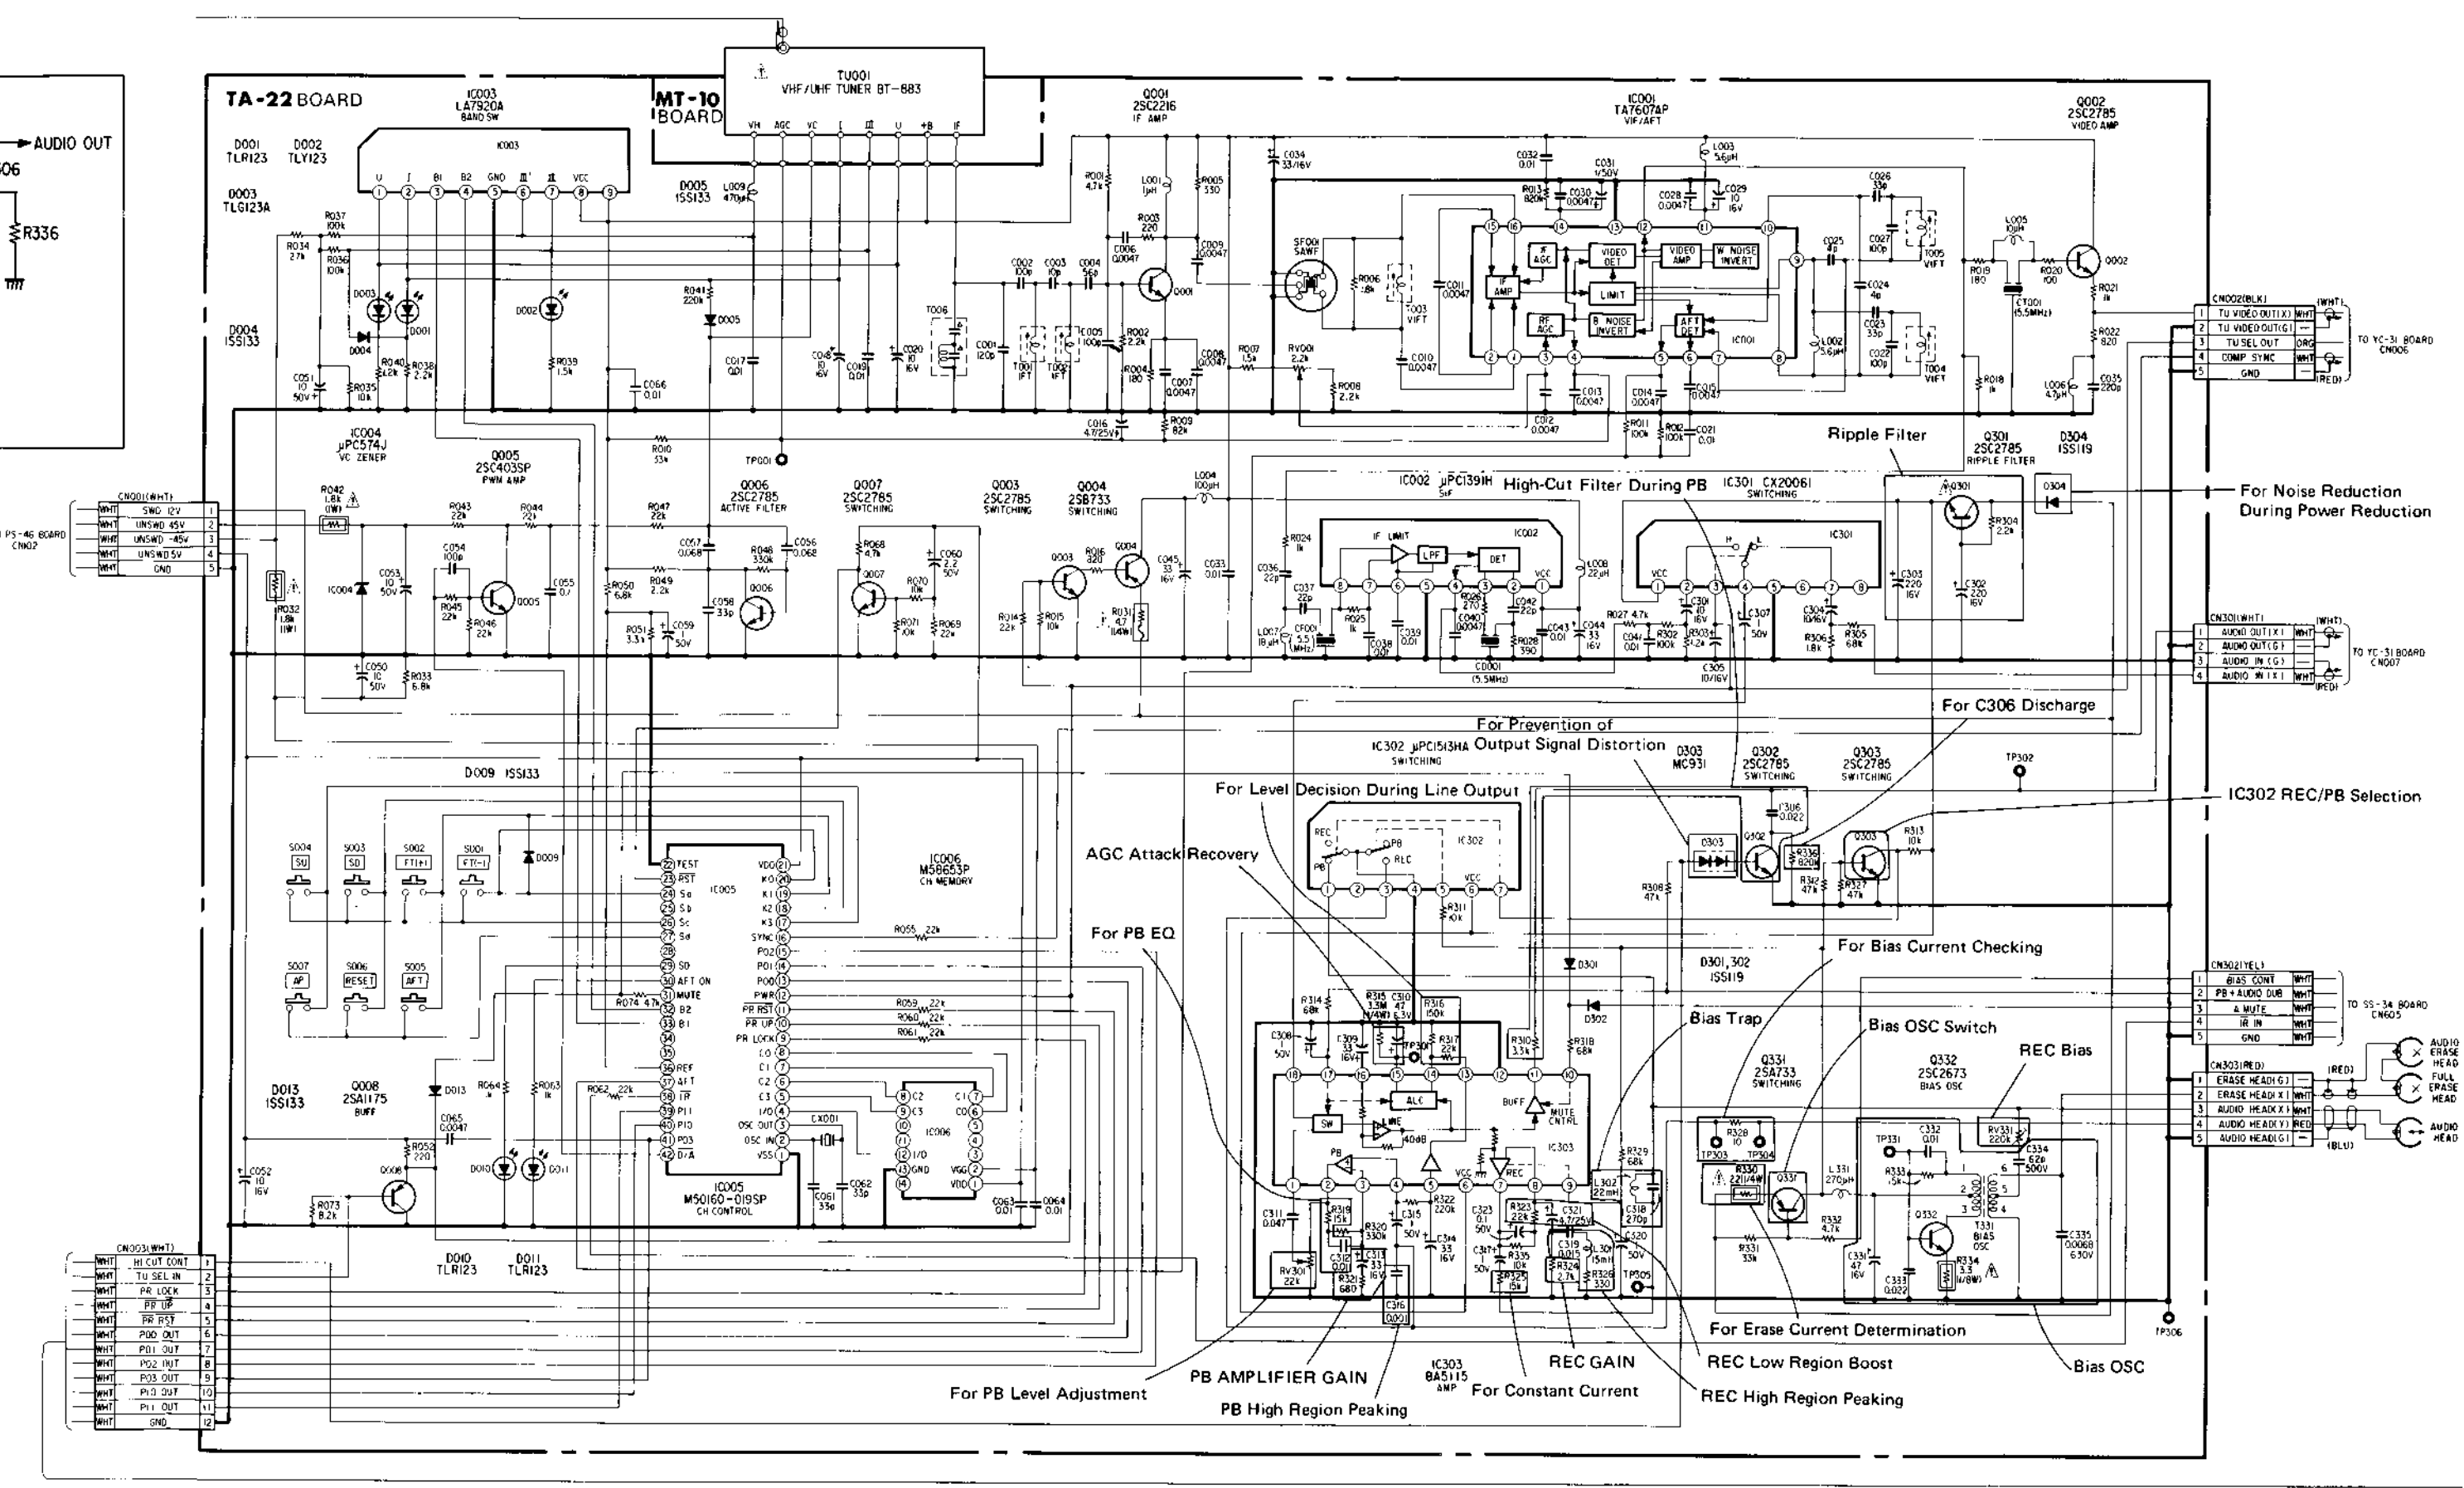


Fig. 5-2

6. TIMER BLOCK

6-1. GENERAL

The timer block consists of a timer microcomputer, clock oscillation circuit, reset circuit, power failure detection circuit, and fluorescent vacuum display tube.

6-2. CLOCK OSCILLATION CIRCUIT

The timer microcomputer MB88525B requires two clock signals, a system clock and timer clock signals. The system clock oscillation circuit is of a CR-type oscillation circuit to set a frequency by R047, RV001, and C006. The oscillation frequency is set to 2.6MHz by RV001. The CR oscillation type is selected to minimize current consumption during standing by (during power failure backing up). Current consumption of the CR oscillation type is a fraction of that of the ceramic oscillation type. When a back-up capacitor of the same capacity is used, the backing-up duration during a power failure is longer with the CR oscillation type. (The backing up time is several seconds with the SL-F30 series and more than three minutes with the SL-F60 series.)

The timer clock oscillation circuit is of a quartz oscillation type, and the oscillation frequency is set by TC001, C005, and X001. The frequency is set to 32.768MHz by TC001.

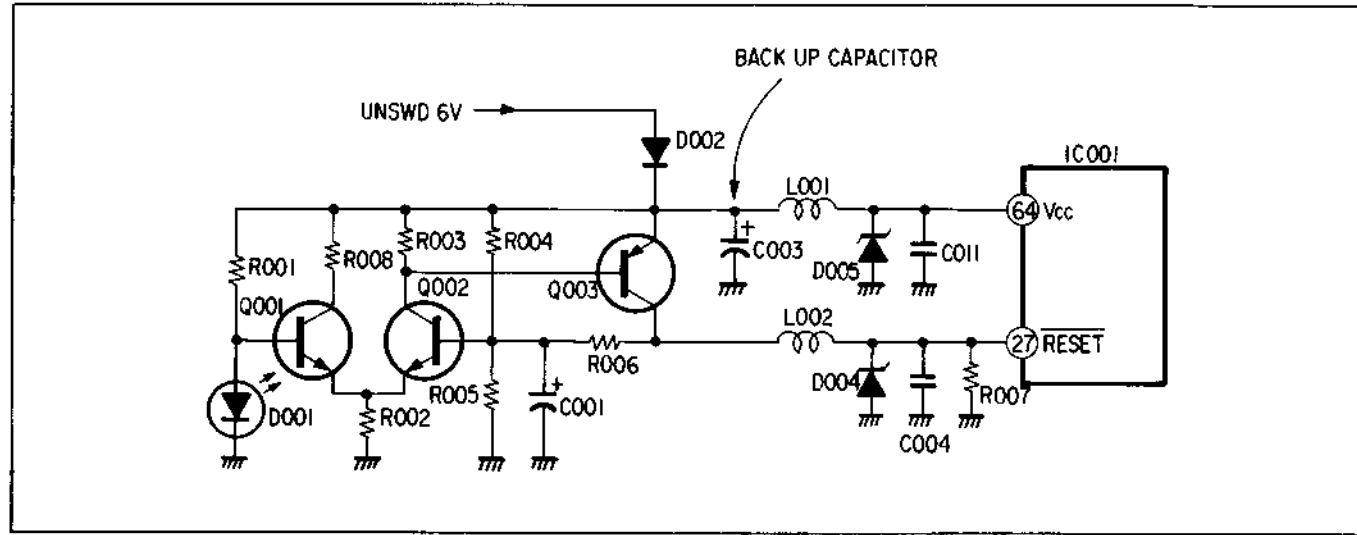


Fig. 6-1

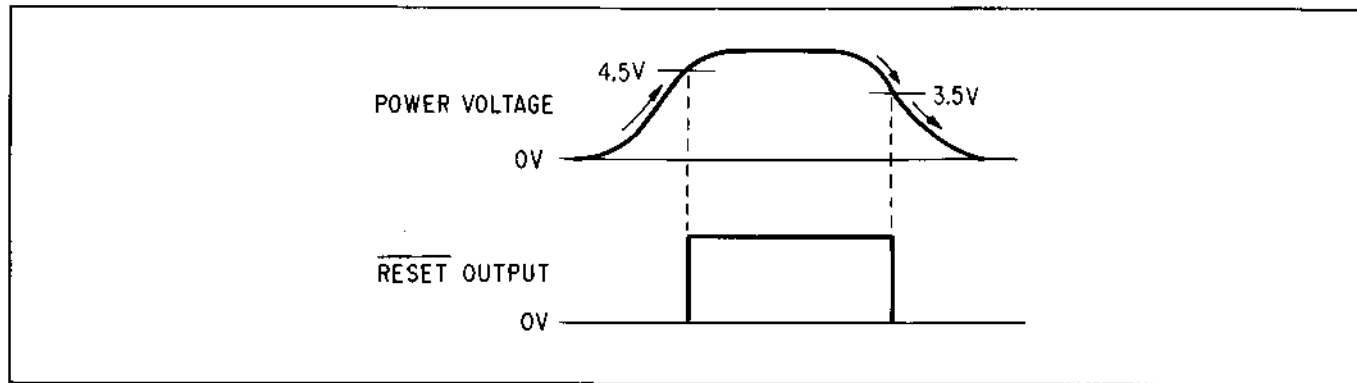


Fig. 6-2

6-3. RESET CIRCUIT

The reset circuit has the following two functions. One is to initialize the timer microcomputer (IC001) when the power plug is plugged to the plug socket for the first time or when resetting a voltage after a long power failure during which time backing up is not possible. The other is to forcibly stop the timer microcomputer operation to prevent malfunction when the back-up power voltage is reduced. The reset circuit detects the power voltage (pin 64 of IC001) of the timer microcomputer (IC001). The level of the reset pin (pin 27 of IC001) is changed to "L" to reset the timer microcomputer when the power voltage is lower than the preset level.

Fig. 6-1 shows the circuit diagram.

A reference voltage utilizing the forward voltage of the light emitting diode D001 is input to the base of Q001. The power voltage is input to the base of Q002 after being divided by R004 and R005. The two voltages are compared by Q001 and Q002, and the output is input to pin 27 of IC001 through Q003. R006 provides a hysteresis characteristic to the comparator. Fig. 6-2 shows the power voltage reset output characteristic.

6-4. POWER FAILURE DETECTION CIRCUIT

IC002 is a power failure detection comparator. The level of pin 1 (OUT) of IC002 changes to "H" when the voltage of pin 2 (VCC) of IC002 is approximately 4.5V or higher. A voltage ("H") obtained by dividing the power voltage fed to D003 by R046 and R045 is input to pin 8 (PWR FAIL) of IC001. The level of pin 1 (OUT) of IC002 changes to "L" when the voltage at pin 2 (VCC) of IC002 is approximately 4.5V or less and over the minimum operating voltage (approx. 1.2V) of IC002.

Pin 1 (OUT) of IC002 becomes open when the voltage at pin 2 (VCC) of IC002 is below the minimum operating voltage of IC002. The voltage at pin 8 of IC001 becomes a voltage dividing the power voltage (being backed up) of IC001 by a pull up resistor (approx. 10k Ω) inside pin 8 of IC001 and R045 (2.2k Ω) to hold the "L" level.

The timer microcomputer operation stands by when the voltage at pin 2 (VCC) of IC002 becomes less than approximately 4.5V and the level of pin 8 (PWR FAIL)

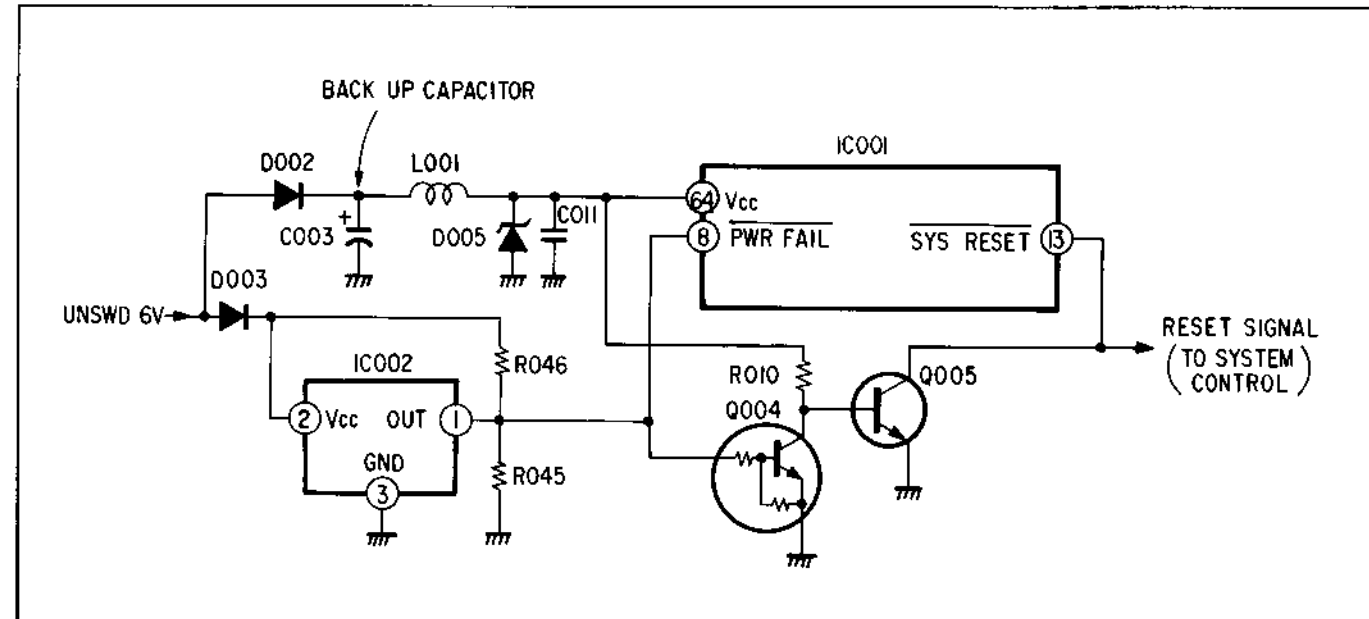


Fig. 6-3

POWER FAILURE DETECTION CIRCUIT

(a set of TM-57 baseboards, part No. 1-613-229-12)

When IC002 pin 2 (VCC) of a voltage detective comparator is below about 4.5V, its output terminal pin 1 converts from "H" to "L". At this moment, C013 is instantly discharged. Q004 turns off and Q005 turns on. And IC001 pin 8 (PWR FAIL) converts to "L". Subsequently, when the power supply voltage recovers and the voltage detective comparator output (IC002 pin 1) converts from "L" to "H", the current flowing in the R046 will

charge C013. For this reason, it takes C013 about 20 microseconds to be charged at a necessary level of voltage (about 1.2V) for Q004 to be turned on. No matter how short the charging time may be, whatever short pulse the voltage detective comparator output may be, the microcomputer timer (IC001) can surely detect any power failure because IC001 pin 8 (PWR FAIL) is "L" for 20 microseconds.

Pin 13 of IC001 outputs a reset pulse to the system control microcomputer (IC601 on the SS-34 Board) when the power failure recovers, when the voltage at pin 2 (VCC) of IC002 becomes more than approximately 4.5V, and when the level of pin 8 (PWR FAIL) of IC001 becomes "H".

Q004 and Q005 inputs the output of pin 1 (OUT) of IC002 to the reset pin (pin 61 of IC601) of the system control microcomputers to prevent malfunction when the system control microcomputer is reset.

6-5. OTH

L001, L002, L003, L004, L005, L006, L007, L008, L009, L010, L011, L012, L013, L014, L015, L016, L017, L018, L019, L020, L021, L022, L023, L024 and the fluorescent display tube.

6-4. POWER FAILURE DETECTION CIRCUIT

IC002 is a power failure detection comparator. The level of pin ① (OUT) of IC002 changes to "H" when the voltage of pin ② (VCC) of IC002 is approximately 4.5V or higher. A voltage ("H") obtained by dividing the power voltage fed to D003 by R046 and R045 is input to pin ⑧ (PWR FAIL) of IC001. The level of pin ① (OUT) of IC002 changes to "L" when the voltage at pin ② (VCC) of IC002 is approximately 4.5V or less and over the minimum operating voltage (approx. 1.2V) of IC002.

Pin ① (OUT) of IC002 becomes open when the voltage at pin ② (VCC) of IC002 is below the minimum operating voltage of IC002. The voltage at pin ⑧ of IC001 becomes a voltage dividing the power voltage (being backed up) of IC001 by a pull up resistor (approx. 10kΩ) inside pin ⑧ of IC001 and R045 (2.2kΩ) to hold the "L" level.

The timer microcomputer operation stands by when the voltage at pin ② (VCC) of IC002 becomes less than approximately 4.5V and the level of pin ⑧ (PWR FAIL)

of IC001 changes to "L" when a power failure or other phenomenon occurs. The microcomputer is backed up by C003 (470μF . . . SL-F30, 0.047F . . . SL-F60) for several seconds with the SL-F30 series and for more than three minutes with the SL-F60 series. The clock function (no display) and timer recording program protection only are performed in the stand-by status.

Pin ⑬ of IC001 outputs a reset pulse to the system control microcomputer (IC601 on the SS-34 Board) when the power failure recovers, when the voltage at pin ② (VCC) of IC002 becomes more than approximately 4.5V, and when the level of pin ⑧ (PWR FAIL) of IC001 becomes "H".

Q004 and Q005 inputs the output of pin ① (OUT) of IC002 to the reset pin (pin ⑥) of IC601 of the system control microcomputers to prevent malfunction when the system control microcomputer is reset.

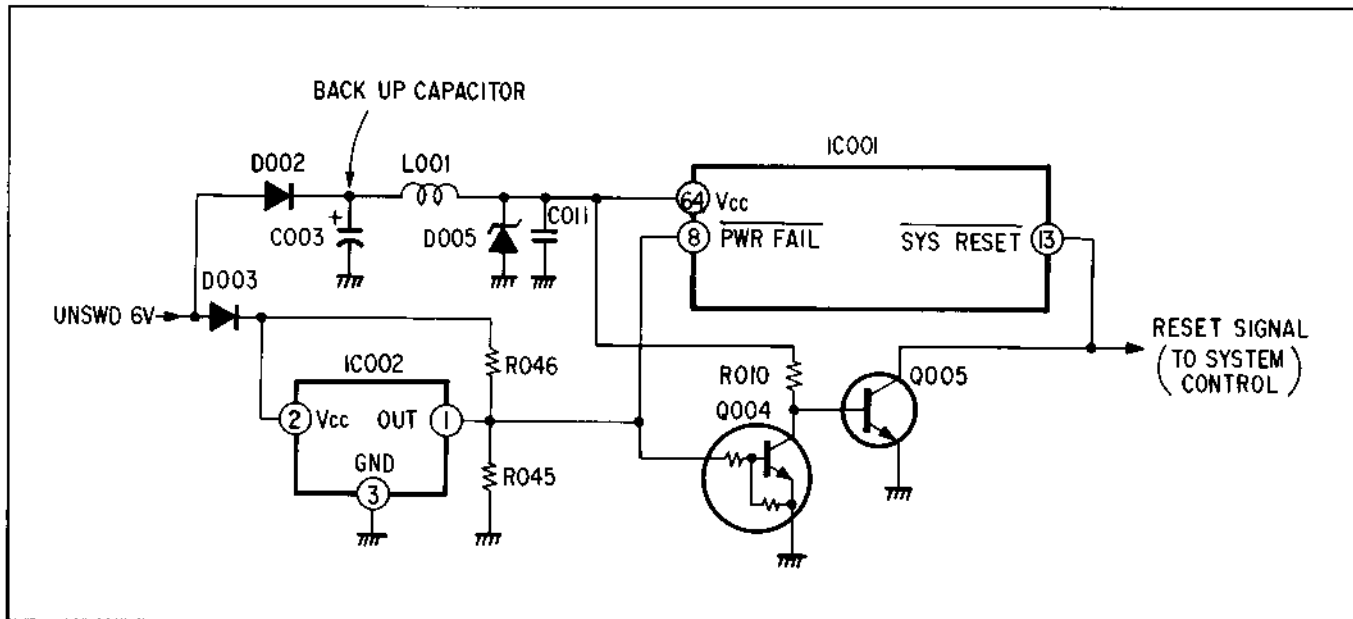


Fig. 6-3

POWER FAILURE DETECTION CIRCUIT

(a set of TM-57 baseboards, part No. 1-613-229-12)

When IC002 pin ② (VCC) of a voltage detective comparator is below about 4.5V, its output terminal pin ① converts from "H" to "L". At this moment, C013 is instantly discharged. Q004 turns off and Q005 turns on. And IC001 pin ⑧ (PWR FAIL) converts to "L". Subsequently, when the power supply voltage recovers and the voltage detective comparator output (IC002 pin ①) converts from "L" to "H", the current flowing in the R046 will

charge C013. For this reason, it takes C013 about 20 microseconds to be charged at a necessary level of voltage (about 1.2V) for Q004 to be turned on. No matter how short the charging time may be, whatever short pulse the voltage detective comparator output may be, the microcomputer timer (IC001) can surely detect any power failure because IC001 pin ⑧ (PWR FAIL) is "L" for 20 microseconds.

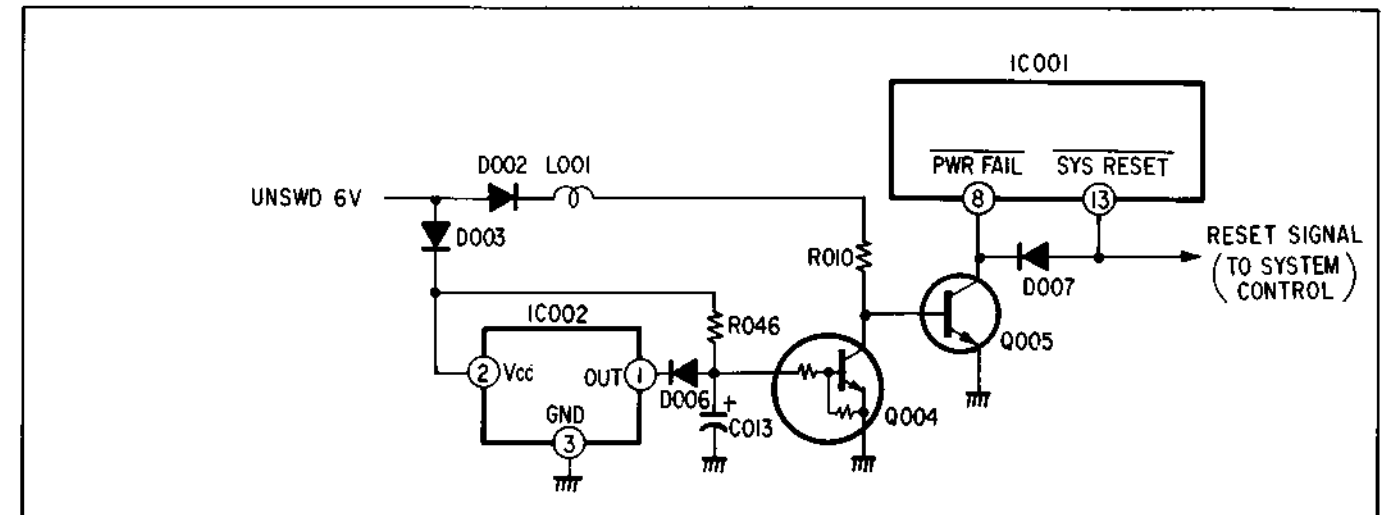


Fig. 6-4

6-5. OTHER CIRCUITS

L001, L002, and D005 protect IC001 against static electricity.

R024 and R025 set the bias voltage of the filament of the fluorescent vacuum display tube.

R026 through R044 are pull down resistors of the fluorescent display tube.

7. TUNER CIRCUIT

7-1. SIGNAL SYSTEM

The broadcast signals input from the AERIAL IN terminal are amplified approximately 4dB*¹ by the RFU (RF modulator, booster, and mixer*²) and are input to the RF input terminal of the tuner (sensitivity select switch: DX position).*³

The broadcast signals are output from the IF output terminal after being tuned, amplified, and frequency converted by the tuner. Each of the signals has two frequency components, namely, 38.9MHz*⁴ as a picture carrier (fp), and 33.4MHz*⁵ as a sound carrier (f_{s1}).

The signals are amplified by a preamplifier comprising Q001, T001 and T002 and are spectrum shaped by a surface acoustic wave filter (SAWF) SWF001.

The signals input to pins ① and ⑥ of IC001. The signal input to pins ① and ⑥ of IC001 is after amplified by the VIF AMP and is output from pin ⑫ of IC001 as a video signal after being SYNC filtered. The video signal is output to the video circuit through the voice trap CT001 (5.5MHz*⁶ is attenuated approximately 50dB) and buffer Q002.

Pin ③ of IC001 is an input terminal for the voltage to set the RF AGC delay point. The RF AGC voltage is output to the tuner from pin ④. Pins ⑤ and ⑥ are output terminals for AFT signals. Pins ⑤ and ⑥ have inverse characteristics, and this equipment uses pin ⑤ only.

T004 connected to pins ⑧ and ⑨ is a VIF transformer. T005 connected to pins ⑦ and ⑩ is an AFT transformer. The 5.5MHz*⁶ audio FM signal output from pin ⑫ pass through the 5.5MHz*⁶ band pass filter CF001 and enter pin ⑧ of IC002. IC002 carries out FM audio detection. Detection is carried out by connecting a discriminator to pins ② and ③ and the output from pin ④ is fed to IC301.

7-2. TUNING SYSTEM

Tuning operations are controlled by IC005. Signals input to and output from IC005 are described below.

- 1) OSC IN (pin ②) and OSC OUT (pin ③)
These pins are for clock oscillation. A 4MHz ceramic oscillating device is connected to them.
- 2) C0 (pin ⑧), C1 (pin ⑦), C2 (pin ⑥), C3 (pin ⑤), and I/O (pin ④)

C0 through C3 are control signals from IC005 to IC006 (non-volatile memory). The I/O pin is an input/output pin for tuning data. When presetting the tuner, IC006 memorizes data of broadcasting stations being received (program No., receiving band, VC voltage, and AFC on/off) input from the I/O terminal of IC005 by means of the control signal from IC005. During tuning by the PROG +/- button or by the tuning signals from the timer circuit and remote commander, IC006 inputs program No. from the I/O pin of IC005 by the control signal received from IC005 and outputs the tuning data (receiving band, VC voltage, and AFC on/off) corresponding to the program No.

- 3) PR LOCK (pin ⑨)
The input signal from the timer circuit. This signal disables changes of the program, etc. during recording (namely, PROG. UP/DN, RESET, AP, AFT +/-, SEARCH UP/DN, and AFT ON).
- 4) $\overline{\text{PR RST}}$ (pin ⑪) and $\overline{\text{PR UP}}$ (pin ⑩)
The input signals from the timer circuit. During timer recording, IC005 is reset to Program 1 by the $\overline{\text{PR RST}}$ pulse and is set to Program N when an N-1 quantity of $\overline{\text{PR UP}}$ pulses are subsequently input when the timer microcomputer selects Program N.
- 5) PWR (pin ⑫)
The tuner select signal output by the Q008 emitter is input to this pin. IC005 decides the voltage to be the tuner ON mode (mode for the tuner to operate) when the level of the voltage is "H", deciding to be the tuner OFF mode (mode for the tuner not to operate) when the level is "L". IC005 stops the program No. display output and key matrix scan operation when in the tuner OFF mode.
- 6) P00 (pin ⑬), P01 (pin ⑭), P02 (pin ⑮), P03 (pin ⑰), P10 (pin ⑳), and P11 (pin ㉑)
The output signals to the timer circuit for program No. display. With signals P00 - P03, one digit of program No. display is output in a BCD code. With signals P10 - P11, the place of ten of program No. is output.
- 7) SYNC (pin ⑯)
The input signal from the video circuit. The SYNC signal separated from the video signal in the video circuits is input. In the tuner mode, IC101 decides broadcast signals have been received when this signal is input during search or auto program operation.
- 8) K0 (pin ㉒), K1 (pin ㉓), K2 (pin ㉔), K3 (pin ㉕) Sa (pin ㉖), Sb (pin ㉗), Sc (pin ㉘), and Sd (pin ㉙)
K0 through K3 are input signals for key matrix scan. Sa through Sd are output signals for the key matrix scan. Table 7-1 shows the preset switch matrix table.

	Sa	Sb	Sc	Sd
K0	30 PROG	PROG +	FINE -	
K1	4 BAND	PROG -	FINE +	AFT
K2	1 BAND		SEARCH -	RESET
K3	2 BAND		SEARCH +	AUTOMATIC PROGRAMMING

Table 7-1

The Sa output port is a switch to change the function depending on the destinations.

30 PROG...Connecting the ports Sa and K0 by a diode, the equipment can receive and display 30 programs. (For SL-F30PS/F60PS/F30EC/F60EC)

4 BAND...Connecting the ports Sa and K1 by a diode, the equipment can receive and display four bands (CATV). The 30-program version can automatically be set up at this time without connecting. Port Sa with Port K0 by a diode, (For SL-F30PS/F60PS/R30EC/F60EC)

1 BAND...A one-band version is set up connecting Port Sa with Port K2 by a diode. (For SL-F30UB)

2 BAND...A two-band version is set up connecting Port Sa with Port K3 by a diode. (For SL-F30SA/F60SA)

All the other switches have the same functions as those of conventional models. As a new function of this model, presetting of AFT to ON or OFF is possible. Presetting after pressing the FINE button, the mode is memorized as AFT OFF.

- 9) $\overline{\text{RST}}$ (pin ㉒)
An INITIAL RESET pulse is input by Q007 the moment the AC plug is plugged to the plug socket.
- 10) SD (pin ㉓)
The signal flashes LED D010 to show that the equipment is in operation when the set is in the SEARCH mode. During this mode, the program No. display also flashes at the same time.
- 11) AFT ON (pin ㉔)
D011 is lit during the AFT ON mode.
- 12) MUTE (pin ㉕)
This is an output signal. The sound-signal muting signal when changing the program or in other cases. Muting is performed by IC303.
- 13) B1 (pin ㉖) and B2 (pin ㉗)
The signals to change the receiving band. These signals are decoded in IC003*⁷ and are input to the tuner. IC003 also lights the band display LED*⁷.

SIGNAL BAND	SIGNAL					
	B1	B2	I	III	U	III
VHF I	H	H	+12V	-12V	0V	-12V
VHF III	L	H	+12V	+12V	0V	-12V
UHF	H	L	0V	-12V	+12V	-12V
CATV	L	L	+12V	+12V	0V	+12V

Table 7-2

- 14) AFT (pin ㉘) and REF (pin ㉙)

The AFT pin is input with the AFT detection output of IC001. The REF pin is input with a reference voltage (a voltage obtained by dividing 12V by R050 and R051) to judge the polarity of AFT. When the AFT is ON, IC005 judges whether the received frequency is shifted toward +, or toward -, by these two input signals and controls the VC voltage to cancel the deviation.

The AFT is turned OFF by pressing the FINE button, turning ON by pressing the AFT button.

- 15) $\overline{\text{IR}}$ (pin ㉚)
The input signal from the remote commander. IC005 accepts only those commands that are related to the tuner.
- 16) $\overline{\text{D/A}}$ (pin ㉛)
The $\overline{\text{D/A}}$ pin outputs the VC voltage with pulse-width modulated by a frequency at approximately 7.8kHz. A VC voltage is obtained by switching a DC voltage of 33V stabilized by IC004 and passing it through a low-pass filter composed of R044 and C055 after applying this signal to the Q005 base. Q006 is an active filter to remove ripple components in the VC voltage.




7-3. OTHER CIRCUITS







Q003 and Q004 switch on and off the tuner power by the TU SEL signal input from the timer circuit. The tuner power is output from the Q004 collector only when the level of the TU SEL signal is "H".

- *1. Approximately 3dB with SL-F30AS.
- *2. The antenna switch with SL-F30AS, instead of the mixer.
- *3. Not available with SL-F30AS.
- *4. 39.5MHz with SL-F30UB.
36.875MHz with SL-F30AS.
- *5. 33.5MHz with SL-F30UB.
31.375MHz with SL-F30AS.
32.9MHz with SL-F30/F60SA.
- *6. 6MHz with SL-F30UB/F30SA/F60SA.
5.5MHz with SL-F30AS.
- *7. Not available with SL-F30UB.

8. MECHANICAL DESCRIPTION


8-1. CASSETTE LOADING

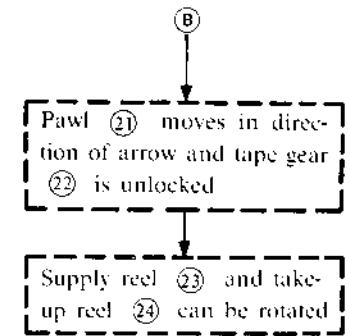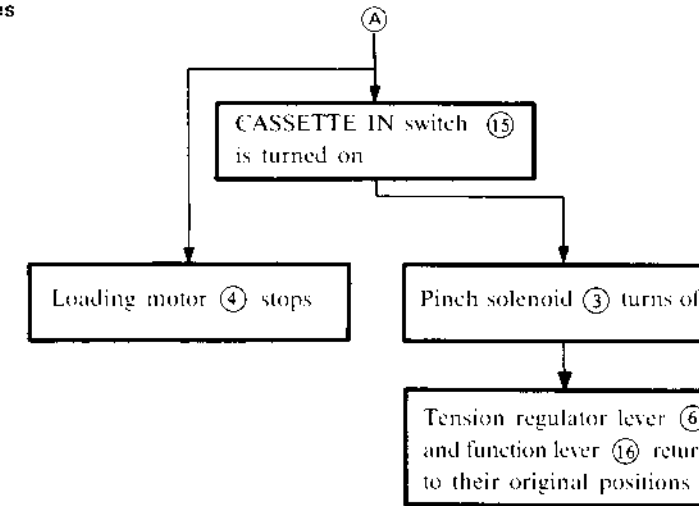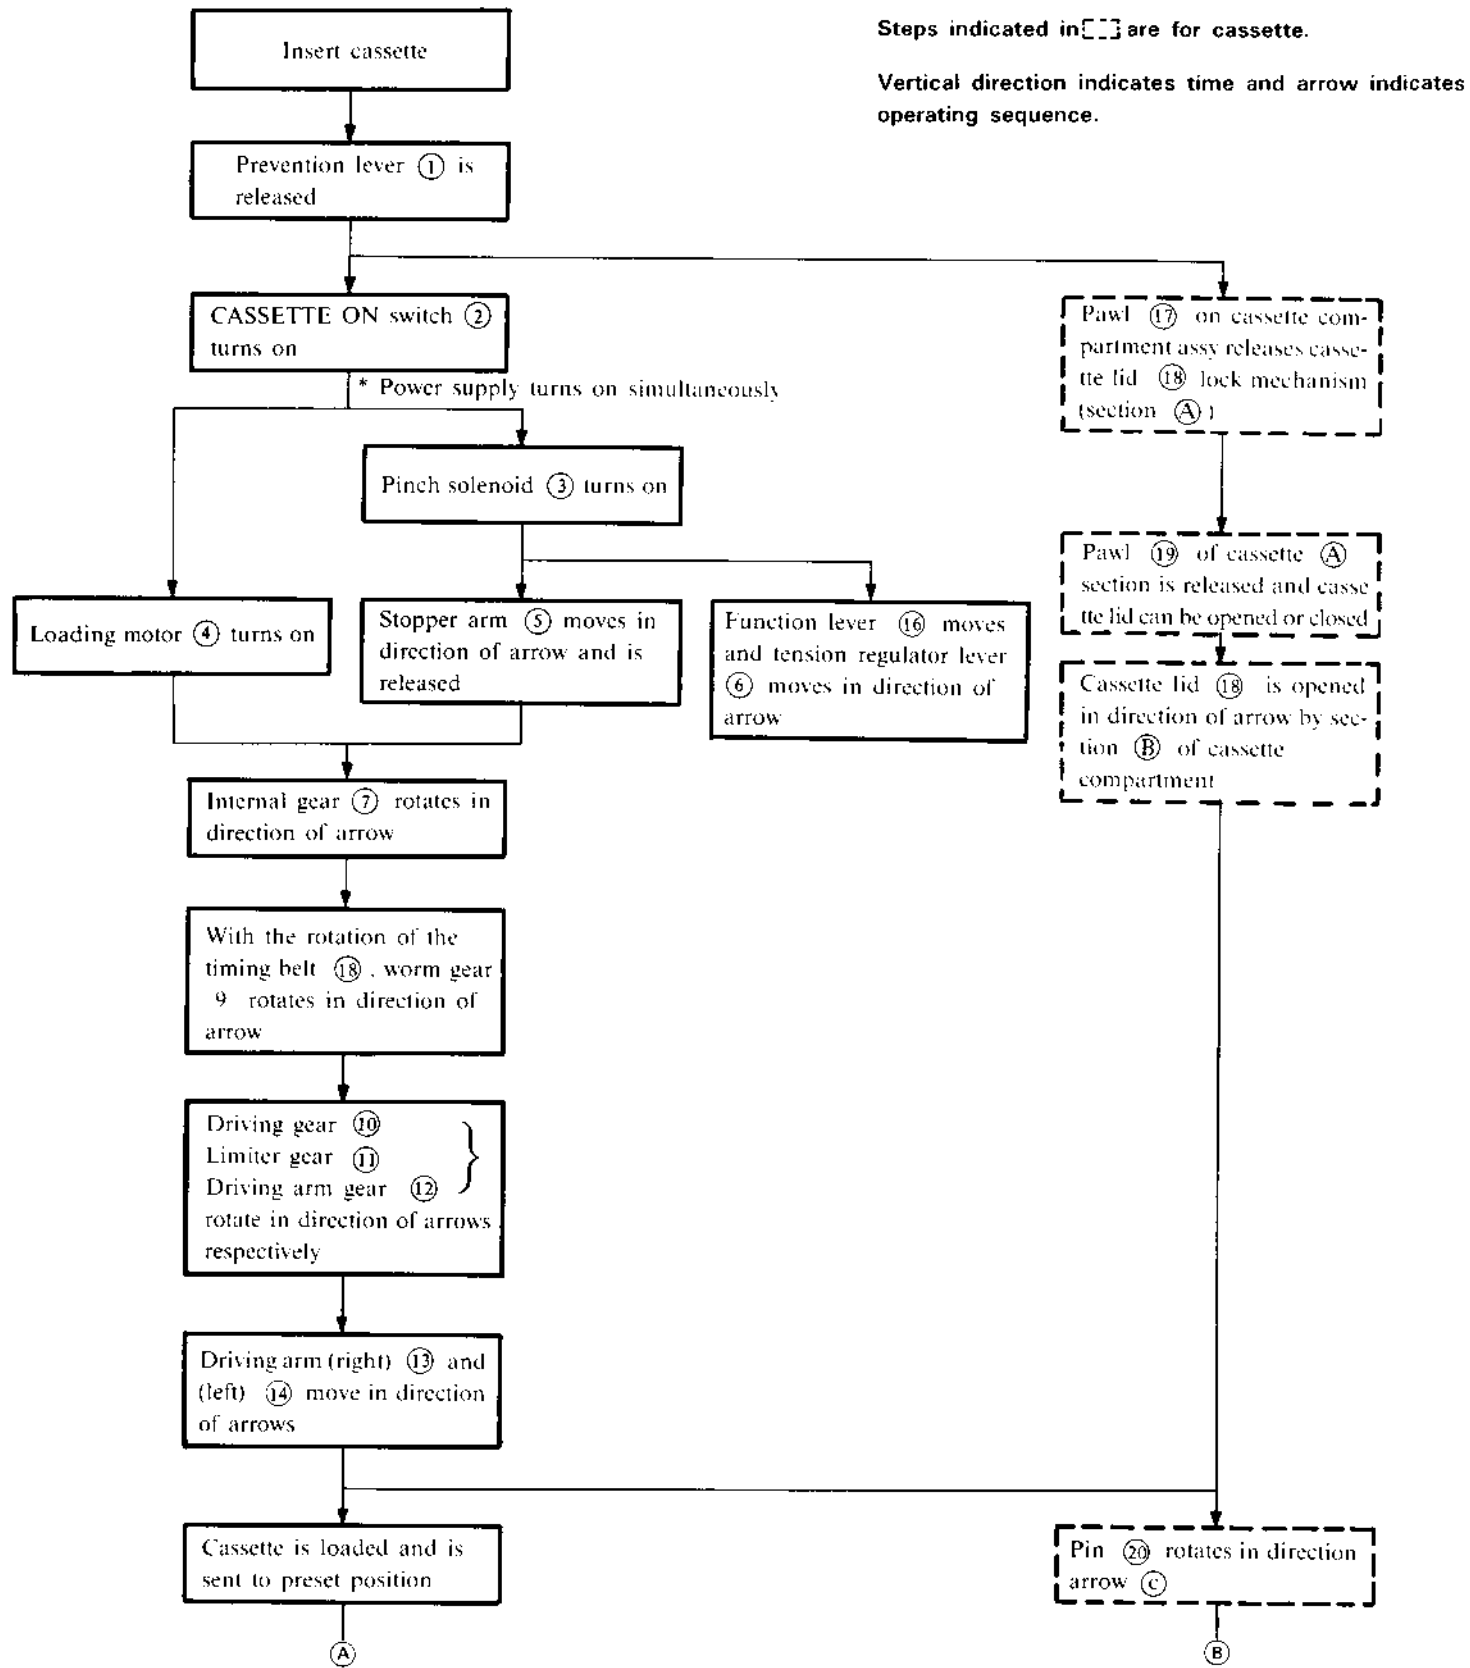


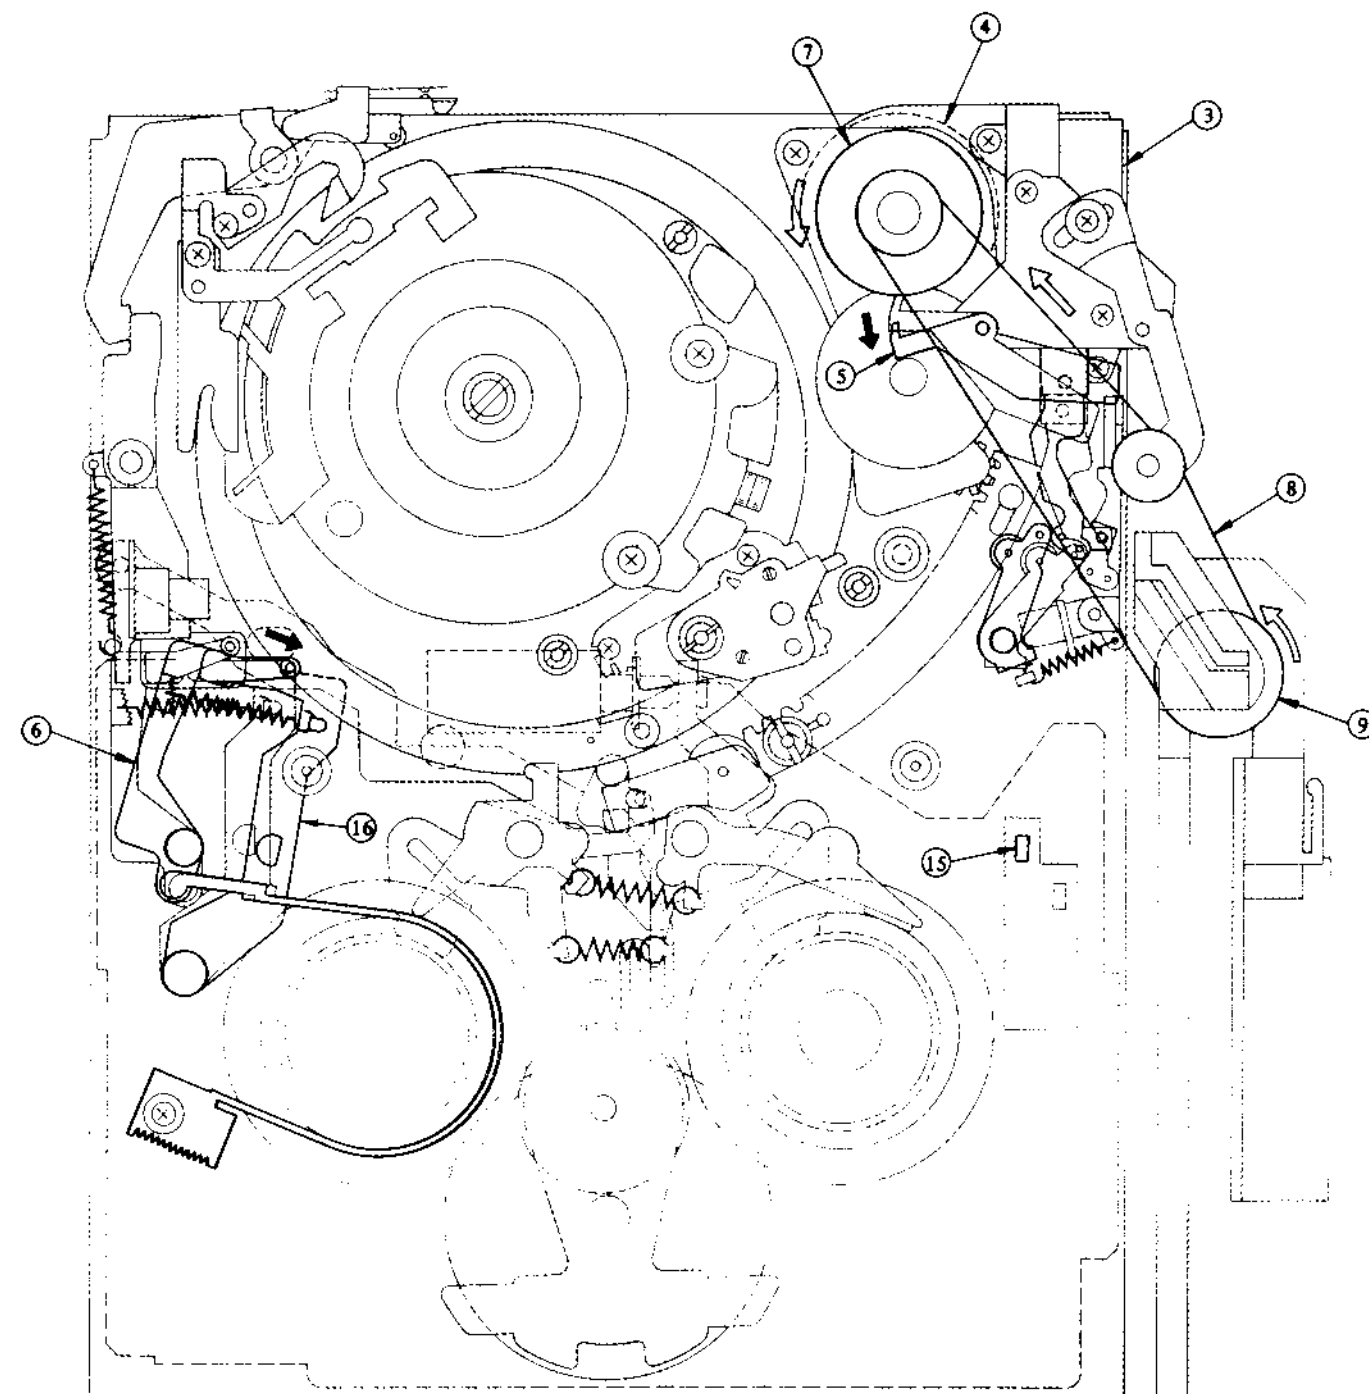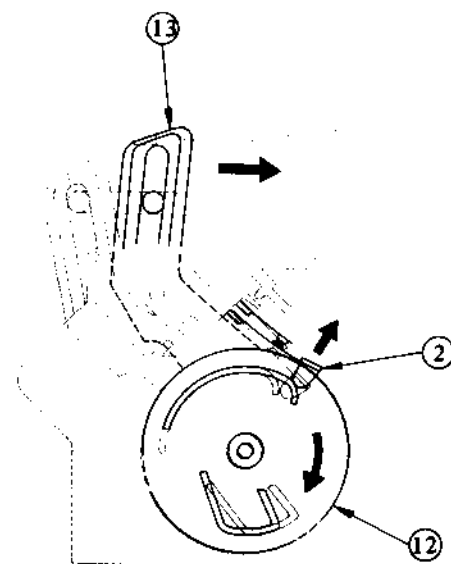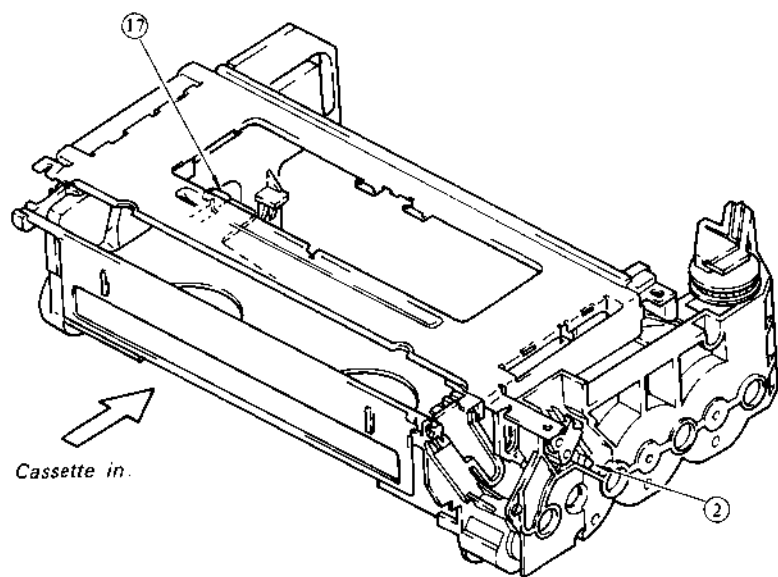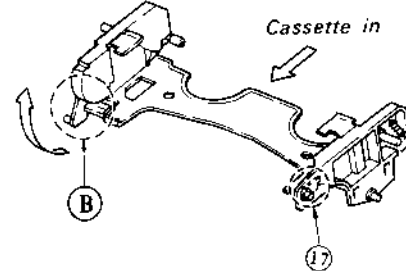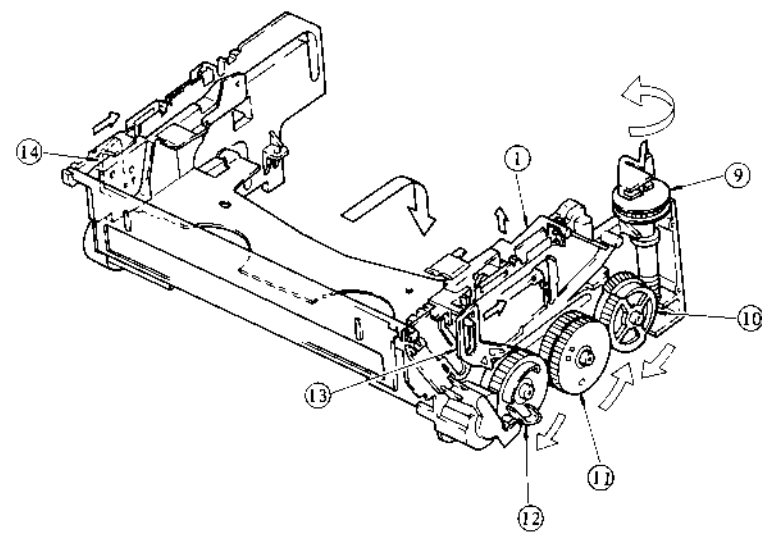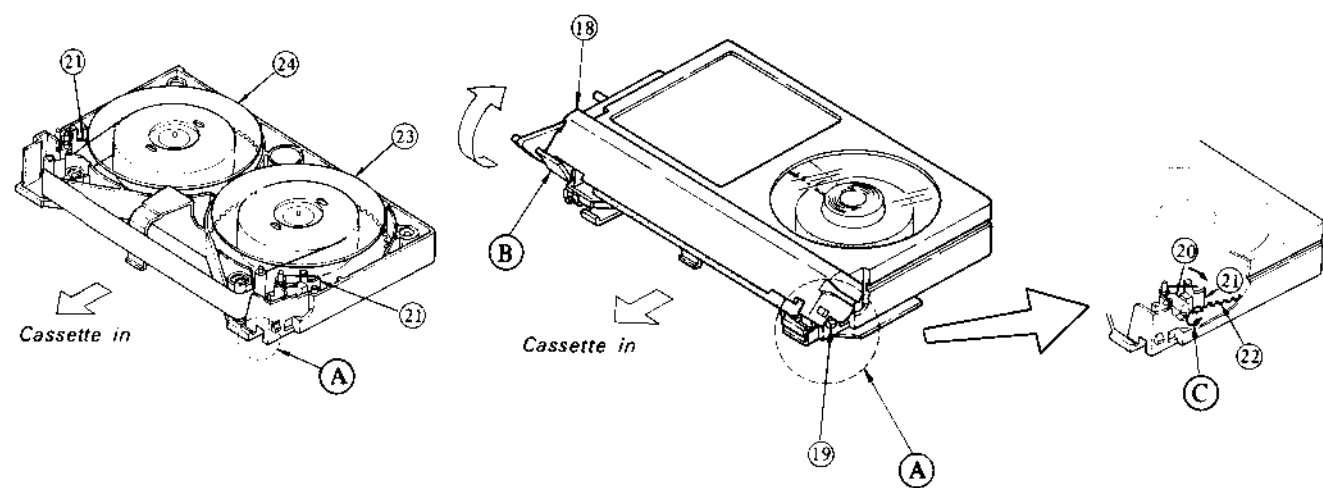


8-2. TAPE THREADING

Vertical direction indicates time and arrow indicates operating sequence.

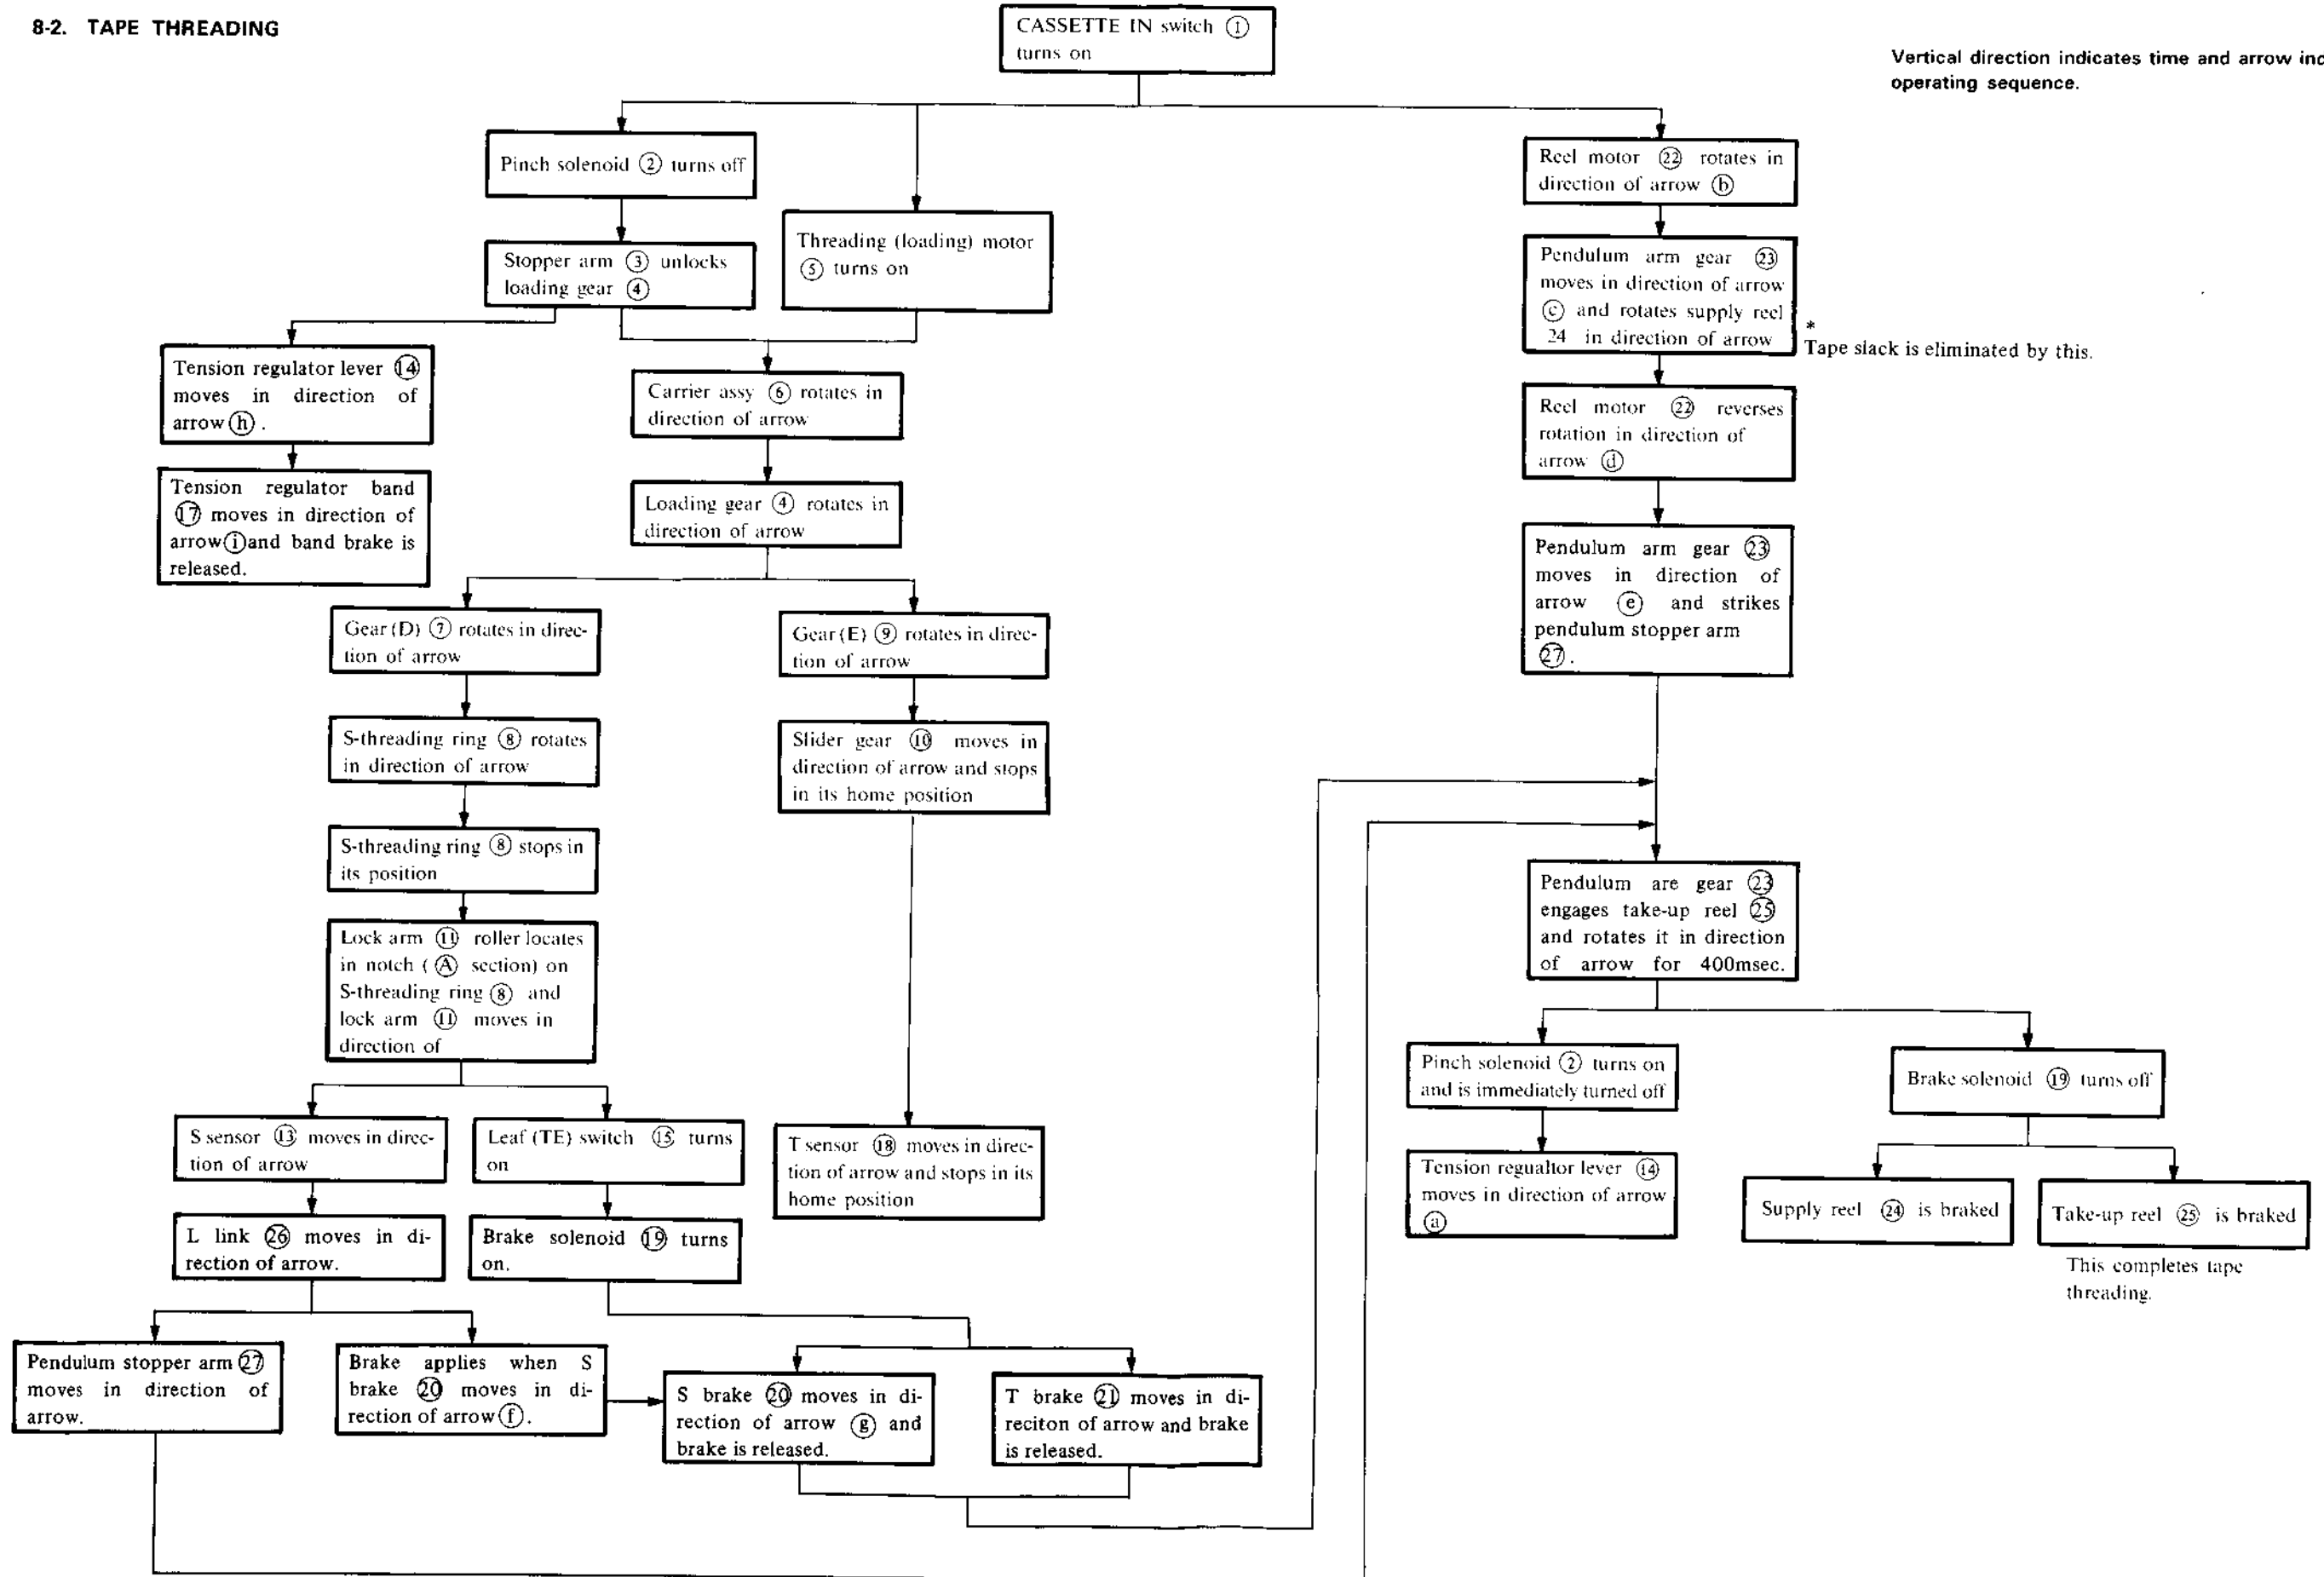



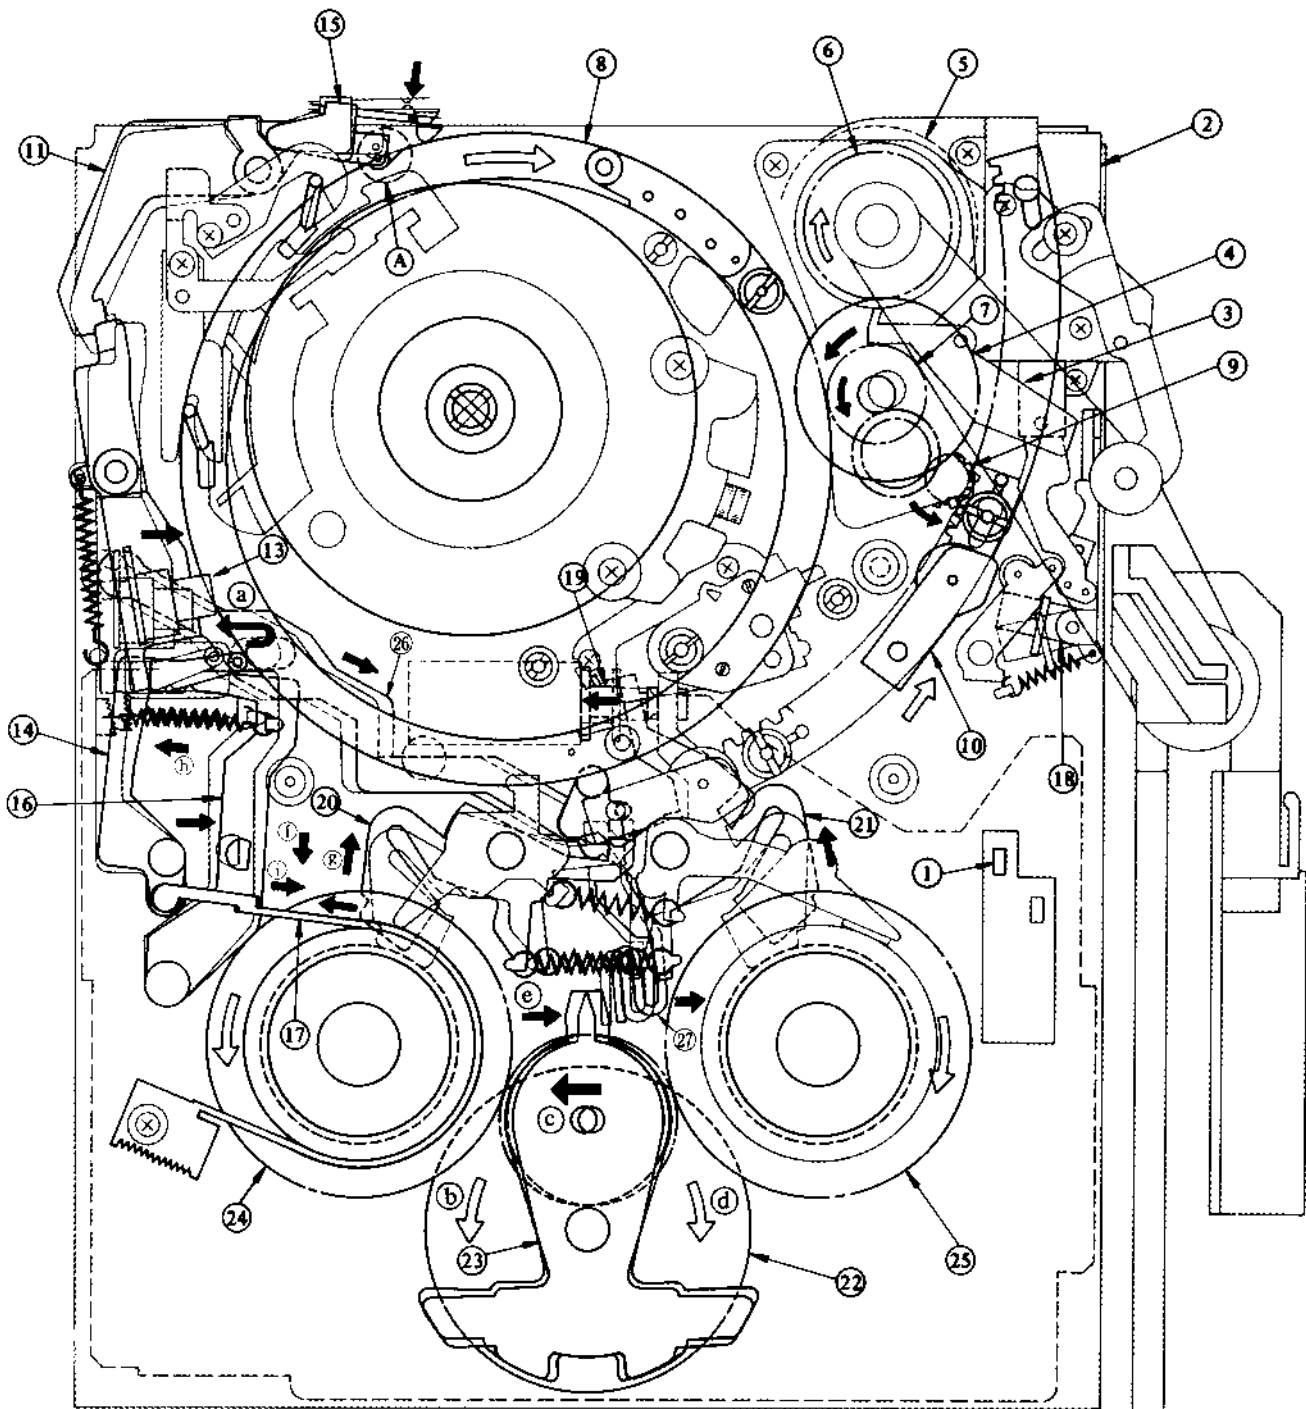


8-3. TAPE PATH

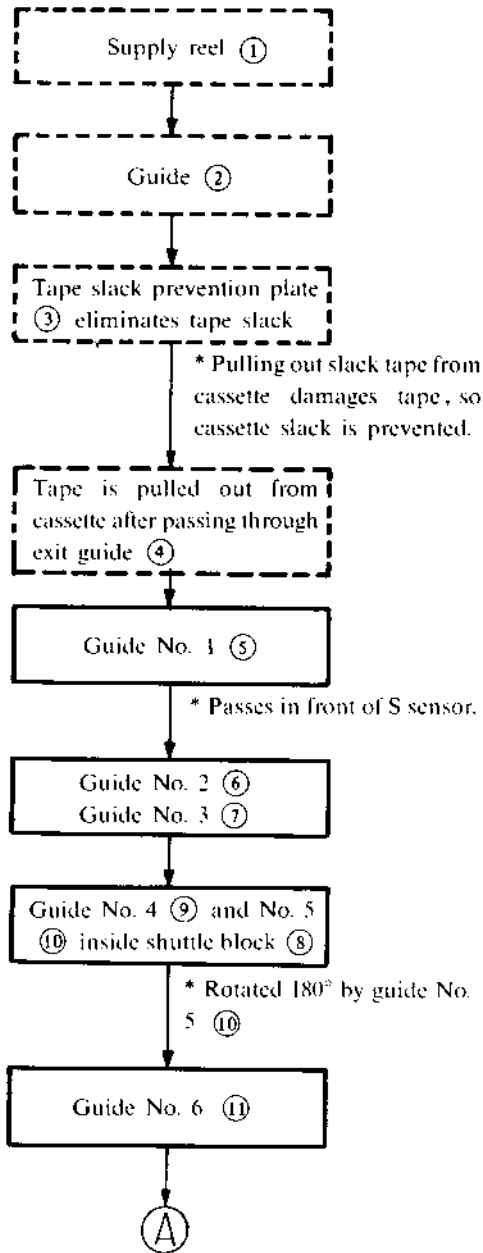


Steps indicated in [] are for cassette.
Vertical direction indicates time and arrow indicates operating sequence.

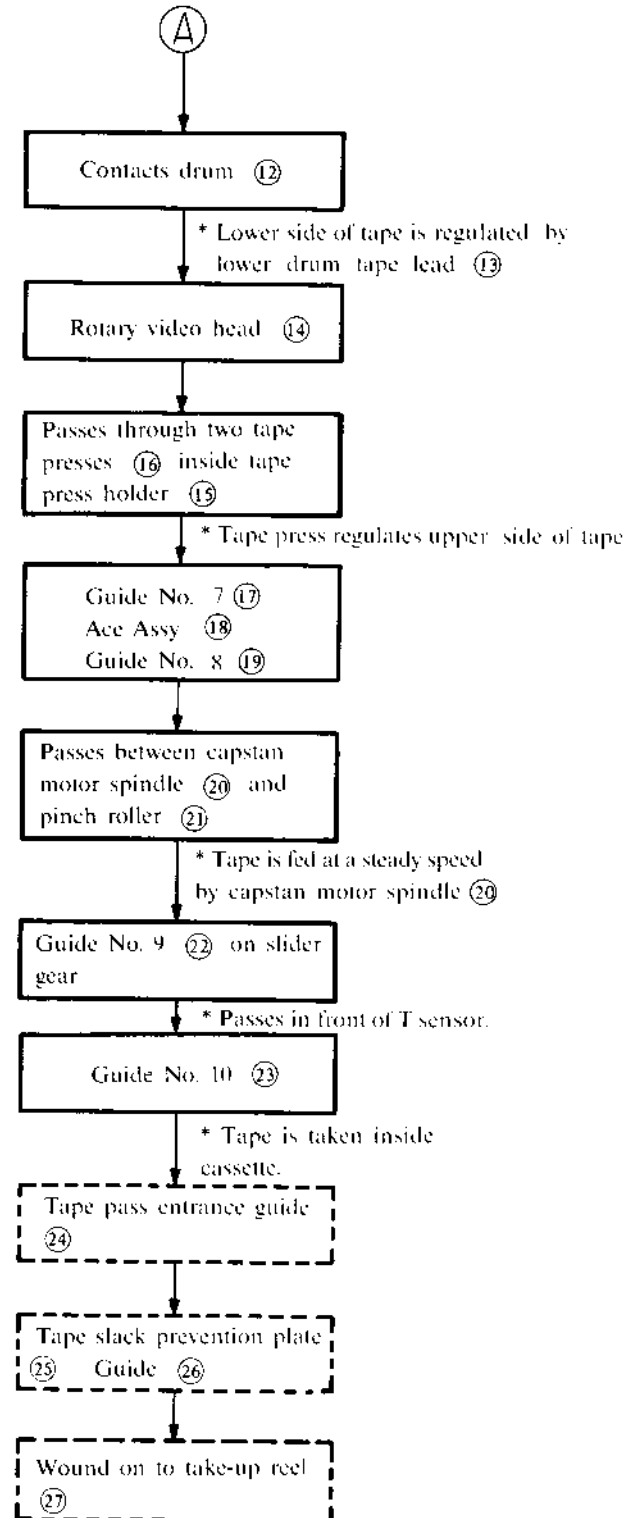


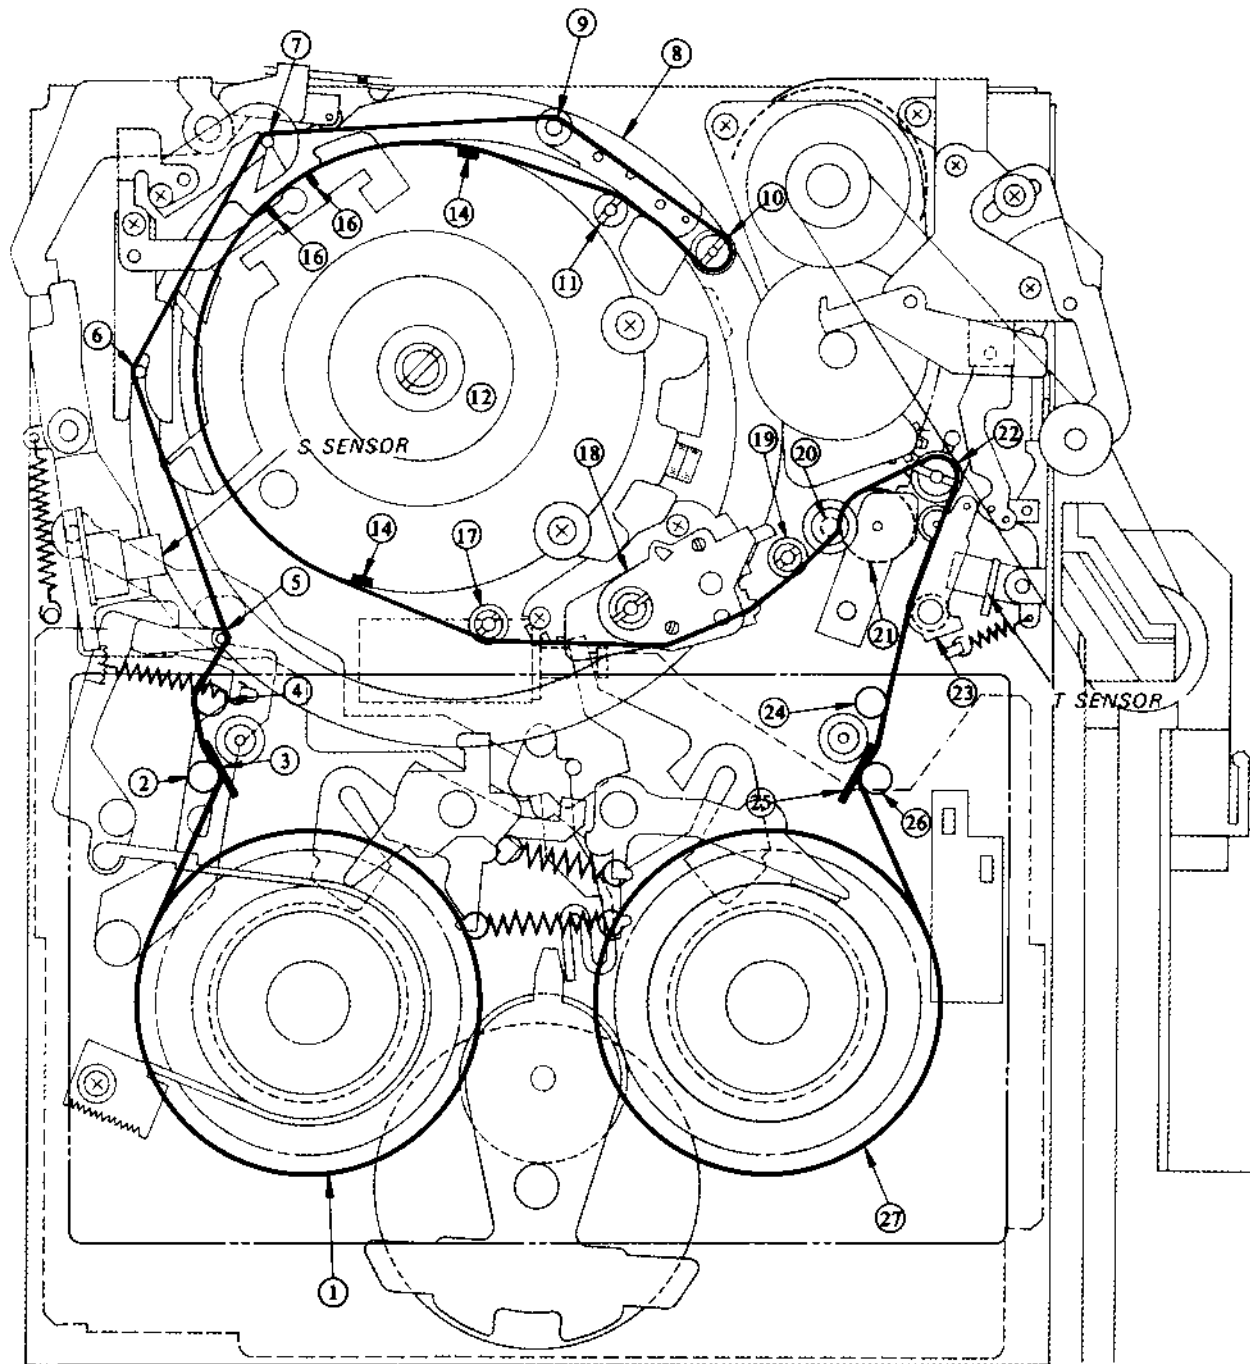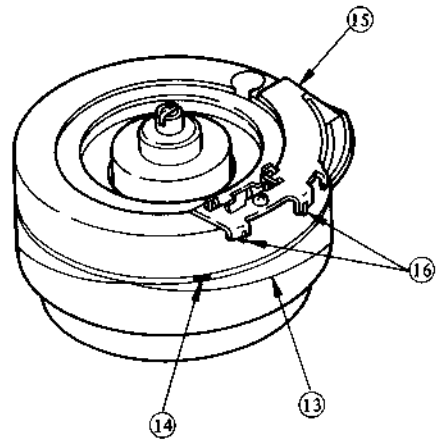

8-4. PLAY MODE


Vertical direction indicates time and arrow indicates operating sequence.

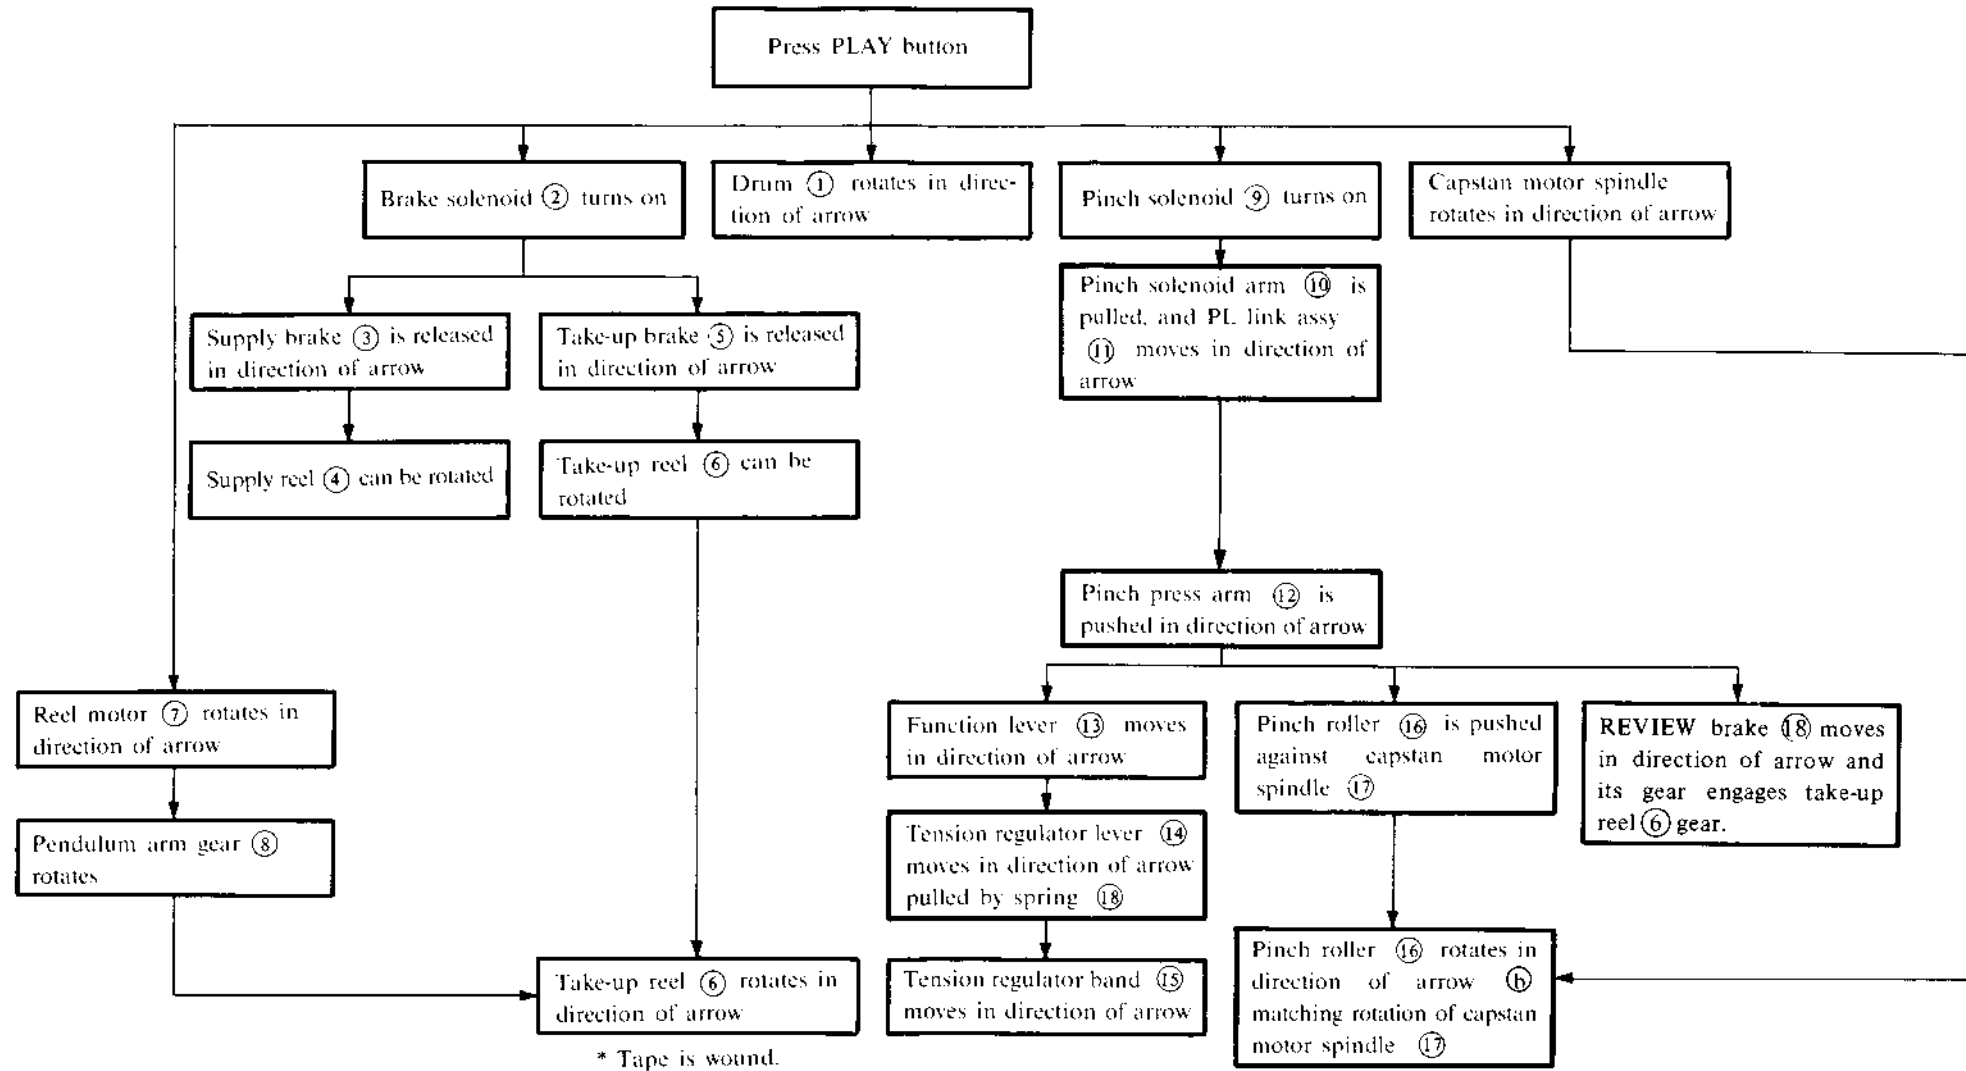


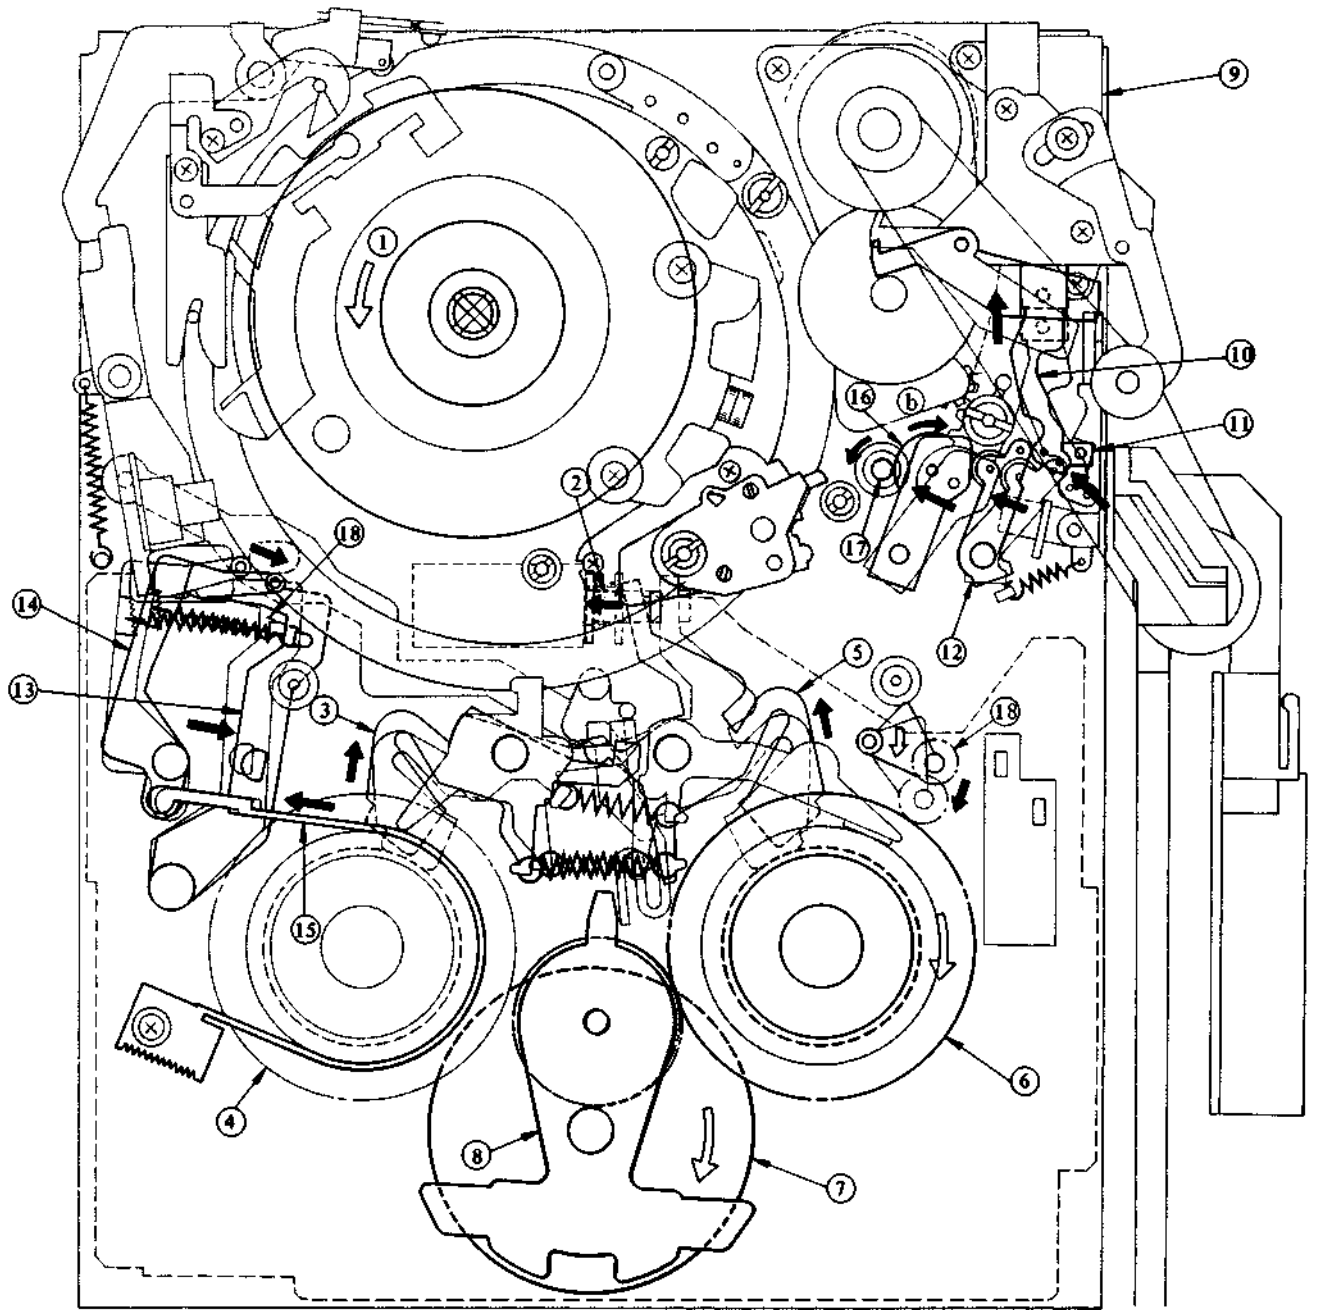

8-5. FF MODE


Vertical direction indicates time and arrow indicates operating sequence.

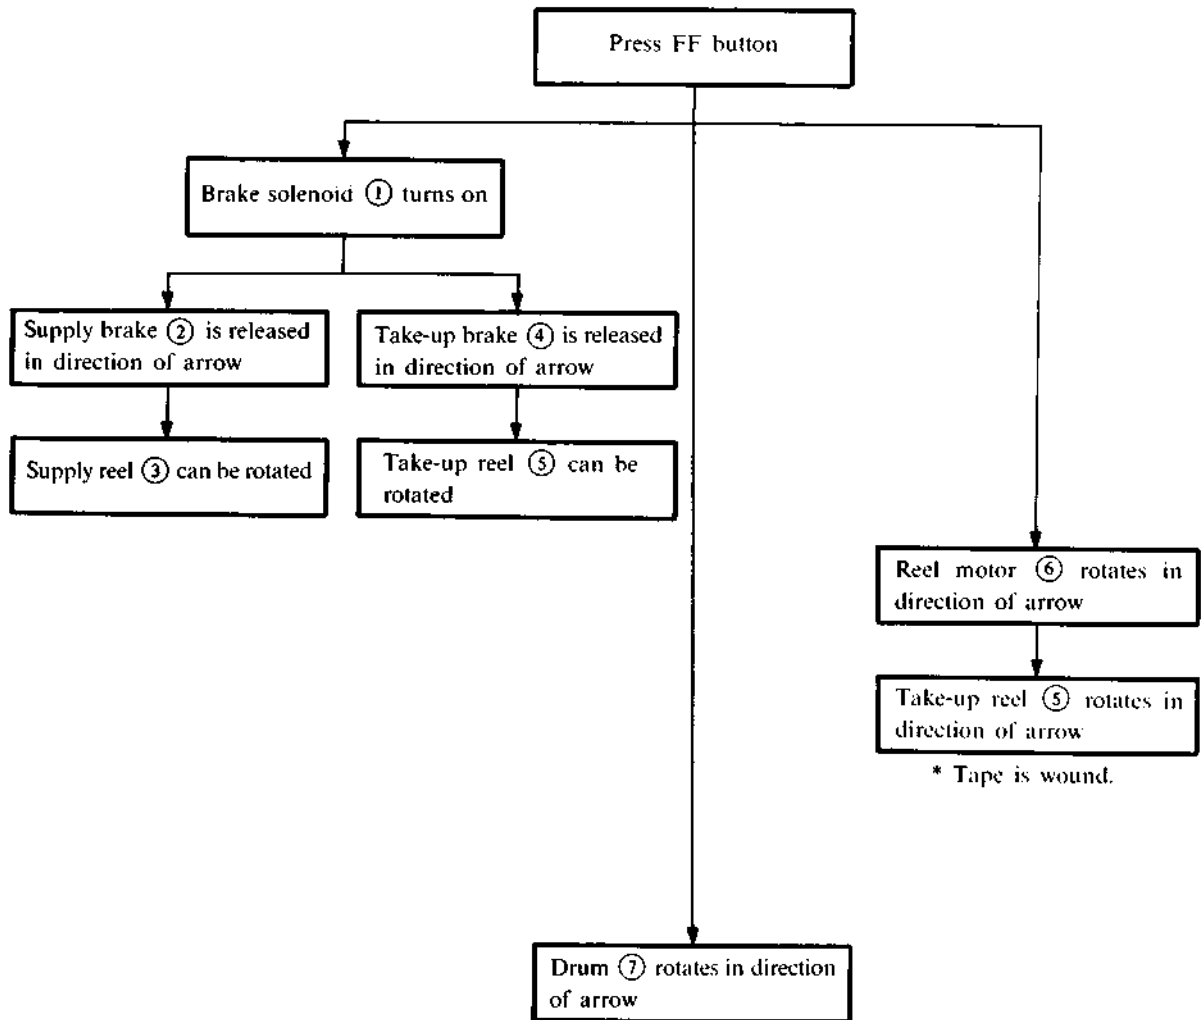


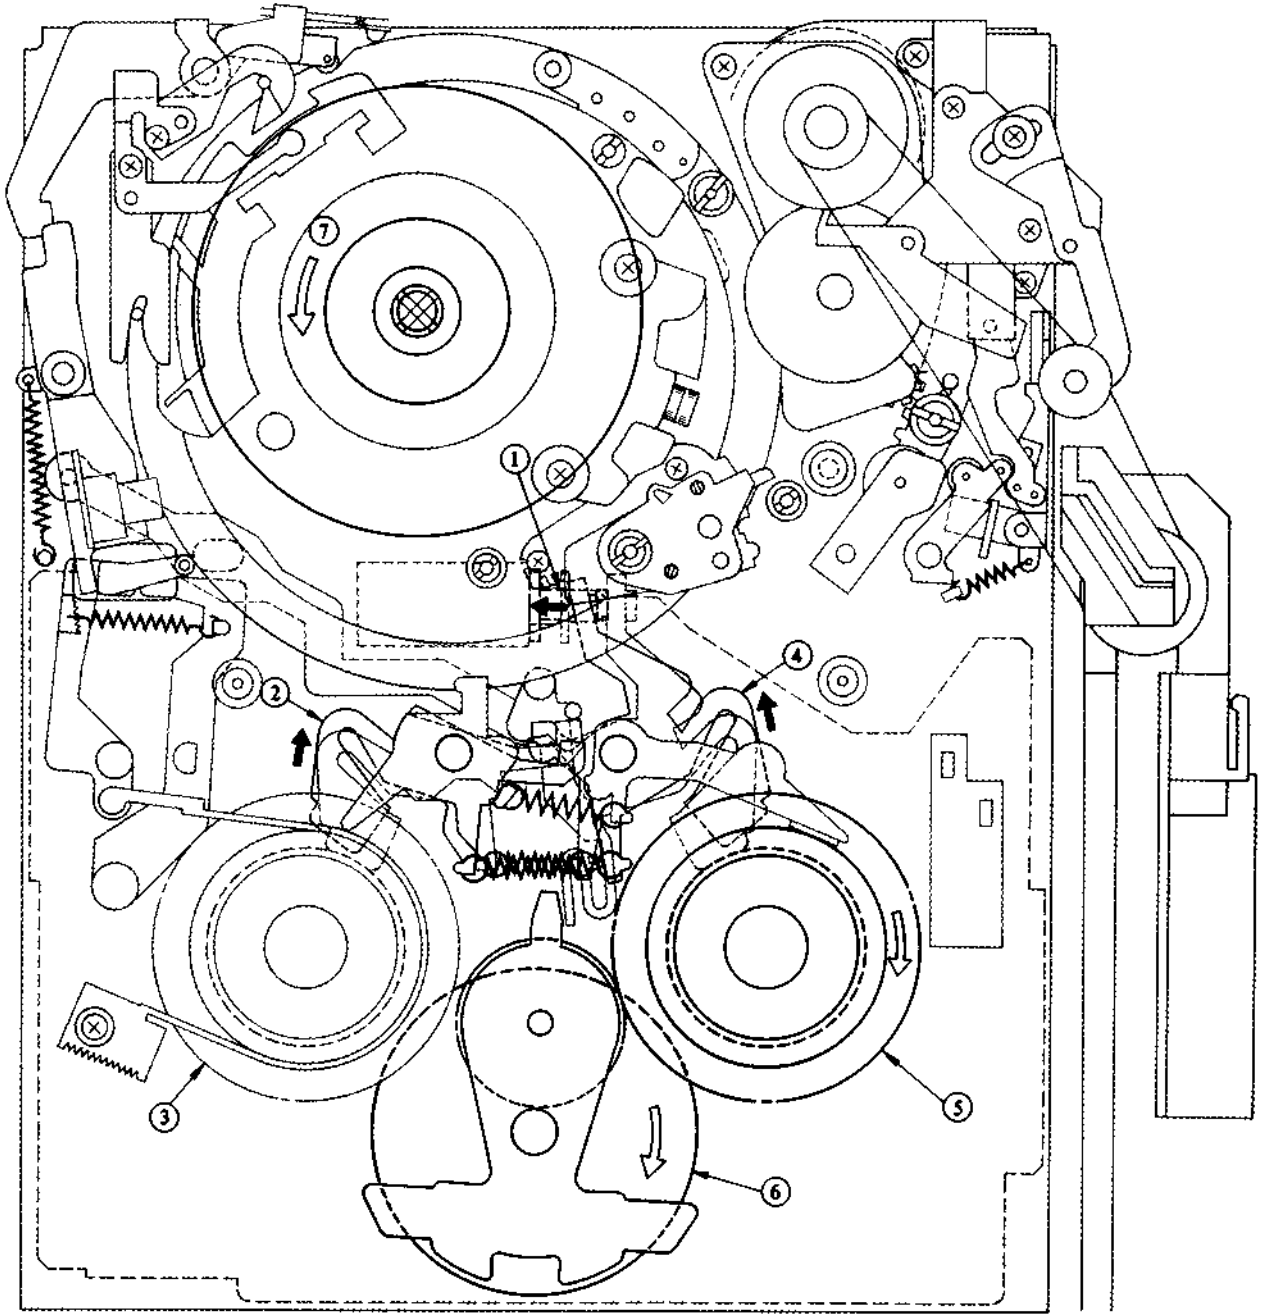

8-6. REW MODE


Vertical direction indicates time and arrow indicates operating sequence.

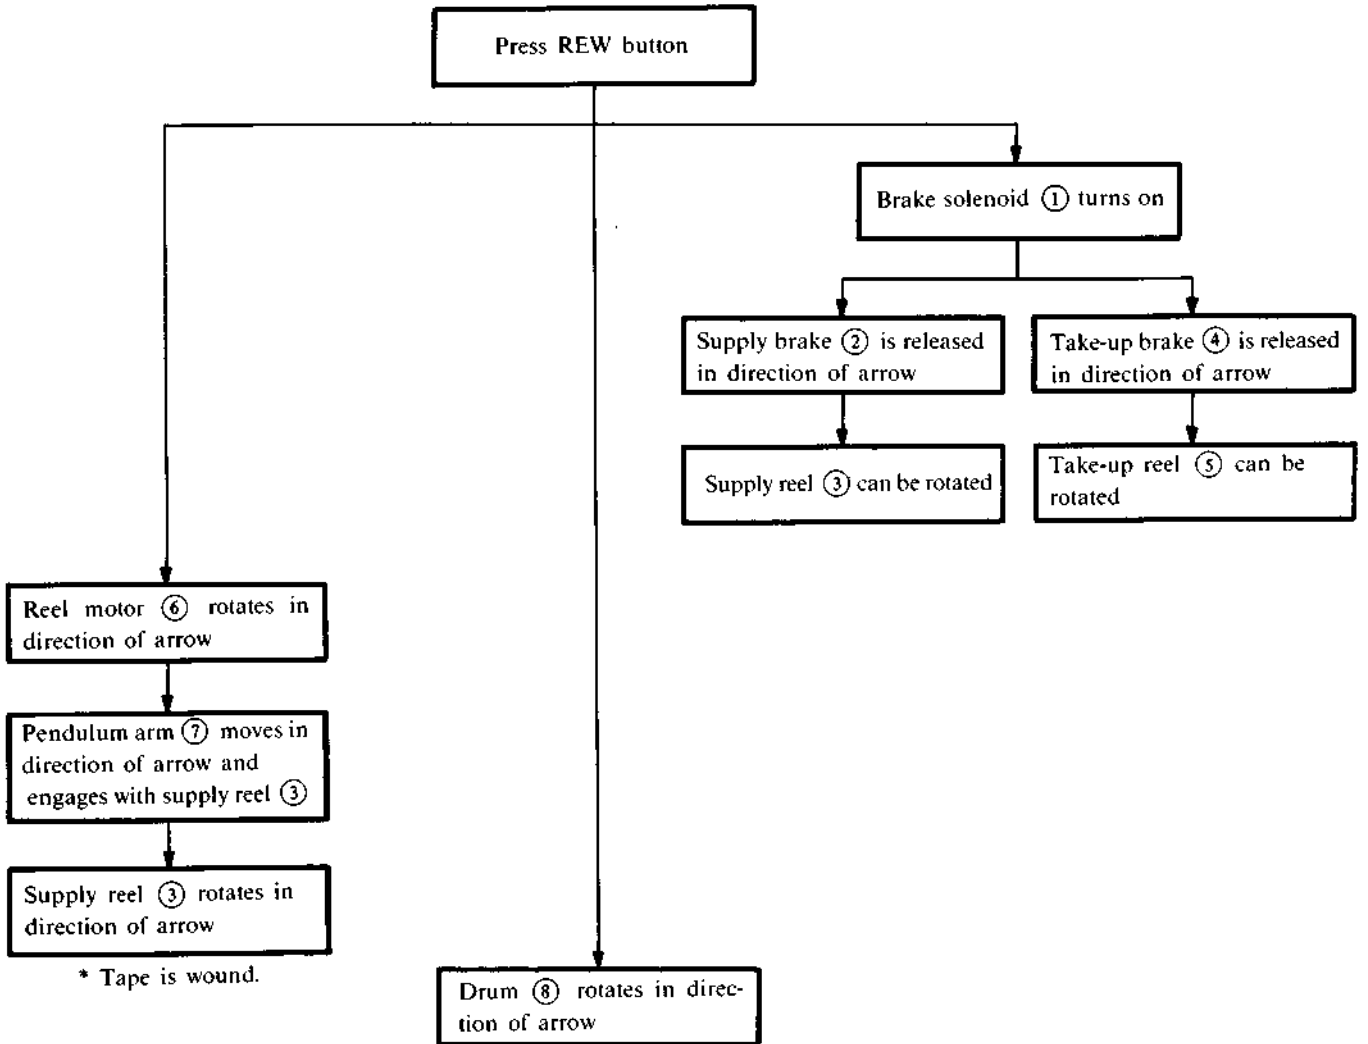


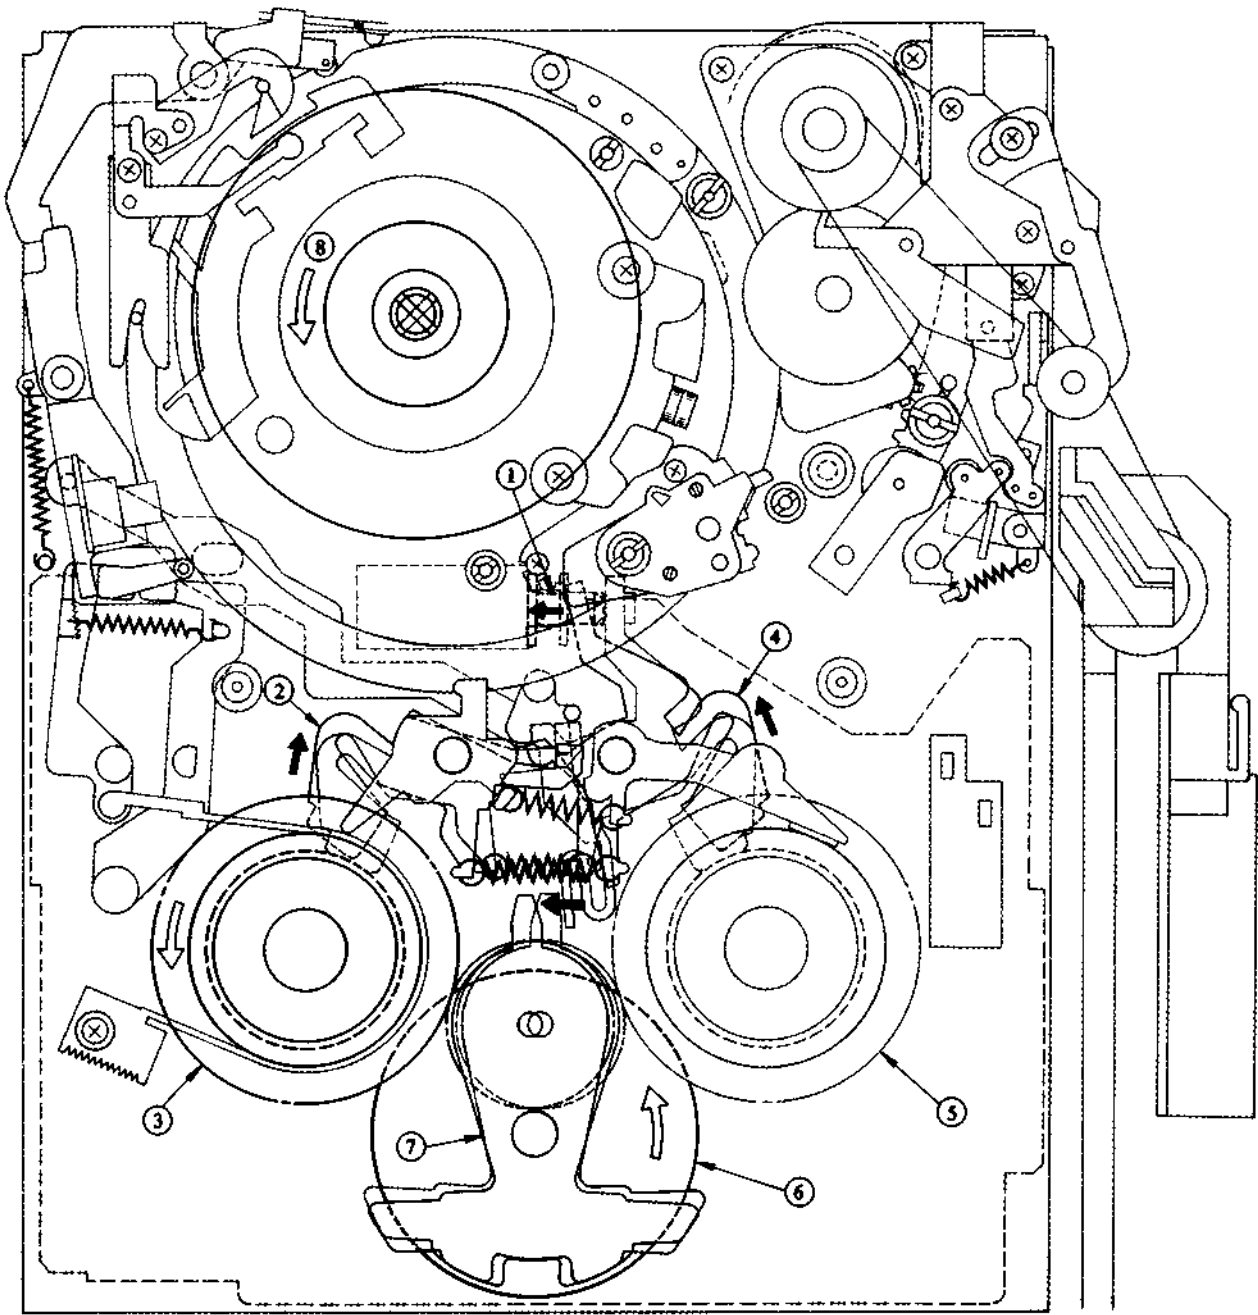

8-7. RECORD MODE

Vertical direction indicates time and arrow indicates operating sequence.

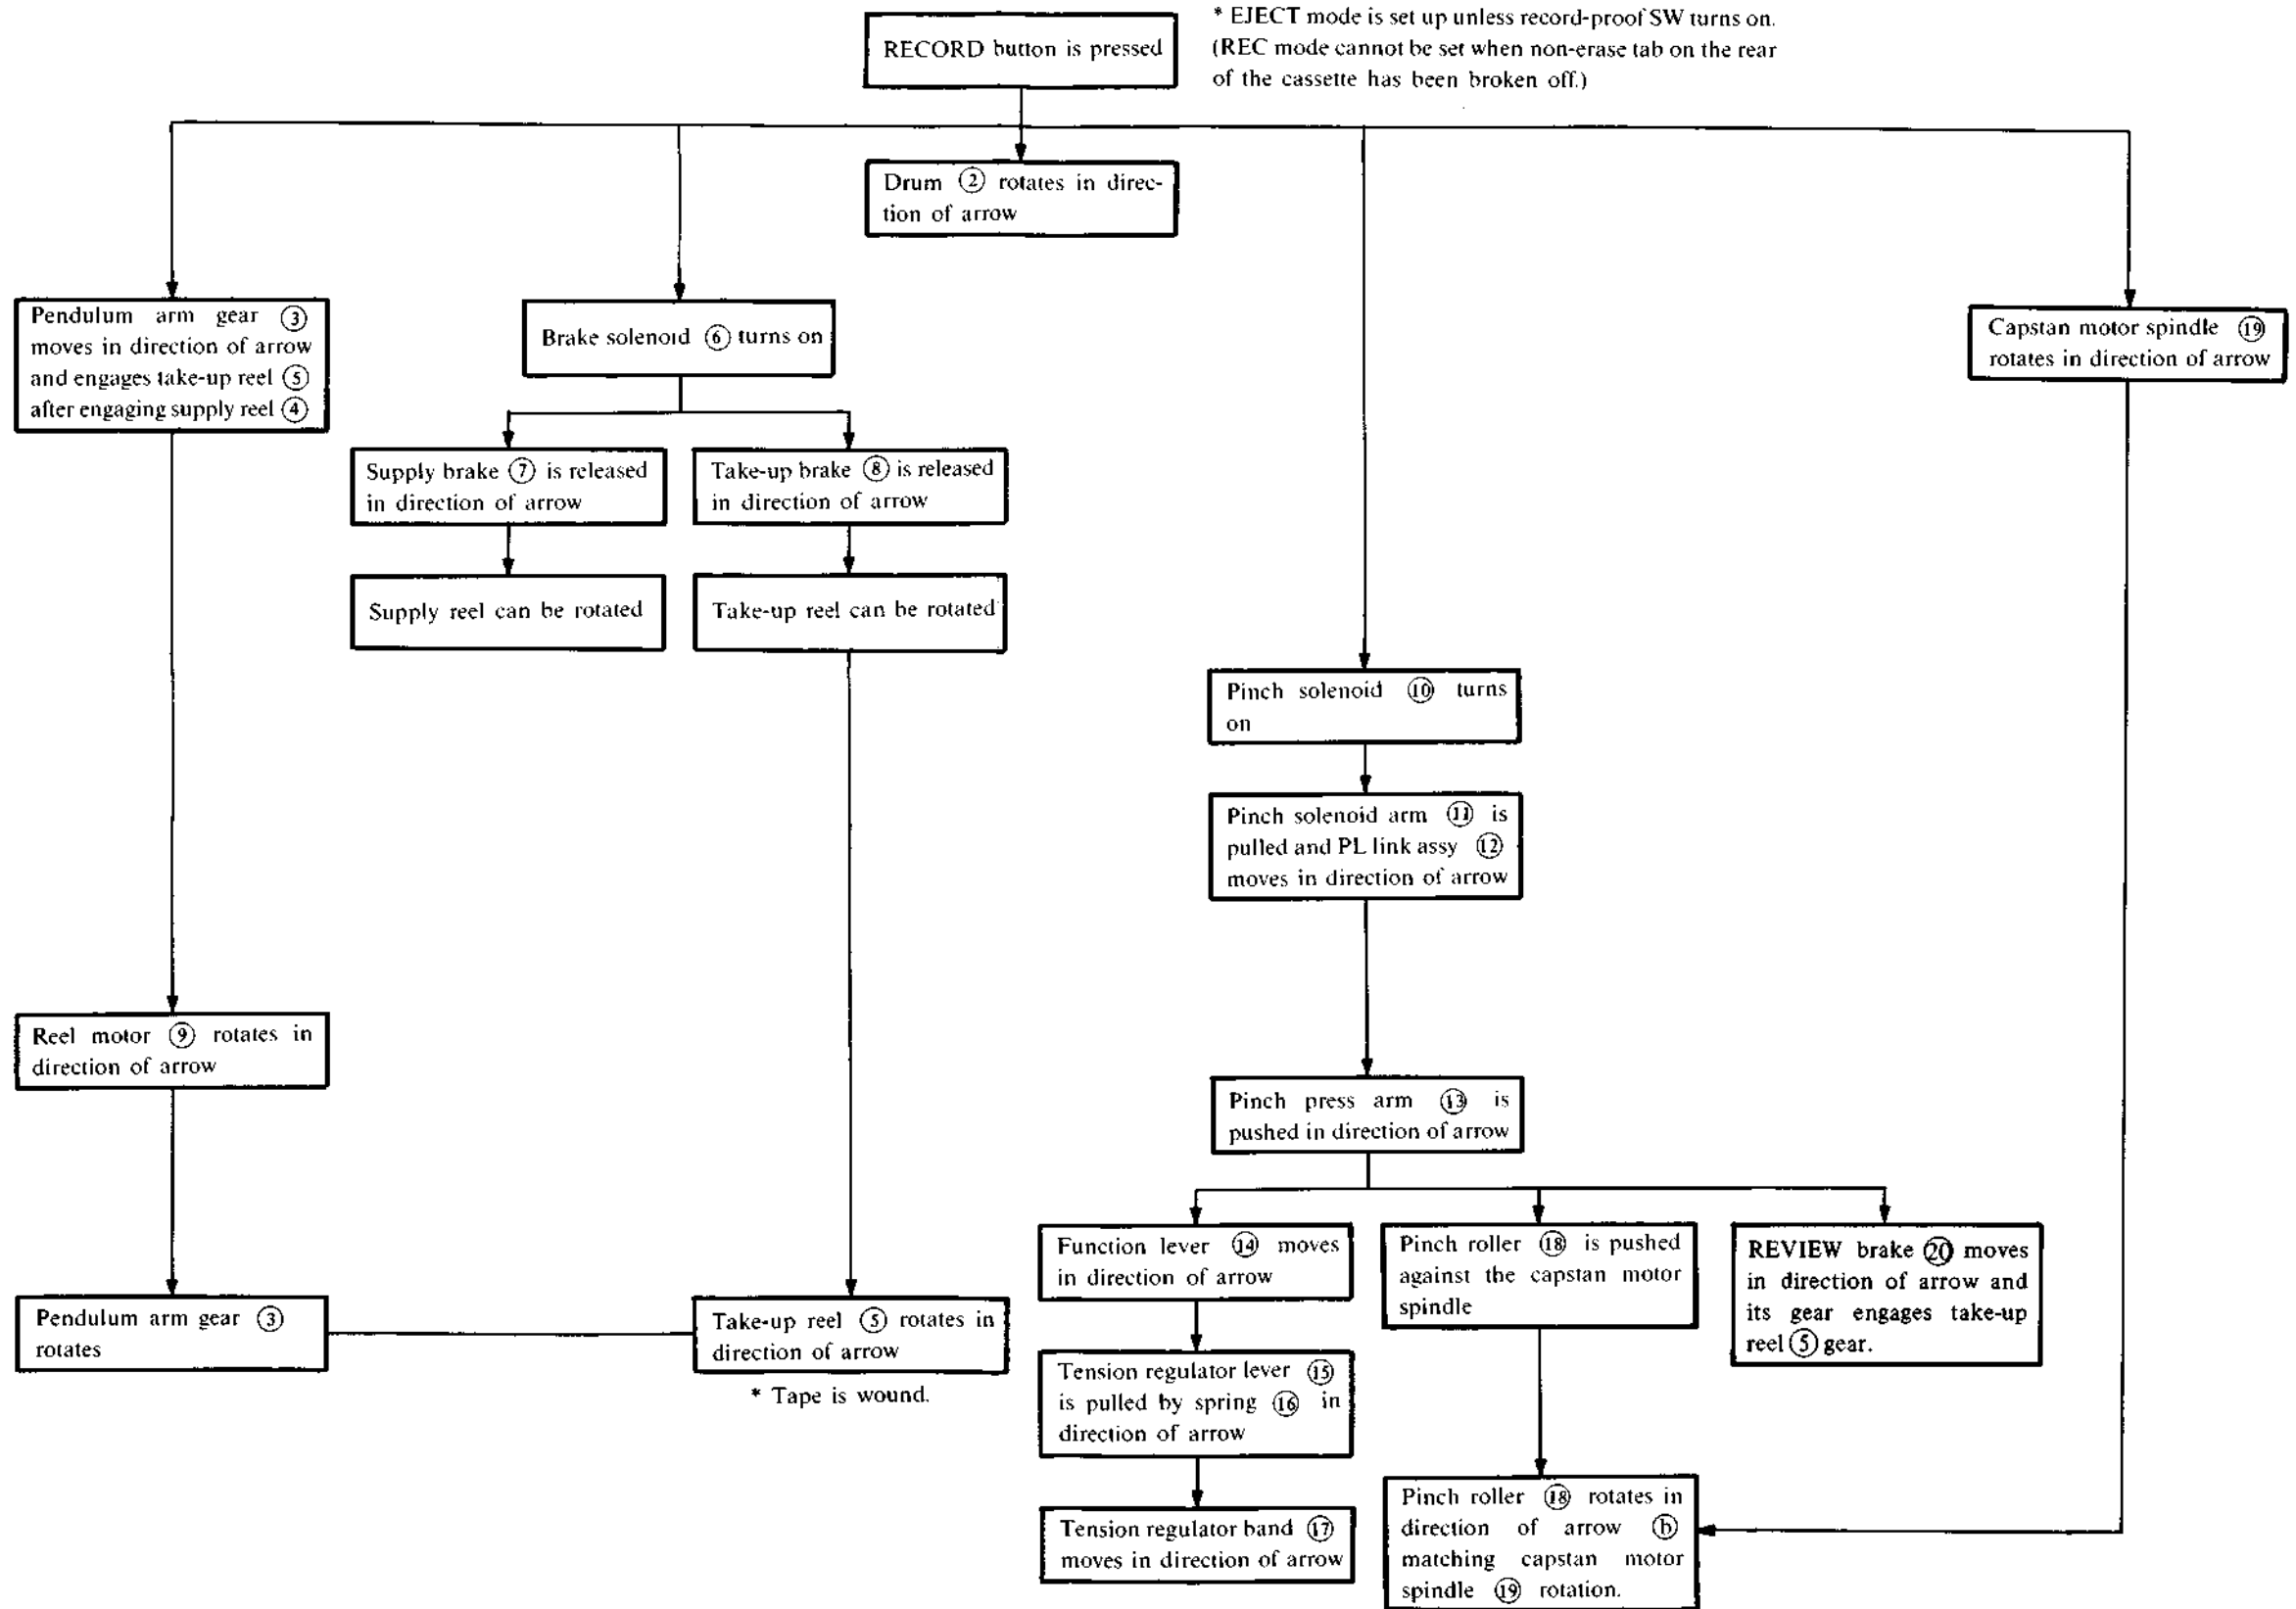


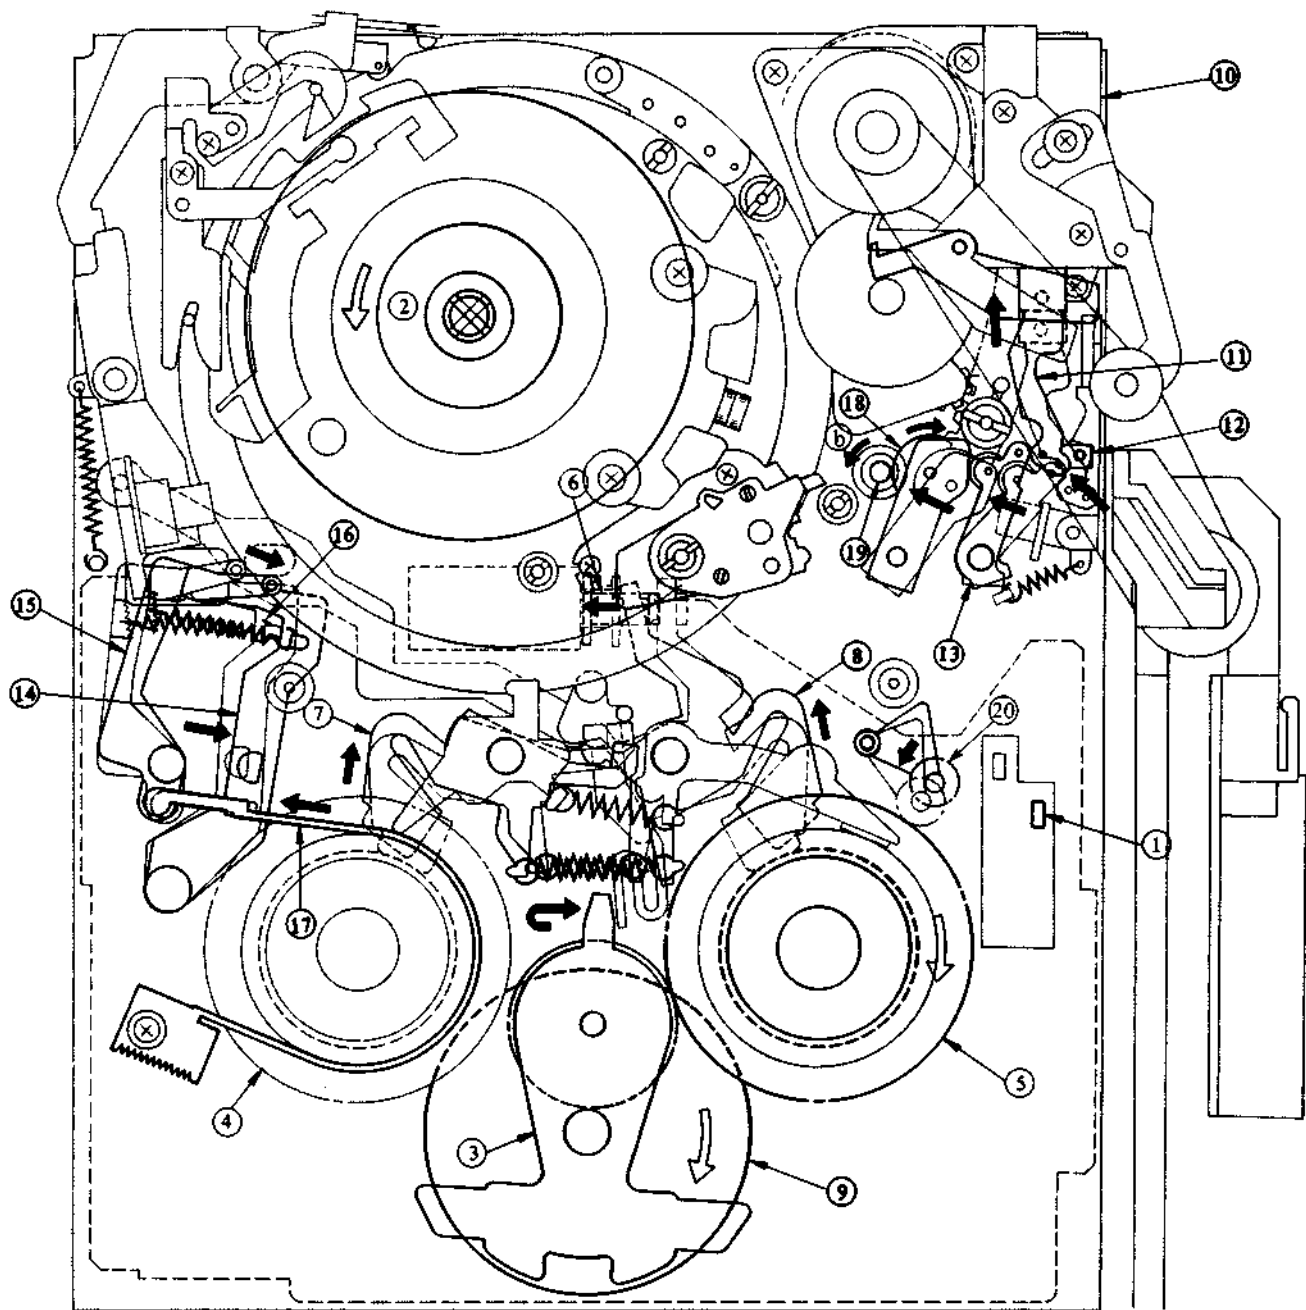


8-8. PICTURE SEARCH (CUE)

Picture search
CUE/REVIEW is a capstan drive (in the state of pressing pinch roller).

Vertical direction indicates time and arrow indicates operating sequence

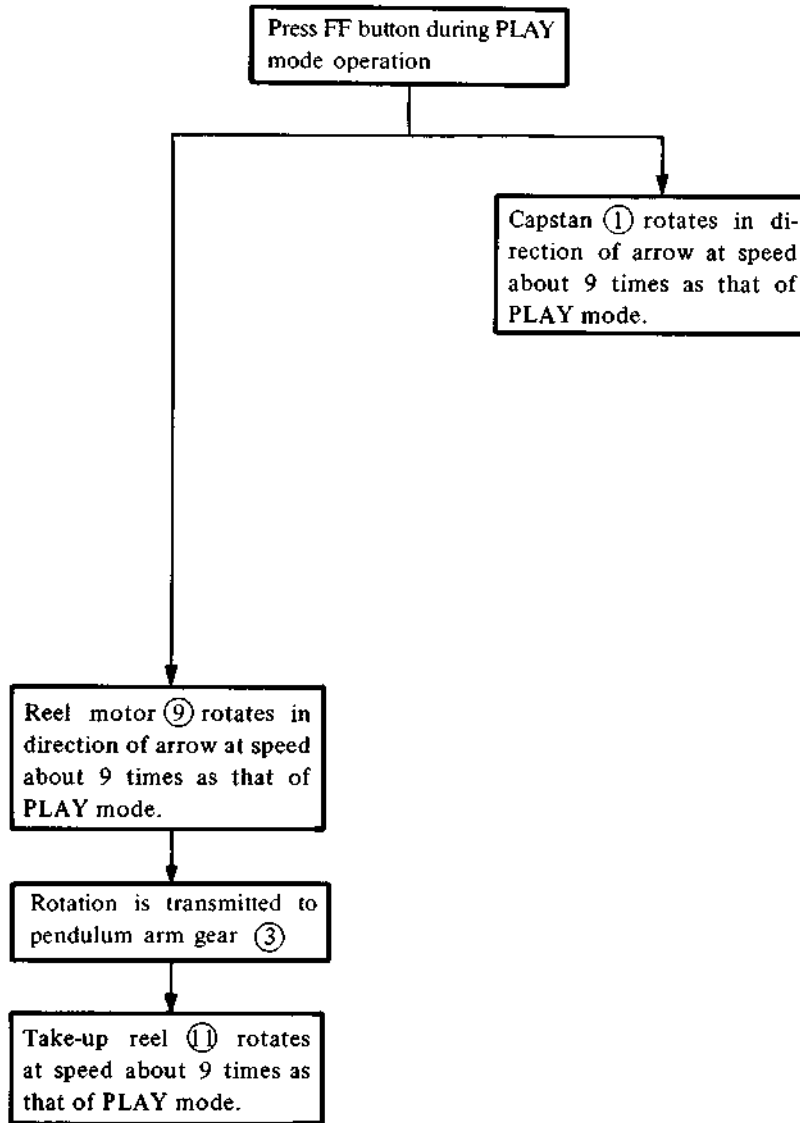


* Shifting to FF mode is done only when this button remains pushed. When finger is taken out from FF button it returns to PLAY mode.

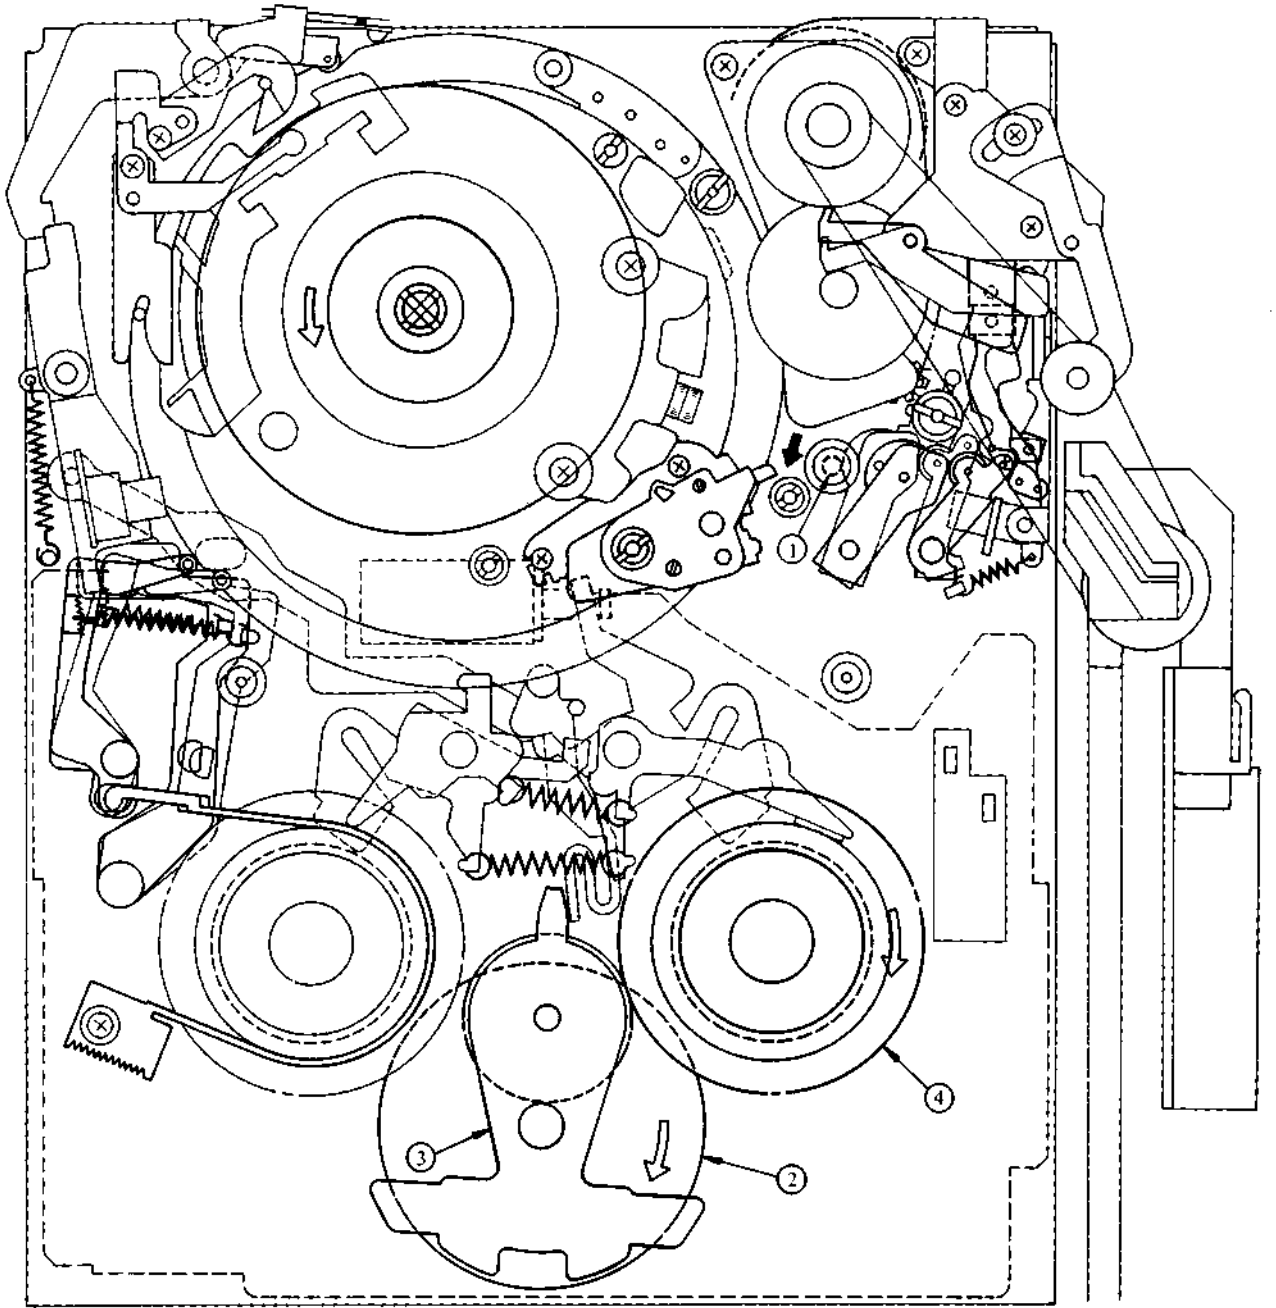


8-9. PICTURE SEARCH (REVIEW)

Vertical direction indicates time and arrow indicates operating sequence.

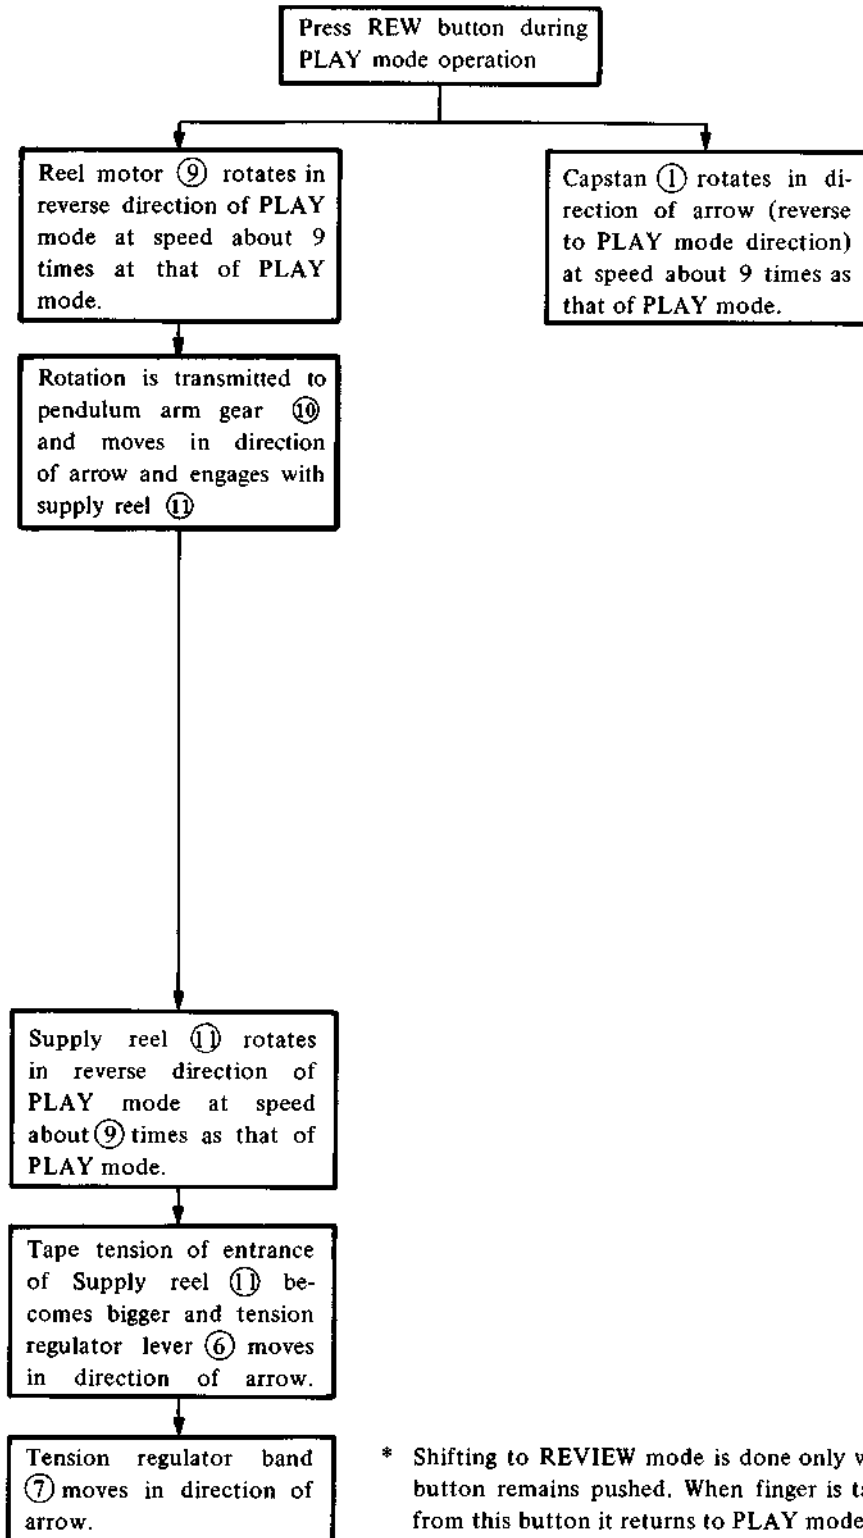


* Shifting to REVIEW mode is done only when this button remains pushed. When finger is taken out from this button it returns to PLAY mode.

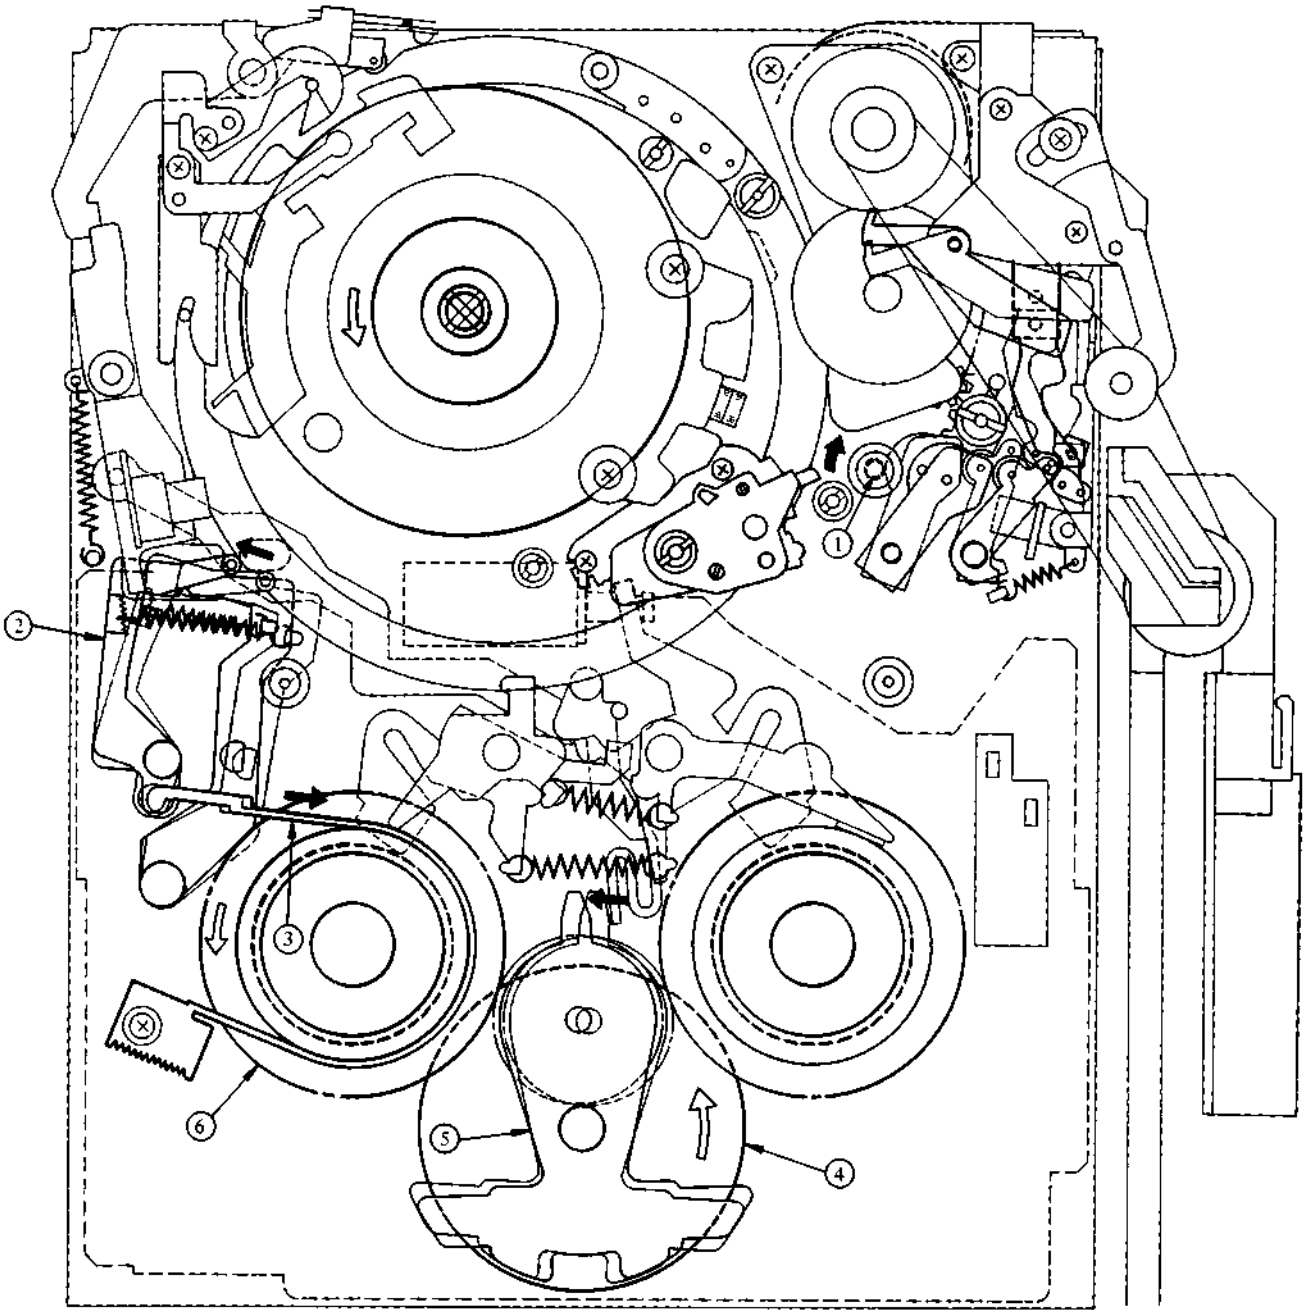


8-10. FR PICTURE SEARCH (CUE)

Vertical direction indicates time and arrow indicates operating sequence.

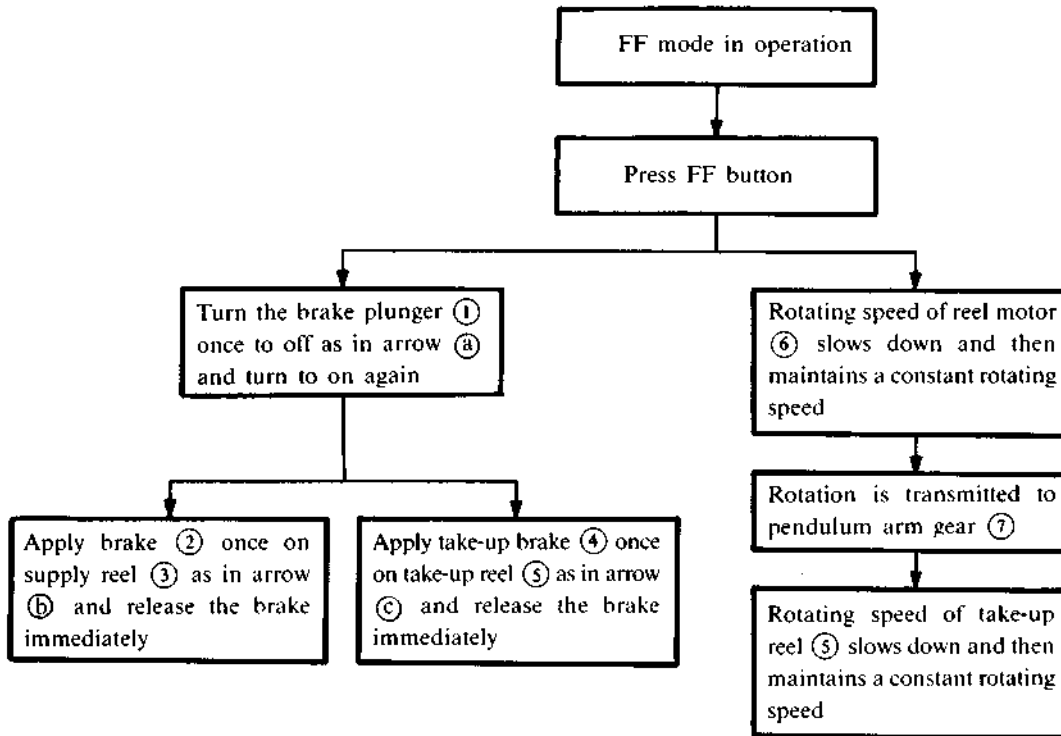


- * Changes to this mode only when the FF button is being pressed.
When the finger is detached from the FF button, it returns to the FF mode.

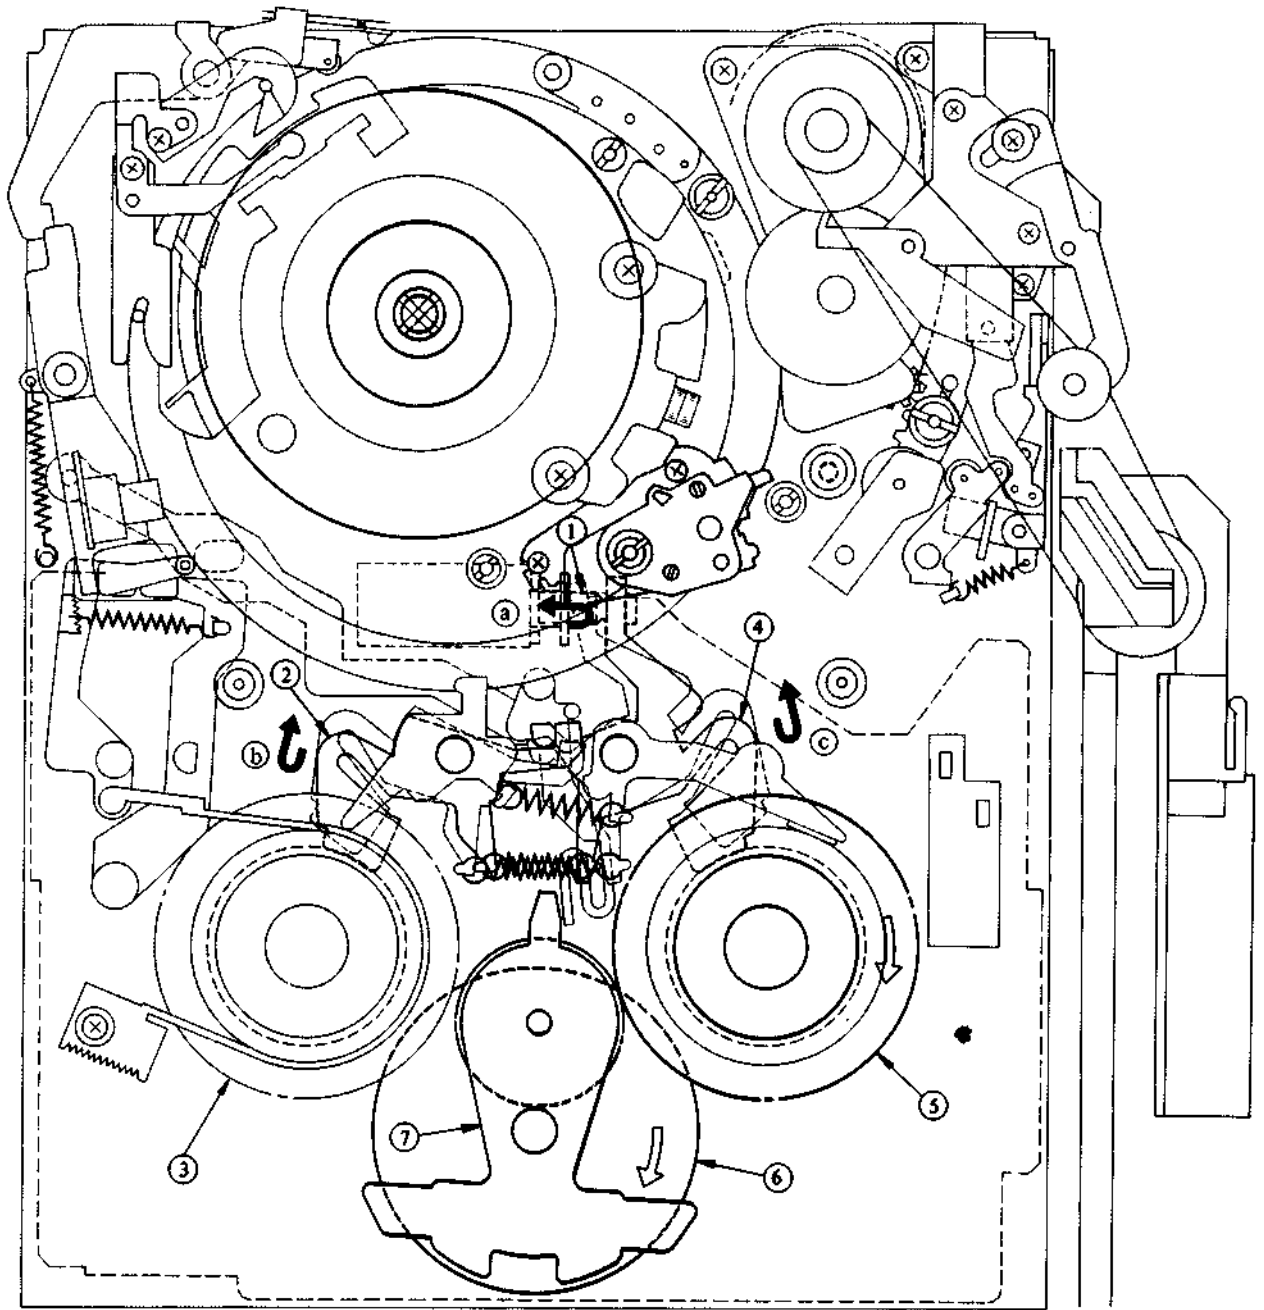


8-11 FR PICTURE RESEARCH (REVIEW)

Vertical direction indicates time and arrow indicates operating sequence.

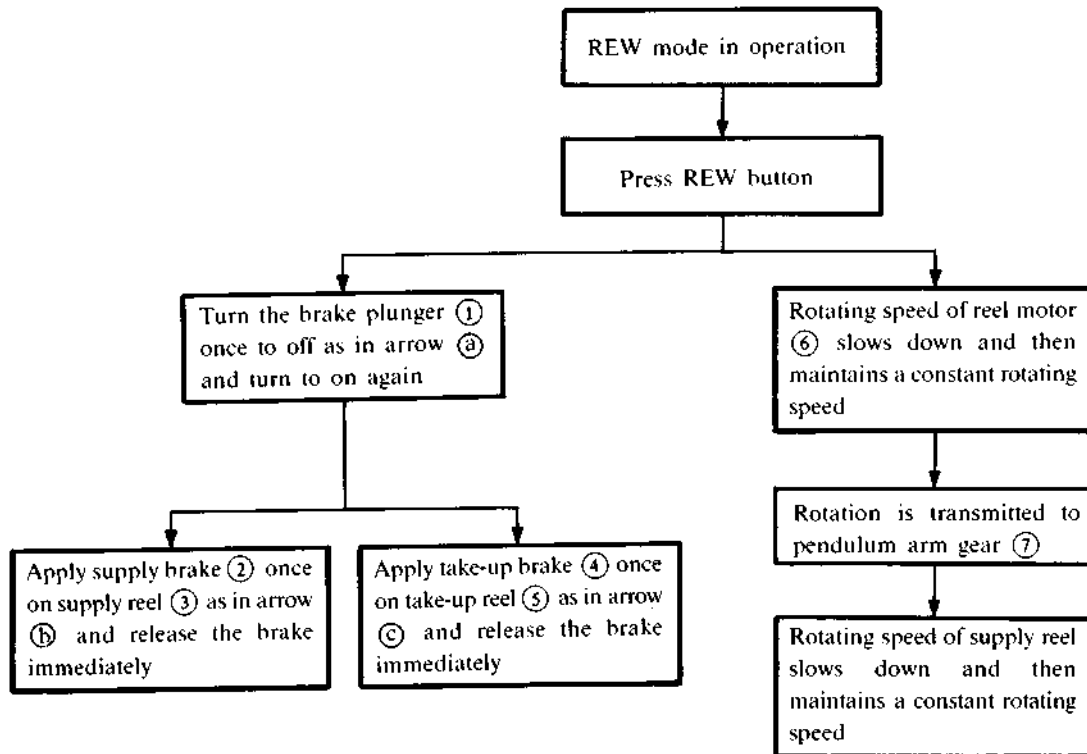



* Shifting to REVIEW mode is done only when this button remains pushed. When finger is taken out from this button it returns to PLAY mode.

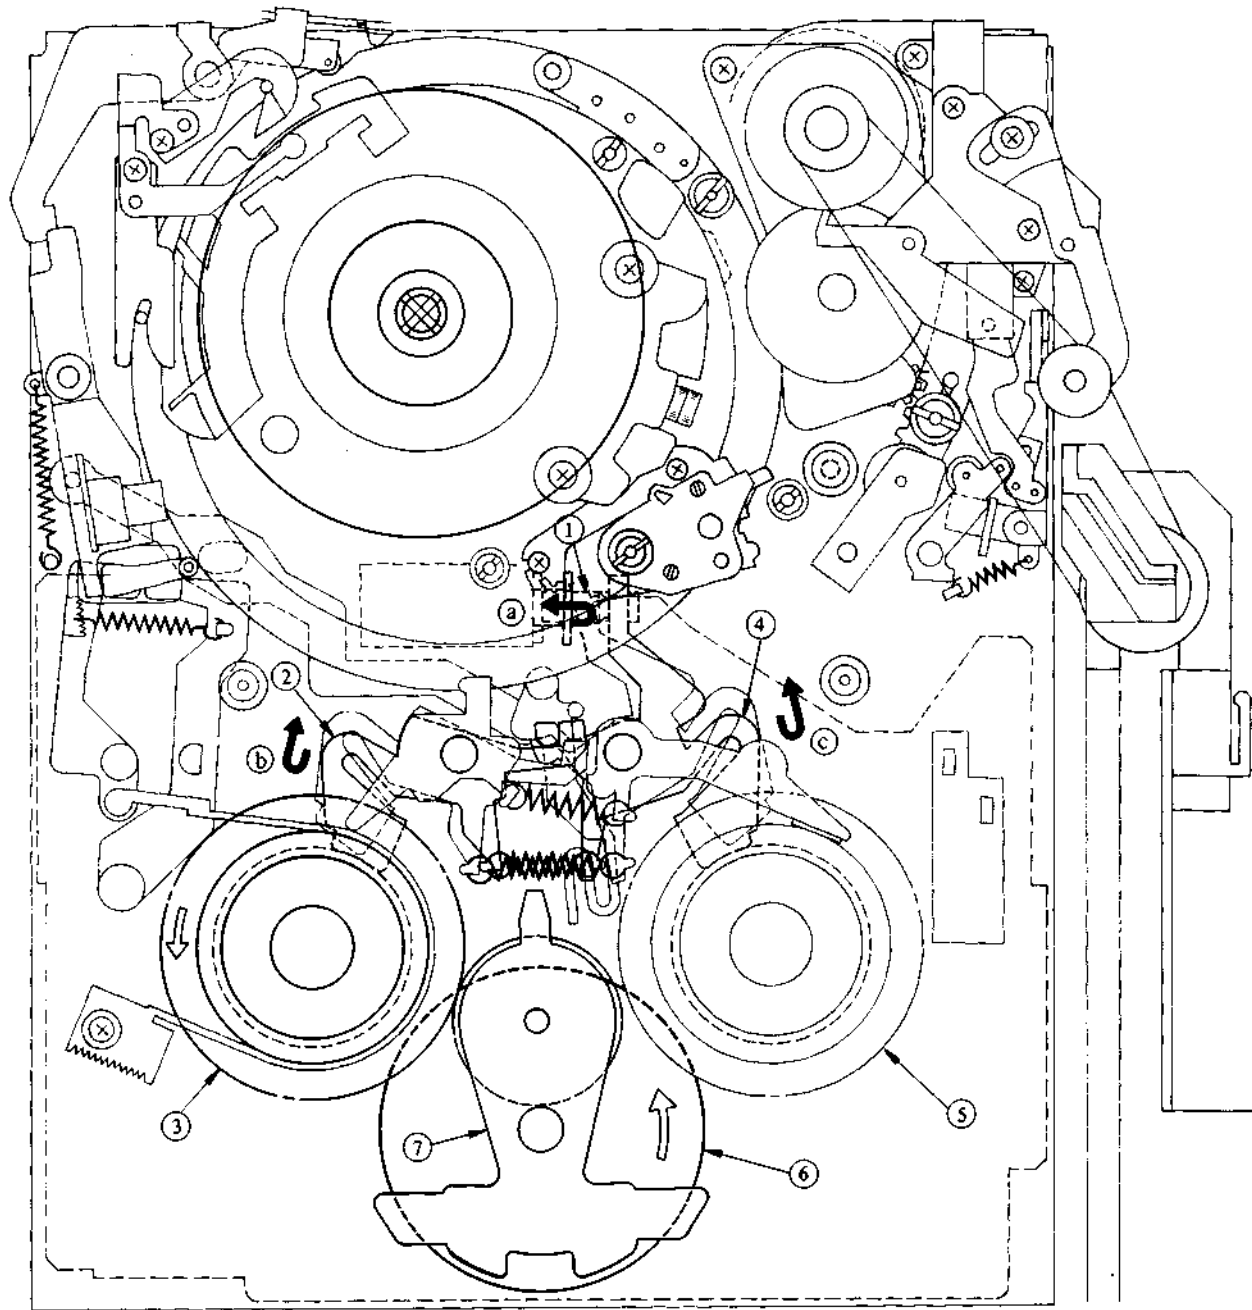

8-12. PAUSE (PLAY) MODE


Vertical direction indicates time and arrow indicates operating sequence.

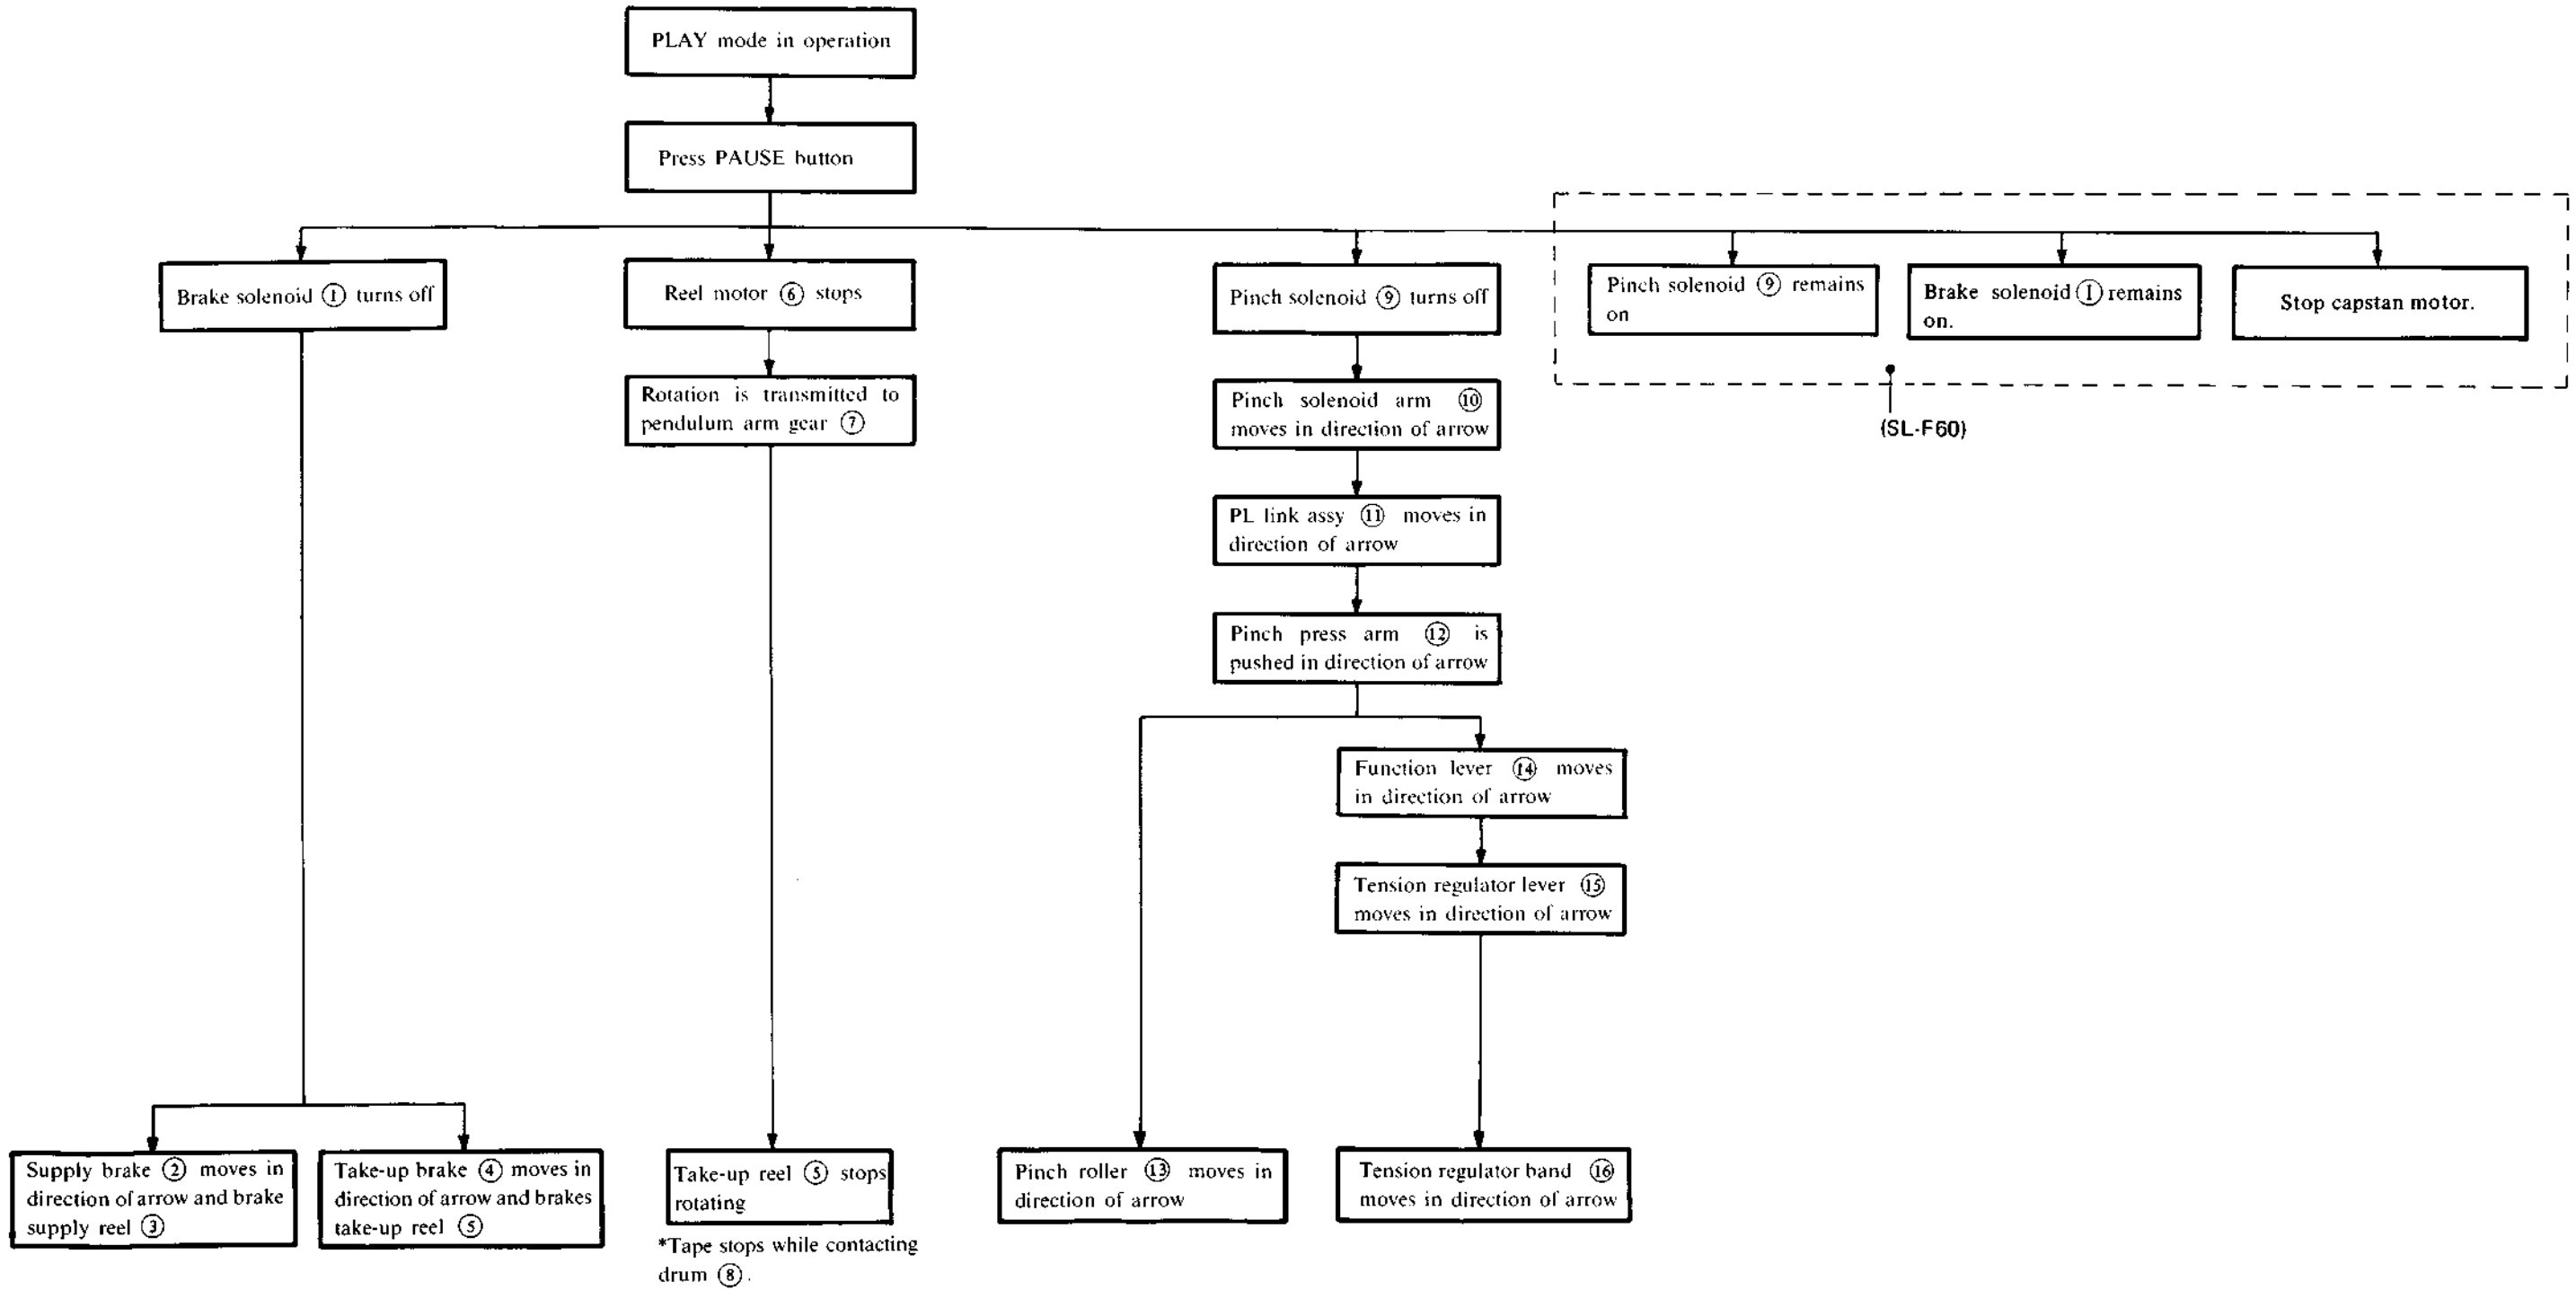

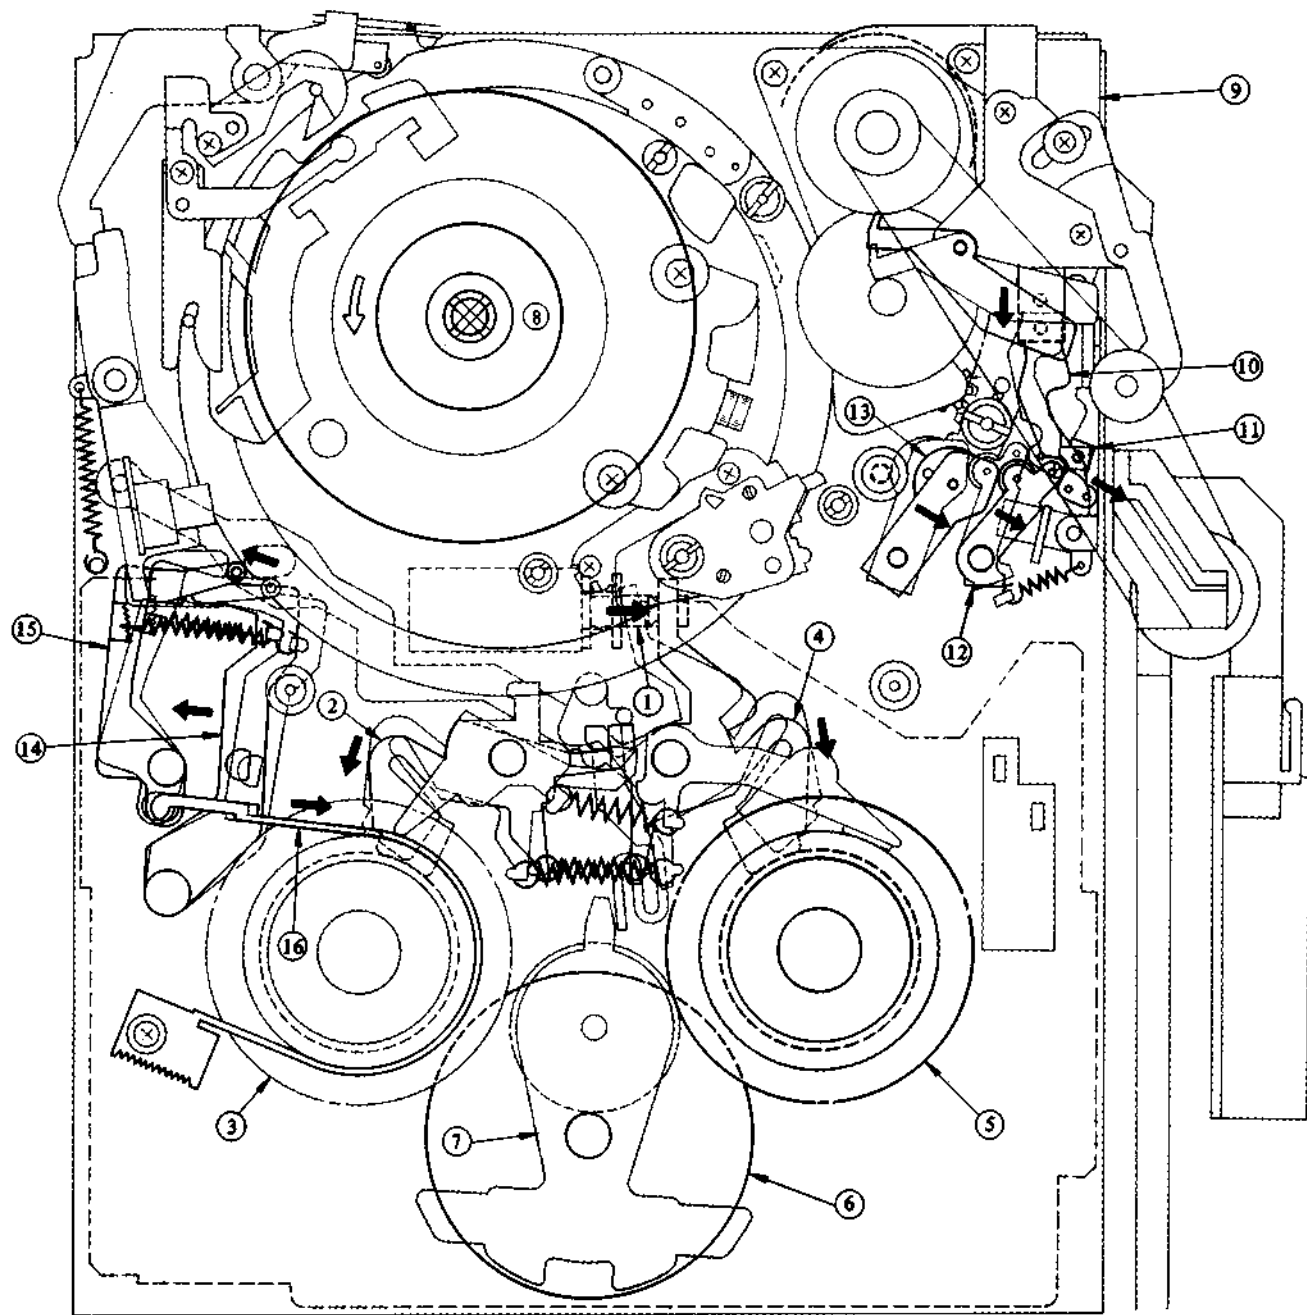


8-13. PAUSE (RECORD) MODE


Vertical direction indicates time and arrow indicates operating sequence.

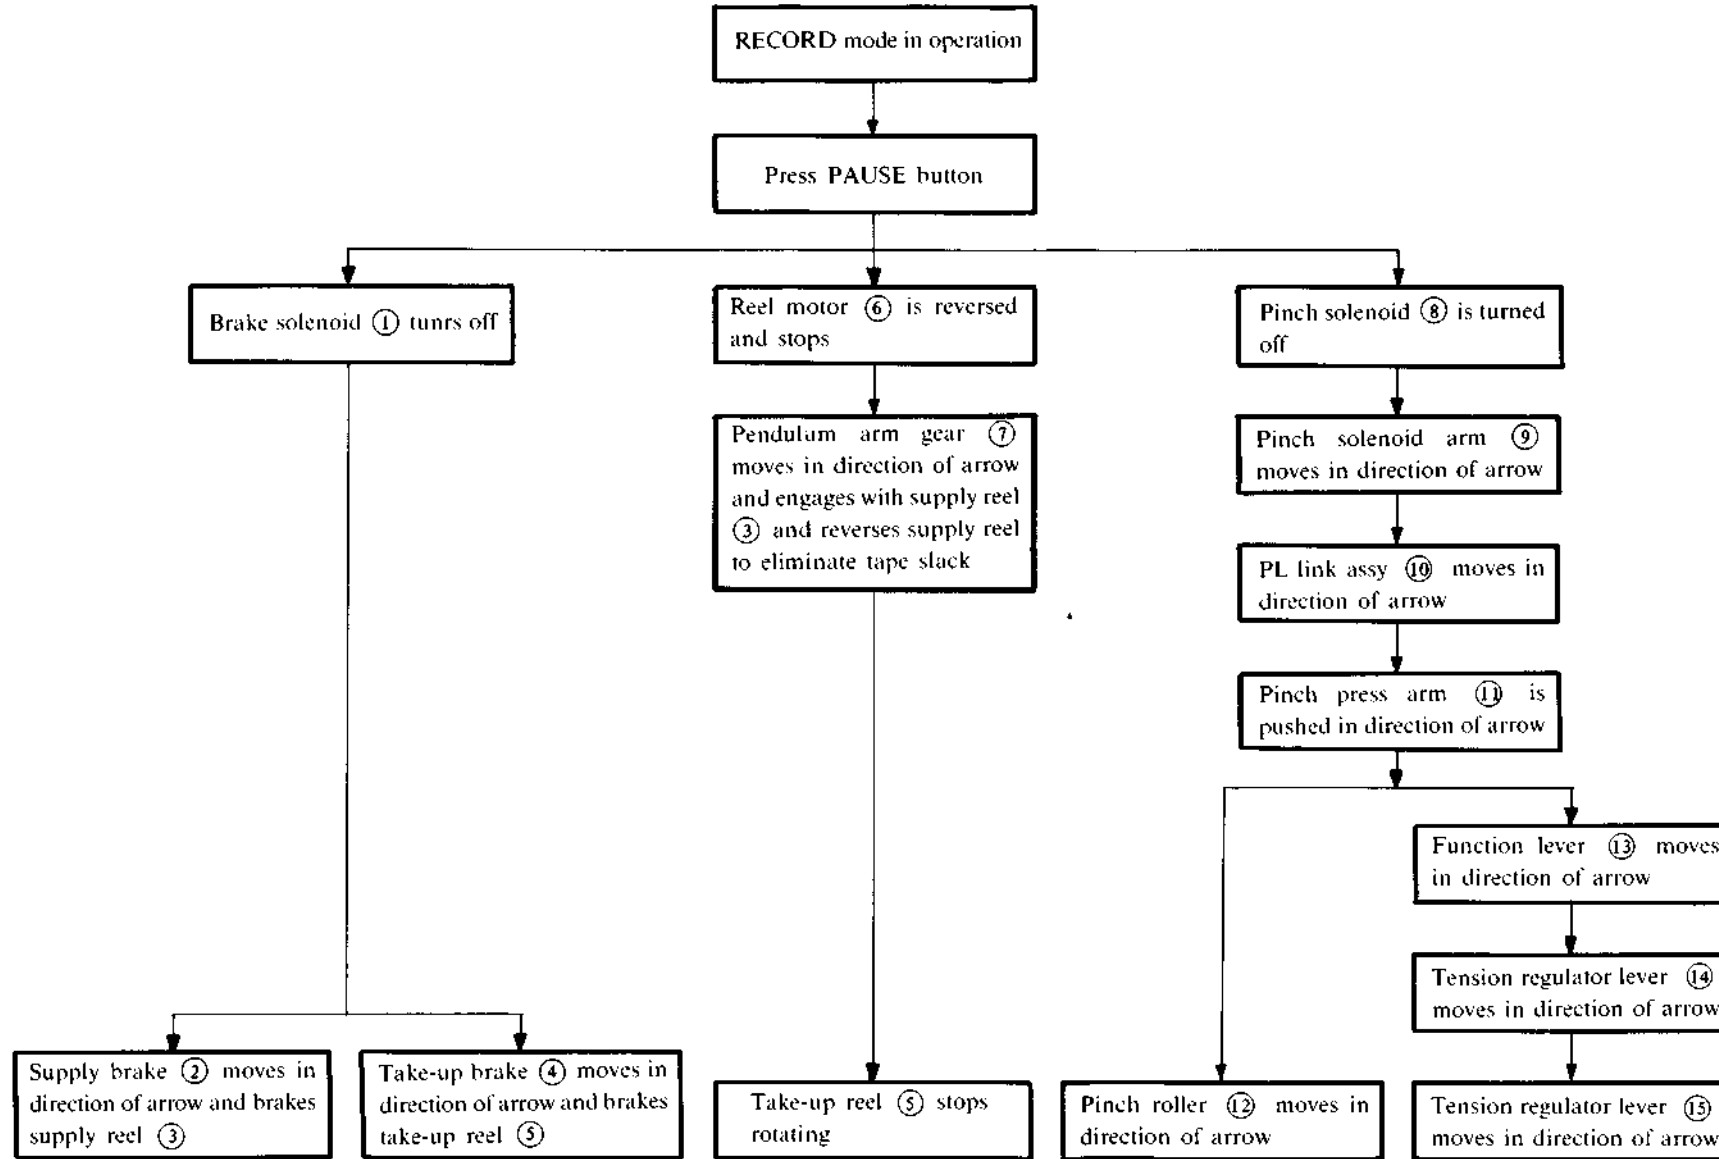


* F30 and F60 are same operation for REC PAUSE.


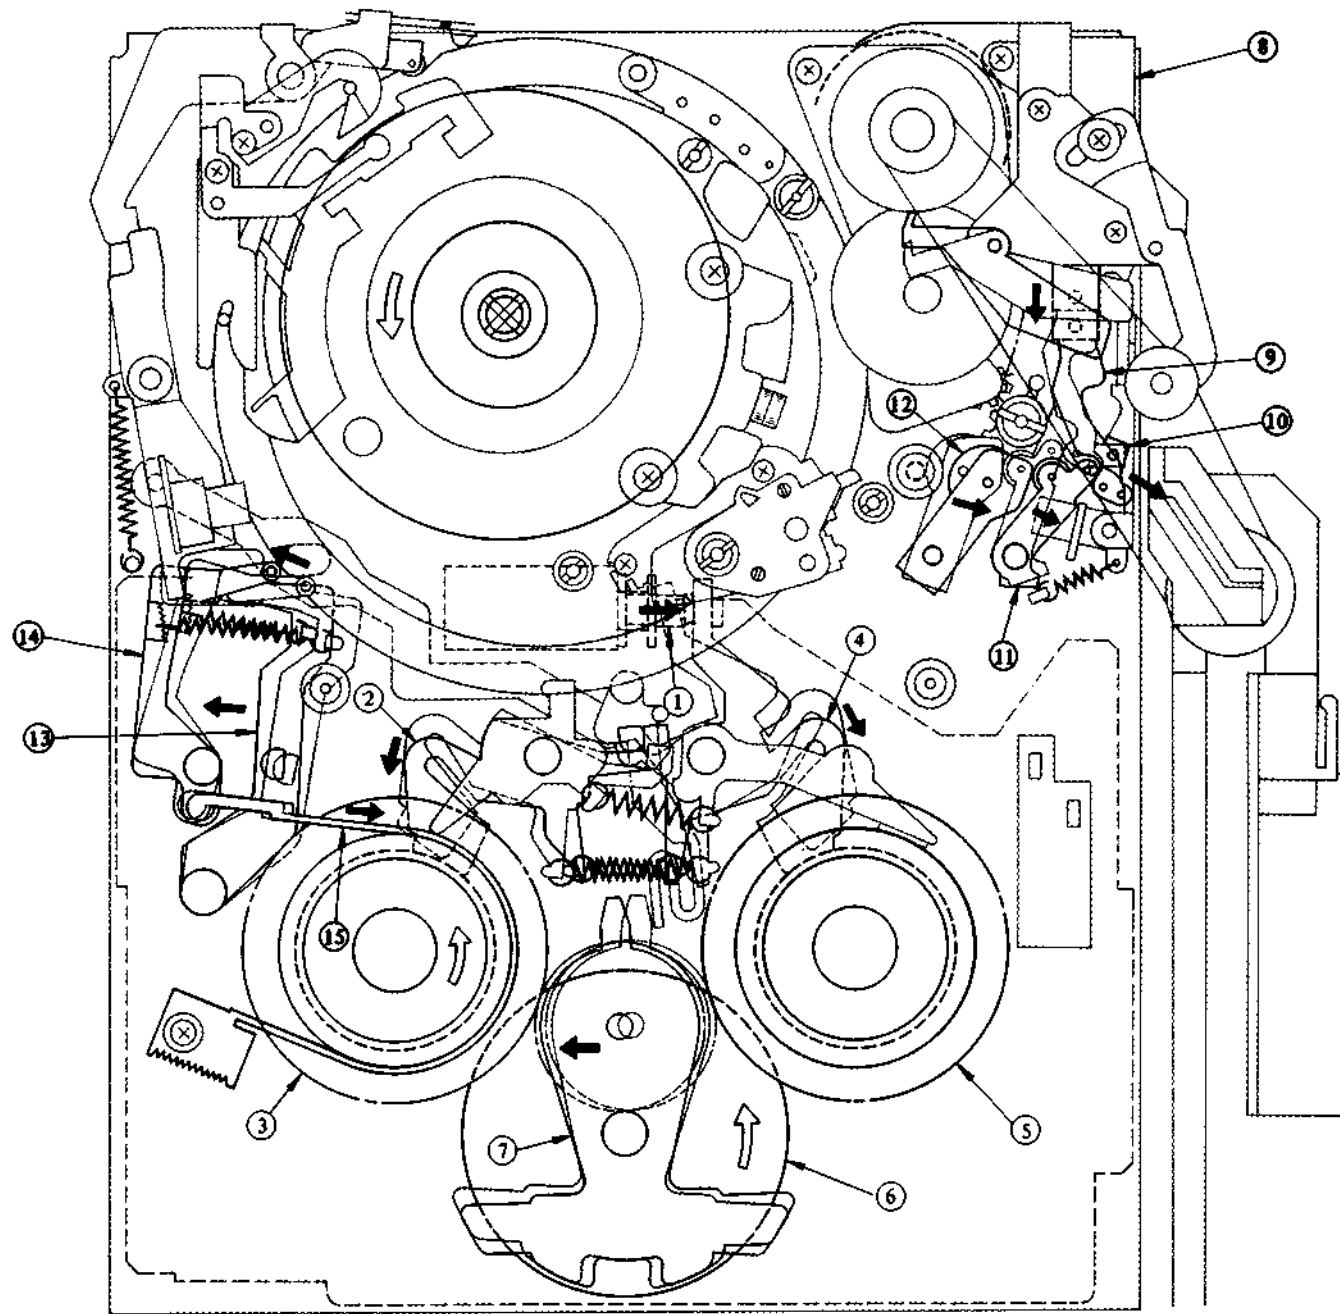


8-14. EJECT

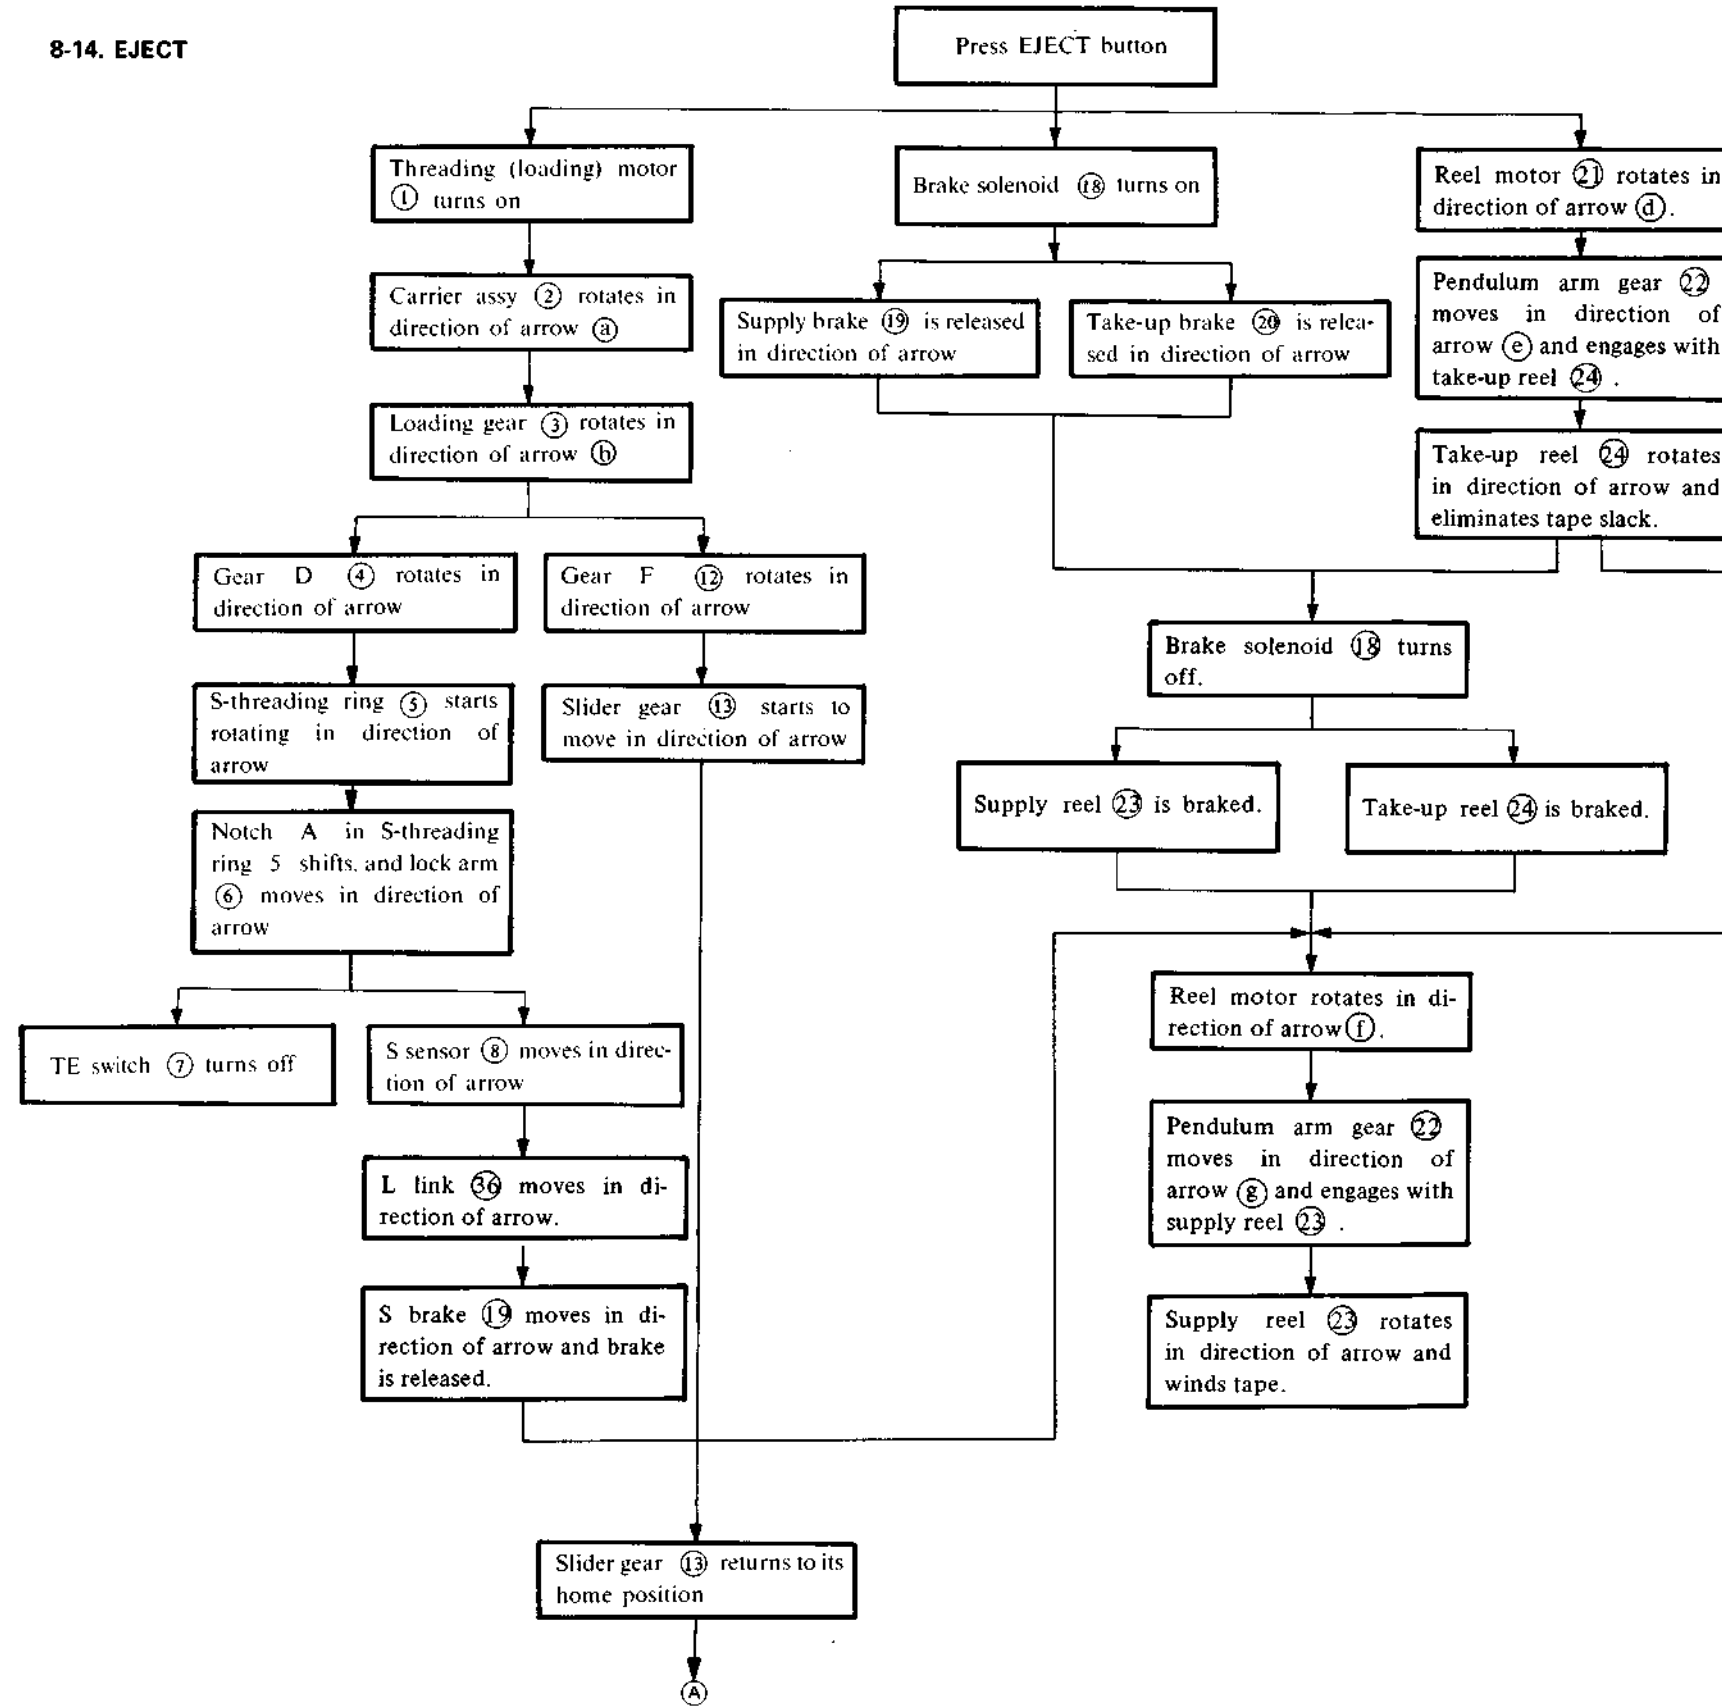

Vertical direction indicates time and arrow indicates operating sequence.

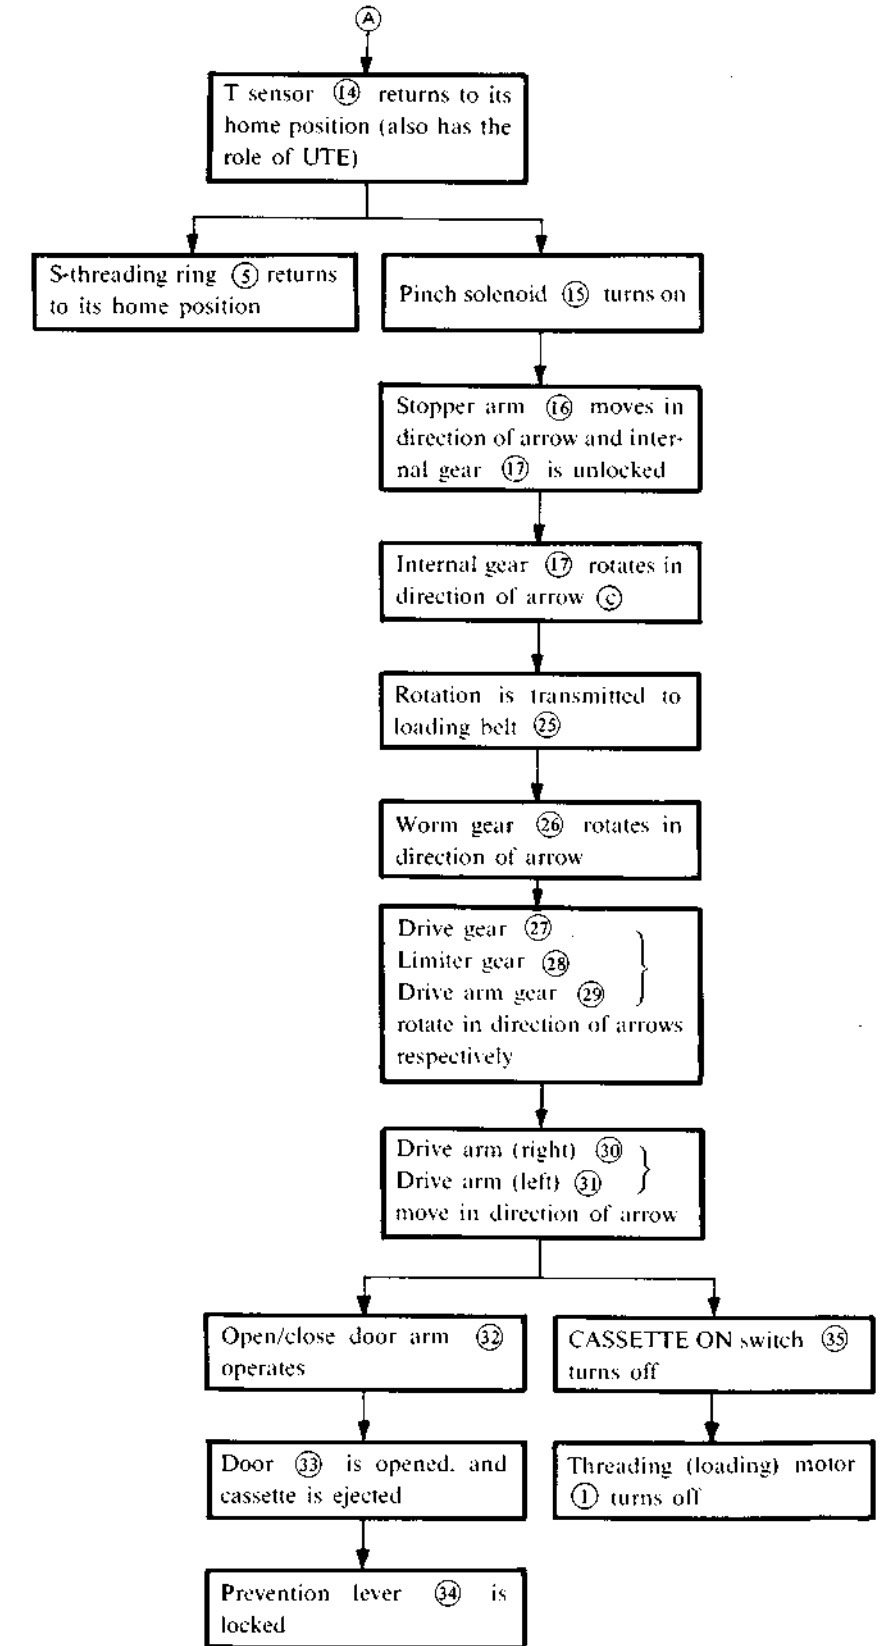

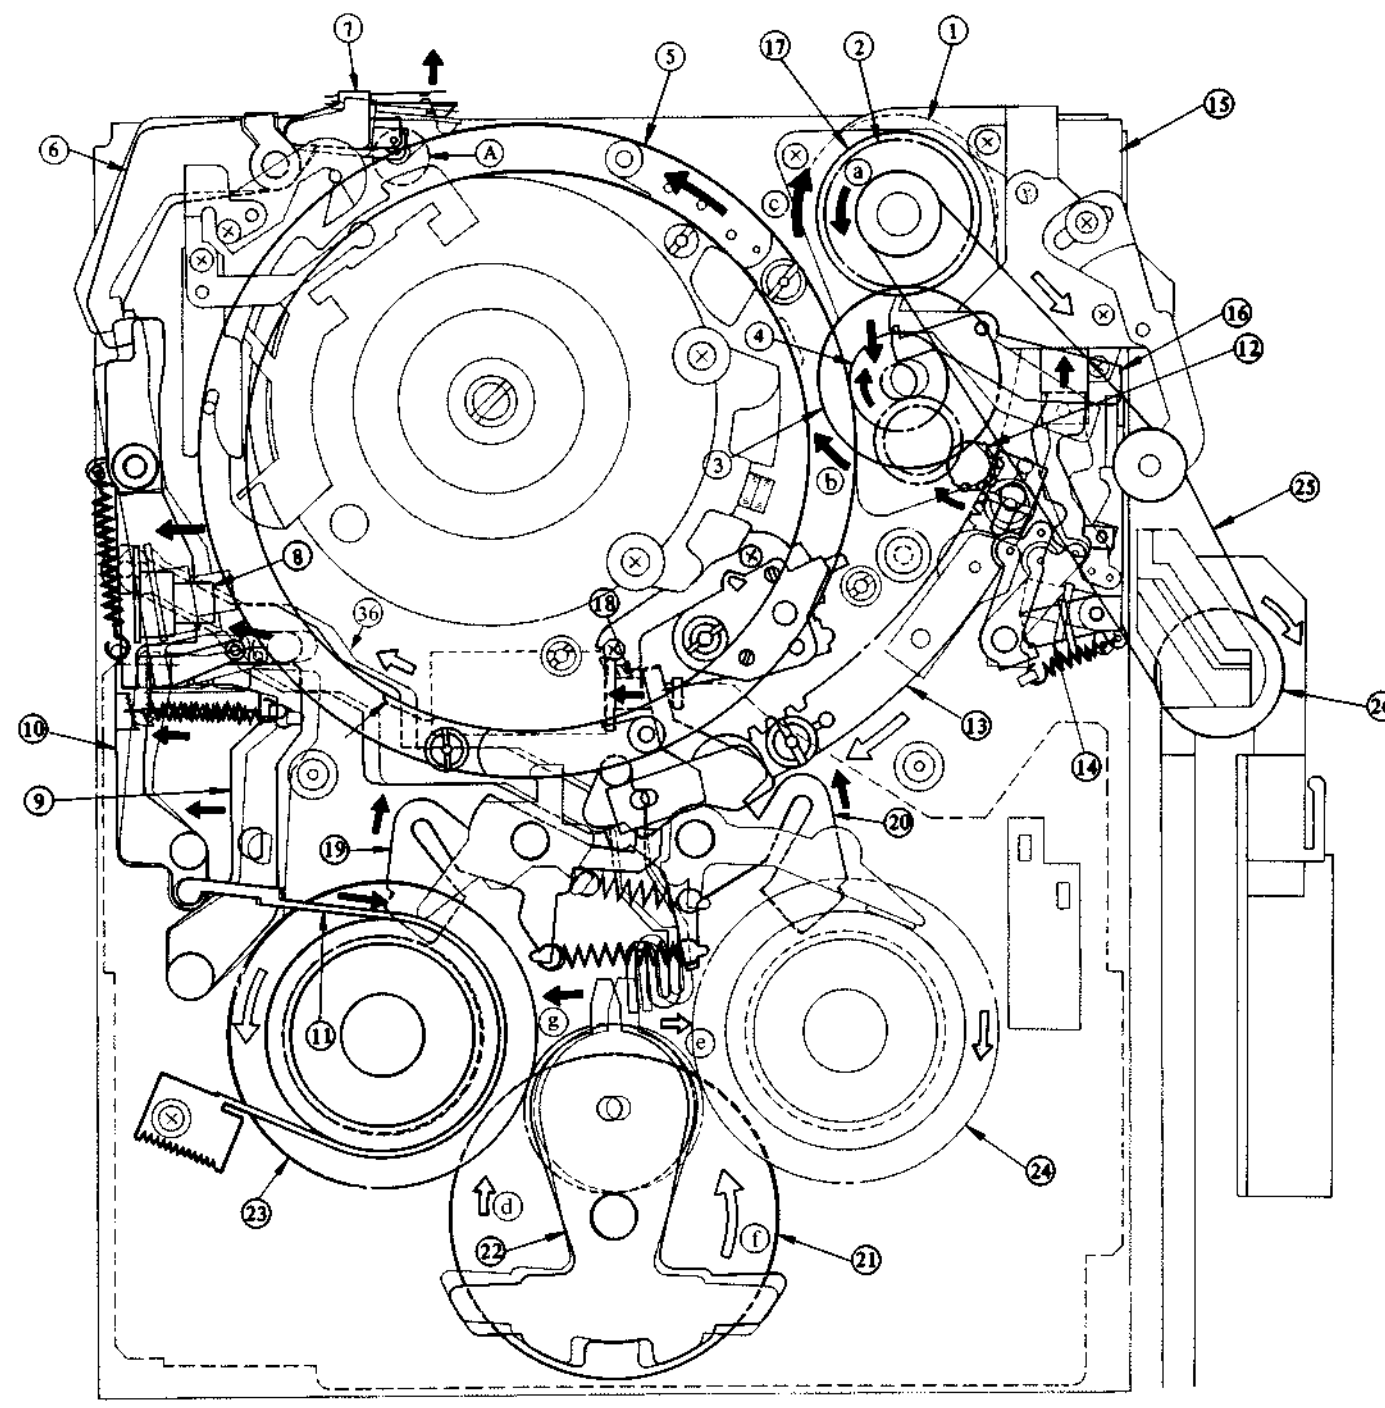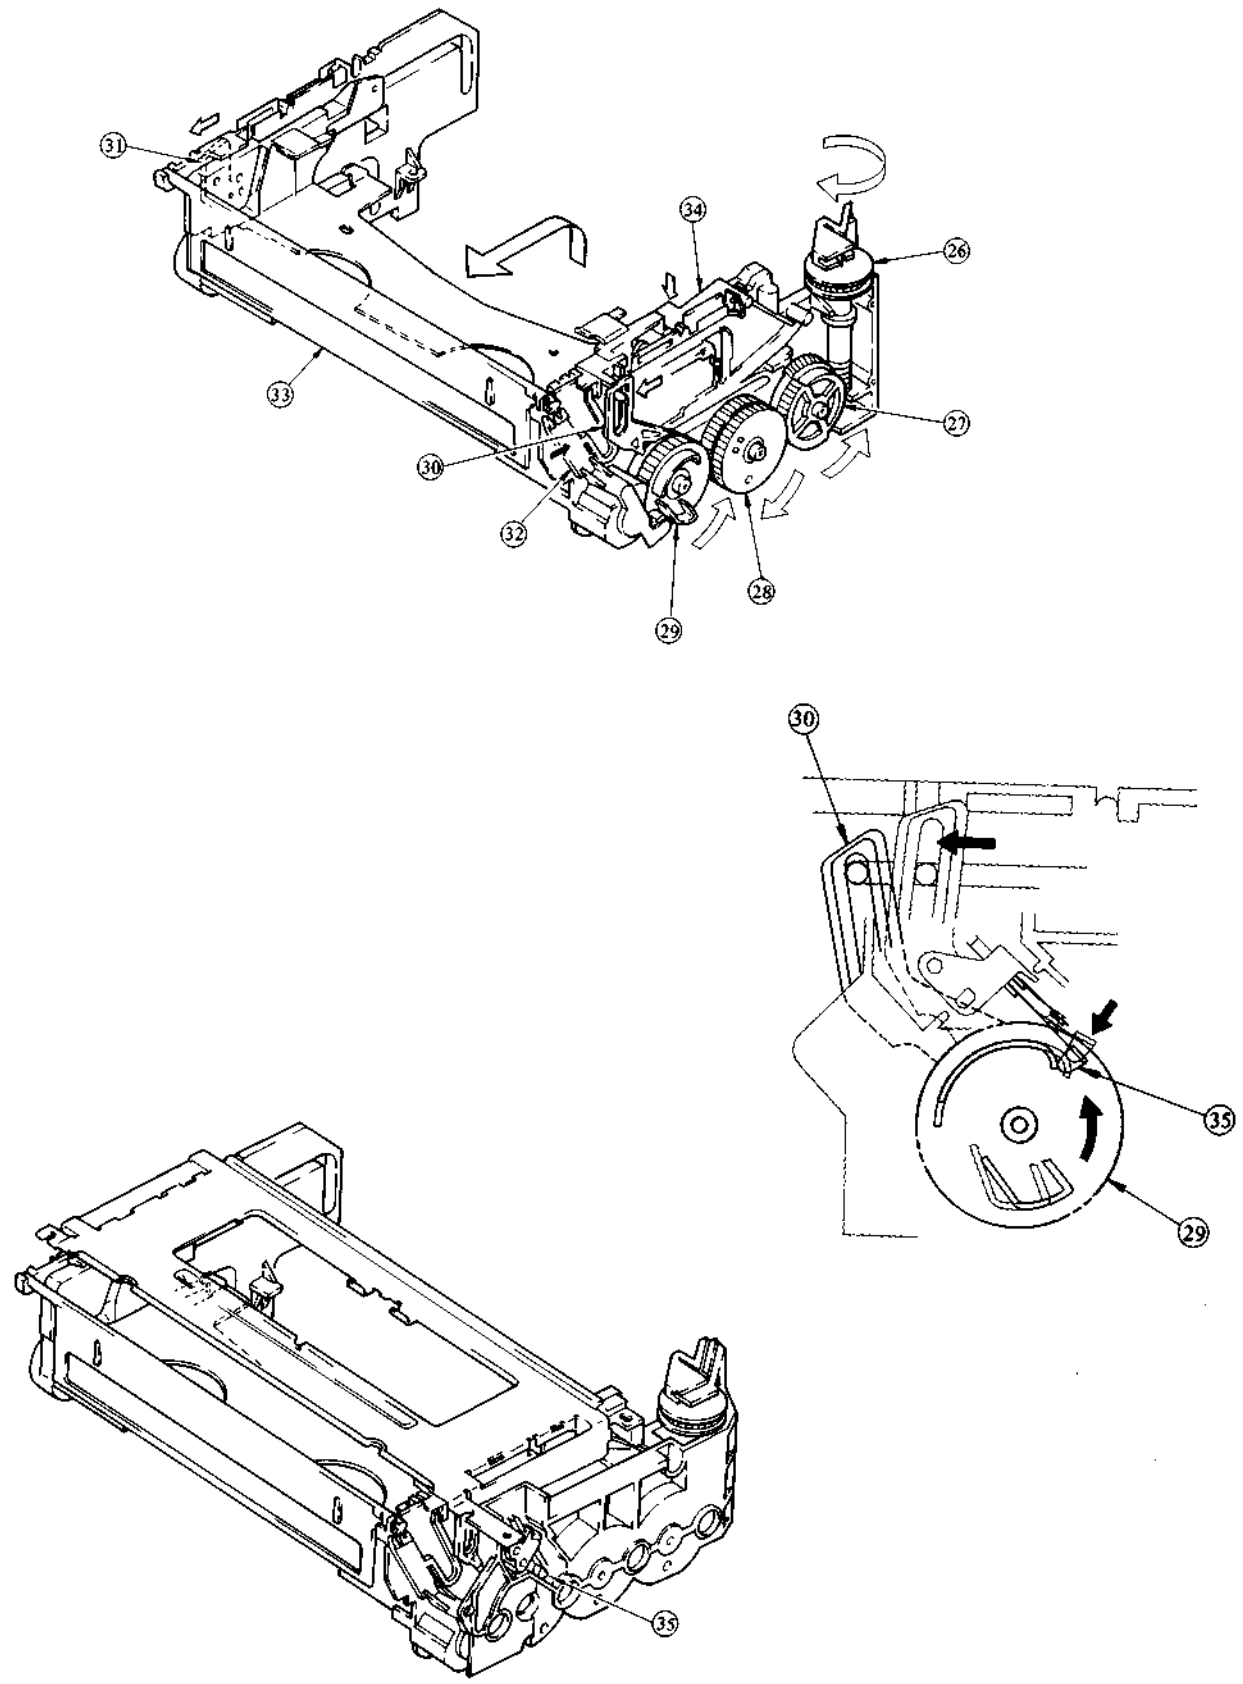

8-15. MODE CHANGE CHART

Desired mode Current mode	▶ PLAY	▶▶ FF	◀◀ REW	● RECORD	▢ PAUSE	■ STOP	▲ EJECT
▶ PLAY	—	PICTURE SEARCH (CUE)	PICTURE SEARCH (REVIEW)	—	PAUSE (PLAY)	STOP	EJECT
▶▶ FF	PLAY	FR PICTURE SEARCH (CUE)	REW	—	—	STOP	EJECT
◀◀ REW	PLAY	PICTURE SEARCH (CUE)	FR PICTURE SEARCH (REVIEW)	—	—	STOP	EJECT
● RECORD	—	—	—	—	PAUSE (RECORD)	STOP	—
▢ SL-F30/T25 PAUSE (PLAY)	—	PICTURE SEARCH (CUE)	PICTURE SEARCH (REVIEW)	PAUSE (RECORD)	PLAY	STOP	EJECT
▢/▶ SL-F60 PAUSE (PLAY)	—	PICTURE SEARCH (CUE)	PICTURE SEARCH (REVIEW)	PAUSE (RECORD)	PLAY	STOP	EJECT
■ PAUSE (RECORD)	—	—	—	—	RECORD	STOP	EJECT
■ STOP	PLAY	FF	REW	RECORD ★	—	—	EJECT

★ When the non-erase tab on the rear of the cassette is broken, it shifts to eject mode.