

SLV-T2000AS/T2000B/T2000MN/ T2000NP/T2000NR/T2000UX/T2000VC

RMT-V194/V194A/V194B/V194C

SERVICE MANUAL

Australian Model

SLV-T2000AS

French Model

SLV-T2000B

E Model

SLV-T2000MN

Spanish Model

SLV-T2000NP

North European Model

SLV-T2000NR

UK Model

SLV-T2000UX

Germany Model

SLV-T2000VC

Hi8

F MECHANISM

VHS
PAL

VHS
PAL SECAM

Hi-Fi

H MECHANISM



Photo : SLV-T2000VC

For 8mm VIDEO MECHANICAL ADJUSTMENT, Refer to the "8mm Video MECHANICAL ADJUSTMENT MANUAL V (F MECHANISM)" (9-973-445-11), and for VHS MECHANICAL ADJUSTMENT, refer to the "VHS MECHANICAL ADJUSTMENT MANUAL IV (H MECHANISM)" (9-973-623-11).

SPECIFICATIONS

System

Channel coverage

PAL

UX: UHF B21 to B69

NP, NR, VC: VHF E2-E12

VHF Italian channel A-H

UHF E21-E69

CATV S1-S20

HYPER S21-S41

CATV S01-S05

B: VHF F2-F15

CATV B-Q

HYPER S21-S41

UHF F21-F69

RF output signal

UHF channels 28 to 55

Aerial out

75-ohm asymmetrical aerial socket

Inputs and outputs

☞ LINE-1 (TV)

21-pin

Video input: pin 20

Audio input: pins 2 and 6

Video output: pin 19

Audio output: pins 1 and 3

☞ LINE-3 IN/DECODER

21-pin

Video input: pin 20

Audio input: pins 2 and 6

LINE-2 IN

S VIDEO, 4-pin mini DIN

Y: 1 Vp-p, 75 ohms, unbalanced, sync negative

C: 0.3 Vp-p, colour burst, 75 ohms, unbalanced

VIDEO IN, phono jack (1)

Input signal: 1 Vp-p, 75 ohms, unbalanced, sync negative

AUDIO IN, phone jack (2)

Input level: 327 mVrms

Input impedance: more than 47 kilohms

LINE OUT

S VIDEO, 4-pin mini DIN

Y: 1 Vp-p, 75 ohms, unbalanced, sync negative

C: 0.3 Vp-p, colour burst, 75 ohms, unbalanced

VIDEO OUT, phono jack (1)

Output signal: 1 Vp-p, 75 ohms, unbalanced, sync negative

AUDIO OUT, phone jack (2)

Standard output level: 327 mVrms

Load impedance: 47 kilohms

Output impedance: less than 10 kilohms

General

Power requirements

220 - 240 V AC, 50 Hz

Power consumption

37 W

Operating temperature

5°C to 40°C

Storage temperature

-20°C to 60°C

Dimensions

Approx. 430 × 109 × 387 mm (w/h/d)

including projecting parts and controls

Mass

Approx. 7.2 kg

Supplied accessories

Remote commander (1)

R6 (size AA) batteries (2)

Aerial cable (1)

Audio/video cable (1)

S-video cable (1)

Mains lead (1)

LINE IN jack cover (1)(NP,NR,UX,VC)

Design and specifications are subject to change without notice.

VIDEO CASSETTE RECORDER

SONY®



SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK Δ OR DOTTED LINE WITH MARK Δ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer.

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, through functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the B+ voltage to see it is at the values specified.
6. Flexible Circuit Board Repairing
 - Keep the temperature of the soldering iron around 270°C during repairing.
 - Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
 - Be careful not to apply force on the conductor when soldering

TABLE OF CONTENTS

SERVICE NOTE

1.	CLEANING OF VIDEO HEAD AND RUN SYSTEM	5
1-1.	Method 1	5
1-2.	Method 2	5
2.	Video 8 DECK SECTION	5
2-1.	Removal of Cassette at Failure with Cassette Inserted	5
3.	VHS DECK SECTION	6
3-1.	How to Return the Pinch Roller, Guide Roller and Elevator Cam to Stop Mode	6
3-2.	How to Return a Tape Into Cassette Half	6
3-3.	How to Remove a Cassette From a Machine If a Cassette Is Left In a Machine In Trouble	6
3-4.	How to Remove Drum Assembly	6
3-5.	How to Replace a Rotary Upper Drum	7
3-5-1.	How to Remove a Rotary Upper Drum	7
3-5-2.	How to Attach a New Rotary Upper Drum	7
2.	DISASSEMBLY	
2-1.	UPPER CASE, FRONT PANEL ASSEMBLY	2-1
2-2.	FL-79, FR-113 BOARDS, ROTARY SWITCH	2-1
2-3.	CP-76 BOARD	2-2
2-4.	RV-50 BOARD	2-2
2-5.	VHS MECHANISM DECK ASSEMBLY	2-3
2-6.	MV-34 BOARD	2-4
2-7.	PS-380 BOARD	2-4
2-8.	MH-18 BOARD (WITH Video 8 MECHANISM DECK)	2-5
2-9.	Video 8 MECHANISM DECK (WITH RP-211 BOARD)	2-5
2-10.	CIRCUIT BOARDS LOCATION	2-6
3.	BLOCK DIAGRAMS	
3-1.	OVERALL BLOCK DIAGRAM	3-1
3-2.	Video 8 VIDEO BLOCK DIAGRAM	3-3
3-3.	VHS VIDEO BLOCK DIAGRAM	3-5
3-4.	Video 8 AUDIO BLOCK DIAGRAM	3-7
3-5.	VHS AUDIO BLOCK DIAGRAM	3-9
3-6.	VIDEO IN/OUT BLOCK DIAGRAM	3-11
3-7.	AUDIO IN/OUT BLOCK DIAGRAM	3-13
3-8.	Video 8 SERVO/SYSTEM CONTROL BLOCK DIAGRAM	3-15
3-9.	VHS SERVO/SYSTEM CONTROL BLOCK DIAGRAM	3-17
3-10.	MODE CONTROL BLOCK DIAGRAM	3-19
3-11.	POWER SUPPLY BLOCK DIAGRAM	3-21
4.	PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS	
4-1.	FRAME SCHEMATIC DIAGRAM	4-1
4-2.	PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS	4-3
	• RP-211 (Video 8 REC/PB AMP) PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM	4-3
	• MH-18 (Video 8 VIDEO, SERVO/SYSTEM CONTROL, AUDIO) PRINTED WIRING BOARD	4-6
	• MH-18 (Video 8 VIDEO) SCHEMATIC DIAGRAM	4-11
	• MH-18 (Video 8 SERVO/SYSTEM CONTROL) SCHEMATIC DIAGRAM	4-16
	• MH-18 (Video 8 VIDEO, AUDIO) SCHEMATIC DIAGRAM	4-21
	• RV-50 (VHS REC/PB AMP) PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM	4-26
	• RV-50 (VHS REC/PB AMP) SCHEMATIC DIAGRAM	4-31
	• MV-34 (TUNER, MODE CONTROL, VHS VIDEO, SERVO/SYSTEM CONTROL, AUDIO) PRINTED WIRING BOARD	4-36
	• MV-34 (PDC/VPS, VHS VIDEO, AUDIO) SCHEMATIC DIAGRAM	4-41
	• MV-34 (TUNER) SCHEMATIC DIAGRAM	4-46
	• MV-34 (VHS SERVO/SYSTEM CONTROL) SCHEMATIC DIAGRAM	4-49
	• MV-34 (MODE CONTROL, IN/OUT SELECTOR) SCHEMATIC DIAGRAM	4-53
	• CP-76 (VIDEO, AUDIO IN/OUT) PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM	4-57
	• FR-113 (MODE CONTROL) SCHEMATIC DIAGRAM	4-61
	• FR-113 (MODE CONTROL) PRINTED WIRING BOARD	4-65
	• FL-79 (FRONT VIDEO, AUDIO IN/OUT) PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM	4-67
	• PS-380 (POWER SUPPLY) PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM	4-69
	• CP-401 POWER BLOCK (SWITCHING REGULATOR SR665) PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM	4-72

5. REPAIR PARTS LIST

5-1. EXPLODED VIEWS	5-1
5-1-1. FRONT PANEL ASSEMBLY AND CASE	5-1
5-1-2. CHASSIS ASSEMBLY-1	5-2
5-1-3. CHASSIS ASSEMBLY-2	5-3
5-1-4. MECHANISM DECK ASSEMBLY-1	5-4
5-1-5. MECHANISM DECK ASSEMBLY-2	5-5
5-1-6. MECHANISM DECK ASSEMBLY-3	5-6
5-1-7. MECHANISM DECK ASSEMBLY-4	5-7
5-1-8. Video 8 CASSETTE COMPARTMENT ASSEMBLY	5-8
5-1-9. Video 8 MECHANISM DECK ASSEMBLY-1	5-9
5-1-10. Video 8 MECHANISM DECK ASSEMBLY-2	5-10
5-1-11. Video 8 MECHANISM DECK ASSEMBLY-3	5-11
5-2. ELECTRICAL PARTS LIST	5-12

6. INTERFACE, IC PIN FUNCTION DESCRIPTION

6-1. Video 8 SYSTEM	6-1
6-1-1. Interface between Video 8 system control and video, audio block (MH-18 board IC002)	6-1
6-1-2. Interface between Video 8 servo control and servo block (MH-18 board IC002)	6-2
6-2. VHS SYSTEM	6-2
6-2-1. Interface between VHS system control and video block (MV-34 board IC201)	6-2
6-2-2. Interface between VHS system control and servo peripheral circuit (MV-34 board IC201)	6-3
6-2-3. Interface between system control and mechanism block (MV-34 board IC201)	6-3
6-2-4. Interface between VHS system control and system control peripheral circuit (MV-34 board IC201)	6-4
6-2-5. Interface between VHS system control and audio block (MV-34 board IC201)	6-4
6-2-6. VHS servo/system control microprocessor (MV-34 board IC201)	6-5
6-2-7. VHS mode control microprocessor (MV-34 board IC801)	6-6
6-2-8. Mode control microprocessor (FR-113 board IC001)	6-7

7. ADJUSTMENTS

SERVICE MODE	7-1
1. SETTING THE SERVICE MODE	7-1
(1) Service LANC memory map	7-1
(2) Adjustment remote commander connecting procedure	7-2
2. TEST MODE SETTING	7-3
(1) Servo/System Control Micom	7-3
3. EMERGENCY CODES	7-3
4. D PAGE MEMORY MAP	7-4
7-1. MECHANICAL ADJUSTMENTS	7-5
1-1. VHS MECHANICAL ADJUSTMENTS	7-5
1-2. Video 8 MECHANICAL ADJUSTMENTS	7-5
1-2-1. TAPE PATH ADJUSTMENT (TRACK SHIFT)	7-5
1. Setting the Track Shift Mode	7-5
2. Preparation before Adjustment	7-5
7-2. ELECTRICAL ADJUSTMENT	7-6
2-1. PREPARATION BEFORE ADJUSTMENT	7-6
2-1-1. Equipment Required	7-6
2-1-2. Equipment Connection	7-7
2-1-3. Input Signal Check	7-8
1) S VIDEO Input	7-8
2) VIDEO Input	7-8
2-1-4. VHS Alignment Tape	7-8
2-1-5. Video 8 Alignment Tape	7-9
2-1-6. Input/Output Levels and Impedance	7-10
2-1-7. Recording Mode (Normal/Hi8) Select	7-10
2-1-8. Adjustment Sequence	7-10

2-2. POWER SUPPLY CHECK	7-10
2-2-1. Output Voltage Check (PS-380 Board)	7-10
2-3. SYSTEM CONTROL/TIMER ADJUSTMENT	7-11
1. EEPROM Data Initial Value Writing	7-11
2. Timer Clock Adjustment (MV-34 Board)	7-11
2-4. Video 8 SERVO SYSTEM ADJUSTMENT	7-12
1. Switching Position Adjustment (MH-18 Board)	7-12
2. Capstan Duty Automatic Adjustment	7-12
3. Reverse Direction SLOW Adjustment	7-13
4. Double Speed Playback Adjustment	7-13
2-5. Video 8 VIDEO SYSTEM ADJUSTMENT	7-14
2-5-1. Video 8 Video System Adjustment	7-14
1. Playback Frequency Response Adjustment (RP-211, MH-18 Boards)	7-14
2. Sync AGC Adjustment (MH-18 Board)	7-15
3. Chroma Comb Filter Adjustment (MH-18 Board)	7-15
4. Pre-emphasis Input Level Adjustment (MH-18 Board)	7-16
5. Hi8 Mode De-emphasis Level Adjustment (MH-18 Board)	7-16
6. Playback Level Adjustment (MH-18 Board)	7-16
7. Normal 8 Mode De-emphasis Level Adjustment (MH-18 Board)	7-16
8. Normal 8 Mode Y FM Carrier Frequency, Y FM Deviation Adjustment	7-17
(1) Normal 8 Mode Y FM Carrier Frequency Adjustment (MH-18 Board)	4-17
(2) Normal 8 Mode Y FM Deviation Adjustment (MH-18 Board)	7-17
9. Hi8 Mode Y FM Carrier Frequency, Y FM Deviation Adjustment	7-17
(1) E Mode Y FM Carrier Frequency Adjustment (MH-18 Board)	7-18
(2) Hi8 Mode Y FM Deviation Adjustment (MH-18 Board)	7-18
10. Chroma Emphasis Adjustment (MH-18 Board)	7-19
11. Recording Y FM Level Adjustment (MH-18 Board)	7-19
12. Recording Chroma Level Adjustment (MH-18 Board)	7-19
2-6. Video 8 AUDIO SYSTEM ADJUSTMENT	7-20
2-6-1. Video 8 Audio System Adjustment	7-21
1. 1.5 MHz Carrier Frequency and Level Check (MH-18 Board)	7-21
2. 1.5 MHz Deviation Adjustment (MH-18 Board)	7-21
3. 1.7 MHz Deviation Adjustment (MH-18 Board)	7-22
4. Band-pass Filter Adjustment (MH-18 Board)	7-22
5. E-E Output Level Check (MH-18 Board)	7-22
6. Overall Frequency Characteristic Check	7-23
7. Overall Distortion Factor, Level Check	7-23
8. Overall Noise Level Check	7-24
9. Separation Check	7-24
2-7. SERVO SYSTEM CHECK	7-24
1. RF Switching Position Adjustment (MV-34, RV-50 Boards)	7-24
2-8. VHS VIDEO SYSTEM CHECKS	7-25
1. X'tal OSC Check (RV-50 Board)	7-25
2. SYNC AGC Check (RV-50 Board)	7-25
3. White Clip/Dark Clip Check (RV-50 Board)	7-25
4. Recording Y Level Check (RV-50 Board)	7-26
5. Recording Chroma Level Check (RV-50 Board)	7-26
6. Playback Level Check (RV-50 Board)	7-26
2-9. VHS AUDIO SYSTEM ADJUSTMENT	7-26
2-9-1. HiFi Audio System Adjustment	7-26
1. VCO F0 Adjustment (MV-34 Board)	7-27
2. Band Pass Filter f0 Adjustment (MV-34 Board)	7-27
3. AF Switching Position Adjustment (MV-34, RV-50 Boards)	7-27
2-9-2. Normal Audio System Adjustment	7-28
1. ACE Head Adjustment	7-28
2. E-E Output Level Check	7-28
3. Overall Output Level and Distortion Factor Check	7-28
4. Overall Noise Level Check	7-28
2-10. ADJUSTING PARTS LOCATION	7-30

1. CLEANING OF VIDEO HEAD AND RUN SYSTEM

1-1. Method 1

[Cleaning Method with Cleaning Tape]

- A cleaning cassette should be used.
Video 8 : V8-25CLH
VHS : T-25CL
(When using, the attached manual for the cleaning cassette should be thoroughly read.)

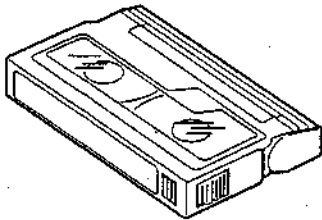


Fig. 1

1-2. Method 2

[Cleaning Method with Cleaning Liquid]

- ① Remove the upper case of the video deck.
- ② Apply cleaning liquid to a head cleaner stick.
- ③ As shown in the figure, press the head cleaner stick lightly. Turn the rubber of the rotary upper drum gradually and clean the video deck.

[Cleaning Method with Run System]

- ① Apply cleaning liquid to a head cleaner stick.
- ② Clean the guides which tape touches directly and the pinch roller with the head cleaner.

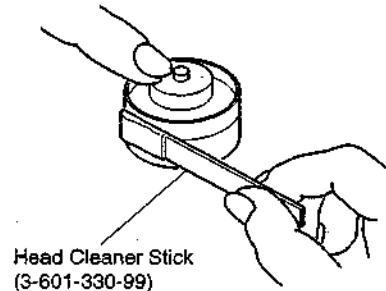


Fig. 2

2. Video 8 DECK SECTION

2-1. Removal of Cassette at Failure with Cassette Inserted

- 1) If tape is wounded on the drum and it cannot be removed:
Rotate the capstan motor wheel in either direction and rotate the S or R reel to house the tape. Then, perform Procedure ②.
- 2) If tape is housed in the cassette half and cannot be removed:
 - ① Remove the MD block. (For removal, refer to Section 2-7.)
 - ② Rotate the drive arms at both sides of L frame and cassette compartment in the arrow direction ①.
 - ③ Rotate the connecting gear in the arrow direction ② with both the thumbs.

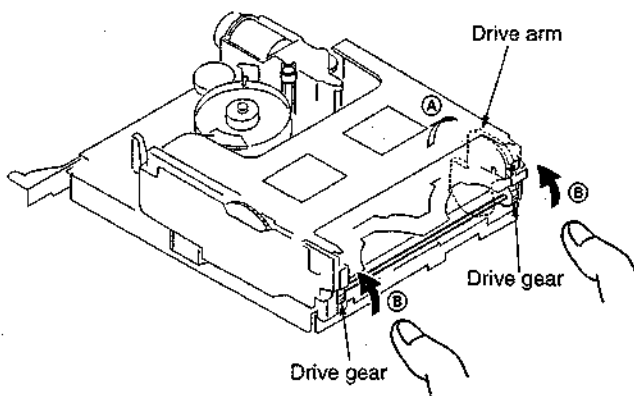


Fig. 3

3. VHS DECK SECTION

3-1. How to Return the Pinch Roller, Guide Roller and Elevator Cam to Stop Mode

- 1) Remove the VHS MD assembly from the machine. (Refer to the item 2-9. Removal.)
- 2) Rotate the worm gear-1 of the cam motor beneath the MD assembly in the direction arrow (A) using a screw driver tip.

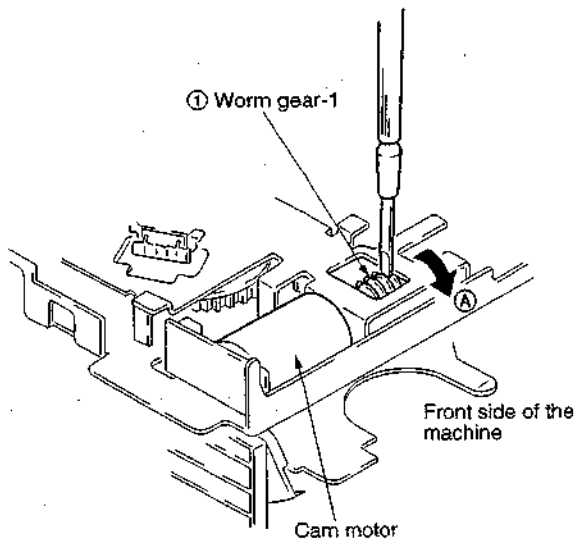


Fig. 4

3-2. How to Return a Tape Into Cassette Half

A tape can be rewound into a cassette half by rotating the flywheel-1 of the capstan motor in the direction of (A) with hand.

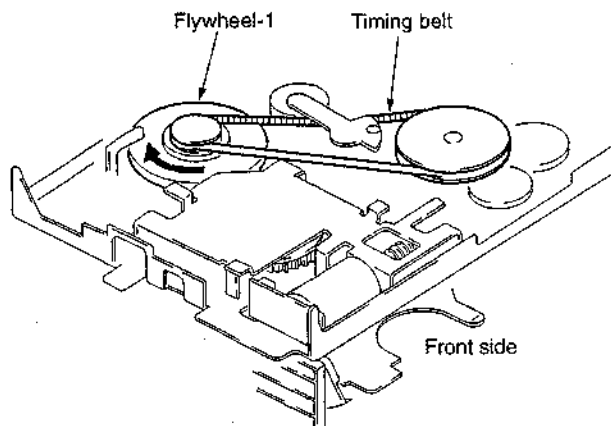


Fig. 5

3-3. How to Remove a Cassette From a Machine If a Cassette Is Left In a Machine In Trouble

Execute the item 3-2, and keep rotating the flywheel-1.

When executing section 3-1 to 3-3, take care that a tape slack should not be caught by a mechanism or a tape should not be damaged.

3-4. How to Remove Drum Assembly

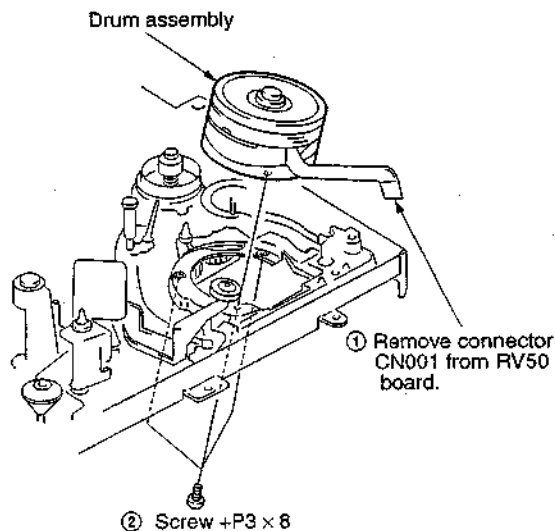


Fig. 6

3-5. How to Replace a Rotary Upper Drum

3-5-1. How to Remove a Rotary Upper Drum

- 1) Remove screw ① (+P3×8) and remove the ground shaft assembly ②. (Refer to Fig. 7)
 - 2) Remove soldering which is marked by arrow and remove the rotary upper drum board completely.
 - 3) Remove two screws ③ (PSW3×8) and remove the rotary upper drum in the direction of ④. (Refer to Fig. 8)
- If removal is difficult, remove it while rotating it slowly.

Note: If removal is difficult, check again if soldering is removed completely.

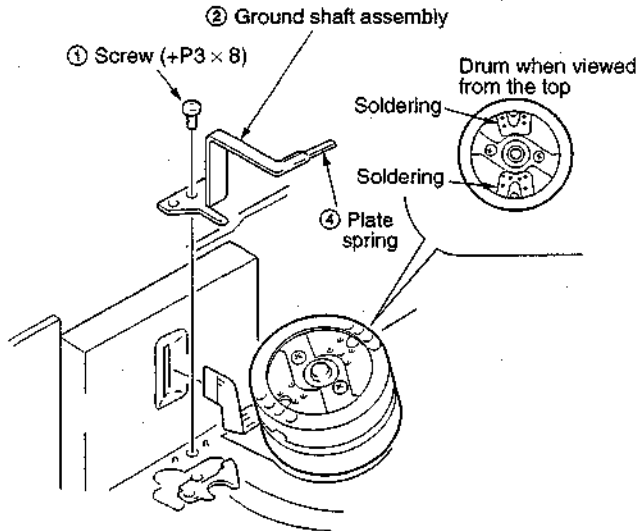


Fig. 7

3-5-2. How to Attach a New Rotary Upper Drum

- 1) Pay attention so that finger print or like must not be put when inserting a new upper drum into lower drum.
- 2) Align \Rightarrow mark of the rotary upper drum board with the \Rightarrow mark of the rotary transformer board so that the screw hole on the upper drum and that on the lower drum are aligned. (Refer to Fig. 8)
- 3) If attaching is difficult, attach a upper drum while rotating it slowly.

Note: Pay attention not to damage the video heads.
Confirm that the upper drum is inserted completely.

- 4) Tighten the two screws ③ (PSW3×8). (Refer to Fig. 8)
- 5) Fix the earth shaft ② by tightening the screw ① (+P3×8) so that protrusion at the tip of the earth shaft contacts the center of the drum shaft.

Note: When attaching the ground shaft assembly ②, never give force to the plate spring ④.


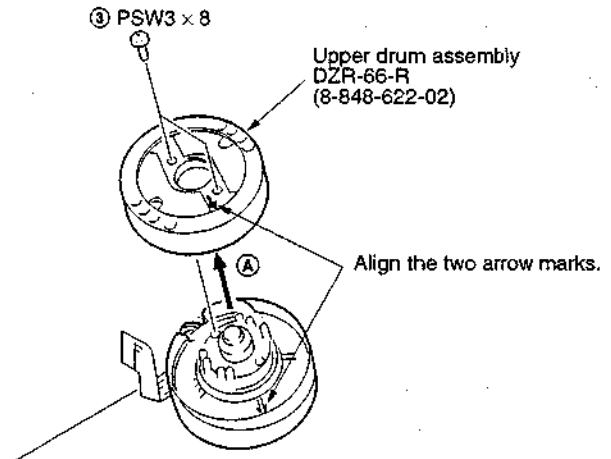


Fig. 8


**SECTION 2
DISASSEMBLY**

Note : Follow the disassembly procedure in the numerical order given.


2-1. UPPER CASE, FRONT PANEL ASSEMBLY

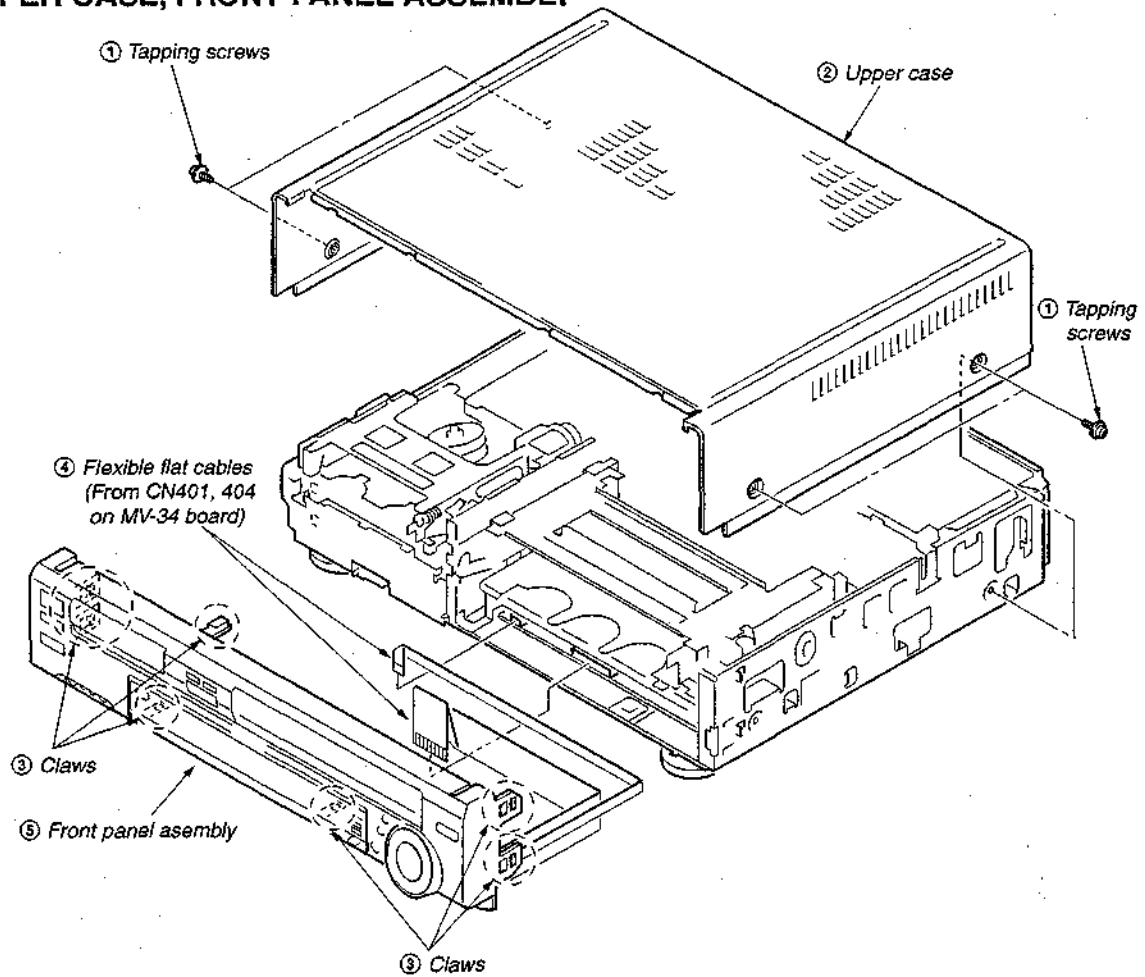


2-2. FL-79, FR-113 BOARDS, ROTARY SWITCH

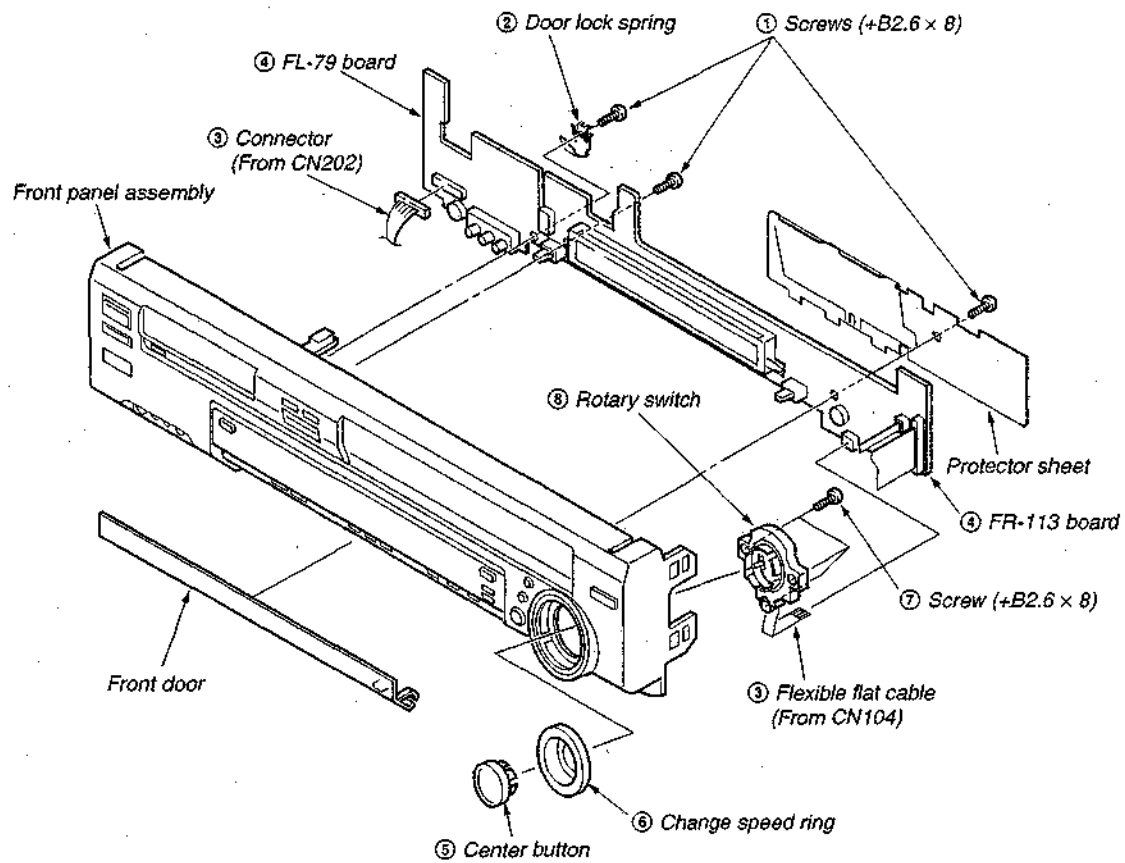


2-3. CP-76 BOARD

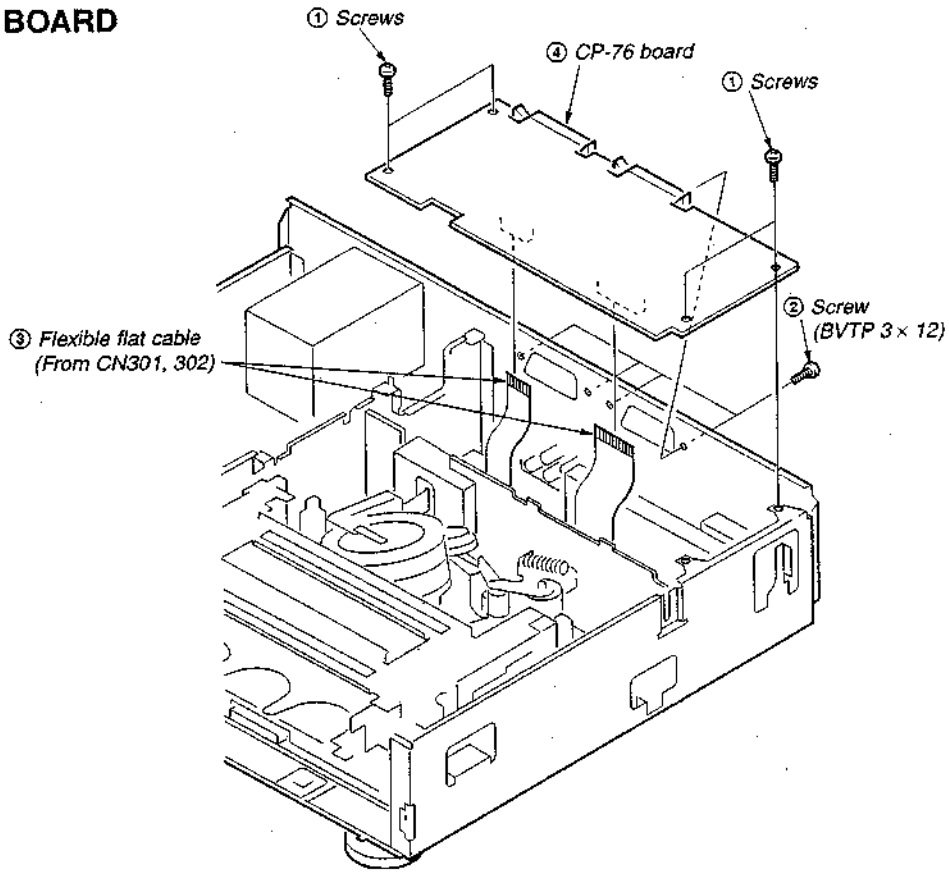


2-4. RV-50 BOARD

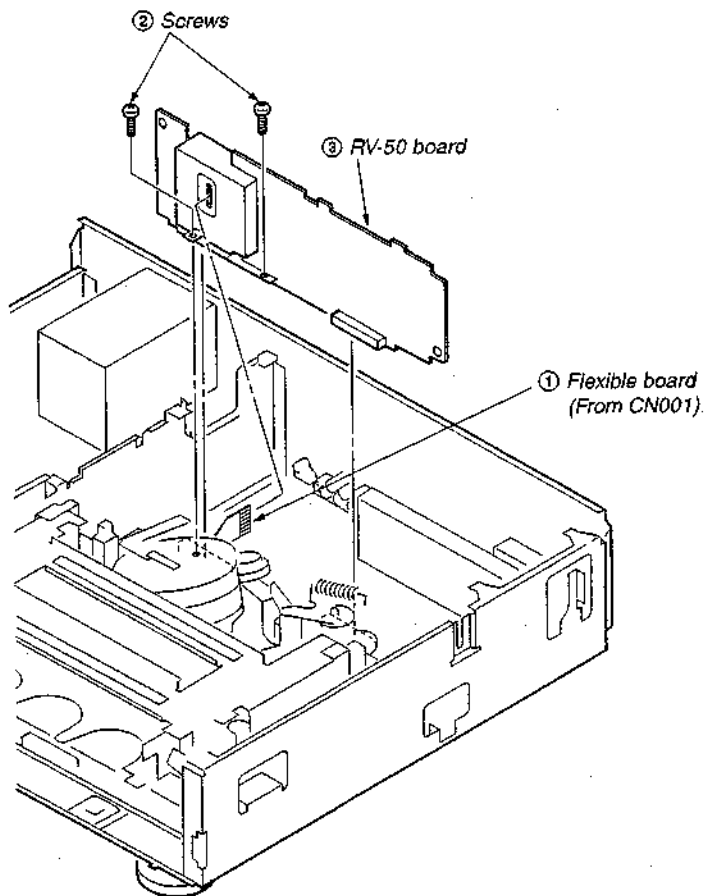


2-5. VHS MECHANISM DECK ASSEMBLY

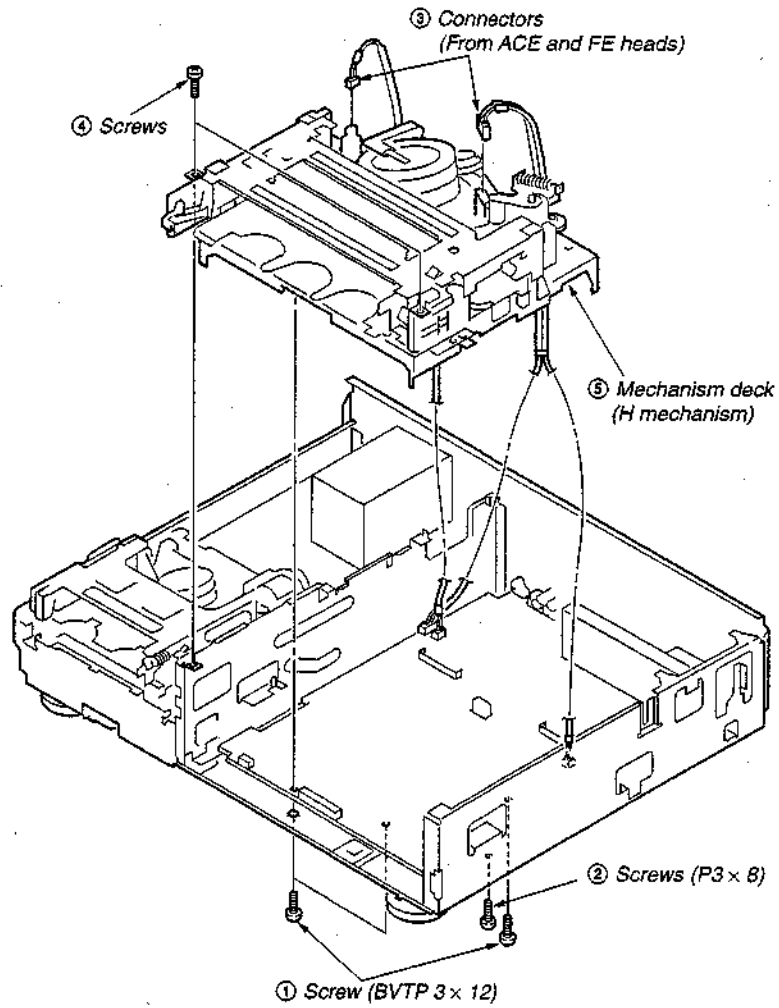


2-6. MV-34 BOARD

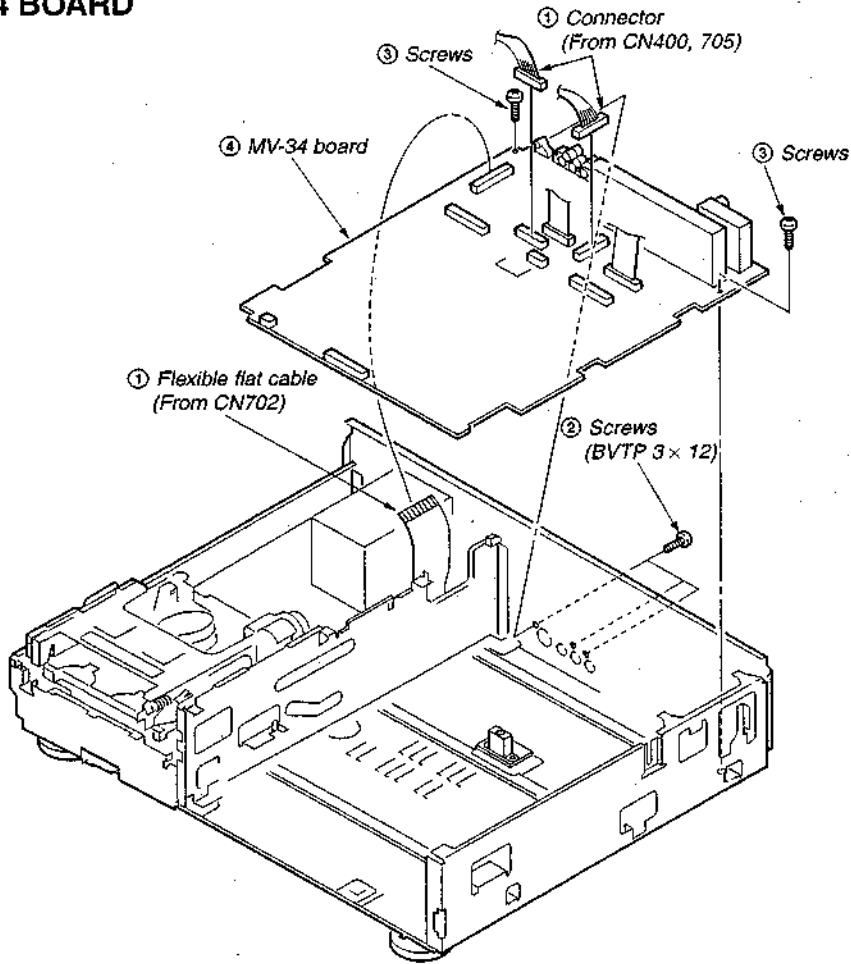


2-7. PS-380 BOARD

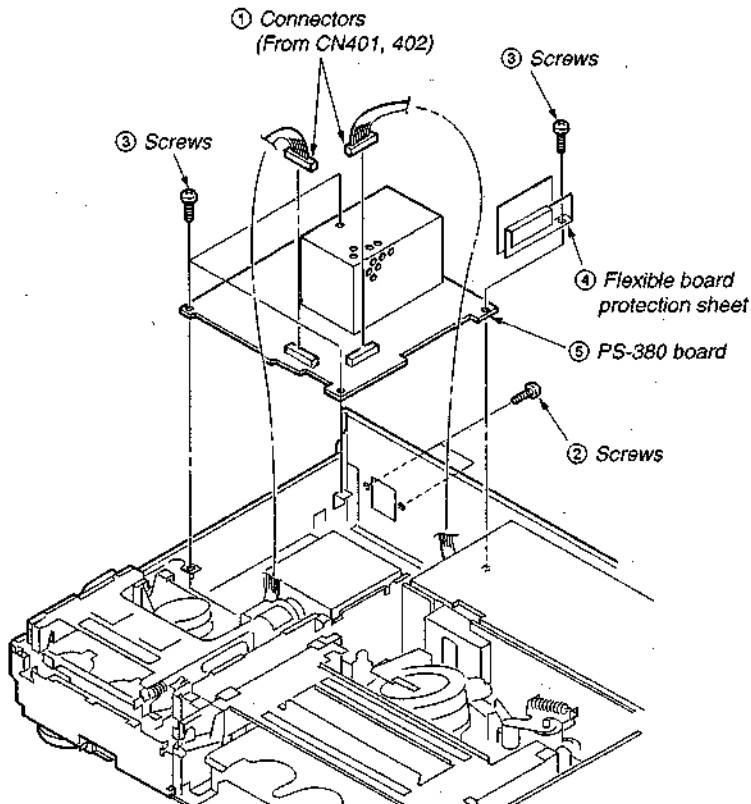


2-8. MH-18 BOARD (WITH Video 8 MECHANISM DECK)

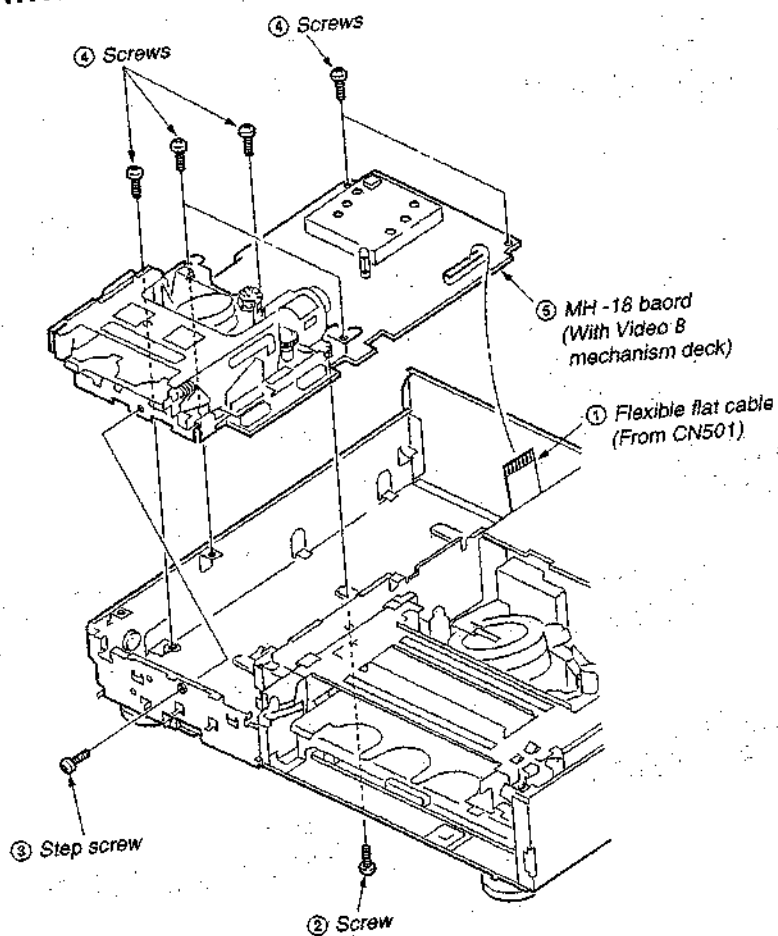

2-9. Video 8 MECHANISM DECK (WITH RP-211 BOARD)

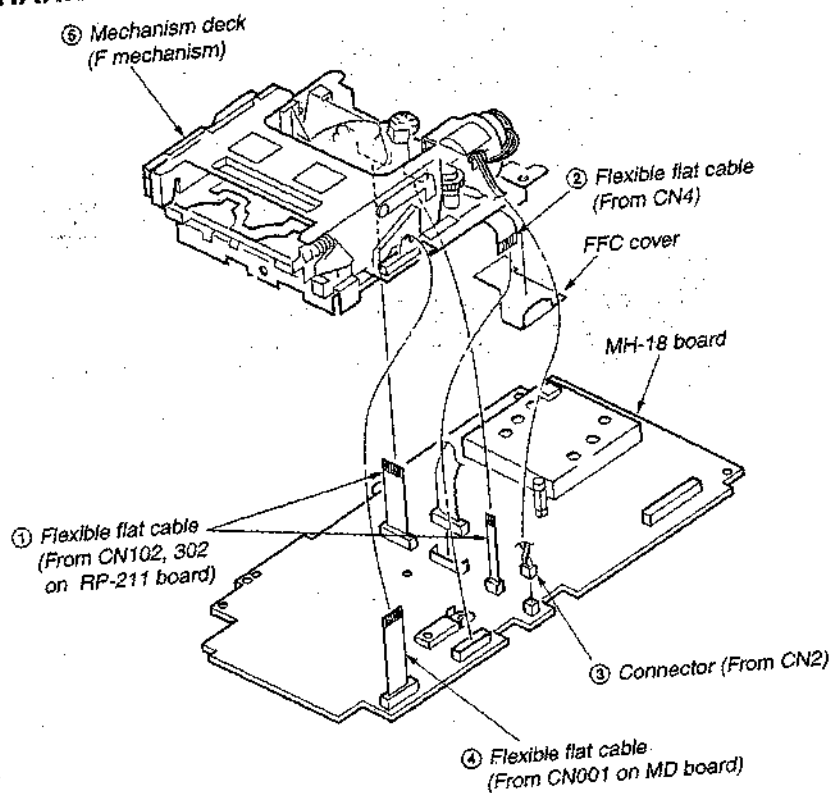


2-10. CIRCUIT BOARDS LOCATION

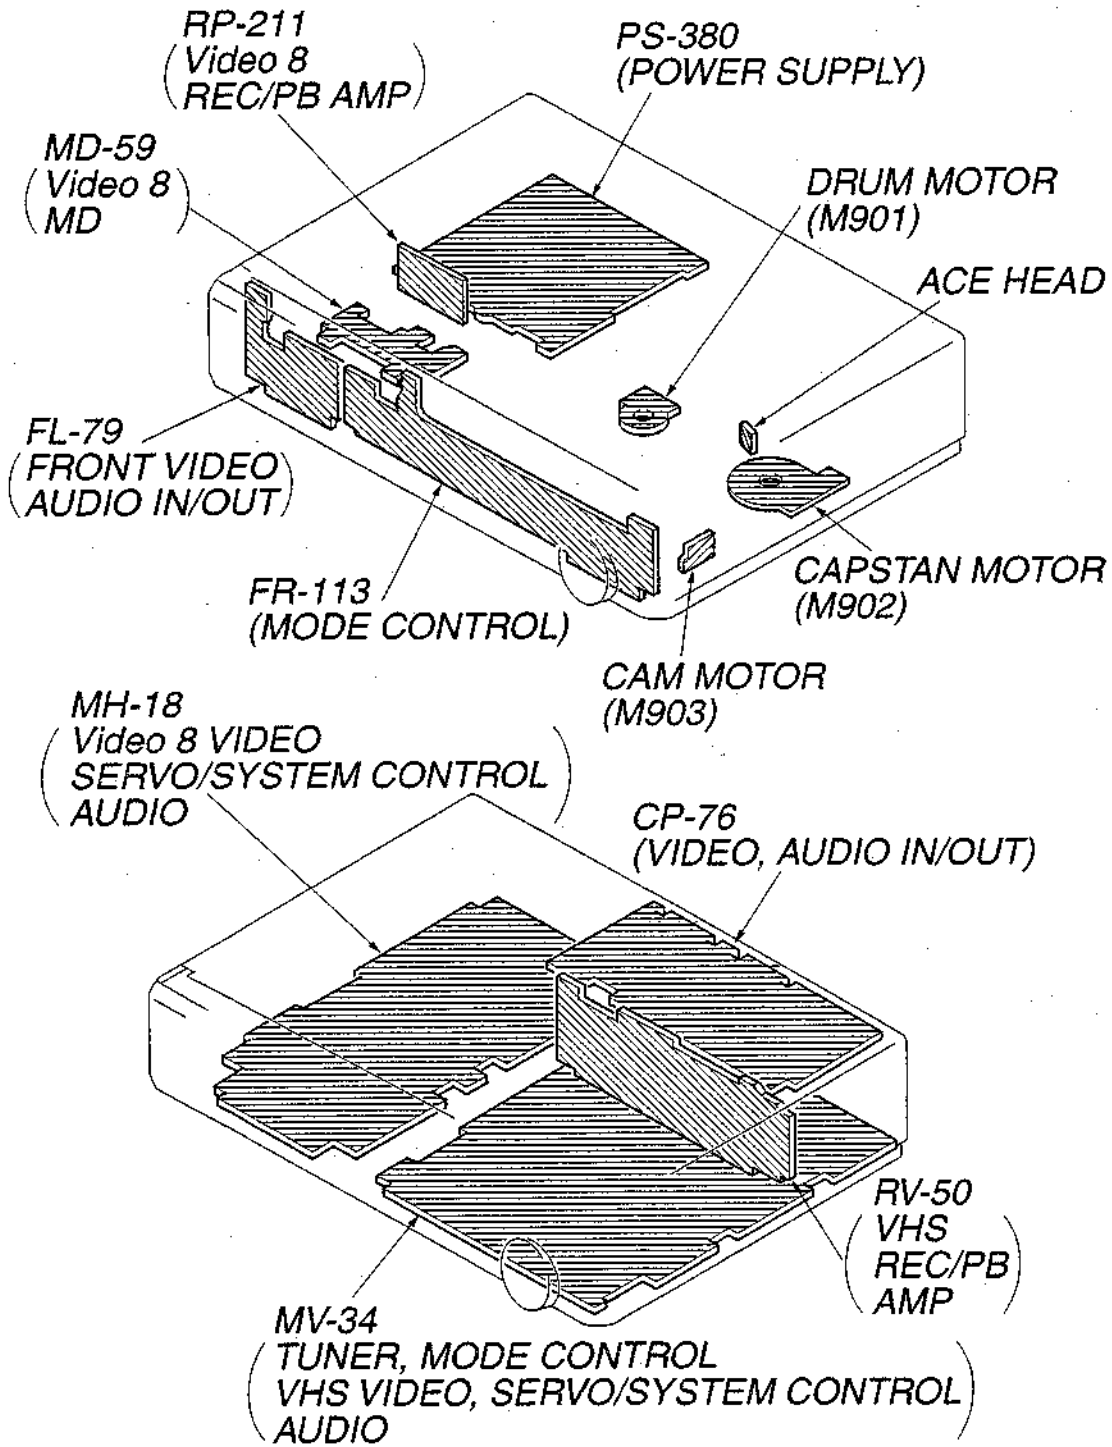


SECTION 3
BLOCK DIAGRAMS


3-1. OVERALL BLOCK DIAGRAM

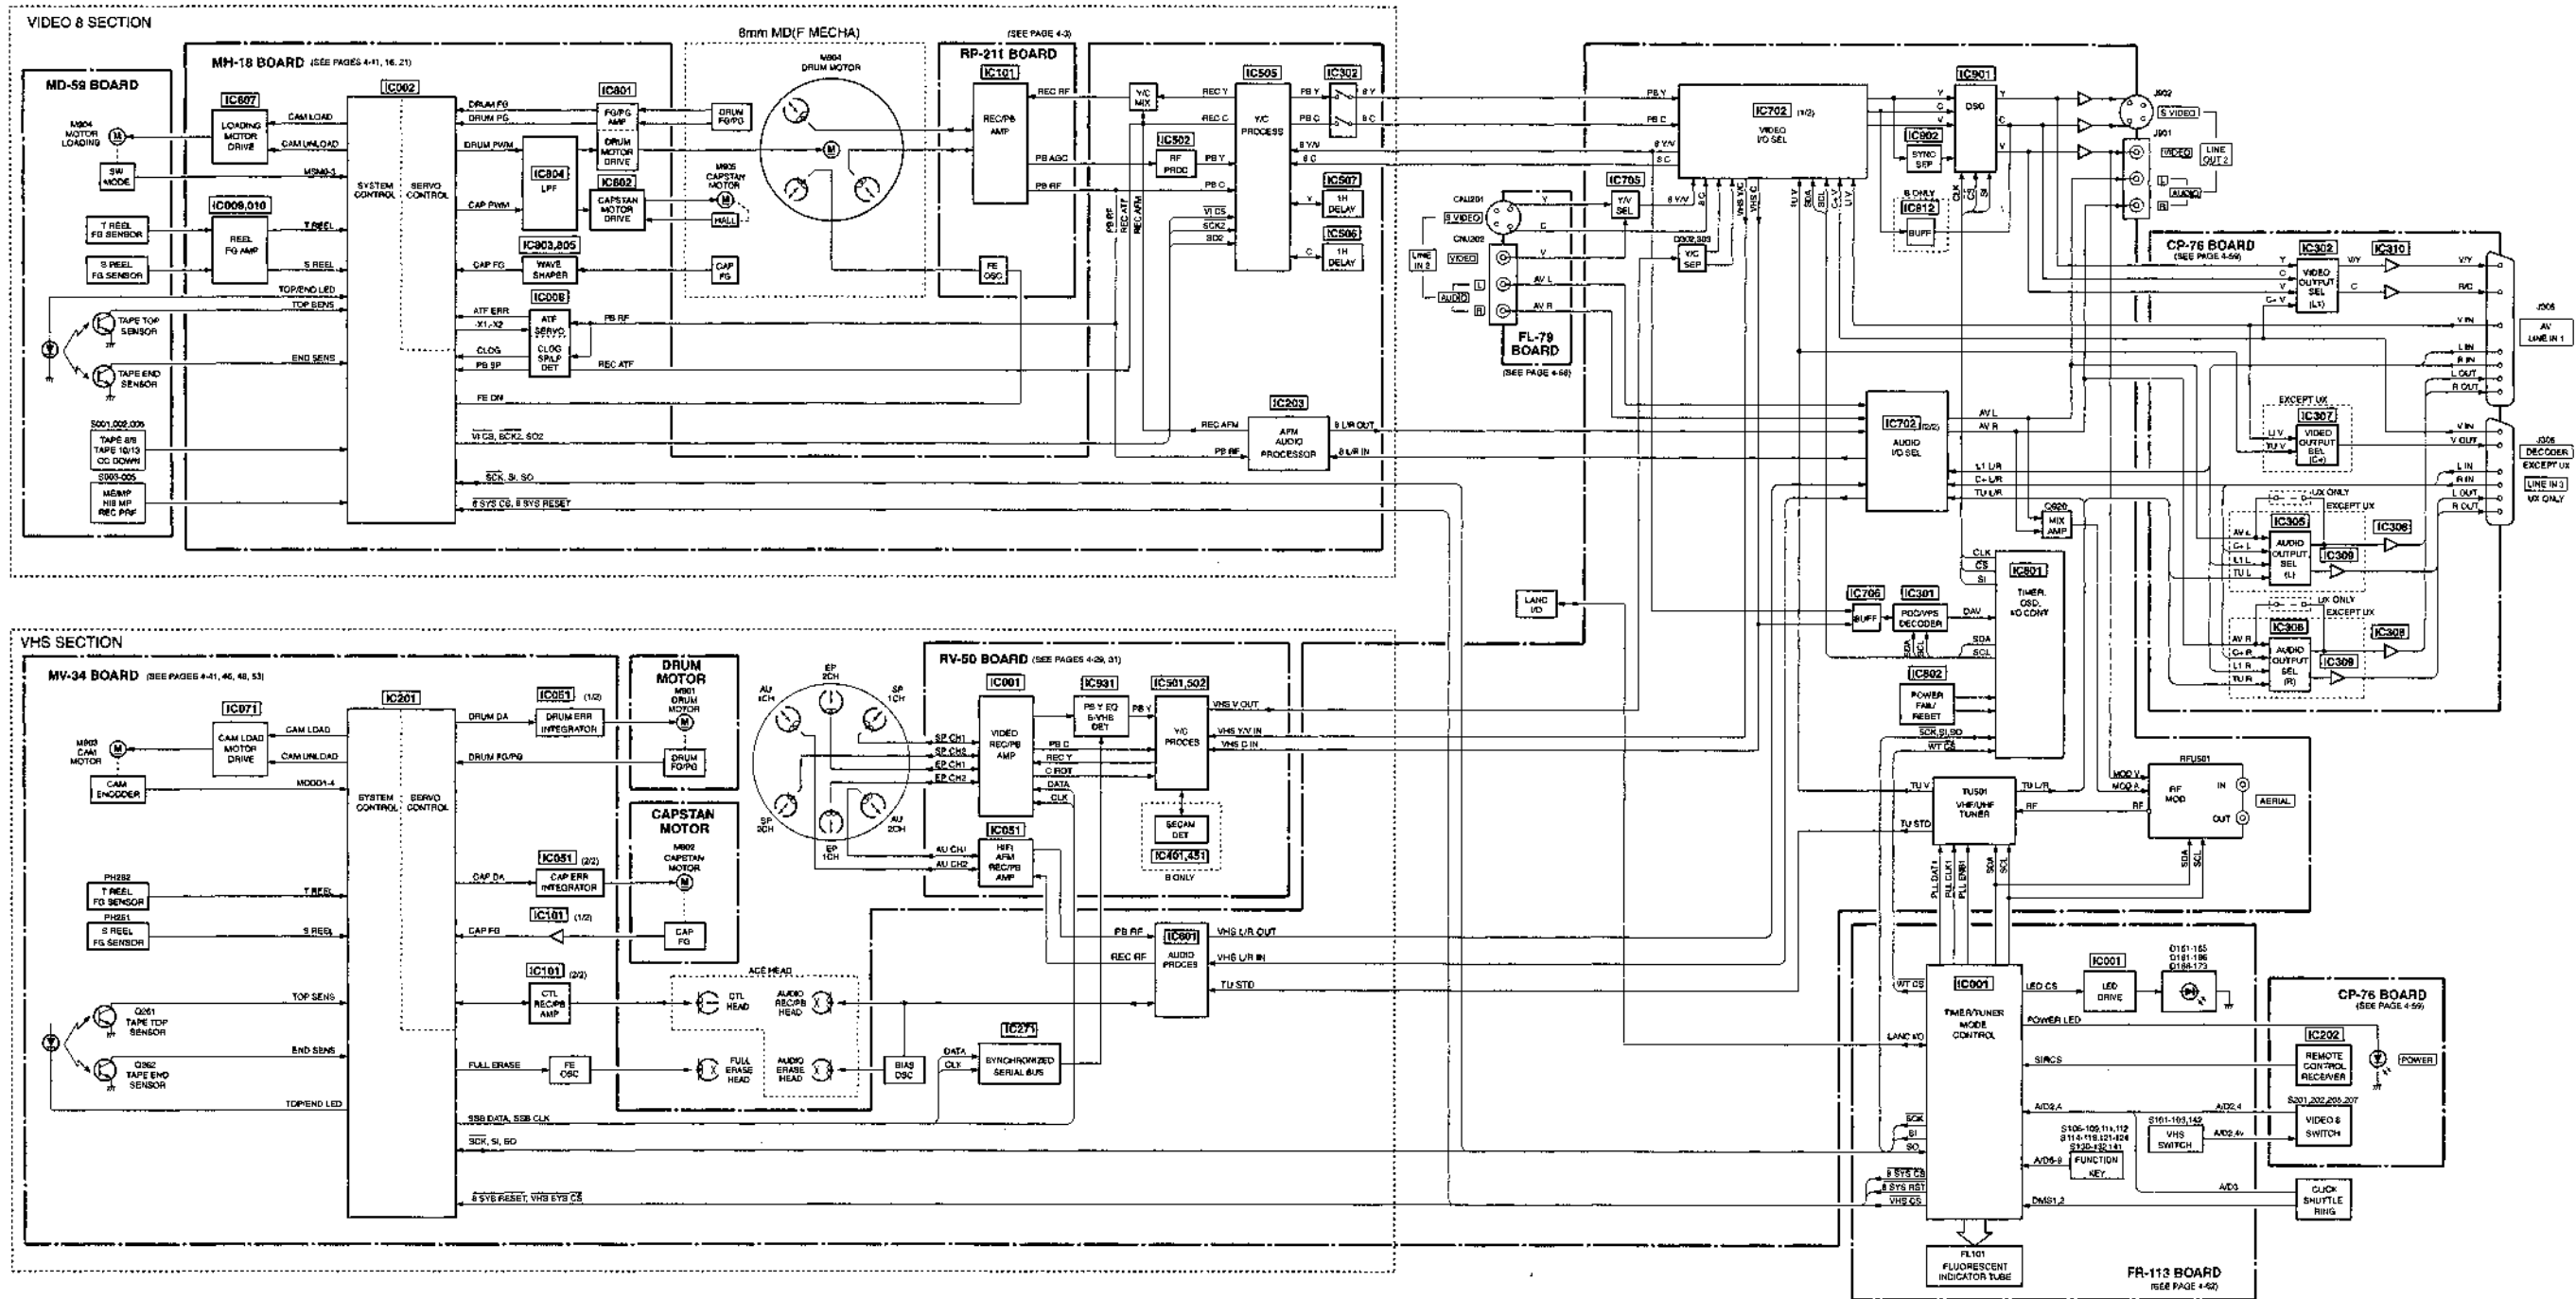


3-2. Video 8 VIDEO BLOCK DIAGRAM

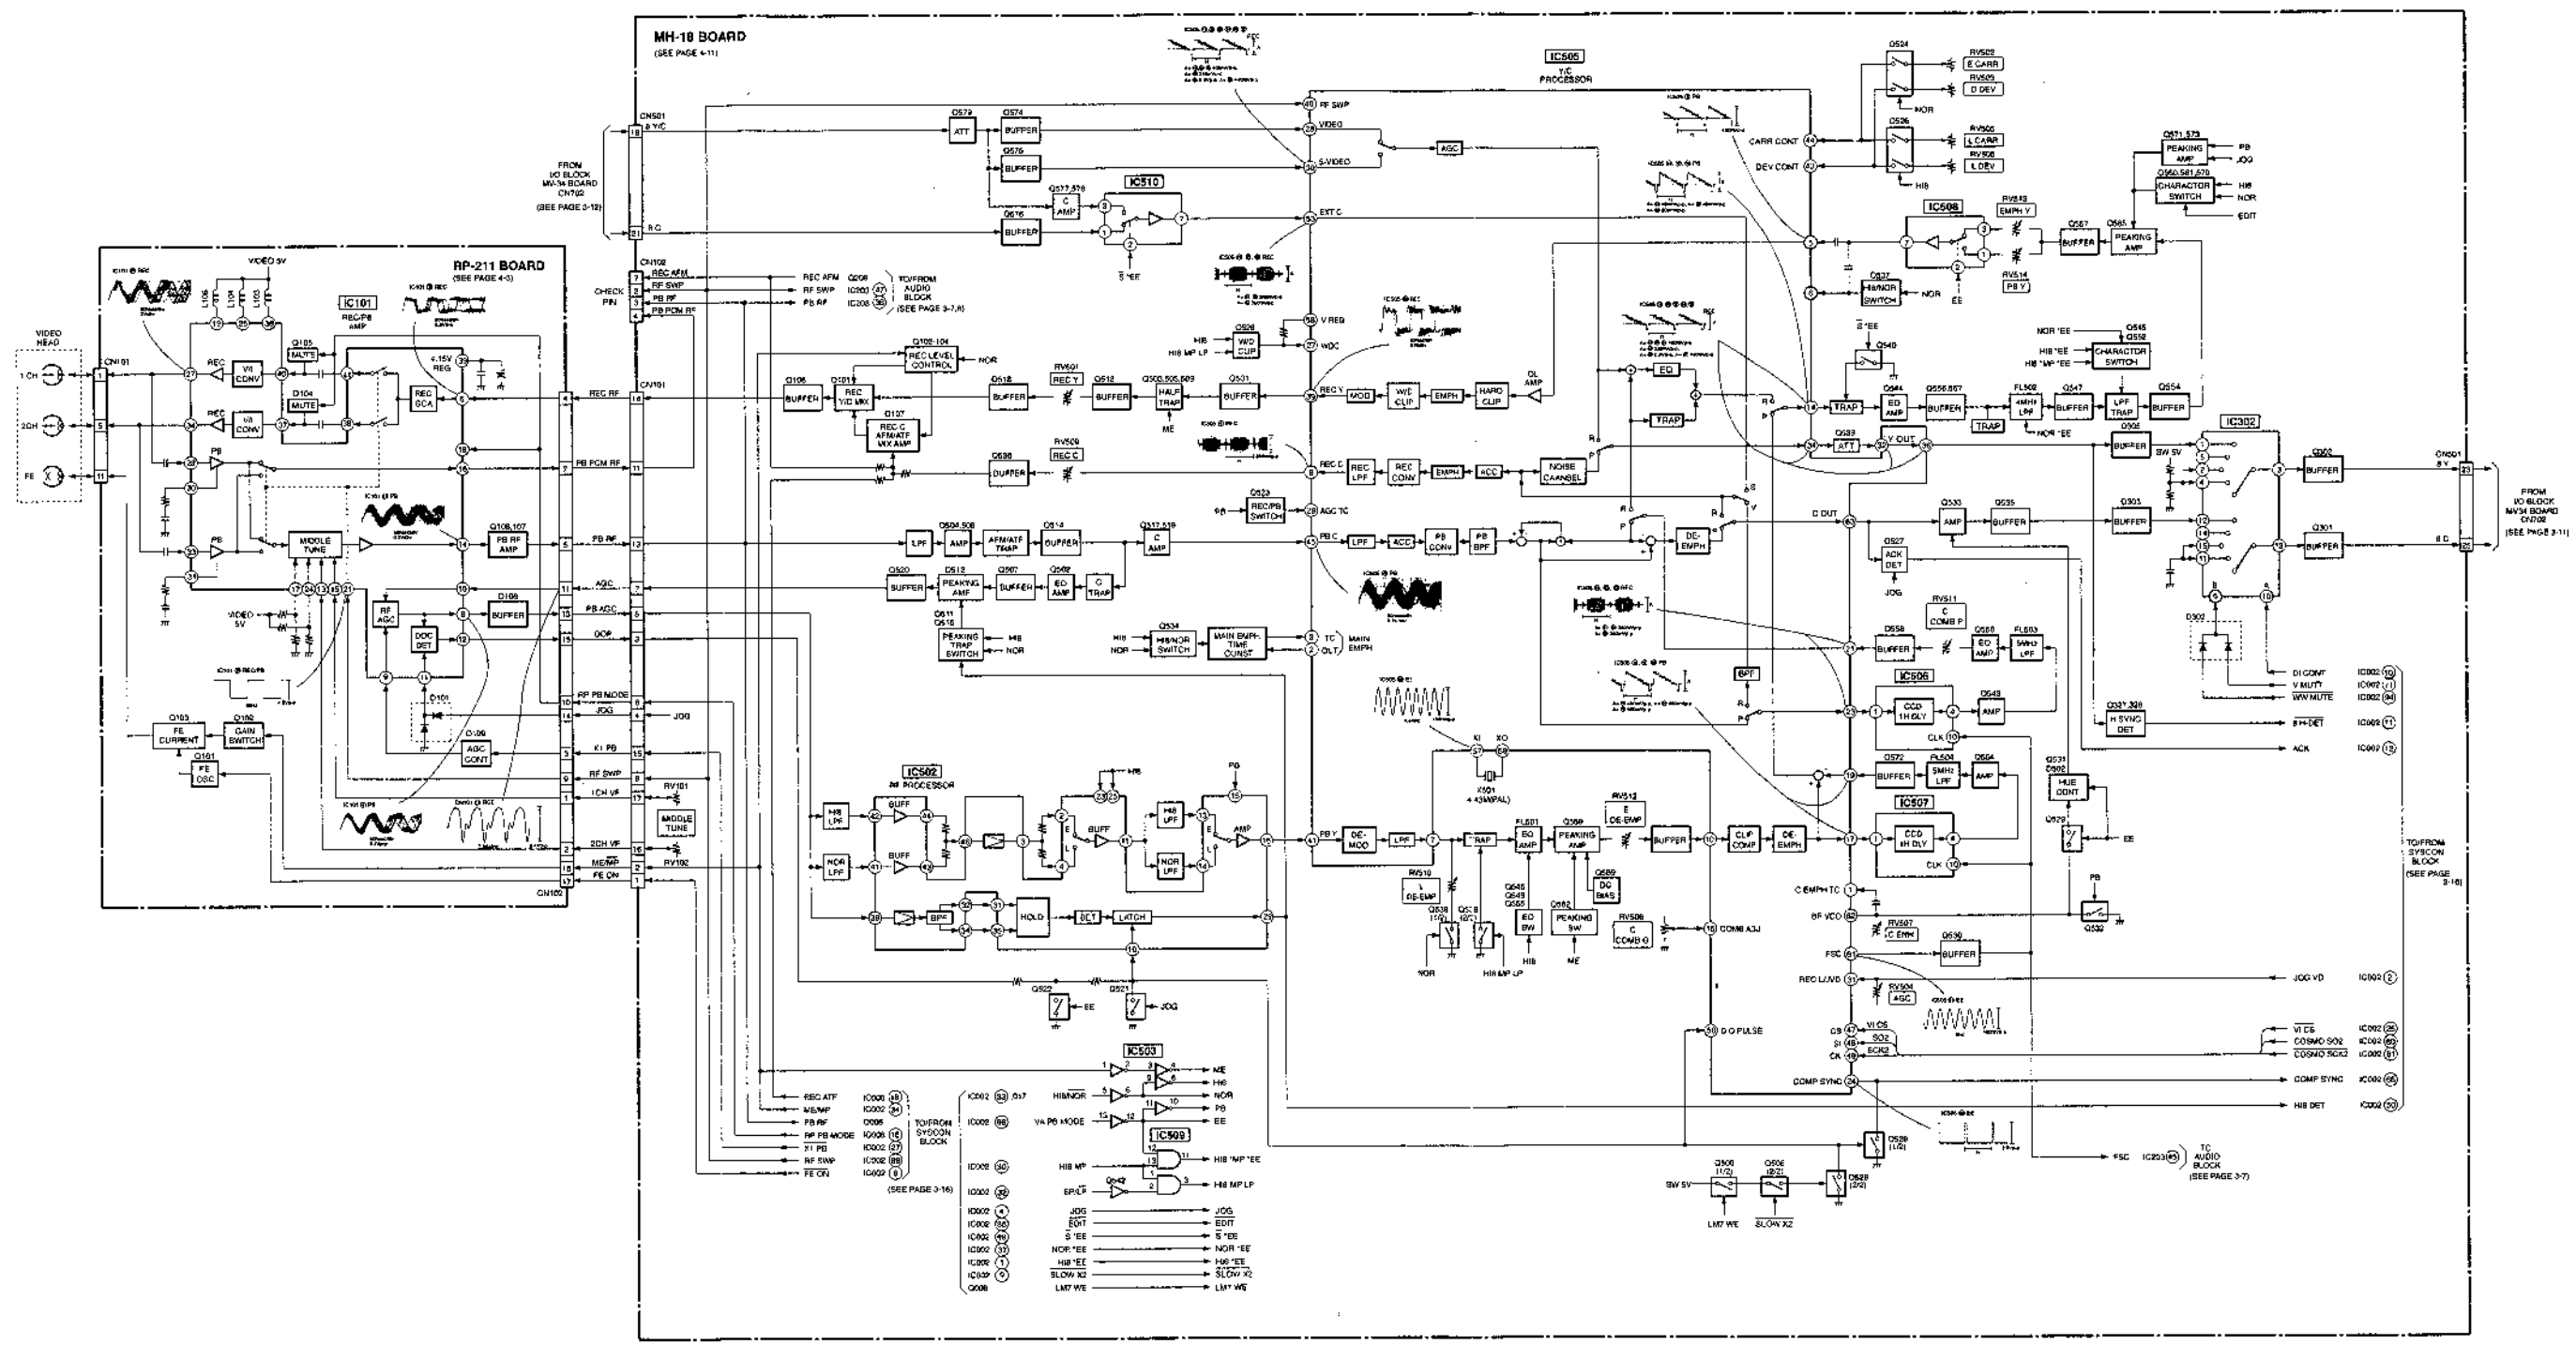


3-3. VHS VIDEO BLOCK DIAGRAM

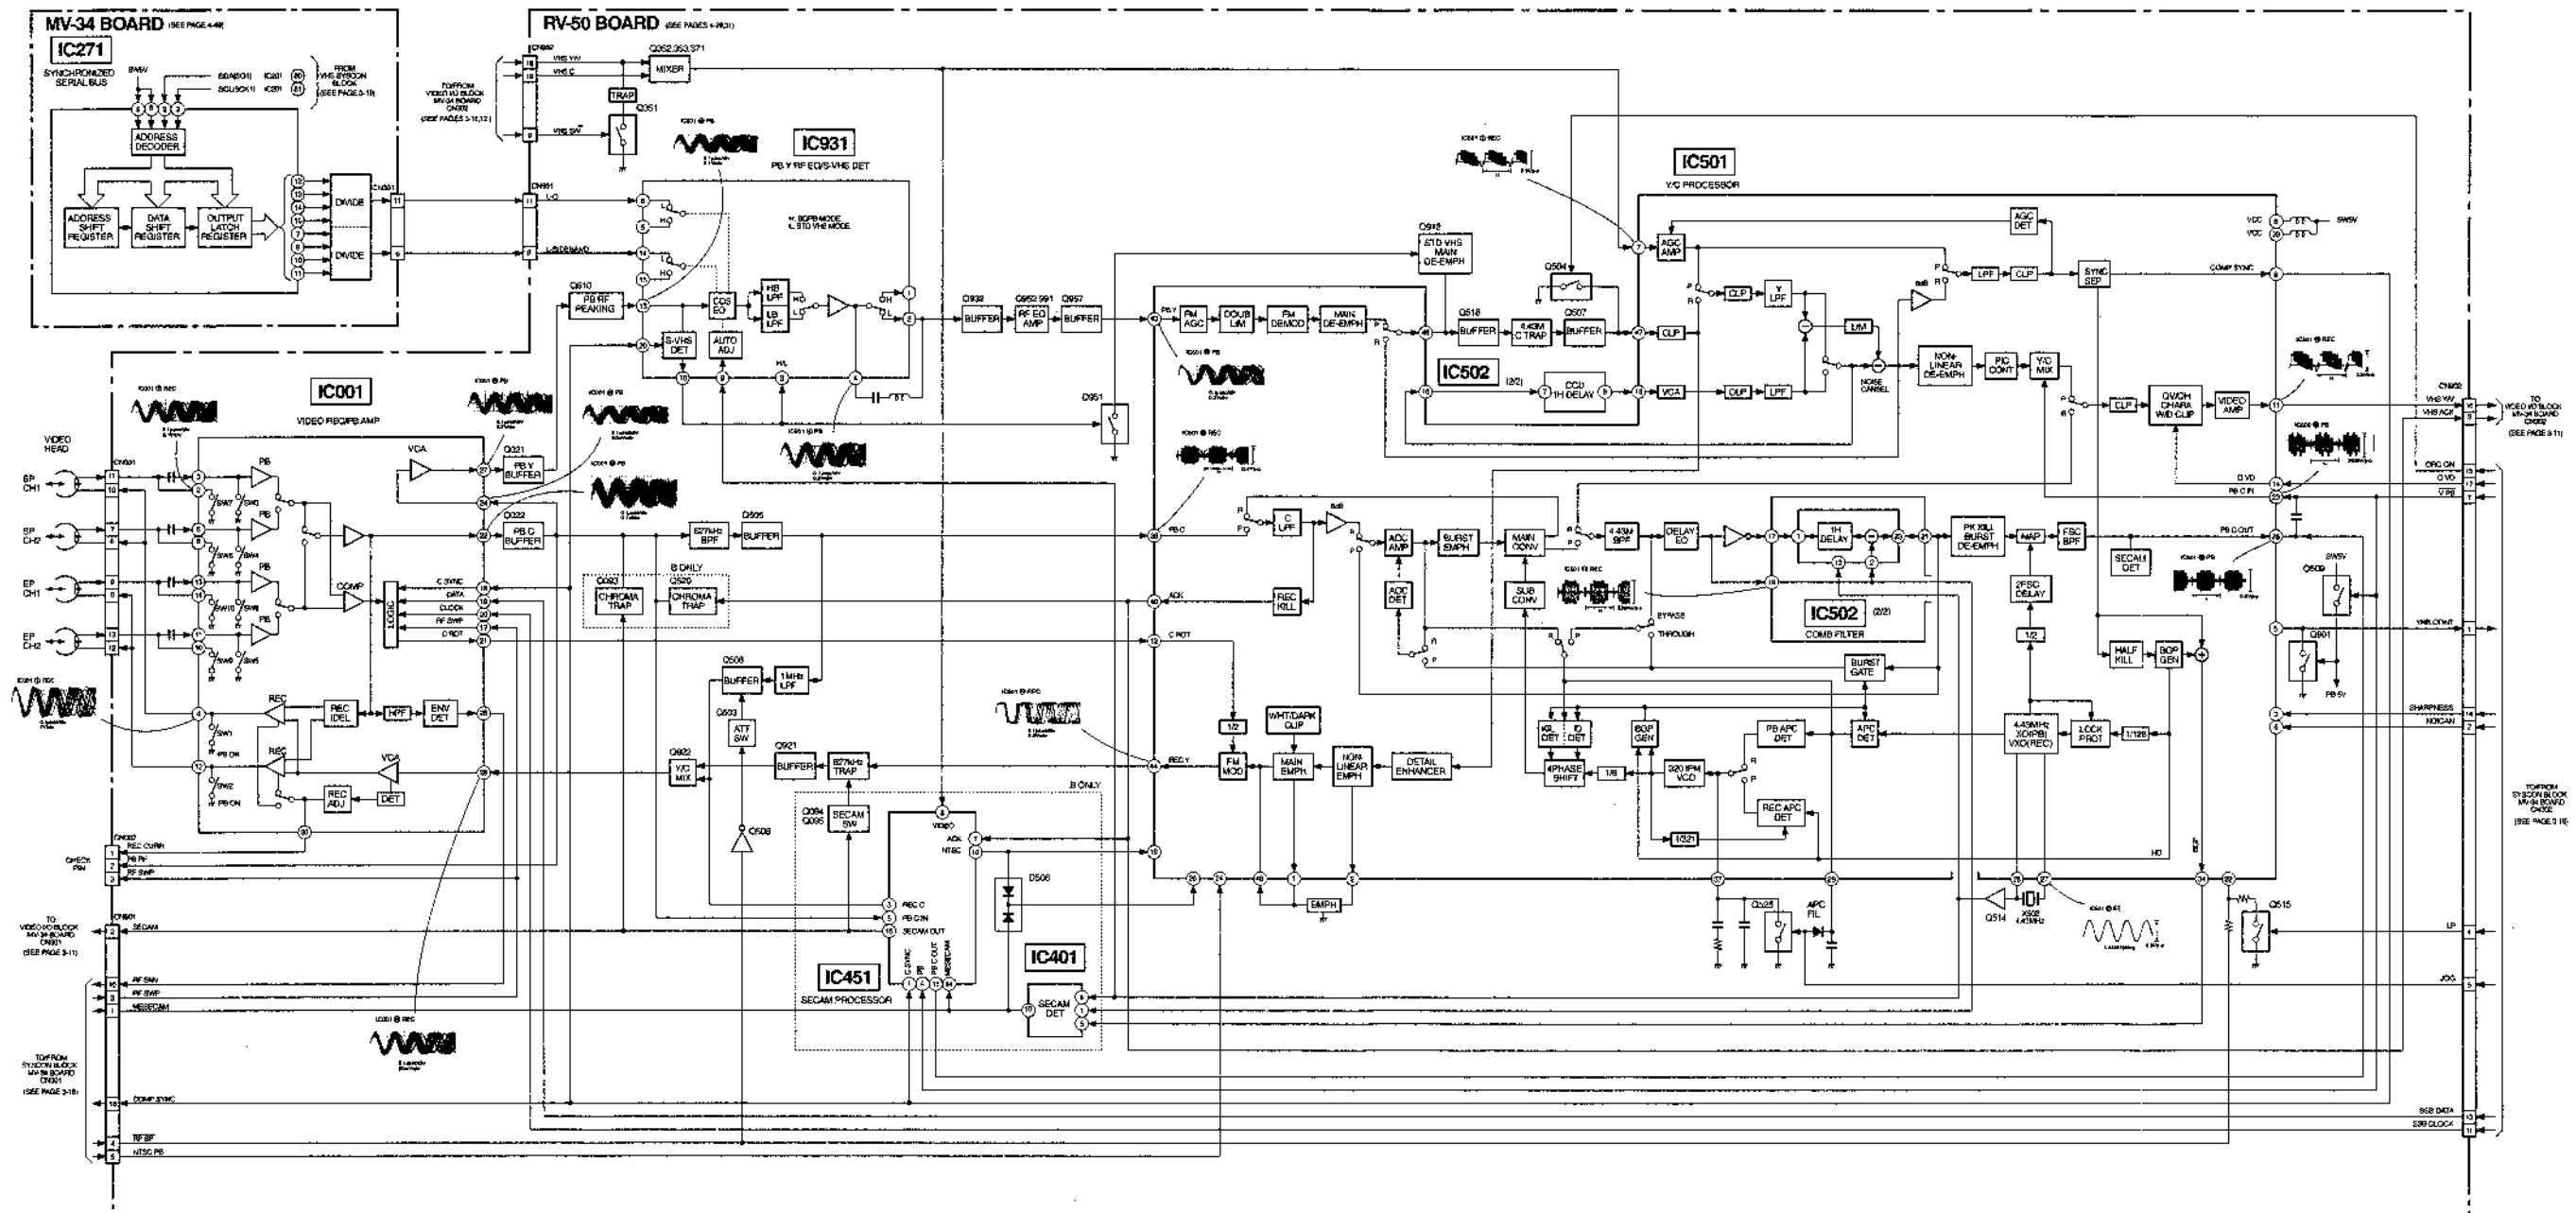


3-4. Video 8 AUDIO BLOCK DIAGRAM

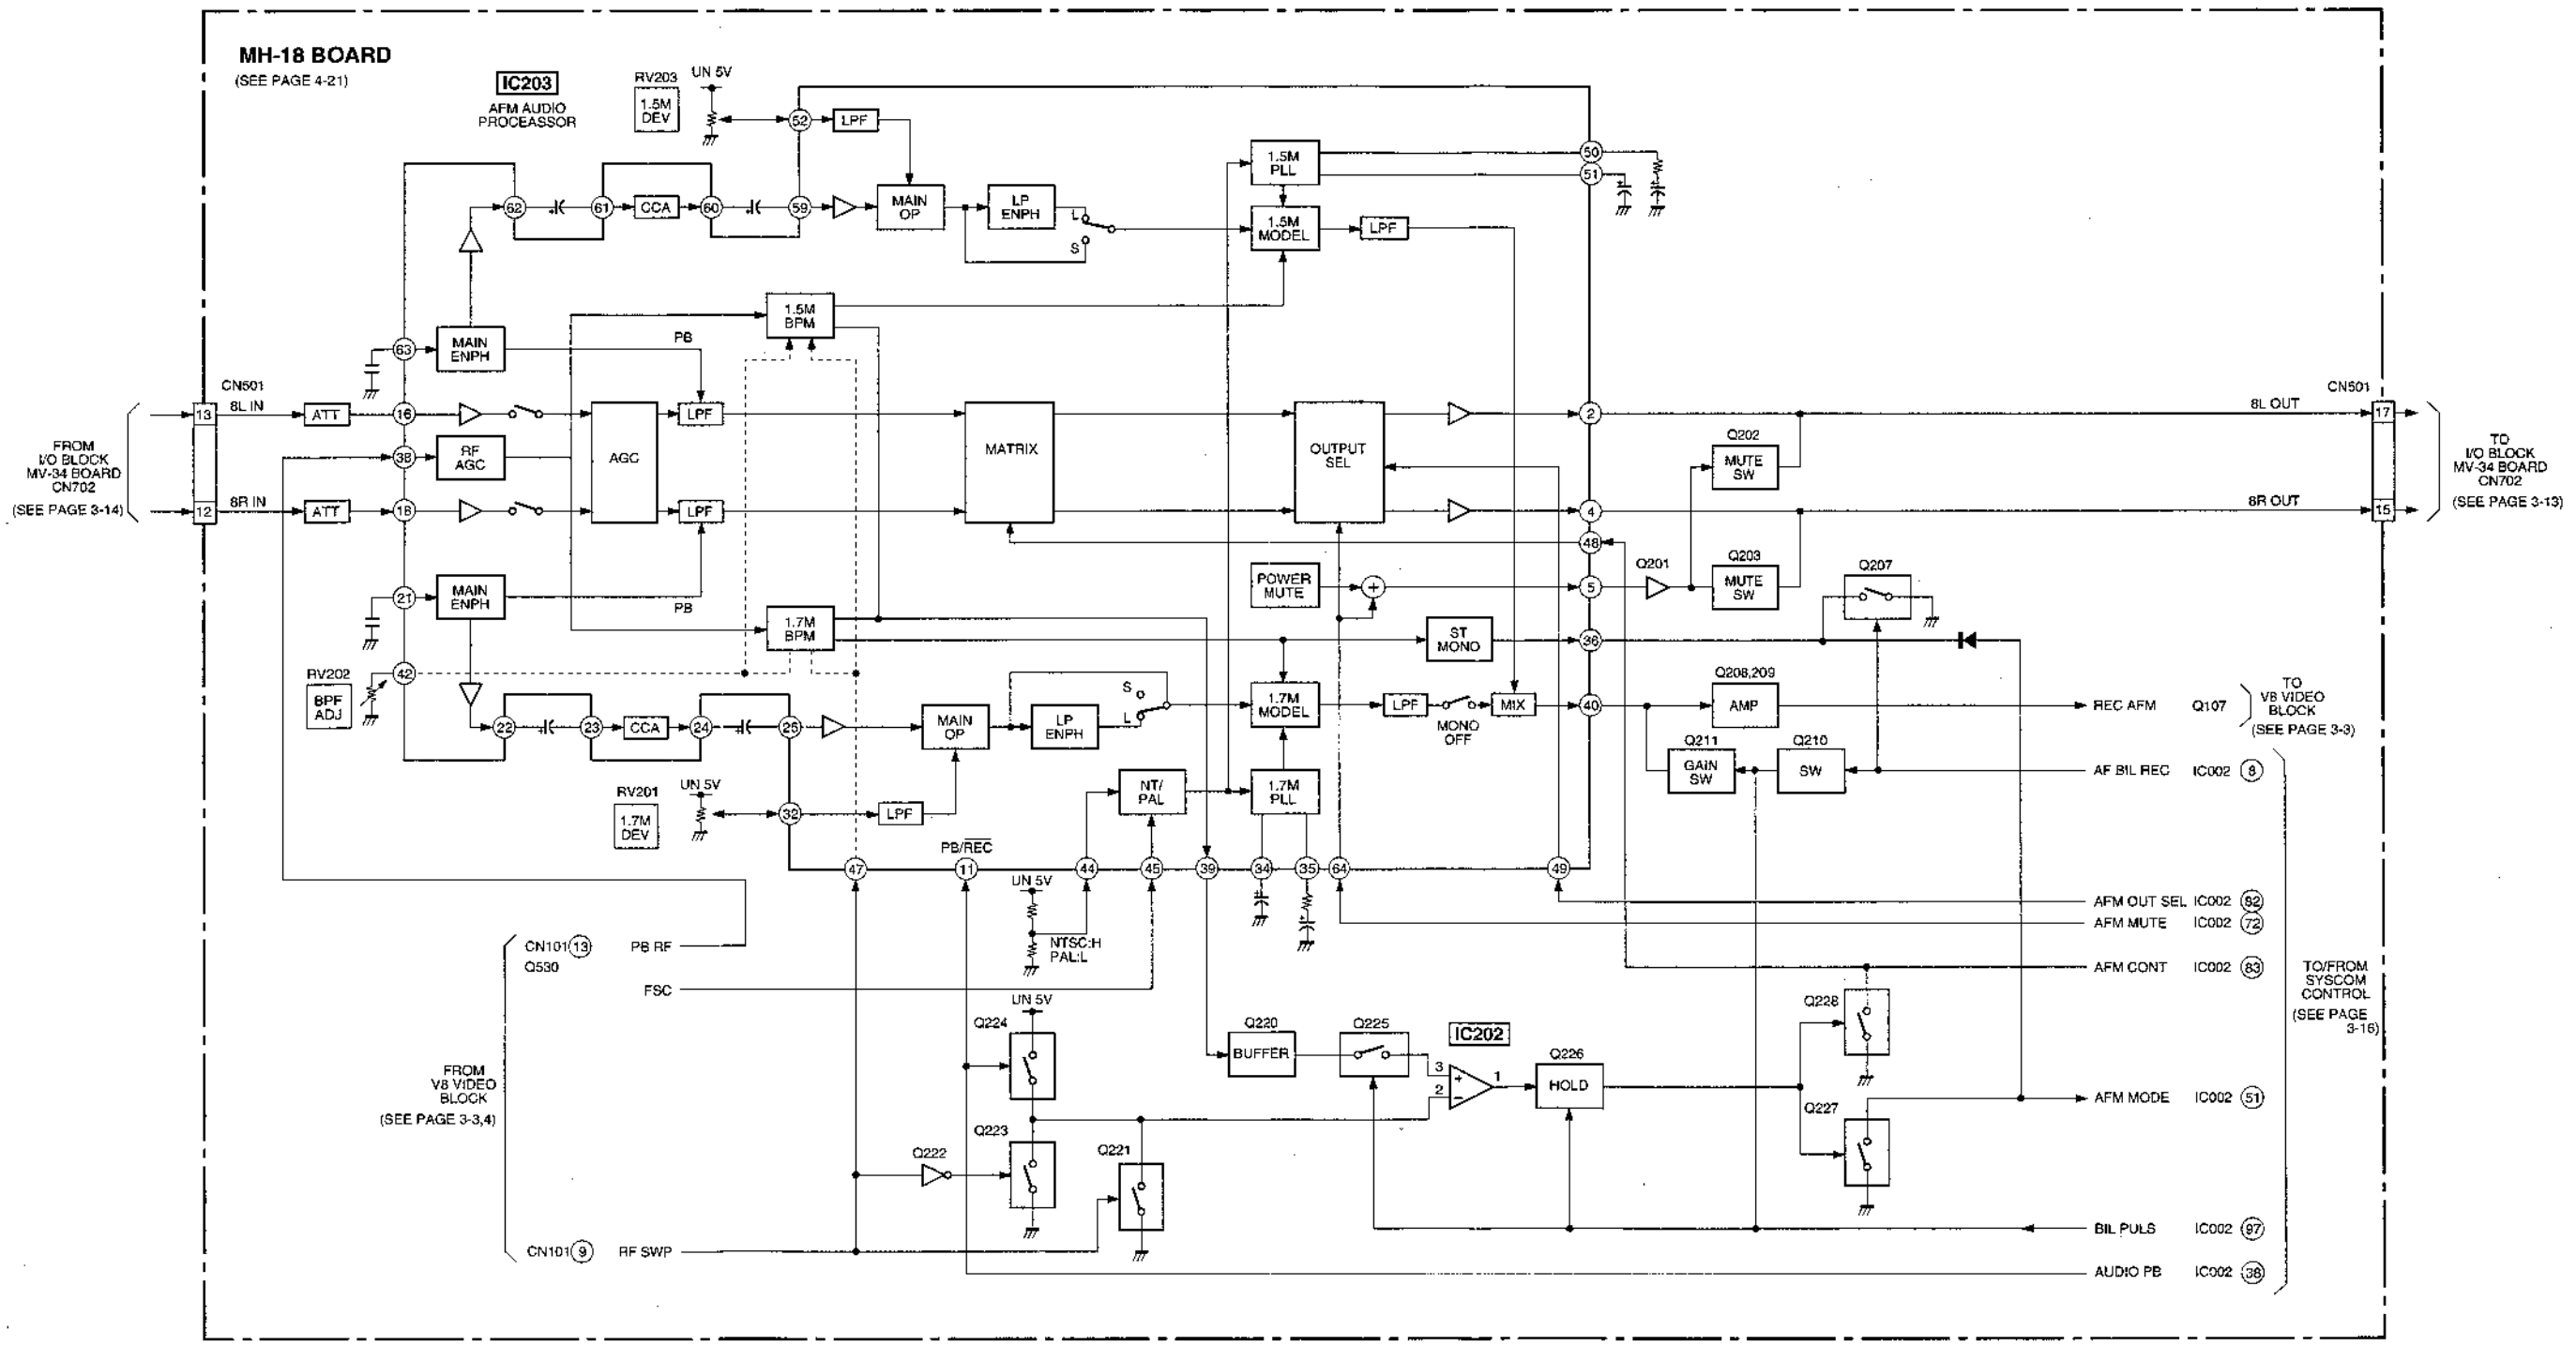


3-5. VHS AUDIO BLOCK DIAGRAM

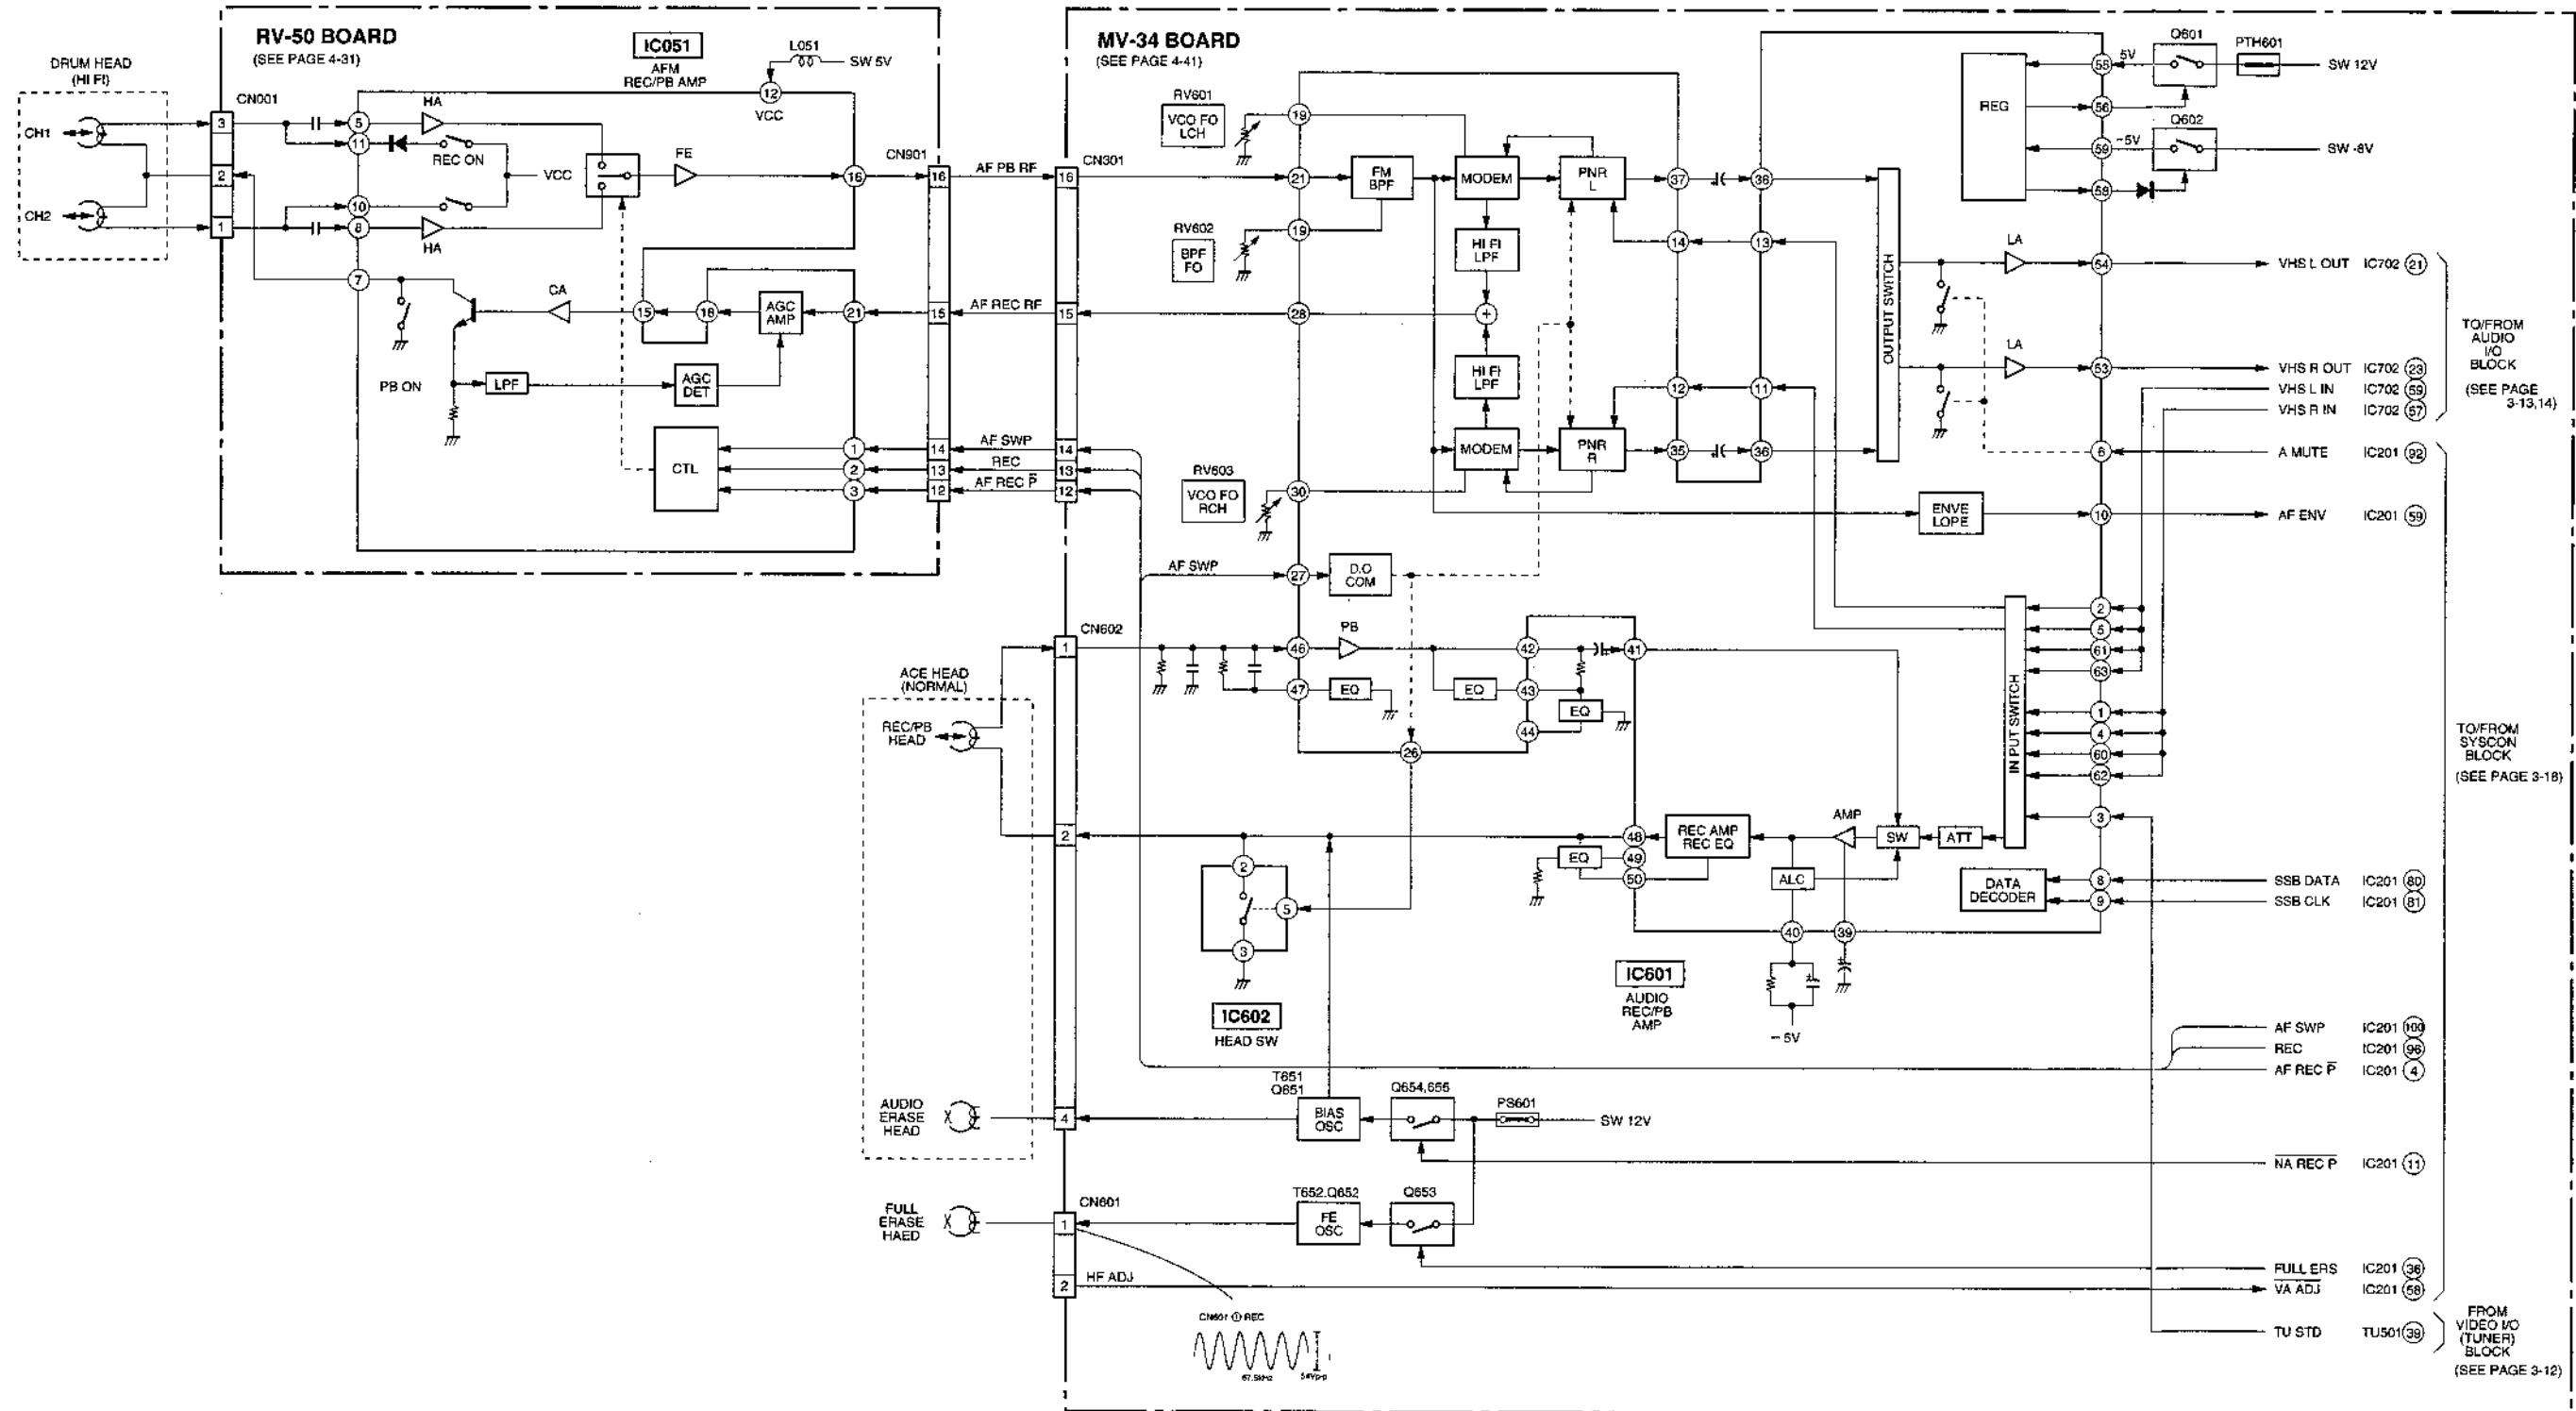


3-6. VIDEO IN/OUT BLOCK DIAGRAM

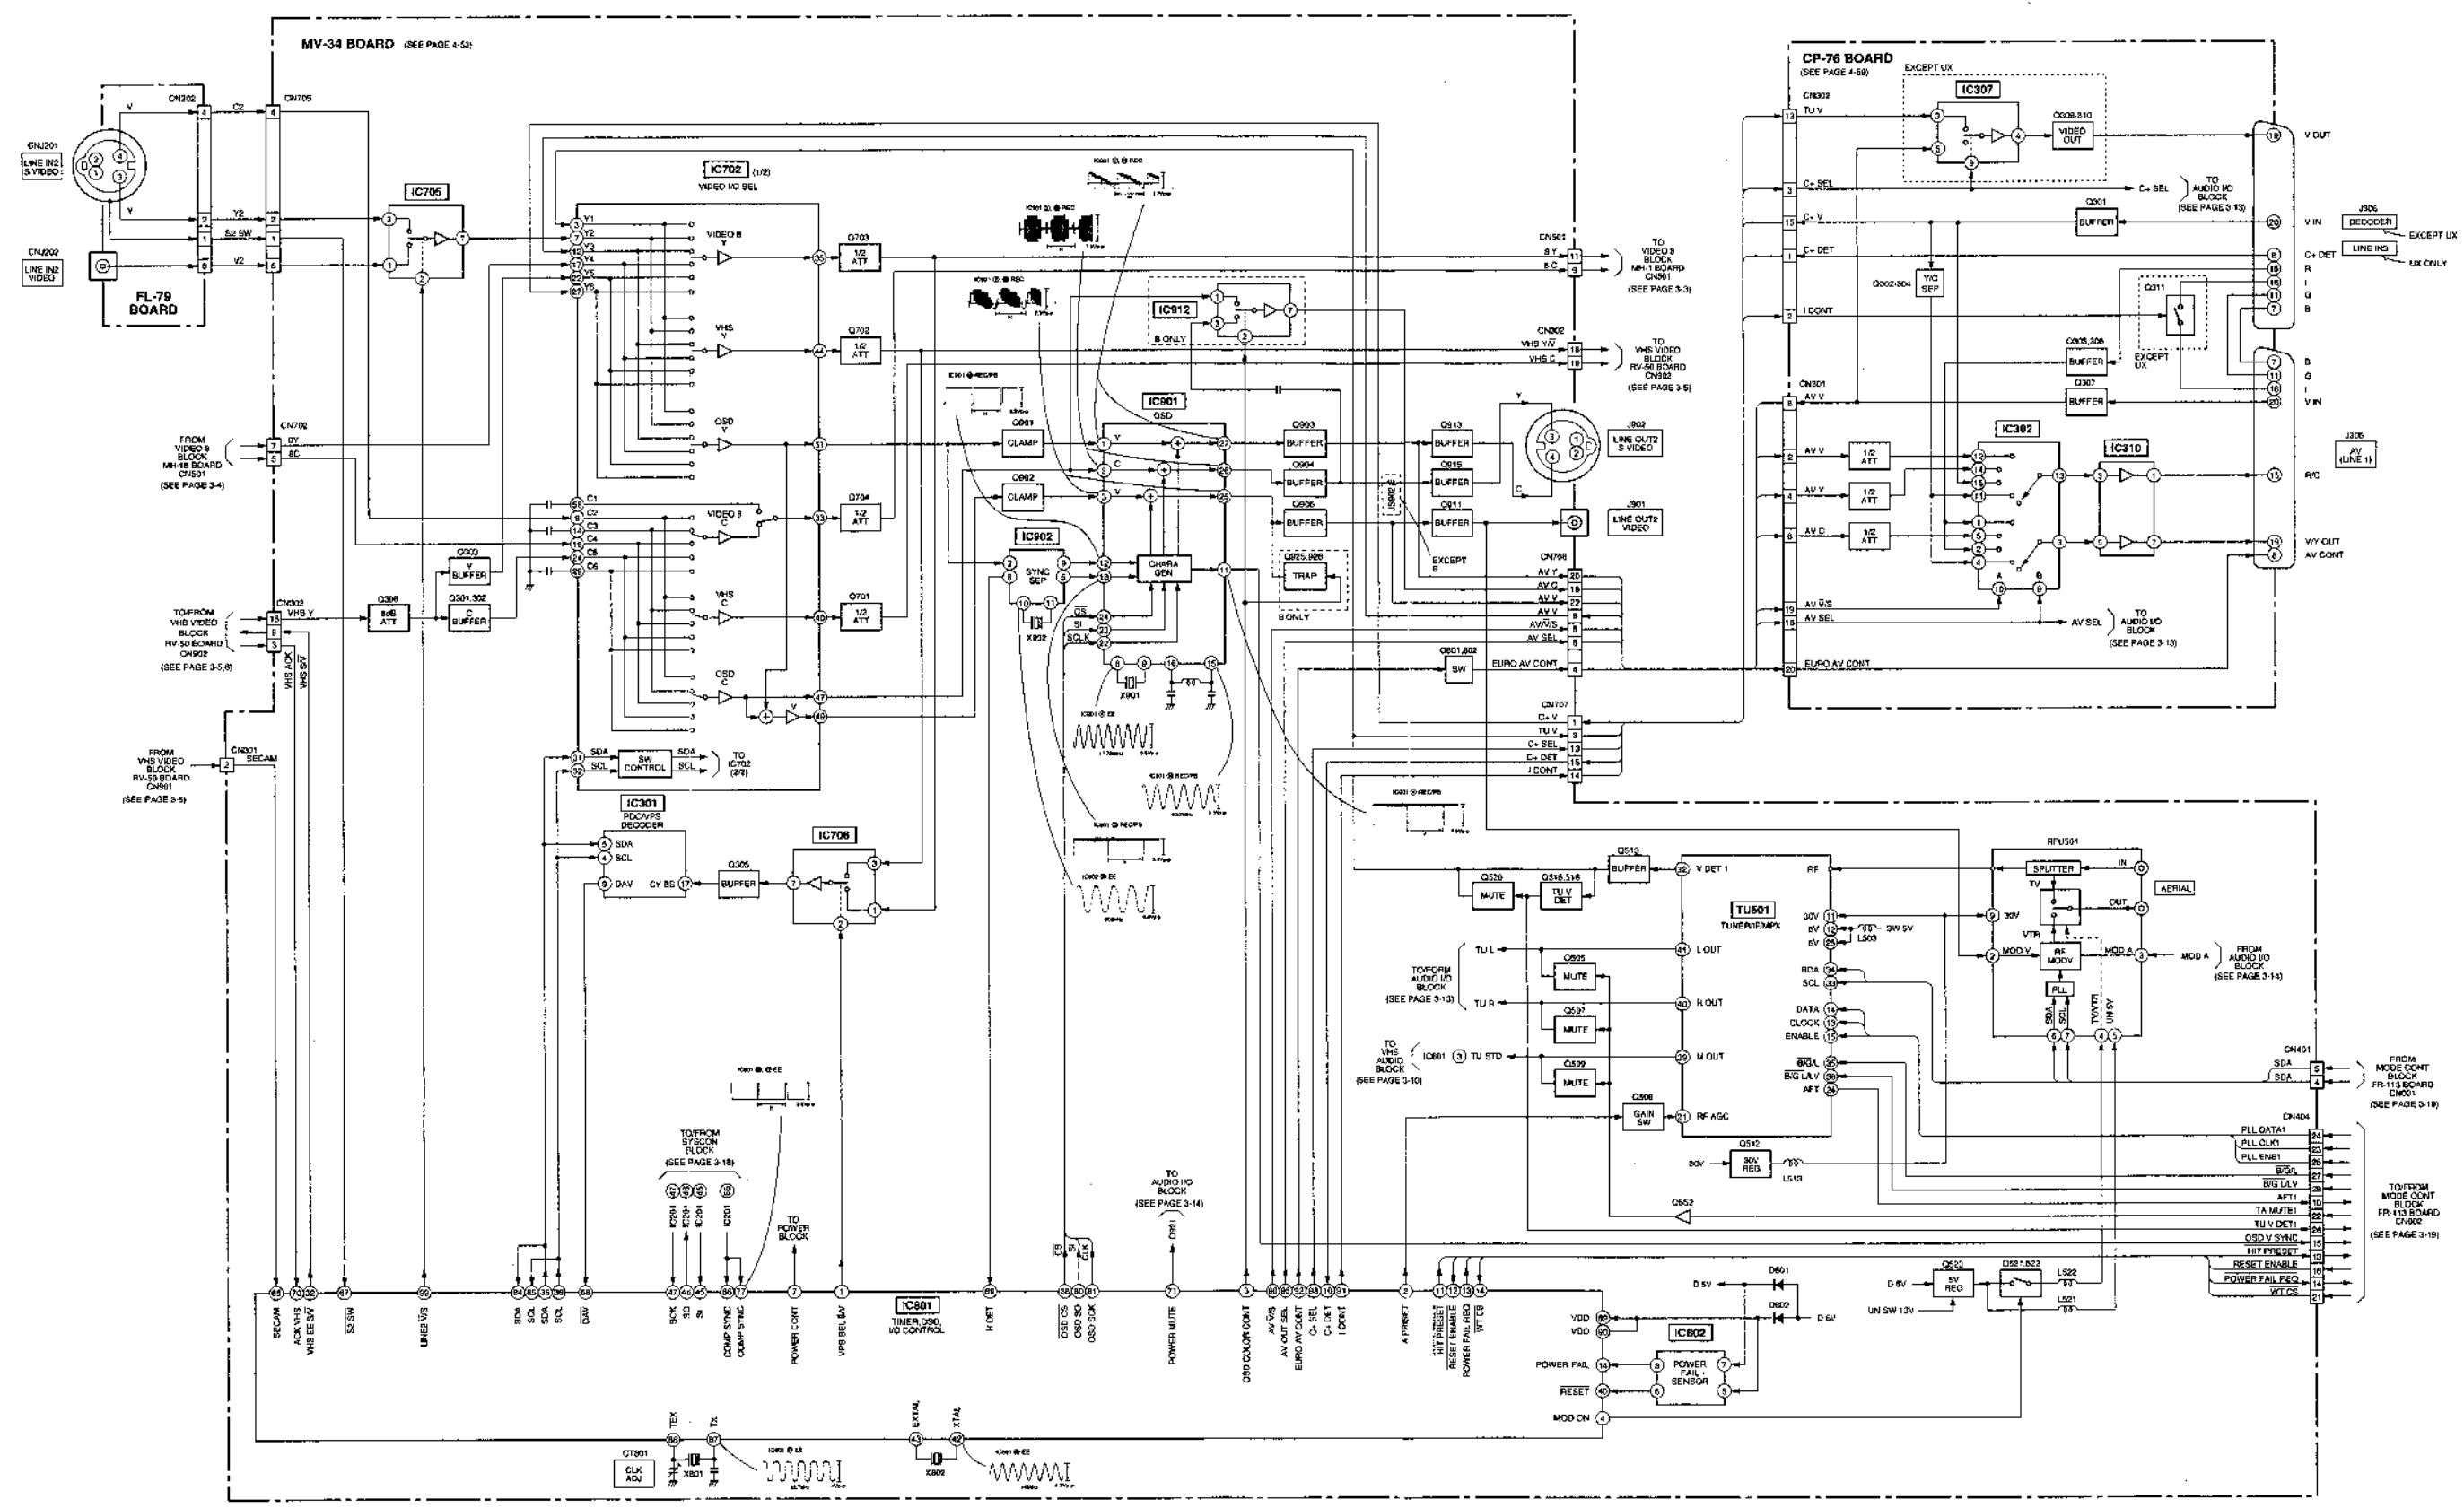


3-7. AUDIO IN/OUT BLOCK DIAGRAM

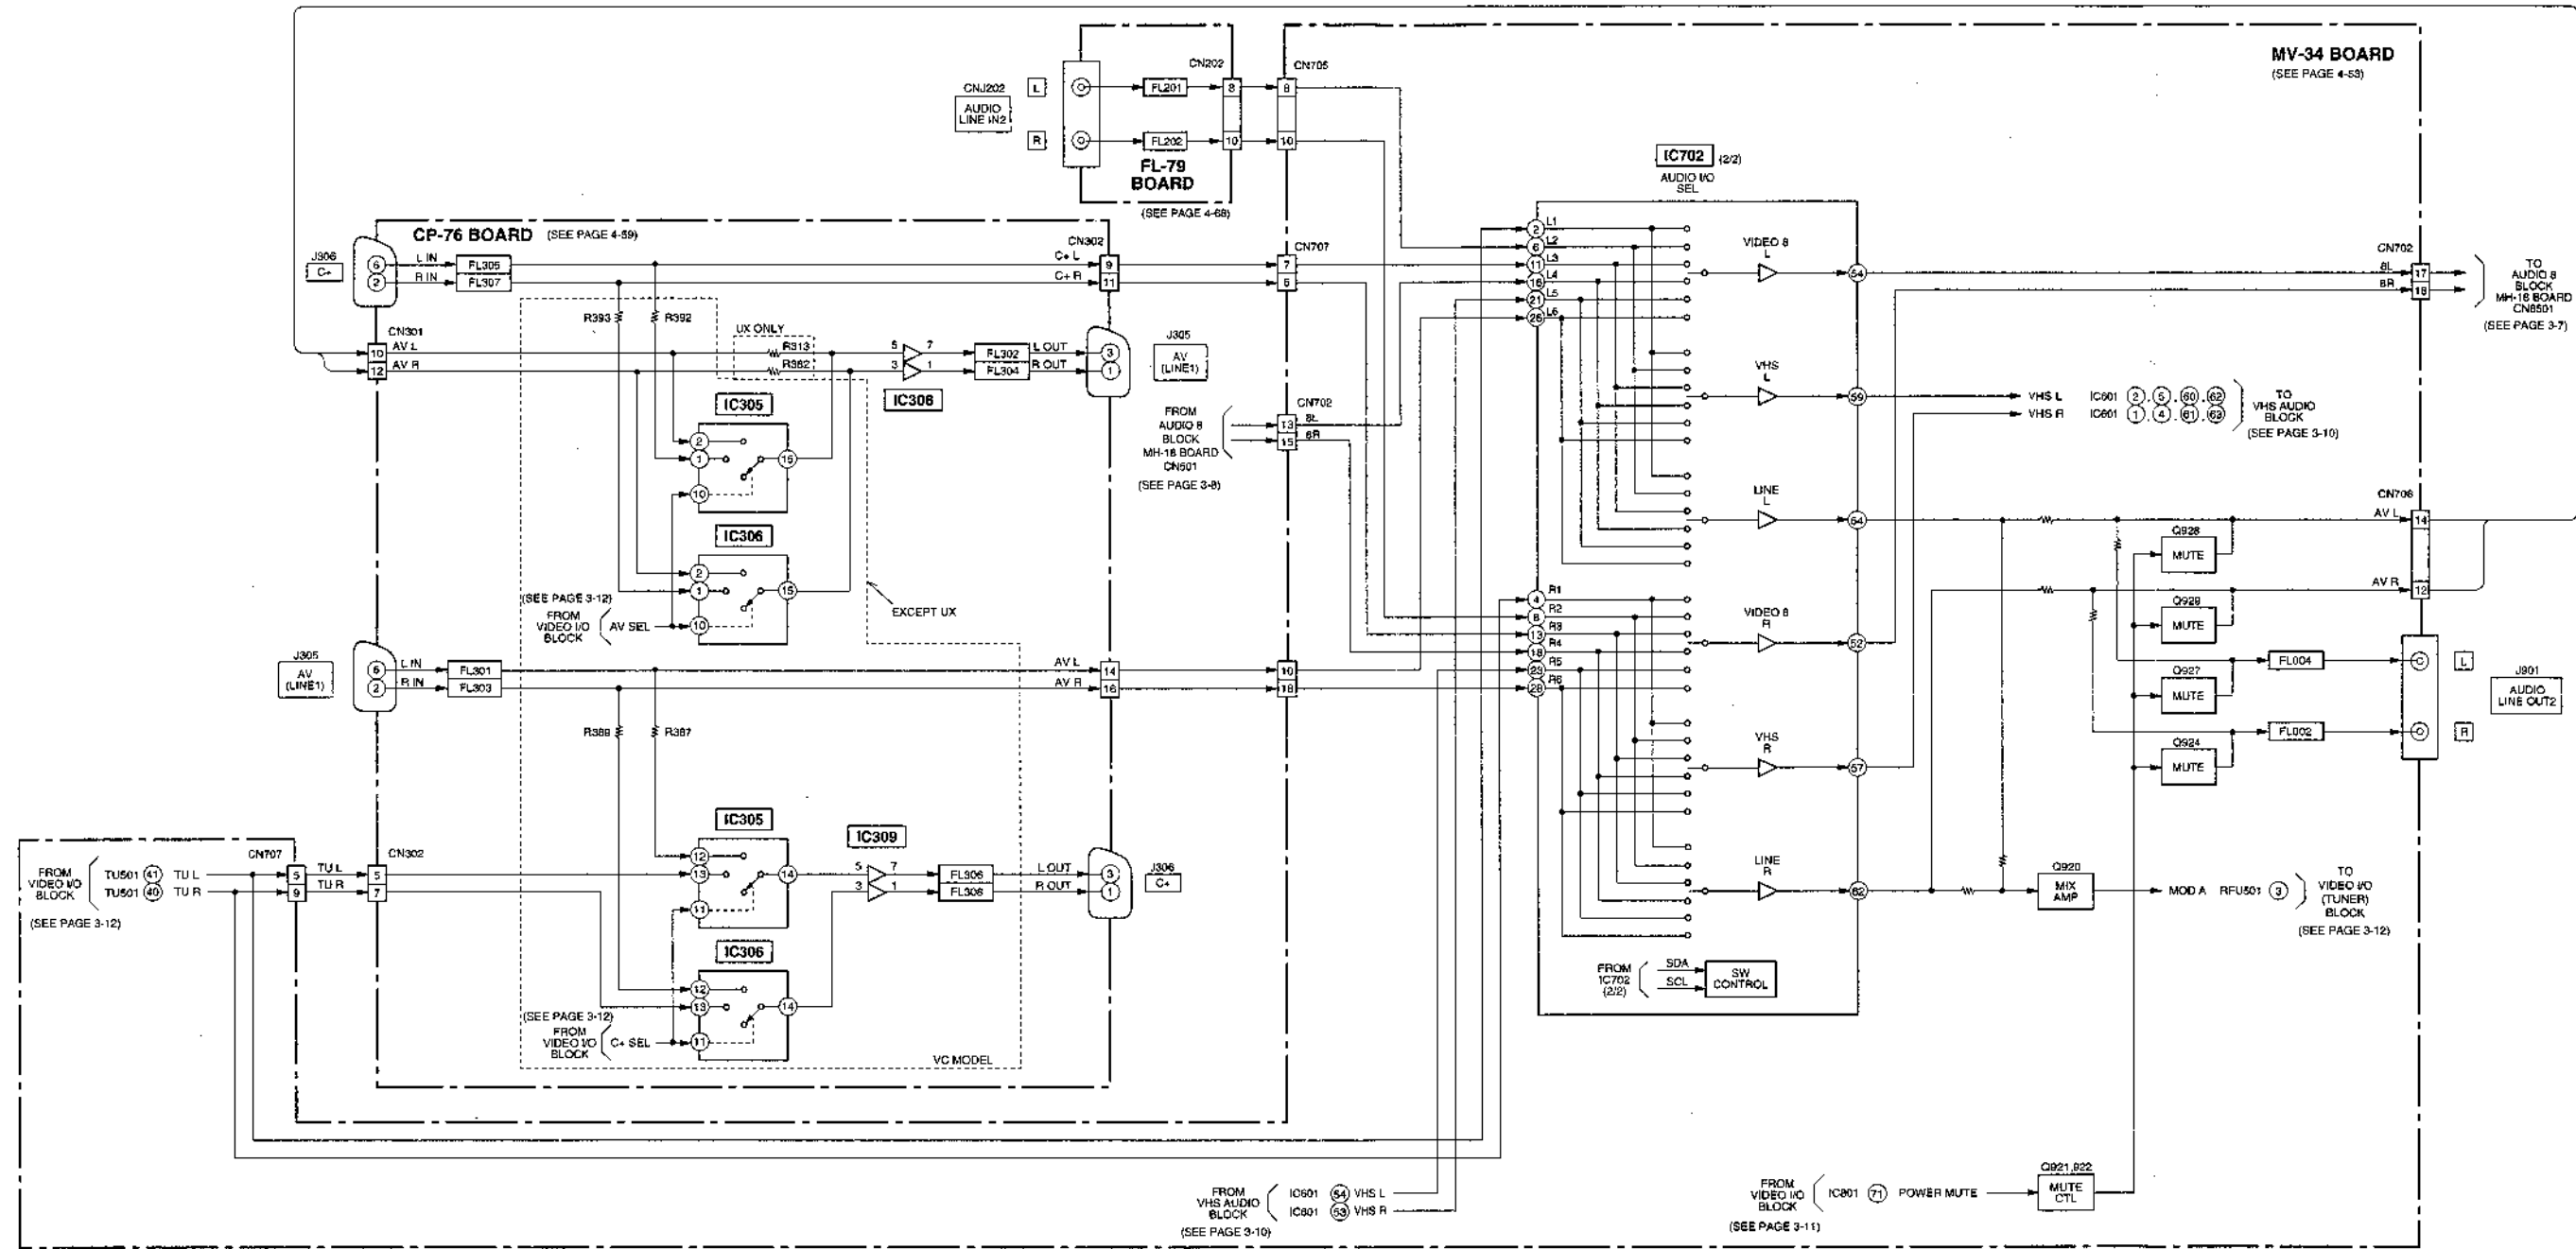


3-8. Video 8 SERVO/SYSTEM CONTROL BLOCK DIAGRAM

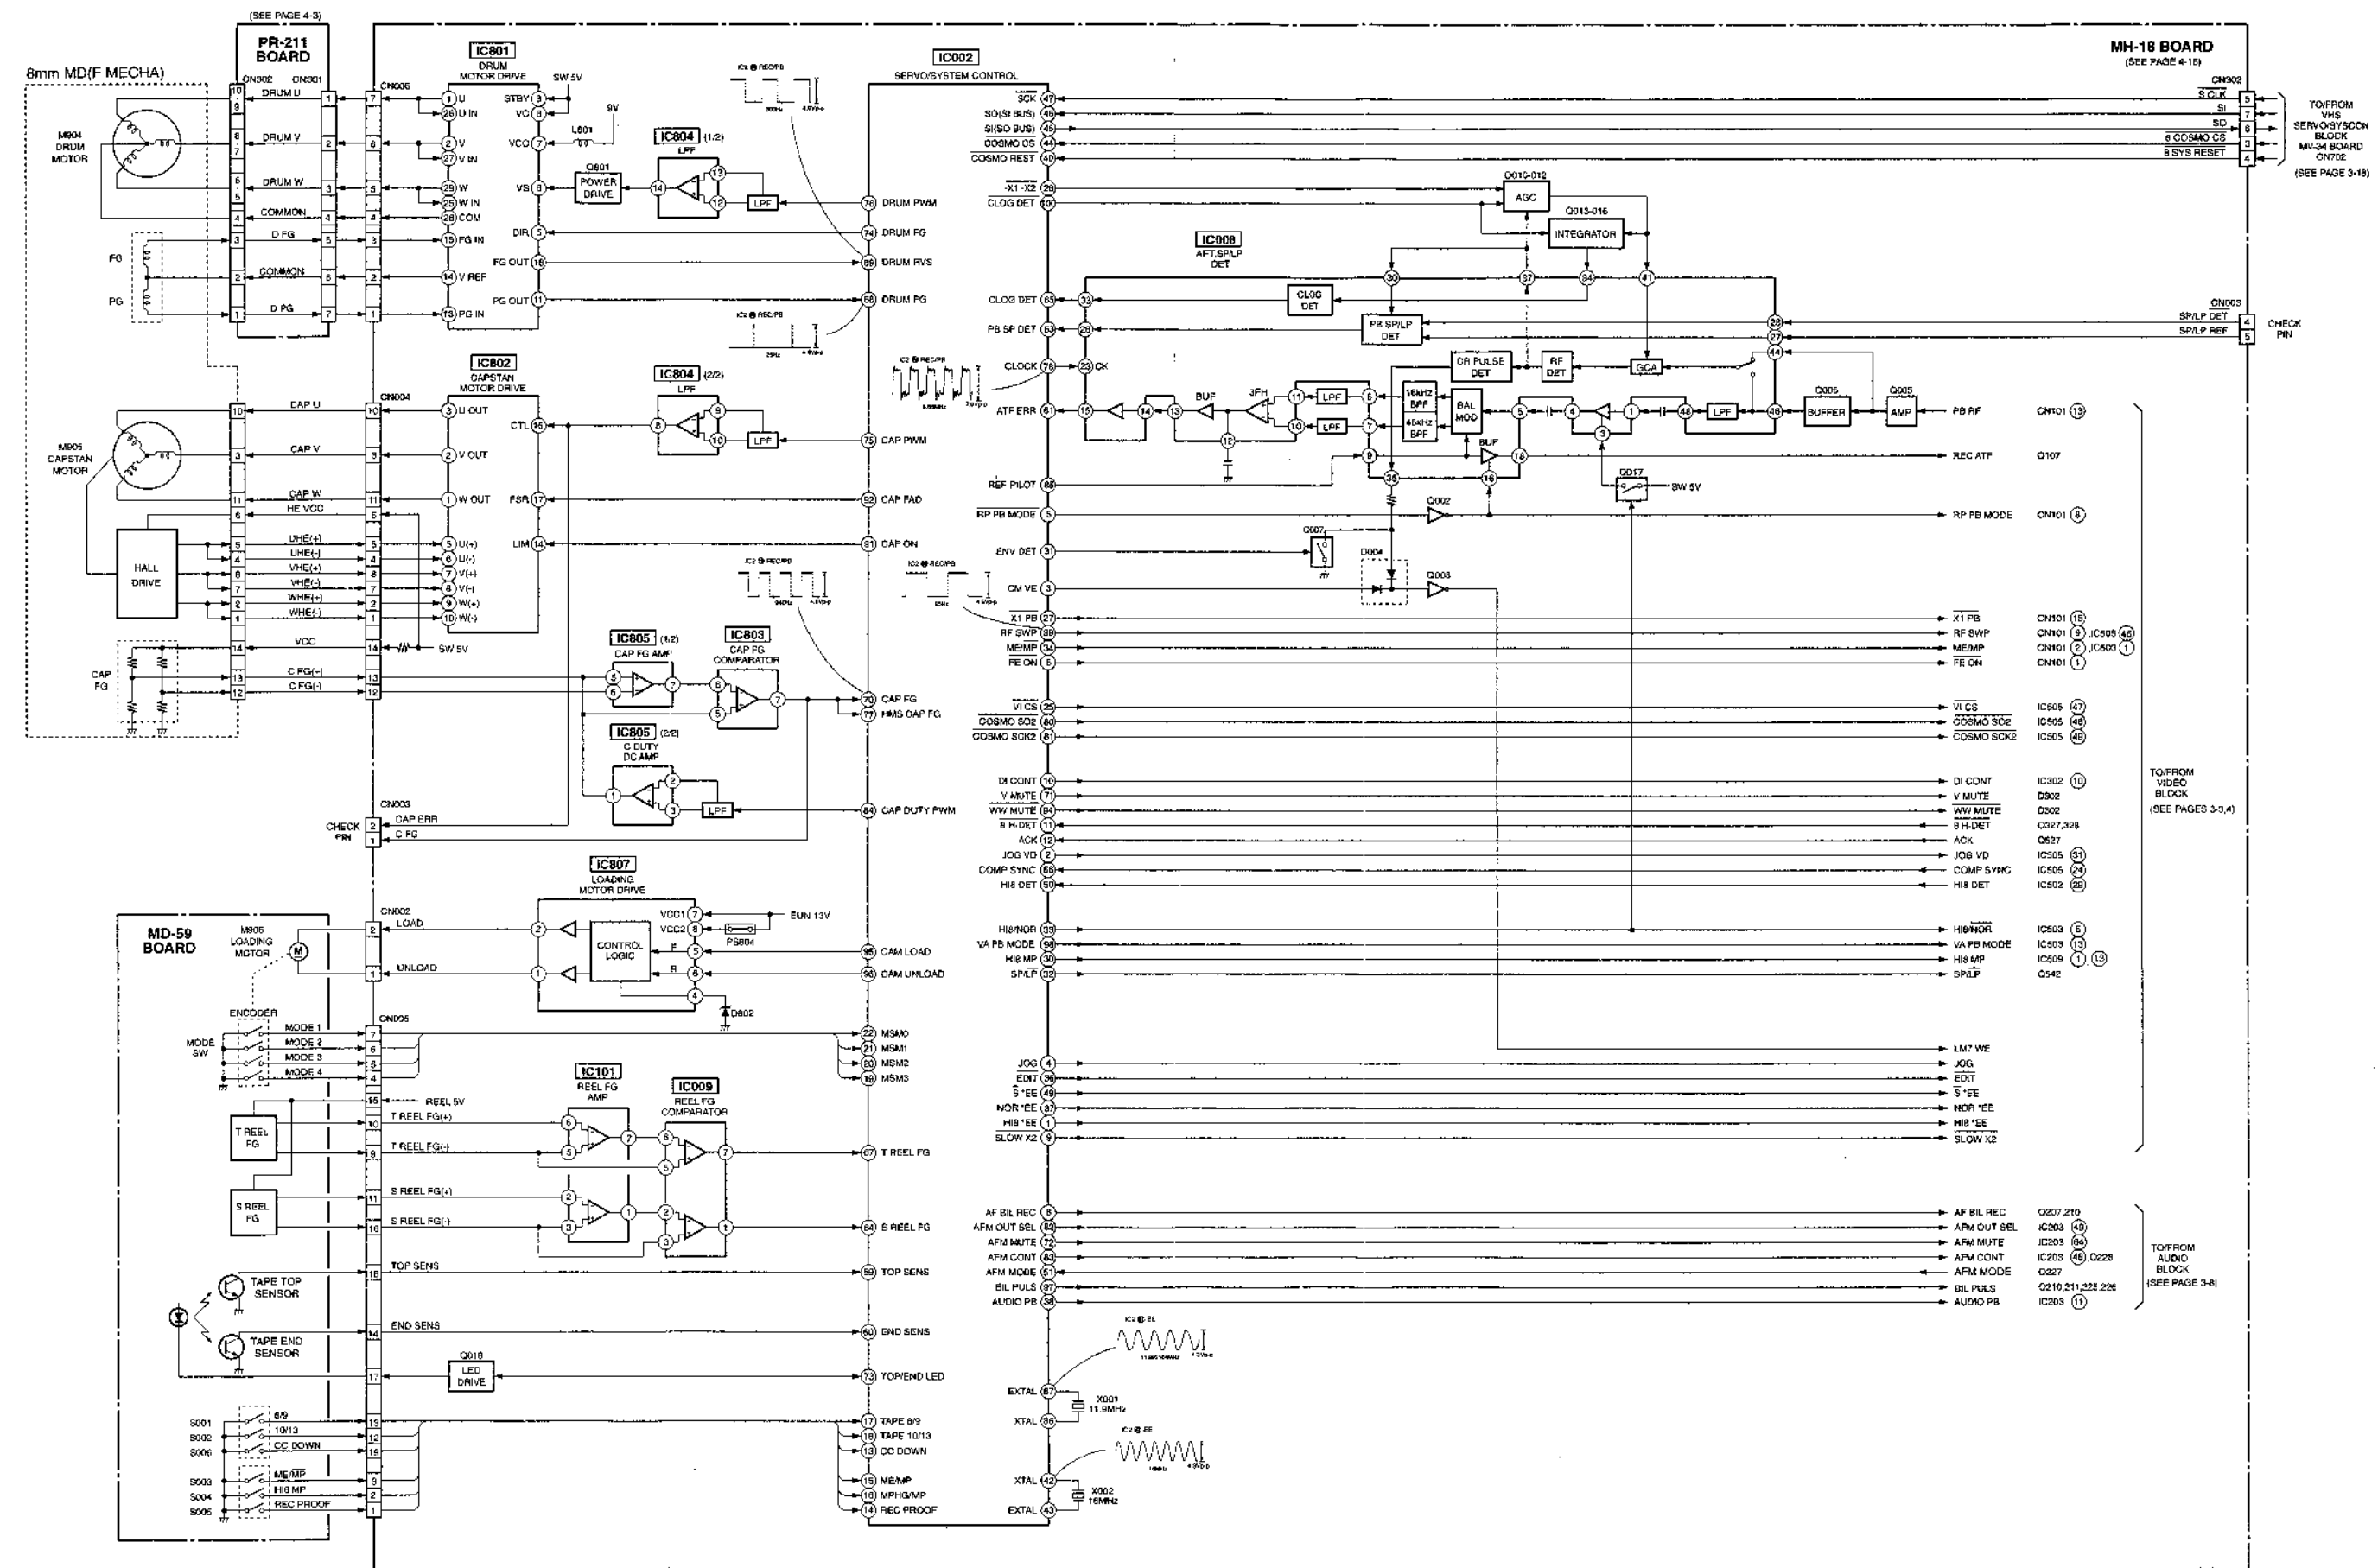


3-9. VHS SERVO/SYSTEM CONTROL BLOCK DIAGRAM

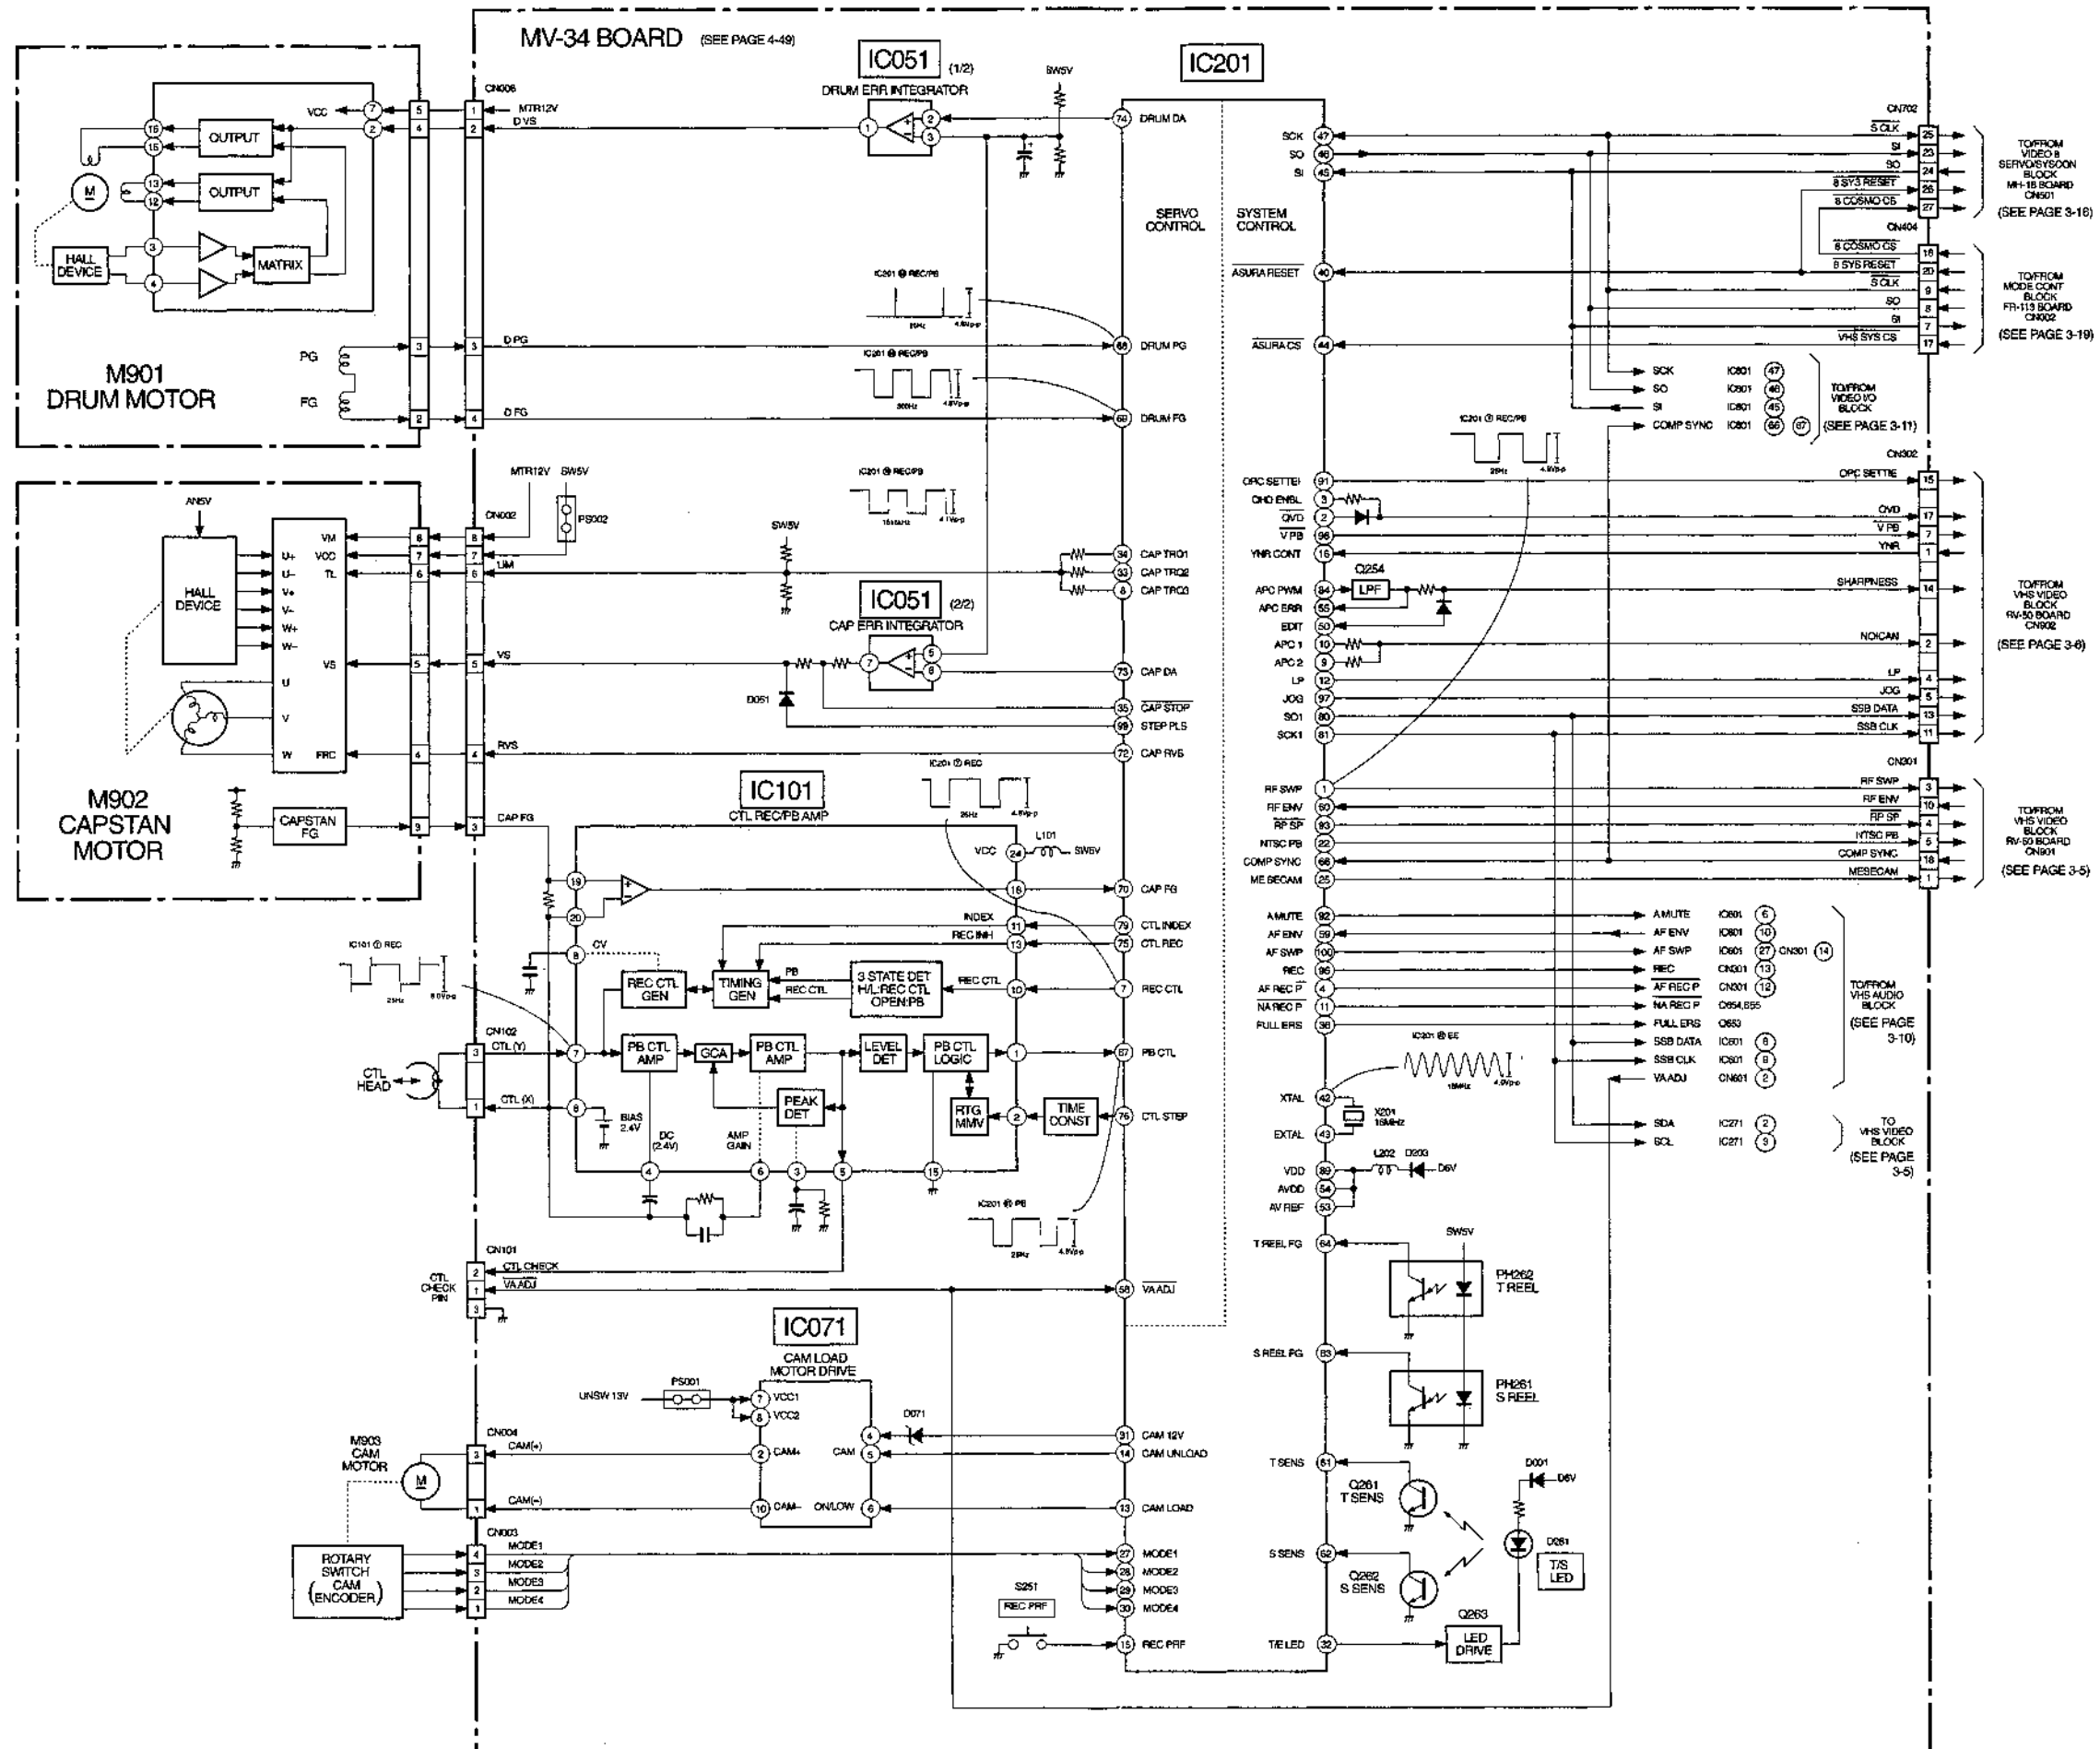

3-10. MODE CONTROL BLOCK DIAGRAM

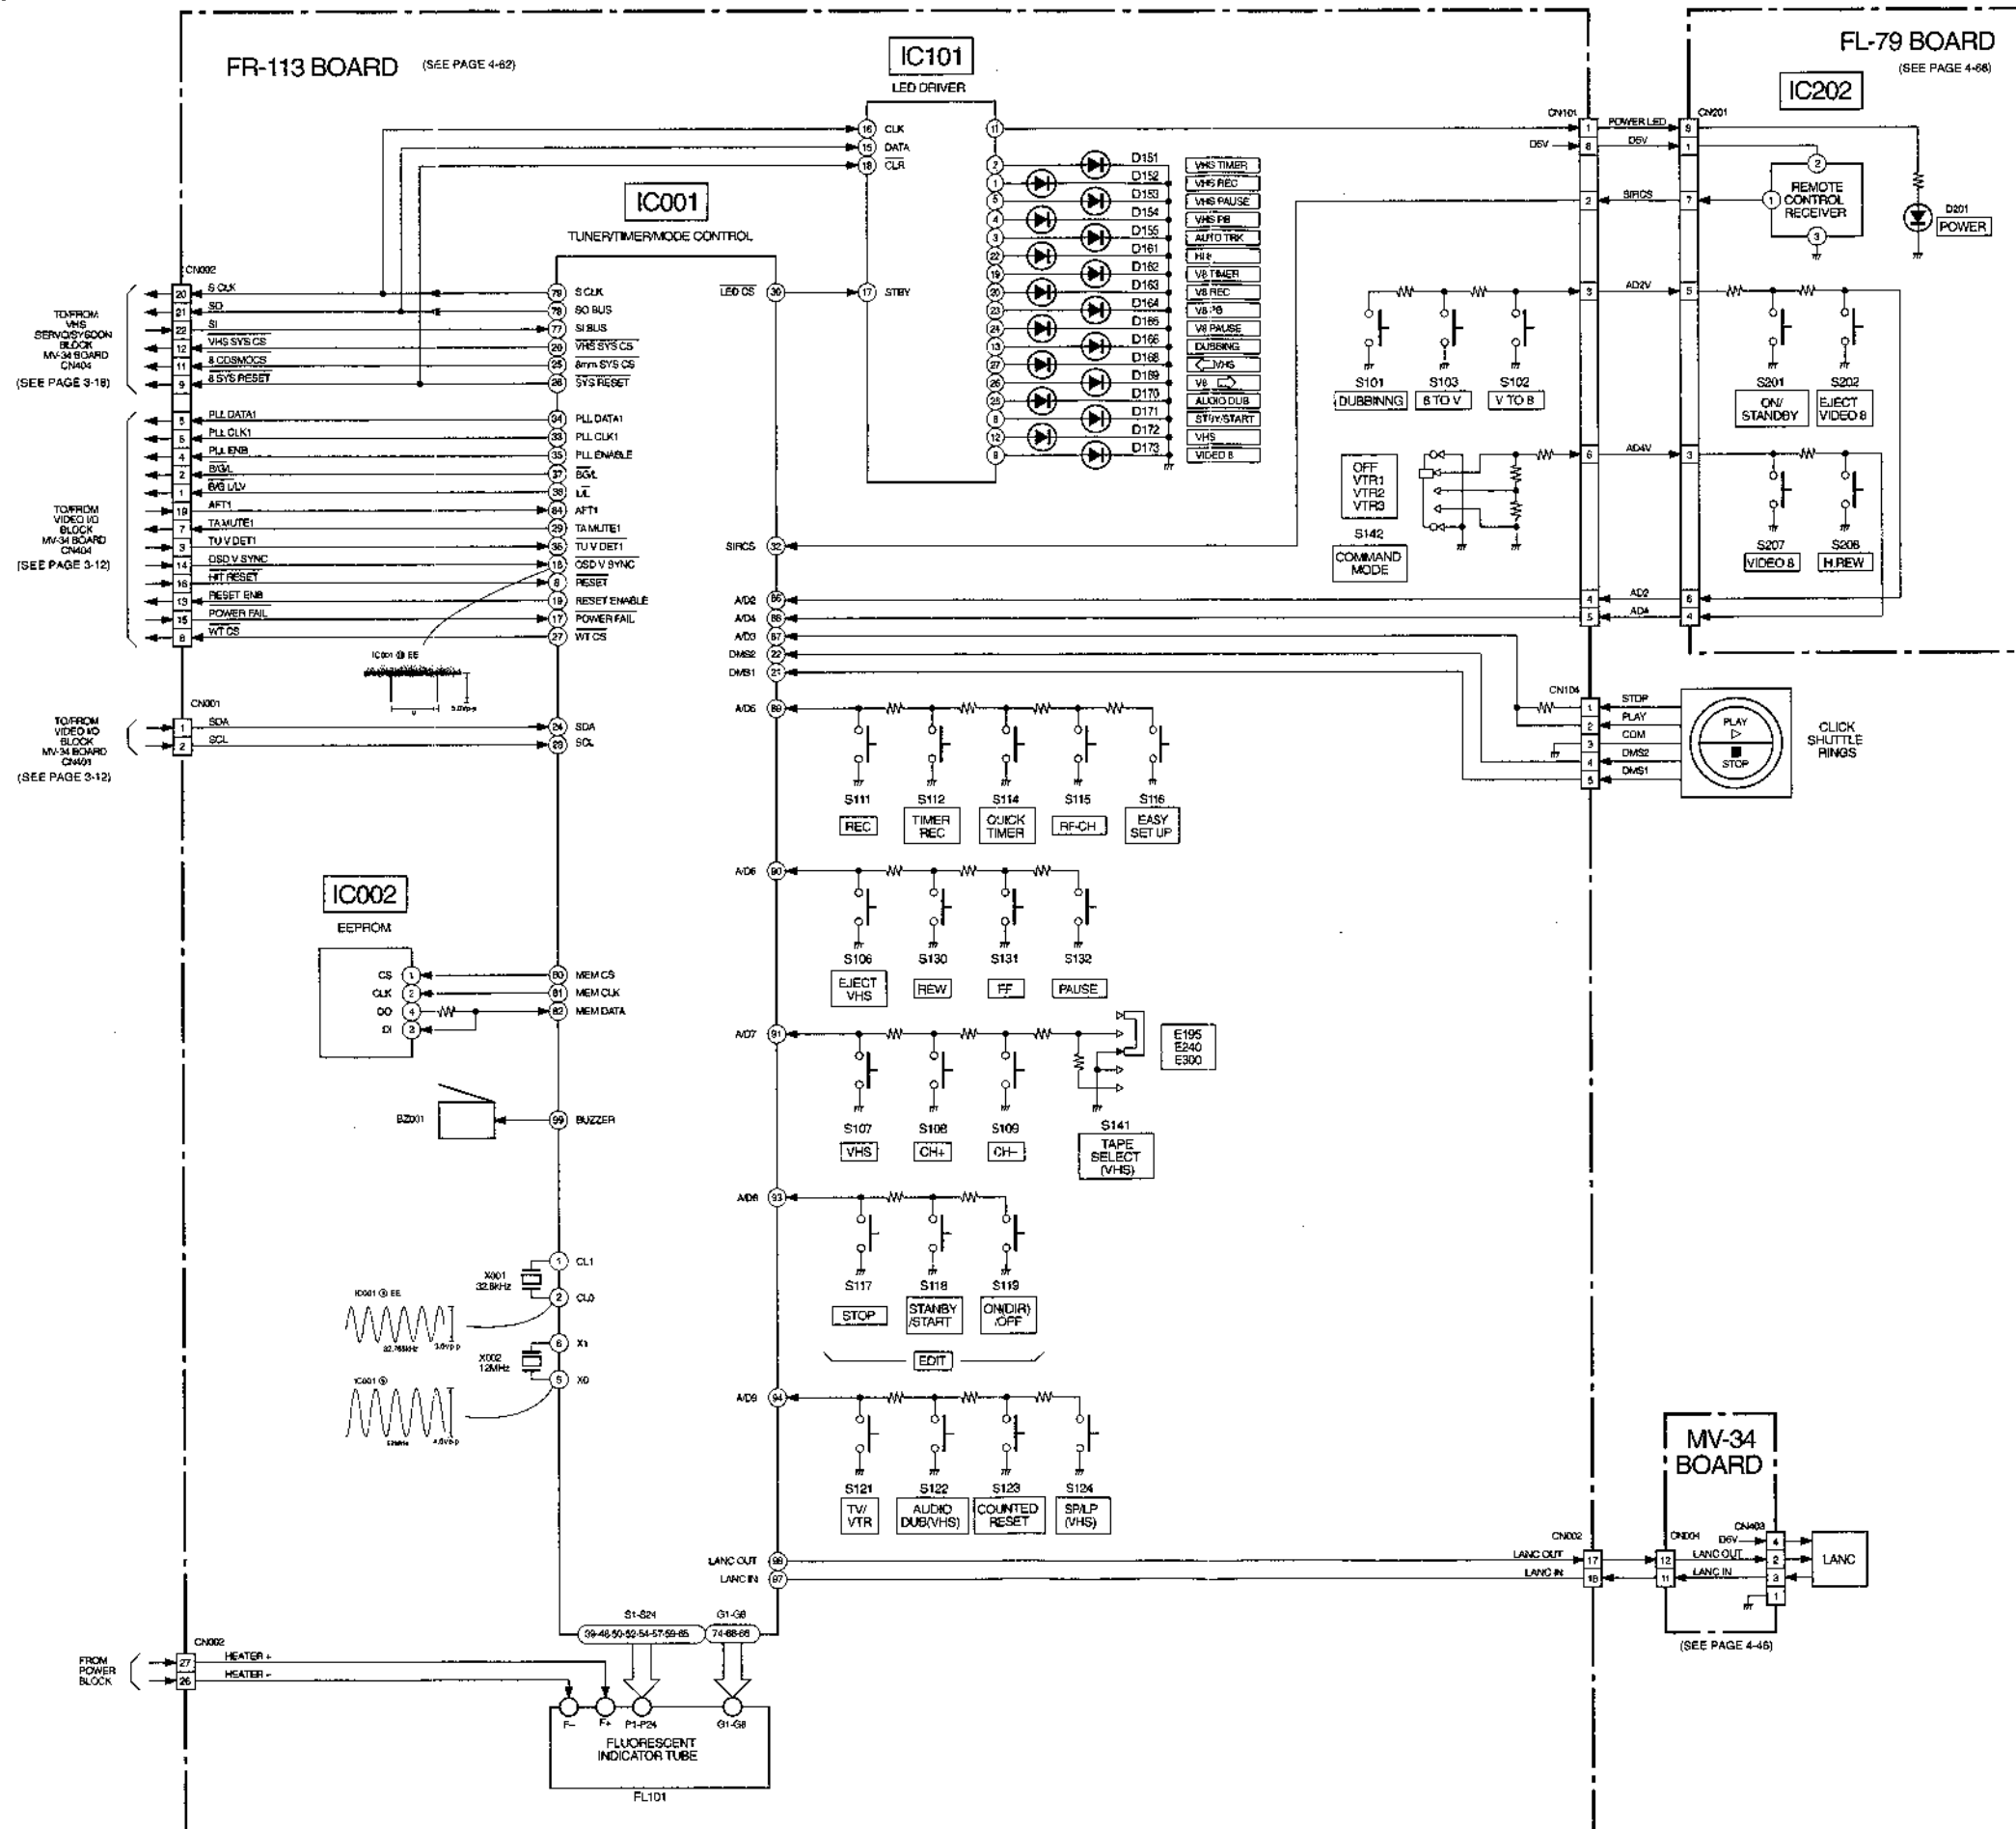


3-11. POWER SUPPLY BLOCK DIAGRAM

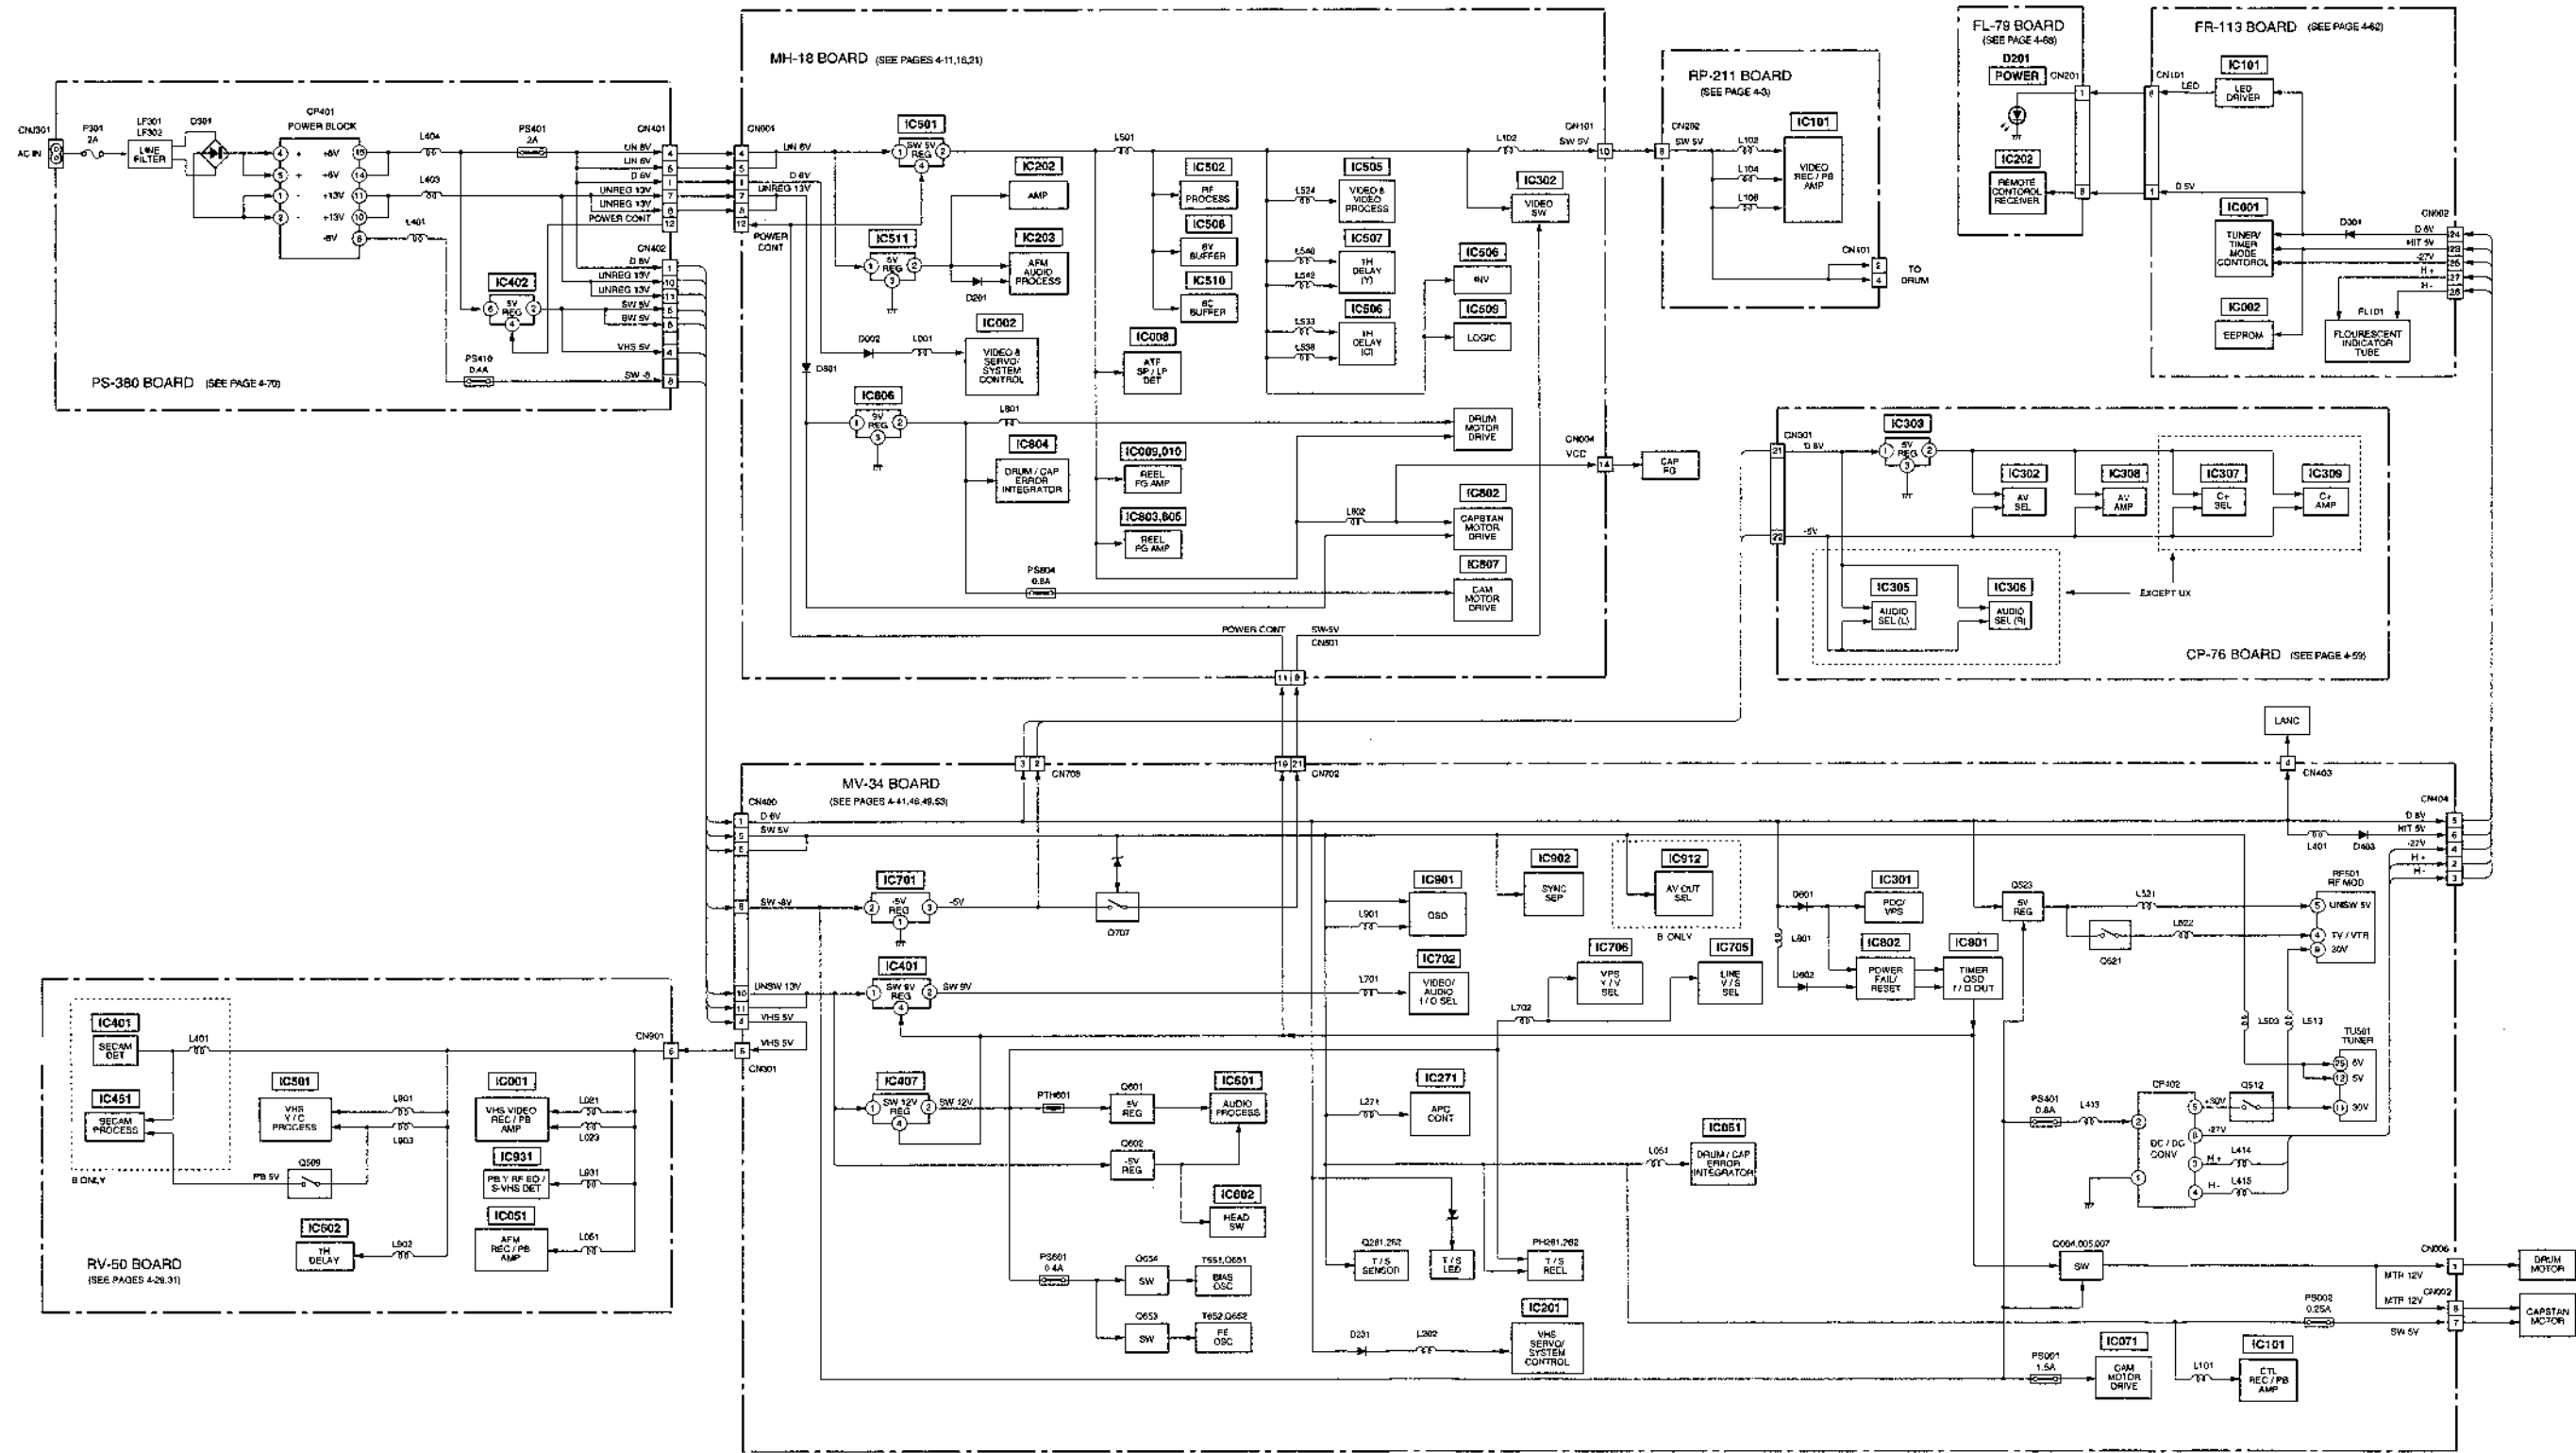


SECTION 4
PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

4-1. FRAME SCHEMATIC DIAGRAM




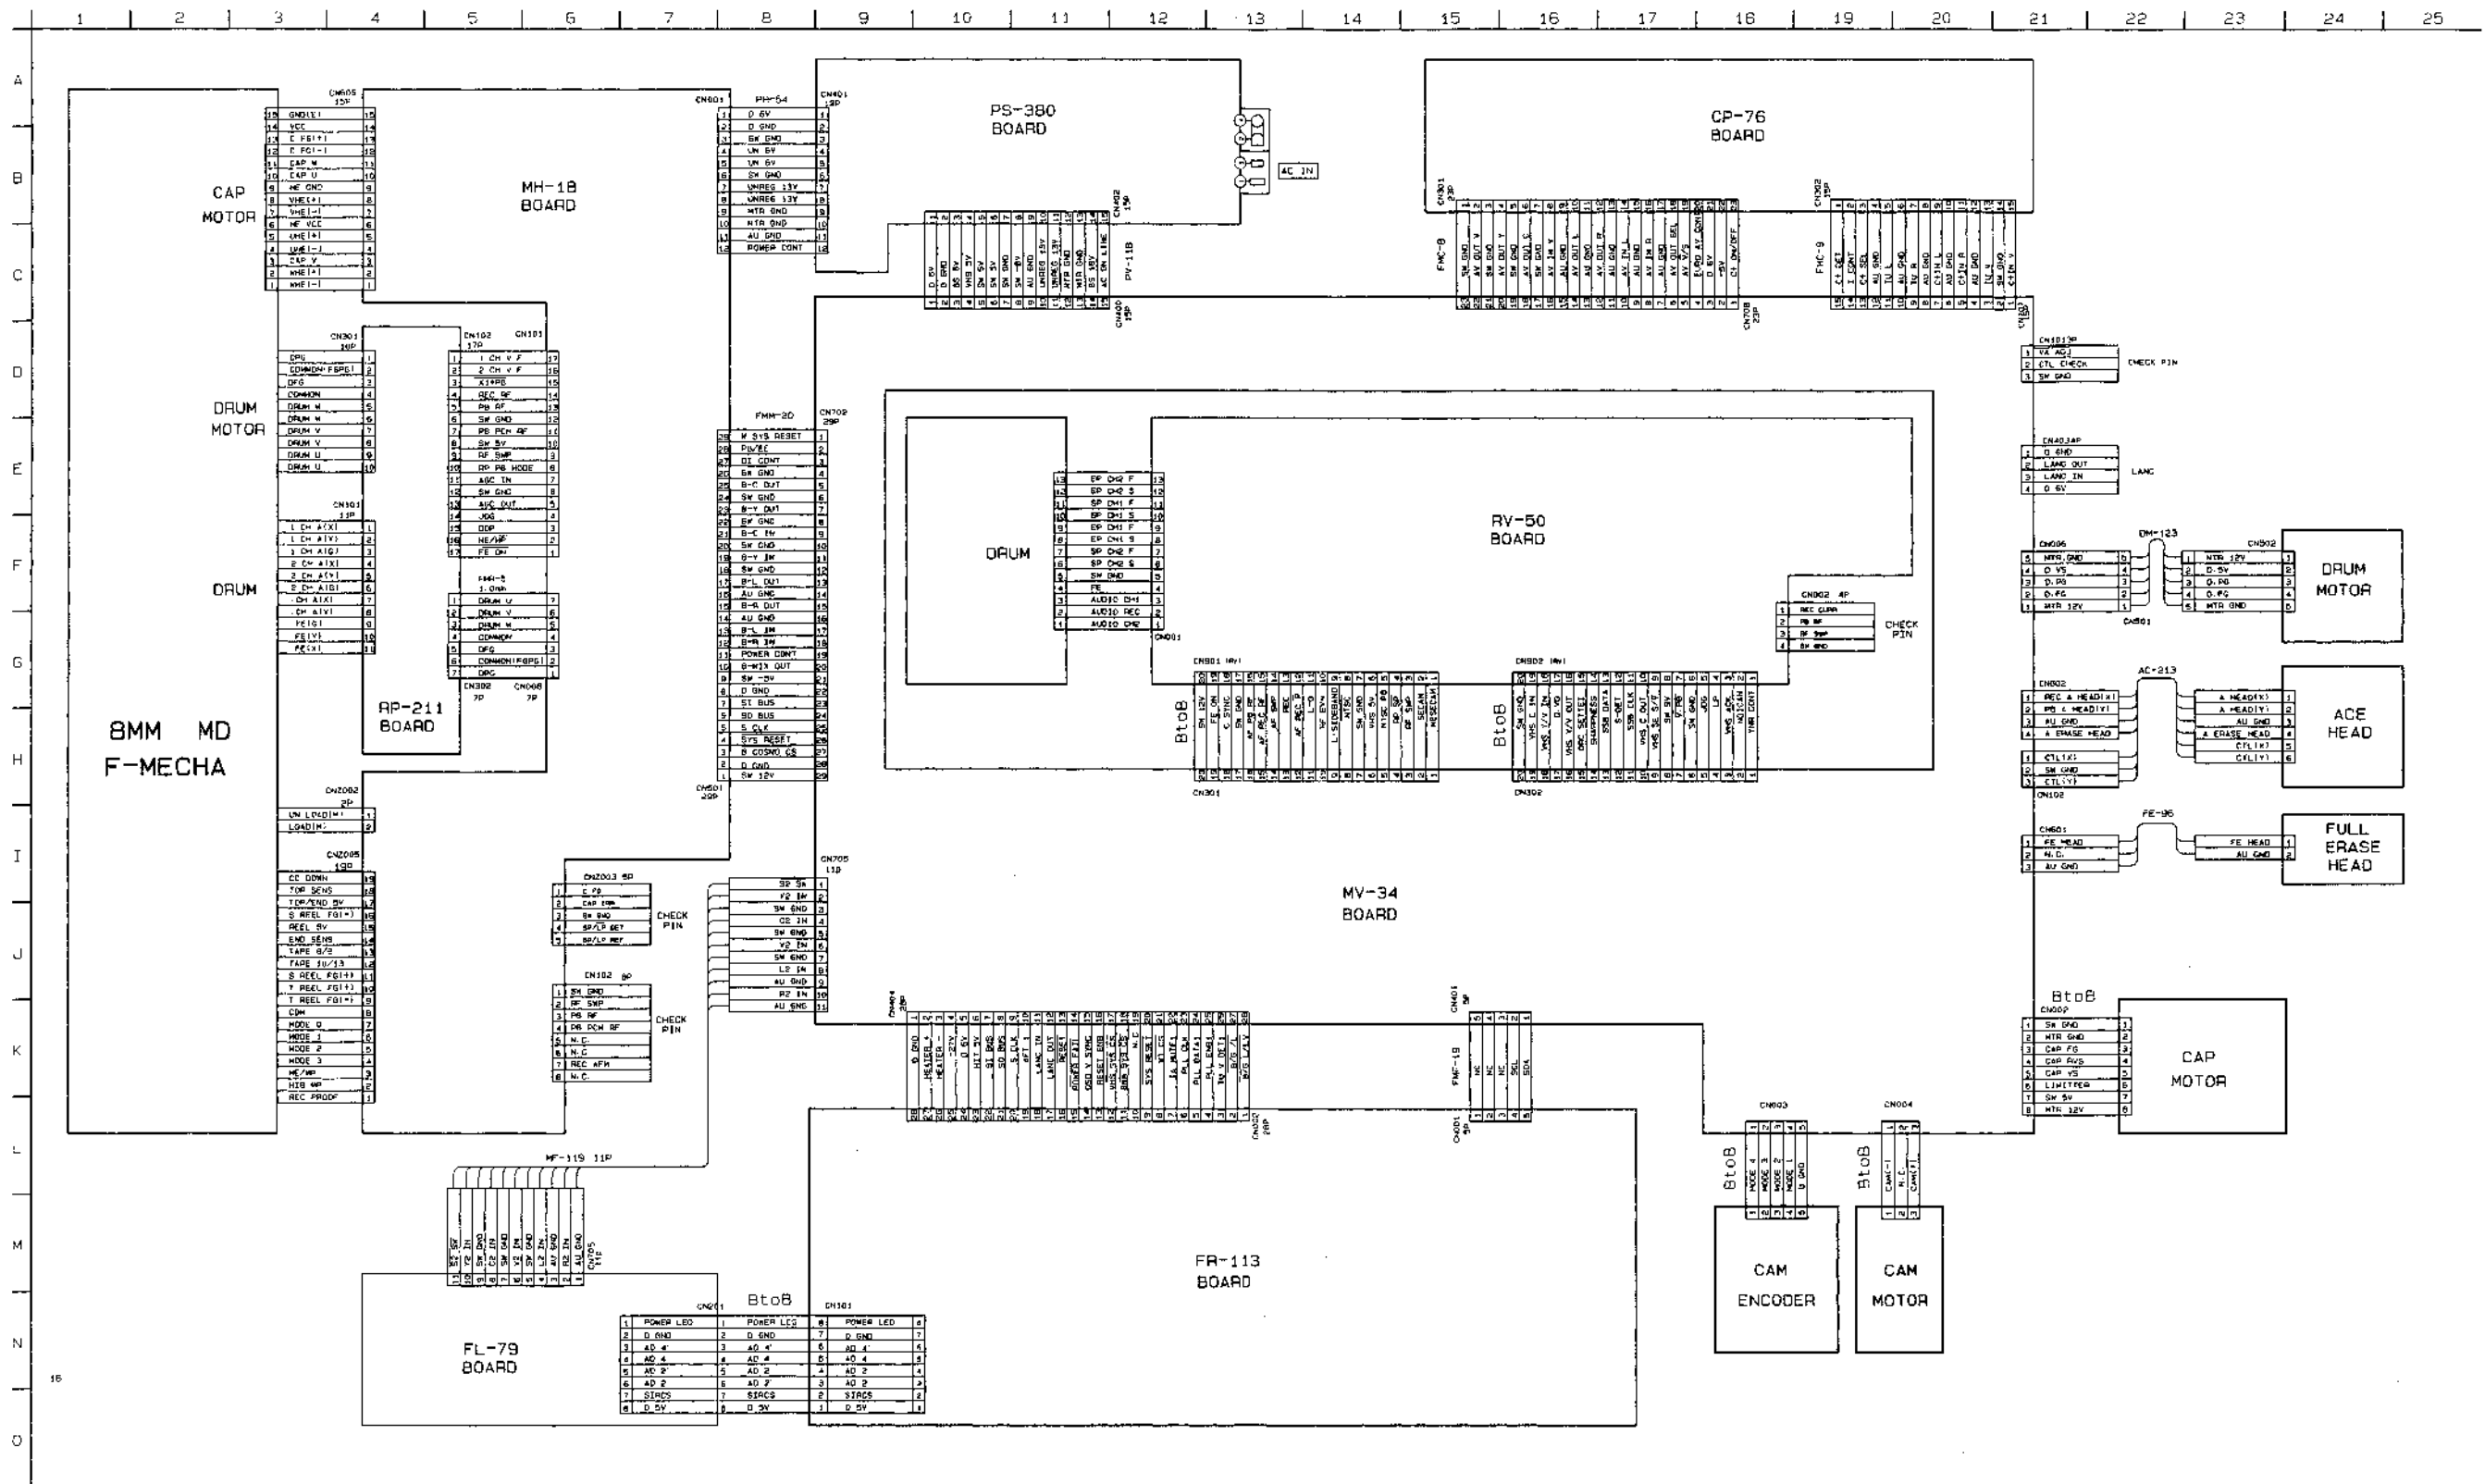


4-2. PRINTED WI
RP-211 (Video 8 REC/
— Ref. No. RP211- Boar

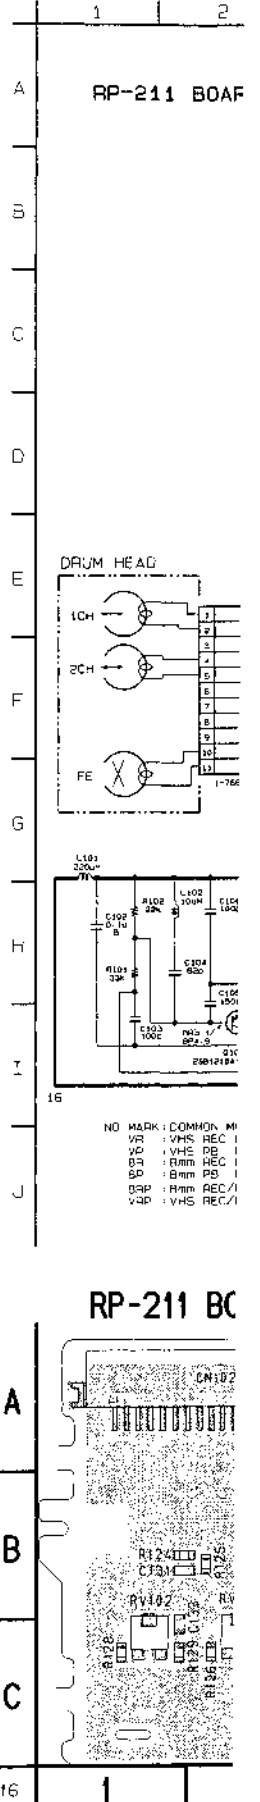


4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS
RP-211 (Video 8 REC/PB AMP) PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM
 — Ref. No. RP211- Board; 1,000 Series —

There are few cases that the part printed on this diagram

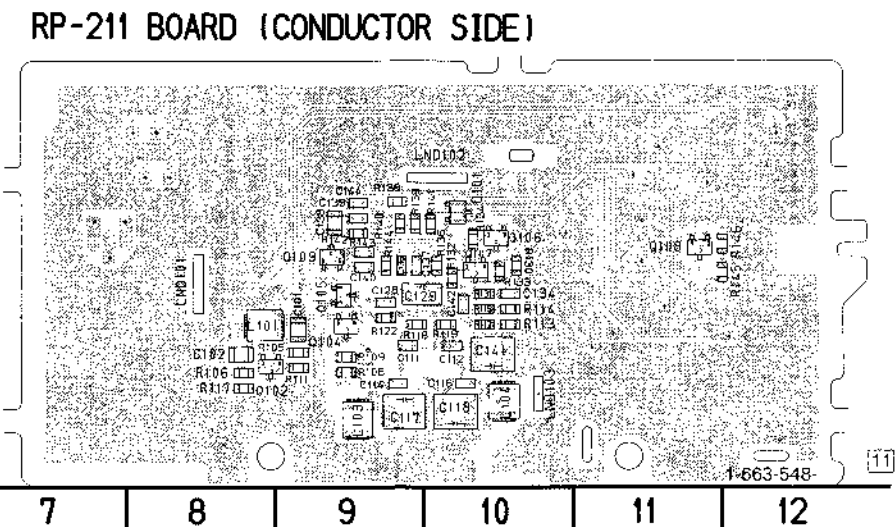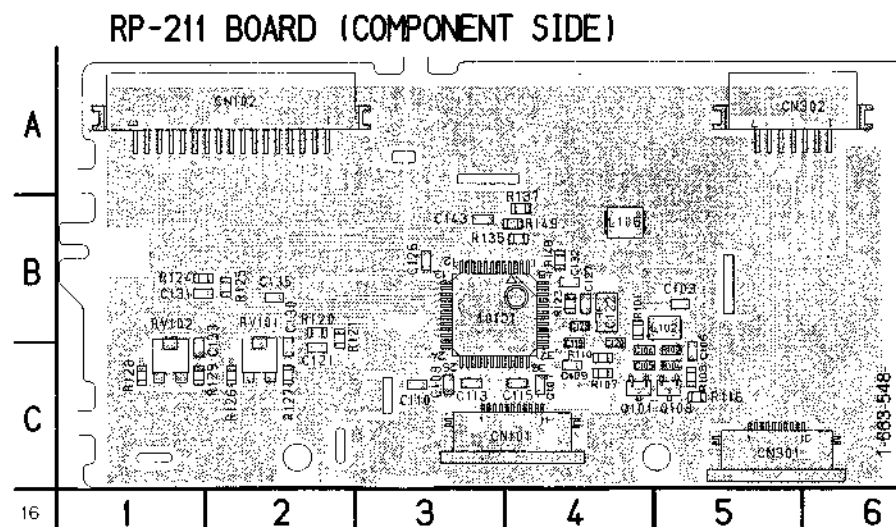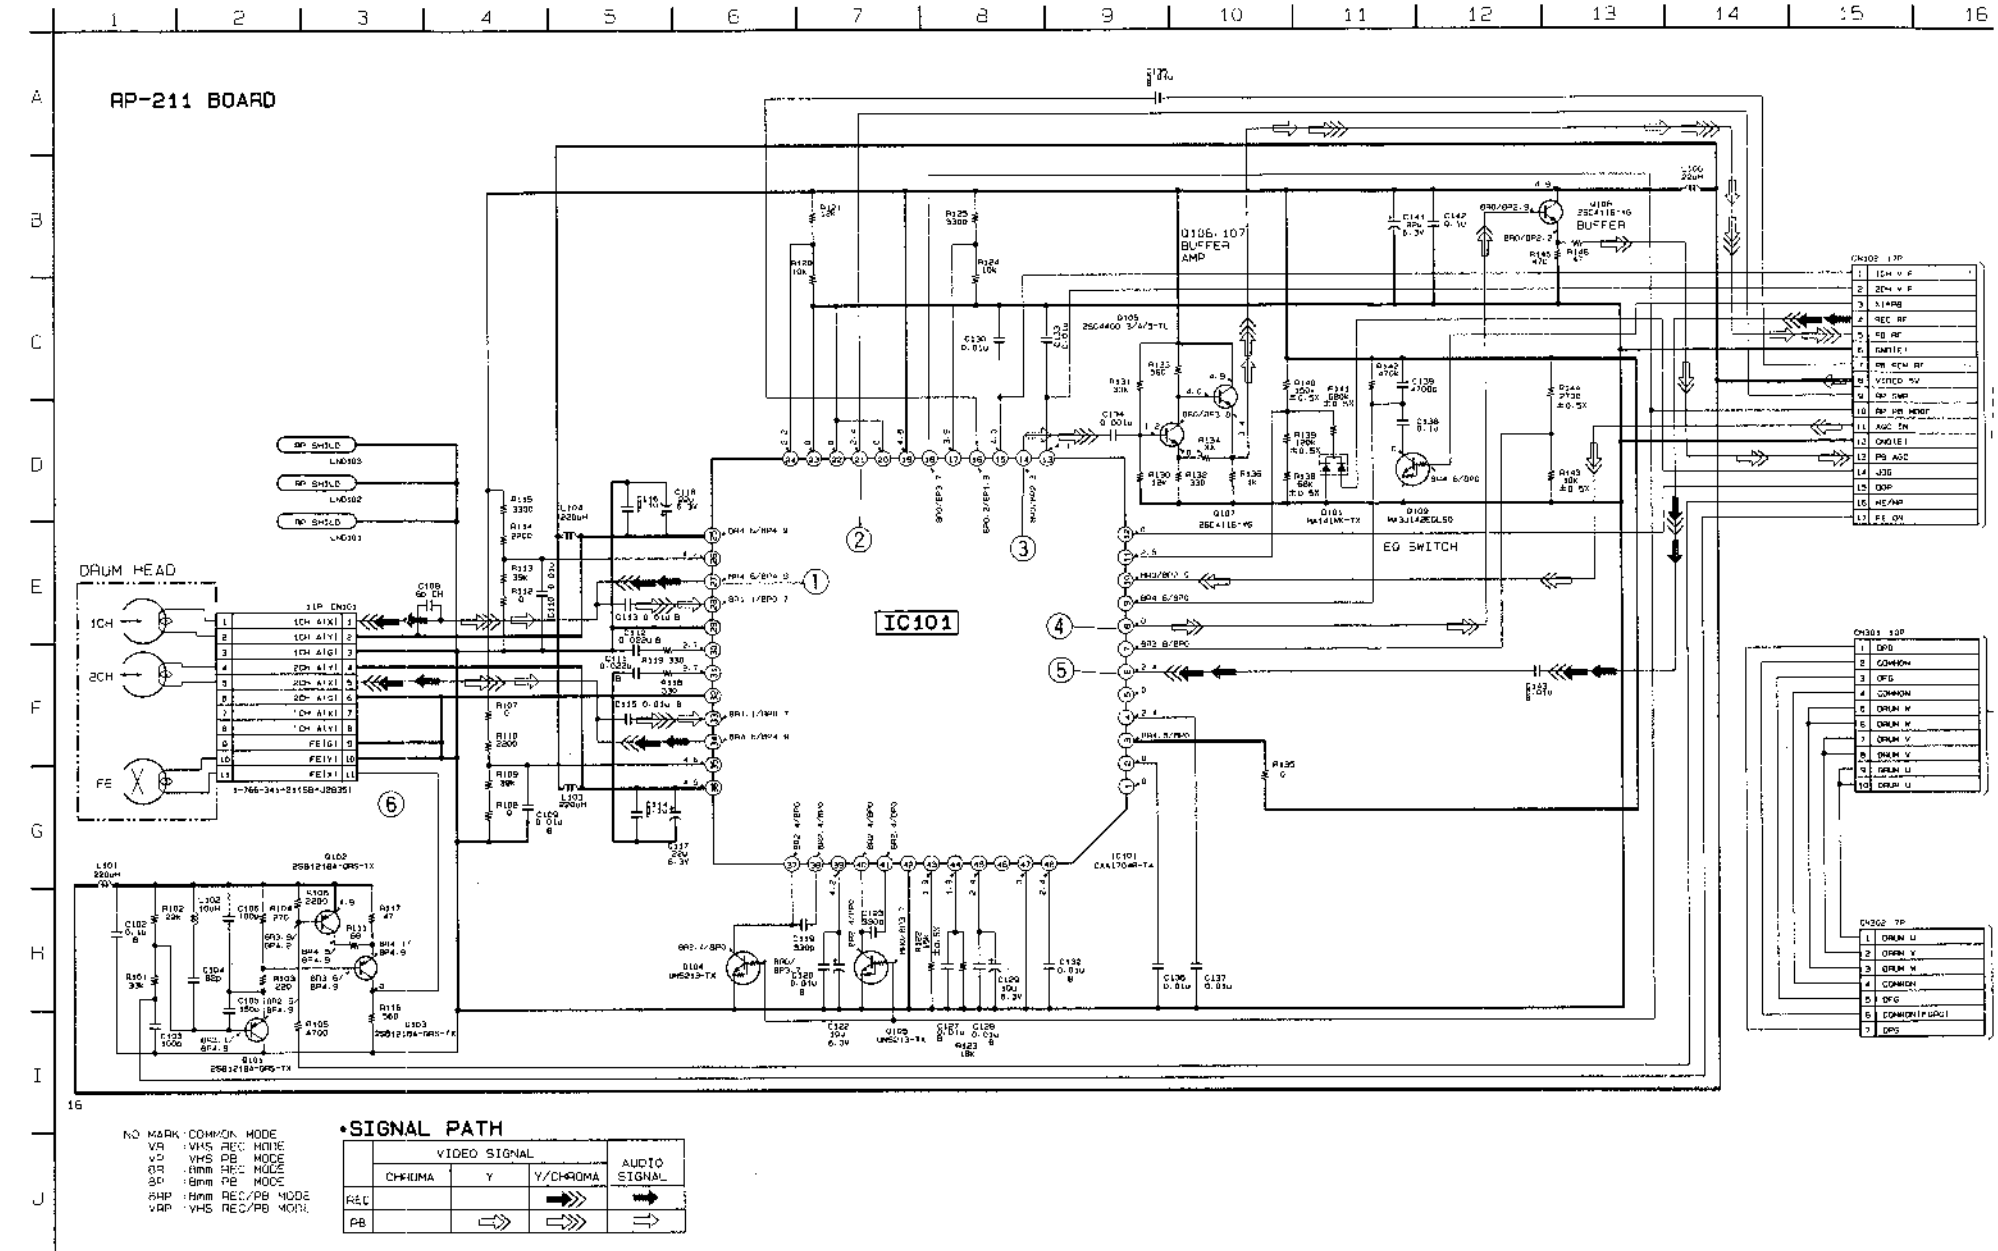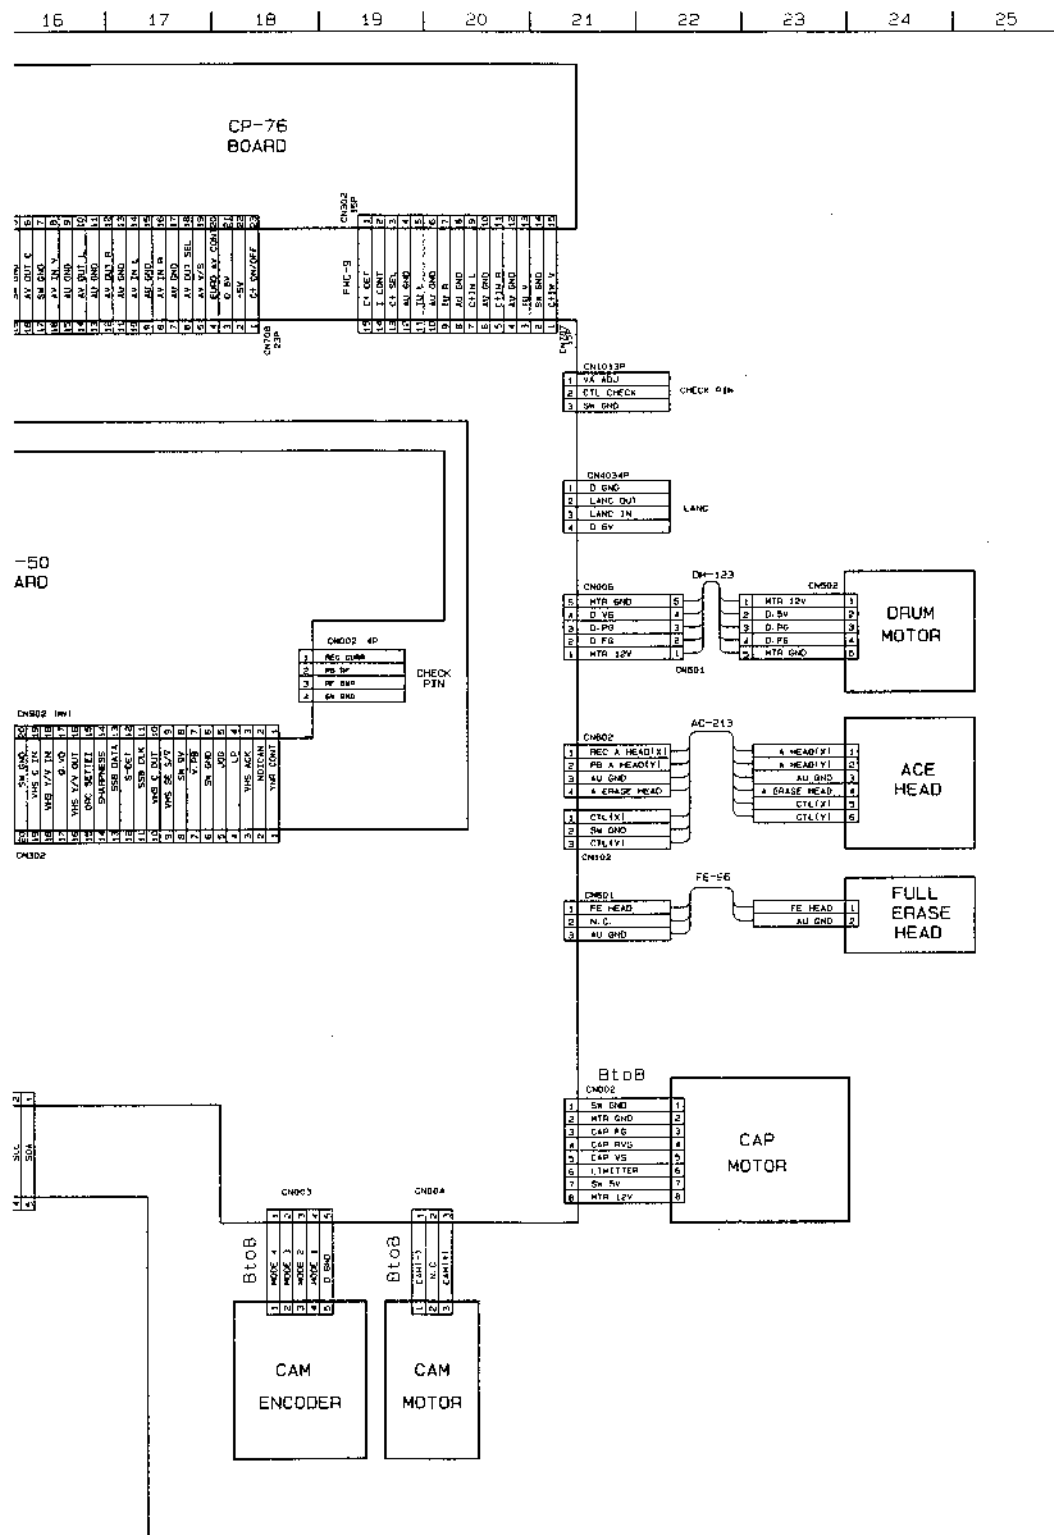


IC DIAGRAMS
SCHEMATIC DIAGRAM


There are few cases that the part printed on this diagram isn't mounted in this model.

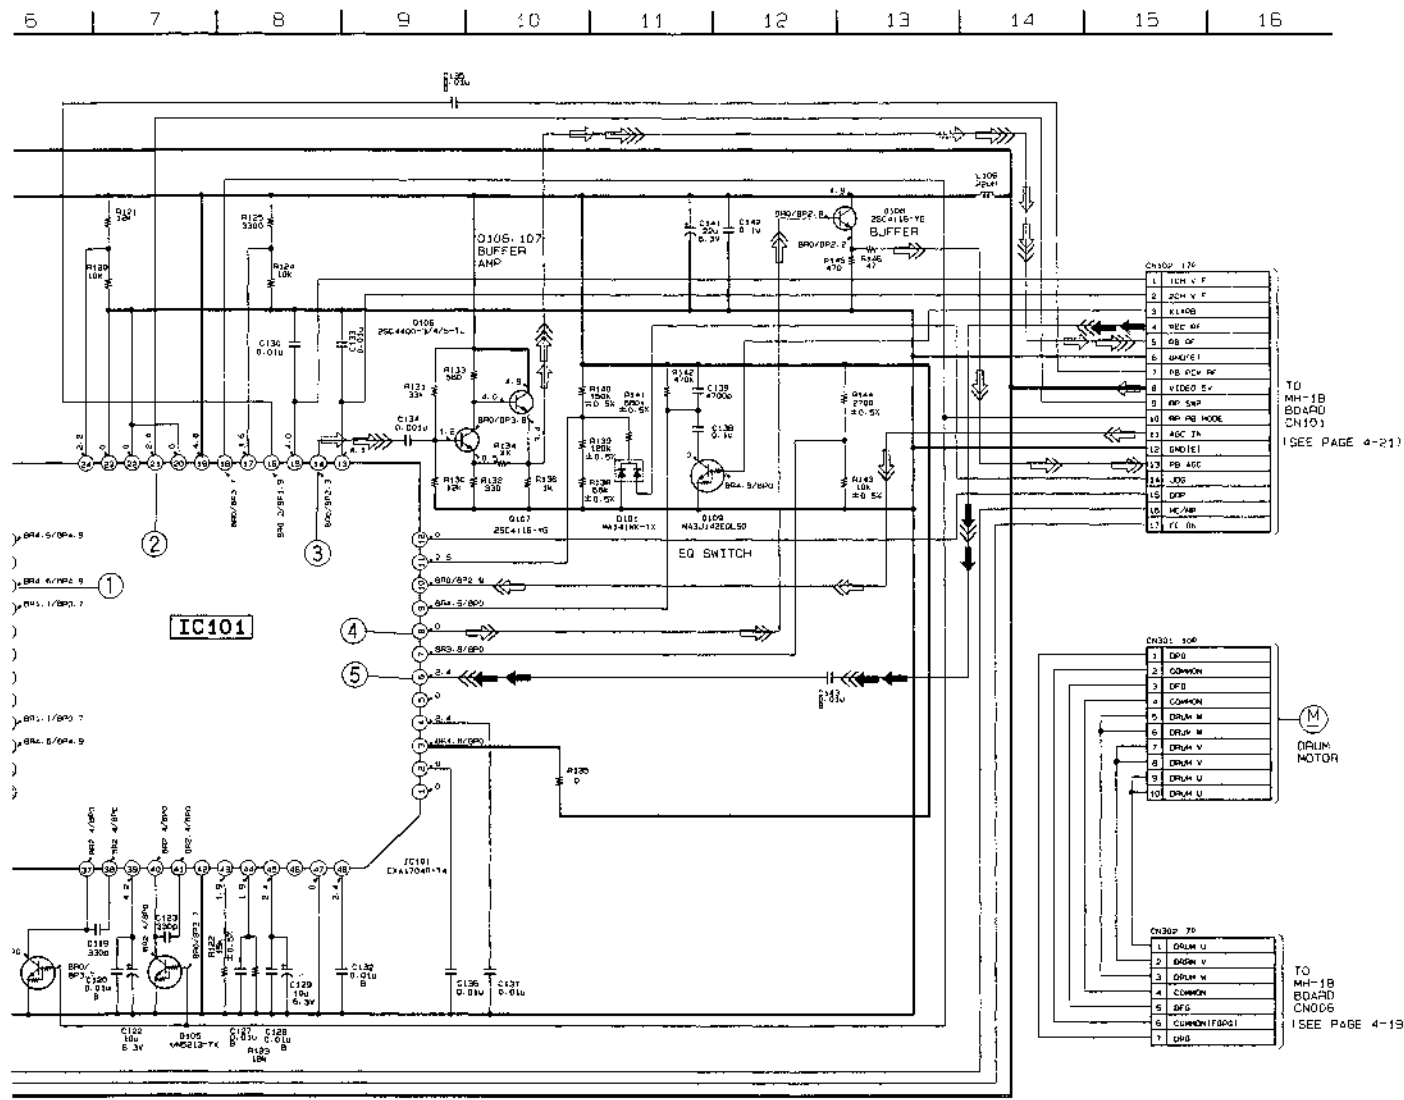

RP-211 BOARD (CONDUCTOR SIDE)

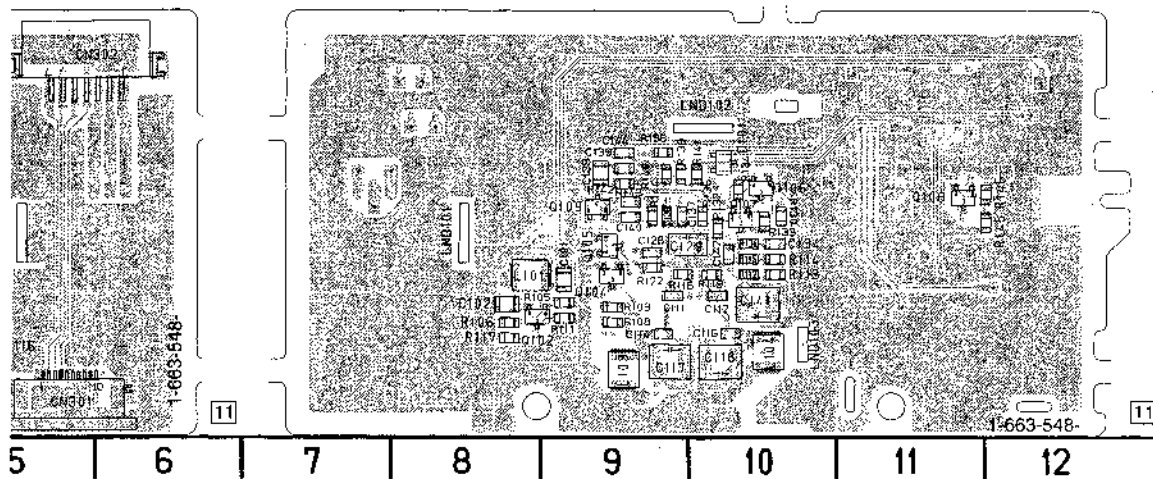

RP-211 BOARD

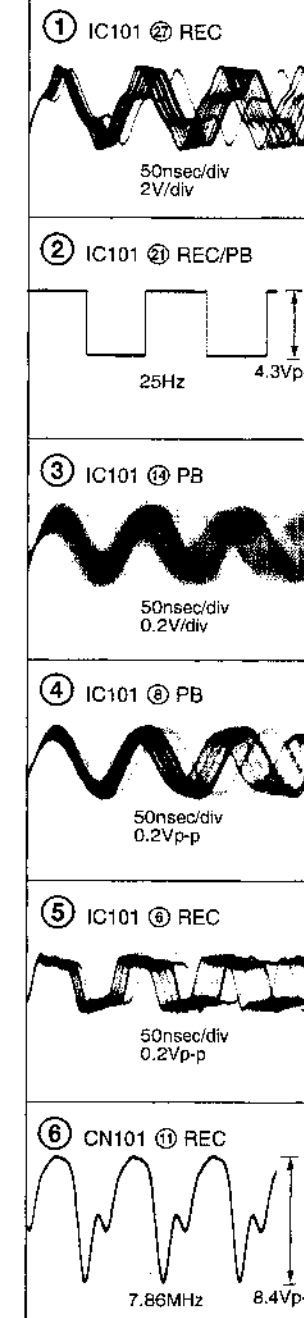

RP-211 BOARD

CN101	C-3
CN102	A-2
CN301	C-5
CN302	A-5
D101	B-10
IC101	B-3
Q101	C-4
Q102	C-8
Q103	C-5
Q104	B-9
Q105	B-9
Q106	B-10
Q107	B-10
Q108	B-11
Q109	B-9

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS. (In addition to this, the necessary note is printed in each block.)


- For printed wiring boards.
- : Pattern from the side which enables seeing.

Caution :
 Pattern face side: Parts on the pattern face side (Conductor Side) seen from the pattern face are indicated.
 Pattern face side: parts on the parts face side seen (Component Side) from the parts face are indicated.

- For schematic diagrams.
- Caution when replacing chip parts. New parts must be attached after removal of chip. Be careful not to heat the minus side of tantalum capacitor, because it is damaged by the heat.
- All resistor are in ohms, 1/4W unless otherwise noted. Chip resistor are 1/10W unless otherwise noted. kΩ: 1000Ω, MΩ, : 1000kΩ.
- All capacitors are in μF unless otherwise noted. pF : μ μF. 50V or less are not indicated except for electrolytics and tantalums.
- : panel designation.
- : internal component.
- : B+Line. *
- : B+Line. *
- : IN/OUT direction of (+,-) B LINE. *
- Circled numbers refer to waveforms. *
- Readings are taken with a PAL color-bar signal input.
- Voltage are dc between ground and measurement points.*
- Readings are taken with a digital multimeter (DC10MΩ).*
- Voltage variations may be noted due to normal production tolerances.*

When indicating parts by reference number, please include the board name.

- * : indicated by the color red.

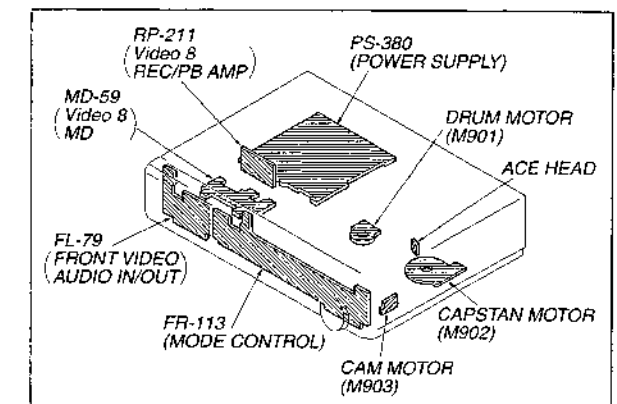

Video 8 REC/PB AMP
RP-211



MH-18 (Video 8 VIDEO, SERVO/SYSTEM CONTROL, AUDIO) PRINTED WIRING BOARD

— Ref. No. MH-18 Board; 2,000 Series —

There are few cases that the part printed on this diagram isn't mounted in this model.


MH-18 BOARD

CN001	E-32	Q014	H-2	Q522	D-28
CN002	J-32	Q015	G-3	Q523	D-29
CN003	J-32	Q016	G-39	Q524	H-11
CN004	J-35	Q017	E-3	Q525	D-12
CN005	J-39	Q018	I-38	Q526	G-11
CN006	G-10	Q101	B-8	Q527	H-12
CN101	C-10	Q102	C-7	Q528	D-13
CN102	B-35	Q103	C-8	Q530	G-13
CN501	J-24	Q104	C-8	Q532	F-28
		Q106	C-9	Q533	H-29
		Q107	B-8	Q534	F-13
D002	I-40	Q201	I-19	Q535	H-29
D004	H-3	Q202	I-19	Q536	F-14
D005	H-39	Q203	J-19	Q537	F-28
D201	H-19	Q207	H-23	Q538	C-13
D202	H-24	Q208	H-17	Q539	E-11
D301	G-25	Q209	H-17	Q540	I-14
D302	H-1	Q210	H-16	Q541	B-27
D502	G-28	Q211	H-16	Q542	H-27
D801	G-35	Q220	H-24	Q543	D-27
D802	H-35	Q221	I-25	Q544	I-27
		Q222	H-24	Q545	I-12
IC002	F-38	Q223	H-25	Q546	C-27
IC008	F-3	Q224	I-25	Q547	I-29
IC009	I-2	Q225	H-24	Q548	C-14
IC010	I-3	Q226	I-25	Q549	B-27
IC202	I-16	Q227	I-24	Q550	D-15
IC203	H-18	Q228	H-17	Q552	H-13
IC302	E-17	Q301	E-24	Q554	H-12
IC501	I-33	Q302	F-24	Q555	B-27
IC502	B-11	Q303	C-16	Q556	J-27
IC503	D-13	Q305	B-15	Q557	H-14
IC505	F-12	Q327	G-25	Q558	D-14
IC506	D-16	Q328	F-26	Q559	B-14
IC507	E-16	Q410	D-19	Q560	H-30
IC508	H-13	Q411	E-23	Q561	I-29
IC509	H-15	Q501	B-13	Q562	B-27
IC510	G-15	Q502	E-31	Q563	B-14
IC511	H-21	Q503	B-28	Q564	E-14
IC801	I-4	Q504	G-30	Q565	H-13
IC802	I-35	Q505	B-29	Q567	I-13
IC803	I-5	Q506	C-11	Q569	B-14
IC804	G-4	Q507	E-31	Q570	I-30
IC805	J-5	Q508	G-11	Q571	J-29
IC806	F-6	Q509	B-28	Q572	D-27
IC807	H-35	Q511	E-11	Q573	J-29
		Q512	E-31	Q574	G-15
Q002	D-2	Q513	A-13	Q575	G-15
Q005	C-4	Q514	F-31	Q576	G-15
Q006	C-4	Q516	D-11	Q577	G-15
Q007	H-38	Q517	F-31	Q578	G-26
Q008	H-3	Q518	A-19	Q579	H-14
Q010	H-39	Q519	F-11	Q801	F-36
Q011	H-2	Q520	D-31		
Q012	H-38	Q521	F-29		
Q013	H-39				

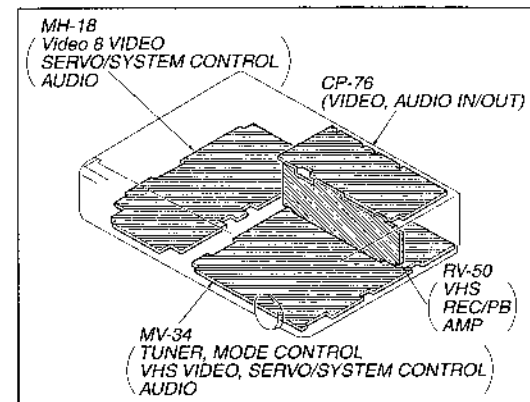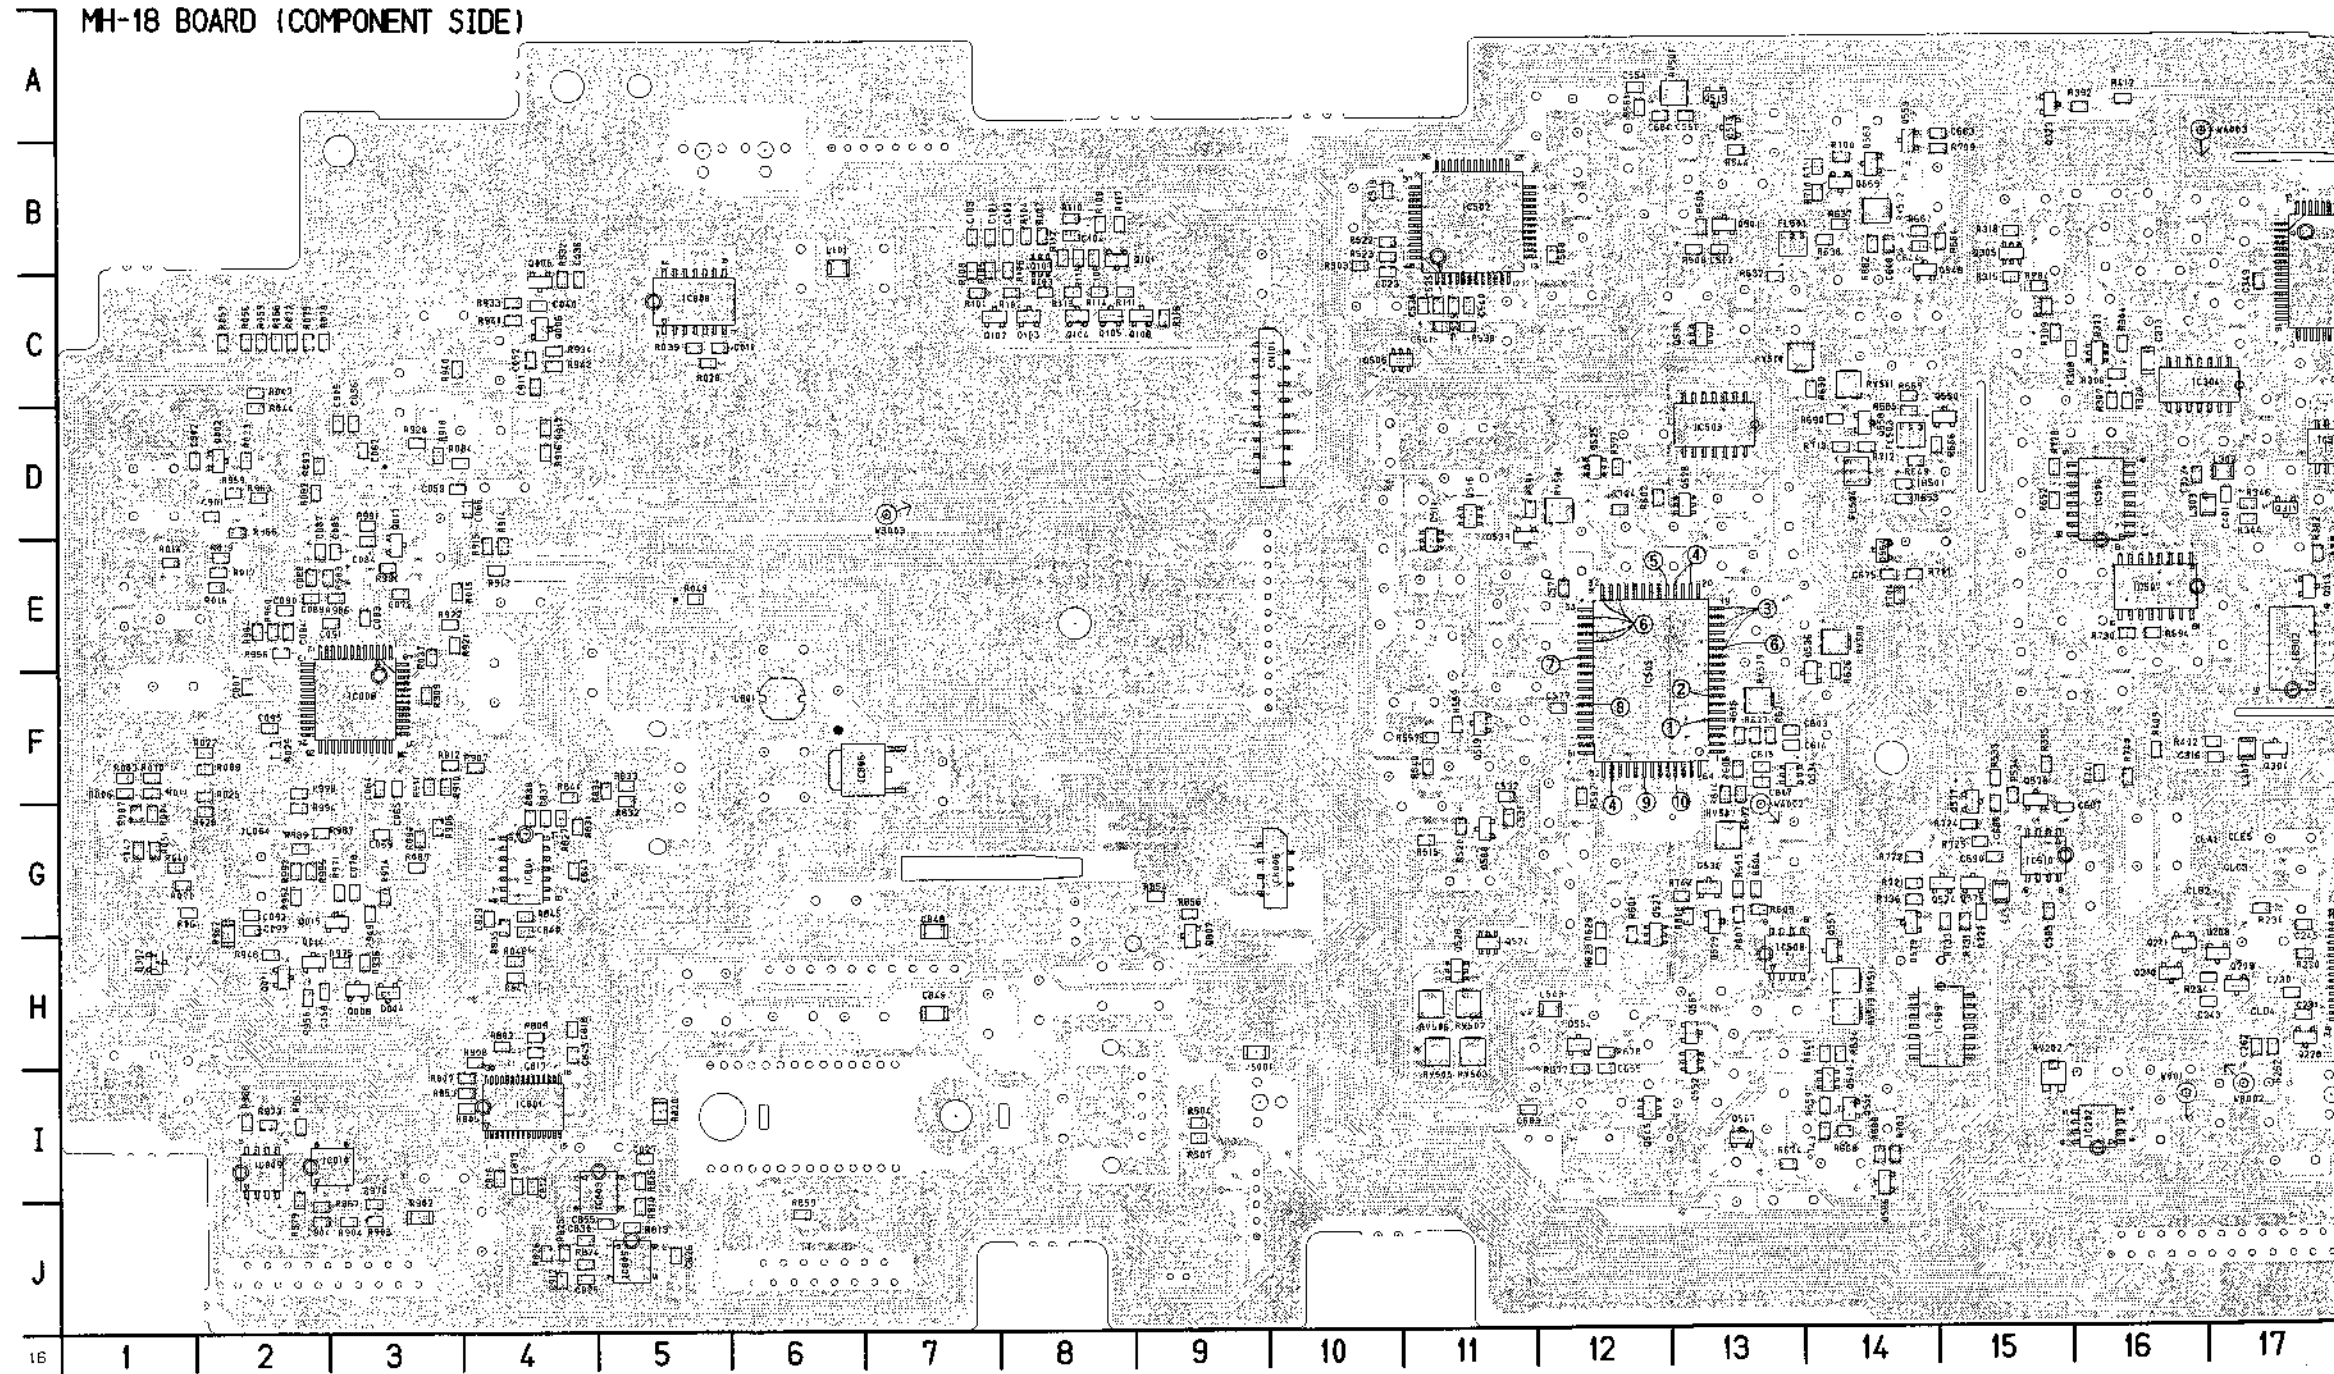


ted on this diagram isn't mounted in this model.

MH-18 BOARD (CONDUCTOR SIDE)


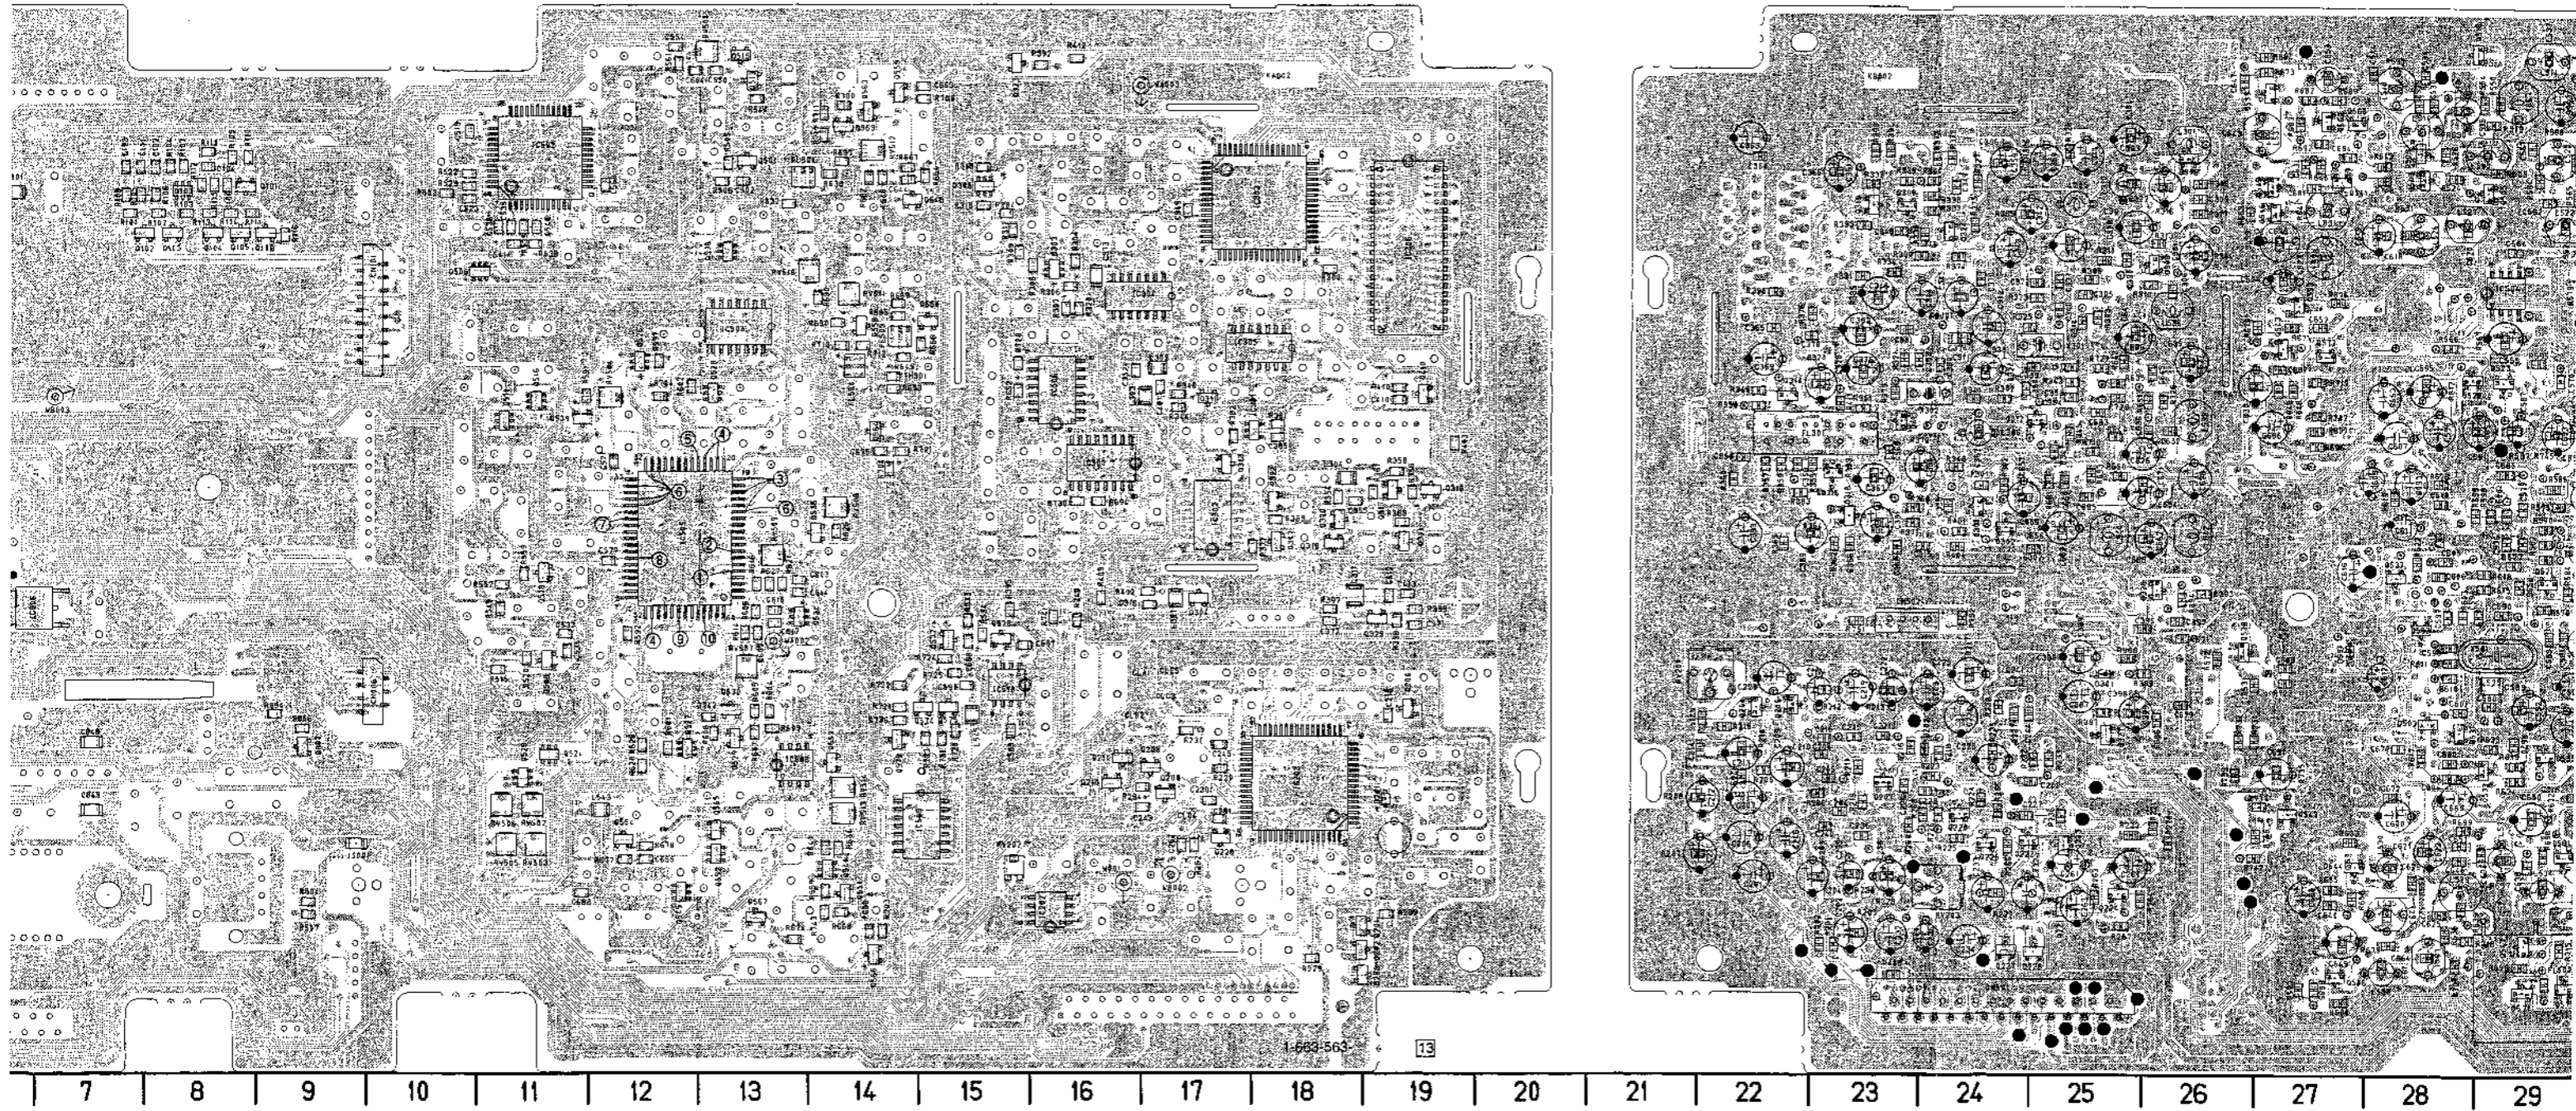


18 BOARD (CONDUCTOR SIDE)

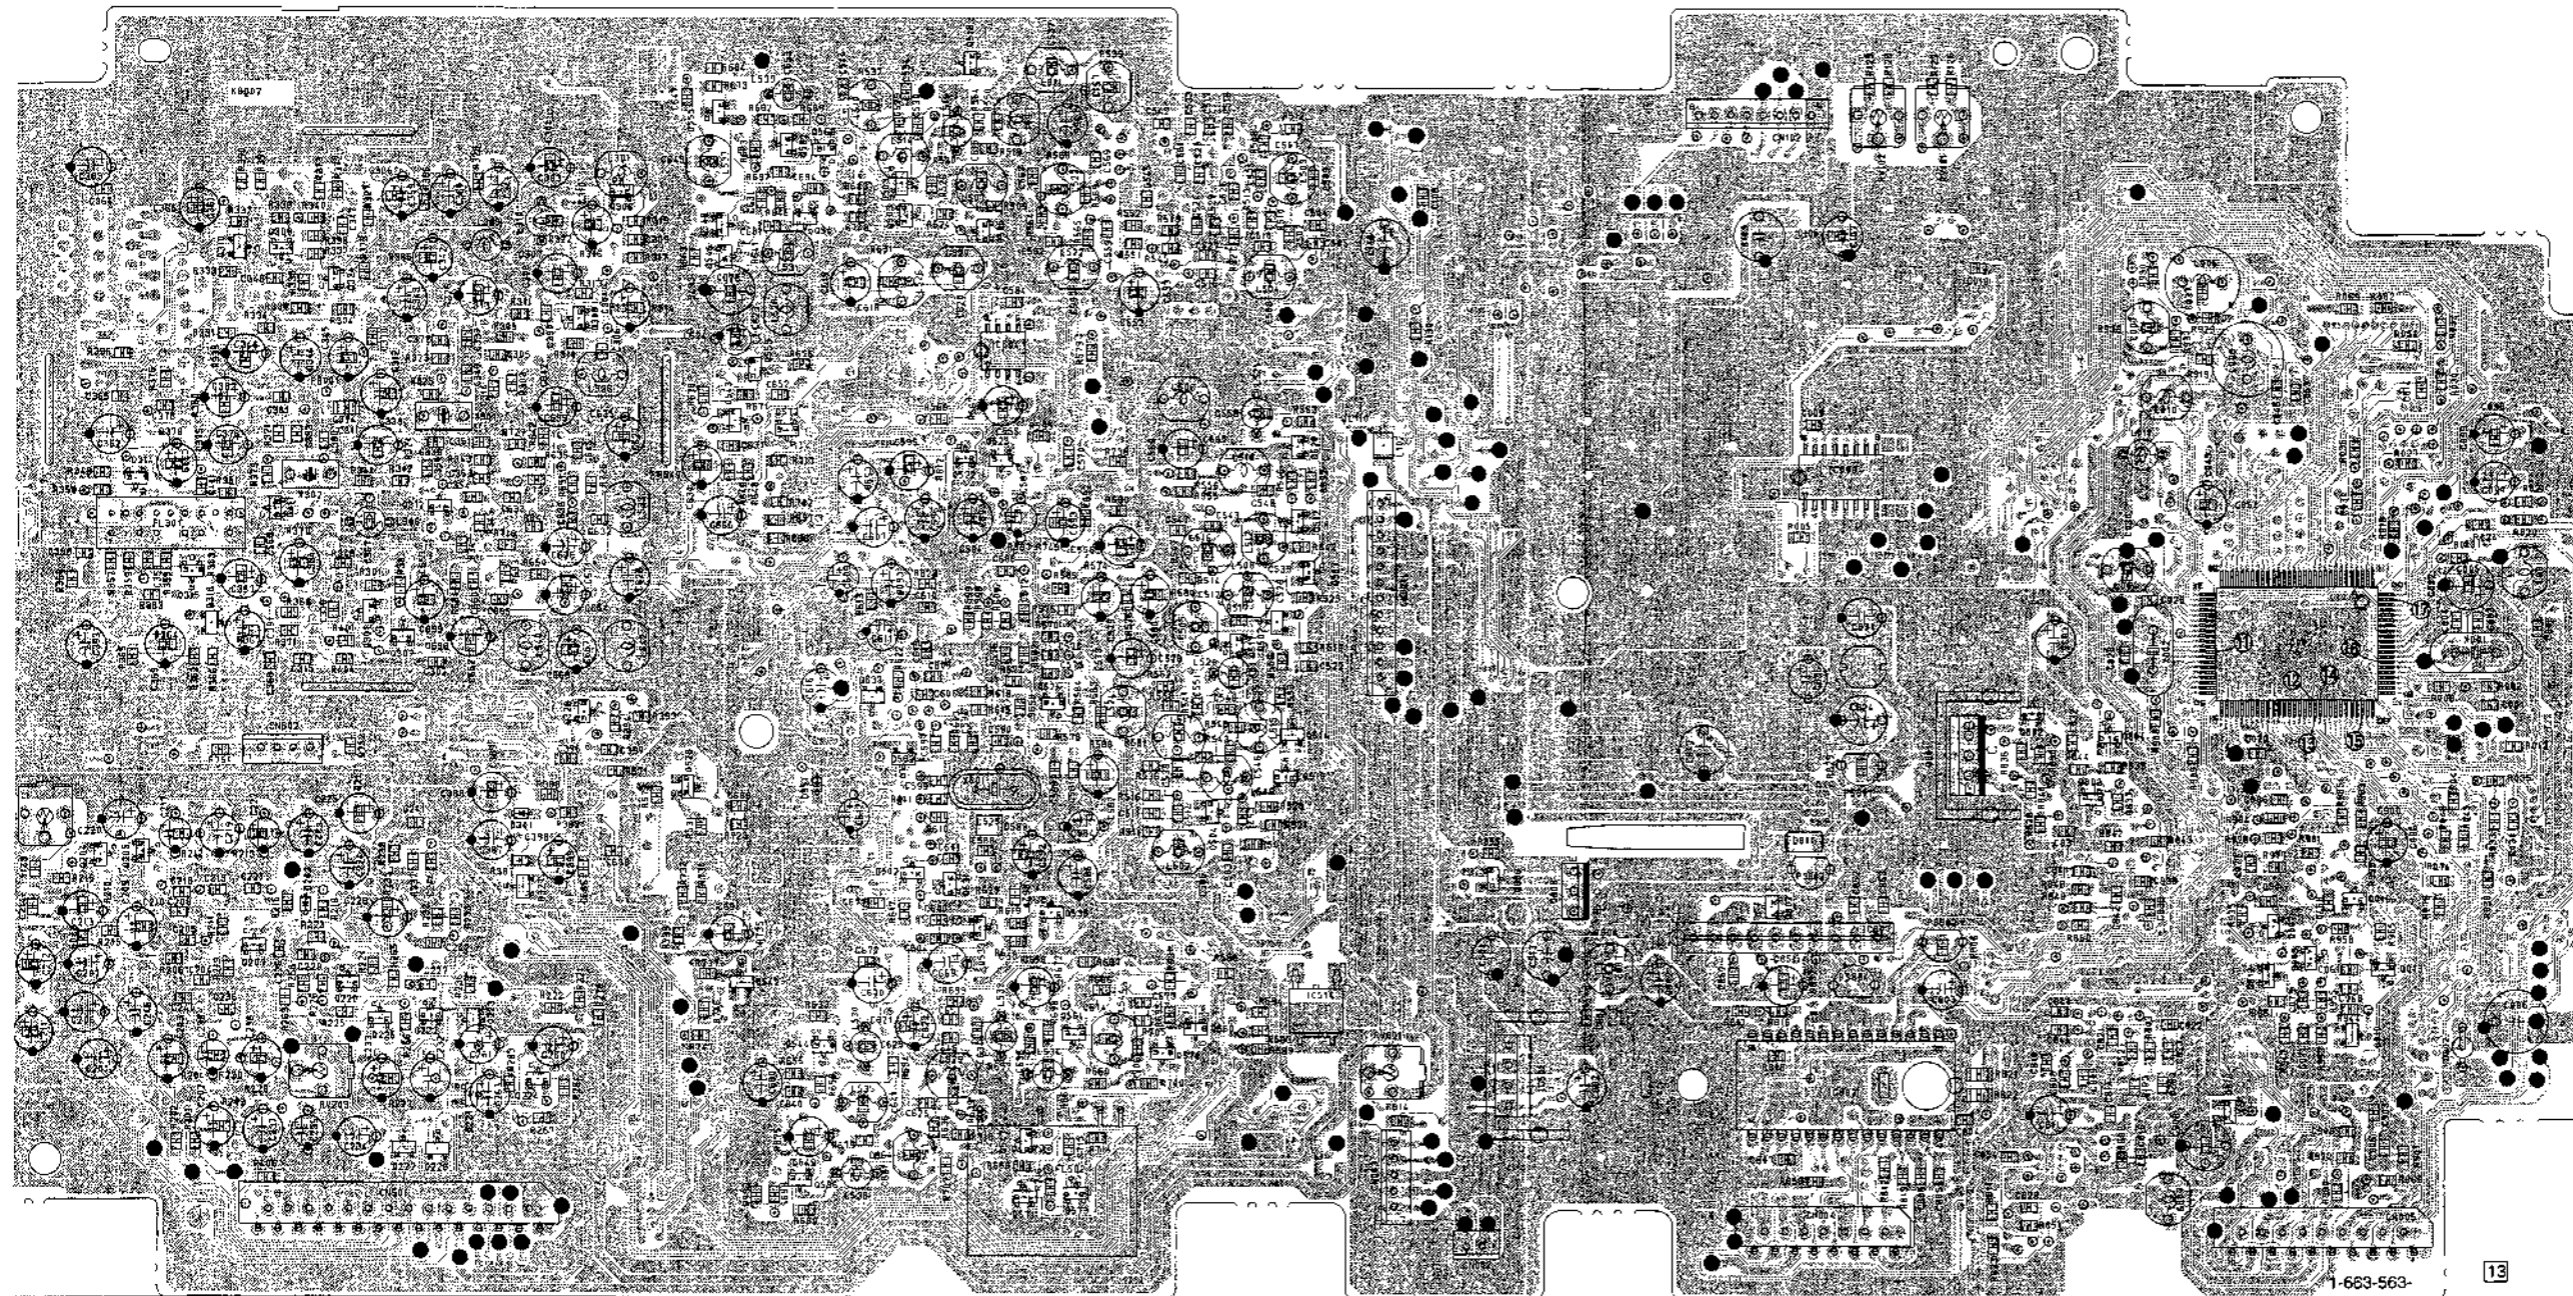


22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40

MH-18 BOARD (1/5)
 (VIDEO)

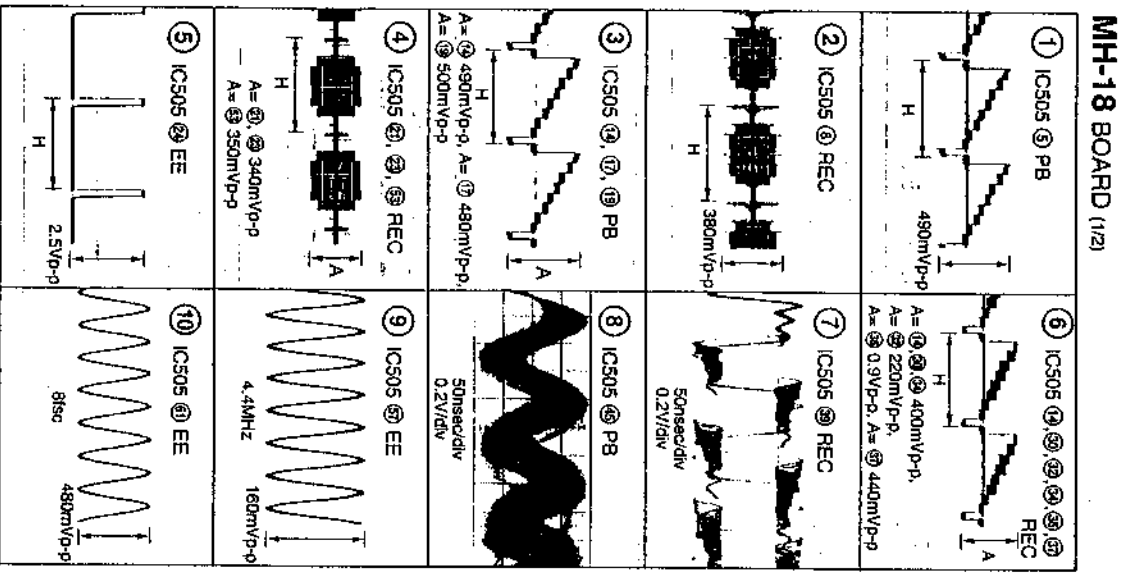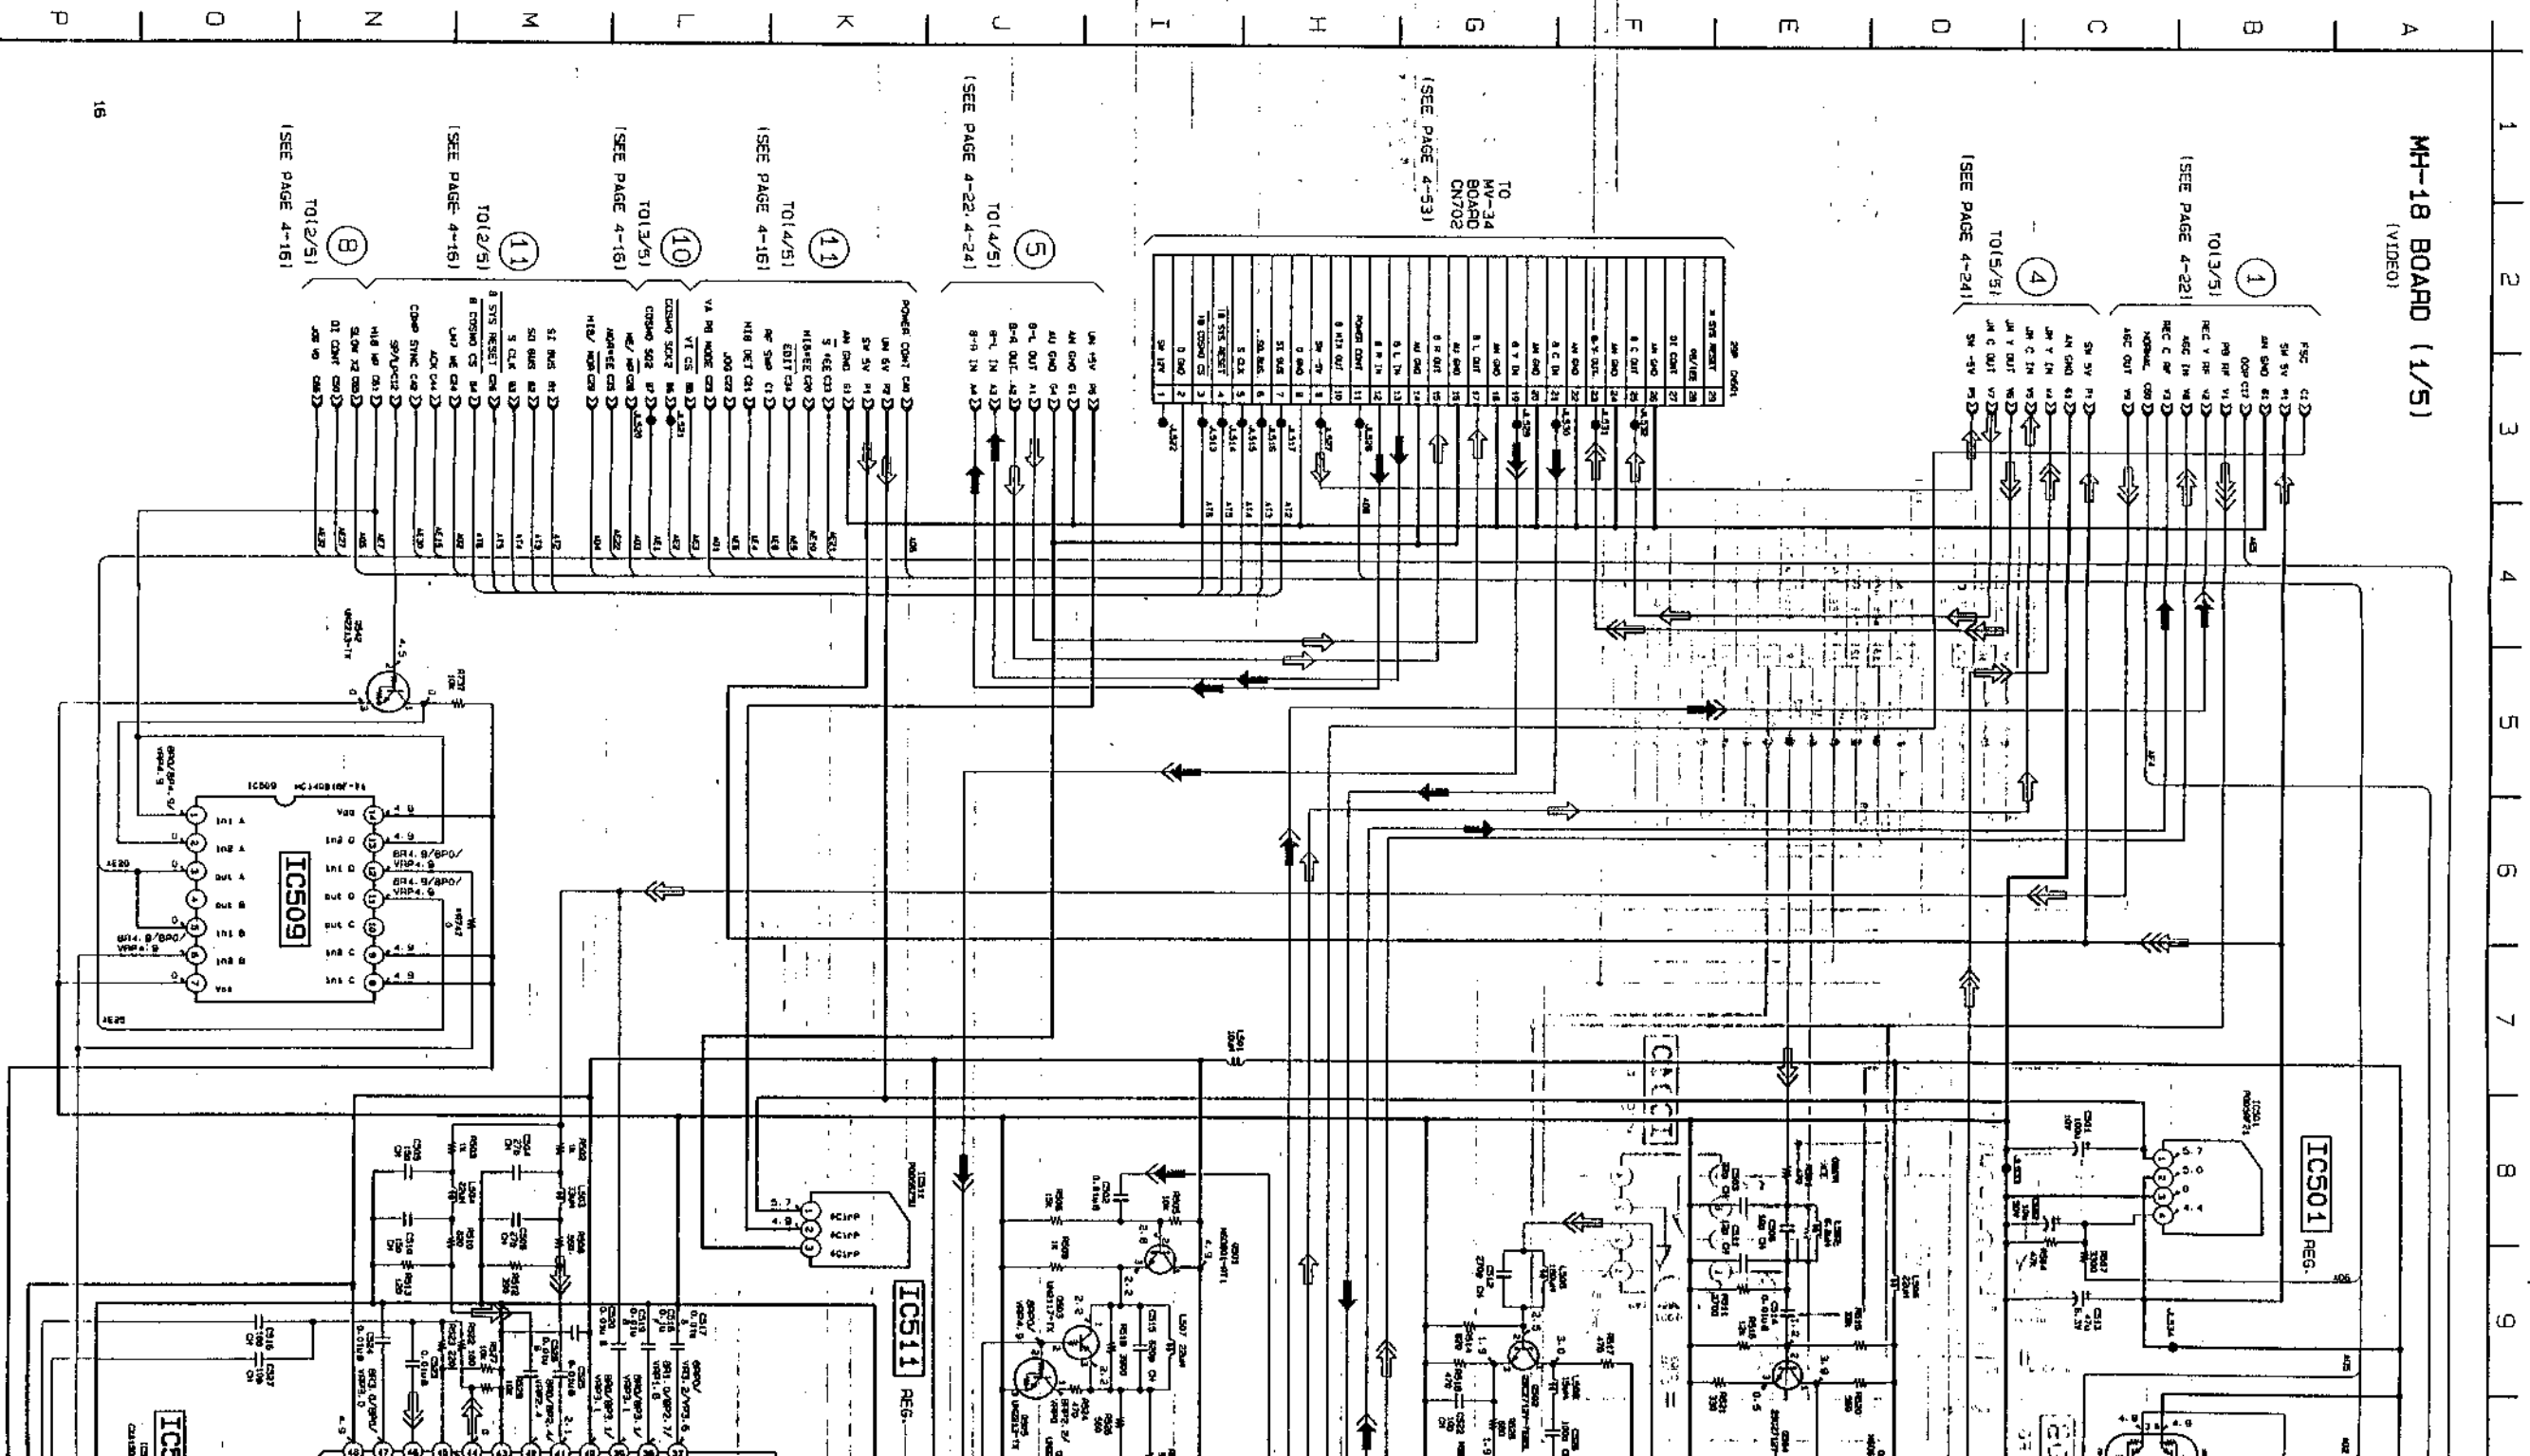

7 8 9 10 11 12 13 14 15 16 17 18 19 20

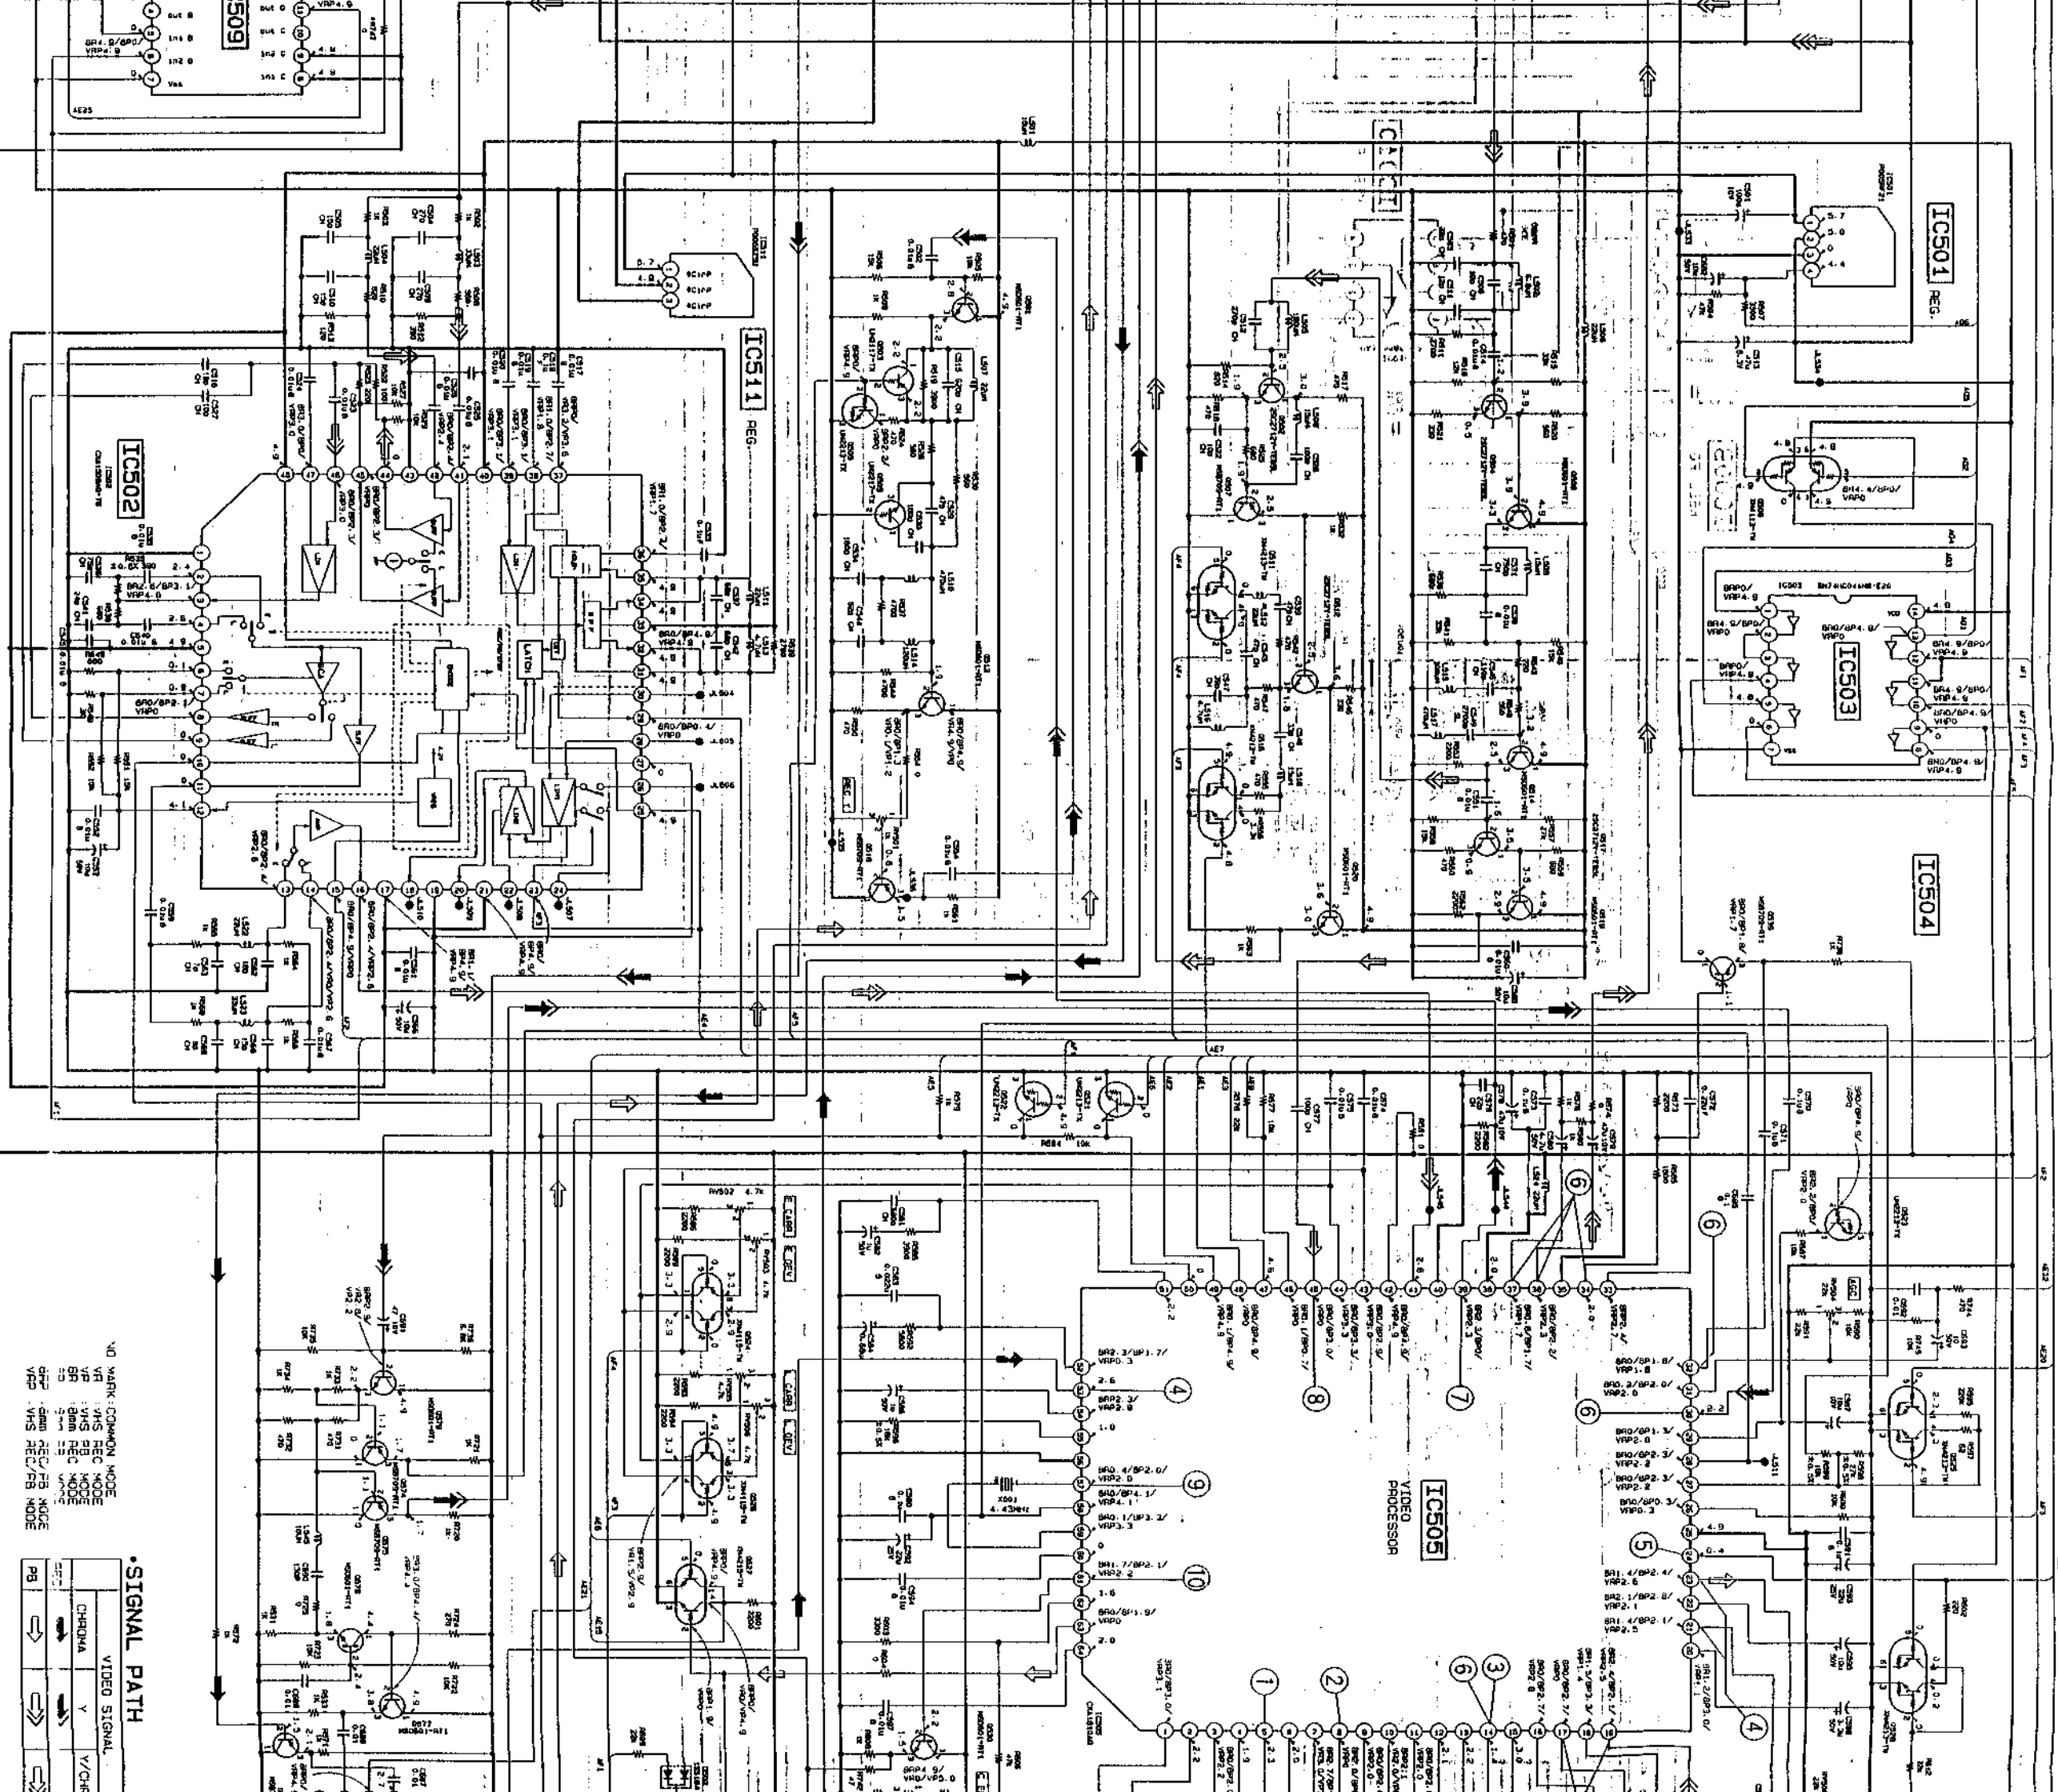


4-12

4-13

MARK: COMMON MODE
 VR: VHS REC MODE
 VV: VHS PB MODE
 SR: SR REC MODE
 DR: SR REC/PB MODE
 VPD: VHS REC/PB MODE

SIGNAL PATH


VIDEO SIGNAL	VIDEO PATH
CHROMA	V
	V/CHROMA

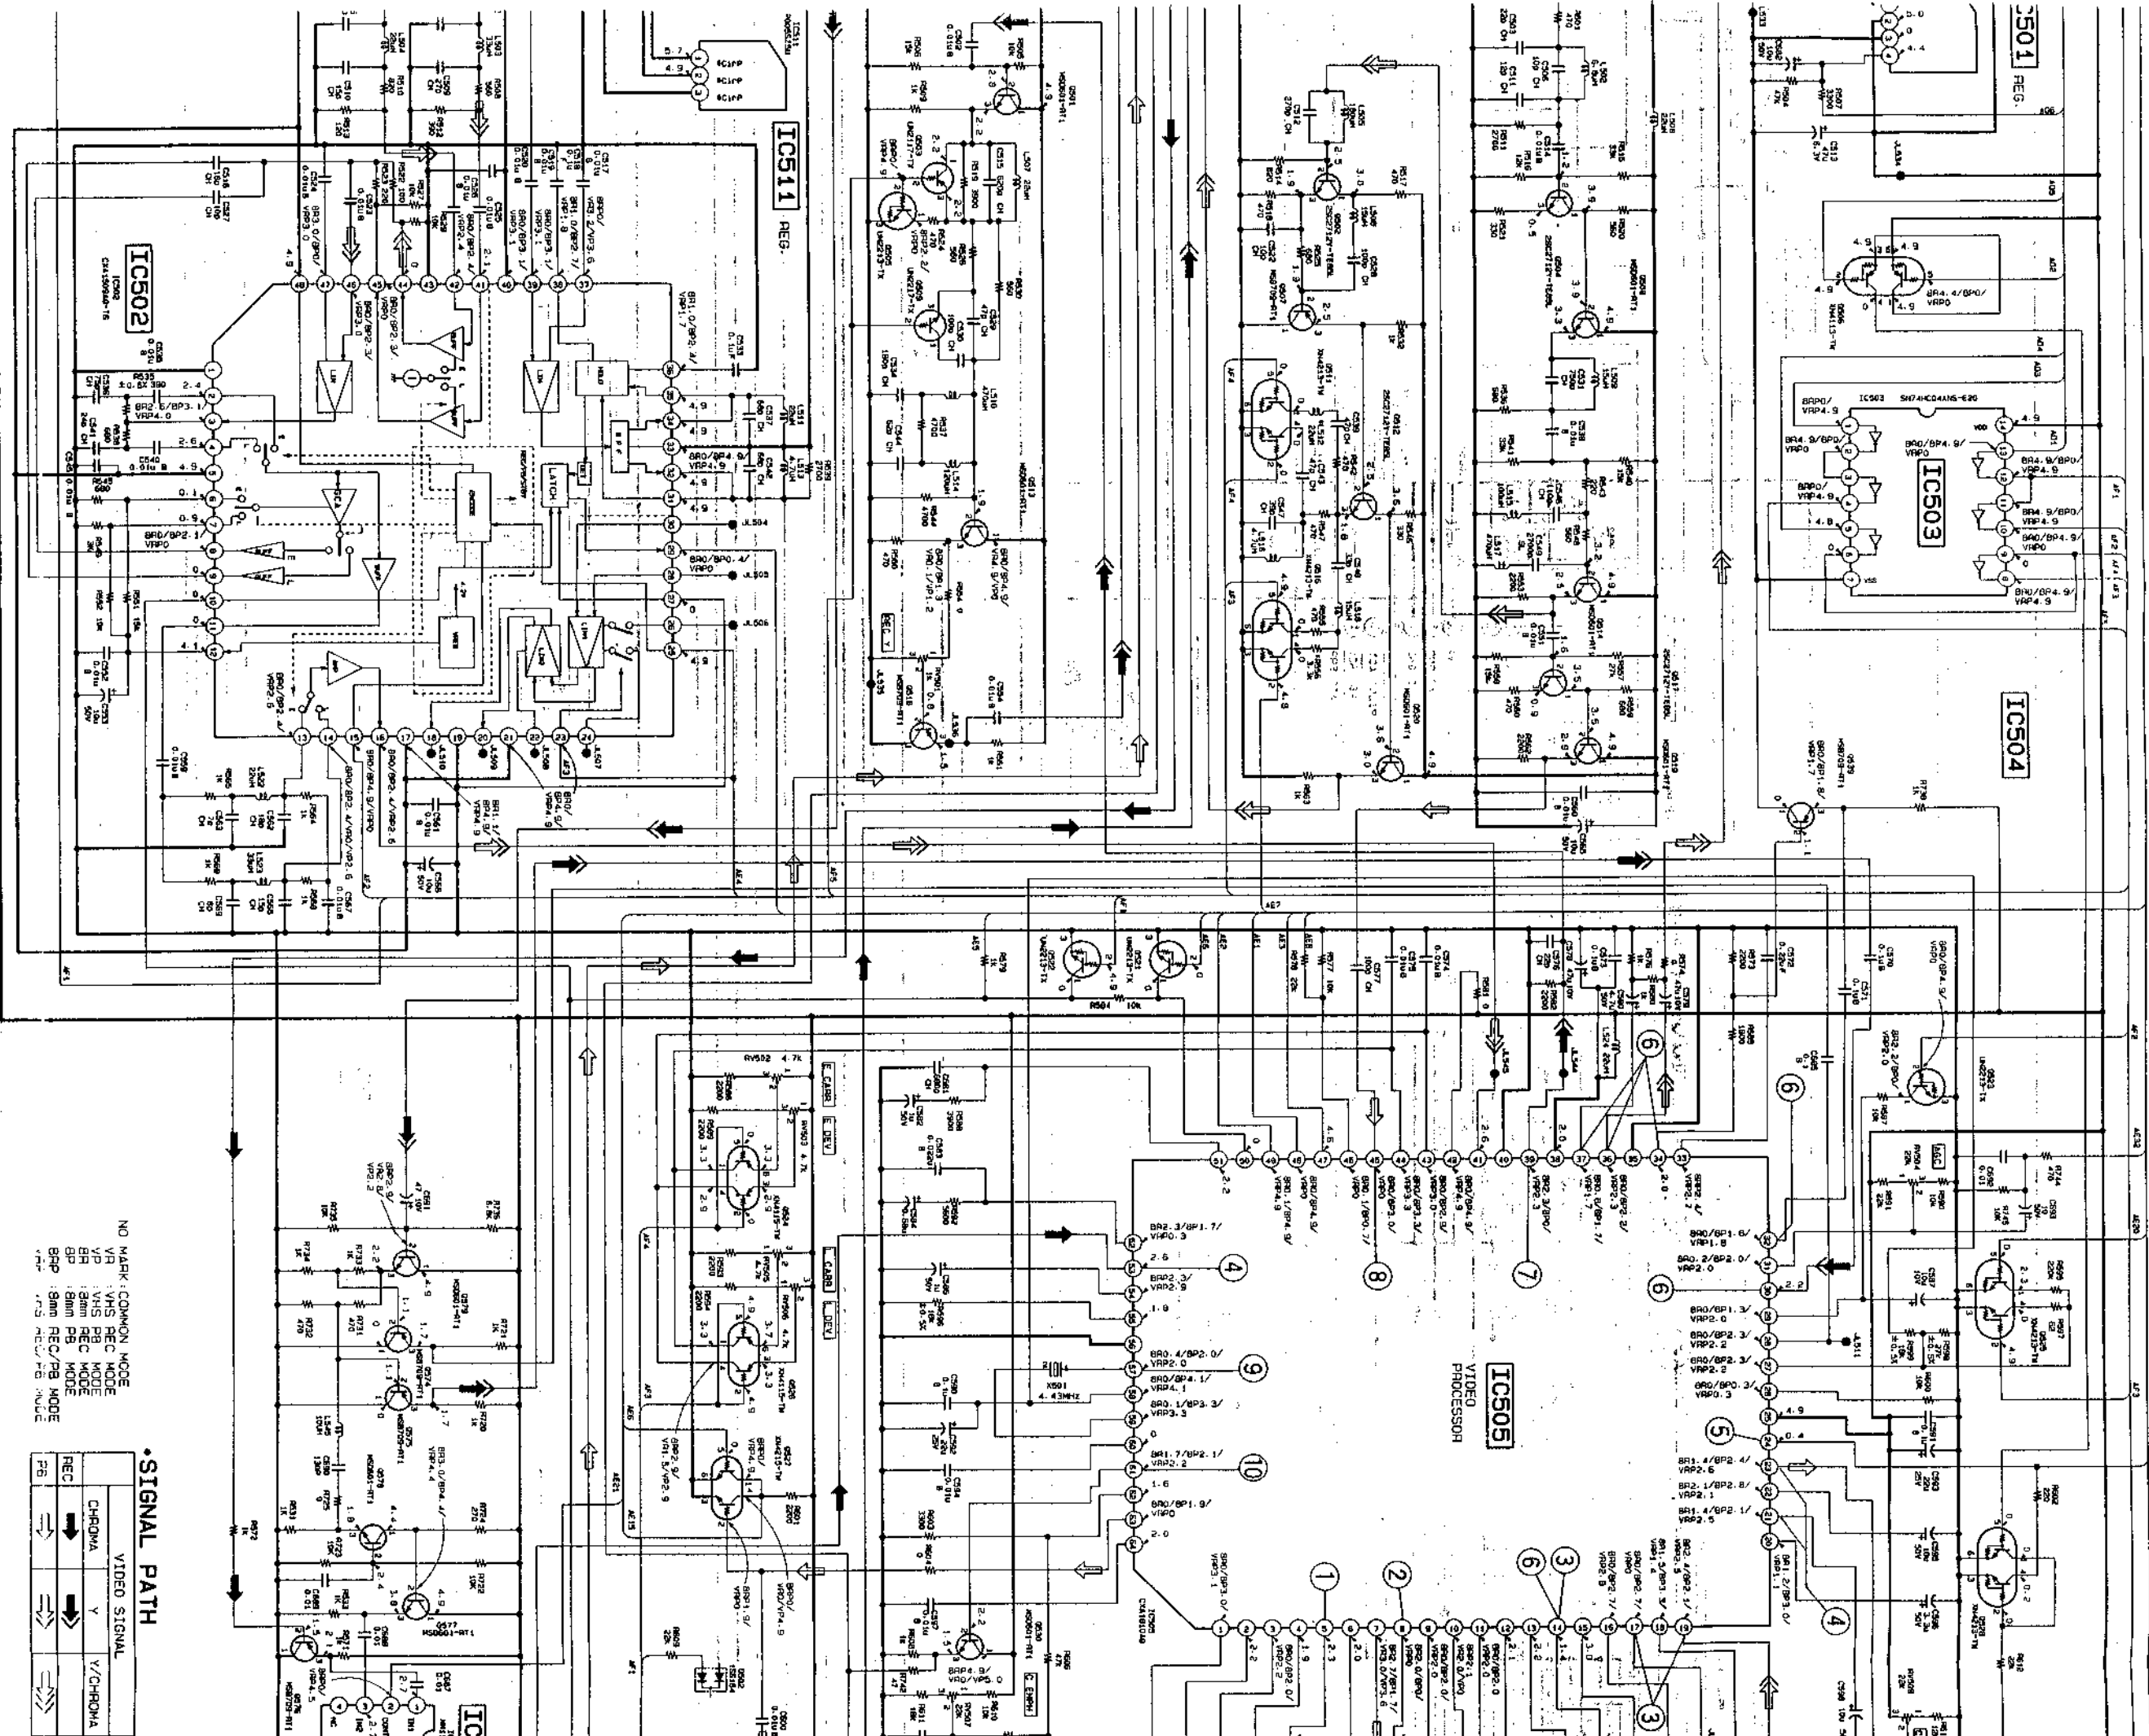

NO MARK COMMON MODE
 VR VHS REC MODE
 VR VHS PB MODE
 BR 3mm REC MODE
 BR 3mm PB MODE
 BRP 3mm REC/PB MODE
 TRP 3mm REC/PB MODE

SIGNAL PATH


VIDEO SIGNAL	VIDEO PATH	ALL
CHROMA	Y	CHROMA
REC	Y	REC
PB	Y	PB

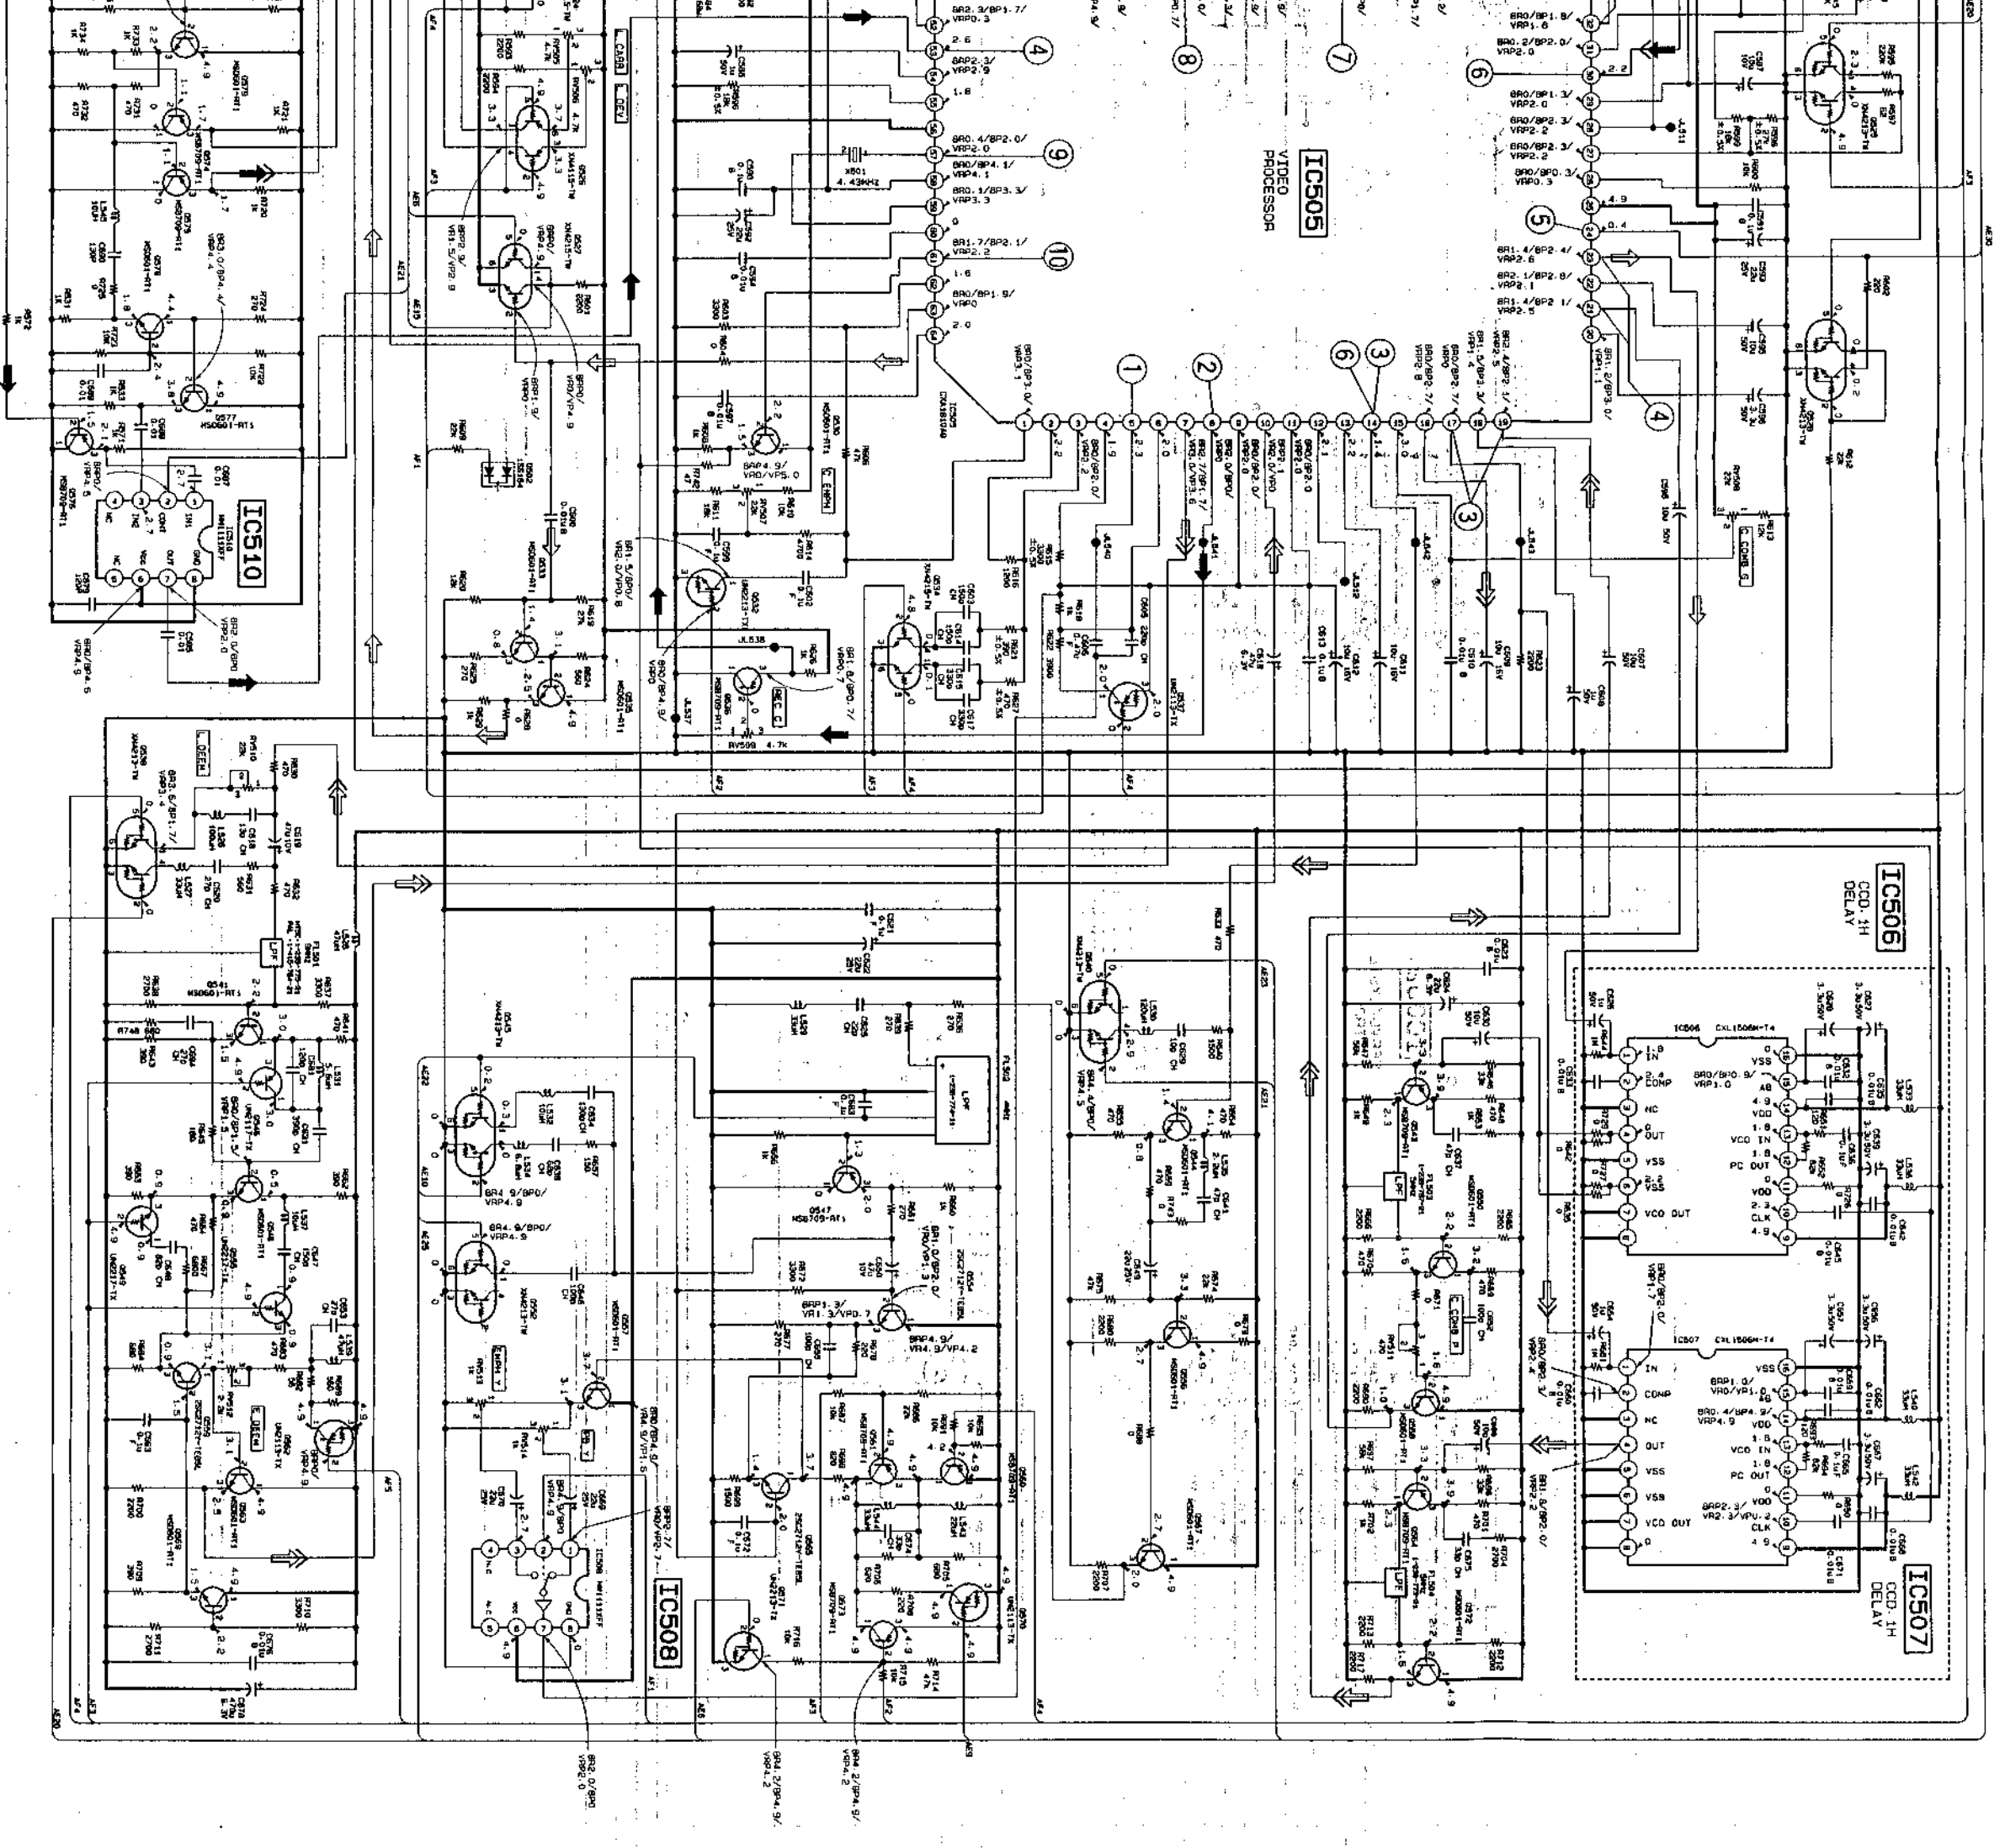

SIGNAL PATH

VIDEO SIGNAL		AUDIO SIGNAL	
CHROMA	Y	CHROMA	
REC			
BP			
BP			
BP			

NO MARK: COMMON MODE
 VR : VHS REC MODE
 VR : VHS PB MODE
 BP : 6MM REC MODE
 BP : 6MM PB MODE
 BP : 8MM REC/PB MODE
 VR : VHS REC/PB MODE

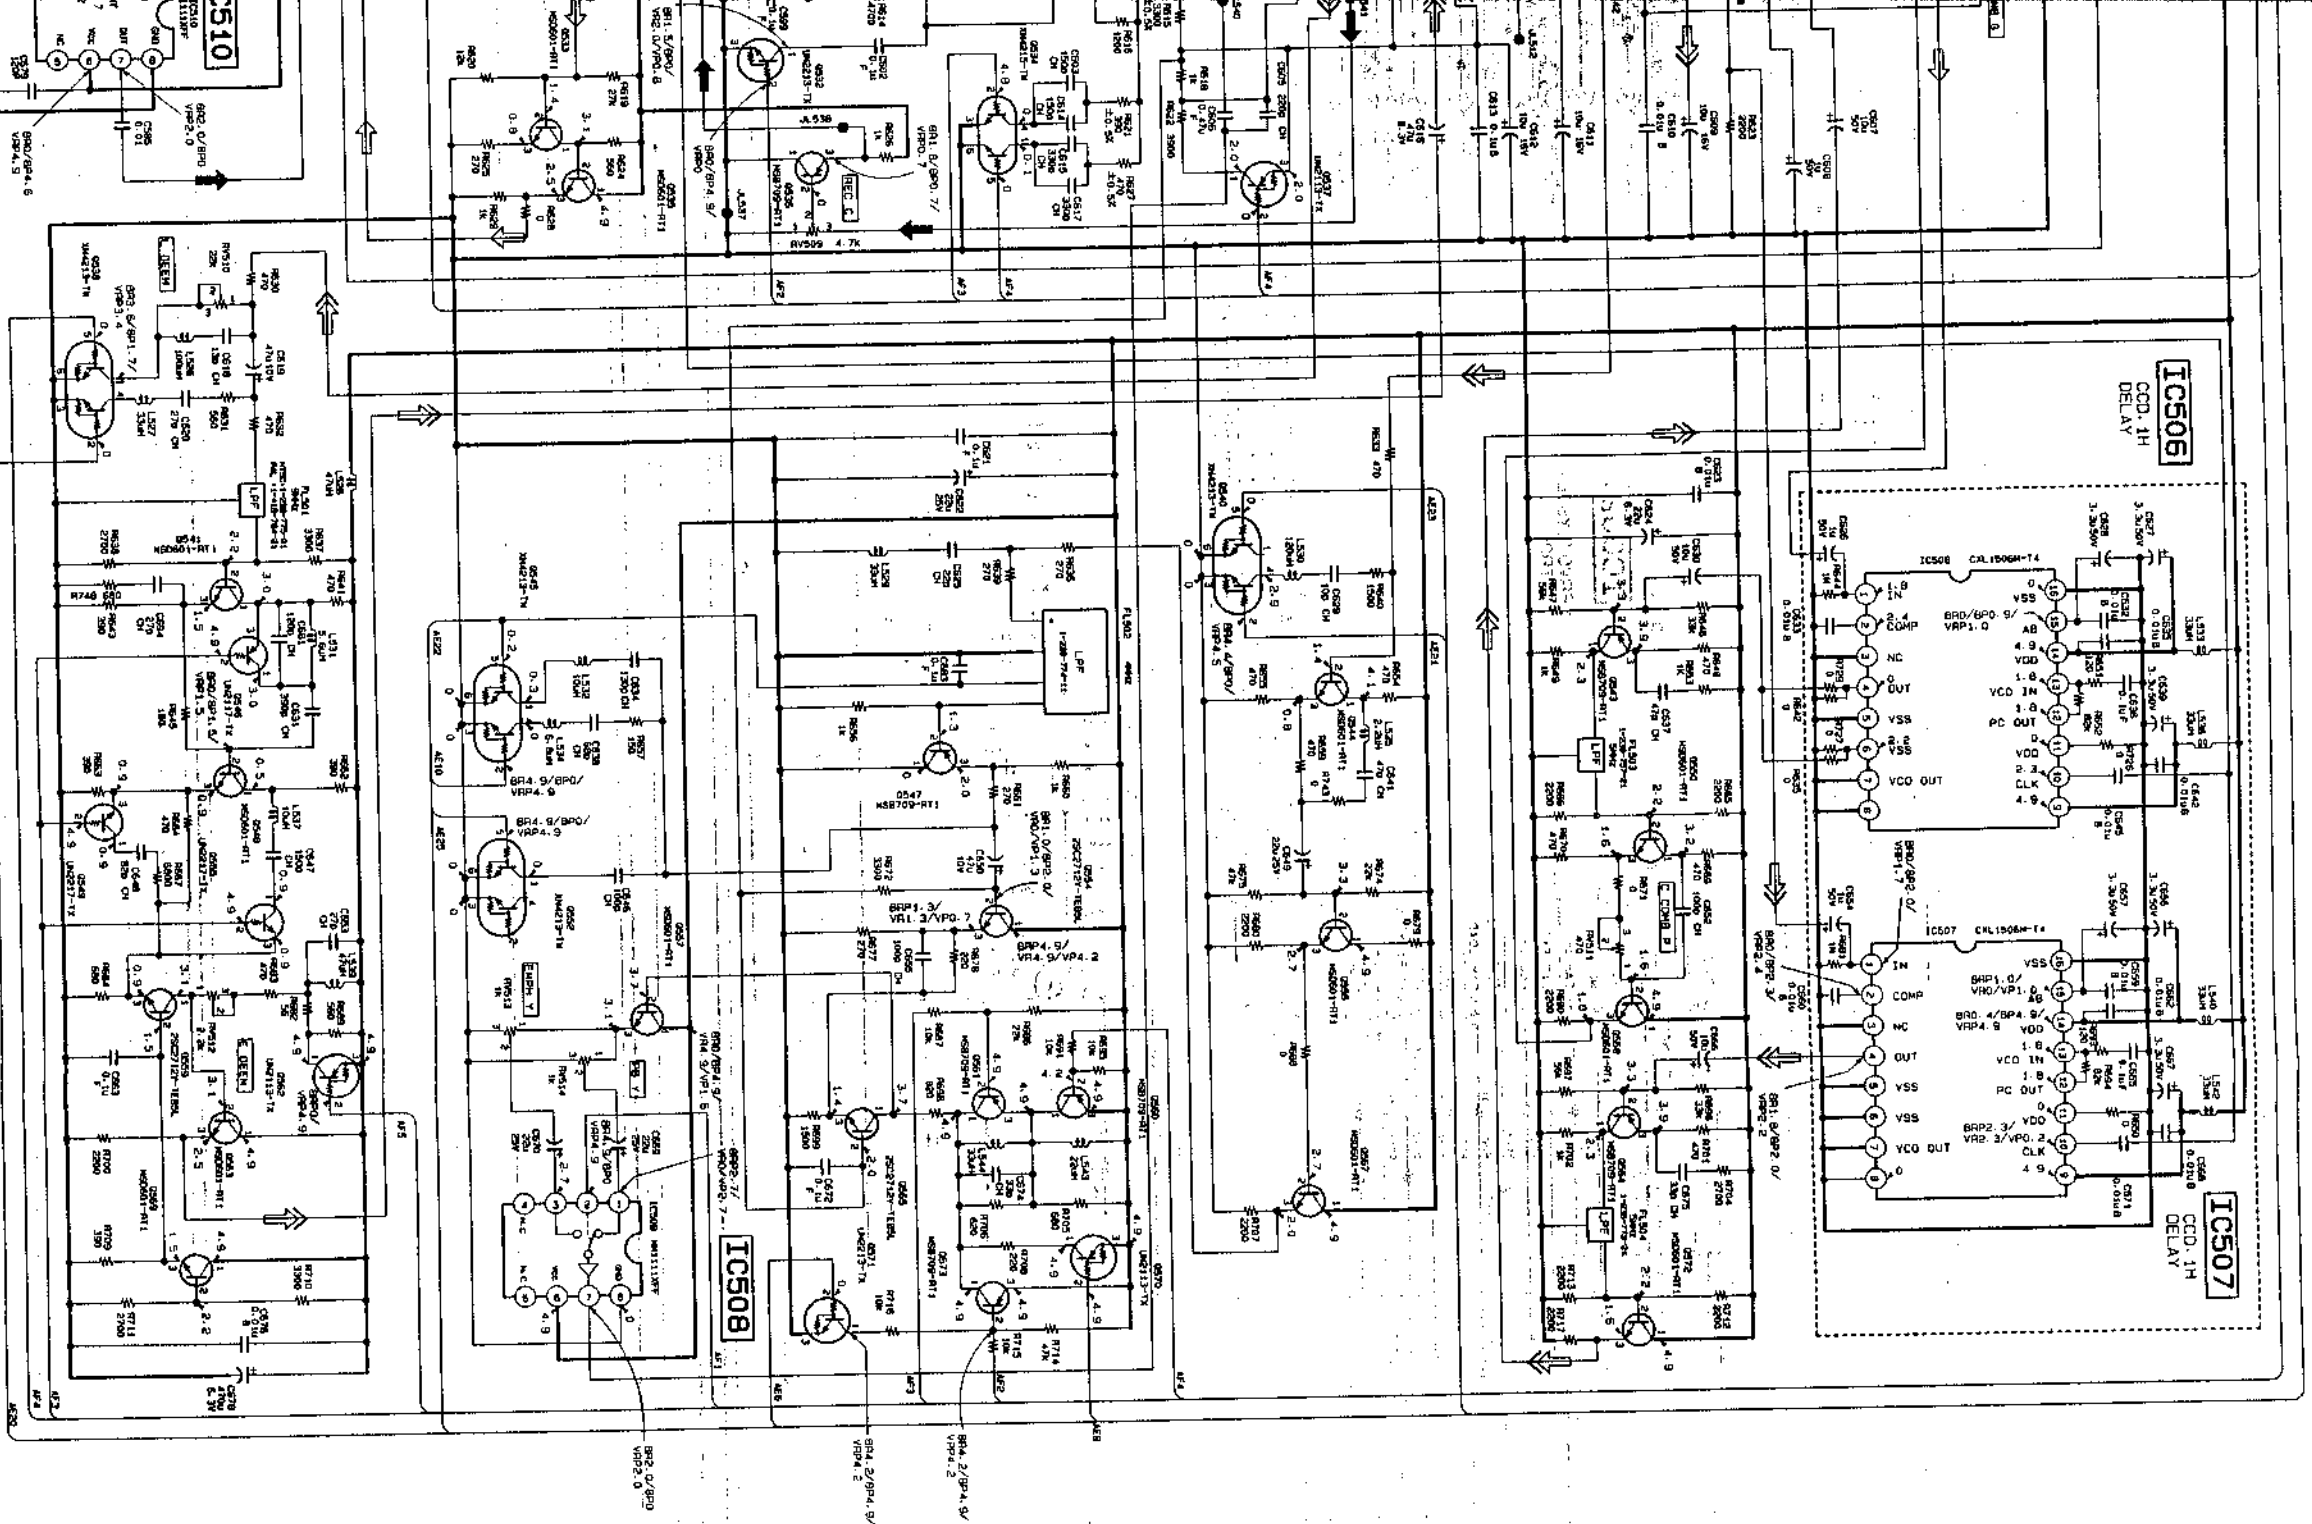

AUDIO SIGNAL

MH-18 BOARD (2/5)

(SS)

③ TO(3/5)
REC ON
REC ATP

⑥ TO(4/5)
AFM MUTE
AUDIO PA
SP/ LP

⑧ TO(1/5)
JOB VO
DI CONT
H B DET

⑪ TO(1/5)
B SYS RESET
VI CS
SI BUS

⑨ TO(5/5)
HIB MUTE
V MUTE

TO PS-380 BOARD CN401
(SEE PAGE 4-71)


CN401 12P	
1	D 5V
2	0 GND
3	SM GND
4	UN SV
5	UN SV
6	SM GND
7	UNREG 13V
8	UNREG 13V
9	M12 GND
10	M12 GND
11	AU GND
12	POWER CONT


CHECK CONNECT






LOADING MOTOR MECHA


3P CN402	
1	UN LOAD (H)
2	LOAD (H)

5P CN403	
1	C 75
2	CAP ENH
3	AN GND
4	SP/ LP DET
5	SP/ LP REF




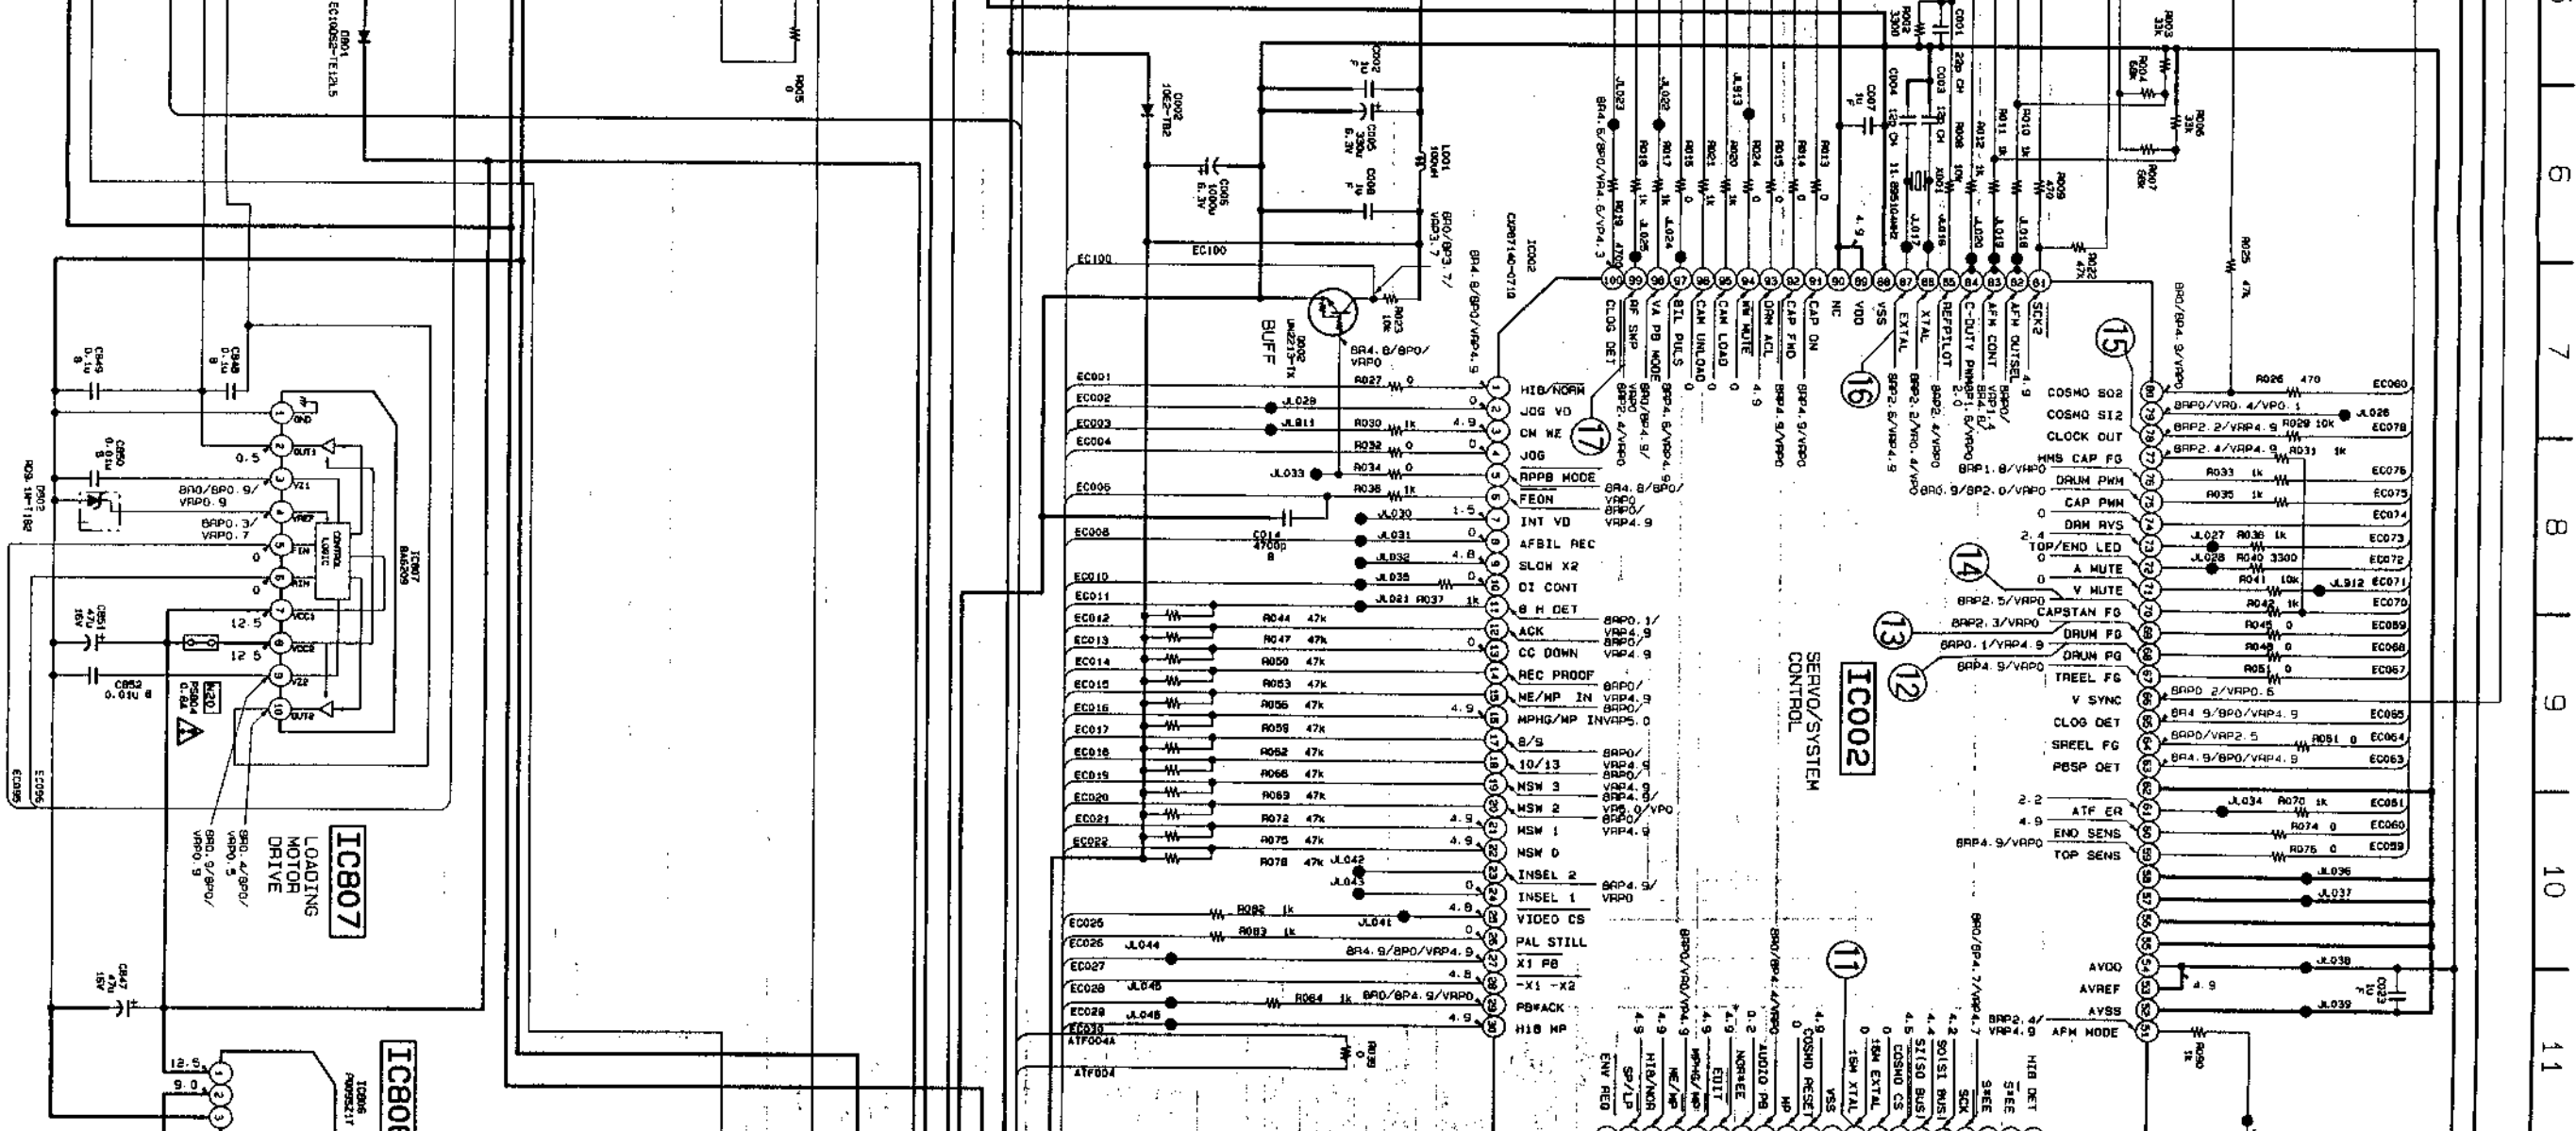


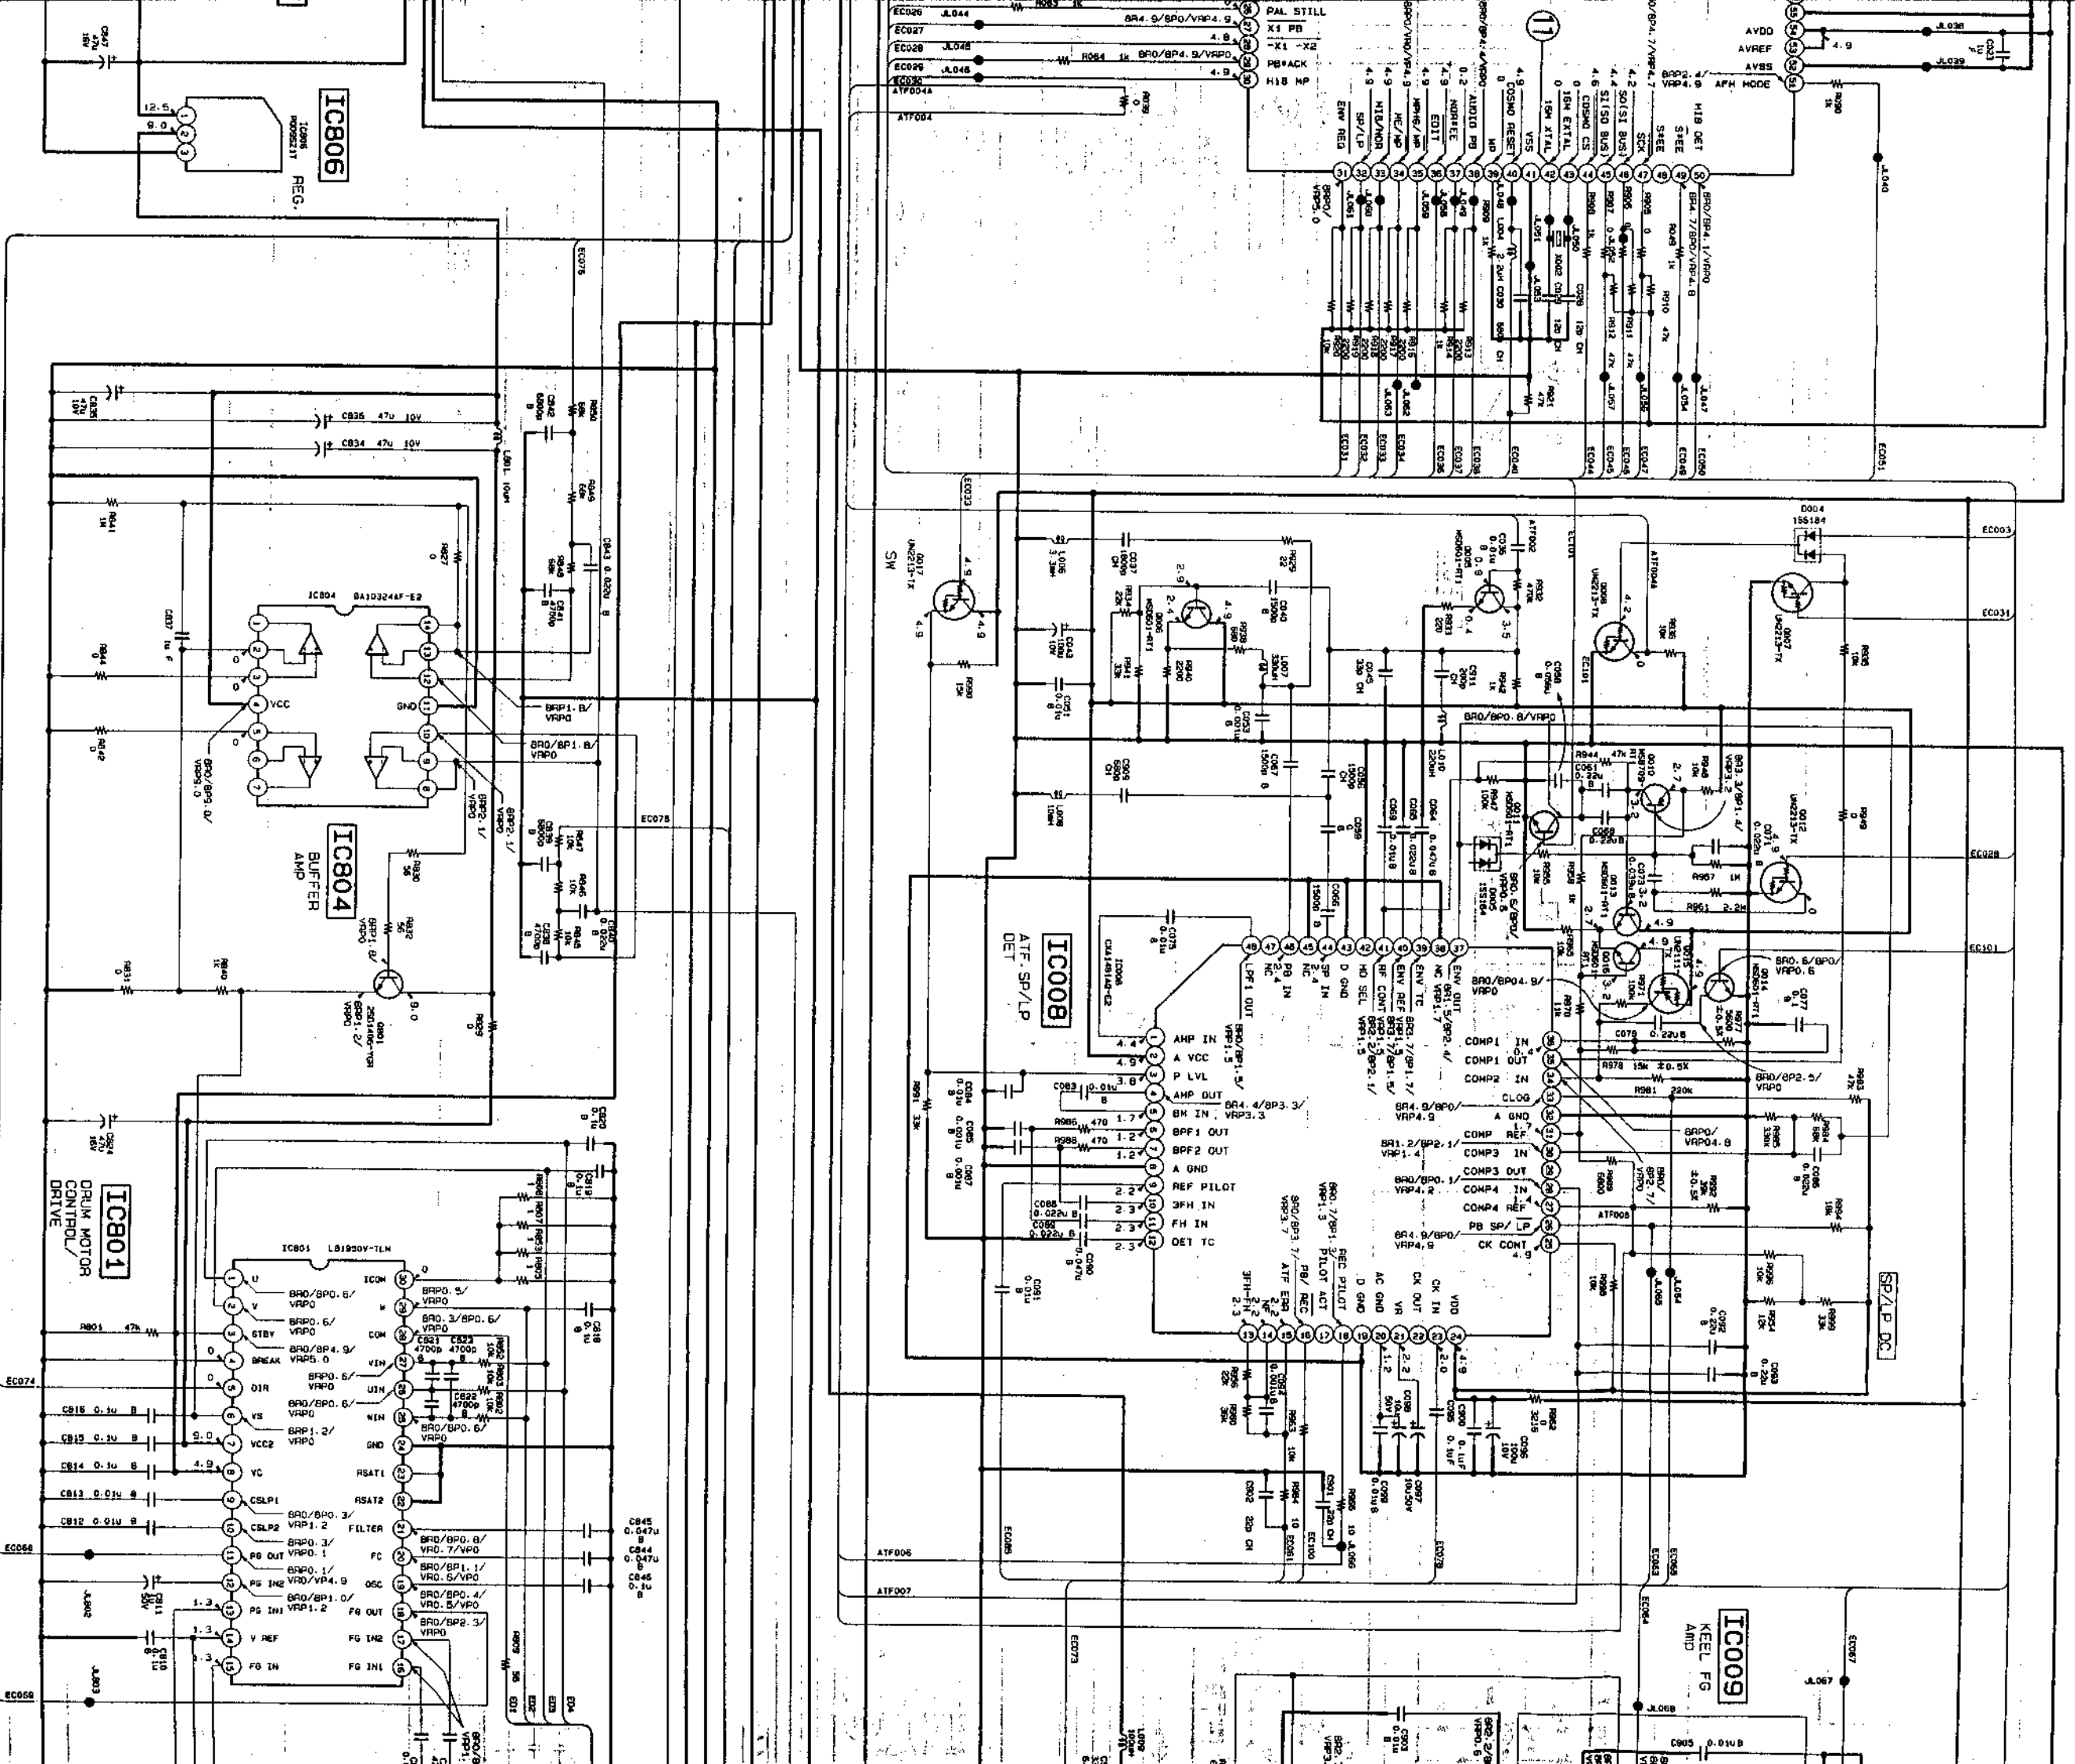


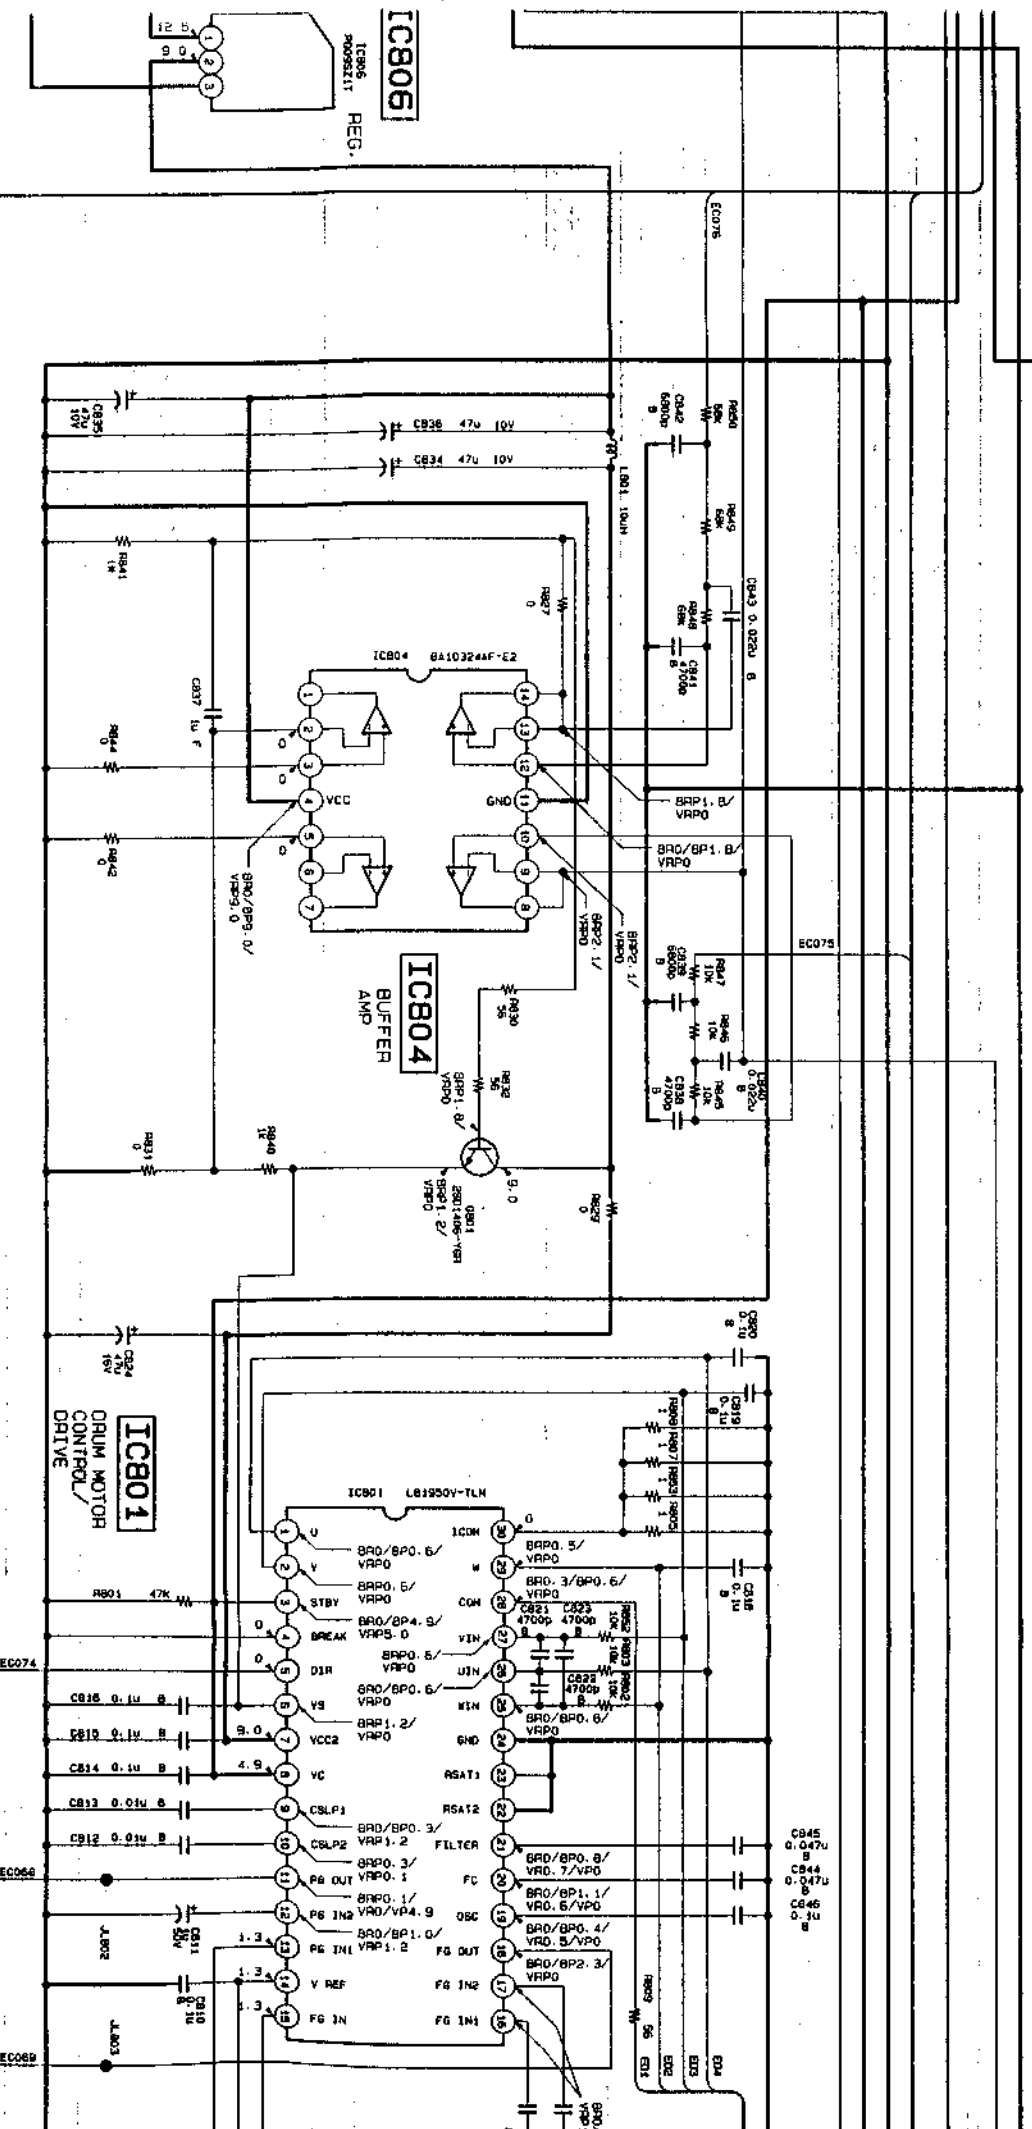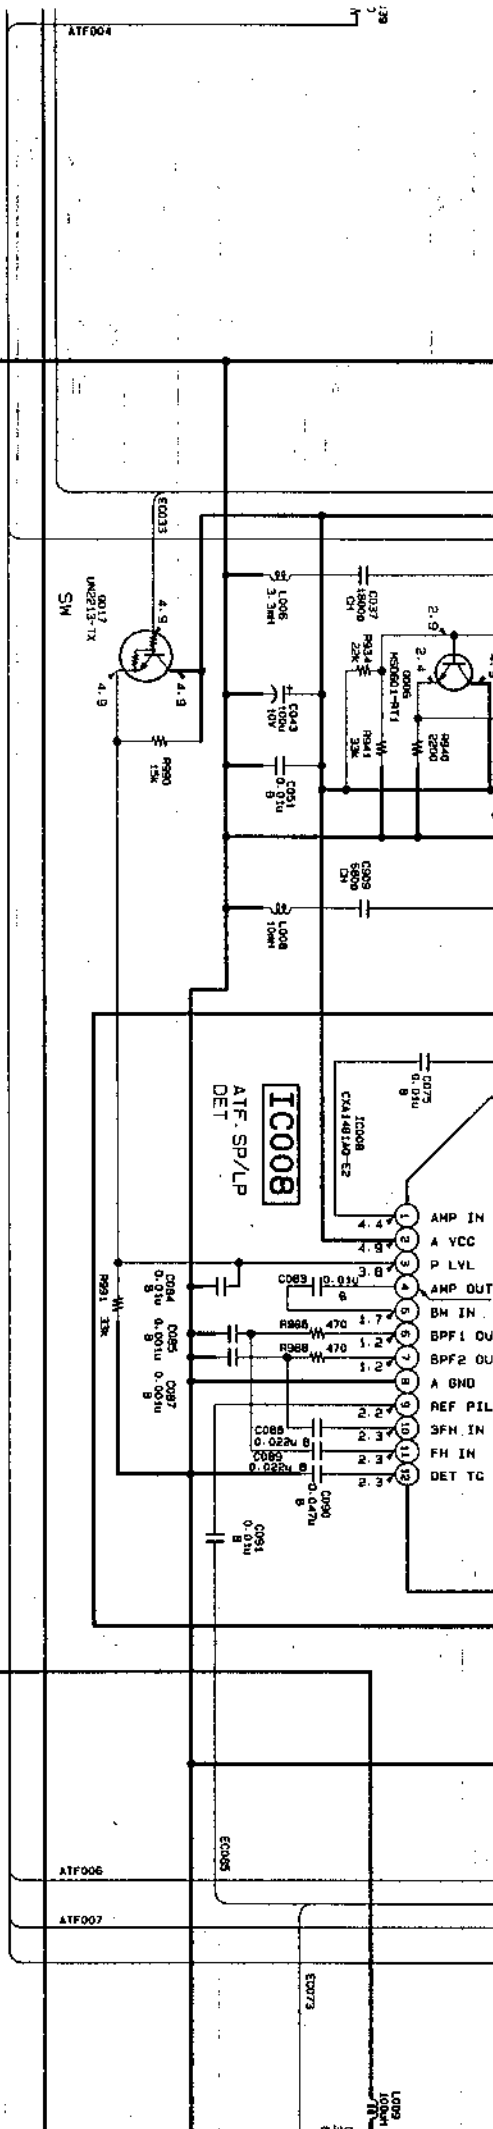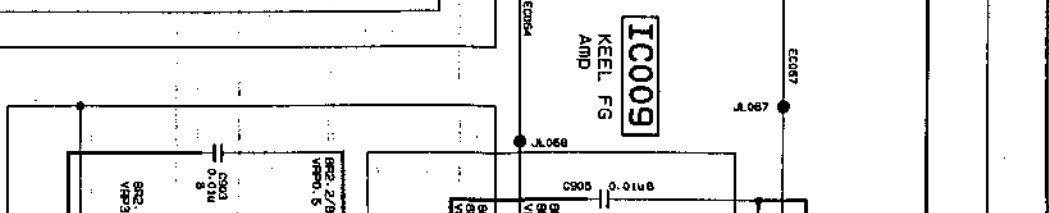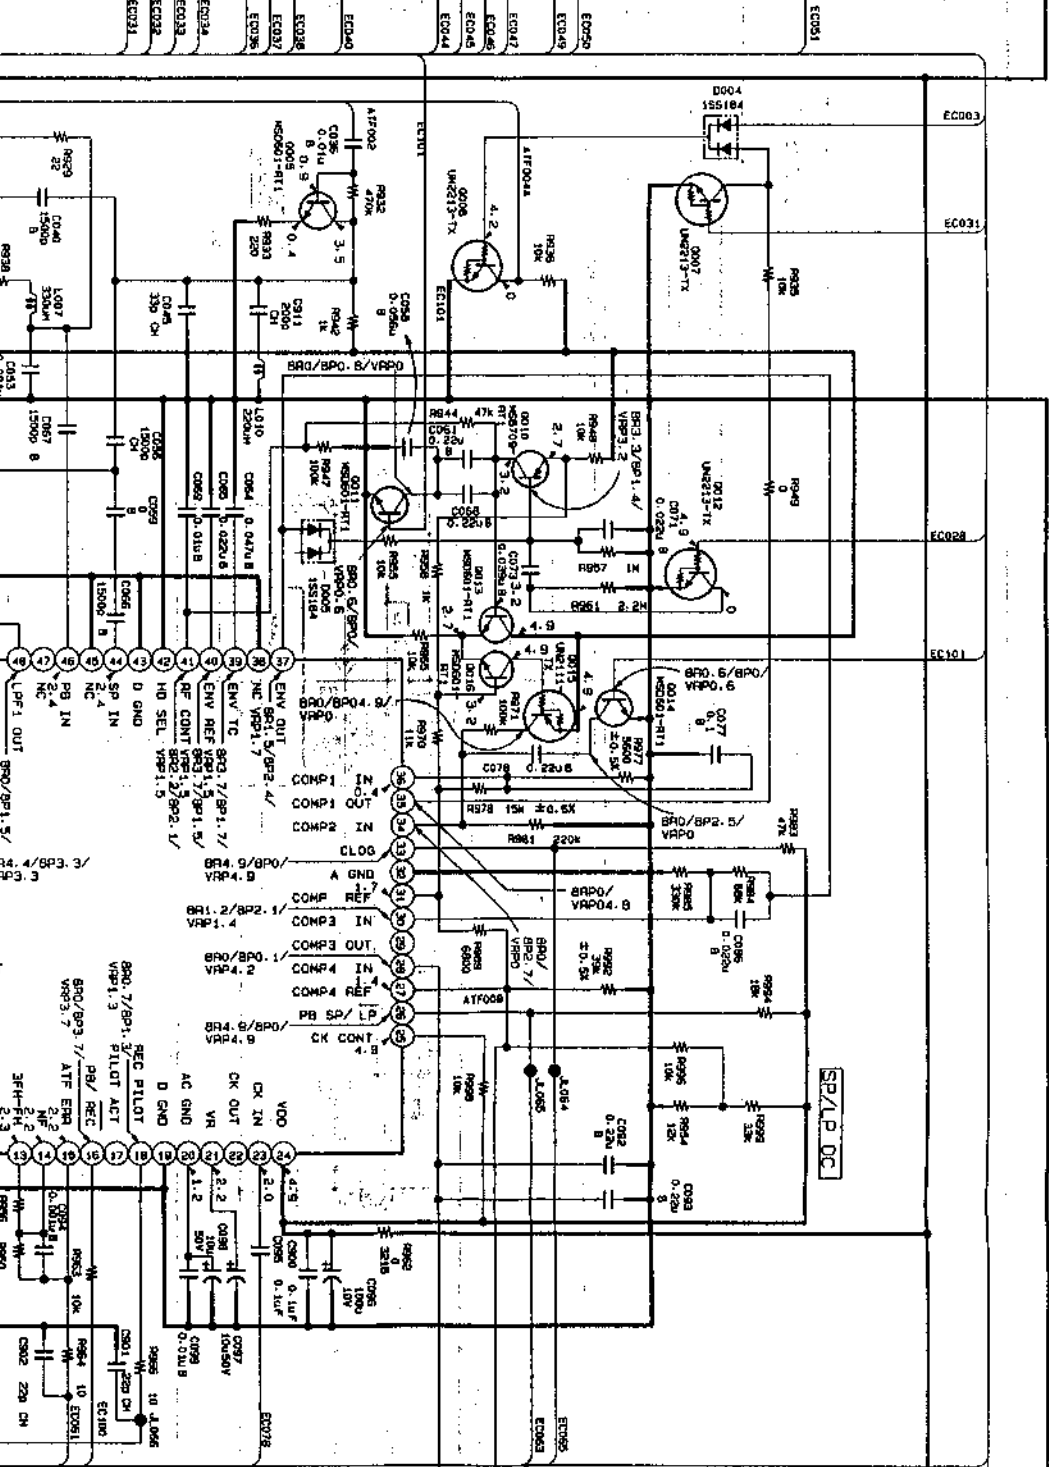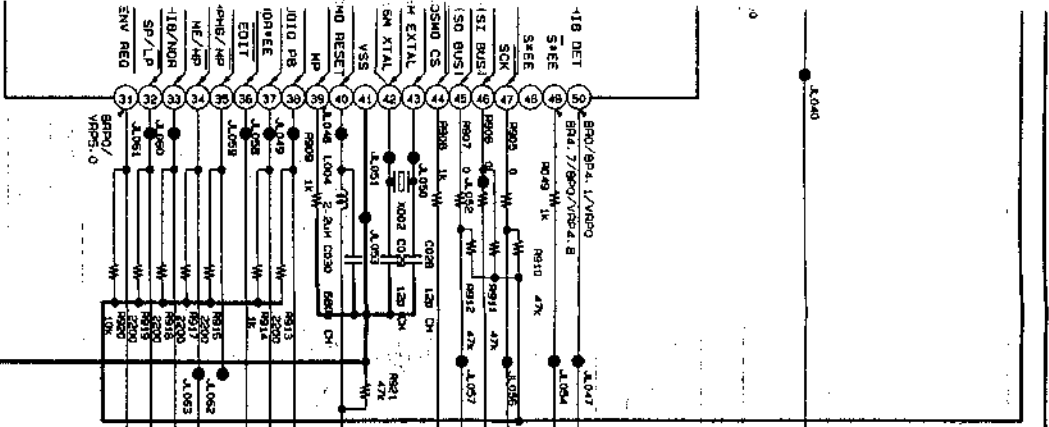

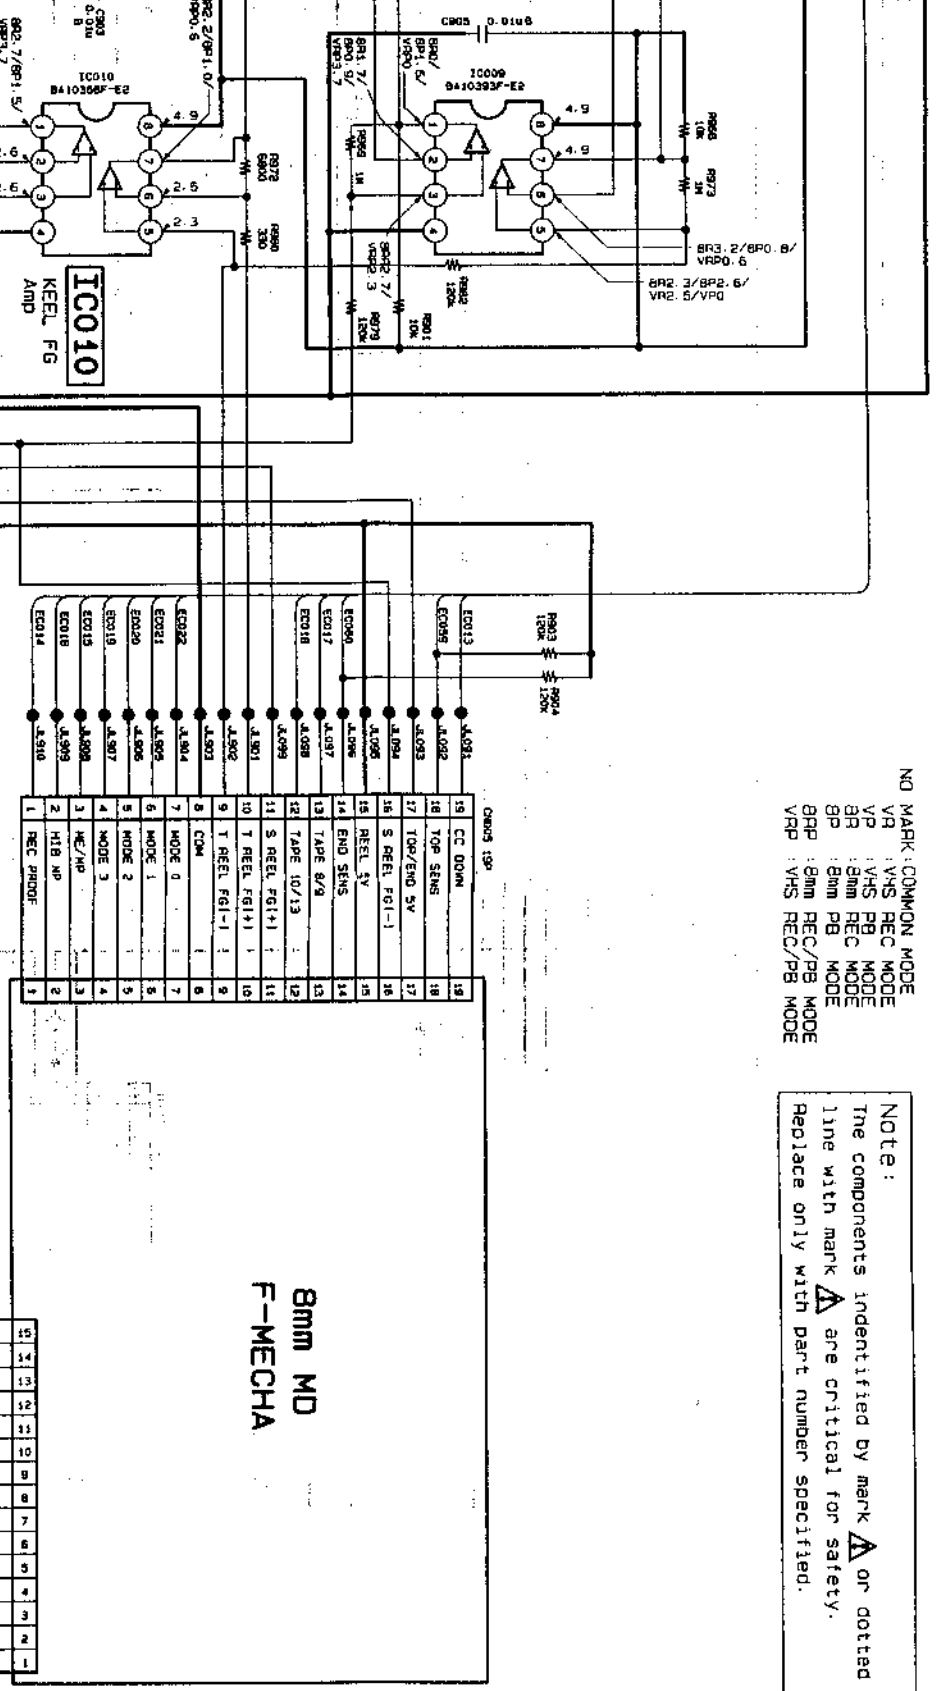


Note:
 The components identified by mark **A** or dotted line with mark **A** are critical for safety.
 Replace only with part number specified.

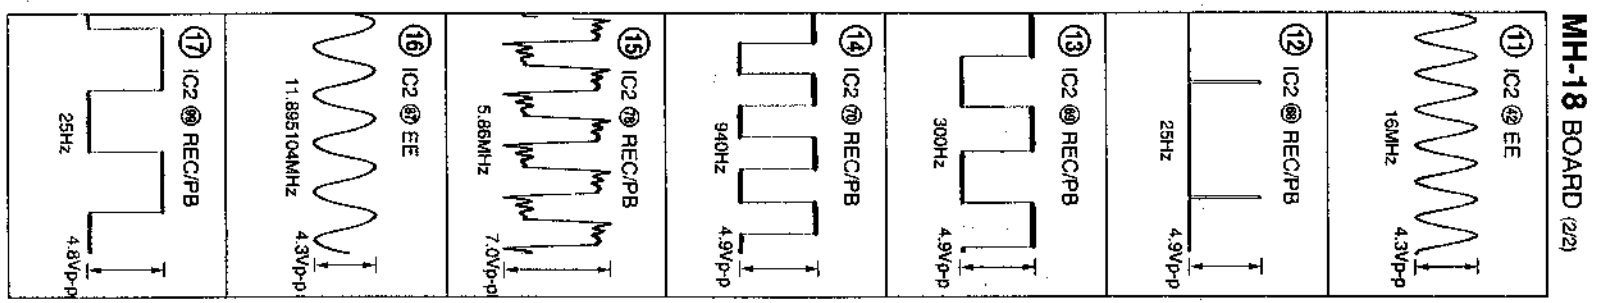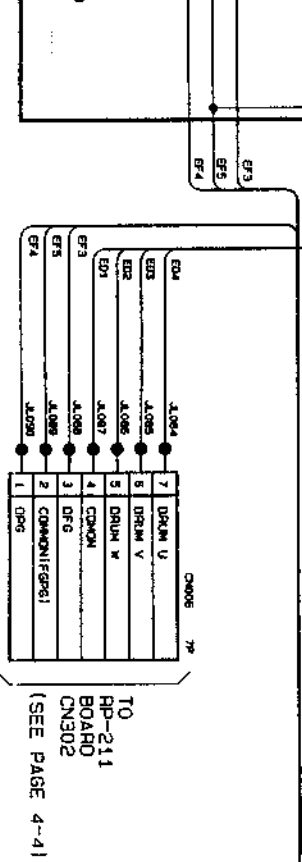
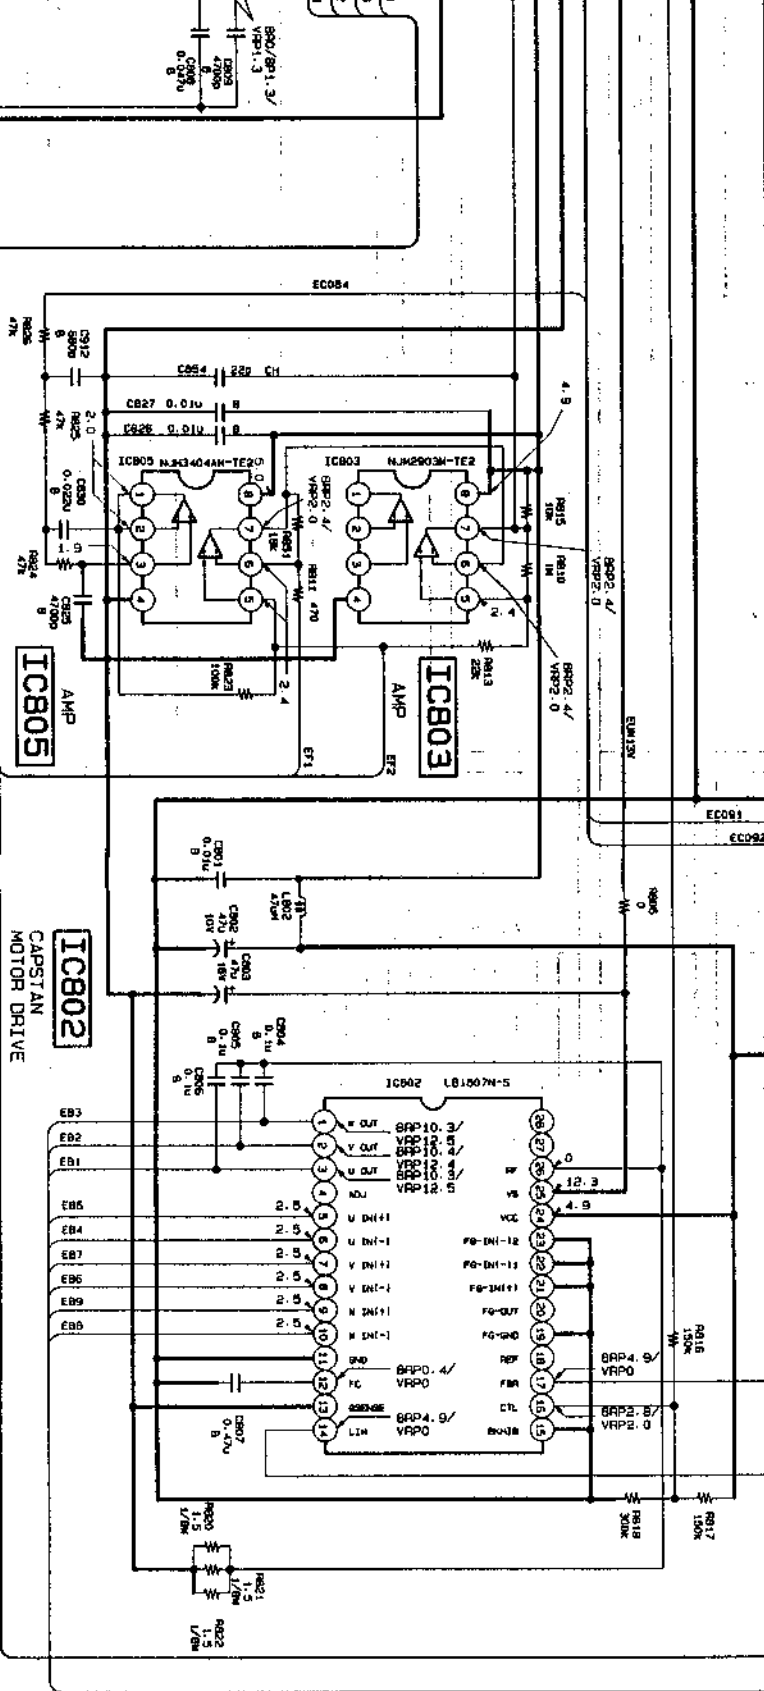
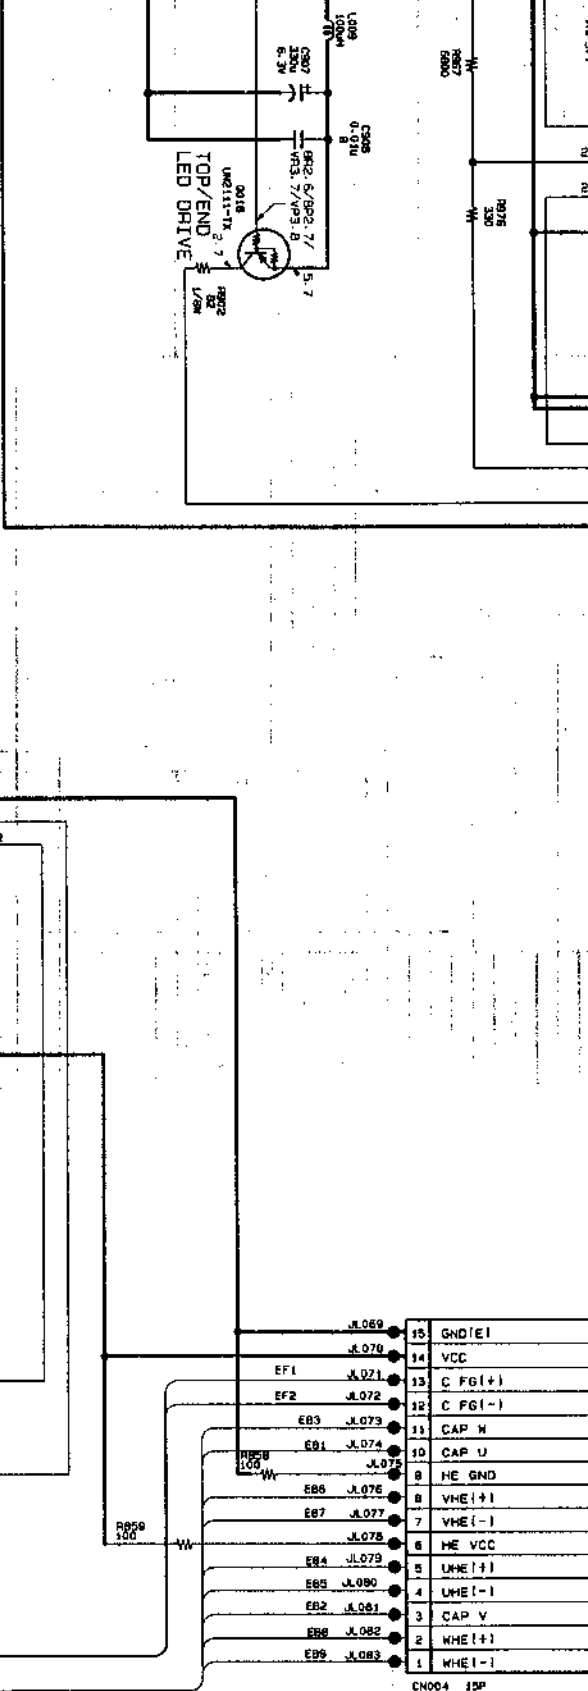


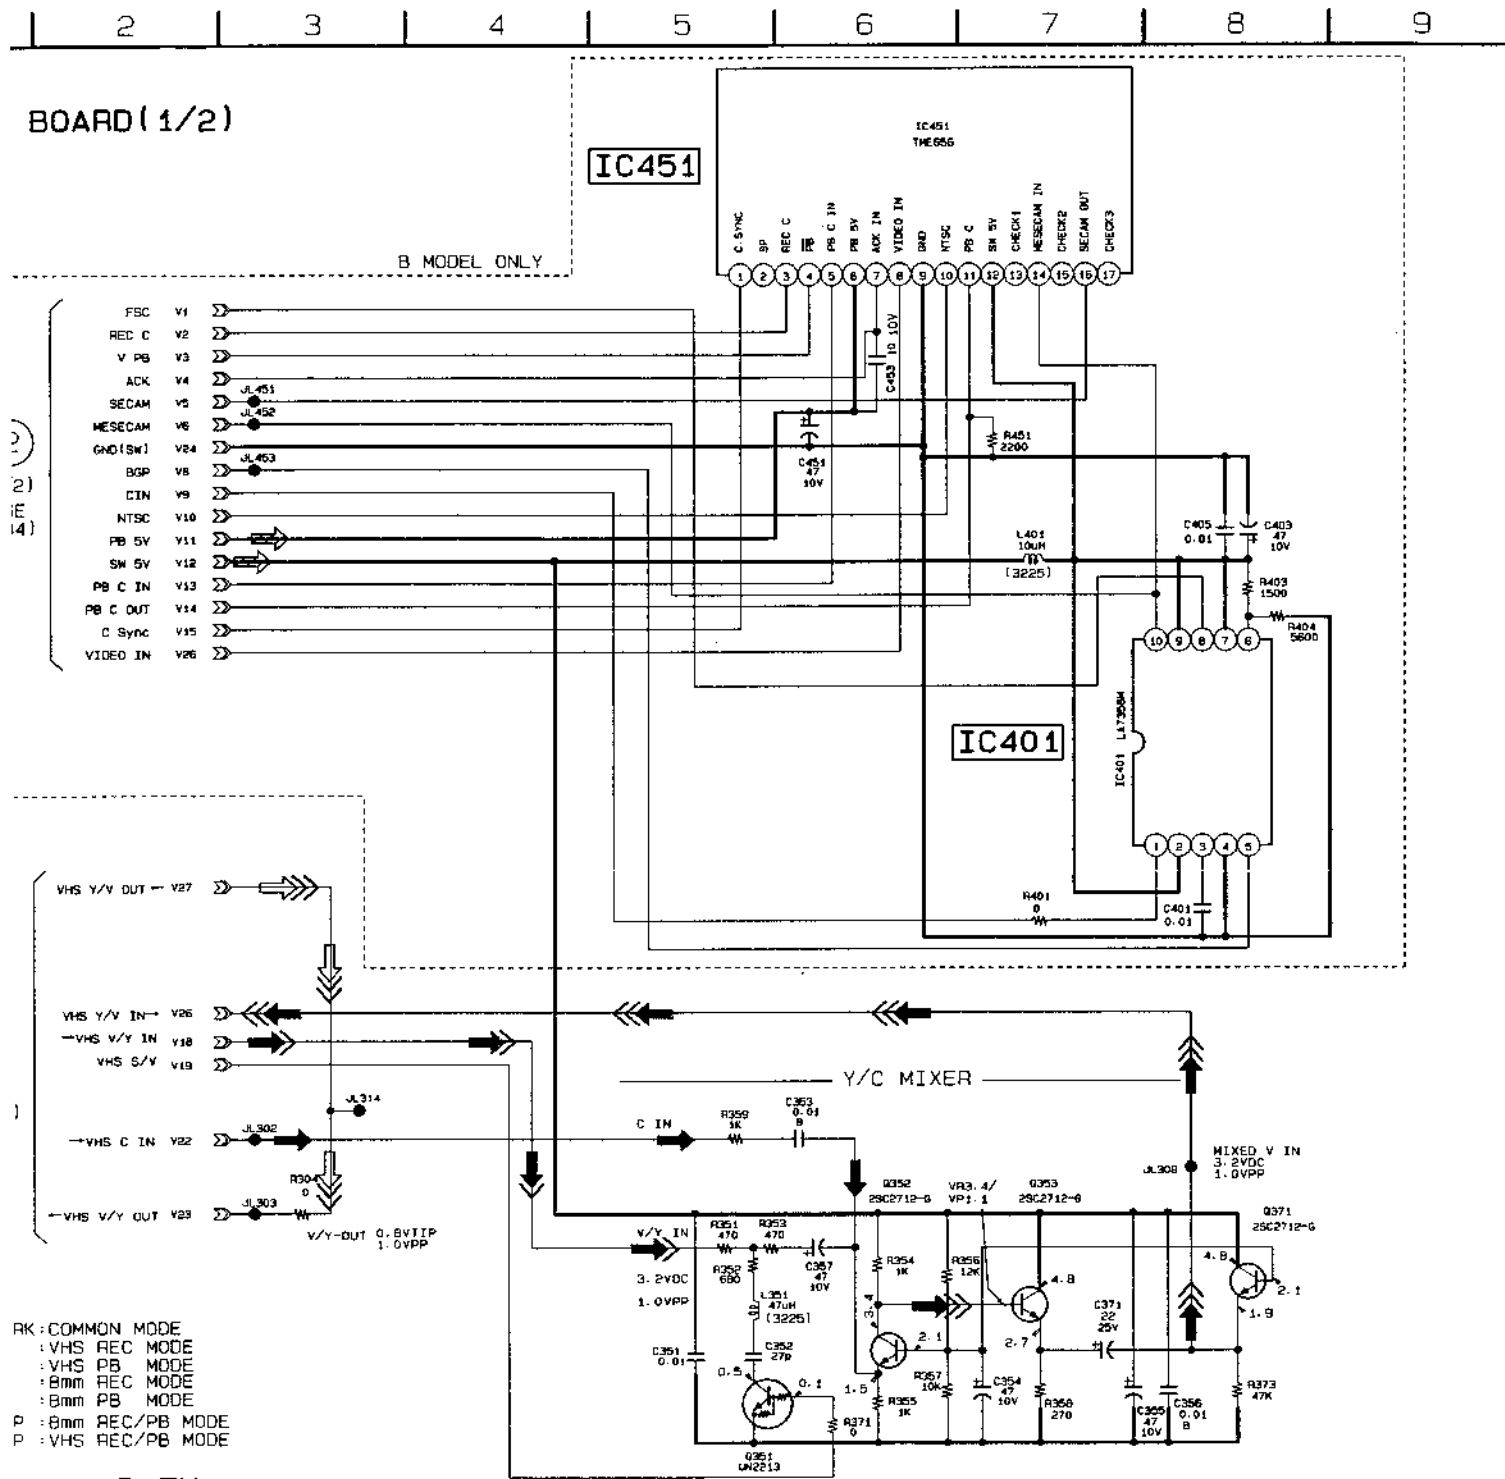

RV-50 BOARD

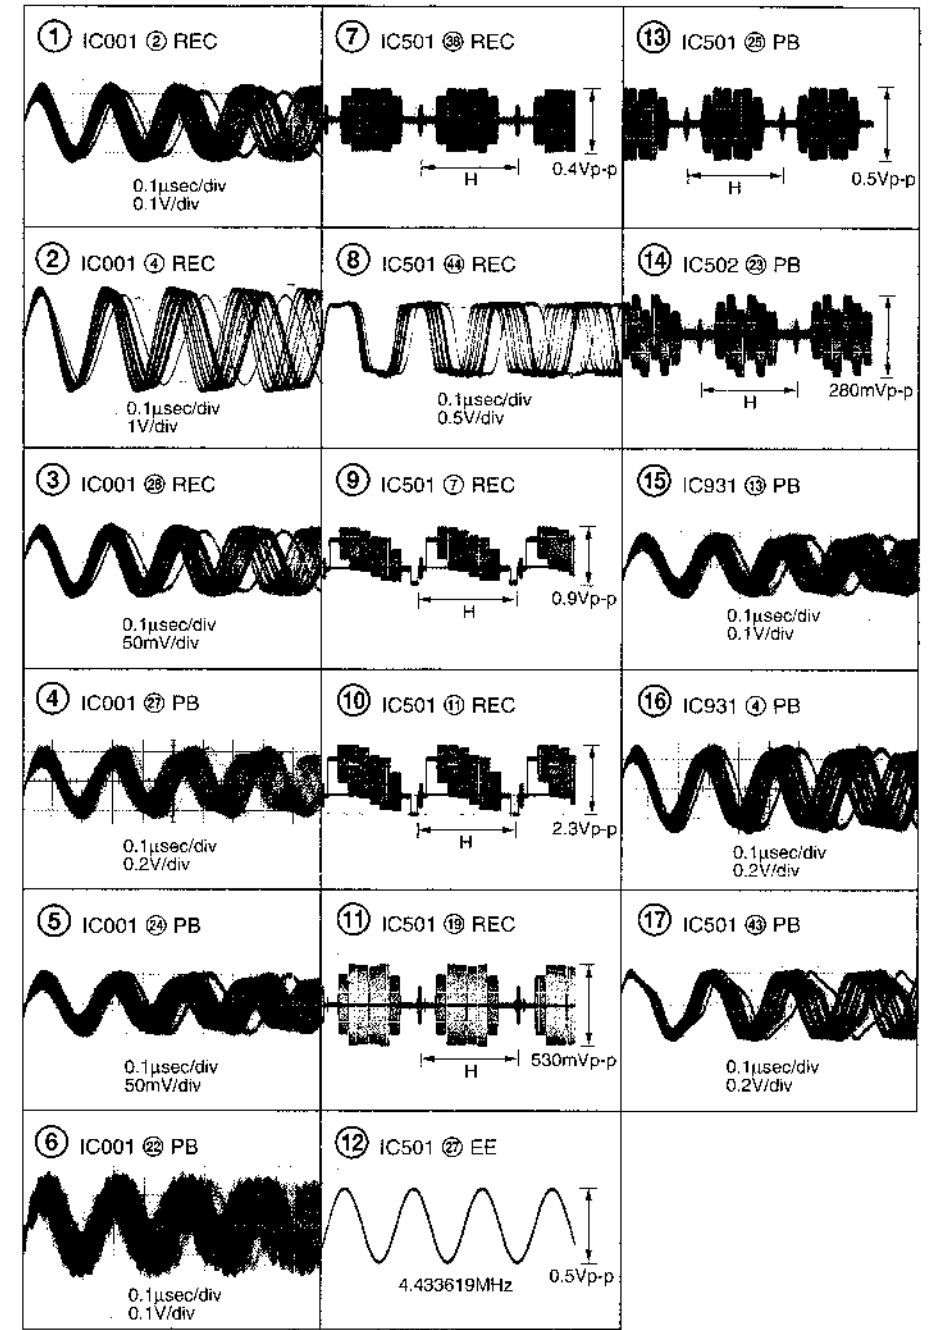

mounted in this model.

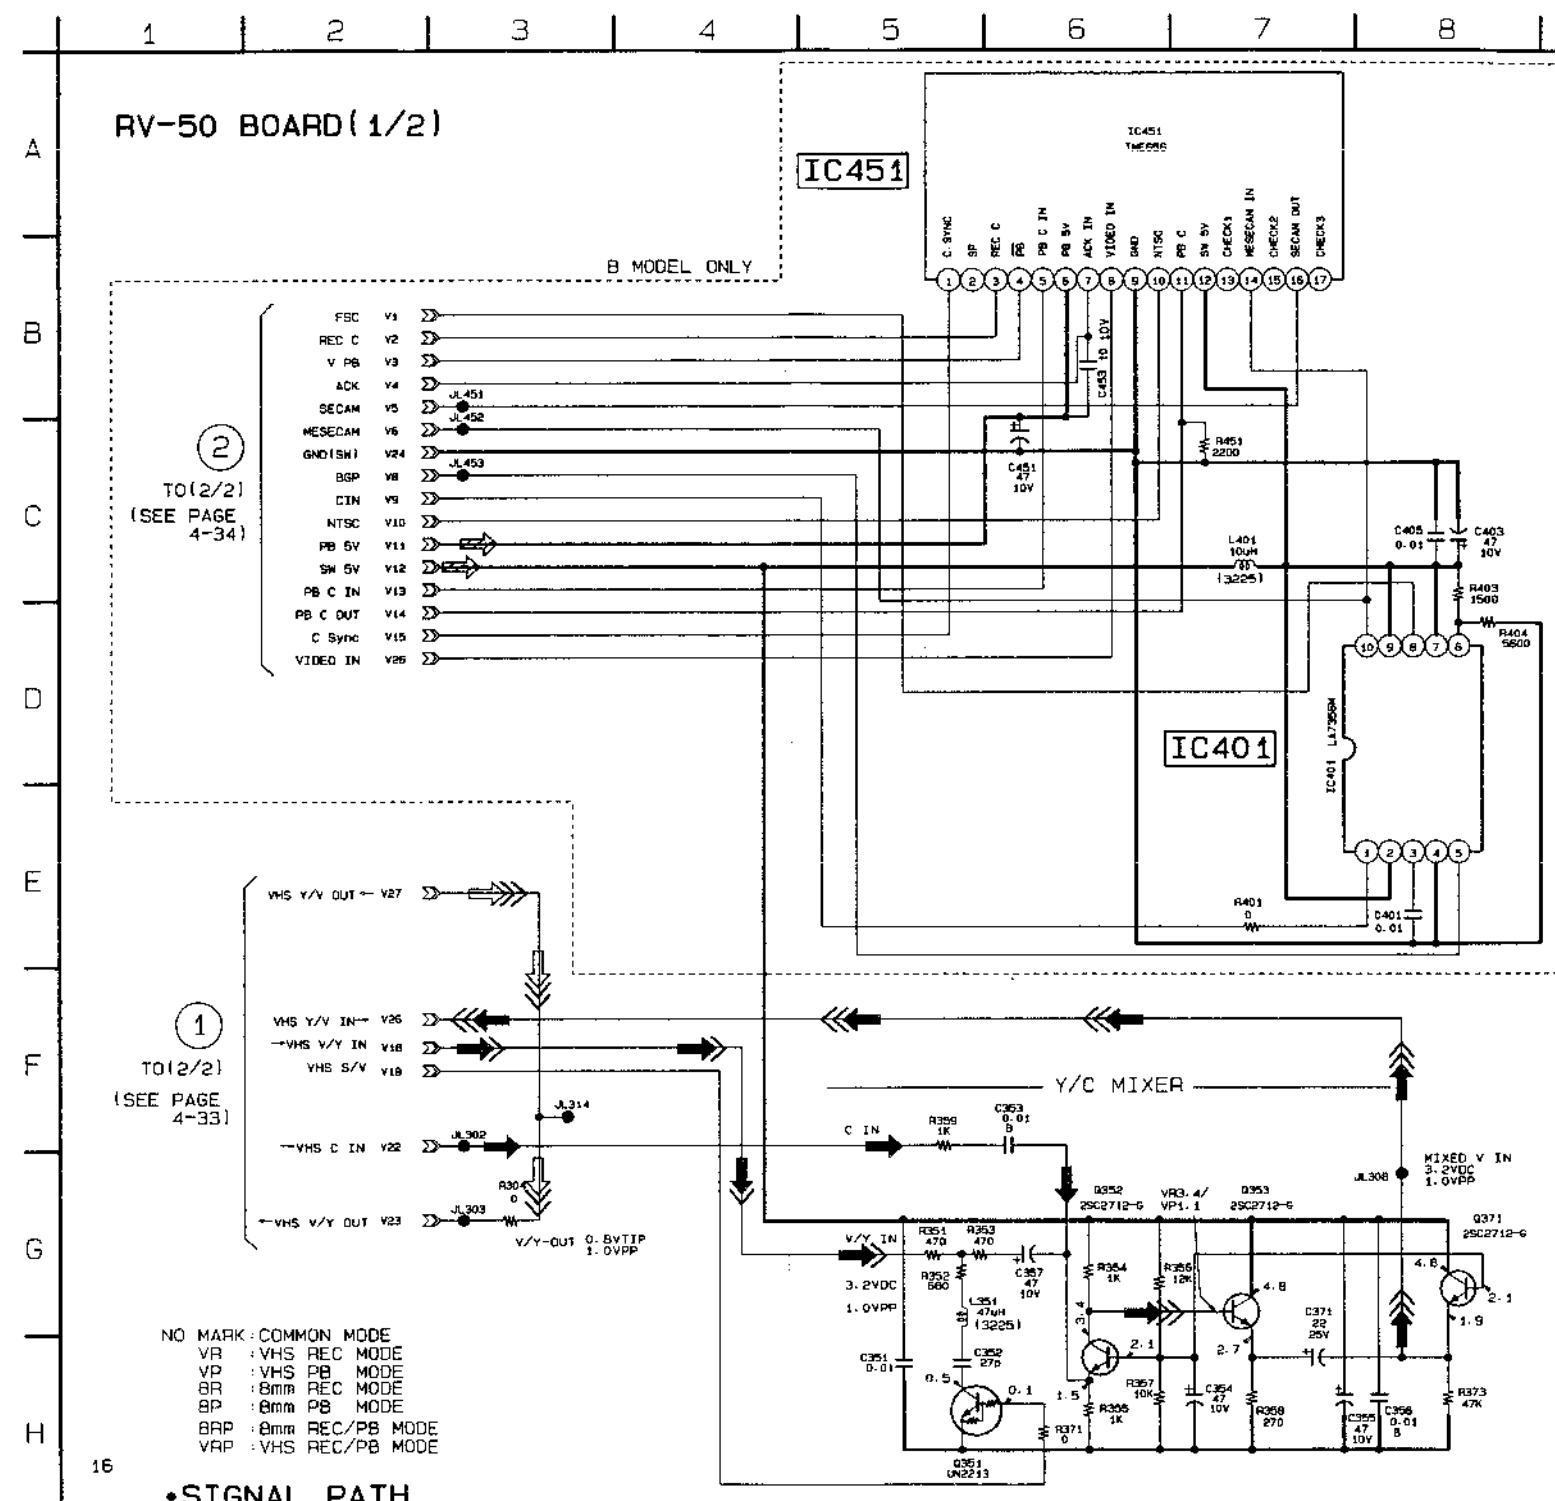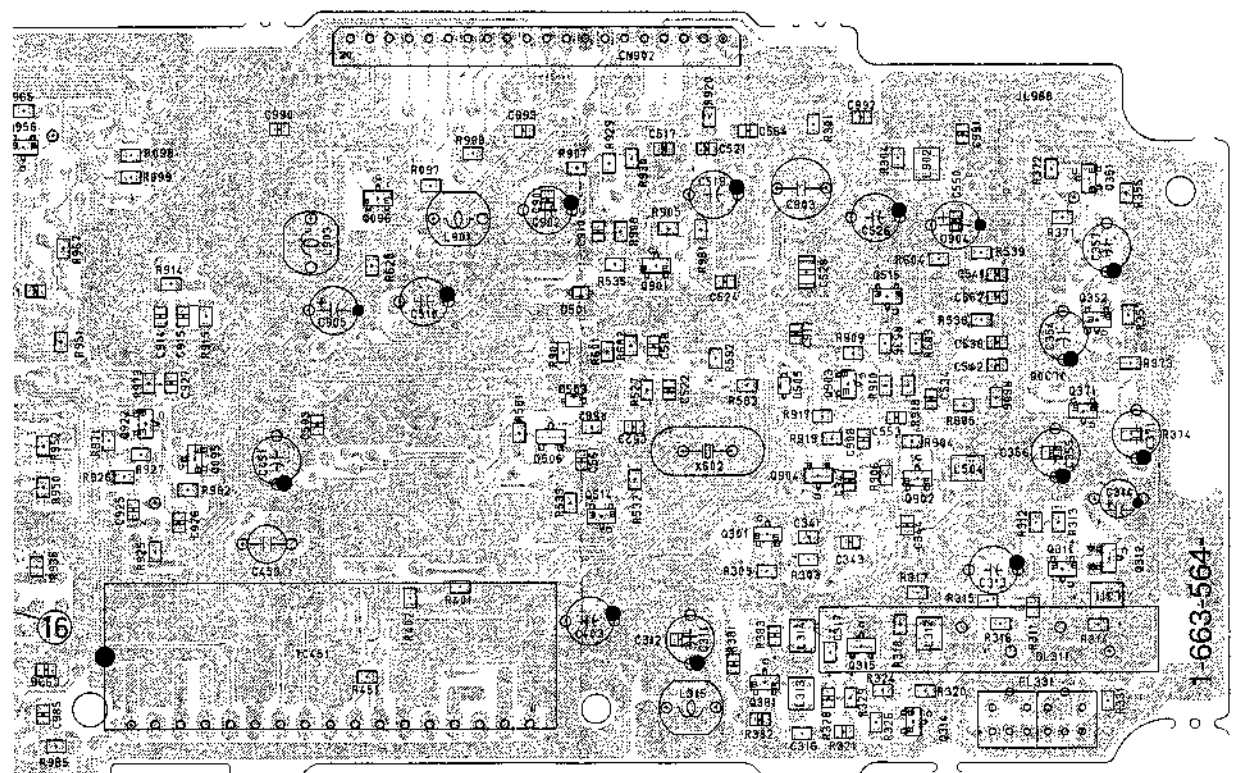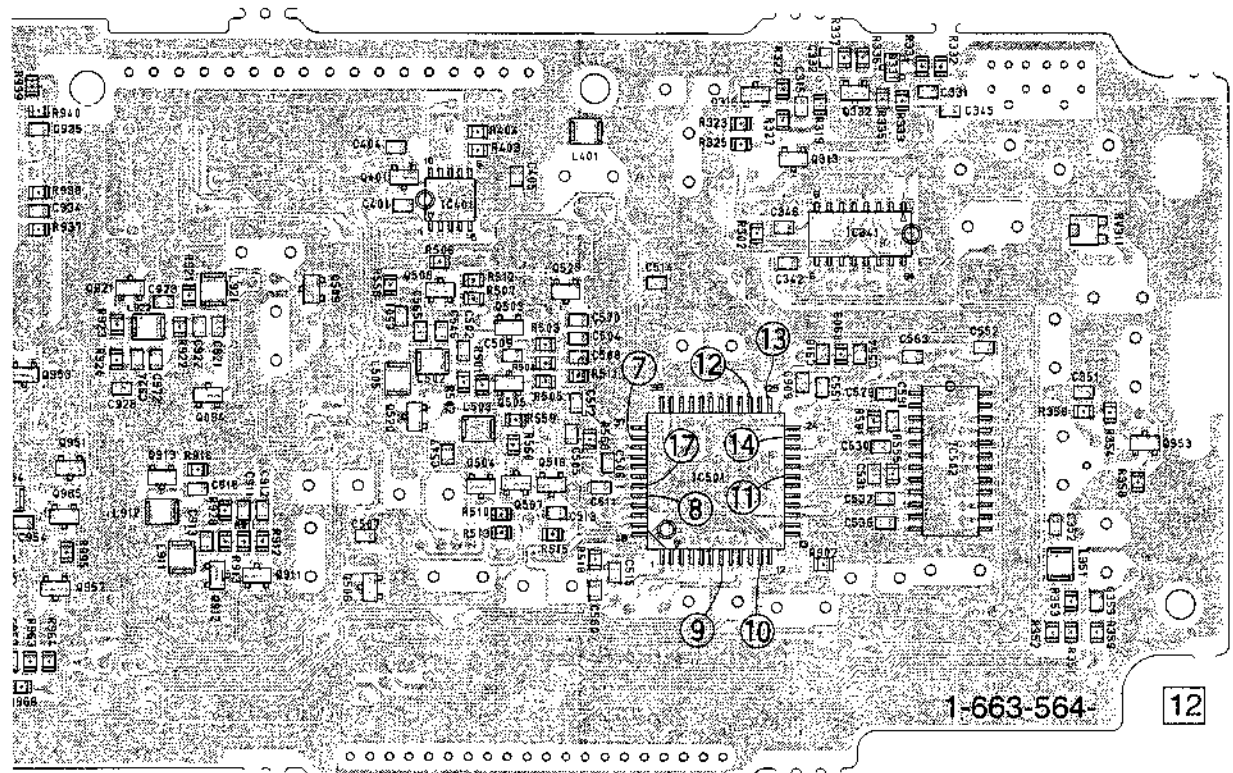

• SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC	→	→	→	
PB			→	

RV-50 (VHS REC/PB AMP) PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM


— Ref. No. RV-50 Board; 3,000 Series —

There are few cases that the part printed on this diagram isn't mounted in this model.



RV-50 BOARD

CN001	F-3	Q351	E-10
CN002	G-1	Q352	F-10
CN901	E-2	Q353	C-10
CN902	F-8	Q371	F-10
		Q503	B-7
D501	F-8	Q504	C-7
D503	F-8	Q505	B-7
D505	F-9	Q506	C-7
D506	F-8	Q507	C-7
D951	C-5	Q508	B-7
		Q509	B-7
IC001	F-4	Q514	G-8
IC051	F-2	Q515	F-9
IC401	B-7	Q518	C-8
IC451	G-7	Q520	B-7
IC501	C-8	Q525	B-8
IC502	C-9	Q610	A-5
IC931	G-5	Q901	F-8
		Q912	C-6
Q021	B-4	Q921	B-6
Q022	B-4	Q922	F-6
Q093	E-4	Q932	F-5
Q094	B-6		
Q095	F-6		


RV-50 BOARD (COMPONENT SIDE)

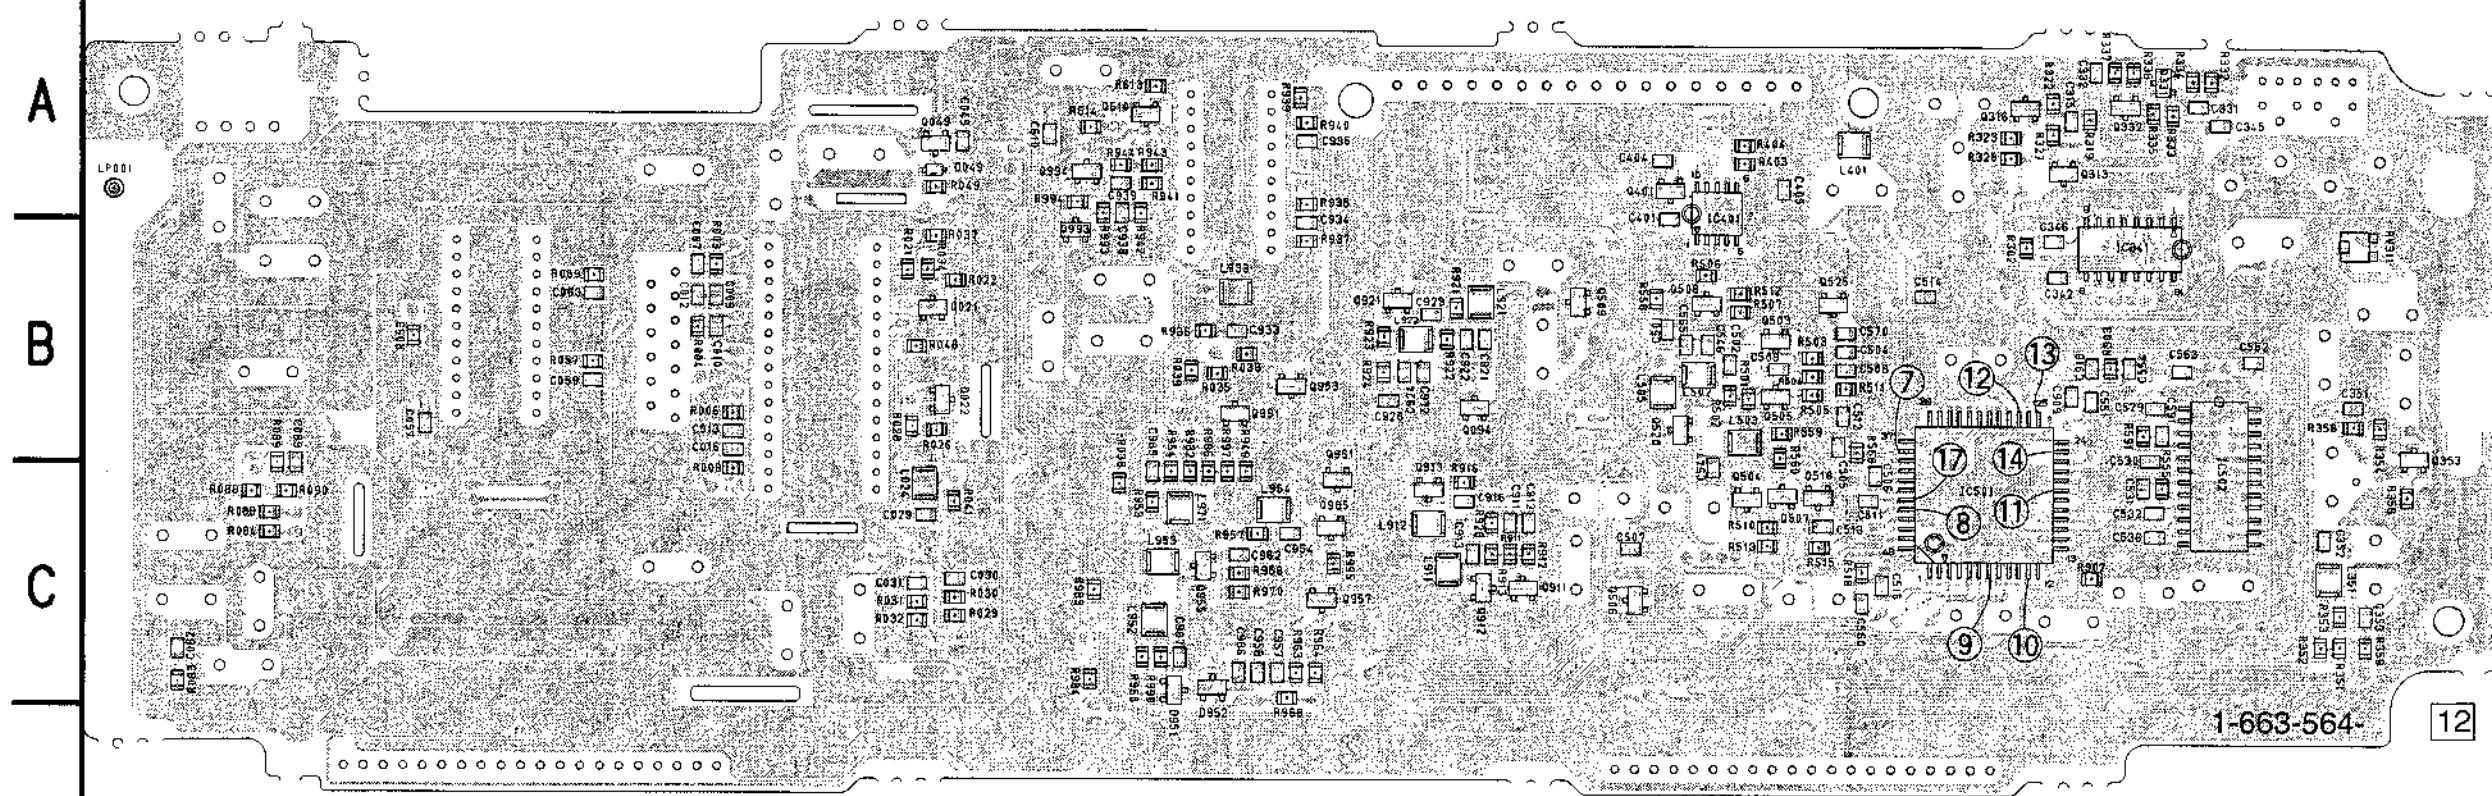


RV-50 BOARD (CONDUCTOR SIDE)

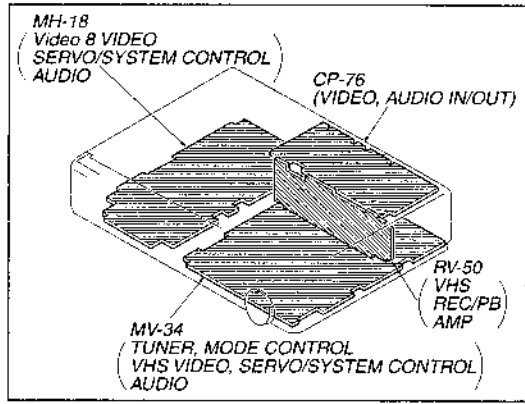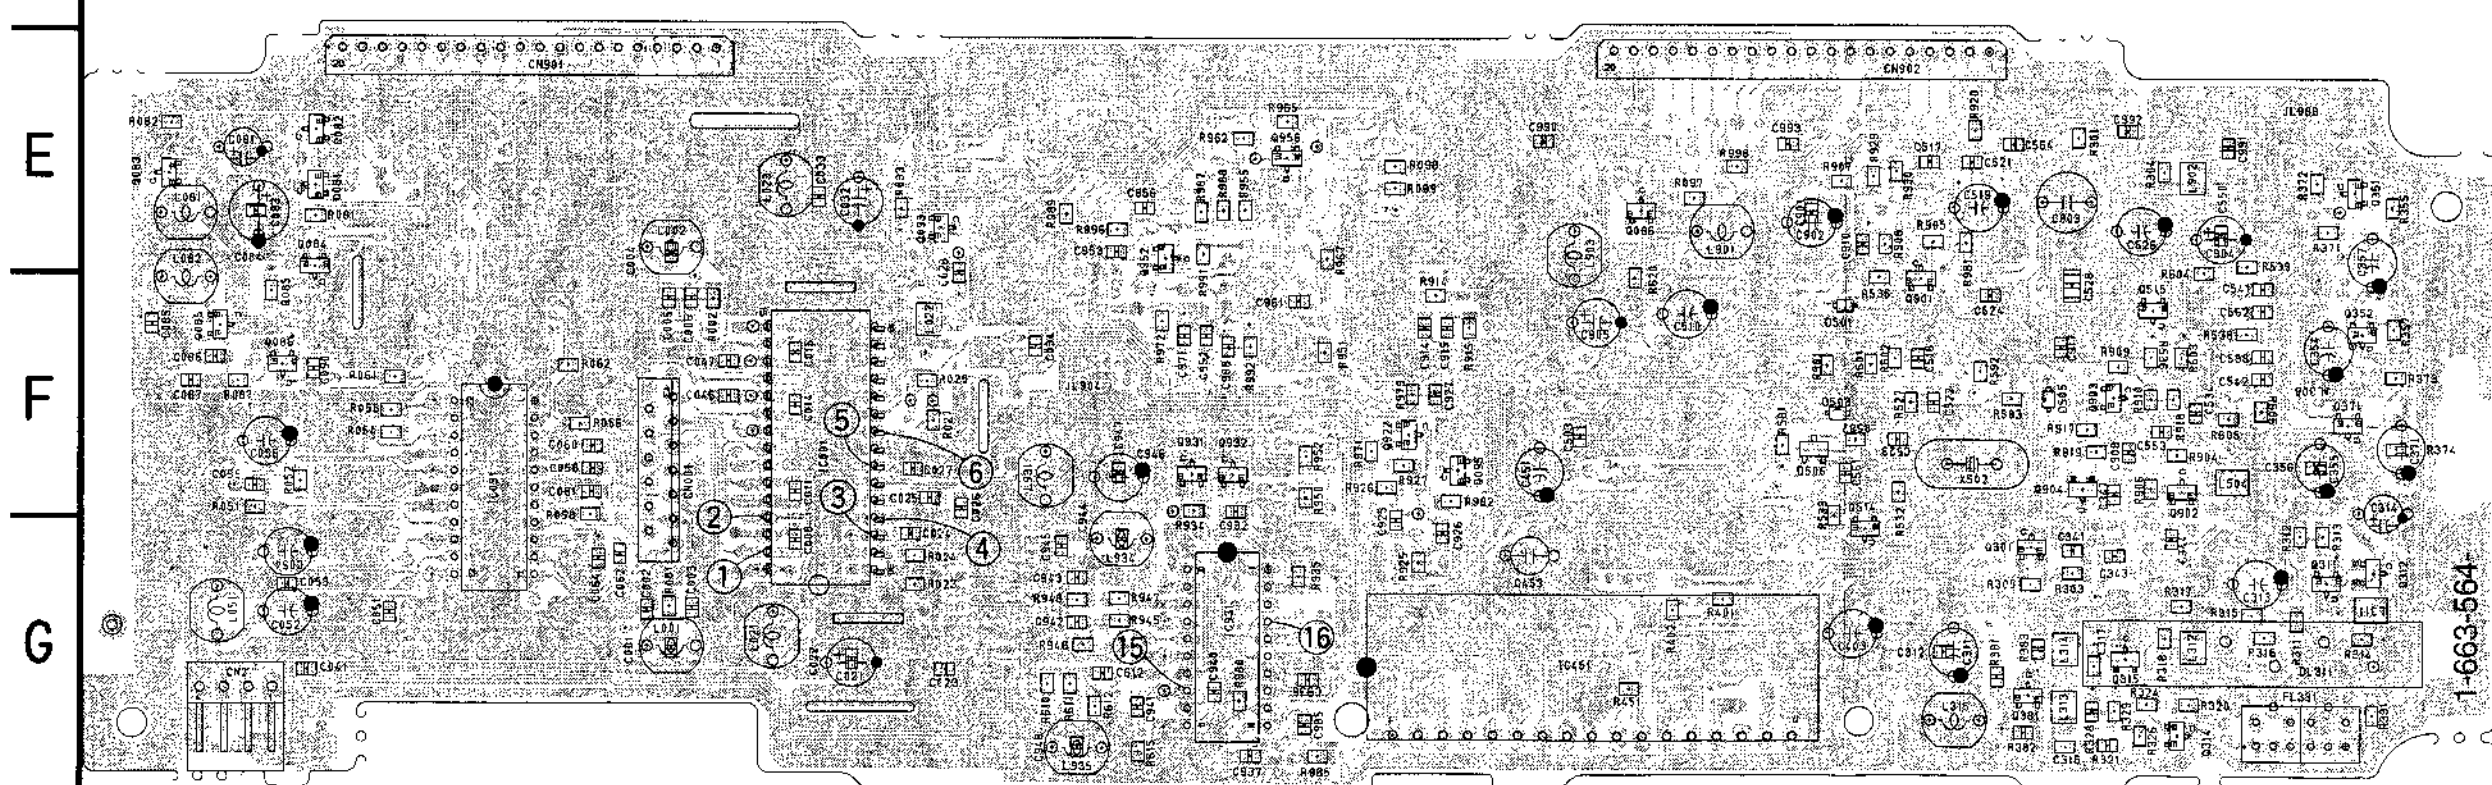

11 12 13 14 15 16 17 18 19

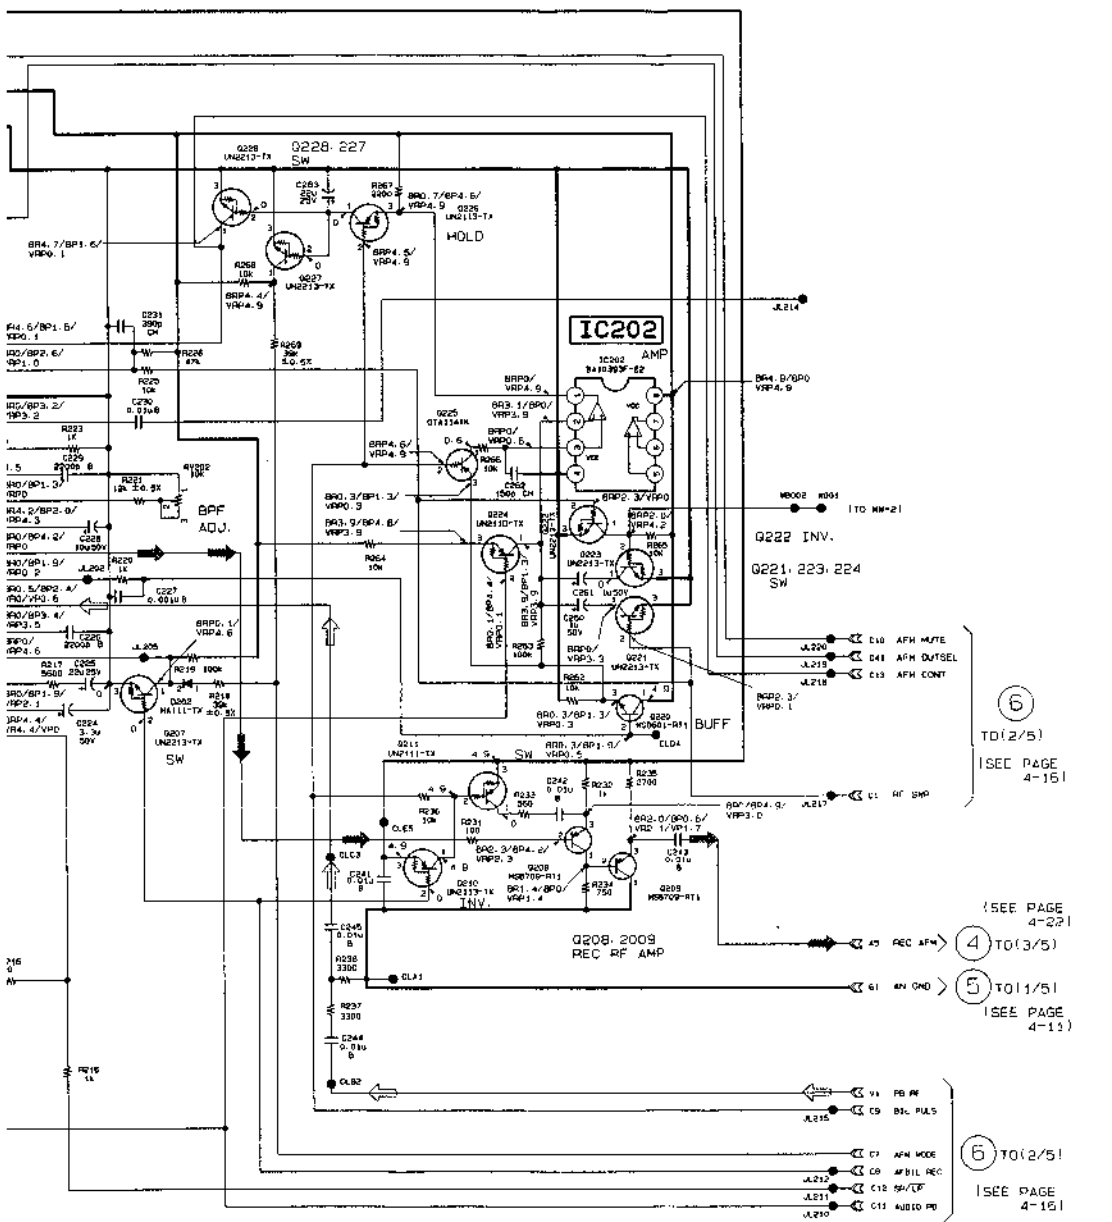


1 2 3 4 5 6 7 8 9 10

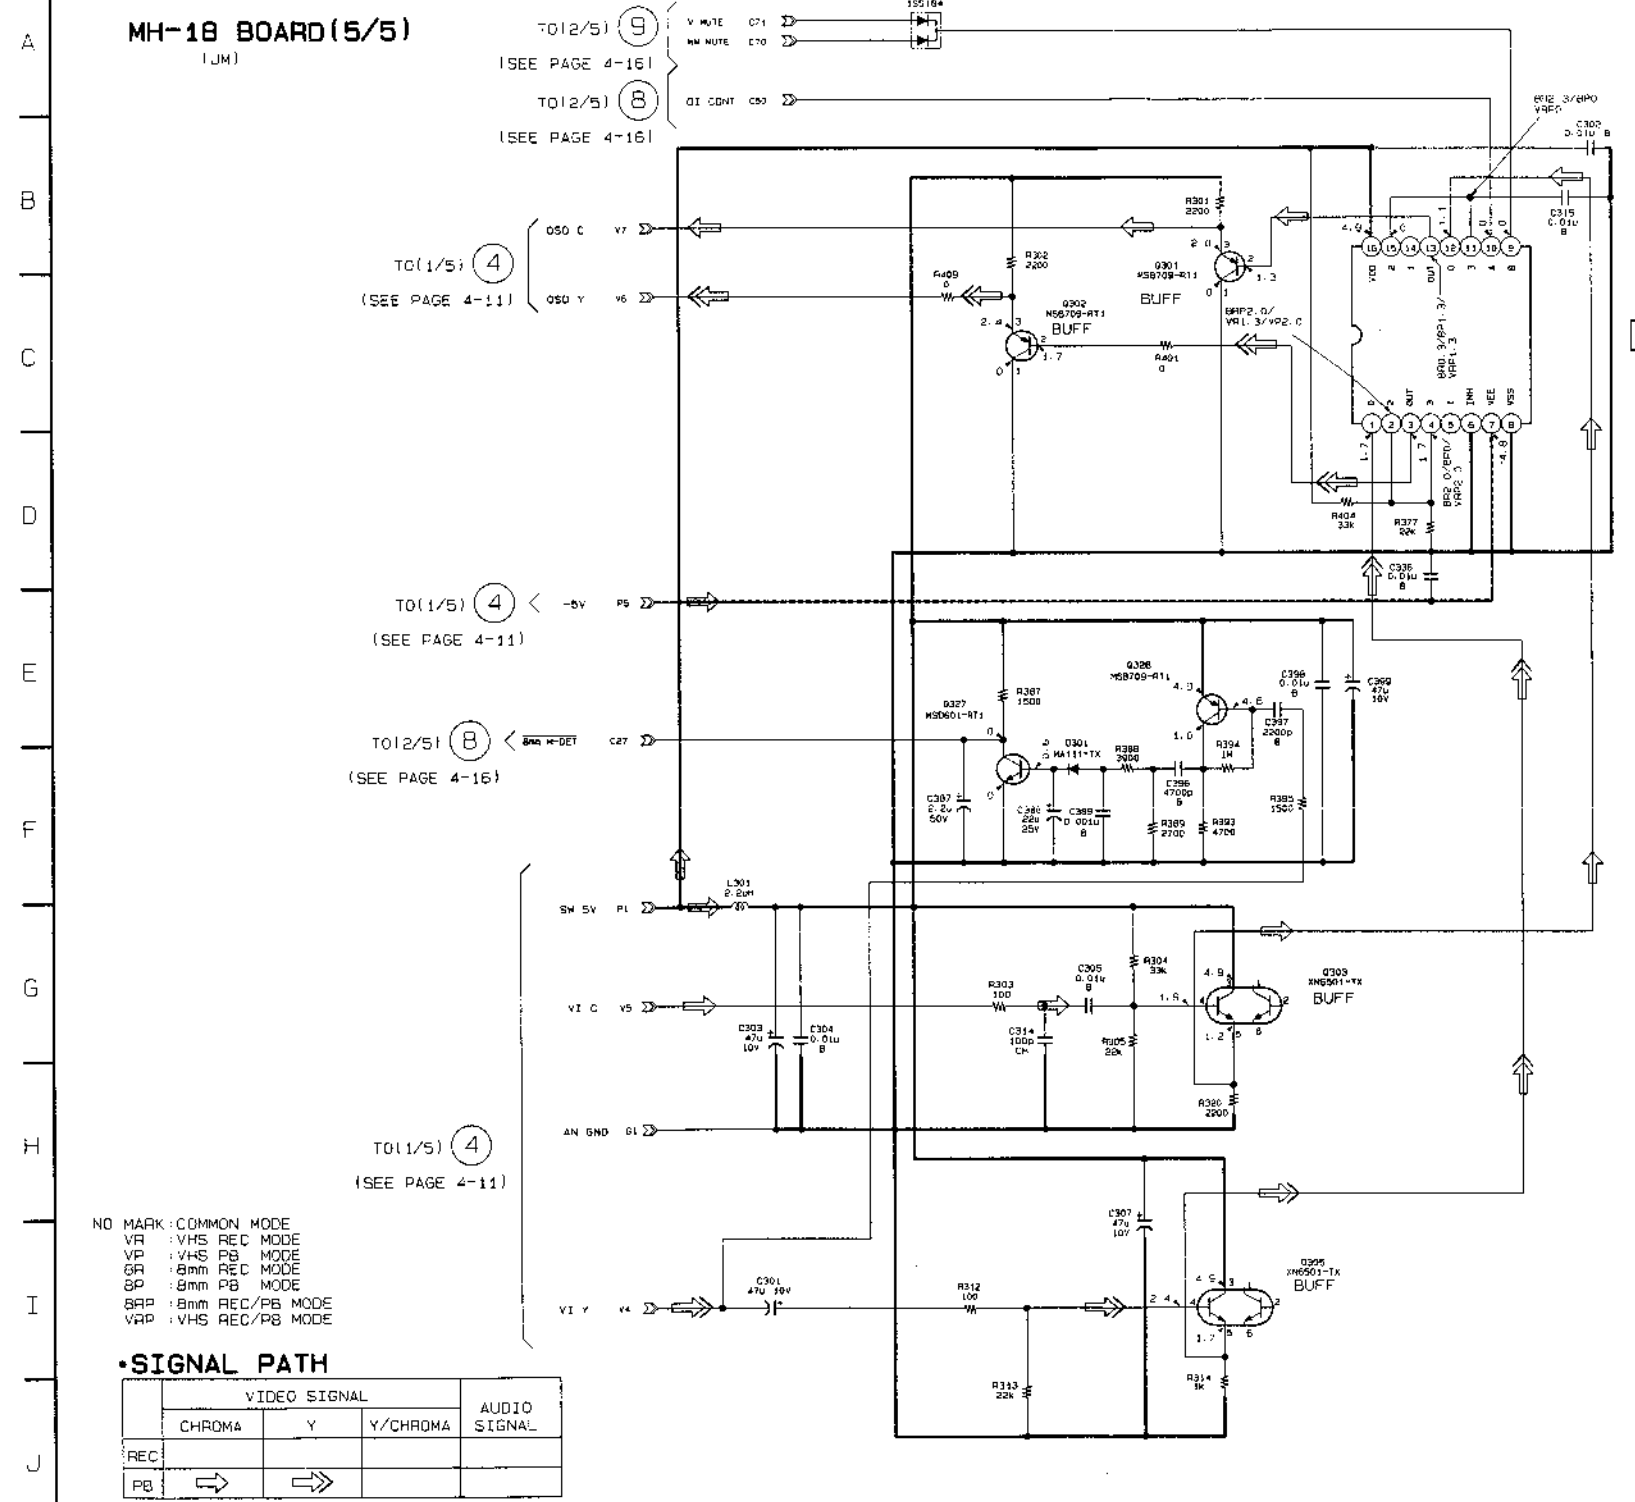

- C2 X1*PB > ③ T012/5
(SEE PAGE 4-16)
- V1 PB RF > ① T011/5
(SEE PAGE 4-11)
- P1 SW 5V > ③ T012/5
(SEE PAGE 4-16)
- C1 RF SWP > ① T011/5
(SEE PAGE 4-11)
- C3 RP PB MODE > ③ T012/5
(SEE PAGE 4-16)
- V8 AGC IN > ① T011/5
(SEE PAGE 4-11)
- V9 AGC OUT > ③ T012/5
(SEE PAGE 4-16)
- C28 JOG > ① T011/5
(SEE PAGE 4-11)
- C28 ME/MP > ③ T012/5
(SEE PAGE 4-16)
- C5 FE DN > ① T011/5
(SEE PAGE 4-11)
- C17 DDP > ③ T012/5
(SEE PAGE 4-16)
- C50 NORMAL > ① T011/5
(SEE PAGE 4-11)
- V3 REC C RF > ④ (SEE PAGE 4-24)
- A5 REC AFM > ③ T012/5
(SEE PAGE 4-16)
- C6 REC ATF > ④ (SEE PAGE 4-24)
- G1 AN GND > ① T011/5
(SEE PAGE 4-11)
- V2 REC Y RF > ③ T012/5
(SEE PAGE 4-16)


MH-18 BOARD (4/5)
(AU)

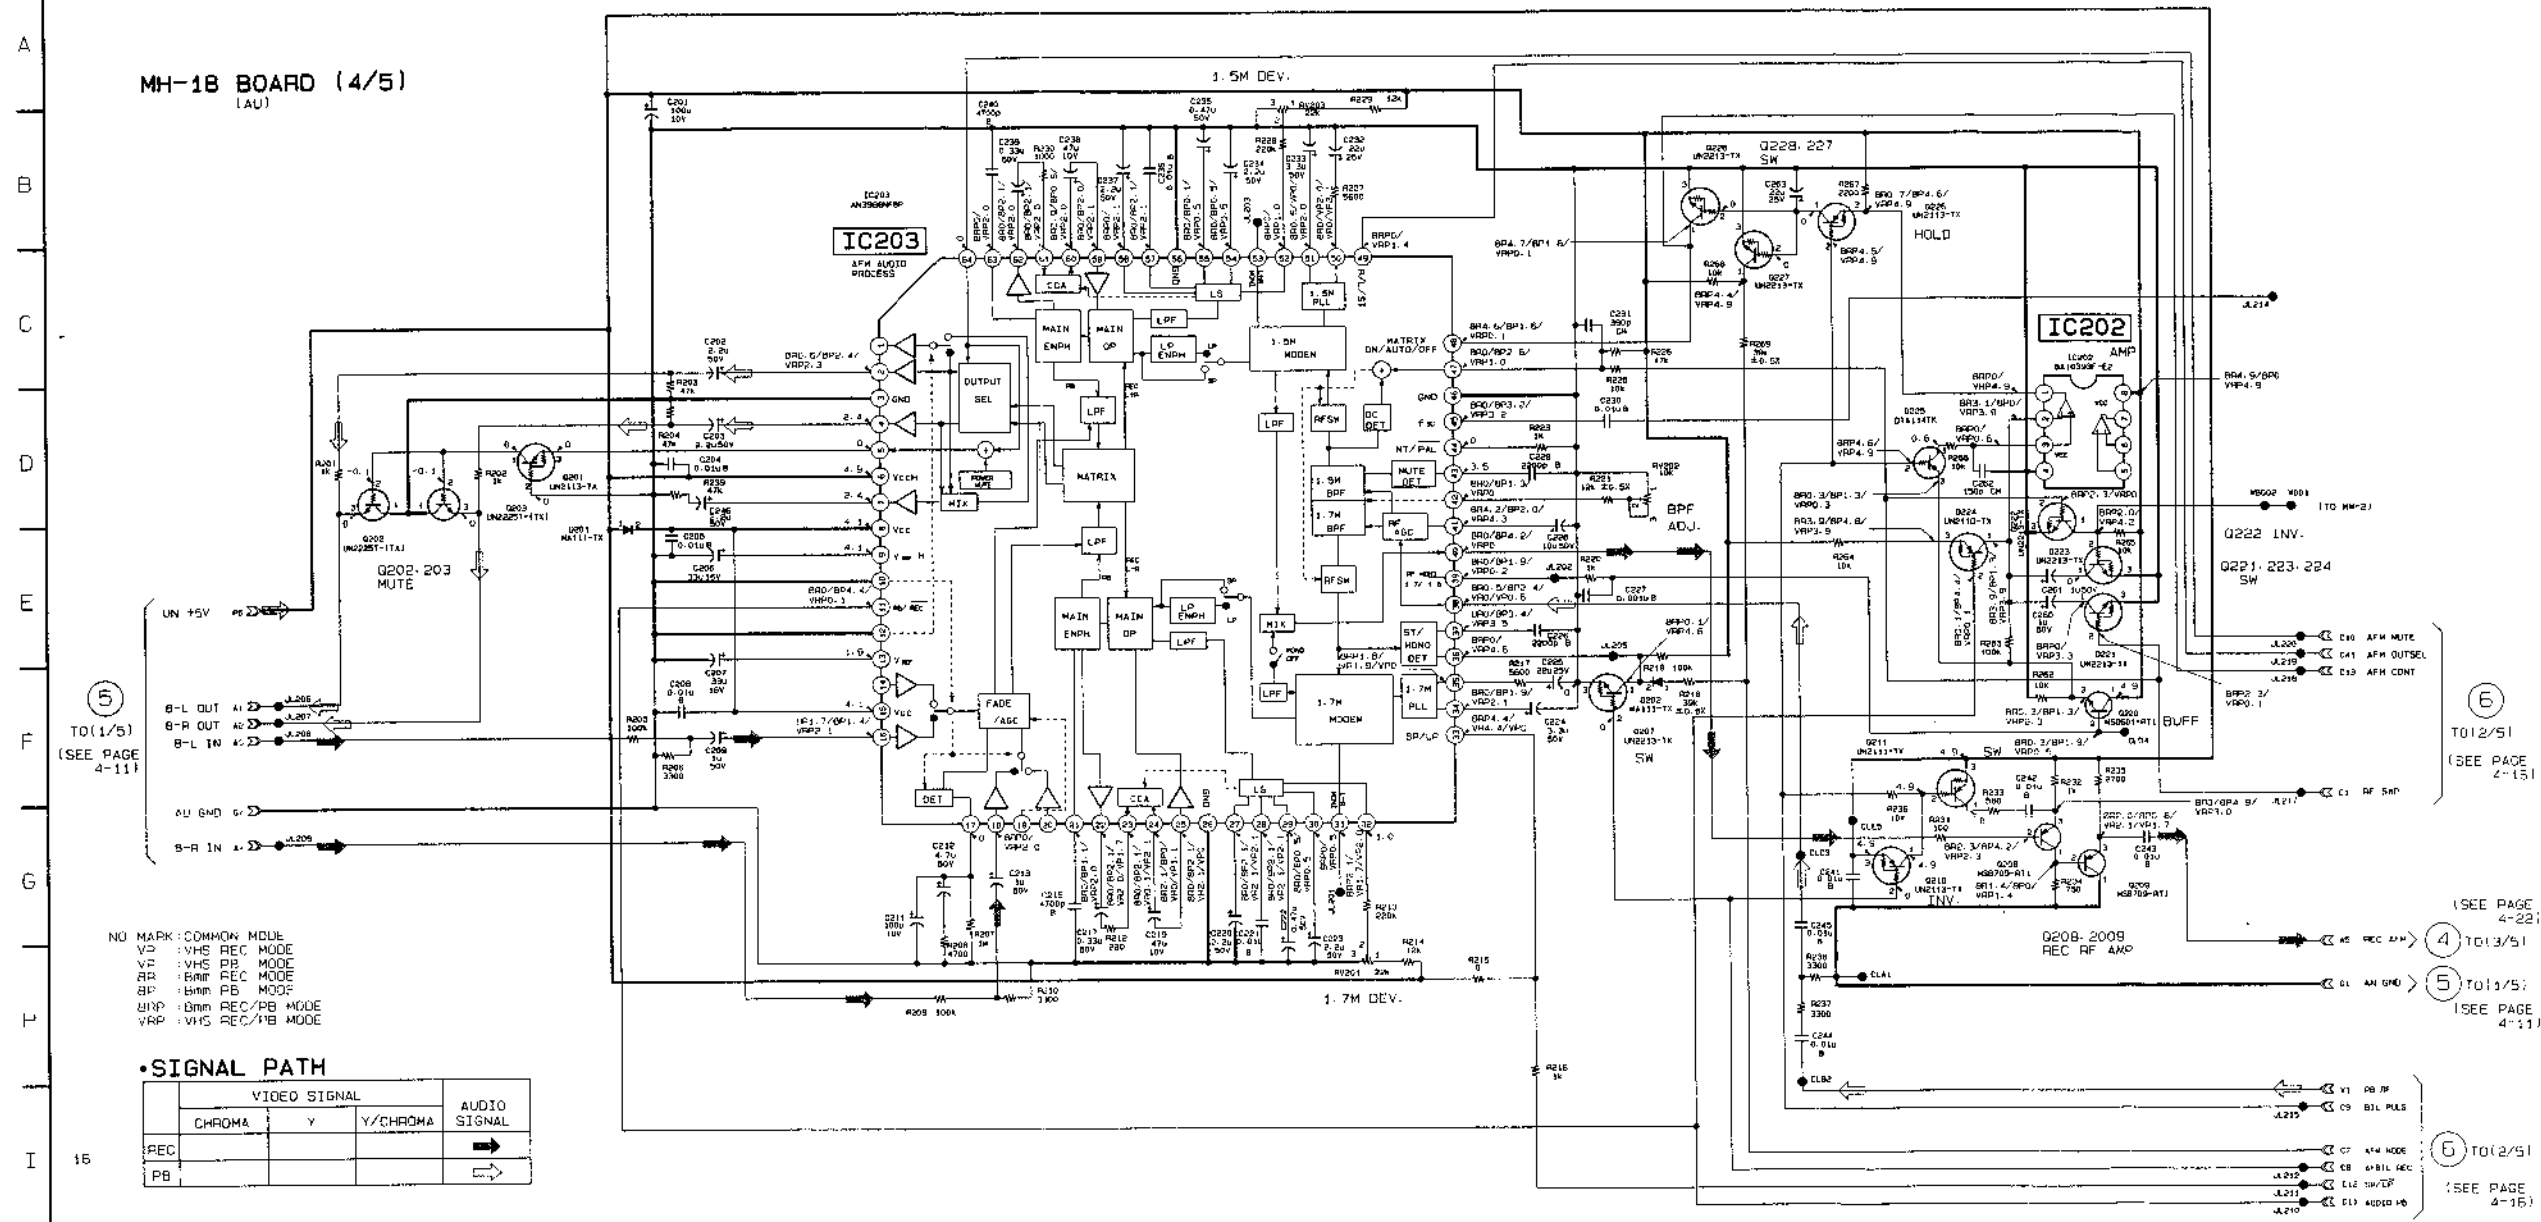

RV-50 (VHS REC/PB AMP) SCHEMATIC DIAGRAM

— Ref. No. RV-50 Board; 3,000 Series —


• See page 4-26 for RV-50 BOARD printed wiring board.

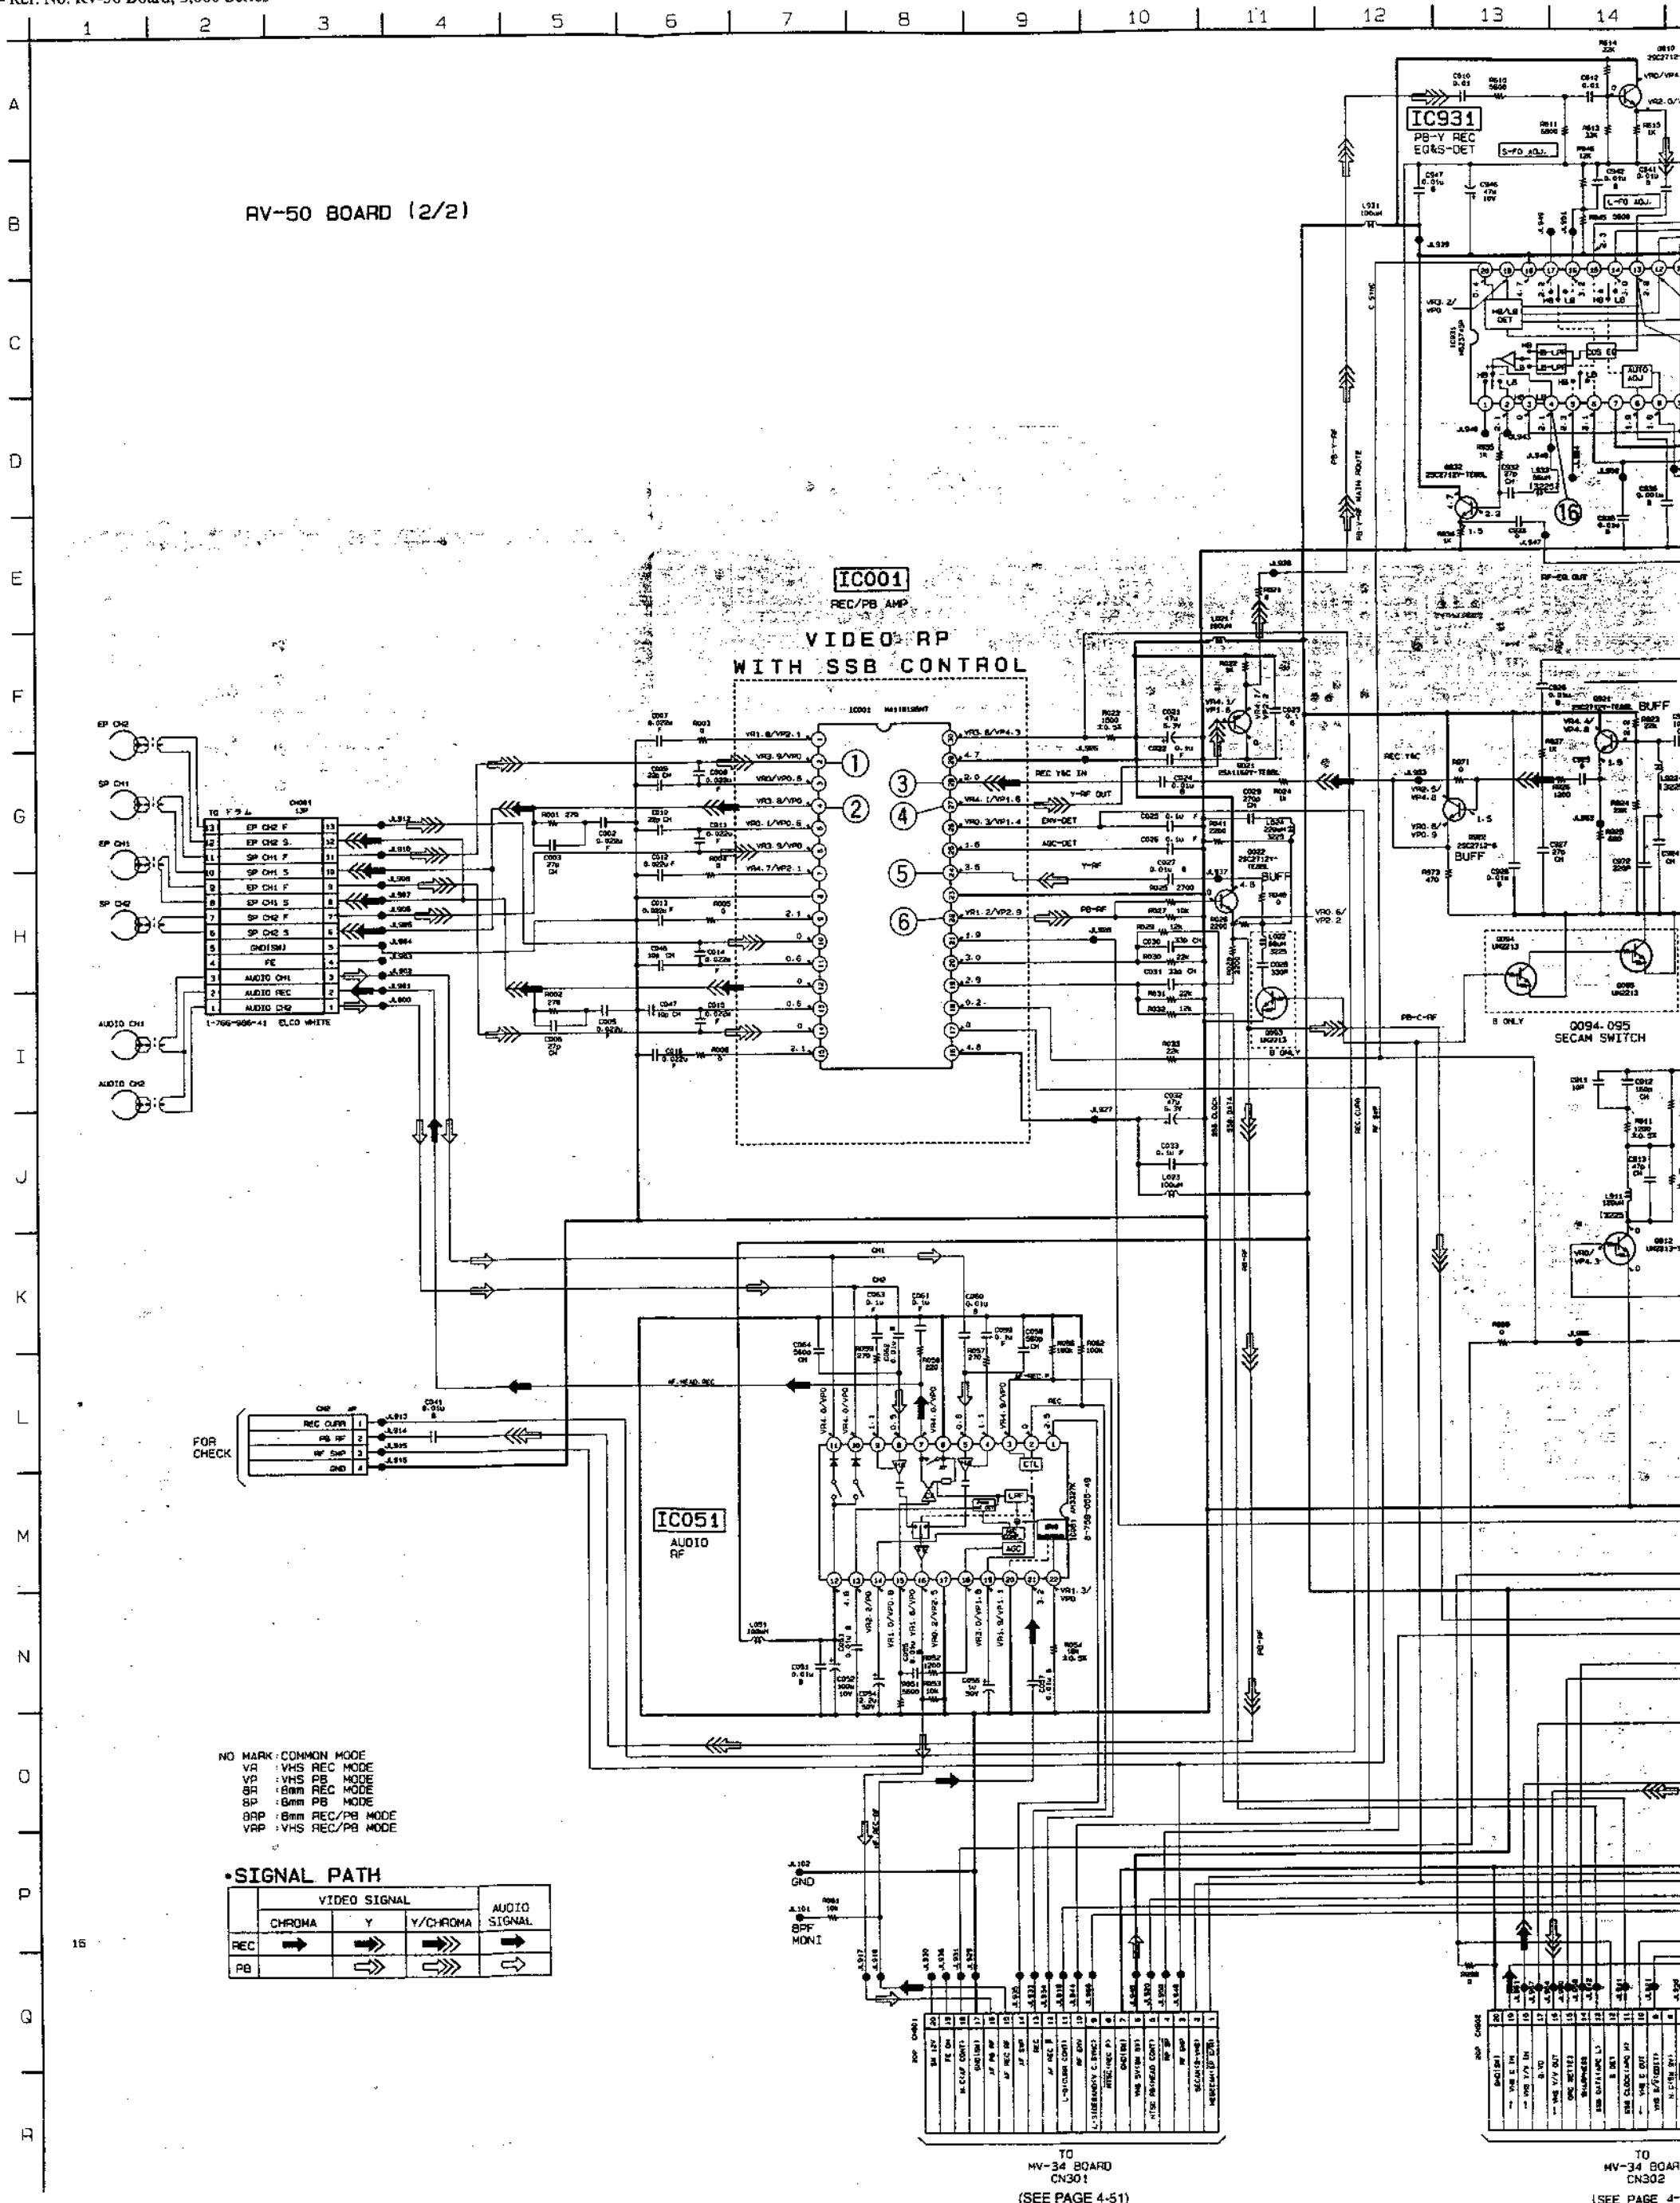

NO MARK: COMMON MODE
 VR : VHS REC MODE
 VP : VHS PB MODE
 SR : S-BM REC MODE
 SP : S-BM PB MODE
 SRP : S-BM REC/PB MODE
 VRP : VHS REC/PB MODE

•SIGNAL PATH


	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC	→	→	→	→
PB	→	→	→	→

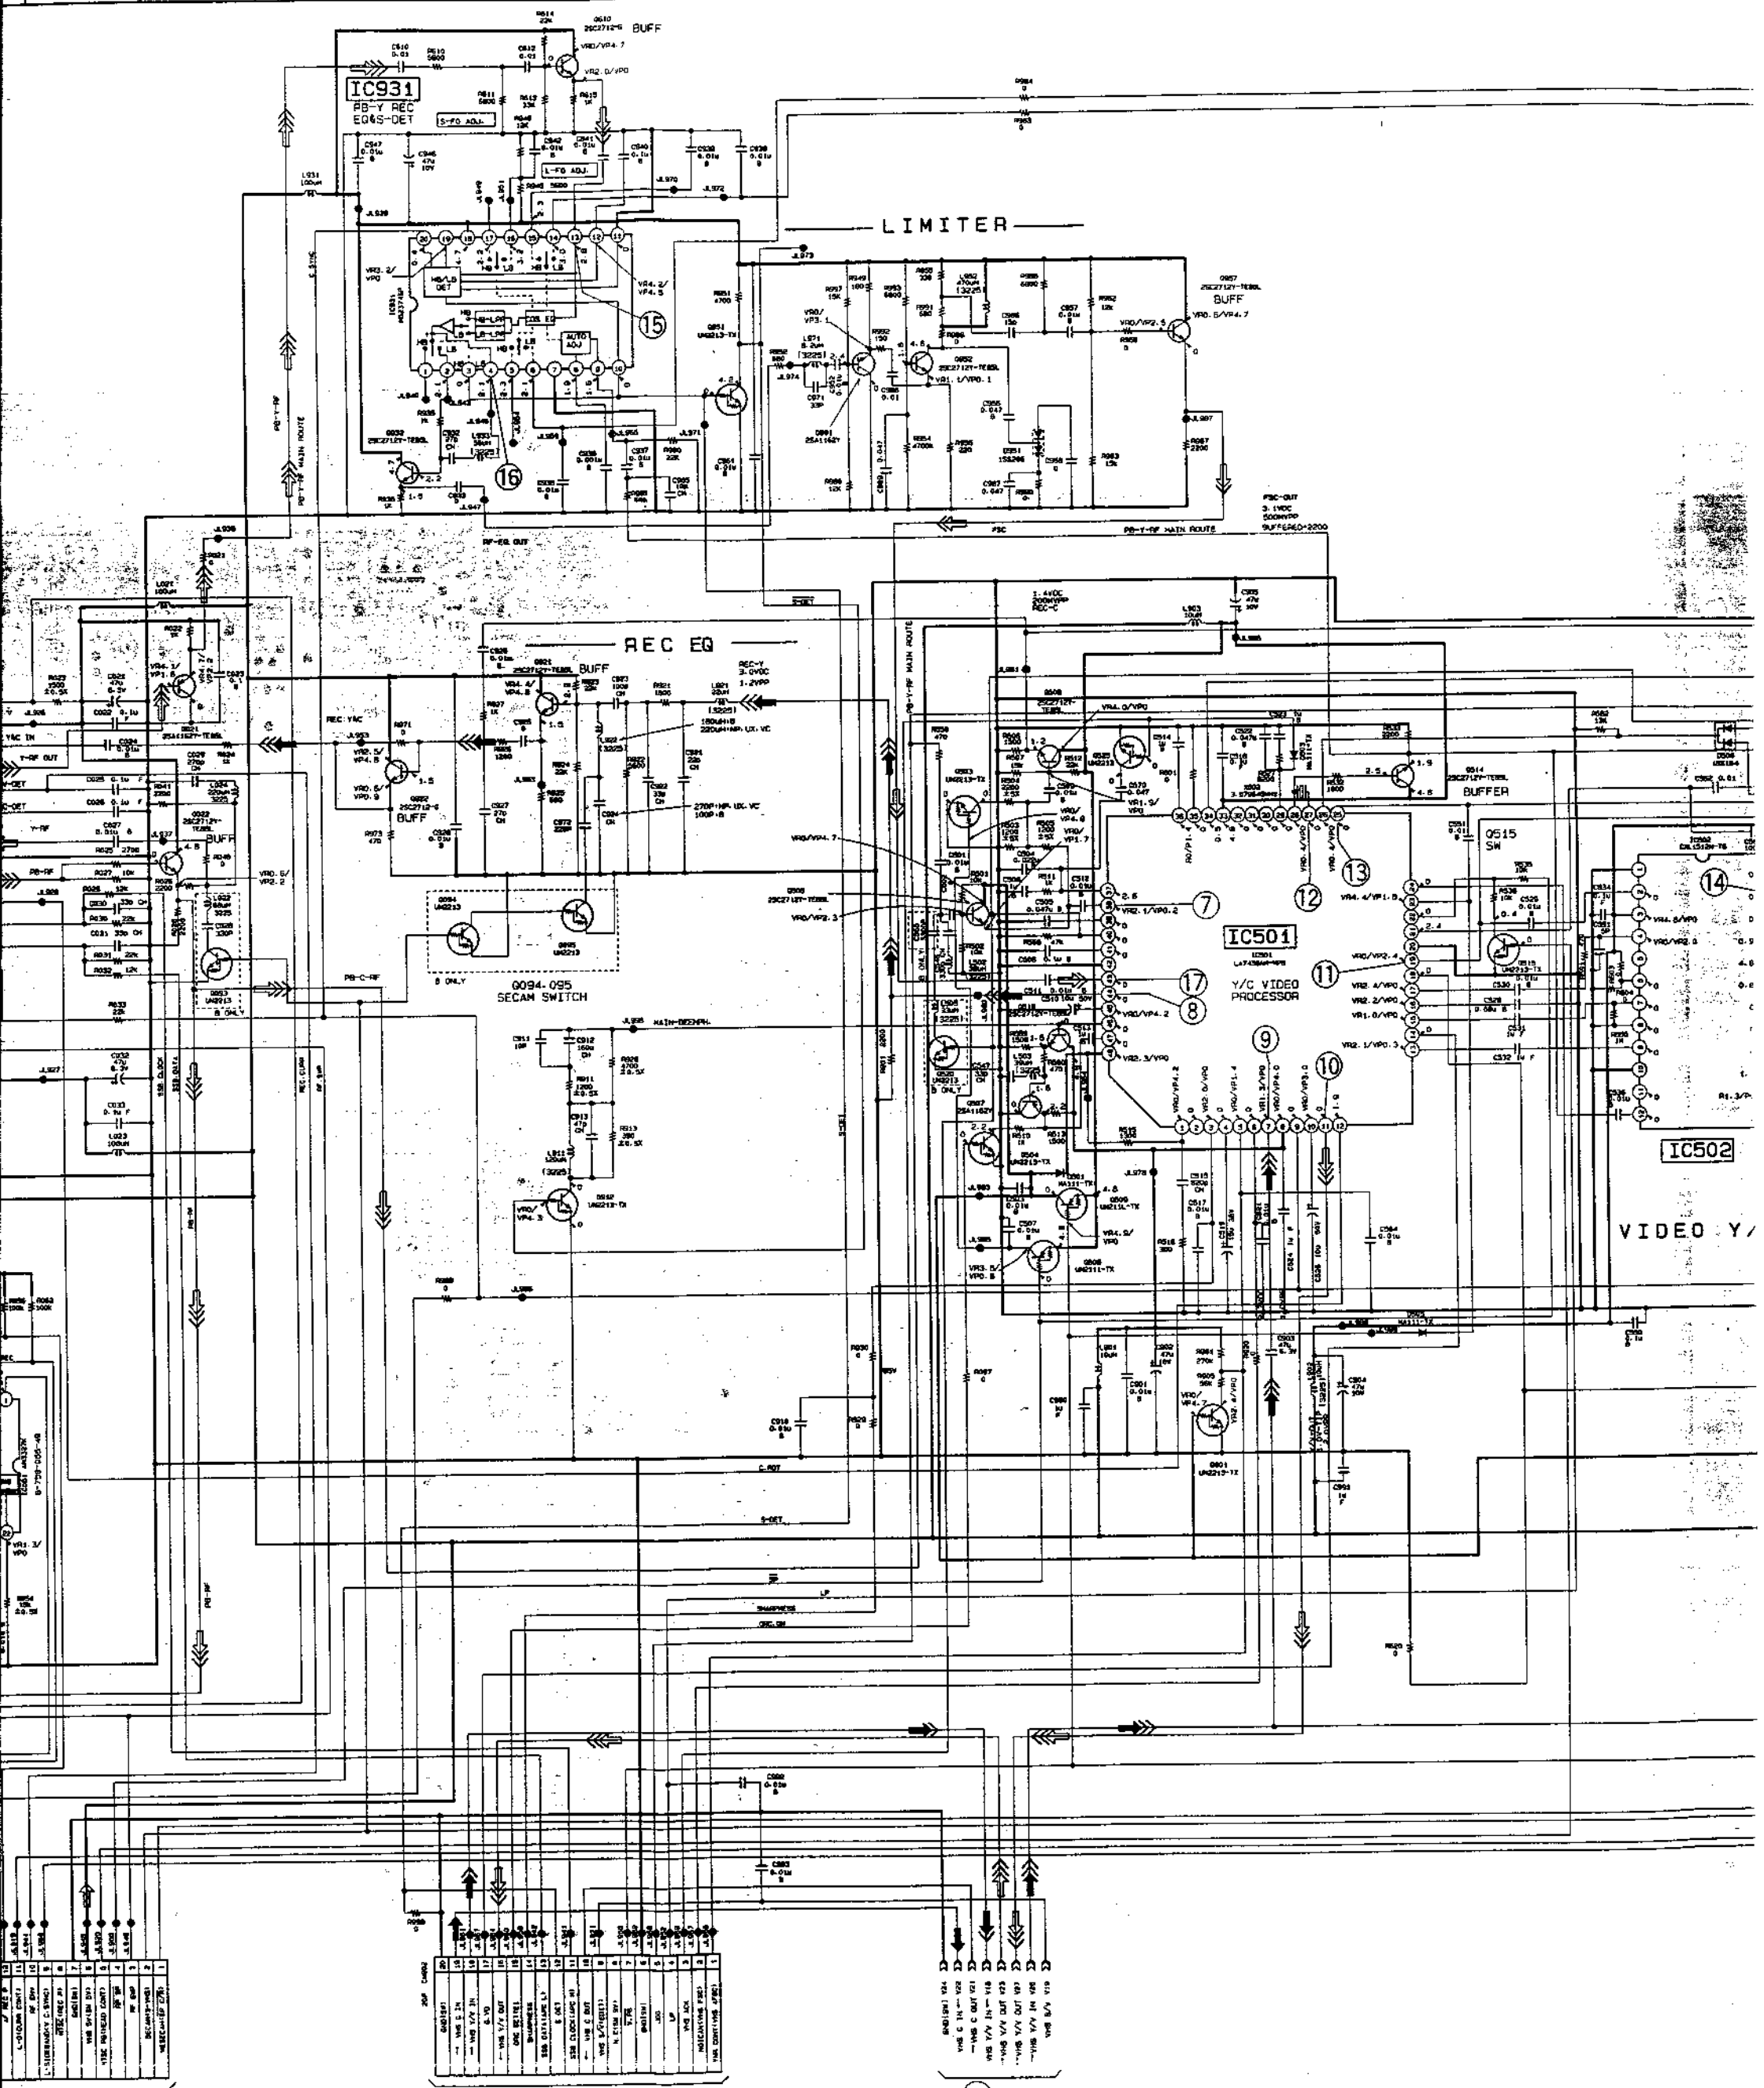

TO
-34 BOARD
CN301
(SEE PAGE 4-51)

TO
MV-34 BOARD
CN302
(SEE PAGE 4-41)

1 TO(1/2)
(SEE PAGE 4-28)

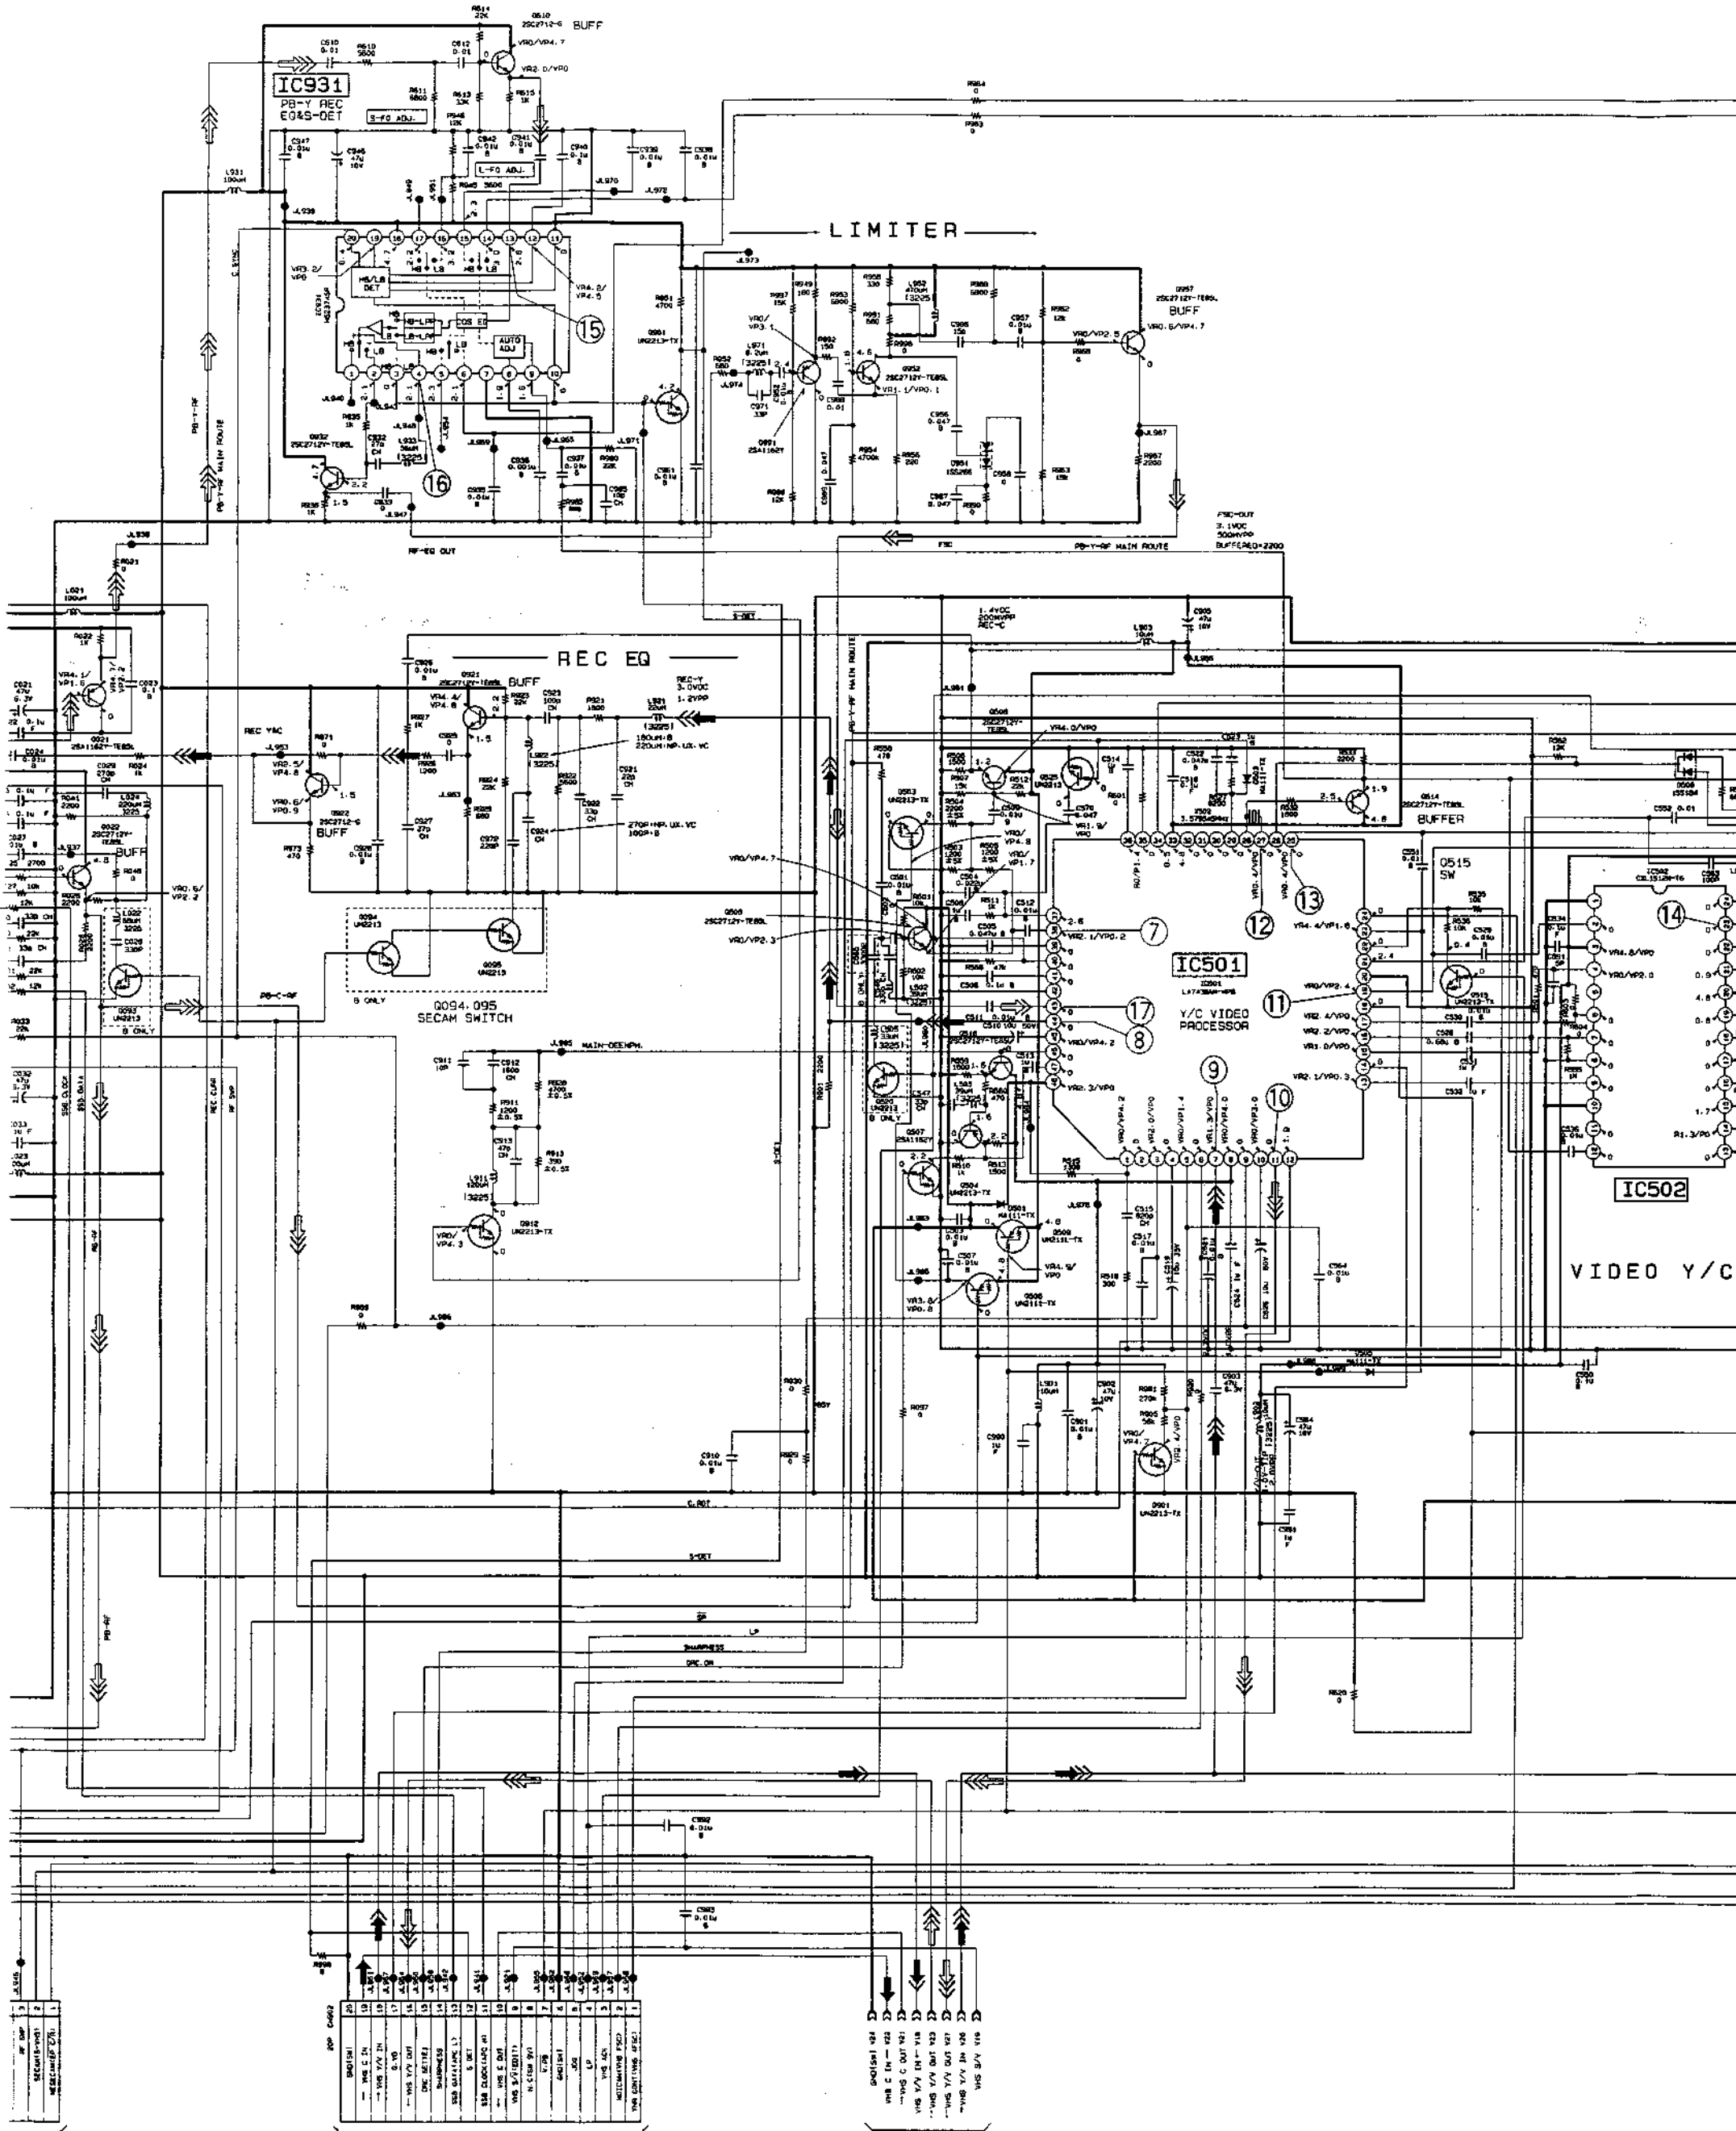


TO BOARD CN302

1	SECAM
2	SECAM
3	SECAM
4	SECAM
5	SECAM
6	SECAM
7	SECAM
8	SECAM
9	SECAM
10	SECAM
11	SECAM
12	SECAM
13	SECAM
14	SECAM
15	SECAM
16	SECAM
17	SECAM
18	SECAM
19	SECAM
20	SECAM
21	SECAM
22	SECAM
23	SECAM
24	SECAM
25	SECAM
26	SECAM
27	SECAM
28	SECAM
29	SECAM
30	SECAM
31	SECAM
32	SECAM
33	SECAM
34	SECAM
35	SECAM
36	SECAM
37	SECAM
38	SECAM
39	SECAM
40	SECAM
41	SECAM
42	SECAM
43	SECAM
44	SECAM
45	SECAM
46	SECAM
47	SECAM
48	SECAM
49	SECAM
50	SECAM
51	SECAM
52	SECAM
53	SECAM
54	SECAM
55	SECAM
56	SECAM
57	SECAM
58	SECAM
59	SECAM
60	SECAM
61	SECAM
62	SECAM
63	SECAM
64	SECAM
65	SECAM
66	SECAM
67	SECAM
68	SECAM
69	SECAM
70	SECAM
71	SECAM
72	SECAM
73	SECAM
74	SECAM
75	SECAM
76	SECAM
77	SECAM
78	SECAM
79	SECAM
80	SECAM
81	SECAM
82	SECAM
83	SECAM
84	SECAM
85	SECAM
86	SECAM
87	SECAM
88	SECAM
89	SECAM
90	SECAM
91	SECAM
92	SECAM
93	SECAM
94	SECAM
95	SECAM
96	SECAM
97	SECAM
98	SECAM
99	SECAM
100	SECAM

TO BOARD CN302
(SEE PAGE 4-41)

TO11/21
(SEE PAGE 4-28)

24 | 25 | 26 | 26

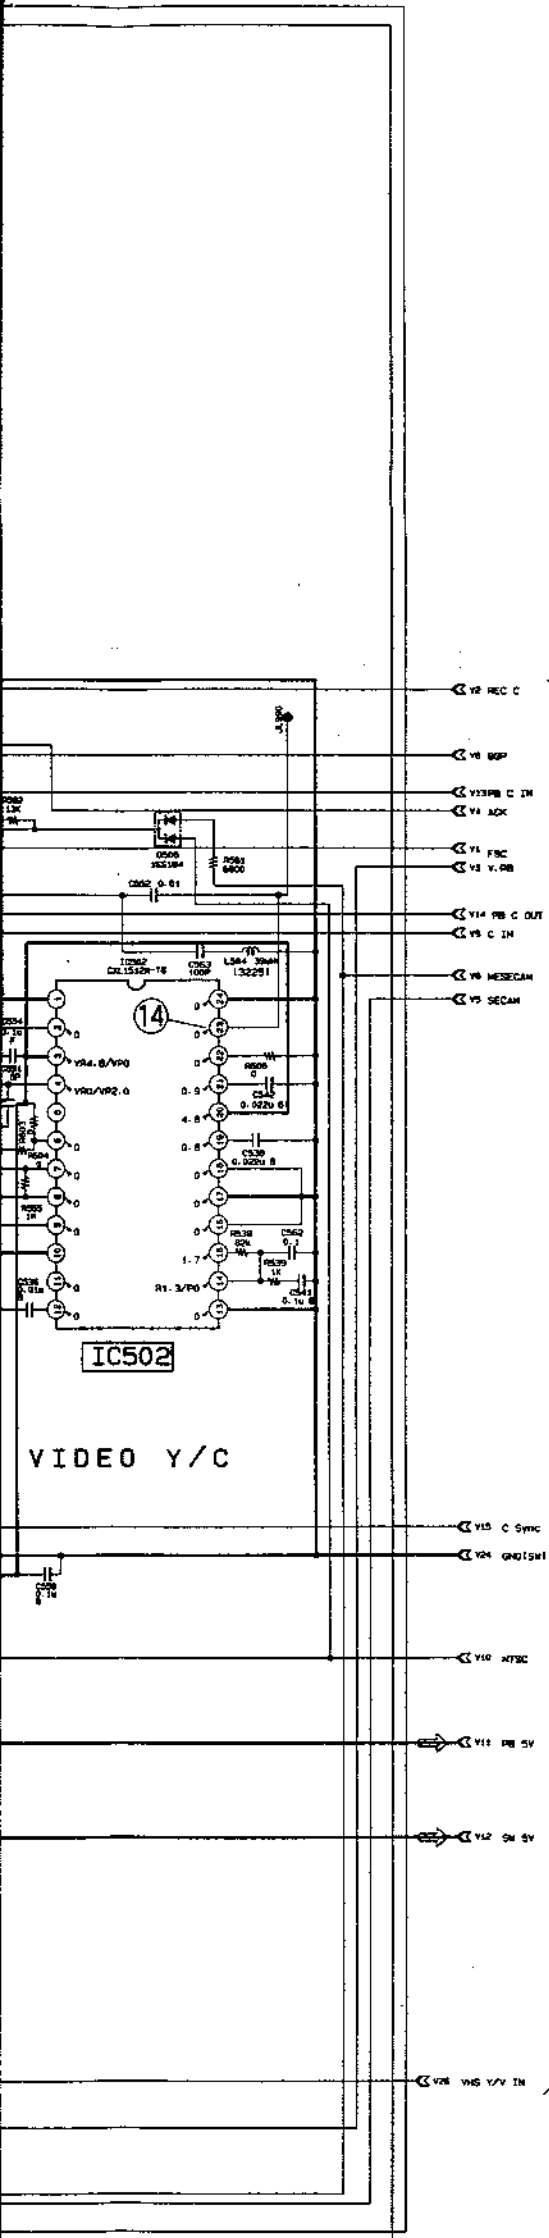

②
T0(1/2)
(SEE PAGE 4-28)


MV-34 (TUNER, MODE CONTROL, VHS VIDEO, SERVO/SYSTEM CONTROL, AUDIO) PRINTED WIRING BOARD

— Ref. No. MV-34 Board; 4,000 Series —


There are few cases that the part printed on this diagram isn't mounted

MV-34 BOARD

CN002	B-19	CN707	F-23	D512	D-24	IC401	B-22	PH261	F-15	Q502	B-26	Q601	I-20	Q901	I-25
CN003	B-16	CN708	C-23	D513	C-25	IC407	B-23	PH262	D-15	Q505	A-25	Q602	H-20	Q902	I-26
CN004	B-15			D601	I-8	IC601	I-19			Q506	B-3	Q651	J-22	Q903	H-1
CN006	E-22	D001	B-17	D701	E-25	IC602	I-21	Q004	B-18	Q507	A-25	Q652	H-22	Q904	H-1
CN101	A-22	D010	H-17	D801	D-6	IC701	D-24	Q005	B-18	Q509	A-25	Q653	H-21	Q905	I-26
CN102	B-22	D051	G-17	D802	D-6	IC702	G-3	Q007	B-18	Q512	D-25	Q654	H-21	Q911	H-1
CN301	I-22	D071	C-19	D901	I-26	IC705	E-22	Q254	J-18	Q513	B-26	Q655	H-21	Q913	H-25
CN302	C-22	D203	H-18	D903	I-26	IC706	G-25	Q261	A-18	Q515	C-25	Q701	G-4	Q915	H-26
CN400	E-24	D205	I-16	D905	H-26	IC801	C-20	Q262	J-17	Q516	C-25	Q702	H-4	Q920	E-3
CN401	I-14	D261	F-17			IC802	A-20	Q263	E-15	Q517	B-25	Q703	I-5	Q921	D-26
CN403	A-17	D265	F-15	IC051	G-18	IC901	H-2	Q301	C-21	Q518	B-24	Q704	F-24	Q922	D-26
CN404	F-14	D267	D-12	IC071	C-18	IC902	H-24	Q302	C-21	Q520	B-26	Q705	G-4	Q924	D-26
CN601	J-22	D403	B-15	IC101	B-21	IC912	I-1	Q303	D-21	Q521	B-24	Q706	F-24	Q925	I-1
CN602	J-22	D405	E-16	IC201	I-17			Q304	D-21	Q522	B-23	Q707	E-25	Q926	I-1
CN702	J-24	D501	B-4	IC271	E-18	J901	H-26	Q305	D-3	Q523	C-24	Q801	D-23	Q927	D-26
CN705	F-22	D502	B-23	IC301	C-23	J902	I-26	Q306	D-5	Q552	B-25	Q802	D-23	Q928	D-26
														Q929	D-26

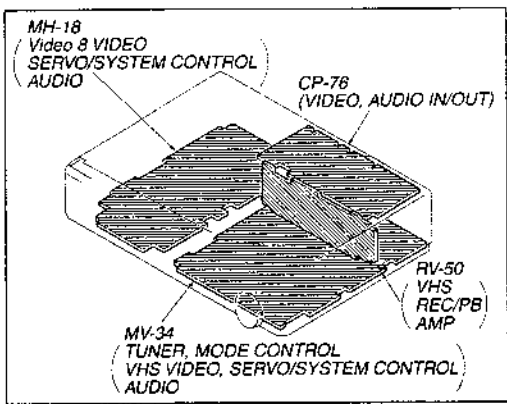


MV-34 BOARD (COMPONENT SIDE)

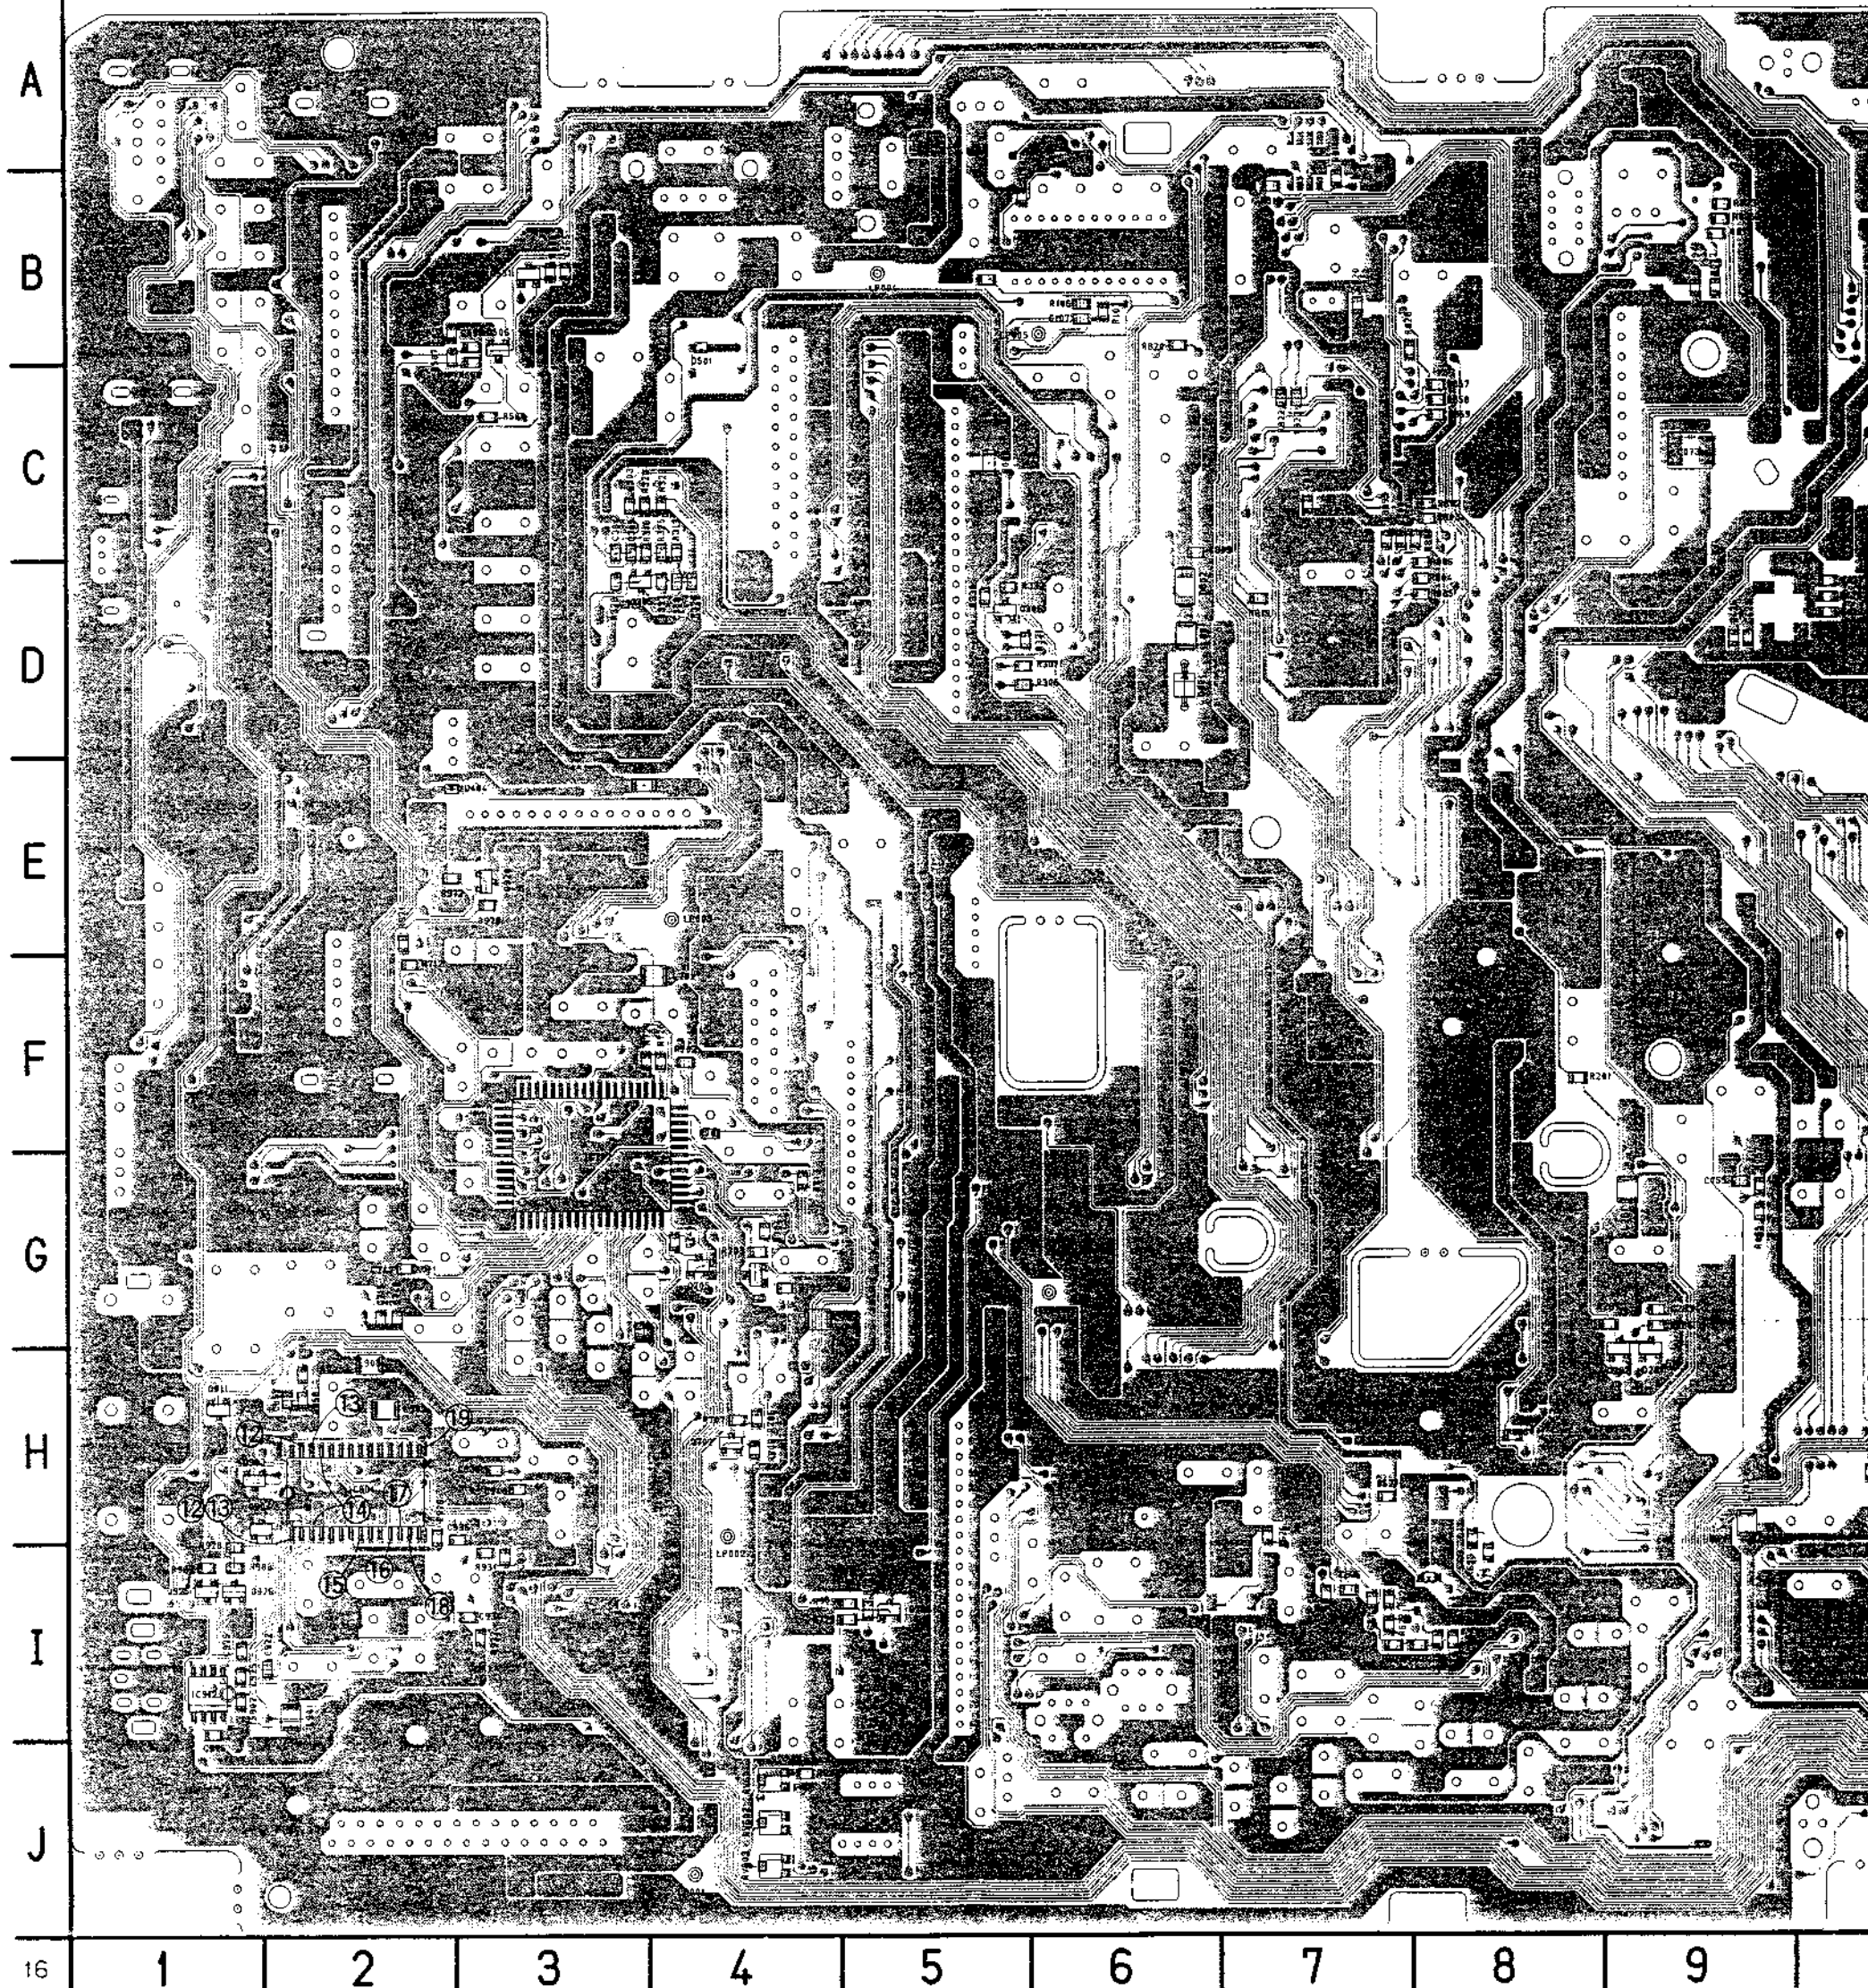


cases that the part printed on this diagram isn't mounted in this model.

Q601	I-20	Q901	I-25
Q602	H-20	Q902	I-26
Q651	J-22	Q903	H-1
Q652	H-22	Q904	H-1
Q653	H-21	Q905	I-26
Q654	H-21	Q911	H-1
Q655	H-21	Q913	H-25
Q701	G-4	Q915	H-26
Q702	H-4	Q920	E-3
Q703	I-5	Q921	D-26
Q704	F-24	Q922	D-26
Q705	G-4	Q924	D-26
Q706	F-24	Q925	I-1
Q707	E-25	Q926	I-1
Q801	D-23	Q927	D-26
Q802	D-23	Q928	D-26
		Q929	D-26

MV-34 BOARD (CONDUCTOR SIDE)

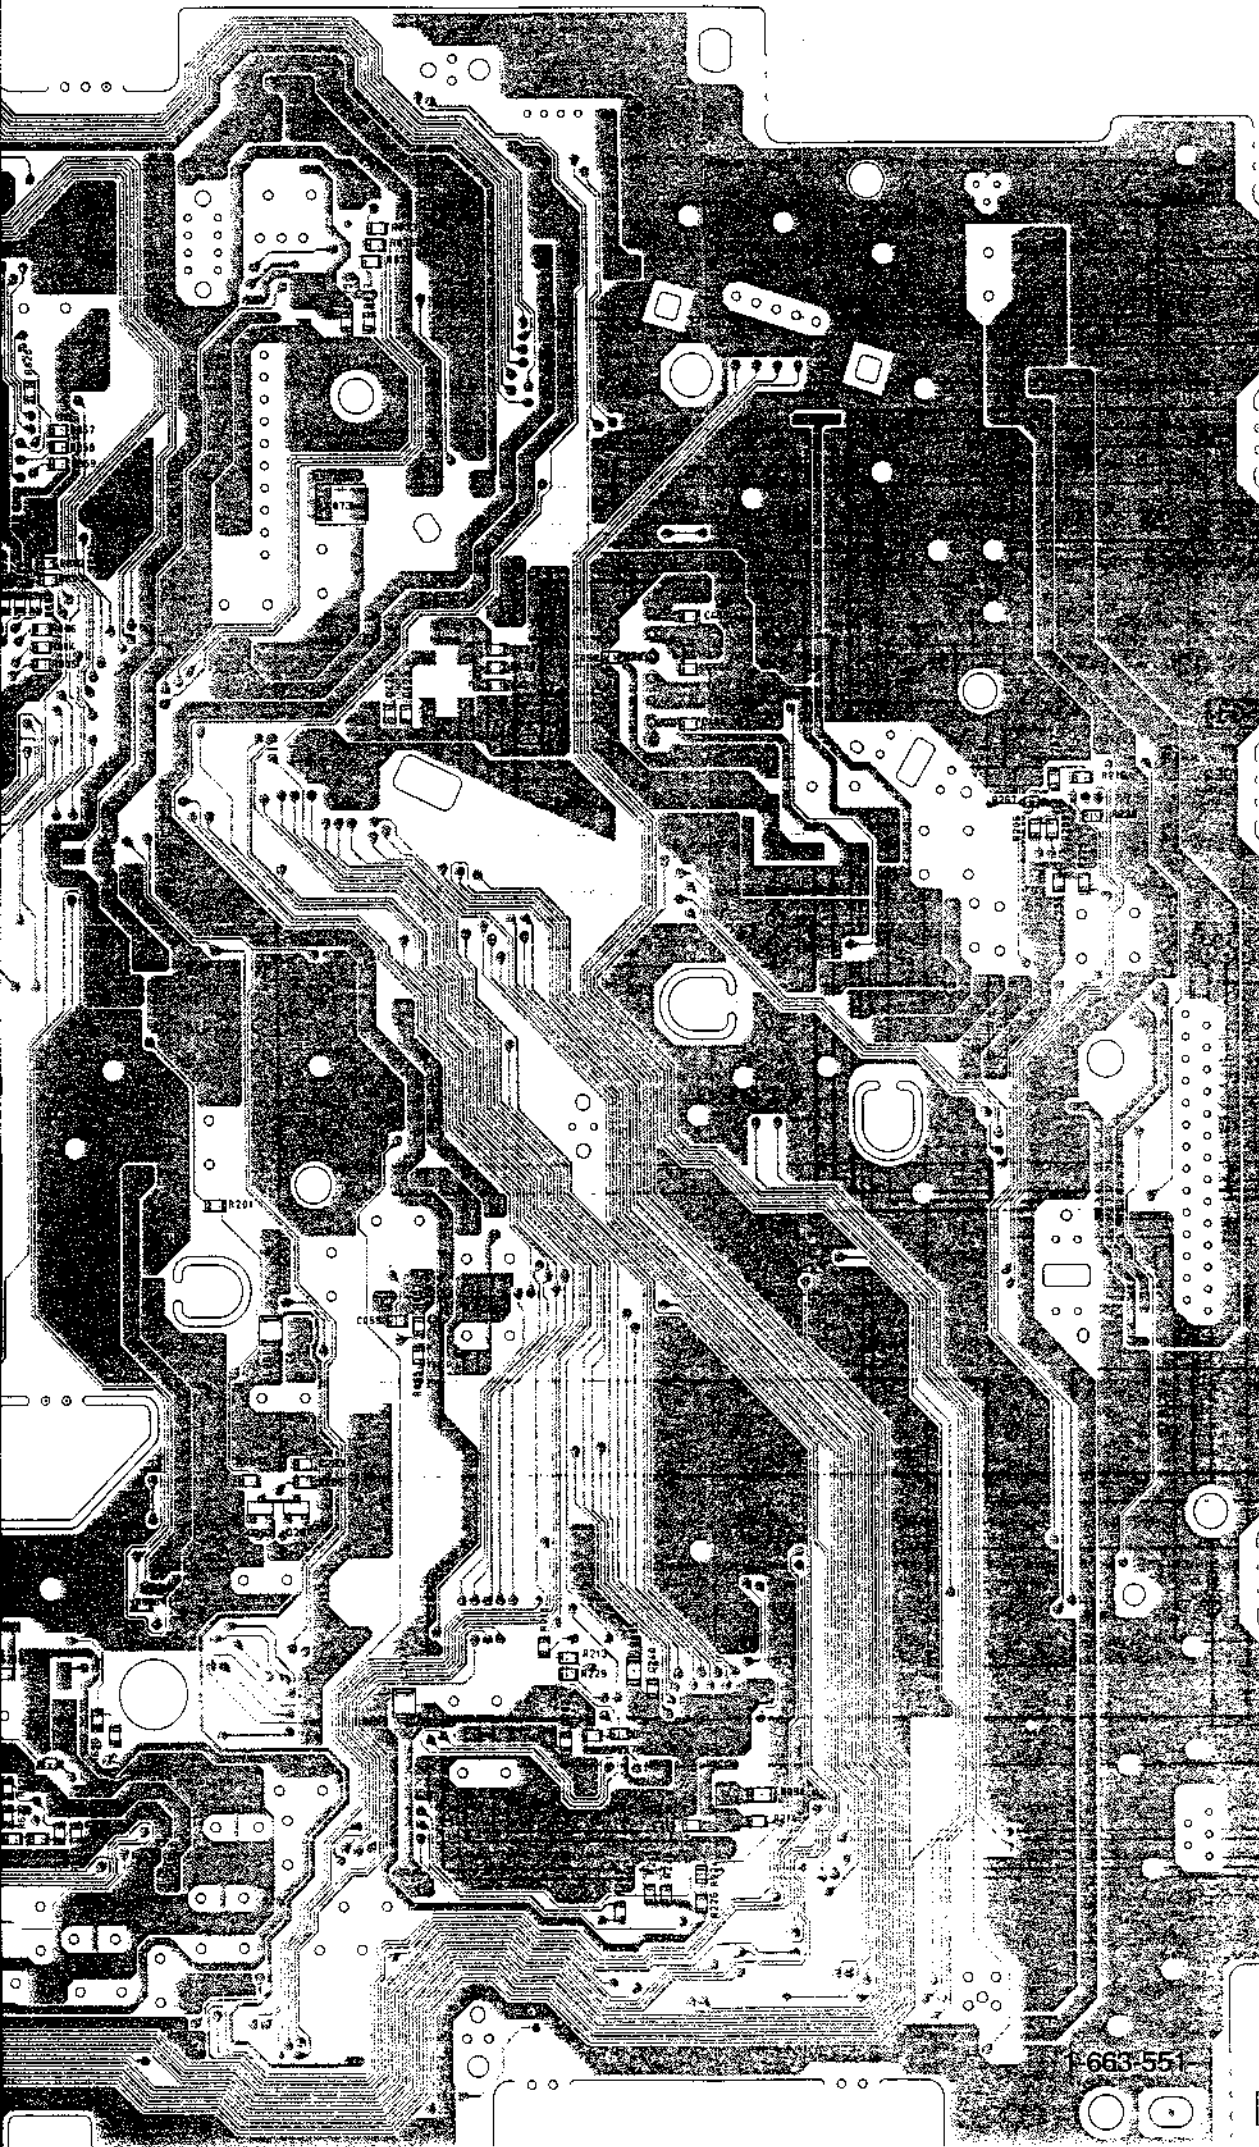



11

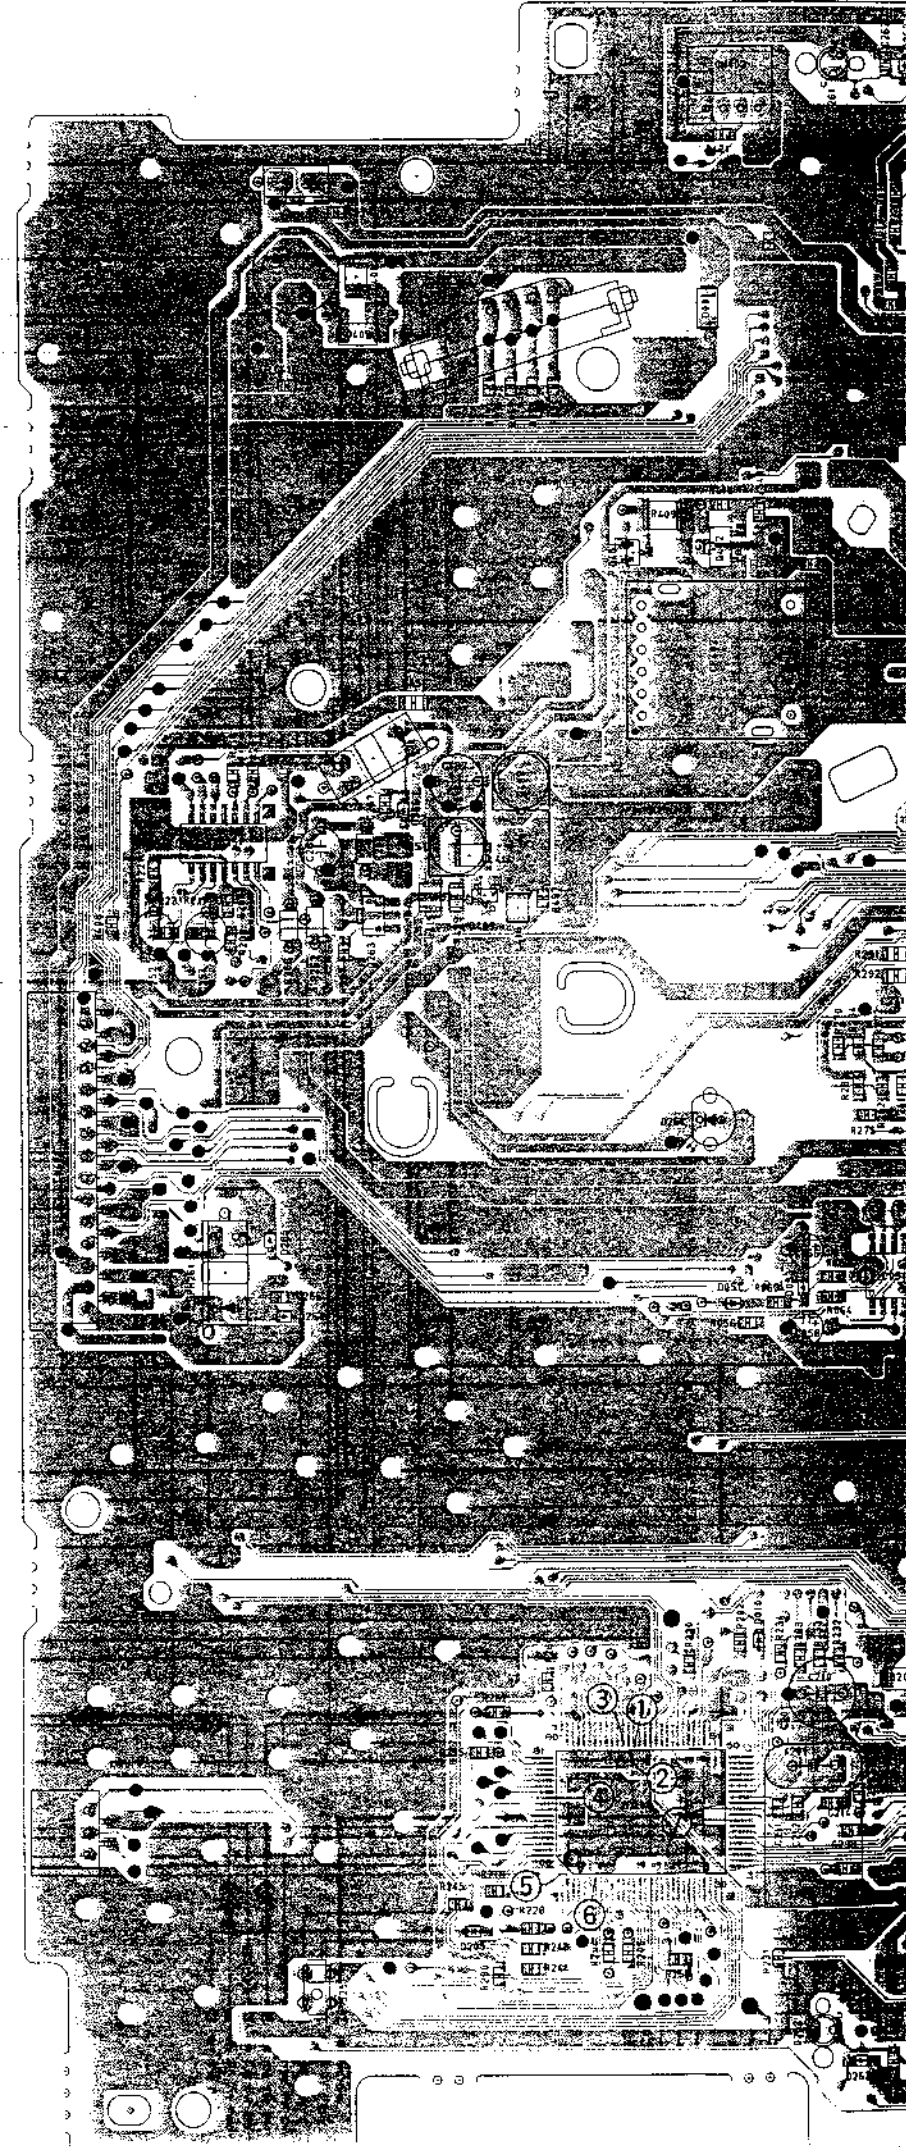


8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17

m isn't mounted in this model.


MV-34 BOARD (CONDUCTOR SIDE)

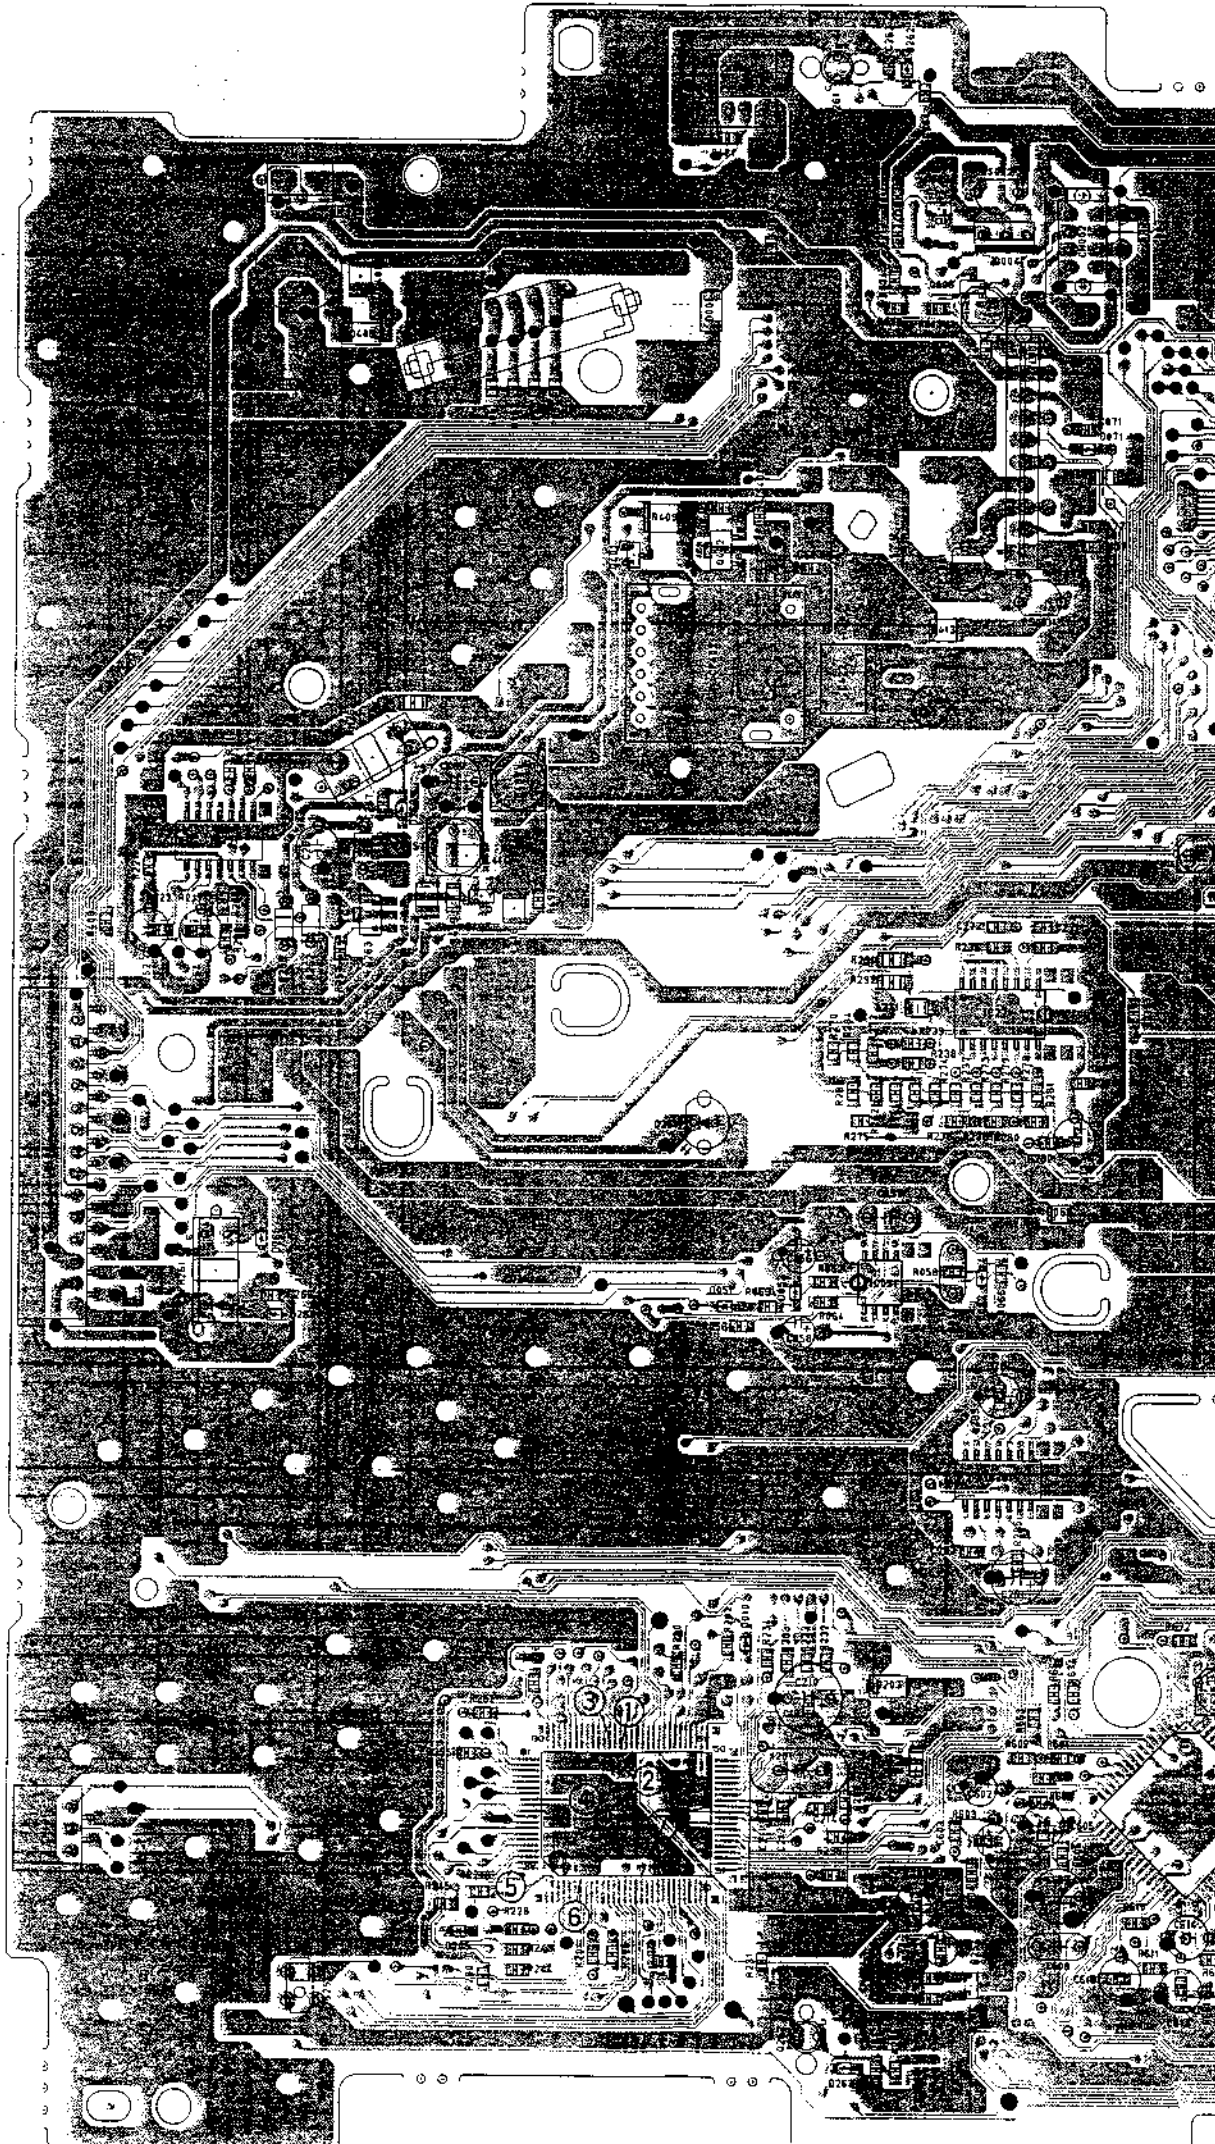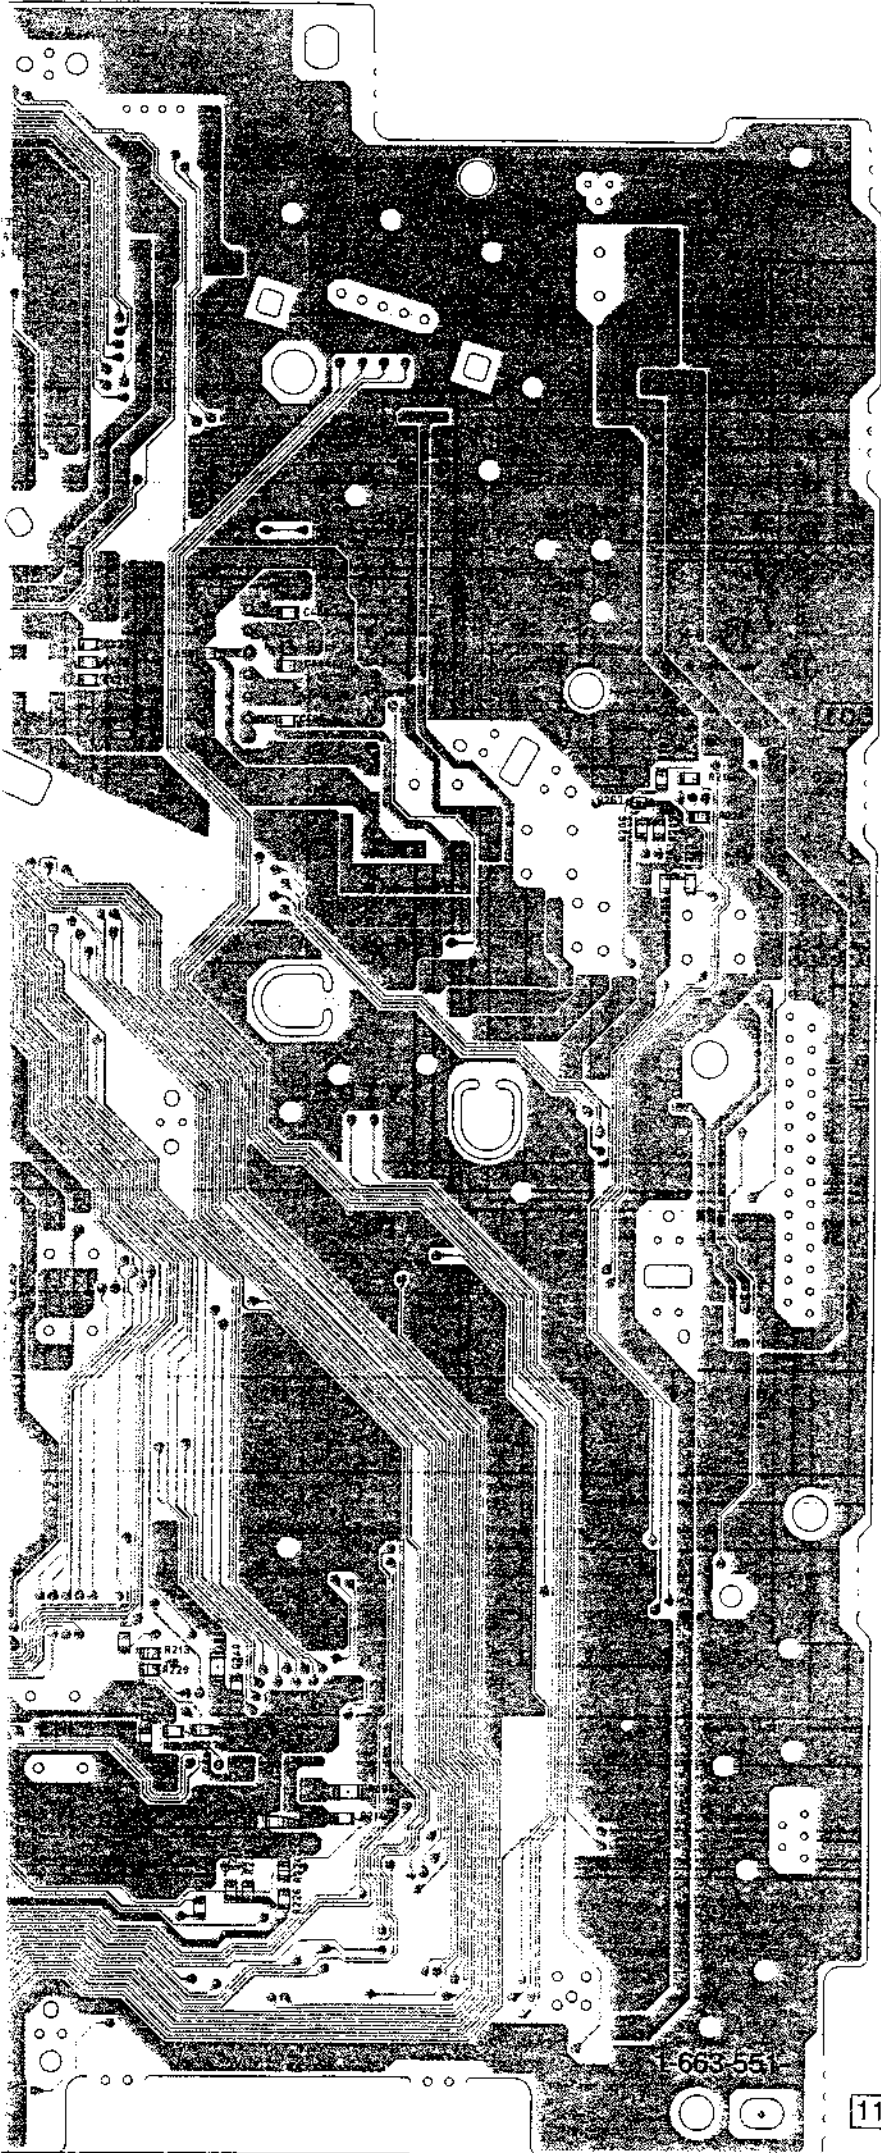

10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19

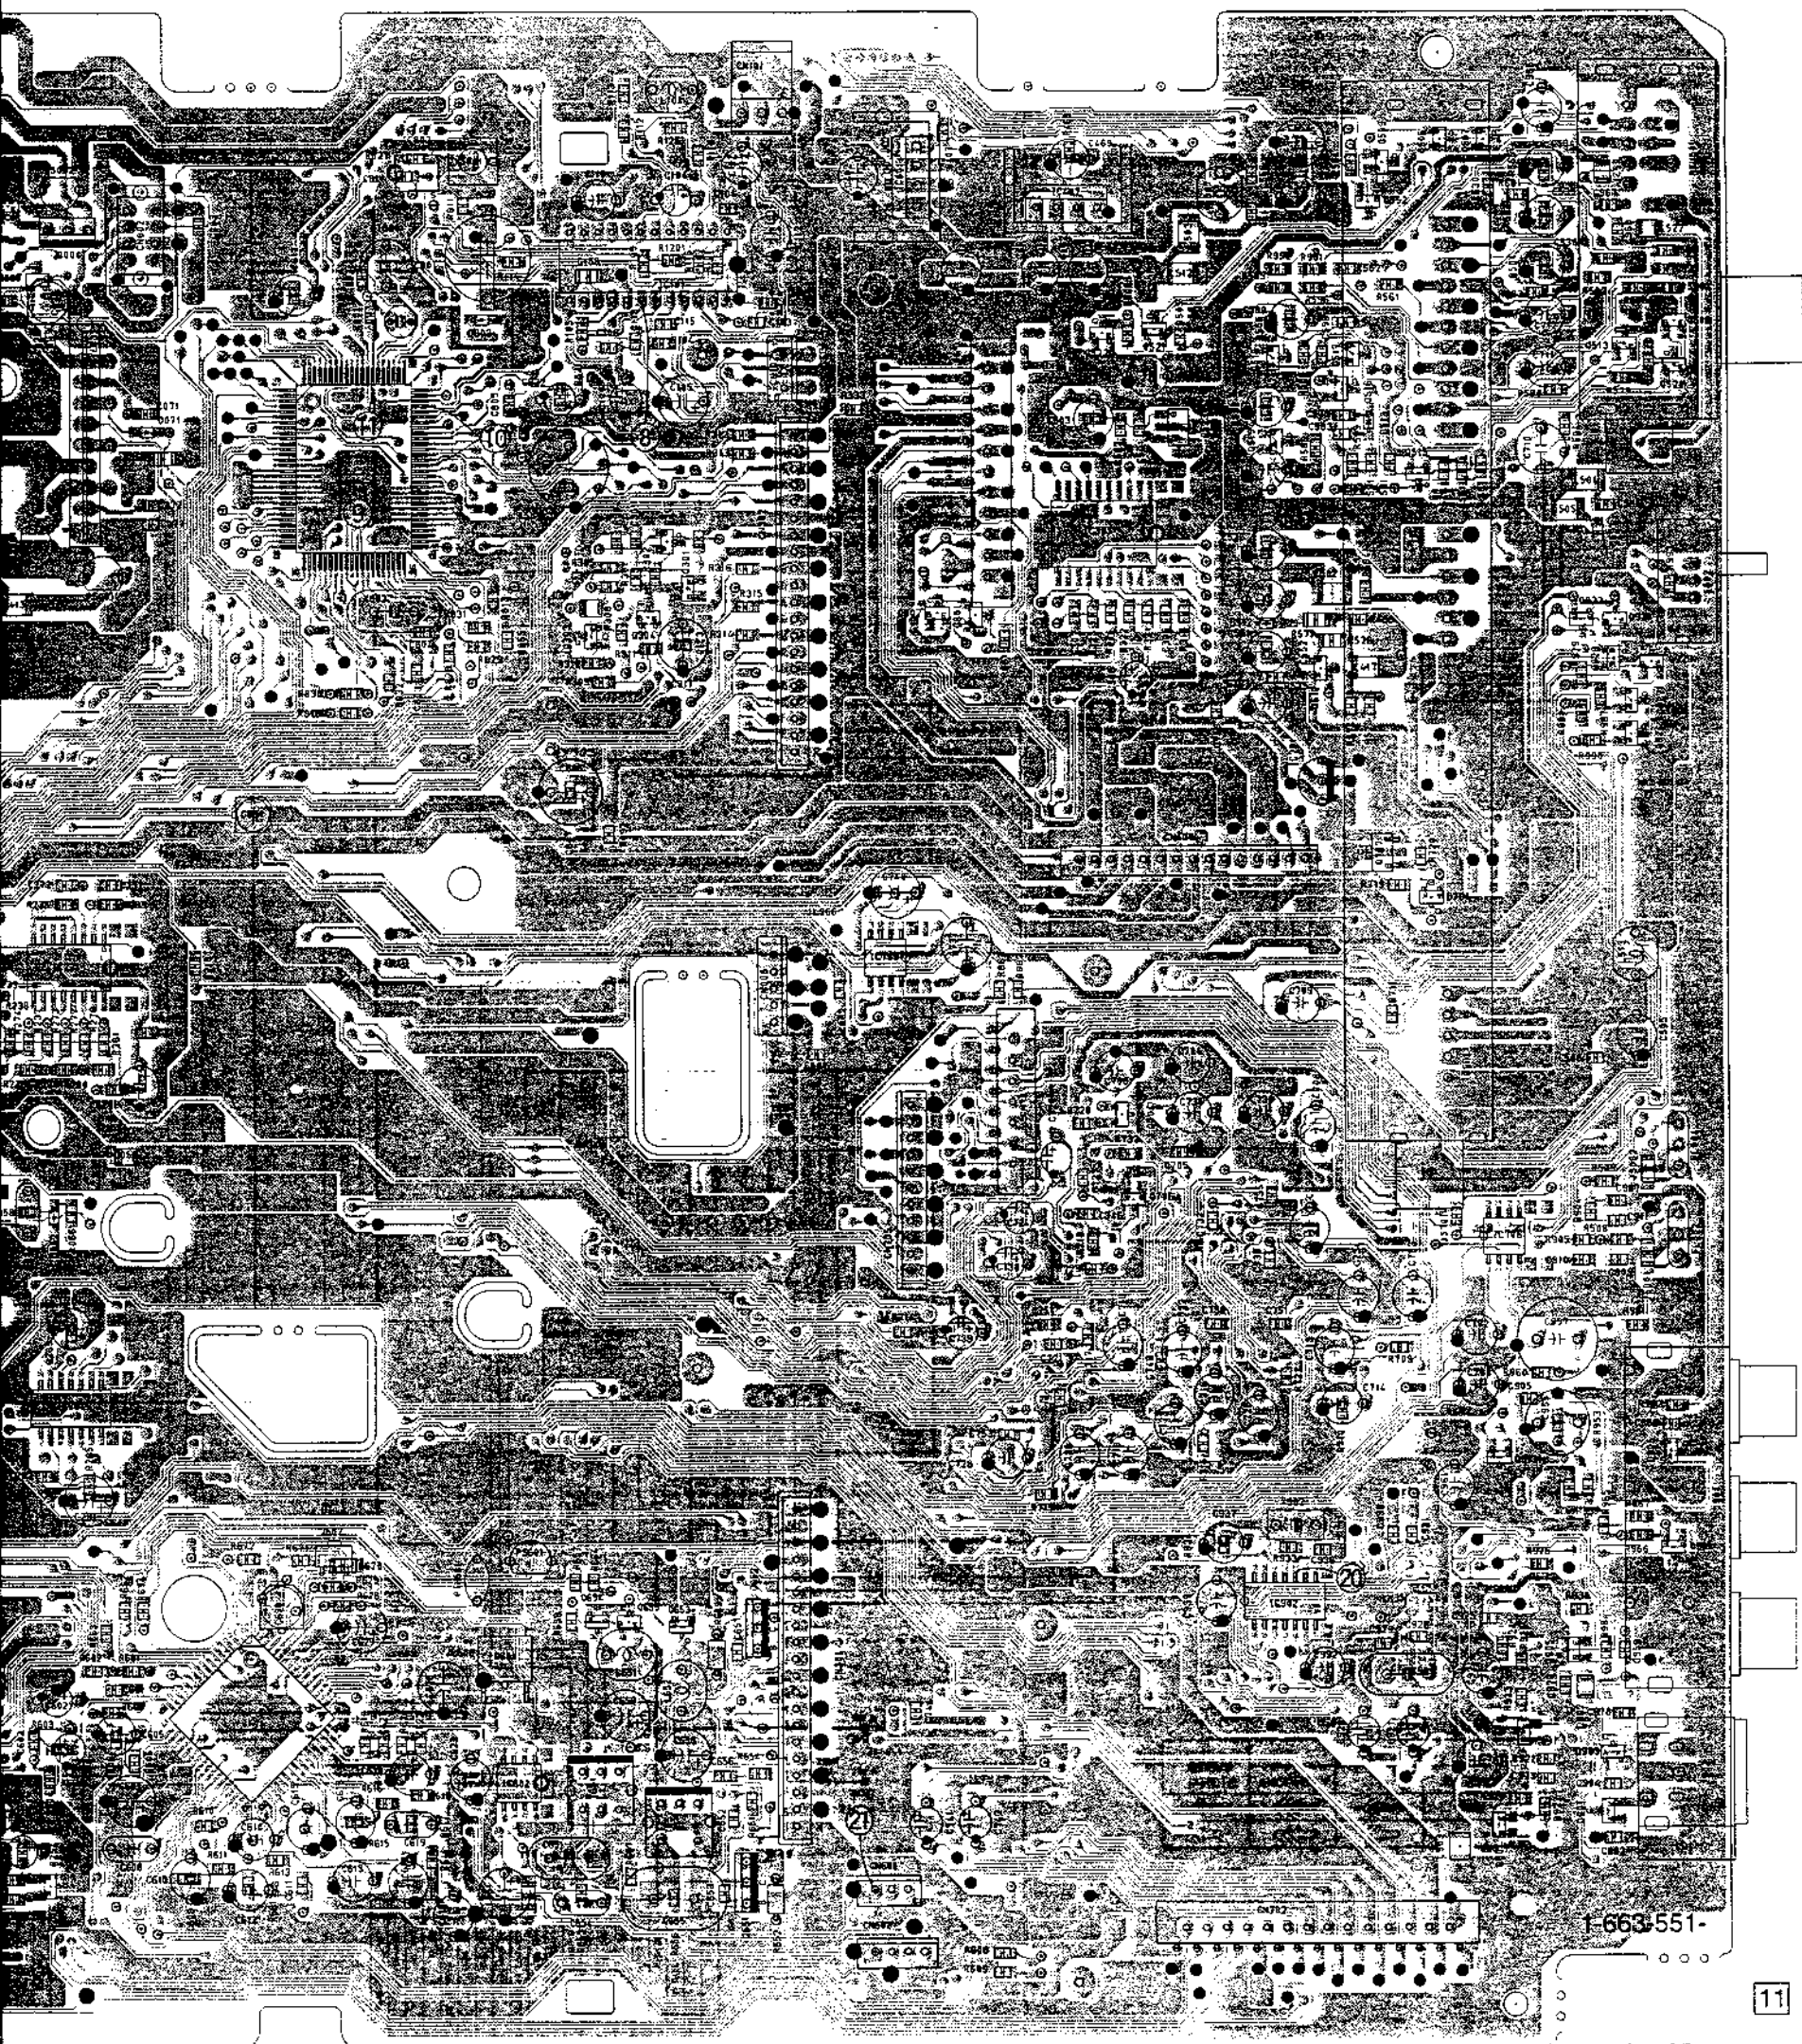


8 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26

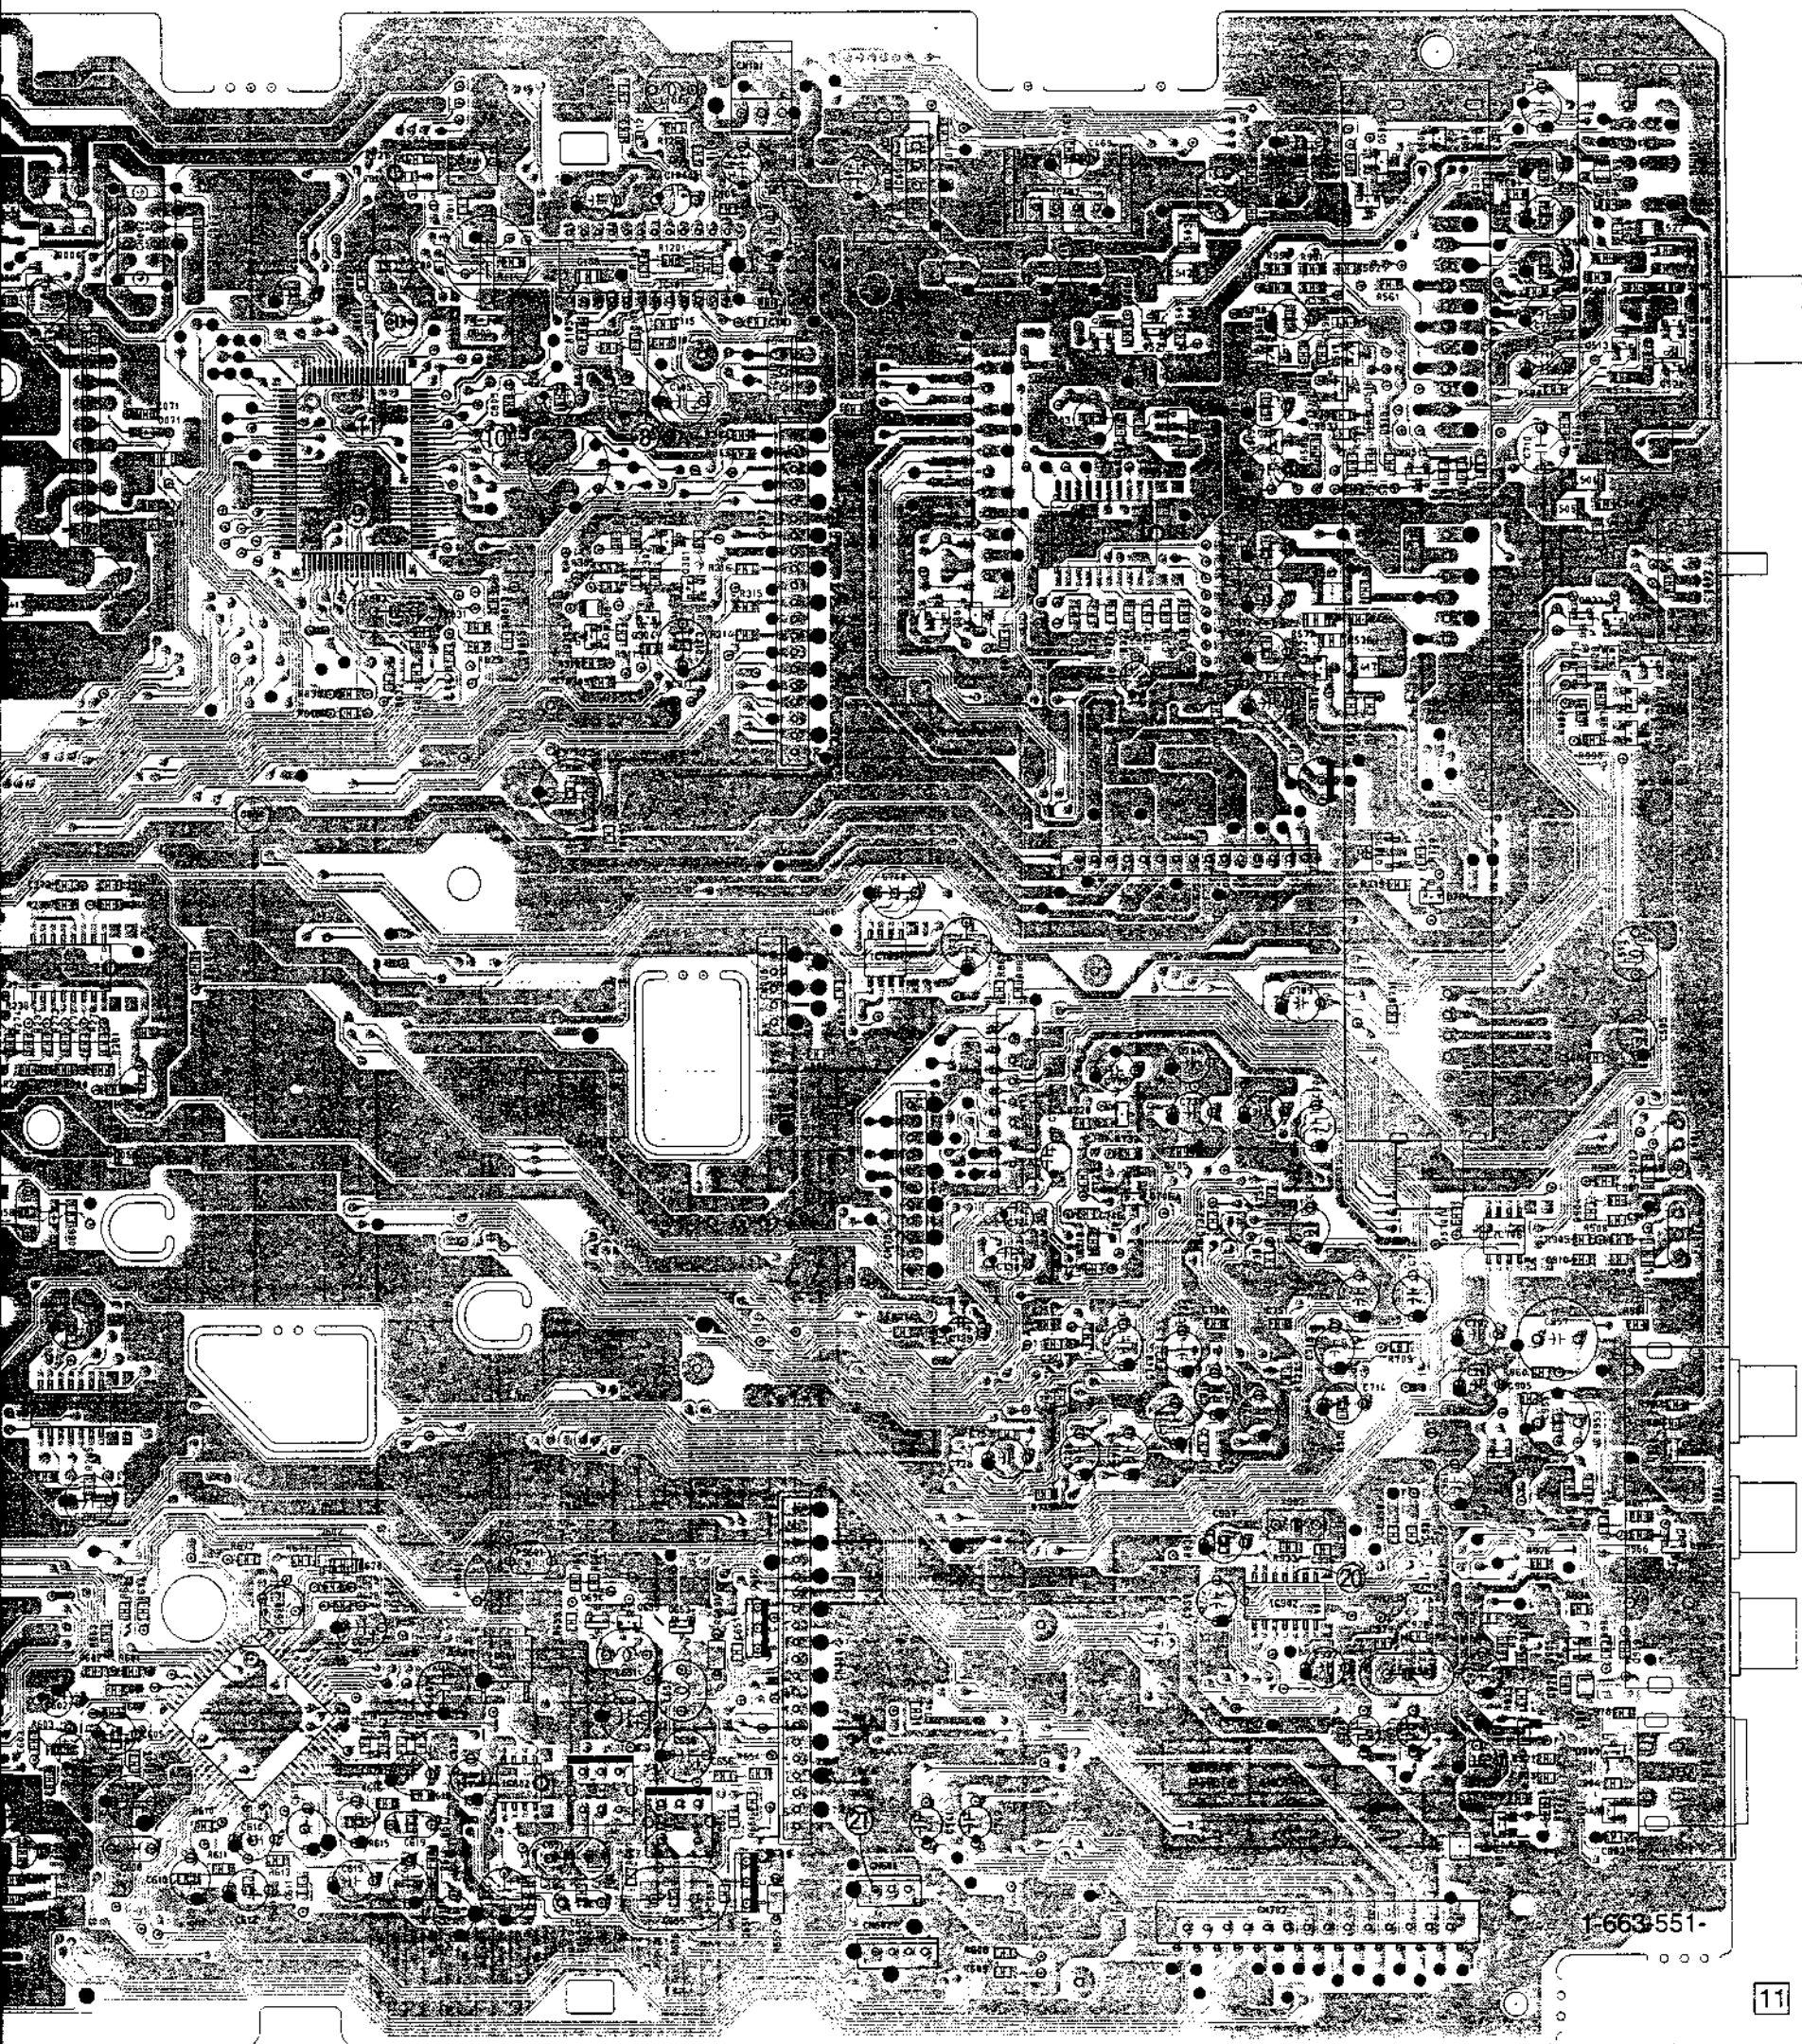


8 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26

12 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18


MV-34 BOARD (2/5)

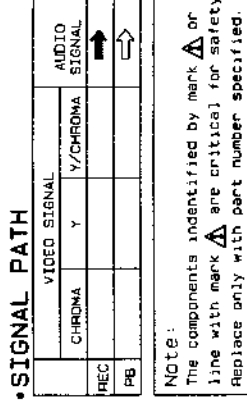

NO MARK COMMON MODE
VR : VHS REC MODE
SR : VHS REC MODE
BR : VHS REC MODE
PR : VHS REC MODE
VRP : VHS REC/PB MODE
SRP : VHS REC/PB MODE
BRP : VHS REC/PB MODE
PRP : VHS REC/PB MODE

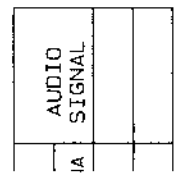

(SEE PAGE 4-53)

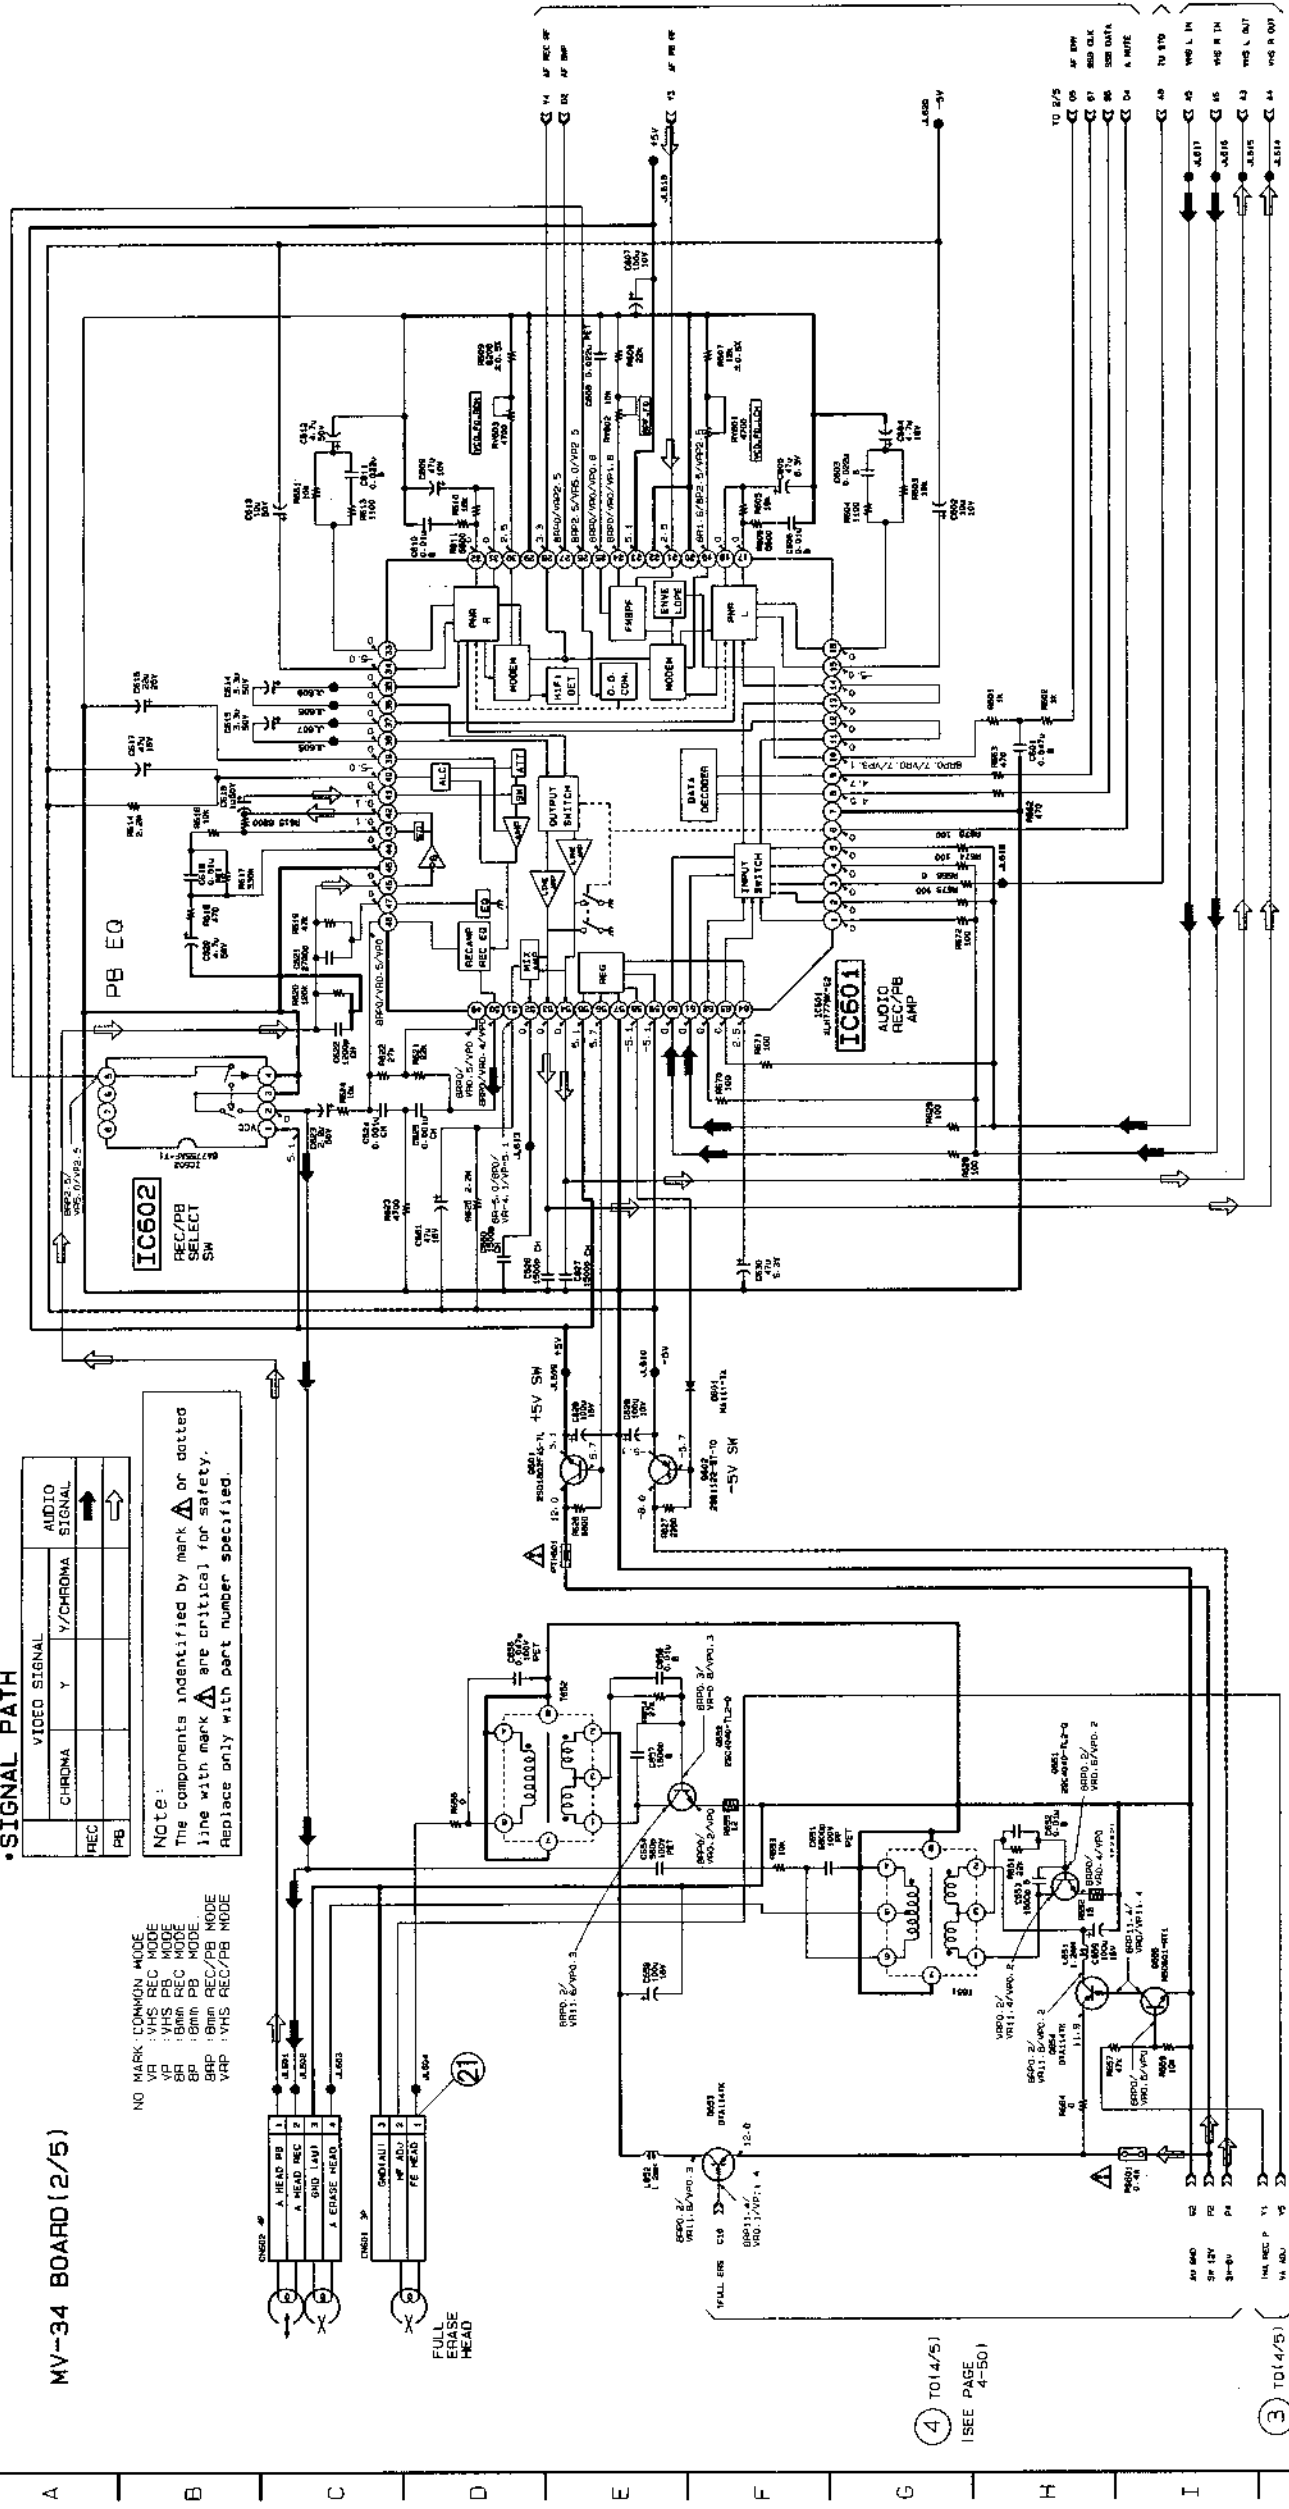

4 T014/51
I (SEE PAGE 4-50)


3 T014/51
I (SEE PAGE 4-50)

5 T014/51
I (SEE PAGE 4-50)


9 T013/51
I (SEE PAGE 4-46)

5 T014/51
I (SEE PAGE 4-50)

MV-34 BOARD (3/3)

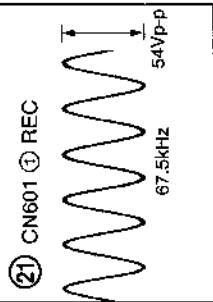


MV-34 (TUNER) SCHEMATIC DIAGRAM
— Ref. No. MV-34 Board; 4,000 Series —

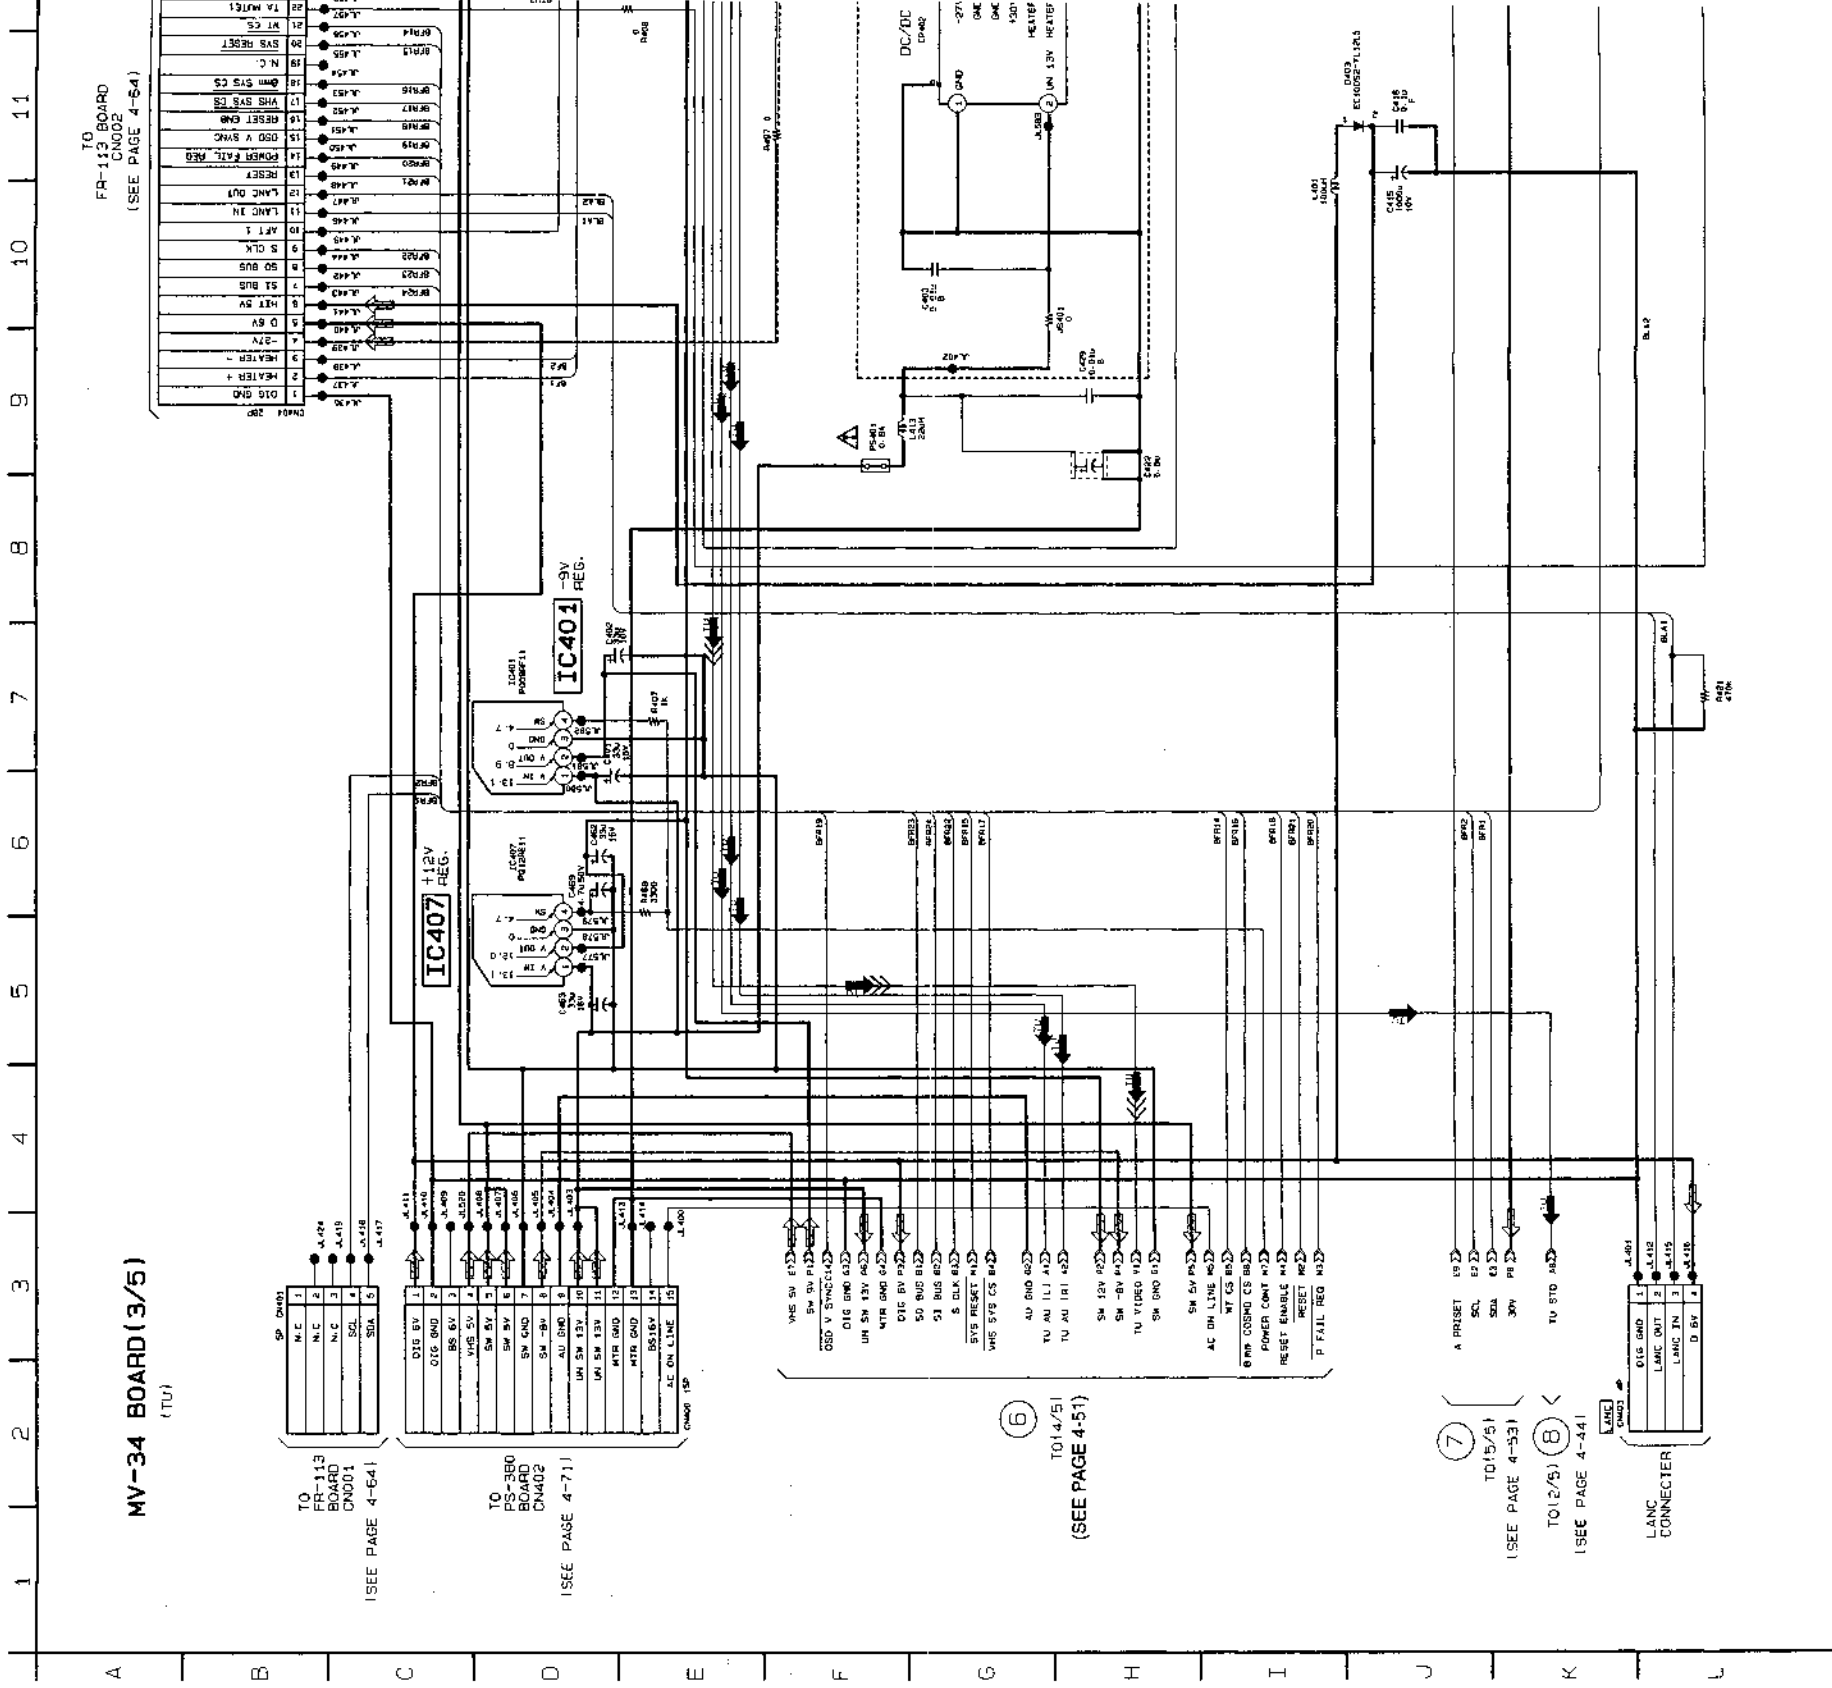



8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23

FR-113 BOARD
CNU02
(SEE PAGE 4-54)

SIGNAL PATH




NOTE:
The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

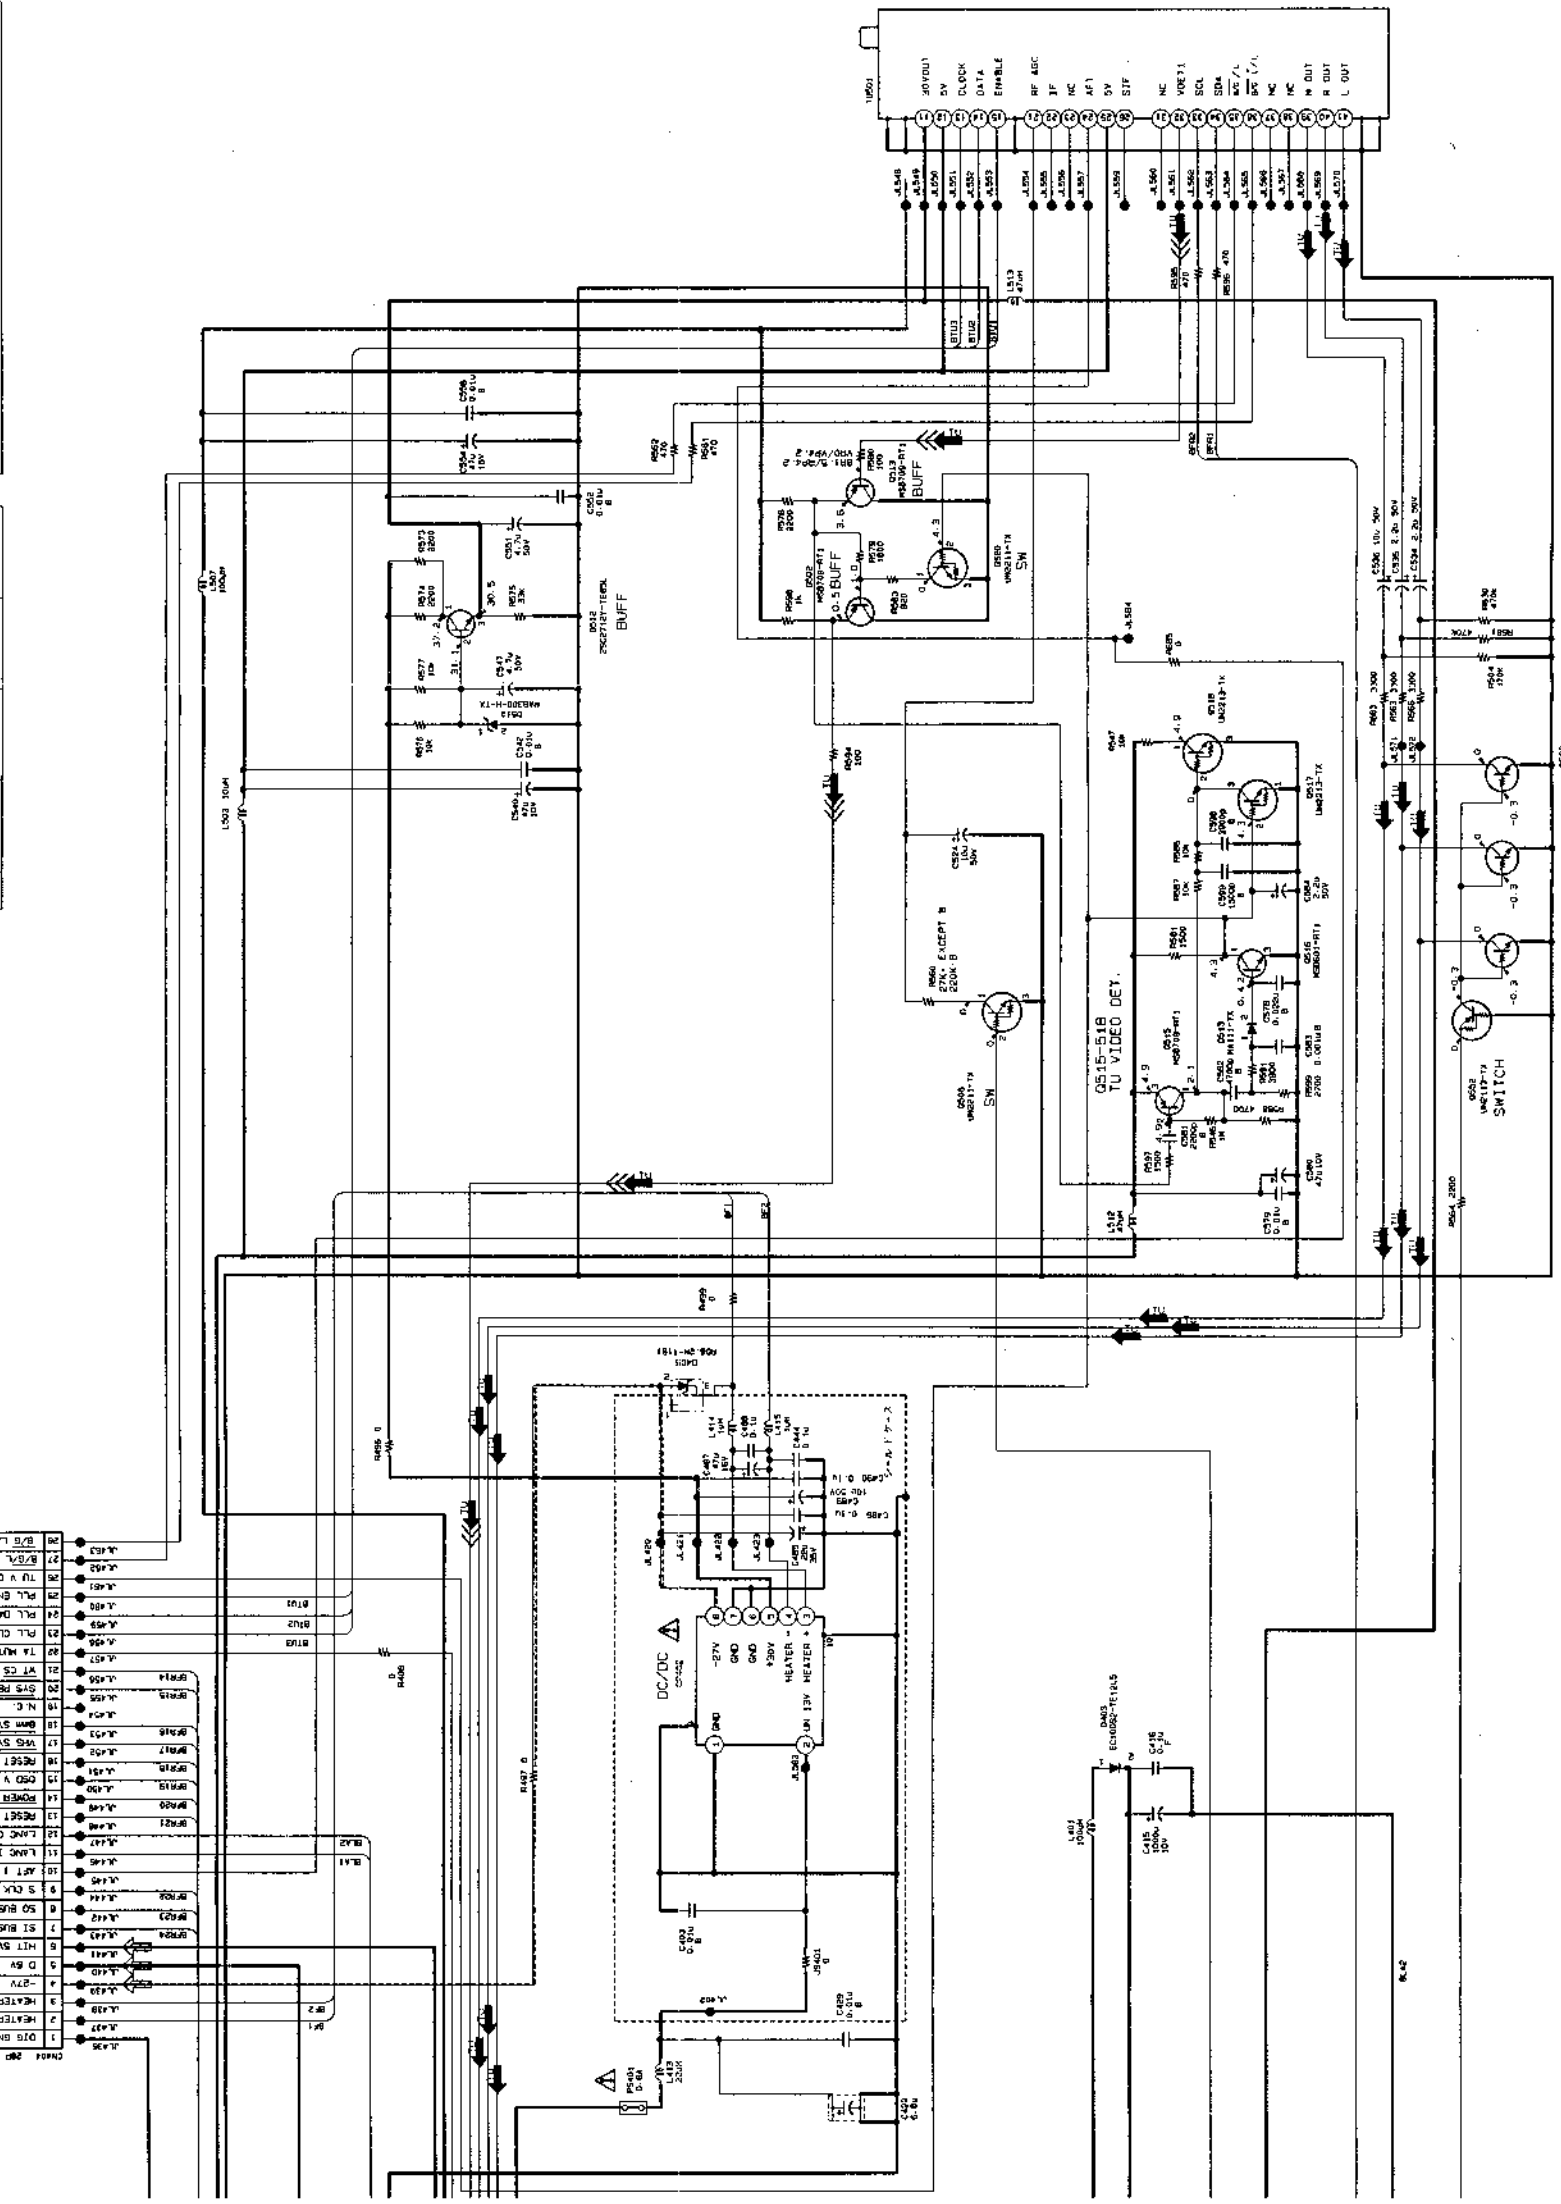

9505-507-509 TA MUTE

MV-34 (VHS SERVO/SYSTEM CONTROL) SCHEMATIC DIAGRAM
 — Ref. No. MV-34 Board; 4,000 Series —

• See page 4-36 for MV-34 BOARD printed wiring board.

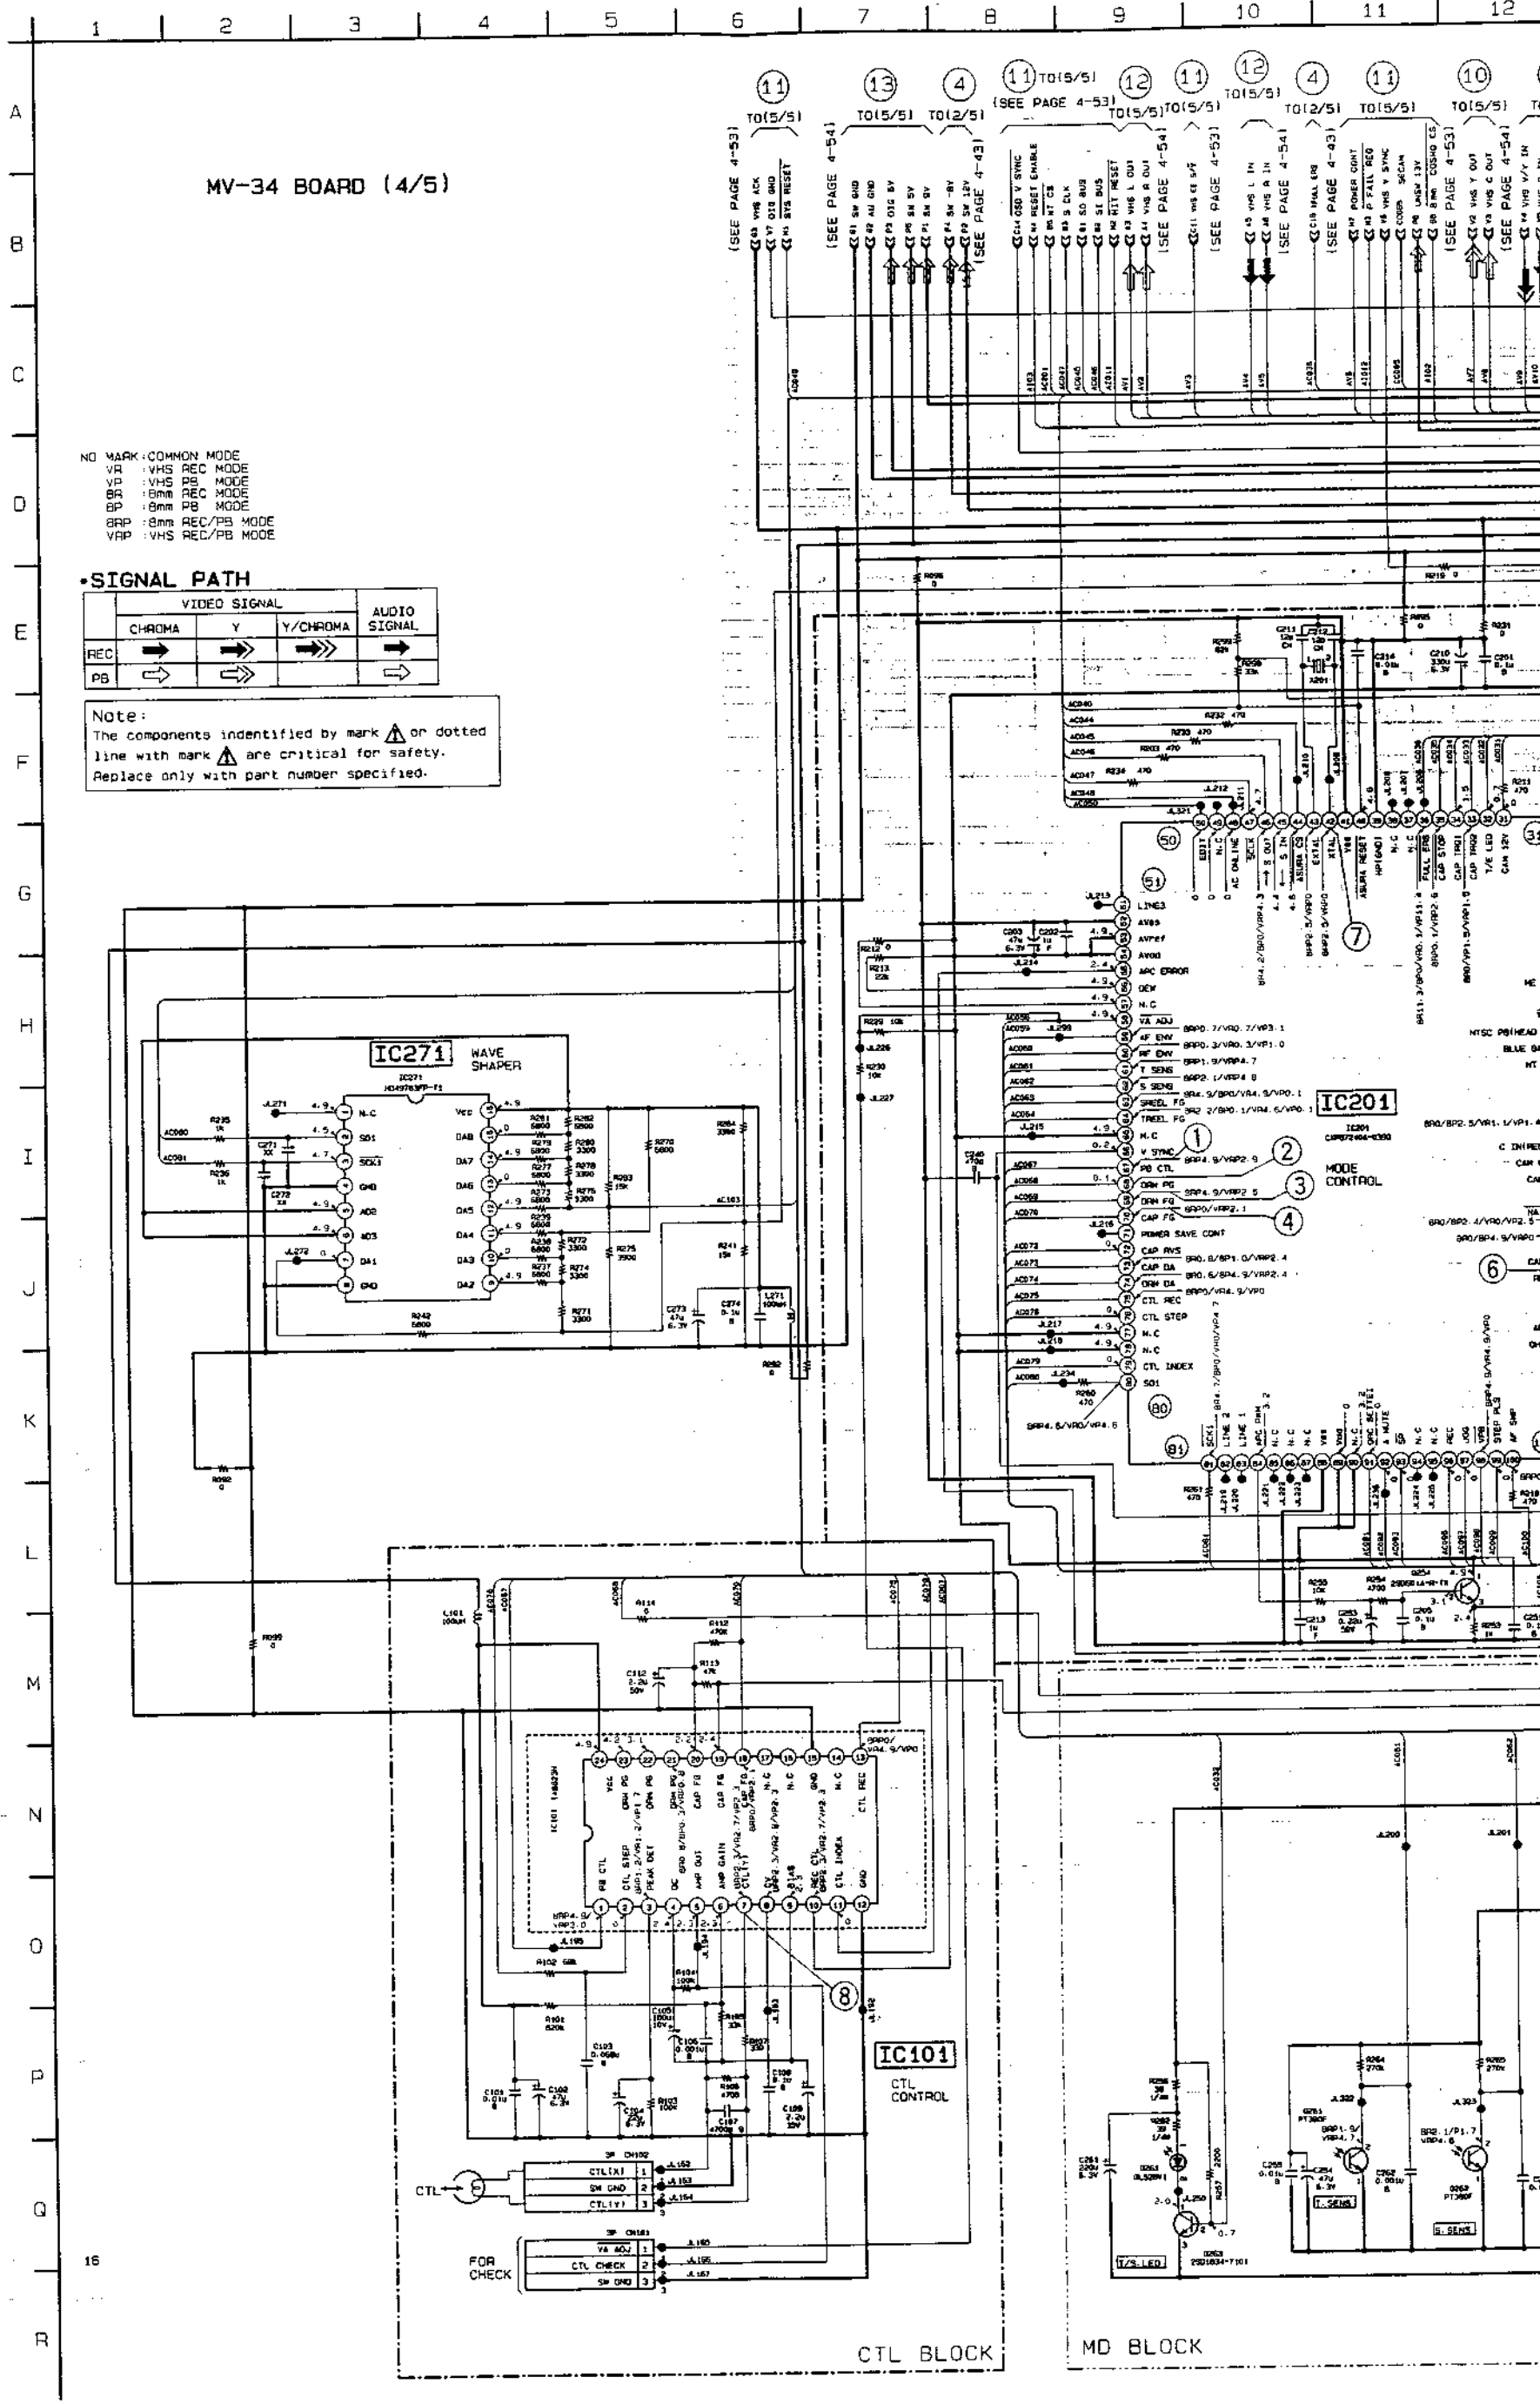


NO MARK: COMMON MODE
 VR: VHS REC MODE
 VP: VHS PB MODE
 BR: 8mm REC MODE
 BP: 8mm PB MODE
 BRP: 8mm REC/PB MODE
 VRP: VHS REC/PB MODE

• SIGNAL PATH


	VIDEO SIGNAL		AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA
REC	→	→	→
PB	→	→	→

Note:
 The components identified by mark **▲** or dotted line with mark **▲** are critical for safety.
 Replace only with part number specified.

MV-34 BOARD (1/3)

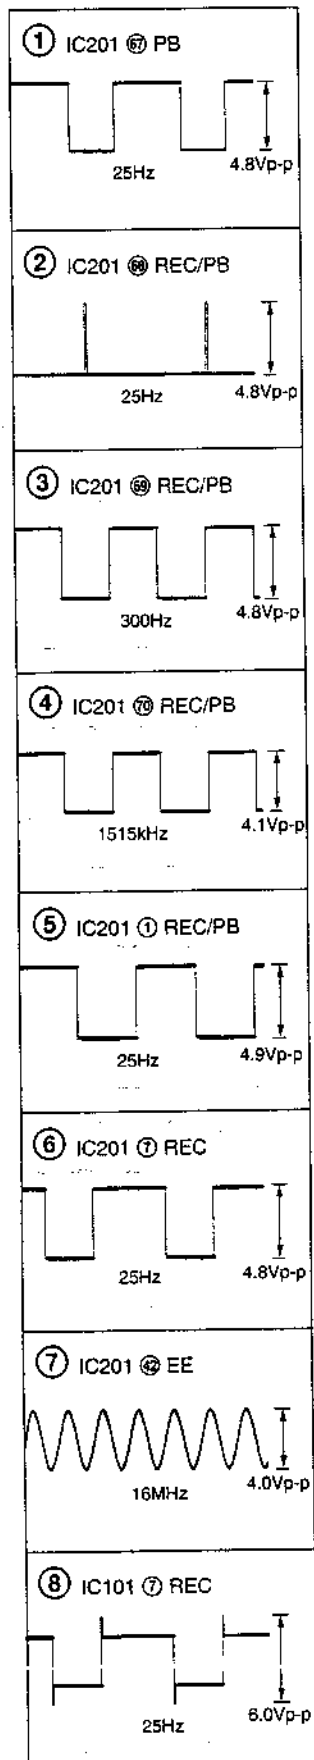

16

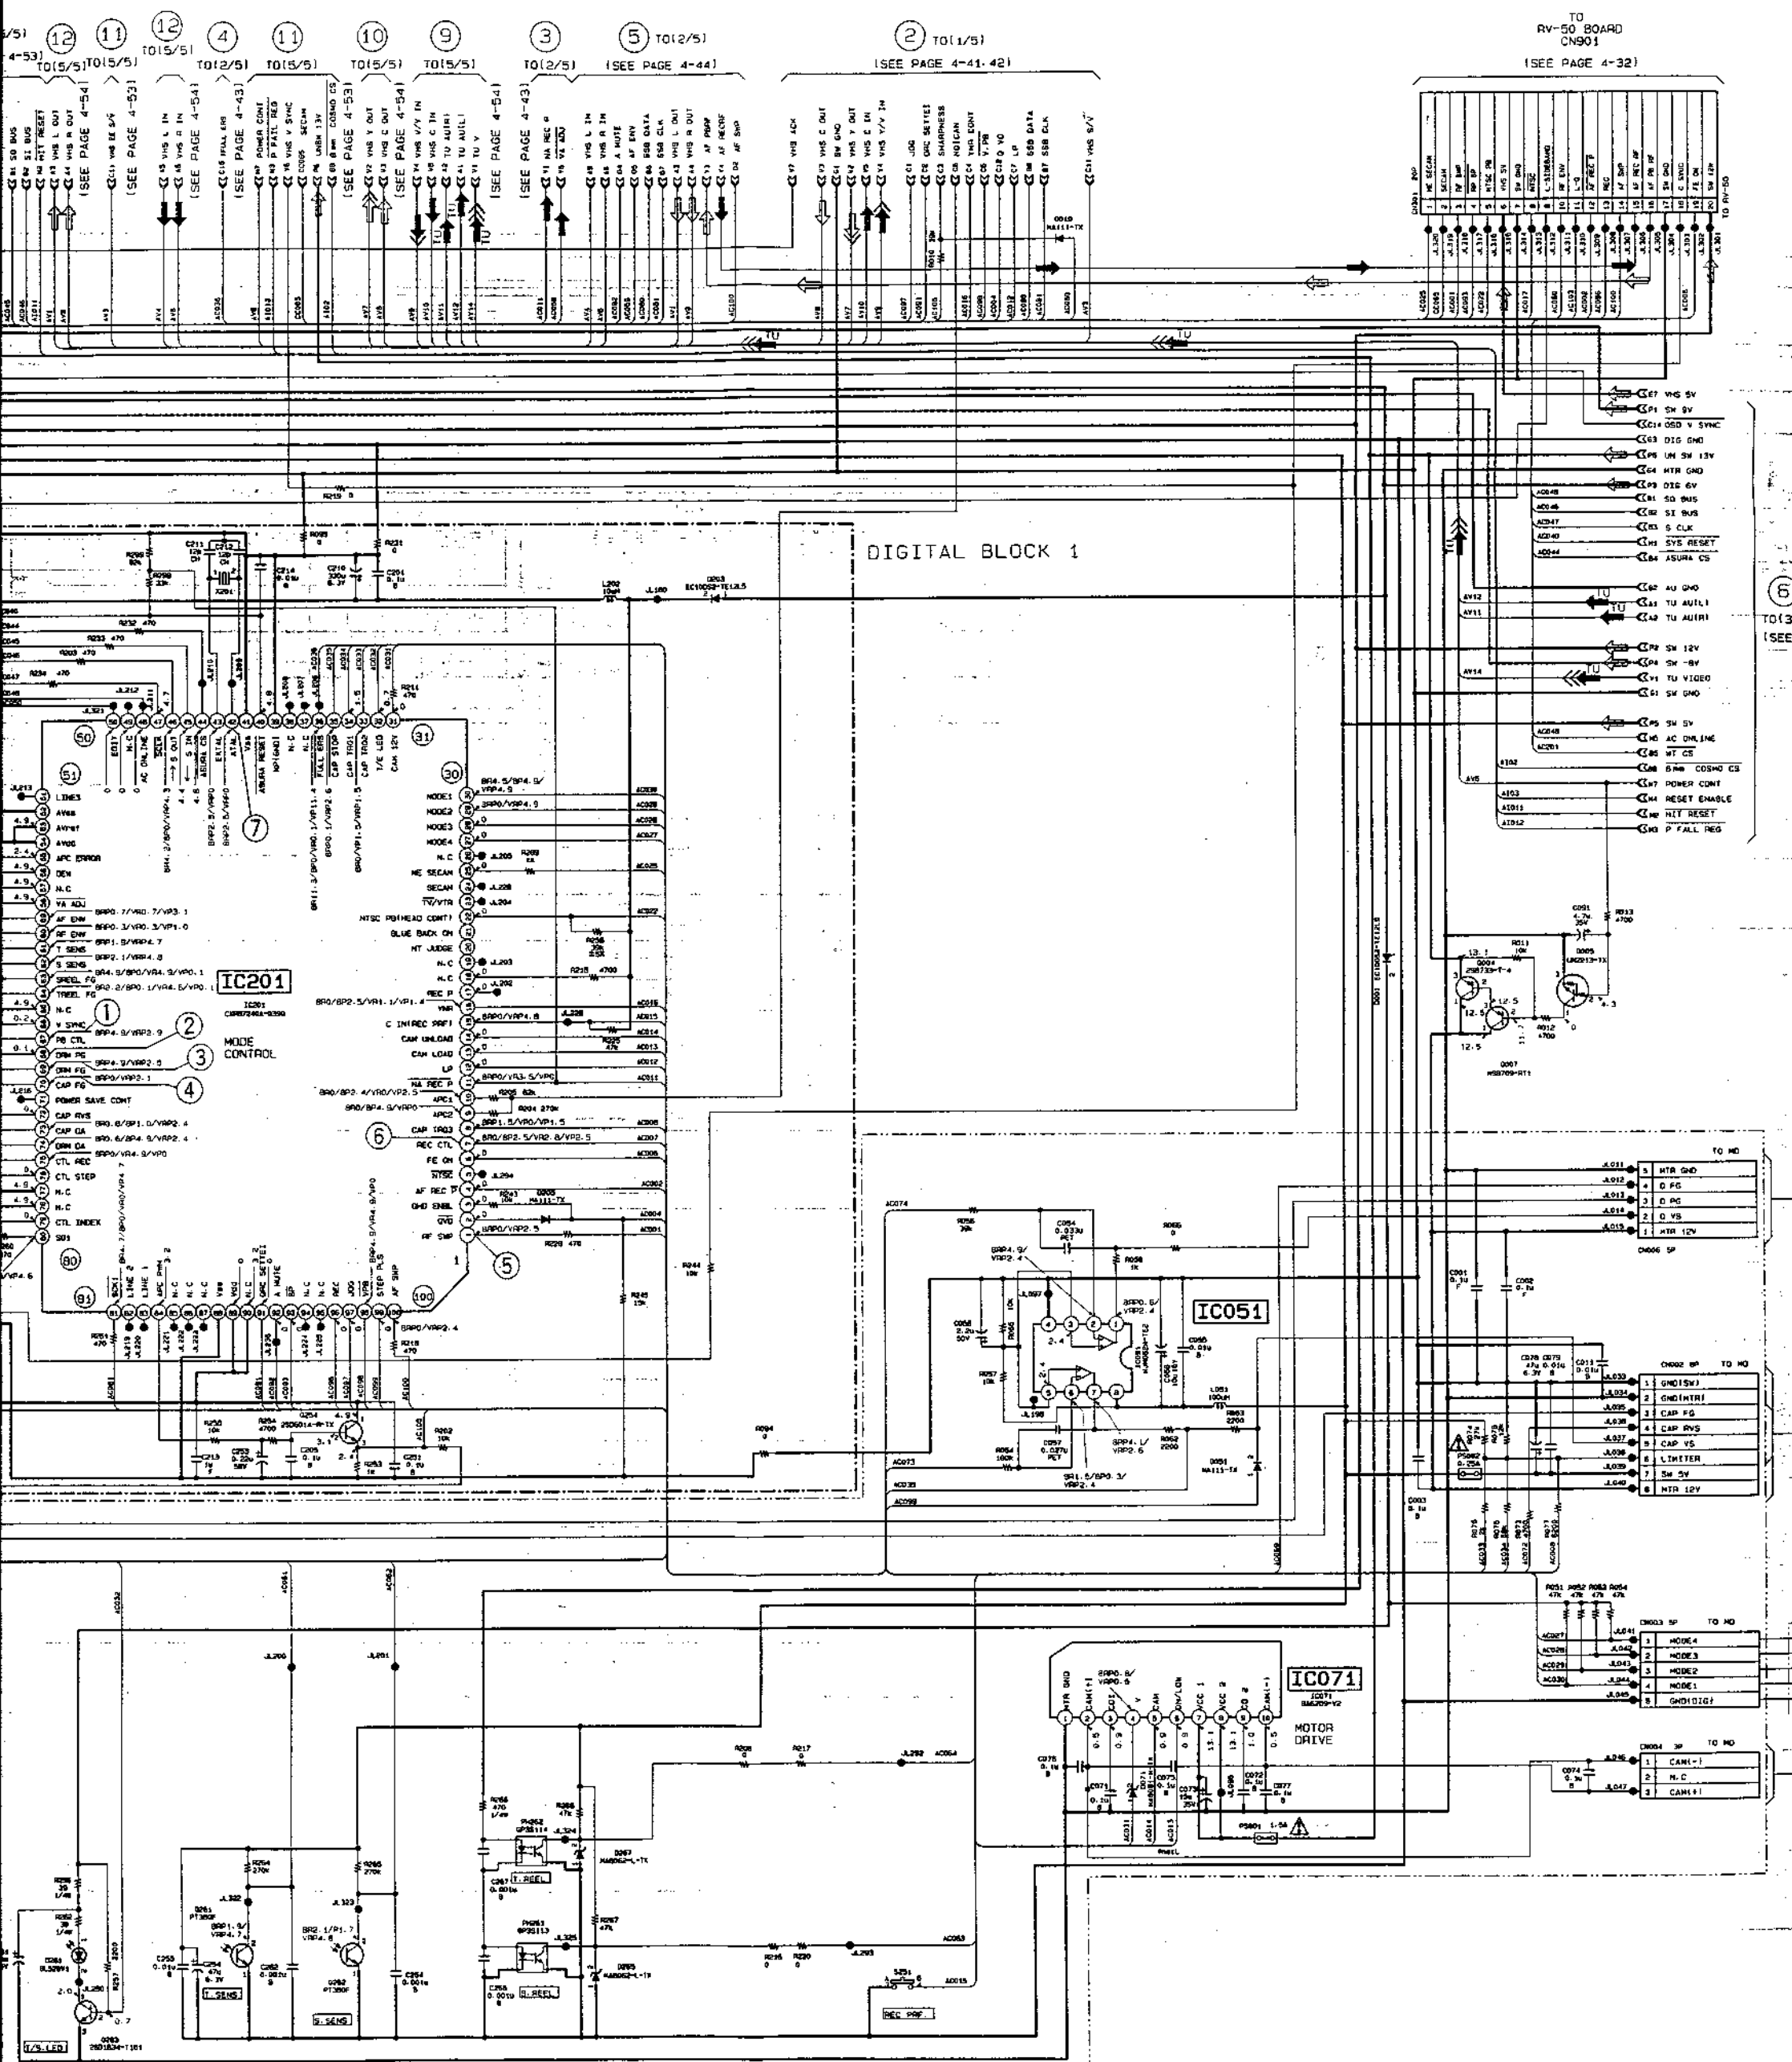

DIGITAL BLOCK 1

TO RV-50 BOARD CN901 (SEE PAGE 4-32)

TO 3 (SEE PAGE 4-33)


TO MD

TO MD

TO MD

4 5 6 7 8 9 10 11 12 13 14 15 16 17 18

75)

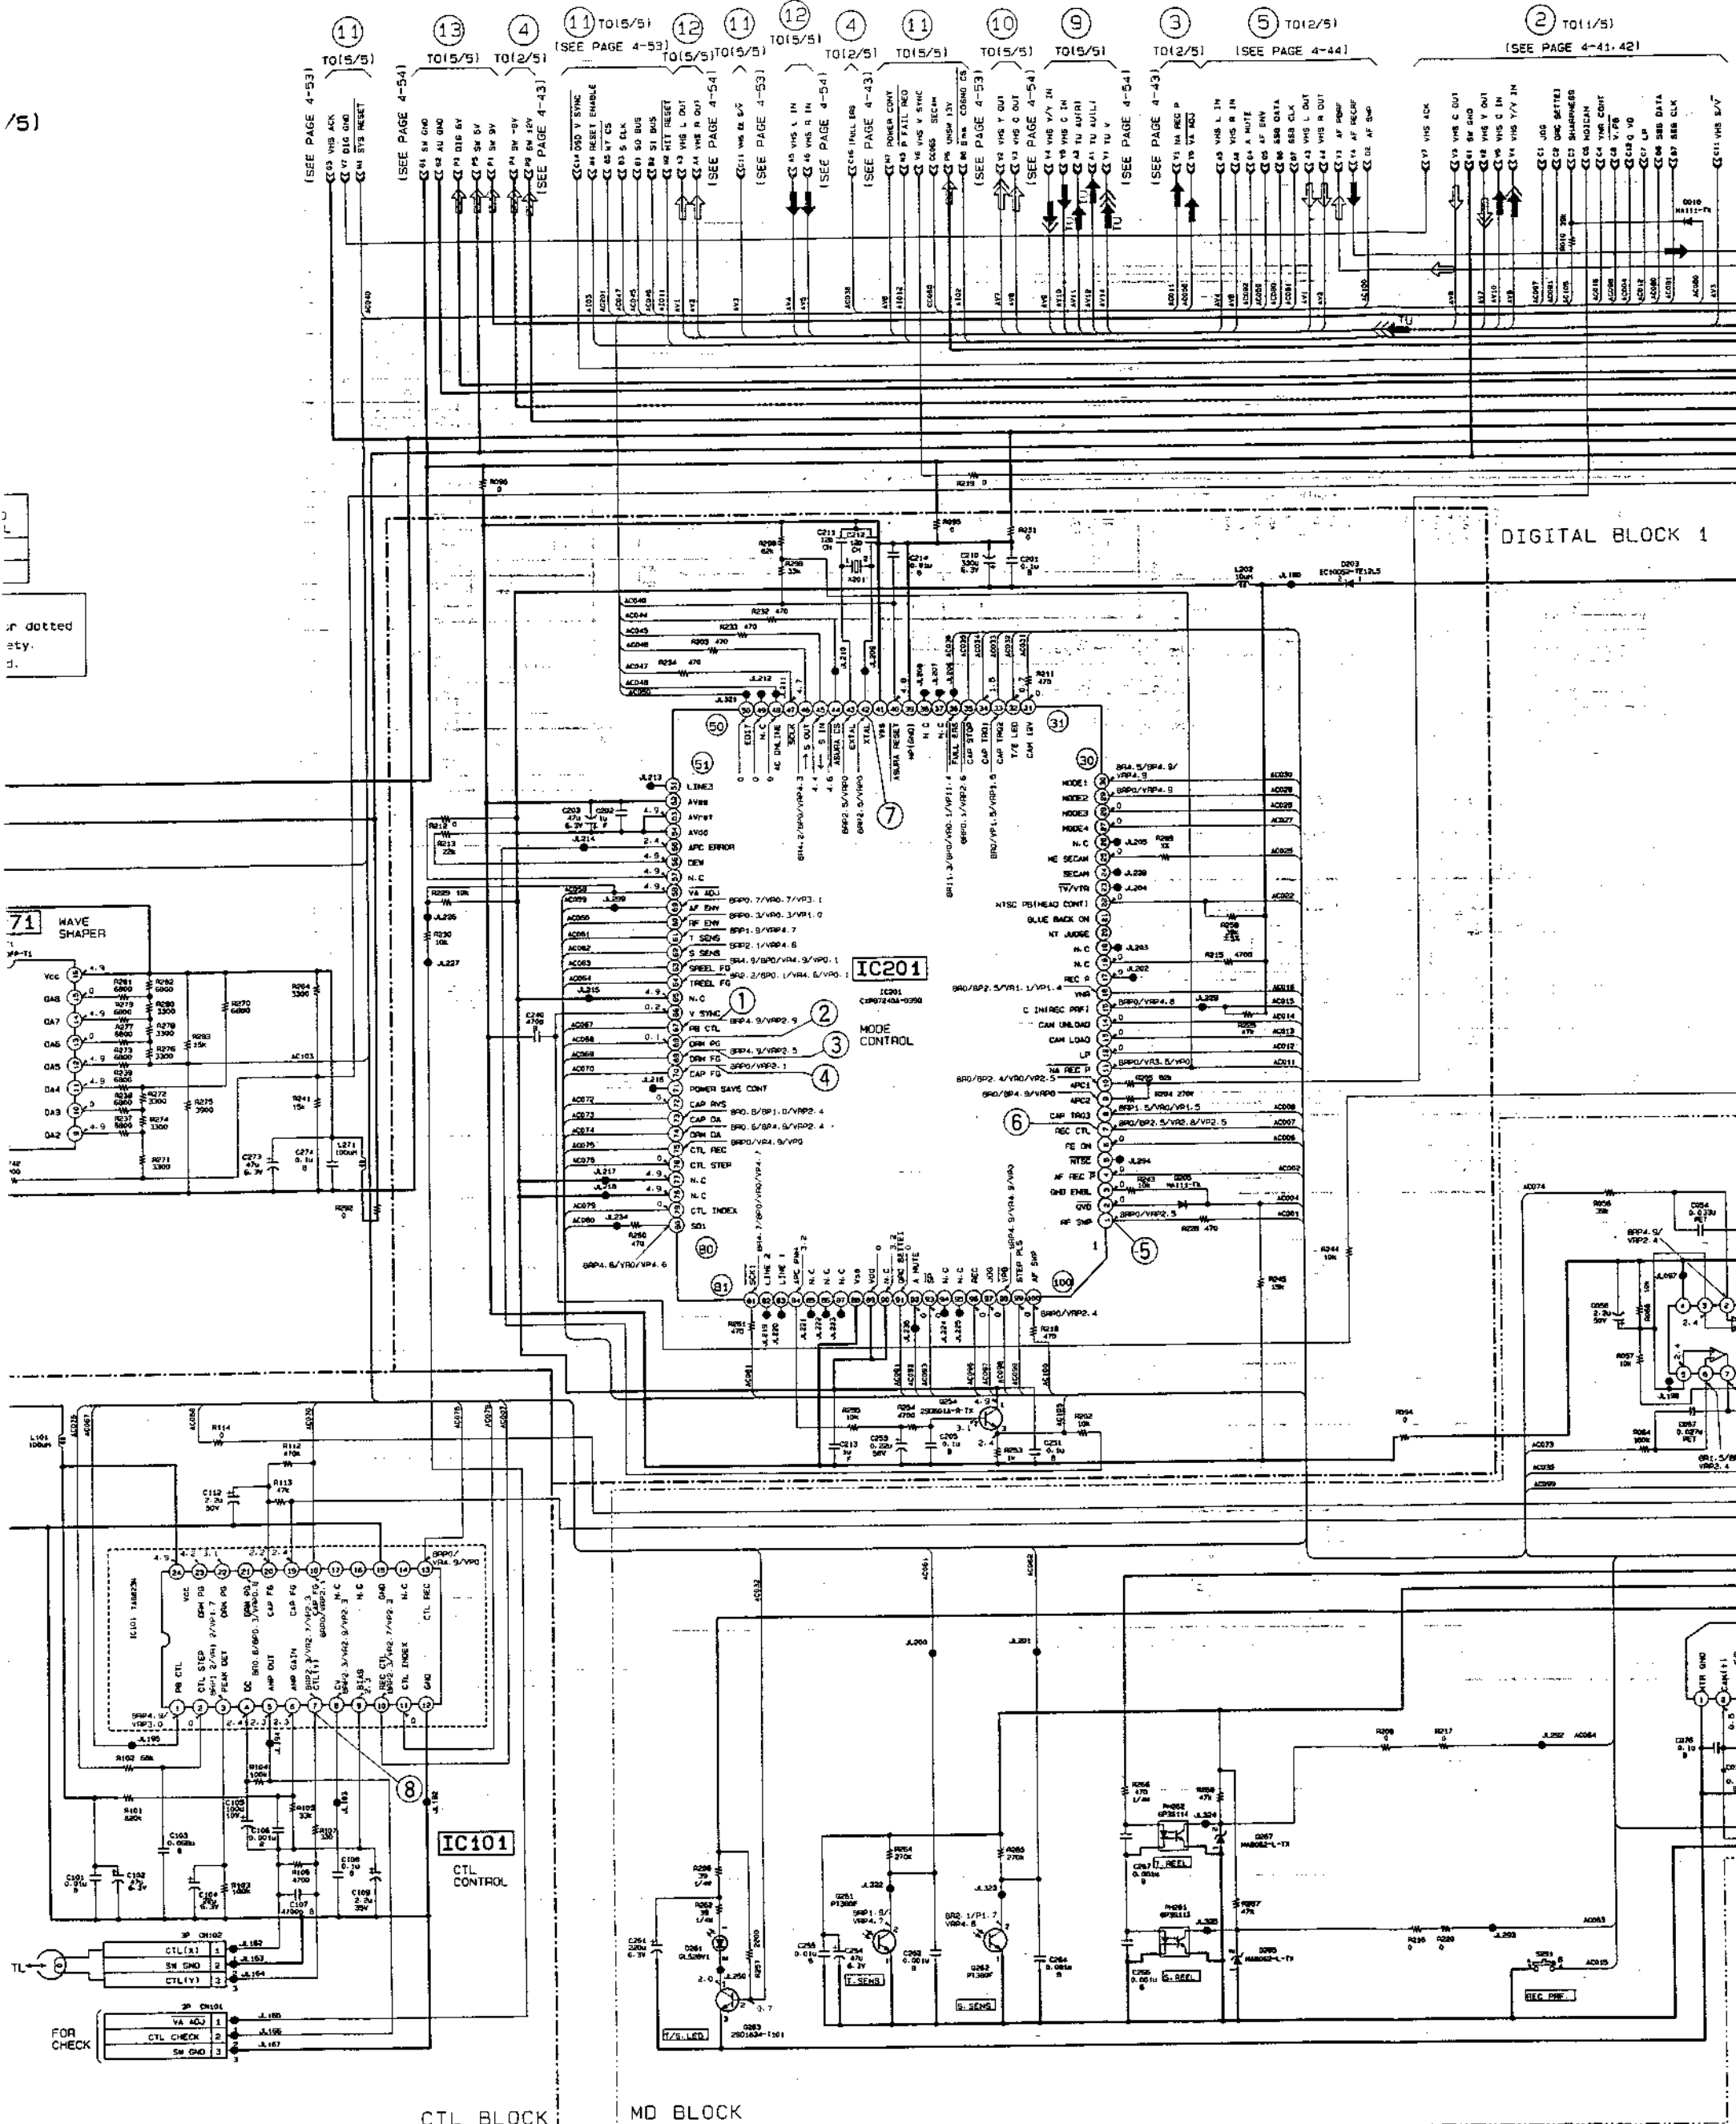


CTL BLOCK

MD BLOCK

DIGITAL BLOCK 1

15 16 17 18 19 20 21 22 23 24

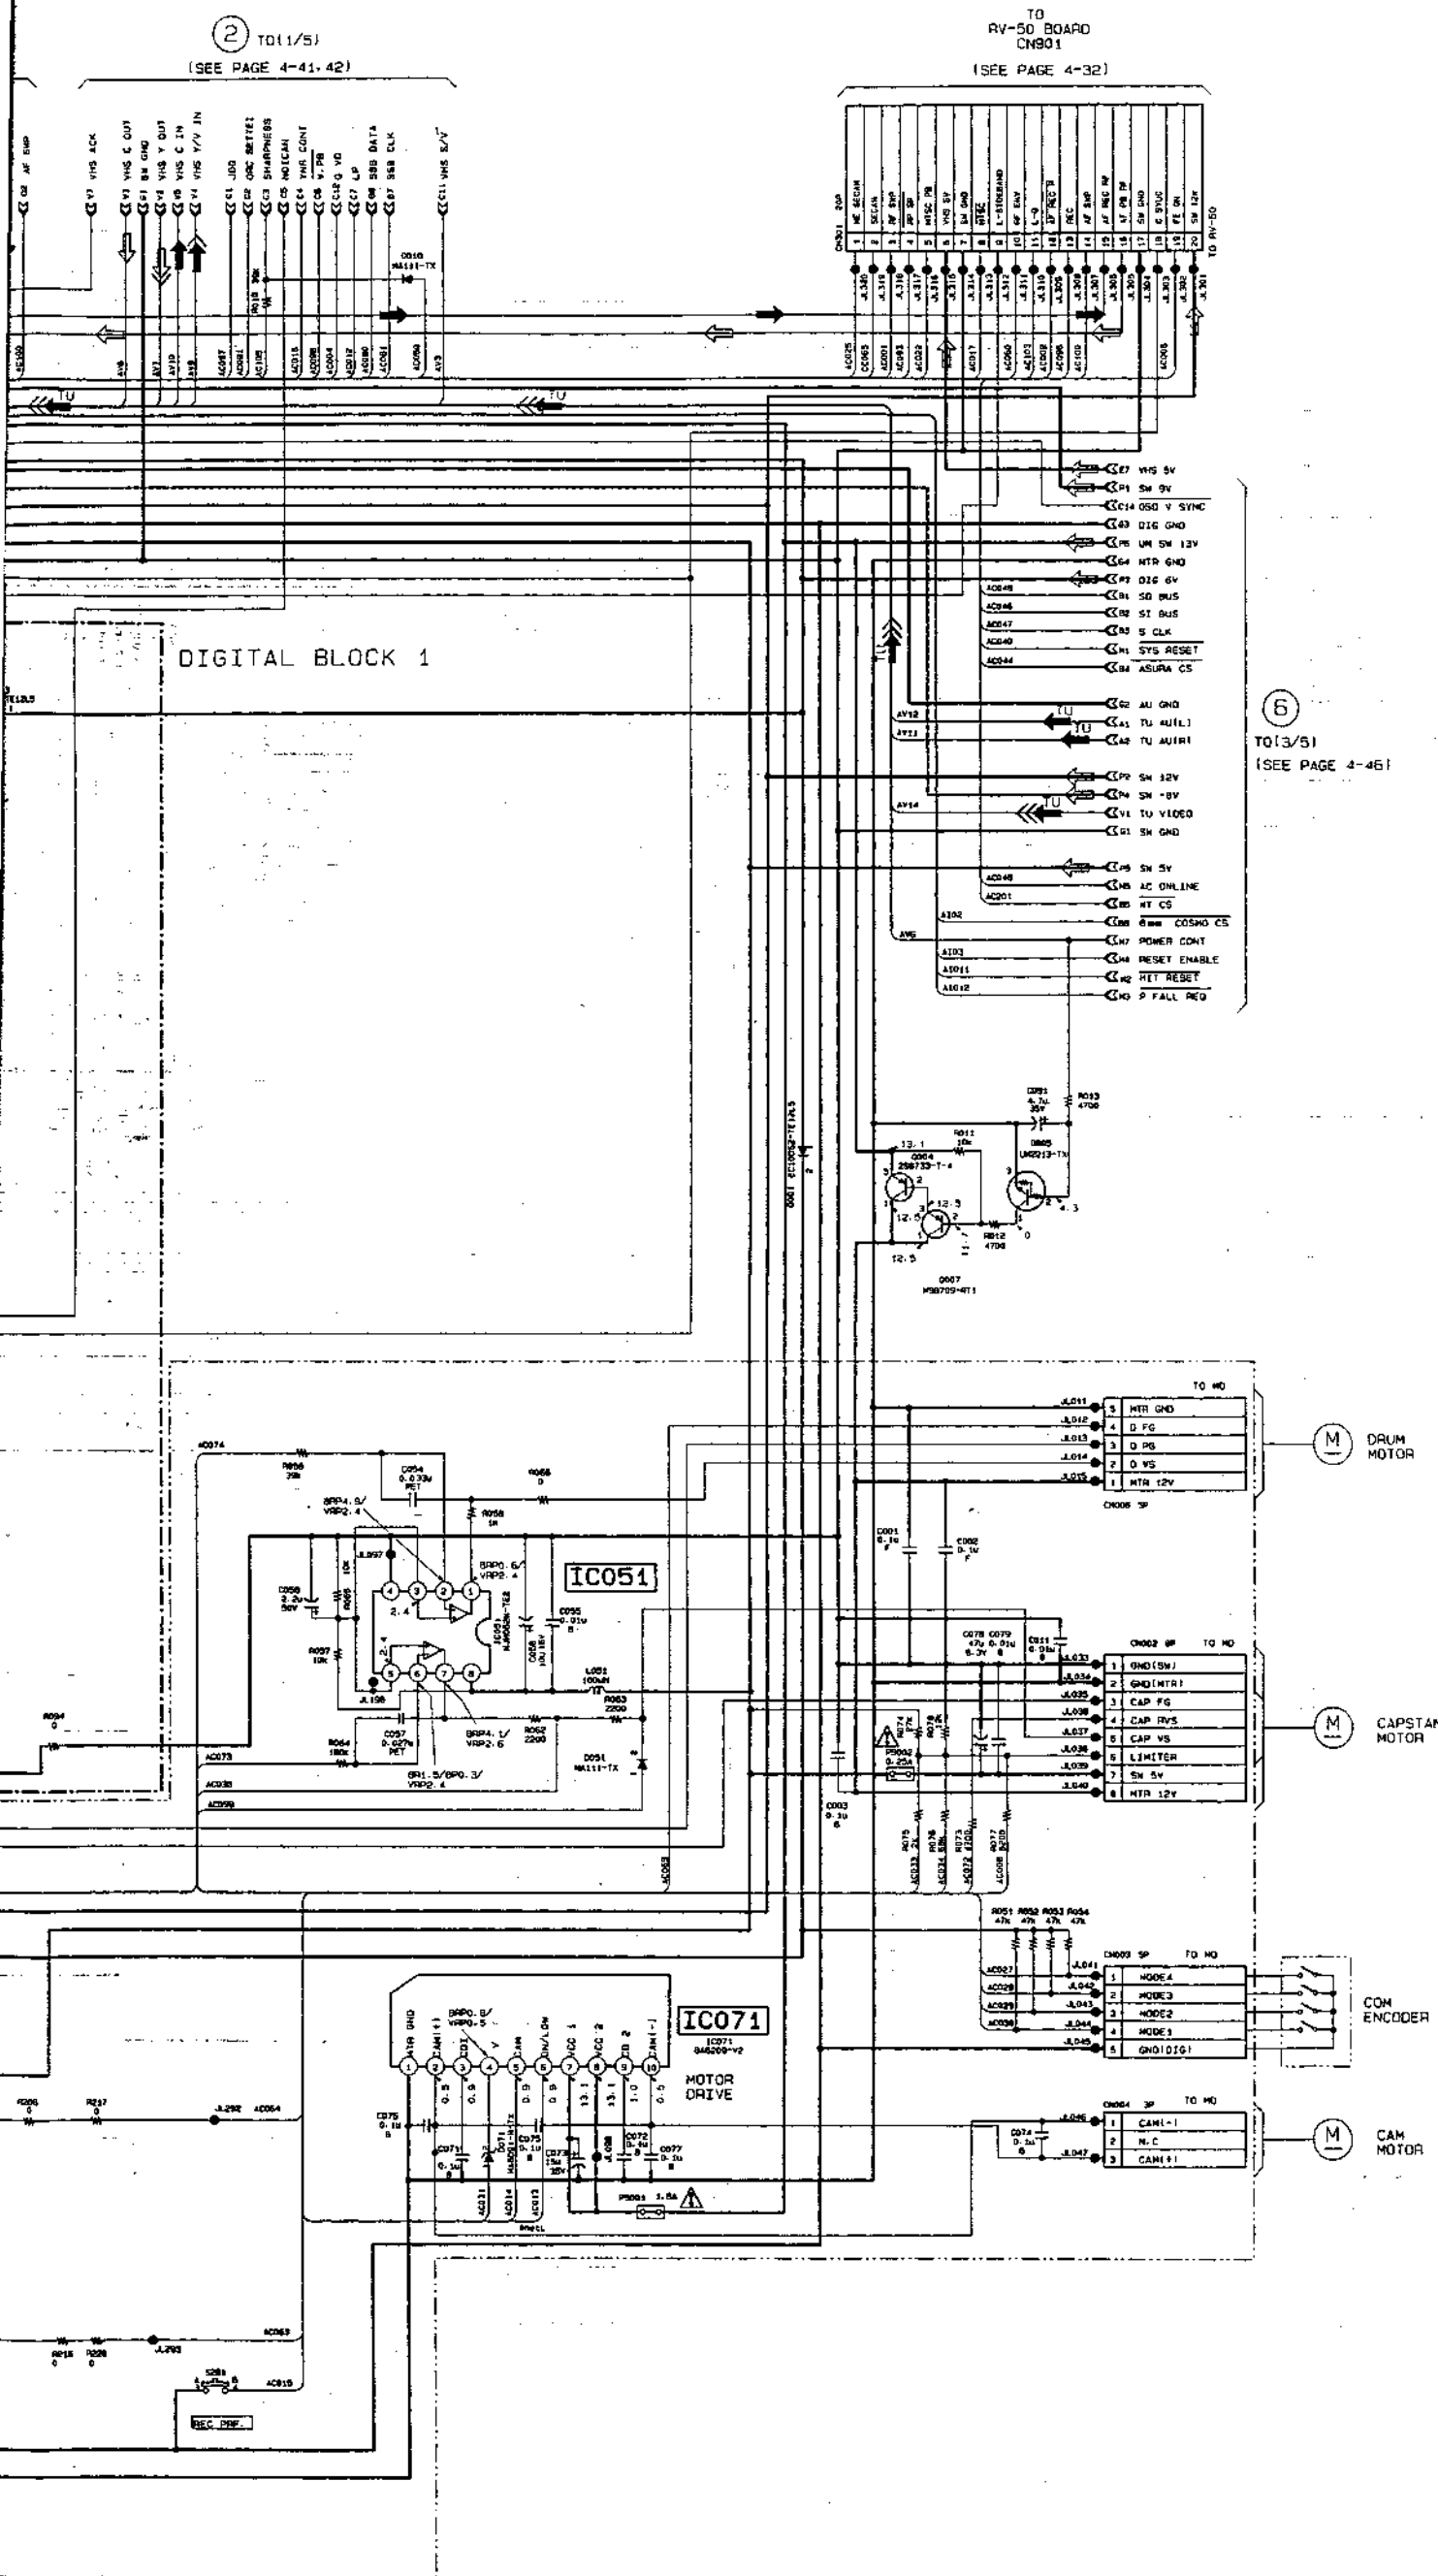

② T0(1/5)
(SEE PAGE 4-41, 42)


T0
RV-50 BOARD
CN901
(SEE PAGE 4-32)


⑥ T0(3/5)
(SEE PAGE 4-46)

MV-34 (MODE CONTROL, IN/OUT SELECTOR) SCHEMATIC DIAGRAM


— Ref. No. MV-34 Board; 4,000 Series —


• See page 4-36 for MV-34 BOARD printed wiring board.

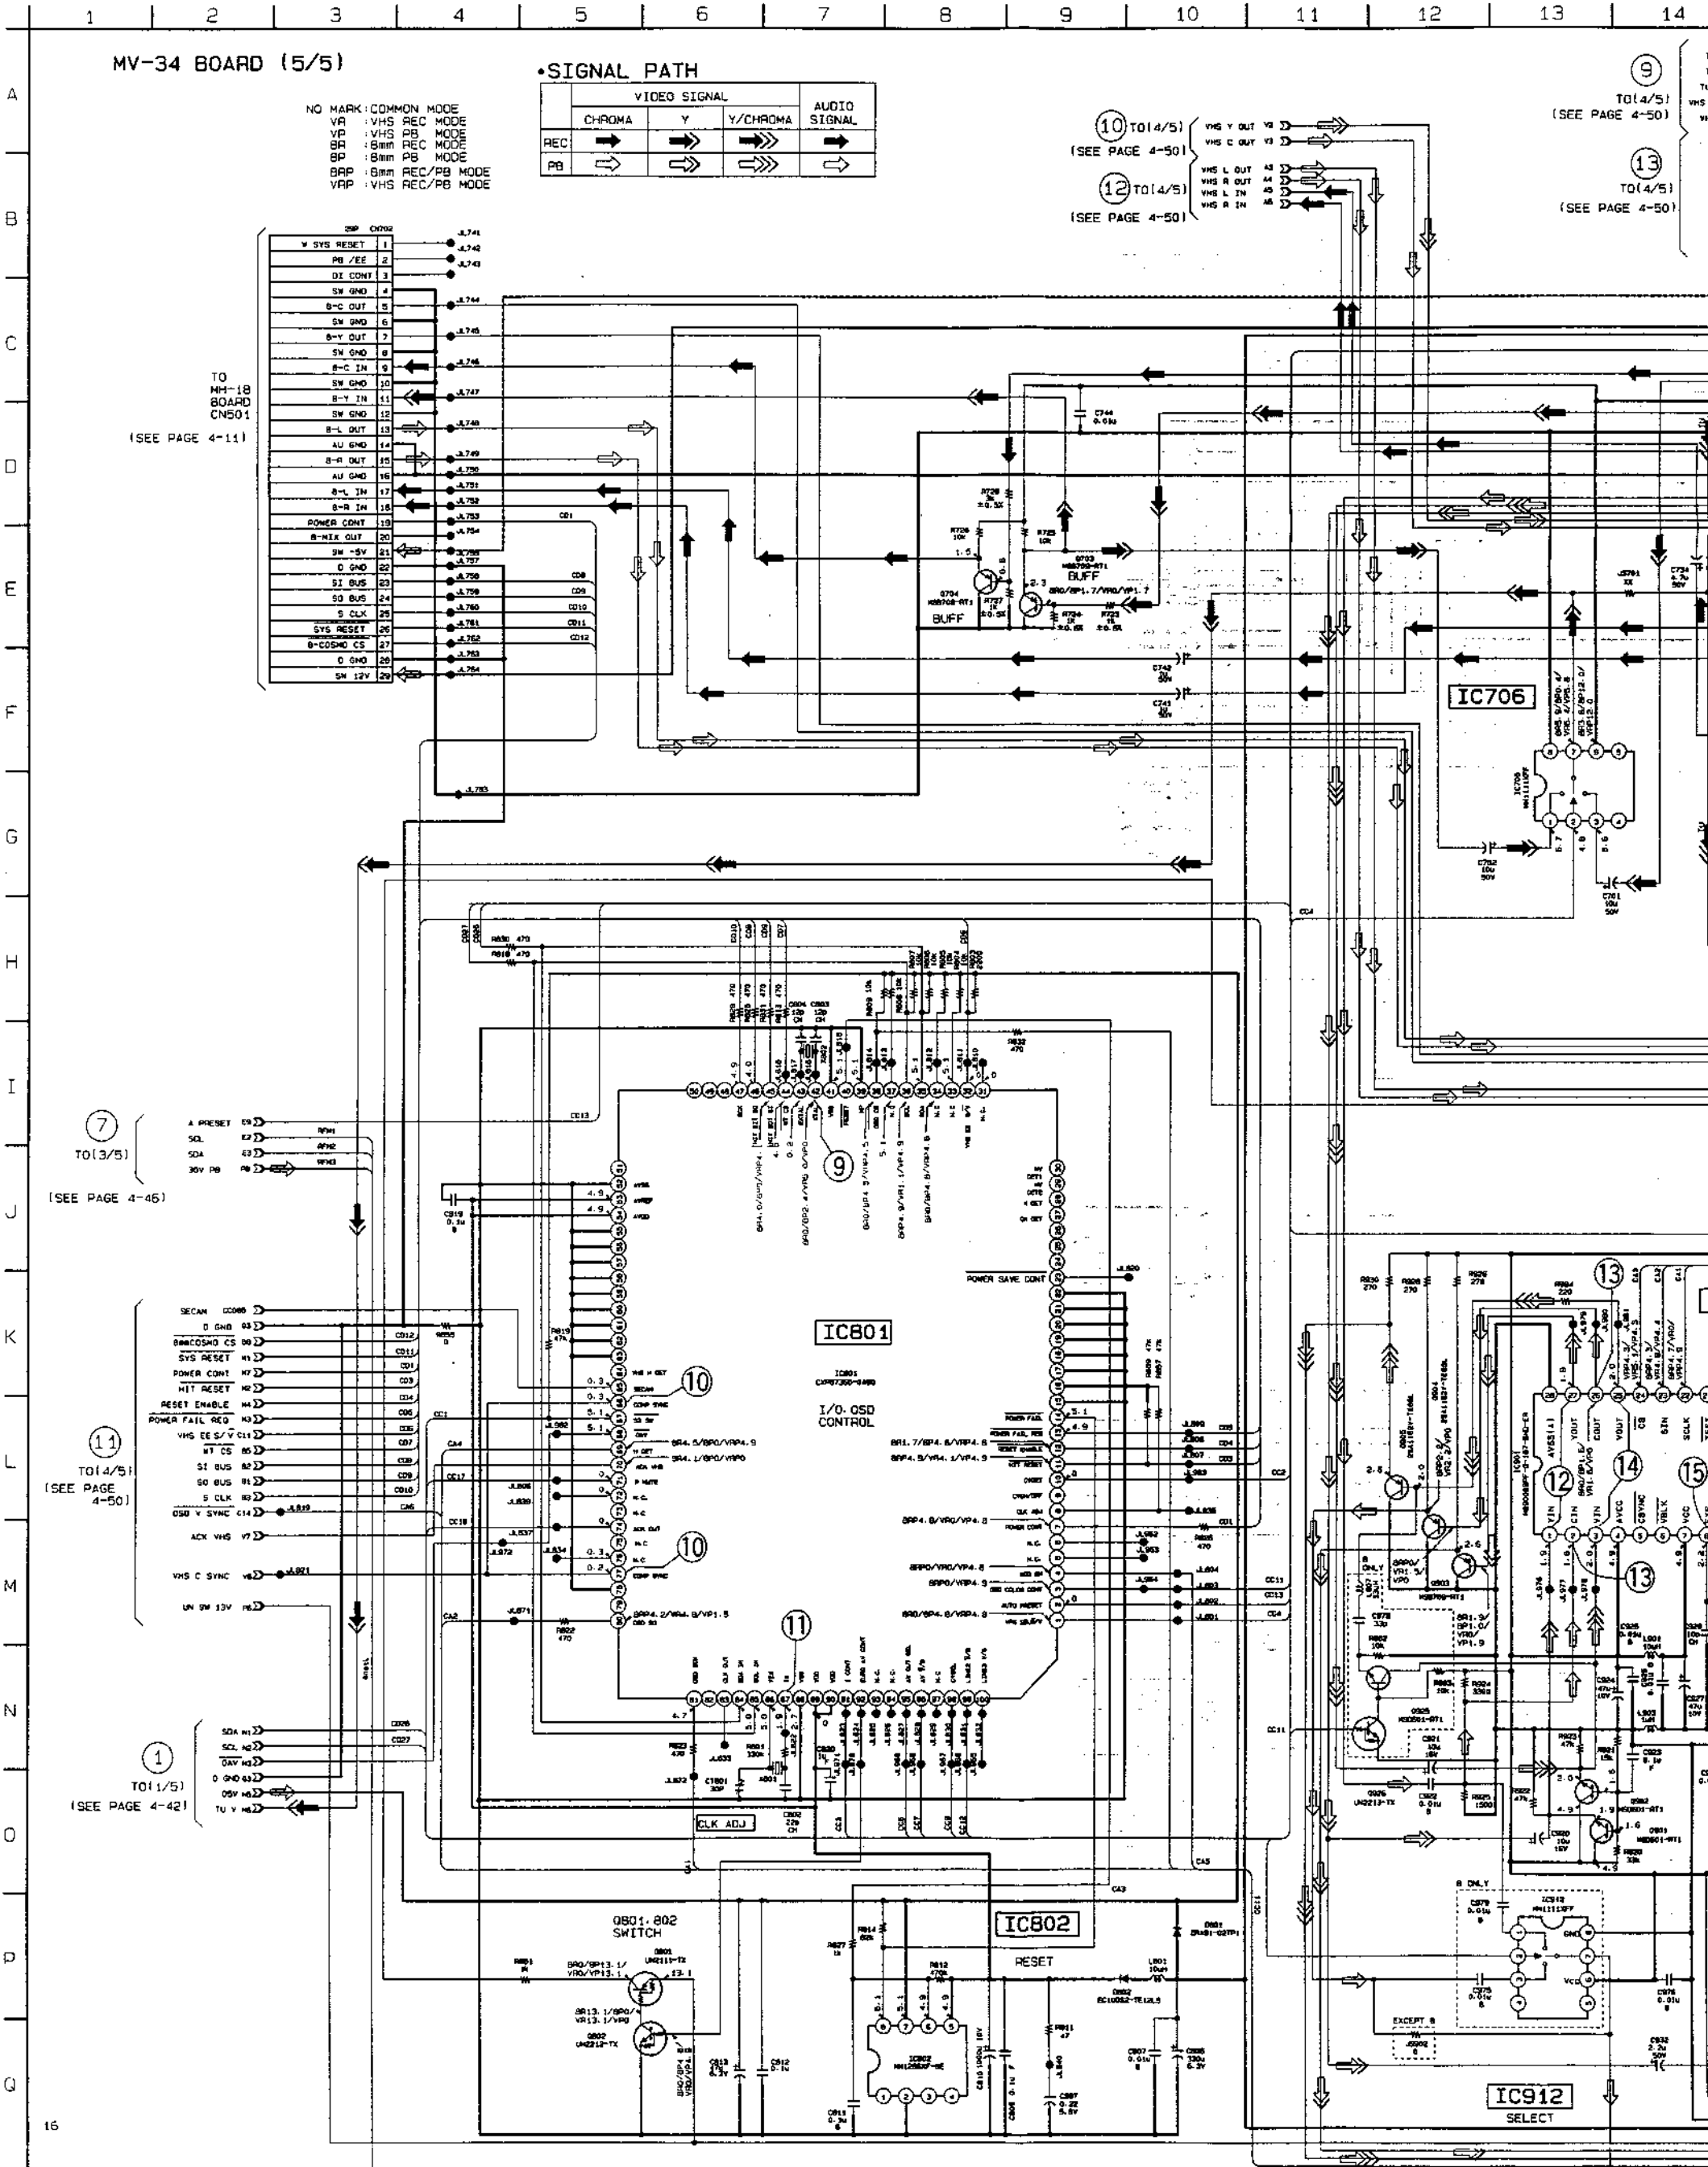

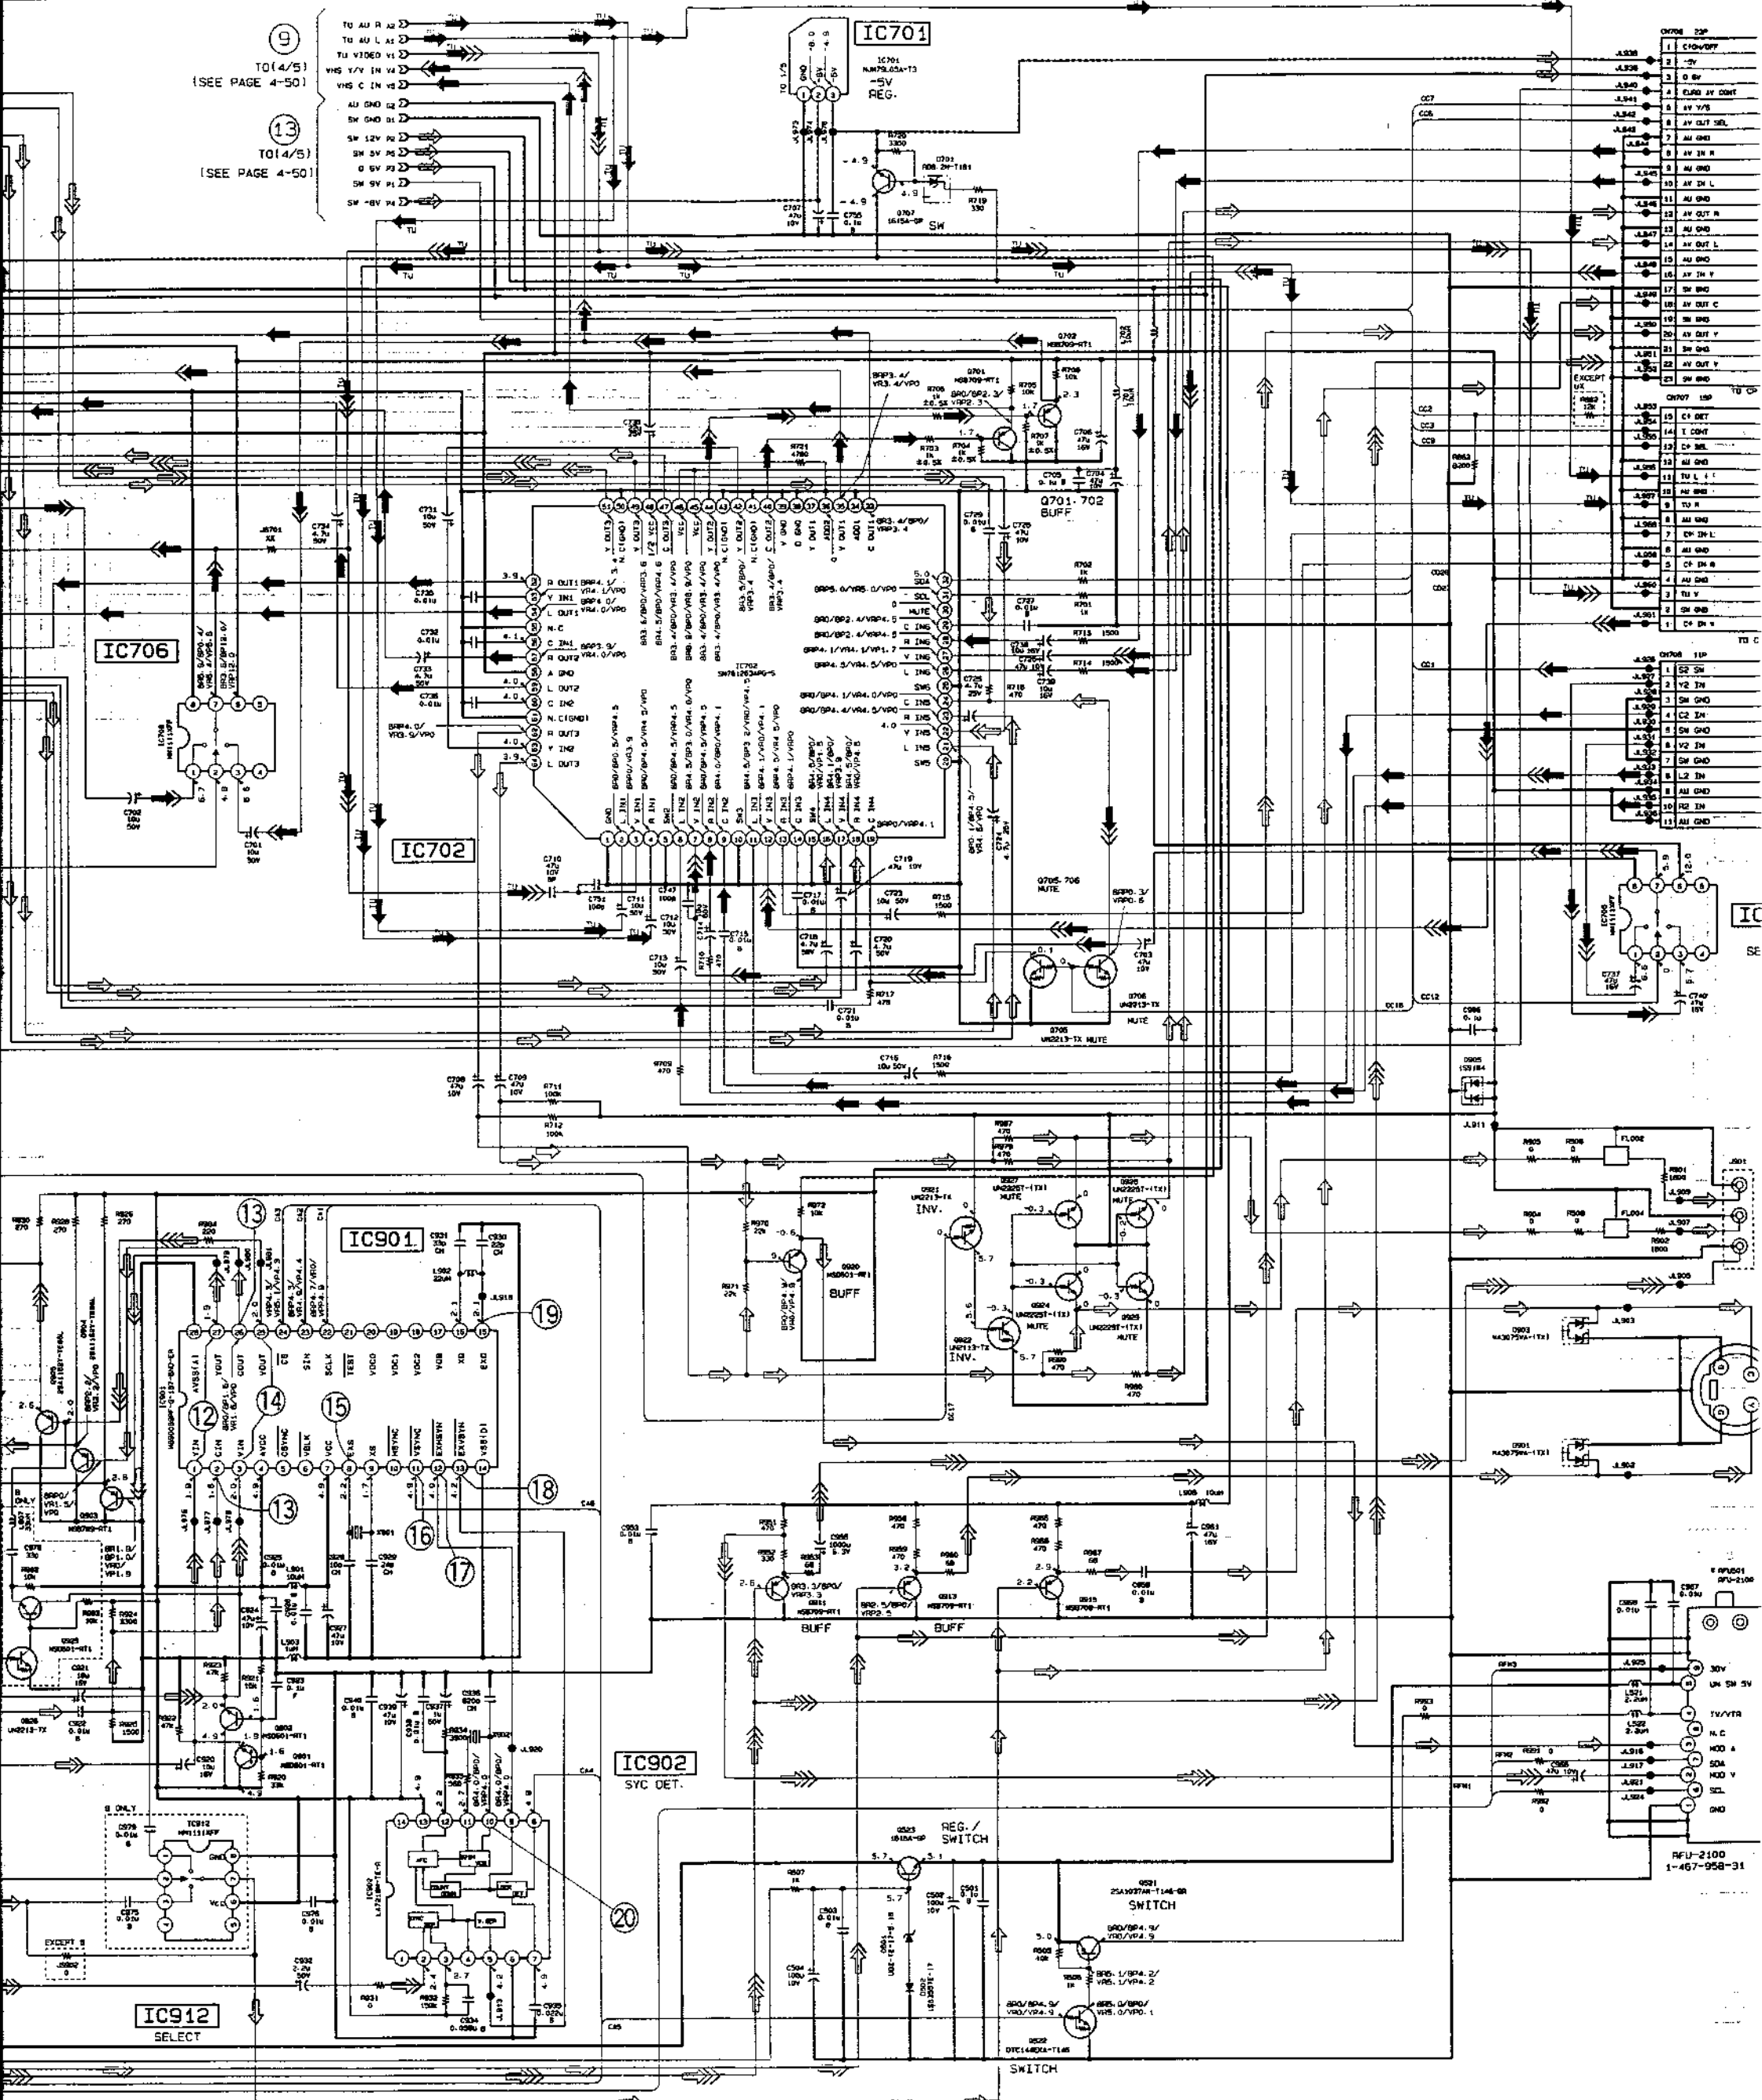


• See page 4-36 for MV-34 BOARD printed wiring board.

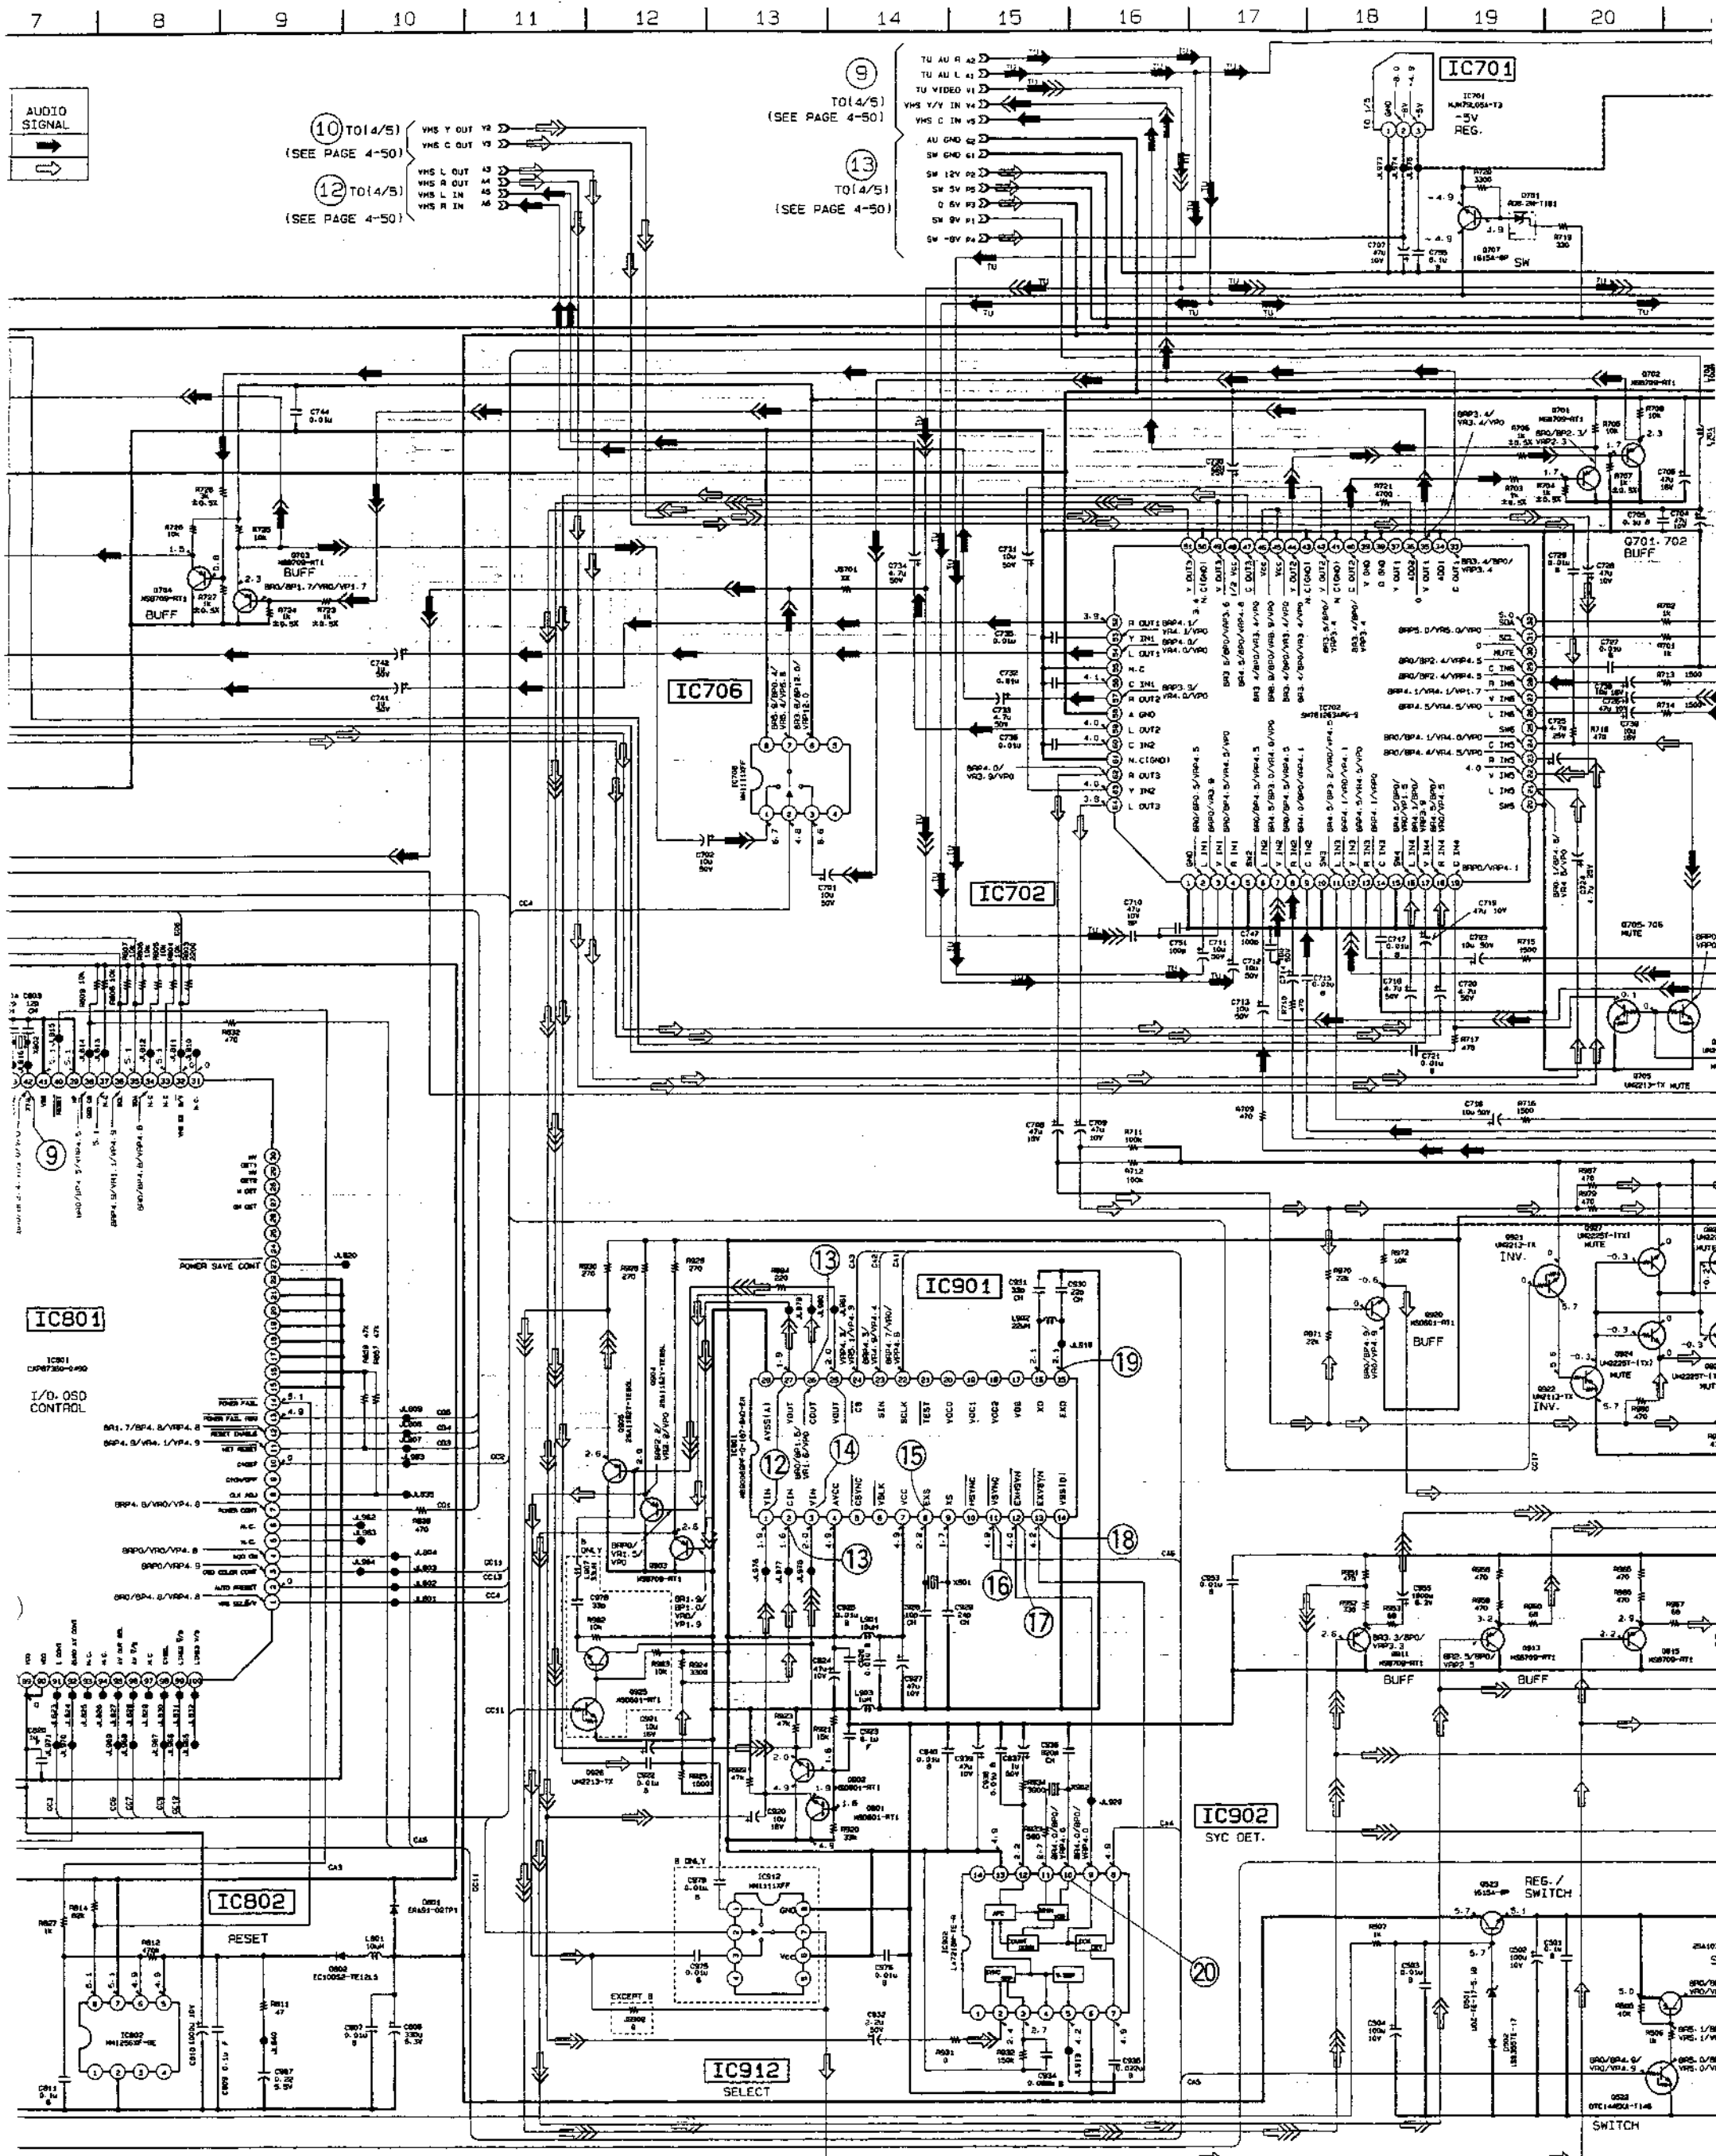


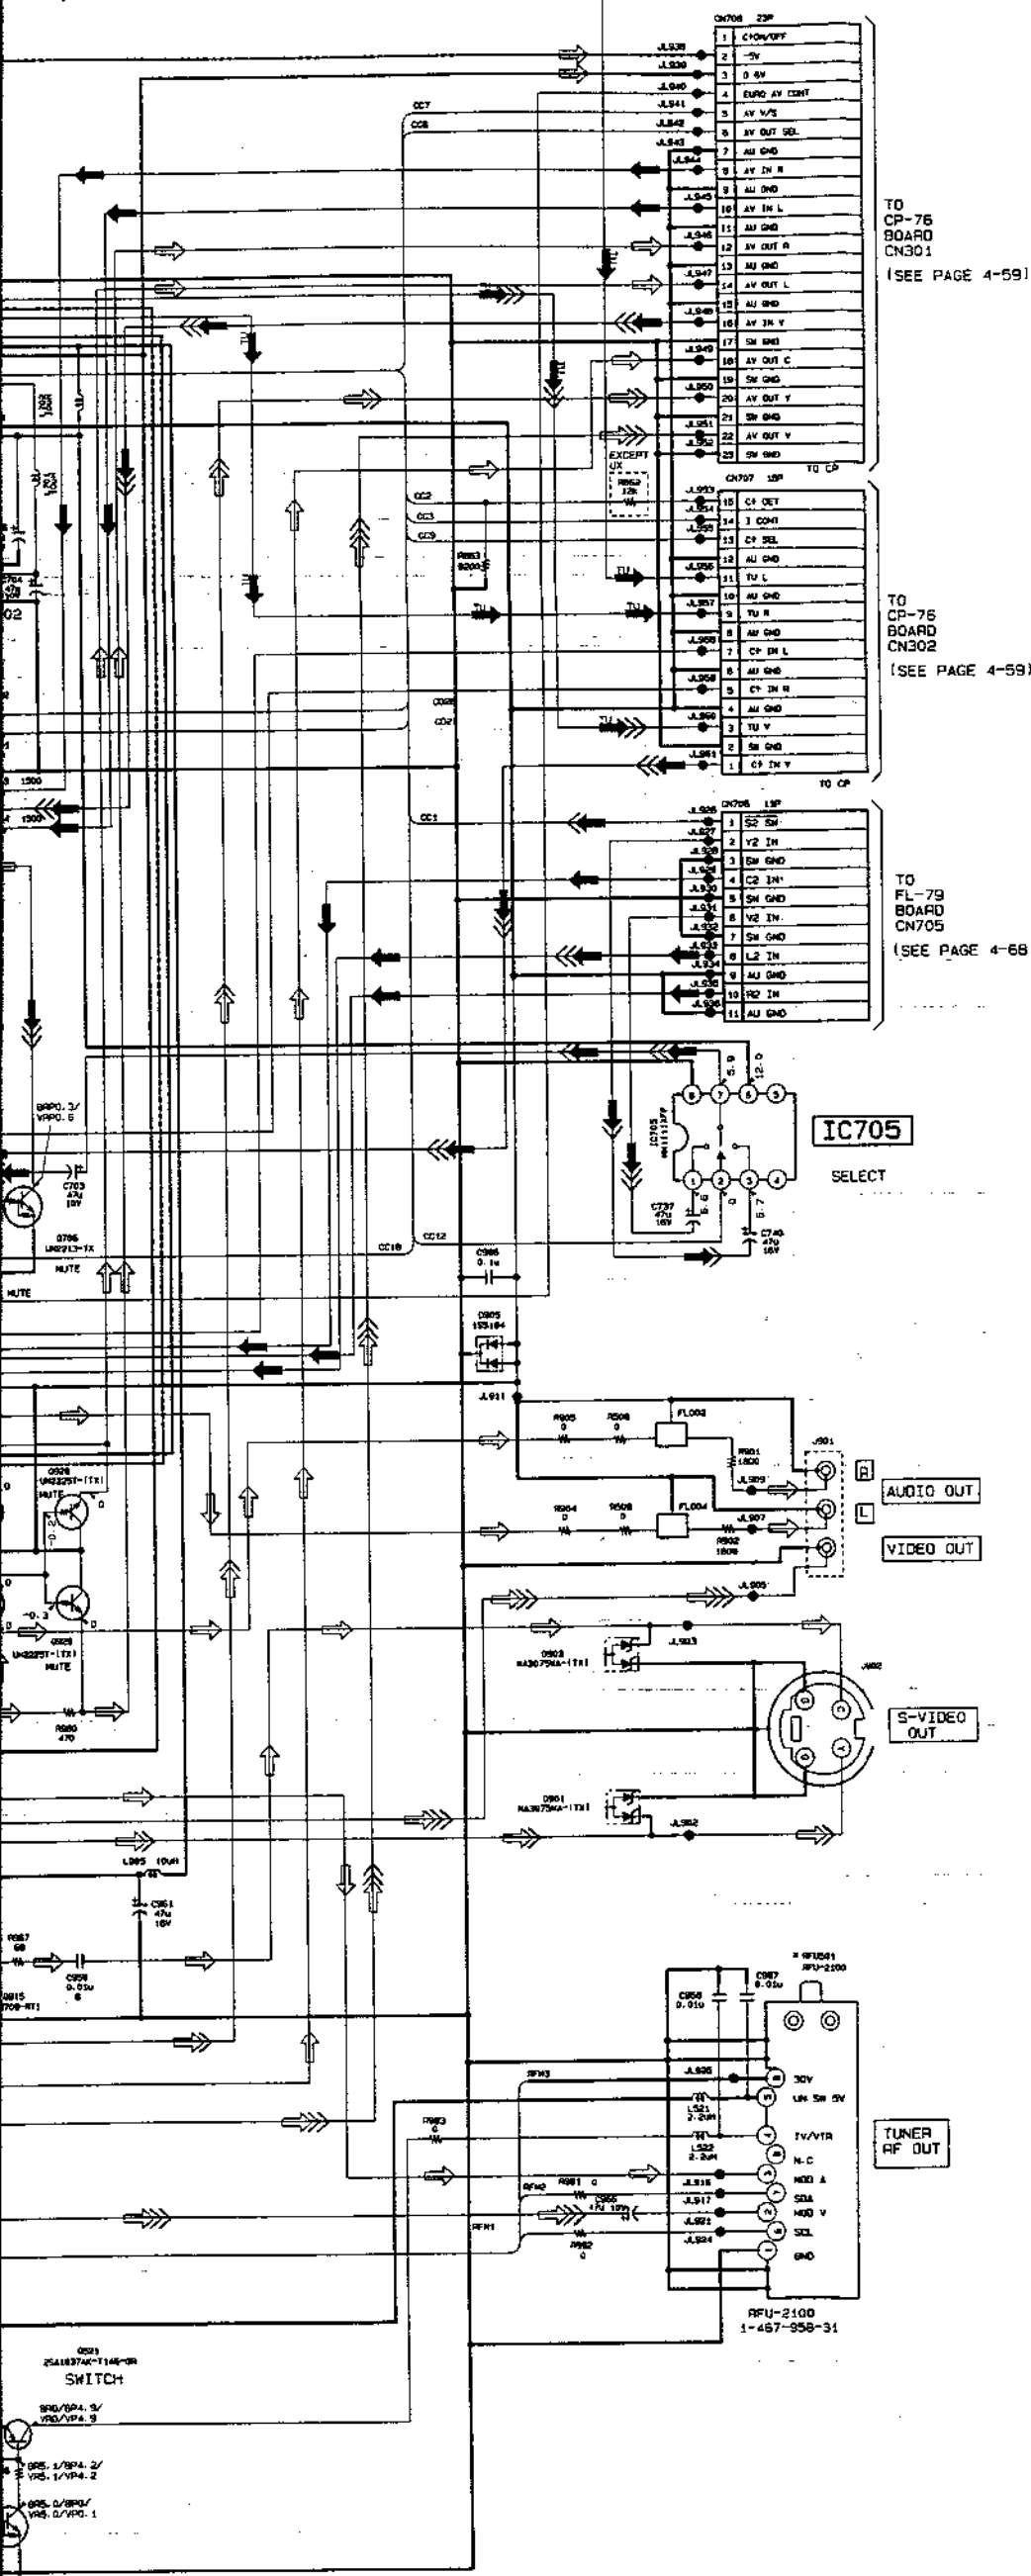

MV-34 BOARD (2/3)

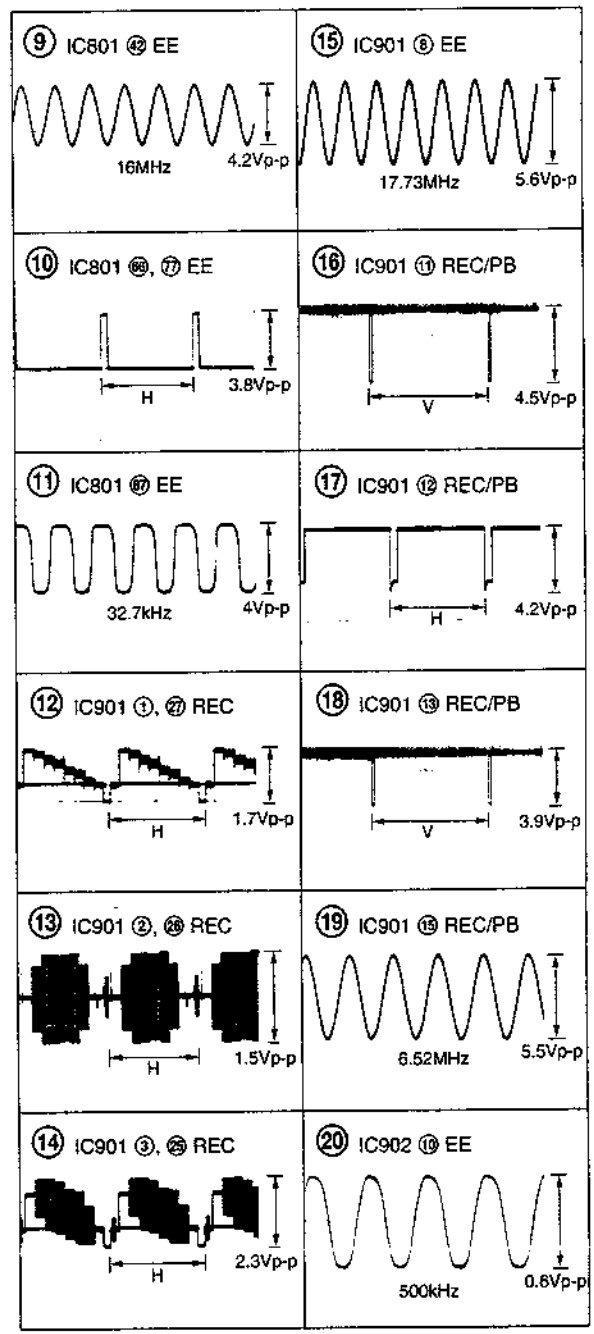


CP401 POWER BLOCK (SR665)

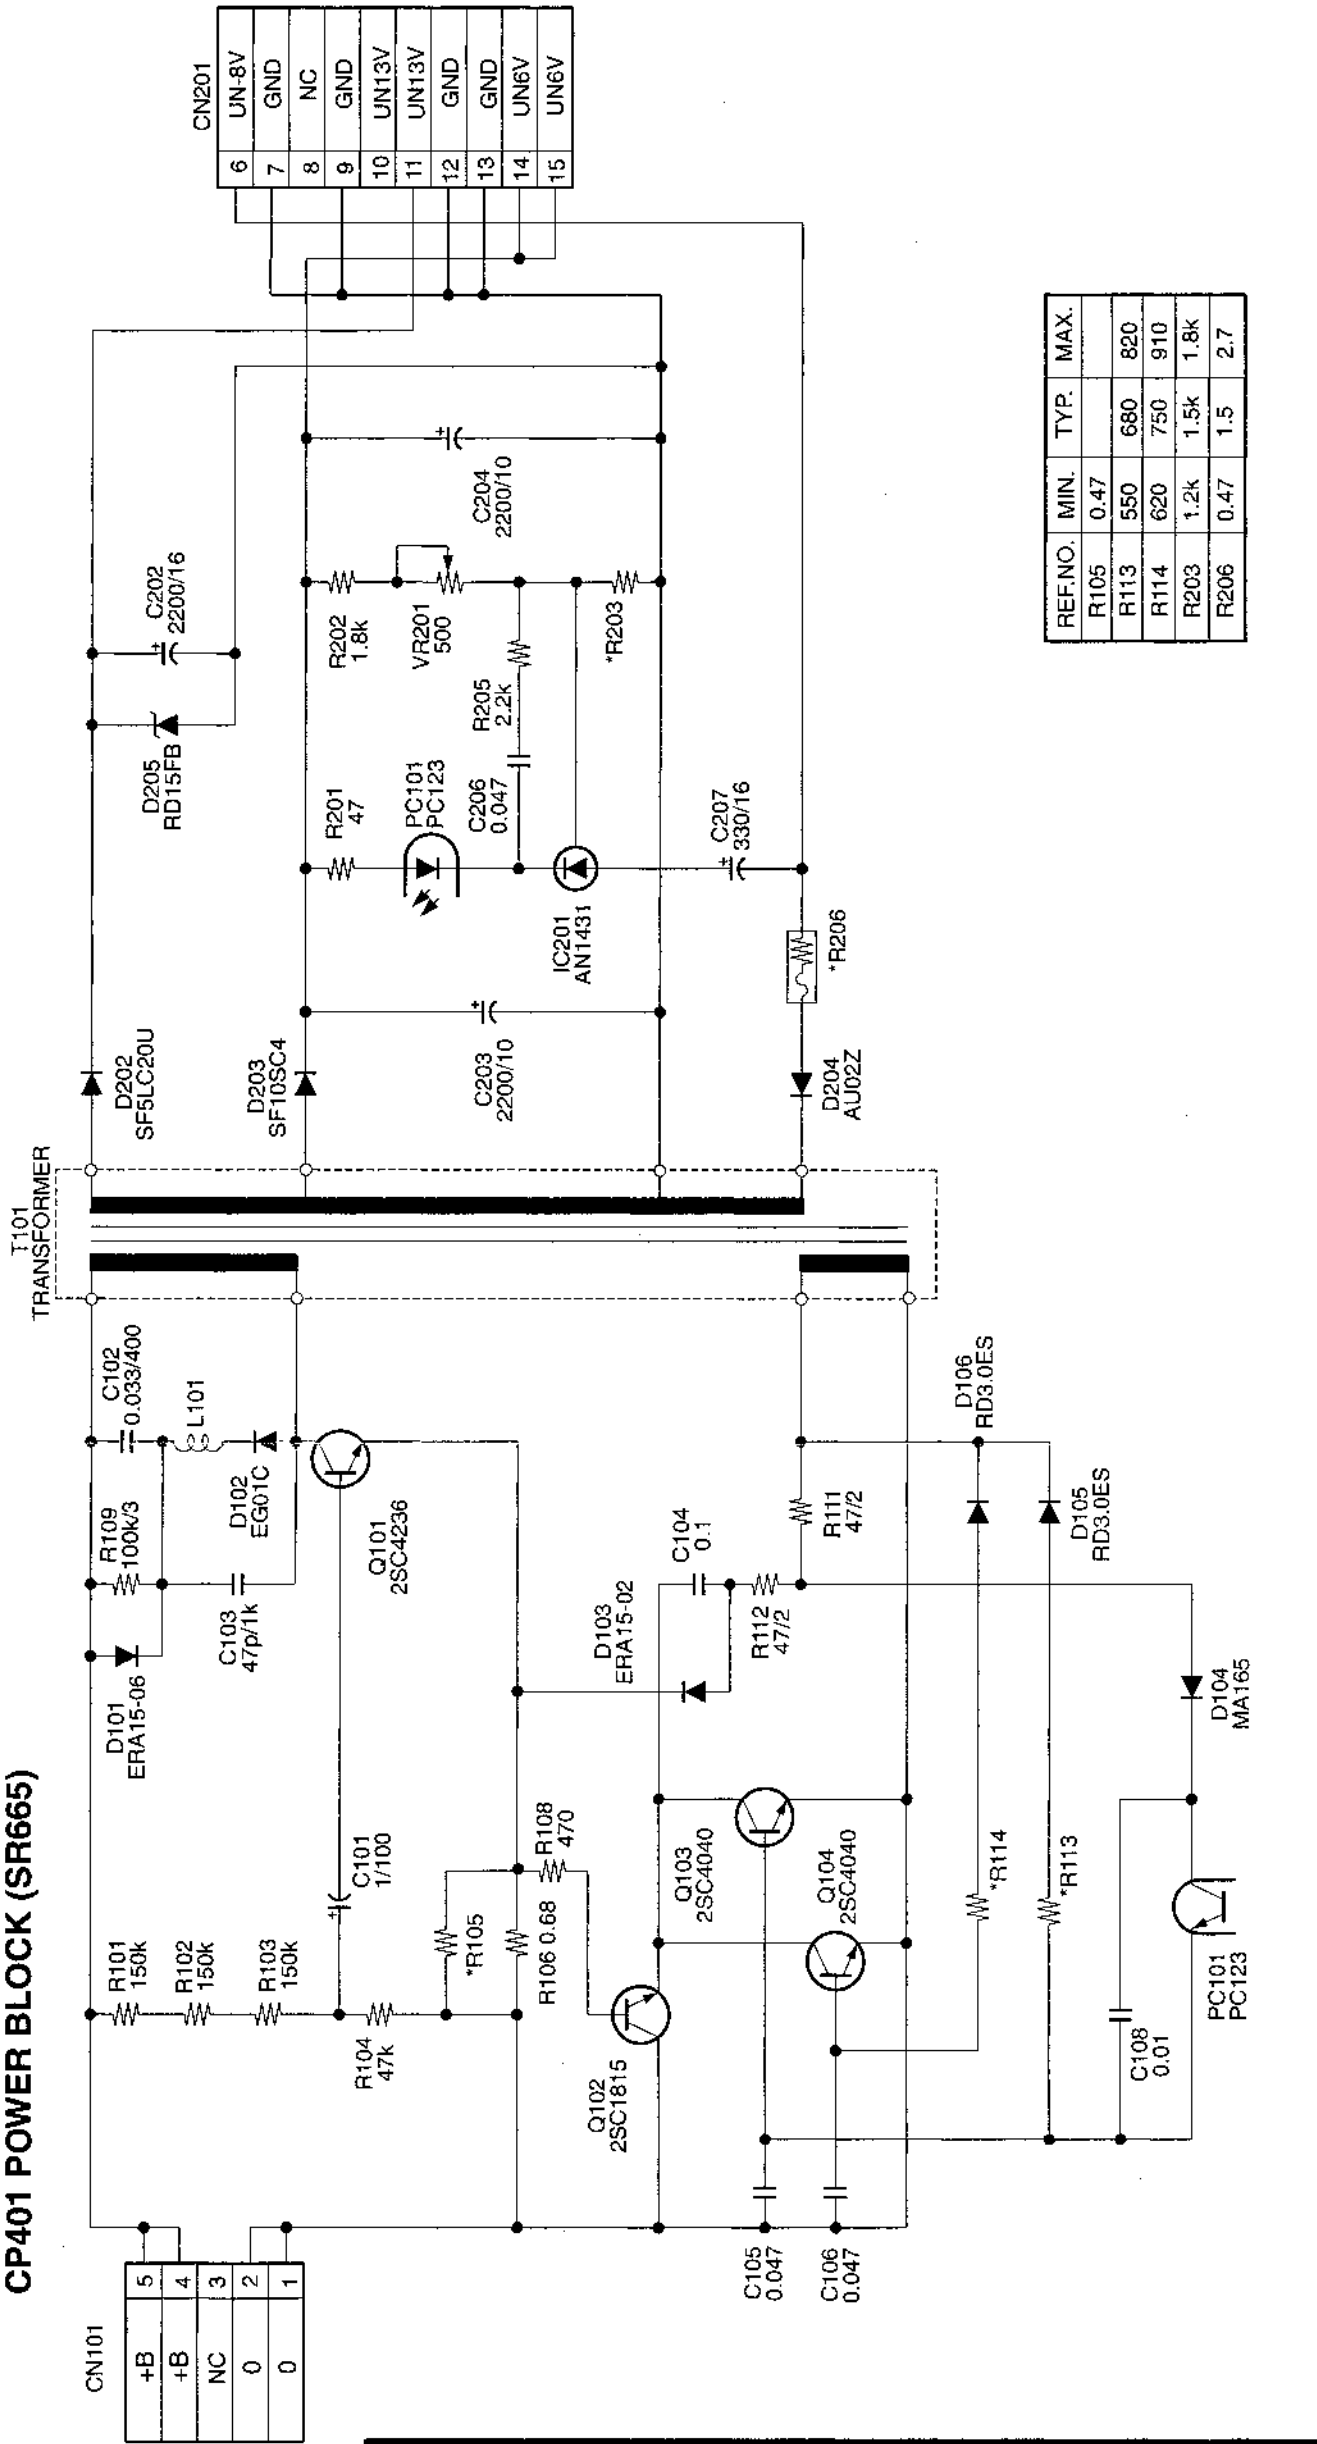


CN101	5	+B
	4	+B
	3	NC
	2	0
	1	0

CN201	6	UN-8V
	7	GND
	8	NC
	9	GND
	10	UN13V
	11	UN13V
	12	GND
	13	GND
	14	UN6V
	15	UN6V

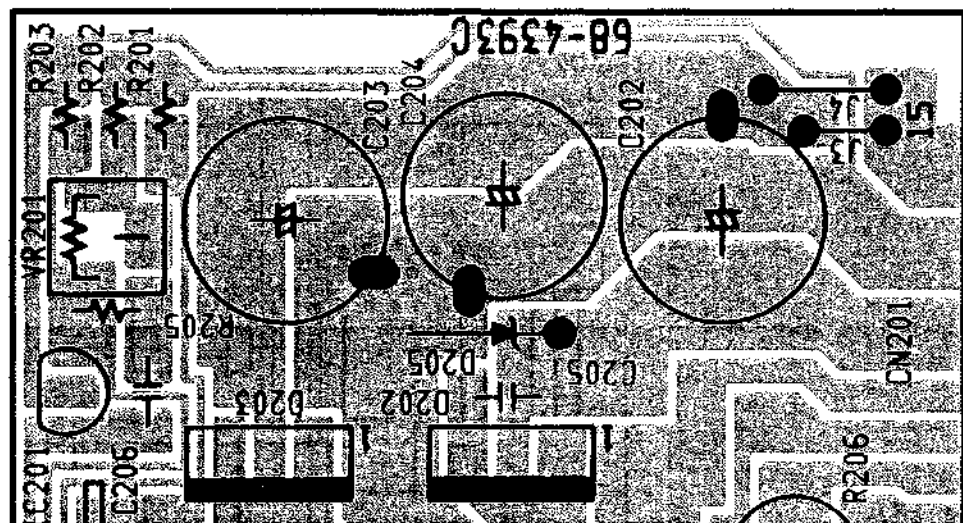


P-401 POWER BLOCK (SWITCHING REGULATOR SR665) PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM
 - Ref. No. SR665 Board; 7,000 Series -

CP401 POWER BLOCK (SR665)

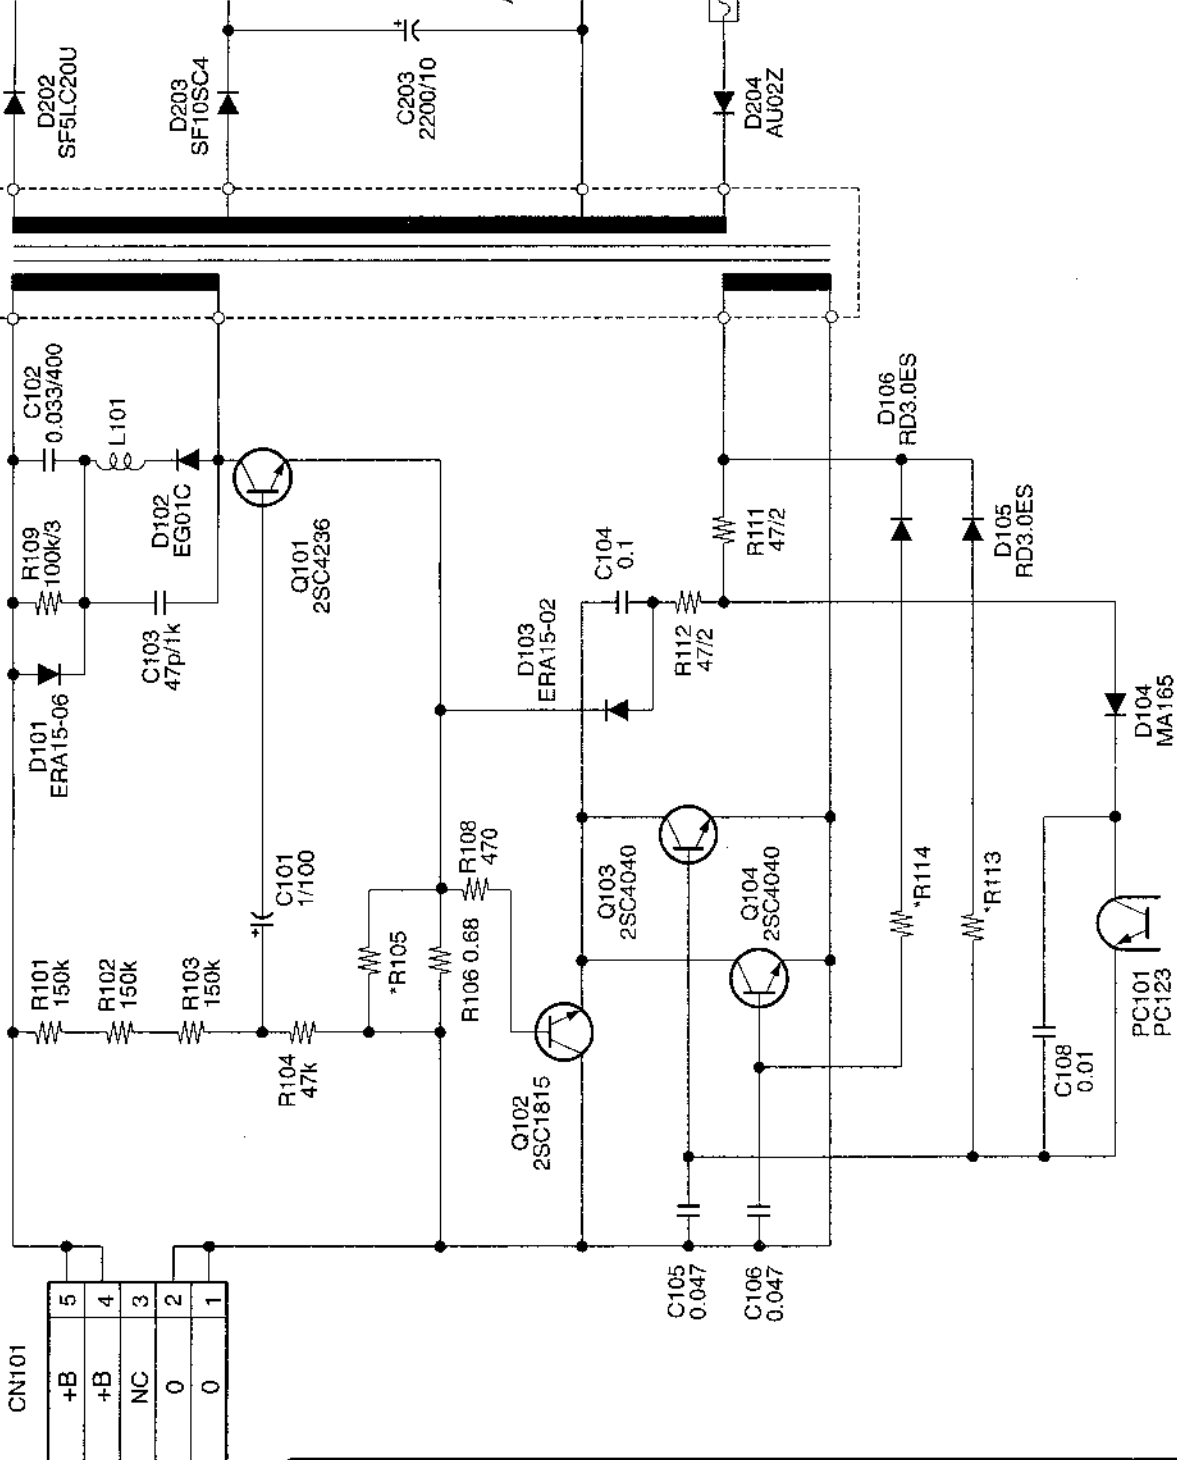


CN101	5	+B
	4	+B
	3	NC
	2	0
	1	0

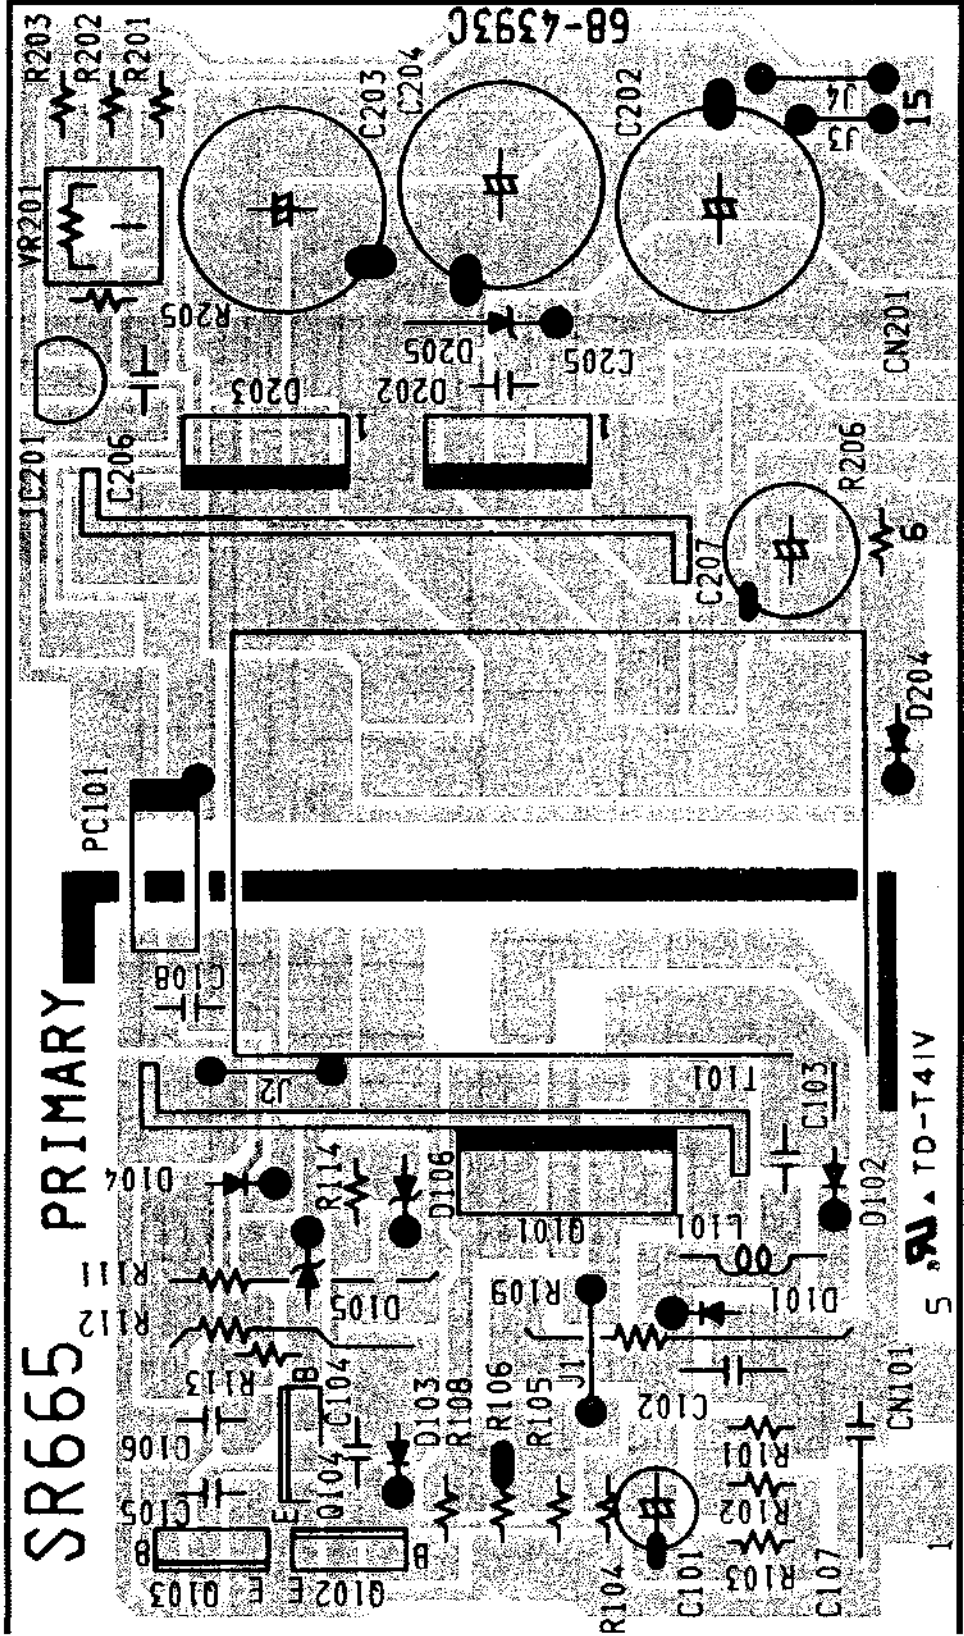


• See page 4-72 for the CP401 power block printed wiring board diagram.

There are few cases that the part printed on this diagram isn't mounted in this model.

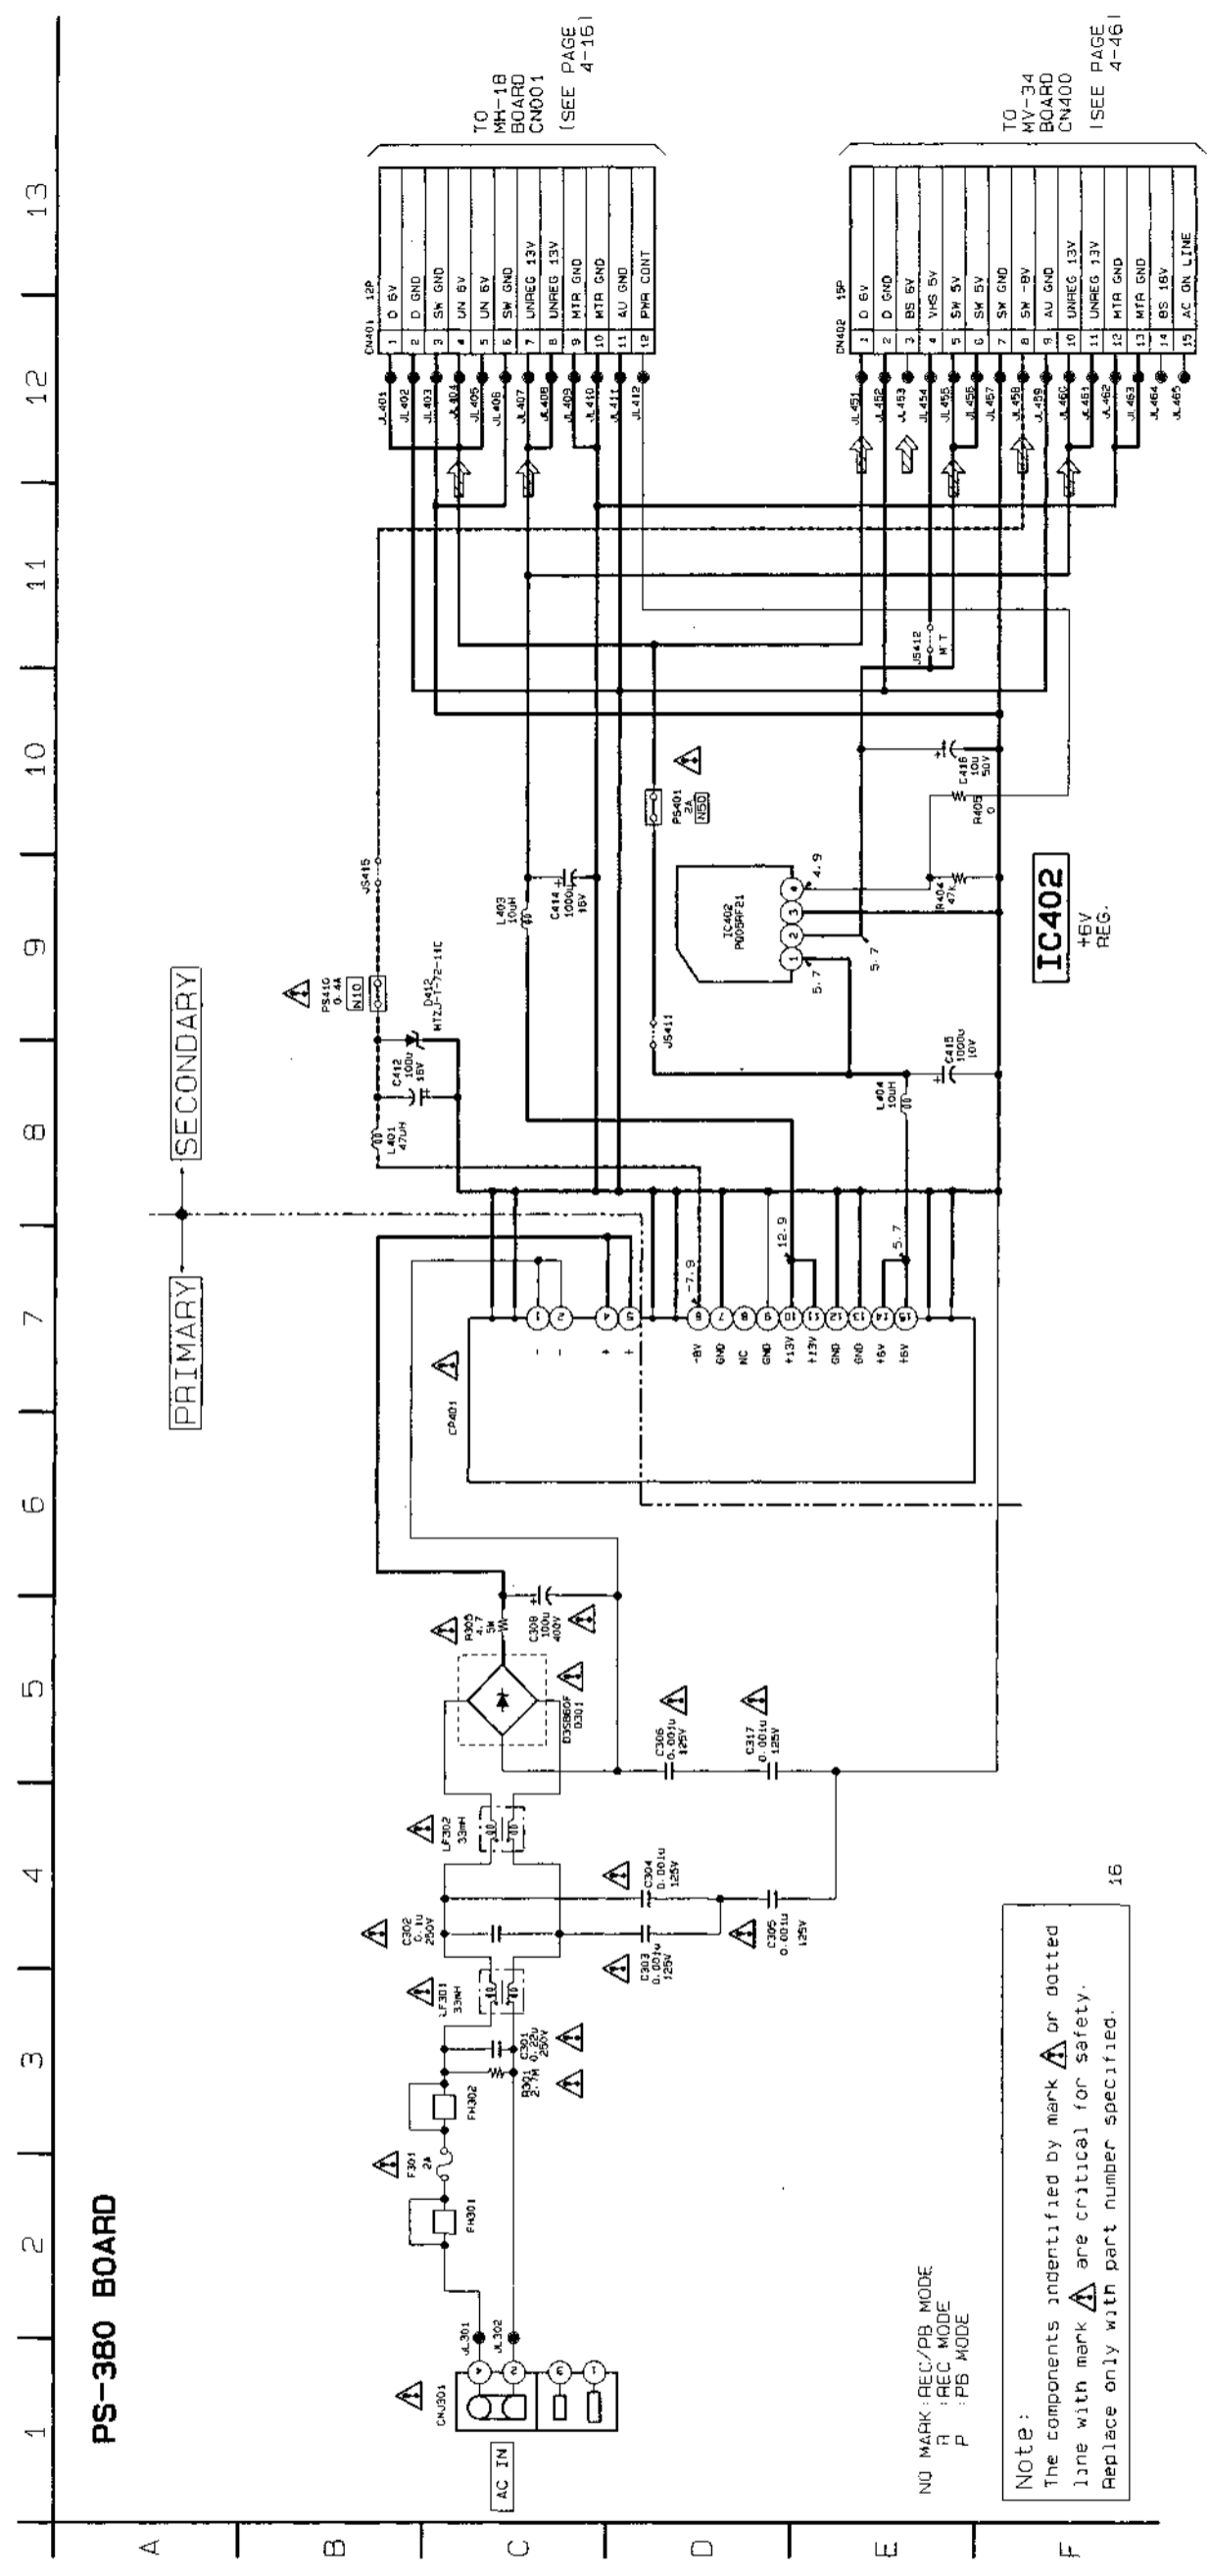

1 2 3 4 5 6 7 8 9 10 11 12 13

PS-380 BOARD


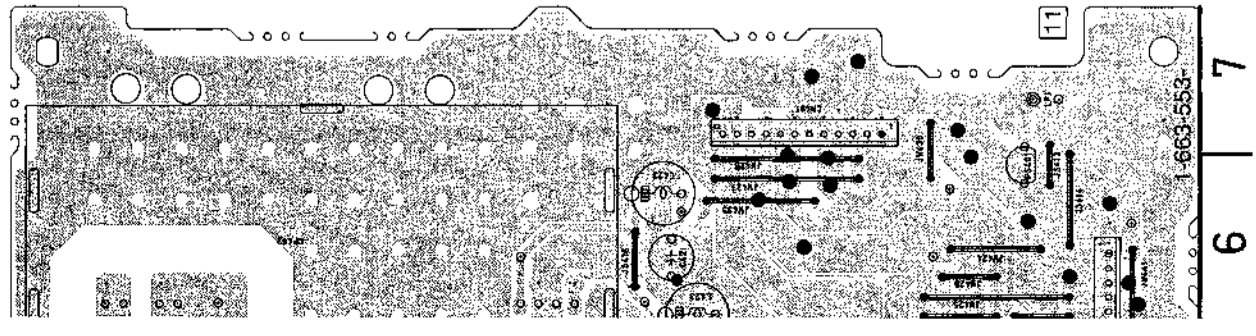


PS-380 (POWER SUPPLY) PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM
— Ref. No. PS-380 Board; 6,000 Series —


• See page 4-72 for the CP401 power block printed wiring board diagram.

There are few cases that the part printed on this diagram isn't mounted.

PS-380 BOARD (CONDUCTOR SIDE)

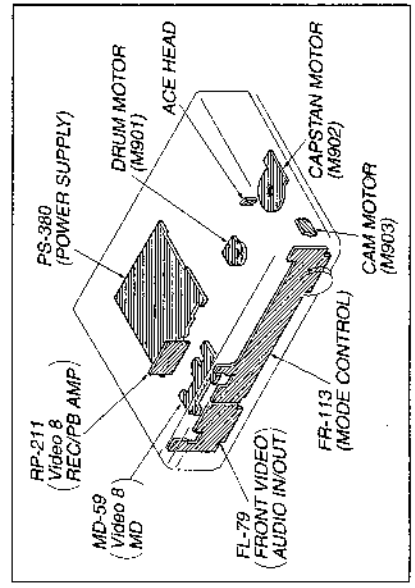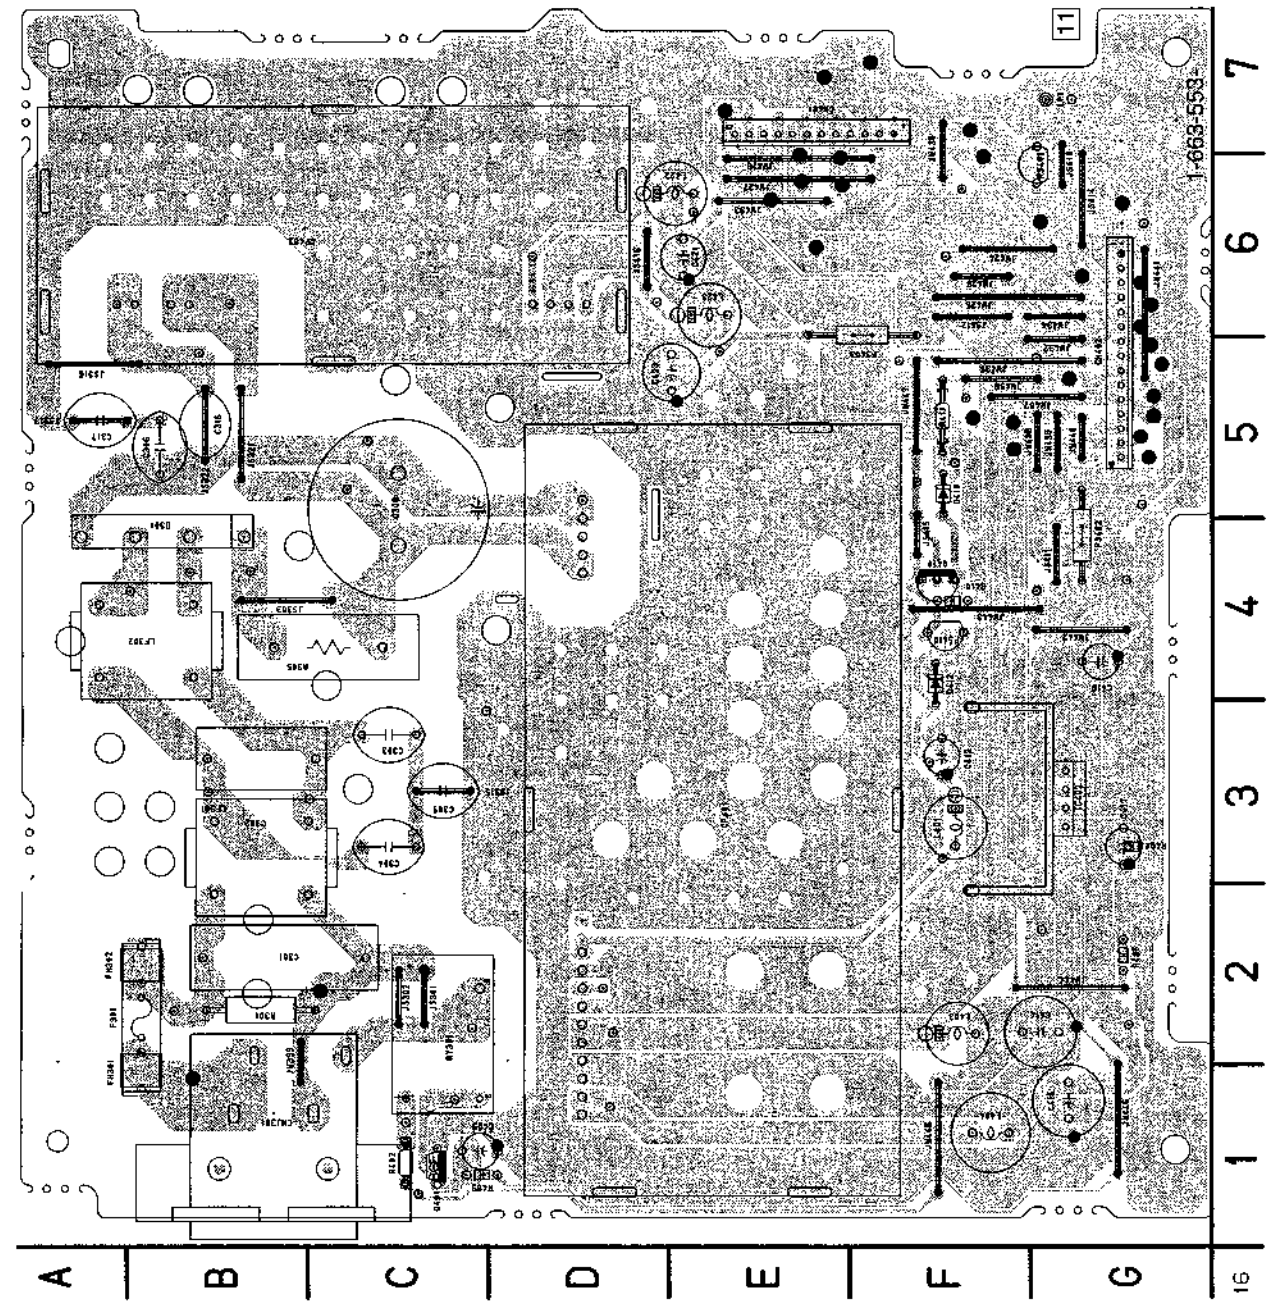

PS-380 BOARD

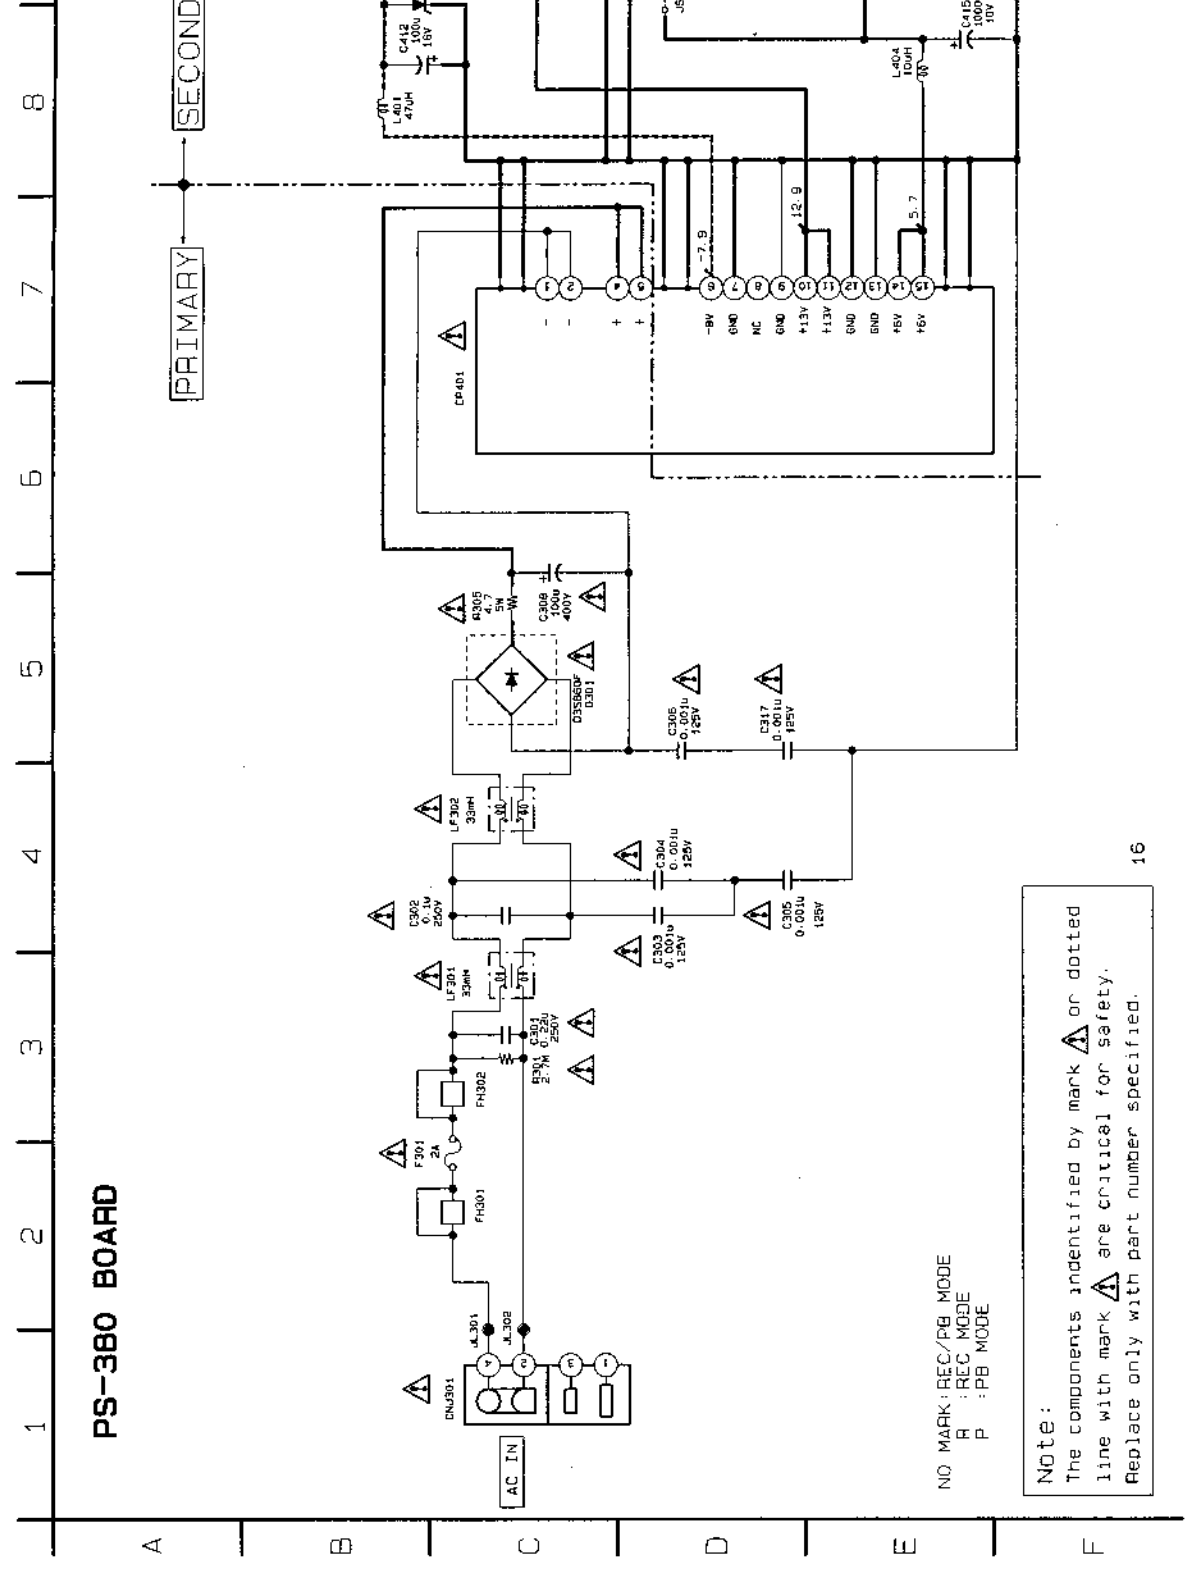



NO MARK: REC/PB MODE
 R : REC MODE
 P : PB MODE

Note:
 The components indentified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

16


FL-79 (FRONT VIDEO, AUDIO IN/OUT) PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM
 — Ref. No. FL-79 Board; 6,000 Series —

FL-79 BOARD (CONDUCTOR SIDE)

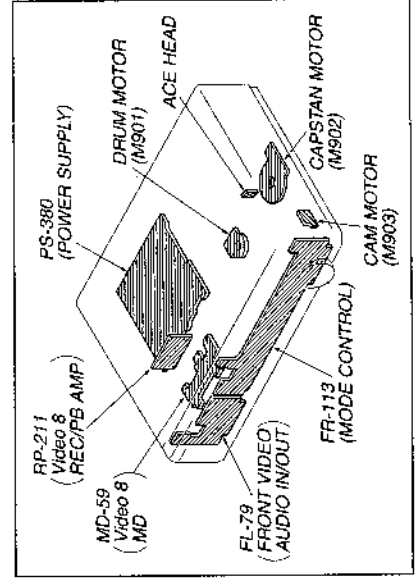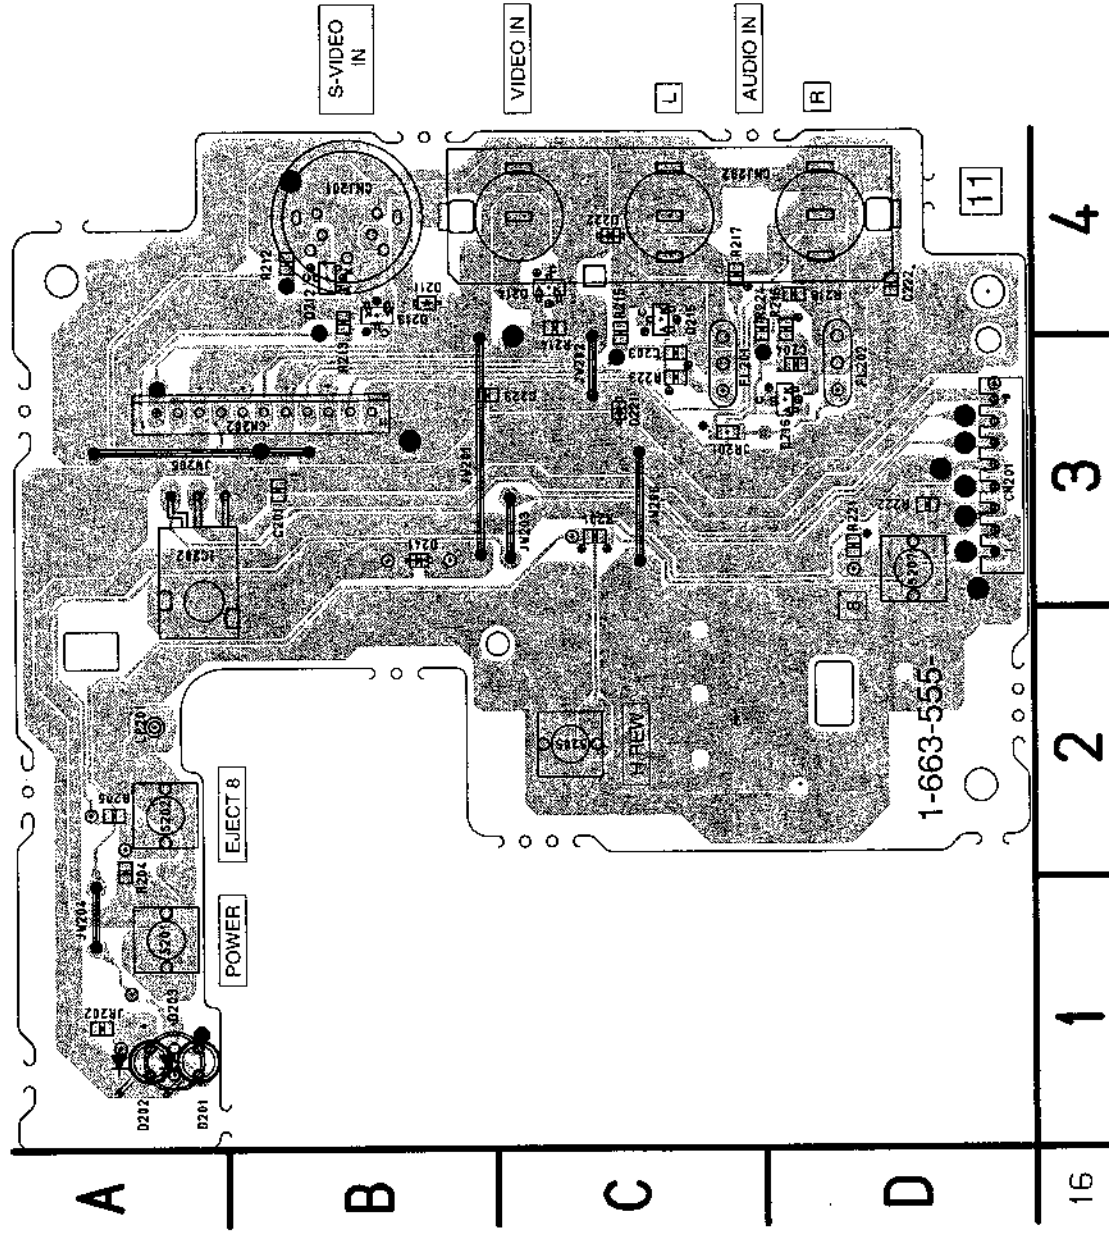

FRONT VIDEO, AUDIO IN/OUT
 FL-79



There are few cases that the part printed on this diagram isn't mounted in this model.

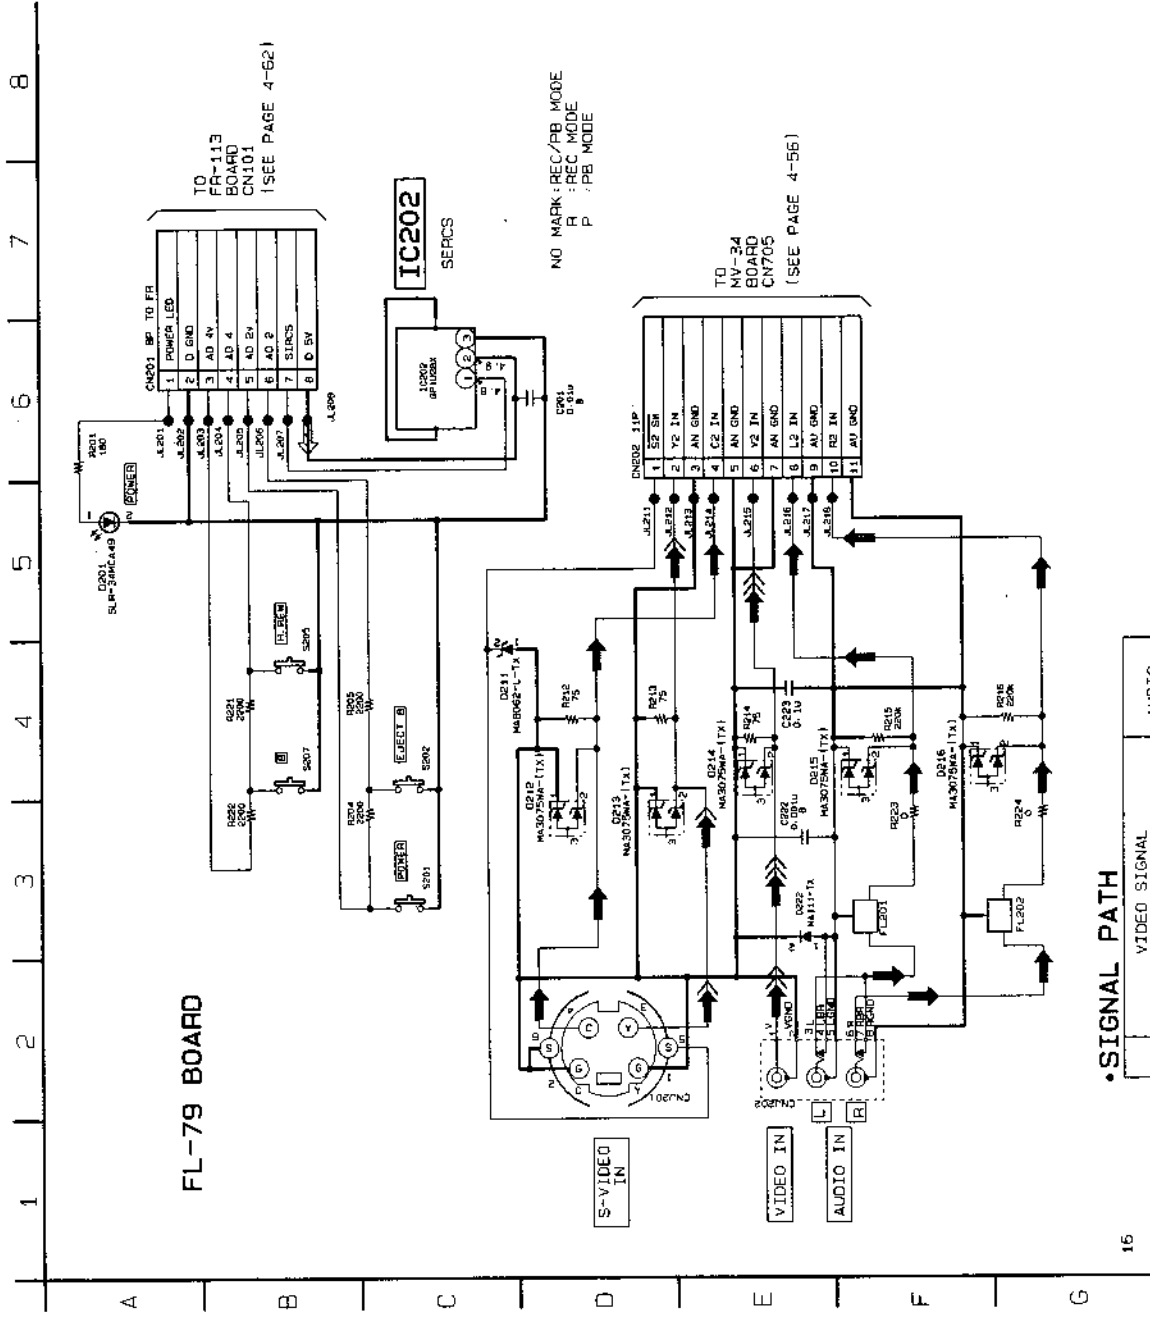

FR-113 (MODE CONTROL) PRINTED WIRING BOARD
 — Ref. No. FR-113 Board; 6,000 Series —


There are few cases that the part printed on this diagram isn't mounted in this model.

FR-113 BOARD (CONDUCTOR SIDE)

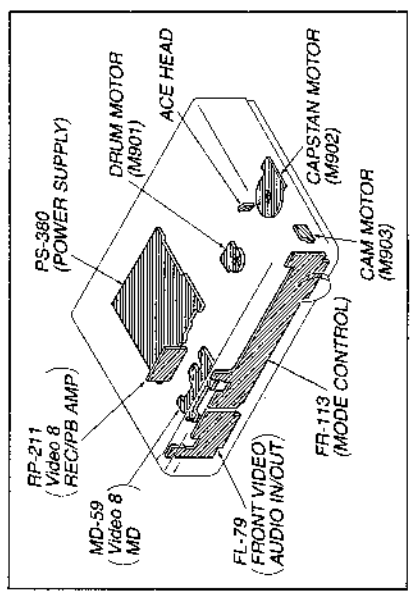
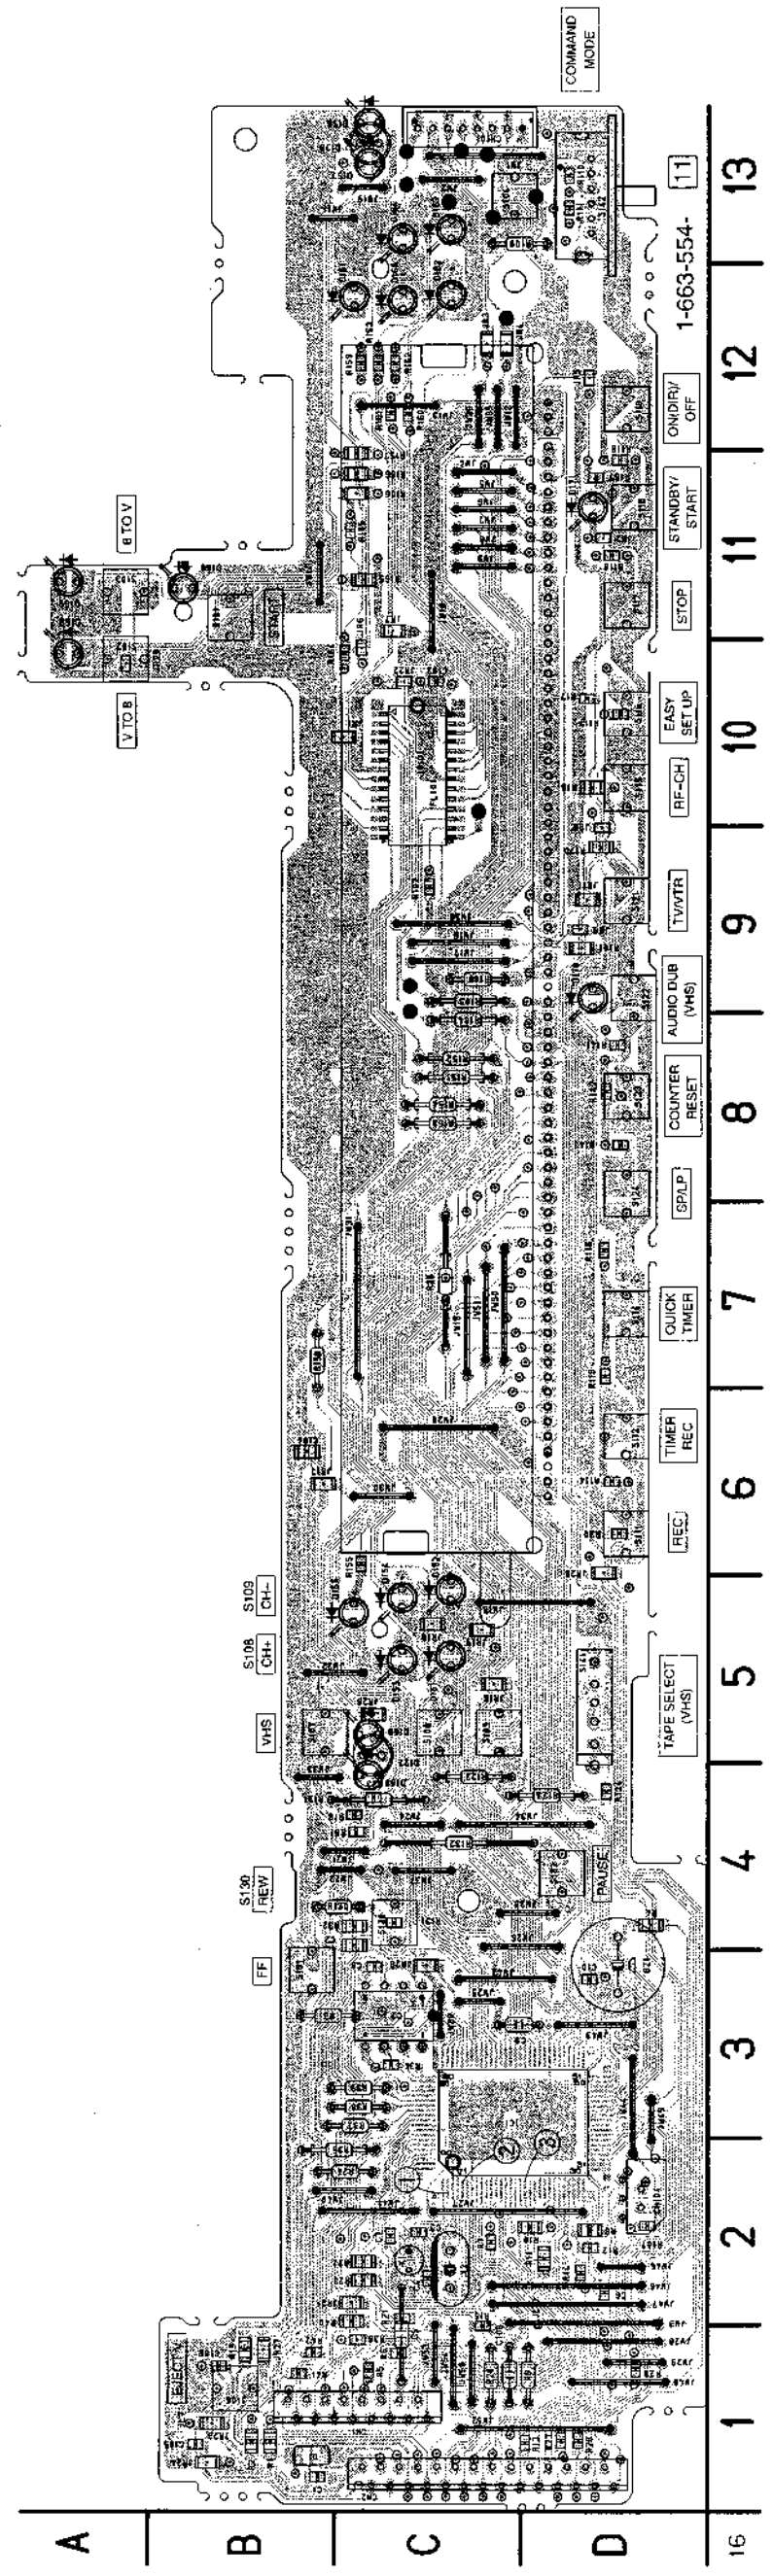


ed wiring board.



8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 25

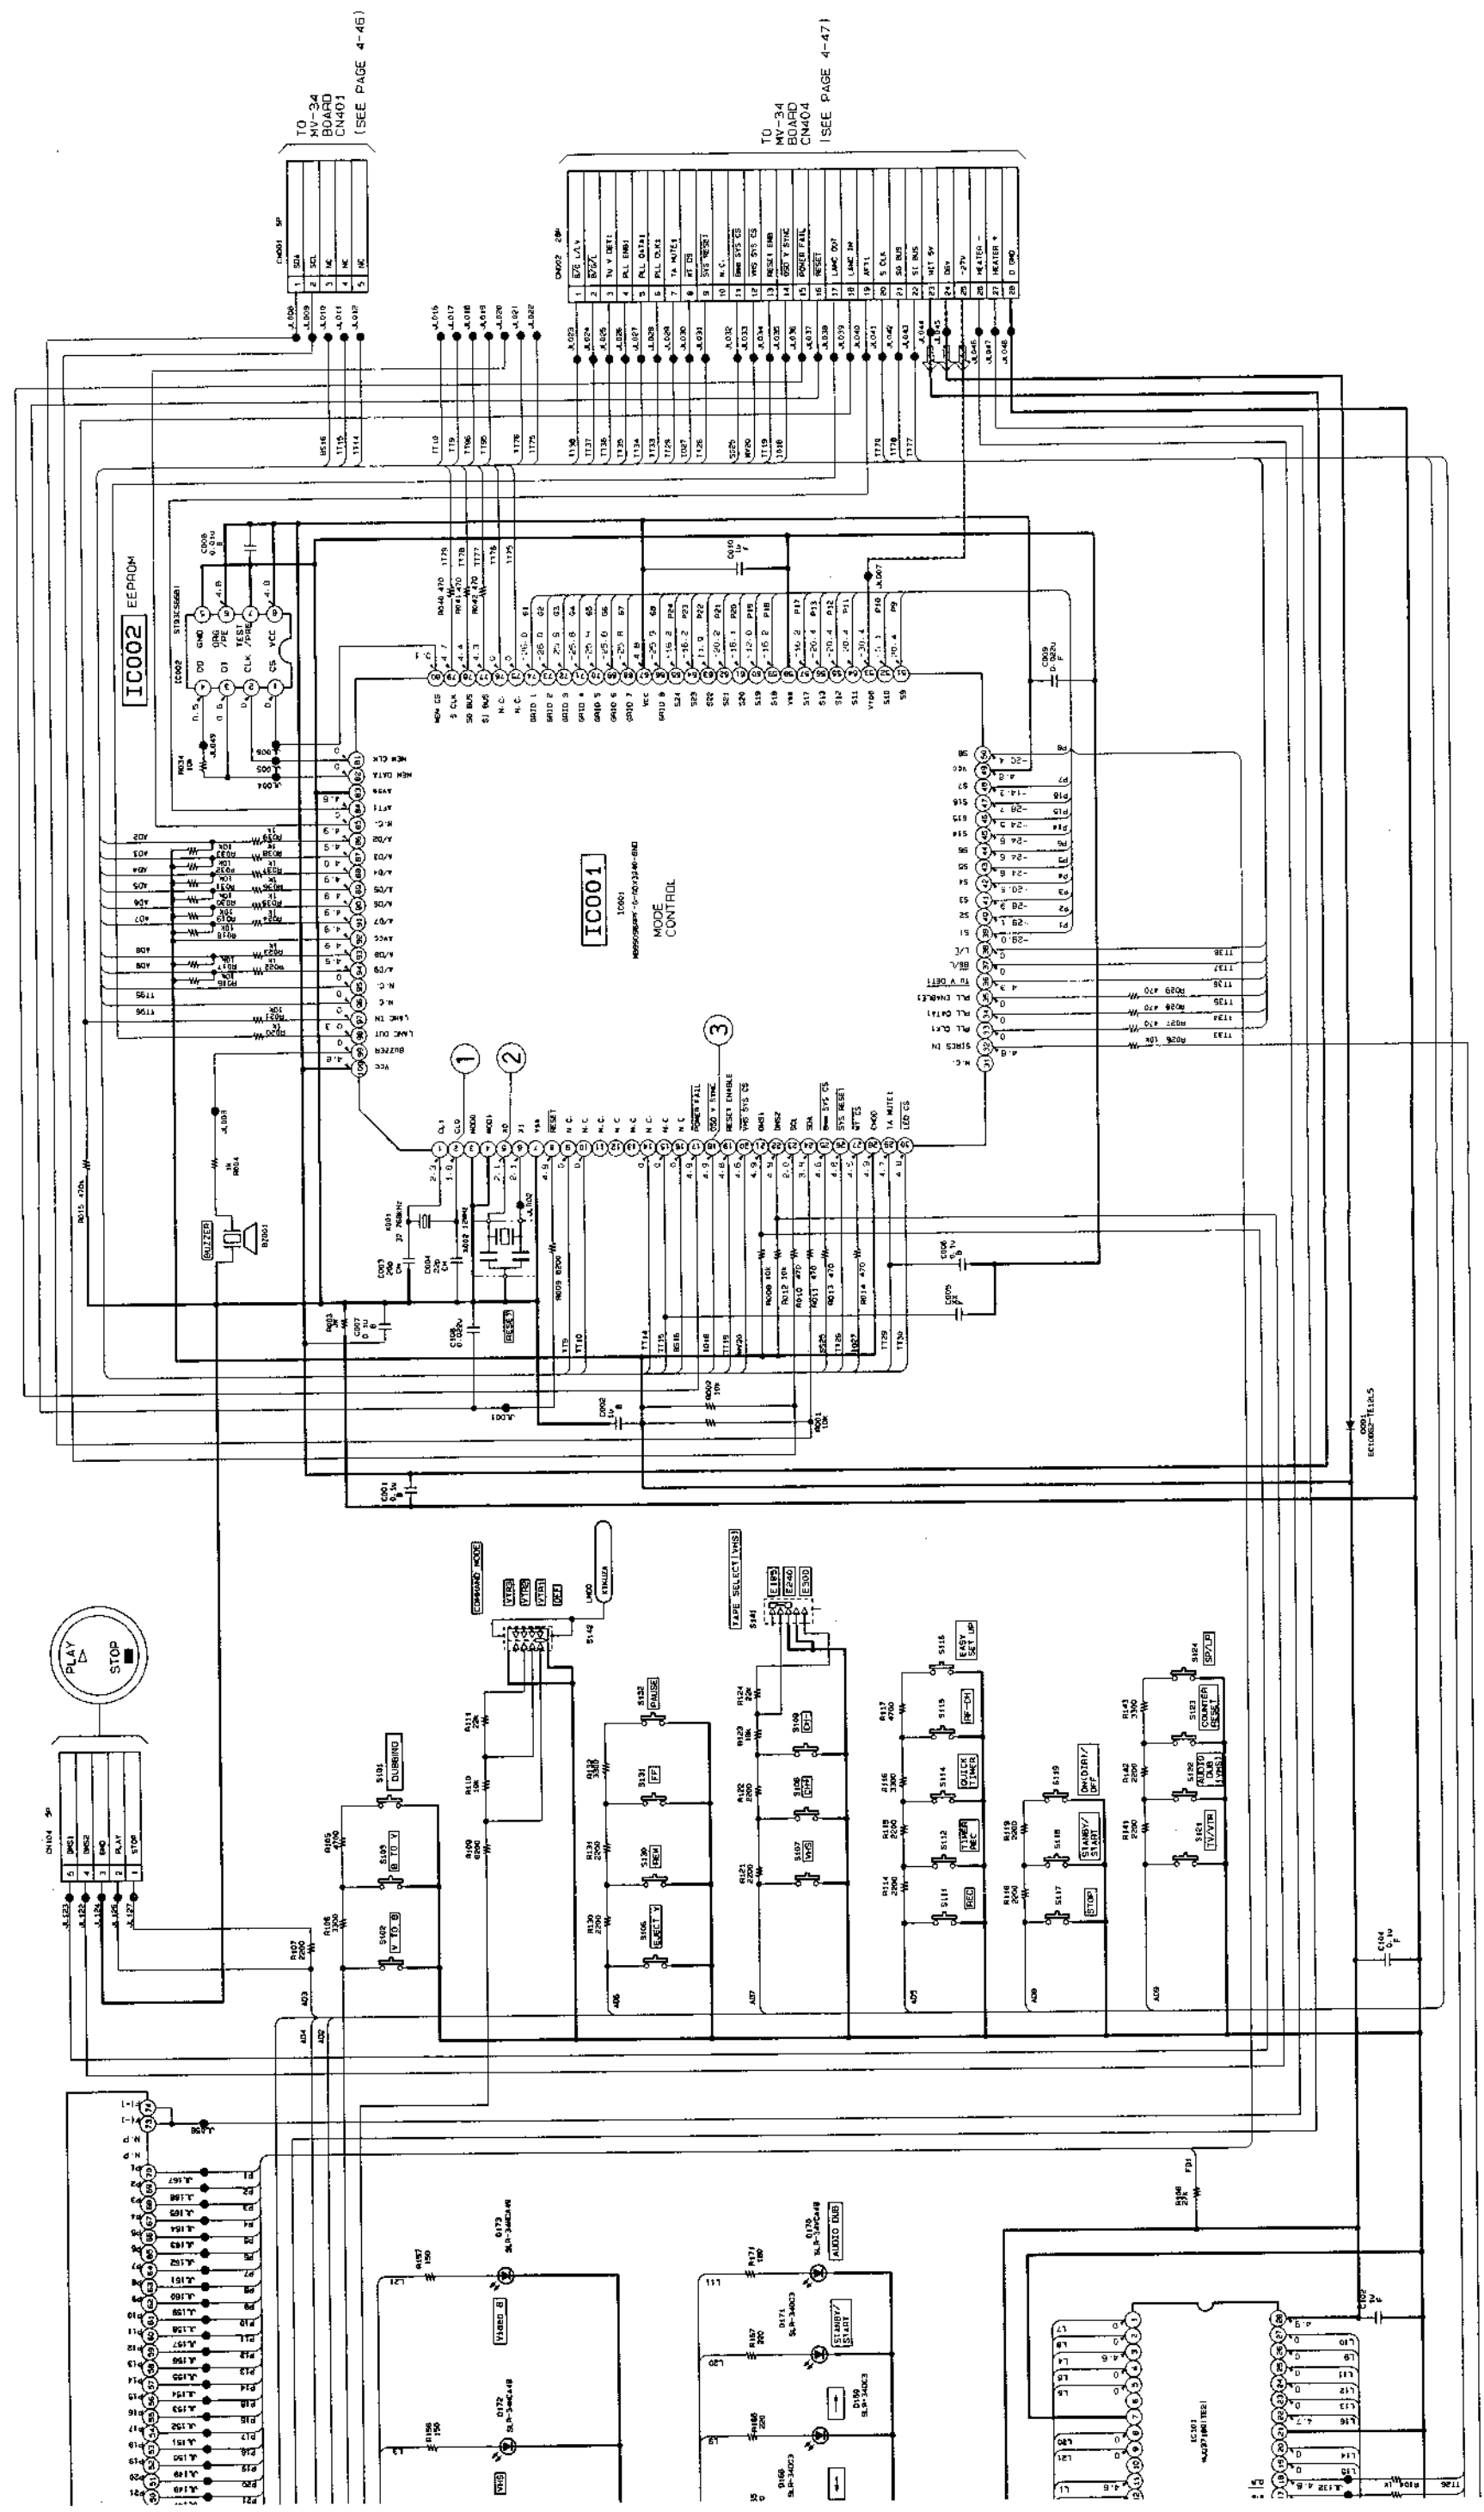

FR-113 (MODE CONTROL) SCHEMATIC DIAGRAM • See page 4-65 for FR-113 BOARD printed wiring board.

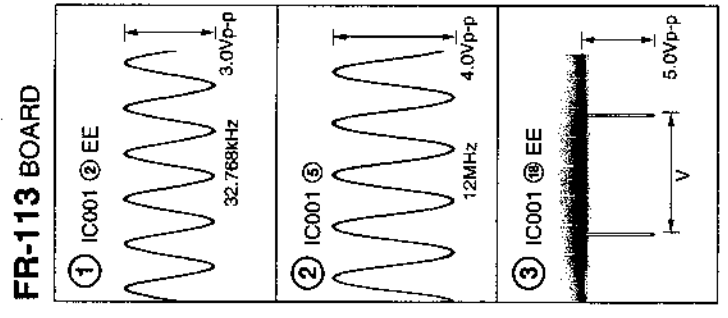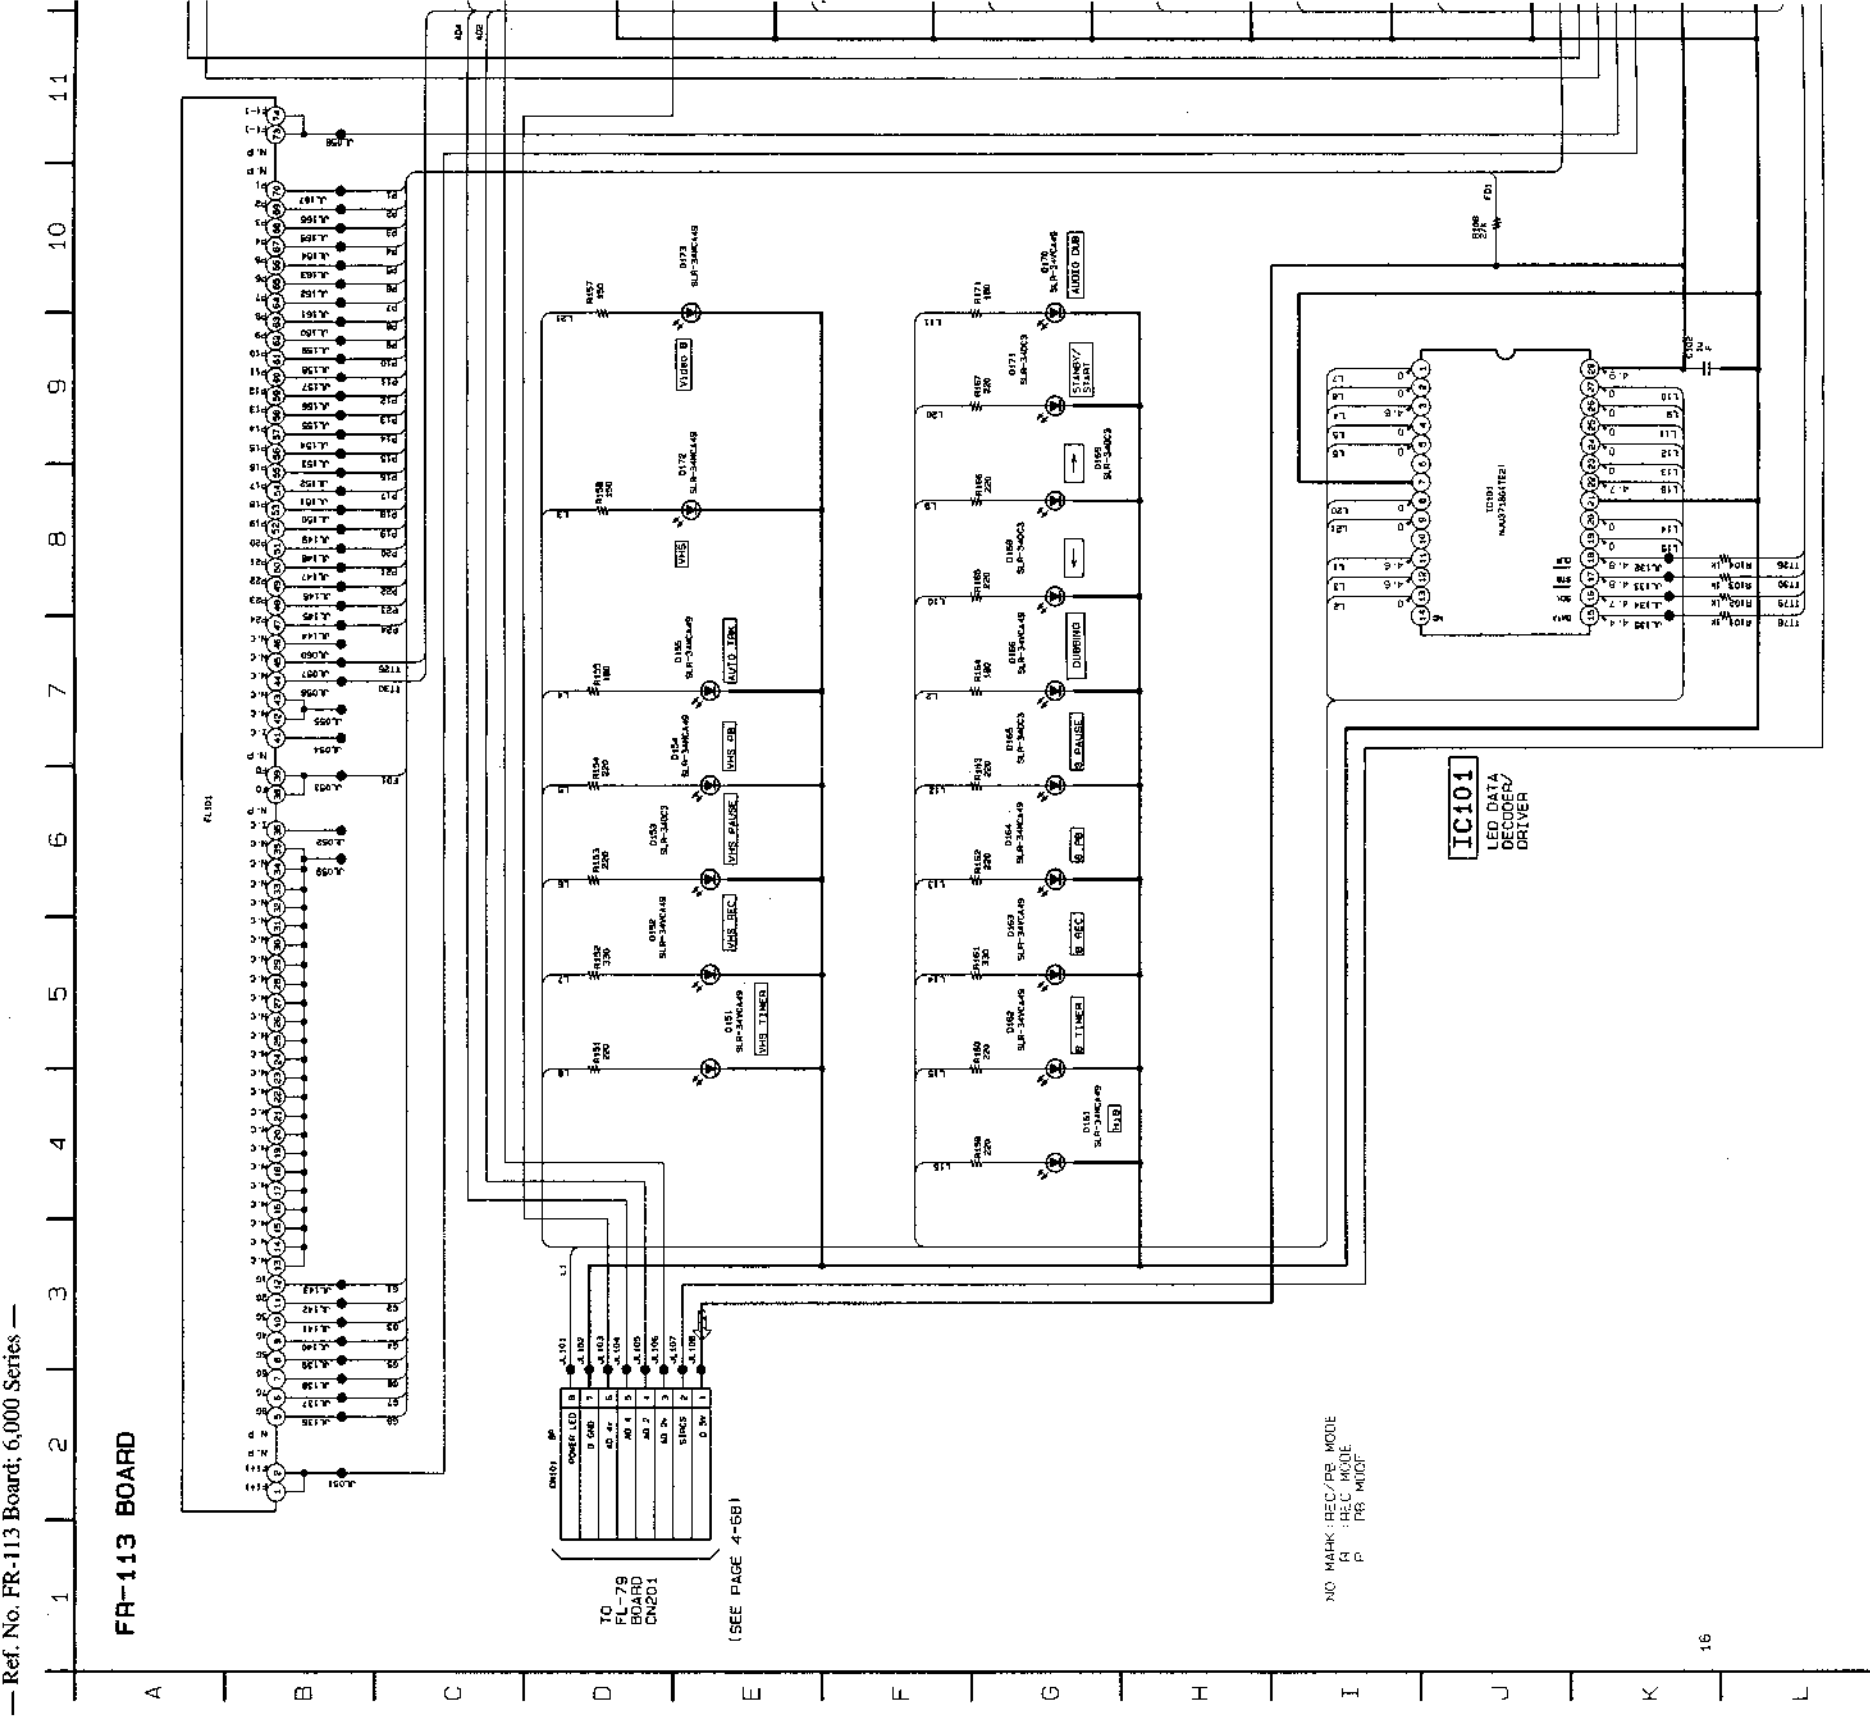

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18

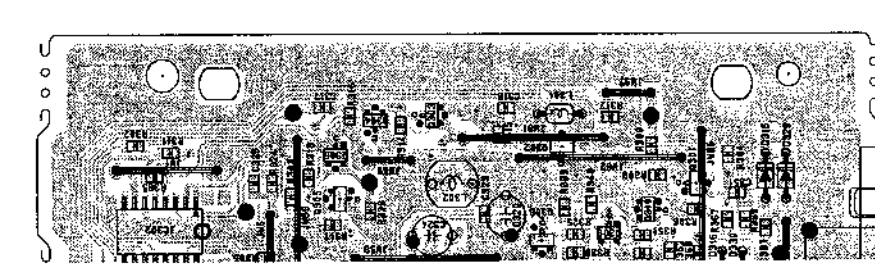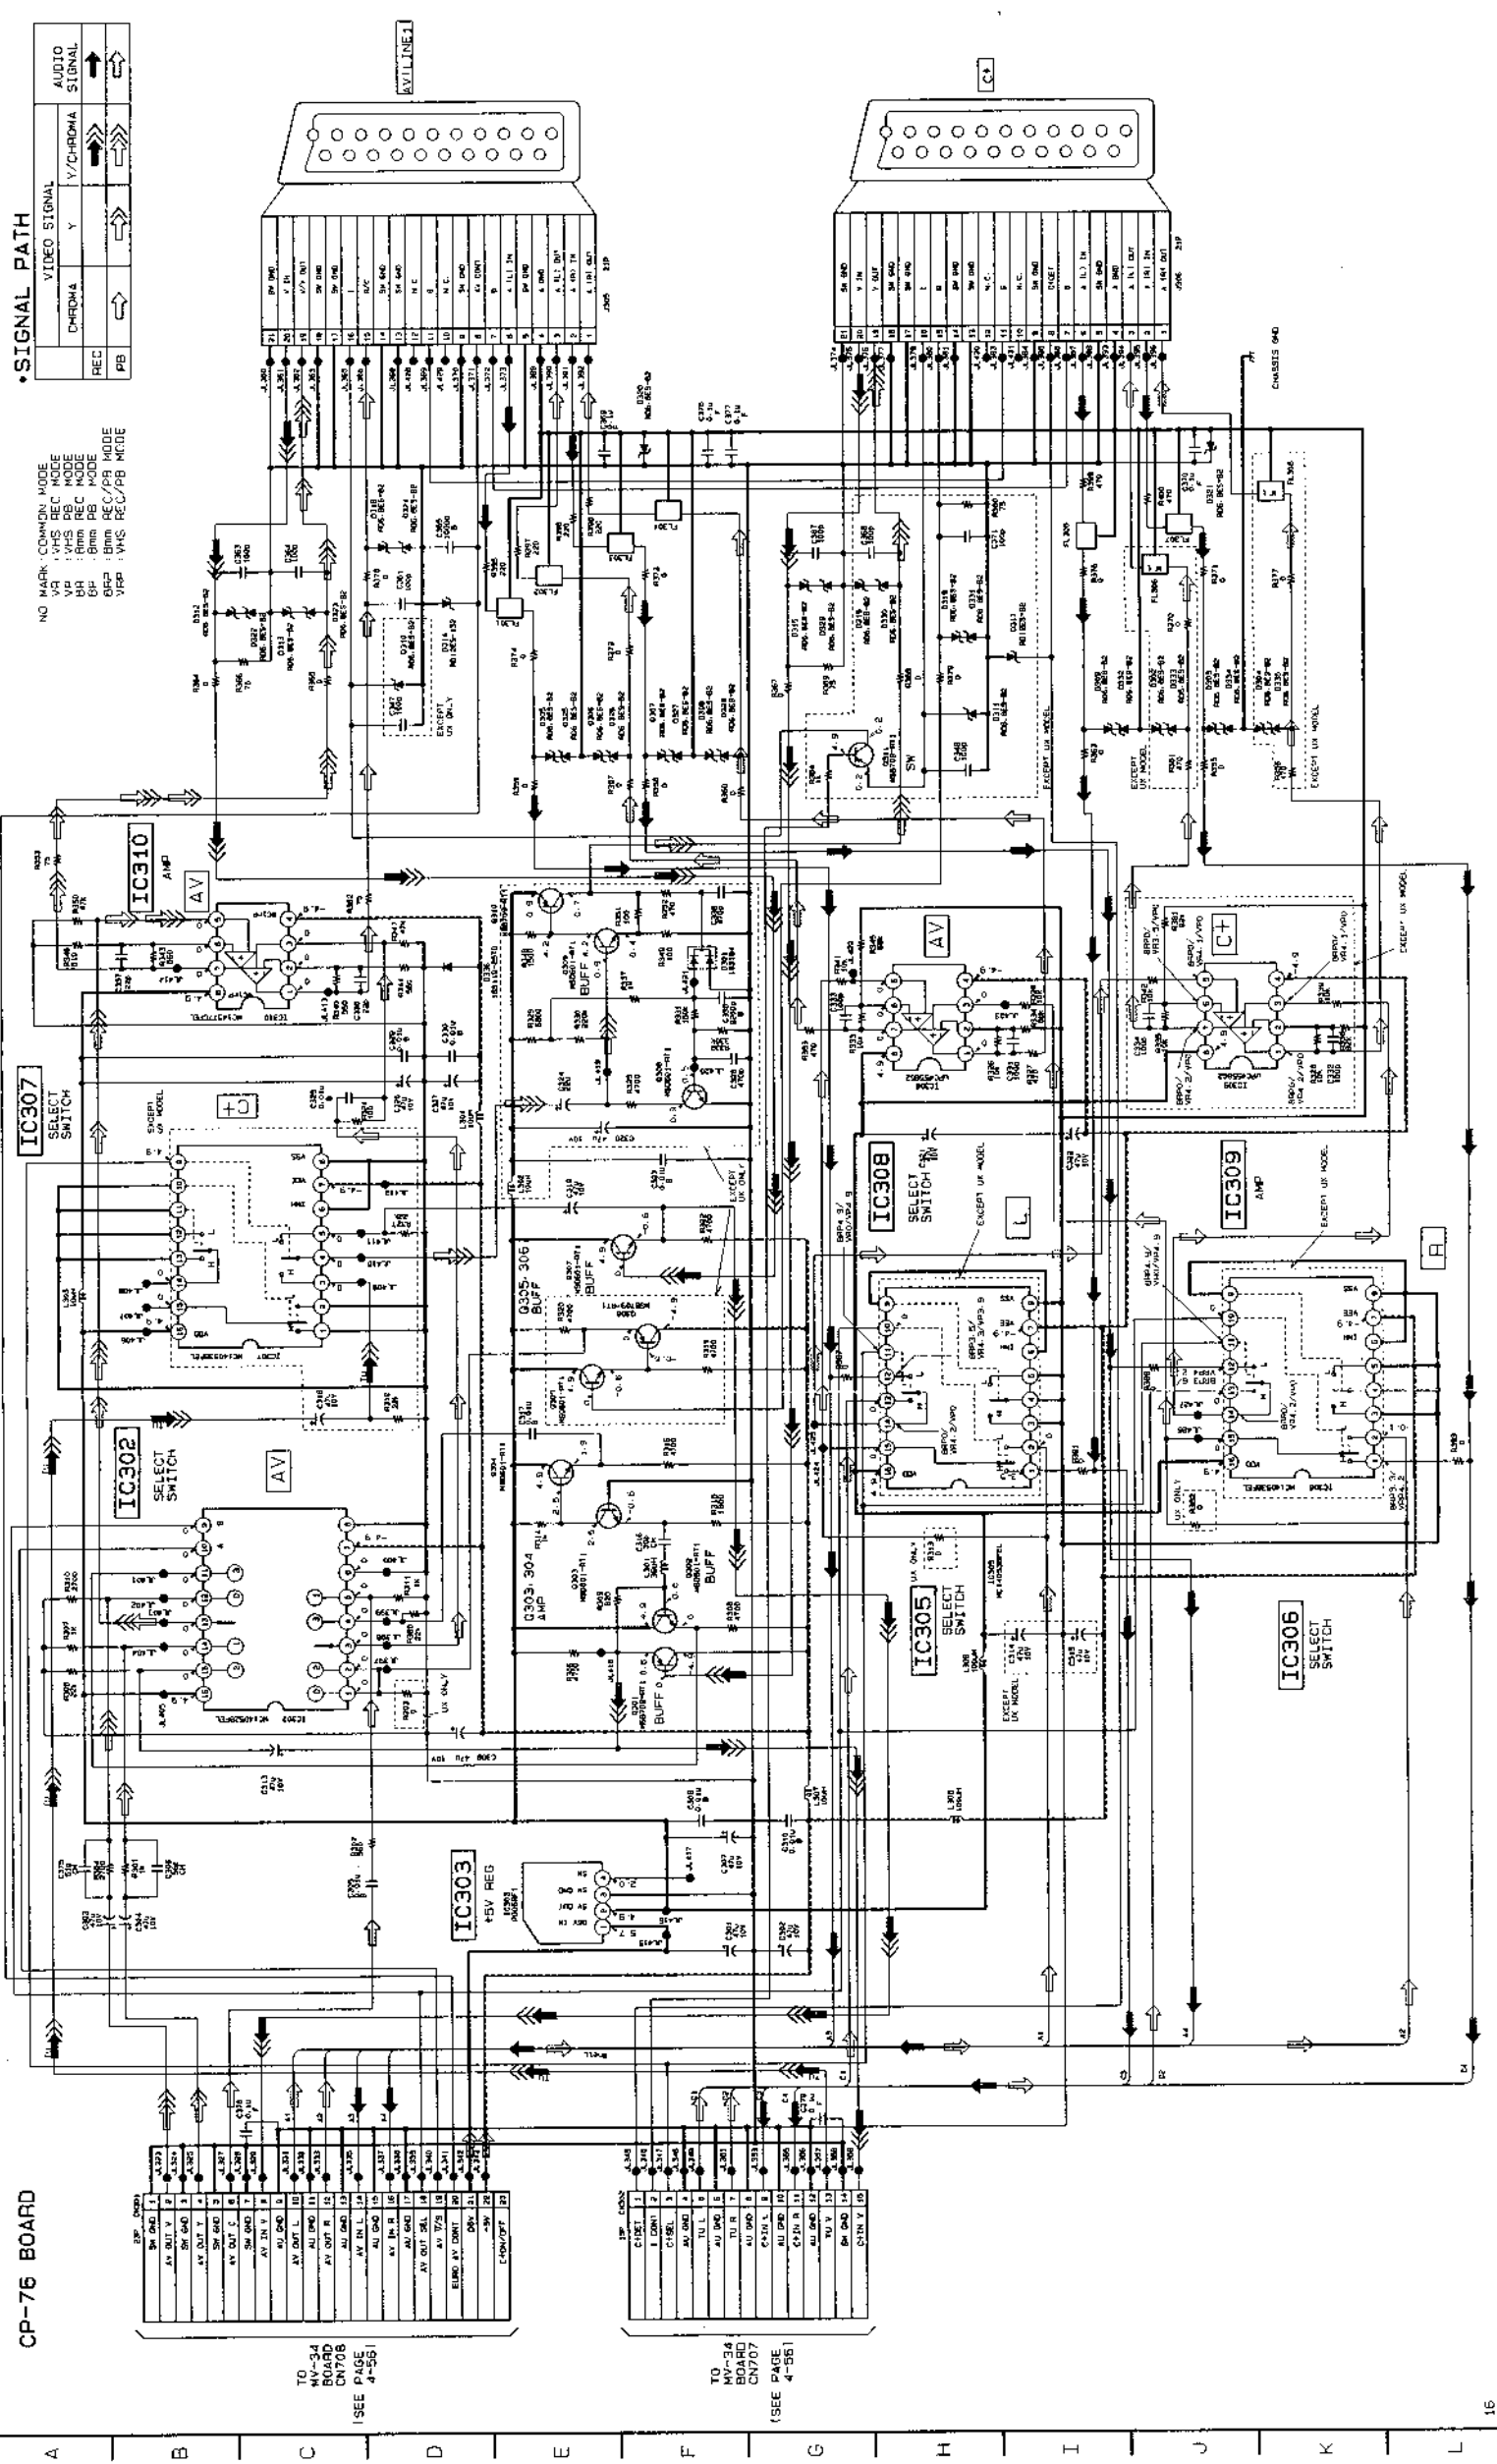

663-552-11

10



CP-76 (VIDEO, AUDIO IN/OUT) PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM
 — Ref. No. CP-76 Board: 5,000 Series —

There are few cases that the part printed on this diagram isn't mounted in this model.

CP-76 BOARD

CN301	D-3	B-9
CN302	D-6	B-9
		B-8
D301	B-9	C-8
D302	B-8	B-7
D303	B-7	C-8
D304	B-7	
D305	C-5	E-9
D306	B-5	D-4
D307	B-4	B-3
D308	C-8	B-2
D309	B-6	D-8
D310	B-9	C-3
D311	B-7	C-2
D312	B-7	C-7
D313	B-6	
D314	B-5	A-3
D315	B-10	A-8
D316	B-9	
D317	B-8	B-10
D318	B-6	C-10
D319	B-9	C-10
D320	B-5	D-10
D321	B-8	D-9
D322	B-7	C306
D323	B-6	C307
D324	B-6	C-9
D325	C-5	C309
D326	C-5	C310
D327	B-4	C311
D328	B-4	
D329	B-10	

CP-76 BOARD (CONDUCTOR SIDE)

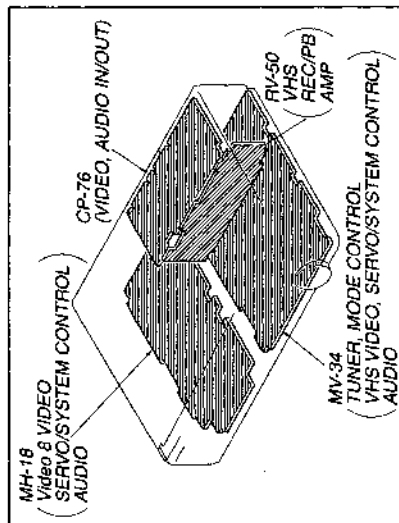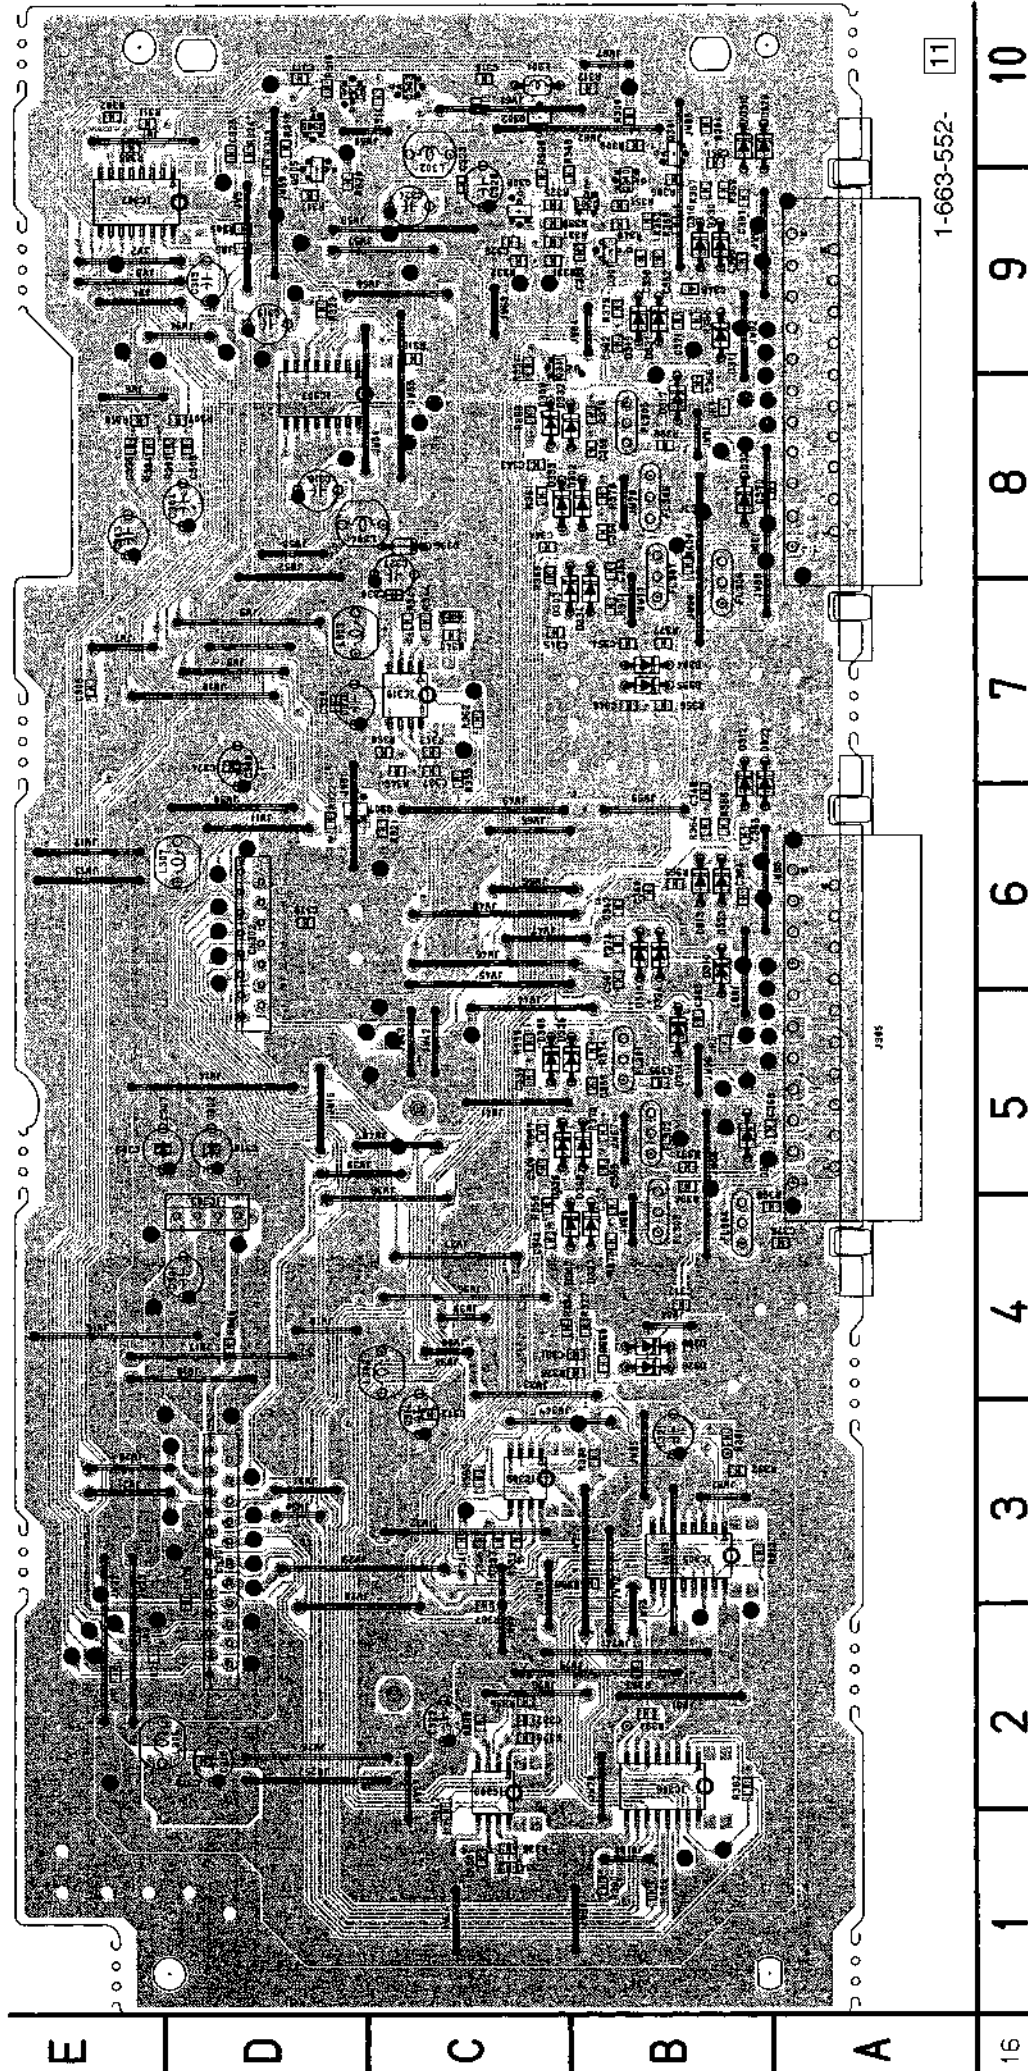

SECTION 5
REPAIR PARTS LIST

5-1. EXPLODED VIEWS


NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked "M" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- The mechanical parts with no reference number in the exploded views are not supplied.


The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

5-1-1. FRONT PANEL ASSEMBLY AND CASE

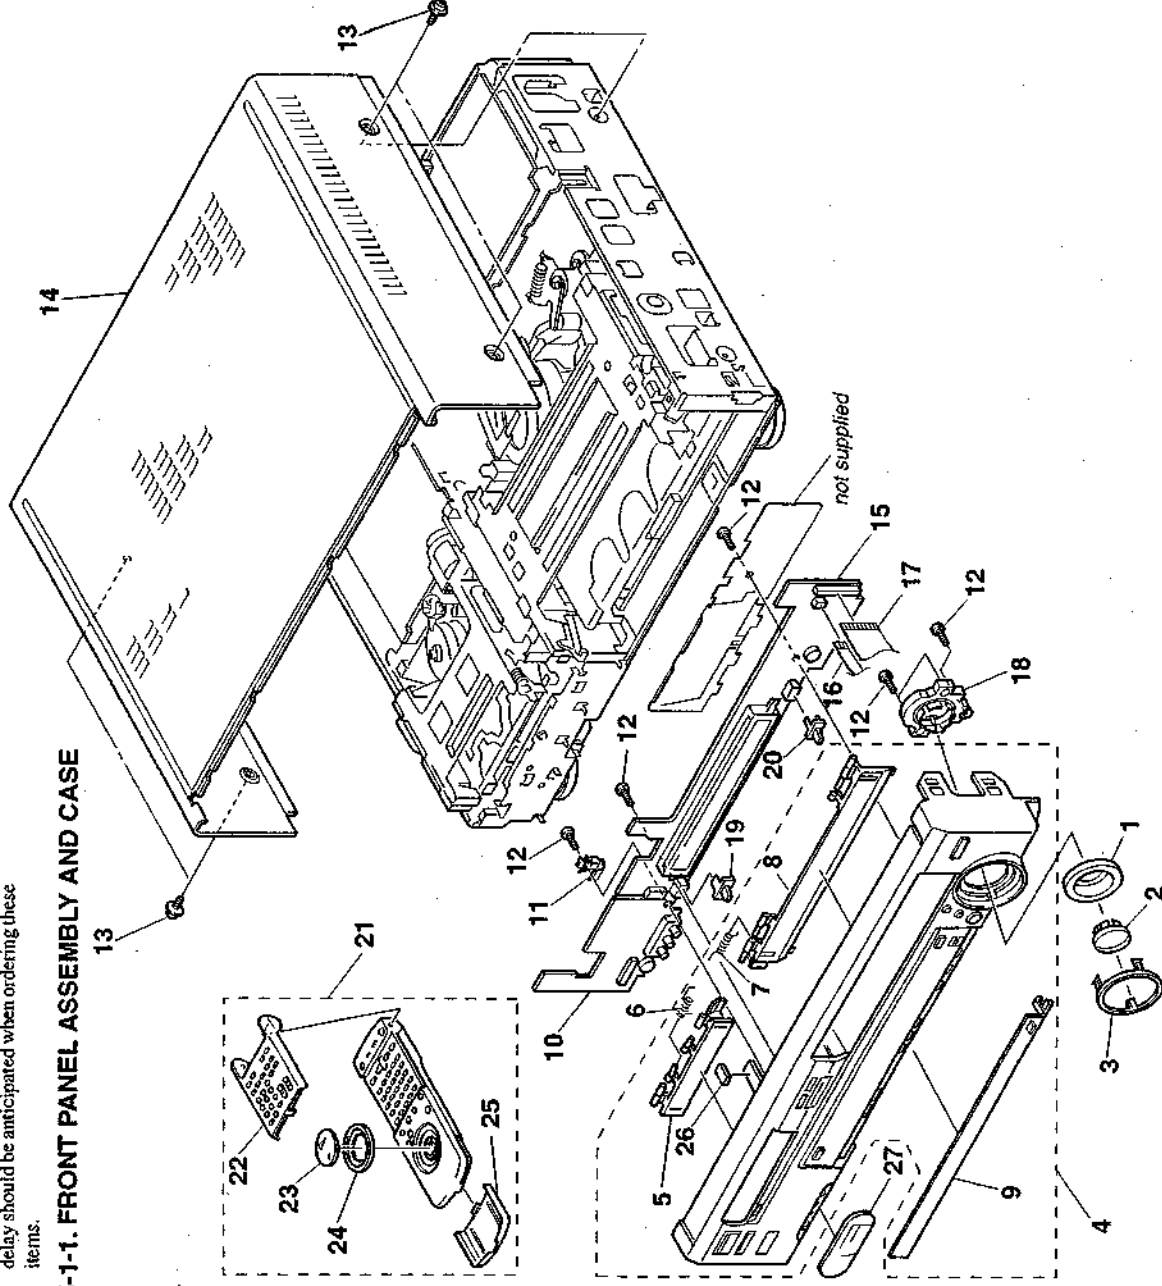


Ref. No.	Part No.	Description	Remarks
1	3-973-077-11	RING, CHANGE SPEED	
2	3-972-782-11	BUTTON, CENTER (AS, MN, NP, NR, UX, VC)	
2	3-972-782-41	BUTTON, CENTER (B)	
3	3-974-511-01	PLATE, RING ORNAMENTAL	
4	X-3946-729-1	PANEL ASSY, FRONT (UX)	
4	X-3946-730-1	PANEL ASSY, FRONT (VC)	
4	X-3946-731-2	PANEL ASSY, FRONT (B)	
4	X-3946-732-1	PANEL ASSY, FRONT (NP, NR)	
4	X-3947-537-1	PANEL ASSY, FRONT (MN)	
4	X-3947-539-1	PANEL ASSY, FRONT (AS)	
5	3-973-393-01	DOOR (-8), CASSETTE (EXCEPT AS, MN)	
5	3-973-393-21	DOOR (-8), CASSETTE (AS, MN)	
6	3-966-939-01	SPRING-8, FL	
7	3-963-432-01	SPRING (GE), FL	
8	3-973-394-01	DOOR (-V), CASSETTE (EXCEPT AS, MN)	
8	3-973-394-21	DOOR (-V), CASSETTE (AS, MN)	
9	3-973-402-21	DOOR, FRONT	
* 10	A-7073-109-A	FL-79 (UX) BOARD, COMPLETE	
11	3-973-405-03	SPRING, DOOR LOCK (B)	
11	3-975-709-01	SPRING (N), DOOR LOCK (AS, MN, NP, NR, UX, VC)	
12	4-921-277-41	SCREW (B2, 6X8), TAPPING, BIND	
13	3-710-901-41	SCREW, TAPPING	
* 14	3-966-912-51	COVER, UPPER	
* 15	A-7066-980-A	FR-113 (UX) BOARD, COMPLETE	
16	1-777-675-11	CABLE, FLAT (FUF-19) 5P	
17	1-777-671-11	CABLE, FLAT (FUF-17)	
18	1-762-844-21	SWITCH, ROTARY	
19	3-966-943-01	KNOB (IR), SLIDE (B)	
19	3-966-943-11	KNOB (IR), SLIDE (AS, MN, NP, NR, UX, VC)	
20	3-966-944-01	KNOB (S), SLIDE (B)	
20	3-966-944-11	KNOB (S), SLIDE (AS, MN, NP, NR, UX, VC)	
21	1-473-930-11	REMOTE COMMANDER (RMT-V194)(UX)	
21	1-473-930-21	REMOTE COMMANDER (RMT-V194A)	(NP, NR, VC)
21	1-473-930-31	REMOTE COMMANDER (RMT-V194B)(B)	(NP, NR, VC)
21	1-473-930-41	REMOTE COMMANDER (RMT-V194C)(AS, MN)	
22	3-709-144-01	COVER (V194), REMOTE CONTROL (UX)	
22	3-709-144-11	COVER (V194A), REMOTE CONTROL	(NP, NR, VC)
22	3-709-144-21	COVER (V194B), REMOTE CONTROL (B)	
22	3-709-144-31	COVER (V194C), REMOTE CONTROL (AS, MN)	
23	3-972-850-01	BUTTON, FUNCTION	
24	3-973-077-31	RING, CHANGE SPEED	
25	3-709-044-01	COVER, BATTERY	
26	3-940-954-11	CUSHION, FLY WHEEL	
27	3-974-877-01	COVER, AV (NP, NR, UX, VC)	

5-1-2. CHASSIS ASSEMBLY-1

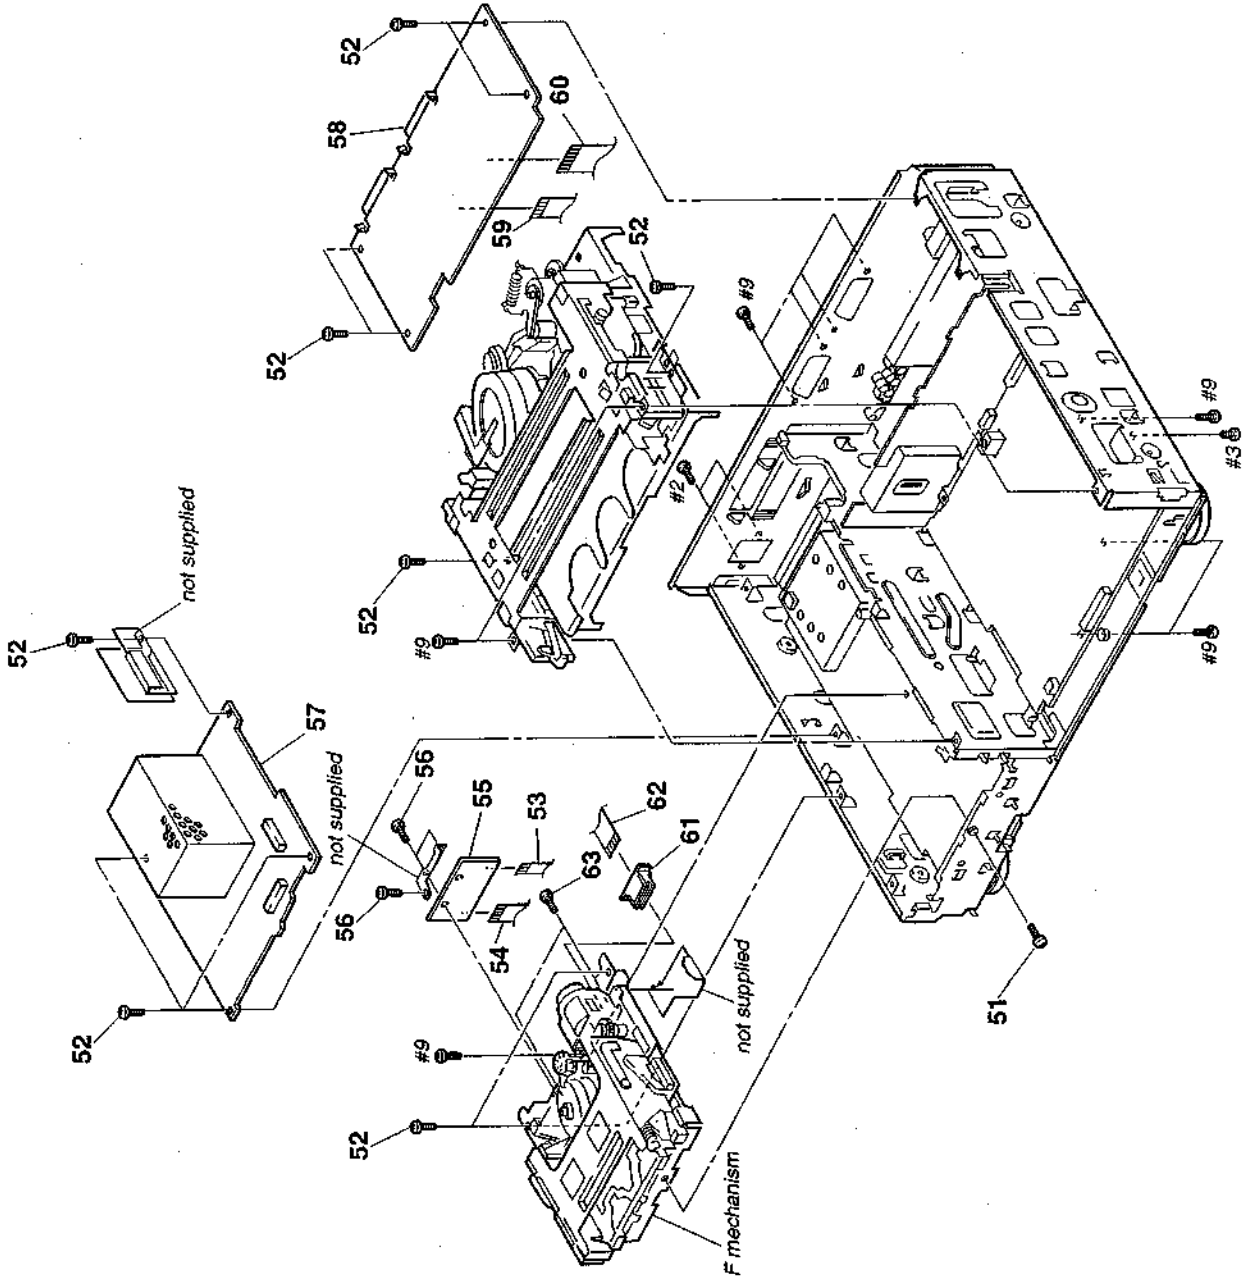


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
51	3-736-055-01	SCREW (3X8), TAPPING		* 58	A-7066-979-A	CP-76 (UX) BOARD, COMPLETE(UX)	
52	3-970-608-11	SUMMITTE (B3), +BV		59	1-777-674-11	CABLE, FLAT (FMC-9) 15P	
53	1-777-669-11	CABLE, FLAT (FMR-5)		60	1-777-673-11	CABLE, FLAT (FMC-8) 23P	
54	1-777-668-11	CABLE, FLAT (FMR-4)		61	1-764-137-11	CONNECTOR, TRANSLATION 15P	
* 55	A-7066-885-A	RP-211 (T) BOARD, COMPLETE		62	1-777-667-11	CABLE, FLAT (FMD-10)	
56	3-732-817-01	SCREW (2X4.5), TAPPING		63	3-968-341-01	SCREW 2X4.5, STEP	
* 57	A-7073-108-A	PS-380 (UX) BOARD, COMPLETE					
* 58	A-7066-975-A	CP-76 (VC) BOARD, COMPLETE (AS,B,MM,NP,NR,VC)					

5-1-3. CHASSIS ASSEMBLY-2

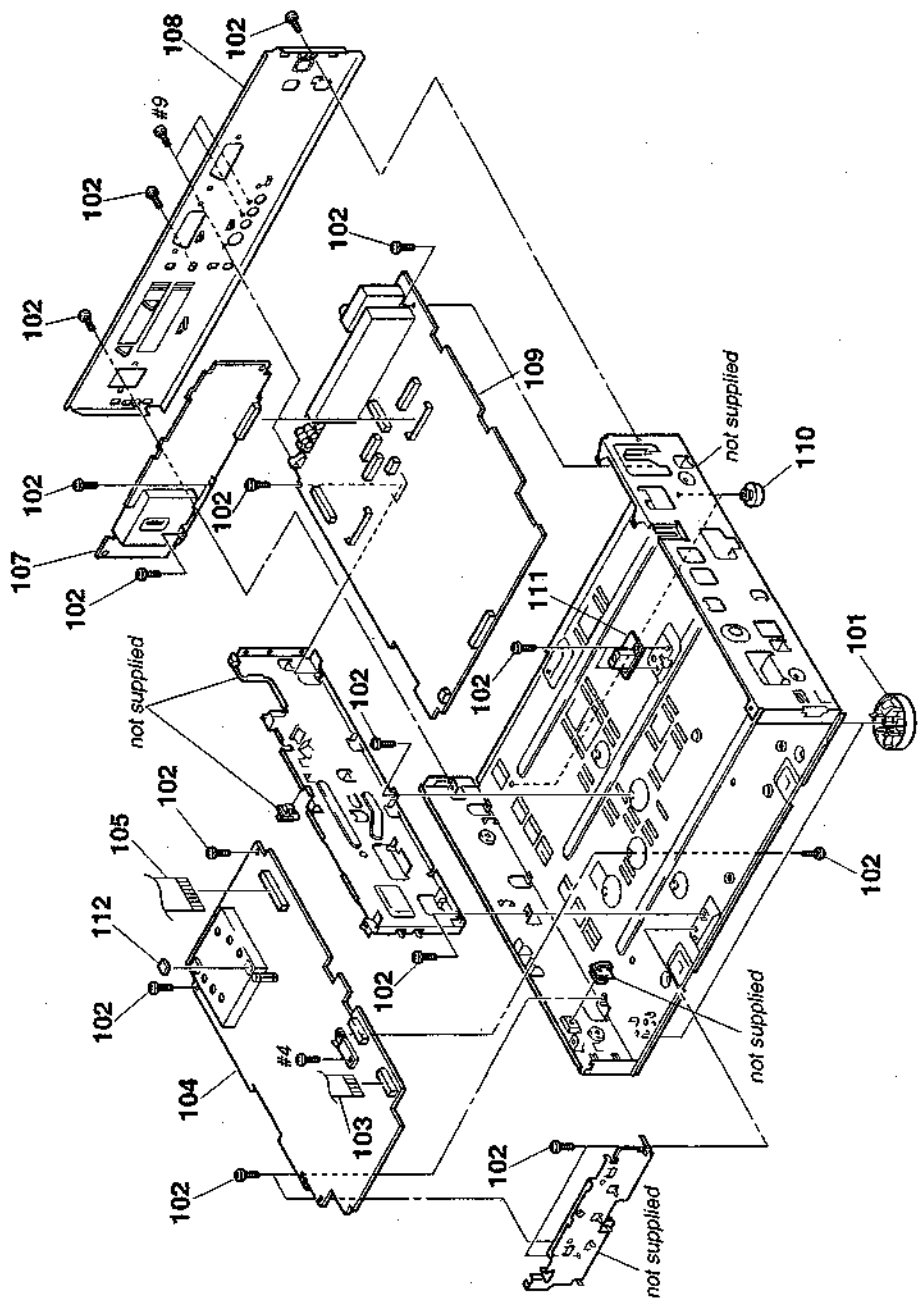


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
101	X-3946-574-1	INSULATOR ASSY		* 108	3-972-871-31	PANEL, REAR (B)	
102	3-970-608-11	SUMMITTE (B3), +BV		* 108	3-972-871-41	PANEL, REAR (MN,NP,NR)	
103	1-777-340-11	CABLE, FLAT (FMD-11) 19P		* 109	A-7066-973-A	MV-34 (NP) BOARD, COMPLETE(MN,NP,NR)	
* 104	A-7066-976-A	MH-18 (UX) BOARD, COMPLETE		* 109	A-7066-974-A	MV-34 (VC) BOARD, COMPLETE(AS,VC)	
105	1-777-848-11	CABLE, FLAT (FMM-20)		* 109	A-7066-977-A	MV-34 (UX) BOARD, COMPLETE(UX)	
* 107	A-7066-978-A	RV-50 (P) BOARD, COMPLETE		* 109	A-7066-998-A	MV-34 (B) BOARD, COMPLETE(B)	
* 107	A-7066-999-A	RV-50 (B) BOARD, COMPLETE(B)	(AS,MN,NP,NR,UX,VC)	110	3-957-819-01	FOOT	
* 108	3-972-871-11	PANEL, REAR (UX)		* 111	3-966-909-01	BASE (V), MD	
* 108	3-972-871-21	PANEL, REAR (AS,VC)		112	3-513-007-02	CUSHION, LOCK PLATE	

5-1-4. MECHANISM DECK ASSEMBLY-1

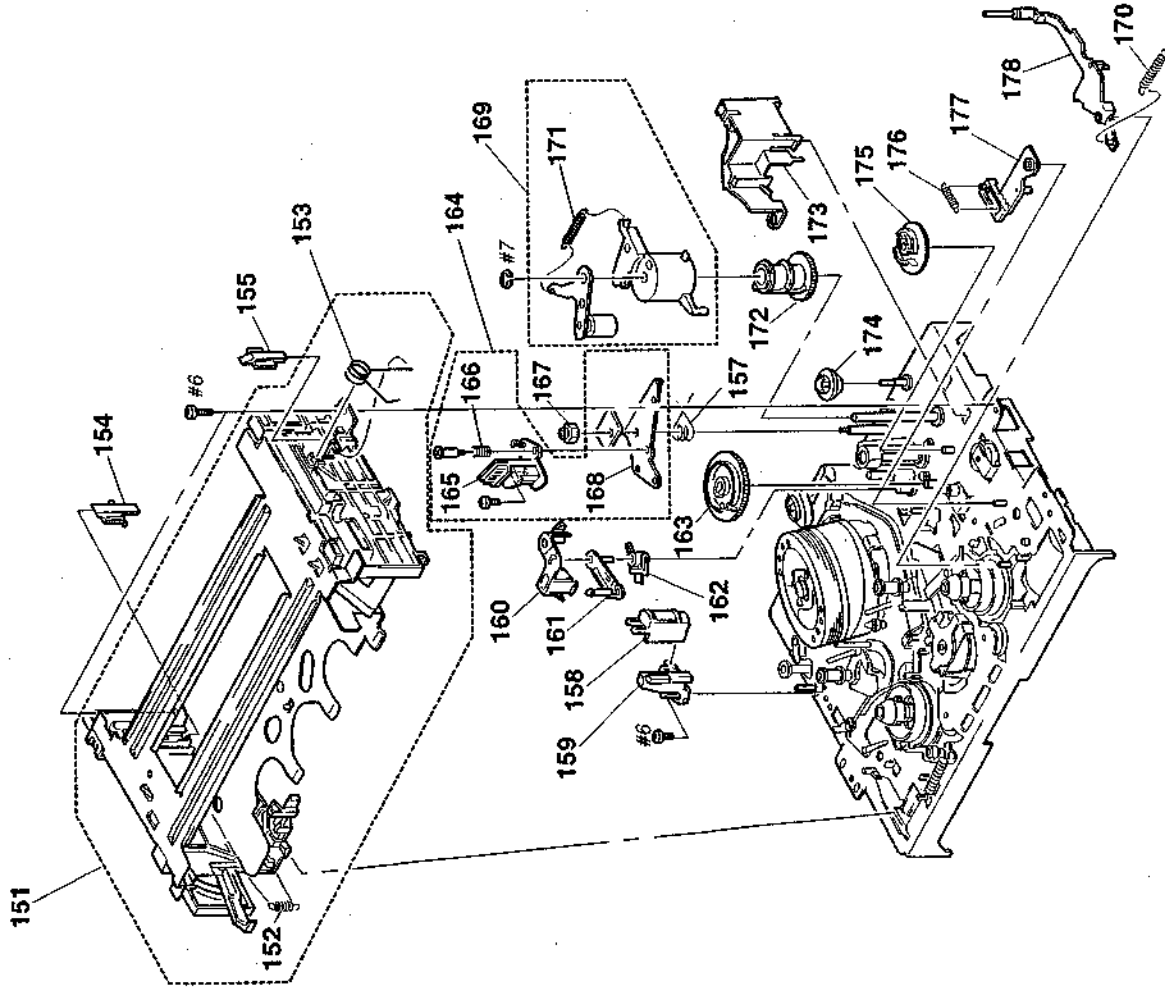


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
151	A-6759-603-A	FL BLOCK ASSY		165	1-506-485-11	PIN, CONNECTOR 6P	
152	3-958-467-01	SPRING, TENSION COIL		166	3-960-439-02	SPRING (ACE), COMPRESSION	
153	3-970-471-01	SPRING, TORSION		167	3-942-867-01	NUT, AC HEIGHT ADJUSTMENT	
154	3-958-488-03	PLATE, LIGHT GUIDE, END SENSOR		168	3-958-491-01	BASE, ACE	
155	3-970-473-01	PLATE, LIGHT GUIDE, TOP SENSOR		169	A-6746-072-A	PRESS BLOCK ASSY, PINCH	
157	3-958-487-01	SPRING, (ACE) TORSION COIL		170	3-958-505-01	SPRING (SOFT BRAKE T), TENSION	
158	1-500-144-11	HEAD, FE		171	3-958-455-01	SPRING (PINCH), TENSION	
159	X-3945-348-2	FEH ASSY		172	3-958-151-01	GEAR, ELEVATOR	
160	3-962-298-01	BRACKET, TG7 TAPE		173	3-958-454-01	OPNER, LID	
161	X-3944-797-1	TG8 ASSY		174	3-958-501-01	SCREW, ACE ADJUSTMENT	
162	3-958-421-01	HOLDER, TG8		175	3-958-153-01	GEAR, PRESS	
163	3-958-152-01	GEAR, TG8		176	3-958-462-01	SPRING (RVS BRAKE), TENSION	
164	A-6736-103-A	ACE BLOCK ASSY		177	X-3943-885-1	ARM ASSY, RVS BRAKE	
				178	X-3943-862-1	BRAKE (T) ASSY, SOFT	

5-1-5. MECHANISM DECK ASSEMBLY-2

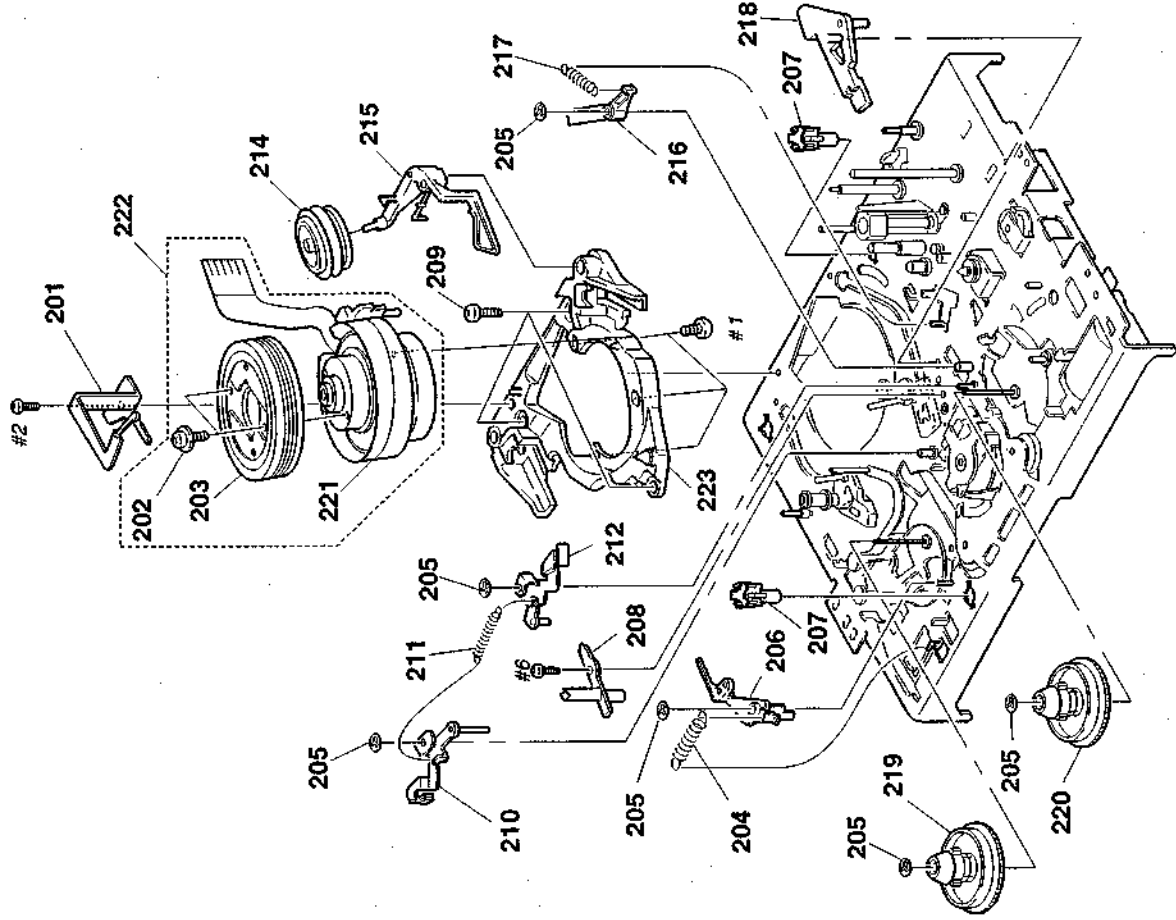


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description	Remarks
201	X-3943-899-8	GROUND ASSY, SHAFT(EXCEPT L2)	212	X-3945-444-1	ARM (T) ASSY, MAIN BRAKE	
202	2-643-205-01	SCREW	214	X-3947-255-1	ROLLER ASSY, HC	
203	8-848-622-02	UPPER DRUM ASSY DZR-06-R (M901)	215	3-975-724-01	ARM, HC	
204	3-958-443-01	SPRING, STRETCH COIL SPRING	216	3-960-139-01	ARM, NEUTRALITY	
205	3-669-595-00	WASHER (2), STOPPER	217	3-958-535-01	SPRING, TENSION	
206	3-958-450-01	BRAKE (S), SOFT	218	3-960-138-01	ARM, PENDULUM COMPULSION	
207	3-958-390-01	SHAFT, PC BOARD	219	X-3943-902-1	TABLE, REEL (S) ASSY	
208	3-958-391-01	PLATE, LIGHT GUIDE, LED	220	X-3943-903-1	TABLE, REEL (T) ASSY	
209	3-961-441-01	SCREW (3x8)	221	8-848-666-11	LOWER DRUM ASSY DZL-518/J-RP (M901)	
210	X-3945-443-1	BRAKE (S) ASSY, MAIN	223	3-969-629-01	DRUM BASE	
211	3-958-517-01	SPRING, TENSIONCOIL				

5-1-6. MECHANISM DECK ASSEMBLY-3

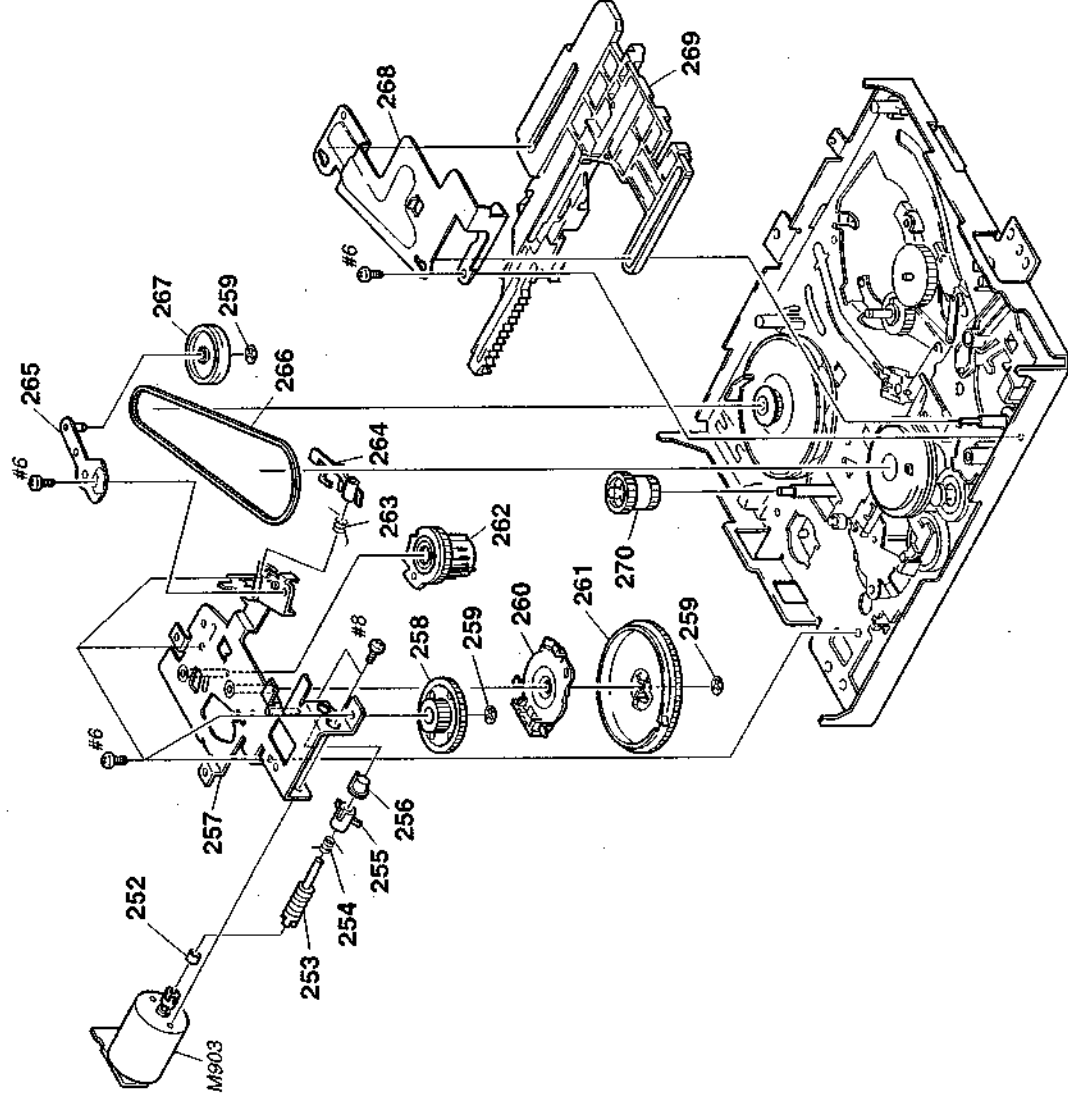


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
252	3-959-840-11	RUBBER, JOINT		262	3-958-156-03	GEAR, FL DRIVING	
253	3-958-159-01	WORM		263	3-958-445-01	SPRING, TORSION COIL (CAP BRAKE)	
254	3-958-460-01	SPRING, ONE-WAY		264	X-3943-888-1	BRAKE ASSY, CAP	
255	3-958-160-01	PROPELLOR		265	X-3943-889-1	ARM ASSY, TENSION VEHICLE	
256	3-958-155-01	BEARING, CAM MOTOR		266	3-958-361-01	BELT, TIMING	
* 257	X-3943-884-1	CHASSIS ASSY, CAM MOTOR		267	3-958-448-01	WHEEL, TENSION	
258	3-958-157-02	WHEEL, WORM		* 268	3-959-763-01	RETAINER	
259	3-669-595-00	WASHER (2), STOPPER		269	3-958-163-04	SLIDER, MAIN	
260	1-762-076-11	SWITCH, ROTARY		3-958-162-02	GEAR, UPPER/LOWER COMMUNICATION		
261	3-958-161-07	GEAR, CAM		M903	X-3943-883-1	MOTOR ASSY, CAM	

5-1-7. MECHANISM DECK ASSEMBLY-4

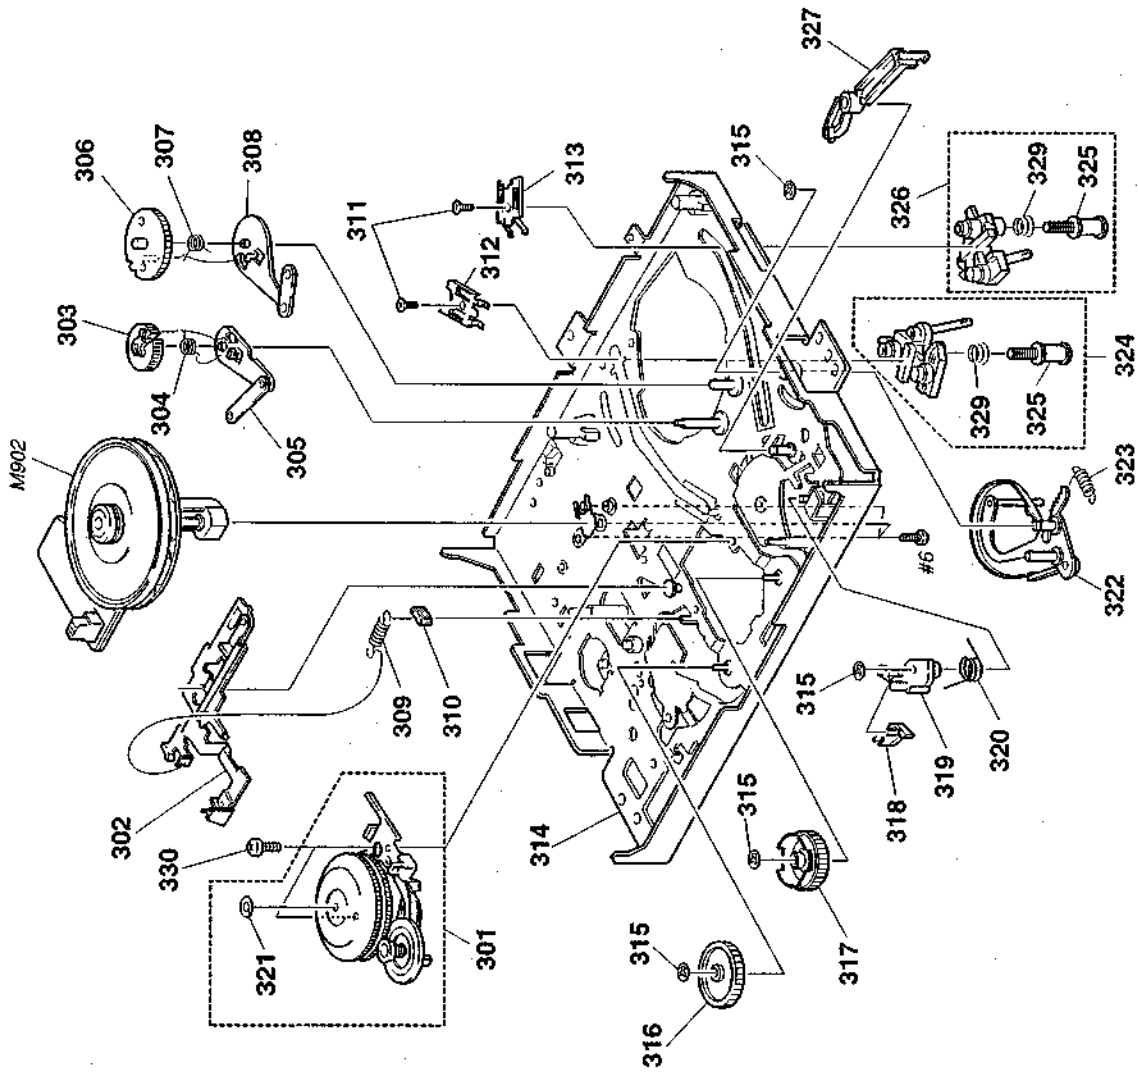


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
301	A-6739-102-A	RKB BLOCK ASSY		316	3-962-960-01	GEAR (T-K), IDLER	
302	X-3943-897-1	LEVER ASSY, TRIGGER		317	3-962-959-01	GEAR (S-K), IDLER	
303	3-958-485-02	GEAR (T), LOADING		318	3-958-533-01	CLAW, S WINDING	
304	3-960-449-01	SPRING (T), TORSION COIL		319	3-958-532-01	ARM, S WINDING	
305	X-3943-891-3	LEVER (T) ASSY, LOADING		320	3-958-534-01	SPRING, TORSION	
306	3-958-476-01	GEAR (S), LOADING		321	3-966-082-01	RING, RETAINING, SLIT WASHER	
307	3-960-448-01	SPRING (S), TORSION COIL		322	X-3943-886-1	TG1 ASSY	
308	X-3943-890-2	LEVER (S) ASSY, LOADING		323	3-958-492-01	SPRING (TG1), TENSION COIL	
309	3-958-529-01	SPRING (MOMENT), TENSION		324	A-6750-325-A	T BLOCK ASSY, SHUTTLE	
310	3-959-840-11	RUBBER, JOINT		325	X-3944-378-1	ROLLER ASSY, GUIDE	
311	3-960-720-01	SCREW		326	A-6750-316-A	SHUTTLE (S) BLOCK ASSY	
312	3-960-688-01	SPRING, LEAF (T), LOADING		327	3-958-504-01	ARM, FIXED RELEASE	
313	3-960-687-01	SPRING, LEAF (S), LOADING		329	3-965-178-01	SPRING	
314	X-3945-485-4	CHASSIS ASSY, MECHANICAL		M902	1-698-409-14	MOTOR, DC (CAPSTAN)	
315	3-669-595-00	WASHER (2), STOPPER					

5-1-8. Video 8 CASSETTE COMPARTMENT ASSEMBLY

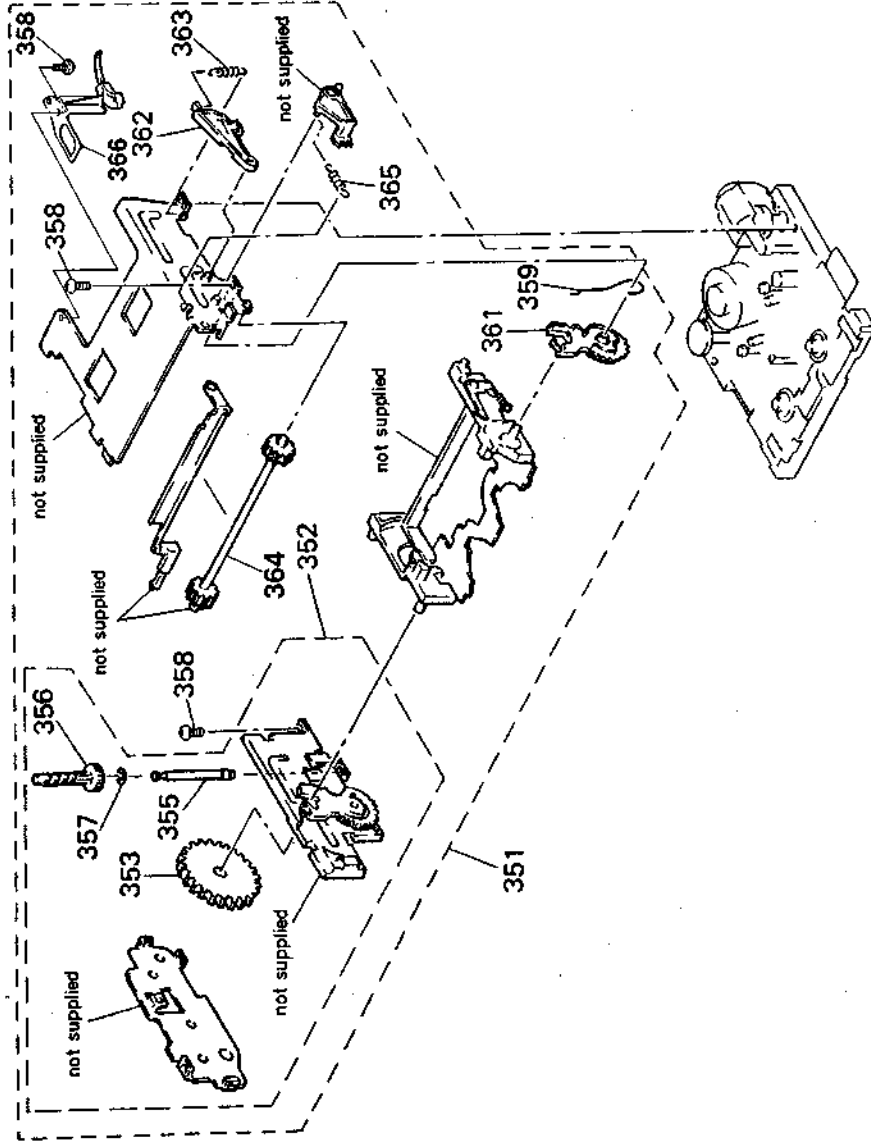


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
351	A-7092-566-H	FL BLOCK ASSY (FLAT)		359	3-954-042-01	SPRING, PRESS	
352	A-7093-114-A	PLATE (S) BLOCK ASSY, SIDE (FLAT)		361	3-954-033-01	ARM (T), DRIVING	
353	3-954-019-01	WHEEL, FL WORM		* 362	3-954-040-01	ARM, CASSETTE IN SWITCH	
* 355	3-954-029-01	SHAFT, FL WORM GEAR		363	3-954-043-01	SPRING, TENSION	
356	3-954-028-01	GEAR, FL WORM		364	X-3942-942-2	GEAR ASSY, JOINT	
357	3-738-212-11	RETAINER, THRUST, REEL TABLE		365	3-954-044-01	SPRING, TENSION	
358	3-732-817-01	SCREW (2X4.5), TAPPING		366	3-967-578-01	GUARD, TAPE	

5-1-9. Video 8 MECHANISM DECK ASSEMBLY-1

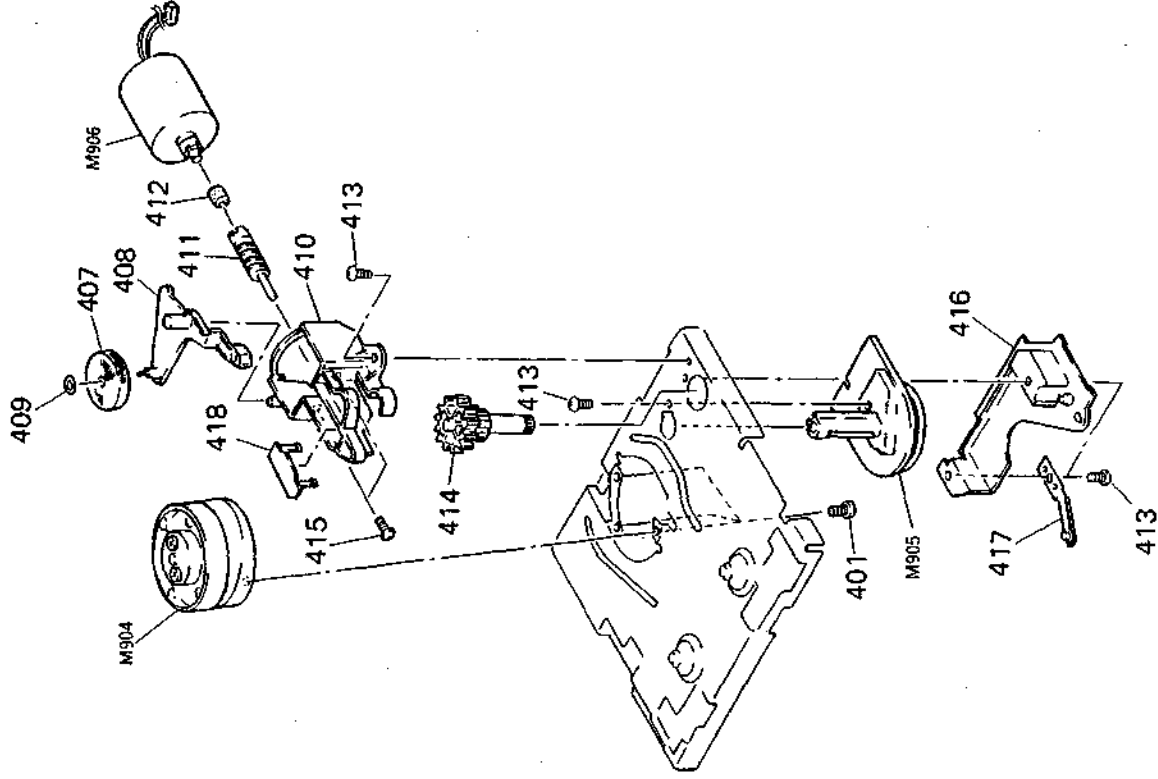


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
407	X-3945-909-1	ROLLER ASSY, HC		415	4-623-699-01	SCREW (3X5)	
408	X-3942-947-1	ARM ASSY, HC		*416	3-954-049-01	RETAINER, WORM WHEEL	
409	3-321-393-01	WASHER, STOPPER		417	X-3945-777-1	GROUND(F) ASSY, SHAFT	
410	3-954-024-03	HOLDER, MOTOR		* 418	3-958-047-01	COVER, MOTOR HOLDER	
411	3-733-395-01	GEAR (CAM), WORM		M904	A-7048-853-A	DRUM ASSY DGH-0D8A-R	
412	3-962-295-01	RUBBER, JOINT		M905	8-835-499-01	MOTOR, DC SCE-0501A	
413	3-732-817-01	SCREW (2X4.5), TAPPING		M906	X-3942-946-1	MOTOR ASSY, CAM	
414	3-954-023-01	WHEEL, CAM WORM					

5-1-10. Video 8 MECHANISM DECK ASSEMBLY-2

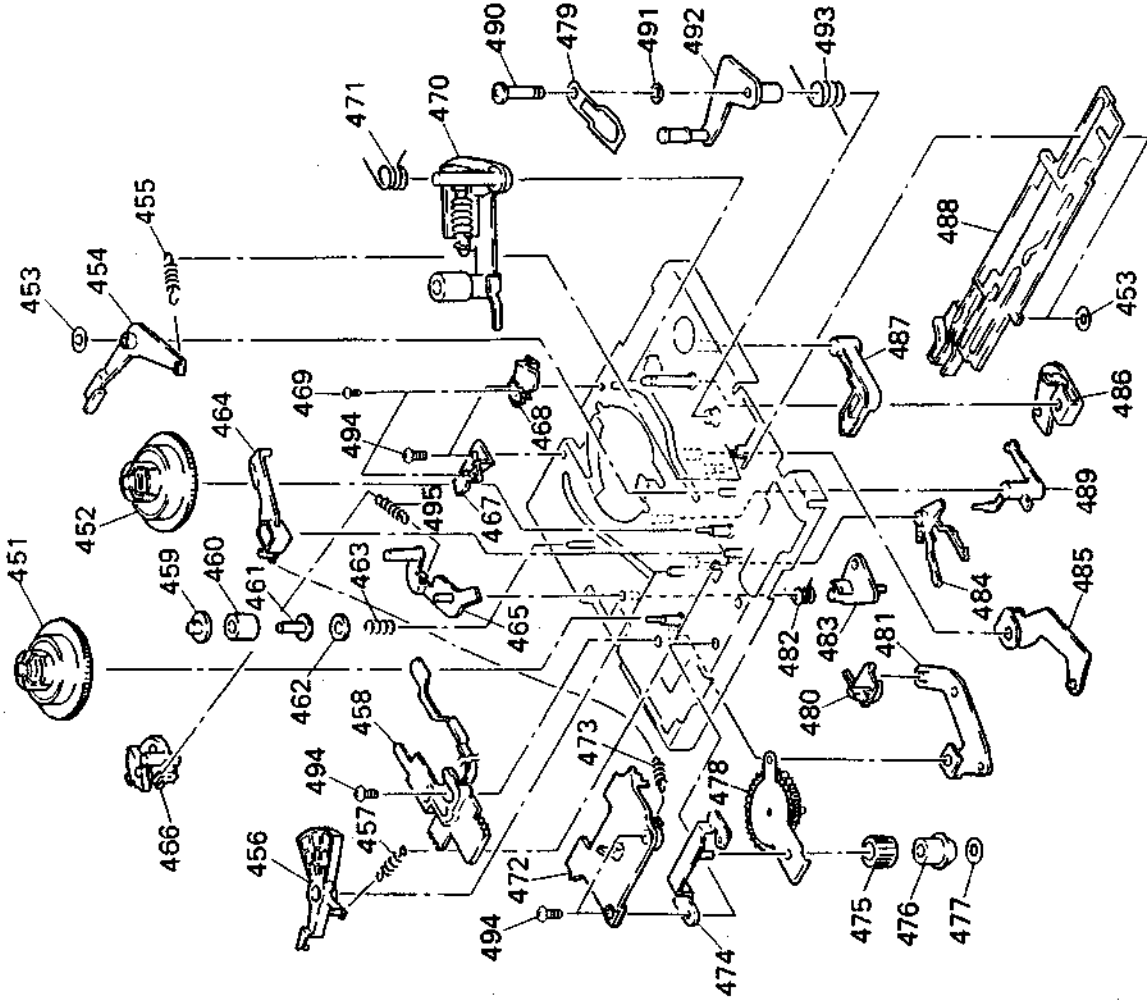

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
451	X-3942-954-1	TABLE (S) ASSY, REEL		474	X-3943-162-1	BASE ASSY, PENDULUM	
452	X-3942-953-2	TABLE (T) ASSY, REEL		475	3-954-059-01	GEAR, PENDULUM DRIVING	
453	3-669-465-01	WASHER (1.5), STOPPER		476	3-954-321-01	BEARING, PENDULUM DRIVING	
454	X-3943-161-3	BRAKE (T) ASSY		477	3-726-829-01	WASHER, STOPPER	
455	3-963-978-01	SPRING, TENSION		478	X-3942-951-1	GEAR ASSY, PENDULUM	
456	3-954-071-01	ARM, BRAKE (S)		479	3-954-098-01	SPACER, TG7	
457	3-954-085-01	SPRING, TENSION		480	3-953-975-01	CLAW, S TAKE-UP	
458	X-3942-956-1	BAND ASSY, TENSION REGULATOR		* 481	3-953-974-01	ARM, S TAKE-UP	
459	3-726-884-01	FLANGE, UPPER, TG2		482	3-956-366-01	SPRING, TORSION	
460	3-943-670-02	ROLLER, TG2		483	3-954-100-01	ARM, TENSION REGULATOR SUB	
461	3-726-885-01	SLEEVE, TG2		484	3-953-973-01	ARM, PENDULUM COMPULSION	
462	3-726-882-02	FLANGE, LOWER, TG2		* 485	3-954-007-01	LEVER, SLIDE PLATE DRIVING	
463	3-954-001-01	SPRING, COMPRESSION		* 486	3-954-009-01	LEVER, PINCH DRIVING	
464	X-3943-111-1	BRAKE (T) ASSY, SOFT		487	3-954-016-01	LEVER, TG7 DRIVING	
465	X-3942-955-1	TENSION REGULATOR ASSY		488	3-953-972-01	PLATE, SLIDE	
466	3-954-103-01	ARM, TENSION ADJUSTMENT		489	3-954-072-01	LEVER, BRAKE (S) DRIVING	
467	3-954-090-01	CATCHER (S)		490	3-954-096-01	SCREW, TG7 HEIGHT ADJUSTMENT	
468	3-954-091-01	CATCHER (T)		491	3-738-212-11	RETAINER, THRUST, REEL TABLE	
469	3-954-285-01	SCREW (M1.4X0.2)		492	X-3946-776-1	ARM(F) ASSY, TG7	
470	X-3942-945-1	ARM ASSY, PINCH		493	3-954-003-01	SPRING (TG7), TORSION	
471	3-954-105-01	SPRING (PINCH DRIVING)		494	3-732-817-01	SCREW (2X4.5), TAPPING	
* 472	3-954-063-01	PLATE, RELEASE, REEL LOCK		495	3-954-074-01	SPRING, TENSION	
473	3-955-142-01	SPRING, TENSION					

5-1-11. Video 8 MECHANISM DECK ASSEMBLY-3

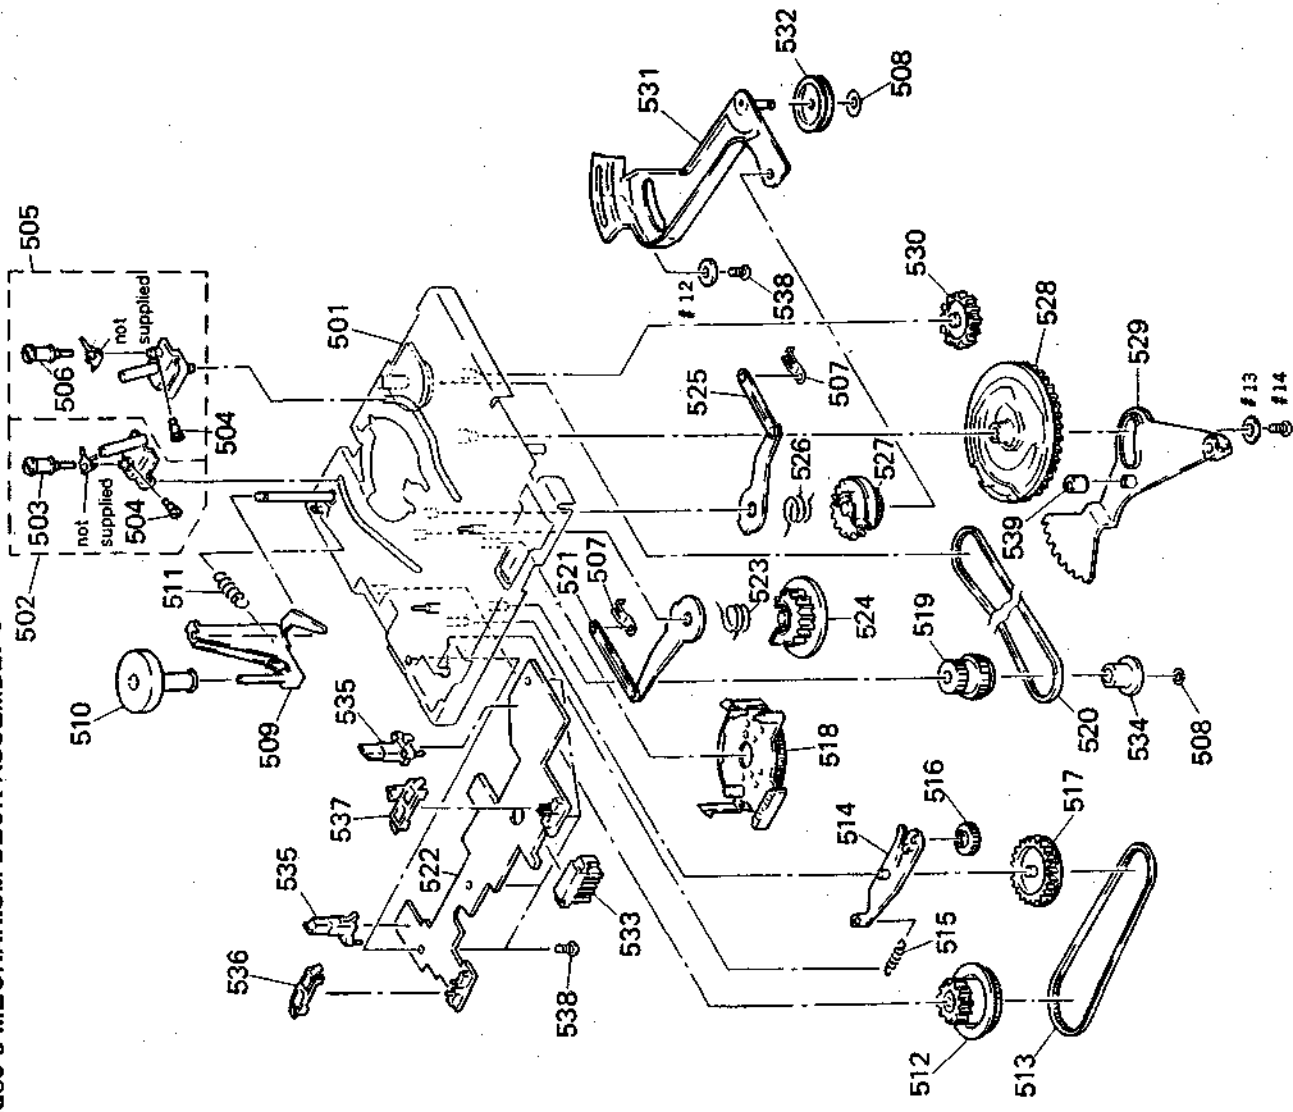

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
* 501	X-3946-740-1	CHASSIS(F2) ASSY, MECHANICAL		521	X-3942-949-1	ARM (S) ASSY, LOADING	
502	A-7040-338-A	COASTER (S) BLOCK ASSY		* 522	A-7072-921-A	MD-59D BOARD, COMPLETE	
503	X-3944-648-1	ROLLER ASSY (3), TG3		523	3-953-998-01	SPRING (S), TORSION	
504	3-947-504-01	SCREW (M1.2X2)		524	3-953-991-01	GEAR (S), LOADING	
505	A-7040-470-A	COASTER (T) BLOCK ASSY (2)		525	X-3942-948-1	ARM (T) ASSY, LOADING	
506	X-3941-756-1	ROLLER ASSY (2), Tg6		526	3-954-000-01	SPRING (T), TORSION	
507	3-956-649-01	SPRING, LEAF COASTER		527	3-953-992-01	GEAR (T), LOADING	
508	3-726-829-01	WASHER, STOPPER		528	3-954-050-01	CAM, MAIN	
509	X-3943-015-1	BASE ASSY, ROLLER		* 529	3-954-014-01	LEVER, LOADING DRIVING	
510	X-3944-994-1	ROLLER ASSY, IMPEDANCE		530	3-954-015-01	GEAR, CAM RELAY	
511	3-954-284-01	SPRING, TENSION		531	X-3942-962-1	BASE ASSY, PULLEY	
512	3-953-983-01	GEAR, FL PULLEY		532	X-3943-016-1	PULLEY ASSY, BELT	
513	3-954-079-01	BELT (FL), TIMING		533	1-750-620-11	CONNECTOR (MM8 MD)	
514	3-953-979-01	ARM, FL SELECTION		534	3-954-102-02	FLANGE, REEL RELAY	
515	3-953-982-01	SPRING, TENSION		535	3-953-985-01	HOLDER, ST SENSOR	
516	3-953-980-01	GEAR, FL SELECTION		536	3-954-638-01	HOLDER (S), PUSH SWITCH	
517	3-953-981-01	GEAR (DRIVING), FL PULLEY		537	3-954-639-01	HOLDER (T), PUSH SWITCH	
518	1-692-498-11	SWITCH, ROTARY		538	3-732-817-01	SCREW (2X4.5), TAPPING	
519	3-954-061-01	GEAR, REEL RELAY		539	3-954-323-01	ROLLER, LOADING	
520	3-953-986-01	BELT, TIMING					

5-2. ELECTRICAL PARTS LIST

Note:

When indicating parts by reference number, please include the board name.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS:
uF: μF

- RESISTORS
All resistors are in ohms.
METAL: metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
- COILS
uH: μH
- SEMICONDUCTORS
In each case, u, μ, for example:
uA... μA..., uPA..., μPA...,
uPB..., μPB..., uPC..., μPC...,
uPD..., μPD...

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
*	A-7066-975-A	CP-76 (VC) BOARD, COMPLETE *****	(AS,B, MN, NP, NR, VC)	C336	1-163-235-11	CERAMIC CHIP	22PF 5%
				C337	1-163-235-11	CERAMIC CHIP	22PF 5%
				C338	1-163-005-11	CERAMIC CHIP	470PF 10%
				C347	1-163-251-11	CERAMIC CHIP	100PF (AS,B, MN, NP, NR, VC)
				C348	1-163-251-11	CERAMIC CHIP	100PF (AS,B, MN, NP, NR, VC)
				C361	1-163-251-11	CERAMIC CHIP	100PF 5%
				C363	1-163-251-11	CERAMIC CHIP	100PF 5%
				C364	1-163-251-11	CERAMIC CHIP	100PF 5%
				C365	1-163-009-11	CERAMIC CHIP	0.001uF 10%
				C367	1-163-251-11	CERAMIC CHIP	100PF 5%
				C368	1-163-251-11	CERAMIC CHIP	100PF 5%
				C369	1-163-038-00	CERAMIC CHIP	0.1uF (AS,B, MN, NP, NR, VC)
				C370	1-163-038-00	CERAMIC CHIP	0.1uF 25V
				C371	1-163-251-11	CERAMIC CHIP	100PF 5%
				C375	1-163-110-00	CERAMIC CHIP	51PF (AS,B, MN, NP, NR, VC)
				C376	1-163-038-00	CERAMIC CHIP	0.1uF 5%
				C377	1-163-038-00	CERAMIC CHIP	0.1uF 25V
				C378	1-163-038-00	CERAMIC CHIP	0.1uF 25V
				C379	1-163-038-00	CERAMIC CHIP	0.1uF 25V
						< CONNECTOR >	
				CN301	1-774-489-41	CONNECTOR, FFC/FPC 23P	
				CN302	1-695-338-11	CONNECTOR, FFC/FPC 15P	
						< DIODE >	
				D301	8-719-801-78	DIODE 1SS184	(AS,B, MN, NP, NR, VC)
				D302	8-719-109-97	DIODE RD6.8ES-82	(AS,B, MN, NP, NR, VC)
				D303	8-719-109-97	DIODE RD6.8ES-82	
				D304	8-719-109-97	DIODE RD6.8ES-82	(AS,B, MN, NP, NR, VC)
				D305	8-719-109-97	DIODE RD6.8ES-82	
				D306	8-719-109-97	DIODE RD6.8ES-82	
				D307	8-719-109-97	DIODE RD6.8ES-82	
				D308	8-719-109-97	DIODE RD6.8ES-82	
				D309	8-719-109-97	DIODE RD6.8ES-82	
				D310	8-719-109-97	DIODE RD6.8ES-82	(AS,B, MN, NP, NR, VC)
				D311	8-719-109-97	DIODE RD6.8ES-82	(AS,B, MN, NP, NR, VC)
				D312	8-719-109-97	DIODE RD6.8ES-82	
				D313	8-719-109-97	DIODE RD6.8ES-82	
				D314	8-719-110-31	DIODE RD12ES-82	
				D315	8-719-109-97	DIODE RD6.8ES-82	
				D316	8-719-109-97	DIODE RD6.8ES-82	(AS,B, MN, NP, NR, VC)
				D317	8-719-110-31	DIODE RD12ES-82	
				D318	8-719-109-97	DIODE RD6.8ES-82	
				D319	8-719-109-97	DIODE RD6.8ES-82	(AS,B, MN, NP, NR, VC)
				D320	8-719-109-97	DIODE RD6.8ES-82	
						< CAPACITOR >	
				C301	1-126-967-11	ELECT	47uF 20%
				C302	1-126-967-11	ELECT	47uF 20%
				C303	1-126-967-11	ELECT	47uF 20%
				C304	1-126-967-11	ELECT	47uF 20%
				C305	1-164-232-11	CERAMIC CHIP	0.01uF 50V
				C306	1-163-245-11	CERAMIC CHIP	56PF 5%
				C307	1-126-967-11	ELECT	47uF 20%
				C308	1-126-967-11	ELECT	47uF 20%
				C309	1-164-232-11	CERAMIC CHIP	0.01uF 50V
				C310	1-164-232-11	CERAMIC CHIP	0.01uF 50V
				C313	1-126-967-11	ELECT	47uF 20%
				C314	1-126-967-11	ELECT	47uF 20%
				C315	1-126-967-11	ELECT	47uF 20%
				C316	1-163-104-00	CERAMIC CHIP	30PF 5%
				C317	1-164-232-11	CERAMIC CHIP	0.01uF 50V
				C318	1-126-967-11	ELECT	47uF 20%
				C319	1-126-967-11	ELECT	47uF 20%
				C320	1-126-967-11	ELECT	47uF 20%
				C321	1-126-967-11	ELECT	47uF 20%
				C322	1-126-967-11	ELECT	47uF 20%
				C323	1-164-232-11	CERAMIC CHIP	0.01uF 50V
				C324	1-126-965-11	ELECT	22uF 20%
				C325	1-164-232-11	CERAMIC CHIP	0.01uF (AS,B, MN, NP, NR, VC)
				C326	1-126-967-11	ELECT	47uF 20%
				C327	1-126-967-11	ELECT	47uF 20%
				C328	1-163-005-11	CERAMIC CHIP	470PF 10%
				C329	1-164-232-11	CERAMIC CHIP	0.01uF (AS,B, MN, NP, NR, VC)
				C330	1-164-232-11	CERAMIC CHIP	0.01uF 50V
				C331	1-163-251-11	CERAMIC CHIP	100PF 5%
				C332	1-163-251-11	CERAMIC CHIP	100PF 5%
				C333	1-163-251-11	CERAMIC CHIP	100PF (AS,B, MN, NP, NR, VC)
				C334	1-163-251-11	CERAMIC CHIP	100PF 5%
				C335	1-164-161-11	CERAMIC CHIP	0.0022uF 10% 100V (AS,B, MN, NP, NR, VC)

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
D321	8-719-109-97	DIODE RD6.8ES-B2		Q301	8-729-010-05	TRANSISTOR MSB709-RT1	(AS,B, MN, NP, NR, VC)
D322	8-719-109-97	DIODE RD6.8ES-B2		Q302	8-729-010-25	TRANSISTOR MSD601-RT1	(AS,B, MN, NP, NR, VC)
D323	8-719-109-97	DIODE RD6.8ES-B2		Q303	8-729-010-25	TRANSISTOR MSD601-RT1	(AS,B, MN, NP, NR, VC)
D324	8-719-109-97	DIODE RD6.8ES-B2		Q304	8-729-010-25	TRANSISTOR MSD601-RT1	(AS,B, MN, NP, NR, VC)
D325	8-719-109-97	DIODE RD6.8ES-B2		Q305	8-729-010-25	TRANSISTOR MSD601-RT1	(AS,B, MN, NP, NR, VC)
D326	8-719-109-97	DIODE RD6.8ES-B2		Q306	8-729-010-05	TRANSISTOR MSB709-RT1	(AS,B, MN, NP, NR, VC)
D327	8-719-109-97	DIODE RD6.8ES-B2		Q307	8-729-010-25	TRANSISTOR MSD601-RT1	(AS,B, MN, NP, NR, VC)
D328	8-719-109-97	DIODE RD6.8ES-B2		Q308	8-729-010-25	TRANSISTOR MSD601-RT1	(AS,B, MN, NP, NR, VC)
D329	8-719-109-97	DIODE RD6.8ES-B2		Q309	8-729-010-25	TRANSISTOR MSD601-RT1	(AS,B, MN, NP, NR, VC)
D330	8-719-109-97	DIODE RD6.8ES-B2 (AS,B, MN, NP, NR, VC)		Q310	8-729-010-05	TRANSISTOR MSB709-RT1	(AS,B, MN, NP, NR, VC)
D331	8-719-109-97	DIODE RD6.8ES-B2 (AS,B, MN, NP, NR, VC)		Q311	8-729-010-05	TRANSISTOR MSB709-RT1	(AS,B, MN, NP, NR, VC)
D332	8-719-109-97	DIODE RD6.8ES-B2					
D333	8-719-109-97	DIODE RD6.8ES-B2					
D334	8-719-109-97	DIODE RD6.8ES-B2					
D335	8-719-109-97	DIODE RD6.8ES-B2 (AS,B, MN, NP, NR, VC)					
D336	8-719-911-19	DIODE 1S3119					
D337	8-719-118-28	DIODE RD9.1EW-T2					
		< FILTER >				< RESISTOR >	
FL301	1-236-163-11	ENCAPSULATED COMPONENT		R301	1-216-049-91	METAL GLAZE 1K	5% 1/10W
FL302	1-236-163-11	ENCAPSULATED COMPONENT		R302	1-216-043-91	METAL GLAZE 560	5% 1/10W
FL303	1-236-163-11	ENCAPSULATED COMPONENT		R303	1-216-295-91	CONDUCTOR, CHIP(2012) (UX)	
FL304	1-236-163-11	ENCAPSULATED COMPONENT		R305	1-216-081-00	METAL CHIP 22K	5% 1/10W
FL305	1-236-163-11	ENCAPSULATED COMPONENT		R306	1-216-065-00	METAL CHIP 4.7K	5% 1/10W
FL306	1-236-163-11	ENCAPSULATED COMPONENT		R307	1-216-049-91	METAL GLAZE 1K	5% 1/10W
FL307	1-236-163-11	ENCAPSULATED COMPONENT (AS,B, MN, NP, NR, VC)		R308	1-216-065-00	METAL CHIP 4.7K	5% 1/10W
FL308	1-236-163-11	ENCAPSULATED COMPONENT (AS,B, MN, NP, NR, VC)		R309	1-216-047-91	METAL GLAZE 820	5% 1/10W
		< IC >		R310	1-216-059-00	METAL CHIP 2.7K	5% 1/10W
IC302	8-759-009-06	IC MC14052BF		R311	1-216-049-91	METAL GLAZE 1K	5% 1/10W
IC303	8-759-504-46	IC P005RF1		R313	1-216-295-91	CONDUCTOR, CHIP(2012) (UX)	
IC305	8-759-009-07	IC MC14053BFEL (AS,B, MN, NP, NR, VC)		R314	1-216-049-91	METAL GLAZE 1K	5% 1/10W
IC306	8-759-009-07	IC MC14053BFEL (AS,B, MN, NP, NR, VC)		R315	1-216-055-00	METAL CHIP 1.8K	5% 1/10W
IC307	8-759-009-07	IC MC14053BFEL (AS,B, MN, NP, NR, VC)		R316	1-216-065-00	METAL CHIP 4.7K	5% 1/10W
IC308	8-759-100-96	IC UPC4558G2		R318	1-216-081-00	METAL CHIP 22K	5% 1/10W
IC309	8-759-100-96	IC UPC4558G2 (AS,B, MN, NP, NR, VC)		R319	1-216-065-00	METAL CHIP 4.7K	5% 1/10W
IC310	8-759-282-03	IC MC14577CFEL		R320	1-216-065-00	METAL CHIP 4.7K	5% 1/10W
		< JACK >		R322	1-216-065-00	METAL CHIP 4.7K	5% 1/10W
J305	1-561-534-00	SOCKET, PIN 21(PI/LINE-1/TV)		R323	1-216-081-00	METAL CHIP 22K	5% 1/10W
J306	1-561-534-00	SOCKET, PIN 21(DECODER/LINE-3)		R324	1-216-025-91	METAL GLAZE 100	5% 1/10W
		< JUMPER RESISTOR >		R325	1-216-065-00	METAL CHIP 4.7K	5% 1/10W
JR001	1-216-295-91	CONDUCTOR, CHIP(2012)		R326	1-216-073-00	METAL CHIP 10K	5% 1/10W
JR002	1-216-295-91	CONDUCTOR, CHIP(2012)		R327	1-216-041-00	METAL CHIP 470	5% 1/10W
JR003	1-216-295-91	CONDUCTOR, CHIP(2012)		R328	1-216-073-00	METAL CHIP 10K	5% 1/10W
JR005	1-216-295-91	CONDUCTOR, CHIP(2012)		R329	1-216-059-00	METAL CHIP 6.8K	5% 1/10W
JR006	1-216-295-91	CONDUCTOR, CHIP(2012)		R330	1-216-105-91	METAL GLAZE 220K	5% 1/10W
JR007	1-216-295-91	CONDUCTOR, CHIP(2012)		R331	1-216-101-00	METAL CHIP 150K	5% 1/10W
		< COIL >		R332	1-216-109-00	METAL CHIP 330K	5% 1/10W
L301	1-410-516-11	INDUCTOR 39uH		R333	1-216-073-00	METAL CHIP 10K	5% 1/10W
L302	1-410-470-11	INDUCTOR 10uH (AS,B, MN, NP, NR, VC)		R334	1-216-093-00	METAL CHIP 68K	5% 1/10W
L303	1-410-470-11	INDUCTOR 10uH		R335	1-216-073-00	METAL CHIP 10K	5% 1/10W
L304	1-410-470-11	INDUCTOR 10uH		R336	1-216-095-00	METAL CHIP 82K	5% 1/10W
L305	1-410-482-31	INDUCTOR 100uH		R337	1-216-121-91	METAL GLAZE 1M	5% 1/10W
L306	1-410-482-31	INDUCTOR 100uH		R338	1-216-073-00	METAL CHIP 10K	5% 1/10W
L307	1-410-470-11	INDUCTOR 10uH		R339	1-216-073-00	METAL CHIP 10K	5% 1/10W

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R340	1-216-043-91	METAL GLAZE	5%	*	A-7073-109-A	FL-79 BOARD, COMPLETE	
R341	1-216-073-00	METAL CHIP	5%		*****		
R342	1-216-073-00	METAL CHIP	5%				(Ref.No.: 6,000 Series)
R343	1-216-043-91	METAL GLAZE	(AS,B,MIN,NP,NR,VC) 5%		3-947-530-01	HOLDER, TERMINAL, S	
R344	1-216-043-91	METAL GLAZE	5%		< CAPACITOR >		
R345	1-216-093-00	METAL CHIP	5%	C201	1-164-232-11	CERAMIC CHIP	0.01uF 50V
R346	1-216-042-00	METAL CHIP	5%	C222	1-163-009-11	CERAMIC CHIP	0.001uF 10%
R347	1-216-089-91	METAL GLAZE	5%	C223	1-163-038-00	CERAMIC CHIP	0.1uF 25V
R348	1-216-053-00	METAL CHIP	5%		< CONNECTOR >		
R349	1-216-025-91	METAL GLAZE	(AS,B,MIN,NP,NR,VC) 5%	CN201	1-565-777-11	CONNECTOR, BOARD TO BOARD 8P	
R350	1-216-089-91	METAL GLAZE	(AS,B,MIN,NP,NR,VC) 5%	CN202	1-566-788-21	PIN, CONNECTOR 11P	
R351	1-216-025-91	METAL GLAZE	5%		< JACK >		
R352	1-216-041-00	METAL CHIP	5%	CNJ201	1-566-850-31	CONNECTOR, (S) TERMINAL 4P	
R353	1-216-022-00	METAL CHIP	5%	CNJ202	1-695-865-11	JACK, PIN 3P	
R354	1-216-049-91	METAL GLAZE	(AS,B,MIN,NP,NR,VC) 5%		< DIODE >		
R355	1-216-295-91	CONDUCTOR, CHIP(2012)	5%	D201	8-719-970-67	DIODE SLR-34MCA49	
R356	1-216-041-00	METAL CHIP	(AS,B,MIN,NP,NR,VC) 5%	D211	8-719-422-62	DIODE MA8062-L-TX	
R357	1-216-295-91	CONDUCTOR, CHIP(2012)	5%	D212	8-719-421-59	DIODE MA3075WA-(TX)	
R358	1-216-295-91	CONDUCTOR, CHIP(2012)	5%	D213	8-719-421-59	DIODE MA3075WA-(TX)	
R359	1-216-295-91	CONDUCTOR, CHIP(2012)	5%	D214	8-719-421-59	DIODE MA3075WA-(TX)	
R360	1-216-295-91	CONDUCTOR, CHIP(2012)	5%	D215	8-719-421-59	DIODE MA3075WA-(TX)	
R361	1-216-041-00	METAL CHIP	(AS,B,MIN,NP,NR,VC) 5%	D216	8-719-421-59	DIODE MA3075WA-(TX)	
R362	1-216-022-00	METAL CHIP	5%	D222	8-719-404-49	DIODE MA111	
R363	1-216-295-91	CONDUCTOR, CHIP(2012)	5%		< FILTER >		
R364	1-216-295-91	CONDUCTOR, CHIP(2012)	5%	FL201	1-236-163-11	ENCAPSULATED COMPONENT	
R365	1-216-295-91	CONDUCTOR, CHIP(2012)	5%	FL202	1-236-163-11	ENCAPSULATED COMPONENT	
R366	1-216-022-00	METAL CHIP	5%		< IC >		
R367	1-216-295-91	CONDUCTOR, CHIP(2012)	5%	IC202	8-749-011-05	IC GP1U28X	
R368	1-216-295-91	CONDUCTOR, CHIP(2012)	(AS,B,MIN,NP,NR,VC) 5%		< JUMPER RESISTOR >		
R369	1-216-022-00	METAL CHIP	5%	JR201	1-216-295-00	METAL CHIP	0 5%
R370	1-216-295-91	CONDUCTOR, CHIP(2012)	(AS,B,MIN,NP,NR,VC) 5%	JR202	1-216-295-00	METAL CHIP	0 5%
R371	1-216-295-91	CONDUCTOR, CHIP(2012)	(AS,B,MIN,NP,NR,VC) 5%		< RESISTOR >		
R372	1-216-295-91	CONDUCTOR, CHIP(2012)	5%	R201	1-216-031-00	METAL CHIP	180 5%
R373	1-216-295-91	CONDUCTOR, CHIP(2012)	5%	R204	1-216-057-00	METAL CHIP	2.2K 5%
R374	1-216-295-91	CONDUCTOR, CHIP(2012)	5%	R205	1-216-057-00	METAL CHIP	2.2K 5%
R376	1-216-295-91	CONDUCTOR, CHIP(2012)	5%	R212	1-216-022-00	METAL CHIP	75 5%
R377	1-216-295-91	CONDUCTOR, CHIP(2012)	(AS,B,MIN,NP,NR,VC) 5%	R213	1-216-022-00	METAL CHIP	75 5%
R378	1-216-295-91	CONDUCTOR, CHIP(2012)	(UX) 5%	R214	1-216-022-00	METAL CHIP	75 5%
R379	1-216-295-91	CONDUCTOR, CHIP(2012)	(AS,B,MIN,NP,NR,VC) 5%	R215	1-216-105-91	METAL GLAZE	220K 5%
R380	1-216-022-00	METAL CHIP	5%	R216	1-216-105-91	METAL GLAZE	220K 5%
R381	1-216-095-00	METAL CHIP	(AS,B,MIN,NP,NR,VC) 5%	R221	1-216-057-00	METAL CHIP	2.2K 5%
R382	1-216-295-91	CONDUCTOR, CHIP(2012)	(UX) 5%	R222	1-216-057-00	METAL CHIP	2.2K 5%
R383	1-216-041-00	METAL CHIP	5%	R223	1-216-295-00	METAL CHIP	0 5%
R384	1-216-059-00	METAL CHIP	5%	R224	1-216-295-00	METAL CHIP	0 5%
R385	1-216-081-00	METAL CHIP	5%		< SWITCH >		
R387	1-216-295-91	CONDUCTOR, CHIP(2012)	5%	S201	1-571-977-11	SWITCH, TACTIL(Ow/STANDBY)	
R389	1-216-295-91	CONDUCTOR, CHIP(2012)	5%	S202	1-571-977-11	SWITCH, TACTIL(Video 8 EJECT)	
R391	1-216-295-91	CONDUCTOR, CHIP(2012)	5%	S205	1-571-977-11	SWITCH, TACTIL	
R393	1-216-295-91	CONDUCTOR, CHIP(2012)	5%		(Video 8 HIGH SPEED REWIND)		
R395	1-216-033-00	METAL CHIP	5%	S207	1-571-977-11	SWITCH, TACTIL(Video 8)	
R396	1-216-033-00	METAL CHIP	5%				
R397	1-216-033-00	METAL CHIP	5%				
R398	1-216-033-00	METAL CHIP	5%				
R399	1-216-041-00	METAL CHIP	5%				
R400	1-216-041-00	METAL CHIP	5%				

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
* A-7066-980-A	FR-113 (UX) BOARD, COMPLETE *****					< JUMPER RESISTOR >	
			(Ref No.: 6,000 Series)				
* 3-960-787-01	HOLDER, FL < BUZZER >			JR001	1-216-296-00	METAL CHIP	0 5% 1/8W
				JR002	1-216-295-00	METAL CHIP	0 5% 1/10W
				JR003	1-216-296-00	METAL CHIP	0 5% 1/8W
				JR004	1-216-296-00	METAL CHIP	0 5% 1/8W
				JR005	1-216-295-00	METAL CHIP	0 5% 1/10W
BZ001	1-529-104-11	BUZZER, PIEZOELECTRIC		JR006	1-216-295-00	METAL CHIP	0 5% 1/10W
		< CAPACITOR >		JR007	1-216-296-00	METAL CHIP	0 5% 1/8W
				JR008	1-216-295-00	METAL CHIP	0 5% 1/10W
C001	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V	JR009	1-216-295-00	METAL CHIP	0 5% 1/10W
C002	1-107-682-11	CERAMIC CHIP 1uF	10% 16V	JR010	1-216-296-00	METAL CHIP	0 5% 1/8W
C003	1-163-234-11	CERAMIC CHIP 20PF	5% 50V	JR011	1-216-296-00	METAL CHIP	0 5% 1/8W
C004	1-163-235-11	CERAMIC CHIP 22PF	5% 50V	JR012	1-216-296-00	METAL CHIP	0 5% 1/8W
C006	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V	JR013	1-216-295-00	METAL CHIP	0 5% 1/10W
				JR014	1-216-296-00	METAL CHIP	0 5% 1/8W
C007	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V	JR015	1-216-296-00	METAL CHIP	0 5% 1/8W
C008	1-164-232-11	CERAMIC CHIP 0.01uF	50V	JR016	1-216-296-00	METAL CHIP	0 5% 1/10W
C009	1-161-494-00	CERAMIC 0.022uF	25V	JR017	1-216-296-00	METAL CHIP	0 5% 1/8W
C010	1-164-346-11	CERAMIC CHIP 1uF	16V	JR018	1-216-296-00	METAL CHIP	0 5% 1/8W
C102	1-164-346-11	CERAMIC CHIP 1uF	16V	JR019	1-216-296-00	METAL CHIP	0 5% 1/8W
				JR020	1-216-296-00	METAL CHIP	0 5% 1/8W
C104	1-163-077-00	CERAMIC CHIP 0.1uF	10% 25V	JR021	1-216-296-00	METAL CHIP	0 5% 1/8W
C108	1-161-494-00	CERAMIC 0.022uF	25V	JR022	1-216-295-00	METAL CHIP	0 5% 1/10W
		< CONNECTOR >		JR023	1-216-296-00	METAL CHIP	0 5% 1/8W
CN001	1-774-471-41	CONNECTOR, FCC/FPC 5P		JR024	1-216-296-00	METAL CHIP	0 5% 1/8W
CN002	1-774-494-41	CONNECTOR, FCC/FPC 28P		JR026	1-216-296-00	METAL CHIP	0 5% 1/8W
CN101	1-568-669-11	CONNECTOR, BOARD TO BOARD 8P		JR027	1-216-296-00	METAL CHIP	0 5% 1/8W
* CN104	1-695-328-11	PIN, CONNECTOR (PC BOARD) 5P		JR028	1-216-296-00	METAL CHIP	0 5% 1/8W
				JR029	1-216-295-00	METAL CHIP	0 5% 1/10W
						< RESISTOR >	
D001	8-719-210-33	DIODE EC10DS2		R001	1-216-222-00	METAL GLAZE	10K 5% 1/8W
D151	8-719-940-XX	LED SLR-34VCA49		R002	1-216-222-00	METAL GLAZE	10K 5% 1/8W
D152	8-719-940-XX	LED SLR-34VCA49		R004	1-216-198-91	METAL GLAZE	1K 5% 1/8W
D153	8-719-946-30	LED SLR34DC3		R008	1-216-222-00	METAL GLAZE	10K 5% 1/8W
D154	8-719-970-67	LED SLR-34MCA49		R009	1-249-428-11	CARBON	8.2K 5% 1/4W F
D155	8-719-970-67	LED SLR-34MCA49					
D161	8-719-970-67	LED SLR-34MCA49		R010	1-216-190-00	METAL GLAZE	470 5% 1/8W
D162	8-719-940-XX	LED SLR-34VCA49		R011	1-216-190-00	METAL GLAZE	470 5% 1/8W
D163	8-719-940-XX	LED SLR-34VCA49		R012	1-216-073-00	METAL CHIP	10K 5% 1/10W
D164	8-719-970-67	LED SLR-34MCA49		R013	1-216-041-00	METAL CHIP	470 5% 1/10W
				R014	1-216-041-00	METAL CHIP	470 5% 1/10W
D165	8-719-946-30	LED SLR34DC3		R015	1-216-113-00	METAL CHIP	470K 5% 1/10W
D166	8-719-940-XX	LED SLR-34VCA49		R016	1-216-222-00	METAL GLAZE	10K 5% 1/8W
D168	8-719-946-30	LED SLR34DC3		R017	1-216-073-00	METAL CHIP	10K 5% 1/10W
D169	8-719-946-30	LED SLR34DC3		R018	1-216-073-00	METAL CHIP	10K 5% 1/10W
D170	8-719-940-XX	LED SLR-34VCA49		R019	1-216-222-00	METAL GLAZE	10K 5% 1/8W
D171	8-719-946-30	LED SLR34DC3		R020	1-249-417-11	CARBON	1K 5% 1/4W F
D172	8-719-970-67	LED SLR-34MCA49		R021	1-216-073-00	METAL CHIP	10K 5% 1/10W
D173	8-719-970-67	LED SLR-34MCA49		R022	1-216-198-91	METAL GLAZE	1K 5% 1/8W
				R023	1-216-198-91	METAL GLAZE	1K 5% 1/8W
				R024	1-249-417-11	CARBON	1K 5% 1/4W F
		< FILTER >		R026	1-249-429-11	CARBON	10K 5% 1/4W
FL101	1-517-821-11	TUBE, FLUORESCENT INDICATOR		R027	1-216-041-00	METAL CHIP	470 5% 1/10W
				R028	1-216-041-00	METAL CHIP	470 5% 1/10W
				R029	1-216-041-00	METAL CHIP	470 5% 1/10W
				R030	1-216-073-00	METAL CHIP	10K 5% 1/10W
		< IC >		R031	1-216-073-00	METAL CHIP	10K 5% 1/10W
IC001	8-759-460-56	IC MB89096RPF-G-235-BND		R032	1-216-222-00	METAL GLAZE	10K 5% 1/8W
IC002	8-759-279-61	IC ST93CS66B1		R033	1-216-073-00	METAL CHIP	10K 5% 1/10W
IC101	8-759-448-24	IC NJU3719G(TE2)		R034	1-216-073-00	METAL CHIP	10K 5% 1/10W
				R035	1-249-417-11	CARBON	1K 5% 1/4W F
				R036	1-216-049-00	METAL CHIP	1K 5% 1/10W
				R037	1-249-417-11	CARBON	1K 5% 1/4W F
				R038	1-249-417-11	CARBON	1K 5% 1/4W F
				R039	1-249-417-11	CARBON	1K 5% 1/4W F
				R040	1-216-190-00	METAL GLAZE	470 5% 1/8W

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R041	1-216-041-00	METAL CHIP	5%	S115	1-571-977-11	SWITCH, TACTIL(RF-CH)	1/10W
R042	1-216-041-00	METAL CHIP	5%	S116	1-571-977-11	SWITCH, TACTIL(EASY SET UP)	1/10W
R101	1-216-198-91	METAL GLAZE	1K	S117	1-571-977-11	SWITCH, TACTIL(STOP)	1/8W
R102	1-216-049-00	METAL CHIP	1K	S118	1-571-977-11	SWITCH, TACTIL(EDIT STANDBY/START)	1/10W
R103	1-249-417-11	CARBON	1K	S119	1-571-977-11	SWITCH, TACTIL(EDIT ON(DIR)/OFF)	1/4W F
R104	1-249-417-11	CARBON	1K	S121	1-571-977-11	SWITCH, TACTIL(TV/VTR)	1/4W F
R105	1-216-065-00	METAL CHIP	4.7K	S122	1-571-977-11	SWITCH, TACTIL(AUDIO DUB(VHS))	1/10W
R106	1-216-210-00	METAL GLAZE	3.3K	S123	1-571-977-11	SWITCH, TACTIL(COUNTER RESET)	1/8W
R107	1-216-057-00	METAL CHIP	2.2K	S124	1-571-977-11	SWITCH, TACTIL(TAPE SPEED SP/LP(VHS))	1/10W
R108	1-249-434-11	CARBON	27K	S130	1-571-977-11	SWITCH, TACTIL(REW)	1/4W
R109	1-249-428-11	CARBON	8.2K	S131	1-571-977-11	SWITCH, TACTIL(FF)	1/4W F
R110	1-216-073-00	METAL CHIP	10K	S132	1-571-977-11	SWITCH, TACTIL(PAUSE)	1/10W
R111	1-216-081-00	METAL CHIP	22K	S141	1-572-907-11	SWITCH, SLIDE(TAPE SELECT)	1/10W
R114	1-216-057-00	METAL CHIP	2.2K	S142	1-692-820-11	SWITCH, SLIDE(COMMAND MODE)	1/10W
R115	1-216-057-00	METAL CHIP	2.2K			< VIBRATOR >	
R116	1-216-061-00	METAL CHIP	3.3K	X001	1-579-463-11	VIBRATOR, CRYSTAL 32.768KHZ	1/10W
R117	1-216-065-00	METAL CHIP	4.7K	X002	1-579-126-11	VIBRATOR, CERAMIC 12MHZ	1/10W
R118	1-216-057-00	METAL CHIP	2.2K				
R119	1-216-057-00	METAL CHIP	2.2K				
R121	1-249-421-11	CARBON	2.2K				
R122	1-249-421-11	CARBON	2.2K				
R123	1-249-432-11	CARBON	18K				
R124	1-216-081-00	METAL CHIP	22K				
R130	1-249-421-11	CARBON	2.2K				
R131	1-216-057-00	METAL CHIP	2.2K				
R132	1-247-843-11	CARBON	3.3K				
R141	1-216-057-00	METAL CHIP	2.2K				
R142	1-216-057-00	METAL CHIP	2.2K				
R143	1-216-061-00	METAL CHIP	3.3K				
R151	1-249-409-11	CARBON	220				
R152	1-249-411-11	CARBON	330				
R153	1-249-409-11	CARBON	220				
R154	1-249-409-11	CARBON	220				
R155	1-216-031-00	METAL CHIP	180				
R157	1-216-178-00	METAL GLAZE	150				
R158	1-249-407-11	CARBON	150				
R159	1-216-033-00	METAL CHIP	220				
R160	1-216-033-00	METAL CHIP	220				
R161	1-216-037-00	METAL CHIP	330				
R162	1-216-033-00	METAL CHIP	220				
R163	1-216-033-00	METAL CHIP	220				
R164	1-216-031-00	METAL CHIP	180				
R165	1-216-182-00	METAL GLAZE	220				
R166	1-216-182-00	METAL GLAZE	220				
R167	1-216-033-00	METAL CHIP	220				
R170	1-216-180-00	METAL GLAZE	180				
		< SWITCH >					
S101	1-571-977-11	SWITCH, TACTIL(DUBBING)		C001	1-163-235-11	CERAMIC CHIP 22PF	5%
S102	1-571-977-11	SWITCH, TACTIL(VHS TO Video 8)		C002	1-164-346-11	CERAMIC CHIP 1uF	5%
S103	1-571-977-11	SWITCH, TACTIL(Video 8 TO VHS)		C003	1-163-229-11	CERAMIC CHIP 12PF	5%
S106	1-571-977-11	SWITCH, TACTIL(VHS EJECT)		C004	1-163-229-11	CERAMIC CHIP 12PF	5%
S107	1-571-977-11	SWITCH, TACTIL(VHS)		C005	1-126-924-11	ELECT	20%
S108	1-571-977-11	SWITCH, TACTIL(PROGRAM +)		C006	1-126-916-11	ELECT	20%
S109	1-571-977-11	SWITCH, TACTIL(PROGRAM -)		C007	1-164-346-11	CERAMIC CHIP 1uF	16V
S111	1-571-977-11	SWITCH, TACTIL(REC)		C008	1-164-346-11	CERAMIC CHIP 1uF	16V
S112	1-571-977-11	SWITCH, TACTIL(TIMER REC)		C014	1-163-017-00	CERAMIC CHIP 0.0047uF	5%
S114	1-571-977-11	SWITCH, TACTIL(QUICK TIMER)		C023	1-164-346-11	CERAMIC CHIP 1uF	16V
				C028	1-163-229-11	CERAMIC CHIP 12PF	5%
				C029	1-163-229-11	CERAMIC CHIP 12PF	5%
				C030	1-163-137-00	CERAMIC CHIP 680PF	5%
				C036	1-164-232-11	CERAMIC CHIP 0.01uF	5%
				C037	1-163-012-00	CERAMIC CHIP 0.0018uF	5%
				C040	1-163-011-11	CERAMIC CHIP 0.0015uF	10%
				C043	1-126-933-11	ELECT	10V
				C045	1-163-239-11	CERAMIC CHIP 33PF	5%
				C051	1-164-232-11	CERAMIC CHIP 0.01uF	5%
				C053	1-163-009-11	CERAMIC CHIP 0.001uF	10%
				C056	1-163-145-00	CERAMIC CHIP 0.0015uF	5%
				C058	1-164-343-11	CERAMIC CHIP 0.056uF	10%
				C059	1-216-295-00	METAL CHIP 0	5%
				C061	1-164-489-11	CERAMIC CHIP 0.22uF	10%
				C064	1-104-760-11	CERAMIC CHIP 0.047uF	10%
				C065	1-163-037-11	CERAMIC CHIP 0.022uF	10%
				C066	1-163-011-11	CERAMIC CHIP 0.0015uF	10%
				C067	1-163-011-11	CERAMIC CHIP 0.0015uF	10%
				C068	1-164-489-11	CERAMIC CHIP 0.22uF	10%
				C069	1-164-232-11	CERAMIC CHIP 0.01uF	50V

* A-7066-976-A MH-18 (UX) BOARD, COMPLETE
 ***** (Ref.No.: 2,000 Series)

* 3-741-933-01 HEAT SINK
 * 3-967-895-01 HEAT SINK, CAP
 * 7-682-948-01 SCREW +PSW 3X8
 * 7-685-645-79 SCREW +BVTP 3X6 TYPE2 TT(B)
 * 7-685-646-79 SCREW +BVTP 3X8 TYPE2 IT-3

< CAPACITOR >

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C071	1-163-037-11	CERAMIC CHIP	10%	C233	1-126-962-11	ELECT	25V
C073	1-162-587-11	CERAMIC CHIP	10%	C234	1-126-961-11	ELECT	25V
C075	1-164-232-11	CERAMIC CHIP	50V	C235	1-115-870-11	ELECT	20%
C077	1-164-004-11	CERAMIC CHIP	10%	C236	1-164-232-11	CERAMIC CHIP	0.01uF
C078	1-164-489-11	CERAMIC CHIP	10%	C237	1-126-961-11	ELECT	2.2uF
C083	1-164-232-11	CERAMIC CHIP	50V	C238	1-126-967-11	ELECT	47uF
C084	1-164-232-11	CERAMIC CHIP	50V	C239	1-115-869-11	ELECT	0.33uF
C085	1-163-009-11	CERAMIC CHIP	10%	C240	1-163-017-00	CERAMIC CHIP	0.0047uF
C086	1-163-037-11	CERAMIC CHIP	10%	C241	1-164-232-11	CERAMIC CHIP	0.01uF
C087	1-163-009-11	CERAMIC CHIP	10%	C242	1-164-232-11	CERAMIC CHIP	0.01uF
C088	1-163-037-11	CERAMIC CHIP	10%	C243	1-164-232-11	CERAMIC CHIP	0.01uF
C089	1-163-037-11	CERAMIC CHIP	10%	C244	1-164-232-11	CERAMIC CHIP	0.01uF
C090	1-104-760-11	CERAMIC CHIP	10%	C245	1-164-232-11	CERAMIC CHIP	0.01uF
C091	1-164-232-11	CERAMIC CHIP	50V	C246	1-126-961-11	ELECT	2.2uF
C092	1-164-489-11	CERAMIC CHIP	10%	C260	1-126-960-11	ELECT	1uF
C093	1-164-489-11	CERAMIC CHIP	10%	C261	1-126-960-11	ELECT	1uF
C094	1-163-009-11	CERAMIC CHIP	10%	C262	1-163-121-00	CERAMIC CHIP	150PF
C095	1-163-038-00	CERAMIC CHIP	25V	C263	1-128-551-11	ELECT	22uF
C096	1-126-933-11	ELECT	10uF	C301	1-126-967-11	ELECT	47uF
C097	1-126-964-11	ELECT	10uF	C302	1-164-232-11	CERAMIC CHIP	0.01uF
C098	1-126-964-11	ELECT	10uF	C303	1-126-967-11	ELECT	47uF
C099	1-164-232-11	CERAMIC CHIP	50V	C304	1-164-232-11	CERAMIC CHIP	0.01uF
C101	1-164-232-11	CERAMIC CHIP	50V	C305	1-164-232-11	CERAMIC CHIP	0.01uF
C102	1-164-232-11	CERAMIC CHIP	50V	C307	1-126-967-11	ELECT	47uF
C103	1-164-232-11	CERAMIC CHIP	50V	C314	1-163-251-11	CERAMIC CHIP	100PF
C104	1-164-232-11	CERAMIC CHIP	50V	C315	1-164-232-11	CERAMIC CHIP	0.01uF
C105	1-163-038-00	CERAMIC CHIP	25V	C336	1-164-232-11	CERAMIC CHIP	0.01uF
C106	1-163-038-00	CERAMIC CHIP	25V	C387	1-126-961-11	ELECT	2.2uF
C107	1-128-551-11	ELECT	20%	C388	1-128-551-11	ELECT	22uF
C108	1-164-232-11	CERAMIC CHIP	50V	C389	1-163-009-11	CERAMIC CHIP	0.001uF
C109	1-126-925-11	ELECT	470uF	C396	1-163-017-00	CERAMIC CHIP	0.0047uF
C110	1-124-584-00	ELECT	100uF	C397	1-164-161-11	CERAMIC CHIP	0.0022uF
C201	1-126-933-11	ELECT	100uF	C398	1-164-232-11	CERAMIC CHIP	0.01uF
C202	1-126-961-11	ELECT	2.2uF	C399	1-126-967-11	ELECT	47uF
C203	1-126-961-11	ELECT	2.2uF	C410	1-164-004-11	CERAMIC CHIP	0.1uF
C204	1-164-232-11	CERAMIC CHIP	50V	C501	1-126-933-11	ELECT	100uF
C205	1-164-232-11	CERAMIC CHIP	50V	C502	1-164-232-11	CERAMIC CHIP	0.01uF
C206	1-126-966-11	ELECT	33uF	C503	1-163-235-11	CERAMIC CHIP	22PF
C207	1-126-966-11	ELECT	33uF	C504	1-163-237-11	CERAMIC CHIP	27PF
C208	1-164-232-11	CERAMIC CHIP	0.01uF	C505	1-163-231-11	CERAMIC CHIP	15PF
C209	1-126-960-11	ELECT	1uF	C506	1-163-227-11	CERAMIC CHIP	10PF
C211	1-126-933-11	ELECT	100uF	C509	1-163-237-11	CERAMIC CHIP	27PF
C212	1-126-963-11	ELECT	4.7uF	C510	1-163-231-11	CERAMIC CHIP	15PF
C213	1-126-960-11	ELECT	1uF	C511	1-163-229-11	CERAMIC CHIP	12PF
C215	1-163-017-00	CERAMIC CHIP	0.0047uF	C512	1-163-127-00	CERAMIC CHIP	270PF
C217	1-115-869-11	ELECT	0.33uF	C513	1-127-515-11	ELECT(SOLID)	47uF
C219	1-126-967-11	ELECT	47uF	C514	1-164-232-11	CERAMIC CHIP	0.01uF
C220	1-126-961-11	ELECT	2.2uF	C515	1-163-136-00	CERAMIC CHIP	620PF
C221	1-164-232-11	CERAMIC CHIP	0.01uF	C516	1-163-099-00	CERAMIC CHIP	18PF
C222	1-115-870-11	ELECT	0.47uF	C517	1-164-232-11	CERAMIC CHIP	0.01uF
C223	1-126-961-11	ELECT	2.2uF	C518	1-163-038-00	CERAMIC CHIP	0.1uF
C224	1-126-962-11	ELECT	3.3uF	C519	1-164-232-11	CERAMIC CHIP	0.01uF
C225	1-128-551-11	ELECT	22uF	C520	1-164-232-11	CERAMIC CHIP	0.01uF
C226	1-164-161-11	CERAMIC CHIP	0.0022uF	C522	1-163-227-11	CERAMIC CHIP	10PF
C227	1-163-009-11	CERAMIC CHIP	0.001uF	C523	1-164-232-11	CERAMIC CHIP	0.01uF
C228	1-126-964-11	ELECT	10uF	C524	1-164-232-11	CERAMIC CHIP	0.01uF
C229	1-164-161-11	CERAMIC CHIP	0.0022uF	C525	1-164-232-11	CERAMIC CHIP	0.01uF
C230	1-164-232-11	CERAMIC CHIP	0.01uF	C526	1-164-232-11	CERAMIC CHIP	0.01uF
C231	1-163-131-00	CERAMIC CHIP	390PF	C527	1-163-227-11	CERAMIC CHIP	10PF
C232	1-128-551-11	ELECT	22uF	C528	1-163-251-11	CERAMIC CHIP	100PF

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C529	1-163-243-11	CERAMIC CHIP	47PF	C598	1-126-964-11	ELECT	10uF
C530	1-163-251-11	CERAMIC CHIP	100PF	C599	1-163-038-00	CERAMIC CHIP	0.1uF
C531	1-163-138-00	CERAMIC CHIP	750PF	C600	1-164-232-11	CERAMIC CHIP	0.01uF
C533	1-163-038-00	CERAMIC CHIP	0.1uF	C602	1-163-038-00	CERAMIC CHIP	0.1uF
C534	1-163-257-11	CERAMIC CHIP	180PF	C603	1-163-121-00	CERAMIC CHIP	150PF
C535	1-164-232-11	CERAMIC CHIP	0.01uF	C605	1-163-259-91	CERAMIC CHIP	220PF
C536	1-163-248-11	CERAMIC CHIP	75PF	C606	1-164-005-11	CERAMIC CHIP	0.47uF
C537	1-163-113-00	CERAMIC CHIP	68PF	C607	1-126-964-11	ELECT	10uF
C538	1-164-232-11	CERAMIC CHIP	0.01uF	C608	1-126-960-11	ELECT	1uF
C539	1-163-243-11	CERAMIC CHIP	47PF	C609	1-126-157-11	ELECT	10uF
C540	1-164-232-11	CERAMIC CHIP	0.01uF	C610	1-164-232-11	CERAMIC CHIP	0.01uF
C541	1-163-102-00	CERAMIC CHIP	24PF	C611	1-126-157-11	ELECT	10uF
C542	1-163-113-00	CERAMIC CHIP	68PF	C612	1-126-157-11	ELECT	10uF
C543	1-163-243-11	CERAMIC CHIP	47PF	C613	1-164-004-11	CERAMIC CHIP	0.1uF
C544	1-163-112-00	CERAMIC CHIP	62PF	C614	1-163-121-00	CERAMIC CHIP	150PF
C545	1-164-232-11	CERAMIC CHIP	0.01uF	C615	1-163-263-11	CERAMIC CHIP	330PF
C546	1-163-118-00	CERAMIC CHIP	110PF	C616	1-126-154-11	ELECT	47uF
C547	1-163-241-11	CERAMIC CHIP	39PF	C617	1-163-263-11	CERAMIC CHIP	330PF
C548	1-163-239-11	CERAMIC CHIP	33PF	C618	1-163-096-00	CERAMIC CHIP	13PF
C549	1-163-014-00	CERAMIC CHIP	0.0027uF	C619	1-126-967-11	ELECT	47uF
C551	1-164-232-11	CERAMIC CHIP	0.01uF	C620	1-163-237-11	CERAMIC CHIP	27PF
C552	1-164-232-11	CERAMIC CHIP	0.01uF	C621	1-163-038-00	CERAMIC CHIP	0.1uF
C553	1-126-964-11	ELECT	10uF	C622	1-128-551-11	ELECT	22uF
C554	1-164-232-11	CERAMIC CHIP	0.01uF	C623	1-164-232-11	CERAMIC CHIP	0.01uF
C559	1-164-232-11	CERAMIC CHIP	0.01uF	C624	1-126-153-11	ELECT	22uF
C560	1-164-232-11	CERAMIC CHIP	0.01uF	C625	1-163-235-11	CERAMIC CHIP	22PF
C561	1-164-232-11	CERAMIC CHIP	0.01uF	C626	1-126-960-11	ELECT	1uF
C562	1-163-099-00	CERAMIC CHIP	18PF	C627	1-126-962-11	ELECT	3.3uF
C563	1-163-224-11	CERAMIC CHIP	7PF	C628	1-126-962-11	ELECT	3.3uF
C565	1-126-964-11	ELECT	10uF	C629	1-163-227-11	CERAMIC CHIP	10PF
C566	1-126-964-11	ELECT	10uF	C630	1-126-964-11	ELECT	10uF
C567	1-164-232-11	CERAMIC CHIP	0.01uF	C631	1-163-131-00	CERAMIC CHIP	390PF
C568	1-163-231-11	CERAMIC CHIP	15PF	C632	1-164-232-11	CERAMIC CHIP	0.01uF
C569	1-163-091-00	CERAMIC CHIP	8PF	C633	1-164-232-11	CERAMIC CHIP	0.01uF
C570	1-164-004-11	CERAMIC CHIP	0.1uF	C634	1-163-120-00	CERAMIC CHIP	130PF
C571	1-164-004-11	CERAMIC CHIP	0.1uF	C635	1-164-232-11	CERAMIC CHIP	0.01uF
C572	1-164-222-11	CERAMIC CHIP	0.22uF	C636	1-163-038-00	CERAMIC CHIP	0.1uF
C573	1-164-004-11	CERAMIC CHIP	0.1uF	C637	1-163-243-11	CERAMIC CHIP	47PF
C574	1-164-232-11	CERAMIC CHIP	0.01uF	C638	1-163-113-00	CERAMIC CHIP	68PF
C575	1-164-232-11	CERAMIC CHIP	0.01uF	C639	1-126-962-11	ELECT	3.3uF
C576	1-163-235-11	CERAMIC CHIP	22PF	C641	1-163-243-11	CERAMIC CHIP	47PF
C577	1-163-251-11	CERAMIC CHIP	100PF	C642	1-164-232-11	CERAMIC CHIP	0.01uF
C578	1-126-967-11	ELECT	47uF	C645	1-164-232-11	CERAMIC CHIP	0.01uF
C579	1-126-967-11	ELECT	47uF	C646	1-163-251-11	CERAMIC CHIP	100PF
C580	1-126-963-11	ELECT	4.7uF	C647	1-163-121-00	CERAMIC CHIP	150PF
C581	1-163-019-00	CERAMIC CHIP	0.0068uF	C648	1-163-249-11	CERAMIC CHIP	82PF
C582	1-126-960-11	ELECT	1uF	C649	1-128-551-11	ELECT	22uF
C583	1-163-037-11	CERAMIC CHIP	0.022uF	C650	1-126-967-11	ELECT	47uF
C584	1-124-254-00	ELECT	0.68uF	C652	1-163-251-11	CERAMIC CHIP	100PF
C585	1-164-232-11	CERAMIC CHIP	0.01uF	C653	1-163-237-11	CERAMIC CHIP	27PF
C586	1-126-960-11	ELECT	1uF	C654	1-126-960-11	ELECT	1uF
C587	1-126-157-11	ELECT	10uF	C655	1-163-251-11	CERAMIC CHIP	100PF
C590	1-164-004-11	CERAMIC CHIP	0.1uF	C656	1-126-962-11	ELECT	3.3uF
C591	1-164-004-11	CERAMIC CHIP	0.1uF	C657	1-126-962-11	ELECT	3.3uF
C592	1-128-551-11	ELECT	22uF	C659	1-164-232-11	CERAMIC CHIP	0.01uF
C593	1-128-551-11	ELECT	22uF	C660	1-164-232-11	CERAMIC CHIP	0.01uF
C594	1-164-232-11	CERAMIC CHIP	0.01uF	C662	1-164-232-11	CERAMIC CHIP	0.01uF
C595	1-126-964-11	ELECT	10uF	C663	1-163-038-00	CERAMIC CHIP	0.1uF
C596	1-126-962-11	ELECT	3.3uF	C665	1-163-038-00	CERAMIC CHIP	0.1uF
C597	1-164-232-11	CERAMIC CHIP	0.01uF	C666	1-126-964-11	ELECT	10uF

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C667	1-126-962-11	ELECT	3.3uF 20%	C843	1-163-037-11	CERAMIC CHIP	0.022uF 10%
C668	1-164-232-11	CERAMIC CHIP	0.01uF 50V	C844	1-163-809-11	CERAMIC CHIP	0.047uF 10%
C669	1-128-551-11	ELECT	22uF 20%	C845	1-163-809-11	CERAMIC CHIP	0.047uF 10%
C670	1-128-551-11	ELECT	22uF 20%	C846	1-164-904-11	CERAMIC CHIP	0.1uF 10%
C671	1-164-232-11	CERAMIC CHIP	0.01uF 50V	C847	1-124-589-11	ELECT	47uF 20%
C672	1-163-038-00	CERAMIC CHIP	0.1uF 25V	C848	1-104-329-11	CERAMIC CHIP	0.1uF 10%
C674	1-163-239-11	CERAMIC CHIP	33PF 50V	C849	1-104-329-11	CERAMIC CHIP	0.1uF 10%
C675	1-163-239-11	CERAMIC CHIP	33PF 50V	C850	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C676	1-164-232-11	CERAMIC CHIP	0.01uF 50V	C851	1-126-967-11	ELECT	47uF 16V
C678	1-126-935-11	ELECT	470uF 6.3V	C852	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C679	1-164-232-11	CERAMIC CHIP	0.01uF 50V	C854	1-163-235-11	CERAMIC CHIP	22PF 5%
C681	1-163-253-11	CERAMIC CHIP	120PF 50V	C900	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C682	1-126-964-11	ELECT	10uF 50V	C901	1-163-235-11	CERAMIC CHIP	22PF 50V
C683	1-163-031-11	CERAMIC CHIP	0.01uF 25V	C902	1-163-235-11	CERAMIC CHIP	22PF 5%
C685	1-164-004-11	CERAMIC CHIP	0.1uF 25V	C903	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C687	1-164-232-11	CERAMIC CHIP	0.01uF 50V	C905	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C688	1-164-232-11	CERAMIC CHIP	0.01uF 50V	C907	1-126-924-11	ELECT	330uF 6.3V
C689	1-163-031-11	CERAMIC CHIP	0.01uF 50V	C908	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C690	1-163-120-00	CERAMIC CHIP	130PF 50V	C909	1-163-137-00	CERAMIC CHIP	680PF 5%
C691	1-126-967-11	ELECT	47uF 10V	C911	1-163-124-00	CERAMIC CHIP	200PF 5%
C692	1-164-232-11	CERAMIC CHIP	0.01uF 50V	C912	1-163-007-11	CERAMIC CHIP	680PF 10%
C693	1-126-964-11	ELECT	10uF 20%	< CONNECTOR >			
C694	1-163-237-11	CERAMIC CHIP	27PF 50V	CN001	1-506-477-11	PIN, CONNECTOR	12P
C801	1-164-232-11	CERAMIC CHIP	0.01uF 50V	CN002	1-506-467-11	PIN, CONNECTOR	2P
C802	1-126-967-11	ELECT	47uF 10V	CN003	1-506-470-11	PIN, CONNECTOR	5P
C803	1-126-967-11	ELECT	47uF 16V	CN004	1-695-338-11	PIN, CONNECTOR (PC BOARD)	15P
C804	1-164-004-11	CERAMIC CHIP	0.1uF 25V	CN005	1-695-342-31	PIN, CONNECTOR (PC BOARD)	19P
C805	1-164-004-11	CERAMIC CHIP	0.1uF 25V	CN006	1-778-772-11	CONNECTOR, FCC/FPC	7P
C806	1-164-004-11	CERAMIC CHIP	0.1uF 25V	CN101	1-774-768-11	CONNECTOR, FCC/FPC	17P
C807	1-107-823-11	CERAMIC CHIP	0.47uF 16V	CN102	1-506-473-11	PIN, CONNECTOR	8P
C808	1-163-809-11	CERAMIC CHIP	0.047uF 25V	CN501	1-695-352-11	PIN, CONNECTOR (PC BOARD)	29P
C809	1-163-017-00	CERAMIC CHIP	0.0047uF 5%	< DIODE >			
C810	1-164-004-11	CERAMIC CHIP	0.1uF 25V	D002	8-719-200-02	DIODE	10E2
C811	1-126-960-11	ELECT	1uF 50V	D004	8-719-801-78	DIODE	1SS184
C812	1-164-232-11	CERAMIC CHIP	0.01uF 50V	D005	8-719-801-78	DIODE	1SS184
C813	1-164-232-11	CERAMIC CHIP	0.01uF 50V	D201	8-719-404-49	DIODE	MA111
C814	1-164-004-11	CERAMIC CHIP	0.1uF 10%	D202	8-719-404-49	DIODE	MA111
C815	1-164-004-11	CERAMIC CHIP	0.1uF 10%	D301	8-719-404-49	DIODE	MA111
C816	1-164-004-11	CERAMIC CHIP	0.1uF 10%	D302	8-719-801-78	DIODE	1SS184
C818	1-164-004-11	CERAMIC CHIP	0.1uF 25V	D502	8-719-801-78	DIODE	1SS184
C819	1-164-004-11	CERAMIC CHIP	0.1uF 25V	D801	8-719-210-33	DIODE	EC10DS2
C820	1-164-004-11	CERAMIC CHIP	0.1uF 10%	D802	8-719-106-44	DIODE	RD9.1M-B2
C821	1-163-017-00	CERAMIC CHIP	0.0047uF 5%	< FILTER >			
C822	1-163-017-00	CERAMIC CHIP	0.0047uF 5%	FL501	1-415-764-21	DELAY LINE, LC	
C823	1-163-017-00	CERAMIC CHIP	0.0047uF 5%	FL502	1-236-774-11	FILTER, LOW PASS (Y)	
C824	1-124-589-11	ELECT	47uF 16V	FL503	1-236-848-21	FILTER, LOW PASS	
C825	1-163-017-00	CERAMIC CHIP	0.0047uF 5%	FL504	1-239-010-11	FILTER, LOW PASS (CCD.PAL-Y)	
C826	1-164-232-11	CERAMIC CHIP	0.01uF 50V	< IC >			
C827	1-164-232-11	CERAMIC CHIP	0.01uF 50V	IC002	8-752-883-56	IC	CXP87140-071Q
C830	1-163-037-11	CERAMIC CHIP	0.022uF 10%	IC008	8-759-070-96	IC	CXA1481AQ-E2
C834	1-126-967-11	ELECT	47uF 10V	IC009	8-759-510-73	IC	BA10393F-E2
C835	1-126-967-11	ELECT	47uF 10V	IC010	8-759-510-71	IC	BA10358F-E2
C836	1-126-967-11	ELECT	47uF 10V	IC202	8-759-510-78	IC	BA10393F-E2
C837	1-164-346-11	CERAMIC CHIP	1uF 16V				
C838	1-163-017-00	CERAMIC CHIP	0.0047uF 50V				
C839	1-163-019-00	CERAMIC CHIP	0.0068uF 50V				
C840	1-163-037-11	CERAMIC CHIP	0.022uF 10%				
C841	1-163-017-00	CERAMIC CHIP	0.0047uF 50V				
C842	1-163-019-00	CERAMIC CHIP	0.0068uF 50V				

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
IC203	8-759-290-72	IC AN3988NFBP		L535	1-410-462-11	INDUCTOR	2.2uH
IC302	8-759-009-06	IC MC14052BF		L536	1-410-476-11	INDUCTOR	33uH
IC501	8-759-513-71	IC P005RF21		L537	1-410-470-11	INDUCTOR	10uH
IC502	8-752-058-03	IC CXA1509AQ-T6		L539	1-410-478-11	INDUCTOR	47uH
IC503	8-759-925-74	IC SA74HC04ANS		L540	1-410-476-11	INDUCTOR	33uH
IC505	8-752-071-10	IC CXA1810AQ		L542	1-410-476-11	INDUCTOR	33uH
IC506	8-752-333-24	IC CXL1508M		L543	1-412-955-11	INDUCTOR	22uH
IC507	8-752-333-24	IC CXL1508M		L544	1-410-478-11	INDUCTOR	33uH
IC508	8-759-084-76	IC MM1111XFF		L545	1-412-951-11	INDUCTOR	10uH
IC509	8-759-009-19	IC MC14081BF		L801	1-424-522-21	COIL, CHOKE	10uH
IC510	8-759-094-76	IC MM1111XFF		L802	1-410-478-11	INDUCTOR	47uH
IC511	8-759-182-84	IC P005SZ5U				< IC LINK >	
IC801	8-759-327-67	IC LB1950V-TLM		Δ PS804	1-532-685-00	LINK, IC	
IC802	8-759-295-18	IC LB1807N-S				< TRANSISTOR >	
IC803	8-759-700-07	IC NJM2903M					
IC804	8-759-658-50	IC BA10324AF-E2					
IC805	8-759-701-39	IC NJM3404AM					
IC806	8-759-170-92	IC P009SZ1T					
IC807	8-759-913-06	IC BA8209					
		< COIL >					
L001	1-410-482-31	INDUCTOR	100uH	Q002	8-729-421-19	TRANSISTOR	UN2213
L004	1-410-462-11	INDUCTOR	2.2uH	Q005	8-729-010-25	TRANSISTOR	MSD601-RT1
L006	1-412-446-31	INDUCTOR	3.3mH	Q006	8-729-010-25	TRANSISTOR	MSD601-RT1
L007	1-408-621-31	INDUCTOR	330uH	Q007	8-729-421-19	TRANSISTOR	UN2213
L008	1-410-087-31	INDUCTOR	10mH	Q008	8-729-421-19	TRANSISTOR	UN2213
L009	1-410-482-31	INDUCTOR	100uH	Q010	8-729-010-05	TRANSISTOR	MSB709-RT1
L010	1-408-425-00	INDUCTOR	220uH	Q011	8-729-010-25	TRANSISTOR	MSD601-RT1
L101	1-412-951-11	INDUCTOR	10uH	Q012	8-729-421-19	TRANSISTOR	UN2213
L102	1-414-402-11	INDUCTOR	47uH	Q013	8-729-010-25	TRANSISTOR	MSD601-RT1
L301	1-410-462-11	INDUCTOR	2.2uH	Q014	8-729-010-25	TRANSISTOR	MSD601-RT1
L501	1-410-470-11	INDUCTOR	10uH	Q015	8-729-424-08	TRANSISTOR	UN2111
L502	1-410-468-11	INDUCTOR	6.8uH	Q016	8-729-010-25	TRANSISTOR	MSD601-RT1
L503	1-410-476-11	INDUCTOR	33uH	Q017	8-729-421-19	TRANSISTOR	UN2213
L504	1-408-413-00	INDUCTOR	22uH	Q018	8-729-424-08	TRANSISTOR	UN2111
L505	1-408-424-00	INDUCTOR	180uH	Q101	8-729-230-49	TRANSISTOR	25C2712-YG
L506	1-408-413-00	INDUCTOR	22uH	Q102	8-729-424-18	TRANSISTOR	UN2113
L507	1-408-413-00	INDUCTOR	22uH	Q103	8-729-424-18	TRANSISTOR	UN2113
L508	1-408-411-00	INDUCTOR	15uH	Q104	8-729-424-18	TRANSISTOR	UN2113
L509	1-408-411-00	INDUCTOR	15uH	Q106	8-729-010-29	TRANSISTOR	MSD601-RST1
L510	1-408-429-00	INDUCTOR	470uH	Q107	8-729-402-19	TRANSISTOR	XN6501
L511	1-408-413-00	INDUCTOR	22uH	Q201	8-729-424-18	TRANSISTOR	UN2113
L512	1-408-413-00	INDUCTOR	22uH	Q202	8-729-028-70	TRANSISTOR	UN2225T-(TX)
L513	1-410-466-41	INDUCTOR	4.7uH	Q203	8-729-028-70	TRANSISTOR	UN2225T-(TX)
L514	1-408-422-00	INDUCTOR	120uH	Q207	8-729-421-19	TRANSISTOR	UN2213
L515	1-410-482-31	INDUCTOR	100uH	Q208	8-729-010-05	TRANSISTOR	MSB709-RT1
L516	1-410-466-41	INDUCTOR	4.7uH	Q209	8-729-010-05	TRANSISTOR	MSB709-RT1
L517	1-408-429-00	INDUCTOR	470uH	Q210	8-729-424-18	TRANSISTOR	UN2113
L518	1-408-411-00	INDUCTOR	15uH	Q211	8-729-424-08	TRANSISTOR	UN2111
L522	1-408-413-00	INDUCTOR	22uH	Q220	8-729-010-25	TRANSISTOR	MSD601-RT1
L523	1-410-476-11	INDUCTOR	33uH	Q221	8-729-421-19	TRANSISTOR	UN2213
L524	1-408-413-00	INDUCTOR	22uH	Q222	8-729-421-19	TRANSISTOR	UN2213
L526	1-410-482-31	INDUCTOR	100uH	Q223	8-729-421-19	TRANSISTOR	UN2213
L527	1-410-476-11	INDUCTOR	33uH	Q224	8-729-424-45	TRANSISTOR	UN211D-TX
L528	1-410-478-11	INDUCTOR	47uH	Q225	8-729-900-51	TRANSISTOR	DTA114TK
L529	1-410-476-11	INDUCTOR	33uH	Q226	8-729-424-18	TRANSISTOR	UN2113
L530	1-408-422-00	INDUCTOR	120uH	Q227	8-729-421-19	TRANSISTOR	UN2213
L531	1-408-406-00	INDUCTOR	5.6uH	Q228	8-729-421-19	TRANSISTOR	UN2213
L532	1-410-470-11	INDUCTOR	10uH	Q301	8-729-010-05	TRANSISTOR	MSB709-RT1
L533	1-410-476-11	INDUCTOR	33uH	Q302	8-729-010-05	TRANSISTOR	MSB709-RT1
L534	1-410-468-11	INDUCTOR	6.8uH	Q303	8-729-402-19	TRANSISTOR	XN6501

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
Q305	8-729-402-19	TRANSISTOR XN6501		Q562	8-729-424-18	TRANSISTOR UN2113	
Q327	8-729-010-25	TRANSISTOR MSD601-RT1		Q563	8-729-010-25	TRANSISTOR MSD601-RT1	
Q328	8-729-010-05	TRANSISTOR MSB709-RT1		Q564	8-729-010-05	TRANSISTOR MSB709-RT1	
Q410	8-729-421-19	TRANSISTOR UN2213		Q565	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q411	8-729-424-76	TRANSISTOR UN2210-TX		Q567	8-729-010-25	TRANSISTOR MSD601-RT1	
Q501	8-729-010-25	TRANSISTOR MSD601-RT1		Q569	8-729-010-25	TRANSISTOR MSD601-RT1	
Q502	8-729-230-49	TRANSISTOR 2SC2712-YG		Q570	8-729-424-18	TRANSISTOR UN2113	
Q503	8-729-424-32	TRANSISTOR UN2117		Q571	8-729-421-19	TRANSISTOR UN2213	
Q504	8-729-230-49	TRANSISTOR 2SC2712-YG		Q572	8-729-010-25	TRANSISTOR MSD601-RT1	
Q505	8-729-421-19	TRANSISTOR UN2213		Q573	8-729-010-05	TRANSISTOR MSB709-RT1	
Q506	8-729-421-90	TRANSISTOR XN4113		Q574	8-729-010-05	TRANSISTOR MSB709-RT1	
Q507	8-729-010-05	TRANSISTOR MSB709-RT1		Q575	8-729-010-05	TRANSISTOR MSB709-RT1	
Q508	8-729-010-25	TRANSISTOR MSD601-RT1		Q576	8-729-010-05	TRANSISTOR MSB709-RT1	
Q509	8-729-424-70	TRANSISTOR UN2217		Q577	8-729-010-25	TRANSISTOR MSD601-RT1	
Q511	8-729-420-12	TRANSISTOR XN4213		Q578	8-729-010-25	TRANSISTOR MSD601-RT1	
Q512	8-729-230-49	TRANSISTOR 2SC2712-YG		Q579	8-729-010-25	TRANSISTOR MSD601-RT1	
Q513	8-729-010-25	TRANSISTOR MSD601-RT1		Q801	8-729-231-60	TRANSISTOR 2SD1406-YGR	
Q514	8-729-010-25	TRANSISTOR MSD601-RT1				< RESISTOR >	
Q516	8-729-420-12	TRANSISTOR XN4213		R002	1-216-061-00	METAL CHIP 3.3K	5% 1/10W
Q517	8-729-230-49	TRANSISTOR 2SC2712-YG		R003	1-216-085-00	METAL CHIP 33K	5% 1/10W
Q518	8-729-010-05	TRANSISTOR MSB709-RT1		R004	1-216-093-00	METAL CHIP 68K	5% 1/10W
Q519	8-729-010-25	TRANSISTOR MSD601-RT1		R005	1-216-295-00	METAL CHIP 0	5% 1/10W
Q520	8-729-010-25	TRANSISTOR MSD601-RT1		R006	1-216-085-00	METAL CHIP 33K	5% 1/10W
Q521	8-729-421-19	TRANSISTOR UN2213		R007	1-216-093-00	METAL CHIP 68K	5% 1/10W
Q522	8-729-421-19	TRANSISTOR UN2213		R008	1-216-073-00	METAL CHIP 10K	5% 1/10W
Q523	8-729-421-19	TRANSISTOR UN2213		R009	1-216-041-00	METAL CHIP 470	5% 1/10W
Q524	8-729-420-10	TRANSISTOR XN4115		R010	1-216-049-00	METAL CHIP 1K	5% 1/10W
Q525	8-729-420-12	TRANSISTOR XN4213		R011	1-216-049-00	METAL CHIP 1K	5% 1/10W
Q526	8-729-420-10	TRANSISTOR XN4115		R012	1-216-049-00	METAL CHIP 1K	5% 1/10W
Q527	8-729-422-54	TRANSISTOR XN4215		R013	1-216-295-00	METAL CHIP 0	5% 1/10W
Q528	8-729-420-12	TRANSISTOR XN4213		R014	1-216-295-00	METAL CHIP 0	5% 1/10W
Q530	8-729-010-25	TRANSISTOR MSD601-RT1		R015	1-216-295-00	METAL CHIP 0	5% 1/10W
Q532	8-729-421-19	TRANSISTOR UN2213		R016	1-216-295-00	METAL CHIP 0	5% 1/10W
Q533	8-729-010-25	TRANSISTOR MSD601-RT1		R017	1-216-049-00	METAL CHIP 1K	5% 1/10W
Q534	8-729-422-54	TRANSISTOR XN4215		R018	1-216-049-00	METAL CHIP 1K	5% 1/10W
Q535	8-729-010-25	TRANSISTOR MSD601-RT1		R019	1-216-065-00	METAL CHIP 4.7K	5% 1/10W
Q536	8-729-010-05	TRANSISTOR MSB709-RT1		R020	1-216-049-00	METAL CHIP 1K	5% 1/10W
Q537	8-729-424-18	TRANSISTOR UN2113		R021	1-216-049-00	METAL CHIP 1K	5% 1/10W
Q538	8-729-420-12	TRANSISTOR XN4213		R022	1-216-089-91	METAL GLAZE 47K	5% 1/10W
Q539	8-729-010-05	TRANSISTOR MSB709-RT1		R023	1-216-073-00	METAL CHIP 10K	5% 1/10W
Q540	8-729-420-12	TRANSISTOR XN4213		R024	1-216-295-00	METAL CHIP 0	5% 1/10W
Q541	8-729-010-25	TRANSISTOR MSD601-RT1		R025	1-216-089-91	METAL GLAZE 47K	5% 1/10W
Q542	8-729-421-19	TRANSISTOR UN2213		R026	1-216-041-00	METAL CHIP 470	5% 1/10W
Q543	8-729-010-05	TRANSISTOR MSB709-RT1		R027	1-216-295-00	METAL CHIP 0	5% 1/10W
Q544	8-729-010-25	TRANSISTOR MSD601-RT1		R029	1-216-073-00	METAL CHIP 10K	5% 1/10W
Q545	8-729-420-12	TRANSISTOR XN4213		R030	1-216-049-00	METAL CHIP 1K	5% 1/10W
Q546	8-729-424-32	TRANSISTOR UN2117		R031	1-216-049-00	METAL CHIP 1K	5% 1/10W
Q547	8-729-010-05	TRANSISTOR MSB709-RT1		R032	1-216-295-00	METAL CHIP 0	5% 1/10W
Q548	8-729-010-25	TRANSISTOR MSD601-RT1		R033	1-216-049-00	METAL CHIP 1K	5% 1/10W
Q549	8-729-424-70	TRANSISTOR UN2217		R034	1-216-295-00	METAL CHIP 0	5% 1/10W
Q550	8-729-010-25	TRANSISTOR MSD601-RT1		R035	1-216-049-00	METAL CHIP 1K	5% 1/10W
Q552	8-729-420-12	TRANSISTOR XN4213		R036	1-216-049-00	METAL CHIP 1K	5% 1/10W
Q554	8-729-230-49	TRANSISTOR 2SC2712-YG		R037	1-216-049-00	METAL CHIP 1K	5% 1/10W
Q555	8-729-424-70	TRANSISTOR UN2217		R038	1-216-049-00	METAL CHIP 1K	5% 1/10W
Q556	8-729-010-25	TRANSISTOR MSD601-RT1		R039	1-216-295-00	METAL CHIP 0	5% 1/10W
Q557	8-729-010-25	TRANSISTOR MSD601-RT1		R040	1-216-061-00	METAL CHIP 3.3K	5% 1/10W
Q558	8-729-010-25	TRANSISTOR MSD601-RT1		R041	1-216-073-00	METAL CHIP 10K	5% 1/10W
Q559	8-729-230-49	TRANSISTOR 2SC2712-YG		R042	1-216-049-00	METAL CHIP 1K	5% 1/10W
Q560	8-729-010-05	TRANSISTOR MSB709-RT1					
Q561	8-729-010-05	TRANSISTOR MSB709-RT1					

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R044	1-216-089-91	METAL GLAZE	5%	R217	1-216-067-00	METAL CHIP	5.6K
R045	1-216-295-00	METAL CHIP	5%	R218	1-216-689-11	METAL CHIP	39K
R047	1-216-089-91	METAL GLAZE	5%	R219	1-216-097-00	METAL CHIP	100K
R048	1-216-295-00	METAL CHIP	5%	R220	1-216-049-00	METAL CHIP	1K
R049	1-216-049-00	METAL CHIP	5%	R221	1-208-808-11	METAL GLAZE	12K
R050	1-216-089-91	METAL GLAZE	5%	R223	1-216-049-00	METAL CHIP	1K
R051	1-216-295-00	METAL CHIP	5%	R225	1-216-073-00	METAL CHIP	10K
R053	1-216-089-91	METAL GLAZE	5%	R226	1-216-089-91	METAL GLAZE	47K
R056	1-216-089-91	METAL GLAZE	5%	R227	1-216-067-00	METAL CHIP	5.6K
R059	1-216-089-91	METAL GLAZE	5%	R228	1-216-105-91	METAL GLAZE	220K
R061	1-216-295-00	METAL CHIP	5%	R229	1-216-075-00	METAL CHIP	12K
R062	1-216-089-91	METAL GLAZE	5%	R230	1-216-055-00	METAL CHIP	1.8K
R066	1-216-089-91	METAL GLAZE	5%	R231	1-216-025-00	METAL CHIP	100
R069	1-216-089-91	METAL GLAZE	5%	R232	1-216-049-00	METAL CHIP	1K
R070	1-216-049-00	METAL CHIP	5%	R233	1-216-043-91	METAL GLAZE	560
R072	1-216-089-91	METAL GLAZE	5%	R234	1-216-046-00	METAL CHIP	750
R074	1-216-295-00	METAL CHIP	5%	R235	1-216-059-00	METAL CHIP	2.7K
R075	1-216-089-91	METAL GLAZE	5%	R236	1-216-073-00	METAL CHIP	10K
R076	1-216-295-00	METAL CHIP	5%	R237	1-216-061-00	METAL CHIP	3.3K
R078	1-216-089-91	METAL GLAZE	5%	R238	1-216-061-00	METAL CHIP	3.3K
R082	1-216-049-00	METAL CHIP	5%	R239	1-216-089-91	METAL GLAZE	47K
R083	1-216-049-00	METAL CHIP	5%	R262	1-216-073-00	METAL CHIP	10K
R084	1-216-049-00	METAL CHIP	5%	R263	1-216-097-00	METAL CHIP	100K
R090	1-216-049-00	METAL CHIP	5%	R264	1-216-073-00	METAL CHIP	10K
R101	1-208-770-11	METAL GLAZE	0.50%	R265	1-216-073-00	METAL CHIP	10K
R102	1-208-760-11	METAL GLAZE	0.50%	R266	1-216-073-00	METAL CHIP	10K
R103	1-208-780-11	METAL GLAZE	0.50%	R267	1-216-057-00	METAL CHIP	2.2K
R104	1-216-047-91	METAL GLAZE	5%	R268	1-216-073-00	METAL CHIP	10K
R105	1-216-051-00	METAL CHIP	5%	R269	1-216-689-11	METAL CHIP	39K
R106	1-208-796-11	METAL GLAZE	0.50%	R301	1-216-057-00	METAL CHIP	2.2K
R107	1-216-049-00	METAL CHIP	5%	R302	1-216-057-00	METAL CHIP	2.2K
R108	1-216-079-00	METAL CHIP	5%	R303	1-216-025-00	METAL CHIP	100
R109	1-208-780-11	METAL GLAZE	0.50%	R304	1-216-085-00	METAL CHIP	33K
R110	1-216-041-00	METAL CHIP	5%	R305	1-216-081-00	METAL CHIP	22K
R111	1-208-772-11	METAL GLAZE	0.50%	R312	1-216-025-00	METAL CHIP	100
R112	1-216-073-00	METAL CHIP	5%	R313	1-216-081-00	METAL CHIP	22K
R113	1-208-752-11	METAL GLAZE	0.50%	R314	1-216-049-00	METAL CHIP	1K
R114	1-216-295-00	METAL CHIP	5%	R320	1-216-067-00	METAL CHIP	2.2K
R115	1-216-077-00	METAL CHIP	5%	R377	1-216-081-00	METAL CHIP	22K
R116	1-216-045-00	METAL CHIP	5%	R384	1-216-081-00	METAL CHIP	22K
R117	1-216-037-00	METAL CHIP	5%	R387	1-216-053-00	METAL CHIP	1.5K
R126	1-216-057-00	METAL CHIP	5%	R388	1-216-063-91	METAL GLAZE	3.9K
R127	1-216-077-00	METAL CHIP	5%	R389	1-216-059-00	METAL CHIP	2.7K
R128	1-216-057-00	METAL CHIP	5%	R393	1-216-065-00	METAL CHIP	4.7K
R129	1-216-079-00	METAL CHIP	5%	R394	1-216-121-91	METAL GLAZE	1M
R130	1-216-049-00	METAL CHIP	5%	R395	1-216-053-00	METAL CHIP	1.5K
R201	1-216-049-00	METAL CHIP	5%	R401	1-216-295-00	METAL CHIP	0
R202	1-216-049-00	METAL CHIP	5%	R404	1-216-085-00	METAL CHIP	33K
R203	1-216-089-91	METAL GLAZE	5%	R409	1-216-295-00	METAL CHIP	0
R204	1-216-089-91	METAL GLAZE	5%	R501	1-216-041-00	METAL CHIP	470
R205	1-216-097-00	METAL CHIP	5%	R502	1-216-049-00	METAL CHIP	1K
R206	1-216-061-00	METAL CHIP	5%	R503	1-216-049-00	METAL CHIP	1K
R207	1-216-121-91	METAL GLAZE	5%	R504	1-216-089-91	METAL GLAZE	47K
R208	1-216-065-00	METAL CHIP	5%	R505	1-216-073-00	METAL CHIP	10K
R209	1-216-097-00	METAL CHIP	5%	R506	1-216-077-00	METAL CHIP	15K
R210	1-216-061-00	METAL CHIP	5%	R507	1-216-061-00	METAL CHIP	3.3K
R212	1-216-033-00	METAL CHIP	5%	R508	1-216-043-91	METAL GLAZE	560
R213	1-216-105-91	METAL GLAZE	5%	R509	1-216-049-00	METAL CHIP	1K
R214	1-216-075-00	METAL CHIP	5%	R510	1-216-047-91	METAL GLAZE	820
R215	1-216-295-00	METAL CHIP	5%	R511	1-216-059-00	METAL CHIP	2.7K

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R512	1-216-039-00	METAL CHIP	5%	R578	1-216-081-00	METAL CHIP	1/10W
R513	1-216-027-00	METAL CHIP	5%	R579	1-216-049-00	METAL CHIP	1/10W
R514	1-216-047-91	METAL GLAZE	5%	R580	1-216-049-00	METAL CHIP	1/10W
R515	1-216-085-00	METAL CHIP	5%	R581	1-216-295-00	METAL CHIP	5%
R516	1-216-075-00	METAL CHIP	5%	R582	1-216-057-00	METAL CHIP	1/10W
R517	1-216-041-00	METAL CHIP	5%	R584	1-216-073-00	METAL CHIP	1/10W
R518	1-216-041-00	METAL CHIP	5%	R585	1-216-055-00	METAL CHIP	1/10W
R519	1-216-063-91	METAL GLAZE	5%	R586	1-216-057-00	METAL CHIP	1/10W
R520	1-216-043-91	METAL GLAZE	5%	R587	1-216-073-00	METAL CHIP	1/10W
R521	1-216-037-00	METAL CHIP	5%	R588	1-216-063-91	METAL GLAZE	1/10W
R522	1-216-025-00	METAL CHIP	5%	R589	1-216-057-00	METAL CHIP	1/10W
R523	1-216-033-00	METAL CHIP	5%	R590	1-216-073-00	METAL CHIP	1/10W
R524	1-216-041-00	METAL CHIP	5%	R591	1-216-081-00	METAL CHIP	1/10W
R525	1-216-045-00	METAL CHIP	5%	R592	1-216-067-00	METAL CHIP	1/10W
R526	1-216-043-91	METAL GLAZE	5%	R593	1-216-057-00	METAL CHIP	1/10W
R527	1-216-073-00	METAL CHIP	5%	R594	1-216-057-00	METAL CHIP	1/10W
R529	1-216-073-00	METAL CHIP	5%	R595	1-216-105-91	METAL GLAZE	1/10W
R530	1-216-043-91	METAL GLAZE	5%	R596	1-208-812-11	METAL GLAZE	18K
R531	1-216-049-00	METAL CHIP	5%	R597	1-216-092-00	METAL GLAZE	62K
R532	1-216-049-00	METAL CHIP	5%	R598	1-208-816-11	METAL GLAZE	27K
R533	1-216-049-00	METAL CHIP	5%	R599	1-208-812-11	METAL GLAZE	18K
R535	1-208-772-11	METAL GLAZE	0.50%	R600	1-216-073-00	METAL CHIP	10K
R536	1-216-045-00	METAL CHIP	5%	R601	1-216-057-00	METAL CHIP	2.2K
R537	1-216-065-00	METAL CHIP	5%	R602	1-216-033-00	METAL CHIP	220
R538	1-216-045-00	METAL CHIP	5%	R603	1-216-061-00	METAL CHIP	3.3K
R539	1-216-059-00	METAL CHIP	5%	R604	1-216-295-00	METAL CHIP	0
R640	1-216-077-00	METAL CHIP	5%	R606	1-216-089-91	METAL GLAZE	47K
R641	1-216-085-00	METAL CHIP	5%	R608	1-216-049-00	METAL CHIP	1K
R642	1-216-041-00	METAL CHIP	5%	R610	1-216-073-00	METAL CHIP	10K
R643	1-216-033-00	METAL CHIP	5%	R611	1-216-079-00	METAL CHIP	18K
R644	1-216-065-00	METAL CHIP	5%	R612	1-216-081-00	METAL CHIP	22K
R645	1-216-045-00	METAL CHIP	5%	R613	1-216-075-00	METAL CHIP	12K
R646	1-216-037-00	METAL CHIP	5%	R614	1-216-065-00	METAL CHIP	4.7K
R647	1-216-041-00	METAL CHIP	5%	R615	1-208-794-11	METAL GLAZE	3.3K
R648	1-216-043-91	METAL GLAZE	5%	R616	1-208-784-11	METAL GLAZE	1.2K
R649	1-216-060-00	METAL GLAZE	5%	R618	1-216-049-00	METAL CHIP	1K
R650	1-216-041-00	METAL CHIP	5%	R619	1-216-083-00	METAL CHIP	27K
R651	1-216-077-00	METAL CHIP	5%	R620	1-216-075-00	METAL CHIP	12K
R652	1-216-073-00	METAL CHIP	5%	R621	1-208-772-11	METAL GLAZE	390
R653	1-216-057-00	METAL CHIP	5%	R622	1-216-063-91	METAL GLAZE	3.9K
R654	1-216-295-00	METAL CHIP	5%	R623	1-216-057-00	METAL CHIP	2.2K
R655	1-216-041-00	METAL CHIP	5%	R624	1-216-044-00	METAL CHIP	620
R656	1-216-061-00	METAL CHIP	5%	R625	1-216-035-00	METAL CHIP	270
R657	1-216-083-00	METAL CHIP	5%	R626	1-216-049-00	METAL CHIP	1K
R658	1-216-077-00	METAL CHIP	5%	R627	1-208-774-11	METAL GLAZE	470
R659	1-216-045-00	METAL CHIP	5%	R628	1-216-295-00	METAL CHIP	0
R660	1-216-041-00	METAL CHIP	5%	R629	1-216-049-00	METAL CHIP	1K
R661	1-216-049-00	METAL CHIP	5%	R630	1-216-041-00	METAL CHIP	470
R662	1-216-057-00	METAL CHIP	5%	R631	1-216-043-91	METAL GLAZE	560
R663	1-216-049-00	METAL CHIP	5%	R632	1-216-041-00	METAL CHIP	470
R664	1-216-049-00	METAL CHIP	5%	R633	1-216-041-00	METAL CHIP	470
R665	1-216-049-00	METAL CHIP	5%	R635	1-216-295-00	METAL CHIP	0
R666	1-216-049-00	METAL CHIP	5%	R636	1-216-035-00	METAL CHIP	270
R669	1-216-049-00	METAL CHIP	5%	R637	1-216-061-00	METAL CHIP	3.3K
R671	1-216-049-00	METAL CHIP	5%	R638	1-216-059-00	METAL CHIP	2.7K
R672	1-216-049-00	METAL CHIP	5%	R639	1-216-035-00	METAL CHIP	270
R673	1-216-057-00	METAL CHIP	5%	R640	1-216-053-00	METAL CHIP	1.5K
R674	1-216-295-00	METAL CHIP	5%	R641	1-216-041-00	METAL CHIP	470
R676	1-216-049-00	METAL CHIP	5%	R642	1-216-295-00	METAL CHIP	0
R677	1-216-073-00	METAL CHIP	5%	R643	1-216-039-00	METAL CHIP	390

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R644	1-216-121-91	METAL GLAZE	1/10W	R711	1-216-059-00	METAL CHIP	1/10W
R645	1-216-031-00	METAL CHIP	5%	R712	1-216-057-00	METAL CHIP	5%
R646	1-216-085-00	METAL CHIP	5%	R713	1-216-057-00	METAL CHIP	5%
R647	1-216-091-00	METAL CHIP	5%	R714	1-216-089-91	METAL GLAZE	5%
R648	1-216-041-00	METAL CHIP	5%	R715	1-216-073-00	METAL CHIP	5%
R649	1-216-049-00	METAL CHIP	5%	R716	1-216-073-00	METAL CHIP	5%
R650	1-216-295-00	METAL CHIP	5%	R717	1-216-057-00	METAL CHIP	5%
R651	1-216-027-00	METAL CHIP	5%	R720	1-216-049-00	METAL CHIP	5%
R652	1-216-095-00	METAL CHIP	5%	R721	1-216-049-00	METAL CHIP	5%
R653	1-216-049-00	METAL CHIP	5%	R722	1-216-073-00	METAL CHIP	5%
R654	1-216-041-00	METAL CHIP	5%	R723	1-216-073-00	METAL CHIP	5%
R655	1-216-041-00	METAL CHIP	5%	R724	1-216-035-00	METAL CHIP	5%
R656	1-216-049-00	METAL CHIP	5%	R725	1-216-295-00	METAL CHIP	5%
R657	1-216-029-00	METAL CHIP	5%	R726	1-216-295-00	METAL CHIP	5%
R659	1-216-041-00	METAL CHIP	5%	R731	1-216-041-00	METAL CHIP	5%
R660	1-216-049-00	METAL CHIP	5%	R732	1-216-041-00	METAL CHIP	5%
R661	1-216-035-00	METAL CHIP	5%	R733	1-216-049-00	METAL CHIP	5%
R662	1-216-039-00	METAL CHIP	5%	R734	1-216-049-00	METAL CHIP	5%
R663	1-216-039-00	METAL CHIP	5%	R735	1-216-073-00	METAL CHIP	5%
R664	1-216-041-00	METAL CHIP	5%	R736	1-216-069-00	METAL CHIP	5%
R665	1-216-057-00	METAL CHIP	5%	R737	1-216-073-00	METAL CHIP	5%
R666	1-216-057-00	METAL CHIP	5%	R738	1-216-049-00	METAL CHIP	5%
R667	1-216-069-00	METAL CHIP	5%	R742	1-216-017-91	METAL GLAZE	5%
R669	1-216-041-00	METAL CHIP	5%	R743	1-216-295-00	METAL CHIP	5%
R670	1-216-041-00	METAL CHIP	5%	R744	1-216-041-00	METAL CHIP	5%
R671	1-216-295-00	METAL CHIP	5%	R745	1-216-073-00	METAL CHIP	5%
R672	1-216-061-00	METAL CHIP	5%	R747	1-216-295-00	METAL CHIP	5%
R674	1-216-081-00	METAL CHIP	5%	R748	1-216-045-00	METAL CHIP	5%
R675	1-216-089-91	METAL GLAZE	5%	R801	1-216-089-91	METAL GLAZE	5%
R677	1-216-035-00	METAL CHIP	5%	R802	1-216-073-00	METAL CHIP	5%
R678	1-216-033-00	METAL CHIP	5%	R803	1-216-073-00	METAL CHIP	5%
R679	1-216-295-00	METAL CHIP	5%	R805	1-217-671-11	METAL CHIP	5%
R680	1-216-057-00	METAL CHIP	5%	R806	1-216-295-00	METAL CHIP	5%
R681	1-216-121-91	METAL GLAZE	5%	R807	1-217-671-11	METAL CHIP	5%
R682	1-216-019-00	METAL CHIP	5%	R808	1-217-671-11	METAL CHIP	5%
R683	1-216-041-00	METAL CHIP	5%	R809	1-216-019-00	METAL CHIP	5%
R684	1-216-045-00	METAL CHIP	5%	R810	1-216-121-91	METAL GLAZE	5%
R686	1-216-081-00	METAL CHIP	5%	R811	1-216-041-00	METAL CHIP	5%
R687	1-216-073-00	METAL CHIP	5%	R813	1-216-081-00	METAL CHIP	5%
R688	1-216-295-00	METAL CHIP	5%	R815	1-216-073-00	METAL CHIP	5%
R689	1-216-043-91	METAL GLAZE	5%	R816	1-216-101-00	METAL CHIP	5%
R690	1-216-057-00	METAL CHIP	5%	R817	1-216-101-00	METAL CHIP	5%
R691	1-216-073-00	METAL CHIP	5%	R818	1-216-108-00	METAL GLAZE	5%
R693	1-216-027-00	METAL CHIP	5%	R820	1-219-107-91	METAL GLAZE	5%
R694	1-216-095-00	METAL CHIP	5%	R821	1-219-107-91	METAL GLAZE	5%
R695	1-216-073-00	METAL CHIP	5%	R822	1-219-107-91	METAL GLAZE	5%
R696	1-216-085-00	METAL CHIP	5%	R823	1-216-097-00	METAL CHIP	5%
R697	1-216-091-00	METAL CHIP	5%	R824	1-216-089-91	METAL GLAZE	5%
R698	1-216-047-91	METAL GLAZE	5%	R825	1-216-089-91	METAL GLAZE	5%
R699	1-216-053-00	METAL CHIP	5%	R826	1-216-089-91	METAL GLAZE	5%
R700	1-216-057-00	METAL CHIP	5%	R827	1-216-295-00	METAL CHIP	5%
R701	1-216-041-00	METAL CHIP	5%	R829	1-216-295-00	METAL CHIP	5%
R702	1-216-049-00	METAL CHIP	5%	R830	1-216-019-00	METAL CHIP	5%
R704	1-216-059-00	METAL CHIP	5%	R831	1-216-295-00	METAL CHIP	5%
R705	1-216-045-00	METAL CHIP	5%	R832	1-216-295-00	METAL CHIP	5%
R706	1-216-044-00	METAL CHIP	5%	R840	1-216-049-00	METAL CHIP	5%
R707	1-216-057-00	METAL CHIP	5%	R841	1-216-121-91	METAL GLAZE	5%
R708	1-216-033-00	METAL CHIP	5%	R842	1-216-295-00	METAL CHIP	5%
R709	1-216-039-00	METAL CHIP	5%	R844	1-216-295-00	METAL CHIP	5%
R710	1-216-061-00	METAL CHIP	5%	R845	1-216-073-00	METAL CHIP	5%

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R846	1-216-073-00	METAL CHIP	10K	R970	1-216-074-00	METAL CHIP	11K
R847	1-216-073-00	METAL CHIP	10K	R971	1-216-097-00	METAL CHIP	100K
R848	1-216-093-00	METAL CHIP	68K	R972	1-216-069-00	METAL CHIP	6.8K
R849	1-216-093-00	METAL CHIP	68K	R973	1-216-121-91	METAL GLAZE	1M
R850	1-216-093-00	METAL CHIP	68K	R976	1-216-037-00	METAL CHIP	330
R851	1-216-079-00	METAL CHIP	18K	R977	1-208-800-11	METAL GLAZE	5.6K
R852	1-216-073-00	METAL CHIP	10K	R978	1-208-810-11	METAL GLAZE	15K
R853	1-217-671-11	METAL CHIP	1	R979	1-216-099-00	METAL CHIP	120K
R854	1-216-295-00	METAL CHIP	0	R980	1-216-037-00	METAL CHIP	330
R858	1-216-025-00	METAL CHIP	100	R981	1-216-105-91	METAL GLAZE	220K
R859	1-216-025-00	METAL CHIP	100	R982	1-216-099-00	METAL CHIP	120K
R901	1-216-073-00	METAL CHIP	10K	R983	1-216-089-91	METAL GLAZE	47K
R902	1-216-172-00	METAL CHIP	82	R984	1-216-093-00	METAL CHIP	68K
R903	1-216-099-00	METAL CHIP	120K	R985	1-216-109-00	METAL CHIP	330K
R904	1-216-099-00	METAL CHIP	120K	R986	1-216-041-00	METAL CHIP	470
R905	1-216-295-00	METAL CHIP	0	R988	1-216-041-00	METAL CHIP	470
R906	1-216-295-00	METAL CHIP	0	R989	1-216-069-00	METAL CHIP	6.8K
R907	1-216-295-00	METAL CHIP	0	R990	1-216-077-00	METAL CHIP	15K
R908	1-216-049-00	METAL CHIP	1K	R991	1-216-085-00	METAL CHIP	33K
R909	1-216-049-00	METAL CHIP	1K	R992	1-216-689-11	METAL CHIP	39K
R910	1-216-089-91	METAL GLAZE	47K	R994	1-216-079-00	METAL CHIP	18K
R911	1-216-089-91	METAL GLAZE	47K	R996	1-216-073-00	METAL CHIP	10K
R912	1-216-089-91	METAL GLAZE	47K	R998	1-216-073-00	METAL CHIP	10K
R913	1-216-057-00	METAL CHIP	2.2K	R999	1-216-085-00	METAL CHIP	33K
R914	1-216-049-00	METAL CHIP	1K	R999	1-216-085-00	METAL CHIP	33K
R916	1-216-057-00	METAL CHIP	2.2K			< VARIABLE RESISTOR >	
R917	1-216-057-00	METAL CHIP	2.2K	RV101	1-223-238-11	RES. ADJ. CARBON 4.7K	
R918	1-216-057-00	METAL CHIP	2.2K	RV102	1-223-238-11	RES. ADJ. CARBON 4.7K	
R919	1-216-057-00	METAL CHIP	2.2K	RV201	1-223-240-21	RES. ADJ. CARBON 22K	
R920	1-216-073-00	METAL CHIP	10K	RV202	1-238-866-11	RES. ADJ. CERMET 10K	
R921	1-216-089-91	METAL GLAZE	47K	RV203	1-223-240-21	RES. ADJ. CARBON 22K	
R929	1-216-009-00	METAL CHIP	22	RV501	1-223-991-21	RES. CARBON ADJ VAR 1K	
R932	1-216-113-00	METAL CHIP	470K	RV502	1-223-994-21	RES. CARBON ADJ VAR 4.7K	
R933	1-216-033-00	METAL CHIP	220	RV503	1-223-994-21	RES. CARBON ADJ VAR 4.7K	
R934	1-216-081-00	METAL CHIP	22K	RV504	1-223-996-21	RES. CARBON ADJ VAR 22K	
R935	1-216-073-00	METAL CHIP	10K	RV505	1-223-994-21	RES. CARBON ADJ VAR 4.7K	
R936	1-216-073-00	METAL CHIP	10K	RV506	1-223-994-21	RES. CARBON ADJ VAR 4.7K	
R938	1-216-045-00	METAL CHIP	680	RV507	1-223-996-21	RES. CARBON ADJ VAR 22K	
R940	1-216-057-00	METAL CHIP	2.2K	RV508	1-223-996-21	RES. CARBON ADJ VAR 22K	
R941	1-216-085-00	METAL CHIP	33K	RV509	1-223-994-21	RES. CARBON ADJ VAR 4.7K	
R942	1-216-049-00	METAL CHIP	1K	RV510	1-223-996-21	RES. CARBON ADJ VAR 22K	
R944	1-216-069-91	METAL GLAZE	47K	RV511	1-223-990-21	RES. CARBON ADJ VAR 470	
R947	1-216-097-00	METAL CHIP	100K	RV512	1-223-992-21	RES. CARBON ADJ VAR 2.2K	
R948	1-216-073-00	METAL CHIP	10K	RV513	1-223-991-21	RES. CARBON ADJ VAR 1K	
R949	1-216-295-00	METAL CHIP	0	RV514	1-223-991-21	RES. CARBON ADJ VAR 1K	
R954	1-216-075-00	METAL CHIP	12K			< VIBRATOR >	
R955	1-216-073-00	METAL CHIP	10K	X001	1-767-308-21	VIBRATOR, CRYSTAL	
R956	1-216-081-00	METAL CHIP	22K	X002	1-760-239-11	VIBRATOR, CRYSTAL 16MHZ	
R957	1-216-121-91	METAL GLAZE	1M	X501	1-577-117-11	VIBRATOR, CRYSTAL 4.4MHZ	
R958	1-216-049-00	METAL CHIP	1K				
R960	1-216-086-00	METAL GLAZE	36K				
R961	1-216-129-00	METAL CHIP	2.2M				
R962	1-216-296-00	METAL CHIP	0				
R963	1-216-073-00	METAL CHIP	10K				
R964	1-216-001-00	METAL CHIP	10				
R965	1-216-073-00	METAL CHIP	10K				
R966	1-216-001-00	METAL CHIP	10				
R967	1-216-069-00	METAL CHIP	6.8K				
R968	1-216-073-00	METAL CHIP	10K				
R969	1-216-121-91	METAL GLAZE	1M				

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
*	A-7066-973-A	MV-34 (NP) BOARD, COMPLETE(MN,PN,MR)		C264	1-163-009-11	CERAMIC CHIP	50V
		*****		C266	1-163-009-11	CERAMIC CHIP	50V
*	A-7066-974-A	MV-34 (VC) BOARD, COMPLETE(AS,VC)		C267	1-163-009-11	CERAMIC CHIP	50V
		*****		C273	1-126-154-11	ELECT	6.3V
*	A-7066-977-A	MV-34 (UX) BOARD, COMPLETE(UX)		C274	1-164-004-11	CERAMIC CHIP	25V

*	A-7066-998-A	MV-34 (B) BOARD, COMPLETE (B)	(Ref. No.: 4,000 Series)	C281	1-124-589-11	ELECT	16V
		*****		C284	1-126-154-11	ELECT	6.3V
				C301	1-165-319-11	CERAMIC CHIP	50V
				C302	1-163-104-00	CERAMIC CHIP	50V
				C303	1-165-319-11	CERAMIC CHIP	50V
	1-555-110-00	CABLE, PIN					
	3-741-933-01	HEAT SINK					
	3-960-273-01	SPACER, TOP END					
	3-960-274-01	SPACER, LED					
	7-686-646-79	SCREW +BVTP 3X8 TYPE2 IT-3					
		< CAPACITOR >					
C001	1-163-038-00	CERAMIC CHIP	25V	C310	1-124-589-11	ELECT	16V
C002	1-163-038-00	CERAMIC CHIP	25V	C311	1-164-232-11	CERAMIC CHIP	50V
C003	1-164-004-11	CERAMIC CHIP	10%	C401	1-126-966-11	ELECT	16V
C011	1-164-232-11	CERAMIC CHIP	50V	C402	1-124-229-00	ELECT	10V
C054	1-137-373-11	FILM	5%	C403	1-164-232-11	CERAMIC CHIP	50V
C055	1-164-232-11	CERAMIC CHIP	50V	C415	1-126-926-11	ELECT	10V
C056	1-126-157-11	ELECT	20%	C416	1-163-038-00	CERAMIC CHIP	25V
C057	1-137-441-11	FILM	5%	C422	1-107-839-11	ELECT CHIP	16V
C058	1-124-257-00	ELECT	20%	C429	1-164-232-11	CERAMIC CHIP	50V
C071	1-164-004-11	CERAMIC CHIP	10%	C444	1-115-339-11	CERAMIC CHIP	50V
C072	1-164-004-11	CERAMIC CHIP	10%	C462	1-126-966-11	ELECT	16V
C073	1-110-398-11	TANTAL CHIP	35V	C463	1-126-966-11	ELECT	16V
C074	1-164-004-11	CERAMIC CHIP	10%	C469	1-126-963-11	ELECT	50V
C075	1-164-004-11	CERAMIC CHIP	10%	C485	1-126-400-11	ELECT	35V
C076	1-164-004-11	CERAMIC CHIP	10%	C486	1-115-339-11	CERAMIC CHIP	50V
C077	1-164-004-11	CERAMIC CHIP	10%	C487	1-124-589-11	ELECT	16V
C078	1-126-205-11	ELECT CHIP	20%	C488	1-115-339-11	CERAMIC CHIP	50V
C079	1-164-232-11	CERAMIC CHIP	0.01uF	C489	1-126-197-11	ELECT	50V
C091	1-126-603-11	ELECT CHIP	4.7uF	C490	1-115-339-11	CERAMIC CHIP	50V
C101	1-164-232-11	CERAMIC CHIP	0.01uF	C501	1-164-004-11	CERAMIC CHIP	25V
C102	1-126-154-11	ELECT	47uF	C502	1-126-933-11	ELECT	10V
C103	1-164-344-11	CERAMIC CHIP	0.068uF	C503	1-164-232-11	CERAMIC CHIP	50V
C104	1-126-153-11	ELECT	22uF	C504	1-126-933-11	ELECT	10V
C105	1-124-584-00	ELECT	100uF	C524	1-126-964-11	ELECT	50V
C106	1-163-009-11	CERAMIC CHIP	0.001uF	C534	1-126-961-11	ELECT	50V
C107	1-163-017-00	CERAMIC CHIP	0.0047uF	C535	1-126-961-11	ELECT	50V
C108	1-104-329-11	CERAMIC CHIP	0.1uF	C536	1-126-964-11	ELECT	50V
C109	1-124-257-00	ELECT	2.2uF	C540	1-126-967-11	ELECT	10V
C112	1-126-961-11	ELECT	2.2uF	C542	1-164-232-11	CERAMIC CHIP	50V
C201	1-164-004-11	CERAMIC CHIP	0.1uF	C547	1-126-963-11	ELECT	50V
C202	1-164-346-11	CERAMIC CHIP	1uF	C551	1-126-963-11	ELECT	50V
C203	1-126-154-11	ELECT	47uF	C552	1-164-232-11	CERAMIC CHIP	50V
C205	1-164-004-11	CERAMIC CHIP	0.1uF	C554	1-124-589-11	ELECT	16V
C210	1-128-057-11	ELECT	330uF	C556	1-164-232-11	CERAMIC CHIP	50V
C211	1-163-229-11	CERAMIC CHIP	12PF	C578	1-163-037-11	CERAMIC CHIP	25V
C212	1-163-229-11	CERAMIC CHIP	12PF	C579	1-164-232-11	CERAMIC CHIP	50V
C213	1-164-346-11	CERAMIC CHIP	1uF	C580	1-126-967-11	ELECT	10V
C214	1-164-232-11	CERAMIC CHIP	0.01uF	C581	1-164-161-11	CERAMIC CHIP	100V
C240	1-163-005-11	CERAMIC CHIP	470PF	C582	1-163-017-00	CERAMIC CHIP	50V
C251	1-164-004-11	CERAMIC CHIP	0.1uF	C583	1-163-009-11	CERAMIC CHIP	50V
C253	1-124-464-11	ELECT	0.22uF	C584	1-126-961-11	ELECT	50V
C254	1-126-154-11	ELECT	47uF	C598	1-163-016-00	CERAMIC CHIP	50V
C255	1-164-232-11	CERAMIC CHIP	0.01uF	C599	1-163-011-11	CERAMIC CHIP	50V
C261	1-124-635-00	ELECT	220uF	C601	1-104-760-11	CERAMIC CHIP	50V
C262	1-163-009-11	CERAMIC CHIP	0.001uF	C602	1-126-157-11	ELECT	16V

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C603	1-163-037-11	CERAMIC CHIP	0.022uF	C722	1-126-967-11	ELECT	25V
C604	1-126-163-11	ELECT	4.7uF	C723	1-126-964-11	ELECT	10V
C605	1-126-154-11	ELECT	47uF	C724	1-126-163-11	ELECT	20%
C606	1-164-232-11	CERAMIC CHIP	0.01uF	C725	1-126-163-11	ELECT	20%
C607	1-124-584-00	ELECT	100uF	C726	1-126-967-11	ELECT	20%
C608	1-137-372-11	FILM	0.022uF	C727	1-164-232-11	CERAMIC CHIP	50V
C609	1-126-967-11	ELECT	47uF	C728	1-126-967-11	ELECT	20%
C610	1-164-232-11	CERAMIC CHIP	0.01uF	C729	1-164-232-11	CERAMIC CHIP	50V
C611	1-163-037-11	CERAMIC CHIP	0.022uF	C730	1-128-551-11	ELECT	25V
C612	1-126-963-11	ELECT	4.7uF	C731	1-126-964-11	ELECT	20%
C613	1-126-964-11	ELECT	10uF	C732	1-164-232-11	CERAMIC CHIP	50V
C614	1-126-962-11	ELECT	3.3uF	C733	1-126-963-11	ELECT	50V
C615	1-126-962-11	ELECT	3.3uF	C734	1-126-963-11	ELECT	50V
C616	1-128-551-11	ELECT	22uF	C735	1-164-232-11	CERAMIC CHIP	50V
C617	1-126-967-11	ELECT	47uF	C736	1-164-232-11	CERAMIC CHIP	50V
C618	1-126-960-11	ELECT	1uF	C737	1-124-589-11	ELECT	16V
C619	1-137-370-11	FILM	0.01uF	C738	1-126-157-11	ELECT	16V
C620	1-126-963-11	ELECT	4.7uF	C739	1-126-157-11	ELECT	20%
C621	1-163-014-00	CERAMIC CHIP	0.0027uF	C740	1-124-589-11	ELECT	16V
C622	1-163-143-00	CERAMIC CHIP	0.0012uF	C741	1-115-871-11	ELECT	20%
C623	1-126-961-11	ELECT	2.2uF	C742	1-115-871-11	ELECT	50V
C624	1-163-275-11	CERAMIC CHIP	0.001uF	C744	1-164-232-11	CERAMIC CHIP	50V
C625	1-163-275-11	CERAMIC CHIP	0.001uF	C747	1-163-251-11	CERAMIC CHIP	50V
C626	1-163-145-00	CERAMIC CHIP	0.0015uF	C751	1-163-251-11	CERAMIC CHIP	50V
C627	1-163-145-00	CERAMIC CHIP	0.0015uF	C755	1-164-004-11	CERAMIC CHIP	25V
C628	1-124-455-00	ELECT	100uF	C802	1-163-235-11	CERAMIC CHIP	50V
C629	1-124-584-00	ELECT	100uF	C803	1-163-229-11	CERAMIC CHIP	50V
C630	1-126-205-11	ELECT CHIP	47uF	C804	1-163-229-11	CERAMIC CHIP	50V
C651	1-137-612-11	FILM	0.0066uF	C806	1-128-057-11	ELECT	6.3V
C652	1-164-232-11	CERAMIC CHIP	0.01uF	C807	1-164-232-11	CERAMIC CHIP	50V
C653	1-163-011-11	CERAMIC CHIP	0.0015uF	C809	1-163-038-00	CERAMIC CHIP	50V
C654	1-137-453-11	FILM	560PF	C810	1-126-926-11	ELECT	25V
C655	1-104-697-11	FILM	0.047uF	C811	1-164-004-11	CERAMIC CHIP	10V
C656	1-164-232-11	CERAMIC CHIP	0.01uF	C812	1-163-038-00	CERAMIC CHIP	25V
C657	1-163-011-11	CERAMIC CHIP	0.0015uF	C813	1-126-513-11	ELECT	25V
C658	1-124-455-00	ELECT	100uF	C819	1-164-004-11	CERAMIC CHIP	6.3V
C659	1-124-455-00	ELECT	100uF	C820	1-164-346-11	CERAMIC CHIP	25V
C660	1-163-145-00	CERAMIC CHIP	0.0015uF	C920	1-126-791-11	ELECT	16V
C661	1-124-589-11	ELECT	47uF	C921	1-126-791-11	ELECT	16V
C701	1-126-964-11	ELECT	10uF	C922	1-164-232-11	CERAMIC CHIP	20%
C702	1-126-964-11	ELECT	10uF	C923	1-163-038-00	CERAMIC CHIP	50V
C703	1-126-967-11	ELECT	47uF	C924	1-126-967-11	ELECT	20%
C704	1-126-967-11	ELECT	47uF	C925	1-164-232-11	CERAMIC CHIP	10V
C705	1-164-004-11	CERAMIC CHIP	0.1uF	C926	1-164-232-11	CERAMIC CHIP	50V
C706	1-126-967-11	ELECT	47uF	C927	1-126-967-11	ELECT	20%
C707	1-126-967-11	ELECT	47uF	C928	1-163-227-11	CERAMIC CHIP	10V
C708	1-126-964-11	ELECT	10uF	C929	1-163-102-00	CERAMIC CHIP	0.5PF
C709	1-126-964-11	ELECT	10uF	C930	1-163-235-11	CERAMIC CHIP	50V
C710	1-124-290-00	ELECT	47uF	C931	1-163-239-11	CERAMIC CHIP	50V
C711	1-126-964-11	ELECT	10uF	C932	1-126-961-11	ELECT	50V
C712	1-126-964-11	ELECT	10uF	C934	1-164-343-11	CERAMIC CHIP	20%
C713	1-126-964-11	ELECT	10uF	C935	1-163-037-11	CERAMIC CHIP	10%
C714	1-126-964-11	ELECT	10uF	C936	1-163-139-00	CERAMIC CHIP	25V
C715	1-164-232-11	CERAMIC CHIP	0.01uF	C937	1-126-960-11	ELECT	5%
C716	1-126-964-11	ELECT	10uF	C938	1-164-232-11	CERAMIC CHIP	50V
C717	1-164-232-11	CERAMIC CHIP	0.01uF	C939	1-126-967-11	ELECT	20%
C718	1-126-963-11	ELECT	4.7uF	C940	1-164-232-11	CERAMIC CHIP	10V
C719	1-126-967-11	ELECT	47uF	C953	1-164-232-11	CERAMIC CHIP	50V
C720	1-126-963-11	ELECT	4.7uF	C965	1-126-916-11	ELECT	20%
C721	1-164-232-11	CERAMIC CHIP	0.01uF	C957	1-126-926-11	ELECT	6.3V
							10V

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C959	1-164-232-11	CERAMIC CHIP	0.01uF	D903	8-719-421-59	DIODE MA3075WA-(TX)	
C961	1-126-967-11	ELECT	47uF	D905	8-719-801-78	DIODE 1SS184	
C966	1-126-967-11	ELECT	47uF			< FILTER >	
C967	1-164-232-11	CERAMIC CHIP	0.01uF	FL002	1-236-163-11	ENCAPSULATED COMPONENT	
C968	1-164-232-11	CERAMIC CHIP	0.01uF	FL004	1-236-163-11	ENCAPSULATED COMPONENT	
C975	1-164-232-11	CERAMIC CHIP	0.01uF			< IC >	
C976	1-164-232-11	CERAMIC CHIP	0.01uF	IC051	8-759-702-02	IC NJM062M	
C978	1-163-239-11	CERAMIC CHIP	33PF	IC071	8-759-294-26	IC BA6209-V2	
C979	1-164-232-11	CERAMIC CHIP	0.01uF	IC101	8-759-246-14	IC TA8823N	
C986	1-115-339-11	CERAMIC CHIP	0.1uF	IC201	8-752-878-82	IC CXP87240A-0390	
C987	1-104-905-11	CAPACITOR	0.22F	IC271	8-759-097-80	IC HD49783FP-T1	
		< CONNECTOR >					
* CN002	1-766-538-11	CONNECTOR, BOARD TO BOARD 8P		IC301	8-759-289-73	IC SDA6549X-GEG	
* CN003	1-766-537-11	CONNECTOR (HMD) 5P		IC401	8-759-054-12	IC PQ09RF11	
* CN004	1-766-716-11	CONNECTOR, BOARD TO BOARD 3P		IC407	8-759-189-48	IC PO12RE11	
* CN006	1-573-128-11	PIN, CONNECTOR 5P		IC601	8-759-365-31	IC XLH7779K-E2	
* CN101	1-564-028-00	PIN, CONNECTOR 3P		IC602	8-759-089-84	IC BA7755AF-T1	
CN102	1-506-468-11	PIN, CONNECTOR 3P		IC701	8-759-700-65	IC NJM79L05A	
CN301	1-573-852-11	CONNECTOR, BOARD TO BOARD 20P		IC702	8-759-426-79	IC SNV761263APG-S	
CN302	1-573-852-11	CONNECTOR, BOARD TO BOARD 20P		IC705	8-759-084-76	IC MM1111XFF	
CN400	1-506-480-11	PIN, CONNECTOR 15P		IC706	8-759-084-76	IC MM1111XFF	
CN401	1-569-901-11	SOCKET, CONNECTOR 5P		IC801	8-752-883-58	IC CXP87360-0490	
* CN403	1-568-942-11	PIN, CONNECTOR 4P		IC802	8-759-248-87	IC MM1256XF-BE	
CN404	1-569-920-11	SOCKET, CONNECTOR 28P		IC901	8-759-460-57	IC MB90089PF-G-187-BND-ER	
CN601	1-506-468-11	PIN, CONNECTOR 3P		IC902	8-759-164-09	IC LA7218M-TE-R	
CN602	1-506-469-11	PIN, CONNECTOR 4P		IC912	8-759-084-76	IC MM1111XFF (B)	
CN702	1-569-945-31	SOCKET, CONNECTOR 29P				< JACK >	
* CN705	1-568-788-21	PIN, CONNECTOR 11P		J901	1-764-592-41	JACK 3P (VIDEO, AUDIO LINE OUT)	
CN707	1-569-932-31	SOCKET, CONNECTOR 15P		J902	1-778-773-11	TERMINAL, S (S VIDEO LINE OUT)	
CN708	1-569-939-31	SOCKET, CONNECTOR 23P				< JUMPER RESISTOR >	
		< COMPOSITION CIRCUIT BLOCK >		JS401	1-216-295-00	METAL CHIP 0 5% 1/10W	
Δ CP402	1-473-502-11	CONVERTER UNIT, DC/DC		JS902	1-216-295-00	METAL CHIP 0 5% 1/10W	(AS,MIN,NP,NR,UX,VC)
		< TRIMMER >					
CT801	1-141-443-11	CAP, CERAMIC TRIMMER 30PF		L051	1-412-963-11	INDUCTOR 100uH	
		< DIODE >		L101	1-410-482-31	INDUCTOR 100uH	
D001	8-719-210-33	DIODE EC10DS2		L201	1-414-398-11	INDUCTOR 10uH	
D010	8-719-404-49	DIODE MA111		L272	1-412-963-11	INDUCTOR 100uH	
D051	8-719-404-49	DIODE MA111		L301	1-412-968-21	INDUCTOR 39uH	
D071	8-719-422-97	DIODE MA8091-M		L401	1-414-404-11	INDUCTOR 100uH	
D203	8-719-210-33	DIODE EC10DS2		L413	1-410-385-11	INDUCTOR CHIP 22uH	
D205	8-719-404-49	DIODE MA111		L414	1-414-392-21	INDUCTOR 1uH	
D261	8-719-048-26	DIODE GL528V1		L415	1-414-392-21	INDUCTOR 1uH	
D265	8-719-422-62	DIODE MA8062-L-TX		L503	1-414-398-11	INDUCTOR 10uH	
D267	8-719-422-62	DIODE MA8062-L-TX		L507	1-410-482-31	INDUCTOR 100uH	
D403	8-719-210-33	DIODE EC10DS2		L512	1-414-402-11	INDUCTOR 47uH	
D405	8-719-106-31	DIODE RD8.2M-B1		L513	1-410-478-11	INDUCTOR 47uH	
D501	8-719-976-XX	DIODE UD2-TE-17-5.1B		L521	1-412-943-11	INDUCTOR 2.2uH	
D502	8-719-988-62	DIODE 1SS355		L522	1-412-943-11	INDUCTOR 2.2uH	
D512	8-719-042-79	DIODE MA8300-H-TX		L651	1-410-687-11	INDUCTOR 1.2mH	
D513	8-719-404-49	DIODE MA111		L652	1-410-687-11	INDUCTOR 1.2mH	
D601	8-719-404-49	DIODE MA111		L701	1-414-398-11	INDUCTOR 10uH	
D701	8-719-106-31	DIODE RD8.2M-B1		L702	1-414-398-11	INDUCTOR 10uH	
D801	8-719-951-30	DIODE ERA91-02		L801	1-414-398-11	INDUCTOR 10uH	
D802	8-719-210-33	DIODE EC10DS2					
D901	8-719-421-59	DIODE MA3075WA-(TX)					

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
L901	1-414-398-11	INDUCTOR 10uH		Q705	8-729-421-19	TRANSISTOR UN2213	
L902	1-410-385-11	INDUCTOR CHIP 22uH		Q706	8-729-421-19	TRANSISTOR UN2213	
L903	1-414-392-21	INDUCTOR 1uH		Q707	8-729-106-68	TRANSISTOR 2SD1615A-GP	
L905	1-414-398-11	INDUCTOR 10uH		Q801	8-729-424-08	TRANSISTOR UN2111	
L907	1-412-957-11	INDUCTOR 33uH (B)		Q802	8-729-424-59	TRANSISTOR UN2212	
		< PHOTO INTERRUPTER >		Q901	8-729-010-25	TRANSISTOR MSD601-RT1	
PH261	8-749-010-19	PHOTO INTERRUPTER GP3S113		Q902	8-729-010-25	TRANSISTOR MSD601-RT1	
PH262	8-749-010-20	PHOTO INTERRUPTER GP3S114		Q903	8-729-010-05	TRANSISTOR MSB709-RT1	
		< IC LINK >		Q904	8-729-216-21	TRANSISTOR 2SA1162Y-TE85L	
Δ PS001	1-532-675-21	LINK, IC		Q905	8-729-216-21	TRANSISTOR 2SA1162Y-TE85L	
Δ PS002	1-532-727-11	LINK, IC 0.25A		Q911	8-729-010-05	TRANSISTOR MSB709-RT1	
Δ PS401	1-532-685-00	LINK, IC		Q913	8-729-010-05	TRANSISTOR MSB709-RT1	
Δ PS601	1-532-605-00	LINK, IC 0.4A		Q915	8-729-010-05	TRANSISTOR MSB709-RT1	
		< THERMISTOR >		Q920	8-729-010-25	TRANSISTOR MSD601-RT1	
Δ PTH601	1-202-855-00	THERMISTOR, POSITIVE		Q921	8-729-421-19	TRANSISTOR UN2213	
		< TRANSISTOR >		Q922	8-729-424-18	TRANSISTOR UN2113	
Q004	8-729-140-93	TRANSISTOR 2SB733-34		Q924	8-729-028-70	TRANSISTOR UN2225T-(TX)	
Q005	8-729-421-19	TRANSISTOR UN2213		Q925	8-729-010-25	TRANSISTOR MSD601-RT1 (B)	
Q007	8-729-010-05	TRANSISTOR MSB709-RT1		Q926	8-729-421-19	TRANSISTOR UN2213 (B)	
Q254	8-729-422-29	TRANSISTOR 2SD601A-S		Q927	8-729-028-70	TRANSISTOR UN2225T-(TX)	
Q261	8-729-025-92	PHOTO TRANSISTOR PT380F		Q928	8-729-028-70	TRANSISTOR UN2225T-(TX)	
Q262	8-729-025-92	PHOTO TRANSISTOR PT380F		Q929	8-729-028-70	TRANSISTOR UN2225T-(TX)	
Q263	8-729-921-12	TRANSISTOR 2SD1834				< RESISTOR >	
Q301	8-729-010-25	TRANSISTOR MSD601-RT1		R010	1-216-689-11	METAL CHIP 39K	1/10W
Q302	8-729-010-25	TRANSISTOR MSD601-RT1		R011	1-216-073-00	METAL CHIP 10K	5% 1/10W
Q303	8-729-010-05	TRANSISTOR MSB709-RT1		R012	1-216-065-00	METAL CHIP 4.7K	5% 1/10W
Q304	8-729-010-25	TRANSISTOR MSD601-RT1		R013	1-216-065-00	METAL CHIP 4.7K	5% 1/10W
Q305	8-729-010-05	TRANSISTOR MSB709-RT1		R051	1-216-089-91	METAL GLAZE 47K	5% 1/10W
Q306	8-729-010-05	TRANSISTOR MSB709-RT1		R052	1-216-089-91	METAL GLAZE 47K	5% 1/10W
Q502	8-729-010-05	TRANSISTOR MSB709-RT1		R053	1-216-089-91	METAL GLAZE 47K	5% 1/10W
Q505	8-729-028-70	TRANSISTOR UN2225T-(TX)		R054	1-216-089-91	METAL GLAZE 47K	5% 1/10W
Q506	8-729-421-22	TRANSISTOR UN2211		R056	1-216-689-11	METAL CHIP 39K	0.5% 1/10W
Q507	8-729-028-70	TRANSISTOR UN2225T-(TX)		R057	1-216-073-00	METAL CHIP 10K	5% 1/10W
Q509	8-729-028-70	TRANSISTOR UN2225T-(TX)		R058	1-216-049-00	METAL CHIP 1K	5% 1/10W
Q612	8-729-230-49	TRANSISTOR 2SC2712-YG		R062	1-216-057-00	METAL CHIP 2.2K	5% 1/10W
Q513	8-729-010-05	TRANSISTOR MSB709-RT1		R063	1-216-057-00	METAL CHIP 2.2K	5% 1/10W
Q515	8-729-010-05	TRANSISTOR MSB709-RT1		R064	1-216-103-00	METAL CHIP 180K	5% 1/10W
Q516	8-729-010-25	TRANSISTOR MSD601-RT1		R065	1-216-073-00	METAL CHIP 10K	5% 1/10W
Q517	8-729-421-19	TRANSISTOR UN2213		R066	1-216-295-00	METAL CHIP 0	5% 1/10W
Q518	8-729-421-19	TRANSISTOR UN2213		R073	1-216-065-00	METAL CHIP 4.7K	5% 1/10W
Q520	8-729-421-22	TRANSISTOR UN2211		R074	1-216-083-00	METAL CHIP 27K	5% 1/10W
Q621	8-729-026-49	TRANSISTOR 2SA1037AK-T146-QR		R075	1-216-056-00	METAL GLAZE 2K	5% 1/10W
Q522	8-729-027-59	TRANSISTOR DTC144EKA-T146		R076	1-216-093-00	METAL CHIP 68K	5% 1/10W
Q523	8-729-106-68	TRANSISTOR 2SD1615A-GP		R077	1-216-068-00	METAL CHIP 6.2K	5% 1/10W
Q552	8-729-424-18	TRANSISTOR UN2113		R078	1-216-075-00	METAL CHIP 12K	5% 1/10W
Q601	8-729-820-68	TRANSISTOR 2SD1802FA-S		R092	1-216-295-00	METAL CHIP 0	5% 1/10W
Q602	8-729-804-41	TRANSISTOR 2SB1122-S		R094	1-216-296-00	METAL CHIP 0	5% 1/8W
Q651	8-729-012-31	TRANSISTOR 2SC4040-TL2-Q		R095	1-216-296-00	METAL CHIP 0	5% 1/8W
Q652	8-729-012-31	TRANSISTOR 2SC4040-TL2-Q		R096	1-216-296-00	METAL CHIP 0	5% 1/8W
Q653	8-729-900-51	TRANSISTOR DTA114TK		R099	1-216-296-00	METAL CHIP 0	5% 1/8W
Q654	8-729-900-51	TRANSISTOR DTA114TK		R101	1-216-119-00	METAL CHIP 820K	5% 1/10W
Q655	8-729-010-25	TRANSISTOR MSD601-RT1		R102	1-216-093-00	METAL CHIP 68K	5% 1/10W
Q701	8-729-010-05	TRANSISTOR MSB709-RT1		R103	1-216-097-91	METAL GLAZE 100K	5% 1/10W
Q702	8-729-010-05	TRANSISTOR MSB709-RT1		R104	1-216-097-91	METAL GLAZE 100K	5% 1/10W
Q703	8-729-010-05	TRANSISTOR MSB709-RT1		R105	1-216-085-00	METAL CHIP 33K	5% 1/10W
Q704	8-729-010-05	TRANSISTOR MSB709-RT1		R106	1-216-065-00	METAL CHIP 4.7K	5% 1/10W
				R107	1-216-037-00	METAL CHIP 330	5% 1/10W
				R112	1-216-113-00	METAL CHIP 470K	5% 1/10W

Note : The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R113	1-216-089-91	METAL GLAZE	47K	R282	1-216-069-00	METAL CHIP	6.8K
R114	1-216-295-00	METAL CHIP	0	R283	1-216-077-00	METAL CHIP	15K
R202	1-216-073-00	METAL CHIP	10K	R284	1-216-061-00	METAL CHIP	3.3K
R203	1-216-041-00	METAL CHIP	470	R292	1-216-296-00	METAL CHIP	0
R204	1-216-107-00	METAL CHIP	270K	R298	1-216-085-00	METAL CHIP	33K
R205	1-216-095-00	METAL CHIP	82K	R299	1-216-095-00	METAL CHIP	82K
R208	1-216-295-00	METAL CHIP	0	R301	1-216-085-00	METAL CHIP	33K
R211	1-216-041-00	METAL CHIP	470	R302	1-216-049-00	METAL CHIP	1K
R212	1-216-295-00	METAL CHIP	0	R303	1-216-049-00	METAL CHIP	1K
R213	1-216-081-00	METAL CHIP	22K	R304	1-216-073-00	METAL CHIP	10K
R215	1-216-065-00	METAL CHIP	4.7K	R305	1-216-045-00	METAL CHIP	680
R216	1-216-295-00	METAL CHIP	0	R306	1-216-295-00	METAL CHIP	0
R217	1-216-295-00	METAL CHIP	0	R307	1-216-295-00	METAL CHIP	0
R218	1-216-041-00	METAL CHIP	470	R308	1-216-057-00	METAL CHIP	2.2K
R219	1-216-295-00	METAL CHIP	0	R309	1-216-047-91	METAL GLAZE	820
R220	1-216-295-00	METAL CHIP	0	R310	1-216-029-00	METAL CHIP	150
R225	1-216-089-91	METAL GLAZE	47K	R311	1-216-035-00	METAL CHIP	270
R228	1-216-041-00	METAL CHIP	470	R312	1-216-295-00	METAL CHIP	0
R229	1-216-073-00	METAL CHIP	10K	R313	1-216-295-00	METAL CHIP	0
R230	1-216-073-00	METAL CHIP	10K	R314	1-216-295-00	METAL CHIP	0
R231	1-216-295-00	METAL CHIP	0	R315	1-216-295-00	METAL CHIP	0
R232	1-216-041-00	METAL CHIP	470	R316	1-216-295-00	METAL CHIP	0
R233	1-216-041-00	METAL CHIP	470	R317	1-216-097-91	METAL GLAZE	100K
R234	1-216-041-00	METAL CHIP	470	R318	1-216-057-00	METAL CHIP	2.2K
R235	1-216-049-00	METAL CHIP	1K	R319	1-216-117-00	METAL CHIP	680K
R236	1-216-049-00	METAL CHIP	1K	R321	1-216-069-00	METAL CHIP	6.8K
R237	1-216-069-00	METAL CHIP	6.8K	R322	1-216-123-11	METAL CHIP	1.2M
R238	1-216-069-00	METAL CHIP	6.8K	R323	1-216-069-00	METAL CHIP	6.8K
R239	1-216-069-00	METAL CHIP	6.8K	R324	1-216-123-11	METAL CHIP	1.2M
R241	1-216-077-00	METAL CHIP	15K	R325	1-216-049-00	METAL CHIP	1K
R242	1-216-069-00	METAL CHIP	6.8K	R326	1-216-083-00	METAL CHIP	27K
R243	1-216-073-00	METAL CHIP	10K	R327	1-216-079-00	METAL CHIP	18K
R244	1-216-073-00	METAL CHIP	10K	R328	1-216-025-91	METAL GLAZE	100
R245	1-216-077-00	METAL CHIP	15K	R330	1-216-073-00	METAL CHIP	10K
R253	1-216-049-00	METAL CHIP	1K	R331	1-216-045-00	METAL CHIP	680
R254	1-216-065-00	METAL CHIP	4.7K	R332	1-216-045-00	METAL CHIP	680
R255	1-216-073-00	METAL CHIP	10K	R333	1-216-107-00	METAL CHIP	270K
R256	1-249-400-11	CARBON	39	R407	1-216-049-00	METAL CHIP	1K
R257	1-216-057-00	METAL CHIP	2.2K	R408	1-216-295-00	METAL CHIP	0
R258	1-216-689-11	METAL CHIP	39K	R421	1-216-113-00	METAL CHIP	470K
R260	1-216-041-00	METAL CHIP	470	R468	1-216-061-00	METAL CHIP	3.3K
R261	1-216-041-00	METAL CHIP	470	R496	1-216-295-00	METAL CHIP	0
R262	1-249-400-11	CARBON	39	R497	1-216-295-00	METAL CHIP	0
R264	1-216-107-00	METAL CHIP	270K	R499	1-216-296-00	METAL CHIP	0
R265	1-216-107-00	METAL CHIP	270K	R504	1-216-113-00	METAL CHIP	470K
R266	1-249-413-11	CARBON	470	R505	1-216-073-00	METAL CHIP	10K
R267	1-216-089-91	METAL GLAZE	47K	R506	1-216-049-00	METAL CHIP	1K
R268	1-216-089-91	METAL GLAZE	47K	R507	1-216-049-00	METAL CHIP	1K
R270	1-216-069-00	METAL CHIP	6.8K	R508	1-216-295-00	METAL CHIP	0
R271	1-216-061-00	METAL CHIP	3.3K	R509	1-216-295-00	METAL CHIP	0
R272	1-216-061-00	METAL CHIP	3.3K	R546	1-208-845-11	METAL GLAZE	1M
R273	1-216-069-00	METAL CHIP	6.8K	R547	1-216-073-00	METAL CHIP	10K
R274	1-216-061-00	METAL CHIP	3.3K	R560	1-216-063-00	METAL CHIP	27K
R275	1-216-063-91	METAL GLAZE	3.9K	R560	1-216-105-91	METAL GLAZE	220K
R276	1-216-061-00	METAL CHIP	3.3K	R561	1-216-041-00	METAL CHIP	470
R277	1-216-069-00	METAL CHIP	6.8K	R562	1-216-041-00	METAL CHIP	470
R278	1-216-061-00	METAL CHIP	3.3K	R563	1-216-061-00	METAL CHIP	3.3K
R279	1-216-069-00	METAL CHIP	6.8K	R564	1-216-057-00	METAL CHIP	2.2K
R280	1-216-061-00	METAL CHIP	3.3K				
R281	1-216-069-00	METAL CHIP	6.8K				

(AS, MN, NP, NR, UX, VC)

(B)

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R566	1-216-061-00	METAL CHIP	3.3K	R663	1-216-041-00	METAL CHIP	1/10W
R573	1-216-057-00	METAL CHIP	2.2K	R664	1-216-295-00	METAL CHIP	5%
R574	1-216-057-00	METAL CHIP	2.2K	R668	1-216-295-00	METAL CHIP	1/10W
R575	1-216-085-00	METAL CHIP	33K	R670	1-216-174-00	METAL GLAZE	5%
R576	1-216-222-00	METAL GLAZE	10K	R671	1-216-025-91	METAL GLAZE	1/10W
R577	1-216-222-00	METAL GLAZE	10K	R672	1-216-025-91	METAL GLAZE	5%
R578	1-216-057-00	METAL CHIP	2.2K	R673	1-216-025-91	METAL GLAZE	1/10W
R579	1-216-055-00	METAL CHIP	1.8K	R674	1-216-025-91	METAL GLAZE	5%
R580	1-216-025-91	METAL GLAZE	100	R675	1-216-025-91	METAL GLAZE	5%
R581	1-216-053-00	METAL CHIP	1.5K	R681	1-216-113-00	METAL CHIP	1/10W
R583	1-216-047-91	METAL GLAZE	820	R683	1-216-061-00	METAL CHIP	5%
R586	1-216-073-00	METAL CHIP	10K	R685	1-216-295-00	METAL CHIP	1/10W
R587	1-216-073-00	METAL CHIP	10K	R701	1-216-049-00	METAL CHIP	5%
R588	1-216-065-00	METAL CHIP	4.7K	R702	1-216-049-00	METAL CHIP	1K
R591	1-216-063-91	METAL GLAZE	3.9K	R703	1-208-782-11	METAL GLAZE	5%
R594	1-216-025-91	METAL GLAZE	100	R704	1-208-782-11	METAL GLAZE	0.50%
R595	1-216-041-00	METAL CHIP	470	R705	1-216-073-00	METAL CHIP	1/10W
R596	1-216-041-00	METAL CHIP	470	R706	1-208-782-11	METAL GLAZE	5%
R597	1-216-053-00	METAL CHIP	1.5K	R707	1-208-782-11	METAL GLAZE	0.50%
R598	1-216-049-00	METAL CHIP	1K	R708	1-216-057-00	METAL CHIP	1/10W
R599	1-216-059-00	METAL CHIP	2.7K	R709	1-216-041-00	METAL CHIP	5%
R601	1-216-049-00	METAL CHIP	1K	R710	1-216-041-00	METAL CHIP	1/10W
R602	1-216-049-00	METAL CHIP	1K	R711	1-216-097-91	METAL GLAZE	5%
R603	1-216-073-00	METAL CHIP	10K	R712	1-216-097-91	METAL GLAZE	5%
R604	1-216-050-00	METAL GLAZE	1.1K	R713	1-216-053-00	METAL CHIP	1/10W
R605	1-216-079-00	METAL CHIP	18K	R714	1-216-053-00	METAL CHIP	5%
R606	1-216-067-00	METAL CHIP	5.6K	R715	1-216-053-00	METAL CHIP	1/10W
R607	1-208-808-11	METAL GLAZE	12K	R716	1-216-053-00	METAL CHIP	5%
R608	1-216-081-00	METAL CHIP	22K	R717	1-216-041-00	METAL CHIP	0.50%
R609	1-208-804-11	METAL GLAZE	8.2K	R718	1-216-041-00	METAL CHIP	1/10W
R610	1-216-079-00	METAL CHIP	18K	R719	1-216-037-00	METAL CHIP	5%
R611	1-216-067-00	METAL CHIP	5.6K	R720	1-216-061-00	METAL CHIP	1/10W
R613	1-216-050-00	METAL GLAZE	1.1K	R721	1-216-065-00	METAL CHIP	5%
R614	1-216-129-00	METAL CHIP	2.2M	R723	1-208-782-11	METAL GLAZE	1K
R615	1-216-059-00	METAL CHIP	6.8K	R724	1-208-782-11	METAL GLAZE	0.50%
R616	1-216-073-00	METAL CHIP	10K	R725	1-216-073-00	METAL CHIP	1/10W
R617	1-216-109-00	METAL CHIP	330K	R726	1-208-793-11	METAL GLAZE	5%
R618	1-216-041-00	METAL CHIP	470	R727	1-208-782-11	METAL GLAZE	0.50%
R619	1-216-089-91	METAL GLAZE	47K	R728	1-216-073-00	METAL CHIP	1/10W
R620	1-216-099-00	METAL CHIP	120K	R801	1-216-109-00	METAL CHIP	5%
R621	1-216-081-00	METAL CHIP	22K	R803	1-216-057-00	METAL CHIP	1/10W
R622	1-216-083-00	METAL CHIP	27K	R804	1-216-073-00	METAL CHIP	5%
R623	1-216-065-00	METAL CHIP	4.7K	R805	1-216-073-00	METAL CHIP	1/10W
R624	1-216-073-00	METAL CHIP	10K	R806	1-216-073-00	METAL CHIP	5%
R625	1-216-278-11	METAL GLAZE	2.2M	R807	1-216-073-00	METAL CHIP	1/10W
R626	1-216-069-00	METAL CHIP	6.8K	R808	1-216-073-00	METAL CHIP	5%
R627	1-216-057-00	METAL CHIP	2.2K	R809	1-216-073-00	METAL CHIP	1/10W
R628	1-216-025-91	METAL GLAZE	100	R811	1-216-017-91	METAL GLAZE	5%
R629	1-216-025-91	METAL GLAZE	100	R812	1-216-113-00	METAL CHIP	1/10W
R630	1-216-113-00	METAL CHIP	470K	R813	1-216-041-00	METAL CHIP	5%
R651	1-216-069-00	METAL CHIP	6.8K	R808	1-216-073-00	METAL CHIP	1/10W
R652	1-249-395-11	CARBON	15	R809	1-216-073-00	METAL CHIP	5%
R653	1-216-073-00	METAL CHIP	10K	R811	1-216-017-91	METAL GLAZE	1/10W
R654	1-216-083-00	METAL CHIP	27K	R812	1-216-113-00	METAL CHIP	5%
R655	1-249-394-11	CARBON	12	R813	1-216-041-00	METAL CHIP	1/10W
R656	1-216-295-00	METAL CHIP	0	R814	1-216-095-00	METAL CHIP	5%
R657	1-216-089-91	METAL GLAZE	47K	R818	1-216-041-00	METAL CHIP	1/10W
R659	1-216-073-00	METAL CHIP	10K	R819	1-216-089-91	METAL GLAZE	5%
R661	1-216-073-00	METAL CHIP	10K	R822	1-216-041-00	METAL CHIP	1/10W
R662	1-216-041-00	METAL CHIP	470	R823	1-216-041-00	METAL CHIP	5%
				R826	1-216-041-00	METAL CHIP	1/10W
				R827	1-216-049-00	METAL CHIP	5%
				R828	1-216-041-00	METAL CHIP	1/10W
				R829	1-216-041-00	METAL CHIP	5%
				R830	1-216-041-00	METAL CHIP	1/10W

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
Δ F301	1-532-203-00	FUSE		C133	1-162-970-11	CERAMIC CHIP	10%
				C134	1-162-964-11	CERAMIC CHIP	10%
				C135	1-162-970-11	CERAMIC CHIP	10%
				C136	1-162-970-11	CERAMIC CHIP	10%
				C137	1-162-970-11	CERAMIC CHIP	10%
				C138	1-164-004-11	CERAMIC CHIP	10%
				C139	1-162-969-11	CERAMIC CHIP	10%
				C141	1-104-852-11	TANTAL. CHIP	20%
				C142	1-164-156-11	CERAMIC CHIP	10%
				C143	1-162-970-11	CERAMIC CHIP	10%
IC402	8-759-513-71	IC P005RF21				< CONNECTOR >	
				CN101	1-766-341-21	CONNECTOR, FFC/FFC 11P	
				CN102	1-770-700-11	CONNECTOR, FFC/FFC 17P	
				CN301	1-766-340-21	CONNECTOR, FFC/FFC 10P	
				CN302	1-770-690-11	CONNECTOR, FFC/FFC 7P	
						< DIODE >	
Δ LF301	1-403-599-11	FILTER, LINE 33MH		D101	8-719-059-51	DIODE MA3J142E0LSO	
Δ LF302	1-403-599-11	FILTER, LINE 33MH				< IC >	
Δ PS401	1-532-984-11	LINK, IC		IC101	8-752-069-78	IC CXA1704R-T4	
Δ PS410	1-532-605-00	LINK, IC 0.4A				< COIL >	
						< RESISTOR >	
Δ R301	1-202-724-00	SOLID	2.7M	L101	1-412-066-21	INDUCTOR CHIP	220uH
Δ R305	1-217-294-00	WIREWOUND	4.7	L102	1-412-951-11	INDUCTOR	10uH
R404	1-216-089-91	METAL GLAZE	47K	L103	1-412-066-21	INDUCTOR CHIP	220uH
R405	1-216-295-00	METAL CHIP	0	L104	1-412-066-21	INDUCTOR CHIP	220uH
				L106	1-412-060-11	INDUCTOR CHIP	220uH
						< TRANSISTOR >	
* A-7066-885-A	RP-211 (T) BOARD, COMPLETE			Q101	8-729-420-24	TRANSISTOR 2SB1218A-QRS	
	*****			Q102	8-729-420-24	TRANSISTOR 2SB1218A-QRS	
	(Ref.No.: 1,000 Series)			Q103	8-729-420-24	TRANSISTOR 2SB1218A-QRS	
				Q104	8-729-402-42	TRANSISTOR UN5213	
				Q105	8-729-402-42	TRANSISTOR UN5213	
						< CAPACITOR >	
C102	1-164-004-11	CERAMIC CHIP	0.1uF	Q106	8-729-012-50	TRANSISTOR 2SC4400-3/4/5	
C103	1-162-927-11	CERAMIC CHIP	100PF	Q107	8-729-230-63	TRANSISTOR 2SC4116-YG	
C104	1-162-926-11	CERAMIC CHIP	82PF	Q108	8-729-230-63	TRANSISTOR 2SC4116-YG	
C105	1-164-217-11	CERAMIC CHIP	150PF	Q109	8-729-402-42	TRANSISTOR UN5213	
C106	1-162-927-11	CERAMIC CHIP	100PF			< RESISTOR >	
C108	1-162-911-11	CERAMIC CHIP	6PF	R101	1-216-839-11	METAL CHIP	38K
C109	1-162-970-11	CERAMIC CHIP	0.01uF	R102	1-216-837-11	METAL CHIP	22K
C110	1-162-970-11	CERAMIC CHIP	0.01uF	R103	1-216-813-11	METAL CHIP	220
C111	1-164-227-11	CERAMIC CHIP	0.022uF	R104	1-216-814-11	METAL CHIP	270
C112	1-164-227-11	CERAMIC CHIP	0.022uF	R105	1-216-829-11	METAL CHIP	4.7K
C113	1-162-970-11	CERAMIC CHIP	0.01uF			< RESISTOR >	
C114	1-164-156-11	CERAMIC CHIP	0.1uF	R106	1-216-825-11	METAL CHIP	2.2K
C115	1-162-970-11	CERAMIC CHIP	0.01uF	R107	1-216-864-11	METAL CHIP	0
C116	1-164-156-11	CERAMIC CHIP	0.1uF	R108	1-216-864-11	METAL CHIP	0
C117	1-104-852-11	TANTAL. CHIP	22uF	R109	1-216-840-11	METAL CHIP	39K
				R110	1-216-825-11	METAL CHIP	2.2K
C118	1-104-852-11	TANTAL. CHIP	22uF			< RESISTOR >	
C119	1-162-959-11	CERAMIC CHIP	330PF	R111	1-216-807-11	METAL CHIP	68
C120	1-162-970-11	CERAMIC CHIP	0.01uF	R112	1-216-864-11	METAL CHIP	0
C122	1-135-259-11	TANTAL. CHIP	10uF	R113	1-216-840-11	METAL CHIP	39K
C123	1-162-959-11	CERAMIC CHIP	330PF	R114	1-216-825-11	METAL CHIP	2.2K
				R115	1-216-827-11	METAL CHIP	3.3K
C127	1-162-970-11	CERAMIC CHIP	0.01uF			< RESISTOR >	
C128	1-162-970-11	CERAMIC CHIP	0.01uF			< RESISTOR >	
C129	1-135-259-11	TANTAL. CHIP	10uF			< RESISTOR >	
C130	1-162-970-11	CERAMIC CHIP	0.01uF			< RESISTOR >	
C132	1-162-970-11	CERAMIC CHIP	0.01uF			< RESISTOR >	

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C528	1-165-321-11	CERAMIC CHIP	10%	C958	1-216-295-00	METAL CHIP	1/10W
C529	1-164-232-11	CERAMIC CHIP	0.01uF	C961	1-164-232-11	CERAMIC CHIP	0.01uF
C530	1-164-232-11	CERAMIC CHIP	0.01uF	C971	1-163-239-11	CERAMIC CHIP	33PF
C531	1-164-346-11	CERAMIC CHIP	1uF	C972	1-163-259-91	CERAMIC CHIP	220PF
C532	1-164-346-11	CERAMIC CHIP	1uF	C985	1-163-227-11	CERAMIC CHIP	10PF
C534	1-163-038-00	CERAMIC CHIP	0.1uF	C986	1-163-231-11	CERAMIC CHIP	15PF
C536	1-164-232-11	CERAMIC CHIP	0.01uF	C987	1-163-035-00	CERAMIC CHIP	0.047uF
C538	1-163-037-11	CERAMIC CHIP	0.022uF	C988	1-164-232-11	CERAMIC CHIP	0.01uF
C541	1-164-004-11	CERAMIC CHIP	0.1uF	C989	1-163-035-00	CERAMIC CHIP	0.047uF
C542	1-163-037-11	CERAMIC CHIP	0.022uF	C990	1-164-346-11	CERAMIC CHIP	1uF
C546	1-163-263-11	CERAMIC CHIP	330PF	C991	1-164-346-11	CERAMIC CHIP	1uF
C547	1-163-239-11	CERAMIC CHIP	33PF	C992	1-164-232-11	CERAMIC CHIP	0.01uF
C550	1-164-004-11	CERAMIC CHIP	0.1uF	C993	1-164-232-11	CERAMIC CHIP	0.01uF
C551	1-164-232-11	CERAMIC CHIP	0.01uF			< CONNECTOR >	
C552	1-164-232-11	CERAMIC CHIP	0.01uF			< CONNECTOR, FCC/FPC 13P	
C562	1-164-004-11	CERAMIC CHIP	0.1uF	CND01	1-766-986-11	CONNECTOR, FCC/FPC 13P	
C563	1-163-251-11	CERAMIC CHIP	100PF	* CND02	1-564-029-00	PIN, CONNECTOR 4P	
C564	1-164-232-11	CERAMIC CHIP	0.01uF	CN901	1-573-834-11	CONNECTOR, BOARD TO BOARD 20P	
C565	1-164-182-11	CERAMIC CHIP	0.033uF	CN902	1-573-834-11	CONNECTOR, BOARD TO BOARD 20P	
C570	1-163-035-00	CERAMIC CHIP	0.047uF			< DIODE >	
C591	1-163-222-11	CERAMIC CHIP	5PF	D501	8-719-404-49	DIODE MA111	
C610	1-164-232-11	CERAMIC CHIP	0.01uF	D503	8-719-404-49	DIODE MA111	
C612	1-164-232-11	CERAMIC CHIP	0.01uF	D505	8-719-404-49	DIODE MA111	
C901	1-164-232-11	CERAMIC CHIP	0.01uF	D506	8-719-801-78	DIODE 1SS184	
C902	1-126-967-11	ELECT	47uF	D951	8-719-800-76	DIODE 1SS226	
C903	1-124-290-00	ELECT	47uF			< IC >	
C904	1-126-967-11	ELECT	47uF	IC001	8-759-352-17	IC HA118195NT	
C905	1-126-967-11	ELECT	47uF	IC051	8-759-055-49	IC AN327K	
C910	1-164-232-11	CERAMIC CHIP	0.01uF	IC401	8-759-333-99	IC LA7356M (B)	
C911	1-163-227-11	CERAMIC CHIP	10PF	IC451	1-809-959-12	IC TME656 (B)	
C912	1-163-257-11	CERAMIC CHIP	180PF	IC501	8-759-349-60	IC LA7436AM-N-MPB	
C913	1-163-243-11	CERAMIC CHIP	47PF	IC502	8-752-373-18	IC CXL1511M-T6	
C921	1-163-235-11	CERAMIC CHIP	22PF	IC931	8-759-352-18	IC M52374SP	
C922	1-163-239-11	CERAMIC CHIP	33PF			< COIL >	
C923	1-163-251-11	CERAMIC CHIP	100PF	L021	1-410-482-31	INDUCTOR	100uH
C924	1-163-127-00	CERAMIC CHIP	270PF	L022	1-410-391-11	INDUCTOR CHIP	68uH (B)
C924	1-163-127-00	CERAMIC CHIP	270PF	L023	1-410-482-31	INDUCTOR	100uH
C924	1-163-127-00	CERAMIC CHIP	270PF	L024	1-410-658-31	INDUCTOR CHIP	220uH
C924	1-163-127-00	CERAMIC CHIP	270PF	L051	1-410-482-31	INDUCTOR	100uH
C924	1-163-127-00	CERAMIC CHIP	270PF	L351	1-410-389-31	INDUCTOR CHIP	47uH
C924	1-163-127-00	CERAMIC CHIP	270PF	L401	1-414-398-11	INDUCTOR	10uH (B)
C924	1-163-127-00	CERAMIC CHIP	270PF	L502	1-410-388-31	INDUCTOR CHIP	39uH
C924	1-163-127-00	CERAMIC CHIP	270PF	L503	1-410-388-31	INDUCTOR CHIP	39uH
C924	1-163-127-00	CERAMIC CHIP	270PF	L504	1-410-388-31	INDUCTOR CHIP	39uH
C924	1-163-127-00	CERAMIC CHIP	270PF	L505	1-410-387-11	INDUCTOR CHIP	33uH (B)
C924	1-163-127-00	CERAMIC CHIP	270PF	L901	1-410-470-11	INDUCTOR	10uH
C924	1-163-127-00	CERAMIC CHIP	270PF	L902	1-414-398-11	INDUCTOR	10uH
C924	1-163-127-00	CERAMIC CHIP	270PF	L903	1-410-470-11	INDUCTOR	10uH
C924	1-163-127-00	CERAMIC CHIP	270PF	L911	1-410-655-31	INDUCTOR CHIP	120uH
C932	1-163-237-11	CERAMIC CHIP	27PF	L921	1-410-385-11	INDUCTOR CHIP	22uH
C933	1-216-295-00	METAL CHIP	0	L922	1-410-657-21	INDUCTOR CHIP	180uH (B)
C935	1-164-232-11	CERAMIC CHIP	0.01uF	L922	1-410-658-31	INDUCTOR CHIP	220uH
C936	1-163-009-11	CERAMIC CHIP	0.001uF	L931	1-410-482-31	INDUCTOR	100uH
C937	1-164-232-11	CERAMIC CHIP	0.01uF	L933	1-410-390-11	INDUCTOR CHIP	56uH
C938	1-164-232-11	CERAMIC CHIP	0.01uF	L952	1-412-282-41	INDUCTOR	470uH
C939	1-164-232-11	CERAMIC CHIP	0.01uF	L971	1-410-380-31	INDUCTOR CHIP	8.2uH
C940	1-164-004-11	CERAMIC CHIP	0.1uF			(AS, MN, NPAR, UX, VC)	
C941	1-164-232-11	CERAMIC CHIP	0.01uF				
C942	1-164-232-11	CERAMIC CHIP	0.01uF				
C946	1-126-967-11	ELECT	47uF				
C947	1-164-232-11	CERAMIC CHIP	0.01uF				
C952	1-164-232-11	CERAMIC CHIP	0.01uF				
C956	1-104-760-11	CERAMIC CHIP	0.047uF				
C957	1-164-232-11	CERAMIC CHIP	0.01uF				

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R611	1-216-069-00	METAL CHIP	6.8K	Δ CP401	1-468-034-21	POWER BLOCK(SR665) *****	
R613	1-216-085-00	METAL CHIP	33K				
R614	1-216-081-00	METAL CHIP	22K				
R615	1-216-049-00	METAL CHIP	1K				
R620	1-216-295-00	METAL CHIP	0			< CAPACITOR >	
R901	1-216-057-00	METAL CHIP	2.2K	C202	1-111-044-11	ELECT	2200uF
R905	1-216-091-00	METAL CHIP	56K	C203	1-111-019-11	ELECT	2200uF
R911	1-216-653-11	METAL CHIP	1.2K	C204	1-111-019-11	ELECT	2200uF
R913	1-208-772-11	METAL GLAZE	390	C207	1-111-035-11	ELECT	330uF
R920	1-216-295-00	METAL CHIP	0			< DIODE >	
R921	1-216-065-00	METAL CHIP	1.8K	D101	8-719-054-32	DIODE ERA15-06	
R922	1-216-067-00	METAL CHIP	5.6K	D102	8-719-030-24	DIODE EG01C	
R923	1-216-081-00	METAL CHIP	22K	D103	8-719-920-32	DIODE ERA16-02	
R924	1-216-081-00	METAL CHIP	22K	D105	8-719-038-80	DIODE RD3.0ES	
R925	1-216-045-00	METAL CHIP	680	D106	8-719-038-80	DIODE RD3.0ES	
R926	1-216-051-00	METAL CHIP	1.2K	D202	8-719-050-64	DIODE SF5LC20U	
R927	1-216-049-00	METAL CHIP	1K	D203	8-719-062-28	DIODE SF10SG4	
R928	1-216-667-11	METAL CHIP	4.7K	D204	8-719-059-45	DIODE AU02Z	
R929	1-216-295-00	METAL CHIP	0	D205	8-719-160-62	DIODE RD15FB	
R930	1-216-295-00	METAL CHIP	0			< IC >	
R935	1-216-049-00	METAL CHIP	1K	IC201	8-759-064-03	IC AN1431	
R936	1-216-049-00	METAL CHIP	1K			< TRANSISTOR >	
R945	1-216-067-00	METAL CHIP	5.6K				
R946	1-216-075-00	METAL CHIP	12K				
R949	1-216-031-00	METAL CHIP	180				
R951	1-216-065-00	METAL CHIP	4.7K	Q102	8-729-281-53	TRANSISTOR 2SC1815GR	
R952	1-216-045-00	METAL CHIP	680	Q103	8-729-012-30	TRANSISTOR 2SC4040	
R953	1-216-069-00	METAL CHIP	6.8K	Q104	8-729-012-30	TRANSISTOR 2SC4040	
R954	1-216-065-00	METAL CHIP	4.7K			< RESISTOR >	
R955	1-216-037-00	METAL CHIP	330				
R956	1-216-033-00	METAL CHIP	220	R113	1-247-827-11	CARBON	680 5% 1/4W
R962	1-216-075-00	METAL CHIP	12K	R114	1-247-828-11	CARBON	750 5% 1/4W
R963	1-216-077-00	METAL CHIP	15K	R203	1-247-835-11	CARBON	1.5K 5% 1/4W
R967	1-216-057-00	METAL CHIP	2.2K				
R968	1-216-295-00	METAL CHIP	0				
R973	1-216-041-00	METAL CHIP	470				
R980	1-216-081-00	METAL CHIP	22K				
R981	1-216-107-00	METAL CHIP	270K				
R983	1-216-295-00	METAL CHIP	0				
R984	1-216-295-00	METAL CHIP	0				
R985	1-216-045-00	METAL CHIP	680				
R986	1-216-075-00	METAL CHIP	12K				
R988	1-216-069-00	METAL CHIP	6.8K				
R989	1-216-295-00	METAL CHIP	0				
R990	1-216-071-00	METAL CHIP	8.2K				
R991	1-216-045-00	METAL CHIP	680				
R992	1-216-029-00	METAL CHIP	150				
R996	1-216-295-00	METAL CHIP	0				
R997	1-216-077-00	METAL CHIP	15K				
R998	1-216-295-00	METAL CHIP	0				
						< VIBRATOR >	
X502	1-579-608-11	VIBRATOR, CRYSTAL 4.433619MHZ					

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>
		MISCELLANEOUS *****				ACCESSORIES & PACKING MATERIALS *****	
16	1-777-675-11	CABLE, FLAT (FUF-19) 5P		Δ	1-574-056-11	CORD, POWER (B,NP,NR,VC)	
17	1-777-671-11	CABLE, FLAT (FUF-17)		Δ	1-575-131-11	CORD, POWER SUPPLY (AS,MN)	
18	1-762-844-21	SWITCH, ROTARY			1-575-334-11	CORD, CONNECTION(FOR VIDEO/AUDIO) 1.5m	
53	1-777-669-11	CABLE, FLAT (FMR-5)			1-575-335-21	CORD, CONNECTION(FOR S VIDEO) 1.5m	
54	1-777-668-11	CABLE, FLAT (FMR-4)			1-696-593-11	CORD, CONNECTION (PAL)(FOR RF) 1.5m	
59	1-777-674-11	CABLE, FLAT (FMC-9) 15P		Δ	1-696-819-11	CORD, POWER (AS,MN)	
60	1-777-673-11	CABLE, FLAT (FMC-8) 23P			1-770-321-11	ADAPTOR, CONVERSION 6P (AS,MN)	
61	1-764-137-11	CONNECTOR, TRANSLATION 15P		Δ	1-775-843-11	CORD, POWER (WITH FILTER) (UX)	
62	1-777-667-11	CABLE, FLAT (FMD-10)			3-858-679-11	MANUAL, INSTRUCTION(ENGLISH)(UX)	
103	1-777-340-11	CABLE, FLAT (FMD-11) 19P			3-858-679-21	MANUAL, INSTRUCTION(FRENCH)(B)	
105	1-777-848-11	CABLE, FLAT (FMM-20)			3-859-667-11	MANUAL, INSTRUCTION(FRENCH)(NP,VC)	
158	1-500-144-11	HEAD, FE			3-859-667-21	MANUAL, INSTRUCTION(GERMAN)(NP,VC)	
203	8-848-622-02	UPPER DRUM ASSY DZR-66-R			3-859-667-31	MANUAL, INSTRUCTION(SPANISH)(NP)	
221	8-848-666-11	LOWER DRUM ASSY DZL-51B/J-RP(M901)			3-859-667-41	MANUAL, INSTRUCTION(DUTCH)(VC)	
260	1-762-076-11	SWITCH, ROTARY			3-859-667-51	MANUAL, INSTRUCTION(SWEDISH)(NR)	
518	1-682-498-11	SWITCH, ROTARY			3-859-667-61	MANUAL, INSTRUCTION(ITALIAN)(NP,VC)	
M902	1-698-409-14	MOTOR, DC(CAPSTAN)			3-859-667-71	MANUAL, INSTRUCTION(PORTUGUESE)(NP)	
M903	X-3943-883-1	MOTOR ASSY, CAM			3-859-667-81	MANUAL, INSTRUCTION(FINNISH)(NR)	
M904	A-7048-853-A	DRUM ASSY DGH-0D8A-R			3-859-667-91	MANUAL, INSTRUCTION(DANISH)(NR)	
M905	8-835-499-01	MOTOR, DC SCE-0501A(CAPSTAN)			3-860-334-11	MANUAL, INSTRUCTION(ENGLISH)(AS,MN)	
M906	X-3942-946-1	MOTOR ASSY, CAM					
				*	3-974-297-01	CUSHION (UPPER)	
				*	3-974-298-01	CUSHION (LOWER)	
				*	3-974-299-01	INDIVIDUAL CARTON (UX)	
				*	3-974-299-11	INDIVIDUAL CARTON (NP,NR,VC)	
				*	3-974-299-21	INDIVIDUAL CARTON (B)	
				*	3-977-832-01	INDIVIDUAL CARTON (MN)	
				*	3-977-832-11	INDIVIDUAL CARTON (AS)	

HARDWARE LIST							

#1	7-682-547-04	SCREW +P 3X6					
#2	7-685-646-79	SCREW (3X8)					
#3	7-682-548-04	SCREW +P 3X8					
#4	7-682-948-01	SCREW +PSW 3X8					
#9	7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3					
#12	7-688-001-01	W 2, MIDDLE					
#13	7-688-003-01	W 3, SMALL					
#14	7-621-772-08	SCREW +B 2X3					

Note : The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

SECTION 6
INTERFACE, IC PIN FUNCTION DESCRIPTION

6-1. Video 8 SYSTEM
6-1-1. Interface between Video 8 system control and video, audio block (MH-18 board IC002)

Signal name	Pin No.	I/O	VTR mode																
			REC PAUSE	REC	REVERSE	SLOW	PAUSE	REVERSE	SLOW	PAUSE	REVERSE	SLOW	PAUSE	REVERSE	SLOW	PAUSE	REC PAUSE		
SPLF	IC002 ③	0	*1	H	H	H	H	H	H	H	H	H	H	H	H	H	H/L		
VA PB MODE	IC002 ②	0	0	L	L	L	L	L	L	L	L	L	L	L	L	L	L		
Jog VD *3	IC002 ③	0	0	L	L	L	L	L	L	L	L	L	L	L	L	L	L		
RP PB MODE	IC002 ④	0	0	L	L	L	L	L	L	L	L	L	L	L	L	L	L		
FB ON	IC002 ⑤	0	0	H	H	H	H	H	H	H	H	H	H	H	H	H	L		
RF SWP	IC002 ⑥	0	0	L	L	L	L	L	L	L	L	L	L	L	L	L	*4		
Jog	IC002 ⑦	0	0	L	L	L	L	L	L	L	L	L	L	L	L	L	L		
PB SP DET	IC002 ⑧	1	1	L	L	L	L	L	L	L	L	L	L	L	L	L	H		
CLOG DET	IC002 ⑨	1	1	H	H	H	H	H	H	H	H	H	H	H	H	H	H		
V SYNC	IC002 ⑩	1	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7		
AUDIO PB	IC002 ⑪	0	0	L	L	L	L	L	L	L	L	L	L	L	L	L	L		
AUDIO MUTE	IC002 ⑫	0	0	L	L	L	L	L	L	L	L	L	L	L	L	L	L		
VIDEO CS	IC002 ⑬	0	0	"L" pulse train of vertical interval															
C SO2	IC002 ⑭	0	0	Pulse train of vertical interval															
SK2	IC002 ⑮	0	0	"L" pulse train of vertical interval															

- *1: Outputs the identification result of the immediately previous mode.
- *2: Outputs the identification result of the recording mode of a playback tape.
- *3: SP mode at H and LP mode at L.
- *4: Outputs the identification result of the immediately previous mode.
- *5: The SF recorded segment of a tape: H, LP recorded segment: L.
- *6: 25 Hz pulse with 50 % duty cycle. (Synchronized with rotation of drum).
- *7: Pseudo VD signal.
- *8: Ring shuttle mode from REC PAUSE: L, Other modes: H.
- *9: Recording time (SP), SF mode: H.

6-1-2. Interface between Video 8 servo control and servo block (MH-18 board IC002)

Signal name	Pin No.	VO	STOP	FF	REW	*2 *4 *2	VTR mode		*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1		
							PICTURE SEARCH	PAUSE																		
Z.REEL FG	IC002 ⑩	1	—	*1	*1	*1	*1	*1	—	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	—
S.REEL FG	IC002 ⑪	1	—	*1	*1	*1	*1	*1	—	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	—
ATF ERROR	IC002 ⑫	1	—	*2	*2	*2	*2	*2	—	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2
DRUM PG	IC002 ⑬	1	—	*3	*3	*3	*3	*3	—	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3
DRUM FG	IC002 ⑭	1	—	*4	*4	*4	*4	*4	—	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4
CAP FGH/MS CAP FG	IC002 ⑮⑯	1	—	*5	*5	*5	*5	*5	—	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	—
CAP ON	IC002 ⑰	0	L	H	H	H	H	H	L	*8	*8	*8	*8	*8	*8	*8	*8	*8	*8	*8	*8	*8	*8	*8	*8	L
REF PILOT	IC002 ⑱	0	*7	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6
DRUM RVS *11	IC002 ⑲	0	L	L	L	L	L	L	L	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	L
CAP FWD	IC002 ⑳	0	L	H	L	L	L	L	L	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	L
DRUM PWM	IC002 ㉑	0	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10
CAP PWM	IC002 ㉒	0	L	L	L	L	L	L	L	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	L

- *1. The pulse is input whose cycle corresponds to the reel rotation.
- *2. ATF error voltage input.
- *3. Approx. 25 Hz.
- *4. Approx. 300 Hz.
- *5. Approx. 560 Hz during REC/PB (SP).
- *6. The four frequencies which are synchronized with drum rotation are output. (f1 = 101.02 kHz, f2 = 117.18 kHz, f3 = 162.76 kHz, f4 = 146.48 kHz, f5 = 101.02 kHz).
- *7. (f1 = 101.02 kHz and f3 = 162.76 kHz are output.
- *8. "H" pulse during tape is advanced.
- *9. "L" pulse during tape is advanced.
- *10. PWM signal.
- *11. Normally "L". Temporarily "H" only during transition of FF → PB, FF → STOP, FF → CUE. (Drum rotation is reversed).

6-2. VHS SYSTEM

6-2-1. Interface between VHS system control and video block (MV-34 board IC201)

Signal name	Pin No.	VO	STOP/FF/REW	TAPE THREAD-ING	TAPE UNTHREAD-ING	PB	PB	SLOW	× 2	CUE	REVIEW	REC	REC. PAUSE
V. PB	IC201 ①	0	H	H	L	L	L	L	L	L	L	H	H
RF SW F (SW30)	IC201 ②	0	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1
Q V/DV MUTE	IC201 ③	0	L	L	L	L	L	L	L	L	L	L	L
SP	IC201 ④	0	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4
LP	IC201 ⑤	0	L	L	L	L	L	L	L	L	L	L	L
REC	IC201 ⑥	0	L	L	L	L	L	L	L	L	L	L	L
V SYNC	IC201 ⑦	1	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7
CTL REC	IC201 ⑧	0	L	L	L	L	L	L	L	L	L	L	L
LOG	IC201 ⑨	0	L	L	L	L	L	L	L	L	L	L	L
ORC SETTEI	IC201 ⑩	0	L	L	L	L	L	L	L	L	L	L	L

- *1. 25 Hz pulse with 50% duty cycle. Synchronized with rotation of drum.
- *2. Normally "L". "H" when CTL signal is not played back.
- *3. Normally "L". "H" pulse of vertical rate.
- *4. Selected by the recording time (SP/LP). "L" during SP mode.
- *5. Selected by the tape recording mode.

Recording mode	SP	LP
	L	H
Signal	SP	LP
	L	H

6-2-2. Interface between VHS system control and servo peripheral circuit (MV-34 board IC201)

Signal name	Pin No.	VO	STOP	FF	REW	TAPE THREAD-ING	TAPE THREAD-UNTREAD-ING	PB	PB-PAUSE	× 2 SLOW	× 2 CUE	REVIEW	REC	REC-PAUSE	PB INDEX WRITERS
REC CTL	IC201 ①	0	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	
CAP STOP	IC201 ②	0 (O.D.)	L	HI-Z (O.D)	HI-Z (O.D)	HI-Z (O.D)	HI-Z (O.D)	L	HI-Z (O.D)	HI-Z (O.D)	HI-Z (O.D)	HI-Z (O.D)	HI-Z (O.D)	HI-Z (O.D)	
STEP PLS	IC201 ③	0	L	L	L	L	L	L	L	L	L	L	L	L	
CTL REC	IC201 ④	0	L	L	L	L	L	L	L	L	L	L	L	L	H
CTL INDEX	IC201 ⑤	0	L	L	L	L	L	L	L	L	L	L	L	L	H
PB CTL	IC201 ⑥	1	H	*6	*6		*1	H/L	*2	*6	*6	*6	*1	H	
DRUM FG	IC201 ⑦	1	*4	*7	*7	*5	*7	*7	*7	*7	*7	*7	*7	H	
DRUM FG	IC201 ⑧	1	*4	*8	*8	*5	*8	*8	*8	*8	*8	*8	*8	H	
CAP FG	IC201 ⑨	1	H/L	*6	*6	*5	*6	H/L	*9	*6	*6	*6	H/L		
CAP DA	IC201 ⑩	0	*10	*10	*10	*10	*11	*10	*10	*11	*11	*11	*11		
DRUM DA	IC201 ⑪	0	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12		
CTL STEP	IC201 ⑫	0	L	L	L	L	L	L	L	L	L	L	L	L	

*1. 25 Hz pulse.

*8. 300 Hz pulse.

*2. Pulse which occurs while tape is running.

*9. Pulse which occurs while tape is running.

*3. Inverted logic pulse of stop pulse.

*10. "H" or "L" pulse of about 2 ms rate.

*11. "H" or "L" pulse of about 1.5 ms rate.

*5. Random pulse.

*12. "H" or "L" pulse of about 3 ms rate.

*13. "H" during forward direction and during stop drive.

*7. 25 Hz pulse.

*6. The pulse whose cycle is proportional to tape speed.

6-2-3. Interface between system control and mechanism block (MV-34 board IC201)

Signal name	Pin No.	VO	EJECTED	CASSETTE LOADING	CASSETTE UNLOADING	TAPE THREAD-UNTREAD-ING	TAPE THREAD-UNTREAD-ING	STOP	FF	REW	PB	PB-PAUSE	× 2 SLOW	REVIEW	REC	REC-PAUSE
CAM LOAD	IC201 ①	0	L	H	L	L	L	L	L	L	L	L	L	L	L	L
CAM UNLOAD	IC201 ②	0	L	H	L	L	L	L	L	L	L	L	L	L	L	L
CAM 12V	IC201 ③	0	H	H	H	L	L	L	L	L	L	L	L	L	L	L
MODE 1	IC201 ④	1	H	L	L	L	L	L	L	H	H	H	H	H	H	H
MODE 2	IC201 ⑤	1	L	L	L	L	L	L	L	L	L	L	L	L	L	L
MODE 3	IC201 ⑥	1	L	L	L	L	L	L	L	L	L	L	L	L	L	L
MODE 4	IC201 ⑦	1	L	H	H	H	H	H	H	H	H	H	H	H	H	H
C IN/REC PRF	IC201 ⑧	1	L	L	L	L	L	L	L	L	L	L	L	L	L	L
T REEL FG	IC201 ⑨	1	H/L	H/L	H/L	H/L	H/L	H/L	H/L	H/L	H/L	H/L	H/L	H/L	H/L	H/L
S REEL FG	IC201 ⑩	1	H/L	H/L	H/L	H/L	H/L	H/L	H/L	H/L	H/L	H/L	H/L	H/L	H/L	H/L
T/LED	IC201 ⑪	0 (O.D.)	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3
CAP TRQ 1	IC201 ⑫	0 (O.D.)														
CAP TRQ 2	IC201 ⑬	0 (O.D.)														
CAP TRQ 3	IC201 ⑭	0 (O.D.)														
CAP STOP	IC201 ⑮	0 (O.D.)	L	L	L	L	L	L	L	L	L	L	L	L	L	L
CAP RVS	IC201 ⑯	0	H	H	H	H	H	H	H	H	H	H	H	H	H	H
CAP DA	IC201 ⑰	0														
T SENS	IC201 ⑱	1	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3
S SENS	IC201 ⑳	1	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4

*1. "L" when a cassette record enable table is broken. "H" when it is not broken.

*2. The pulse whose cycle corresponds to the reel rotation.

*5. Normally "L". "H" pulse of about 2 ms rate when tape top of tape end is detected.

*4. Pulse which occurs while tape is running.

*3. "H" pulse of about 2 ms rate.

6-2-4. Interface between VHS system control and system control peripheral circuit (MV-34 board IC201)

Signal name	Pin No.	I/O	Input/output level
ASURA RESET	IC201 ⑩	I	Normally "H". Goes to "L" when power failure is detected or when returned from power failure.
ASURA CS	IC201 ⑨	I	Chip select signal from the timer/mode control microprocessor (FR-113 board, IC001). "L" pulse of vertical rate.
SI (SO BUS)	IC201 ⑧	I	Serial communication data from the timer/mode control microprocessor (FR-113 board, IC001). "L" pulse of vertical rate.
SO (SI BUS)	IC201 ⑦	O	Serial communication data to the timer/mode control microprocessor (FR-113 board, IC001). "L" pulse of vertical rate.
S CLK	IC201 ⑥	I	Serial communication clock from the timer/mode control microprocessor (FR-113 board, IC001). "L" pulse of vertical rate.

6-2-5. Interface between VHS system control and audio block (MV-34 board IC201)

Signal name	Pin No.	I/O	STOP FF LOADING	TAPE UNLOADING	TAPE PAUSE	PB PAUSE	SLOW	×2	CUE	REVIEW	REC	REC PAUSE	
AF ENVELOP	IC201 ⑤		AF RF envelope signal input pin for auto tracking.										
REC	IC201 ④	O	L	L	L	L	L	L	L	L	H	L	
A MUTE	IC201 ③	O (Q.D)	L	L	L	L	L	L	H	H	L	L	
SP	IC201 ②	O	*2	*2	*3	*3	*3	*3	*2	*2	*2	*2	
NA REC - P	IC201 ①	O	L	L	L	L	L	L	L	L	H	L	
AF REC - P	IC201 ⑦	O	L	L	L	L	L	L	L	L	H	L	
AF SWP	IC201 ⑧	O	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	

*1. 25 Hz pulse with 50 % duty cycle. Delayed about 5 ms after the RF switching pulse.
 *2. Depending upon the recording mode selection. "L" during SP mode.
 *3. Depending upon the recording mode of a tape. "L" during SP mode.

6-2-6. VHS servo/system control microprocessor (MV-34 board IC201)

Pin.No.	Signal name	VO	Function
1	RF SWP	0	RF switching pulse
2	QVD	0	Quasi VD
3	QHD ENBL	0	Quasi HD voltage level control
4	AF REC P	0	HIFI recording control
5	NTSC	0	Not used
6	FE ON	0	Flying erase control
7	REC CTL	0	REC CTL
8	CAP TRQ3	I/O	Capsstan torque control 3
9	APC2	0	APC
10	APC1	0	APC
11	NA REC P	I/O	Normal audio REC P
12	LP	0	LP/SP
13	CAM LOAD	0	Cam motor loading drive
14	CAM UNLOAD	0	Cam motor unloading drive
15	C#NREC PROOH	I	"Mis-erasing protection mb, cassette in detection signal input"
16	YNR	I	YNR control signal
17	REC P	I	R/P recording signal
18	NC	I	Not used
19	NC	0	Oscillator for chroma processing system frequency select 3.58/4.43
20	NT JUDGE	I	3.58/4.43 NTSC discriminating signal input
21	BLUE BACK ON	0	Force blue back
22	NTSC R#HEAD CONT	0	NTSC Pb on PAL-TV signal
23	TV/TR	0	Not used
24	SECAM	0	Not used
25	MESSECAM	0	Not used
26	NC	0	Not used
27	MODE4	I	Cam encoder data 4
28	MODE3	I	Cam encoder data 3
29	MODE2	I	Cam encoder data 2
30	MODE1	I	Cam encoder data 1
31	CAM 12V	0	Cam motor 12V drive
32	T/E LED	0	TypeEnd sensor light up control
33	CAP TRQ2	0	Capsstan torque control 2
34	CAP TRQ1	0	Capsstan torque control 1
35	CAP STOP	0	Capsstan stop control
36	FULL ERS	0	Full erase head control
37	NC	0	Not used
38	NC	0	Not used
39	MFGND1	I	"Fixed to GND"
40	ASUBA RESET	I	System reset signal
41	VSS	—	Ground
42	XTAL	—	System clock 16MHz
43	EXTAL	—	System clock 16MHz
44	ASUBA CS	I	Servo/system control microprocessor chip select signal
45	S IN	1	Serial communication signal
46	S OUT	0	Serial communication signal
47	SCLK	0	Serial communication signal
48	AC ONLINE	—	Not used
49	NC	—	Not used
50	EDIT	0	Edn

Pin.No.	Signal name	VO	Function
51	LINE3	—	Not used
52	AVSS	—	Unswitched ground
53	AVREF	—	AD port reference input UNSW 5V
54	AVDD	I	UNSW 5V
55	APC ERROR	—	APC error feedback
56	DEW	—	Not used
57	NC	I	Not used
58	VAAD1	I	Switching position test mode
59	AF ENV	I	AF envelope level input
60	RF ENV	I	RF envelope level input
61	T SENS	I	Tape top sensor input
62	S SENS	I	Tape end sensor input
63	S REEL FG	I	Supply reel FG input
64	T REEL FG	I	Take-up reel FG input
65	NC	I	Not used
66	V SYNC	I	V sync signal input
67	PB CTL	I	CTL input
68	DRM PG	I	Drum FG input
69	DRM FG	I	Drum FG input
70	CAP FG	—	Capsstan FG input
71	POWER SAVE CONT	0	Not used
72	CAP RVS	0	Capsstan RVS/RWD control
73	CAP DA	0	Capsstan rotation control D/A output
74	DRM DA	0	Drum rotation control D/A output
75	CTL REC	0	CTL amp recording inhibition
76	CTL STEP	I	CTL amp stop control
77	NC	I	Not used
78	NC	0	Not used
79	CTL INDEX	0	CTL amp index control
80	SO1	0	SSB serial data output
81	SK1	0	SSB serial clock output
82	LINE2	0	Not used
83	LINE1	0	Not used
84	APC PWM	0	APC PWM output
85	NC	—	Not used
86	NC	—	Not used
87	NC	—	Not used
88	VSS	—	Ground
89	VDD	—	5V
90	NC	—	5V
91	QRC SETBI	0	"E/R/REC/PB: 1/ Output setting: 1"
92	A MUTE	0	HIFI audio mute
93	SP	0	SP
94	NC	0	Not used
95	NC	0	Not used
96	REC	0	HIFI rec control
97	LOG	0	Variable speed playback: H (for video)
98	VFB	0	Video playback output control
99	STEP PLS	0	Capsstan pulse drive control output
100	AF SWP	0	HIFI switching pulse

6-2-7. VHS mode control microprocessor (MV-34 board IC801)

Pin.No.	Signal name	IO	Function
1	VPS SEL R/V	0	Selection of video signal to VPS/PDC IC either R or V.
2	AUTO RESET	0	H during auto reset.
3	OSD COLOR CONT	0	OSD chroma through control during SECAM.
4	MOD CONT	0	VTR or TV selection of RF modulation.
5	N.C.	0	Not used.
6	N.C.	0	Not used.
7	POWER CONT	0	Power ON/OFF control.
8	CLK ADJ	1	H during clock adjustment for watch mode.
9	C+ ON/OFF	0	ON/OFF control of CANAL+ circuit power supply.
10	C+ DET	1	CANAL+ signal detection input.
11	HIT RESET	0	HIT microprocessor reset output.
12	RESET ENABLE	1	Resettable during L.
13	POWER FAIL REQ	0	Reset request output to HIT microprocessor.
14	POWER FAIL	1	Power failure detection signal input.
15	N.C.	1	Not used.
16	N.C.	1	Not used.
17	N.C.	1	Not used.
18	N.C.	1	Not used.
19	N.C.	1	Not used.
20	N.C.	1	Not used.
21	N.C.	1	Not used.
22	N.C.	1	Not used.
23	POWER SAVE CONT	0	DC - DC converter control during POWER SAVE.
24	N.C.	0	Not used.
25	N.C.	0	Not used.
26	N.C.	0	Not used.
27	QM DET	0	Macro-vision detected output.
28	N DET	0	Macro-vision detected output.
29	MV DET2	0	Macro-vision detected output.
30	MV DET1	0	Macro-vision detected output.
31	N.C.	0	Not used.
32	VHS EE S/V	0	VHS video's-video selection output.
33	N.C.	0	Not used.
34	N.C.	0	Not used.
35	SDA	0	Data output for I2C control.
36	SCL	0	Clock output for I2C control.
37	N.C.	0	Not used.
38	OSD CS	0	OSD IC chip select signal output.
39	MP	1	Fixed to L.
40	RESET	1	Reset input.
41	Vss		GND.
42	XTAL		System clock 16 MHz.
43	EXTAL		System clock 16 MHz.
44	WT CS	1	Chip select signal input.
45	SO	1	Serial communication data input.
46	SO	0	Serial communication data output.
47	SCLK	1	Serial communication clock input.
48	N.C.	0	Not used.
49	N.C.	0	Not used.
50	N.C.	0	Not used.

Pin.No.	Signal name	IO	Function
51	N.C.	0	Not used.
52	AVSS		GND.
53	AVDD		Power supply 5 V.
54	AVDD		Power supply 5 V.
55	N.C.	1	Not used.
56	N.C.	1	Not used.
57	N.C.	1	Not used.
58	N.C.	1	Not used.
59	N.C.	1	Not used.
60	N.C.	1	Not used.
61	N.C.	1	Not used.
62	N.C.	1	Not used.
63	N.C.	1	Not used.
64	VHS H DET	1	VHS video signal detection input signal.
65	SECAM	1	SECAM identification signal input.
66	COMP SYNC	1	Composite sync input.
67	S2 SW	1	S-video connection to Input-2 detection input signal.
68	DAV	1	VPS/PDC data validity signal input.
69	H DET	1	Video signal detection input signal.
70	ACK VHS	1	VHS ACK signal input.
71	POWER MUTE	0	Audio mute signal.
72	N.C.	0	Not used.
73	N.C.	0	Not used.
74	ACK OUT	0	ACK signal output.
75	N.C.	0	Not used.
76	N.C.	0	Not used.
77	COMP SYNC	1	Composite sync input.
78	N.C.	1	Not used.
79	N.C.	1	Not used.
80	CG SO	0	OSD IC serial data.
81	CG SCLK	0	OSD IC serial clock.
82	N.C.	0	Not used.
83	CLK OUT	0	Clock output for watch adjustment.
84	SDA IN	1	Data input for I2C control.
85	SCL IN	1	Clock input for I2C control.
86	TEX		Sub clock 32 KHz.
87	TX		Sub clock 32 KHz.
88	Vss		GND.
89	VDD		Power supply 5 V.
90	VDD		Power supply 5 V.
91	I CONT	0	CANAL+ I-signal control.
92	EURO AV CONT	0	AV CONT signal of EURO AV.
93	N.C.	0	Not used.
94	N.C.	0	Not used.
95	AV OUT SEL	0	AV output C+ decoder direct/EB selection output.
96	AV V/S	0	EURO AV video's-video selection output.
97	N.C.	0	Not used.
98	C+ SEL	0	CANAL+ decoder input TV/VTR selection.
99	LINE2 V/S	0	LINE 2 video's-video selection output.
100	LINE3 V/S	0	LINE 3 video's-video selection output.

6-2-8. Mode control microprocessor (FR-113 board IC001)

Pin.No.	Signal name	I/O	Function
1	32K X' tal		Pin to which an external sub oscillator is connected
2	32K X' tal		Pin to which an external sub oscillator is connected
3	MOD0	I	GND
4	MOD1	I	GND
5	X' tal		Pin to which an external main oscillator is connected
6	X' tal		Pin to which an external main oscillator is connected
7	Vss		GND
8	RESET	I	Reset signal input (from W/T).
9	N.C.	O	Not used.
10	N.C.	O	Not used.
11	N.C.	O	Not used.
12	N.C.	O	Not used.
13	N.C.	O	Not used.
14	N.C.	O	Not used.
15	N.C.	O	Not used.
16	N.C.	O	Not used.
17	POWER FAIL REQ	I	Power failure processing request signal input (from W/T).
18	CG V SYNC	I	V sync signal input.
19	RESET ENABLE	O	Power failure processing completion signal output (to W/T).
20	VHS SYS CS	O	VHS system control microprocessor chip select signal output.
21	DM51	I	Rotation pulse input-1 of CLICK SHUTTLE.
22	DM52	I	Rotation pulse input-2 of CLICK SHUTTLE.
23	SCL	I/O	I2C bus (clock).
24	SDA	I/O	I2C bus (data).
25	Ram SYS CS	O	8 mm system control microprocessor chip select signal output.
26	SYS RESET	O	System control microprocessor reset output.
27	WTC5	O	W/T microprocessor chip select signal output.
28	CMOD		5 V.
29	TA MUTE1	O	Tuner-1 audio mute output.
30	LED CS	O	Strobe signal for LED driver.
31	N.C.	O	Not used.
32	SIRCS IN	I	Remote control signal input.
33	PLL CLK1	O	Tuner-1 clock signal.
34	PLL DATA1	O	Tuner-1 data signal.
35	PLL ENABLE1	O	Tuner-1 enable signal.
36	TU V DET1	I	Tuner-1 video signal detection signal input.
37	BOL	O	Tuner system selection-1 for B destination.
38	LTC	O	Tuner system selection-2 for B destination.
39	SE01	O	VFP segment 1.
40	SE02	O	VFP segment 2.
41	SE03	O	VFP segment 3.
42	SE04	O	VFP segment 4.
43	SE05	O	VFP segment 5.
44	SE06	O	VFP segment 6.
45	SE014	O	VFP segment 14.
46	SE015	O	VFP segment 15.
47	SE016	O	VFP segment 16.
48	SE07	O	VFP segment 7.
49	Vcc		Power input pin (4.5 V to 5.5 V).
50	SE08	O	VFP segment 8.

Pin.No.	Signal name	I/O	Function
51	SE09	O	VFP segment 9.
52	SE010	O	VFP segment 10.
53	Vdp		High withstand voltage pull-down power supply terminal.
54	SE011	O	VFP segment 11.
55	SE012	O	VFP segment 12.
56	SE013	O	VFP segment 13.
57	SE017	O	VFP segment 17.
58	Vss		GND.
59	SE018	O	VFP segment 18.
60	SE019	O	VFP segment 19.
61	SE020	O	VFP segment 20.
62	SE021	O	VFP segment 21.
63	SE022	O	VFP segment 22.
64	SE023	O	VFP segment 23.
65	SE024	O	VFP segment 24.
66	GRD8	O	VFP gnd 8.
67	Vcc		Power input pin (4.5 V to 5.5 V).
68	GRD7	O	VFP gnd 7.
69	GRD6	O	VFP gnd 6.
70	GRD5	O	VFP gnd 5.
71	GRD4	O	VFP gnd 4.
72	GRD3	O	VFP gnd 3.
73	GRD2	O	VFP gnd 2.
74	GRD1	O	VFP gnd 1.
75	N.C.	O	Not used.
76	N.C.	O	Not used.
77	ST BUS	I	Serial data input.
78	SO BUS	O	Serial data output.
79	SCLK	O	Serial data clock.
80	MEM CS	O	EEPROM chip select signal output.
81	MEM CLK	O	EEPROM clock.
82	MEM DATA	I/O	EEPROM data.
83	AVSS		Analog GND.
84	AFT1	I	Tuner-1 AFT input.
85	N.C.	O	Not used.
86	AD2	I	Key data read A/D 2 input.
87	AD3	I	Key data read A/D 3 input.
88	AD4	I	Key data read A/D 4 input.
89	AD5	I	Key data read A/D 5 input.
90	AD6	I	Key data read A/D 6 input.
91	AD7	I	Key data read A/D 7 input.
92	AVcc	I	Analog power input pin (4.5 V to 5.5 V).
93	AD8	I	Key data read A/D 8 input.
94	AD9	I	Key data read A/D 9 input.
95	N.C.	O	Not used.
96	N.C.	O	Not used.
97	LANCIN	I	LANC input.
98	LANC OUT	O	LANC output.
99	Buzzer	O	Buzzer output.
100	Vcc		Power input pin (4.5 V to 5.5 V).



SECTION 7
ADJUSTMENTS

<SERVICE MODE>


1. SETTING THE SERVICE MODE

The service mode consists of the adjustment mode which adjusts the EYR and the test mode which shows the condition of the unit. The unit can be set into the test mode and adjustment mode by connecting the adjustment remote commander (Set the HOLD switch to "HOLD").

(1) Service LANC memory map

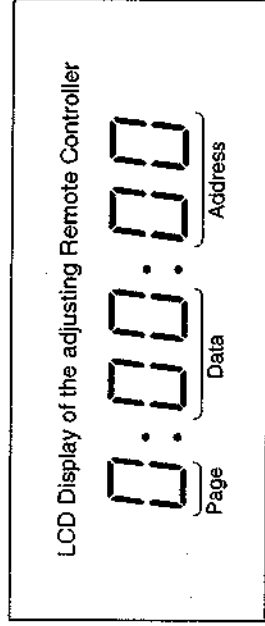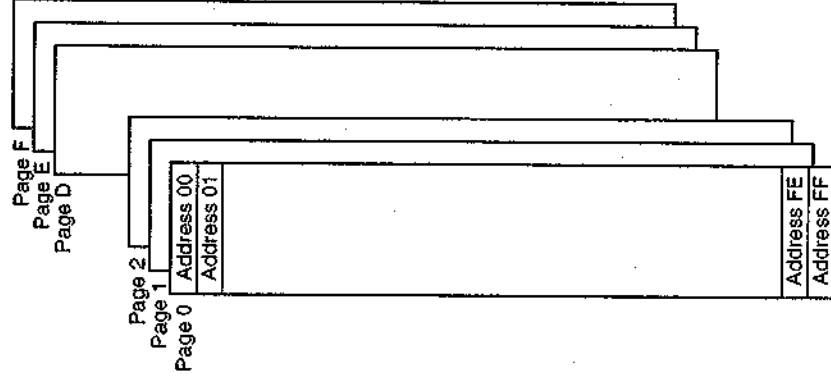

Adjustment remote commander RM-95 (J-6082-053-B)

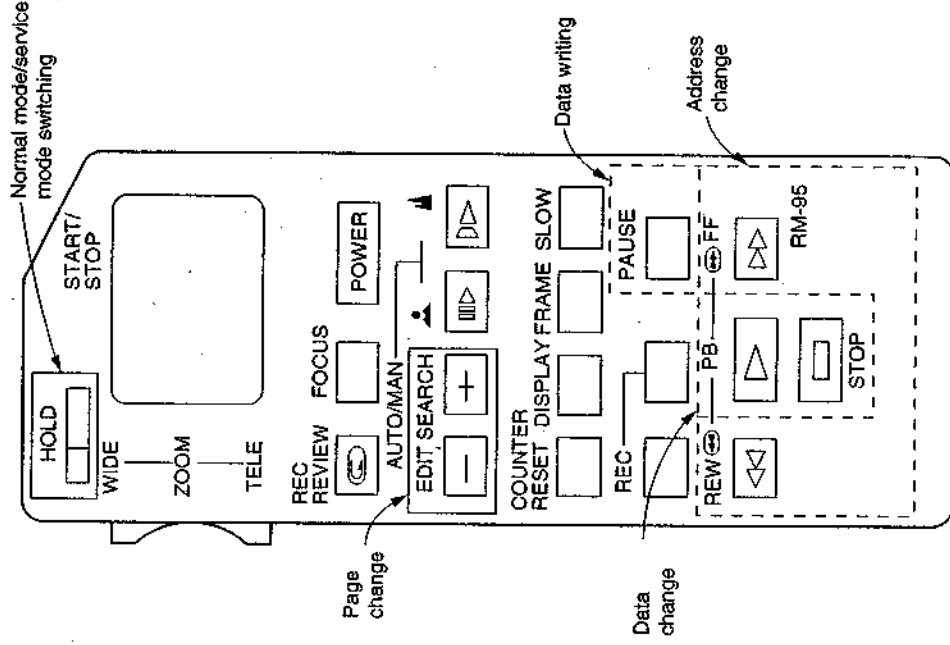


Note 1: When data on this page is rewritten with adjustment remote control to set the adjustment mode or test mode, that data will not be written to EEPROM. Therefore, simply disconnect the main power to return to the original state (normal state).

Note 2: The data of this page is written in the EEPROM (IC002 of FR-113 board).

Page	Page Layout
0	
1	Shared by VTR section (Note 1)
2	Mode controller RAM, I/O (Note 1)
3	Mechanism controller RAM, I/O (Note 1)
4	
5	
6	F page write protect
7	
8	
9	
A	
B	T/T controller RAM, I/O (Note 1)
C	
D	VTR EEPROM (Note 2)
E	
F	

[Shifting to the service mode using the adjustment remote commander]

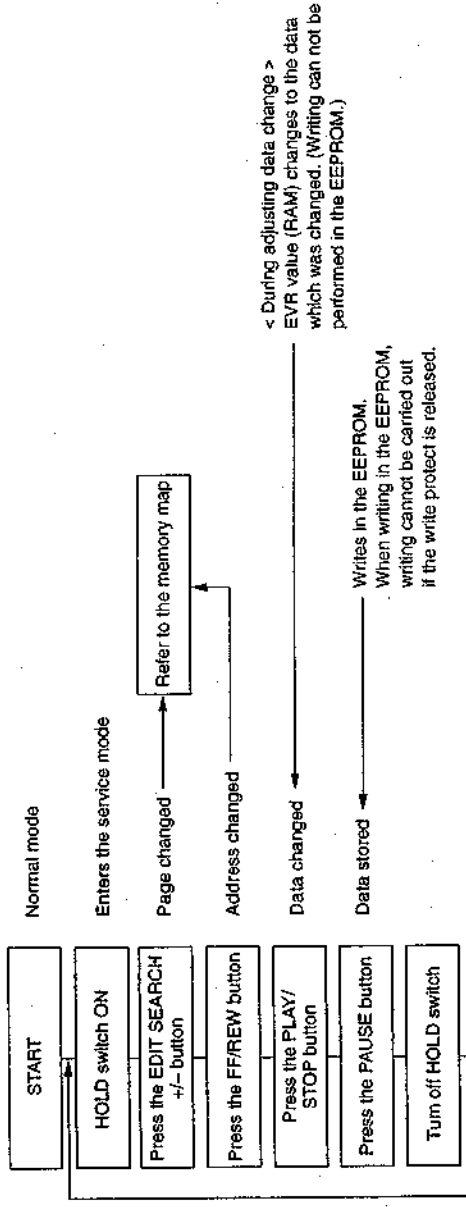


Command Name	Command Function	Normal LANC Command
Page Up	Page +1	Edit Search +
Page Down	Page -1	Edit Search -
Direct Page Set	Sets to the specified page	Event Clear
Address Up	Address +1	Fast Forward
Address Down	Address -1	Rewind
Data Up	Data +1	Play Back
Data Down	Data -1	Stop
Store	Writes data in the EEPROM, RAM	Pause

(2) Adjustment remote commander connecting procedure.

SLV-T2000 series dose not have the LANC jack for LANC adjusting remote commander. When adjusting, connect the LANC jig (J-6090-051-A) to CN403 on MV-34 board.

Note : When connecting or disconnecting LANC jig to CN403 on MV-34 board, first connect the adjusting remote commander to the jack on LANC jig before connecting LANC jig to CN403.
Connection or disconnection of the adjusting remote commander in the condition LANC jig is connected to CN403 causes IC link to damage itself.

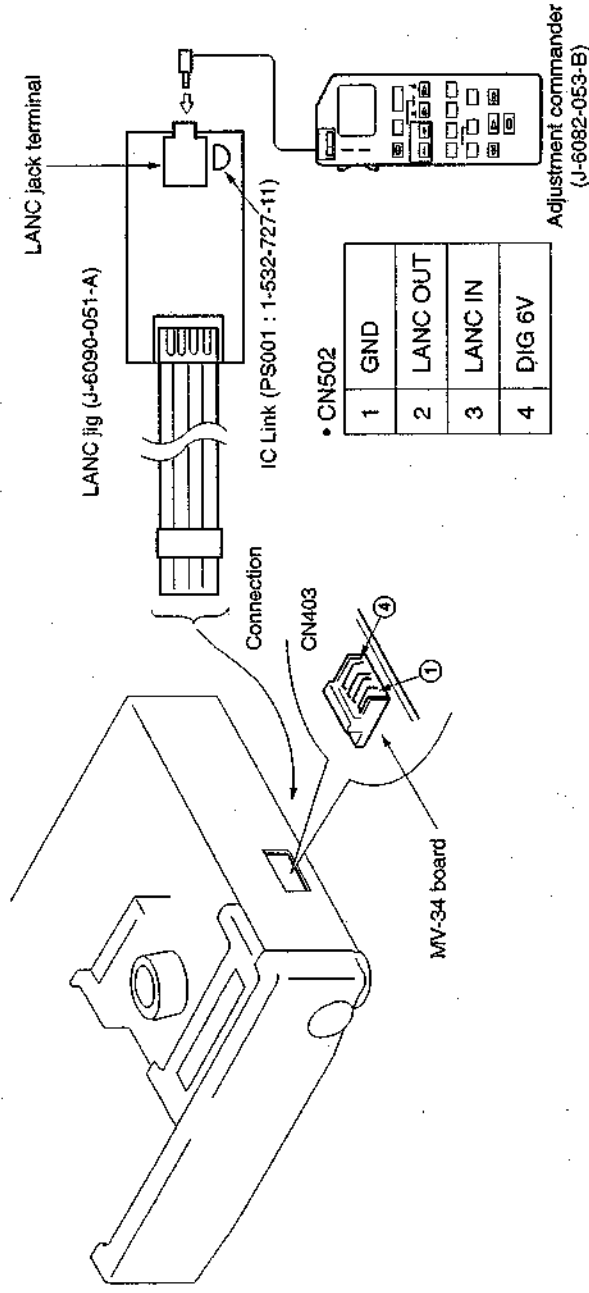

2. TEST MODE SETTING

(1) Servo/System Control Microm

1. Set page : 3, address : 00, data : 02.
2. The system goes to the test mode by setting data as following of page : 3, address : 01.

Note : Test mode is released by turning power off.

3. EMERGENCY CODES

These codes can be used to check the condition of failure (abnormality) that occurred.

Page D	Address EC	Address E0
--------	------------	------------

Video 8 VHS

First Emergency Code

...The code of the first failure that occurred.

Page D	Address E8	Address DC
--------	------------	------------

Second Emergency Code

...The code of the second failure that occurred.

Page D	Address E4	Address D8
--------	------------	------------

Last Emergency Code

...The code of the last failure that occurred (This data will be renewed each time a failure occurs).

- Note 1 :** After completing necessary adjustments/repairs, be sure to rewrite the data address EC, E8, E0, DC and D8 to 00.
- Note 2 :** When writing data, after setting the data, be sure to press the PAUSE button on the adjustment remote control.

Code	Condition of Failure
00	No failure
10	Load Direction, Cam Encoder Failure
11	Unload Direction, Cam Encoder Failure
20	Not used.
21	Not used.
22	T Reel Rotational Failure
23	S Reel Rotational Failure
24	FG Failure at Start of T Reel
25	FG Failure at Start of S Reel
26	Failure at Start of Capstan
31	Failure During Stationary Operation of Capstan
40	FG Failure at Start of Drum
41	PG Failure at Start of Drum
42	FG Failure During Stationary Operation of Drum
43	Not used
44	Not used
50	Not used
60	FL Cassette Compartment Failure
70	DEW BJECT Failure

4. D PAGE MEMORY MAP

Note : When replacing EEPROM on the MA board, set data on page D as follows.

Address	Function	Initial Value
00 - 07		00
08 - 10		00
11	Video 8 Adjustment Mode	10
12	Video 8 Switching Position Adjustment (LOW)	*1
13	Video 8 Switching Position Adjustment (HIGH)	*1
14	SP Mode FWD X2	00
15	SP Mode FWD Slow	00
16	Cap. Duty (LOW)	00*1
17	Cap. Duty (HIGH)	20*1
18 - 1F		
20	SP Slow Adjustment (Video 8)	80
21	LP Slow Adjustment (Video 8)	80
22	SP --- Slow Adjustment (Video 8)	80
23	LP --- Slow Adjustment (Video 8)	80
24	SP X 2 Adjustment (Video 8)	80
25	LP X2 Adjustment (Video 8)	80
26 - D7		
D8	Emergency Code (L-AST)(VHS)	00
D9 - DB		00
DC	Emergency Code (2nd)(VHS)	00
DD - DF		00
E0	Emergency Code (1st)(VHS)	00
E1 - E3		00
E4	Emergency Code (L-AST) (Video 8)	00
E5 - E7		00
E8	Emergency Code (2nd)(Video 8)	00
E9 - EB		00
EC	Emergency Code (1st)(Video 8)	00
ED - EF		00
F0 - FF	Factory Data	00

*1 Center Value

7-1. MECHANICAL ADJUSTMENTS

1-1. VHS MECHANICAL ADJUSTMENTS

For Mechanical Adjustments

For the procedures how to adjust and check the mechanism, as well as how to replace mechanical parts. Refer to the separate VHS Video Mechanical Adjustment Manual (H MECHANISM)(9-973-623-11)

However, for the procedures how to set the Track Shift mode, refer to the following text.

1-2. Video 8 MECHANICAL ADJUSTMENTS

For Mechanical Adjustments

For the procedures how to check the mechanism, as well as how to replace mechanical parts, refer to the separate 8mm Video Mechanical Adjustment Manual V (F MECHANISM) (9-973-445-11).

However, for the procedures how to set the Track Shift mode, refer to the following text.

1-2-1. TAPE PATH ADJUSTMENT (TRACK SHIFT)

The 8mm Video Tape Recorder system uses the ATF (Automatic Track Finding) function in which four different pilot signals are used for controlling the tape speed instantaneously to provide high precision tracking. This eliminates the Tracking Adjustment control, thus allowing accurate tracing.

In spite of its advantageous feature, the ATF system may have a difficulty in adjusting the tape path system. The ATF will automatically corrects tracing even if impossible to perform a complete adjustment.

Therefore, when performing a fine adjustment for tracking, the Track Shift mode should be entered before starting this adjustment. This mode will force to operate the ATF to shift the amount of tracking by a given quantity (approximately 1/4), so that tracking can be easily fine adjusted. Furthermore, no track shift jig is needed.

1. Setting the Track Shift Mode

- 1) Place the adjustment remote control RM-95 (J-6082-053-B) in the HOLD ON position.
- 2) Category code setting
Page : 3, address : 00, data : 02.
- 3) Track shift playback
Page : 3, address : 01, data : 01.
(To change the quantity for track shift, data stored at category 02, address 08 should be changed.)

Note 1 : For details of the Test Mode, refer to "SECTION 7 SERVICE MODE."

Note 2 : If the L.P mode is recognized by the system wrongly, operate the Recording Time SP/LP button to enter the SP mode.

Note 3 : After adjustment, operate the PB/STOP button to reset to adjustment data 00. Place the remote control in the HOLD OFF position to return to the normal mode.

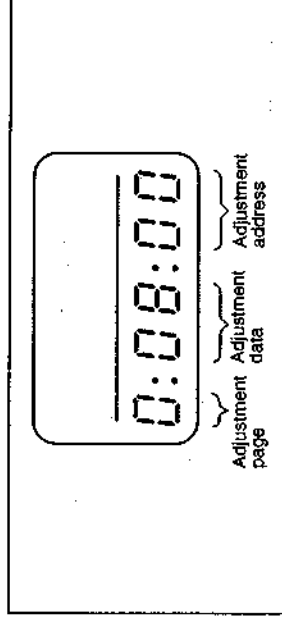


Fig. 7-1-1

2. Preparation before Adjustment

- 1) Clean the surfaces over which tape moves past (of the tape guides, drum, capstan shaft and pinch rollers).
- 2) Oscilloscope Connection and Waveform Output:
1 ch. : Drum head's RF signal output, MH-18 board CNI02 pin ③ (PB RF).
External trigger input : MH-18 board CNI02 pin ② (RFSWP)
GND : MH-18 board CNI02 pin ① (GND)
- 3) Playback alignment tape for tracking (WR5-1CP).
- 4) Check that RF waveform observed on the oscilloscope is flat on both entrance and exit sides.
If not flat, perform necessary adjustment according to the separate 8mm Video Mechanical Adjustment V (F MECHANISM).

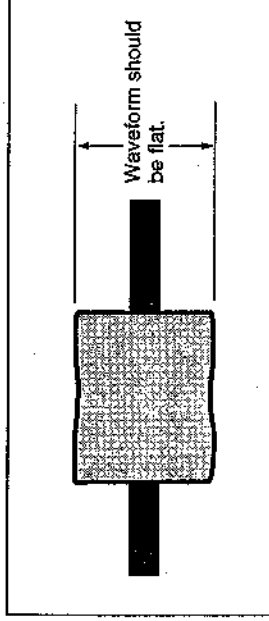


Fig. 7-1-2

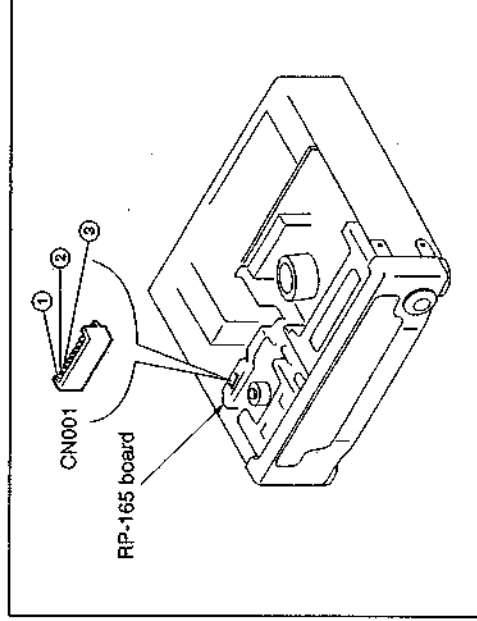


Fig. 7-1-3

7-2. ELECTRICAL ADJUSTMENT

See the adjusting parts location diagram from on page 7-30 for the adjustment.

For details of the SENSOR LANC, refer to page 7-1 (SERVICE MODE).

2-1. PREPARATION BEFORE ADJUSTMENT

2-1-1. Equipment Required

The measuring instruments used for this alignment include:

- 1) Monitor TV
 - 2) Oscilloscope, dual-trace, bandwidth of 30MHz or more, with delay mode (A probe 10 : 1 should be used unless otherwise specified.)
 - 3) Frequency counter
 - 4) Pattern generator (with Video Output terminal; refer to Section 7-2-1-2. Equipment Connection.)
 - 5) Digital voltmeter
 - 6) Audio generator
 - 7) Audio level meter
 - 8) Audio distortion meter
 - 9) Audio attenuator
 - 10) Vector scope
 - 11) Alignment tapes
 - ① For video 8
 - For tracking adjustment (WR5-1CP)
Parts No. : 8-967-995-07
 - For video frequency adjustment (WR5-7CE)
Parts No. : 8-967-995-18
 - For L mode operation check
For SP (WR5-5CSP)
or (WR5-4CSP)
Parts No. : 8-967-995-46
 - For LP (WR5-4CL)
Parts No. : 8-967-995-47
 - For E mode operation check (ME tape)
For SP (WR5-8CSE)
Parts No. : 8-967-995-56
 - For LP (WR5-8CLE)
Parts No. : 8-967-995-48
 - For AFM stereo operation check (WR5-9CS)
Parts No. : 8-967-955-57
 - ② For VHS
 - Alignment type (KRV-51P)
Parts No. : 8-192-605-36
- 12) Adjustment remote commander (J-6082-053-B)
 - LANC jig (LA-LA2)
Parts No. : J-6090-051-A
 - 13) AFM DEV. jig
Parts No. : J-6082-312-A

2-1-2. Equipment Connection

According to the specification of the input terminal (S VIDEO or VIDEO), connect required measuring instruments as shown in Fig. 7-2-1 and perform adjustment. The input terminal is specified in the parentheses () in the signal column. Unless otherwise specified, either terminal takes precedence. When performing adjustment with the VIDEO input terminal, pull out the connector from the S VIDEO input terminal.

Note 1 : When S VIDEO input is specified for a specific adjustment, if the adjustment is performed with VIDEO input, the product specifications for this unit may not be satisfied. The specified input must be always used.

Note 2 : If an adjustment is performed by using a VTR with S VIDEO output terminal as a signal source, the performance of this unit will be affected by that VTR. A pattern generator with Y/C separation output terminal should be used wherever possible.

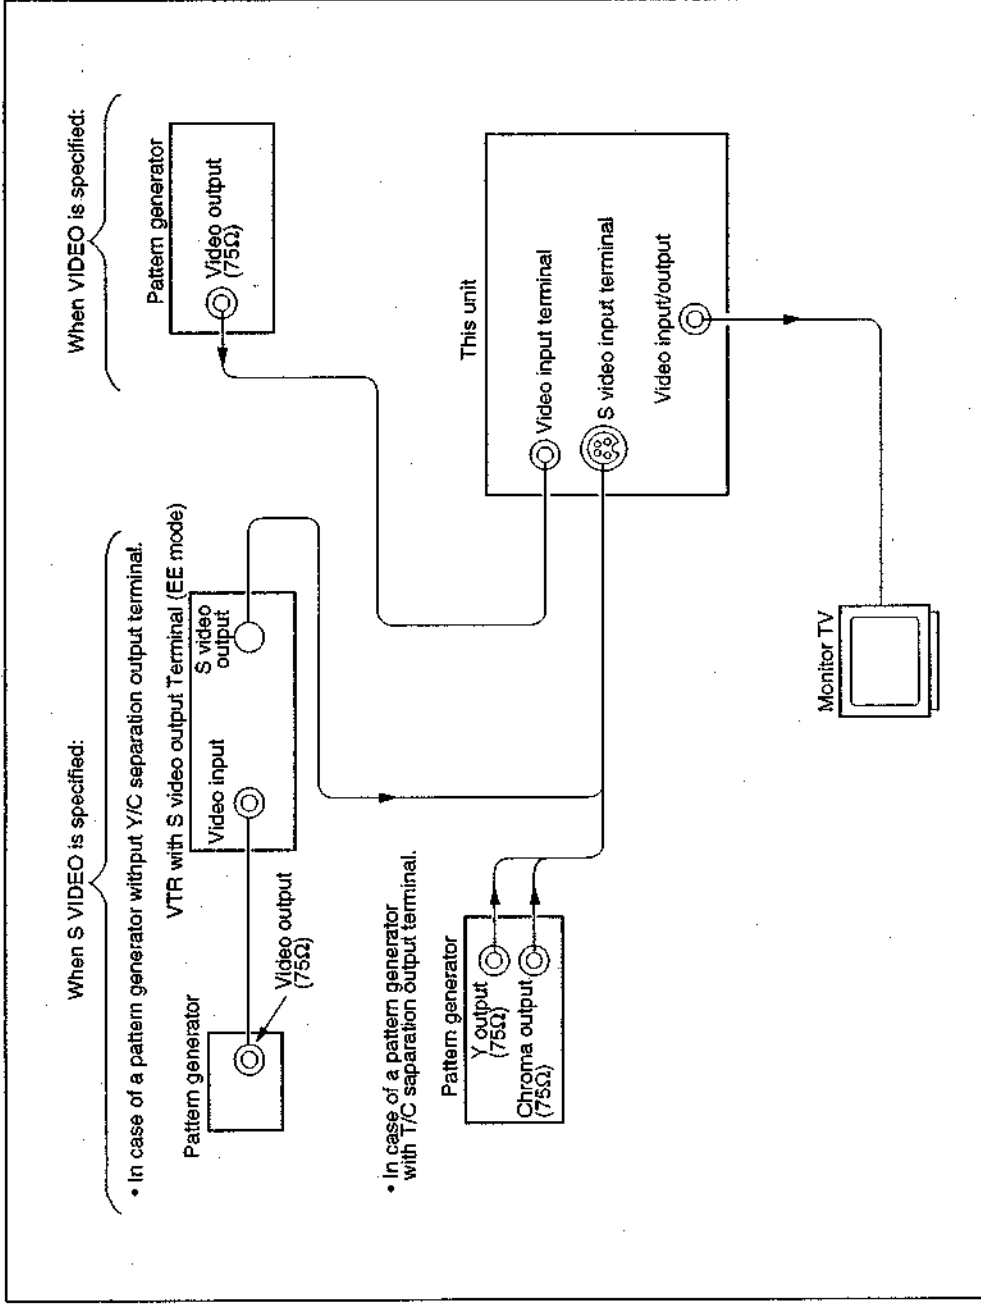


Fig. 7-2-1

2-1-3. Input Signal Check

Video signal produced by a pattern generator is used as an adjustment signal to perform electrical alignment for this unit. This video signal must satisfy the specification.

1) S VIDEO Input

Connect an oscilloscope to the Y Signal terminal of the S Video input terminal. Check that the synchronizing signal of the Y signal is approximately at 0.3Vp-p and that its video portion has an amplitude of approximately 0.7Vp-p. (When a VTR with S Video output terminal is used, in addition to these checks, make sure that there are no residual chroma and burst signals.) Then, connect the scope to the Chroma signal terminal of the S Video input terminal and check that the chroma signal has a burst signal amplitude of 0.3Vp-p and the burst signal waveform is flat. And check that the amplitude ratio of burst signal to chroma signal is 0.30 : 0.66. The Y and chroma signals used for electrical alignment are shown in Fig. 7-2-2.

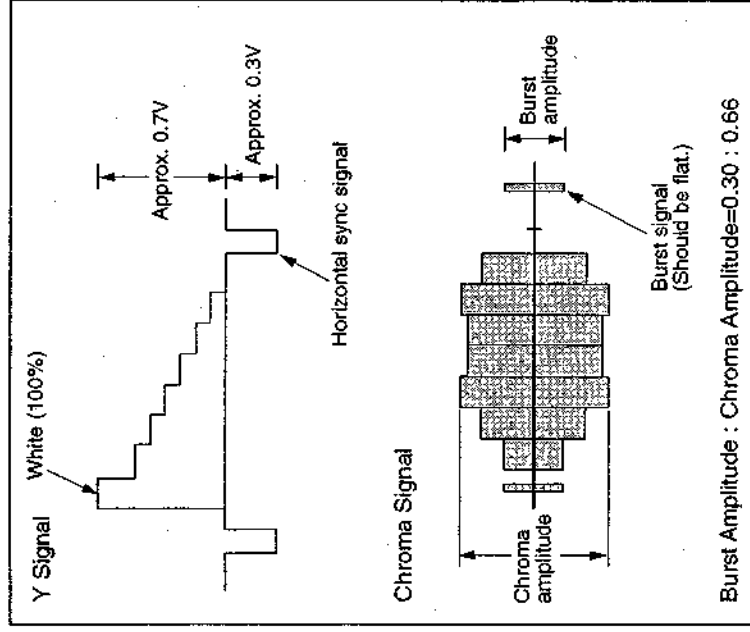


Fig. 7-2-2 Color Bar Signals of Pattern Generator

Note : VIDEO input usually selected in this set. To select S VIDEO input, use remote commander to enter the MENU mode and change Video Input of Line 3 in mode setting from Video to S Video.

Unless otherwise specified, place the switches and controls of this unit in the following positions:

- **Input Select** switch LINE 2

2) VIDEO Input

Connect an oscilloscope to the Video Input terminal. Check that the synchronizing signal of the Y signal has an amplitude of approximately 0.7V and that the burst signal has an amplitude of approximately 0.3V and its waveform is flat. And check that the level ratio of burst signal to "red" signal is 0.30 : 0.66. The video signal (color bar) used for electrical aligning this unit is shown in Fig. 7-2-3.

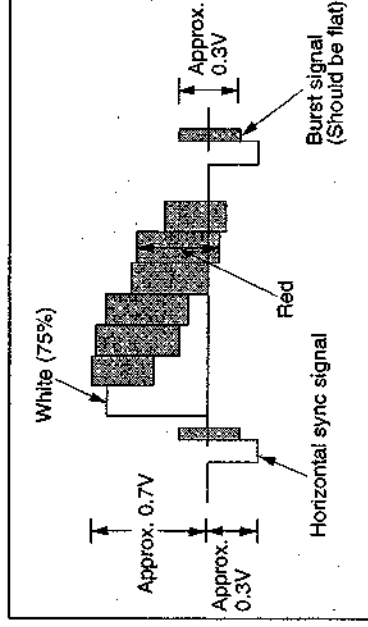


Fig. 7-2-3 Color Bar Signals of Pattern Generator

2-1-4. VHS Alignment Tape

- Contents of KRV-51P

Mode	Period	Video signal		Audio signal	
		Color bar	Monoscope	Hi-Fi	Normal
1	7 minutes	Color bar	Monoscope	400Hz (L/R)	400Hz
2	3 minutes	Color bar	Monoscope		
3	7 minutes	Color bar	Monoscope		
4	3 minutes	Color bar	Monoscope		

2-1-5. Video 8 Alignment Tape

The following alignment tapes are available.

The tape specified in the signal column for the adjustment to be performed should be used.

Note that if no tape code is specified for the adjustments in which alignment tapes for operation check may be used.

Alignment Tape	Record Mode	Tape Type	Tape Speed	Contents of Record		Application		
				Video Area	PCM Area			
Tracking WR5-1CP	L	MP	SP	CH2 : 1MHz tape path adjustment signal Switching position adjustment marker (CH1 : 9MHz)		Tape path adjustment Switching position adjustment		
Video frequency characteristic WR-7CE	E	ME	SP	RF sweep 0~15MHz Marker 2, 4.5, 7, 8.5, 10MHz		Frequency characteristic		
Operation check WR5-5CSP	L	MP	SP	<ul style="list-style-type: none"> • Video signal Color bar 4min. Monoscope 4min. • Audio signal (AFM) 400Hz 60% modulated 	<ul style="list-style-type: none"> • Audio signal (PCM) Monoscope portion 20Hz 20sec. } This cycle 400Hz 20sec. } is repeated 14kHz 20sec. } 4 times. 	Operation check		
					Color bar portion 1kHz, 4min. 400Hz, 8min.			
					<ul style="list-style-type: none"> • Audio signal (PCM) 400Hz 			
AFM stereo operation check WR5-9CS	L	MP	SP	<ul style="list-style-type: none"> • Video signal Color bar 4min. Monoscope 4min. • Audio signal (AFM) 400Hz 60% modulated 	<ul style="list-style-type: none"> • Audio signal (PCM) 400Hz, 8min. 	AFM stereo operation check		
							<ul style="list-style-type: none"> • Video signal Color bar 4min. Monoscope 4min. • Audio signal (AFM) 400Hz 60% modulated 	
							<ul style="list-style-type: none"> • Video signal Color bar 4min. Monoscope 4min. • Audio signal (AFM) 400Hz 60% modulated 	
							<ul style="list-style-type: none"> • Video signal Color bar 4min. Monoscope 4min. • Audio signal (AFM) 400Hz 60% modulated 	

Note : Recording Mode

L Conventional mode
E Hi8 (High Band) mode

Tape Type

MP Metal powder tape
ME Metal evaporated tape

The color bar signal recorded on these alignment tapes are shown in Fig. 7-2-4.

Note : This waveform is measured at the VIDEO OUT terminal (terminated at 75Ω).

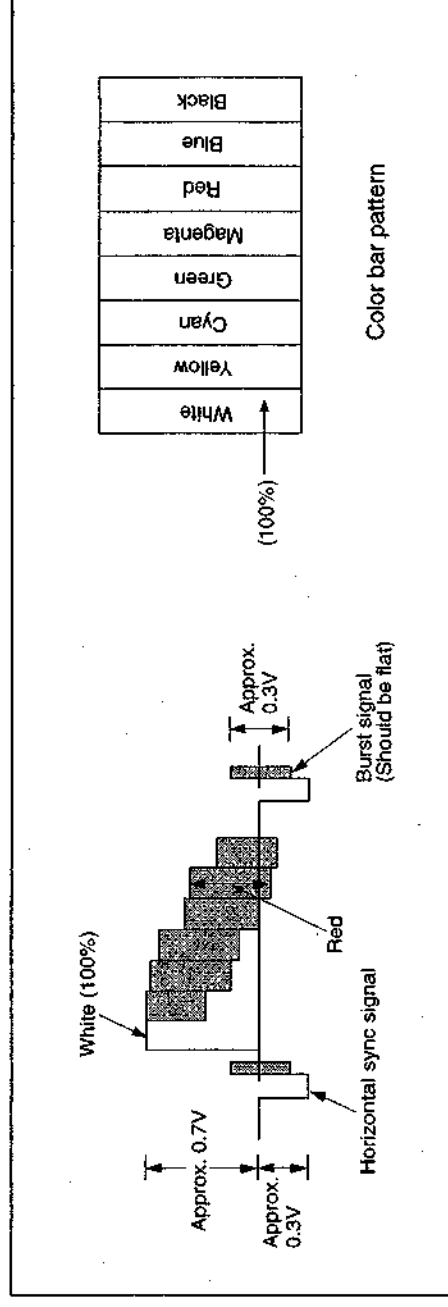


Fig. 7-2-4 Color Bar Signal of Alignment Tape

2-1-6. Input/Output Levels and Impedance


- Video input :
LINE-1 (EURO-AV)
Pin 20
LINE-2 IN
(phono jack) (1)
Input signal : 1Vp-p, 75ohms, unbalanced,
sync negative
Video output :
LINE-1 (EURO-AV)
Pin 19
LINE OUT
(phono jack) (1)
Output signal : 1Vp-p, 75ohms, unbalanced,
sync negative
S VIDEO input :
LINE-2 IN
(4-pin, mini-DIN) (1)
Luminance (Y) : 1Vp-p, 75ohms,
unbalanced, sync negative
Chrominance (C) : 0.3Vp-p, (color burst),
75ohms, unbalanced
S VIDEO output :
LINE-1 (EURO-AV)
Y : Pin 19
C : Pin 15
LINE OUT
(4-pin, mini-DIN)
Y : 1Vp-p, 75ohms, unbalanced,
sync negative
C : 0.3Vp-p, (color burst), 75ohms,
unbalanced
Audio input :
LINE-1 (EURO-AV)
R : Pin 2
L : Pin 6
LINE-2 IN
(phono jack) (2)
Input level : -7.5dBs (0dBs=0.775Vrms)
Input impedance : more than 47kilohms
LINE-1 (EURO-AV)
R : Pin 1
L : Pin 3
LINE OUT
(phono jack) (2)
Standard level : -7.5dBs at load impedance
47kilohms
Output impedance : less than 10kilohms

2-1-7. Recording Mode (Normal/HIS) Select

The set selects the recording mode automatically according to the tape type.

2-1-8. Adjustment Sequence

The adjustment should be performed in the following sequence.

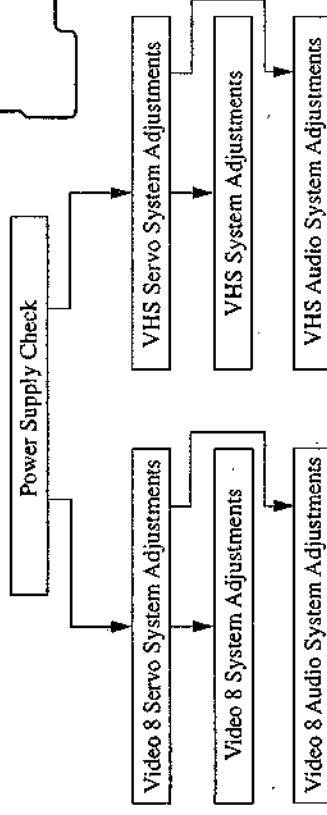

2-2. POWER SUPPLY CHECK


2-2-1. Output Voltage Check (PS-380 Board)

Mode	Playback (Both Video 8 and VHS)
Measuring Instrument	Digital voltmeter
D 6V Check	
Measurement point	CN401 pin ①, CN402 pin ①
Specified value	5.8 ± 0.1Vdc
SW 9V Check	
Measurement point	CN402 pin ③
Specified value	9.00 ± 0.25Vdc
UN 6V Check	
Measurement point	CN401 pins ④, ⑤
Specified value	5.8 ± 0.1Vdc
UNREG 13V Check	
Measurement point	CN401 pins ⑦, ⑧, CN402 pins ⑩, ⑪
Specified value	13.3 ± 0.3Vdc
SW -8V Check	
Measurement point	CN402 pin ⑥
Specified value	-8.4 ± 0.4Vdc
SW 5V Check	
Measurement point	CN402 pins ⑤, ⑥
Specified value	5.00 ± 0.12Vdc

[Check Method]

- 1) Each of these supply voltages must meet its specified value.

PS-380 BOARD (CONDUCTOR SIDE)

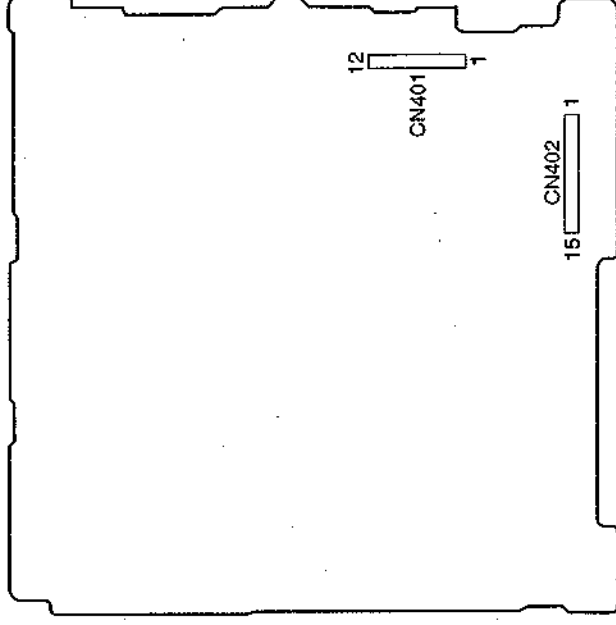

2-3. SYSTEM CONTROL/TIMER ADJUSTMENT

1. EEPROM Data Initial Value Writing

When the EEPROM (FR-113 board IC002) is replaced, write the EEPROM data initial value before starting the adjustment. Refer to "Page D Memory Map" of section "7-1. SERVICE MODE" for the initial value.

Mode	E-E
Signal	Any signals
Adjustment page	D
Adjustment address	00 to 25, D8 to EF

Input method

- 1) Set the data : 01 to the page : 1, address : 00.
- 2) Select the page D and enter the initial values to the respective addresses.
(Be sure to press the PAUSE button after setting data (initial value) before changing the address.)

2. Timer Clock Adjustment (MV-34 Board)

Adjusts accuracy of the watch.

If this adjustment is poor, the watch will be faster or slower.

Measurement point	IC801 pin ⑤ (JL833, CLK OUT)
Measuring instrument	Frequency counter (Interval counter mode)
Adjustment element	CT801
Specified value	0.1249995 ± 0.0000005 seconds

Note : Do not adjust CT801 unless IC801 is exchanged.

[Adjustment Method]

- 1) Connect IC801 pin ⑥ (JL835) to IC802 pin ⑤ (5V). (Setting the adjustment mode)
- 2) Connect a frequency counter as shown below.
- 3) Adjust CT801 for the specified value of oscillating rate.

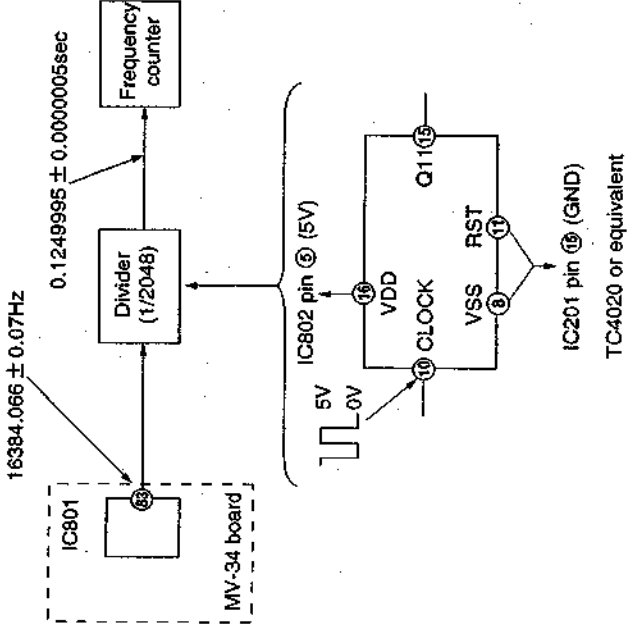


Fig. 7-2-5

2-4. Video 8 SERVO SYSTEM ADJUSTMENT

1. Switching Position Adjustment (MH-18 Board)

If deviated, the skew distortion becomes visible on playback display.

Mode	Playback
Signal	Alignment tape for tracking adjustment (WR5-ICP)
Measurement point	CH1 : CN102 pin ② (RF SWP) CH2 : CN102 pin ③ (PB RF)
Measuring instrument	Oscilloscope
Adjustment page	D
Adjustment address	12, 13
Specified value	$t_1 = 0 \pm 5\mu\text{sec}$

[Adjustment Method]

- 1) Set data : 01 to page : 1, address : 00.
- 2) Set data : 07 to page : D, address : 13.
- 3) Change the data of page : D address : 13 (for coarse adjustment) and address : 12 (for fine adjustment) until the switching position (t₁) satisfies the specified value.

Note : Before changing the address, be sure to press the PAUSE button of the adjustment remote commander. If it is not pressed, the new data will not be saved in memory.

- 4) Press the PAUSE button of the adjustment remote commander.
- 5) Set data : 00 to page : 1, address : 00.

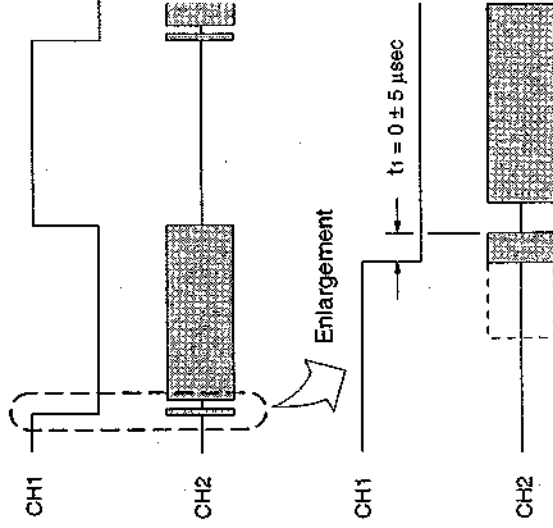


Fig. 7-2-6

2. Capstan Duty Automatic Adjustment

Adjust the duty cycle of the capstan FG signal to improve the servo characteristics. If deviated, jitter will increase.

Mode	Forced record (SP mode)
------	-------------------------

[Adjustment Method]

- 1) Set data : 01 to page : 1, address : 00.
- 2) Set data : 02 to page : 3, address : 00.
- 3) Set data : 07 to page : 3, address : 02.
- 4) Recording starts, the capstan duty is automatically adjusted and recording ends.
- 5) Confirm that "41 : 41 : 41" is displayed on the FL display tube.
- 6) Set data : 00 to page : 3, address : 02.
- 7) Set data : 00 to page : 3, address : 00.
- 8) Turn off the main power.

3. Reverse Direction SLOW Adjustment

Mode	Record and reverse direction SLOW playback (SP mode)
Signal	Color bar
Measurement point	CH1 : CN102 pin ② (RF SWP) CH2 : CN102 pin ③ (PB RF)
Measuring instrument	Oscilloscope
Adjustment page	D
Adjustment address	22
Specified value	A = B

[Adjustment Method]

- 1) Record the color bar signal in the SP mode.
- 2) Playback the recorded segment in the reverse direction SLOW mode.
When noise appears on the playback picture, perform the following adjustment.
- 3) Connect the adjustment remote commander and set the HOLD switch to ON.
- 4) Set data : 02 to page : 3, address : 00.
- 5) Set data : 02 to page : 3, address : 01.
- 6) Change the data of page : 3, address : 1B until amplitude of the portion A and the portion B of the PB RF signal are equal. (Adjust it in the reverse direction SLOW playback mode.)
- 7) Take reading of the data of page : 3, address : 1B.
- 8) Set data : 01 to page : 1, address : 00.
- 9) Set the data which is read in step 7) into page : D, address : 22.
- 10) Press the PAUSE button of the adjustment remote commander.
- 11) Set data : 02 to page : 1, address : 00.
- 12) Set data : 02 to page : 3, address : 00.
- 13) Set data : 00 to page : 3, address : 01.
- 14) Set data : 00 to page : 3, address : 1B.

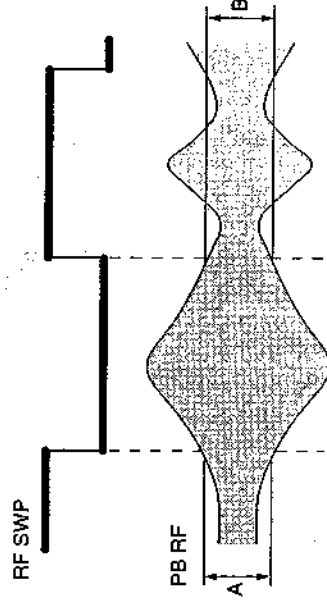


Fig. 7-2-7

4. Double Speed Playback Adjustment

Mode	Record and forward direction double speed playback (Hi8 SP mode)
Signal	Color bar
Measurement point	CH1 : CN102 pin ② (RF SWP) CH2 : CN102 pin ③ (PB RF)
Measuring instrument	Oscilloscope
Adjustment page	D
Adjustment address	24
Specified value	Noise must not appear on the playback picture.

[Adjustment Method]

- 1) Record the color bar signal in the Hi8 SP mode.
- 2) Playback the recorded segment in the forward direction double speed mode.
When noise appears on the playback picture, perform the following adjustment.
- 3) Connect the adjustment remote commander and set the HOLD switch to ON.
- 4) Set data : 02 to page : 3, address : 00.
- 5) Change the data of page : 3, address : 1A until noise does not appear on the playback picture. (Adjust it in the forward direction double speed mode.)
- 6) Take reading of the data of page : 3, address : 1A.
- 7) Set data : 01 to page : 1, address : 00.
- 8) Set the data which is read in step 6) into page : D, address : 24.
- 9) Press the PAUSE button of the adjustment remote commander.
- 10) Set data : 00 to page : 1, address : 00.
- 11) Set data : 02 to page : 3, address : 00.
- 12) Set data : 00 to page : 3, address : 1A.

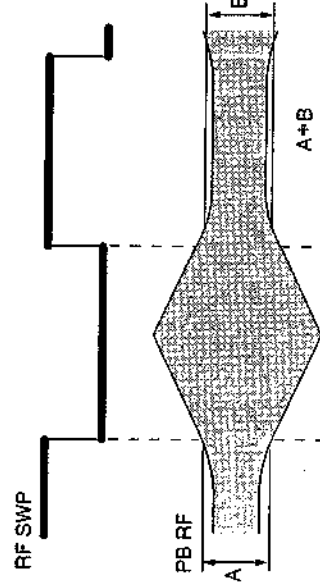


Fig. 7-2-8

2-5. Video 8 VIDEO SYSTEM ADJUSTMENT

2-5-1. Video 8 Video System Adjustment

The color bar video signal which is supplied from pattern generator is used as the video input signal for the record mode video system adjustment. Confirm that the input color bar signal conforms with the specifications specified in Fig. 7-2-2 and Fig. 7-2-3 and the section "Input Signal Check".

Set the switches of the machine to the following position unless otherwise specified.

- VHS/Video 8 selector Video 8
- Input selector LINE 1
- Recording time SP
- LINE OUT 1 selector Video 8

Perform the adjustment in the following order:

[Adjustment Order]

- 1) Playback Frequency Characteristics Adjustment
- 2) SYNC AGC Adjustment
- 3) Chroma Comb Filter Adjustment
- 4) Pre-emphasis Input Level Adjustment
- 5) Hi8 Mode De-emphasis Level Adjustment
- 6) Playback Level Adjustment
- 7) Normal 8 mode De-emphasis Level Adjustment
- 8) Normal 8 Mode Y FM Carrier Frequency
Y FM Deviation Adjustment
- 9) Hi8 Mode Y FM Carrier Frequency
Y FM Deviation Adjustment
- 10) Chroma Emphasis Adjustment
- 11) Y-FM Record Current Adjustment
- 12) Chroma Record Current Adjustment
- 13) Read Clock Adjustment
- 14) AFC Adjustment
- 15) APC Adjustment
- 16) CNR Gain Adjustment

1. Playback Frequency Response Adjustment (RP-211, MH-18 Boards)

Corrects the video head characteristics variation. If deviated, the playback picture looks rough or generates over-modulation noise (black streaking noise).

Note: The adjustment for CH-2 is shown in parenthesis [].

Mode	Playback
Signal	Alignment tape for frequency characteristics adjustment (WRS-7NE)
Measurement point	CN102 pin ③ (PB RF) (MH-18) External trigger: CN102 pin ② (RF SWP) (MH-18) Trigger slope: - [+]
Measuring instrument	Oscilloscope
Adjustment element	RV101 [RV102] (RP-211)
Specified value	4.5MHz level versus 8.5MHz level = 3 : (2 ± 0.2)

[Adjustment Method]

- 1) Adjust RV101 [RV102] until the ratio of 4.5MHz level versus 8.5MHz level of the PB RF output waveform becomes 3 : (2 ± 0.2)

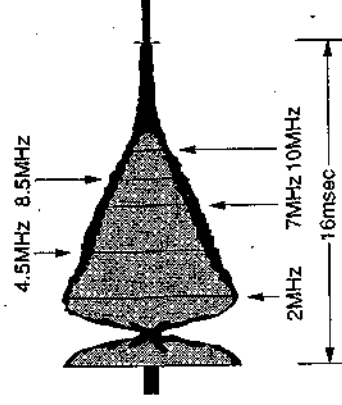


Fig. 7-2-9

2. Sync AGC Adjustment (MH-18 Board)

Adjusts the record Y signal level.

If deviated, the E-E picture or the self record/playback picture will be too bright or too dark. The color will not be reproduced correctly.

Mode	E-E
Signal	Color bar (S VIDEO)
Measurement point	CN501 pin ② (S-Y OUT)
Measuring instrument	Oscilloscope
Adjustment element	RV504 (AGC)
Specified value	A = 1.00 ± 0.02Vp-p

[Adjustment Method]

- 1) Adjust RV 504 until the Y signal level (A) satisfies the specified value.

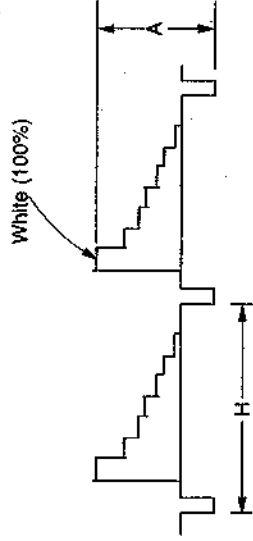


Fig. 7-2-10

3. Chroma Comb Filter Adjustment (MH-18 Board)

Adjusts the level and delay time of the chroma signal comb filter using the 1H delayed video signal.

If deviated, beat will be significant in the playback picture.

Mode	E-E
Signal	Color bar (VIDEO)
Measurement point	IC505 pin ③ (Y COMB OUT)
Measuring instrument	Oscilloscope
Adjustment element	RV508 (C CONB G) RV511 (C COMB P)
Specified value	Residual chroma component is minimized. (30mVp-p or less)

[Adjustment Method]

- 1) Adjust RV 508 and RV 511 alternately until the residual chroma component is minimized. (30mVp-p or less)

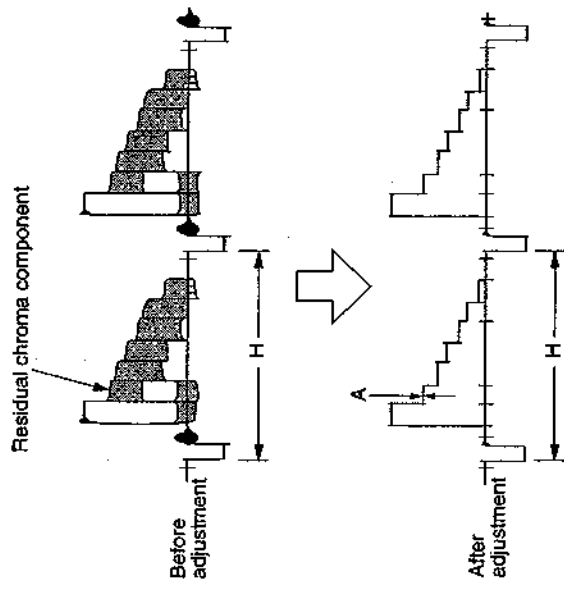


Fig. 7-2-11

4. Pre-emphasis Input Level Adjustment (MH-18 Board)

Set the level of the brightness signal before input to the emphasis circuit. Misalignment will result in excessively dark or bright recorded picture and cause smearing.

Mode	E-E
Signal	Color bar (S VIDEO)
Measurement point	IC505 pin ⑤ (EMPH IN) or IC508 pin ⑦
Measuring instrument	Oscilloscope
Adjustment element	RV513 (EMPH Y)
Specified value	A = $0.50 \pm 0.02V_{p-p}$

[Adjustment Method]

- 1) Use RV109 and adjust to A = $0.50 \pm 0.02V_{p-p}$.

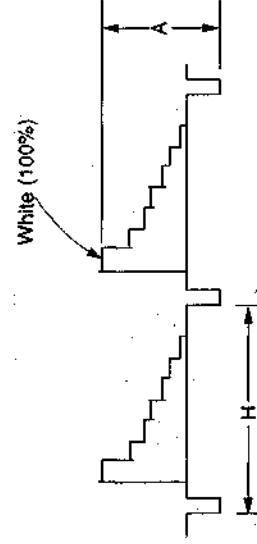


Fig. 7-2-12

5. Hi8 Mode De-emphasis Level Adjustment (MH-18 Board)

Sets the luminance De-emphasis level for Hi8 playback. If deviated, this causes excessive brightness or darkness.

Mode	Playback
Signal	Alignment tape : For operation check, color bar portion (WR5-8CSE)
Measurement point	IC505 pin ⑦ or IC507 pin ①
Measuring instrument	Oscilloscope
Adjustment element	RV512 (E DEEM)
Specified value	A = $0.50 \pm 0.05V_{p-p}$

[Adjustment Method]

- 1) Use RV512 to adjust to A = $0.50 \pm 0.05V_{p-p}$.



Fig. 7-2-13

6. Playback Level Adjustment (MH-18 Board)

Adjusts the playback Y signal input level. If deviated, the playback picture will be too bright or too dark.

Mode	Playback
Signal	Alignment tape for operation check, color bar segment (WR5-8CSE)
Measurement point	CN501 pin ⑤ (8-Y OUT)
Measuring instrument	Oscilloscope
Adjustment element	RV514 (PB Y)
Specified value	A = $1.00 \pm 0.02V_{p-p}$

[Adjustment Method]

- 1) Adjust RV514 until the Y signal level (A) satisfies the specified value.

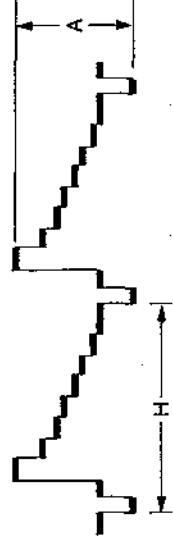


Fig. 7-2-14

7. Normal 8 Mode De-emphasis Level Adjustment (MH-18 Board)

Set the de-emphasis level of the brightness signal during normal playback. Misalignment will cause played picture to be excessively bright or dark. Black or white stretching may occur.

Mode	Playback
Signal	Alignment tape : For operation check, color bar portion (WR5-5CSP)
Measurement point	CN501 pin ⑤ (8-Y OUT)
Measuring instrument	Oscilloscope
Adjustment element	RV510 (L DEEM)
Specified value	A = $1.00 \pm 0.02V_{p-p}$

[Adjustment Method]

- 1) Use RV510 to adjust to A = $1.00 \pm 0.02V_{p-p}$.

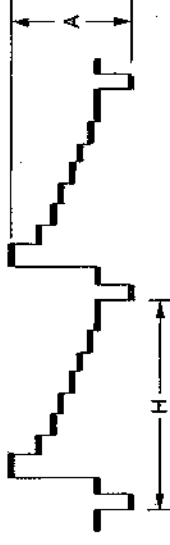


Fig. 7-2-15

8. Normal 8 Mode Y FM Carrier Frequency, Y FM Deviation Adjustment

Set the frequency deviation of the modulated brightness signal during normal mode recording. Misalignment will cause recorded picture to be excessively bright or dark. Black or white stretching may occur.


(1) Normal 8 Mode Y FM Carrier Frequency Adjustment (MH-18 Board)

Mode	E-E
Signal	No signal
Measurement point	IC505 pin ⑨ (Y RF OUT)
Measuring instrument	Frequency counter Oscilloscope
Adjustment element	RV505 (L CARR)
Specified value	$4.38 \pm 0.05\text{MHz}$

Note : A frequency counter should be connected through a buffer amplifier (oscilloscope, etc) having a high impedance and a low capacitance.

[Adjustment Method]

- 1) Insert MP type cassette tape.
- 2) Use RV505 to adjust to $4.38 \pm 0.05\text{MHz}$.

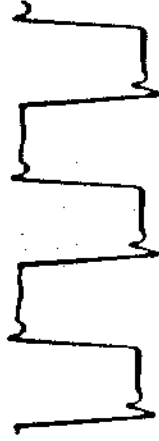

$4.38 \pm 0.05\text{MHz}$

Fig. 7-2-16

(2) Normal 8 Mode Y FM Deviation Adjustment (MH-18 Board)

Mode	Record and playback
Signal	Color bar (S VIDEO)
Measurement point	CN501 pin ⑩ (8-Y OUT)
Measuring instrument	Oscilloscope
Adjustment element	RV506 (L DEV)
Specified value	Playback level should be at $1.00 \pm 0.03\text{Vp-p}$

[Adjustment Method]

- 1) Insert MP type cassette tape.
- 2) Record color bar signal.
- 3) Play back the recorded signal.
- 4) Check the playback output level.
Specification : $1.00 \pm 0.03\text{Vp-p}$
- 5) If the specification is not met, rotate RV506 as directed below and then repeat Steps 2) to 4).

	Direction of Rotating RV506
Over specified value	Clockwise (○)
Below specified value	Counterclockwise (⊖)

- 6) Perform "Normal 8 Mode Y FM Carrier Frequency Adjustment".

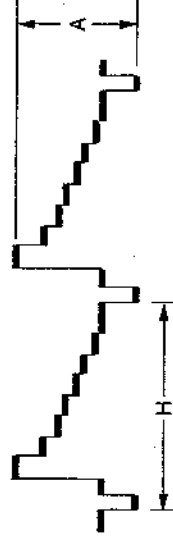


Fig. 7-2-17

9. Hi8 Mode Y FM Carrier Frequency, Y FM Deviation

9. Hi8 Mode Y FM Carrier Frequency, Y FM Deviation Adjustment

Set the frequency deviation of the modulated brightness signal during Hi8 mode recording. Misalignment will cause recorded picture to be excessively bright or dark. Black or white stretching may occur.


(1) E Mode Y FM Carrier Frequency Adjustment (MH-18 Board)

Mode	E-B
Signal	No signal (select Line in)
Measurement point	IC505 pin ③ (Y RF OUT)
Measuring instrument	Frequency counter Oscilloscope
Adjustment element	RV502 (E CARR)
Specified value	$5.96 \pm 0.05\text{MHz}$

Note : A frequency counter should be connected through a buffer amplifier (oscilloscope, etc) having a high impedance and a low capacitance.

[Adjustment Method]

- 1) Insert ME type cassette tape.
- 2) Use RV502 to adjust to $5.96 \pm 0.05\text{MHz}$.

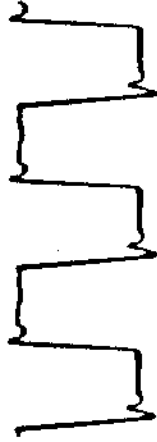

$5.96 \pm 0.05\text{MHz}$

Fig. 7-2-18

(2) Hi8 Mode Y FM Deviation Adjustment (MH-18 Board)

Mode	Record and playback
Signal	Color bar (S VIDEO)
Measurement point	CN503 pin ③ (8-Y OUT)
Measuring instrument	Oscilloscope
Adjustment element	RV503 (E DEV)
Specified value	Playback level should be at $1.00 \pm 0.03\text{Vp-p}$

[Adjustment Method]

- 1) Insert ME type cassette tape.
- 2) Record color bar signal.
- 3) Play back the recorded signal.
- 4) Check the playback output level.
Specification : $1.00 \pm 0.03\text{Vp-p}$
- 5) If the specification is not met, rotate RV503 as directed below and then repeat Steps 1) to 4).

	Direction of Rotating RV503
Over specified value	Clockwise (↻)
Below specified value	Counterclockwise (↺)

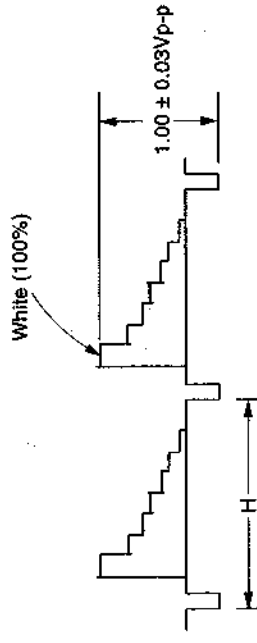


Fig. 7-2-19

10. Chroma Emphasis Adjustment (MH-18 Board)

Adjust the center frequency of chroma emphasis. If deviated, color of the playback picture will be abnormal.

Mode	Record
Signal	Color bar
Measurement point	IC505 pin ③ (B. EMPH OUT)
Measuring instrument	Oscilloscope
Adjustment element	RV507 (C EMPH)
Specified value	The fo component is minimum.

[Adjustment Method]

- 1) Connect the adjustment remote commander. Set the HOLD switch to ON position.
- 2) Set data: 02 to page: 3, address: 00.
- 3) Set data: 04 to page: 3, address: 01.
- 4) Adjust RV507 until the latter half period of the chroma's yellow signal is minimized.
- 5) Set data: 00 to page: 3, address: 01.
- 6) Set the HOLD switch to OFF position.

Allow the latter half of the yellow component to have a minimum amplitude.

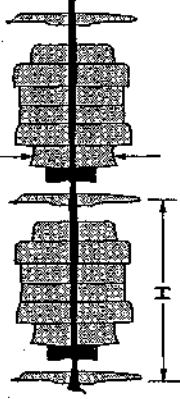


Fig. 7-2-20

11. Recording Y FM Level Adjustment (MH-18 Board)

Set the level of Y FM signal to be recorded on tape. Shift to lower level will result in deteriorated S/N ratio of self-recorded picture. Shift to higher level will cause over-modulation noise (black stretching noise) on self-recorded picture.

Mode	E-E
Signal	No signal
Measurement point	Q518 emitter or IC101 pin ⑥ (RBC Y RF)
Measuring instrument	Oscilloscope (20MHz bandwidth)
Adjustment element	RV501
Specified value	A = 250 ± 3 mVp-p

Note : Set an oscilloscope to 20MHz bandwidth.

[Adjustment Method]

- 1) Insert ME tape.
- 2) Use RV501 to adjust to A = 250 ± 3 mVp-p.



Fig. 7-2-21

12. Recording Chroma Level Adjustment (MH-18 Board)

Set the level of the chroma signal to be recorded on tape. Shift to lower level will result in deteriorated S/N ratio of the chroma signal of self-recorded picture.

Shift to higher level will result in deteriorated S/N ratio of the Y signal in darker color portion of self-recorded picture and cause white stretching noise.

Mode	E-E
Signal	Color bar
Measurement point	Q536 emitter
Measuring instrument	Oscilloscope (20MHz bandwidth)
Adjustment element	RV509 (REC C)
Specified value	Adjust so that the red color portion of the chroma signal is at 160 ± 2 mVp-p.

[Adjustment Method]

- 1) Insert ME type cassette tape.
- 42) Adjust RV509 so that the flat portion of the chroma signal red component has the level 160 ± 2 mVp-p.

Adjustment so that the flat portion of the chroma signal RED component has the level 160 ± 2 mVp-p.

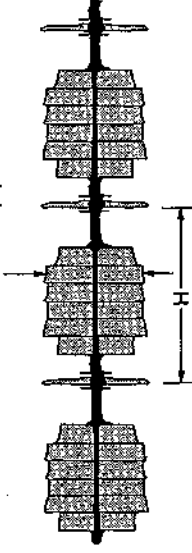


Fig. 7-2-22

2-6. Video 8 AUDIO SYSTEM ADJUSTMENT

- The color bar video signal is used as the video input signal for the audio system adjustment.
- Set the switches of the machines to the following position unless otherwise specified.


VHS/Video 8 selector	Video 8
Input selector	LINE 1
LINE OUT 1 selector	Video 8
Recording time	SP
Video 8 audio input (note 1)	Stereo
Audio monitor (note 2)	

When stereo tape is played back Stereo

When bilingual tape is played back Main/left channel

Note 1 : Set from the menu display.

Note 2 : Set from remote commander.

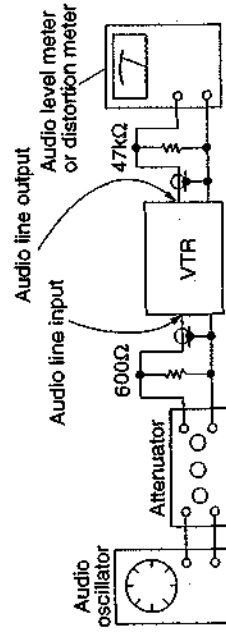

[Connection of Equipment for Audio Measurement]

In addition to equipment for video measurement, the audio measurement equipment should be illustrated in Fig. 7-2-23.

Note 3 : Feed the same signal to both L- and R-channels unless otherwise specified when inputting audio signal.

Note 4 : For the adjustment item in which both L- and R-channels are adjusted, the R-channel adjustment item is shown in [].

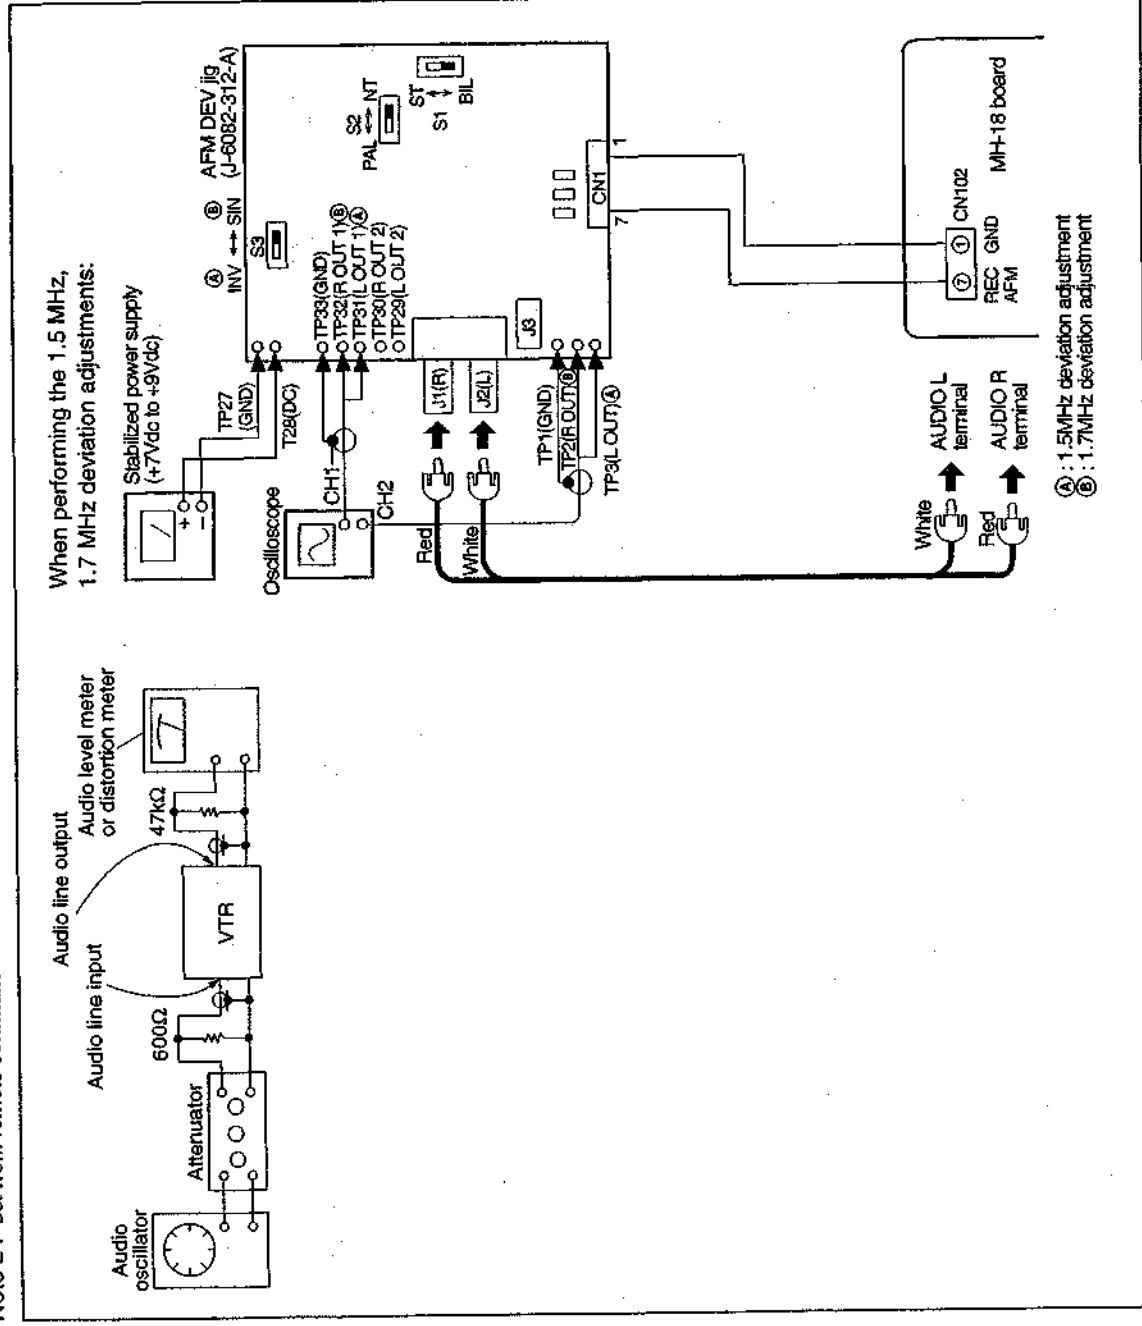


Fig. 7-2-23

2-6-1. Video 8 Audio System Adjustment

[Adjustment Order]

- 1) 1.5 MHz Carrier Frequency and Level Check
- 2) 1.5 MHz Deviation Adjustment
- 3) 1.7 MHz Deviation Adjustment
- 4) Band-pass Filter Adjustment
- 5) E-E Output Level Check
- 6) Overall Frequency Response Characteristics Check
- 7) Over Level Characteristics and Distortion Check
- 8) Overall Noise Level Check
- 9) Separation Adjustment

1. 1.5 MHz Carrier Frequency and Level Check (MH-18 Board)

Mode	Record
Signal	No signal
Measurement point	CN102 pin ⑦ (REC AFM)
Measuring instrument	Frequency counter and oscilloscope (Note 1)
Specified value	Level : $A = 165 \pm 20\text{mVp-p}$ Frequency : $f = 1500.3 \pm 3\text{ kHz}$

Note 1 : Use the high impedance ($1\text{M}\Omega$ or more) and low capacitance (20pF or less) probe.

Note 2 : Connect IC201 pin ④ with GND using jumper.

[Check Method]

- 1) Confirm that frequency and level of the 1.5MHz carrier signal satisfies the specified value.

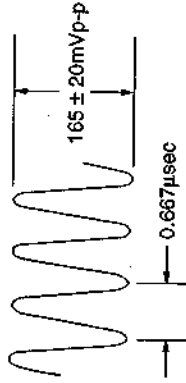


Fig. 7-2-24

2. 1.5 MHz Deviation Adjustment (MH-18 Board)

Sets the spectrum of the L-channel (L + R/2 signal) which is modulated during recording. If deviated, audio signal crosstalk during record and playback deteriorate and the audio level will decrease.

Mode	Record
Signal	Connect the AFM DEV adjustment jig output signal to the audio LINE IN 1 terminal left and right channels.
Measurement point	CH1 : TP31 of AFM DEV adjustment jig CH2 : TP3 of AFM DEV adjustment jig
Measuring instrument	Oscilloscope ADD mode CH2 INV mode
Adjustment element	RV203 (1.5M DEV)
Specified value	The level difference between CH1 and CH2 signals must be 40mV or less.

[Connection]

- 1) Connect CN2 of the AFM DEV adjustment jig to CN102 of the MH-18 board.
- 2) Connect the audio output terminal (J1, J2) of the AFM DEV adjustment jig to audio LINE IN 1 terminal of this machine.
- 3) Connect DC power supply (+7 to +9Vdc) to TP28 (DC) and TP27 (GND) of the AFM DEV adjustment jig.
- 4) Set the switches of the AFM DEV adjustment jig to the following positions.

S1 ST position
S2 NT position
S3 SIN position

[Adjustment Method]

- 1) Calibrate the CH1 and CH2 VERT GAIN of an oscilloscope to the unity gain.
- 2) Set an oscilloscope to ADD mode and set CH2 to INV mode.
- 3) Adjust RV203 for minimum audio level difference between CH1 and CH2.

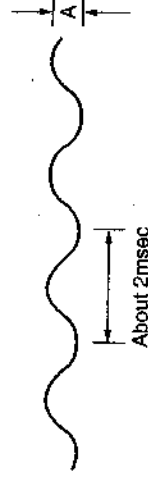


Fig. 7-2-25

3. 1.7 MHz Deviation Adjustment (MH-18 Board)

Sets the spectrum of the R-channel (L-R/2 signal) which is modulated during recording. If deviated, audio signal crosstalk during record and playback deteriorate and the audio level will decrease.

Mode	Record
Signal	Connect the AFM DEV adjustment jig output signal to the audio LINE IN 1 terminal left and right channels.
Measurement point	CH1 : TP32 of AFM DEV adjustment jig CH2: TP2 of AFM DEV adjustment jig
Measuring instrument	Oscilloscope ADD mode CH2 INV mode
Adjustment element	RV201 (1.7M DEV)
Specified value	The level difference between CH1 and CH2 signals must be 40mV or less.

[Connection]

- 1) Connect CN2 of the AFM DEV adjustment jig to CN102 of the MH-18 board.
- 2) Connect the audio output terminal (J1, J2) of the AFM DEV adjustment jig to audio LINE IN 1 terminal of this machine.
- 3) Connect DC power supply (+7 to +9Vdc) to TP28 (DC) and TP27 (GND) of the AFM DEV adjustment jig.
- 4) Set the switches of the AFM DEV adjustment jig to the following positions.

S1 ST position
S2 NT position
S3 INV position

[Adjustment Method]

- 1) Calibrate the CH1 and CH2 VERT GAIN of an oscilloscope to the unity gain.
- 2) Set an oscilloscope to ADD mode and set CH2 to INV mode.
- 3) Adjust RV201 for minimum audio level difference between CH1 and CH2.

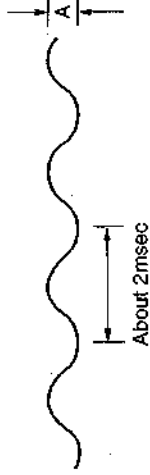


Fig. 7-2-26

4. Band-pass Filter Adjustment (MH-18 Board)

Adjusts the pass band frequency of the band-pass filter so that the AFM signal can be correctly separated from the playback RF signal. If deviated, identification error of monaural and stereo can occur, and noise and distortion will increase when playing back a large sound.

Mode	Playback
Signal	Alignment tape For AFM deviation check (WRS-9CS)
Measurement point	Audio LINE OUT 1 terminal, left or right channel
Measuring instrument	Audio distortion meter
Adjustment element	RV202 (BPF ADJ)
Specified value	The right and left channels must have the same amount of distortion (0.1% or less) with minimum distortion (1 to 1.5%)

[Adjustment Method]

- 1) Select the "MAIN/LEFT" channel using the "AUDIO MONITOR" button of the remote commander.
- 2) Adjust RV202 for minimum distortion.
- 3) Select the "MAIN/RIGHT" channel using the "AUDIO MONITOR" button of the remote commander.
- 4) Adjust RV202 for minimum distortion.
- 5) Repeat steps from 1) to 4) until the right and left channels must have the same amount of distortion with minimum distortion.

5. E-E Output Level Check (MH-18 Board)

Mode	E-E
Signal	400 Hz, -7.5 dBs Audio LINE IN 1 terminal, Right [Left]
Measurement point	Audio LINE OUT terminal, Right [Left]
Measuring instrument	Audio level meter
Specified value	-7.5 ± 3dBs

[Check Method]

- 1) Confirm that the 400Hz signal level satisfies the specified value.

6. Overall Frequency Characteristic Check

Note : Measurement point during SUB channel check is shown in [1].

Mode	Self-record playback (Bilingual mode) (Note 1, Note 2)
Signal	<ul style="list-style-type: none"> Ⓐ 400Hz, -17.5dBs Ⓑ 20Hz, -17.5dBs Ⓒ 14kHz, -17.5dBs : Audio Line Input terminals, left and right
Measurement point	Audio Line Output terminals, left and right
Measuring instrument	Audio level meter
Specified value	The playback output levels of 20Hz should be $-3 \pm 3\text{dB}$ and 14kHz should be $0 \pm 3\text{dB}$ s with 400Hz playback output level at 0dBs.

Note 1 : Bilingual mode recording.

Select "STEP UP MENU 2", "Video 8 AUDIO L IN : BIL" on the menu screen and press "EXECUTE" button.

Note 2 : Select "MAIN/SUB" by pressing "AUDIO MONITOR" button of the remote commander.

[Check Method]

- 1) Record signals A to C in turn in bilingual mode. (Note 1)
- 2) Play back the recorded portion. (Note 2)
- 3) Check that the frequency response characteristics satisfies the specified value.

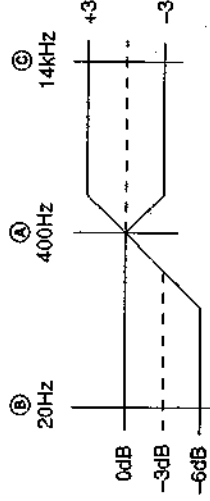


Fig. 7-2-27

7. Overall Distortion Factor, Level Check

Note : Measurement point and specified value during SUB channel check are shown in [1].

Mode	Self-record playback (Bilingual mode) (Note 1, Note 2)
Signal	400Hz, -17.5dBs : Audio Line Input terminals, left and right
Measurement point	Audio Line Output terminals, left [right]
Measuring instrument	Audio level meter and audio distortion meter
Specified value	Level : $-7.5 \pm 3\text{dB}$ s [$-7.5 \pm 3\text{dB}$ s] Distortion : 1.0% or less [1.5% or less] (Note 3)

Note 1 : Bilingual mode recording.

Select "STEP UP MENU 2", "Video 8 AUDIO L IN : BIL" on the menu screen and press "EXECUTE" button.

Note 2 : Select "MAIN/SUB" by pressing "AUDIO MONITOR" button of the remote commander.

[Check Method]

- 1) Record signal in bilingual mode. (Note 1)
- 2) Play back the recorded portion. (Note 2)
- 3) Check that the distortion factor satisfies the specified value.

Note 3 : These are values when a 200Hz-6kHz BPF is used.

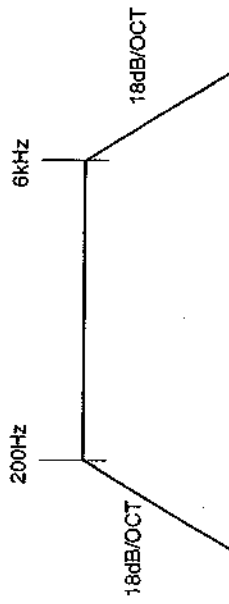


Fig. 7-2-28

8. Overall Noise Level Check

Note : Measurement point and specified value during SUB channel check are shown in [] .

Mode	Self-record playback (Bilingual mode) (Note 1, Note 2)
Signal	No signal (Audio Line Input jacks 2, left and right) (Note 3)
Measurement point	Audio Line Output terminals, left [right]
Measuring instrument	Audio level meter (Using IHP-A weighting filter)
Specified value	- 68dBs or less [- 65dBs or less]

Note 1 : Bilingual mode recording.

Select "STEP UP MENU 2", "Video & AUDIO L IN : BIL" on the menu screen and press "EXECUTE" button.

Note 2 : Select "MAIN/SUB" by pressing "AUDIO MONITOR" button of the remote commander.

Note 3 : Insert a shorting plug into the Audio Line Input Jacks : left and right.

- 1) Record signal in bilingual mode. (Note 1)
- 2) Playback the recorded portion. (Note 2)
- 3) Check that the noise level satisfies the specified value.

9. Separation Check

Mode	Self-record playback
Signal	No signal : Audio LINE IN 1 terminal left [right] 400 Hz, -7.5 dBs : Audio LINE IN 1 terminal left [right]
Measurement point	Audio LINE OUT 1 terminal left [right]
Measuring instrument	Audio level meter (using IHP-A curve weighting filter)
Specified value	-27.5dBs or less

Note : The point in parenthesis [] is the measurement point for the right channel.

[Check Method]

- 1) Insert (shorting plug into the Audio LINE IN 1 terminal left [right]. Input 400 Hz signal at -7.5 dBs to Audio LINE IN 1 terminal right [left] only.
- 2) Record the signal.
- 3) Playback the recorded portion.
- 4) Confirm that the crossstalk level (400 Hz) of the Audio LINE OUST 1 terminal left [right] is -27.5 dBs or less.

2-7. SERVO SYSTEM CHECK

1. RF Switching Position Adjustment (MV-34, RV-50 Boards)

To adjust the link of the A-ch and B-ch of the tape playback outputs. To make the unit compatible with other tapes and units. If this specification is not satisfied, the link will appear on the screen and the screen will be disrupted, etc.

Mode	Playback
Signal	Alignment tape: SP color bar portion (KRY-51P)
Measurement point	CH1 : Video LINE OUT terminal CH2 : CN002 pin ③ (RF SWP) (RV-50 board)
Measuring instrument	Oscilloscope
Adjustment element	RV202 (RF SW POS)
Specified value	$6.5 \pm 0.5H$ ($416 \pm 32 \mu\text{sec}$)

[Adjustment Method]

- 1) Short-circuit between CN101 pin ① and pin ③ on MV-34 board for about 1 second to activate the RF switching position adjustment mode.
- 2) Check that "ADJ-RF" is indicated on PL display.
- 3) Using the program + and - buttons, adjust to $6.5 \pm 0.5H$ ($416 \pm 32 \mu\text{sec}$).
- 4) Press the PAUSE button.
- 5) Press the EJECT button.

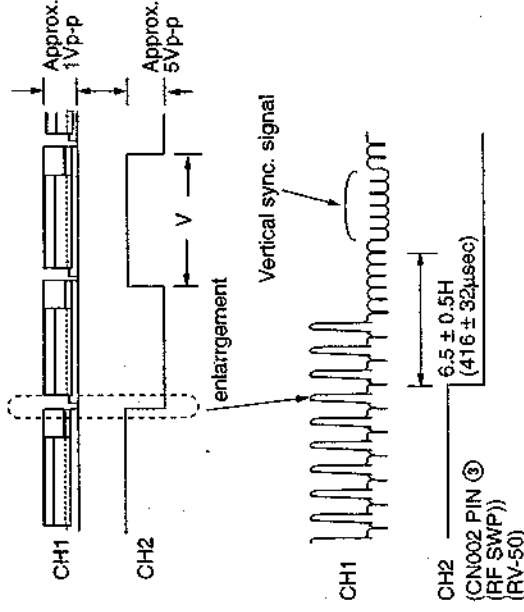


Fig. 7-2-29

2-8. VHS VIDEO SYSTEM CHECKS

Perform the VHS video system adjustment in the following order as a principle:

The color bar video signal which is supplied from pattern generator is used as the video input signal for the record mode video system adjustment. Confirm that the input sync signal and the color burst signal conform with the specifications specified in Fig. 7-2-2 and Fig. 7-2-3 and the section "Input Signal Check".

Set the switches of the machine to the following position unless otherwise specified.

- VHS/Video 8 selector VHS
- Input selector LINE 1
- Recording time Standard (SP)
- LINE OUT 1 selector VHS

Perform the adjustment in the following order:

[Checking Sequence]

- 1) X'tal OSC Check
- 2) SYNC AGC Check
- 3) White clip/Dark clip Check
- 4) Recording Y Level Check
- 5) Recording Chroma Level Check
- 6) Playback Level Check

1. X'tal OSC Check (RV-50 Board)

Mode	Playback
Signal	Alignment tape: SP Color bar portion
Measurement point	Q514 emitter
Measuring instrument	Oscilloscope and Frequency counter
Specified value	4,433,619 \pm 96Hz

Note: A frequency counter should be connected through a buffer amplifier (oscilloscope, etc.) having a high impedance and a low capacitance.

[Check Method]

- 1) Check that the oscillation frequency satisfies the specified value and that the oscillation voltage is $320 \pm 140\text{mVp-p}$.



4,443,619 \pm 96Hz

Fig. 7-2-30

2. SYNC AGC Check (RV-50 Board)

Mode	E-E
Signal	Color bar
Measurement point	IC501 pin ①
Measuring instrument	Oscilloscope
Specified value	A=2.02 \pm 0.14Vp-p

[Check Method]

- 1) Check that the Video signal level (A) satisfies the specified value.

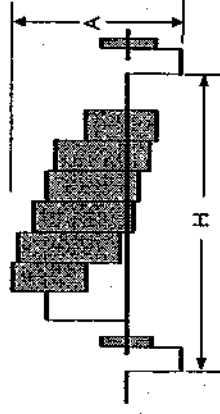


Fig. 7-2-31

3. White Clip/Dark Clip Check (RV-50 Board)

Mode	E-E
Signal	Color bar
Measurement point	IC501 pin ②
Measuring instrument	Oscilloscope
Specified value	White clip : 190 \pm 15% Dark clip : 52 \pm 10%

[Check Method]

- 1) Check that the white clip level is $190 \pm 15\%$ to the white (100%) level.
- 2) Check that the dark clip level is $50 \pm 10\%$ to the white (100%) level.

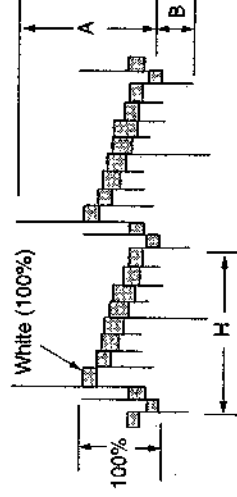


Fig. 7-2-32

4. Recording Y Level Check (RV-50 Board)

Mode	E-E
Signal	No-signal
Measurement point	Q92I emitter
Measuring instrument	Oscilloscope
Specified value	A=1000 ± 100mVp-p

[Check Method]

- 1) Check that the recording RF signal satisfies the specified value.



Fig. 7-2-33

5. Recording Chroma Level Check (RV-50 Board)

Mode	Recording
Signal	Color bar
Measurement point	Q508 emitter
Measuring instrument	Oscilloscope
Specified value	A=190 ± 20mV

[Check Method]

- 1) Confirm the amplitude of recording chroma level becomes the specified value.

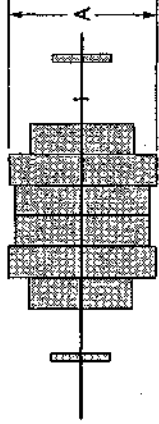


Fig. 7-2-34

6. Playback Level Check (RV-50 Board)

Mode	Playback
Signal Alignment	Alignment tape : SP mode color bar portion
Measurement point	Video LINE OUT terminal
Measuring instrument	Oscilloscope
Specified value	A=1.00 ± 0.02Vp-p

[Check Method]

- 1) Check that the playback level satisfies the specified value.


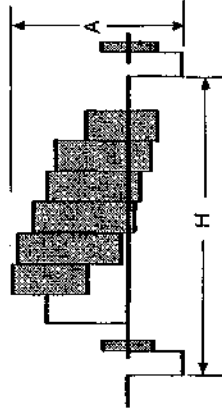


Fig. 7-2-35

2-9. VHS AUDIO SYSTEM ADJUSTMENT

Equipment connection

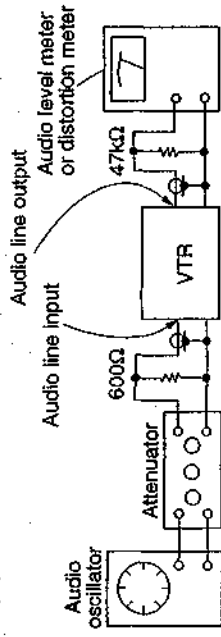

(Input signal to both L and R channels at the same time.)
 600Ω : 270 (1-249-410-11) + 330(1-249-411-11)
 47k : 1-249-437-11

Fig. 7-2-35

2-9-1. HiFi Audio System Adjustment

Set the switches of the machine to the following position unless otherwise specified.

- VHS/Video 8 selector VHS
- Input selector LINE 1
- Audio monitor Stereo
- Recording time Standard (SP)
- LINE OUT 1 selector VHS

Note : Audio monitor is switched by the remote commander during playback.

[Adjustment Order]

- 1) VCO fo Adjustment
- 2) Band-pass Filter fo Adjustment
- 3) Switching Position Adjustment
- 4) E-E Output Level Check
- 5) Overall Level Check

1. VCO F0 Adjustment (MV-34 Board)

To attain HiFi audio compatibility.
If this specification is not satisfied, the sound will be distorted.

Mode	Recording
Signal	No-signal
Measuring instrument	Frequency counter
1.8MHz adjustment	
Measurement point	CN301 pin ⑩
Adjustment element	RV603 (R-ch)
Specified value	1800±1kHz
1.4 MHz adjustment	
Measurement point	CN301 pin ⑨
Adjustment element	RV601 (L-ch)
Specified value	1400±1kHz

Note : Connect the frequency counter through the buffer amplifier (oscilloscope, etc) with high input resistance (1MΩ or more) and low capacity (10pF or less).

Before 1.4MHz adjustment, connect the RV603, R609 side to ground, and after the adjustment disconnect above mentioned connection.

[Adjustment Method]

- 1) Connect the frequency counter with each measurement points.
- 2) Adjust with RV601 and RV603 so that the frequency satisfies each specified value.

2. Band Pass Filter f0 Adjustment (MV-34 Board)

To separate the carrier accurately and ensure that the filter for cutting the video signal functions normally.
If this specification is not satisfied, the sound will be distorted.

Mode	Playback
Signal	Alignment tape SP color bar or monoscope portion
Measurement point	CN301 pin ⑩
Measuring instrument	Oscilloscope
Adjustment element	RV602
Specified value	See the figure below.

[Adjustment Method]

Adjust the L-ch and R-ch amplitudes to the same level.
(Make the waveform flat.)

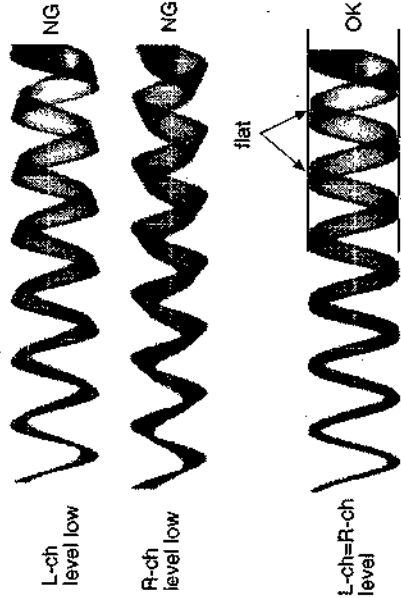


Fig. 7-2-36

3. AF Switching Position Adjustment (MV-34, RV-50 Boards)

To adjust the link of the A-ch and B-ch of the tape playback outputs.
If this specification is not satisfied, the noise will increase and cracking sounds will be produced.

Mode	Playback
Signal	Alignment tape: SP color bar portion
Measurement point	CH1 : JL101 (BPF MONI)(RV-50) CH2 : CN002 pin ③ (RF SWP) (RV-50)
Measuring instrument	Oscilloscope
Specified value	No dropouts in the RF signal

[Adjustment Method]

- 1) Short-circuit between CN101 pin ① and pin ③ on MV-34 board for about 1 second to activate the RF switching position adjustment mode.
- 2) Press the REC button to activate the AF switching position adjustment mode.
- 3) Check that "ADJ-HF" is indicated on FL display.
- 4) Using the program + and - buttons, minimize a chipped portion.
At this time, confirm that a noisy sound is not heard.
- 5) Press the PAUSE button.
- 6) Press the EJECT button.

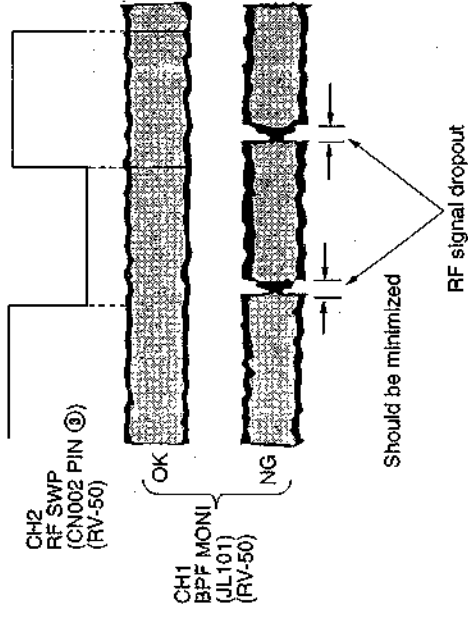


Fig. 7-2-37

2-9-2. Normal Audio System Adjustment

- For the adjustment of the audio system, perform in the SP mode if there is no special notes. Use the alignment tape.

[Connecting Instruments]

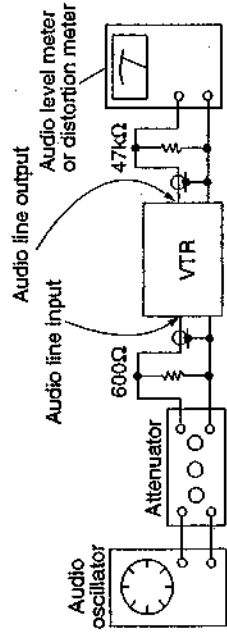


Fig. 7-2-38

- Adjust in the SP mode if there is no special indications.
- Perform the adjustment setting the switch on the following positions.
 - [CHANNEL] switch LINE 1

[Adjustment Method]

- ACE head adjustment.....Refer to the VHS mechanical adjustment manual IV.
- E-E output level check
- Overall Output level and distortion factor check
- Overall noise level check.

1. ACE Head Adjustment

Refer to the "VHS mechanical adjustment manual IV" (9-973-623-11).

2. E-E Output Level Check

Mode	E-E
Signal	400Hz, -7.5dBs : CNJ202 L/R (FL-79)
Measurement point	J901 L/R (MV-34)
Measuring instrument	Audio level meter
Specified value	-7.5 ± 2dBs

[Check Method]

- Input signal of 400Hz and -7.5dBs to the CNJ202 L/R.
- Check that the audio output level is -7.5 ± 2dBs.

3. Overall Output Level and Distortion Factor Check

Mode	Self-record playback
Signal	400Hz, -7.5dBs : CNJ202 L/R (FL-79)
Measurement point	J901 L/R (MV-34)
Measuring instrument	Audio level meter and Distortion meter
Specified value	Playback Level : -7.5 ± 3dBs Distortion: 4.0% or less

[Check Method]

- Input signal of 400Hz and -7.5dBs to the audio input.
- Record signal.
- Playback the recorded portion.
- Check that the output level is -7.5 ± 3dBs.
- Check that the distortion factor is 4.0% or less.

4. Overall Noise Level Check


Mode	Self-record playback
Signal	No signal (Insert a shorting plug into the Audio LINE IN terminal)
Measurement point	J901 L/R (MV-34)
Measuring instrument	Audio level meter (HF-A weighing filter is used)
Specified value	-45.5dBs or less

[Check Method]

- Record.
- Playback recorded portion.
- Check that noise level is -45.5dBs or less.


2-10. ADJUSTING PARTS LOCATION

RP-211 BOARD (COMPONENT SIDE)

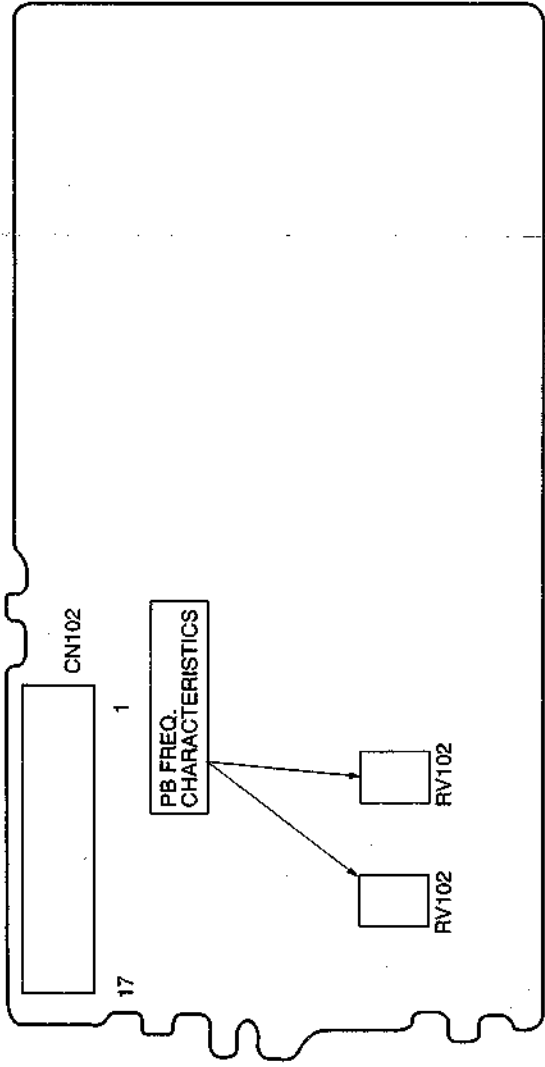


MH-18 BOARD (COI

RV-50 BOARD (COMPONENT SIDE)

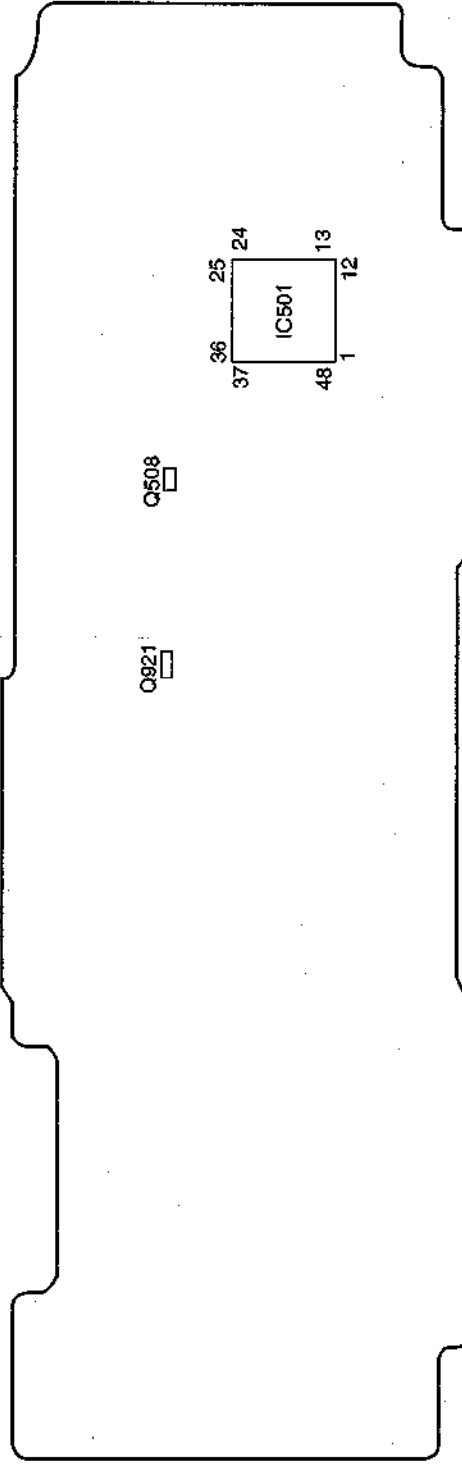


RV-50 BOARD (CONDUCTOR SIDE)

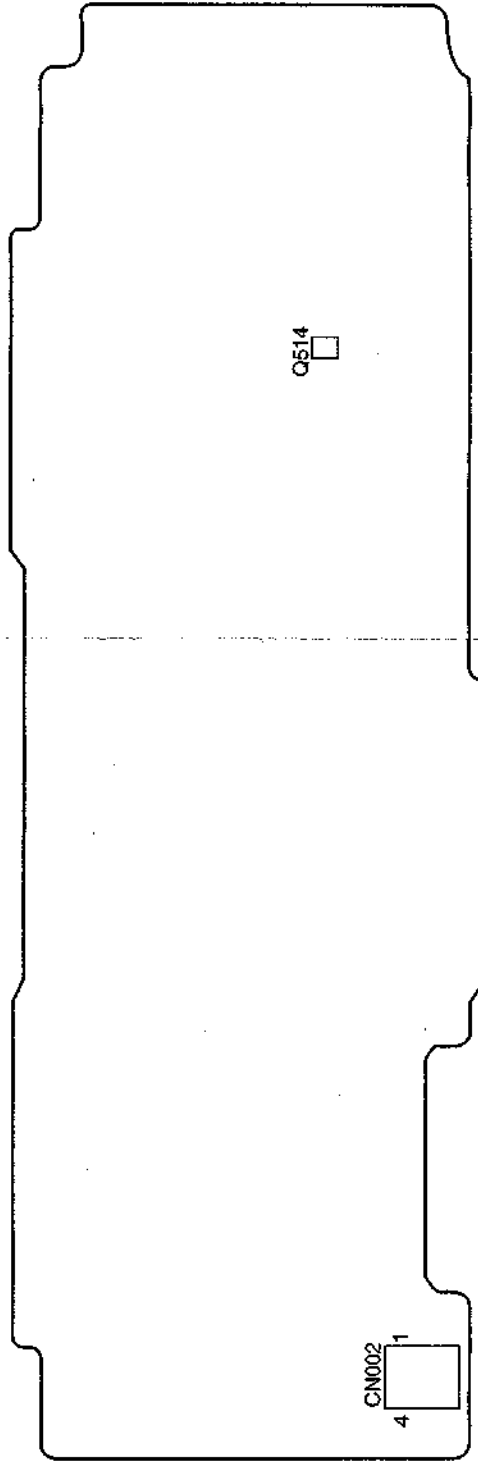


2-10. ADJUSTING PARTS LOCATION


RP-211 BOARD (COMPONENT SIDE)

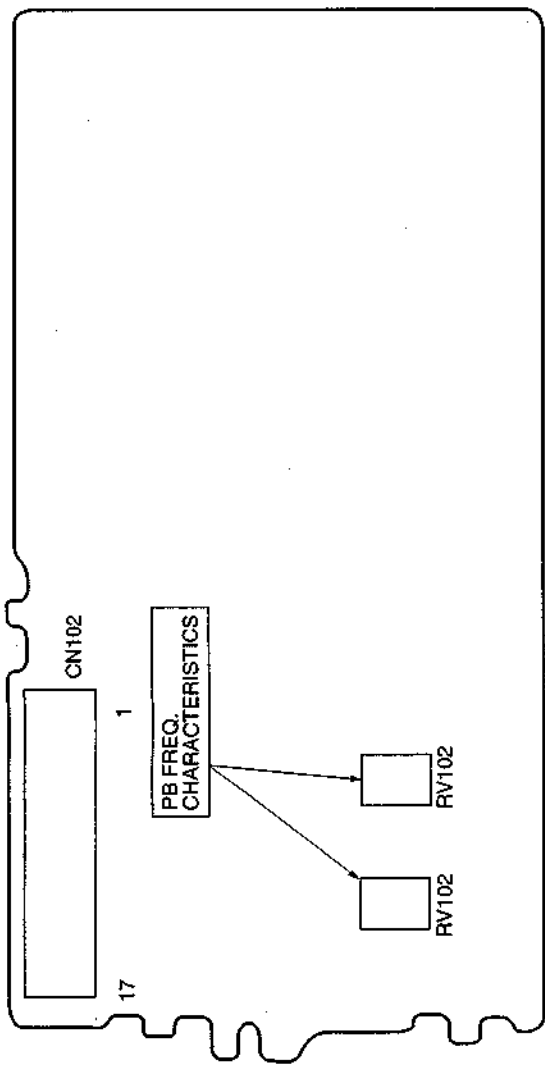


MH-18 BOARD (COMPONENT SIDE)

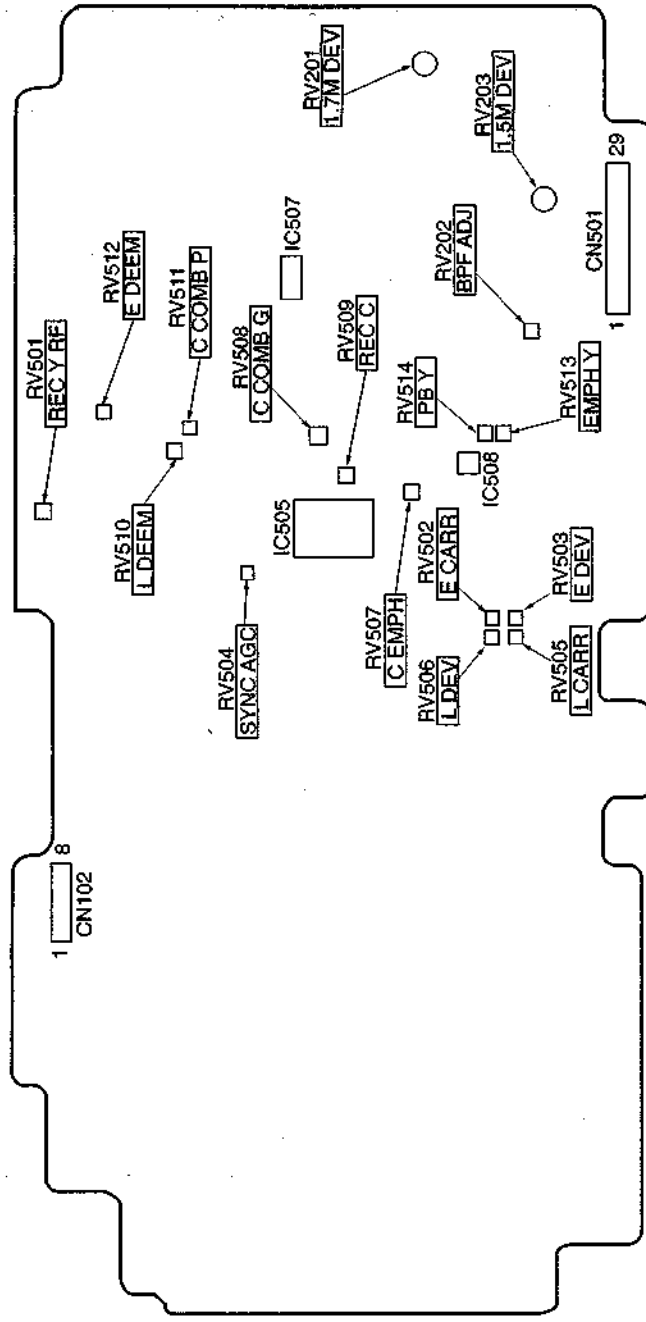


RV-50 BOARD (COMPONENT SIDE)

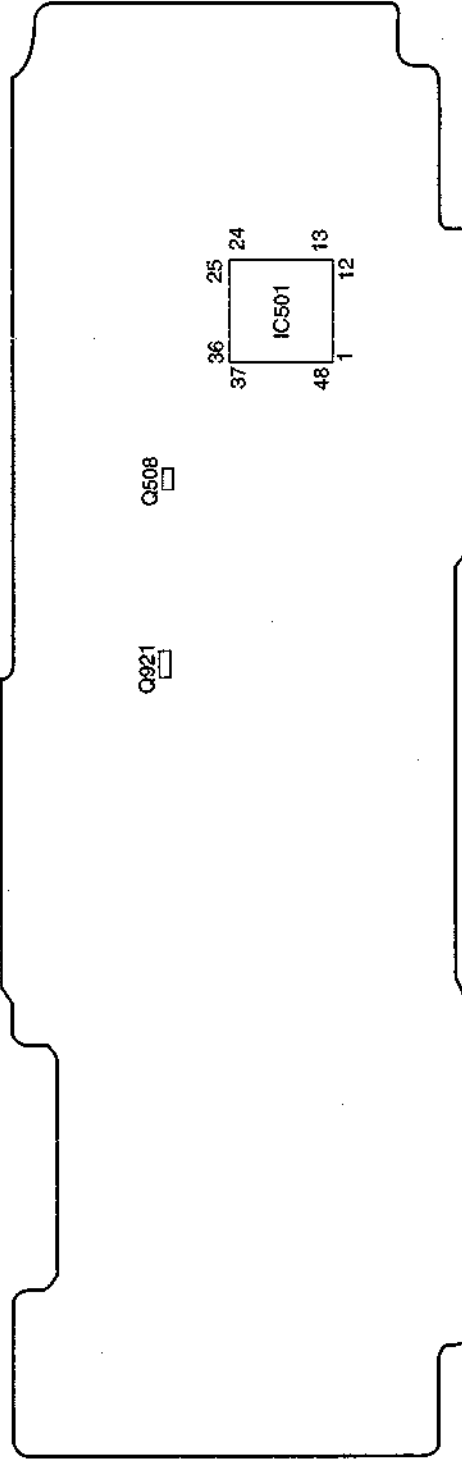

RV-50 BOARD (CONDUCTOR SIDE)

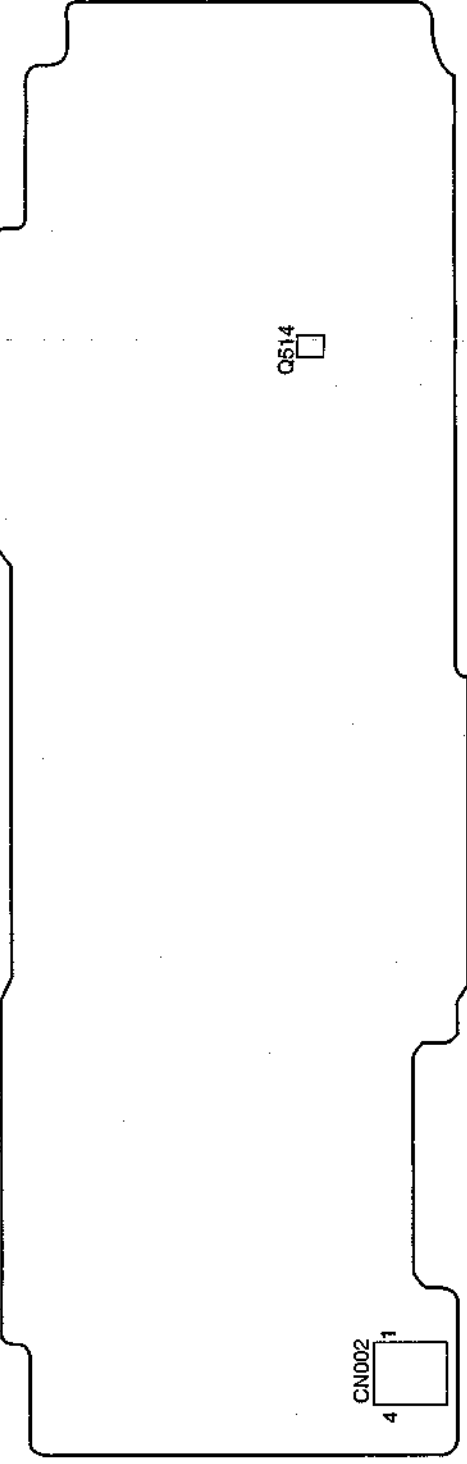


IV-34 BOARD (COMPONENT SIDE)

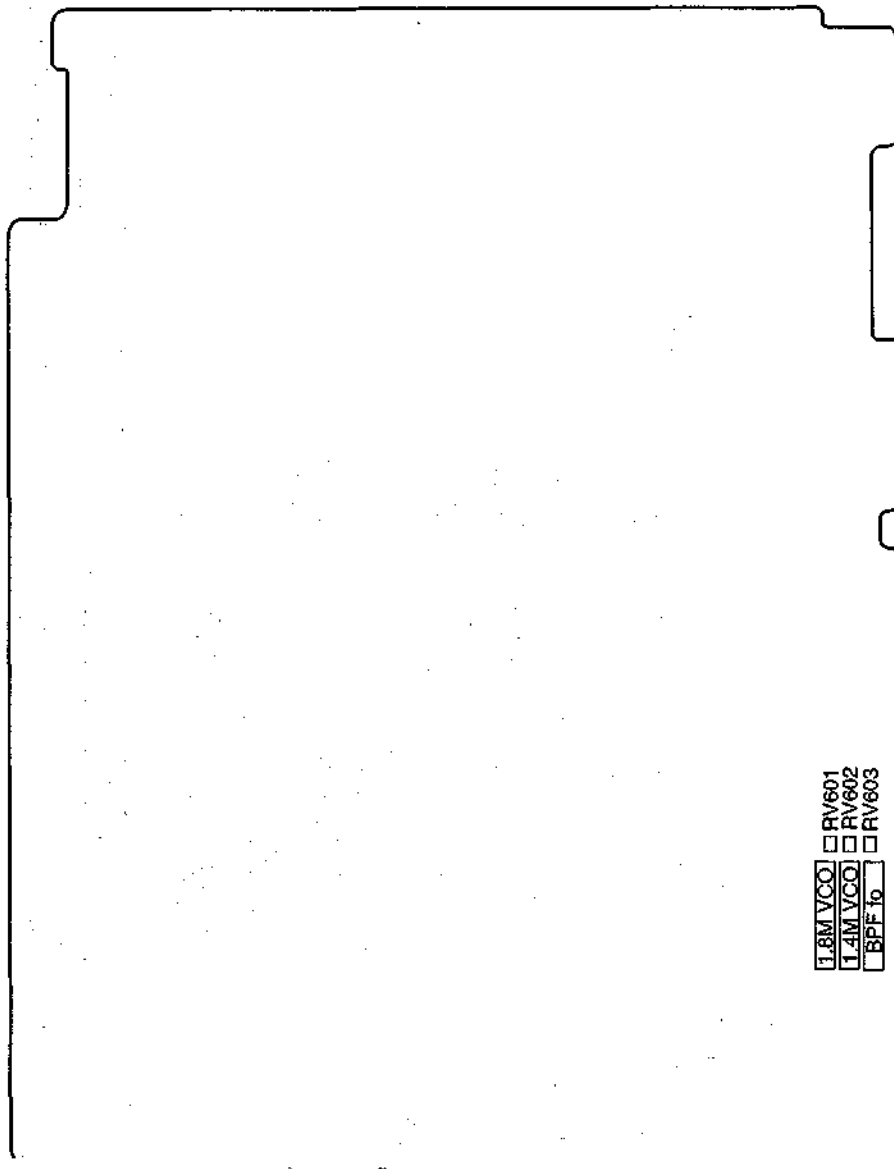

1.8M VCO
1.4M VCO
BPF 1p

RV601
RV602
RV603

IV-34 BOARD (CONDUCTOR SIDE)

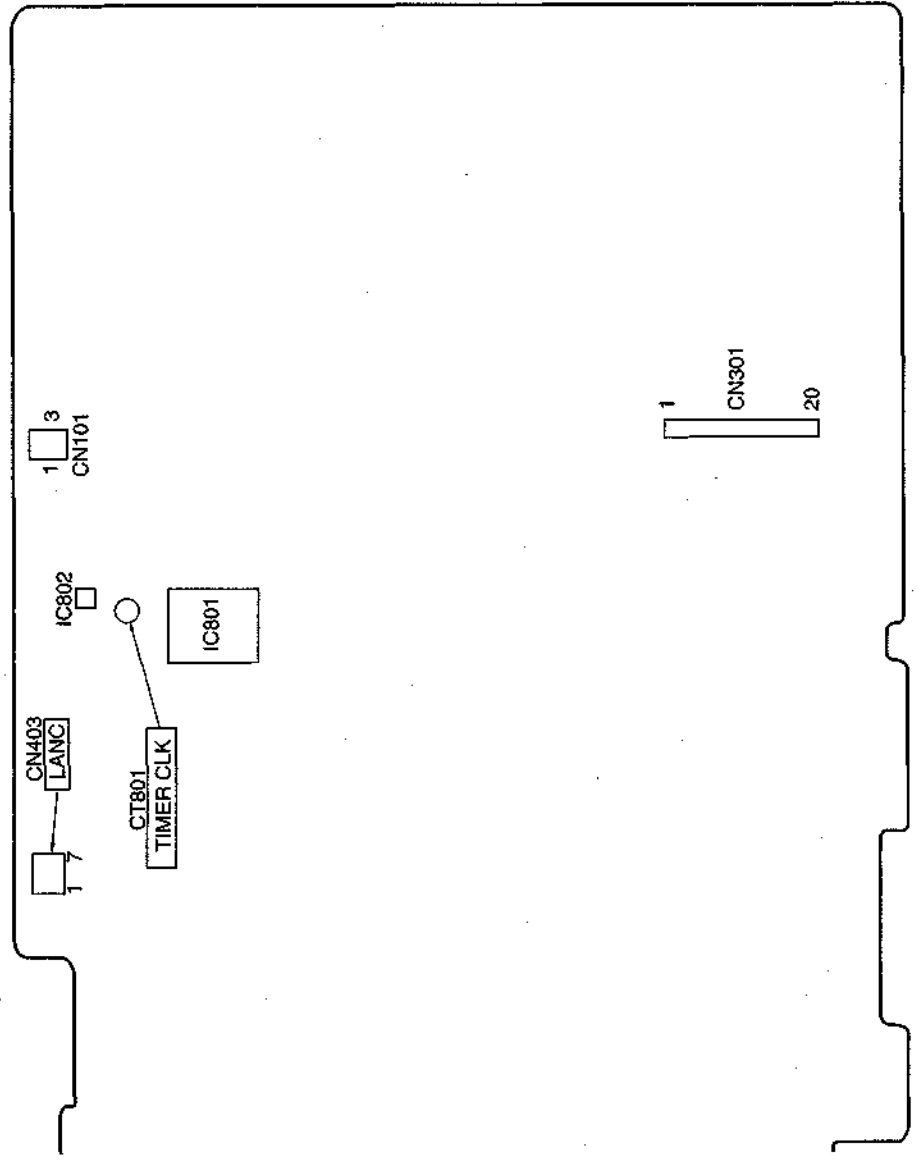

CN403
LANG

IC802

CT801
TIMER CLK

IC801

CNT101
3

CN301
20



VHS MECHANICAL ADJUSTMENT MANUAL IV



V03056

H MECHANISM

Please use with the service manual.

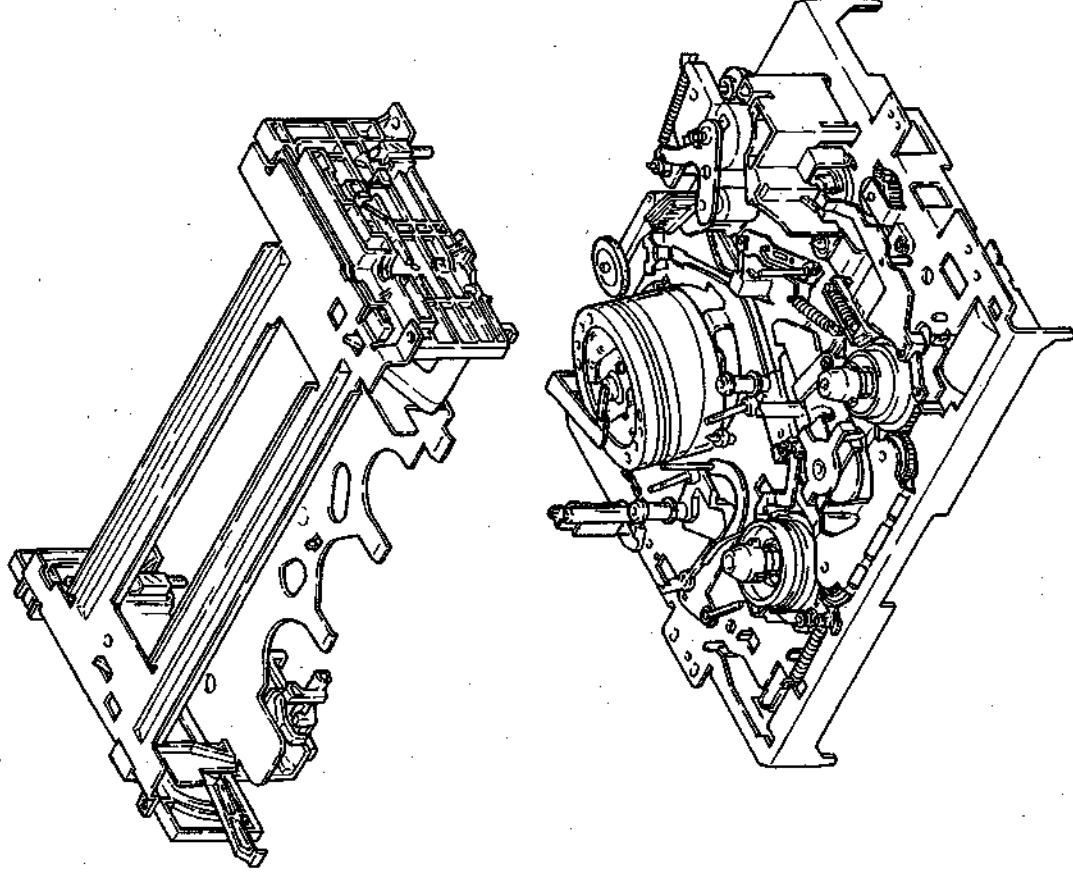

VHS VIDEO CASSETTE RECORDER
SONY[®]

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1.	PREPARATION FOR MECHANISM CHECK ADJUSTMENT AND REPLACEMENT		3-11.	Soft Brake T Assembly (Fig. 3-13)	21
			3-12.	RVS Brake Arm Assembly, Reel Table (T) Assembly (Fig. 3-14)	22
1-1.	Loading and Threading Procedure When the Power Turns Off (Fig. 1-1)	3	3-13.	TG8 Assembly (Fig. 3-15)	23
1-1-1.	Loading and Threading Procedure With Hands	3	3-14.	TG8 Holder (Fig. 3-16)	24
1-1-2.	Loading and Threading Procedure With Regulated DC Power Supply	3	3-15.	TG8 and Press Gears (Fig. 3-17)	25
1-2.	Unloading and Unthreading Procedure When the Power Turns Off (Figs. 1-2 and 1-3)	4	3-16.	Cam Motor Chassis Block Assembly, Upper/Lower Communication Gear (Fig. 3-18)	26
1-2-1.	Unloading and Unthreading Procedure With Hands	4	3-17.	Rotary Encoder Switch (Fig. 3-19)	27
1-2-2.	Unloading and Unthreading Procedure With Regulated DC Power Supply	4	3-18.	Main Slider (Fig. 3-20)	28
1-3.	How to Complete Threading Without Cassette Compartment (Fig. 1-4)	6	3-19.	Shuttle T Block and Loading Gear T Block Assemblies (Fig. 3-21)	29
2.	PERIODIC CHECK AND REPLACEMENT		3-20.	Shuttle S Block and Loading Gear S Block Assemblies (Fig. 3-22)	30
2-1.	Cleaning of Rotating Head Disk Assembly	7	3-21.	Reel Table (S) Assembly (Fig. 3-23)	31
2-2.	Cleaning of the Tape Movement System	7	3-22.	TG1 Assembly (Fig. 3-24)	32
2-3.	Cleaning the Drive System	7	3-23.	S Winding Block Assembly (Fig. 3-25)	33
2-4.	Periodic Check Items	8	3-24.	Trigger Lever and RKB Block Assemblies (Fig. 3-26)	34
2-5.	Tools and Fixtures Required for Servicing	9	4.	ADJUSTMENT	
3.	MAINLY MECHANICAL PARTS REPLACEMENT		4-1.	Tape Path Adjustment	35
3-1.	FL Block Assembly (Fig. 3-1)	10	4-1-1.	Tension Regulator (TG1) Position/ Tension Adjustment (Fig. 4-1)	35
3-2.	Drum Assembly (Fig. 3-2)	11	4-1-2.	TG8 Guide Roller Height Adjustment (Fig. 4-2)	36
3-3.	Timing Belt (Fig. 3-3)	11	4-1-3.	Height Adjustment of Guide Rollers No. 3 and No. 6 (Fig. 4-3)	36
3-4.	Cap Brake Assembly (Fig. 3-4)	12	4-1-4.	Ace Head Assembly Adjustment (Rough Adjustment) (Figs. 4-4 and 4-5)	37
3-5.	TG2 Roller, FE Head Assembly (Fig. 3-5)	13	4-1-5.	Ace Head Assembly Adjustment (Precision Adjustment)	38
3-6.	Pinch Press Block Assembly, Elevator Gear (Fig. 3-6)	14	4-1-6.	X-Value Adjustment	38
3-7.	Ace Block Assembly (Fig. 3-7)	15	4-1-7.	Adjustments After Replacing the Drum (Video Head)	40
3-8.	TG3, TG6 Guide Roller Assemblies (Fig. 3-8)	16	4-1-8.	Checking the Tension and Torque	42
3-9.	Capstan Motor (Fig. 3-11)	17			
3-10.	Main Brake Assemblies S and T (Fig. 3-12)	20			

1. PREPARATION FOR MECHANISM CHECK ADJUSTMENT AND REPLACEMENT

Refer to the service manual, "DISASSEMBLY" for removal of the cabinet and boards.

1-1. LOADING AND THREADING PROCEDURE WHEN THE POWER TURNS OFF (Fig. 1-1)

1-1-1. LOADING AND THREADING PROCEDURE WITH HANDS

- 1) Turn cam motor in the arrow  direction until loading and threading are end.

1-1-2. LOADING AND THREADING PROCEDURE WITH REGULATED DC POWER SUPPLY

- 1) Applying approx. +9 V (300 mA) to cam motor with regulated DC power supply makes it loading and threading.

Note: When loading and threading without cassette, claws are caught in four positions as following figure (in the order ① → ② → ③ → ④).

So release them with hands.

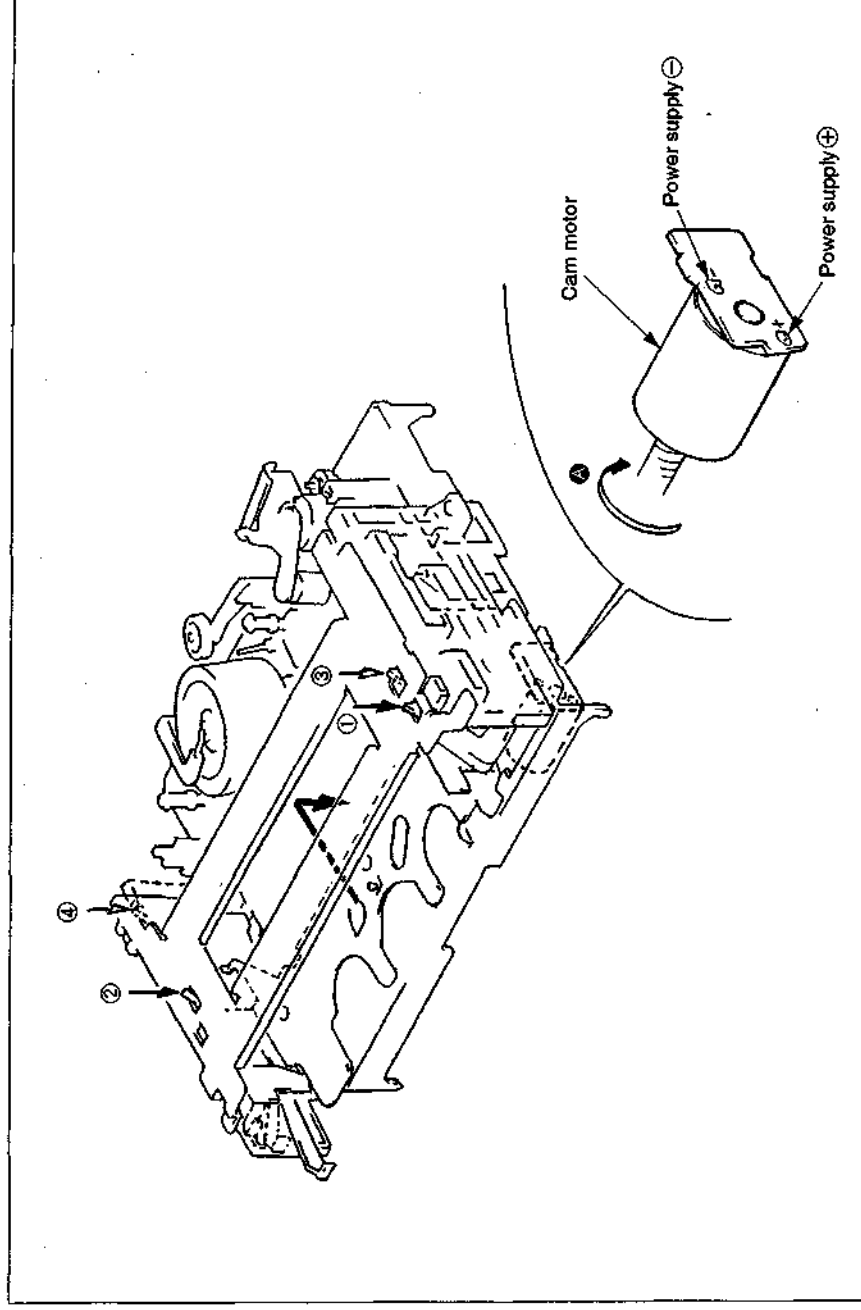





Fig. 1-1


1-2. UNLOADING AND UNTHREADING PROCEDURE WHEN THE POWER TURNS OFF
(Figs. 1-2 and 1-3)


1-2-1. UNLOADING AND UNTHREADING PROCEDURE WITH HANDS

- 1) Turn cam motor in the arrow  direction until unthreading is end.
- 2) Turn capstan motor in the arrow  direction to take up tape in cassette.
- 3) Turn cam motor in the arrow  direction until unloading is end.

1-2-2. UNLOADING AND UNTHREADING PROCEDURE WITH REGULATED DC POWER SUPPLY

- 1) Apply approx. +9 V (300 mA) to contrary polarities of cam motor.
- 2) Unthreading operation begins, tape guides return to their original positions (Unthreading operation is end but tape remains), then stop cam motor by turning power off.

Note: When unloading begins and cassette lid is closed, turn cam motor in the arrow  direction to open tape guard.

- 3) Turn capstan motor in the arrow  direction to take up tape in cassette.

Note: That tape is not caught at pinch roller. (Fig. 1-3)

- 4) Check that tape is not loosened completely, and apply approx. +9 V (300 mA) to contrary polarities of cam motor with regulated DC power supply. (Fig. 1-2)

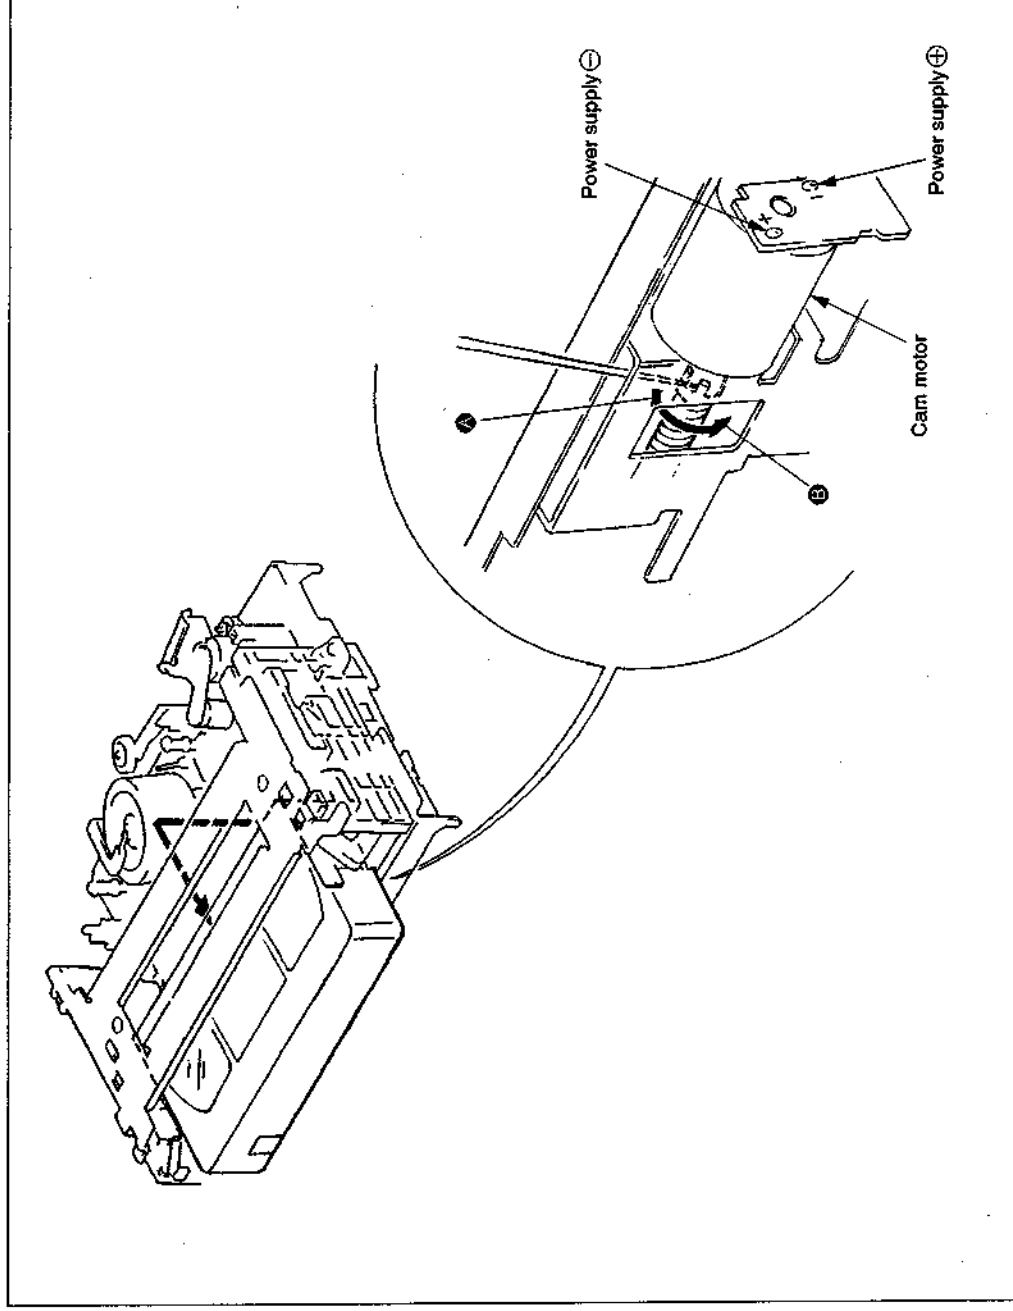


Fig. 1-2

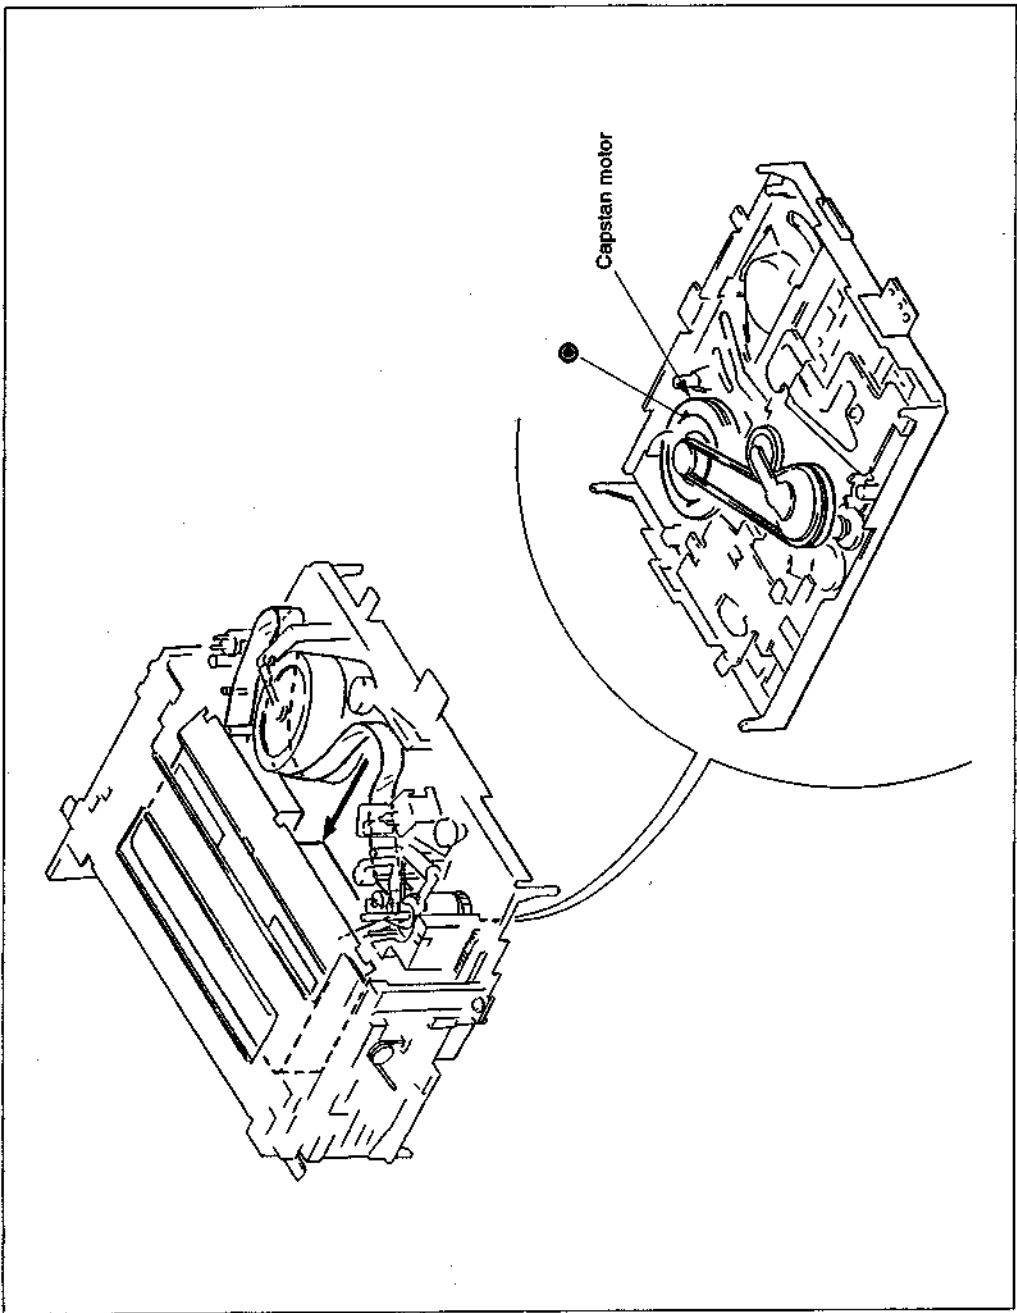


Fig. 1-3

1-3. HOW TO COMPLETE THREADING WITHOUT CASSETTE COMPARTMENT (Fig. 1-4)

Note 1: Put the FL block assembly removed the FL top plate on the bottom not to put dust or grease the top sensor and the end sensor luminous plates or not to scratch them. (Fig. A)

- 1) Pull out AC plug from wall outlet.
- 2) Shade near the end and top sensors with a black masking tape on the like.
- 3) Press cassette in/rec proof switch with a tip of screwdriver or the like.
- 4) Connect AC plug to wall outlet.
- 5) Release cassette in/rec proof switch by putting off a tip of screwdriver or the like.
(At this time, power turns on, rewind operates for 10 seconds, after that power turns off.)

Note 2: In this condition, each mode can be set to video cassette recorder. (including recording mode)
However, fast forward should be done after rewinding for 15 seconds or more.

Note 3: After above mentioned operation, be sure to return the mode in the following order.

- 1) Remove the tape near the end and top sensors.
- 2) Pull out AC plug from wall outlet to reset the system control microcomputer.

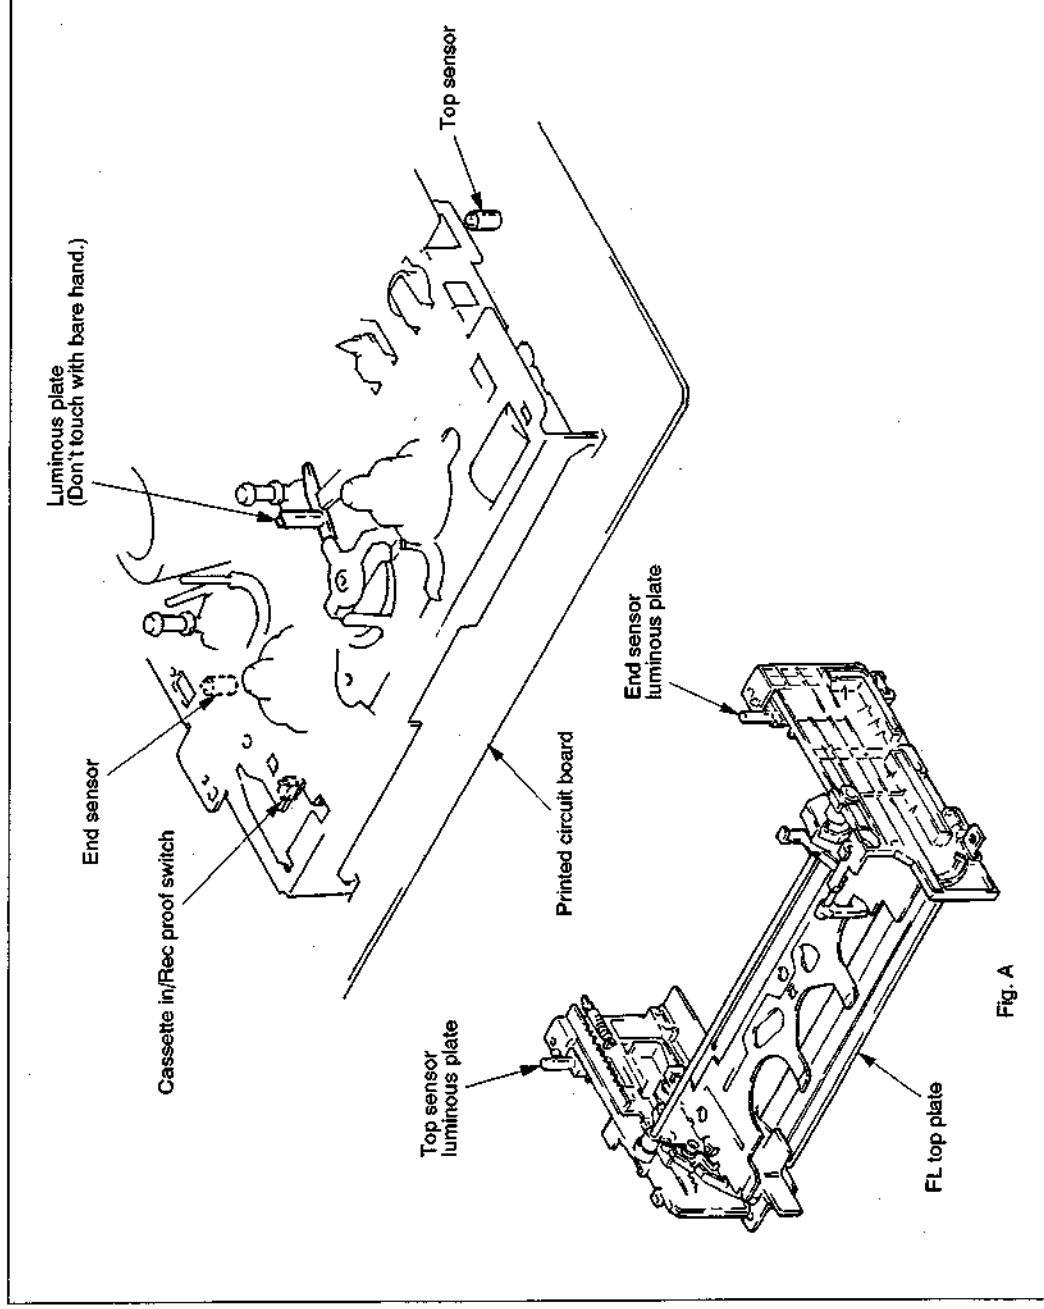


Fig. 1-4

2. PERIODIC CHECK AND REPLACEMENT

In order to obtain the best performance from this unit and make full use of its capabilities, and to extend the life of the unit and tapes, it is recommended that the following periodic checks and maintenance be performed.

* The following must be done after every repair regardless of how many hours the user has operated the machine.

2-1. CLEANING OF ROTATING HEAD DISK ASSEMBLY

- 1) Press a chamois cloth (Jig Ref. No. J-9) which has been dipped in cleaning fluid (Jig Ref. No. J-8) lightly against the rotating drum assembly, then do the cleaning by slowly rotating the rotating head disk by hand. (Never try to clean by using the motor to turn it.)
- 2) Never try to clean by moving the chamois cloth at a vertical angle to the head tip. There is a very great danger of damaging the head tip if this is done.

2-2. CLEANING OF THE TAPE MOVEMENT SYSTEM

- 1) Clean the surfaces which the tape contacts during its movement (tape guide, drum assembly surface, capstan, pinch roller, etc.) with a chamois cloth that has been dipped in cleaning fluid.

2-3. CLEANING THE DRIVE SYSTEM

- 1) Clean the driving parts with a cloth that has been dipped in cleaning fluid.

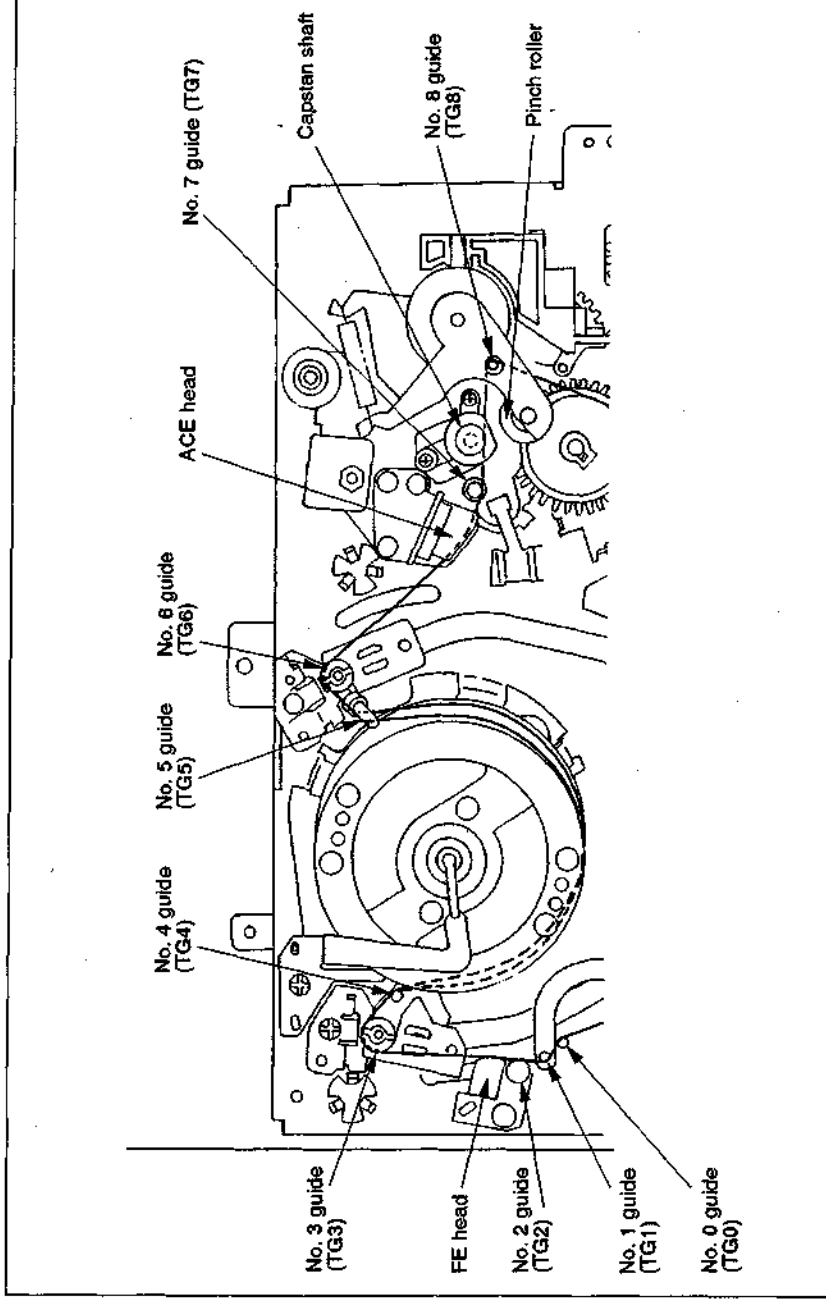


Fig. 2-1 Parts requiring cleaning

2-4. PERIODIC CHECK ITEMS

Perform the maintenance and check listed on the table below, according to users operating hours.

Maintenance & Check	Operating Hours (H)										Remarks	
	500	1,000	1,500	2,000	2,500	3,000	3,500	4,000	4,500	5,000		
Tape Transportation System	Cleaning of tape transportation system	○	○	○	○	○	○	○	○	○	○	This cleaning must be done whenever a repair is made.
	Cleaning and degaussing of ACE assembly	○	○	○	○	○	○	○	○	○	○	The life of the head varies, depending on operational conditions and method.
	Cleaning & degaussing of upper drum assembly	○	○	○	○	○	○	○	○	○	○	Adjust or replace the section which causes abnormal sound.
Performance Confirmation	Abnormal sound	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	Confirmation must be made according to 4-1-1. Specified value: adjust to 36 to 44 g·cm (when measured with torque cassette tape)
	Measurement of FWD back tension	-	☆	-	☆	-	☆	☆	-	☆	☆	Confirmation must be made according to section.
	Confirmation of brake system	-	☆	-	☆	-	☆	☆	-	☆	☆	Perform the confirmation whenever repair is made.
	Confirmation of record & playback functions	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	Adjust to 70 to 120 g·cm
	Measurement of forward torque	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	


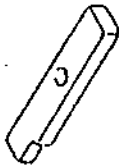



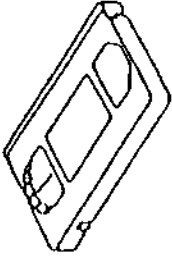
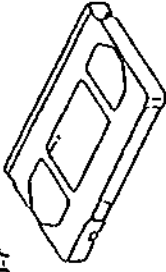

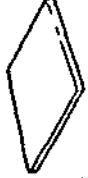

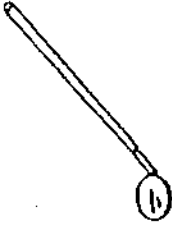




○ Cleaning ☆ Confirmation

Note: On overhaul

When overhauling the unit, replace parts as indicated in the above table.

2-5. TOOLS AND FIXTURES REQUIRED FOR SERVICING

Ref No.	Name	Part No.	Carved Jig No.	Remarks
J-1	Master Plane	H-7099-279-H		Applicable to S-VHS
J-2	Reel Disk Height Jig	H-7099-038-H		
J-3	Torque Gauge Adaptor	H-7099-035-H		
J-4	0.93 mm Torque Gauge	H-7099-039-H		
J-5	Hex. Wrench	H-7099-202-H		
J-6	Torque Measurement Cassette VHT-063S	J-6082-011-A		For FWD & back tension torque measurement.
J-6	Torque Measurement Cassette VHT-404S	J-6082-012-A		For CUE and review torque measurement.
J-7	Alignment Tape JVC-MH-1 (NTSC) 24HASF-2 (NTSC Hi-Fi) JVC-MH-2 (PAL) JVC-MH-4 (SECAM)	H-7099-046-H H-7099-153-H H-7099-052-H H-7099-053-H		
J-8	Cleaning Fluid	Y-2031-001-0		
J-9	Chamois Leather	2-034-697-00		
J-10	Head Demagnetizer	Widely available		Demagnetize video heads and audio heads.
J-11	Dental Mirror (With handle) Dental Mirror (Mirror)	J-6080-029-A J-6080-030-1	SL-5052	Tape path and tape traveling adjustments or checks.
J-12	FLOIL SG-055G	7-651-000-09		
J-13	Diamond Oil NT-68	7-661-018-18		
J-14	Screw Lock G (1401B)	7-432-114-11		

J-1		J-2		J-3		J-4	
J-5		J-6		J-7		J-8	
J-9		J-10		J-11		J-12	
J-13		J-14					

3. MAINLY MECHANICAL PARTS REPLACEMENT

Notes:

- Refer to the service manual, "DISASSEMBLY" for removal of the cabinet and boards.
- On mounting, while referring to notes on mounting perform reversely in the removal order.
- When replacing greased parts, grease them in the same way.
- Do not oil, grease or touch with bare hands the surfaces contacts tape of guides and brake shoes.
- Install gears to engage each other.
- Basically, disassembling and assembling should be done in the unthreading-end condition.

3-1. FL BLOCK ASSEMBLY (Fig. 3-1)

- 1) Remove screws ①.
 - 2) Remove FL block assembly ② in the arrow direction.
- Note:** Be careful not to damage claws on the bottom and front.

[Note on Mounting]

- First insert claws on the bottom and front not to damage.
- Engage FL slide plate to FL driving gear with slightly sliding FL slide plate. (Fig. A)
- Keep clean top sensor and end sensor luminous plates. (Refer to 1-3.)

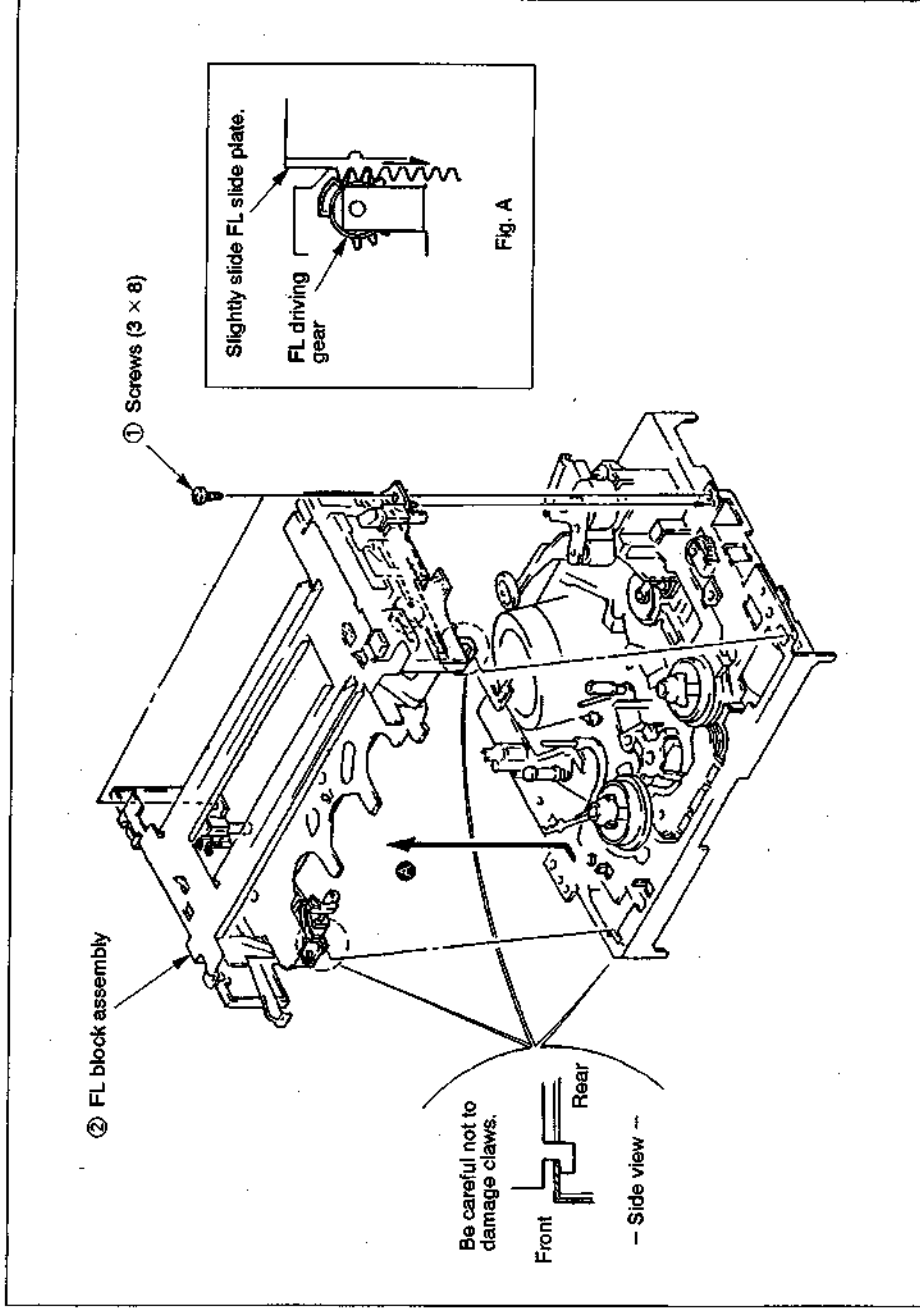


Fig. 3-1

3-2. DRUM ASSEMBLY (Fig. 3-2)

- 1) Remove screw ①.
- 2) Remove ground shaft assembly ② not to touch its tip with bare hand or tools.
- 3) Remove screws ③ to remove drum assembly ④.

[Note on Mounting]

- Don't touch head chips ⑤ and ground shaft assembly ④ with bare hand or tools.
- Keep clean the surface contacts tape of drum assembly ④.

[Adjustment after Mounting]

- 4-1. Tape path adjustment.

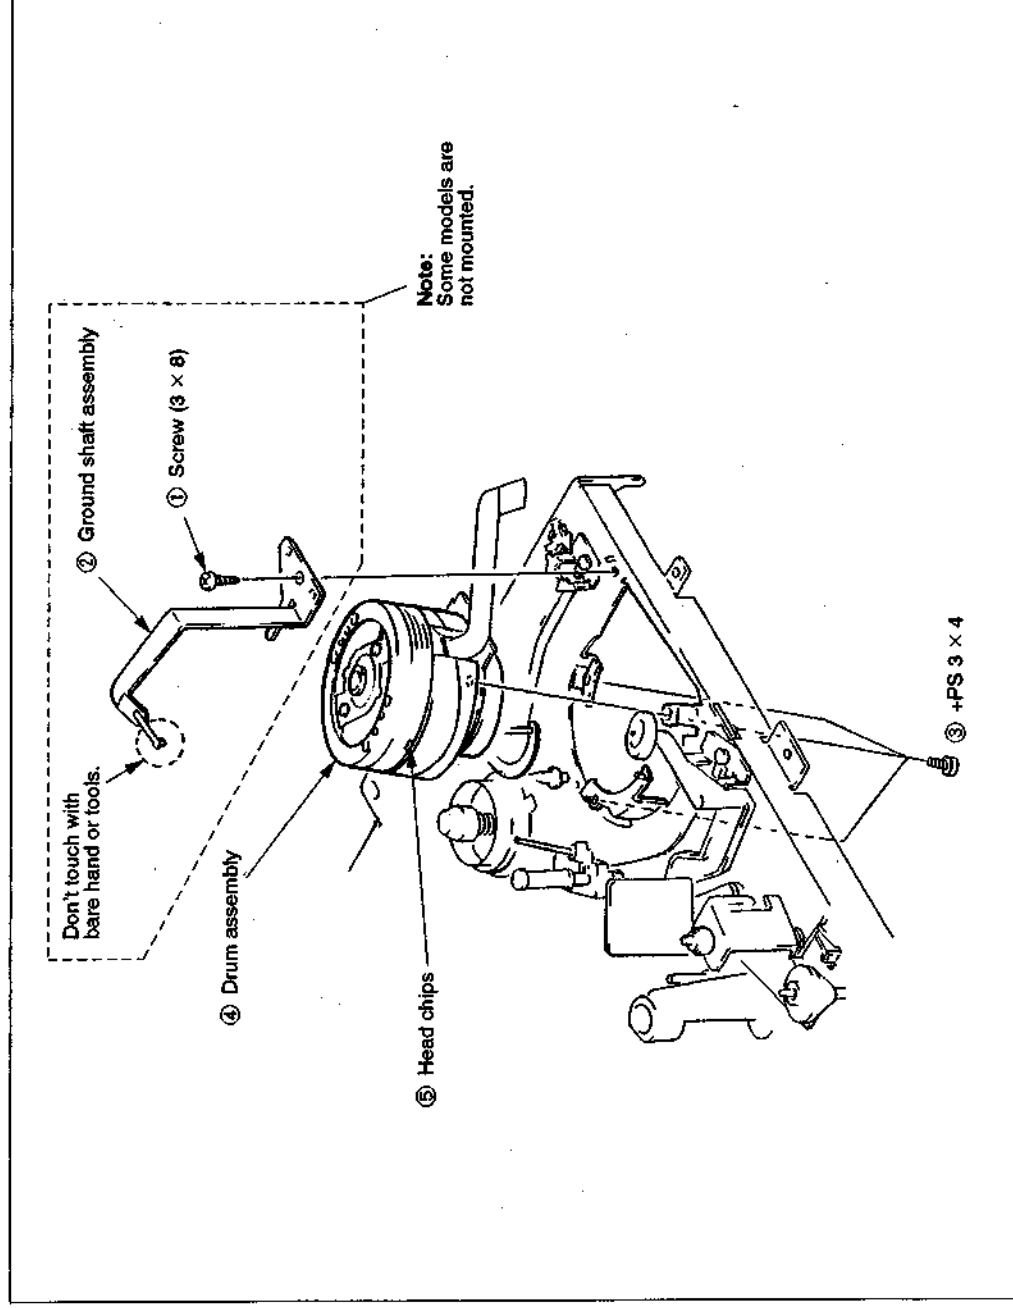


Fig. 3-2

3-3. TIMING BELT (Fig. 3-3)

- 1) Remove screw ① to remove tension vehicle arm assembly ②.
- 2) Remove timing belt ③.

[Note on Mounting]

- Tighten screw ① while pressing tension vehicle arm in the arrow ④ direction.

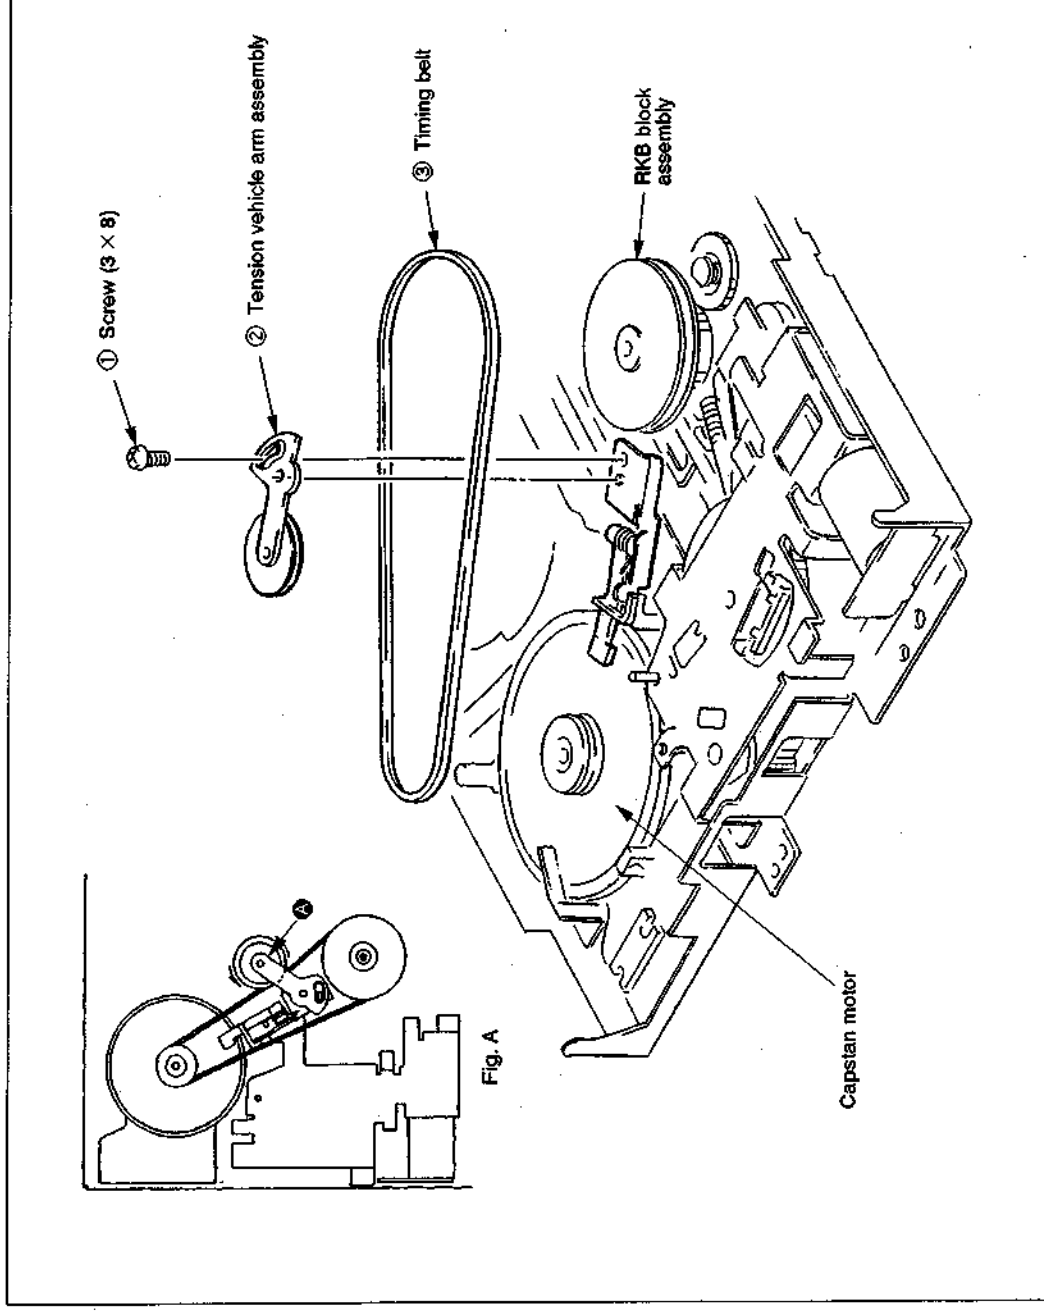


Fig. 3-3

3-4. CAP BRAKE ASSEMBLY (Fig. 3-4)

- 1) Remove tension vehicle arm assembly. (Refer to 3-3)
- 2) Remove torsion coil spring ① from portion ④ to remove CAP brake assembly.

[Note on Mounting]

- Mount torsion coil spring ① to CAP brake assembly ② in the order ④ and ③. (Fig. A)
- Put the fulcrum of CAP brake assembly ② to CAP brake shaft ③ and the tip of torsion coil spring to ④.
- Don't touch brake shoe ⑦ with bare hand.

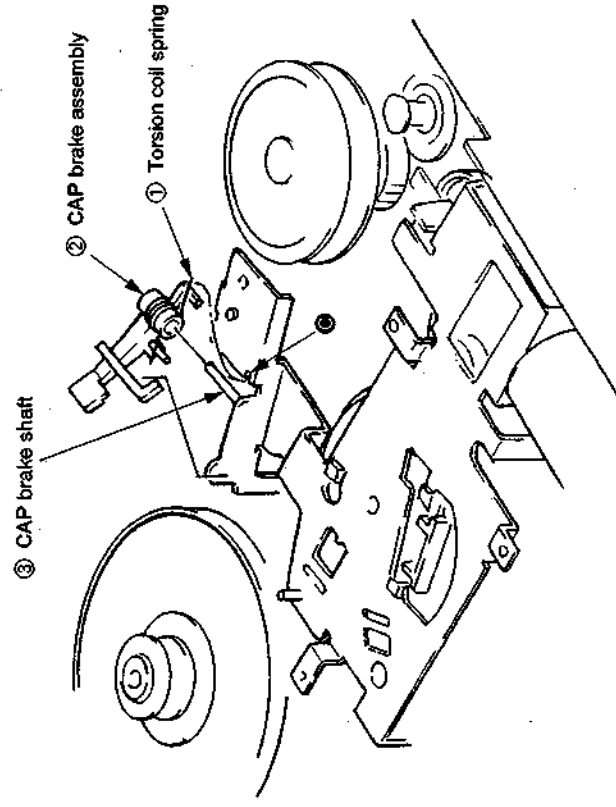
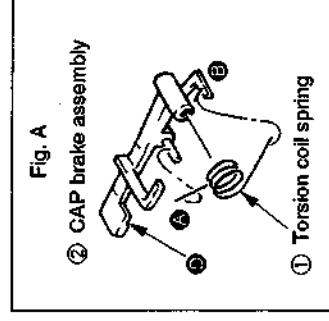


Fig. 3-4

3-5. TG2 ROLLER, FE HEAD ASSEMBLY (Fig. 3-5)

- 1) Remove claw ④ to pull out TG2 roller ①.
- 2) Remove screw ② to pull out FE head assembly.

[Note on Mounting]

- Keep clean the surface contacts tape of TG2 roller ①.

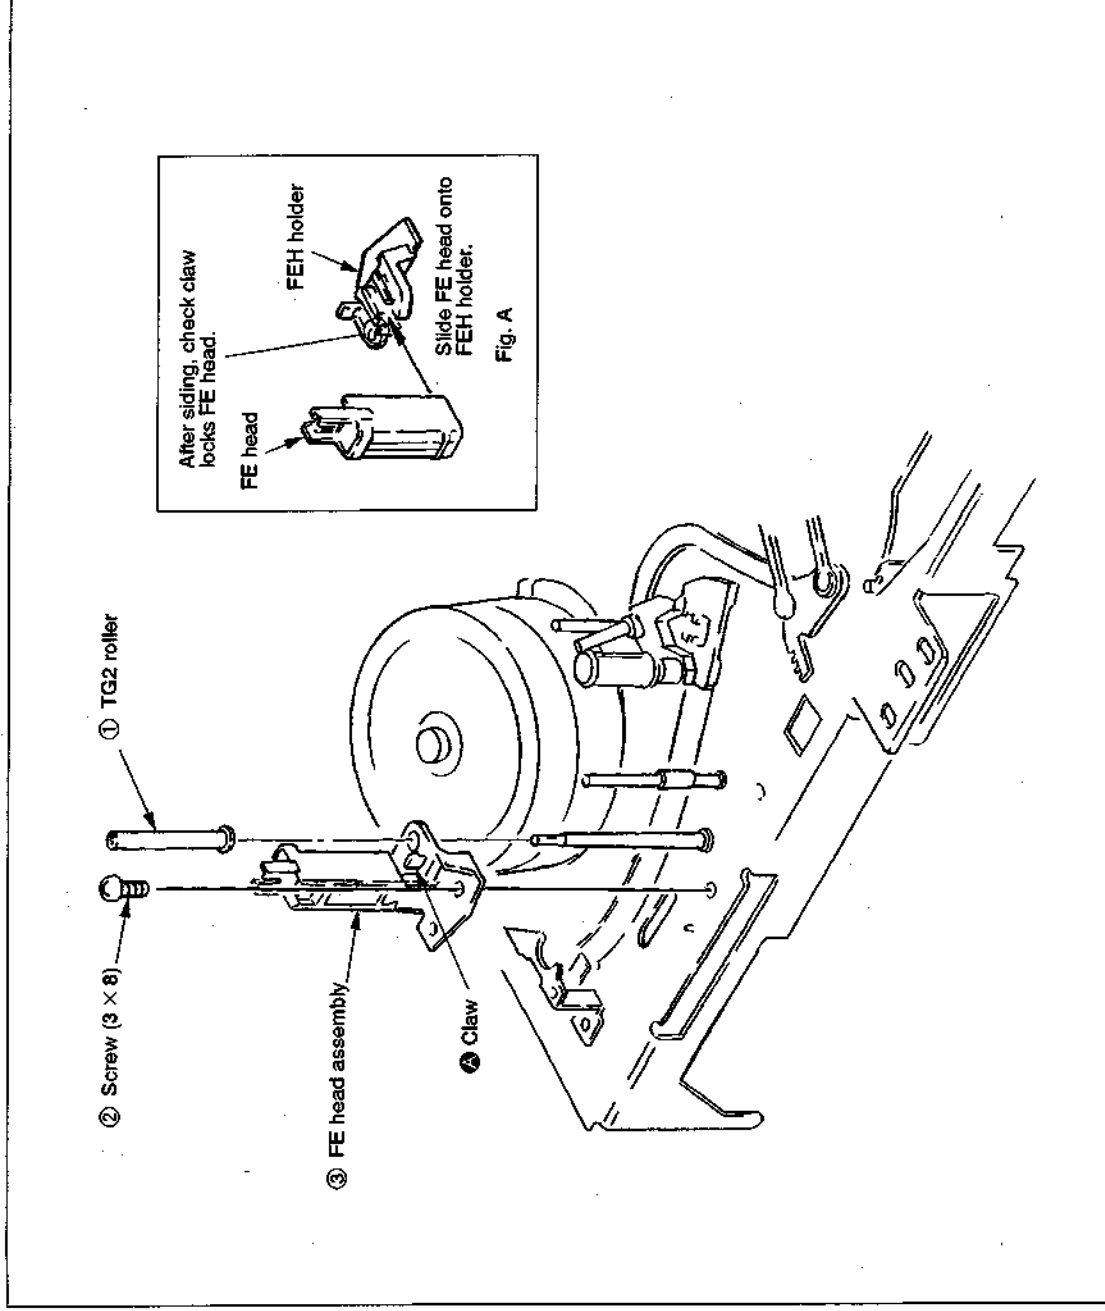


Fig. 3-5

3-6. PINCH PRESS BLOCK ASSEMBLY, ELEVATOR GEAR (Fig. 3-6)

- 1) Remove E ring ① to pull out pinch press block assembly ②.
- 2) Remove lid opener ③ by pressing claw ④ in the arrow ⑤ direction.
- 3) Pull out elevator gear ④.

[Note on Mounting]

- Apply grease FLOIL SG-055G (Jig Ref. No. J-12) to ☆ marked portions.
- Be sure to match the phase ● between elevator gear ④ and press gear ⑤ on mounting elevator gear ④.

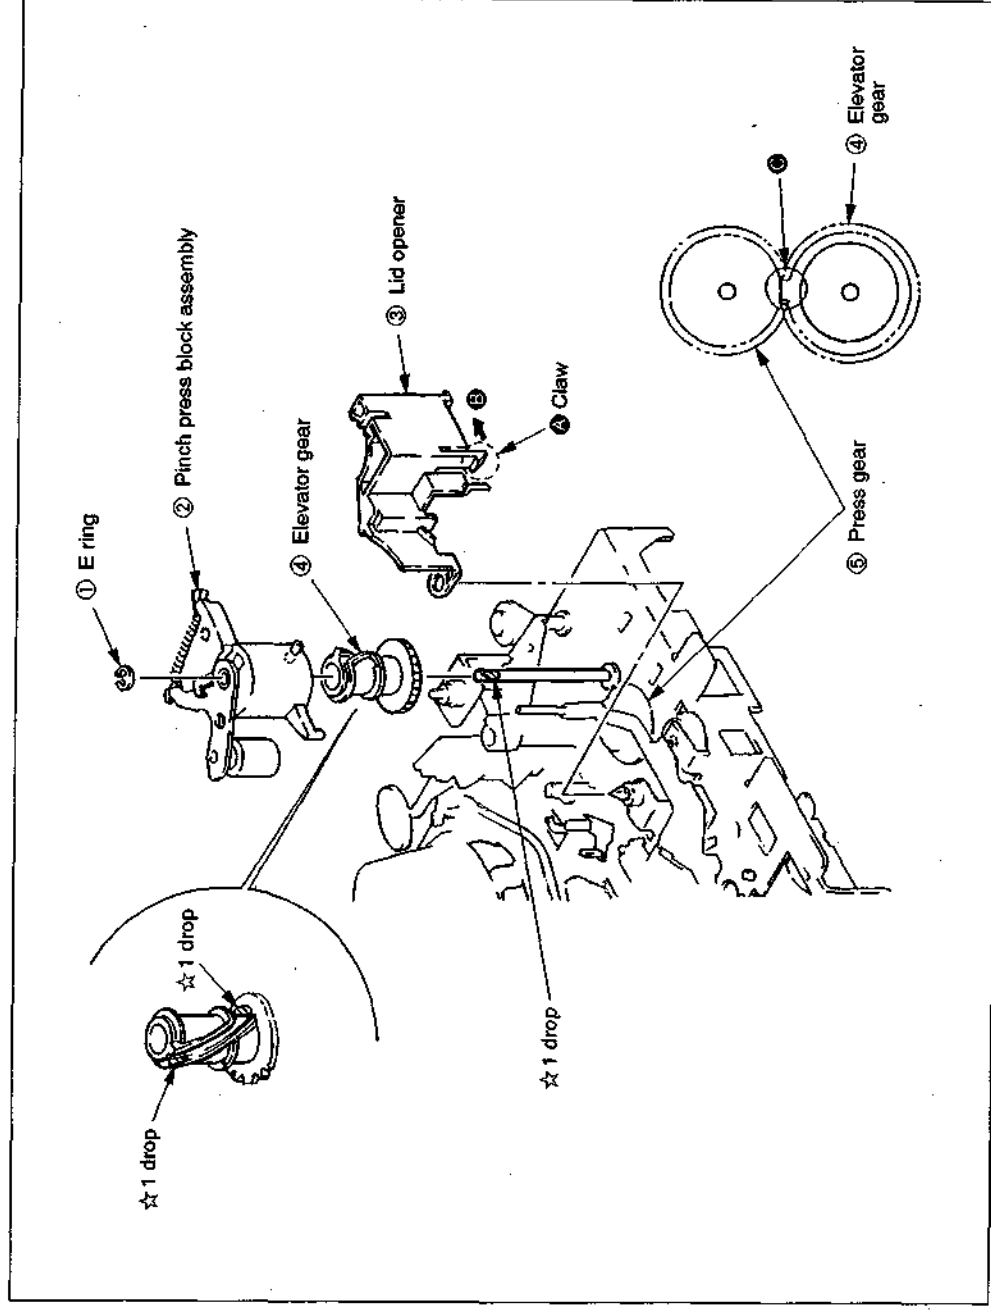


Fig. 3-6

3-7. ACE BLOCK ASSEMBLY (Fig. 3-7)

- 1) Move torsion coil spring (ACE) ① in the arrow ➊ direction.
- 2) Remove ACE adjustment screw ②.
- 3) Remove AC height adjustment nut ③ to pull out ACE block assembly ④.

[Note on Mounting]

- Keep clean the surface contacts tape of ACE block assembly ④.
- Be sure to hang torsion coil spring (ACE) ① in the arrow ➋ direction.
- Set ACE adjustment screw ② to the height as shown in Fig. A.

[Adjustment after Mounting]

- 4-1. Tape path adjustment.
- After adjustment apply Screw Lock G (1401B) (Jig Ref. No. J-14) at ☆ marked portion.

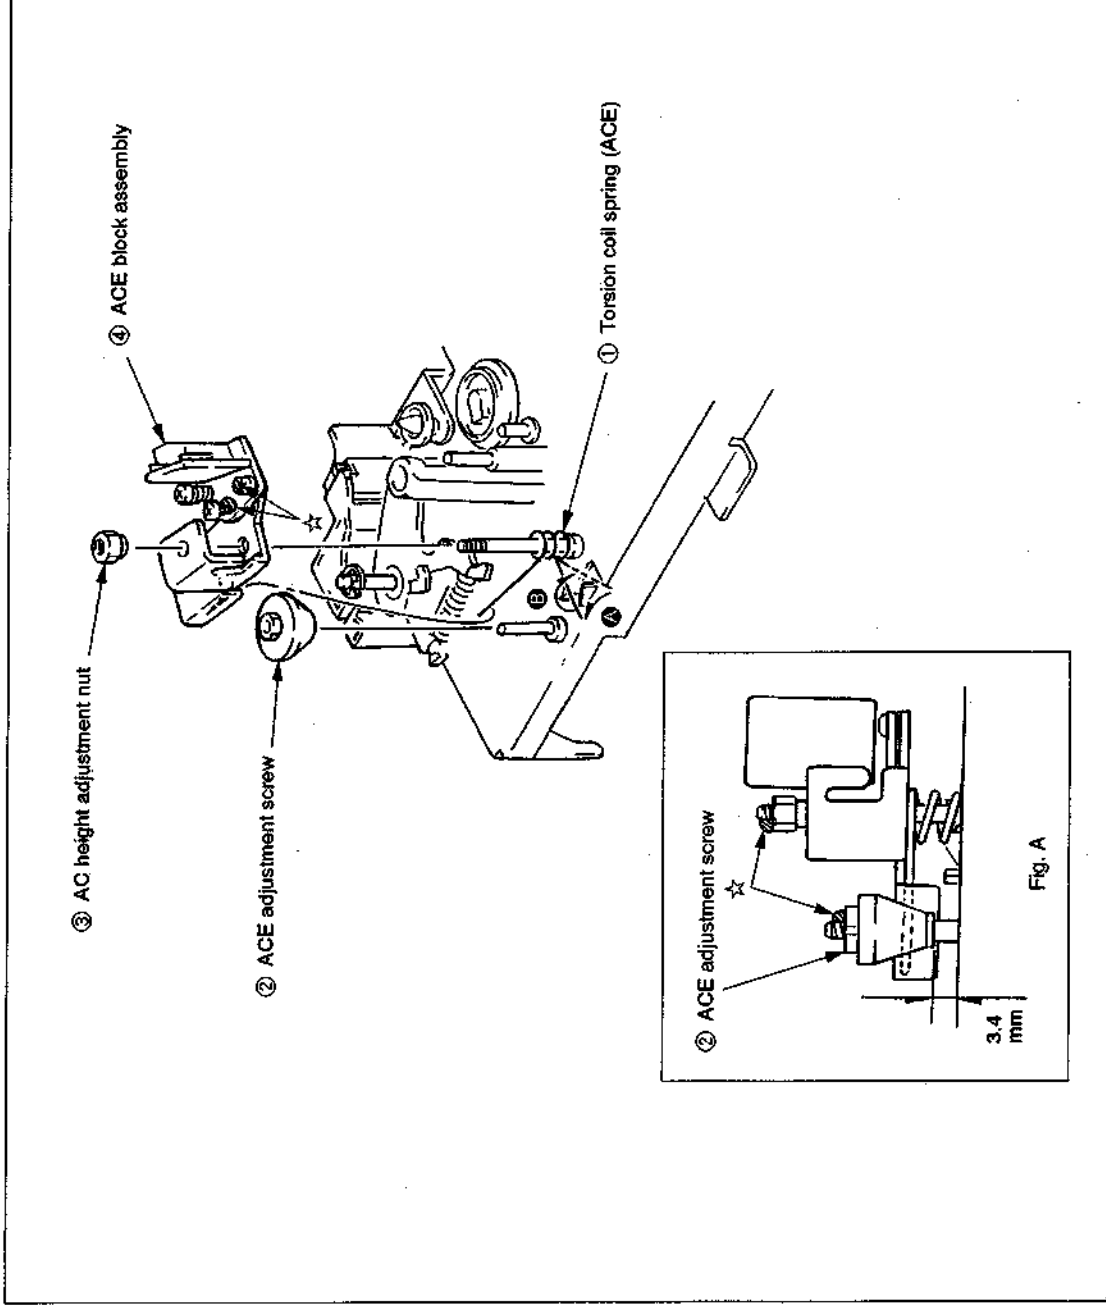


Fig. 3-7

3-8. TG3, TG6 GUIDE ROLLER ASSEMBLIES

(Fig. 3-8)

- 1) Loosen screw ① and pull out TG3 guide roller assembly ② by turning it in the arrow ➊ direction.
- 2) Loosen screw ③ and pull out TG6 guide roller assembly ④ by turning it in the arrow ➋ direction.

[Note on Mounting]

- Keep clean the surface contacts tape of TG3 and TG6 guide roller assemblies ②, ④.

[Adjustment after Mounting]

- 4-1. Tape path adjustment.

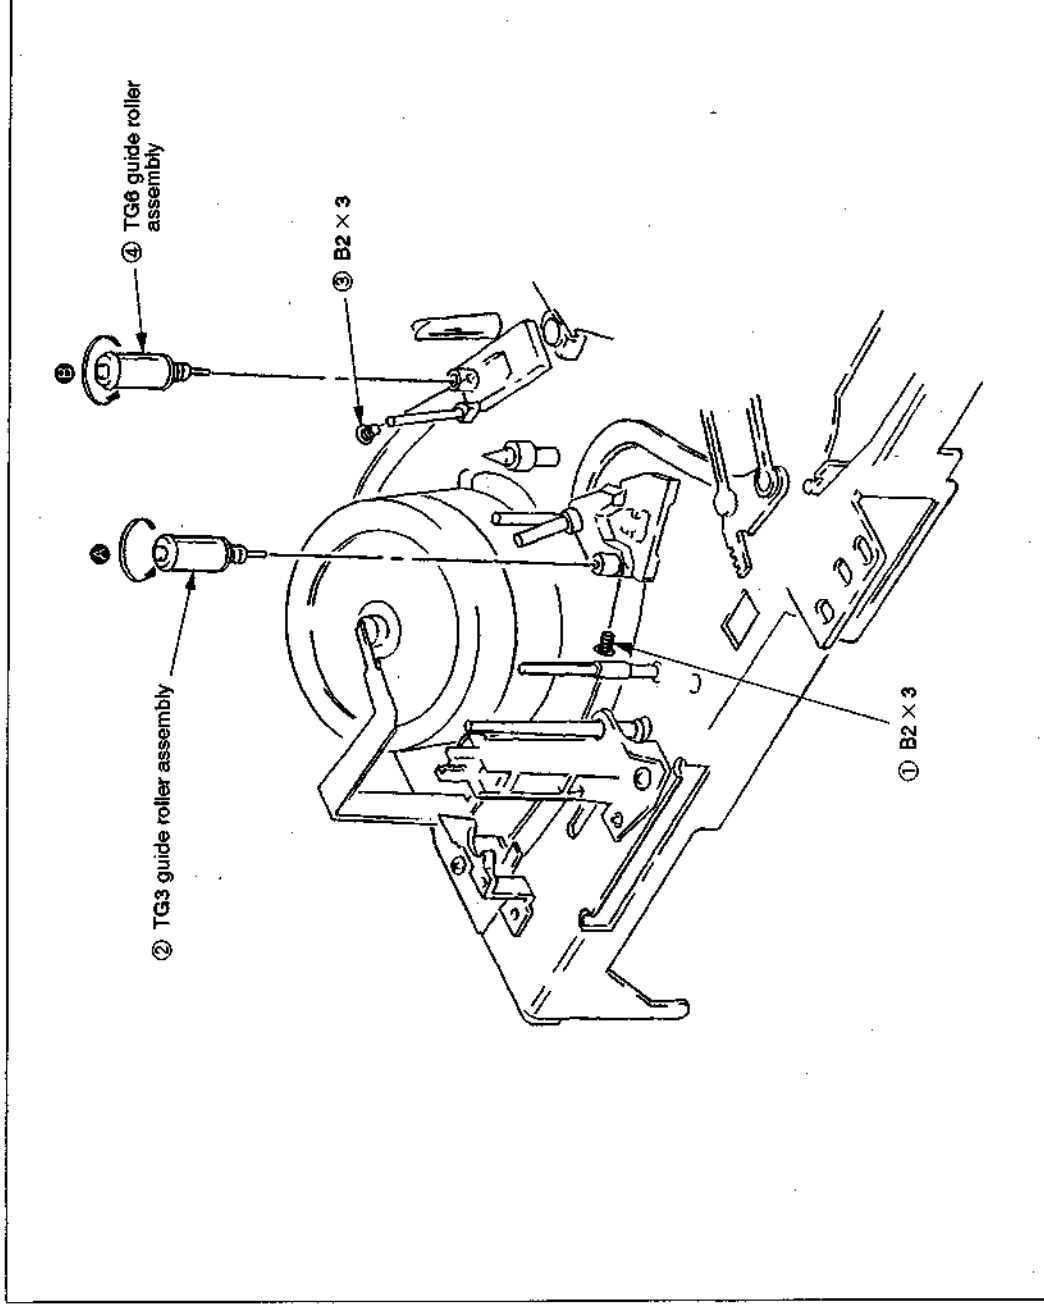


Fig. 3-8

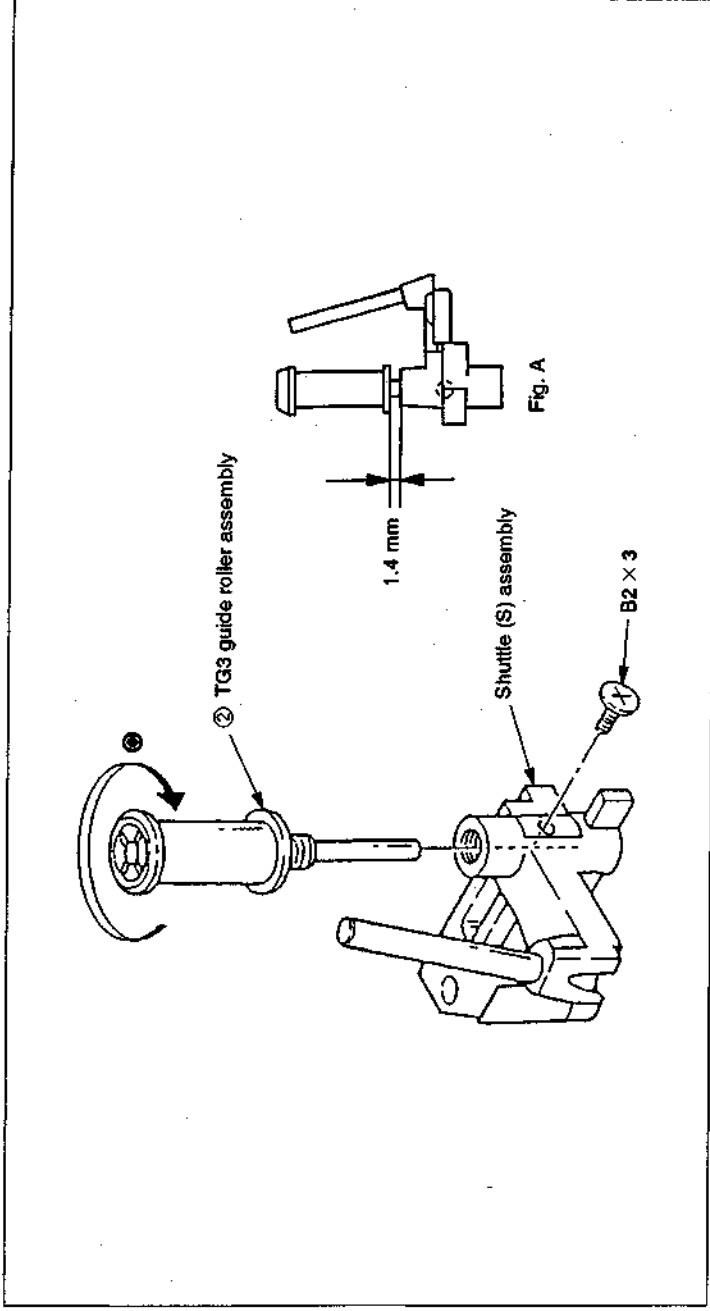


Fig. 3-9

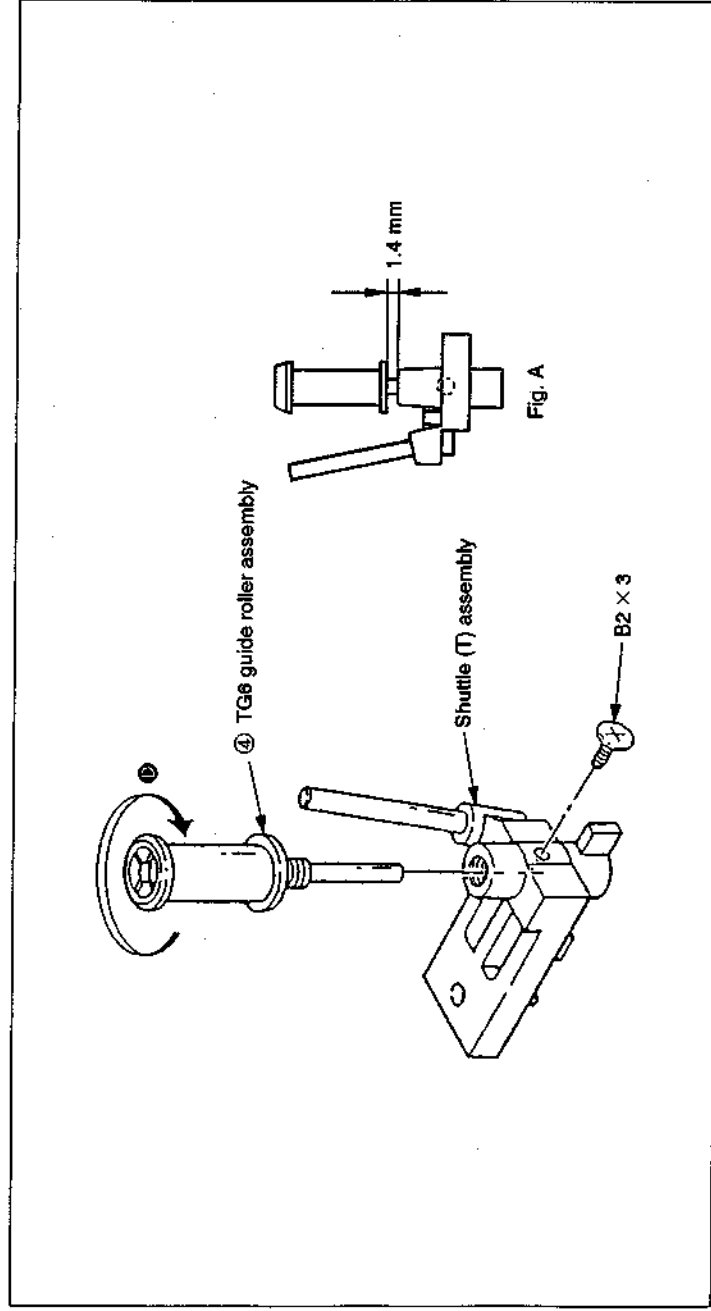


Fig. 3-10

3-9. CAPSTAN MOTOR (Fig. 3-11)

- 1) Remove timing belt. (Refer to 3-3.)
- 2) Remove CAP brake assembly. (Refer to 3-4.)
- 3) Remove screws ① to pull out capstan motor ②.

[Note on Mounting]

- Keep clean the surface contacts tape of capstan motor ②.
- On tightening screws ①, first tighten screw A temporarily, next tighten screws in the order B to C to A.

[Adjustment after Mounting]

- 4-1. Tape path adjustment.

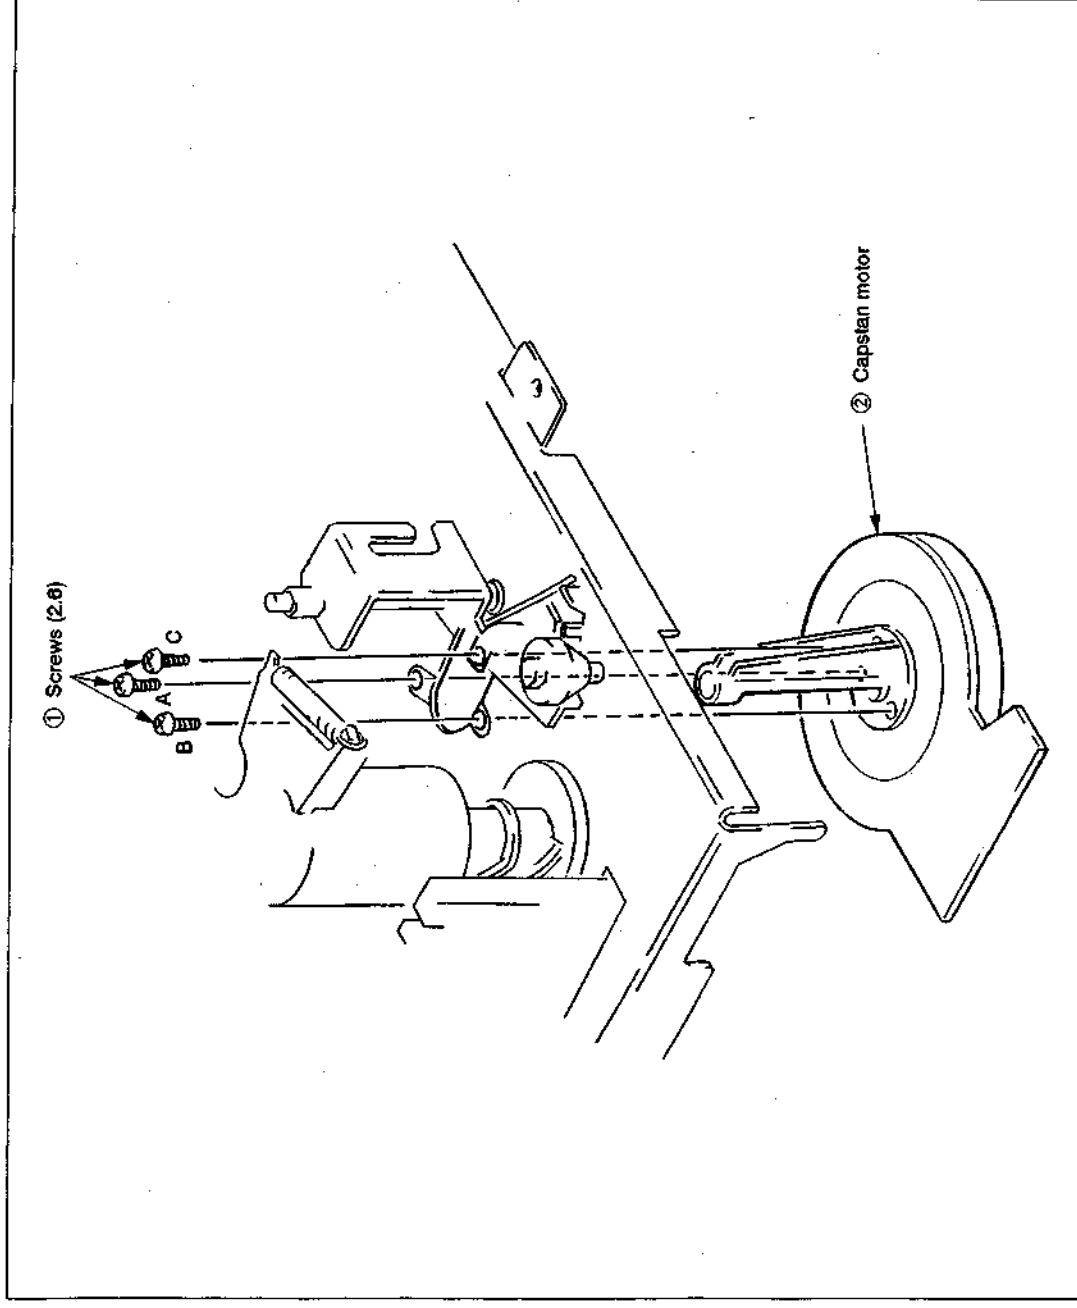


Fig. 3-11

**3-10. MAIN BRAKE ASSEMBLIES S AND T
(Fig. 3-12)**

- 1) Remove tension spring ①.
- 2) Remove stopper washer (2) ② to remove neutrality arm ③.
- 3) Remove pendulum compulsion arm ④ and tension coil spring ⑤.
- 4) Remove stopper washer (2) ⑥ to remove main brake S assembly ⑦.
- 5) Remove stopper washer (2) ⑧ to remove main brake T assembly ⑨.

[Note on Mounting]

- Don't touch brake shoes ④ and ⑤ with bare hand.
- Apply FLOIL FG-055G (Jig Ref. No. J-12) to ☆ marked portions.

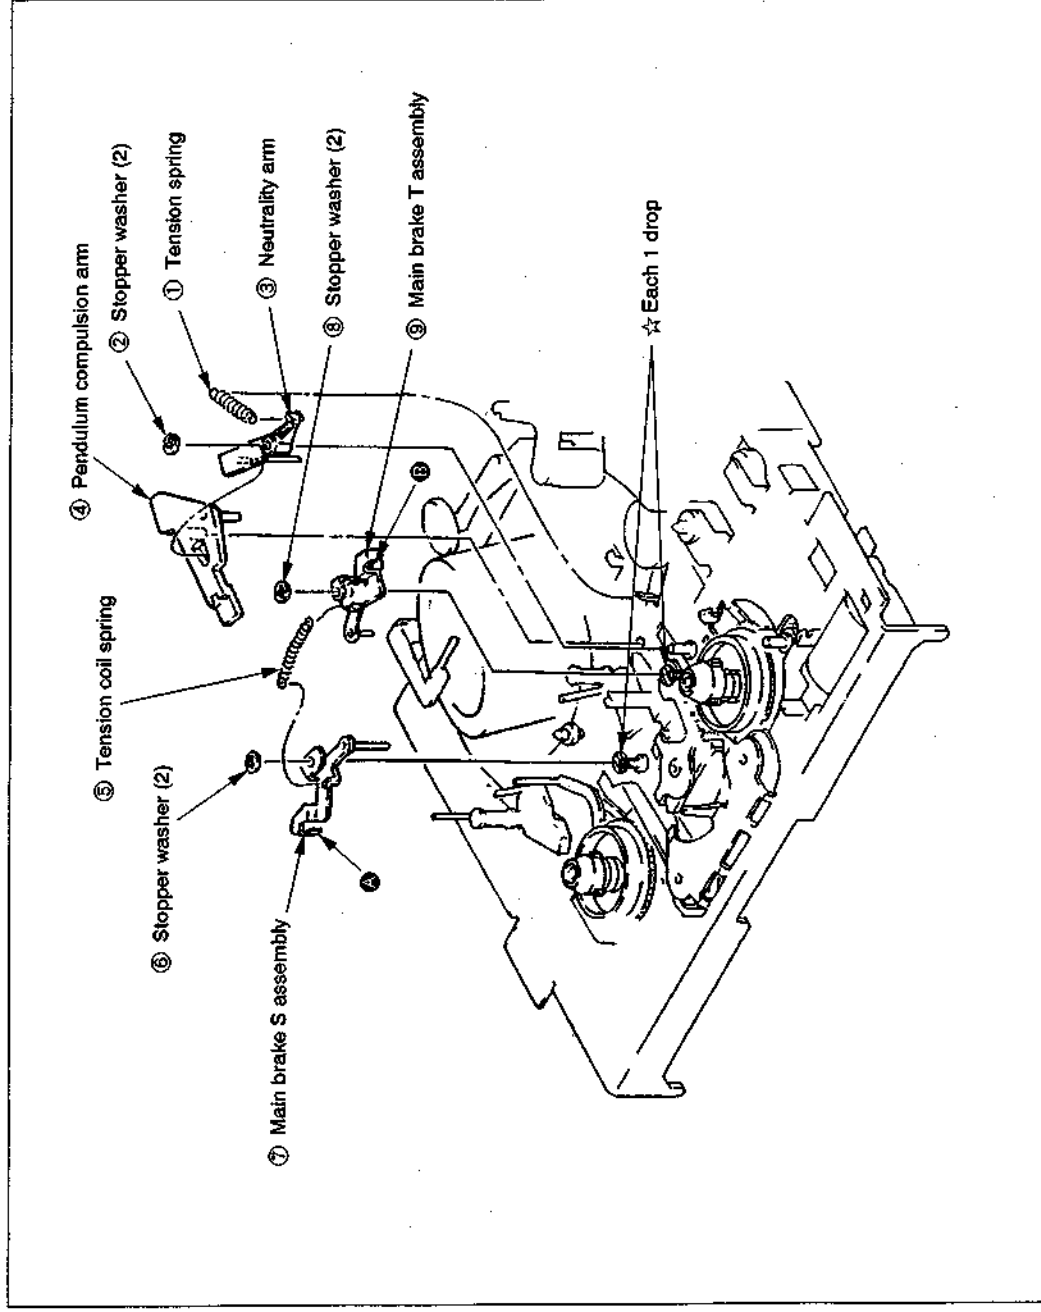


Fig. 3-12

3-11. SOFT BRAKE T ASSEMBLY (Fig. 3-13)

- 1) Remove pinch press block assembly. (Refer to 3-6.)
- 2) Remove lid opener ① carefully not to damage claw ④.
- 3) Remove tension spring ② from side ⑤ to pull out soft brake T assembly ③.

[Note on Mounting]

- Don't touch brake shoes ⑥ with bare hand.

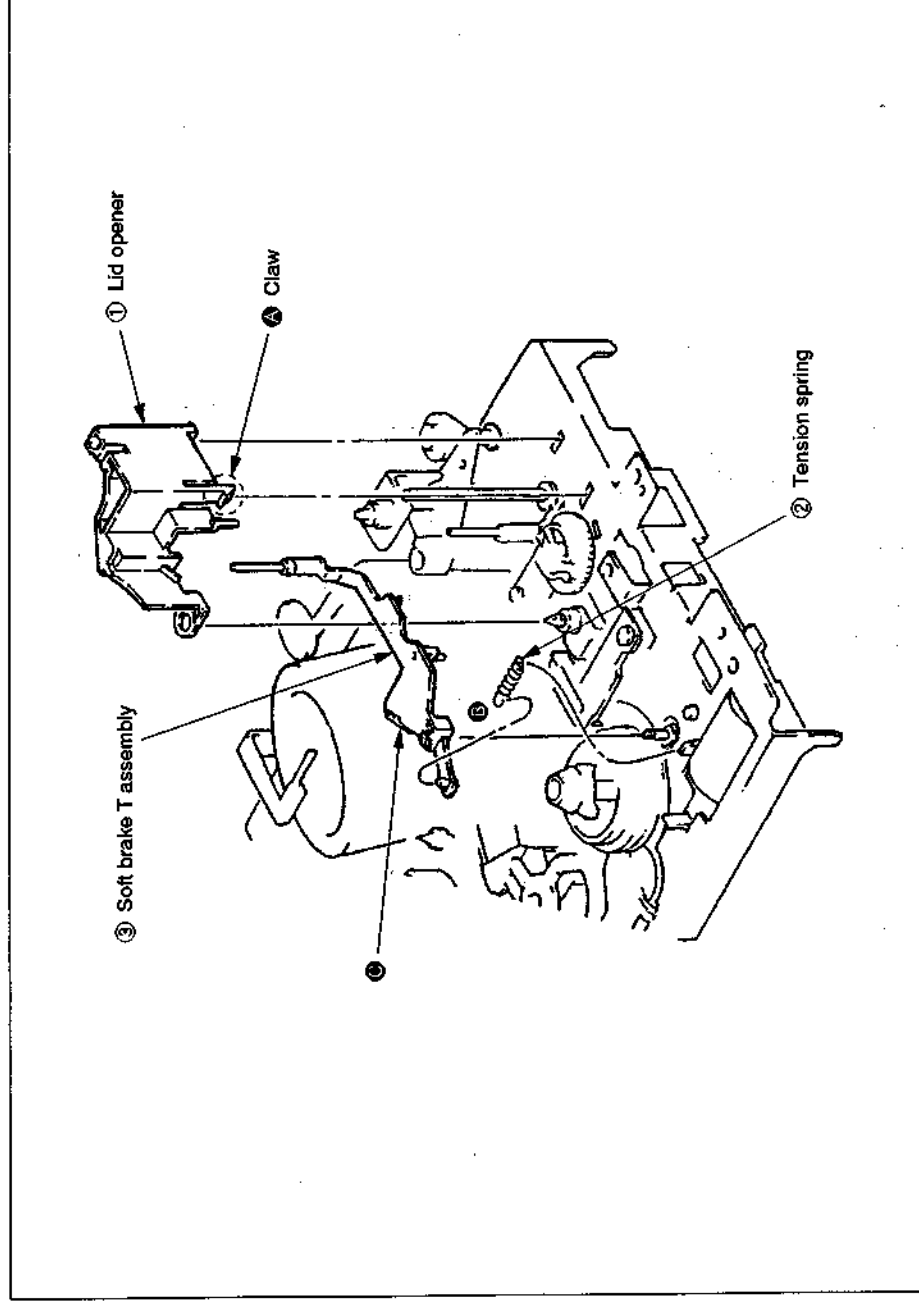


Fig. 3-13

**3-12. RVS BRAKE ARM ASSEMBLY, REEL
TABLE (T) ASSEMBLY (Fig. 3-14)**

- 1) Remove main brake T assembly. (Refer to 3-10.)
- 2) Remove soft brake T assembly. (Refer to 3-11.)
- 3) Remove tension coil spring ① in the order Ⓐ to Ⓑ.
- 4) Remove RVS brake arm assembly ②.
- 5) Remove stopper washer (2) ③ to pull out reel table (T) assembly ④.

[Note on Mounting]

- Apply one drop of Diamond Oil NT-68 (Jig Ref. No. J-13) to ☆ marked portion before mounting reel table (T) assembly ④. (Fig. A)
- Don't touch the hatched portion on reel table (T) assembly ④ and brake shoe Ⓒ of RVS brake arm assembly ② with bare hand.

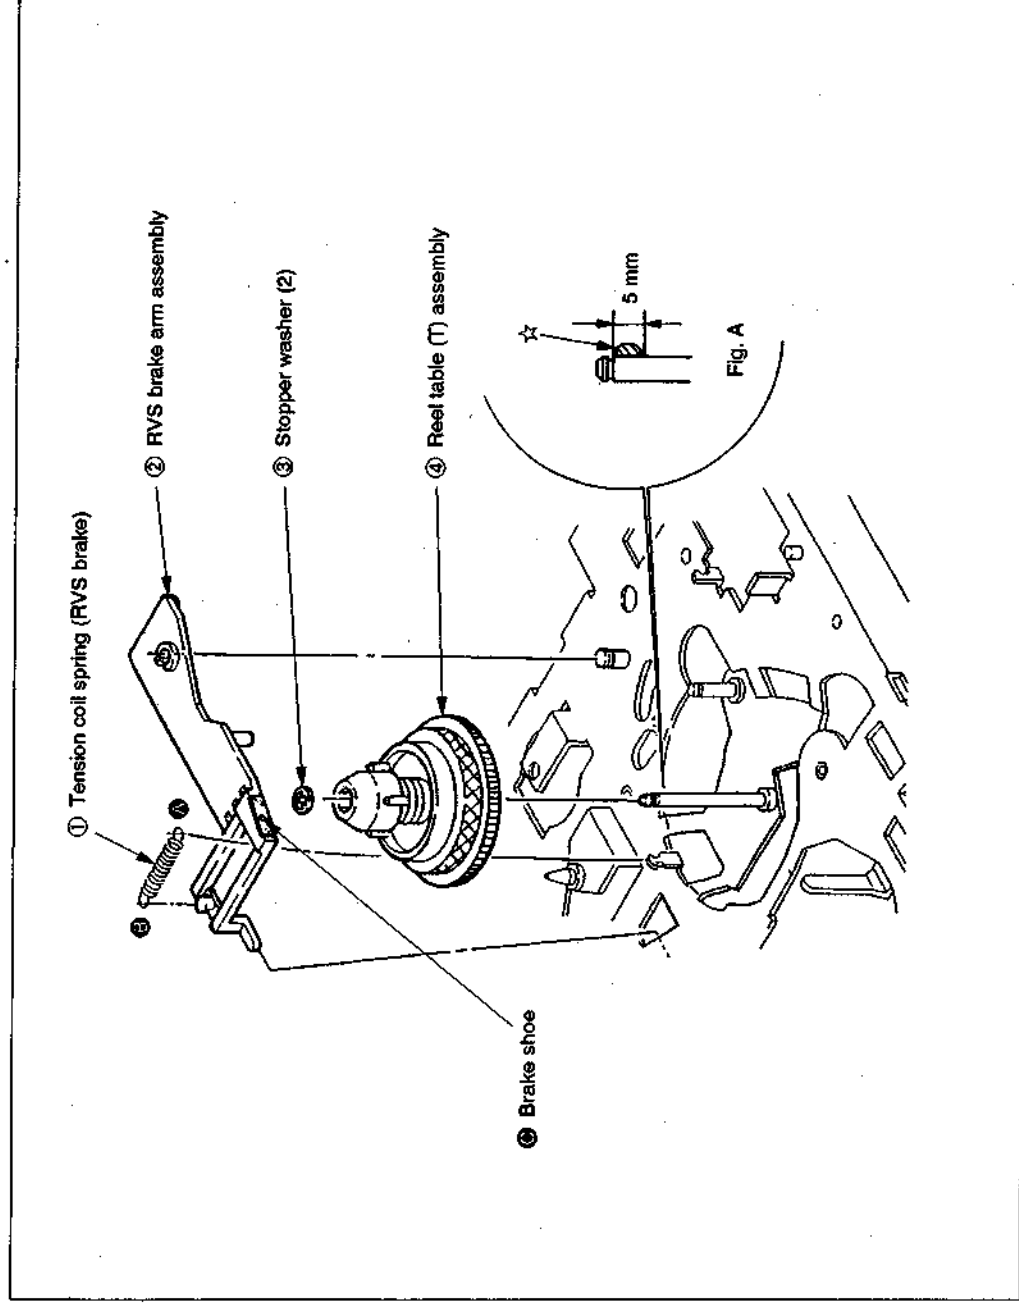


Fig. 3-14

3-13. TG8 ASSEMBLY (Fig. 3-15)

- 1) Remove TG8 retainer ① to pull out TG8 assembly ②.

[Note on Mounting]

- Apply FLOIL SG-055G (Jig Ref. No. J-12) to ☆ marked portion.
- Keep clean the surface contacts tape of TG8 assembly ②.
- Be careful not to change the shape of TG8 retainer ①.

[Adjustment after Mounting]

- 4-1. Tape path adjustment.

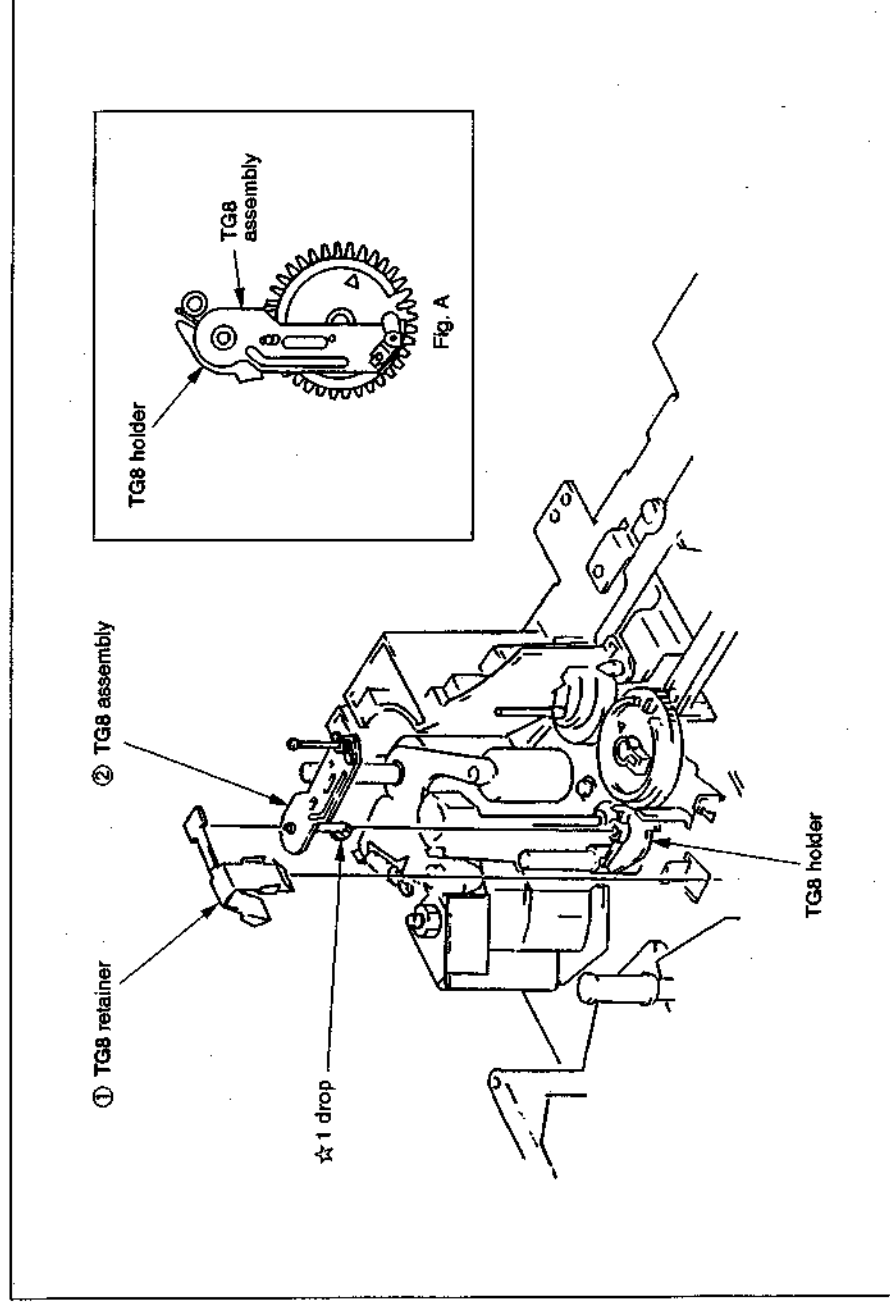


Fig. 3-15

3-14. TG8 HOLDER (Fig. 3-16)

- 1) Remove TG8 assembly. (Refer to 3-13)
- 2) Pull out TG8 holder ①.

[Note on Mounting]

- Be careful about the direction of TG8 holder ①. (● of Fig. A)

[Adjustment after Mounting]

- 4-1. Tape path adjustment.

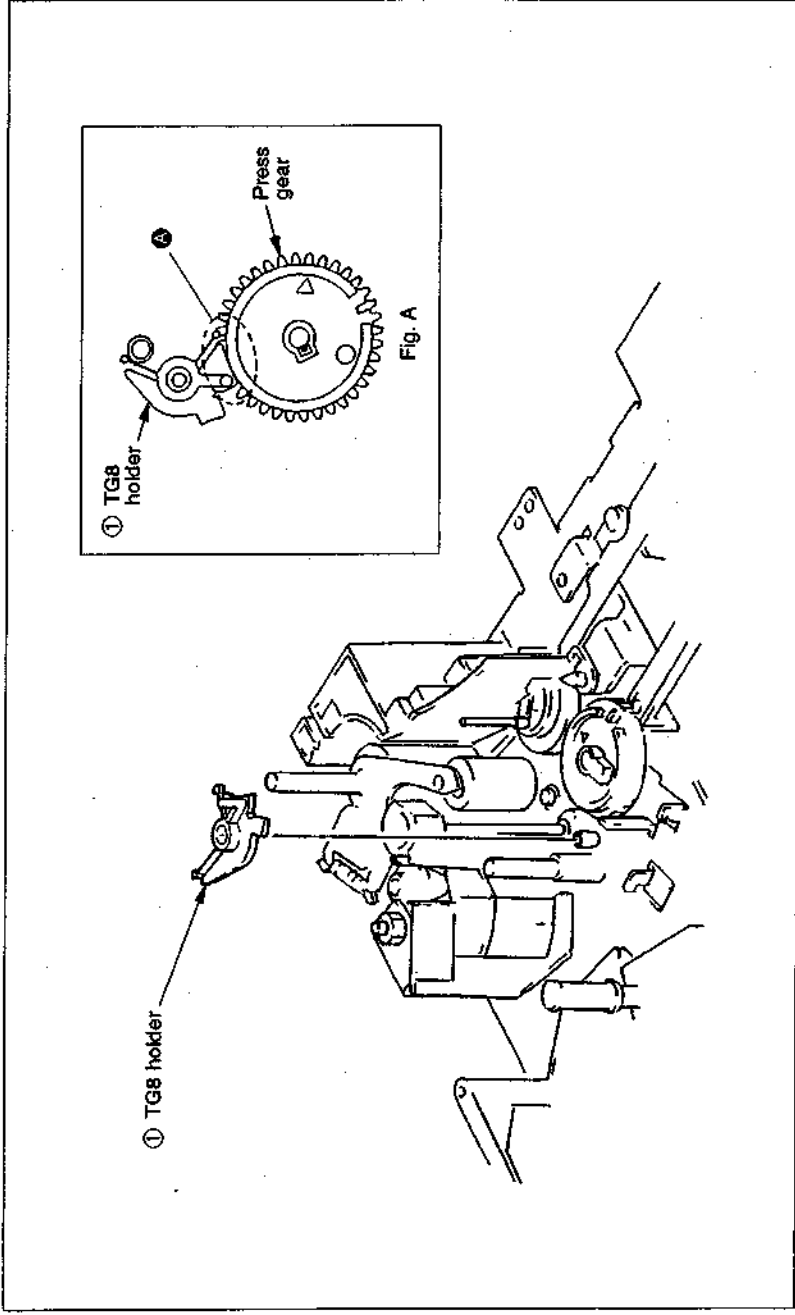


Fig. 3-16

3-15. TG8 AND PRESS GEARS (Fig. 3-17)

- 1) Remove pinch press block assembly. (Refer to 3-6.)
- 2) Remove soft brake T assembly. (Refer to 3-11.)
- 3) Remove TG8 assembly. (Refer to 3-13.)
- 4) Remove TG8 holder. (Refer to 3-14.)
- 5) Pull out TG8 gear ① or press gear ②.

[Note on Mounting]

- Adjust the holes on gears to the holes on chassis. (Fig. A)
- Adjust the arrows carved on gears each other. (Fig. A)

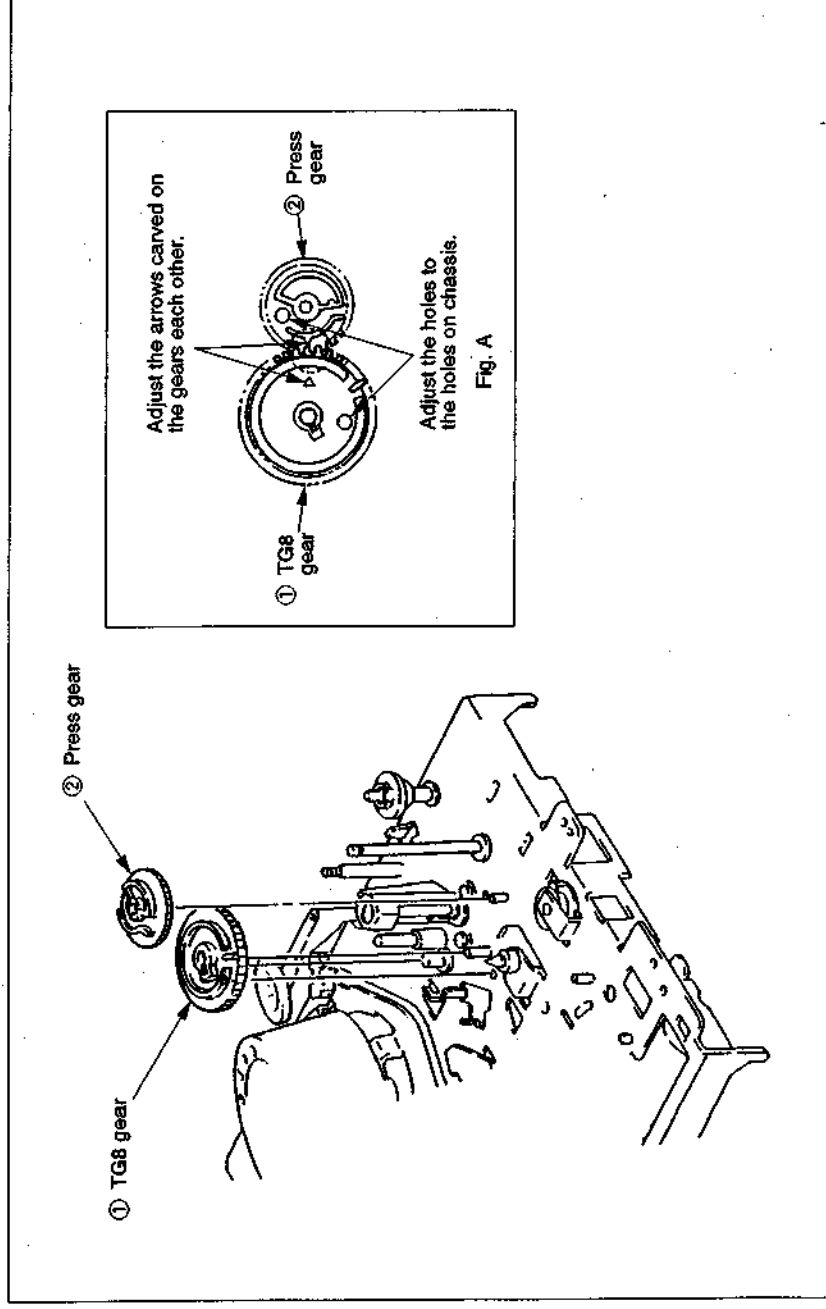


Fig. 3-17

3-16. CAM MOTOR CHASSIS BLOCK ASSEMBLY, UPPER/LOWER COMMUNICATION GEAR (Fig. 3-18)

- 1) Remove timing belt. (Refer to 3-3.)
- 2) Remove CAP brake assembly. (Refer to 3-4.)
- 3) Remove screws ① to remove cam motor chassis assembly ②.
- 4) Pull out upper/lower communication gear ③.

[Note on Mounting]

- First, check main slider ④ slides fully in the arrow ➊ direction.
- Set rotary encoder switch position to "E" seen from the window of cam motor chassis. (Fig. A)
- Tighten screws ① in the order ➋ to ➅ to ➆ to ➇.

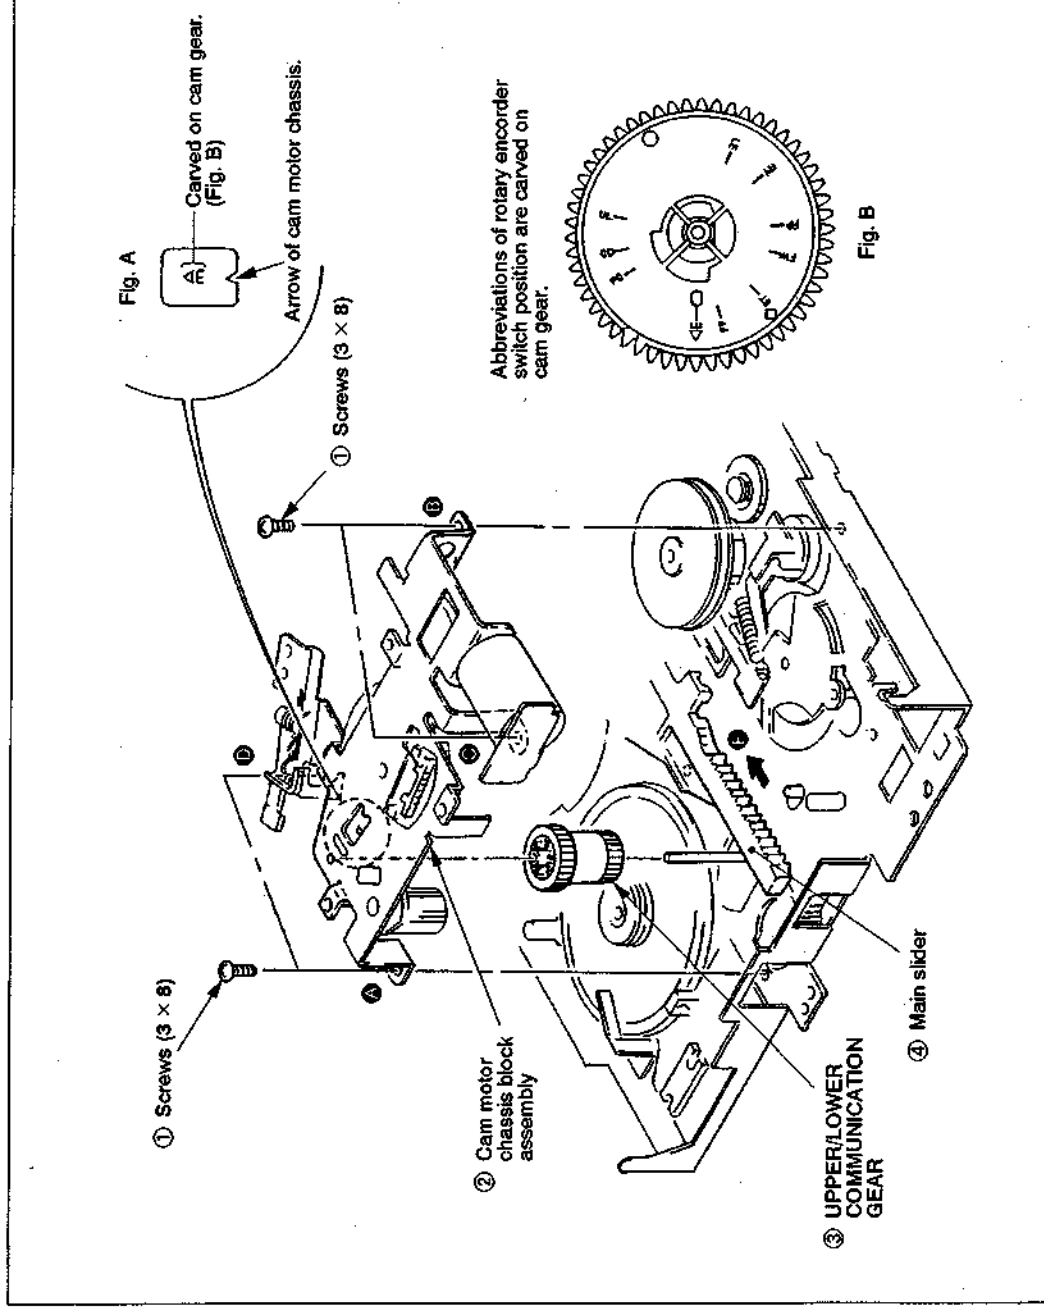


Fig. 3-18

3-17. ROTARY ENCODER SWITCH (Fig. 3-19)

- 1) Remove timing belt. (Refer to 3-3.)
- 2) Remove CAP brake assembly. (Refer to 3-4.)
- 3) Remove cam motor chassis block assembly (Refer to 3-15.) and turn upside on the bottom.
- 4) Remove stopper washer (2) ① to pull out worm wheel ②.
- 5) Remove stopper washer (2) ③ to pull out cam gear ④.
- 6) Pull out FL driving gear ⑤ and rotary encoder switch ⑥.

[Note on Mounting]

- Apply FLOIL SG-055G (Jig Ref. No. J-12) to ☆ marked portions. (Fig. 3-19, A)
- Adjust the hole ④ to the hole on cam motor chassis. (Fig. B)
- Adjust the holes ⑤ and ⑥ to the hole on cam motor chassis. (Fig. C)

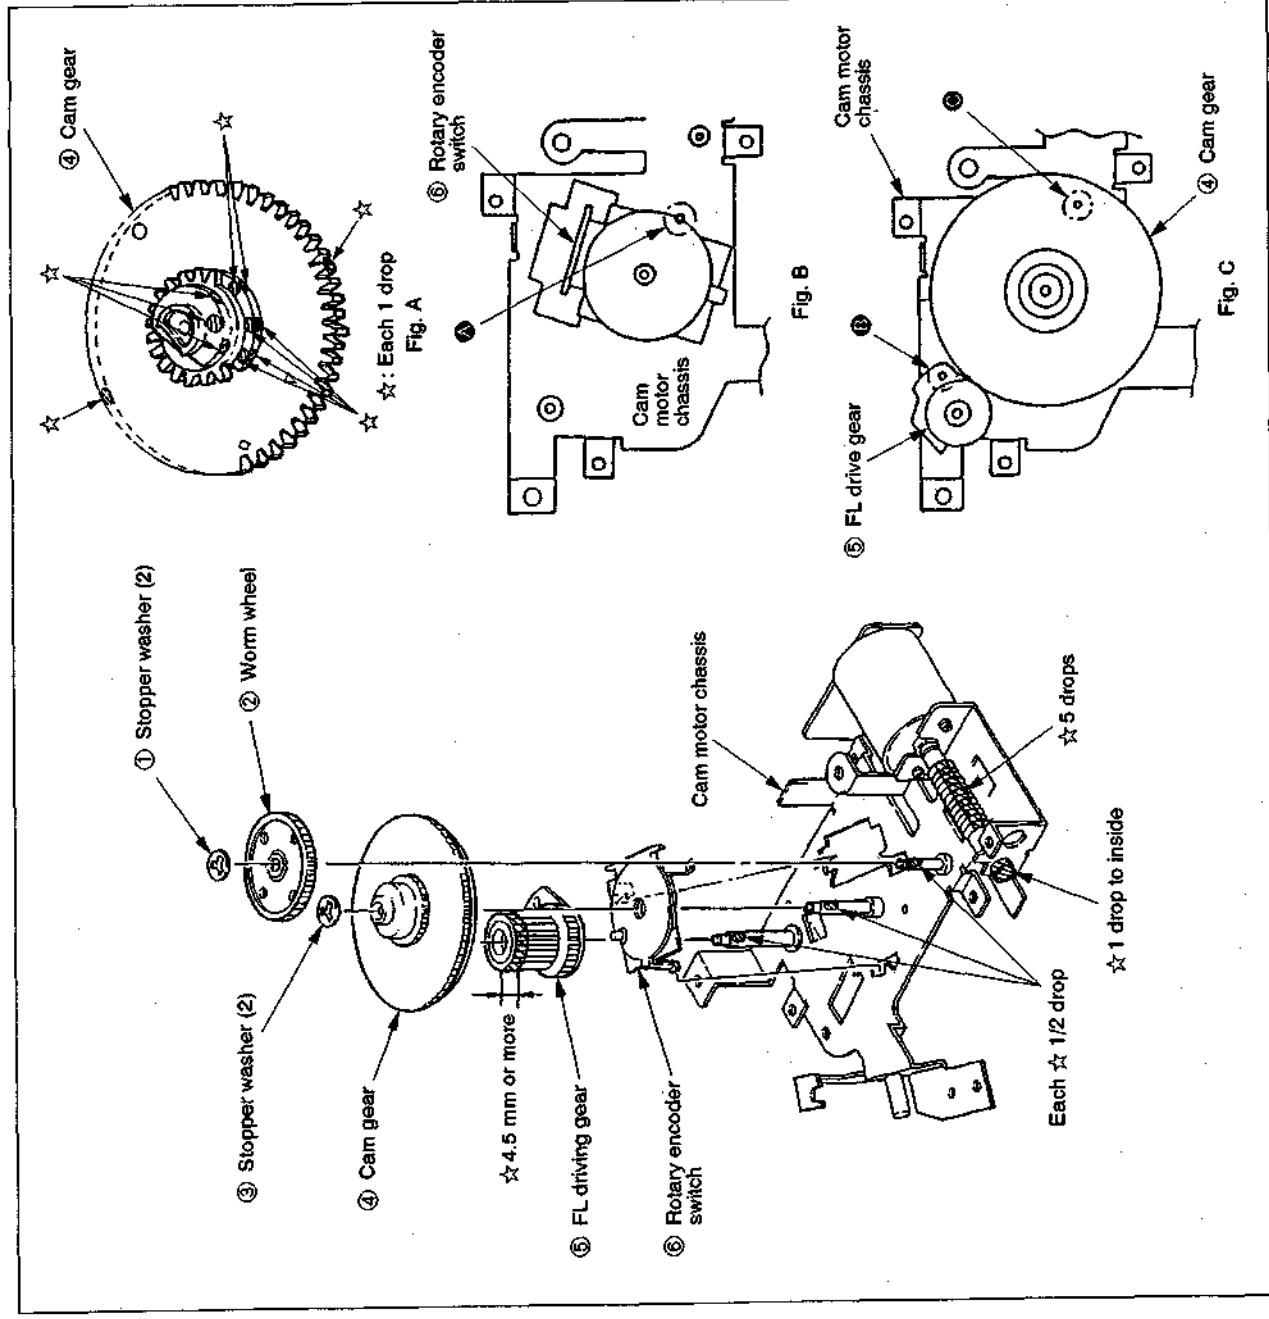


Fig. 3-19

3-18. MAIN SLIDER (Fig. 3-20)

- 1) Remove timing belt. (Refer to 3-3.)
- 2) Remove CAP brake assembly. (Refer to 3-4.)
- 3) Remove cam motor chassis block assembly. (Refer to 3-16.)
- 4) Remove screw ① to remove retainer ②.
- 5) Pull out main slider ③.

[Note on Mounting]

- Apply FLOIL SG-055G (Jig Ref. No. J-12) as shown in Fig. A.
- At the last, slide main slider fully in the arrow A direction.

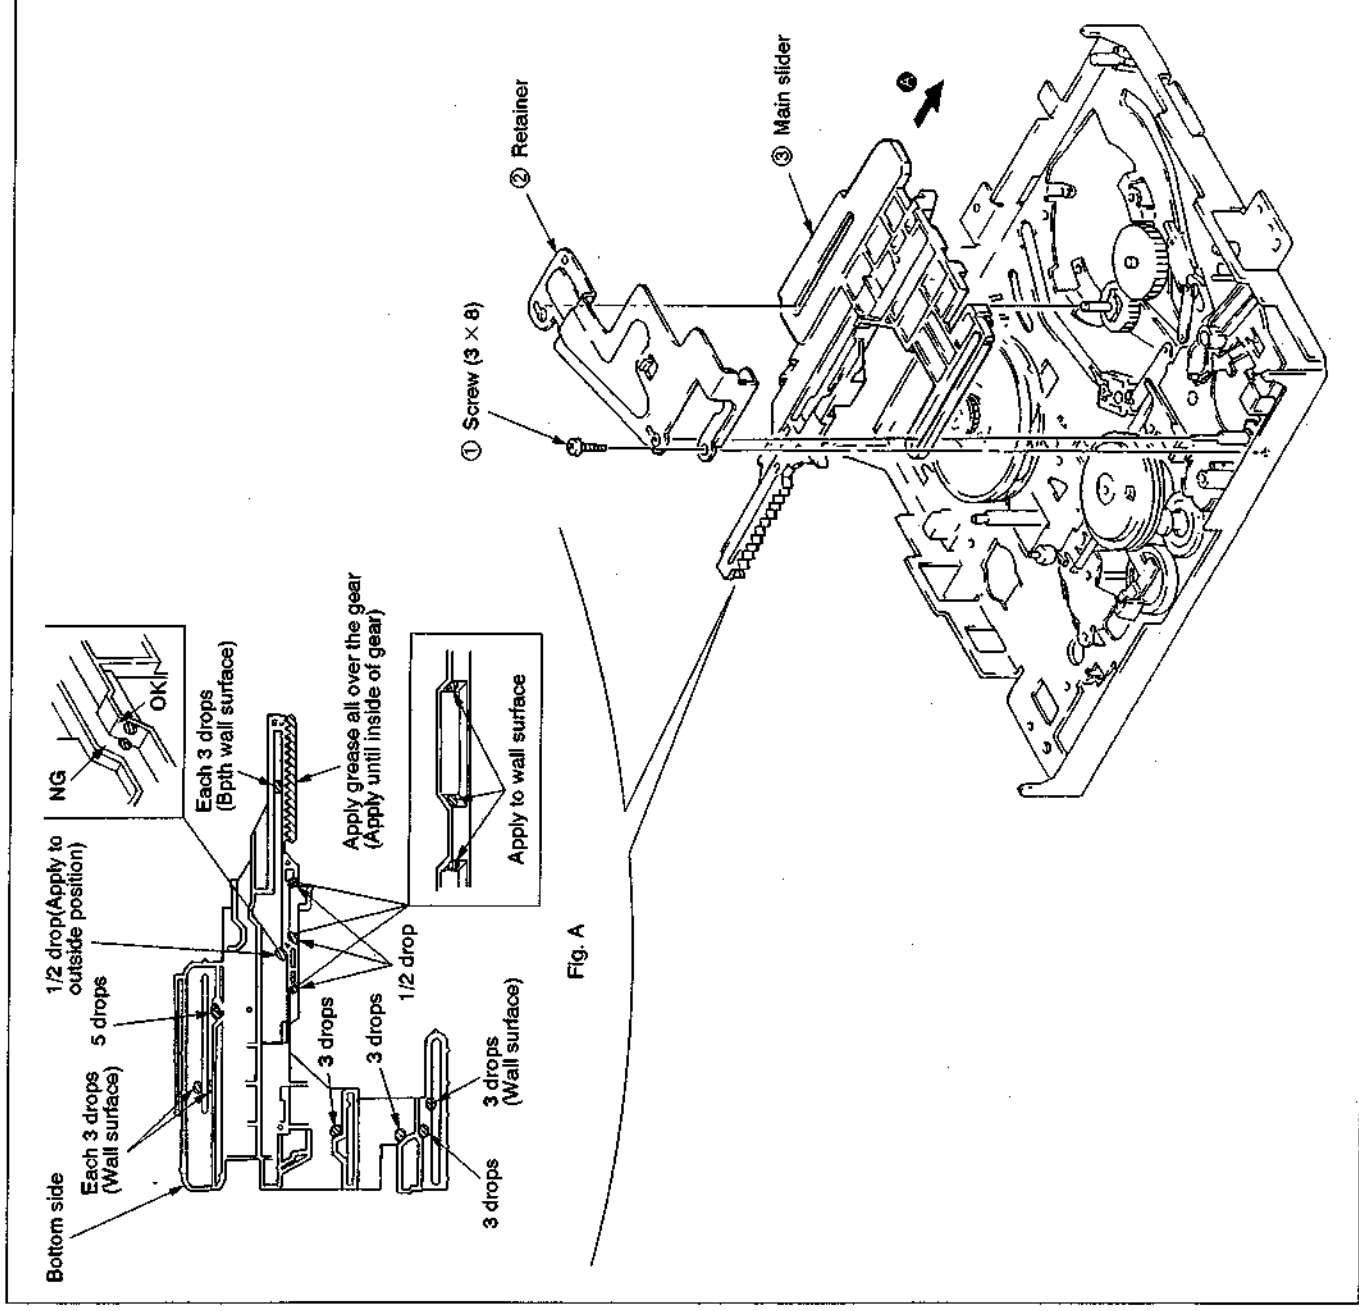


Fig. 3-20

3-19. SHUTTLE T BLOCK AND LOADING GEAR T BLOCK ASSEMBLIES (Fig. 3-21)

- 1) Remove timing belt. (Refer to 3-3.)
- 2) Remove CAP brake assembly. (Refer to 3-4.)
- 3) Remove cam motor chassis block assembly. (Refer to 3-16.)
- 4) Remove main slider. (Refer to 3-18.)
- 5) Remove screw ① to remove loading leaf (T) spring ② and shuttle T block assembly ③.
- 6) Pull out loading gear T block assembly ④.

[Note on Mounting]

- Adjust the phase **A** between loading gear (T) and loading gear (S). (Fig. A)
- Keep clean the surface contacts tape of shuttle T block assembly ③.

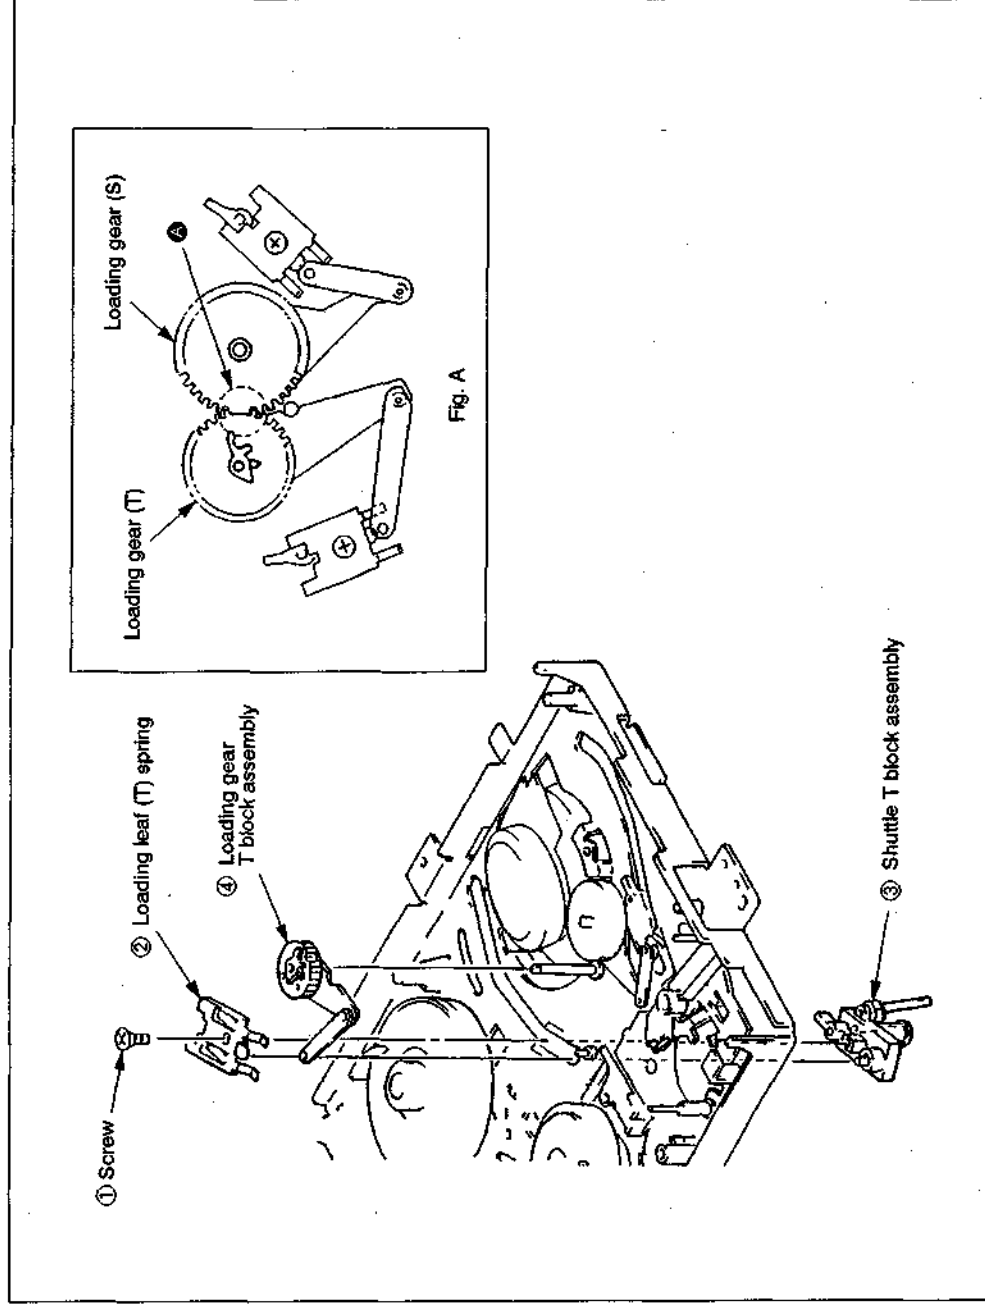


Fig. 3-21

3-20. SHUTTLE S BLOCK AND LOADING GEAR S BLOCK ASSEMBLIES (Fig. 3-22)

- 1) Remove timing belt. (Refer to 3-3.)
- 2) Remove CAP brake assembly. (Refer to 3-4.)
- 3) Remove cam motor chassis block assembly. (Refer to 3-16.)
- 4) Remove main slider. (Refer to 3-15.)
- 5) Remove screw ① to remove loading leaf (S) spring ② and shuttle S block assembly ③.
- 6) Pull out loading gear S block assembly ④.

[Note on Mounting]

- Adjust the phase Ⓐ between loading gear (S) and loading gear (S). (Fig. A)
- Keep clean the surface contacts tape of shuttle S block assembly ③.

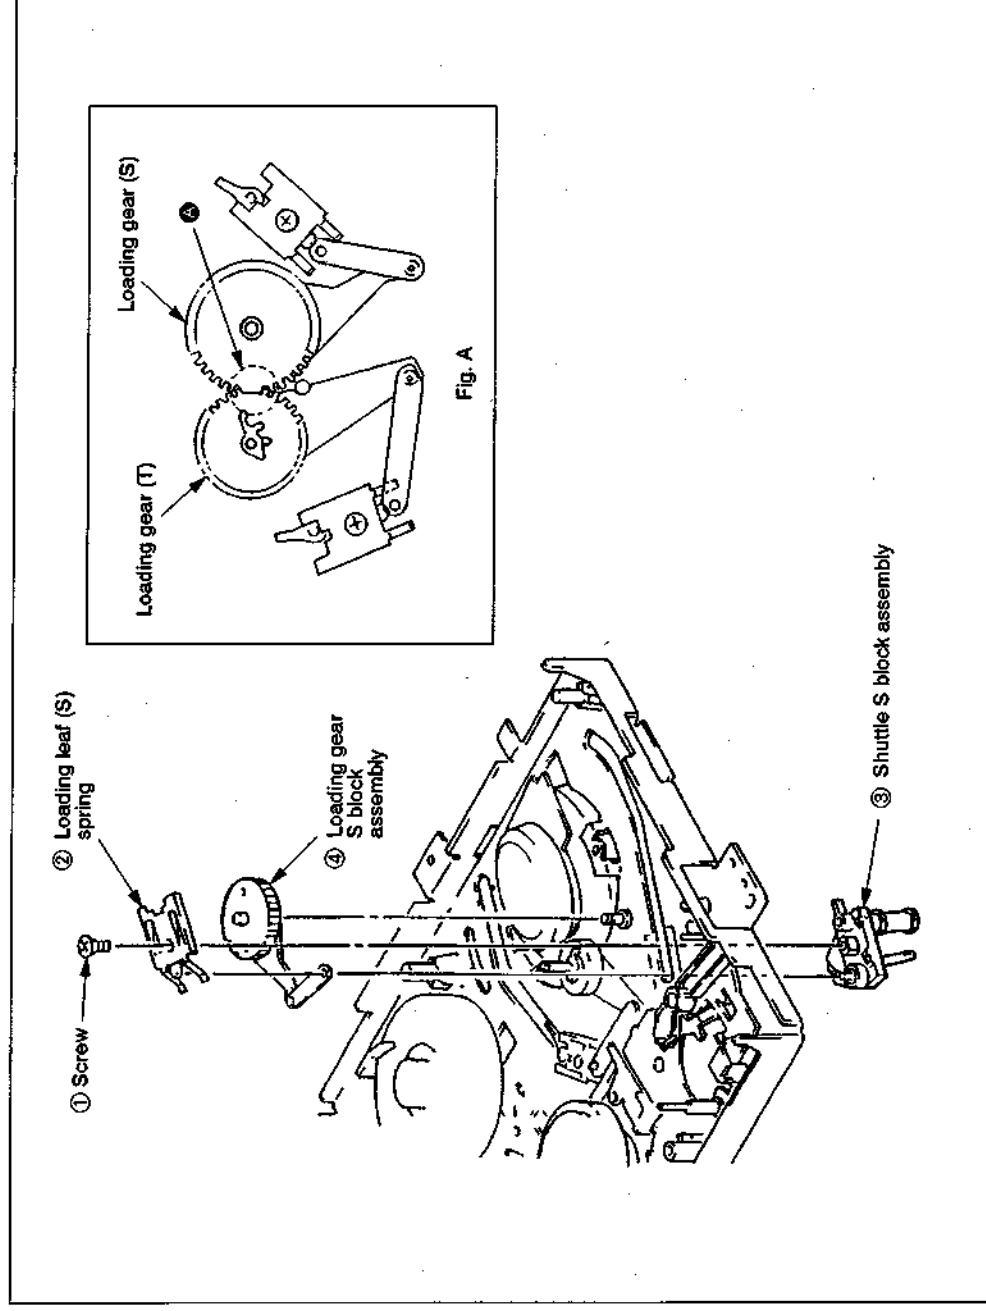


Fig. 3-22

3-21. REEL TABLE (S) ASSEMBLY (Fig. 3-23)

- 1) Remove tension spring ① from the chassis side.
- 2) Remove stopper washer (2) ② to pull out soft brake (S) ③.
- 3) Move TG1 band ④ over the reel table.
- 4) Remove stopper washer (2) ⑤.
- 5) While pressing main brake S assembly ⑥, pull out reel table (S) assembly ⑦.

[Note on Mounting]

- Apply one drop of Diamond Oil NT-68 (Jig Ref. No. J-13) to ☆ marked portion before mounting reel table (S) assembly ⑦. (Fig. A)
- Don't touch the hatched portion on reel table (S) assembly ⑥ with bare hand.

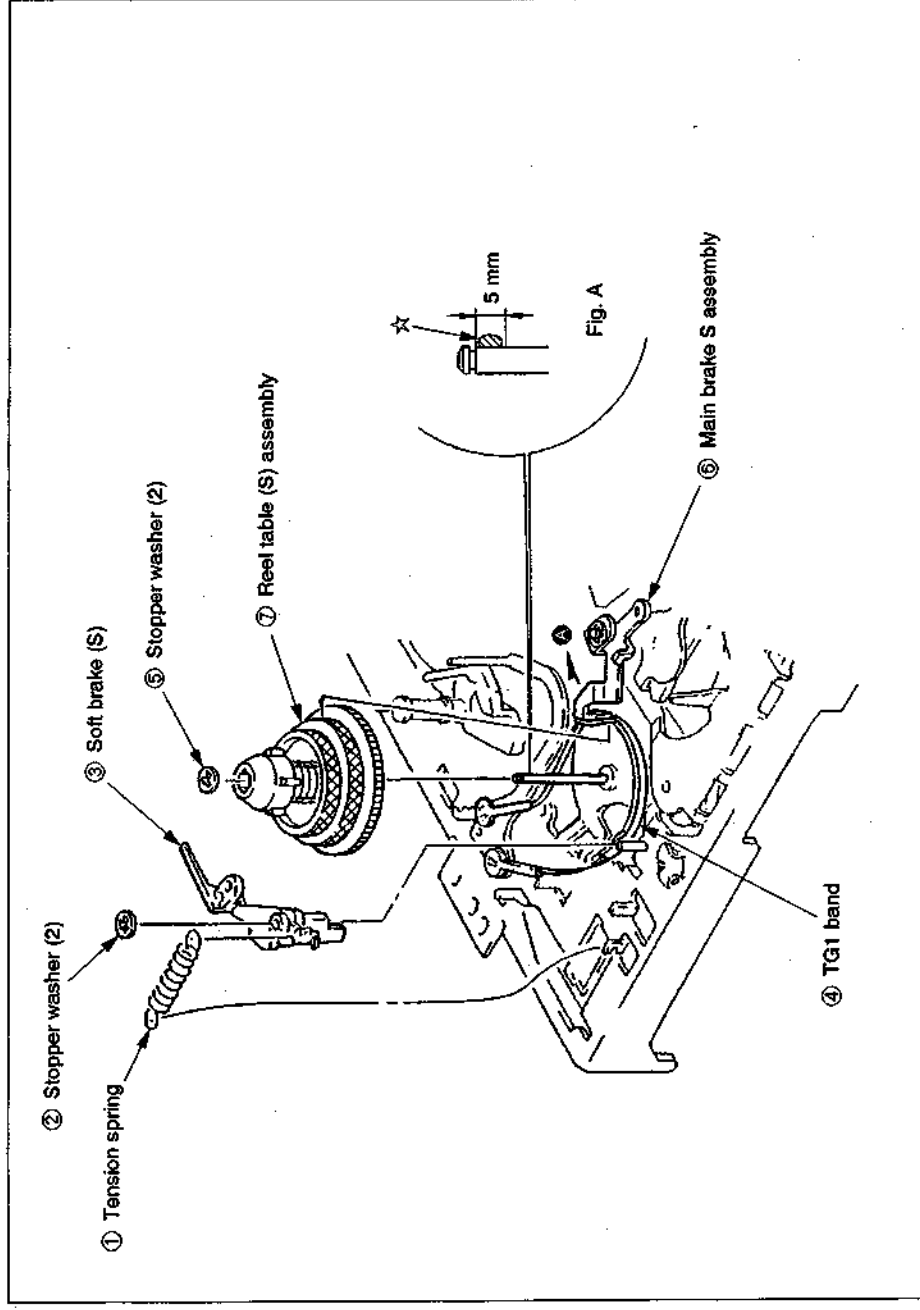


Fig. 3-23

3-22. TG1 ASSEMBLY (Fig. 3-24)

- 1) Set the mechanism to the loading-end condition referring to 1-1. (Cam gear indicates "LE". (Refer to Fig. A and B of Fig. 3-18.))
- 2) Remove tension spring ① in the order Ⓐ to Ⓔ.
- 3) Remove stopper washer (2) ② to pull out TG1 assembly ③.

[Note on Mounting]

- Apply one drop of Diamond Oil NT-68 (Jig Ref. No. J-13) to ☆ marked portion.
- Keep clean the felt side of TG1 assembly.

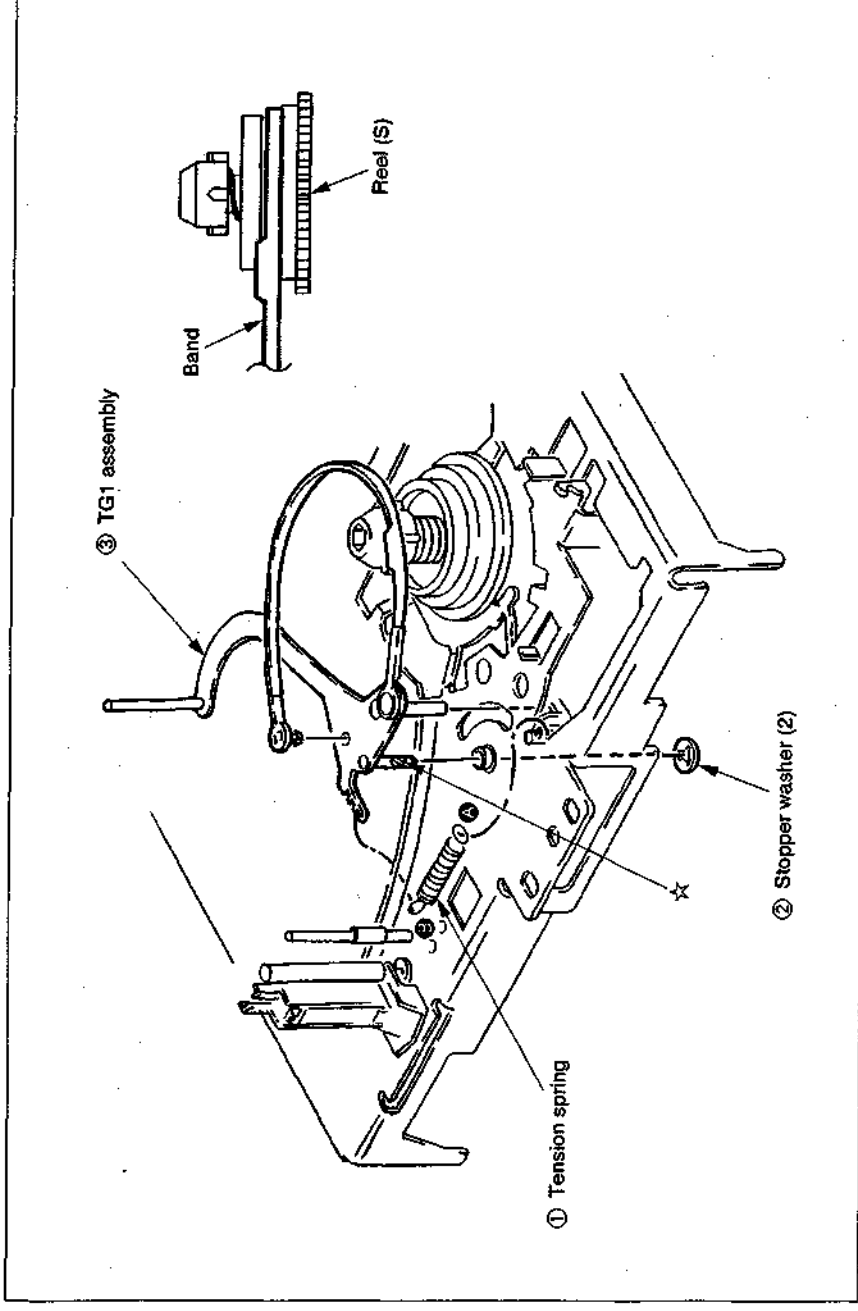


Fig. 3-24

3-23. S WINDING BLOCK ASSEMBLY (Fig. 3-25)

- 1) Remove timing belt. (Refer to 3-3.)
- 2) Remove CAP brake assembly. (Refer to 3-4.)
- 3) Remove cam motor chassis block assembly. (Refer to 3-16.)
- 4) Remove main slider. (Refer to 3-18.)
- 5) Remove stopper washer (2) ① to pull out S winding block assembly ②.
- 6) Remove torsion spring ③.

[Note on Mounting]

- At the last, hang torsion spring ② to the position **A**.
- Apply FLOIL SG-055G (Jig Ref. No. J-12) to ☆ marked portions.

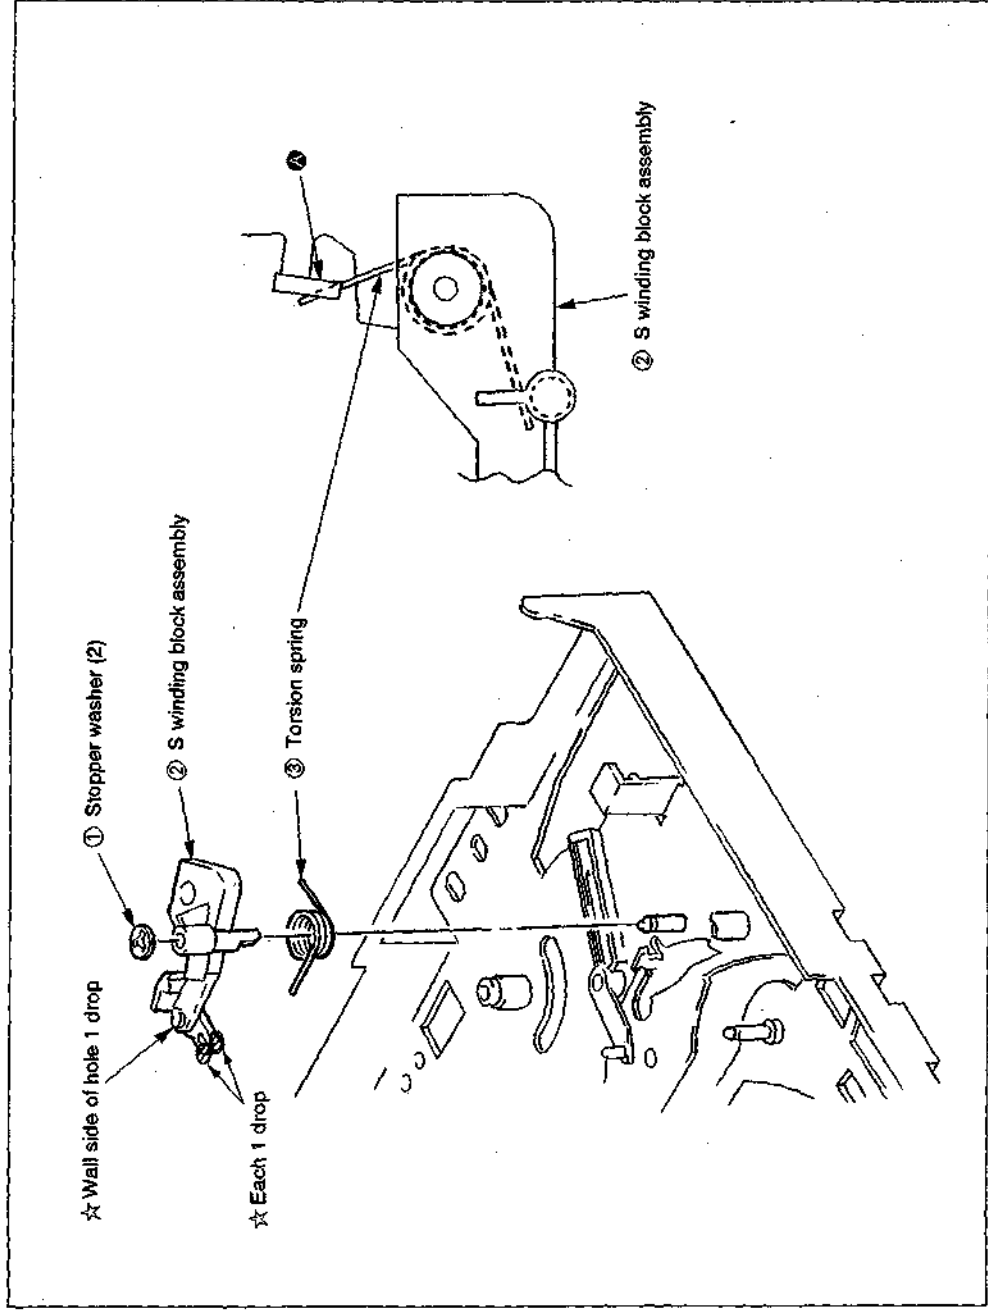


Fig. 3-25

3-24. TRIGGER LEVER AND RKB BLOCK ASSEMBLIES (Fig. 3-26)

- 1) Remove timing belt. (Refer to 3-3.)
- 2) Remove CAP brake assembly. (Refer to 3-4.)
- 3) Remove cam motor chassis block assembly. (Refer to 3-16.)
- 4) Remove main slider. (Refer to 3-18.)
- 5) Remove tension spring ① in the order ④ to ① to remove trigger lever assembly ②.
- 6) Remove screws (3 × 8) ③ to remove RKB block assembly ④.

[Note on Mounting]

- Apply FLOIL SG-035G (Jig Ref. No. J-12) to ☆ marked portions on trigger lever assembly. (Fig. A)

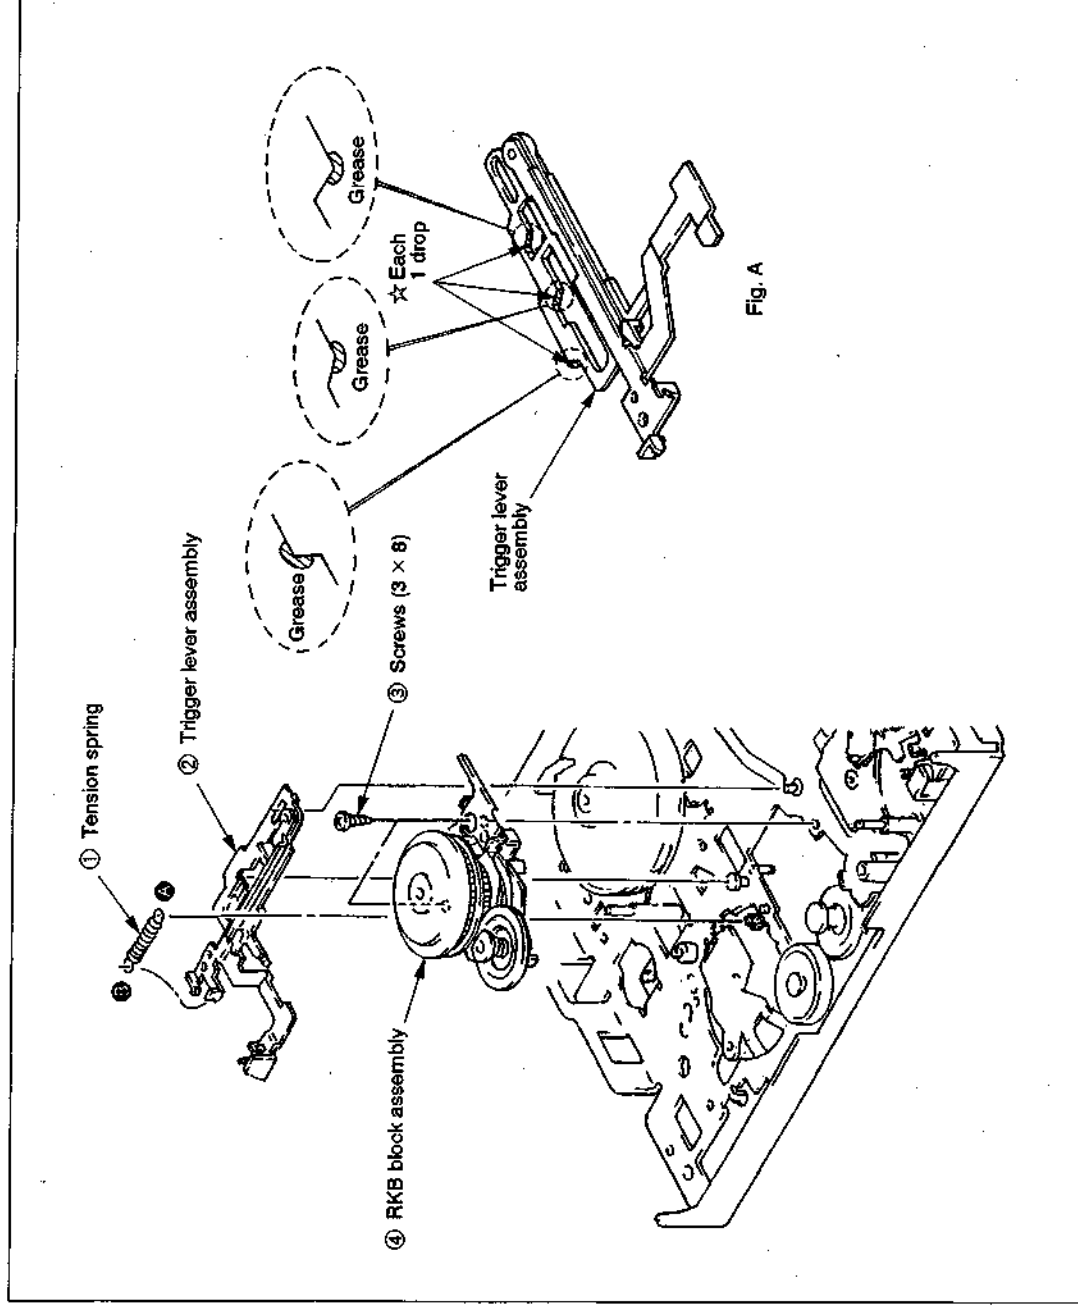


Fig. 3-26

4. ADJUSTMENT

4-1. TAPE PATH ADJUSTMENT

The "Tape path" refers to the route of the tape from the supply reel disk to the take-up reel disc via the video heads.

Each component part of the tape transport system particularly the surface of parts which make direct contact with the tape must always be kept clean, free of dust, oil, scratches and so forth.

The tape path system is factory preadjusted, when parts of the tape transport system are replaced, be sure to make the required adjustments as precisely as possible in order to ensure stable tape transport.

4-1-1. TENSION REGULATOR (TG1) POSITION/ TENSION ADJUSTMENT (Fig. 4-1)

Purpose: stabilizes contact of the video head and the tape to maintain the tension of the tape so that it feeds at a constant level.

• Position adjustment

Mode	Treading is completed without a cassette loaded
Adjustment locations	Eccentric pin of TG1 band assembly

[Adjustment Method]

- 1) Allow the unit to go through the threading procedure without a cassette loaded.

- 2) Set the unit to play back, then turn the eccentric pin so that the tip of tension arm goes to the left side line carved on the mechanical chassis. (Fig. A)
- 3) After adjustment, go through the loading procedure once more without a cassette loaded, then check the position of the tension arm.

• Tension adjustment

Mode	Playback
Measuring instrument/tool	Torque cassette
Adjustment locations	Position for hooking the tension spring
Specified value	36 to 44 g*cm

[Adjustment Method]

- 1) Playback the torque cassette.
- 2) Check that the center value deviation reading on the torque cassette meets with the standards.
- 3) When the reading is higher than the standards: Move the spring toward direction **A**.
When the reading is less than the standards: Move the spring toward direction **B**.

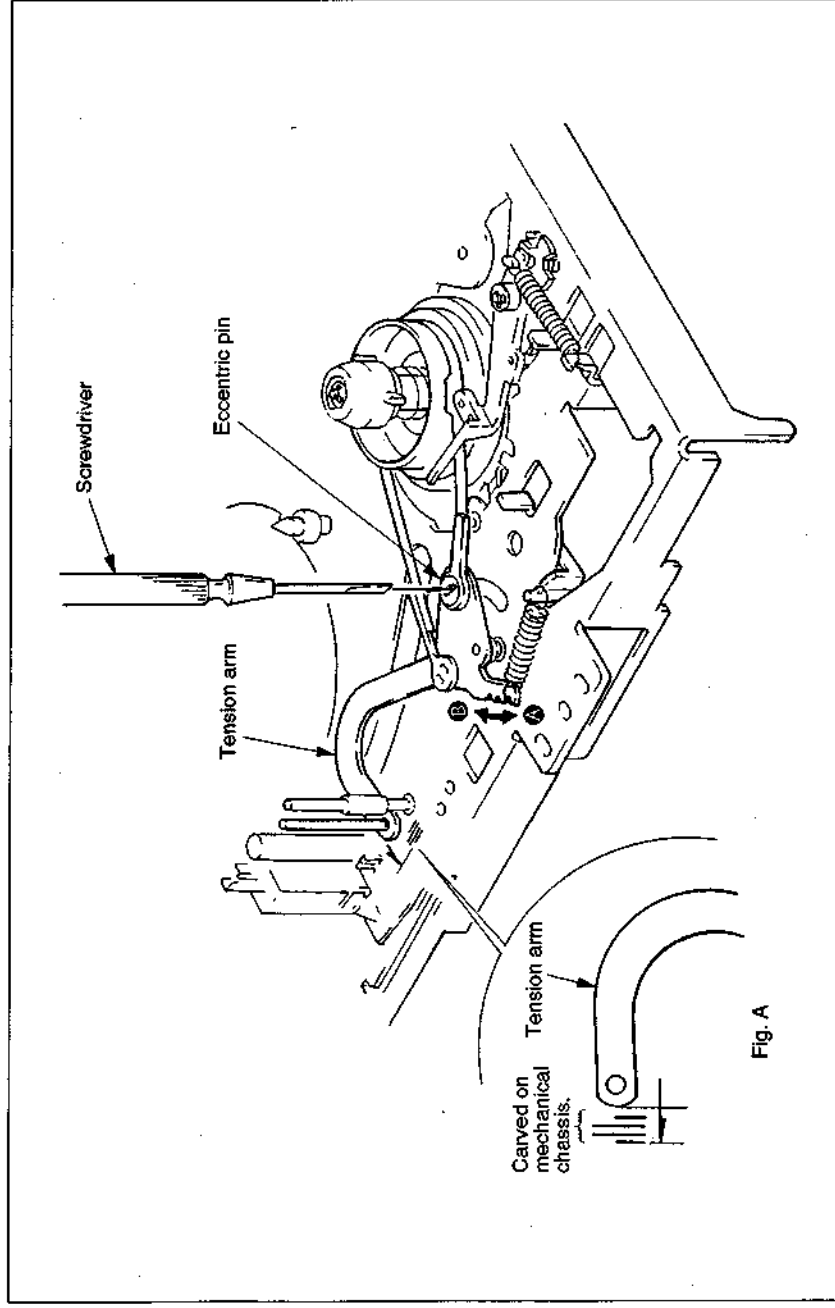


Fig. A

Fig. 4-1

4-1-2. TG8 GUIDE ROLLER HEIGHT ADJUSTMENT (Fig. 4-2)

Mode	Playback
Jig	Blank tape
Adjustment locations	Guide roller height adjustment screw
Specified value	0 to 0.1 mm

Procedure:

- 1) Set the tape, during CUE playing back, check the height from lower flange of TG7 to the running tape. (Fig. A)
- 2) During REV playing back, check the height from lower flange of TG7 to the running tape. (Fig. B)
- 3) When the difference between items 1) and 2) doesn't go to specified value, adjust by turning TG8 guide roller height adjustment screw.
- 4) Check the tape is creased or not between the capstan and TG8, adjust with TG8 guide roller height adjustment screw so that the tape is not creased during normal playback, CUE and REV.

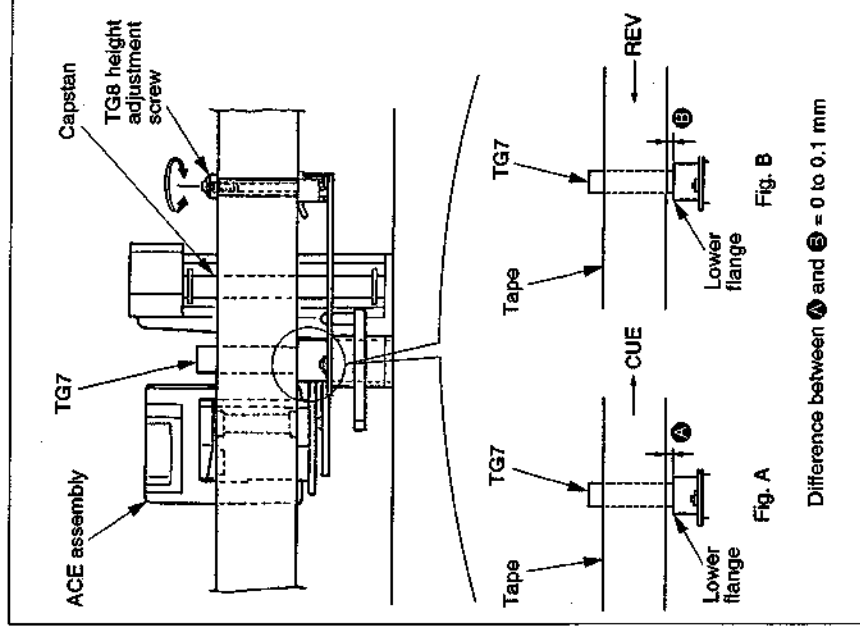


Fig. 4-2

4-1-3. HEIGHT ADJUSTMENT OF GUIDE ROLLERS NO. 3 AND NO. 6 (Fig. 4-3)

Mode	Playback
Signal	Alignment tape
Measuring instrument	Oscilloscope
Measuring point	CH-1: Connector PB RF pin for RF PC board check. CH-2: Connector RF SW P pin for RF PC board check.
Adjustment locations	Guide roller height adjuster screw

[Adjustment Method]

- 1) Tracking (playback): Turn off the auto tracking, then press the tracking buttons ∇ and \triangle simultaneously to set the tracking at the center position.
(If adjustment is made after the drum is replaced, the tracking must be set at the max. RF output position.)
- 2) Height adjuster screw: Even out the RF output waveforms.
- 3) Press the tracking buttons (playback), ∇ and \triangle alternately.
- 4) Check that RF output drops the same amount at the front and rear edges.

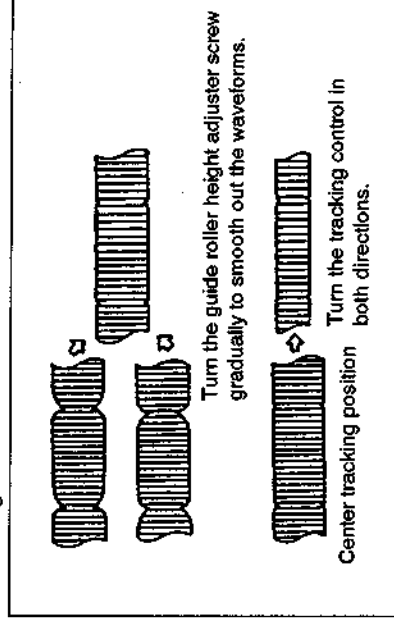


Fig. 4-3

**4-1-4. ACE HEAD ASSEMBLY ADJUSTMENT
(ROUGH ADJUSTMENT) (Figs. 4-4 and 4-5)**

Purpose: Allows the tape to make even contact with the head for recording and playback of the specified track.

Mode	Playback
Tool	Blank tape
Adjustment locations	Height adjuster nut, Tilt adjuster screw

[Adjustment Method]

- 1) Mount the ACE head assembly. At this time, adjust the height so that the height of guide flange No. 7 matches the level of the lower edge of the control head.
- 2) Remove the adjustment tool and load a new tape, then set the unit for playback.
- 3) Check that the tape does not curl or rise up noticeably near the ACE head.
- 4) If the tape curls up or rises noticeably, readjust the tilt adjuster screw, the azimuth adjuster screw and the height adjuster nut.
(The height of the ACE head should be adjusted so that the lower edge of the tape is approx. 0.1 to 0.15 mm from the control head.)
- 5) Perform precision adjustment.

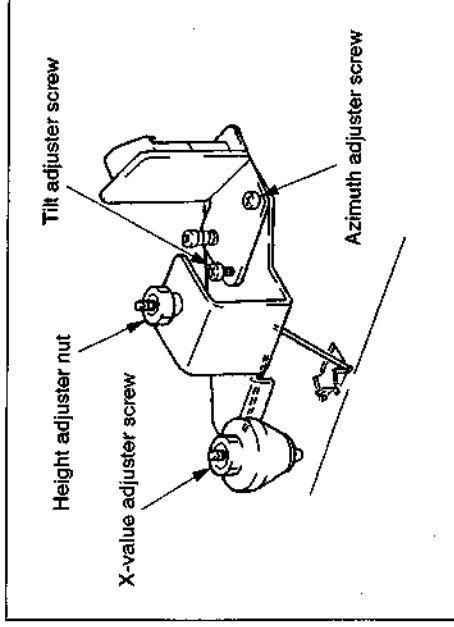


Fig. 4-4

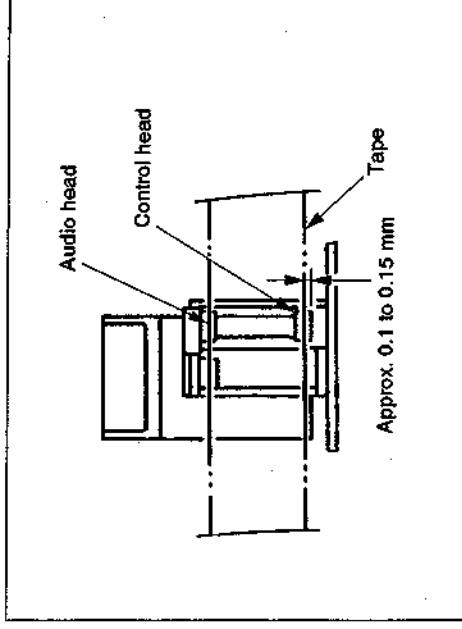


Fig. 4-5

4-1-5. ACE HEAD ASSEMBLY ADJUSTMENT (PRECISION ADJUSTMENT)

Mode	Playback
Signal	Alignment tape (1kHz track)
Measuring instrument	Oscilloscope
Measuring point	Audio output terminal
Adjustment locations	Azimuth adjuster screw, Height adjuster nut, Tilt adjuster screw

[Adjustment Method]

- 1) Adjust the tilt adjuster screw in the FWD or REV mode so that the lower flange of guide No. 7 does not curl up or rise.
- 2) Alternately adjust the azimuth adjuster screw, the height adjuster nut, and the tilt adjuster screw to maintain even audio output at maximum with minimum deviation.

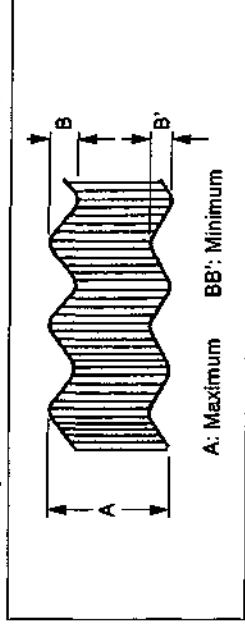


Fig. 4-6

4-1-6. X-VALUE ADJUSTMENT

Purpose: To obtain compatibility with other VTR

Precaution: Be sure to perform the preset tracking adjustment before perform this adjustment. (Refer to the Service Guide.)

Turn off the auto tracking and set the VTR for manual tracking mode.

Mode	Playback
Signal	Alignment tape
Measuring instrument	Oscilloscope
Measuring point	CH-1: Connector PB RF pin for RF PC board check. CH-2: Connector RF SW P pin for RF PC board check.
Adjustment locations	X-value adjuster screw

[Adjustment Method]

- **Adjustment by HI-FL alignment tape (NTSC only)**
When the tracking is set at the center position (by pressing the ∇ and \triangle keys simultaneously), adjust the RF output to maximum.

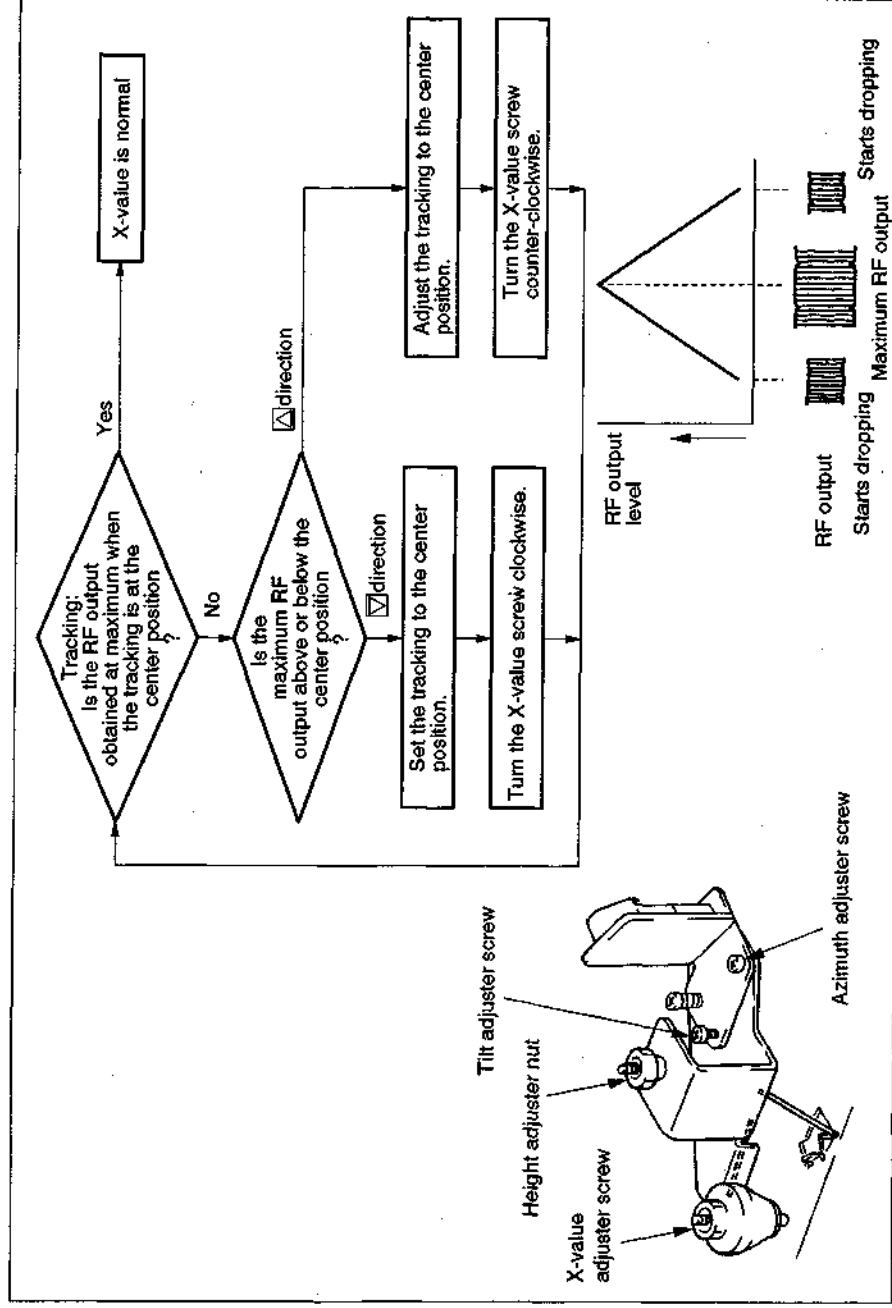


Fig. 4-7

• **Adjustment by alignment tape**

Adjust the X-value adjuster screw so that maximum RF output is obtained and also that the RF output drops to the same position on pressing the respective ∇ and Δ buttons while the tracking is set at the center position.

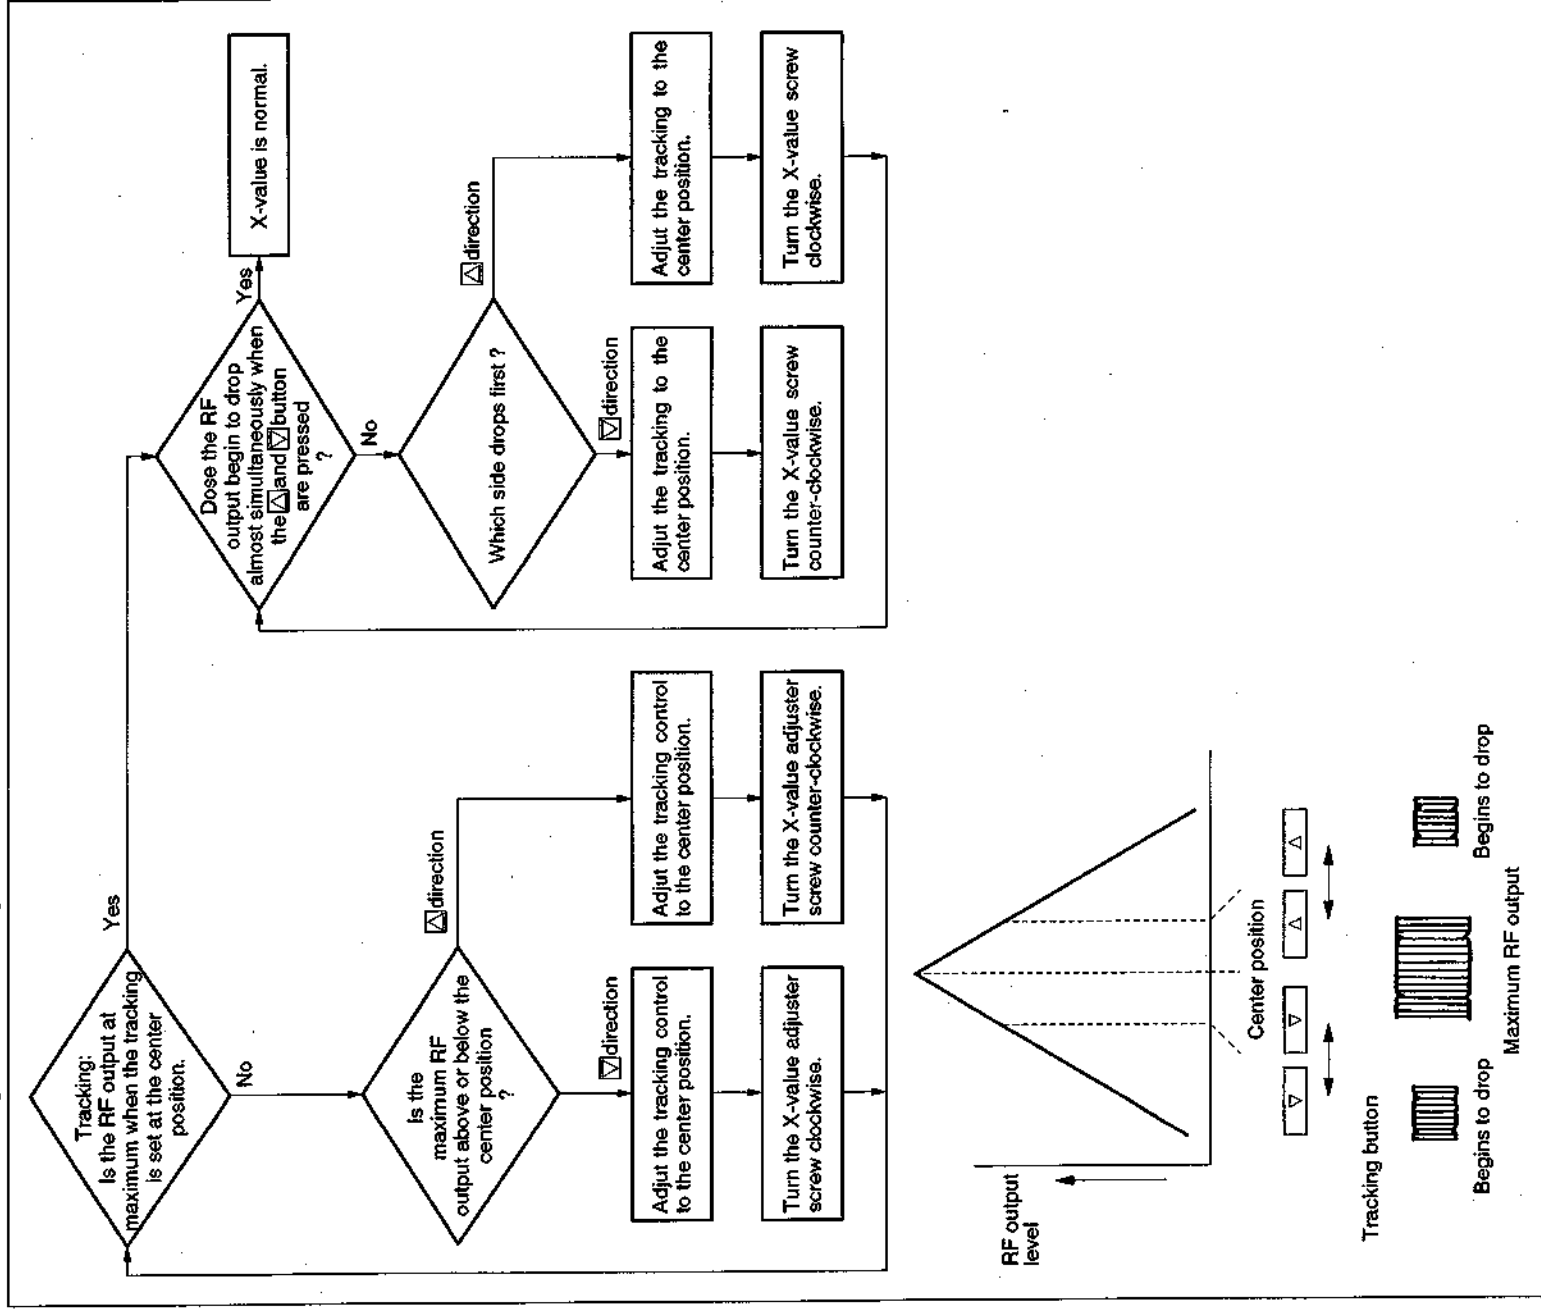


Fig. 4-8


4-1-7. ADJUSTMENTS AFTER REPLACING THE DRUM (VIDEO HEAD)

Purpose: Co-relative height, X-value and other factors of the drum will deviate from those of the guide roller. If the drum is replaced properly, these deviations are extremely small.

Precaution: Turn off the auto tracking and set the manual tracking mode.


Mode	Playback
Signal	Alignment tape, blank tape
Measuring instrument	Oscilloscope
Measuring point	CH-1: Connector PB RF pin for RF PC board check. CH-2: Connector RF SW P pin for RF PC board check.
Adjustment locations	Guide roller (refer to 4-1-2, 4-1-3.) Switching position, Tracking preset, SP delay mono-multi (Refer to the Service Manual), X-value. (refer to 4-1-6.)

[Adjustment Method]

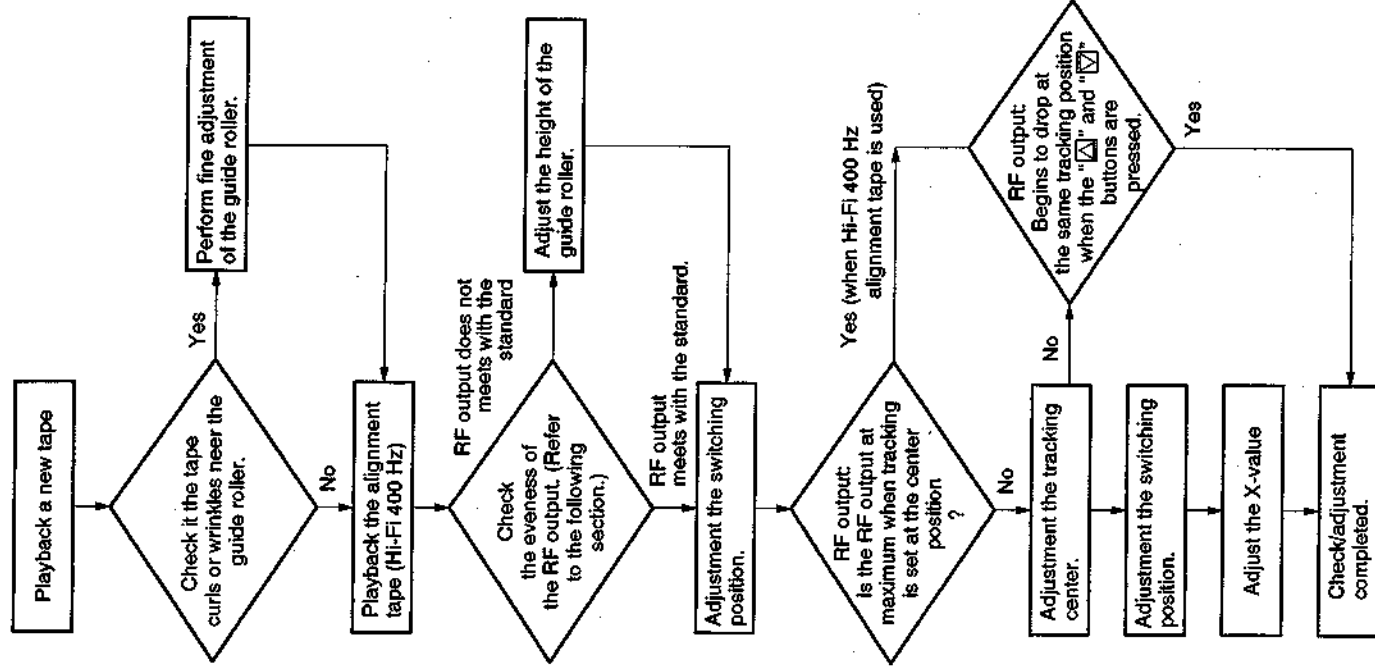


[Checking the evenness and fluctuation of the RF output]


- 1) Set the RF output to the maximum level using the tracking buttons.

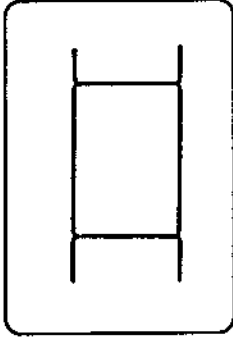

- 2) Perform fine adjustment of the voltage level range of the oscilloscope, then adjust the RF output deviation to within 4 gradations.

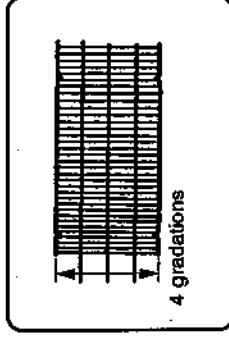

- 3) Press the tracking buttons and adjust the maximum amplitude of the RF output to within 3 gradations.
- 4) At this time, check if the minimum amplitude is more than 2 gradations.

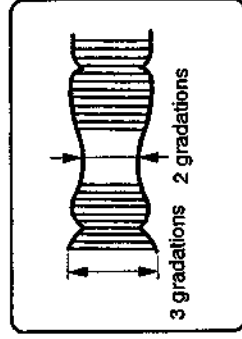

- 5) Check that the RF output fluctuation between minimum and maximum levels is within 13%.

4-1-8. CHECKING THE TENSION AND TORQUE

Purpose: To check that the tension, torque and compression force of the tape take-up section and mobile sections to ensure smooth tape run and achieve standard VTR performance.

If the tape transport is not smooth or problems occur in relation to the tape transport speed, perform the following check.

Mode	Each operation mode without loading a cassette tape. (Refer to section 1-3.)
Measuring instrument	Torque gauge, Torque gauge adaptor

Item	VTR operation mode	Reel to be measured	Measurement value
Main brake torque	Stop	Supply and take-up reels	170 g*cm or more
Review torque	Review	Supply reel	180 ± 30 g*cm (using the torque cassette)
Take-up torque	Playback	Take-up reel	95 ± 25 g*cm (using the torque cassette)
Back tension torque	Playback	Take-up reel	33 to 44 g*cm (using the torque cassette)

[Check Method]

Measure the torque using the torque gauge and torque gauge adaptor with the torque gauge fixed.

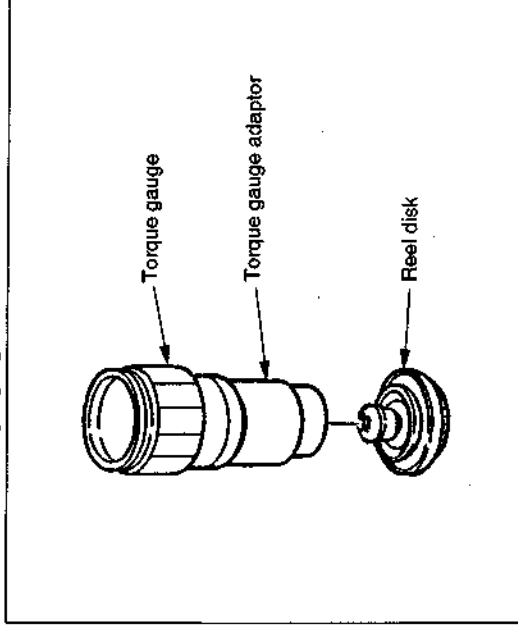


Fig. 4-9

VHS MECHANICAL ADJUSTMENT MANUAL IV

SONY® SERVICE MANUAL

H MECHANISM


SUPPLEMENT-1

1. How to Use the Mode Selector II for Adjusting H Type Mechanism Assembly.
2. Adjusting Mechanism Using New Alignment Tape (KRV-52NE For NTSC).

File this supplement with the VHS mechanical adjustment IV.

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
1.	HOW TO USE THE MODE SELECTOR II FOR ADJUSTING H TYPE MECHANISM ASSEMBLY	2
1-1.	Outline	2
1-2.	Preparation	2
1-3.	Connection	2
1-4.	Operation	2
1-5.	Precautions	2
2.	ADJUSTING THE MECHANISM USING NEW ALIGNMENT TAPE (KRV-52NE for NTSC)	4
2-1.	Adjustment Using Alignment Tape (KRV-52NE for NTSC having no version No.)	4
2-1-1.	X-Value Adjustment (Using the tape having no version No.)	4
2-2.	Adjustment Using Alignment Tape (KRV-52NE for NTSC having the version No.)	6
2-2-1.	X-Value Adjustment (Using the tape having the version No.)	6
2-3.	Adjusting the Mechanism Using Alignment Tape (KRV-52NE for NTSC)	10
2-3-1.	Height Adjustment of Guide Rollers No. 3 and No. 6	10
2-3-2.	ACE Head Assembly Adjustment (Rough Adjustment)	11
2-3-3.	ACE Head Assembly Adjustment (Precision Adjustment)	11
2-3-4.	Adjustments After Replacing the Drum (Video Head)	12



1. HOW TO USE THE MODE SELECTOR II FOR ADJUSTING H TYPE MECHANISM ASSEMBLY

1-1. OUTLINE

To activate the VHS system H type mechanism assembly using mode selector II (J-6082-282-A), use connector conversion jig (J-6090-052-A). By using the connector conversion jig, the following operations are possible.

- Loading and unloading action by the loading motor
- Reading of the current setting of the mode switch
- Normal and reverse rotation of the capstan motor

1-2. PREPARATION


1-2-1. ADDITION OF POWER SUPPLY CABLE

(Already added Mode Selector II also available)

In order to drive the capstan motor, the power +5 V and +12 V are supplied from the Mode Selector II. Disassemble the D-SUB connector of the Mode Selector cable, then solder the following three places.

Supplied 3-pin cable	DSUB connector of the mode selector II	Voltage
Pin 1 (Red index)	Pin 20	+12 V
Pin 2	Pin 25	GND
Pin 3	Pin 24	+5 V

- Connector pin number assignment of the DSUB connector (From the soldering side)



- When connections are made, check that +5 V and +12 V are available at the 3-pin cable connector.

1-2-2. CHECKING THE SOFTWARE VERSION

Turn on the power of the mode selector II.

If the reading for the software version on the mode selector II is not 1.10 or higher, replace the New ROM (J-6082-314-A).

1-3. CONNECTION

1-3-1. CONNECTION BETWEEN THE CONNECTOR CONVERSION JIG AND THE MODE SELECTOR II (See Fig. 1-1)

Insert the connectors of the two 6-pin cables (one is white and the other is black) and the 3-pin cable from the mode selector II to the corresponding connectors on the connector conversion jig (J-6090-052-A).

1-3-2. CONNECTION BETWEEN THE CONNECTOR CONVERSION JIG AND THE H TYPE MECHANISM ASSEMBLY

With the power of the mode selector II turned off, insert the following three connectors to the corresponding connectors on the H type mechanism assembly.

- 3-pin connector for the loading motor
 - 5-pin connector for the mode switch
 - 8-pin connector for the capstan motor
- Set the speed control for the minimum setting (fully counter-clockwise).

1-4. OPERATION

1-4-1. OPERATION OF THE LOADING MOTOR ON THE H TYPE MECHANISM ASSEMBLY

- (1) Select the H type mechanism assembly setting on the mode selector II.
- (2) After this, procedures are the same as those for the previous model types.
For the operating method, see pages 3 to 5 of "8 mm Video Mechanism Manual VI (TK Mechanism) Supplement-1".
For the loading method, see page 3 of "VHS Mechanical Adjustment Manual IV (H Mechanism)".

1-4-2. OPERATION OF THE CAPSTAN MOTOR ON THE H TYPE MECHANISM ASSEMBLY

- (1) For the loading motor operation under Section 1-4-1, change the mode setting to the FF/REW mode with the mode switch.
- (2) Turn the speed control gradually in clockwise direction, and the capstan motor starts rotating. To turn the capstan motor in desired rotating direction, change the FWD/RVS setting of the rotating direction switch.

1-5. PRECAUTIONS

- Turn the speed control only when necessary. Otherwise, hold the speed control turned at fully counterclockwise direction. If the power of the mode selector II is turned on with the speed control turned in clockwise direction, +12V power fails and the power of the mode selector II cannot be turned on.
- Although the connector conversion jig (J-6090-052-A) has rubber feet, do not make a short circuit on the bottom surface of the connector conversion jig via foreign conductive materials.

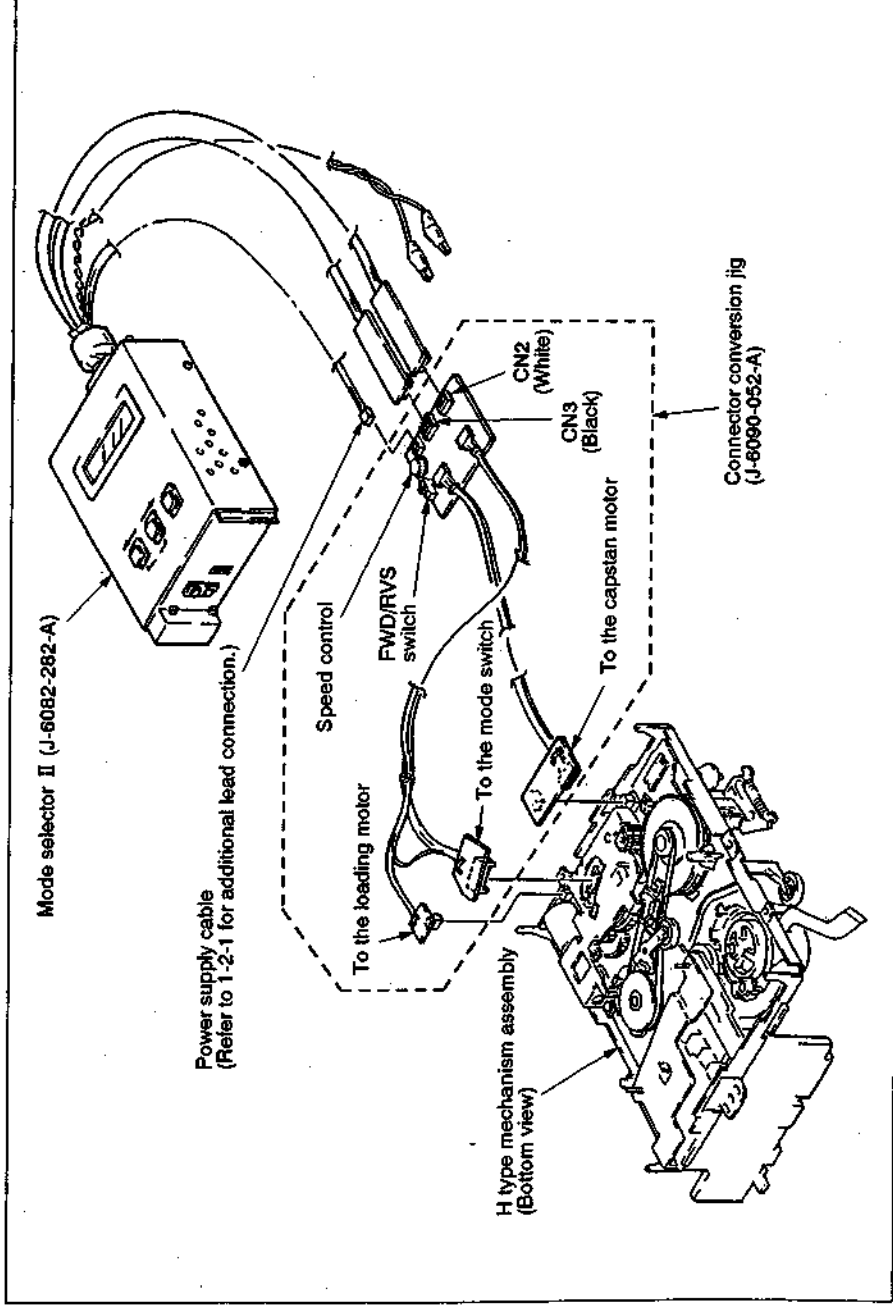


Fig. 1-1


2. ADJUSTING THE MECHANISM USING NEW ALIGNMENT TAPE (KRV-52NE for NTSC)

The conventional alignment tape (For NTSC) is now replaced with alignment tape KRV-52NE, and the following describes how to align the mechanism using the KRV-52NE. For details on the use of KRV-51N2 for each model, refer to the service manuals which will be issued in the future.

Name	Parts No.	Remarks
Alignment tape KRV-52NE for NTSC	8-192-605-41	For tape path, audio azimuth, and X-value adjustments
Alignment tape KRV-51N2 for NTSC	8-192-605-32	For electrical adjustments (RF, AF, and switching position) and operation check

Note: The KRV-52NE has or does not have Ver No. depending on new or old type as shown below. (New one has Ver No.)

Note that an adjusting method of X-value is different.

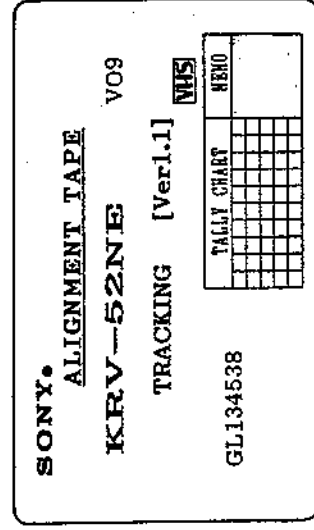

Contents:

KRV-52NE (NTSC)

Time	Video	Audio
20 min.	Recording only at 1 MHz, A-ch. EP mode RF skipping once per 5 frames	5 kHz full tracks

KRV-51N2 (NTSC)

Class	Mode	Time	Video	Audio (HiFi/Normal)
1	SP	7 min.	Color bar	400 Hz
2	SP	3 min.	Mono. scope	400 Hz
3	EP	7 min.	Color bar	400 Hz
4	EP	3 min.	Mono. scope	400 Hz



- ### 2-1. ADJUSTMENT USING ALIGNMENT TAPE (KRV-52NE for NTSC having no version No.)
- #### 2-1-1. X-VALUE ADJUSTMENT (Using the tape having no version No.)

Purpose: To obtain compatibility with other VCRs.

Precaution: Before starting to adjust X-value, set the tracking control at the center position. To set the tracking

control at the center position for the VCRs equipped with the and tracking control keys, press both the and tracking control keys at the same time. For the VCRs not equipped with the tracking control keys, deactivate the automatic tracking control by pressing the tracking key on the remote control unit during threading operation (after a tape is inserted but before the VCR starts playing back the tape).

Mode	Playback
Signal	Alignment tape KRV-52NE (For NTSC having no version No.)
Measuring instrument	Oscilloscope TIM/DIV: 2ms Trigger source: CH2 Trigger slope: +
Measuring point	CH-1: Connector PB RF pin for RF PC board check CH-2: Connector RF SWP pin for RF PC board check
Adjustment locations	X-value adjuster screw

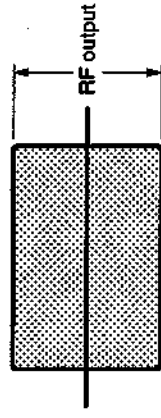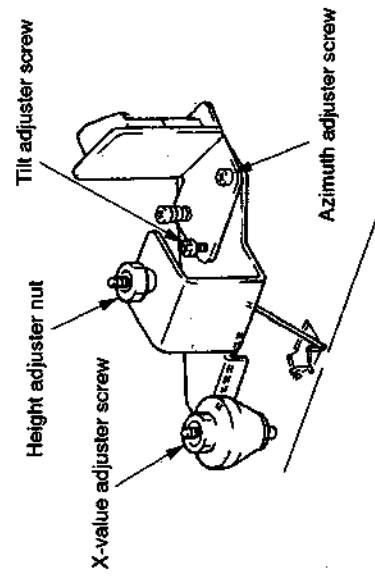


RF output shall be maximum at the center position of the tracking control.

[Adjustment Method]

Set the tracking control at the center position. For the VCRs equipped with narrow gap video heads, set the X-value adjustment screw where a maximum RF output is obtained. For the VCRs equipped with wide gap video heads, set the X-value adjustment screw both where a maximum RF output is obtained and where the RF output decreases immediately when the tracking control key is pressed.

X-VALUE ADJUSTMENT (Using the tape having no version No.)

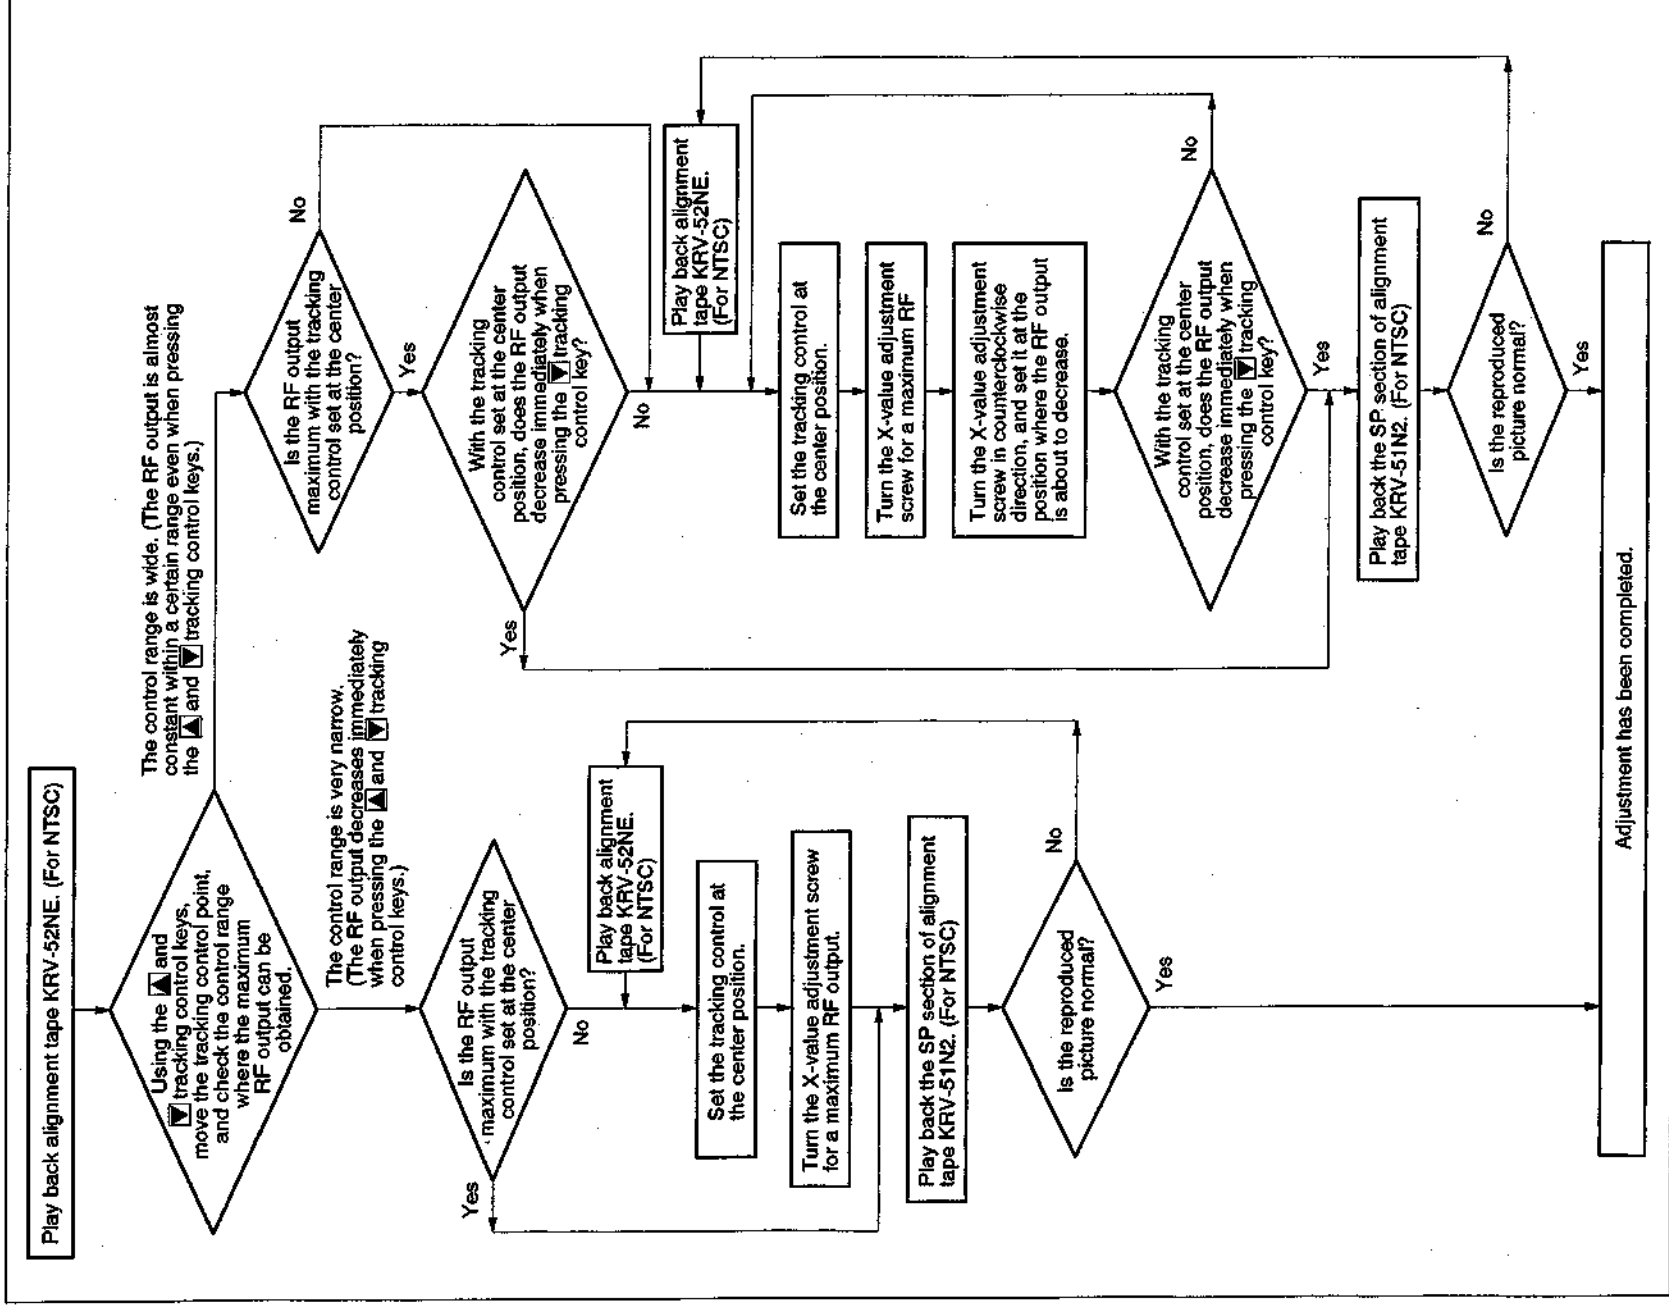



When adjustment is complete, adjust the height of No. 3 and No. 6 guide rollers on page 10.

2-2. ADJUSTMENT USING ALIGNMENT TAPE
(KRV-52NE for NTSC having the version No.)
2-2-1. X-VALUE ADJUSTMENT (Using the tape having the version No.)

Purpose: To obtain compatibility with other VCRs.

Precaution: Before starting to adjust X-value, set the tracking control at the center position. To set the tracking control at the center position for the VCRs equipped with the ▲ and ▼ tracking control keys, press both the ▲ and ▼ tracking control keys at the same time. For the VCRs not equipped with the tracking control keys, deactivate the automatic tracking control by pressing the tracking [AUTO/MANUAL] key on the remote control unit during threading operation (after a tape is inserted but before the VCR starts playing back the tape).

Mode	Playback
Signal	Alignment tape KRV-52NE (For NTSC having the version No.)
Measuring instrument	Oscilloscope TIM/DIV: 2ms Trigger source: CH2 Trigger slope: +
Measuring point	CH-1: Connector PB RF pin for RF PC board check CH-2: Connector RF SWP pin for RF PC board check
Adjustment locations	X-value adjuster screw

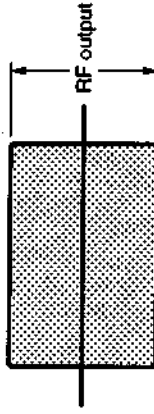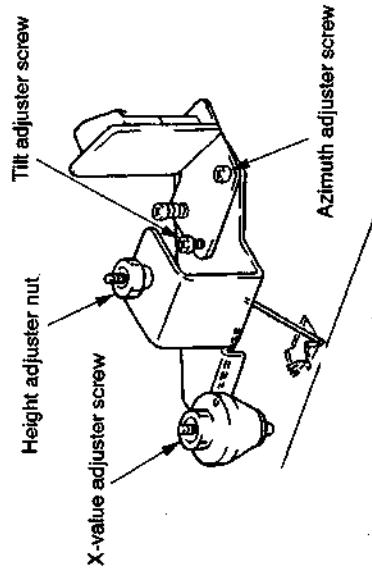


RF output shall be maximum at the center position of the tracking control.


[Adjustment Method]

Set the tracking control at the center position. For the VCRs equipped with narrow gap video heads, set the X-value adjustment screw where a maximum RF output is obtained. For the VCRs equipped with wide gap video heads, set the X-value adjustment screw both where a maximum RF output is obtained and where the RF output decreases immediately when the tracking control key is pressed.


1. Adjusting X-value (Using the tape having the version No.)

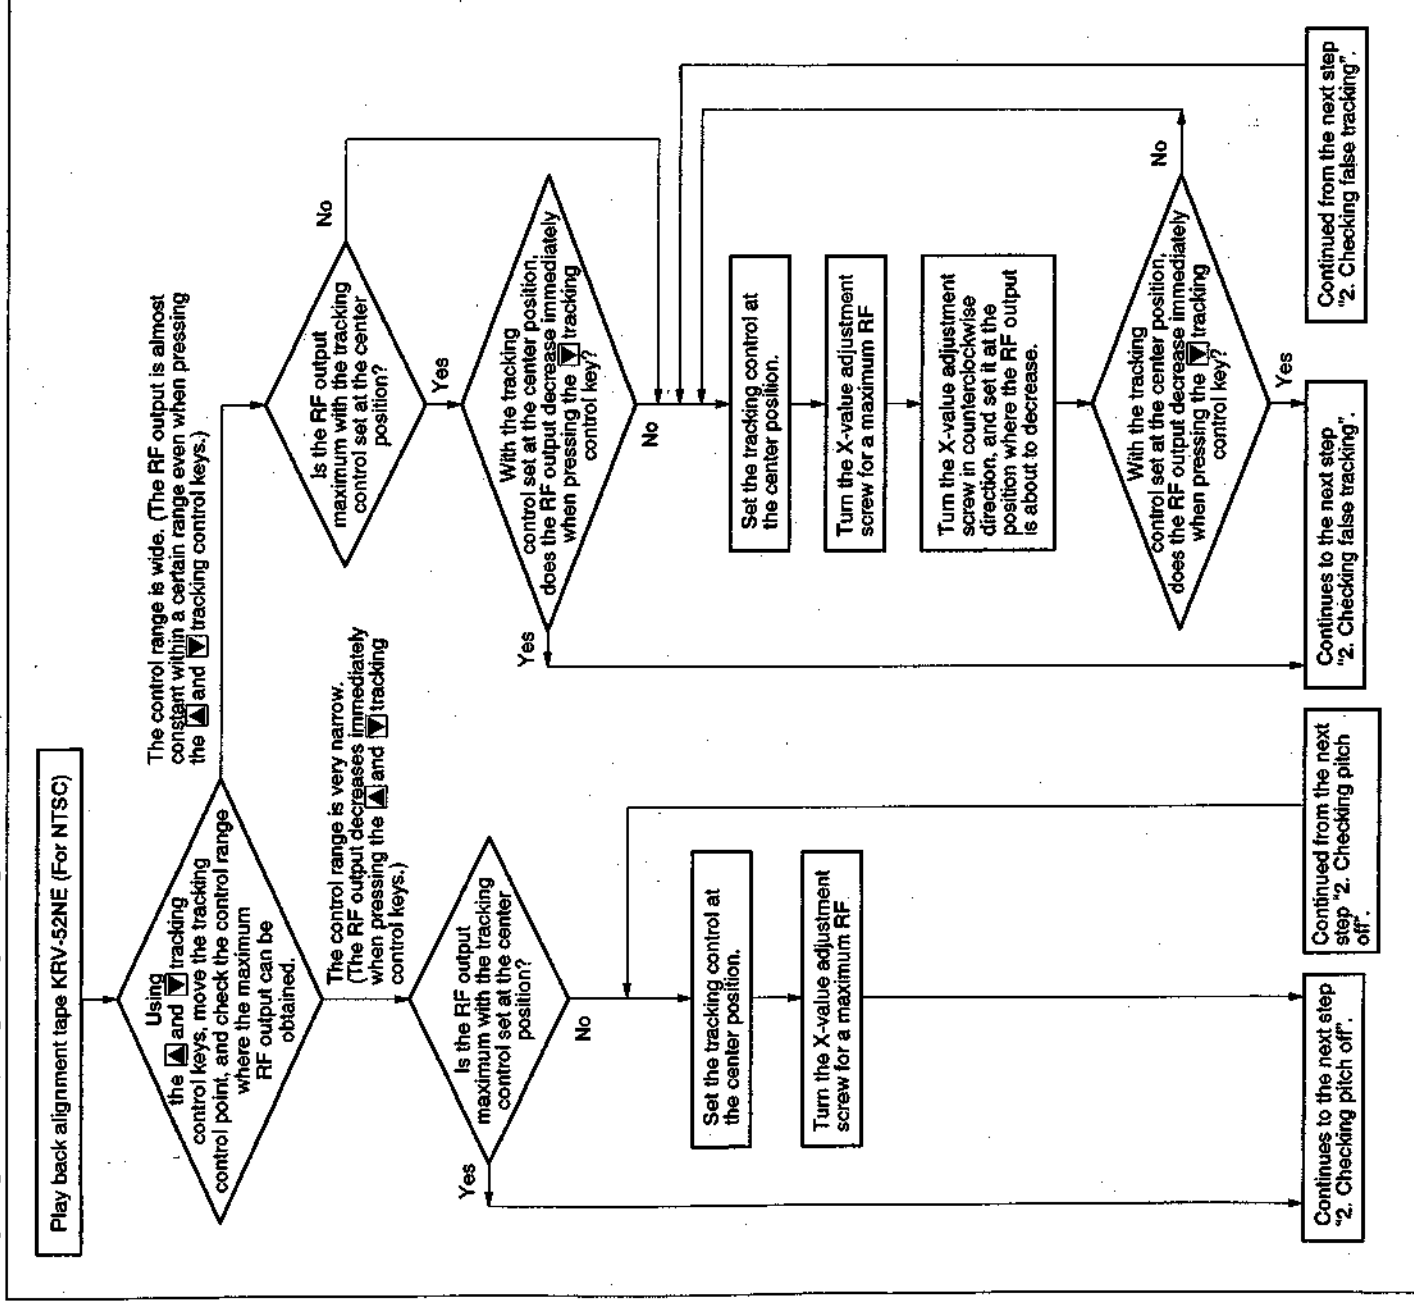

2. Checking false tracking (Using the tape having the version No.)

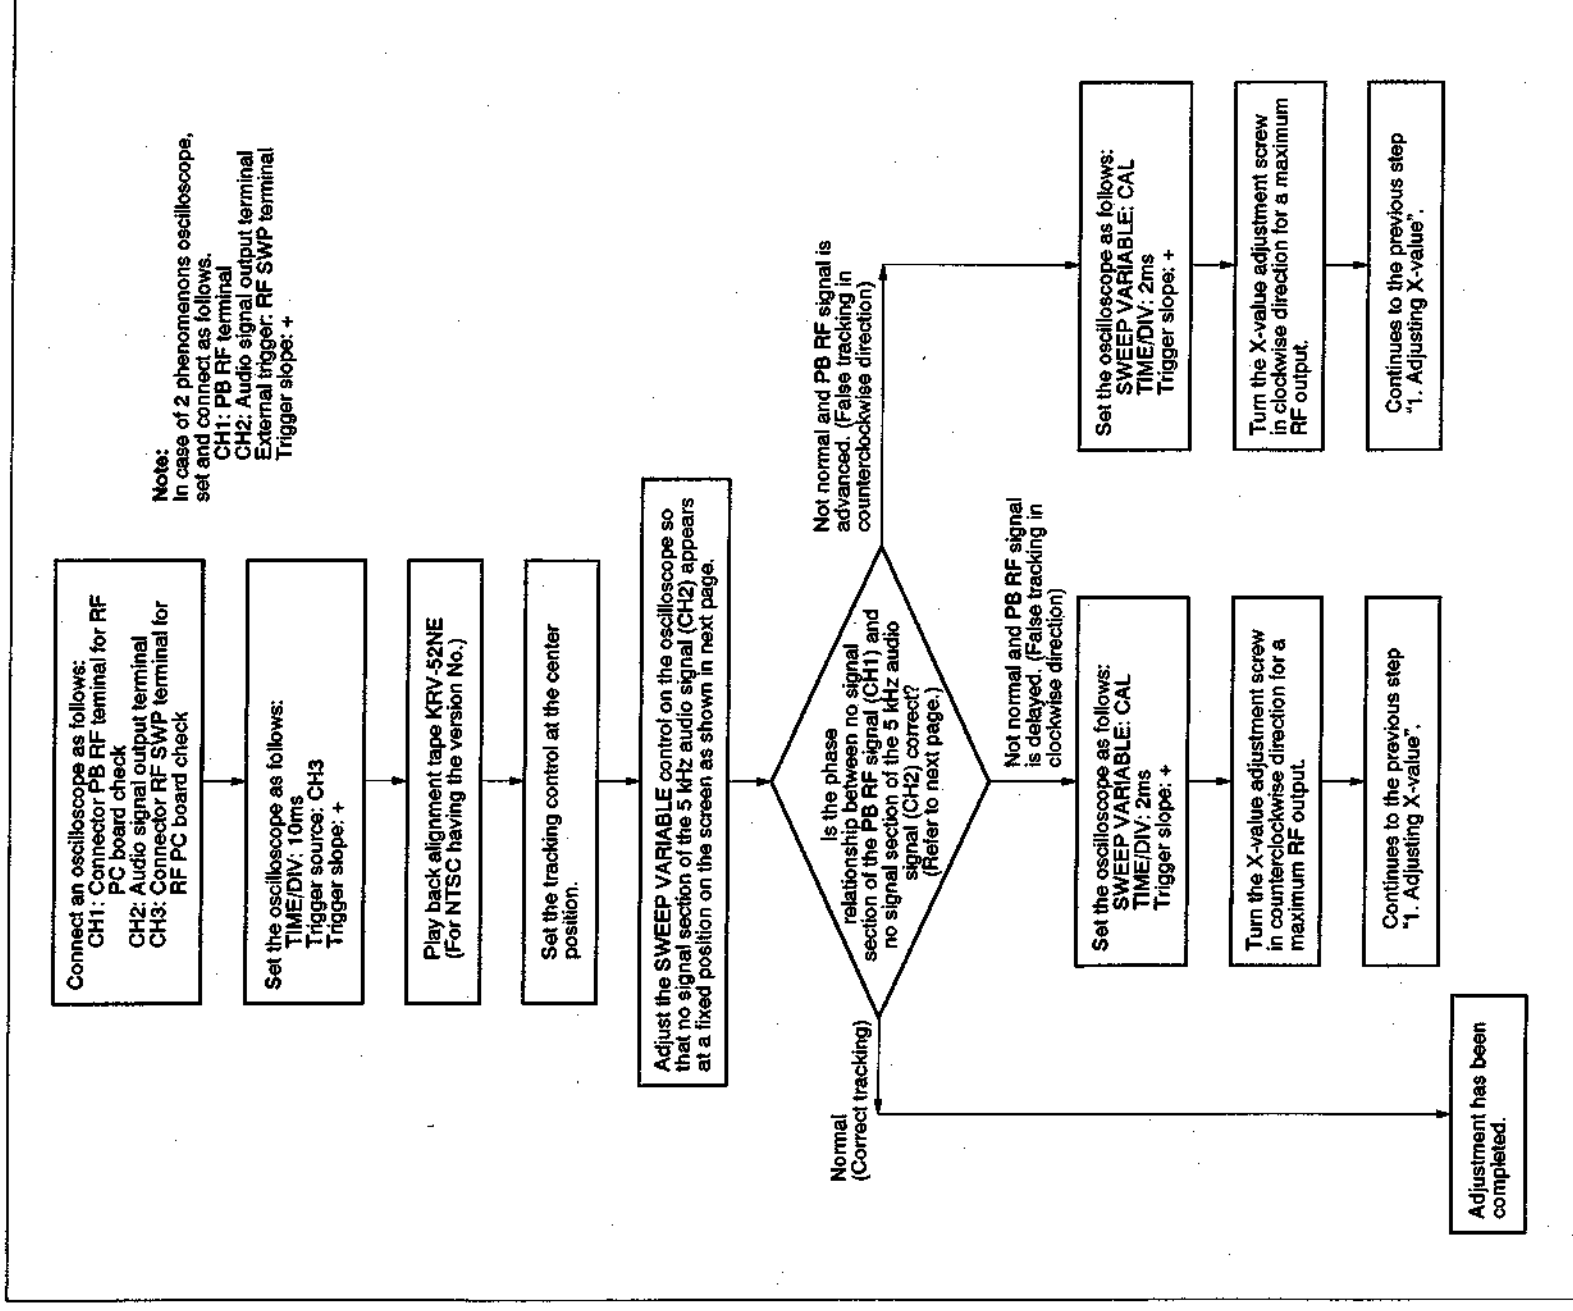

Using the tape having the version No.

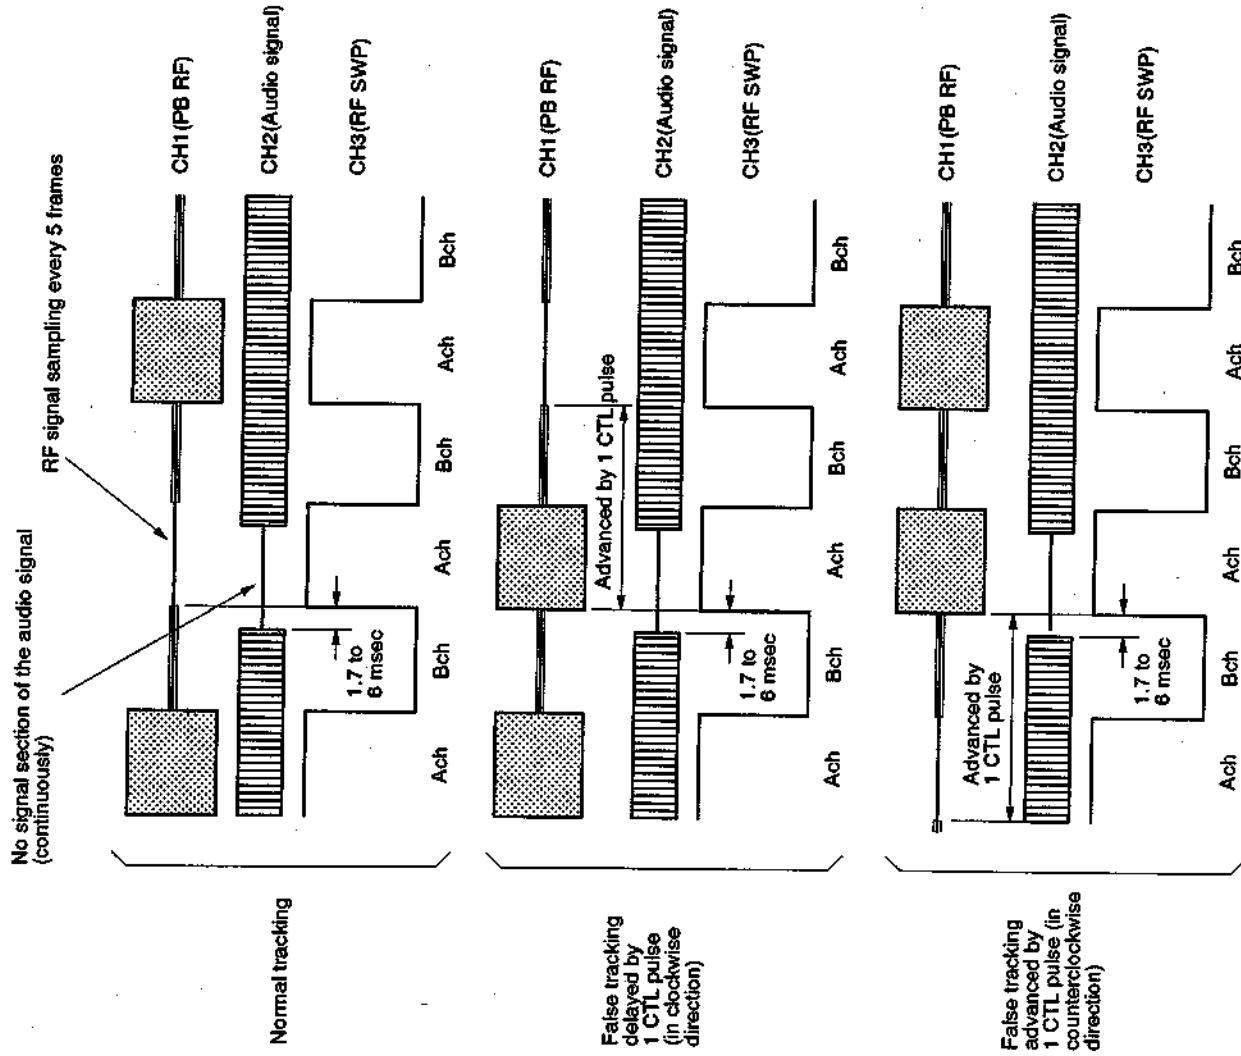

2-3. ADJUSTING THE MECHANISM USING ALIGNMENT TAPE (KRV-52NE for NTSC)
2-3-1. HEIGHT ADJUSTMENT OF GUIDE ROLLERS NO. 3 AND NO. 6


Mode	Playback
Signal	Alignment tape KRV-52NE (For NTSC)
Measuring instrument	Oscilloscope TIM/DIV: 2ms Trigger source: CH2 Trigger slope: +
Measuring point	CH-1: Connector PB RF pin for RF PC board check CH-2: Connector RF SWP pin for RF PC board check
Adjustment locations	Height adjustment screw for No.3 tape guide roller Height adjustment screw for No.6 tape guide roller

[Adjustment Method]


The following adjustment shall be carried out after completed Section 2-1-1 "X-value adjustment and check".

- 1) Deactivate the automatic tracking control, and set the tracking control at the center position. To set the tracking control at the center position for the VCRs equipped with the and tracking control keys, press both the and tracking control keys at the same time. For the VCRs not equipped with the tracking control keys, deactivate the automatic tracking control by pressing the tracking key on the remote control unit during threading operation (after a tape is inserted but before the VCR starts playing back the tape).

- 2) Check if the RF output changes in amplitude by pressing the tracking control key. The RF output should change periodically (changes from a minimum amplitude to a maximum amplitude, and to the minimum amplitude again).

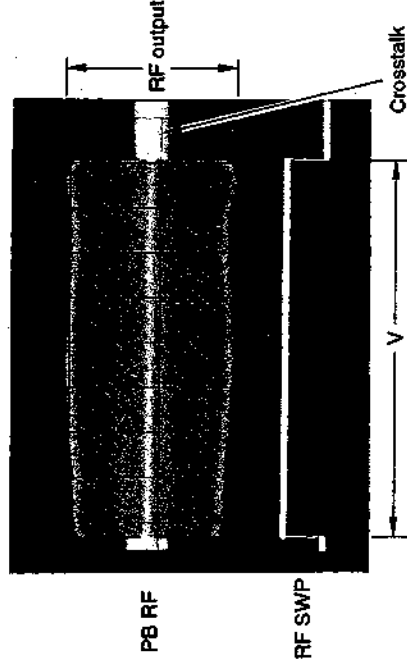

- 3) Turn the height adjustment screws of tape guide rollers No.3 and No.6 so that the RF output envelope becomes as flat as possible.
- 4) Press the tracking control key, and check that both the beginning and end of the RF output change together the same in amplitude.
- 5) Press the tracking control key, and check that both the beginning and end of the RF output change together the same in amplitude.

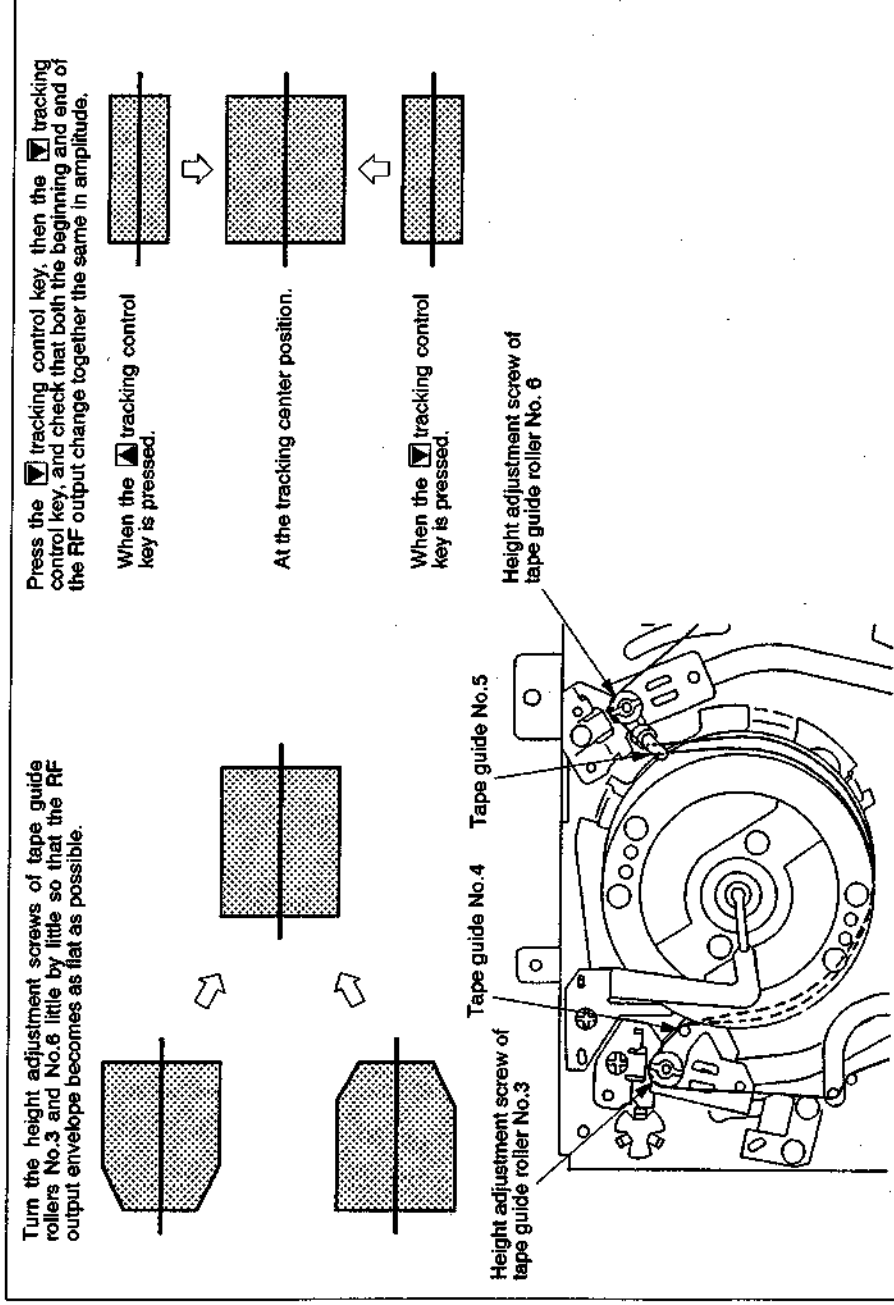

2-3-2. ACE HEAD ASSEMBLY ADJUSTMENT

(ROUGH ADJUSTMENT) (Figs. 2-1 and 2-2)

Purpose: Allows the tape to make even contact with the head for recording and playback of the specified track.

Mode	Playback
Jig	Blank tape
Adjustment locations	Height adjuster nut, Tilt adjuster screw

[Adjustment Method]

- 1) Mount the ACE head assembly. At this time, adjust the height so that the height of guide flange No. 7 matches the level of the lower edge of the control head.
- 2) Remove the adjustment tool and load a new tape, then set the unit for playback.
- 3) Check that the tape does not curl or rise up noticeably near the ACE head.
- 4) If the tape curls up or rises noticeably, readjust the tilt adjuster screw and the height adjuster nut.
(The height of the ACE head should be adjusted so that the lower edge of the tape is approx. 0.1 to 0.15 mm from the control head.)
- 5) Perform precision adjustment.

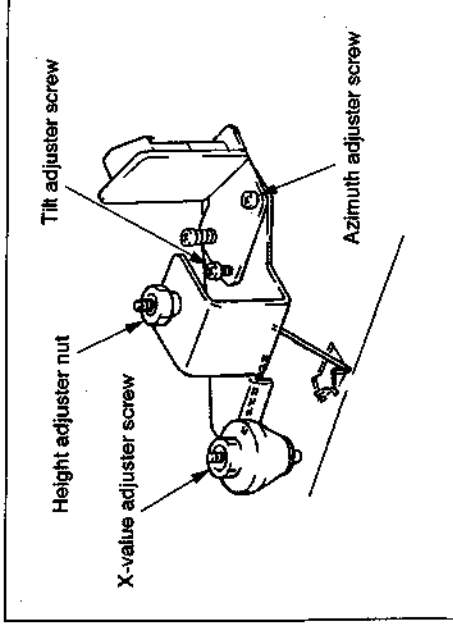


Fig. 2-1

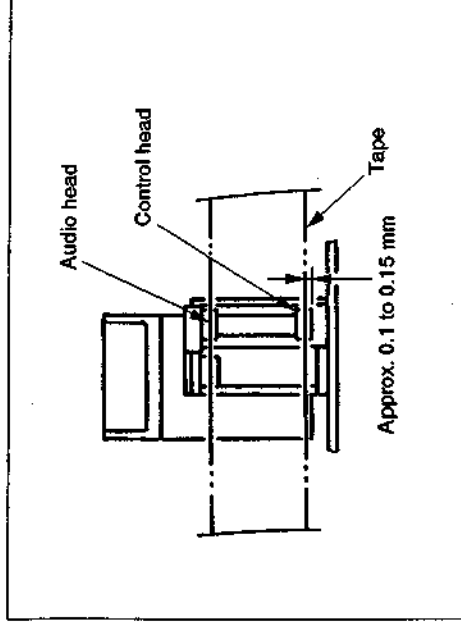


Fig. 2-2

2-3-3. ACE HEAD ASSEMBLY ADJUSTMENT (PRECISION ADJUSTMENT)

Mode	Playback
Signal	Alignment tape (KRV-S2NB 5 kHz) (For NTSC)
Measuring instrument	Oscilloscope
Measuring point	Audio output terminal
Adjustment locations	Azimuth adjuster screw, Height adjuster nut, Tilt adjuster screw

[Adjustment Method]

- 1) Adjust the tilt adjuster screw in the FWD or REV mode so that the lower flange of guide No. 7 does not curl up or rise.
- 2) Alternately adjust the azimuth adjuster screw, the height adjuster nut, and the tilt adjuster screw to maintain even audio output at maximum with minimum deviation.

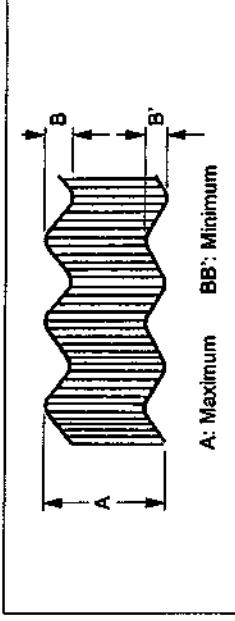


Fig. 2-3

2-3-4. ADJUSTMENTS AFTER REPLACING THE DRUM (VIDEO HEAD)


Purpose: Co-relative height, X-value and other factors of the drum will deviate from those of the guide roller. If the drum is replaced properly, these deviations are extremely small.

Note 1: Deactivate the automatic tracking control for setting the mechanism in manual tracking control mode.

Note 2: To set the tracking control at the center position, deactivate the automatic tracking control by pressing the tracking **[AUTO/MANUAL]** key on the remote control unit during threading operation (after a tape is inserted but before the VCR starts playing back the tape).


Mode	Playback
Signal	Alignment tape KRV-52NE (For NTSC), blank tape
Measuring instrument	Oscilloscope
Measuring point	CH-1: Connector PB RF pin for RF PC board check. CH-2: Connector RF SWP pin for RF PC board check.
Adjustment locations	Guide roller (Refer to 2-3-1.) Switching position (Refer to the Service Manual) X-value (Refer to 2-1-1, 2-1-2.)

[Adjustment Method]

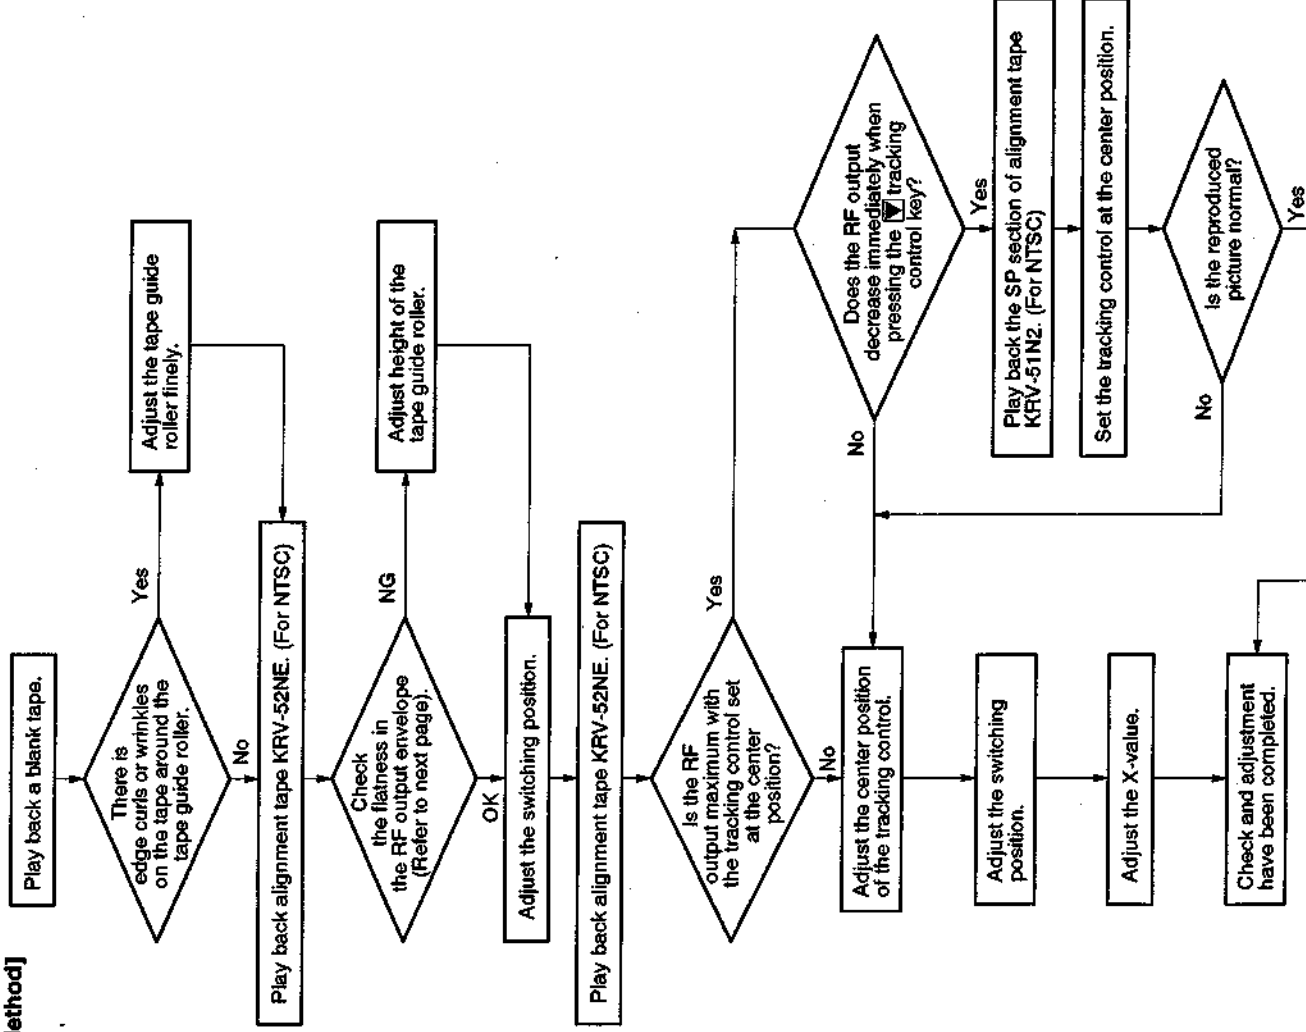


[Checking the evenness and fluctuation of the RF output]


- 1) Set the RF output to the maximum level using the tracking buttons.

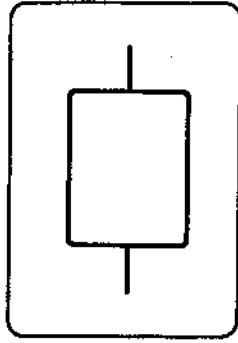

- 2) Perform fine adjustment of the voltage level range of the oscilloscope, then adjust the RF output deviation to within 4 gradations.

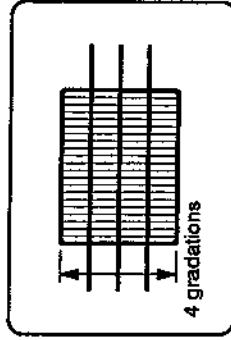

- 3) Press the tracking buttons and adjust the maximum amplitude of the RF output to within 3 gradations.
- 4) At this time, check if the minimum amplitude is more than 2 gradations.

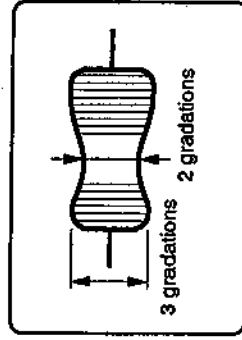

- 5) Check that the RF output fluctuation between minimum and maximum levels is within 13%.

VHS MECHANICAL ADJUSTMENT MANUAL IV

9-973-623-82

Sony Corporation
Consumer A&V Products Company
Home A&V Products Div.

Published by Personal A&V Products Div.
Quality Engineering Dept.

VHS MECHANICAL ADJUSTMENT MANUAL IV

SONY® SERVICE MANUAL

H MECHANISM

SUPPLEMENT-2

File this supplement with the VHS mechanical adjustment IV and supplement-1.

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
1.	CORRECTION	1
1-1.	Adjustment Sequence	1
2.	MODIFICATION	2
2-1.	Changing the Recorded Contents of Alignment Tape	2
2-2.	TG2 Roller, FE Head Assembly	2
2-3.	TG3, TG6 Guide Roller Assembly	3
2-4.	TG8 Assembly	4
2-5.	Tension Regulator (TG1) Position Tension Adjustment	5
2-6.	TG8 Guide Roller Height Adjustment	6

1. CORRECTION

In the VHS Mechanism Adjustment Manual IV (Supplement-1), an adjustment sequence was wrong, and it is corrected as follow;

1-1. Adjustment Sequence (VHS Mechanism Adjustment Manual IV (Supplement-1) Page 6 to 11)


(1) Adjustment of No. 3 and No. 6 guide roller height

Delete the "The following adjustment shall be carried out after completed Section 2-1-1 "X-value adjustment and check" under "Adjustment Method" on page 10.

(2) Adjustment of ACE head assembly

Note: In the adjustment of ACE head assembly (coarse adjustment and fine adjustment), if a azimuth, height and tilt were adjusted, again adjust the height of No. 3 and No. 6 guide rollers.

(3) Adjustment of X value



2. MODIFICATION

2-1. CHANGING THE RECORDED CONTENTS OF ALIGNMENT TAPE

KRV-52NE (NTSC) (Ver. 1.2)

Time	Video	Audio
20 min.	Recording only at 1 MHz, A-ch. EP mode RF skipping once per 5 frames	5 kHz → 4 kHz full tracks

2-2. TG2 ROLLER, FE HEAD ASSEMBLY (Refer to VHS Mechanical Adjustment Manual IV page 14)

- The TG2 roller is provided with either of two types, fixed or straight. For the fixed type, section 3-5 is added.

3-5. TG2 ROLLER, FE HEAD ASSEMBLY (Fig. 3-5)

- 1) Remove screw ① to pull out FE head assembly ②.

[Note on Mounting]

- Keep clean the surface contacts tape of TG2 roller.

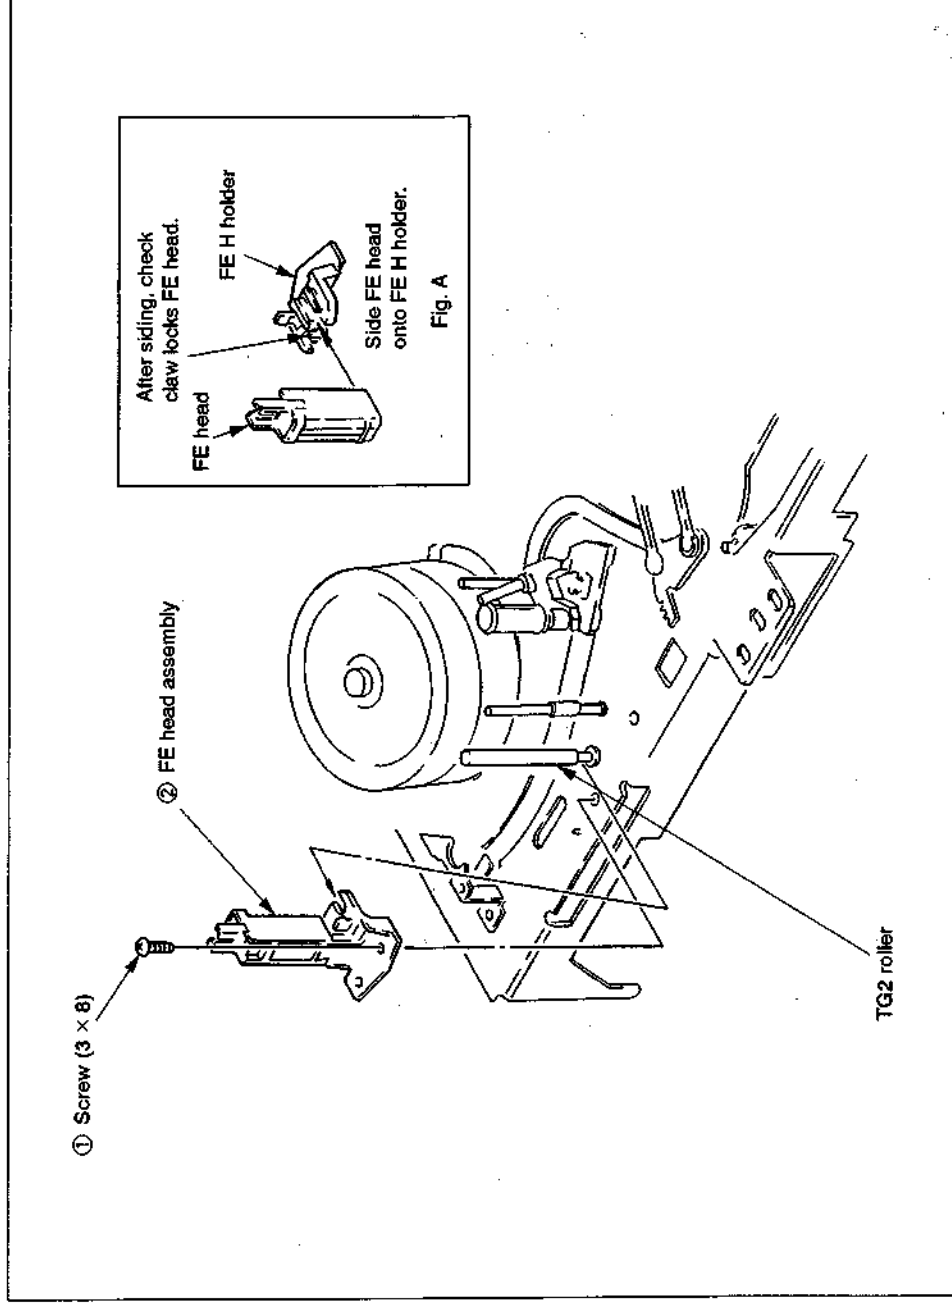


Fig. 3-5

2-3. TG3, TG6 GUIDE ROLLER ASSEMBLIES (Refer to VHS Mechanical Adjustment Manual IV page 17)

- There is another type in TG3 and TG6 guide roller assemblies, which is not attached with a screw (B2X3). For the screw/less type, section 3-8 is added.

3-8. TG3, TG6 GUIDE ROLLER ASSEMBLIES (Fig. 3-8)

- 1) TG3 guide roller assembly ① by turning it in arrow Ⓐ direction.
- 2) Removal the spring ②.
- 3) TG6 guide roller assembly ③ by turning it in arrow Ⓑ direction.
- 4) Removal the spring ④.

[Note on Mounting]

- Keep clean the surface contacts tape of TG3 and TG6 guide roller assemblies ①, ③.

[Adjustment after Mounting]

- 4-1. Tape path adjustment.

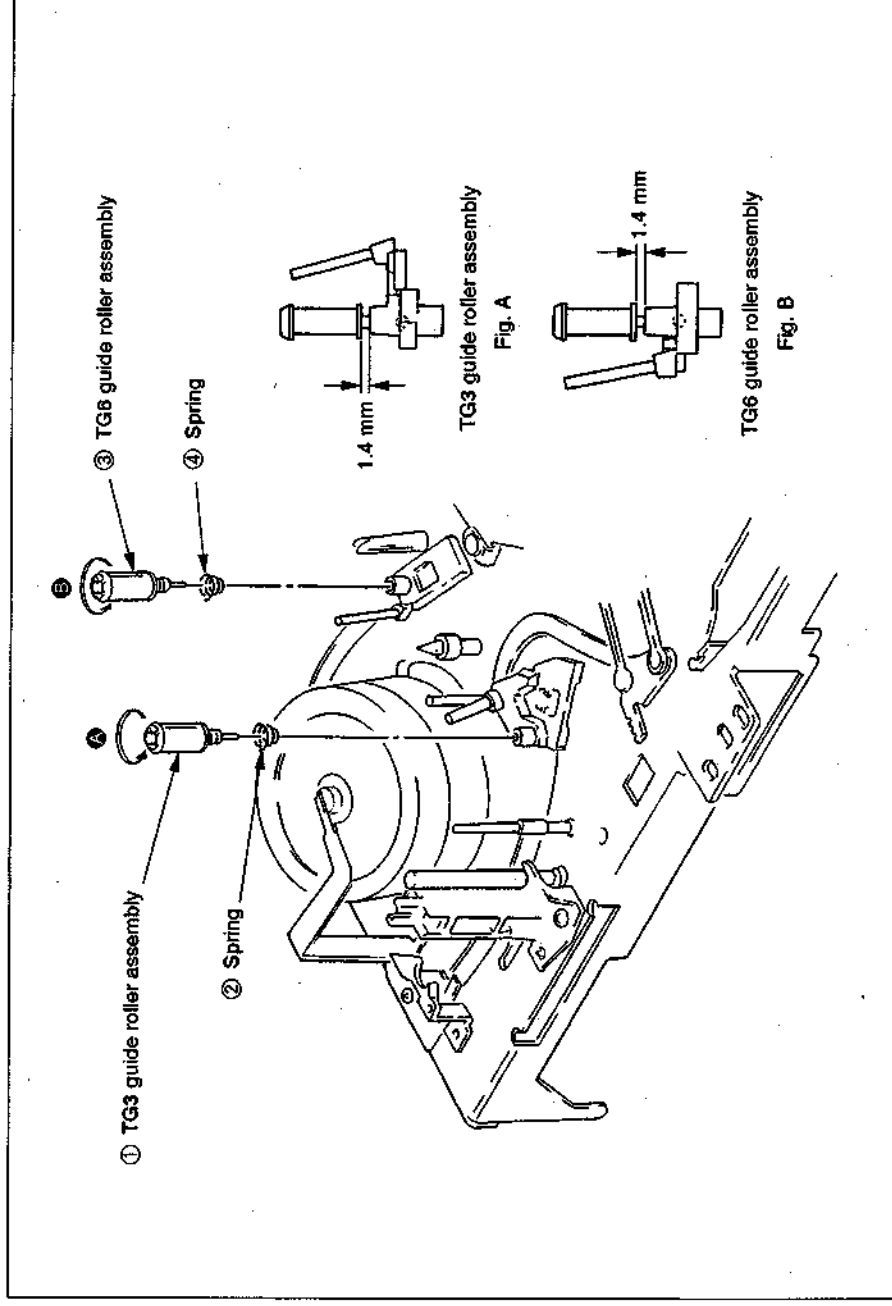



Fig. 3-8

2-4. TG8 ASSEMBLY
(Refer to VHS Mechanical Adjustment
Manual IV page 23)

- As the shape of TG8 assembly was changed, Section 3-13 is changed.

 : Changed portion

3-13. TG8 ASSEMBLY (Fig. 3-15)

- 1) Remove TG7 tape retainer ① to pull out TG8 assembly ②.

[Note on Mounting]

- Apply FLOIL SG-055G (Jig Ref. No. J-12) to ☆ marked portion.
- Keep clean the surface contacts tape of TG8 assembly ②.
- Be careful not to change the shape of TG7 tape retainer ①.
- After attaching the TG7 tape retainer ①, check that side ④ of ① is below side ③ of the stepped-part of the TG7 shaft. (Fig. A)

[Adjustment after Mounting]

- 4-1. Tape path adjustment.

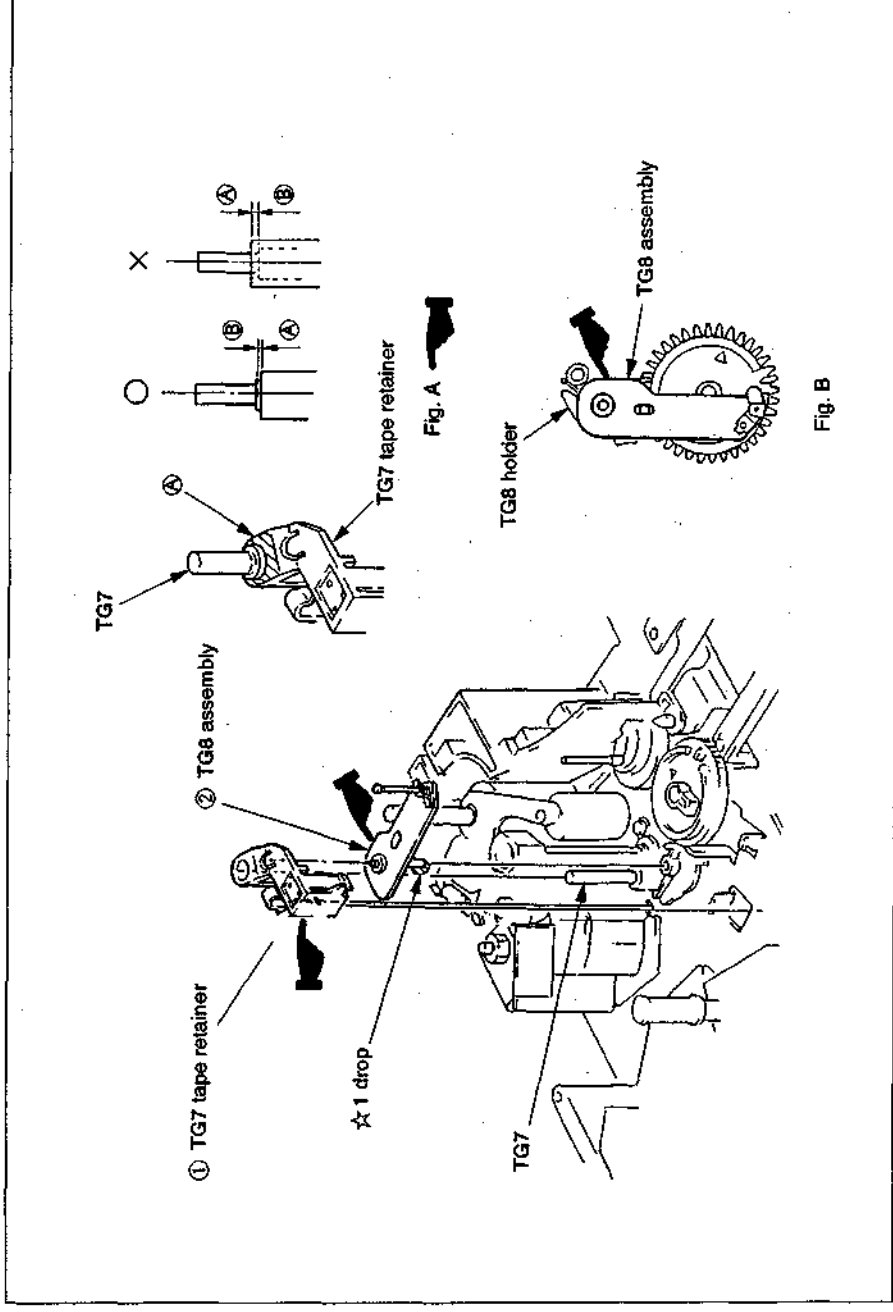


Fig. 3-15

**2-5. TENSION REGULATOR (TG1) POSITION/
TENSION ADJUSTMENT**
(Refer to VHS Mechanical Adjustment
Manual IV page 35)

- As the tension regulator position and tension adjustment were changed, the tension adjustment and Fig. 4-1 are changed.

 : Changed portion

• **Tension adjustment**

Mode	Playback
Measuring instrument/tool	Torque cassette
Adjustment locations	Position for hooking the tension spring
Specified value	$34 \pm 4 \text{ g} \cdot \text{cm}$

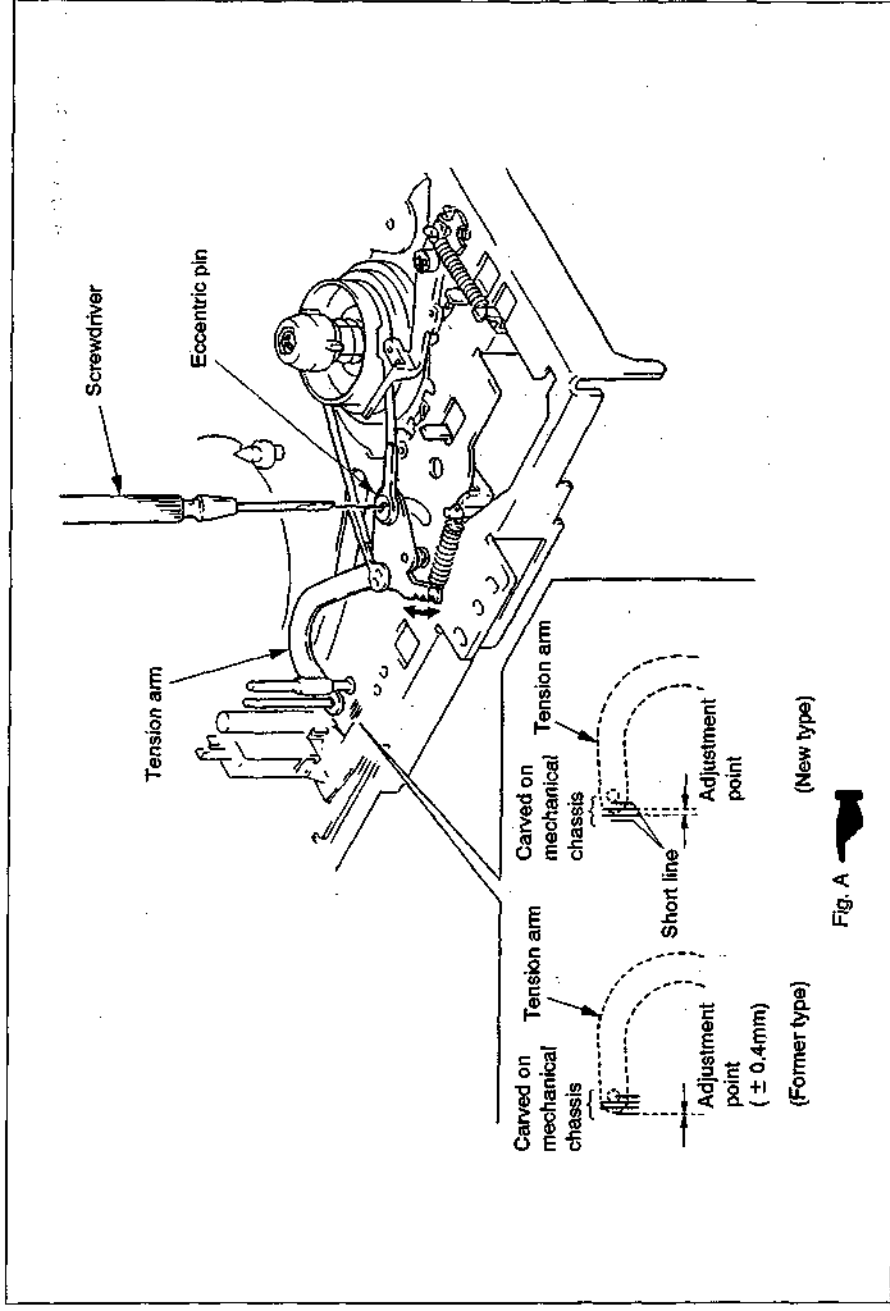


Fig. A  (New type)

Fig. 4-1

VHS MECHANICAL ADJUSTMENT MANUAL IV

2-6. TG8 GUIDE ROLLER HEIGHT ADJUSTMENT (Refer to VHS Mechanical Adjustment Manual IV page 36)

- As the use of TG8 height adjusting screw was cancelled, section 4-1-2 is changed.

4-1-2. TG7 TAPE PATH ADJUSTMENT (Fig. 4-2)

[Adjustment Method]

- 1) Load a tape, and playback the tape in the CUE mode, confirm the distance between lower flange of No. 7 guide roller and lower side of tape (Fig. A).

- 2) Then, feeding the tape in the REV mode, confirm the distance between lower flange of No. 7 guide roller and lower side of tape.
- 3) If the tape height in the REV feed is higher than in the CUE playback (Fig. B), rotate the ACE head flapping adjust screw in the direction **A** so that a difference in tape height between CUE mode and REV mode becomes zero.
- 4) If the tape height in the REV feed is lower than in the CUE playback (Fig. C), rotate the ACE head flapping adjust screw in the direction **B** so that a difference in tape height between CUE mode and REV mode becomes zero.

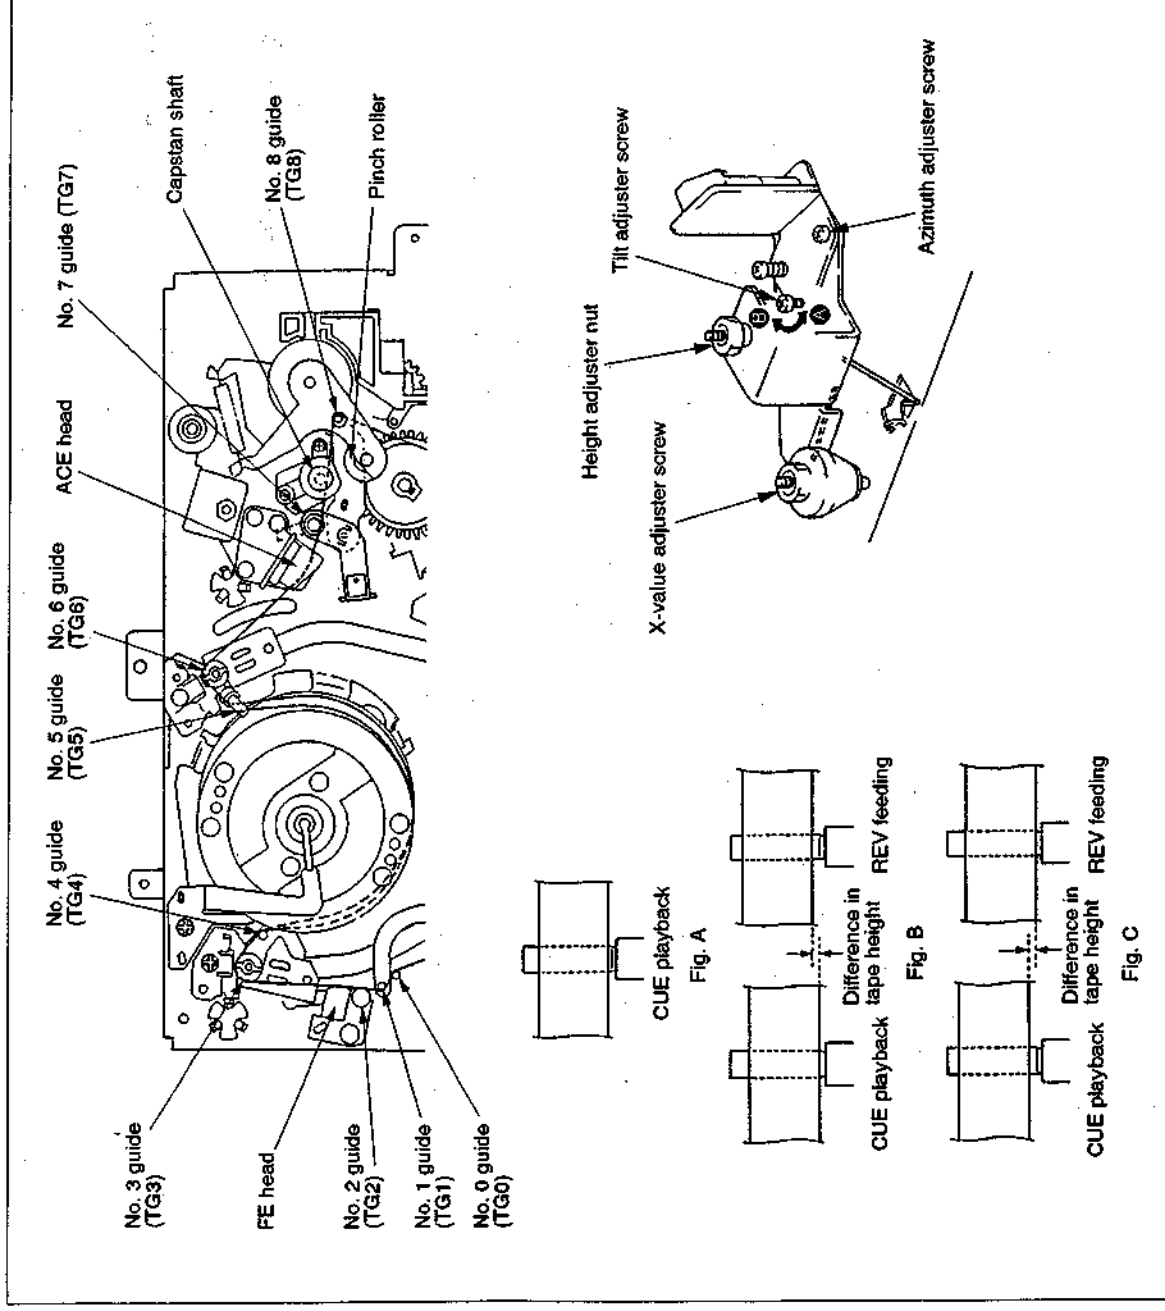


Fig. 4-2

VHS MECHANICAL ADJUSTMENT MANUAL IV

SONY®

H MECHANISM

SERVICE MANUAL

SUPPLEMENT-3

File this supplement with the VHS mechanical adjustment IV and supplement-1, 2.

Subject: Mechanism chassis assembly changed.
PAL alignment tape changed.

(SL-600060)

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
1.	MODIFICATION	2
1-1.	Parts Requiring Cleaning	2
1-2.	Drum Assembly, Drum Base	3
1-3.	TG2 Roller, FE Head Assembly	4
1-4.	TG3, TG6 Guide Roller Assemblies	5
1-5.	Shuttle T Block and Loading Gear T Block Assemblies	6
1-6.	Shuttle S Block and Loading Gear S Block Assemblies	7
2.	ADJUSTING THE MECHANISM USING NEW ALIGNMENT TAPE (KRV-52PL for PAL)	8
2-1.	Height Adjustment of Guide Rollers No. 3 and No. 6	8
2-2.	ACE Head Assembly Adjustment (Rough Adjustment)	9
2-3.	ACE Head Assembly Adjustment (Precision Adjustment)	9
2-4.	X-Value Adjustment	10
2-5.	Adjustments After Replacing the Drum (Video Head)	14

1. MODIFICATION

1-1. PARTS REQUIRING CLEANING (Refer to VHS Mechanical Adjustment Manual IV page 7)

- Parts requiring a cleaning were changed in shape, and therefore, Fig. 2-1 for new type is added.

 : Modified portion

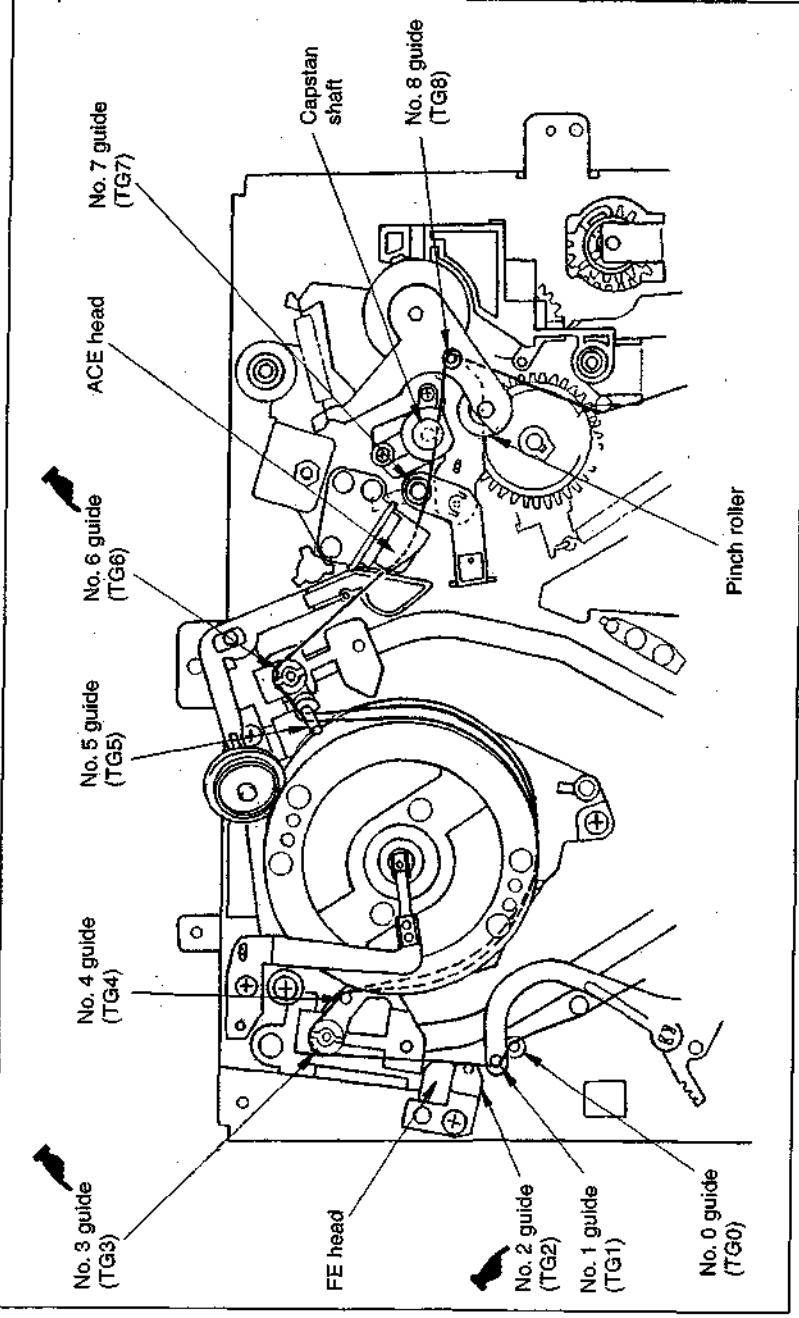


Fig. 2-1 Parts Requiring Cleaning

1-2. DRUM ASSEMBLY, DRUM BASE (Refer to VHS Mechanical Adjustment Manual IV page 11)

- The ground shaft assembly was changed and the drum base was added, and therefore Section 3-2 for new type is added.

3-2. DRUM ASSEMBLY, DRUM BASE (Fig. 3-2)

- 1) Remove screw ①.
- 2) Remove ground shaft assembly ② not to touch its tip with bare hand or tools.
- 3) Remove screws ③ to remove drum assembly ④.
- 4) Remove screws ⑤ to remove drum base ⑥.

[Note on Mounting]

- Don't touch head chips and ground shaft assembly ④ with bare hand or tools.
- Keep clean the surface contacts tape of drum assembly ④.

[Adjustment after Mounting]

- 4-1. Tape path adjustment.

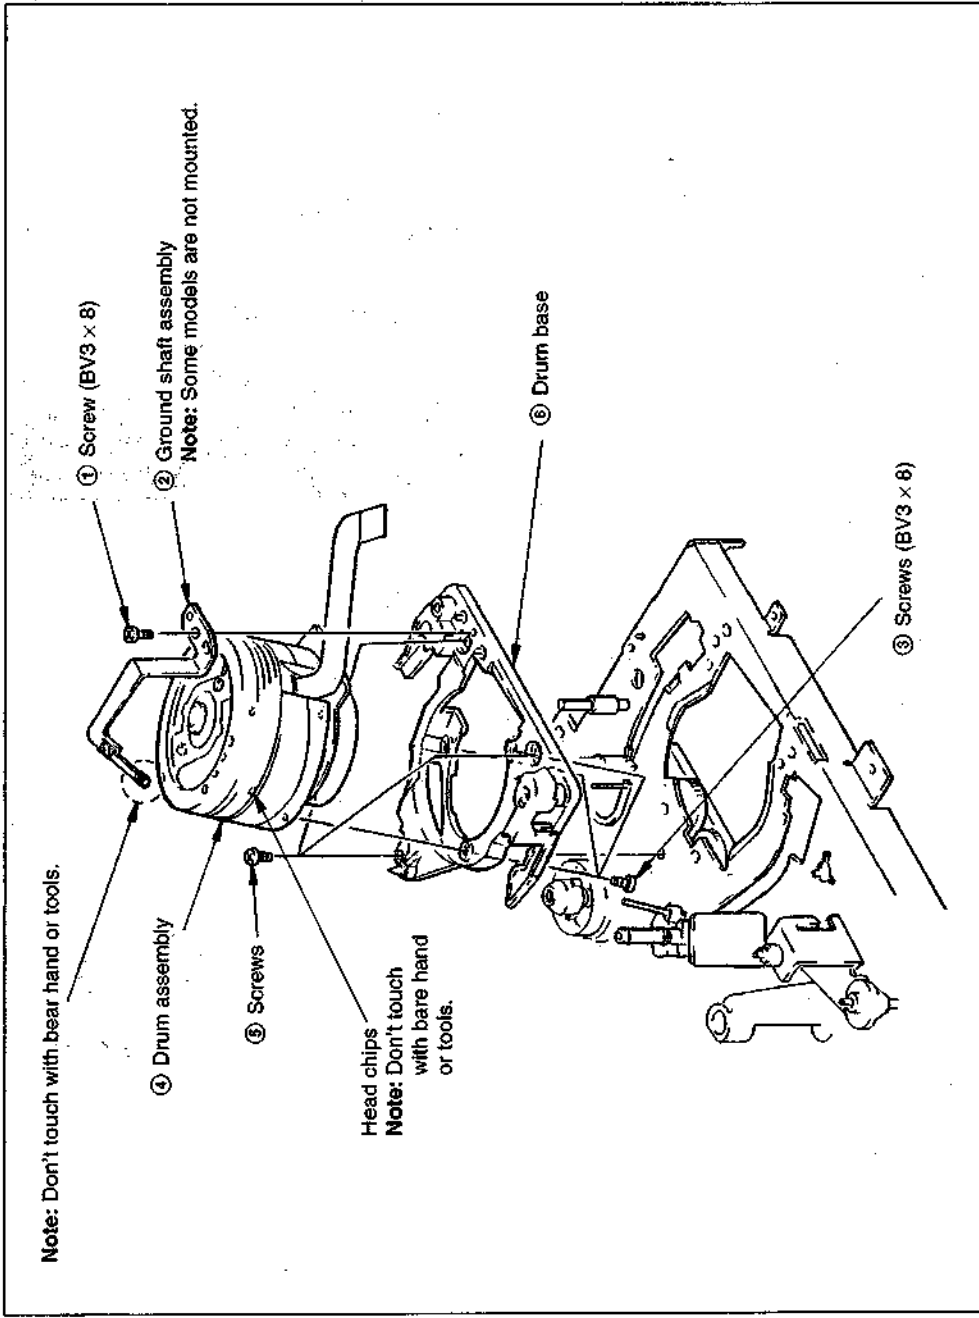


Fig. 3-2

1-3. TG2 ROLLER, FE HEAD ASSEMBLY (Refer to VHS Mechanical Adjustment Manual IV page 14)

- The TG2 roller was assembled in the FE head assembly, and therefore Section 3-5 for new type is added.

3-5. TG2 ROLLER, FE HEAD ASSEMBLY (Fig. 3-5)

- 1) Remove screw ①.
- 2) Pull out FE head assembly ②.

[Note on Mounting]

- Keep clean the surface contacts tape of TG2 roller.

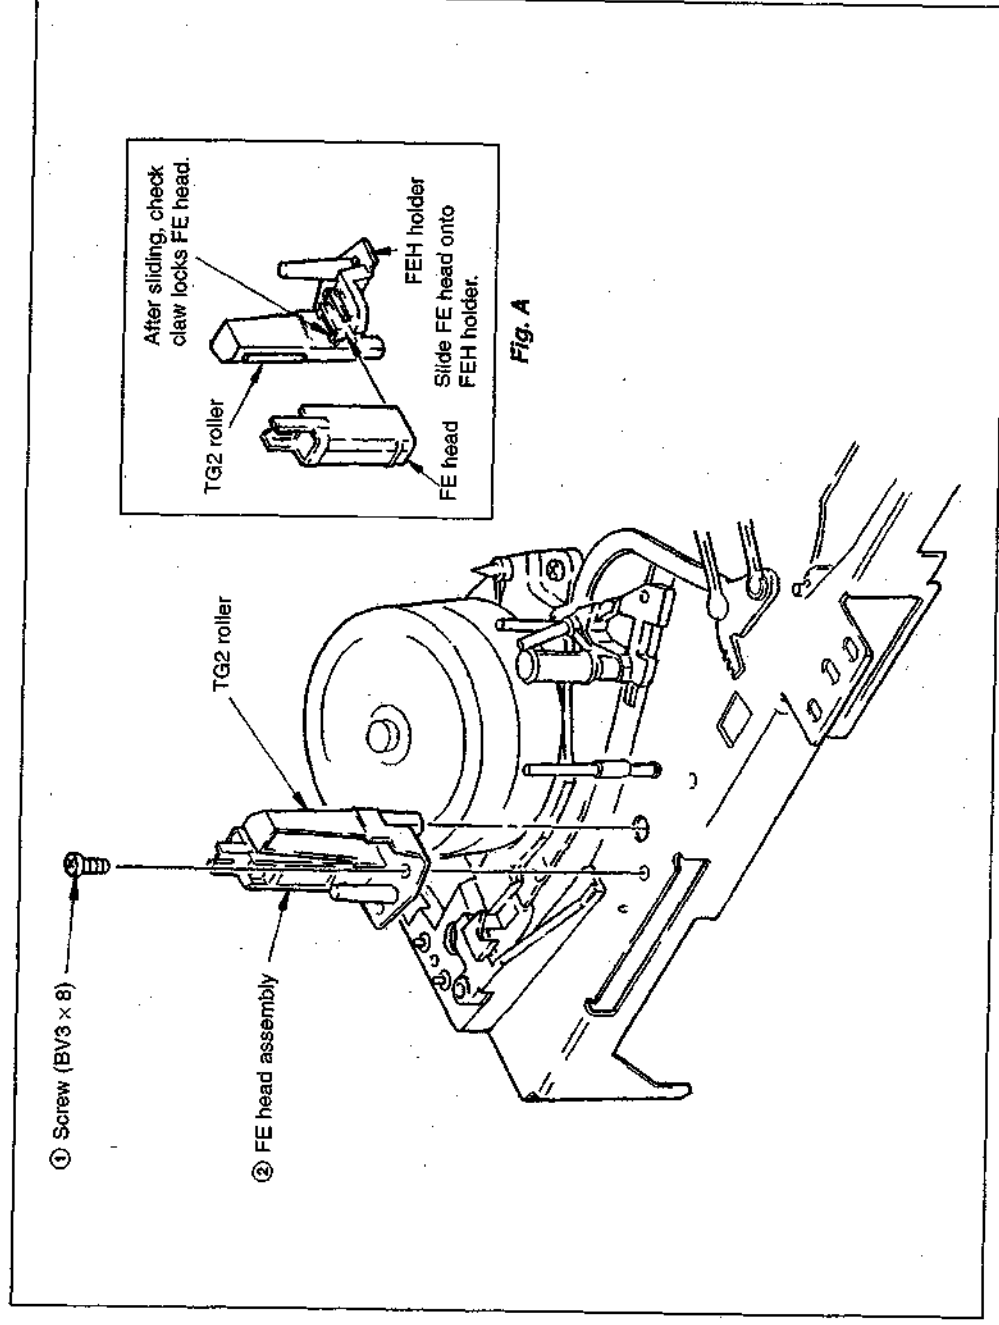


Fig. 3-5

1-4. TG3, TG6 GUIDE ROLLER ASSEMBLIES (Refer to VHS Mechanical Adjustment Manual IV page 17)

- The TG3 and TG6 guide roller assemblies were changed, and therefore Section 3-8 for new type is added.

3-8. TG3, TG6 GUIDE ROLLER ASSEMBLIES (Fig. 3-8)

- 1) TG3 guide roller assembly ① by turning it in the arrow **A** direction.
- 2) Removal the spring ②.
- 3) TG6 guide roller assembly ③ by turning it in the arrow **B** direction.
- 4) Removal the spring ④.

[Note on Mounting]

- Keep clean the surface contacts tape of TG3 and TG6 guide roller assemblies ①, ③.

[Adjustment after Mounting]

- 4-1. Tape path adjustment.

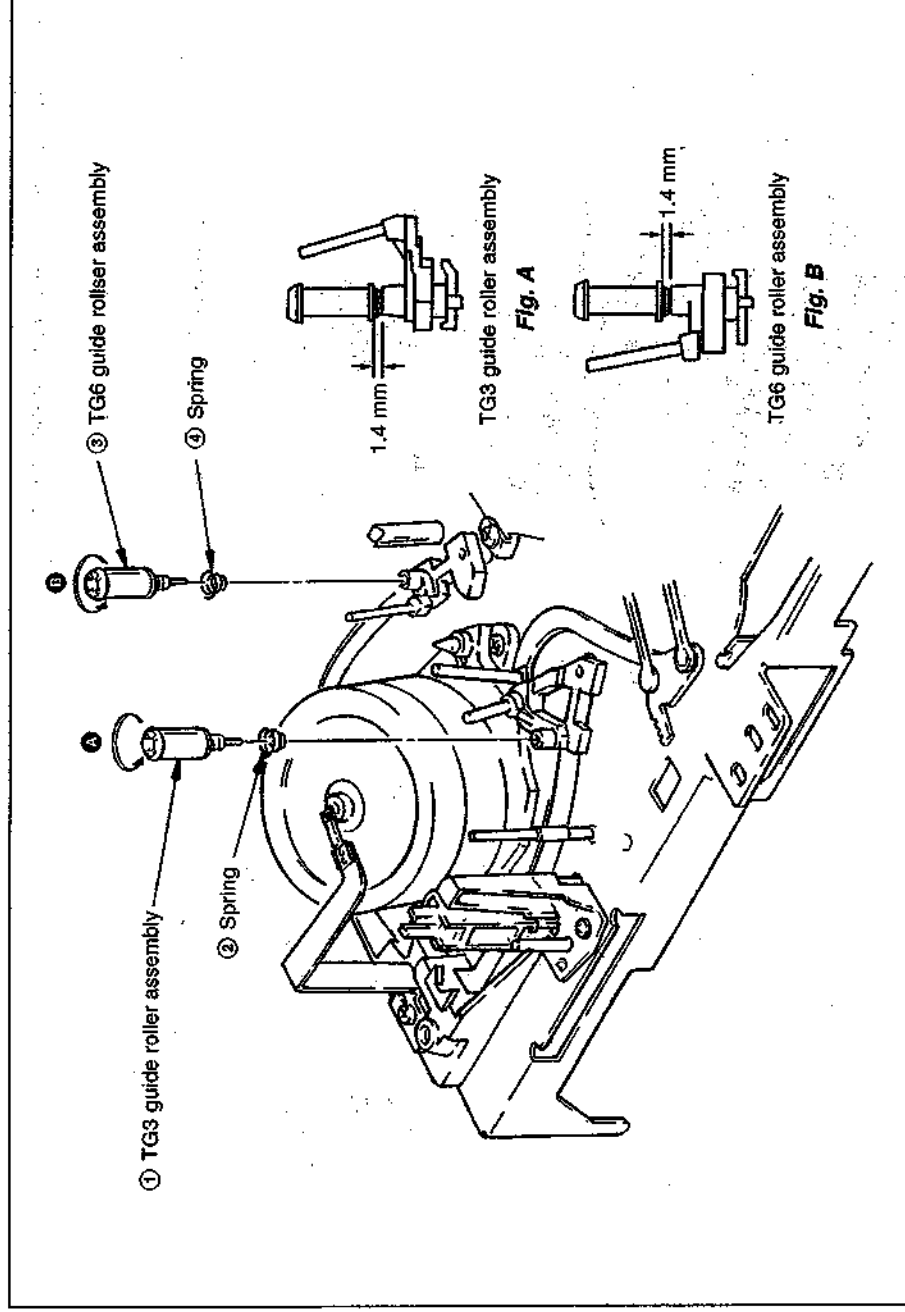


Fig. 3-8

1-5. SHUTTLE T BLOCK AND LOADING GEAR T BLOCK ASSEMBLIES (Refer to VHS Mechanical Adjustment Manual IV page 29)

- The shuttle T block and loading gear T block assemblies were changed, and therefore Section 3-19 for new type is added.

3-19. SHUTTLE T BLOCK AND LOADING GEAR T BLOCK ASSEMBLIES (Fig. 3-21)

- 1) Remove drum assembly and drum base. (Refer to 3-2.)
- 2) Remove timing belt. (Refer to 3-3.)
- 3) Remove CAP brake assembly. (Refer to 3-4.)
- 4) Remove cam motor chassis block assembly. (Refer to 3-18.)
- 5) Remove main slider. (Refer to 3-20.)
- 6) Sliding the shuttle T block assembly ① toward the direction Ⓐ, remove it through the hole Ⓑ.
- 7) Pull out loading gear T block assembly ②.

[Note on Mounting]

- Adjust the phase Ⓒ between loading gear (T) and loading gear (S). (Fig. A)
- Keep clean the surface contacts tape of shuttle T block assembly ①.

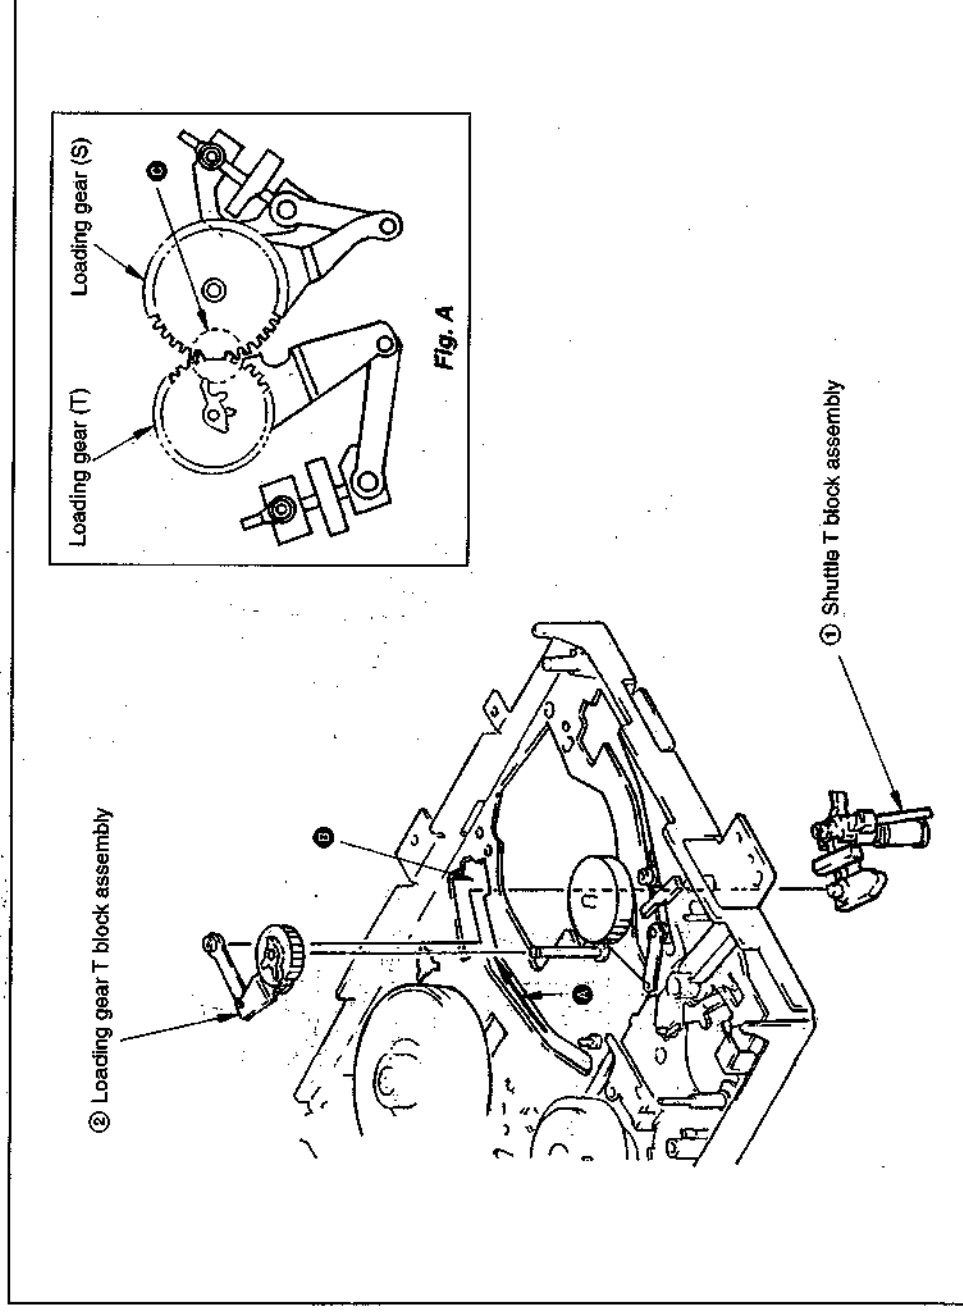


Fig. 3-21

1-6. SHUTTLE S BLOCK AND LOADING GEAR S BLOCK ASSEMBLIES
(Refer to VHS Mechanical Adjustment Manual IV page 30)

- The shuttle S block and loading gear S block assemblies were changed, and therefore Section 3-20 for new type is added.

3-20. SHUTTLE S BLOCK AND LOADING GEAR S BLOCK ASSEMBLIES
(Fig. 3-22)

- 1) Remove drum assembly and drum base. (Refer to 3-2.)
- 2) Remove timing belt. (Refer to 3-3.)
- 3) Remove CAP brake assembly. (Refer to 3-4.)
- 4) Remove cam motor chassis block assembly. (Refer to 3-18.)
- 5) Remove main slider. (Refer to 3-20.)
- 6) Sliding the shuttle S block assembly ① toward the direction ➊, remove it through the hole ➋.
- 7) Pull out loading gear S block assembly ②.

[Note on Mounting]

- Adjust the phase ➋ between loading gear (S) and loading gear (S). (Fig. A)
- Keep clean the surface contacts tape of shuttle S block assembly ①.

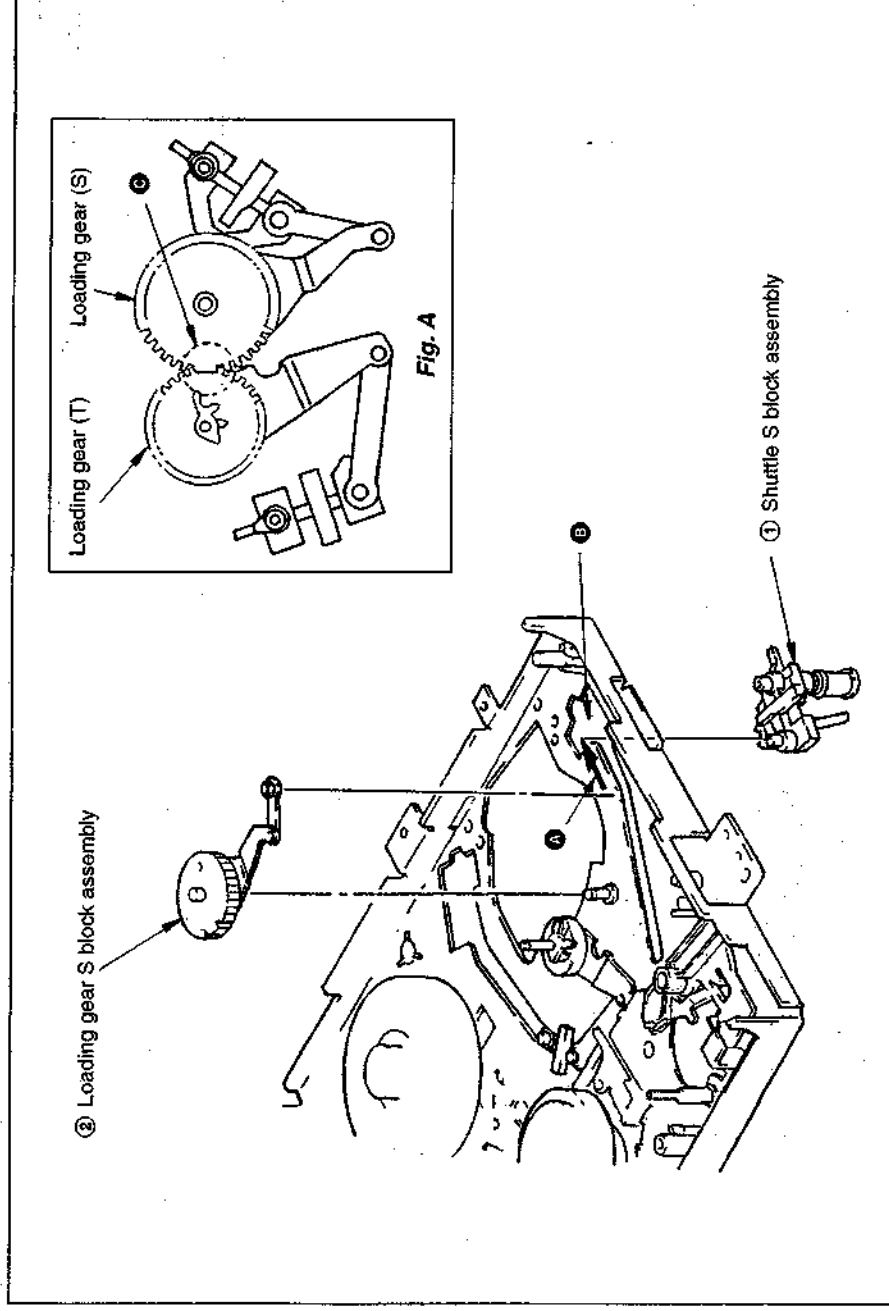


Fig. 3-22

2. ADJUSTING THE MECHANISM USING NEW ALIGNMENT TAPE (KRV-52PL for PAL)

The conventional alignment tape (For PAL) is now replaced with alignment tape KRV-52PL, and the following describes how to align the mechanism using the KRV-52PL. For details on the use of KRV-51P for each model, refer to the service manuals which will be issued in the future.

Name	Parts No.	Remarks
Alignment tape KRV-52PL for PAL	8-192-605-46	For tape path, audio azimuth, and X-value adjustments
Alignment tape KRV-51P for PAL	8-192-605-36	For electrical adjustments (RF, AF, and switching position) and operation check

Contents:

KRV-52PL (PAL)

Time	Video	Audio
20 min.	Recording only at 1 MHz, A-ch. EP mode RF skipping once per 5 frames	4 kHz full tracks

KRV-51P (PAL)

Class	Mode	Time	Video	Audio (HiFi/Normal)
1	SP	7 min.	Color bar	400 Hz
2	SP	3 min.	Mono. scope	400 Hz
3	EP	7 min.	Color bar	400 Hz
4	EP	3 min.	Mono. scope	400 Hz

2-1. HEIGHT ADJUSTMENT OF GUIDE ROLLERS NO. 3 AND NO. 6

Mode	Playback
Signal	Alignment tape KRV-52PL (For PAL)
Measuring instrument	Oscilloscope TIM/DIV: 2ms Trigger source: CH2 Trigger slope: +
Measuring point	CH-1: Connector PB RF pin for RF PC board check CH-2: Connector RF SWP pin for RF PC board check
Adjustment locations	Height adjustment screw for No. 3 tape guide roller Height adjustment screw for No. 6 tape guide roller

[Adjustment Method]

- 1) Deactivate the automatic tracking control, and set the tracking control at the center position. To set the tracking control at the center position for the VCRs equipped with the \blacktriangle and \blacktriangledown tracking control keys, press both the \blacktriangle and \blacktriangledown tracking control keys at the same time. For the VCRs not equipped with the tracking control keys, deactivate the automatic tracking control by pressing the tracking \square [AUTO/MANUAL] key on the remote control unit during threading operation (after a tape is inserted but before the VCR starts playing back the tape).
- 2) Turn the height adjustment screws of tape guide rollers No. 3 and No. 6 so that the RF output envelope becomes as flat as possible.
- 3) Press the \blacktriangle tracking control key, and check that both the beginning and end of the RF output change together the same in amplitude.
- 4) Press the \blacktriangledown tracking control key, and check that both the beginning and end of the RF output change together the same in amplitude.

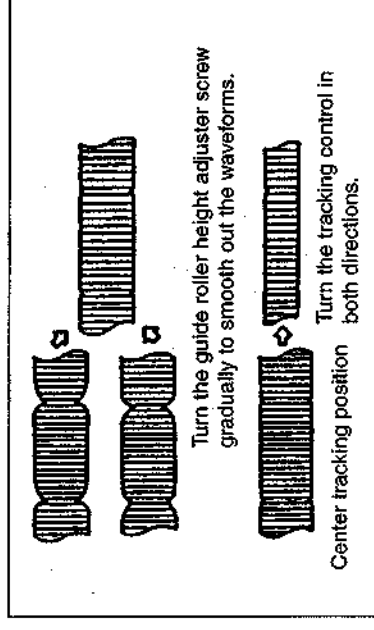


Fig. 2-1

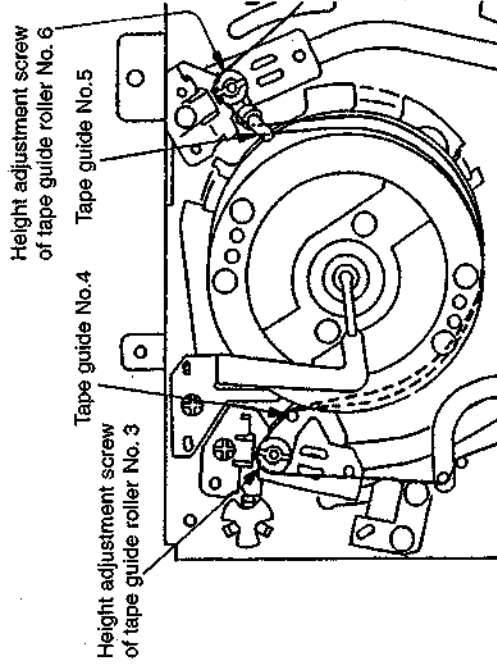


Fig. 2-2

2-2. ACE HEAD ASSEMBLY ADJUSTMENT (ROUGH ADJUSTMENT) (Figs. 2-3 and 2-4)

Purpose: Allows the tape to make even contact with the head for recording and playback of the specified track.

Mode	Playback
Jig	Blank tape
Adjustment locations	Height adjuster nut, Tilt adjuster screw

[Adjustment Method]

- 1) Mount the ACE head assembly. AT this time, adjust the height so that the height of guide flange No. 7 matches the level of the lower edge of the control head.
- 2) Remove the adjustment tool and load a new tape, then set the unit for playback.
- 3) Check that the tape does not curl or rise up noticeably near the ACE head.
- 4) If the tape curls up or rises noticeably, readjust the tilt adjuster screw and the height adjuster nut.
(The height of the ACE head should be adjusted so that the lower edge of the tape is approx. 0.1 to 0.15 mm from the control head.)
- 5) Perform precision adjustment.

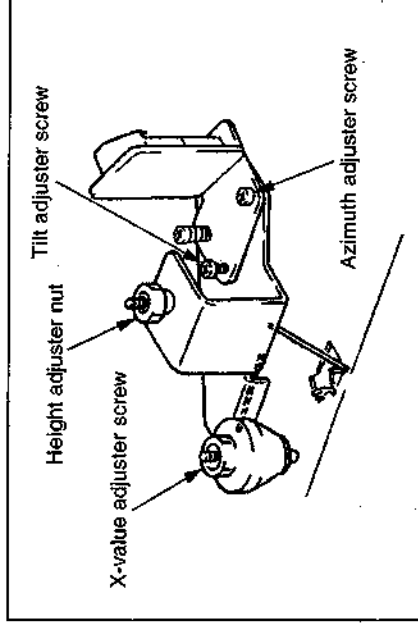


Fig. 2-3

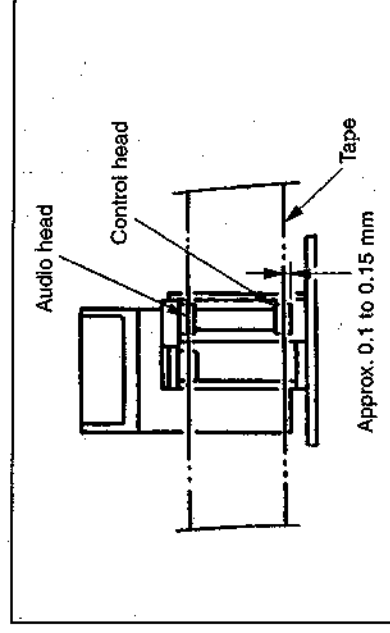


Fig. 2-4

2-3. ACE HEAD ASSEMBLY ADJUSTMENT (PRECISION ADJUSTMENT)

Mode	Playback
Signal	Alignment tape (KRV-52PL 4 kHz) (For PAL)
Measuring instrument	Oscilloscope
Measuring point	Audio output terminal
Adjustment locations	Azimuth adjuster screw, Height adjuster nut, Tilt adjuster screw

[Adjustment Method]

- 1) Adjust the tilt adjuster screw in the FWD or REV mode so that the lower flange of guide No. 7 does not curl up or rise.
- 2) Alternately adjust the azimuth adjuster screw, the height adjuster nut, and the tilt adjuster screw to maintain even audio output at maximum with minimum deviation.

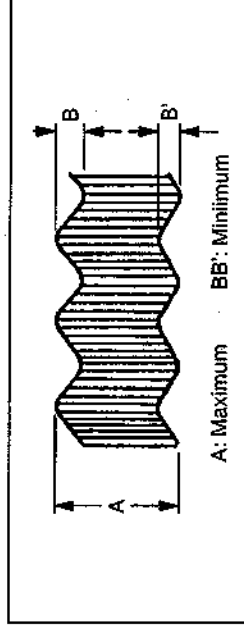


Fig. 2-5


Note: In the adjustment of ACE head assembly (coarse adjustment and fine adjustment), if a azimuth, height and tilt were adjusted, again adjust the height of No. 3 and No. 6 guide rollers.

2-4. X-VALUE ADJUSTMENT

Purpose: To obtain compatibility with other VCRs.

Precaution: Before starting to adjust X-value, set the tracking control at the center position. To set the tracking control at the center position for the VCRs equipped with the \blacktriangle and \blacktriangledown tracking control keys, press both the \blacktriangle and \blacktriangledown tracking control keys at the same time. For the VCRs not equipped with the tracking control keys, deactivate the automatic tracking control by pressing the tracking tracking control key on the remote control unit [AUTO/MANUAL] key on the remote control unit during threading operation (after a tape is inserted but before the VCR starts playing back the tape).

Mode	Playback
Signal	Alignment tape KRV-52PL
Measuring instrument	Oscilloscope TIM/DIV: 2ms Trigger source: CH2 Trigger slope: +
Measuring point	CH-1: Connector PB RF pin for RF PC board check CH-2: Connector RF SWP pin for RF PC board check
Adjustment locations	X-value adjuster screw

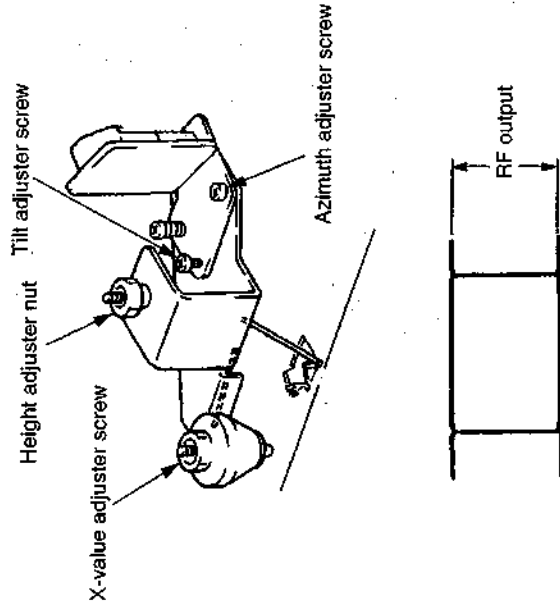

RF output shall be maximum at the center position of the tracking control.

Fig. 2-6

[Adjustment Method]

Set the tracking control at the center position. For the VCRs equipped with narrow gap video heads, set the X-value adjustment screw where a maximum RF output is obtained. For the VCRs equipped with wide gap video heads, set the X-value adjustment screw both where a maximum RF output is obtained and where the RF output decreases immediately when the tracking control key is pressed.

1. Adjusting X-value

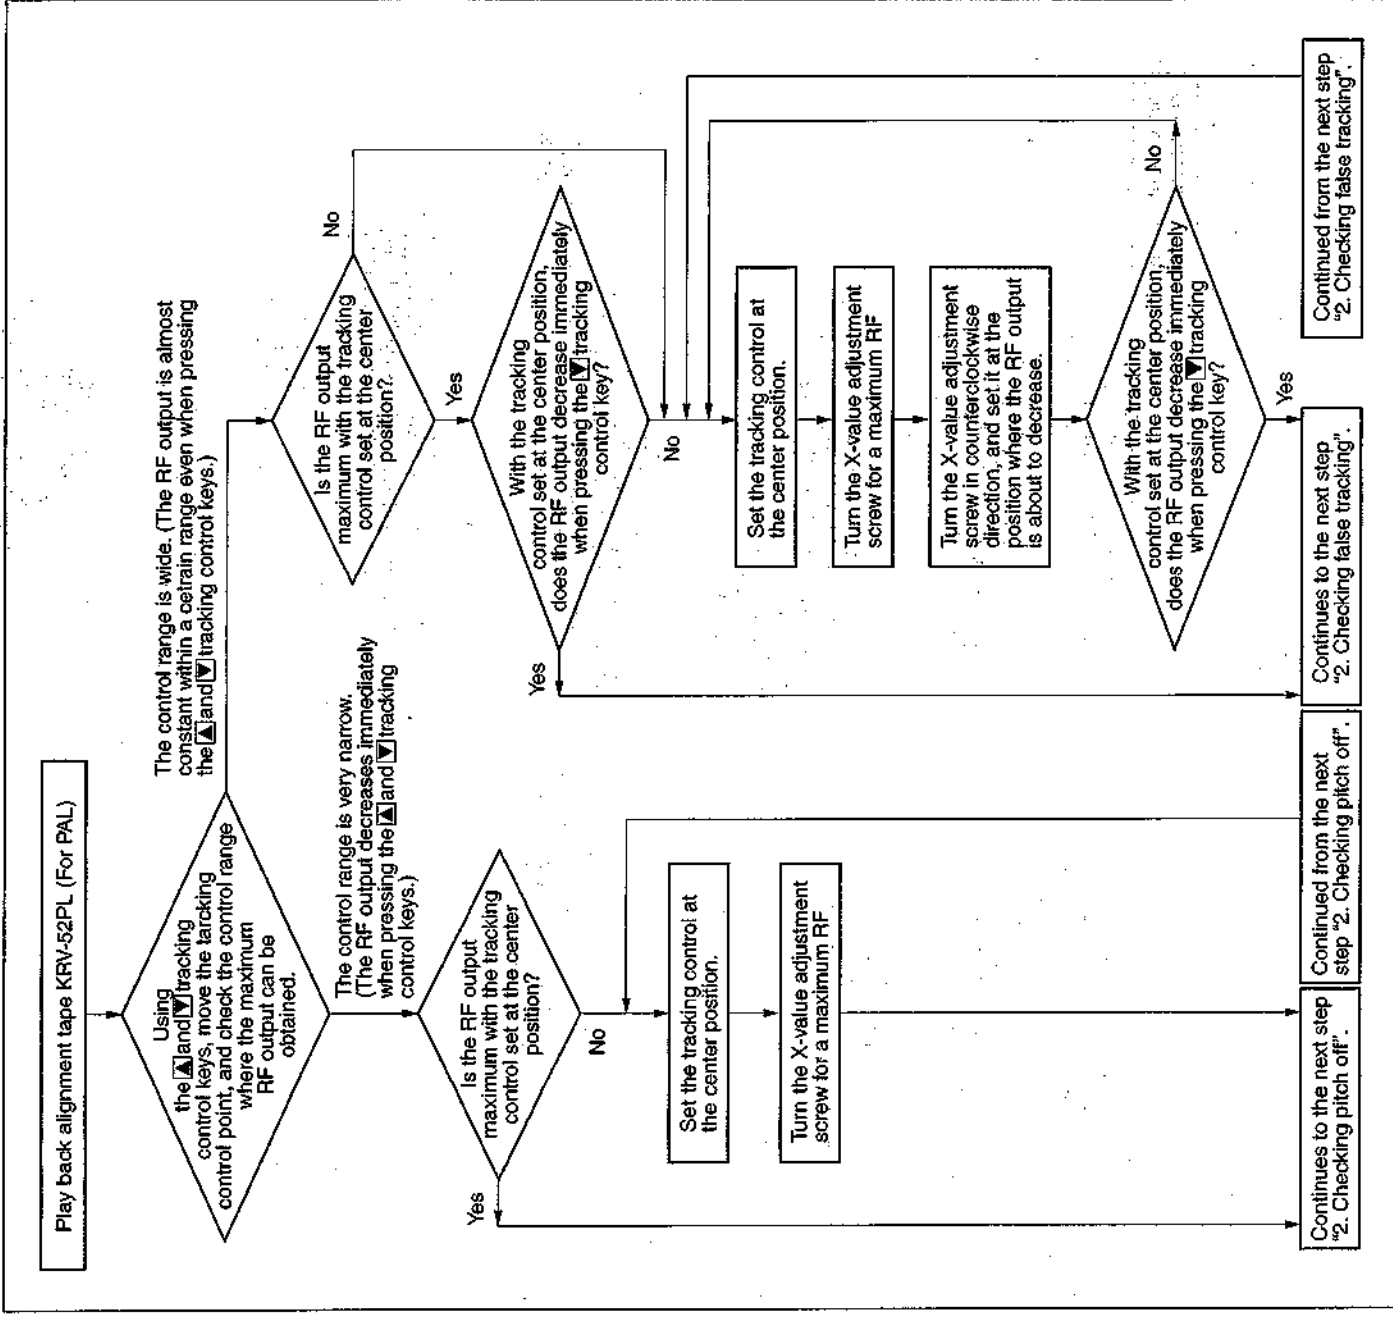


Fig. 2-7

2. Checking false tracking

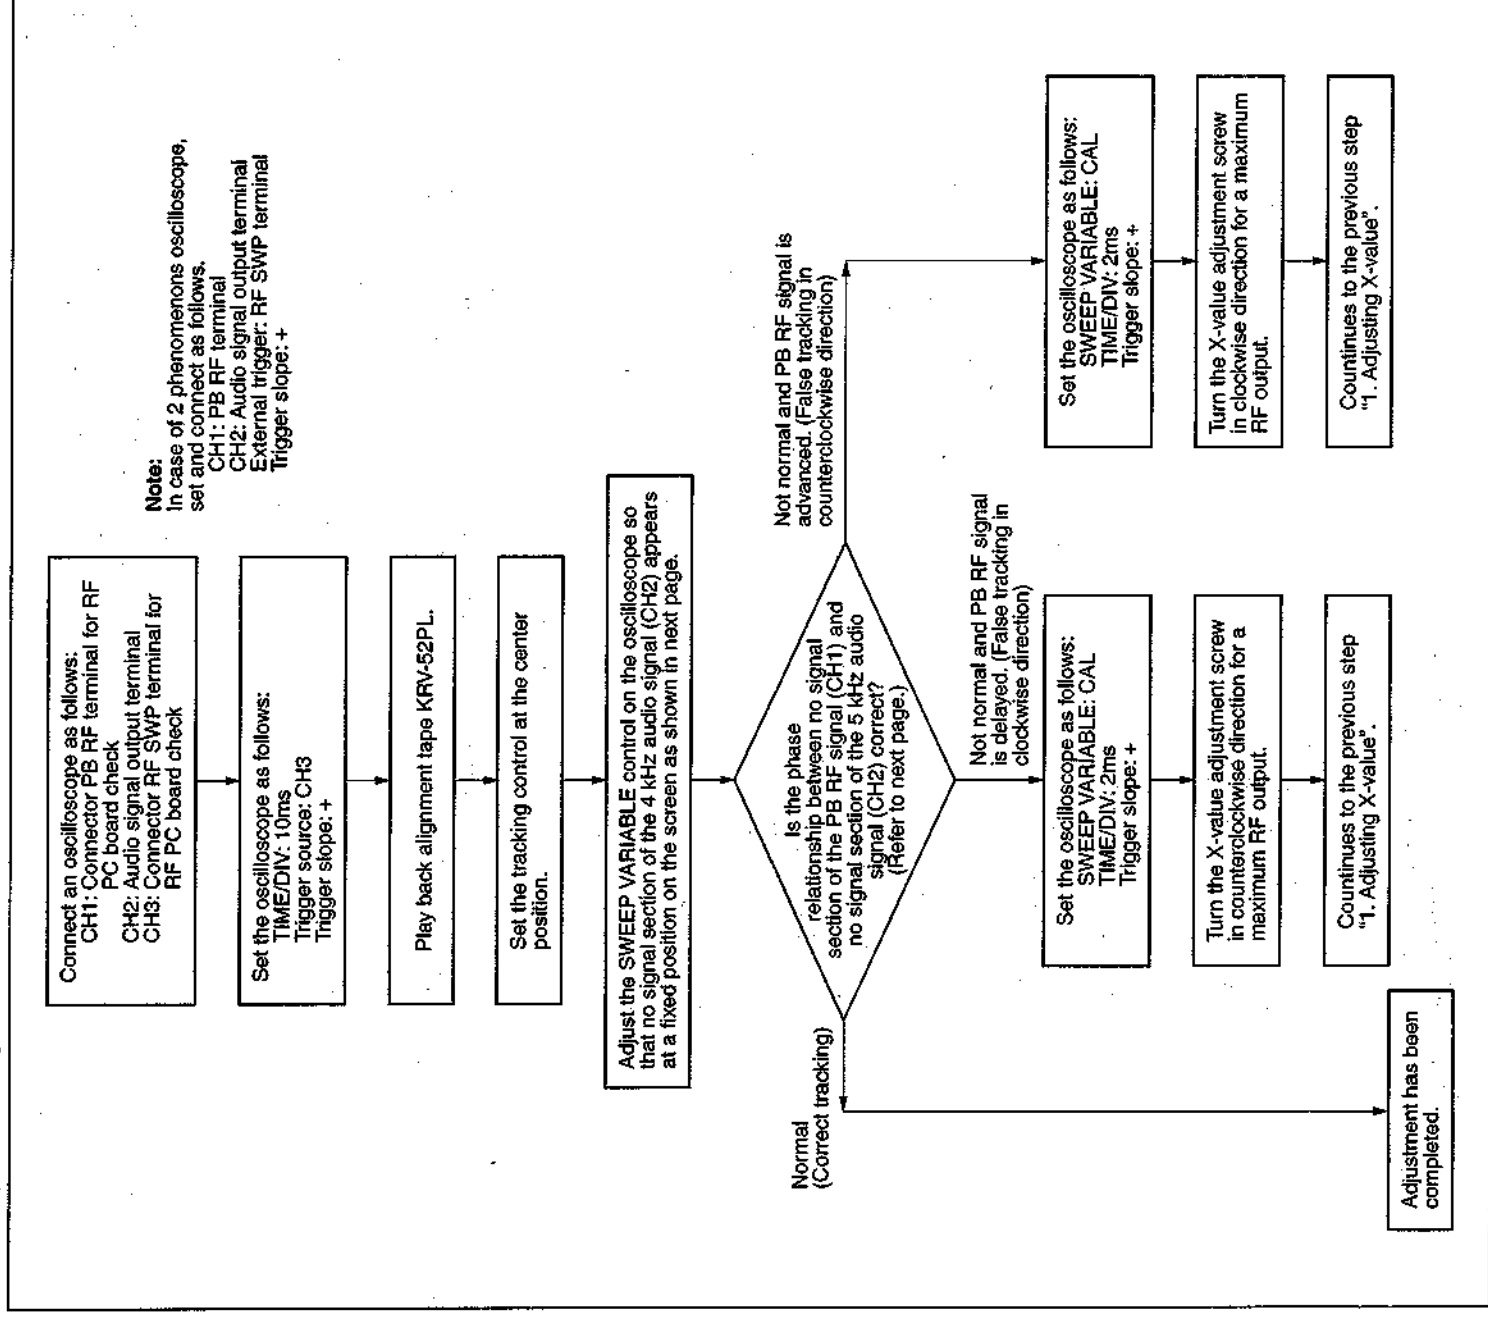


Fig. 2-8

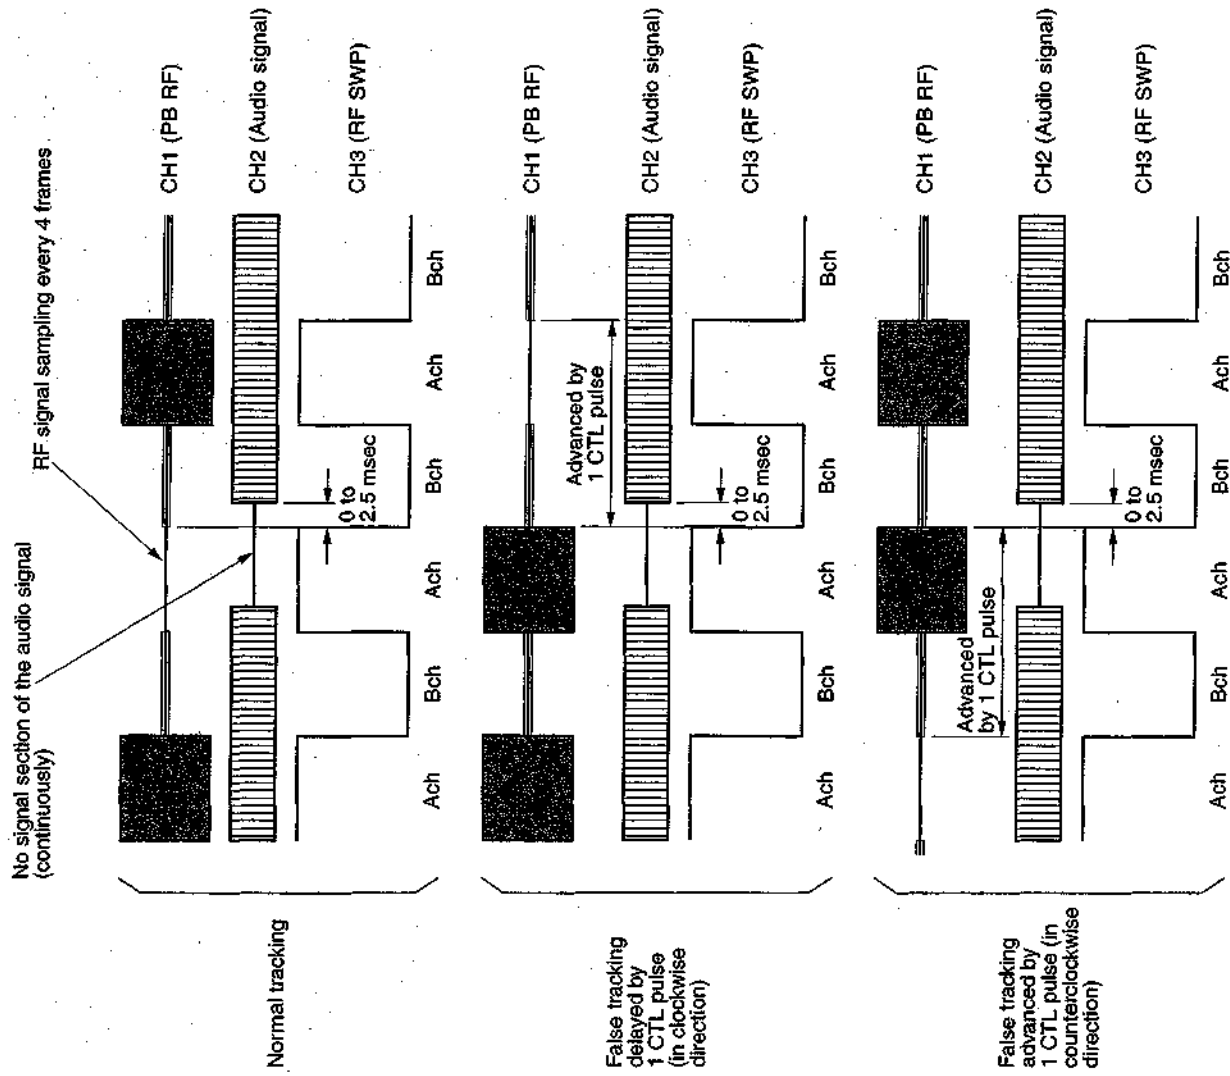


Fig. 2-9

2-5. ADJUSTMENT AFTER REPLACING THE DRUM (VIDEO HEAD)

Purpose: Co-relative height, X-value and other factors of the drum will deviate from those of the guide roller. If the drum is replaced properly, these deviations are extremely small.

Note 1: Deactivate the automatic tracking control for setting the mechanism in manual tracking control mode.

Note 2: To set the tracking control at the center position, deactivate the automatic tracking control by pressing the tracking [AUTO/MANUAL] key on the remote control unit during threading operation (after a tape is inserted but before the VCR starts playing back the tape).

[Adjustment Method]


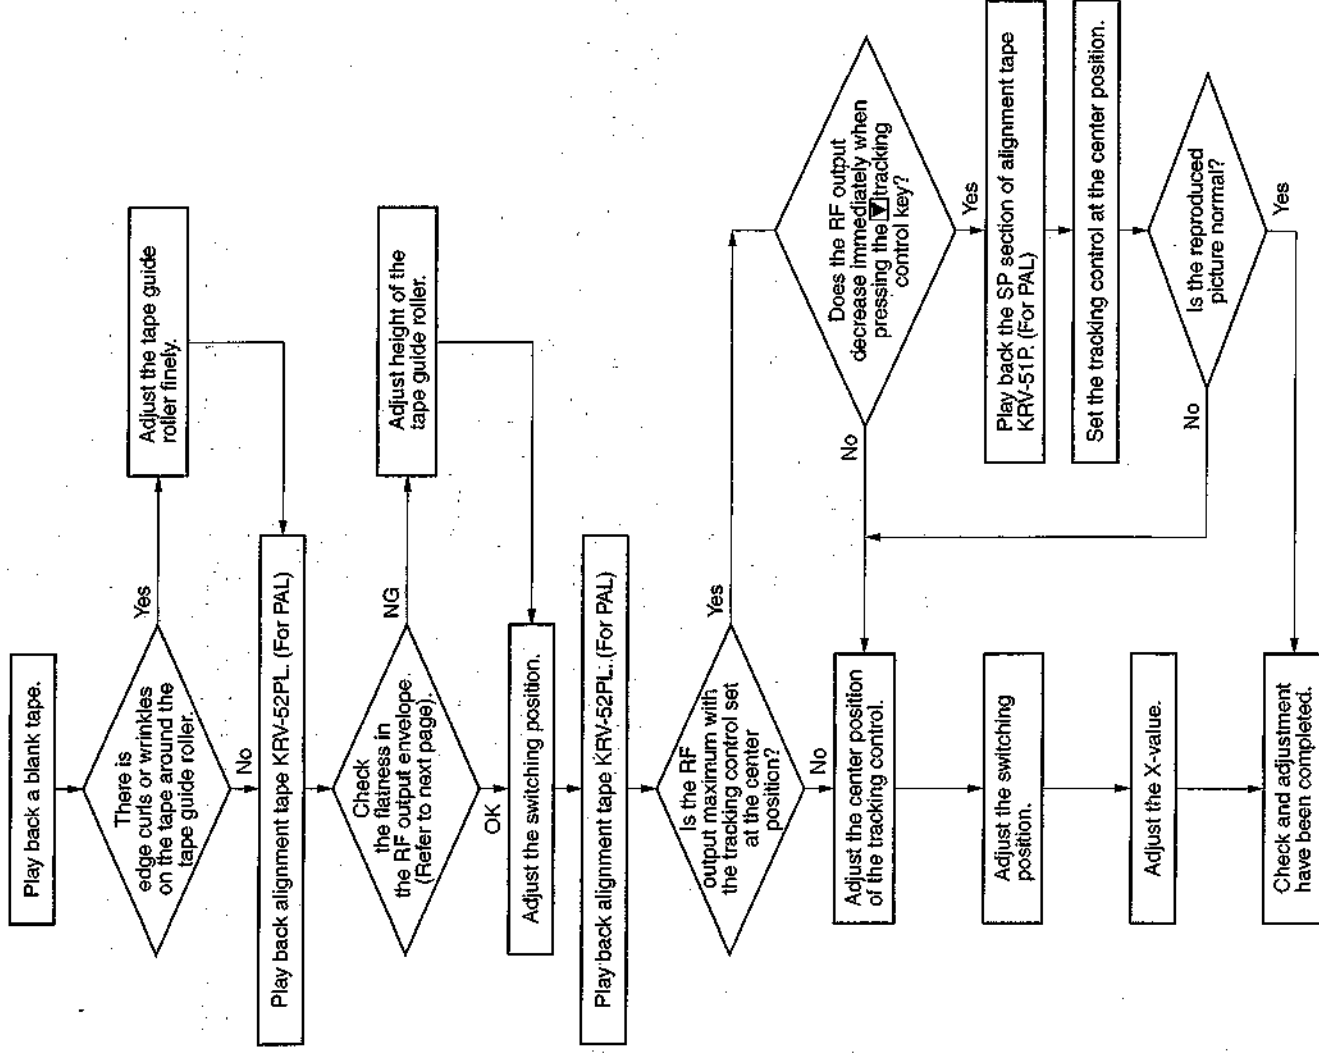


Fig. 2-10


Mode	Playback
Signal	Alignment tape KRV-52PL (For PAL), blank tape
Measuring instrument	Oscilloscope
Measuring point	CH-1: Connector PB RF pin for RF PC board check. CH-2: Connector RF SWP pin for RF PC board check.
Adjustment locations	Guide roller (Refer to 2-1.) Switching position (Refer to the Service Manual) X-value (Refer to 2-3.)

[Checking the evenness and fluctuation of the RF output]


- 1) Set the RF output to the maximum level using the tracking buttons.

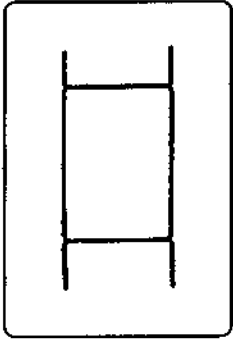

- 2) Perform fine adjustment of the voltage level range of the oscilloscope, then adjust the RF output deviation to within 4 gradations.

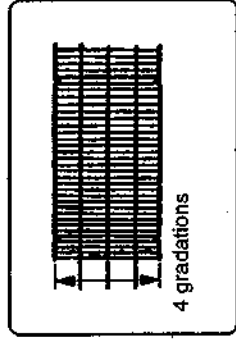

- 3) Press the tracking buttons and adjust the maximum amplitude of the RF output to within 3 gradations.
- 4) AT this time, check if the minimum amplitude is more than 2 gradations.

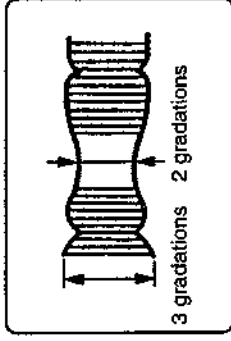

- 5) Check that the RF output fluctuation between minimum and maximum levels is within 13%.

Fig. 2-11





V13000

8 mm Video MECHANICAL ADJUSTMENT MANUAL V

F MECHANISM

Video 8

File with the SERVICE MANUAL

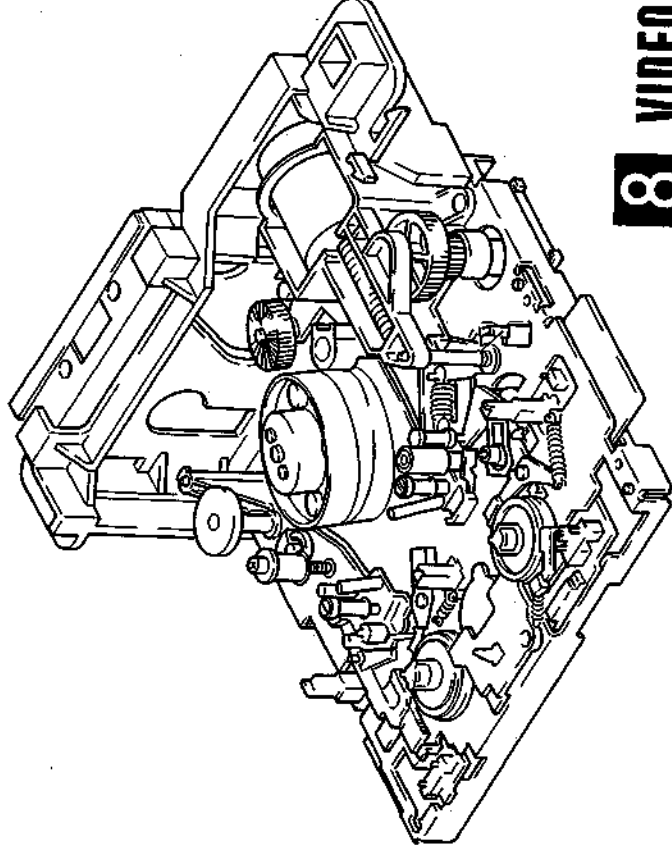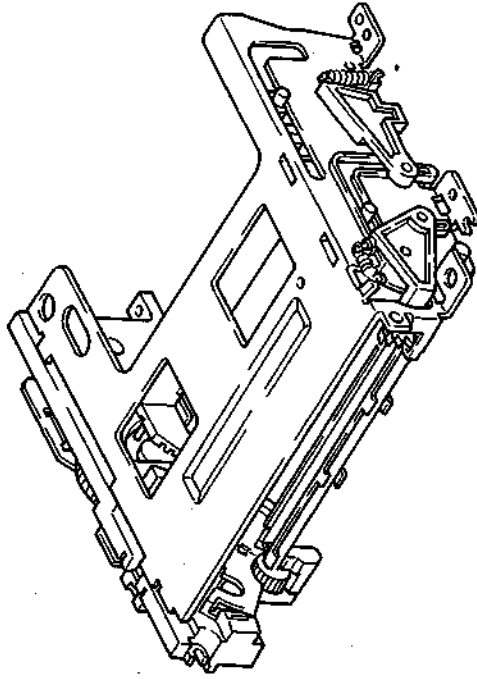

8 VIDEO RECORDER
SONY®

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1.	MAIN FEATURES	3	4-15.	Loading Drive Lever	25
2.	PREPARATION FOR MECHANICAL CHECK, ADJUSTMENT AND REPLACEMENT	4	4-16.	Rotary Switch and Main Cam	26
2-1.	FL Cassette Compartment Assembly	4	4-17.	Slide Plate	27
2-2.	Operation with FL Cassette Compartment Assembly Removed	5	4-18.	Loading Gear (S) Assembly	28
2-2-1.	Activating Loading	5	4-19.	Loading Gear (T) Assembly	29
2-2-2.	Activating Play Status	5	4-20.	Coaster (S)	30
2-2-3.	Activating Ejection	5	4-21.	Coaster (T) Assembly	30
2-3.	Handling of Mode Selector II	6	4-22.	Rotary Upper Drum Replacement	31
2-3-1.	General	6	4-23.	Adjustment of Tension Regulator Position	32
2-3-2.	Operation	7	4-24.	FWD Back Tension Adjustment	32
			4-25.	Reel Torque Check	32
			4-26.	FL Worm Wheel	33
3.	PERIODIC CHECK AND MAINTENANCE	9	5.	TAPE PATH ADJUSTMENT	34
3-1.	Cleaning of Rotary Drum Assembly	9	5-1.	Preparation for Adjustment	35
3-2.	Cleanign of Tape Path	9	5-2.	Tracking Adjustment	36
3-3.	Periodic Check Items	10	5-3.	No.2 Guide (TG2) Adjustment	36
3-4.	Service Jigs List	11	5-3-1.	No.2 Guide (TG2) Height Presetting	36
			5-3-2.	No.2 Guide (TG2) Adjustment	37
			5-4.	No.7 Guide (TG7) Adjustment	37
4.	MECHANICAL CHECK, ADJUSTMENT AND REPLACEMENT	12	5-5.	CUE and REV Waveform Check	37
4-1.	RP Block	12	5-6.	Check After Adjustment	38
4-2.	Impedance Roller	13	5-6-1.	Tracking Check	38
4-3.	HC Roller Assembly	13	5-6-2.	Rising Check	38
4-4.	Pendulum Base Assembly and Soft Brake Assembly (T)	14	5-6-3.	Tape Path Check	38
4-5.	Brake (S) Arm and Brake (T) Arm Assembly	15	6.	EXPLODED VIEWS	39
4-6.	Tension Regulator Assembly, Reel Table (S) Assembly and Reel Table (T) Assembly	16	6-1.	Front Loading Assembly	39
4-7.	TG2 Assembly	17	6-2.	MD Chassis Assembly (1)	40
4-8.	TG7 Arm Assembly	18	6-3.	MD Chassis Assembly (2)	41
4-9.	Cam Motor Assembly	19	6-4.	MD Chassis Assembly (3)	42
4-10.	Pinch Arm Assembly	20	7.	DIAGRAMS	43
4-11.	Worm Wheel Bracket	21	8.	ELECTRICAL PARTS LIST	46
4-12.	Capstan Motor	22			
4-13.	Drum Assembly	23			
4-14.	Pulley Base Assembly	24			

1. MAIN FEATURES

The mechanism developed exclusively for the 8mm video provides the following features.

1. Faster rewind time than U mechanism.
4 times high speed. (about 1 minute in case of P120 cassette.)
2. Jog shuttle supporting by addition of forced swing mechanism.
3. High speed start on Picture mechanism.
Stop → playback about 0.8 sec.
4. Head clogging prevention by adoption of new cleaning roller.
5. Reduction of the number of parts. (about 40 parts less than U mechanism.)
6. FL capstan motor drive.

2. PREPARATION FOR MECHANICAL CHECK, ADJUSTMENT AND REPLACEMENT

For removal of the cabinet and boards, refer to "Disassembly" in each Service Manual.

Mechanical adjustment is done in the **EJECT** mode. (To select the **EJECT** mode, refer to "2-3, Handling of Mode Selector II".)

2-1. FL CASSETTE COMPARTMENT ASSEMBLY (Fig. 1)

1. Removal

- 1) Select the **EJECT** mode.
- 2) Remove three screws ① and remove the FL cassette compartment ② toward the arrow.

2. Mounting

- 1) Select the **EJECT** mode.
- 2) Mount the FL cassette compartment ② with its tab ④ engaged with the hole ③ in mechanical chassis.
- 3) Tighten three screws ①.

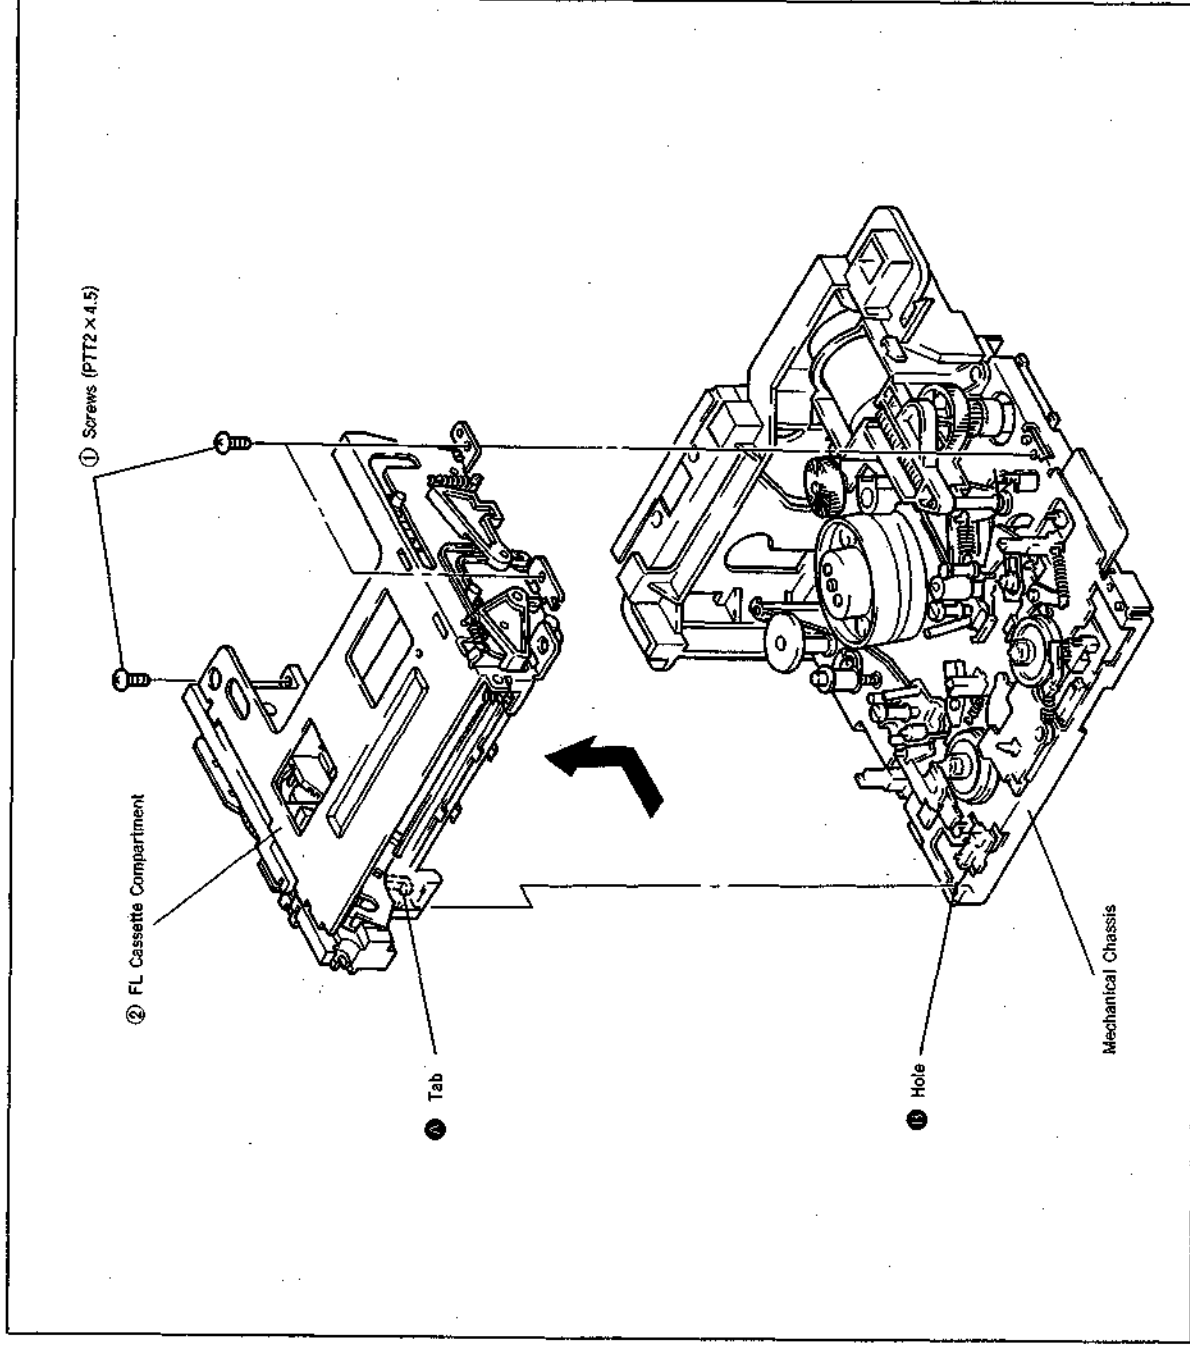


Fig. 1

2-2. OPERATION WITH FL CASSETTE COMPARTMENT ASSEMBLY REMOVED (Fig. 2)

2-2-1. Activating Loading

- 1) Referring to the Service Guide, supply the power with the cabinet removed.
- 2) Cover the LED ① with an opaque cap ②.
- 3) Press the cassette down switch ③ three times.

2-2-2. Activating Play Status

- 1) Perform each step in 2-2-1. Activating Loading.
- 2) Press the PLAY button while keeping the cassette down switch pressed.

2-2-3. Activating Ejection

- 1) Press the EJECT button.

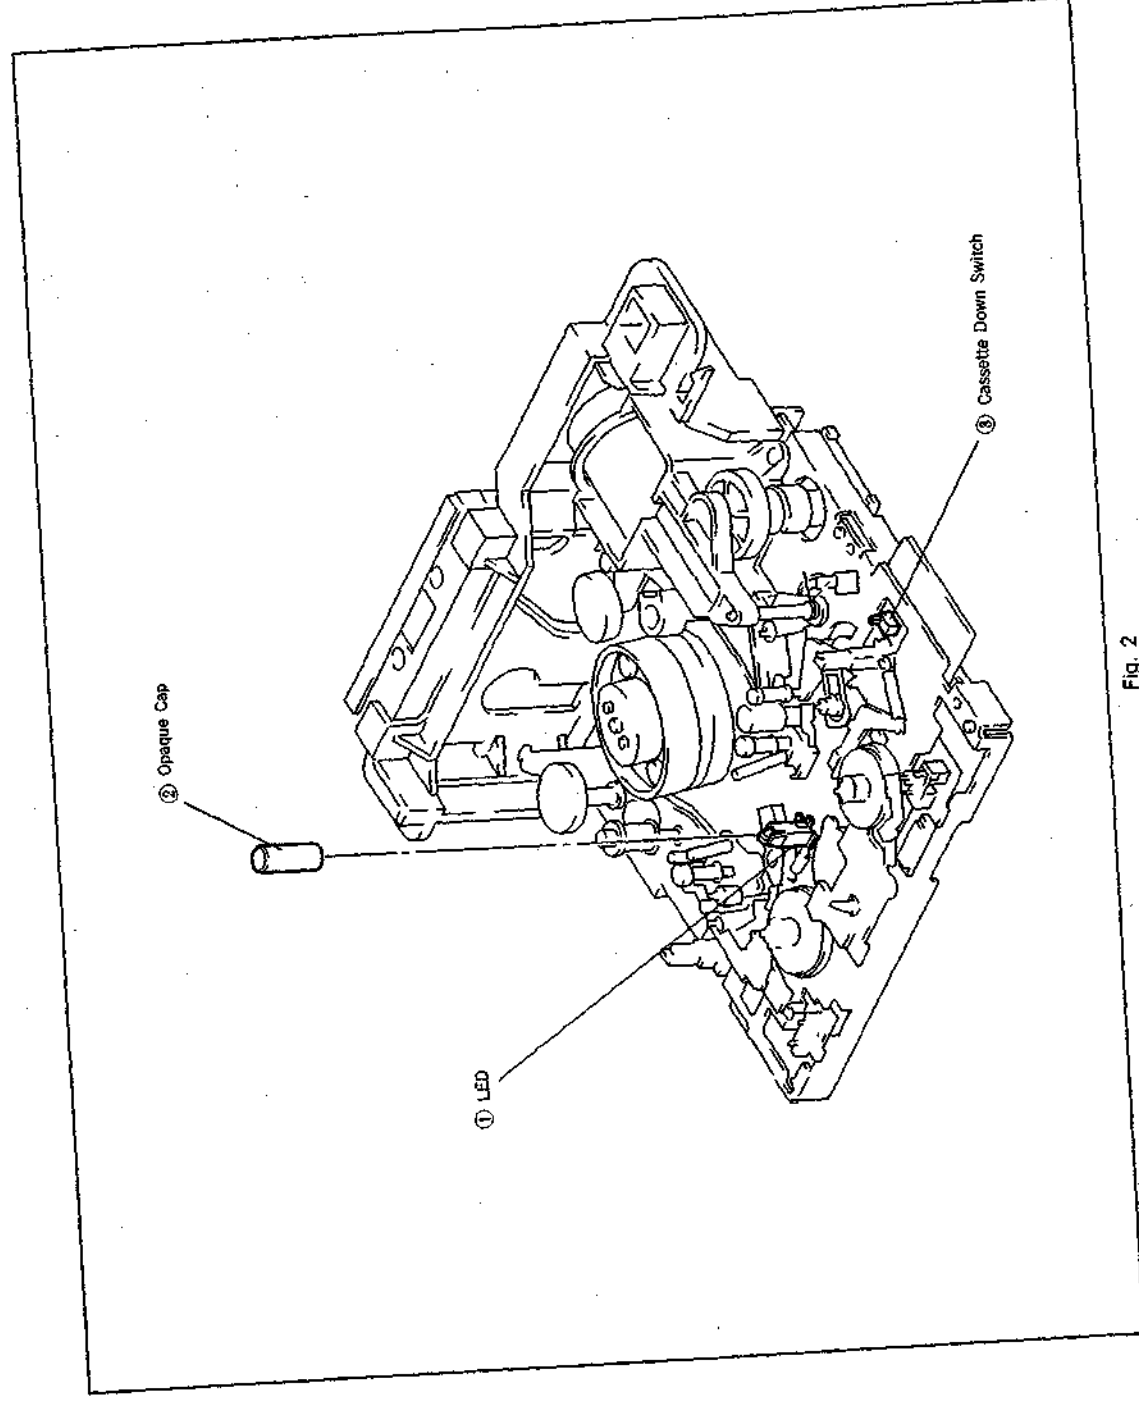


Fig. 2

2-3. HANDLING OF MODE SELECTOR II

2-3-1. General

The mode selector is used as a mechanism drive tool to help maintenance of various mechanical decks, and it provides the following functions.

1. MANUAL test

In this mode, the motor is driven only during the time that the switch is pressed, so that the operator can control the motor freely.

2. STEP test

In this mode, the motor is driven from the present status attained from sensor until the status changes to another status, so that the operator can confirm every operations.

3. AUTO test

This mode checks if the mechanism operates normally following the status change table registered to each mechanical deck through a sequence of operation in all statuses of the mechanism. If it detects a faulty status change during operation, it displays "NG" and stops operation.

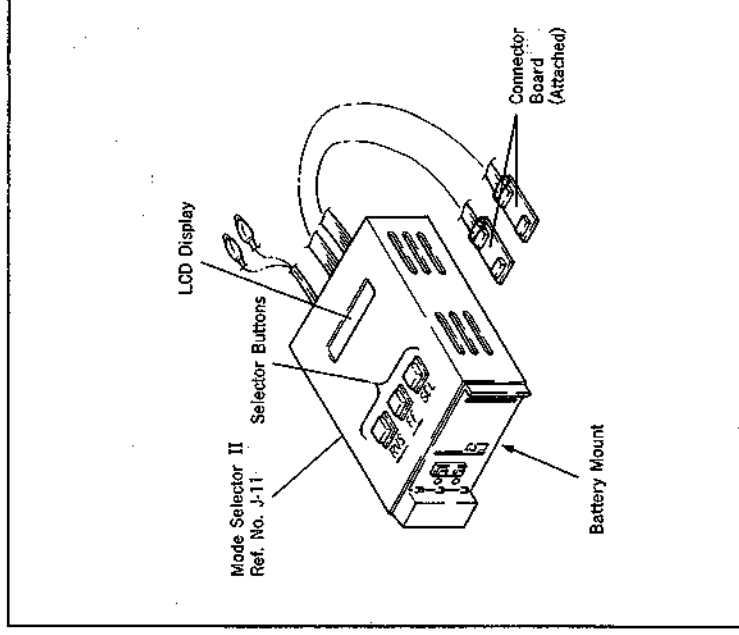


Fig. 3

MODE SELECTOR I (J-6082-282-A) CONNECTION


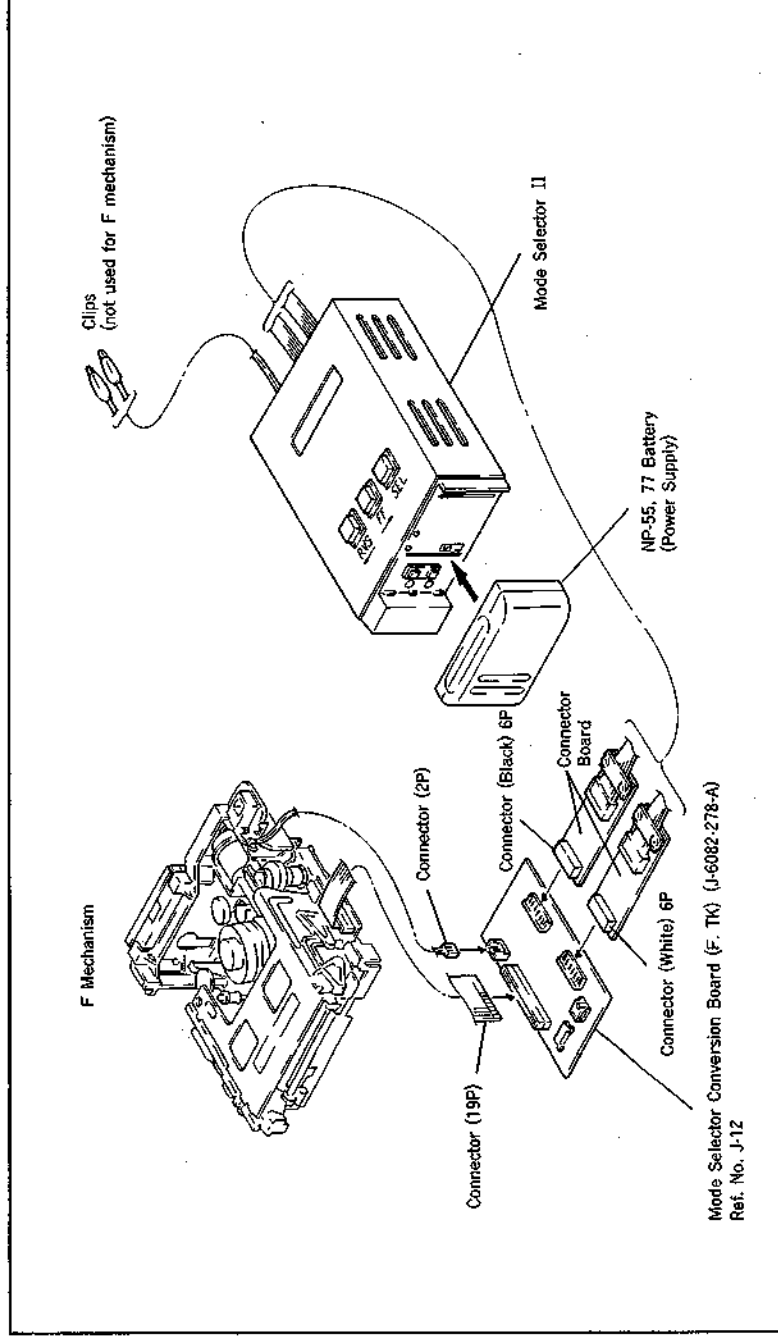


Fig. 4


2-3-2. OPERATION

1. Operation Flow Chart

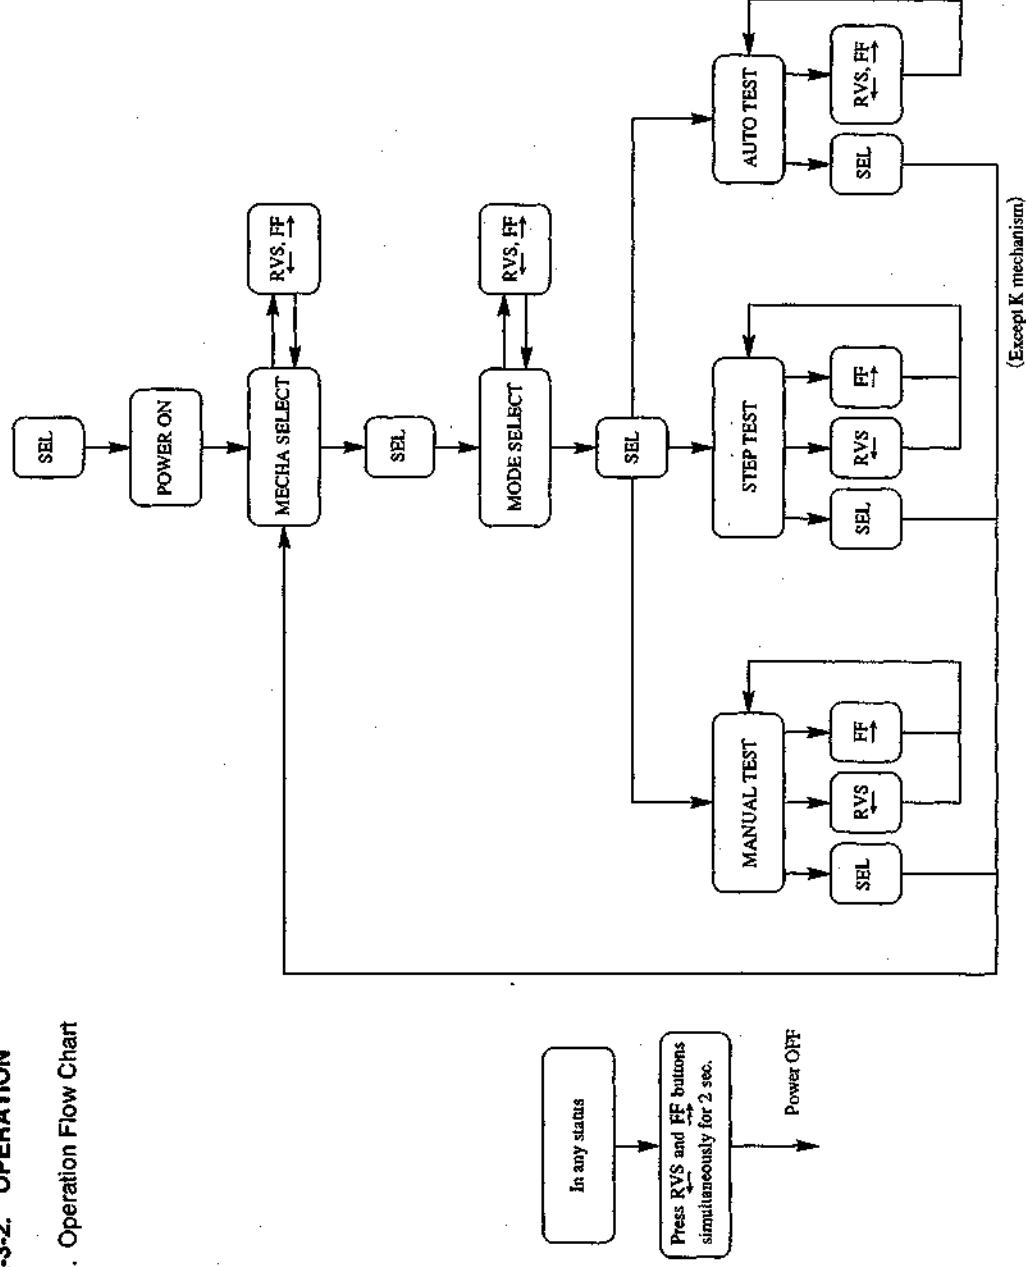


2. Mode Selector II power ON

Press the SEL button to turn on the power supply.



3. Mode Selector II power OFF

At the power ON, press **RVS** and **FF** buttons simultaneously for more than 2 seconds to turn off the power supply.



4. Mechanism selection

The "MECHA SELECT" is displayed on LCD immediately after the power supply is turned on. Call the desired mechanism by pressing the **RVS** or **FF** button, and press the **SEL** button. Thus, the mechanism has been selected. (Fig. 5-1 indicates F mechanism.)

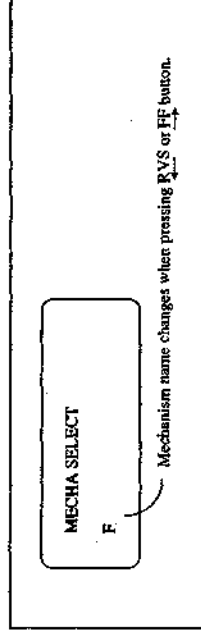


Fig. 5-1

5. Mode selection

Select the test mode "MANUAL", "STEP" or "AUTO" to be executed.

Call the desired mode by pressing the RVS or FF button, and press the SEL button. Thus, the mode has been selected.

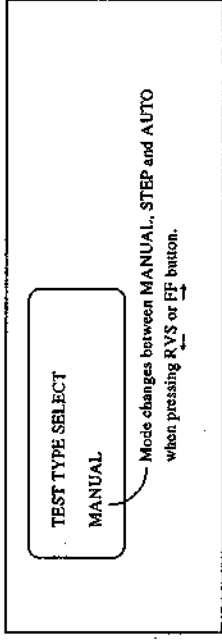


Fig. 5-2

6. MANUAL test

This mode drives the motor only during the time that the RVS or FF button is pressed.

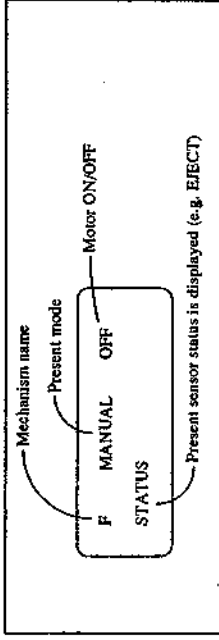


Fig. 5-3

7. STEP test

This mode drives the motor from the present status until the status changes in the direction selected with RVS or FF button.

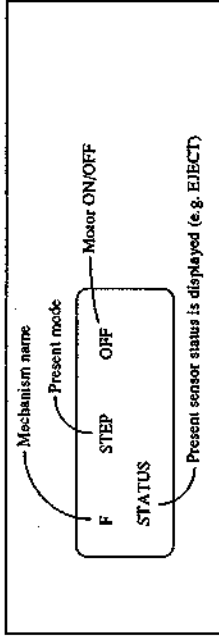


Fig. 5-4

8. AUTO test

This mode checks if the operation sequence stored for each mechanical deck is normal, and if the signals from sensors that execute a sequence of operation meet the stored sequence. The same operation is executed if either RVS or FF is pressed.

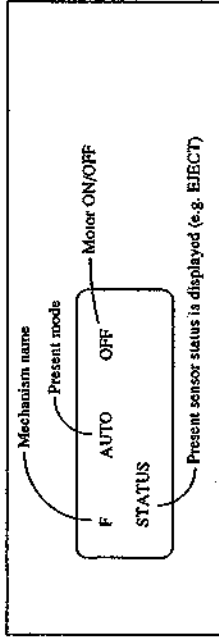


Fig. 5-5

Mechanism status (position) change sequence

After selection of mechanism, if either MANUAL or STEP mode is selected and the RVS or FF button is pressed, the mechanism status (position) can be designated. (Designated status is displayed at STATUS position.)

EJECT ↔ UNLOAD END ↔ STOP 1 ↔ HIGH

SPEED REW ↔ DEW ↔ LOAD END ↔

STOP 2 ↔ FWD. P ↔ RVS. P

MD name		F mechanism
Code	A B C D	
0	1 1 1 1	1 EJECT
0	0 1 1 1	2 UNLOAD END
1	0 1 0 0	3 STOP 1
1	0 1 1 1	4 HIGH SPEED REW
1	0 0 0 0	5 DEW
1	1 0 0 0	6
1	1 1 0 0	7 LOADE END
0	1 1 1 0	8 STOP 2
0	1 0 0 0	9
1	1 0 1 1	10 FWD. P/FWD
0	0 0 1 1	11 RVS. P/RVS
1	0 0 1 1	12

9. Battery alarm display

In case of low voltage of battery, which is a power supply of Mode Selector, the alarm message is displayed (not synchronous display).

In such a case, no operation is available, requiring battery replacement.

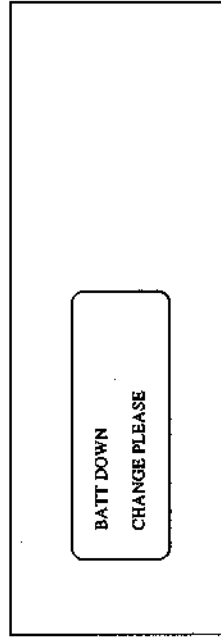


Fig. 5-6

3. PERIODIC CHECK AND MAINTENANCE

• Carry out the following maintenance and periodic checks in order not only to fully exhibit the functions and performance of the set, but also for the equipment and tape. After repairing, service the set as follows, regardless of the length of use.

3-1. CLEANING OF ROTARY DRUM ASSEMBLY

- 1) Gently apply charmois cloth (Ref. No. J-2) soaked in cleaning liquid (Ref. No.J-1) to the rotary drum assembly.
Clean it by rotating the upper rotary drum assembly slowly counterclockwise by hand.

Note : Do not rotate the motor by power or rotate the upper rotary drum assembly clockwise by hand. Also, the head tip is highly likely to be damaged if the charmois cloth is moved in a perpendicular direction to the it. make sure to follow the instructions above for cleaning the rotarydrum assembly.

3-2. CLEANING OF TAPE PATH (Fig.6)

- 1) In the **EJECT** mode, clean the tape running system (TG1, 2, 3, 4, 5, 6, 7, pinch roller, and capstan shaft) and the lower drum, using a super fine applicator (Ref. No. J - 3) soaked in the cleaning liquid.

Note : Note that no oil or grease of each link mechanism adheres to the super fine applicator (Ref. No. J - 3).

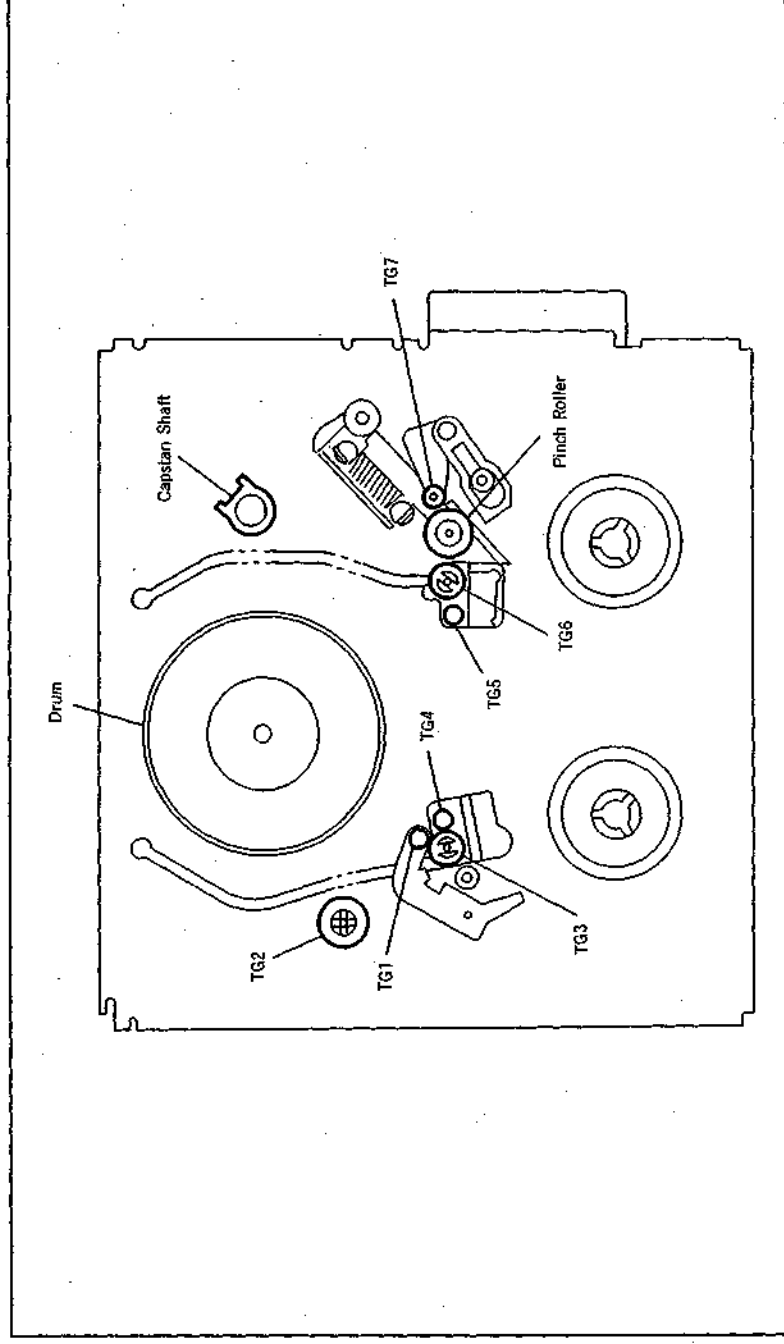


Fig. 6

3-3. PERIODIC CHECK ITEMS


Location of Maintenance and check	Hours of Use (H)										Remarks		
	500	1000	1500	2000	2500	3000	3500	4000	4500	5000			
Tape transport System	Cleaning of tape path surface	○	○	○	○	○	○	○	○	○	○	○	Be careful of oil
	Cleaning and degaussing of rotary assembly	○	○	○	○	○	○	○	○	○	○	○	Be careful of oil
Driving System	Timing belt	-	☆	-	☆	-	☆	-	☆	-	☆	-	3-953-986-01 3-954-079-01
	Timing belt (FL)	-	◎	-	◎	-	◎	-	◎	-	◎	-	Be absolutely careful not to get oil on the tape path surface.
	Capstan shaft	-	◎	-	◎	-	◎	-	◎	-	◎	-	X-3942-946-1
	Relay pulley shaft	-	◎	-	◎	-	◎	-	◎	-	◎	-	
Performance Confirmation	Loading motor	-	☆	-	☆	-	☆	-	☆	-	☆	-	
	Abnormal noise	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	
	Back tension measurement	-	☆	-	☆	-	☆	-	☆	-	☆	-	
	Brake system	-	☆	-	☆	-	☆	-	☆	-	☆	-	
	FWD, RVS torque measurement	-	☆	-	☆	-	☆	-	☆	-	☆	-	
		-	☆	-	☆	-	☆	-	☆	-	☆	-	

○ : Cleaning ◎ : Oil ☆ : Confirmation

Note : When overhauling, refer to the items above to replace parts.

Note : Concerning oil

- Be sure to use specified oil. (If you use oil with different viscosity, etc., it may cause troubles.)
Oil : Part No. 7-661-018-18 (Mitsubishi Diamond Oil Hydrofluid NT-68)
- When lubricating bearings, be sure use oil free from dust, etc. (If you use oil with dust, etc. contained, it may cause bearings to be worn out or seized.)
- A drip of oil refers to an amount attached to the tip of a ϕ 2mm stick shown in the right figure.

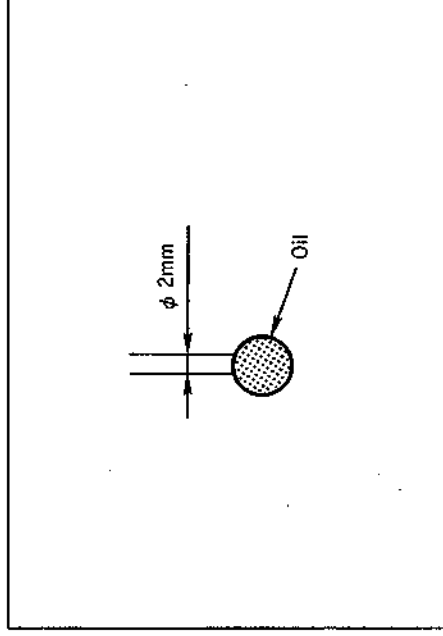







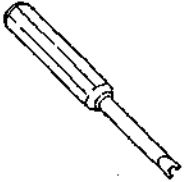
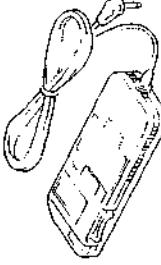
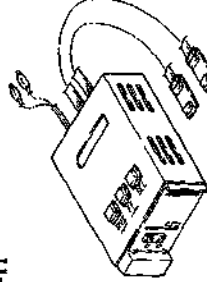
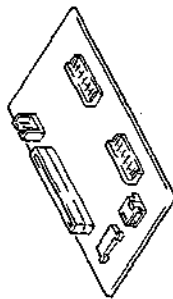
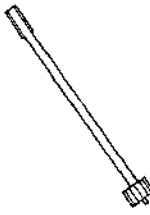


3-4. SERVICE JIGS LIST

Ref. No.	Name	Part No.	Fixture No.	Usage and Others
J-1	Cleaning fluid	Y-2031-001-0		
J-2	Chamois cloth	2-034-697-00		
J-3	Super fine applicator (Made by NIPPON APPLICATOR, P752D)			
J-4	Head degausser	Widely available		
J-5	Small mirror for adjustment Spare mirror	J-6080-029-A J-6080-030-1	SL-5052	Tape path
J-6	Alignment tape NTSC (WRS-INP) PAL (WRS-ICP)	8-967-995-02 8-967-995-07		Tape path
J-7	FWD and RVS winding torque cassette	J-6080-824-A	GD-2086	
J-8	Rotary drum jig	(Attached to the maintenance rotary upper drum)		
J-9	Screwdriver for tape path	J-6082-026-A		For tape guide adjustment
J-10	Adjusting remote controller (Modified RM-95)	J-6082-053-B		Tape path (Setting of PATH mode)
J-11	Mode selector I	J-6082-282-A		For all models
J-12	Mode selector conversion board (F, TK)	J-6082-278-A		
J-13	FWD B.T. adjusting driver chip	J-6082-187-A		

Other equipment • Oscilloscope

• Analog tester (20 kΩ)

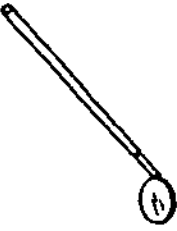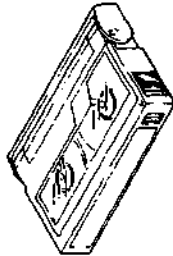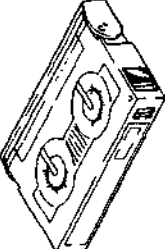J-1		J-2		J-3		J-4	
J-5		J-6		J-7		J-8	 (Attached to the maintenance rotary upper drum)
J-9		J-10		J-11		J-12	
J-13							

4. MECHANICAL CHECK, ADJUSTMENT AND REPLACEMENT

Note : Use the Mode selector II (Ref. No. J-11) for the following mechanical checks, adjustments and replacements.

Note : The modes in are those set by pressing the Mode selector buttons.

4-1. RP BLOCK (Fig.7)

1. Removal

- 1) Remove a screw ①.
- 2) Disconnect the connector ②.
- 3) Disengage claws ④ at two places and remove the RP block ③.
- 4) Remove a screw ⑤, then the RP frame ⑤ in arrow direction.

2. Mounting

- 1) Mount the RP frame with its slot ⑥ engaged with the chassis ④.
- 2) Tighten a screw ④.
- 3) Mount the RP block ③ and tighten a screw ①.
- 4) Connect the connector ②.

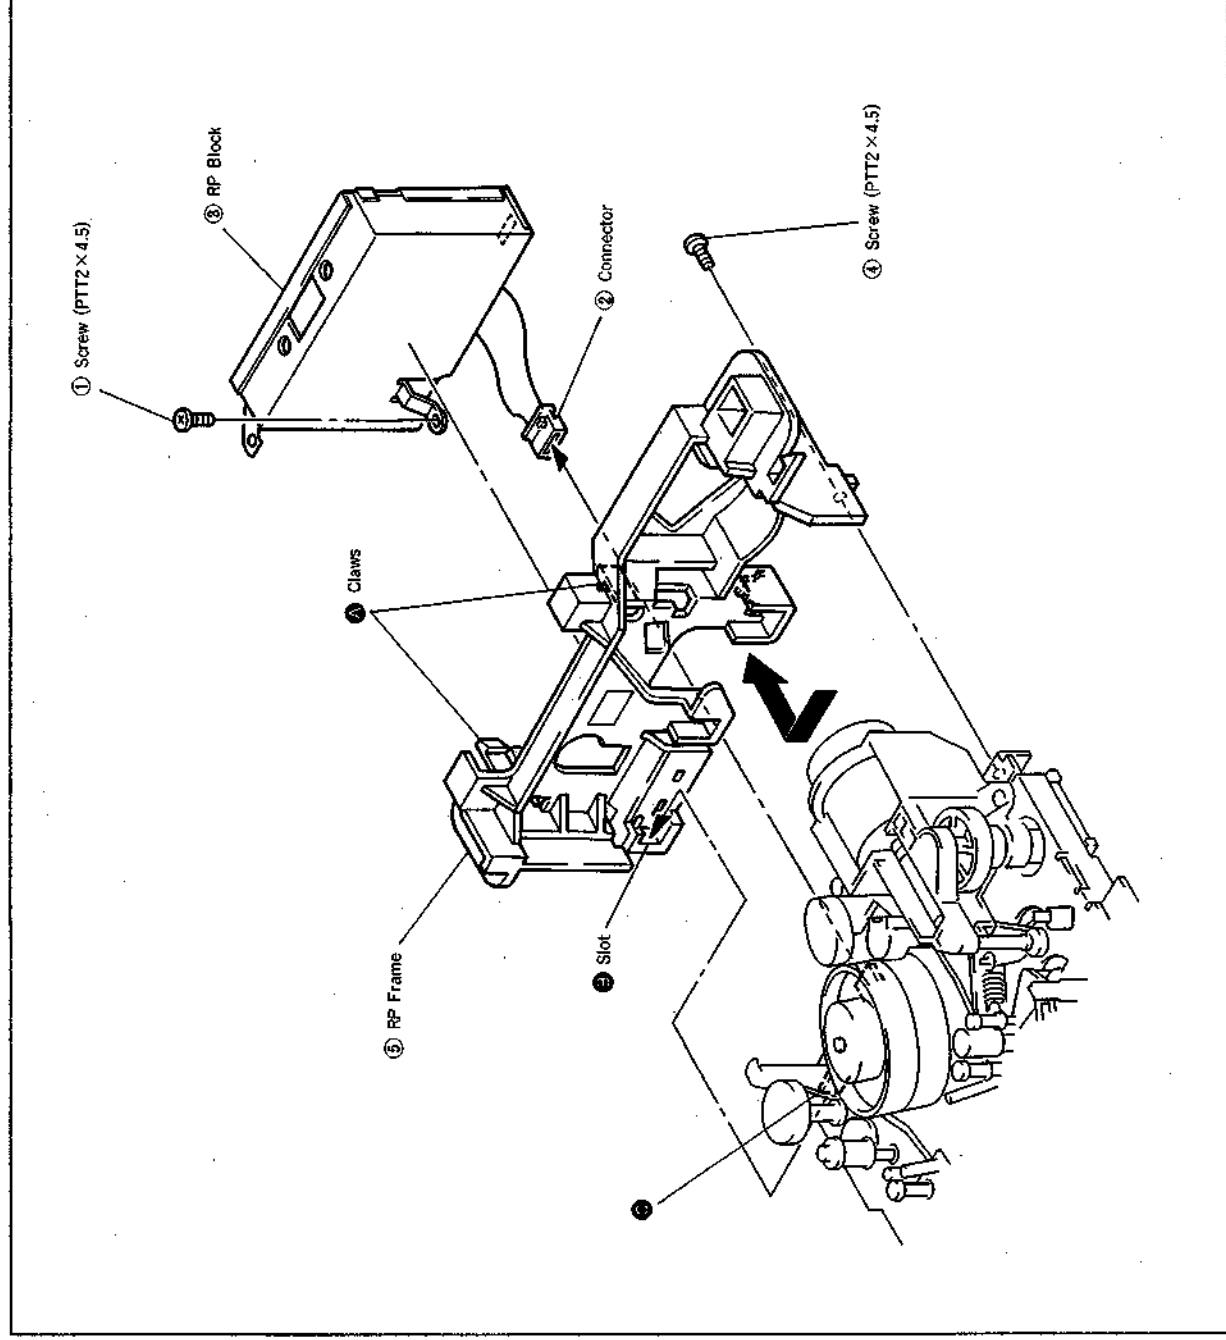


Fig. 7

4-2. IMPEDANCE ROLLER (Fig. 8)

1. Removal

- 1) Referring to 2-1, remove the FL cassette compartment assembly.
- 2) Referring to 4-1, remove the RP block.
- 3) Remove a tension coil spring ①.
- 4) Disengage a claw ④ and remove the impedance roller base assembly ②.
- 5) Disengage a claw ③ and remove the impedance roller ③.

2. Mounting

- 1) Mount the impedance roller ③, then the impedance roller base assembly ②.
- 2) Attach a tension coil spring ①.
- 3) Referring to 4-1, mount the RP block.
- 4) Referring to 2-1, mount the FL cassette compartment assembly.

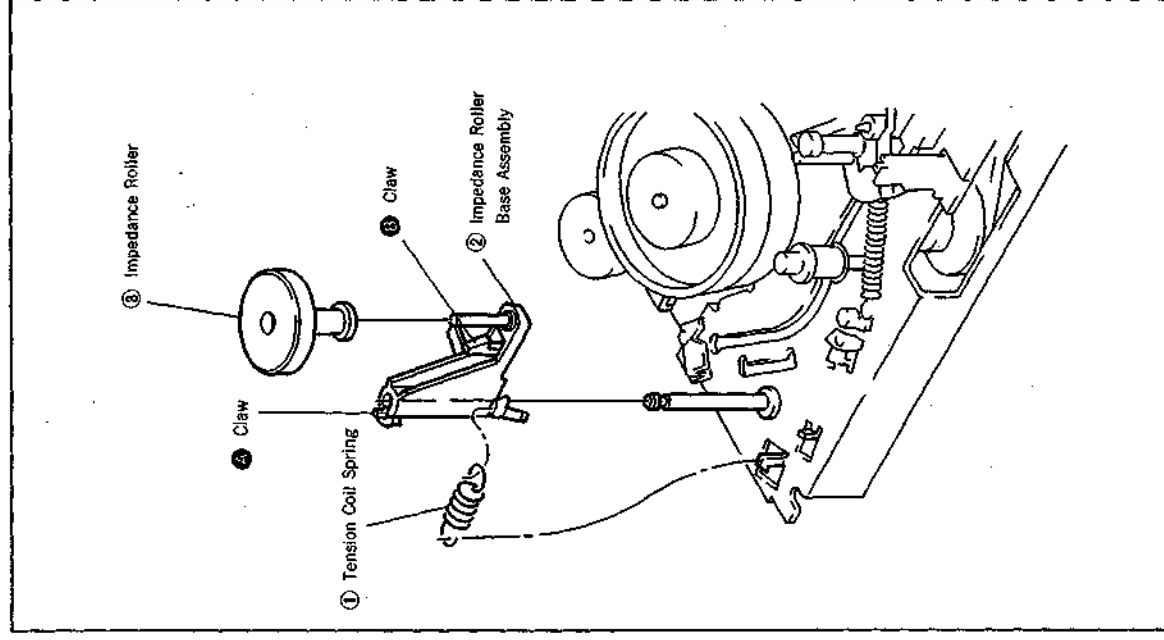


Fig. 8

4-3. HC ROLLER ASSEMBLY (Fig. 9)

1. Removal

- 1) Referring to 4-1, remove the RP block.
- 2) Disengage a claw ④ and remove the HC arm assembly ①.
- 3) Remove a lock washer ②, then the HC roller assembly ③.

2. Mounting

- 1) Mount the HC roller assembly ③ and fix with a lock washer ②.
- 2) Mount the HC arm assembly ①.
- 3) Referring to 4-1, mount the RP block.

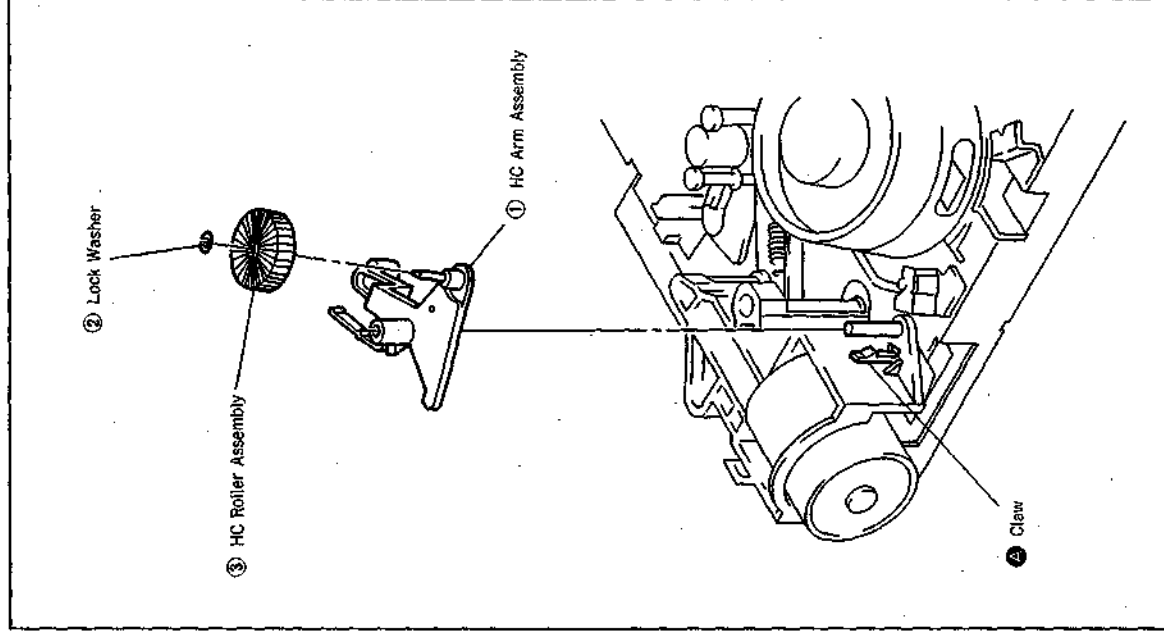


Fig. 9

4-4. PENDULUM BASE ASSEMBLY AND SOFT BRAKE ASSEMBLY (T) (Fig. 10)

1. Removal

- 1) Referring to 2-1, remove the FL cassette compartment assembly.
- 2) Remove a tension coil spring ①.
- 3) Disengage a claw ④ and remove the soft brake (T) assembly ②.
- 4) Remove two screws ③, then the reel unlock plate ④.
- 5) Remove the pendulum base assembly ⑤.

2. Mounting

- 1) Mount the pendulum base assembly ⑤ with its shaft ③ inserted in the ② of pendulum forcing arm.
- 2) Mount the reel unlock plate ④ and tighten two screws ③.
- 3) Mount the soft brake (T) assembly ② and attach a tension coil spring ①.
- 4) Referring to 2-1, mount the FL cassette compartment assembly.

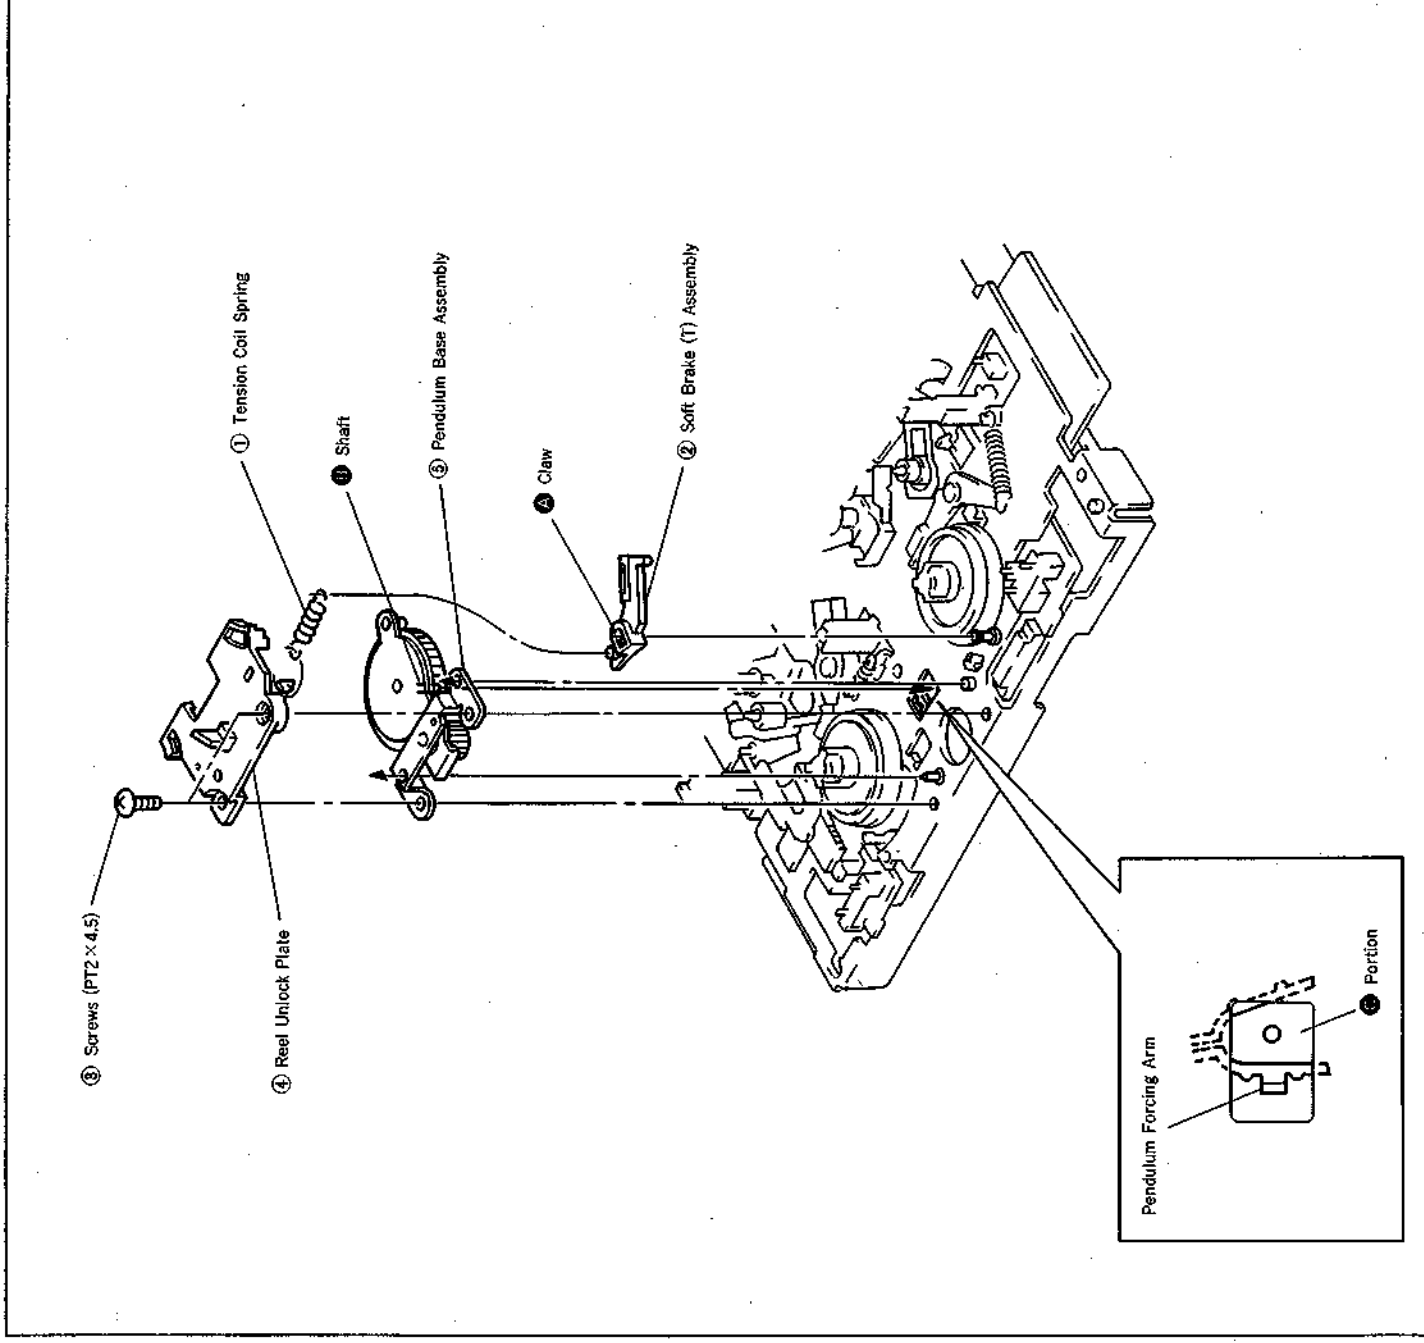


Fig. 10

4-5. BRAKE (S) ARM AND BRAKE (T) ARM ASSEMBLY (Fig. 11)

1. Removal

- 1) Referring to 2-1, remove the FL cassette compartment assembly.
- 2) Remove a tension coil spring ①.
- 3) Disengage a claw ④ and remove the brake (S) arm ②.
- 4) Remove a tension coil spring ③.
- 5) Remove a lock washer 1.5 ④, then the brake (T) arm assembly ⑤.

2. Mounting

- 1) Mount the brake (T) arm assembly ⑤ with its shaft inserted into a hole ⑥ in mechanical chassis.
- 2) Attach a lock washer ④.
- 3) Attach a tension coil spring ③.
- 4) Insert the shaft ⑦ of brake (S) arm ② into a groove ⑧ of slide plate, and the shaft ⑥ of brake (S) drive lever into a hole ⑥ in brake (S) arm respectively.
- 5) Attach a tension spring ①.
- 6) Referring to 2-1, mount the FL cassette compartment assembly.

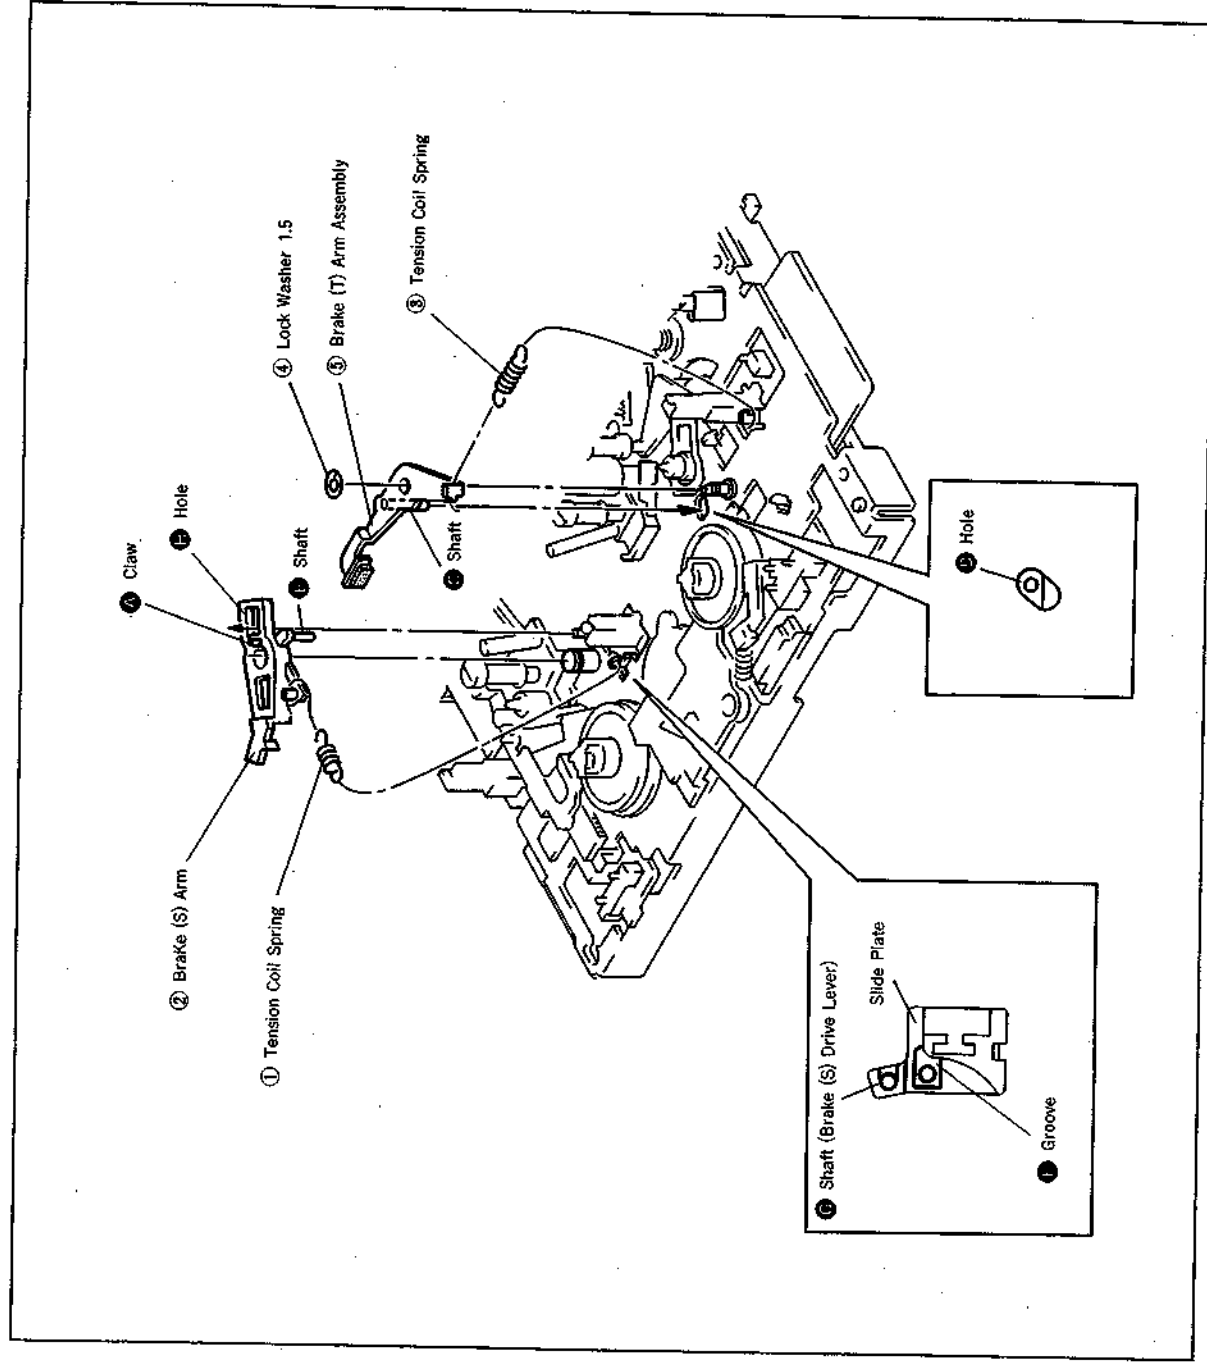


Fig. 11

4-6. TENSION REGULATOR ASSEMBLY, REEL TABLE (S) ASSEMBLY AND REEL TABLE (T) ASSEMBLY (Fig. 12)

1. Removal

- 1) Referring to 2-1, remove the FL cassette compartment assembly.
- 2) Referring to 4-5, remove the brake (S) arm and brake (T) arm assembly.
- 3) Remove a tension coil spring ①.
- 4) Remove a screw ②, then the tension regulator band assembly ③ and the tension regulator assembly ④.

Note : Do not twist or bend, or do not touch the felt surface when removing the tension regulator band assembly.

- 5) Remove the reel table (S) assembly ⑤ and the reel table (T) assembly ⑥.

2. Mounting

- 1) Mount the reel table (S) assembly ⑤ and the reel table (T) assembly ⑥.
- 2) Mount the tension regulator assembly ④ with its shafts ⑧, ⑨ inserted into holes ⑩, ⑪ in chassis respectively.
- 3) Wind the tension regulator band assembly ③ onto the reel table (S) assembly ⑤.

Note : Do not twist or bend, or do not touch the felt surface when mounting the tension regulator band assembly.

- 4) Mount the tension regulator band assembly ③, meeting with the dowels ⑦ of the chassis.
- 5) Tighten a screw ②.
- 6) Attach a tension coil spring ①.
- 7) Referring to 4-5, mount the brake (S) arm and the brake (T) arm assembly.
- 8) Referring to 2-1, mount the FL cassette compartment assembly.
- 9) Referring to 4-23, adjust the tension regulator position.
- 10) Referring to 4-24, adjust the FWD back tension.

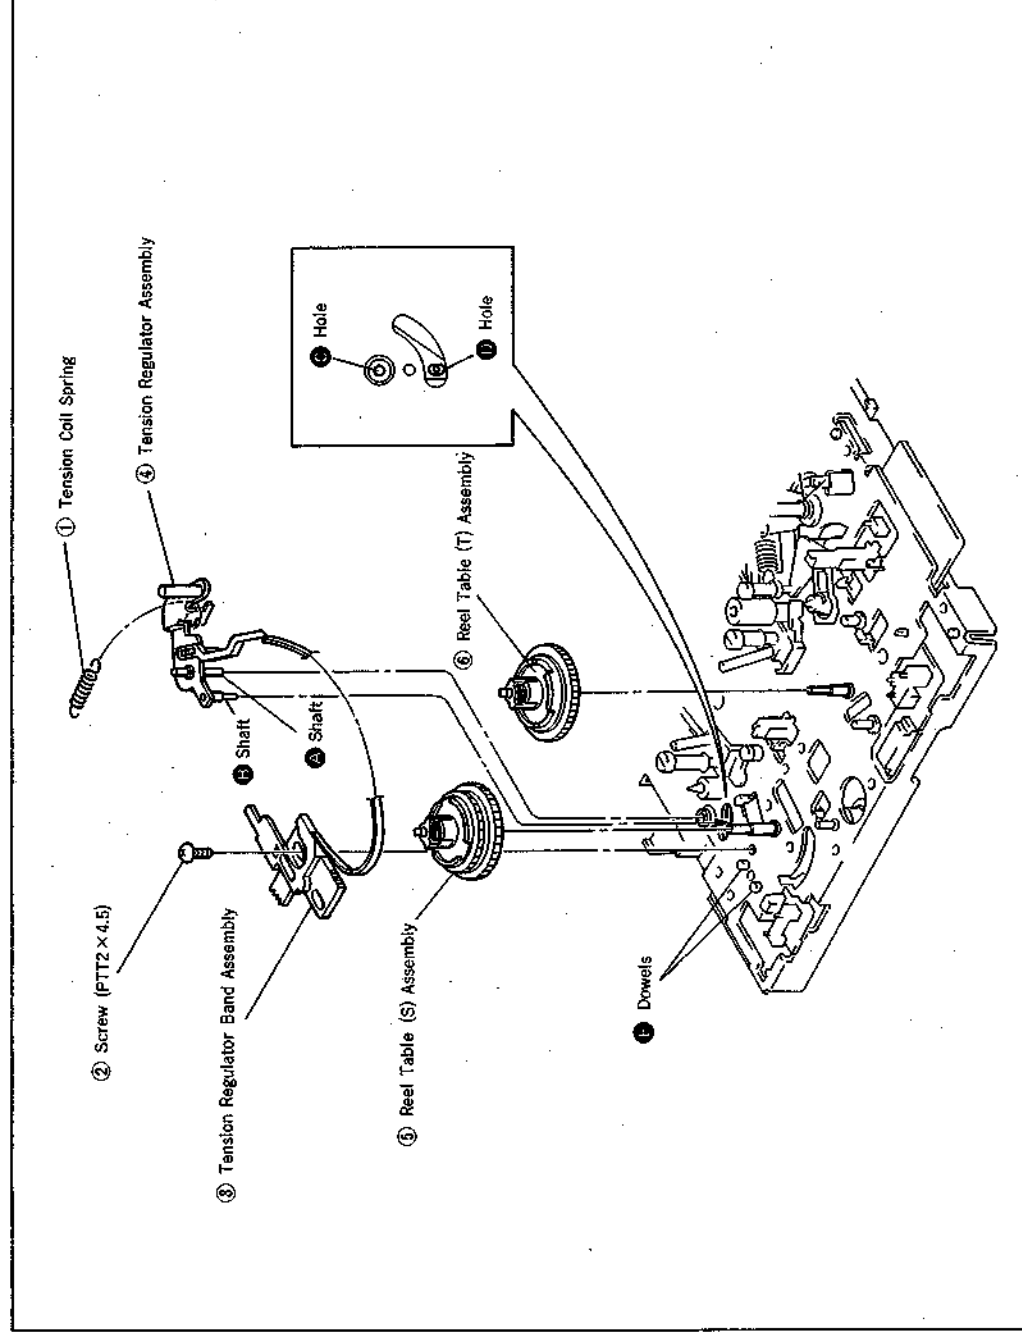


Fig. 12

4-7. TG2 ASSEMBLY (Fig. 13)

1. Removal

- 1) Remove the TG2 upper flange ①.
- 2) Remove the TG2 roller ②, TG2 sleeve ③, TG2 lower flange ④ and compression coil spring ⑤.

2. Mounting

- 1) Mount the compression coil spring ⑤, TG2 lower flange ④, TG2 sleeve ③ and TG2 roller ②.
- 2) Rotate the TG2 upper flange ① by 4 to 6 turns to fix on the shaft.

3. Presetting of TG2 Height

- 1) Rotate to adjust the TG2 upper flange ① so that the height from top surface of mechanical chassis to top surface of TG2 upper flange is 22.12mm.

Note : After mounting, perform 5. Tape Path Adjustment.

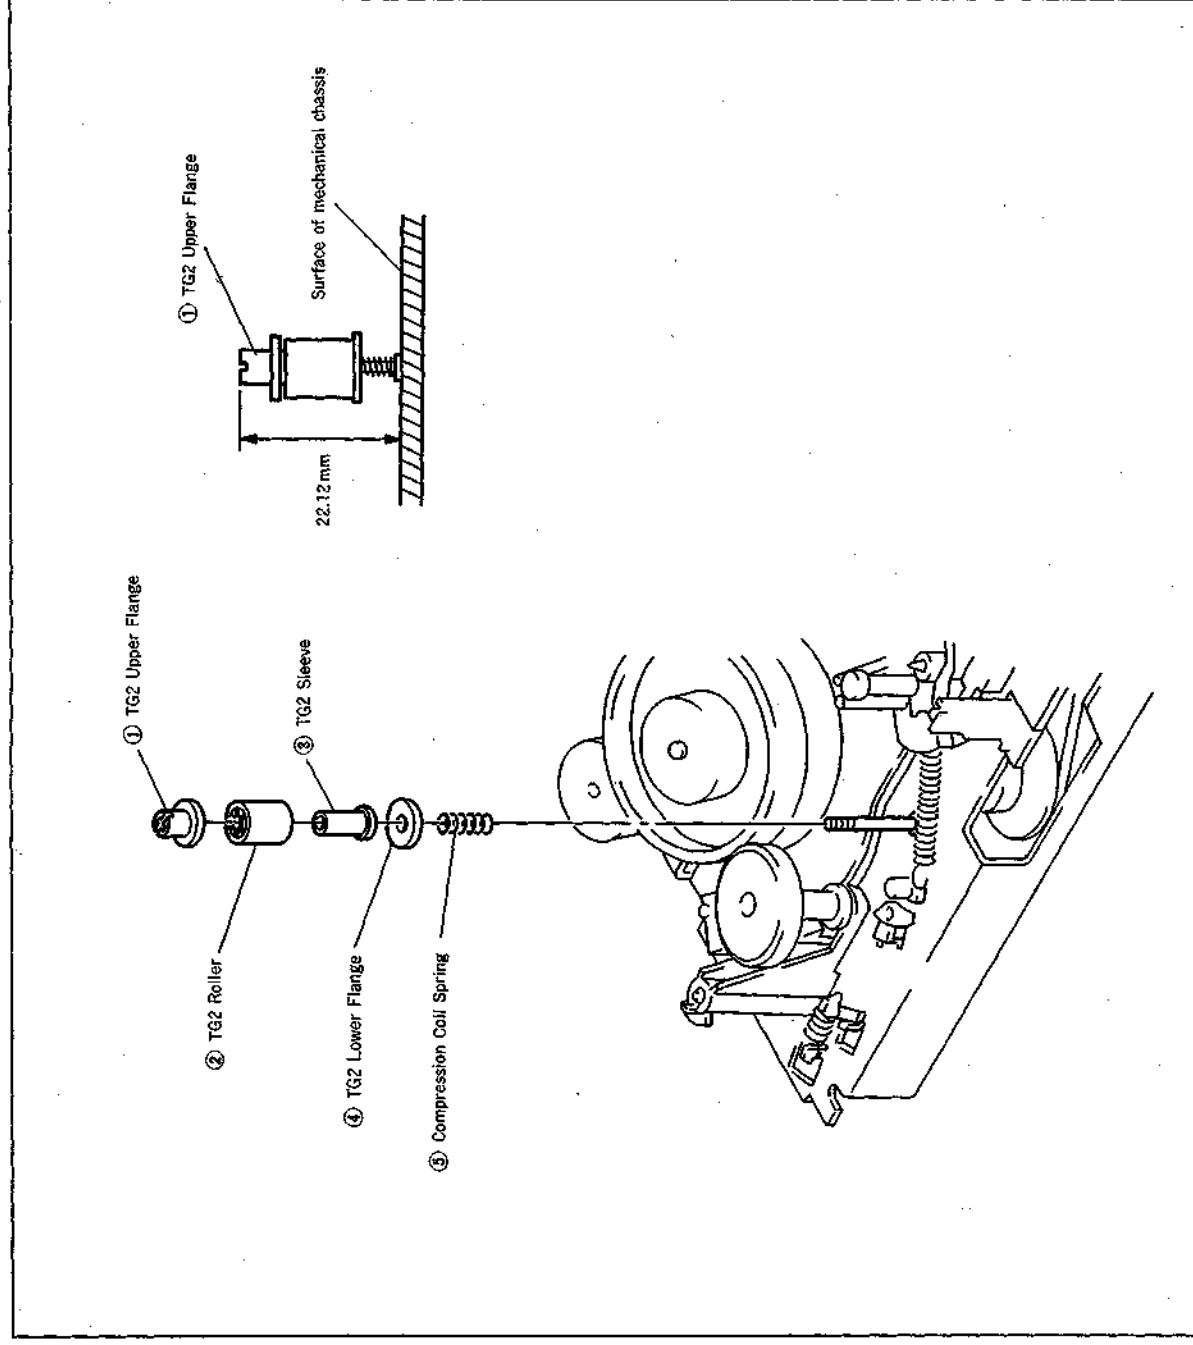


Fig. 13

4-8. TG7 ARM ASSEMBLY (Fig.14)

1. Removal

- 1) Referring to 2-1, remove the FL cassette compartment assembly.
- 2) Remove the TG7 height adjusting screw ①, then the TG7 spacer ② and reel table thrust washer ③.
- 3) Remove the TG7 arm assembly ④ and a torsion coil spring ⑤.

2. Mounting

- 1) Insert the shaft ④ of TG7 arm assembly ④ into a groove ⑥ in TG7 drive lever, and attach a torsion coil spring ⑤ as shown below.
- 2) Mount a reel table thrust washer ③ and a TG7 spacer ②, and tighten tentatively the TG7 height adjusting screw. At this time, the height from mechanical chassis top surface to TG7 arm top surface should be 3.3mm.
- 3) Referring to 2-1, mount the FL cassette compartment assembly.

Note : After mounting, perform 5. Tape Path Adjustment.

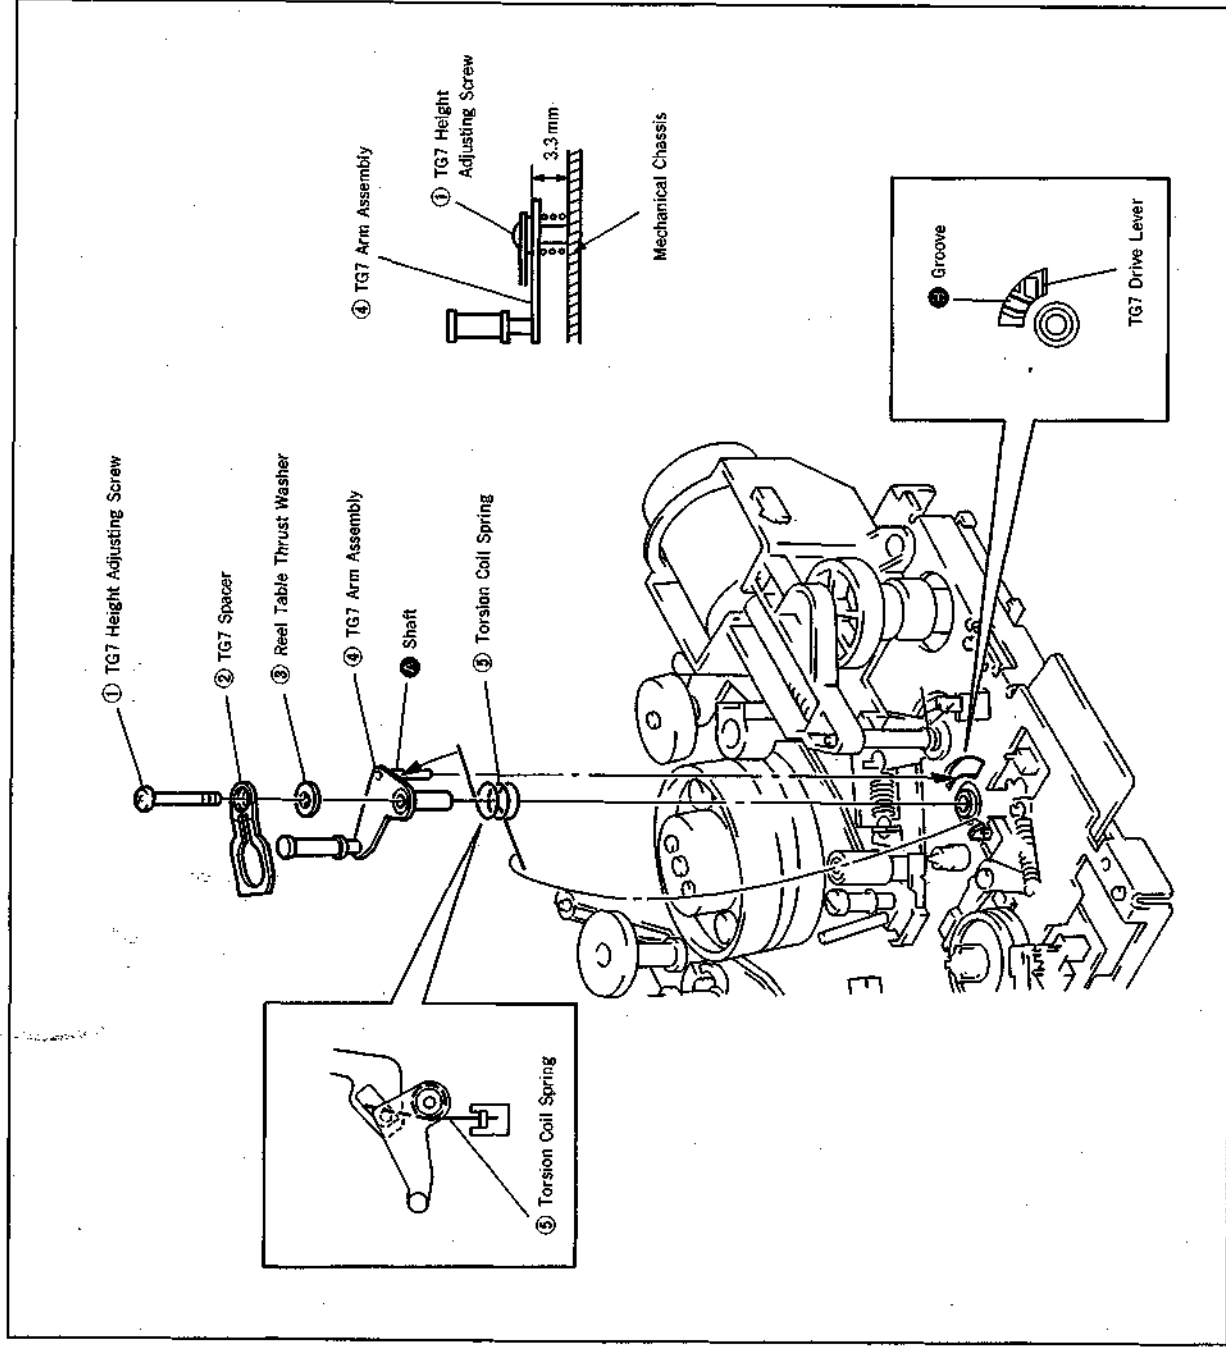


Fig. 14

4-9. CAM MOTOR ASSEMBLY (Fig. 15)

1. Removal

- 1) Referring to 4-1, remove the RP block.
- 2) Remove a screw ①.
- 3) Disengage a claw ④ and remove the cam motor assembly ② in the arrow direction.

2. Mounting

- 1) Mount the cam motor assembly ② with its hole ⑤ inserted into the shaft ⑥ of chassis.
- 2) Tighten a screw ①.
- 3) Referring to 4-1, mount the RP block.

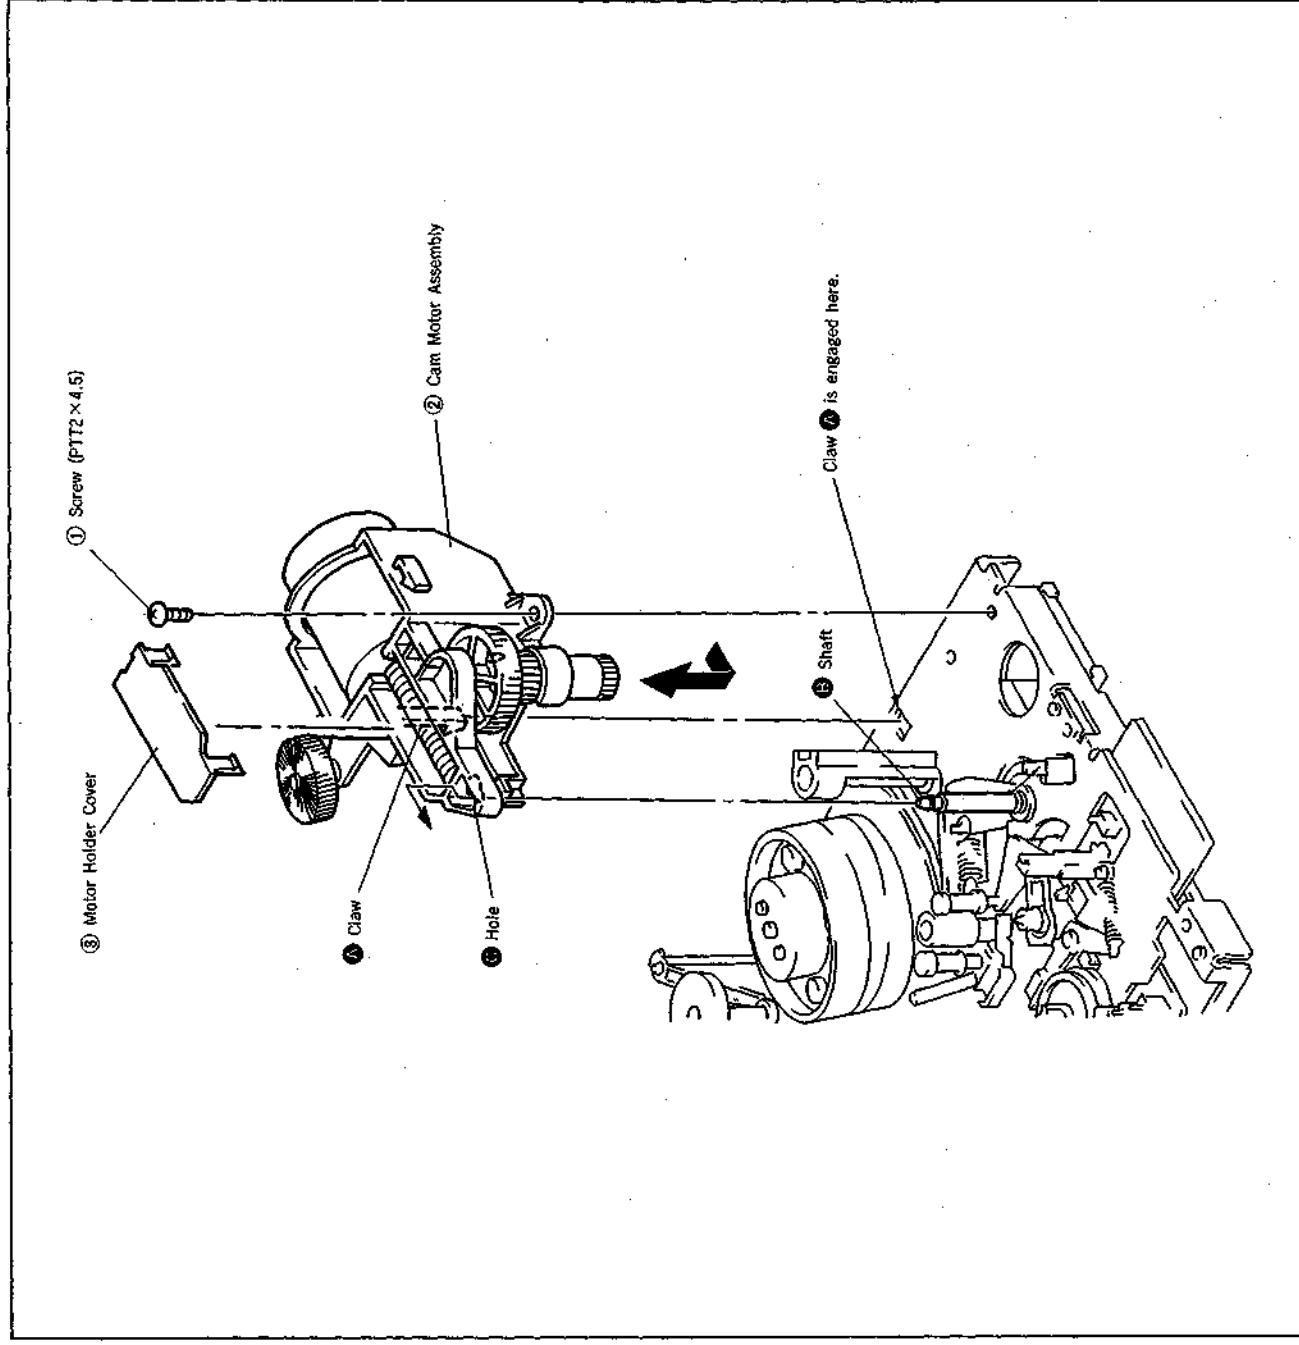


Fig. 15

4-10. PINCH ARM ASSEMBLY (Fig. 16)

1. Removal

- 1) Referring to 2-1, remove the FL cassette compartment assembly.
- 2) Execute the loading until the pinch arm assembly ② becomes level.
- 3) Referring to 4-9, remove the cam motor assembly.
- 4) Remove a torsion coil spring ①, then the pinch arm assembly ②.

2. Mounting

- 1) Mount the pinch arm assembly ② with its hole ④ inserted into the claw ⑤ of pinch drive lever on the chassis.
- 2) Attach a torsion coil spring ① as shown below.
- 3) Referring to 4-9, mount the cam motor assembly.
- 4) Referring to 2-1, mount the FL cassette compartment assembly.

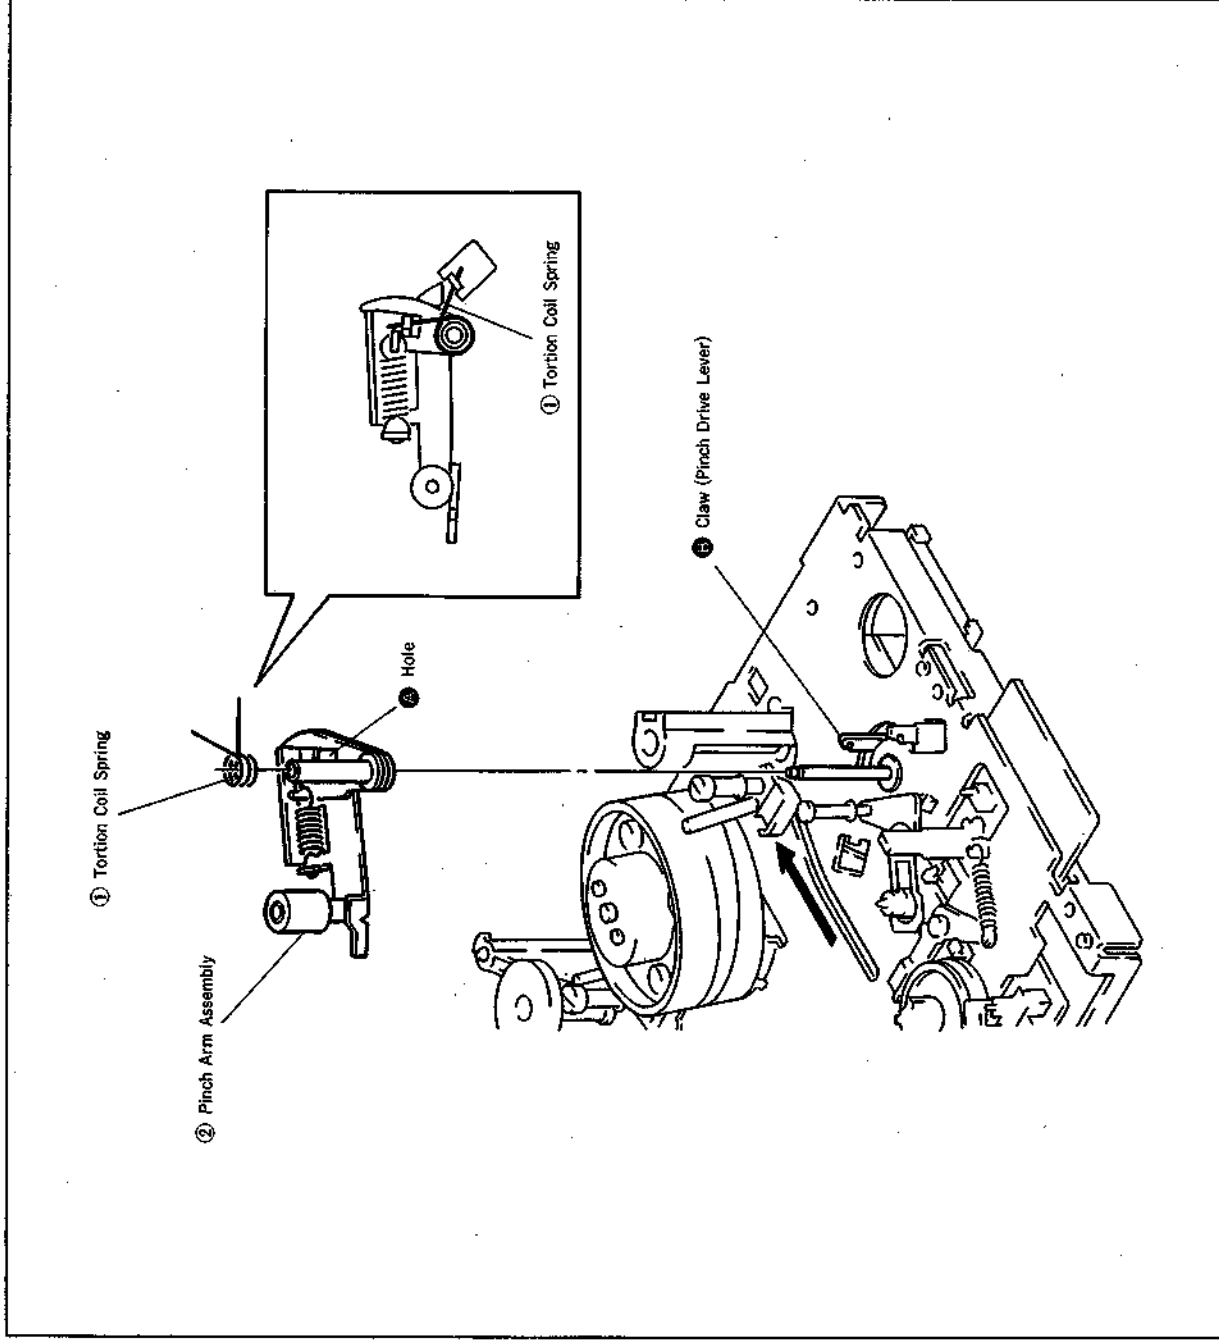


Fig. 16

4-11. WORM WHEEL BRACKET (Fig. 17)

1. Removal

- 1) Remove a screw ①, then the shaft earth assembly ②.
- 2) Remove a screw ③, then the worm wheel bracket ④ in the arrow direction.

2. Mounting

- 1) Mount the worm wheel bracket ④ with its hole ⑤ inserted into the shaft ⑥ of mechanical chassis.
- 2) Tighten a screw ③.
- 3) Mount the shaft earth assembly ② and tighten a screw ①.

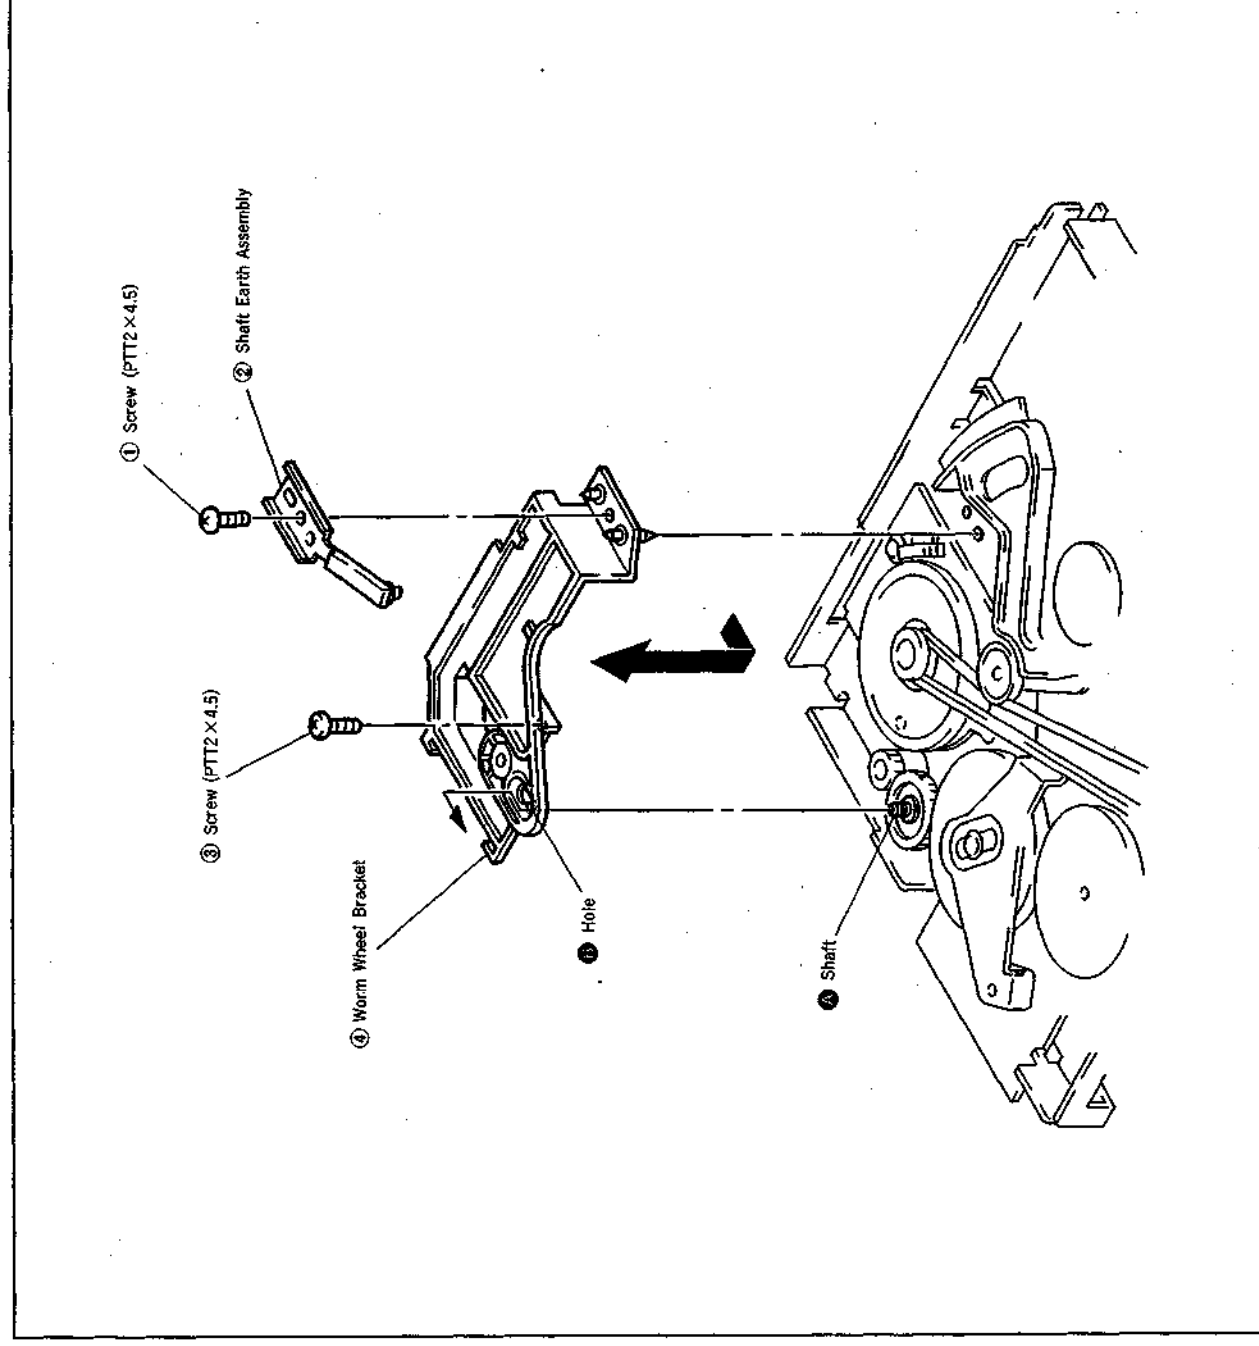


Fig. 17

4-12. CAPSTAN MOTOR (Fig. 18)

1. Removal

- 1) Referring to 4-11, remove the worm wheel bracket.
- 2) Disengage the timing belt ①.
- 3) Remove a screw ②, then the capstan motor ③.

2. Mounting

- 1) Mount the capstan motor ③ with its dowels ④ inserted into holes ⑤ in the mechanical chassis at two places.

Note : Do not touch the capstan motor shaft, oil seal and rotor.

- 2) Tighten a screw ②.
- 3) Engage the timing belt ①.
- 4) Referring to 4-11, mount the worm wheel bracket.

Note : After mounting, perform 5. Tape Path Adjustment.

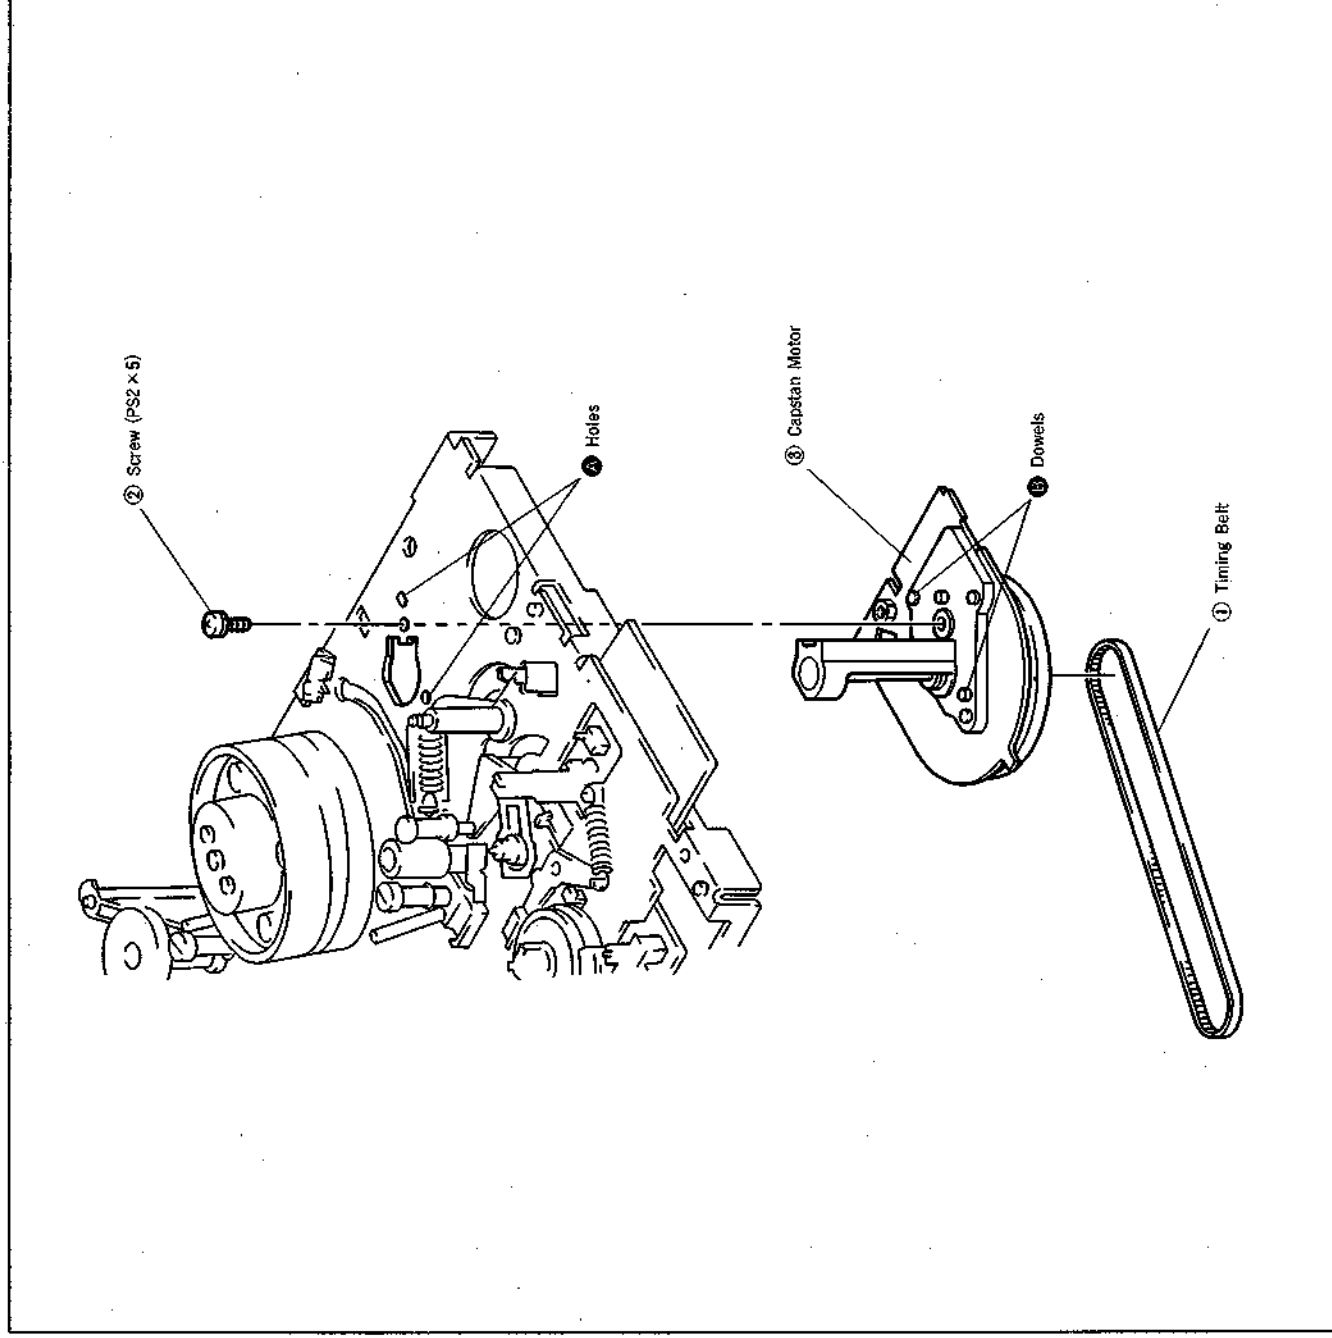


Fig. 18

4-13. DRUM ASSEMBLY (Fig. 19)

1. Removal

- 1) Referring to 4-1. RP Block, disconnect the connector for drum.
- 2) Remove three screws (M2x5) ①.
- 3) Remove the drum assembly ②.

Note : Do not touch the outer surface of drum; hold portions (A) and (B) of drum.

2. Mounting

- 1) Mount the drum ② while aligning with dowels (A) of chassis at two places.

Note : Do not touch the outer surface of drum; hold portions (A) and (B) of drum.

2) Tighten three screws (M2x5) ①.

2)-1 Tighten a screw (A) to the torque 29.42mN·m (300g·cm).

2)-2 Tighten a screw (B) to the torque 29.42mN·m (300g·cm), then return 45°.

2)-3 Tighten a screw (C) to the torque 29.42mN·m (300g·cm), then return 45°.

Note : After mounting, perform 5. Tape Path Adjustment.

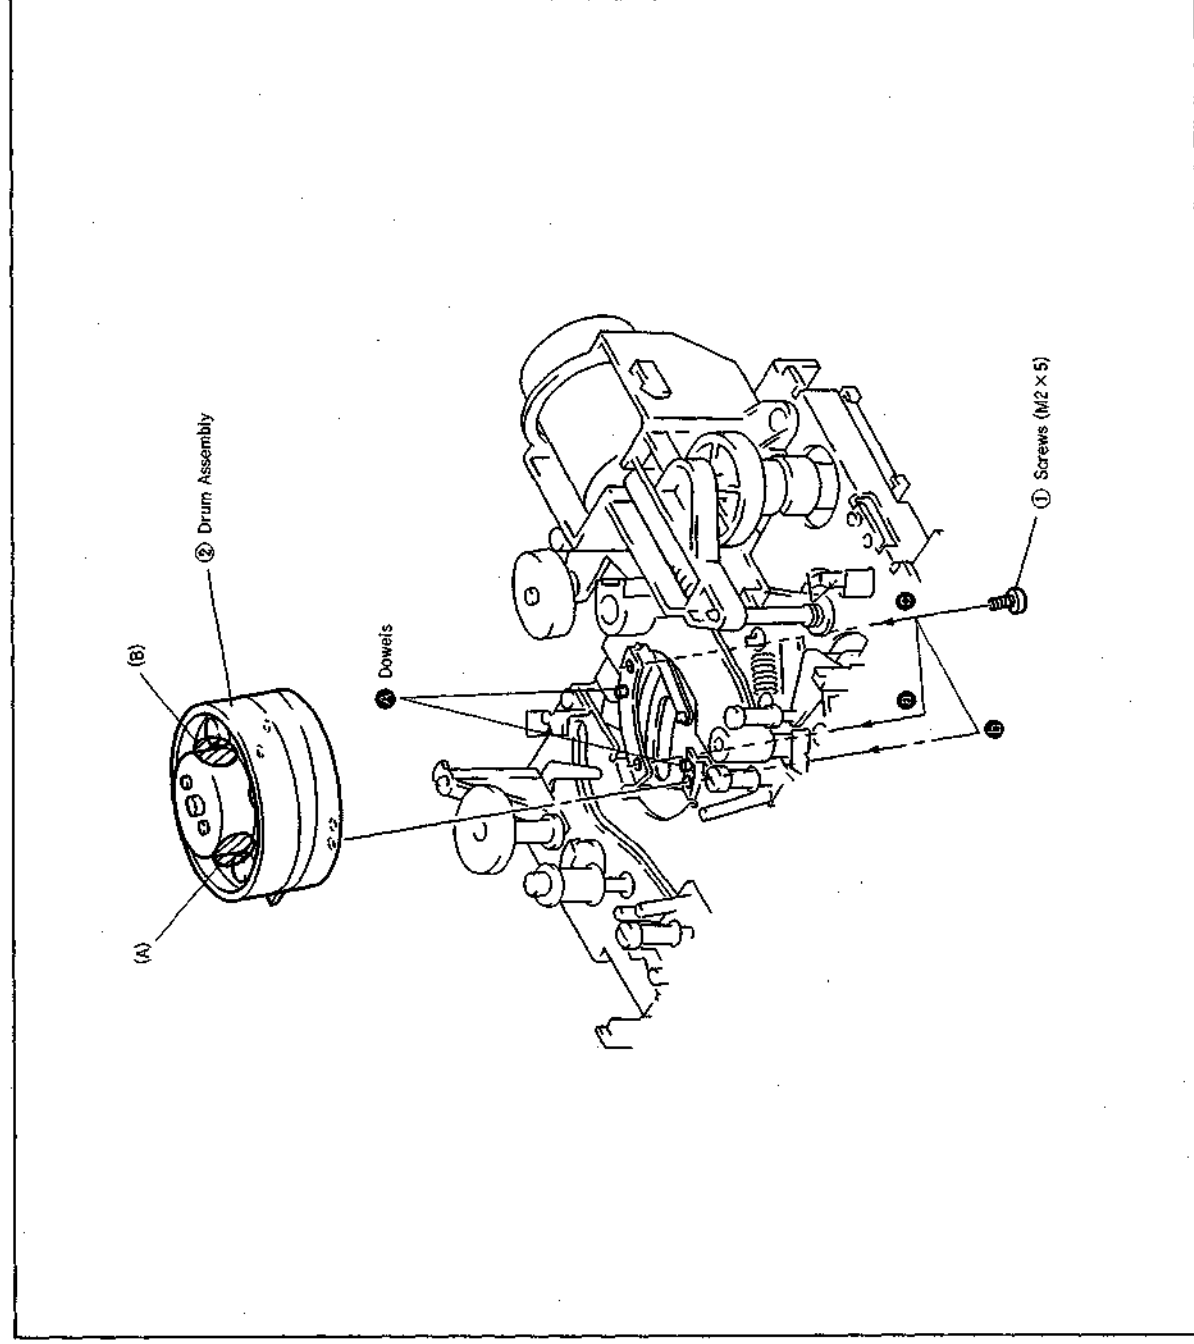


Fig. 19

4-14. PULLEY BASE ASSEMBLY (Fig. 20)

1. Removal

- 1) Remove a screw ①, then the W2, middle ②.
- 2) Disengage a claw ④ and remove the pulley base assembly ③.

2. Mounting

- 1) Mount the pulley base assembly ③ on the shaft ⑤ of mechanical chassis, and engage the timing belt ⑥ with the pulley ④.
- 2) Mount the W2, middle ② and tighten tentatively the screw ①.
- 3) Tighten the screw ① at the position where the portion (A) of pulley base assembly ③ is pushed with 14g force.

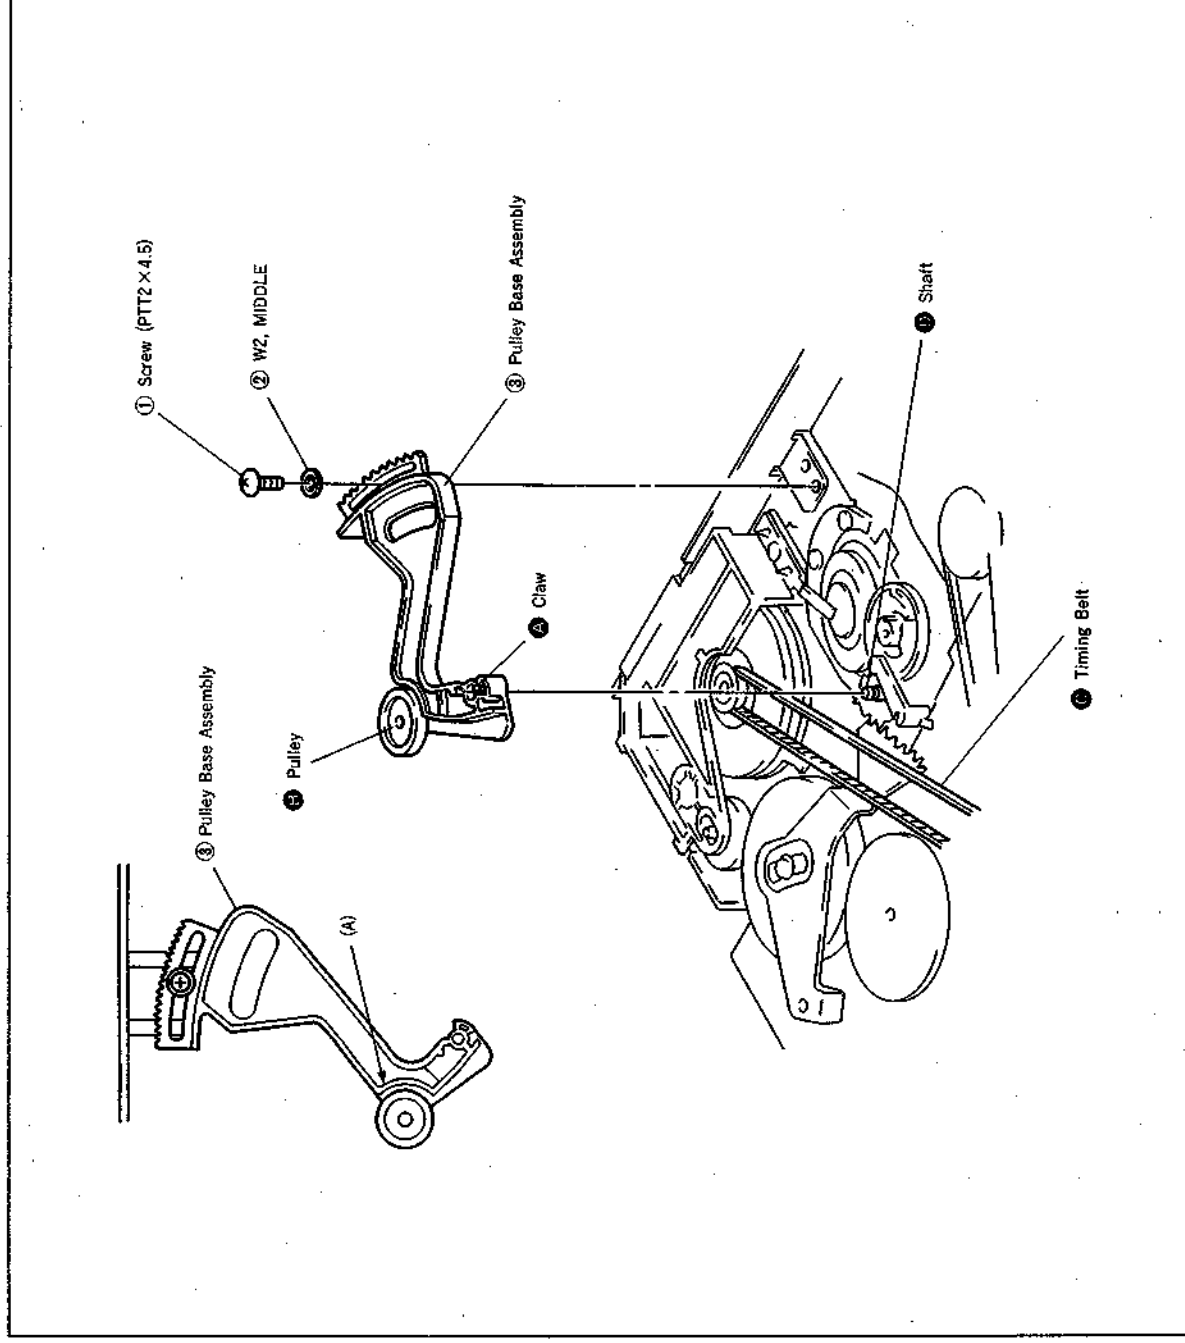


Fig. 20

4-15. LOADING DRIVE LEVER (Fig. 21)

1. Removal

- 1) Disengage the timing belt ①.
- 2) Remove a screw ②, then the W3, small ③.
- 3) Remove the loading drive lever ④.

2. Mounting

- 1) Mount the loading drive lever ④ on the shaft ⑥ of chassis with its shaft ⑤ inserted into the loading roller ⑤. At this time, insert the shaft ③ of main cam into the hole ⑦ in loading drive lever, the shaft ② of loading drive lever into a slot ⑧ in main cam, and align a line ⑦ on loading drive lever with a line ⑥ on loading gear (T) respectively.
- 2) Mount the W3, small ③ and tighten tentatively the screw ②.
- 3) Engage the timing belt ①.

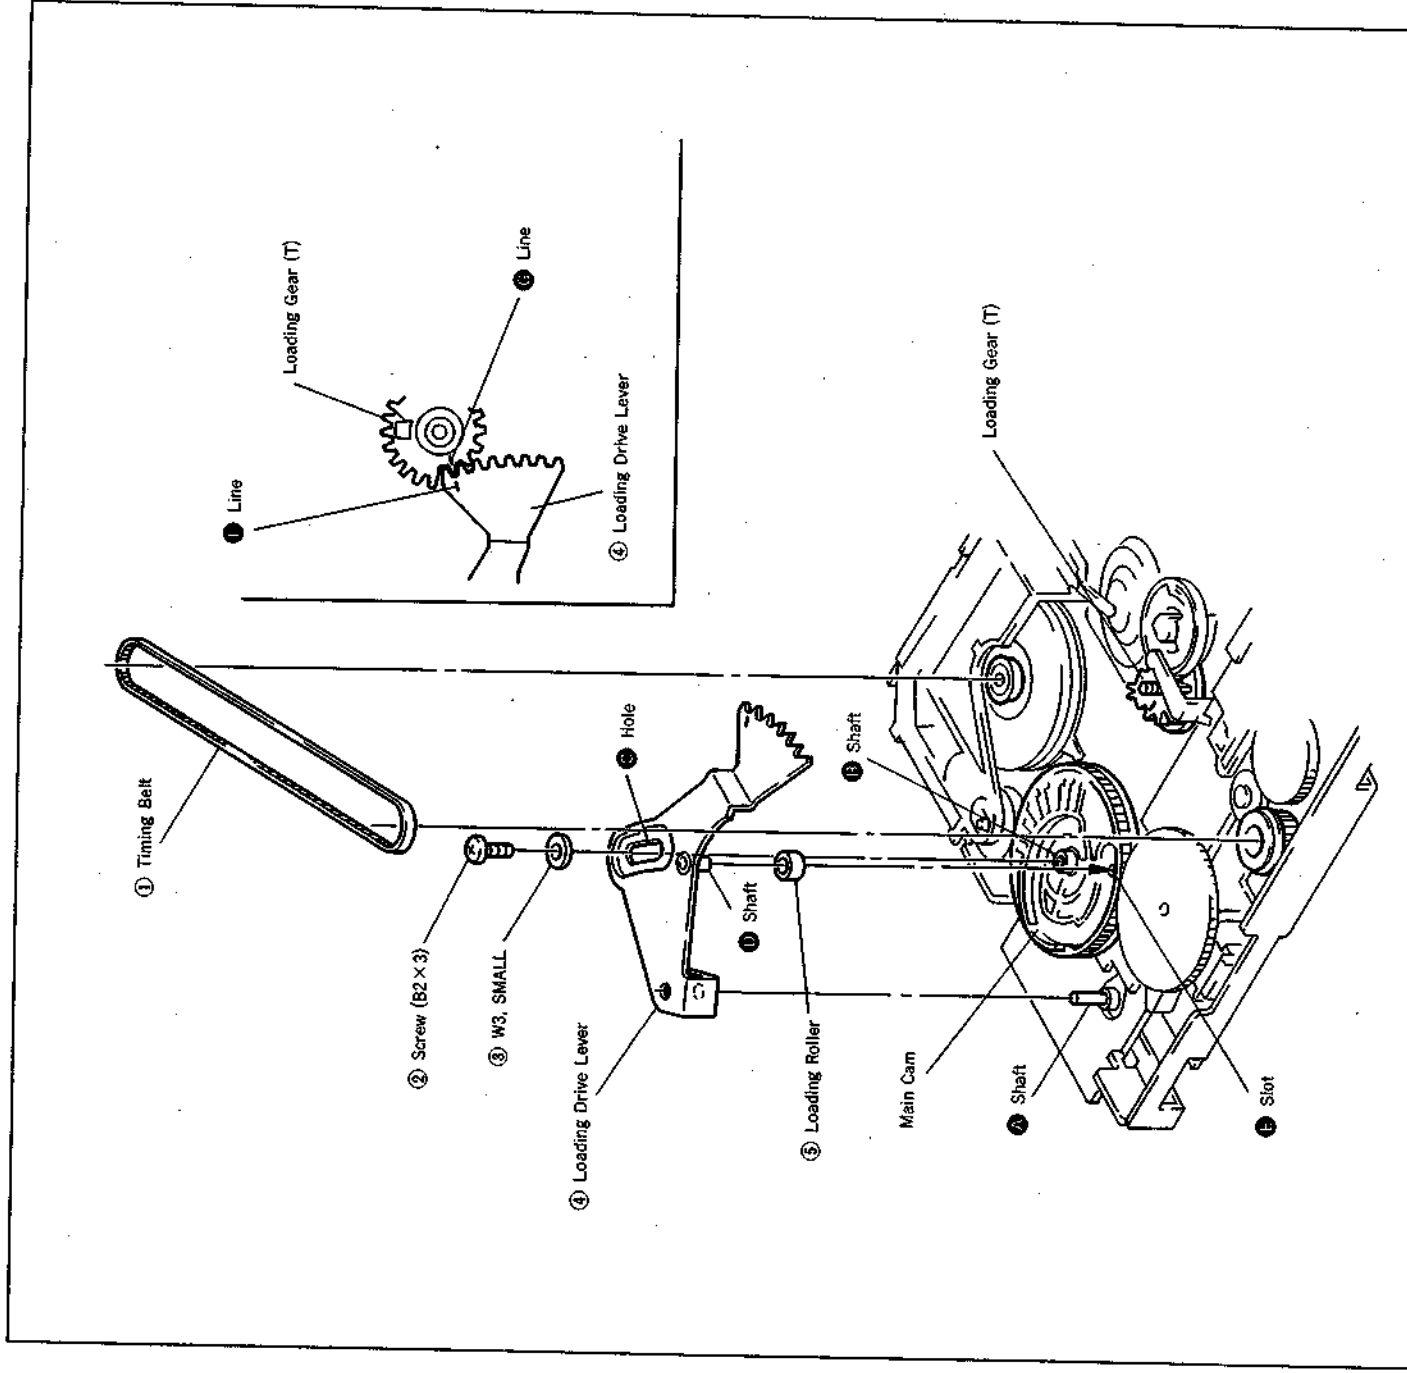


Fig. 21

4-16. ROTARY SWITCH AND MAIN CAM (Fig. 22)

1. Removal

- 1) Referring to 4-11, remove the worm wheel bracket.
- 2) Referring to 4-15, remove the loading drive lever.
- 3) Remove the cam relay gear ①.
- 4) Disengage claws ② at two places, and disconnect the rotary switch ② from the connector ③.
- 5) Remove the main cam ③.

2. Mounting

- 1) Mount the main cam ③ with its cam groove ④ inserted into the shaft ⑤ of slide plate drive lever, and cam groove ④ into the shaft ⑥ of pinch drive lever respectively.
- 2) Referring to 4-15, mount the loading drive lever.
- 3) Mount the cam relay gear ①.
- 4) Referring to 4-11, mount the worm wheel bracket.
- 5) Connect the rotary switch ② to the connector ③ while aligning ▲ marks each other, and its recess ⑦ with the recess ⑧ of main cam ③.

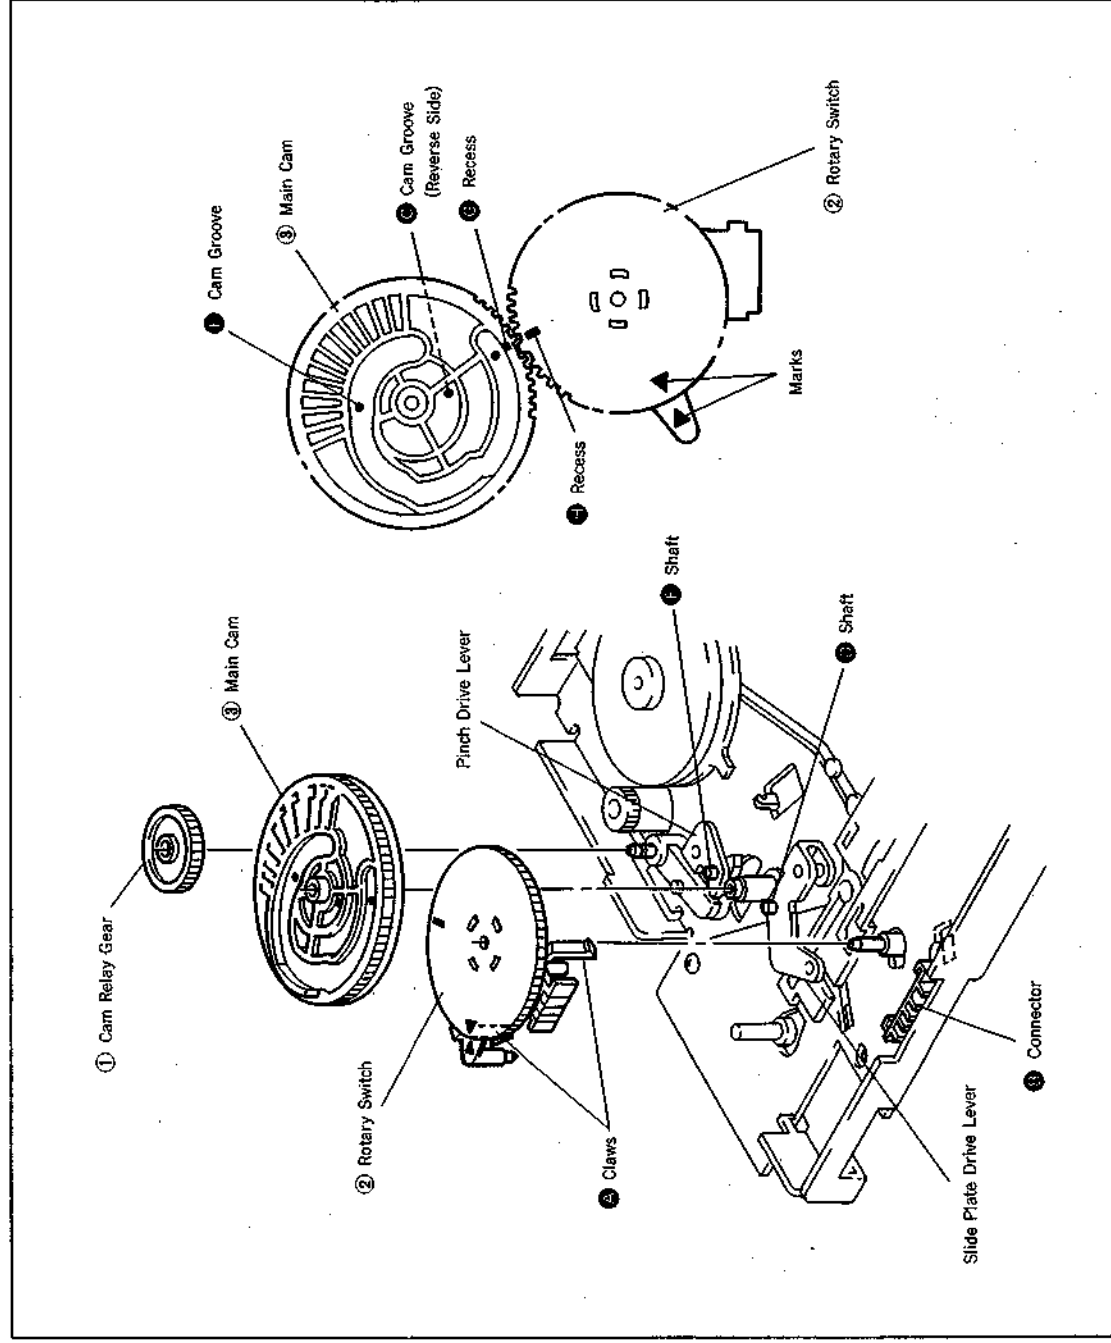


Fig. 22

4-17. SLIDE PLATE (Fig. 23)

1. Removal

- 1) Referring to 4-11, remove the worm wheel bracket.
- 2) Referring to 4-15, remove the loading drive lever.
- 3) Referring to 4-16, remove the rotary switch and main cam.
- 4) Remove the slide plate drive lever ①.
- 5) Disengage the timing belt ②.
- 6) Disengage a claw ④ and remove the FL pulley gear (drive) ③.
- 7) Remove a tension coil spring ④, then the FL switching arm assembly ⑤.
- 8) Remove the brake (S) drive lever ⑧.
- 9) Remove two lock washers 1.5 ⑥, then the slide plate ⑦.

2. Mounting

- 1) Mount the slide plate ⑦ with its groove ③ inserted into the shaft ⑤ of chassis, the groove ① into the shaft ⑥ of S take-up assembly, and the groove ⑦ into the shaft ⑥ respectively. At this time, insert the shaft ④ into the groove ④ in slide plate while holding the tension regulator sub-arm toward the arrow.
- 2) Mount two lock washers 1.5 ⑥.
- 3) Referring to 3) of Mounting in 4-18, mount the brake (S) drive lever ⑧.
- 4) Mount the FL switching arm assembly ⑤ and a tension coil spring (4).
- 5) Mount the FL pulley gear (drive) ③ and engage the timing belt ②.
- 6) Mount the slide plate drive lever ① with its shaft ④ inserted into a groove ④ in slide plate ⑦, and its hole into the shaft ④ of chassis.
- 7) Referring to 4-16, mount the rotary switch and main cam.
- 8) Referring to 4-15, mount the loading drive lever.
- 9) Referring to 4-11, mount the worm wheel bracket.

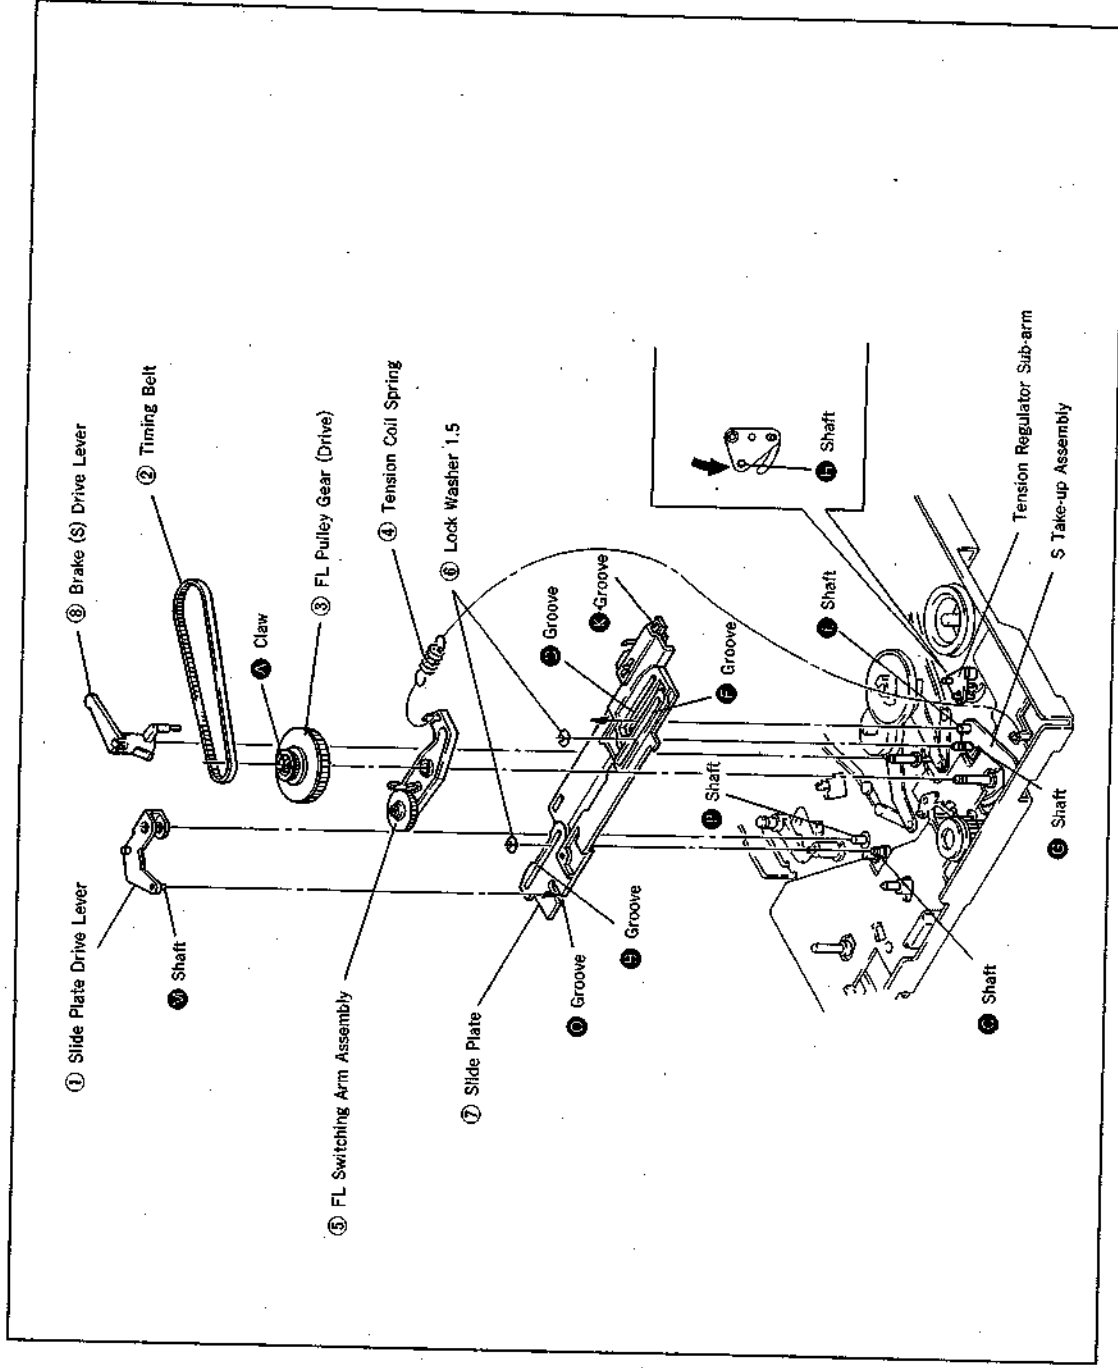


Fig. 23

4-18. LOADING GEAR (S) ASSEMBLY (Fig. 24)

1. Removal

- 1) Referring to 4-15, remove the loading drive lever.
- 2) Disengage a claw **A** and remove the brake (S) drive lever **1**.
- 3) Remove the coaster leaf spring **2**.
- 4) Disengage a claw **B** and remove the loading gear (S) assembly **3**.

2. Mounting

- 1) Mount the loading gear (S) assembly **3** on the shaft **C** of chassis with its arm engaged with the shaft **D** of coaster. At this time, align the portion **E** of loading gear (T) assembly with the portion **F** of loading gear (S) assembly.
- 2) Mount the coaster leaf spring **2**.
- 3) Mount the brake (S) drive lever **1** on the shaft **B** of chassis with its shaft **A** inserted into the portion **G** of brake (S) arm, and the shaft **H** into the groove **I** in loading gear (S) assembly **3**.
- 4) Referring to 4-15, mount the loading drive lever.

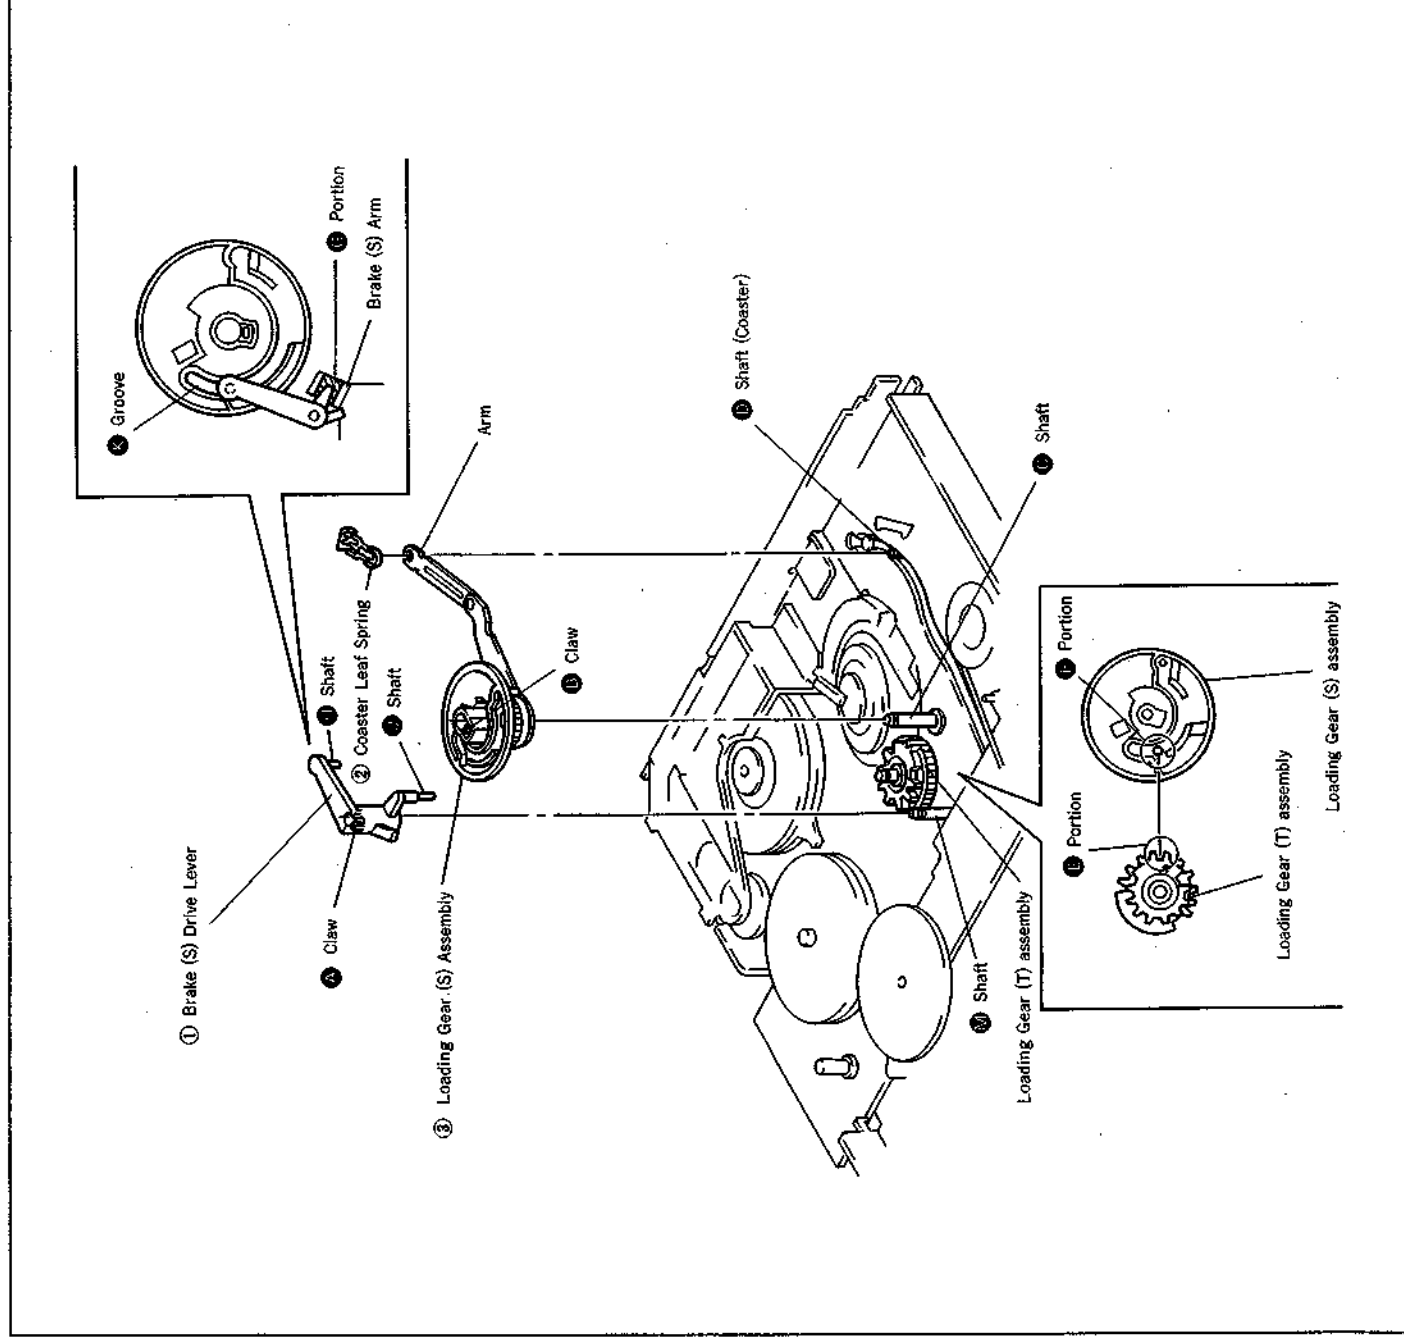


Fig. 24

4-19. LOADING GEAR (T) ASSEMBLY (Fig. 25)

1. Removal

- 1) Referring to 4-15, remove the loading drive lever.
- 2) Referring to 4-18, remove the loading gear (S) assembly.
- 3) Remove the coaster leaf spring ①, then the loading gear (T) assembly ②.

2. Mounting

- 1) Mount the loading gear (T) assembly ② on the shaft A of chassis with its arm engaged with the shaft B of coaster.
- 2) Mount the coaster leaf spring ①.
- 3) Referring to 4-18, mount the loading gear (S) assembly.
- 4) Referring to 4-15, remove the loading drive lever.

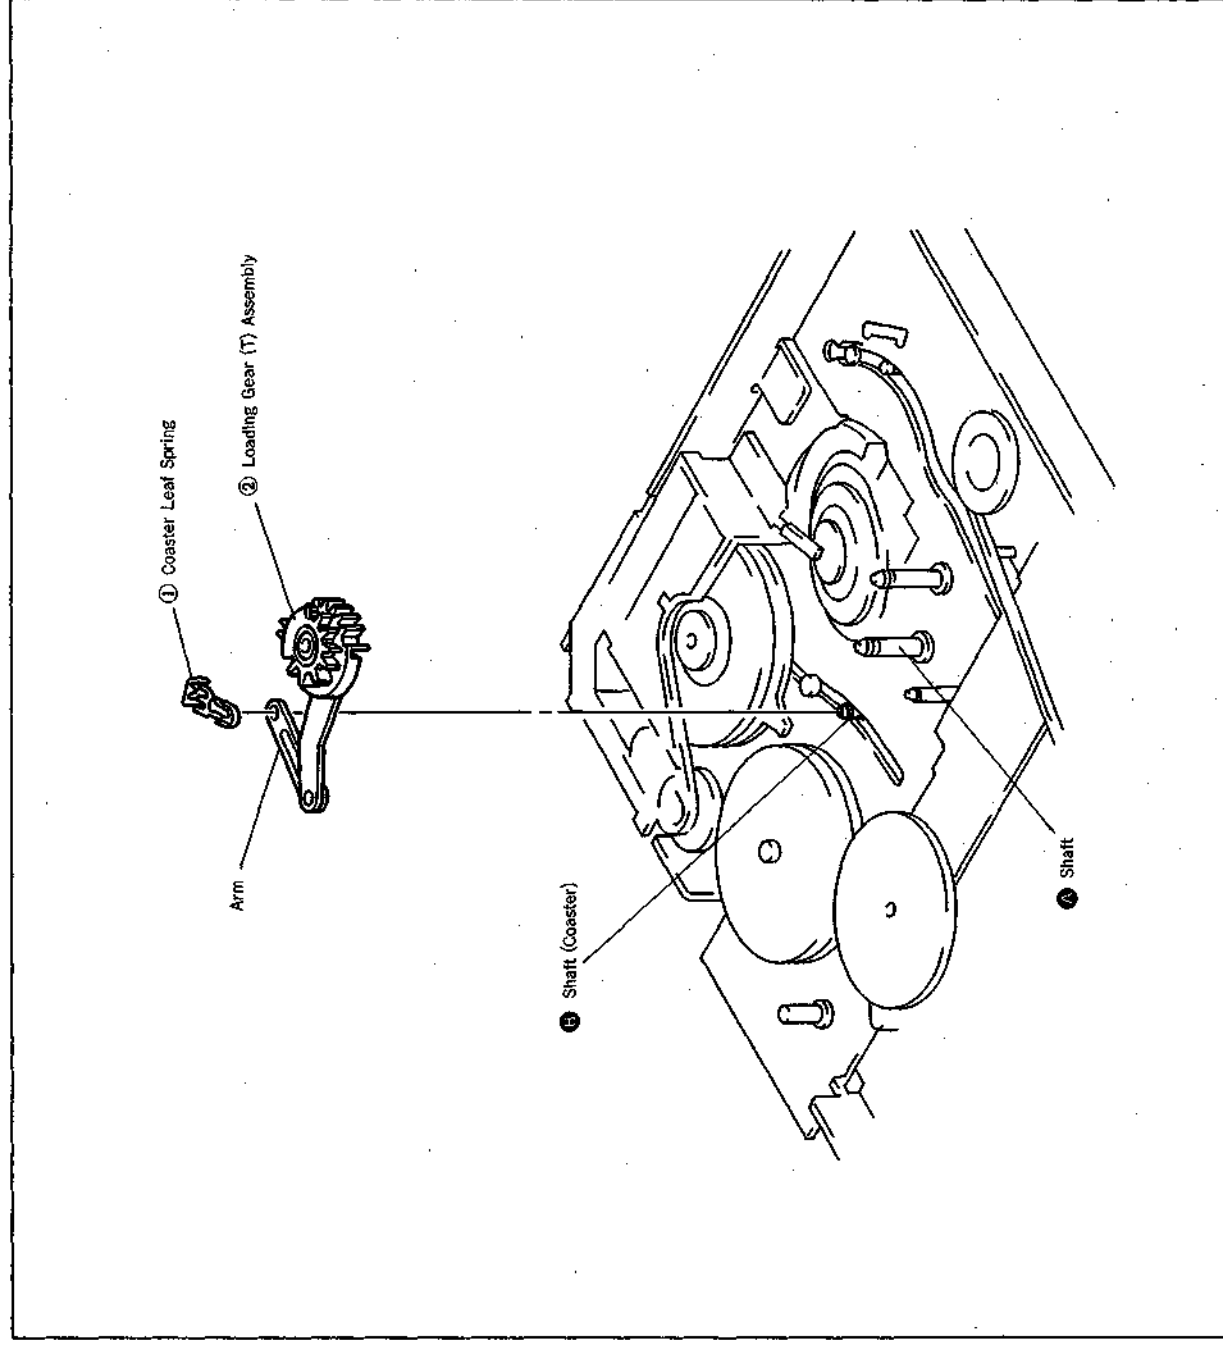


Fig. 25

4-20. COASTER (S) (Fig. 26)

1. Removal

- 1) Referring to 4-2, remove the impedance roller assembly.
- 2) Remove a screw ①, then the catcher (S) ②.
- 3) Remove the coaster leaf spring ③, then the coaster (S) ④.

2. Mounting

- 1) Mount the coaster (S) ④.
- 2) Mount the catcher (S) ② with its holes inserted into dowels A of chassis at two places.
- 3) Tighten a screw ①.
- 4) Referring to 4-18 Loading Gear (S) Assembly, mount the coaster leaf spring ③.
- 5) Referring to 4-2, mount the impedance roller assembly.

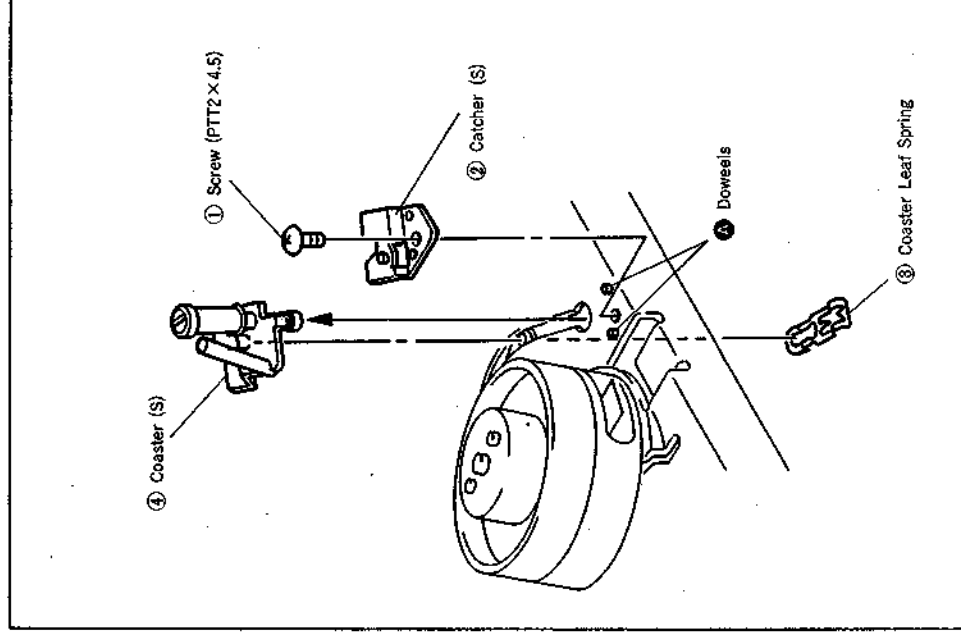


Fig. 26

4-21. COASTER (T) (Fig. 27)

1. Removal

- 1) Remove a screw ①, then the catcher (T) ②.
- 2) Remove the coaster leaf spring ③, then the coaster (T) ④.

2. Mounting

- 1) Mount the coaster (T) ④.
- 2) Mount the catcher (T) ② with its holes inserted into dowels A of chassis at two places.
- 3) Referring to 4-19 Loading Gear (T) Assembly, mount the coaster leaf spring ③.

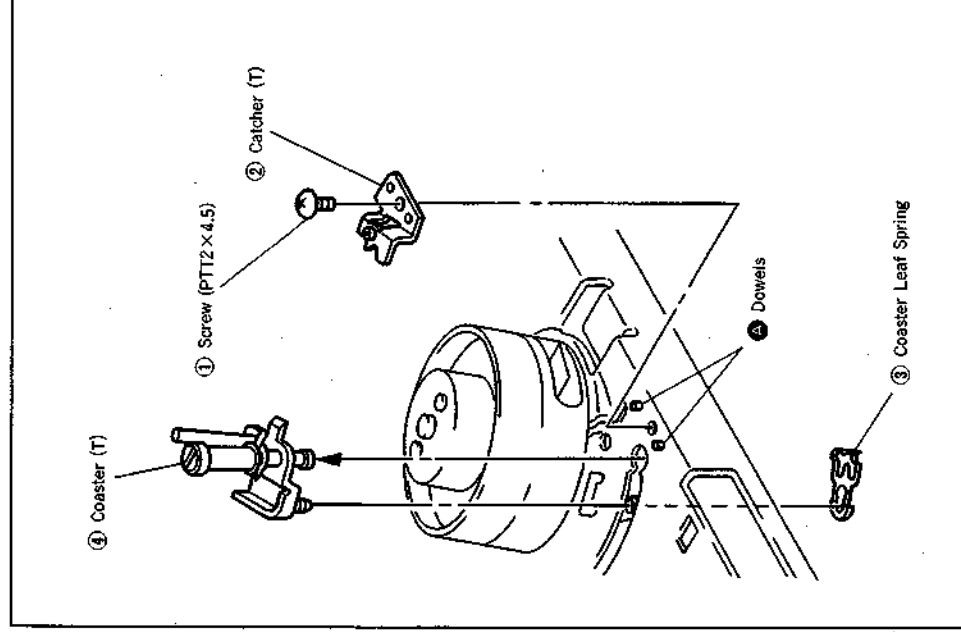


Fig. 27

4-22. ROTARY UPPER DRUM REPLACEMENT

1. Removal

• If possible, make a recording before removal.

- 1) Remove the two screws ① (Fig. 28).
- 2) Mount the jig ② (Ref. No. J-8) with the two supplied screws ③, then screw the attached hexagon socket screws ④ to the jig ②. The rotary upper drum ⑤ will move upward and come off (Fig. 29).

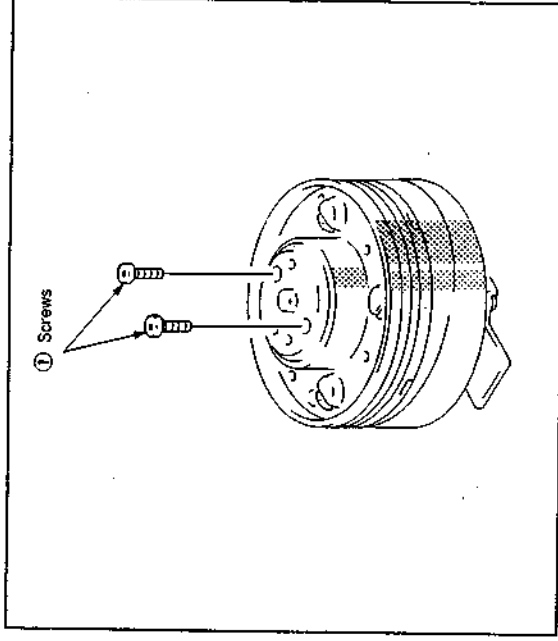


Fig. 28

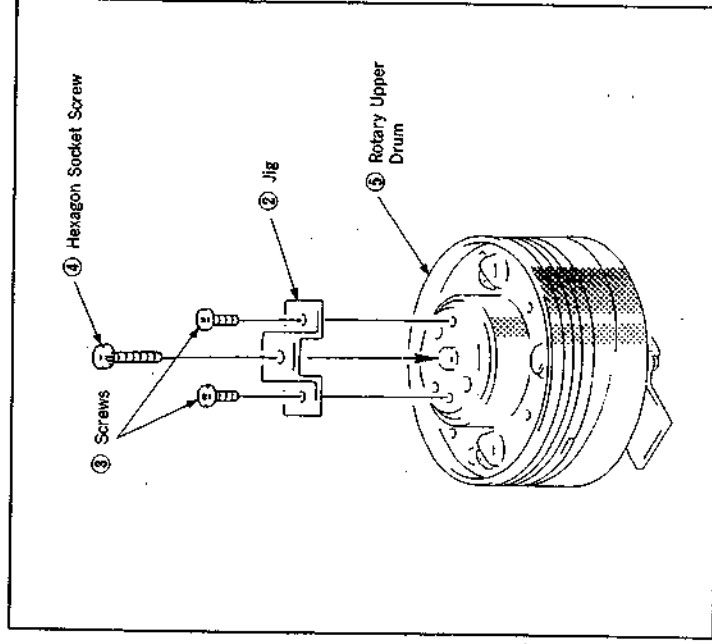


Fig. 29

2. Installation

- 1) Wipe clean the flange surface and the rotary upper drum ⑤ surface that makes contact with it, and confirm that they are free from dirt and scratches.
- 2) Insert the jig ⑥ (Ref. No. J-8) into the drum positioning hole, then set then set the rotary upper drum ⑤ by passing the jig through its positioning hole ⑦. (Fig.30)
- 3) Remove the jig ⑥ and push down the rotary upper drum ⑤ gently by hand. If it does not go all the way down, secure it temporarily by tightening the two screws ① alternately (Fig.28).
- 4) Tighten strongly both two screws ①, and loosen both screws once, then tighten them again (for stable seating).
- 5) Insert the jig ⑥ into the positioning hole ⑦ again and confirm that it goes in smoothly. If it does not, loosen the two screws ①, repeat step 2) of the Removal paragraph and restart the setting procedure.
- 6) Tighten the screws ①.

Note : After installing, be sure to perform tape path adjustment as described in section 5.

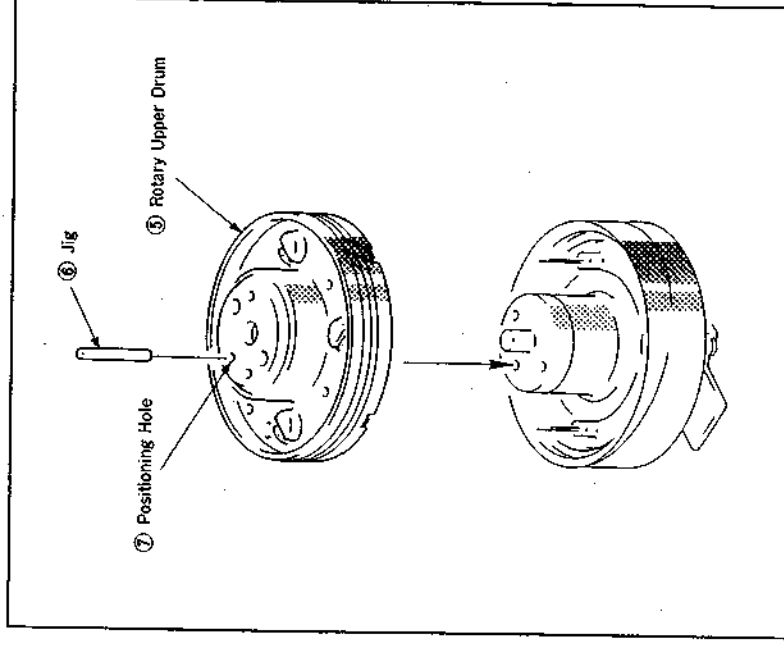


Fig. 30

4-23. ADJUSTMENT OF TENSION REGULATOR POSITION (Fig. 31)

- 1) Adjustment
- 1) Set a cassette tape and run the tape in the PB mode.
- 2) With the tape running, check that the distance from No.1 guide to No. 2 guide upper flange is 5.5 mm. (On the centerline of TG2 guide)
- 3) If they are not at the specified positions, perform adjustment in step 4) and subsequent steps.
- 4) Loosen the screw ①.
- 5) If No.1 guide is located inside the specified position, shift the tension adjusting base toward the arrow A using the FWD B.T. adjusting driver (Ref No. J-13). Or, if it is located outside, shift toward the arrow B.
- 6) Tighten the screw ①.

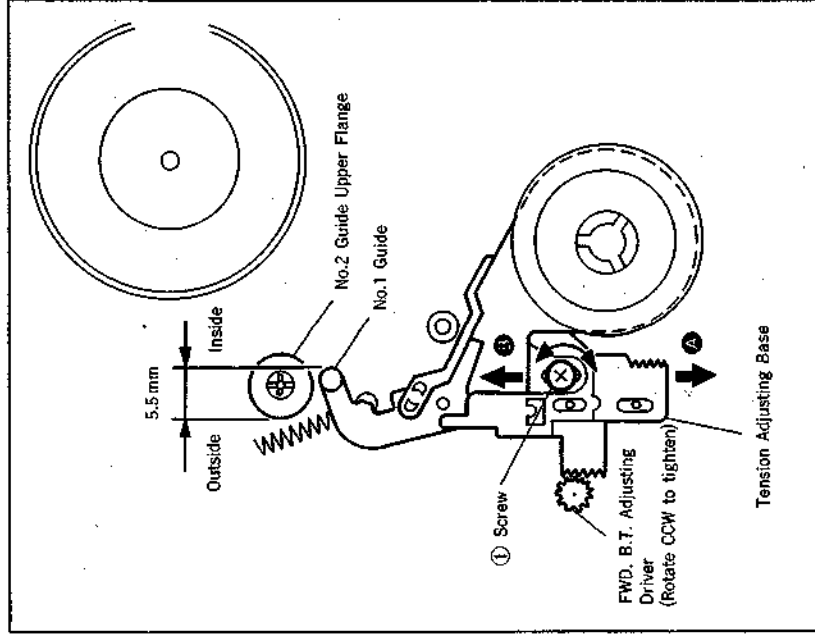


Fig. 31

4-24. FWD BACK TENSION ADJUSTMENT (Fig. 32)

- 1) Select the TEST mode 1 using the adjusting remote controller (Ref No. J-10).
- 2) Set the torque cassette (Ref No. J-7).
- 3) Select the FWD mode, and check that the torque of S reel table is $0.88 \sim 1.17\text{mN}\cdot\text{m}$ ($9 \sim 12\text{g}\cdot\text{cm}$). If it is out of standard, adjust the tension adjusting arm position.

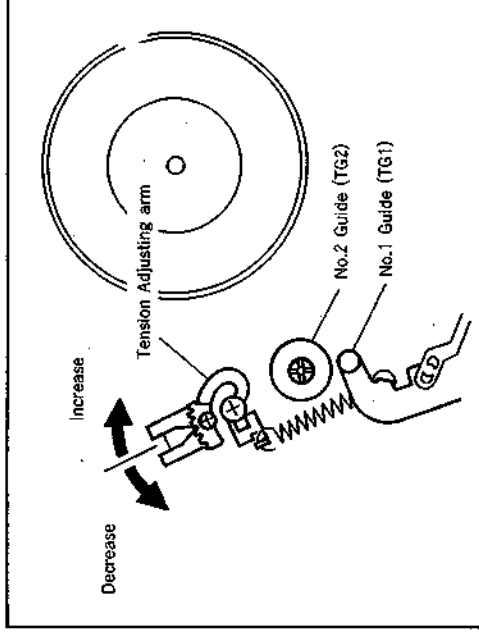


Fig. 32

4-25. REEL TORQUE CHECK

- 1) Set the torque cassette.
- 2) Select the FWD mode, and check that the torque fluctuation center of T reel table is $0.98 \sim 1.96\text{mN}\cdot\text{m}$ ($10 \sim 20\text{g}\cdot\text{cm}$).
- 3) Select the RVS mode, and check that the torque fluctuation center of S reel table is $1.77 \sim 2.75\text{mN}\cdot\text{m}$ ($18 \sim 28\text{g}\cdot\text{cm}$).
- 4) Select the REV mode, and check that the torque of T reeltable is $0.98 \sim 1.96\text{mN}\cdot\text{m}$ ($10 \sim 20\text{g}\cdot\text{cm}$).
- 5) If the above data is not satisfied, the tension regulator band, T hard tab or T soft assembly will be faulty. Check them first, and if no abnormality is found, replace respective reel tables.

4-26. FL WORM WHEEL (Fig. 33)

1. Removal

- 1) Disengage tabs **1** at four places and remove the gear cover **1**.
- 2) Remove the drive gear **2**, then the FL worm wheel **3**.

2. Mounting

- 1) Mount the FL worm wheel **3**.
- 2) Meet a hole **4** in drive arm **5** on right side with a hole in chassis, and also a hole **6** in FL worm wheel **3** with a hole in side plate. Meet a hole **7** in drive gear **2** with a hole in side plate. Meeting respective holes, mount the drive gear **2**.
- 3) Mount the gear cover **1**.

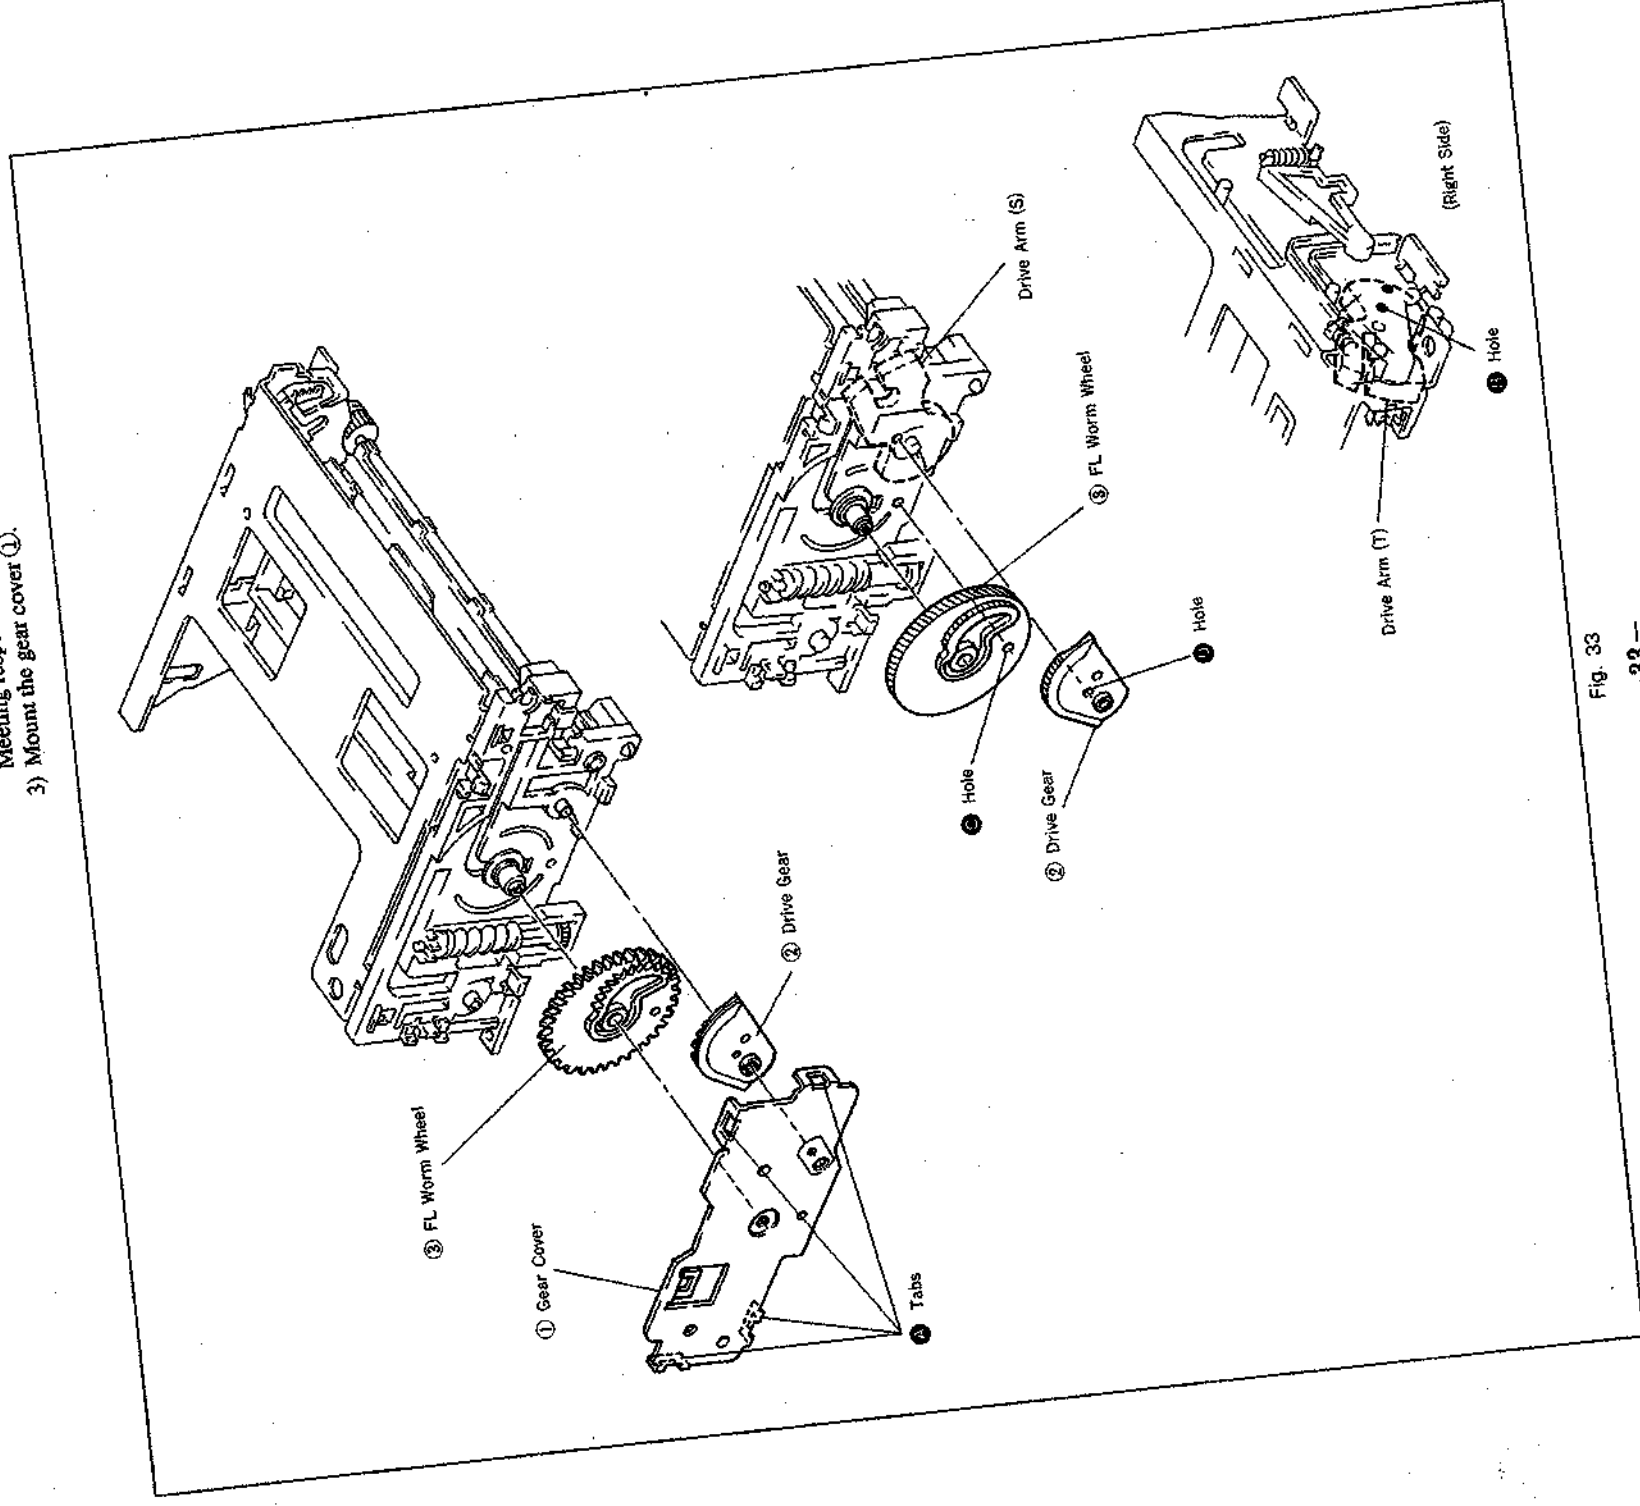


Fig. 33

5. TAPE PATH ADJUSTMENT

The 8mm video system uses ATF (Automatic Track Finding) which instantaneously controls a tape running speed based on 4 types of pilot signals and performs high-precision tracking. This does away a tracking control knob and allows accurate track tracing.

On the other hand, however, the ATF system has a problem in adjusting the tape path system. That is, if head tracing is out of order a little, the ATF automatically corrects it, which means that perfect adjustment cannot be done.

Therefore, in the F mechanism, the ATF system is forcibly operated to shift a tracking amount constantly (approx. 1/4) by setting the PATH mode with the adjusting remote controller (Ref No. J-10). So, fine tracking adjustment can be easily done.

Also, the PATH mode setting varies with the model, and therefore, refer to the Service Manual.

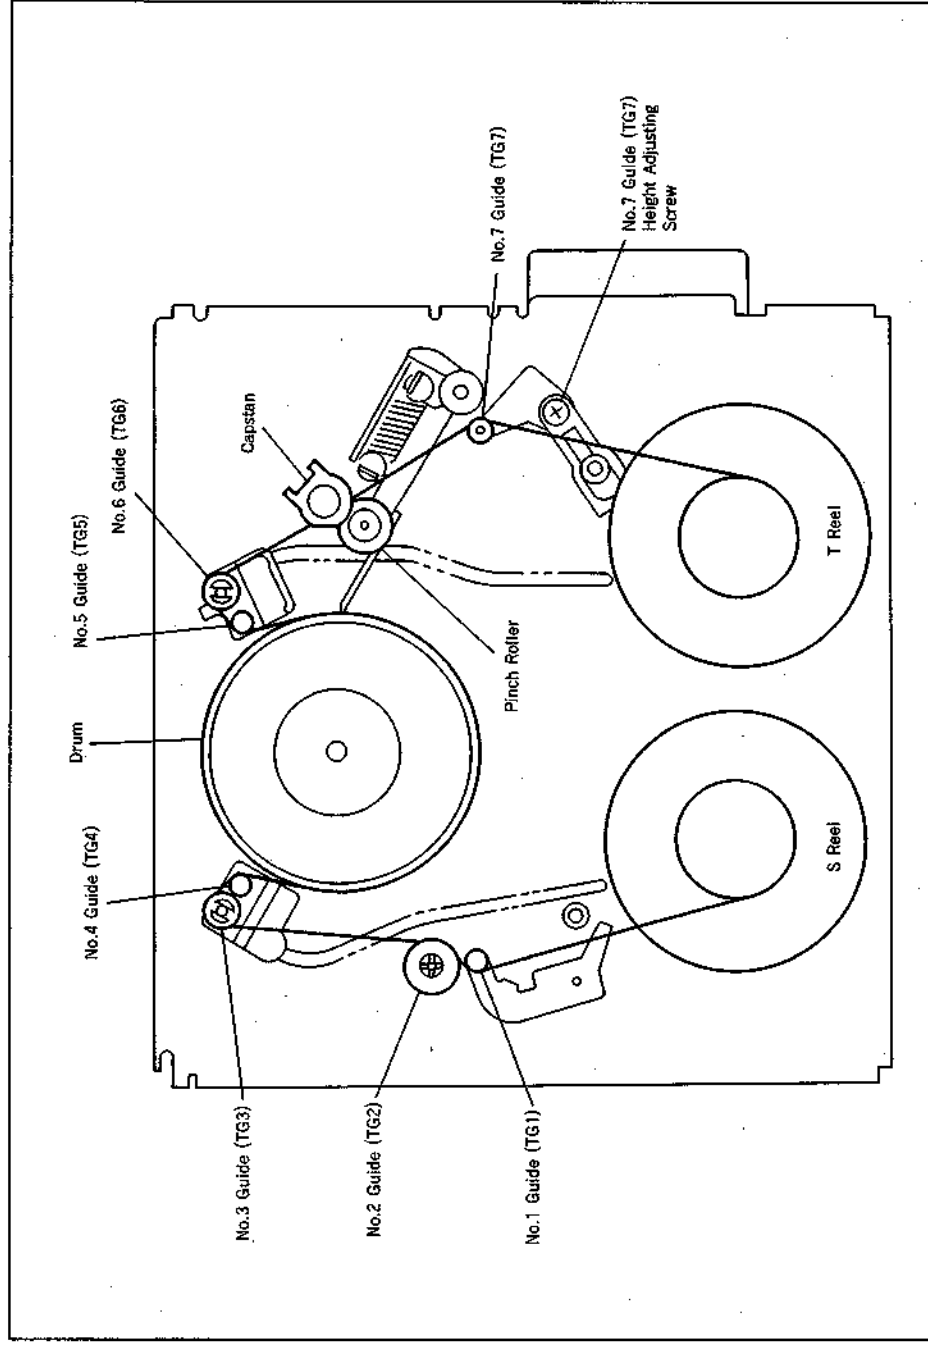


Fig. 34

[Note on Adjustment of No.7 Guide (TG7)]

The height adjustment screw for No.7 guide (TG7) is located at some distance from the guide (refer to Fig.42).

Therefore, when performing section 5-4, No.7 Guide (TG7)

Adjustment it is convenient to use the alignment tape for tracking (Ref. No. J-6), modified as follows, and perform adjustment in playback mode.

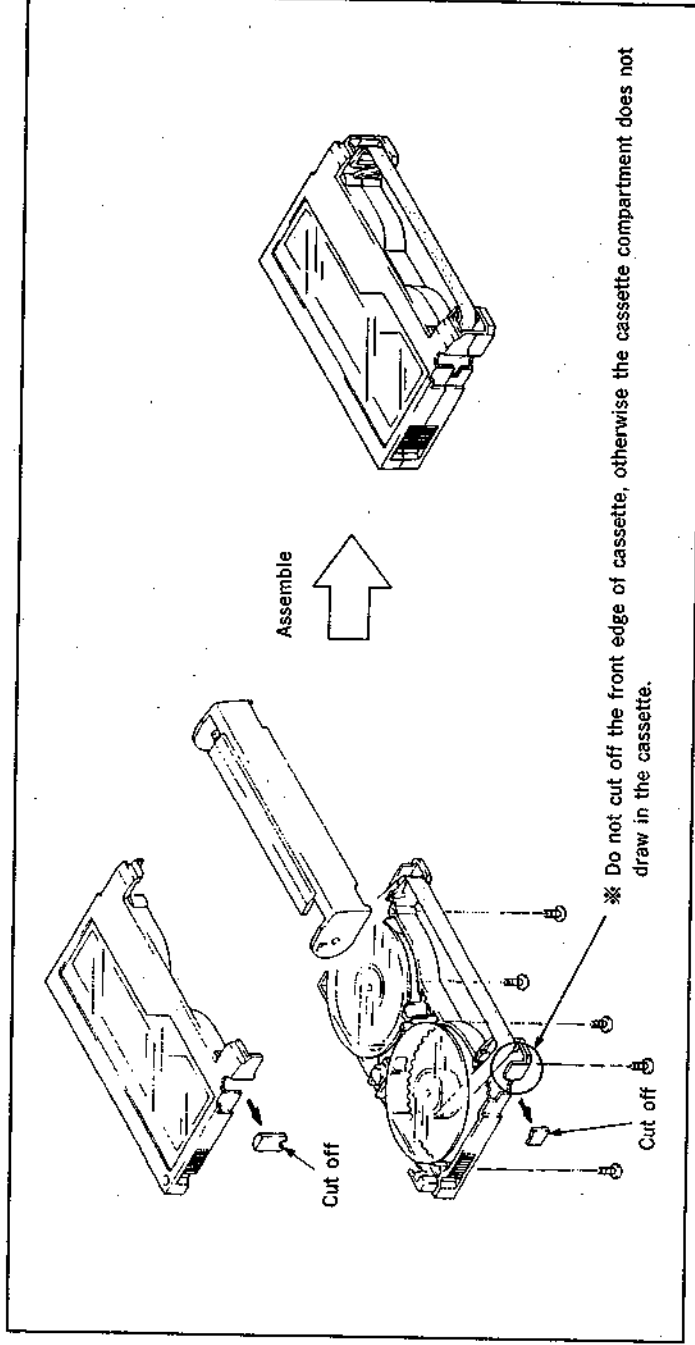


Fig. 35

5-1. PREPARATION FOR ADJUSTMENT

- 1) Clean the tape running surface (tape guides, drum, capstan shaft, pinch roller) (Fig. 34).
- 2) Set the PATH mode using the adjusting remote controller.
- 3) connect an oscilloscope to the check pin connector of the set.
- 4) Play back a tracking alignment tape (NTSC : WR5-1NP, or PAL : WRS-1CP).
- 5) Check that a RF waveform is flat at the inlet and outlet of the oscilloscope (Fig. 36 ㉑).

If not flat, make adjustment with the procedures below.

When the RF waveform is not flat at the inlet/outlet ; See Fig.

36 ㉒ and ㉓.

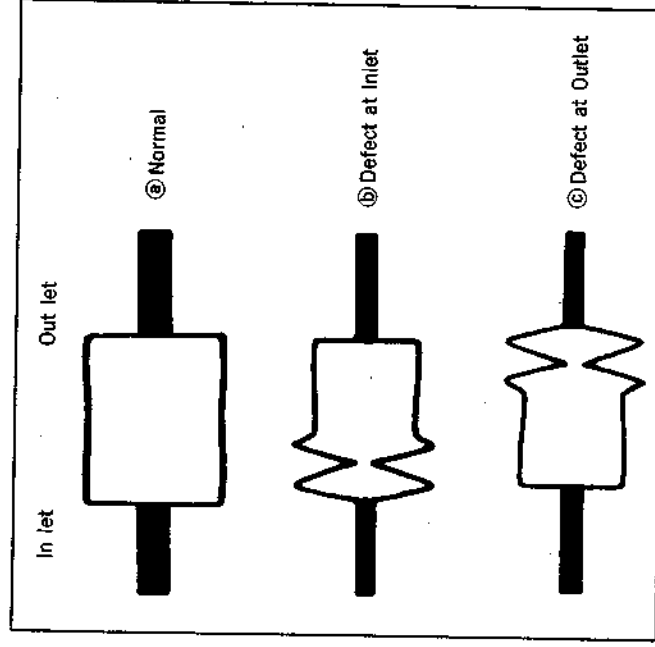


Fig. 36

5-2. TRACKING ADJUSTMENT (Fig. 37, 38)

- 1) Play back the tracking alignment tape.
- 2) Loosen the No.3 guide (TG3) lock screw ① and turn the No.3 guide to flatten the waveform at the inlet.
- 3) Tighten the No.3 guide (TG3) lock screw ① to lock the No.3 guide.
- 4) Loosen the No.6 guide (TG6) lock screw ② and turn the No.6 guide to flatten the waveform at the outlet.
- 5) Tighten the No.6 guide (TG6) lock screw ② to lock the No.6 guide. When this is done, make sure that the waveform does not change at the outlet.

Note : Be careful not to loosen the lock screw too much because the guide is easily moved.

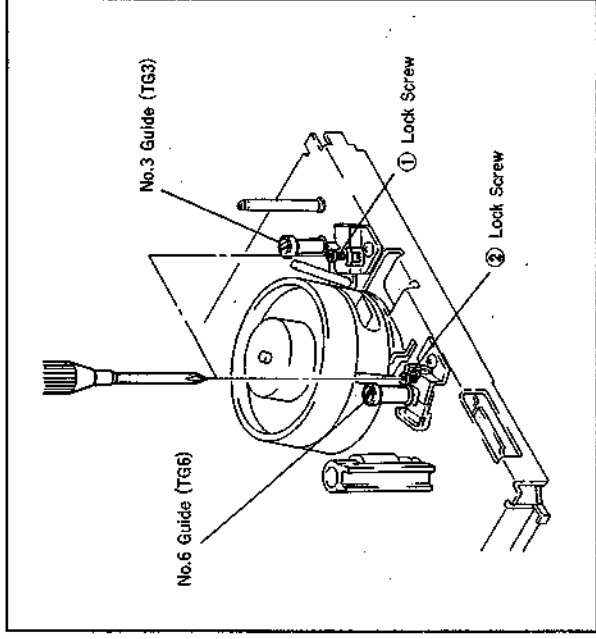


Fig. 37

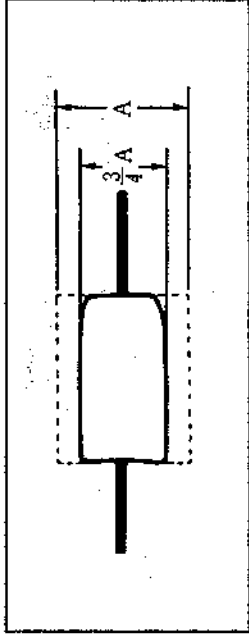


Fig. 38

5-3. No.2 GUIDE (TG2) ADJUSTMENT

When the No.2 guide has been turned or replaced, perform height presetting before this adjustment.

5-3-1. No. 2 GUIDE (TG2) HEIGHT PRESETTING (Fig. 39)

- 1) Rotating the TG2 upper flange, adjust the height from top surface of mechanical chassis to top surface of TG2 upper flange to 22.12mm.

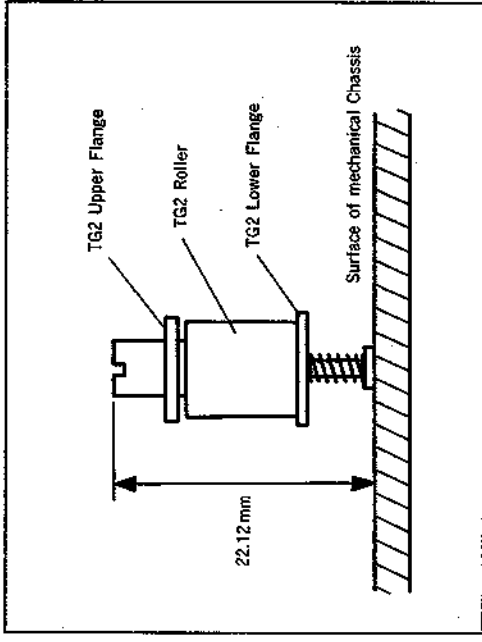


Fig. 39

[Reference]

This F mechanism is equipped with four adjustable guides (TG2, 3, 6 and 7). To raise or lower the respective guide rotate the corresponding adjustment screw as shown below.

Guide	Guide adjustment	Rotating direction of adjustment screw
TG2, 3, 6	Raise	Counterclockwise
	Lower	Clockwise
TG7	Raise	Clockwise
	Lower	Counterclockwise

5-3-2. No. 2 GUIDE (TG2) ADJUSTMENT (Fig. 40, 41)

- 1) Play back a thin tape like the P6-120MP, etc. and set the REV mode.
 - 2) Confirm that the tape is not bent at the lower flange ② of the No.2 guide (TG2) ① (Fig. 40). If it is, turn the upper flange ③ of the No.2 guide (TG2) clockwise with a screwdriver, lowering it until the tape is straightened.
 - 3) Play back the alignment tape for tracking adjustment.
 - 4) Perform tracking adjustment and tracking fine adjustment as described in sections 5-2.
 - 5) In the track shift mode, CUE/REV the tape, then play it back and confirm that the RF waveform rises flat within 2 seconds.
 - 6) If the waveform is not normal (Fig. 41), turn the upper flange ③ of the No. 2 guide (TG2) ① 90° counterclockwise and repeat step 5.
- Repeat steps 5) and 6) until a normal waveform is obtained. Then, confirm that the tracking waveform has not changed. If it has, perform fine adjustment of entrance side tracking and repeat step 5).

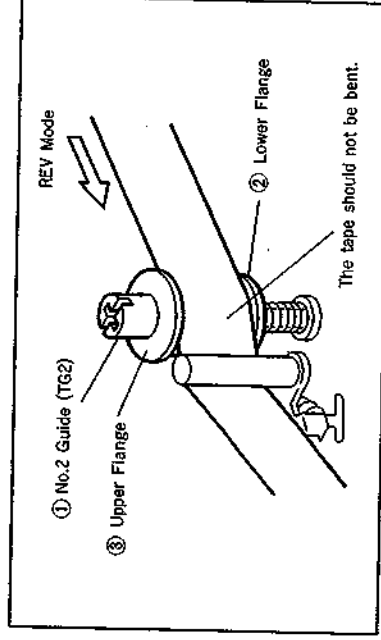


Fig. 40

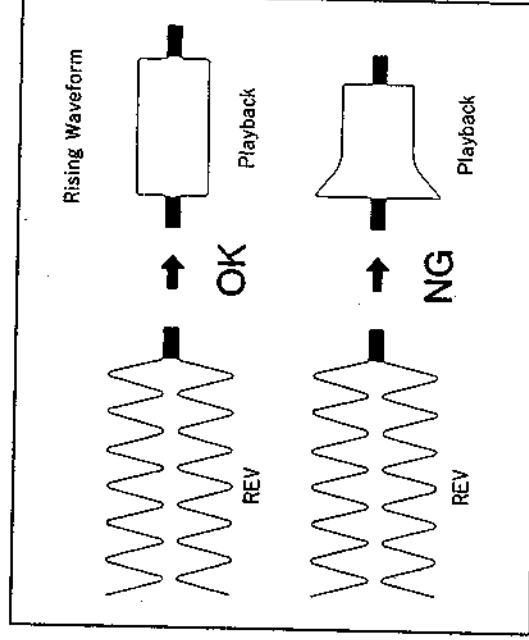


Fig. 41

5-4. No.7 GUIDE (TG7) ADJUSTMENT (Fig. 42)

Note : This adjustment requires the No. 7 guide adjusting cassette (Fig. 35).

- 1) Play back the No.7 guide adjusting cassette and set the REV mode.
 - 2) Confirm that the tape is not bent between the No.6 guide (TG6) ① and the capstan ②. If it is, turn the height adjusting screw ④ of the No.7 guide (TG7) ③ until the tape is straightened.
 - 3) Set the playback mode again and confirm that the tape is not bent between the capstan ② and the No.7 guide (TG7) ③ (specification : 0.5mm or less). If the tape is bent beyond the specification, turn the height adjusting screw ④ until bending is within the specification (0.5mm).
- If in the REV mode tape bending between the No. 6 guide (TG6) ① and the capstan ② is 0.3mm or less, adjustment can be considered completed.

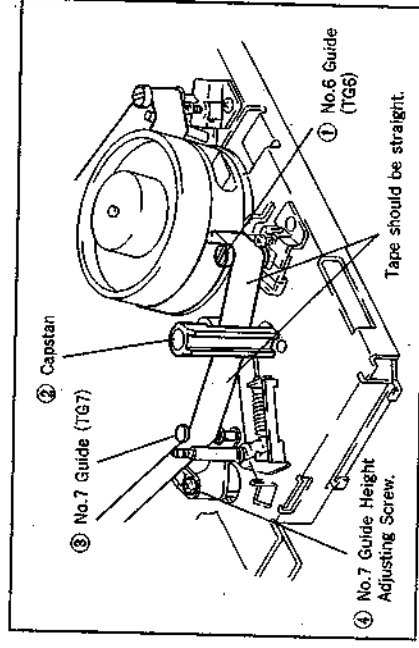


Fig. 42

5-5. CUE AND REV WAVEFORM CHECK (Fig. 43)

- 1) Play back the alignment tape for tracking adjustment and set the REV mode. Confirm that waveform peaks maintain a constant pitch of 5 seconds or more (Fig. 43). In case pitch is not constant, perform section 5-2.Tracking Fine Adjustment and section 5-4. No.7 Guide Adjustment.
- 2) Set the CUE mode. Confirm that waveform peaks still maintain a constant pitch of 5 seconds or more (Fig. 43). Otherwise, perform section 5-2 Tracking Fine Adjustment.

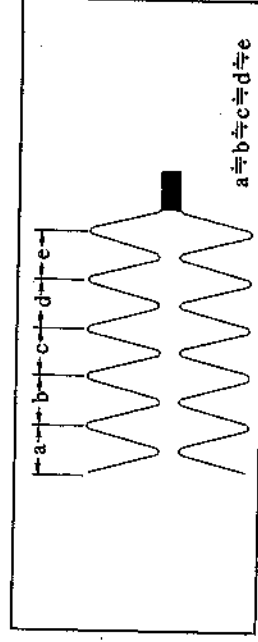


Fig. 43

5-6. CHECK AFTER ADJUSTMENT

5-6-1. TRACKING CHECK

- 1) Confirm that the amplitude of RF waveform is reduced to approx. 3/4 when the track shift mode is set (Fig. 44).
- 2) Then, confirm that the minimum amplitude value (EMIN) is 65% of the maximum value (EMAX) or larger (Fig. 45).
- 3) Confirm that no large fluctuations occur on the waveform (Fig. 45).

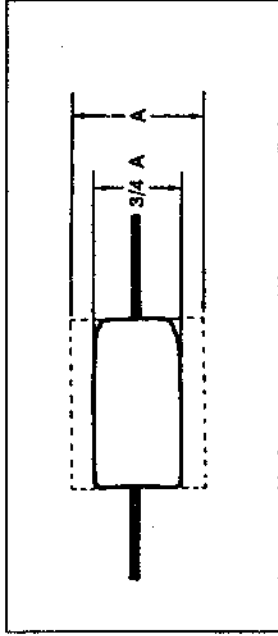


Fig. 44

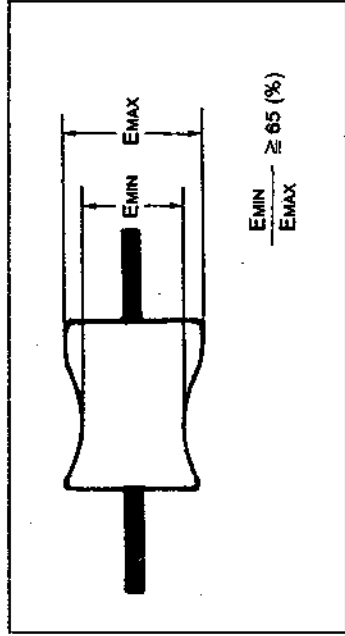


Fig. 45

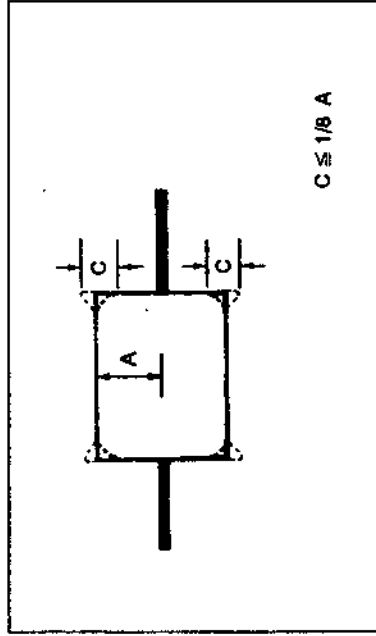


Fig. 46

5-6-2. RISING CHECK (Fig. 47)

- 1) Play back the alignment tape for tracking adjustment.
- 2) Cancel the track shift mode.
- 3) Eject the tape, then load it again.
- 4) Set the playback mode and confirm that the RF wave form rises flat within 2 seconds. Also confirm that the tape is not bent around the pinch roller.
- 5) CUE/REV and FF/REW the tape, then play it back and confirm that the RF waveform rises flat within 2 seconds. Also confirm that the tape is not bent around the pinch roller.
- 6) Repeat steps 3) to 5) once more.

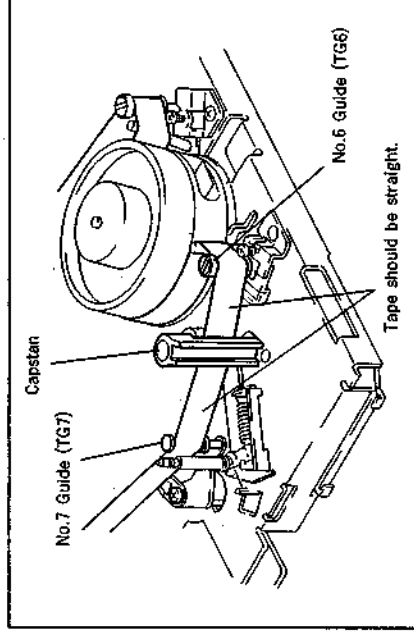


Fig. 47

5-6-3. TAPE PATH CHECK (Fig. 48)

- 1) Play back a thin tape like the P6-120MP (NTSC) or P5-90MP (PAL), etc. and confirm that no tape rising occurs, and that curling is less than 0.3mm, at the lower flange of the No. 2 guide, the upper flange of the No.3 guide, the upper flange of the No. 6 guide and the No.7 guide upper and lower flanges.
- 2) Confirm that no tape rising occurs and that curling is less than 0.3mm at the flange of all guide when pressing the FF button in the playback mode to set the CUE mode, or the REV button to set the REV mode.

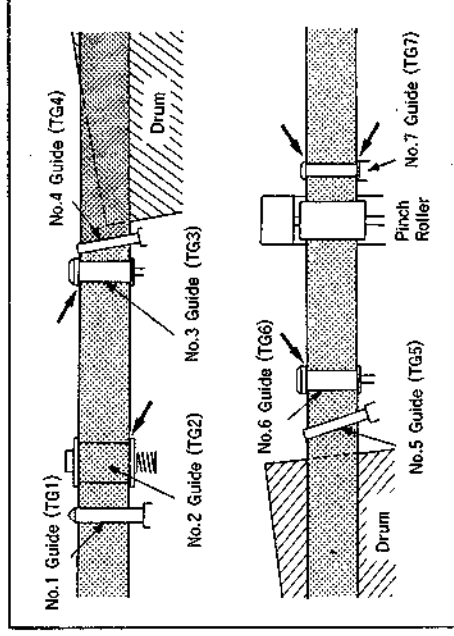


Fig. 48

SECTION 6 EXPLODED VIEWS


NOTE:

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (#mark) list is given in the last of this parts list.


The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

6-1. FRONT LOADING ASSEMBLY

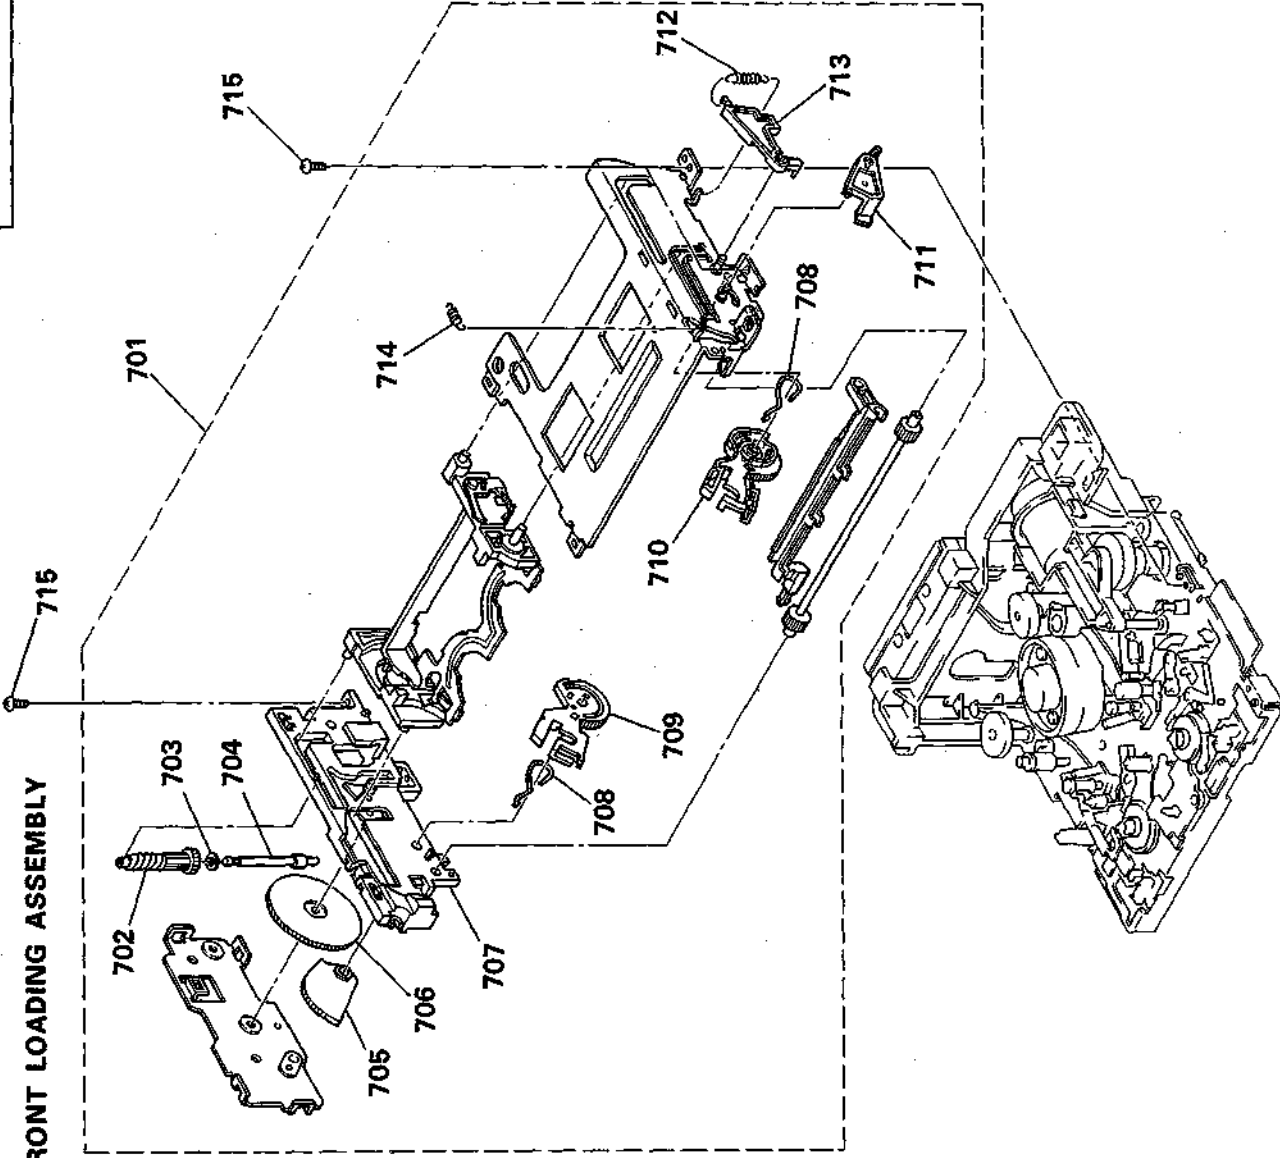


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description	Remark
701	4-7091-941-A	FL BLOCK ASSY	709	3-954-034-01	ARM (S), DRIVING	
702	3-954-028-01	GEAR, FL WORM	710	3-954-033-01	ARM (T), DRIVING	
703	3-738-212-11	RETAINER, THRUST, REEL TABLE	*711	3-954-041-01	ARM, DOOR SWITCHING	
*704	3-954-029-01	SHAFT, FL WORM GEAR	712	3-954-043-01	SPRING, TENSION	
705	3-954-020-01	GEAR, DRIVING	*713	3-954-040-01	ARM, CASSETTE IN SWITCH	
706	3-954-019-01	WHEEL, FL WORM	714	3-954-044-01	SPRING, TENSION	
*707	3-954-032-01	PLATE (S), SIDE	715	3-732-817-01	SCREW (2X4.5), TAPPING	
708	3-954-042-01	SPRING, PRESS				

6-2. MD CHASSIS ASSEMBLY (1)

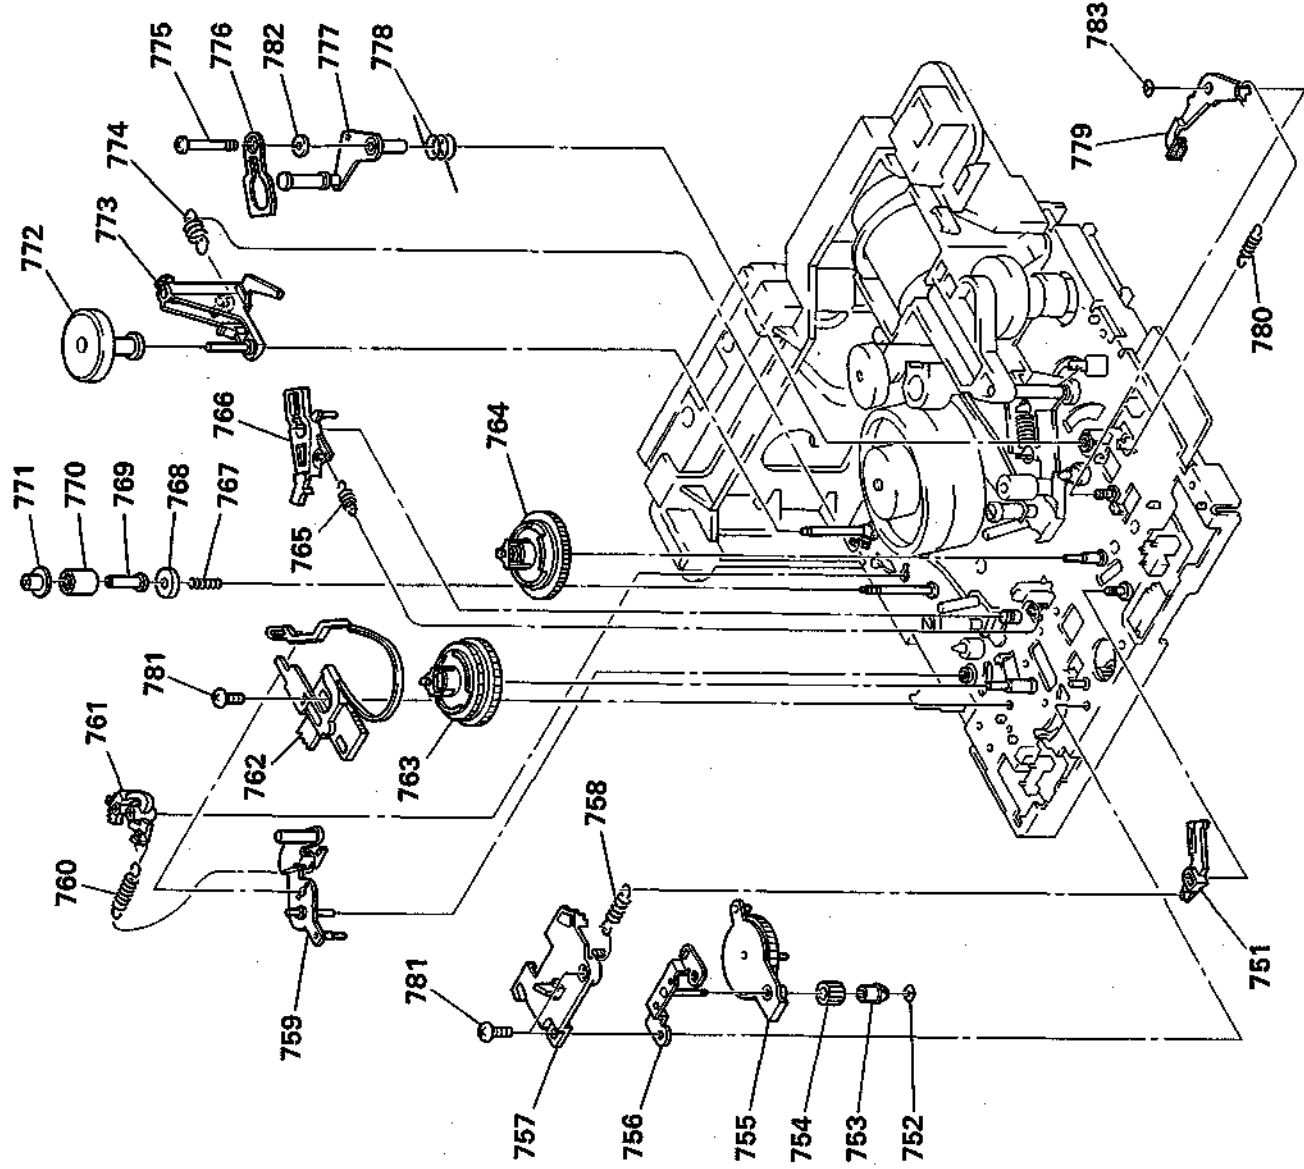

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description	Remark
751	X-3943-111-1	BRACE (T) ASSY, SOFT	768	3-726-882-02	FLANGE, LOWER, TC2	
752	3-726-829-01	WASHER, STOPPER	769	3-726-885-01	SLEEVE, TC2	
753	3-954-321-01	BEARING, PENDULUM DRIVING	770	3-726-883-31	ROLLER, TC2	
754	3-954-059-01	GEAR, PENDULUM DRIVING	771	3-726-884-01	FLANGE, UPPER, TC2	
755	X-3942-951-1	GEAR ASSY, PENDULUM	772	3-954-282-01	ROLLER (M)	
756	X-3943-162-1	BASE ASSY, PENDULUM	773	X-3943-015-1	BASE ASSY, ROLLER	
*757	3-954-063-01	PLATE, RELEASE, REEL LOCK	774	3-954-284-01	SPRING, TENSION	
758	3-955-142-01	SPRING, TENSION	775	3-954-096-01	SCREW, TC7 HEIGHT ADJUSTMENT	
759	X-3942-955-1	TENSION REGULATOR ASSY	776	3-954-093-01	SPACER, TC7	
760	3-954-074-01	SPRING, TENSION	777	X-3942-958-1	ARM ASSY, TC7	
761	3-954-103-01	ARM, TENSION ADJUSTMENT	778	3-954-003-01	SPRING (TC7), TORSION	
762	X-3942-956-1	BAND ASSY, TENSION REGULATOR	779	X-3943-161-1	BRAKE (F) ASSY	
763	X-3942-954-1	TABLE (S) ASSY, REEL	780	3-953-978-01	SPRING, TENSION	
764	X-3942-953-1	TABLE (T) ASSY, REEL	781	3-732-817-01	SCREW (2X4.5), TAPPING	
765	3-954-085-01	SPRING, TENSION	782	3-738-212-11	RETAINER, THRUST, REEL TABLE	
766	3-954-071-01	ARM, BRAKE (S)	783	3-669-465-00	WASHER (1.5), STOPPER	
767	3-954-001-01	SPRING, COMPRESSION				


6-3. MD CHASSIS ASSEMBLY (2)

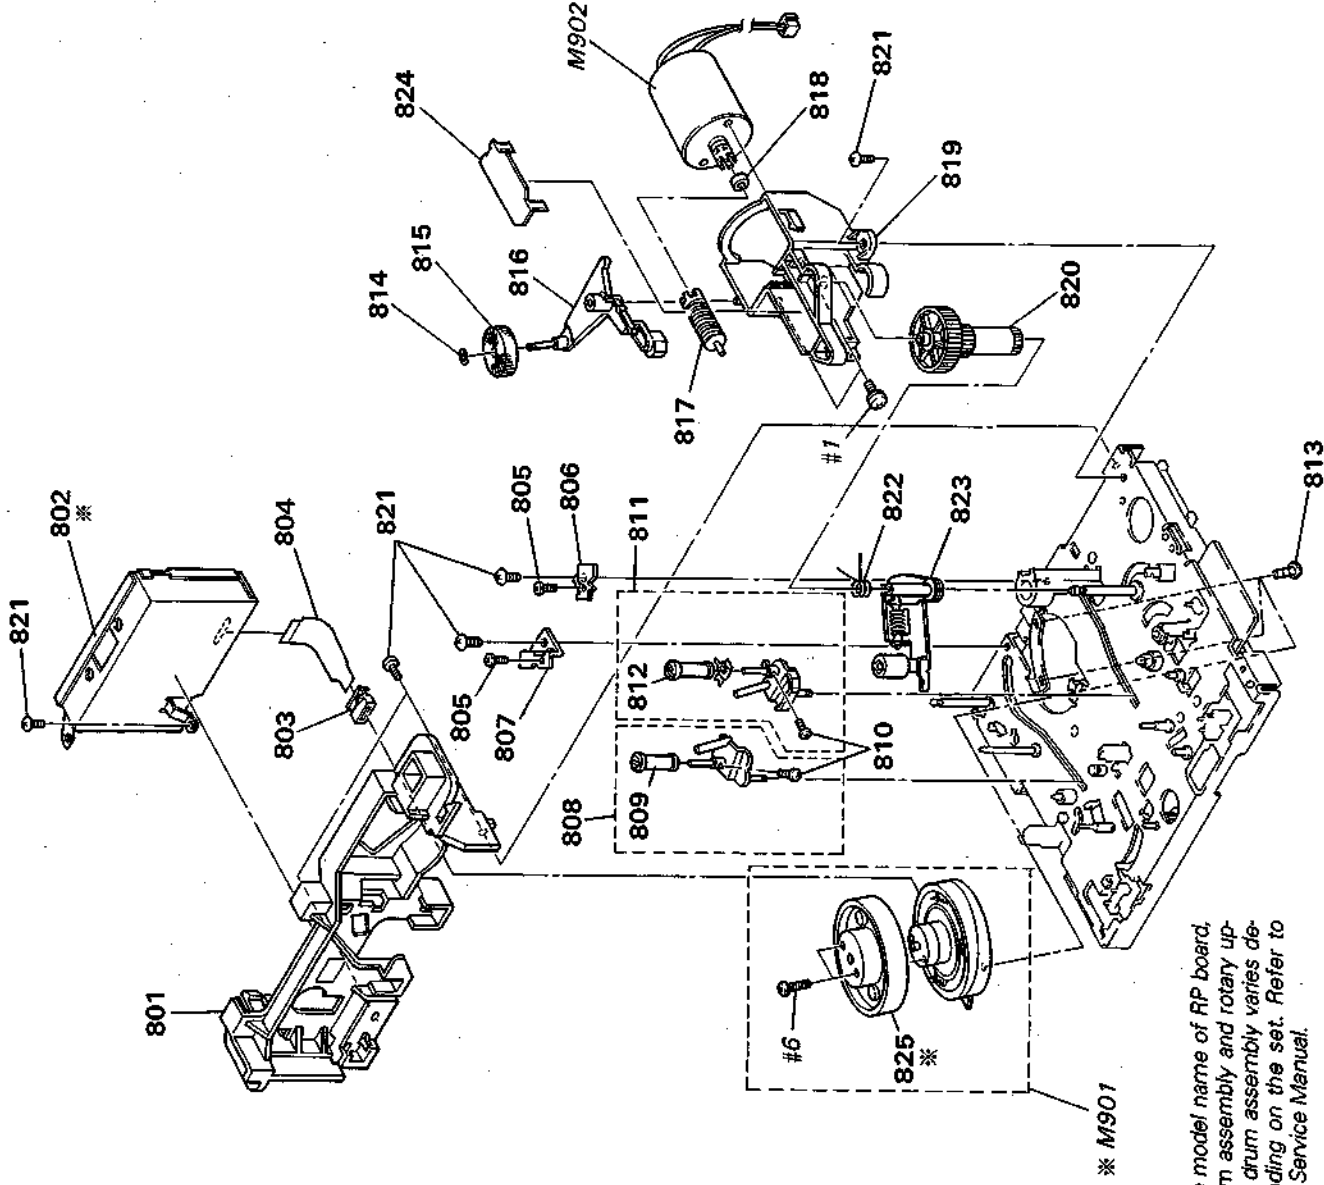

* The model name of RP board, drum assembly and rotary upper drum assembly varies depending on the set. Refer to the Service Manual.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description	Remark
* 801	3-955-623-01	FRAME, RP	815	X-3943-192-1	ROLLER ASSY, HC	
* 802	*	RP BOARD, COMPLETE	816	X-3942-947-1	ARM ASSY, HC	
803	1-691-471-11	CONNECTOR, TRANSLATION 11P	817	3-733-395-01	GEAR (CAM), WORM	
804	1-649-565-11	FP-696 FLEXIBLE BOARD	818	3-696-388-01	RUBBER, JOINT	
805	3-954-285-01	SCREW (M1.4X0.2)	819	3-954-024-01	HOLDER, MOTOR	
806	3-954-091-01	CATCHER (T)	820	3-954-023-01	WHEEL, CAM WORK	
807	3-954-090-01	CATCHER (S)	821	3-732-817-01	SCREW (2X4.5), TAPPING	
808	A-7040-338-A	COASTER (S) BLOCK ASSY	822	3-954-105-01	SPRING (PINCH DRIVING)	
809	X-3941-755-1	ROLLER ASSY (2), TC3	823	X-3942-945-1	ARM ASSY, PINCH	
810	3-947-504-01	SCREW (M1.2X2)	824	3-958-047-02	MOTOR HOLDER COVER	
811	A-7040-339-A	COASTER (T) BLOCK ASSY	825	*	DRUM, UPPER, ROTARY	
812	X-3941-756-1	ROLLER ASSY (2), TG6	M901	*	DRUM ASSY	
813	3-686-493-01	SCREW (M2X5), P1	M902	X-3942-946-1	MOTOR ASSY, CAM	
814	3-321-393-01	WASHER, STOPPER				


6-4. MD CHASSIS ASSEMBLY (3)

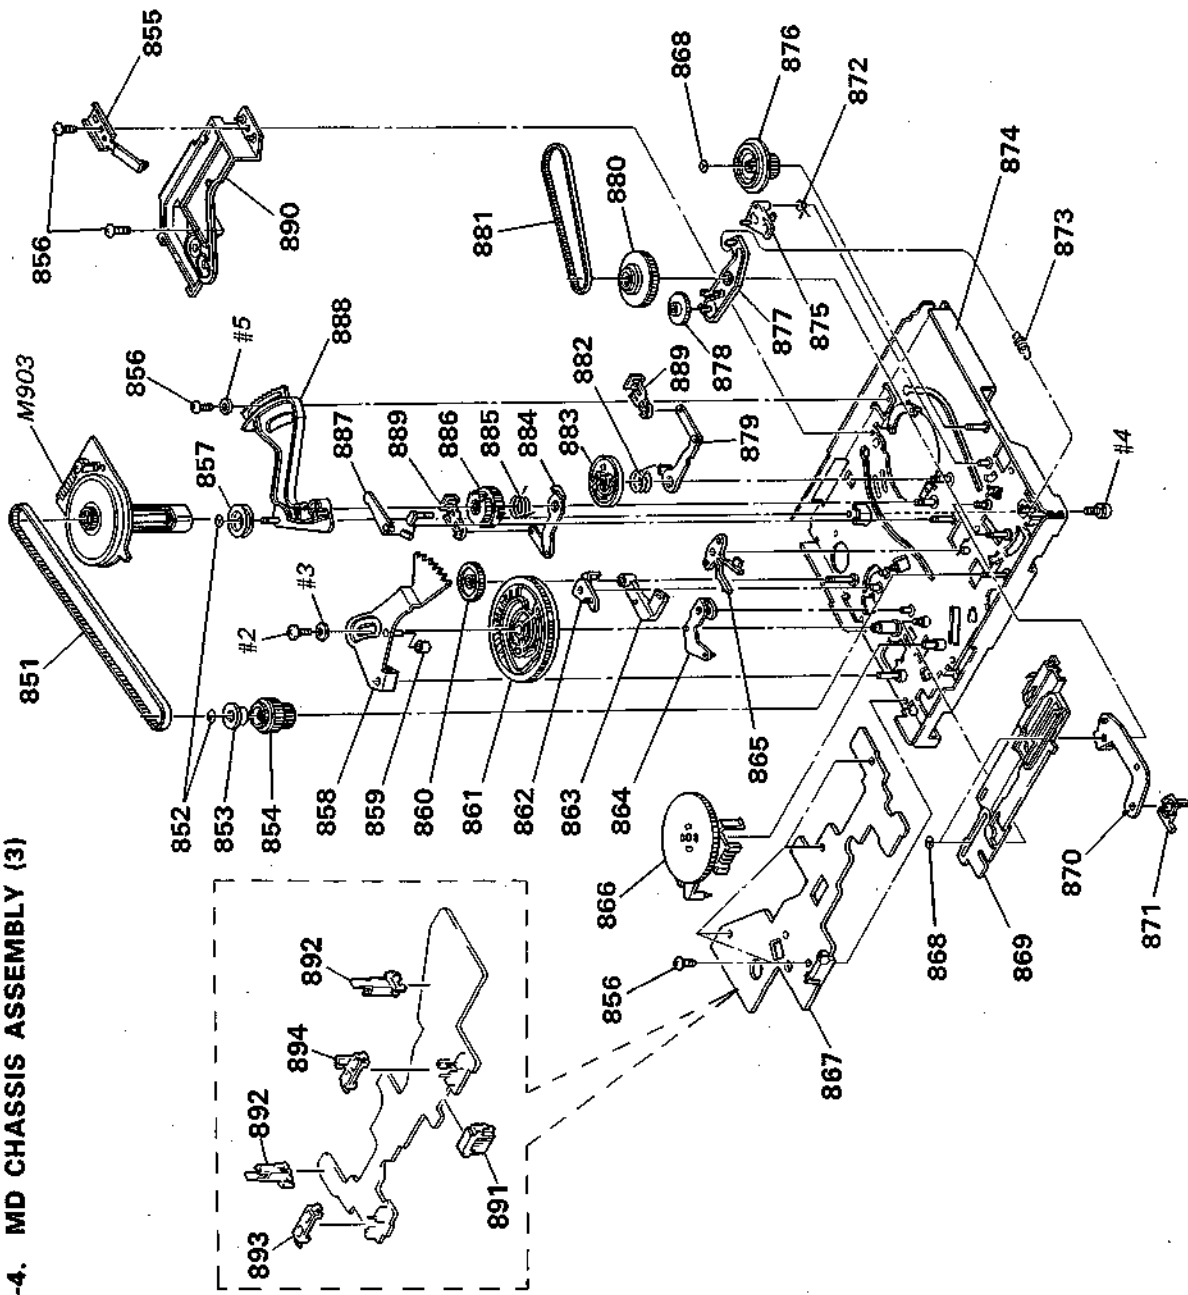

Ref. No.	Part No.	Description	Remark
851	3-953-986-01	BELT, TIMING	
852	3-726-829-01	WASHER, STOPPER	
853	3-954-102-02	FLANGE, REEL RELAY	
854	3-954-061-01	GEAR, REEL RELAY	
855	X-3942-960-1	GROUND ASSY, SHAFT	
856	3-732-817-01	SCREW (2X4.5), TAPPING	
857	X-3943-016-1	PULLEY ASSY, BELT	
*858	3-954-014-01	LEVER, LOADING DRIVING	
859	3-954-323-01	ROLLER, LOADING	
860	3-954-015-01	GEAR, CAM RELAY	
861	3-954-050-01	CAM, MAIN	
*862	3-954-009-01	LEVER, PINCH DRIVING	
863	3-954-016-01	LEVER, TGT DRIVING	
*864	3-954-007-01	LEVER, SLIDE PLATE DRIVING	
865	3-953-973-01	ARM, PENNULUM COMPUSSION	
866	1-692-498-11	SWITCH, ROTARY	
*867	1-648-300-11	MD-59 BOARD	
868	3-669-465-00	WASHER (1.5), STOPPER	
869	3-953-972-01	PLATE, SLIDE	
*870	3-953-974-01	ARM, S TAKE-UP	
871	3-953-975-01	CLAW, S TAKE-UP	
872	3-956-366-01	SPRING, TORSION	
873	3-953-982-01	SPRING, TENSION	
*874	X-3942-952-1	CHASSIS ASSY, MECHANICAL	
875	3-954-100-01	ARM, TENSION REGULATOR SUB	
876	3-953-983-01	GEAR, FL PULLEY	
877	3-953-979-01	ARM, FL SELECTION	
878	3-953-980-01	GEAR, FL SELECTION	
879	X-3942-949-1	ARM (S) ASSY, LOADING	
880	3-953-981-01	GEAR (DRIVING), FL PULLEY	
881	3-954-079-01	BELT (FL), TIMING	
882	3-953-998-01	SPRING (S), TORSION	
883	3-953-991-01	GEAR (S), LOADING	
884	X-3942-948-1	ARM (T) ASSY, LOADING	
885	3-954-000-01	SPRING (T), TORSION	
886	3-953-992-01	GEAR (T), LOADING	
887	3-954-072-01	LEVER, BRAKE (S) DRIVING	
888	X-3942-962-1	BASE ASSY, PULLEY	
889	3-956-649-01	SPRING, LEAF, COASTER	
*890	3-954-049-01	RETAINER, WORM WHEEL	
891	1-750-620-11	CONNECTOR (MMS MD)	
892	3-953-985-01	HOLDER, ST SENSOR	
893	3-954-638-01	HOLDER (S), PUSH SWITCH	
894	3-954-639-01	HOLDER (T), PUSH SWITCH	
M903	8-835-499-01	MOTOR, DC SCE-0501A	

SECTION 7
DIAGRAMS

SCHEMATIC DIAGRAM

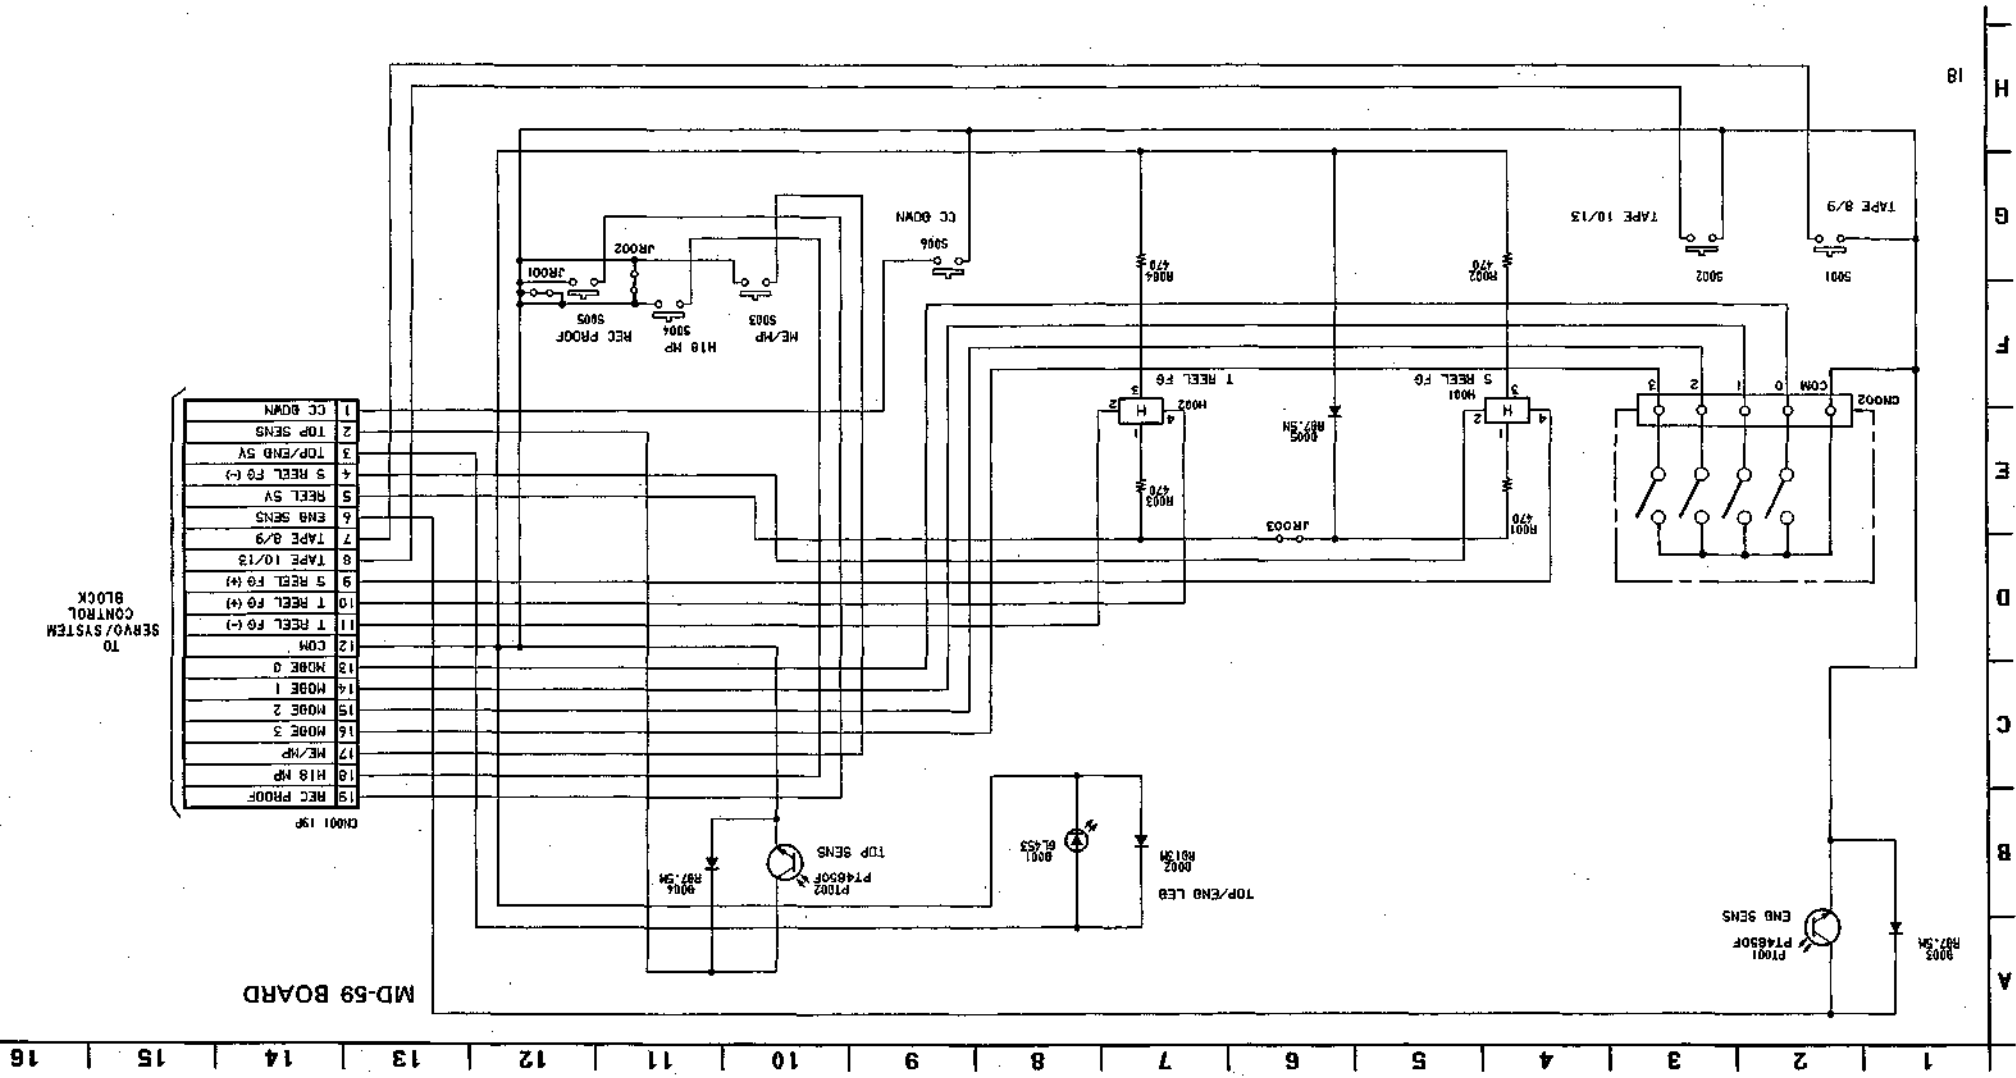


MD-59 BOARD

CH001 19P

TO
SERVO/SYSTEM
CONTROL
BLOCK

PRINTED WIRING BOARD

MD-59 BOARD

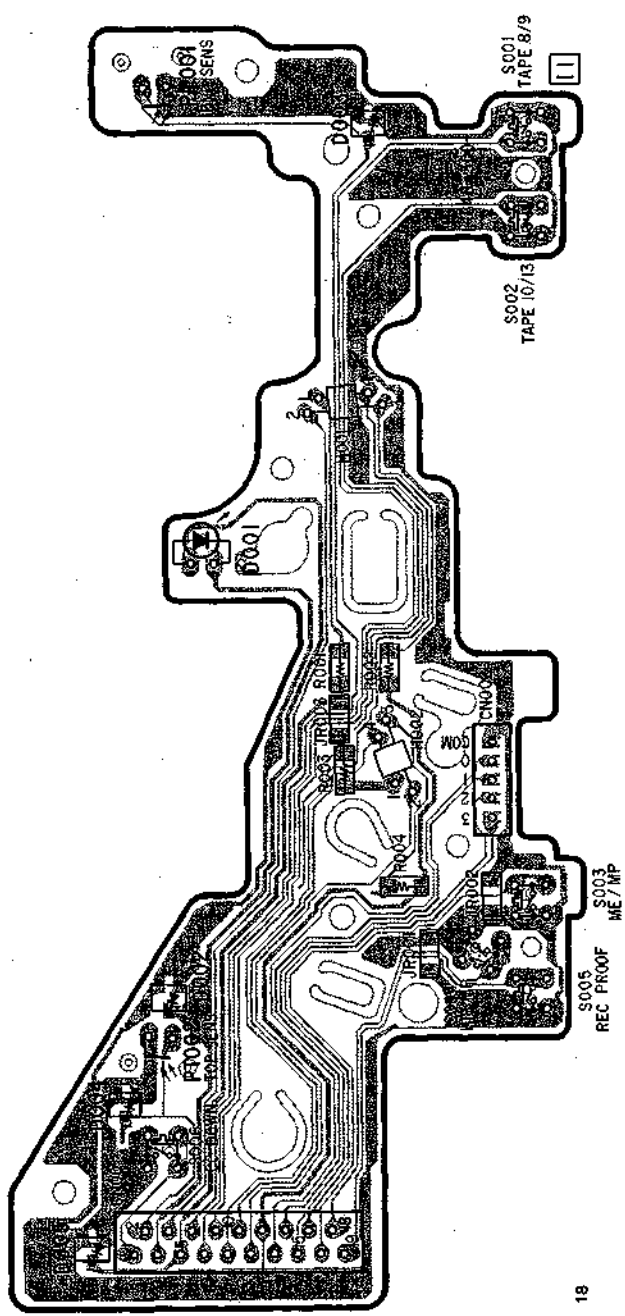

8 mm Video MECHANICAL ADJUSTMENT MANUAL V

MID-59

SECTION 8 ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u : μ , for example:
uA... : μ A..., uPA... : μ PA...,
uPB... : μ PB..., uPC... : μ PC..., uPD... : μ PD...,
uP... : μ P...
- CAPACITORS
uF : μ F
COILS
uH : μ H

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark
*	1-648-300-11	MD-59 BOARD *****	
	3-953-985-01	HOLDER, ST SENSOR	
	3-954-638-01	HOLDER (S), PUSH SWITCH	
	3-954-639-01	HOLDER (T), PUSH SWITCH	
		< CONNECTOR >	
CM001	1-569-341-11	CONNECTOR, BOARD TO BOARD 19P	
*CM002	1-750-620-11	CONNECTOR (M48 MD)	
		< DIODE >	
D001	8-719-988-42	DIODE GL453S	
D002	8-719-106-79	DIODE RD13M-B1	
D003	8-719-106-23	DIODE RD7.5M-B2	
D004	8-719-106-23	DIODE RD7.5M-B2	
D005	8-719-106-23	DIODE RD7.5M-B2	
		< HOLE ELEMENT >	
H001	1-808-118-11	ELEMENT, HALL HW-300A	
H002	1-808-118-11	ELEMENT, HALL HW/300A	
		< JUMPER RESISTOR >	
JR001	1-216-296-00	METAL CHIP 0 5% 1/8W	
JR002	1-216-296-00	METAL CHIP 0 5% 1/8W	
JR003	1-216-296-00	METAL CHIP 0 5% 1/8W	
		< TRANSFORMER >	
FT001	8-729-907-25	TRANSISTOR P74850F	
FT002	8-729-907-25	TRANSISTOR P74850F	
		< RESISTOR >	
R001	1-216-190-00	METAL GLAZE 470 5% 1/8W	
R002	1-216-190-00	METAL GLAZE 470 5% 1/8W	
R003	1-216-190-00	METAL GLAZE 470 5% 1/8W	
R004	1-216-190-00	METAL GLAZE 470 5% 1/8W	
		< SWITCH >	
S001	1-692-497-11	SWICH, PUSH (TAPE 8/9)	
S002	1-692-497-11	SWICH, PUSH (TAPE 10/13)	
		< CONNECTOR >	
S003	1-692-497-11	SWICH, PUSH (ME/MP)	
S004	1-692-497-11	SWICH, PUSH (H18 MP)	
S005	1-692-497-11	SWICH, PUSH (REC PROOF)	
S006	1-570-963-11	SWITCH, PUSH (1 KEY) (CC DOWN) *****	
		MISCELLANEOUS *****	
803	1-691-471-11	CONNECTOR, TRANSLATION 11P	
804	1-649-565-11	FP-696 FLEXIBLE BOARD	
825	*	DRUM ASSY	
866	1-692-498-11	SWITCH, ROTARY	
891	1-750-620-11	CONNECTOR (M48 MD)	
M901	*	DRUM ASSY	
M902	X-3942-946-1	MOTOR ASSY, CAM	
M903	8-835-499-01	MOTOR, DC SCE-0501A *****	
		< HARDWARE >	
#1	7-682-645-01	SCREW +PS 3X4	
#2	7-621-772-08	SCREW +B 2X3	
#3	7-688-003-01	W 3, SMALL	
#4	7-628-253-15	SCREW +PS 2X5	
#5	7-688-001-01	W 2, MIDDLE	
#6	7-627-853-57	PRECISION SCREW +P 2X5 TYPES	

8 mm Video MECHANICAL ADJUSTMENT MANUAL V

F MECHANISM

CORRECTION-1

Correct your MECHANICAL ADJUSTMENT MANUAL V as shown below.

Subject:

1. Change of Mounting and Removal of FL Worm Wheel
2. Change of Disassembly Figure, Parts

4-26. FL WORM WHEEL (Fig. 33)(Page 33)

1. Removal

- 1) Disengage tabs **A** at four places and remove the gear cover **1**.
- 2) Remove the FL worm wheel **2**.

2. Mounting

- 1) Mount the FL worm wheel **2**.
- 2) Meeting the hole **B** in drive gear with the hole in side plate, mount the FL worm wheel **2** while meeting the hole **C** in FL worm wheel with the hole in side plate.
- 3) Mount the gear cover **1**.


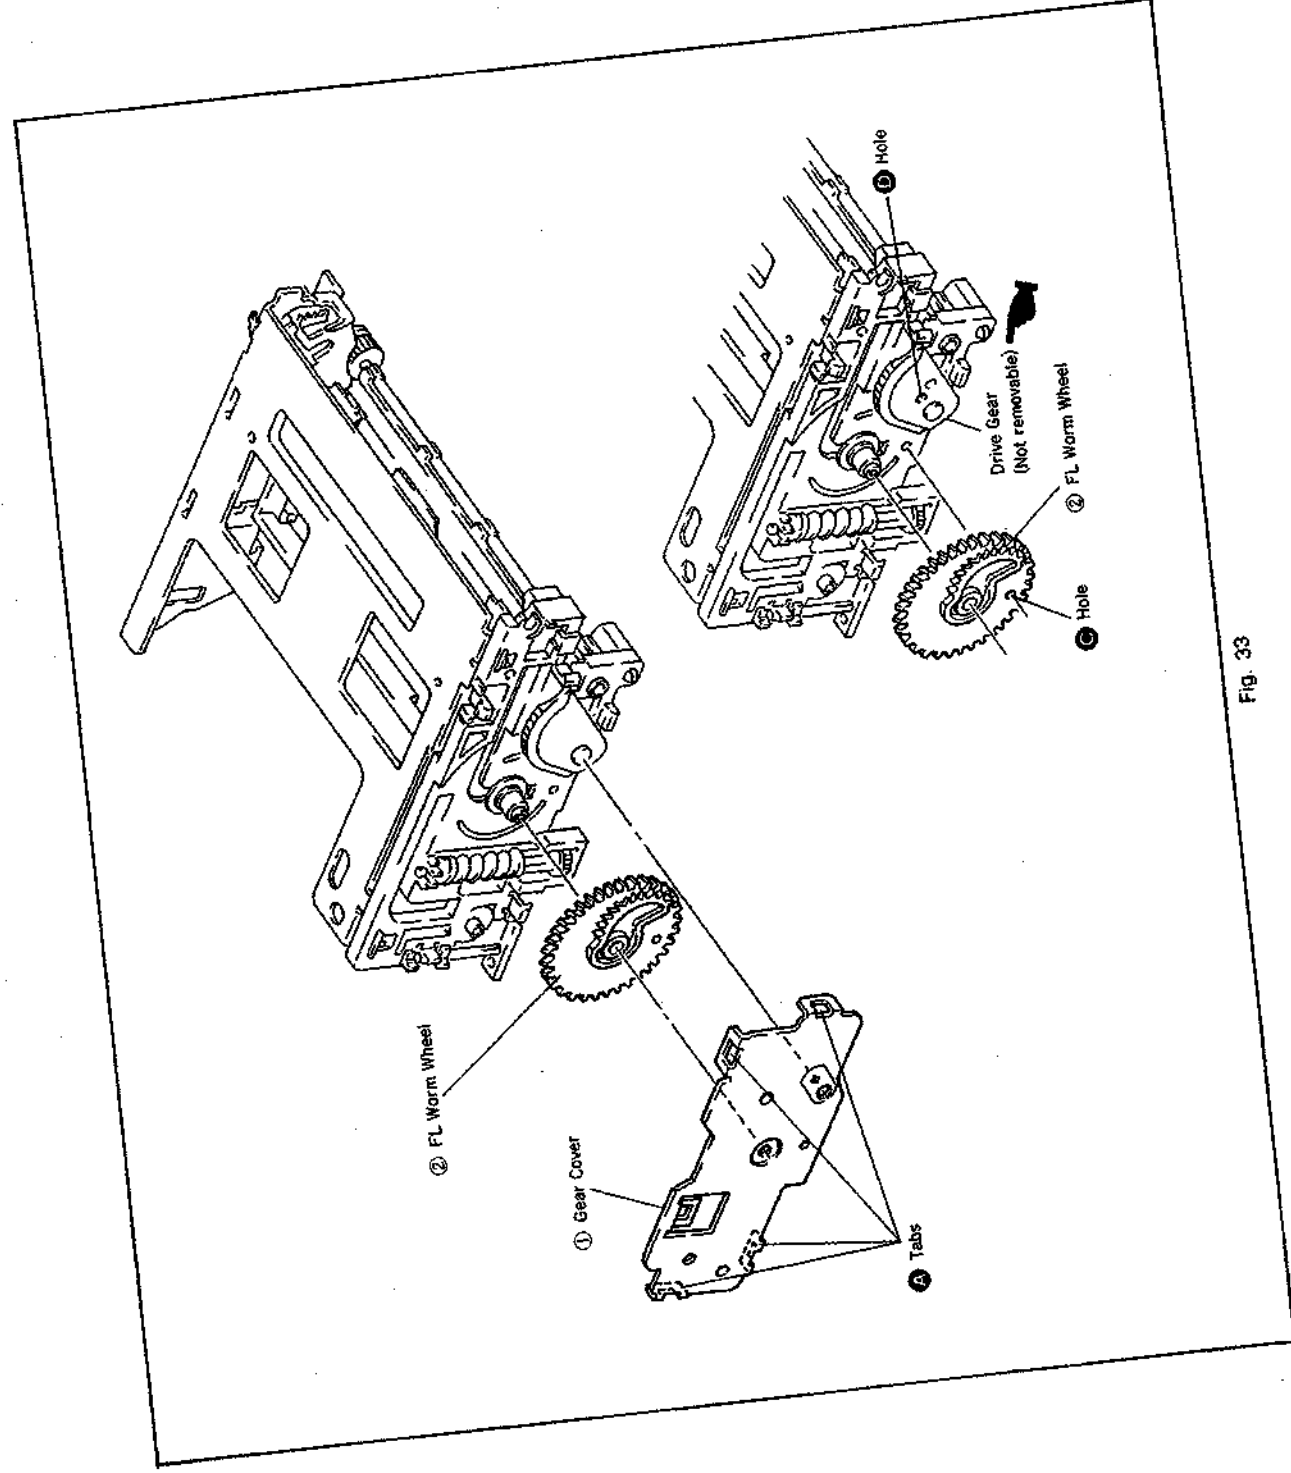


Fig. 33

 : Indicates Corrected portion


6-1. FRONT LOADING ASSEMBLY (Page 39)

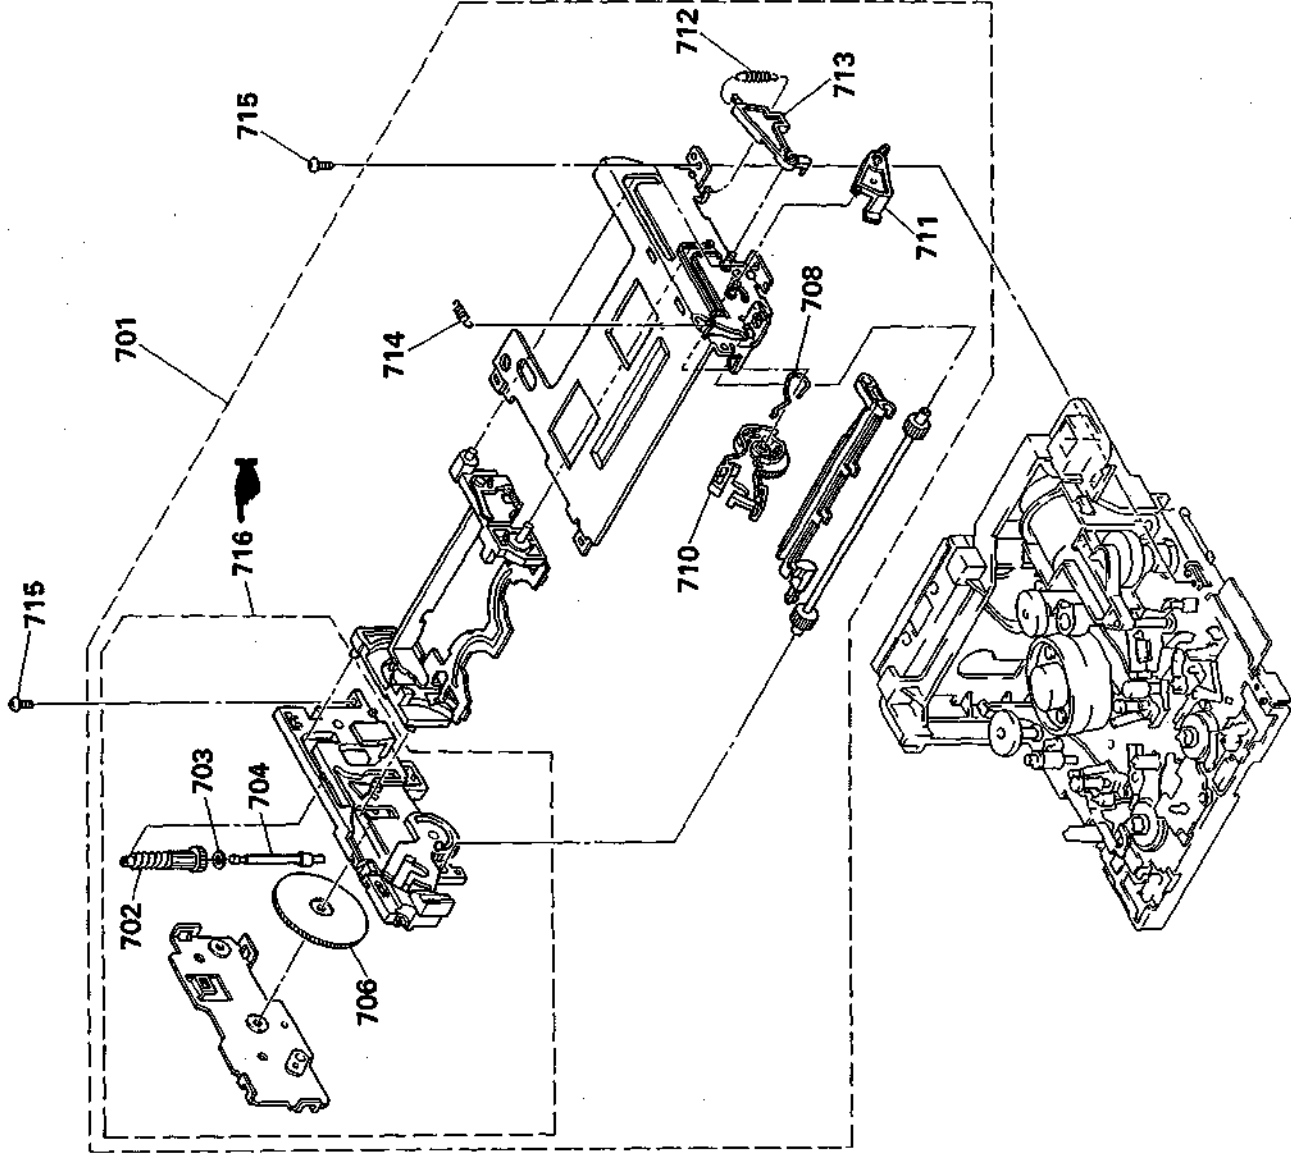

Ref. No.	Part No.	Description	Remark
701	A-7091-941-A	FL BLOCK ASSY	
702	3-954-028-01	GEAR, FL WORM	
703	3-736-212-11	RETAINER, THRUST, REEL TABLE	
* 704	3-954-029-01	SHAFT, FL WORM GEAR	
706	3-954-019-01	WHEEL, FL WORM	
708	3-954-042-01	SPRING, PRESS	

Ref. No.	Part No.	Description	Remark
710	3-954-033-01	ARM (T), DRIVING	
* 711	3-954-041-01	ARM, DOOR SWITCHING	
712	3-954-043-01	SPRING, TENSION	
* 713	3-954-040-01	ARM, CASSETTE IN SWITCH	
714	3-954-044-01	SPRING, TENSION	
715	3-732-817-01	SCREW (2X4.5), TAPPING	
716	A-7091-942-A	PLATE (S), SIDE ASSY	


6-2. MD CHASSIS ASSEMBLY (1) (Page 40)

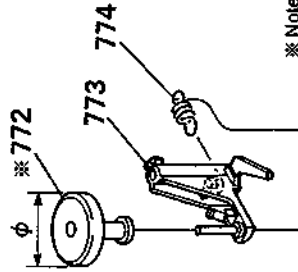

* Note that there are two kinds of impedance roller (M) weights whose diameters are as follows.
 NTSC model : ϕ 19
 PAL model : ϕ 10

Ref.No.	Part No.	Description	Remark
768	3-726-882-02	FLANGE, LOWER, TC2	
769	3-726-885-01	SLEEVE, TC2	
770	3-726-883-31	ROLLER, TC2	
771	3-726-884-01	FLANGE, UPPER, TC2	
772	3-954-282-01	ROLLER (M NTSC), IMPEDANCE	ADD
772	3-862-051-01	ROLLER (M PAL), IMPEDANCE	ADD
773	X-3943-016-1	BASE ASSY, ROLLER	
774	3-954-284-01	SPRING, TENSION	
775	3-954-096-01	SCREW, T67 HEIGHT ADJUSTMENT	
776	3-954-093-01	SPACER, TC7	
777	X-3942-958-1	ARM ASSY, TG7	
778	3-954-003-01	SPRING (TC7), TORSION	
779	X-3943-161-1	BRAKE (T) ASSY	
780	3-953-978-01	SPRING, TENSION	
781	3-732-817-01	SCREW (2X4.5), TAPPING	
782	3-738-212-11	RETAINER, THRUST, REEL TABLE	
783	3-669-465-00	WASHER (1.5), STOPPER	

6-3. MD CHASSIS ASSEMBLY (2) (Page 41)

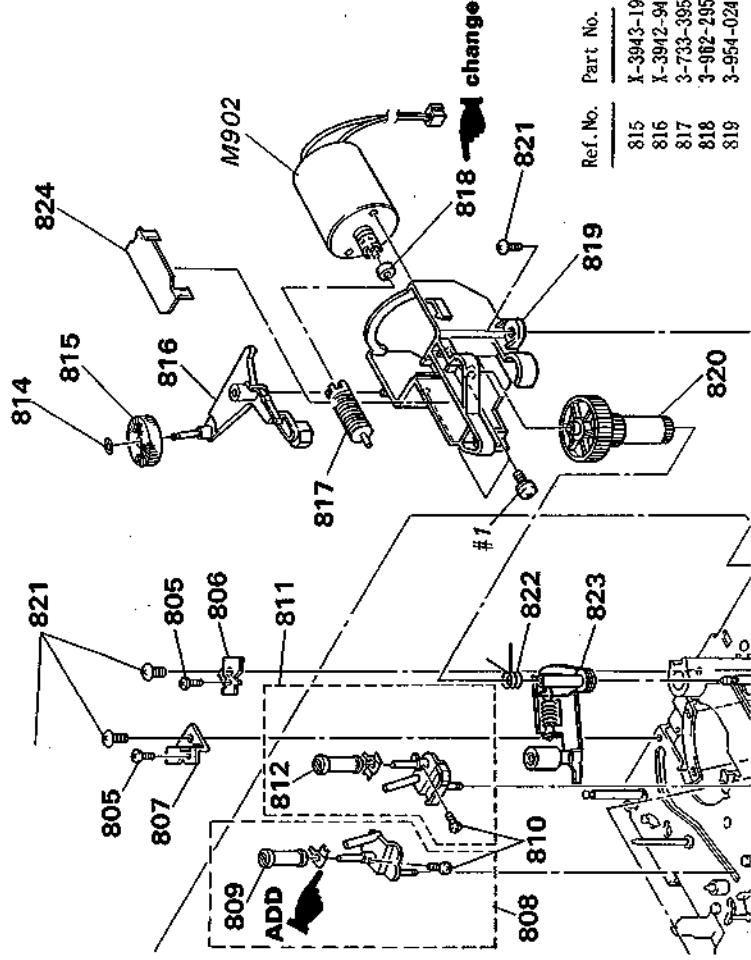

Ref.No.	Part No.	Description	Remark
815	X-3943-192-1	ROLLER ASSY, HC	
816	X-3942-947-1	ARM ASSY, HC	
817	3-733-395-01	GEAR (CAM), WORM	
818	3-962-295-01	RUBBER, JOINT	
819	3-954-024-01	HOLDER, MOTOR	
820	3-954-023-01	WHEEL, CAM WORM	
821	3-732-817-01	SCREW (2X4.5), TAPPING	
822	3-954-105-01	SPRING (PINCH DRIVING)	
823	X-3942-845-1	ARM ASSY, PINCH	
824	3-958-047-02	MOTOR HOLDER COVER	
825	*	DRUM, UPPER, ROTARY	
M901	*	DRUM ASSY	
M902	X-3942-946-1	MOTOR ASSY, CAM	

Sony Corporation
 Consumer A&V Products Company
 Home A&V Products Div.

9-973-445-92

English
 94J18113-1

©1984. 10
 Published by Personal A&V Products Div. Quality Engineering Dept.

8mm Video MECHANICAL ADJUSTMENT MANUAL V

F MECHANISM





video 8

CORRECTION-2

Please correct your 8mm Video MECHANICAL ADJUSTMENT MANUAL V.

Subject : 5-2. TRACKING ADJUSTMENT
(97-005)

8mm Video MECHANICAL ADJUSTMENT MANUAL V

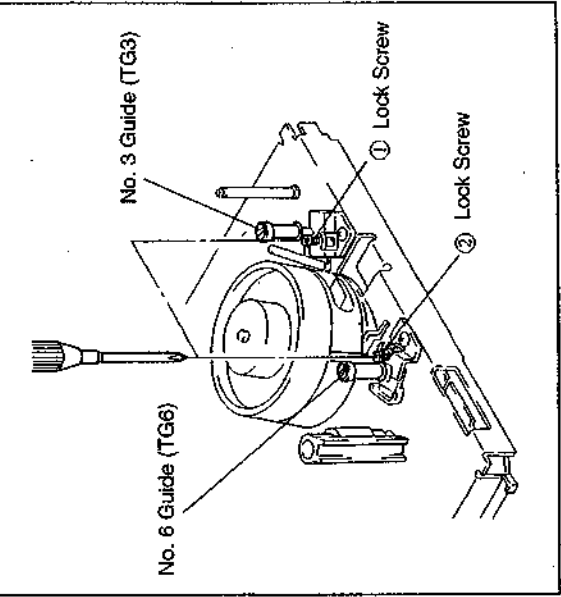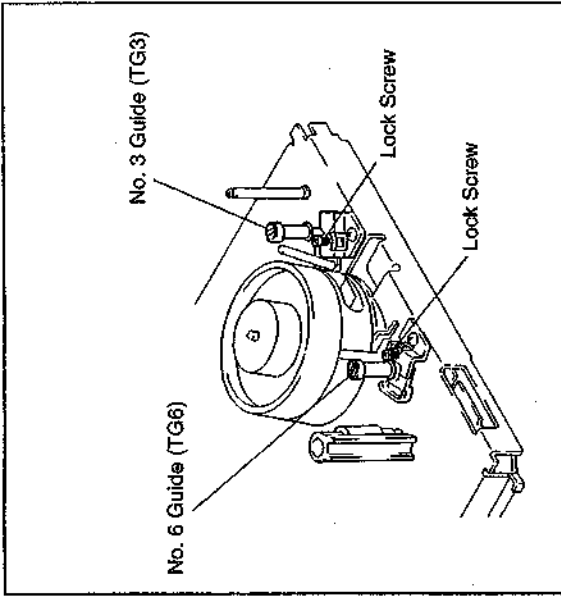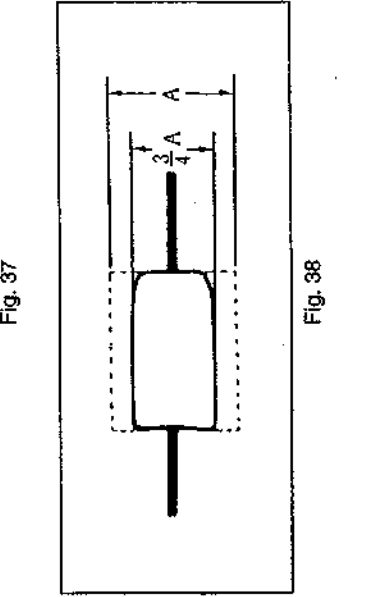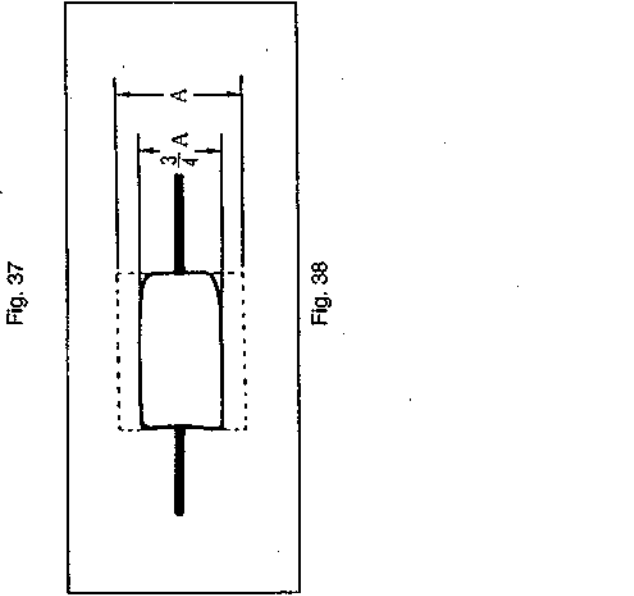Incorrect	Correct
<p>5-2. TRACKING ADJUSTMENT (Fig. 37, 38)</p> <ol style="list-style-type: none"> 1) Play back the tracking alignment tape. 2) Loosen the No. 3 guide (TG3) lock screw ① and turn the No. 3 guide to flatten the waveform at the inlet. 3) Tighten the No. 3 guide (TG3) lock screw ① to lock the No. 3 guide. 4) Loosen the No. 6 guide (TG6) lock screw ② and turn the No. 6 guide to flatten the waveform at the outlet. 5) Tighten the No. 6 guide (TG6) lock screw ② to lock the No. 6 guide. When this is done, make sure that the waveform does not change at the outlet. <p>Note : Be careful not to loosen the lock screw too much because the guide is easily moved.</p>	<p>5-2. TRACKING ADJUSTMENT (Fig. 37, 38)</p> <ol style="list-style-type: none"> 1) Play back the tracking alignment tape. 2) Turn the No. 3 guide to flatten the waveform at the inlet. 3) Turn the No. 6 guide to flatten the waveform at the outlet. <p>Note : Be careful not to touch the lock screw.</p>
 <p>Fig. 37</p>	 <p>Fig. 37</p>
 <p>Fig. 38</p>	 <p>Fig. 38</p>