


# ST-11L

AEP Model

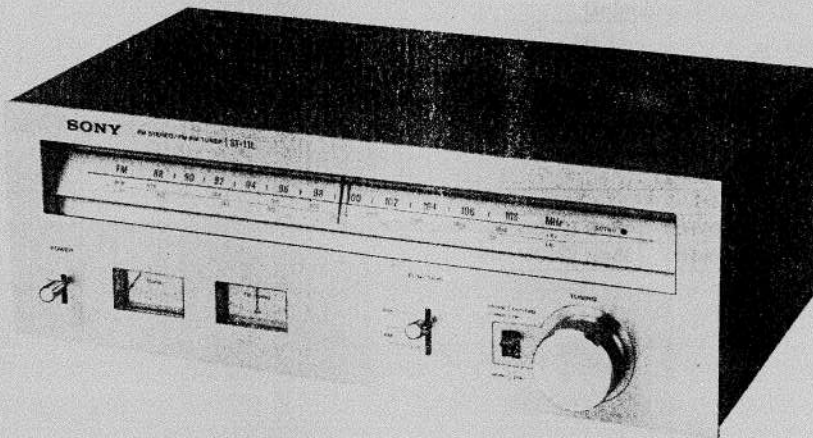

## FM STEREO/FM-AM TUNER

### SPECIFICATIONS

#### GENERAL

<b>Power Requirements:</b>	110, 120, 220 or 240V ac adjustable, 50/60Hz.
<b>Power Consumption:</b>	9W
<b>Dimensions:</b>	Approx. 406(w) x 145(h) x 245(d) mm 16(w) x 5 $\frac{1}{4}$ (h) x 9 $\frac{5}{8}$ (d) inches incl. projecting parts and controls
<b>Weight:</b>	Approx. 3.6 kg, 7 lb 15 oz (net) 4.9 kg, 10 lb 13 oz (with shipping carton)

#### FM SECTION

<b>Tuning Range:</b>	87.5–108MHz
<b>Antenna Terminals:</b>	300 $\Omega$ , balanced 75 $\Omega$ , unbalanced
<b>Intermediate Frequency:</b>	10.7MHz
<b>Sensitivity at 50dB Quieting:</b>	4.0 $\mu$ V (MONO), new IHF 17.3dBf 45 $\mu$ V (STEREO), new IHF 38.3dBf
<b>Usable Sensitivity:</b>	IHF 1.8 $\mu$ V, new IHF 10.3dBf
<b>S/N Ratio:</b>	70dB (MONO) 68dB (STEREO)

<b>Harmonic Distortion:</b>	At 100Hz 0.2% (MONO) 0.3% (STEREO) At 1kHz 0.2% (MONO) 0.3% (STEREO) At 10kHz 0.2% (MONO) 0.5% (STEREO)
<b>IM Distortion:</b>	0.2% (MONO) 0.3% (STEREO)
<b>Separation:</b>	35dB at 100Hz 45dB at 1kHz 35dB at 10kHz

<b>Frequency Response:</b>	30Hz–15kHz $^{+0.5}$ $_{-2.0}$ dB
<b>Alternate Channel Selectivity:</b>	55dB
<b>Capture Ratio:</b>	1.0dB
<b>AM Suppression Ratio:</b>	50dB
<b>Image Response Ratio:</b>	45dB
<b>IF Response Ratio:</b>	90dB
<b>Spurious Response Ratio:</b>	75dB
<b>RF Intermodulation:</b>	60dB
<b>Sub-carrier Product Ratio:</b>	30dB
<b>Muting Threshold:</b>	Approx. 3 $\mu$ V
<b>Output Level:</b>	750mV, 5k $\Omega$ (at 1kHz, 100% modulation)

— Continued on page 2 —

#### SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PARTS NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

# SONY

---


# SERVICE MANUAL

## MW, LW SECTION

	MW	LW
Tuning Range	530-1,605kHz	150-350kHz
Antenna	Built-in ferrite rod antenna External antenna terminal	
Intermediate Frequency	455kHz	
Usable Sensitivity	48dB/m, built-in antenna(1,000kHz)	55dB/m, built-in antenna(240kHz)
S/N Ratio	50dB (50mV/m)	48dB (50mV/m)
Harmonic Distortion	0.5% (50mV/m, 400Hz)	
Selectivity	45dB (10kHz)	
Image Response Ratio	40dB (1,000kHz)	45dB (240kHz)
IF Response Ratio	35dB (1,000kHz)	35dB (240kHz)

## SECTION 1 OUTLINE

### 1-1. BLOCK DIAGRAM

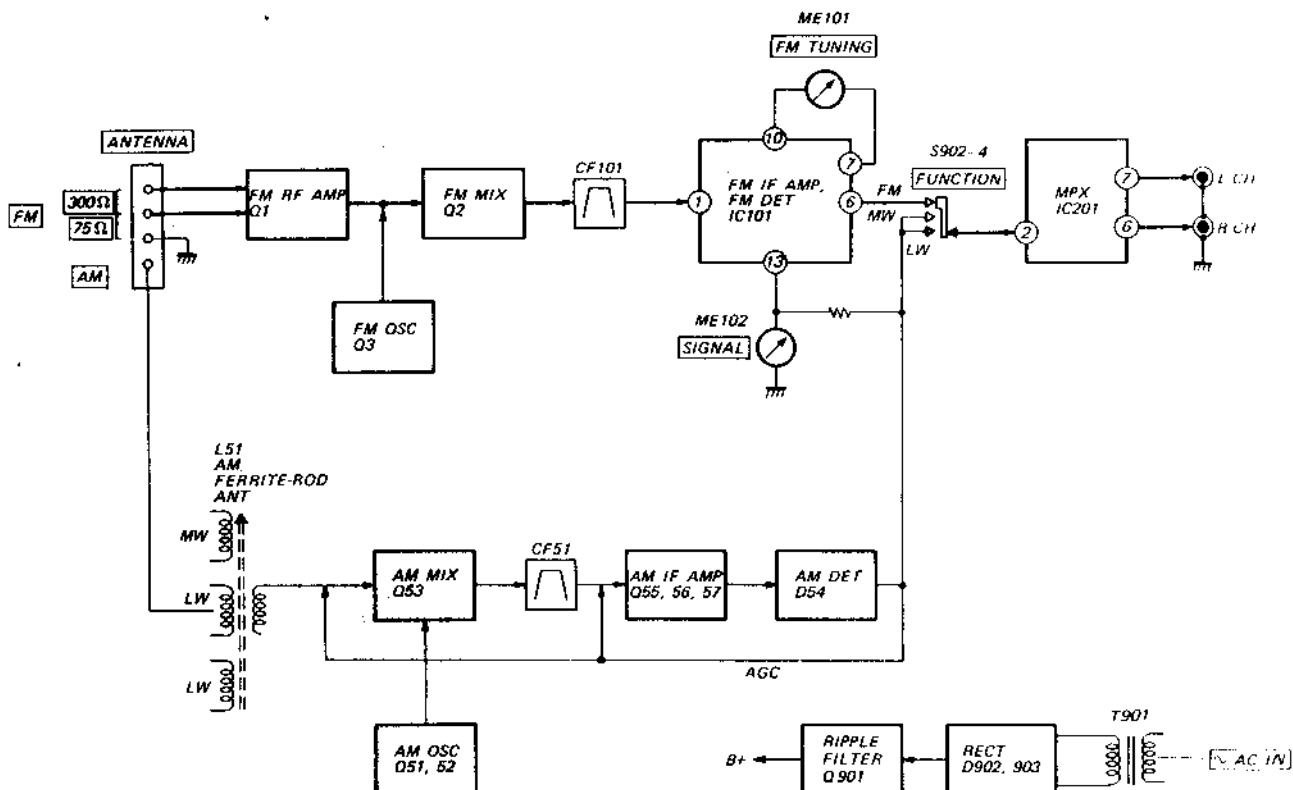


SECTION 3  
DISASSEMBLY

FM DISCRIMINATOR ALIGNMENT 1


Procedure:

1. Connect a 300Ω resistor across ANTENNA FM 300Ω terminals.
2. Detune the set.
3. Turn the core (primary side) of IF101 for null-point reading on the FM TUNING meter.

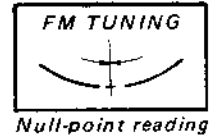

FM STEREO SEPARATION ADJUSTMENT

Procedure:

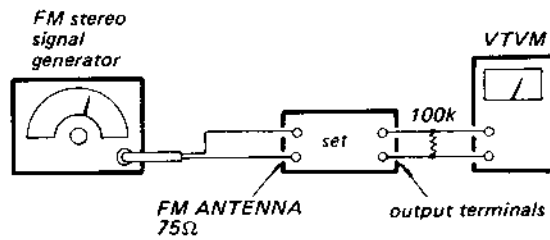


Carrier frequency: 98 MHz  
Output level: 1 mV (60 dB)  
Mode: Stereo  
Modulation:  
Audio (400 Hz): 33.75 kHz deviation (45%)  
Pilot (19 kHz): 7.5 kHz deviation (10%)  
Sub channel (38 kHz): 33.75 kHz deviation (45%)

FUNCTION Switch: FM STEREO

FM stereo signal generator output channel	VTVM connection	VTVM reading
L-CH	L-CH	Ⓐ
R-CH	L-CH	Ⓑ <sup>ⓑ</sup> Adjust RV202 resistor for minimum reading.
R-CH	R-CH	Ⓒ
L-CH	R-CH	Ⓓ <sup>ⓓ</sup> Adjust RV202 resistor for minimum reading.


Stereo separation: Ⓐ - Ⓑ, Ⓒ - Ⓓ

The difference between separations Ⓐ → Ⓑ and Ⓒ → Ⓓ are to be equal.

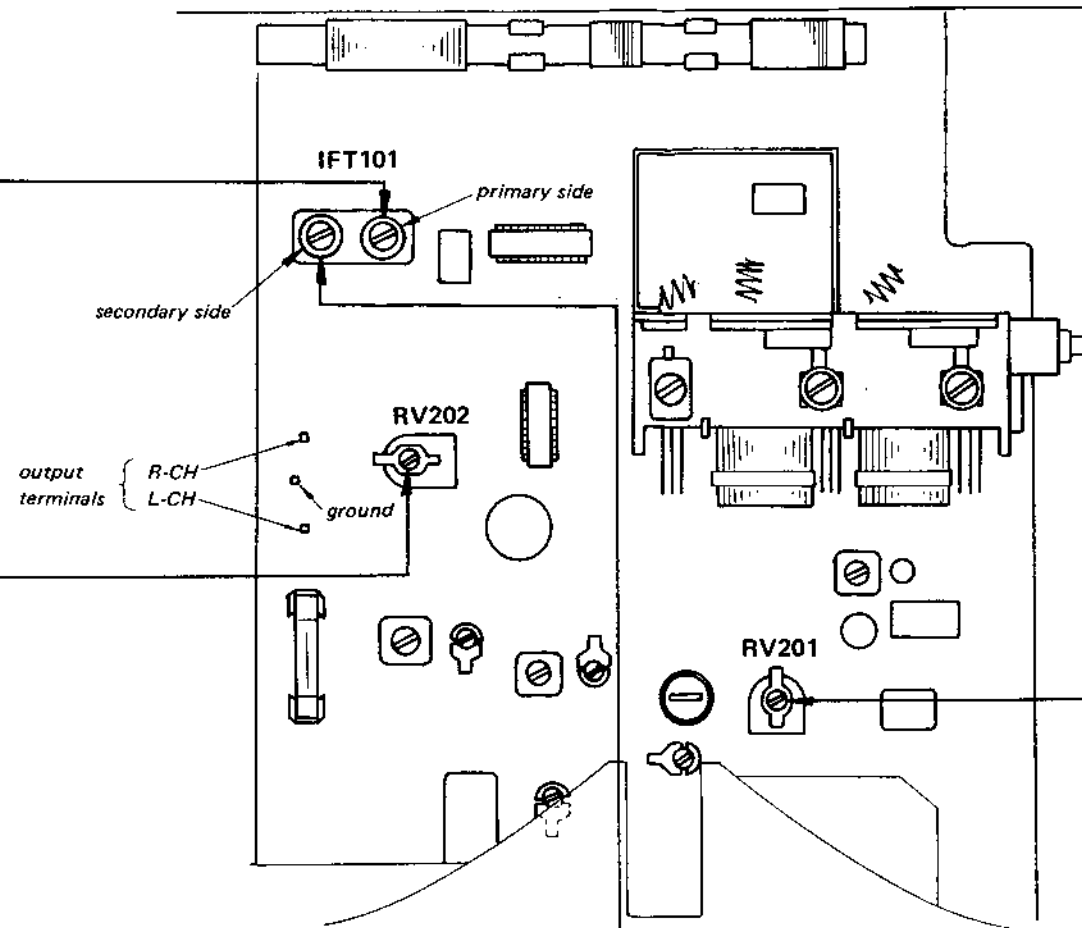

FM DISCRIMINATOR ALIGNMENT 2

Procedure:

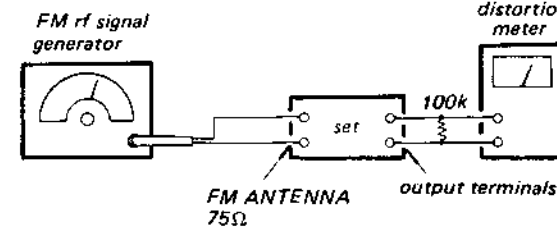


Carrier frequency: 10.7 MHz  
Modulation: 400 Hz, 100%  
Output level: 1mV (60dB)

1. Set FUNCTION switch to FM MONO.
2. Turn the core (secondary side) of IFT101 for a minimum distortion reading on the distortion meter.


MPX ADJUSTMENT

A) Regular Method

Procedure:

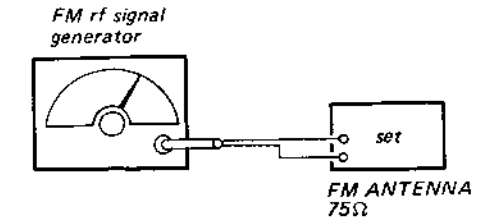

Carrier frequency: 98 MHz  
Modulation: no modulation  
Output level: 1 mV (60 dB)

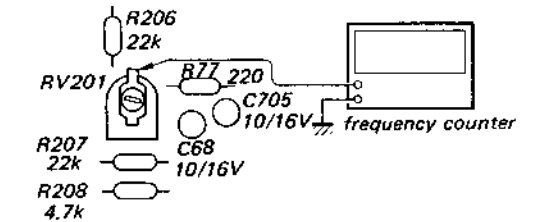


1. Tune the set to 98 MHz.
2. Adjust RV201 for 76kHz±400Hz on the counter.

B) Simple Method


Procedure:

1. Tune the set to the FM stereo broadcasting signal.
2. Turn RV201 clockwise or counterclockwise and memorize the lighting-up range of STEREO lamp.
3. Secure RV201 at the center in lighting-up range of both turns as shown below.

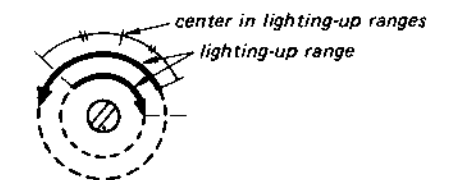

**FM SECTION**

FUNCTION Switch: FW

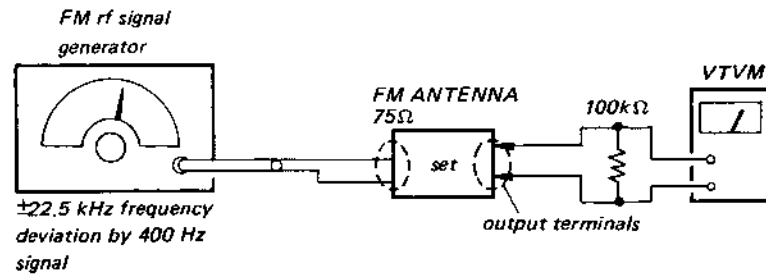

- Repeat the procedures in each adjustment several times, and the frequency coverage and tracking adjustments should be finally done by the trimmer capacitors.

**FM FREQUENCY COVERAGE ADJUSTMENT**

Adjust for maximum reading on VTVM.

87.1 Mhz (87.5 MHz)	L5
108.5 MHz (108 MHz)	CT3


( ) : in West Germany

**FM TRACKING ADJUSTMENT**

Adjust for maximum reading on VTVM.

L3, L4	87.1 MHz
L1, L2	(87.5 MHz)
CT2	108.4 MHz
CT1	(108 MHz)

( ) : in West Germany

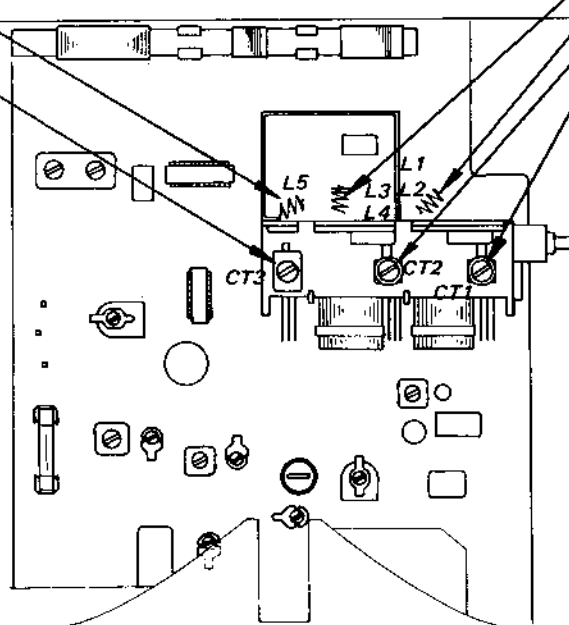


**MW, LW SECTION**

FUNCTION Switch: MW or LW

**MW, LW FREQUENCY COVERAGE AND TRACKING 1 ADJUSTMENTS.**

LW antenna selector: BUILT-IN ANT



AF rf signal generator

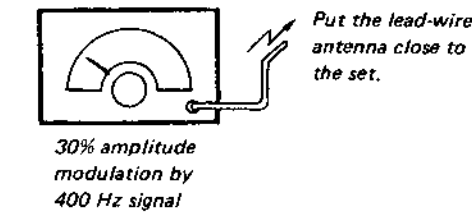

**LW TRACKING 2 ADJUSTMENT.**

LW antenna selector: EXT ANT

AM rf signal generator

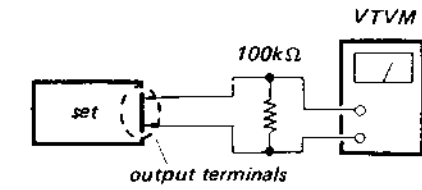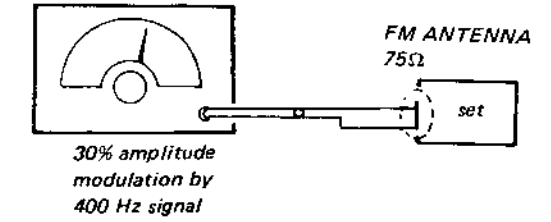

- Repeat the procedures in each adjustment several times, and the frequency coverage and tracking adjustments should be finally done by the trimmer capacitors.

**MW TRACKING ADJUSTMENT**

Adjust for maximum reading on VTVM

620 kHz	L51
1400 kHz	CT54

**LW TRACKING 1 ADJUSTMENT**

- LW antenna selector: BUILT-IN ANT position.
- Adjust for maximum reading on VTVM.

L51	170 kHz
CT53	310 kHz

**MW FREQUENCY COVERAGE ADJUSTMENT**

Adjust for maximum reading on VTVM

1680 kHz	CT52
520 kHz	L52


**AM IF ADJUSTMENT**

Adjust for maximum reading on VTVM.

IFT51	455 kHz
-------	---------

L53	CT51
145 kHz	365 kHz
Adjust for maximum reading on VTVM.	
<b>LW FREQUENCY COVERAGE ADJUSTMENT</b>	


<b>LW TRACKING 2 ADJUSTMENT</b>	
1) LW antenna selector: EXT. ANT position	
2) Adjust for maximum reading on VTVM.	
L55	170 kHz

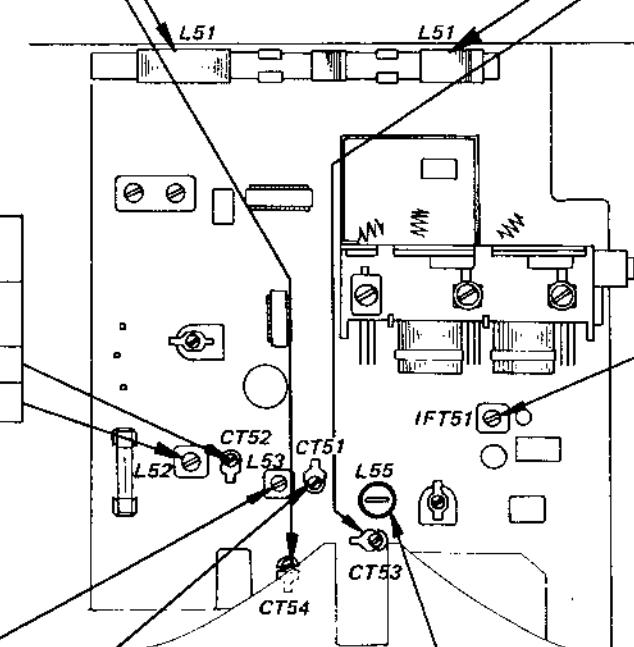

**SECTION 2  
REMOVAL**


**2-1. MAIN UNIT REMOVAL**

Remove the case first and remove the parts in the numerical order as shown below.

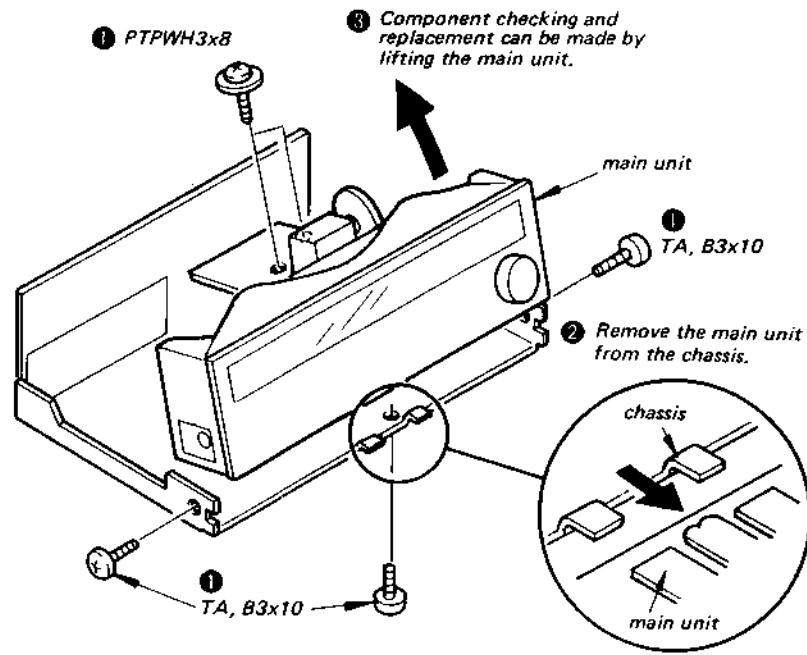


**2-2. DIAL CORD STRINGING**

**1. Dial Cord Preparation**

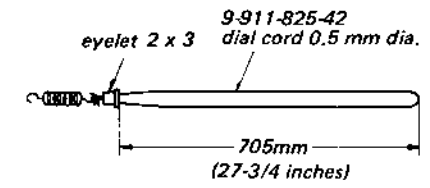


**2. Dial Cord Stringing**

1 Set the shaft of the tuning capacitor to full-clockwise position.

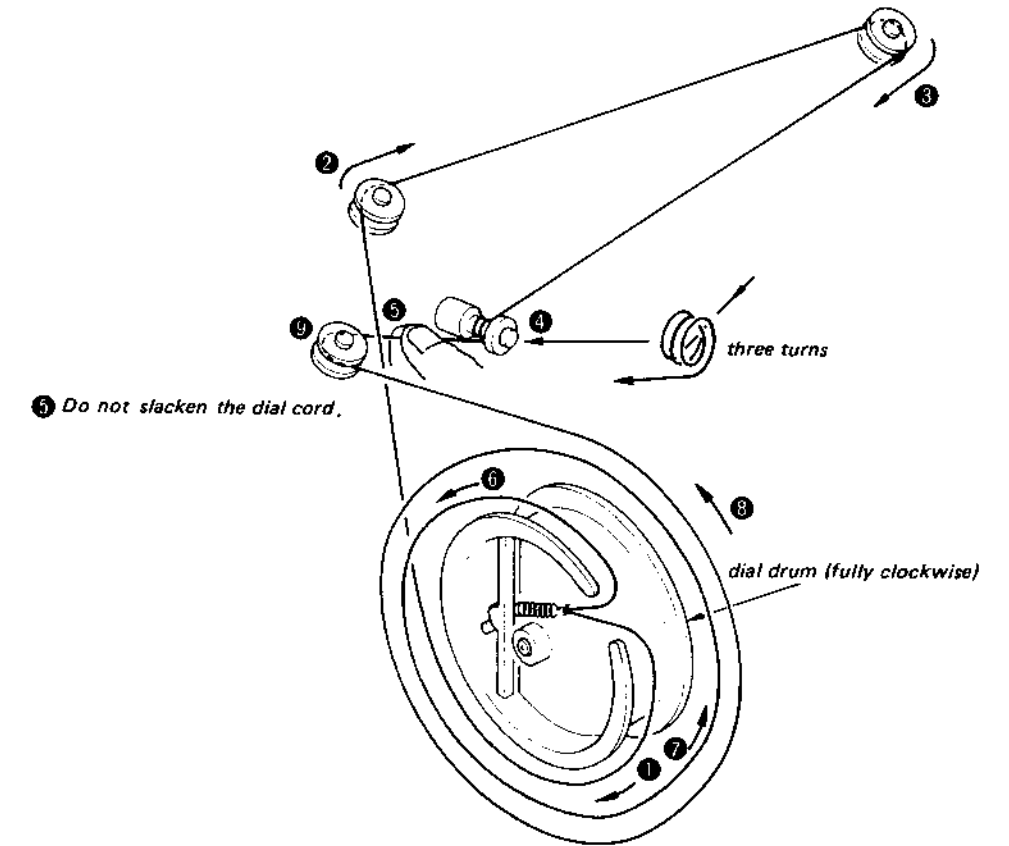


**3. Dial Pointer Setting**

Receive a broadcasting station and set the dial pointer on the dial scale.

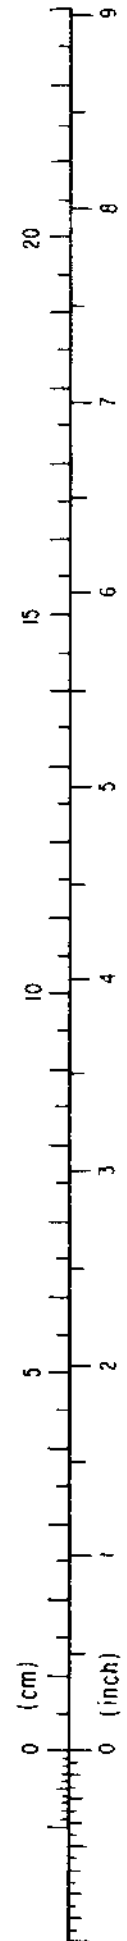

# ST-11L ST-11L

## 4-2. SCHEMATIC DIAGRAM

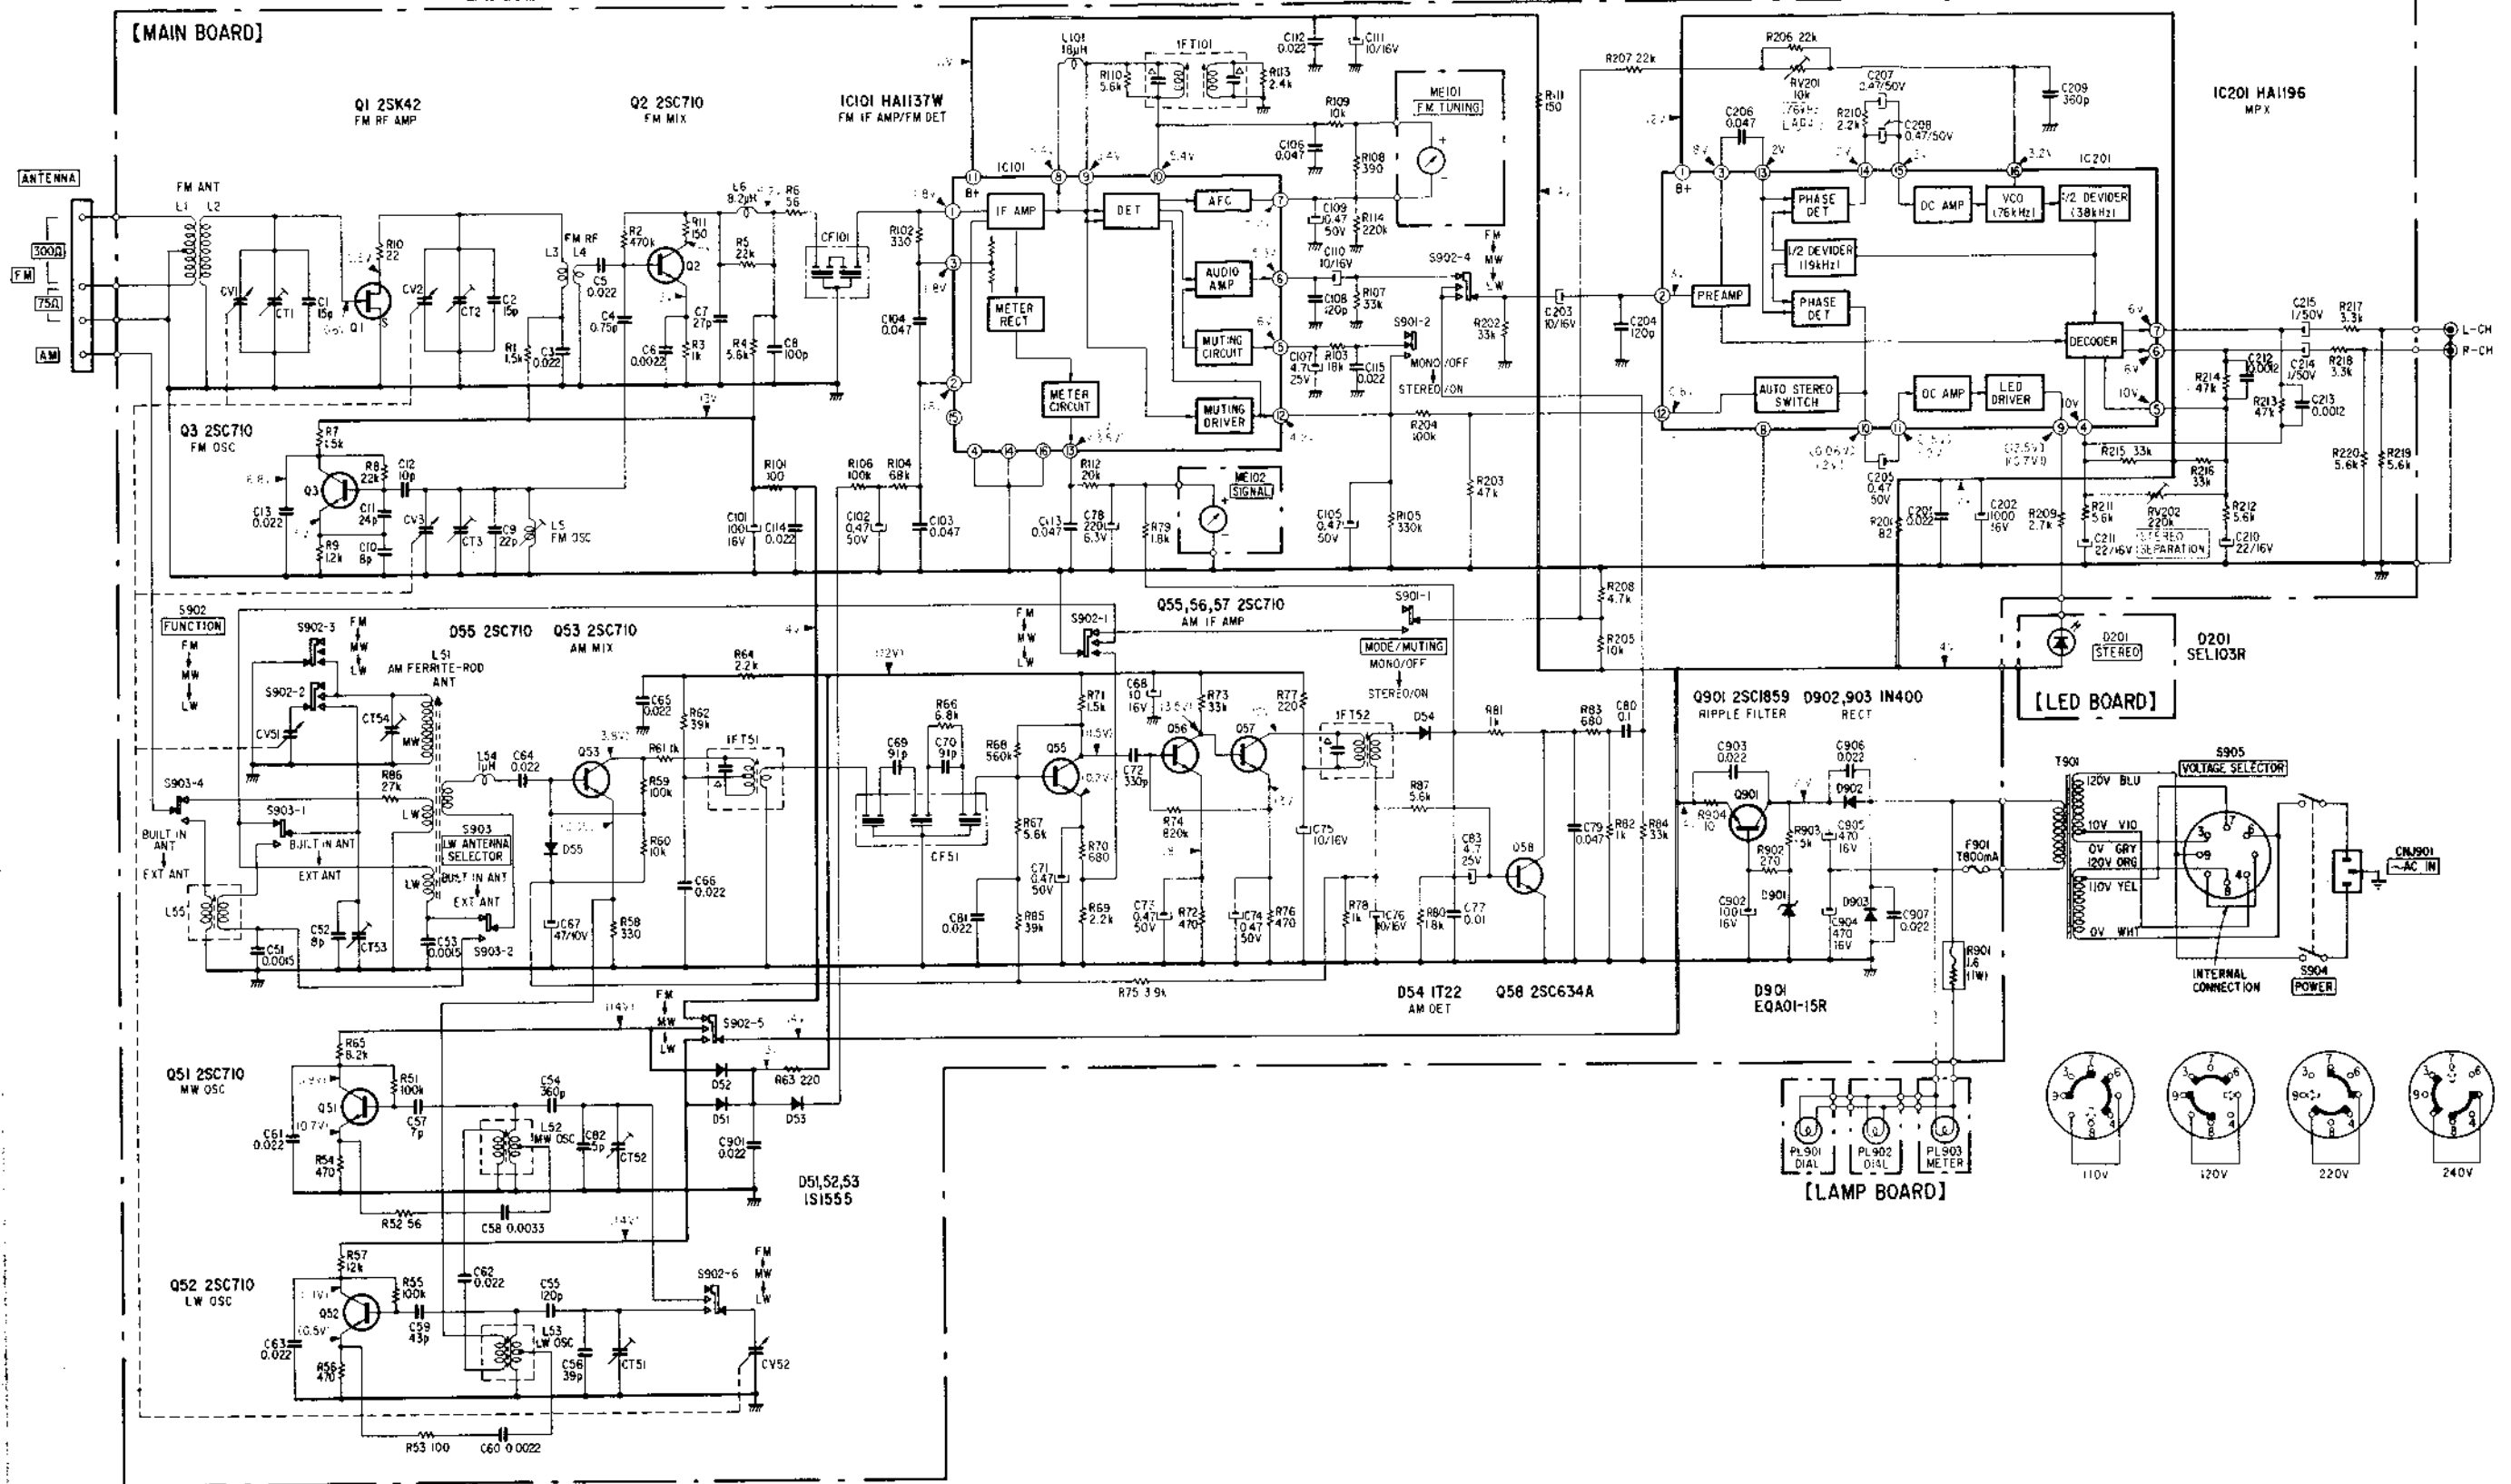

**Note:**

- All capacitors are in  $\mu\text{F}$  unless otherwise noted.  $\text{pF} = \mu\text{F} \times 10^{-6}$  or less are not indicated except for electrolytics.
- All resistors are in ohms,  $\frac{1}{4}\text{W}$  unless otherwise noted.  $\text{k}\Omega = 1000\Omega$ ,  $\text{M}\Omega = 1000\text{k}\Omega$
- : fusible resistor.

- : internal component.
- : Transistor is used for D55.
- : B+ bus.
- : Panel designation.
- : direct connection to points marked on the chassis.
- Voltage variations may be noted due to normal production tolerances.

- : adjustment for repair.
- Voltages are dc with respect to ground unless otherwise noted.
- Readings are taken under FM detuned conditions with a VDM (20  $\text{k}\Omega/\text{V}$ ).
- { } : AM detuned.
- [ ] : D201 turns OFF.
- < > : FM tuned.
- ( ) : D201 turns ON.

• Switch

Ref. No.	Switch	Position
S901-1, 2	MODE/MUTING	MONO/OFF
S902-1 to 902-6	FUNCTION	FM
S903-1,2,4	LW ANTENNA SELECTOR	BUILT IN ANT
S904	POWER	OFF
S905	VOLTAGE SELECTOR	—









**Note:** The components identified by shading are critical for safety. Replace only with part number specified.

SECTION 4  
DIAGRAMS


4-1. MOUNTING DIAGRAM

- Conductor Side -


Replacement Semiconductors  
For replacement, use semiconductors except in ( ).

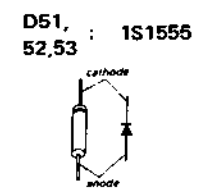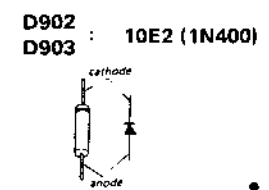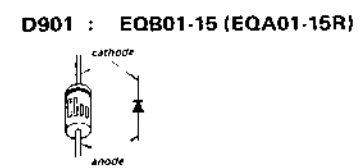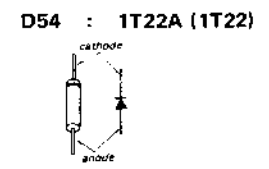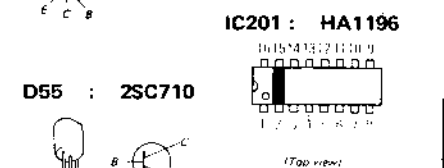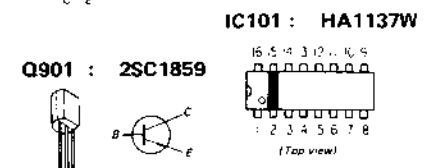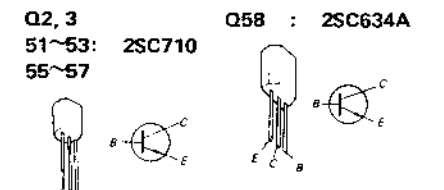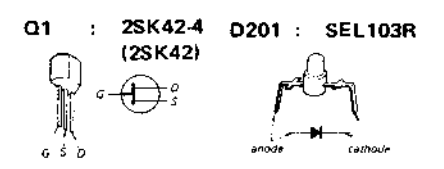

• Color code of sleeving over the end of the jacket.

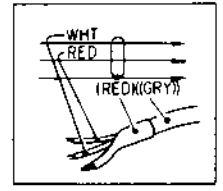


□ indicates side identified with part number.

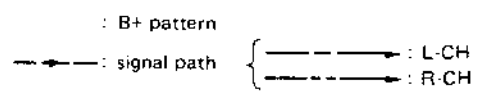

Voltages are dc with respect to ground unless otherwise noted.

Readings are taken under FM detuned conditions with a VOM (20 kΩ/V).  
( ) : AM detuned.  
[ ] : D201 turns OFF.  
< > : FM tuned.  
( ( ) ) : D201 turns ON.

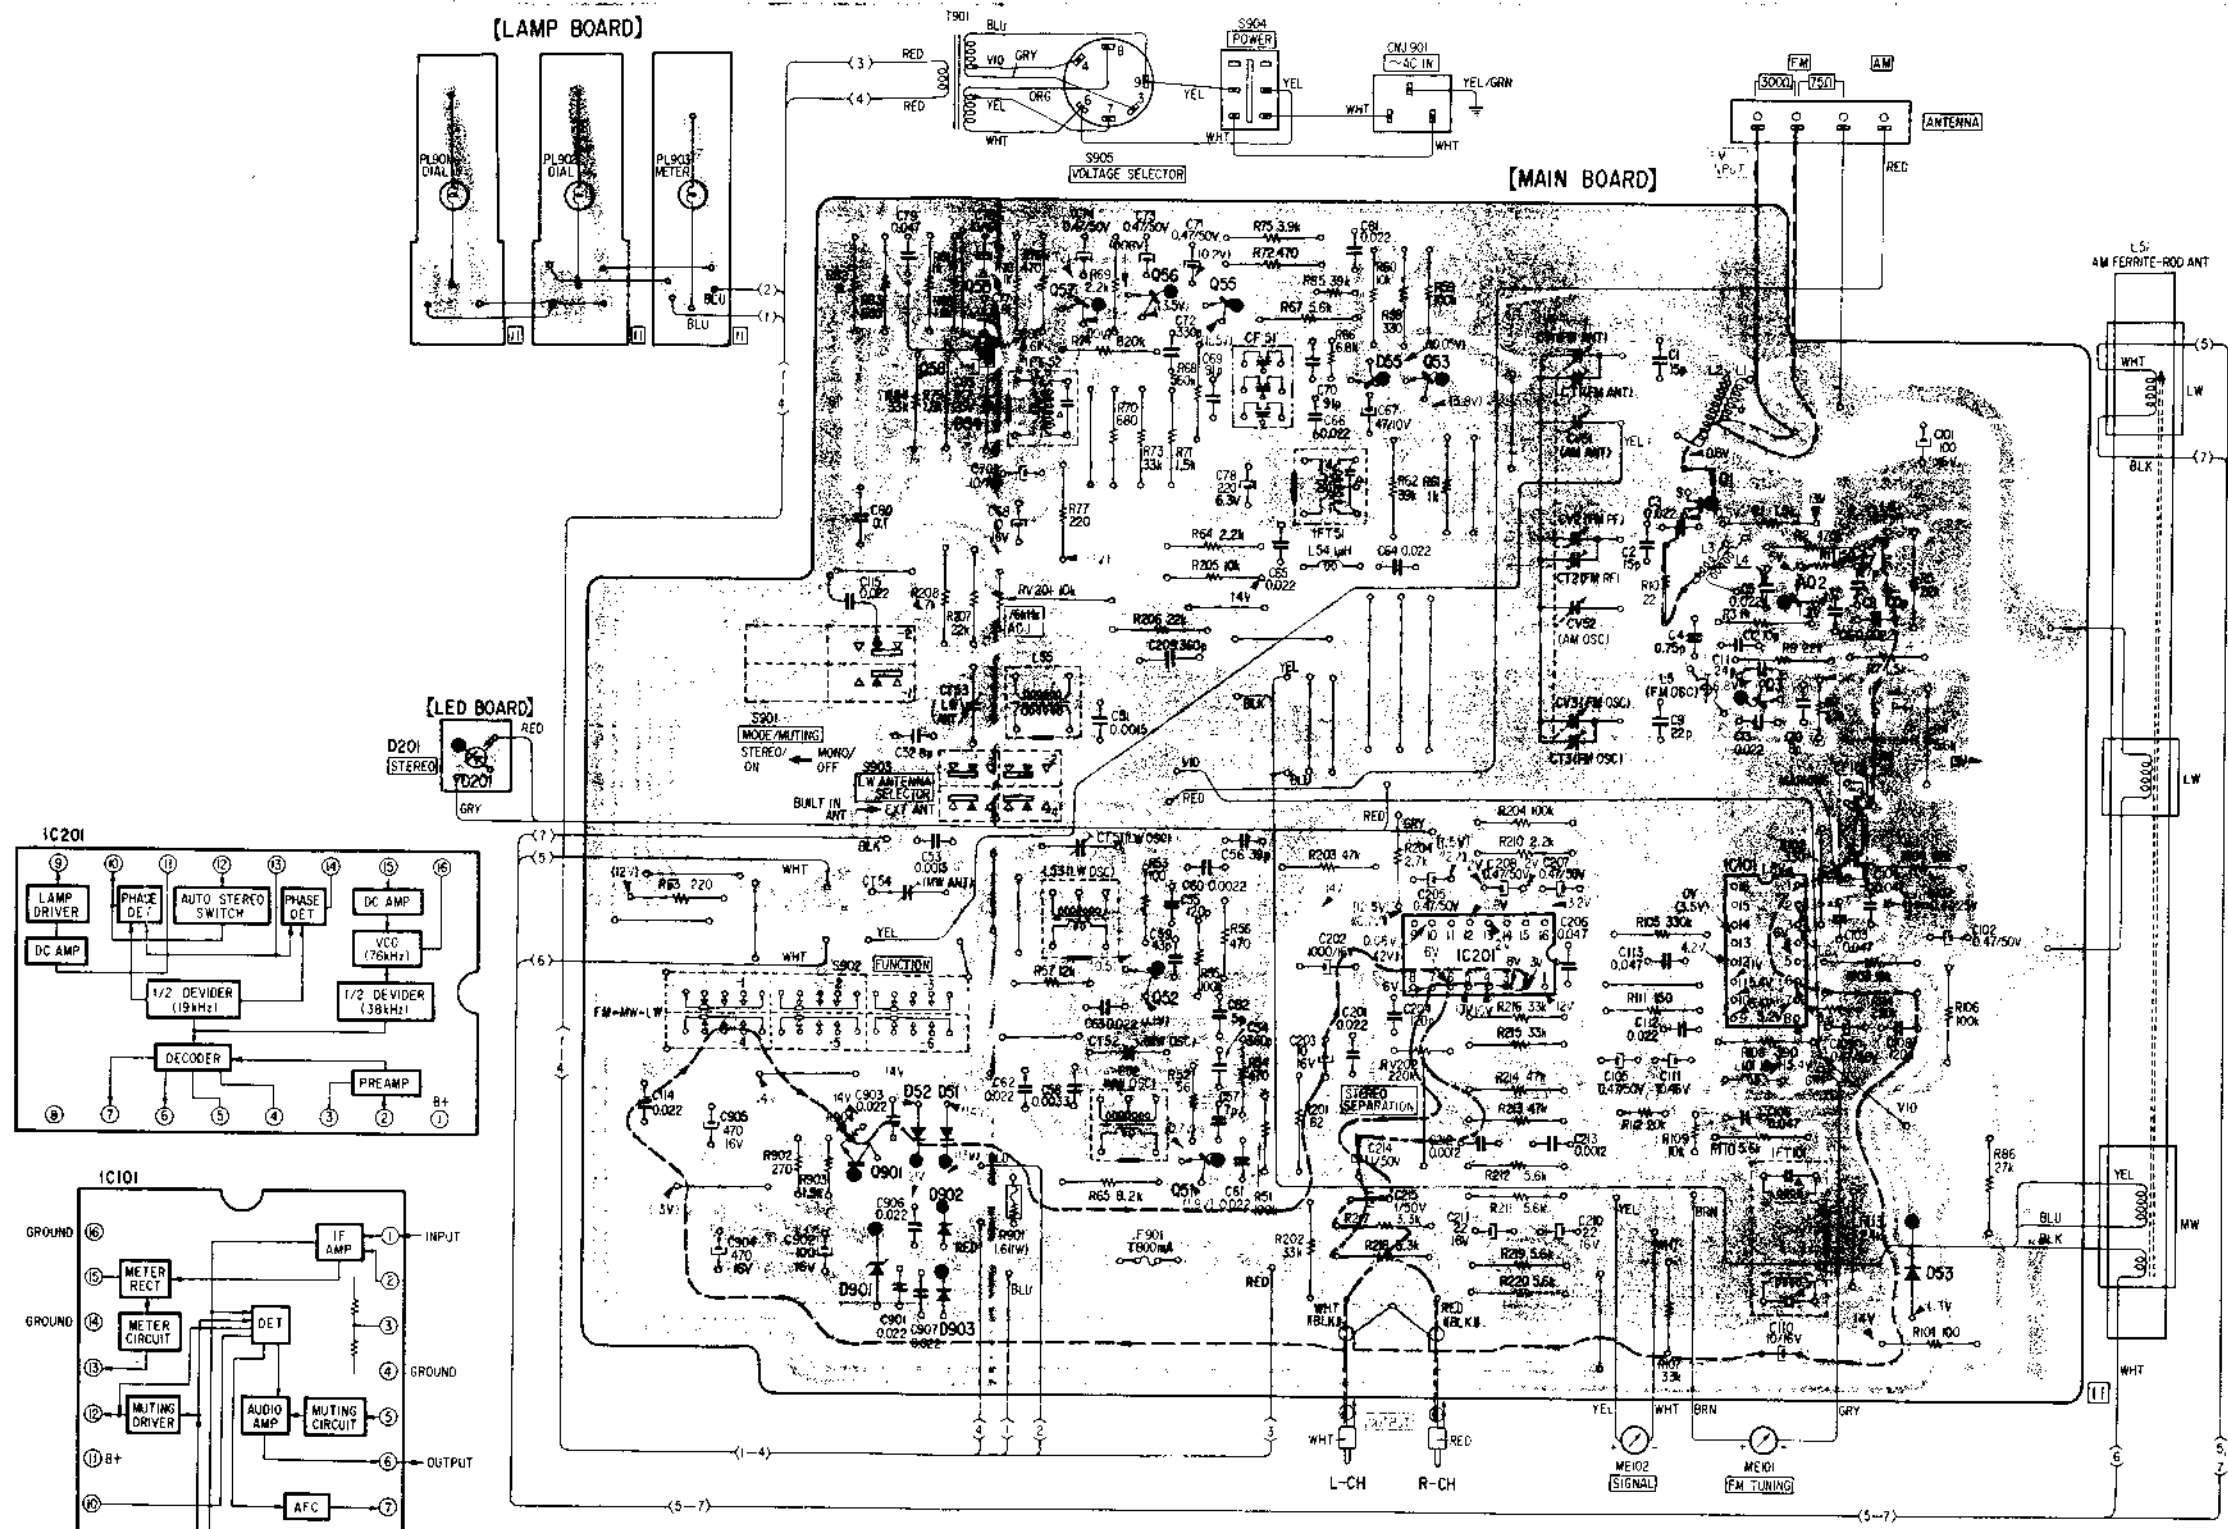

Q, IC	D
57 56 55	
58 53	54 55
	1
	2
	3
	201
52 IC201 IC101	
901 51	52 51
	902
	901 903
	53





Note: Circled letters (A to Z) are applicable to European models only.

Ref. No.	Part No.	Description
C78	1-121-419-11 (B) 220	6.3V elect
C79	1-161-021-11 (A) 0.047	(boundary layer)
C80	1-101-797-11 (A) 0.1	
C81	1-101-924-11 (A) 0.022	
C82	1-102-281-11 (A) 5p	
C83	1-121-395-11 (A) 4.7	25V elect
C101	1-121-415-11 (B) 100	16V elect
C102	1-121-726-11 (A) 0.47	50V elect
C103, 104	1-101-925-11 (A) 0.047	
C105	1-121-726-11 (A) 0.47	50V elect
C106	1-101-925-11 (A) 0.047	
C107	1-121-395-11 (A) 4.7	25V elect
C108	1-102-816-11 (A) 120p	
C109	1-121-726-11 (A) 0.47	50V elect
C110, 111	1-121-651-11 (A) 10	16V elect
C112	1-101-924-11 (A) 0.022	
C113	1-101-925-11 (A) 0.047	
C114, 115	1-101-924-11 (A) 0.022	
C201	1-101-924-11 (A) 0.022	
C202	1-121-245-11 (B) 1000	16V elect
C203	1-121-651-11 (A) 10	16V elect
C204	1-102-816-11 (A) 120p	
C205	1-121-726-11 (A) 0.47	50V elect
C206	1-161-021-11 (A) 0.047	(boundary layer)
C207, 208	1-121-726-11 (A) 0.47	50V elect
C209	1-103-714-11 (A) 360p	polystyrol
C210, 211	1-121-479-11 (A) 22	16V elect
C212, 213	1-161-002-11 (A) 0.0012	(boundary layer)
C214, 215	1-121-391-11 (A) 1	50V elect
C901	1-101-924-11 (A) 0.022	
C902	1-121-415-11 (B) 100	16V elect
C903	1-101-924-11 (A) 0.022	
C904, 905	1-121-426-11 (B) 470	16V elect
C906, 907	1-101-924-11 (A) 0.022	
CT51-54	1-141-138-XX (B)	Trimmer
CV1-3	1-151-325-00 (J)	Tuning

Ref. No.	Part No.	Description
CV51, 52	1-151-325-00 (J)	Tuning

### RESISTORS

All resistors are in ohms. Common 1/4W carbon resistors are omitted. Check schematic diagram for values.

R901 1-213-041-11 (A) 1.5 1W fusible

RV201 1-222-645-XX (B) 10K, adjustable  
RV202 1-222-649-XX (B) 220K, adjustable

### SWITCHES

S901 1-552-169-00 (B) Slide, MODE/MUTING  
S902 1-552-242-00 (D) Slide, FUNCTION  
S903 1-552-243-00 (C) Slide, LW ANTENNA SELECTOR  
S904 1-516-315-XX (E) Lever, POWER  
S905 1-524-576-21 (E) Voltage Selector

### JACKS

CNJ001 1-536-520-00 (B) Terminal, 4P  
CNJ901 1-536-520-00 (C) Connector, 3P inlet, AC IN

### FUSE

F901 1-532-215-00 (B) T800mA

### MISCELLANEOUS

CF51 1-527-305-00 (D) Filter  
CF101 1-231-304-00 (D) Filter, 10.7MHz  
ME101 1-520-305-00 (H) Meter, FM TUNING  
ME102 1-520-304-00 (H) Meter, SIGNAL  
PL901 ~ 903 1-518-275-00 (B) Pilot Lamp  
1-501-161-00 (E) Feeder Antenna  
1-551-294-00 (E) Cord with phono-plug, connection

Note: The components identified by shading are critical for safety. Replace only with part number specified.

## SECTION 6 ELECTRICAL PARTS LIST

**Note:** Circled letters (A) to (Z) are applicable to European models only.

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
<b>SEMICONDUCTORS</b>		
<b>Transistors</b>		
⇒ Q1		(C) 2SK42-4
Q2, 3		(B) 2SC710
Q51-53		(B) 2SC710
Q55-57		(B) 2SC710
Q58		(B) 2SC634A
Q901		(B) 2SC1859
<b>ICs</b>		
IC101		(H) HA1137W
IC201		(G) HA1196
<b>Diodes</b>		
D51-53		(B) 1S1555
⇒ D54		(B) 1T22A
D55		(B) 2SC710
D201		(B) SEL103R
⇒ D901		(B) EQB01-15
⇒ D902, 903		(B) 10E2
<b>COILS</b>		
L1	1-420-875-00	(A) Coreless
L4	1-405-612-00	(A) FM RF
L6	1-407-692-00	(A) 8.20μH, microinductor
L51	1-401-713-00	(F) Ferrite-rod Antenna
L52	1-405-732-00	(B) MW OSC
L53	1-405-731-00	(B) LW OSC
L54	1-407-178-XX	(A) 1μH, microinductor
L55	1-401-676-00	(B) LW EXT ANTENNA
L101	1-407-741-00	(B) 18μH, microinductor
IFT051	1-404-089-00	(C) IFT
IFT052	1-404-064-00	(B) AM Detector
IFT101	1-404-011-00	(C) FM Discriminator

⇒ : Due to standardization, interchangeable replacer may be substituted for parts specified in the diagrams.

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
<b>TRANSFORMER</b>		
T901	1-442-930-00	Power
<b>CAPACITORS</b>		
All capacitors are in μF and ceramic unless otherwise noted. 50WV or less are not indicated except for electrolytics. pF = μμF, elect = electrolytic		
C1, 2	1-102-951-11	(A) 15p
C3	1-101-924-11	(A) 0.022
C4	1-101-586-11	(A) 0.75p
C5	1-101-924-11	(A) 0.022
C6	1-102-121-11	(A) 0.0022
C7	1-102-961-11	(A) 27p
C8	1-102-973-11	(A) 100p
C9	1-102-600-11	(A) 22p
C10	1-102-684-11	(A) 8p
C11	1-102-601-11	(A) 24p
C12	1-102-858-11	(A) 10p
C13	1-101-924-11	(A) 0.022
C51	1-103-729-11	(A) 0.0015 polystyrol
C52	1-102-945-11	(A) 8p
C53	1-103-729-11	(A) 0.0015 polystyrol
C54	1-103-714-11	(A) 360p polystyrol
C55	1-103-703-11	(A) 120p polystyrol
C56	1-102-965-11	(A) 39p
C57	1-102-944-11	(A) 7p
C58	1-102-123-11	(A) 0.0033
C59	1-102-966-11	(A) 43p
C60	1-102-121-11	(A) 0.0022
C61 ~ C66	1-101-924-11	(A) 0.022
C67	1-121-352-11	(A) 47 10V elect
C68	1-121-651-11	(A) 10 16V elect
C69, 70	1-102-972-11	(A) 91p
C71	1-121-726-11	(A) 0.47 50V elect
C72	1-102-820-11	(A) 330p
C73, 74	1-121-726-11	(A) 0.47 50V elect
C75, 76	1-121-651-11	(A) 10 16V elect
C77	1-161-013-11	(A) 0.01 (boundary layer)

**Note:** The components identified by shading are critical for safety. Replace only with part number specified.



**Note:** Circled letters (A to Z) are applicable to European models only.

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
<b>ACCESSORIES &amp; PACKING MATERIALS</b>		
	3-701-630-00	(A) Bag, plastic
	3-770-341-11	(E) Manual, instruction
	4-851-242-00	(E) Carton
	4-851-243-00	(B) Cushion
	4-891-037-00	(A) Bag, plastic