


AEP Model

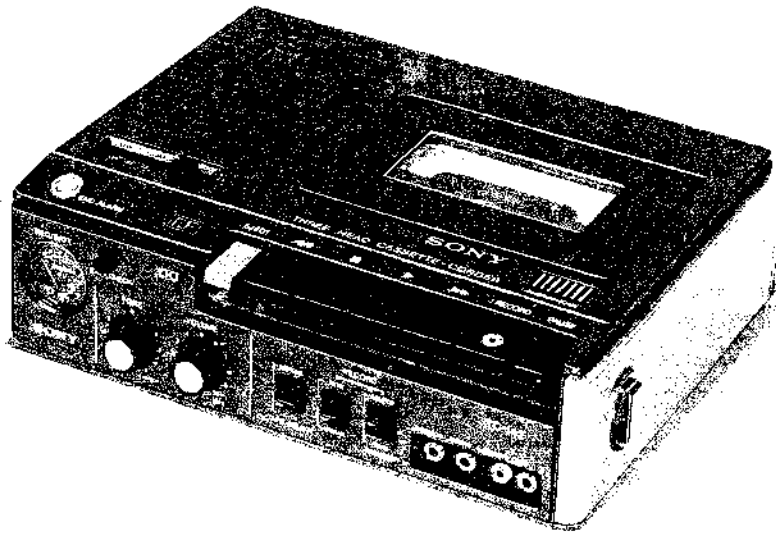


THREE-HEAD CASSETTE RECORDER

SPECIFICATIONS


Power Requirements:	DC 6V Battery size-C, 4 pcs, Sony rechargeable battery BP-16H, Car battery by using Sony car-battery cord DCC-127H AC operation by using AC power adaptor AC-456C.	Semiconductors:	23 transistors, 1 FET (built-in microphone), 7 diodes
Battery Life:	Sony long-life battery size-C Approx. 5 hours in continuous recording Sony rechargeable battery BP-16H (charged for approx. 21 hours) Approx. 7 hours in continuous recording	Built-in Microphone:	Electret condenser microphone C-1003F
Track:	Two-track monaural	Record/Playback Head:	PF160-36A (250 Ω /1 kHz)
Tape Speed:	4.8 cm/s, 1 7/8 ips	Playback Head (monitor):	PP153-61 (850 Ω /1 kHz)
Tape:	Sony tape cassette or equivalent	Erase Head:	EF135-36 (640 Ω /80 kHz)
Frequency Response:	70 ~ 10,000 Hz (NORMAL) 70 ~ 12,000 Hz (CrO ₂)	Motor:	DC servo motor D-013F
Wow and Flutter:	0.26% (RMS) weighted	Automatic Shut-off Mechanism:	Operates in any function mode by detecting the reel spindle rotation.
Signal-to-Noise Ratio:	45 dB	End Alarm:	Alarm by END ALARM lamp and MONITOR sound, operates before end-of-tape in record mode (from approx. 1.5 minutes before end-of-tape with cassette C-60 used).
Distortion:	3%	Inputs:	MIC (mini jack) Maximum sensitivity: -72 dB (0.19 mV) Impedance: low LINE IN (mini jack) Maximum sensitivity: -22 dB (62 mV) Impedance: 100 k Ω
Record Bias Frequency:	Approx. 85 kHz	Output:	MONITOR (mini jack) Normal level: 0 dB (0.775 v) Load impedance: 8 Ω or greater than 10 k Ω
Erase Ratio:	60 dB	Dimensions:	247 (w) x 192 (d) x 72 (h) mm 9 3/4 (w) x 7 3/8 (d) x 2 7/8 (h) inches
Cross Talk:	55 dB between tracks	Weight:	2.4 kg, 5 lb 5 oz (with batteries)
Maximum Output Power:	1.2 W		
Speaker:	7 x 10 cm, 2 1/2 x 4 inches Voice coil impedance: 32 Ω		

SERVICE MANUAL

1-2. EXTERNAL VIEWS

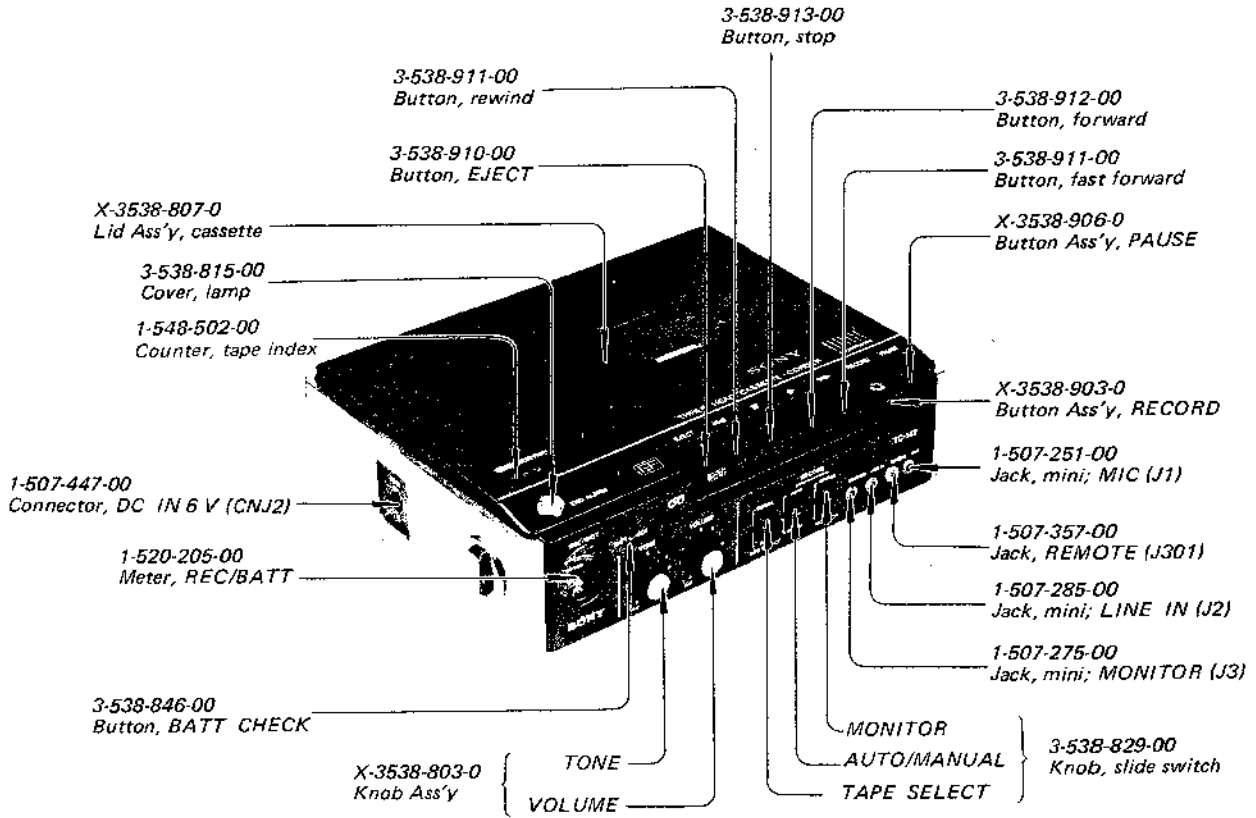

1.3. INTERNAL VIEWS

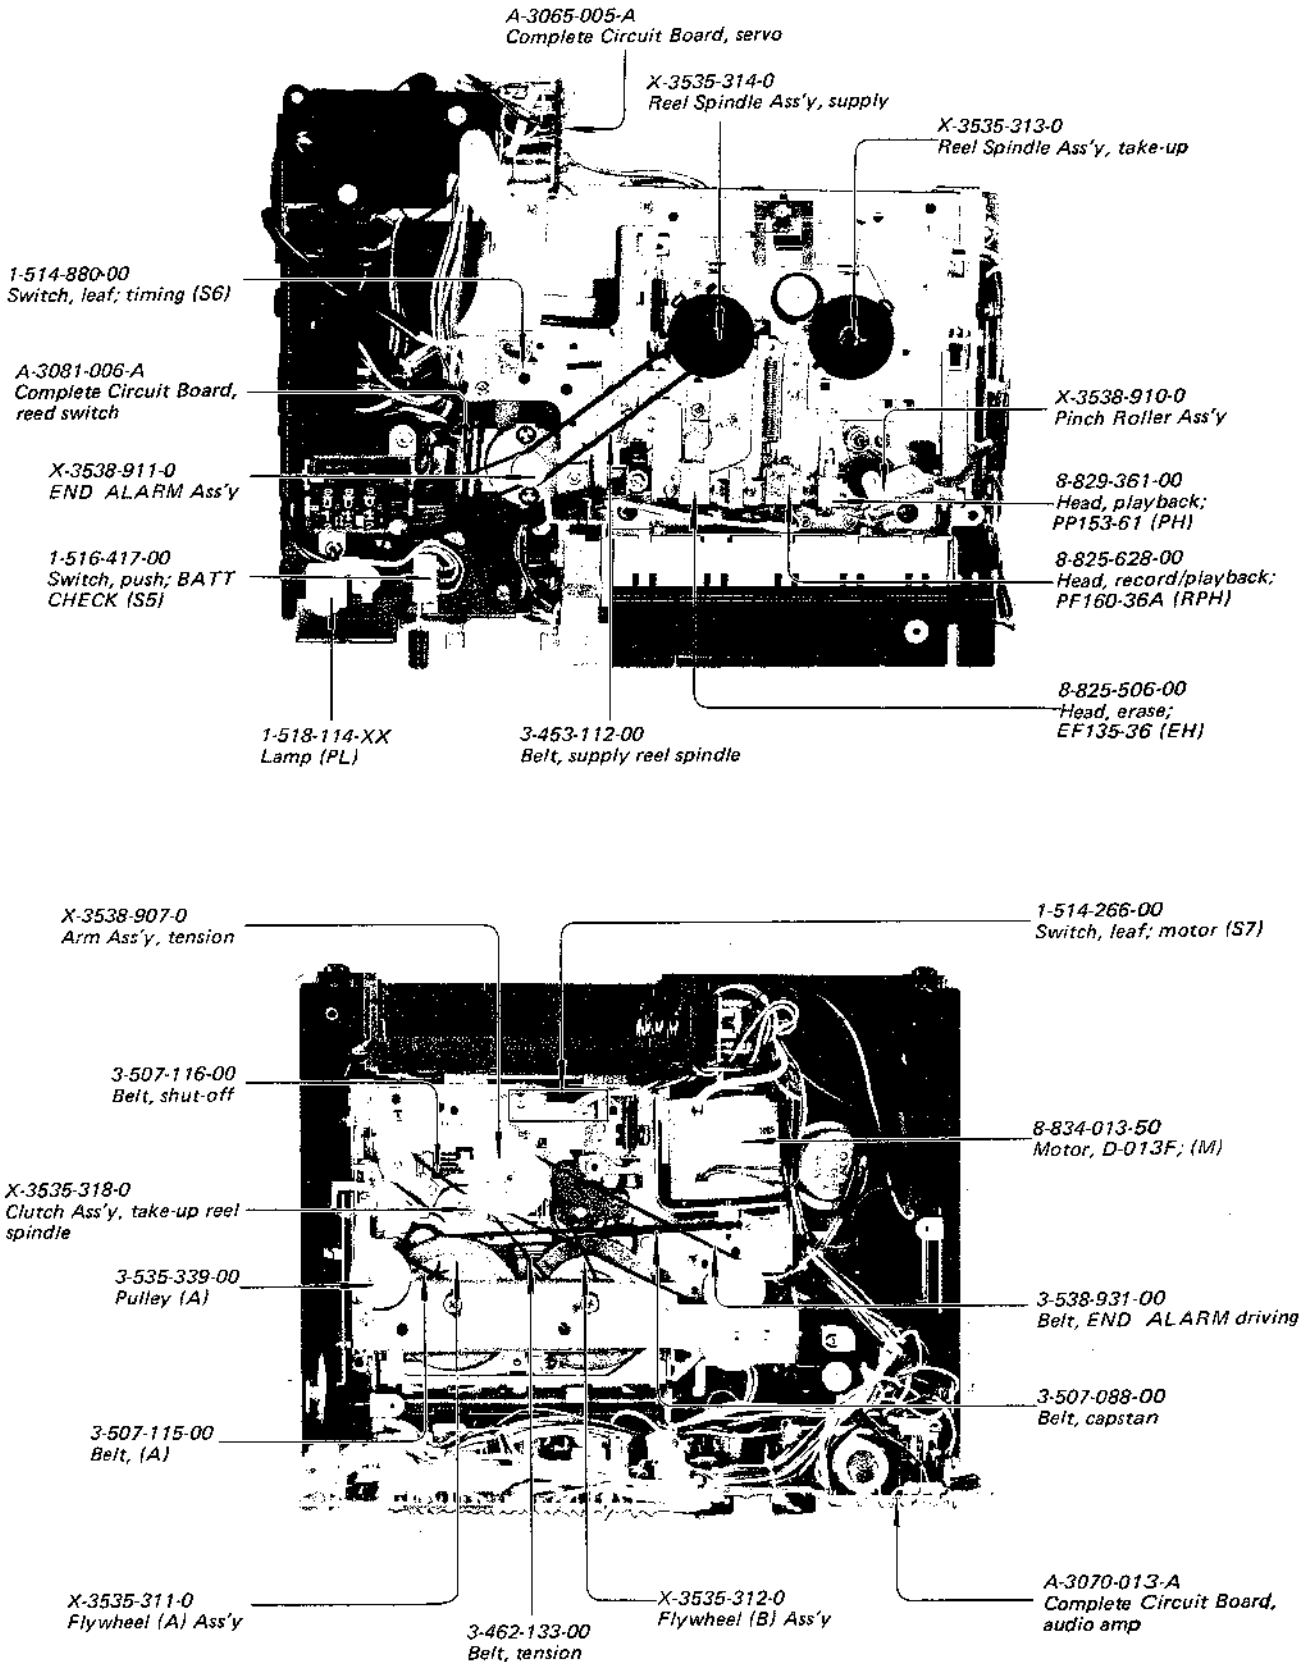

1-4. END ALARM SYSTEM



Model TC-142 is provided with END ALARM system which starts to flicker the lamp and to feed an alarm signal on the MONITOR sounds a few minutes before end-of-tape in record mode.



This system detects a difference of speed between the capstan rotation and the supply reel spindle rotation to switch on the alarm circuit. Alarm-starting time is,

therefore, determined by the reel-hub diameter of cassette and the tape thickness.

Cassette Used	Time from Start of Alarm to End-of-Tape
C-30, C-60	Approx. 1.5 minutes
C-90	Approx. 2.5 minutes
C-120	Approx. 3.5 minutes

Detection Mechanism:

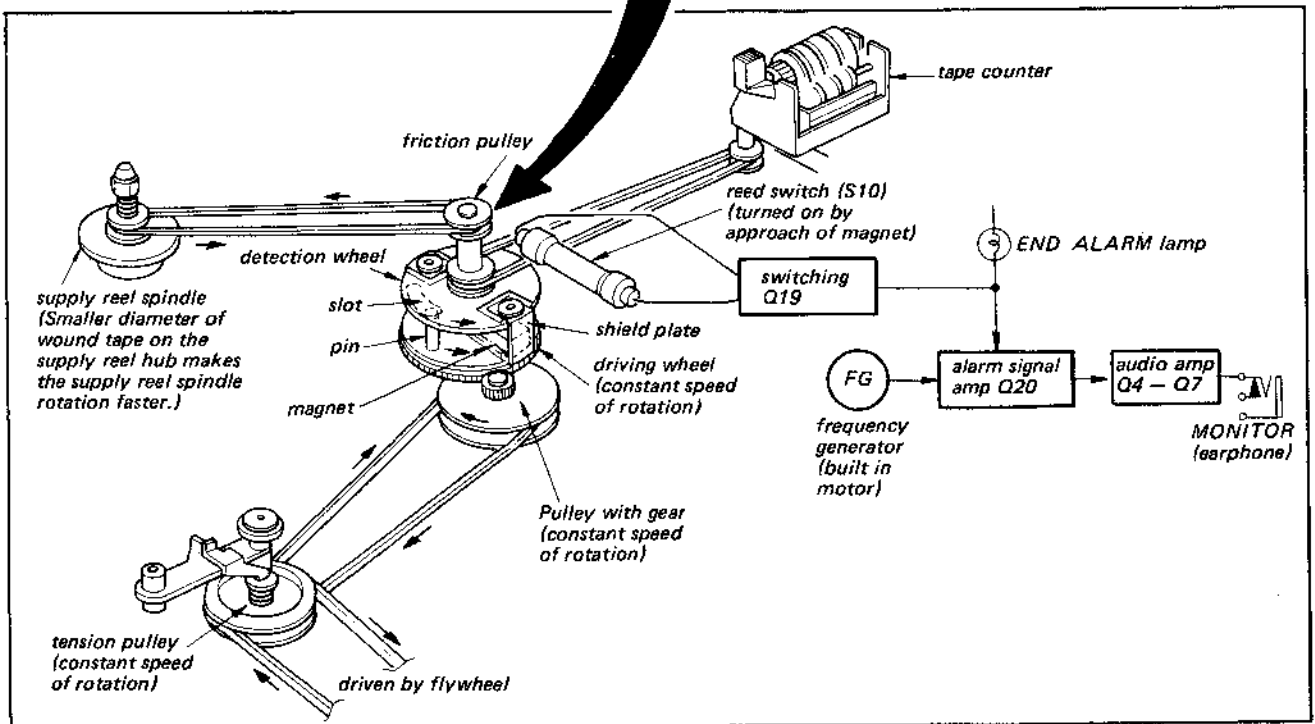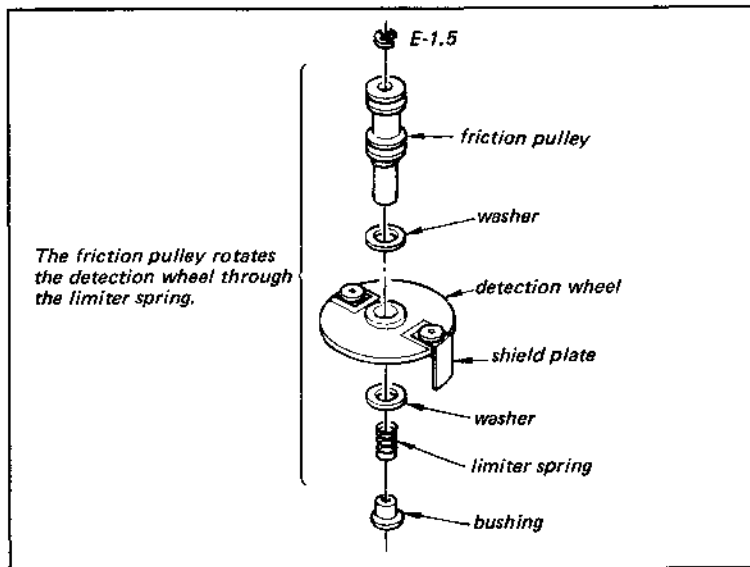


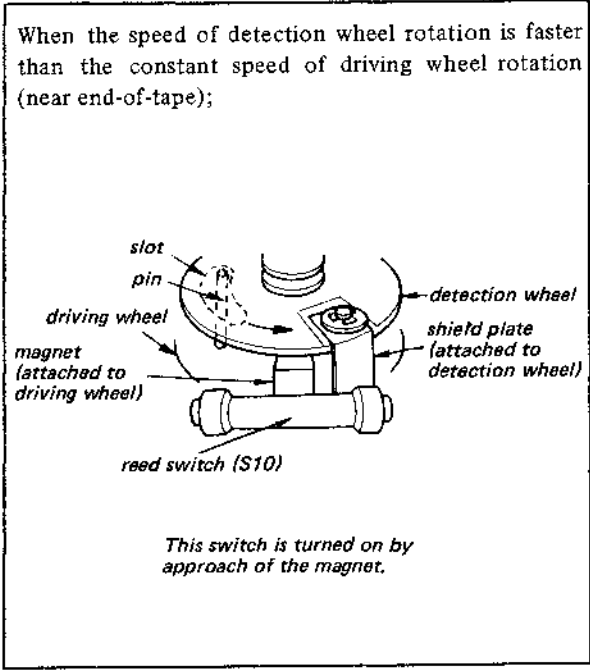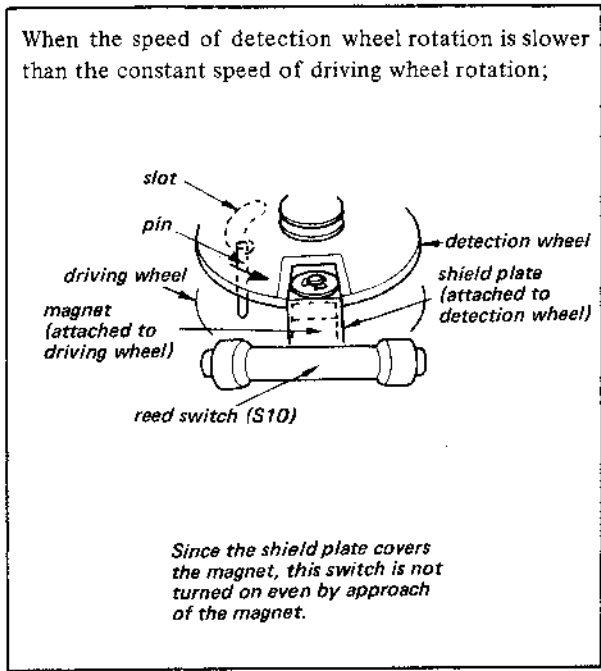

Alarm Circuit

Approach of the magnet turns on the reed switch (S10) and makes the base voltage of Q19 lower. Q19 is turned on and B+ voltage is supplied to the END ALARM lamp and Q20. Only when the

magnet approaches the reed switch, the lamp lights and Q20 amplifies the frequency generator signal for feeding it to the audio amplifier as an alarm signal. Since approach of the magnet is repeated by rotation of the driving wheel, the lamp flickers and the pulsating alarm signal is heard through the earphone.

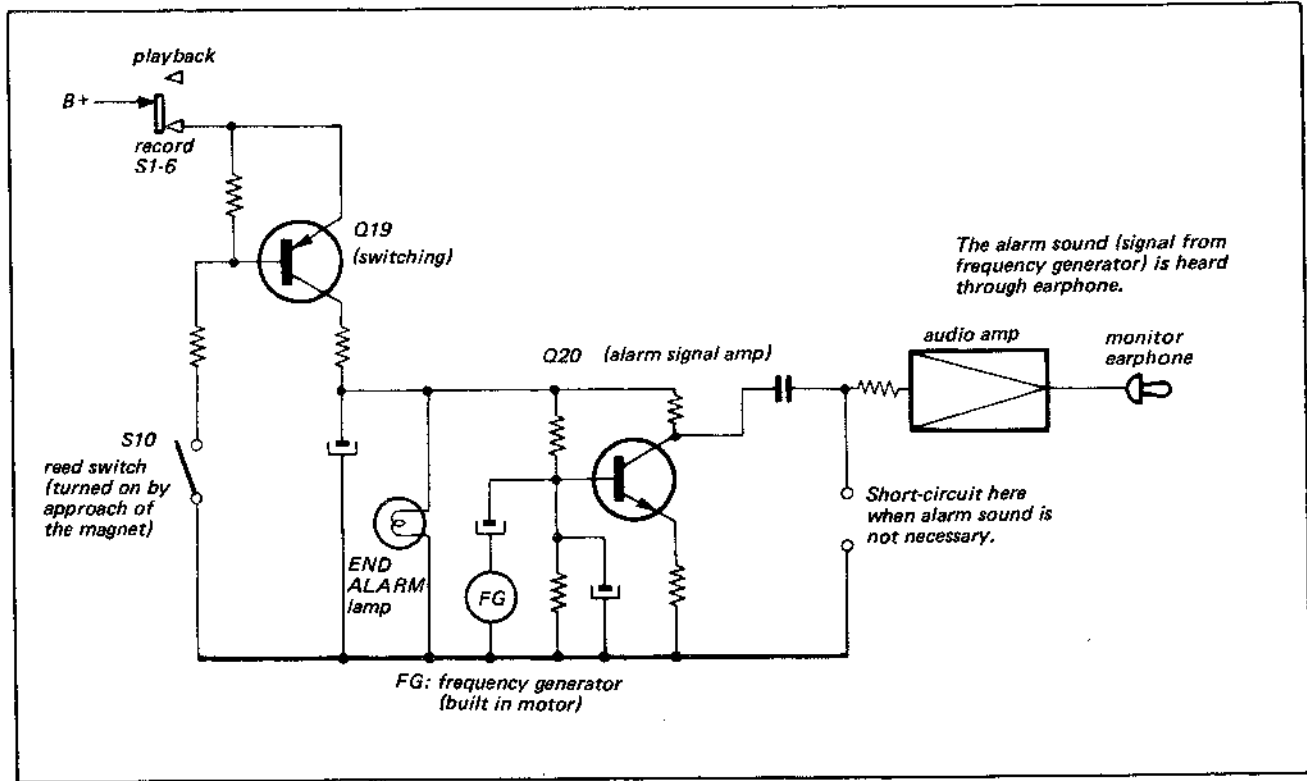


SECTION 2
DISASSEMBLY

REAR CASE REMOVAL


1. Remove the battery lid.
2. Remove the five screws (B 2.6 x 8 black) on the rear case.

BATTERY CASE REMOVAL


Remove the battery case in the direction shown by the arrow.

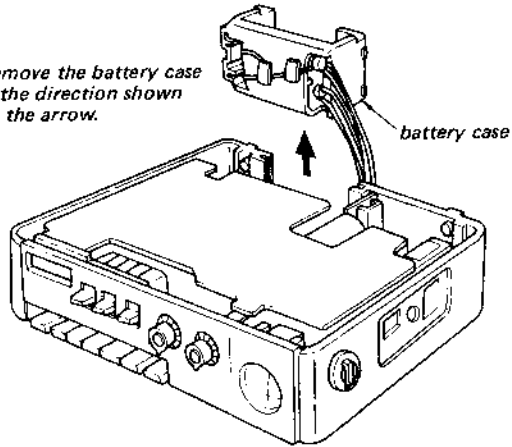


SERVO CIRCUIT BOARD REMOVAL

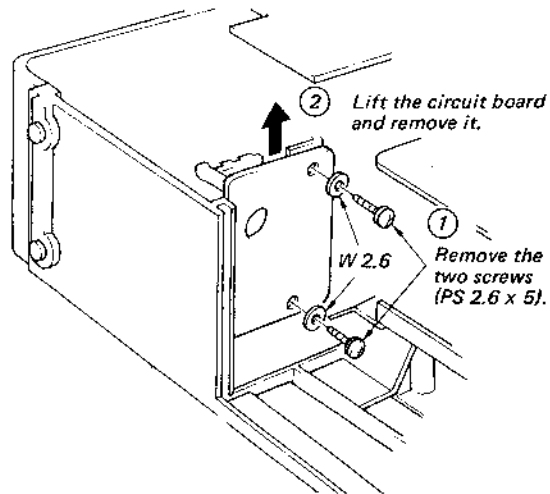

TENSION PULLEY AND SHUT-OFF BELT REMOVAL

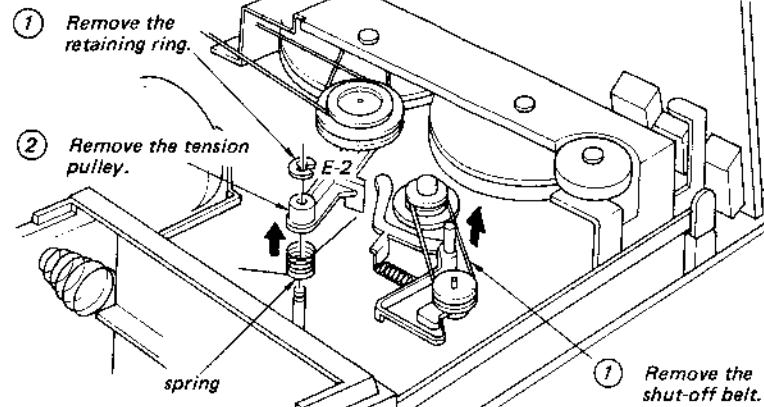

END ALARM MECHANISM REMOVAL

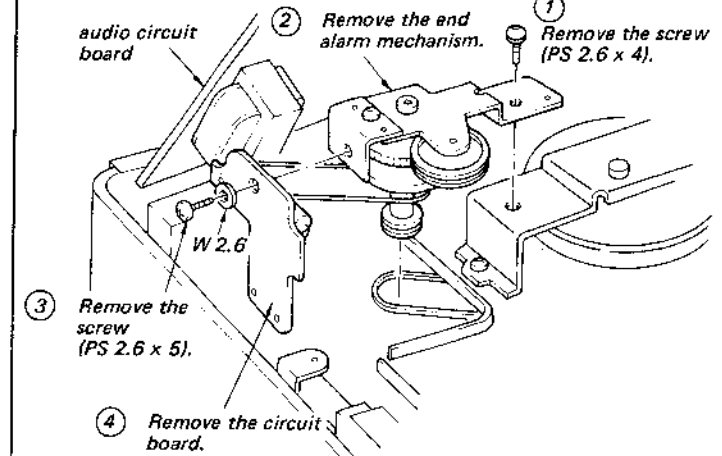


END ALARM D

1. Remove the ring (E).
4. Remove the END ALARM driving belt.

Note: If the clean


AUDIO CIRCUIT BOARD REMOVAL

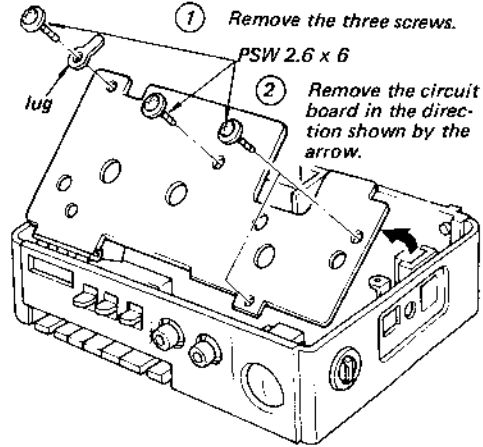


The supply reel spindle belt can be removed.

The counter belt and the motor can be removed.


FRONT CASE REMOVAL

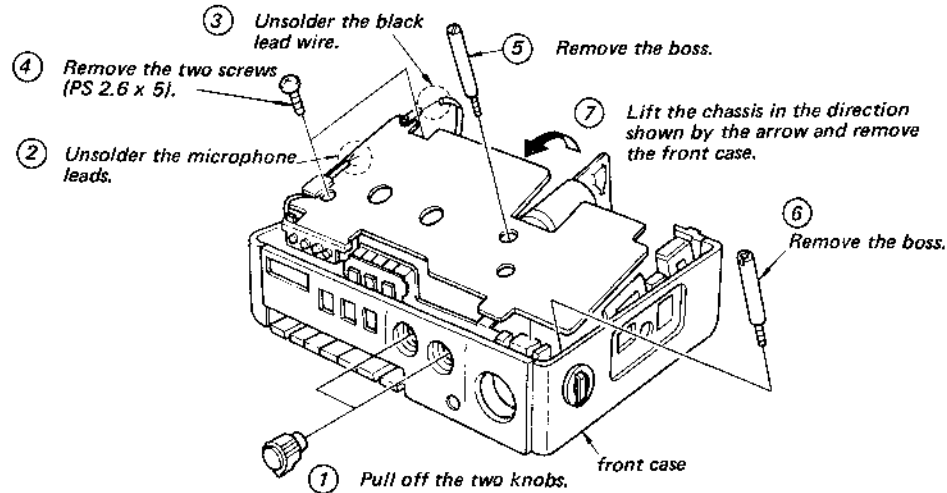






SUPPLY REEL SPINDLE REMOVAL

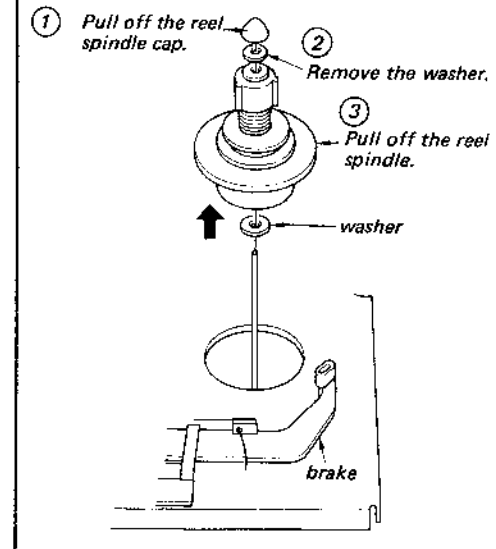

TAKE-UP REEL SPI




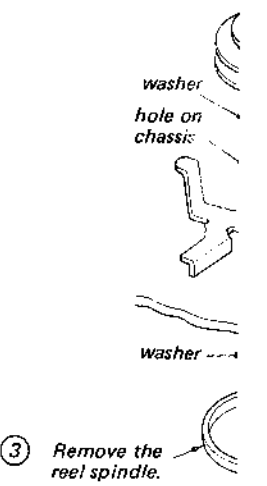


Note: When assembled have the length of the reel spi

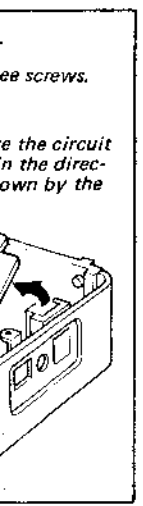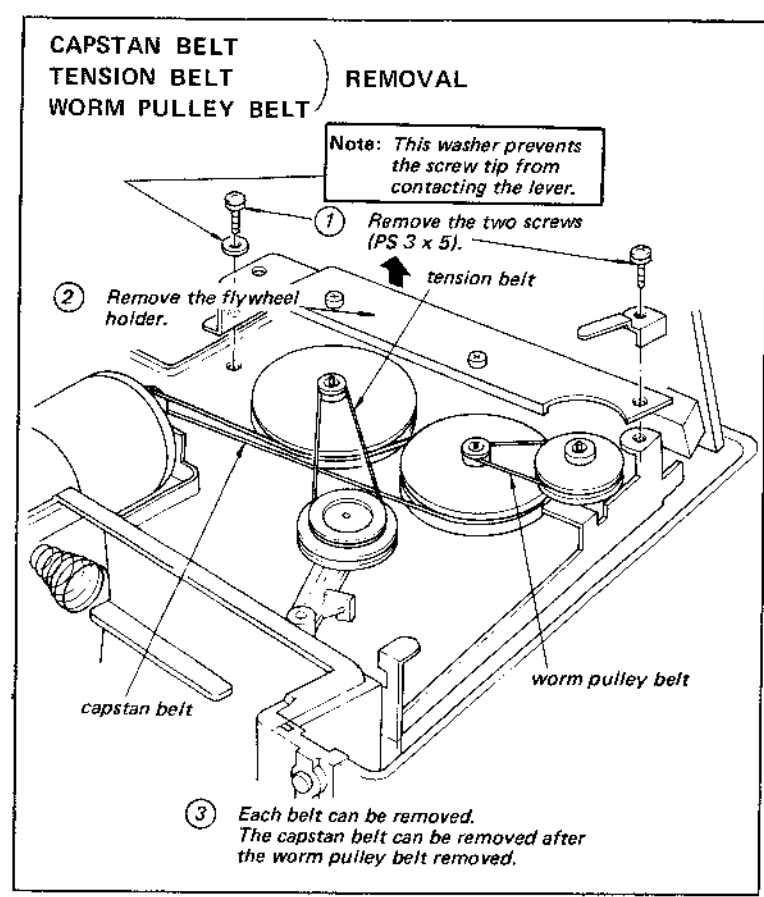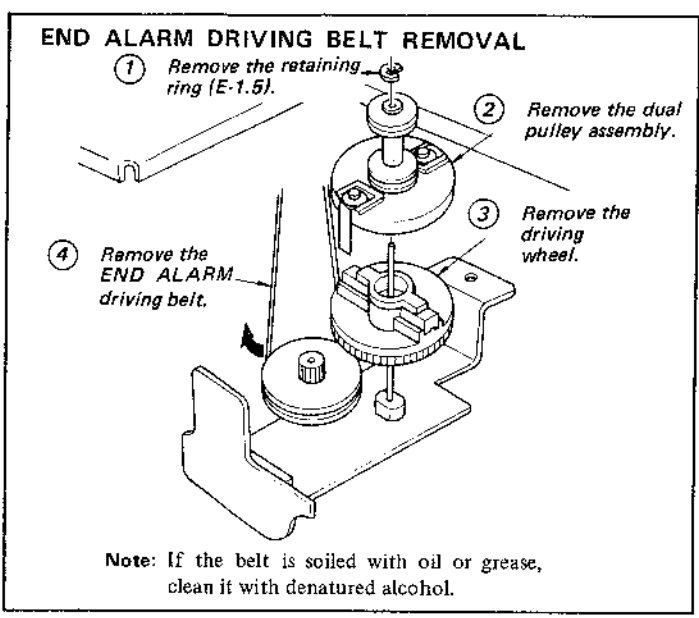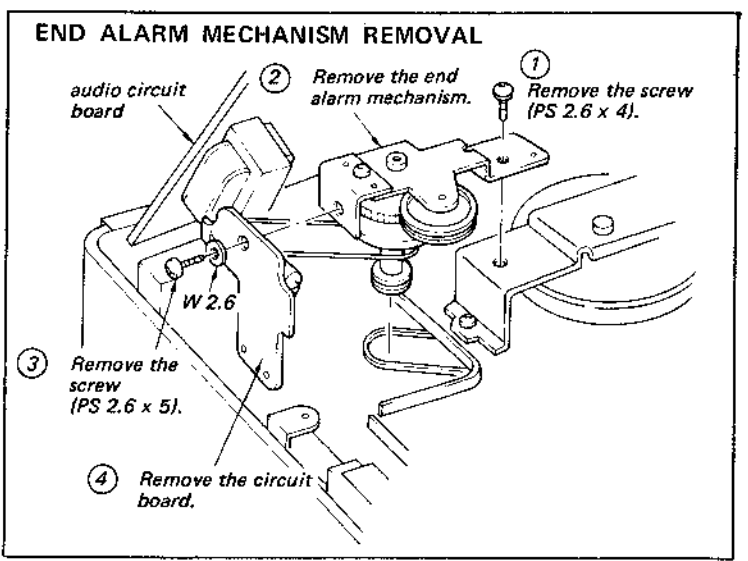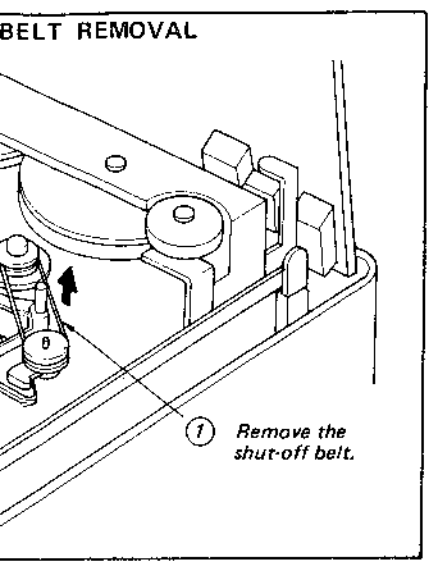

The supply reel spindle belt can be removed.

The counter belt and the motor can be removed.

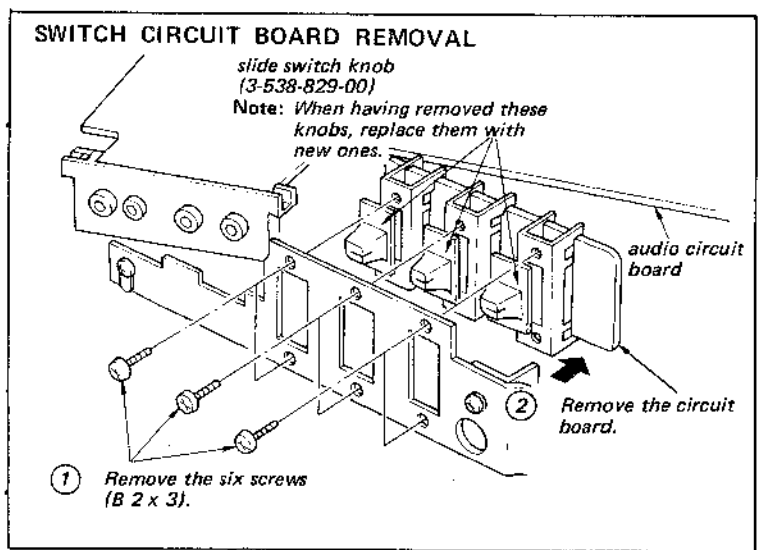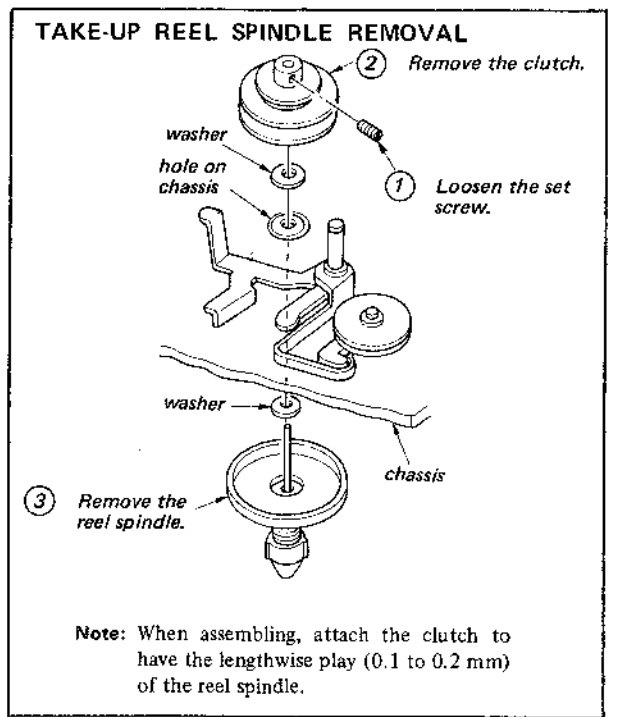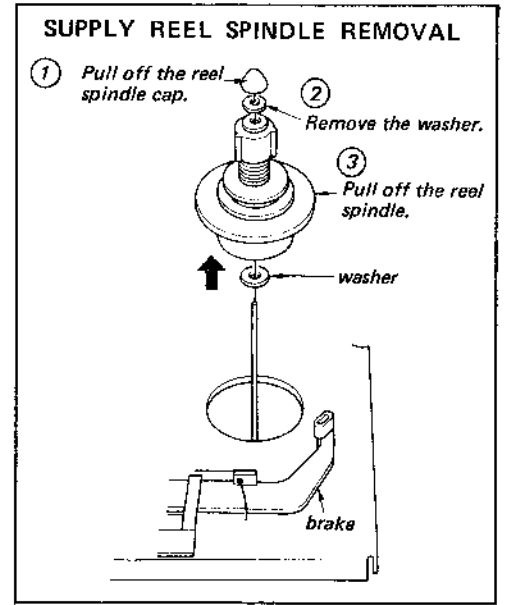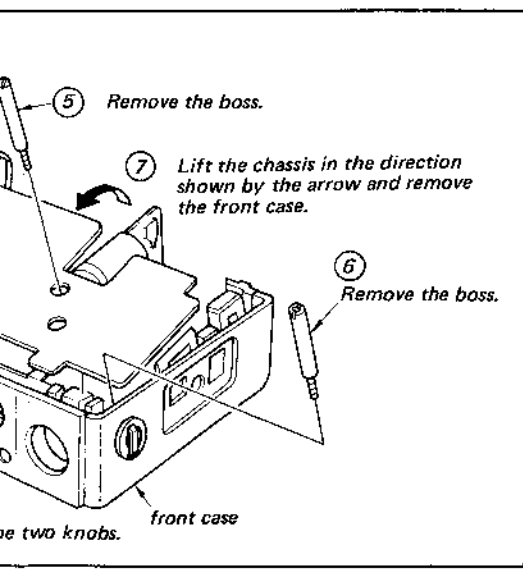


Torque Measurement

Forward torque: 28 ~ 52 g-cm
(0.39 ~ 0.72 oz-inch)

Fast forward torque: 55 ~ 100 g-cm
(0.76 ~ 1.39 oz-inch)

Rewind torque: 55 ~ 95 g-cm
(0.76 ~ 1.32 oz-inch)

Note: Forward torque is measured with Sony cassette type torque meter CQ101 (Part No. Y-20926-01-1). Fast forward and rewind torques are measured with ordinary torque meter.

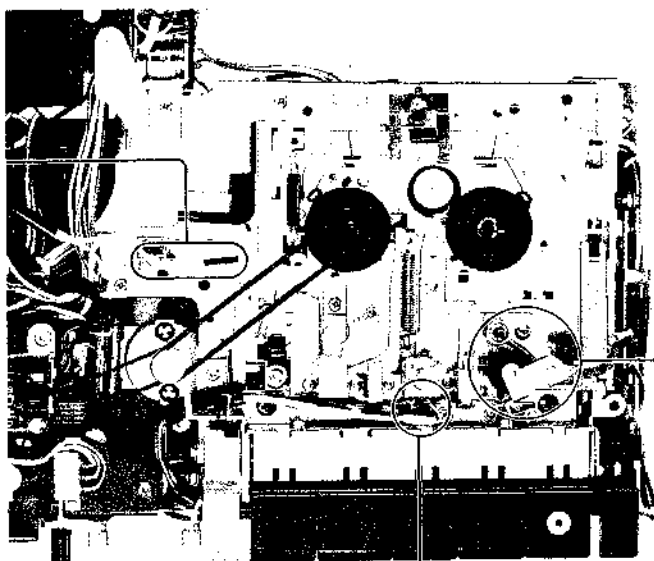

Wow and Flutter Measurement

Setting:
TONE control: HIGH
VOLUME control: mechanical mid

Procedure:
Mode: playback
WS-48 (3 kHz, 0 dB)

Specification:
0.3 % (RMS) or less

Note: Measure wow and flutter for beginning, midway and end portion of WS-48.

3-2. ELECTRICAL ADJUSTMENTS

1. Tape Speed Adjustment

Settings:
VOLUME control: mechanical mid
Power source: 6 V DC

Procedure:
Mode: playback

SPC-4 (1 kHz, 0 dB)

SPC-4 (1 kHz, 0 dB) or digital frequency counter

Playback	Adjust	Speed Checker Reading	Digital Freq. Counter Reading
beginning of the tape	R402	0 %	1,000 Hz
end of the tape	check	within the deviation of 1.3 %	within the deviation of 13 Hz

Adjustment Location:

servo circuit board

R402

2. Record/playback Head Azimuth Adjustment

Settings:
TONE control: HIGH max
VOLUME control: mechanical mid


Procedure:
Mode: playback

P-4-A81 (6.3 kHz, -10 dB)

Turn the adjustment screw for the highest VTVM reading.

Note: Several peaks may appear, take the highest.

Adjustment Location:

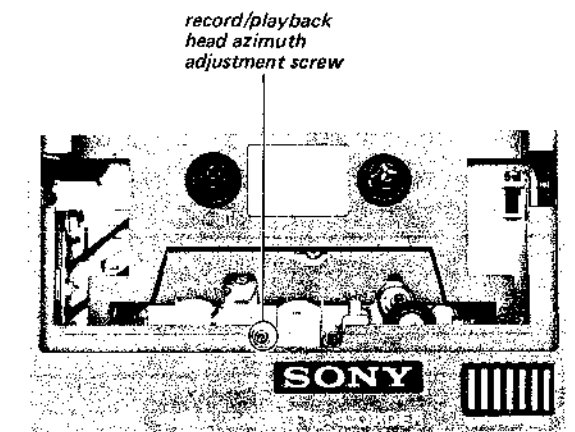

Head Deck Adjustment
— playback mode —

cassette for adjustment

Put adhesive tape as specified.

erase head 3 mm
record/playback head 3.2 mm
playback head 2.9 mm
cassette height guide
Loosen this screw and adjust the head deck position.

Pinch Roller Pressure Measurement
— playback mode —

tension gauge (500 g)
280 ~ 360 g (9.8 ~ 12.6 oz)


pinch roller
capstan

Push pinch roller away from the capstan using tension gauge, as shown by the arrow. Allow pinch roller to return slowly. The pressure (tension) should be measured at the point where the pinch roller just contacts the capstan.

SECTION 3
ADJUSTMENTS


3-1. MECHANICAL ADJUSTMENTS

Motor Switch (S7) Adjustment
— stop mode —

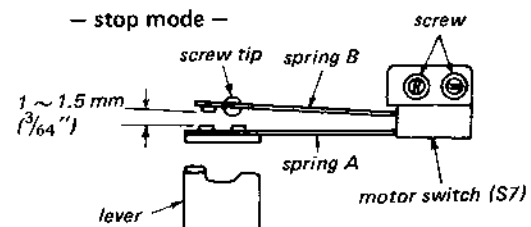

1. Loosen the screws and adjust the switch position so that the spring B is located just above the center of screw tip.
2. Adjust by bending the spring A for the specified contact separation.

Timing Switch (S6) Adjustment

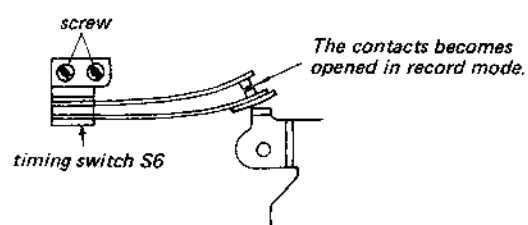

Make sure of the following functions:

1. When pressing RECORD button with no cassette loaded, the contacts should not be opened.
2. With RECORD button depressed, when slowly depressing the stop button, the contacts should be closed.
3. When slowly changing from the stop mode to the record mode, the howl should not be heard through the speaker.

If the above functions are not satisfied, loosen the screws and adjust the switch position.

Torque Measurement

- Forward torque: 28 ~ 52 g·cm
(0.39 ~ 0.72 oz·inch)
- Fast forward torque: 55 ~ 100 g·cm
(0.76 ~ 1.39 oz·inch)
- Rewind torque: 55 ~ 95 g·cm
(0.76 ~ 1.32 oz·inch)


Note: Forward torque is measured with Sony cassette type torque meter CQ101 (Part No. Y-20926-01-1). Fast forward and rewind torques are measured with ordinary torque meter.

Wow and Flutter Measurement

- Setting:
- TONE control: HIGH
VOLUME control: mechanical mid

Procedure:



Mode: playback
WS-48
(3kHz, 0dB)

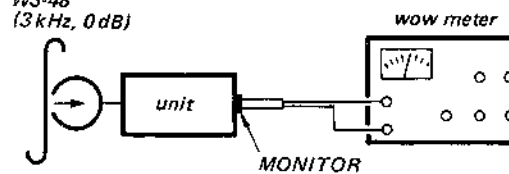

Specification:

0.3 % (RMS) or less

Note: Measure wow and flutter for beginning, midway and end portion of WS-48.

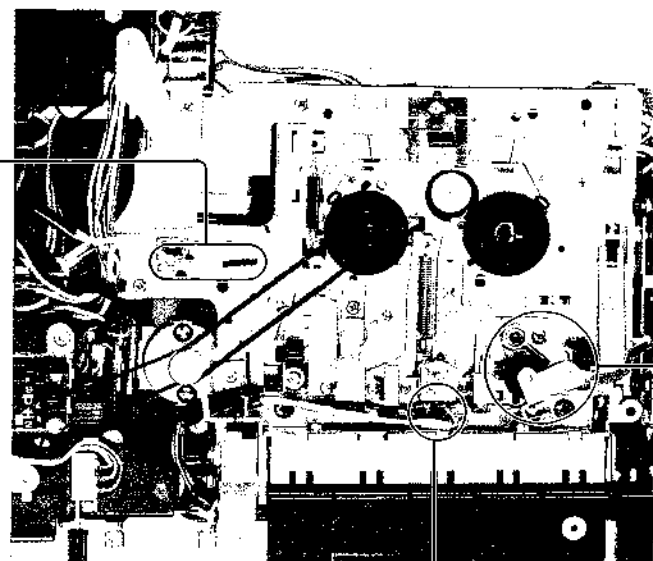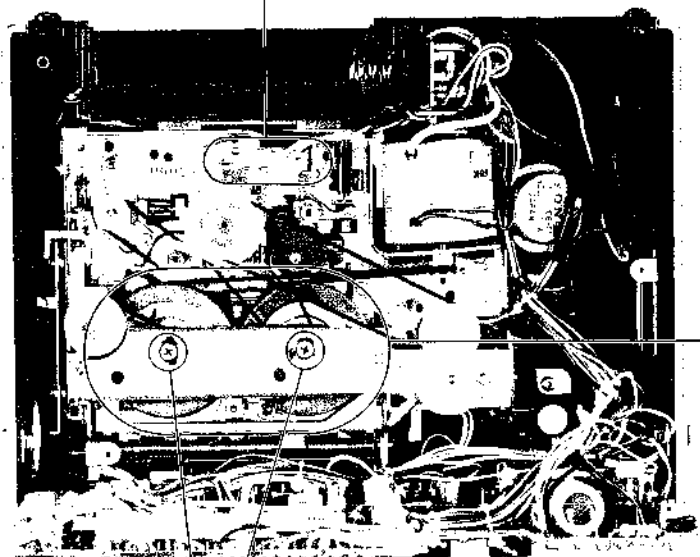


Flywheel Thrust Play Adjustment
— playback mode —

1. Supply 6 V DC to the DC IN 6 V jack with DC ammeter connected in series.
2. Loosen the both screws for sufficient thrust play.
3. Tighten one screw until the current suddenly increases, then loosen the screw 1/4 turn.
4. Adjust the other screw in the same way as step 3.
5. Apply locking compound to the screws.


Flywheel Height Adjustment

The grooves of two flywheels should be on the same level.

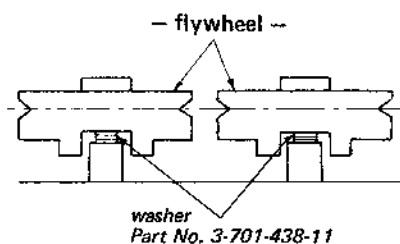


Adjust by changing the quantity of the washers.

Head Deck Adjustment
— playback mode —

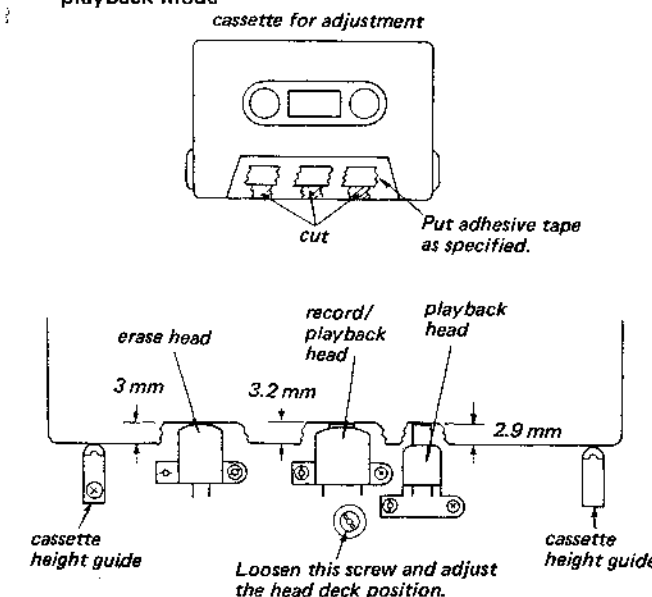

Pinch Roller Pressure Measurement
— playback mode —

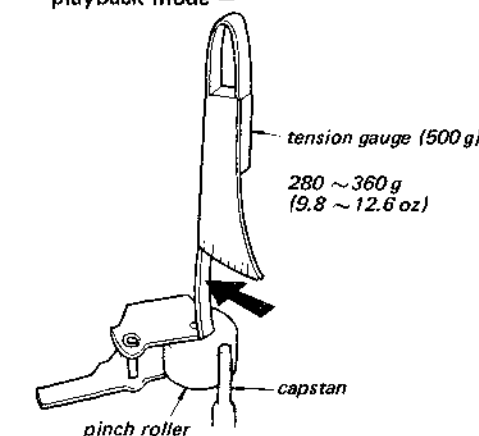

Push pinch roller away from the capstan using tension gauge, as shown by the arrow. Allow pinch roller to return slowly. The pressure (tension) should be measured at the point where the pinch roller just contacts the capstan.

3. Playback (Monitor) Head Azimuth Adjustment


Settings:

AUTO/MANUAL switch: MANUAL
 TAPE SELECT switch: NORMAL
 TONE control: HIGH max

Procedure:

1. Bend the head guides outside for approximately 0.5 mm (1/64") clearance.


2. Mode: with RECORD button depressed
 MONITOR switch: SOURCE

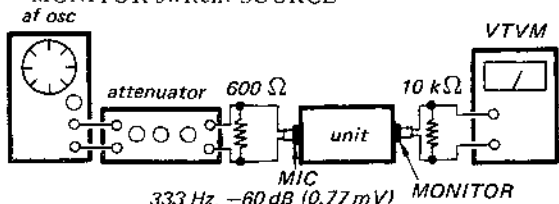

Adjust VOLUME control for 0 dB (0.775 V) VTVM reading.

3. Mode: record


MONITOR switch: TAPE

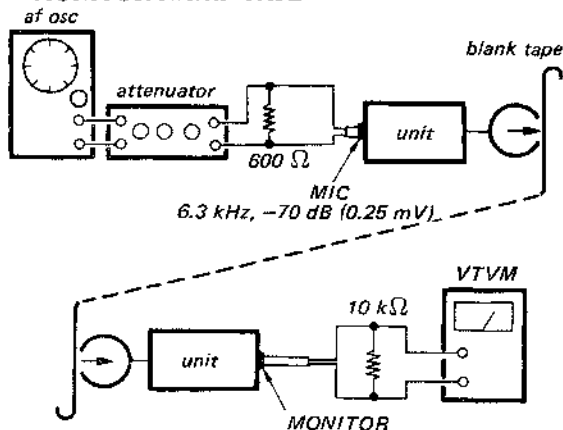

Adjust the azimuth adjustment screw for maximum VTVM reading.

- Bend the head guides inside to fix the head.
- Apply the locking compound to the azimuth adjustment screw.

Adjustment Location:

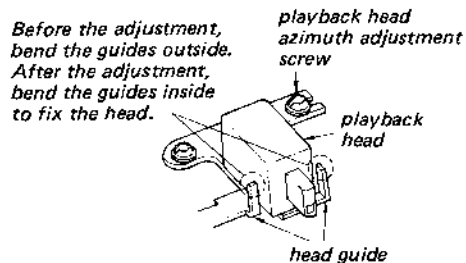


4. Playback Level Adjustment

Settings:


TAPE SELECT switch: NORMAL
 VOLUME control: MAX
 TONE control: HIGH max
 Power supply: 6 V DC

Procedure:


Mode: playback

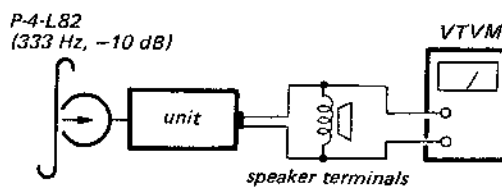

Adjust R22 for + 13 dB (3.46 V) VTVM reading.

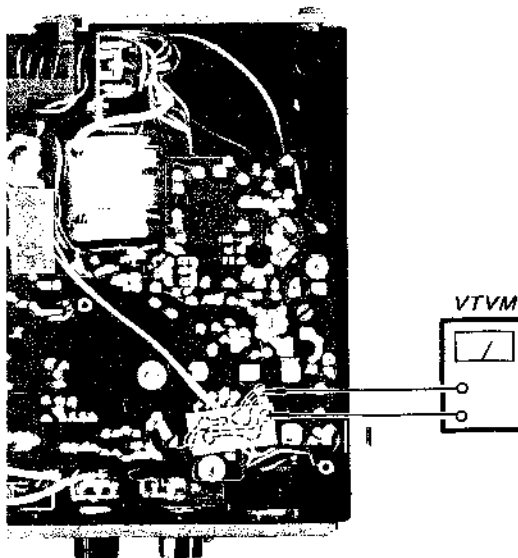

Adjustment Location:

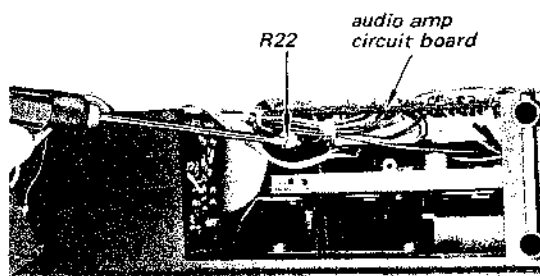


5. Level Meter Calibration

Settings:

- TAPE SELECT switch: NORMAL
- AUTO/MANUAL switch: MANUAL
- MONITOR switch: SOURCE
- TONE control: mechanical mid

Procedure:

1. Mode: with RECORD button depressed

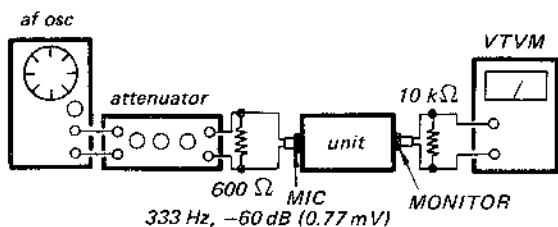


Adjust VOLUME control for 0 dB (0.775 V) VTVM reading.

2. Adjust by soldering the point A and point B for 0 reading on REC/BATT meter.

Note: Normally, the point A and point B are not soldered.

Adjustment Location:

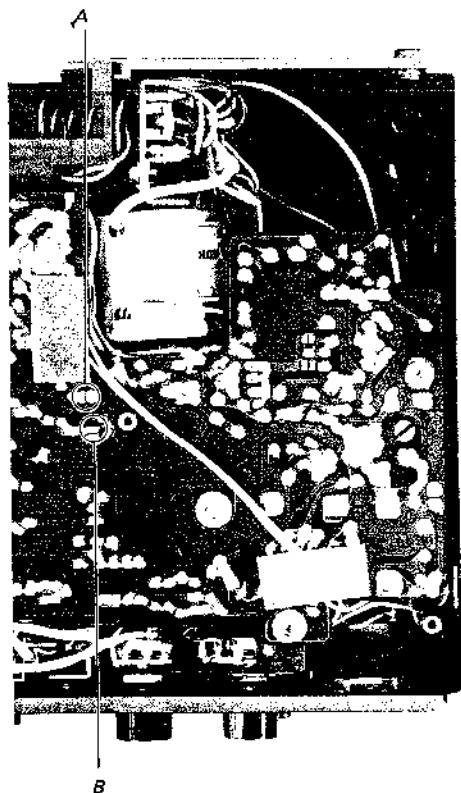


6. Power Supply Voltage Adjustment for Record Bias Oscillator

Settings:

- Power supply: 6 V DC

Procedure:

With RECORD button depressed, Adjust R77 for 4.5 V VOM reading.

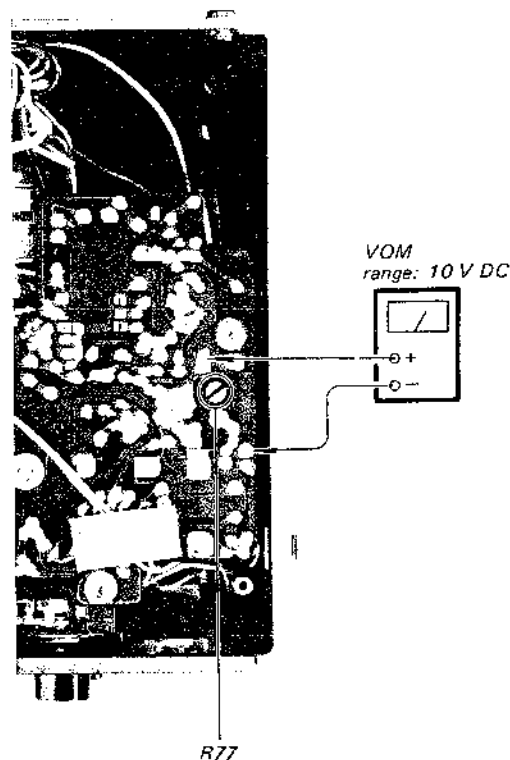


7. Record Bias Adjustment

Settings:

TAPE SELECT switch: NORMAL
 AUTO/MANUAL switch: MANUAL
 TONE control: mechanical mid
 Before this adjustment, perform "Power Supply Voltage Adjustment for Record Bias Oscillator".


Procedure:

1. Mode: with RECORD button depressed
 MONITOR switch: SOURCE

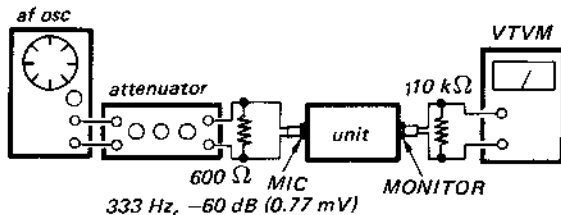


333 Hz, -60 dB (0.77 mV)
 Adjust VOLUME control for 0 dB (0.775 V)
 VTVM reading.

2. Mode: record

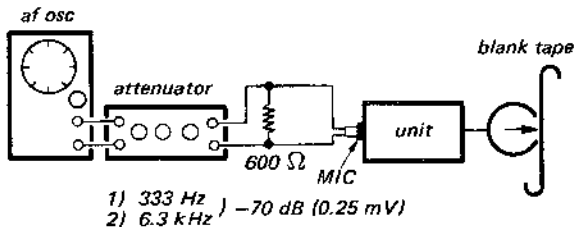

1) 333 Hz) -70 dB (0.25 mV)
 2) 6.3 kHz)

3. Mode: playback

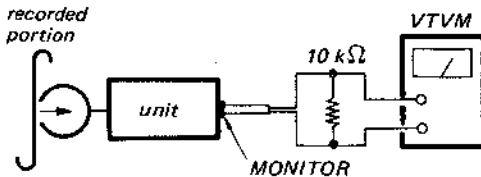

Playback	Adjust	VTVM Reading
333 Hz	VOLUME control	-10 dB (0.25 V)
6.3 kHz	check	-10 ± 2 dB (0.19 ~ 0.31 V)

4. If the output level at 6.3 kHz is out of the specified value, adjust by changing the connections at points 1 ~ 3 and points 4 ~ 6, and repeat Steps 1 ~ 3.

Note:

Connection Change	Output Level at 6.3 kHz
1 - 2 - 3	decrease
6 - 5 - 4	decrease

Normally, the point 2 and the points 5, 6 are connected.


8. Battery Indicator Calibration

Settings:

VOLUME control: MIN
 Power supply: 4.5 V DC


Procedure:

In record mode, Adjust by soldering the point C or point D so that REC/BATT meter indicates the left end of the green zone on the scale.

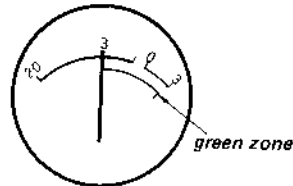


Note: Normally, the point C and point D are not soldered.

Adjustment Location:

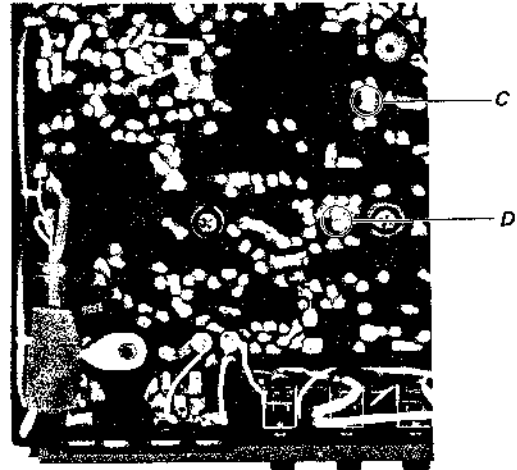

Adjustment Location:

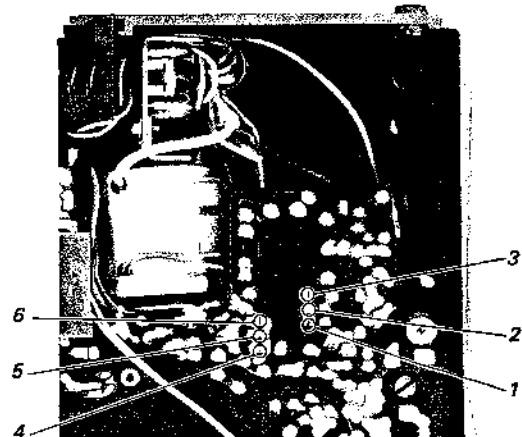


9. Monitor Level Adjustment

Settings:

TAPE SELECT switch: NORMAL
 AUTO/MANUAL switch: MANUAL
 TONE control: mechanical mid

Procedure:

Mode: record

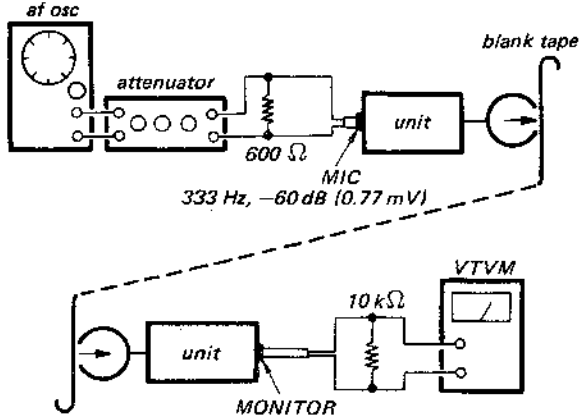

1. MONITOR switch: SOURCE
 Adjust VOLUME control for 0 dB (0.775 V) VTVM reading.
2. MONITOR switch: TAPE
 Adjust R47 for 0 dB (0.775 V) VTVM reading.

Adjustment Location:



10. Playback Signal-to-Noise Ratio Measurement


Settings:

TAPE SELECT switch: NORMAL
 TONE control: mechanical mid

Procedure:


1. Mode: playback

P-4-L81
 (333 Hz, 0 dB)

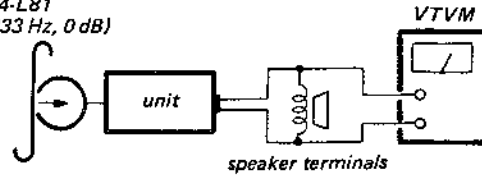

Adjust VOLUME control for +12 dB (3.1 V) VTVM reading.

2. Mode: playback

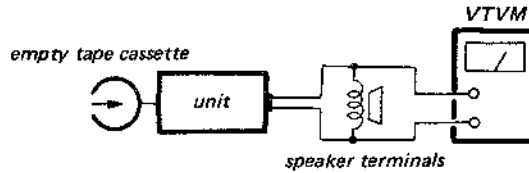

Specification:

Level in Step 2	Signal-to-Noise Ratio
-31 dB (22 mV) or less	43 dB or greater


11. Playback Frequency Response Measurement

Settings:

TAPE SELECT switch: NORMAL
TONE control: mechanical mid


Procedure:

1. Mode: playback

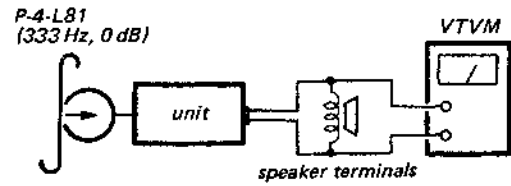

Adjust VOLUME control for +12 dB (3.1 V) VTVM reading.

2. Mode: playback

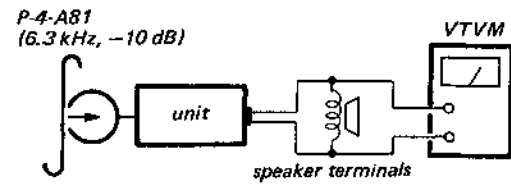

Specification:

+2 dB \pm 3 dB (0.69 V ~ 1.4 V) at 6.3 kHz


12. Overall Signal-to-Noise Ratio Measurement

Settings:

TAPE SELECT switch: NORMAL
AUTO/MANUAL switch: MANUAL
MONITOR switch: SOURCE
TONE control: mechanical mid


Procedure:

1. Mode: with RECORD button depressed

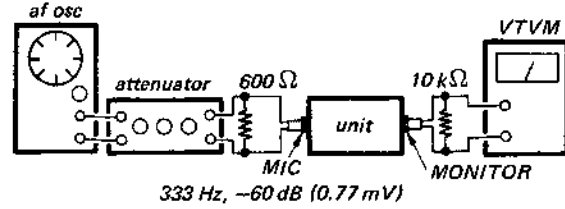


Adjust VOLUME control for 0 dB (0.775 V) VTVM reading.


2. Mode: record

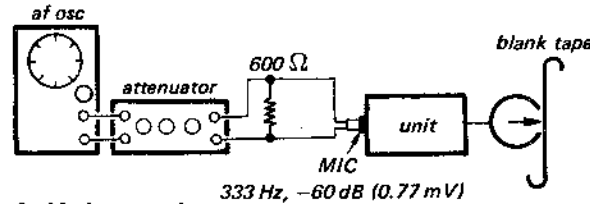

3. Mode: record

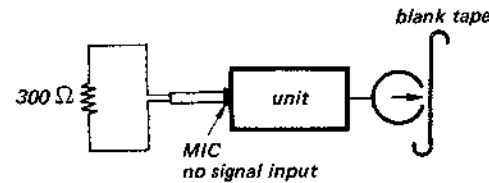

4. Mode: playback

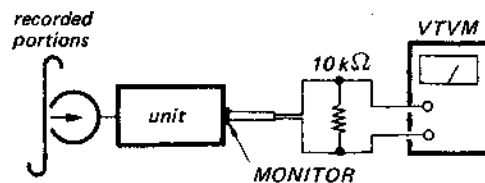

Playback	VTVM Reading
333 Hz	Adjust VOLUME control for 0 dB (0.775 V)
no signal	-40 dB (7.7 mV) or less

Specification:

Signal-to-noise ratio: 40 dB or greater


13. Overall Frequency Response Measurement

Settings:

TAPE SELECT switch: NORMAL
AUTO/MANUAL switch: MANUAL
MONITOR switch: SOURCE
TONE control: mechanical mid


Procedure:

1. Mode: with RECORD button depressed

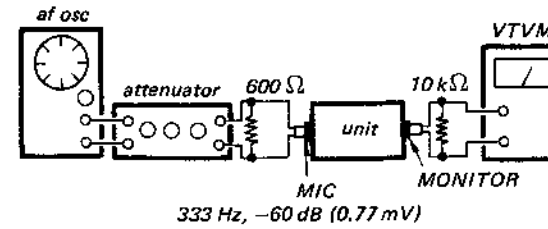


Adjust VOLUME control for 0 dB (0.775 V) VTVM reading.

2. Mode: record

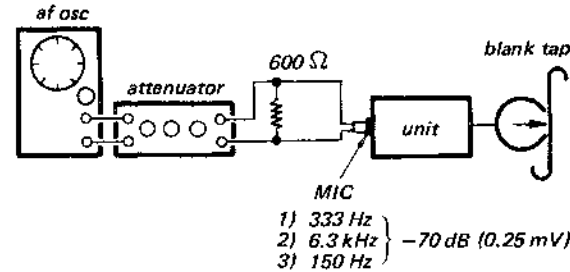

3. Mode: playback

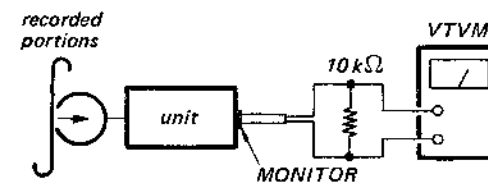

Playback	VTVM Reading
333 Hz	Adjust VOLUME control for -10 dB (0.25 V).
6.3 kHz 150 Hz	allowable range 6 dB 150 Hz 333 Hz 6.3 kHz


14. Overall Maximum Output Power Measurement

Settings:

TAPE SELECT switch: NORMAL
AUTO/MANUAL switch: MANUAL
MONITOR switch: SOURCE
TONE control: HIGH max
Power supply: Use 6 V DC regulated power source.


Procedure:

1. Mode: with RECORD button depressed

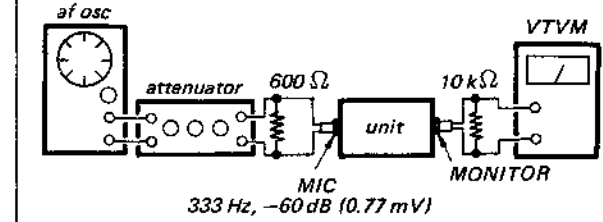


Adjust VOLUME control for 0 dB (0.775 V) VTVM reading.

2. Mode: record

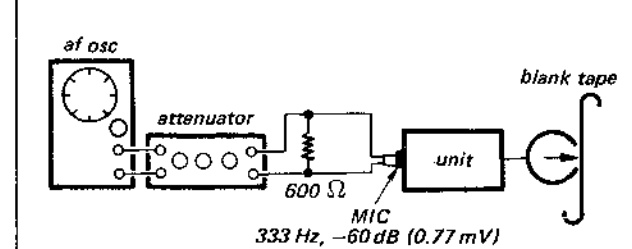

3. Mode: playback

VOLUME control: MAX

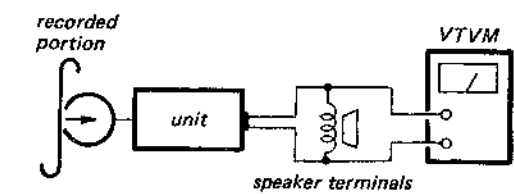


Specification:

+17 dB (5.5 V) or greater

SECTION 4
DIAGRAMS

4-1. SCHEMATIC DIAGRAM

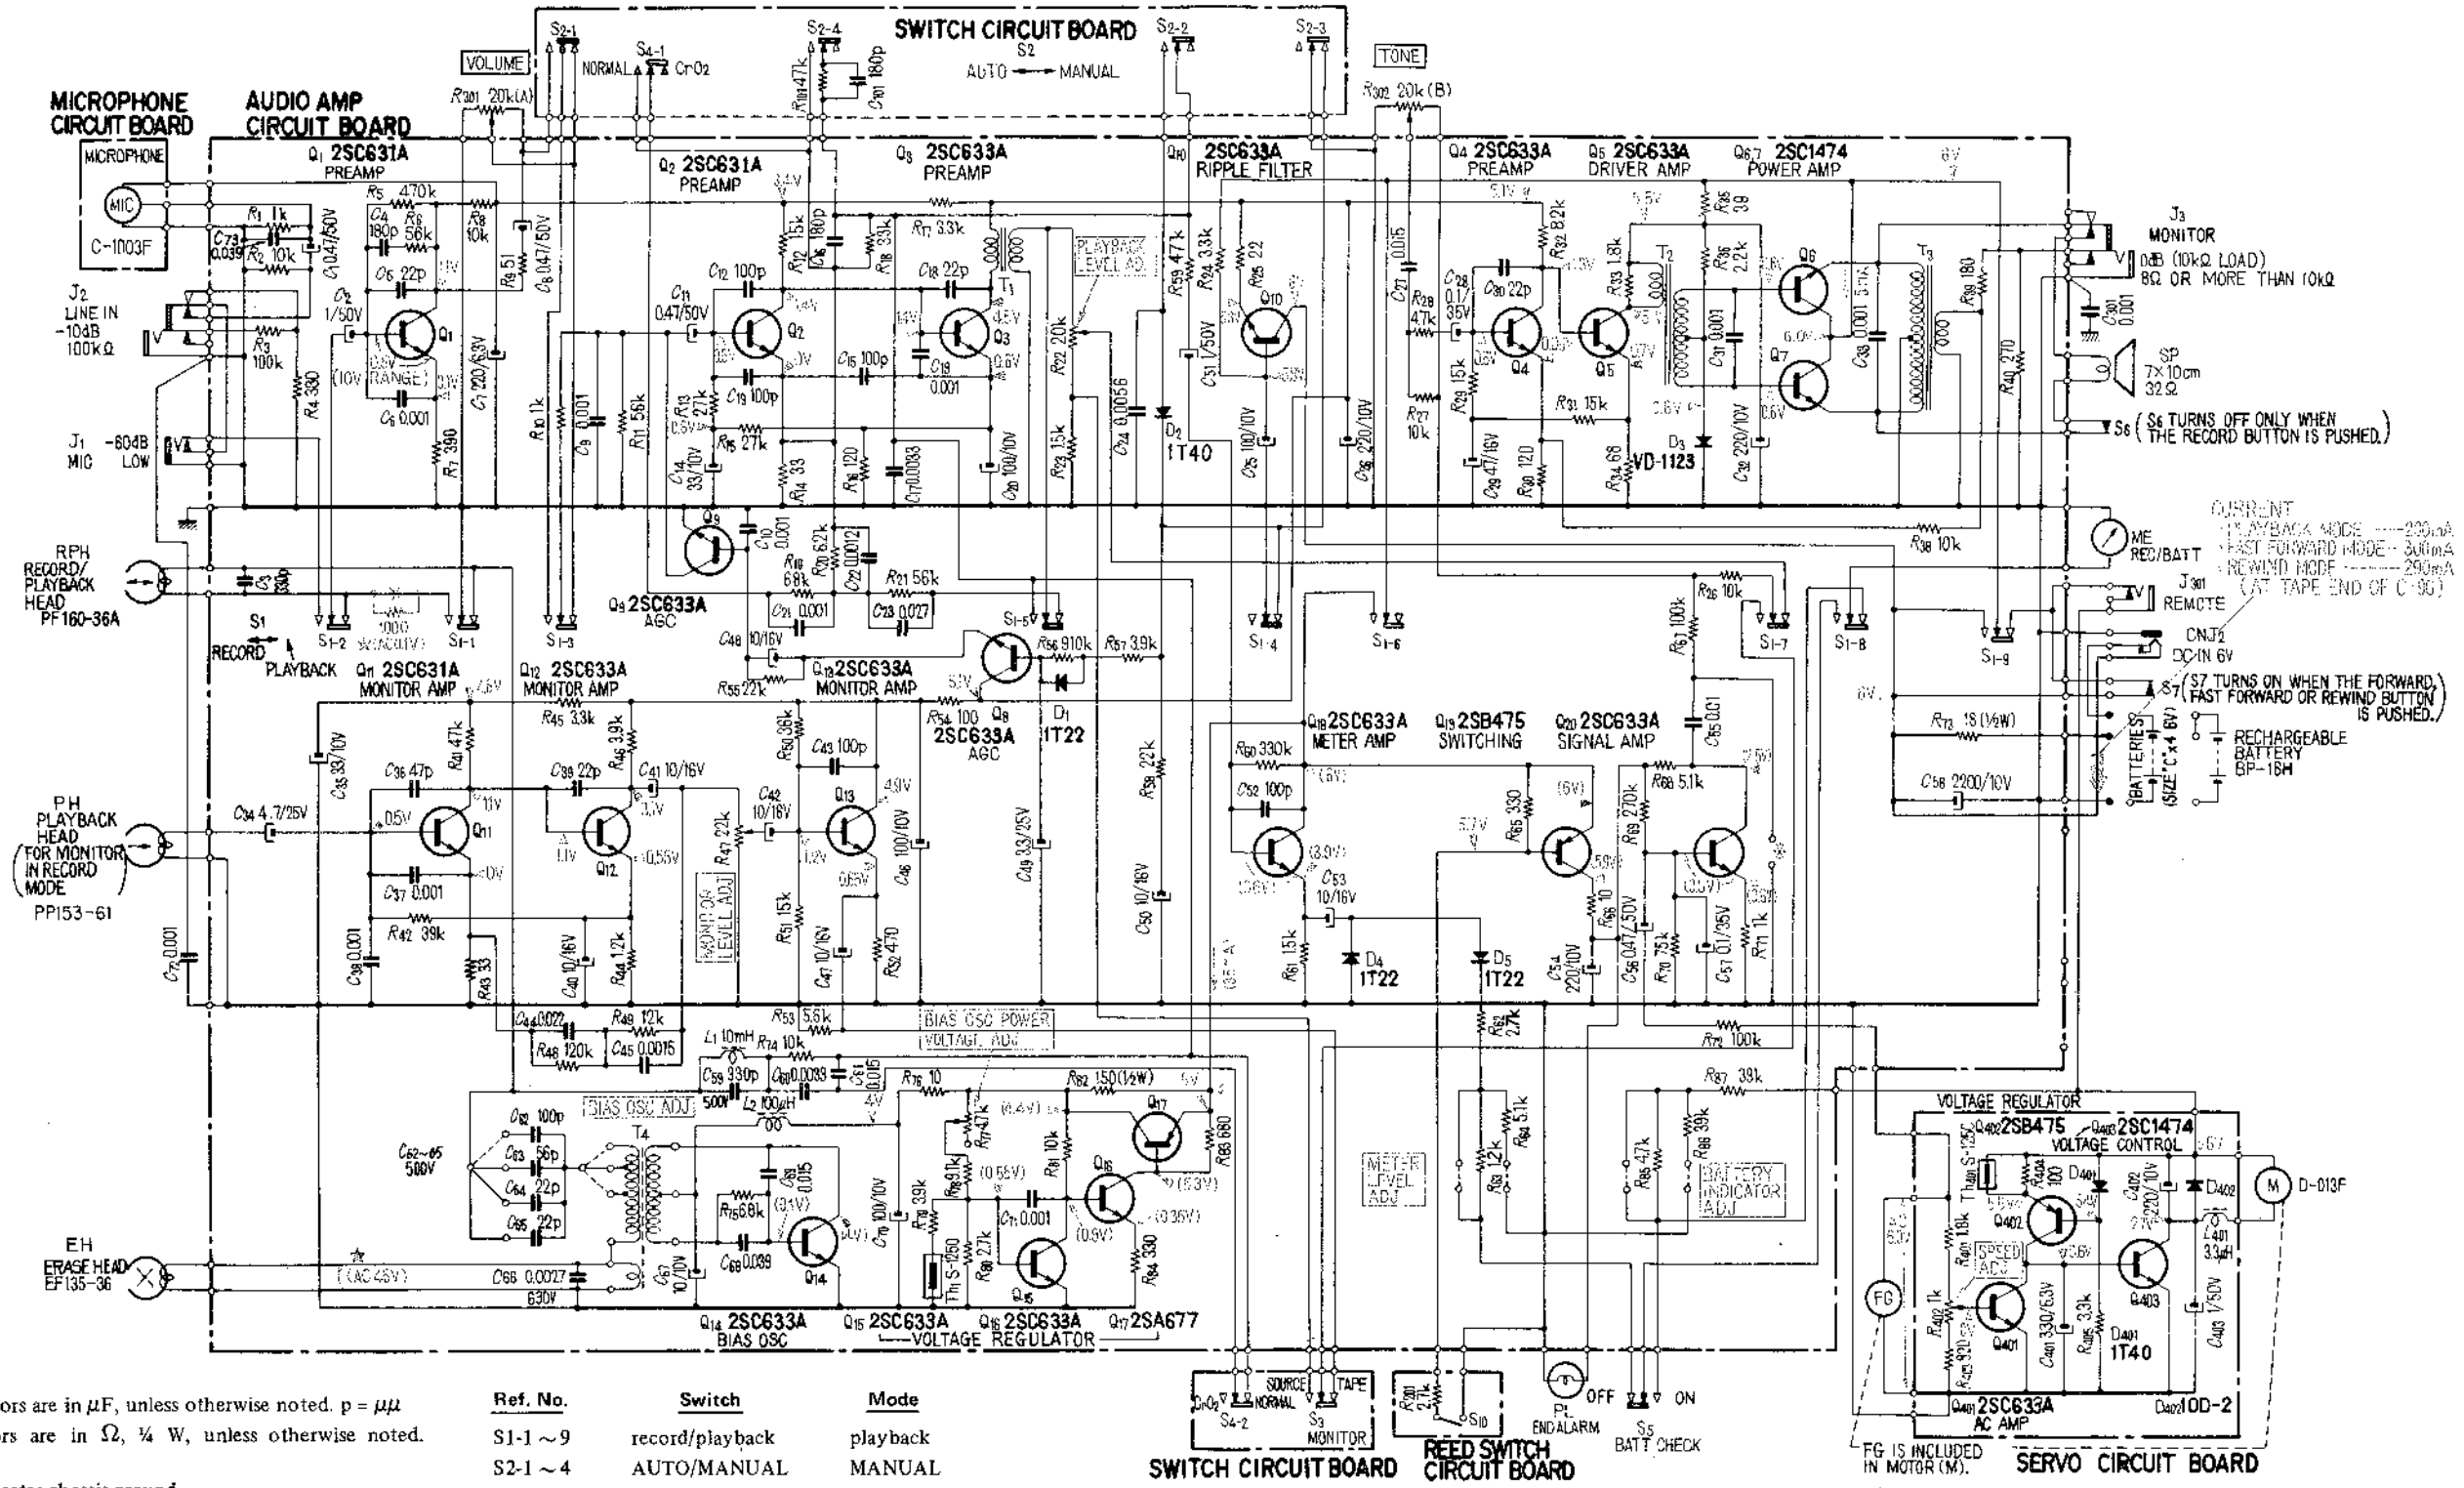



Note:

- All capacitors are in μF , unless otherwise noted. $p = \mu\text{m}$
- All resistors are in Ω , $\frac{1}{4} \text{ W}$, unless otherwise noted. $k = 1,000$
- ||||| indicates chassis ground.
- Voltages are DC with respect to ground, unless otherwise noted. Readings taken under no-signal conditions with a $20 \text{ k}\Omega/\text{V}$ VOM in playback mode. Readings in () are in record mode. Variations may be noted due to normal production tolerances.
- Voltages indicated by * are AC, taken with VTVM in record mode.
- Switch Mode:


Ref. No.	Switch	Mode
S1-1 ~ 9	record/playback	playback
S2-1 ~ 4	AUTO/MANUAL	MANUAL
S3	MONITOR	TAPE
S4-1 ~ 2	TAPE SELECT	NORMAL
S5	BATT CHECK	OFF
S6	timing	ON
S7	motor	ON
S8, 9	-----	-----
S10	END ALARM	OFF

4-2. MOUNTING DIAGRAM
 - Conductor Side -

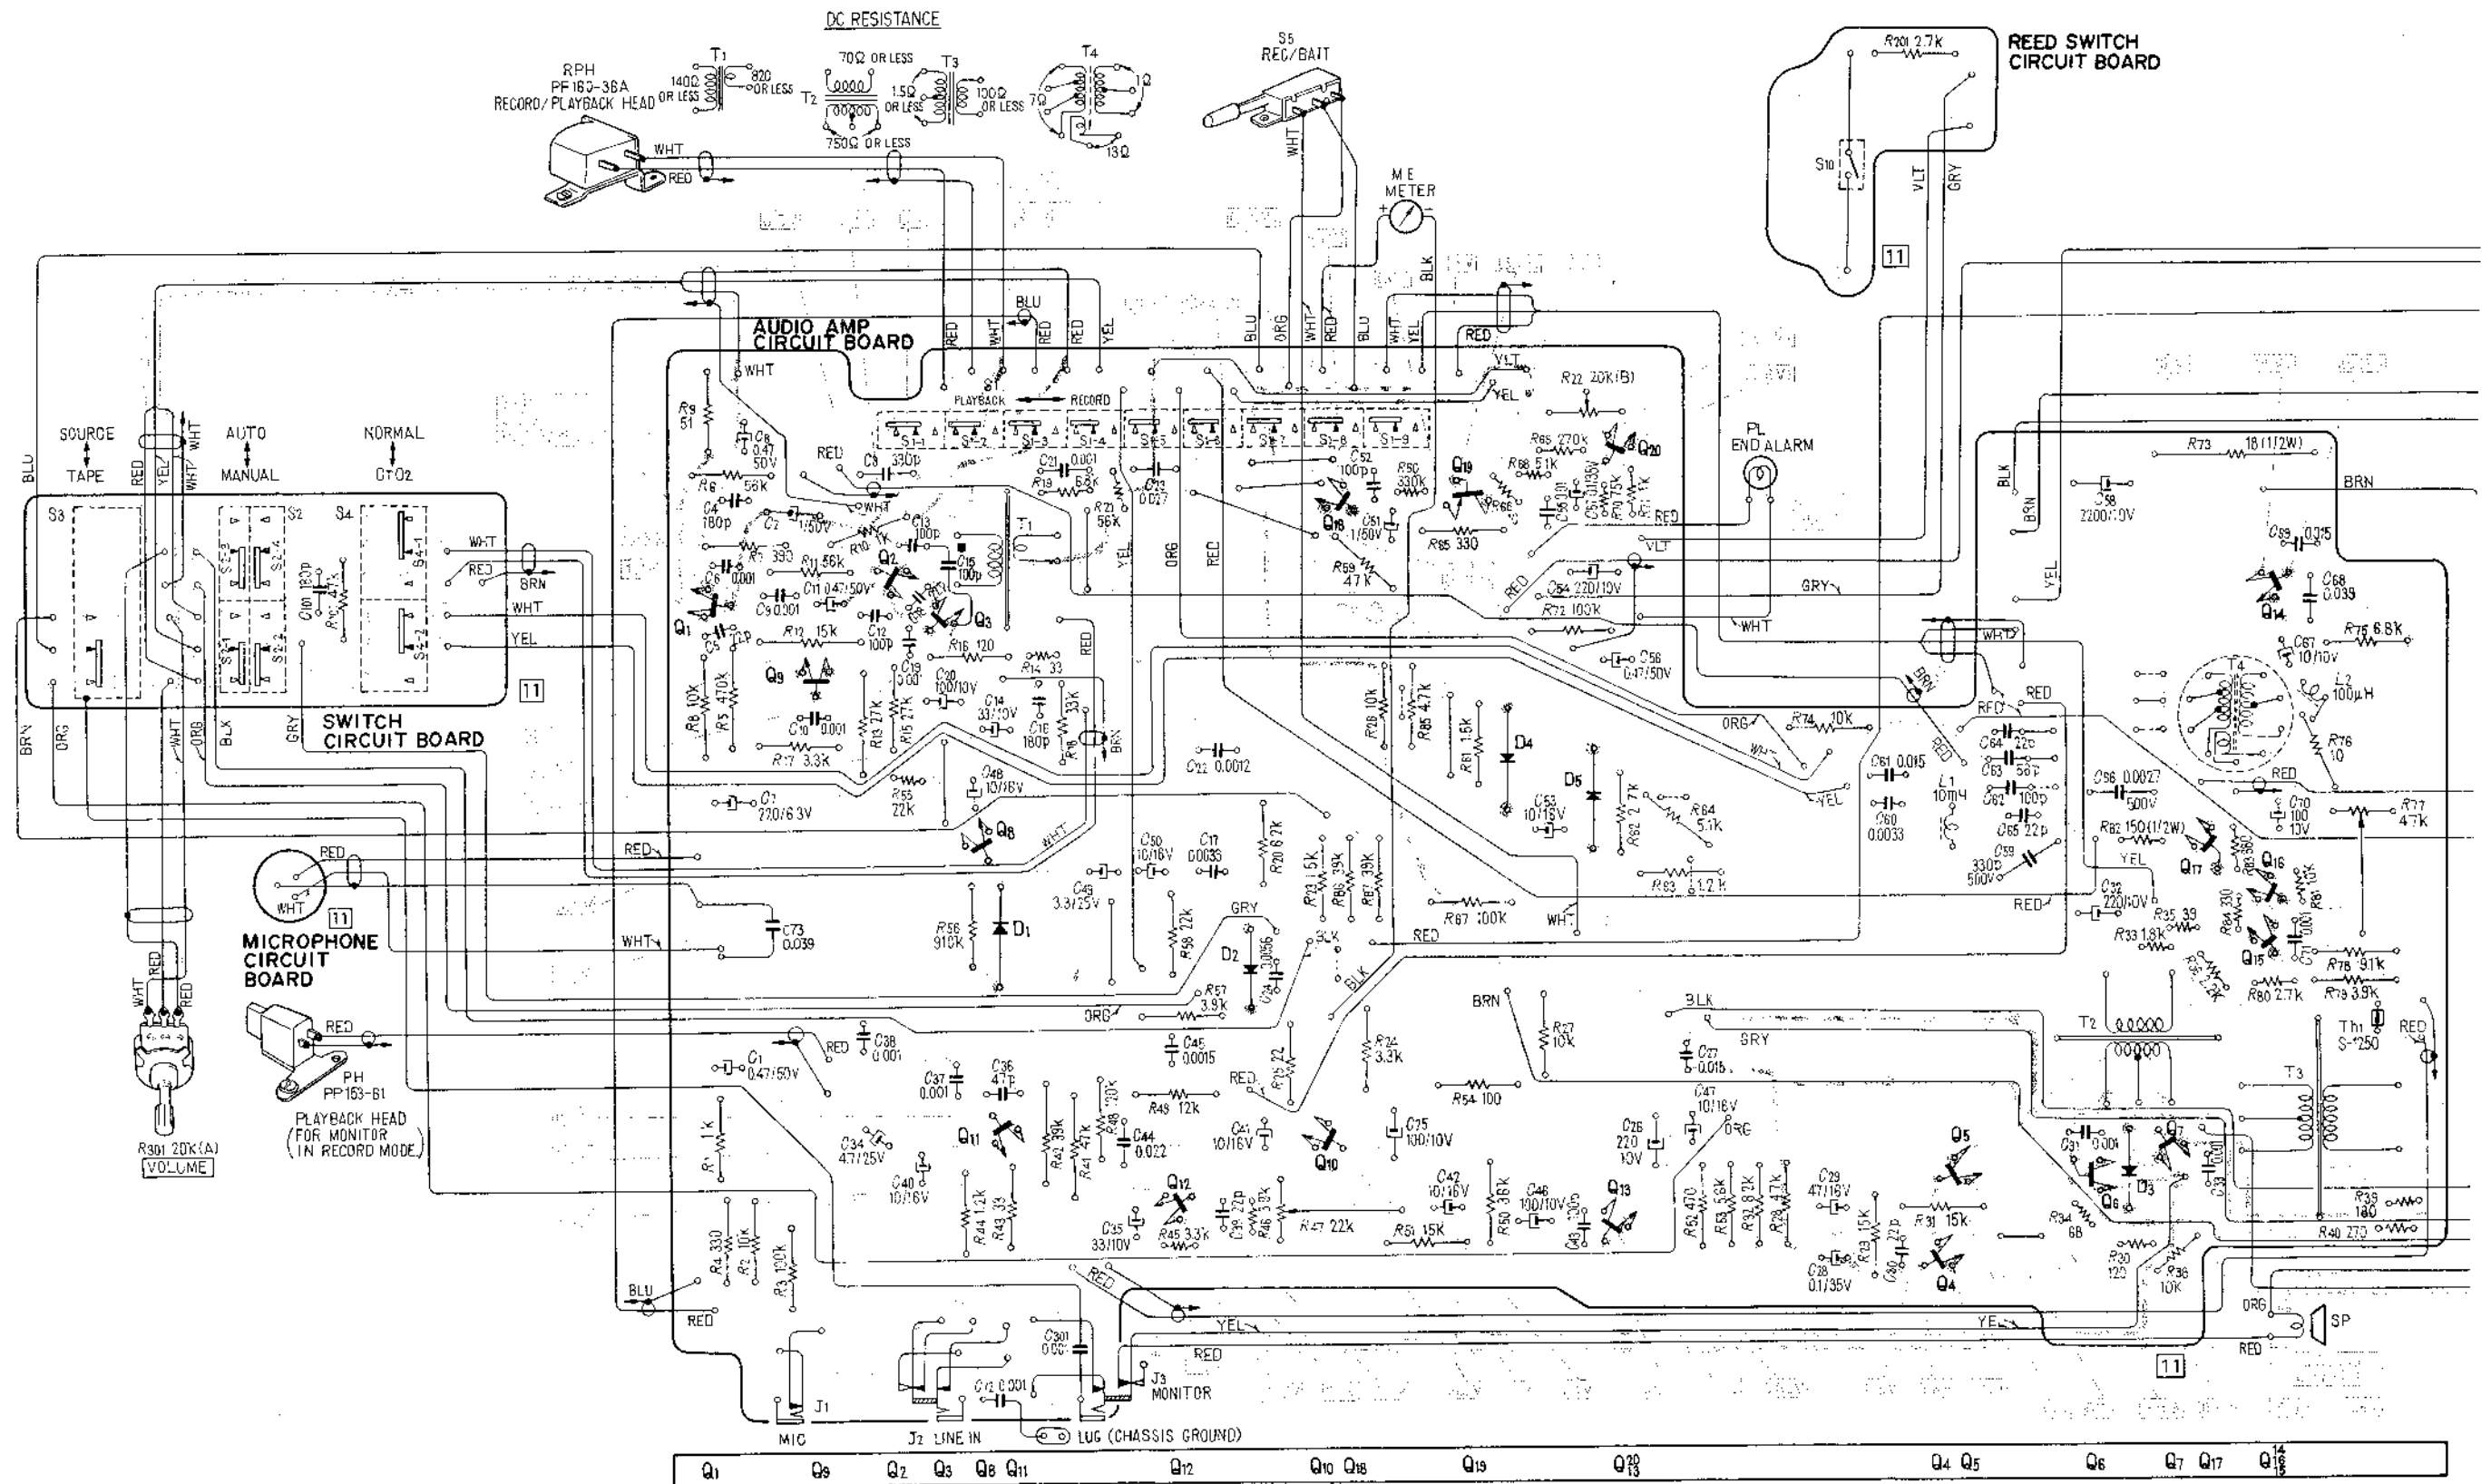


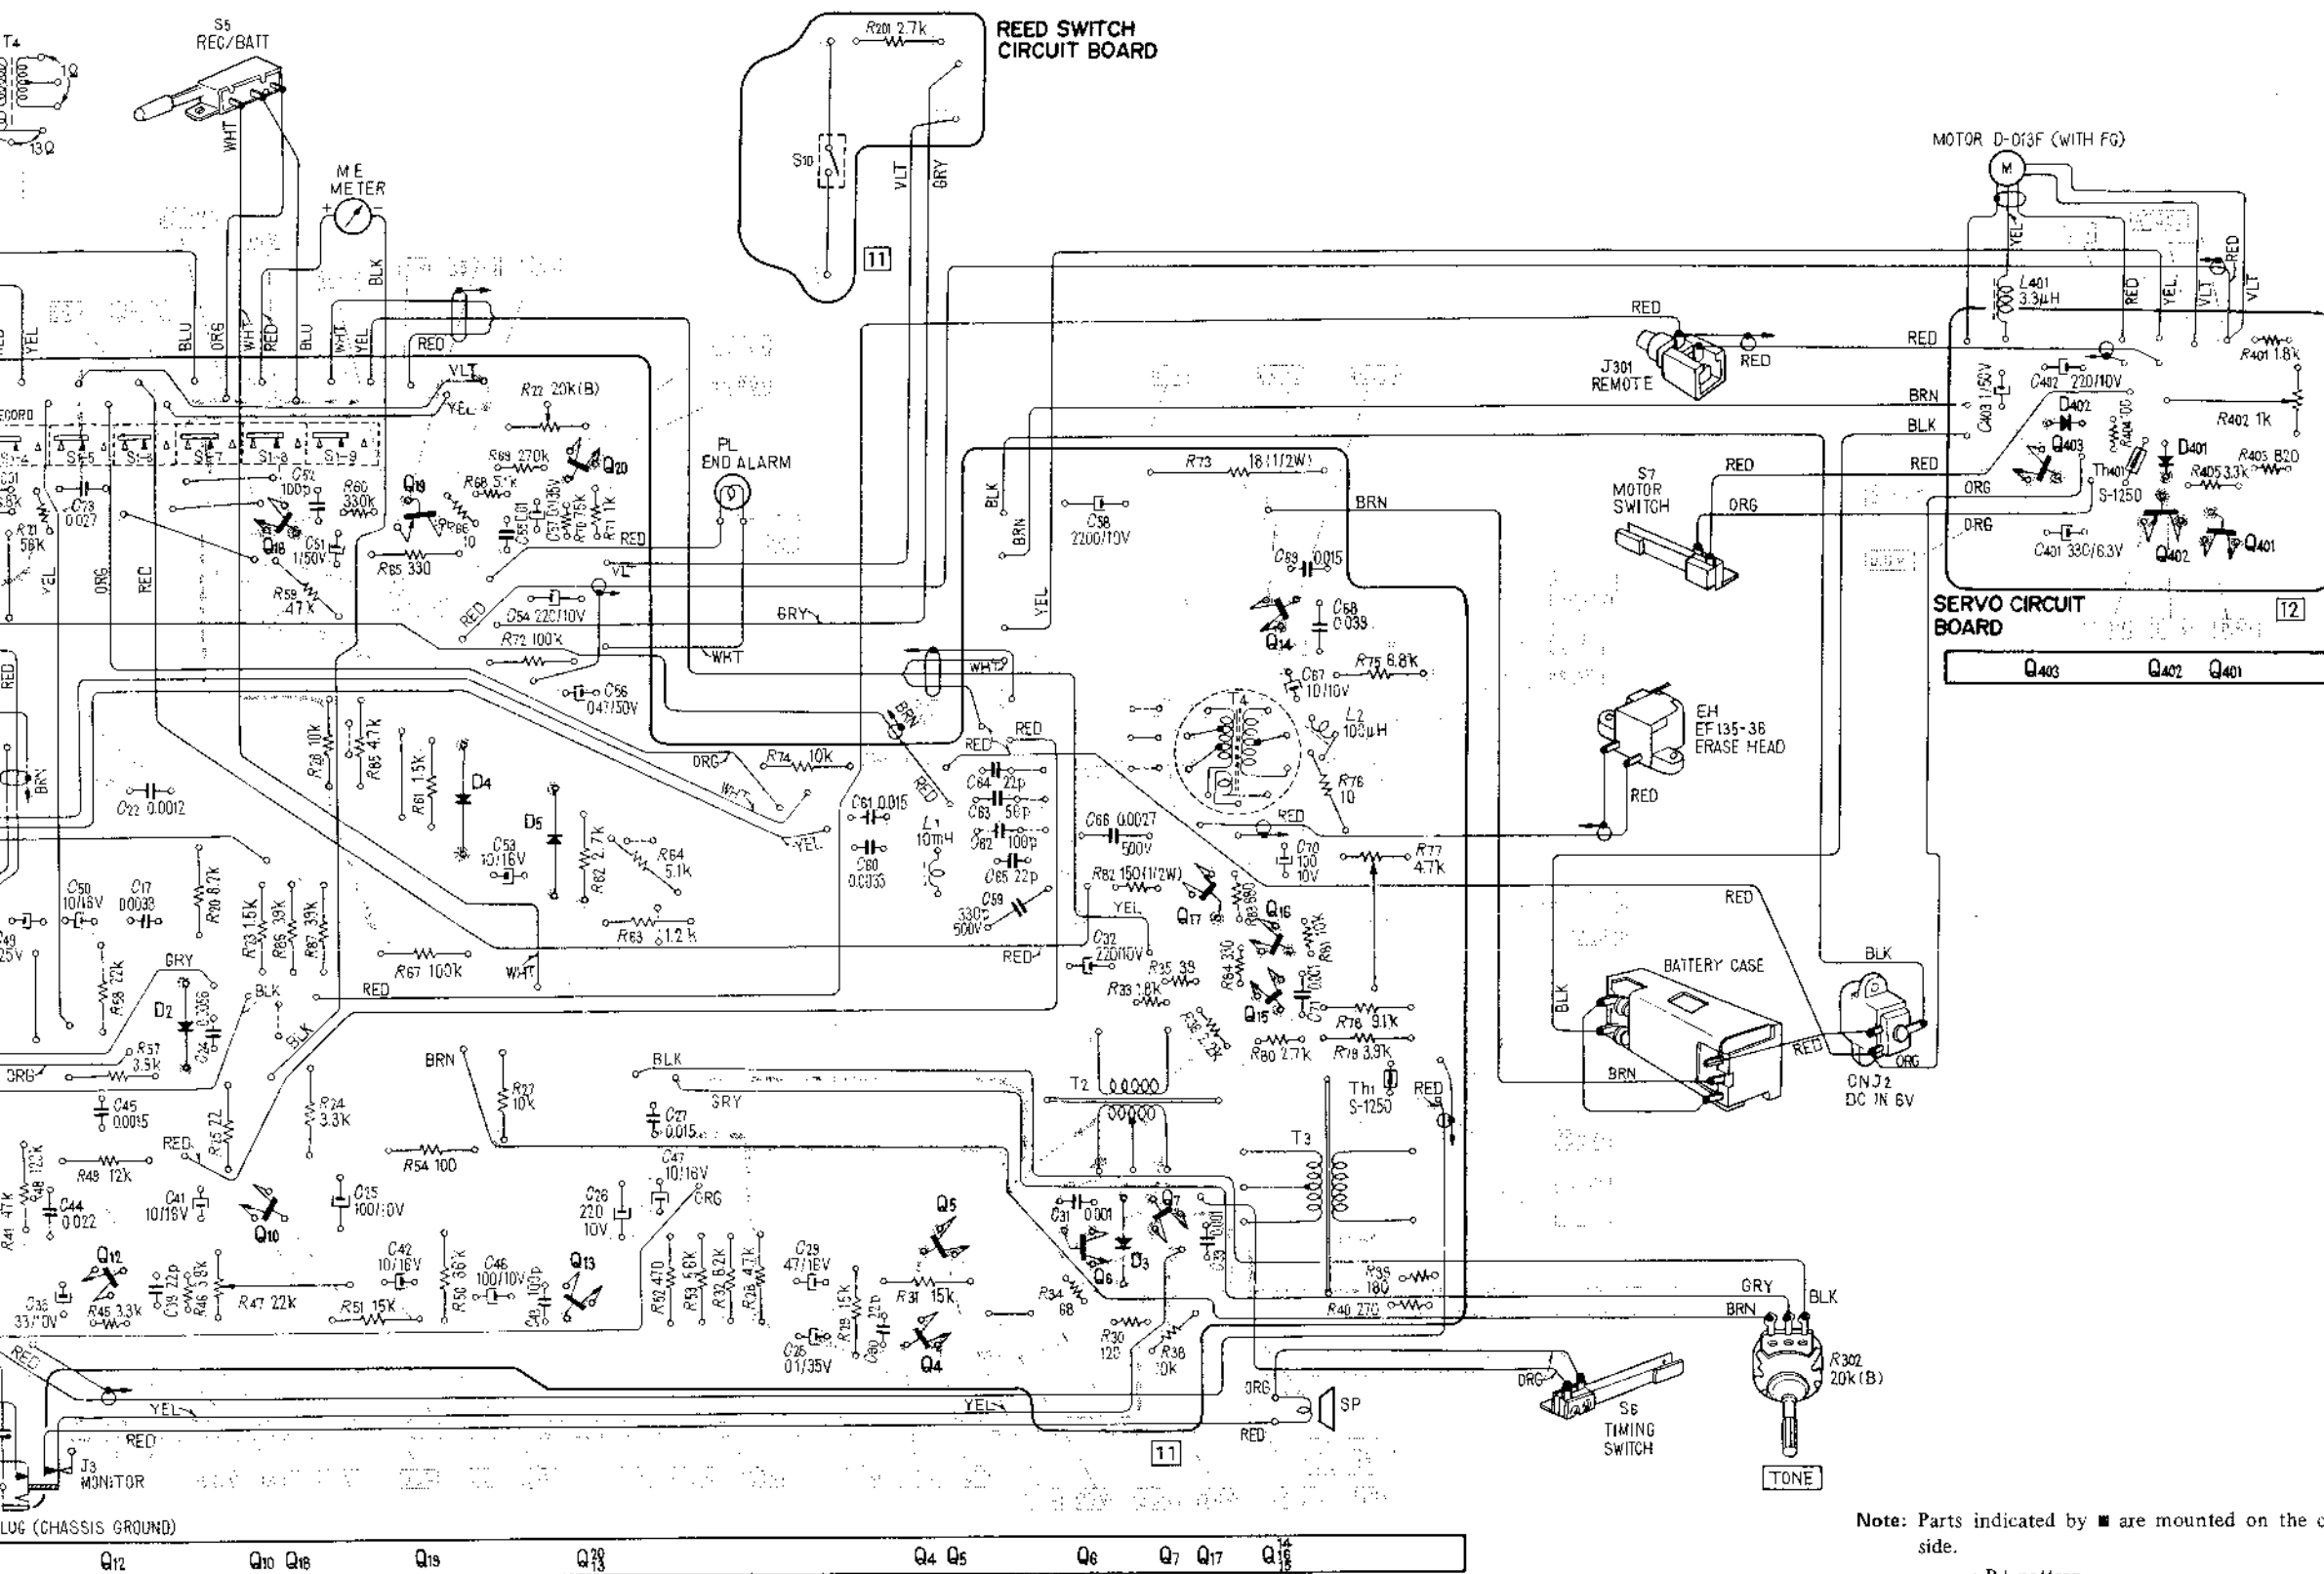


Q1, 2, 11: 2SC631A
 Q3 ~ 5, 8 ~ 10, Q12 ~ 16, 18, Q20, 401: 2SC633A

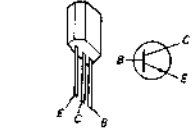


Q6, 7, 403: 2SC1474

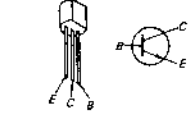


Q17: 2SA677

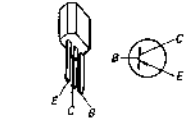


Q19, 402: 2SB475

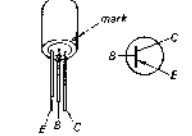


D1, 4, 5: 1T22
 D2, 401: 1T40

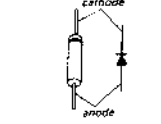

D402: 10D-2

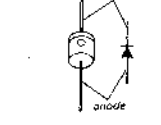


D3: VD1123

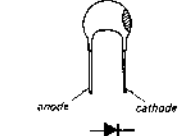

Note: Parts indicated by ■ are mounted on the conductor side.

■ : B+ pattern
 ○ : signal path


5.2. CASE AND PANELS

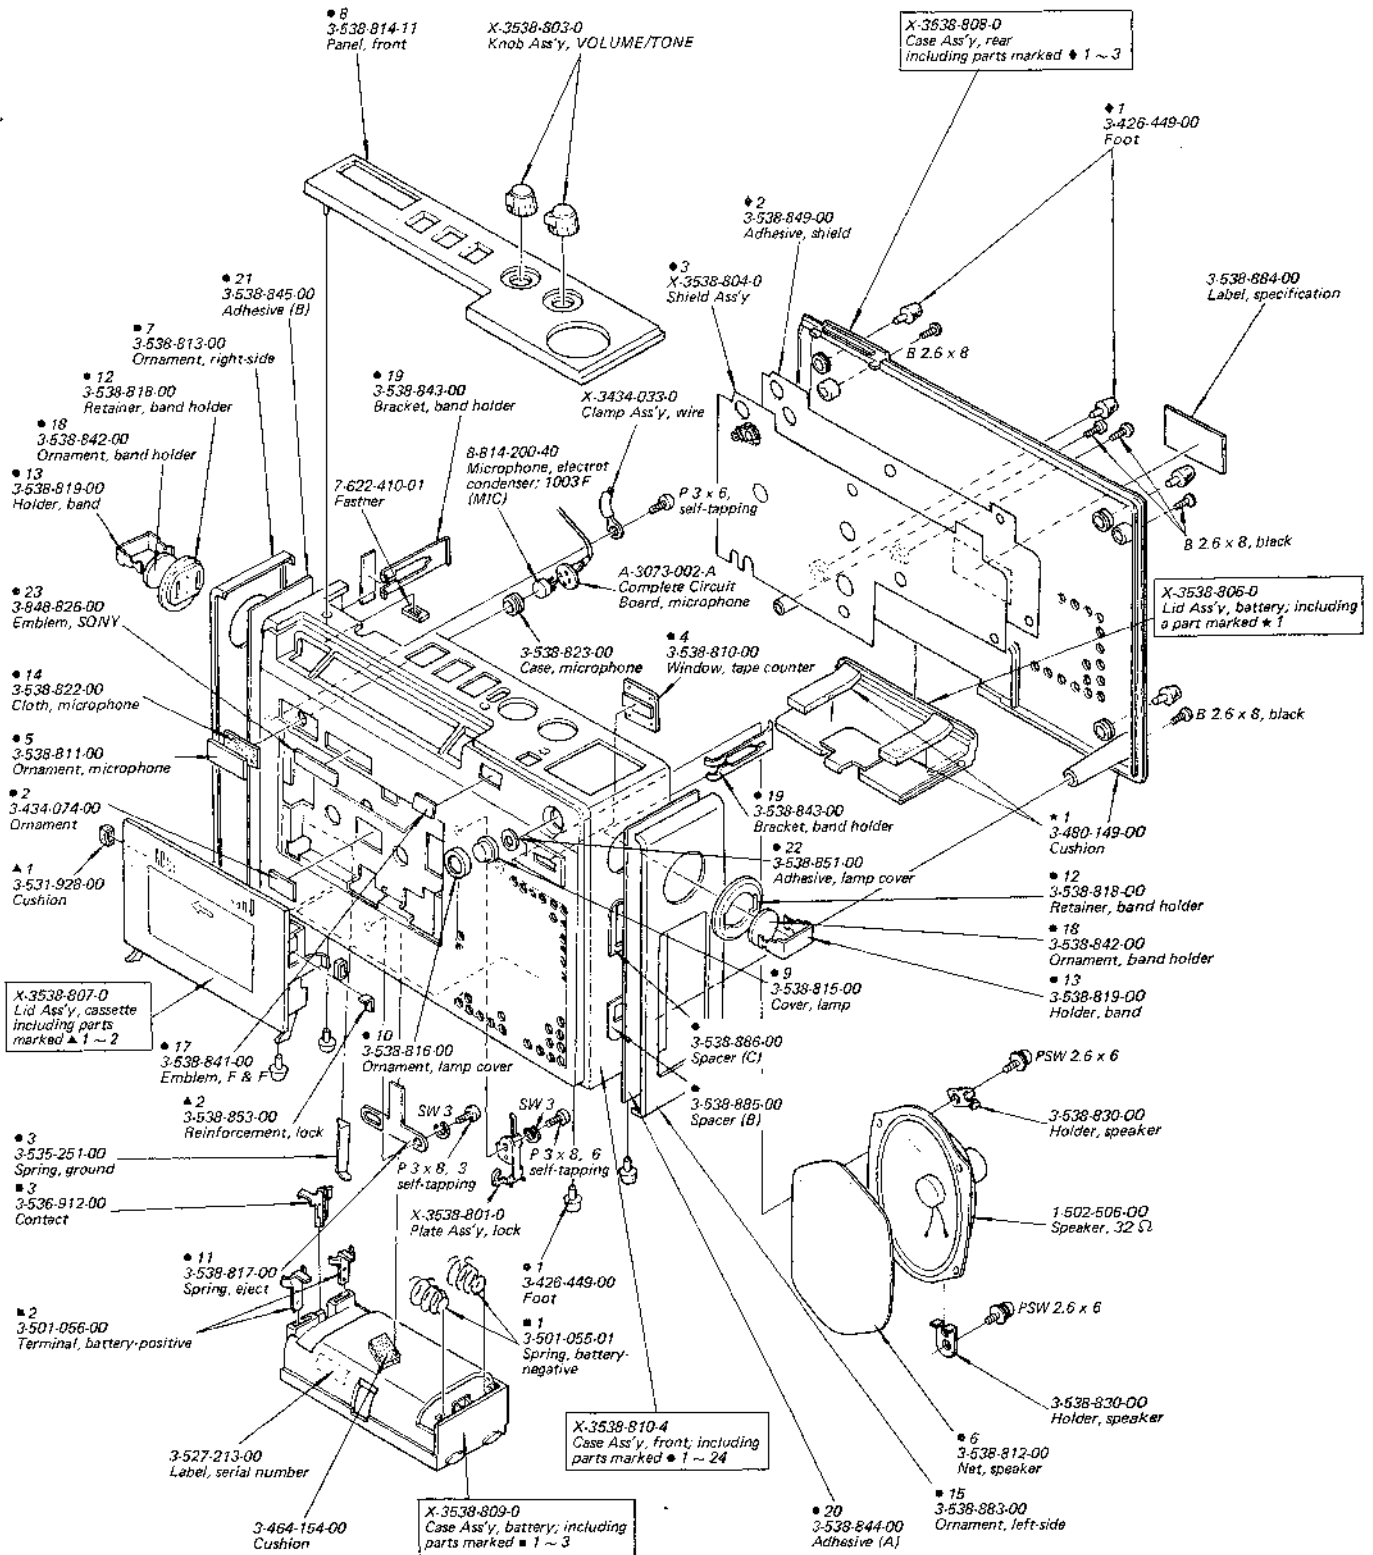

Note:

- Items without part number and description are not available.
- All screws are Phillips (cross recess) type unless otherwise noted.
- (-) = slotted head

5-3. PACKING

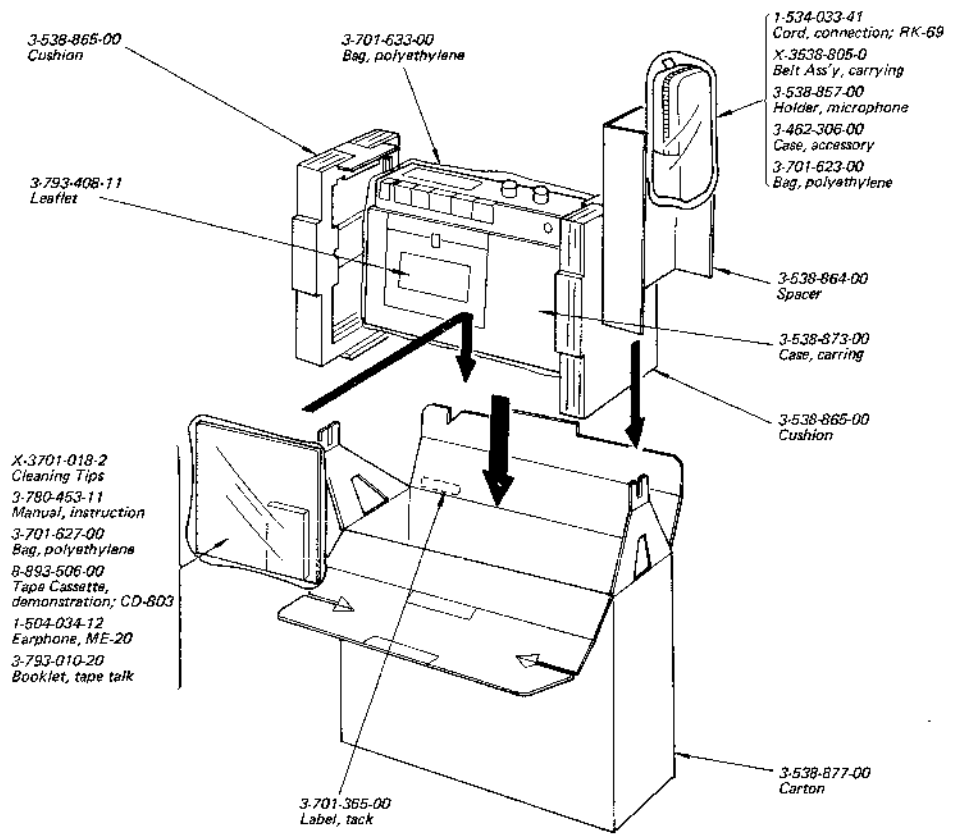

Note:

- Items without part number and description are not available.

SECTION 6

ELECTRICAL PARTS LIST

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
COMPLETE CIRCUIT BOARDS			TRANSFORMERS		
A-3070-013-A		Audio Amp	T1	1-423-207-00	Driver
A-3081-005-A		Switch	T2	1-423-208-00	Driver
A-3081-006-A		Reed Switch	T3	1-427-379-00	Output
A-3073-002-A		Microphone	T4	1-433-177-00	Bias Osc
A-3065-005-A		Servo			
SEMICONDUCTORS			CAPACITORS		
Q1, 2		Transistor 2SC631A	All capacitors are μF unless otherwise indicated. (elect = electrolytic, p = $\mu\mu$)		
Q3 ~ 5		Transistor 2SC633A	C1	1-121-726-11	0.47 50 V elect
Q6, 7		Transistor 2SC1474	C2	1-121-391-11	1 50 V elect
Q8 ~ 10		Transistor 2SC633A	C3	1-102-112-11	330 p 50 V ceramic
Q11		Transistor 2SC631A	C4	1-102-109-11	180 p 50 V ceramic
Q12 ~ 16		Transistor 2SC633A	C5	1-102-959-11	22 p 50 V ceramic
Q17		Transistor 2SA677	C6	1-102-074-11	0.001 50 V ceramic
Q18		Transistor 2SC633A	C7	1-121-419-11	220 6.3 V elect
Q19		Transistor 2SB475	C8	1-121-726-11	0.47 50 V elect
Q20		Transistor 2SC633A	C9, 10	1-102-074-11	0.001 50 V ceramic
Q401		Transistor 2SC633A	C11	1-121-726-11	0.47 50 V elect
Q402		Transistor 2SB475	C12, 13	1-102-106-11	100 p 50 V ceramic
Q403		Transistor 2SC1474	C14	1-121-402-11	33 10 V elect
D1		Diode 1T22	C15	1-102-106-11	100 p 50 V ceramic
D2		Diode 1T40	C16	1-102-109-11	180 p 50 V ceramic
D3		Diode VD1123	C17	1-105-667-12	0.0033 50 V mylar
D4, 5		Diode 1T22	C18	1-102-959-11	22 p 50 V ceramic
D401		Diode 1T40	C19	1-102-074-11	0.001 50 V ceramic
D402		Diode 10D-2	C20	1-121-414-11	100 10 V elect
Th1	1-800-199-00	Thermistor S-1250	C21	1-105-661-12	0.001 50 V mylar
Th401	1-800-199-00	Thermistor S-1250	C22	1-105-662-12	0.0012 50 V mylar
COILS			C23	1-105-678-12	0.027 50 V mylar
L1	1-407-504-00	10 mH, microinductor	C24	1-105-670-12	0.0056 50 V mylar
L2	1-407-169-00	100 μH , microinductor	C25	1-121-414-11	100 10 V elect
L401	1-407-484-00	3.3 μH , microinductor	C26	1-121-420-11	200 10 V elect
			C27	1-105-675-12	0.015 50 V mylar
			C28	1-131-209-11	0.1 35 V tantalum
			C29	1-121-409-11	47 16 V elect

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>		
C30	1-102-959-11	22 p	50 V	ceramic
C31	1-102-074-11	0.001	50 V	ceramic
C32	1-121-420-11	220	10 V	elect
C33	1-102-074-11	0.001	50 V	ceramic
C34	1-121-395-11	4.7	25 V	elect
C35	1-121-402-11	33	10 V	elect
C36	1-101-880-11	47 p	50 V	ceramic
C37, 38	1-102-074-11	0.001	50 V	ceramic
C39	1-102-959-11	22 p	50 V	ceramic
C40 ~ 42	1-121-651-11	10	16 V	elect
C43	1-102-106-11	100 p	50 V	ceramic
C44	1-105-677-12	0.022	50 V	mylar
C45	1-105-663-12	0.0015	50 V	mylar
C46	1-121-414-11	100	10 V	elect
C47, 48	1-121-651-11	10	16 V	elect
C49	1-121-391-11	3.3	25 V	elect
C50	1-121-651-11	10	16 V	elect
C51	1-121-391-11	1	50 V	elect
C52	1-102-106-11	100 p	50 V	ceramic
C53	1-121-651-11	10	16 V	elect
C54	1-121-420-11	220	10 V	elect
C55	1-105-673-12	0.01	50 V	mylar
C56	1-121-726-11	0.47	50 V	elect
C57	1-131-209-11	0.1	35 V	tantalum
C58	1-121-659-11	2200	10 V	elect
C59	1-107-181-11	330 p	500 V	silvered mica
C60	1-105-667-12	0.0033	50 V	mylar
C61	1-105-675-12	0.015	50 V	mylar
C62	1-107-169-11	100 p	500 V	silvered mica
C63	1-107-165-11	56 p	500 V	silvered mica
C64, 65	1-107-210-11	22 p	500 V	silvered mica
C66	1-129-707-11	0.0027	630 V	polypropylene
C67	1-131-193-21	10	10 V	tantalum
C68	1-105-680-12	0.039	50 V	mylar
C69	1-105-675-12	0.015	50 V	mylar
C70	1-121-414-11	100	10 V	elect
C71, 72	1-102-074-11	0.001	50 V	ceramic
C73	1-105-680-12	0.039	50 V	mylar

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>		
C101	1-102-109-11	180 p	50 V	ceramic
C301	1-102-074-11	0.001	50 V	ceramic
C401	1-121-751-11	330	6.3 V	elect
C402	1-121-420-11	220	10 V	elect
C403	1-121-391-11	1	50 V	elect

RESISTORS


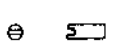




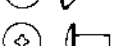
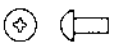
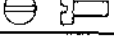

All resistors are 1/4W, composition type and in Ω unless otherwise indicated. (k = 1000)

R1	1-202-383-31	1 k	
R2	1-202-407-31	10 k	
R3	1-202-431-31	100 k	
R4	1-202-371-31	330	
R5	1-244-737-09	470 k	carbon, low noise
R6	1-202-425-31	56 k	
R7	1-202-373-31	390	
R8	1-244-697-09	10 k	carbon, low noise
R9	1-202-342-31	51	
R10	1-202-383-31	1 k	
R11	1-202-435-31	56 k	
R12	1-244-701-09	15 k	carbon, low noise
R13	1-244-707-09	27 k	carbon, low noise
R14	1-202-337-31	33	
R15	1-202-417-31	27 k	
R16	1-202-361-31	120	
R17	1-202-395-31	3.3 k	
R18	1-202-419-31	33 k	
R19	1-202-403-31	6.8 k	
R20	1-202-402-31	6.2 k	
R21	1-202-425-31	56 k	
R22	1-221-630-00	20 k, adjustable	
R23	1-202-387-31	1.5 k	
R24	1-202-395-31	3.3 k	
R25	1-202-333-31	22	
R26, 27	1-202-407-31	10 k	
R28	1-202-399-31	4.7 k	
R29	1-202-411-31	15 k	

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
S8, 9		-----
S10	1-516-590-00	Reed, END ALARM
CONNECTORS AND JACKS		
CNJ2	1-507-447-00	Connector, DC IN 6 V
J1	1-507-251-00	Jack, mini; MIC
J2	1-507-285-00	Jack, mini; LINE IN
J3	1-507-275-00	Jack, mini; MONITOR
J301	1-507-357-00	Jack, REMOTE

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
MISCELLANEOUS		
EH	8-825-506-00	Head, erase; EF135-36
PH	8-829-361-00	Head, playback; PP153-61
RPH	8-825-628-00	Head, record/playback, PF160-36A
M	8-834-013-50	Motor, D-013F
ME	1-520-205-00	Meter, REC/BATT
MIC	8-814-200-40	Microphone, electret condenser; C-1003F
PL	1-518-114-XX	Lamp
SP	1-502-506-00	Speaker, 32Ω

— Hardware Nomenclature —

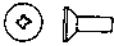P - Pan Head Screw		SC - Set Screw	
PS - Pan Head Screw with Spring Washer		E - Retaining Ring (E Washer)	
K - Flat Countersunk Head Screw		W - Washer	
B - Binding Head Screw		SW - Spring Washer	
RK - Oval Countersunk Head Screw		LW - Lock Washer	
T - Truss Head Screw		N - Nut	
R - Round Head Screw			
F - Flat Fillister Head Screw			

- Example -

Type of Slot

P 3x10

Length in mm (L)

Diameter in mm (D)

Type of Head

