


# TC-158SD

US Model  
Canadian Model  
AEP Model  
E Model

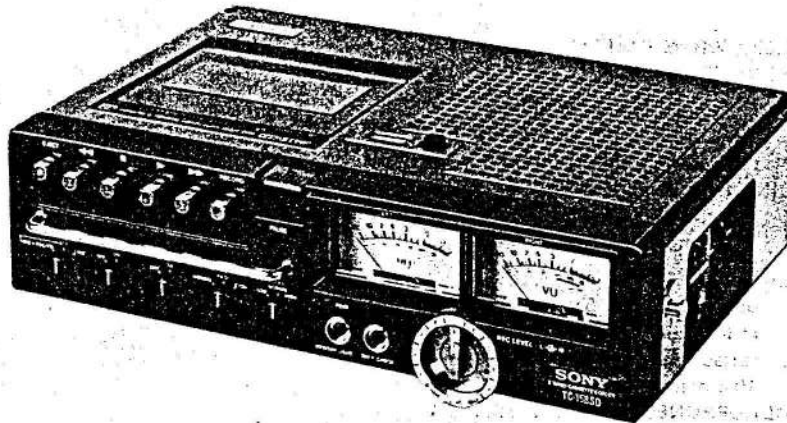

## STEREO CASSETTE-CORDER

### SPECIFICATIONS

<b>Power Requirements:</b>	AC 120V 60 Hz (US, Canadian model) AC 110, 120, 220 or 240V—50/60 Hz (AEP, E model) DC 6V four batteries of size D (IEC designation R20) Sony Rechargeable Battery Pack BP-8H (optional) 12V car battery with Sony Car Battery Cord DCC-129 (optional)	<b>Fast Forward and Rewind Time:</b>	Approx. 90 sec. (C-60, at 6V)
<b>Power Consumption:</b>	12W	<b>Recording System:</b>	4-track 2-channel stereo
<b>Dimensions:</b>	Approx. 350 (w) x 100 (h) x 240 (d) mm 13 <sup>3</sup> / <sub>4</sub> (w) x 4 (h) x 9 <sup>3</sup> / <sub>8</sub> (d) inches including projecting parts and controls	<b>Speaker:</b>	10 cm (4 inches) dia.
<b>Weight:</b>	Approx. 4.8 kg, 10 lb 9 oz with batteries	<b>Power Output:</b>	700 mW
		<b>Bias Frequency:</b>	105 kHz
		<b>Signal-to-noise Ratio:</b>	DOLBY NR OFF With Ferri-Chrome Cassette 59 dB at peak level (NAB) 57 dB (DIN, 1975 rev.) 49 dB (DIN, old) With chromium dioxide cassette 55 dB at peak level (NAB) DOLBY NR ON Improved by 5 dB at 1 kHz, 10 dB above 5 kHz
		<b>Total Harmonic Distortion:</b>	1.3%

\* 'Dolby' and the double-D symbol are the trade marks of  
Dolby Laboratory Inc. Noise reduction system manufac-  
tured under license from Dolby Laboratory Inc.  
\* 0 dB = 0.775 V

#### SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING ON THE  
SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE  
CRITICAL TO SAFE OPERATION. REPLACE THESE  
COMPONENTS WITH SONY PARTS WHOSE PART  
NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR  
IN SUPPLEMENTS PUBLISHED BY SONY.

— Continued on page 2 —

#### CAUTION OF VOLTAGE SELECTOR SETTING

When changing a voltage of the voltage selector, be  
sure to disconnect the ac power cord.

# SONY®

## SERVICE MANUAL

**Frequency Response:** DOLBY NR OFF  
 With Ferri-Chrome Cassette and chromium dioxide cassette  
 20-15,000 Hz (NAB)  
 30-15,000 Hz  $\pm$  3 dB (NAB)  
 30-15,000 Hz (DIN)  
 With regular cassette  
 20-14,000 Hz (NAB)  
 30-12,000 Hz (DIN)

**Wow and Flutter:** 0.08% WRMS (NAB)  
 $\pm$ 0.2% (DIN)

**Inputs:** MIC (phone jack) ..... 2  
 sensitivity 0.2 mV (-72 dB)  
 for a low-impedance microphone  
 LINE IN (phono jack) ..... 2  
 sensitivity 0.06V (-22 dB)  
 input impedance 100k ohms

**Outputs:** LINE OUT (phono jack) ..... 2  
 output level 0.435V (-5 dB)  
 at load impedance 100k ohms  
 suitable load impedance more than 10k ohms  
 HEADPHONES ..... 1  
 suitable load impedance 8-32 ohms

**Record/playback Connector:** Input impedance less than 10k ohms  
 (AEP, E model) Output impedance less than 10k ohms  
**Battery Life:** Continuous recording time  
 Approx. 4.5 hours with Sony Long-life Batteries size D  
 Approx. 10 hours with Eveready Alkaline Batteries No. E95

**MODEL IDENTIFICATION**

- Specification Label -

US model

<b>SONY</b>	
TAPECORDER	TC-158SD
AC 120V 60Hz 12W	DC 6V FLASH-LIGHT BATT SIZE 'D'x4 OR EQUIVALENT
NO. <input type="text"/>	
MADE IN JAPAN	
3-549-157-00	


Canadian model

<b>SONY</b>	
TAPECORDER	TC-158SD
AC 120V 60Hz 12W	DC 6V FLASH-LIGHT BATT SIZE 'D'x4 OR EQUIVALENT
NO. <input type="text"/>	
MADE IN JAPAN	
3-549-158-00	




AEP, E model



<b>SONY</b>	
TAPECORDER	TC-158SD
AC 110,120,220,240V $\sim$ 50/60Hz 12W	DC 6V FLASH-LIGHT BATTERY (SIZE 'D')x4 OR EQUIV.
NO. <input type="text"/>	
MADE IN JAPAN	
3-549-160-00	

# SECTION 1 BLOCK DIAGRAM

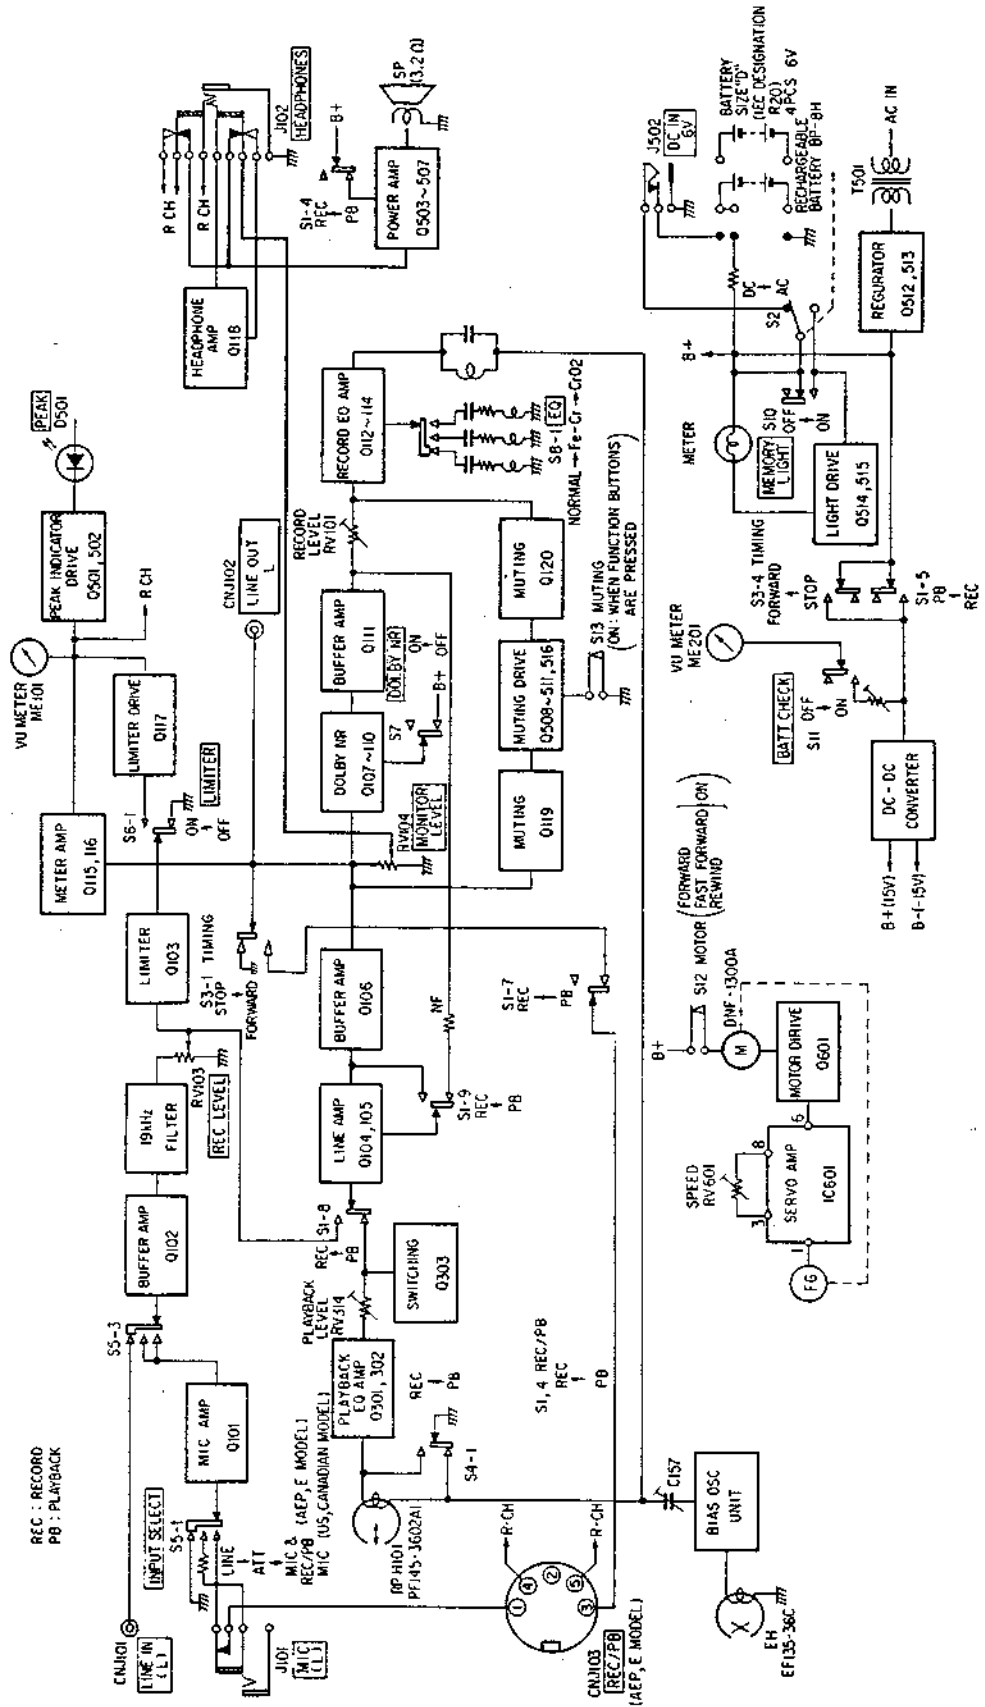

SECTION 2  
DISASSEMBLY

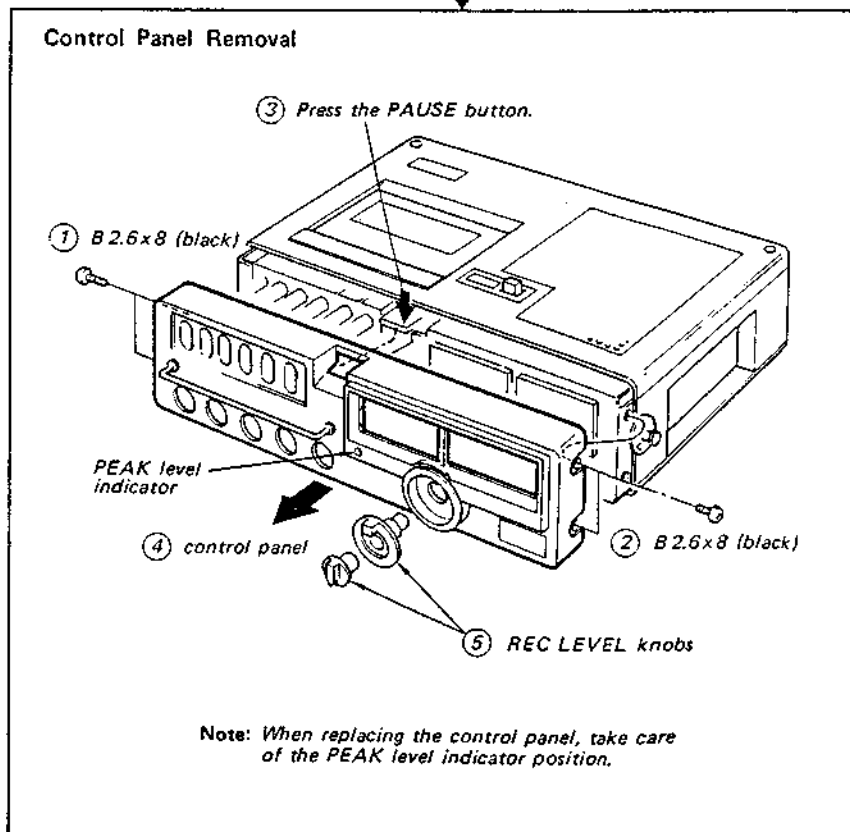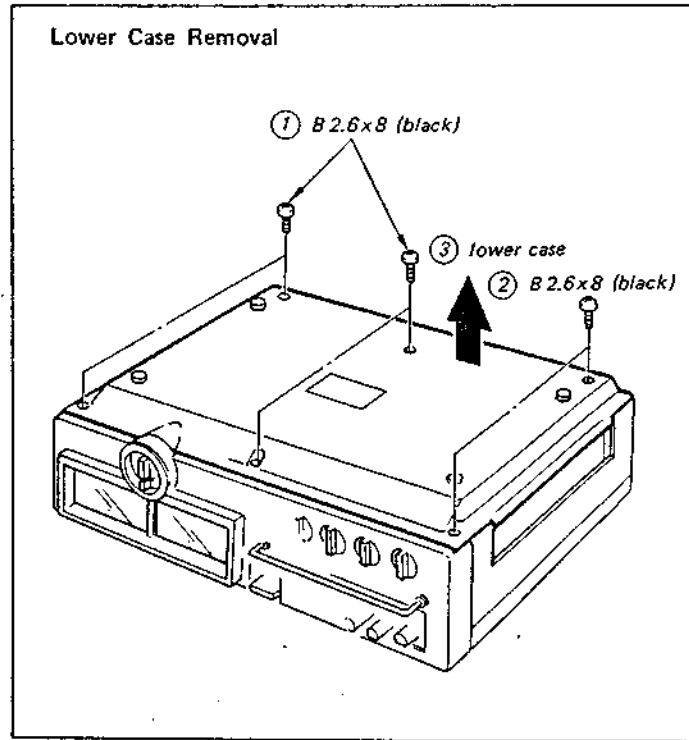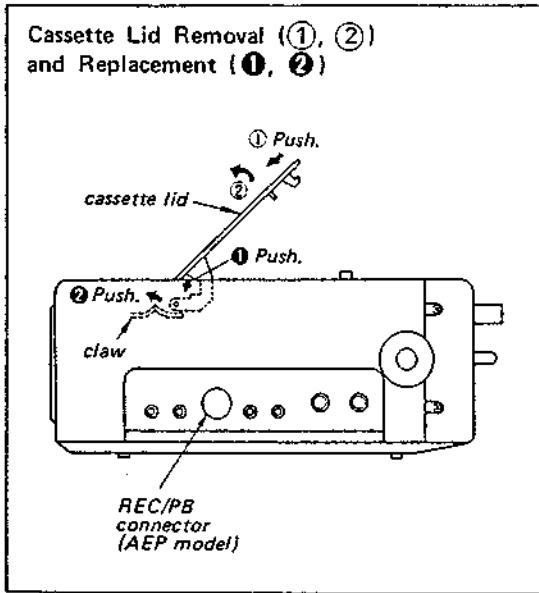

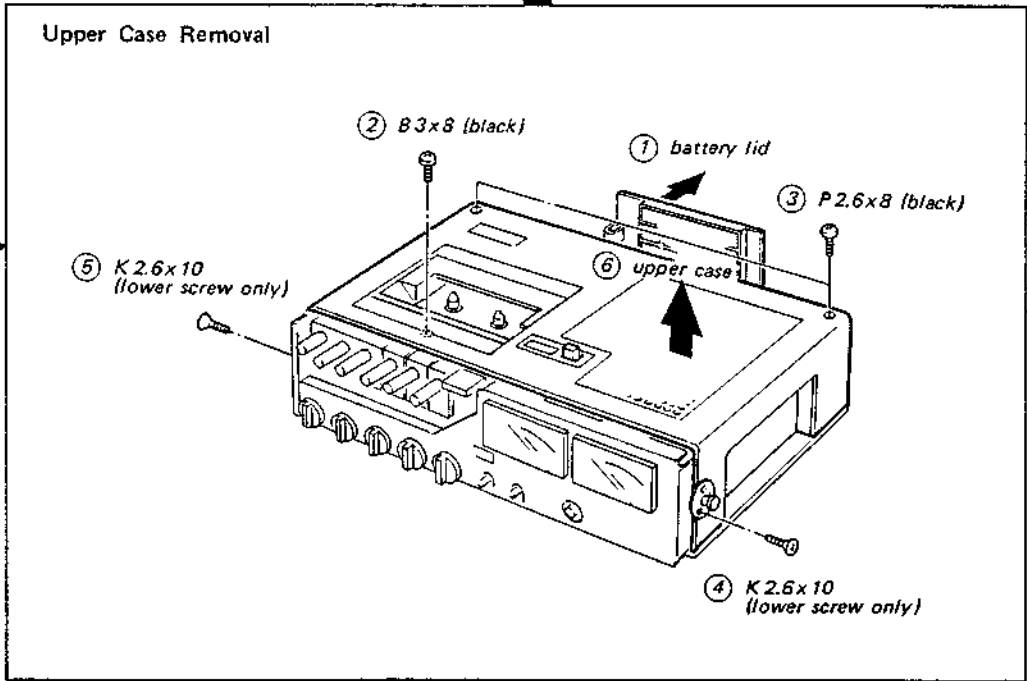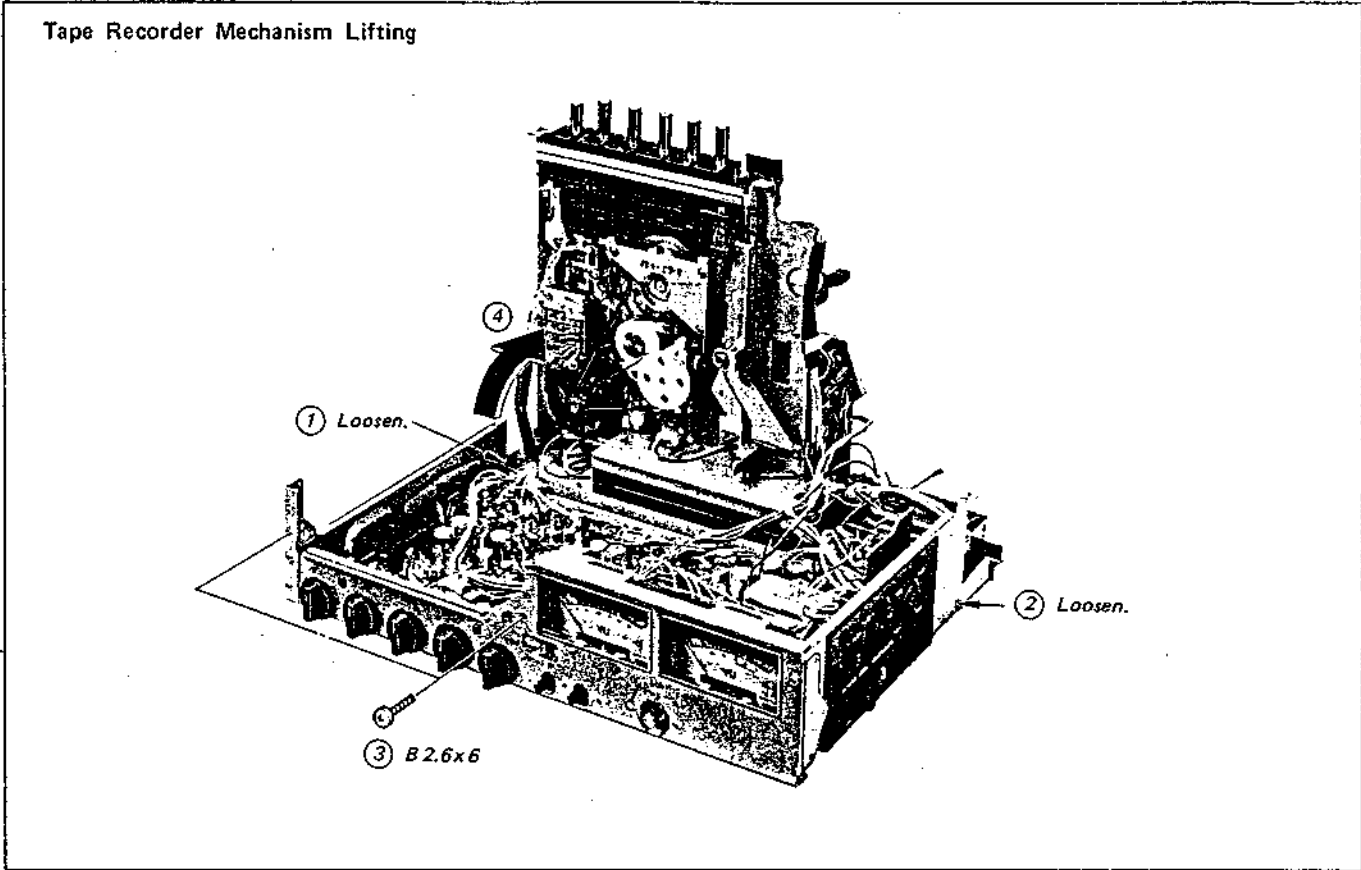



## SECTION 3 ADJUSTMENTS

### PRECAUTION


1. Clean the following parts with a denatured-alcohol-moistened swab:
 

record/playback head	pinch roller
erase head	rubber belts
capstan	idlers
2. Demagnetize the record/playback head with a head demagnetizer.
3. Do not use a magnetized screwdriver for the adjustments.
4. After the adjustments, apply a suitable locking compound to the parts adjusted.
5. The adjustments should be performed with the rated power supply voltage unless otherwise noted.

### Pause Timing Adjustment

— Playback mode —


1. The take-up reel spindle flange should touch the tension pulley.
2. Slowly press PAUSE button. First, the pinch roller should release from the capstan. Next, the tension pulley should release from the take-up reel spindle flange. Under this condition, adjust the position of the pinch roller by bending the specified parts.

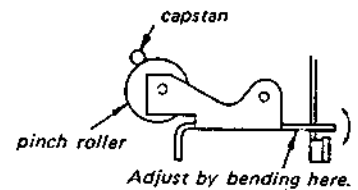



### Head Height Adjustment

— Playback mode —

1. Make an adjustment cassette as shown below.

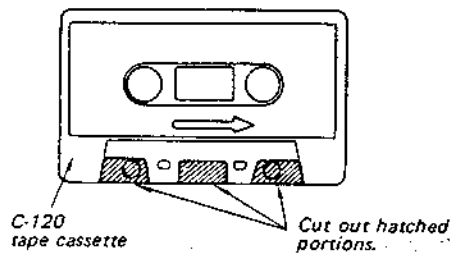


2. In playback mode and viewing from the top, adjust the head heights to eliminate tape curl and tape twist at arrowed portions.

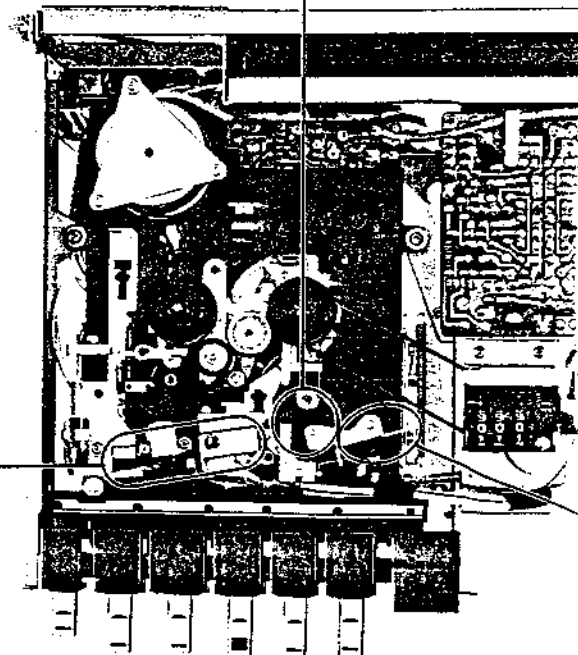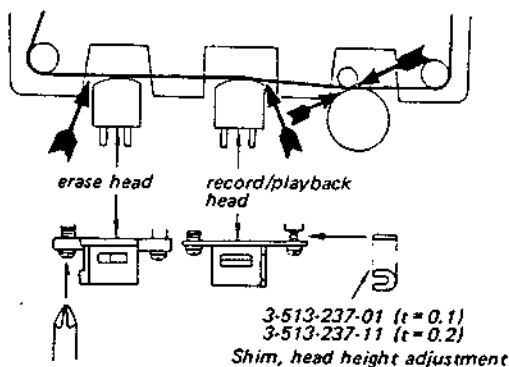

## Muting Switch (S13) Position Adjustment

### – Stop mode –


Loosen the adjustment screw and adjust the switch position so that the gap of the switch contacts becomes  $1.5 \pm 0.2$  mm.

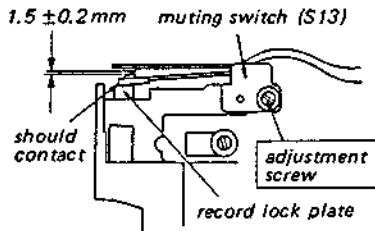

## Timing Switch (S3) Position Adjustment

### – Stop mode –



Loosen the adjustment screws and adjust the position of the timing switch circuit board in the arrowed direction so that the muting lever just starts to pull the slide of the switch.

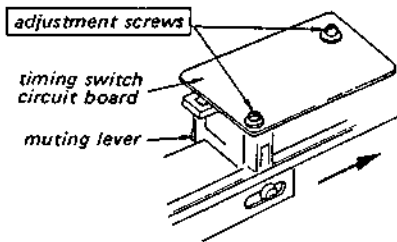

## Pinch Roller Pressure Measurement

### – Playback mode –


1. Pull the spring scale.
2. Slowly return the pinch roller and read the spring scale just when the pinch roller starts to rotate.

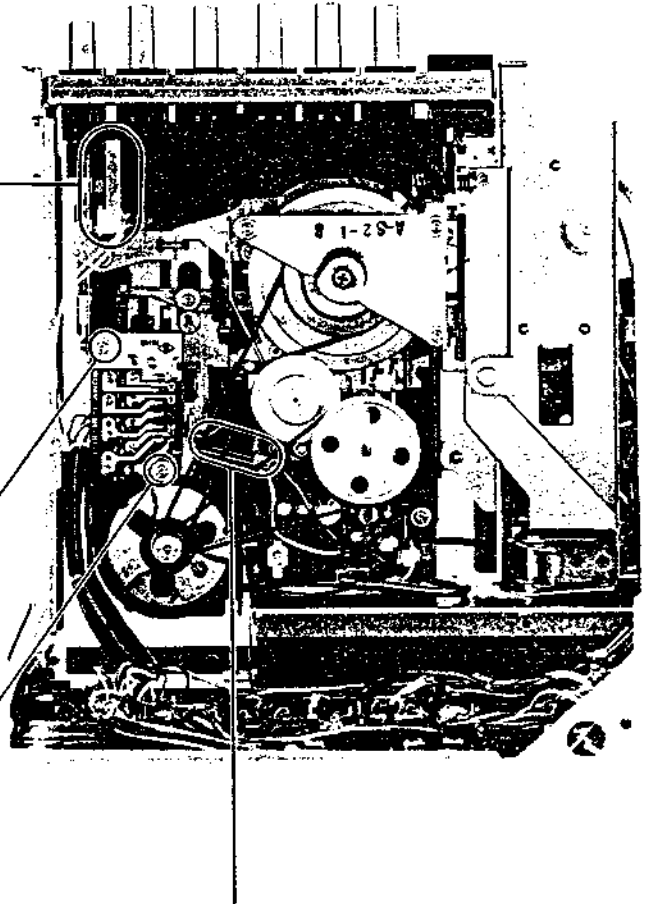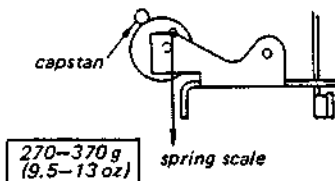

## Motor Switch (S12) Position Adjustment

### – Stop mode –

Loosen the adjustment screw and adjust the switch position as shown below.

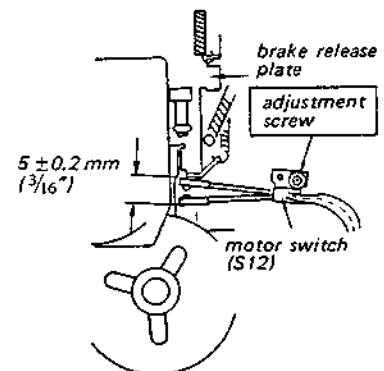




**Flywheel Thrust Play Adjustment**

— Playback mode —

1. Carefully turn the thrust screw clockwise for no lengthwise play of the capstan shaft.
2. Turn the thrust screw counterclockwise  $\frac{1}{5}$  to  $\frac{3}{5}$  turns so that the lengthwise thrust play becomes 0.1–0.3 mm.

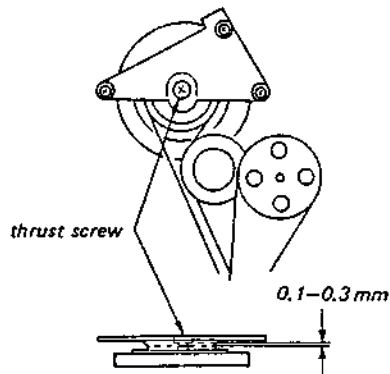

**Reference Data:**

**Forward Torque**

Torque meter	Meter reading
CQ-101A	30–60 g.cm (0.42–0.83 oz.inch)


Deviation: less than 10 g.cm (0.14 oz.inch)

**Back Tension Torque**

Torque meter	Meter reading
CQ-102A	2–4 g.cm (0.028–0.055 oz.inch)

**Fast Forward and Rewind Torque**

Torque meter	Meter reading
CQ-201A	55–95 g.cm (0.77–1.32 oz.inch)

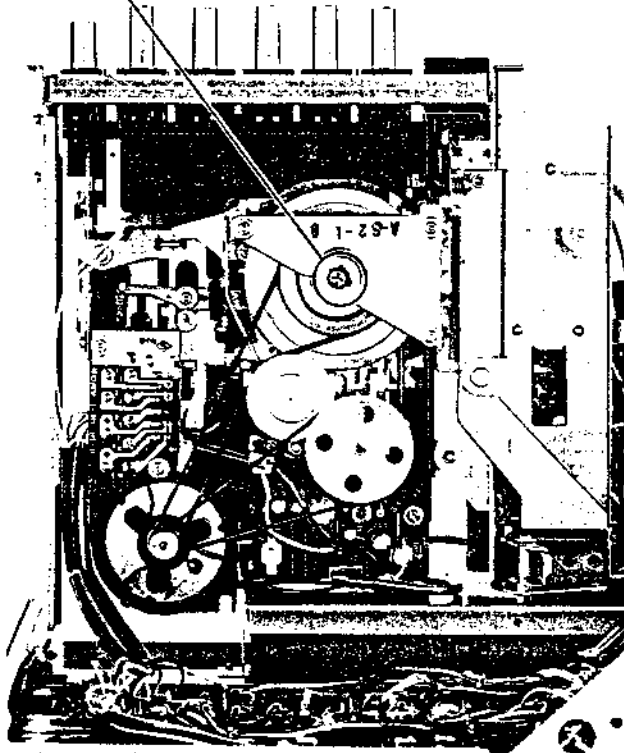

## 3-2. ELECTRICAL ADJUSTMENTS

**Note:** The adjustments should be performed in the order given in this service manual. The adjustments should be performed for both L-CH and R-CH.

Switches and control should be set as follows unless otherwise specified.


LIMITER switch: OFF  
 DOLBY NR switch: OFF  
 TAPE SELECT EQ switch: NORMAL  
 TAPE SELECT BIAS switch: NORMAL  
 MONITOR LEVEL control: MAX

BIAS and EQ switch settings in accordance with tape used are as follows.

Blank tape	EQ switch	BIAS switch
CS-10	NORMAL	NORMAL
CS-20	CrO <sub>2</sub>	HIGH
CS-30	Fe-Cr	NORMAL

### Standard Record:

Set the REC LEVEL control for the specified output level.

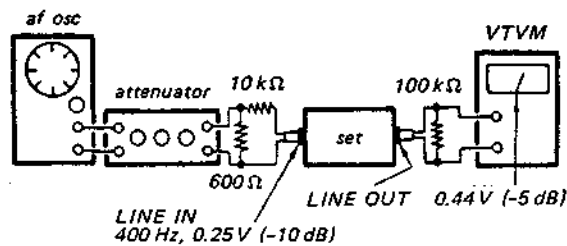

### Standard Input Level

	Source impedance	Input level
MIC	300 Ω	0.77 mV (-60 dB)
LINE IN	10 kΩ	0.25 V (-10 dB)
REC/PB	100 kΩ	31 mV (-28 dB)


### Standard Output Level

	Load impedance	Output level
LINE OUT	100 kΩ	0.44 V (-5 dB)
HEADPHONES	8 Ω	95 mV (-18 dB)
REC/PB	50 kΩ	0.44 V (-5 dB)

## Tape Speed Adjustment

### Procedure:

Mode: playback

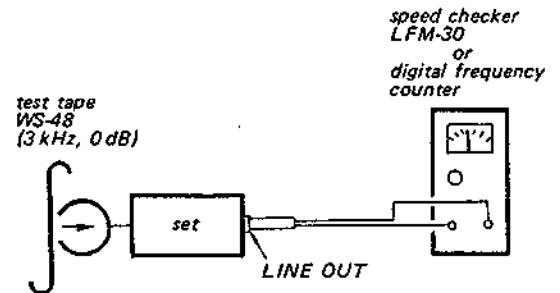


### Specification:

Frequency at beginning and end of tape should be within:

Speed checker	Digital frequency counter
±0.3%	2,990 Hz-3,010 Hz


### Adjustment Location:

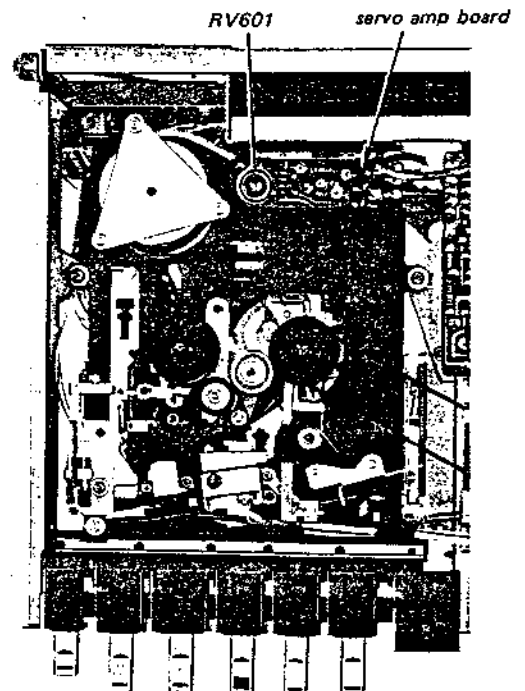


**Record/playback Head Azimuth Adjustment**

**Procedure:**

1. Mode: playback  
test tape  
P-4-A81S  
(6.3 kHz, -10 dB)


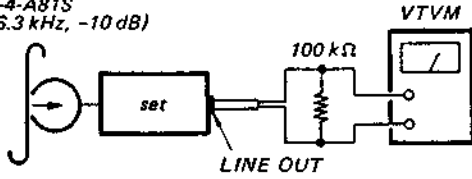


2. Turn the adjustment screw for the maximum level and set it to the mechanical mid position between L-CH and R-CH peak positions.

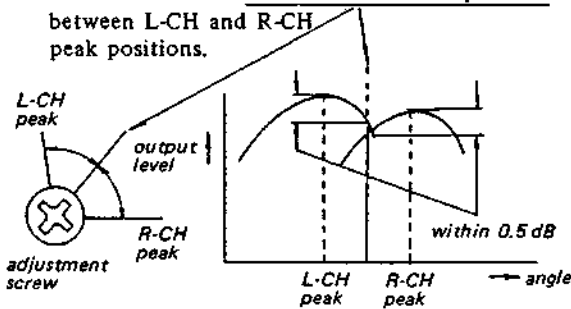


3. Mode: playback

test tape  
P-4-A81S  
(6.3 kHz, -10 dB)

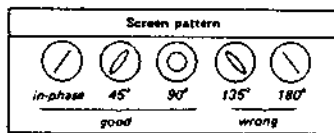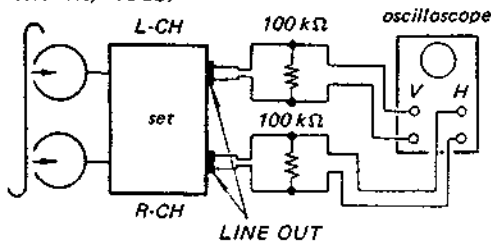


**Adjustment Location:**

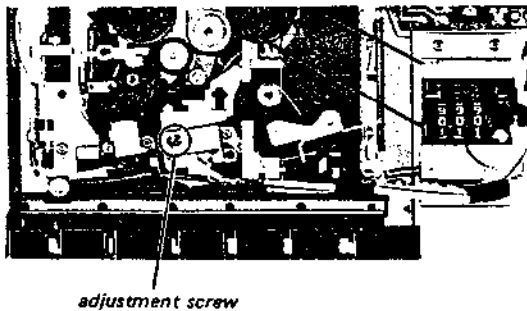

**Playback Level Adjustment**

**Procedure:**

test tape  
P-4-L81  
(333 Hz, 0 dB)

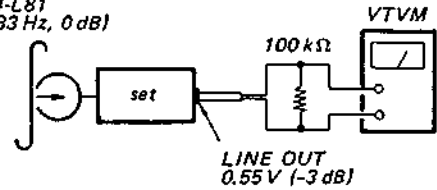


**Specification:**

LINE OUT level: 0.52 V-0.58 V  
(-3 dB ± 0.5 dB)

Check that LINE OUT level does not change in playback mode while changing the mode from playback to stop several times.

**Adjustment Location:**

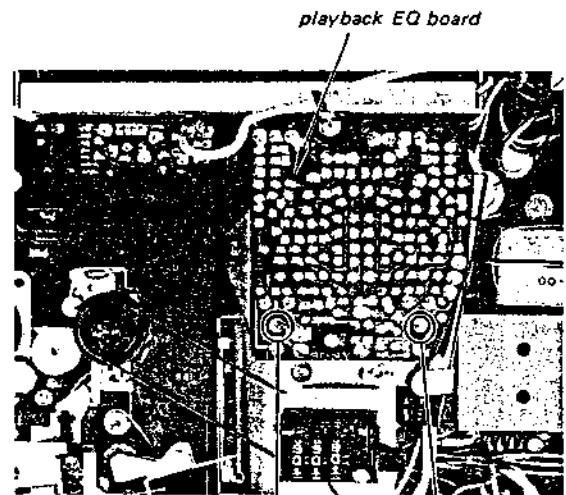

RV314 (L-CH)


RV414 (R-CH)

## Playback Equalizer Adjustment

### Procedure:



Mode: playback

test tape  
P-4-AB2  
(10 kHz, -10 dB)

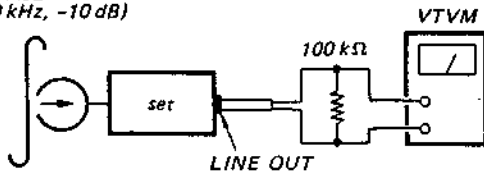

Adjust the pattern connection for 206 mV-103 mV (-11.5 dB--17.5 dB) reading on VTVM.

### Adjustment Location:

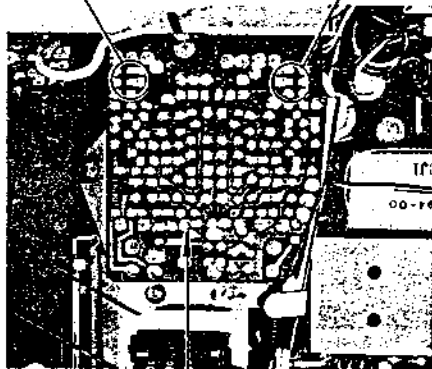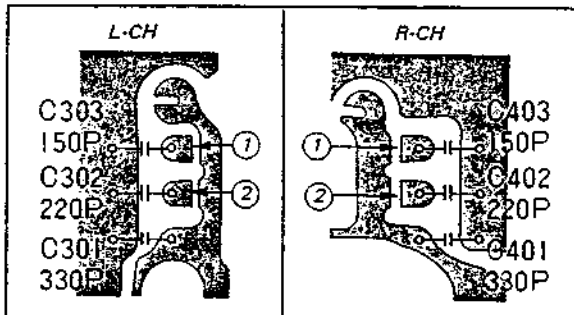

playback EQ board

Pattern connection	10 kHz VTVM reading
①	down
②	↑
① and ②	up

### Reference Data:

Level difference between NORMAL and CrO<sub>2</sub> or Fe-Cr positions of TAPE SELECT switch: 4.5 dB ± 1 dB.


## Level Meter Calibration

### Setting:

REC LEVEL control: standard record  
(See page 10.)

### Procedure:

1. Mode: record

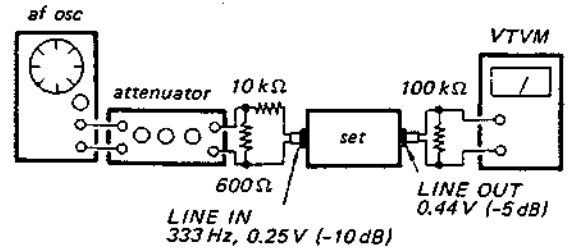


2.

Adjust	VU meter indication
RV102 (L-CH)	
RV202 (R-CH)	

### Adjustment Location:

audio amp board RV102 (L-CH) RV202 (R-CH)

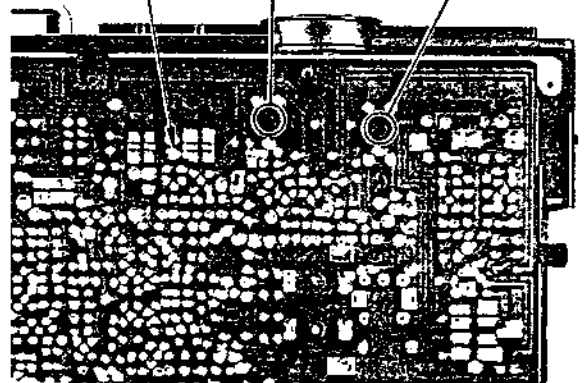


**Record Bias Adjustment**

**Setting:**


REC LEVEL control: standard record  
(See page 10.)

**Procedure:**

1. Mode: record

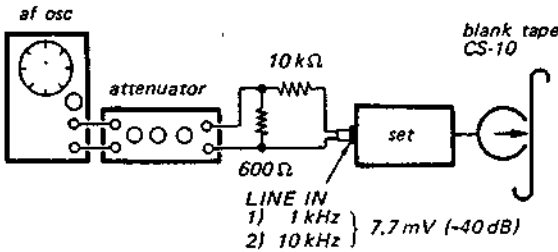


2. Mode: playback

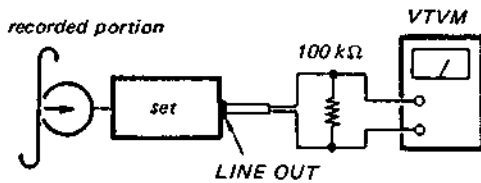

3. Repeating above steps, adjust C157 (L-CH) and C257 (R-CH) to make 10 kHz and 1 kHz signal output levels equal.

**Adjustment Location:**

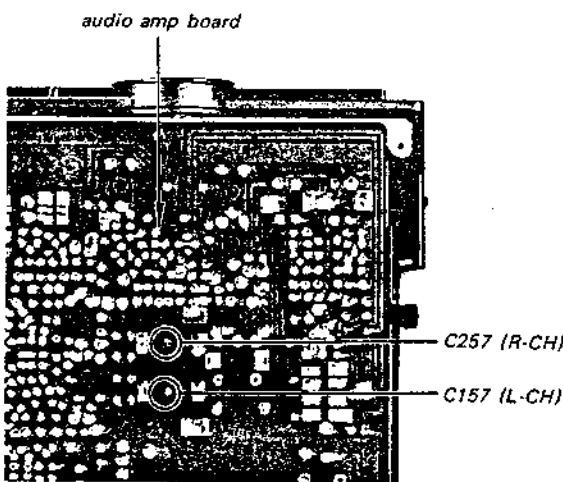

Note: When the 10 kHz level is low, turn C157 or C257 counterclockwise.


**Record Level Adjustment**

**Setting:**


REC LEVEL control: standard record  
(See page 10.)

**Procedure:**

1. Mode: record

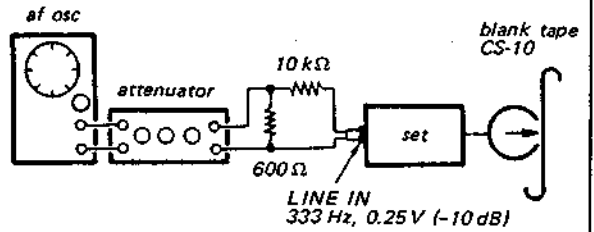


2. Mode: playback

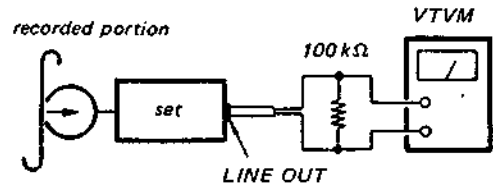

3. Repeating above steps, adjust RV101 (L-CH) and RV201 (R-CH) for 0.44 V (-5 dB) reading on VTVM.

**Adjustment Location:**

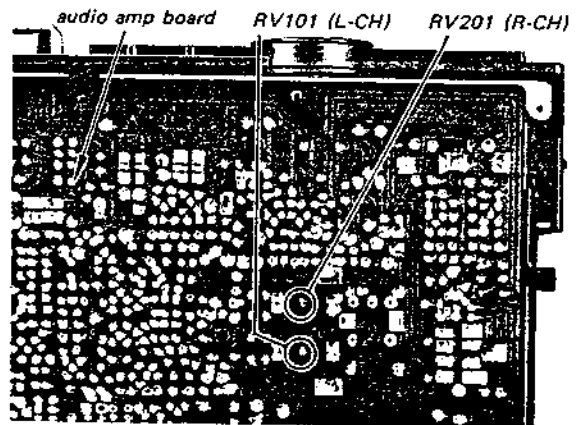

4. Change the blank tape to CS-20 or CS30 and measure the LINE OUT level.


Blank tape	LINE OUT level
CS-10	0.44 V (-5 dB)
CS-20	0.35V-0.55V
CS-30	(-7 dB-3 dB)

**19 kHz Filter Adjustment**

**Setting:**


REC LEVEL control: standard record  
(See page 10.)

**Procedure:**

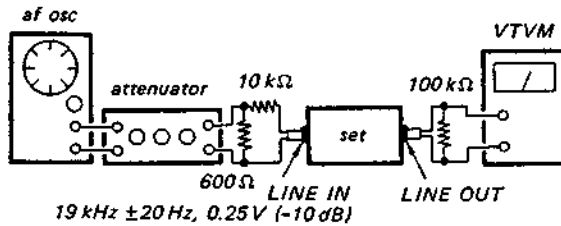

Adjust L102 (L-CH) and L202 (R-CH) for a minimum reading on VTVM.

**Adjustment Location:**

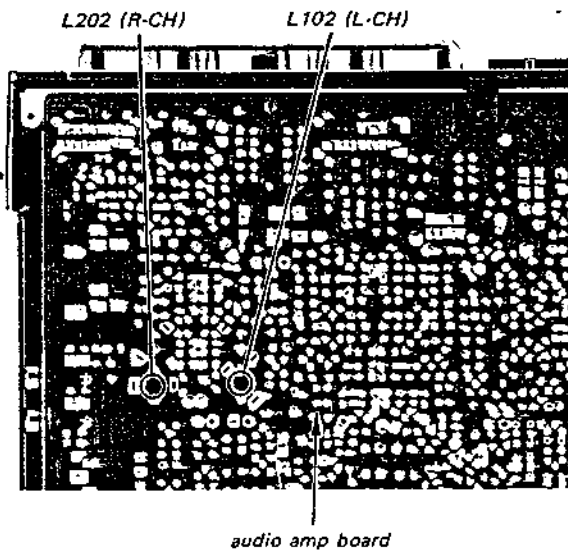


**Battery Meter Calibration**

**Setting:**

Power Supply Voltage: 4.4 V dc  
BATT CHECK button: ON (Press.)  
Mode: playback with no cassette loaded

**Adjustment Location and Specification:**

Adjust	Meter indication
RV501	

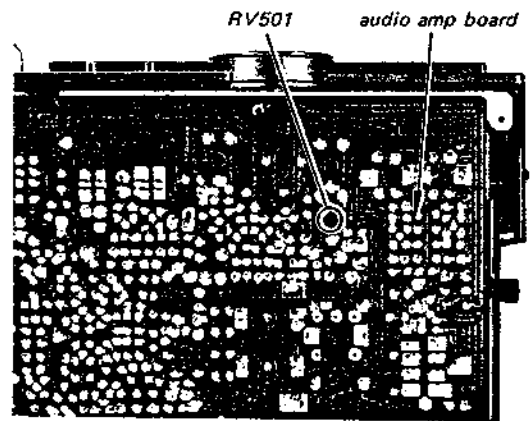

**Reference Data:**

MIC ATT attenuate level: 20 dB  $\pm$  2 dB  
MEMORY LIGHT lighting time:  
about 10 seconds

## SECTION 4 DIAGRAMS


### 4-1. SEMICONDUCTORS

( ) : Replacement Semiconductors

Q101, 102, 104  
Q111, 112, 201  
Q202, 204, 211  
Q212, 301, 302  
Q401, 402  
Q103, 105-110  
Q115-118, 120  
Q203, 205-210  
Q215-218, 220  
Q303, 403  
Q501-503,  
Q508-510,  
Q513, 514, 516


2SC632A

2SC634A

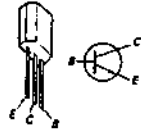


Q113, 114, 213  
Q214, 504, 511

2SA678




Q119, 219  
Q506, 515


2SC1474




Q505: 2SK23A (2SK23A-525)




Q507: 2SA772 (2SA684)



Q512: 2SC1173

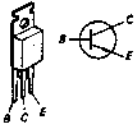


Q601: 2SC1761 (2SC1760)

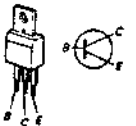


D101, 201: V06C (V09C)




D102, 104, 106  
D107, 202, 204  
D206, 207, 602  
D103, 105, 108  
D203, 205, 208  
D502, 504, 505  
D601  
D503: RD4A  
D506-509: 10E2




D501: SLP24B

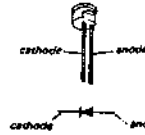

D510: EQA01-08 (EQB01-08)




IC601: CX065






4.2. MOUNTING DIAGRAM  
- Conductor Side -

0	201	101	220	219	102	119	101	100	100	210	207	205	214	213	212	115	115	505	117	715	218	217	513	512	118	218	
0		505					103	105	102	205	202	204	203			108	208	504	502			510	206	207	503		

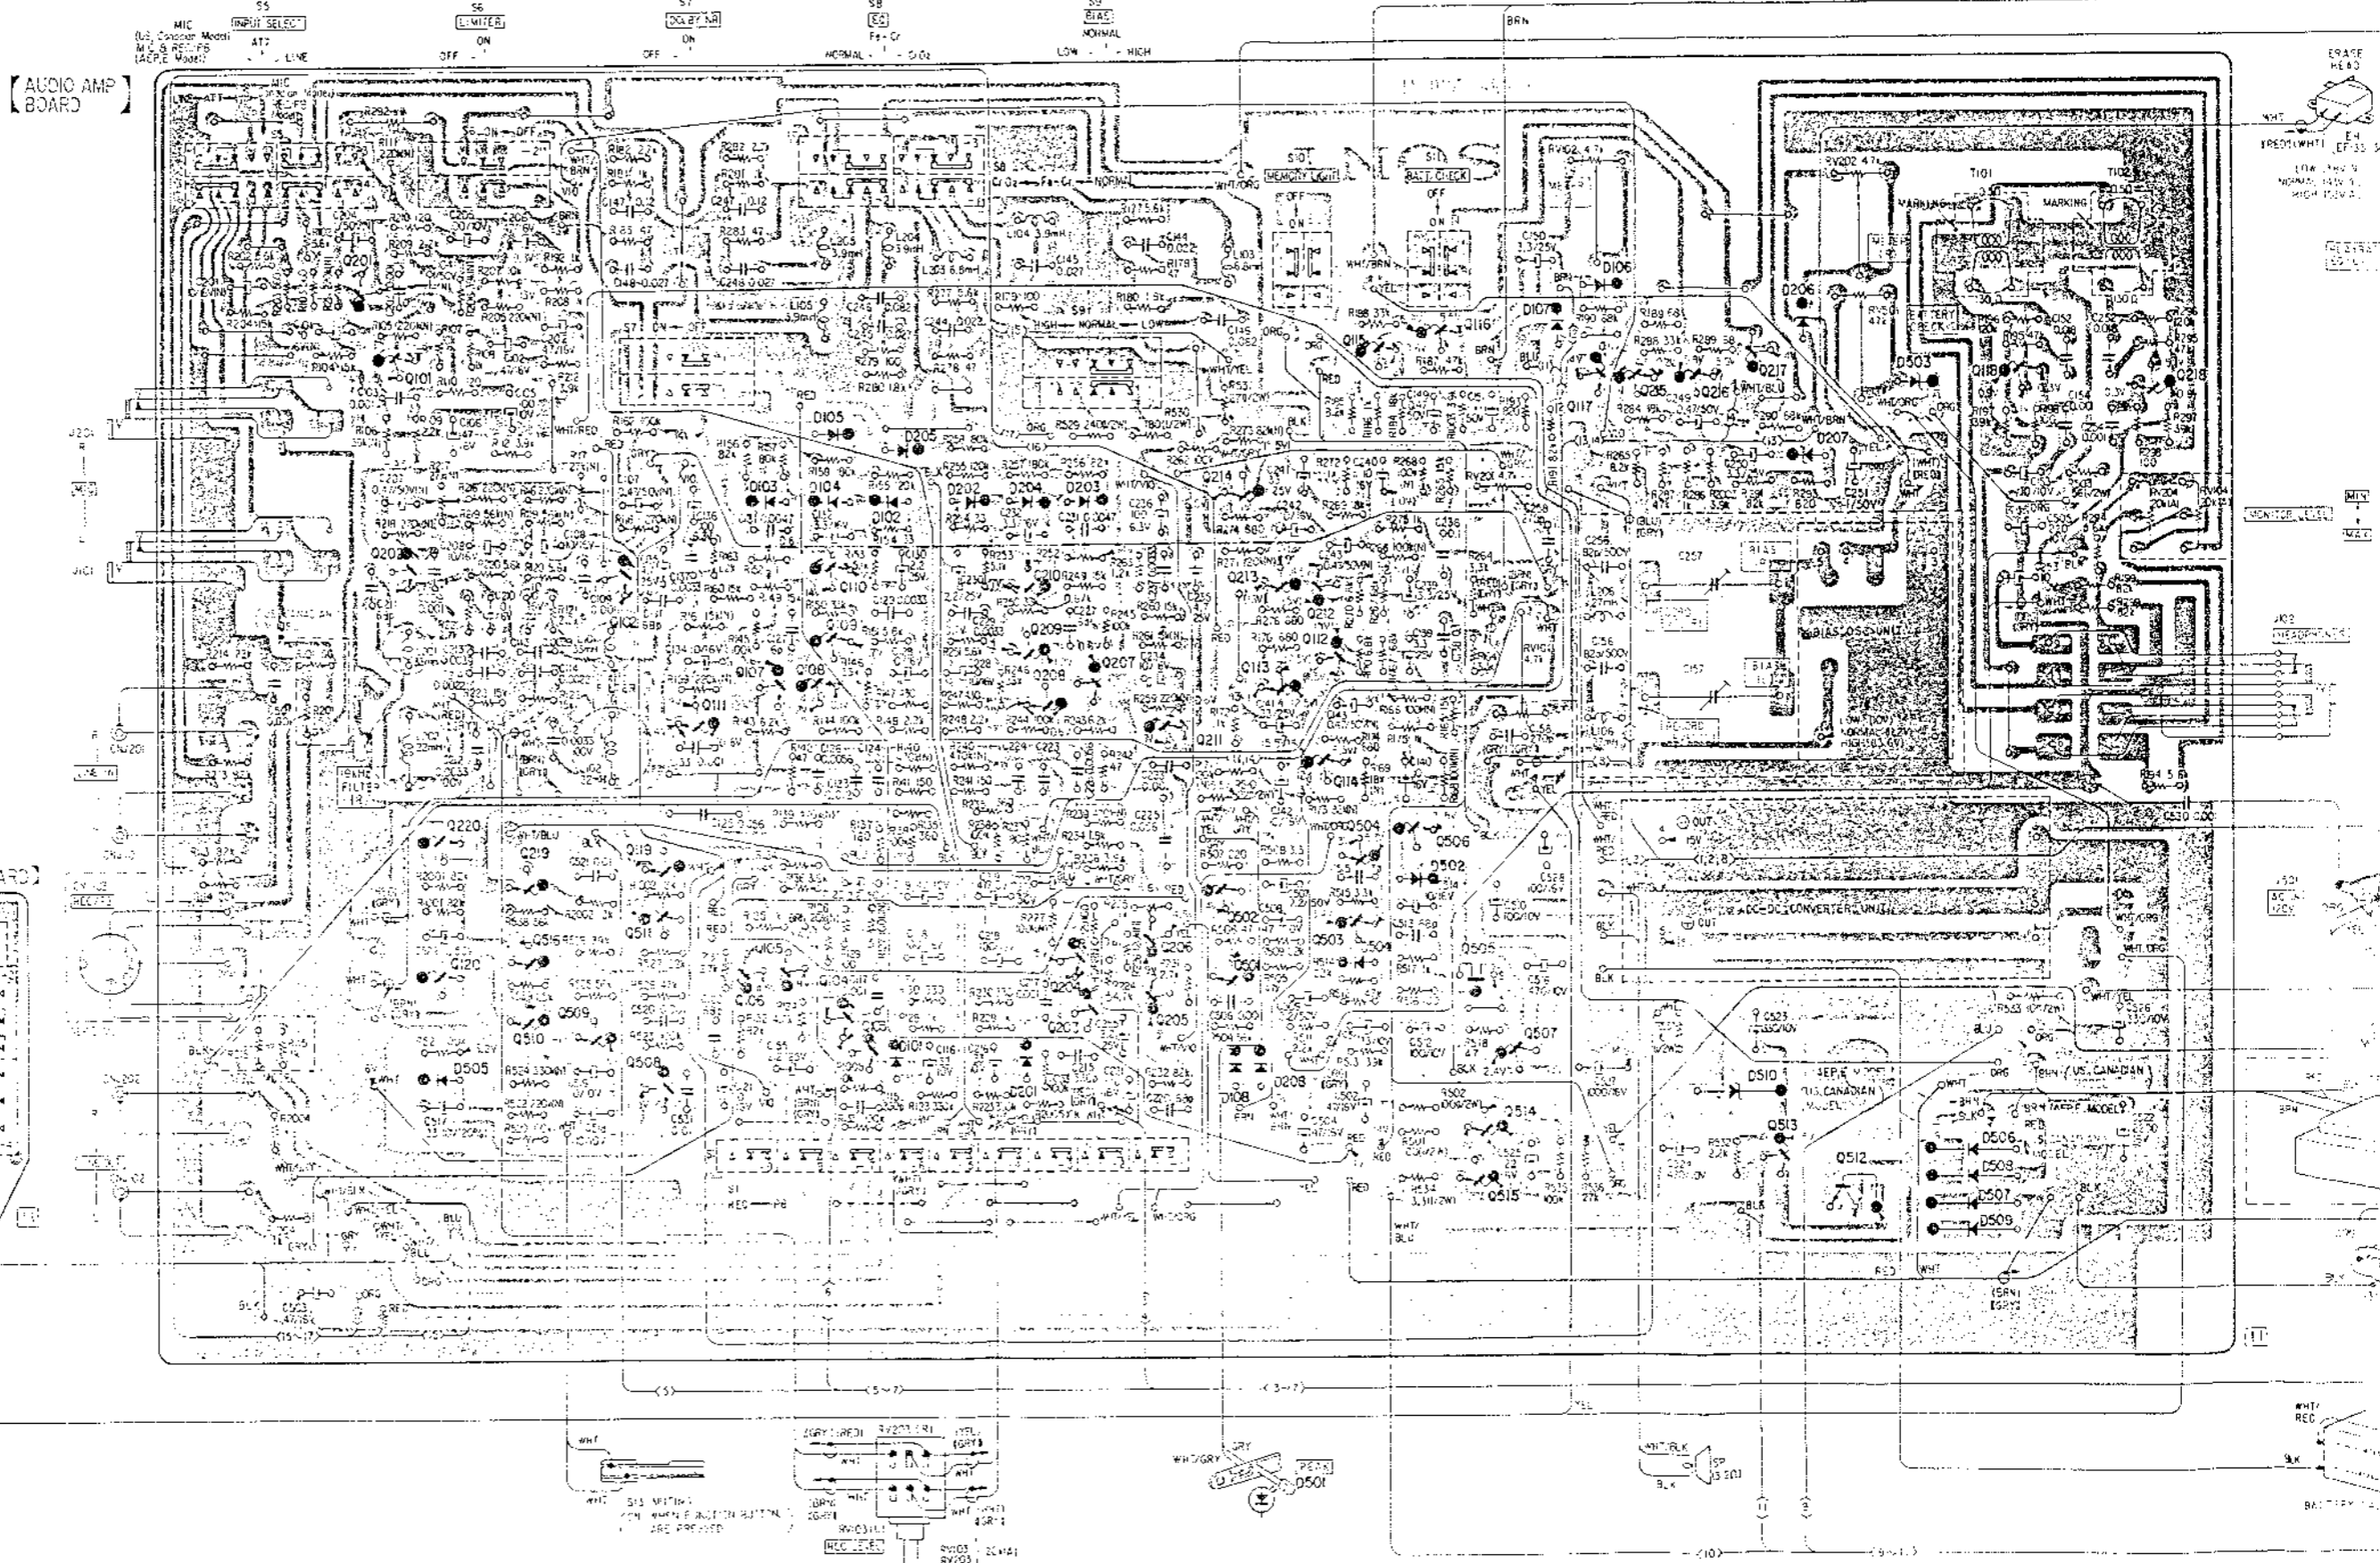






TC-158SD TC-158SD

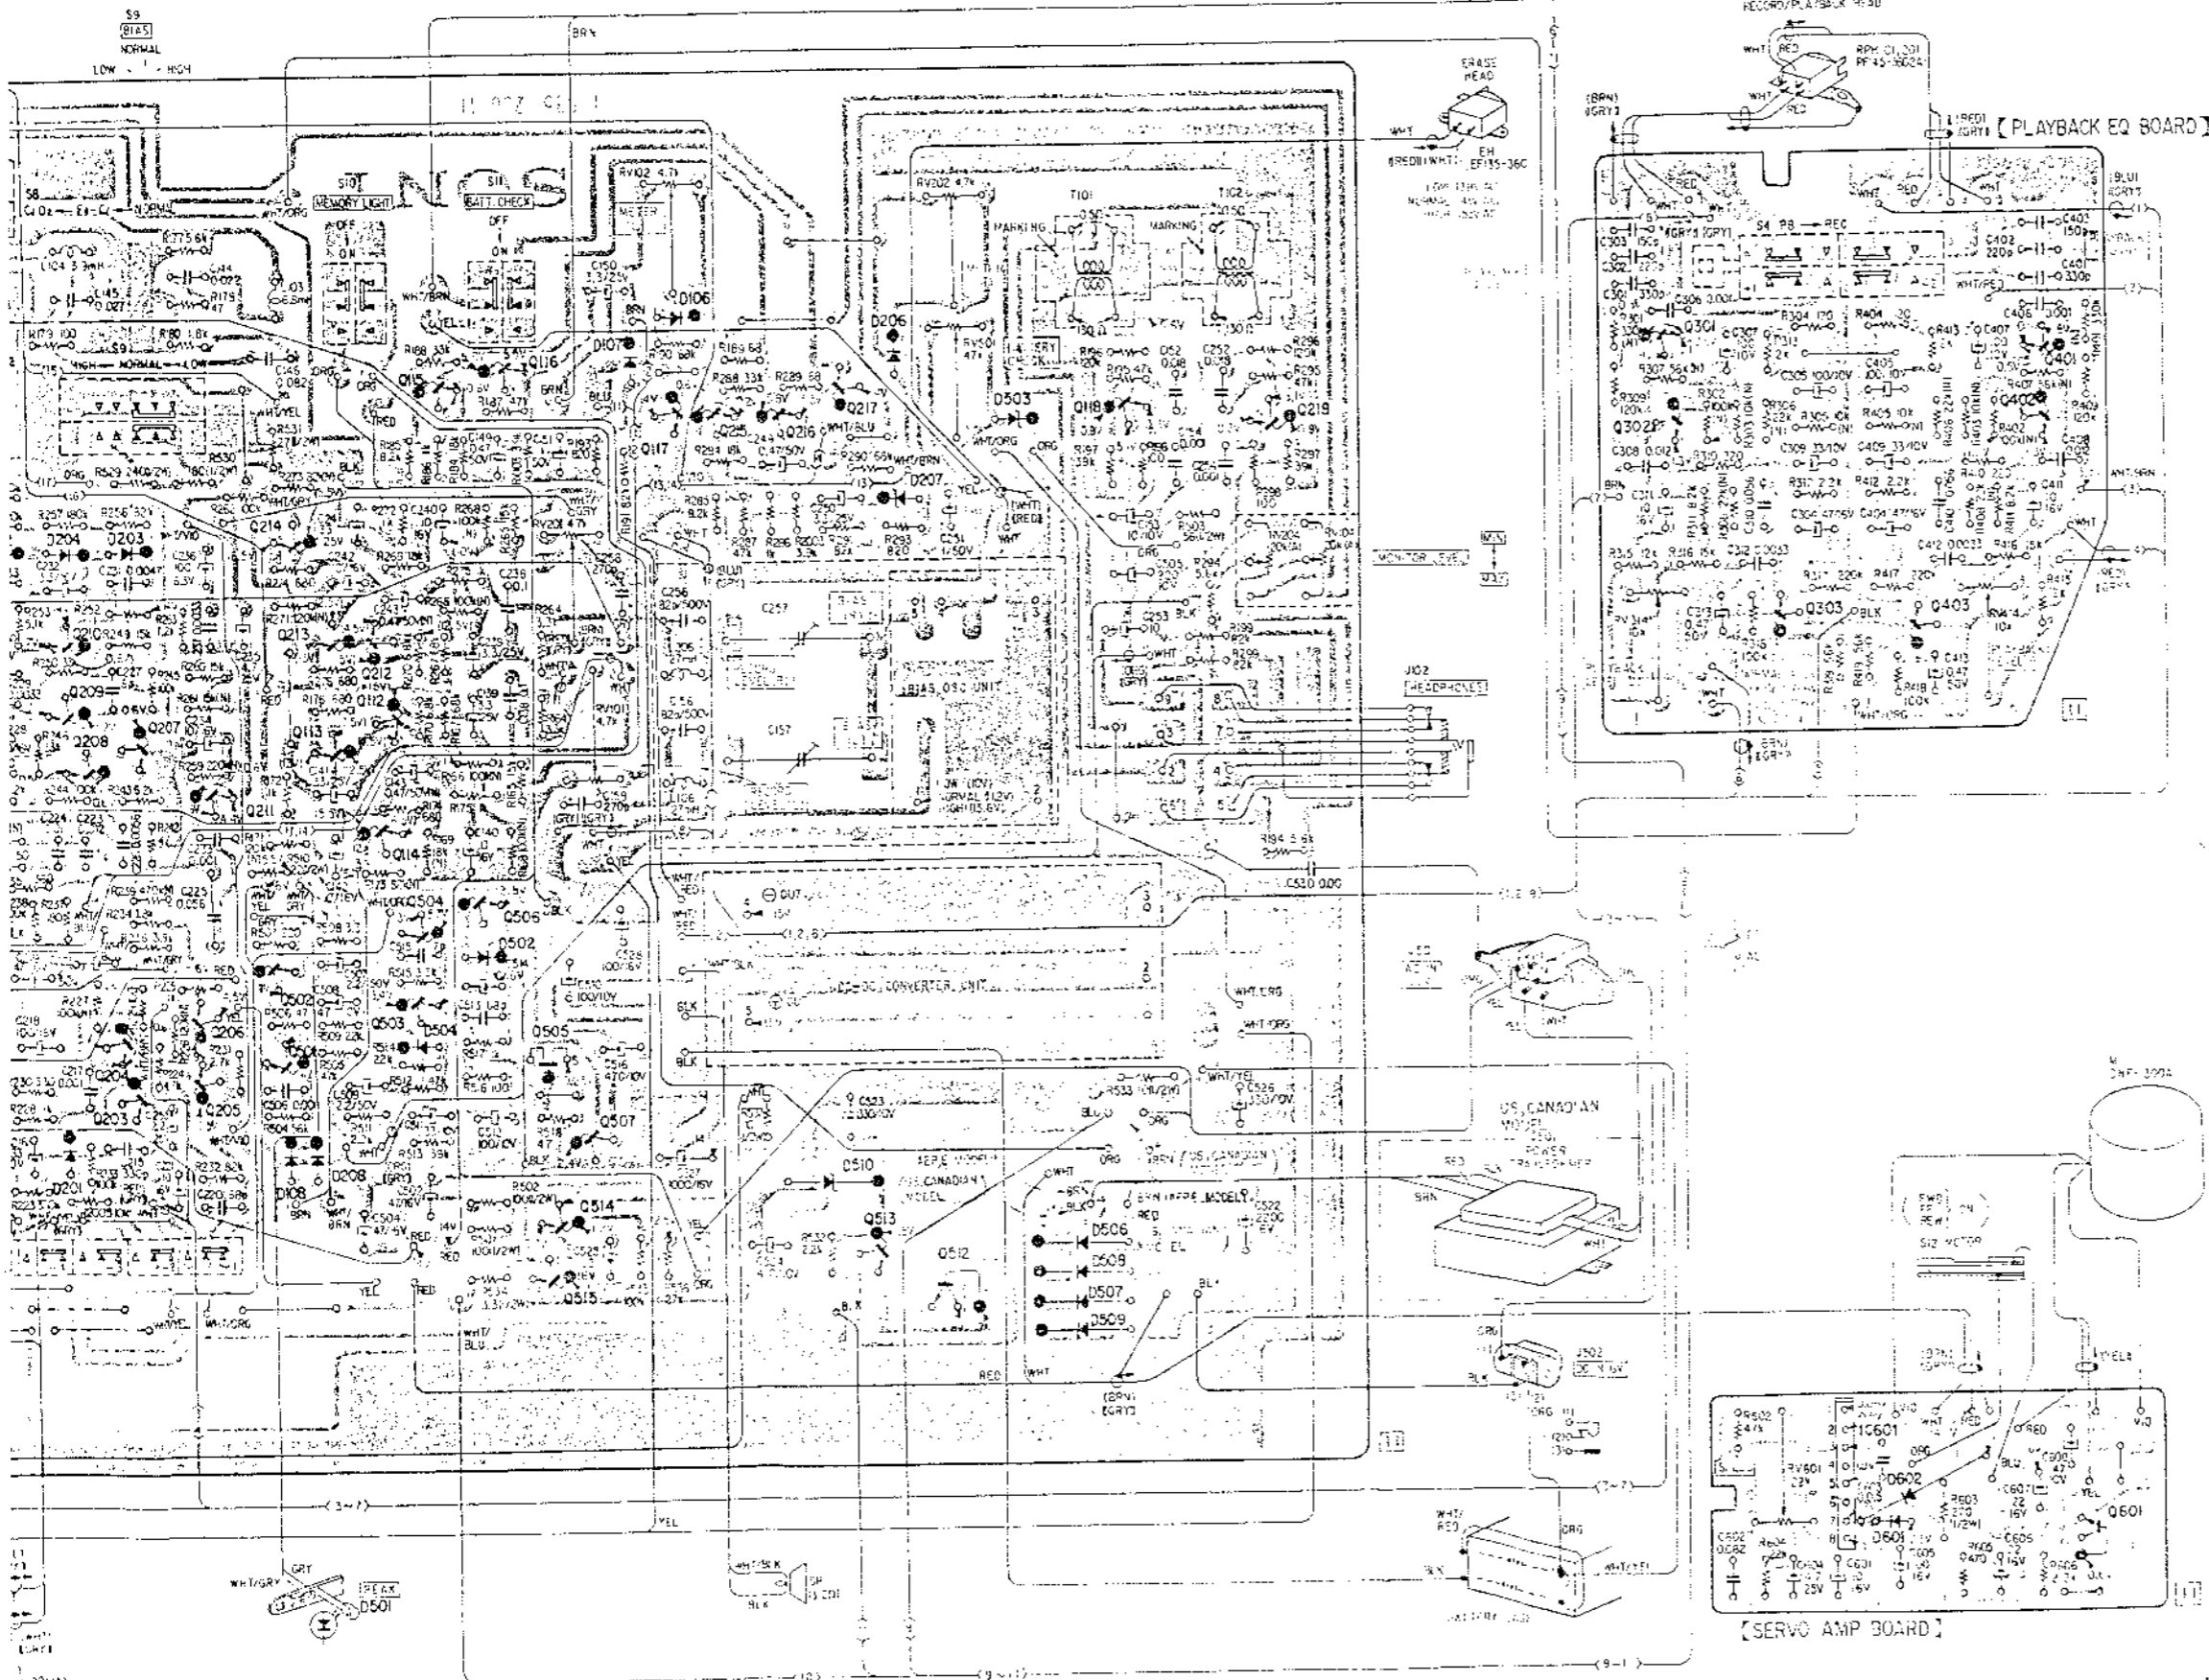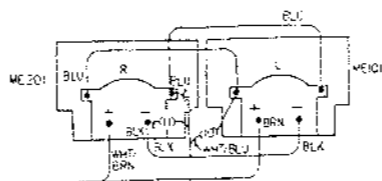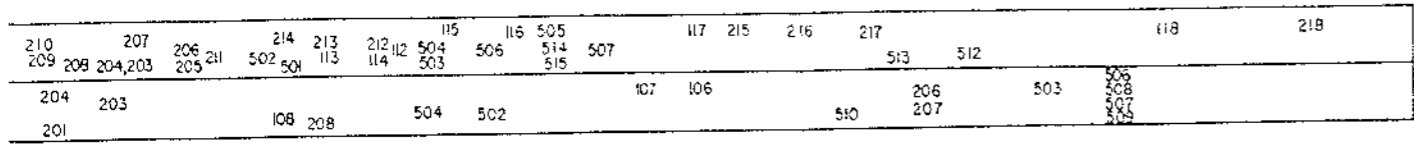


• Switch:


Ref. No.	Switch	Position
S1	RECORD/PLAYBACK	PLAYBACK
S2	AC/DC	DC
S3	TIMING	STOP
S4	RECORD/PLAYBACK	PLAYBACK
S5	INPUT SELECT	LINE
S6	LIMITER	OFF
S7	DOLBY NR	OFF
S8	EQ	NORMAL
S9	BIAS	LOW
S10	MEMORY LIGHT	OFF
S11	BATT CHECK	OFF
S12	MOTOR	OFF
S13	MUTING (ON: When function buttons are pressed)	OFF

Note: • : B+ pattern.  
 • : B- pattern.  
 • DC resistance measurements shown with coils connected on circuit.  
 • Color code of sleeving over the end of the jacket.

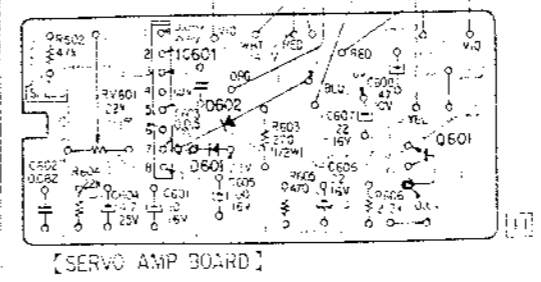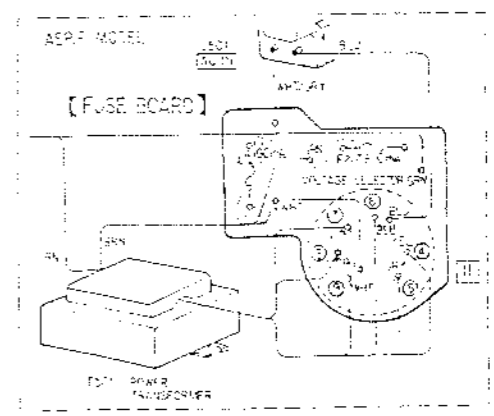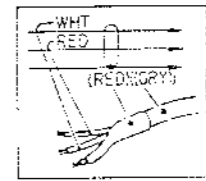


4-3. SCHEMATIC DIAGRAM

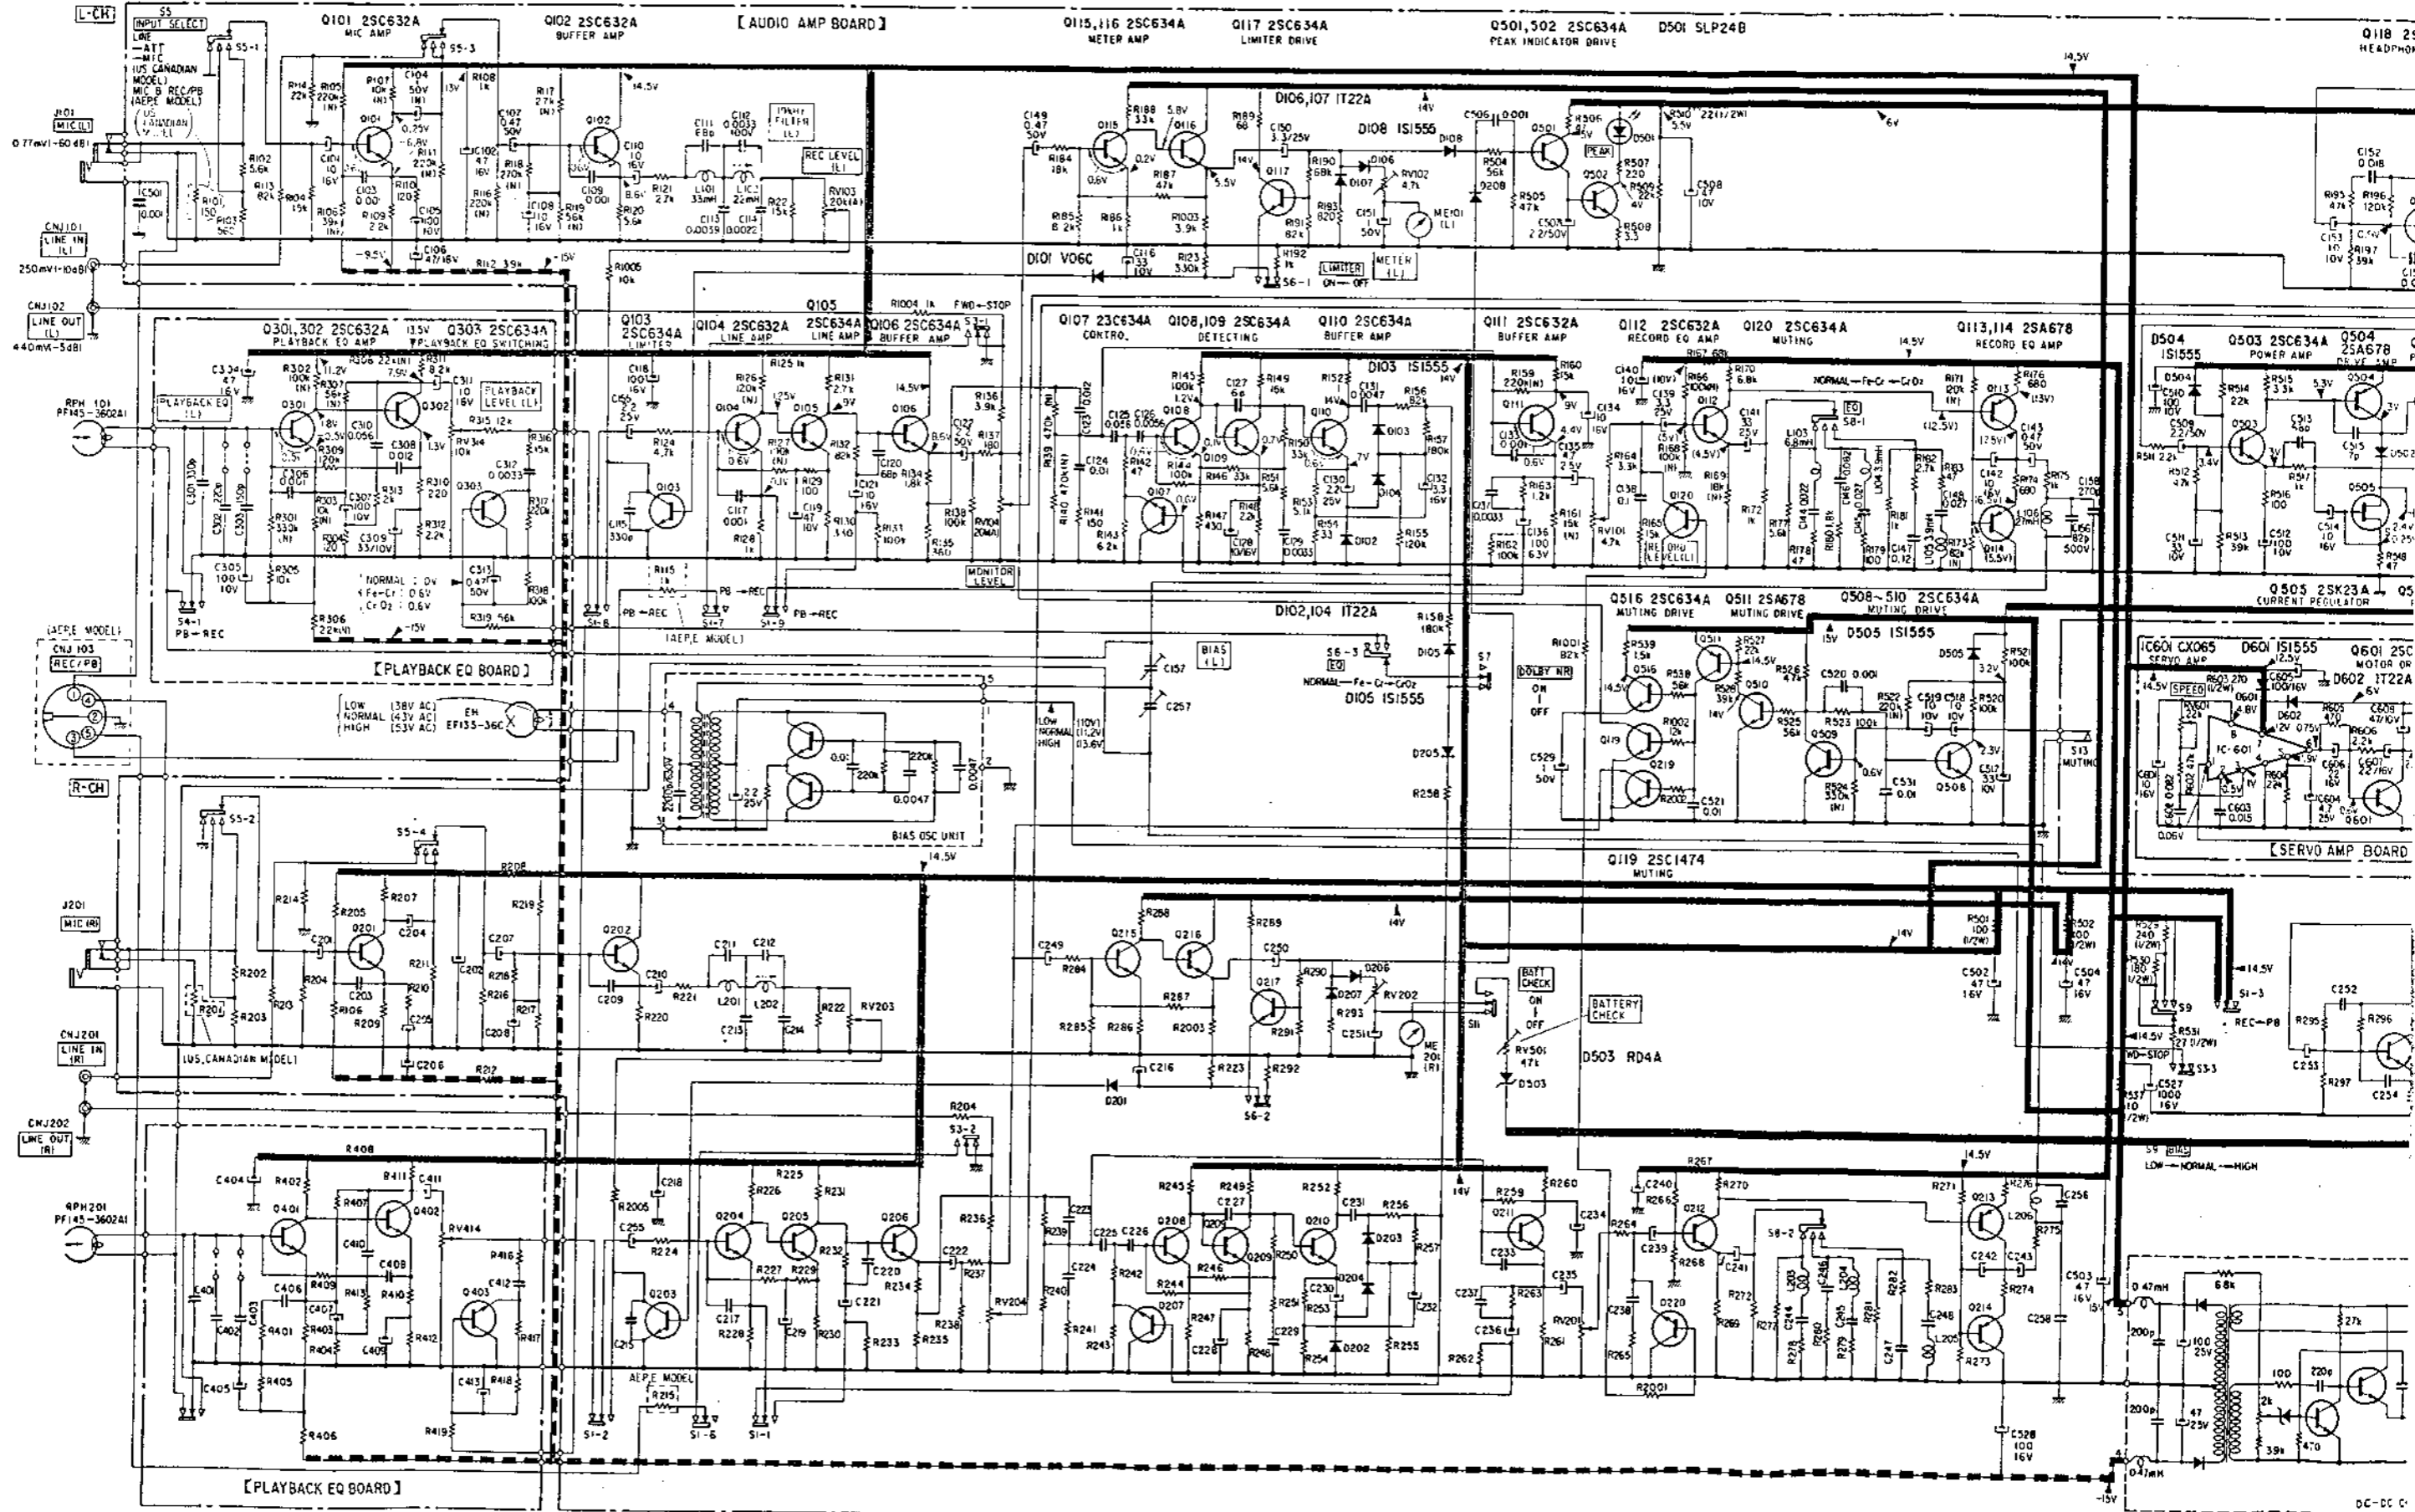

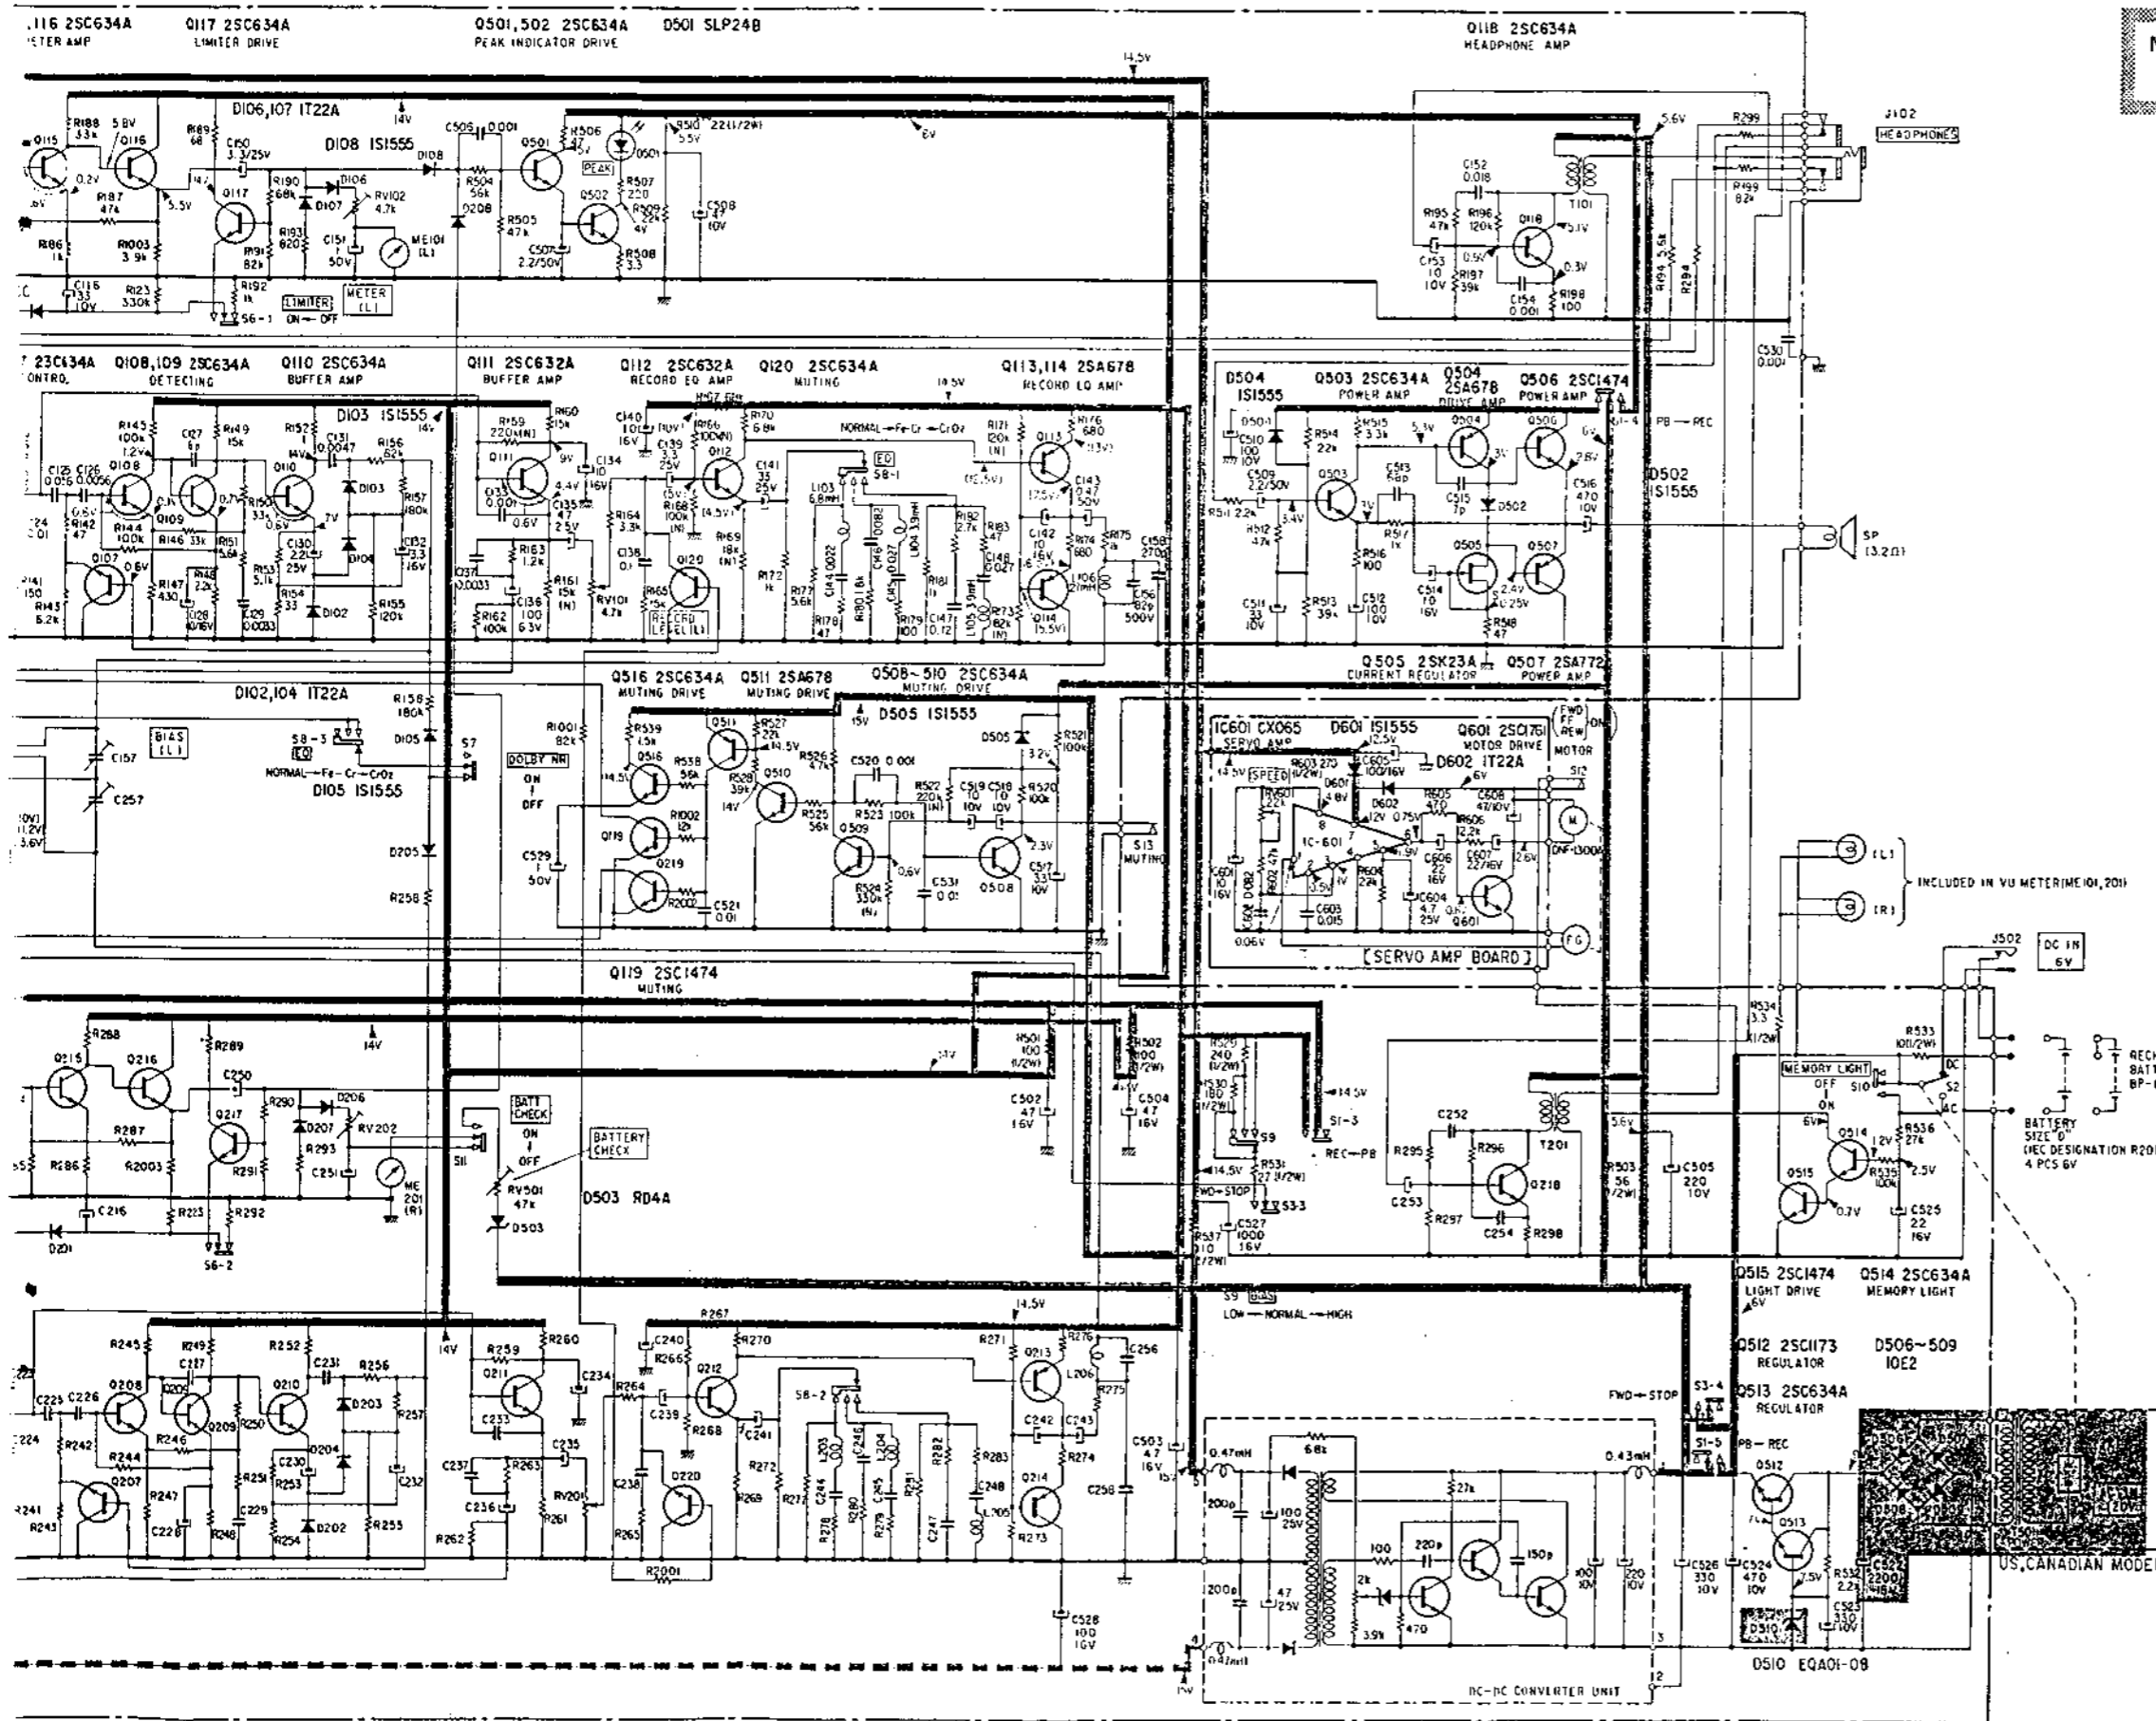


Note: The components identified by shading are critical for safety. Replace only with part number specified.

- Note:
- Components for right channel have the same values as for left channel.
  - All capacitors are in  $\mu\text{F}$  unless otherwise noted.  $\text{pF} = \mu\text{F} / 100$ . 50WV or less are not indicated except for electrolytics.
  - All resistors are in ohms,  $\frac{1}{2}\text{W}$  unless otherwise noted.  $\text{k}\Omega = 1,000\Omega$ ,  $\text{M}\Omega = 1,000\text{k}\Omega$
  - (N) : low-noise capacitor and resistor.
  - $\Delta$  : internal component.
  - — : B+ bus.
  - □ : panel designation.
  - □ : adjustment for repair.
  - $\text{---}$  : chassis ground.
  - — : B- bus.
  - FF : fast forward
  - PB : playback
  - REC : record
  - FWD : forward
  - REW : rewind
  - Voltages are dc with respect to ground unless otherwise noted.
  - Readings are taken under no-signal conditions with a VOM (20  $\text{k}\Omega/\text{V}$ ).
  - ( ) : RECORD
  - Readings in SERVO AMP BOARD are measured in playback mode.
  - AC voltage readings indicated by in the bias oscillator circuit are taken with a VTVM.
  - Transistor base-emitter voltages are measured on the 2.5V range.
  - Voltage variations may be noted due to normal production tolerances.

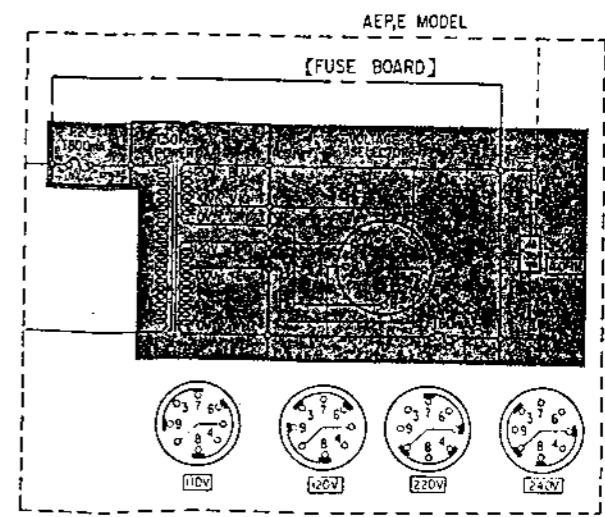

## SECTION 5 EXPLODED VIEWS

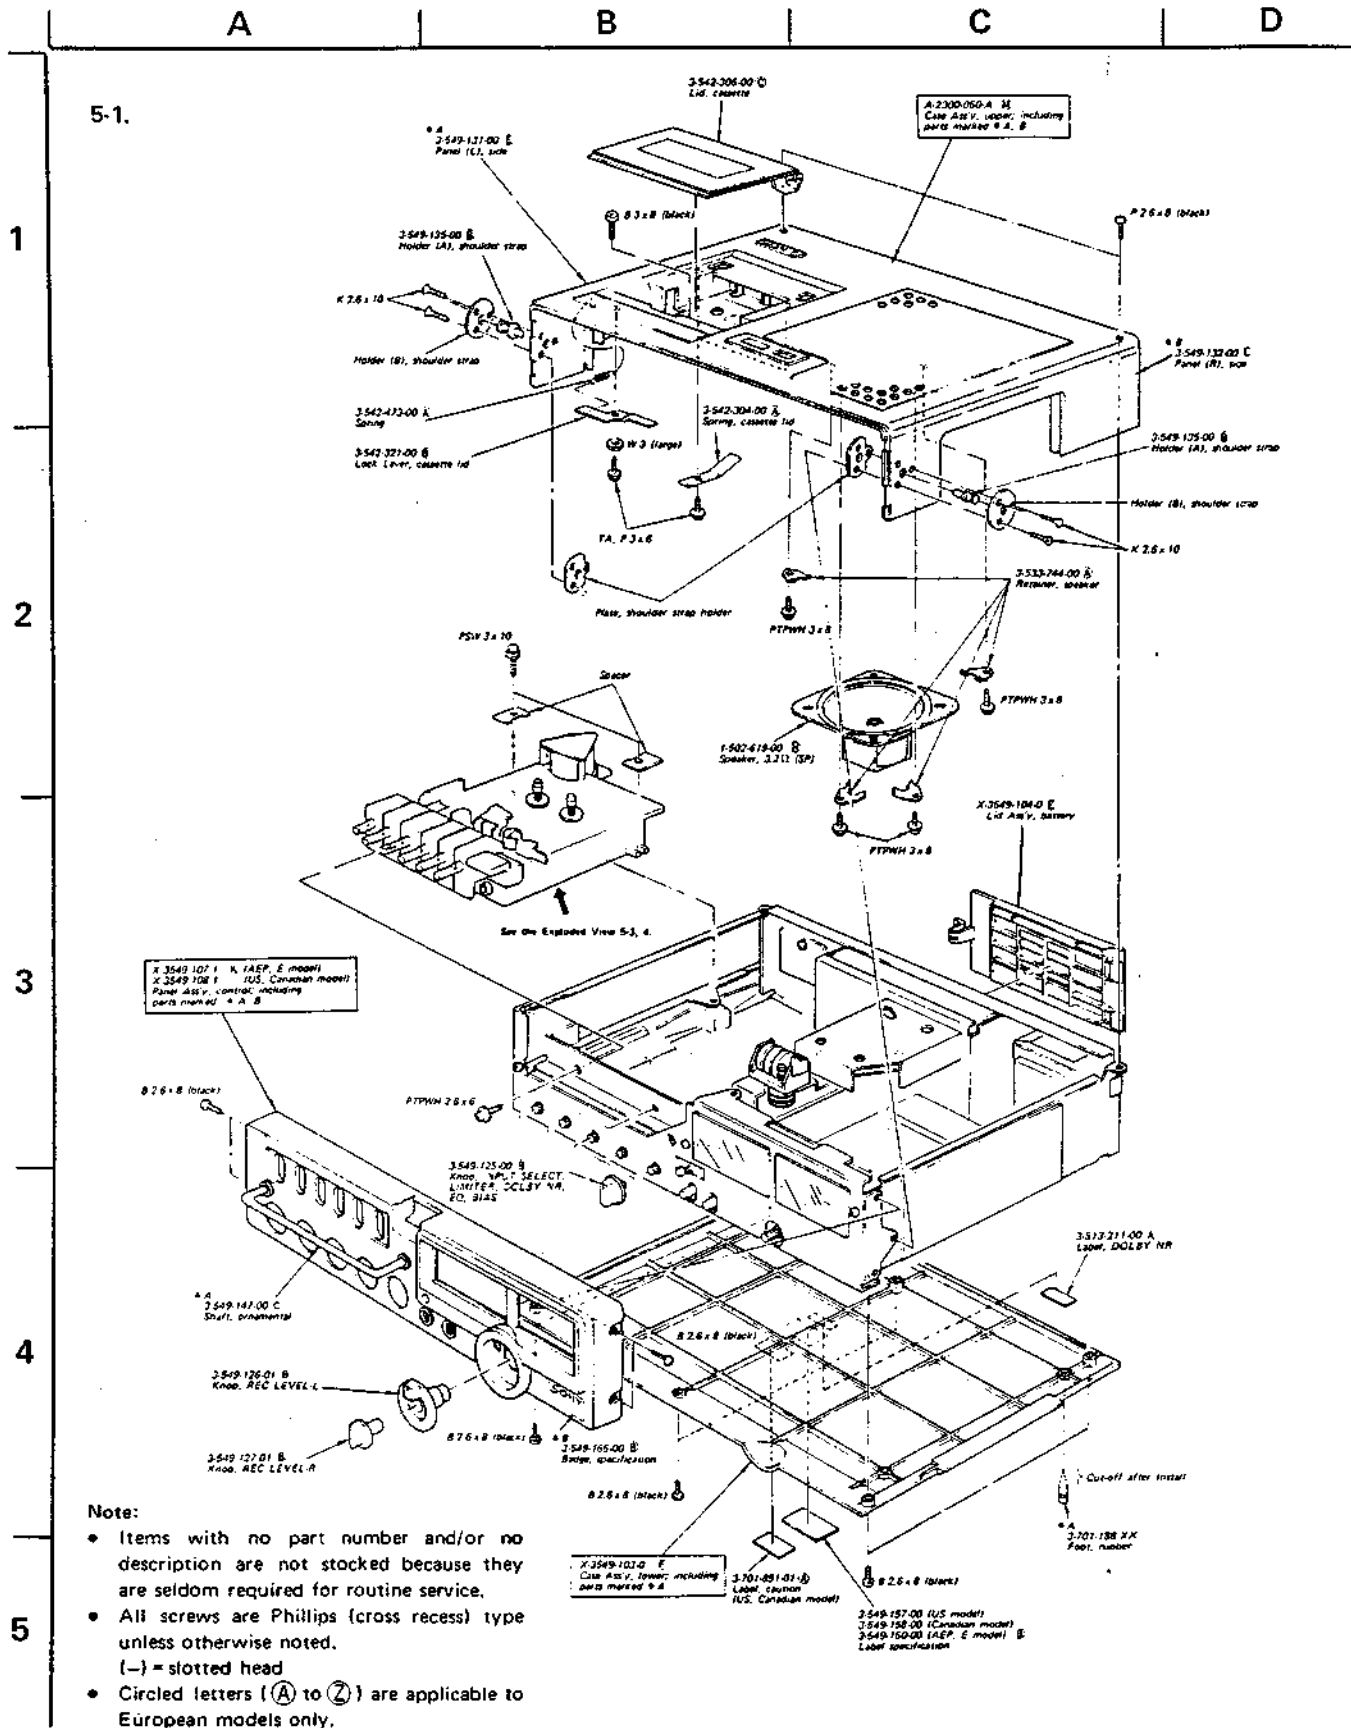

A B C D E

5-2

Note:


- Items with no part number and/or no description are not stocked because they are seldom required for routine service.
- All screws are Phillips (cross recess) type unless otherwise noted.
- Circled letters (A to Z) are applicable to European models only.

1


2

3

4

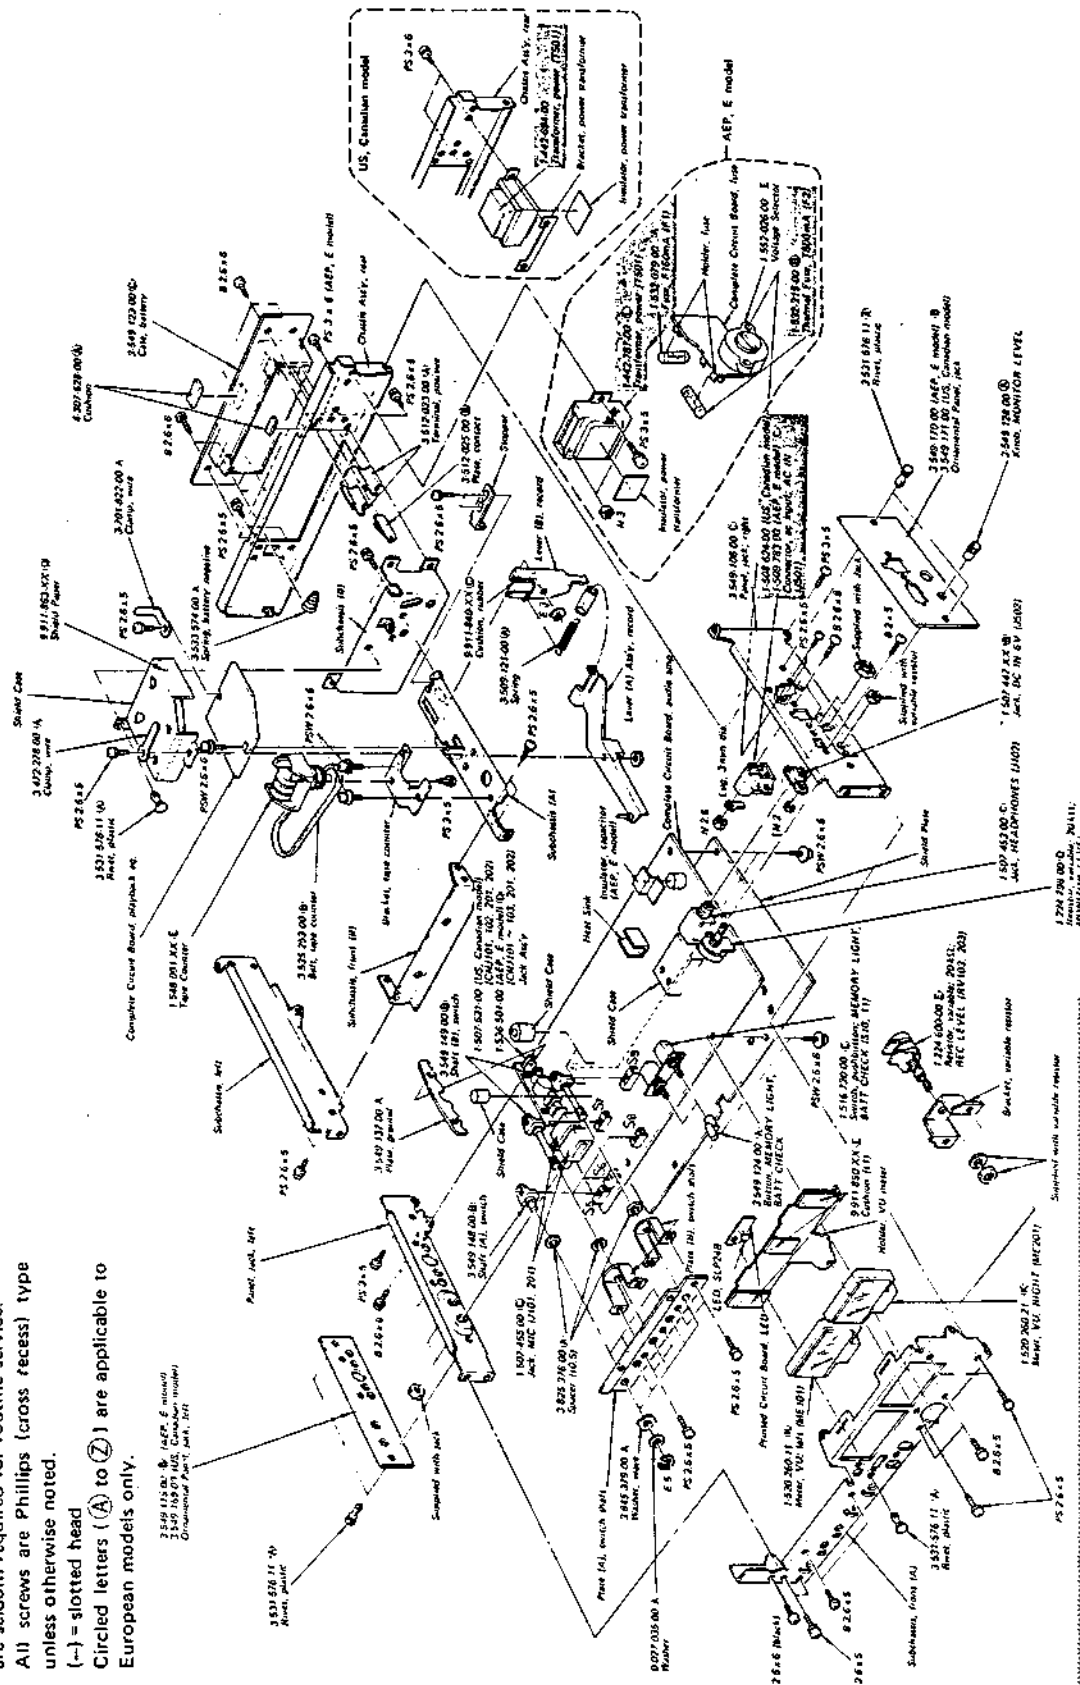


Note: The components identified by shading are critical for safety. Replace only with part number specified.

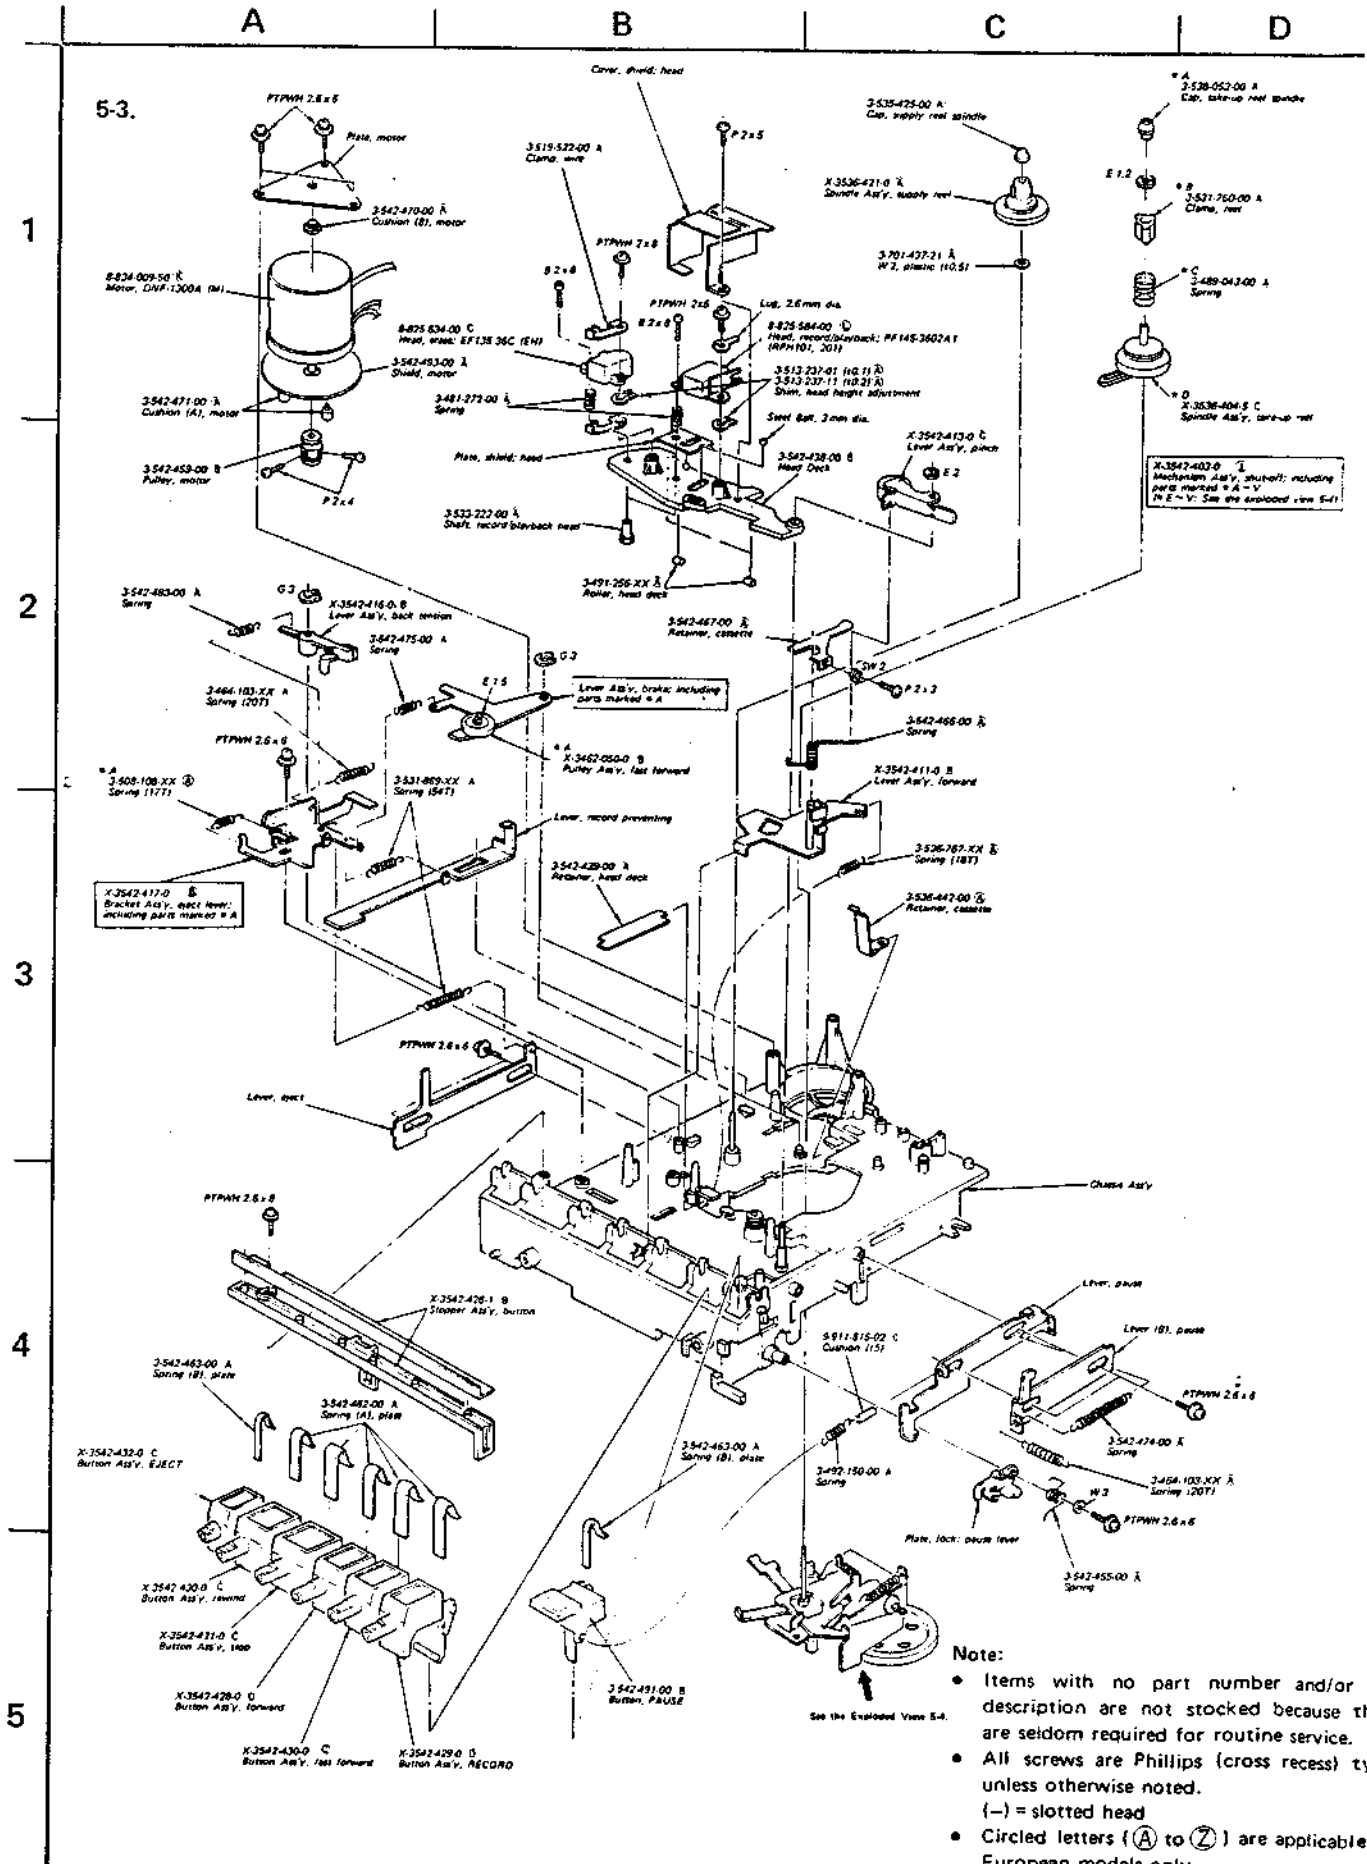

**Note:**

- Items with no part number and/or no description are not stocked because they are seldom required for routine service.
- All screws are Phillips (cross recess) type unless otherwise noted.
- (-) = slotted head
- Circled letters (A) to (Z) are applicable to European models only.
- (DOT) shows the number of coils in spring.

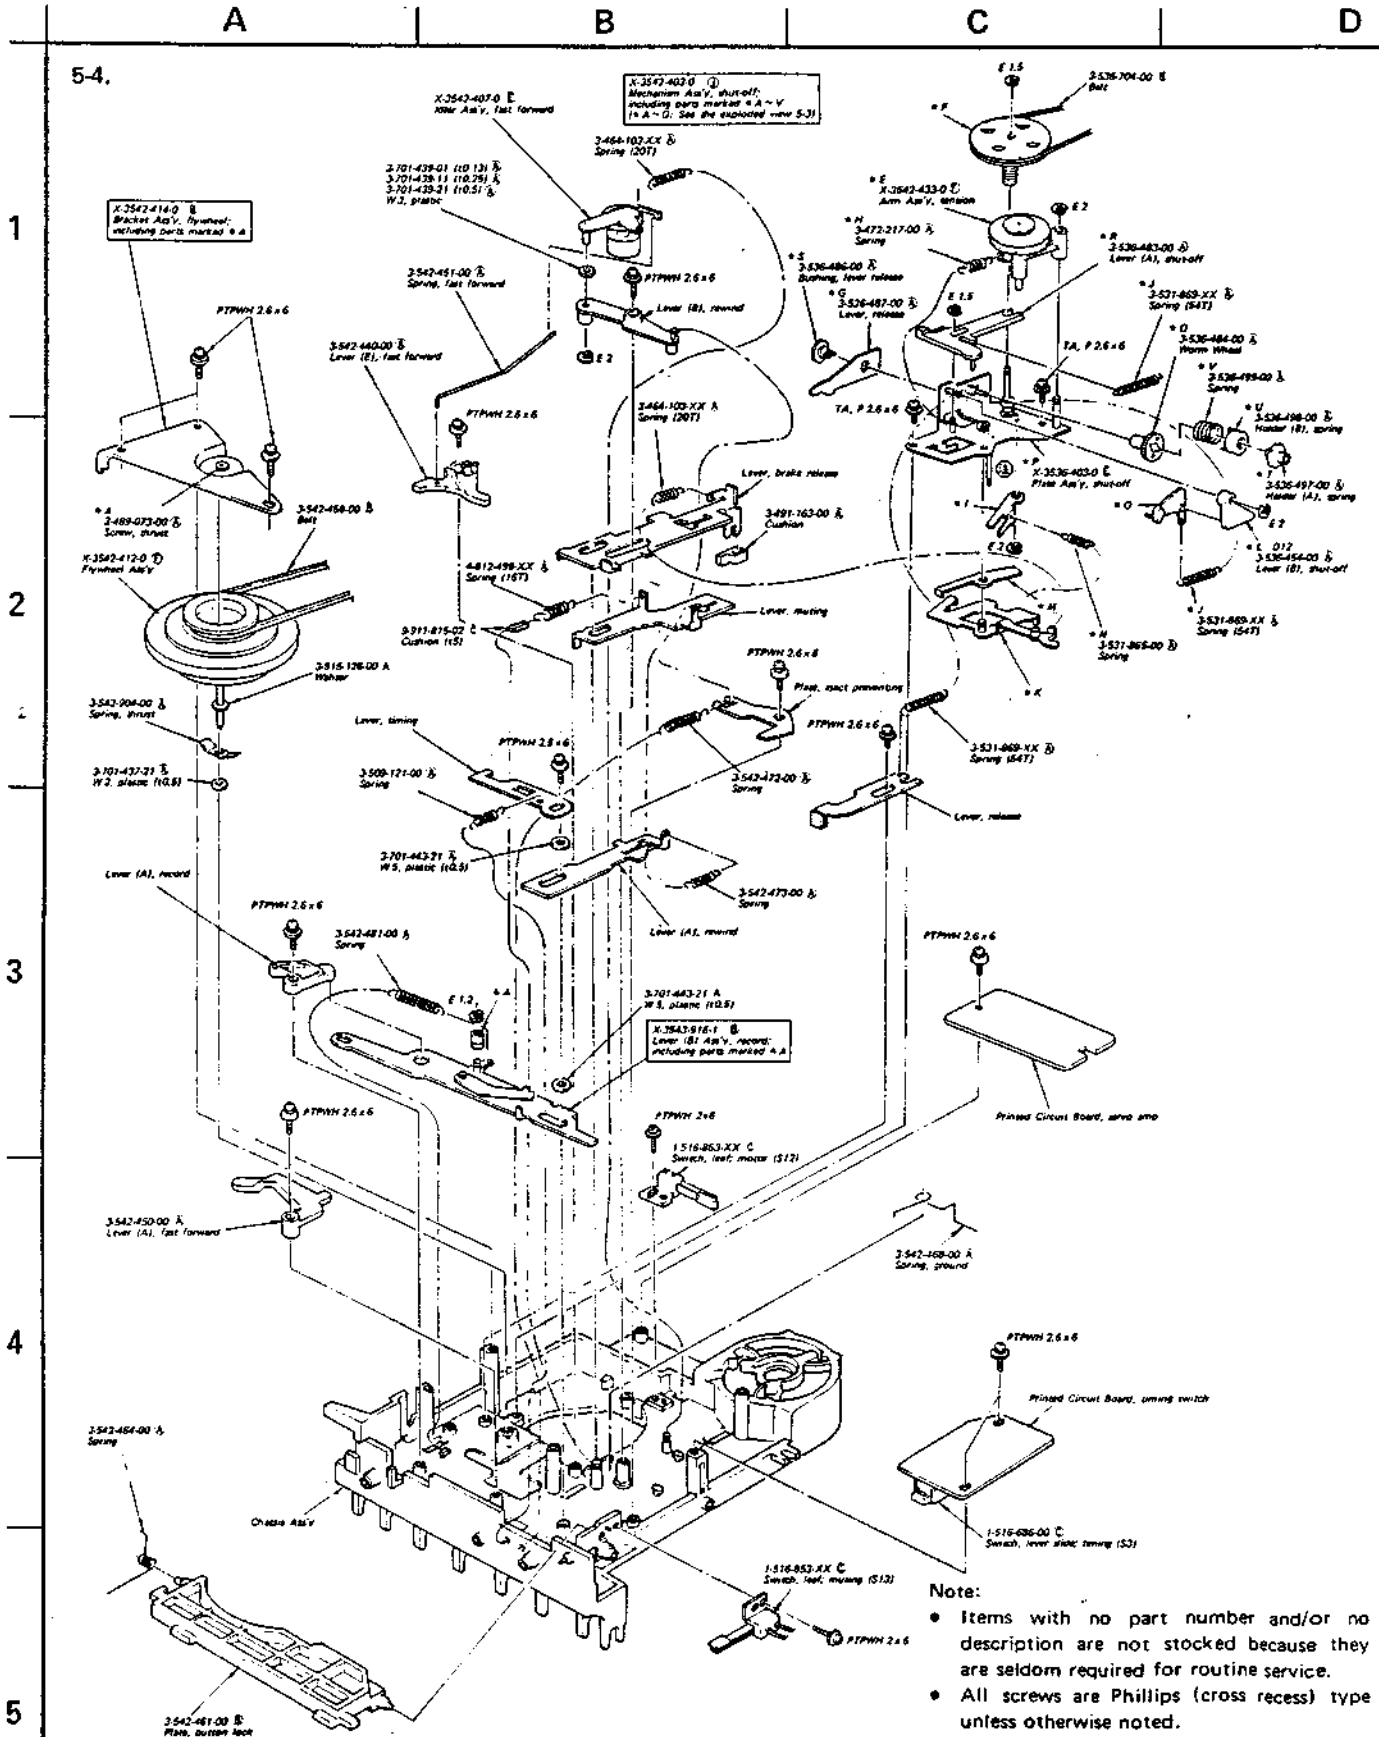

- Note:**
- Items with no part number and/or no description are not stocked because they are seldom required for routine service.
  - All screws are Phillips (cross recess) type unless otherwise noted.
  - (-) = slotted head
  - Circled letters (A to Z) are applicable to European models only.
  - (20T) shows the number of coils in spring.

SECTION 6  
ELECTRICAL PARTS LIST Note: Circled letters (A) to (Z) are applicable to European models only.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
<b>SEMICONDUCTORS</b>					
<b>Transistors</b>					
Q101,201 Q102,202 Q103,203 Q104,204 Q105,205 Q106,206 Q107,207 Q108~110 Q208~210	(B) 2SC632A (B) 2SC634A (B) 2SC632A (B) 2SC634A		D102,202 D103,203 D104,204 D105,205 D106,206 D107,207 D108,208	(B) 1T22A (B) 1S1555 (B) 1T22A (B) 1S1555 (B) 1T22A (B) 1S1555	
Q111,211 Q112,212 Q113,213 Q114,214 Q115~118 Q215~218	(B) 2SC632A (C) 2SA678 (B) 2SC634A		D501 D502 D503 D504,505 D506~509 D510	(C) SLP24B (LED) (B) 1S1555 (B) RD4A (B) 1S1555 (B) 10E2 (B) EOB01-08	
Q119,219 Q120,220	(B) 2SC1474 (B) 2SC634A		D601 D602	(B) 1S1555 (B) 1T22A	
Q301,401 Q302,402 Q303,403 Q501~503	(B) 2SC632A (B) 2SC634A		<b>COILS</b>		
Q504 Q505 Q506 = Q507 Q508~510	(C) 2SA678 (E) 2SK23A-524 (B) 2SC1474 (C) 2SA684 (B) 2SC634A		L101,201 L102,202 L103,203 L104,204 L105,205 L106,206	1-407-879-00 1-407-240-00 1-407-204-XX 1-407-201-XX 1-407-211-XX	(B) 33 mH, microinductor (B) 22 mH, variable inductor (B) 6.8 mH, microinductor (B) 3.9 mH, microinductor (B) 27 mH, microinductor
Q511 Q512 Q513,514 Q515 = Q601 IC601	(C) 2SA678 (C) 2SC1173 (B) 2SC634A (B) 2SC1474 (C) 2SC1760 (F) CX065		<b>TRANSFORMERS</b>		
=> D101,201	(B) V09C		T101,201 T501	1-427-284-00 1-442-694-00 1-442-787-00	(B) Headphone (L) Power (US, Canadian model) (L) Power (AEP, E model)
<b>CAPACITORS</b>					
All capacitors are in $\mu\text{F}$ and electrolytic unless otherwise noted. 50WV or less are not indicated except for electrolytics. $\text{pF} = \mu\mu\text{F}$					
			C101 C102 C103 C104	1-121-916-11 1-121-409-11 1-102-074-11 1-121-912-11	(B) 10 16V (A) 47 16V (A) 0.001 ceramic (A) 1 50V

=> : Due to standardization, interchangeable replacements may be substituted for parts specified in the diagrams.

**Note: The components identified by shading are critical for safety. Replace only with part number specified.**



Note: Circled letters (A to Z) are applicable to European models only.

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	
C105	1-121-414-11	(A) 100	10V
C106	1-121-409-11	(A) 47	16V
C107	1-121-911-11	(B) 0.47	50V
C108	1-121-651-11	(A) 10	16V
C109	1-102-074-11	(A) 0.001	ceramic
C110	1-131-199-11	(B) 10	16V tantalum
C111	1-101-888-11	(A) 68p	ceramic
C112	1-129-794-11	(B) 0.0033	100V polyethylene
C113	1-108-569-12	(B) 0.0039	mylar
C114	1-108-563-12	(B) 0.0022	
C115	1-102-820-11	(A) 330p	ceramic
C116	1-121-402-11	(A) 33	10V
C117	1-102-074-11	(A) 0.001	ceramic
C118	1-121-415-11	(A) 100	16V
C119	1-121-352-11	(A) 47	10V
C120	1-101-888-11	(A) 68p	ceramic
C121	1-121-651-11	(A) 10	16V
C122	1-121-450-11	(I) 2.2	50V
C123	1-108-581-12	(B) 0.012	mylar
C124	1-108-579-12	(A) 0.01	mylar
C125	1-108-597-12	(B) 0.056	mylar
C126	1-108-573-12	(A) 0.0056	mylar
C127	1-107-103-11	(A) 6p	silvered mica
C128	1-121-651-11	(A) 10	16V
C129	1-108-567-12	(A) 0.0033	mylar
C130	1-131-205-11	(B) 2.2	25V tantalum
C131	1-108-234-12	(A) 0.0047	mylar
C132	1-131-197-11	(B) 3.3	16V tantalum
C133	1-102-074-11	(A) 0.001	ceramic
C134	1-121-651-11	(A) 10	16V
C135	1-121-395-11	(A) 4.7	25V
C136	1-121-413-11	(A) 100	6.3V
C137	1-108-232-12	(A) 0.0033	mylar
C138	1-108-251-12	(A) 0.1	mylar
C139	1-121-392-11	(A) 3.3	25V
C140	1-121-651-11	(A) 10	16V
C141	1-121-404-11	(A) 3.3	25V
C142	1-121-651-11	(A) 10	16V
C143	1-121-911-11	(B) 0.47	50V
C144	1-108-587-12	(B) 0.022	mylar
C145	1-108-589-12	(B) 0.027	mylar

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	
C146	1-108-601-12	(B) 0.082	mylar
C147	1-108-605-12	(B) 0.12	mylar
C148	1-108-589-12	(B) 0.027	mylar
C149	1-121-726-11	(A) 0.47	50V
C150	1-121-392-11	(A) 3.3	25V
C151	1-121-391-11	(A) 1	50V
C152	1-108-358-12	(A) 0.018	mylar
C153	1-121-469-11	(A) 10	10V
C154	1-102-074-11	(A) 0.001	ceramic
C155	1-131-205-11	(B) 2.2	25V tantalum
C156	1-107-037-11	(A) 82p	500V silvered mica
C157	1-141-069-XX	(B) Trimmer	
C158	1-102-111-11	(A) 270p	ceramic
C201	1-121-916-11	(B) 10	16V
C202	1-121-409-11	(A) 47	16V
C203	1-102-074-11	(A) 0.001	ceramic
C204	1-121-912-11	(A) 1	50V
C205	1-121-414-11	(A) 100	10V
C206	1-121-409-11	(A) 47	16V
C207	1-121-911-11	(B) 0.47	50V
C208	1-121-651-11	(A) 10	16V
C209	1-102-074-11	(A) 0.001	ceramic
C210	1-131-199-11	(B) 10	16V tantalum
C211	1-101-888-11	(A) 68p	ceramic
C212	1-129-794-11	(B) 0.0033	100V polyethylene
C213	1-108-569-12	(B) 0.0039	mylar
C214	1-108-563-12	(B) 0.0022	mylar
C215	1-102-820-11	(A) 330p	ceramic
C216	1-121-402-11	(A) 33	10V
C217	1-102-074-11	(A) 0.001	ceramic
C218	1-121-415-11	(A) 100	16V
C219	1-121-352-11	(I) 47	10V
C220	1-101-888-11	(A) 68p	ceramic
C221	1-121-651-11	(A) 10	16V
C222	1-121-450-11	(I) 2.2	50V
C223	1-108-581-12	(B) 0.012	mylar
C224	1-108-579-12	(A) 0.01	mylar
C225	1-108-597-12	(B) 0.056	mylar
C226	1-108-573-12	(A) 0.0056	mylar
C227	1-107-103-11	(A) 6p	silvered mica

Note: Circled letters (A to Z) are applicable to European models only.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
C228	1-121-651-11	(A) 10 16V	C311	1-131-199-11	(B) 10 16V tantalum
C229	1-108-567-12	(A) 0.0033 mylar	C312	1-108-232-12	(A) 0.0033 mylar
C230	1-131-205-11	(B) 2.2 25V tantalum	C313	1-121-726-11	(A) 0.47 50V
C231	1-108-234-12	(A) 0.0047 mylar	C401	1-102-112-11	(A) 330p ceramic
C232	1-131-197-11	(B) 3.3 16V tantalum	C402	1-102-110-11	(A) 220p ceramic
C233	1-102-074-11	(A) 0.001 ceramic	C403	1-102-108-11	(A) 150p ceramic
C234	1-121-651-11	(A) 10 16V	C404	1-121-409-11	(A) 47 16V
C235	1-121-395-11	(A) 4.7 25V	C405	1-121-414-11	(A) 100 10V
C236	1-121-413-11	(A) 100 6.3V	C406	1-102-074-11	(A) 0.001 ceramic
C237	1-108-232-12	(A) 0.0033 mylar	C407	1-121-414-11	(A) 100 10V
C238	1-108-251-12	(B) 0.1 mylar	C408	1-108-357-12	(A) 0.012 mylar
C239	1-121-392-11	(A) 3.3 25V	C409	1-121-402-11	(A) 33 10V
C240	1-121-651-11	(A) 10 16V	C410	1-108-597-12	(B) 0.056 mylar
C241	1-121-404-11	(A) 33 25V	C411	1-131-199-11	(B) 10 16V tantalum
C242	1-121-651-11	(A) 10 16V	C412	1-108-232-12	(A) 0.0033 mylar
C243	1-121-911-11	(B) 0.47 50V	C413	1-121-726-11	(A) 0.47 50V
C244	1-108-587-12	(B) 0.022 mylar	C501	1-102-074-11	(A) 0.001 ceramic
C245	1-108-589-12	(B) 0.027 mylar	C502-504	1-121-409-11	(A) 47 16V
C246	1-108-601-12	(B) 0.082 mylar	C505	1-121-420-11	(A) 220 10V
C247	1-108-605-12	(B) 0.12 mylar	C506	1-102-074-11	(A) 0.001 ceramic
C248	1-108-589-12	(B) 0.027 mylar	C507	1-121-450-11	(I) 2.2 50V
C249	1-121-726-11	(A) 0.47 50V	C508	1-121-352-11	(I) 47 10V
C250	1-121-392-11	(A) 3.3 25V	C509	1-121-450-11	(I) 2.2 50V
C251	1-121-391-11	(A) 1 50V	C510	1-121-414-11	(A) 100 10V
C252	1-108-358-12	(A) 0.018 mylar	C511	1-121-402-11	(A) 33 10V
C253	1-121-469-11	(A) 10 10V	C512	1-121-414-11	(A) 100 10V
C254	1-102-074-11	(A) 0.001 ceramic	C513	1-107-081-11	(A) 68p silvered mica
C255	1-131-205-11	(B) 2.2 25V tantalum	C514	1-121-651-11	(A) 10 16V
C256	1-107-037-11	(A) 82p 500V silvered mica	C515	1-107-104-11	(A) 7p silvered mica
C257	1-141-069-XX	(B) Trimmer	C516	1-121-425-11	(B) 470 10V
C258	1-102-111-11	(A) 270p ceramic	C517	1-121-974-11	(B) 33 10V
C301	1-102-112-11	(A) 330p ceramic	C518,519	1-121-469-11	(A) 10 10V
C302	1-102-110-11	(A) 220p ceramic	C520	1-102-074-11	(A) 0.001 ceramic
C303	1-102-108-11	(A) 150p ceramic	C521	1-108-239-12	(A) 0.01 mylar
C304	1-121-409-11	(A) 47 16V	<del>C522 1-121-660-11 (B) 2200 16V</del>		
C305	1-121-414-11	(A) 100 10V	C523	1-121-805-11	(B) 330 10V
C306	1-102-074-11	(A) 0.001 ceramic	C524	1-121-425-11	(B) 470 10V
C307	1-121-414-11	(A) 100 10V	C525	1-121-479-11	(A) 22 16V
C308	1-108-357-12	(A) 0.012 mylar	C526	1-121-805-11	(B) 330 10V
C309	1-121-402-11	(A) 33 10V	C527	1-121-245-11	(B) 1000 16V
C310	1-108-597-12	(B) 0.056 mylar			

Note: The components identified by shading are critical for safety. Replace only with part number specified.

Note: Circled letters (A to Z) are applicable to European models only.

Ref. No.	Part No.	Description
C528	1-121-415-11 (A) 100	16V
C529	1-121-391-11 (A) 1	50V
C530	1-102-074-11 (A) 0.001	ceramic
C531	1-108-239-12 (A) 0.01	mylar
C601	1-121-651-11 (A) 10	16V
C602	1-108-550-12 (B) 0.082	mylar
C603	1-108-583-12 (B) 0.015	mylar
C604	1-121-961-11 (A) 4.7	25V
C605	1-121-415-11 (A) 100	16V
C606,607	1-121-990-11 (A) 22	16V
C608	1-121-352-11 (I) 47	10V

**RESISTORS**

All resistors are in ohms. Common 1/4W carbon resistors are omitted. Check schematic diagram for values.

R501,502	1-202-549-11 (A) 100	1/2W composition
R503	1-202-543-11 (A) 56	1/2W composition
R510	1-202-533-11 (A) 22	1/2W composition
R529	1-202-558-11 (A) 240	1/2W composition
R530	1-202-555-11 (A) 180	1/2W composition
R531	1-202-535-11 (A) 27	1/2W composition
R533	1-202-525-11 (A) 10	1/2W composition
R534	1-202-513-11 (A) 3.3	1/2W composition
R537	1-202-525-11 (A) 10	1/2W composition
RV101,201	1-224-644-XX (B) 4.7 kΩ, adjustable	
RV102,202		
RV103,203	1-224-600-00 (E) 20 kΩ, variable; REC LEVEL	
RV104,204	1-224-798-00 (D) 20 kΩ, variable; MONITOR LEVEL	
RV314,414	1-224-645-XX (B) 10 kΩ, adjustable	
RV501	1-224-647-XX (B) 47 kΩ, adjustable	
RV601	1-224-646-XX (B) 22 kΩ, adjustable	

**SWITCHES**

S1	1-514-976-XX (E) Slide, record/playback
----	---

Ref. No.	Part No.	Description
S3,4	1-516-686-00 (C) Lever Slide, timing; record/playback	
S5	1-516-963-00 (C) Lever Slide, INPUT SELECT	
S6,7	1-516-961-00 (B) Lever Slide, LIMITER, DOLBY NR	
S8	1-516-963-00 (C) Lever Slide, EQ	
S9	1-516-995-00 (C) Lever Slide, BIAS	
S10,11	1-516-720-00 (E) Pushbutton, MEMORY LIGHT, BATT CHECK	
S12,13	1-516-853-XX (C) Leaf, motor; muting	

**JACKS & CONNECTORS**

J101,201	1-507-455-00 (C) Jack, MIC
J102	1-507-453-00 (C) Jack, HEADPHONES

J501	1-508-624-00 (C) Connector, ac input; AC IN 120V (US, Canadian model)
J502	1-509-783-00 (C) Connector, ac input; AC IN (AEP, E model)
J502	1-507-447-XX (B) Jack, DC IN 6V

CNJ101,201	1-536-501-00 (D) Jack Ass'y, LINE IN, LINE OUT, REC/PB (AEP, E model)
CNJ102,202	
CNJ103	1-507-531-00 (C) Jack Ass'y, LINE IN, LINE OUT (US, Canadian model)
CNJ101,201	
CNJ102,202	

**MISCELLANEOUS**

EH	8-825-634-00 (C) Head, erase; EF135-36C
F1	1-532-079-00 (A) Fuse, F160mA (AEP, E model)
F2	1-532-215-00 (B) Thermal Fuse, T800mA (AEP, E model)
M	8-834-009-50 (K) Motor, DNF-1300A
ME101	1-520-260-11 (K) Meter, VU; LEFT
ME201	1-520-260-21 (K) Meter, VU; RIGHT
RPH101,201	8-825-584-00 (L) Head, record/playback; PF145-3602A1
SP	1-502-619-00 (H) Speaker, 3.2Ω
	1-464-059-00 (C) Unit, bias osc
	1-464-063-00 (K) Unit, dc-dc converter
	1-552-026-00 (E) Voltage Selector (AEP, E model)

Note: The components identified by shading are critical for safety. Replace only with part number specified.

Note: Circled letters (A to Z) are applicable to European models only.

ACCESSORIES & PACKING MATERIALS	
<u>Part No.</u>	<u>Description</u>
X-3701-018-3	(A) Tips Ass'y, head cleaning (Canadian, AEP, E model)
1-528-022-00	(C) Battery, size "D" (US model)
1-534-049-31	(D) Cord, connection; RK-74
1-534-840-XX	(E) Cord, power; DK-33 (AEP, E model)
1-534-867-00	(C) Cord, power; DK-35 (US model)
1-551-002-XX	(D) Cord, power (Canadian model)
3-533-950-00	(I) Strap, shoulder
3-533-962-00	(C) Bag, plastic; set
3-549-154-00	(B) Case, accessory
3-549-155-00	(B) Cushion, upper
3-549-156-00	(B) Cushion, lower
3-549-162-00	(E) Carton (Canadian, AEP, E model)
3-549-163-00	(E) Carton (US model)
3-701-684-11	(A) Card, voltage (AEP, E model)
3-770-080-11	(E) Manual, instruction (Canadian, AEP, E model)
3-770-080-21	(E) Manual, instruction (US model)
3-793-044-21	(A) Carton, important (US model)
3-793-749-11	(B) Card, DOLBY cassette (AEP, E model)
3-793-828-11	(A) Card, caution; cassette

Note: The components identified by shading are critical for safety. Replace only with part number specified.

# STEREO CASSETTE-CORDER

# TC-158SD

US Model  
Canadian Model  
AEP Model  
E Model


## CORRECTION

Correct the service manual as shown below.

No. 1

December, 1976

Page 13 Record Level Adjustment

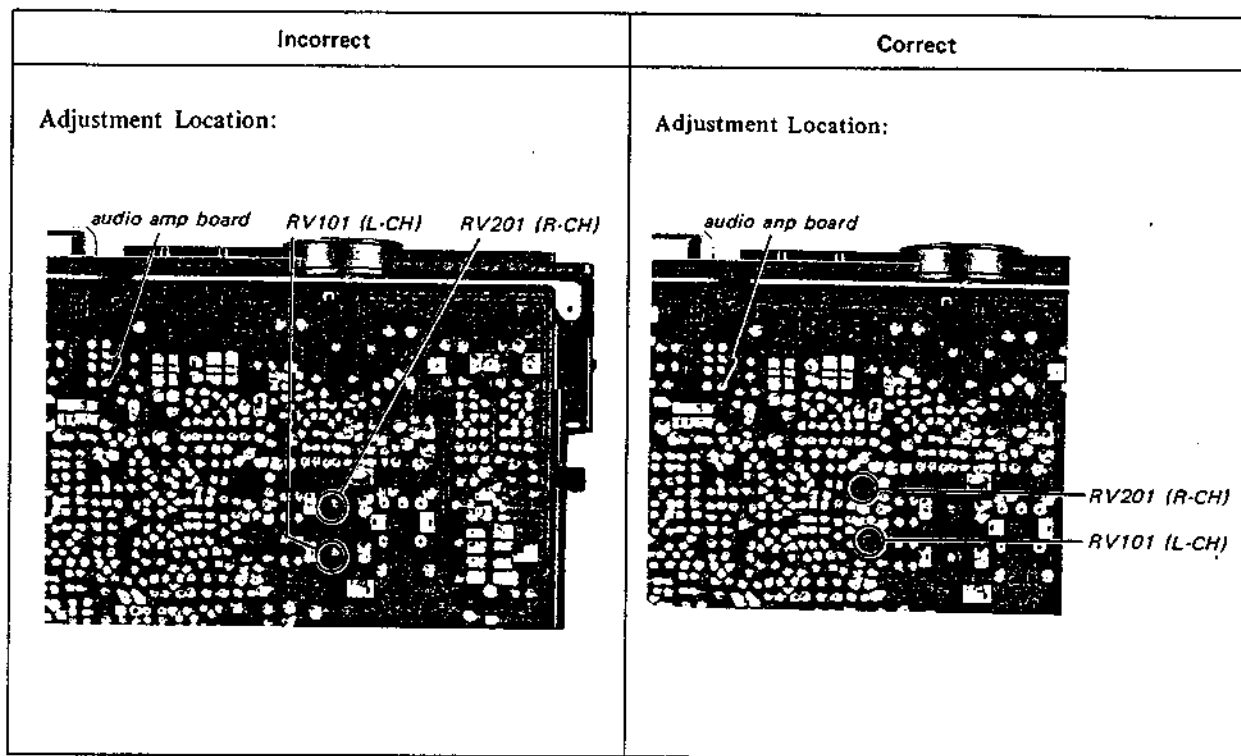

Sony Corporation

© 1976

**SONY**  
SERVICE MANUAL

9-954-490-91

6L0677-1  
Printed in Japan