

TC-K790ES

SERVICE MANUAL

AEP Model



Dolby noise reduction and HX Pro headroom extension manufactured under license from Dolby Laboratories Licensing Corporation. HX Pro originated by Bang & Olufsen. "DOLBY", the double-D symbol and "HX PRO" are trademarks of Dolby Laboratories Licensing Corporation.

Model Name Using Similar Mechanism	TC-K770ES
Tape Transport Mechanism Type	TCM-200D9

SPECIFICATIONS

Recording system	4-track 2-channel stereo
Fast winding time	Approx. 90 sec. (with Sony C-60 cassette)
Bias	AC bias
Heads	Erasing head × 1 (S&F head) Recording head × 1 (Permalloy head) Playback head × 1 (Permalloy head)
Motors	Capslan motor × 1 (direct drive linear torque BSL motor) Reel motor × 1 (DC motor)

Signal-to-noise ratio (at peak level)

Cassette (Dolby NR OFF)	Type IV (Sony Metal-S)	Type II (Sony UX-S)	Type I (Sony HF-S)
	61 dB	59 dB	57 dB

Measured at peak level weighted without NR. The S/N is improved by about 15 dB at 500 Hz and by about 20 dB about 1 kHz with Dolby-C NR on, and by 5 dB at 1 kHz and by 10 dB about 5 kHz with Dolby-B NR on.

Harmonic distortion 1.5% (with Sony Metal-S 250 nWb/m,

315Hz, 3rd H.D.)

Frequency response (Dolby NR OFF)

Type IV cassette (Sony Metal-S)	20 - 21,000 Hz (± 3 dB, IEC) 20 - 16,000 Hz (± 3 dB (-4 dB recording))
Type II cassette (Sony UX-S)	20 - 19,000 Hz (± 3 dB, IEC)
Type I cassette (Sony HF-S)	20 - 17,000 Hz (± 3 dB, IEC)

Wow and flutter

$\pm 0.05\%$ W.Peak (IEC)
 $\pm 0.025\%$ W.RMS (NAB)
 $\pm 0.07\%$ W.Peak (DIN)

Inputs		
Line inputs (phono jacks)	Sensitivity	0.16V
	Input impedance	47 k ohms
CD DIRECT INPUT	Input impedance	47 k ohms

Outputs		
Line outputs (phono jacks)	Rated output level	0.5 V at a load impedance of 47 k ohms
	Load impedance	Over 10 k ohms
Headphones (stereo phone jack)	Output level	0 - 3 mW at a load impedance of 32 ohms

General	
Power requirements	220 - 230 V AC; (or 240 V AC adjustable by Sony personnel), 50/60 Hz 23 W
Power consumption	Approx. 430 × 135 × 350 mm (w/h/d) (17 × 5 1/8 × 13 3/8 inches) including projecting parts and controls
Dimensions	Approx. 6.9 kg (15 lbs 4 oz) Audio connecting cords (2)
Weight	Design and specifications are subject to change without notice.
Supplied accessories	

STEREO CASSETTE DECK
SONY[®]



MICROFILM

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
SPECIFICATIONS.....		1
1. GENERAL		3
2. DISASSEMBLY.....		8
3. ADJUSTMENTS		
3-1. Mechanical Adjustments		10
3-2. Electrical Adjustments		13
4. DIAGRAMS		
4-1. Description on IC.....		18
4-2. Circuit Boards Location		21
4-3. IC Block Diagrams.....		22
4-4. Block Diagrams		23
4-5. Semiconductor Lead Layouts		26
4-6. Printed Wiring Boards - Main Section -		27
4-7. Schematic Diagram - Main Section -		31
4-8. Schematic Diagram - Panel Section -		36
4-9. Printed Wiring Boards - Panel Section -		39
5. EXPLODED VIEWS		
5-1. Overall Section		41
5-2. Panel Section		42
5-3. Mechanism Section-1 (TCM-200D9)		43
5-4. Mechanism Section-2 (TCM-200D9)		44
6. ELECTRICAL PARTS LIST.....		45


SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK OR DOTTED LINE WITH MARK ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

SECTION 1 GENERAL

This section is extracted from instruction manual.

Identifying the Parts

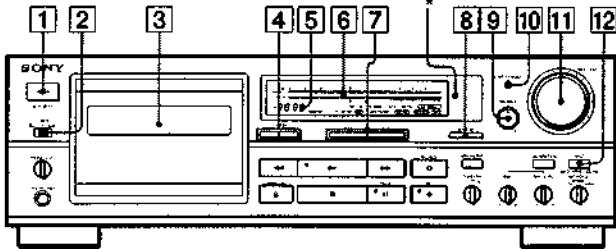

Front Panel


For details, refer to the page number indicated in parenthesis.

- 1** POWER switch
- 2** TIMER switch (50)
- 3** Cassette holder
- 4** Counter buttons
 - RESET button (26)
 - MEMORY button (24, 26)
- 5** LINEAR COUNTER (26)
- 6** PEAK PROGRAM METER (32)
- 7** AMS (Automatic Music Sensor) buttons (22)
- 8** MONITOR button (34)
- 9** BALANCE control (28)
- 10** DISPLAY MODE button (18)
- 11** REC (recording) LEVEL control (28, 32)
- 12** INPUT button (28)

* Remote control sensor

You can remotely control this cassette deck with:

- A remote commander that came with a Sony amplifier or receiver if it has the mark and cassette deck control capability.
- An optional Sony remote commander with the mark and cassette deck control capability.

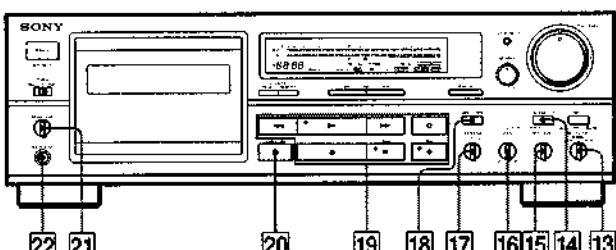

- 13** REC EQ CAL (recording equalizing calibration) switch (LOW, NORMAL, HIGH) (42)
- 14** CALIBRATION button (40)
- 15** REC (recording) LEVEL control for calibration (36, 40)
- 16** BIAS control (36, 40)
- 17** DOLBY NR (noise reduction) switch (18, 28)
- 18** MPX FILTER button (32)
- 19** Tape operation buttons and indicators
 - ◀ (rewind) button
 - (stop) button
 - ▶ (play) button and indicator
 - ▶▶ (fast-forward) button
 - REC (recording) button and indicator
 - PAUSE button and indicator
 - REC MUTE (record muting) button (48)
- 20** ▲ OPEN/CLOSE button
- 21** PHONE (headphones) LEVEL control
- 22** HEADPHONES jack (stereo phone jack) (20)

Recording

Recording FM Broadcasts with the Dolby NR System

When recording FM broadcasts with the Dolby NR system, set the MPX FILTER button to ON (the "FILTER" indicator appears). The MPX filter eliminates remnants of the 19-kHz stereo carrier and 38-kHz subcarrier signals which may impair the operation of the DOLBY NR system. Be sure that the Dolby NR switch is turned on since the MPX filter will not function otherwise. During recording with the Dolby NR system, use this switch only if the tuner is not equipped with its own MPX filter or the equipped filter does not function effectively.

Adjusting the Recording Level

The optimum recording level, which differs according to the tape type, is indicated on the PEAK PROGRAM METER for each tape type.

Adjust the REC LEVEL control as high as possible without exceeding the recommended range for the tape type being used.

PEAK PROGRAM METER recording by tape type

Fig. A shows the recommended maximum PEAK PROGRAM METER readings.

- a) for Type I (normal) or Type II (CrO₂) tape
- b) for Type IV (metal) tape

Tips on recording level adjustment

- If the recording level setting is too high, the recording will be distorted; if it is too low, the tape will produce a hissing sound. Therefore, the recording level should be set as high as possible without causing distortion.
- If the program source to be recorded has many high frequency signals, set the level to a relatively low position.

Monitoring the Recorded Sound

As this unit has three separate heads for recording, playback and erasure, you can check the quality of a recorded sound by comparing it with the input source signal.



To listen to the input source signal, set the MONITOR button to SOURCE. (Fig. A)

To listen to the sound recorded on the tape, set the MONITOR button to TAPE. (Fig. B)


Fig. A and B show the MONITOR button setting and their respective signal flow.
 a) Band
 b) Recording head
 c) Playback head




Comparing the recorded sound with the sound source

While recording, use this monitoring function to check that there is no distortion due to excessive level settings or sound degradation due to head contamination.

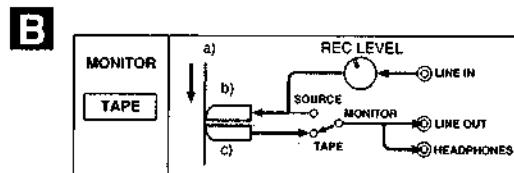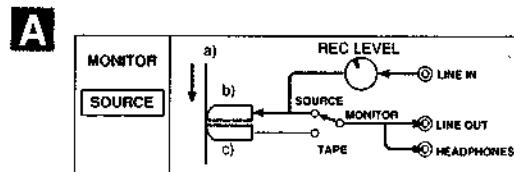

A

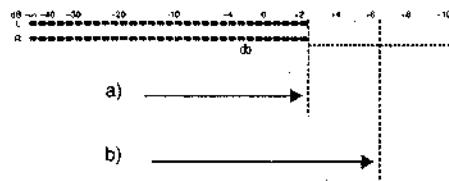

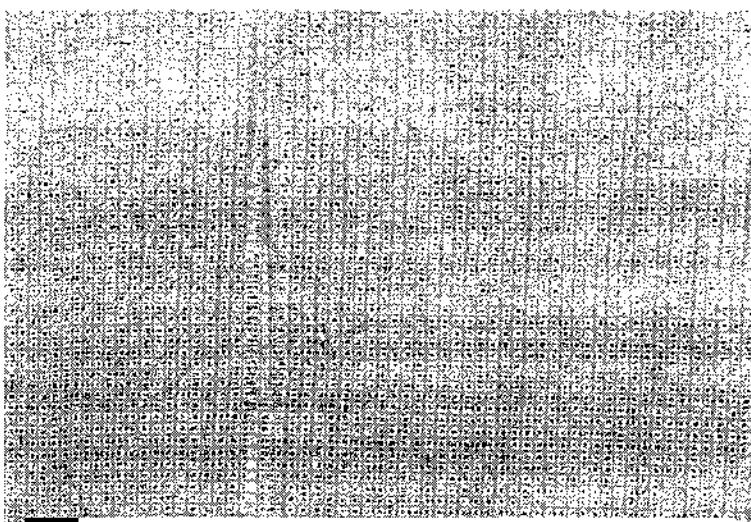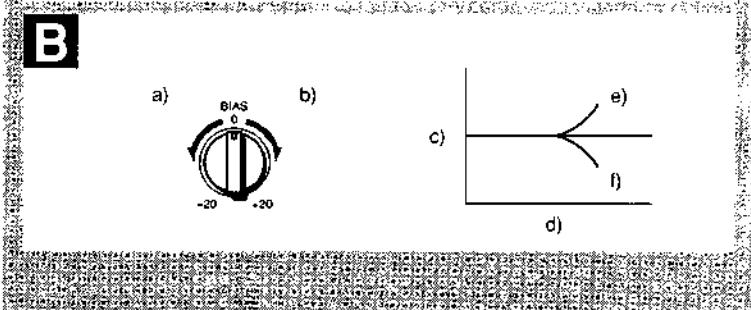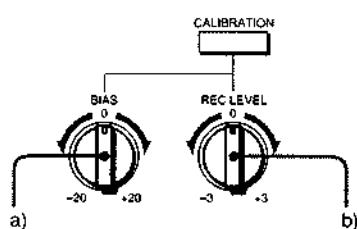**A****B**

Making an Optimum Recording

Bias and Recording Level Calibration

There are many different types of cassettes on the market, each with varying magnetic properties. Although your unit is equipped with the ATS (Automatic Tape Selection) system which sets the appropriate equalization characteristics and bias current for each tape type, an additional calibration adjustment can often produce even better results. Use the bias current and recording level calibration function to obtain the optimum recording conditions for your tape.

Fig. A shows the BIAS control and REC (recording) LEVEL control for calibration.

- a) Adjusts bias current within $\pm 20\%$
- b) Adjusts recording level within ± 3 dB


Bias calibration

Choosing the optimum bias current for a tape ensures minimum distortion and flat frequency response. Lowering the bias current boosts high-frequency response, but also results in higher distortion. Raising the bias, on the other hand, reduces distortion, but also dampens high-frequency response. Optimum bias is thus obtained when the bias current and high-frequency response are well balanced.

Fig. B shows the BIAS control and a high-frequency response balance chart.

- a) High-frequency response rises
- b) High-frequency response drops
- c) Output (level in dB)
- d) Frequency in Hz
- e) Bias reduced (-)
- f) Bias increased (+)

(Continued on next page.)

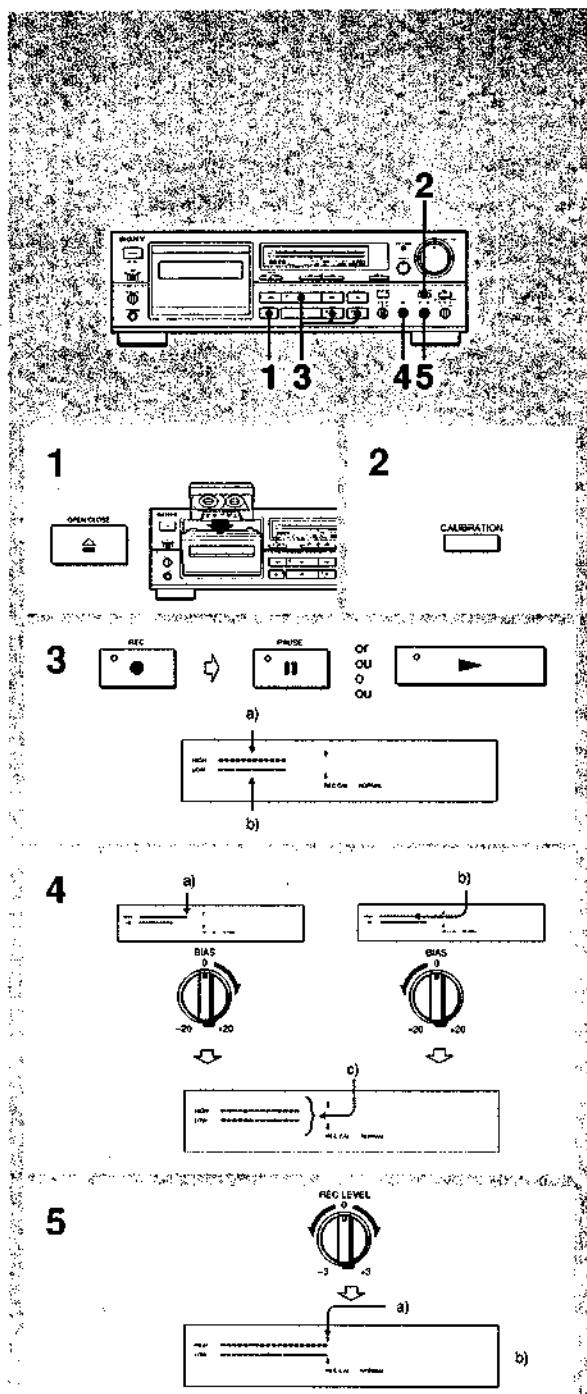

40

Making an Optimum Recording

1 Insert the cassette to be used for recording.

2 Press CALIBRATION.

3 Press ●, then ▶ or ▷ to activate the recording test tone.

- a) Playback level for an 8-kHz signal
- b) Playback level for a 400-Hz signal

Note

- The sound cannot be monitored during the calibration operation.
- It takes 2 to 3 seconds for the test tone level to stabilize.

4 Adjust BIAS until both meters indicate equal playback levels.

- a) A high reading on the upper meter indicates a low bias current.
- b) A low reading on the upper meter indicates a high bias current.
- c) An equal reading on both meters indicates the optimum bias current condition.

5 Adjust REC LEVEL CALIBRATION until both meters reach the recommended level (REC CAL).

- a) Recommended level
- b) The bias current is now adjusted to the optimum level and the tape sensitivity compensation has been set. Press ■, then set CALIBRATION to OFF. Rewind the tape and start the actual recording.

Recording

Recording Equalization Calibration

Although bias current and equalization are automatically set by the Automatic Tape Selection (ATS) function for the tape being used, you can use the REC EQ CAL switch to change the recording characteristics according to the nature of the source material or to compensate for the particular characteristics of the tape.

- Fig. A shows the REC EQ CAL switch.
 a) To emphasize higher frequencies in recordings
 b) For normal recordings
 c) To dampen higher frequencies in recordings

Bias Calibration Recording

Use the REC EQ CAL switch in conjunction with the BIAS control to modify bands of sound and record according to the tape's characteristics.


- When recording music which has strong middle and low frequencies Set the bias at flat with the REC EQ CAL switch set in the HIGH position to increase the bias current. Adjust the BIAS control so that the HIGH and LOW meters indicate equal readings.
- When recording music which has strong high frequencies Set the bias at flat with the REC EQ CAL switch set in the LOW position to decrease the bias current. Adjust the BIAS control so that the HIGH and LOW meters indicate equal readings.

Note

With metal tape, because the amount of frequency characteristic modulation is not in proportion to that of the bias, the optimum bias current may not be obtained using the methods above.

Another use of the REC EQ CAL switch

When using special tapes, adjusting the BIAS control with the REC EQ CAL switch set in the NORMAL position may not result in equal readings on the HIGH and LOW meters. If this occurs, adjust the BIAS control after setting the REC EQ CAL switch to HIGH or LOW.

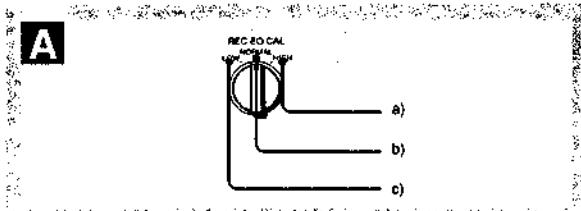

What is the Dolby HX PRO System?

The Dolby HX PRO system provides improved linearity in high-range frequency response during recording. Tapes recorded with this system retain the same high quality even when played back on other tape decks.

As shown in Fig. A, characteristics such as output level and distortion differ widely according to the bias (high-frequency) current.

Fig. A

- High
- Distortion output
- 315 Hz
- 6.3 kHz
- 10 kHz
- 315 Hz distortion
- Bias current
- High
- Established bias current


In conventional systems (see Fig. B), the bias current is susceptible to variations in certain recording signals which may cause fluctuations in frequency response, distortion, or other unwanted characteristics.

Fig. B


- High
- Output
- Fluctuation
- Frequency
- High

With the Dolby HX PRO system, the effective bias amount added to the bias current is controlled in millisecond units to greatly reduce distortion, improving linearity in high-range response and ensuring high-intensity recording with minimal distortion and noise.

A

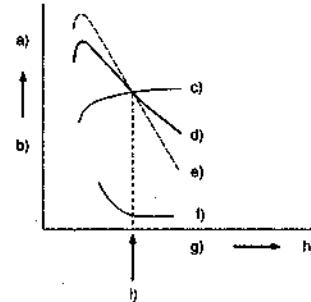


B

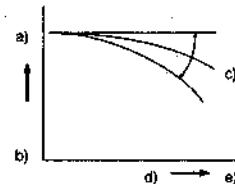



SECTION 2 DISASSEMBLY

- If the parts are marked with the numbers ①, etc., remove them in the order of the number.

Cassette Holder

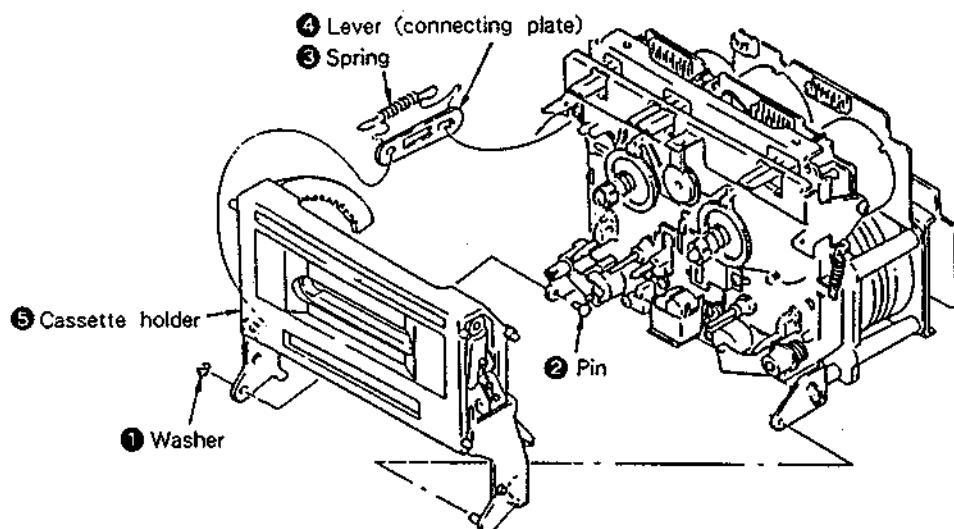


Ornamental Plate

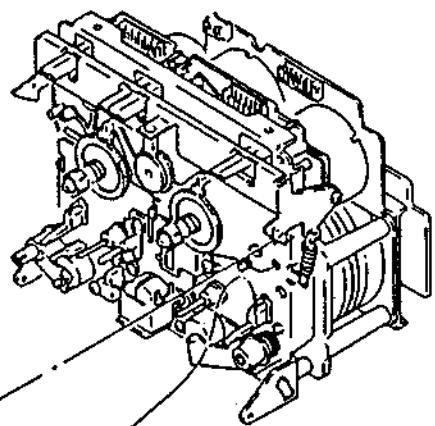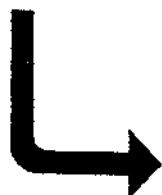


Pinch Lever/Lever FR

① - ④ : Pinch lever S
 ① and ② : Pinch lever T
 ▲ and △ : Lever FR

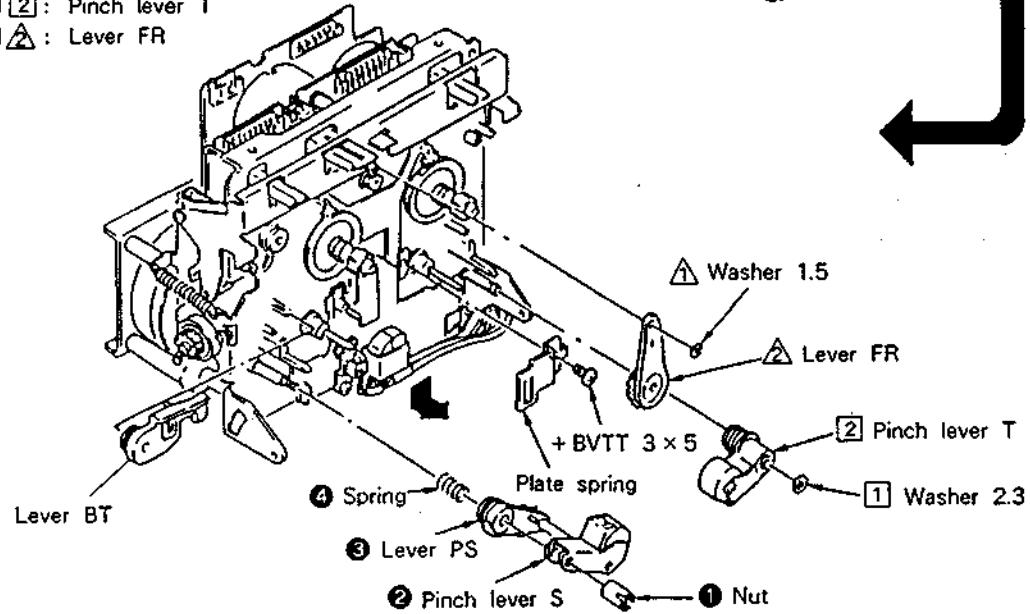

Comparator Board/Capstan Board/Flywheel/FG Board

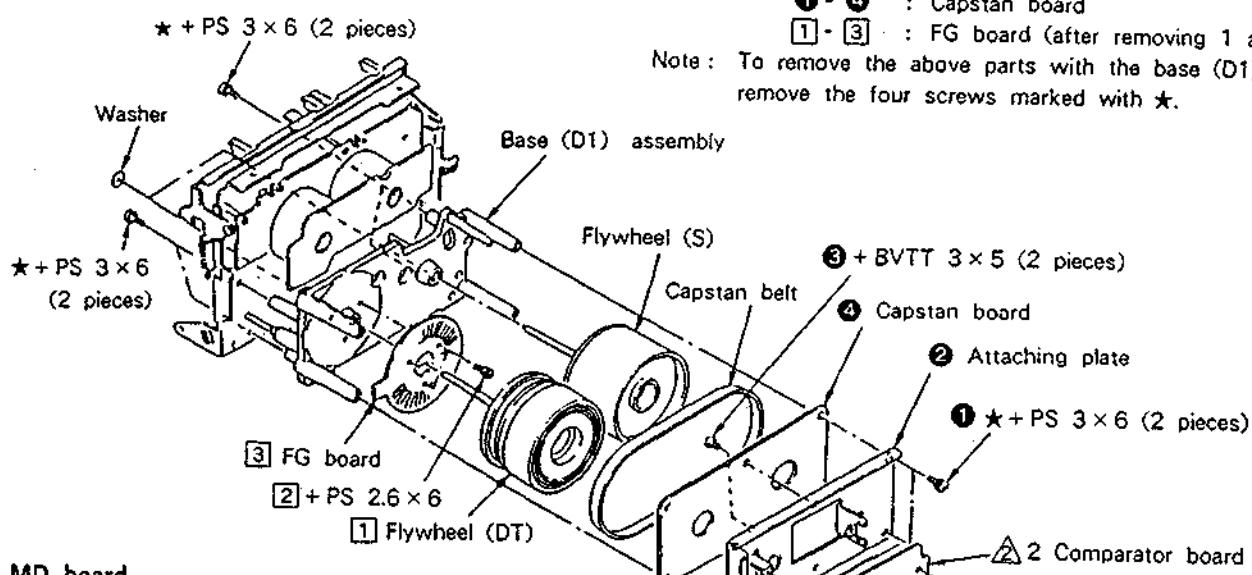


△ and ▲ : Comparator board

① - ④ : Capstan board


① - ③ : FG board (after removing 1 and 2)

Note: To remove the above parts with the base (D1) assembly, remove the four screws marked with ★.

MD board

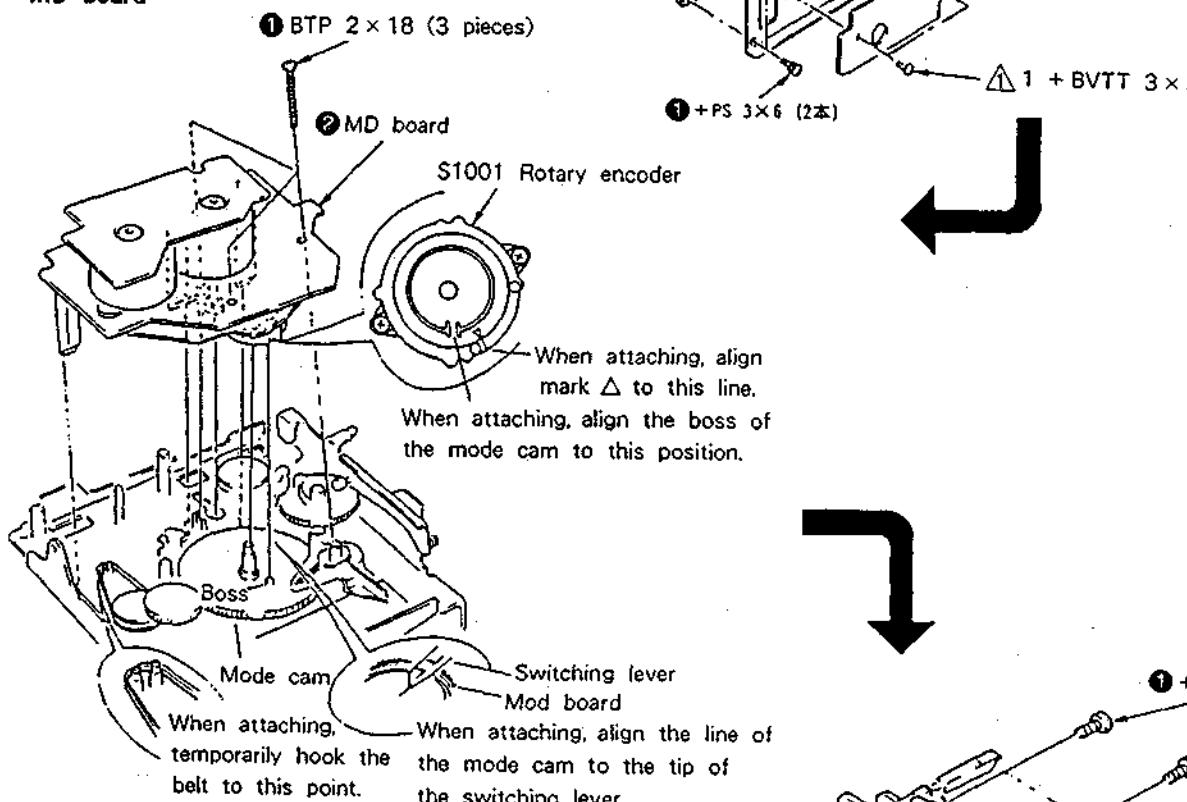

Reel Motor Board

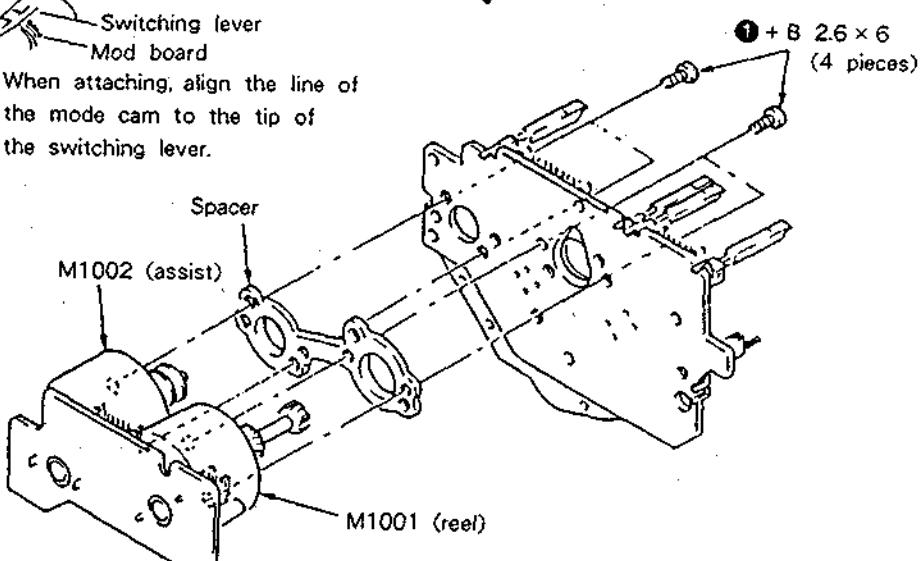


SECTION 3 ADJUSTMENTS

3-1. MECHANICAL ADJUSTMENTS

PRECAUTION

1. Clean the following parts with a denatured-alcohol-moistened swab :

record/playback head	pinch roller
erase head	rubber belts
capstan	idle
2. Demagnetize the record/playback and erase head with a head demagnetizer.
3. Do not use a magnetized screwdriver for the adjustments.
4. After the adjustments, apply suitable locking compound to the parts adjusted.
5. The adjustments should be performed with the rated power supply voltage unless otherwise noted.

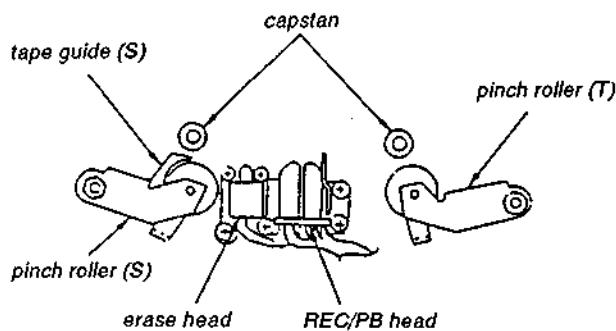


Tape Path Adjustment

- Refer to Adjustment Position on page 12.
- Note :** When using the adjustment methods for other than replacement reasons, please do not tamper unnecessarily with the adjustment screws or the erasehead because either the supply pinch roller guide or the record/playback head will be made the standard tape paths. Moreover, when it is necessary to adjust and replace two or more of any of the heads and/or pinch rollers, replace them one by one, completely taking out the first tape path, and then replacing the second one.

Preparation :


1. Mirror cassette CQ009C 8-909-708-01
(or CQ012C 8-909-708-02)

If one does not have this, cut out the sections of a 120-minute cassette shell as indicated below and use that cassette.

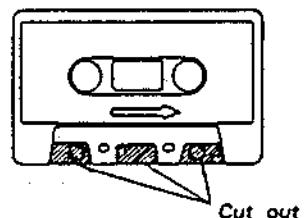

2. Phillips screwdriver (medium-size) :
For the head adjustment screws
- Blade-type screwdriver (large-size) :
For the supply pinch roller adjustment screws
3. Pen light
4. WS-48B (3 kHz, 0 dB)
5. P-4-A100 (10 kHz, -10 dB)

Definition of Terms : The figures are of a record/playback head.

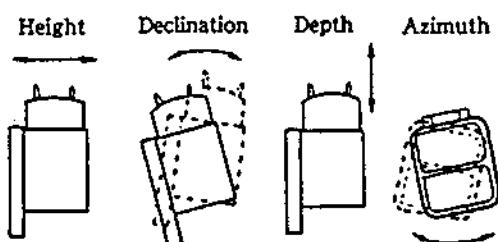

Adjustment Method :

Supply Pinch Roller

Note : Only perform this adjustment when the supply pinch roller is to be replaced.


1. Insert the mirror cassette and put the unit in record/playback mode.
2. Check to see whether the tape is curling at the record/playback head guide or the pinch roller guide.
If it is curling, remove the curl by adjusting the ④ tape curl adjustment screw. Then, check that the tape is running past the middle of the erasehead.

Record/playback Head

Note : Only perform this adjustment when the record/playback head is to be replaced.

1. Insert the mirror cassette and put the unit in record/playback mode.
2. (Height Adjustment) Check to see if the tape is curling at the tape guide of the head. If it is curling, tighten screws ①, ②, and ③, respectively by the same angle, moving the head so that it

remains at the same angle throughout the procedure. If it curls on the bottom side of the mirror cassette (actually the inner side), tighten all the screws equally; but loosen them if the tape begins to curl on the top side (outer side).

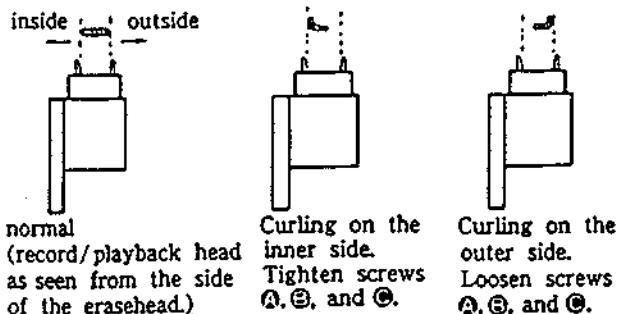

- (Declination Adjustment) While in the record/playback position, set the back tension to 0 (wind the supply reel with something thin like a pencil in a counterclockwise direction) and make sure there is no curling or shifting (shifting up/shifting down) at the guide of the record/playback head.

Because shifting can only occur due to a difference in the width of the tape and that of the tape guides (curling will otherwise occur), it is necessary to pay close attention since it can be easily overlooked. When there is a shift, tighten screws ④ and ⑤ equally and change the declination of the head. If the tape is shifting up, tighten the screws, and if it is shifting down, loosen them.

- Repeat the adjustments in steps 2 and 3 and fine adjust the height and the declination.


5. (Preliminary Azimuth Adjustment)

After demagnetizing and cleaning the adjustment head, play back WS-48B (3 kHz, 0 dB).

Turn screw ⑦ so that the reading on the level meter of the unit or that of the level meter connected to LINE OUT is maximized.

If the screw is turned at least half a revolution, repeat the adjustments from step 1.


- (Tape Path Check) Connect the oscilloscope to LINE OUT and play back P-4-A100 (10 kHz, -10 dB) to display a resurge waveform. After 20 seconds of record/playback (after the tension within the loop has been increased sufficiently), make sure the variation in the resurge is within ± 90 degrees (within ± 45 degrees is desired). If the variation is greater than this, it is because the declination and/or the height adjustment is not perfect. Repeat the adjustments from step 1.

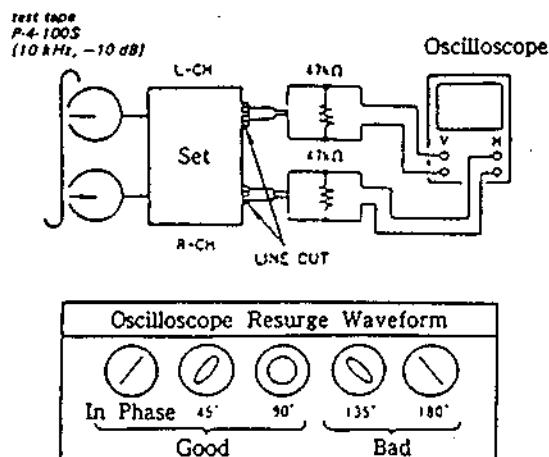

Erasehead

Note: Only perform this adjustment when the erasehead is to be replaced.


- Insert the mirror cassette and put the unit in record/playback mode.
- (Azimuth Adjustment) Adjust the azimuth of the erasehead by adjusting screws ⑧ and ⑨ so that the tape runs as evenly as possible.

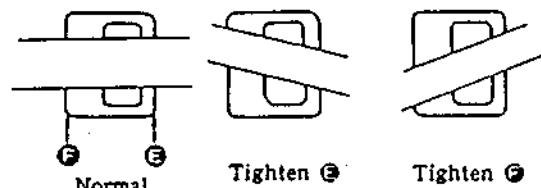

(The erasehead as seen when erasing the mirror cassette.)


- (Height adjustment) Turn screws ⑩, ⑪, and ⑫ all by the same angle so that the portions of the erasehead visible at top and bottom are nearly of equal width. If the width at the top is greater, tighten the screws; if the width at the bottom is greater, loosen the screws.

Erasehead (The erasehead as seen through the mirror cassette.)

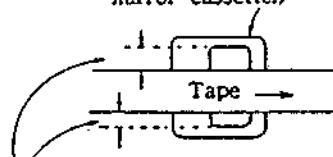

Make these the same width.


4. (Declination Adjustment) Leaving it in the playback position, put the back tension to 0 and make certain the erasehead part and supply pinch roller guide part do not shift. If there is a shift, turn the screw ④ and change the declination. Looking at it using the mirror cassette, if the tape shifts up, tighten the screw, and if it shifts down, loosen the screw.
5. Repeat the adjustments beginning with step 2 and fine adjust the height and declination. And make sure the tape does not curl up on the pinch roller guide or the guide part of the record/playback head.
6. (Depth Adjustment) In order to make the entire head play the tape smoothly, and to make sure the depth of the erasehead is neither too shallow nor too deep, loosen screw ④ a bit.

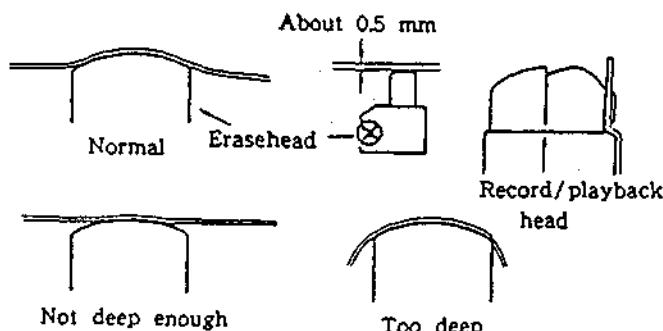

Check

1. Check to make sure that there are no curls or shifts throughout the whole tape path and that the tape runs smoothly.
2. Reapply the locking compound to the adjusted screws. (The locking compound should only be applied to screw ④ after the azimuth has been adjusted.)

Adjustment Position: As seen from the cassette, side (top) and MD as seen head on (bottom).

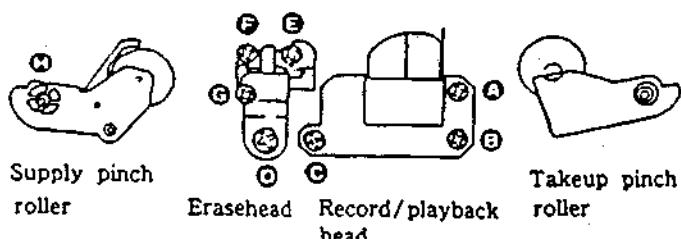


Pinch Roller Pressing Force Measurement

Mode : playback

Hook needle of the tension gauge to the pinch roller shaft and push back pinch roller to detach it from capstan. Then, return it gradually to capstan and read the gauge when the pinch roller begins turning.

Standard Limits :

Tape-up side : 270 - 350g (9.5 - 12oz)
Supply side : 180 - 280g (6.4 - 9.9oz)

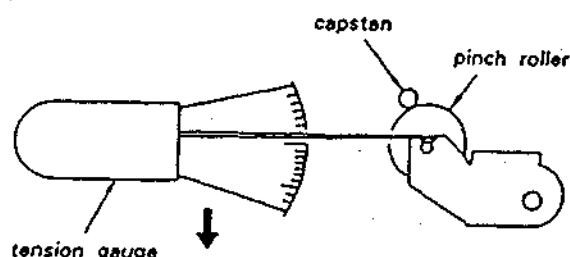

3-2. ELECTRICAL ADJUSTMENTS

Note : The adjustment should be performed in the order given in this service manual.
The adjustments should be performed for both L-CH and R-CH.

- Simultaneous REC/PB Mode :

Input the signals to LINE IN terminal and set to REC mode. Set the monitor switch to TAPE, and monitor the recorded signal for LINE OUT terminal.

- Switch Position :

DOLBY NR	OFF
TIMER	OFF
MONITOR	TAPE
HX PRO	OFF
CALIBRATION	OFF
CD DIRECT	OFF
BIAS	CENTER CLICK
REC LEVEL	CENTER CLICK

- Standard Record :


Deliver the standard input signal level to the input jack and set the REC LEVEL control to obtain the standard output signal level.

Standard Input Level

Input Terminal	LINE IN
source impedance	10 kΩ
input level	0.25 V (-10 dB)

Standard Output Level

Output Terminal	LINEOUT
load impedance	47 kΩ
output level	0.44 V (-5 dB)

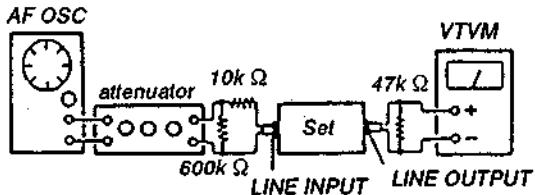


Torque Adjustment and Measurement

1. Insert a tape for torque measurement, CQ-102C, and put the set to PLAY mode. Adjust RV801 so that the reading of the torque meter is $40 \pm 3\text{g.cm}$.
2. After the adjustment, measure the back-tension and the FF/REW torque and check that the following specifications are satisfied.

Torque	Torque Meter	Reading
FWD	CQ-102C	35 - 45 g·cm (0.49 - 0.62 oz·inch)
FWD Back tension	CQ-102C	7 - 11 g·cm (0.097 - 0.15 oz·inch)
FF/REW	CQ-201B	65 - 90 g·cm (0.9 - 1.4 oz·inch)

Tape Speed/WOW Check

Procedure:

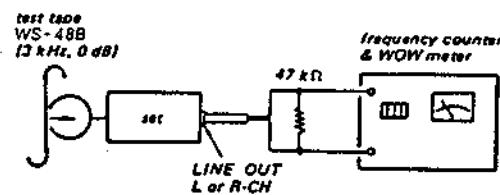

1. Measure the output frequency and the WOW value while playing back the tape top of the test tape.
2. Turn over the test tape, measure the output frequency and the WOW value, and check the difference from the values of the step 1.

Adjustment Limits :


TAPE SPEED deviation : within 2,985 to 3,015Hz
WOW (WRMS) : 0.05% or less

MPX FILTER Check

Setting : DOLBY switch : OFF
 MPX FILTER switch : OFF

Procedure :

1. Mode: stop

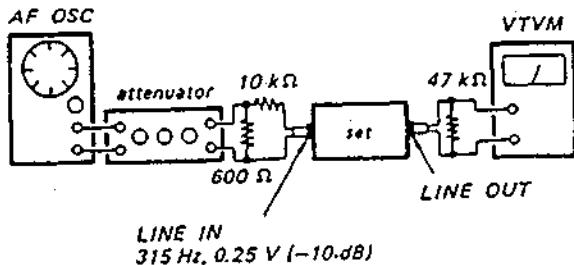


2. Apply 315Hz, 0.25V (-10dB) signal and adjust REC LEVEL (RV502) control so that the LINE OUT level is 0.44V (-5dB).
3. Apply 19kHz 0.25V (-10dB) signal and confirm that the LINE OUT level is 0.013V (-35dB) or less.

Adjustment Limits :



DOLBY NR switch : B or C
 MPX FILTER switch : Line output level when ON.
 315Hz : Within 0.49 to 0.39V (within -4dB to -6dB)
 19kHz : 0.013V (-35dB) or less

Record/Playback Head Azimuth Adjustment**Procedure :**


1. Mode : playback

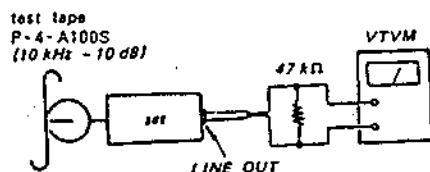

2. Turn the adjustment screw for the maximum output levels. If these levels do not match, turn the adjustment screw until both of output levels match together within 1dB.

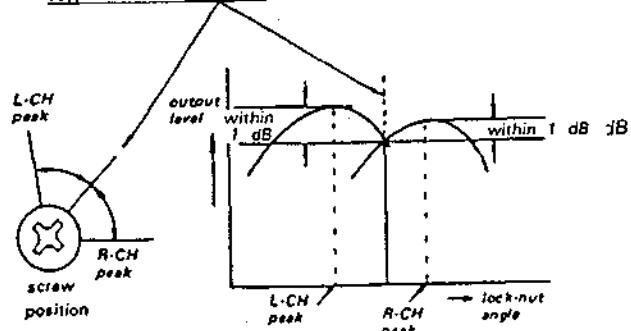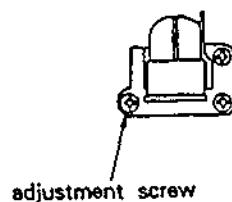**Adjustment Location :****Playback Level Adjustment****Procedure:**

1. Mode : playback

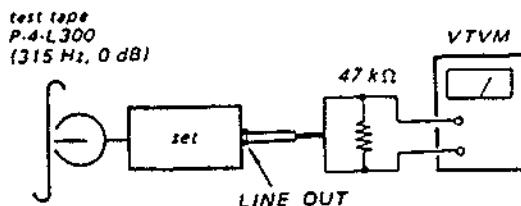

Adjust RV101 (L-CH) and RV201 (R-CH) to obtain the specified LINE OUT level.

Adjustment Limits :

LINE OUT level : 0.338 to 0.301 V
 (-7.2 to -8.2 dB)


Level difference between channels :
 less than 0.5 dB

Check that the LINE OUT level does not change in playback mode while changing the mode from playback to stop several times.


3. Phase check

- Play mode -

Reference tape for adjustment
 P-4-A100
 (10 kHz, -10 dB)

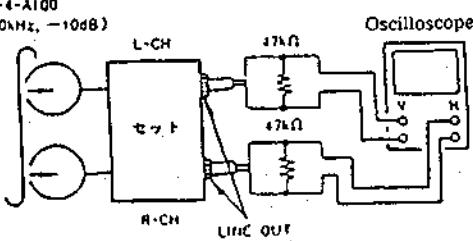


4. Check that the phase difference between L-ch and R-ch is within 0 ~ (same to 90°).

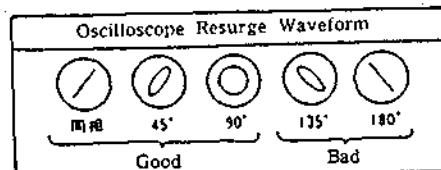

Erase Current Adjustment

1. Mode : record

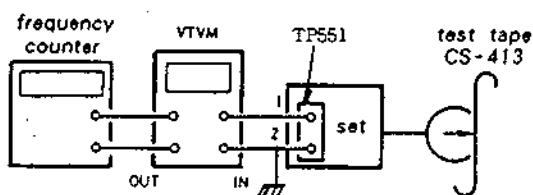

2. Adjust RV553 so that the reading on VTVM is 110mV (erase current = 110mA).
3. And then confirm that the reading on the frequency counter is 160kHz.

Adjustment Limits :

Erase current : 105mA to 110mA
Frequency : $160 \pm 6\text{kHz}$

Bias Current Adjustment


Note: This adjustment should be made before Record Bias Adjustment.

Procedure :

1. Preset RV303 (L-CH) and RV403 (R-CH) and RV554 in the center position, and record with no signal.
2. Adjust T401 (L-CH) and T301 (R-CH) for minimum readings on the digital voltmeter.

Adjustment Limits :

120mV or less. (reference)

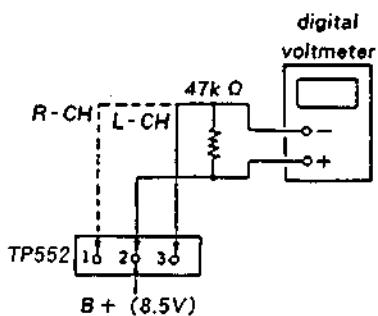**CrO₂ Bias and Record Level Adjustment**


Note: This adjustment should be made before Record Bias Adjustment.

Setting:

REC LEVEL knob: standard record position
(See page 13.)

Procedure:

1. Mode: simultaneous REC/PB

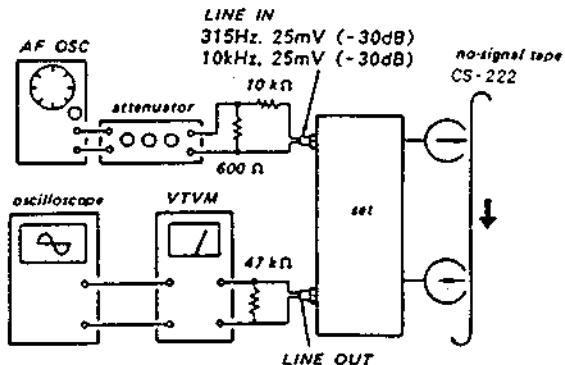


2. Adjust RV403 (L-CH) and RV303 (R-CH) so that the playback output level of 10kHz signal is 0.3dB - 0.3dB with respect to that of 315Hz. • • • Record Bias Adjustment.
3. Adjust RV401 (L-CH) and RV301 (R-CH) so that the playback output level of 315kHz is - 25.3dB to - 24.7dB. • • • Record Level Adjustment.

Metal Bias Adjustment**Setting:**

REC LEVEL Knob: standard record position
(See page 13.)

Procedure :

1. Mode : simultaneous REC/PB

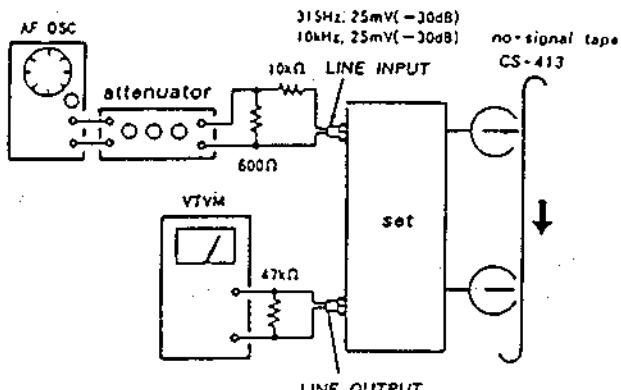


2. Adjust RV554 so that the difference between the playback output at 315Hz and that of 10kHz in R-CH is within 0.3 dB to - 0.3dB.

Normal Bias Adjustment**Setting:**


REC LEVEL knob: standard record position
(See page 13.)

Procedure:

1. Mode: simultaneous REC/PB

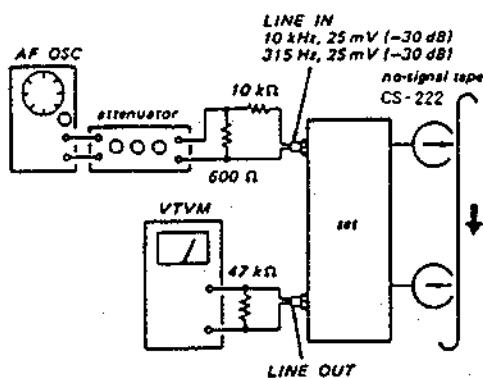**Procedure (CAL METER ADJ):**

1. Put the set in record mode and adjust RV202 (HIGH) so that HIGH FREQ segments in the CAL LEVEL meter light thoroughly up to 0 VU as shown in the figure below. Segment (a) may flicker.
2. Preset RV102 (LOW) so that segment (a) in LOW FREQ CAL LEVEL meter lights. Then adjust RV102 to the point where segment (a) goes out.

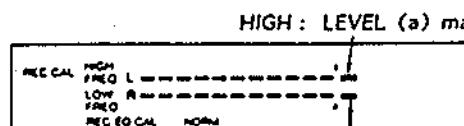

HIGH : LEVEL (a) may flicker.
LOW : LEVEL (a) must not flicker.


2. Adjust RV302 (L-CH) and RV402 (R-CH) so that the difference between the playback output at 315Hz and that of 10kHz in R-CH is within 0.3dB to -0.3dB.
3. Set the HXPRO switch to OFF.
4. Adjust RV104 (L-CH) and RV204 (R-CH) so that the difference between the playback output at 10kHz when the HXPRO is ON and that of 10kHz when ON is within 0.5dB to -0.5dB.

Calibration OSC and Calibration Meter Adjustment

Setting : CALIBRATION switch : ON


Procedure (OSC OUT LEVEL):

1. Mode : record (no-signal (LINE INPUT))

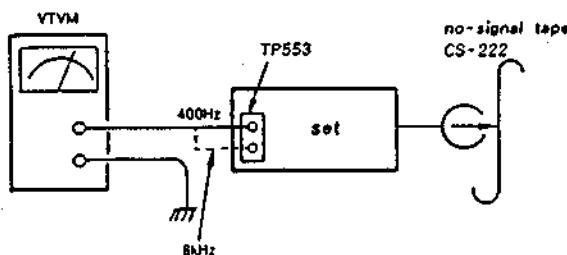

2. Adjust RV551 so that a check-point level at 400Hz is 95dB to 10.5dB.
3. Adjust RV552 so that a check-point level at 8kHz is 9.5dB to 10.5dB.

Adjustment Location : MAIN (A) BOARD (COMPONENT SIDE)

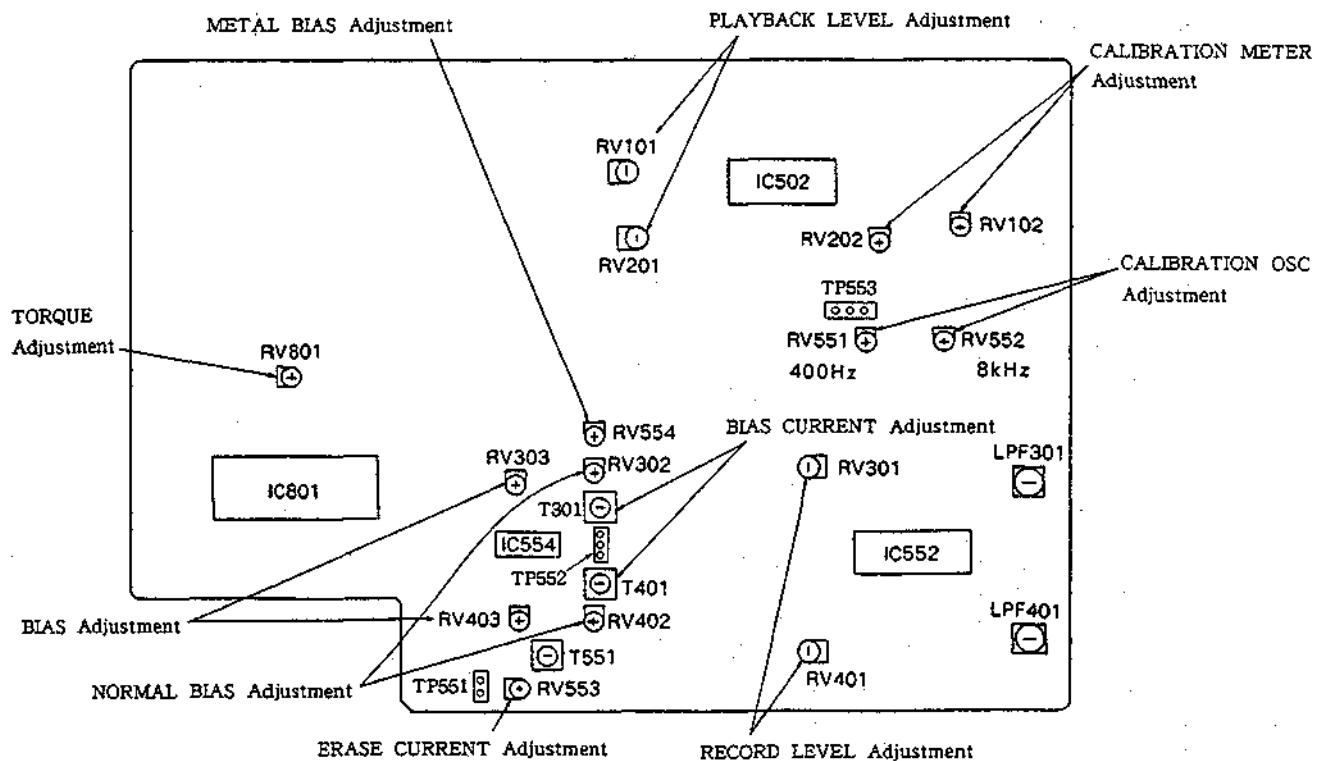

SECTION 4

DIAGRAMS

4-1. DESCRIPTION ON IC

IC502, IC552 (CX20188)

An electronic switch circuit for the operation mode control is included. Controls are performed by adding direct current voltages VH, VM, and VL to Dolby OFF/B/C and calibration/REC/Playback terminals.

CX20188	Pin name	Description
Pin No.		
1.	Vcc	Positive power supply terminal.
2, 41.	REC IN	Recording input terminal.
3.	I REF	Reference current input terminal.
4, 39.	PB IN	Playback input terminal.
5.	CAL/REC/PB	Calibration/recording/playback select terminal
6, 37.	PB FB	Playback feedback terminal.
7, 36.	REC FB	Recording feedback terminal.
8, 35.	GND	GND terminal.
9, 34.	LINE OUT	Line output (decode output) terminal.
10, 33.	SSK	Spectral skewing switch terminal.
11, 32.	VF IN	Encode circuit input terminal.
12, 31.	HPP H	HLS high-pass filter terminal.
13, 30.	TCH 2	HLS detector time constant terminal 2.
14, 29.	TCH 1	HLS detector time constant terminal 1.
15, 28.	WT H	HLS encoder error reduction terminal.
16, 27.	TCL 2	LLS detector time constant terminal 2.
17, 26.	TCL 1	LLS detector time constant terminal 1.
18, 25.	WT L	LLS encoder error reduction terminal.
19, 24.	HPP L	LLS high-pass filter terminal.
20, 23.	ANT S	Anti-saturation terminal.
21, 22.	REC OUT	Recording output (encode output) terminal.
38.	OFF/B/C	Dolby NR off/B type/C type select terminal.
40.	CAL IN	Calibration input terminal.
42.	Vee	Negative power supply terminal.

IC901 (M50940 - 313SP)

Level meter display of 24-segment fluorescent display, etc., are performed by receiving direction from the master microcomputer (IC801).


Pin No.	Pin name	I/O	Description
1.	Vref	I	A/D input-port reference voltage input(+5V)
2.	φL	I	Not used. (Connected to +5V)
3.	φR	I	Not used. (Connected to +5V)
4.	DATA	I	Data input from the master microcomputer(IC801)(analog)
5. ~6.	ADE1~ADRO	I	Data input from the master microcomputer(IC801)(analog)
7.	KEY	I	Not used. (Connected to +5V)
8.	LEVEL L	I	Level meter L-CH input(analog) from the meter amplifier(ICS14)
9.	LEVEL R	I	Level meter R-CH input(analog) from the meter amplifier(ICS14)
10. ~13.	GRID6~GRID3	O	Not used.
14. ~15.	GRID2~GRID1	O	Fluorescent display grid output
16.	COO	O	Not used.
17.	PLAY	O	Not used. (Connected to pin ⑩.)
18.	PLAY	O	Not used.
19.	PAUSE	O	Not used.
20.	REC	O	Not used.
21.	TAPE	O	Fluorescent display segment output("TAPE" displayed). "L": TAPE displayed. "H": SOURCE displayed.
22.	OVER LEVEL	O	Fluorescent display segment output("OVER LEVEL" displayed). It is displayed when "L".
23.	TYPE I	O	Fluorescent display segment output("TYPE I" displayed). It is displayed when "L".
24.	TYPE II	O	Fluorescent display segment output("TYPE II" displayed). It is displayed when "L".
25.	TYPE IV	O	Fluorescent display segment output("TYPE III" displayed). It is displayed when "L".
26.	CNVss	-	Power supply terminal(GND)
27.	RESET	I	Reset input
28.	XIN	I	Clock input(4MHz)
29.	XOUT	O	Clock output.
30.	XCIN	-	Not used. (Connected to GND)
31.	XCOUT	-	Not used.
32.	Vss	-	Power supply terminal(GND)
33.	Φ	O	Not used.
34.	VER	I	Version switching input(Always set to "L")
35.	TEST	I	Test mode input. "L": All the lamps of the meter are lit.
36.	CAL	I	Calibration switch(S602) input. "L": CAL mode. "H": Normal mode.
37.	IN	I	Not used. (Connected to GND.)
38.	VP	I	Fluorescent display segment output's pull-down power supply terminal(-22V)
39. ~62.	S23~S0	O	Fluorescent display segment output(meter display)
63.	AVcc	-	Power supply terminal(+5V)
64.	Vcc	-	Power supply terminal(+5V)

IC801 (M50964-226SP)

DRAFT - DO NOT USE


Pin No.	Pin name	I/O	Description
1.	VCC		Power supply: +5V.
2.	AVss		Analog GND.
3.	Vref	I	A/D port reference voltage input.
4.	DA		Not used for this model.
5.	PWM		Not used for this model.
6.	P.OFF		Not used for this model. Connected to GND.
7.	LED	O	PAUSE LED output.
8.	LED	O	REC LED output.
9.	LED	O	PLAY LED output.
10.	AD1	I	Key input. 0V=▲, 1V=■, 2V=◀, 3V=▶, 4V=●.
11.	AD2	I	Key input. 0V=►, 1V=■, 2V=◀, 3V=▶, 4V=●.
12.	AMS SIG	I	AMS signal input. No song detected = Low. Song detected = High.
13.	AD4	I	Key input. 2V = DISPLAY, 3V = MONITOR.
14.	CODE	I	Remote control category select switch.
15.	ALB		Connected to 5V.
16.	φR	I	Take-up reel base sensor input.
17.	φL	I	Supply reel base sensor input.
18.	C RESET		Model select input. Connected to GND.
19.	C MEMORY		Model select input. Connected to GND.
20.	COO		Not used for this model.
21.	POWER IN	I	Power on and off detection.
22.	SIRW	I	SIRCS phase input.
23.	STRE	I	SIRCS reverse phase input.
24.	T-REC	I	Timer REC switch input.
25.	T-PLAY	I	Timer PLAY switch input.
26.	TNT	I	External interruption input. Interruption process is performed when the power is on or off.
27.	Vss		GND.
28.	RESET	I	Reset input.
29.	XIN	I	Clock input (4 MHz).
30.	XOUT	O	Clock output (4 MHz).
31.	φout		Not used for this model.
32.	Vss		GND.
33.	C1	I	Rotary encoder input to detect the position of the head base of the mechanical block.
34.	C2	I	Rotary encoder input to detect the position of the head base of the mechanical block.
35.	C3	I	Rotary encoder input to detect the position of the head base of the mechanical block.
36.	C4	I	Rotary encoder input to detect the position of the head base of the mechanical block.
37.	OPEN SW	I	OPEN switch input of the mechanical block.
38.	CLOSE SW	I	CLOSE switch input of the mechanical block.
39.	DOOR SW	I	DOOR switch input of the mechanical block.
40.	REC SW	I	REC switch input of the mechanical block.
41.	M PLAY	O	Reel motor rotates at PLAY speed.
42.	M FAST	O	Reel motor rotates at FF/REW speed.
43.	M FWD	O	Reel motor rotates.
44.	M REV	O	Reel motor rotates in reverse.
45.	CAM DOWN	O	Head base DOWN output of the mechanical block.
46.	CAM UP	O	Head base UP output of the mechanical block.
47.	C OFF	O	Counter light-off output.
48.	M OFF	O	Meter light-off output.
49.	BIAS	O	Bias oscillation on and off control.
50.	R M1	O	REC MUTE.
51.	M M1		Not used for this model.
52.	T M1	O	Tape MUTE. Goes to low when the tape is being played.
53.	S M1	O	Source MUTE. Goes to low three seconds after the power is on.
54.	AMS	O	AMS switch output. Goes to low when AMS is being used.
55.	MONITOR		Not used for this model. Connected to GND.
56.	HALF		Not used for this model. Connected to GND.
57.	DAT3	O	Outputs parallel data for the counter display.
58.	DAT2	O	Outputs parallel data for the counter display.
59.	DAT1	O	Outputs parallel data for the counter display.
60.	DATO	O	Outputs parallel data for the counter display.
61.	DATB	O	Outputs parallel data for the counter display.
62.	CLK	O	Clock output to transmit the parallel data.
63.	LATCH	O	Output for latching the transmitted data.
64.	CAL IN	I	CAL switch input.

4-2. CIRCUIT BOARDS LOCATION

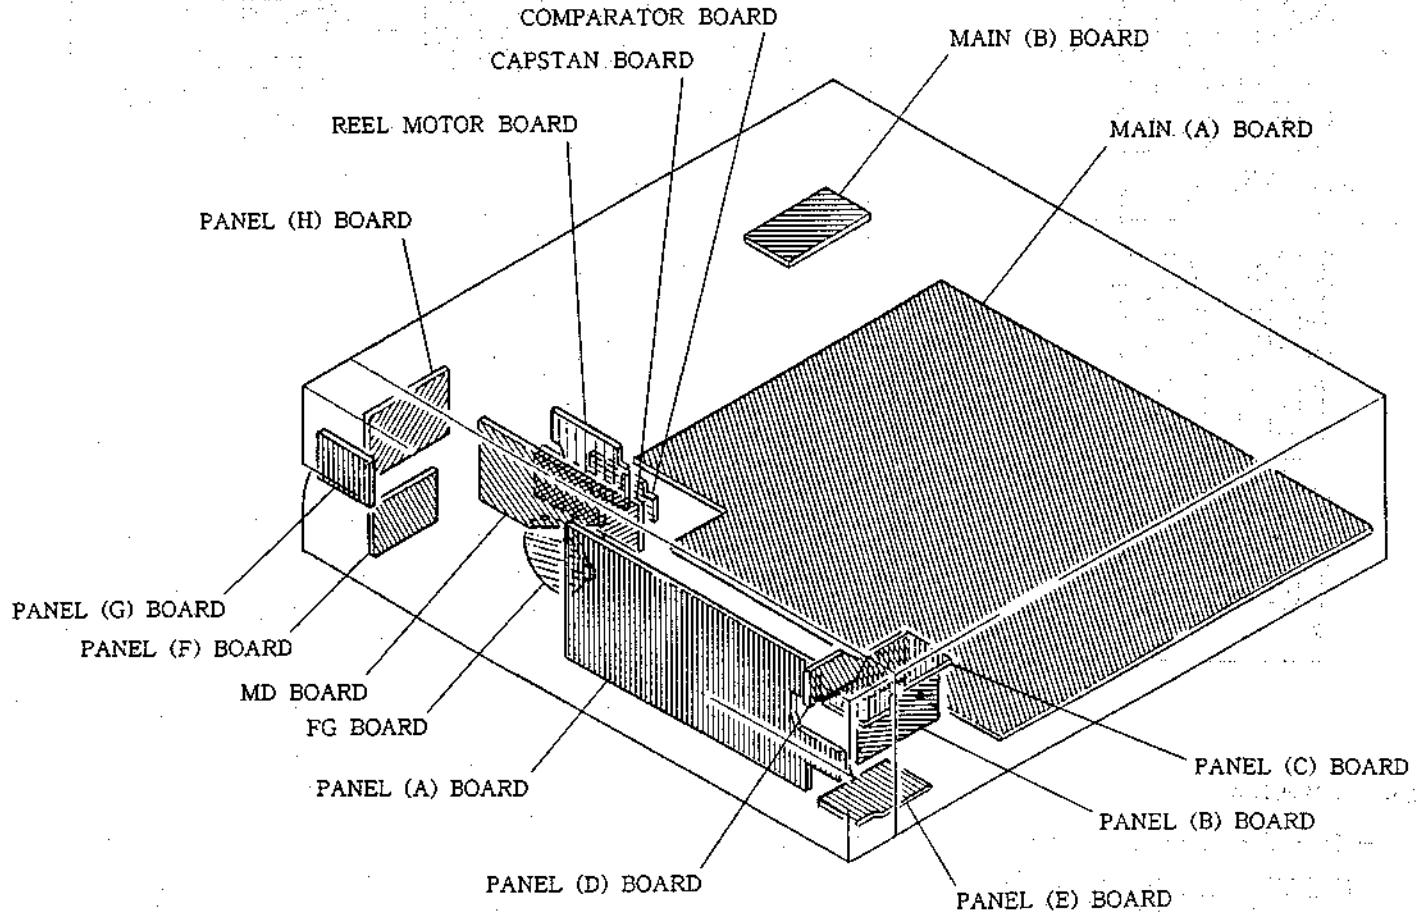


4-3. IC BLOCK DIAGRAMS


IC502, 552 CX20188

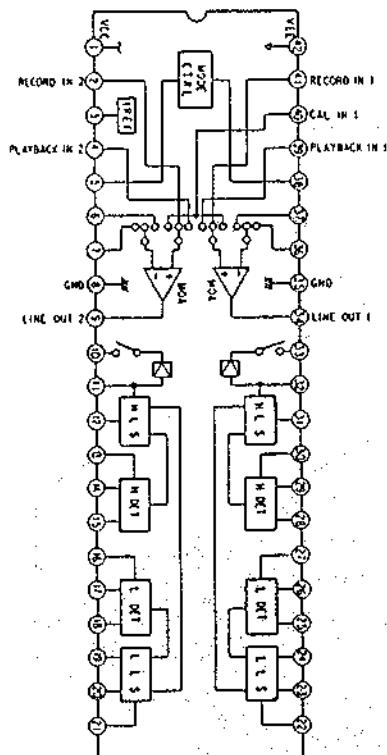


IC902B CX20174

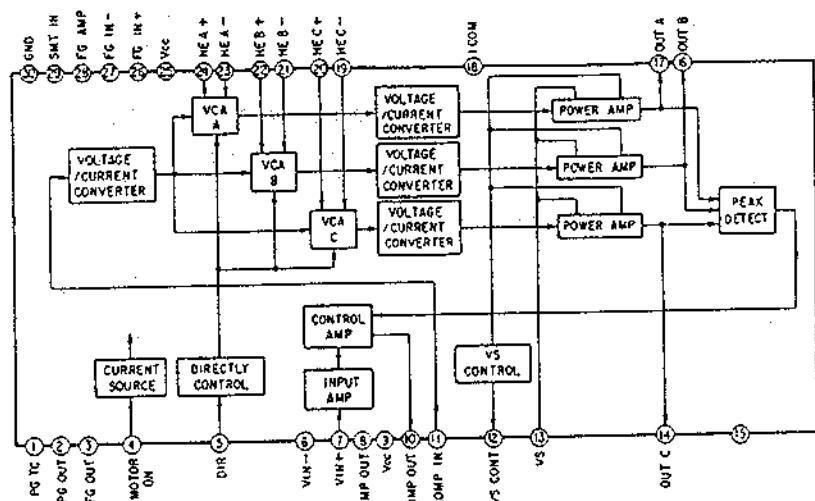

IC952 TC 9142P

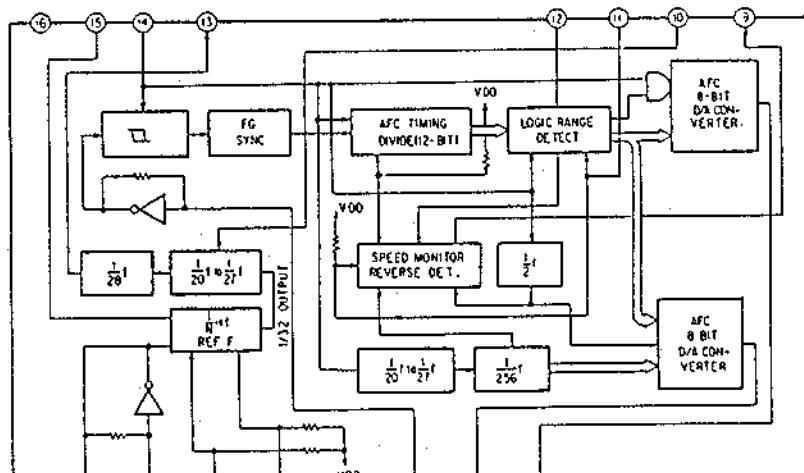


IC554 μ PC1297CA

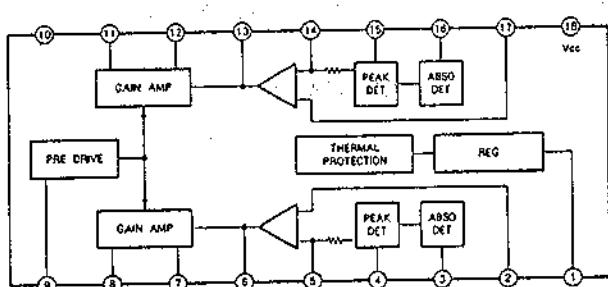


IC802 BA62198



IC803 LB1641

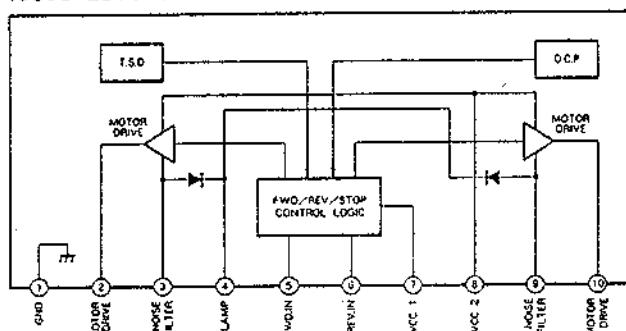

4-4. BLOCK DIAGRAMS

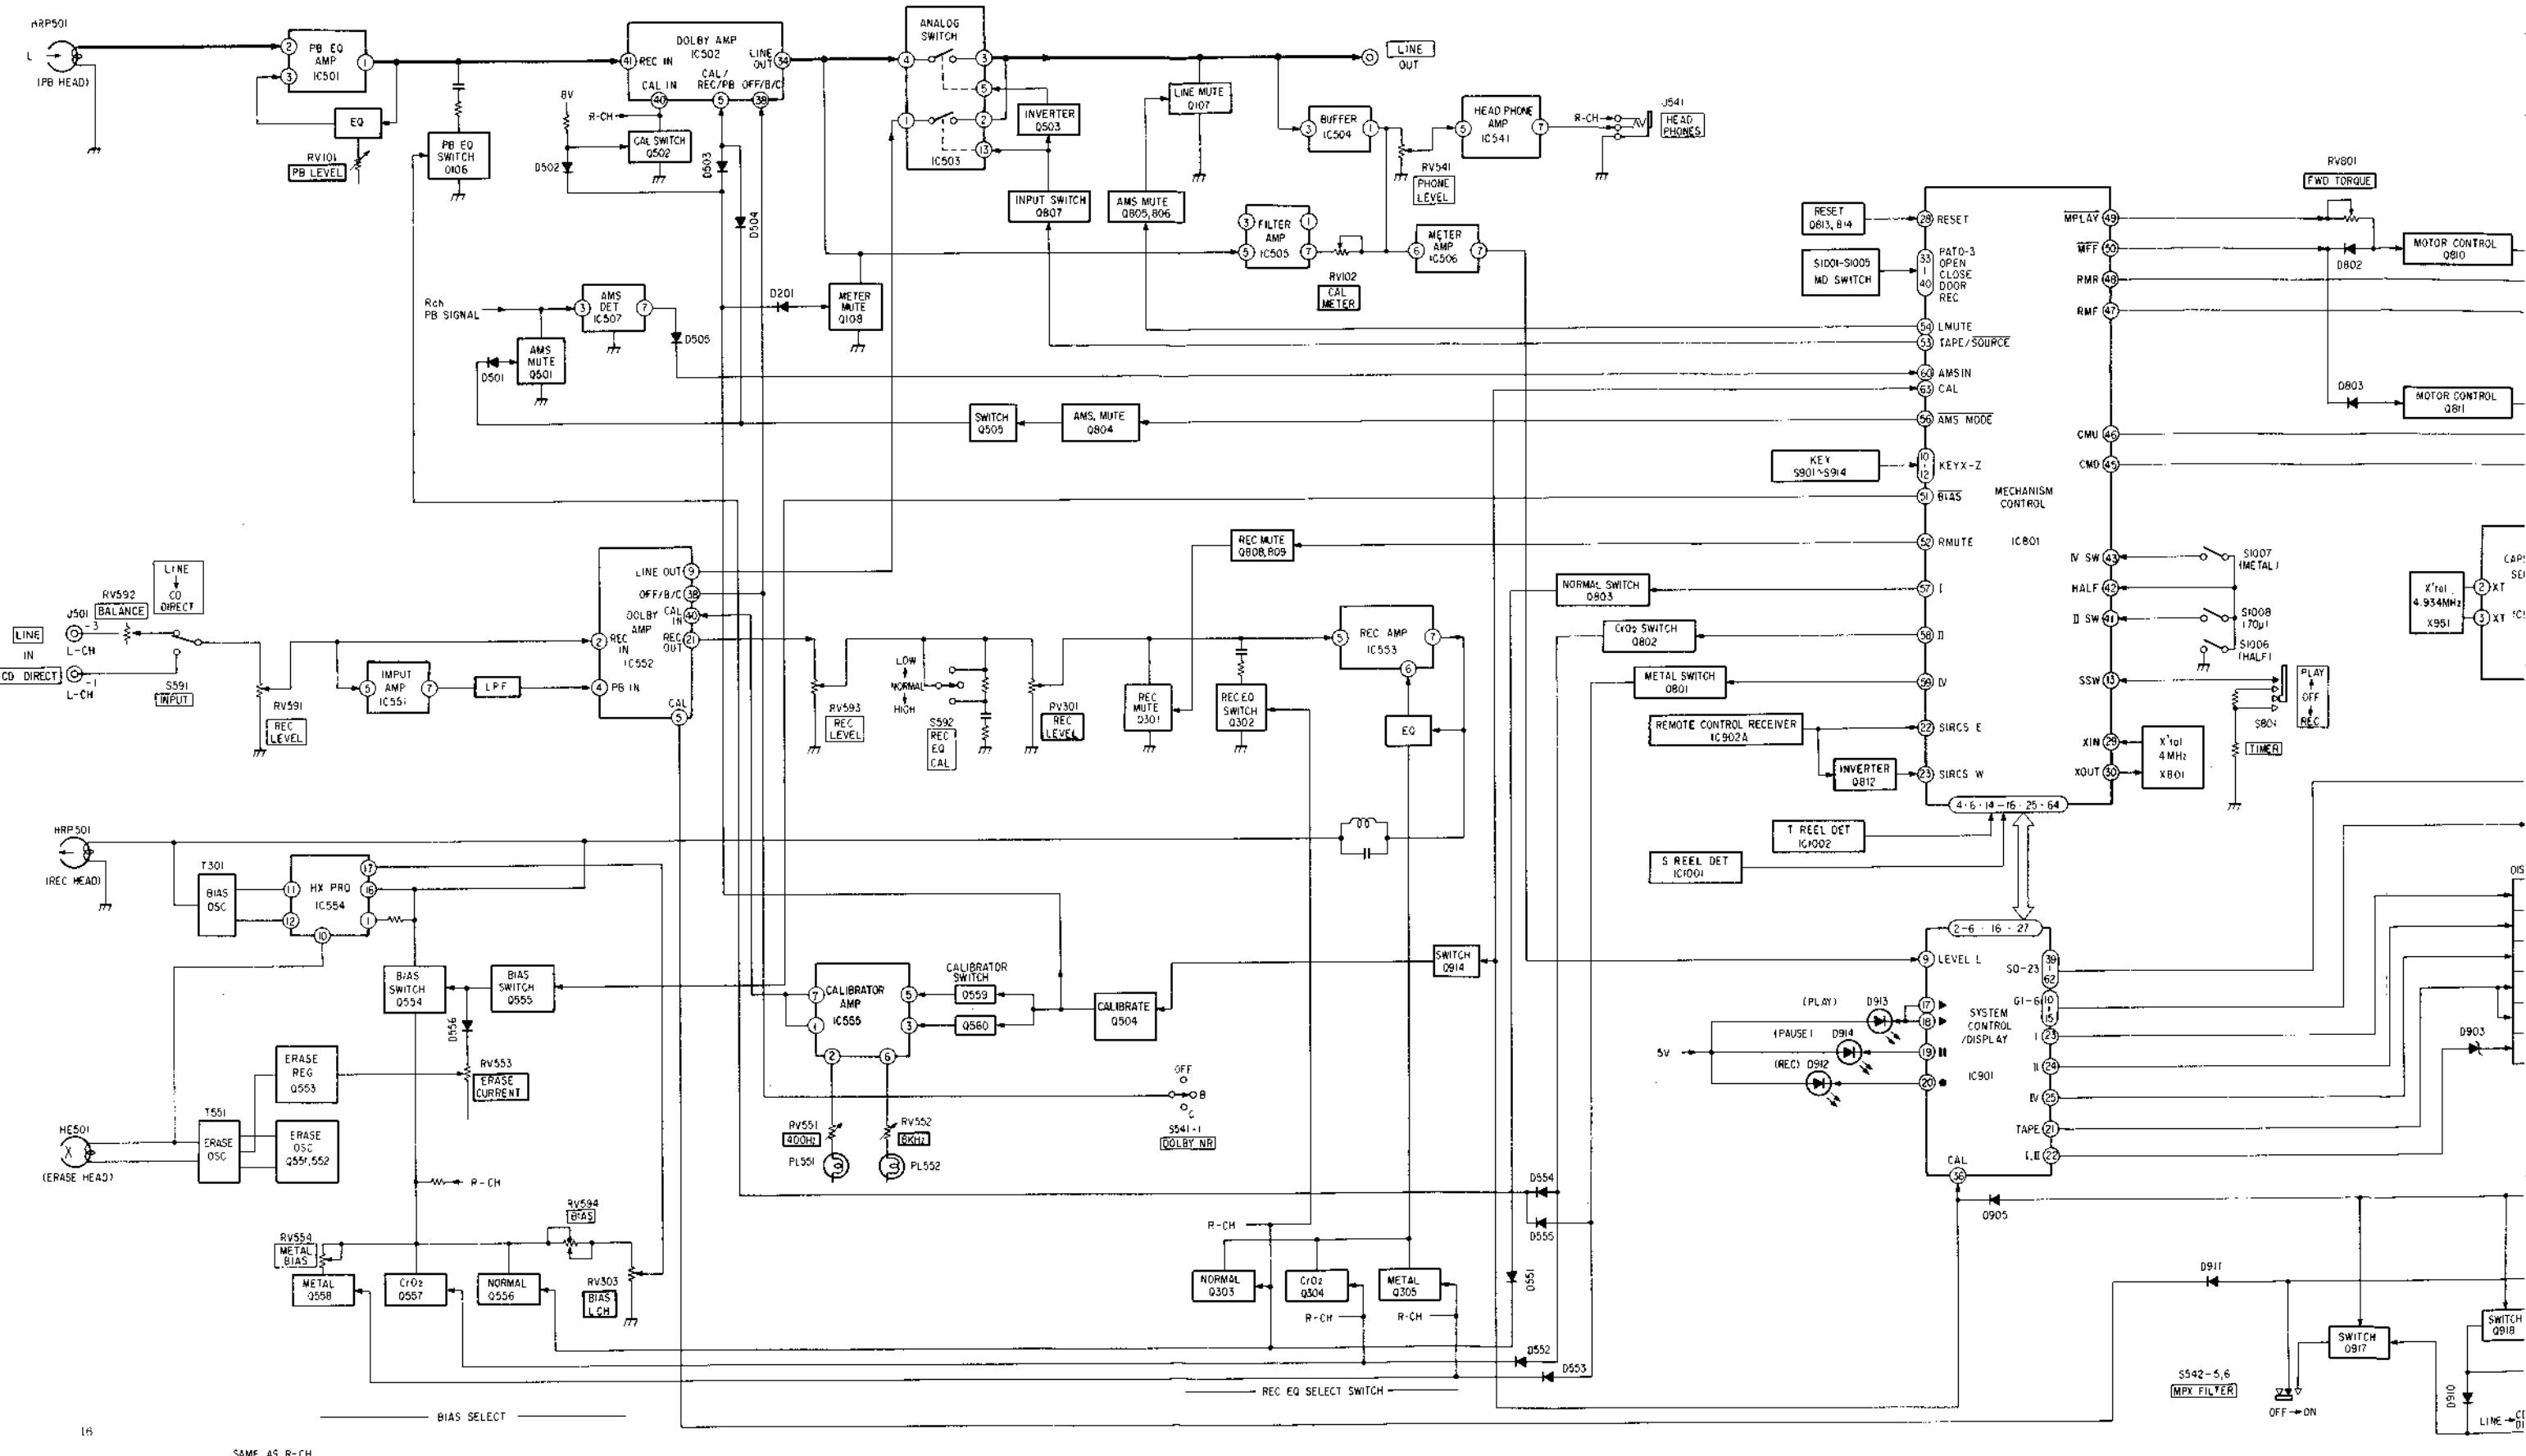


4-5. SEMICONDUCTOR LEAD LAYOUTS

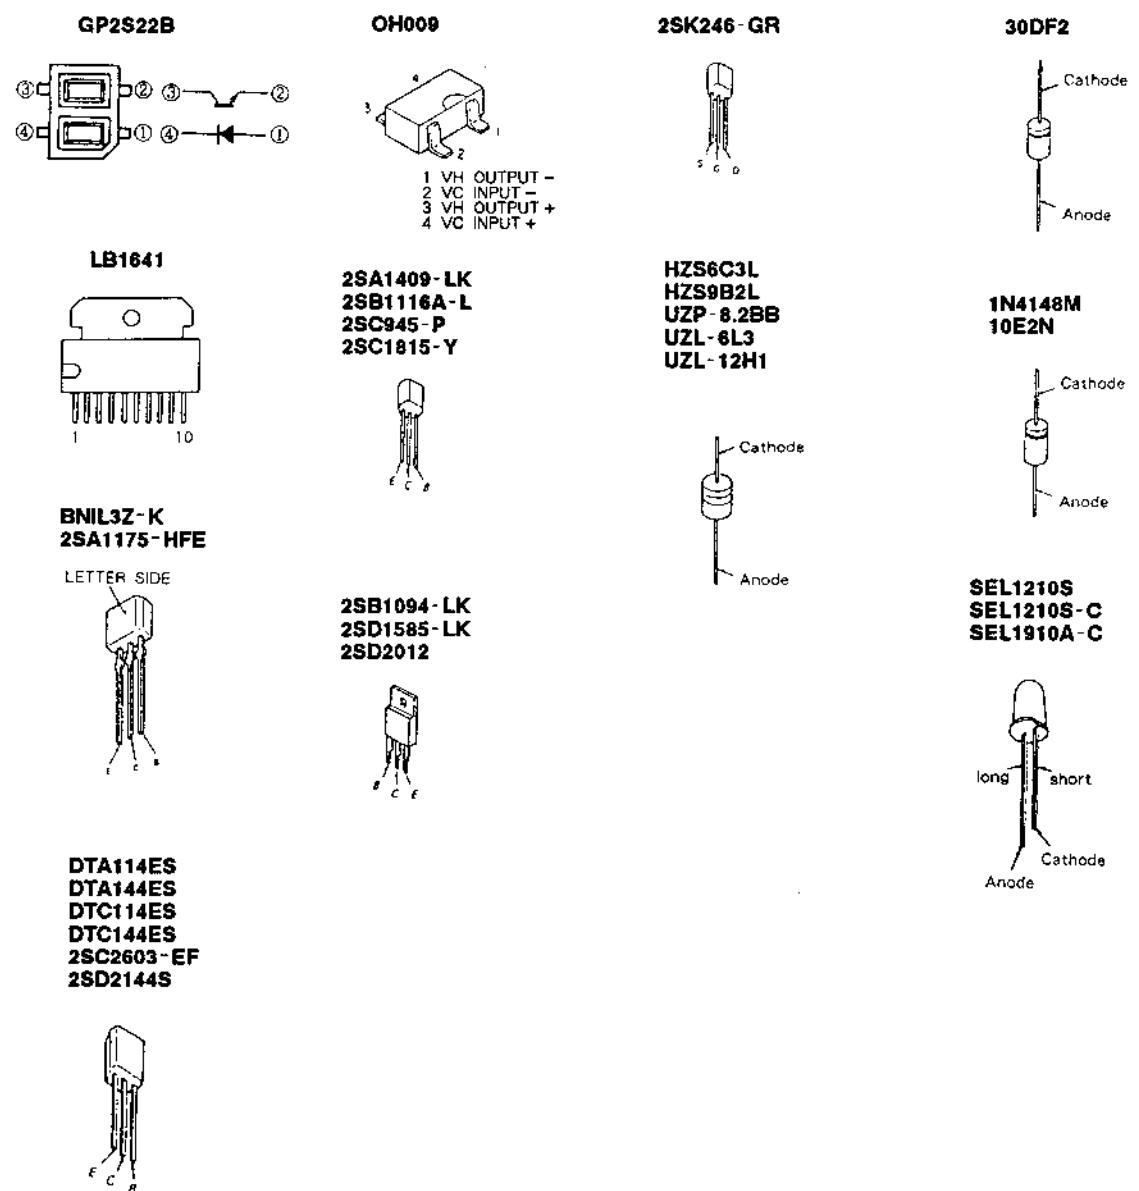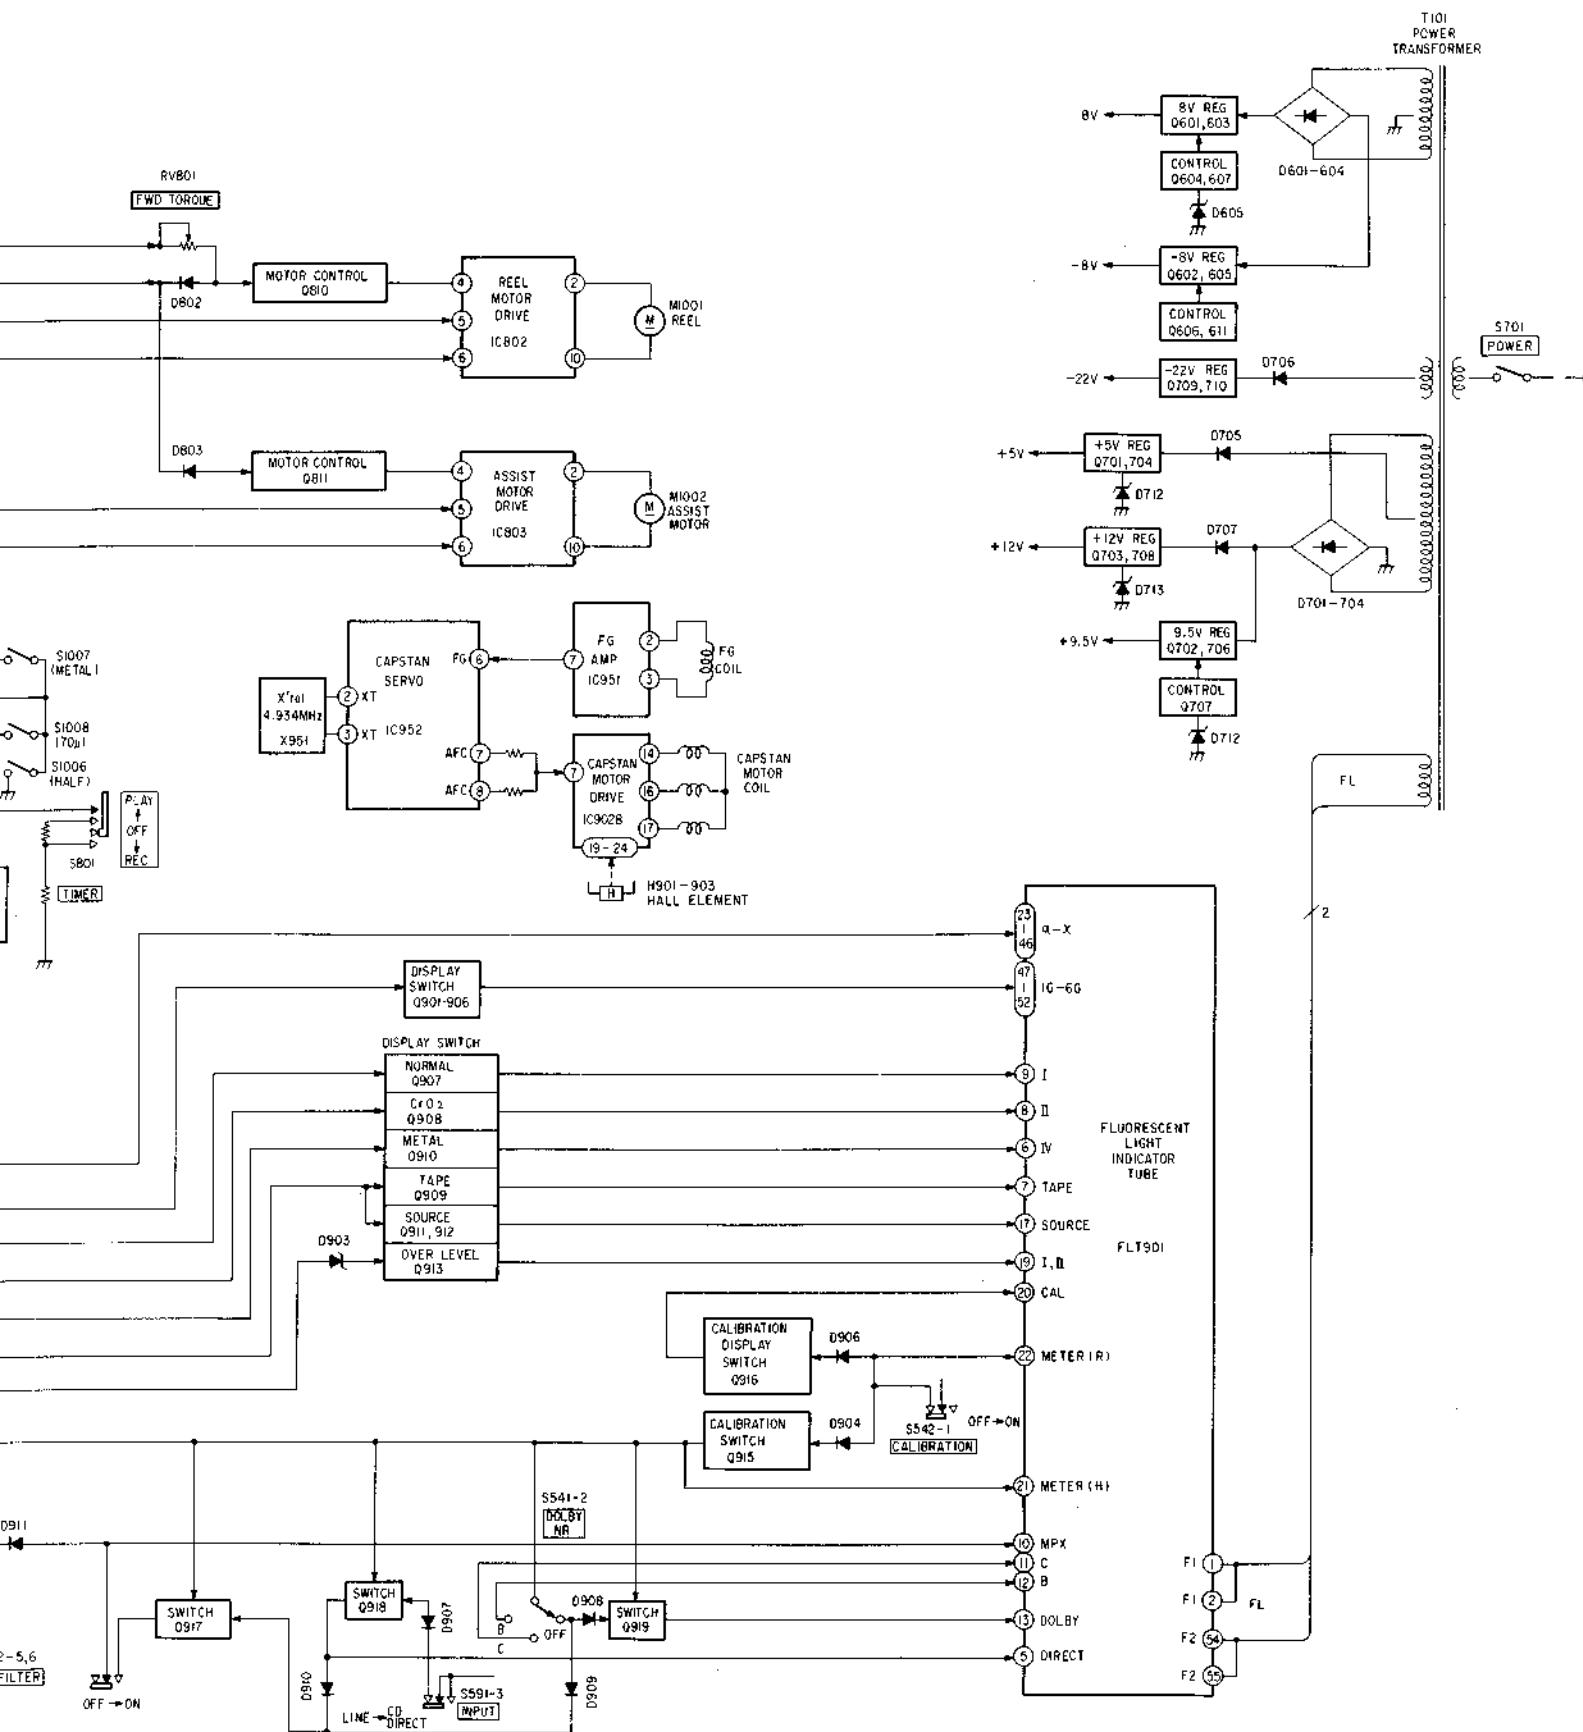

4-6. PRINTED WIRING BOARDS - MAIN SECTION - • See page 21 for Circuit Boards Location. • See page 26 for Semiconductor Lead Layouts.


• Semiconductor Location


Ref. No.	Location	Ref. No.	Location
D101	D-16	Q105	B-20
D102	E-14	Q106	B-18
D103	E-14	Q107	C-15
D104	E-13	Q108	C-15
D201	D-16	Q201	E-19
D202	H-14	Q202	E-19
D203	F-14	Q203	E-20
D204	E-13	Q204	E-20
D501	F-18	Q205	E-20
D502	F-18	Q206	F-18
D503	E-18	Q207	D-15
D504	E-18	Q208	D-16
D505	E-17	Q301	H-17
D506	F-15	Q302	H-17
D507	F-16	Q303	H-17
D508	F-14	Q304	H-18
D509	E-16	Q305	H-18
D551	G-21	Q306	H-19
D552	G-21	Q401	J-17
D553	G-20	Q402	J-17
D554	G-21	Q403	J-17
D555	G-20	Q404	I-18
D556	J-21	Q405	I-18
D601	D-23	Q406	I-19
D602	D-23	Q501	F-19
D603	C-23	Q502	F-18
D604	C-23	Q503	C-15
D605	E-21	Q504	H-14
D701	D-24	Q505	F-17
D702	D-24	Q551	J-20
D703	E-23	Q552	J-20
D704	E-23	Q553	J-20
D705	D-24	Q554	I-21
D706	E-24	Q555	I-21
D707	D-25	Q556	G-21
D708	B-25	Q557	G-20
D712	B-24	Q558	G-20
D713	C-26	Q559	E-15
D714	D-26	Q560	E-16
D715	D-25	Q601	E-21
D716	E-26	Q602	B-21
D801	G-25	Q603	E-21
D802	G-24	Q604	B-21
D803	G-24	Q605	E-21
IC501	D-19	Q607	E-21
IC502	C-17	Q611	C-21
IC503	C-14	Q701	B-23
IC504	D-14	Q702	B-24
IC505	D-15	Q703	B-25
IC506	E-14	Q704	B-23
IC507	E-17	Q706	B-24
IC541	B-2	Q707	B-25
IC551	I-14	Q708	B-26
IC552	I-15	Q709	D-25
IC553	I-18	Q710	D-25
IC554	I-21	Q801	G-26
IC555	E-15	Q802	G-25
IC801	H-24	Q803	G-25
IC802	F-23	Q804	G-25
IC803	G-23	Q805	G-25
IC902A	J-6	Q806	G-25
IC951	J-3	Q807	G-25
IC952	J-2	Q808	G-24
IC1001	H-10	Q809	G-24
IC1002	H-9	Q810	F-24
Q101	B-20	Q811	G-24
Q102	B-19	Q812	I-24
Q103	B-20	Q813	I-23
Q104	B-20	Q814	I-23

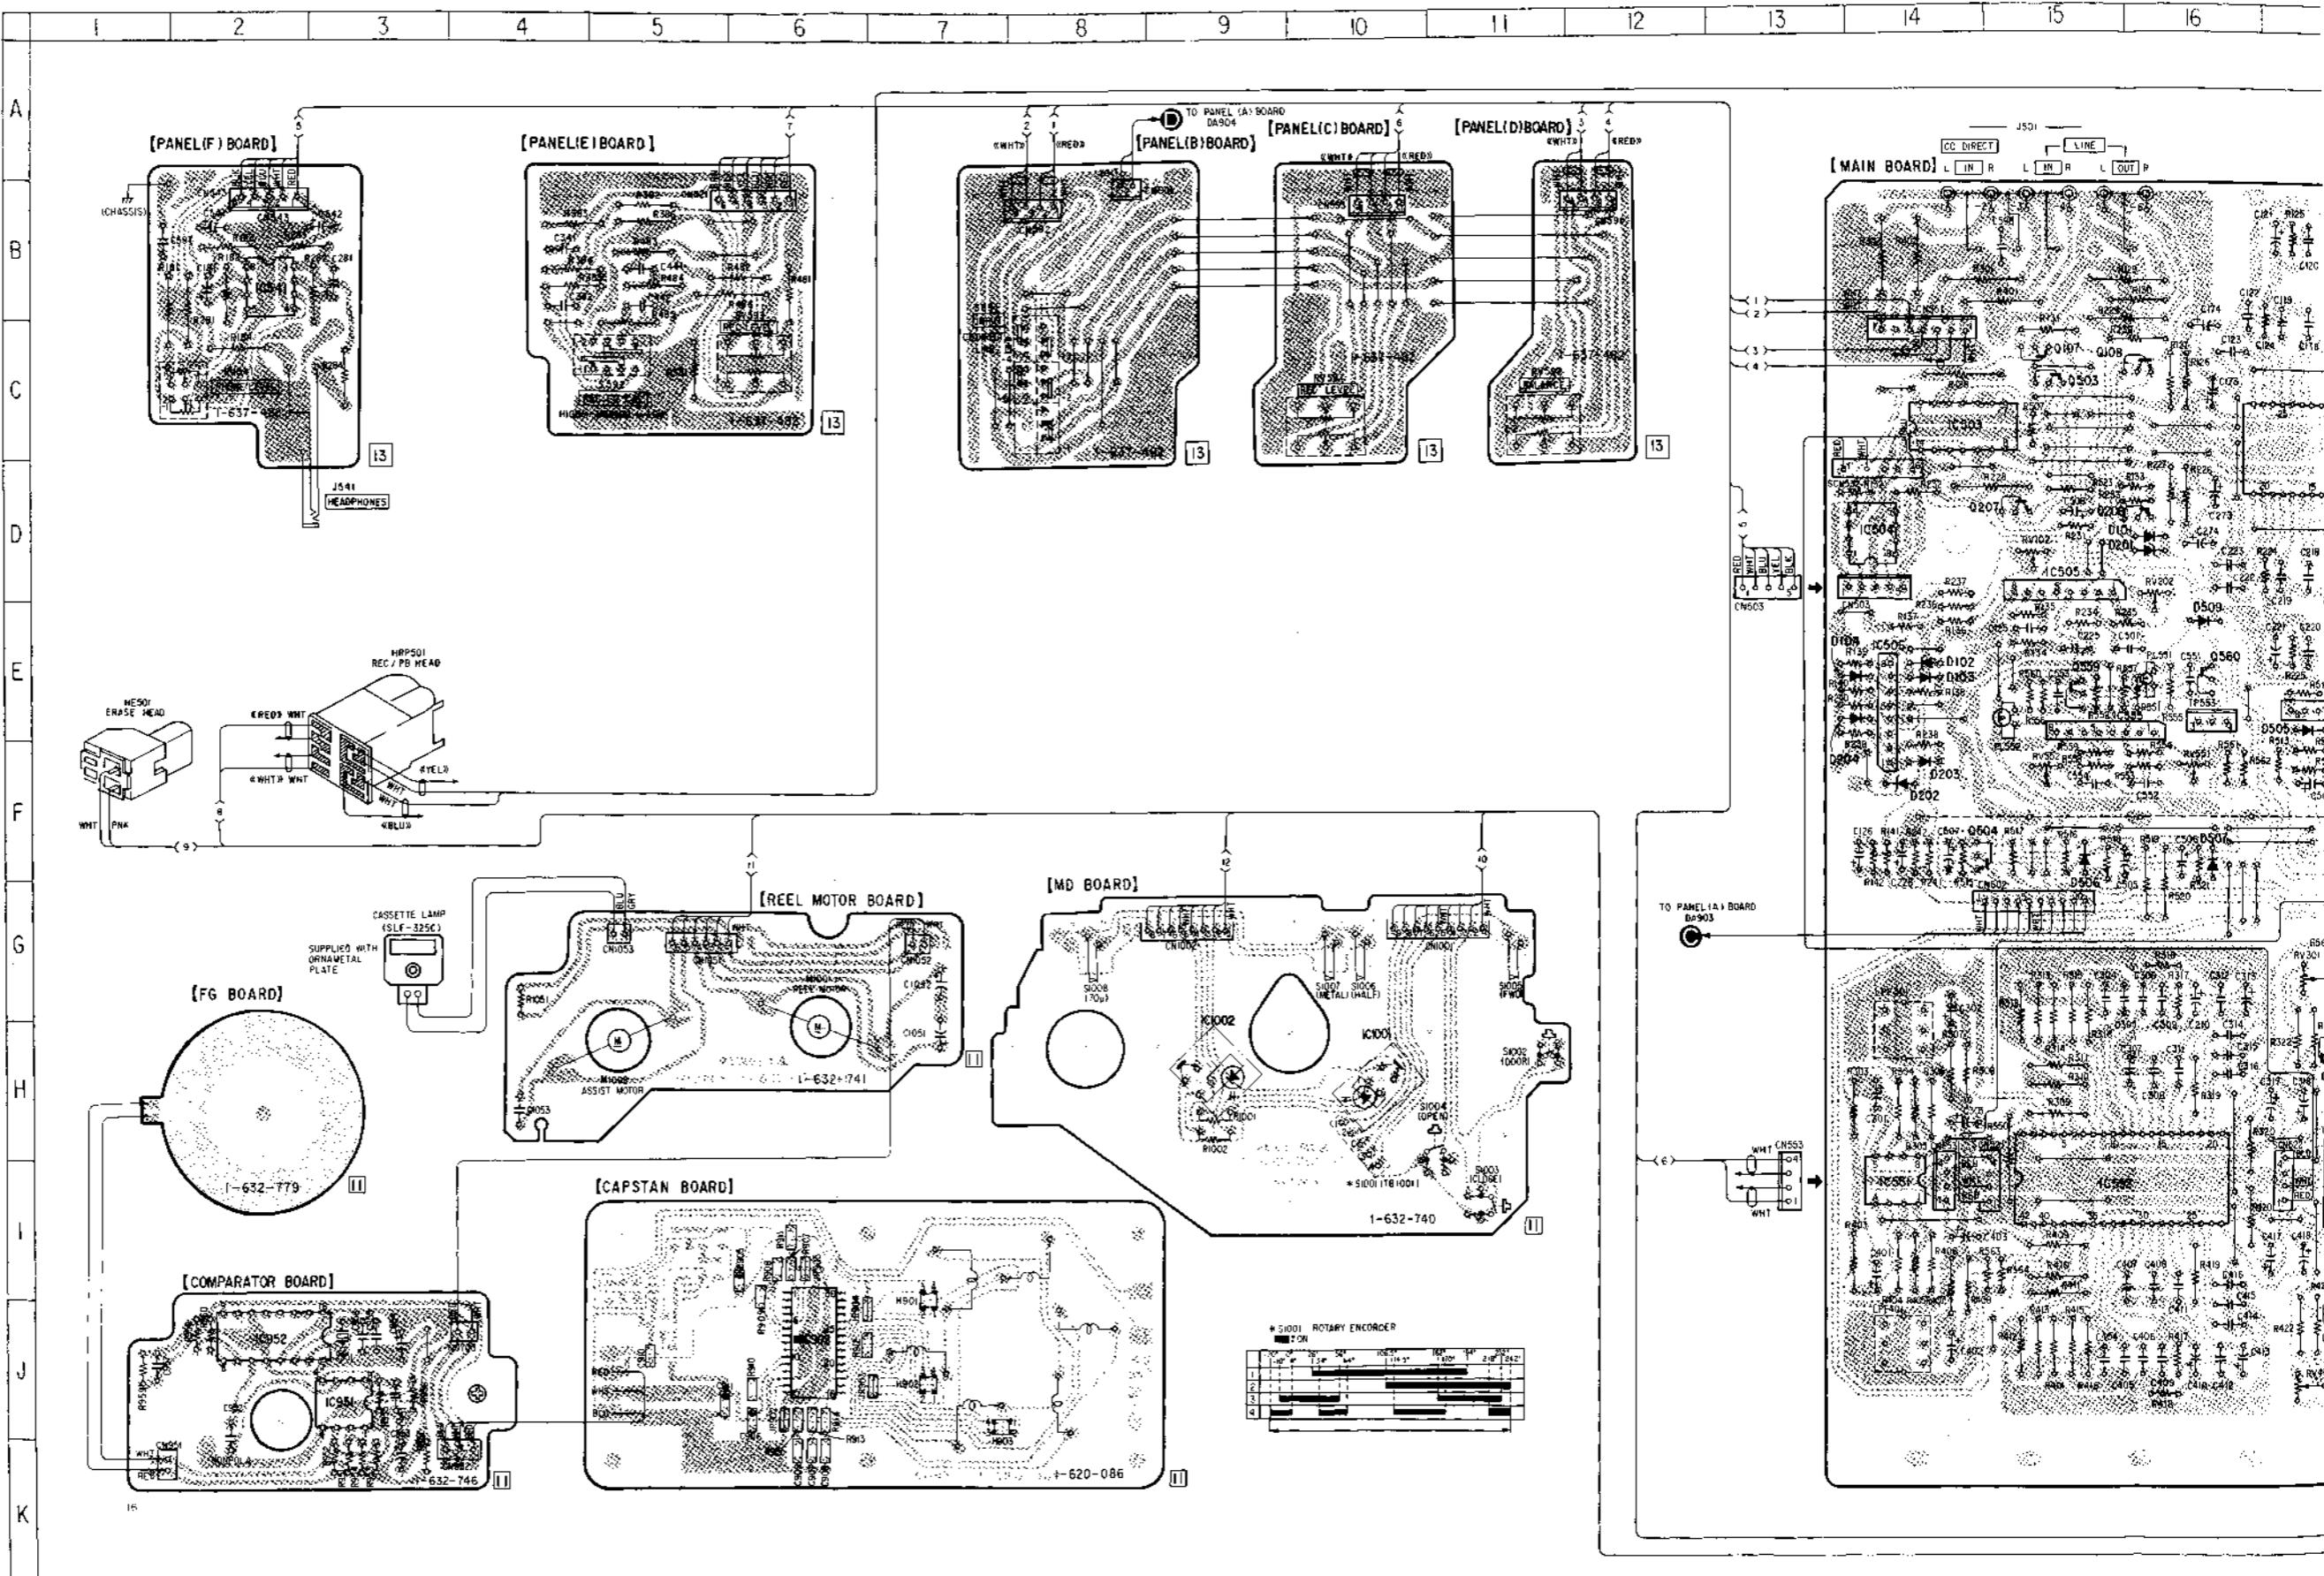


Note on Mounting Diagram:

- : parts extracted from the component side.
- : parts mounted on the conductor side.

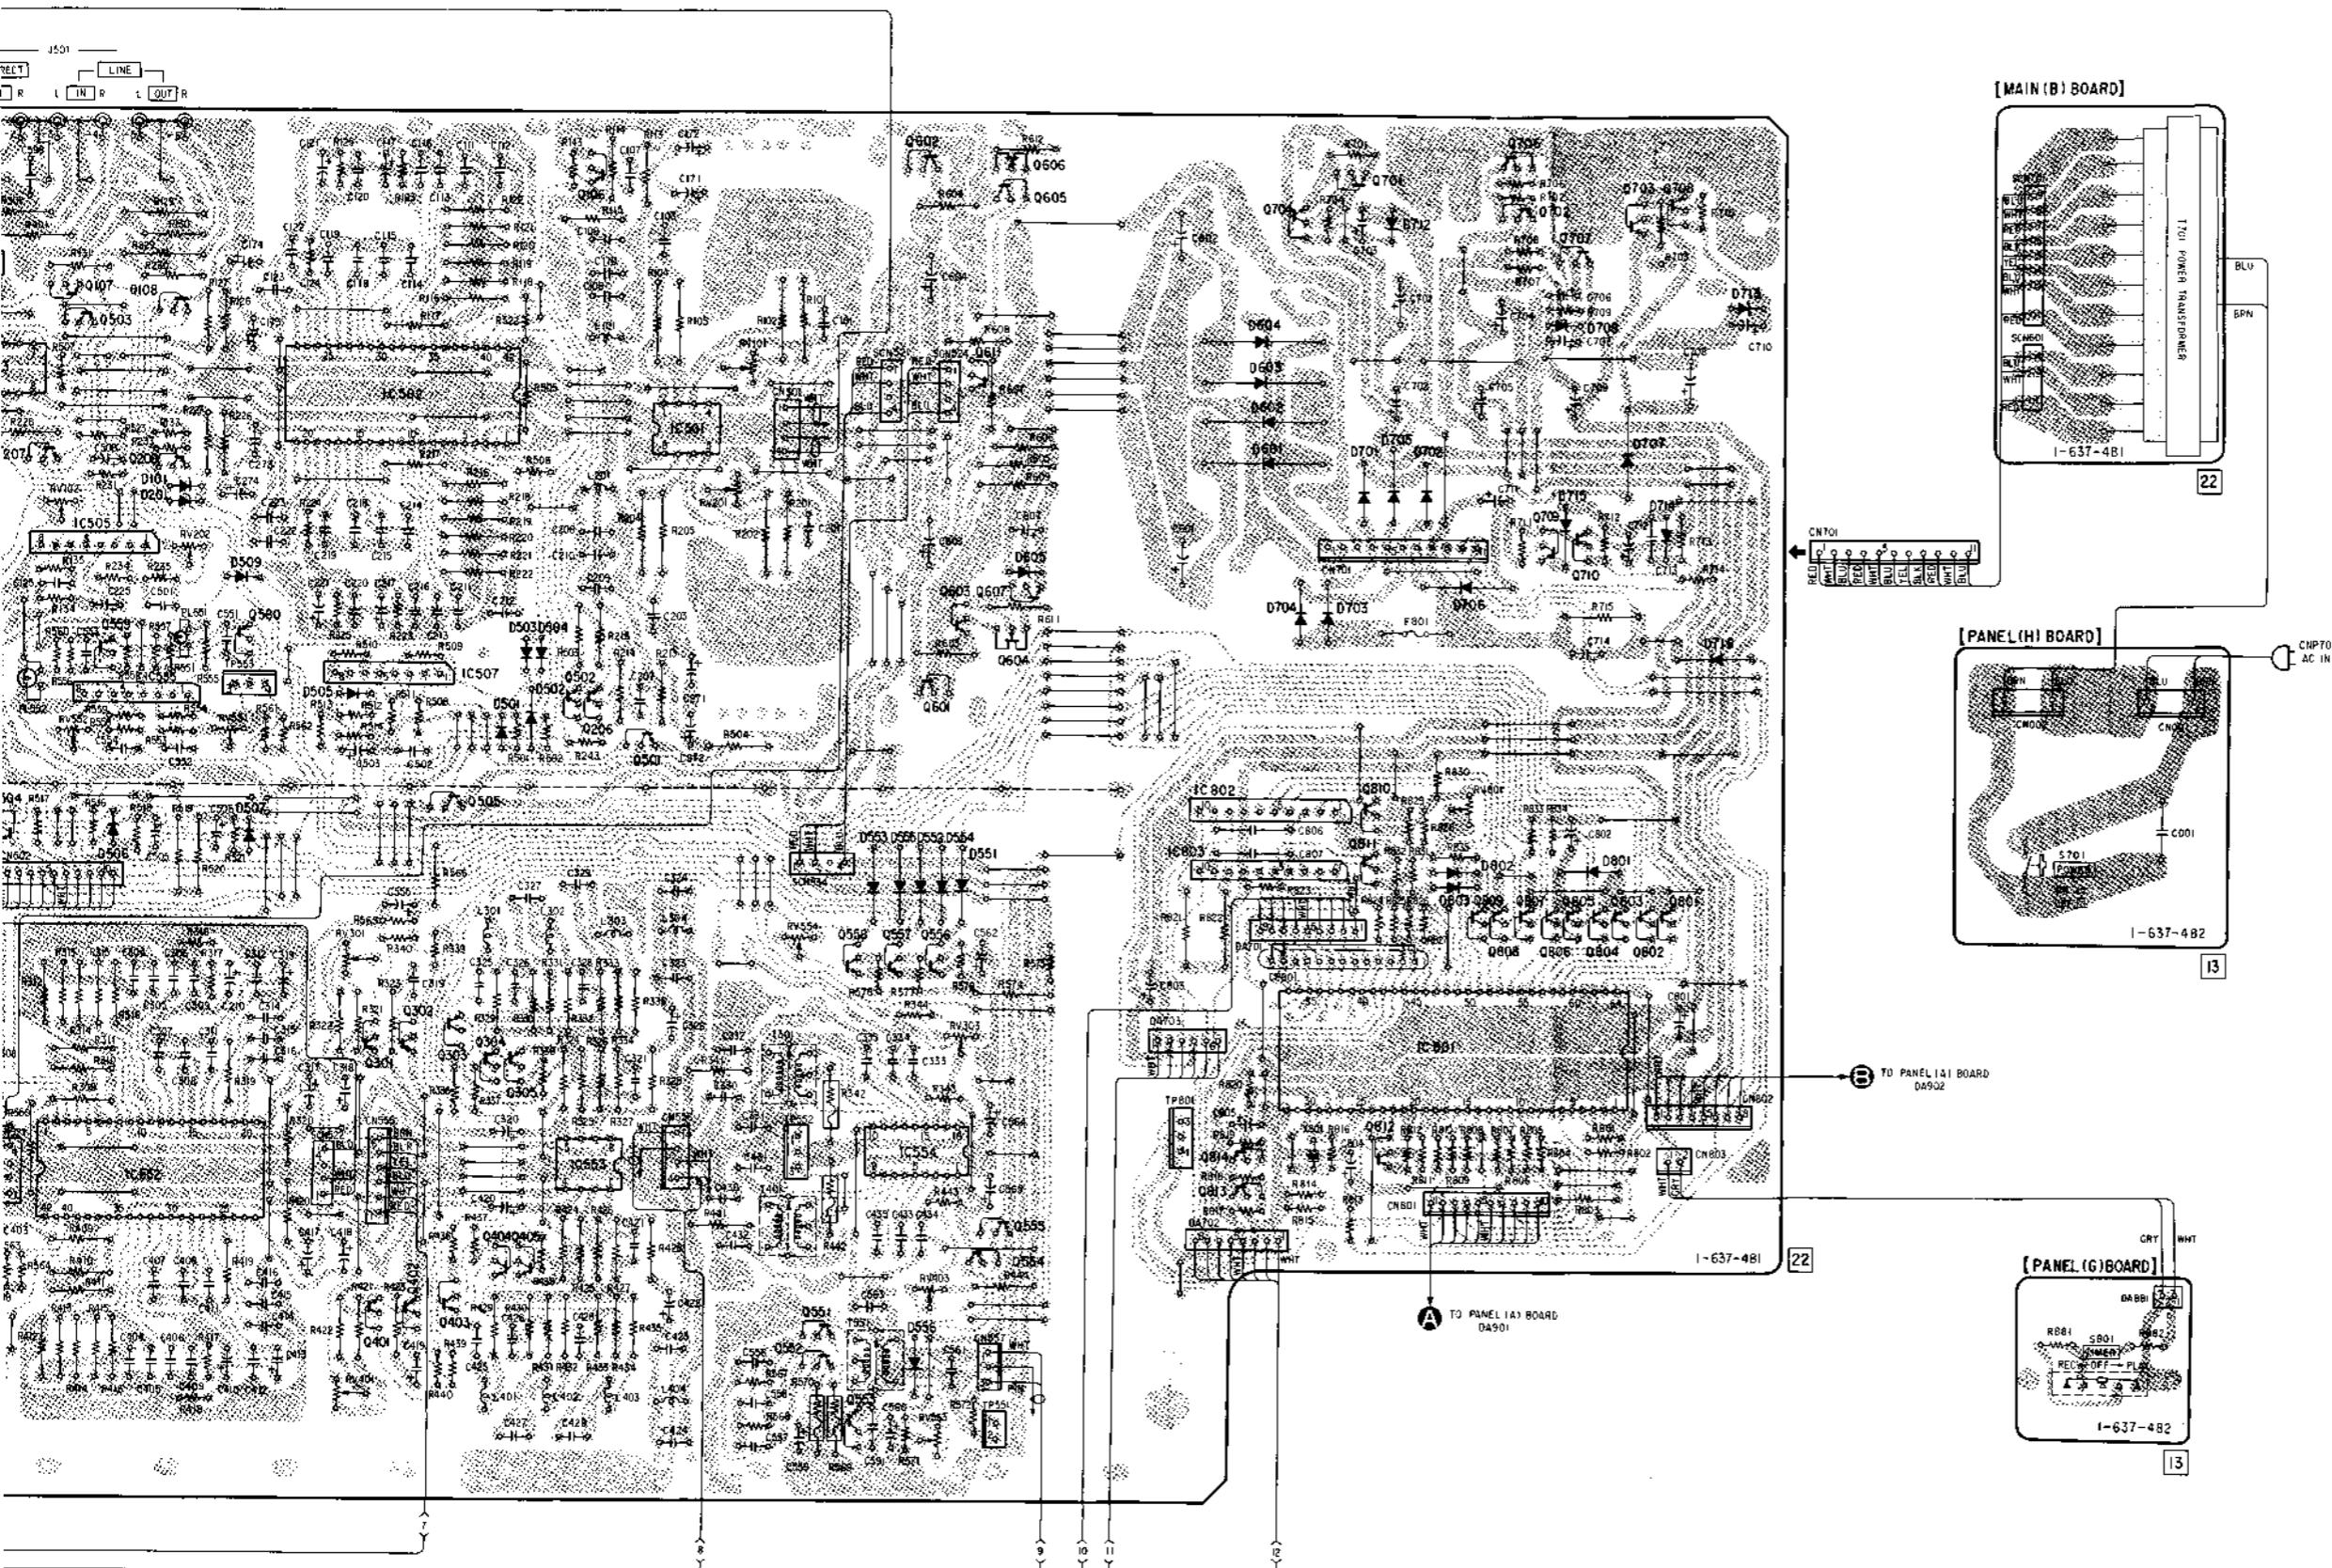

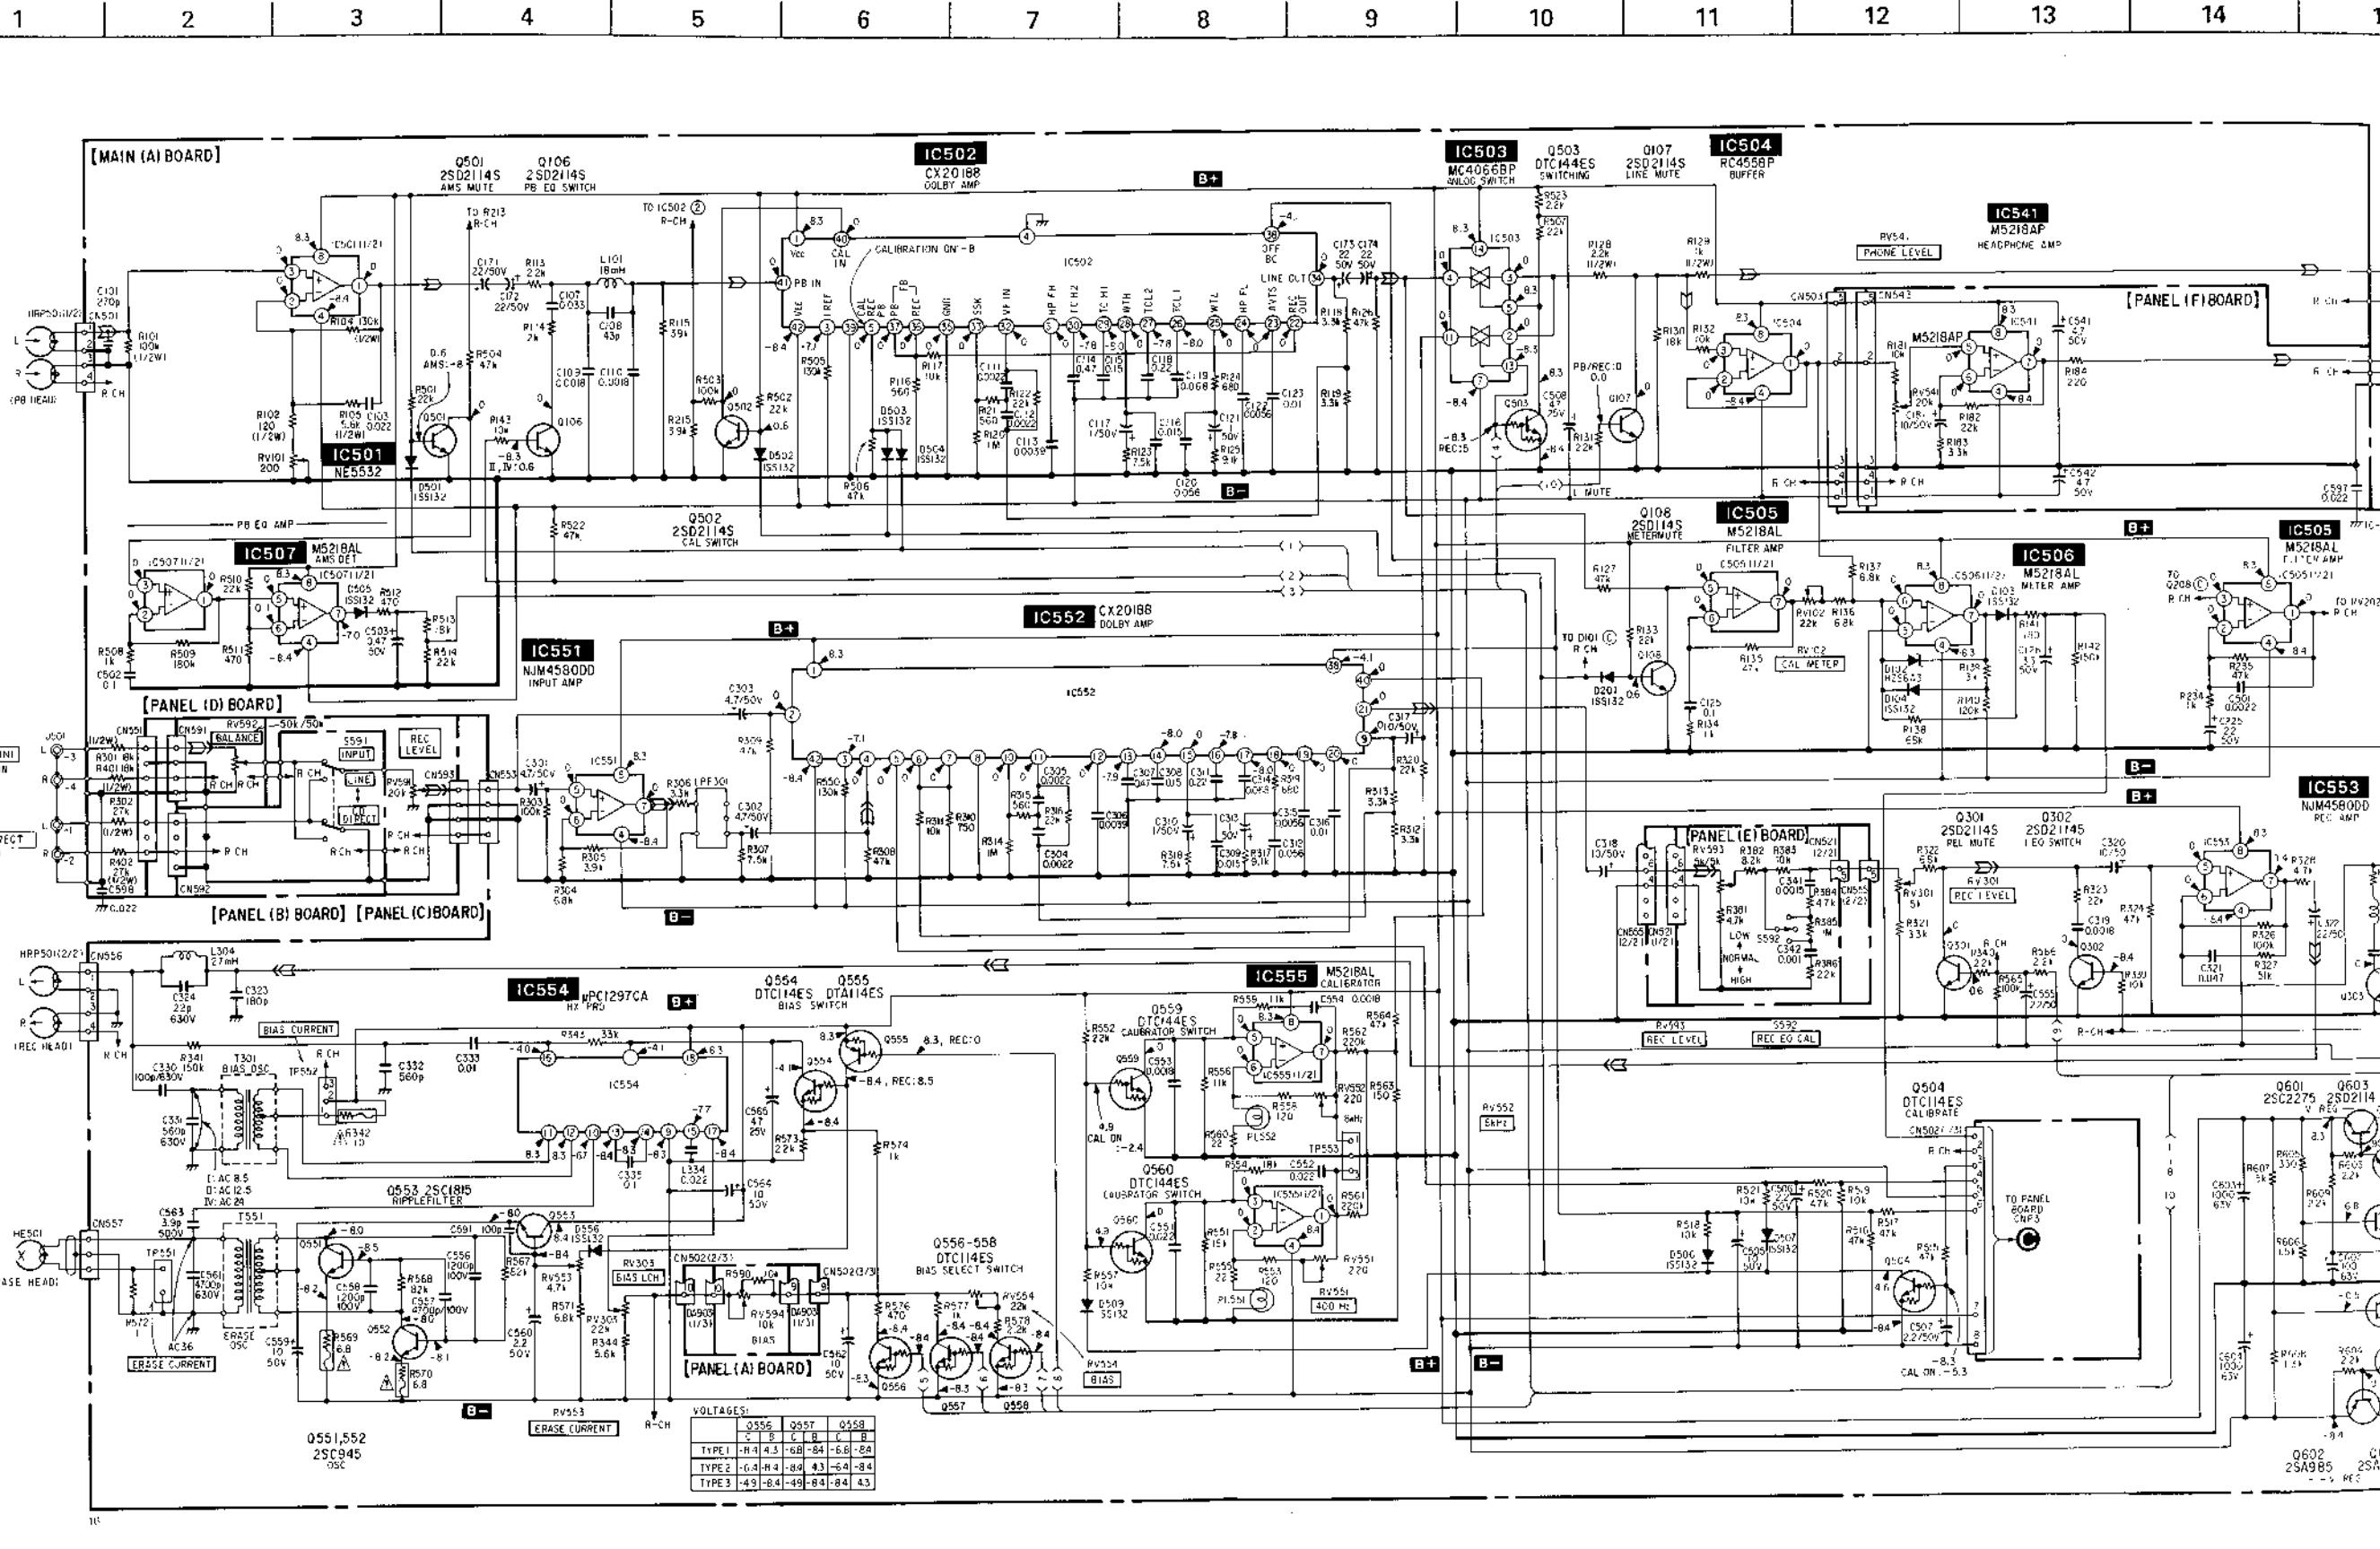

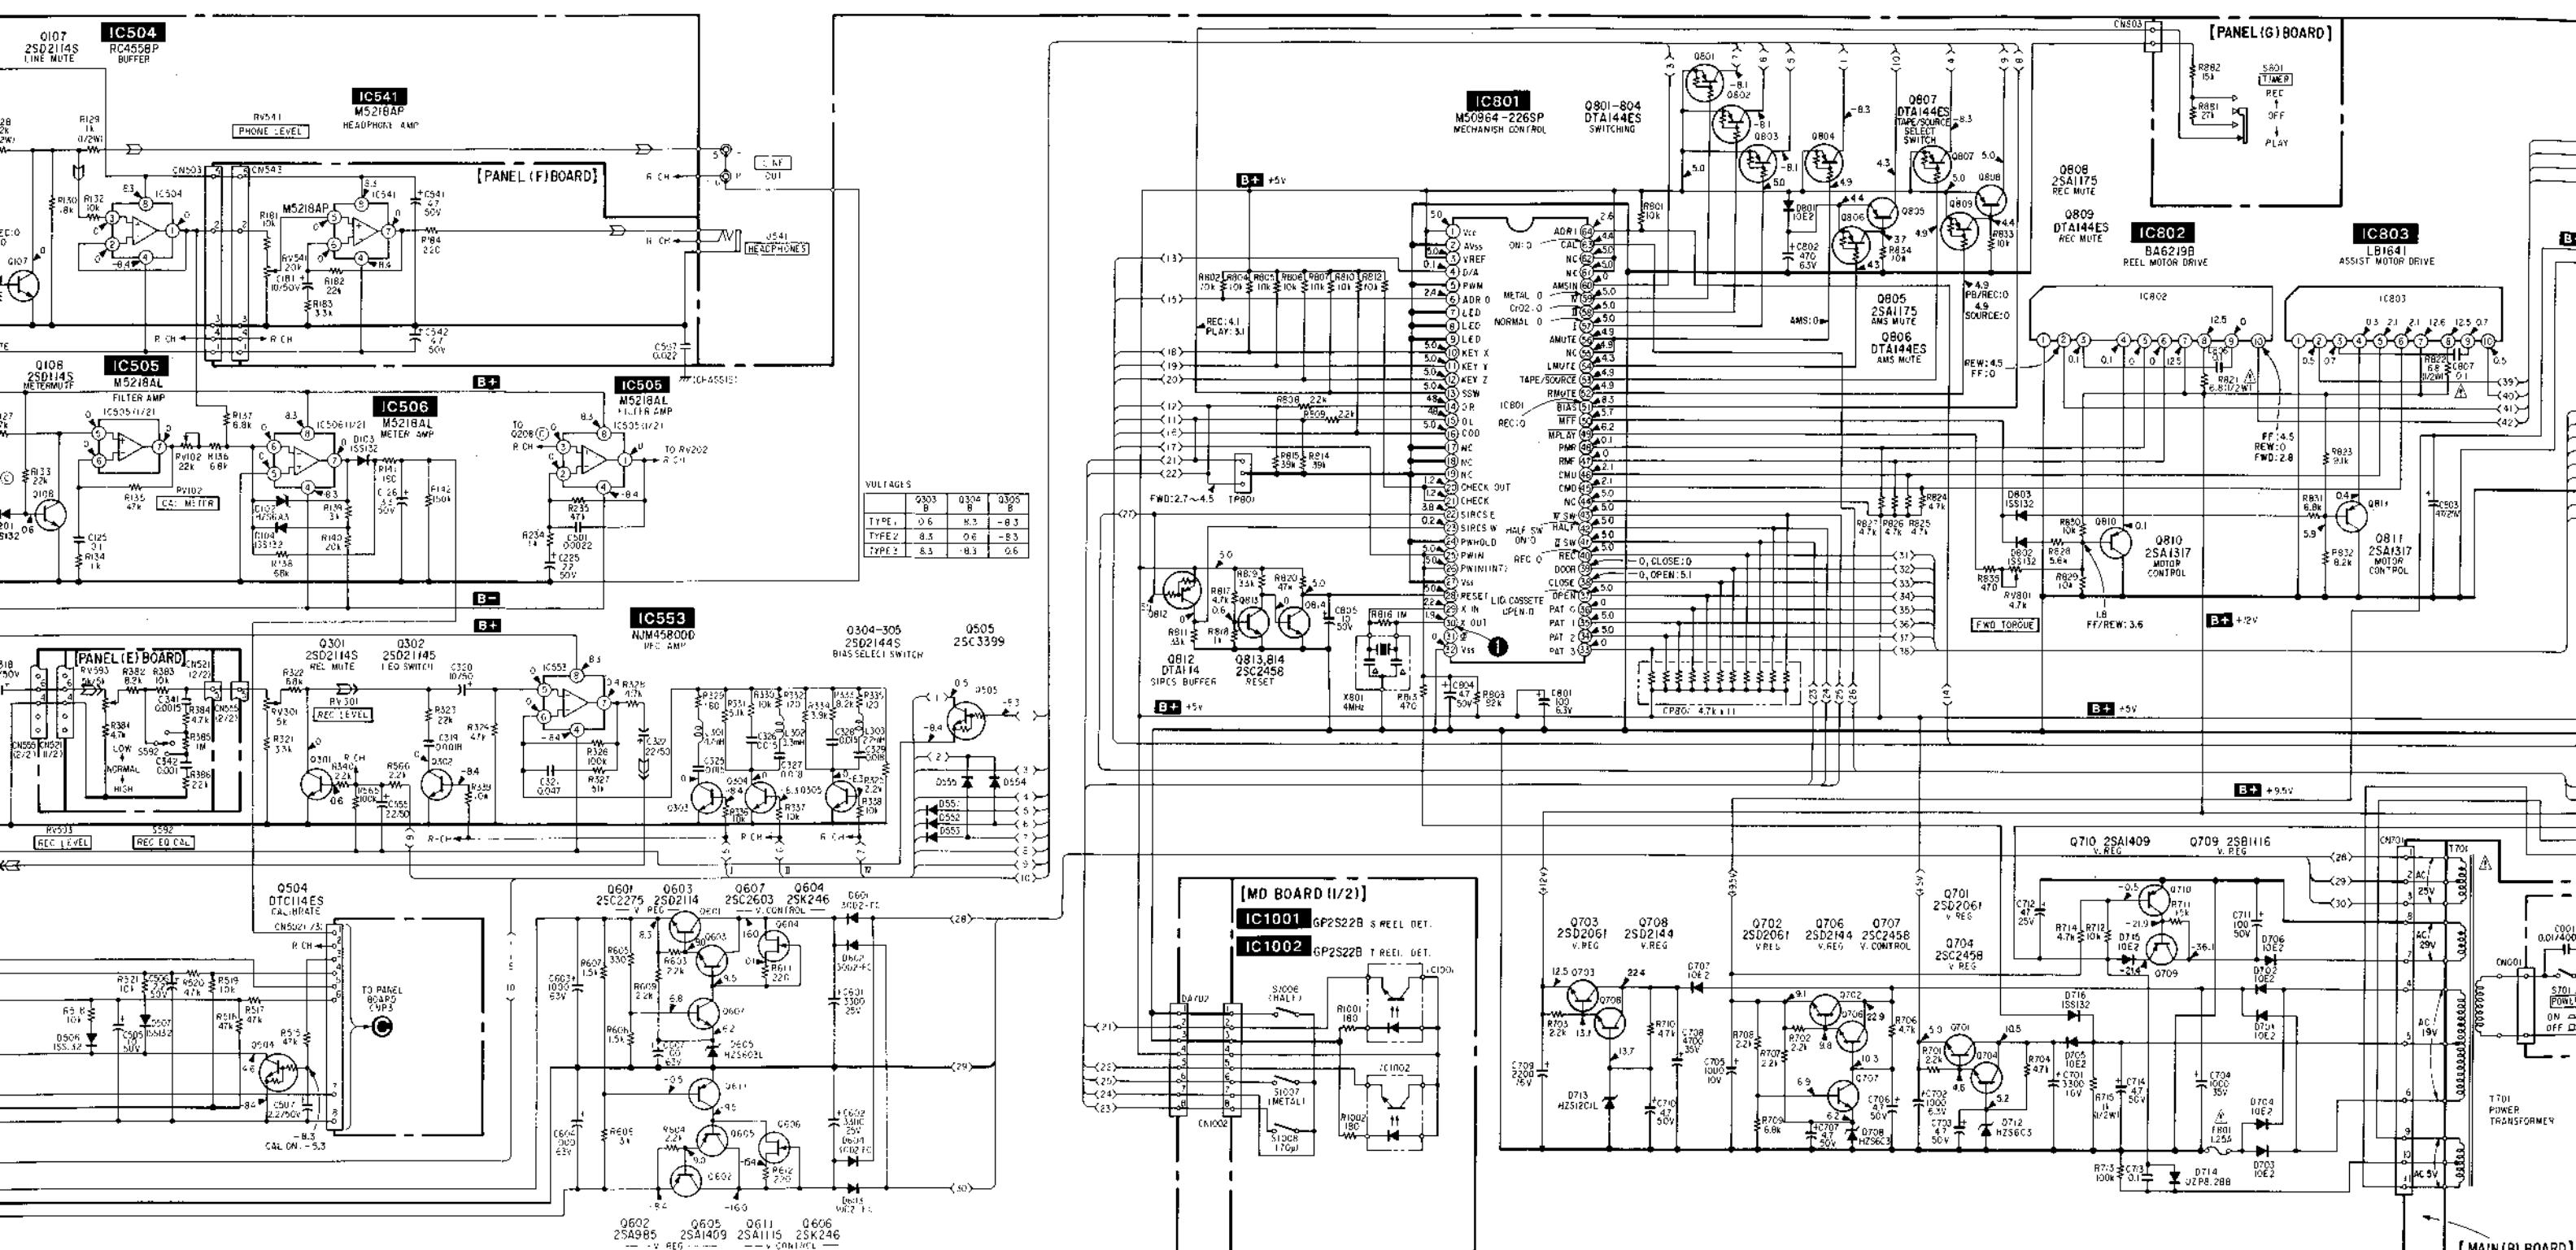

22

23

24

25

26

27

28

29

30


31

32

33

34



35

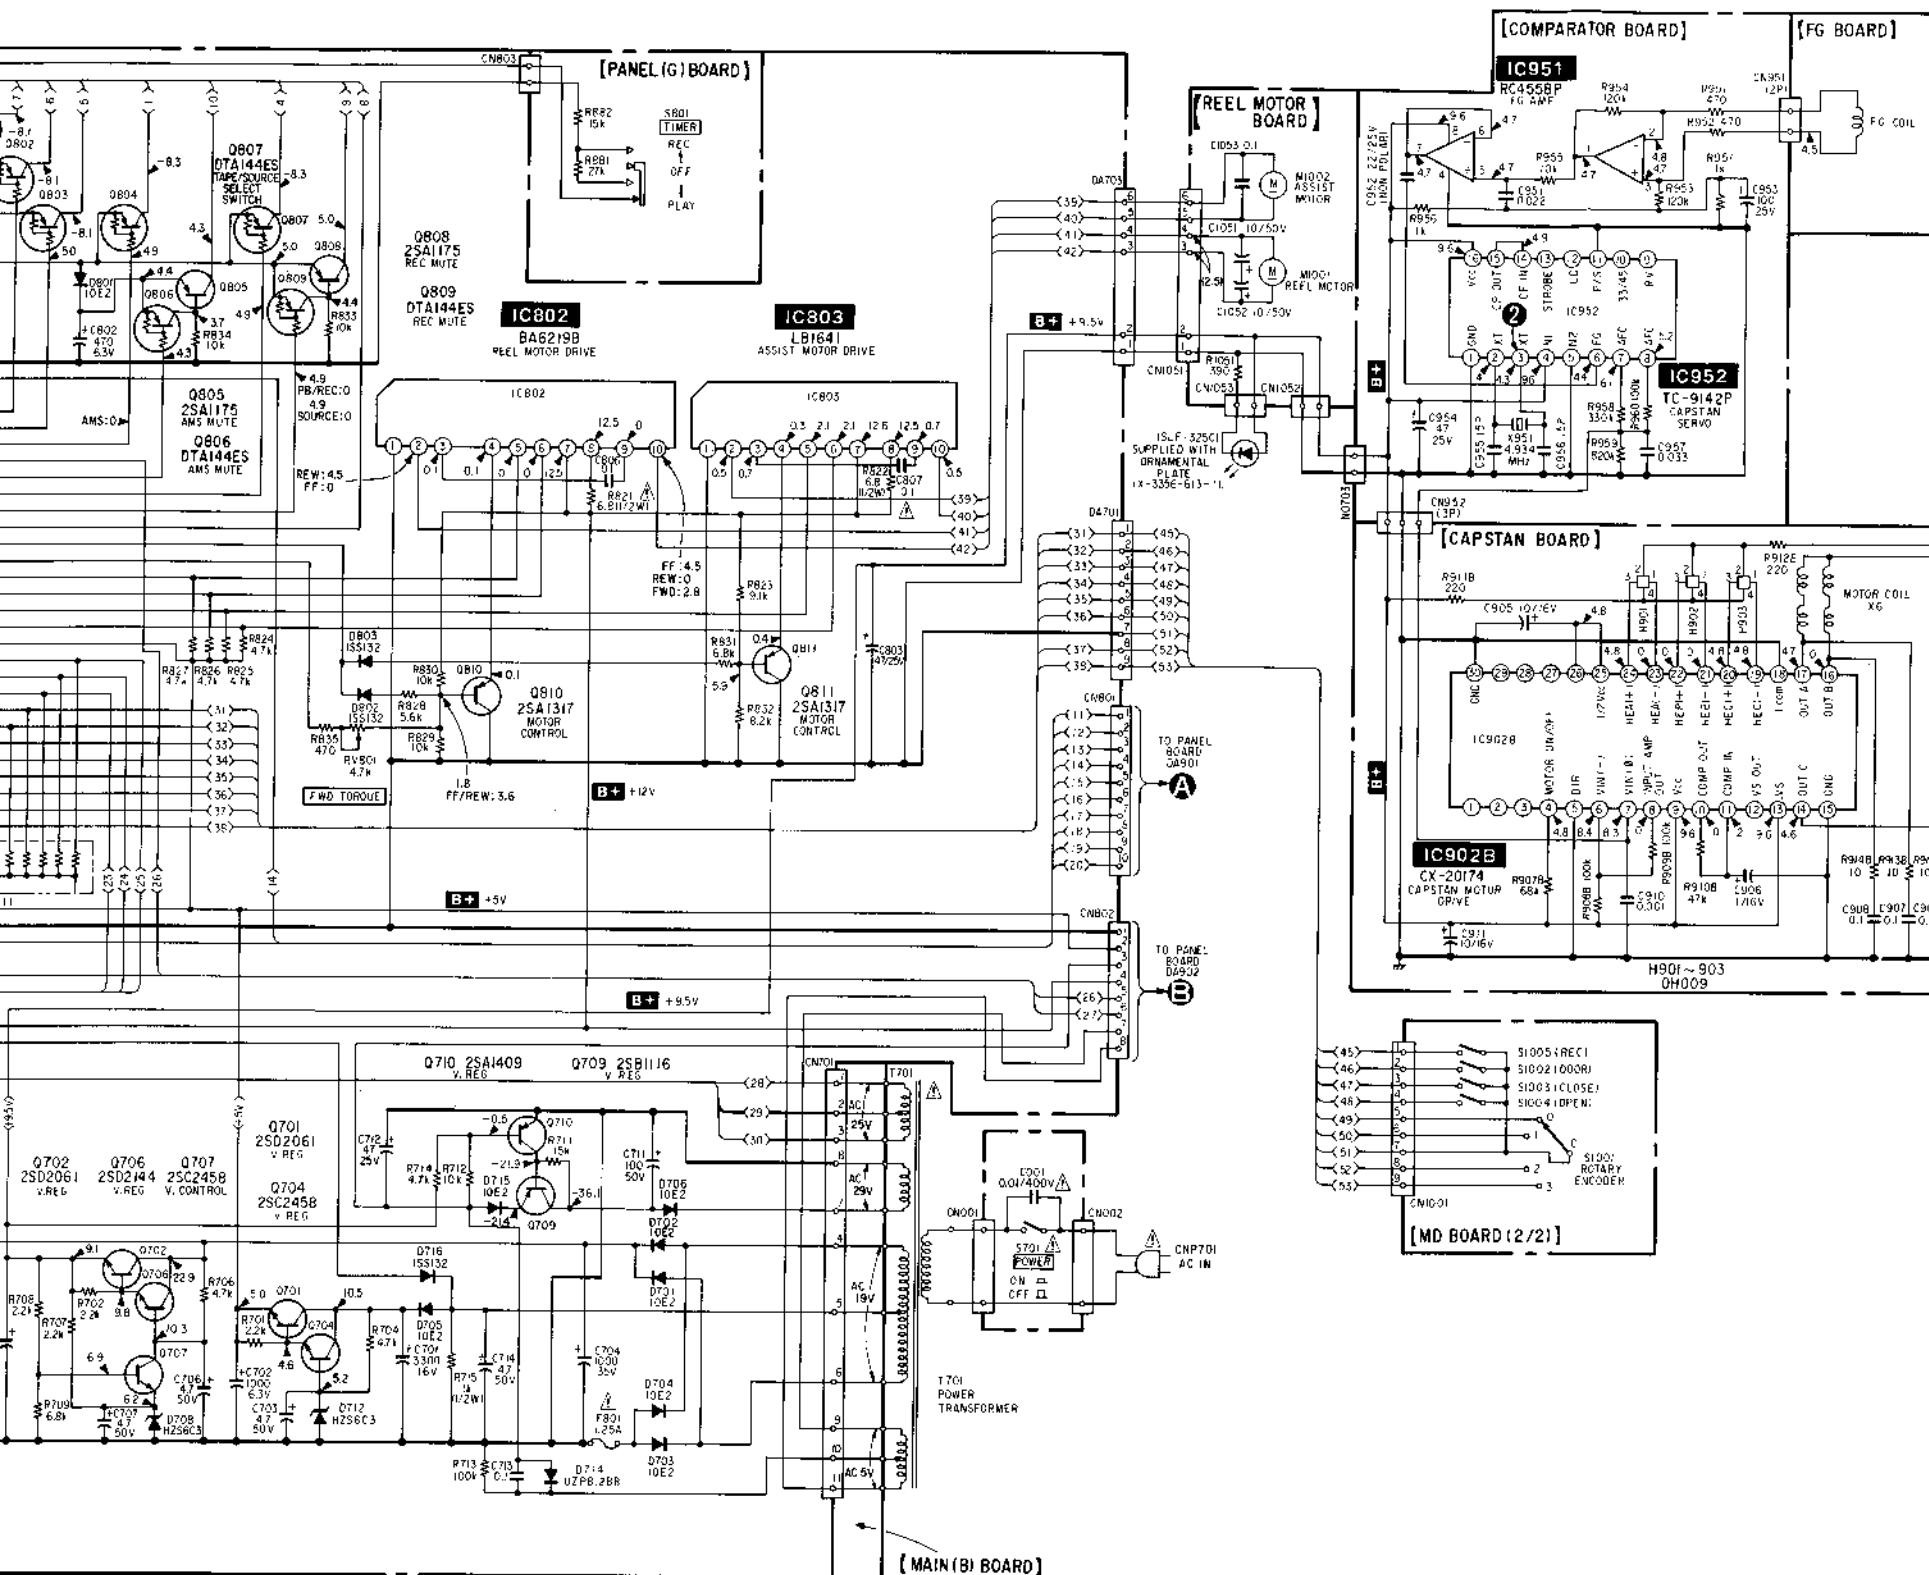**Note on Schematic Diagram:**

- All capacitors are in μF unless otherwise noted. pF : μF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $1/4\text{W}$ or less unless otherwise specified.
- % : indicates tolerance.
- Components for right channel have same values as for left channel. Reference numbers are coded from 200.
- \triangle : internal component.
- \square : nonflammable resistor.
- --- : fusible resistor.


Note: The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

- $+B$: B+ Line.
- $-B$: B- Line.
- \square : adjustment for repair.
- Voltage and waveforms are dc with respect to ground under no-signal conditions.
- no mark : STOP
- Voltages are taken with a VOM (input impedance $10M\Omega$). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope.
- Signal path.
- \Rightarrow : PB
- \Rightarrow : REC

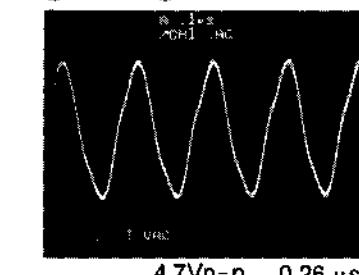
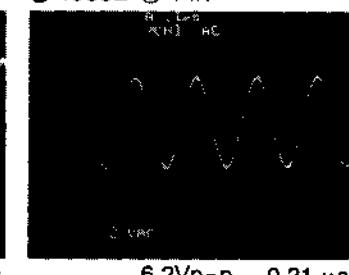
• Waveforms**① IC801 ⑩ Pin****② IC952 ③ Pin**


4-8. SCHEMATIC DIAGRAM – PANEL SECTION –

- See page 22 for IC Block Diagram

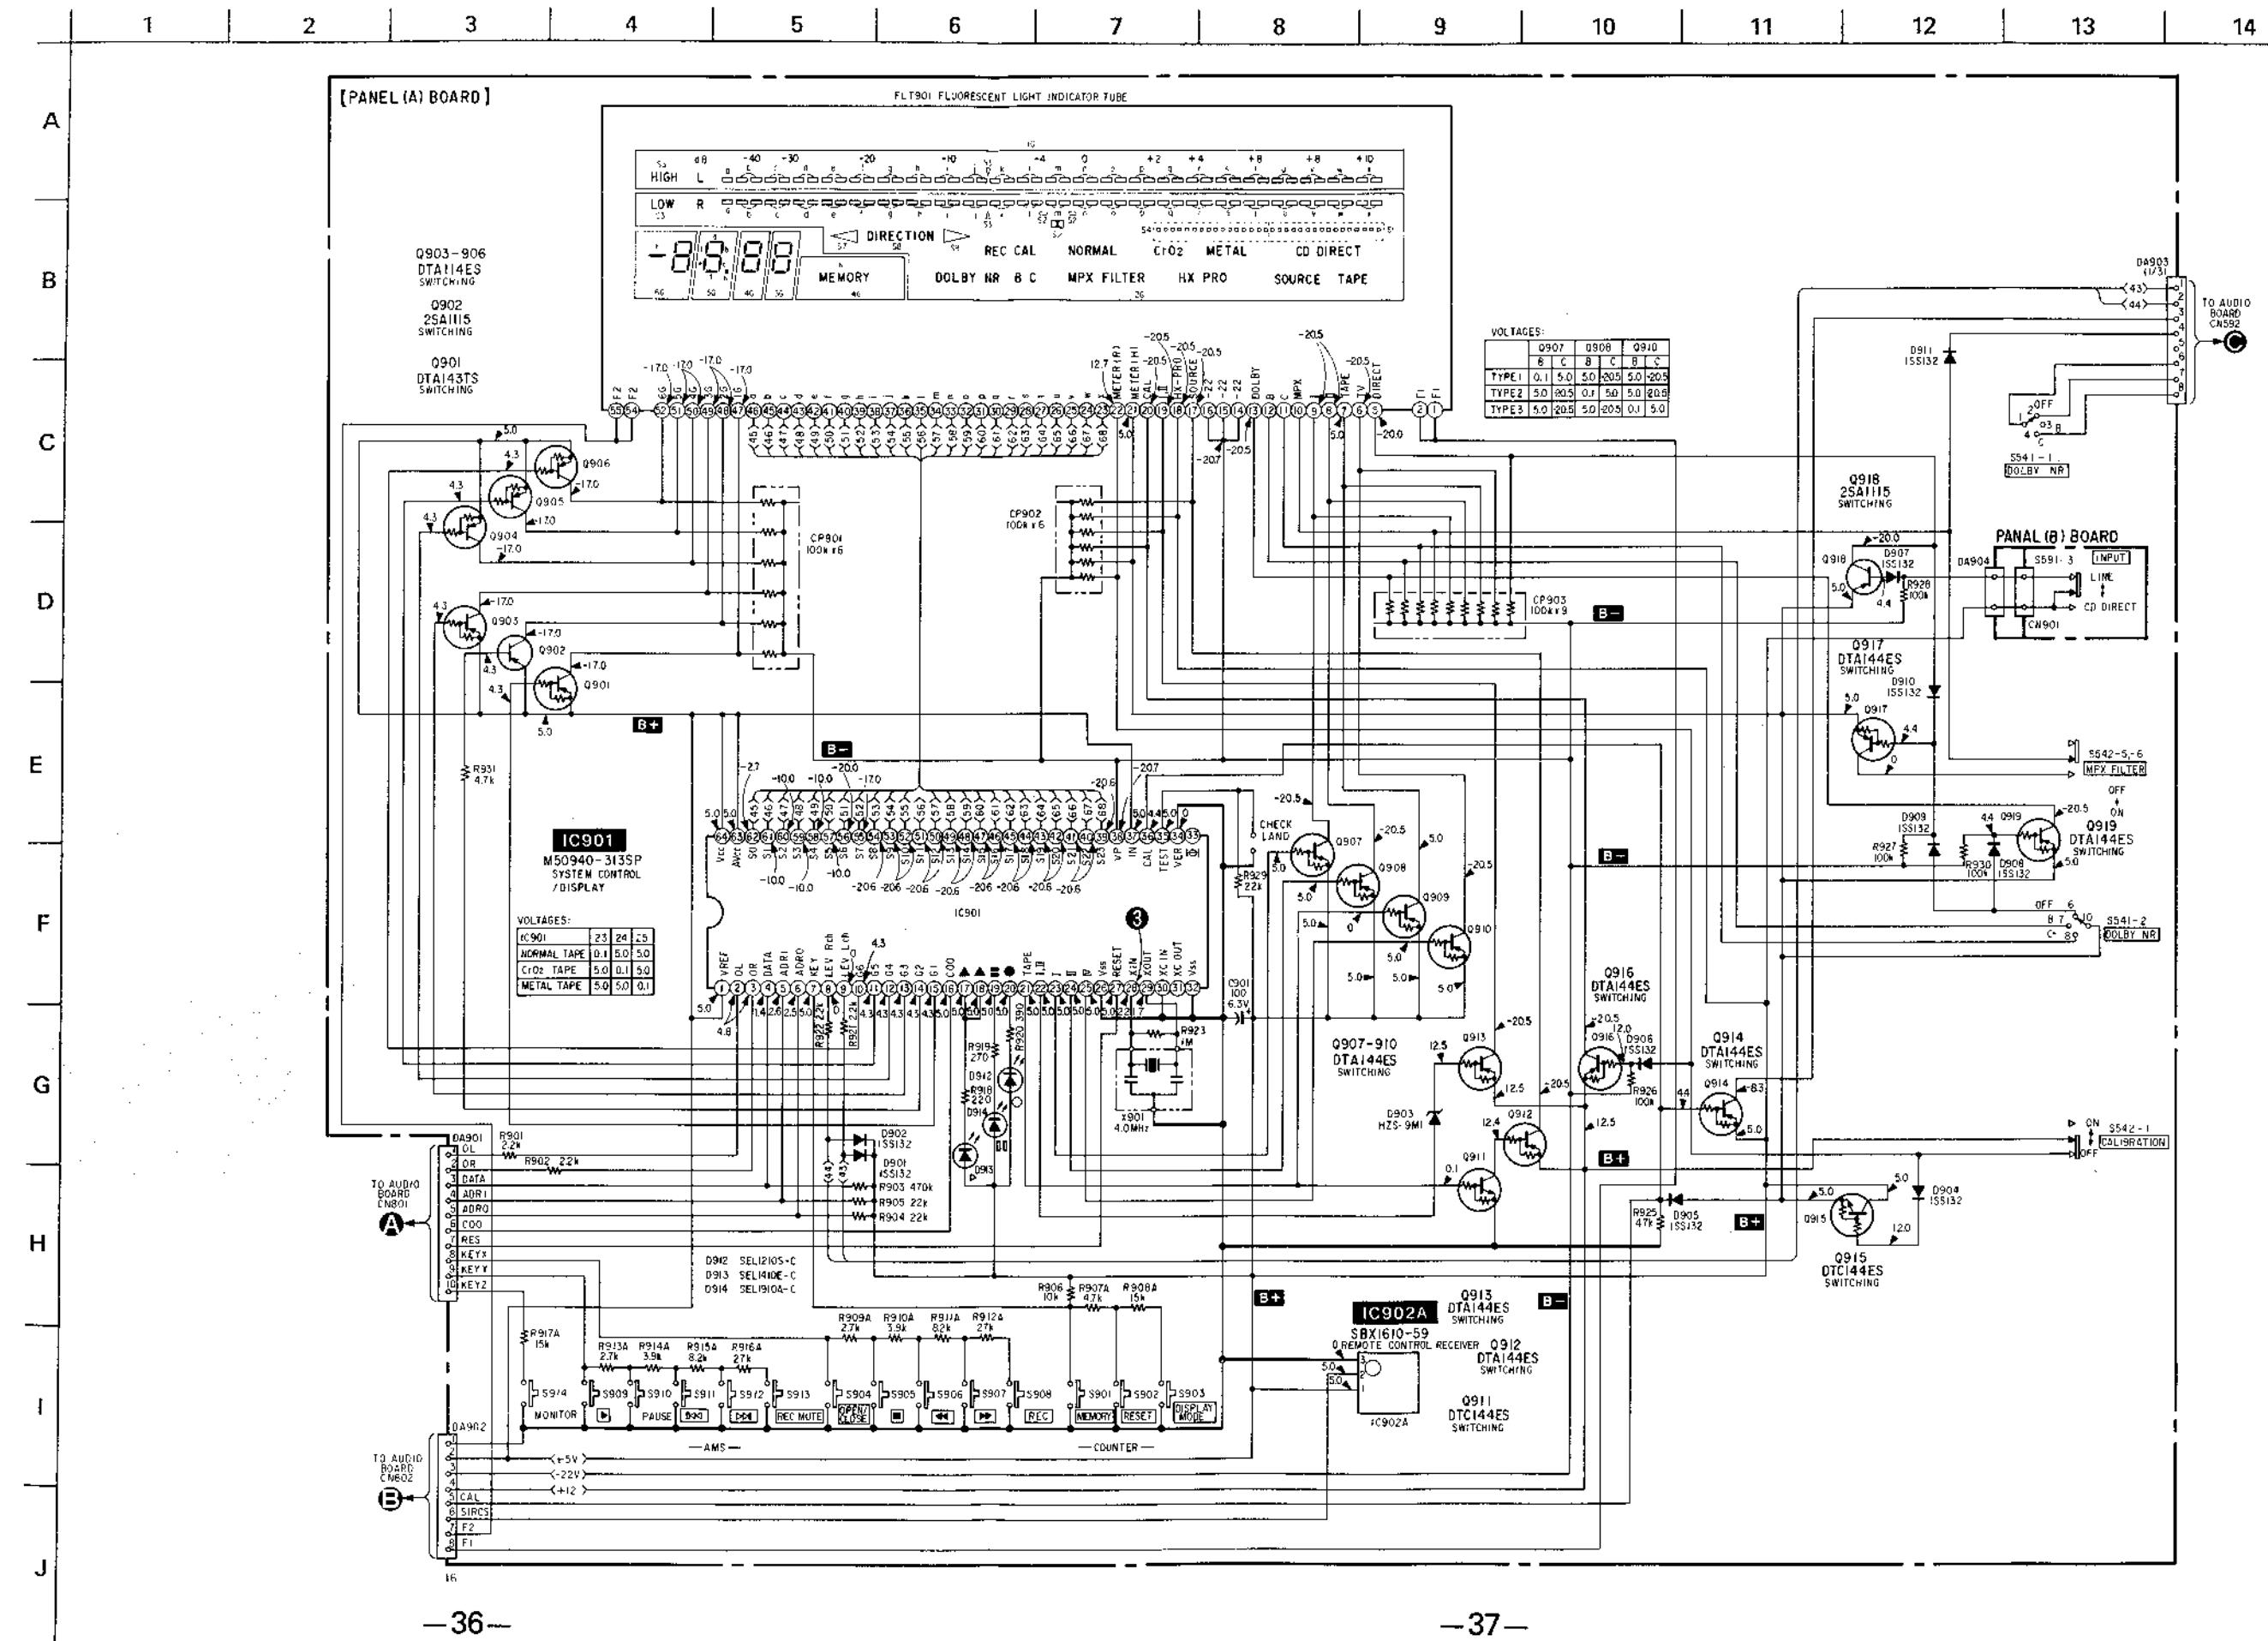

10 11 12 13 14 15 16 17 18

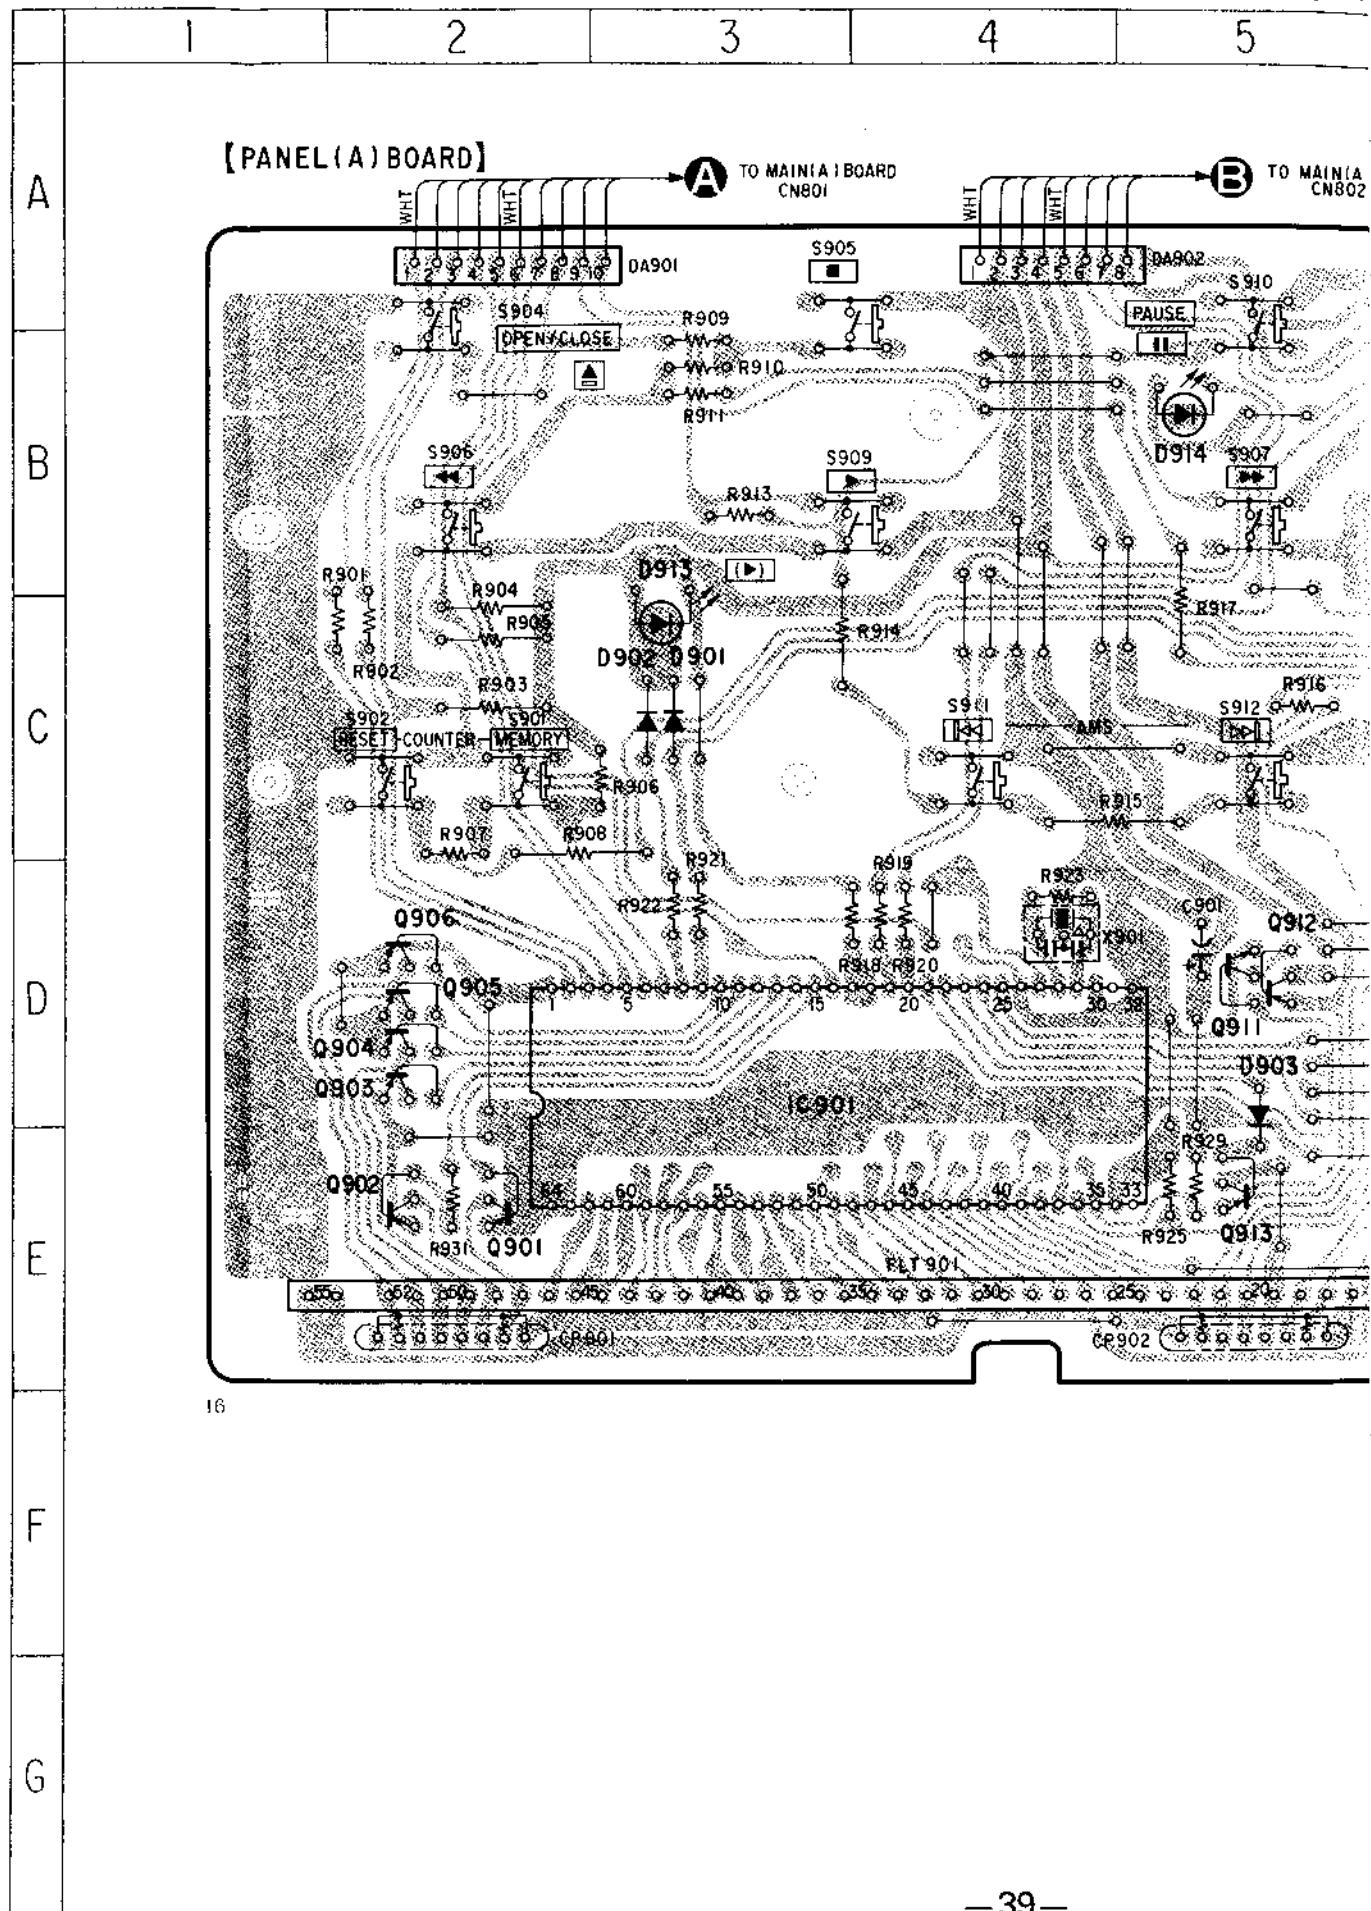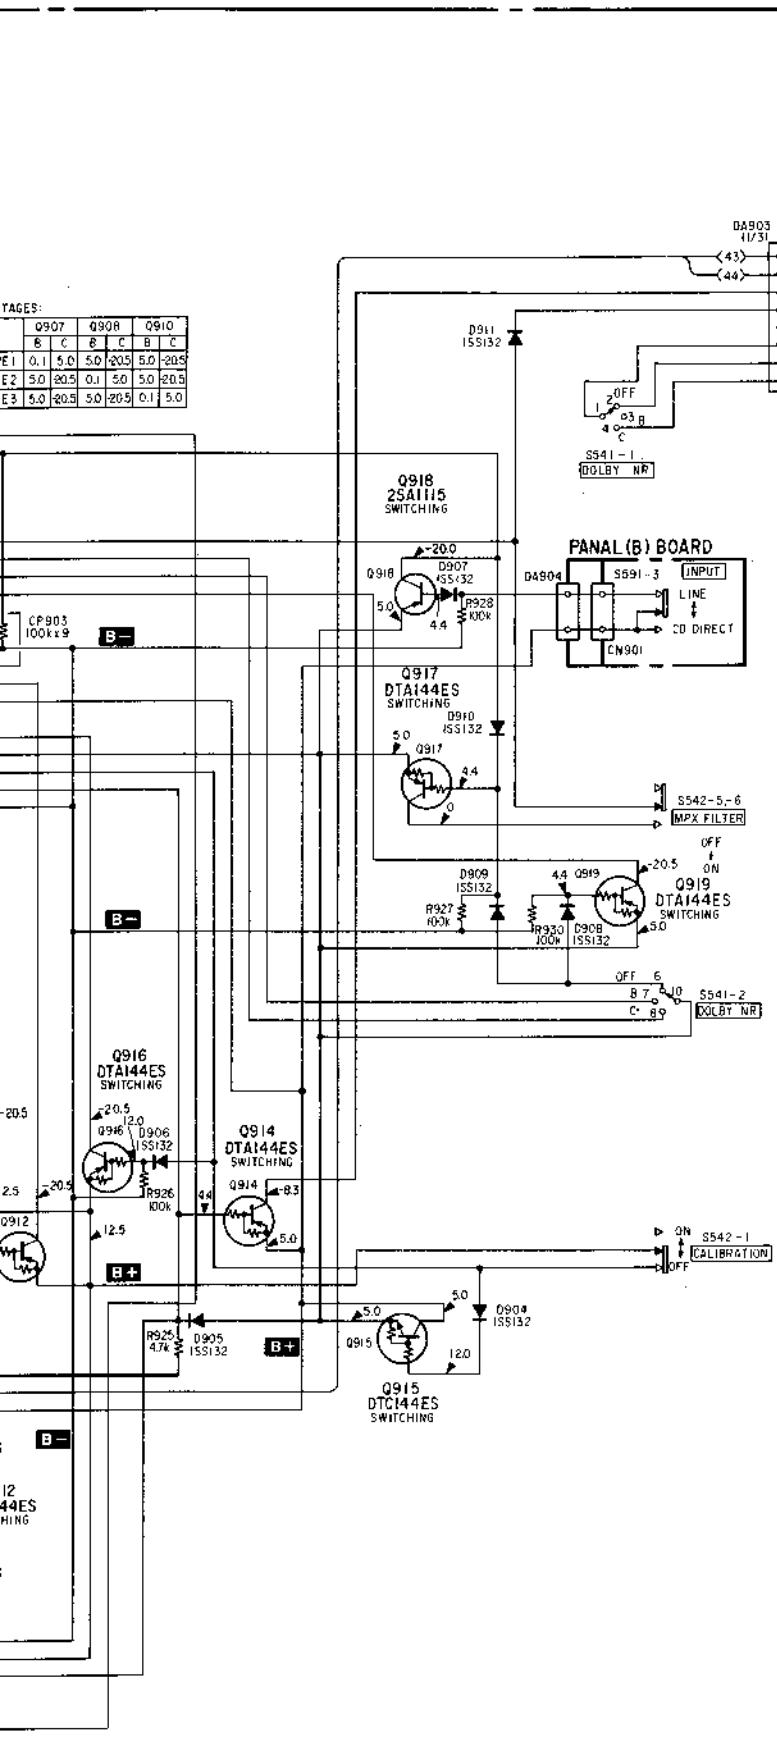

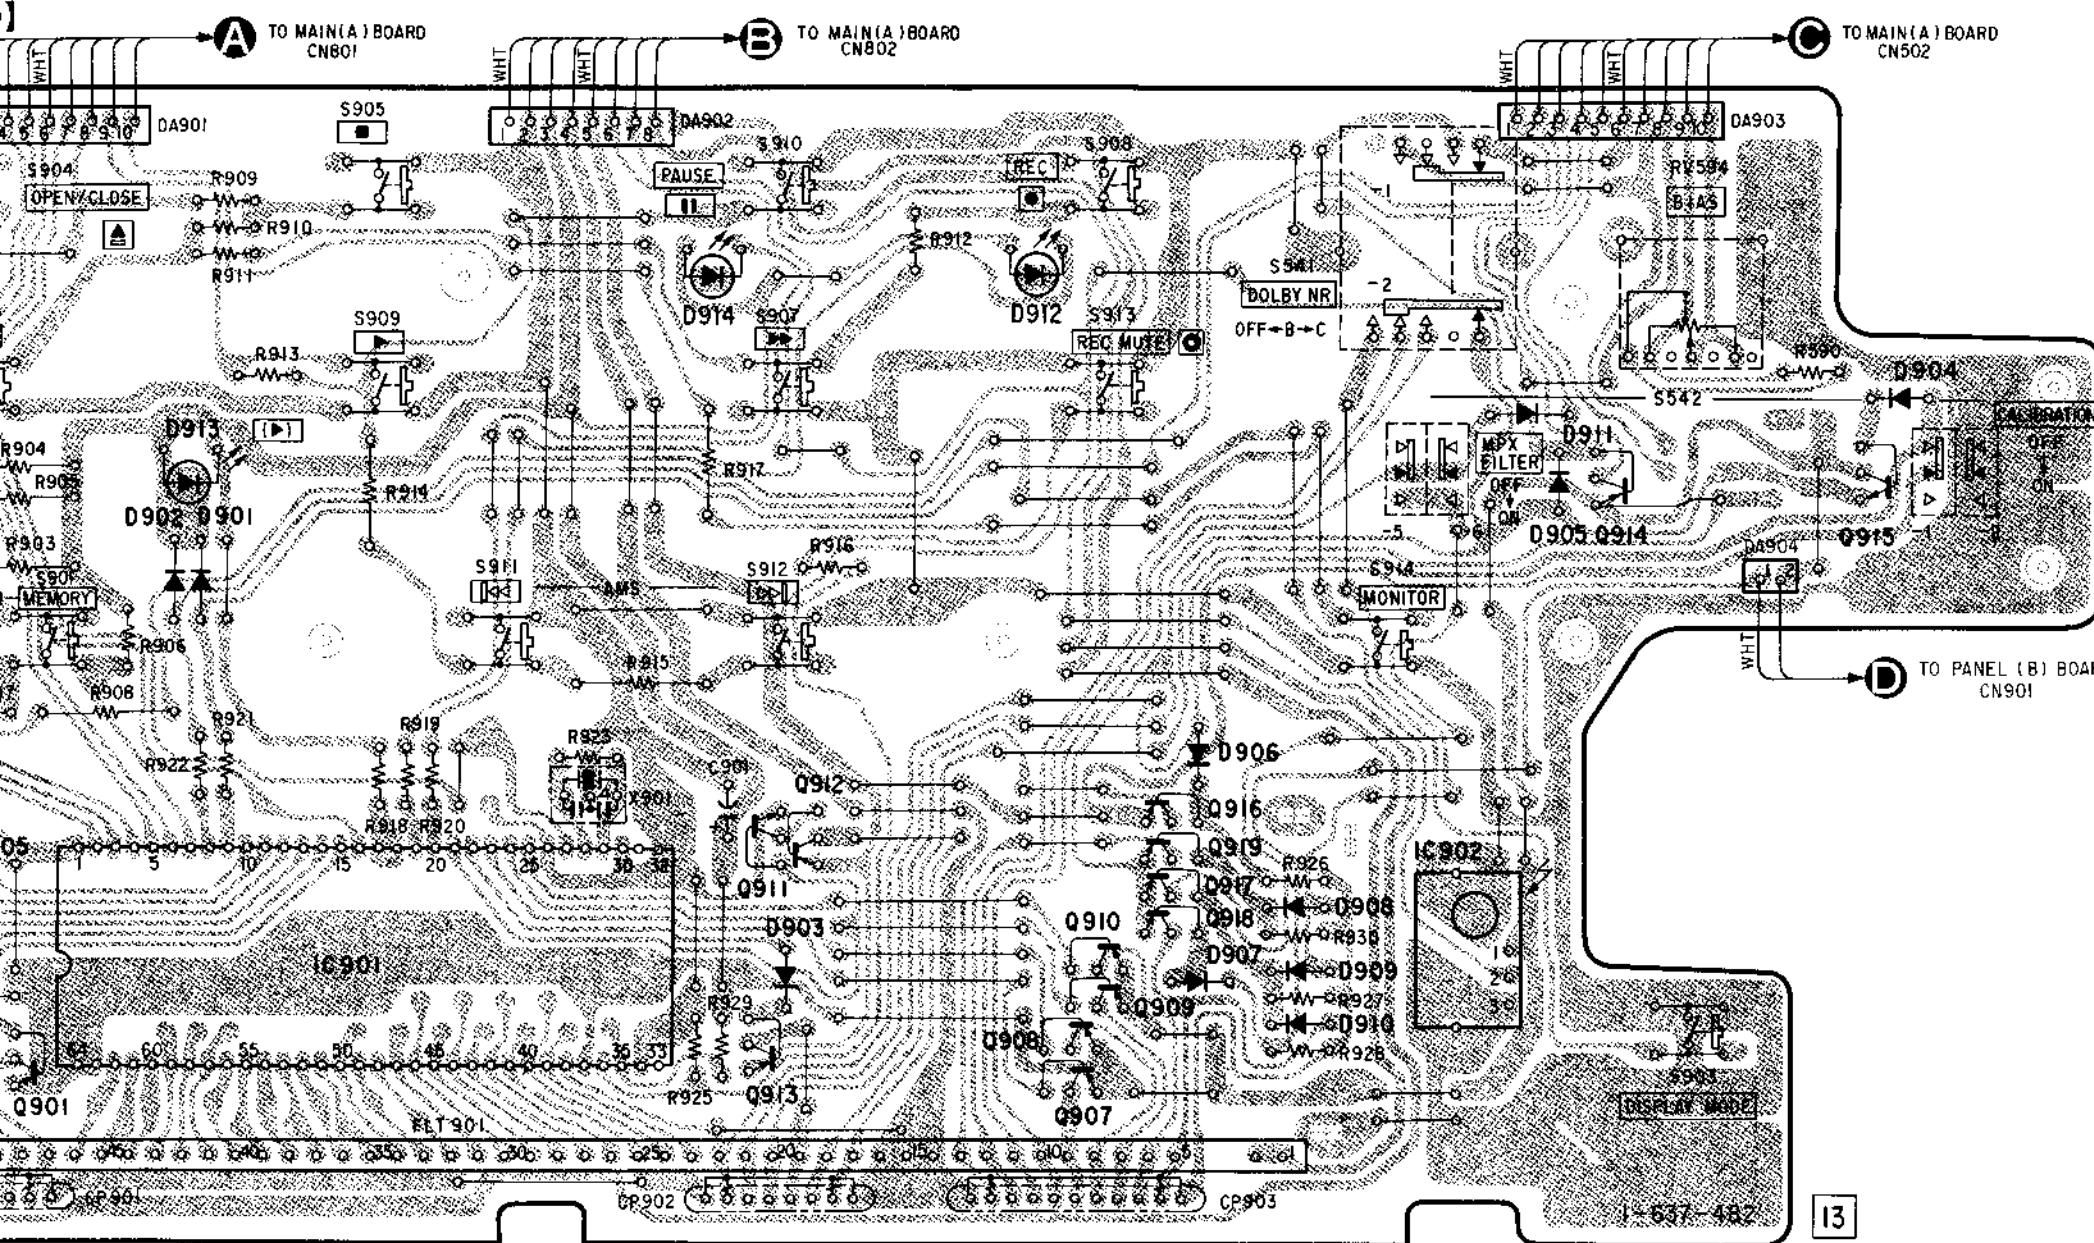

• Semiconductor Location

Ref. No.	Location
D901	C-3
D902	C-3
D903	D-5
D904	B-9
D905	C-8
D906	D-7
D907	D-7
D908	D-7
D909	D-7
D910	E-7
D911	B-8
D912	B-6
D913	C-3
D914	B-5
IC901	D-3
IC902B	D-8
Q901	E-2
Q902	E-2
Q903	D-2
Q904	D-2
Q905	D-2
Q906	D-2
Q907	E-6
Q908	E-6
Q909	E-6
Q910	D-6
Q911	D-5
Q912	D-5
Q913	E-5
Q914	C-8
Q915	C-9
Q916	D-7
Q917	D-7
Q918	D-7
Q919	D-7

Note on Mounting Diagram:

- : parts extracted from the component side.

SECTION 5

EXPLODED VIEWS

NOTE:


- - XX, - X mean standardized parts, so they may have some differences from the original one.
- Color Indication of Appearance Parts
Example :
KNOB, BALANCE (WHITE)...(RED)
↑ ↑
Parts color Cabinet's color

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list is given in the last of this parts list.

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

5-1. OVERALL SECTION


- ▲ A : MAIN (B) BOARD
● G : PANEL (F) BOARD

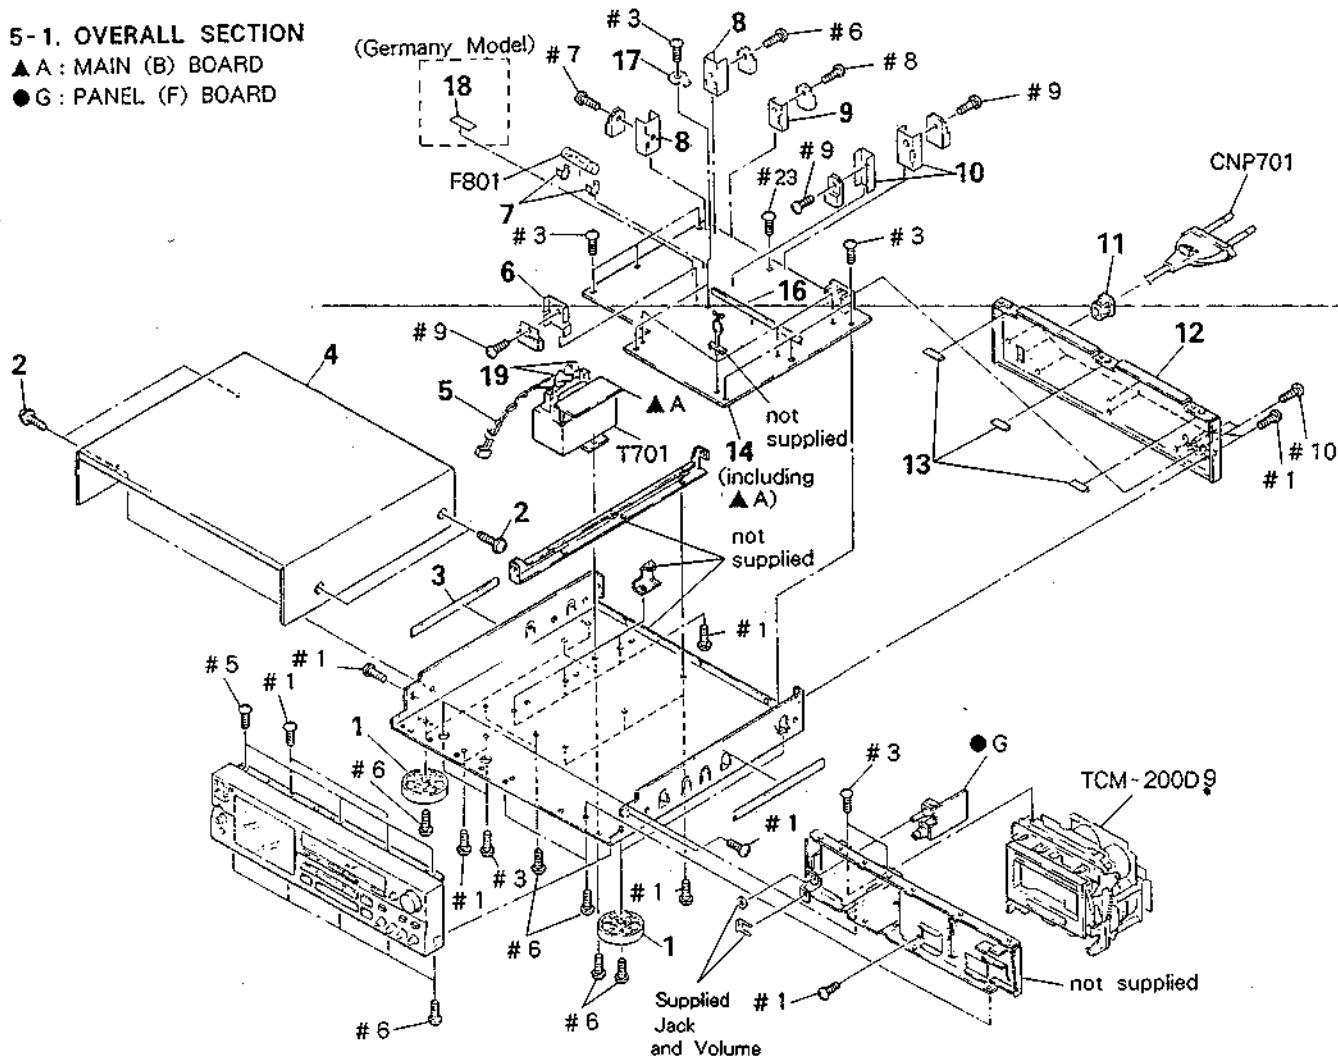

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	X-3304-944-1	FOOT ASSY		12	* 3-378-828-01	PANEL, BACK (Germany)	
2	3-704-366-01	SCREW (CASE) (M3X8)		12	* 3-378-828-11	PANEL, BACK (AEP)	
3	* 3-657-780-00	CUSHION		13	3-831-441-XX	CUSHION, SPEAKER	
4	4-925-039-61	CASE		14	* A-2006-780-A	MAIN BOARD, COMPLETE	
5	* 1-590-321-51	LEAD (WITH CONNECTOR)		16	* I-560-242-91	BUS BAR 10P	
6	* 3-356-925-01	HEAT SINK		17	4-870-539-00	PLATE, GROUND	
7	* 1-533-213-31	HOLDER FUSE		19	* 4-912-962-01	COVER (IP), TERMINAL	
8	4-902-345-01	HEAT SINK		T701	△1-450-856-11	TRANSFORMER, POWER	
9	* 3-309-144-21	HEAT SINK		F801	△1-532-285-00	FUSE, TIME-LAG	
10	* 4-880-403-11	HEAT SINK		CNP701	△1-575-651-11	CORD, POWER	
11	* 3-703-244-00	BUSHING (2104), CORD					


5-2. PANEL SECTION

- A : PANEL (H)
- B : PANEL (G)
- C : PANEL (D)
- D : PANEL (C)
- E : PANEL (B)
- F : PANEL (E)

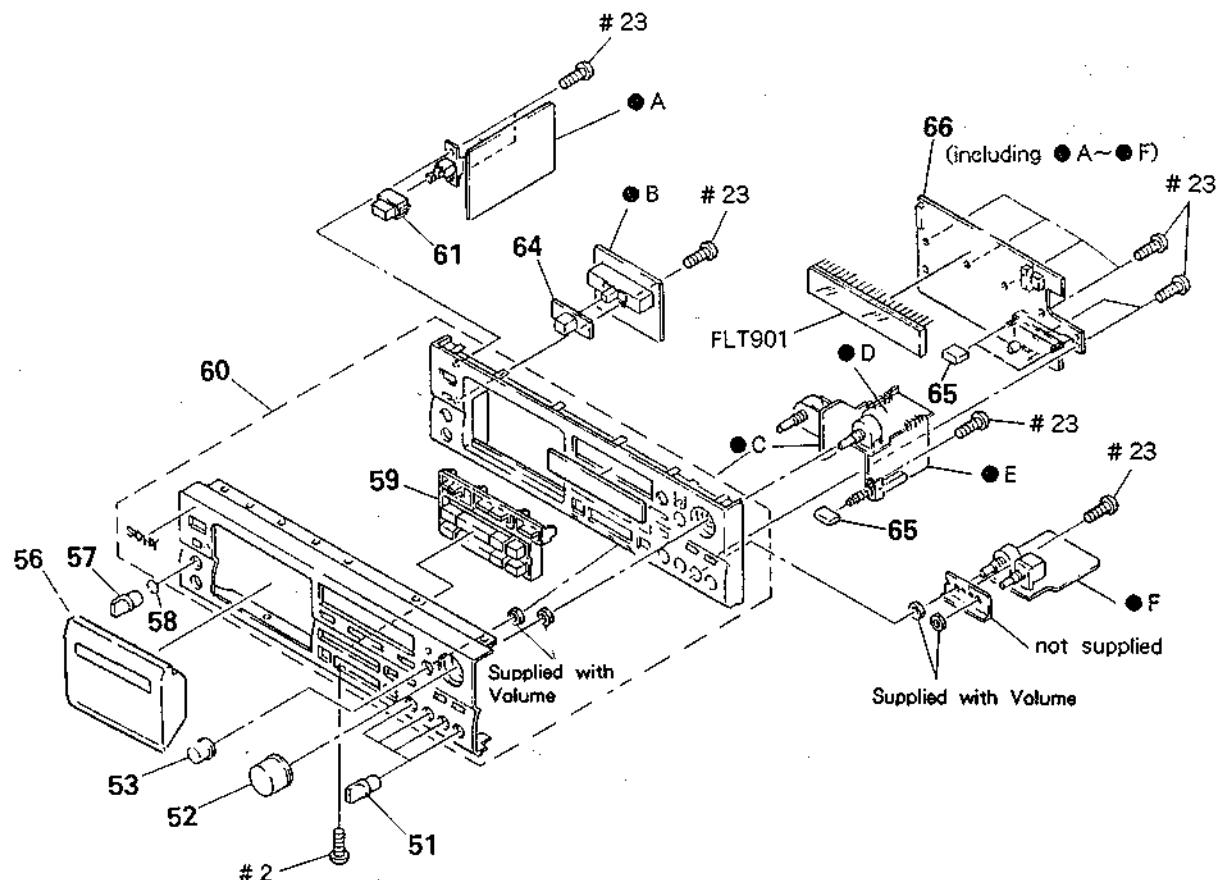


<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>
51	X-3362-818-1	KNOB (DIA. 12) ASSY (B), FLAT		60	A-2004-076-A	PANEL ASSY, FRONT	
52	X-3362-289-1	KNOB (VOL) ASSY		61	3-354-912-01	KNOB, POWER	
53	X-3365-387-1	KNOB (BAL)		64	4-922-518-01	KNOB (TIMER)	
56	X-3366-080-1	LID ASSY, CASSETTE		65	3-364-165-01	BUTTON (14X5)	
57	3-354-931-01	KNOB (DIA. 10)		66	* A-2006-781-A	PANEL BOARD, COMPLETE	
58	3-354-981-01	SPRING (SUS), RING		FLT901	1-519-560-21	INDICATOR TUBE, FLUORESCENT	
59	X-3362-290-1	BUTTON (BLOCK) ASSY					

5 - 3. MECHANISM SECTION - 1 (TCM - 200D9)

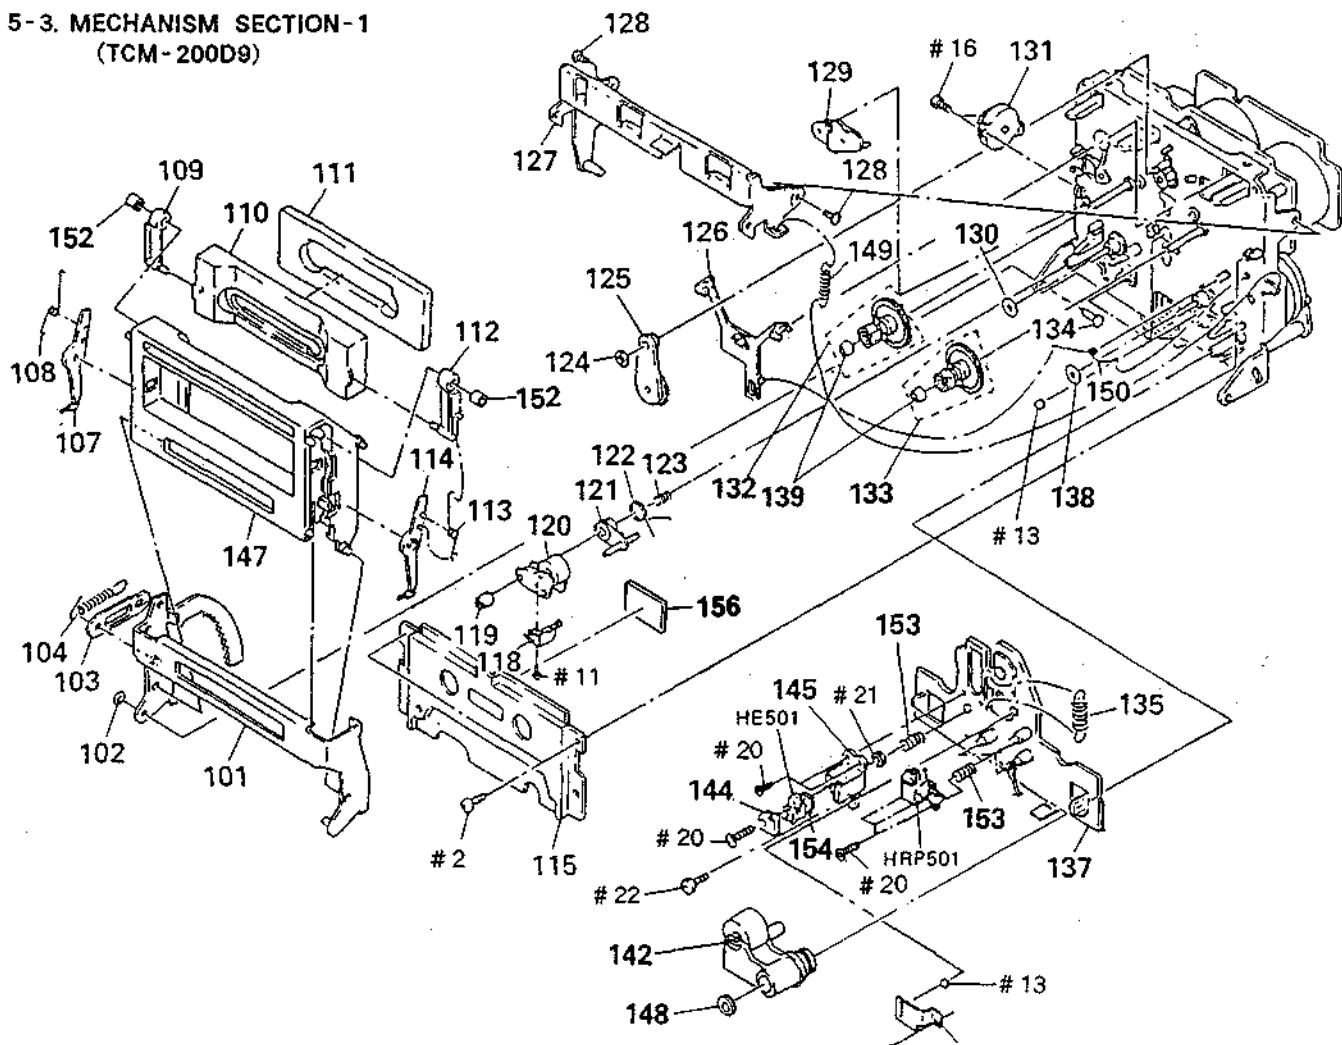

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>	# 18	140	<u>Remarks</u>
101	X-3362-671-1	HOLDER (BG) ASSY, CASSETTE		130	8-356-713-01	WASHER
102	3-558-708-21	WASHER, STOPPER		131	3-319-224-41	DAMPER, SMALL
103	* 3-356-717-01	LEVER (JOINT)		132	X-3356-629-1	GEAR (S) ASSY
104	3-356-626-01	SPRING, TENSION		133	X-3356-627-1	GEAR (T) ASSY
107	3-356-932-01	LEVER (LA)		134	3-356-710-01	SHAFT (LEFT) (CASSETTE HOLDER)
108	3-356-927-01	SPRING (LEFT), TORSION		135	3-356-658-01	SPRING (LIMITER H), TENSION
109	3-356-933-01	LEVER (LB)		137	* X-3362-199-1	SLIDER (HEAD CHASSIS D) ASSY
110	3-356-928-01	PLATE (A), ORNAMENTAL		138	3-332-763-01	RING, OIL RESERVOIR
111	* 3-356-929-01	ABSORBENT, VIBRATION		139	3-362-308-01	CAP (REEL)
112	3-356-931-01	LEVER (RB)		140	3-356-656-01	SPRING (HEAD PC BOARD), LEAF
113	3-356-926-01	SPRING (RIGHT), TORSION		142	X-3356-620-1	LEVER (PINCH LEVER T) ASSY
114	3-356-930-01	LEVER (RA)		144	3-318-433-01	SPRING
115	X-3356-613-1	PLATE ASSY, ORNAMENTAL		145	* 3-576-977-00	BRACKET, E. HEAD
118	3-564-138-00	GUIDE (S), TAPE		147	X-3365-065-1	HOLDER (D9) ASSY, CASSETTE
119	3-356-652-01	NUT (PINCH LEVER S)		148	3-669-596-00	WASHER (2, 3), STOPPER
120	X-3356-621-1	LEVER (PINCH LEVER S) ASSY		149	3-356-625-01	SPRING, TENSION
121	3-356-660-01	LEVER (PS)		150	3-356-619-01	SPRING (B), TORSION
122	3-356-661-01	SPRING (PINCH LEVER S), TORSION		152	3-356-946-01	BUSHING
123	3-356-657-01	SPRING (PS), COMPRESSION		153	3-564-121-00	SPRING, COMPRESSION
124	3-669-465-00	WASHER (1, 5), STOPPER		154	* 1-608-268-00	ERASE HEAD BOARD
125	X-3356-641-1	LEVER (FR2) ASSY		156	8-719-980-85	DIODE SLF325C
126	3-356-614-01	SLIDER (BRAKE)		HE501	1-543-358-11	HEAD, MAGNETIC (ERASE)
127	* X-3356-608-1	LEVER (LIFTER) ASSY		HRP501	1-543-742-11	HEAD MAGNETIC (RECORD/PLAYBACK)
128	3-356-601-11	SCREW, STEP				
129	X-3356-623-1	LEVER (BT) ASSY				

5 - 4. MECHANISM SECTION - 2 (TCM - 200D9)

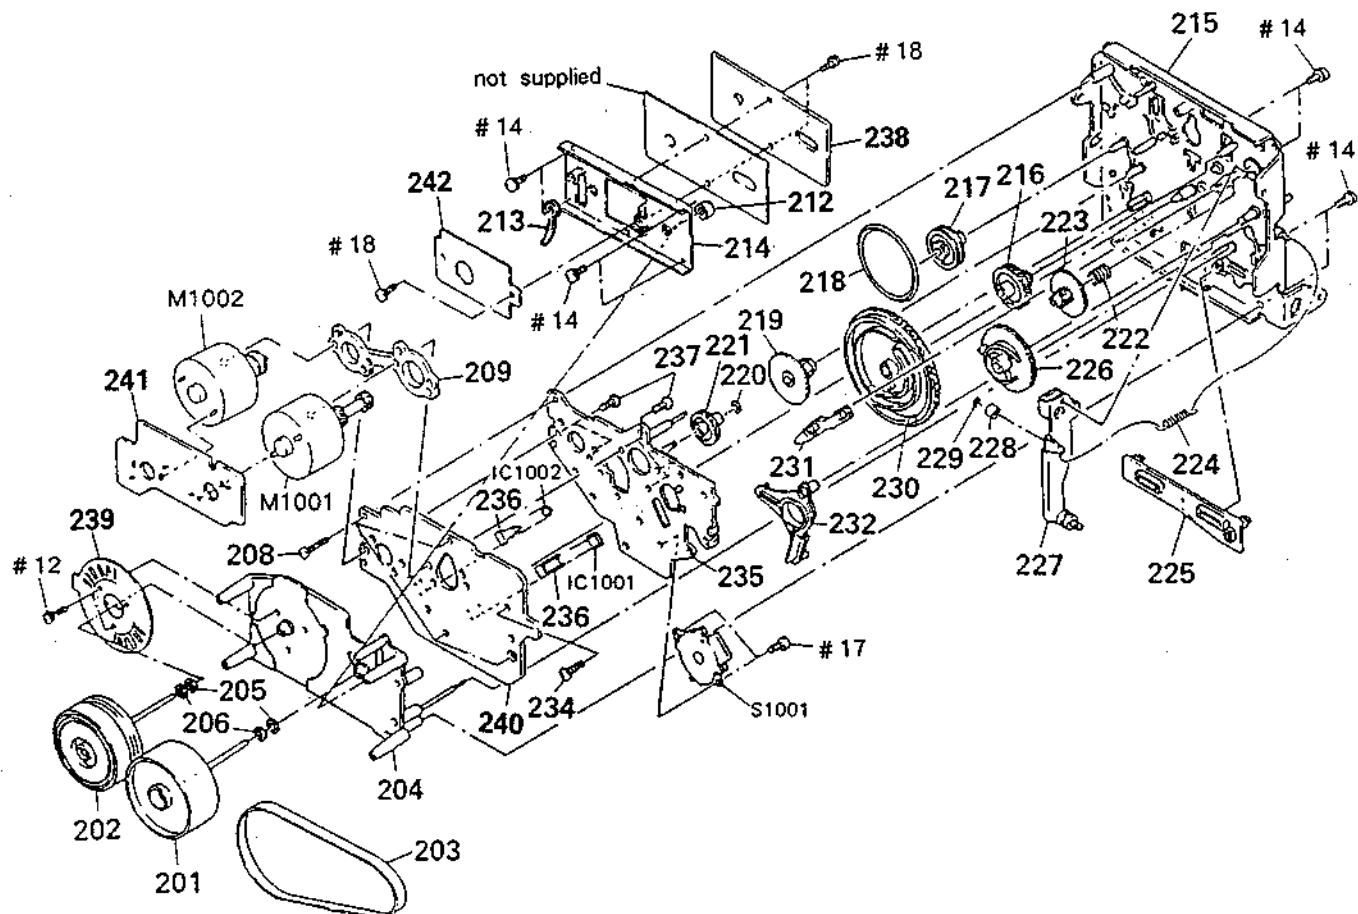

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>
201	X-3362-284-1	FLYWHEEL (S2.3) ASSY		224	3-376-854-01	SPRING, TENSION	
202	X-3356-619-1	FLYWHEEL (DT) ASSY		225	3-356-653-01	SLIDER (PAUSE)	
203	3-364-600-01	BELT (CAPSTAN)		226	3-356-616-01	GEAR (LOADING CAM)	
204	X-3362-281-1	CHASSIS (D2.3) ASSY		227	* X-3356-606-1	LEVER (LOADING) ASSY	
205	3-356-705-31	WASHER (CAPSTAN)		228	3-356-630-01	ROLLER (LOADING)	
206	3-356-705-21	WASHER (CAPSTAN)		229	3-558-708-11	WASHER, STOPPER	
208	3-355-801-01	SCREW (BTP 2X18)		230	3-356-654-01	GEAR (MODE CAM C)	
209	* 3-356-628-01	SPACER (MOTOR)		231	3-356-617-01	LEVER (SELECTION)	
212	3-364-135-01	RETAINER (S), THRUST		232	3-356-613-01	LEVER (MODE)	
213	3-703-150-11	STOPPER, WIRING		234	3-356-707-01	SCREW (+PTPWH 2X25)	
214	* X-3362-282-1	BRACKET (THRUST RETAINER) ASSY		235	* X-3356-616-1	BRACKET (MOTOR D) ASSY	
215	X-3356-622-1	CHASSIS (C) ASSY, MECHANICAL		236	3-356-631-01	HOLDOR (SENSOR)	
216	3-356-703-01	GEAR (COMMUNICATION C)		237	3-363-804-01	SCREW (+P 2.6X6.5)	
217	3-356-607-01	PULLEY (MODE)		238	A-2006-154-A	CAPSTAN C. O. C BOARD, COMPLETE	
218	3-356-603-01	BELT (MODE)		239	1-632-779-11	PC BOARD, PG	
219	3-356-606-01	GEAR (MODE)		240	* 1-632-740-11	MD BOARD	
220	3-669-465-11	WASHER (L5), STOPPER		241	* 1-632-741-11	REAL MOTOR BOARD	
221	3-356-702-01	GEAR (COMMUNICATION B)		242	* 1-632-746-11	COMPARATOR BOARD	
222	3-356-605-01	SPRING, COMPRESSION		S1001	1-466-238-11	ENCODER, ROTARY	
223	3-356-609-01	GEAR (LOADING)		M1002	X-3356-604-1	MOTOR (ASSIST) ASSY	
				M1001	X-3356-638-1	MOTOR (REEL R) ASSY	
				IC1001	8-749-920-97	DIODE GP2S22B	
				IC1002	8-749-920-97	DIODE GP2S22B	

SECTION 6

ELECTRICAL PARTS LIST

CAPSTAN C.O.C

COMPARATOR

NOTE:

The components identified by mark  or dotted line with mark  are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
 - - XX, - X mean standardized parts, so they may have some difference from the original one.
 - **RESISTORS**
All resistors are in ohms.
METAL : metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F : nonflammable

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
 - SEMICONDUCTORS
In each case, u : μ , for example:
uA... : μ A..., μ PA..., μ PA...,
 μ PB... , μ PB... , μ PC... , μ PC...
 μ PD... , μ PD...
 - CAPACITORS :
uF : μ F
 - COILS
uH : μ H

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
	A-2006-154-A	CAPSTAN C. O. C BOARD, COMPLETE *****				C956	1-162-203-31	CERAMIC	15PF	5%	50V
						C957	1-136-159-00	FILM	0.033uF	5%	50V
	I-216-296-00	METAL CHIP	0	5%	1/8W			< CONNECTOR >			
		< CAPACITOR >				CN951	* 1-564-718-11	PIN, CONNECTOR (SMALL TYPE) 2P			
						CN952	* 1-564-518-11	PLUG, CONNECTOR 3P			
C905	I-124-779-00	ELECT CHIP	10uF	20%	16v			< IC >			
C906	I-135-091-00	TANTALUM CHIP	1uF	20%	16V						
C907	I-163-077-00	CERAMIC CHIP	0.1uF	10%	25V	IC951	8-759-945-58	IC RC4558P			
C908	I-163-077-00	CERAMIC CHIP	0.1uF	10%	25V	IC952	8-759-201-58	IC TC9142P			
C909	I-163-077-00	CERAMIC CHIP	0.1uF	10%	25V			< RESISTOR >			
C910	I-163-205-00	CERAMIC CHIP	0.001uF	5%	50V	R951	1-249-413-11	CARBON	470	5%	1/4W
C911	I-124-779-00	ELECT CHIP	10uF	20%	16v	R952	1-249-413-11	CARBON	470	5%	1/4W
		< DIODE >				R953	1-247-881-00	CARBON	120K	5%	1/4W
H901	8-719-403-79	DIODE	OH009			R954	1-247-881-00	CARBON	120K	5%	1/4W
H902	8-719-403-79	DIODE	OH009			R955	1-249-429-11	CARBON	10K	5%	1/4W
H903	8-719-403-79	DIODE	OH009			R956	1-249-417-11	CARBON	1K	5%	1/4W
		< IC >				R957	1-249-417-11	CARBON	1K	5%	1/4W
IC902	8-752-017-40	IC CX20174				R958	1-247-891-00	CARBON	330K	5%	1/4W
		< RESISTOR >				R959	1-247-901-11	CARBON	820K	5%	1/4W
						R960	1-249-441-11	CARBON	100K	5%	1/4W
		< VIBRATOR >									
R907	I-216-242-00	METAL GLAZE	68K	5%	1/8W	X951	1-577-615-11	VIBRATOR, CRYSTAL			
R908	I-216-246-00	METAL GLAZE	100K	5%	1/8W						
R909	I-216-246-00	METAL GLAZE	100K	5%	1/8W						
R910	I-216-238-00	METAL GLAZE	47K	5%	1/8W						
R911	I-216-182-00	METAL GLAZE	220	5%	1/8W						

R912	I-216-182-00	METAL GLAZE	220	5%	1/8W						
R913	I-216-150-00	METAL GLAZE	10	5%	1/8W		* I-632-740-11	HD BOARD			
R914	I-216-150-00	METAL GLAZE	10	5%	1/8W			*****			
R915	I-216-150-00	METAL GLAZE	10	5%	1/8W				8-356-631-01	HOLDER (SENSOR)	

	* I-632-746-11	COMPARATOR BOARD *****						< CONNECTOR >			
		< CAPACITOR >									
C951	I-136-157-00	FILM	0.022uF	5%	50V	IC1001	8-749-920-97	DIODE	GP2S22B		
C952	I-124-282-00	ELECT	22uF	20%	25V	IC1002	8-749-920-97	DIODE	GP2S22B		
C953	I-124-478-11	ELECT	100uF	20%	25V						
C954	I-124-477-11	ELECT	47uF	20%	25V						

MD MAIN

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks				
< RESISTOR >											
R1001	1-249-408-11	CARBON	180	5%	1/4W	C126	1-123-382-00	ELECT	3.3uF	20%	100V
R1002	1-249-408-11	CARBON	180	5%	1/4W	C171	1-126-049-11	ELECT	22uF	20%	50V
< SWITCH >											
S1002	1-570-953-11	SWITCH, PUSH (1 KEY) (DOOR)			C172	1-126-049-11	ELECT	22uF	20%	50V	
S1003	1-571-958-11	SWITCH, PUSH (1 KEY) (CLOSE)			C173	1-126-049-11	ELECT	22uF	20%	50V	
S1004	1-572-126-11	SWITCH, PUSH (1 KEY) (OPEN)			C174	1-126-049-11	ELECT	22uF	20%	50V	
S1005	1-572-125-11	SWITCH, LEAF(FWD)			C201	1-110-340-11	MYLAR	270PF	5%	50V	
S1006	1-572-202-11	SWITCH, LEAF(HALF)			C203	1-136-157-00	FILM	0.022uF	5%	50V	
S1007	1-572-125-11	SWITCH, LEAF(METAL)			C207	1-136-159-00	FILM	0.033uF	5%	50V	
S1008	1-572-125-11	SWITCH, LEAF(70μ)			C208	1-102-966-00	CERAMIC	43PF	5%	50V	
< TERMINAL >											
TB1001 * 1-694-018-11	TERMINAL (5P)			C209	1-130-474-00	MYLAR	0.0018uF	5%	50V		

* A-2006-780-A	MAIN BOARD, COMPLETE			C210	1-130-474-00	MYLAR	0.0018uF	5%	50V		

	(includin AA)			C211	1-136-155-00	FILM	0.0022uF	5%	50V		
* 1-533-213-31	HOLDER, FUSE			C212	1-124-903-11	ELECT	1uF	20%	50V		
* 1-560-242-91	BUS BAR 10P			C213	1-136-169-00	FILM	0.22uF	5%	50V		
7-682-147-15	SCREW, TR			C214	1-136-163-00	FILM	0.47uF	5%	50V		
4-902-345-01	HEAT SINK			C215	1-136-167-00	FILM	0.15uF	5%	50V		
* 3-309-144-21	HEAT SINK			C216	1-124-903-11	ELECT	0.015uF	5%	50V		
* 3-356-925-01	HEAT SINK			C217	1-124-903-11	ELECT	1uF	20%	50V		
4-870-539-00	PLATE, GROUND			C218	1-136-169-00	FILM	0.22uF	5%	50V		
* 4-880-403-11	HEAT SINK			C219	1-136-163-00	FILM	0.068uF	5%	50V		
7-682-548-09	SCREW +B 3X8			C220	1-136-162-00	FILM	0.056uF	5%	50V		
7-682-547-04	SCREW +BVTT 3X6 (S)			C221	1-124-903-11	ELECT	1uF	20%	50V		
< CAPACITOR >											
C101	1-110-340-11	MYLAR	270PF	5%	50V	C222	1-130-480-00	MYLAR	0.0056uF	5%	50V
C103	1-136-157-00	FILM	0.022uF	5%	50V	C223	1-136-153-00	FILM	0.01uF	5%	50V
C107	1-136-159-00	FILM	0.033uF	5%	50V	C225	1-124-925-11	ELECT	2.2uF	20%	100V
C108	1-102-966-00	CERAMIC	43PF	5%	50V	C226	1-123-382-00	ELECT	3.3uF	20%	100V
C109	1-130-474-00	MYLAR	0.0018uF	5%	50V	C271	1-126-049-11	ELECT	22uF	20%	50V
C110	1-130-474-00	MYLAR	0.0018uF	5%	50V	C272	1-126-049-11	ELECT	22uF	20%	50V
C111	1-130-475-00	MYLAR	0.0022uF	5%	50V	C273	1-126-049-11	ELECT	22uF	20%	50V
C112	1-130-475-00	MYLAR	0.0022uF	5%	50V	C274	1-126-049-11	ELECT	22uF	20%	50V
C113	1-130-478-00	MYLAR	0.0039uF	5%	50V	C301	1-126-163-11	ELECT	4.7uF	20%	50V
C114	1-136-173-00	FILM	0.47uF	5%	50V	C302	1-126-163-11	ELECT	4.7uF	20%	50V
C115	1-136-167-00	FILM	0.15uF	5%	50V	C303	1-126-163-11	ELECT	4.7uF	20%	50V
C116	1-136-155-00	FILM	0.015uF	5%	50V	C304	1-130-475-00	MYLAR	0.0022uF	5%	50V
C117	1-124-903-11	ELECT	1uF	20%	50V	C305	1-130-475-00	MYLAR	0.0022uF	5%	50V
C118	1-136-169-00	FILM	0.22uF	5%	50V	C306	1-130-478-00	MYLAR	0.0039uF	5%	50V
C119	1-136-163-00	FILM	0.068uF	5%	50V	C307	1-136-173-00	FILM	0.47uF	5%	50V
C120	1-136-162-00	FILM	0.056uF	5%	50V	C308	1-136-167-00	FILM	0.15uF	5%	50V
C121	1-124-903-11	ELECT	1uF	20%	50V	C309	1-136-155-00	FILM	0.015uF	5%	50V
C122	1-130-480-00	MYLAR	0.0056uF	5%	50V	C310	1-124-903-11	ELECT	1uF	20%	50V
C123	1-136-153-00	FILM	0.01uF	5%	50V	C311	1-136-169-00	FILM	0.22uF	5%	50V
C125	1-136-165-00	FILM	0.4uF	5%	50V	C312	1-136-162-00	FILM	0.056uF	5%	50V
						C313	1-124-903-11	ELECT	1uF	20%	50V
						C314	1-136-163-00	FILM	0.068uF	5%	50V
						C315	1-130-480-00	MYLAR	0.0056uF	5%	50V
						C316	1-136-153-00	FILM	0.01uF	5%	50V
						C317	1-126-059-11	ELECT	10uF	20%	50V
						C318	1-126-059-11	ELECT	10uF	20%	50V
						C319	1-130-474-00	MYLAR	0.0018uF	5%	50V
						C320	1-126-059-11	ELECT	10uF	20%	50V
						C321	1-136-161-00	FILM	0.047uF	5%	50V
						C322	1-126-049-11	ELECT	22uF	20%	50V
						C323	1-110-338-51	MYLAR	180PF	5%	50V
						C324	1-136-935-11	FILM	22PF	5%	630V
						C325	1-136-155-00	FILM	0.015uF	5%	50V

MAIN

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>			<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>		
C326	1-136-155-00	FILM	0.015uF	5%	50V	C554	1-130-474-00	MYLAR	0.0018uF	5%	50V
C327	1-136-156-00	FILM	0.018uF	5%	50V	C555	1-124-925-11	ELECT	2.2uF	20%	100V
C328	1-136-155-00	FILM	0.015uF	5%	50V	C556	1-136-228-11	FILM	0.0012uF	5%	100V
C329	1-136-156-00	FILM	0.018uF	5%	50V	C557	1-136-233-11	FILM	0.0047uF	5%	100V
C330	1-136-433-11	FILM	100PF	5%	630V	C558	1-136-228-11	FILM	0.0012uF	5%	100V
C331	1-136-803-11	FILM	560PF	5%	630V	C559	1-124-907-11	ELECT	10uF	20%	50V
C332	1-130-468-00	MYLAR	560PF	5%	50V	C560	1-124-925-11	ELECT	2.2uF	20%	100V
C333	1-136-153-00	FILM	0.01uF	5%	50V	C561	1-136-559-11	FILM	0.0047uF	5%	630V
C334	1-136-157-00	FILM	0.022uF	5%	50V	C562	1-124-907-11	ELECT	10uF	20%	50V
C335	1-136-165-00	FILM	0.1uF	5%	50V	C563	1-107-045-00	MICA	3.9PF		500V
C401	1-126-163-11	ELECT	4.7uF	20%	50V	C564	1-126-059-11	ELECT	10uF	20%	50V
C402	1-126-163-11	ELECT	4.7uF	20%	50V	C565	1-124-477-11	ELECT	47uF	20%	25V
C403	1-126-163-11	ELECT	4.7uF	20%	50V	C591	1-162-282-31	CERAMIC	100PF	10%	50V
C404	1-130-475-00	MYLAR	0.0022uF	5%	50V	C598	1-161-494-00	CERAMIC	0.022uF		25V
C405	1-130-475-00	MYLAR	0.0022uF	5%	50V	C601	1-124-636-00	ELECT	3300uF	20%	25V
C406	1-130-478-00	MYLAR	0.0039uF	5%	50V	C602	1-124-636-00	ELECT	3300uF	20%	25V
C407	1-136-173-00	FILM	0.47uF	5%	50V	C603	1-124-922-11	ELECT	1000uF	20%	63V
C408	1-136-167-00	FILM	0.15uF	5%	50V	C604	1-124-922-11	ELECT	1000uF	20%	63V
C409	1-136-155-00	FILM	0.015uF	5%	50V	C607	1-124-130-00	ELECT	100uF	20%	63V
C410	1-124-903-11	ELECT	1uF	20%	50V	C701	1-124-837-00	ELECT	3300uF	20%	16V
C411	1-136-169-00	FILM	0.22uF	5%	50V	C702	1-124-471-00	ELECT	1000uF	20%	6.3V
C412	1-136-162-00	FILM	0.056uF	5%	50V	C703	1-124-927-11	ELECT	4.7uF	20%	100V
C413	1-124-903-11	ELECT	1uF	20%	50V	C704	1-126-105-11	ELECT	1000uF	20%	35V
C414	1-136-163-00	FILM	0.058uF	5%	50V	C705	1-124-473-11	ELECT	1000uF	20%	10V
C415	1-130-480-00	MYLAR	0.0056uF	5%	50V	C706	1-124-927-11	ELECT	4.7uF	20%	100V
C416	1-136-153-00	FILM	0.01uF	5%	50V	C707	1-124-927-11	ELECT	4.7uF	20%	100V
C417	1-126-059-11	ELECT	10uF	20%	50V	C708	1-126-955-11	ELECT	4700uF	20%	35V
C418	1-126-059-11	ELECT	10uF	20%	50V	C709	1-124-556-11	ELECT	2200uF	20%	16V
C419	1-130-474-00	MYLAR	0.0018uF	5%	50V	C710	1-124-927-11	ELECT	4.7uF	20%	100V
C420	1-126-059-11	ELECT	10uF	20%	50V	C711	1-124-122-11	ELECT	100uF	20%	50V
C421	1-136-161-00	FILM	0.047uF	5%	50V	C712	1-124-477-11	ELECT	47uF	20%	25V
C422	1-126-049-11	ELECT	22uF	20%	50V	C713	1-164-159-11	CERAMIC	0.1uF		50V
C423	1-110-338-51	MYLAR	180PF	5%	50V	C714	1-124-927-11	ELECT	4.7uF	20%	100V
C424	1-136-935-11	FILM	22PF	5%	630V	C801	1-124-443-00	ELECT	100uF	20%	10V
C425	1-136-155-00	FILM	0.015uF	5%	50V	C802	1-124-472-11	ELECT	470uF	20%	10V
C426	1-136-155-00	FILM	0.015uF	5%	50V	C803	1-124-477-11	ELECT	47uF	20%	25V
C427	1-136-156-00	FILM	0.018uF	5%	50V	C804	1-124-927-11	ELECT	4.7uF	20%	100V
C428	1-136-155-00	FILM	0.015uF	5%	50V	C805	1-124-907-11	ELECT	10uF	20%	50V
C429	1-136-156-00	FILM	0.018uF	5%	50V	C806	1-164-159-11	CERAMIC	0.1uF		50V
C430	1-136-433-11	FILM	100PF	5%	630V	C807	1-164-159-11	CERAMIC	0.1uF		50V
C431	1-136-803-11	FILM	560PF	5%	630V			< CONNECTOR >			
C432	1-130-468-00	MYLAR	560PF	5%	50V	CN501	* 1-560-062-00	PIN, CONNECTOR 4P			
C433	1-136-153-00	FILM	0.01uF	5%	50V	CN502	* 1-584-666-11	PIN, CONNECTOR 10P			
C434	1-136-157-00	FILM	0.022uF	5%	50V	CN503	* 1-560-063-00	PIN, CONNECTOR 5P			
C435	1-136-165-00	FILM	0.1uF	5%	50V	CN551	* 1-564-510-11	PLUG, CONNECTOR 7P			
C501	1-130-475-00	MYLAR	0.0022uF	5%	50V	CN553	* 1-564-507-11	PLUG, CONNECTOR 4P			
C502	1-136-165-00	FILM	0.1uF	5%	50V	CNS55	* 1-564-509-11	PLUG, CONNECTOR 6P			
C503	1-124-902-00	ELECT	0.47uF	20%	50V	CNS56	* 1-560-062-00	PIN, CONNECTOR 4P			
C505	1-124-907-11	ELECT	10uF	20%	50V	CNS57	* 1-560-061-00	PIN, CONNECTOR 3P			
C506	1-124-925-11	ELECT	2.2uF	20%	100V	CN701	* 1-564-514-11	PLUG, CONNECTOR 11P			
C507	1-124-925-11	ELECT	2.2uF	20%	100V	CN801	* 1-564-666-11	PIN, CONNECTOR 10P			
C508	1-124-477-11	ELECT	47uF	20%	25V	CNS58	* 1-564-508-11	PLUG, CONNECTOR 8P			
C551	1-136-157-00	FILM	0.022uF	5%	50V	CNS59	* 1-564-342-11	PIN, CONNECTOR 8P			
C552	1-136-157-00	FILM	0.022uF	5%	50V	CNS60	* 1-564-336-00	PIN, CONNECTOR 2P			
C553	1-130-474-00	MYLAR	0.0018uF	5%	50V						

MAIN

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>				
< COMPOSITION >											
CP801	I-236-984-11	COMPOSITION CIRCUIT BLOCK		IC506	8-759-634-50	IC M5218AL					
< DIODE >											
D101	8-719-987-63	DIODE IN4148M		IC554	8-759-106-56	IC uPC1297CA					
D102	8-719-000-54	DIODE UZL-6L3		IC555	8-759-634-50	IC M5218AL					
D103	8-719-987-63	DIODE IN4148M		IC801	8-759-635-69	IC M50964-226SP					
D104	8-719-987-63	DIODE IN4148M		IC802	8-759-973-95	IC BA6219B					
D201	8-719-987-63	DIODE IN4148M		IC803	8-759-822-09	IC LB1641					
D202	8-719-000-54	DIODE UZL-6L3		< JACK >							
D203	8-719-987-63	DIODE IN4148M		J501	I-565-320-61	JACK, PIN 6P (CD/LINE)					
D204	8-719-987-63	DIODE IN4148M		< COIL >							
D501	8-719-987-63	DIODE IN4148M		L101	I-410-778-11	INDUCTOR	18mH				
D502	8-719-987-63	DIODE IN4148M		L201	I-410-778-11	INDUCTOR	18mH				
D503	8-719-987-63	DIODE IN4148M		L301	I-410-771-11	INDUCTOR	4.7mH				
D504	8-719-987-63	DIODE IN4148M		L302	I-410-769-31	INDUCTOR	3.3mH				
D505	8-719-987-63	DIODE IN4148M		L303	I-410-767-11	INDUCTOR	2.2mH				
D506	8-719-987-63	DIODE IN4148M		L304	I-410-780-11	INDUCTOR	27mH				
D507	8-719-987-63	DIODE IN4148M		L401	I-410-771-11	INDUCTOR	4.7mH				
D508	8-719-987-63	DIODE IN4148M		L402	I-410-769-31	INDUCTOR	3.3mH				
D509	8-719-987-63	DIODE IN4148M		L403	I-410-767-11	INDUCTOR	2.2mH				
D551	8-719-987-63	DIODE IN4148M		L404	I-410-780-11	INDUCTOR	27mH				
D552	8-719-987-63	DIODE IN4148M		< FILTER >							
D553	8-719-987-63	DIODE IN4148M		LPP301	I-236-087-11	FILTER, LOW PASS					
D554	8-719-987-63	DIODE IN4148M		LPP401	I-236-087-11	FILTER, LOW PASS					
D555	8-719-987-63	DIODE IN4148M		< PILOT LAMP >							
D556	8-719-987-63	DIODE IN4148M		PL551	I-518-471-31	LAMP, PILOT					
D601	8-719-230-02	DIODE 30DF2		PL552	I-518-471-31	LAMP, PILOT					
D602	8-719-230-02	DIODE 30DF2		< TRANSISTOR >							
D603	8-719-230-02	DIODE 30DF2		Q106	8-729-922-37	TRANSISTOR	ZSD2144S				
D604	8-719-230-02	DIODE 30DF2		Q107	8-729-922-37	TRANSISTOR	ZSD2144S				
D605	8-719-933-41	DIODE HZS6C3L		Q108	8-729-922-37	TRANSISTOR	ZSD2144S				
D701	8-719-200-77	DIODE 10E2N		Q206	8-729-922-37	TRANSISTOR	ZSD2144S				
D702	8-719-200-77	DIODE 10E2N		Q207	8-729-922-37	TRANSISTOR	ZSD2144S				
D703	8-719-200-77	DIODE 10E2N		Q208	8-729-922-37	TRANSISTOR	ZSD2144S				
D704	8-719-200-77	DIODE 10E2N		Q301	8-729-922-37	TRANSISTOR	ZSD2144S				
D705	8-719-200-77	DIODE 10E2N		Q302	8-729-922-37	TRANSISTOR	ZSD2144S				
D706	8-719-200-77	DIODE 10E2N		Q303	8-729-922-37	TRANSISTOR	ZSD2144S				
D707	8-719-200-77	DIODE 10E2N		Q304	8-729-922-37	TRANSISTOR	ZSD2144S				
D708	8-719-933-41	DIODE HZS6C3L		Q305	8-729-922-37	TRANSISTOR	ZSD2144S				
D712	8-719-933-41	DIODE HZS6C3L		Q401	8-729-922-37	TRANSISTOR	ZSD2144S				
D713	8-719-001-79	DIODE UZL-12H1		Q402	8-729-922-37	TRANSISTOR	ZSD2144S				
D714	8-719-015-02	DIODE UZF-8.2BB		Q403	8-729-922-37	TRANSISTOR	ZSD2144S				
D715	8-719-200-77	DIODE 10E2N		Q404	8-729-922-37	TRANSISTOR	ZSD2144S				
D716	8-719-987-63	DIODE IN4148M		Q405	8-729-922-37	TRANSISTOR	ZSD2144S				
D801	8-719-200-77	DIODE 10E2N		Q501	8-729-922-37	TRANSISTOR	ZSD2144S				
D802	8-719-987-63	DIODE IN4148M		Q502	8-729-922-37	TRANSISTOR	ZSD2144S				
D803	8-719-987-63	DIODE IN4148M		Q503	8-729-900-89	TRANSISTOR	DTC144ES				
< IC >											
IC501	8-759-602-01	IC M5220P		Q504	8-729-900-80	TRANSISTOR	DTC114ES				
IC502	8-752-018-80	IC CX20188									
IC503	8-759-000-49	IC MC14066BCP									
IC504	8-759-945-58	IC RC4558P									
IC505	8-759-634-50	IC M5218AL									

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>		<u>Remarks</u>		<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>		<u>Remarks</u>	
Q505	8-729-900-89	TRANSISTOR	DTC144ES			R119	1-247-719-11	CARBON	3.3K	5%	1/4W
Q551	8-729-194-57	TRANSISTOR	2SC945-P			R120	1-246-545-00	CARBON	1.0M	5%	1/4W
Q552	8-729-194-57	TRANSISTOR	2SC945-P			R121	1-247-710-11	CARBON	560	5%	1/4W
Q553	8-729-281-52	TRANSISTOR	2SC1815-Y			R122	1-249-462-11	CARBON	22K	5%	1/4W
Q554	8-729-900-80	TRANSISTOR	DTC114ES			R123	1-247-852-11	CARBON	7.5K	5%	1/4W
Q555	8-729-900-61	TRANSISTOR	DTA114ES			R124	1-249-415-11	CARBON	680	5%	1/4W
Q556	8-729-900-80	TRANSISTOR	DTC114ES			R125	1-247-854-11	CARBON	9.1K	5%	1/4W
Q557	8-729-900-80	TRANSISTOR	DTC114ES			R126	1-249-465-11	CARBON	47K	5%	1/4W
Q558	8-729-900-80	TRANSISTOR	DTC114ES			R127	1-249-465-11	CARBON	47K	5%	1/4W
Q559	8-729-900-89	TRANSISTOR	DTC144ES			R128	1-249-681-11	CARBON	2.2K	5%	1/2W
Q560	8-729-900-89	TRANSISTOR	DTC144ES			R129	1-249-673-11	CARBON	1K	5%	1/2W
Q601	8-729-141-89	TRANSISTOR	2SD1585-LX			R130	1-249-461-11	CARBON	18K	5%	1/4W
Q602	8-729-141-83	TRANSISTOR	2SB1094-LK			R131	1-249-421-11	CARBON	2.2K	5%	1/4W
Q603	8-729-922-37	TRANSISTOR	2SD2144S			R132	1-249-429-11	CARBON	10K	5%	1/4W
Q604	8-729-224-62	TRANSISTOR	2SK246-GR			R133	1-249-433-11	CARBON	22K	5%	1/4W
Q605	8-729-141-32	TRANSISTOR	2SA1409-LK			R134	1-249-417-11	CARBON	1K	5%	1/4W
Q606	8-729-224-62	TRANSISTOR	2SK246-GR			R135	1-249-437-11	CARBON	47K	5%	1/4W
Q607	8-729-620-05	TRANSISTOR	2SC2603-EF			R136	1-249-427-11	CARBON	6.8K	5%	1/4W
Q611	8-729-119-76	TRANSISTOR	2SA1175-HFE			R137	1-249-427-11	CARBON	6.8K	5%	1/4W
Q701	8-729-209-15	TRANSISTOR	2SD2012			R138	1-215-465-00	METAL	68K	1%	1/6W
Q702	8-729-209-15	TRANSISTOR	2SD2012			R139	1-215-448-00	METAL	13K	1%	1/6W
Q703	8-729-209-15	TRANSISTOR	2SD2012			R140	1-215-471-00	METAL	120K	1%	1/6W
Q704	8-729-620-05	TRANSISTOR	2SC2603-EF			R141	1-249-408-11	CARBON	180	5%	1/4W
Q706	8-729-922-37	TRANSISTOR	2SD2144S			R142	1-247-883-00	CARBON	150K	5%	1/4W
Q707	8-729-620-05	TRANSISTOR	2SC2603-EF			R143	1-249-429-11	CARBON	10K	5%	1/4W
Q708	8-729-922-37	TRANSISTOR	2SD2144S			R201	1-249-721-11	CARBON	100K	5%	1/2W
Q709	8-729-140-04	TRANSISTOR	2SB1116A-L			R202	1-247-740-11	CARBON	120	5%	1/2W
Q710	8-729-141-32	TRANSISTOR	2SA1409-LK			R204	1-249-724-91	CARBON	130K	5%	1/2W
Q801	8-729-900-65	TRANSISTOR	DTA144ES			R205	1-247-761-11	CARBON	5.6K	5%	1/2W
Q802	8-729-900-65	TRANSISTOR	DTA144ES			R213	1-247-717-11	CARBON	2.2K	5%	1/4W
Q803	8-729-900-65	TRANSISTOR	DTA144ES			R214	1-247-138-00	CARBON	2K	5%	1/4W
Q804	8-729-900-65	TRANSISTOR	DTA144ES			R215	1-247-720-11	CARBON	3.9K	5%	1/4W
Q805	8-729-119-76	TRANSISTOR	2SA1175-HFE			R216	1-247-710-11	CARBON	560	5%	1/4W
Q806	8-729-900-65	TRANSISTOR	DTA144ES			R217	1-247-725-11	CARBON	10K	5%	1/4W
Q807	8-729-900-65	TRANSISTOR	DTA144ES			R218	1-247-719-11	CARBON	3.3K	5%	1/4W
Q808	8-729-119-76	TRANSISTOR	2SA1175-HFE			R219	1-247-719-11	CARBON	3.3K	5%	1/4W
Q809	8-729-900-65	TRANSISTOR	DTA144ES			R220	1-246-545-00	CARBON	1.0M	5%	1/4W
Q810	8-729-119-76	TRANSISTOR	2SA1175-HFE			R221	1-247-710-11	CARBON	560	5%	1/4W
Q811	8-729-119-76	TRANSISTOR	2SA1175-HFE			R222	1-249-462-11	CARBON	22K	5%	1/4W
Q812	8-729-900-61	TRANSISTOR	DTA114ES			R223	1-247-852-11	CARBON	7.5K	5%	1/4W
Q813	8-729-620-05	TRANSISTOR	2SC2603-EF			R224	1-249-415-11	CARBON	680	5%	1/4W
Q814	8-729-620-05	TRANSISTOR	2SC2603-EF			R225	1-247-854-11	CARBON	9.1K	5%	1/4W
< RESISTOR >						R226	1-249-465-11	CARBON	47K	5%	1/4W
R101	1-247-721-11	CARBON	100K	5%	1/2W	R227	1-249-465-11	CARBON	47K	5%	1/4W
R102	1-247-740-11	CARBON	120I	5%	1/2W	R228	1-249-681-11	CARBON	2.2K	5%	1/2W
R104	1-247-724-91	CARBON	130K	5%	1/2W	R229	1-249-673-11	CARBON	1K	5%	1/2W
R105	1-247-761-11	CARBON	5.6K	5%	1/2W	R230	1-249-461-11	CARBON	18K	5%	1/4W
R113	1-247-717-11	CARBON	2.2K	5%	1/4W	R231	1-249-421-11	CARBON	2.2K	5%	1/4W
R114	1-247-138-00	CARBON	2K	5%	1/4W	R232	1-249-429-11	CARBON	10K	5%	1/4W
R115	1-247-720-11	CARBON	3.9K	5%	1/4W	R233	1-249-433-11	CARBON	22K	5%	1/4W
R116	1-247-710-11	CARBON	560	5%	1/4W	R234	1-249-417-11	CARBON	1K	5%	1/4W
R117	1-247-725-11	CARBON	10K	5%	1/4W	R235	1-249-437-11	CARBON	47K	5%	1/4W
R118	1-247-719-11	CARBON	3.3K	5%	1/4W	R236	1-249-427-11	CARBON	6.8K	5%	1/4W
						R237	1-215-441-00	METAL	6.8K	1%	1/6W
						R237	1-249-427-11	CARBON	6.8K	5%	1/4W

MAIN

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>				
R238	1-215-465-00	METAL	68K	1%	1/6W	R405	1-247-720-11	CARBON	3.9K	5%	1/4W
R239	1-215-448-00	METAL	13K	1%	1/6W	R406	1-247-719-11	CARBON	3.3K	5%	1/4W
R240	1-215-471-00	METAL	120K	1%	1/6W	R407	1-247-152-00	CARBON	7.5K	5%	1/4W
R241	1-249-408-11	CARBON	180	5%	1/4W	R408	1-249-465-11	CARBON	47K	5%	1/4W
R242	1-247-883-00	CARBON	150K	5%	1/4W	R409	1-249-465-11	CARBON	47K	5%	1/4W
R243	1-249-429-11	CARBON	10K	5%	1/4W	R410	1-247-128-00	CARBON	750	5%	1/4W
R301	1-249-703-11	CARBON	18K	5%	1/2W	R411	1-247-725-11	CARBON	10K	5%	1/4W
R302	1-249-490-11	CARBON	27K	5%	1/2W	R412	1-247-719-11	CARBON	3.3K	5%	1/4W
R303	1-249-469-11	CARBON	100K	5%	1/4W	R413	1-247-719-11	CARBON	3.3K	5%	1/4W
R304	1-247-723-11	CARBON	6.8K	5%	1/4W	R414	1-246-545-00	CARBON	1.0M	5%	1/4W
R305	1-247-720-11	CARBON	3.9K	5%	1/4W	R415	1-247-710-11	CARBON	560	5%	1/4W
R306	1-247-719-11	CARBON	3.3K	5%	1/4W	R416	1-249-462-11	CARBON	22K	5%	1/4W
R307	1-247-152-00	CARBON	7.5K	5%	1/4W	R417	1-247-854-11	CARBON	9.1K	5%	1/4W
R308	1-249-465-11	CARBON	47K	5%	1/4W	R418	1-247-852-11	CARBON	7.5K	5%	1/4W
R309	1-249-465-11	CARBON	47K	5%	1/4W	R419	1-249-415-11	CARBON	680	5%	1/4W
R310	1-247-128-00	CARBON	750	5%	1/4W	R420	1-249-462-11	CARBON	22K	5%	1/4W
R311	1-247-725-11	CARBON	10K	5%	1/4W	R421	1-247-719-11	CARBON	3.3K	5%	1/4W
R312	1-247-719-11	CARBON	3.3K	5%	1/4W	R422	1-247-723-11	CARBON	6.8K	5%	1/4W
R313	1-247-719-11	CARBON	3.3K	5%	1/4W	R423	1-249-462-11	CARBON	22K	5%	1/4W
R314	1-246-545-00	CARBON	1.0M	5%	1/4W	R424	1-249-465-11	CARBON	47K	5%	1/4W
R315	1-247-710-11	CARBON	560	5%	1/4W	R425	1-247-717-11	CARBON	2.2K	5%	1/4W
R316	1-249-462-11	CARBON	22K	5%	1/4W	R426	1-249-469-11	CARBON	100K	5%	1/4W
R317	1-247-854-11	CARBON	9.1K	5%	1/4W	R427	1-249-593-11	CARBON	51K	5%	1/4W
R318	1-247-852-11	CARBON	7.5K	5%	1/4W	R428	1-247-721-11	CARBON	4.7K	5%	1/4W
R319	1-249-415-11	CARBON	680	5%	1/4W	R429	1-247-703-11	CARBON	180	5%	1/4W
R320	1-249-462-11	CARBON	22K	5%	1/4W	R430	1-247-725-11	CARBON	10K	5%	1/4W
R321	1-247-719-11	CARBON	3.3K	5%	1/4W	R431	1-247-148-00	CARBON	5.1K	5%	1/4W
R322	1-247-723-11	CARBON	6.8K	5%	1/4W	R432	1-247-701-11	CARBON	120	5%	1/4W
R323	1-249-462-11	CARBON	22K	5%	1/4W	R433	1-247-152-00	CARBON	8.2K	5%	1/4W
R324	1-249-465-11	CARBON	47K	5%	1/4W	R434	1-247-720-11	CARBON	3.9K	5%	1/4W
R325	1-247-717-11	CARBON	2.2K	5%	1/4W	R435	1-247-701-11	CARBON	120	5%	1/4W
R326	1-249-469-11	CARBON	100K	5%	1/4W	R436	1-249-429-11	CARBON	10K	5%	1/4W
R327	1-249-593-11	CARBON	51K	5%	1/4W	R437	1-249-429-11	CARBON	10K	5%	1/4W
R328	1-247-721-11	CARBON	4.7K	5%	1/4W	R438	1-249-429-11	CARBON	10K	5%	1/4W
R329	1-247-703-11	CARBON	180	5%	1/4W	R439	1-249-429-11	CARBON	10K	5%	1/4W
R330	1-247-725-11	CARBON	10K	5%	1/4W	R440	1-249-421-11	CARBON	2.2K	5%	1/4W
R331	1-247-148-00	CARBON	5.1K	5%	1/4W	R441	1-249-604-11	CARBON	150K	5%	1/4W
R332	1-247-701-11	CARBON	120	5%	1/4W	R442	△1-212-857-00	FUSIBLE	10	5%	1/4W F
R333	1-247-152-00	CARBON	8.2K	5%	1/4W	R443	1-249-435-11	CARBON	33K	5%	1/4W
R334	1-247-720-11	CARBON	3.9K	5%	1/4W	R444	1-249-426-11	CARBON	5.6K	5%	1/4W
R334	1-247-721-11	CARBON	4.7K	5%	1/4W	R501	1-249-433-11	CARBON	22K	5%	1/4W
R335	1-247-701-11	CARBON	120	5%	1/4W	R502	1-249-433-11	CARBON	22K	5%	1/4W
R336	1-249-429-11	CARBON	10K	5%	1/4W	R503	1-249-469-11	CARBON	100K	5%	1/4W
R337	1-249-429-11	CARBON	10K	5%	1/4W	R504	1-249-465-11	CARBON	47K	5%	1/4W
R338	1-249-429-11	CARBON	10K	5%	1/4W	R505	1-215-472-00	METAL	130K	1%	1/6W
R339	1-249-429-11	CARBON	10K	5%	1/4W	R506	1-249-437-11	CARBON	47K	5%	1/4W
R340	1-249-421-11	CARBON	2.2K	5%	1/4W	R507	1-249-433-11	CARBON	22K	5%	1/4W
R341	1-249-604-11	CARBON	150K	5%	1/4W	R508	1-249-417-11	CARBON	1K	5%	1/4W
R342	△1-212-857-00	FUSIBLE	10	5%	1/4W F	R509	1-247-885-00	CARBON	180K	5%	1/4W
R343	1-249-435-11	CARBON	33K	5%	1/4W	R510	1-249-433-11	CARBON	22K	5%	1/4W
R344	1-249-426-11	CARBON	5.6K	5%	1/4W	R511	1-249-413-11	CARBON	470	5%	1/4W
R401	1-249-703-11	CARBON	18K	5%	1/2W	R512	1-249-413-11	CARBON	470	5%	1/4W
R402	1-249-490-11	CARBON	27K	5%	1/2W	R513	1-249-432-11	CARBON	18K	5%	1/4W
R403	1-249-469-11	CARBON	100K	5%	1/4W	R514	1-249-433-11	CARBON	22K	5%	1/4W
R404	1-247-723-11	CARBON	6.8K	5%	1/4W	R515	1-249-437-11	CARBON	47K	5%	1/4W

Note: The components identified by mark ▲ or dotted line with mark ▲ are critical for safety. Replace only with part number specified.

MAIN

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
R516	I-249-437-11	CARBON	47K	5%	1/4W	R712	I-249-429-11	CARBON	10K	5%	1/4W
R517	I-249-437-11	CARBON	47K	5%	1/4W	R713	I-249-441-11	CARBON	100K	5%	1/4W
R518	I-249-429-11	CARBON	10K	5%	1/4W	R714	I-249-425-11	CARBON	4.7K	5%	1/4W
R519	I-249-429-11	CARBON	10K	5%	1/4W	R715	I-247-752-11	CARBON	1K	5%	1/2W
R520	I-249-437-11	CARBON	47K	5%	1/4W	R801	I-249-429-11	CARBON	10K	5%	1/4W
R521	I-249-429-11	CARBON	10K	5%	1/4W	R802	I-249-429-11	CARBON	10K	5%	1/4W
R522	I-249-437-11	CARBON	47K	5%	1/4W	R803	I-249-440-11	CARBON	82K	5%	1/4W
R523	I-249-421-11	CARBON	2.2K	5%	1/4W	R804	I-249-429-11	CARBON	10K	5%	1/4W
R550	I-215-472-00	METAL	130K	1%	1/6W	R805	I-249-429-11	CARBON	10K	5%	1/4W
R551	I-249-432-11	CARBON	18K	5%	1/4W	R806	I-249-429-11	CARBON	10K	5%	1/4W
R552	I-249-433-11	CARBON	22K	5%	1/4W	R807	I-249-429-11	CARBON	10K	5%	1/4W
R553	I-249-406-11	CARBON	120	5%	1/4W	R808	I-249-421-11	CARBON	2.2K	5%	1/4W
R554	I-249-432-11	CARBON	18K	5%	1/4W	R809	I-249-421-11	CARBON	2.2K	5%	1/4W
R555	I-249-397-11	CARBON	22	5%	1/4W	R810	I-249-429-11	CARBON	10K	5%	1/4W
R556	I-247-856-00	CARBON	11K	5%	1/4W	R811	I-249-435-11	CARBON	33K	5%	1/4W
R557	I-249-429-11	CARBON	10K	5%	1/4W	R812	I-249-429-11	CARBON	10K	5%	1/4W
R558	I-249-406-11	CARBON	120	5%	1/4W	R813	I-249-413-11	CARBON	470	5%	1/4W
R559	I-247-856-00	CARBON	11K	5%	1/4W	R814	I-249-436-11	CARBON	39K	5%	1/4W
R560	I-249-397-11	CARBON	22	5%	1/4W	R815	I-249-436-11	CARBON	39K	5%	1/4W
R561	I-247-887-00	CARBON	220K	5%	1/4W	R816	I-247-903-00	CARBON	1M	5%	1/4W
R562	I-247-887-00	CARBON	220K	5%	1/4W	R817	I-249-425-11	CARBON	4.7K	5%	1/4W
R563	I-249-407-11	CARBON	150	5%	1/4W	R818	I-249-417-11	CARBON	1K	5%	1/4W
R564	I-249-437-11	CARBON	47K	5%	1/4W	R819	I-249-435-11	CARBON	33K	5%	1/4W
R565	I-249-441-11	CARBON	100K	5%	1/4W	R820	I-249-437-11	CARBON	47K	5%	1/4W
R566	I-249-421-11	CARBON	2.2K	5%	1/4W	R821	I-249-484-11	CARBON	6.8	5%	1/2W
R567	I-249-440-11	CARBON	82K	5%	1/4W	R822	I-249-484-11	CARBON	6.8	5%	1/2W
R568	I-249-440-11	CARBON	82K	5%	1/4W	R823	I-247-854-11	CARBON	9.1K	5%	1/4W
R569	△I-212-853-00	FUSIBLE	6.8	5%	1/4W F	R824	I-249-425-11	CARBON	4.7K	5%	1/4W
R570	△I-212-853-00	FUSIBLE	6.8	5%	1/4W F	R825	I-249-425-11	CARBON	4.7K	5%	1/4W
R571	I-249-427-11	CARBON	6.8K	5%	1/4W	R826	I-249-425-11	CARBON	4.7K	5%	1/4W
R572	I-249-381-11	CARBON	1	5%	1/4W	R827	I-249-425-11	CARBON	4.7K	5%	1/4W
R573	I-249-421-11	CARBON	2.2K	5%	1/4W	R828	I-249-426-11	CARBON	5.6K	5%	1/4W
R574	I-249-417-11	CARBON	1K	5%	1/4W	R829	I-249-429-11	CARBON	10K	5%	1/4W
R576	I-249-413-11	CARBON	470	5%	1/4W	R830	I-249-429-11	CARBON	10K	5%	1/4W
R577	I-249-417-11	CARBON	1K	5%	1/4W	R831	I-249-427-11	CARBON	6.8K	5%	1/4W
R578	I-249-421-11	CARBON	2.2K	5%	1/4W	R832	I-249-428-11	CARBON	8.2K	5%	1/4W
R603	I-247-717-11	CARBON	2.2K	5%	1/4W	R833	I-249-429-11	CARBON	10K	5%	1/4W
R604	I-247-717-11	CARBON	2.2K	5%	1/4W	R834	I-249-429-11	CARBON	10K	5%	1/4W
R605	I-247-706-11	CARBON	330	5%	1/4W	R835	I-249-413-11	CARBON	470	5%	1/4W
R606	I-249-556-11	CARBON	1.5K	5%	1/4W						< VARIABLE RESISTOR >
R607	I-249-556-11	CARBON	1.5K	5%	1/4W						
R608	I-249-926-11	CARBON	1.3K	5%	1/4W	RV101	I-230-504-11	RES, ADJ, METAL	220		
R609	I-247-717-11	CARBON	2.2K	5%	1/4W	RV102	I-238-601-11	RES, ADJ, CARBON	22K		
R611	I-247-704-11	CARBON	220	5%	1/4W	RV201	I-230-504-11	RES, ADJ, METAL	220		
R612	I-247-704-11	CARBON	220	5%	1/4W	RV202	I-238-601-11	RES, ADJ, CARBON	22K		
						RV301	I-228-993-00	RES, ADJ, METAL	4.7K		
R701	I-249-421-11	CARBON	2.2K	5%	1/4W	RV303	I-238-601-11	RES, ADJ, CARBON	22K		
R702	I-249-421-11	CARBON	2.2K	5%	1/4W	RV401	I-228-993-00	RES, ADJ, METAL	4.7K		
R703	I-249-421-11	CARBON	2.2K	5%	1/4W	RV403	I-238-601-11	RES, ADJ, CARBON	22K		
R704	I-249-425-11	CARBON	4.7K	5%	1/4W	RV551	I-238-595-11	RES, ADJ, CARBON	220		
R706	I-249-425-11	CARBON	4.7K	5%	1/4W	RV552	I-238-595-11	RES, ADJ, CARBON	220		
R707	I-249-421-11	CARBON	2.2K	5%	1/4W	RV553	I-238-599-11	RES, ADJ, CARBON	4.7K		
R708	I-249-421-11	CARBON	2.2K	5%	1/4W	RV554	I-238-601-11	RES, ADJ, CARBON	22K		
R709	I-249-427-11	CARBON	6.8K	5%	1/4W	RV801	I-238-599-11	RES, ADJ, CARBON	4.7K		
R710	I-249-425-11	CARBON	4.7K	5%	1/4W						
R711	I-249-431-11	CARBON	15K	5%	1/4W						

Note: The components identified by mark ▲ or dotted line with mark △ are critical for safety. Replace only with part number specified.

MAIN	REEL MOTOR	PANEL
------	------------	-------

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks						
< TRANSFORMER >													
T301	1-433-384-11	TRANSFORMER, BIAS OSCILLATOR		CN521	* 1-564-521-11	PLUG, CONNECTOR 6P							
T401	1-433-384-11	TRANSFORMER, BIAS OSCILLATOR		CN543	* 1-560-070-00	BASE POST 5P							
T551	1-433-359-11	TRANSFORMER, BIAS OSCILLATION		CN591	* 1-564-519-11	PLUG, CONNECTOR 4P							
< TEST PIN >													
TP551	* 1-564-505-11	PLUG, CONNECTOR 2P		CN592	* 1-564-519-11	PLUG, CONNECTOR 4P							
TP552	* 1-564-506-11	PLUG, CONNECTOR 3P		CN593	* 1-564-519-11	PLUG, CONNECTOR 4P							
TP553	* 1-564-506-11	PLUG, CONNECTOR 3P		CN901	* 1-564-336-00	PIN, CONNECTOR 2P							
TP801	* 1-564-506-11	PLUG, CONNECTOR 3P		< COMPOSITION >									
< VIBRATOR >													
X801	1-577-358-21	VIBRATOR, CERAMIC (4MHz)		CP901	1-232-881-11	COMPOSITION CIRCUIT BLOCK							

* 1-632-741-11 REEL MOTOR BOARD													

< CAPACITOR >													
C1051	1-124-907-11	ELECT	10uF	20%	50V	D901	8-719-987-63	DIODE IN4148M					
C1052	1-124-907-11	ELECT	10uF	20%	50V	D902	8-719-987-63	DIODE IN4148M					
C1053	1-164-159-11	CERAMIC	0.1uF		50V	D903	8-719-933-57	DIODE HZS9BZL					
< CONNECTOR >													
CN1051	* 1-564-499-11	PIN, CONNECTOR 6P		D904	8-719-987-63	DIODE IN4148M							
CN1052	* 1-564-718-11	PIN, CONNECTOR (SMALL TYPE) 2P		D905	8-719-987-63	DIODE IN4148M							
CN1053	* 1-564-718-11	PIN, CONNECTOR (SMALL TYPE) 2P		D906	8-719-987-63	DIODE IN4148M							
< RESISTOR >													
R1051	1-249-412-11	CARBON	390	5%	1/4W	D907	8-719-987-63	DIODE IN4148M					

* A-2006-781-A PANEL BOARD, COMPLETE													

(includink ●A-G)													
< CAPACITOR >													
C001	1-161-744-00	CERAMIC	0.01uF		400V	J541	1-507-796-71	JACK (HEADPHONES)					
C181	1-126-059-11	ELECT	10uF	20%	50V	< TRANSISTOR >							
C281	1-126-059-11	ELECT	10uF	20%	50V	Q901	8-729-115-28	TRANSISTOR BN1L32-K					
C341	1-130-473-00	MYLAR	0.0015uF	5%	50V	Q902	8-729-119-76	TRANSISTOR 2SA1175-HFE					
C342	1-130-471-00	MYLAR	0.001uF	5%	50V	Q903	8-729-900-61	TRANSISTOR DTA114ES					
C441	1-130-473-00	MYLAR	0.0015uF	5%	50V	Q904	8-729-900-61	TRANSISTOR DTA114ES					
C442	1-130-471-00	MYLAR	0.001uF	5%	50V	Q905	8-729-900-61	TRANSISTOR DTA114ES					
C541	1-123-369-00	ELECT	4.7uF	20%	50V	Q906	8-729-900-61	TRANSISTOR DTA114ES					
C542	1-123-369-00	ELECT	4.7uF	20%	50V	Q907	8-729-900-65	TRANSISTOR DTA114ES					
C597	1-161-494-00	CERAMIC	0.022uF		25V	Q908	8-729-900-65	TRANSISTOR DTA114ES					
C901	1-126-177-11	ELECT	100uF	20%	10V	Q909	8-729-900-65	TRANSISTOR DTA114ES					
< CONNECTOR >													
CN001	* 1-568-226-11	PIN, CONNECTOR 2P				Q910	8-729-900-65	TRANSISTOR DTA114ES					
CN002	* 1-568-226-11	PIN, CONNECTOR 2P				Q911	8-729-900-89	TRANSISTOR DTC114ES					
						Q912	8-729-900-65	TRANSISTOR DTA114ES					
						Q913	8-729-900-85	TRANSISTOR DTA114ES					
						Q914	8-729-900-65	TRANSISTOR DTA114ES					

PANEL

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
Q915	8-729-900-89	TRANSISTOR DTC144ES		R925	1-249-425-11	CARBON	4.7K 5% 1/4W
Q916	8-729-900-65	TRANSISTOR DTA144ES		R926	1-249-441-11	CARBON	100K 5% 1/4W
Q917	8-729-900-65	TRANSISTOR DTA144ES		R927	1-249-441-11	CARBON	100K 5% 1/4W
Q918	8-729-119-76	TRANSISTOR 2SA1175-HFE		R928	1-249-441-11	CARBON	100K 5% 1/4W
Q919	8-729-900-65	TRANSISTOR DTA144ES		R929	1-249-433-11	CARBON	22K 5% 1/4W
		< RESISTOR >		R930	1-249-441-11	CARBON	100K 5% 1/4W
				R931	1-249-425-11	CARBON	4.7K 5% 1/4W
R001	1-247-752-11	CARBON	1K 5% 1/2W				< VARIABLE RESISTOR >
R181	1-249-429-11	CARBON	10K 5% 1/4W				
R182	1-249-433-11	CARBON	22K 5% 1/4W	RV541	1-241-330-11	RES, VAR, CARBON 20K/20K (PHONE LEVEL)	
R183	1-249-423-11	CARBON	3.3K 5% 1/4W	RV591	1-238-833-21	RES, VAR, CARBON 20K/20K (REC LEVEL)	
R184	1-247-704-11	CARBON	220 5% 1/4W	RV592	1-238-687-11	RES, VAR, CARBON 50K/50K (BALANCE)	
R281	1-249-429-11	CARBON	10K 5% 1/4W	RV593	1-241-329-11	RES, VAR, CARBON 5K/5K (REC LEVEL)	
R282	1-249-434-11	CARBON	27K 5% 1/4W	RV594	1-241-328-11	RES, VAR, CARBON 10K/10K (BIAS)	
R283	1-249-423-11	CARBON	3.3K 5% 1/4W				< SWITCH >
R284	1-247-704-11	CARBON	220 5% 1/4W	S541	1-572-583-11	SWITCH, ROTARY (DOLBY NR)	
R381	1-247-721-11	CARBON	4.7K 5% 1/4W	S542	1-572-764-11	SWITCH, PUSH (2 KEY) (CALIBRATION /MPX FILTER)	
R382	1-247-152-00	CARBON	8.2K 5% 1/4W	S591	1-572-153-11	SWITCH, PUSH (1 KEY) (INPUT, CD DELECT /LINE)	
R383	1-247-725-11	CARBON	10K 5% 1/4W	S592	1-572-582-11	SWITCH, ROTARY (REC EQ CAL)	
R384	1-247-721-11	CARBON	4.7K 5% 1/4W	S701	1-572-267-51	SWITCH, PUSH (AC POWER)(1 KEY) (POWER)	
R385	1-246-545-00	CARBON	1.0M 5% 1/4W	S801	1-572-268-11	SWITCH, SLIDE (TIMER)	
R386	1-249-462-11	CARBON	22K 5% 1/4W	S901	1-554-303-21	SWITCH, TACTILE (COUNTER MEMORY)	
R481	1-247-721-11	CARBON	4.7K 5% 1/4W	S902	1-554-303-21	SWITCH, TACTILE (COUNTER RESET)	
R482	1-247-152-00	CARBON	8.2K 5% 1/4W	S903	1-554-303-21	SWITCH, TACTILE (DISPLAY MODE)	
R483	1-247-725-11	CARBON	10K 5% 1/4W	S904	1-554-303-21	SWITCH, TACTILE (OPEN/CLOSE)	
R484	1-247-721-11	CARBON	4.7K 5% 1/4W	S905	1-554-303-21	SWITCH, TACTILE (■)	
R485	1-246-545-00	CARBON	1.0M 5% 1/4W	S906	1-554-303-21	SWITCH, TACTILE (◀)	
R486	1-249-462-11	CARBON	22K 5% 1/4W	S907	1-554-303-21	SWITCH, TACTILE (▶)	
R590	1-249-429-11	CARBON	10K 5% 1/4W	S908	1-554-303-21	SWITCH, TACTILE (REC)	
R881	1-249-434-11	CARBON	27K 5% 1/4W	S909	1-554-303-21	SWITCH, TACTILE (▶)	
R882	1-249-431-11	CARBON	15K 5% 1/4W	S910	1-554-303-21	SWITCH, TACTILE (PAUSE)	
R901	1-249-421-11	CARBON	2.2K 5% 1/4W	S911	1-554-303-21	SWITCH, TACTILE (◀)	
R902	1-249-421-11	CARBON	2.2K 5% 1/4W	S912	1-554-303-21	SWITCH, TACTILE (▶)	
R903	1-247-895-00	CARBON	470K 5% 1/4W	S913	1-554-303-21	SWITCH, TACTILE (REC MUTE)	
R904	1-249-433-11	CARBON	22K 5% 1/4W	S914	1-554-303-21	SWITCH, TACTILE (MONITOR)	
R905	1-249-433-11	CARBON	22K 5% 1/4W				< VIBRATOR >
R906	1-249-429-11	CARBON	10K 5% 1/4W				
R907	1-249-425-11	CARBON	4.7K 5% 1/4W	X901	1-577-358-21	VIBRATOR, CERAMIC (4MHZ)	
R908	1-249-431-11	CARBON	15K 5% 1/4W				
R909	1-249-422-11	CARBON	2.7K 5% 1/4W				
R910	1-249-424-11	CARBON	3.9K 5% 1/4W				
R911	1-249-428-11	CARBON	8.2K 5% 1/4W				*****
R912	1-249-434-11	CARBON	27K 5% 1/4W				MISCELLANEOUS
R913	1-249-422-11	CARBON	2.7K 5% 1/4W				*****
R914	1-249-424-11	CARBON	3.9K 5% 1/4W				
R915	1-249-428-11	CARBON	8.2K 5% 1/4W	156	8-719-980-85	DIODE SLP325C	
R916	1-249-434-11	CARBON	27K 5% 1/4W	239	1-632-779-11	PC BOARD, PG	
R917	1-249-431-11	CARBON	15K 5% 1/4W	5	* 1-590-321-51	LEAD (WITH CONNECTOR)	
R918	1-249-409-11	CARBON	220 5% 1/4W	CNP701	△1-575-651-11	CORD, POWER	
R919	1-249-410-11	CARBON	270 5% 1/4W	F801	△1-532-285-00	FUSE, TIME-LAG(1, 25A)	
R920	1-249-412-11	CARBON	390 5% 1/4W	M1001	X-3356-638-1	MOTOR (REEL R) ASSY	
R921	1-249-421-11	CARBON	2.2K 5% 1/4W	M1002	X-3356-604-1	MOTOR (ASSIST) ASSY	
R922	1-249-421-11	CARBON	2.2K 5% 1/4W	S1001	1-466-238-11	ENCODER, ROTARY	
R923	1-247-903-00	CARBON	1M 5% 1/4W	T701	△1-450-856-11	TRANSFORMER, POWER	

Note: The components identified by mark ▲ or dotted line with mark △ are critical for safety. Replace only with part number specified.

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>
ACCESSORIES & PACKING MATERIALS							

1-558-271-11		CORD, CONNECTION		#1	7-682-547-09	SCREW +BV 3X6, S TIGHT	
* 3-363-900-01		CUSHION		#2	7-685-133-19	SCREW +BTP 2,6X6 TYPE2 N-S	
* 3-376-746-01		INDIVIDUAL CARTON		#3	7-682-547-04	SCREW +BVTT 3X6 (S)	
3-755-112-11		MANUAL, INSTRUCTION (ENGLISH/FRENCH/SPANISH/PORTUGUESE) (AEP)		#5	7-682-548-04	SCREW +BVTT 3X8 (S)	
3-755-112-41		MANUAL, INSTRUCTION (GERMAN/DUTCH/SWEDISH/ITALIAN) (AEP)		#6	7-682-548-09	SCREW +BVTT 3X8 (S)	
3-755-112-51		MANUAL, INSTRUCTION (GERMAN) (G)		#7	7-682-147-15	SCREW, TR	
				#8	7-682-548-09	SCREW +B 3X8	
				#9	7-682-547-04	SCREW +BVTT 3X6 (S)	
				#10	7-621-849-00	SCREW (BV/RING)	
				#11	7-628-253-00	SCREW +PS 2X4	
				#12	7-628-254-10	SCREW +PS 2,6X6	
				#13	7-671-154-01	STAINLESS BALL	
				#14	7-682-648-09	SCREW +PS 3X8	
				#16	7-621-255-20	SCREW +BVTT 2X4 (S)	
				#17	7-621-255-35	SCREW +BVTT 2X5 (S)	
				#18	7-685-870-01	SCREW +BVTT 3X5 (S)	
				#20	7-621-772-70	SCREW +B 2X14	
				#21	7-622-205-05	NUT M2 TYPE2	
				#22	7-621-775-10	SCREW +B 2,6X4	
				#23	7-685-533-19	SCREW +BV 2,6X8 TAPPING	