

TCM-80V

SERVICE MANUAL

*US Model
Canadian Model
AEP Model
UK Model
E Model
Tourist Model*



Model Name Using Similar Mechanism	NEW
Tape Transport Mechanism Type	MT-80-60

SPECIFICATIONS

Recording system

2-track 1 channel monaural

Frequency range

150 - 8,000 Hz

Speaker

Approx. 3.6 cm (1 7/16 in.) dia.

Power output

70 mW (at 10 % harmonic distortion)

Input

Microphone input jack (minijack) sensitivity 0.3 mV for 3 kilohms or lower impedance microphone

Output

Earphone jack (minijack) for 8 - 300 ohms earphone

Variable range of the tape speed

From +20% to -10%

Power requirements

- Two size AAA (R03) batteries (not supplied): 1.5V DC
- Two NC-6WM rechargeable batteries (1.2 V) (not supplied)
- DC IN 1.5 V jack accepts:
 - Sony AC-E15HG AC power adaptor (not supplied) suitable in the country where the unit is to be used.
 - Sony DCC-E115L or DCC-E215HG car battery cord (not supplied) for use on 12 V car battery.

Dimensions (w/h/d) (incl. projecting parts and controls)Approx. 110.9 x 28.6 x 77.2 mm
(4 3/8 x 1 3/16 x 3 1/4 in.)**Mass (incl. batteries)**

Approx. 220 g (7.8 oz.)

Supplied accessories

- Carrying case (1)
- Sony alkaline batteries LR03 (SG) (2) (Sony world model only)
- Microphone (1) (Sony world model only)
- Earphones (1) (Sony world model only)
- Ear adaptors (2) (Sony world model only)

Design and specifications are subject to change without notice.

CASSETTE CORDER
SONY®



TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
Specifications	1	
1. SERVICING NOTE	3	
2. GENERAL	5	
3. DISASSEMBLY	7	
4. MECHANICAL ADJUSTMENT	9	
5. ELECTRICAL ADJUSTMENT	9	
6. DIAGRAMS		
6-1. Printed Wiring Boards	12	
6-2. Schematic Diagram	17	
6-3. IC Pin Function Description	21	
7. EXPLODED VIEWS	23	
8. ELECTRICAL PARTS LIST	26	

Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270°C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

SECTION 1

SERVICING NOTE

Photo sensor H701 mounted on the main board is used to detect rotation of the reels. Because it is mounted on the main board, when the main board is being removed, rotation of the reels cannot be detected and the auto-off/tape-end detector circuit does not operate correctly. Switch S701 (for N/R and FF/REW) is also mounted on the main board. Therefore, without the main board, the head cannot be placed in playback position, and power cannot be supplied to the circuitry of the playback system.

When the main board is being removed, follow the procedures below, in order to check operation of the mechanisms of the tape deck and to check voltages supplied to each circuit.

NOTE:

Do not change the setting position of switch S701 when removing the main board. If it has been changed accidentally, or if the desired mode cannot be set with the switch, adjust the setting again after the main board is installed.


PLAY mode

- (1) With a cassette tape loaded, press the "PLAY/DIR" button. (Confirm that the set-up of mechanical deck is finished.)
- (2) Short the service tap TAP701 to take out the tape (see figure below). At this time, the motor is in the stop status.
- (3) Press the "PLAY/DIR" button, thus the setting is over.
- (4) Remove the main board.

FF mode

- (1) With a cassette tape loaded, press the "FF/CUE" button. (Confirm that the set-up of mechanical deck is finished.)
- (2) Short the service tap TAP701 to take out the tape (see figure below). At this time, the motor is in the stop status.
- (3) Press the "FF/CUE" button, thus the setting is over.
- (4) Remove the main board.

[MAIN BOARD] (Component Side)

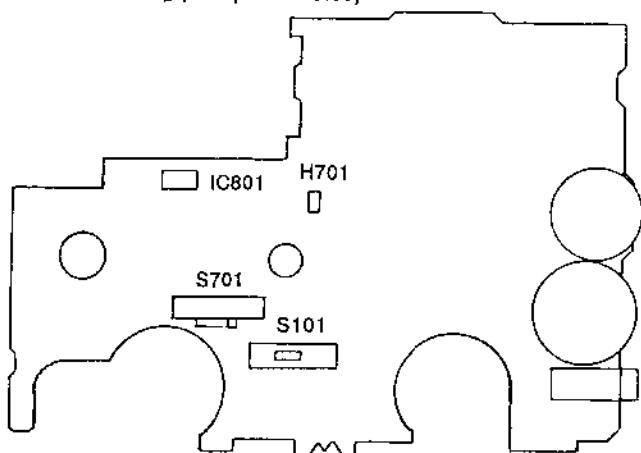

REW mode

- (1) With a cassette tape loaded, press the "REW/REVIEW" button. (Confirm that the set-up of mechanical deck is finished.)
- (2) Short the service tap TAP701 to take out the tape (see figure below). At this time, the motor is in the stop status.
- (3) Press the "REW/REVIEW" button, thus the setting is over.
- (4) Remove the main board.


REC mode

- (1) With a cassette tape loaded, press the "REC" button. (Confirm that the set-up of mechanical deck is finished.)
- (2) Short the service tap TAP701 to take out the tape (see figure below). At this time, the motor is in the stop status.
- (3) Press the "REC" button, thus the setting is over.
- (4) Remove the main board.


Note: After work is over,

- (1) Mount the main board, and press the "STOP" button.
- (2) Open the service tap TAP701.

Front Cabinet

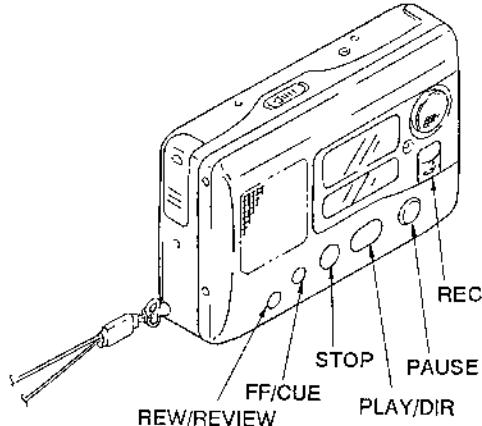


[MAIN BOARD] (Conductor Side)

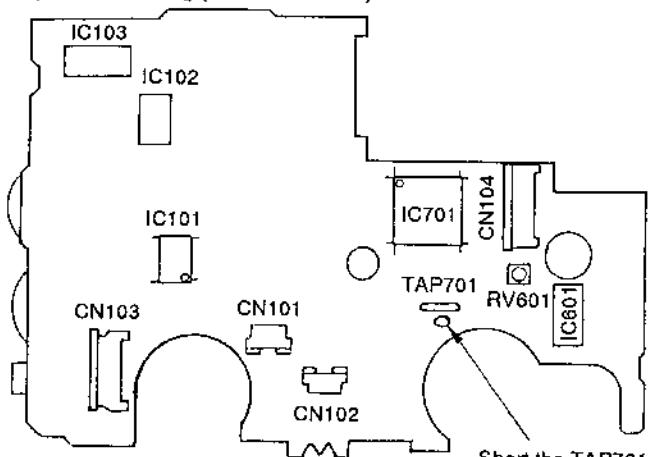


Function of the lever and rotating mechanisms for mode selection


- Mode selection starts when the motor rotates reversely.
- Change lever (B) moves to the left or right when driven with the gear (cam).
- The switch set position of switch S701 (4-position switch) is determined in accordance with the position of Change lever (B). When the switch set position is set appropriately, the motor rotates normally and the tape starts moving.

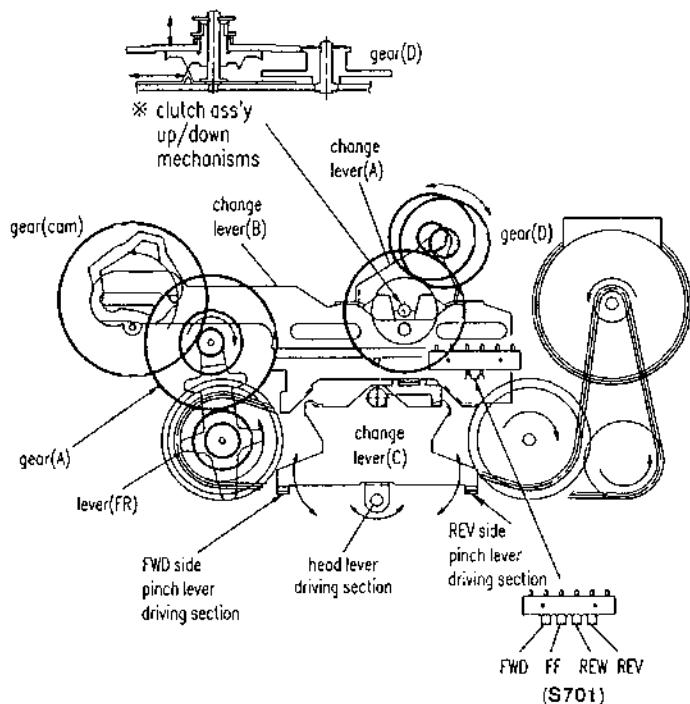




1. Rotating Mechanisms in PLAY Mode

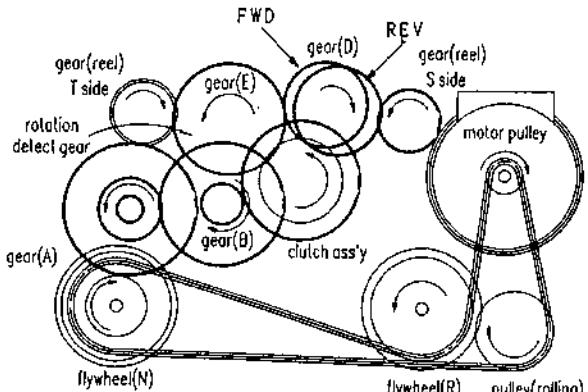

2. Rotating Mechanisms in FF, REW Mode

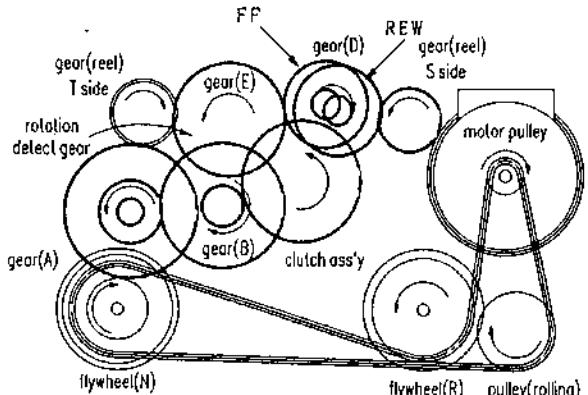

- Lever (FR) is driven with gear (A) by friction, and it swings to the left or right depending on the rotating direction of the motor.
- Selector levers (A) and (C) also swing to the left or right in accordance with the movement of Change lever (B), and the clutch assembly moves upward or downward accordingly.
- The pinch roller is activated and the head is placed in playback position with selector lever (C).
- When the mode is switched from one mode to another, the pinch roller is activated while the motor is rotating reversely (for a short period of time), causing a little slackness in the tape transport.

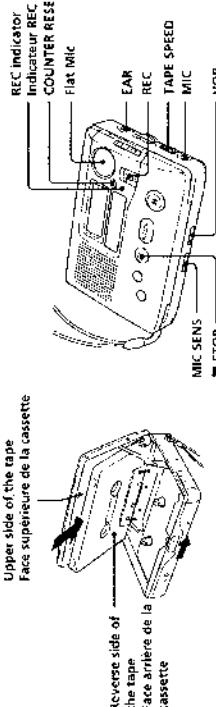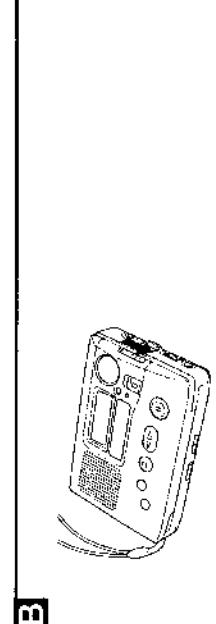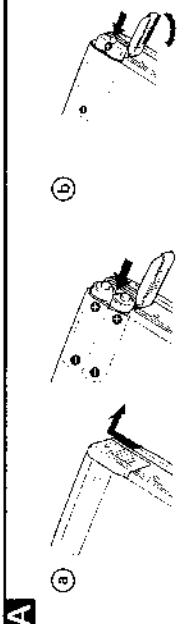

Welcome!

Thank you for purchasing the Sony TCM-50V Cassette-Corder. Some features are:

- Built-in microphone → You can make recording without using an external microphone.
- Auto-reverse recording/play-back
- You can adjust the playback tape speed.
- VOR (Voice Operated Recording) system that starts and stops recording automatically in response to the sound, to save tapes and batteries.

Getting Started

Preparing a Power Source

Choose one of the three power sources below: dry batteries, rechargeable battery, and house current.

Dry Batteries (see Fig. A-⑤)

- 1 Open the battery compartment lid.
- 2 Insert two size AAA (R03) dry batteries (supplied with the Sony world model only).

When to replace the batteries

Replace the batteries with new ones when the battery indicator flashes. The battery indicator in the display window changes as follows:

- | When batteries are new | Lighted up |
|---|------------|
| When batteries have been used for a while | Flashing |
| When batteries become weak | Flashing |
| There is no power in the batteries | Off |



Rechargeable Battery (see Fig. A-⑤)

Before using the rechargeable Ni-Cd battery NC-50V or Ni-MH rechargeable battery NL-50V/M from supplied, charge it first and then insert it into the battery compartment.

Battery life (Approx. hours)

(Fully charged)

Playback Recording



Changes depending on the sound level

- while pressing the center of the REC button, slide the REC button up.

- Recording states. While the tape runs, the REC indicator lights and REC appears in the display window.

House Current

Connect the AC power adaptor (AC-E15HG, not supplied) to DC IN (AC-E15HG, not supplied) to DC IN 1.5 V and to the wall outlet. Do not use any other AC power adaptor.

Polarity of the plug

Releasing HOLD (see Fig. B)

The HOLD function locks the unit to prevent it from operating when you accidentally press a button. If the unit is locked, unlock it before operating.

Recording HOLD (see Fig. B)

To release pause, press ■ PAUSE.

REW/REVIEW (see Fig. B)

To release pause, press ■ PAUSE.

Operating the Unit

Recording (see Fig. B)

Insert a normal (TYPE I) tape with the side to start recording facing the cassette holder.

Set VOR to ON. To start and pause recording automatically to the sound OFF in start and stop recording manually.

SECTION 2 GENERAL

This section is extracted from instruction manual.

- Note
- When the sound to be recorded is just loud enough, set the VOR switch to OFF, or the unit may not start recording.

- 4 Set MIC SENS to select the sensitivity of the microphone to H (High) to record at meetings or in a quiet and/or spacious place.

- L (Low) to record for direction or in a noisy place.

- You can see the sound level in the display window.



Changes depending on the sound level

- while pressing the center of the REC button.

- Recording states. While the tape runs, the REC indicator lights and REC appears in the display window.

House Current

Connect the AC power adaptor (AC-E15HG, not supplied) to DC IN (AC-E15HG, not supplied) to DC IN 1.5 V and to the wall outlet. Do not use any other AC power adaptor.

Polarity of the plug

If you start recording from the upper side (REW ▲ appears in the display window), recording automatically goes on to the reverse side (REV appears in the display window) and the unit turns off automatically.

Releasing HOLD

To release pause, press ■ PAUSE.

Stop recording

To release pause, press ■ PAUSE.

Pause recording

To release pause, press ■ PAUSE.

Start recording

To release pause, press ■ PAUSE.

REW/REVIEW

To release pause, press ■ PAUSE.

Review the portion just recorded

To release pause, press ■ PAUSE.

Notes

- Do not charge a dry battery.
- Do not use a new battery with an old one.
- Do not use different types of batteries.
- When you do not use the unit for a long time, remove the batteries to avoid any damage caused by battery leakage and subsequent corrosion.
- Dry batteries will not be expended when another power source is connected.

To monitor the sound
with the Sony world model only:
Connect the earphone's (coupled
from the [CAR jack] to the [CAR jack].

Notes

- Do not use 4 CxO₂ (TYPE II) or metal
(TYPE IV) tape, otherwise the sound
may be dented when you play
back the tape, or the previous
recording may not be erased
completely.
- The TAPE SPEED switch works in
the playback mode only. Recording
will be made independent of this
control.
- If you open the lid during stop, the
recording always starts from the
upper side (FWD \blacktriangleleft appears in the
display window).

Note
When recording with an external
microphone, the VOR system may
not work properly because of the
difference in sensitivity.


- When using an external microphone,
use a manual type microphone.
A stereo microphone can be used,
this unit may not operate
properly. When the monaural
microphone is equipped with a 3-
pin phono mini plug, use the Plug
Adapter FC-Z56HS to convert to 2
polarity.

**Recording from Another
Equipment**

Connect another equipment to the
MIC jack using the RS-C6HG
connecting cord (not supplied).

To prevent a tape from being accidentally recorded over (see Fig. D)

Break out and remove the cassette
tabs. To reuse the tape for
recording, cover the tab hole with
adhesive tape.

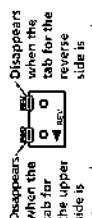When the cassette tab is removed,
the bar in the display window
disappears. 
Disappears when the
tab for the
reverse
side is
removed.
Flashes if you try
to slide REC with
the cassette tab
removed.

To select the side to be recorded

To record on both sides
continuously side-to-side on the
upper side (FWD \blacktriangleleft) appears in the
display window. If REV is
displayed, press ■ STOP for more
than 2 seconds. When recording
ends on the upper side, it will
automatically continue on the
reverse side.

To record on one side only: Start
recording on the reverse side (■
REV appears in the display
window). If FWD \blacktriangleleft is displayed,
press ■ STOP for more than 2
seconds. When recording ends on
the reverse side, it will
automatically stop.

To check the direction of the tape in the display window

FWD \blacktriangleleft appears when
recording on the upper
side.
REV appears when
recording on the
reverse side.

Recording from Various Sound Sources

Recording with an External Microphone

Connect a microphone to the MIC
jack. Use a microphone of low
impedance (less than 3 kilohms)
such as FCM-TU (not supplied).
When using a plug-in-power
system microphone, the power to
the microphone is supplied from
this unit.

- When recording with an external
microphone, the VOR system may
not work properly because of the
difference in sensitivity.
- When using an external microphone,
use a manual type microphone.
A stereo microphone can be used,
this unit may not operate
properly. When the monaural
microphone is equipped with a 3-
pin phono mini plug, use the Plug
Adapter FC-Z56HS to convert to 2
polarity.

**Recording from Another
Equipment**

Connect another equipment to the
MIC jack using the RS-C6HG
connecting cord (not supplied).

Playing a Tape (see Fig. B)

1 Insert a cassette with the side to start playing (see the cassette holder).

2 Adjust the tape playback speed. SET TAPE SPEED (FWD \blacktriangleleft , S (slow) to play back a tape slower.

3 Press \blacktriangleleft PLAY/DIR then adjust the volume.

If the playback starts from the upper
side (FWD \blacktriangleleft appears in the display
window), playback goes on
to the reverse side (REV appears
in the display window) and the unit
turns off automatically.

To \blacktriangleleft Press \blacktriangleleft Play the other side

PLAY/DIR
during
Playback
Change the
direction of
playback during
stop
Stop playback
Pause playback
■ STOP
■ PAUSE
■ STOP
■ PAUSE
To release
pause
playback
 \blacktriangleleft FF/CUE
Press \blacktriangleleft
PAUSE or
 \blacktriangleleft
PLAY/DIR

On the unit

Operate the unit only on 1.5V DC.
For AC operation, use the AC
power adapter recommended for
the unit. Do not use any other
type. For battery operation, use
two size A AA (R03) batteries.
* The nameplate indicating
operating voltage, etc. is located
on the bottom of the unit.

On the unit

Do not leave the unit in a location
near heat sources, or in a place
subject to direct sunlight,
excessive dust or mechanical
shock.
* Should any solid object or liquid
fall into the unit, remove the
batteries or disconnect the AC
power adapter, and have the unit
checked by a qualified personnel.
* Keep personal credit cards using
magnetic coding or spring-wound
watches, etc. away from the unit to
prevent possible damage from the
magnet used for the speaker.

On tapes longer than 90 minutes

We do not recommend the use of
tapes longer than 90 minutes except
for a long continuous recording or
playback. They are very thin and
tend to be stretched very easily.

Note

If you open the lid during stop, the
playback always starts from the
upper side (FWD \blacktriangleleft appears in the
display window).

For the customers in the USA
and Canada

RECYCLING NICKEL- CADMIUM BATTERIES

NICKEL-CADMUM BATTERY, MUST BE DISPOSED OF PROPERLY.

Nickel-Cadmium batteries
are recyclable. You can help
preserve our environment by
returning your unwanted
batteries to your nearest Sony
Service Center or factory collection,
recycling or proper disposal.
Note In some areas the
disposal of nickel-cadmium
batteries in
household or business
trash may be
prohibited.

For the Sony Service Center nearest
you call 1-800-222-5000 (U.S. only)
For the Factory Service Center nearest
you call 1-416-499-5000 (Canada only)
Caution Do not handle damaged or
leaking nickel-cadmium
batteries.

Recording with the Remote Control Microphone

Connect the remote control with the
Sony world model only to the MIC
jack. The power to the microphone
is supplied from this unit.

To pause playback/recording with the remote control microphone

Slide PAUSE \longrightarrow on the remote
control microphone in the direction
of the arrow to release; slide it
back to the place.

Note

* When operating with the remote
control microphone, you will not be
able to operate the ■ PAUSE button
on the main unit.

► Additional/ Information

Precautions

On Power
* When operating with the remote
control microphone, you will not be
able to operate the ■ PAUSE button
on the main unit.

On the unit

Operate the unit only on 1.5V DC.
For AC operation, use the AC
power adapter recommended for
the unit. Do not use any other
type. For battery operation, use
two size A AA (R03) batteries.
* The nameplate indicating
operating voltage, etc. is located
on the bottom of the unit.

On the unit

Do not leave the unit in a location
near heat sources, or in a place
subject to direct sunlight,
excessive dust or mechanical
shock.
* Should any solid object or liquid
fall into the unit, remove the
batteries or disconnect the AC
power adapter, and have the unit
checked by a qualified personnel.
* Keep personal credit cards using
magnetic coding or spring-wound
watches, etc. away from the unit to
prevent possible damage from the
magnet used for the speaker.


On tapes longer than 90 minutes

We do not recommend the use of
tapes longer than 90 minutes except
for a long continuous recording or
playback. They are very thin and
tend to be stretched very easily.


On rechargeable battery

Certain countries may regulate
the disposal of the battery used to
power this product.
Please consult with your local
authority.

E

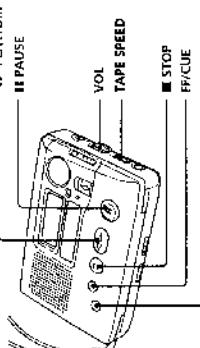


F

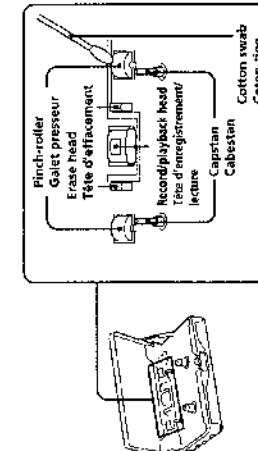


SECTION 3 DISASSEMBLY

Note: Follow the disassembly procedure in the numerical order given.


PANEL

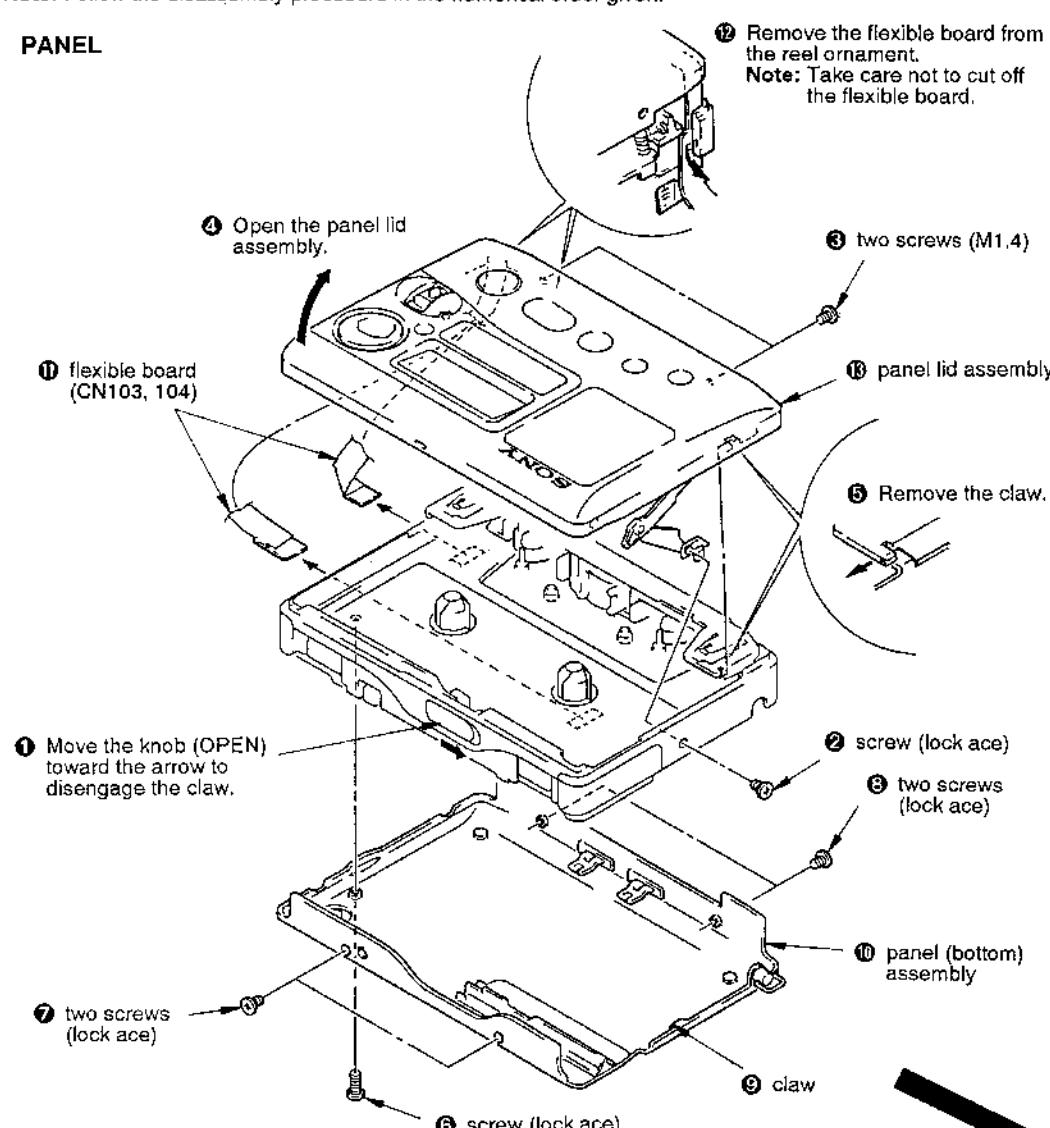


PANEL LID ASSEMBLY

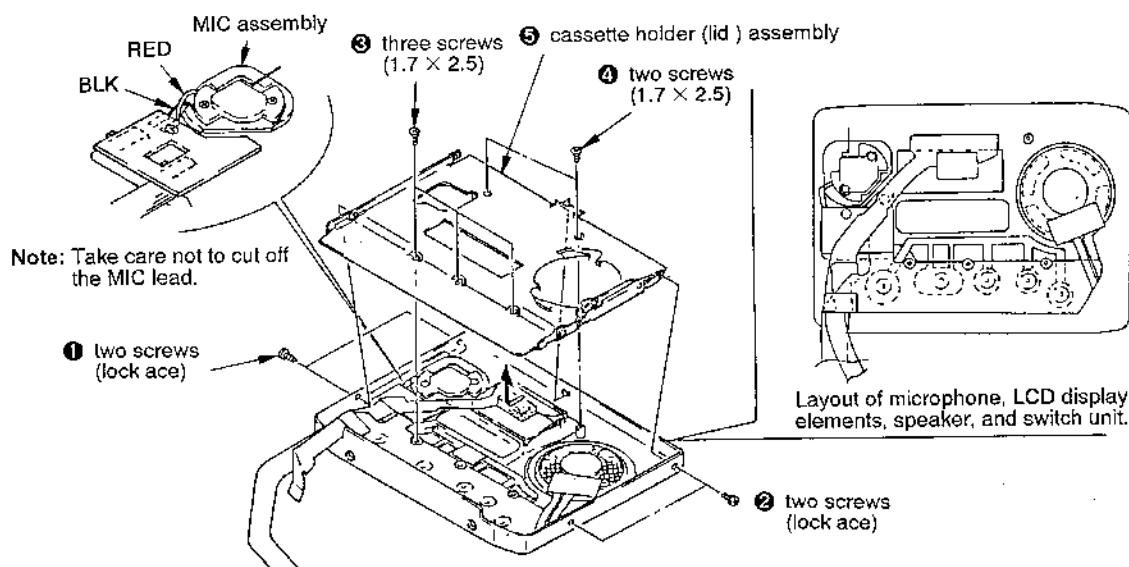


MAIN BOARD

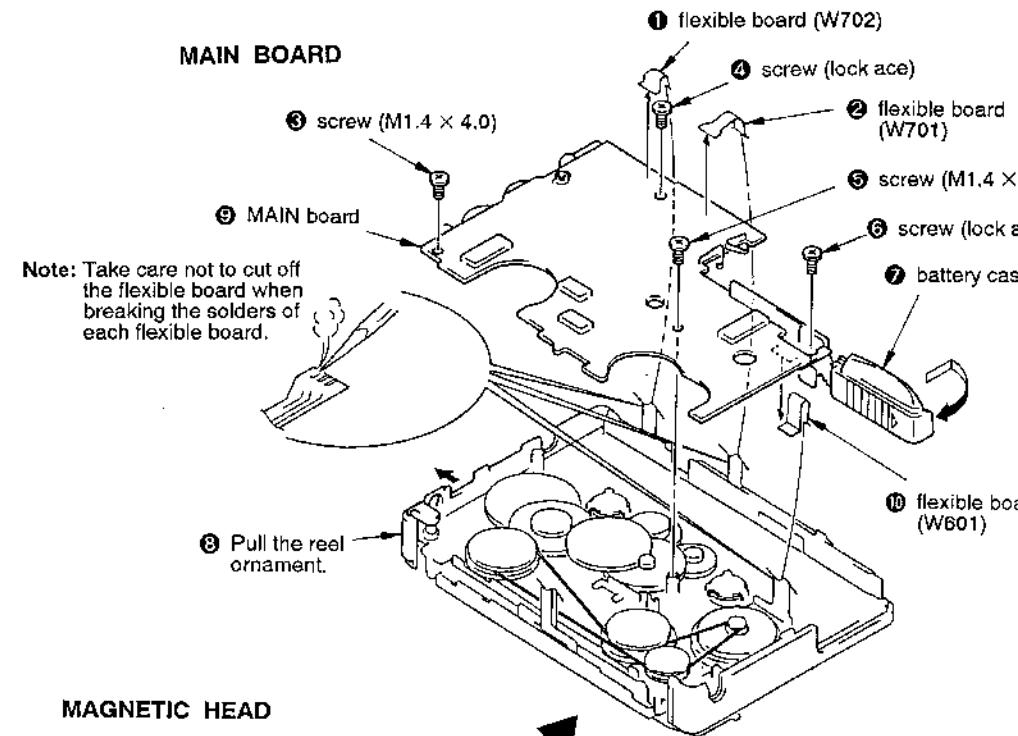

MAGNETIC HEAD

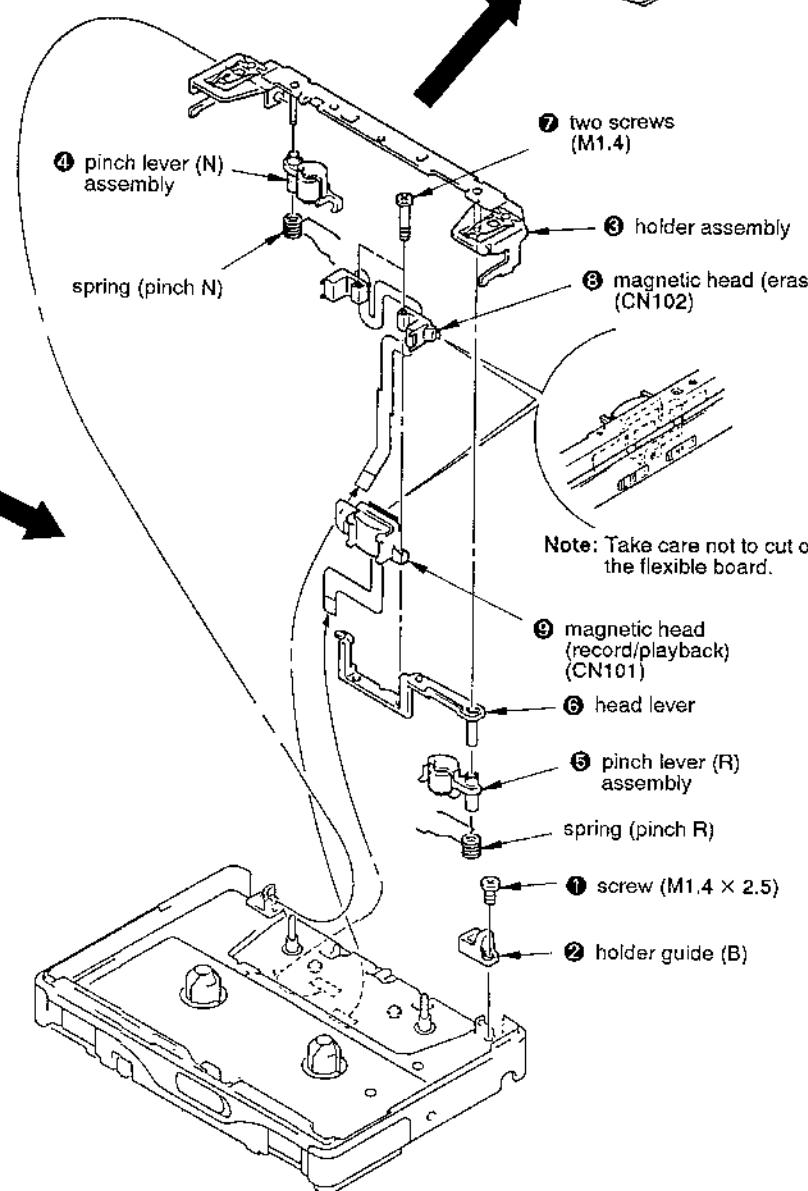


BELT

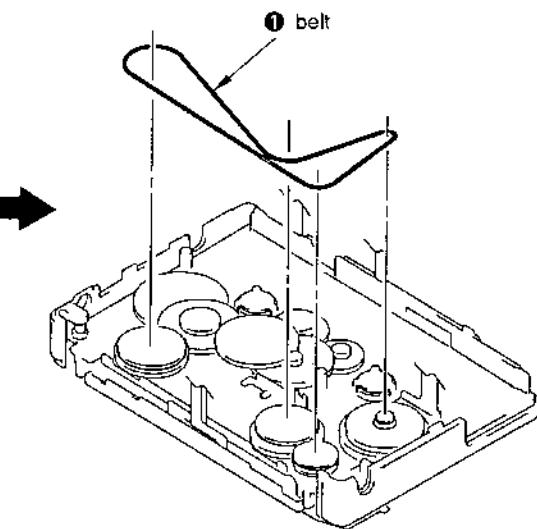

INSTALLATION MAIN BOARD

On installation MAIN board, adjust to the S701 and lever switch (B).

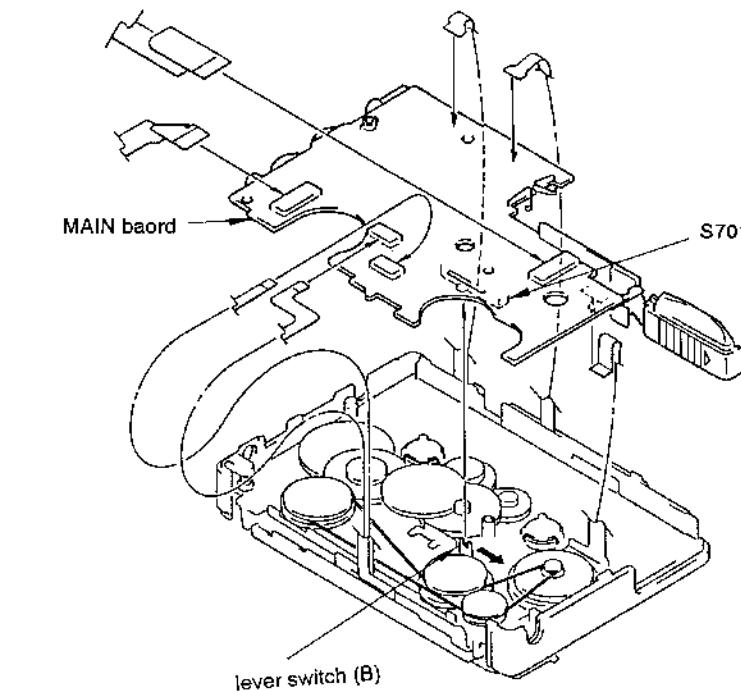

SECTION 4 MECHANICAL ADJUSTMENT

PRECAUTION

1. Clean the following parts with a denatured-alcohol-moistened swab:

record/playback head	pinch roller
erase head	rubber belts
capstan	idle
2. Demagnetize the record/playback head with a head demagnetizer.
(Do not bring the head demagnetizer close to the erase head.)
3. Do not use a magnetized screwdriver for the adjustments.
4. After the adjustments, apply suitable locking compound to the parts adjusted.
5. The adjustments should be performed with the rated power supply voltage (1.3 V) unless otherwise noted.

Torque Measurement

Mode	Torque Meter	Meter Reading
FWD	CQ-102C	22 - 45 g·cm (0.31 - 0.62 oz·inch)
FWD Back Tension		1.0 - 3.5 g·cm (0.014 - 0.048 oz·inch)
REV	CQ-102RC	22 - 45 g·cm (0.31 - 0.62 oz·inch)
REV Back Tension		1.0 - 3.5 g·cm (0.014 - 0.048 oz·inch)
FF	CQ-201B	more than 60 g·cm (more than 0.84 oz·inch)
REW		

Tape Tension Measurement

Mode	Tension Meter	Meter Reading
FWD	CQ-403A	more than 35 g (more than 0.48 oz·inch)
REV	CQ-403R	

SECTION 5 ELECTRICAL ADJUSTMENT

PRECAUTION

1. Perform adjustment under the following condition, unless otherwise specified.
 - Positions of switches and control knobs

VOLUME knob	maximum
MIC SENS switch	HIGH
SPEED CONTROL knob	mechanical center
VOR switch	OFF


• Test tape

Type	signal	Used for
WS-48A	3 kHz, 0 dB	tape speed adjustment

Tape Speed Adjustment

Procedure:

Mode: FWD playback

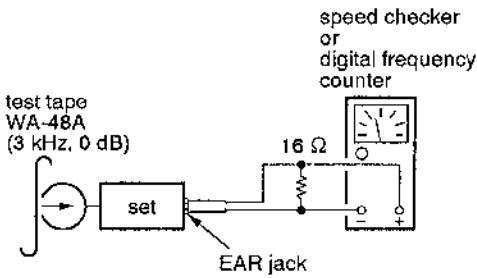


Adjustment Value:

Speed checker	Digital frequency counter
3,000 Hz ± 1%	2,970 - 3,030 Hz

Adjust the RV601 so that a difference in frequency at the start of tape winding and at the end of winding is within 1% (30 Hz) respectively.
After adjustment, select the REV PLAY mode, and confirm that the characteristics satisfy the standard.


Adjustment Location: MAIN BOARD

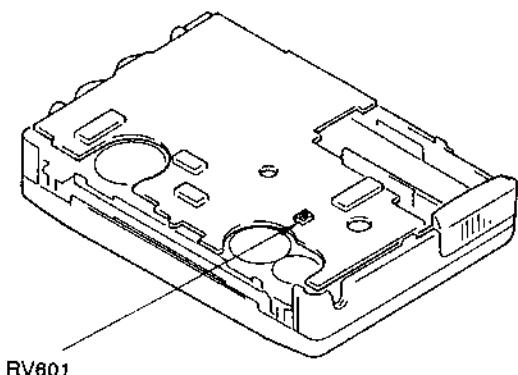


SECTION 6 DIAGRAMS

- IC Block Diagrams


IC101 TA8155FN

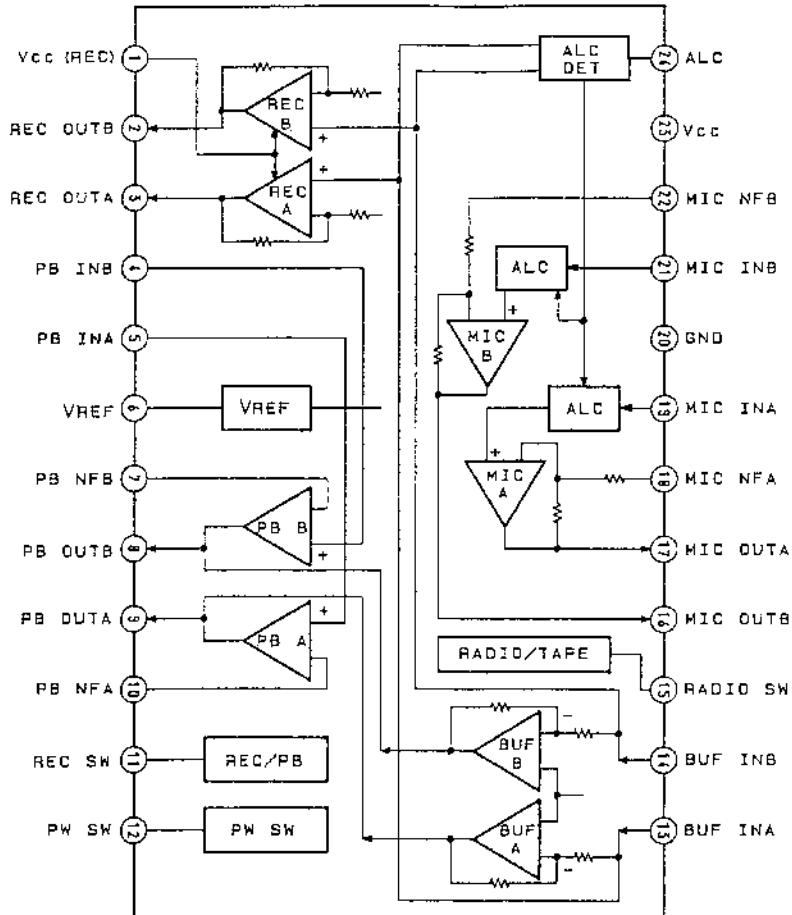


IC601 LB1674V

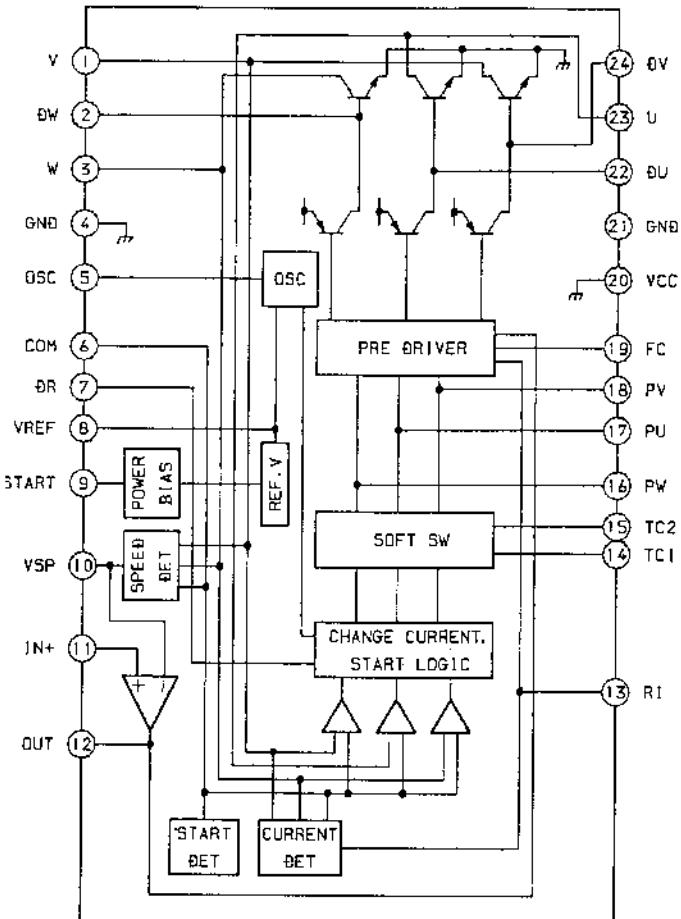


IC102 LA4538M

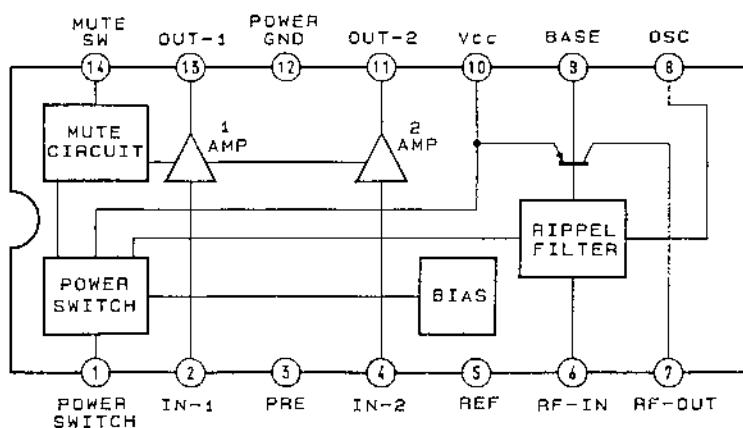

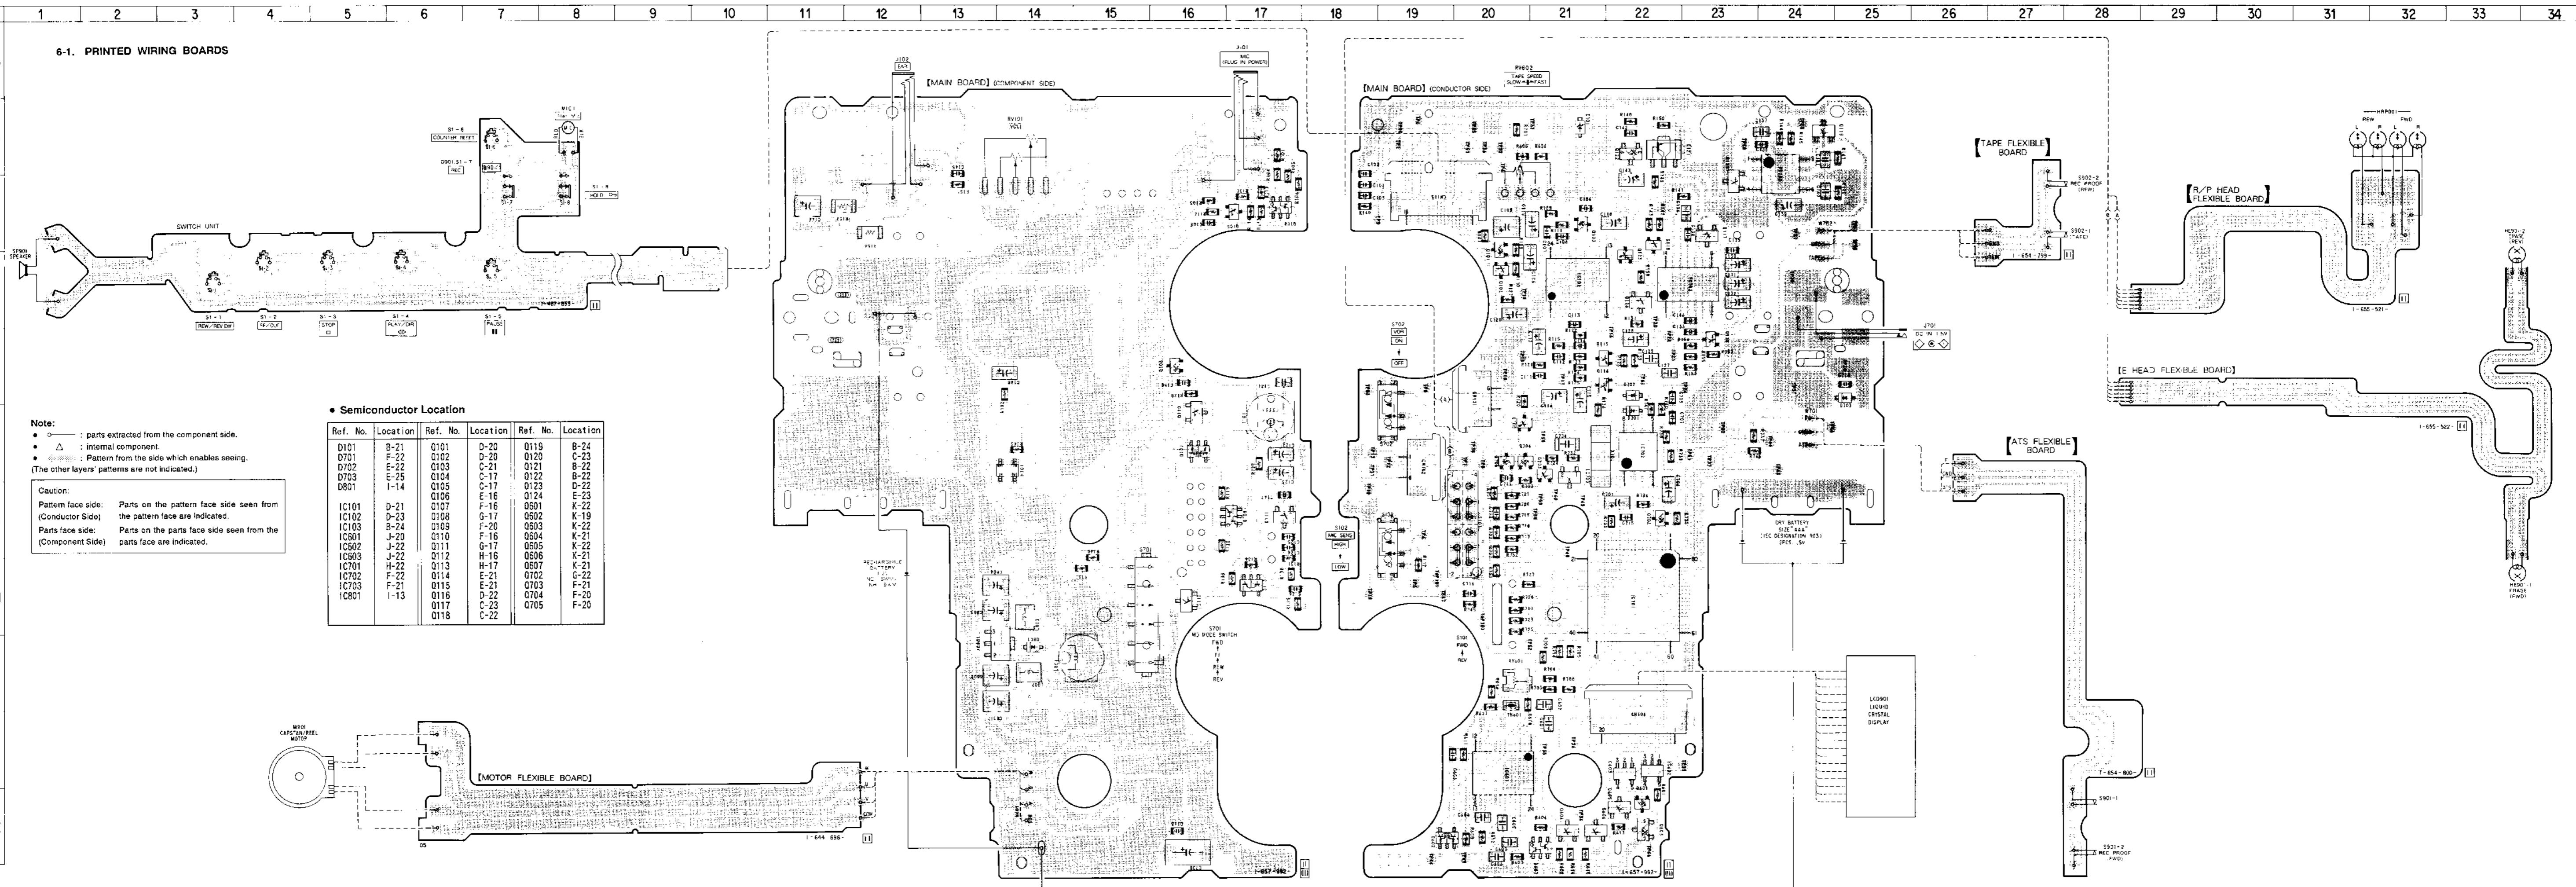

6-2. SCHEMATIC DIAGRAM • See page 10 for IC Block Diagrams.

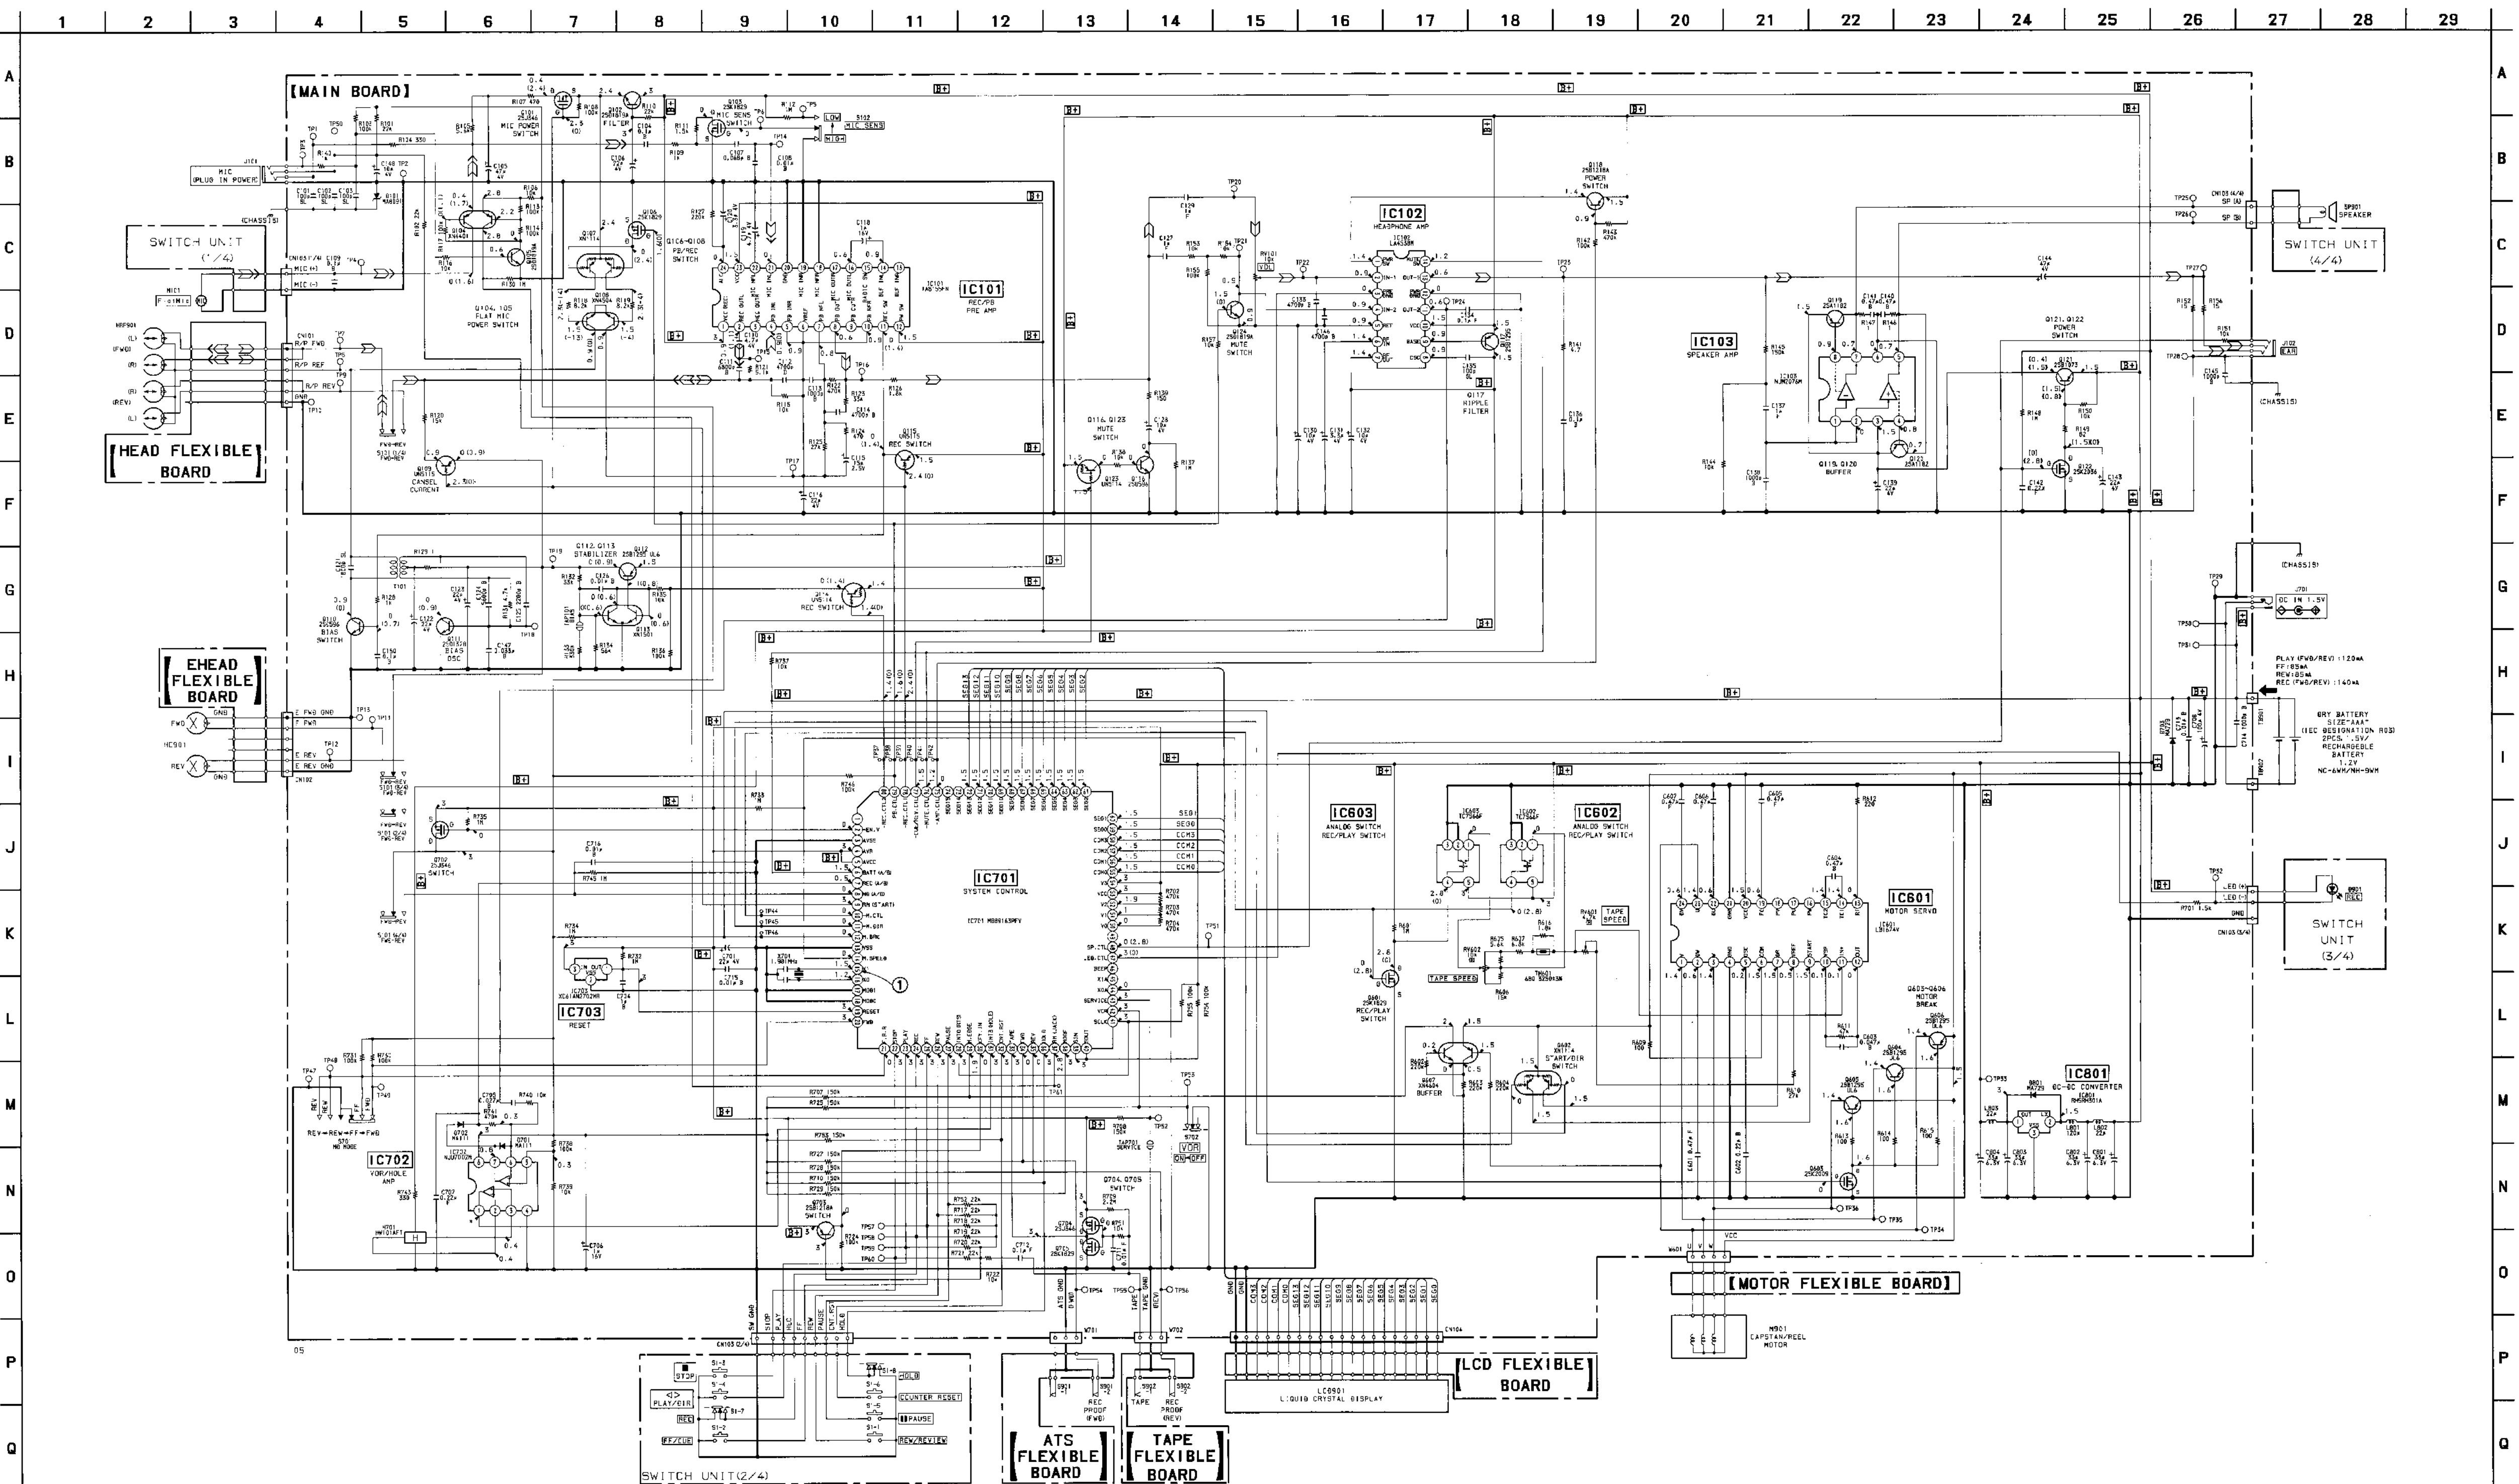

6-3. IC PIN FUNCTION DESCRIPTION
MAIN BOARD IC701 MB89163PFV (SYSTEM CONTROL)

Pin No.	Pin Name	I/O	Function
1	—	—	Not used
2	EN. V	O	"L": Power supply for surrounding circuit of microcomputer
3	AVss	—	A/D converter GND
4	AVR	—	A/D converter reference voltage
5	AVcc	—	A/D converter power supply
6	BATT (A/D)	I	Power voltage A/D input
7	REC (A/D)	I	Record signal A/D input
8	MD (A/D)	I	MD (FWD/REV) A/D input
9	RM (START)	I	Remote control mic A/D input
10	M. CTL	O	Motor ON/OFF "L": ON
11	M. DIR	O	Motor direction "L": REV "H": FWD
12	M. BRK	O	Motor brake "H": ON
13	Vss	—	GND
14	M. SPEED	O	Motor speed "L": Variable "H": Constant
15	X1	—	Crystal oscillator terminal for main clock
16	X0	—	Crystal oscillator terminal for main clock
17	MOD1	—	Operation mode appointment
18	MOD0	—	Operation mode appointment
19	RESET	I/O	"L": Reset On
20	PWD	I	"L": MD position (FWD)
21	F. R. R	I	"L": MD position (FF or REW or REV)
22	STOP	I	"L": STOP key input
23	PLAY	I	"L": PLAY key input
24	REC	I	"L": REC key input
25	FF	I	"L": FF key input
26	REW	I	"L": REW key input
27	PAUSE	I	"L": PAUSE key input
28	INT0 (RTS)	—	Not used
29	M. EDGE	I	Motor drive waveform (U phase) input
30	KEY. IN	I	"H": Set key input interrupt
31	INT3 (HALL)	I	Hall element signal input
32	CNT. RST	I	"L": Counter reset key input
33	TAPE	I	"H": TAPE detection
34	FWD	I	"L": PWD click detection
35	REV	I	"L": REV click detection
36	HOLD	I	"L": HOLD key input
37	RM (JACK)	I	"L": JACK detection
38	MODE	—	Not used
39	SIN	—	Not used
40	SOUT	—	Not used

Pin No.	Pin Name	I/O	Function
41	SCLK	—	Not used
42	VOR	I	"L": VOR switch input
43	SERVICE	I	"L": Service mode input
44	X0A	—	Crystal oscillator terminal for low speed clock
45	X1A	—	Not used
46	BEEP	—	Not used
47	LED. CTL	O	"L": LED ON
48	SP. CTL	O	"H": Speaker amplifier ON
49	—	—	Not used
50	V0	—	Power supply for LCD drive
51	V1	—	Power supply for LCD drive
52	V2	—	Power supply for LCD drive
53	Vcc	—	Power supply
54	V3	—	Power supply for LCD drive
55 – 58	COM0 – 3	O	LCD drive output (common)
59 – 72	SEG0 – 13	O	LCD drive output (segment)
73	—	—	Not used
74	—	—	Not used
75	AMP. CTL	O	"L": IC302 power ON
76	MUTE. CTL	O	"L": IC302 mute ON
77	CUE/REV. CTL	O	"L": IC302 amplifier gain attenuate ON
78	REC. CTL1	O	"L": IC301 REC mode
79	PB. CTL	O	"H": PB mode
80	REC. CTL2	O	"L": REC bias ON


SECTION 7

EXPLODED VIEWS

NOTE:


- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

(1) CABINET SECTION

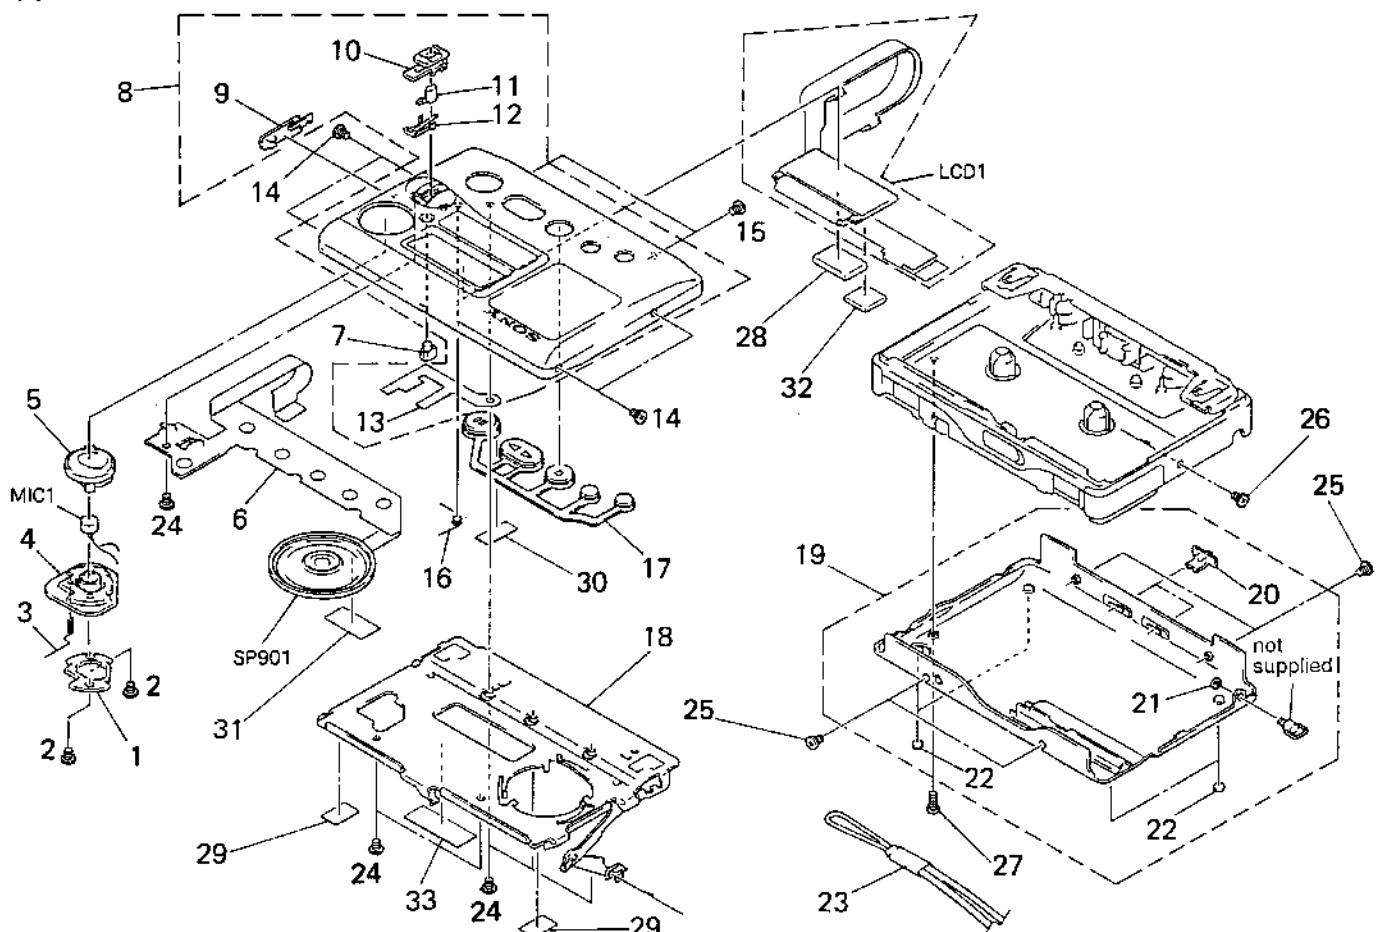


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	3-919-651-01	CABINET (MICROPHONE)		19	X-3370-652-1	PANEL (BOTTOM) ASSY	
2	3-309-597-01	SCREW (1.4), TAPPING		20	3-919-631-01	KNOB (VOR)	
3	3-919-650-01	SPRING (GROUND)		21	7-624-102-04	STOP RING 1.5, TYPE -E	
4	3-919-649-01	CUSHION (MICROPHONE)		22	3-331-603-01	FOOT	
5	X-3369-504-1	CABINET (MICROPHONE UPPER) ASSY		23	3-349-265-01	STRAP, HAND	
6	1-467-853-11	SWITCH UNIT (■, □, REC, FF/CUE, HOLD, COUNTER RESET, II, REV/REVIEW)		24	3-318-382-91	SCREW (1.7X2.5), TAPPING	
7	3-919-645-01	BUTTON (COUNTER)		25	3-389-523-22	SCREW (LOCK ACE)	
8	X 3370-650 1	LID ASSY, PANEL		26	3-389-523-23	SCREW (LOCK ACE)	
9	3-919-640-01	KNOB (HOLD)		27	3-389-523-35	SCREW (LOCK ACE)	
10	3-919-641-01	KNOB (REC)		28	9-911-815-01	CUSHION	
11	3-919-642-01	BUTTON (REC)		29	3-485-343-11	CUSHION, CABINET UPPER 10X7X0.3	
12	3-919-643-01	SPRING (REC), LEAF		30	3-831-441-XX	SPACER, KNOB	
* 13	3-922-307-01	SHEET (REC), CONDUCTIVE		31	4-017-441-01	CUSHION (B)	
14	3-389-523-15	SCREW (LOCK ACE)		32	9-911-839-XX	CUSHION (P)	
15	3-365-630-21	SCREW (M1.4)		33	3-578-230-00	LABEL, CAUTION (Tourist)	
16	3-919-644-01	SPRING, TORSION		LCD1	1-810-670-11	DISPLAY PANEL, LIQUID CRYSTAL (INCLUDED FLEXIBLE BOARD)	
17	3-919-646-01	BUTTON (P.S.)		MIC1	1-542-142-11	MICROPHONE, BUILT-IN	
18	X-3369-503-1	HOLDER (LID) ASSY, CASSETTE		SP901	1-504-688-11	SPEAKER (3.6CM)	

(2) BOARD, MECHANISM SECTION - 1

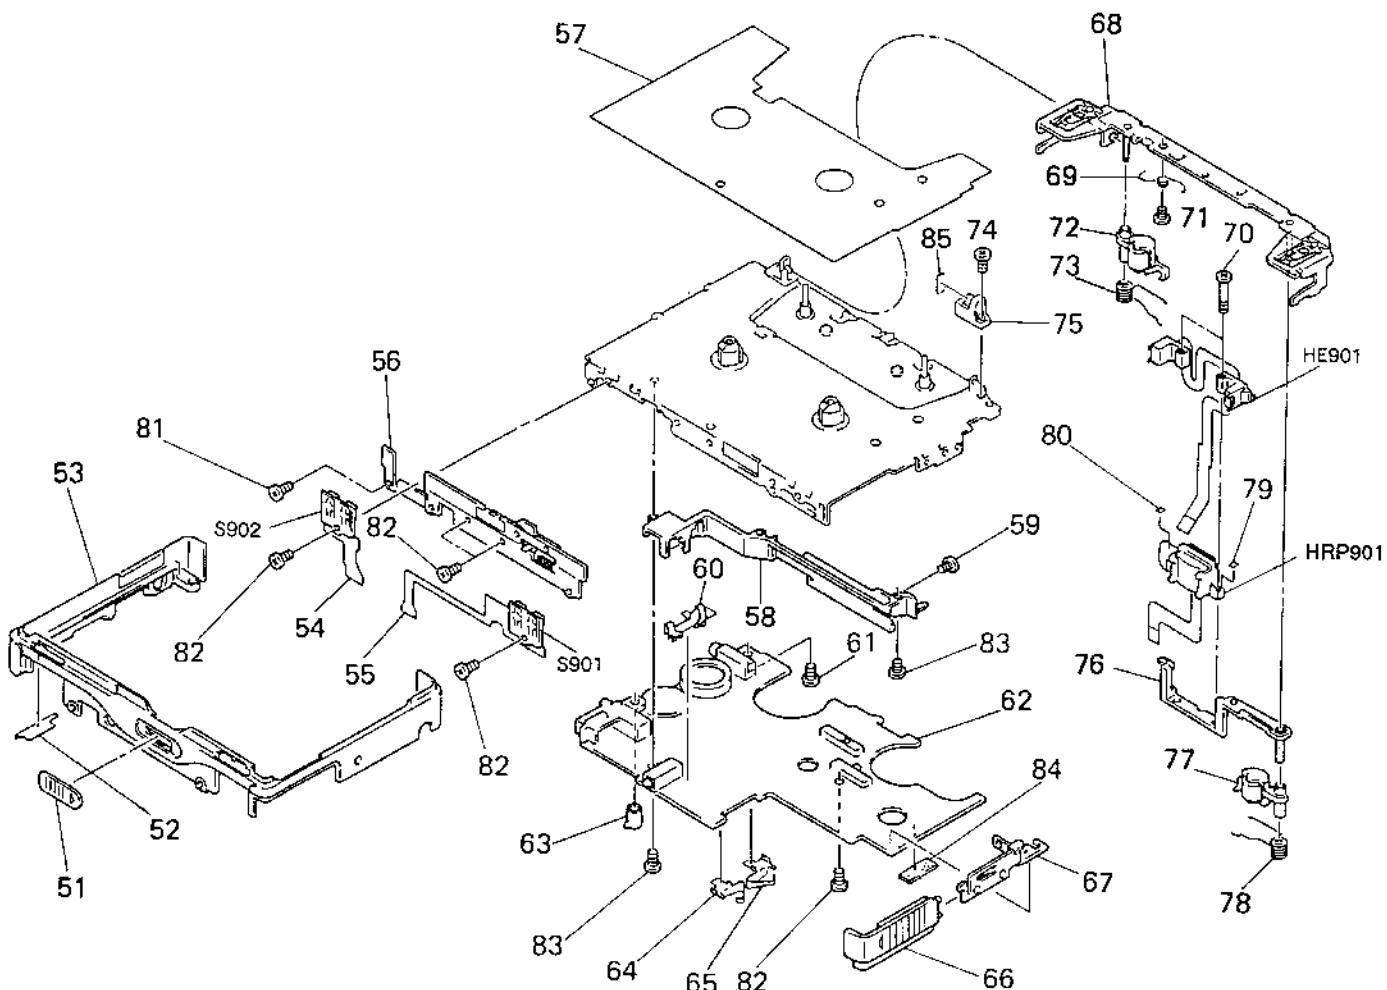

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	3-387-905-21	KNOB (OPEN)		70	3-389-448-01	SCREW (M1.4), STEP	
52	3-921-194-01	PAPER (JACK), CONDUCTIVE		71	7-627-553-17	PRECISION SCREW 1P 2X2 TYPE 3	
53	3-919-620-21	ORNAMENT, REEL		72	X-3366-298-1	PINCH LEVER (N) ASSY	
54	1-654-799-11	TAPE FLEXIBLE BOARD		73	3-929-257-01	SPRING (PINCH N)	
55	1-654-800-11	ATS FLEXIBLE BOARD		74	3-704-197-21	SCREW (M1.4X2.5), LOCKING	
56	X-3369-499-1	BRACKET ASSY		75	3-386-704-01	GUIDE (B), HOLDER	
57	3-926-552-01	COVER, MD (US)		* 76	3-386-646-01	LEVER, HEAD	
57	3-926-552-11	COVER, MD (EXCEPT US)		77	X-3366-296-1	PINCH LEVER (R) ASSY	
58	3-919-626-01	HOLDER, BATTERY		78	3-929-258-01	SPRING (PINCH R)	
59	3-389-523-23	SCREW (LOCK ACE)		79	3-907-859-01	SPACER (H)	
60	3-919-623-01	TERMINAL BOARD		80	3-907-859-11	SPACER (II)	
61	3-345-648-03	SCREW (M1.4X4.0), TOOTHED LOCK		81	3-389-523-15	SCREW (LOCK ACE)	
* 62	A 3016 727-A	MAIN BOARD, COMPLETE		82	3-366-892-01	SCREW (M1.4X1.1)	
63	3-921-143-01	COLLAR (PC BOARD)		83	3-389-523-22	SCREW (LOCK ACE)	
64	3-919-621-01	TERMINAL BOARD		84	4-017-441-01	CUSHION (B)	
65	3-919-622-01	TERMINAL BOARD		85	9-911-863-XX	SPACER (Z)	
66	3-919-634-01	LID, BATTERY CASE		HE901	1-500-163-11	HEAD, MAGNETIC (ERASE)	
67	X-3369-500-1	TERMINAL BOARD ASSY, BATTERY		HRP901	1-500-162-21	HEAD, MAGNETIC (RECORD/PLAYBACK)	
68	X-3366-299-1	HOLDER ASSY		S901	1-762-080-11	SWITCH, LEAF (REC PROOF (FWD), ATS)	
69	3-386-683-01	SPRING (II)		S902	1-692-101-11	SWITCH, LEAF (REC PROOF (REV), TAPE)	

(3) MECHANISM SECTION - 2
(MT-80-60)

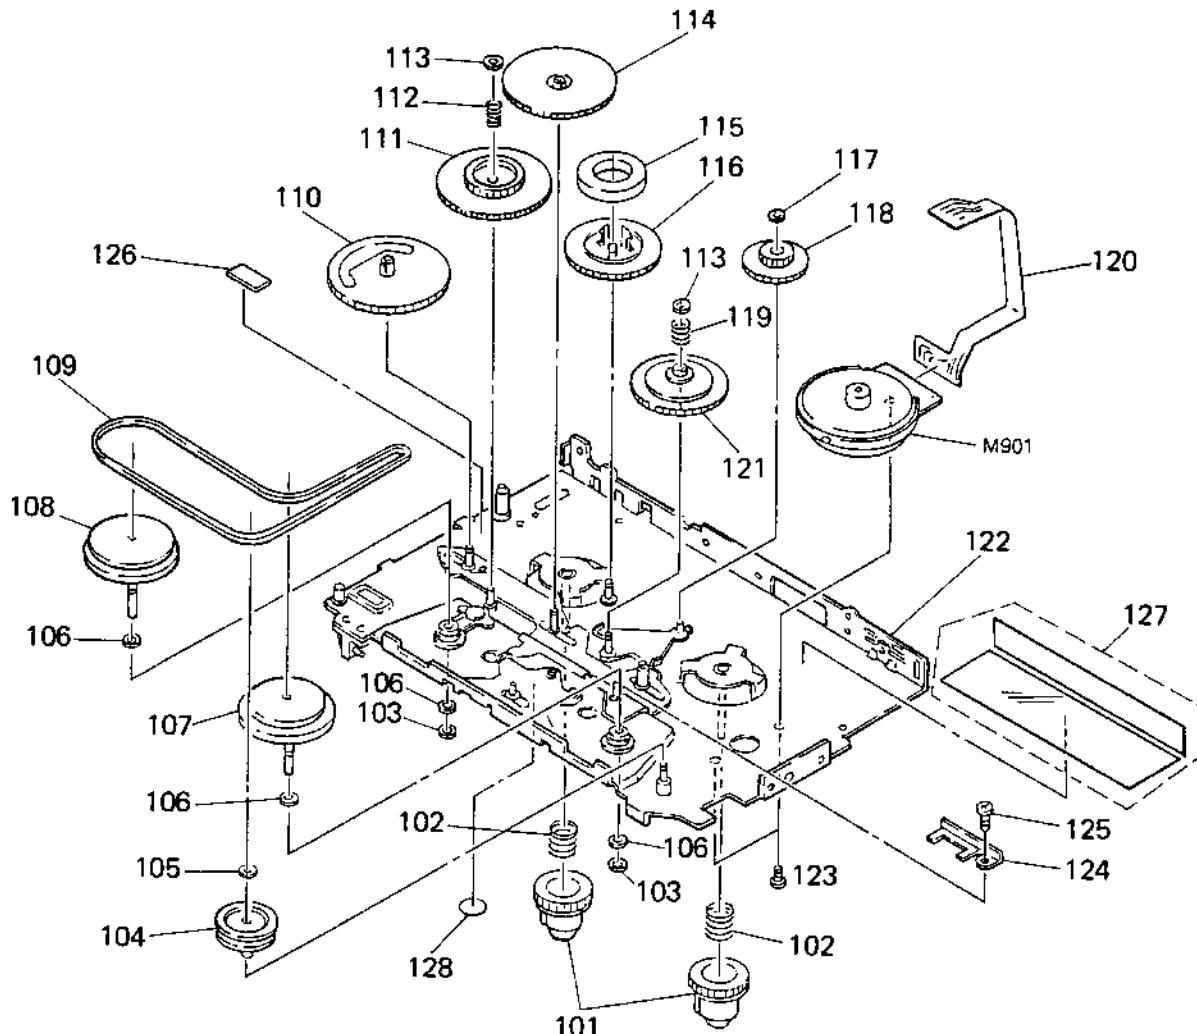

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	3-386-634-03	GEAR (REEL)		116	3-386-633-01	GEAR (E)	
102	3-386-662-01	SPRING, COMPRESSION		117	3-929-685-01	RING (GEAR D)	
103	3-325-394-01	WASHER, STOPPER		118	3-386-632-01	GEAR (D)	
104	3-386-711-01	PULLEY (REVERSE)		119	3-904-227-01	SPRING, COMPRESSION	
105	3-338-645-21	WASHER (0.8-2.5)		120	1-644-696-11	MOTOR FLEXIBLE BOARD	
106	3-922-934-01	WASHER		121	X-3371-082-1	CLUTCH ASSY	
107	X-3368-637-1	WHEEL (RS) ASSY, CAPSTAN		122	X-3369-506-1	CHASSIS ASSY	
108	X-3368-636-1	WHEEL (NS) ASSY, CAPSTAN		123	3-906-045-01	SCREW	
109	3-388-079-02	BELT		* 124	3-906-049-01	LEVER (REC), SELECTION	
110	3-386-852-01	GEAR (CAM)		125	3-386-892-01	SCREW (M1.4X1.1)	
111	3-386-631-01	GEAR (A)		* 126	3-923-816-01	SHEET (CAM)	
112	3-386-663-01	SPRING, COMPRESSION		127	3-919-656-01	SHEET (MD), INSULATING	
113	3-906-183-01	WASHER		* 128	3-378-826-01	SHEET (AB)	
114	3-386-691-01	GEAR (B)		M901	1-698-084-11	MOTOR (CAPSTAN/REEL)	
115	3-386-706-01	MAGNET					

MAIN

SECTION 8

ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.

● RESISTORS

All resistors are in ohms.

METAL: Metal-film resistor.

METAL OXIDE: Metal oxide-film resistor.

F: nonflammable

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

When indicating parts by reference number, please include the board.

● SEMICONDUCTORS

In each case, u: μ , for example:uA .. : μ A .. uPA .. : μ PA ..uPB .. : μ PB .. uPC .. : μ PC .. uPD .. : μ PD ..

● CAPACITORS

uF: μ F

● COILS

uH: μ H

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
*	A-3016-727-A	MAIN BOARD, COMPLETE		C137	1-164-346-11	CERAMIC CHIP	1uF 16V

		< CAPACITOR >		C138	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C101	1-162-953-11	CERAMIC CHIP	100PF 5% 50V	C139	1-104-847-11	TANTAL. CHIP	22uF 20% 4V
C102	1-162-953-11	CERAMIC CHIP	100PF 5% 50V	C140	1-107-823-11	CERAMIC CHIP	0.47uF 10% 16V
C103	1-162-953-11	CERAMIC CHIP	100PF 5% 50V	C141	1-107-823-11	CERAMIC CHIP	0.47uF 10% 16V
C104	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C142	1-165-128-11	CERAMIC CHIP	0.22uF 16V
C105	1-104-908-11	TANTAL. CHIP	47uF 20% 4V	C143	1-104-847-11	TANTAL. CHIP	22uF 20% 4V
C106	1-104-847-11	TANTAL. CHIP	22uF 20% 4V	C144	1-104-908-11	TANTAL. CHIP	47uF 20% 4V
C107	1-110-563-11	CERAMIC CHIP	0.068uF 10% 16V	C145	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C108	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C146	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V
C109	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C147	1-164-677-11	CERAMIC CHIP	0.033uF 10% 16V
C110	1-135-151-21	TANTALUM CHIP	4.7uF 20% 4V	C148	1-135-201-11	TANTALUM CHIP	10uF 20% 4V
C111	1-162-969-11	CERAMIC CHIP	0.0068uF 10% 25V	C150	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C112	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V	C601	1-164-005-11	CERAMIC CHIP	0.47uF 25V
C113	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	C602	1-164-489-11	CERAMIC CHIP	0.22uF 10% 16V
C114	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V	C603	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V
C115	1-135-219-11	TANTAL. CHIP	15uF 20% 2.5V	C604	1-107-823-11	CERAMIC CHIP	0.47uF 10% 16V
C116	1-104-847-11	TANTAL. CHIP	22uF 20% 4V	C605	1-164-005-11	CERAMIC CHIP	0.47uF 25V
C118	1-135-091-91	TANTAL. CHIP	1uF 20% 16V	C606	1-164-005-11	CERAMIC CHIP	0.47uF 25V
C119	1-135-151-21	TANTALUM CHIP	4.7uF 20% 4V	C607	1-164-005-11	CERAMIC CHIP	0.47uF 25V
C120	1-135-180-21	TANTALUM CHIP	3.3uF 20% 6.3V	C701	1-104-847-11	TANTAL. CHIP	22uF 20% 4V
C121	1-164-693-11	CERAMIC CHIP	0.0018uF 5% 50V	C704	1-107-682-11	CERAMIC CHIP	1uF 10% 16V
C122	1-104-847-11	TANTAL. CHIP	22uF 20% 4V	C705	1-104-700-11	CERAMIC CHIP	0.027uF 10% 16V
C123	1-104-847-11	TANTAL. CHIP	22uF 20% 4V	C706	1-135-091-91	TANTAL. CHIP	1uF 20% 16V
C124	1-164-172-11	CERAMIC CHIP	0.0056uF 10% 25V	C707	1-165-128-11	CERAMIC CHIP	0.22uF 16V
C125	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V	C708	1-104-848-11	TANTAL. CHIP	100uF 20% 4V
C126	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C711	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C127	1-164-346-11	CERAMIC CHIP	1uF 16V	C712	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C128	1-135-201-11	TANTALUM CHIP	10uF 20% 4V	C713	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C129	1-164-346-11	CERAMIC CHIP	1uF 16V	C714	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C130	1-135-201-11	TANTALUM CHIP	10uF 20% 4V	C715	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C131	1-135-180-21	TANTALUM CHIP	3.3uF 20% 6.3V	C716	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C132	1-135-201-11	TANTALUM CHIP	10uF 20% 4V	C801	1-104-752-11	TANTAL. CHIP	33uF 20% 6.3V
C133	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V	C802	1-104-752-11	TANTAL. CHIP	33uF 20% 6.3V
C134	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C803	1-104-752-11	TANTAL. CHIP	33uF 20% 6.3V
C135	1-162-953-11	CERAMIC CHIP	100PF 5% 50V	< CONNECTOR >			
C136	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	CN101	1-766-819-11	CONNECTOR, FPC (ZIF)	6P

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
CN102	1-766-819-11	CONNECTOR, FPC (ZIF) 6P		Q112	8-729-807-87	TRANSISTOR	2SB1295-UL6
CN103	1-766-750-11	CONNECTOR, FPC (ZIF) 18P		Q113	8-729-402-13	TRANSISTOR	XN1501
CN104	1-766-820-21	CONNECTOR, FPC (ZIF) 20P		Q114	8-729-402-96	TRANSISTOR	UN5114
< DIODE >							
D101	8-719-422-91	DIODE	MA8091	Q115	8-729-420-53	TRANSISTOR	UN5115
D701	8-719-404-49	DIODE	MA111	Q116	8-729-141-75	TRANSISTOR	2SD596DV345
D702	8-719-404-49	DIODE	MA111	Q117	8-729-807-87	TRANSISTOR	2SB1295-UL6
D703	8-719-420-51	DIODE	MA729	Q118	8-729-420-24	TRANSISTOR	2SB1218A-QRS
D801	8-719-420-51	DIODE	MA729	Q119	8-729-030-31	TRANSISTOR	2SA1182-0(TE85L)
< HALE ELEMENT >							
H701	8-759-052-95	IC	HW-101AFT-DEF	Q120	8-729-030-31	TRANSISTOR	2SA1182-0(TE85L)
< IC >							
IC101	8-759-062-63	IC	TA8155FN	Q121	8-729-422-87	TRANSISTOR	2SB1073-R
IC102	8-759-805-02	IC	LA4538M	Q122	8-729-028-28	TRANSISTOR	2SK2036(TE85L)
IC103	8-759-289-74	IC	NJM2076M(TE2)	Q123	8-729-402-86	TRANSISTOR	UN5114
IC601	8-759-275-47	IC	LB1674V TLM	Q124	8-729-230-63	TRANSISTOR	2SC4116-YG
IC602	8-759-062-66	IC	TC7S66F	Q601	8-729-028-26	TRANSISTOR	2SK1829(TE85L)
IC603	8-759-062-66	IC	TC7S66F	Q602	8-729-422-41	TRANSISTOR	XN1114
IC701	8-759-360-37	IC	MB89163PFV-141	Q603	8-729-028-27	TRANSISTOR	2SK2009(TE85L)
IC702	8-759-289-77	IC	NJU7002M(TE2)	Q604	8-729-807-87	TRANSISTOR	2SB1295-UL6
IC703	8-759-289-76	IC	XG61AN2702MR	Q605	8-729-807-87	TRANSISTOR	2SB1295-UL6
IC801	8-759-253-51	IC	RH5RH301A	Q606	8-729-807-87	TRANSISTOR	2SB1295-UL6
< JACK >							
J101	1-573-014-31	JACK (MIC)		Q607	8-729-425-24	TRANSISTOR	XN4604
J102	1-774-131-11	JACK (EAR)		Q702	8-729-026-30	TRANSISTOR	2SJ346-TE85L
J701	1-750-061-11	JACK, DC (POLARITY UNIFIED TYPE)		Q703	8-729-420-24	TRANSISTOR	2SB1218A-QRS
		(DC IN 1.5V)		Q704	8-729-026-30	TRANSISTOR	2SJ346-TE85L
				Q705	8-729-028-26	TRANSISTOR	2SK1829(TE85L)
< COIL >							
L801	1-414-222-11	INDUCTOR	120uH	R101	1-216-837-11	METAL CHIP	22K 5% 1/16W
L802	1-412-235-11	INDUCTOR CHIP	22uH	R102	1-216-837-11	METAL CHIP	22K 5% 1/16W
L803	1-412-235-11	INDUCTOR CHIP	22uH	R103	1-216-845-11	METAL CHIP	100K 5% 1/16W
< TRANSISTOR >							
Q101	8-729-026-30	TRANSISTOR	2SJ346-TE85L	R104	1-216-815-11	METAL CHIP	330 5% 1/16W
Q102	8-729-230-63	TRANSISTOR	2SC4116-YG	R105	1-216-830-11	METAL CHIP	5.6K 5% 1/16W
Q103	8-729-028-26	TRANSISTOR	2SK1829(TE85L)	R106	1-216-833-11	METAL CHIP	10K 5% 1/16W
Q104	8-729-403-27	TRANSISTOR	XN4401	R107	1-216-817-11	METAL CHIP	470 5% 1/16W
Q105	8-729-230-63	TRANSISTOR	2SC4116-YG	R108	1-216-845-11	METAL CHIP	100K 5% 1/16W
Q106	8-729-028-26	TRANSISTOR	2SK1829(TE85L)	R109	1-216-821-11	METAL CHIP	1K 5% 1/16W
Q107	8-729-422-41	TRANSISTOR	XN1114	R110	1-216-837-11	METAL CHIP	22K 5% 1/16W
Q108	8-729-425-18	TRANSISTOR	XN4504	R111	1-216-823-11	METAL CHIP	1.5K 5% 1/16W
Q109	8-729-420-53	TRANSISTOR	UN5115	R112	1-216-857-11	METAL CHIP	1M 5% 1/16W
Q110	8-729-141-75	TRANSISTOR	2SD596DV345	R113	1-216-845-11	METAL CHIP	100K 5% 1/16W
Q111	8-729-400-56	TRANSISTOR	2SD1328-T	R114	1-216-845-11	METAL CHIP	100K 5% 1/16W
				R115	1-216-833-11	METAL CHIP	10K 5% 1/16W
				R116	1-216-833-11	METAL CHIP	10K 5% 1/16W
				R117	1-216-845-11	METAL CHIP	100K 5% 1/16W
				R118	1-216-832-11	METAL CHIP	8.2K 5% 1/16W
				R119	1-216-832-11	METAL CHIP	8.2K 5% 1/16W
				R120	1-216-835-11	METAL CHIP	15K 5% 1/16W
				R121	1-218-272-11	METAL GLAZE	5.1K 5% 1/16W
				R122	1-216-853-11	METAL CHIP	470K 5% 1/16W
				R123	1-216-839-11	METAL CHIP	33K 5% 1/16W

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R124	1-216-817 11	METAL CHIP	470 5% 1/16W	R616	1-216-824-11	METAL CHIP	1.8K 5% 1/16W
R125	1-216-838 11	METAL CHIP	27K 5% 1/16W	R701	1-216-823-11	METAL CHIP	1.5K 5% 1/16W
R126	1-216-824-11	METAL CHIP	1.8K 5% 1/16W	R702	1-216-853-11	METAL CHIP	470K 5% 1/16W
R127	1-216-849-11	METAL CHIP	220K 5% 1/16W	R703	1-216-853-11	METAL CHIP	470K 5% 1/16W
R128	1-216-821-11	METAL CHIP	1K 5% 1/16W	R704	1-216-853-11	METAL CHIP	470K 5% 1/16W
R129	1-216-846-11	METAL CHIP	1 5% 1/16W	R707	1-216-847-11	METAL CHIP	150K 5% 1/16W
R130	1-216-857-11	METAL CHIP	1M 5% 1/16W	R708	1-216-847-11	METAL CHIP	150K 5% 1/16W
R131	1-216-829-11	METAL CHIP	4.7K 5% 1/16W	R709	1-216-861-11	METAL CHIP	2.2M 5% 1/16W
R132	1-216-839-11	METAL CHIP	33K 5% 1/16W	R710	1-216-847-11	METAL CHIP	150K 5% 1/16W
R133	1-216-851-11	METAL CHIP	330K 5% 1/16W	R717	1-216-837-11	METAL CHIP	22K 5% 1/16W
R134	1-216-842-11	METAL CHIP	56K 5% 1/16W	R718	1-216-837-11	METAL CHIP	22K 5% 1/16W
R135	1-216-833-11	METAL CHIP	10K 5% 1/16W	R719	1-216-837-11	METAL CHIP	22K 5% 1/16W
R136	1-216-845-11	METAL CHIP	100K 5% 1/16W	R720	1-216-837-11	METAL CHIP	22K 5% 1/16W
R137	1-216-857-11	METAL CHIP	1M 5% 1/16W	R721	1-216-837-11	METAL CHIP	22K 5% 1/16W
R138	1-216-833-11	METAL CHIP	10K 5% 1/16W	R722	1-216-833-11	METAL CHIP	10K 5% 1/16W
R139	1-216-811 11	METAL CHIP	150 5% 1/16W	R724	1-216-845-11	METAL CHIP	100K 5% 1/16W
R140	1-216-821-11	METAL CHIP	1K 5% 1/16W	R725	1-216-847-11	METAL CHIP	150K 5% 1/16W
R141	1-216-793-11	METAL GLAZE	4.7 5% 1/16W	R727	1-216-847-11	METAL CHIP	150K 5% 1/16W
R142	1-216-845-11	METAL CHIP	100K 5% 1/16W	R728	1-216-847-11	METAL CHIP	150K 5% 1/16W
R143	1-216-853-11	METAL CHIP	470K 5% 1/16W	R729	1-216-847-11	METAL CHIP	150K 5% 1/16W
R144	1-216-833-11	METAL CHIP	10K 5% 1/16W	R730	1-216-845-11	METAL CHIP	100K 5% 1/16W
R145	1-216-847-11	METAL CHIP	150K 5% 1/16W	R731	1-216-845-11	METAL CHIP	100K 5% 1/16W
R146	1-218-446-11	METAL CHIP	1 5% 1/16W	R732	1-216-857-11	METAL CHIP	1M 5% 1/16W
R147	1-218-446-11	METAL CHIP	1 5% 1/16W	R733	1-216-857-11	METAL CHIP	1M 5% 1/16W
R148	1-216-857-11	METAL CHIP	1M 5% 1/16W	R734	1-216-857-11	METAL CHIP	1M 5% 1/16W
R149	1-216-808 11	METAL CHIP	82 5% 1/16W	R735	1-216-857-11	METAL CHIP	1M 5% 1/16W
R150	1-216-833 11	METAL CHIP	10K 5% 1/16W	R737	1-216-833-11	METAL CHIP	10K 5% 1/16W
R151	1-216-833-11	METAL CHIP	10K 5% 1/16W	R738	1-216-845-11	METAL CHIP	100K 5% 1/16W
R152	1-216-154-00	METAL GLAZE	15 5% 1/8W	R739	1-216-833-11	METAL CHIP	10K 5% 1/16W
R153	1-216-833-11	METAL CHIP	10K 5% 1/16W	R740	1-216-833-11	METAL CHIP	10K 5% 1/16W
R154	1-216-833-11	METAL CHIP	10K 5% 1/16W	R741	1-216-853-11	METAL CHIP	470K 5% 1/16W
R155	1-216-845-11	METAL CHIP	100K 5% 1/16W	R743	1-216-815-11	METAL CHIP	330 5% 1/16W
R156	1-216-154-00	METAL GLAZE	15 5% 1/8W	R745	1-216-857-11	METAL CHIP	1M 5% 1/16W
R157	1-216-833-11	METAL CHIP	10K 5% 1/16W	R746	1-216-845-11	METAL CHIP	100K 5% 1/16W
R601	1-216-857-11	METAL CHIP	1M 5% 1/16W	R751	1-216-833-11	METAL CHIP	10K 5% 1/16W
R602	1-216-849 11	METAL CHIP	220K 5% 1/16W	R752	1-216-837-11	METAL CHIP	22K 5% 1/16W
R603	1-216-849 11	METAL CHIP	220K 5% 1/16W	R753	1-216-847-11	METAL CHIP	150K 5% 1/16W
R604	1-216-849-11	METAL CHIP	220K 5% 1/16W	R754	1-216-845-11	METAL CHIP	100K 5% 1/16W
R605	1-216-830-11	METAL CHIP	5.6K 5% 1/16W	R755	1-216-845-11	METAL CHIP	100K 5% 1/16W
R606	1-216-835-11	METAL CHIP	15K 5% 1/16W	< VARIABLE RESISTOR >			
R607	1-216-831-11	METAL CHIP	6.8K 5% 1/16W	RV101	1-223-749-11	RES. VAR. CARBON 10K/10K (VOL)	
R609	1-216-809-11	METAL CHIP	100 5% 1/16W	RV601	1-238-663 11	RES. ADJ. CARBON 4.7K	
R610	1-216-838-11	METAL CHIP	27K 5% 1/16W	RV602	1-223-948-11	RES. VAR. CARBON (TAPE SPEED)	
R611	1-216-841-11	METAL CHIP	47K 5% 1/16W	< SWITCH >			
R612	1-216-813-11	METAL CHIP	220 5% 1/16W	S101	1-692-589-11	SWITCH, SLIDE (FWD-REV)	
R613	1-216-809-11	METAL CHIP	100 5% 1/16W	S102	1-571-275-31	SWITCH, SLIDE (MIC SENS)	
R614	1-216-809-11	METAL CHIP	100 5% 1/16W	S701	1-692-370-11	SWITCH, SLIDE (MD MODE)	
R615	1-216-809 11	METAL CHIP	100 5% 1/16W				

Ref. No.	Part No.	Description	Remark
----------	----------	-------------	--------

S702 1-571-275-31 SWITCH, SLIDE (VOR)

< TRANSFORMER >

T101 1-427-653-21 TRANSFORMER, BIAS OSCILLATION

< THERMISTOR >

TH601 1 809-351-11 THERMISTOR, NTC (2125)

< VIBRATOR >

X701 1-579-867-21 VIBRATOR, CERAMIC (1.981MHz)

MISCELLANEOUS

6 1-467 853-11 SWITCH UNIT
 (■, ▲, △, REC, FF/CUE, HOLD, COUNTER RESET,
 ■, REW/REVIEW)
 54 1-654 799-11 TAPE FLEXIBLE BOARD
 55 1-654 800-11 ATS FLEXIBLE BOARD
 120 1 644-696-11 MOTOR FLEXIBLE BOARD
 HE901 1-500-163-11 HEAD, MAGNETIC (ERASE)
 HRP901 1-500-162-21 HEAD, MAGNETIC (RECORD/PLAYBACK)

LCD1 1-810-670-11 DISPLAY PANEL, LIQUID CRYSTAL
 (INCLUDED FLEXIBLE BOARD)
 M901 1-698-084-11 MOTOR (CAPSTAN/REEL)
 MIC1 1-542-142-11 MICROPHONE, BUILT IN
 S901 1-762-080-11 SWITCH, LEAF (REC PROOF (FWD), ATS)
 S902 1-692-101-11 SWITCH, LEAF (REC PROOF (REV), TAPE)
 SP901 1-504-688-11 SPEAKER (3. 6CM)

ACCESSORIES & PACKING MATERIALS

1-528-078-00 BATTERY, ALKALINE MANGANESE (Tourist)
 1-542-268-11 MICROPHONE, ELECTRET CONDENSER (Tourist)
 3-800-189-01 MANUAL, INSTRUCTION (JAPANESE) (Tourist)
 3-800-189-11 MANUAL, INSTRUCTION (ENGLISH, FRENCH)
 3-800-189-21 MANUAL, INSTRUCTION (SPANISH, PORTUGUESE)
 (AEP, UK, E)
 3-800-189-31 MANUAL, INSTRUCTION (GERMAN, DUTCH)
 (AEP, UK)
 3-800-189-41 MANUAL, INSTRUCTION (SWEDISH, ITALIAN)
 (AEP, UK)
 3-800-189-51 MANUAL, INSTRUCTION (KOREAN) (E)
 3-919-617-01 CASE, CARRYING
 * 3-927-756-01 CUSHION
 * 3-927-757-01 INDIVIDUAL CARTON (EXCEPT US)
 * 3-927-764-01 INDIVIDUAL CARTON (US)
 8-953-538-90 HEADPHONE MDR-E741//K SET (Tourist)
 X-3329-657-1 ATTACHMENT ASSY (Tourist)

9-960-277-11

Sony Corporation
Consumer A&V Products Company
Personal A&V Products Div.

Published by Home A&V Products Div.
Quality Engineering Dept.

English
95G0594-1
Printed in Japan
© 1995. 7

TCM-80V

SONY.

*US Model
Canadian Model
AEP Model
UK Model
E Model
Tourist Model*

SERVICE MANUAL


SUPPLEMENT-1

File this supplement with the service manual.

Subject: MAIN Board Modification

(ECN-MT700293)


- New/Former Discrimination

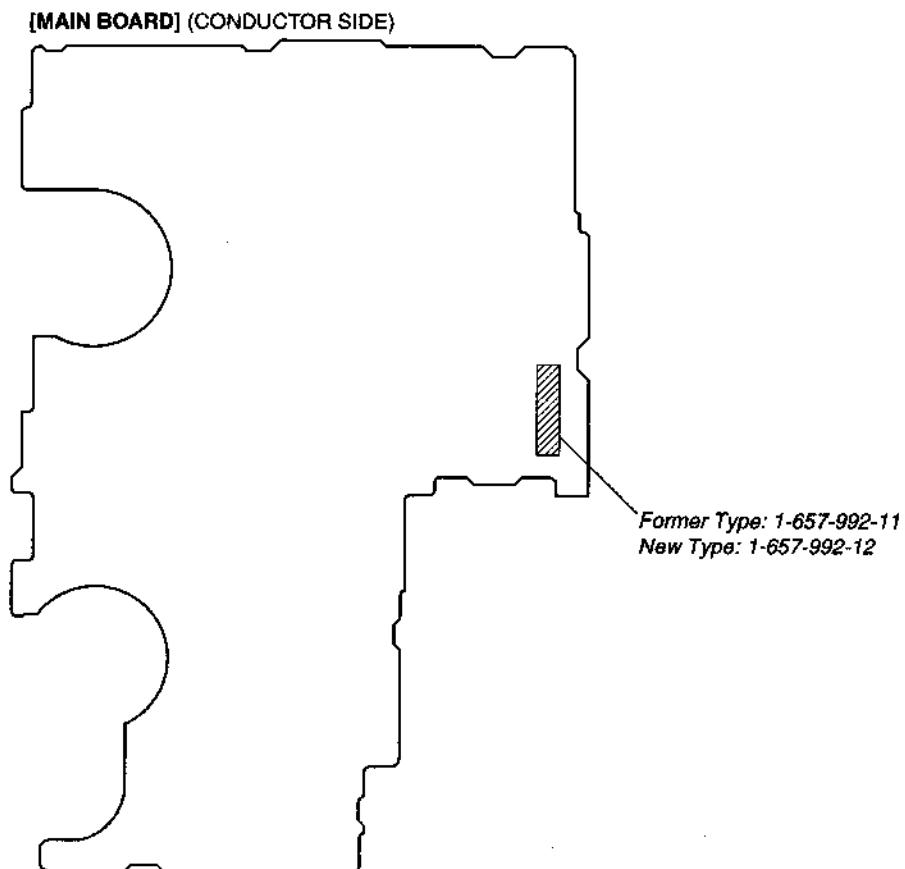

Page	Former type					New type						
	Ref. No.	Part No.	Description	Remark		Ref. No.	Part No.	Description	Remark			
27	CN103	1-766-750-11	CONNECTOR, FPC (ZIF)	18P		CN103	1-573-927-11	CONNECTOR, FFC/FPC (ZIF)	18P			
	CN104	1-766-820-11	CONNECTOR, FPC (ZIF)	20P		CN104	1-573-929-11	CONNECTOR, FFC/FPC (ZIF)	20P			
28	R606	1-216-835-11	METAL CHIP	15K	5%	1/16W	R606	1-216-837-11	METAL CHIP	22K	5%	1/16W
	R607	1-216-831-11	MEATL CHIP	6.8K	5%	1/16W	R607	1-216-829-11	MEATL CHIP	4.7K	5%	1/16W
	R610	1-216-838-11	METAL CHIP	27K	5%	1/16W	R610	1-216-836-11	METAL CHIP	18K	5%	1/16W
	RV601	1-238-663-11	RES, ADJ, CARBON	4.7K			RV601	1-223-586-11	RES, ADJ, CARBON	10K		

- Items marked "*" are not stocked since they are seldom required for routine service.
Some delay should be anticipated when ordering these items.

1. DIAGRAM
1-1. PRINTED WIRING BOARD

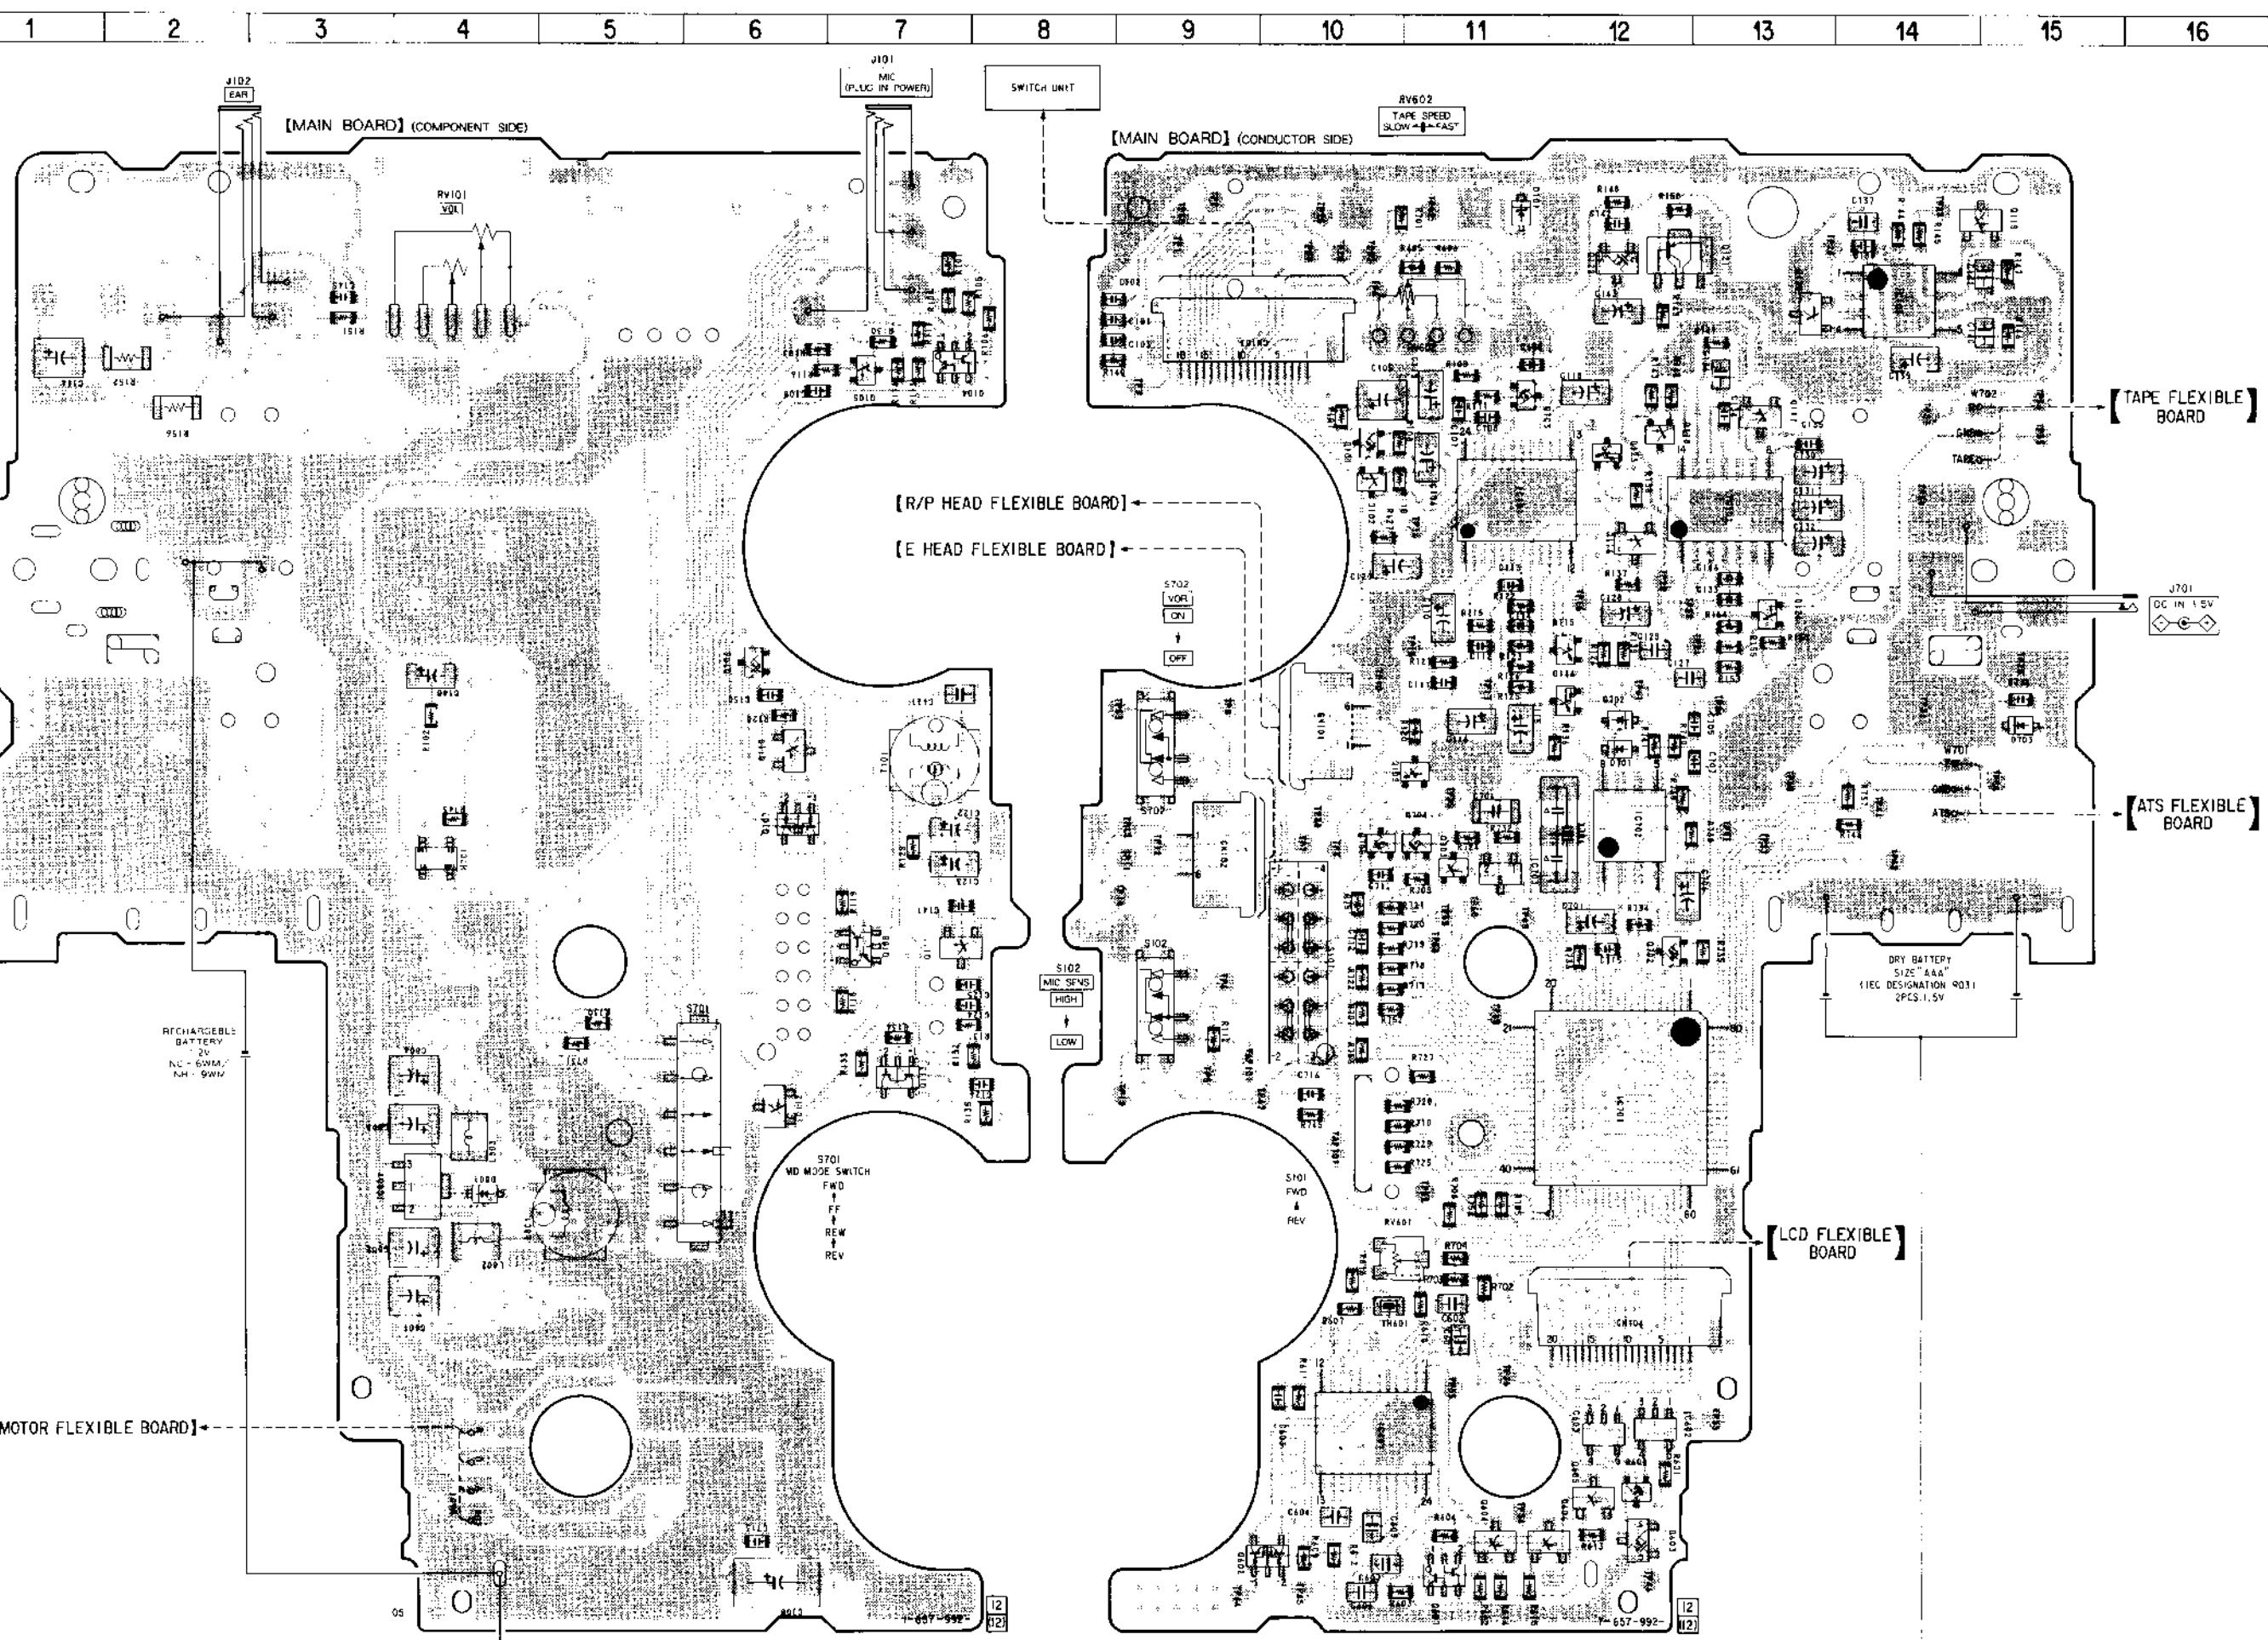

• Semiconductor Location

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D101	B-11	Q101	C-10	Q119	B-15
D701	E-12	Q102	D-10	Q120	B-13
D702	E-12	Q103	C-11	Q121	B-12
D703	E-15	Q104	C-7	Q122	B-12
D801	H-4	Q105	C-7	Q123	C-12
IC101	D-11	Q106	E-6	Q124	D-13
IC102	D-13	Q107	F-6	Q601	K-12
IC103	B-14	Q108	G-7	Q602	K-10
IC601	J-10	Q109	F-11	Q603	K-12
IC602	J-12	Q110	E-6	Q604	K-11
IC603	J-12	Q111	G-7	Q605	K-12
IC701	H-12	Q112	H-6	Q606	K-12
IC702	F-12	Q113	H-7	Q607	K-11
IC703	F-11	Q114	E-12	Q702	G-12
IC801	H-4	Q115	E-12	Q703	F-11
		Q116	D-12	Q704	F-11
		Q117	C-13	Q705	F-10
		Q118	C-12		

Note on Printed Wiring Board:

- : parts extracted from the component side.
- : parts extracted from the conductor side.
- : internal component.
- : Pattern from the side which enables seeing.
(The other layers' patterns are not indicated.)

Caution:
Pattern face side: Parts on the pattern face side seen from
(Conductor Side) the pattern face are indicated.
Parts face side: Parts on the parts face side seen from
(Component Side) the parts face are indicated.