


WM-FX40

SERVICE MANUAL

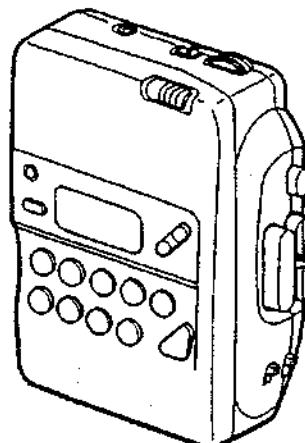

US Model
Canadian Model
AEP Model
UK Model
E Model

TABLE OF CONTENTS

GENERAL	2- 6
Messages, warnings and tips.....	2
Test equipment, Jigs and material	2
Location and function of controls.....	3
User's instruction	4- 6
Service notes.....	6
REMOVAL	7-8
BLOCK DIAGRAMS	9-10
SCHEMATICS AND BOARD DIAGRAMS	11-19
Semiconductor layouts	18
IC layouts	19
SPARE PARTS LIST.....	20-27
Exploded views and mechanical parts.....	20-21
Electrical parts.....	22-27
ADJUSTMENTS	28-33
Mechanical measurements.....	28
Mechanical adjustments.....	28-29
Electrical alignments.....	29-33
Adjustment location.....	28-29
SPECIFICATIONS	34

Model Name Using Similar Mechanism	WM-2051
Tape Transport Mechanism	MT-WM2051-43

Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
"DOLBY" and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

RADIO CASSETTE PLAYER
SONY[®]



GENERAL

Messages, warnings and tips

SAFETY-RELATED COMPONENT

WARNING!!

COMPONENTS IDENTIFIED BY MARK ▲ OR
DOTTED LINE WITH MARK ▲ ON THE
SCHEMATIC DIAGRAMS AND IN THE PARTS
LIST ARE CRITICAL TO SAFE OPERATION.
REPLACE THESE COMPONENTS WITH SONY
PARTS WHOSE PART NUMBERS APPEAR AS
SHOWN IN THIS MANUAL OR IN SUPPLE-
MENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE  SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.


Precautions

Notes on battery

- Remove the battrey when you will not use the unit for a long time to prevent damage from battery leakage and corrosion.
 - When the sound becomes unstable, try a new battery.

External power sources

Use only the recommended AC power adaptor or car battery cord manufactured by Sony. Polarity of the plugs of other manufacturers may be different.

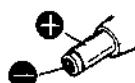

Polarity of this plug

Test equipment, Jigs and Material

Test equipment

- Digital multimeter
- FM RF signal generator
- AM RF signal generator
- Stabilized power supply
- Speed checker
- Wow and Flutter
- Frequency counter
- VTVM


Jigs

Test tape	Part Number
- WS-48A (3kHz, 0dB)	7-819-032-11
Cassette type torque meter	
- CQ-102C (normal direction)	8-909-708-22
- CQ-102RC (reverse direction)	8-909-708-26
- CQ-201B (FF and REW)	8-909-708-41

Screw locking compound

Neji lock G (1401B) 7-432-114-11


Location and Function of Controls

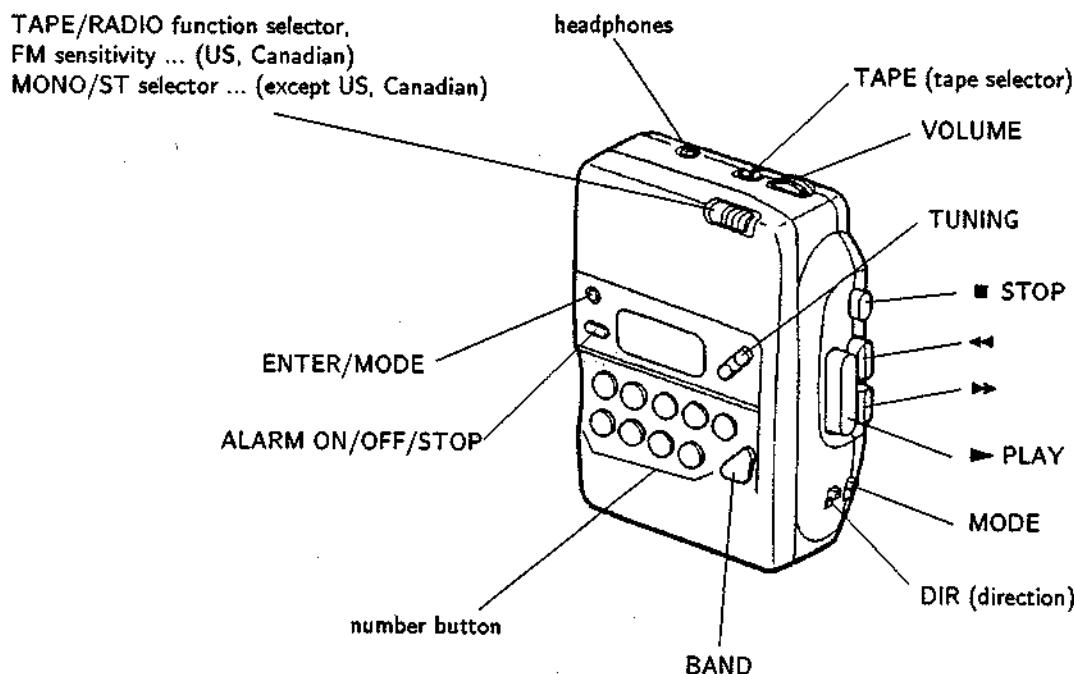

On Tape Operation	
To listen to the other side of the cassette during playback	
To stop the tape	
To wind the tape rapidly	
To check the direction of the tape transportation	See FWD or REV indicator.

To Use According to Your Tape	
For normal (TYPE I) tapes	
For CrO2 (TYPE II) tapes or metal (TYPE IV) tapes	

On Playback Mode	
To play back both sides of the cassette once If you begin playback on the reverse side, the unit will shut off at the end of that side of the tape.	
To play back both sides of the cassette repeatedly	

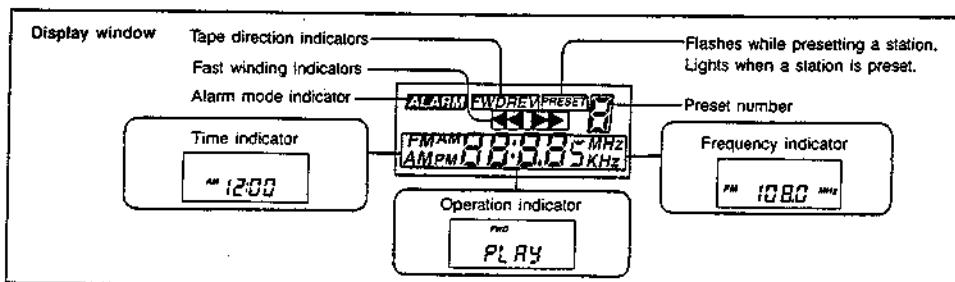

User's Instruction

Clock Operation

Before operation, install the batteries.

How to Use the ENTER/MODE Button

You can change the operation mode in sequence by pressing the ENTER/MODE button.

Setting the Alarm

Setting the Alarm

Set the function selector to TAPE (RADIO OFF).

Alarm mode

Current time display

Press for 2 seconds.



The time display flashes and the ALARM indicator appears.

Mode for current time setting

Press for 2 seconds.

The time display flashes.

The time display stops flashing.

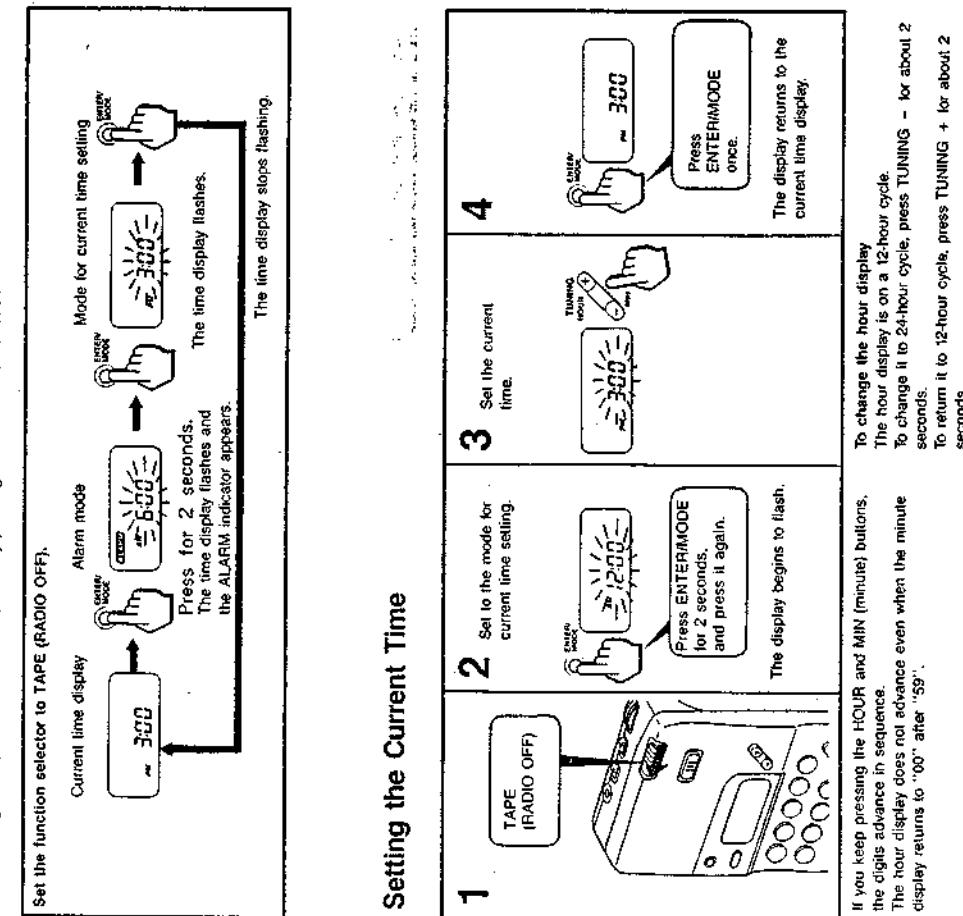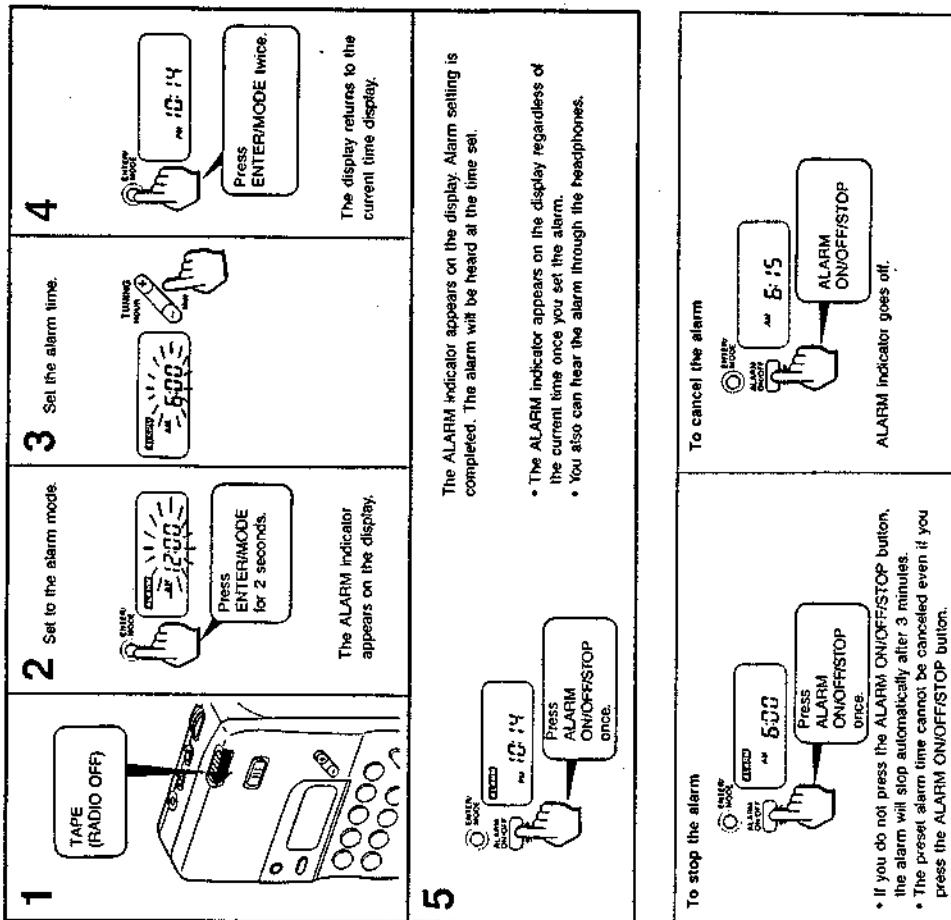


- If you keep pressing the HOUR and MIN (minute) buttons, the digits advance in sequence.
- The hour display does not advance even when the minute display returns to "00" after "59".

- If you do not press the ALARM ON/OFF/STOP button, the alarm will stop automatically after 3 minutes.
- The preset alarm time cannot be canceled even if you press the ALARM ON/OFF/STOP button.

Preset Tuning

You can preset up to 9 stations in each band (AM, FM).
Preset a station while the PRESET indicator flashes for 10 seconds.

Presetting the Stations

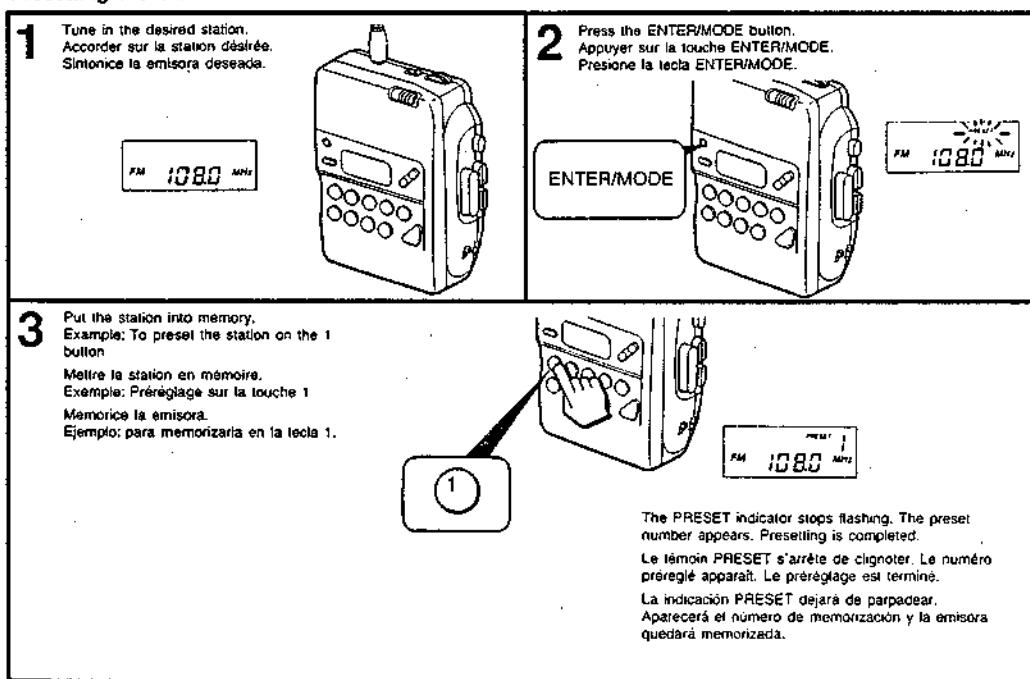

To stop the presetting operation
After pressing the ENTER/MODE button, leave the unit for 5 seconds. The PRESET indicator goes off.

-US model-

To Use the Unit Abroad

This unit is factory preset to tune in the stations of the frequency range of U.S.A. and Canada. When you use the unit in other countries, change the receivable frequency range.

- 1 Turn on the radio.
- 2 To use in Japan

Keep ALARM ON/OFF/STOP and then TUNING + pressed for 7 seconds. The receivable frequency range becomes as follows.

FM 76.0 - 90 MHz (100 kHz step)
AM 531 - 1,710 kHz (9 kHz step)

To use in other countries

Keep ALARM ON/OFF/STOP and then TUNING - pressed for 7 seconds. The receivable frequency range becomes as follows.

FM 87.5 - 108 MHz (50 kHz step)
AM 531 - 1,602 kHz (9 kHz step)

To return to the frequency range of U.S.A. and Canada, keep ALARM ON/OFF/STOP pressed for 7 seconds.

When the frequency range has changed, the display turns off and turns on again with beep sound. The display will show the frequency of that you changed to.

Note

If you change the frequency range, all preset stations, current time, and alarm time are canceled.

If the Display Shows Incorrect Information

- 1 Turn on the radio.
- 2 Keep ALARM pressed for 7 seconds.
The display turns off and turns on again with beep sound. The display will show AM 530 kHz.
All preset stations, current time, and alarm time are canceled.

-Canadian, E model-

To Use the Unit Abroad

This unit is factory preset to tune in the stations of the local frequency range. When you use the unit in other countries, change the receivable frequency range.

To the customers in Canada

This unit is factory preset to tune in the stations of Canada and the U.S.A.

To use in other countries:

- 1 Turn on the radio.
- 2 Keep ALARM ON/OFF/STOP and then TUNING - pressed for 7 seconds.
The receivable frequency range becomes as follows.
FM 87.5 - 108 MHz (50 kHz step)
AM 531 - 1,602 kHz (9 kHz step)

To the customers in other countries

This unit is factory preset to tune in the stations of Europe.

To use in the U.S.A. and Canada:

- 1 Turn on the radio.
- 2 Keep ALARM/ON/OFF/STOP and then TUNING - pressed for 7 seconds.
The receivable frequency range becomes as follows.
FM 87.5 - 108 MHz (100 kHz step)
AM 530 - 1,710 kHz (10 kHz step)

To use in Japan

- 1 Turn on the radio.
- 2 Keep ALARM ON/OFF/STOP and then TUNING + pressed for 7 seconds.
The receivable frequency range becomes as follows.
FM 76.0 - 90 MHz (100 kHz step)
AM 531 - 1,710 kHz (9 kHz step)

To return to the factory preset frequency range, keep ALARM ON/OFF/STOP pressed for 7 seconds.

When the frequency range has changed, the display turns off and turns on again with the beep sound. The display will show the frequency of that you changed to.

If the display shows incorrect information

- 1 Turn on the radio.
- 2 Keep ALARM pressed for 7 seconds.
The display turns off and turns on again with beep sound.
The display will show AM 530 kHz for Canada and AM 531 kHz for other countries.
All preset stations, current time, and alarm time are canceled.

Service Notes

Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270°C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

Notes on Chip Component Replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

-AEP, UK, IT model-

If the display shows incorrect information


- 1 Turn on the radio.
- 2 Keep ALARM pressed for 7 seconds.
The display turns off and turns on again with beep sound.
The display will show AM 531 kHz (AM 522 kHz for Italy).
All preset stations, current time, and alarm time are canceled.

REMOVAL


Note :



-Follow the removal procedure in the numerical order given.

Cabinet (rear) assy

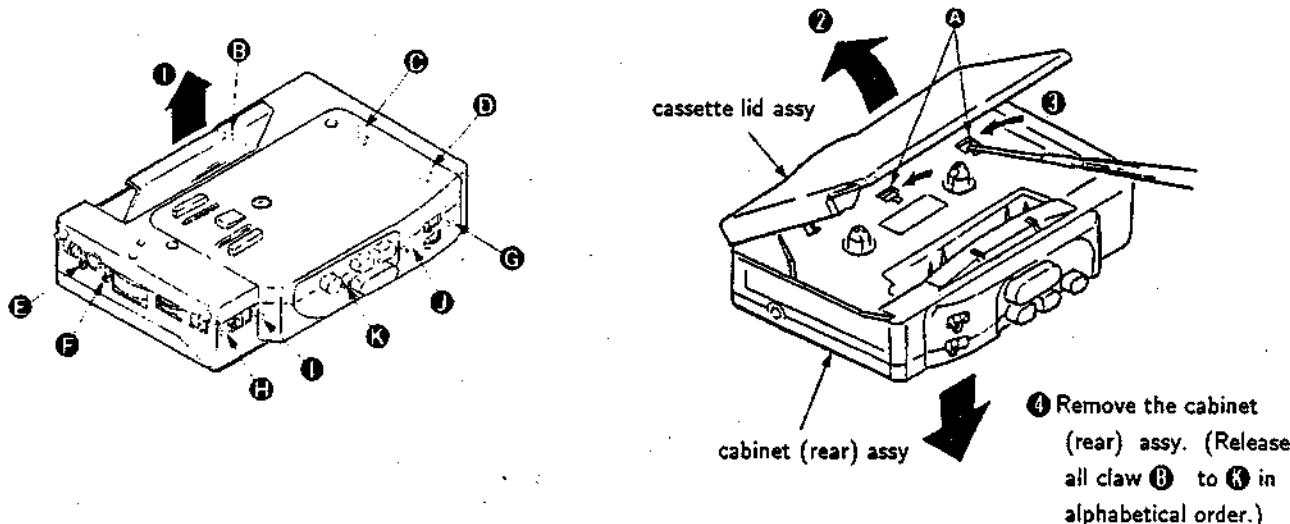


Mechanism and Main board

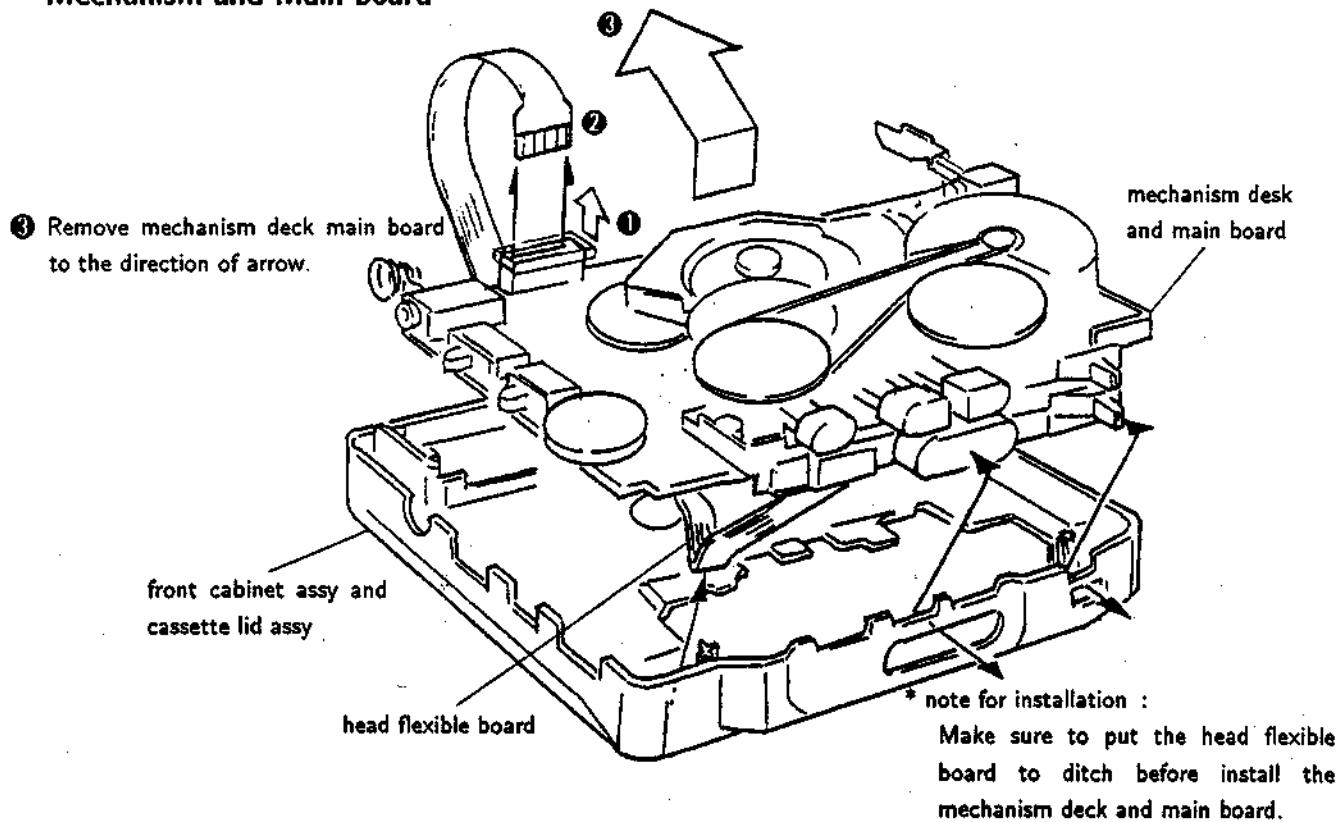

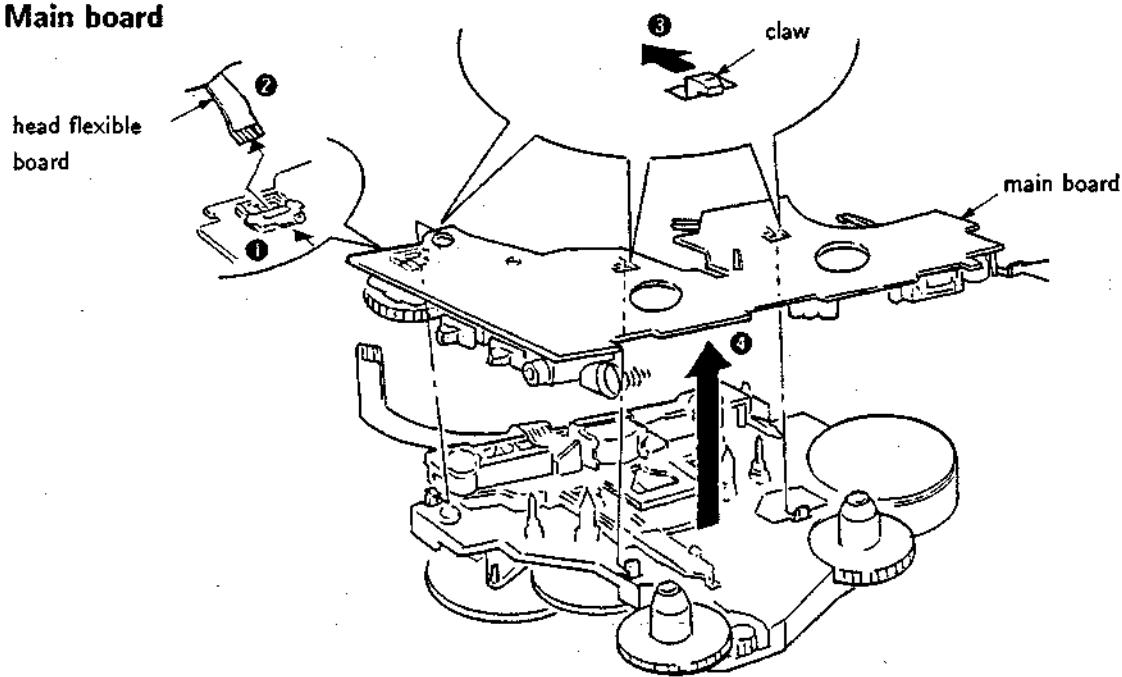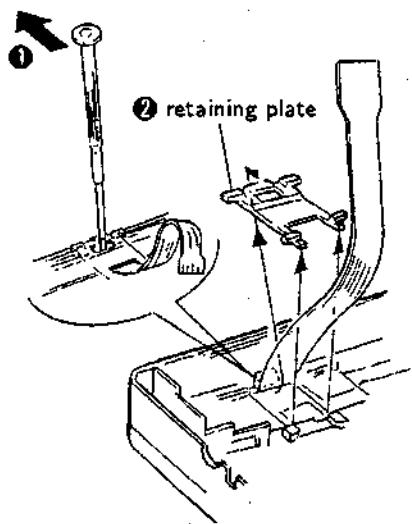
Main board**Cassette lid assy**

③ Insert a precision screwdriver (1.4mm flat-blade) vertically into portion A to release the hinge plate.

④ Portion B to release the hinge plate

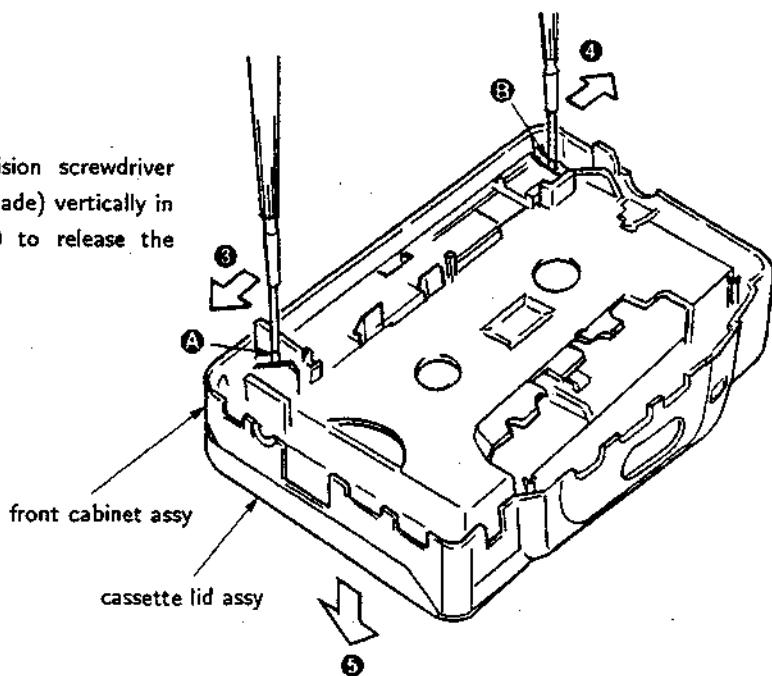


BLOCK BIAGRAM

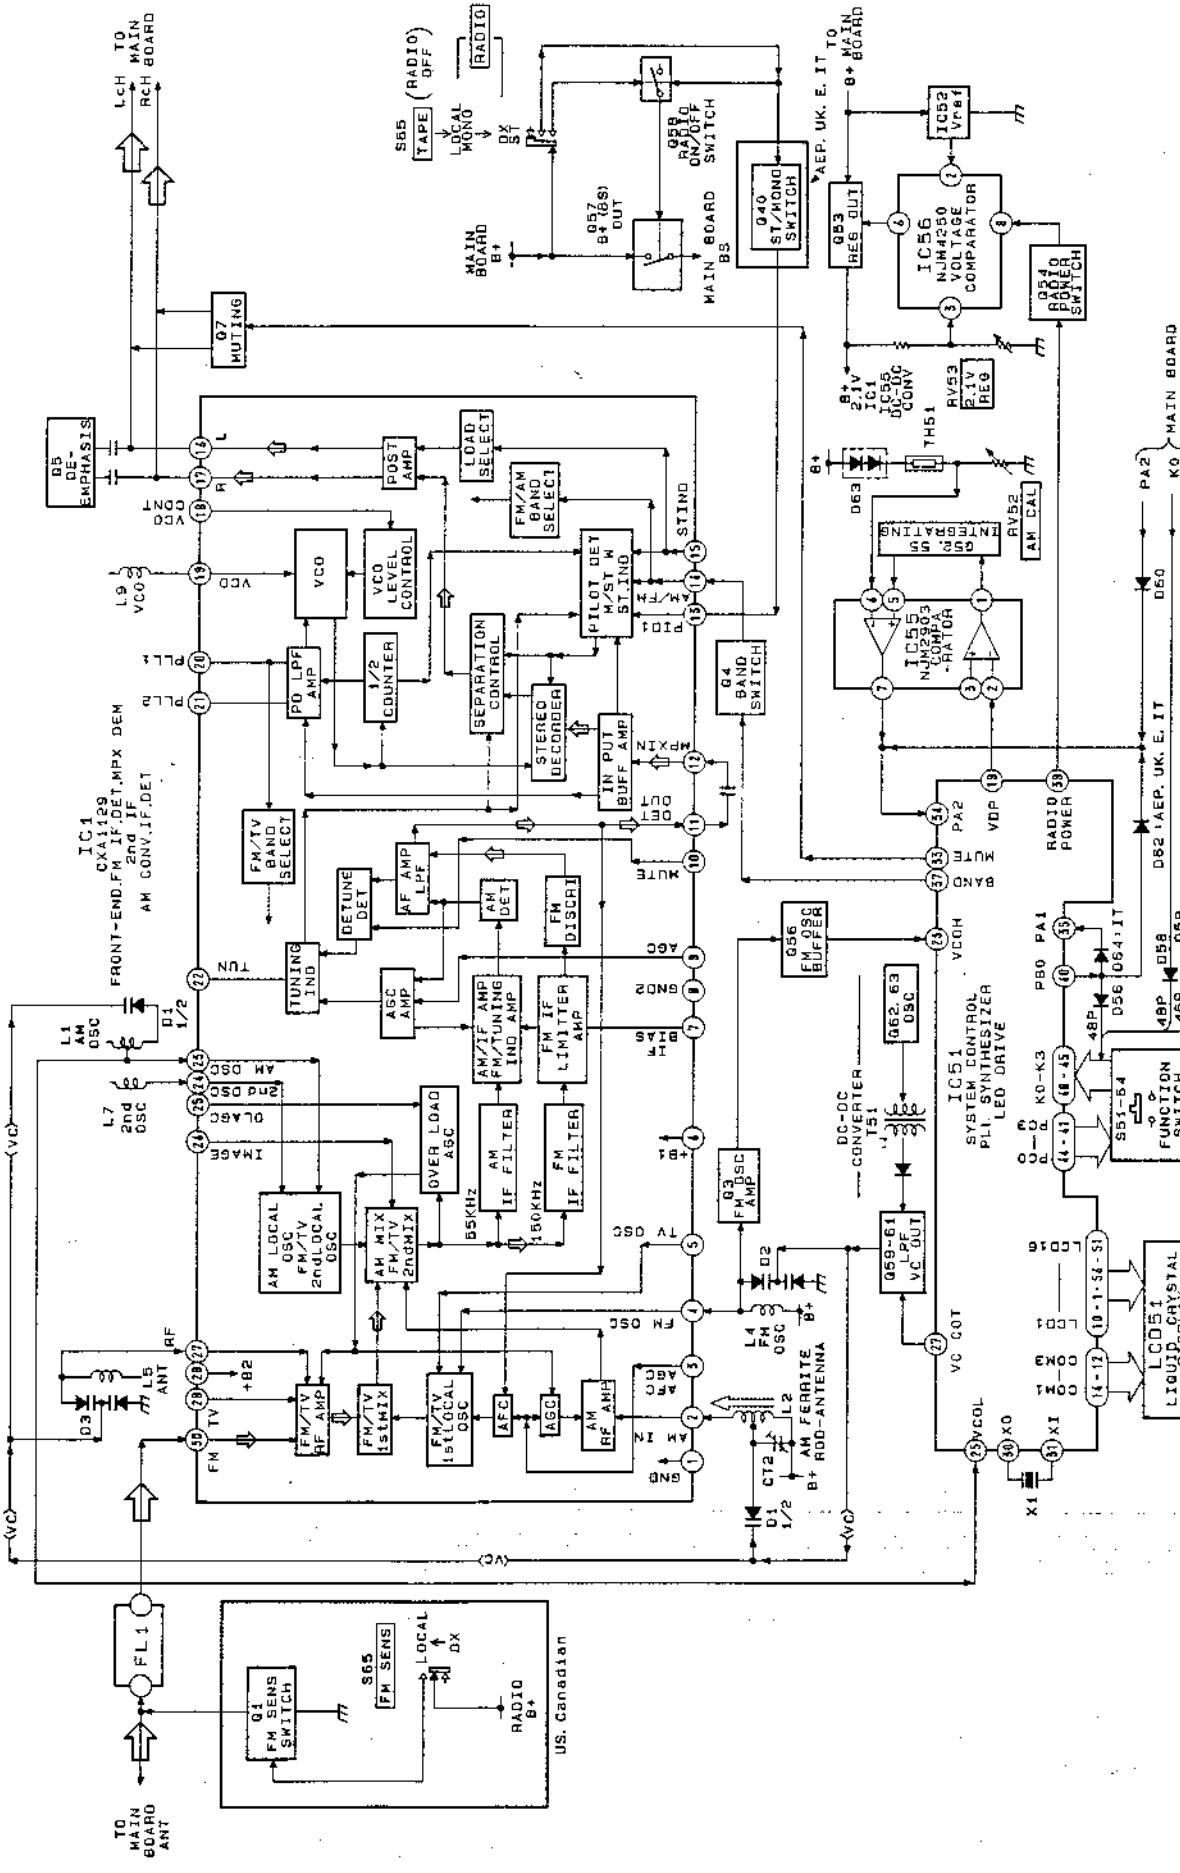

Turner Section

-9-


Andhra Section

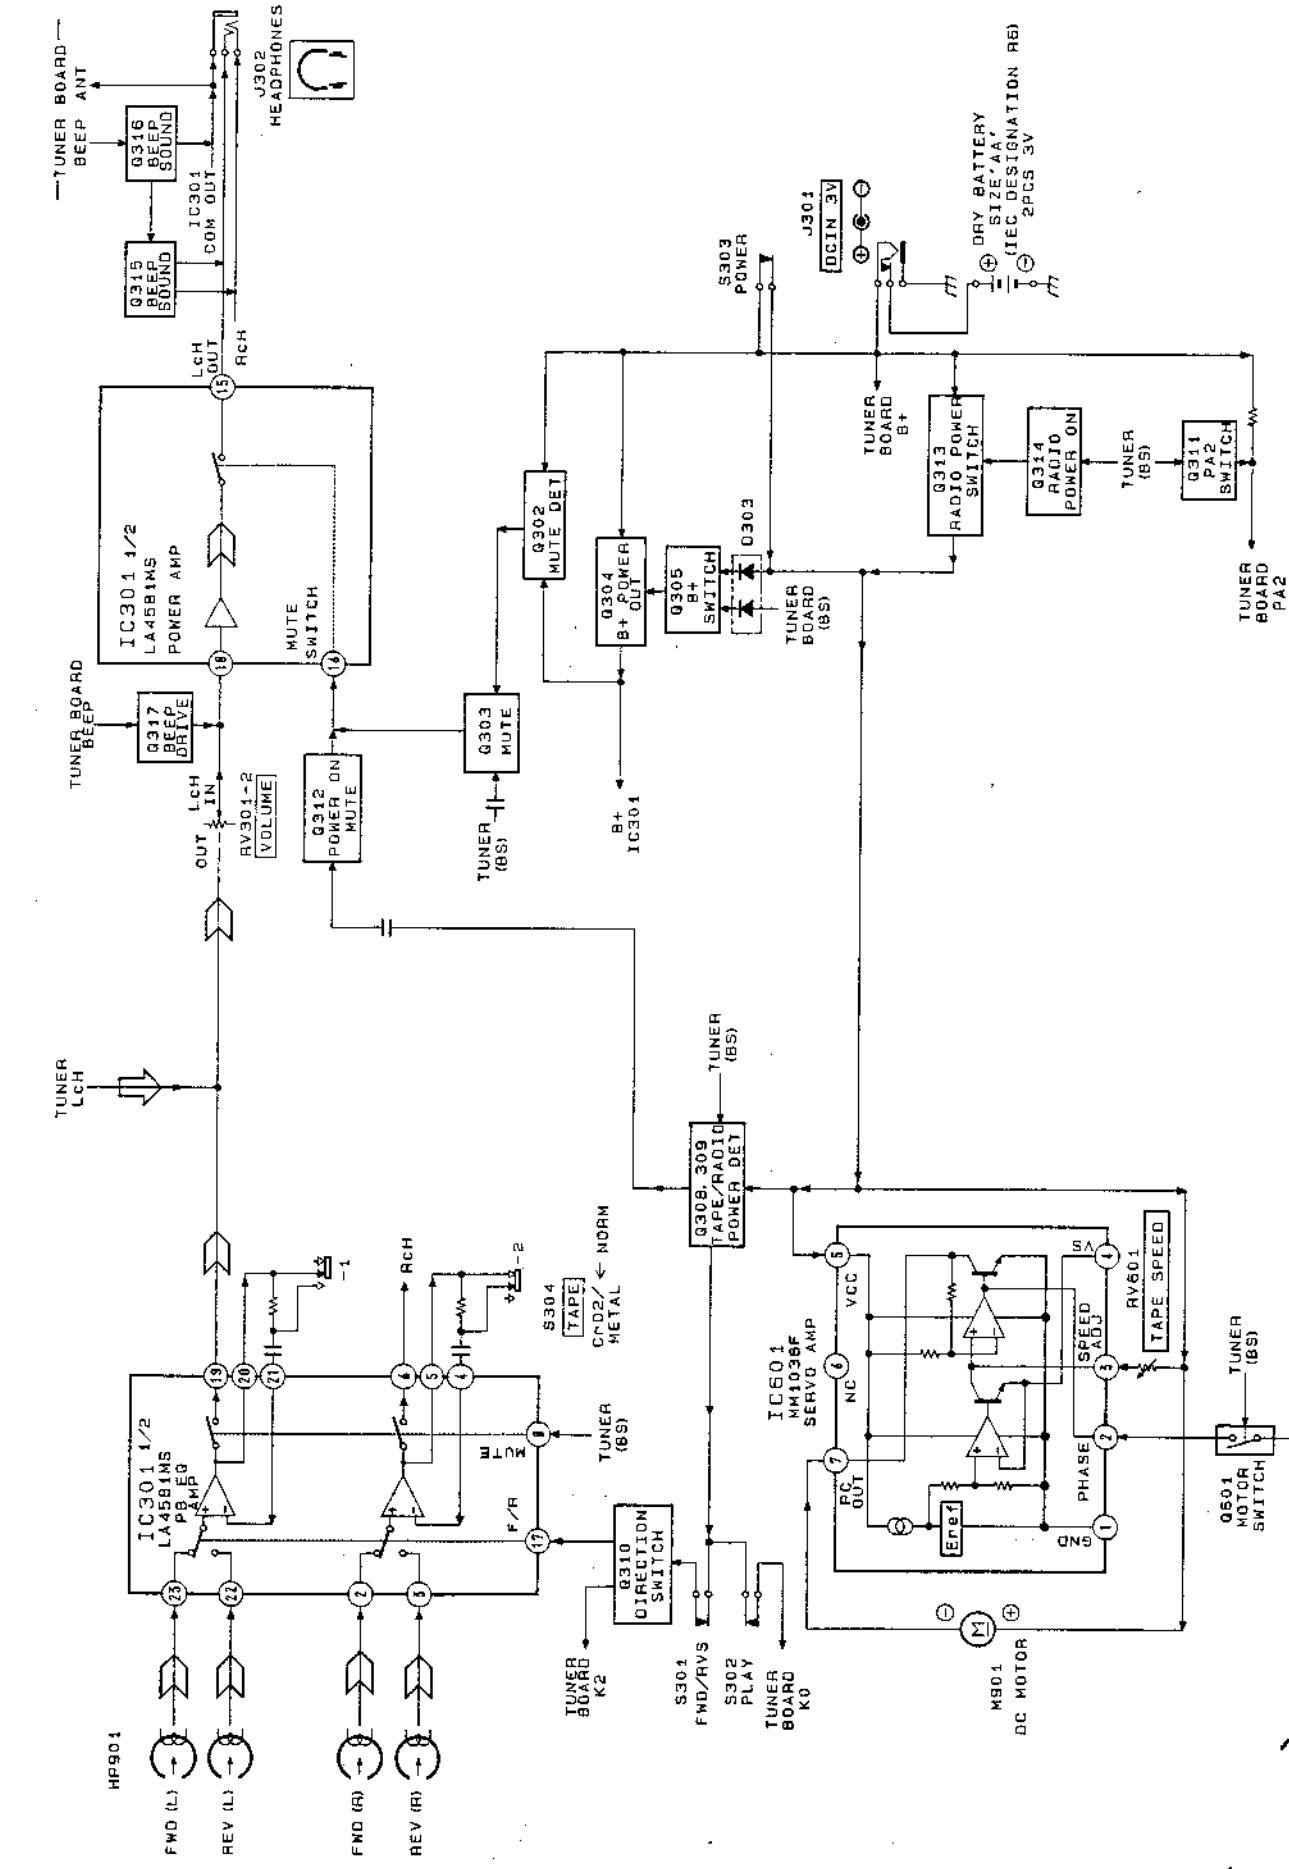

-10-

SCHEMATICS AND BOARD DIAGRAMS

Tuner Board Schematic Diagram

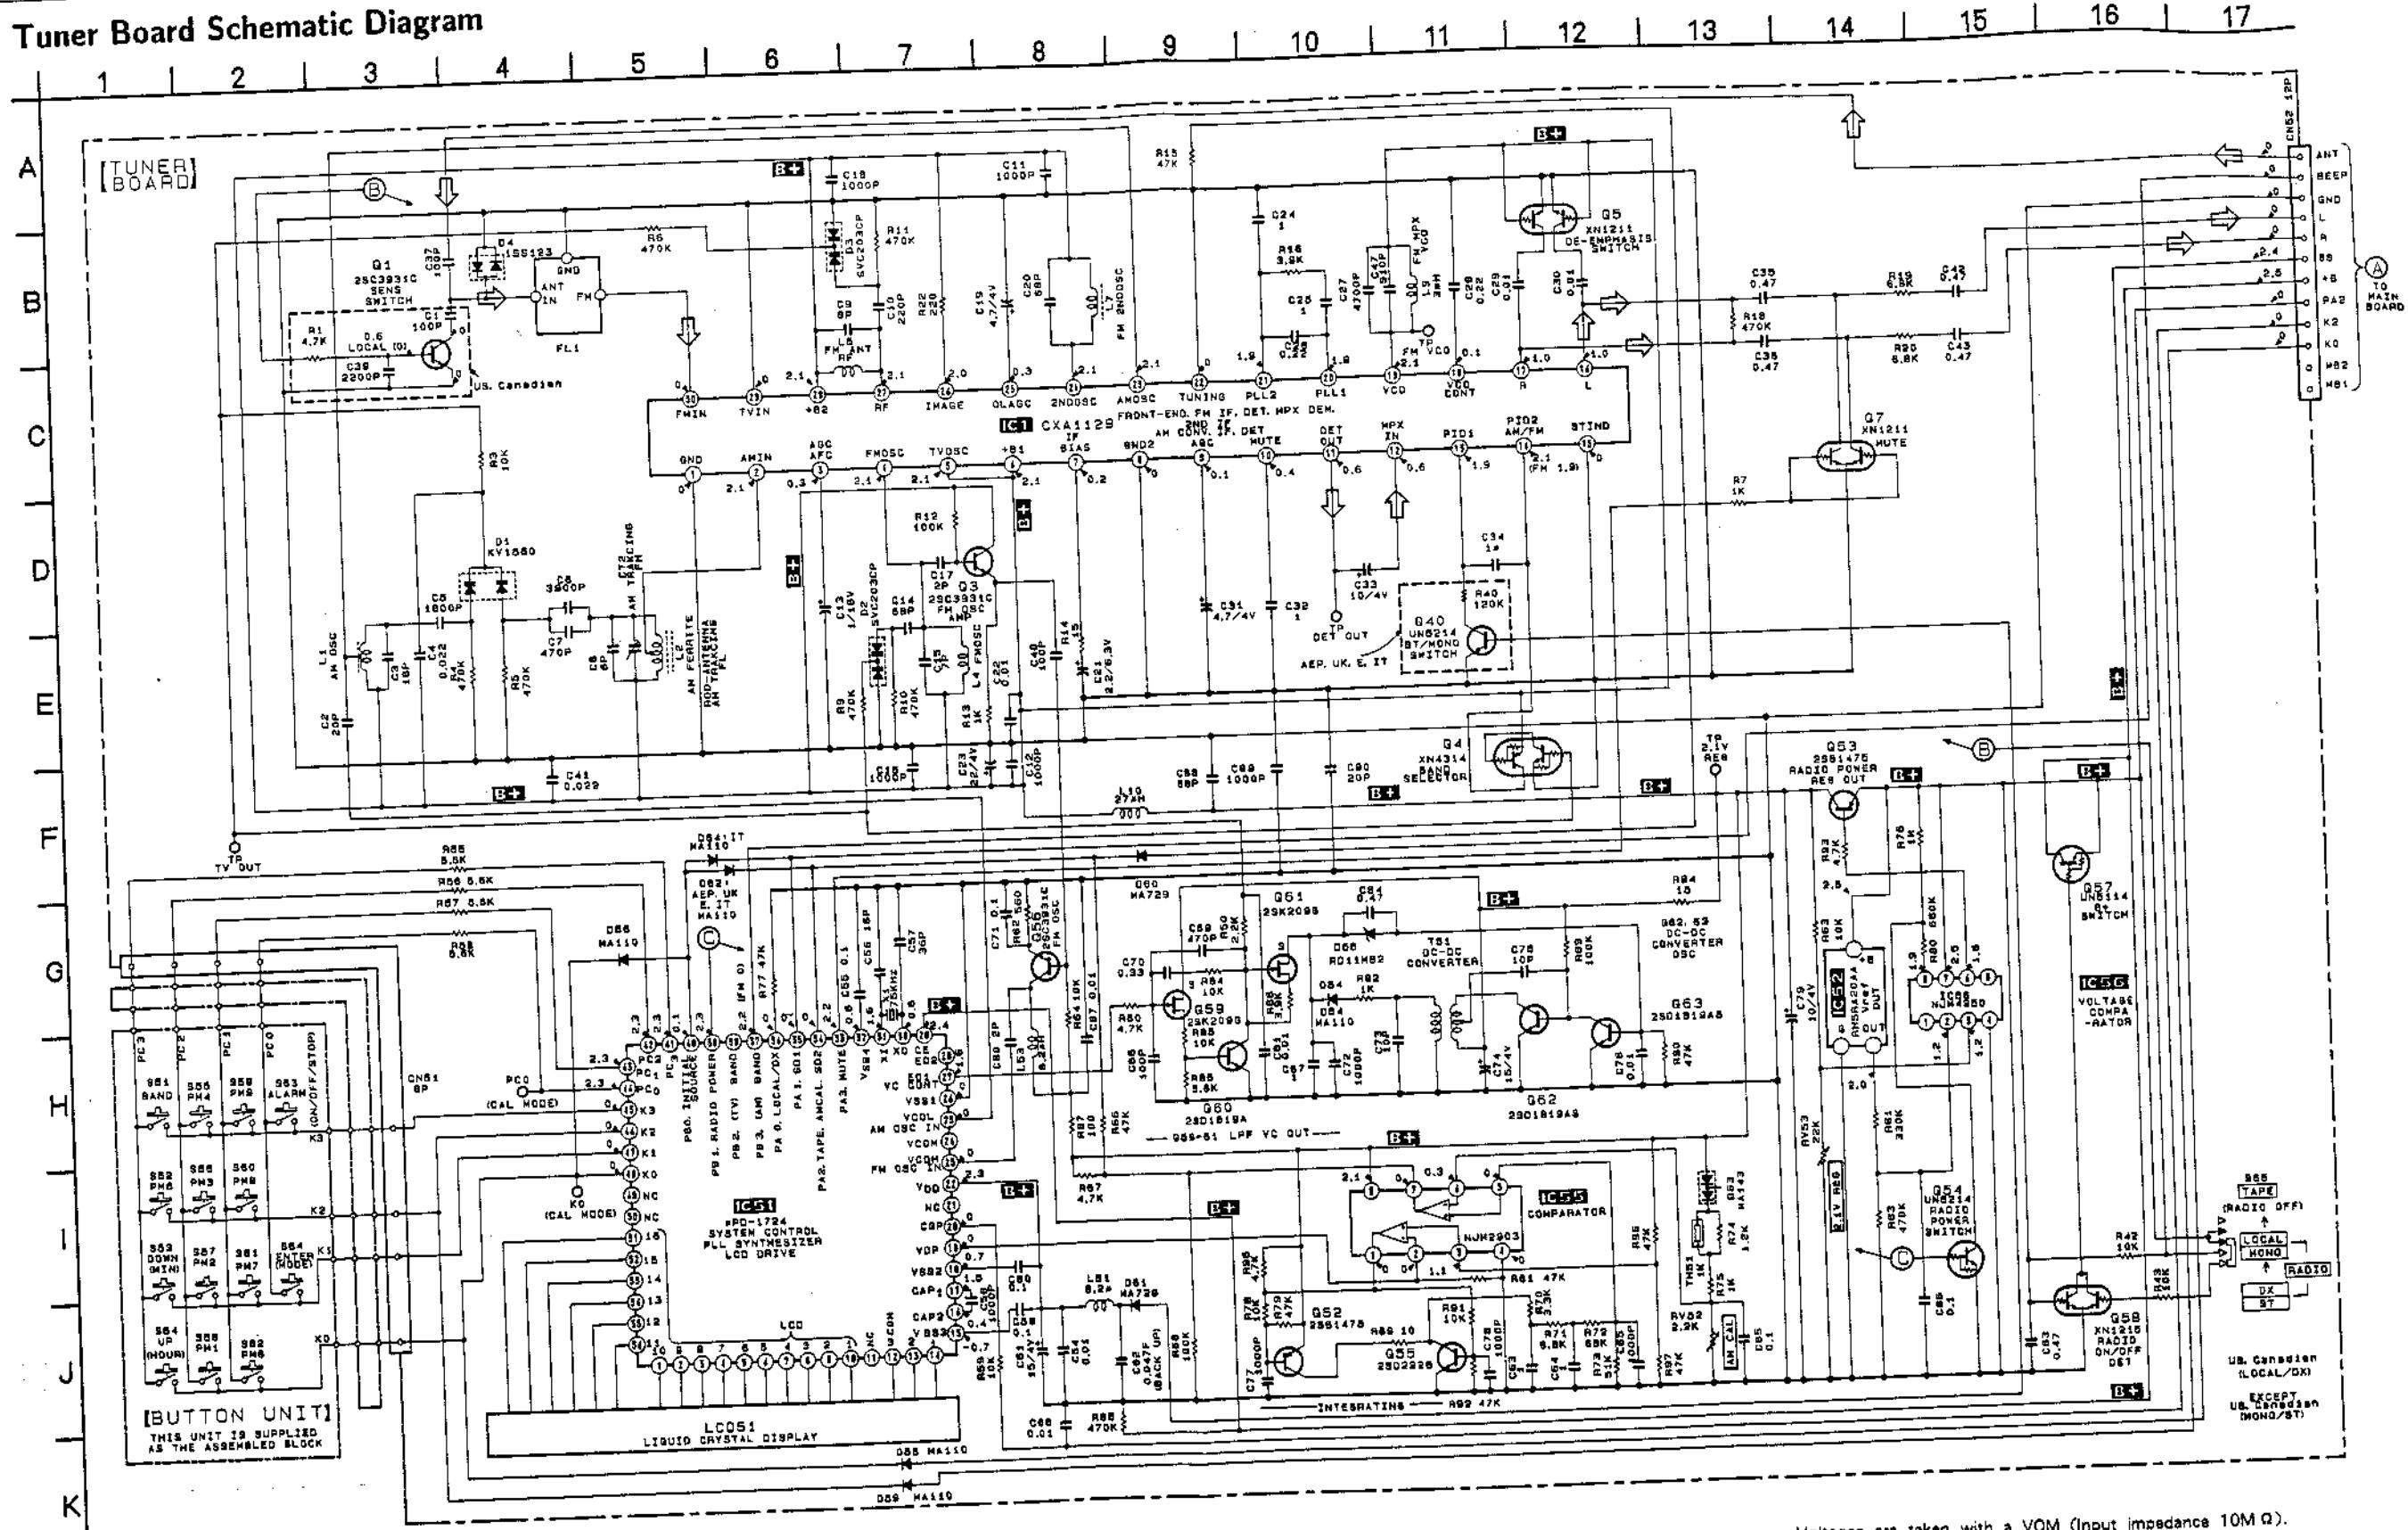

Note:


- All capacitors are in μF unless otherwise noted. pF : μF
- 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $1/2\text{W}$ or less unless otherwise specified.
- \triangle : internal component.
- $\text{B}+$: $\text{B}+$ Line
- \square : adjustment for repair.

- Power voltage is dc 2.5V and fed with regulated dc power supply from external power voltage jack.
- Voltage and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- no mark: AM
- () : FM

Voltages are taken with a VOM (Input impedance 10M Ω).
Voltage variations may be noted due to normal production tolerances.

- Signal path:
 \Rightarrow : FM

Tuner Board Printed Wiring Boards

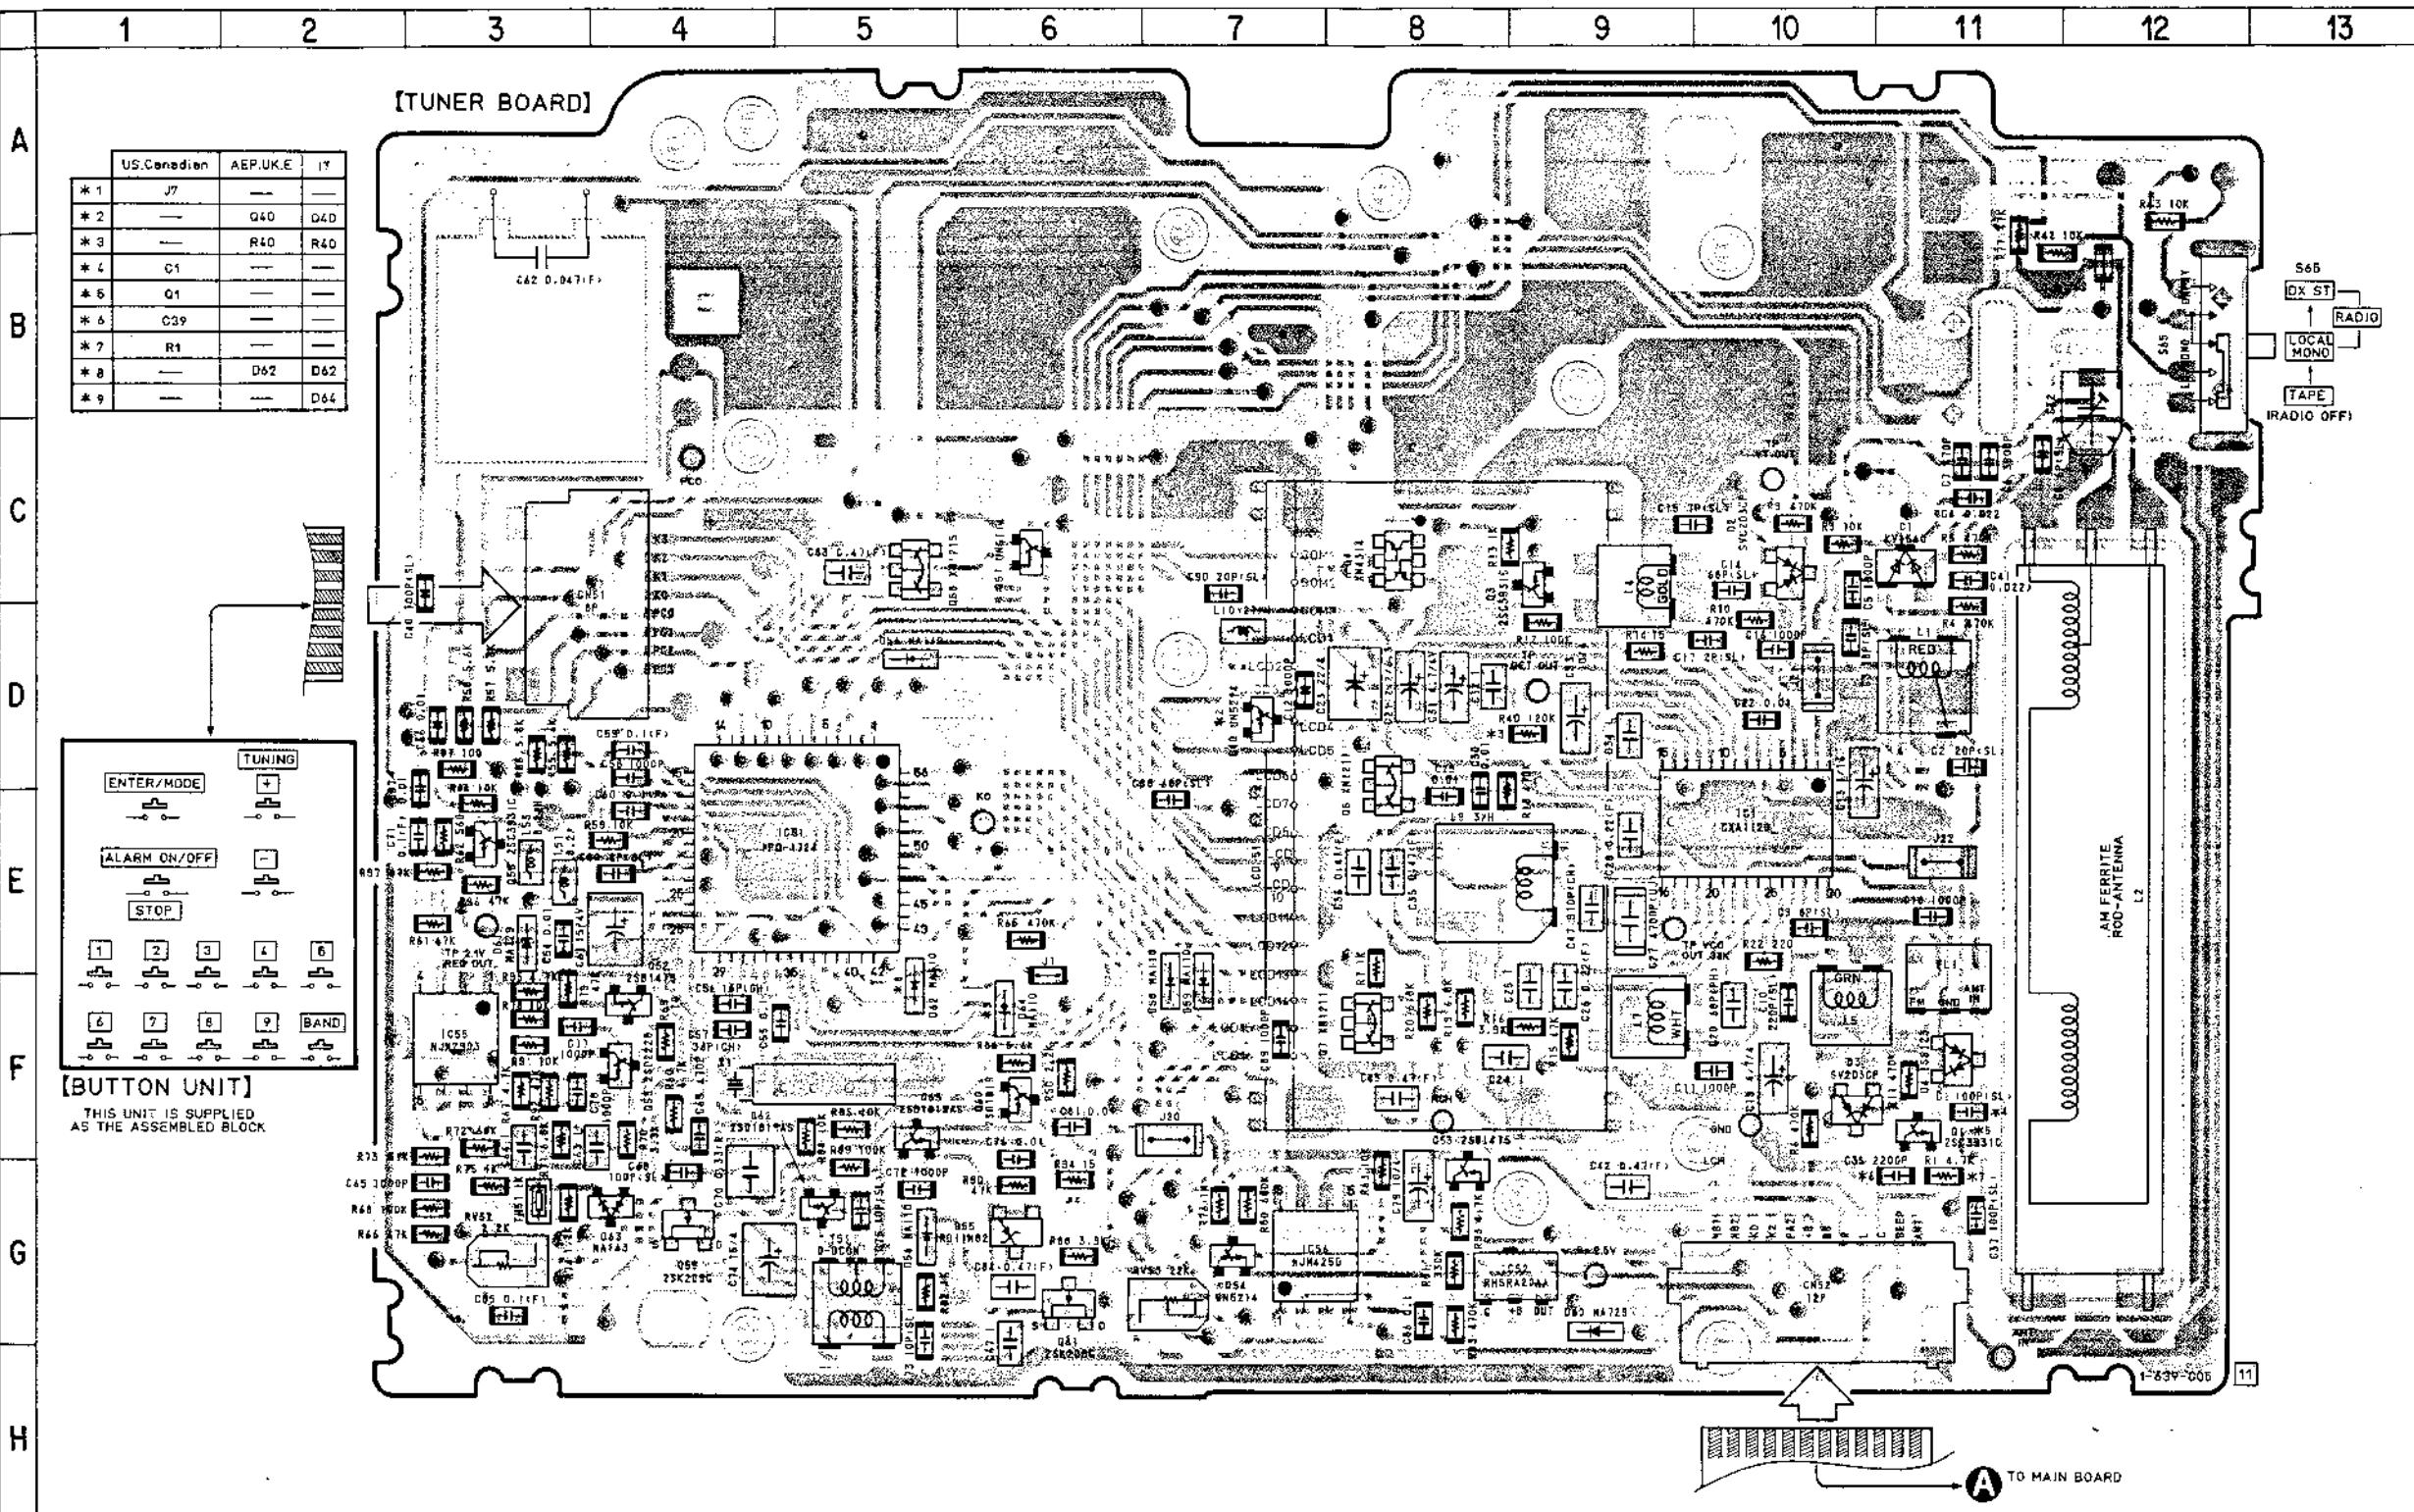


Semiconductor Location

Ref. No.	Location
D1	C-11
D2	C-10
D3	F-10
D4	F-11
D54	G-5
D55	G-6
D56	D-5
D58	F-7
D59	F-7
D60	G-9
D61	E-3
D62	F-5
D63	G-4
D64	F-6
IC1	E-10
IC51	E-5
IC52	G-9
IC55	F-3
IC56	G-7
Q1	F-11
Q3	C-9
Q4	C-8
Q5	E-8
Q7	F-8
Q40	D-7
Q52	F-4
Q53	G-8
Q54	G-7
Q55	F-4
Q56	E-3
Q57	C-6
Q58	C-5
Q59	G-4
Q60	F-6
Q61	G-6
Q62	G-5
Q63	F-5

Note :

- parts extracted from the component side.
- part number indicated on the side.
- : Through hole.
- ◎ : Pattern on the side which is seen.
- ◎ : Pattern of the rear side.

Main Board Schematic Diagram

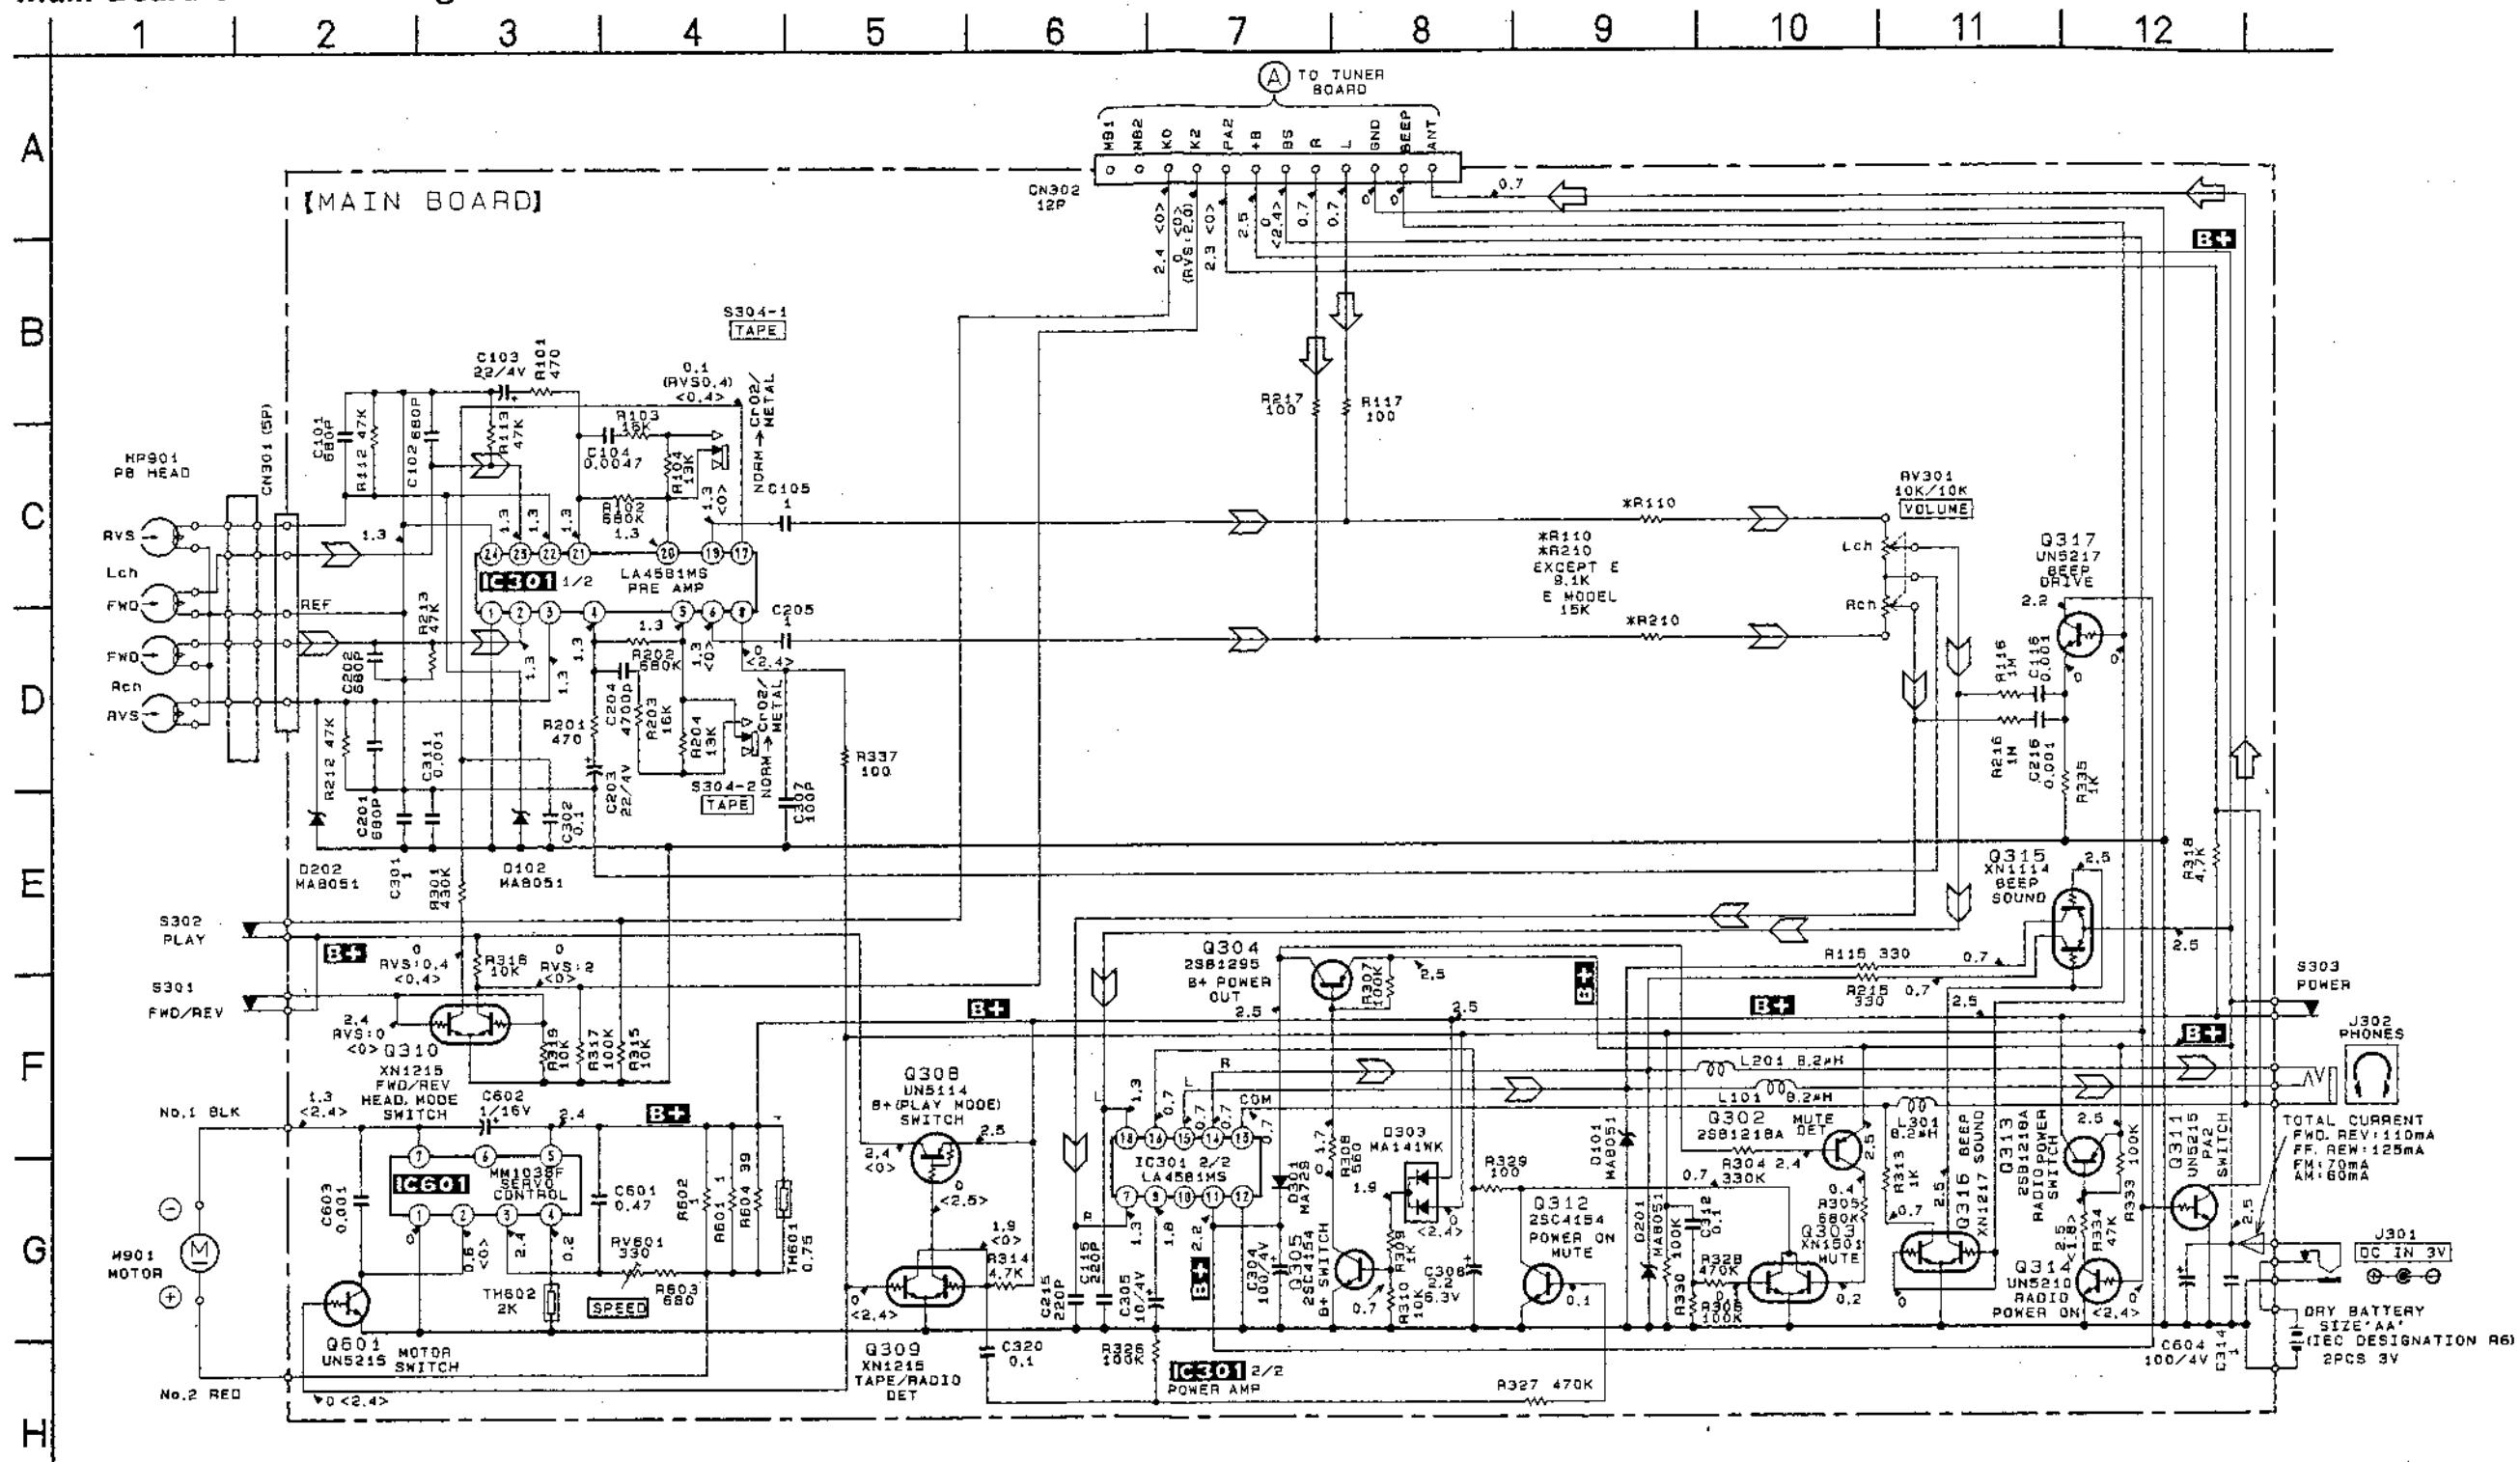


Note :

- All capacitors are in μ F unless otherwise noted. pF : $\mu\mu$ 50WV or less are not indicated except for electrolytics and tantalums.
 - All resistors are in Ω and $\frac{1}{2}$ W or less unless otherwise specified.
 - **B+** : B+ Line
 - **[]** : adjustment for repair.

- Total current is measured with no cassette installed.
 - Power voltage is dc 2.5V and fed with regulated dc power supply from external power voltage jack.
 - Voltage and waveforms are dc with respect to ground under no-signal (detuned) conditions.
 - no mark : FWD

- Voltages are taken with a VOM (Input impedance 10M Ω).
Voltage variations may be noted due to normal production tolerances.
 - Signal path.


Main Board Printed Wiring Boards


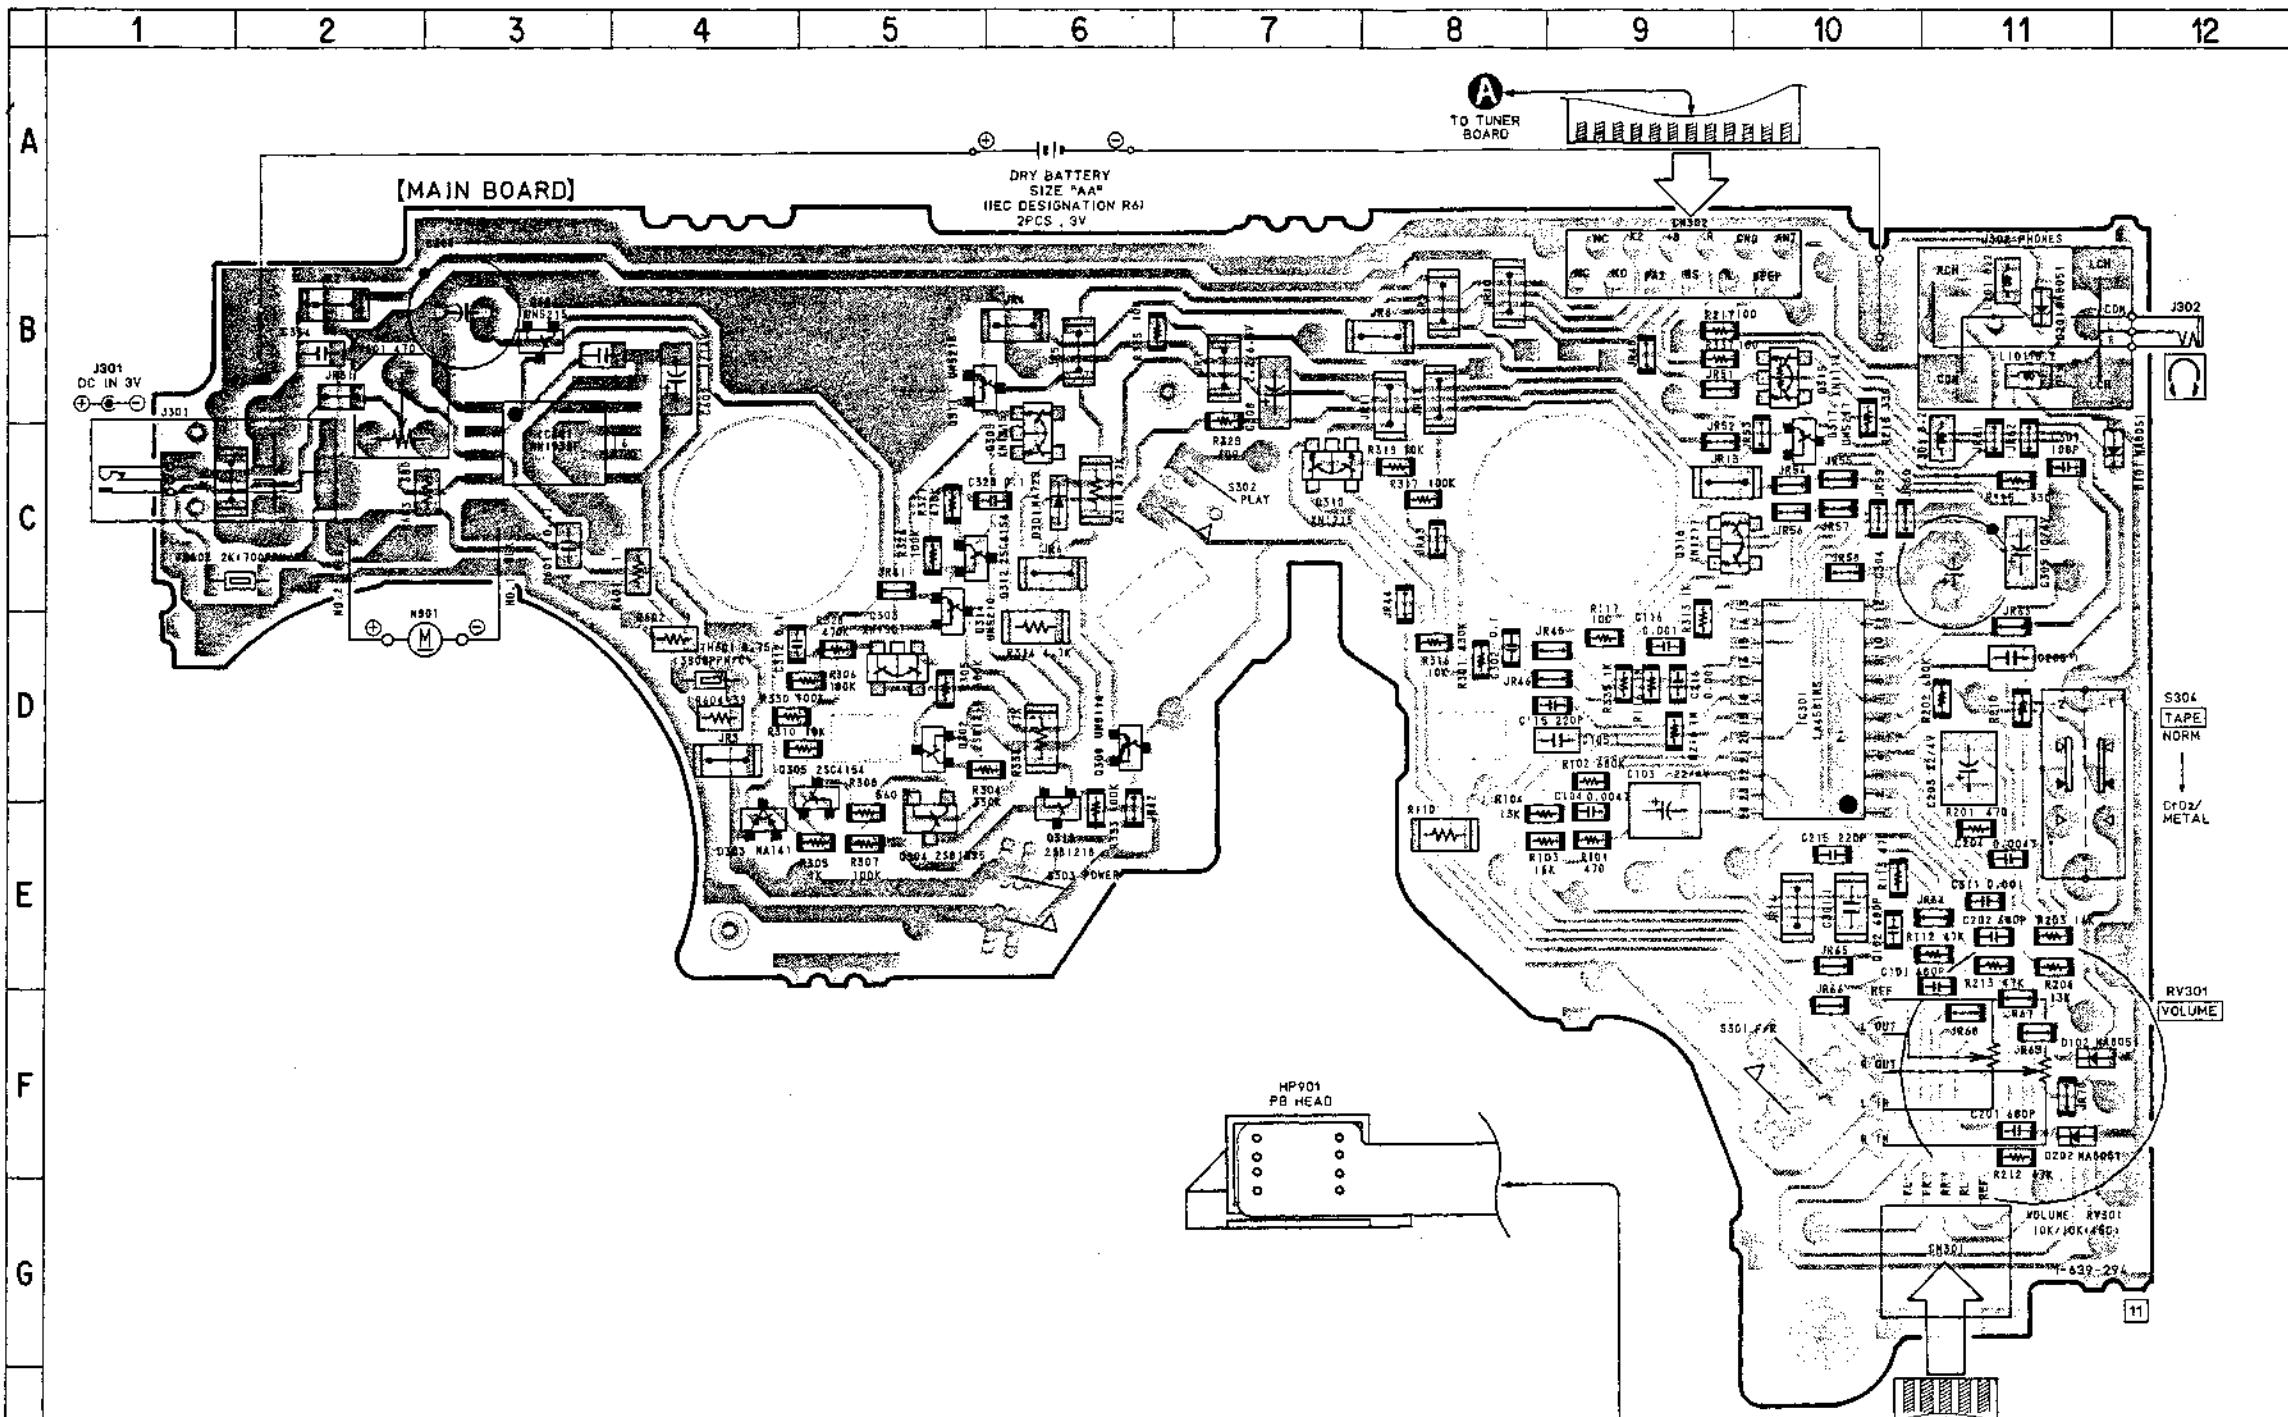


Semiconductor Location	
Ref. No.	Location
D101	C-12
D102	F-11
D201	B-11
D202	F-11
D301	C-6
D303	E-4
IC301	D-10
IC601	B-3
Q302	D-5
Q303	D-5
Q304	E-5
Q305	D-5
Q308	D-6
Q309	C-6
Q310	C-7
Q311	B-5
Q312	C-5
Q313	E-6
Q314	D-5
Q315	B-10
Q316	C-9
Q317	C-10
Q601	C-3

Semiconductor layouts


MA8051
MA729
MA110

XN4314

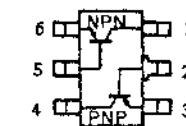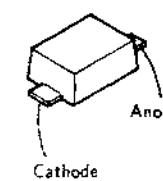

IC layouts

IC301 LA4581MS

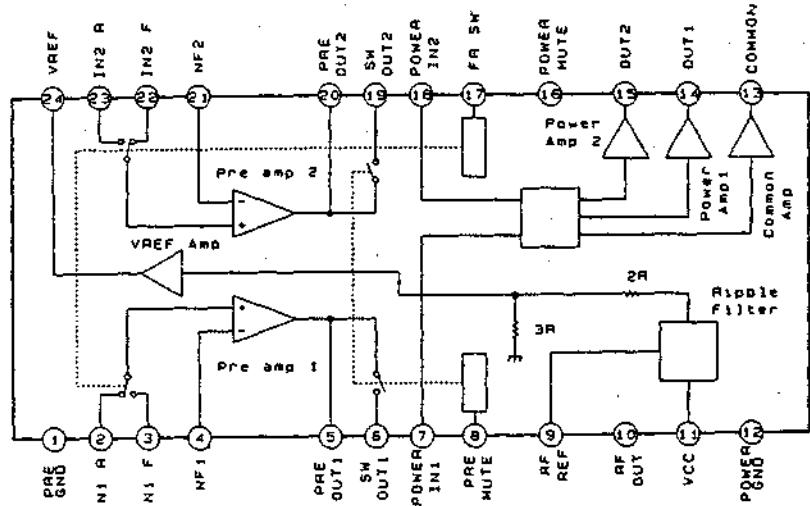

SPARE PARTS LIST

Exploded Views and Mechanical Parts

NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Color indication of Appearance Parts Example:



KNOB, BALANCE(WHITE)...(RED)

↑ ↑
Parts color Cabinet's color

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.

* IT : Italian model

CABINET

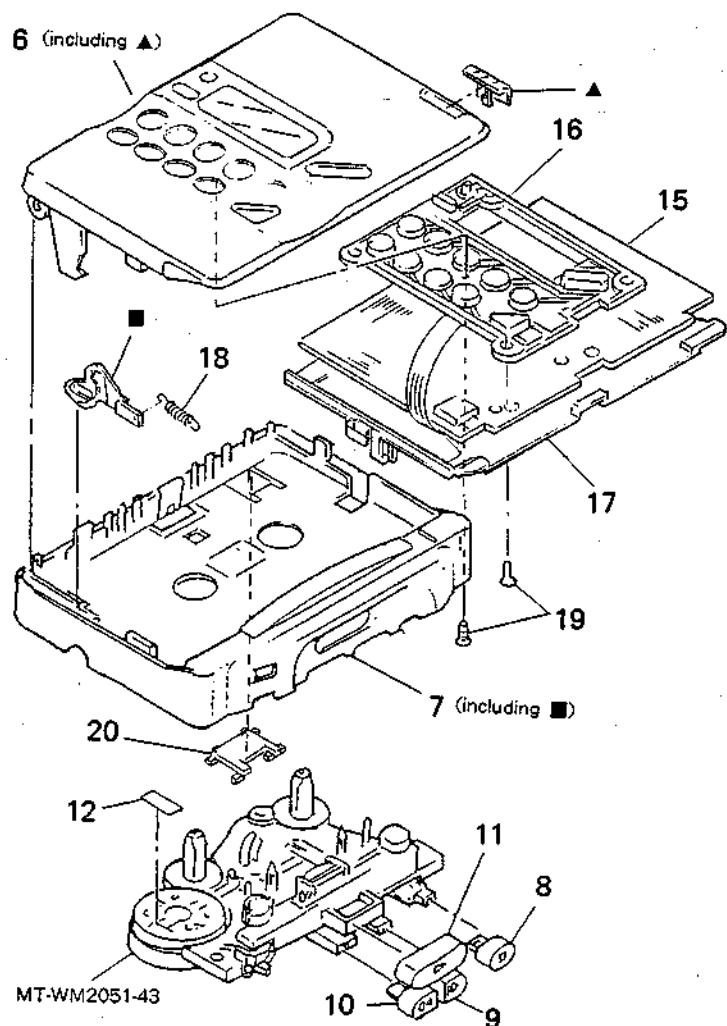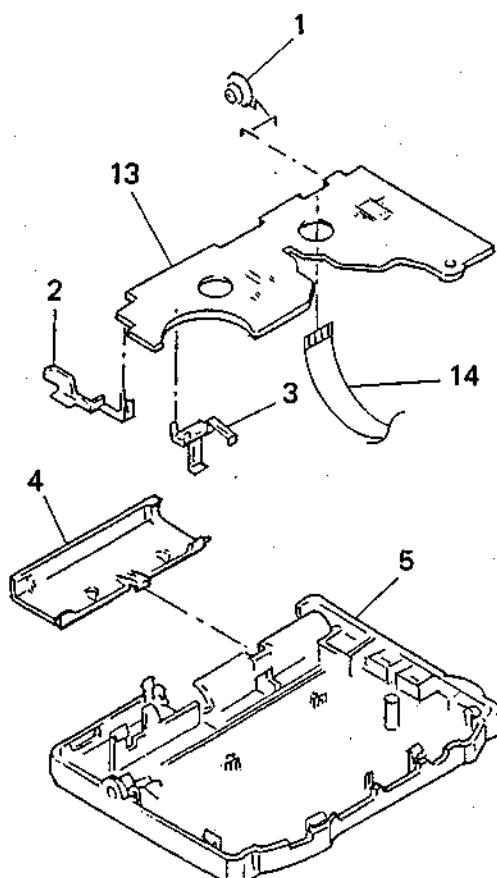


MT-WM2051-43

Ref. No.	Part No.	Description	Remark
1	3-358-149-01	SPRING	
2	3-358-121-01	TERMINAL (PLUS), BATTERY	
3	* 3-367-320-01	SPRING, MOTOR GROUND	
4	3-358-374-01	LID, BATTERY CASE	
5	X-3363-018-1	CABINET (REAR) ASSY (CF-2)	
6	X-3363-016-1	LID ASSY (CF-1), CASSETTE (US, CND)	
6	X-3363-017-1	LID ASSY (CF-1), CASSETTE (AEP, UK, E, IT)	
7	X-3363-015-1	CABINET (FRONT) ASSY (CF-1)	
8	3-358-115-11	BUTTON (STOP)	
9	3-366-504-21	BUTTON (FF)	
10	3-366-505-21	BUTTON (REW)	
11	3-358-114-11	BUTTON (PLAY)	
12	3-831-441-11	CUSHION (B)	
13	A-3016-077-A	MAIN BOARD, COMPLETE (US, CND, AEP, UK, IT)	
13	A-3016-080-A	MAIN BOARD, COMPLETE (E)	
14	1-639-759-11	CONNECTION FLEXIBLE BOARD	

Ref. No.	Part No.	Description	Remark
15	A-3016-078-A	TUNER BOARD, COMPLETE (US, CND)	
15	A-3016-079-A	TUNER BOARD, COMPLETE (UK, E)	
15	A-3016-092-A	TUNER BOARD, COMPLETE (IT)	
15	A-3016-097-A	TUNER BOARD, COMPLETE (AEP)	
16	1-466-528-11	BUTTON UNIT	
17	3-368-377-01	COVER (L10)	
18	3-358-112-01	SPRING, TENSION	
19	3-318-382-41	SCREW (1.7X3.7), TAPPING	
20	3-368-373-01	RETAINER (FLEXIBLE)	

TAPE TRANSPORT (MT-WM2051-43)

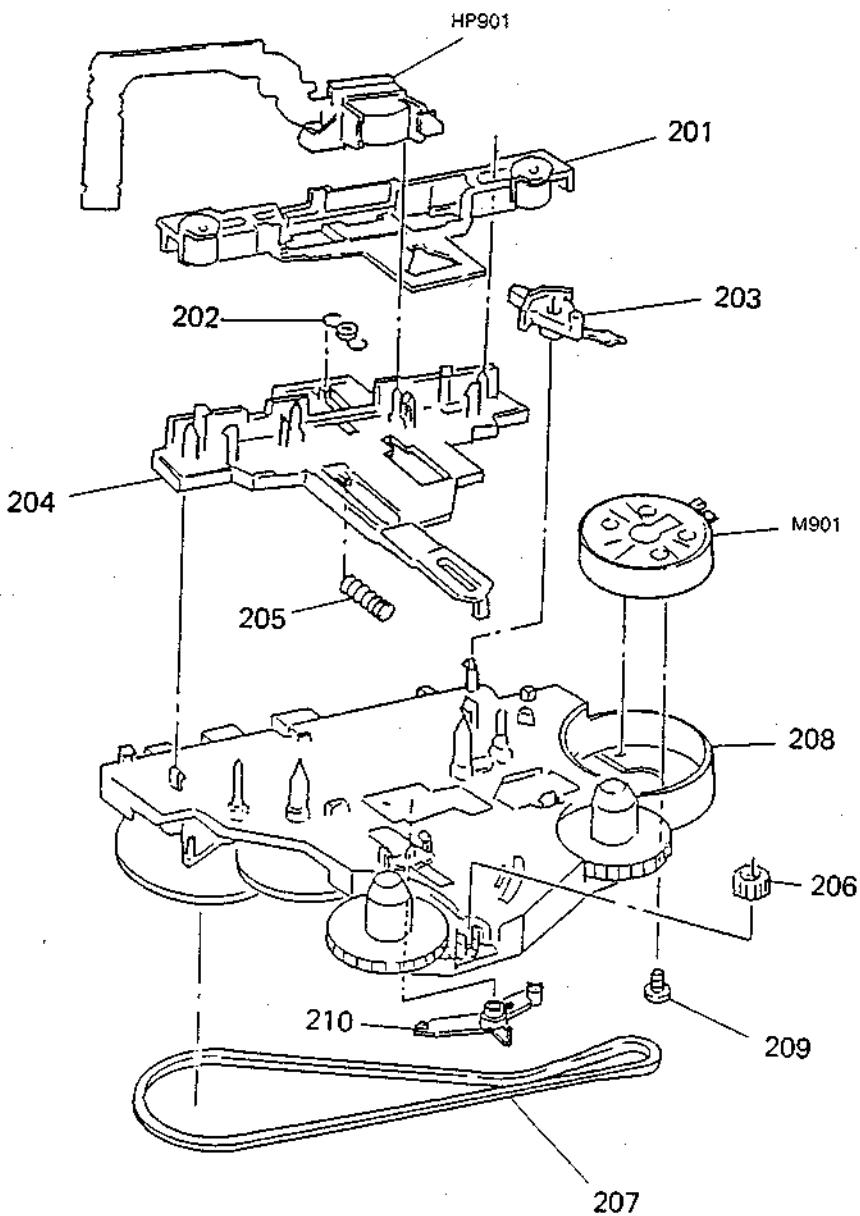

Ref. No.	Part No.	Description	Remark
201	X-3347-145-1	PINCH LEVER ASSY	
202	3-362-456-01	SPRING (PINCH)	
203	3-354-887-01	LEVER, D SELECTION	
204	3-354-890-01	LEVER, PLAY	
205	3-354-875-01	SPRING, COMPRESSION	
206	3-354-869-01	GEAR (REVERSE)	
207	3-354-868-01	BELT	
208	X-3358-122-2	CASSIS ASSY	
209	3-352-758-11	SCREW (M1.7X2), TOOTHED LOCK	
210	3-354-885-04	LEVER (A), DETECTION	

Ref. No.	Part No.	Description	Remark
HP901	1-543-705-11	HEAD, MAGNETIC (PLAYBACK)	
M901	1-541-722-11	MOTOR, DC	

MAIN

Electrical parts

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS

All resistors are in ohms

METAL : Metal-film resistor

METAL OXIDE : Metal Oxide-film resistor

F : nonflammable

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

• SEMICONDUCTORS

In each case, u: μ , for example:

uA...: μ A..., uPA...: μ PA...

uPB...: μ PB..., uPC...: μ PC...

uPD...: μ PD...

• CAPACITORS

uF: μ F

• COILS

uH: μ H

• IT : Italian model

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
	A-3016-077-A	MAIN BOARD, COMPLETE (US, CND, AEP, UK, IT)	C602	1-135-091-00	TANTALUM CHIP	1uF	20%	16V			
	A-3016-080-A	MAIN BOARD, COMPLETE (E)	C603	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V			

	3-358-121-01	TERMINAL (PLUS), BATTERY		< CONNECTOR >					< CONNECTOR >		
	3-358-149-01	SPRING	CN301	1-569-252-21	HOUSING, CONNECTOR 5P						
*	3-367-320-01	SPRING, MOTOR GROUND	CN302	1-568-794-11	SOCKET, CONNECTOR 12P						
< CAPACITOR >											
C101	1-162-963-11	CERAMIC CHIP	680PF	10%	50V	D101	8-719-420-90	DIODE	MA8051-M		
C102	1-162-963-11	CERAMIC CHIP	680PF	10%	50V	D102	8-719-420-90	DIODE	MA8051-M		
C103	1-135-202-21	TANTAL. CHIP	22uF	20%	4V	D201	8-719-420-90	DIODE	MA8051-M		
C104	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V	D202	8-719-420-90	DIODE	MA8051-M		
C105	1-164-234-11	CERAMIC CHIP	1uF		10V	D301	8-719-420-51	DIODE	MA729		
C115	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	D303	8-719-404-35	DIODE	MA141WK		
C116	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V						
C201	1-162-963-11	CERAMIC CHIP	680PF	10%	50V	< IC >					
C202	1-162-963-11	CERAMIC CHIP	680PF	10%	50V	IC301	8-759-823-31	IC	LA4581MS		
C203	1-135-202-21	TANTAL. CHIP	22uF	20%	4V	IC601	8-759-999-06	IC	MM1038F		
C204	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V						
C205	1-164-234-11	CERAMIC CHIP	1uF		10V	< JACK >					
C215	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	J301	1-568-228-11	JACK, EXTERNAL POWER (DC IN 3V)			
C216	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	J302	1-565-287-11	JACK (PHONES)			
C301	1-162-638-11	CERAMIC CHIP	1uF		16V						
C302	1-164-156-11	CERAMIC CHIP	0.1uF		25V	< RESISTOR >					
C304	1-124-433-00	ELECT	100uF	20%	4V	JR1	1-216-296-00	METAL CHIP	0	5%	1/8W
C305	1-135-201-11	TANTALUM CHIP	10uF	20%	4V	JR2	1-216-296-00	METAL CHIP	0	5%	1/8W
C307	1-162-953-11	CERAMIC CHIP	100PF	5%	50V	JR3	1-216-296-00	METAL CHIP	0	5%	1/8W
C308	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V	JR4	1-216-296-00	METAL CHIP	0	5%	1/8W
C311	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	JR5	1-216-296-00	METAL CHIP	0	5%	1/8W
C312	1-164-156-11	CERAMIC CHIP	0.1uF		25V	JR6	1-216-296-00	METAL CHIP	0	5%	1/8W
C314	1-764-234-11	CERAMIC CHIP	1uF		10V	JR7	1-216-296-00	METAL CHIP	0	5%	1/8W
C320	1-164-156-11	CERAMIC CHIP	0.1uF		25V	JR8	1-216-296-00	METAL CHIP	0	5%	1/8W
C601	1-164-605-11	CERAMIC CHIP	0.47uF		25V						

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
JR9	1-216-296-00	METAL CHIP	0 5% 1/8W	Q311	8-729-420-50	TRANSISTOR	UN5215
JR10	1-216-296-00	METAL CHIP	0 5% 1/8W	Q312	8-729-602-21	TRANSISTOR	2SC4154TP
JR11	1-216-296-00	METAL CHIP	0 5% 1/8W	Q313	8-729-402-55	TRANSISTOR	2SB1218A-R
JR12	1-216-296-00	METAL CHIP	0 5% 1/8W	Q314	8-729-421-77	TRANSISTOR	UN5210-R
JR13	1-216-296-00	METAL CHIP	0 5% 1/8W	Q315	8-729-422-41	TRANSISTOR	XN1114
JR14	1-216-296-00	METAL CHIP	0 5% 1/8W	Q316	8-729-422-45	TRANSISTOR	XN1217
JR31	1-216-295-00	METAL CHIP	0 5% 1/16W	Q317	8-729-422-48	TRANSISTOR	UN5217
JR41	1-216-864-11	METAL CHIP	0 5% 1/16W	Q601	8-729-420-50	TRANSISTOR	UN5215
JR42	1-216-864-11	METAL CHIP	0 5% 1/16W	< RESISTOR >			
JR43	1-216-864-11	METAL CHIP	0 5% 1/16W	R101	1-216-817-11	METAL CHIP	470 5% 1/16W
JR44	1-216-864-11	METAL CHIP	0 5% 1/16W	R102	1-216-855-11	METAL CHIP	680K 5% 1/16W
JR45	1-216-864-11	METAL CHIP	0 5% 1/16W	R103	1-218-291-11	METAL GLAZE	16K 5% 1/16W
JR46	1-216-864-11	METAL CHIP	0 5% 1/16W	R104	1-216-994-11	METAL GLAZE	13K 5% 1/16W
JR48	1-216-864-11	METAL CHIP	0 5% 1/16W	R110	1-216-221-00	METAL GLAZE	9.1K 5% 1/8W (US, CND, AEP, UK, IT)
JR51	1-216-864-11	METAL CHIP	0 5% 1/16W	R110	1-216-226-00	METAL GLAZE	15K 5% 1/8W (E)
JR52	1-216-864-11	METAL CHIP	0 5% 1/16W	R112	1-216-841-11	METAL CHIP	47K 5% 1/16W
JR53	1-216-864-11	METAL CHIP	0 5% 1/16W	R113	1-216-841-11	METAL CHIP	47K 5% 1/16W
JR54	1-216-864-11	METAL CHIP	0 5% 1/16W	R115	1-216-815-11	METAL CHIP	330 5% 1/16W
JR55	1-216-864-11	METAL CHIP	0 5% 1/16W	R116	1-216-857-11	METAL CHIP	1M 5% 1/16W
JR56	1-216-864-11	METAL CHIP	0 5% 1/16W	R117	1-216-809-11	METAL CHIP	100 5% 1/16W
JR57	1-216-864-11	METAL CHIP	0 5% 1/16W	R201	1-216-817-11	METAL CHIP	470 5% 1/16W
JR58	1-216-864-11	METAL CHIP	0 5% 1/16W	R202	1-216-855-11	METAL CHIP	680K 5% 1/16W
JR59	1-216-864-11	METAL CHIP	0 5% 1/16W	R203	1-218-291-11	METAL GLAZE	16K 5% 1/16W
JR60	1-216-864-11	METAL CHIP	0 5% 1/16W	R204	1-216-994-11	METAL GLAZE	13K 5% 1/16W
JR61	1-216-864-11	METAL CHIP	0 5% 1/16W	R210	1-218-345-11	METAL GLAZE	9.1K 5% 1/16W (US, CND, AEP, UK, IT)
JR62	1-216-864-11	METAL CHIP	0 5% 1/16W	R210	1-216-835-11	METAL CHIP	15K 5% 1/16W (E)
JR63	1-216-864-11	METAL CHIP	0 5% 1/16W	R212	1-216-841-11	METAL CHIP	47K 5% 1/16W
JR64	1-216-864-11	METAL CHIP	0 5% 1/16W	R213	1-216-841-11	METAL CHIP	47K 5% 1/16W
JR65	1-216-864-11	METAL CHIP	0 5% 1/16W	R215	1-216-815-11	METAL CHIP	330 5% 1/16W
JR66	1-216-864-11	METAL CHIP	0 5% 1/16W	R216	1-216-857-11	METAL CHIP	1M 5% 1/16W
JR67	1-216-864-11	METAL CHIP	0 5% 1/16W	R217	1-216-809-11	METAL CHIP	100 5% 1/16W
JR68	1-216-864-11	METAL CHIP	0 5% 1/16W	R301	1-218-448-11	METAL GLAZE	430K 5% 1/16W
JR69	1-216-864-11	METAL CHIP	0 5% 1/16W	R304	1-216-851-11	METAL CHIP	330K 5% 1/16W
JR70	1-216-864-11	METAL CHIP	0 5% 1/16W	R305	1-216-855-11	METAL CHIP	680K 5% 1/16W
< COIL >							
L101	1-412-005-11	INDUCTOR CHIP	8.2uH	R306	1-216-845-11	METAL CHIP	100K 5% 1/16W
L201	1-412-005-11	INDUCTOR CHIP	8.2uH	R307	1-216-845-11	METAL CHIP	100K 5% 1/16W
L301	1-412-005-11	INDUCTOR CHIP	8.2uH	R308	1-216-818-11	METAL CHIP	560 5% 1/16W
< TRANSISTOR >							
Q302	8-729-402-55	TRANSISTOR	2SB1218A-R	R309	1-216-821-11	METAL CHIP	1K 5% 1/16W
Q303	8-729-421-23	TRANSISTOR	XN1216	R310	1-216-833-11	METAL CHIP	10K 5% 1/16W
Q304	8-729-807-87	TRANSISTOR	2SB1295-UL6	R313	1-216-821-11	METAL CHIP	1K 5% 1/16W
Q305	8-729-602-21	TRANSISTOR	2SC4154	R314	1-216-214-00	METAL GLAZE	4.7K 5% 1/8W
Q308	8-729-402-96	TRANSISTOR	UN5114	R315	1-216-833-11	METAL CHIP	10K 5% 1/16W
Q309	8-729-403-17	TRANSISTOR	XN1215	R316	1-216-833-11	METAL CHIP	10K 5% 1/16W
Q310	8-729-403-17	TRANSISTOR	XN1215	R317	1-216-845-11	METAL CHIP	100K 5% 1/16W
				R318	1-216-214-00	METAL GLAZE	4.7K 5% 1/8W
				R319	1-216-833-11	METAL CHIP	10K 5% 1/16W
				R326	1-216-845-11	METAL CHIP	100K 5% 1/16W

MAIN TUNER CONNECTION FLEXIBLE

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R327	1-216-853-11	METAL CHIP	470K 5% 1/16W	C8	1-162-937-11	CERAMIC CHIP	6PF 0.5PF 50V
R328	1-216-853-11	METAL CHIP	470K 5% 1/16W	C9	1-162-939-11	CERAMIC CHIP	8PF 0.5PF 50V
R329	1-216-809-11	METAL CHIP	100 5% 1/16W	C10	1-162-957-11	CERAMIC CHIP	220PF 5% 50V
R330	1-216-845-11	METAL CHIP	100K 5% 1/16W	C11	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
R333	1-216-845-11	METAL CHIP	100K 5% 1/16W	C12	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
R334	1-216-238-00	METAL GLAZE	47K 5% 1/8W	C13	1-135-091-00	TANTALUM CHIP	1uF 20% 16V
R335	1-216-821-11	METAL CHIP	1K 5% 1/16W	C14	1-162-951-11	CERAMIC CHIP	68PF 5% 50V
R337	1-216-809-11	METAL CHIP	100 5% 1/16W	C15	1-162-938-11	CERAMIC CHIP	7PF 0.5PF 50V
R601	1-217-671-11	METAL CHIP	1 5% 1/10W	C16	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
R602	1-217-671-11	METAL CHIP	1 5% 1/10W	C17	1-162-932-11	CERAMIC CHIP	2PF 0.25PF 50V
R603	1-216-045-00	METAL CHIP	680 5% 1/10W	C18	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
R604	1-216-015-00	METAL CHIP	39 5% 1/10W	C19	1-135-151-21	TANTALUM CHIP	4.7uF 20% 4V
			< VARIABLE RESISTOR >	C20	1-163-113-00	CERAMIC CHIP	68PF 5% 50V
RV301	1-238-072-11	RES. VAR. CARBON 10K/10K (VOLUME)		C21	1-135-149-21	TANTALUM CHIP	2.2uF 20% 10V
RV601	1-241-126-11	RES. ADJ. CARBON 330 (SPEED)		C22	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
			< SWITCH >	C23	1-135-202-21	TANTAL. CHIP	22uF 20% 4V
S301	1-571-986-31	SWITCH. LEAF (FWD/REV)		C24	1-164-234-11	CERAMIC CHIP	1uF 10V
S302	1-570-395-11	SWITCH. LEAF (PLAY)		C25	1-164-234-11	CERAMIC CHIP	1uF 10V
S303	1-571-986-11	SWITCH. LEAF (POWER)		C26	1-164-222-11	CERAMIC CHIP	0.22uF 25V
S304	1-571-478-11	SWITCH. SLIDE (TAPE)		C27	1-162-625-11	CERAMIC CHIP	0.0047uF 5% 50V
			< THERMISTOR >	C28	1-164-222-11	CERAMIC CHIP	0.22uF 25V
TH601	1-809-003-11	THERMISTOR. POSITIVE (0.75)		C29	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
TH602	1-809-275-21	THERMISTOR. POSITIVE (2K)		C30	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V

A-3016-078-A TUNER BOARD, COMPLETE (US, CND)							
A-3016-079-A TUNER BOARD, COMPLETE (UK, E)							
A-3016-092-A TUNER BOARD, COMPLETE (IT)							
A-3016-097-A TUNER BOARD, COMPLETE (AEP)							

1-639-759-11 CONNECTION FLEXIBLE BOARD							

1-535-898-11 CONDUCTIVE BOARD, CONNECTION							
* 3-368-371-01 CASE, SHIELD							
< CAPACITOR >							
C1	1-162-953-11	CERAMIC CHIP	100PF 5% 50V (US, CND)	C56	1-164-237-11	CERAMIC CHIP	16PF 10% 50V
C2	1-164-113-11	CERAMIC CHIP	20PF 5% 50V	C57	1-164-238-11	CERAMIC CHIP	36PF 10% 50V
C3	1-162-944-11	CERAMIC CHIP	18PF 5% 50V	C58	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C4	1-164-227-11	CERAMIC CHIP	0.022uF 10% 25V	C59	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C5	1-162-977-11	CERAMIC CHIP	0.0018uF 10% 50V	C60	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C6	1-164-173-11	CERAMIC CHIP	0.0039uF 10% 50V	C61	1-135-158-21	TANTALUM CHIP	15uF 20% 4V
C7	1-162-962-11	CERAMIC CHIP	470PF 10% 50V	C62	1-125-689-11	ELECT DIBBLE LAYER	0.047F 5V
				C63	1-164-234-11	CERAMIC CHIP	1uF 10V
				C64	1-164-234-11	CERAMIC CHIP	1uF 10V
				C65	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V

TUNER

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark
C66	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V			< FILTER >	
C67	1-164-234-11	CERAMIC CHIP	1uF		10V	FL1	1-239-108-11	FILTER, BAND PASS	
C68	1-162-953-11	CERAMIC CHIP	100PF	5%	50V			< IC >	
C69	1-162-962-11	CERAMIC CHIP	470PF	10%	50V	IC1	8-752-050-43	IC CXA1129N	
C70	1-164-006-11	CERAMIC CHIP	0.33uF	10%	16V	IC51	8-759-153-67	IC uPD1724-GB-558-1A7	
C71	1-164-156-11	CERAMIC CHIP	0.1uF		25V	IC52	8-759-518-40	IC RH5RA20AB	
C72	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	IC55	8-759-981-65	IC LM2903M	
C73	1-162-941-11	CERAMIC CHIP	10PF 0.5PF		50V	IC56	8-759-711-93	IC NJM4250M	
C74	1-135-158-21	TANTALUM CHIP	15uF	20%	4V			< RESISTOR >	
C75	1-162-941-11	CERAMIC CHIP	10PF 0.5PF		50V	J1	1-216-864-11	METAL CHIP	0 5% 1/16W
C76	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	J7	1-216-864-11	METAL CHIP	0 5% 1/16W (US, CND)
C77	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	J20	1-216-296-00	METAL CHIP	0 5% 1/8W
C78	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	J21	1-216-296-00	METAL CHIP	0 5% 1/8W
C79	1-135-201-11	TANTALUM CHIP	10uF	20%	4V	J22	1-216-296-00	METAL CHIP	0 5% 1/8W
C80	1-162-932-11	CERAMIC CHIP	2PF	0.25PF	50V			< COIL >	
C81	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	L1	1-460-165-21	COIL (WITH CORE)	
C83	1-164-005-11	CERAMIC CHIP	0.47uF		25V	L2	1-402-564-11	ANTENNA, FERRITE-ROD	
C84	1-164-005-11	CERAMIC CHIP	0.47uF		25V	L4	1-460-164-21	COIL (WITH CORE)	
C85	1-162-156-11	CERAMIC CHIP	0.1uF		25V	L5	1-460-171-11	COIL (WITH CORE) (FM ANT)	
C86	1-164-156-11	CERAMIC CHIP	0.1uF		25V	L7	1-460-163-21	COIL (WITH CORE)	
C87	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	L9	1-412-763-21	COIL 3mH (FM MPX VCO)	
C88	1-162-951-11	CERAMIC CHIP	68PF	5%	50V	L10	1-412-011-31	INDUCTOR CHIP 27uH	
C89	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	L51	1-412-005-11	INDUCTOR CHIP 8.2uH	
C90	1-164-113-11	CERAMIC CHIP	20PF	5%	50V	L53	1-412-005-11	INDUCTOR CHIP 8.2uH	
< CONNECTOR >									
CN51	1-568-558-21	HOUSING, CONNECTOR (FPC)	8P						
CN52	* 1-573-536-11	HOUSING, CONNECTOR 12P							
< TRIMMER >									
CT2	1-141-327-11	CAP, VAR. TRIMMER (CHIP TYPE)				LCD51	1-809-341-11	DISPLAY PANEL, LIQUID CRYSTAL	
		(AM TRACKING)							
< DIODE >									
D1	8-719-951-05	DIODE	KV1560						
D2	8-719-939-02	DIODE	SVC203CP			Q1	8-729-423-52	TRANSISTOR	2SC3931-C (US, CND)
D3	8-719-939-02	DIODE	SVC203CP			Q3	8-729-423-52	TRANSISTOR	2SC3931-C
D4	8-719-800-76	DIODE	ISS226			Q4	8-729-429-72	TRANSISTOR	XN4314-TX
D54	8-719-404-46	DIODE	MA110			Q5	8-729-429-92	TRANSISTOR	XN1211
						Q7	8-729-429-92	TRANSISTOR	XN1211
D55	8-719-106-62	DIODE	RD11M-B2			Q40	8-729-421-26	TRANSISTOR	UN5216QRS (AEP, UK, E, IT)
D56	8-719-404-46	DIODE	MA110			Q52	8-729-145-04	TRANSISTOR	2SB1475-B43
D58	8-719-404-46	DIODE	MA110			Q53	8-729-145-04	TRANSISTOR	2SB1475-B43
D59	8-719-404-46	DIODE	MA110			Q54	8-729-421-26	TRANSISTOR	UN5216QRS
D60	8-719-420-51	DIODE	MA729-TX			Q55	8-729-144-16	TRANSISTOR	2SD222844D45
						Q56	8-729-423-52	TRANSISTOR	2SC3931-C
D61	8-719-420-51	DIODE	MA729-TX			Q57	8-729-402-96	TRANSISTOR	UN5114
D62	8-719-404-46	DIODE	MA110 (AEP, UK, E, IT)			Q58	8-729-403-17	TRANSISTOR	XN1215
D63	8-719-404-52	DIODE	MA143-TW			Q59	8-729-220-93	TRANSISTOR	2SK209-G
D64	8-719-404-46	DIODE	MA110-TX (IT)			Q60	8-729-420-27	TRANSISTOR	2SD1819AQRS

TUNER

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark				
Q61	8-729-220-93	TRANSISTOR	2SK209-G	R77	1-216-841-11	METAL CHIP	47K 5% 1/16W				
Q62	8-729-420-27	TRANSISTOR	2SD1819AGRS	R78	1-216-833-11	METAL CHIP	10K 5% 1/16W				
Q63	8-729-420-27	TRANSISTOR	2SD1819AGRS	R79	1-216-841-11	METAL CHIP	47K 5% 1/16W				
< RESISTOR >											
R1	1-216-829-11	METAL CHIP	4.7K 5% 1/16W (US, CND)	R82	1-216-821-11	METAL CHIP	1K 5% 1/16W				
R3	1-216-833-11	METAL CHIP	10K 5% 1/16W	R83	1-216-853-11	METAL CHIP	470K 5% 1/16W				
R4	1-216-853-11	METAL CHIP	470K 5% 1/16W	R84	1-216-833-11	METAL CHIP	10K 5% 1/16W				
R5	1-216-853-11	METAL CHIP	470K 5% 1/16W	R85	1-216-833-11	METAL CHIP	10K 5% 1/16W				
R6	1-216-853-11	METAL CHIP	470K 5% 1/16W	R86	1-216-830-11	METAL CHIP	5.6K 5% 1/16W				
R7	1-216-821-11	METAL CHIP	1K 5% 1/16W	R87	1-216-809-11	METAL CHIP	100 5% 1/16W				
R9	1-216-853-11	METAL CHIP	470K 5% 1/16W	R88	1-216-828-11	METAL CHIP	3.9K 5% 1/16W				
R10	1-216-853-11	METAL CHIP	470K 5% 1/16W	R89	1-216-845-11	METAL CHIP	100K 5% 1/16W				
R11	1-216-853-11	METAL CHIP	470K 5% 1/16W	R90	1-216-841-11	METAL CHIP	47K 5% 1/16W				
R12	1-216-845-11	METAL CHIP	100K 5% 1/16W	R91	1-216-833-11	METAL CHIP	10K 5% 1/16W				
R13	1-216-821-11	METAL CHIP	1K 5% 1/16W	R92	1-216-841-11	METAL CHIP	47K 5% 1/16W				
R14	1-216-799-11	METAL CHIP	15 5% 1/16W	R93	1-216-829-11	METAL CHIP	4.7K 5% 1/16W				
R15	1-216-841-11	METAL CHIP	47K 5% 1/16W	R94	1-216-799-11	METAL CHIP	15 5% 1/16W				
R16	1-216-828-11	METAL CHIP	3.9K 5% 1/16W	R95	1-216-829-11	METAL CHIP	4.7K 5% 1/16W				
R18	1-216-853-11	METAL CHIP	470K 5% 1/16W	R96	1-216-841-11	METAL CHIP	47K 5% 1/16W				
R19	1-216-831-11	METAL CHIP	6.8K 5% 1/16W	R97	1-216-841-11	METAL CHIP	47K 5% 1/16W				
R20	1-216-831-11	METAL CHIP	6.8K 5% 1/16W	< VARIABLE RESISTOR >							
R22	1-216-813-11	METAL CHIP	220 5% 1/16W	RV52	1-238-662-11	RES, ADJ, CERMET 2.2K (AM CAL)					
R40	1-216-846-11	METAL CHIP	120K 5% 1/16W	RV53	1-238-665-11	RES, ADJ, CERMET 22K (2. IV REG)					
		(AEP, UK, E, IT)		< SWITCH >							
R42	1-216-833-11	METAL CHIP	10K 5% 1/16W	S65	1-571-506-41	SWITCH, SLIDE (TAPE)					
R43	1-216-833-11	METAL CHIP	10K 5% 1/16W	< TRANSFORMER >							
R50	1-216-825-11	METAL CHIP	2.2K 5% 1/16W	T51	1-449-021-21	TRANSFORMER, DC-DC CONVERTER					
R55	1-216-830-11	METAL CHIP	5.6K 5% 1/16W	< THERMISTOR >							
R56	1-216-830-11	METAL CHIP	5.6K 5% 1/16W	TH51	1-809-438-11	THERMISTER (CHIP) 1K					
R57	1-216-830-11	METAL CHIP	5.6K 5% 1/16W	< CRYSTAL >							
R58	1-216-830-11	METAL CHIP	5.6K 5% 1/16W	X1	1-577-262-11	VIBRATOR, CRYSTAL (75kHz)					
R59	1-216-833-11	METAL CHIP	10K 5% 1/16W	*****							
R60	1-216-829-11	METAL CHIP	4.7K 5% 1/16W	MISCELLANEOUS							
R61	1-216-841-11	METAL CHIP	47K 5% 1/16W	*****							
R62	1-216-818-11	METAL CHIP	560 5% 1/16W	16	1-466-528-11	BUTTON UNIT					
R63	1-216-833-11	METAL CHIP	10K 5% 1/16W	HP901	1-543-705-11	HEAD, MAGNETIC (PLAYBACK)					
R64	1-216-833-11	METAL CHIP	10K 5% 1/16W	M901	1-541-722-11	MOTOR, DC					
R65	1-216-853-11	METAL CHIP	470K 5% 1/16W	*****							
R66	1-216-841-11	METAL CHIP	47K 5% 1/16W								
R67	1-216-829-11	METAL CHIP	4.7K 5% 1/16W								
R68	1-216-845-11	METAL CHIP	100K 5% 1/16W								
R69	1-216-797-11	METAL CHIP	10 5% 1/16W								
R70	1-216-827-11	METAL CHIP	3.3K 5% 1/16W								
R71	1-216-831-11	METAL CHIP	6.8K 5% 1/16W								
R72	1-216-843-11	METAL CHIP	68K 5% 1/16W								
R73	1-218-331-11	METAL GLAZE	51K 5% 1/16W								
R74	1-216-822-11	METAL CHIP	1.2K 5% 1/16W								
R75	1-216-821-11	METAL CHIP	1K 5% 1/16W								
R76	1-216-857-11	METAL CHIP	1M 5% 1/16W								

Ref. No.	Part No.	Description	Remark
		ACCESSORY & PACKING MATERIAL	
		*****	*****
	3-346-518-01	CLIP, BELT	
*	3-365-541-01	CUSHION (UPPER) (CND, AEP, UK, E, IT)	
*	3-365-542-01	INDIVIDUAL CARTON (AEP, UK, IT)	
*	3-365-548-01	INDIVIDUAL CARTON (CND)	
*	3-365-549-01	INDIVIDUAL CARTON (E)	
*	3-365-550-01	CUSHION (UPPER) (US)	
*	3-365-551-01	CARDBOARD (US)	
*	3-365-553-01	CUSHION (LOWER) (CND, AEP, UK, E, IT)	
	3-753-285-11	MANUAL, INSTRUCTION (CND, E) (ENGLISH, FRENCH, SPANISH)	
	3-753-285-21	MANUAL, INSTRUCTION (ENGLISH) (US)	
	3-753-285-41	MANUAL, INSTRUCTION (AEP, UK, IT) (ENGLISH, FRENCH, SPANISH, PORTUGUESE)	
	3-753-285-51	MANUAL, INSTRUCTION (AEP, IT) (GERMAN, DUTCH, SWEDISH, ITALIAN)	
	8-953-341-90	HEADPHONE MDR-14 SET (US, CND, AEP, UK, IT)	
	8-953-400-90	HEADPHONE MDR-E552 SET (E)	

ADJUSTMENTS

Mechanical measurements

Precaution

1. Clean the following parts with a denatured-alcohol-moistened swab:

playback head	pinch roller
capstan	rubber belts
2. Demagnetize the playback head with a head demagnetizer.
3. Do not use a magnetized screwdriver for the adjustments.
4. After the adjustments, apply suitable locking compound to the parts adjusted.
5. The adjustments should be performed with the rated power supply voltage (2.5V) unless otherwise noted.

The following measurements are necessary when tape running problems are occurred or repaired the tape transport mechanism.

Torque Measurement


Mode	Torque meter	Meter reading
FWD	CQ-102C	20 - 42 g-cm (0.28 - 0.58 oz-inch)
FWD Back Tension		less than 2 g-cm (less than 0.03 oz-inch)
REV	CQ-102RC	20 - 42 g-cm (0.28 - 0.58 oz-inch)
REV Back Tension		less than 2 g-cm (less than 0.03 oz-inch)
FF, REW	CQ-201B	more than 60 g-cm (more than 0.83 oz-inch)

Wow and Flutter Measurement

procedure :

Function : Tape

Mode : Forward

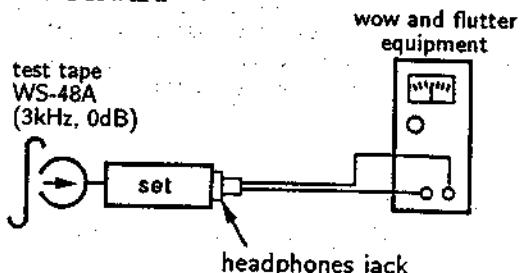

Playback the center part of the test tape (WS-48A) and measure the wow and flutter at the unweighted position of the wow and flutter equipment.

Specification : Less than 0.6% rms (JIS)

Mechanical adjustments


Precaution

- Supplied voltage : 2.5V
- Switch and control position
 - DOLBY NR switch : OFF
 - TAPE switch : NORM
 - MEGA BASS switch : NORM
 - VOLUME control : maximum

Tape section


Tape speed adjustment

Adjustment Location

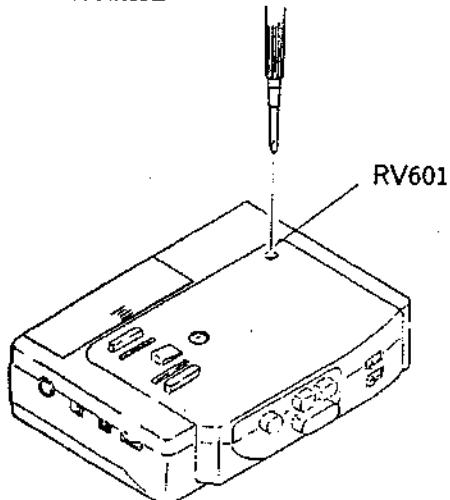

Procedure:

Function : TAPE

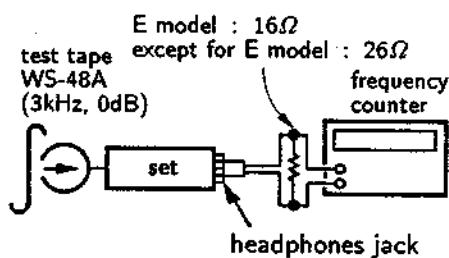

1. Playback the center part of test tape (WS-48A) in FWD mode first. Then, change to REV mode. Adjust RV601 so that the frequency counter reads $2970\text{Hz} \pm 15\text{Hz}$ in REV mode.
2. Change to FWD mode again. Confirm that the frequency counter reads $2975\text{Hz} \pm 35\text{Hz}$.

Mode	Reading on frequency counter
REV	$2970\text{Hz} \pm 15\text{Hz}$ (Adjust value)
FWD	$2975\text{Hz} \pm 35\text{Hz}$ (Confirm value)

3. Confirm that the tape speed difference between Top part of test tape in FWD mode and End part of test tape in REV mode is less than 1.5%.


Electrical alignments

Tuner Section

Adjustment Location

TUNER BOARD


— Component Side —

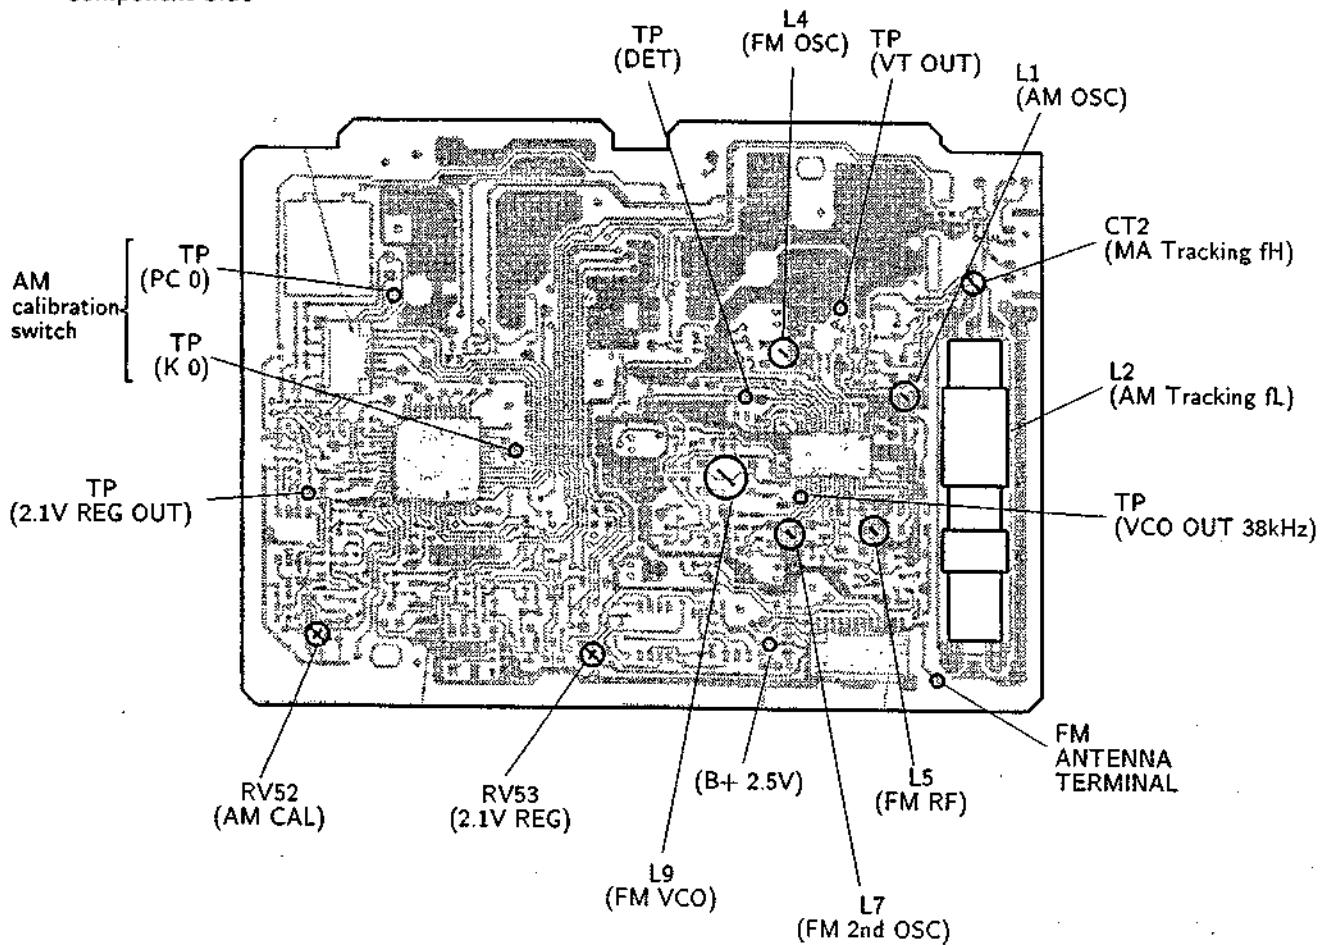

Power Supply Voltage Adjustment

Function switch : RADIO


Band switch : AM

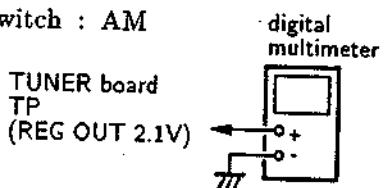

Destination	set frequency	Adjustment part	Reading on digital multimeter
US, Canadian	530kHz	RV53	$2.1 \pm 0.05V$
AEP, UK, E	531kHz		
IT	522kHz		

FM Tuning Voltage Adjustment

NOTE: Follow the adjustment procedure the numerical order given.

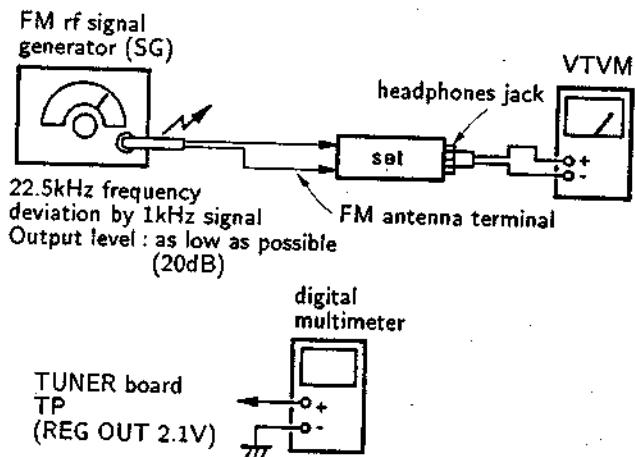

Function switch : RADIO



Band switch : FM

1. Tune the SG and SET frequency to 108MHz.
 2. Adjust L4 for 9 ± 0.05 volts on the digital multimeter.
 3. Adjust L7 to get the maximum reading of VTVM.
 4. Confirm that the digital multimeter of the tuning voltage is within $9 \pm 0.05V$. Otherwise, repeat the procedure in each adjustment several times since L4 affects L7 and L7 affects L4.
- This adjustment should end with the final adjustment of L7.
- And then, proceed to FM 2nd OSC adjustment.

SG and set frequency	Adjustment part	Reading on digital multimeter (Tuning voltage)	Reading on VTVM
108 MHz	L4	$9 \pm 0.05V$	—
	L7	—	maximum

FM 2nd OSC Adjustment

(This adjustment should be perform after the FM tuning voltage adjustment.)

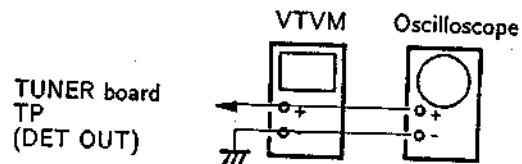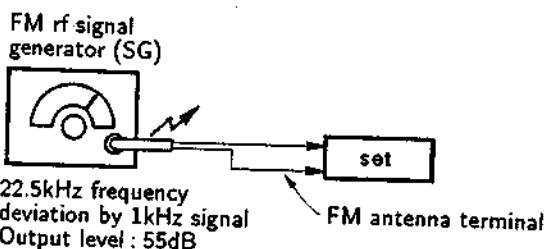

Function switch : RADIO

Band switch : FM


- Turn L7 slowly to confirm the DET OUT voltage within 0.61 ± 0.02 volts.

NOTE: L7 should be turn slowly. Otherwise, the waveform of DET OUT may be disappeared.

SG and set frequency	Adjustment part	Reading on VTVM
108 MHz	L7	$0.61 \pm 0.02V$

FM RF Adjustment

NOTE: Follow the adjustment procedure the numerical order given.

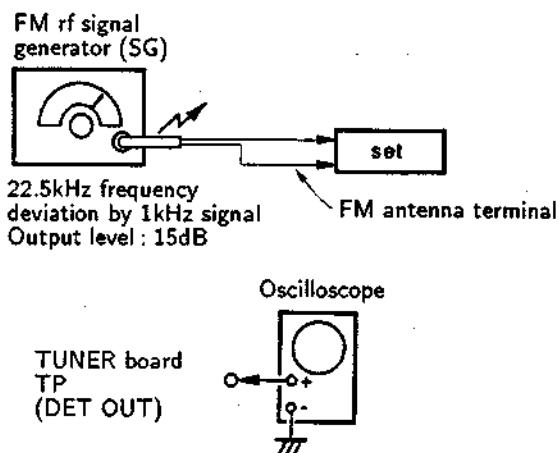

Function switch : RADIO

Band switch : FM

1. Tune the set frequency to 98MHz.
2. Tune the SG frequency to 98MHz and set the output level at 15dB.
3. Adjust L5 to get the maximum waveform of oscilloscope.
4. Check the waveform when the SG frequency tuned 98.04MHz and 97.96MHz.
It must be smaller waveform than the waveform at 98MHz.
5. If the waveform 98.04MHz and 97.96MHz does not becomes smaller than the waveform at 98 MHz. Repeat the procedure of FM 2nd OSC adjustment and FM RF adjustment.

SG and set frequency	Adjustment part	Reading on VTVM
98 MHz	L5	maximum waveform

FM VCO Adjustment


Function switch : RADIO (FM SENS : DX position)

... US, Canadian

RADIO (FM MODE : ST position)

... except US, Canadian

Band switch : FM

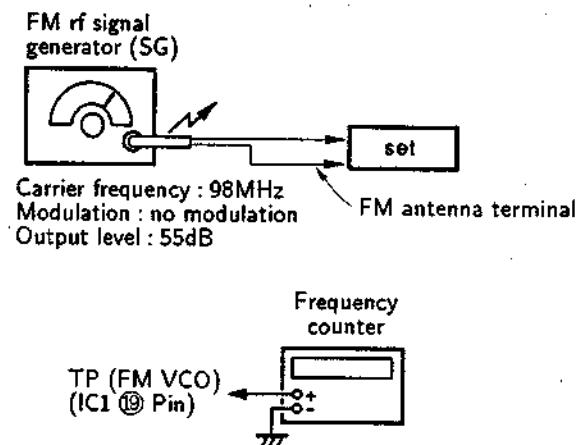


• Tune the set to 98MHz.

Adjustment part	Frequency counter
L9	38kHz ± 0.05kHz

AM Calibration Adjustment

NOTE: Follow the adjustment procedure the numerical order given.

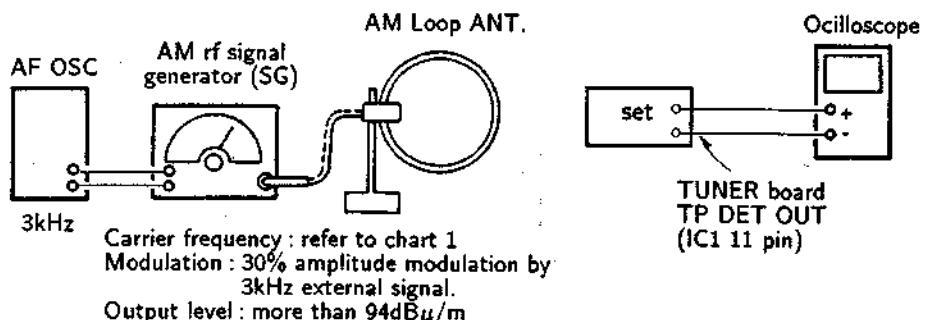

Function switch : RADIO

Band switch : AM

1. Tune the set frequency to "A" shown in chart 2.
2. Tune the SG frequency to "A" shown in chart 2.
3. Make a short circuit between TP (PC0) and TP (K0) on tuner board with light touch. And then, the AM calibration switch automatically change to the AM calibration mode.
4. Adjust the RV52 for a minimum waveform of oscilloscope.
5. Check the waveform when the SG frequency tuned A + 1kHz and A - 1kHz.
It should be perform large the waveform than the waveform of column 4.
6. Make a short circuit between TP (PC0) and TP (K0) again in order to cancel the AM calibration mode.

NOTE :


- The input level of the bar antenna should be 94 dB μ /m.
- AM calibration switch turns "ON" or "OFF" automatically by shorting the circuit between TP (PC0) and TP (K0).

The set frequency can not change at AM calibration mode.

Destination	SG and set frequency	Adjustment part	Waveform of oscilloscope
US, Canadian	"A" 1000kHz	RV52	minimum
except US, Canadian	"A" 999kHz		

Chart 1

AM Tuning Voltage Adjustment

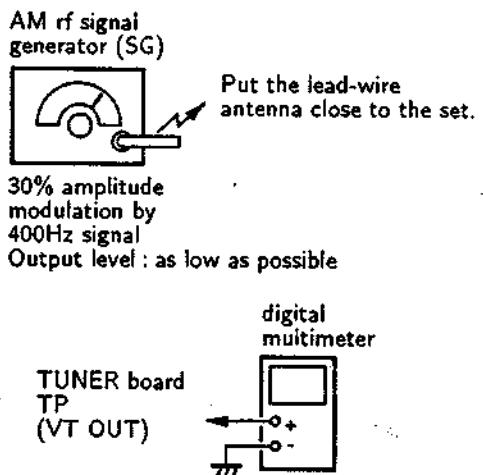


Function switch : RADIO

Band switch : AM

Destination	SG and set frequency	Adjustment part	Reading on digital multimeter
US, Canadian	530kHz	L1	1.1 ± 0.03V
AEP, UK, E	531kHz		
IT	522kHz		

AM Tracking Adjustment

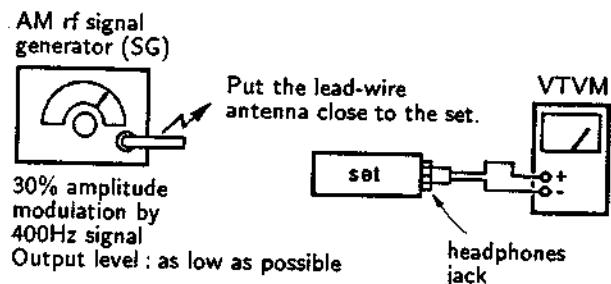

Function switch : RADIO

Band switch : AM

- Repeat the procedure in each adjustment several times since L2 affects CT2 and CT2 affects L2.
- This adjustment should end with the final adjustment of CT2.

NOTE:

Test equipment is settled as same as AM tuning voltage adjustment.

Destination	SG and set frequency	Adjustment part	Reading on VTVM,
US, Canadian	630kHz	L2	maximum
	1490kHz	CT2	
except US, Canadian	621kHz	L2	maximum
	1395kHz	CT2	

Specifications

Radio section

Frequency range	US, Canadian model :
	FM : 87.5 - 108MHz (100kHz step)
	AM : 530 - 1,710kHz (10kHz step)
AEP, UK, E model :	
	FM : 87.5 - 108MHz (50kHz step)
	AM : 531 - 1,602kHz (9kHz step)
IT model :	
	FM : 87.5 - 108MHz (50kHz step)
	AM : 522 - 1,611kHz (9kHz step)

Antennas	FM : Headphone cord antenna AM : Built-in ferrite bar antenna
----------	--

Tape player section

Frequency response	40Hz - 15kHz (Normal, CrO ₂ /METAL)
--------------------	--

Power output	US, Canadian model : 5mW + 5mW 26Ω at DC operation
	AEP, UK, IT model : 10mW + 10mW 26Ω at DC operation
E model :	5mW + 5mW 16Ω at DC operation
	Headphones (stereo minijack) : load impedance 8 - 300Ω

Power requirements	3V DC Two R6 (size AA) batteries DC IN 3V jack accepts: Optional Sony EBP-500B battery case for use with R20 (size D) batteries Optional Sony AC-D2L power adaptor for use on :
--------------------	---

US, Canadian model	120V AC, 60Hz
AEP, IT model	220V AC, 50Hz
UK model	240V AC, 50Hz
E model	120V AC, 60Hz or 220V AC, 50Hz

Optional Sony DCC-70 car battery cord for use with 12V car battery

Battery life

	Playback	Radio
Sony Alkaline AM3 (N)	11	32
Sony SUM-3 (NS)	4	11

(Approximate hours)

Dimensions Approx. 86.3×112×36.2mm (w/h/d)
(3¹/₂ × 4¹/₂ × 17/16 inches)
not incl. projecting parts and controls

Weight Approx. 250g (8.8oz)
incl. batteries and belt clip

Accessories supplied Belt clip (1)
E model : Stereo earphones (1)
except E model : Stereo headphones (1)


Design and specifications subject to change without notice.

Note

This appliance conforms with EEC Directive 87/308/EEC regarding interference suppression.

Note on stereo headphones (except E model)

The headphones cord is detachable. When you attach it, pay attention to the L and R marks. Connect the same marks.

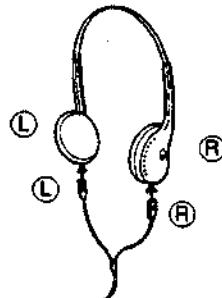

WM-FX40

SONY SERVICE MANUAL

US Model
Canadian Model
AEP Model
UK Model
E Model

CORRECTION-1

Correct your service manual as shown below.

 : indicates corrected portion.

Page	INCORRECT			CORRECT	
	No.	Part No.	Description	Part No.	Description
20				<u>3-368-372-01</u>	<u>KNOB (FUN)</u>

