


# WM-FX56

## SERVICE MANUAL

US Model  
Canadian Model  
AEP Model  
UK Model  
E Model  
Tourist Model

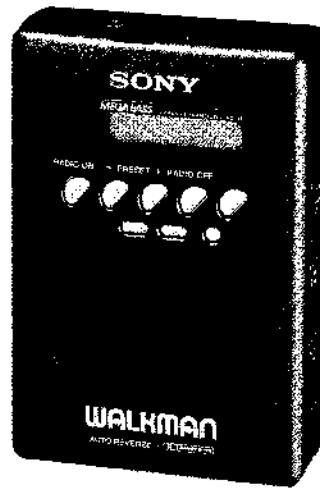

Model Name Using Similar Mechanism	NEW
Tape Transport Mechanism Type	MF-WMFX52-60

### SPECIFICATIONS

#### Radio section

Frequency range FM: 87.5 – 108.0 MHz (0.1 MHz step, for US and Canadian model)  
87.5 – 108.0 MHz (0.05 MHz step, for other countries)  
AM: 530 – 1,710 kHz (10 kHz step, for US and Canadian model)  
531 – 1,602 kHz (9 kHz step, for other countries)

Antenna FM: Headphones cord antenna  
AM: Built-in ferrite bar antenna

#### Tape player section and general

Frequency response (DOLBY NR\* off)  
40 – 15,000 Hz  
Output Headphones (∅/REMOTE jack)  
load impedance 8 – 300 Ω  
Power output 5 mW + 5 mW 16 Ω at DC operation  
Power requirements 3 V DC

Two size AA (R6) batteries  
DC IN 3V jack accepts:  
Sony AC-E30L AC power adaptor (not supplied)  
for use on:

US, Canadian	120 V AC 60 Hz
AEP, Germany, Italian	220 V AC 50 Hz
UK	240 V AC 50 Hz
Other countries	120 V AC 60 Hz or 220 V AC 50 Hz

Sony DCC-E130L car battery cord (not supplied) for use with 12 V car battery.

Dimensions Approx. 78 × 114.3 × 34.2 mm (3 1/8 × 4 1/2 × 1 3/8 in.) (w/h/d) incl. projecting parts and controls

Mass Approx. 230 g (8.2 oz.) incl. batteries, not incl. other accessories

#### Accessories supplied

Stereo headphones with remote controller (1)  
Ear adaptors (2) (except US model)  
Carrying case (1)

- Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation. "DOLBY" and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

Design and specifications subject to change without notice.

### Features

- The supplied remote controller fits comfortably in the palm of your hand and enables you to operate the unit with ease.
- The supplied headphones and another set of optional earphones/headphones can be used at the same time by connecting them to ∅/REMOTE and PHONES jacks respectively.
- The built-in synthesizer tuner can store up to 7 stations each on the FM and AM bands in memory.
- The LCD display and beep tone will let you know the current operational mode.
- The hold cover prevents any accidental operation of the unit.
- The AVLS (Automatic Volume Limiter System) function keeps the volume at a moderate level without degrading the sound quality.

#### Note on the AC power adaptor

Use only the AC-E30L AC power adaptor (not supplied). Do not use any other AC power adaptor.



Polarity of the plug

RADIO CASSETTE PLAYER  
**SONY**®




## TABLE OF CONTENTS


<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
Specifications	.....	1	<b>5.</b>	<b>DIAGRAMS</b>	
<b>1. GENERAL</b>			5-1.	IC Pin Description	10
Parts Identification	.....	2	5-2.	Block Diagram	13
<b>2. SERVICING NOTE</b>	.....	3	5-3.	Tuner Section Printed Wiring Boards and Schematic Diagram	15
<b>3. DISASSEMBLY</b>	.....	5	5-4.	Audio Section Printed Wiring Boards	20
<b>4. ADJUSTMENTS</b>			5-5.	Audio Section Schematic Diagram	25
4-1. Mechanical Adjustments	.....	7	5-6.	Remote Control Printed Wiring Board and Schematic Diagram	27
4-2. Electrical Adjustments	.....	7	<b>6.</b>	<b>EXPLODED VIEWS</b>	31
			<b>7.</b>	<b>ELECTRICAL PARTS LIST</b>	34

## SECTION 1 GENERAL


### Parts Identification

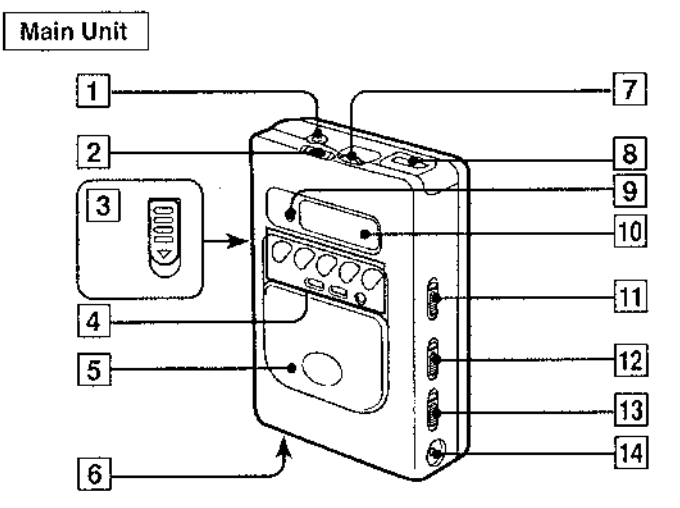

- 1 PHONES (headphones) jack
- 2 FM SENS (FM sensitivity) selector
- 3 OPEN switch
- 4 Tape/Radio operation buttons
- 5 Main unit: Hold cover  
Remote controller: HOLD switch
- 6 Battery compartment
- 7 Volume control  
Main unit: VOLUME control  
Remote controller: VOL control
- 8  $\square$ /REMOTE (headphones/remote controller) jack
- 9 BATT (battery) indicator
- 10 Display window
- 11 TAPE selector
- 12 MEGA BASS selector
- 13 DOLBY NR (Dolby Noise Reduction) switch
- 14 DC IN 3V (external power input) jack
- 15 AVLS (Automatic Volume Limiter System) selector
- 16 Nine pole plug

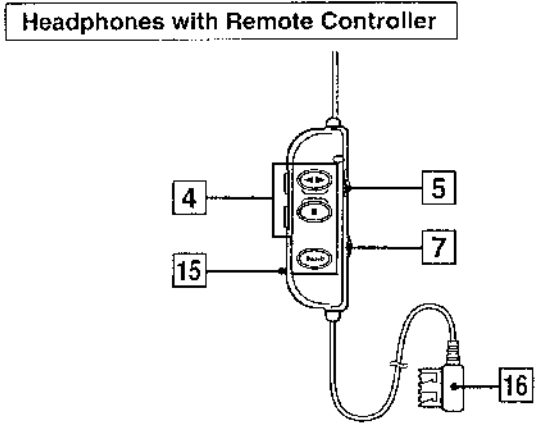

**Note on stereo headphones (US model only)**  
The cord of the supplied headphones is detachable. If the cord is detached, reconnect it as illustrated.

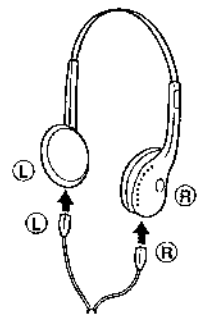

## SECTION 2 SERVICING NOTE

Photo sensor PH701 mounted on the main board is used to detect rotation of the reels. Because it is mounted on the main board, when the main board is being removed, rotation of the reels cannot be detected and the auto-off/tape-end detector circuit does not operate correctly.

Switch S702 (for N/R and FF/REW) is also mounted on the main board. Therefore, without the main board, the head cannot be placed in playback position, and power cannot be supplied to the circuitry of the playback system.

When the main board is being removed, follow the procedures below, in order to check operation of the mechanisms of the tape deck and to check voltages supplied to each circuit.

### NOTE:

Do not change the setting position of switch S702 when removing the main board. If it has been changed accidentally, or if the desired mode cannot be set with the switch, adjust the setting again after the main board is installed.


### FF/REW mode

- (1) Apply a square wave signal or a sine wave signal to photo sensor PH701. (See the figure on the right.)
- (2) Press the "■" switch for selecting STOP mode.
- (3) Press the FF or REW switch.
- (4) Remove the main board.


### PLAY mode

- (1) Apply a square wave signal or a sine wave signal to photo sensor PH701. (See the figure on the right.)
- (2) Press the "■" switch for selecting STOP mode.
- (3) Press the "◀▶" switch. With the main board installed, pressing the "◀▶" switch selects the FWD or REV mode alternatively.
- (4) Remove the main board.


AUDIO BOARD - Side A -

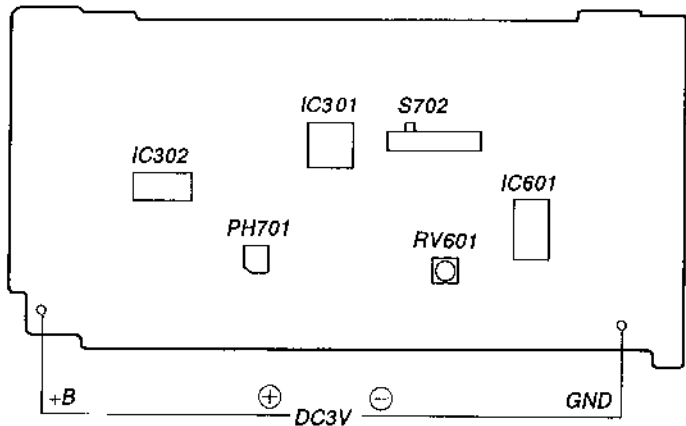

TUNER BOARD - Component Side -

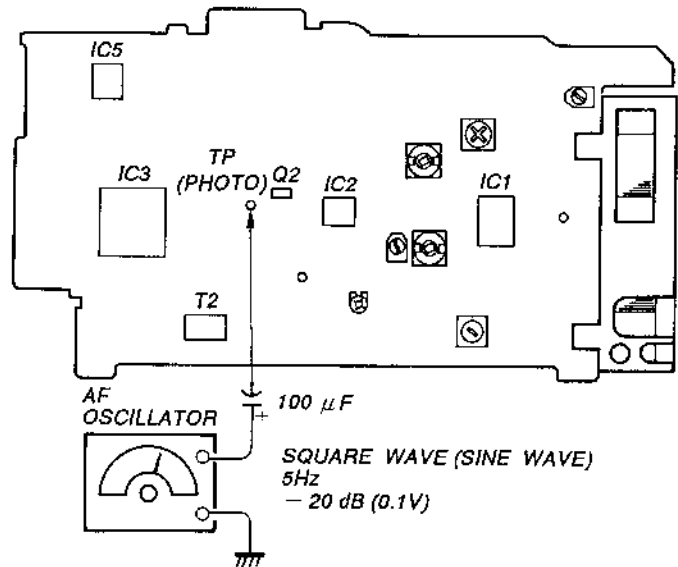


TUNER BOARD - Conductor Side -

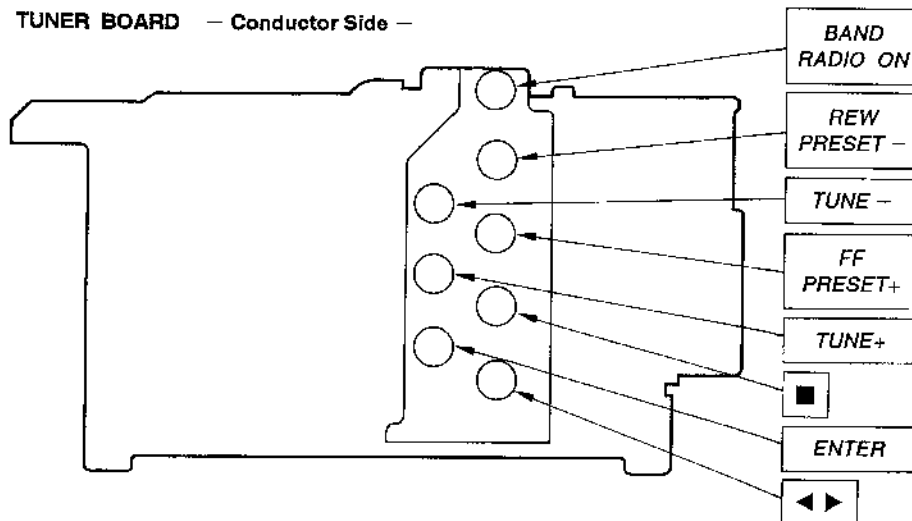


**Function of the lever and rotating mechanisms for mode selection**

- Mode selection starts when the motor rotates reversely.
- Change lever (B) moves to the left or right when driven with the gear (cam).
- The switch set position of switch S702 (4-position switch) is determined in accordance with the position of Change lever (B). When the switch set position is set appropriately, the motor rotates normally and the tape starts moving.

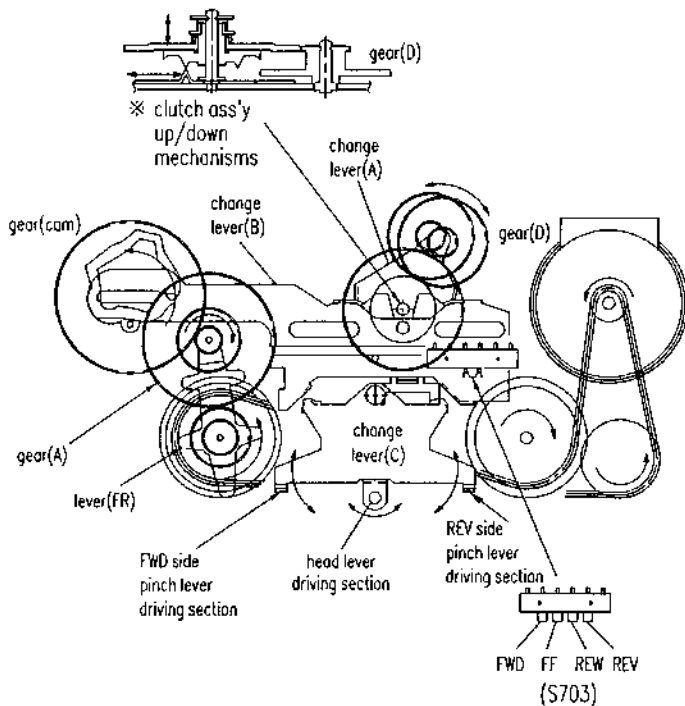


- Lever (FR) is driven with gear (A) by friction, and it swings to the left or right depending on the rotating direction of the motor.
- Selector levers (A) and (C) also swing to the left or right in accordance with the movement of Change lever (B), and the clutch assembly moves upward or downward accordingly.
- The pinch roller is activated and the head is placed in playback position with selector lever (C).
- When the mode is switched from one mode to another, the pinch roller is activated while the motor is rotating reversely (for a short period of time), causing a little slackness in the tape transport.

**1. Rotating Mechanisms in PLAY Mode**

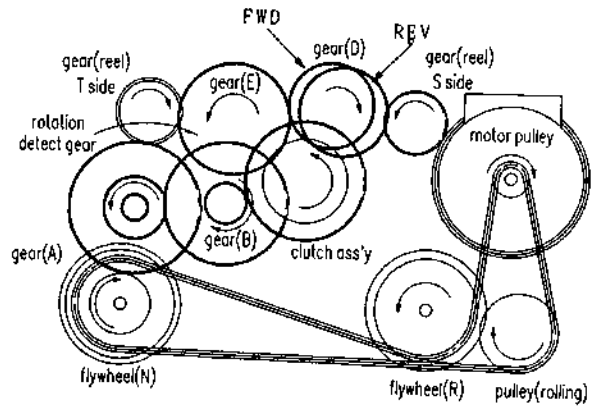


**2. Rotating Mechanisms in FF, REW Mode**

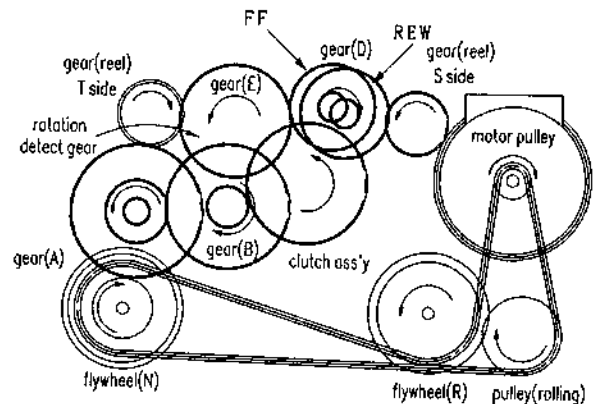


## SECTION 3 DISASSEMBLY

Note: Follow the disassembly procedure in the numerical order given.


### CASSETTE LID

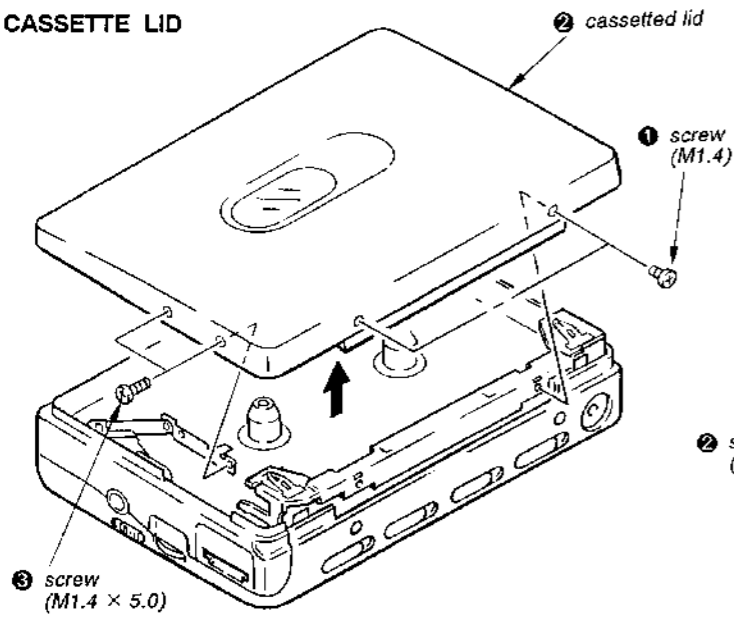


### CASE

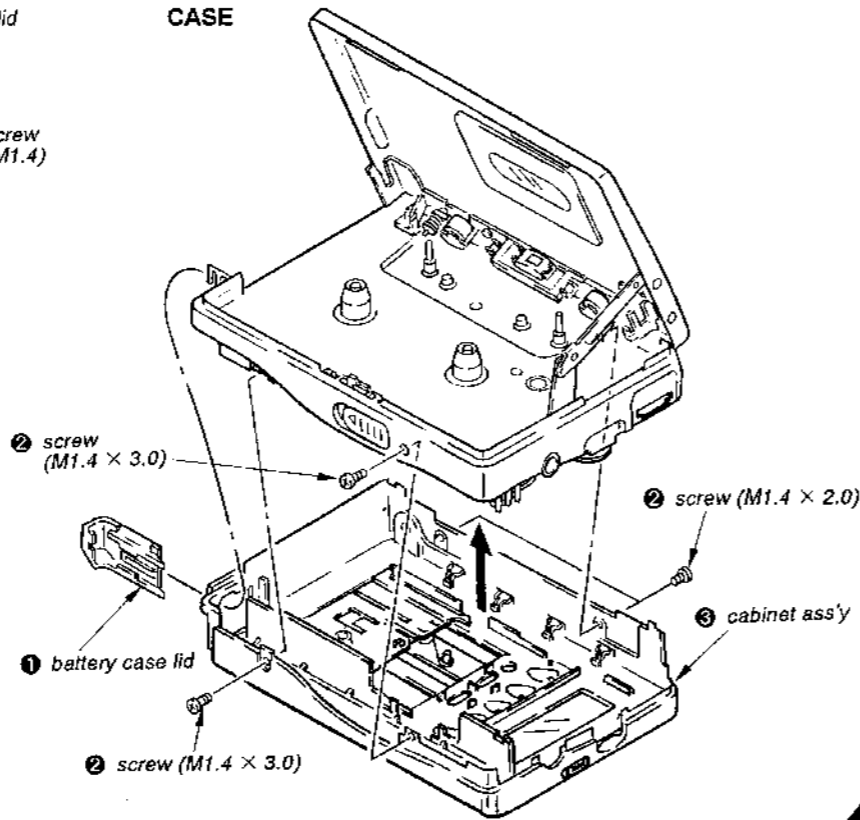


### AUDIO BOARD

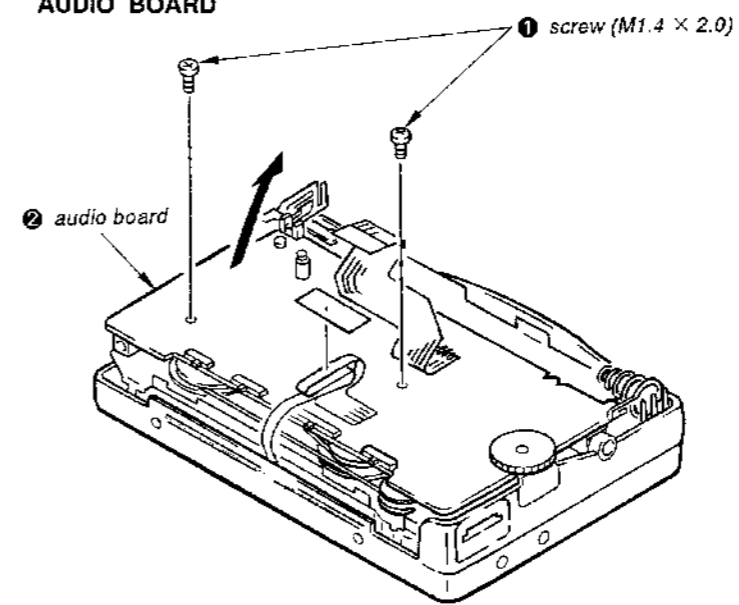


### HOLDER

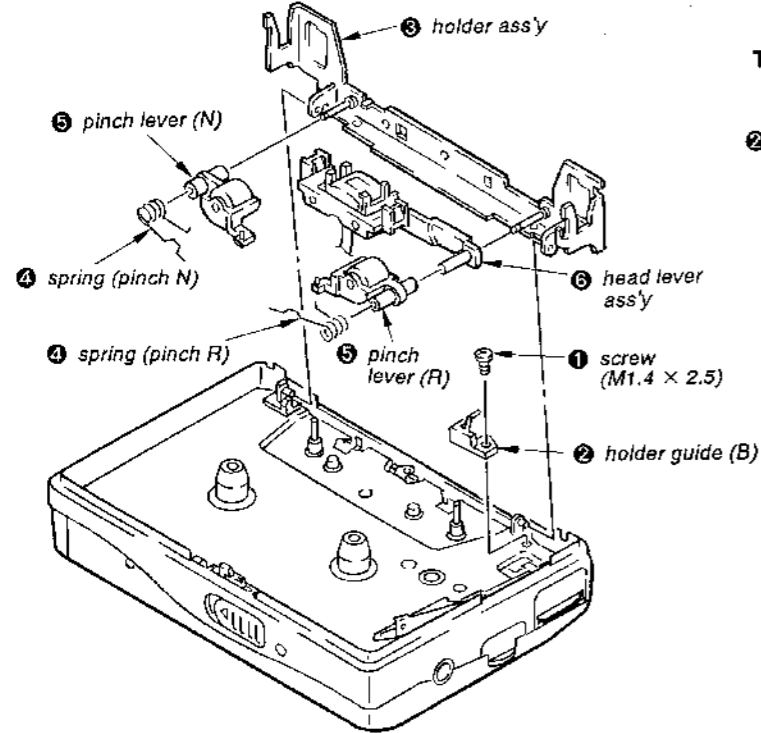


### TUNER BOARD

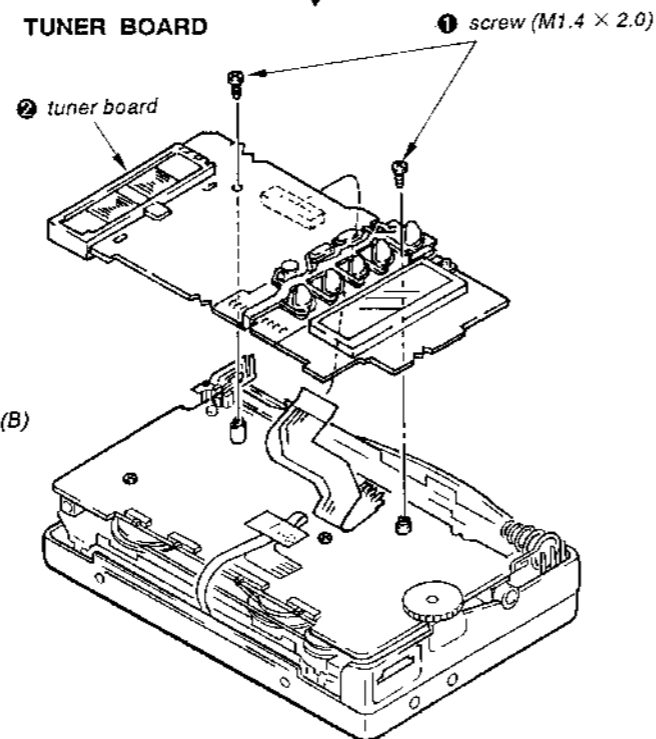

### BELT

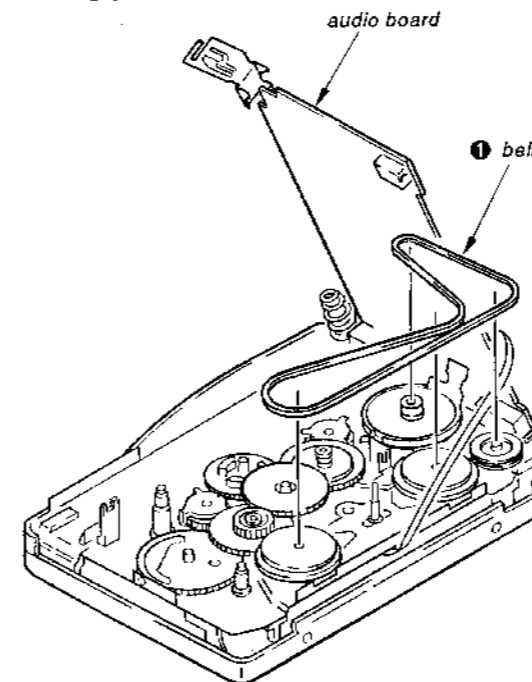

### HOW TO THE AUDIO BOARD

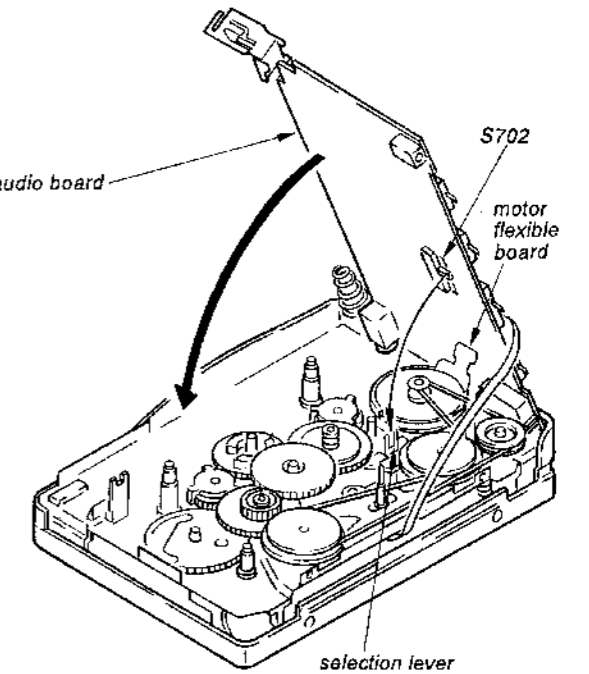

Check that switch S702 is latched with selection lever when carrying out installation of the audio board.

## SECTION 4 ADJUSTMENTS

### 4-1. MECHANICAL ADJUSTMENTS

#### PRECAUTION

1. Clean the following parts with a denatured-alcohol-moistened swab :
 

playback head	rubber belts
capstar	idlers
pinch roller	
2. Demagnetize the playback head with a head demagnetizer.
3. Do not use a magnetized screwdriver for the adjustments.
4. After the adjustments, apply suitable locking compound to the parts adjusted.
5. The adjustments should be performed with the rated power supply voltage (2.5V) unless otherwise noted.

#### Torque Measurement

Mode	Torque meter	Meter reading
FWD	CQ-102C	20 - 40 g-cm (0.28 - 0.55 oz-inch)
FWD Back Tension		1.0 - 4 g-cm (0.02 - 0.04 oz-inch)
REV	CQ-102RB	20 - 40 g-cm (0.28 - 0.55 oz-inch)
REV Back Tension		1.0 - 3.5 g-cm (0.02 - 0.04 oz-inch)
FF	CQ-201B	more than 50 g-cm (more than 0.70 oz-inch)
REW		more than 50 g-cm (more than 0.70 oz-inch)

#### Tape Pulling Force Measurement

Mode	Torque meter	Meter reading
FWD	CQ-403A	more than 35 g
REV	CQ-403R	more than 35 g

### 4-2. ELECTRICAL ADJUSTMENTS

#### PRECAUTION


1. Power supply voltage : 2.5V
2. Switch position  
 TAPE selection : NORM  
 DOLBY NR switch : OFF  
 MEGA BASS switch : OFF

#### Test Tape

Type	Signal	Used for
WS-48A	3 kHz, 0 dB	Tape Speed Adjustment

### TAPE SPEED ADJUSTMENT

#### Procedure :

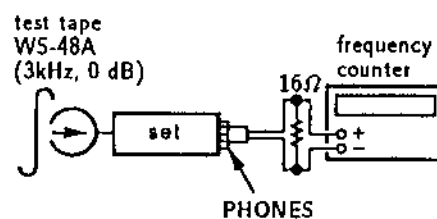


1. Play back WS-48A (tape center portion) in FWD mode. Adjust the RV601 so that the frequency counter reads  $3,000 \pm 90\text{Hz}$ .
2. Play back WS-48A (tape center portion) in REV mode. Confirm that the reading of frequency counter is within 2.5% from the reading in step 1.

**Radio Section**



**AM SECTION**

BAND switch : AM

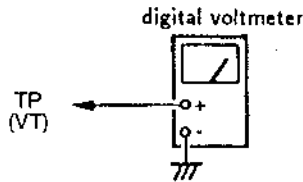

AM TUNING VOLTAGE ADJUSTMENT	
Adjust for following values on digital voltmeter	
Display indication	(530kHz), < 531kHz> [522kHz]
Digital voltmeter reading	1.10 ± 0.05V
Adjustment part	L4

**AM Tracking Adjustment**

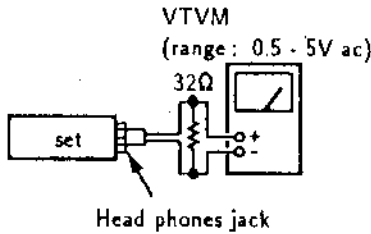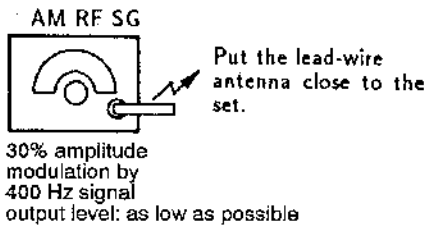

- Repeat the procedures in each adjustment several times, and the tracking adjustment should be finally done by the trimmer capacitors.


AM TRACKING ADJUSTMENT		
Adjust for a maximum reading on VTVM.		
Display indication	(630kHz), < 621kHz>	(1490kHz), < 1395kHz>
SG frequency	[621kHz]	[1395kHz]
Adjustment part	L1	CT1

AM IF ADJUSTMENT	
Adjust for a maximum reading on VTVM.	
Display indication	(1,710kHz), < 1,602kHz>
SG frequency	[1,611kHz]
Adjustment part	T1

**FM SECTION**



**FM Tuning Voltage Adjustment**

BAND switch : FM

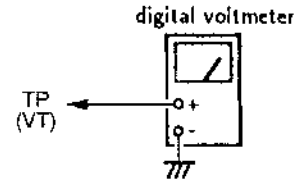

FM TUNING VOLTAGE ADJUSTMENT	
Adjust for following values on digital voltmeter	
Display indication	87.5MHz
Digital voltmeter reading	3.7 ± 0.05V
Adjustment part	L3

**FM Tracking Adjustment**

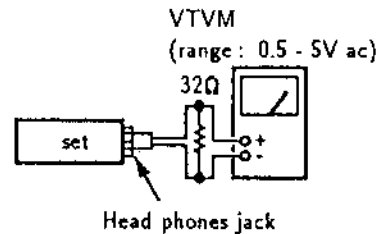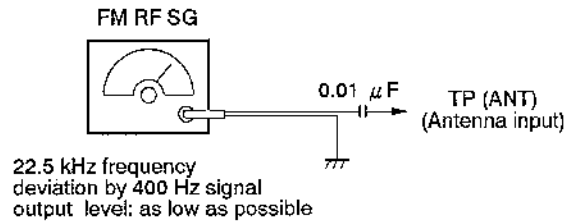

- Repeat the procedures in each adjustment several times, and the tracking adjustment should be finally done by the trimmer capacitors.

FM TRACKING ADJUSTMENT		
Adjust for a maximum reading on VTVM.		
Display indication	87.5MHz	108.00MHz
SG frequency	87.5MHz	108.00MHz
Adjustment part	L2	CT2



( ) : US, Canadian

< > : AEP, E, UK, Germany, Saudi Arabia, Tourist

[ ] : Italian

**VCO Adjustment**


BAND switch: FM  
 FM SENS switch : ST or DX

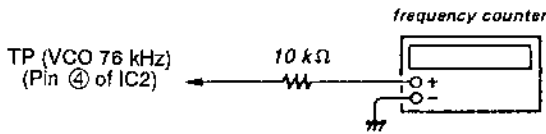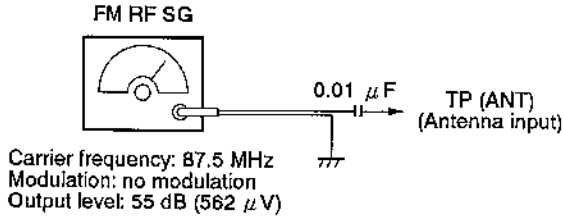

**Procedure:**

1. Connect an resistor 150 k $\Omega$  between TP (VCO 76 kHz) and ground.
2. Tune the set to 87.5 MHz.
3. Adjust RV1 for 76.0  $\pm$  0.3 kHz on the counter.
4. Remove resistor connected in step 1.

**Adjustment Parts Location Diagram:**

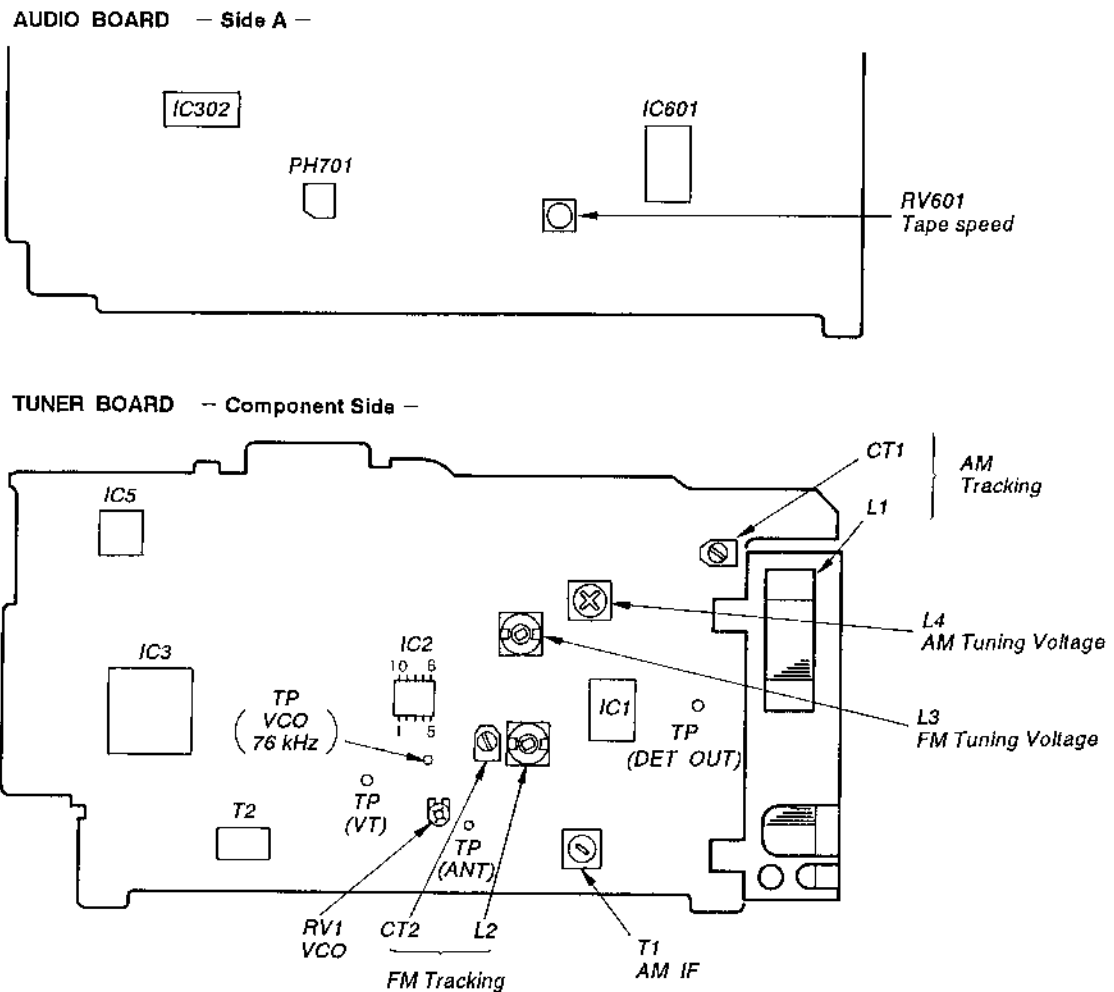



## SECTION 5 DIAGRAMS

### 5-1. IC PIN DESCRIPTION

IC3  $\mu$  PD1724GB-635-1A7

Pin No.	Symbol	Name of Pin	I/O	Function of Pin
1 10	LCD10 LCD1	LCD-SEGMENT SIGNAL OUTPUT	O	<ul style="list-style-type: none"> <li>•The output pin of the signals for the segments of LCD.</li> <li>•Turns VDD from "Low" to "High" when turning power on or resetting.</li> <li>•Set to "Low" automatically when the clock stops. (Display OFF mode)</li> </ul>
11	NC	NC	—	Not used
12 14	COM3 COM1	LCD COMMON SIGNAL OUTPUT	O	<ul style="list-style-type: none"> <li>•The output pin of the common signal for the LCD.</li> </ul>
15 16 17 18	VSS CAP2 CAP1 VSS2	CAPACITOR CONNECTION PIN FOR THE VOLTAGE DOUBLER		<ul style="list-style-type: none"> <li>•The connection pin to the capacitor of the voltage doubler for the LCD.</li> <li>•Used with a 3.1 V-TYPE LCD to obtain a voltage of 3.1 V.</li> </ul>
19	VDP	MUTE		The output pin of the muting signal. Mutes the output to prevent the shock noise or switching noise when tuning, and also the switching noise in the TC mode.
20	CGP	BEEP		The output pin of the buzzer sound signal using CGP. (Selected for 1 kHz or 3 kHz) The buzzer sound is output when: <ol style="list-style-type: none"> <li>(1) an effective key is checked in the radio ON mode,</li> <li>(2) an effective key is checked in the TC mode, or</li> <li>(3) The frequency selected for new tuning is out of the range.</li> </ol> The signal is output for about 65 ms in case of (1). It is output for 50 to 600 ms or 375 to 500 ms in case of (2) or (3) respectively.
21	NC	NC	—	Not used
22	V <sub>DD</sub>	POWER INPUT		The input pin for power (VDD) of the IC.
23	VHF	—	—	Not used
24	HF	LOCAL OSCILLATOR INPUT	I	The input pin of the FM local oscillator (VCO) output.
25	AM	LOCAL OSCILLATOR INPUT	I	The input pin of the AM local oscillator (VCO) output.
26	VSS1	CND	—	The ground pin of the IC.
27	EO1	—	—	Not used
28	EO2	ERROR OUT	O	The output pin of the PLL errors. The output level is "High" when the frequency demultiplied from the local oscillator output is higher than the reference frequency. It is "Low" when the frequency is lower.
29	CE	CHIP ENABLE		The input pin to enable or disable the IC. To be set to "High" to enable the IC. To be set to "Low" to disable the IC.
30 31	X2 X1	CRYSTAL (X'tal)	O I	The connection pin to the crystal. The resonant frequency of the crystal is 75 kHz.
32	VSS4	REGULATOR CONNECTION FOR THE OSCILLATOR	—	The connection pin to the capacitor of the regulator circuit.
33	PA3	PHOTOSENSOR SIGNAL INPUT		The input pin of the photosensor output for reel-table rotation detection. The duration of the output when detecting the end of tape is 1.6 s for PLAY, and 500 ms for FF/REW.
34	PA2	AMP CTL SIGNAL OUTPUT		The output pin to turn on the power amplifier. Turns on when set to "High".
35	PA2	AM BAND SIGNAL OUTPUT		The output pin of the AM band signal in the radio mode. Selects AM when set to "High, and FM when set to "Low".
36	PA0	RADIO ON POWER		The output pin of a "High" level status when radio is turned on. To be used possibly as the PRE-MUTE signal output.
37	PB3	MOTOR BRAKE		The output pin for the brake signal to be applied to the motor. Turns the brake on when set to "High".

Pin No.	Symbol	Name of Pin	I/O	Function of Pin
38	PB2	MOTER DIR		The output pin for selecting the rotating direction of the motor. Turns the motor counterclockwise when set to "High", and clockwise when set to "Low".
39	PB1	MOTOR CONTROL		The output pin for the signal to start the motor. Turns the motor when set to "High".
40 41 42 43 44	PB0 PC3 PC2 PC1 PC0	KEY SOURCE SIGNAL INPUT		The output pin of the key source signal. PC3/PC2/PC1/PC0 are for the momentary keys, and PB0 for the initial diode.
45 46 47 48	K3 K2 K1 K0	KEY RETURN SIGNAL INPUT		The output pin of the key return signal. To be used with PB0/PC3/PC2/PC1/PC0.
49 50	NC	NC	-	Not used
51 52 53 54 55 56	LCD16 LCD15 LCD14 LCD13 LCD12 LCD11	LCD - SEGMENT SIGNAL OUTPUT	O	The output pin of the signal for the segments of the LCD.

**Key Matrix Arrangement**


INPUT OUTPUT	K0	K1	K2	K3
PC0	ENTER	SCAN UP	SCAN DOWN	ON/BAND
PC1	REW/PRESET(-)	FF/PRESET(+)	PLAY	STOP
PC2	FWD(MD)	FF(MD)	REW(MD)	RVS(MD)
PC3	HOLD	Comparator (1)	Comparator (2)	Comparator (3)

**Initial diode**


INPUT OUTPUT	K0	K1	K2	K3
PBO	AAO	TAPE(MD)	AA2	AA3

The initial diode is used when VDD turns from "Low" to "High".  
 For the input of comparator (1) when AAO is used.  
 For the input of the HOLD status when AAO is not used.


**Set to RADIO ON (FM reception) when the BAND key is pressed in the stop mode.**

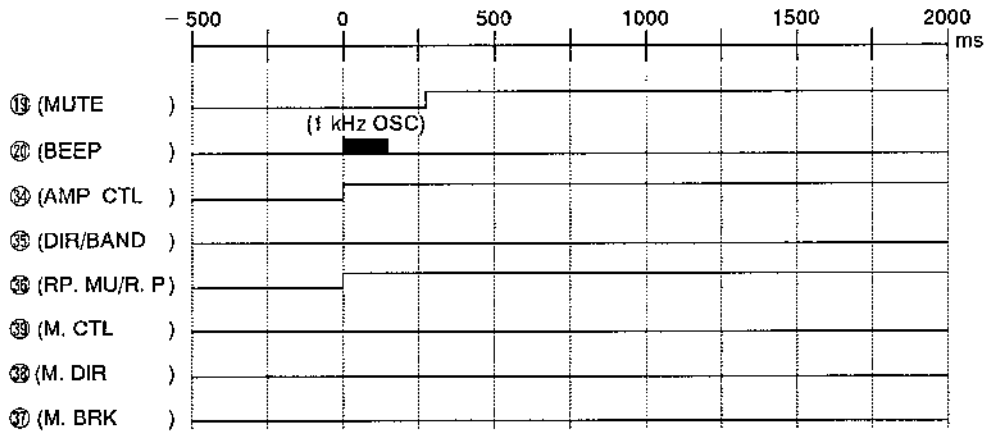

**Set to PLAY (FWD direction) when the PLAY key is pressed in the stop mode.**

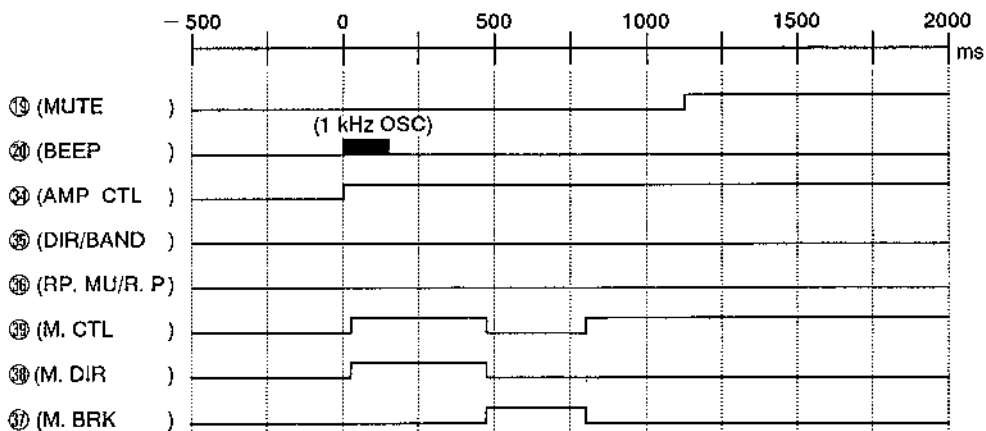

5-2. BLOCK DIAGRAM

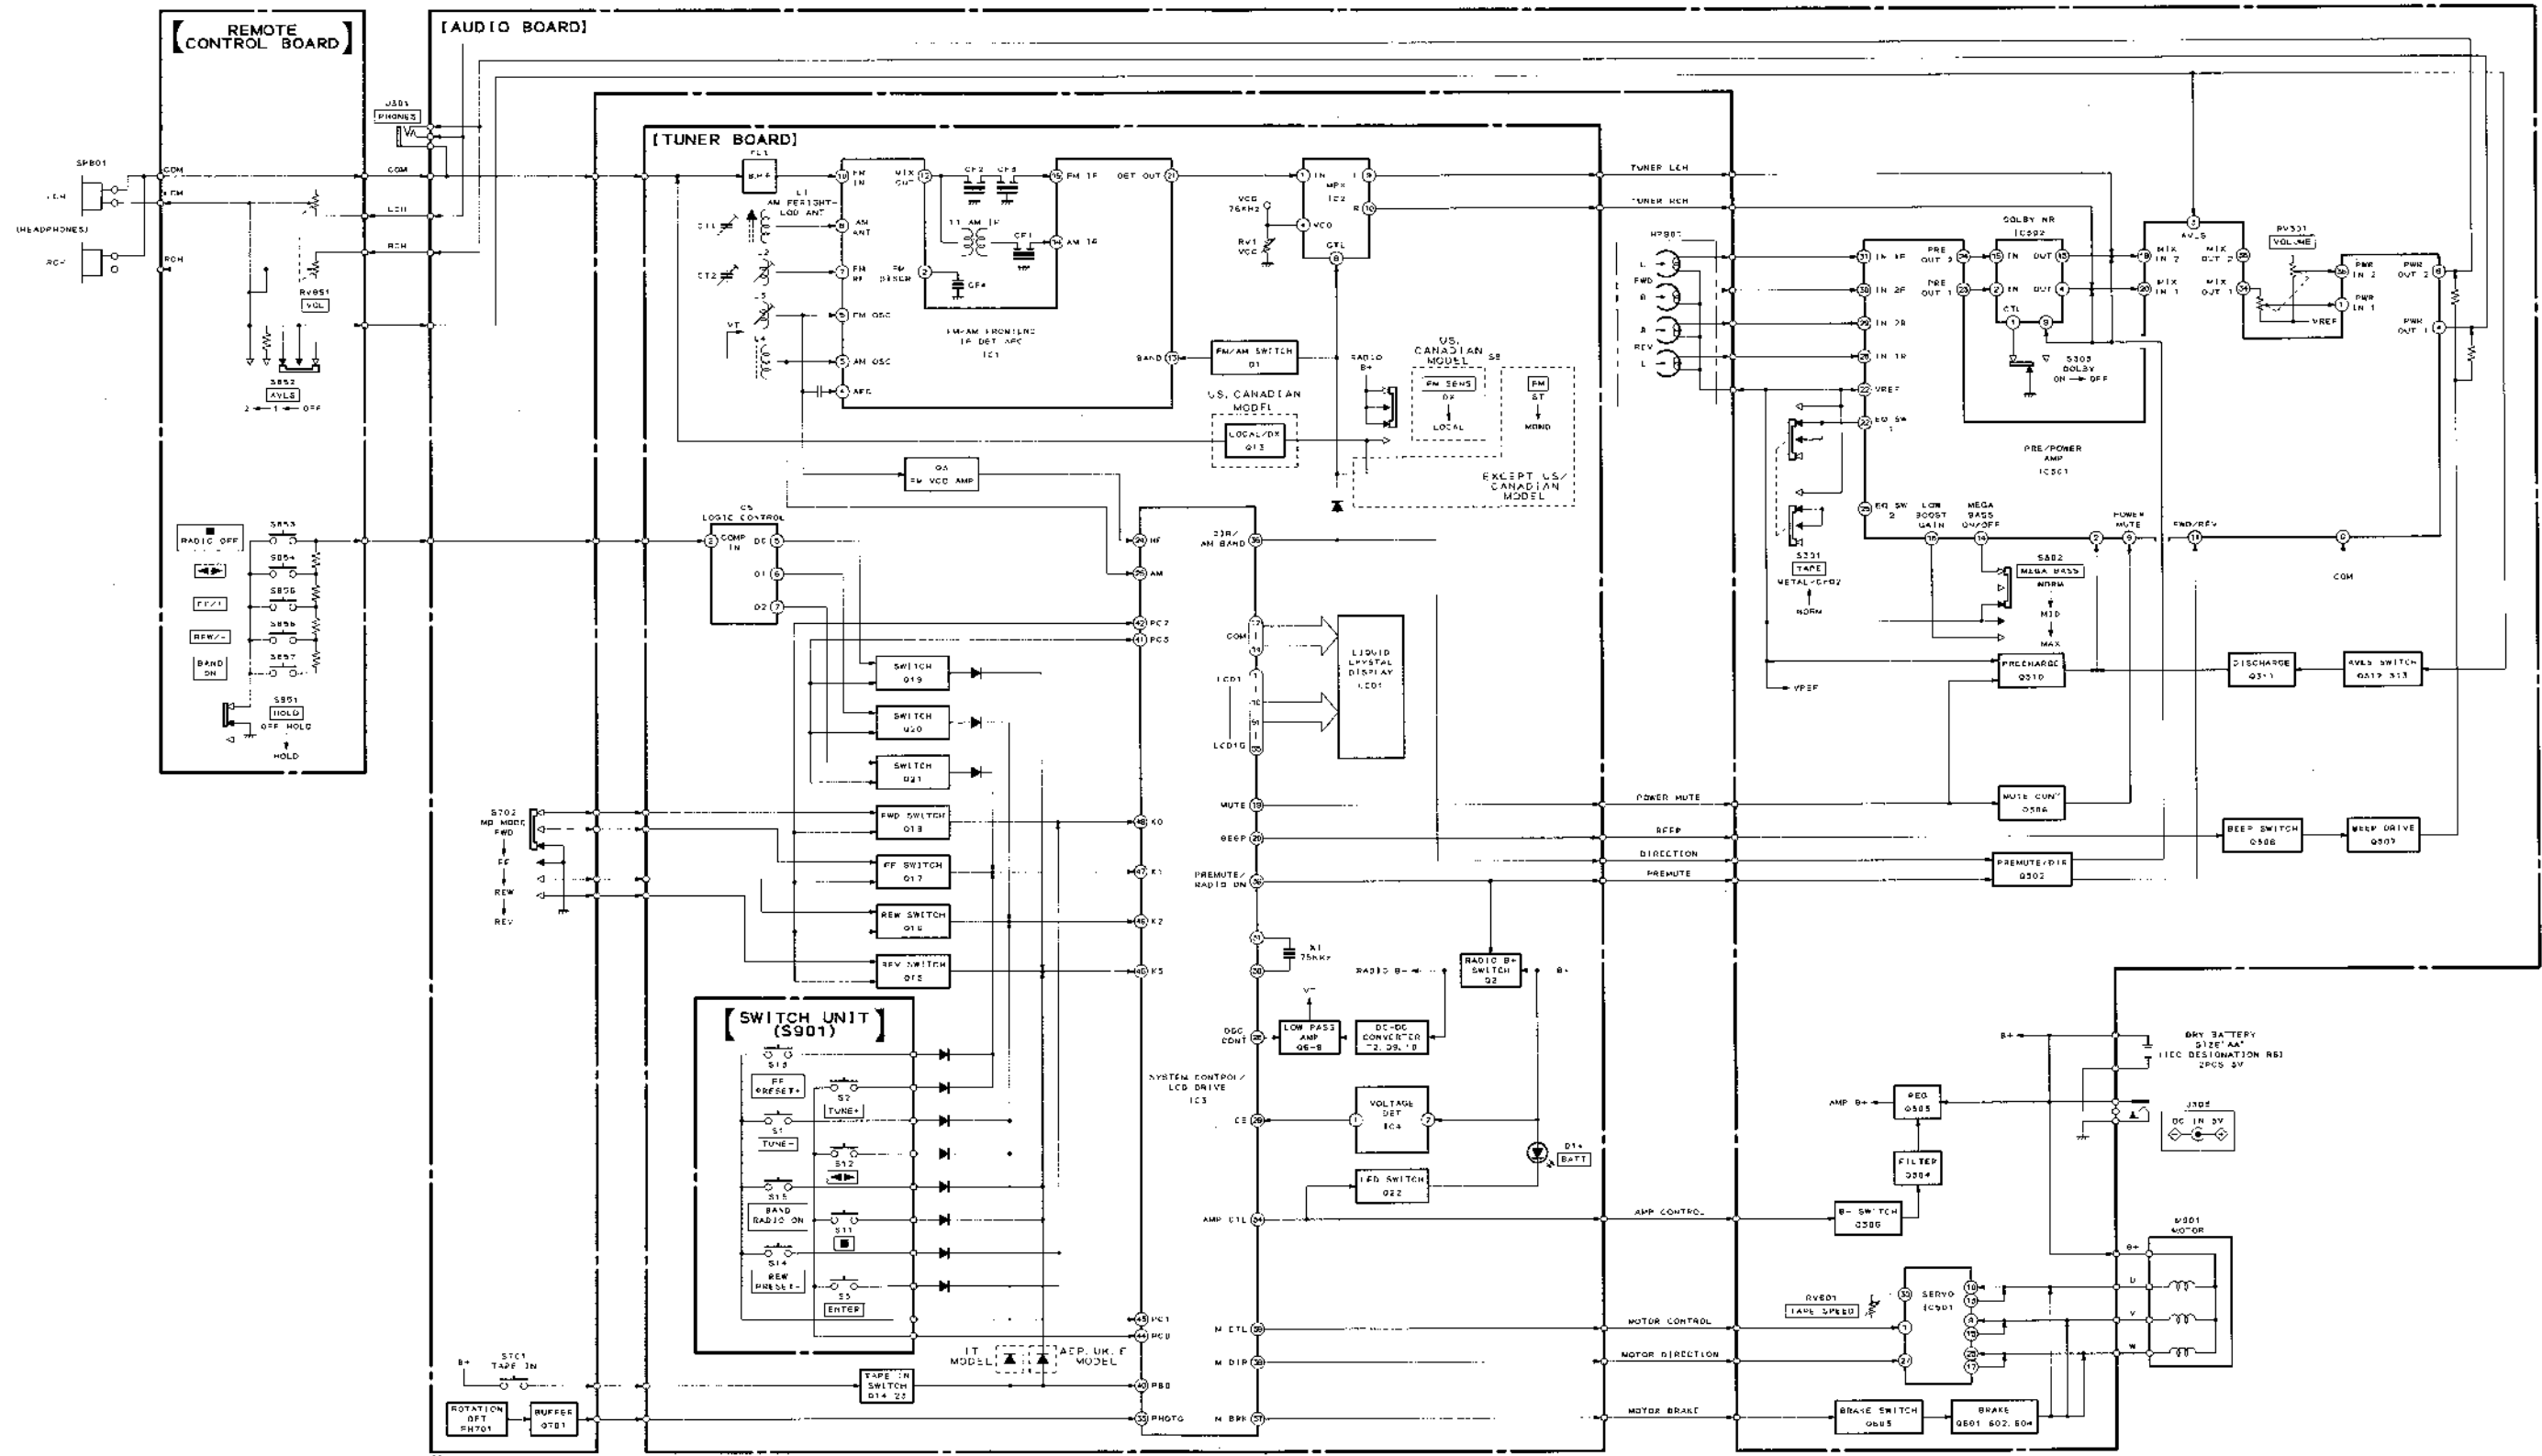

5-3. TUNER SECTION PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAM  
• See page 30 for Semiconductor Lead Layouts and page 28 for IC Block Diagrams.

• Semiconductor Location



Ref. No.	Location
D1	E-7
D2	D-7
D3	C-10
D4	C-7
D5	F-5
D6	F-4
D7	G-2
D8	G-3
D9	F-7
D10	F-2
D12	C-3
D13	C-3
D14	B-3
D15	C-5
D16	C-4
D17	B-5
D18	B-5
D19	C-5
D20	C-4
D21	B-5
D22	B-5
D27	C-4
D28	C-4
D29	B-5
D30	C-3
IC1	D-9
IC2	D-6
IC3	D-3
IC4	F-3
IC5	B-3
Q1	E-10
Q2	D-5
Q3	D-6
Q6	F-4
Q7	E-5
Q8	F-6
Q9	F-5
Q10	F-5
Q13	F-8
Q14	C-3
Q15	C-5
Q16	C-5
Q17	B-5
Q18	B-5
Q19	B-4
Q20	B-4
Q21	C-4
Q22	A-5
Q23	C-3

**Note on Printed Wiring Board:**

- ◻ : indicates side identified with part number.
- : Through hole.
- : Pattern of the rear side.
- ◻ : Pattern from the side which enables seeing.

**Note on Schematic Diagram:**

- All capacitors are in  $\mu\text{F}$  unless otherwise noted. pF:  $\mu\text{F}$  50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in  $\Omega$  and  $\frac{1}{4} W$  or less unless otherwise specified.
- : B + Line.
- : panel designation.
- ▭ : adjustment for repair.
- Power voltage is dc 3.0 V and fed with regulated dc power supply from external power voltage jack.
- Volts and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- no mark: FM
- ( ): AM
- Volts are taken with a VOM (10 MQ/V).
- Voltage variations may be noted due to normal production tolerances.
- Signal path.
- ⇒ : FM

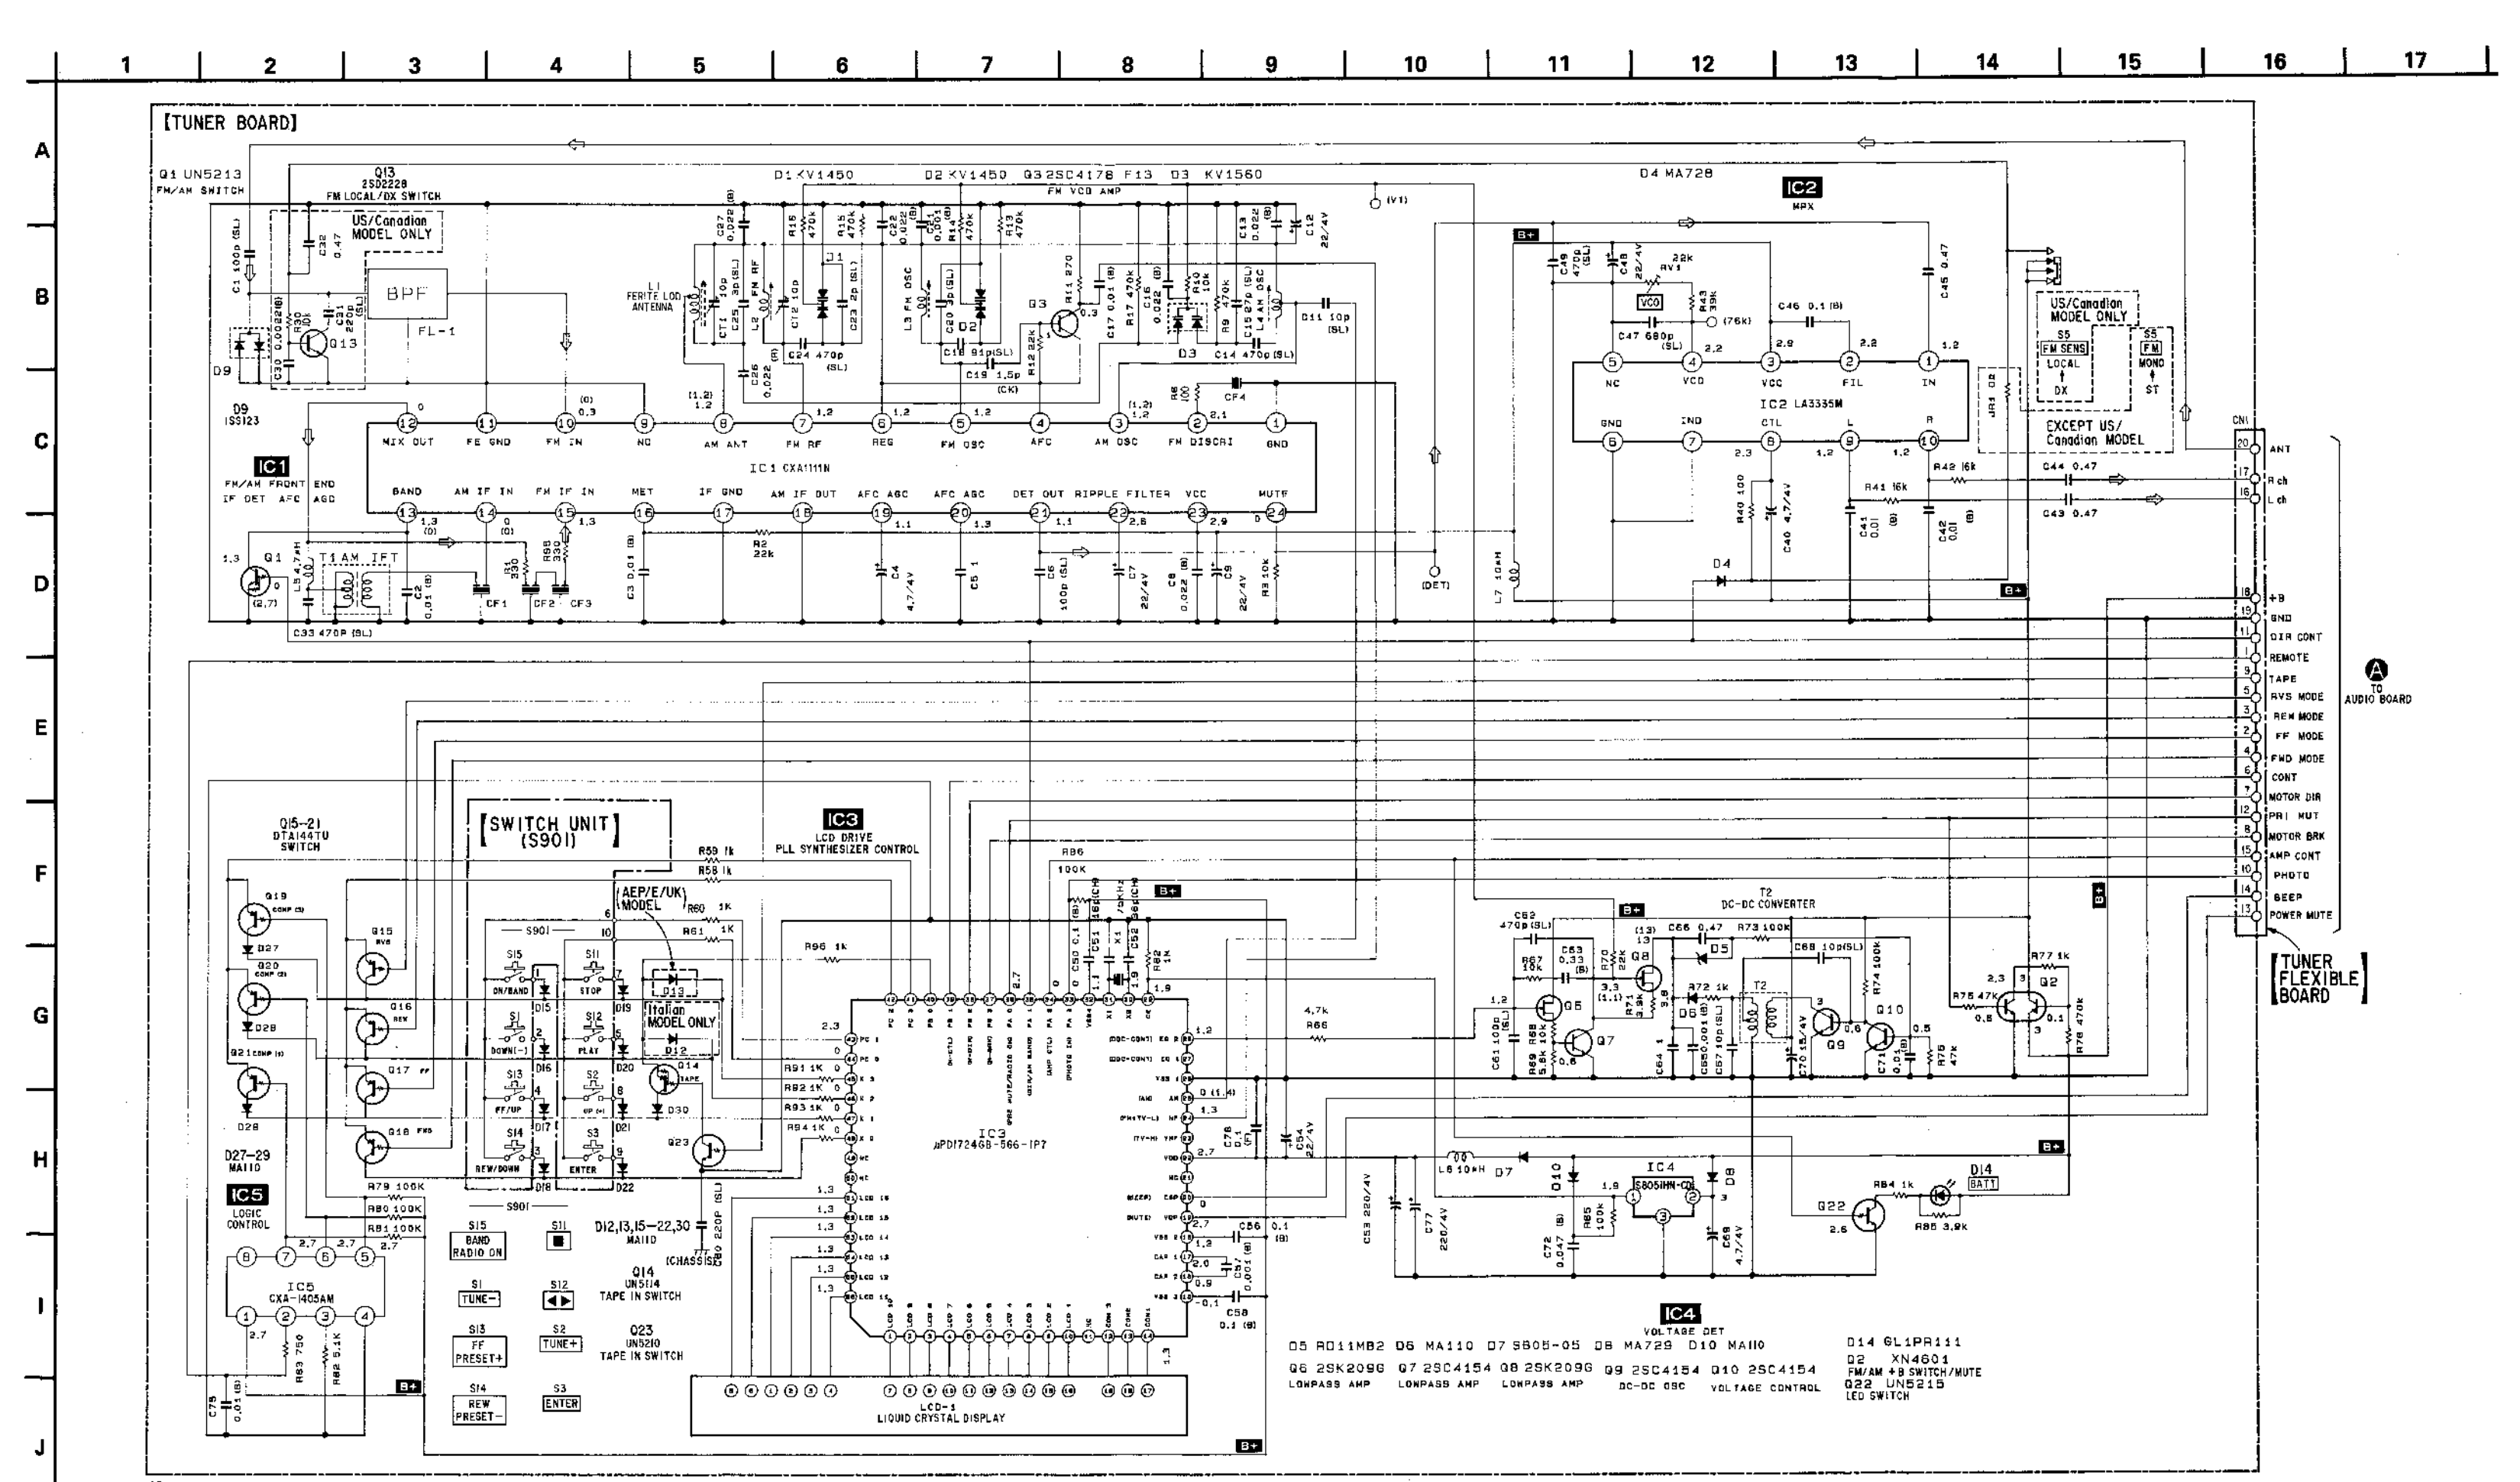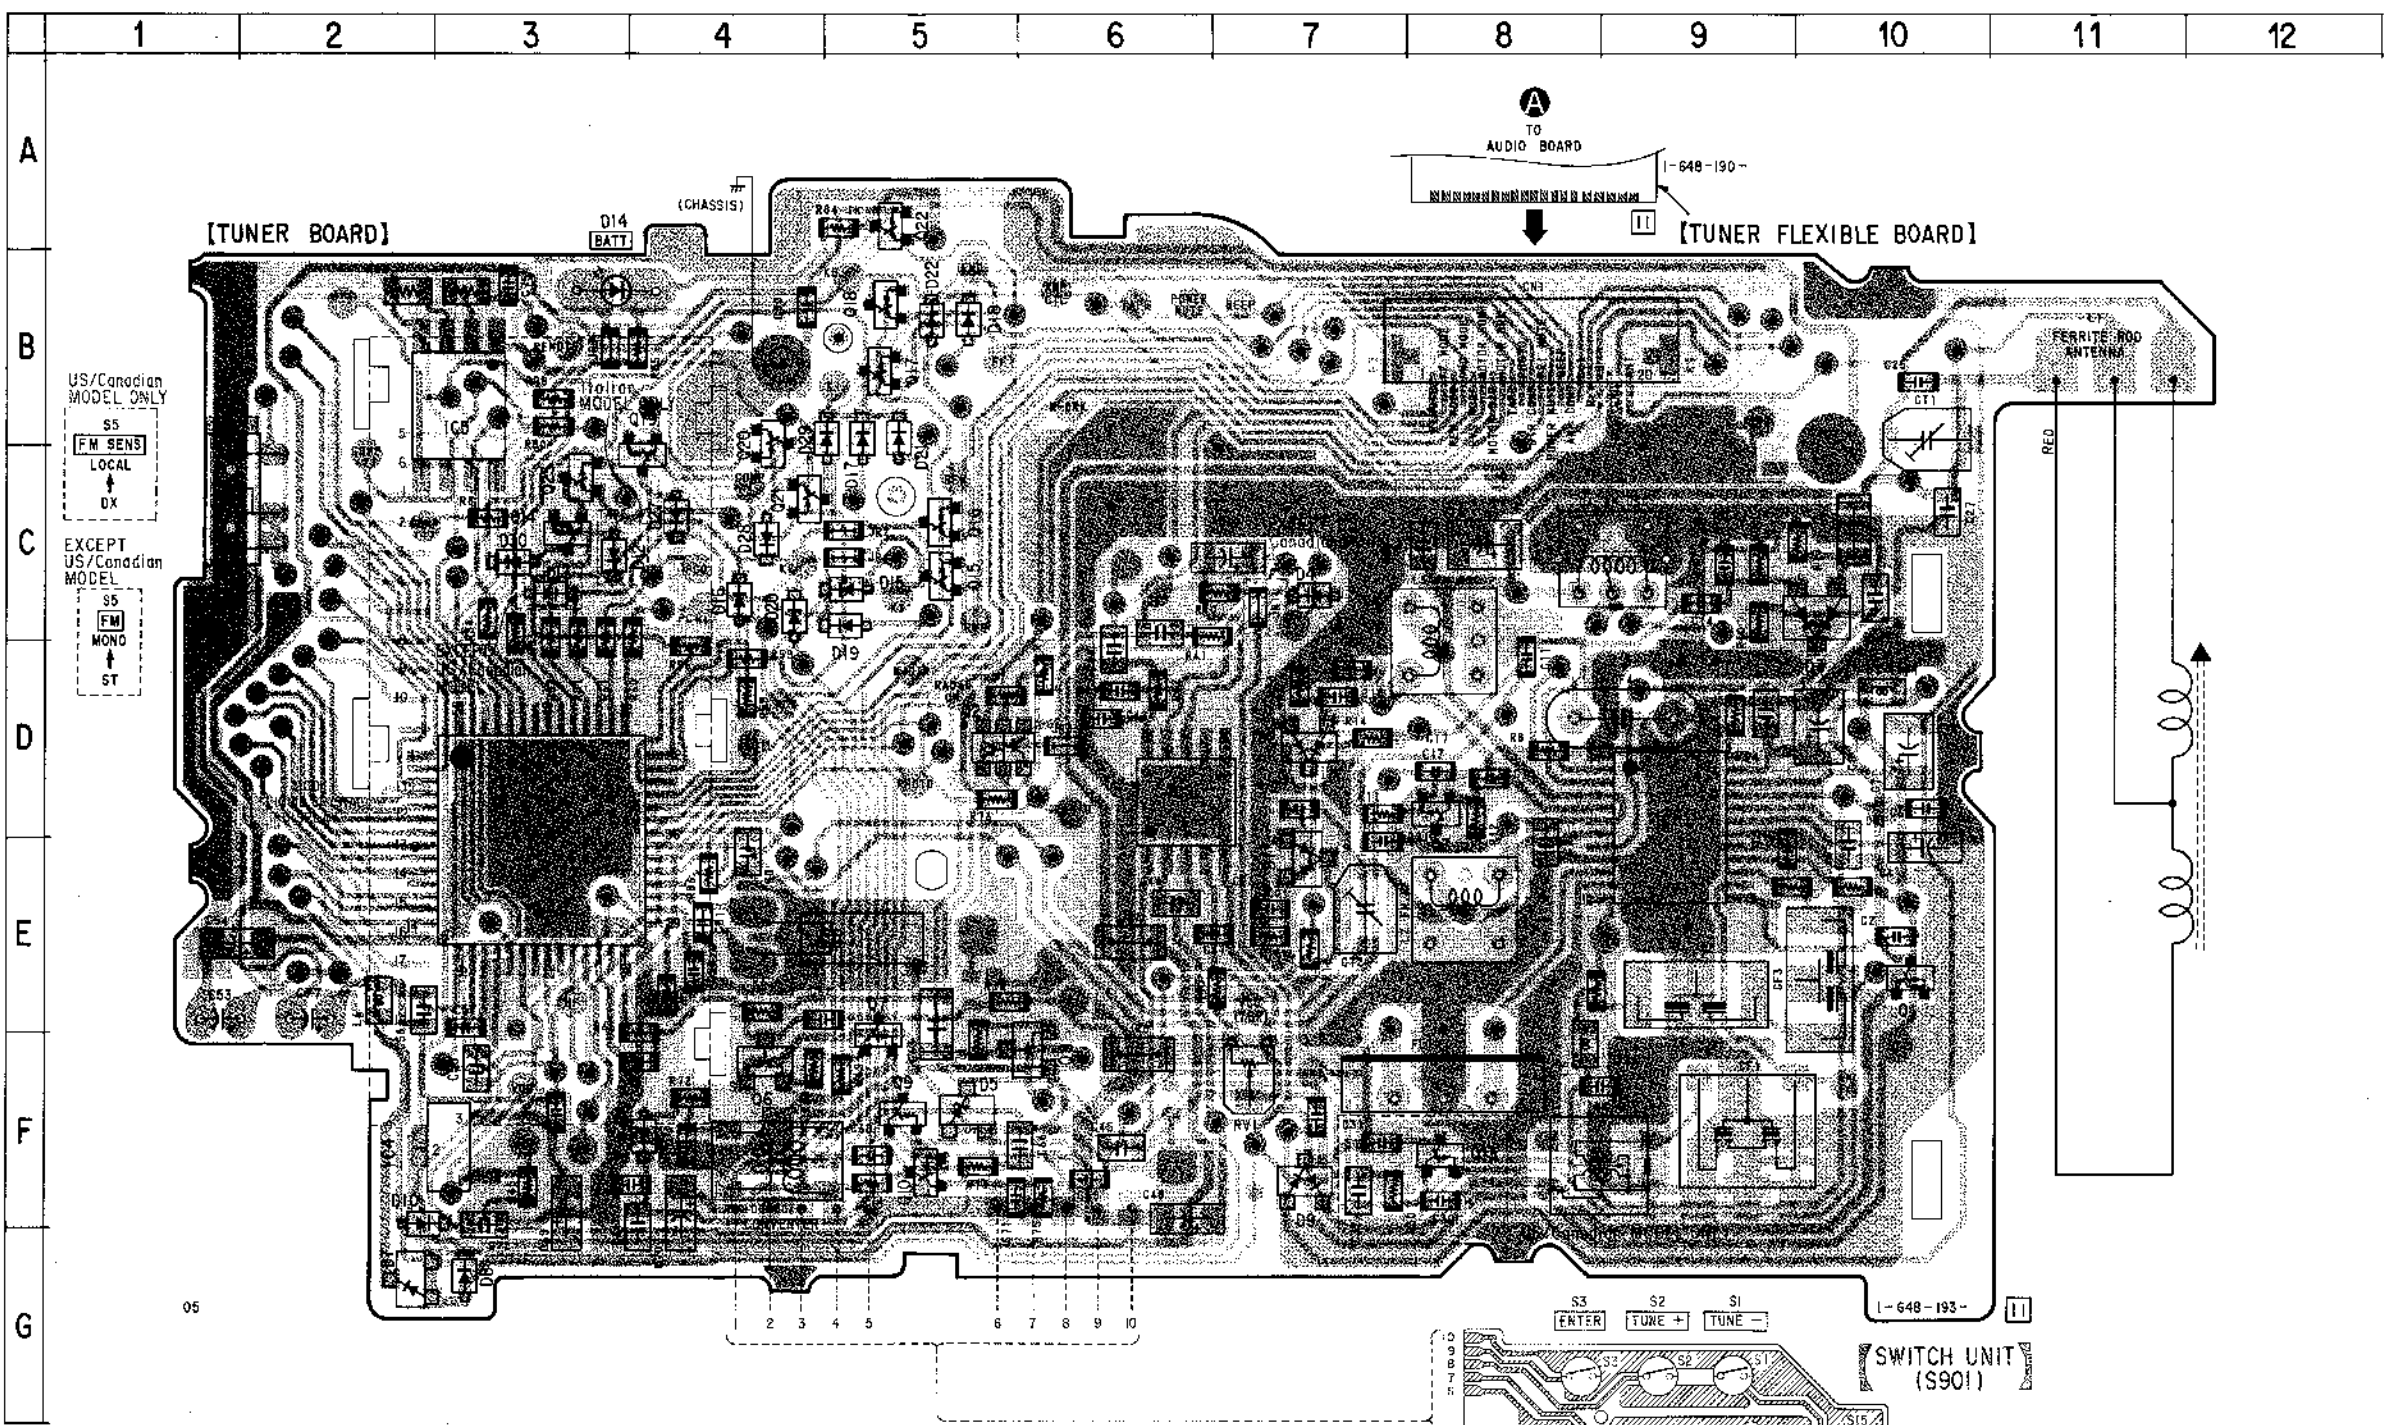




• See page 30 for Semiconductor Lead Layouts.

• Semiconductor Location

Ref. No.	Location
D101	C-21
D102	F-23
D201	C-21
D301	D-14
D302	C-22
D303	C-21
D304	D-23
D305	C-13
IC301	D-18
IC302	E-15
IC601	E-21
PH701	F-16
Q302	F-17
Q303	D-13
Q304	D-14
Q305	E-14
Q306	G-17
Q307	D-21
Q308	D-20
Q310	F-18
Q311	E-19
Q312	F-19
Q313	F-19
Q601	E-22
Q602	E-22
Q603	G-20
Q604	F-22
Q701	F-16

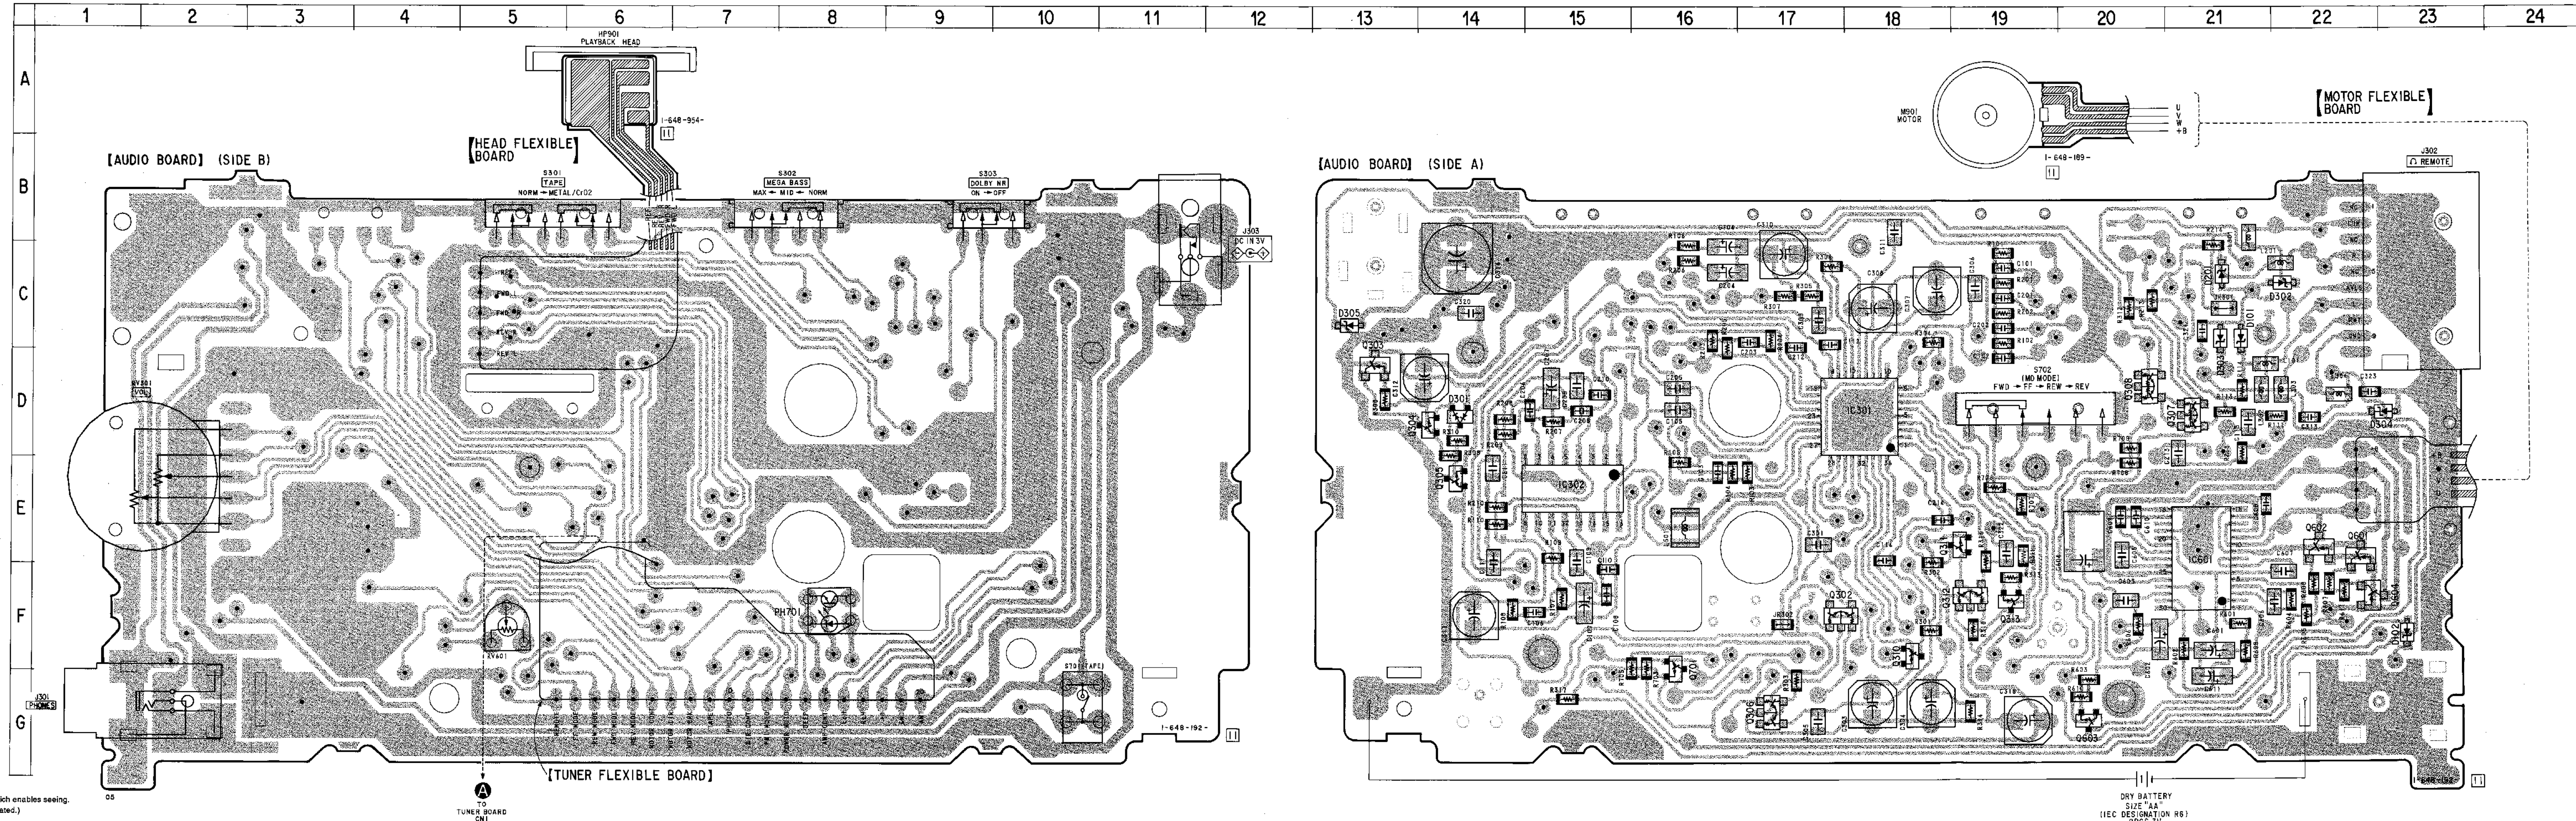


Note:  
 • : Through hole.  
 • : Pattern from the side which enables seeing.  
 (The other layers' patterns are not indicated.)

DRY BATTERY  
 SIZE "AA"  
 (IEC DESIGNATION R6)  
 2PCS. 3V




5-5. AUDIO SECTION SCHEMATIC DIAGRAM

• See page 28 for IC Block Diagrams.

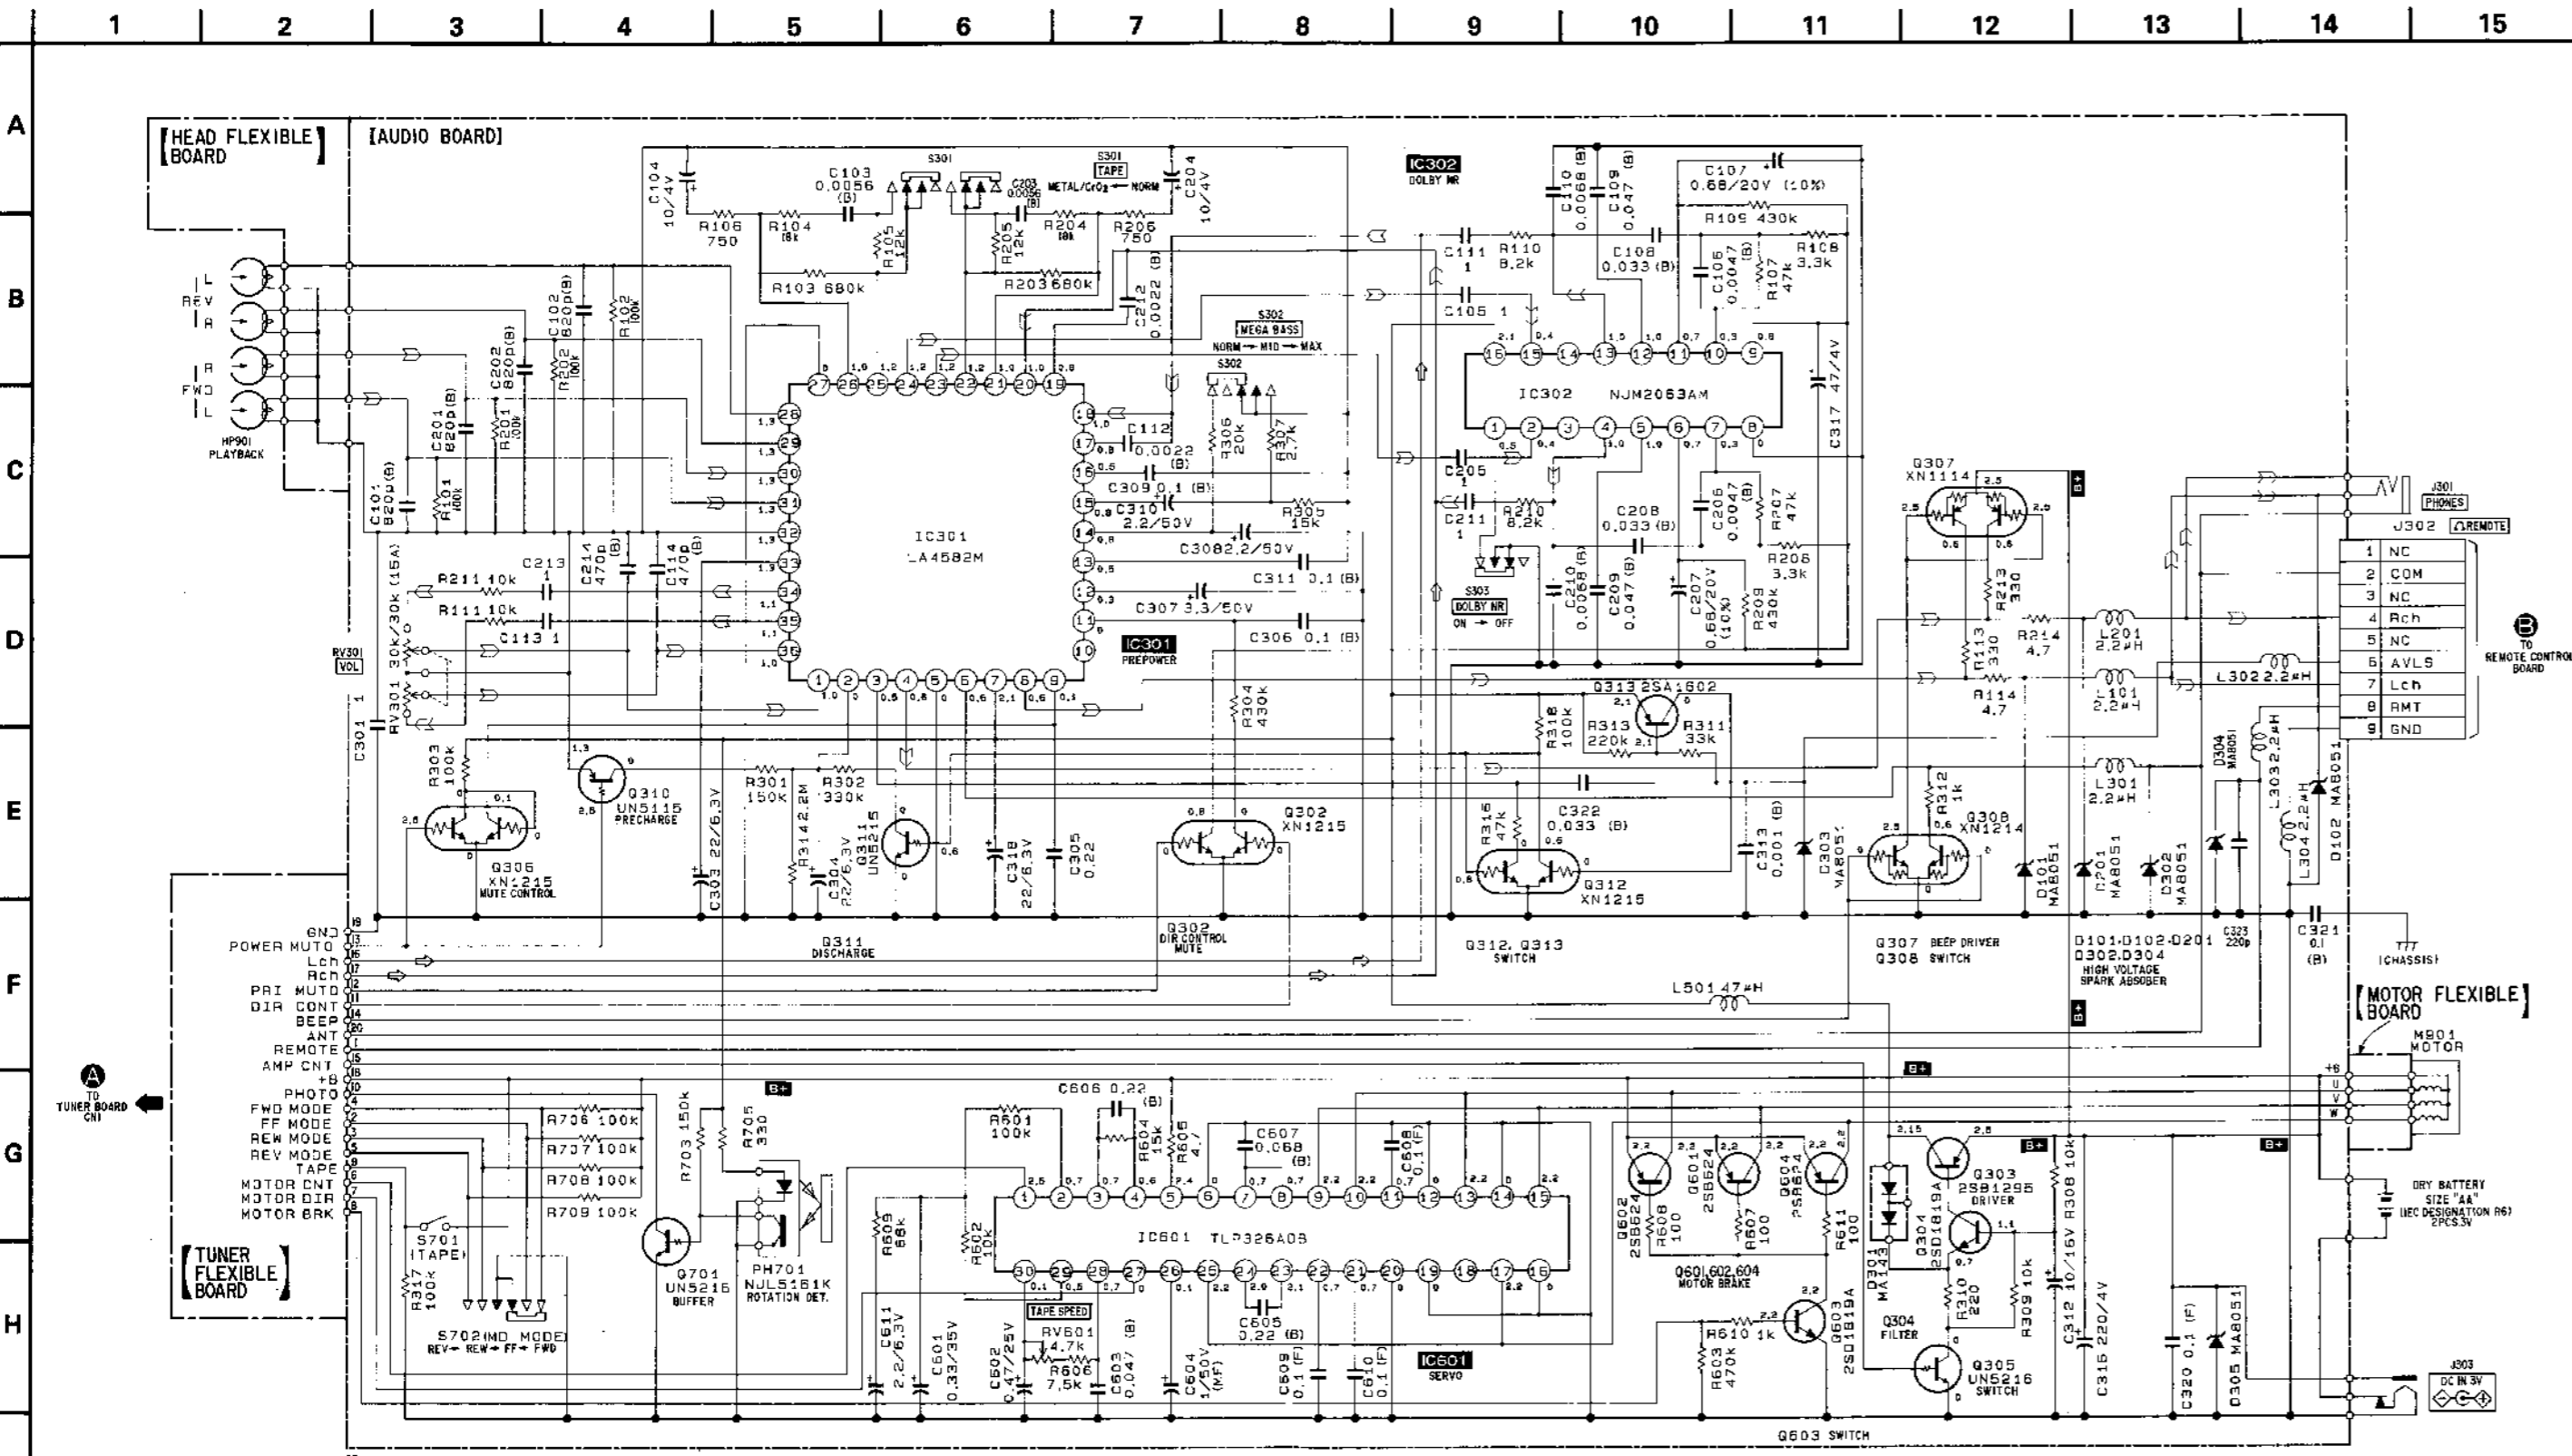

- Note:**
- All capacitors are in  $\mu\text{F}$  unless otherwise noted.  $\text{pF}$ ;  $\mu\text{F}$  50 WV or less are not indicated except for electrolytics and tantalums.
  - All resistors are in  $\Omega$  and  $\frac{1}{4}$  W or less unless otherwise specified.
  - **B+ :** B + Line.
  - **□ :** panel designation.
  - **▭ :** adjustment for repair.
  - Power voltage is dc 2.5 V and fed with regulated dc power supply from external power voltage jack.
  - Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
  - no mark : PLAY
  - Voltages are taken with a VOM (10 M $\Omega$ /V).
  - Voltage variations may be noted due to normal production tolerances.
  - Signal path.
  - **▭ :** FM
  - **▭ :** PB


5-6. REMOTE CONTROL PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM

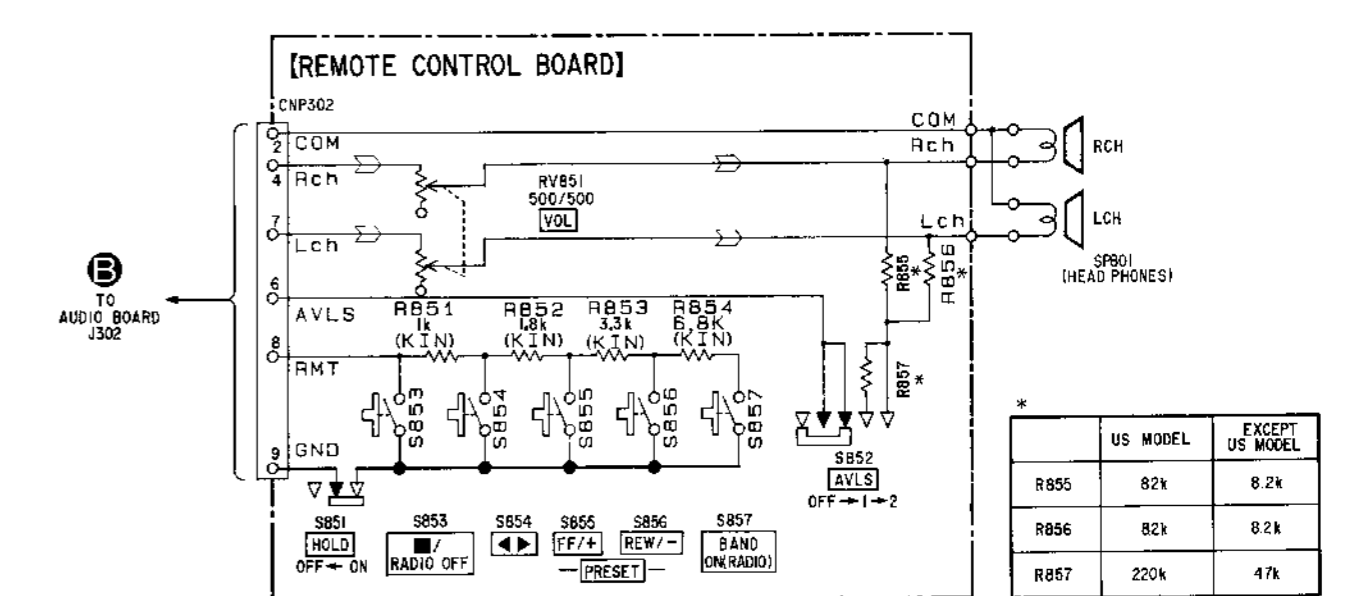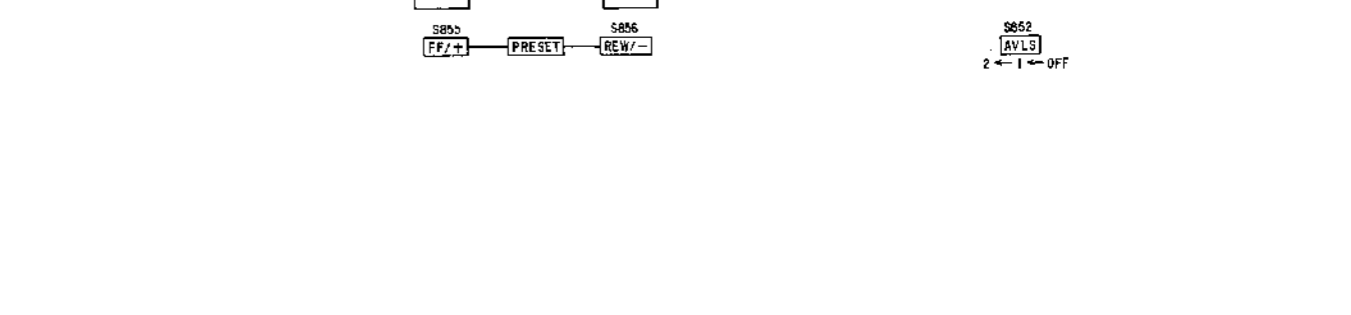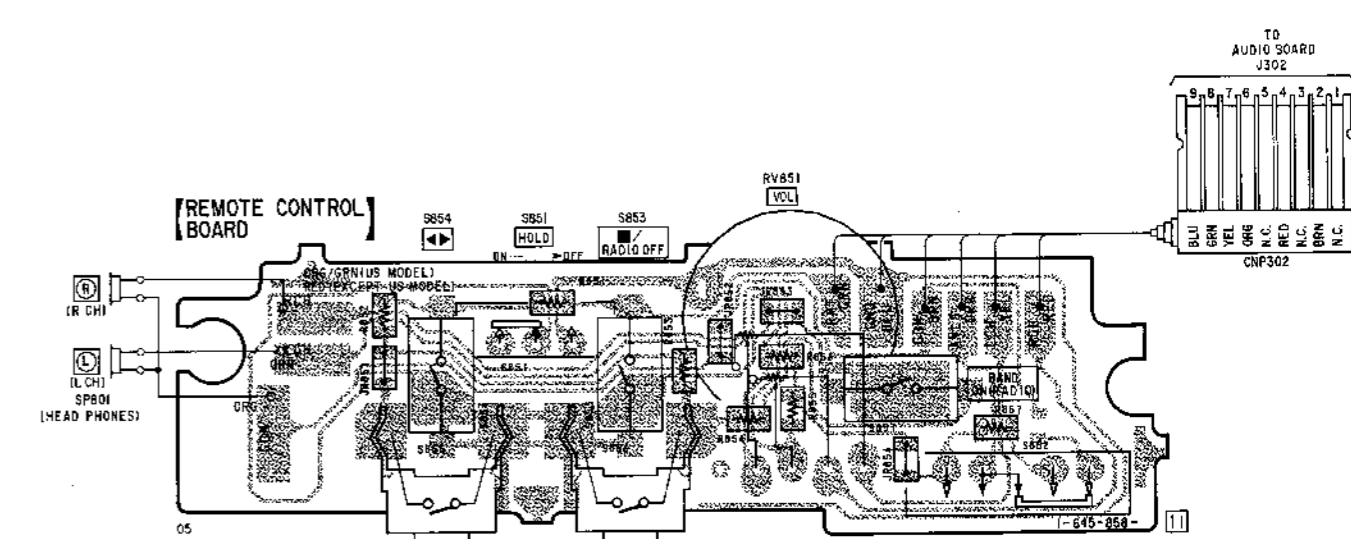




• IC Block Diagrams


IC1 CXA1111N

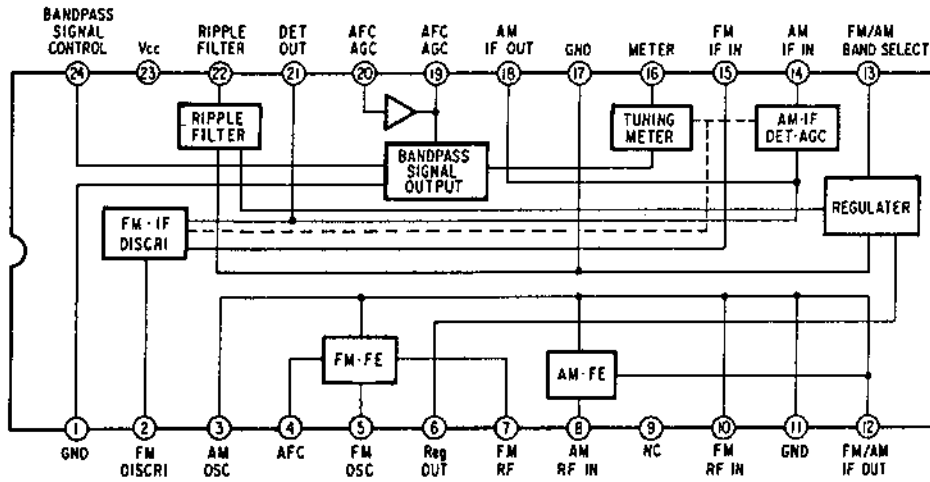

IC2 LA3335M

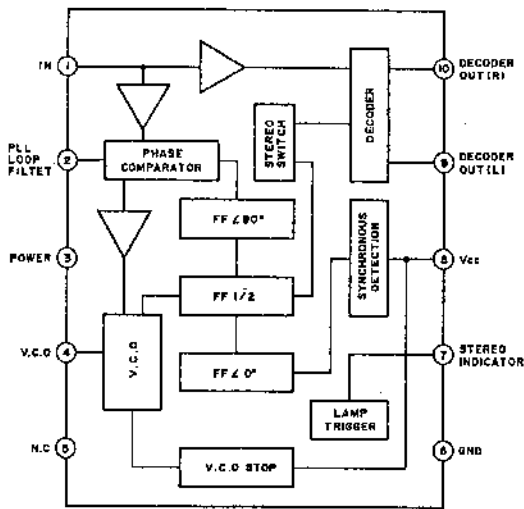


IC5 CXA1405AM

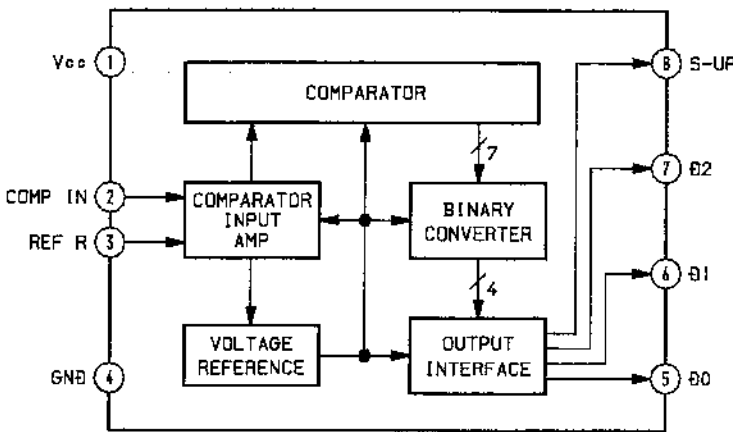





**IC301 LA4582M**

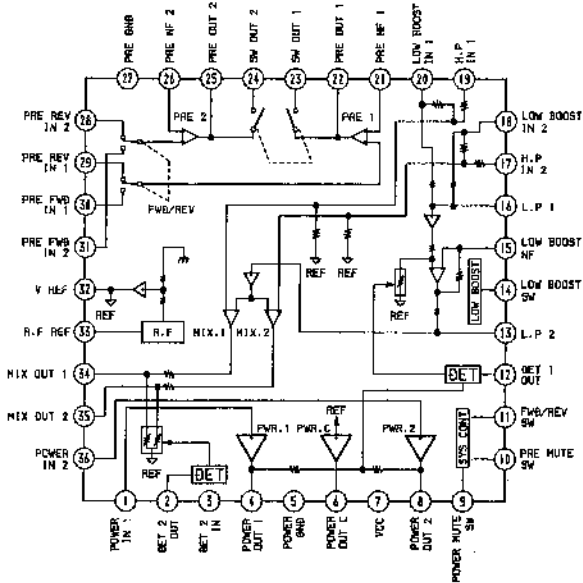

**IC302 NJM2063AM**

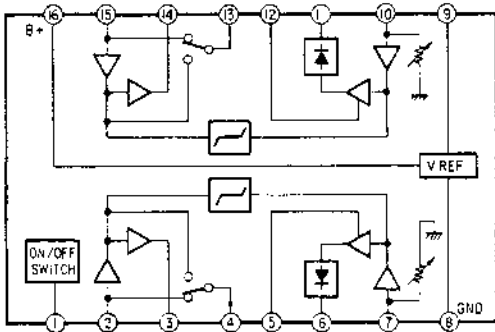


**IC601 TLP326ADB**

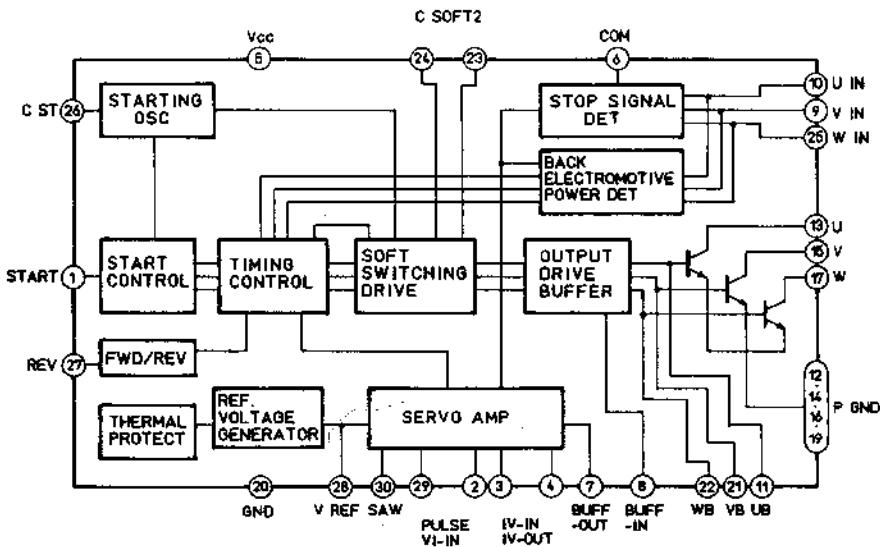


• Semiconductor Lead Layouts

CXA1111N

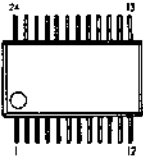


(TOP VIEW)

CXA1405AM




(TOP VIEW)

LA3335M




LA4582M

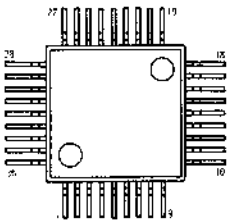


MARKING SIDE VIEW

NJL5161K-F1-B

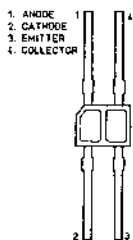


NJM2063AM

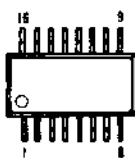


(TOP VIEW)

S-8051HN-CD-S

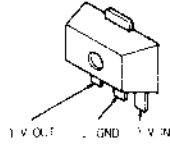


TLP326ADB

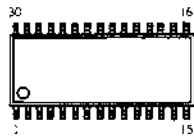

TOP VIEW


XN4601

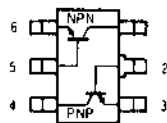


GL-1PR102



MA110

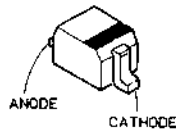

MA728  
MA729  
MA8051

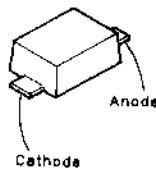

## SECTION 6 EXPLODED VIEWS


**NOTE:**

- -XX and -X mean standardized parts, so they may have some difference from the original one.

- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list is given in the last of this parts list.

- Abbreviations  
 CND : Canadian Model  
 G : Germany Model  
 IT : Italian Model  
 EA : Saudi Arabia Model  
 JE : Tourist Model


**(1) CABINET SECTION**

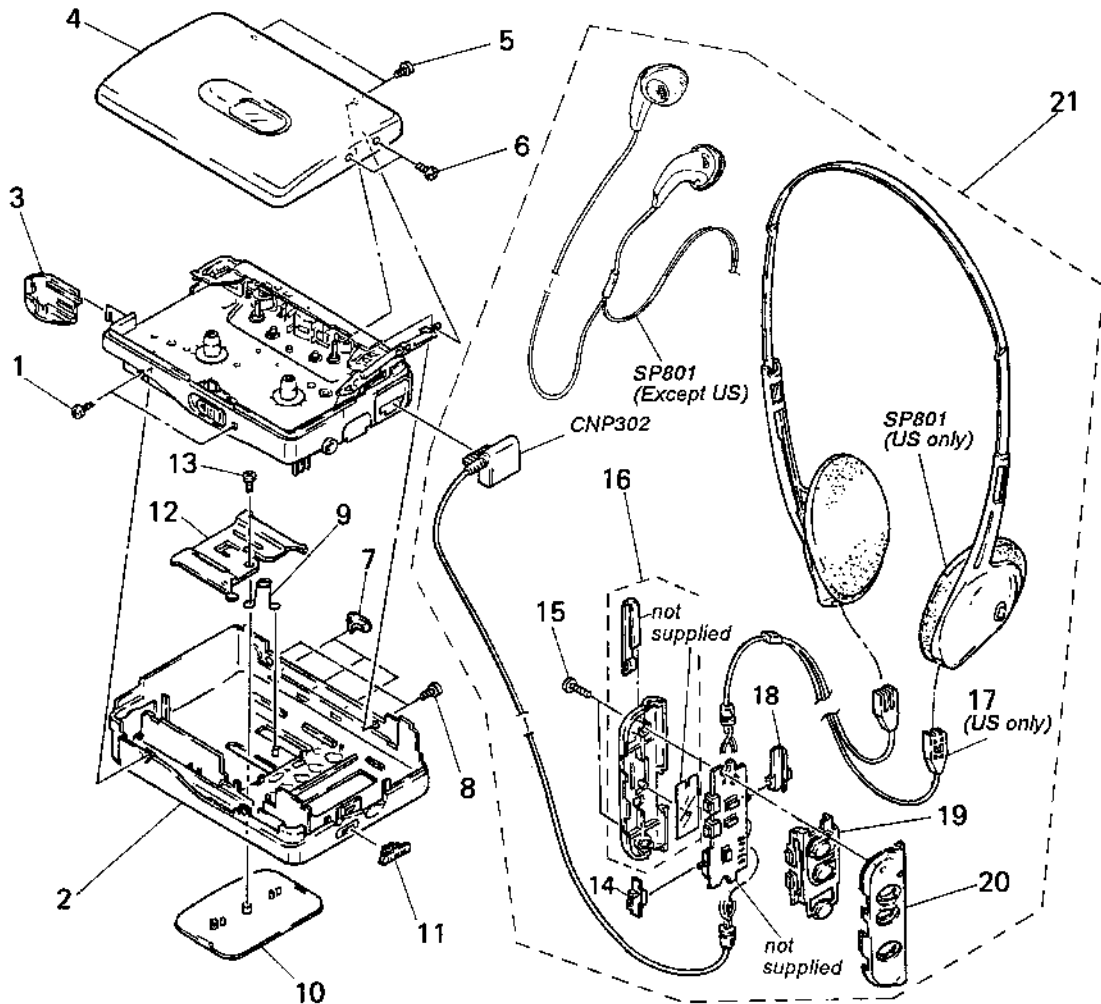

Ref. No.	Part No.	Description	Remark
1	3-704-197-33	SCREW (M1.4X3.0), LOCKING	
2	X-3366-714-1	CABINET ASSY (CF-2) (G, AEP, UK, E, IT, EA, JE)	
2	X-3366-718-1	CABINET ASSY (CF-2-U) (US, CND)	
3	3-388-916-01	LID, BATTERY CASE (CF-2)	
4	X-3366-676-1	LID ASSY (CF-2), CASSETTE (US, CND, E, JE)	
4	X-3366-716-1	LID ASSY (CF-2), CASSETTE (G, AEP, UK, IT, EA, )	
5	3-385-630-31	SCREW (M1.4)	
6	3-704-197-82	SCREW (M1.4X5.0), LOCKING	
7	3-388-914-01	KNOB (EQ)	
8	3-704-197-13	SCREW (M1.4X2.0), LOCKING	
9	3-376-261-01	SPRING (COVER), SLIDE	
10	3-388-942-01	COVER, HOLD	
11	3-388-915-01	KNOB (L/D)	


Ref. No.	Part No.	Description	Remark
12	3-388-946-01	SPACER, HOLD	
13	3-318-382-61	SCREW (1.7X2.5), TAPPING	
14	3-378-324-01	KNOB (B), REMOTE CONTROL	
15	3-318-203-11	SCREW (B1.7X6), TAPPING	
16	X-3364-909-5	CASE (LOWER) ASSY	
17	1-690-764-11	CORD (WITH CONNECTOR) (US)	
18	3-378-325-01	KNOB (A), REMOTE CONTROL	
19	3-378-328-02	BUTTON	
20	3-378-326-21	CASE, UPPER (US)	
20	3-378-326-31	CASE, UPPER (EXCEPT, US)	
21	A-3042-094-A	REMOTE CONTROL COMPLETE ASSY (US)	
21	A-3042-104-A	REMOTE CONTROL COMPLETE ASSY (EXCEPT US)	
CNP302	1-690-927-21	CORD (WITH PLUG)	
SP801	8-953-341-91	HEADPHONE MDR-14/1 SET (US)	
SP801	8-953-555-90	HEADPHONE MDR-E741PT2 SET (EXCEPT US)	

(2) MECHANISM SECTION-1  
(MF-WMFX52-60)

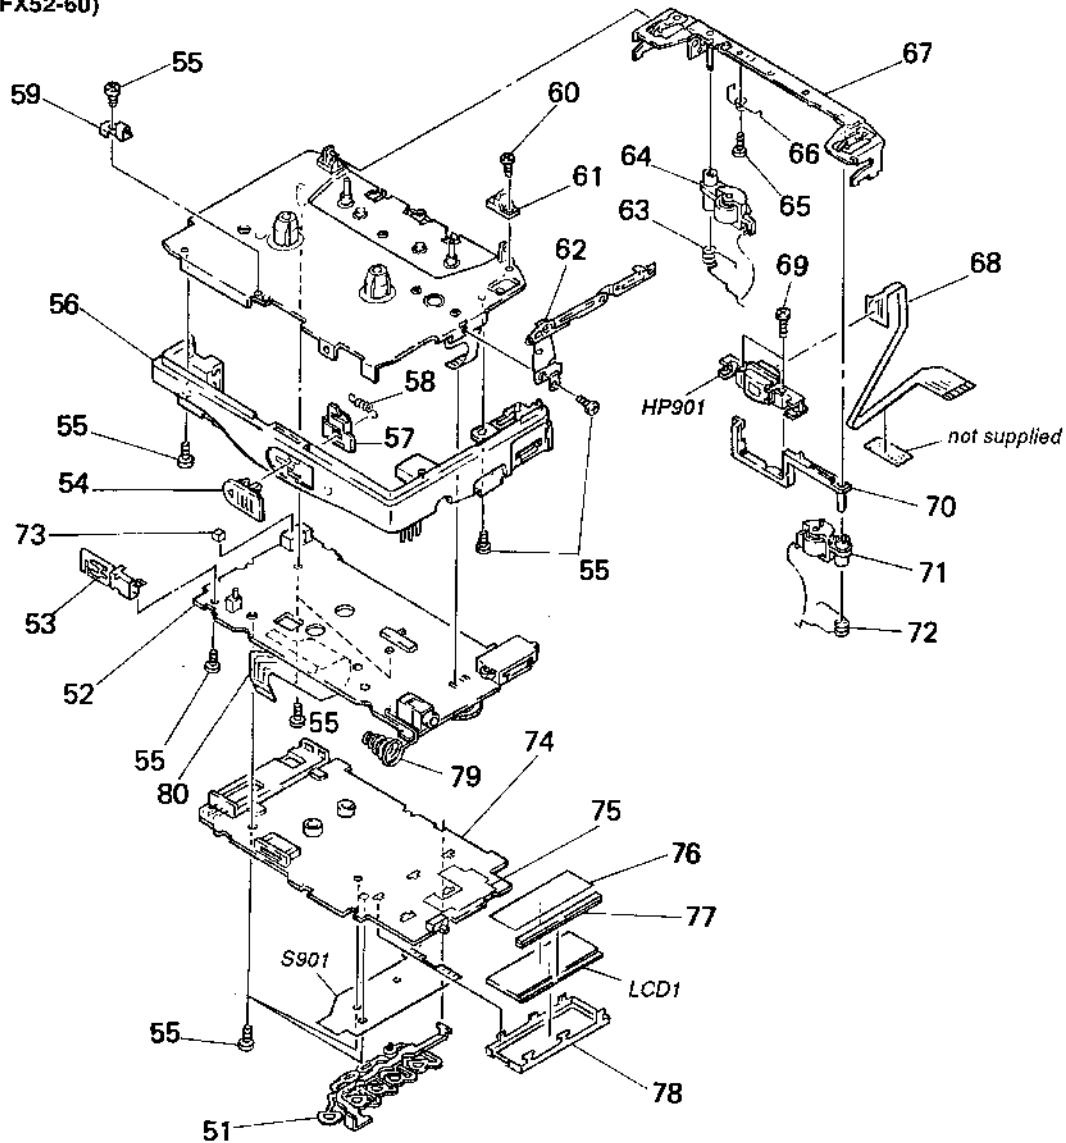

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	3-388-945-01	BUTTON (CF-2), CONTROL		* 70	3-386-646-01	LEVER, HEAD	
52	A-3016-383-A	AUDIO BOARD, COMPLETE		71	X-3366-296-1	PINCH LEVER (R) ASSY	
53	X-3366-675-1	TERMINAL ASSY, BATTERY		72	3-386-685-01	SPRING (PINCH R)	
54	3-388-929-01	KNOB (OPEN)		73	3-831-441-11	CUSHION (B)	
55	3-704-197-11	SCREW (M1.4X2.0), LOCKING		74	A-3016-384-A	TUNER BOARD, COMPLETE (US, CND)	
56	3-388-928-11	ORNAMENT, REEL		74	A-3016-394-A	TUNER BOARD, COMPLETE (IT)	
57	3-388-930-01	SLIDER, OPEN		74	A-3016-396-A	TUNER BOARD, COMPLETE (G, AEP, UK, E, EA, JE)	
58	3-388-931-01	SPRING, TENSION		75	1-648-462-11	SHIELD FLEXIBLE BOARD	
59	3-388-920-01	SPRING, CASSETTE RETAINER		76	3-388-936-11	SPACER, LCD	
60	3-704-197-21	SCREW (M1.4X2.5), LOCKING		77	1-537-537-11	CONDUCTIVE BOARD, CONNECTION	
61	3-386-704-01	GUIDE (B), HOLDER		78	3-388-940-01	BRACKET, LCD	
62	X-3366-673-1	ARM ASSY, CLICK		79	3-388-927-01	SPRING, BATTERY COIL	
63	3-386-684-01	SPRING (PINCH N)		80	1-648-190-11	TUNER FLEXIBLE BOARD	
64	X-3366-298-1	PINCH LEVER (N) ASSY		HP901	1-500-046-11	HEAD, MAGNETIC (PLAYBACK)	
65	7-627-553-17	PRECISION SCREW -P 2X2 TYPE 3		LCD1	1-810-098-11	DISPLAY PANEL, LIQUID CRYSTAL	
66	3-386-683-01	SPRING (H)		S901	1-467-137-11	SWITCH UNIT (TUNE-, TUNE+, ENTER, ■, ◀▶, FF/PRESET+, REW/PRESET-, BAND/RADIO ON)	
67	X-3366-299-1	HOLDER ASSY					
68	1-648-954-11	HEAD FLEXIBLE BOARD					
69	3-704-413-31	SCREW (M1.4X7.2)					

(3) MECHANISM SECTION-2  
(MF-WMF52-60)

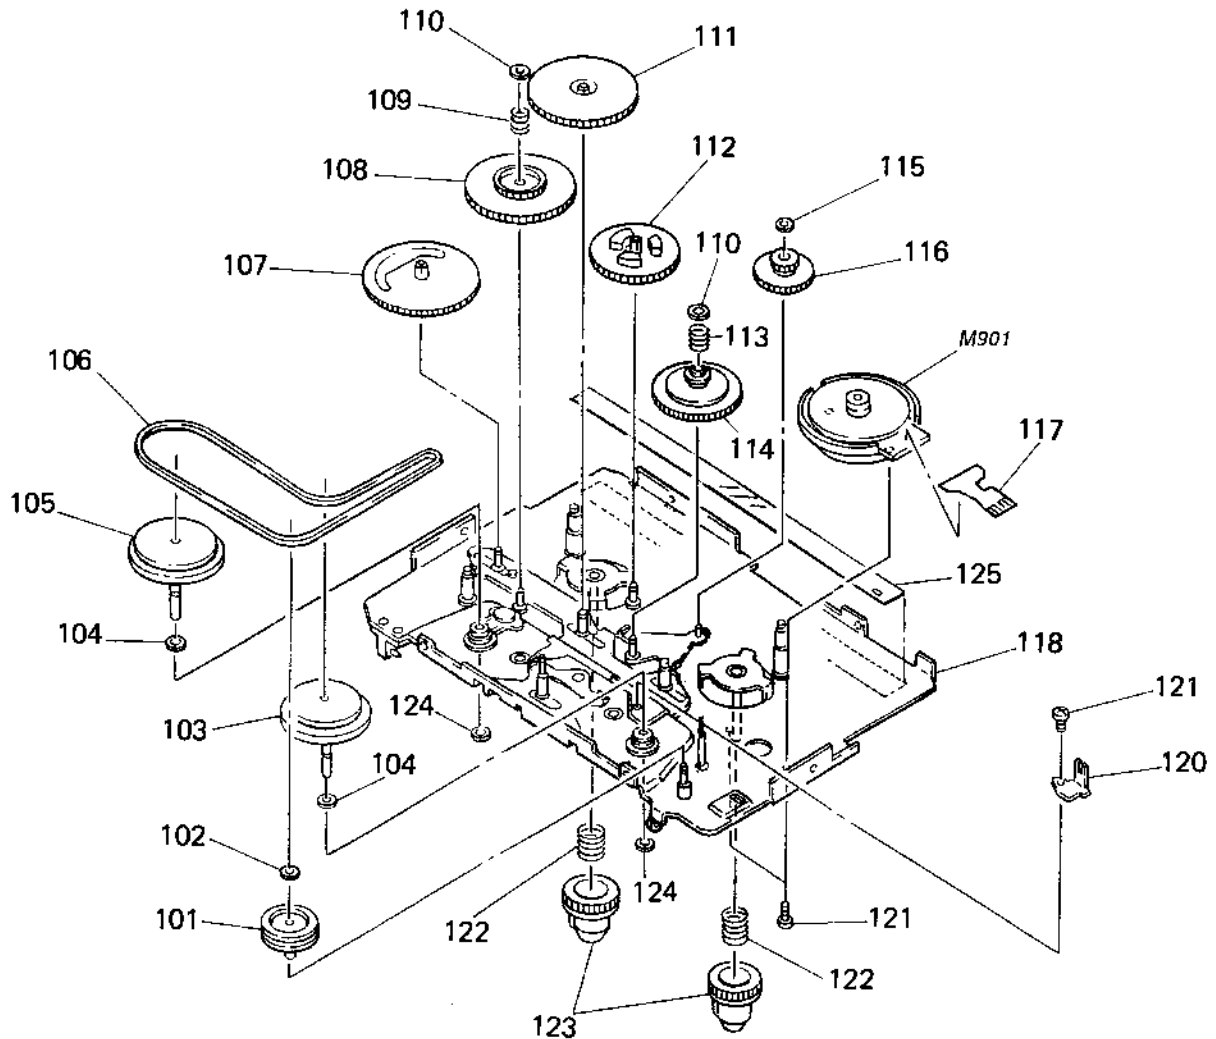

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	3-386-711-01	PULLEY (REVERSE)		114	X-3366-293-1	CLUTCH ASSY	
102	3-338-645-21	WASHER (0.8-2.5)		115	3-338-645-31	WASHER (0.8-2.5)	
103	X-3366-297-1	WHEEL (R) ASSY, CAPSTAN		116	3-386-632-01	GEAR (D)	
104	3-386-694-01	WASHER		117	1-648-189-11	MOTOR FLEXIBLE BOARD	
105	X-3366-294-1	WHEEL (N) ASSY, CAPSTAN		118	X-3366-760-1	CHASSIS ASSY (BCF)	
106	3-388-079-01	BELT		120	3-388-918-01	LEVER, SELECTION	
107	3-386-852-01	GEAR (CAM)		121	3-349-825-41	SCREW	
108	3-386-631-01	GEAR (A)		122	3-386-662-01	SPRING, COMPRESSION	
109	3-904-228-01	SPRING, COMPRESSION		123	3-386-634-01	GEAR (REEL)	
110	3-348-953-11	WASHER		124	3-325-394-01	WASHER, STOPPER	
111	3-386-691-01	GEAR (B)		* 125	3-388-921-01	SHEET, INSULATING	
112	3-389-513-01	GEAR (PH)		M901	1-698-124-11	MOTOR, DC	
113	3-904-227-01	SPRING, COMPRESSION					

## SECTION 7

### ELECTRICAL PARTS LIST

#### AUDIO

**NOTE:**

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS  
All resistors are in ohms.  
METAL: Metal-film resistor.  
METAL OXIDE: Metal oxide-film resistor.  
F: nonflammable

- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS  
In each case,  $\mu$ :  $\mu$ , for example:  
 $\mu A$  ..  $\mu A$ ..  $\mu PA$ ..  $\mu PA$ ..  
 $\mu PB$ ..  $\mu PB$ ..  $\mu PC$ ..  $\mu PC$ ..  $\mu PD$ ..  $\mu PD$ ..
- CAPACITORS  
 $\mu F$ :  $\mu F$
- COILS  
 $\mu H$ :  $\mu H$

- Abbreviations  
CND : Canadian Model  
G : Germany Model  
IT : Italian Model  
EA : Saudi Arabia Model  
JE : Tourist Model

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark		
	A-3016-383-A	AUDIO BOARD, COMPLETE *****			
	1-648-190-11	TUNER FLEXIBLE BOARD			
*	3-329-460-01	SPACER			
	3-388-927-01	SPRING, BATTERY COIL			
	3-704-197-11	SCREW (M1.4X2.0), LOCKING			
< CAPACITOR >					
C101	1-164-473-11	CERAMIC CHIP 820PF	10%	50V	
C102	1-164-473-11	CERAMIC CHIP 820PF	10%	50V	
C103	1-164-172-11	CERAMIC CHIP 0.0056 $\mu$ F	10%	25V	
C104	1-135-201-11	TANTALUM CHIP 10 $\mu$ F	20%	4V	
C105	1-164-234-11	CERAMIC CHIP 1 $\mu$ F		10V	
C106	1-162-968-11	CERAMIC CHIP 0.0047 $\mu$ F	10%	50V	
C107	1-135-176-21	TANTALUM CHIP 0.68 $\mu$ F	10%	20V	
C108	1-164-677-11	CERAMIC CHIP 0.033 $\mu$ F	10%	16V	
C109	1-163-809-11	CERAMIC CHIP 0.047 $\mu$ F	10%	25V	
C110	1-162-969-11	CERAMIC CHIP 0.0068 $\mu$ F	10%	25V	
C111	1-164-234-11	CERAMIC CHIP 1 $\mu$ F		10V	
C112	1-162-966-11	CERAMIC CHIP 0.0022 $\mu$ F	10%	50V	
C113	1-164-234-11	CERAMIC CHIP 1 $\mu$ F		10V	
C114	1-162-962-11	CERAMIC CHIP 470PF	10%	50V	
C201	1-164-473-11	CERAMIC CHIP 820PF	10%	50V	
C202	1-164-473-11	CERAMIC CHIP 820PF	10%	50V	
C203	1-164-172-11	CERAMIC CHIP 0.0056 $\mu$ F	10%	25V	
C204	1-135-201-11	TANTALUM CHIP 10 $\mu$ F	20%	4V	
C205	1-164-234-11	CERAMIC CHIP 1 $\mu$ F		10V	
C206	1-162-968-11	CERAMIC CHIP 0.0047 $\mu$ F	10%	50V	
C207	1-135-176-21	TANTALUM CHIP 0.68 $\mu$ F	10%	20V	
C208	1-164-677-11	CERAMIC CHIP 0.033 $\mu$ F	10%	16V	
C209	1-163-809-11	CERAMIC CHIP 0.047 $\mu$ F	10%	25V	
C210	1-162-969-11	CERAMIC CHIP 0.0068 $\mu$ F	10%	25V	
C211	1-164-234-11	CERAMIC CHIP 1 $\mu$ F		10V	
C212	1-162-966-11	CERAMIC CHIP 0.0022 $\mu$ F	10%	50V	
C213	1-164-234-11	CERAMIC CHIP 1 $\mu$ F		10V	
C214	1-162-962-11	CERAMIC CHIP 470PF	10%	50V	

Ref. No.	Part No.	Description	Remark		
C301	1-164-234-11	CERAMIC CHIP 1 $\mu$ F		10V	
C303	1-124-778-00	ELECT CHIP 22 $\mu$ F	20%	6.3V	
C304	1-124-778-00	ELECT CHIP 22 $\mu$ F	20%	6.3V	
C305	1-164-489-11	CERAMIC CHIP 0.22 $\mu$ F	10%	16V	
C306	1-164-004-11	CERAMIC CHIP 0.1 $\mu$ F	10%	25V	
C307	1-126-602-11	ELECT CHIP 3.3 $\mu$ F	20%	50V	
C308	1-126-601-11	ELECT CHIP 2.2 $\mu$ F	20%	50V	
C309	1-164-004-11	CERAMIC CHIP 0.1 $\mu$ F	10%	25V	
C310	1-126-601-11	ELECT CHIP 2.2 $\mu$ F	20%	50V	
C311	1-164-004-11	CERAMIC CHIP 0.1 $\mu$ F	10%	25V	
C312	1-126-604-11	ELECT 10 $\mu$ F	20%	16V	
C313	1-162-964-11	CERAMIC CHIP 0.001 $\mu$ F	10%	50V	
C316	1-126-246-11	ELECT CHIP 220 $\mu$ F	20%	4V	
C317	1-126-607-11	ELECT CHIP 47 $\mu$ F	20%	4V	
C318	1-124-778-00	ELECT CHIP 22 $\mu$ F	20%	6.3V	
C320	1-163-038-00	CERAMIC CHIP 0.1 $\mu$ F		25V	
C321	1-164-156-11	CERAMIC CHIP 0.1 $\mu$ F		25V	
C322	1-163-989-11	CERAMIC CHIP 0.033 $\mu$ F	10%	25V	
C323	1-162-957-11	CERAMIC CHIP 220PF	5%	50V	
C601	1-135-073-00	TANTALUM CHIP 0.33 $\mu$ F	10%	35V	
C602	1-135-145-11	TANTALUM CHIP 0.47 $\mu$ F	10%	35V	
C603	1-163-809-11	CERAMIC CHIP 0.047 $\mu$ F	10%	25V	
C604	1-128-049-11	ELECT CHIP 1 $\mu$ F	0	50V	
C605	1-164-489-11	CERAMIC CHIP 0.22 $\mu$ F	10%	16V	
C606	1-164-489-11	CERAMIC CHIP 0.22 $\mu$ F	10%	16V	
C607	1-164-344-11	CERAMIC CHIP 0.068 $\mu$ F	10%	25V	
C608	1-164-156-11	CERAMIC CHIP 0.1 $\mu$ F		25V	
C609	1-164-156-11	CERAMIC CHIP 0.1 $\mu$ F		25V	
C610	1-164-156-11	CERAMIC CHIP 0.1 $\mu$ F		25V	
C611	1-135-149-21	TANTALUM CHIP 2.2 $\mu$ F	20%	10V	
< DIODE >					
D101	8-719-422-37	DIODE MA8051			
D102	8-719-422-37	DIODE MA8051			
D201	8-719-422-37	DIODE MA8051			
D301	8-719-800-76	DIODE 1SS226			

Ref. No.	Part No.	Description	Remark
D302	8-719-422-37	DIODE MA8051	
D303	8-719-422-37	DIODE MA8051	
D304	8-719-422-37	DIODE MA8051	
D305	8-719-422-37	DIODE MA8051	
< IC >			
IC301	8-759-161-54	IC LA4582M	
IC302	8-759-701-07	IC NJM2063AM	
IC601	8-759-996-13	IC TLP326ADB	
< JACK >			
J301	1-565-287-11	JACK (PHONES)	
J302	1-573-794-21	JACK (headphones/REMOTE)	
J303	1-750-061-11	JACK, DC (POLARITY UNIFIED TYPE)	
< JUMPER RESISTOR >			
JR302	1-216-864-11	METAL CHIP	0 5% 1/16W
< COIL >			
L101	1-410-997-31	INDUCTOR CHIP	2.2uH
L201	1-410-997-31	INDUCTOR CHIP	2.2uH
L301	1-410-997-31	INDUCTOR CHIP	2.2uH
L302	1-410-997-31	INDUCTOR CHIP	2.2uH
L303	1-410-997-31	INDUCTOR CHIP	2.2uH
L304	1-410-997-31	INDUCTOR CHIP	2.2uH
L501	1-412-031-11	INDUCTOR CHIP	47uH
< PHOTO INTERRUPTER >			
PH701	8-759-710-38	IC NJL5161K-F1-B	
< TRANSISTOR >			
Q302	8-729-403-17	TRANSISTOR XN1215	
Q303	8-729-807-87	TRANSISTOR 2SB1295-UL6	
Q304	8-729-402-32	TRANSISTOR 2SD1819A-R	
Q305	8-729-421-26	TRANSISTOR UN5216	
Q306	8-729-403-17	TRANSISTOR XN1215	
Q307	8-729-422-41	TRANSISTOR XN1114	
Q308	8-729-420-16	TRANSISTOR XN1214	
Q310	8-729-420-53	TRANSISTOR UN5115	
Q311	8-729-420-50	TRANSISTOR UN5215	
Q312	8-729-403-17	TRANSISTOR XN1215	
Q313	8-729-602-36	TRANSISTOR 2SA1602-F	
Q601	8-729-141-48	TRANSISTOR 2SB624-BV345	
Q602	8-729-141-48	TRANSISTOR 2SB624-BV345	
Q603	8-729-402-32	TRANSISTOR 2SD1819A-R	
Q604	8-729-141-48	TRANSISTOR 2SB624-BV345	
Q701	8-729-421-26	TRANSISTOR UN5216	

Ref. No.	Part No.	Description	Remark
< RESISTOR >			
R101	1-216-845-11	METAL CHIP	100K 5% 1/16W
R102	1-216-845-11	METAL CHIP	100K 5% 1/16W
R103	1-216-855-11	METAL CHIP	680K 5% 1/16W
R104	1-216-836-11	METAL CHIP	18K 5% 1/16W
R105	1-216-834-11	METAL CHIP	12K 5% 1/16W
R106	1-218-484-11	METAL GLAZE	750 5% 1/16W
R107	1-216-841-11	METAL CHIP	47K 5% 1/16W
R108	1-216-827-11	METAL CHIP	3.3K 5% 1/16W
R109	1-218-448-11	METAL GLAZE	430K 5% 1/16W
R110	1-216-832-11	METAL CHIP	8.2K 5% 1/16W
R111	1-216-833-11	METAL CHIP	10K 5% 1/16W
R113	1-216-815-11	METAL CHIP	330 5% 1/16W
R114	1-216-793-11	METAL GLAZE	4.7 5% 1/16W
R201	1-216-845-11	METAL CHIP	100K 5% 1/16W
R202	1-216-845-11	METAL CHIP	100K 5% 1/16W
R203	1-216-855-11	METAL CHIP	680K 5% 1/16W
R204	1-216-836-11	METAL CHIP	18K 5% 1/16W
R205	1-216-834-11	METAL CHIP	12K 5% 1/16W
R206	1-218-484-11	METAL GLAZE	750 5% 1/16W
R207	1-216-841-11	METAL CHIP	47K 5% 1/16W
R208	1-216-827-11	METAL CHIP	3.3K 5% 1/16W
R209	1-218-448-11	METAL GLAZE	430K 5% 1/16W
R210	1-216-832-11	METAL CHIP	8.2K 5% 1/16W
R211	1-216-833-11	METAL CHIP	10K 5% 1/16W
R213	1-216-815-11	METAL CHIP	330 5% 1/16W
R214	1-216-793-11	METAL GLAZE	4.7 5% 1/16W
R301	1-216-847-11	METAL CHIP	150K 5% 1/16W
R302	1-216-839-11	METAL GLAZE	33K 5% 1/16W
R303	1-216-845-11	METAL CHIP	100K 5% 1/16W
R304	1-218-448-11	METAL GLAZE	430K 5% 1/16W
R305	1-216-835-11	METAL CHIP	15K 5% 1/16W
R306	1-218-292-11	METAL GLAZE	20K 5% 1/16W
R307	1-216-826-11	METAL CHIP	2.7K 5% 1/16W
R308	1-216-833-11	METAL CHIP	10K 5% 1/16W
R309	1-216-833-11	METAL CHIP	10K 5% 1/16W
R310	1-216-813-11	METAL CHIP	220 5% 1/16W
R311	1-216-839-11	METAL GLAZE	33K 5% 1/16W
R312	1-216-821-11	METAL CHIP	1K 5% 1/16W
R313	1-216-025-00	METAL GLAZE	100 5% 1/16W
R314	1-216-861-11	METAL CHIP	2.2M 5% 1/16W
R316	1-216-841-11	METAL CHIP	47K 5% 1/16W
R317	1-216-845-11	METAL CHIP	100K 5% 1/16W
R318	1-216-845-11	METAL CHIP	100K 5% 1/16W
R601	1-216-845-11	METAL CHIP	100K 5% 1/16W
R602	1-216-833-11	METAL CHIP	10K 5% 1/16W
R603	1-216-853-11	METAL CHIP	470K 5% 1/16W
R604	1-216-835-11	METAL CHIP	15K 5% 1/16W

**AUDIO**

**REMOTE CONTROL**

**TUNER**

Ref. No.	Part No.	Description	Remark		
R605	1-216-793-11	METAL GLAZE	4.7	5%	1/16W
R606	1-216-344-11	METAL GLAZE	7.5K	5%	1/16W
R607	1-216-808-11	METAL CHIP	100	5%	1/16W
R608	1-216-809-11	METAL CHIP	100	5%	1/16W
R609	1-216-843-11	METAL CHIP	68K	5%	1/16W
R610	1-216-821-11	METAL CHIP	1K	5%	1/16W
R611	1-216-809-11	METAL CHIP	100	5%	1/16W
R703	1-216-847-11	METAL CHIP	150K	5%	1/16W
R705	1-216-815-11	METAL CHIP	330	5%	1/16W
R706	1-216-845-11	METAL CHIP	100K	5%	1/16W
R707	1-216-845-11	METAL CHIP	100K	5%	1/16W
R708	1-216-845-11	METAL CHIP	100K	5%	1/16W
R709	1-216-845-11	METAL CHIP	100K	5%	1/16W
< VARIABLE RESISTOR >					
RV301	1-223-414-11	RES, VAR, CARBON			
RV601	1-237-723-11	RES, ADJ, CARBON 4.7K			
< SWITCH >					
S301	1-571-277-31	SWITCH, SLIDE (TAPE)			
S302	1-571-506-41	SWITCH, SLIDE (MEGA BASS)			
S303	1-571-275-41	SWITCH, SLIDE (DOLBY NR)			
S701	1-692-509-11	SWITCH, PUSH (TAPE)			
S702	1-692-370-11	SWITCH, SLIDE (MD MODE)			
*****					
*	1-645-858-11	REMOTE CONTROL BOARD	*****		
	1-690-764-11	CORD (WITH CONNECTOR) (US)			
< CONNECTOR >					
CNP302	1-690-927-21	CORD (WITH PLUG)			
< JUMPER RESISTOR >					
JR851	1-216-295-00	METAL CHIP	0	5%	1/10W
JR852	1-216-295-00	METAL CHIP	0	5%	1/10W
JR853	1-216-295-00	METAL CHIP	0	5%	1/10W
< RESISTOR >					
R851	1-216-651-11	METAL CHIP	1K	0.5%	1/10W
R852	1-216-657-11	METAL CHIP	1.8K	0.5%	1/10W
R853	1-216-663-11	METAL CHIP	3.3K	0.5%	1/10W
R854	1-216-671-11	METAL CHIP	6.8K	0.5%	1/10W
R855	1-216-071-00	METAL CHIP (EXCEPT US)	8.2K	5%	1/10W
R855	1-216-095-00	METAL CHIP	82K	5%	1/10W (US)
R856	1-216-071-00	METAL CHIP (EXCEPT US)	8.2K	5%	1/10W

Ref. No.	Part No.	Description	Remark		
R856	1-216-095-00	METAL CHIP	82K	5%	1/10W (US)
R857	1-216-089-00	METAL CHIP (EXCEPT US)	47K	5%	1/10W
R857	1-216-105-00	METAL CHIP	220K	5%	1/10W (US)
< VARIABLE RESISTOR >					
RV851	1-241-854-11	RES, VAR, CARBON 500/500 (VOL)			
< SWITCH >					
S851	1-570-675-11	SWITCH, SLIDE (HOLD)			
S852	1-570-386-11	SWITCH, SLIDE (AVLS)			
S853	1-572-473-11	SWITCH, TACTIL (■/RADIO OFF)			
S854	1-572-473-11	SWITCH, TACTIL (◀▶)			
S855	1-570-204-21	SWITCH, KEY BOARD (FF/ PRESET +)			
S856	1-570-204-21	SWITCH, KEY BOARD (REW/ PRESET -)			
S857	1-572-473-11	SWITCH, TACTIL (BAND/ON)			
*****					
A-3016-384-A TUNER BOARD, COMPLETE (US, CND) *****					
A-3016-394-A TUNER BOARD, COMPLETE (IT) *****					
A-3016-396-A TUNER BOARD, COMPLETE (G, AEP, UK, E, EA, JE) *****					
1-537-537-11 CONDUCTIVE BOARD, CONNECTION					
1-648-462-11 SHIELD FLEXIBLE BOARD					
3-388-936-11 SPACER, LCD					
*	3-388-940-01 BRACKET, LCD				
< CAPACITOR >					
C1	1-162-953-11	CERAMIC CHIP	100PF	5%	50V
C2	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C3	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C4	1-135-151-21	TANTALUM CHIP	4.7uF	20%	4V
C5	1-164-346-11	CERAMIC CHIP	1uF		16V
C6	1-162-953-11	CERAMIC CHIP	100PF	5%	50V
C7	1-135-202-21	TANTAL. CHIP	22uF	20%	4V
C8	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C9	1-135-202-21	TANTAL. CHIP	22uF	20%	4V
C11	1-162-941-11	CERAMIC CHIP	10PF	0.5PF	50V
C12	1-135-202-21	TANTAL. CHIP	22uF	20%	4V
C13	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C14	1-164-362-11	CERAMIC CHIP	470PF	5%	50V
C15	1-162-946-11	CERAMIC CHIP	27PF	5%	50V
C16	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C17	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C18	1-164-461-11	CERAMIC CHIP	91PF	5%	50V



# TUNER

Ref. No.	Part No.	Description	Remark		
C17	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C18	1-164-461-11	CERAMIC CHIP	91PF	5%	50V
C19	1-162-906-91	CERAMIC CHIP	1.5PF	0.25PF	50V
C20	1-162-934-11	CERAMIC CHIP	3PF	0.25PF	50V
C21	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C22	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C23	1-162-932-11	CERAMIC CHIP	2PF	0.25PF	50V
C24	1-164-362-11	CERAMIC CHIP	470PF	5%	50V
C25	1-162-934-11	CERAMIC CHIP	3PF	0.25PF	50V
C26	1-163-063-00	CERAMIC CHIP	0.022uF	10%	50V
C27	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C30	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C31	1-162-957-11	CERAMIC CHIP	220PF	5%	50V
C32	1-164-005-11	CERAMIC CHIP	0.47uF		25V
C33	1-164-362-11	CERAMIC CHIP	470PF	5%	50V
C40	1-135-151-21	TANTALUM CHIP	4.7uF	20%	4V
C41	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C42	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C43	1-164-005-11	CERAMIC CHIP	0.47uF		25V
C44	1-164-005-11	CERAMIC CHIP	0.47uF		25V
C45	1-164-005-11	CERAMIC CHIP	0.47uF		25V
C46	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C47	1-164-471-11	CERAMIC CHIP	680PF	5%	50V
C48	1-135-202-21	TANTAL. CHIP	22uF	20%	4V
C49	1-164-362-11	CERAMIC CHIP	470PF	5%	50V
C50	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C51	1-164-237-11	CERAMIC CHIP	16PF	5%	50V
C52	1-164-238-11	CERAMIC CHIP	36PF	5%	50V
C53	1-124-576-11	ELECT	220uF	20%	4V
C54	1-135-202-21	TANTAL. CHIP	22uF	20%	4V
C56	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C57	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C58	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C61	1-162-953-11	CERAMIC CHIP	100PF	5%	50V
C62	1-164-362-11	CERAMIC CHIP	470PF	5%	50V
C63	1-162-568-11	CERAMIC CHIP	0.33uF	10%	16V
C64	1-164-346-11	CERAMIC CHIP	1uF		16V
C65	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C66	1-164-005-11	CERAMIC CHIP	0.47uF		25V
C67	1-162-941-11	CERAMIC CHIP	10PF	0.5PF	50V
C68	1-162-941-11	CERAMIC CHIP	10PF	0.5PF	50V
C69	1-135-151-21	TANTALUM CHIP	4.7uF	20%	4V
C70	1-135-158-21	TANTALUM CHIP	15uF	20%	4V
C71	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C72	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C75	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C77	1-124-576-11	ELECT	220uF	20%	4V
C78	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C80	1-162-957-11	CERAMIC CHIP	220PF	5%	50V

Ref. No.	Part No.	Description	Remark
< FILTER >			
CF1	1-579-577-11	FILTER, CERAMIC	
CF2	1-579-974-11	FILTER, CERAMIC	
CF3	1-579-974-11	FILTER, CERAMIC	
CF4	1-579-578-11	FILTER, CERAMIC	
< CONNECTOR >			
CN1	1-573-361-11	CONNECTOR, FFC/FPC 21P	
< TRIMMER >			
CT1	1-141-327-11	CAP, VAR, TRIMMER (CHIP TYPE)	
CT2	1-141-327-11	CAP, VAR, TRIMMER (CHIP TYPE)	
< DIODE >			
D1	8-719-981-25	DIODE KV1450	
D2	8-719-981-25	DIODE KV1450	
D3	8-719-951-05	DIODE KV1560	
D4	8-719-421-27	DIODE MA728	
D5	8-719-106-62	DIODE RD11M-B2	
D6	8-719-404-46	DIODE MA110	
D7	8-719-938-75	DIODE SB05-05CP	
D8	8-719-420-51	DIODE MA729	
D9	8-719-800-76	DIODE 1SS226	
D10	8-719-404-46	DIODE MA110	
D12	8-719-404-46	DIODE MA110 (IT)	
D13	8-719-404-46	DIODE MA110 (G, AEP, UK, E, EA, JE)	
D14	8-719-918-65	LED GL-1PR102	
D15	8-719-404-46	DIODE MA110	
D16	8-719-404-46	DIODE MA110	
D17	8-719-404-46	DIODE MA110	
D18	8-719-404-46	DIODE MA110	
D19	8-719-404-46	DIODE MA110	
D20	8-719-404-46	DIODE MA110	
D21	8-719-404-46	DIODE MA110	
D22	8-719-404-46	DIODE MA110	
D27	8-719-404-46	DIODE MA110	
D28	8-719-404-46	DIODE MA110	
D29	8-719-404-46	DIODE MA110	
D30	8-719-174-06	DIODE MA110	
< FILTER >			
FL1	1-236-921-21	FILTER, BAND PASS	
< IC >			
IC1	8-752-065-30	IC CXA1111N-T4	
IC2	8-759-804-98	IC LA3335M	
IC3	8-759-174-06	IC MPD1724GB-635-1A7	
IC4	8-759-947-95	IC S-8051HN-CD-S	

# TUNER

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
IC5	8-752-051-55	IC CXA1405AM		R8	1-216-025-00	METAL CHIP	100 5% 1/10W
		< JUMPER RESISTOR >		R9	1-216-853-11	METAL CHIP	470K 5% 1/16W
JR1	1-216-864-11	METAL CHIP	0 5% 1/16W	R10	1-216-833-11	METAL CHIP	10K 5% 1/16W
JR2	1-216-864-11	METAL CHIP	0 5% 1/16W	R11	1-216-814-11	METAL CHIP	270 5% 1/16W
JR3	1-216-864-11	METAL CHIP	0 5% 1/16W	R12	1-216-837-11	METAL CHIP	22K 5% 1/16W
JR4	1-216-864-11	METAL CHIP	0 5% 1/16W	R13	1-216-853-11	METAL CHIP	470K 5% 1/16W
JR5	1-216-296-00	METAL CHIP	0 5% 1/8W	R14	1-216-853-11	METAL CHIP	470K 5% 1/16W
JR7	1-216-864-11	METAL CHIP	0 5% 1/16W	R15	1-216-853-11	METAL CHIP	470K 5% 1/16W
JR8	1-216-296-00	METAL CHIP	0 5% 1/8W	R16	1-216-853-11	METAL CHIP	470K 5% 1/16W
		< COIL >		R17	1-216-853-11	METAL CHIP	470K 5% 1/16W
L1	1-501-606-11	ANTENNA, FERRITE-ROD (AM)		R30	1-216-833-11	METAL CHIP	10K 5% 1/16W
L2	1-406-733-11	COIL (RF)		R40	1-216-025-00	METAL CHIP	100 5% 1/10W
L3	1-406-731-11	COIL (OSC)		R41	1-218-291-11	METAL GLAZE	16K 5% 1/16W
L4	1-406-732-11	COIL (OSC)		R42	1-218-291-11	METAL GLAZE	16K 5% 1/16W
L5	1-412-002-31	INDUCTOR CHIP	4.7uH	R43	1-216-236-00	METAL GLAZE	39K 5% 1/8W
L6	1-412-006-31	INDUCTOR CHIP	10uH	R58	1-216-821-11	METAL CHIP	1K 5% 1/16W
L7	1-412-006-31	INDUCTOR CHIP	10uH	R59	1-216-821-11	METAL CHIP	1K 5% 1/16W
		< LIQUID CRYSTAL DISPLAY >		R60	1-216-821-11	METAL CHIP	1K 5% 1/16W
LCD1	1-810-098-11	DISPLAY PANEL, LIQUID CRYSTAL		R61	1-216-821-11	METAL CHIP	1K 5% 1/16W
		< TRANSISTOR >		R62	1-216-857-11	METAL CHIP	1M 5% 1/16W
Q1	8-729-402-42	TRANSISTOR UN5213		R65	1-216-845-11	METAL CHIP	100K 5% 1/16W
Q2	8-729-402-84	TRANSISTOR KN4601		R66	1-216-829-11	METAL CHIP	4.7K 5% 1/16W
Q3	8-729-117-72	TRANSISTOR 2SC4178		R67	1-216-833-11	METAL CHIP	10K 5% 1/16W
Q6	8-729-220-93	TRANSISTOR 2SK209-G		R68	1-216-833-11	METAL CHIP	10K 5% 1/16W
Q7	8-729-602-21	TRANSISTOR 2SC4154		R69	1-216-830-11	METAL CHIP	5.6K 5% 1/16W
Q8	8-729-220-93	TRANSISTOR 2SK209-G		R70	1-216-837-11	METAL CHIP	22K 5% 1/16W
Q9	8-729-602-21	TRANSISTOR 2SC4154		R71	1-216-828-11	METAL CHIP	3.9K 5% 1/16W
Q10	8-729-602-21	TRANSISTOR 2SC4154		R72	1-216-821-11	METAL CHIP	1K 5% 1/16W
Q13	8-729-144-15	TRANSISTOR 2SD2228-D43		R73	1-216-845-11	METAL CHIP	100K 5% 1/16W
Q14	8-729-402-96	TRANSISTOR UN5114		R74	1-216-845-11	METAL CHIP	100K 5% 1/16W
Q15	8-729-921-58	TRANSISTOR DTA144TU		R75	1-216-841-11	METAL CHIP	47K 5% 1/16W
Q16	8-729-921-58	TRANSISTOR DTA144TU		R76	1-216-841-11	METAL CHIP	47K 5% 1/16W
Q17	8-729-921-58	TRANSISTOR DTA144TU		R77	1-216-821-11	METAL CHIP	1K 5% 1/16W
Q18	8-729-921-58	TRANSISTOR DTA144TU		R78	1-216-853-11	METAL CHIP	470K 5% 1/16W
Q19	8-729-921-58	TRANSISTOR DTA144TU		R79	1-216-845-11	METAL CHIP	100K 5% 1/16W
Q20	8-729-921-58	TRANSISTOR DTA144TU		R80	1-216-845-11	METAL CHIP	100K 5% 1/16W
Q21	8-729-921-58	TRANSISTOR DTA144TU		R81	1-216-845-11	METAL CHIP	100K 5% 1/16W
Q22	8-729-420-50	TRANSISTOR UN5215		R82	1-216-668-11	METAL CHIP	5.1K 0.5% 1/10W
Q23	8-729-420-44	TRANSISTOR UN5210		R83	1-218-484-11	METAL CHIP	750 0.5% 1/16W
		< RESISTOR >		R84	1-216-821-11	METAL CHIP	1K 5% 1/16W
R1	1-216-815-11	METAL CHIP	330 5% 1/16W	R85	1-216-828-11	METAL CHIP	3.9K 5% 1/16W
R2	1-216-837-11	METAL CHIP	22K 5% 1/16W	R86	1-216-845-11	METAL CHIP	100K 5% 1/16W
R3	1-216-833-11	METAL CHIP	10K 5% 1/16W	R91	1-216-821-11	METAL CHIP	1K 5% 1/16W
				R92	1-216-821-11	METAL CHIP	1K 5% 1/16W
				R93	1-216-821-11	METAL CHIP	1K 5% 1/16W
				R94	1-216-821-11	METAL CHIP	1K 5% 1/16W
				R95	1-216-815-11	METAL CHIP	330 5% 1/16W
				R96	1-216-821-11	METAL CHIP	1K 5% 1/16W

# TUNER

Ref.No.	Part No.	Description	Remark
		< VARIABLE RESISTOR >	
RV1	1-238-091-11	RES. ADJ. CERMET 22K	
		< SWITCH >	
S5	1-571-275-41	SWITCH, SLIDE (FM SENS OR FM)	
S901	1-467-137-11	SWITCH UNIT (TUNE-, TUNE+, ENTER, ■, ◀▶, FF/PRESET+, REW/PRESET-, BAND/RADIO ON)	
		< TRANSFORMER >	
T1	1-406-734-11	TRANSFORMER, IF	
T2	1-449-021-21	TRANSFORMER, DC-DC CONVERTER	
		< VIBRATOR >	
X1	1-579-615-11	VIBRATOR, CRYSTAL (75KHz)	
*****			
		MISCELLANEOUS	
		*****	
68	1-648-954-11	HEAD FLEXIBLE BOARD	
117	1-648-189-11	MOTOR FLEXIBLE BOARD	
HP901	1-500-046-11	HEAD, MAGNETIC (PLAYBACK)	
M901	1-698-124-11	MOTOR, DC	
*****			
		ACCESSORIES & PACKING MATERIALS	
		*****	
*	3-388-080-01	CUSHION	
*	3-388-090-01	INDIVIDUAL CARTON (US)	
*	3-388-091-01	INDIVIDUAL CARTON (G, AEP, UK, E, EA, JE)	
	3-388-201-01	CASE, CARRYING (CF-1)	
*	3-389-804-01	INDIVIDUAL CARTON (CND)	
*	3-389-805-01	INDIVIDUAL CARTON (IT)	
	3-756-926-11	MANUAL, INSTRUCTION (ENGLISH, FRENCH) (G, AEP, UK, IT)	
	3-756-926-21	MANUAL, INSTRUCTION (ENGLISH) (US)	
	3-756-926-31	MANUAL, INSTRUCTION (ENGLISH, FRENCH) (CND, E, EA, JE)	
	3-756-926-41	MANUAL, INSTRUCTION (SPANISH) (E, EA, JE)	
	3-756-926-51	MANUAL, INSTRUCTION (SPANISH, GERMAN) (G, AEP)	
	3-756-926-61	MANUAL, INSTRUCTION (DUTCH, SWEDISH) (AEP)	
	3-756-926-71	MANUAL, INSTRUCTION (PORTUGUESE, ITALIAN) (AEP)	
	8-953-341-91	HEADPHONE MDR-14/1 SET (US)	
	8-953-555-90	HEADPHONE MDR-E741PT2 SET (EXCEPT US)	
	X-3329-657-1	ATTACHMENT ASSY (EXCEPT US)	

Ref.No.	Part No.	Description	Remark
	A-3042-094-A	REMOTE CONTROL COMPLETE ASSY (WITH HEADPHONE) (US)	
	A-3042-104-A	REMOTE CONTROL COMPLETE ASSY (WITH HEADPHONE) (EXCEPT US)	



# WM-FX56

## SONY SERVICE MANUAL

US Model  
Canadian Model  
AEP Model  
UK Model  
E Model  
Tourist Model

### SUPPLEMENT-1

File this supplement with the service manual.

**Subject : Change of the Audio Board**

The last digit of the number for Audio Board has been changed to-12.


This supplement-1 contains revised PRINTED WIRING BOARD, SCHEMATIC DIAGRAM and ELECTRICAL PARTS LIST.

#### 1. ELECTRICAL PARTS LIST


Page	Ref. No.	FORMER				NEW					
		Part No.	Description			Part No.	Description				
34	<b>AUDIO</b>										
	C103	1-164-172-11	CERAMIC CHIP	0.0056 $\mu$ F	10%	25V	1-162-968-11	CERAMIC CHIP	0.0047 $\mu$ F	10%	25V
	C112	1-162-966-11	CERAMIC CHIP	0.0022 $\mu$ F	10%	50V	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
	C203	1-164-172-11	CERAMIC CHIP	0.0056 $\mu$ F	10%	25V	1-162-968-11	CERAMIC CHIP	0.0047 $\mu$ F	10%	25V
	C212	1-162-966-11	CERAMIC CHIP	0.0022 $\mu$ F	10%	50V	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
	C302						1-164-156-11	CERAMIC CHIP	0.1 $\mu$ F		25V
	C321	1-164-156-11	CERAMIC CHIP	0.1 $\mu$ F		25V	1-162-964-11	CERAMIC CHIP	0.001 $\mu$ F	10%	50V
	C322	1-163-989-11	CERAMIC CHIP	0.0033 $\mu$ F	10%	25V	1-164-489-11	CERAMIC CHIP	0.22 $\mu$ F	10%	16V
	D102	8-719-422-37	DIODE	MA8051							
35	<b>AUDIO</b>										
	R104	1-216-836-11	METAL CHIP	18K	5%	1/16W	1-218-298-11	METAL GLAZE	30K	5%	1/16W
	R105	1-216-834-11	METAL CHIP	12K	5%	1/16W	1-216-833-11	METAL CHIP	10K	5%	1/16W
	R110	1-216-832-11	METAL CHIP	8.2K	5%	1/16W	1-216-834-11	METAL CHIP	12K	5%	1/16W
	R111	1-216-833-11	METAL CHIP	10K	5%	1/16W	1-216-824-11	METAL CHIP	1.8K	5%	1/16W
	R112						1-216-834-11	METAL CHIP	12K	5%	1/16W
	R204	1-216-836-11	METAL CHIP	18K	5%	1/16W	1-218-298-11	METAL GLAZE	30K	5%	1/16W
	R205	1-216-834-11	METAL CHIP	12K	5%	1/16W	1-216-833-11	METAL CHIP	10K	5%	1/16W
	R210	1-216-832-11	METAL CHIP	8.2K	5%	1/16W	1-216-834-11	METAL CHIP	12K	5%	1/16W
	R211	1-216-833-11	METAL CHIP	10K	5%	1/16W	1-216-824-11	METAL CHIP	1.8K	5%	1/16W
R212						1-216-834-11	METAL CHIP	12K	5%	1/16W	
36	<b>AUDIO</b>										
R705	1-216-815-11	METAL CHIP	330	5%	1/16W	1-216-813-11	METAL CHIP	220	5%	1/16W	

Page	Ref. No.	FORMER					NEW				
		Part No.	Description				Part No.	Description			
36	REMOTE										
	R855	1-216-095-00	METAL CHIP 82K (US)	5%	1/10W	1-216-093-00	METAL CHIP 68K (US)	5%	1/10W		
	R855	1-216-071-00	METAL CHIP 8.2K (EXCEPT US)	5%	1/10W	1-216-069-00	METAL CHIP 6.8K (EXCEPT US)	5%	1/10W		
	R856	1-216-095-00	METAL CHIP 82K (US)	5%	1/10W	1-216-093-00	METAL CHIP 68K (US)	5%	1/10W		
	R856	1-216-071-00	METAL CHIP 8.2K (EXCEPT US)	5%	1/10W	1-216-069-00	METAL CHIP 6.8K (EXCEPT US)	5%	1/10W		
	R857	1-216-089-00	METAL CHIP 220K (US ONLY)	5%	1/10W	1-216-099-00	METAL CHIP 120K	5%	1/10W		
37	TUNER IC4	8-759-947-95	IC S-8051HN-CD-S			8-759-166-42	IC S-80718HN-UF-T1				



2. CHANGED SCHEMATIC DIAGRAMS  
EXCEPT FOR AUDIO BOARD  
SECTION 5-3. SCHEMATIC DIAGRAM (TUNER)  
• Page 18, Location : H-11 to E-12

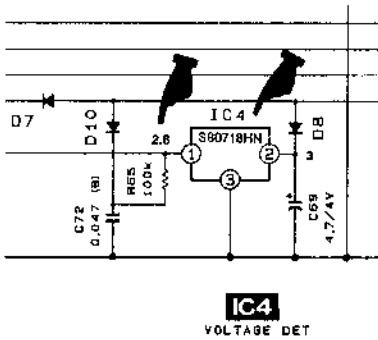

SECTION 5-6. SCHEMATIC DIAGRAM (REMOTE)  
• Page 27

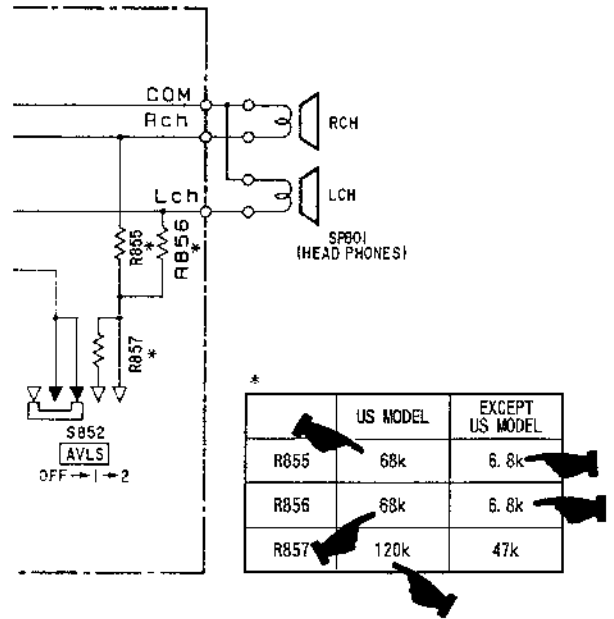

3. AUDIO BOARD SCHEMATIC DIAGRAM AND PRINTED WIRING BOARD

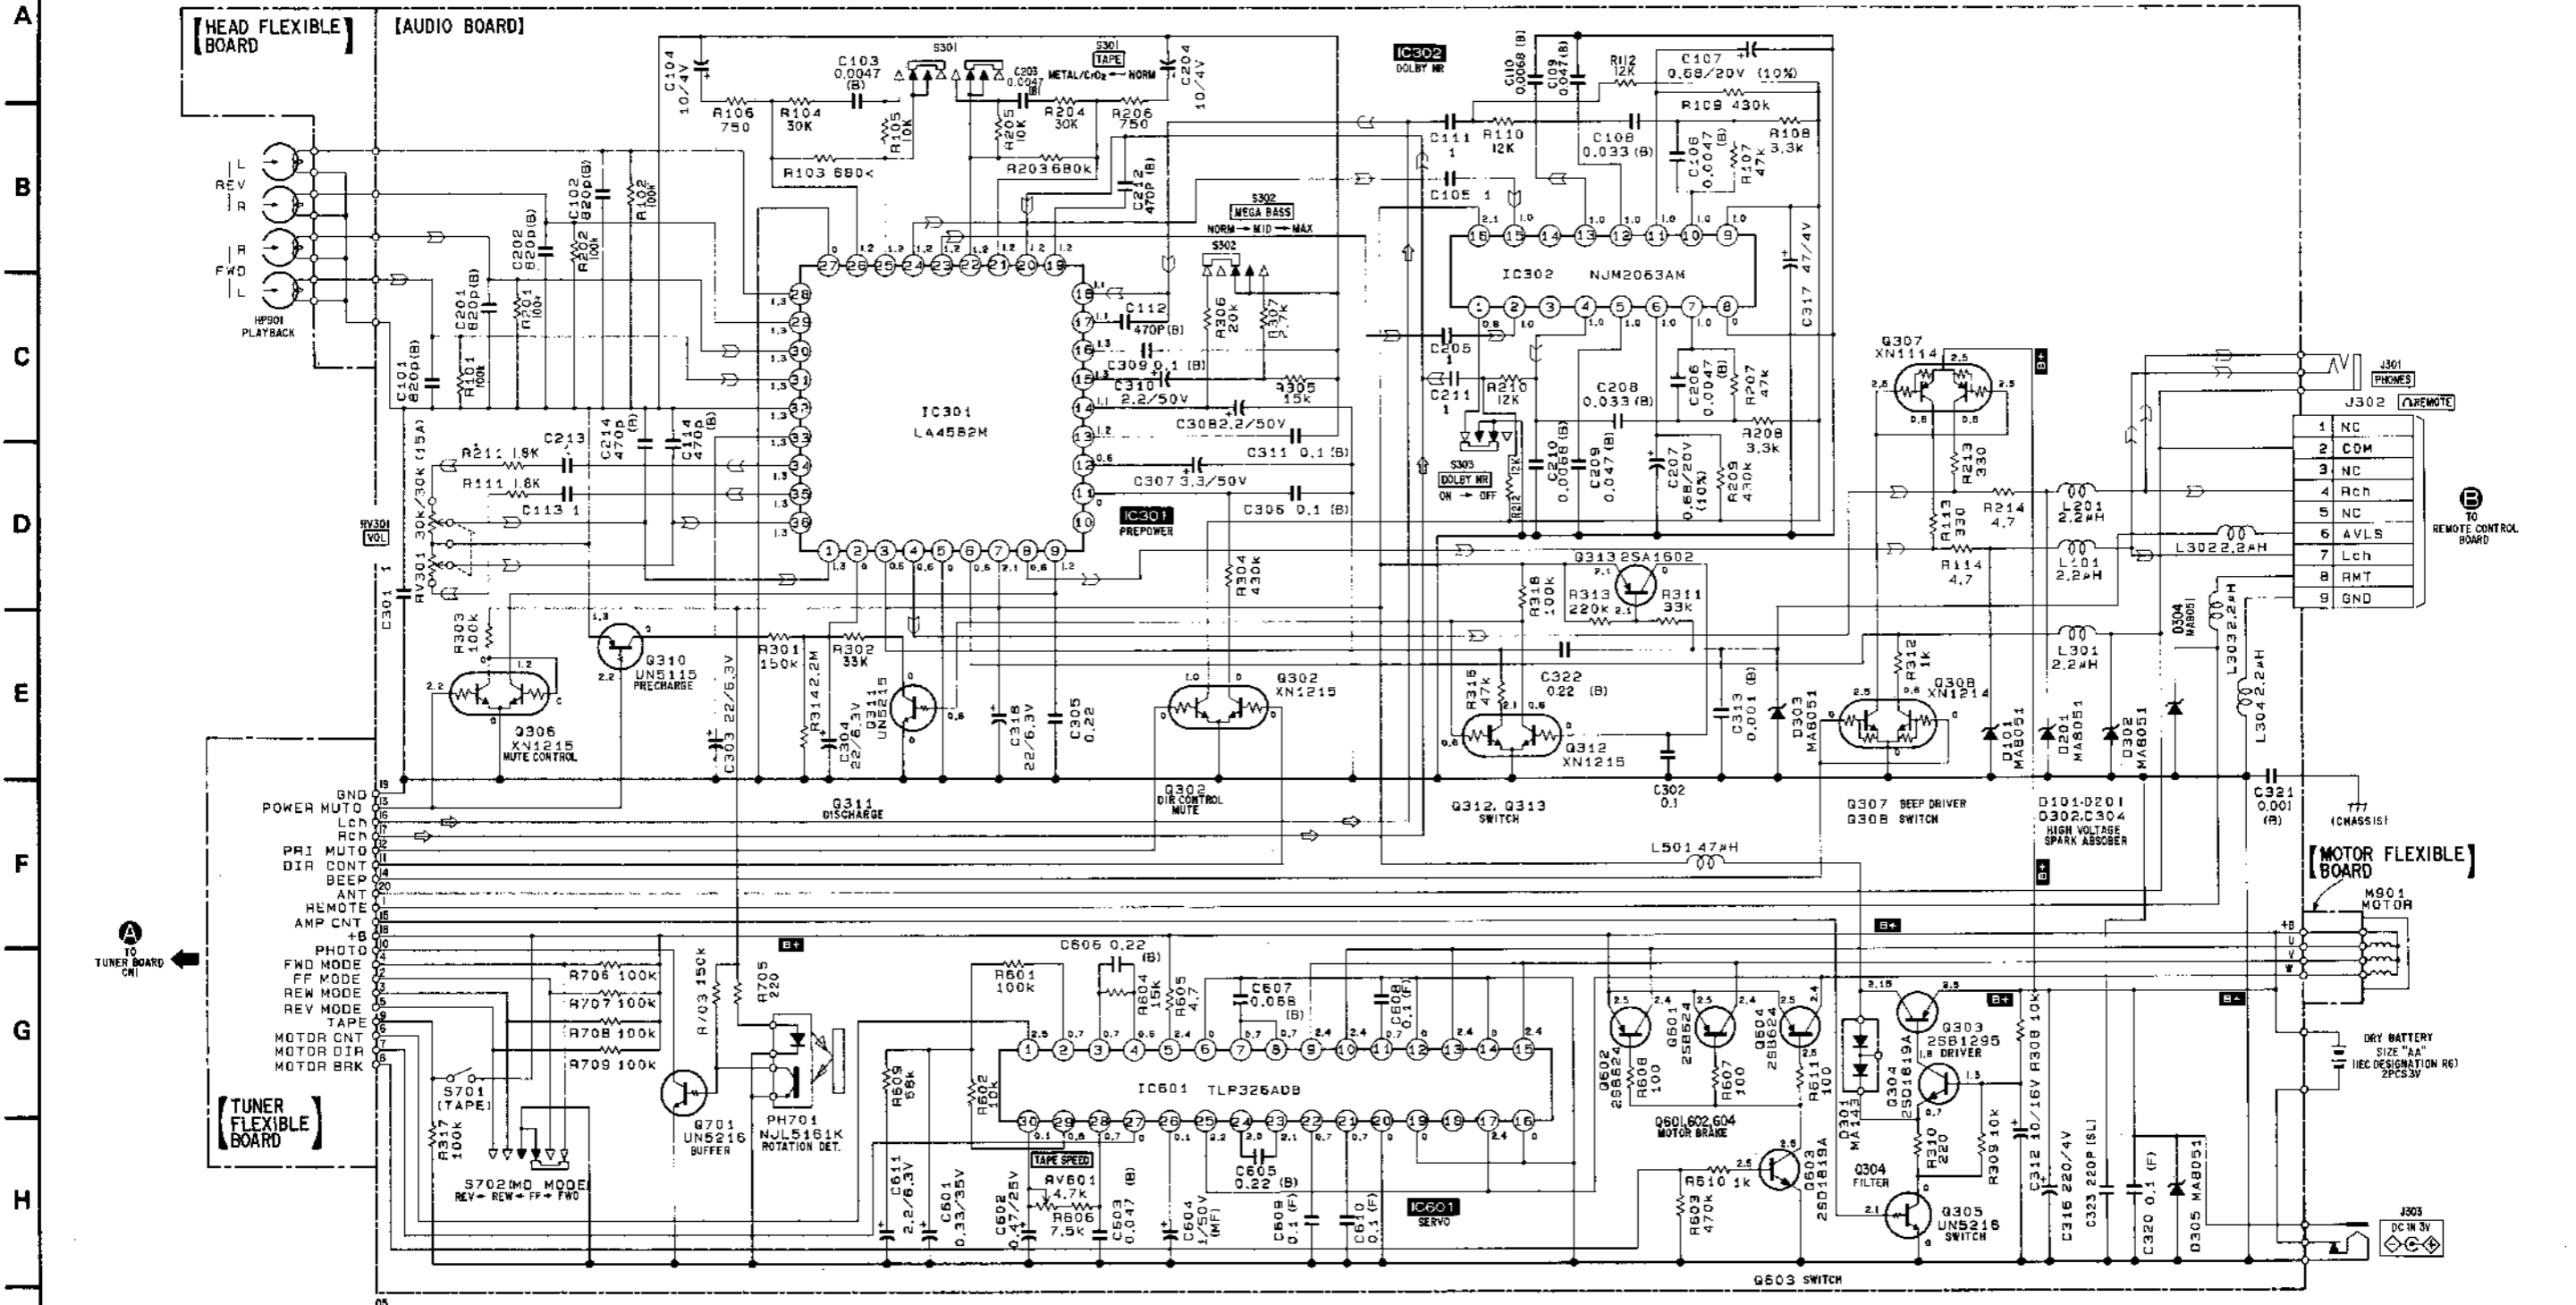


- Note:**
- All capacitors are in  $\mu\text{F}$  unless otherwise noted. pF:  $\mu\text{F}$  50 WV or less are not indicated except for electrolytics and tantalums.
  - All resistors are in  $\Omega$  and  $\frac{1}{4}$  W or less unless otherwise specified.
  - **B+** : B+ Line.
  - **□** : panel designation.
  - **▭** : adjustment for repair.
  - Power voltage is dc 2.5 V and fed with regulated dc power supply from external power voltage jack.

- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions. no mark : PLAY
- Voltages are taken with a VOM (10 M $\Omega/V$ ). Voltage variations may be noted due to normal production tolerances.
- Signal path.
- **↔** : FM
- **↔** : PB



4. AUDIO SECTION PRINTED WIRING BOARDS

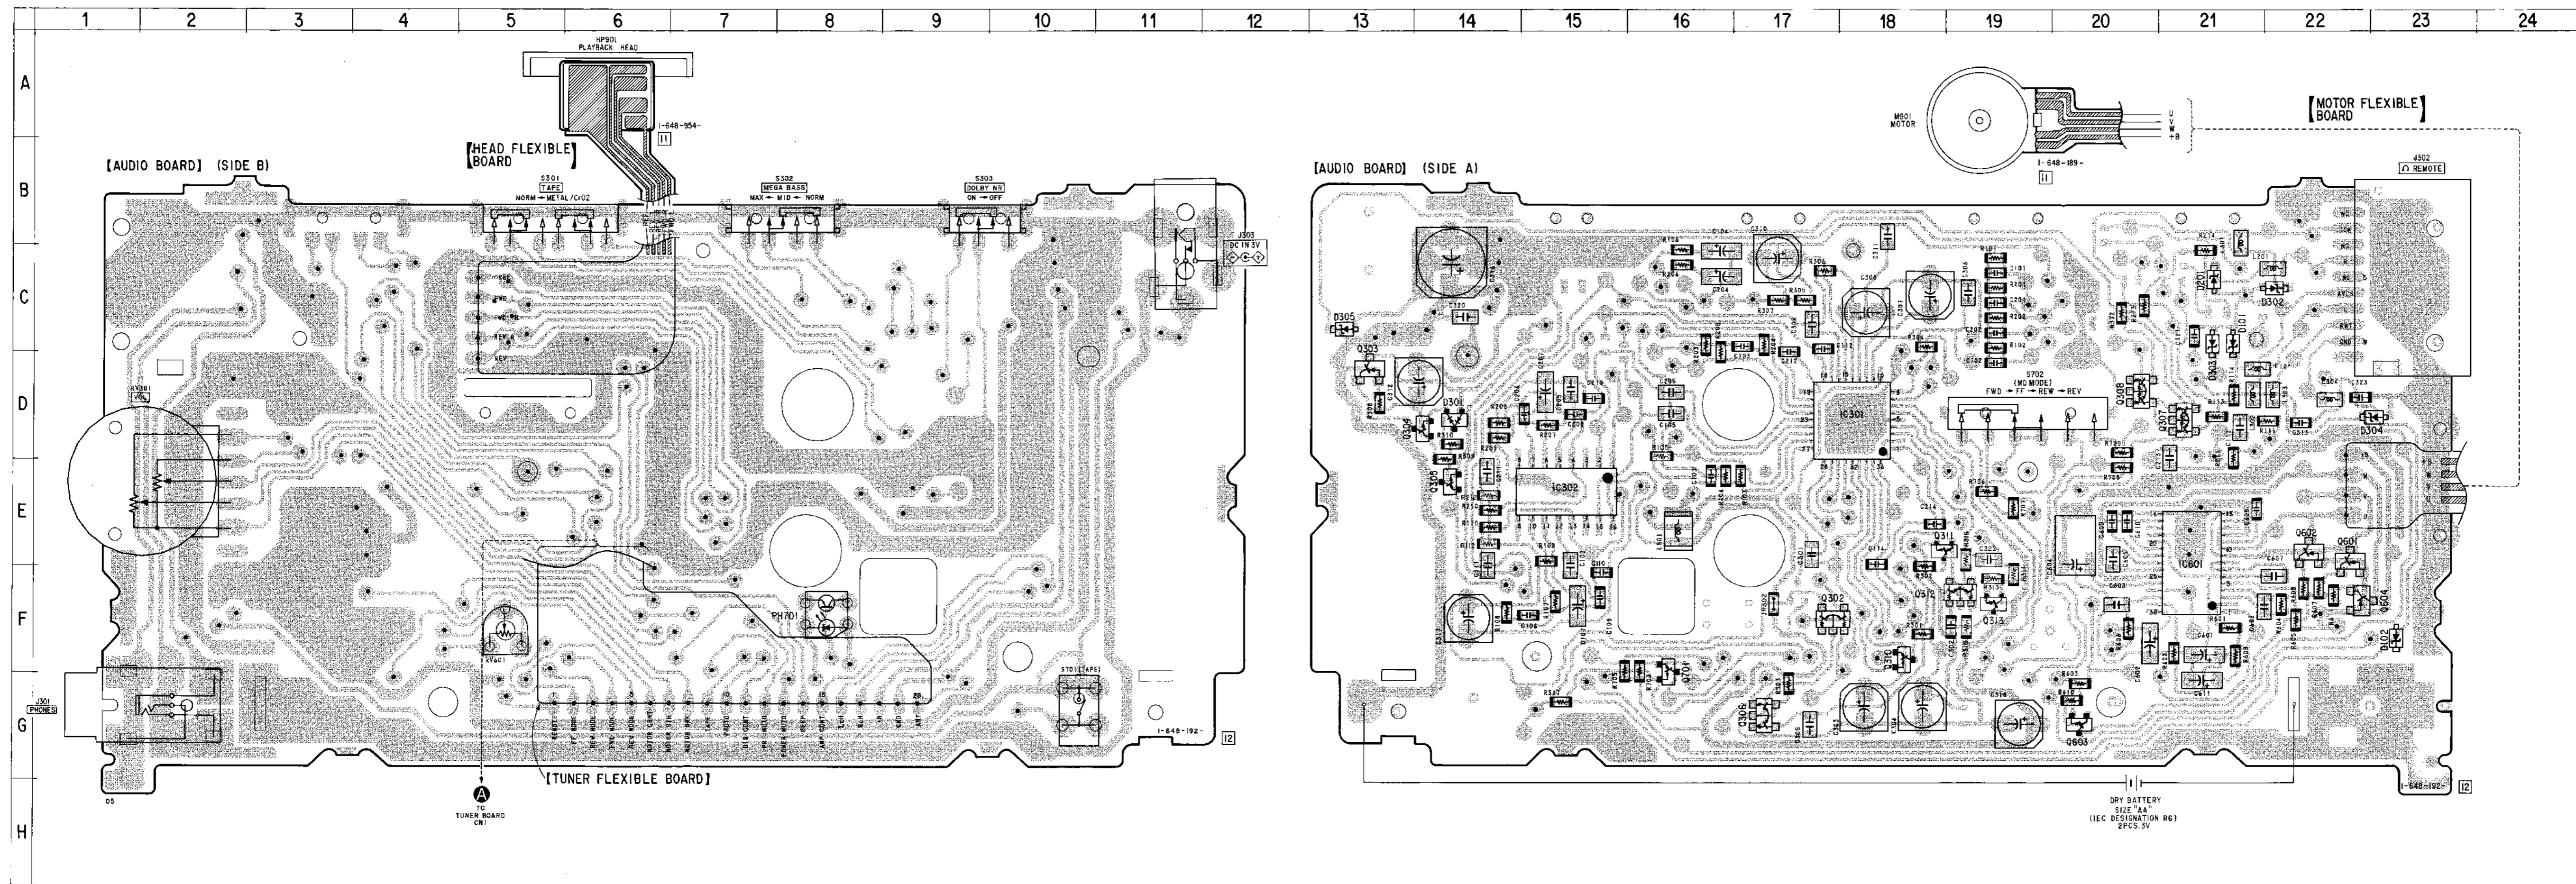

• Semiconductor Location

Ref. No.	Location
D101	C-21
D201	C-21
D301	D-14
D302	C-22
D303	C-21
D304	D-23
D305	C-13
IC301	D-18
IC302	E-16
IC601	E-21
PH701	F-8
Q302	F-17
Q303	D-13
Q304	D-14
Q305	F-14
Q306	G-17
Q307	D-21
Q308	D-20
Q310	F-18
Q311	E-19
Q312	F-19
Q313	F-19
Q601	E-22
Q602	E-22
Q603	G-20
Q604	F-22
C701	F-16

Note:  
 • : Through hole.  
 • : Pattern from the side which enables seeing.  
 (The other layers' patterns are not indicated.)

Caution:  
 Pattern face side: Parts on the pattern face side seen from the pattern face are indicated.  
 (Conductor Side)  
 Parts face side: Parts on the parts face side seen from the parts face are indicated.  
 (Component Side)