

XM-475GSX

SERVICE MANUAL

Ver 1.2 2002. 07

US Model
Canadian Model



SPECIFICATIONS

AUDIO POWER SPECIFICATIONS (US MODEL)

POWER OUTPUT AND TOTAL HARMONIC DISTORTION
75 watts per channel minimum continuous average power into
4 ohms, both channels driven from 20 Hz to 20 kHz with no more
than 0.04% total harmonic distortion per Car Audio Ad Hoc
Committee standards.

Other Specifications

Circuit system	OTL (output transformerless) circuit	Input level adjustment range	0.2 – 6.0 V (RCA pin jacks) 0.4 – 12 V (High level input)
Inputs	Pulse power supply RCA pin jacks	High-pass filter	50 – 300 Hz, -12 dB/oct
	High level input connector	Low-pass filter	50 – 300 Hz, -12 dB/oct
Outputs	Speaker terminals	Low boost	0 – 10 dB (40 Hz)
Speaker impedance	2 – 8 Ω (stereo)	Power requirements	12 V DC car battery (negative ground)
	4 – 8 Ω (when used as a bridging amplifier)	Power supply voltage	10.5 – 16 V
Maximum outputs	Four speakers: 170 W × 4 (at 4 Ω) Three speakers: 170 W × 2 + 400 W × 1 (at 4 Ω) Two speakers: 400 W × 2 (at 4 Ω)	Current drain	at rated output : 40 A (4 Ω) Remote input : 1.5 mA
Rated outputs (supply voltage at 14.4 V)	Four speakers: 75 W × 4 (20 Hz – 20 kHz, 0.04% THD, at 4 Ω) 100 W × 4 (20 Hz – 20 kHz, 0.1% THD, at 2 Ω) Two speakers: 200 W × 2 (20 Hz – 20 kHz, 0.1% THD, at 4 Ω) 5 Hz – 50 kHz (^{+0.5} / ₋₃ dB)	Dimensions	Approx. 358 × 50 × 264 mm (w/h/d) (14 1/8 × 2 × 10 1/2 in.) not incl. projecting parts and controls
Frequency response	0.005% or less (at 1 kHz)	Mass	Approx. 3.5 kg (7 lb. 11 oz.) not incl. accessories
Harmonic distortion		Supplied accessories	Mounting screws (4)

Design and specifications are subject to change without notice.

Notes on Chip Component Replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

STEREO POWER AMPLIFIER

TABLE OF CONTENTS**1. GENERAL**

Location and Function of Controls	3
Connections	4

2. DISASSEMBLY

2-1. Bottom Plate	6
2-2. Main Board Section	6
2-3. Main Board, Filter (F) Board, Filter (R) Board	7
2-4. LED Board	7

3. ELECTRICAL ADJUSTMENT	8
---------------------------------------	---

4. DIAGRAMS

4-1. Block Diagram	9
4-2. Printed Wiring Boards –Filter (F), Filter (R), LED Section–	10
4-3. Schematic Diagram –Filter (F), Filter (R), LED Section–	11
4-4. Schematic Diagram –Main Section (1/2)–	12
4-5. Schematic Diagram –Main Section (2/2)–	13
4-6. Printed Wiring Board –Main Section–	14

5. EXPLODED VIEWS

5-1. Heat Sink (Main) Section	16
5-2. Main Board Section	17

6. ELECTRICAL PARTS LIST	18
---------------------------------------	----

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK \triangle OR DOTTED LINE WITH MARK \triangle ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

**ATTENTION AU COMPOSANT AYANT RAPPORT
À LA SÉCURITÉ!!**

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE \triangle SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.


SECTION 1

GENERAL

This section is extracted from instruction manual.


Location and Function of Controls

- [1] POWER indicator**
Lights up in green during operation.
- [2] PROTECTOR indicator**
 - OVER CURRENT:
Lights up in red when input signal overload.
 - OFFSET:
Lights up in red when the voltage going out to the Speaker terminal or the Ph jack is too high.
 - THERMAL:
Lights up in red when the temperature rises to an unsafe level.
- [3] TEST-TONE button**
When the button is pressed, if the test tone can be heard from the connected speakers, operation is normal.
- [4] FILTER selector switch**
When the switch is in the LPF position, the filter is set to low-pass. When in the HPF position, the filter is set to high-pass.
- [5] Cut-off frequency adjustment control**
Sets the cut-off frequency (50-300 Hz) for the low pass or high pass filters.
- [6] LOW BOOST level control**
Turn this control to boost the frequencies around 40 Hz to a maximum of 10 dB.
- [7] LEVEL adjustment control**
The input level can be adjusted with this control. Turn it toward MAX when the output level of the car audio seems low.

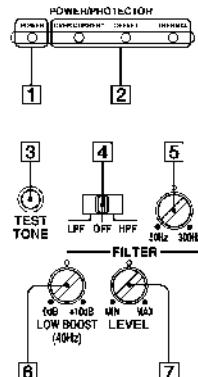

Emplacement et fonction des commandes

- [1] Indicateur POWER**
S'allume en vert en cours fonctionnement.
- [2] Indicateur PROTECTOR**
 - OVR CRNT:
S'allume en rouge lorsque le signal d'entrée est surcharge.
 - OFFSET:
S'allume en rouge lorsque la tension de sortie vers le terminal du haut-parleur ou la prise à broches est trop élevée.
 - THERMAL:
S'allume en rouge lorsque la température atteint un niveau trop dangereux.
- [3] Touche TEST-TONE**
Si lorsque vous appuyez sur cette touche, vous entendez la tonalité de test depuis les enceintes raccordées, cela signifie que le fonctionnement est normal.
- [4] Commutateur de sélection FILTER**
Lorsque ce commutateur de sélection est en position LPF, le filtre est réglé sur passe-bas. Lorsqu'il est en position HPF, le filtre est réglé sur passe-haut.
- [5] Commandes de réglage de la fréquence de coupure**
Régule la fréquence de coupure (50-300 Hz) des filtres passe-bas ou passe-haut.
- [6] Commande de niveau LOW BOOST**
Tournez cette commande pour amplifier les fréquences autour de 40 Hz jusqu'à un maximum de 10 dB.
- [7] Commande de réglage LEVEL**
Le niveau d'entrée peut se régler avec cette commande. Tournez vers MAX lorsque le niveau de sortie de l'installation radio paraît faible. Mettez le sur MAX lorsque le niveau de sortie de l'installation audio paraît faible.

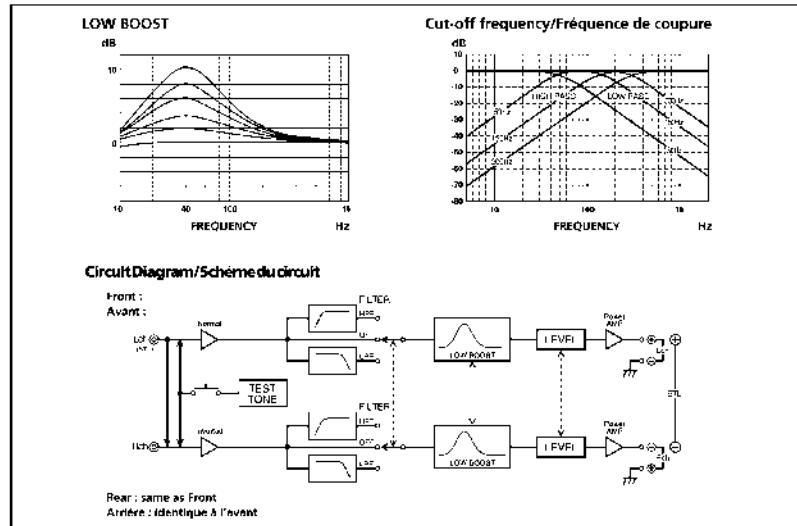

Connections

Precautions


- This unit is designed for negative ground 12 V DC operation only.
- Use speakers with suitable impedance:
— 2 to 8 Ω (stereo).
- Do not connect any active speakers (with built-in amplifiers) to the speaker terminals of the unit. Doing so may damage the active speakers.
- Avoid installing the unit in areas subject to:
— high temperatures such as from direct sunlight or hot air from the heater
— rain or moisture
— dust or dirt.
- If your car is parked in direct sunlight and there is a considerable rise in temperature inside the car, allow the unit to cool down before use.
- When installing the unit horizontally, be sure not to cover the fins with the floor carpet etc.
- If this unit is placed too close to the car radio or antenna, interference may occur. In this case, relocate the amplifier away from the car radio or antenna.
- If no power is being supplied to the master unit, check the connections.
- This power amplifier employs a protective circuit to protect the transistors and speakers if the amplifier malfunctions. Do not attempt to test the protection circuits by connecting the heat sink or connecting unjoined leads.
- Do not use the unit on a weak battery as its optimum performance depends on a good power supply.
- For safety reasons, keep your car audio volume moderate so that you can still hear sounds outside your car.

Fuse Replacement

If the fuse blows, check the power connection and replace the fuse. If the fuse blows again after replacement, there may be an internal malfunction. In such a case, consult your nearest Sony dealer.

Warning

When replacing the fuse, be sure to use one matching the amperage stated above the fuse holder. Never use a fuse with an amperage rating exceeding the one supplied with the unit as this could damage the unit.

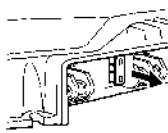


Protection circuit

The amplifier is provided with a protection circuit that operates in the following cases:
when the unit is overheat
when the speaker terminals are short-circuited.
The XM-475GSX indicator lights up in red and the unit will shut down.
If this happens, turn off the connected equipment, take out the cassette tape or disc, and determine the cause of the malfunction. If the amplifier has overheated, wait until the unit cools down before use.

If you have any questions or problems concerning your unit that are not covered in this manual, please consult your nearest Sony dealer.

Speaker cord direct in connector

Cordon de haut-parleur directement dans le connecteur

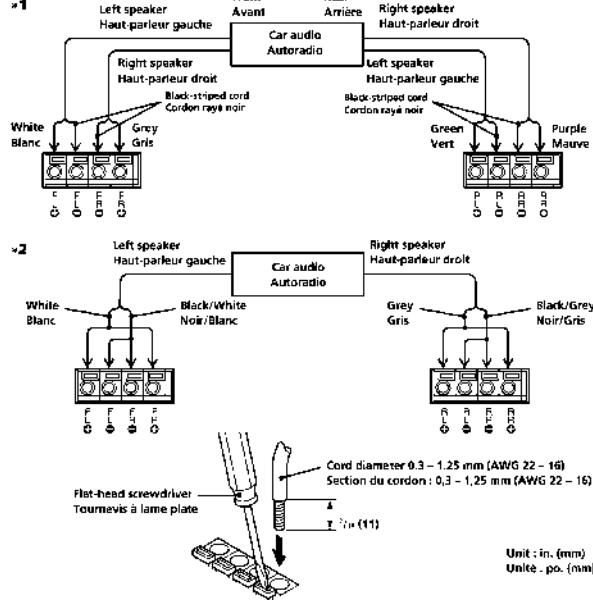

Connexions

Précautions


- Cet appareil est conçu pour fonctionner uniquement sur courant continu de 12 volts avec masse négative.
- Utilisez des haut-parleurs d'une impédance appropriée.
— 2 à 8 Ω (stéréo).
- Ne raccordez pas de haut-parleurs actifs (avec amplificateur intégré) aux bornes de haut-parleur de cet appareil; ils pourraient être endommagés.
- N'installez pas l'appareil à un endroit exposé:
— à hautes températures comme sous le rayonnement direct du soleil ou près d'un conducteur de chaleur
— à la pluie ou à l'humidité
— de la poussière ou des saletés.
- Si votre voiture était garée en plein soleil et qu'à la température a considérablement augmenté à l'intérieur, laissez rétroir l'appareil avant de l'utiliser.
- Si vous installez l'appareil à "horizontal", ne recouvrez pas les ailettes de ventilation par le tapis de sol ou autre chose.
- Si cet appareil est placé trop près de l'autoradio et de l'antenne, il peut que des interférences se produisent. Dans ce cas, éloignez l'amplificateur de l'autoradio ou de l'antenne.
- Si l'appareil semble n'est pas alimenté, vérifiez les connexions.
- Cet amplificateur est équipé d'un circuit destiné à protéger les transistors et les haut-parleurs en cas de défaillance. N'essayez pas de tester l'efficacité de ce circuit en recouvrant les dissipateurs thermiques ou en effectuant des connexions inadéquates.
- N'utilisez pas l'appareil sur une batterie faible, car sa performance maximale dépend d'une bonne alimentation en électricité.
- Pour raisons de sécurité, écoutez l'appareil à un volume modéré afin d'entendre les bruits extérieurs.

Remplacement du fusible

Si le fusible saute, vérifiez les connexions du fil d'alimentation et remplacez le fusible. Si, malgré de nouveau, un mauvais circuit intérieur peut être la cause. Dans ce cas, consultez votre concessionnaire Sony.

Avertissement

En cas de remplacement du fusible, veillez à utiliser un fusible dont l'intensité correspond à celle inscrite sur le porte-fusible. N'utilisez jamais de fusible dont l'intensité dépasse celle du fusible fourni avec l'appareil, car vous risqueriez d'endommager l'appareil.

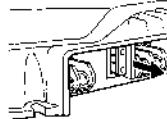

Circuit de protection

Cet amplificateur est équipé d'un circuit de protection qui entre en service dans les cas suivants:

Surchauffe de l'appareil

L'indicateur d'un récepteur enroulé

Le circuit des bornes des haut-parleurs

L'indicateur XM-475GSX clignote en rouge et l'appareil s'arrête.

Si le cas se présente, coupez l'alimentation de l'appareil pour éviter d'endommager l'appareil et réduire la cause de la défaillance. Si l'amplificateur est mal utilisé, entendez-vous il refroidisse.

Pour toute question ou problème qui ne serait pas traité dans ce manuel, consultez votre concessionnaire Sony.


Caution

- Before making any connections, disconnect the ground terminal of the car battery to avoid short circuits.
- Be sure to use speakers with an adequate power rating. If you use small capacity speakers, they may be damaged.
- Do not connect the \ominus terminal of the speaker system to the car chassis, and do not connect the \ominus terminal of the right speaker with that of the left speaker.
- Install the input and output cords away from the power supply lead as running them close together can generate some interference noise.
- This unit is a high powered amplifier. Therefore, it may not perform to its full potential if used with the speaker cords supplied with the car.
- If your car is equipped with a computer system for navigation or some other purpose, do not remove the ground wire from the car battery. If you disconnect the wire, the computer memory may be erased. To avoid short circuits when making connections, disconnect the +12 V power supply lead until all the other leads have been connected.

Attention

- Avant d'effectuer les connexions, débranchez le fil de masse de la borne de la batterie pour éviter un court-circuit.
- Utilisez des haut-parleurs d'une capacité adéquate. Si vous utilisez des haut-parleurs de faible capacité, ils risquent d'être endommagés.
- Ne raccordez pas à borne \ominus des haut-parleurs à la carrosserie de la voiture ni la borne \ominus du haut-parleur droit à celle du haut-parleur gauche.
- Éloignez les cordons d'entrée et de sortie du fil d'alimentation électrique pour éviter que des interférences ne se produisent.
- Cet appareil est un amplificateur de haute puissance et il peut ne pas atteindre sa puissance maximale si les cordons de haut-parleurs originaux de la voiture lui sont raccordés.
- Si votre voiture est équipée d'un ordinateur de bord pour la navigation ou à toute autre fin, ne débranchez pas le fil de masse de la batterie de la voiture. Si vous débranchez ce fil, toute la mémoire de l'ordinateur sera effacée. Pour éviter un court-circuit lorsque vous effectuez les branchements, branchez fil d'alimentation de +12 volts uniquement après avoir branché tous les autres fils.

Make the terminal connections as illustrated below.

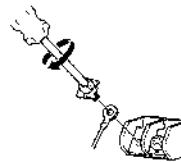

Effectuez les connexions de la manière indiquée ci-dessous.


Remarque

Ne serrez pas trop fort la vis car cela pourrait endommager

* Le couple de serrage devrait être inférieur à 1 Nm.

Power Connection Leads

Câbles d'alimentation



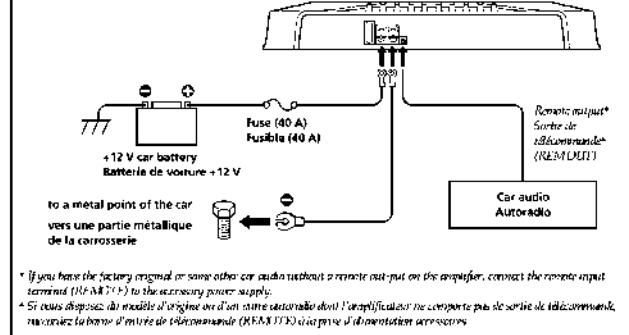


Notes on the power supply

- Connect the +12 V power supply lead only after all the other leads have been connected.
- Be sure to connect the ground lead of the unit securely to a metal point of the car. A loose connection may cause a malfunction of the amplifier.
- Be sure to connect the remote control lead of the car audio to the remote terminal.
- When using your radio's remote control or remote output on the amplifier, connect the remote input terminal (RMT IN) to the remote power supply.
- Use the power supply lead with a fuse attached (40 A).
- Place the fuse in the power supply lead as close as possible to the car battery.
- Make sure that the leads to be connected to the +12 V and GND terminals of this unit are larger than 10 Gauge (AWG 10) or have a sectional area of more than 7 mm^2 (5 mm²).


Remarques sur l'alimentation électrique

- Raccordez le câble d'alimentation 12 V uniquement après avoir raccordé tous les autres câbles.
- Raccordez correctement le fil de masse à une partie métallique de la voiture. Une connexion lâche peut provoquer un dysfonctionnement de l'amplificateur.
- Veillez à raccorder le fil de télécommande de l'autoradio à la borne de télécommande.
- Si vous utilisez un récepteur dont l'amplificateur ne dispose pas de sortie de télécommande, raccordez la borne d'entrée de la télécommande (RMT IN) à la prise d'alimentation réservée.
- Utilisez un câble d'alimentation munie d'un fusible (40 A).
- Placez le fusible dans le câble d'alimentation aussi près possible de la batterie de voiture.
- Vous devez raccorder des câbles de calibre supérieurs à 10 AWG (10) ou d'une section superficie d' $> 5 \text{ mm}^2$ (5 mm²) aux bornes +12 V et GND.

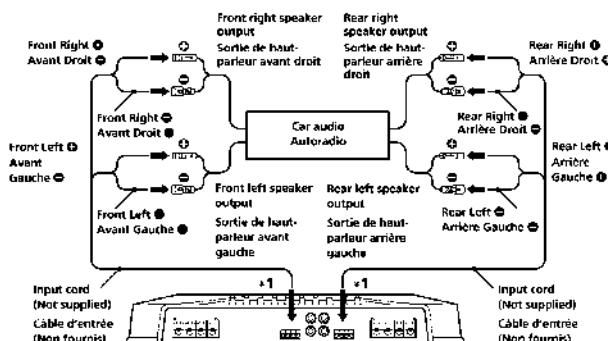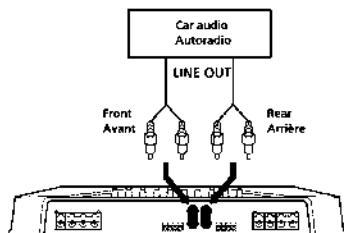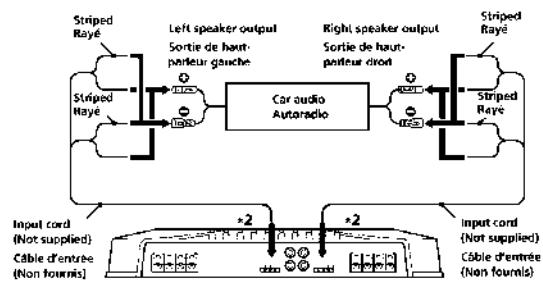Input Connections**High Level Input Connection (with Speaker Connection 1, 2 or 4)****Connexion à l'entrée de haut niveau (avec connexion de haut-parleur 1, 2 ou 4)****Line Input Connection (with Speaker Connection 1, 2 or 4)****Connexion d'entrée de ligne (avec connexion de haut-parleur 1, 2 ou 4)****Connexions d'entrée****High Level Input Connection (with Speaker Connection 3)****Connexion à l'entrée de haut niveau (avec connexion de haut-parleur 3)**

Note
Make sure that the right speaker output from the car audio is connected to the connector marked "REAR" on the unit.

Remarque
Assurez-vous que la sortie du haut-parleur droit de l'autoradio est raccordée au connecteur portant l'indication "REAR" sur l'appareil.

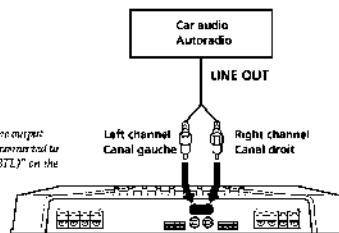Line Input Connection (with Speaker Connection 3)**Connexion d'entrée de ligne (avec connexion de haut-parleur 3)**


Note
Make sure that the line output from the car audio is connected to the jack marked "L (BLT)" on the unit.

Remarque
Vérifiez que la sortie de ligne de l'autoradio est raccordée à la prise portant l'indication "L (BLT)" sur l'appareil.

Speaker Connections**4-Speaker System (with Input Connection A or C)****Système à 4 haut-parleurs (avec connexion d'entrée A ou C)****1**


For details on the settings of switches and controls, refer to "Location and Function of Controls".

Pour plus de détails sur les réglages des commutateurs et commandes, reportez-vous à "Emplacement et fonction des commandes".

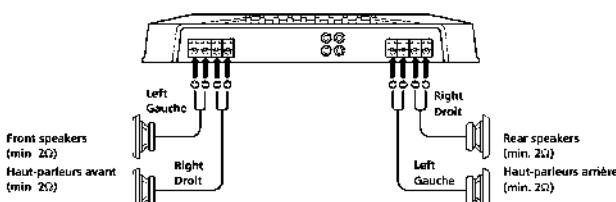**2-Speaker System (with Input Connection B or D)****Système à 2 haut-parleurs (avec connexion d'entrée B ou D)****3**


For details on the settings of switches and controls, refer to "Location and Function of Controls".

Pour plus de détails sur les réglages des commutateurs et commandes, reportez-vous à "Emplacement et fonction des commandes".

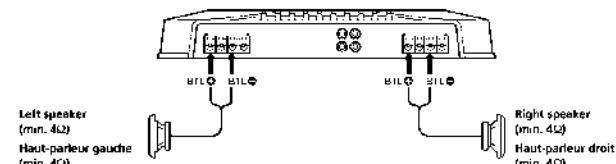**3-Speaker System (with Input Connection A or C)****Système à 3 haut-parleurs (avec connexion d'entrée A ou C)****2**

For details on the settings of switches and controls, refer to "Location and Function of Controls".

Pour plus de détails sur les réglages des commutateurs et commandes, reportez-vous à "Emplacement et fonction des commandes".

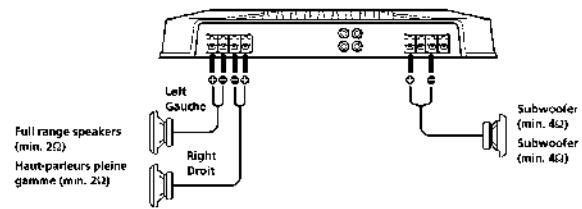

Note

- In this system, the volume of the subwoofer will be controlled by the rear audio fader control.
- In this system, the output signals to the subwoofer are a combination of both the REAR L and R INPUT jacks or the REAR high level input connector signals.


Remarque

- Dans ce système, le volume du subwoofer est contrôlé par le fader de l'autoradio.
- Sur cet appareil, les signaux transmis vers le subwoofer sont constitués des signaux des prises REAR L et R INPUT.

2-Way System (with Input Connection A or C)**Système à 2 voies (avec connexion d'entrée A ou C)****4**

For details on the settings of switches and controls, refer to "Location and Function of Controls".

Pour plus de détails sur les réglages des commutateurs et commandes, reportez-vous à "Emplacement et fonction des commandes".

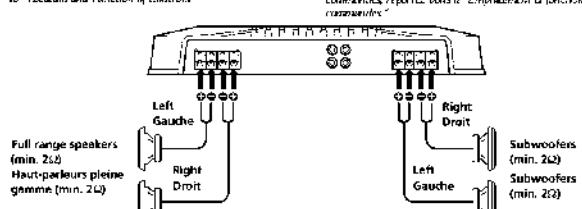

Note

- In this system, the volume of the subwoofer will be controlled by the car audio fader control.


Remarque

- Dans ce système, le volume des subwoofers est contrôlé par le fader de l'autoradio.


SECTION 2 DISASSEMBLY

Note : Follow the disassembly procedure in the numerical order given.


2-1. BOTTOM PLATE

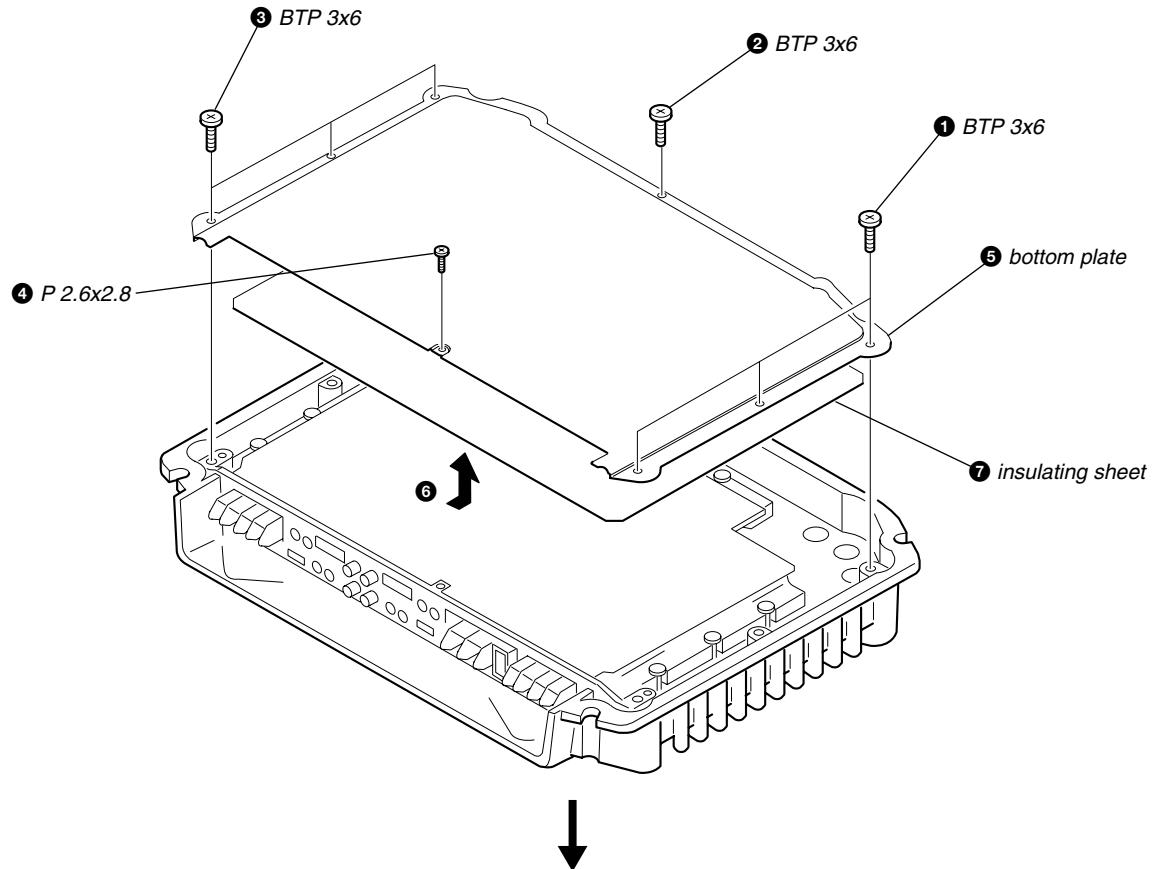


2-2. MAIN BOARD SECTION

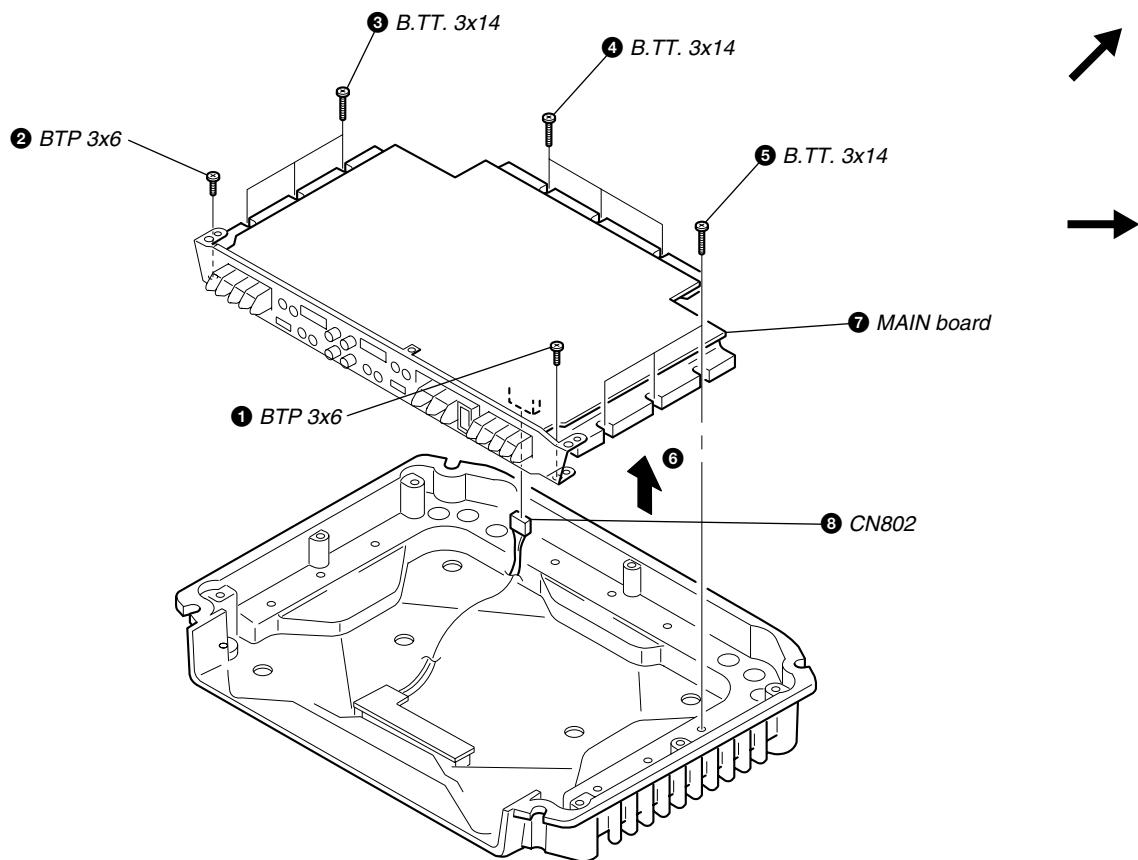

2-3. MAIN BOARD, FILTER (F) BOARD, FILTER (R) BOARD

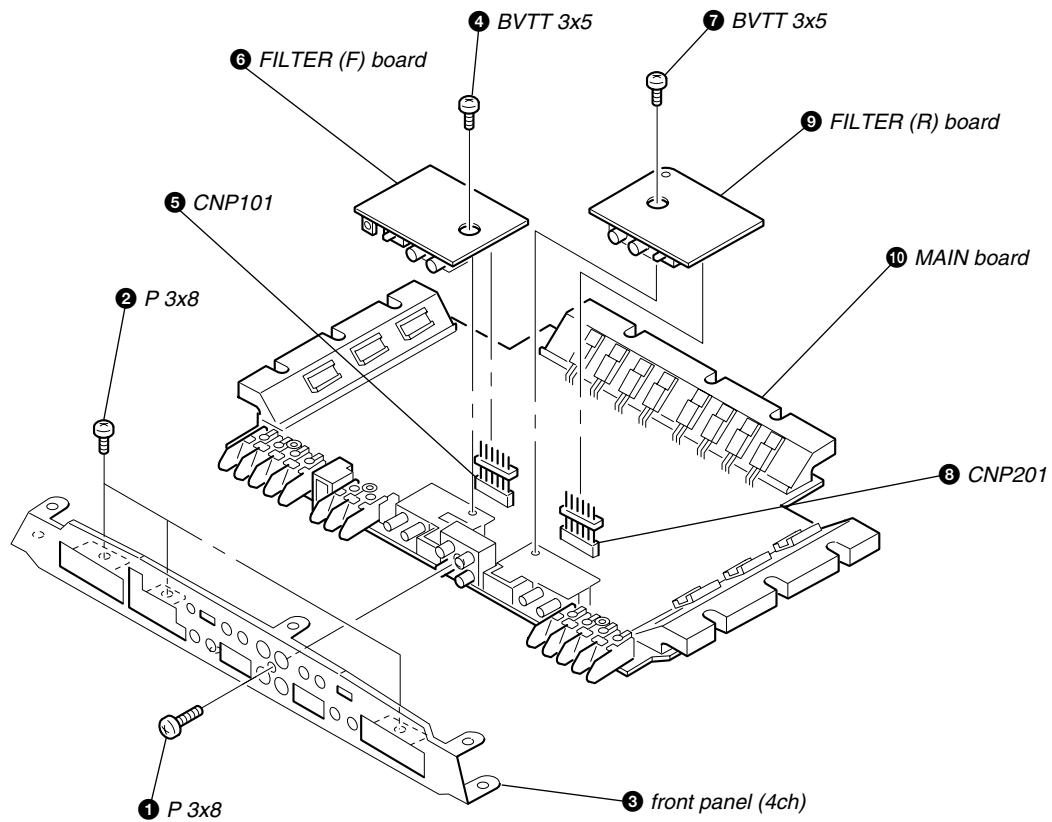

2-4. LED BOARD


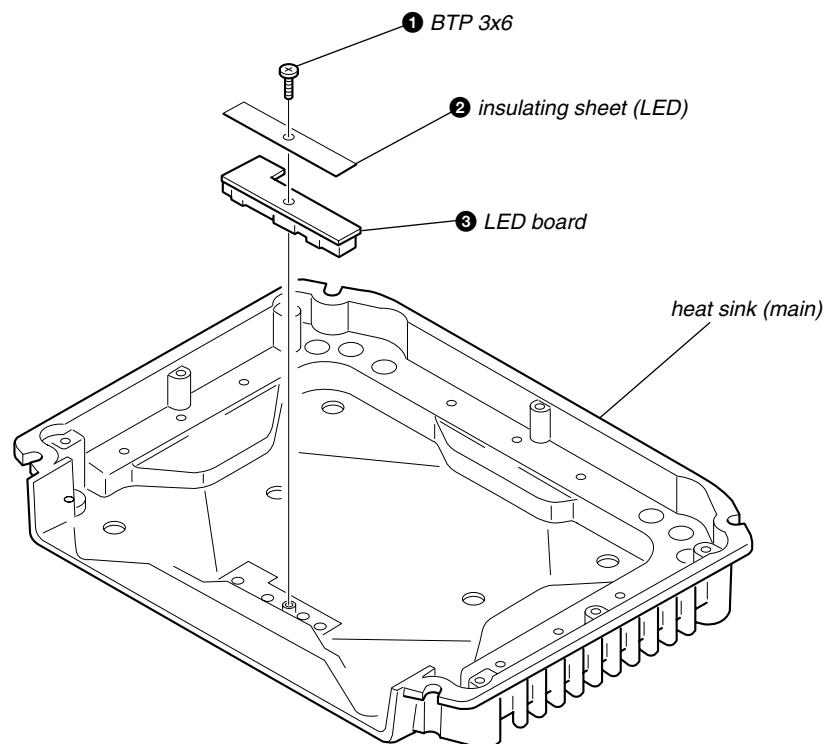


SECTION 3

ELECTRICAL ADJUSTMENT

Bias Adjustment


Note : The Bias adjustment should be performed only if any of Q109, Q110, Q209, Q210, Q309, Q310, Q409 and Q410 are replaced.

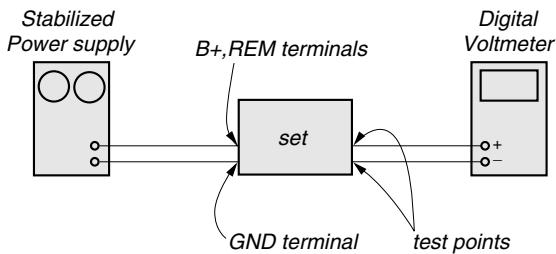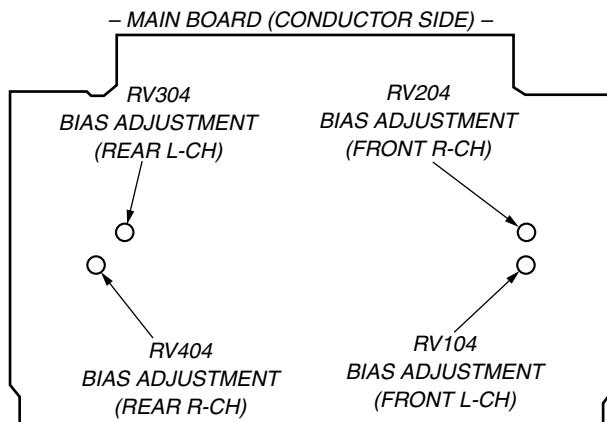Setting :**Adjustment Location :****Procedure:**

1. Rotate the variable resistors RV104, RV204, RV304 and RV404 fully in the clockwise direction to minimize the idling current of the stabilized power supply.
2. The input signal is to be no signal.
3. Set the power voltage to +14.4 V, and turn the remote mode ON (Connect between the REM terminal and B+ terminal).
4. Connect on digital voltmeter between each test points.
5. Adjust RV104, RV204, RV304 and RV404 so that the digital voltmeter reading is 2.5 ± 0.5 mV.


RV Ref. No.	Test points
RV104	TP11 and TP12
RV204	TP21 and TP22
RV304	TP31 and TP32
RV404	TP41 and TP42

6. Check the power supply current is at 1.2 to 1.6 A.

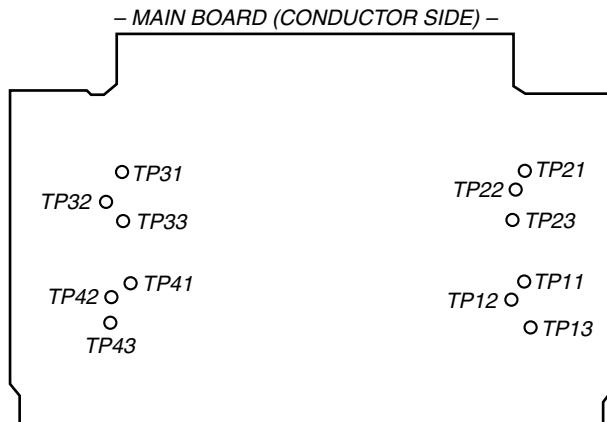
Test Point Location :

SECTION 4 DIAGRAMS


4-1. BLOCK DIAGRAM

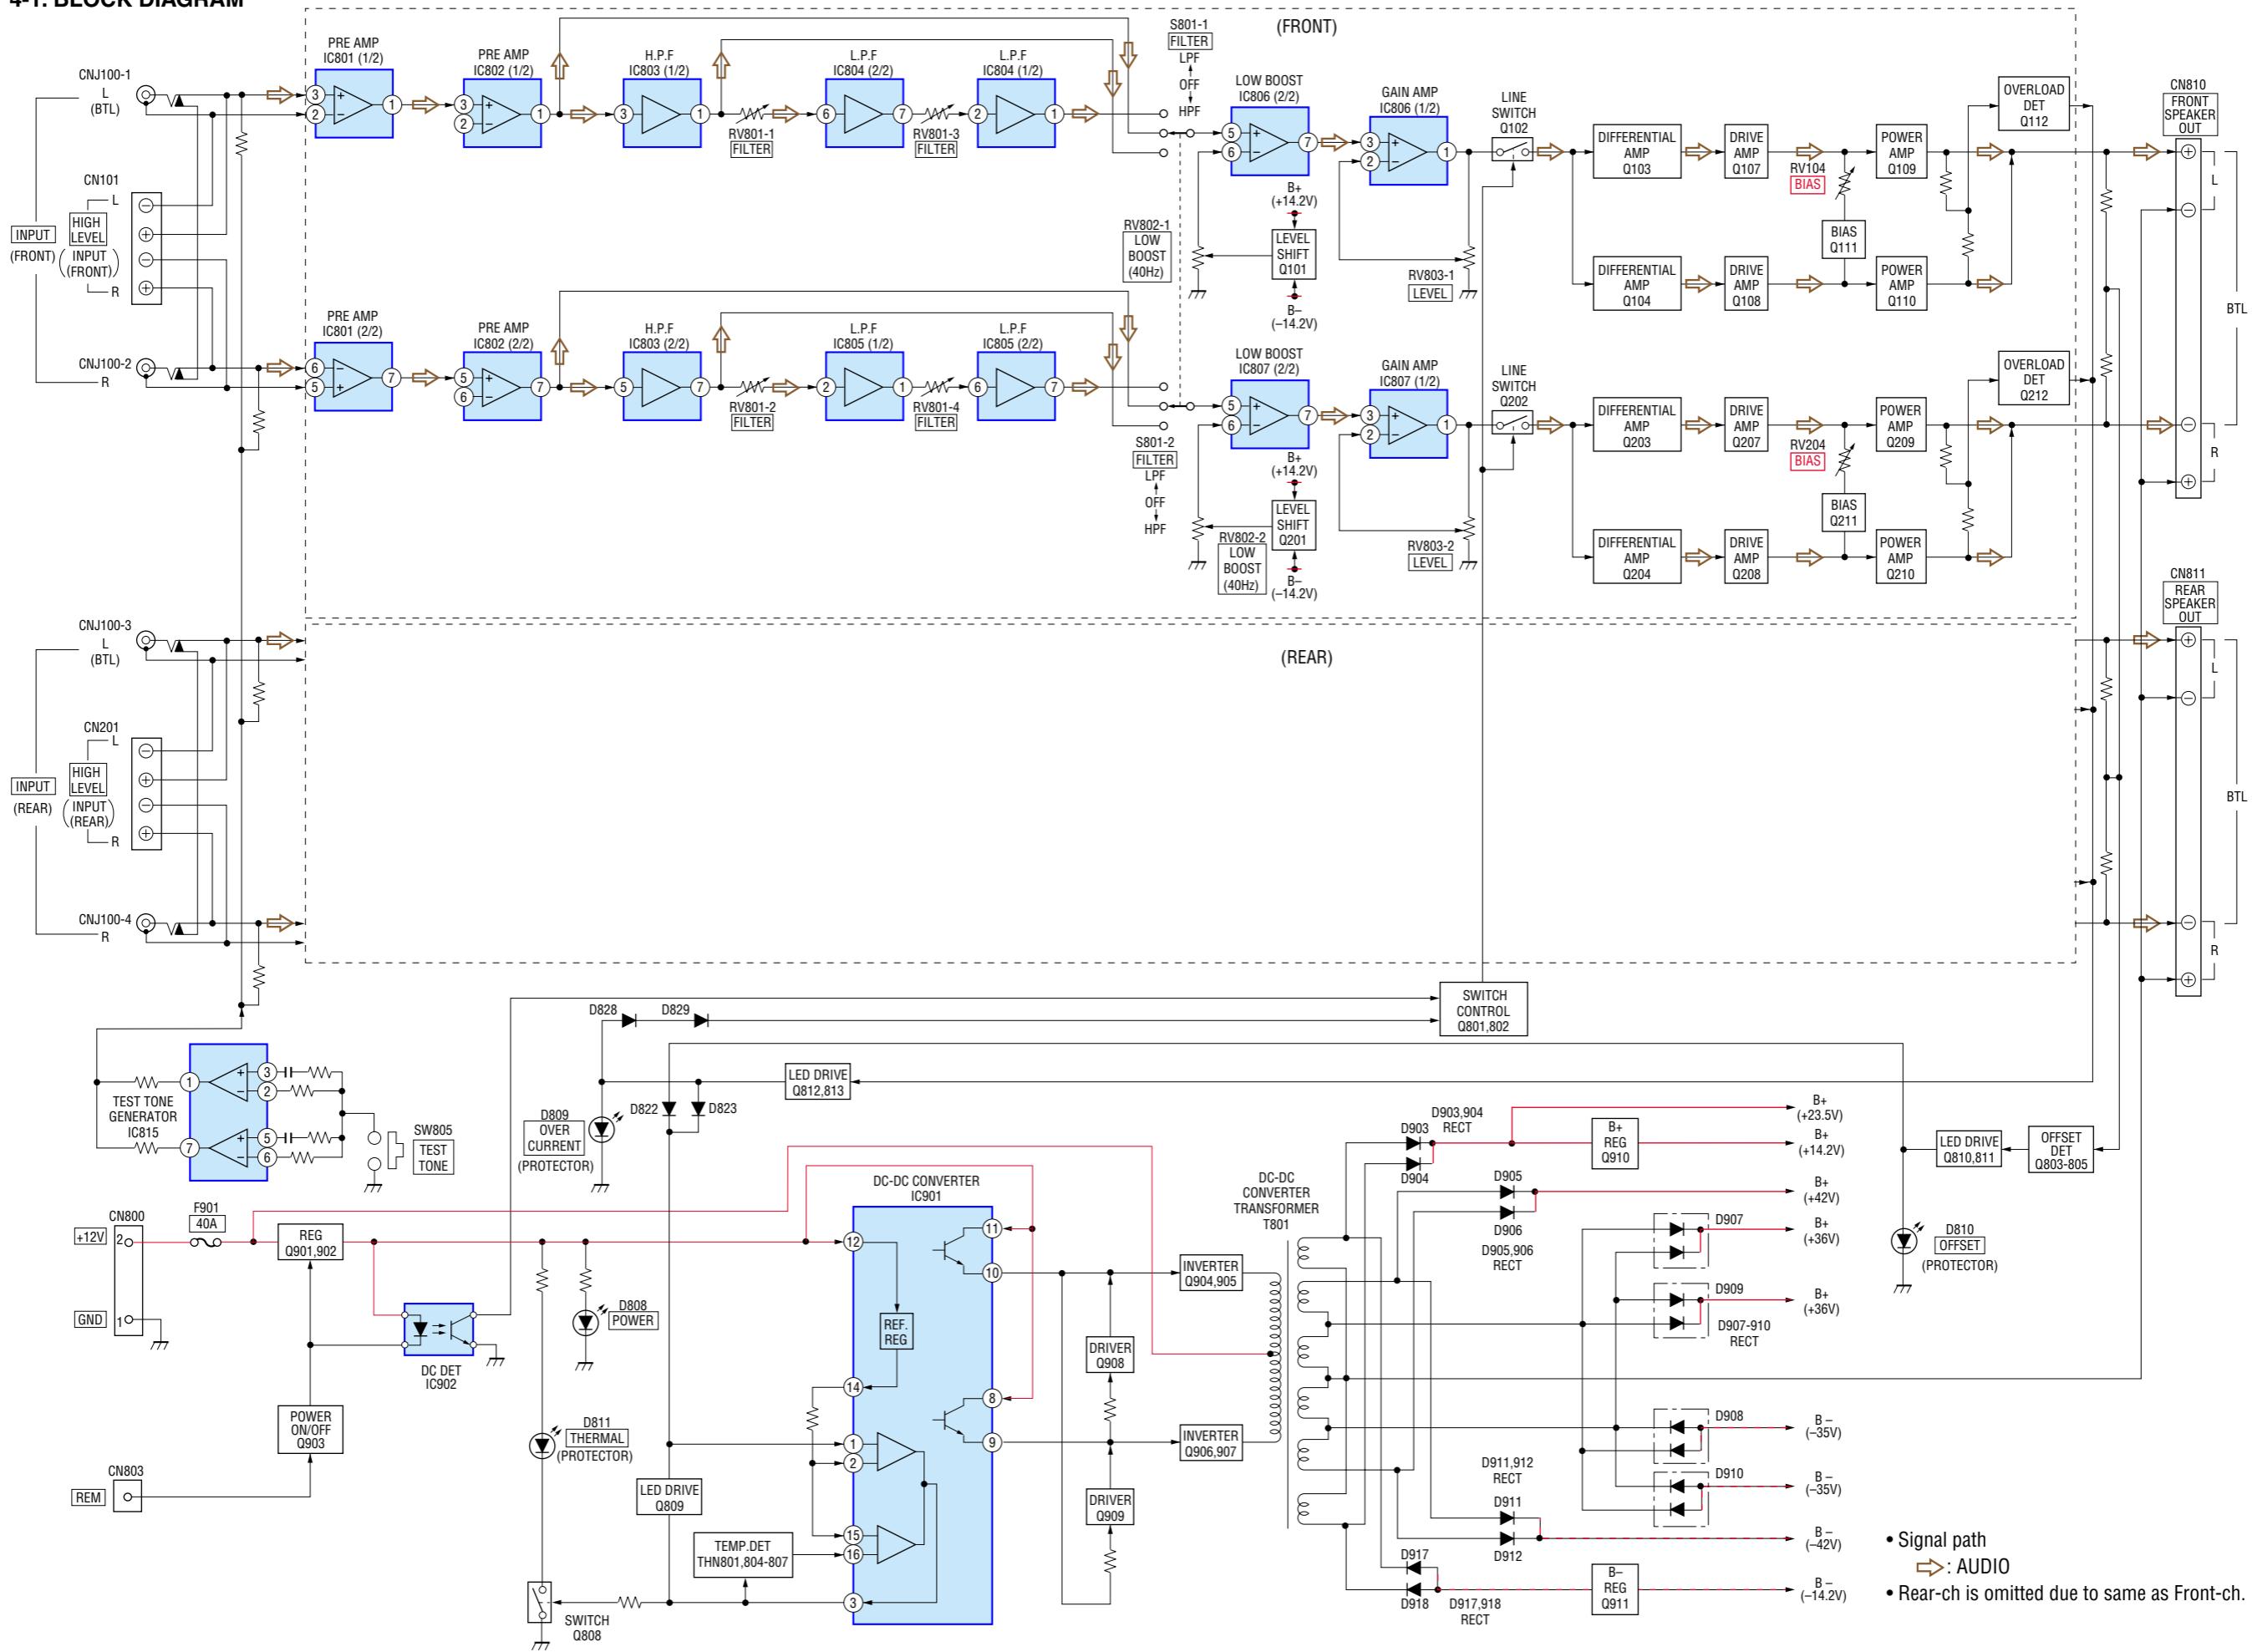


4-2. PRINTED WIRING BOARDS — FILTER (F), FILTER (R), LED SECTION — • Refer to page 15 for Common Note on Printed Wiring Boards.

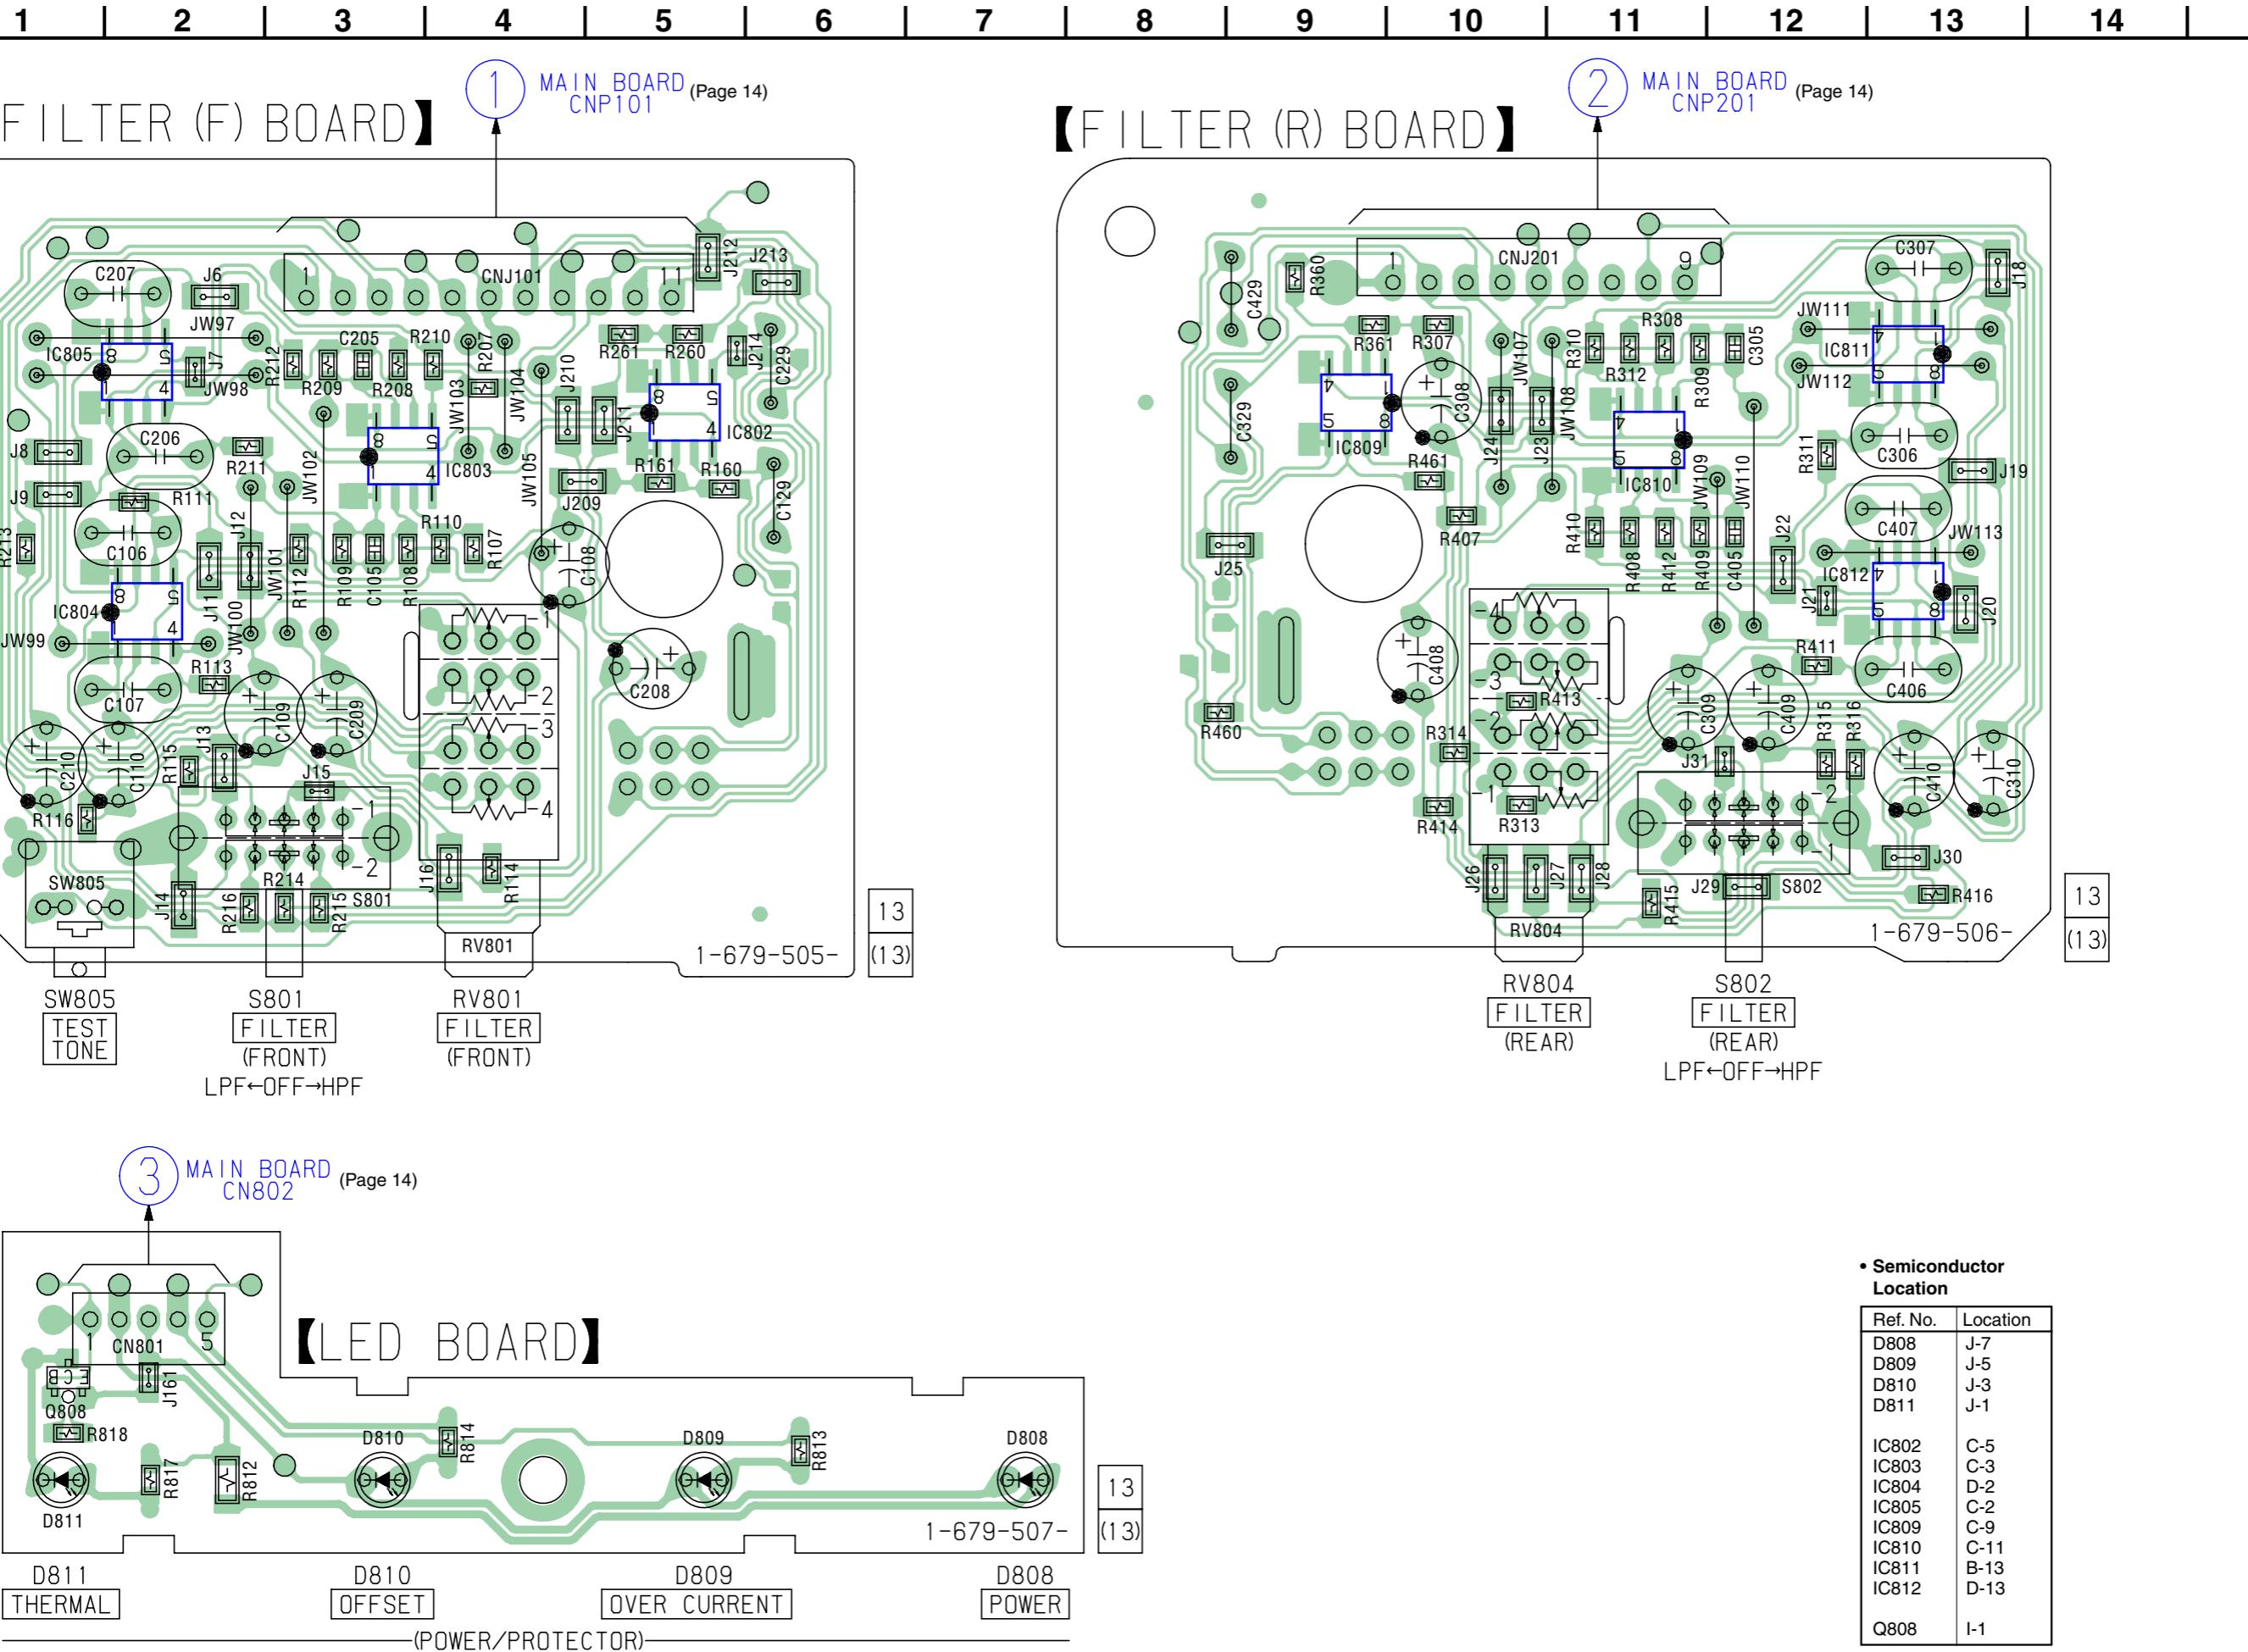

4-3. SCHEMATIC DIAGRAM — FILTER (F), FILTER (R), LED SECTION — • Refer to page 15 for Common Note on Schematic Diagrams.


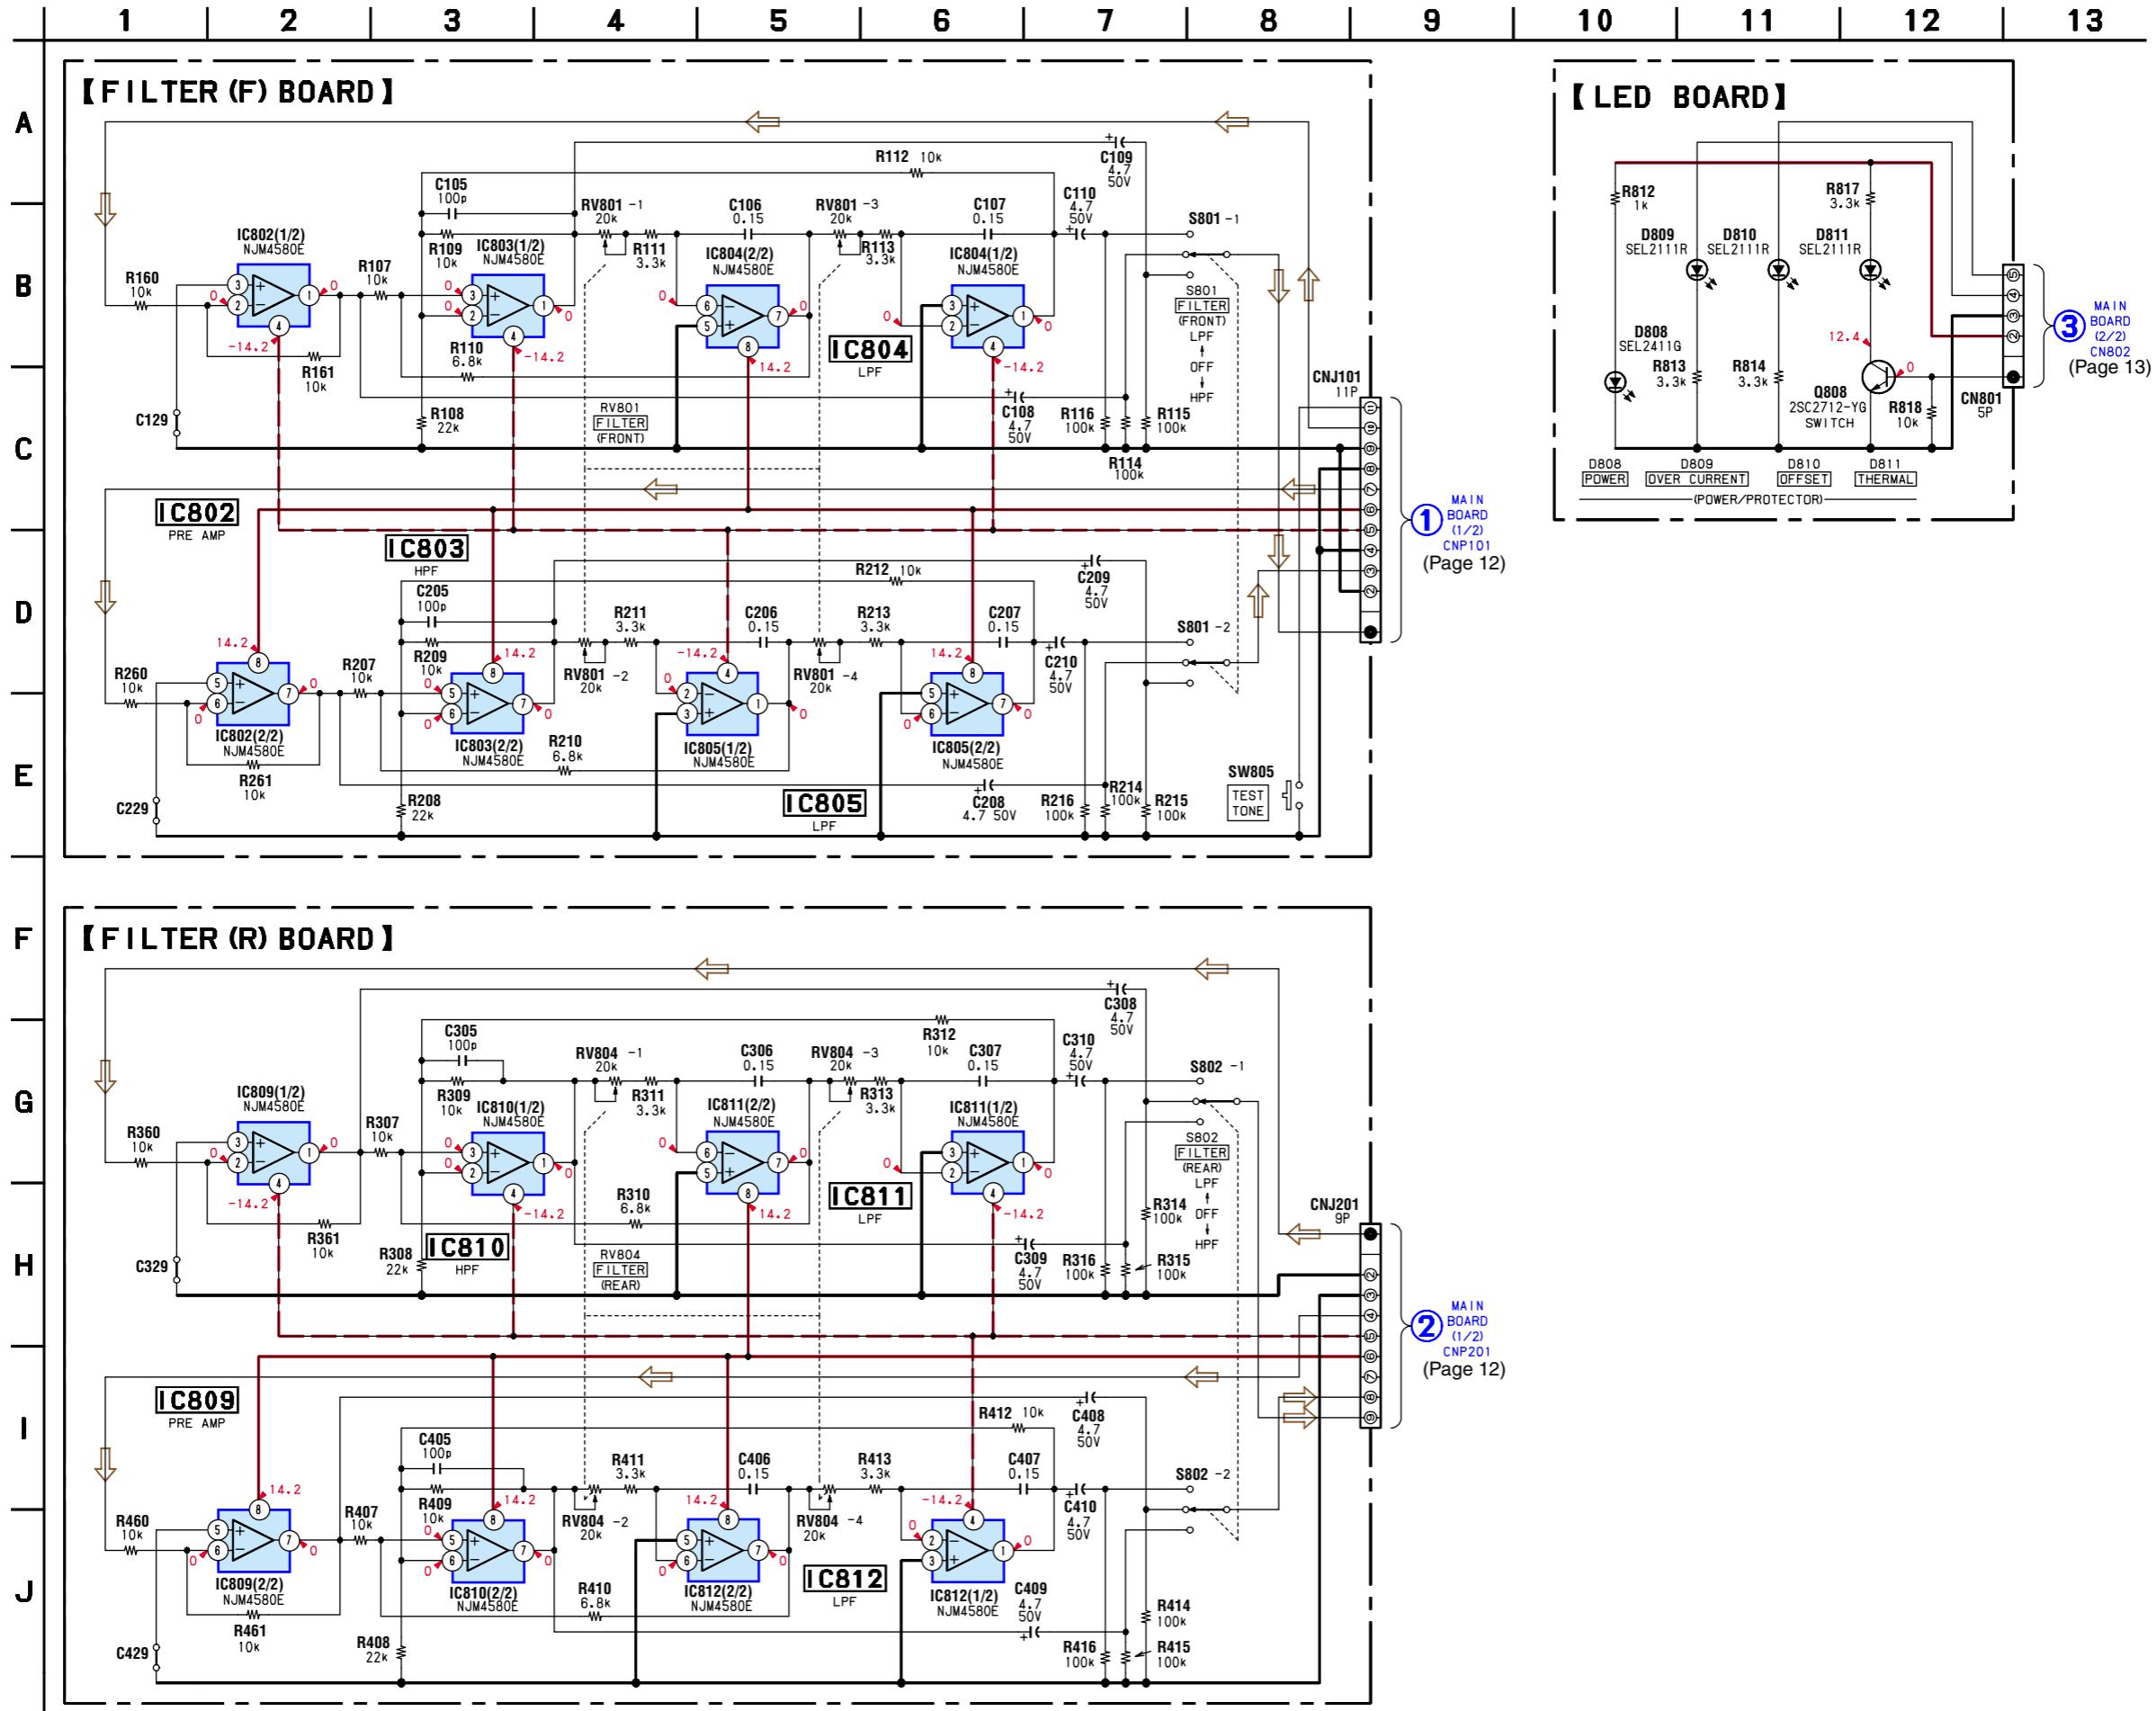


4-4. SCHEMATIC DIAGRAM — MAIN SECTION (1/2) — • Refer to page 15 for Common Note on Schematic Diagrams.

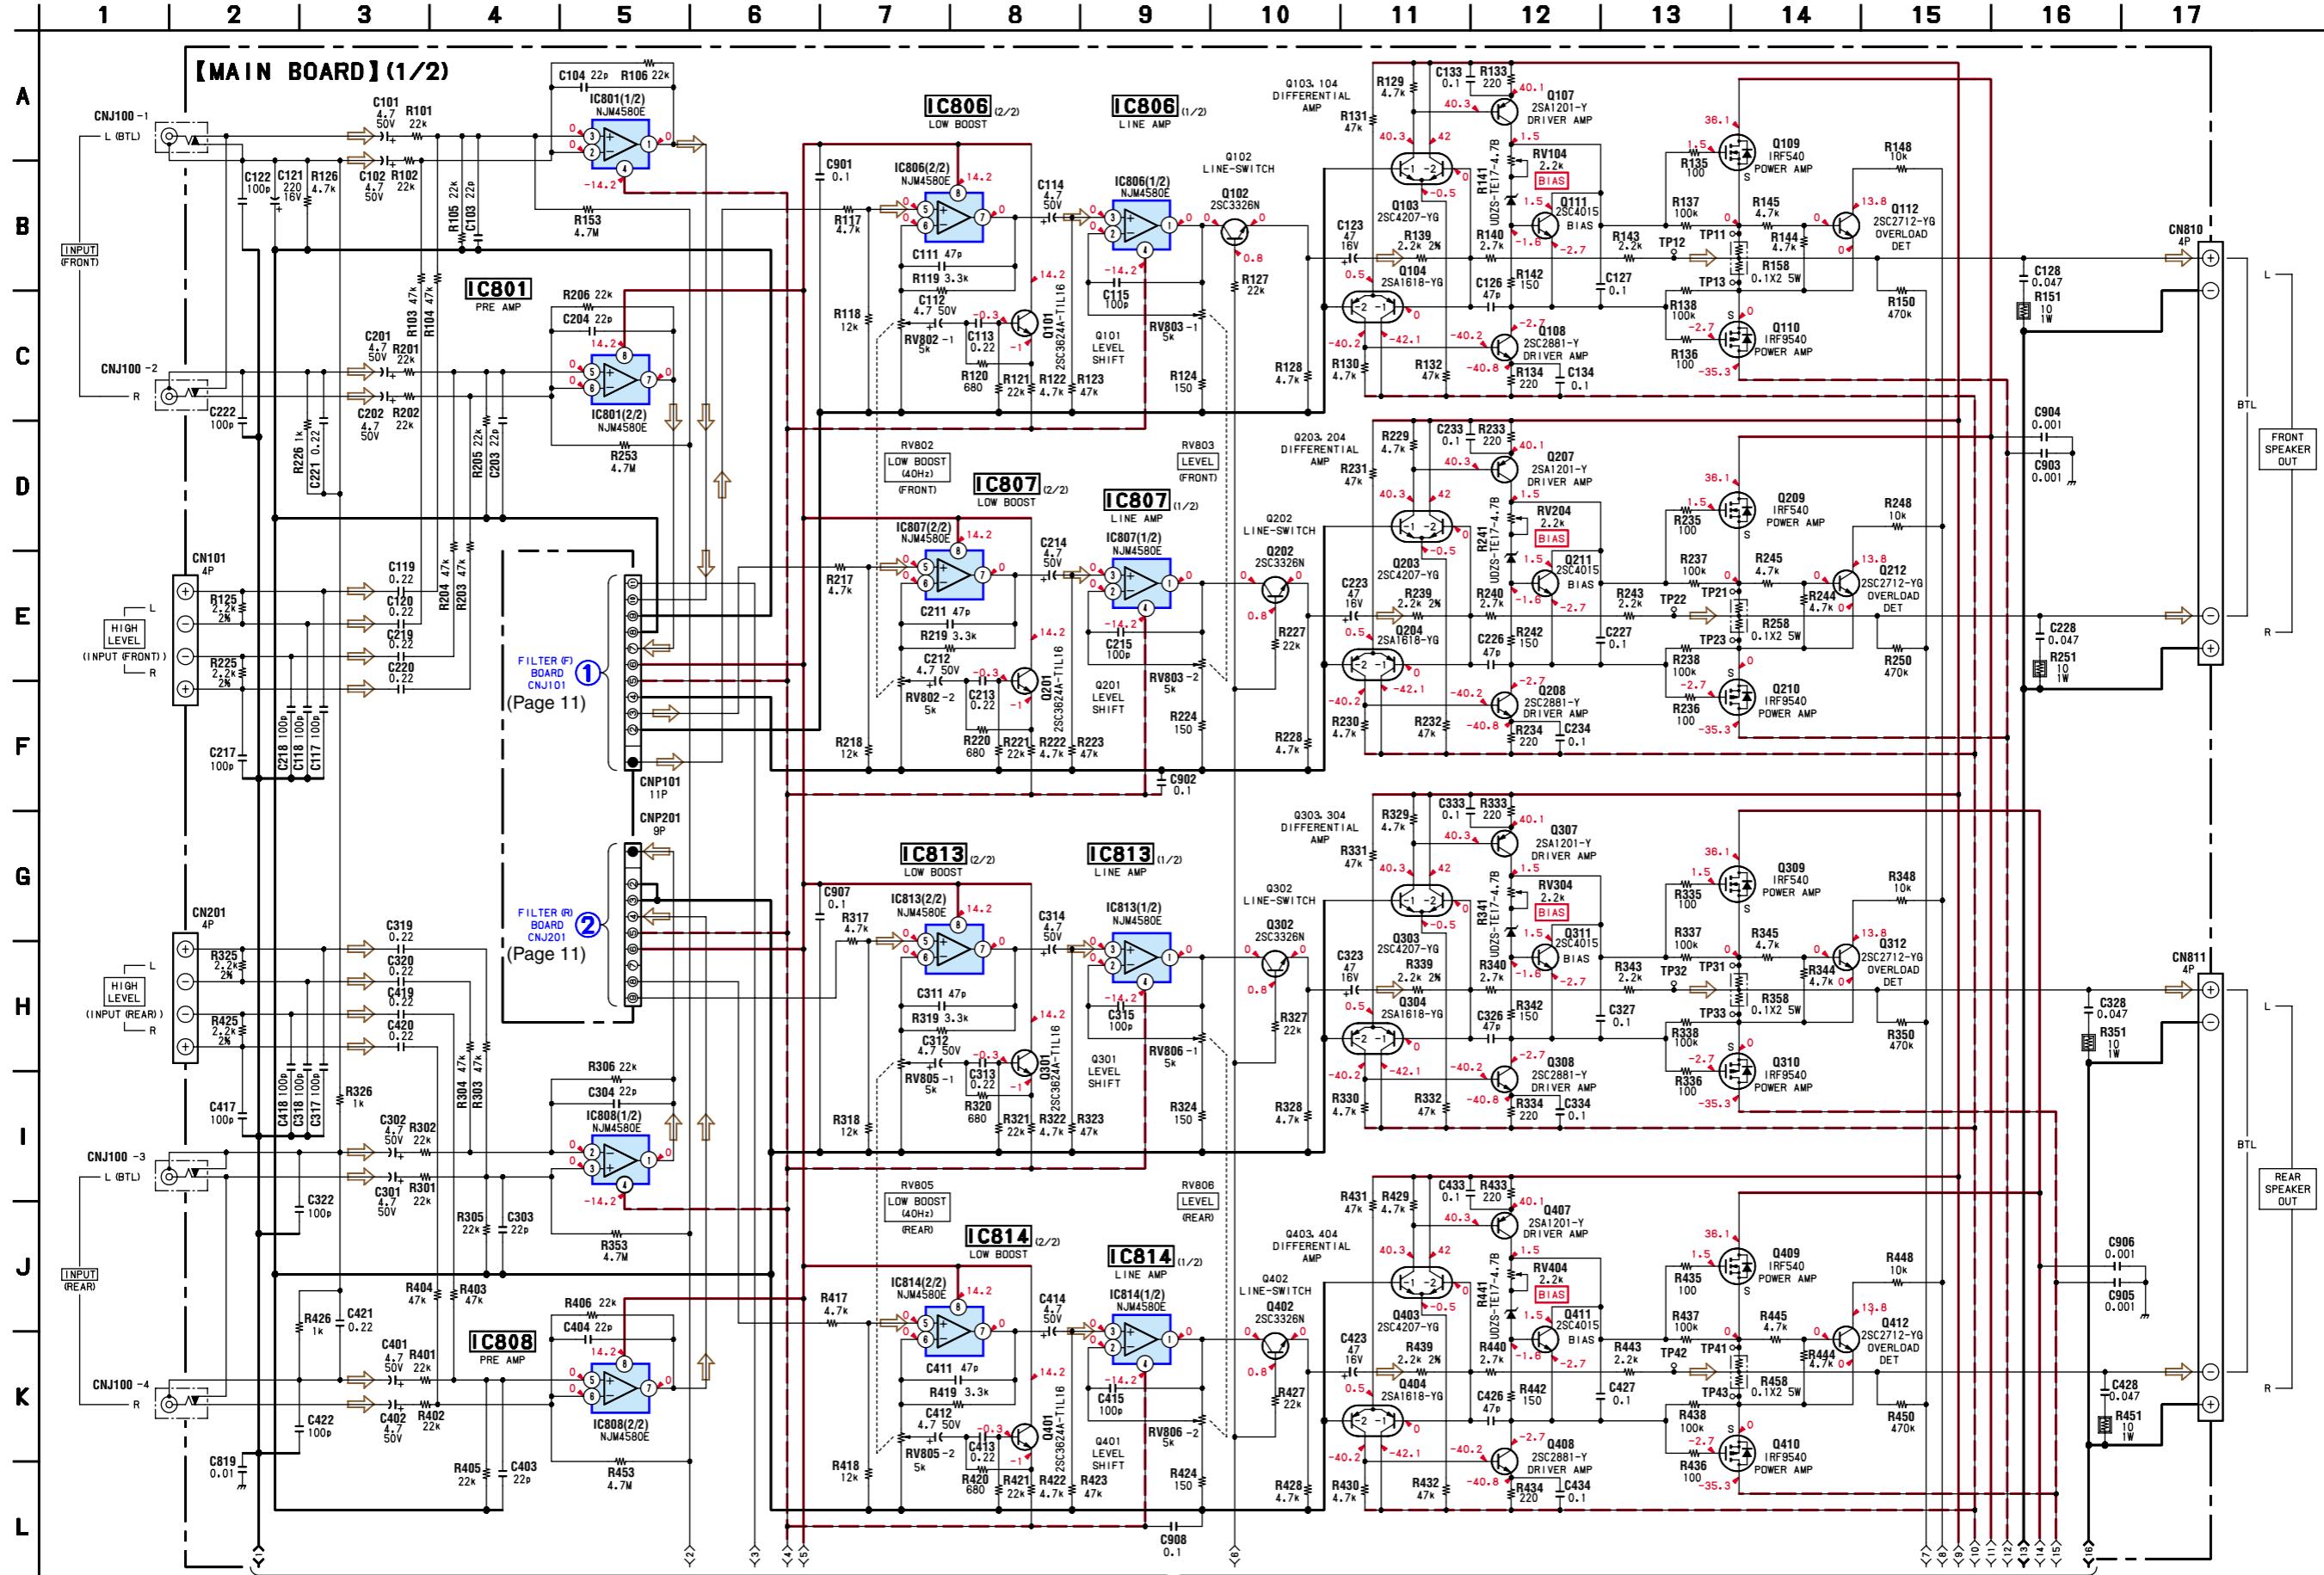MAIN BOARD (2/2)
(Page 13)

4-5. SCHEMATIC DIAGRAM — MAIN SECTION (2/2) — • Refer to page 15 for IC Block Diagram and Common Note on Schematic Diagrams

1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15

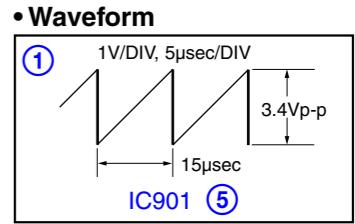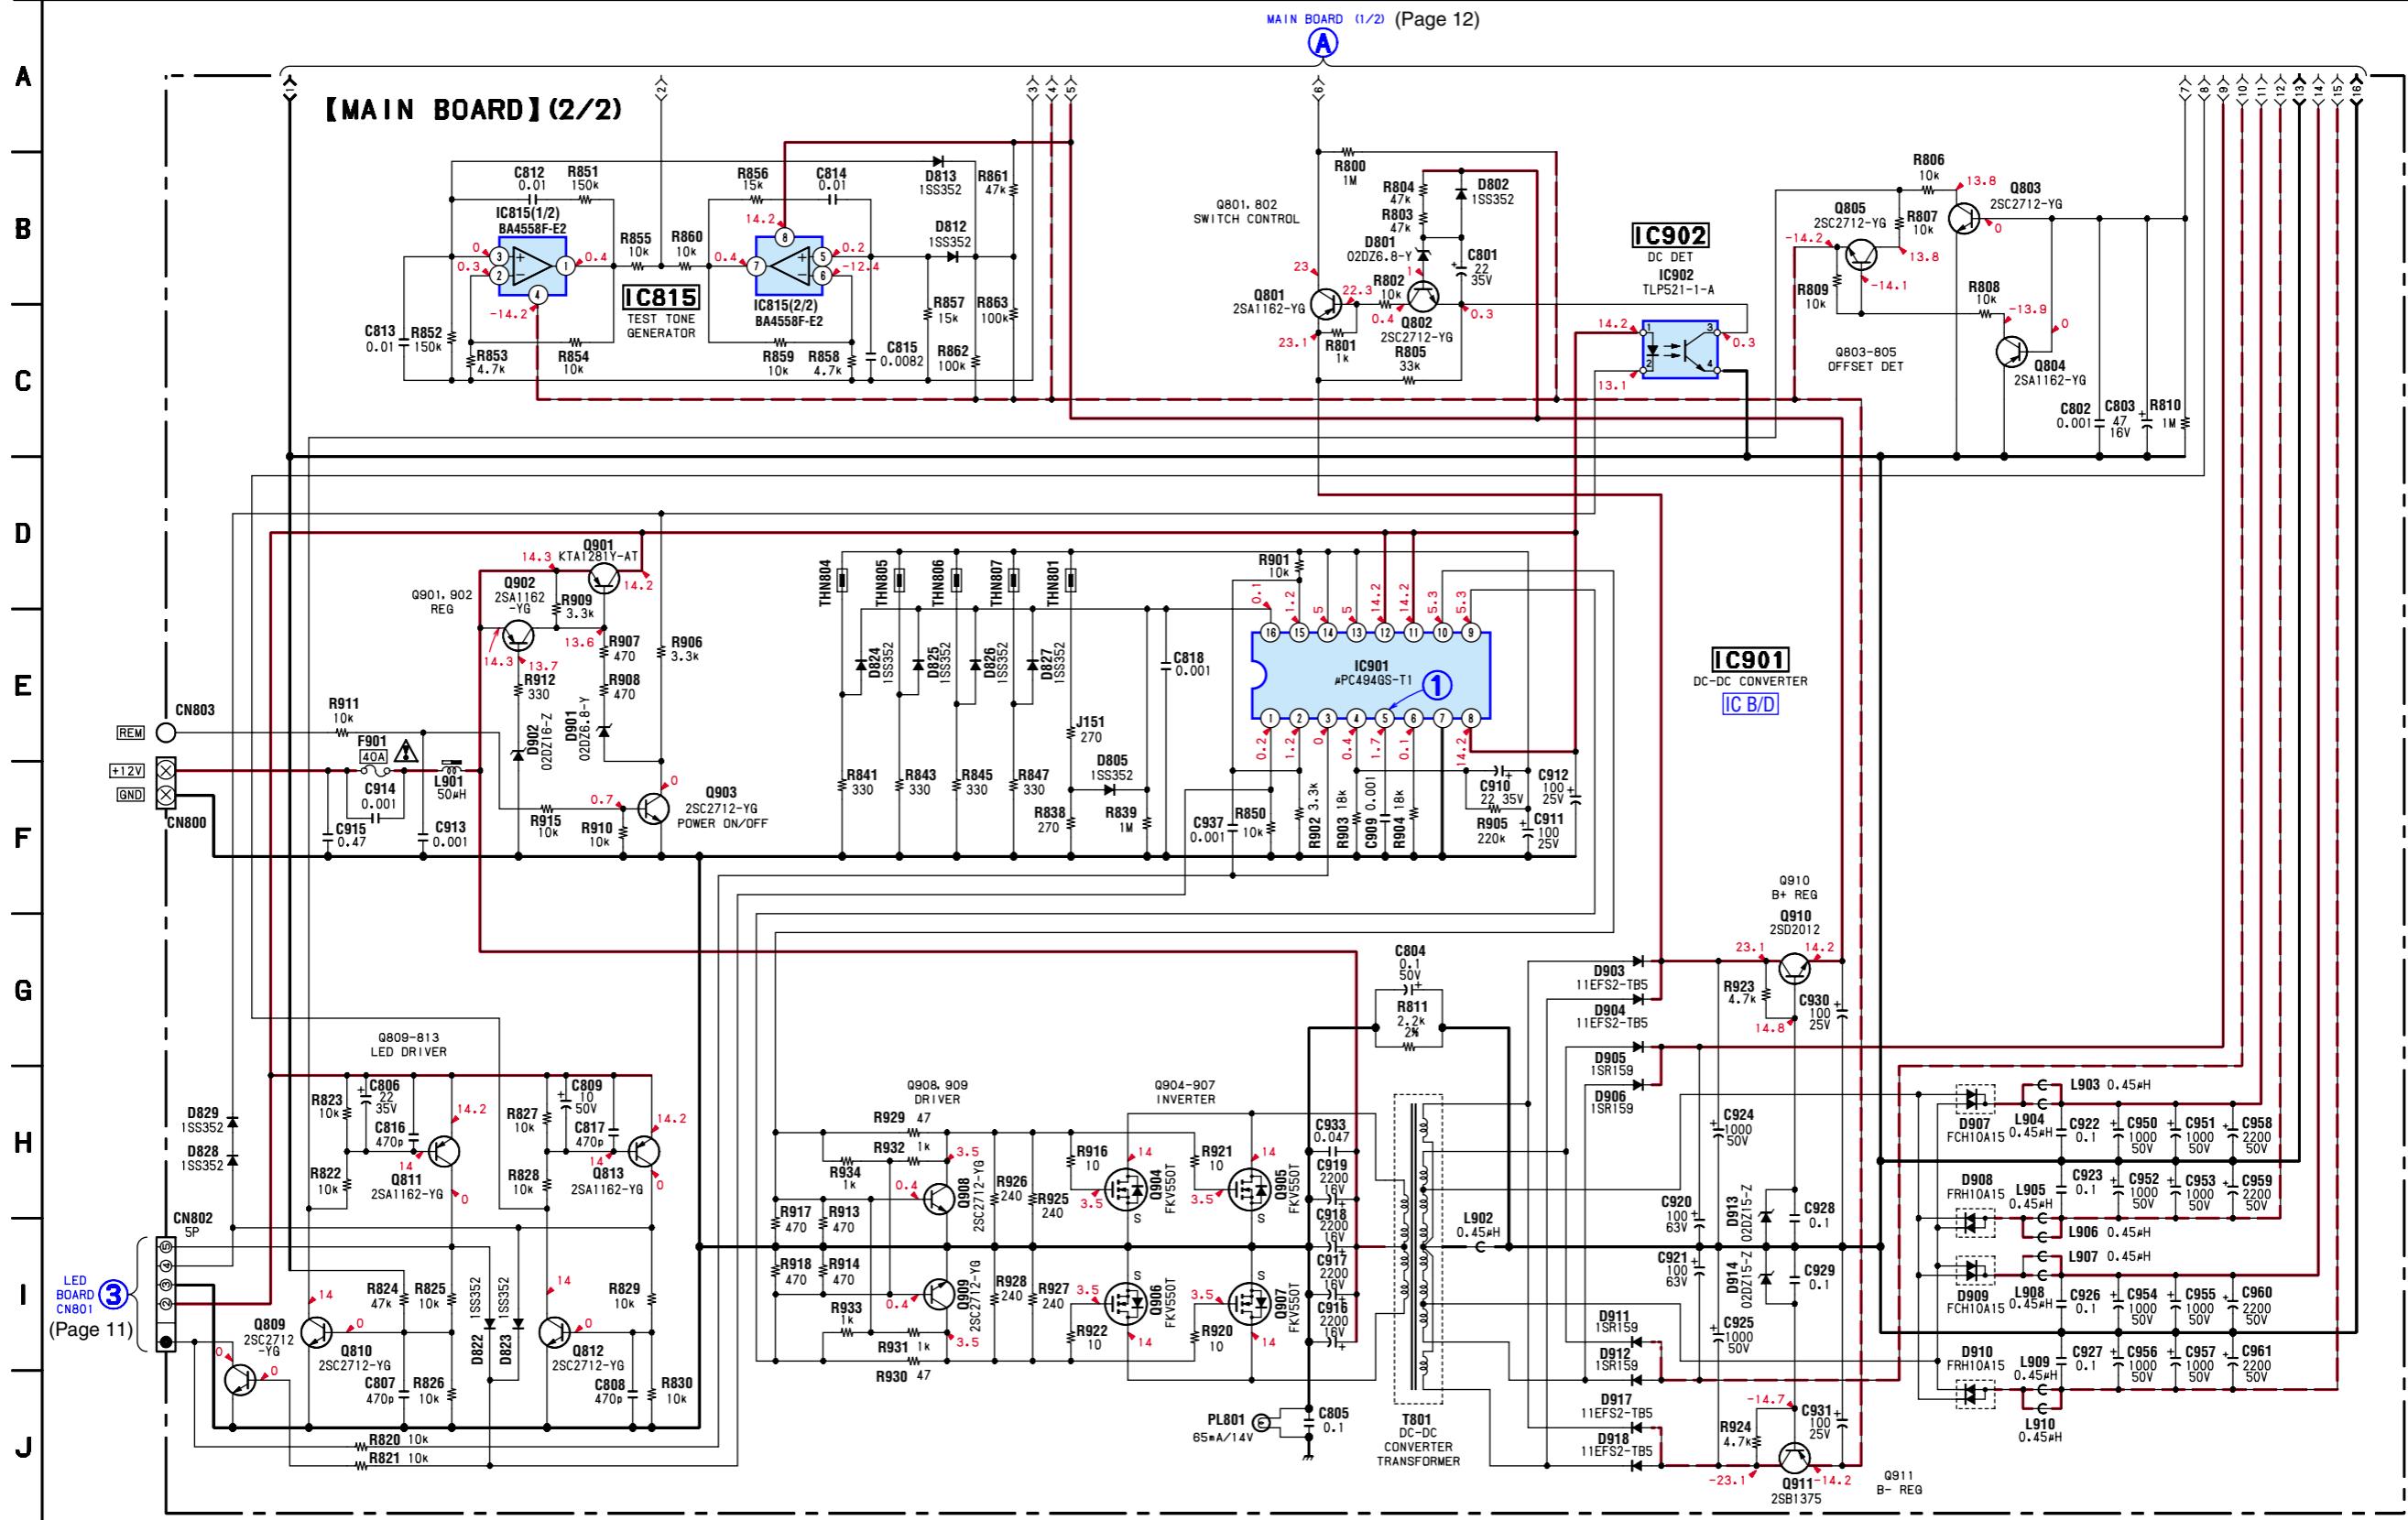

4-6. PRINTED WIRING BOARD — MAIN SECTION — • Refer to page 15 for Semiconductor Location and Common Note on Printed Wiring Boards

1 | **2** | **3** | **4** | **5** | **6** | **7** | **8** | **9** | **10** | **11** | **12** | **13** | **14** |

B

10

D

E


F

G

H

1

1

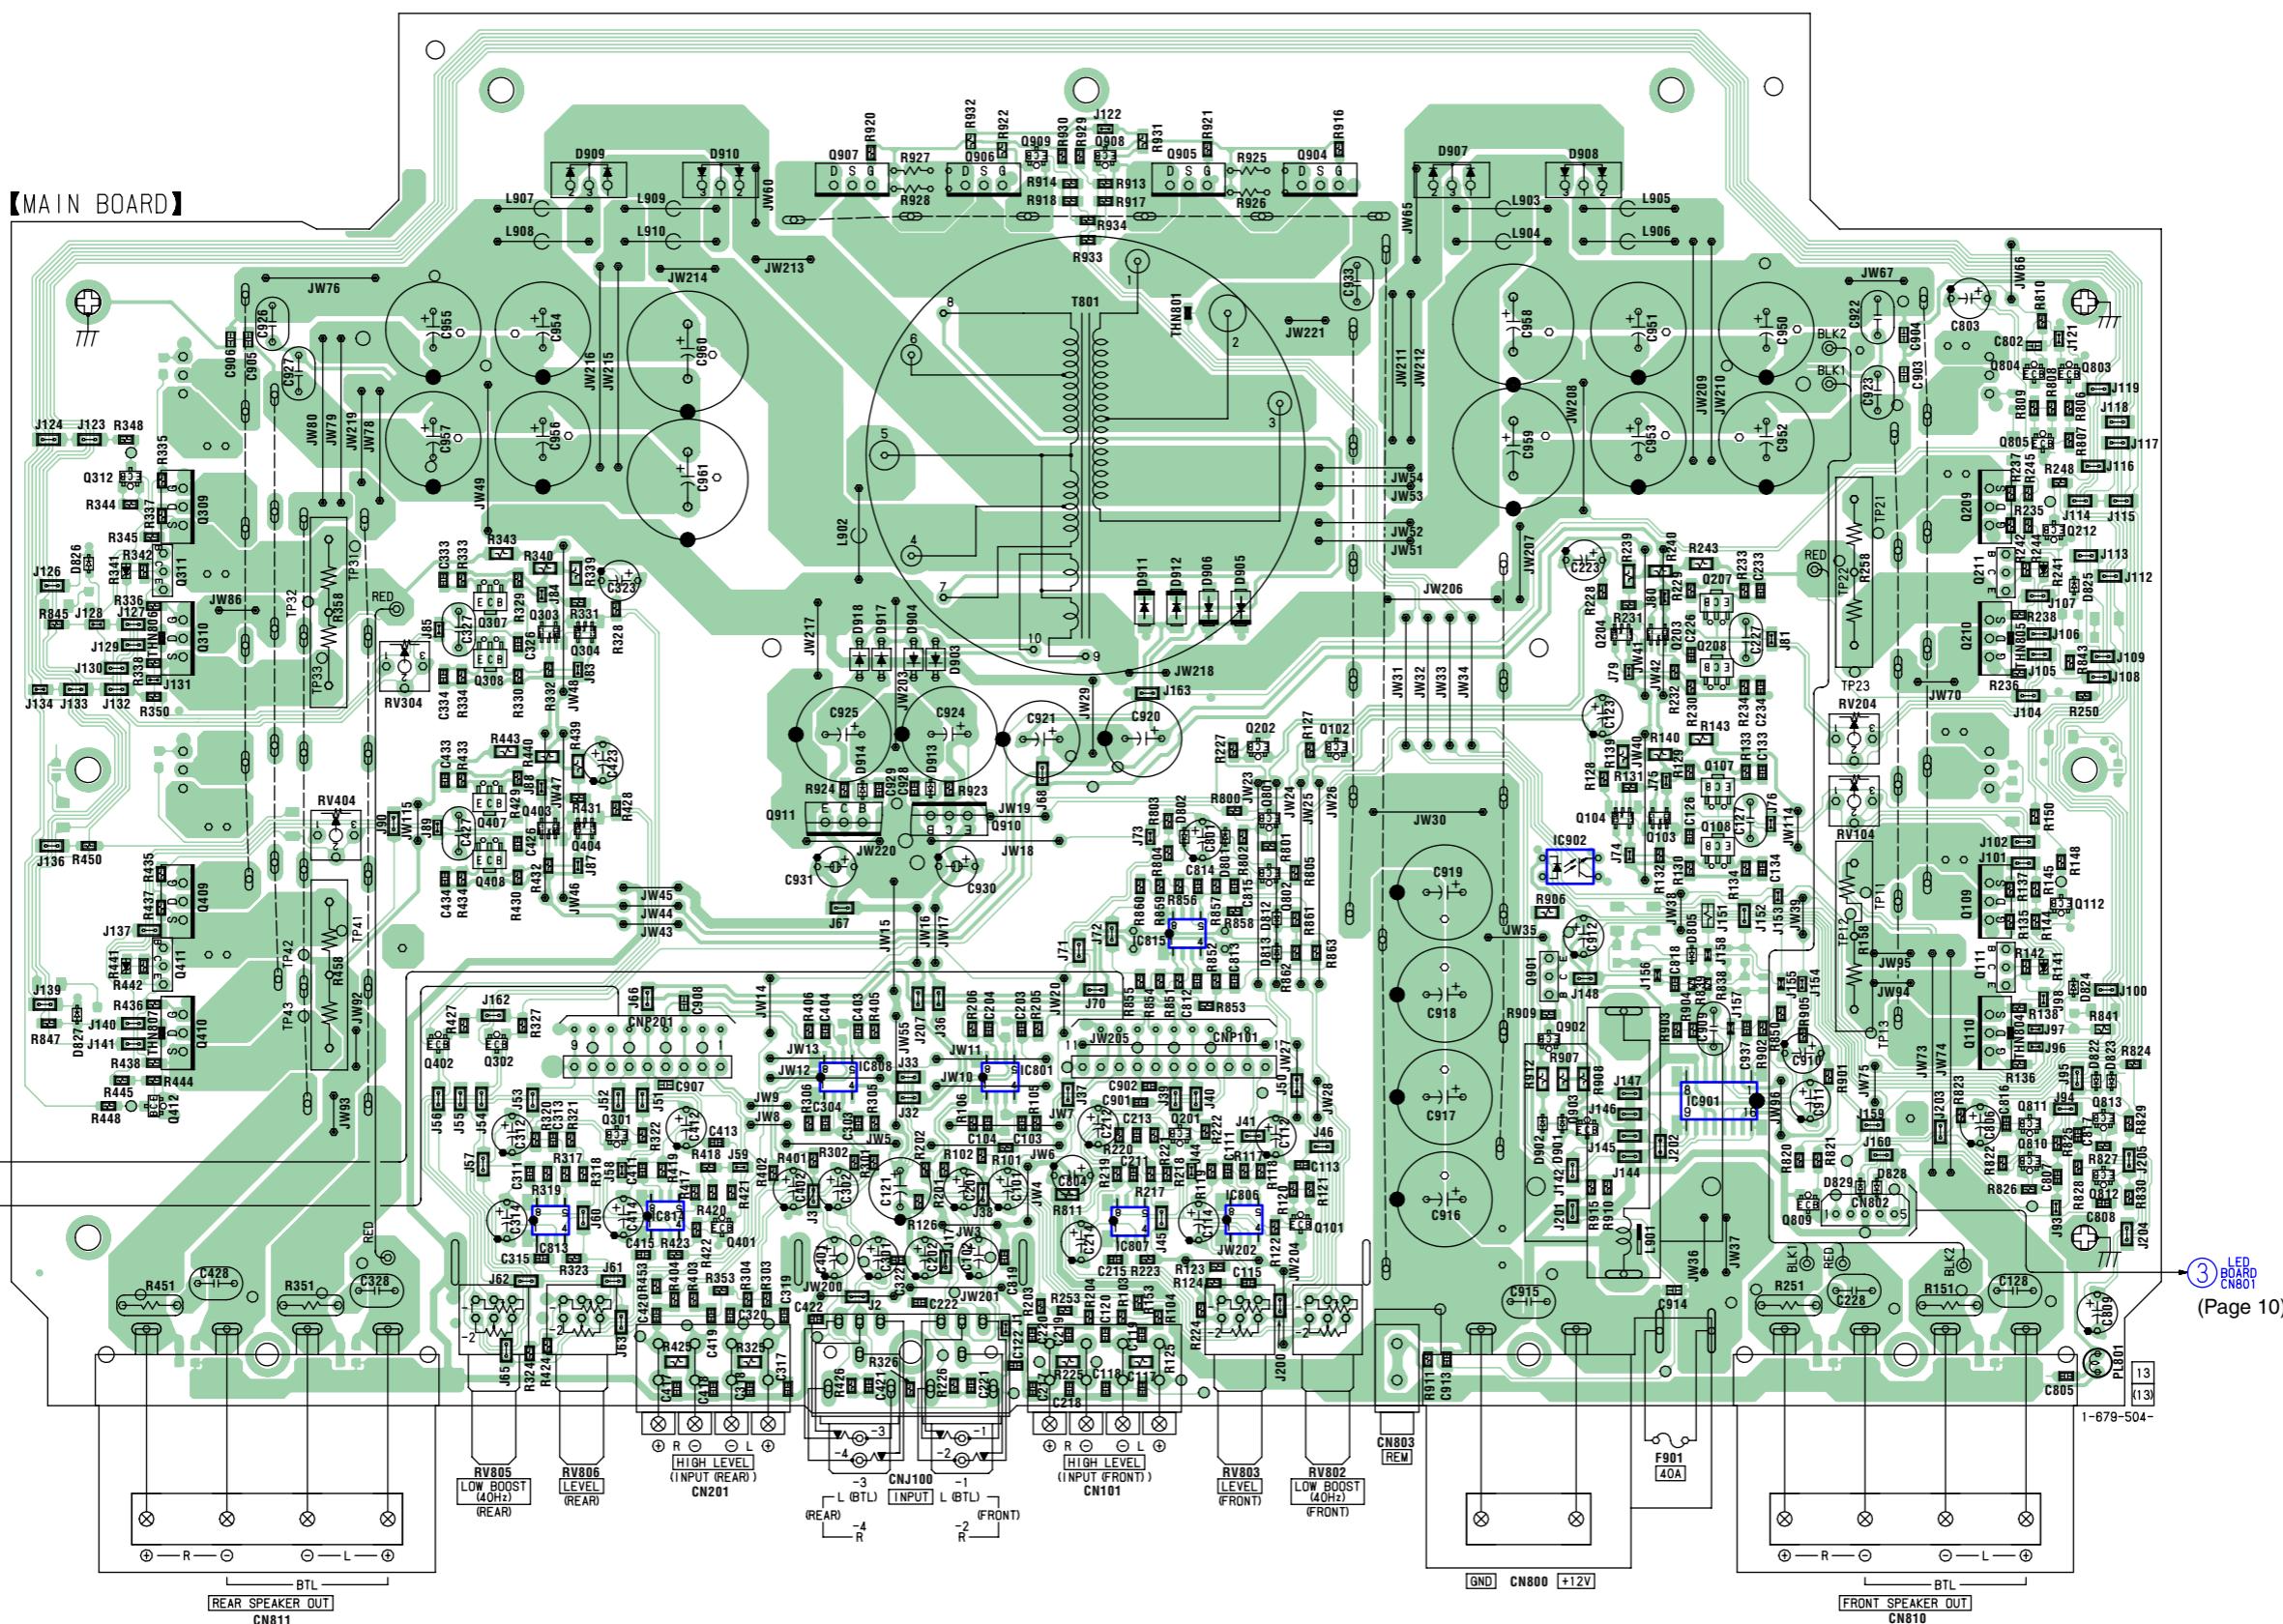

• Semiconductor Location (MAIN SECTION)

Ref. No.	Location	Ref. No.	Location
D801	F-8	Q111	F-13
D802	F-8	Q112	F-13
D805	F-11	Q201	G-8
D812	F-9	Q202	E-8
D813	F-9	Q203	E-11
D822	G-13	Q204	E-10
D823	G-13	Q207	D-11
D824	F-13	Q208	E-11
D825	D-13	Q209	D-12
D826	D-2	Q210	E-12
D827	G-2	Q211	D-13
D828	H-12	Q212	D-13
D829	H-12	Q301	G-5
D901	G-10	Q302	G-4
D902	G-10	Q303	E-5
D903	E-7	Q304	E-5
D904	E-7	Q307	D-4
D905	D-8	Q308	E-4
D906	D-8	Q309	D-3
D907	B-10	Q310	E-3
D908	B-10	Q311	D-3
D909	B-5	Q312	D-2
D910	B-6	Q401	H-6
D911	D-8	Q402	G-4
D912	D-8	Q403	F-5
D913	E-7	Q404	F-5
D914	E-6	Q407	F-4
D917	E-6	Q408	E-4
D918	E-6	Q409	F-3
R141	F-13	Q410	G-3
R241	D-13	Q411	F-3
R341	D-2	Q412	G-3
R441	F-2	Q801	F-9
		Q802	F-9
		Q803	C-13
IC801	G-7	Q804	C-13
IC806	H-8	Q805	C-13
IC807	H-8	Q809	H-11
IC808	G-6	Q810	G-13
IC813	H-5	Q811	G-13
IC814	H-5	Q812	G-13
IC815	F-8	Q813	G-13
IC901	G-11	Q901	F-10
IC902	F-10	Q902	G-10
		Q903	G-10
Q101	H-9	Q904	B-9
Q102	E-9	Q905	B-8
Q103	F-11	Q906	B-7
Q104	F-10	Q907	B-6
Q107	E-11	Q908	B-8
Q108	F-11	Q909	B-7
Q109	F-12	Q910	F-7
Q110	G-12	Q911	F-6

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.

(In addition to this, the necessary note is printed in each block.)

for schematic diagram:

Note:

- All capacitors are in μF unless otherwise noted. pF : $\mu\mu\text{F}$ 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $1/4$ W or less unless otherwise specified.
- % : indicates tolerance.
- : nonflammable resistor.

Note:

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- : B+ Line.
- - - : B- Line.
- Power voltage is dc 14.4V and fed with regulated dc power supply from +12V and REM terminals.
- Voltage is dc with respect to ground under no-signal condition.
- Voltages are taken with a VOM (Input impedance 10 M Ω). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
⇒ : AUDIO


for printed wiring boards:

Note:

- : parts extracted from the component side.
- : Pattern from the side which enables seeing.

• IC Block Diagram


IC901 $\mu\text{PC494GS-T1}$

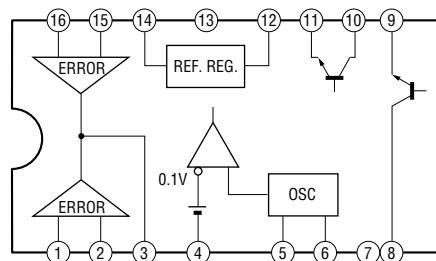

SECTION 5 EXPLODED VIEWS


NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked “**” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

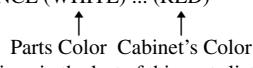- Color Indication of Appearance Parts**
Example :
KNOB, BALANCE (WHITE) ... (RED)

- Accessories are given in the last of this parts list.


The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

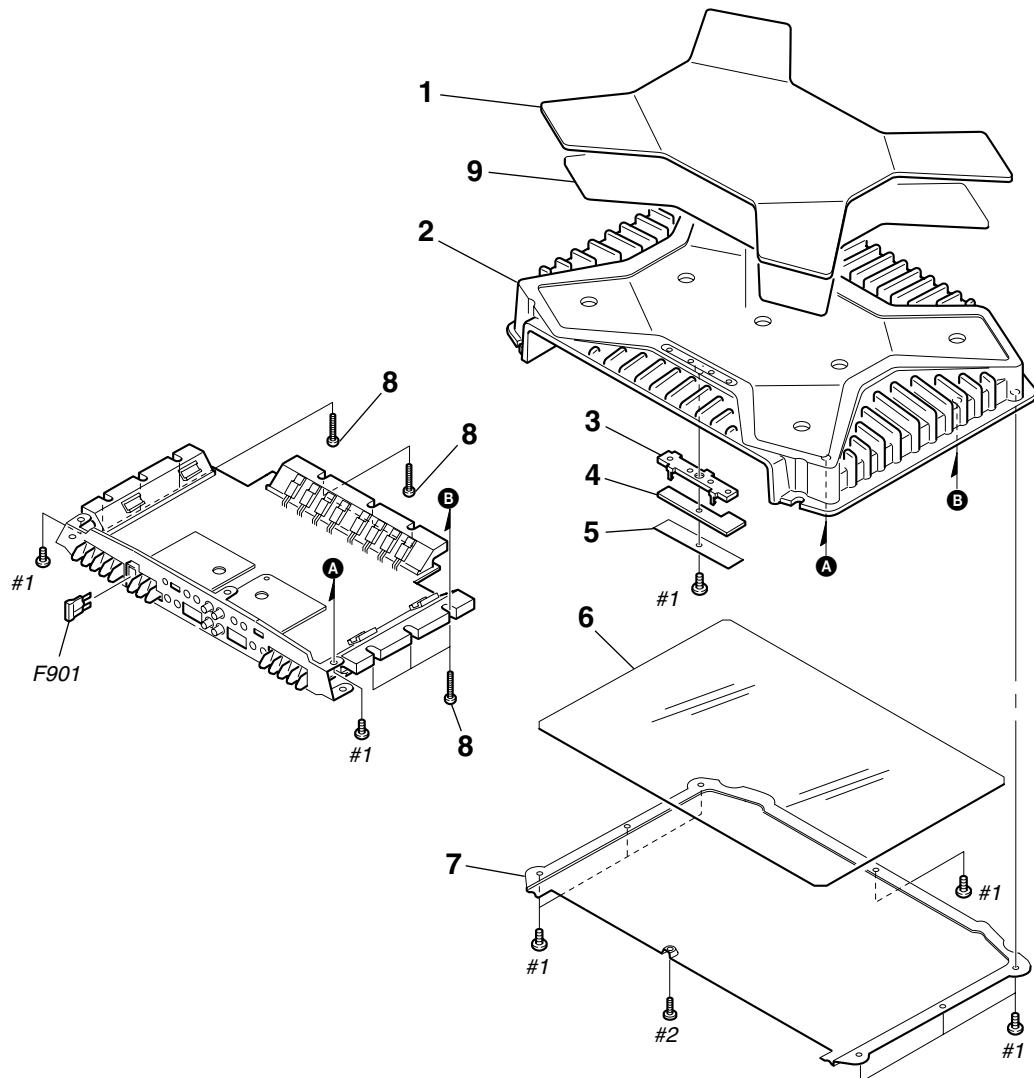Les composants identifiés par une marque \triangle sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

5-1. HEAT SINK (MAIN) SECTION

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	3-239-398-11	PLATE (HEAT SINK), ORNAMENTAL		* 7	3-225-068-02	PLATE, BOTTOM	
* 2	3-225-071-02	HEAT SINK (MAIN)		8	3-225-185-01	SCREW (+B.TT.3X14)	
* 3	3-225-065-01	HOLDER, LED		9	3-225-153-02	SHEET (HEAT SINK), ADHESIVE	
4	1-681-206-11	LED BOARD		\triangle F901	1-533-743-11	FUSE (BLADE TYPE) (AUTO FUSE) 40A	
* 5	3-225-152-02	SHEET (LED), INSULATING		#1	7-685-545-14	SCREW +BTP 3X6 TYPE2 N-S	
* 6	3-225-081-02	SHEET, INSULATING		#2	7-627-556-07	SCREW, PRECISION +P 2.6X2.8	

5-2. MAIN BOARD SECTION

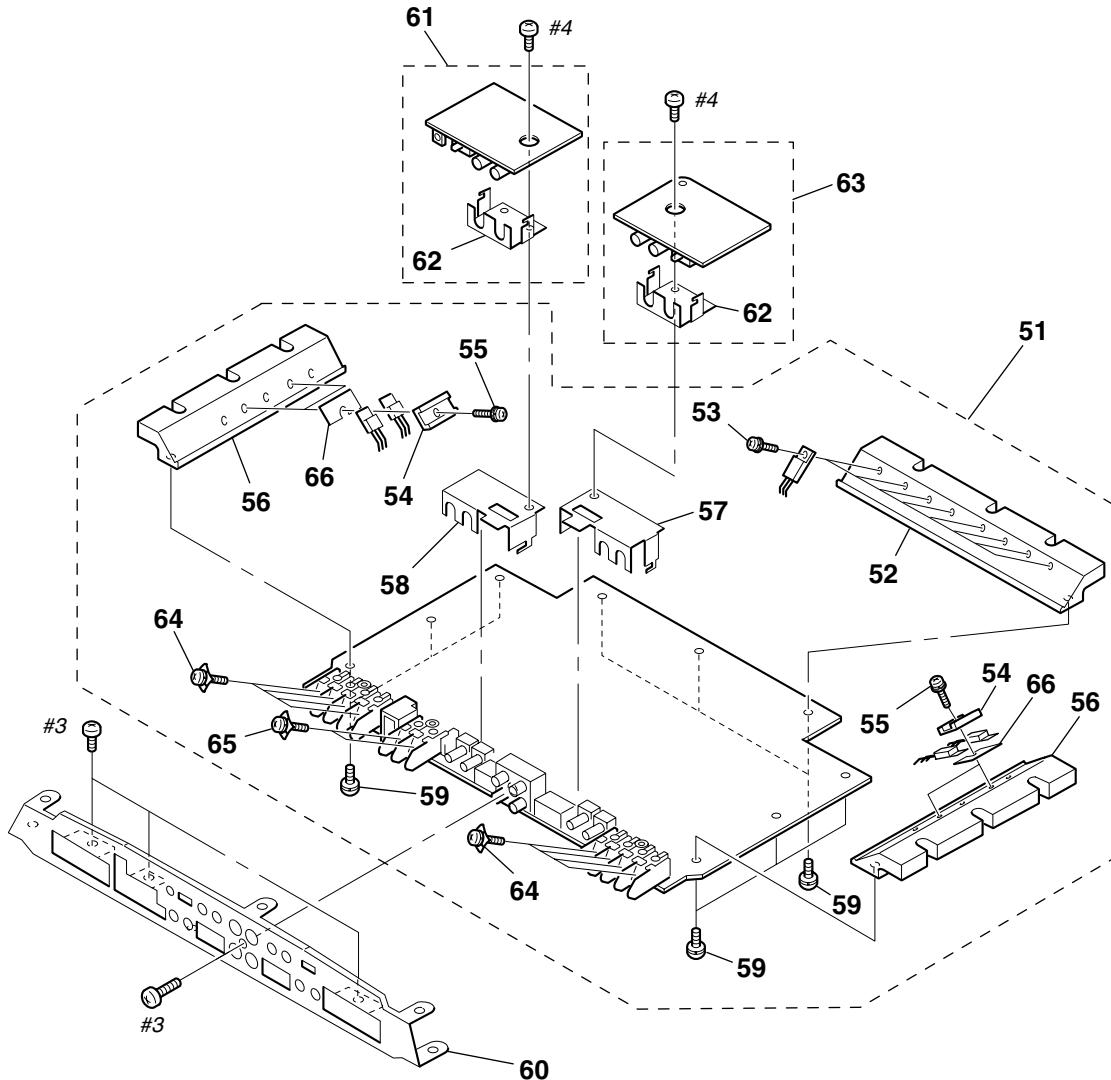

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* 51	A-3326-756-A	MAIN BOARD, COMPLETE		* 60	3-225-074-11	PANEL (4CH), FRONT	
* 52	3-225-067-02	HEAT SINK (SUB 2)		* 61	A-3326-757-A	FILTER (F) BOARD, COMPLETE	
53	3-225-183-01	SCREW (+PSW.TT.3XL)		* 62	3-225-076-01	BRACKET (5CH.VR3)	
* 54	3-225-080-01	HEAT SINK (RETAINER PLATE)		* 63	A-3326-758-A	FILTER (R) BOARD, COMPLETE	
55	3-225-183-11	SCREW (+PSW.TT.3XL)		64	3-912-431-01	SCREW (P)	
56	3-225-066-11	HEAT SINK (SUB 1)		65	3-369-647-01	SCREW (M4 SPACER)	
* 57	3-225-073-01	BRACKET (4CH.VR2)		66	3-238-413-01	SHEET (TR), INSULATING	
* 58	3-225-072-01	BRACKET (4CH.VR1)		#3	7-685-646-79	SCREW +P 3X8 TYPE2 NON-SLIT	
59	3-225-184-01	SCREW (+PS.TT.3X6)		#4	7-685-870-01	SCREW +BVTT 3X5 (S)	

FILTER (F)

SECTION 6

ELECTRICAL PARTS LIST

NOTE:

• Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.

• RESISTORS

All resistors are in ohms.

METAL: Metal-film resistor.

METAL OXIDE: Metal oxide-film resistor.

F: nonflammable

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

• SEMICONDUCTORS

In each case, u : μ , for example:

uA.. : μ A.. uPA.. : μ PA..
uPB.. : μ PB.. uPC.. : μ PC.. uPD.. : μ PD..

• CAPACITORS

uF : μ F

• COILS

uH : μ H

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque \triangle sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description					Remark	Ref. No.	Part No.	Description					Remark					
*	A-3326-757-A	FILTER (F) BOARD, COMPLETE						J214	1-216-295-11	SHORT					0					

*	3-225-076-01	BRACKET (5CH.VR3)						< RESISTOR >												
< CAPACITOR >																				
C105	1-162-927-11	CERAMIC CHIP	100PF	5%	50V		R107	1-216-833-11	METAL CHIP	10K	5%	1/16W								
C106	1-136-167-00	FILM	0.15uF	5%	50V		R108	1-216-837-11	METAL CHIP	22K	5%	1/16W								
C107	1-136-167-00	FILM	0.15uF	5%	50V		R109	1-216-833-11	METAL CHIP	10K	5%	1/16W								
C108	1-126-794-11	ELECT	4.7uF	20%	50V		R110	1-218-867-11	RES-CHIP	6.8K	5%	1/16W								
C109	1-126-794-11	ELECT	4.7uF	20%	50V		R111	1-216-827-11	METAL CHIP	3.3K	5%	1/16W								
C110	1-126-794-11	ELECT	4.7uF	20%	50V		R112	1-216-833-11	METAL CHIP	10K	5%	1/16W								
C205	1-162-927-11	CERAMIC CHIP	100PF	5%	50V		R113	1-216-827-11	METAL CHIP	3.3K	5%	1/16W								
C206	1-136-167-00	FILM	0.15uF	5%	50V		R114	1-216-845-11	METAL CHIP	100K	5%	1/16W								
C207	1-136-167-00	FILM	0.15uF	5%	50V		R115	1-216-845-11	METAL CHIP	100K	5%	1/16W								
C208	1-126-794-11	ELECT	4.7uF	20%	50V		R116	1-216-845-11	METAL CHIP	100K	5%	1/16W								
C209	1-126-794-11	ELECT	4.7uF	20%	50V		R160	1-216-833-11	METAL CHIP	10K	5%	1/16W								
C210	1-126-794-11	ELECT	4.7uF	20%	50V		R161	1-216-833-11	METAL CHIP	10K	5%	1/16W								
< CONNECTOR >																				
CNJ101	1-815-679-11	CONNECTOR, BOARD TO BOARD 11P					R207	1-216-833-11	METAL CHIP	10K	5%	1/16W								
< IC >																				
IC802	8-759-385-17	IC	NJM4580E(TE2)				R208	1-216-837-11	METAL CHIP	22K	5%	1/16W								
IC803	8-759-385-17	IC	NJM4580E(TE2)				R209	1-216-833-11	METAL CHIP	10K	5%	1/16W								
IC804	8-759-385-17	IC	NJM4580E(TE2)				R210	1-218-867-11	RES-CHIP	6.8K	5%	1/16W								
IC805	8-759-385-17	IC	NJM4580E(TE2)				R211	1-216-827-11	METAL CHIP	3.3K	5%	1/16W								
< JUMPER RESISTOR >																				
J6	1-216-296-11	SHORT	0				R212	1-216-833-11	METAL CHIP	10K	5%	1/16W								
J7	1-216-295-11	SHORT	0				R213	1-216-827-11	METAL CHIP	3.3K	5%	1/16W								
J8	1-216-296-11	SHORT	0				R214	1-216-845-11	METAL CHIP	100K	5%	1/16W								
J9	1-216-296-11	SHORT	0				R215	1-216-845-11	METAL CHIP	100K	5%	1/16W								
J11	1-216-296-11	SHORT	0				R216	1-216-845-11	METAL CHIP	100K	5%	1/16W								
J12	1-216-296-11	SHORT	0				R260	1-216-833-11	METAL CHIP	10K	5%	1/16W								
J13	1-216-296-11	SHORT	0				R261	1-216-833-11	METAL CHIP	10K	5%	1/16W								
J14	1-216-296-11	SHORT	0				< VARIABLE RESISTOR >													
J15	1-216-295-11	SHORT	0				RV801	1-225-647-11	RES, VAR, CARBON 20KX4 (FILTER (FRONT))											
J16	1-216-296-11	SHORT	0				< SWITCH >													
J209	1-216-296-11	SHORT	0				S801	1-572-185-11	SWITCH, SLIDE (FILTER (FRONT))											
J210	1-216-296-11	SHORT	0				SW805	1-762-638-11	SWITCH, TACTILE (TEST TONE)											
J211	1-216-296-11	SHORT	0				*****													
J212	1-216-296-11	SHORT	0																	
J213	1-216-296-11	SHORT	0																	

FILTER (R)

LED

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
*	A-3326-758-A	FILTER (R) BOARD, COMPLETE	*****			R315	1-216-845-11	METAL CHIP	100K	5%	1/16W
*	3-225-076-01	BRACKET (5CH.VR3)	< CAPACITOR >			R316	1-216-845-11	METAL CHIP	100K	5%	1/16W
C305	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	R360	1-216-833-11	METAL CHIP	10K	5%	1/16W
C306	1-136-167-00	FILM	0.15uF	5%	50V	R361	1-216-833-11	METAL CHIP	10K	5%	1/16W
C307	1-136-167-00	FILM	0.15uF	5%	50V	R407	1-216-833-11	METAL CHIP	10K	5%	1/16W
C308	1-126-794-11	ELECT	4.7uF	20%	50V	R408	1-216-837-11	METAL CHIP	22K	5%	1/16W
C309	1-126-794-11	ELECT	4.7uF	20%	50V	R409	1-216-833-11	METAL CHIP	10K	5%	1/16W
C310	1-126-794-11	ELECT	4.7uF	20%	50V	R410	1-218-867-11	RES-CHIP	6.8K	5%	1/16W
C405	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	R411	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
C406	1-136-167-00	FILM	0.15uF	5%	50V	R412	1-216-833-11	METAL CHIP	10K	5%	1/16W
C407	1-136-167-00	FILM	0.15uF	5%	50V	R413	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
C408	1-126-794-11	ELECT	4.7uF	20%	50V	R414	1-216-845-11	METAL CHIP	100K	5%	1/16W
C409	1-126-794-11	ELECT	4.7uF	20%	50V	R415	1-216-845-11	METAL CHIP	100K	5%	1/16W
C410	1-126-794-11	ELECT	4.7uF	20%	50V	R416	1-216-845-11	METAL CHIP	100K	5%	1/16W
		< VARIABLE RESISTOR >				R460	1-216-833-11	METAL CHIP	10K	5%	1/16W
		< CONNECTOR >				R461	1-216-833-11	METAL CHIP	10K	5%	1/16W
CNJ201	1-784-916-11	CONNECTOR, BOARD TO BOARD 9P	< SWITCH >			RV804	1-225-647-11	RES, VAR, CARBON 20KX4 (FILTER (REAR))			
		< IC >				S802	1-572-185-11	SWITCH, SLIDE (FILTER (REAR))			
IC809	8-759-385-17	IC NJM4580E(TE2)					1-681-206-11	LED BOARD			
IC810	8-759-385-17	IC NJM4580E(TE2)						*****			
IC811	8-759-385-17	IC NJM4580E(TE2)									
IC812	8-759-385-17	IC NJM4580E(TE2)									
		< JUMPER RESISTOR >				*	3-225-065-01	HOLDER, LED			
J18	1-216-296-11	SHORT	0	< DIODE >							
J19	1-216-296-11	SHORT	0			D808	8-719-064-23	LED SEL2411G (POWER)			
J20	1-216-296-11	SHORT	0			D809	8-719-302-91	LED SEL2111R (OVER CURRENT (PROTECTOR))			
J21	1-216-295-11	SHORT	0			D810	8-719-302-91	LED SEL2111R (OFFSET (PROTECTOR))			
J22	1-216-296-11	SHORT	0			D811	8-719-302-91	LED SEL2111R (THERMAL (PROTECTOR))			
J23	1-216-296-11	SHORT	0	< JUMPER RESISTOR >							
J24	1-216-296-11	SHORT	0			J161	1-216-295-11	SHORT	0		
J25	1-216-296-11	SHORT	0						< TRANSISTOR >		
J26	1-216-296-11	SHORT	0								
J27	1-216-296-11	SHORT	0								
J28	1-216-296-11	SHORT	0								
J29	1-216-296-11	SHORT	0								
J30	1-216-296-11	SHORT	0								
J31	1-216-295-11	SHORT	0								
		< RESISTOR >									
R307	1-216-833-11	METAL CHIP	10K	5%	1/16W	R812	1-216-198-00	RES-CHIP	1K	5%	1/8W
R308	1-216-837-11	METAL CHIP	22K	5%	1/16W	R813	1-216-061-00	RES-CHIP	3.3K	5%	1/10W
R309	1-216-833-11	METAL CHIP	10K	5%	1/16W	R814	1-216-061-00	RES-CHIP	3.3K	5%	1/10W
R310	1-218-867-11	RES-CHIP	6.8K	5%	1/16W	R817	1-216-061-00	RES-CHIP	3.3K	5%	1/10W
R311	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	R818	1-216-833-11	METAL CHIP	10K	5%	1/16W
R312	1-216-833-11	METAL CHIP	10K	5%	1/16W						
R313	1-216-827-11	METAL CHIP	3.3K	5%	1/16W						
R314	1-216-845-11	METAL CHIP	100K	5%	1/16W						

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark		
*	A-3326-756-A	MAIN BOARD, COMPLETE	*****	C223	1-126-786-11	ELECT	47uF 20%	16V	
				C226	1-162-923-11	CERAMIC CHIP	47PF 5%	50V	
				C227	1-136-165-00	FILM	0.1uF 5%	50V	
				C228	1-136-161-00	FILM	0.047uF 5%	50V	
*				C233	1-164-004-11	CERAMIC CHIP	0.1uF 10%	25V	
*	3-225-066-11	HEAT SINK (SUB 1)		C234	1-164-004-11	CERAMIC CHIP	0.1uF 10%	25V	
*	3-225-067-02	HEAT SINK (SUB 2)		C301	1-126-794-11	ELECT	4.7uF 20%	50V	
*	3-225-072-01	BRACKET (4CH.VR1)		C302	1-126-794-11	ELECT	4.7uF 20%	50V	
*	3-225-073-01	BRACKET (4CH.VR2)		C303	1-162-919-11	CERAMIC CHIP	22PF 5%	50V	
*	3-225-080-01	HEAT SINK (RETAINER PLATE)		C304	1-162-919-11	CERAMIC CHIP	22PF 5%	50V	
	3-238-413-01	SHEET (TR), INSULATING		C311	1-162-923-11	CERAMIC CHIP	47PF 5%	50V	
	3-225-183-01	SCREW (+PSW.TT.3XL)		C312	1-126-794-11	ELECT	4.7uF 20%	50V	
	3-225-183-11	SCREW (+PSW.TT.3XL)		C313	1-127-715-11	CERAMIC CHIP	0.22uF 10%	16V	
	3-225-184-01	SCREW (+PS.TT.3X6)		C314	1-126-794-11	ELECT	4.7uF 20%	50V	
	3-369-647-01	SCREW (M4 SPACER)		C315	1-162-927-11	CERAMIC CHIP	100PF 5%	50V	
	3-912-431-01	SCREW (P)		C317	1-162-927-11	CERAMIC CHIP	100PF 5%	50V	
	7-685-646-79	SCREW +P 3X8 TYPE2 NON-SLIT		C318	1-162-927-11	CERAMIC CHIP	100PF 5%	50V	
	< CAPACITOR >				C319	1-164-489-11	CERAMIC CHIP	0.22uF 10%	16V
C101	1-126-794-11	ELECT	4.7uF 20%	C320	1-164-489-11	CERAMIC CHIP	0.22uF 10%	16V	
C102	1-126-794-11	ELECT	4.7uF 20%	C322	1-162-927-11	CERAMIC CHIP	100PF 5%	50V	
C103	1-162-919-11	CERAMIC CHIP	22PF 5%	C323	1-126-786-11	ELECT	47uF 20%	16V	
C104	1-162-919-11	CERAMIC CHIP	22PF 5%	C326	1-162-923-11	CERAMIC CHIP	47PF 5%	50V	
C111	1-162-923-11	CERAMIC CHIP	47PF 5%	C327	1-136-165-00	FILM	0.1uF 5%	50V	
C112	1-126-794-11	ELECT	4.7uF 20%	C328	1-136-161-00	FILM	0.047uF 5%	50V	
C113	1-127-715-11	CERAMIC CHIP	0.22uF 10%	C333	1-164-004-11	CERAMIC CHIP	0.1uF 10%	25V	
C114	1-126-794-11	ELECT	4.7uF 20%	C334	1-164-004-11	CERAMIC CHIP	0.1uF 10%	25V	
C115	1-162-927-11	CERAMIC CHIP	100PF 5%	C401	1-126-794-11	ELECT	4.7uF 20%	50V	
C117	1-162-927-11	CERAMIC CHIP	100PF 5%	C402	1-126-794-11	ELECT	4.7uF 20%	50V	
C118	1-162-927-11	CERAMIC CHIP	100PF 5%	C403	1-162-919-11	CERAMIC CHIP	22PF 5%	50V	
C119	1-164-489-11	CERAMIC CHIP	0.22uF 10%	C404	1-162-919-11	CERAMIC CHIP	22PF 5%	50V	
C120	1-164-489-11	CERAMIC CHIP	0.22uF 10%	C411	1-162-923-11	CERAMIC CHIP	47PF 5%	50V	
C121	1-128-499-11	ELECT	220uF 20%	C412	1-126-794-11	ELECT	4.7uF 20%	50V	
C122	1-162-927-11	CERAMIC CHIP	100PF 5%	C413	1-127-715-11	CERAMIC CHIP	0.22uF 10%	16V	
C123	1-126-786-11	ELECT	47uF 20%	C414	1-126-794-11	ELECT	4.7uF 20%	50V	
C126	1-162-923-11	CERAMIC CHIP	47PF 5%	C415	1-162-927-11	CERAMIC CHIP	100PF 5%	50V	
C127	1-136-165-00	FILM	0.1uF 5%	C417	1-162-927-11	CERAMIC CHIP	100PF 5%	50V	
C128	1-136-161-00	FILM	0.047uF 5%	C418	1-162-927-11	CERAMIC CHIP	100PF 5%	50V	
C133	1-164-004-11	CERAMIC CHIP	0.1uF 10%	C419	1-164-489-11	CERAMIC CHIP	0.22uF 10%	16V	
C134	1-164-004-11	CERAMIC CHIP	0.1uF 10%	C420	1-164-489-11	CERAMIC CHIP	0.22uF 10%	16V	
C201	1-126-794-11	ELECT	4.7uF 20%	C421	1-164-489-11	CERAMIC CHIP	0.22uF 10%	16V	
C202	1-126-794-11	ELECT	4.7uF 20%	C422	1-162-927-11	CERAMIC CHIP	100PF 5%	50V	
C203	1-162-919-11	CERAMIC CHIP	22PF 5%	C423	1-126-786-11	ELECT	47uF 20%	16V	
C204	1-162-919-11	CERAMIC CHIP	22PF 5%	C426	1-162-923-11	CERAMIC CHIP	47PF 5%	50V	
C211	1-162-923-11	CERAMIC CHIP	47PF 5%	C427	1-136-165-00	FILM	0.1uF 5%	50V	
C212	1-126-794-11	ELECT	4.7uF 20%	C428	1-136-161-00	FILM	0.047uF 5%	50V	
C213	1-127-715-11	CERAMIC CHIP	0.22uF 10%	C433	1-164-004-11	CERAMIC CHIP	0.1uF 10%	25V	
C214	1-126-794-11	ELECT	4.7uF 20%	C434	1-164-004-11	CERAMIC CHIP	0.1uF 10%	25V	
C215	1-162-927-11	CERAMIC CHIP	100PF 5%	C801	1-126-796-11	ELECT	22uF 20%	35V	
C217	1-162-927-11	CERAMIC CHIP	100PF 5%	C802	1-162-964-11	CERAMIC CHIP	0.001uF 10%	50V	
C218	1-162-927-11	CERAMIC CHIP	100PF 5%	C803	1-126-786-11	ELECT	47uF 20%	16V	
C219	1-164-489-11	CERAMIC CHIP	0.22uF 10%	C804	1-115-867-11	ELECT	0.1uF 20%	50V	
C220	1-164-489-11	CERAMIC CHIP	0.22uF 10%	C805	1-115-339-11	CERAMIC CHIP	0.1uF 10%	50V	
C221	1-164-489-11	CERAMIC CHIP	0.22uF 10%	C806	1-126-796-11	ELECT	22uF 20%	35V	
C222	1-162-927-11	CERAMIC CHIP	100PF 5%						

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description		Remark	
C807	1-162-962-11	CERAMIC CHIP	470PF	10%	50V	C959	1-100-199-31	ELECT	2200uF	20%	50V
C808	1-162-962-11	CERAMIC CHIP	470PF	10%	50V	C960	1-100-199-31	ELECT	2200uF	20%	50V
C809	1-126-964-11	ELECT	10uF	20%	50V	C961	1-100-199-31	ELECT	2200uF	20%	50V
C812	1-163-021-11	CERAMIC CHIP	0.01uF	10%	50V						
C813	1-163-021-11	CERAMIC CHIP	0.01uF	10%	50V					< CONNECTOR >	
C814	1-163-021-11	CERAMIC CHIP	0.01uF	10%	50V	CN101	1-794-219-11	CONNECTOR 4P			
C815	1-164-174-11	CERAMIC CHIP	0.0082uF	10%	25V					(HIGH LEVEL (INPUT (FRONT)))	
C816	1-162-962-11	CERAMIC CHIP	470PF	10%	50V	CN201	1-794-219-11	CONNECTOR 4P (HIGH LEVEL (INPUT (REAR)))			
C817	1-162-962-11	CERAMIC CHIP	470PF	10%	50V	* CN802	1-568-954-11	PIN, CONNECTOR 5P			
C818	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	CN803	1-815-300-11	CONNECTOR 1P (REM)			
C819	1-163-021-11	CERAMIC CHIP	0.01uF	10%	50V	CNP101	1-815-680-11	PIN, CONNECTOR (PWB) 11P			
C901	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V	CNP201	1-784-917-11	PIN, CONNECTOR (PWB) 9P			
C902	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V					< TERMINAL BOARD >	
C903	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	CN800	1-694-755-11	TERMINAL BOARD (2P+FUSE) (+12V,GND)			
C904	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	CN810	1-694-756-11	TERMINAL BOARD (4P) (FRONT SPEAKER OUT)			
C905	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	CN811	1-694-756-11	TERMINAL BOARD (4P) (REAR SPEAKER OUT)			
C906	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V					< JACK >	
C907	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V	CNJ100	1-779-078-41	JACK, PIN 4P (INPUT (FRONT/REAR))			
C908	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V					< DIODE >	
C909	1-130-471-00	MYLAR	0.001uF	5%	50V	D801	8-719-065-18	DIODE 02DZ6.8-Y(TPH3)			
C910	1-126-796-11	ELECT	22uF	20%	35V	D802	8-719-016-74	DIODE 1SS352			
C911	1-104-665-11	ELECT	100uF	20%	25V	D805	8-719-016-74	DIODE 1SS352			
C912	1-104-665-11	ELECT	100uF	20%	25V	D812	8-719-016-74	DIODE 1SS352			
C913	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	D813	8-719-016-74	DIODE 1SS352			
C914	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	D822	8-719-016-74	DIODE 1SS352			
C915	1-137-194-11	FILM	0.47uF	5%	50V	D823	8-719-016-74	DIODE 1SS352			
C916	1-131-731-11	ELECT	2200uF	20%	16V	D824	8-719-016-74	DIODE 1SS352			
C917	1-131-731-11	ELECT	2200uF	20%	16V	D825	8-719-016-74	DIODE 1SS352			
C918	1-131-731-11	ELECT	2200uF	20%	16V	D826	8-719-016-74	DIODE 1SS352			
C919	1-131-731-11	ELECT	2200uF	20%	16V	D827	8-719-016-74	DIODE 1SS352			
C920	1-128-576-11	ELECT	100uF	20%	63V	D828	8-719-016-74	DIODE 1SS352			
C921	1-128-576-11	ELECT	100uF	20%	63V	D829	8-719-016-74	DIODE 1SS352			
C922	1-136-165-00	FILM	0.1uF	5%	50V	D901	8-719-065-18	DIODE 02DZ6.8-Y(TPH3)			
C923	1-136-165-00	FILM	0.1uF	5%	50V	D902	8-719-065-46	DIODE 02DZ16-Z(TPH3)			
C924	1-126-972-11	ELECT	1000uF	20%	50V	D903	8-719-987-67	DIODE 11EFS2			
C925	1-126-972-11	ELECT	1000uF	20%	50V	D904	8-719-987-67	DIODE 11EFS2			
C926	1-136-165-00	FILM	0.1uF	5%	50V	D905	8-719-079-92	DIODE 1SR159-200TE25			
C927	1-136-165-00	FILM	0.1uF	5%	50V	D906	8-719-079-92	DIODE 1SR159-200TE25			
C928	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V	D907	8-719-079-00	DIODE FCH10A15			
C929	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V	D908	8-719-079-01	DIODE FRH10A15			
C930	1-104-665-11	ELECT	100uF	20%	25V	D909	8-719-079-00	DIODE FCH10A15			
C931	1-104-665-11	ELECT	100uF	20%	25V	D910	8-719-079-01	DIODE FRH10A15			
C933	1-136-161-00	FILM	0.047uF	5%	50V	D911	8-719-079-92	DIODE 1SR159-200TE25			
C937	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	D912	8-719-079-92	DIODE 1SR159-200TE25			
C950	1-126-972-11	ELECT	1000uF	20%	50V	D913	8-719-065-43	DIODE 02DZ15-Z(TPH3)			
C951	1-126-972-11	ELECT	1000uF	20%	50V	D914	8-719-065-43	DIODE 02DZ15-Z(TPH3)			
C952	1-126-972-11	ELECT	1000uF	20%	50V	D917	8-719-987-67	DIODE 11EFS2			
C953	1-126-972-11	ELECT	1000uF	20%	50V	D918	8-719-987-67	DIODE 11EFS2			
C954	1-126-972-11	ELECT	1000uF	20%	50V	R141	8-719-083-60	DIODE UDZS-TE17-4.7B			
C955	1-126-972-11	ELECT	1000uF	20%	50V						
C956	1-126-972-11	ELECT	1000uF	20%	50V						
C957	1-126-972-11	ELECT	1000uF	20%	50V						
C958	1-100-199-31	ELECT	2200uF	20%	50V						

XM-475GSX

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R241	8-719-083-60	DIODE UDZS-TE17-4.7B		J72	1-216-296-11	SHORT	0
R341	8-719-083-60	DIODE UDZS-TE17-4.7B		J73	1-216-295-11	SHORT	0
R441	8-719-083-60	DIODE UDZS-TE17-4.7B		J74	1-216-295-11	SHORT	0
		< IC >		J75	1-216-295-11	SHORT	0
				J76	1-216-295-11	SHORT	0
IC801	8-759-385-17	IC NJM4580E(TE2)		J79	1-216-295-11	SHORT	0
IC806	8-759-385-17	IC NJM4580E(TE2)		J80	1-216-295-11	SHORT	0
IC807	8-759-385-17	IC NJM4580E(TE2)		J81	1-216-295-11	SHORT	0
IC808	8-759-385-17	IC NJM4580E(TE2)		J83	1-216-295-11	SHORT	0
IC813	8-759-385-17	IC NJM4580E(TE2)		J84	1-216-295-11	SHORT	0
IC814	8-759-385-17	IC NJM4580E(TE2)		J85	1-216-295-11	SHORT	0
IC815	8-759-909-71	IC BA4558F		J87	1-216-295-11	SHORT	0
IC901	8-759-144-88	IC uPC494GS		J88	1-216-295-11	SHORT	0
		< PHOTO TRANSISTOR >		J89	1-216-295-11	SHORT	0
IC902	8-719-800-42	PHOTO TRANSISTOR TLP521-1-A		J90	1-216-296-11	SHORT	0
		< JUMPER RESISTOR >		J93	1-216-295-11	SHORT	0
J1	1-216-295-11	SHORT	0	J94	1-216-296-11	SHORT	0
J2	1-216-296-11	SHORT	0	J95	1-216-296-11	SHORT	0
J3	1-216-296-11	SHORT	0	J96	1-216-295-11	SHORT	0
J17	1-216-296-11	SHORT	0	J97	1-216-295-11	SHORT	0
J32	1-216-296-11	SHORT	0	J98	1-216-295-11	SHORT	0
J33	1-216-296-11	SHORT	0	J100	1-216-296-11	SHORT	0
J36	1-216-296-11	SHORT	0	J101	1-216-296-11	SHORT	0
J37	1-216-296-11	SHORT	0	J102	1-216-296-11	SHORT	0
J38	1-216-296-11	SHORT	0	J104	1-216-296-11	SHORT	0
J39	1-216-296-11	SHORT	0	J105	1-216-296-11	SHORT	0
J40	1-216-296-11	SHORT	0	J106	1-216-296-11	SHORT	0
J41	1-216-296-11	SHORT	0	J107	1-216-296-11	SHORT	0
J44	1-216-295-11	SHORT	0	J108	1-216-296-11	SHORT	0
J45	1-216-296-11	SHORT	0	J109	1-216-296-11	SHORT	0
J46	1-216-296-11	SHORT	0	J112	1-216-296-11	SHORT	0
J50	1-216-296-11	SHORT	0	J113	1-216-296-11	SHORT	0
J51	1-216-296-11	SHORT	0	J114	1-216-296-11	SHORT	0
J52	1-216-296-11	SHORT	0	J115	1-216-296-11	SHORT	0
J53	1-216-296-11	SHORT	0	J116	1-216-296-11	SHORT	0
J54	1-216-296-11	SHORT	0	J117	1-216-296-11	SHORT	0
J55	1-216-296-11	SHORT	0	J118	1-216-296-11	SHORT	0
J56	1-216-296-11	SHORT	0	J119	1-216-296-11	SHORT	0
J57	1-216-296-11	SHORT	0	J121	1-216-295-11	SHORT	0
J58	1-216-295-11	SHORT	0	J122	1-216-295-11	SHORT	0
J59	1-216-295-11	SHORT	0	J123	1-216-296-11	SHORT	0
J60	1-216-296-11	SHORT	0	J124	1-216-296-11	SHORT	0
J61	1-216-296-11	SHORT	0	J126	1-216-296-11	SHORT	0
J62	1-216-296-11	SHORT	0	J127	1-216-296-11	SHORT	0
J63	1-216-296-11	SHORT	0	J128	1-216-295-11	SHORT	0
J65	1-216-296-11	SHORT	0	J129	1-216-296-11	SHORT	0
J66	1-216-296-11	SHORT	0	J130	1-216-295-11	SHORT	0
J67	1-216-296-11	SHORT	0	J131	1-216-295-11	SHORT	0
J68	1-216-296-11	SHORT	0	J132	1-216-296-11	SHORT	0
J70	1-216-296-11	SHORT	0	J133	1-216-296-11	SHORT	0
J71	1-216-296-11	SHORT	0	J134	1-216-295-11	SHORT	0
				J136	1-216-296-11	SHORT	0
				J137	1-216-296-11	SHORT	0

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark		
J139	1-216-296-11	SHORT	0	Q111	8-729-041-66	TRANSISTOR	2SC4015TV2		
J140	1-216-296-11	SHORT	0	Q112	8-729-230-49	TRANSISTOR	2SC2712-YG		
J141	1-216-296-11	SHORT	0	Q201	8-729-141-73	TRANSISTOR	2SC3624A-T1L15L16		
J142	1-216-296-11	SHORT	0	Q202	8-729-202-38	TRANSISTOR	2SC3326N-A		
J144	1-216-296-11	SHORT	0	Q203	8-729-014-87	TRANSISTOR	2SC4207-YGR-TE85R		
J145	1-216-296-11	SHORT	0	Q204	8-729-014-85	TRANSISTOR	2SA1618-YGR-TE85R		
J146	1-216-296-11	SHORT	0	Q207	8-729-046-32	TRANSISTOR	2SA1201-Y(TE12L.C)		
J147	1-216-296-11	SHORT	0	Q208	8-729-051-72	TRANSISTOR	2SC2881-Y(TE12L.C)		
J148	1-216-296-11	SHORT	0	Q209	8-729-924-78	FET	IRF540		
J151	1-218-780-11	RES-CHIP	270	5%	1/4W	Q210	8-729-053-85	FET	IRF9540
J152	1-216-296-11	SHORT	0	Q211	8-729-041-66	TRANSISTOR	2SC4015TV2		
J153	1-216-295-11	SHORT	0	Q212	8-729-230-49	TRANSISTOR	2SC2712-YG		
J154	1-216-295-11	SHORT	0	Q301	8-729-141-73	TRANSISTOR	2SC3624A-T1L15L16		
J155	1-216-864-11	METAL CHIP	0	5%	1/16W	Q302	8-729-202-38	TRANSISTOR	2SC3326N-A
J156	1-216-864-11	METAL CHIP	0	5%	1/16W	Q303	8-729-014-87	TRANSISTOR	2SC4207-YGR-TE85R
J157	1-216-864-11	METAL CHIP	0	5%	1/16W	Q304	8-729-014-85	TRANSISTOR	2SA1618-YGR-TE85R
J158	1-216-864-11	METAL CHIP	0	5%	1/16W	Q307	8-729-046-32	TRANSISTOR	2SA1201-Y(TE12L.C)
J159	1-216-296-11	SHORT	0	Q308	8-729-051-72	TRANSISTOR	2SC2881-Y(TE12L.C)		
J160	1-216-296-11	SHORT	0	Q309	8-729-924-78	FET	IRF540		
J162	1-216-296-11	SHORT	0	Q310	8-729-053-85	FET	IRF9540		
J163	1-216-296-11	SHORT	0	Q311	8-729-041-66	TRANSISTOR	2SC4015TV2		
J200	1-216-296-11	SHORT	0	Q312	8-729-230-49	TRANSISTOR	2SC2712-YG		
J201	1-216-296-11	SHORT	0	Q401	8-729-141-73	TRANSISTOR	2SC3624A-T1L15L16		
J202	1-216-296-11	SHORT	0	Q402	8-729-202-38	TRANSISTOR	2SC3326N-A		
J203	1-216-296-11	SHORT	0	Q403	8-729-014-87	TRANSISTOR	2SC4207-YGR-TE85R		
J204	1-216-296-11	SHORT	0	Q404	8-729-014-85	TRANSISTOR	2SA1618-YGR-TE85R		
J205	1-216-296-11	SHORT	0	Q407	8-729-046-32	TRANSISTOR	2SA1201-Y(TE12L.C)		
J207	1-216-296-11	SHORT	0	Q408	8-729-051-72	TRANSISTOR	2SC2881-Y(TE12L.C)		
		< COIL >		Q409	8-729-924-78	FET	IRF540		
				Q410	8-729-053-85	FET	IRF9540		
L901	1-419-851-21	COIL, CHOKE	50uH	Q411	8-729-041-66	TRANSISTOR	2SC4015TV2		
L902	1-410-396-41	INDUCTOR, FERRITE BEAD	0.45uH	Q412	8-729-230-49	TRANSISTOR	2SC2712-YG		
L903	1-410-396-41	INDUCTOR, FERRITE BEAD	0.45uH	Q801	8-729-216-22	TRANSISTOR	2SA1162-G		
L904	1-410-396-41	INDUCTOR, FERRITE BEAD	0.45uH	Q802	8-729-230-49	TRANSISTOR	2SC2712-YG		
L905	1-410-396-41	INDUCTOR, FERRITE BEAD	0.45uH	Q803	8-729-230-49	TRANSISTOR	2SC2712-YG		
L906	1-410-396-41	INDUCTOR, FERRITE BEAD	0.45uH	Q804	8-729-216-22	TRANSISTOR	2SA1162-G		
L907	1-410-396-41	INDUCTOR, FERRITE BEAD	0.45uH	Q805	8-729-230-49	TRANSISTOR	2SC2712-YG		
L908	1-410-396-41	INDUCTOR, FERRITE BEAD	0.45uH	Q809	8-729-230-49	TRANSISTOR	2SC2712-YG		
L909	1-410-396-41	INDUCTOR, FERRITE BEAD	0.45uH	Q810	8-729-230-49	TRANSISTOR	2SC2712-YG		
L910	1-410-396-41	INDUCTOR, FERRITE BEAD	0.45uH	Q811	8-729-216-22	TRANSISTOR	2SA1162-G		
		< PILOT LAMP >		Q812	8-729-230-49	TRANSISTOR	2SC2712-YG		
PL801	1-517-156-11	LAMP, PILOT (65mA/14V)		Q813	8-729-216-22	TRANSISTOR	2SA1162-G		
		< TRANSISTOR >		Q901	8-729-052-82	TRANSISTOR	KTA1281Y-AT		
Q101	8-729-141-73	TRANSISTOR	2SC3624A-T1L15L16	Q902	8-729-216-22	TRANSISTOR	2SA1162-G		
Q102	8-729-202-38	TRANSISTOR	2SC3326N-A	Q903	8-729-230-49	TRANSISTOR	2SC2712-YG		
Q103	8-729-014-87	TRANSISTOR	2SC4207-YGR-TE85R	Q904	8-729-053-05	FET	FKV550T		
Q104	8-729-014-85	TRANSISTOR	2SA1618-YGR-TE85R	Q905	8-729-053-05	FET	FKV550T		
Q107	8-729-046-32	TRANSISTOR	2SA1201-Y(TE12L.C)	Q906	8-729-053-05	FET	FKV550T		
Q108	8-729-051-72	TRANSISTOR	2SC2881-Y(TE12L.C)	Q907	8-729-053-05	FET	FKV550T		
Q109	8-729-924-78	FET	IRF540	Q908	8-729-230-49	TRANSISTOR	2SC2712-YG		
Q110	8-729-053-85	FET	IRF9540	Q909	8-729-230-49	TRANSISTOR	2SD2012		
				Q910	8-729-209-15	TRANSISTOR	2SB1375		
				Q911	8-729-209-60	TRANSISTOR	2SB1375		

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
< RESISTOR >							
R101	1-216-837-11	METAL CHIP	22K 5% 1/16W	R223	1-216-841-11	METAL CHIP	47K 5% 1/16W
R102	1-216-837-11	METAL CHIP	22K 5% 1/16W	R224	1-216-811-11	METAL CHIP	150 5% 1/16W
R103	1-216-841-11	METAL CHIP	47K 5% 1/16W	R225	1-208-494-61	RES-CHIP	2.2K 2% 1/8W
R104	1-216-841-11	METAL CHIP	47K 5% 1/16W	R226	1-216-821-11	METAL CHIP	1K 5% 1/16W
R105	1-216-837-11	METAL CHIP	22K 5% 1/16W	R227	1-216-837-11	METAL CHIP	22K 5% 1/16W
R106	1-216-837-11	METAL CHIP	22K 5% 1/16W	R228	1-216-829-11	METAL CHIP	4.7K 5% 1/16W
R117	1-216-829-11	METAL CHIP	4.7K 5% 1/16W	R229	1-216-829-11	METAL CHIP	4.7K 5% 1/16W
R118	1-216-834-11	METAL CHIP	12K 5% 1/16W	R230	1-216-829-11	METAL CHIP	4.7K 5% 1/16W
R119	1-216-827-11	METAL CHIP	3.3K 5% 1/16W	R231	1-216-841-11	METAL CHIP	47K 5% 1/16W
R120	1-216-819-11	METAL CHIP	680 5% 1/16W	R232	1-216-841-11	METAL CHIP	47K 5% 1/16W
R121	1-216-837-11	METAL CHIP	22K 5% 1/16W	R233	1-216-033-00	METAL CHIP	220 5% 1/10W
R122	1-216-829-11	METAL CHIP	4.7K 5% 1/16W	R234	1-216-033-00	METAL CHIP	220 5% 1/10W
R123	1-216-841-11	METAL CHIP	47K 5% 1/16W	R235	1-216-809-11	METAL CHIP	100 5% 1/16W
R124	1-216-811-11	METAL CHIP	150 5% 1/16W	R236	1-216-809-11	METAL CHIP	100 5% 1/16W
R125	1-208-494-61	RES-CHIP	2.2K 2% 1/8W	R237	1-216-845-11	METAL CHIP	100K 5% 1/16W
R126	1-216-065-00	RES-CHIP	4.7K 5% 1/10W	R238	1-216-845-11	METAL CHIP	100K 5% 1/16W
R127	1-216-837-11	METAL CHIP	22K 5% 1/16W	R239	1-208-494-61	RES-CHIP	2.2K 2% 1/8W
R128	1-216-829-11	METAL CHIP	4.7K 5% 1/16W	R240	1-216-208-00	RES-CHIP	2.7K 5% 1/8W
R129	1-216-829-11	METAL CHIP	4.7K 5% 1/16W	R242	1-216-811-11	METAL CHIP	150 5% 1/10W
R130	1-216-829-11	METAL CHIP	4.7K 5% 1/16W	R243	1-216-206-00	RES-CHIP	2.2K 5% 1/8W
R131	1-216-841-11	METAL CHIP	47K 5% 1/16W	R244	1-216-829-11	METAL CHIP	4.7K 5% 1/16W
R132	1-216-841-11	METAL CHIP	47K 5% 1/16W	R245	1-216-829-11	METAL CHIP	4.7K 5% 1/16W
R133	1-216-033-00	METAL CHIP	220 5% 1/10W	R248	1-216-833-11	METAL CHIP	10K 5% 1/16W
R134	1-216-033-00	METAL CHIP	220 5% 1/10W	R250	1-216-853-11	METAL CHIP	470K 5% 1/16W
R135	1-216-809-11	METAL CHIP	100 5% 1/16W	R251	1-215-857-11	METAL OXIDE	10 5% 1W F
R136	1-216-809-11	METAL CHIP	100 5% 1/16W	R253	1-220-397-11	RES-CHIP	4.7M 5% 1/16W
R137	1-216-845-11	METAL CHIP	100K 5% 1/16W	R258	1-205-991-11	METAL	0.1X2 10% 5W
R138	1-216-845-11	METAL CHIP	100K 5% 1/16W	R301	1-216-837-11	METAL CHIP	22K 5% 1/16W
R139	1-208-494-61	RES-CHIP	2.2K 2% 1/8W	R302	1-216-837-11	METAL CHIP	22K 5% 1/16W
R140	1-216-208-00	RES-CHIP	2.7K 5% 1/8W	R303	1-216-841-11	METAL CHIP	47K 5% 1/16W
R142	1-216-811-11	METAL CHIP	150 5% 1/10W	R304	1-216-841-11	METAL CHIP	47K 5% 1/16W
R143	1-216-206-00	RES-CHIP	2.2K 5% 1/8W	R305	1-216-837-11	METAL CHIP	22K 5% 1/16W
R144	1-216-829-11	METAL CHIP	4.7K 5% 1/16W	R317	1-216-829-11	METAL CHIP	4.7K 5% 1/16W
R145	1-216-829-11	METAL CHIP	4.7K 5% 1/16W	R318	1-216-834-11	METAL CHIP	12K 5% 1/16W
R148	1-216-833-11	METAL CHIP	10K 5% 1/16W	R319	1-216-827-11	METAL CHIP	3.3K 5% 1/16W
R150	1-216-853-11	METAL CHIP	470K 5% 1/16W	R320	1-216-819-11	METAL CHIP	680 5% 1/16W
R151	1-215-857-11	METAL OXIDE	10 5% 1W F	R321	1-216-837-11	METAL CHIP	22K 5% 1/16W
R153	1-220-397-11	RES-CHIP	4.7M 5% 1/16W	R322	1-216-829-11	METAL CHIP	4.7K 5% 1/16W
R158	1-205-991-11	METAL	0.1X2 10% 5W	R323	1-216-841-11	METAL CHIP	47K 5% 1/16W
R201	1-216-837-11	METAL CHIP	22K 5% 1/16W	R324	1-216-811-11	METAL CHIP	150 5% 1/16W
R202	1-216-837-11	METAL CHIP	22K 5% 1/16W	R325	1-208-494-61	RES-CHIP	2.2K 2% 1/8W
R203	1-216-841-11	METAL CHIP	47K 5% 1/16W	R326	1-216-821-11	METAL CHIP	1K 5% 1/16W
R204	1-216-841-11	METAL CHIP	47K 5% 1/16W	R327	1-216-837-11	METAL CHIP	22K 5% 1/16W
R205	1-216-837-11	METAL CHIP	22K 5% 1/16W	R328	1-216-829-11	METAL CHIP	4.7K 5% 1/16W
R206	1-216-837-11	METAL CHIP	22K 5% 1/16W	R329	1-216-829-11	METAL CHIP	4.7K 5% 1/16W
R217	1-216-829-11	METAL CHIP	4.7K 5% 1/16W	R330	1-216-829-11	METAL CHIP	4.7K 5% 1/16W
R218	1-216-834-11	METAL CHIP	12K 5% 1/16W	R331	1-216-841-11	METAL CHIP	47K 5% 1/16W
R219	1-216-827-11	METAL CHIP	3.3K 5% 1/16W	R332	1-216-841-11	METAL CHIP	47K 5% 1/16W
R220	1-216-819-11	METAL CHIP	680 5% 1/16W	R333	1-216-033-00	METAL CHIP	220 5% 1/10W
R221	1-216-837-11	METAL CHIP	22K 5% 1/16W	R334	1-216-033-00	METAL CHIP	220 5% 1/10W
R222	1-216-829-11	METAL CHIP	4.7K 5% 1/16W	R335	1-216-809-11	METAL CHIP	100 5% 1/16W
				R336	1-216-809-11	METAL CHIP	100 5% 1/16W

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
R337	1-216-845-11	METAL CHIP	100K	5%	1/16W	R801	1-216-821-11	METAL CHIP	1K	5%	1/16W
R338	1-216-845-11	METAL CHIP	100K	5%	1/16W	R802	1-216-833-11	METAL CHIP	10K	5%	1/16W
R339	1-208-494-61	RES-CHIP	2.2K	2%	1/8W	R803	1-216-841-11	METAL CHIP	47K	5%	1/16W
R340	1-216-208-00	RES-CHIP	2.7K	5%	1/8W	R804	1-216-841-11	METAL CHIP	47K	5%	1/16W
R342	1-216-811-11	METAL CHIP	150	5%	1/10W	R805	1-216-839-11	METAL CHIP	33K	5%	1/16W
R343	1-216-206-00	RES-CHIP	2.2K	5%	1/8W	R806	1-216-833-11	METAL CHIP	10K	5%	1/16W
R344	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R807	1-216-833-11	METAL CHIP	10K	5%	1/16W
R345	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R808	1-216-833-11	METAL CHIP	10K	5%	1/16W
R348	1-216-833-11	METAL CHIP	10K	5%	1/16W	R809	1-216-833-11	METAL CHIP	10K	5%	1/16W
R350	1-216-853-11	METAL CHIP	470K	5%	1/16W	R810	1-216-857-11	METAL CHIP	1M	5%	1/16W
R351	1-215-857-11	METAL OXIDE	10	5%	1W F	R811	1-208-494-61	RES-CHIP	2.2K	2%	1/8W
R353	1-220-397-11	RES-CHIP	4.7M	5%	1/16W	R820	1-216-833-11	METAL CHIP	10K	5%	1/16W
R358	1-205-991-11	METAL	0.1X2	10%	5W	R821	1-216-833-11	METAL CHIP	10K	5%	1/16W
R401	1-216-837-11	METAL CHIP	22K	5%	1/16W	R822	1-216-833-11	METAL CHIP	10K	5%	1/16W
R402	1-216-837-11	METAL CHIP	22K	5%	1/16W	R823	1-216-833-11	METAL CHIP	10K	5%	1/16W
R403	1-216-841-11	METAL CHIP	47K	5%	1/16W	R824	1-216-841-11	METAL CHIP	47K	5%	1/16W
R404	1-216-841-11	METAL CHIP	47K	5%	1/16W	R825	1-216-833-11	METAL CHIP	10K	5%	1/16W
R405	1-216-837-11	METAL CHIP	22K	5%	1/16W	R826	1-216-833-11	METAL CHIP	10K	5%	1/16W
R406	1-216-837-11	METAL CHIP	22K	5%	1/16W	R827	1-216-833-11	METAL CHIP	10K	5%	1/16W
R417	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R828	1-216-833-11	METAL CHIP	10K	5%	1/16W
R418	1-216-834-11	METAL CHIP	12K	5%	1/16W	R829	1-216-833-11	METAL CHIP	10K	5%	1/16W
R419	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	R830	1-216-833-11	METAL CHIP	10K	5%	1/16W
R420	1-216-819-11	METAL CHIP	680	5%	1/16W	R838	1-216-814-11	METAL CHIP	270	5%	1/16W
R421	1-216-837-11	METAL CHIP	22K	5%	1/16W	R839	1-216-857-11	METAL CHIP	1M	5%	1/16W
R422	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R841	1-216-815-11	METAL CHIP	330	5%	1/16W
R423	1-216-841-11	METAL CHIP	47K	5%	1/16W	R843	1-216-815-11	METAL CHIP	330	5%	1/16W
R424	1-216-811-11	METAL CHIP	150	5%	1/16W	R845	1-216-815-11	METAL CHIP	330	5%	1/16W
R425	1-208-494-61	RES-CHIP	2.2K	2%	1/8W	R847	1-216-815-11	METAL CHIP	330	5%	1/16W
R426	1-216-821-11	METAL CHIP	1K	5%	1/16W	R850	1-216-833-11	METAL CHIP	10K	5%	1/16W
R427	1-216-837-11	METAL CHIP	22K	5%	1/16W	R851	1-216-847-11	METAL CHIP	150K	5%	1/16W
R428	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R852	1-216-847-11	METAL CHIP	150K	5%	1/16W
R429	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R853	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R430	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R854	1-216-833-11	METAL CHIP	10K	5%	1/16W
R431	1-216-841-11	METAL CHIP	47K	5%	1/16W	R855	1-216-833-11	METAL CHIP	10K	5%	1/16W
R432	1-216-841-11	METAL CHIP	47K	5%	1/16W	R856	1-216-835-11	METAL CHIP	15K	5%	1/16W
R433	1-216-033-00	METAL CHIP	220	5%	1/10W	R857	1-216-835-11	METAL CHIP	15K	5%	1/16W
R434	1-216-033-00	METAL CHIP	220	5%	1/10W	R858	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R435	1-216-809-11	METAL CHIP	100	5%	1/16W	R859	1-216-833-11	METAL CHIP	10K	5%	1/16W
R436	1-216-809-11	METAL CHIP	100	5%	1/16W	R860	1-216-833-11	METAL CHIP	10K	5%	1/16W
R437	1-216-845-11	METAL CHIP	100K	5%	1/16W	R861	1-216-841-11	METAL CHIP	47K	5%	1/16W
R438	1-216-845-11	METAL CHIP	100K	5%	1/16W	R862	1-216-845-11	METAL CHIP	100K	5%	1/16W
R439	1-208-494-61	RES-CHIP	2.2K	2%	1/8W	R863	1-216-845-11	METAL CHIP	100K	5%	1/16W
R440	1-216-208-00	RES-CHIP	2.7K	5%	1/8W	R901	1-216-833-11	METAL CHIP	10K	5%	1/16W
R442	1-216-811-11	METAL CHIP	150	5%	1/10W	R902	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R443	1-216-206-00	RES-CHIP	2.2K	5%	1/8W	R903	1-216-836-11	METAL CHIP	18K	5%	1/16W
R444	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R904	1-216-836-11	METAL CHIP	18K	5%	1/16W
R445	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R905	1-216-849-11	METAL CHIP	220K	5%	1/16W
R448	1-216-833-11	METAL CHIP	10K	5%	1/16W	R906	1-216-210-00	RES-CHIP	3.3K	5%	1/8W
R450	1-216-853-11	METAL CHIP	470K	5%	1/16W	R907	1-216-190-00	RES-CHIP	470	5%	1/8W
R451	1-215-857-11	METAL OXIDE	10	5%	1W F	R908	1-216-190-00	RES-CHIP	470	5%	1/8W
R453	1-220-397-11	RES-CHIP	4.7M	5%	1/16W	R909	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R458	1-205-991-11	METAL	0.1X2	10%	5W	R910	1-216-833-11	METAL CHIP	10K	5%	1/16W
R800	1-216-857-11	METAL CHIP	1M	5%	1/16W	R911	1-216-833-11	METAL CHIP	10K	5%	1/16W

MAIN

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>		<u>Remark</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
R912	1-216-186-00	RES-CHIP	330	5%	1/8W		ACCESSORIES	
R913	1-216-817-11	METAL CHIP	470	5%	1/16W		*****	
R914	1-216-817-11	METAL CHIP	470	5%	1/16W			
R915	1-216-833-11	METAL CHIP	10K	5%	1/16W	3-239-437-11	MANUAL, INSTRUCTION (ENGLISH,FRENCH)	
R916	1-216-001-00	METAL CHIP	10	5%	1/10W	3-367-410-01	SCREW (DIA.5X15), TAPPING (MOUNTING SCREW)	
R917	1-216-817-11	METAL CHIP	470	5%	1/16W			
R918	1-216-817-11	METAL CHIP	470	5%	1/16W			
R920	1-216-001-00	METAL CHIP	10	5%	1/10W			
R921	1-216-001-00	METAL CHIP	10	5%	1/10W			
R922	1-216-001-00	METAL CHIP	10	5%	1/10W			
R923	1-216-065-00	RES-CHIP	4.7K	5%	1/10W			
R924	1-216-065-00	RES-CHIP	4.7K	5%	1/10W			
R925	1-247-816-11	CARBON	240	5%	1/4W			
R926	1-247-816-11	CARBON	240	5%	1/4W			
R927	1-247-816-11	CARBON	240	5%	1/4W			
R928	1-247-816-11	CARBON	240	5%	1/4W			
R929	1-216-017-00	RES-CHIP	47	5%	1/10W			
R930	1-216-017-00	RES-CHIP	47	5%	1/10W			
R931	1-216-821-11	METAL CHIP	1K	5%	1/16W			
R932	1-216-821-11	METAL CHIP	1K	5%	1/16W			
R933	1-216-821-11	METAL CHIP	1K	5%	1/16W			
R934	1-216-821-11	METAL CHIP	1K	5%	1/16W			
< VARIABLE RESISTOR >								
RV104	1-225-213-21	RES, ADJ, CARBON 2.2K						
RV204	1-225-213-21	RES, ADJ, CARBON 2.2K						
RV304	1-225-213-21	RES, ADJ, CARBON 2.2K						
RV404	1-225-213-21	RES, ADJ, CARBON 2.2K						
RV802	1-225-648-12	RES, VAR, CARBON 5KX2 (LOW BOOST (40Hz) (FRONT))						
RV803	1-225-648-12	RES, VAR, CARBON 5KX2 (LEVEL (FRONT))						
RV805	1-225-648-12	RES, VAR, CARBON 5KX2 (LOW BOOST (40Hz) (REAR))						
RV806	1-225-648-12	RES, VAR, CARBON 5KX2 (LEVEL (REAR))						
< TRANSFORMER >								
T801	1-435-858-11	TRANSFORMER, DC-DC CONVERTER						
< THERMISTOR (NEGATIVE) >								
THN801	1-804-301-11	THERMISTOR, CHIP (NEGATIVE)						
THN804	1-804-301-11	THERMISTOR, CHIP (NEGATIVE)						
THN805	1-804-301-11	THERMISTOR, CHIP (NEGATIVE)						
THN806	1-804-301-11	THERMISTOR, CHIP (NEGATIVE)						
THN807	1-804-301-11	THERMISTOR, CHIP (NEGATIVE)						

MISCELLANEOUS								

△F901	1-533-743-11	FUSE (BLADE TYPE) (AUTO FUSE) 40A						

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

XM-475GSX

SONY®

*US Model
Canadian Model*

SERVICE MANUAL

Ver 1.2 2002. 07

SUPPLEMENT-1

File this supplement with the service manual.

Subject : Change of Main Board

(ENG-02009)

The main board has been changed for those sets that have their serial numbers of 3515501 and later. Check the serial number when servicing and inspecting.

• Semiconductor Location (MAIN SECTION)

Ref. No.	Location	Ref. No.	Location
D801	F-8	Q204	E-10
D802	F-8	Q207	D-11
D805	F-11	Q208	E-11
D812	F-9	Q209	D-12
D813	F-9	Q210	E-12
D822	G-13	Q211	D-12
D823	G-13	Q212	D-13
D824	F-13	Q301	G-5
D825	D-13	Q302	G-4
D826	D-2	Q303	D-5
D827	G-2	Q304	E-5
D828	H-12	Q307	D-4
D829	H-12	Q308	E-4
D901	G-10	Q309	D-3
D902	G-10	Q310	E-3
D903	E-7	Q311	D-3
D904	E-7	Q312	D-2
D905	D-8	Q401	H-6
D906	D-8	Q402	G-4
D907	B-10	Q403	F-5
D908	B-10	Q404	F-5
D909	B-5	Q407	F-4
D910	B-6	Q408	F-4
D911	D-8	Q409	F-3
D912	D-8	Q410	G-3
D913	E-7	Q411	F-3
D914	E-6	Q412	G-3
D917	D-6	Q801	E-9
D918	D-6	Q802	F-9
		Q803	C-13
IC801	G-7	Q804	C-13
IC806	H-8	Q805	C-13
IC807	H-8	Q809	H-11
IC808	G-6	Q810	G-13
IC813	H-5	Q811	G-13
IC814	H-5	Q812	H-13
IC815	F-8	Q813	G-13
IC901	G-11	Q901	F-10
IC902	F-10	Q902	G-10
		Q903	G-10
Q101	H-9	Q904	B-9
Q102	E-9	Q905	B-8
Q103	F-11	Q906	B-7
Q104	F-10	Q907	B-6
Q107	E-11	Q908	B-8
Q108	F-11	Q909	B-7
Q109	F-12	Q910	F-7
Q110	G-12	Q911	F-6
Q111	F-12		
Q112	F-13	R141	F-13
Q201	G-8	R241	D-13
Q202	E-8	R341	D-2
Q203	E-11	R441	F-2

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.

(In addition to this, the necessary note is printed in each block.)

for schematic diagram:

Note:

- All capacitors are in μF unless otherwise noted. pF : $\mu\mu\text{F}$ 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $1/4\text{W}$ or less unless otherwise specified.
- % : indicates tolerance.
- : nonflammable resistor.

Note:

The components identified by mark Δ or dotted line with mark \triangle are critical for safety.
Replace only with part number specified.

Note:

Les composants identifiés par une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

- : B+ Line.

- : B- Line.

Power voltage is dc 14.4V and fed with regulated dc power supply from +12V and REM terminals.

Voltage is dc with respect to ground under no-signal condition.

Voltages are taken with a VOM (Input impedance 10 M Ω). Voltage variations may be noted due to normal production tolerances.

Waveforms are taken with a oscilloscope.

Voltage variations may be noted due to normal production tolerances.

Circled numbers refer to waveforms.

Signal path.


: AUDIO

for printed wiring boards:


Note:

- : parts extracted from the component side.
- : Pattern from the side which enables seeing.
- : Refer to page of Supplement-1.
- : Refer to page of Service manual.


• IC Block Diagram

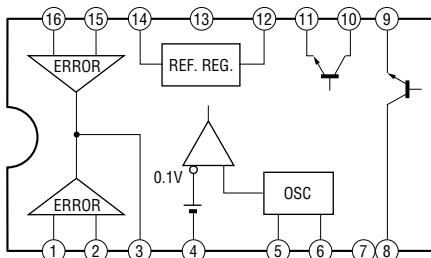IC901 $\mu\text{PC}494\text{GS-T1}$ 

1. PRINTED WIRING BOARD — MAIN SECTION — • Refer to page 2 for Semiconductor Location and Common Note on Printed Wiring Boards


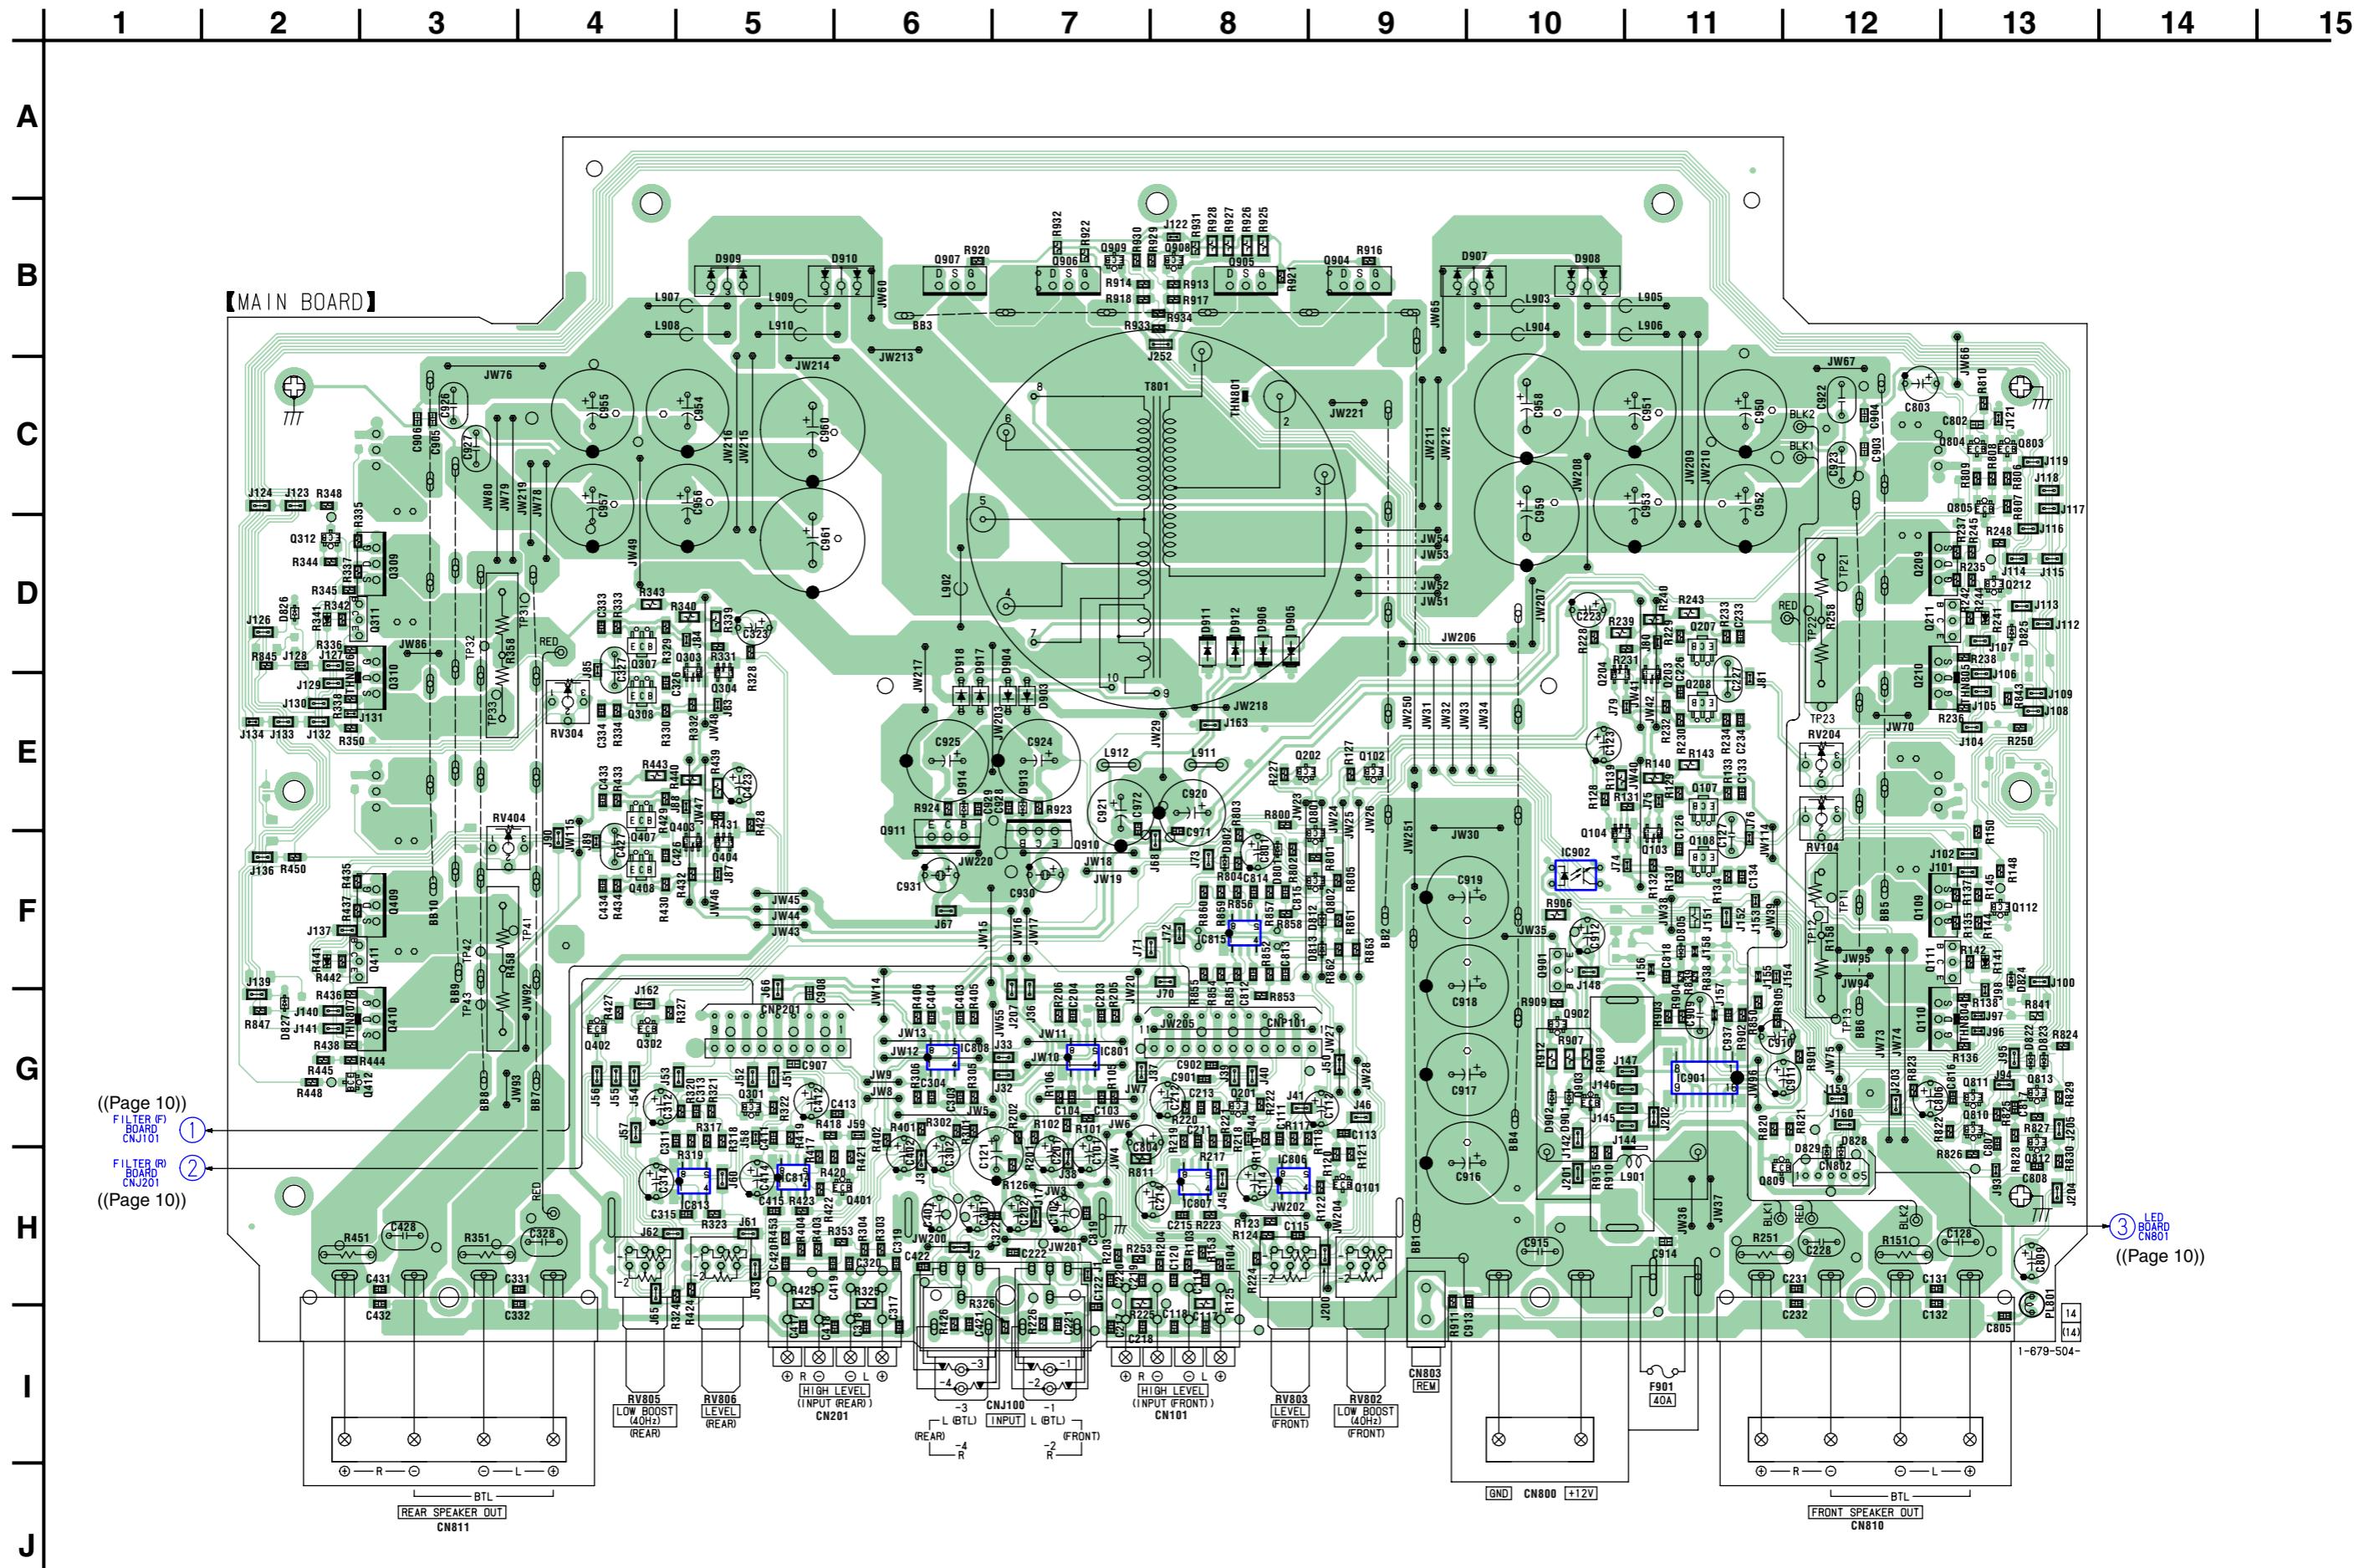


2. SCHEMATIC DIAGRAM — MAIN SECTION (1/2) — • Refer to page 2 for Common Note on Schematic Diagrams.

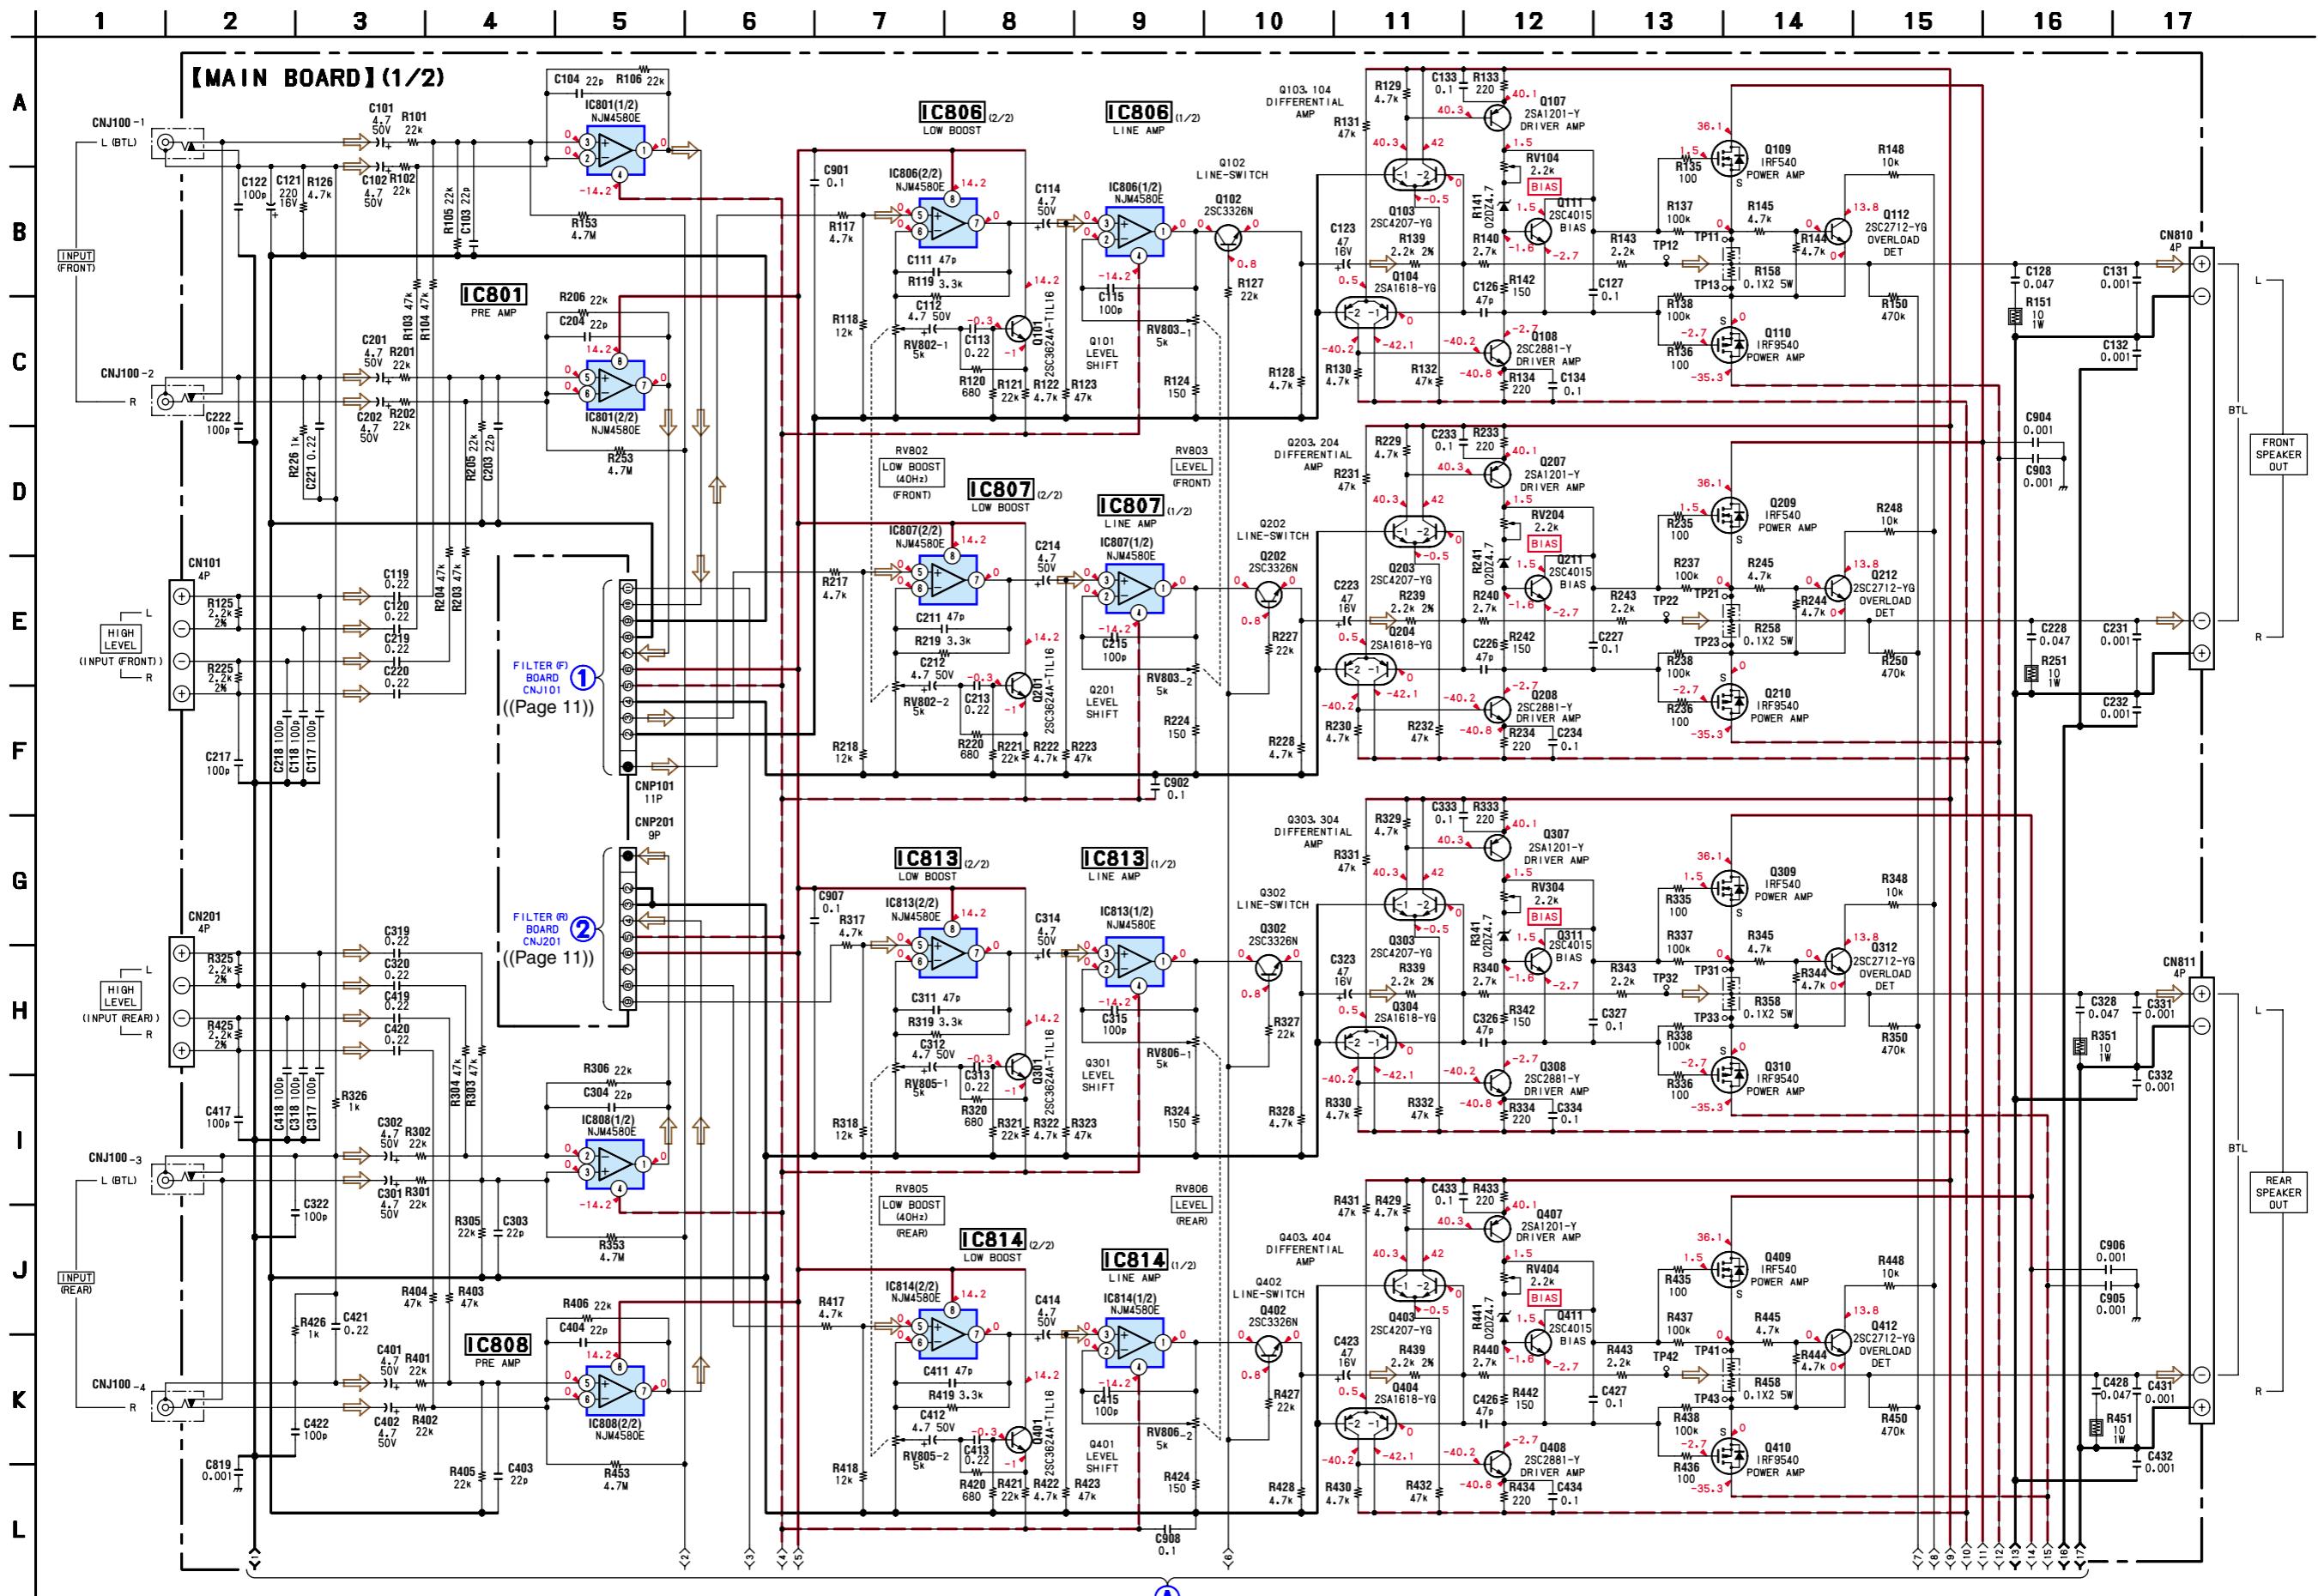

3. SCHEMATIC DIAGRAM — MAIN SECTION (2/2) — • Refer to page 2 for IC Block Diagram and Common Note on Schematic Diagrams

1 | **2** | **3** | **4** | **5** | **6** | **7** | **8** | **9** | **10** | **11** | **12** | **13** | **14** | **15**

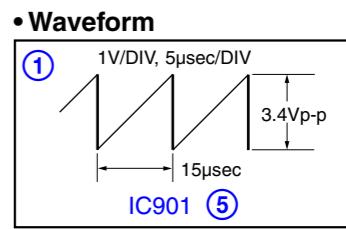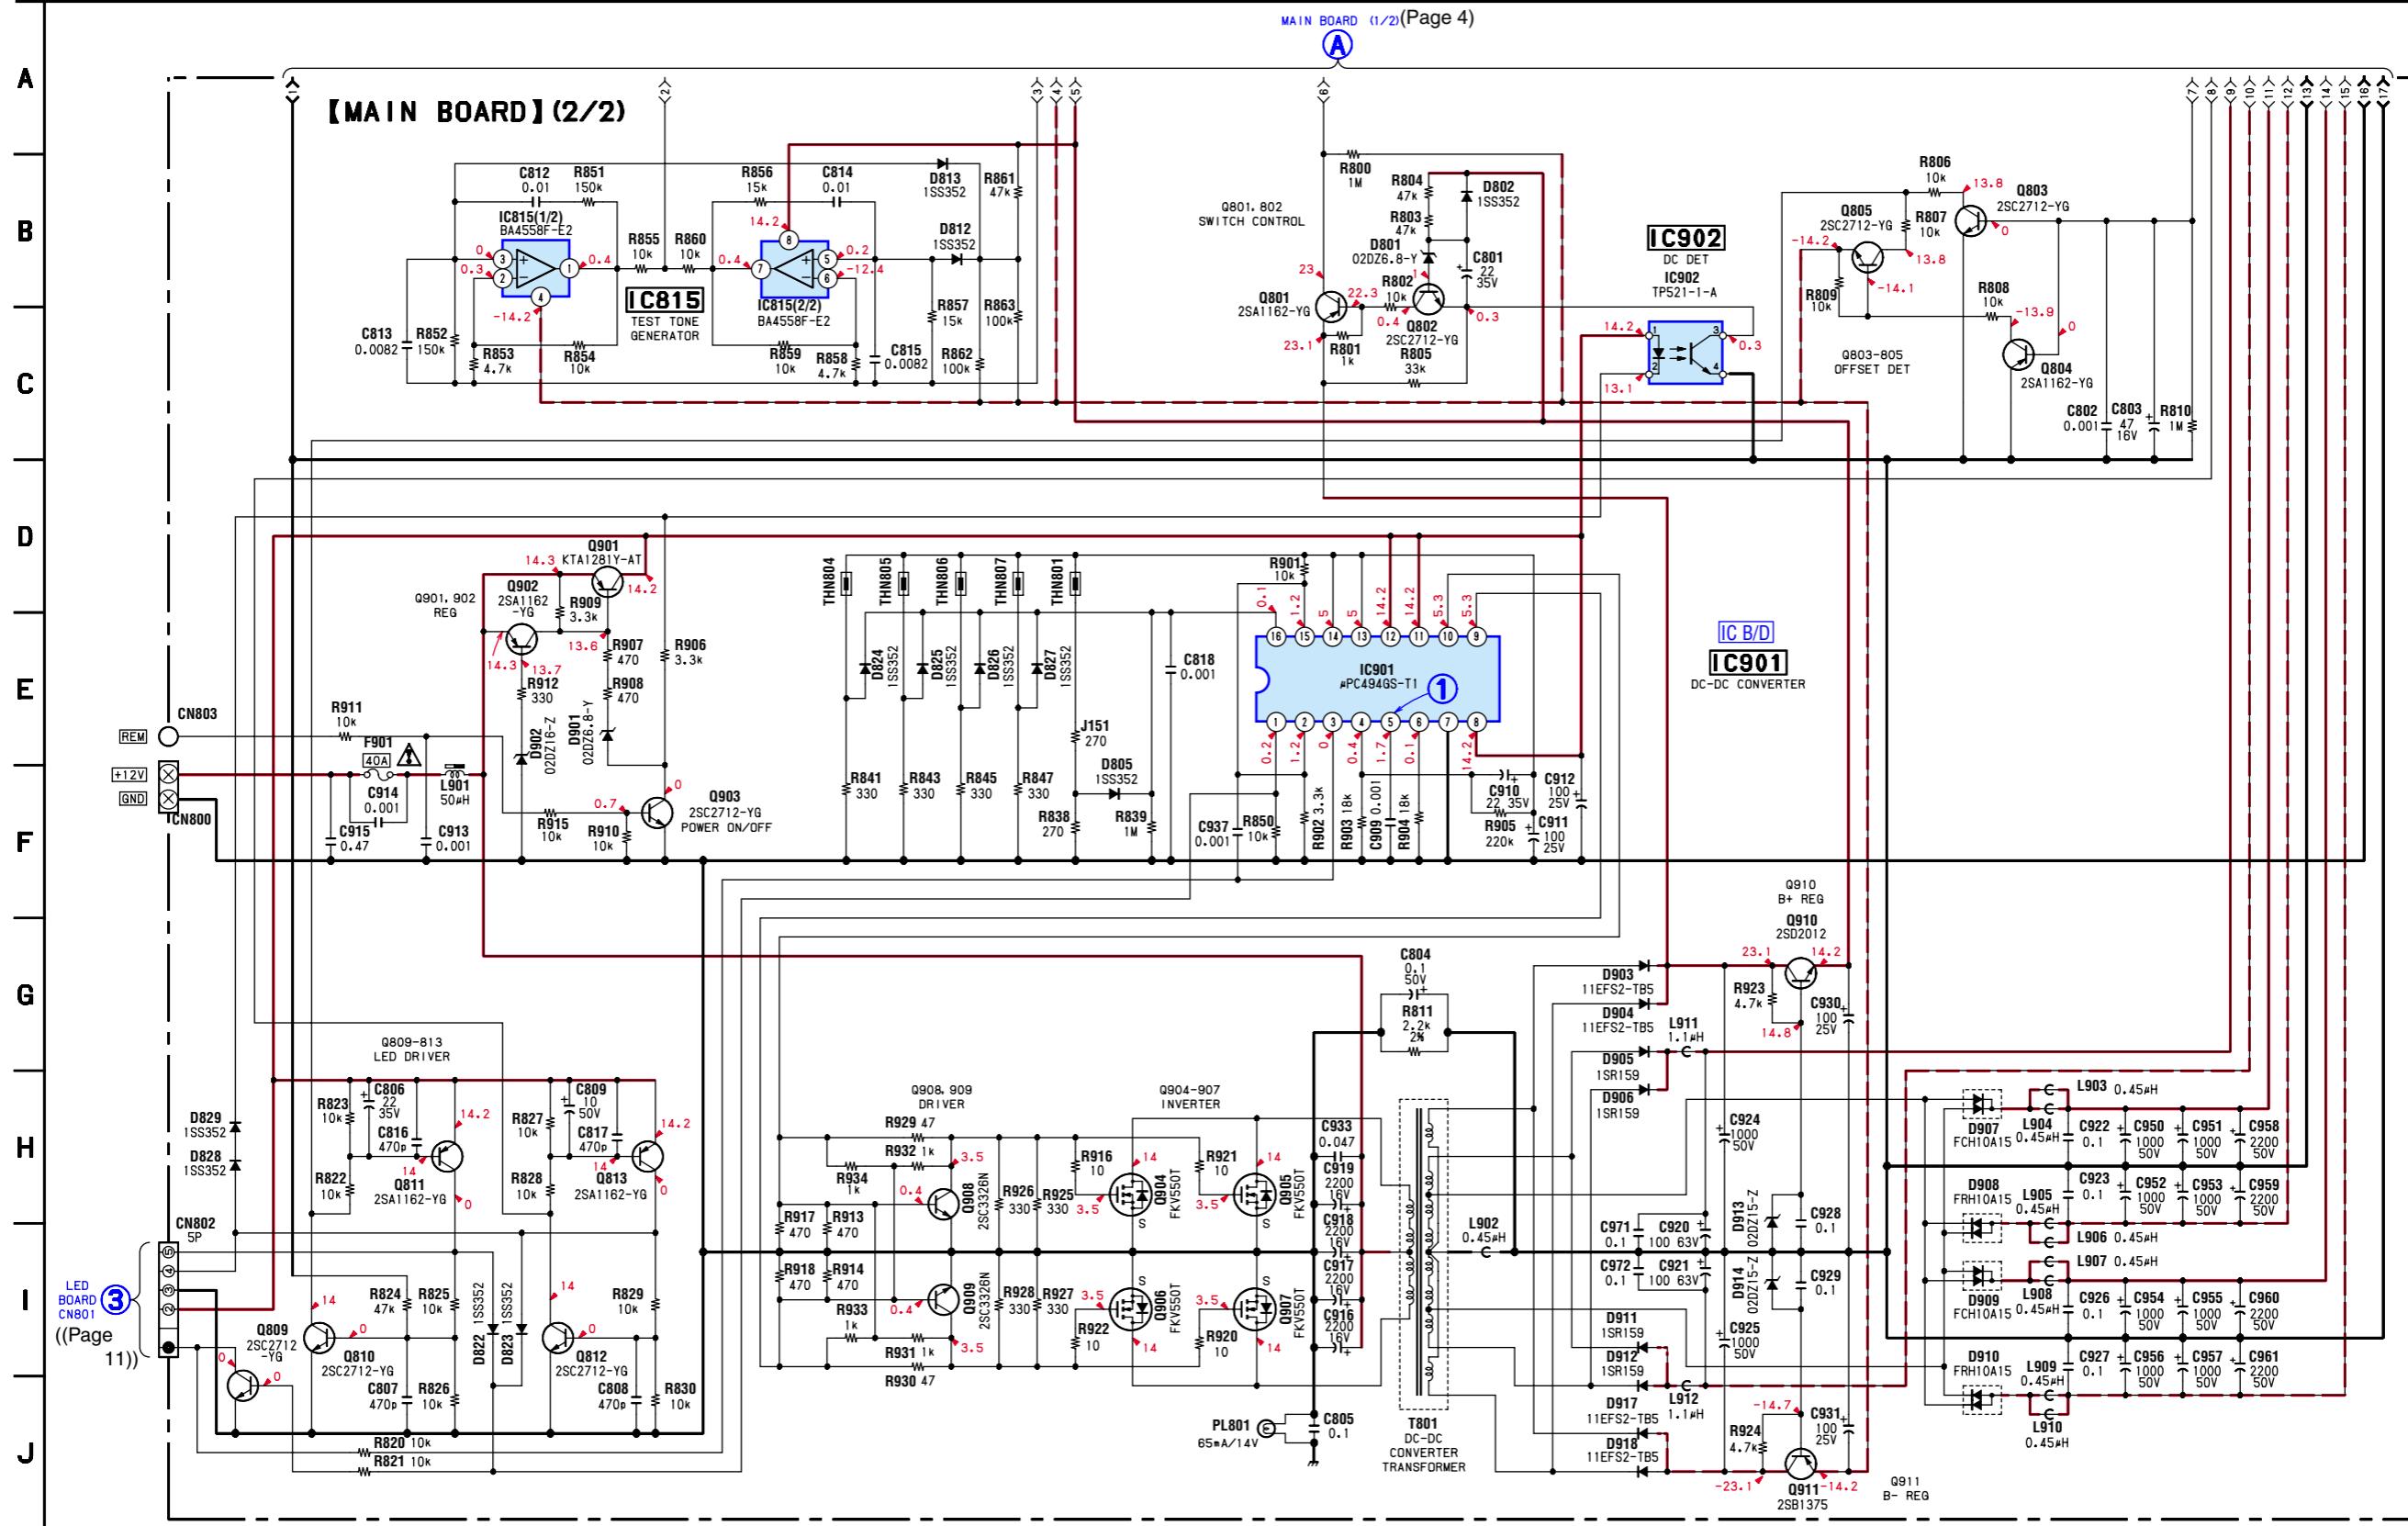

4. ELECTRICAL PARTS LIST

NOTE:
 • Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.

• RESISTORS

All resistors are in ohms.

METAL: Metal-film resistor.

METAL OXIDE: Metal oxide-film resistor.

F: nonflammable

- Items marked “**” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

• SEMICONDUCTORS

In each case, u : μ, for example:

uA.. : μA.. uPA.. : μPA..

uPB.. : μPB.. uPC.. : μPC.. uPD.. : μPD..

• CAPACITORS

uF : μF

• COILS

uH : μH

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark	
	A-3274-527-A	MAIN BOARD, COMPLETE		C214	1-126-794-11	ELECT	4.7uF 20% 50V	
		*****		C215	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	
*	3-225-066-11	HEAT SINK (SUB 1)		C217	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	
*	3-225-067-02	HEAT SINK (SUB 2)		C218	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	
*	3-225-072-02	BRACKET (4CH.VR1)		C219	1-164-489-11	CERAMIC CHIP	0.22uF 10% 16V	
*	3-225-073-02	BRACKET (4CH.VR2)		C220	1-164-489-11	CERAMIC CHIP	0.22uF 10% 16V	
*	3-225-080-01	HEAT SINK (RETAINER PLATE)		C221	1-164-489-11	CERAMIC CHIP	0.22uF 10% 16V	
	3-225-183-01	SCREW (+PSW.TT.3XL)		C222	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	
	3-225-183-11	SCREW (+PSW.TT.3XL)		C223	1-126-786-11	ELECT	47uF 20% 16V	
	3-225-184-01	SCREW (+PS.TT.3X6)		C226	1-162-923-11	CERAMIC CHIP	47PF 5% 50V	
	3-238-413-01	SHEET (TR), INSULATING		C227	1-136-165-00	FILM	0.1uF 5% 50V	
	7-685-646-79	SCREW +P 3X8 TYPE2 NON-SLIT		C228	1-136-161-00	FILM	0.047uF 5% 50V	
	< CAPACITOR >				C231	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V
	C101	1-126-794-11	ELECT	C232	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V	
	C102	1-126-794-11	ELECT	C233	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	
	C103	1-162-919-11	CERAMIC CHIP	C234	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	
	C104	1-162-919-11	CERAMIC CHIP	C301	1-126-794-11	ELECT	4.7uF 20% 50V	
	C111	1-162-923-11	CERAMIC CHIP	C302	1-126-794-11	ELECT	4.7uF 20% 50V	
	C112	1-126-794-11	ELECT	C303	1-162-919-11	CERAMIC CHIP	22PF 5% 50V	
	C113	1-127-715-11	CERAMIC CHIP	C304	1-162-919-11	CERAMIC CHIP	22PF 5% 50V	
	C114	1-126-794-11	ELECT	C311	1-162-923-11	CERAMIC CHIP	47PF 5% 50V	
	C115	1-162-927-11	CERAMIC CHIP	C312	1-126-794-11	ELECT	4.7uF 20% 50V	
	C117	1-162-927-11	CERAMIC CHIP	C313	1-127-715-11	CERAMIC CHIP	0.22uF 10% 16V	
	C118	1-162-927-11	CERAMIC CHIP	C314	1-126-794-11	ELECT	4.7uF 20% 50V	
	C119	1-164-489-11	CERAMIC CHIP	C315	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	
	C120	1-164-489-11	CERAMIC CHIP	C317	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	
	C121	1-128-499-11	ELECT	C318	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	
	C122	1-162-927-11	CERAMIC CHIP	C319	1-164-489-11	CERAMIC CHIP	0.22uF 10% 16V	
	C123	1-126-786-11	ELECT	C320	1-164-489-11	CERAMIC CHIP	0.22uF 10% 16V	
	C126	1-162-923-11	CERAMIC CHIP	C322	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	
	C127	1-136-165-00	FILM	C323	1-126-786-11	ELECT	47uF 20% 16V	
	C128	1-136-161-00	FILM	C326	1-162-923-11	CERAMIC CHIP	47PF 5% 50V	
	C131	1-163-009-11	CERAMIC CHIP	C327	1-136-165-00	FILM	0.1uF 5% 50V	
	C132	1-163-009-11	CERAMIC CHIP	C328	1-136-161-00	FILM	0.047uF 5% 50V	
	C133	1-164-004-11	CERAMIC CHIP	C331	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V	
	C134	1-164-004-11	CERAMIC CHIP	C332	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V	
	C201	1-126-794-11	ELECT	C333	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	
	C202	1-126-794-11	ELECT	C334	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	
	C203	1-162-919-11	CERAMIC CHIP	C401	1-126-794-11	ELECT	4.7uF 20% 50V	
	C204	1-162-919-11	CERAMIC CHIP	C402	1-126-794-11	ELECT	4.7uF 20% 50V	
	C211	1-162-923-11	CERAMIC CHIP	C403	1-162-919-11	CERAMIC CHIP	22PF 5% 50V	
	C212	1-126-794-11	ELECT	C404	1-162-919-11	CERAMIC CHIP	22PF 5% 50V	
	C213	1-127-715-11	CERAMIC CHIP	C411	1-162-923-11	CERAMIC CHIP	47PF 5% 50V	
	C412	1-126-794-11	ELECT	C412	1-126-794-11	ELECT	4.7uF 20% 50V	
	C413	1-127-715-11	CERAMIC CHIP	C413	1-127-715-11	CERAMIC CHIP	0.22uF 10% 16V	

MAIN

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C414	1-126-794-11	ELECT	4.7uF 20% 50V	C420	1-164-489-11	CERAMIC CHIP	0.22uF 10% 16V
C415	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	C421	1-164-489-11	CERAMIC CHIP	0.22uF 10% 16V
C417	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	C422	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C418	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	C423	1-126-786-11	ELECT	47uF 20% 16V
C419	1-164-489-11	CERAMIC CHIP	0.22uF 10% 16V	C426	1-162-923-11	CERAMIC CHIP	47PF 5% 50V
C427	1-136-165-00	FILM	0.1uF 5% 50V	C428	1-136-161-00	FILM	0.047uF 5% 50V
C429	1-115-339-11	CERAMIC CHIP	0.001uF 10% 50V	C431	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V
C430	1-104-665-11	ELECT	100uF 20% 25V	C432	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V
C431	1-104-665-11	ELECT	100uF 20% 25V	C433	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
C434	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C434	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
C801	1-126-796-11	ELECT	22uF 20% 35V	C802	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C802	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	C803	1-126-786-11	ELECT	47uF 20% 16V
C804	1-115-867-11	ELECT	0.1uF 20% 50V	C804	1-115-867-11	ELECT	0.1uF 20% 50V
C805	1-115-339-11	CERAMIC CHIP	0.1uF 10% 50V	C806	1-126-796-11	ELECT	22uF 20% 35V
C806	1-126-796-11	ELECT	22uF 20% 35V	C807	1-162-962-11	CERAMIC CHIP	470PF 10% 50V
C807	1-162-962-11	CERAMIC CHIP	470PF 10% 50V	C808	1-162-962-11	CERAMIC CHIP	470PF 10% 50V
C809	1-126-964-11	ELECT	10uF 20% 50V	C810	1-115-339-11	CERAMIC CHIP	0.1uF 10% 50V
C810	1-115-339-11	CERAMIC CHIP	0.1uF 10% 50V	C812	1-163-021-11	CERAMIC CHIP	0.01uF 10% 50V
C812	1-163-021-11	CERAMIC CHIP	0.01uF 10% 50V	C813	1-164-174-11	CERAMIC CHIP	0.0082uF 10% 25V
C813	1-164-174-11	CERAMIC CHIP	0.0082uF 10% 25V				

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
D904	8-719-987-67	DIODE 11EFS2		J61	1-216-296-11	SHORT CHIP	0
D905	8-719-079-92	DIODE 1SR159-200TE-25		J62	1-216-296-11	SHORT CHIP	0
D906	8-719-079-92	DIODE 1SR159-200TE-25		J63	1-216-296-11	SHORT CHIP	0
D907	8-719-079-00	DIODE FCH10A15		J65	1-216-296-11	SHORT CHIP	0
D908	8-719-079-01	DIODE FRH10A15		J66	1-216-296-11	SHORT CHIP	0
D909	8-719-079-00	DIODE FCH10A15		J67	1-216-296-11	SHORT CHIP	0
D910	8-719-079-01	DIODE FRH10A15		J68	1-216-296-11	SHORT CHIP	0
D911	8-719-079-92	DIODE 1SR159-200TE-25		J70	1-216-296-11	SHORT CHIP	0
D912	8-719-079-92	DIODE 1SR159-200TE-25		J71	1-216-296-11	SHORT CHIP	0
D913	8-719-065-43	DIODE 02DZ15-Z(TPH3)		J72	1-216-296-11	SHORT CHIP	0
D914	8-719-065-43	DIODE 02DZ15-Z(TPH3)		J73	1-216-296-11	SHORT CHIP	0
D917	8-719-987-67	DIODE 11EFS2		J74	1-216-295-11	SHORT CHIP	0
D918	8-719-987-67	DIODE 11EFS2		J75	1-216-295-11	SHORT CHIP	0
		< FUSE >		J76	1-216-295-11	SHORT CHIP	0
▲F901	1-533-743-11	FUSE (BLADE TYPE) (AUTO FUSE) (40A)		J79	1-216-295-11	SHORT CHIP	0
		< IC >		J80	1-216-295-11	SHORT CHIP	0
IC801	8-759-385-17	IC NJM4580E(TE2)		J81	1-216-295-11	SHORT CHIP	0
IC806	8-759-385-17	IC NJM4580E(TE2)		J83	1-216-295-11	SHORT CHIP	0
IC807	8-759-385-17	IC NJM4580E(TE2)		J84	1-216-295-11	SHORT CHIP	0
IC808	8-759-385-17	IC NJM4580E(TE2)		J85	1-216-295-11	SHORT CHIP	0
IC813	8-759-385-17	IC NJM4580E(TE2)		J87	1-216-295-11	SHORT CHIP	0
IC814	8-759-385-17	IC NJM4580E(TE2)		J88	1-216-295-11	SHORT CHIP	0
IC815	8-759-909-71	IC BA4558F		J89	1-216-295-11	SHORT CHIP	0
IC901	8-759-144-88	IC uPC494GS		J90	1-216-296-11	SHORT CHIP	0
		< PHOTO TRANSISTOR >		J93	1-216-295-11	SHORT CHIP	0
IC902	8-719-800-42	PHOTO TRANSISTOR TP521-1-A		J94	1-216-296-11	SHORT CHIP	0
		< JUMPER RESISTOR >		J95	1-216-296-11	SHORT CHIP	0
J1	1-216-295-11	SHORT CHIP	0	J96	1-216-295-11	SHORT CHIP	0
J2	1-216-296-11	SHORT CHIP	0	J97	1-216-295-11	SHORT CHIP	0
J3	1-216-296-11	SHORT CHIP	0	J98	1-216-295-11	SHORT CHIP	0
J17	1-216-296-11	SHORT CHIP	0	J100	1-216-296-11	SHORT CHIP	0
J32	1-216-296-11	SHORT CHIP	0	J101	1-216-296-11	SHORT CHIP	0
J33	1-216-296-11	SHORT CHIP	0	J102	1-216-296-11	SHORT CHIP	0
J36	1-216-296-11	SHORT CHIP	0	J104	1-216-296-11	SHORT CHIP	0
J37	1-216-296-11	SHORT CHIP	0	J105	1-216-296-11	SHORT CHIP	0
J38	1-216-296-11	SHORT CHIP	0	J106	1-216-296-11	SHORT CHIP	0
J39	1-216-296-11	SHORT CHIP	0	J107	1-216-296-11	SHORT CHIP	0
J40	1-216-296-11	SHORT CHIP	0	J108	1-216-296-11	SHORT CHIP	0
J41	1-216-296-11	SHORT CHIP	0	J109	1-216-296-11	SHORT CHIP	0
J44	1-216-295-11	SHORT CHIP	0	J112	1-216-296-11	SHORT CHIP	0
J45	1-216-296-11	SHORT CHIP	0	J113	1-216-296-11	SHORT CHIP	0
J46	1-216-296-11	SHORT CHIP	0	J114	1-216-296-11	SHORT CHIP	0
J50	1-216-296-11	SHORT CHIP	0	J115	1-216-296-11	SHORT CHIP	0
J51	1-216-296-11	SHORT CHIP	0	J116	1-216-296-11	SHORT CHIP	0
J52	1-216-296-11	SHORT CHIP	0	J117	1-216-296-11	SHORT CHIP	0
J53	1-216-296-11	SHORT CHIP	0	J118	1-216-296-11	SHORT CHIP	0
J54	1-216-296-11	SHORT CHIP	0	J119	1-216-296-11	SHORT CHIP	0
J55	1-216-296-11	SHORT CHIP	0	J121	1-216-295-11	SHORT CHIP	0
J56	1-216-296-11	SHORT CHIP	0	J122	1-216-295-11	SHORT CHIP	0
J57	1-216-296-11	SHORT CHIP	0	J123	1-216-296-11	SHORT CHIP	0
J58	1-216-295-11	SHORT CHIP	0	J124	1-216-296-11	SHORT CHIP	0
J59	1-216-295-11	SHORT CHIP	0	J126	1-216-296-11	SHORT CHIP	0
J60	1-216-296-11	SHORT CHIP	0	J127	1-216-296-11	SHORT CHIP	0
				J128	1-216-295-11	SHORT CHIP	0
				J129	1-216-296-11	SHORT CHIP	0
				J130	1-216-296-11	SHORT CHIP	0
				J131	1-216-295-11	SHORT CHIP	0
				J132	1-216-296-11	SHORT CHIP	0

The components identified by mark ▲ or dotted line with mark ▲ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ▲ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

XM-475GSX

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark		
J133	1-216-296-11	SHORT CHIP	0	Q108	8-729-051-72	TRANSISTOR	2SC2881-Y(TE12L.C)		
J134	1-216-295-11	SHORT CHIP	0	Q109	8-729-924-78	FET	IRF540		
J136	1-216-296-11	SHORT CHIP	0	Q110	8-729-053-85	FET	IRF9540		
J137	1-216-296-11	SHORT CHIP	0	Q111	8-729-041-66	TRANSISTOR	2SC4015-TV2		
J139	1-216-296-11	SHORT CHIP	0	Q112	8-729-230-49	TRANSISTOR	2SC2712-YG		
J140	1-216-296-11	SHORT CHIP	0	Q201	8-729-141-73	TRANSISTOR	2SC3624A-T1L15L16		
J141	1-216-296-11	SHORT CHIP	0	Q202	8-729-202-38	TRANSISTOR	2SC3326N-A		
J142	1-216-296-11	SHORT CHIP	0	Q203	8-729-014-87	TRANSISTOR	2SC4207-YGR-TE85R		
J144	1-216-296-11	SHORT CHIP	0	Q204	8-729-014-85	TRANSISTOR	2SA1618-YGR-TE85R		
J145	1-216-296-11	SHORT CHIP	0	Q207	8-729-046-32	TRANSISTOR	2SA1201-Y(TE12L.C)		
J146	1-216-296-11	SHORT CHIP	0	Q208	8-729-051-72	TRANSISTOR	2SC2881-Y(TE12L.C)		
J147	1-216-296-11	SHORT CHIP	0	Q209	8-729-924-78	FET	IRF540		
J148	1-216-296-11	SHORT CHIP	0	Q210	8-729-053-85	FET	IRF9540		
J151	1-216-184-00	RES-CHIP	270	5%	1/8W	Q211	8-729-041-66	TRANSISTOR	2SC4015-TV2
J152	1-216-296-11	SHORT CHIP	0	Q212	8-729-230-49	TRANSISTOR	2SC2712-YG		
J153	1-216-295-11	SHORT CHIP	0	Q301	8-729-141-73	TRANSISTOR	2SC3624A-T1L15L16		
J154	1-216-295-11	SHORT CHIP	0	Q302	8-729-202-38	TRANSISTOR	2SC3326N-A		
J155	1-216-864-11	METAL CHIP	0	5%	1/10W	Q303	8-729-014-87	TRANSISTOR	2SC4207-YGR-TE85R
J156	1-216-864-11	METAL CHIP	0	5%	1/10W	Q304	8-729-014-85	TRANSISTOR	2SA1618-YGR-TE85R
J157	1-216-864-11	METAL CHIP	0	5%	1/10W	Q307	8-729-046-32	TRANSISTOR	2SA1201-Y(TE12L.C)
J158	1-216-864-11	METAL CHIP	0	5%	1/10W	Q308	8-729-051-72	TRANSISTOR	2SC2881-Y(TE12L.C)
J159	1-216-296-11	SHORT CHIP	0	Q309	8-729-924-78	FET	IRF540		
J160	1-216-296-11	SHORT CHIP	0	Q310	8-729-053-85	FET	IRF9540		
J162	1-216-296-11	SHORT CHIP	0	Q311	8-729-041-66	TRANSISTOR	2SC4015-TV2		
J163	1-216-296-11	SHORT CHIP	0	Q312	8-729-230-49	TRANSISTOR	2SC2712-YG		
J200	1-216-296-11	SHORT CHIP	0	Q401	8-729-141-73	TRANSISTOR	2SC3624A-T1L15L16		
J201	1-216-296-11	SHORT CHIP	0	Q402	8-729-202-38	TRANSISTOR	2SC3326N-A		
J202	1-216-296-11	SHORT CHIP	0	Q403	8-729-014-87	TRANSISTOR	2SC4207-YGR-TE85R		
J203	1-216-296-11	SHORT CHIP	0	Q404	8-729-014-85	TRANSISTOR	2SA1618-YGR-TE85R		
J204	1-216-296-11	SHORT CHIP	0	Q407	8-729-046-32	TRANSISTOR	2SA1201-Y(TE12L.C)		
J205	1-216-296-11	SHORT CHIP	0	Q408	8-729-051-72	TRANSISTOR	2SC2881-Y(TE12L.C)		
J207	1-216-296-11	SHORT CHIP	0	Q409	8-729-924-78	FET	IRF540		
J251	1-216-295-11	SHORT CHIP	0	Q410	8-729-053-85	FET	IRF9540		
J252	1-216-296-11	SHORT CHIP	0	Q411	8-729-041-66	TRANSISTOR	2SC4015-TV2		
				Q412	8-729-230-49	TRANSISTOR	2SC2712-YG		
< COIL >									
L901	1-419-851-21	COIL, CHOKE	50uH	Q801	8-729-216-22	TRANSISTOR	2SA1162-G		
L902	1-410-396-41	INDUCTOR, FERRITE BEAD	0.45uH	Q802	8-729-230-49	TRANSISTOR	2SC2712-YG		
L903	1-410-396-41	INDUCTOR, FERRITE BEAD	0.45uH	Q803	8-729-230-49	TRANSISTOR	2SC2712-YG		
L904	1-410-396-41	INDUCTOR, FERRITE BEAD	0.45uH	Q804	8-729-216-22	TRANSISTOR	2SA1162-G		
L905	1-410-396-41	INDUCTOR, FERRITE BEAD	0.45uH	Q805	8-729-230-49	TRANSISTOR	2SC2712-YG		
L906	1-410-396-41	INDUCTOR, FERRITE BEAD	0.45uH	Q809	8-729-230-49	TRANSISTOR	2SC2712-YG		
L907	1-410-396-41	INDUCTOR, FERRITE BEAD	0.45uH	Q810	8-729-230-49	TRANSISTOR	2SC2712-YG		
L908	1-410-396-41	INDUCTOR, FERRITE BEAD	0.45uH	Q811	8-729-216-22	TRANSISTOR	2SA1162-G		
L909	1-410-396-41	INDUCTOR, FERRITE BEAD	0.45uH	Q812	8-729-230-49	TRANSISTOR	2SC2712-YG		
L910	1-410-396-41	INDUCTOR, FERRITE BEAD	0.45uH	Q813	8-729-216-22	TRANSISTOR	2SA1162-G		
L911	1-410-397-21	INDUCTOR, FERRITE BEAD	1.1uH	Q901	8-729-052-82	TRANSISTOR	KTA1281Y-AT		
L912	1-410-397-21	INDUCTOR, FERRITE BEAD	1.1uH	Q902	8-729-216-22	TRANSISTOR	2SA1162-G		
< PILOT LAMP >									
PL801	1-517-156-11	LAMP, PILOT	(65mA/14V)	Q903	8-729-230-49	TRANSISTOR	2SC2712-YG		
< TRANSISTOR >									
Q101	8-729-141-73	TRANSISTOR	2SC3624A-T1L15L16	Q904	8-729-053-05	FET	FKV550T		
Q102	8-729-202-38	TRANSISTOR	2SC3326N-A	Q905	8-729-053-05	FET	FKV550T		
Q103	8-729-014-87	TRANSISTOR	2SC4207-YGR-TE85R	Q906	8-729-053-05	FET	FKV550T		
Q104	8-729-014-85	TRANSISTOR	2SA1618-YGR-TE85R	Q907	8-729-053-05	FET	FKV550T		
Q107	8-729-046-32	TRANSISTOR	2SA1201-Y(TE12L.C)	Q908	8-729-202-38	TRANSISTOR	2SC3326N-A		
				Q909	8-729-202-38	TRANSISTOR	2SC3326N-A		
				Q910	8-729-209-15	TRANSISTOR	2SD2012		
				Q911	8-729-209-60	TRANSISTOR	2SB1375		

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
< RESISTOR >											
R101	1-216-837-11	METAL CHIP	22K	5%	1/10W	R227	1-216-837-11	METAL CHIP	22K	5%	1/10W
R102	1-216-837-11	METAL CHIP	22K	5%	1/10W	R228	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R103	1-216-841-11	METAL CHIP	47K	5%	1/10W	R229	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R104	1-216-841-11	METAL CHIP	47K	5%	1/10W	R230	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R105	1-216-837-11	METAL CHIP	22K	5%	1/10W	R231	1-216-841-11	METAL CHIP	47K	5%	1/10W
R106	1-216-837-11	METAL CHIP	22K	5%	1/10W	R232	1-216-841-11	METAL CHIP	47K	5%	1/10W
R117	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R233	1-216-033-00	METAL CHIP	220	5%	1/10W
R118	1-216-834-11	METAL CHIP	12K	5%	1/10W	R234	1-216-033-00	METAL CHIP	220	5%	1/10W
R119	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R235	1-216-809-11	METAL CHIP	100	5%	1/10W
R120	1-216-819-11	METAL CHIP	680	5%	1/10W	R236	1-216-809-11	METAL CHIP	100	5%	1/10W
R121	1-216-837-11	METAL CHIP	22K	5%	1/10W	R237	1-216-845-11	METAL CHIP	100K	5%	1/10W
R122	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R238	1-216-845-11	METAL CHIP	100K	5%	1/10W
R123	1-216-841-11	METAL CHIP	47K	5%	1/10W	R239	1-208-494-61	RES-CHIP	2.2K	2%	1/8W
R124	1-216-811-11	METAL CHIP	150	5%	1/10W	R240	1-216-208-00	RES-CHIP	2.7K	5%	1/8W
R125	1-208-494-61	RES-CHIP	2.2K	2%	1/8W	R241	8-719-017-03	DIODE 02DZ4.7-TPH3			
R126	1-216-065-11	RES-CHIP	4.7K	5%	1/10W	R242	1-216-811-11	METAL CHIP	150	5%	1/10W
R127	1-216-837-11	METAL CHIP	22K	5%	1/10W	R243	1-216-206-00	RES-CHIP	2.2K	5%	1/8W
R128	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R244	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R129	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R245	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R130	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R248	1-216-833-11	METAL CHIP	10K	5%	1/10W
R131	1-216-841-11	METAL CHIP	47K	5%	1/10W	R250	1-216-853-11	METAL CHIP	470K	5%	1/10W
R132	1-216-841-11	METAL CHIP	47K	5%	1/10W	R251	1-215-857-11	METAL OXIDE	10	5%	1W F
R133	1-216-033-00	METAL CHIP	220	5%	1/10W	R253	1-220-397-11	RES-CHIP	4.7M	5%	1/10W
R134	1-216-033-00	METAL CHIP	220	5%	1/10W	R258	1-205-991-11	METAL	0.1X2	10%	5W
R135	1-216-809-11	METAL CHIP	100	5%	1/10W	R301	1-216-837-11	METAL CHIP	22K	5%	1/10W
R136	1-216-809-11	METAL CHIP	100	5%	1/10W	R302	1-216-837-11	METAL CHIP	22K	5%	1/10W
R137	1-216-845-11	METAL CHIP	100K	5%	1/10W	R303	1-216-841-11	METAL CHIP	47K	5%	1/10W
R138	1-216-845-11	METAL CHIP	100K	5%	1/10W	R304	1-216-841-11	METAL CHIP	47K	5%	1/10W
R139	1-208-494-61	RES-CHIP	2.2K	2%	1/8W	R305	1-216-837-11	METAL CHIP	22K	5%	1/10W
R140	1-216-208-00	RES-CHIP	2.7K	5%	1/8W	R306	1-216-837-11	METAL CHIP	22K	5%	1/10W
R141	8-719-017-03	DIODE 02DZ4.7-TPH3				R317	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R142	1-216-811-11	METAL CHIP	150	5%	1/10W	R318	1-216-834-11	METAL CHIP	12K	5%	1/10W
R143	1-216-206-00	RES-CHIP	2.2K	5%	1/8W	R319	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R144	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R320	1-216-819-11	METAL CHIP	680	5%	1/10W
R145	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R321	1-216-837-11	METAL CHIP	22K	5%	1/10W
R148	1-216-833-11	METAL CHIP	10K	5%	1/10W	R322	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R150	1-216-853-11	METAL CHIP	470K	5%	1/10W	R323	1-216-841-11	METAL CHIP	47K	5%	1/10W
R151	1-215-857-11	METAL OXIDE	10	5%	1W F	R324	1-216-811-11	METAL CHIP	150	5%	1/10W
R153	1-220-397-11	RES-CHIP	4.7M	5%	1/10W	R325	1-208-494-61	RES-CHIP	2.2K	2%	1/8W
R158	1-205-991-11	METAL	0.1X2	10%	5W	R326	1-216-821-11	METAL CHIP	1K	5%	1/10W
R201	1-216-837-11	METAL CHIP	22K	5%	1/10W	R327	1-216-837-11	METAL CHIP	22K	5%	1/10W
R202	1-216-837-11	METAL CHIP	22K	5%	1/10W	R328	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R203	1-216-841-11	METAL CHIP	47K	5%	1/10W	R329	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R204	1-216-841-11	METAL CHIP	47K	5%	1/10W	R330	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R205	1-216-837-11	METAL CHIP	22K	5%	1/10W	R331	1-216-841-11	METAL CHIP	47K	5%	1/10W
R206	1-216-837-11	METAL CHIP	22K	5%	1/10W	R332	1-216-841-11	METAL CHIP	47K	5%	1/10W
R217	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R333	1-216-033-00	METAL CHIP	220	5%	1/10W
R218	1-216-834-11	METAL CHIP	12K	5%	1/10W	R334	1-216-033-00	METAL CHIP	220	5%	1/10W
R219	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R335	1-216-809-11	METAL CHIP	100	5%	1/10W
R220	1-216-819-11	METAL CHIP	680	5%	1/10W	R336	1-216-809-11	METAL CHIP	100	5%	1/10W
R221	1-216-837-11	METAL CHIP	22K	5%	1/10W	R337	1-216-845-11	METAL CHIP	100K	5%	1/10W
R222	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R338	1-216-845-11	METAL CHIP	100K	5%	1/10W
R223	1-216-841-11	METAL CHIP	47K	5%	1/10W	R339	1-208-494-61	RES-CHIP	2.2K	2%	1/8W
R224	1-216-811-11	METAL CHIP	150	5%	1/10W	R340	1-216-208-00	RES-CHIP	2.7K	5%	1/8W
R225	1-208-494-61	RES-CHIP	2.2K	2%	1/8W	R341	8-719-017-03	DIODE 02DZ4.7-TPH3			
R226	1-216-821-11	METAL CHIP	1K	5%	1/10W	R342	1-216-811-11	METAL CHIP	150	5%	1/10W
						R343	1-216-206-00	RES-CHIP	2.2K	5%	1/8W
						R344	1-216-829-11	METAL CHIP	4.7K	5%	1/10W

XM-475GSX

MAIN

Ref. No.	Part No.	Description		Remark	Ref. No.	Part No.	Description		Remark		
R345	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R820	1-216-833-11	METAL CHIP	10K	5%	1/10W
R348	1-216-833-11	METAL CHIP	10K	5%	1/10W	R821	1-216-833-11	METAL CHIP	10K	5%	1/10W
R350	1-216-853-11	METAL CHIP	470K	5%	1/10W	R822	1-216-833-11	METAL CHIP	10K	5%	1/10W
R351	1-215-857-11	METAL OXIDE	10	5%	1W F	R823	1-216-833-11	METAL CHIP	10K	5%	1/10W
R353	1-220-397-11	RES-CHIP	4.7M	5%	1/10W	R824	1-216-841-11	METAL CHIP	47K	5%	1/10W
R358	1-205-991-11	METAL	0.1X2	10%	5W	R825	1-216-833-11	METAL CHIP	10K	5%	1/10W
R401	1-216-837-11	METAL CHIP	22K	5%	1/10W	R826	1-216-833-11	METAL CHIP	10K	5%	1/10W
R402	1-216-837-11	METAL CHIP	22K	5%	1/10W	R827	1-216-833-11	METAL CHIP	10K	5%	1/10W
R403	1-216-841-11	METAL CHIP	47K	5%	1/10W	R828	1-216-833-11	METAL CHIP	10K	5%	1/10W
R404	1-216-841-11	METAL CHIP	47K	5%	1/10W	R829	1-216-833-11	METAL CHIP	10K	5%	1/10W
R405	1-216-837-11	METAL CHIP	22K	5%	1/10W	R830	1-216-833-11	METAL CHIP	10K	5%	1/10W
R406	1-216-837-11	METAL CHIP	22K	5%	1/10W	R838	1-216-814-11	METAL CHIP	270	5%	1/10W
R417	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R839	1-216-857-11	METAL CHIP	1M	5%	1/10W
R418	1-216-834-11	METAL CHIP	12K	5%	1/10W	R841	1-216-815-11	METAL CHIP	330	5%	1/10W
R419	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R843	1-216-815-11	METAL CHIP	330	5%	1/10W
R420	1-216-819-11	METAL CHIP	680	5%	1/10W	R845	1-216-815-11	METAL CHIP	330	5%	1/10W
R421	1-216-837-11	METAL CHIP	22K	5%	1/10W	R847	1-216-815-11	METAL CHIP	330	5%	1/10W
R422	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R850	1-216-833-11	METAL CHIP	10K	5%	1/10W
R423	1-216-841-11	METAL CHIP	47K	5%	1/10W	R851	1-216-847-11	METAL CHIP	150K	5%	1/10W
R424	1-216-811-11	METAL CHIP	150	5%	1/10W	R852	1-216-847-11	METAL CHIP	150K	5%	1/10W
R425	1-208-494-61	RES-CHIP	2.2K	2%	1/8W	R853	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R426	1-216-821-11	METAL CHIP	1K	5%	1/10W	R854	1-216-833-11	METAL CHIP	10K	5%	1/10W
R427	1-216-837-11	METAL CHIP	22K	5%	1/10W	R855	1-216-833-11	METAL CHIP	10K	5%	1/10W
R428	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R856	1-216-835-11	METAL CHIP	15K	5%	1/10W
R429	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R857	1-216-835-11	METAL CHIP	15K	5%	1/10W
R430	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R858	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R431	1-216-841-11	METAL CHIP	47K	5%	1/10W	R859	1-216-833-11	METAL CHIP	10K	5%	1/10W
R432	1-216-841-11	METAL CHIP	47K	5%	1/10W	R860	1-216-833-11	METAL CHIP	10K	5%	1/10W
R433	1-216-033-00	METAL CHIP	220	5%	1/10W	R861	1-216-841-11	METAL CHIP	47K	5%	1/10W
R434	1-216-033-00	METAL CHIP	220	5%	1/10W	R862	1-216-845-11	METAL CHIP	100K	5%	1/10W
R435	1-216-809-11	METAL CHIP	100	5%	1/10W	R863	1-216-845-11	METAL CHIP	100K	5%	1/10W
R436	1-216-809-11	METAL CHIP	100	5%	1/10W	R901	1-216-833-11	METAL CHIP	10K	5%	1/10W
R437	1-216-845-11	METAL CHIP	100K	5%	1/10W	R902	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R438	1-216-845-11	METAL CHIP	100K	5%	1/10W	R903	1-216-836-11	METAL CHIP	18K	5%	1/10W
R439	1-208-494-61	RES-CHIP	2.2K	2%	1/8W	R904	1-216-836-11	METAL CHIP	18K	5%	1/10W
R440	1-216-208-00	RES-CHIP	2.7K	5%	1/8W	R905	1-216-849-11	METAL CHIP	220K	5%	1/10W
R441	8-719-017-03	DIODE 02DZ4.7-TPH3				R906	1-216-210-00	RES-CHIP	3.3K	5%	1/8W
R442	1-216-811-11	METAL CHIP	150	5%	1/10W	R907	1-216-190-00	RES-CHIP	470	5%	1/8W
R443	1-216-206-00	RES-CHIP	2.2K	5%	1/8W	R908	1-216-190-00	RES-CHIP	470	5%	1/8W
R444	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R909	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R445	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R910	1-216-833-11	METAL CHIP	10K	5%	1/10W
R448	1-216-833-11	METAL CHIP	10K	5%	1/10W	R911	1-216-833-11	METAL CHIP	10K	5%	1/10W
R450	1-216-853-11	METAL CHIP	470K	5%	1/10W	R912	1-216-186-00	RES-CHIP	330	5%	1/8W
R451	1-215-857-11	METAL OXIDE	10	5%	1W F	R913	1-216-817-11	METAL CHIP	470	5%	1/10W
R453	1-220-397-11	RES-CHIP	4.7M	5%	1/10W	R914	1-216-817-11	METAL CHIP	470	5%	1/10W
R458	1-205-991-11	METAL	0.1X2	10%	5W	R915	1-216-833-11	METAL CHIP	10K	5%	1/10W
R800	1-216-857-11	METAL CHIP	1M	5%	1/10W	R916	1-216-001-00	METAL CHIP	10	5%	1/10W
R801	1-216-821-11	METAL CHIP	1K	5%	1/10W	R917	1-216-817-11	METAL CHIP	470	5%	1/10W
R802	1-216-833-11	METAL CHIP	10K	5%	1/10W	R918	1-216-817-11	METAL CHIP	470	5%	1/10W
R803	1-216-841-11	METAL CHIP	47K	5%	1/10W	R920	1-216-001-00	METAL CHIP	10	5%	1/10W
R804	1-216-841-11	METAL CHIP	47K	5%	1/10W	R921	1-216-001-00	METAL CHIP	10	5%	1/10W
R805	1-216-839-11	METAL CHIP	33K	5%	1/10W	R922	1-216-001-00	METAL CHIP	10	5%	1/10W
R806	1-216-833-11	METAL CHIP	10K	5%	1/10W	R923	1-216-065-11	RES-CHIP	4.7K	5%	1/10W
R807	1-216-833-11	METAL CHIP	10K	5%	1/10W	R924	1-216-065-11	RES-CHIP	4.7K	5%	1/10W
R808	1-216-833-11	METAL CHIP	10K	5%	1/10W	R925	1-216-186-00	RES-CHIP	330	5%	1/8W
R809	1-216-833-11	METAL CHIP	10K	5%	1/10W	R926	1-216-186-00	RES-CHIP	330	5%	1/8W
R810	1-216-857-11	METAL CHIP	1M	5%	1/10W	R927	1-216-186-00	RES-CHIP	330	5%	1/8W
R811	1-208-494-61	RES-CHIP	2.2K	2%	1/8W	R928	1-216-186-00	RES-CHIP	330	5%	1/8W

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>		
R929	1-216-017-11	RES-CHIP	47	5%	1/10W
R930	1-216-017-11	RES-CHIP	47	5%	1/10W
R931	1-216-821-11	METAL CHIP	1K	5%	1/10W
R932	1-216-821-11	METAL CHIP	1K	5%	1/10W
R933	1-216-821-11	METAL CHIP	1K	5%	1/10W
R934	1-216-821-11	METAL CHIP	1K	5%	1/10W
< VARIABLE RESISTOR >					
RV104	1-225-213-21	RES, ADJ, CARBON 2.2K			
RV204	1-225-213-21	RES, ADJ, CARBON 2.2K			
RV304	1-225-213-21	RES, ADJ, CARBON 2.2K			
RV404	1-225-213-21	RES, ADJ, CARBON 2.2K			
RV802	1-225-648-12	RES, VAR, CARBON 5KX2 (LOW BOOST (40Hz) (FRONT))			
RV803	1-225-648-12	RES, VAR, CARBON 5KX2 (LEVEL (FRONT))			
RV805	1-225-648-12	RES, VAR, CARBON 5KX2 (LOW BOOST (40Hz) (REAR))			
RV806	1-225-648-12	RES, VAR, CARBON 5KX2 (LEVEL (REAR))			
< TRANSFORMER >					
T801	1-435-858-11	TRANSFORMER, DC-DC CONVERTER			
< THERMISTOR (NEGATIVE) >					
THN801	1-804-301-11	THERMISTOR, CHIP (NEGATIVE)			
THN804	1-804-301-11	THERMISTOR, CHIP (NEGATIVE)			
THN805	1-804-301-11	THERMISTOR, CHIP (NEGATIVE)			
THN806	1-804-301-11	THERMISTOR, CHIP (NEGATIVE)			
THN807	1-804-301-11	THERMISTOR, CHIP (NEGATIVE)			

REVISION HISTORY

Clicking the version allows you to jump to the revised page.

Also, clicking the version at the upper on the revised page allows you to jump to the next revised page.