

XR-7070/7071/7072

SERVICE MANUAL

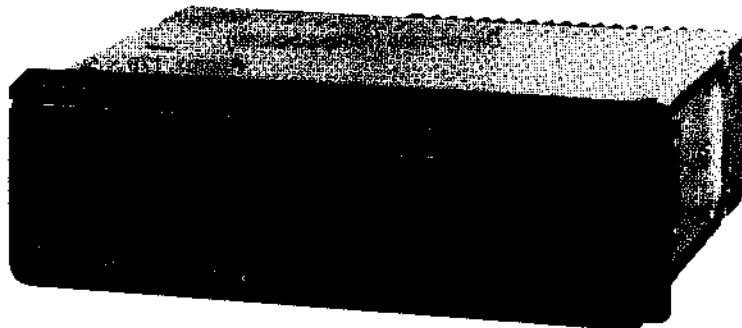


Photo: XR-7070

US Model
Canadian Model
E Model
 XR-7070
AEP Model
 XR-7070/7071
Germany Model
 XR-7072

NOTE : XR-7070 (US model) is revised.

| | |
|------------------------------------|-------------|
| Model Name Using Similar Mechanism | NEW |
| Tape Transport Mechanism Type | MG-38AKV-34 |

SPECIFICATIONS

AUDIO POWER SPECIFICATIONS (7070 (US/Canadian))

POWER OUTPUT AND TOTAL HARMONIC DISCRPTION
 10 watts per channel minimum continuous average power into 4 ohms, both channels driven, from 30 – 20,000 Hz with no more than 1% total harmonic distortion.

Power amplifier section

Outputs Speaker outputs (sure seal connectors)
Speaker impedance 3.2 – 8 ohms
Maximum power output 20 W × 4 (at 4 ohms)*
 *Measured at 14.4 V

Cassette player section

Tape track 4-track 2-channel stereo
Frequency response 30 – 18,000 Hz
Signal-to-noise ratio


| Cassette type | Dolby B | Dolby off |
|---------------|---------|-----------|
| TYPE II, IV | 66 dB | 58 dB |
| TYPE I | 63 dB | 55 dB |

Wow and flutter 0.13% (WRMS)

Tuner section FM

Tuning range XR-7070 (US/Canadian):
 87.9 – 107.9 MHz
 XR-7070 (AEP/E)/7071/7072
 87.5 – 108.0 MHz
Antenna terminal External antenna connector
Intermediate-frequency 10.7 MHz
Usable sensitivity 12 dBf (75 ohms)
Selectivity 75 dB at 400 kHz
Signal-to-noise ratio 65 dB (stereo), 70 dB (mono)
Harmonic distortion at 1 kHz 0.5% (stereo), 0.3% (mono)
Separation 35 dB at 1 kHz
Frequency response 30 – 15,000 Hz
Capture ratio 2 dB

– Continued on next page –

Dolby noise reduction manufactured under license from
 Dolby Laboratories Licensing Corporation.
 "DOLBY" and the double-D symbol  are trademarks of
 Dolby Laboratories Licensing Corporation.

FM/AM CASSETTE CAR STEREO
SONY®



AM (MW/LW)

Tuning range

XR-7070 (US/Canadian):
530 – 1,710 kHz
XR-7070 (AEP/E)/7072
European and other countries
531 – 1,602 kHz
(at 9 kHz step)
North and South American
countries
530 – 1,620 kHz
(at 10 kHz step)
AM tuning interval 9 kHz/
10 kHz switchable

XR-7071:

MW 531 – 1,602 kHz
LW 153 – 281 kHz

Antenna terminal
Intermediate frequency
Sensitivity

external antenna connector

450 kHz

XR-7070/7072:

35 μ V

XR-7071:

MW 35 μ VLW 70 μ V**General**

Output lead

Power antenna relay control lead

Power amplifier control lead

Tone controls

Bass \pm 10 dB at 100 HzTreble \pm 10 dB at 10 kHz

Loudness

+6 dB at 100 Hz

+6 dB at 10 kHz

Power requirements

12 V DC car battery

(negative ground)

Dimensions (without bracket)

Approx. 178 \times 50 \times 167 mm

(w/h/d)

(7 $\frac{1}{16}$ \times 2 \times 6 $\frac{5}{16}$ inches)not incl. projecting parts and
controls

Mounting dimensions

Approx. 182 \times 53 \times 145 mm

(w/h/d)

(7 $\frac{1}{16}$ \times 2 $\frac{1}{16}$ \times 5 $\frac{3}{4}$ inches)not incl. projecting parts and
controls

Weight

Approx. 2 kg (4 lb. 7 oz.)

Accessories supplied

Mounting hardware (1 set)

Design and specifications subject to change without notice.

TABLE OF CONTENTS

| <u>Section</u> | <u>Title</u> | <u>Page</u> | <u>Section</u> | <u>Title</u> | <u>Page</u> |
|--|--------------|-------------|---|-----------------------|-------------|
| Specifications | | 1 | 4-2. | IC Block Diagrams | 23 |
| 1. GENERAL | | | 4-3. | Printed Wiring Boards | |
| Installation/Installation/Montage | | 3 | (Type A: XR-7070 (US) Main board part number: 1-634-042-11) | | 25 |
| Connections/Connexions/Aansluitingen | | 5 | 4-4. | Schematic Diagrams | |
| Location and Function of Controls | | 7 | (Type A: XR-7070 (US) Main board part number: 1-634-042-11) | | 29 |
| Tape Playback | | 9 | 4-5. | Printed Wiring Boards | |
| Automatic Tuning | | 10 | (Type B: XR-7070 (Canadian/AEP/E)/7071 /7072 and XR-7070 (US) Main board part number: 1-634-042-13) | | 35 |
| Manual Tuning | | 10 | 4-6. | Schematic Diagram | |
| Memory Preset Tuning | | 11 | (Type B: XR-7070 (Canadian/AEP/E)/7071 /7072 and XR-7070 (US) Main board part number: 1-634-042-13) | | 39 |
| Disc Playing | | 12 | 5. EXPLODED VIEWS | | 44 |
| Maintenance | | 12 | 6. ELECTRICAL PARTS LIST | | 50 |
| 2. DISASSEMBLY | | 13 | Mounting Hardware | | 56 |
| 3. ADJUSTMENTS | | | | | |
| 3-1. Mechanical Adjustments | | 15 | | | |
| 3-2. Electrical Adjustments | | | | | |
| Deck Section | | 15 | | | |
| Tuner Section | | 17 | | | |
| 4. DIAGRAMS | | | | | |
| 4-1. IC301 μ PD75116GF-625-3BE (Micro Computer) | | 20 | | | |

Installation/Montage

Precautions

- Choose the mounting location carefully, so that the unit will not interfere with the normal driving functions of the driver.
- Avoid installing the unit where it should be subject to high temperatures, such as from direct sunlight or from hot air from the heater, or where it would be subject to dust, dirt or excessive vibration.
- Use only the supplied mounting hardware for a safe and secure installation.

Note on the carrying handle

The unit can be installed with or without the carrying handle. When you want to take the unit with you when you leave your car, install the unit with the carrying handle (see instruction 3 A). If not, install it without the carrying handle.

Précautions

- Choisir soigneusement l'emplacement de montage pour que l'appareil n'interfère pas avec les fonctions normales de conduite du véhicule.
- Éviter d'installer l'appareil là où il est susceptible de subir une haute température telle que celle de la lumière directe du soleil ou provenant d'un appareil de chauffage où il où il serait exposé à la poussière ou à sa saléité ou à une vibration excessive.
- Utiliser uniquement le matériel de montage fourni pour effectuer une installation sûre.

Remarque sur la poignée de transport
L'appareil peut être installé avec ou sans la poignée de transport. Si vous voulez prendre l'appareil avec vous lorsque vous laissez votre voiture, il suffit d'installer l'appareil avec la poignée de transport en place (voir instruction 3 A). Sinon, l'installer sans la poignée de transport.


Opgelet

- Installeer het apparaat niet op een plaats waar het u bij besturing van de auto zou kunnen hinderen.
- Installeer het apparaat niet op plaatsen waar het blootgesteld wordt aan hoge temperaturen zoals van direct zonlicht of de warme luchtstroom van de autoverwarming, aan sterke trillingen, of waar het in contact komt met vees tot of vuil.
- Gebruik voor het veilig en stevig monteren van het apparaat uitsluitend de bijgeleverde montage-onderdelen.

Opmerking betreffende de draagbeugel
Het apparaat kan met of zonder draagbeugel geïnstalleerd worden. Wanneer u bij het verlaten van de auto het apparaat met u mee wilt nemen, installeer dan het apparaat met draagbeugel (Zie aanwijzing 3 A.)
Mocht dit niet het geval zijn, installeer het apparaat dan zonder draagbeugel.

Supplied Mounting Hardware Matériel de montage fourni Bijgeleverde montage-onderdelen

The numbers in the list are keyed to those in the instructions.
Les numéros dans la liste correspondent à ceux se trouvant dans les instructions.
De nummers in de afbeelding verwijzen naar die in de montage-aanwijzingen.

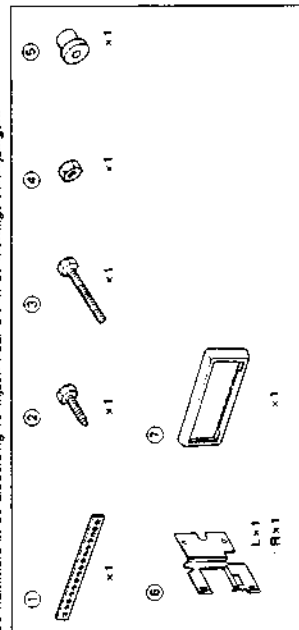


SECTION 1 GENERAL


This section is extracted from instruction manual.

To Remove the Unit Retrait de l'appareil Verwijderen van het apparaat

When installed with the carrying handle
Lorsque l'appareil est installé avec la poignée de transport
Wanneer het apparaat geïnstalleerd is met de draagbeugel

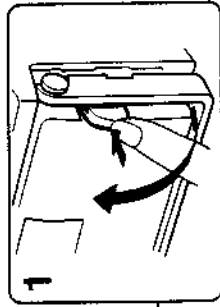


To prevent the unit from being stolen
When you leave your car, remove the unit from the bracket and take it away with you.
Prévention contre le vol
Lorsque l'on quitte la voiture, enlever l'appareil du support et l'amener avec soi.

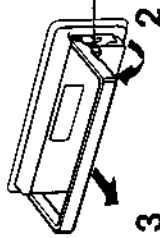


When installed without the carrying handle
Lorsque l'appareil est installé sans la poignée de transport.
Wanneer het apparaat geïnstalleerd is zonder de draagbeugel

Voorkomen dat het apparaat gestolen wordt
Verwijder bij het verlaten van de auto het apparaat uit het inbouwframe en neem het met u mee.

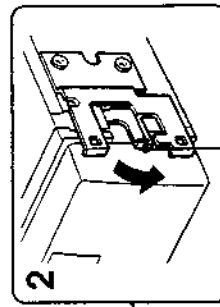


Press down this part lightly not to break it.
Appuyer légèrement sur la partie grise afin de ne pas briser cette partie.
Druk het zilverkleurige gedeelte enigzins naar beneden. Pas op dat niets afbreekt.

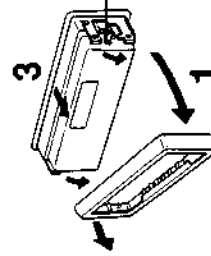


1


Remove the unit from the bracket.
 Déposer l'appareil du support.
 Verwijder het apparaat uit het inbouwframe.

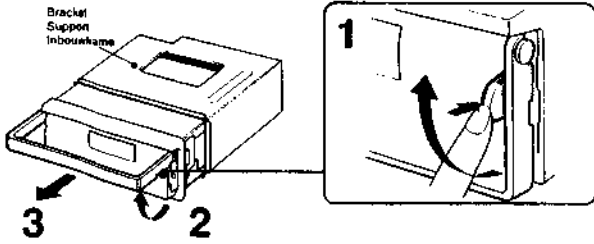**2**


Install the bracket in the dashboard.
 Installer le support dans le tableau de bord.
 Monteer het inbouwframe in het dashboard.

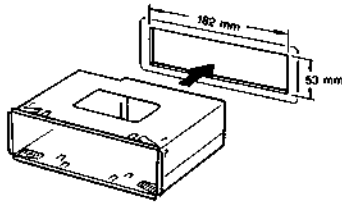


Bend these claws, if necessary.
 Plier ces griffes si nécessaire.
 Buig indien nodig deze klpjes om

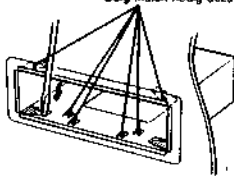


Example 1
 Exemple 1
 Voorbeeld 1

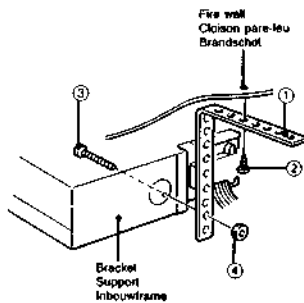

Example 2
 Exemple 2
 Voorbeeld 2

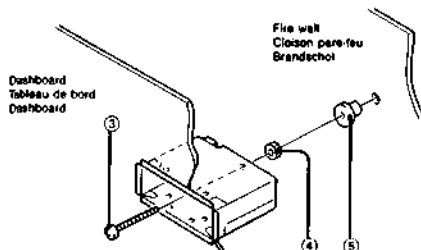**3A**




When installing the unit with the carrying handle
 Installation de l'appareil avec la poignée de transport
 Wanneer het apparaat met de draagbeugel geïnstalleerd wordt

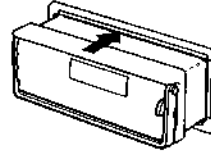


Push in the unit until it is locked firmly.
 Pousser l'appareil jusqu'à ce qu'il soit bien bloqué.
 Druk het apparaat aan tot het sleevg blijft zitten.

3B



When installing the unit without the carrying handle
 Installation de l'appareil sans la poignée de transport
 Wanneer het apparaat zonder de draagbeugel geïnstalleerd wordt

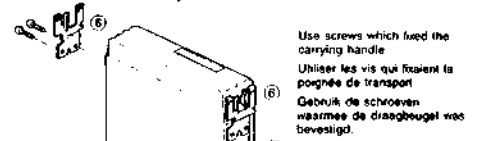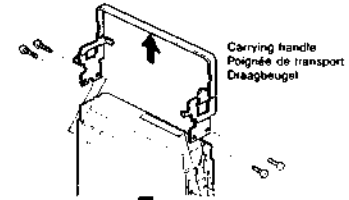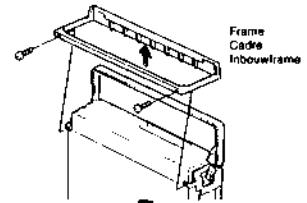

Use screws which fixed the carrying handle.
 Utiliser les vis qui fixent la poignée de transport.
 Gebruik de schroeven waarmee de draagbeugel was bevestigd.

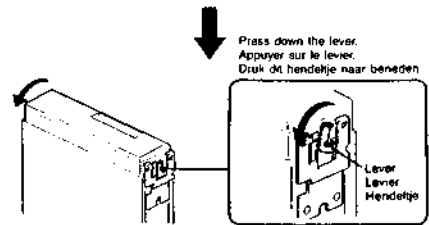

Press down the lever.
 Appuyer sur le levier.
 Druk dit hendeltje naar beneden.

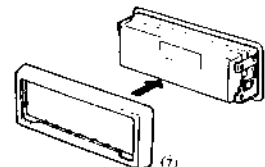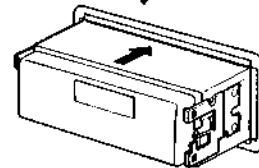

Connections/Connexions/Aansluitingen

Caution

- This unit is designed for negative ground 12 V DC operation only.
- Before making connections, disconnect the ground terminal of the car battery to avoid short circuits.
- Connect the red power input lead only after all other leads are connected. And be sure to connect it to the positive 12 V power terminal. It will be energized when the ignition key is set to the accessory position.
- Run all ground wires to a common ground point.


Attention

- Cet appareil est conçu uniquement pour un fonctionnement sur courant continu de 12 volts avec mise à la masse négative.
- Avant d'effectuer les connexions, déconnecter la borne de masse de la batterie de voiture pour éviter des courts-circuits.
- Connecter le fil d'entrée d'alimentation rouge uniquement une fois tous les autres fils connectés. S'assurer de le connecter à la borne positive 12 volts qui est étagée lorsque la clé de contact est mise sur la position accessoire.
- Amener tous les fils de masse sur un point commun.


Waarschuwing

- Dit apparaat is ontworpen voor gebruik op gelijkstroom van een 12 Volts auto-accu, negatief geaard.
- Alvorens te beginnen met het maken van aansluitingen, dient de aardklem van de auto-accu te worden losgemaakt. Dit om kortsluiting te voorkomen.
- Sluit de rode stroomdraad pas aan nadat alle aansluitingen zijn gemaakt. Zorg ervoor dat deze stroomdraad op de positieve 12 V accu-aansluiting wordt aangesloten. De draad komt dan onder spanning te staan, wanneer de contact sleutel wordt omgedraaid.
- Sluit alle aarddraden op een gemeenschappelijk aardpunt aan.

System Connection/Connexion du système/Systeemaansluitingen

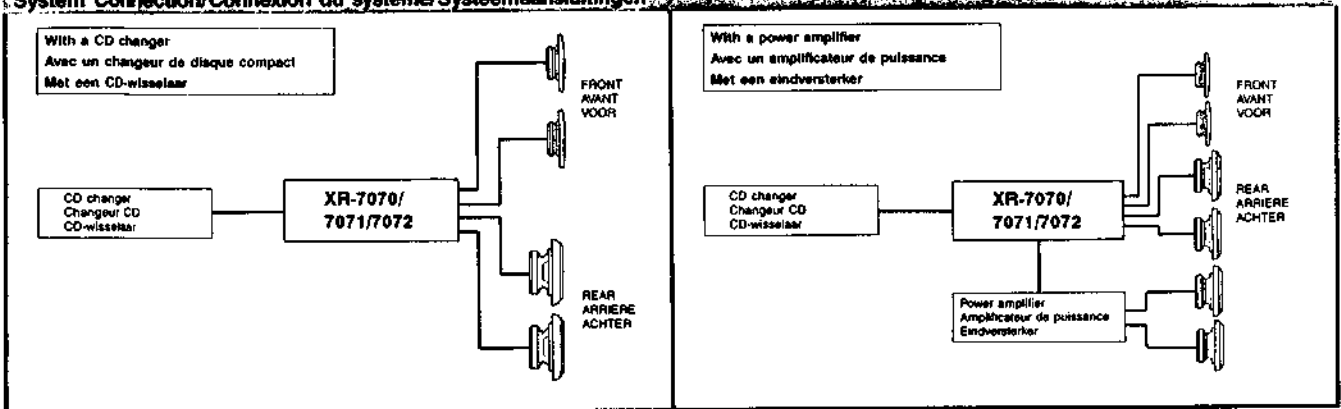

Speaker Connection/Connexion des haut-parleurs/Aansluiten van de luidsprekers

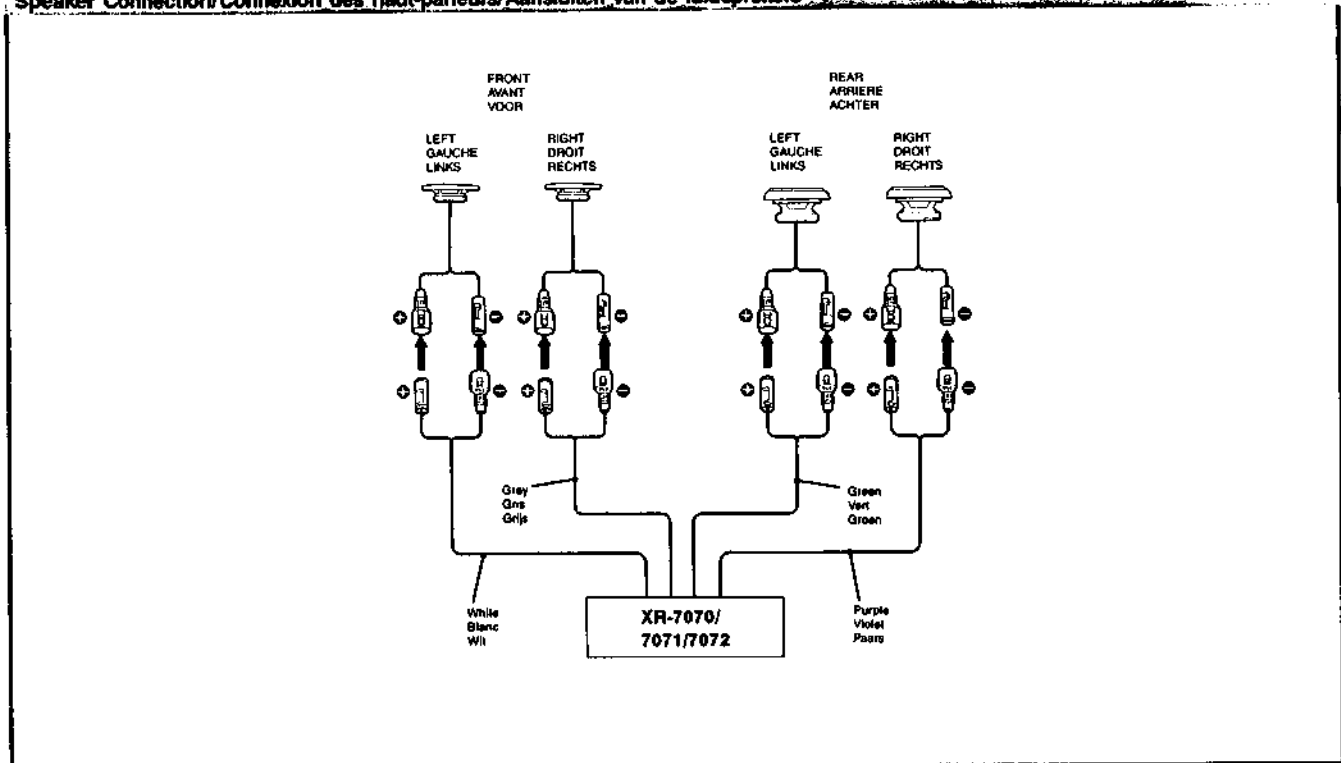

Notes on speaker connection

- Use speakers with an impedance of 3.2 to 8 ohms, and with adequate power handling capacities. Otherwise, the speakers may be damaged.
- Do not connect the terminals of the speaker system to the car chassis, and do not connect the terminals of the right speaker with those of the left speaker.
- Do not attempt to connect the speakers in parallel.


Remarques sur les connexions des haut-parleurs

- Utiliser des haut-parleurs d'une impédance de 3.2 à 8 ohms, et d'une capacité de puissance suffisante; faute de quoi, les haut-parleurs peuvent être endommagés.
- Ne pas raccorder les bornes des haut-parleurs au châssis du véhicule et ne pas raccorder les bornes du haut-parleur droit à celles du haut-parleur gauche.
- Ne pas essayer de raccorder les haut-parleurs en parallèle.

Opmerkingen betreffende het aansluiten van de luidsprekers

- Gebruik luidsprekers met een impedantie van 3.2 tot 8 ohm en let op dat de het vermogen van de versterker kunnen verwerken. Als dit wordt verzuimd, kunnen de luidsprekers ernstig beschadigd raken.
- Verbind in geen geval de aansluitingen van de luidsprekers met het chassis van de auto en sluit de aansluitingen van de rechter en linker luidspreker niet op elkaar aan.
- Probeer niet de luidsprekers parallel aan te sluiten.

Connection Diagram/Schéma de connexion/Aansluitschema

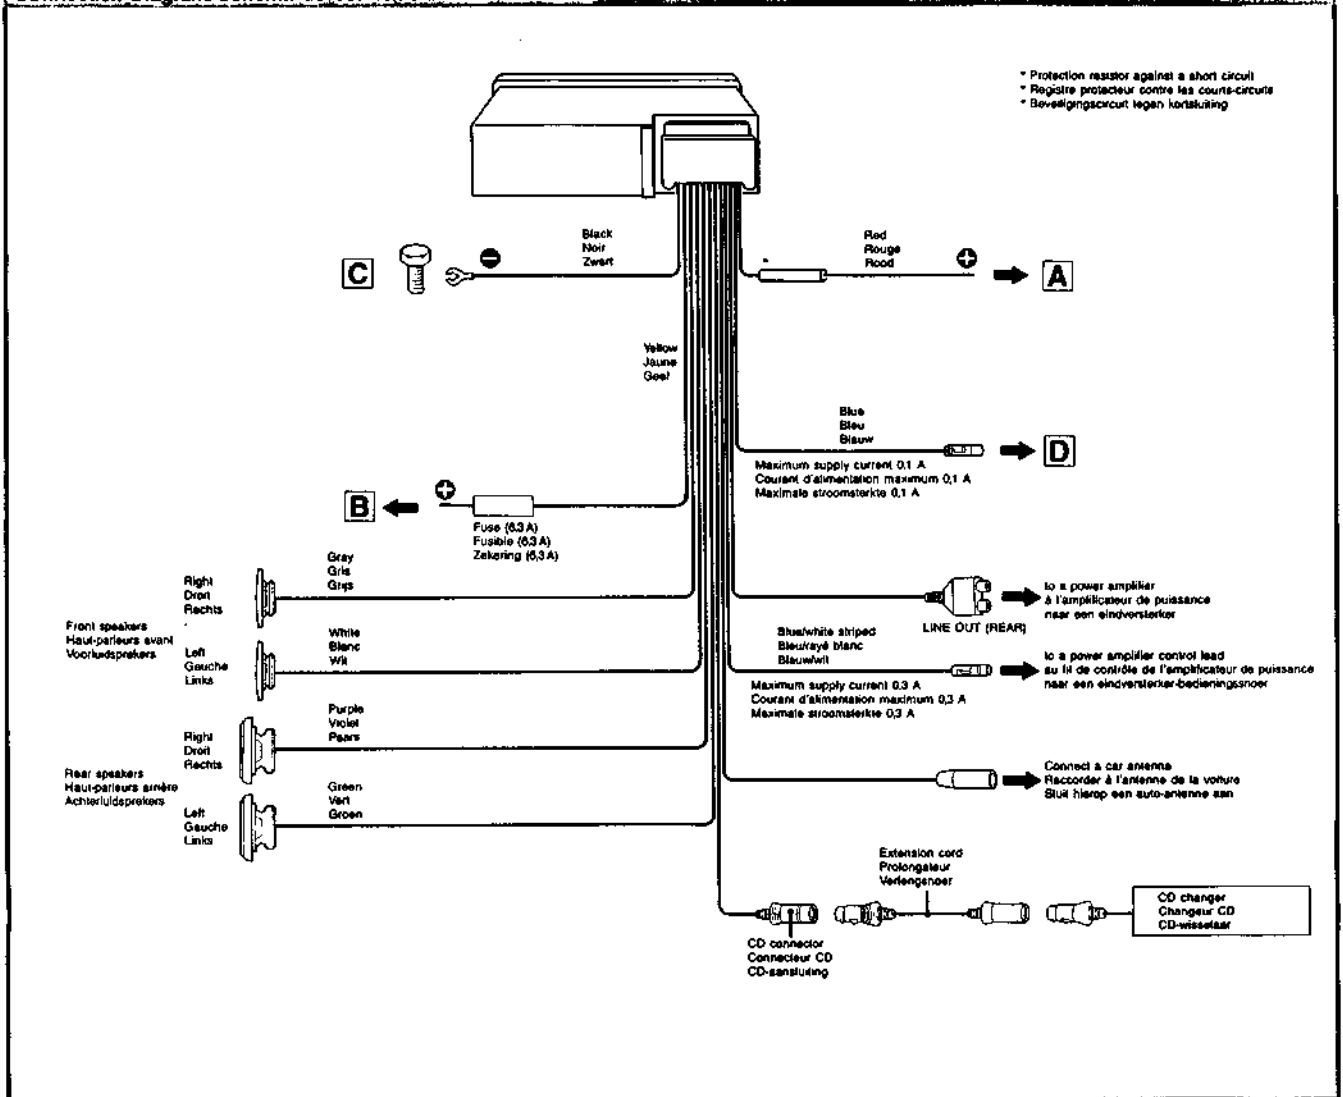

* Protection resistor against a short circuit
 * Régistère protecteur contre les courts-circuits
 * Beveiligingscircuit tegen kortsluiting

- A** to the +12 V power terminal which is energized in the accessory position of the ignition key
 - B** to the +12 V power terminal which is energized at all times
 - C** to a metal part of the car
 - D** to a power antenna relay control box
- Notes on the control leads**
- * The power antenna control lead (blue) supplies +12 V DC when you turn on the tuner or the ATA* function is activated. A power antenna without relay box cannot be used with this unit. For details about the power antenna, refer to the power antenna instruction manual.
 - * When the power antenna control lead or the power amplifier control lead is in contact with a metal part of the car, the unit cannot be turned on because the protection circuit is activated.
- * Automatic Tuner Activation

After completing the connections and mounting the unit into its bracket, press the reset button of this unit. The reset button is effective only when the unit is mounted in the bracket.

- A** A la borne d'alimentation positive 12 volts qui est énérgétisée lorsque la clé de contact est sur la position accessoire.
 - B** A la borne d'alimentation positive 12 volts qui est énérgétisée en permanence
 - C** A un point métallique de la voiture
 - D** Au boîtier de contrôle de relais d'antenne motorisée
- Remarques sur les fils de contrôle**
- * Le fil de contrôle de l'antenne motorisée (bleu) fournit une alimentation de courant continu positif de 12 volts lorsque le tuner est mis sous tension ou la fonction ATA* est activée. Une antenne motorisée sans boîtier de relais ne peut être utilisée avec cet appareil. Pour plus de détails sur l'antenne motorisée, se reporter à son mode d'emploi.
 - * Lorsque le fil de contrôle de l'antenne motorisée ou le fil de contrôle de l'amplificateur de puissance est en contact avec une partie métallique de la voiture, l'appareil ne peut être mis sous tension puisque le circuit de protection est alors activé.

* Automatic Tuner Activation (enclenchement automatique du tuner)

Après avoir terminé les connexions et le montage de l'appareil dans le support, appuyer sur le bouton de réinitialisation. Cette touche est opérationnelle uniquement lorsque l'appareil est installé dans le support.

- A** naar de (+) 12 V accu-aansluiting, die onder spanning komt te staan bij het omdraaien van de contactkleutel
- B** naar de (+) 12 V accu-aansluiting, die altijd onder spanning staat
- C** Aardingspunt (metalen deel van de auto)
- D** naar motorantenne-relaisbox


Opmerkingen betreffende de motorantenne-aansluiting en het eindversterkerapparaat

- * De motorantenne-aansluiting (blauw) levert (+) 12 V gelijkstroom, wanneer u de tuner of de ATA* functie inschakelt. Het is niet mogelijk met dit apparaat een motorantenne zonder relaisbuis te gebruiken. Raadpleeg de gebruiksaanwijzing van de motorantenne voor nadere bijzonderheden omtrent het gebruik hiervan.
- * Het apparaat kan niet ingeschakeld worden indien de motorantenne-aansluiting of het eindversterkerapparaat in aanraking zijn met enig metaal deel van de auto, omdat in dit geval het beveiligingscircuit tegen kortsluiting wordt geactiveerd.

* ATA staat voor Automatic Tuner Activation (automatisch inschakelen van de tuner)


Druk op de terugtoets (RESET) van dit apparaat nadat alle aansluitingen zijn gemaakt en het apparaat in de inbouwstele is gemonteerd. Deze toets kan alleen bediend worden, wanneer het apparaat in de inbouwstele is gemonteerd.

Location and Function of Controls

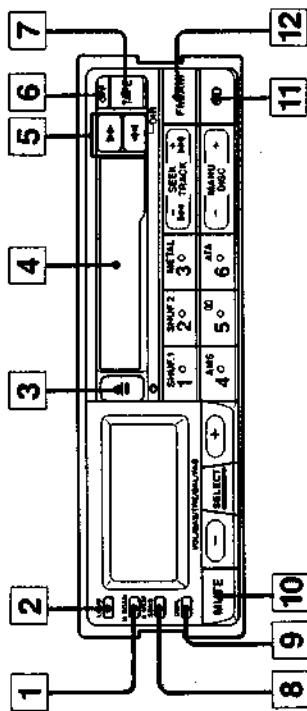


Refer to the page in ● for details.

- 1 M.SCAN (memory scan)/A.MEM (automatic memory) button ●
- 2 LOUD (loudness) button
Press to reinforce bass and treble especially when listening at low volume. To disengage the button, press it again.
- 3 (eject) button
- 4 Cassette insertion door
- 5 ←/→ (fast-winding) buttons/DIR (tape transport direction change) buttons ●
- 6 OFF button
- 7 TAPE (tape playback) button ●
- 8 SENS (sensitivity) button ●
- 9 DSPL (display) button ●
- 10 MUTE button (XR-7070/7071)
Press to momentarily mute the sound. Press again to restore the same level as before. This button will be canceled also when you press the (MUTE) button, or when you press the CD, FM/AM or TAPE button to change the operation mode.
- 11 CD button (XR-7072)
- 12 FM/AM (radio on/band select) button ●
FM/MW/LW (radio on/band select) button (XR-7072)

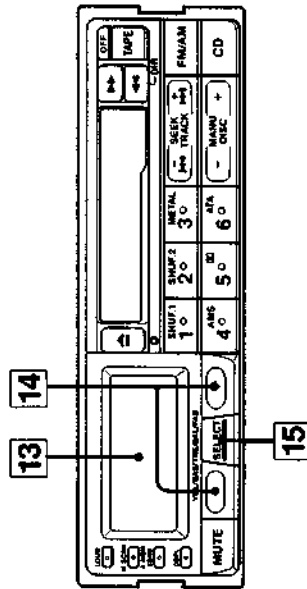

- 13 Display window
- 14 (volume/bass/treble/balance/fader control) button
(volume/bass/treble/balance/fader control) button normally function as the volume control. Adjust the level within three seconds after selecting the desired control mode. Otherwise, the mode goes back to the volume control mode.
- 15 SELECT (control mode select) button
Press to select the desired mode, BAS (bass), TRE (treble), BAL (balance), FAD (fader), or VOL (volume).

| Display window | Control mode | Press | Function |
|----------------|-----------------|---------|--------------------------------------|
| BAS | Bass control | Press - | For less bass |
| TRE | Treble control | Press - | For less treble |
| BAL | Balance control | Press - | To decrease the right-speaker volume |
| FAD | Fader control | Press - | To decrease the rear-speaker volume |
| VOL | Volume control | Press - | For less volume |
| | | Press + | For more bass |
| | | Press + | For more treble |
| | | Press + | To decrease the left-speaker volume |
| | | Press + | To decrease the front-speaker volume |
| | | Press + | For more volume |

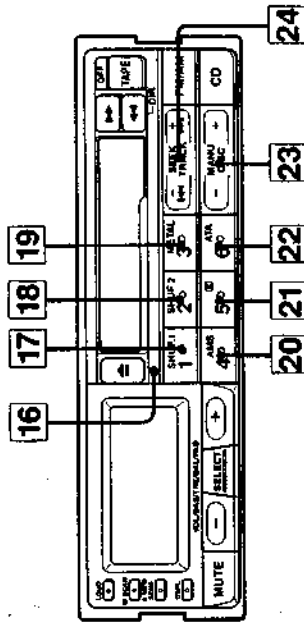

| | | |
|---|--|----------------------------------|
| 16 Reset button | | |
| Press this button when you use this unit for the first time and when you have changed the car battery, or when other buttons do not function. The reset button is effective only when the unit is mounted in the bracket. | | |
| | During tape playback | During disc play |
| 17 | — | SHUF. 1 (shuffle 1) button ● |
| 18 | — | SHUF. 2 (shuffle 2) button ● |
| 19 METAL (metal/CrO ₂) button ● | — | — |
| 20 AMS (Automatic music sensor) button ● | — | — |
| 21 DOLBY NR (Dolby NR) button ● | — | — |
| 22 ATA (Automatic tuner activation) button ● ● | — | — |
| 23 | DISC (disc change) ● / MANU (manual search) button ● | MANU (manual tuning) button ● |
| 24 | TRACK (disc track change) button ● | SEEK (automatic tuning) button ● |

To change the color of illumination
Press [L] while pressing SELECT.

To mute the beep sound
Press [L] while pressing SELECT.
To obtain the beep sound again, press buttons again.


Note on AM Tuning Interval

The interval is factory-set to 9 kHz. If, however, AM frequency allocation might be different from that in the area this car stereo is used, change the AM tuning interval.

| | |
|-------------|---|
| 9 kHz area | European, Asian, African and Oceanian Countries |
| 10 kHz area | North, Central and South America |

To change the AM tuning interval


- 1 Remove the main unit from the bracket.
- 2 Set the AM tuning interval selector at the bottom of the unit to the proper position. Use a ball-point pen or a similar object.

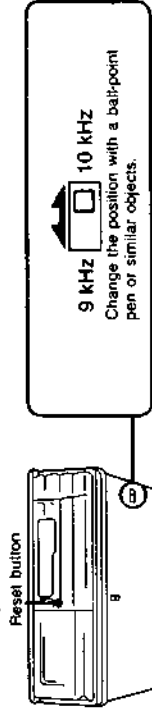

- 3 Install the main unit to the bracket.
- 4 Press the reset button after setting the ignition key to the accessory position.

Notes on the Power Select Switch

You can choose illumination mode by changing the power select switch located on the bottom.

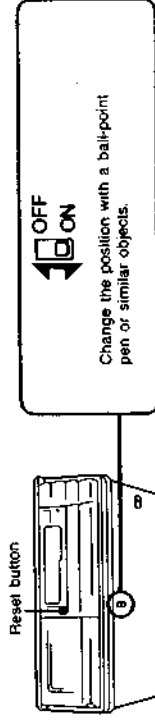

When you set the ignition key to the accessory position

| | | |
|---------------------|---|-----------------|
| Power select switch | ON | OFF |
| Illuminate where? | OFF, TAPE, FM/AM, CD, buttons and the cassette insertion door | No illumination |

- When you activate the unit, all parts of the panel illuminate, regardless of the position of the switch.
- If your car has no accessory position, we recommend you to set the switch to the OFF position.
- Be sure to press the reset button after changing the position of the switch.

Tape Playback



- 1** Insert a cassette to start playback.
- Press **TAPE** when a cassette is already inserted.
- 2** Press to adjust the volume.

Side of the cassette being played back
 This unit plays back both sides of the cassette repeatedly. The indicator in the display window shows which side of the cassette is being played back.

| Indicator | Side |
|-----------|--------------------------|
| ▶ | The side facing upward |
| ◀ | The side facing downward |

8

9

Tape Playback

Listening to the CrO₂ (TYPE II) or Metal (TYPE IV) Tapes

Press **M** METAL 3°. MTL appears in the display window. To listen to the normal (TYPE I) tapes, press it again.

Listening to Dolby NR-processed Tapes

Press **5**°. Press to activate the B-type Dolby NR system. Select the same Dolby NR system used for the recorded cassette. The Dolby NR (Noise Reduction) system reduces tape hiss noise in low-level, high-frequency signals.

To Locate the Beginning of a Selection (Automatic Music Sensor)

- 1 Press **AMS**.
- 2 Press or **▶**, referring to the following table.

| Indicator | Cassette side being played | Desired selection | |
|-----------|----------------------------|-------------------|-------------------|
| | | Next selection | Current selection |
| ▶ | Side facing upwards | Depress ▶ | Depress ◀ |
| ◀ | Side facing downwards | Depress ◀ | Depress ▶ |

The desired selection may not be located if ...
 — there is a noise in the space between selections.
 — the space is less than 4 seconds long.
 — the or button is pressed immediately before or after the desired selection, or within the blank space.

Playback may begin in the middle of the selection when AMS is activated, as the followings are treated as blank:
 — a long pause in the selection
 — a passage of low frequencies or very low volume
 — gradual increase or decrease of volume, as in some classical music.

Other Operations

To listen to the other side of the cassette (Press both simultaneously.)

To wind the tape rapidly

| Direction Indicator | To advance | To rewind |
|---------------------|-------------------|-------------------|
| ▶ | Depress ▶▶ | Depress ◀◀ |
| ◀ | Depress ◀◀ | Depress ▶▶ |

To resume playback, press or lightly, which is not depressed.

To take out the cassette

To stop the tape and listen to the radio

To play back the tape again

To stop the tape and turn off the unit

To stop the tape and listen to a disc

To Turn on the Radio Automatically While Fast-winding the Tape (ATA function)

Press **6**° ATA. The tuner turns on automatically when you press the or during tape playback. When you resume the tape playback, the tuner turns off automatically.

To display the frequency indication while the ATA is operating, Press **DSPL**. The display window shows the frequency which you tuned in last time. In this case, all the tuner operation buttons function in the same way as when you turn on the tuner (except for the **FM/AM** button).






Note: While locating the beginning of a selection by using the AMS function, the ATA function does not operate.


10

11

Automatic Tuning


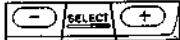


- 1**  Press to select the desired band, FM I, FM II, FM III or AM.
The tuner turns on at the same time.
- 2**  Press to start scanning.
 for lower frequencies
 for higher frequencies
 The scanning automatically stops when a station is tuned in.
 Repeat this step until the desired station is tuned in.
- 3**  Press to adjust the volume.


FM has three bands (FM I, FM II, FM III). Three bands cover the same frequency range. To change the band, press the  button.


Other Operations

To stop the radio and start tape playback

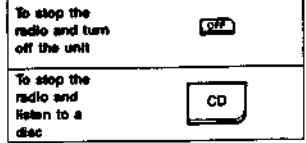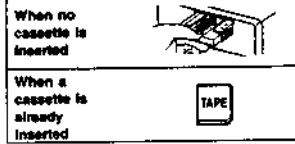


When there are too many stations and the scanning stops too frequently during automatic tuning

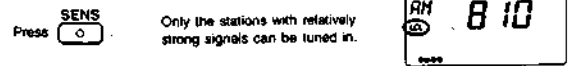

Press  Only the stations with relatively strong signals can be tuned in.

When the FM stereo program is too weak and noisy

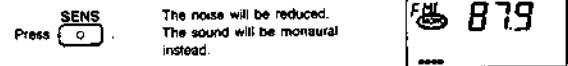


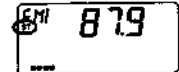
Press  The noise will be reduced. The sound will be monaural instead.

Table below shows the modes of the SENS button

| Button press | Mode | Display |
|--------------|-----------------|---------|
| First press | Local seek mode | LCL |
| Second press | Monaural mode | MONO |
| Third press | Canceled | — |

When the FM stereo program of sufficient signal strength is tuned in


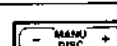





The program is automatically received in stereo.

12

Manual Tuning

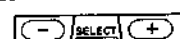

- 1**  Press to select the desired band, FM I, FM II, FM III or AM.
The tuner turns on at the same time.
- 2**  Press to tune in the desired station.
 For lower frequencies
 For higher frequencies
 To change the frequency rapidly, keep the button pressed.
- 3**  Press to adjust the volume.

Warning
While driving, keep your eyes on the road and use the automatic tuning or the memory preset tuning.


14



13

Memory Preset Tuning

You can memorize a total of 24 stations (6 stations for each band), one on each preset number.

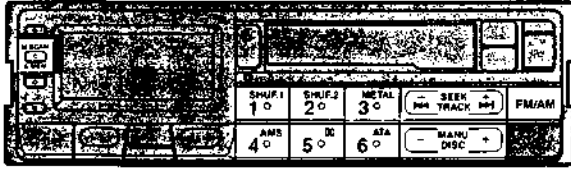Memorizing the Stations Automatically (Automatic Memory Function)






- 1**  Press to select the desired band, FM I, FM II, FM III or AM. The tuner turns on at the same time.
- 2**  Press for more than two seconds. The unit starts scanning the selected band and memorizes the tuned stations on the preset number button 1 through 6 automatically.

In what way are stations scanned and memorized?
The unit scans the selected band twice. The scanning starts from the displayed frequency. During the first cycle, the unit scans stations with considerably strong signals. During the next cycle, the unit scans all stations that can be received, including weak ones. And for memorizing, if any preset number is indicated in the display window, memorizing starts from the preset number. When you choose FMII and the preset number 3 is displayed in the window, for example, memorizing starts from the preset number 3 on FMII, and stops at the preset number 6 on FMII.

15

To Receive the Preset Station

- 1**  Press to select the desired band.
- 2**  —  Press lightly to receive the desired station.

17

Memory Preset Tuning





Surveying What is Being Broadcasted on the Preset Stations

M.SCAN
Press  lightly.
A.MEM

Each memorized station will be scanned for five seconds in order. (When the broadcast of the memorized station is too weak, it cannot be received.)

Memorizing Only the Desired Stations Manually

Example: To memorize on the preset number 1


- 1**  Press to select the desired band.
- 2**  or  Press to tune in the desired station.
- 3**  Press for more than two seconds. The number of the pressed preset number button will be displayed. MEM indicator appears to show that the station has been memorized. (MEM indicator will disappear in a few seconds.)

Repeat these steps for each preset button.

Important
Every preset number button has only one memory for a band. The previously memorized station will be erased when you enter a new station of the same band on the same preset number button.

16

Disc Playing (When the optional Sony CD changer is connected)

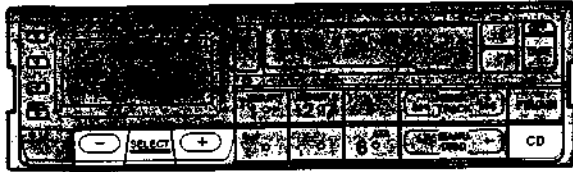

Before operating, insert a disc magazine with discs into the CD changer.

- 1 Press to start the disc play.
- 2 Press to adjust the volume.

Other operations

To listen to another disc in the disc magazine

If you press it for more than 0.5 second, it operates as the manual search.

To stop disc play and start tape playback

When no cassette is inserted

When a cassette is already inserted

To stop disc play and ...

To listen to the radio

To turn off the unit

To display the elapsed time during the disc play Press DSPL. The elapsed time of the selection is indicated in the display window. To cancel the elapsed time indication, press it again.

18

Disc Playing

Various Plays

- To play the selection on the disc in random order (Shuffle play 1)
- Press All selections on the disc being played will be played in random order. After playing all selections on the disc, the unit goes to the next disc.
- To play the selection on all discs in random order (Shuffle play 2)
- Press All selections on all discs in the disc magazine will be played in random order.
- To turn on the radio automatically while changing discs (ATA function)
- Press The radio is heard automatically while changing discs. Press DSPL to display the frequency indication while the ATA is operating. In this case, all the tuner operation buttons function in the same way as when you turn on the tuner (except for FM/AM button).

To resume normal playback Press each button again.

20

Locating the Beginning of a Desired Selection during Disc Playing

| | |
|---|---|
| To locate the beginning of the selection being played | Press |
| To locate a previous selection | Keep pressed. Release the button at the desired selection. |
| To locate the next selection | Press |
| To locate a selection ahead | Keep pressed. Release the button at the desired selection. |

When the first selection or the last selection of the disc is located, the play begins from the selection.

To search for a particular point in a selection (manual search)

| | |
|---------------------------|---|
| To go ahead at high speed | Keep pressed. Release the button at the desired point. |
| To go back at high speed | Keep pressed. Release the button at the desired point. |

The elapsed time of the selection is displayed during the manual search.

19

Maintenance


Fuse Replacement

If the fuse blows, check the power connection and replace the fuse. If the fuse blows again after replacement, there may be an internal malfunction. In this case, consult your nearest Sony dealer.

Warning
Use the specified ampere fuse. Use of a higher ampere fuse may cause serious damage.

Cleaning the Connector

To keep the best possible sound quality, clean the metallic part of the connector at the rear of the unit periodically using a commercially available head cleaning fluid or rubbing alcohol and a cotton swab.

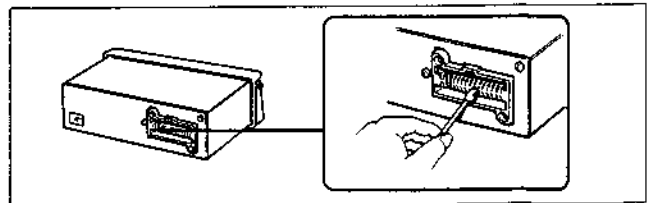

Cleaning the Head and the Tape Path


Prolonged use may contaminate the tape head and the tape path. Contamination causes sound drop-outs in playback. Clean the tape head and the tape path every two weeks to enjoy optimum hi-fi stereo sound. Use a commercially available cleaning cassette.

21


SECTION 2 DISASSEMBLY

Note: Follow the disassembly procedure in the numerical order given.


UPPER COVER

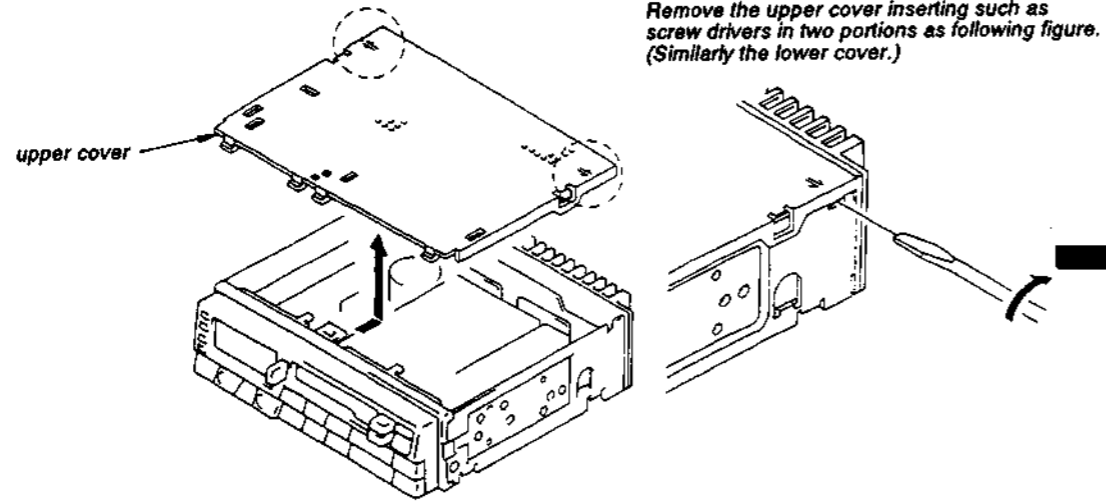


POWER BLOCK

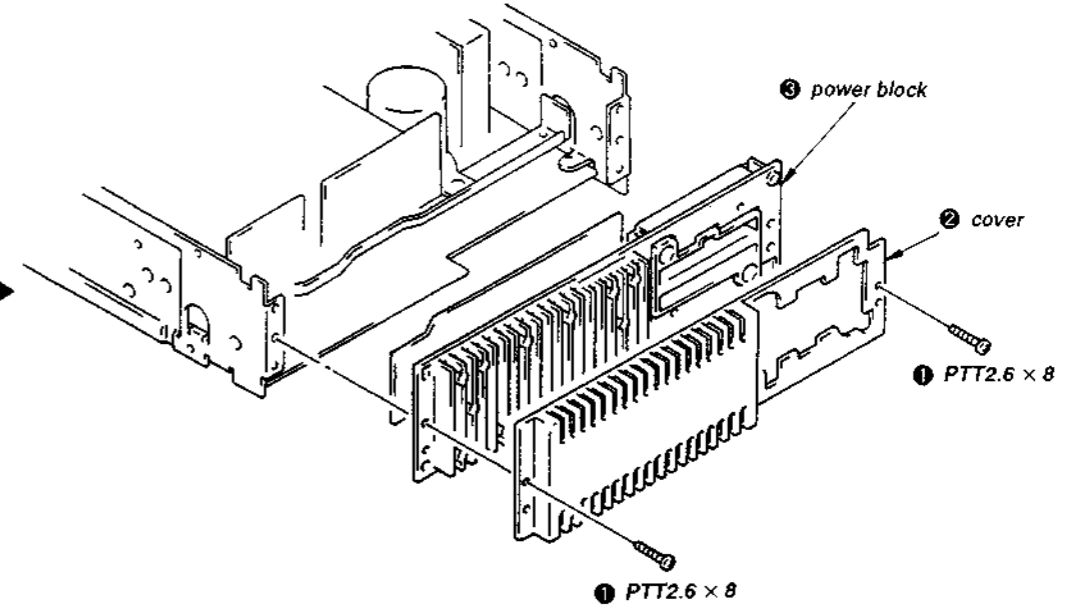


HANDLE

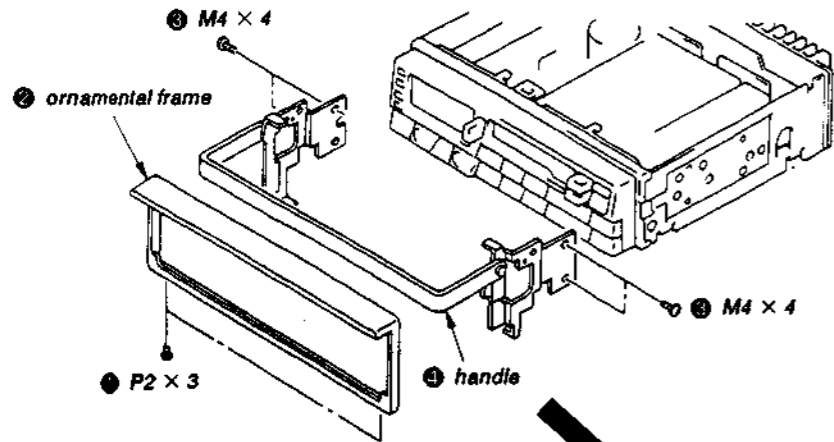

FRONT PANEL ASSEMBLY

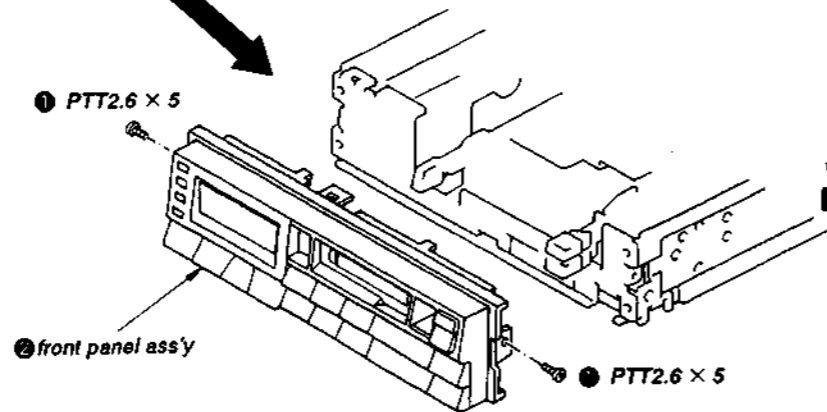

MD BLOCK

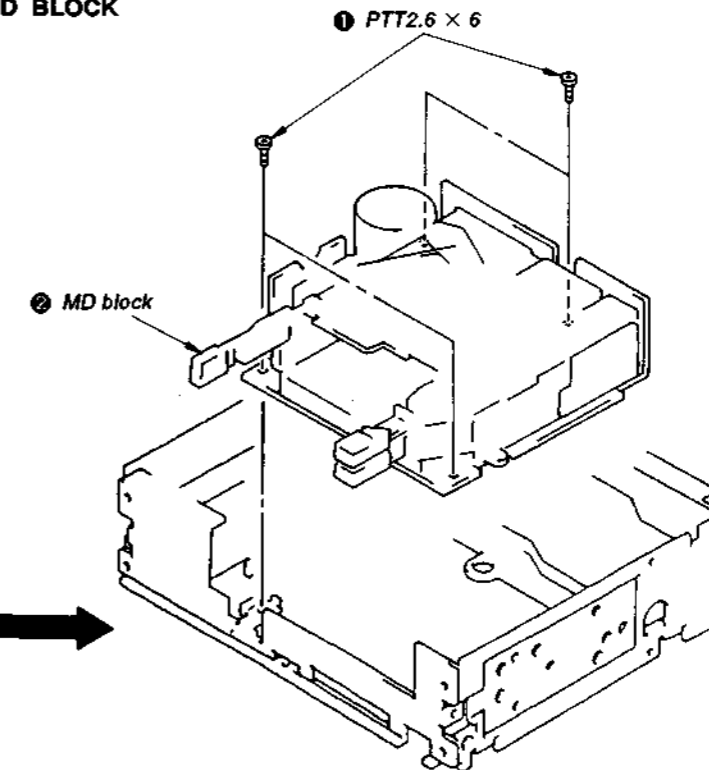

SECTION 3 ADJUSTMENTS

3-1. MECHANICAL ADJUSTMENT

PRECAUTION

- Wipe the following components with an absorbent cotton cloth moistened with alcohol before adjustment:


| | |
|---------|--------------|
| PB head | Pinch roller |
| Idler | Rubber belt |
| Capstan | |
- Demagnetize the PB head using a head demagnetizer.
- Be careful not to use a magnetized screwdriver.
- After adjustment is completed, lock the adjustment parts using screws.
- Unless otherwise specified, make adjustments at the specified voltage (14.4 V).

Torque Measurement

Measure the torque at a supply voltage of 14.4 V DC.

| | Torque meter | Meter reading |
|--------------|--------------|---|
| FWD | CQ-102C | 25 to 55 g-cm (0.35 to 0.77 oz-inch) |
| FF, REW | CQ-201B | 55 to 150 g-cm (0.77 to 2.1 oz-inch) |
| Back tension | CQ-102C | 1.5 to 4 g-cm or less (0.02 to 0.05 oz-inch or less) |

Adjustment Location:

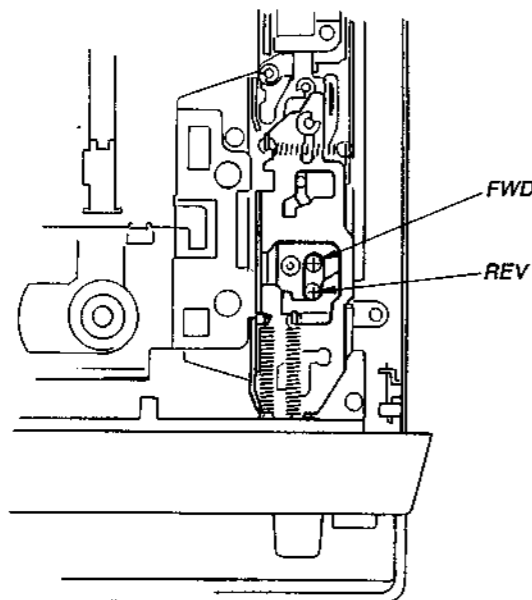


3-2. ELECTRICAL ADJUSTMENTS DECK SECTION

PB Head Vertical Adjustment


Procedure:

- Put the set into the FWD PB mode.

test tape
P-4-A100
(10 kHz, -10 dB)

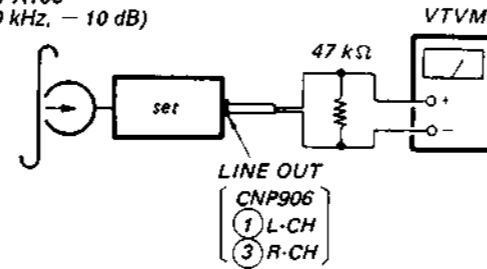


- Turn the screw and check the output peak value. Adjust the screw so that peak value in channels L and R coincides within 2 dBμ.

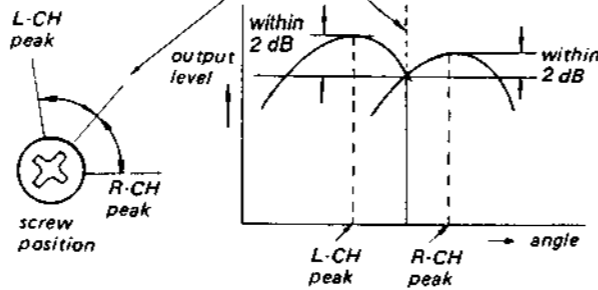


- Check the phase in the PB mode.

test tape
P-4-A100
(10 kHz, -10 dB)

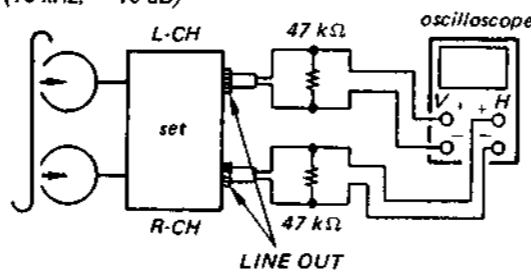

Lissajous's waveform on oscilloscope

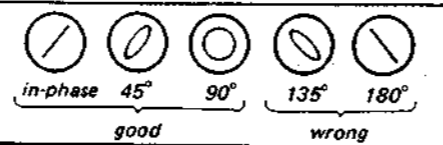


- Repeat the above adjustment for the REV PB mode.
- Check that output level difference between FWD PB mode and REV PB mode is within 4 dBμ.

Capstan Motor Tape Speed Adjustment

Procedure:

- Put the set into the FWD PB mode.

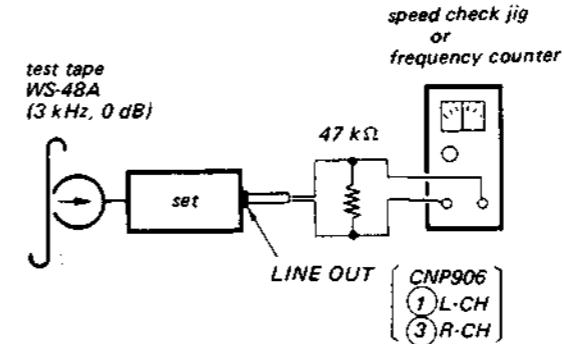


Specification: Constant speed

| Speed check jig | Frequency counter |
|-----------------|-------------------|
| -1.5 to +0.5% | 3,000 ± 1/8 Hz |

Adjust so that the frequency difference between the FWD and REV modes is within 1.5% (45 dB).

Adjustment Location: RV01

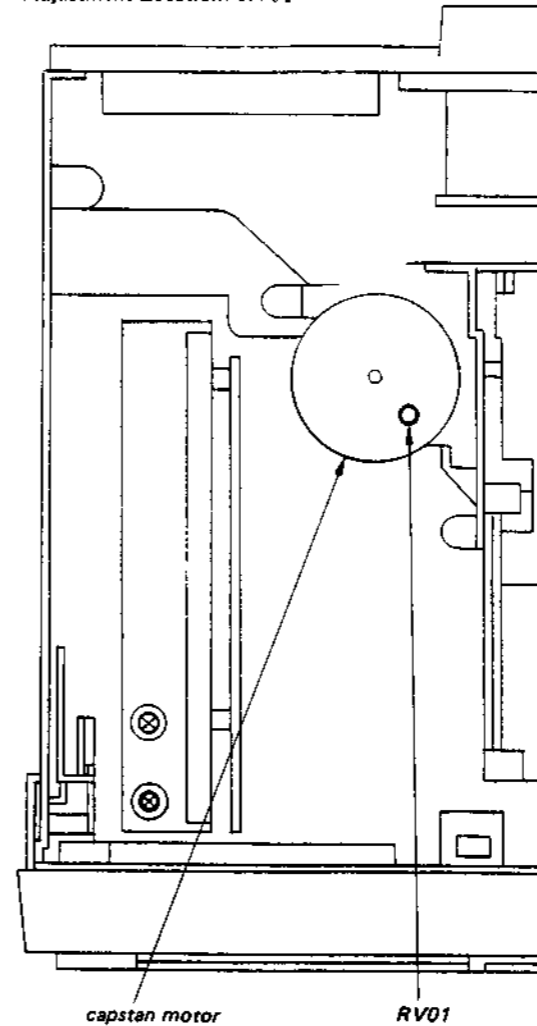


DOLBY NR Level Adjustment

Setting:

DOLBY NR switch: OFF
METAL switch: OFF

test tape
P-4-D400
(400 Hz, 0 dB)

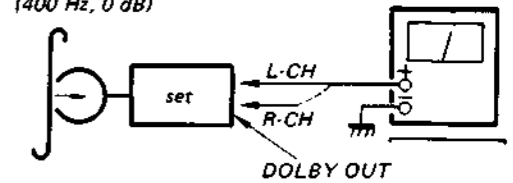


Procedure:

- Put the set into the FWD PB mode.
- Adjust RV101 (L-CH) so that VTVM reading is -6 ± 1.5 dB.
- Put the set into the REV PB mode.
- Adjust RV201 (L-CH) so that VTVM reading is -6 ± 1.5 dB.
(-6 ± 1.5 dB: approx. 0.35 to 0.54 V)

Adjustment Location: Main board

(MAIN BOARD) (Conductor Side)

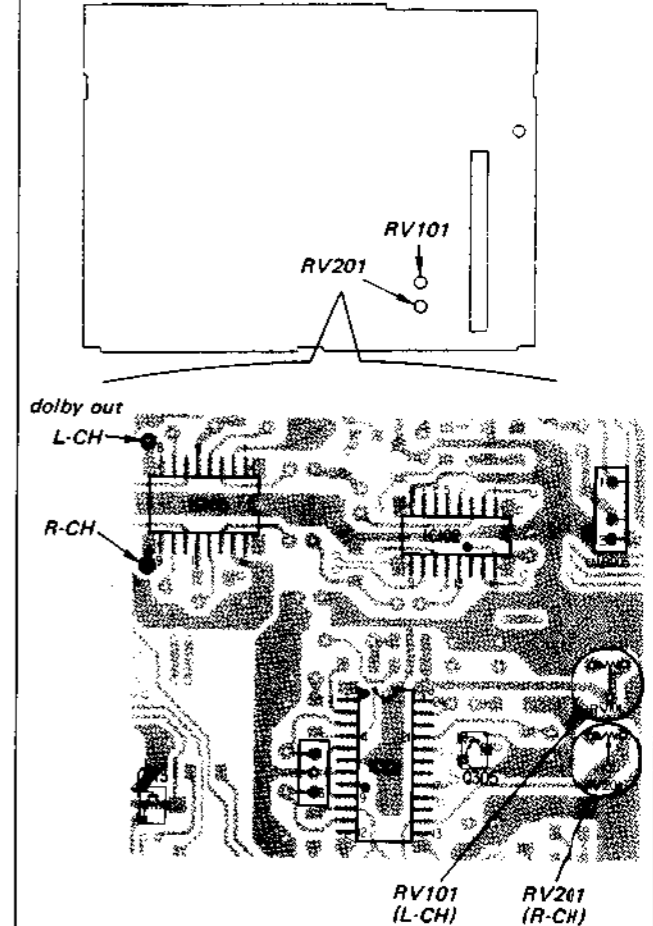

TUNER SECTION


Cautions during repair

When the front end is defective, replace it by a new one because its internal block is difficult to repair.

FM Auto Scan/Stop Level Adjustment

Setting:

Band switch: FM
 MONO switch: ON
 Frequency: 97.9 MHz (XR-7070 (US/Canadian))
 98.0 MHz (XR-7070 (AEP/E)/7071/7072)

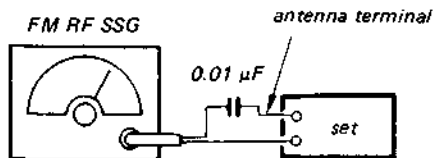

Carrier frequency: 97.9 MHz
 Output level: 25 dB μ V (18 μ V)
 Mode: mono, unmodulated

Procedure:


1. Tune in 97.9 MHz. (XR-7070 (US/Canadian))
 Tune in 98.0 MHz. (XR-7070 (AEP/E)/7071/7072)
2. Adjust RV02 so that the VOM reading changes from low to high (5 V reference voltage).
3. When the FM RF SSG's output level is 25 \pm 5 dB μ V check that the auto scan stopped.

AM Auto Scan/Stop Level Adjustment

Note: This adjustment should be made after FM auto scan stop level adjustment is completed.

Setting:

Band switch: AM
 Frequency: 1,000 kHz (XR-7070 (US/Canadian))
 999 kHz (XR-7070 (AEP/E)/7071/7072)


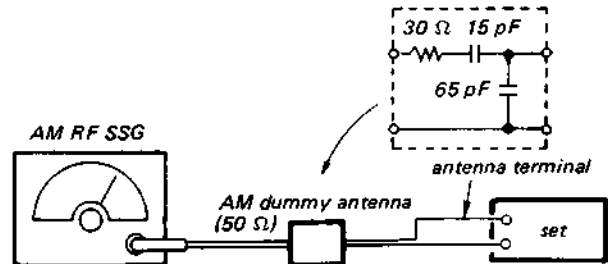


1,000 kHz
 30 dB μ V (31.8 μ V)


Procedure:

1. Turn in 1,000 kHz. (XR-7070 (US/Canadian))
 Turn in 999 kHz. (XR-7070 (AEP/E)/7071/7072)
2. Adjust RV03 so that the VOM reading changes from low to high (5.6 V reference voltage).
3. When the AM RF SSG's output level is 30 \pm 5 dB μ V check that the auto scan stopped.

[MAIN BOARD] (Conductor Side)

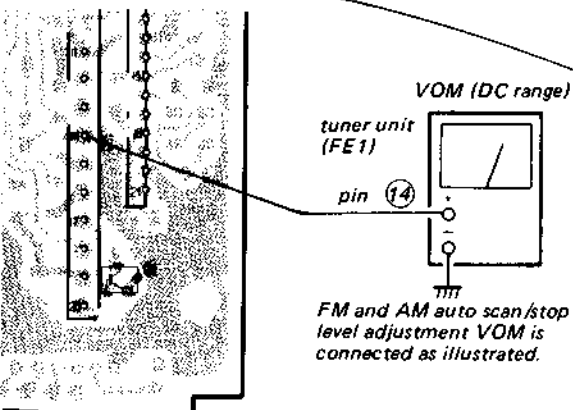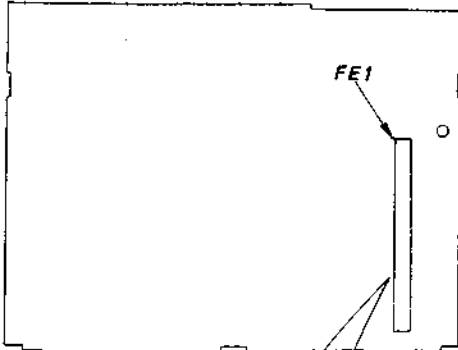


RV03 AM Auto Scan/Stop
 Level Adjustment
 RV02 FM Auto Scan/Stop
 Level Adjustment

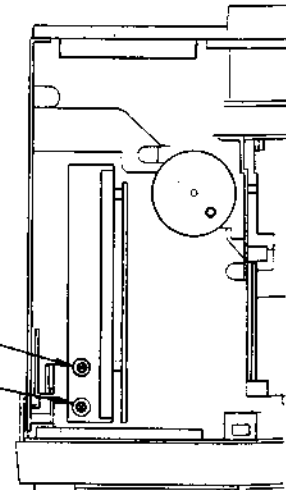

FM Stereo Separation Adjustment

Setting:

Band switch: FM
Frequency: 97.9 MHz

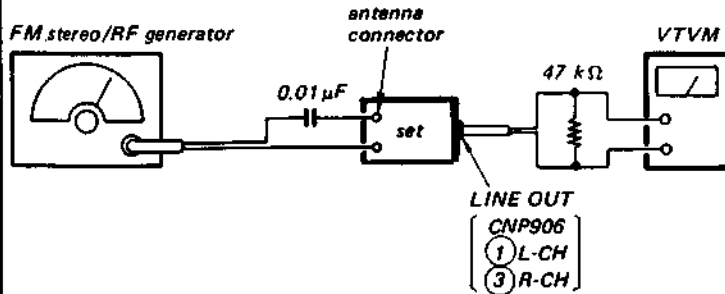

Carrier frequency: 97.9 MHz (XR-7070 (US/Canadian))
98.0 MHz (XR-7070 (AEP/E)/7071/7072)
Output level: 70 dB μ V (3.15 mV)
Modulation: main; 1 kHz 33.75 kHz deviation
sub; 1 kHz, 33.75 kHz deviation
19 kHz pilot; 7.5 kHz deviation

Procedure:

- Adjust RV1 for a best stereo separation at a LINE OUT level of approximately -10 dB. More than 25 dB is good.

| FM stereo signal generator output channel | VTVM connection | VTVM reading (dB) |
|---|-----------------|--|
| L-CH | L-CH | (A) |
| R-CH | L-CH | (B) Adjust RV1 for minimum reading. |
| R-CH | R-CH | (C) |
| L-CH | R-CH | (D) Adjust RV1 for minimum reading. |

L-CH Stereo separation: (A) - (B)



R-CH Stereo separation: (C) - (D)

The separations of both channels should be equal.

- If the result is not enough, make a solder bridge at (X) position and step back to procedure 1.
- If the result is still not good even with the bridge (X), make one at (Y) position in place of (X) and step to procedure 1. again.

Adjustment Location:


[MAIN BOARD] (Conductor Side)

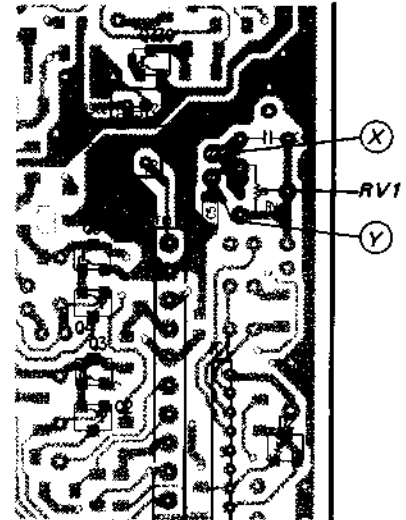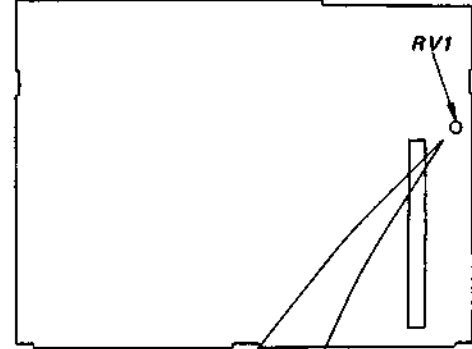

ARI Level Adjustment (XR-7072 only)

Setting:

Band switch: FM

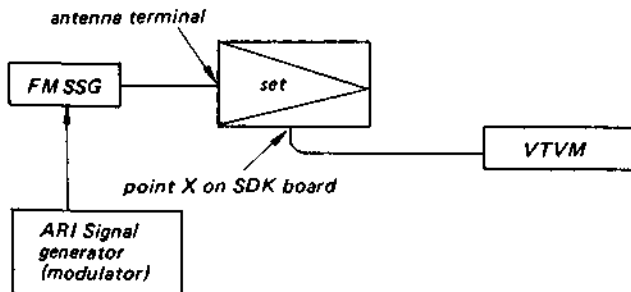


Frequency: Initial frequency
Modulation: ARI carrier only
Output level: 4 mVrms (composit)

Procedure:

1. Adjust L801 so that the level of 125 Hz signal becomes maximum.
2. Adjust RV801 in the same way.

Specification: 1 Vrms or more

Adjustment Location: ARI board conductor side view

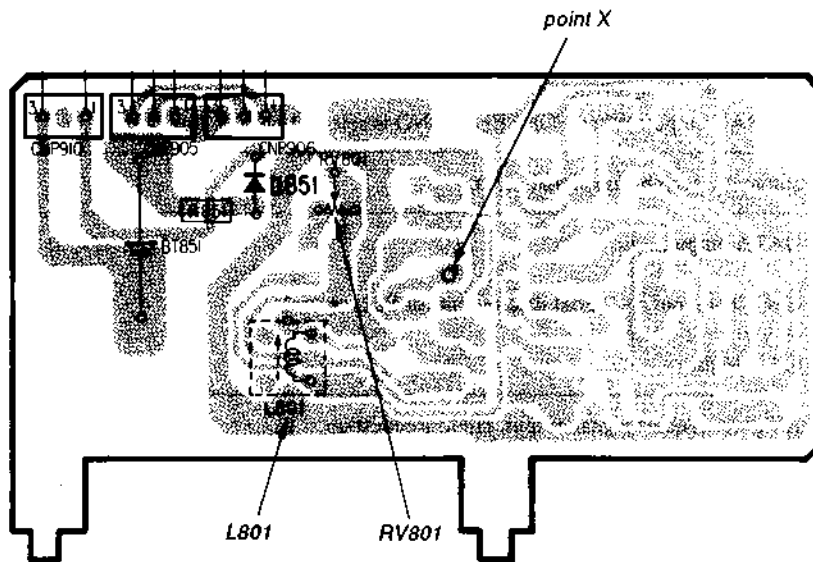

SECTION 4 DIAGRAMS

4-1. IC301 μ PD75116GF-625-3BE (MICRO COMPUTER)


The μ PD75116GF-625-3BE function are described below.

• Description








| Pin No. | Name | I/O | Description |
|---------|-----------------|-----|--|
| 1 | VOL CLK | O | Clock output for electronic volume. DSP CLOCK Control signal outputs for electronic volume and DSP (Digital Signal Processor). |
| 2 | VOL DATA | O | DATA output for Electronic volume and DSP. |
| 3 | MUTE | O | AUDIO MUTE output. High: MUTE ON. |
| 4 | (PW AMP MUTE) | (O) | POWER AMP MUTE output. High: MUTE ON. (Not used.) |
| 5 | ILL | O | ILLUMI output. High: ILLUMI ON. |
| 6 | POWER | O | SYSTEM POWER output. POWER ON/OFF for the whole system of the set, electronic volume, PLL IC, and LCD driver. |
| 7 | RESET | - | RESET signal |
| 8 | X2 | - | 4.19 MHz |
| 9 | X1 | - | |
| 10 | ACC ON | I | ACC input |
| 11 | HANDLE ON | I | HANDLE SW input. |
| 12 | STEREO/ MONO | I/O | STEREO input: When STEREO is selected on FM, "ST" is indicated at low input. MONAURAL output: When FORCED MONO is selected on FM, low output. |
| 13 | PLL ST IN | I | PLL automatic search stop signal input. |
| 14 | PLL DATA | O | PLL DATA output. } PLL CLOCK output } Serial data output for PLL control. PLL CE output } |
| 15 | PLL CLK | O | |
| 16 | PLL CE | O | |
| 17 | PLL STRQ | O | PLL If figures request signal output. High: Request on. |
| 18 | LOCAL | O | LOCAL/DX switching on AM. High: LOCAL output. |
| 19 | ANT | O | ANTENNA output. When TUNER, SDK, ATA, are on, high output. |
| 20 | DK OUT | O | SDK DK station receiving output. When DK signal is in at SDK on, high output. |
| 21 | KEY SEL | O | KEY INPUT SELECT signal. Initial diode switch is in: High output. Key scan: Low output. |
| 22 | DOLBY B | O | DOLBY B output. DOLBY ON/OFF: ON at high. Signal is out only when the audio signal is TAPE on MD-POWER is on. Low is out on the others. |
| 23 | PL | O | Signal output to change FF-REW position to PLAY position on TAPE AMS detection or so on. |

| Pin No. | Name | I/O | Description |
|---------|---------------------|-----|--|
| 24 | METAL | O | METAL output. METAL ON at high. Signal is out only when MD-POWER is on. Low on MD-POWER OFF. |
| 25 | MD POWER | O | MD POWER output. For MD POWER control. High on tape playback state. Low on stop state. |
| 26 | Vss | - | GND |
| 27 | \bar{N}/R | I | Tape Normal/Reverse detection input. Low on normal side. |
| 28 | FF•REW | I | High signal is in. When tape is FF/REW position. |
| 29 | AMS | I | Tape signal (tune) presence detection input. When there is a signal (a tune), it is high. |
| 30 | PACK IN | I | When the cassette is packed in, high signal is in. |
| 31 | SDL | I | SDL signal during tuner receiving. Used as SDL signal during BEST TUNING MEMORY. When there is a station, high signal is in. |
| 32 | BK | I | On SDK ON, counts BK and indicatets area. Connects to ground when it isn't ARI system. |
| 33 | SK | I | When receiving the station has high SK, indicates "SK". |
| 34 | DK | I | When receiving the station broadcasting ARI, high signal is in. |
| 35 | CD CHECK REM•IN | I | CD CHECK (use this port both as $\bar{R}EM\text{-}IN$). High signal is in when CD is connected. |
| 36 | CD MUTE AUX•MUTE | I | CD MUTE (use this port both as $\bar{A}UX\text{-}MUTE$). CD MUTE input. MUTE ON at high. |
| 37 | DISP SEL REM•OUT | O | DISP SEL (use this port both as $\bar{R}EM\text{-}OUT$). CD changer control signal output. |
| 38 | CD DATA OUT | O | Serial data output to CD changer. |
| 39 | CD CLK OUT | O | Serial clock output to CD changer. |
| 40 | BEEP | O | Buzzer output. (Approx. 2 kHz and 700 Hz, two kinds of signal output.) On Test Mode, 2,048 Hz signal output. |
| 41 | CD DATA IN | I | Serial data input from CD changer. |
| 42 | - | - | Not used. |
| 43 | CD CLK IN | I | Serial clock input from CD changer. |
| 44 | BACK UP ON | I | BACK UP input. |


| Pin No. | Name | I/O | Description | | | | | | | | | | | | | | | | | | | |
|---------------|-------------------------------------|------|--|--------|--|------|------|------|---|---|---|---|---|---|-------|--|---|---|--------|--|---|---|
| 45 I 48 | $\bar{K}IN3$ I $\bar{K}IN0$ | I/O | Key matrix input. Initial diode switch output. Activates at low. | | | | | | | | | | | | | | | | | | | |
| 49 I 52 | $\bar{K}OUT5$ I $\bar{K}OUT2$ | I/O | Key matrix output. Initial diode switch input. Activates at low. | | | | | | | | | | | | | | | | | | | |
| 53, 54 | $\bar{K}OUT1, 0$ | O | Key matrix output. Activates at low. | | | | | | | | | | | | | | | | | | | |
| 55, 56 | SIG 2, 1 | O | Audio signal select output. <table border="1" style="margin-left: 20px;"> <thead> <tr> <th colspan="2">SOURCE</th> <th>SIG2</th> <th>SIG1</th> </tr> </thead> <tbody> <tr> <td rowspan="2">TAPE</td> <td>N</td> <td>L</td> <td>L</td> </tr> <tr> <td>R</td> <td>L</td> <td>H</td> </tr> <tr> <td colspan="2">TUNER</td> <td>H</td> <td>L</td> </tr> <tr> <td colspan="2">CD/AUX</td> <td>H</td> <td>H</td> </tr> </tbody> </table> | SOURCE | | SIG2 | SIG1 | TAPE | N | L | L | R | L | H | TUNER | | H | L | CD/AUX | | H | H |
| SOURCE | | SIG2 | SIG1 | | | | | | | | | | | | | | | | | | | |
| TAPE | N | L | L | | | | | | | | | | | | | | | | | | | |
| | R | L | H | | | | | | | | | | | | | | | | | | | |
| TUNER | | H | L | | | | | | | | | | | | | | | | | | | |
| CD/AUX | | H | H | | | | | | | | | | | | | | | | | | | |
| 57 | NC | - | (Short-circuit to V_{DD}) | | | | | | | | | | | | | | | | | | | |
| 58 | V_{DD} | - | Power source. | | | | | | | | | | | | | | | | | | | |
| 59 | COLOR | O | Illumination amber/green select. High: Green Low: Amber | | | | | | | | | | | | | | | | | | | |
| 60 | LCD DATA | O | LCD data output. | | | | | | | | | | | | | | | | | | | |
| 61 | LCD CLK | O | LCD clock output. | | | | | | | | | | | | | | | | | | | |
| 62 | LCD CE | O | LCD CE output. | | | | | | | | | | | | | | | | | | | |
| 63 | DSP AO | O | DSP (Digital Signal Processor) control signal output. | | | | | | | | | | | | | | | | | | | |
| 64 | VOL CE | O | Electronic volume control signal output. | | | | | | | | | | | | | | | | | | | |

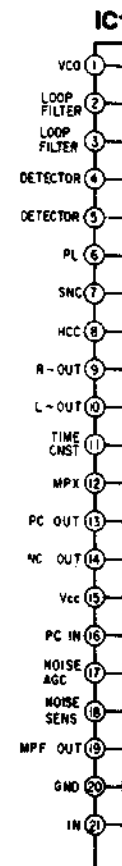

4-2. IC BLOCK DIAGRAMS

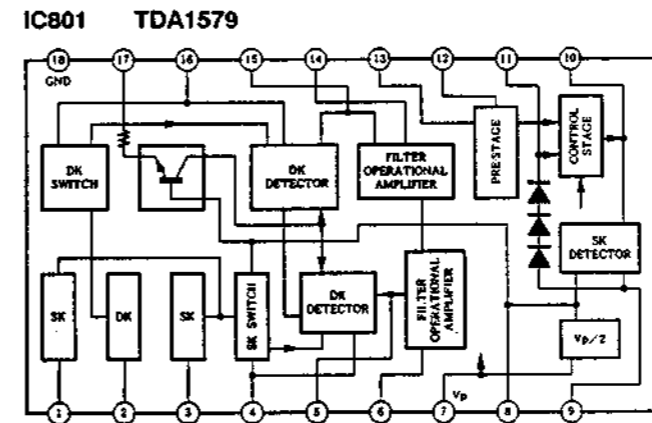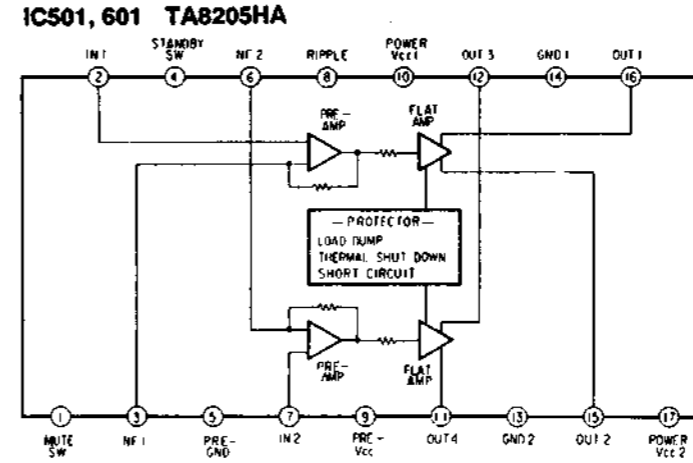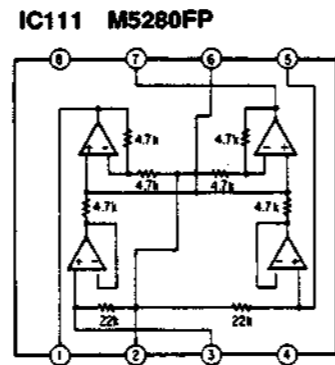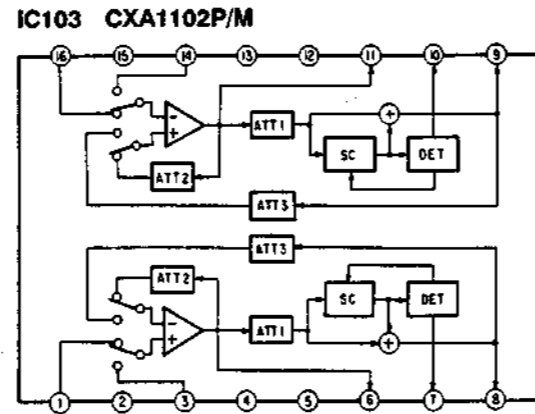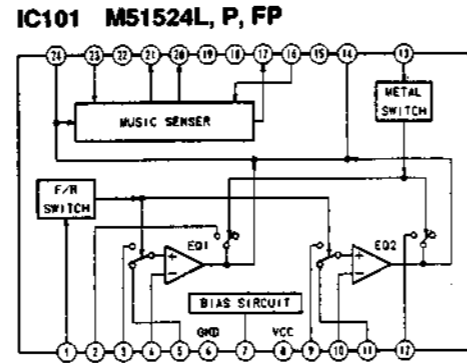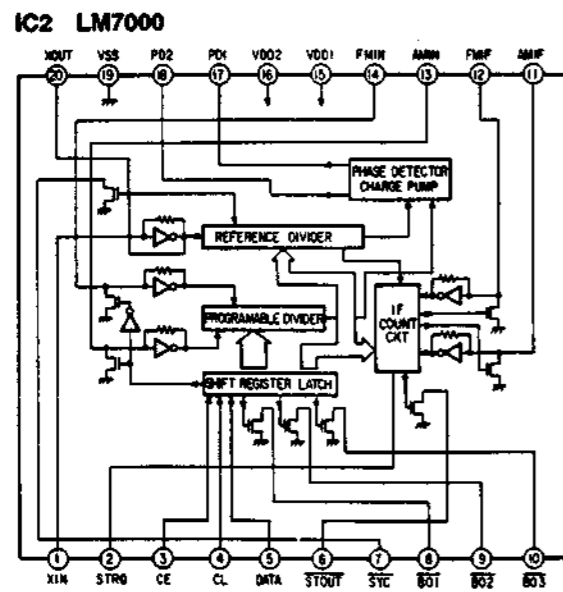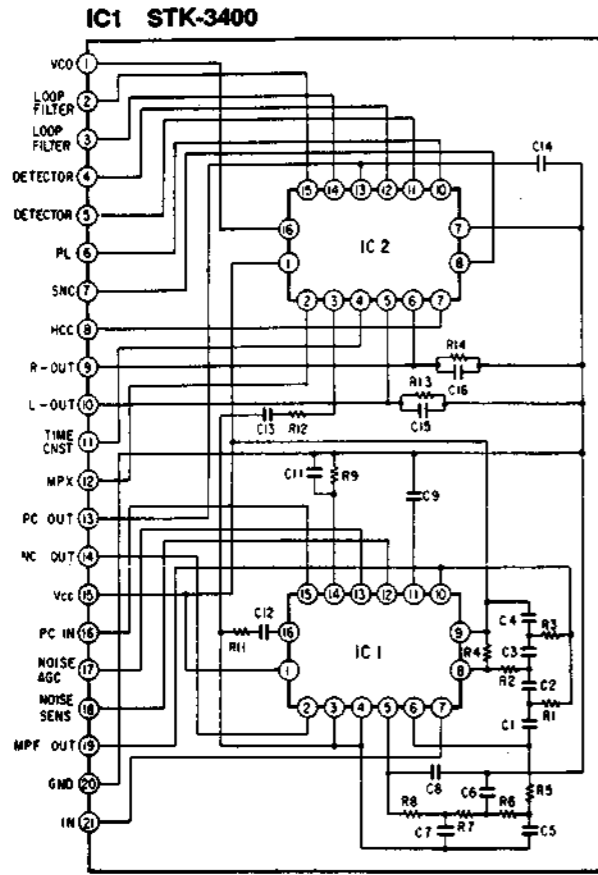

• Semiconductor Lead Layouts

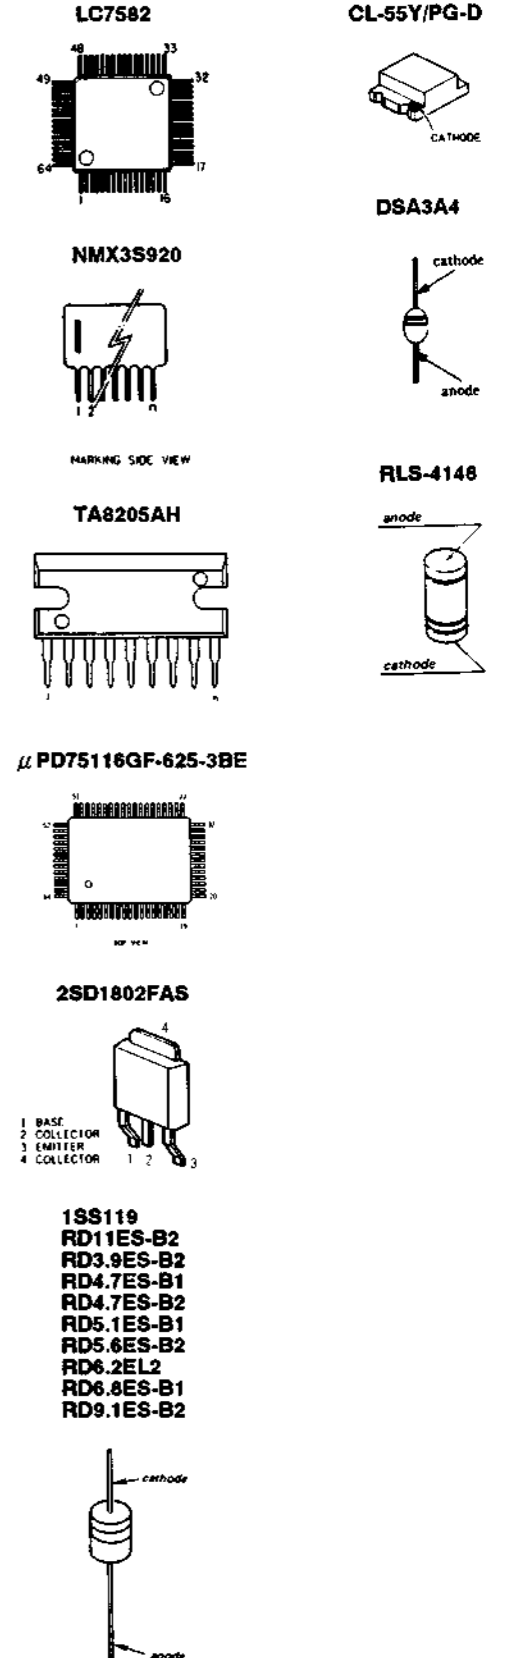

4-3. PRINTED WIRING BOARDS (TYPE A:

Main board part number: 1-634-042-11)


• See page 24 for Semiconductor Lead Layouts.


Note:




- : parts extracted from the component side.
- : parts extracted from the conductor side.
- : parts mounted on the conductor side.
- : Through hole.
- ▨ : Pattern on the side which is seen.
- ▩ : Pattern of the rear side.

• Semiconductor Location


| Ref. No. | Location | Ref. No. | Location | Ref. No. | Location |
|----------|----------|----------|----------|----------|----------|
| D1 | J-1 | D701 | A-9 | Q1 | J-18 |
| D2 | H-18 | D702 | A-8 | Q2 | H-17 |
| D3 | G-16 | D703 | A-7 | Q3 | H-17 |
| D4 | K-17 | D704 | A-6 | Q4 | H-17 |
| D5 | G-17 | D705 | B-5 | Q5 | G-17 |
| D101 | G-11 | D706 | B-5 | Q6 | F-3 |
| D201 | G-13 | D707 | A-5 | Q7 | G-16 |
| D301 | E-11 | D708 | A-5 | Q8 | G-3 |
| D302 | F-17 | D709 | A-4 | Q9 | G-17 |
| D303 | H-16 | D710 | A-2 | Q10 | G-16 |
| D304 | H-5 | D711 | A-2 | Q11 | J-16 |
| D305 | K-11 | D712 | A-3 | Q102 | E-6 |
| D306 | K-11 | D713 | B-2 | Q103 | E-5 |
| D307 | K-11 | D714 | A-2 | Q202 | E-6 |
| D308 | K-11 | D715 | B-3 | Q203 | F-5 |
| D309 | K-11 | D716 | C-1 | Q301 | F-17 |
| D310 | K-12 | D717 | B-1 | Q302 | F-17 |
| D311 | K-12 | D718 | B-4 | Q303 | E-10 |
| D312 | J-13 | D719 | B-3 | Q304 | E-10 |
| D313 | J-13 | D720 | B-4 | Q305 | I-16 |
| D314 | J-13 | D721 | B-4 | Q307 | H-15 |
| D315 | J-14 | D722 | C-1 | Q308 | K-14 |
| D325 | J-13 | D723 | B-1 | Q309 | G-4 |
| D326 | J-13 | D724 | A-1 | Q310 | G-5 |
| D327 | J-13 | D725 | B-1 | Q311 | F-15 |
| D328 | J-12 | D851 | I-21 | Q312 | G-5 |
| D329 | J-12 | | | Q313 | J-14 |
| D330 | J-12 | IC1 | H-18 | Q314 | F-15 |
| D331 | J-12 | IC2 | J-17 | Q315 | E-11 |
| D333 | G-15 | IC101 | I-15 | Q316 | E-11 |
| D334 | G-14 | IC102 | H-16 | Q319 | F-3 |
| D335 | G-15 | IC103 | H-14 | Q323 | G-14 |
| D336 | F-4 | IC104 | G-12 | Q324 | G-14 |
| D337 | I-14 | IC105 | G-7 | Q325 | F-16 |
| D338 | F-15 | IC106 | G-7 | Q326 | F-16 |
| D339 | G-14 | IC107 | G-7 | Q327 | F-16 |
| D340 | E-14 | IC108 | G-7 | Q328 | F-18 |
| D341 | F-16 | IC109 | F-12 | Q329 | F-18 |
| D342 | E-17 | IC110 | F-14 | Q330 | F-18 |
| D344 | F-17 | IC111 | G-16 | Q332 | J-4 |
| D345 | J-14 | IC301 | I-11 | Q701 | A-16 |
| D346 | G-11 | IC302 | G-11 | Q702 | B-16 |
| D347 | G-10 | IC501 | F-23 | Q703 | B-11 |
| D348 | H-11 | IC601 | F-21 | Q704 | B-11 |
| D591 | E-21 | IC701 | B-12 | | |

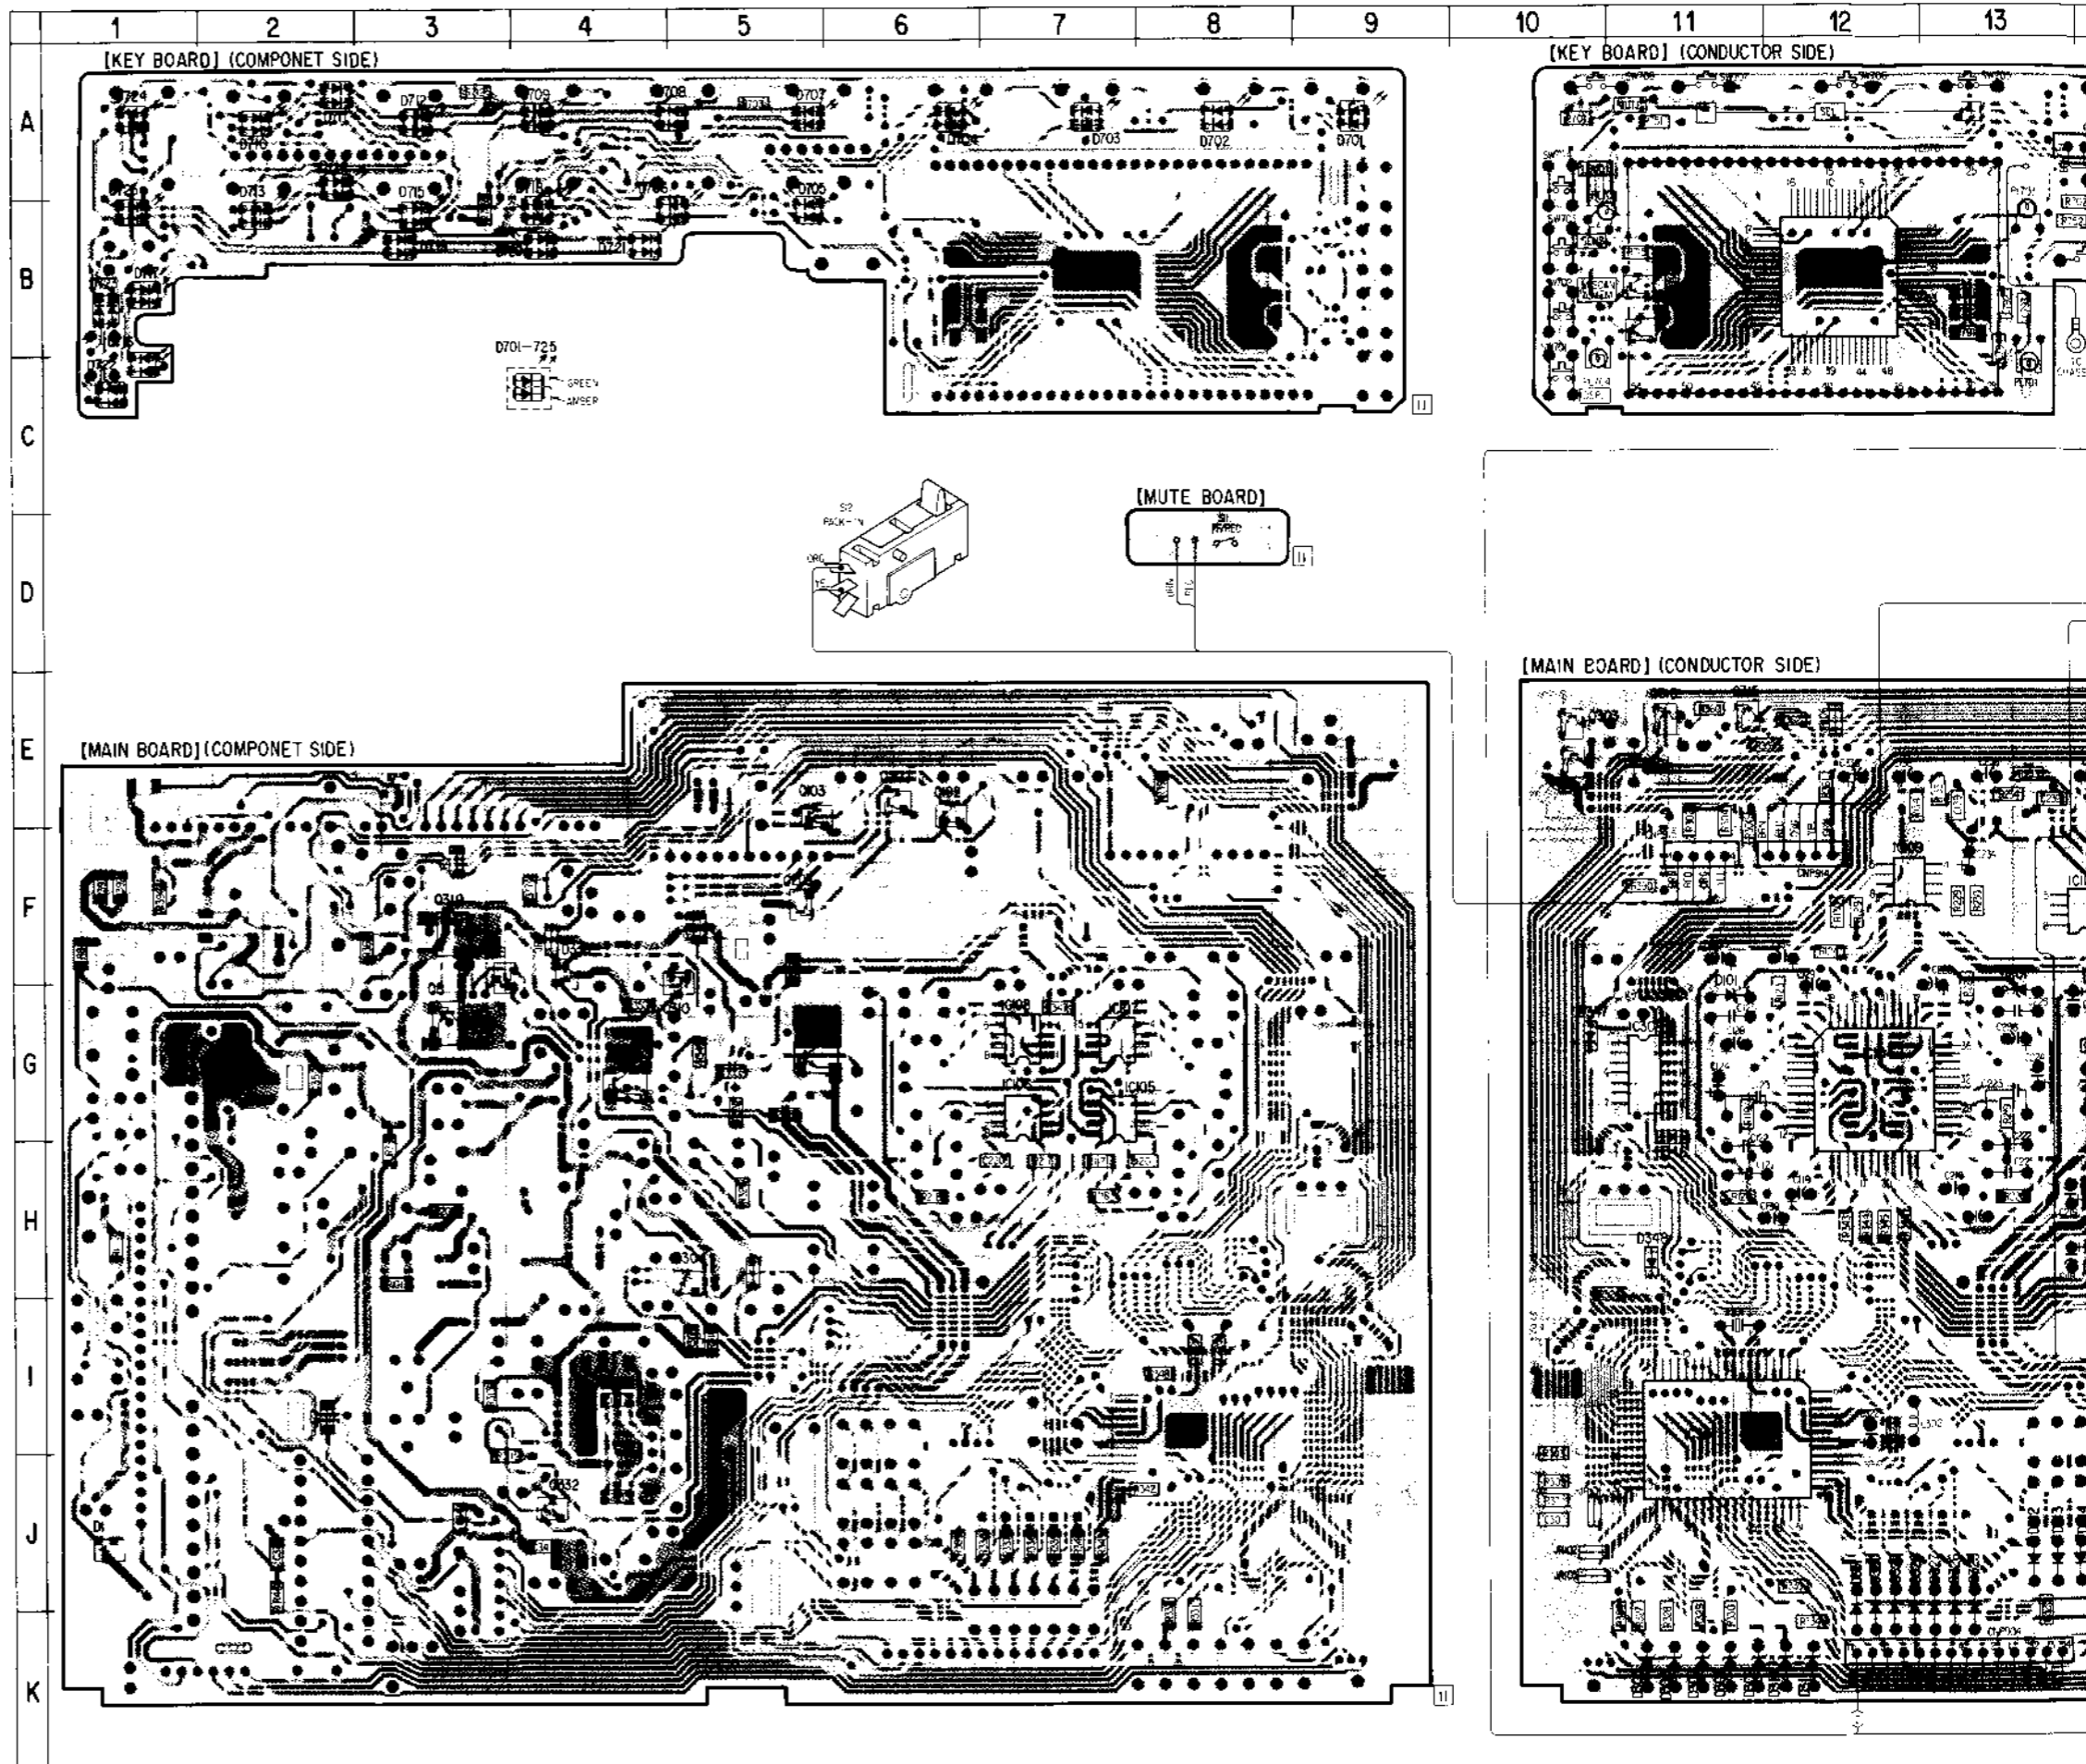

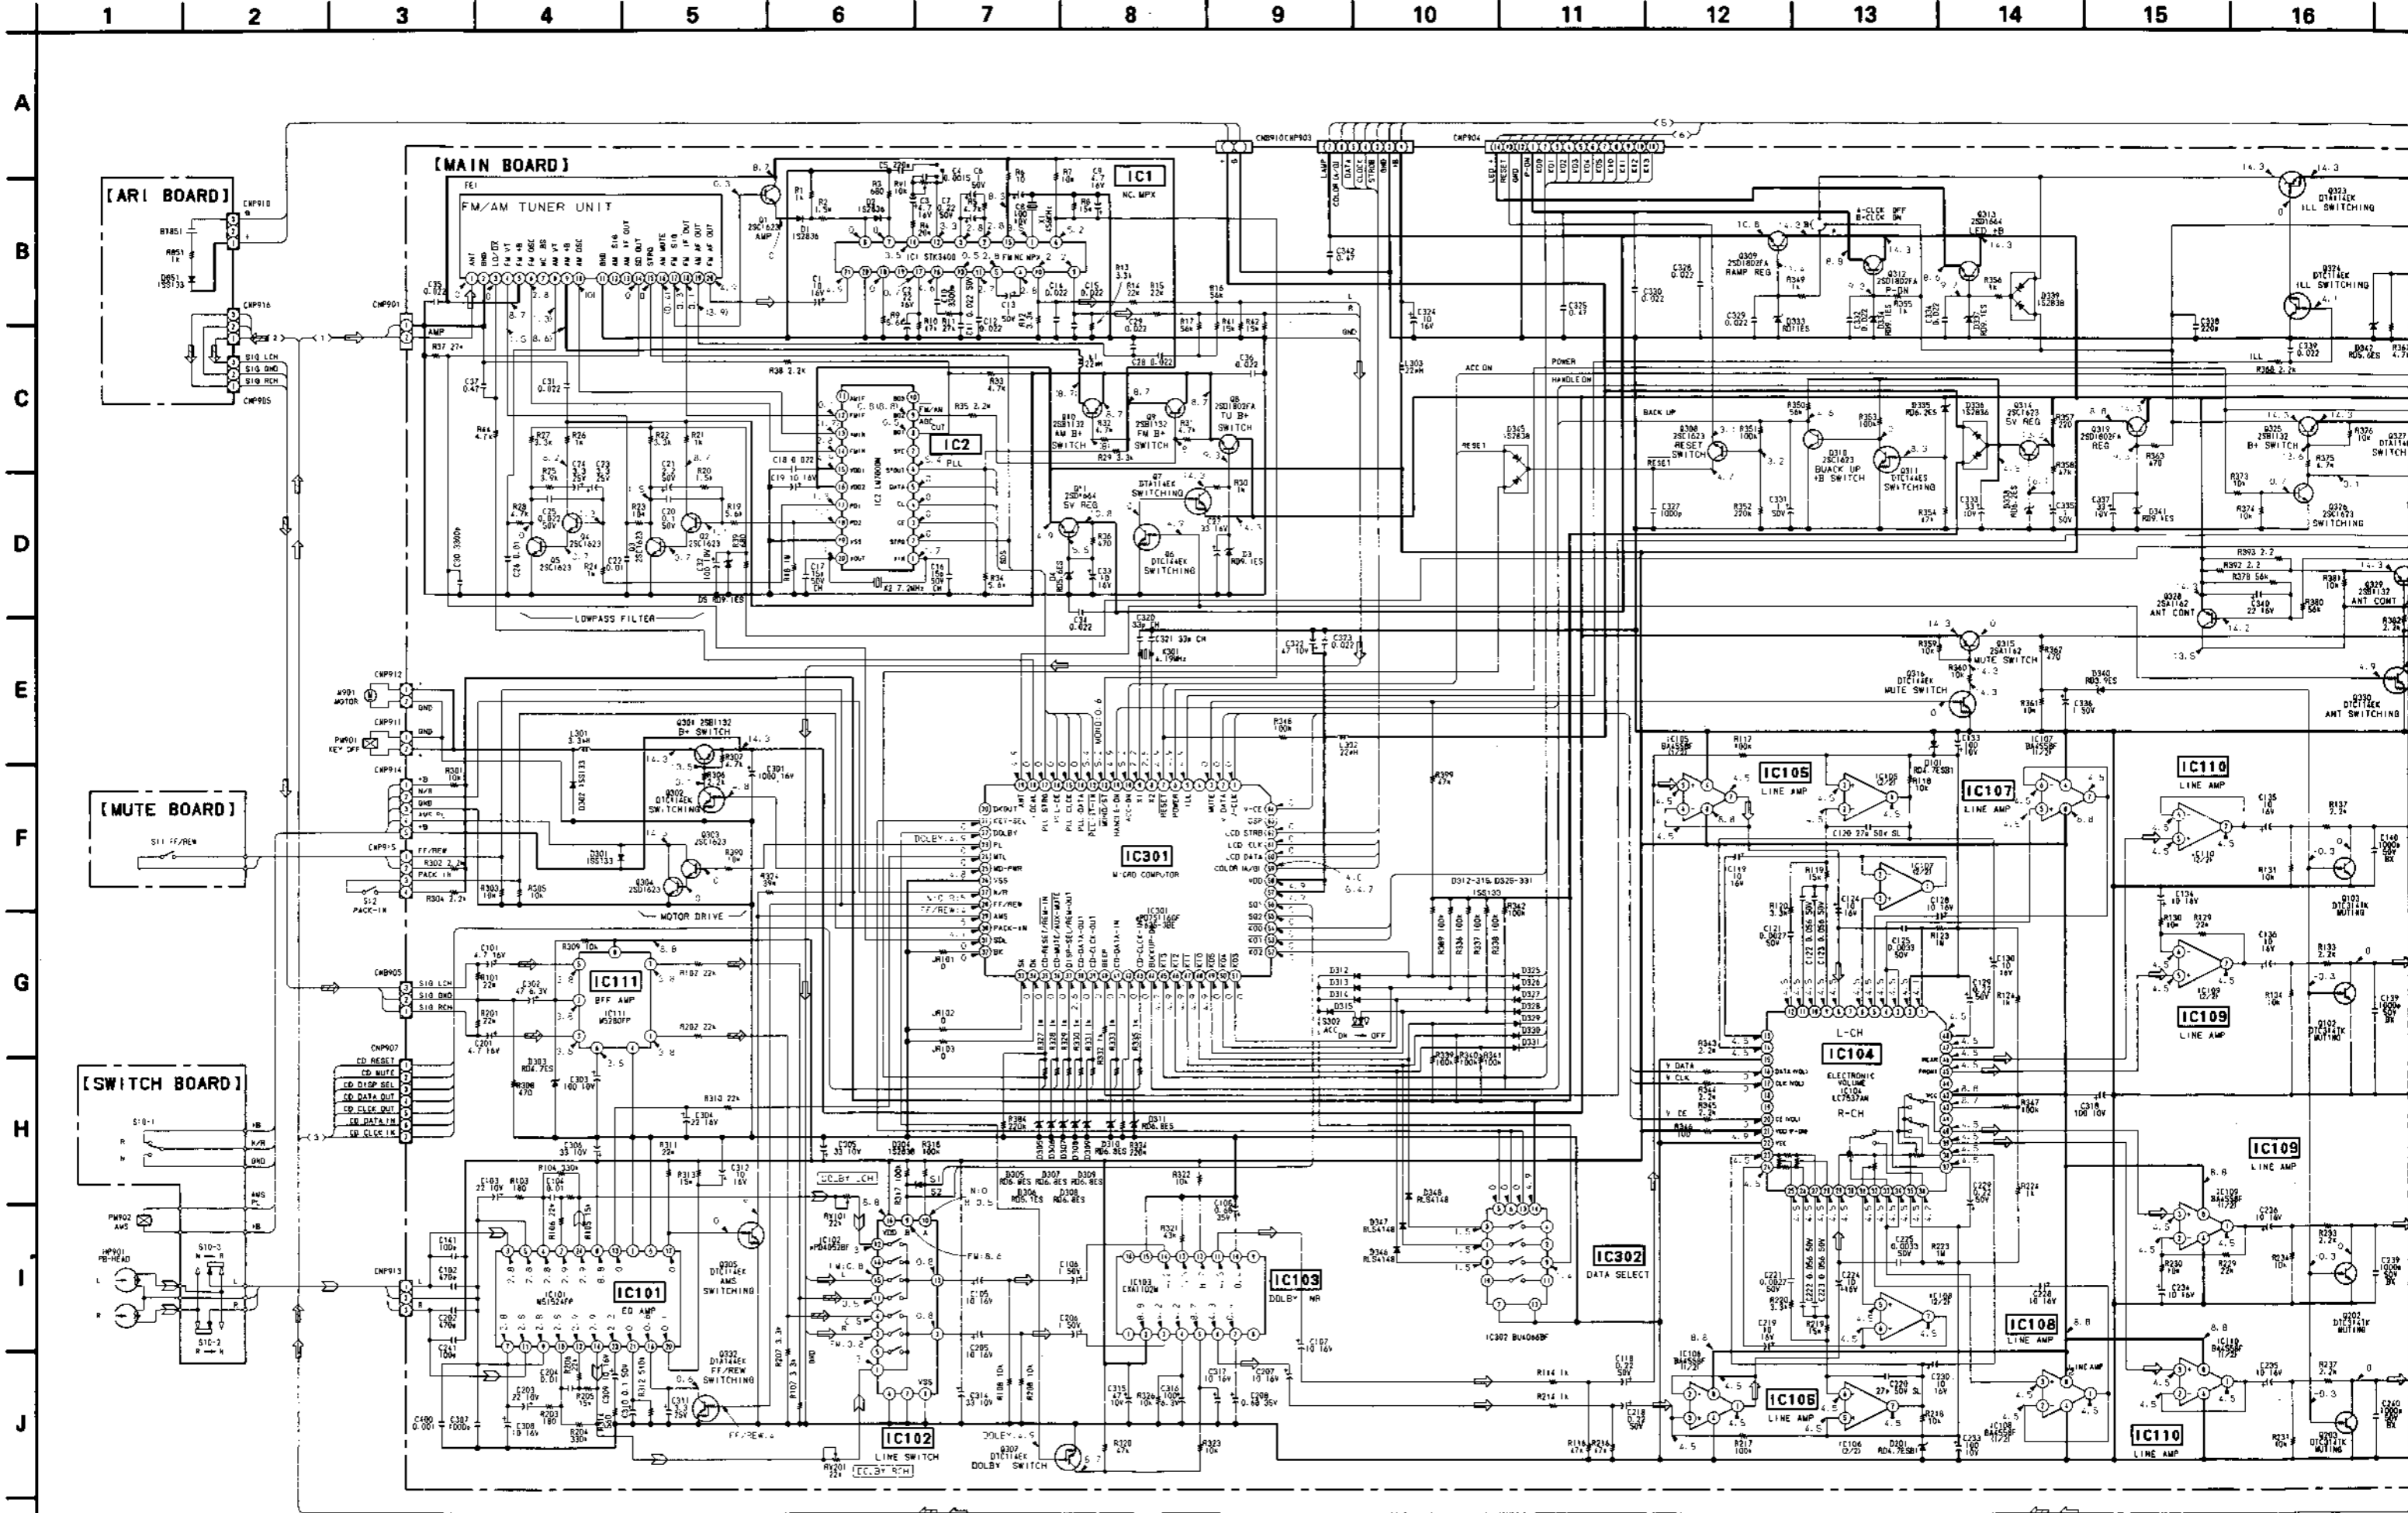

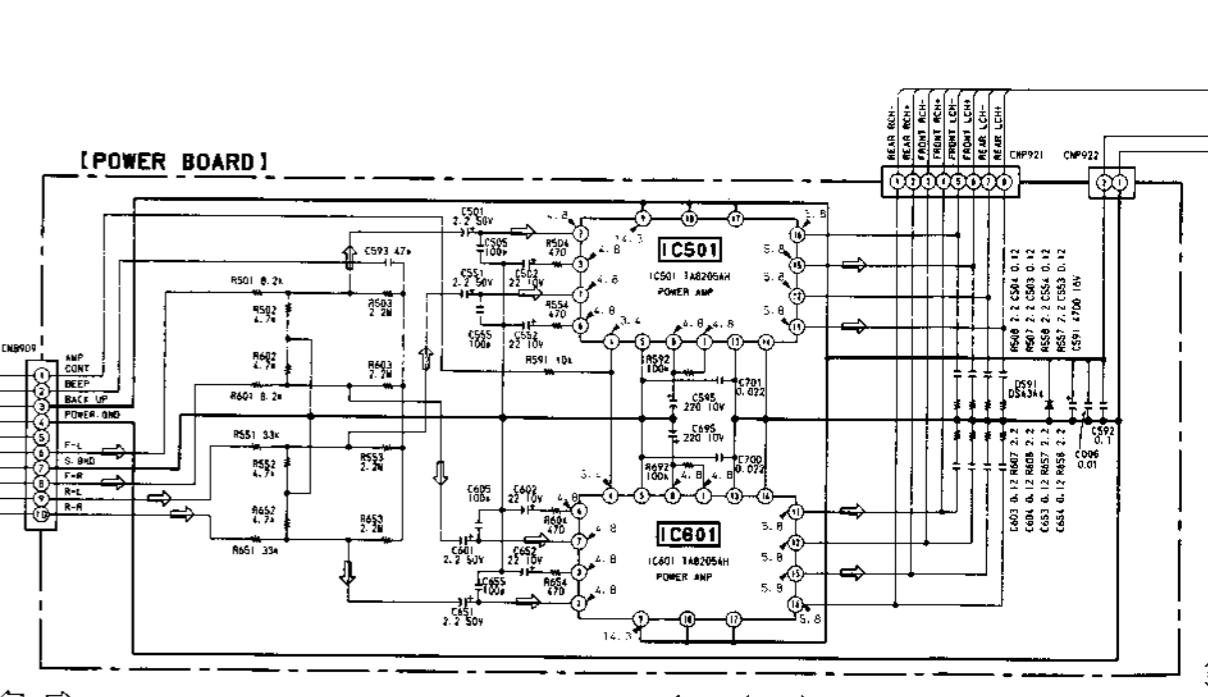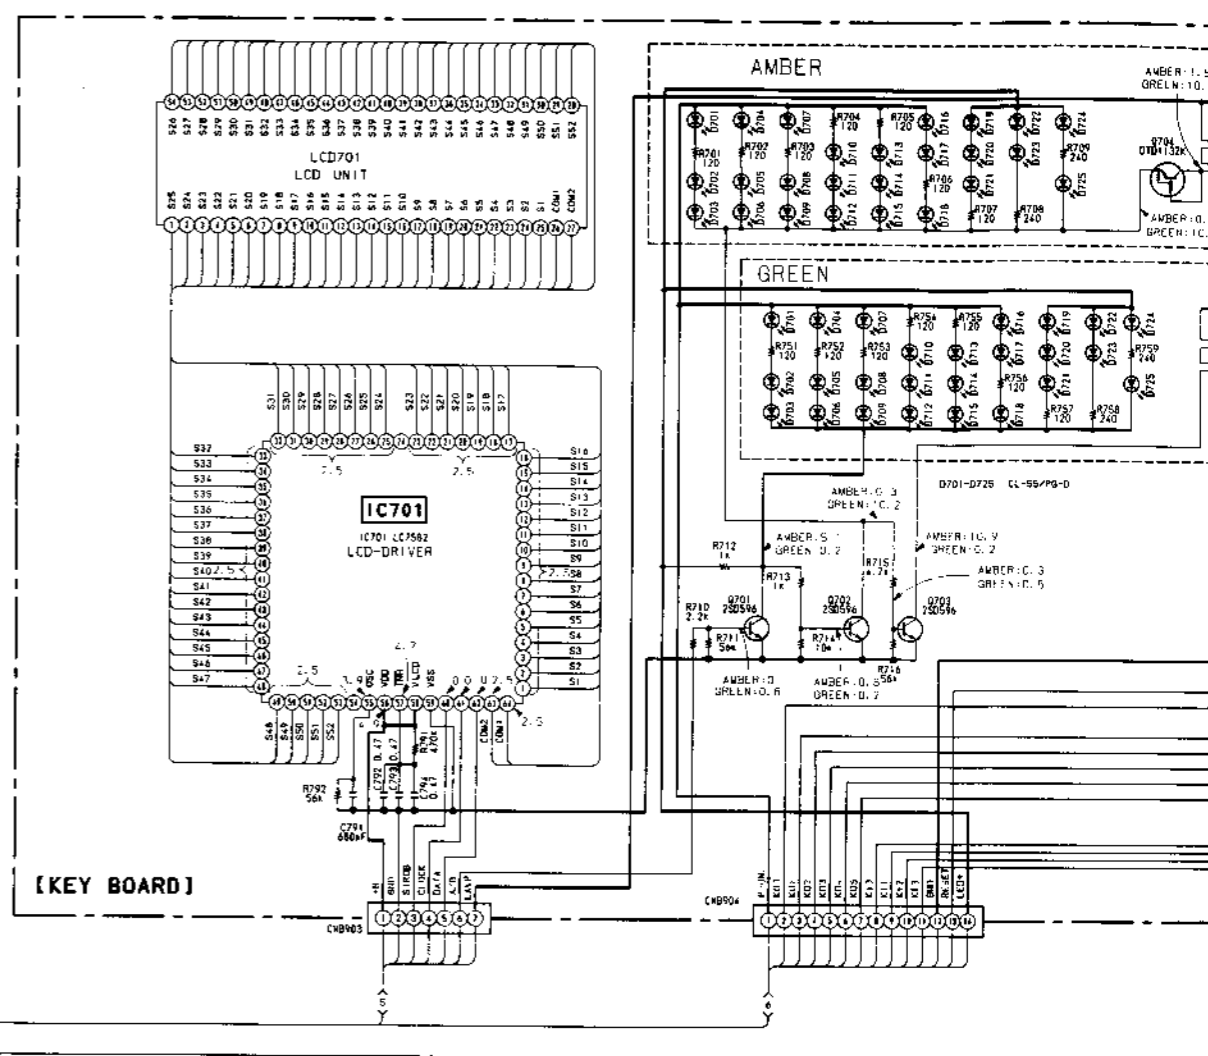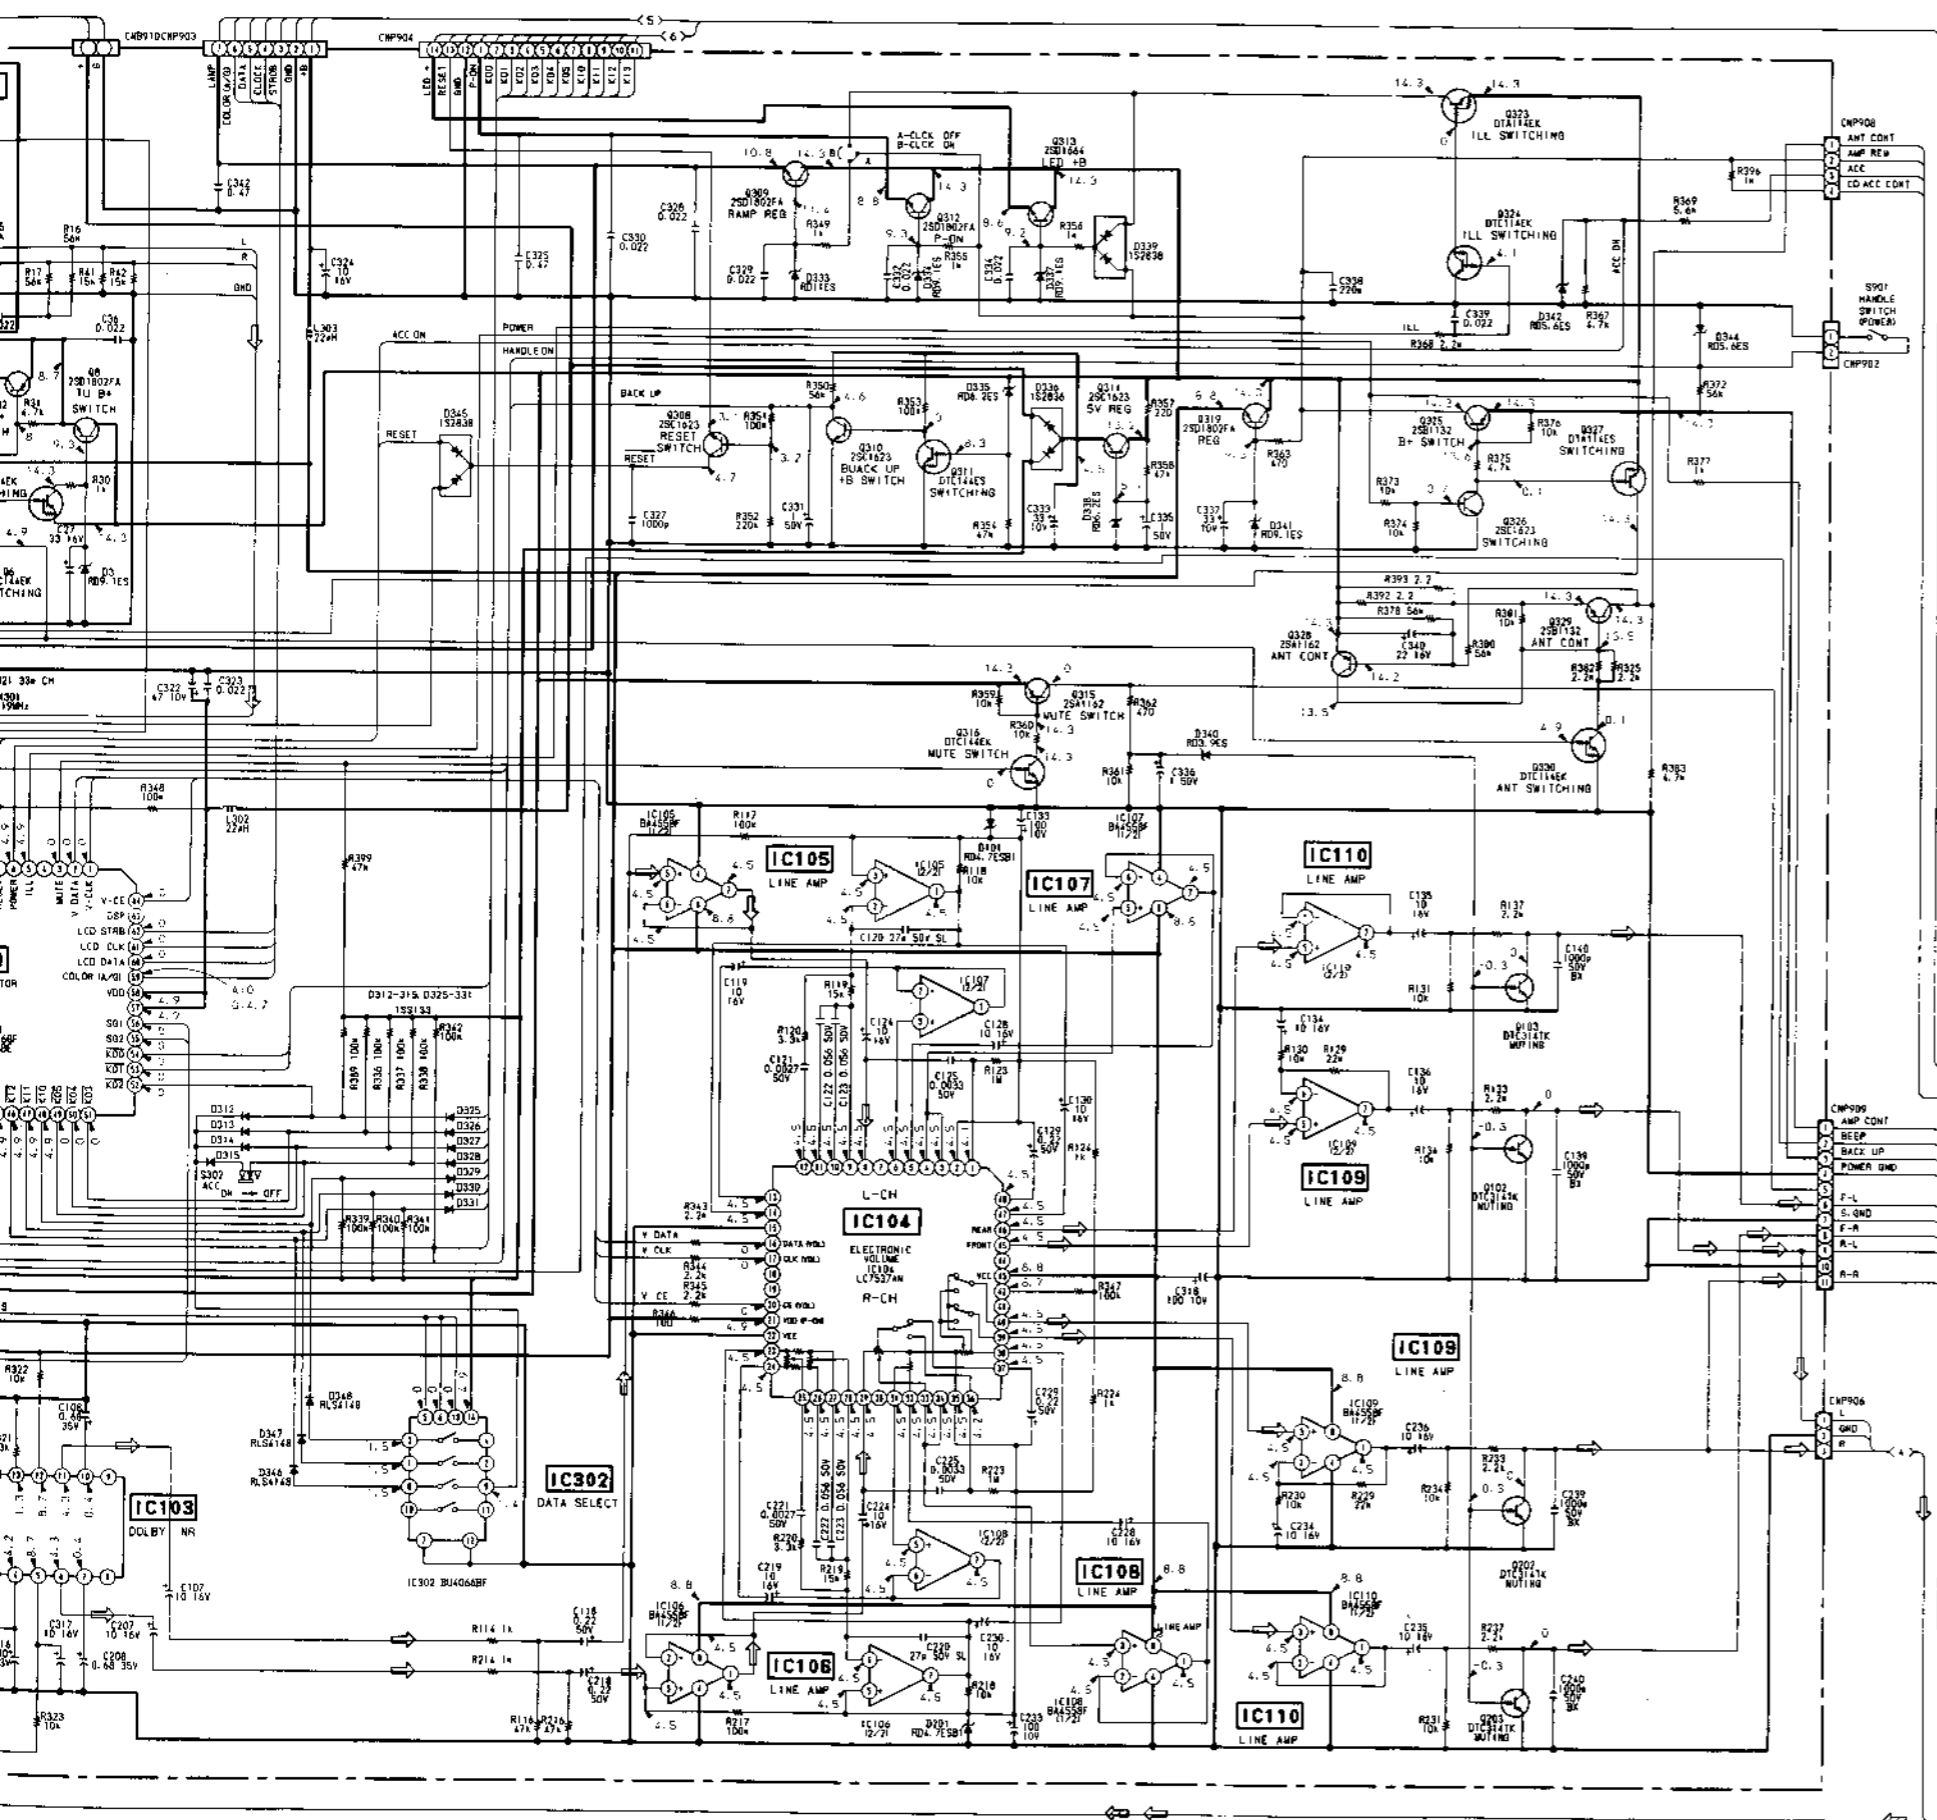

A
B
C
D
E
F
G
H
I
J

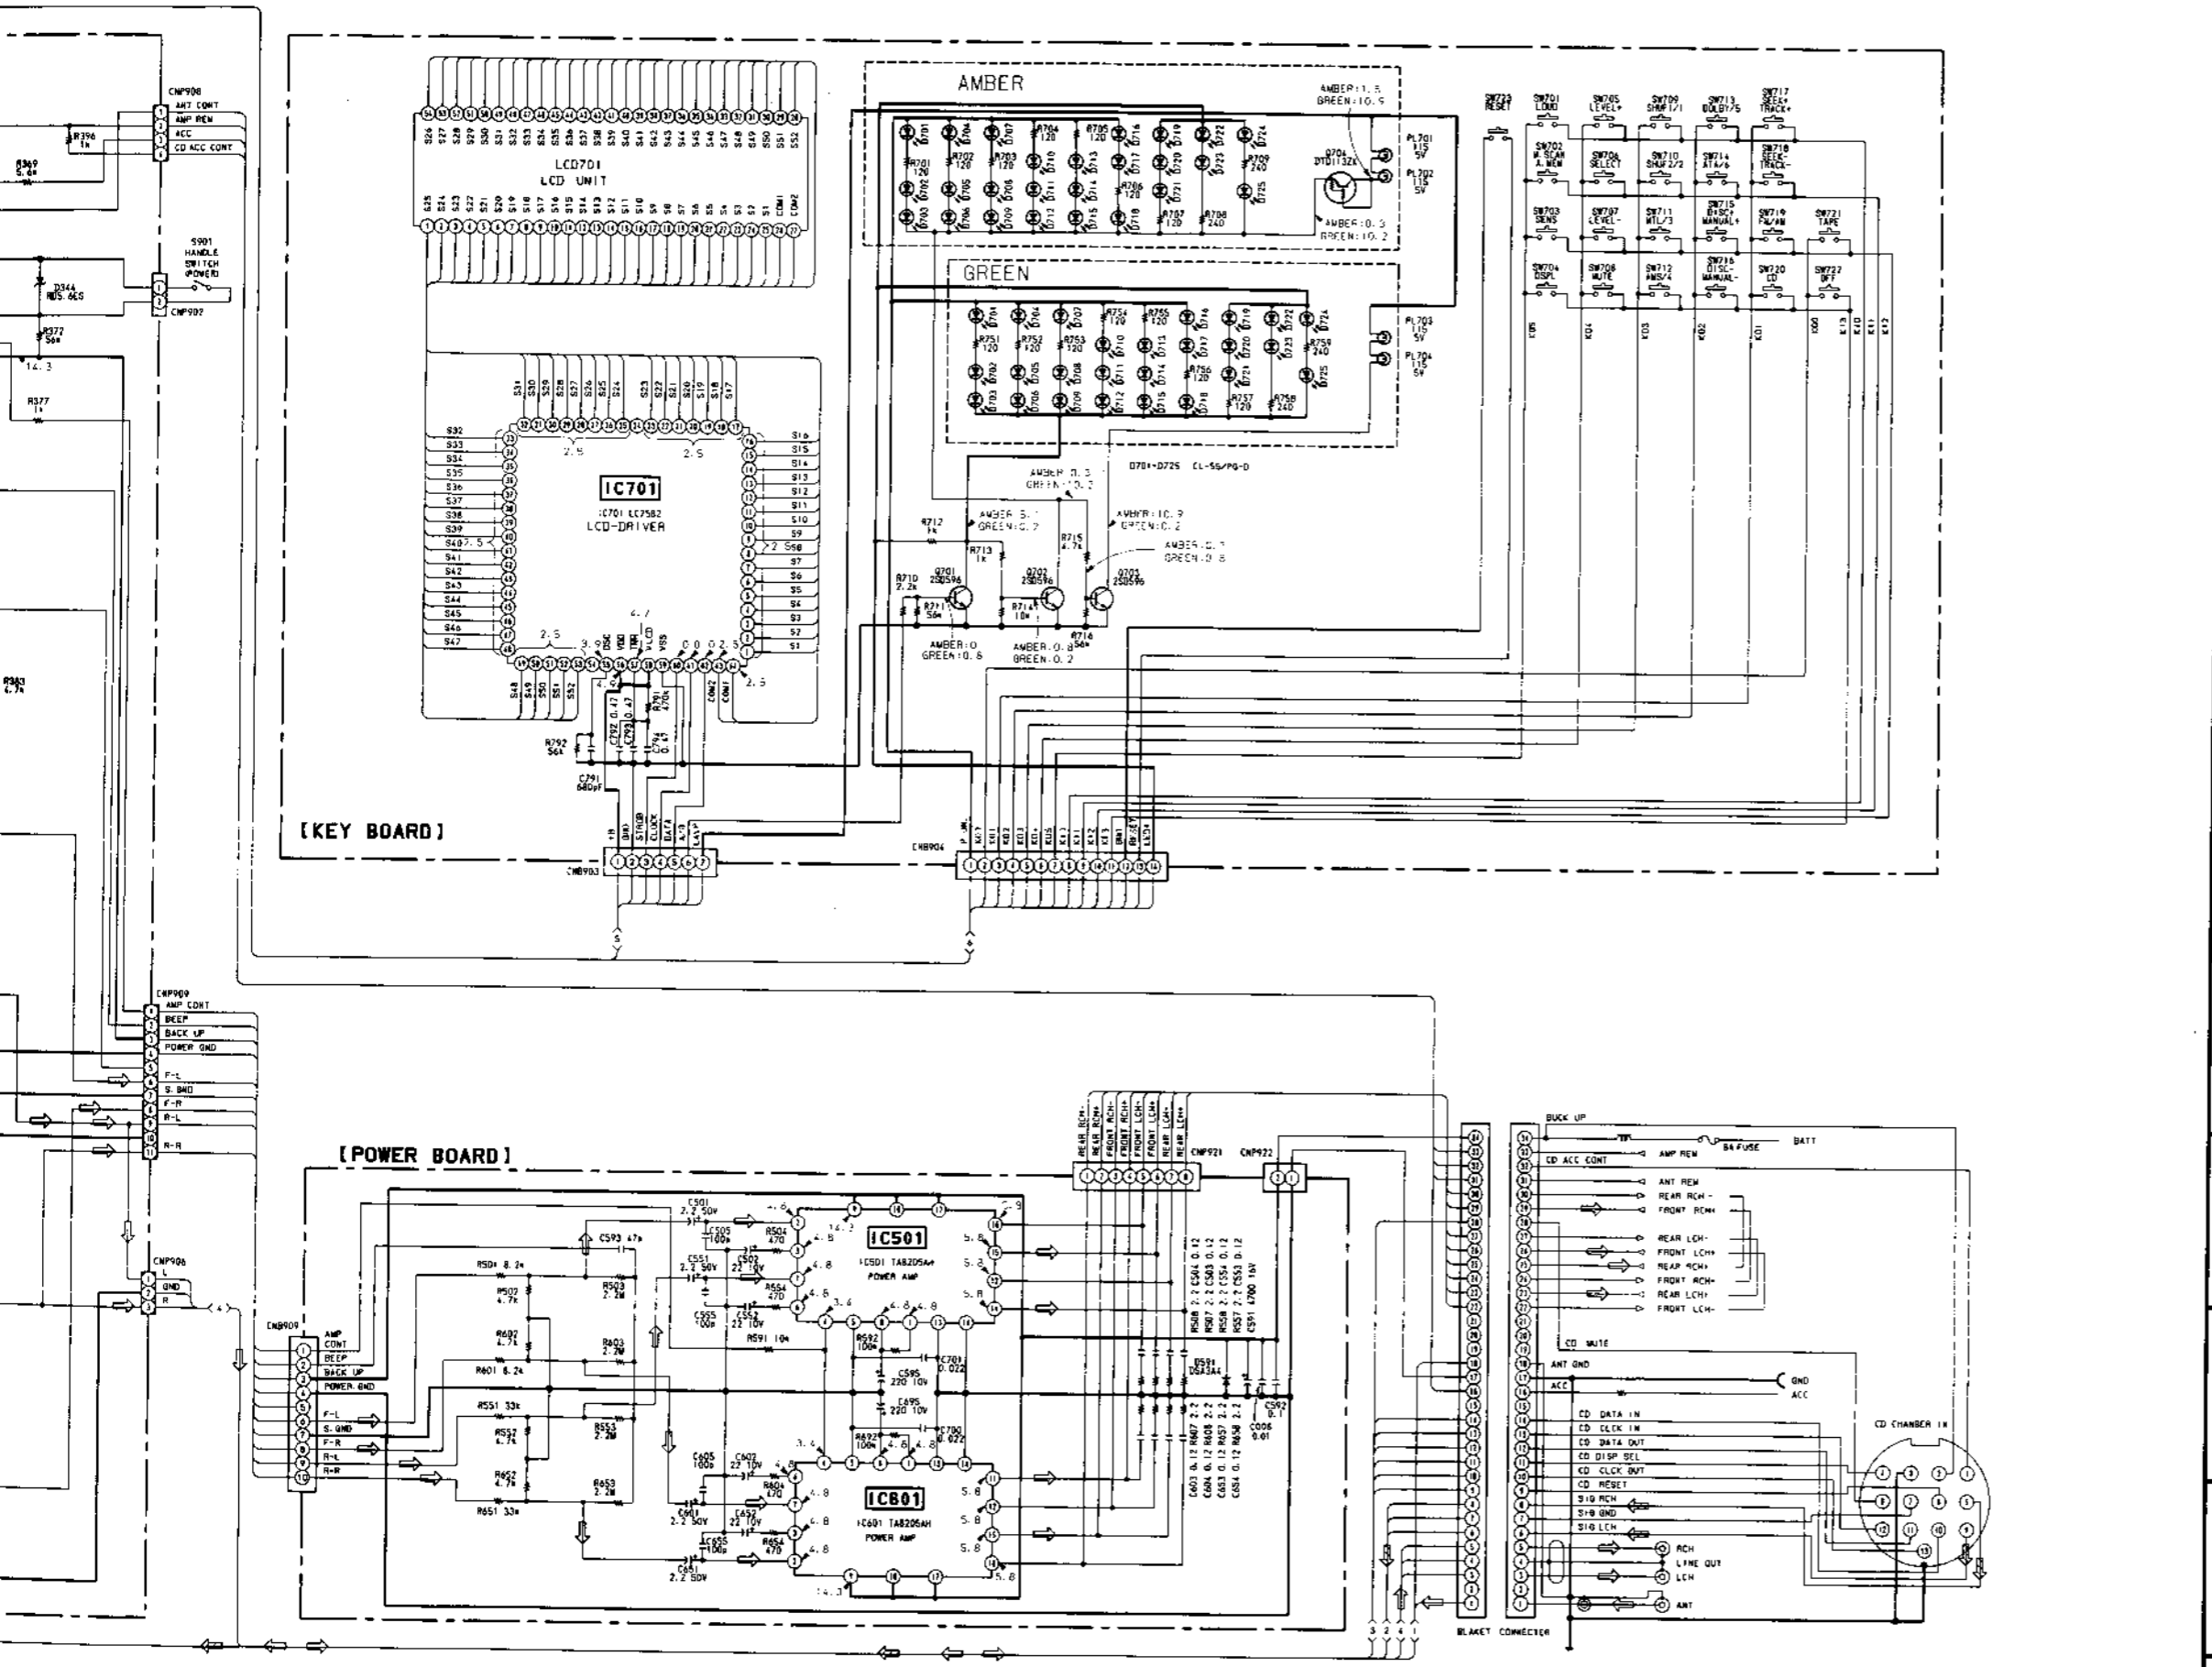

- Note:**
- All capacitors are in μF unless otherwise noted. pF ; μF 50 WV or less are not indicated except for electrolytics and tantalums.
 - All resistors are in Ω and $\frac{1}{4}$ W or less unless otherwise specified.
 - % : indicates tolerance.
 - \triangle : internal component.
 - \square : nonflammable resistor.
 - --- : B + Line.
 - \square : adjustment for repair.
 - Power voltage is dc 14.4 V and fed with regulated dc power supply from battery terminal.
 - Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
no mark : FM or PLAY
() : AM
 - Voltages are taken with a VOM (10 M Ω /V).
Voltage variations may be noted due to normal production tolerances.
 - Signal path.
 - \rightarrow : FM
 - \rightarrow : PB
 - \rightarrow : CD

4-5. PRINTED WIRING BOARDS (TYPE B: XR-7070 (Canadian/AEP/E)/7071/7072) and XR-7070 (US) Main board part number: 1-634-042-13


• See pages 24 for Semiconductor Lead Layouts.





Note:


- : parts extracted from the component side.
- : parts extracted from the conductor side.
- : parts mounted on the conductor side.
- (with dot) : Through hole.
- ▨ : Pattern on the side which is seen.
- ▨ (with dot) : Pattern of the rear side.

• Semiconductor Location


| Ref. No. | Location | Ref. No. | Location | Ref. No. | Location |
|----------|----------|----------|----------|----------|----------|
| D1 | J-1 | D701 | A-9 | Q1 | J-18 |
| D2 | H-18 | D702 | A-8 | Q2 | H-17 |
| D3 | G-16 | D703 | A-7 | Q3 | H-17 |
| D4 | K-17 | D704 | A-6 | Q4 | H-17 |
| D5 | G-17 | D705 | B-5 | Q5 | G-17 |
| D101 | G-11 | D706 | B-5 | Q6 | F-3 |
| D201 | G-13 | D707 | A-5 | Q7 | G-16 |
| D301 | E-11 | D708 | A-5 | Q8 | G-3 |
| D302 | F-17 | D709 | A-4 | Q9 | G-17 |
| D303 | H-16 | D710 | A-2 | Q10 | G-16 |
| D304 | H-5 | D711 | A-2 | Q11 | J-16 |
| D305 | K-11 | D712 | A-3 | Q102 | E-6 |
| D306 | K-11 | D713 | B-2 | Q103 | E-5 |
| D307 | K-11 | D714 | A-2 | Q202 | E-6 |
| D308 | K-11 | D715 | B-3 | Q203 | F-5 |
| D309 | K-11 | D716 | C-1 | Q301 | F-17 |
| D310 | K-12 | D717 | B-1 | Q302 | F-17 |
| D311 | K-12 | D718 | B-4 | Q303 | E-10 |
| D312 | J-13 | D719 | B-3 | Q304 | E-10 |
| D313 | J-13 | D720 | B-4 | Q305 | I-16 |
| D314 | J-13 | D721 | B-4 | Q307 | H-15 |
| D315 | J-14 | D722 | C-1 | Q308 | K-14 |
| D321 | I-13 | D723 | B-1 | Q309 | G-4 |
| D322 | I-13 | D724 | A-1 | Q310 | G-5 |
| D323 | I-14 | D725 | B-1 | Q311 | F-15 |
| D325 | J-13 | D801 | I-22 | Q312 | G-5 |
| D326 | J-13 | D851 | I-21 | Q313 | J-14 |
| D327 | J-13 | | | Q314 | F-15 |
| D328 | J-12 | IC1 | H-18 | Q315 | E-11 |
| D329 | J-12 | IC2 | J-17 | Q316 | E-11 |
| D330 | J-12 | IC101 | I-15 | Q319 | F-3 |
| D331 | J-12 | IC102 | H-16 | Q323 | G-14 |
| D333 | G-15 | IC103 | H-14 | Q324 | G-14 |
| D334 | G-14 | IC104 | G-12 | Q325 | F-16 |
| D335 | G-15 | IC105 | G-7 | Q326 | F-16 |
| D336 | F-4 | IC106 | G-7 | Q327 | F-16 |
| D337 | I-14 | IC107 | G-7 | Q328 | F-18 |
| D338 | F-15 | IC108 | G-7 | Q329 | F-18 |
| D339 | G-14 | IC109 | F-12 | Q330 | F-18 |
| D340 | E-14 | IC110 | F-14 | Q332 | J-4 |
| D341 | F-16 | IC111 | G-16 | Q701 | A-16 |
| D342 | E-17 | IC301 | I-11 | Q702 | B-16 |
| D344 | F-17 | IC302 | G-11 | Q703 | B-11 |
| D345 | J-14 | IC501 | F-23 | Q704 | B-11 |
| D346 | G-11 | IC601 | F-21 | | |
| D347 | G-10 | IC701 | B-12 | | |
| D348 | H-11 | IC801 | I-22 | | |
| D591 | E-21 | IC802 | I-23 | | |


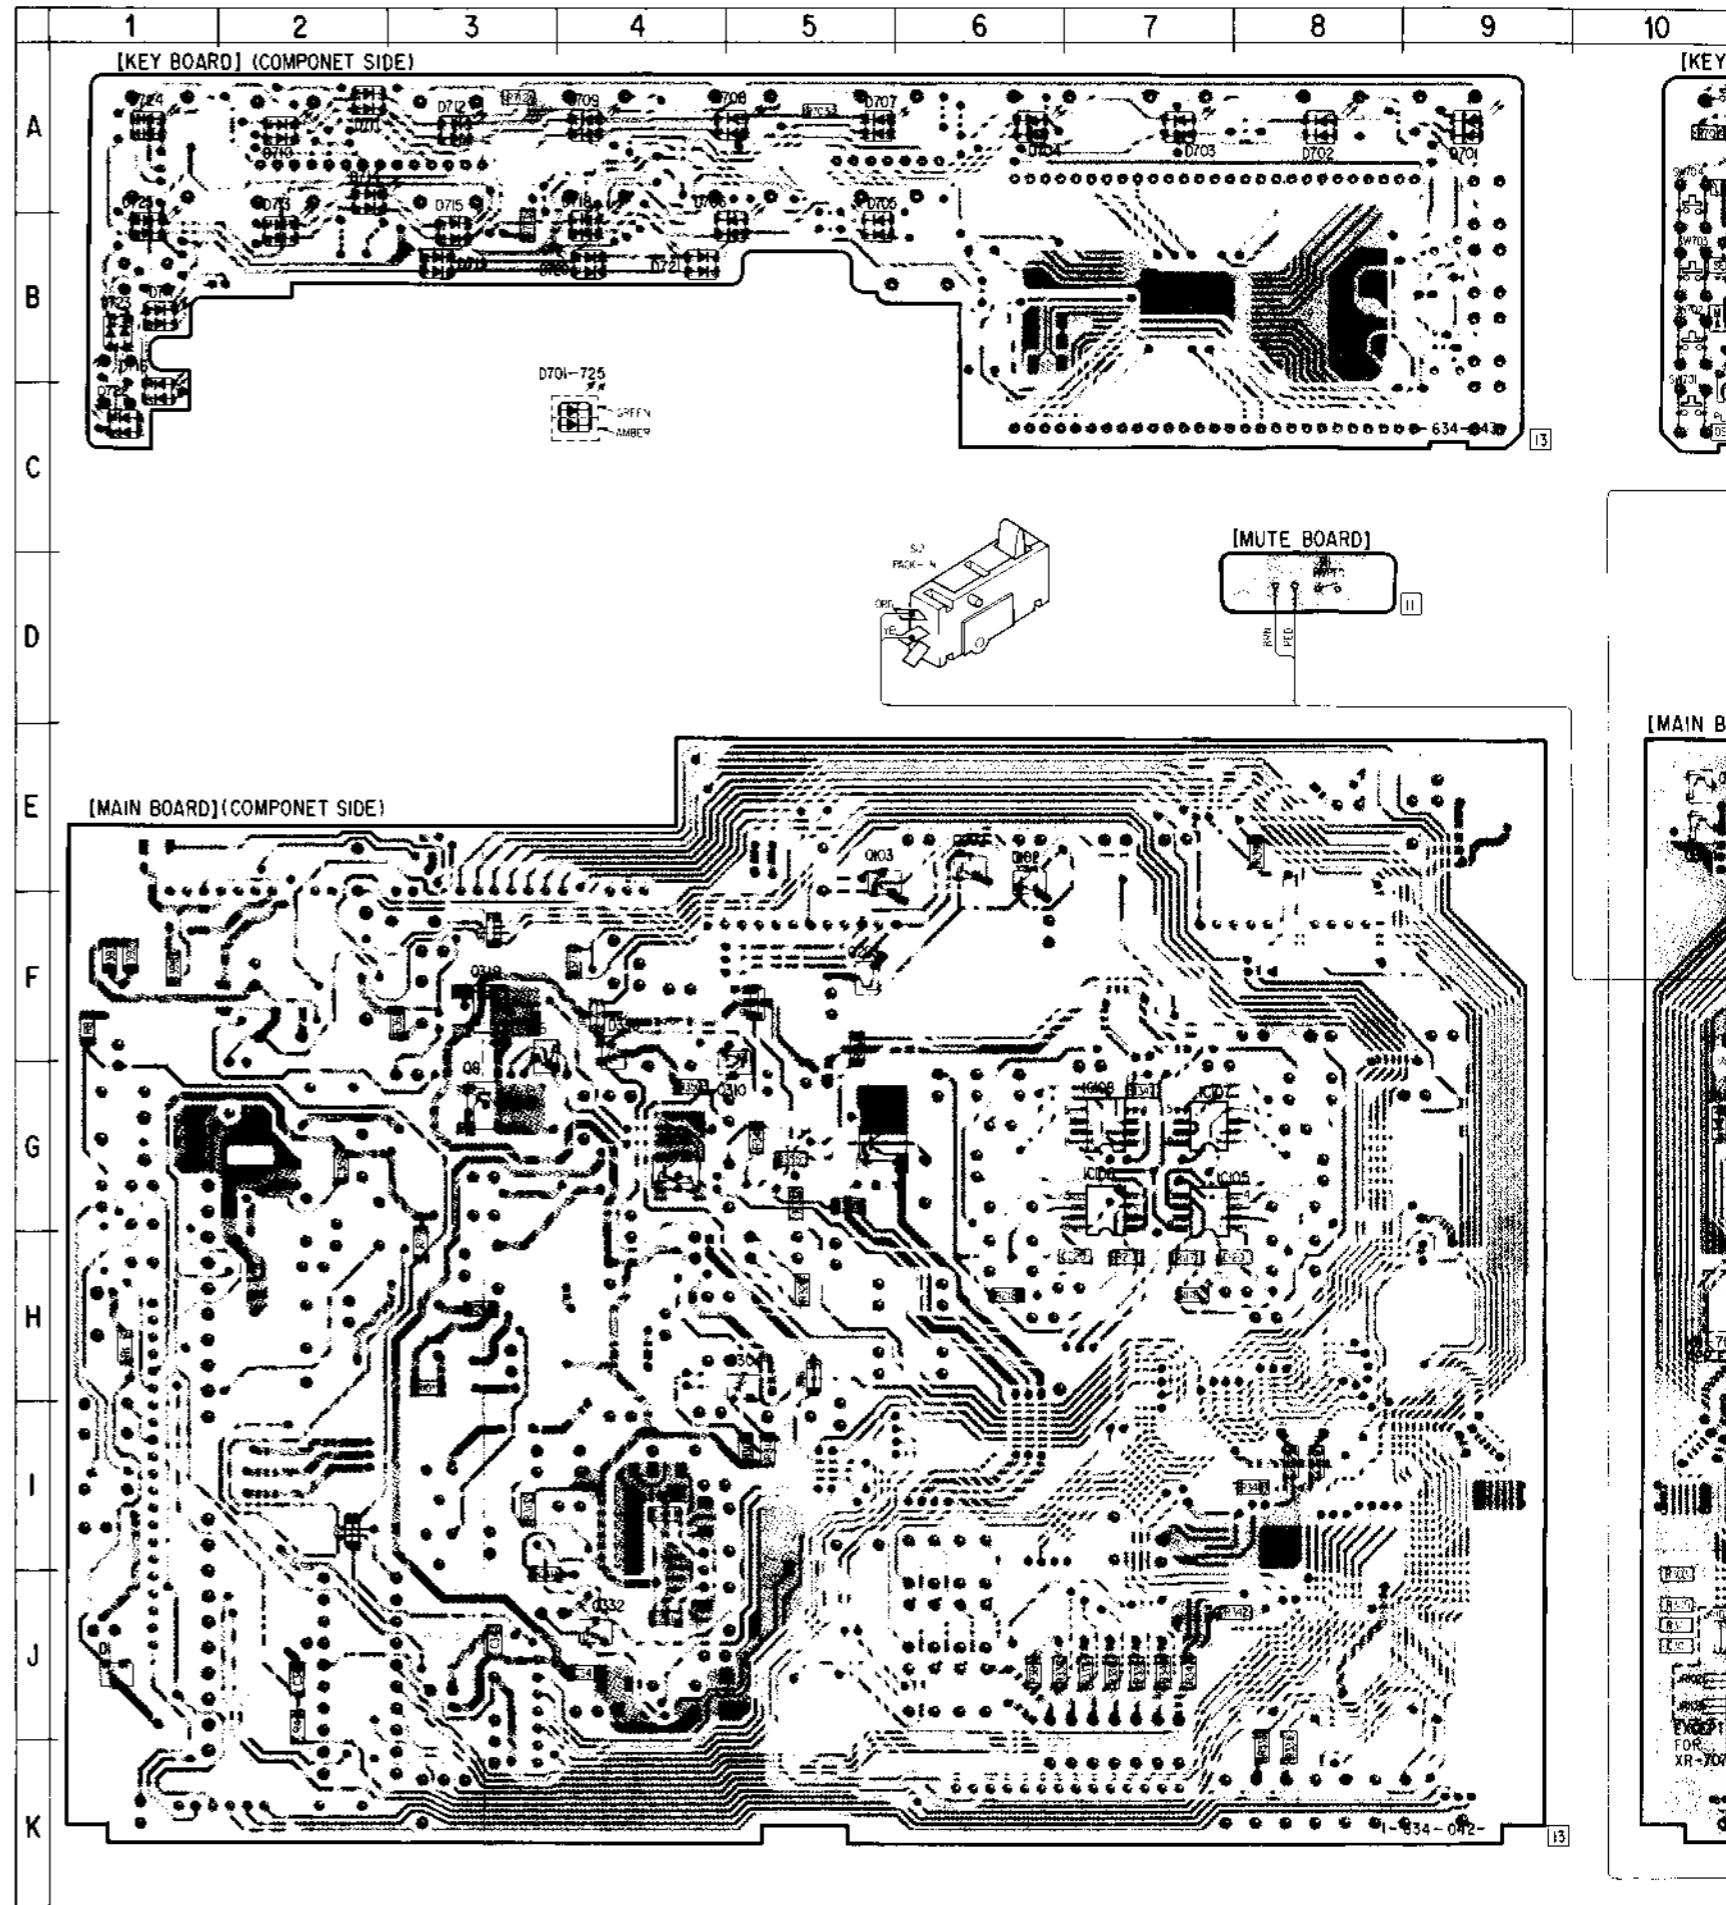


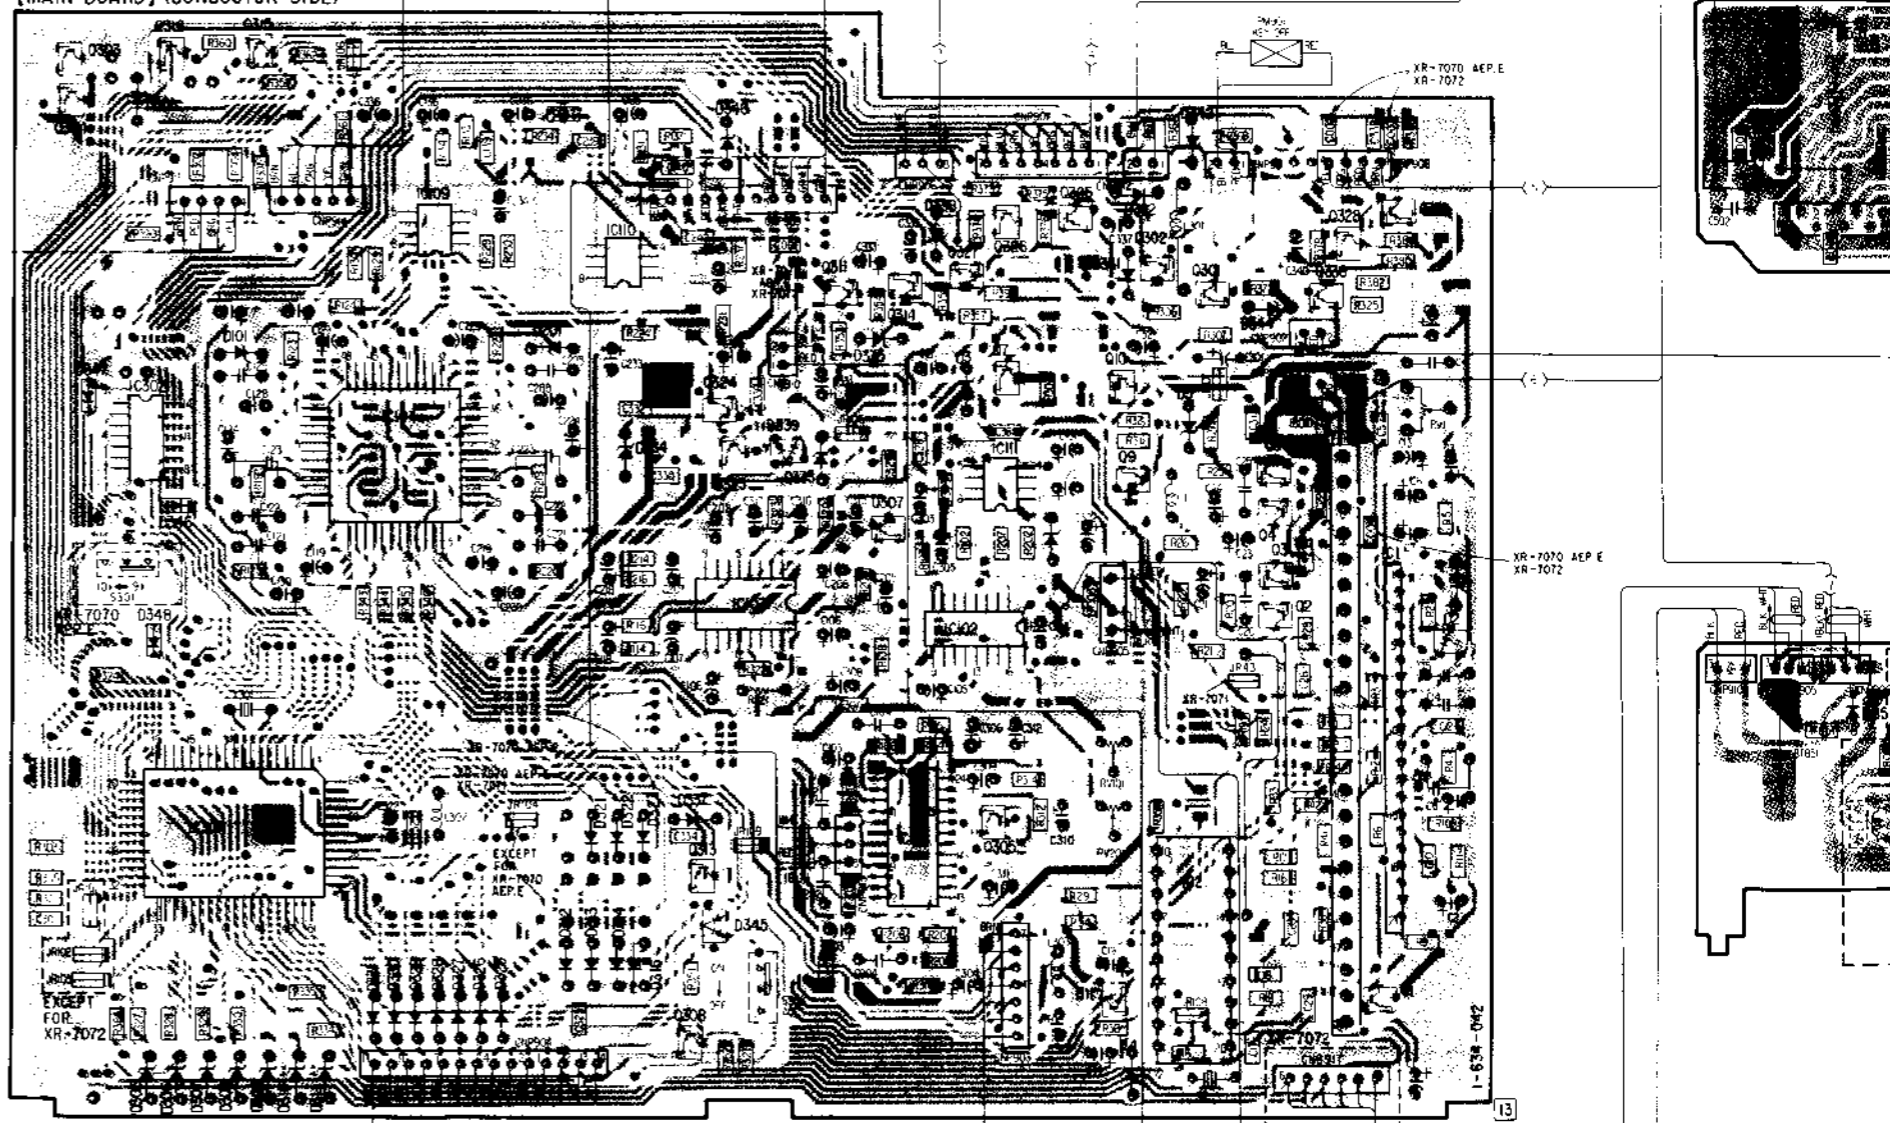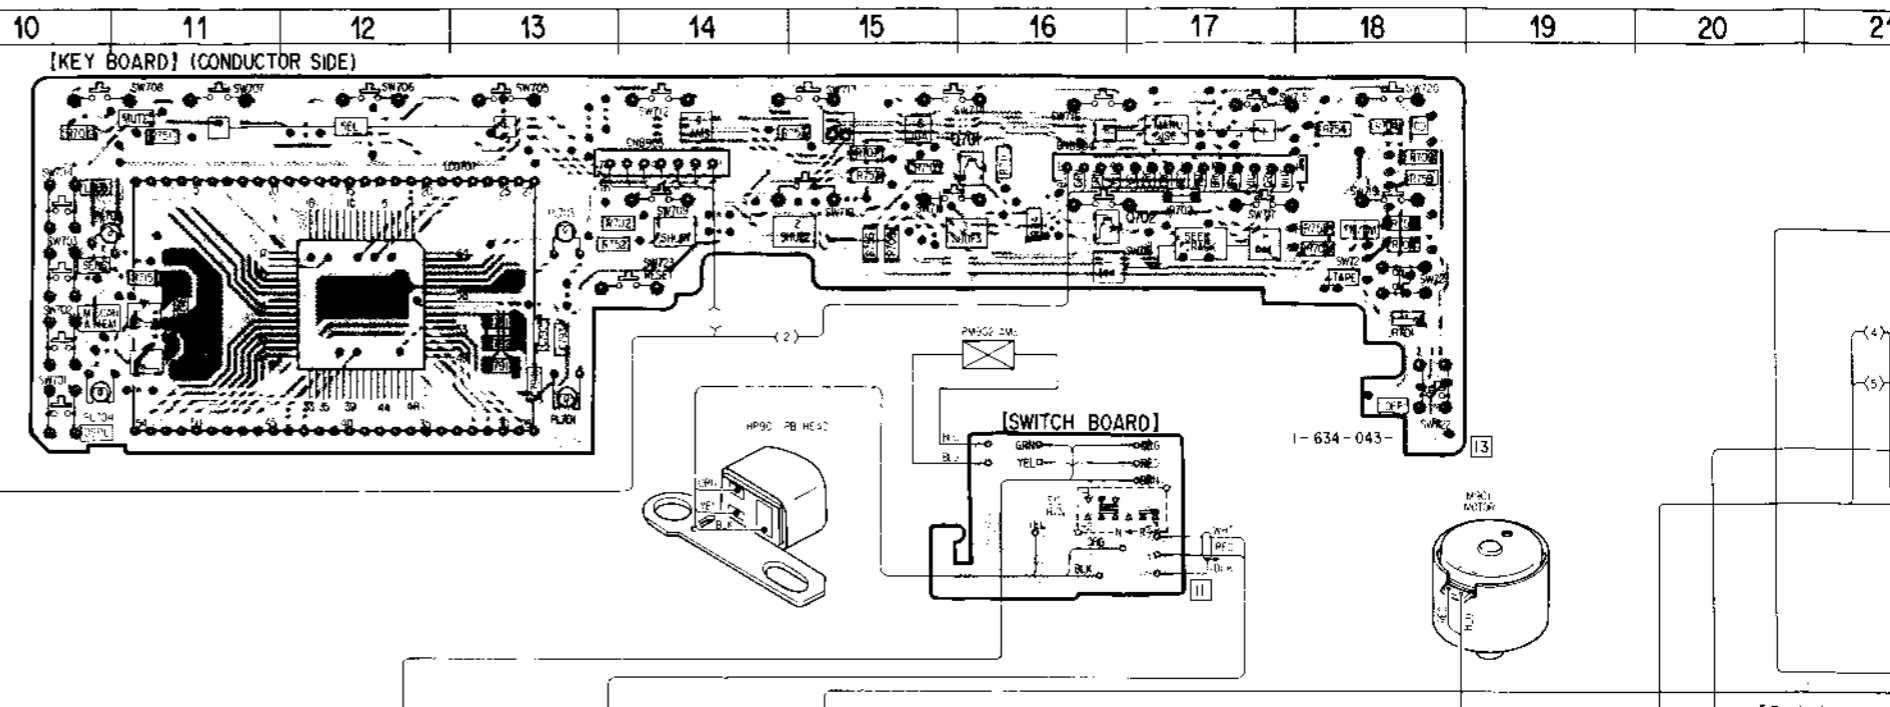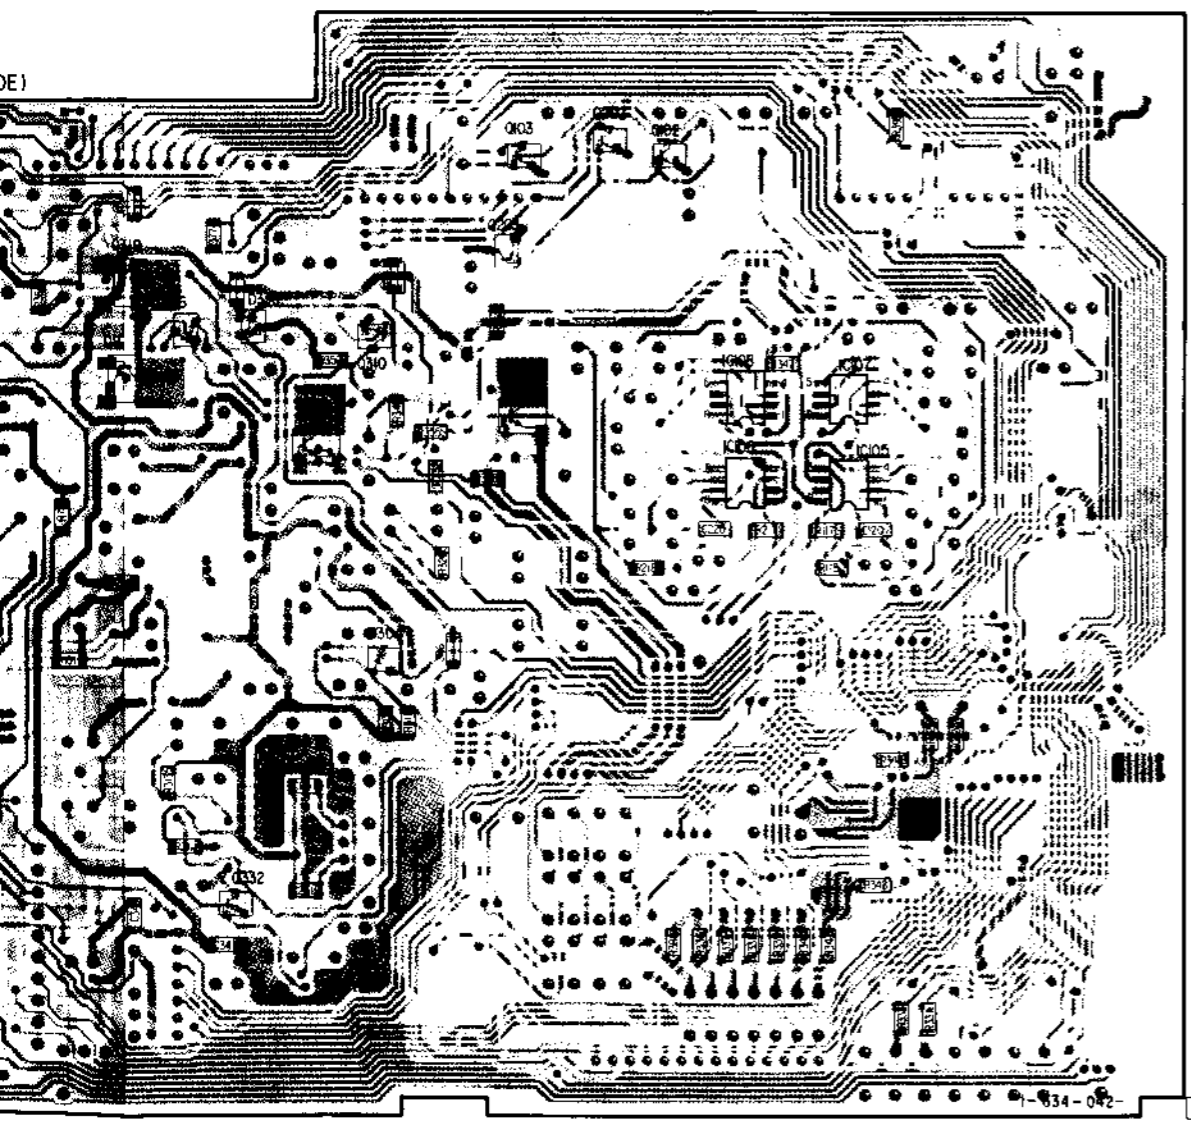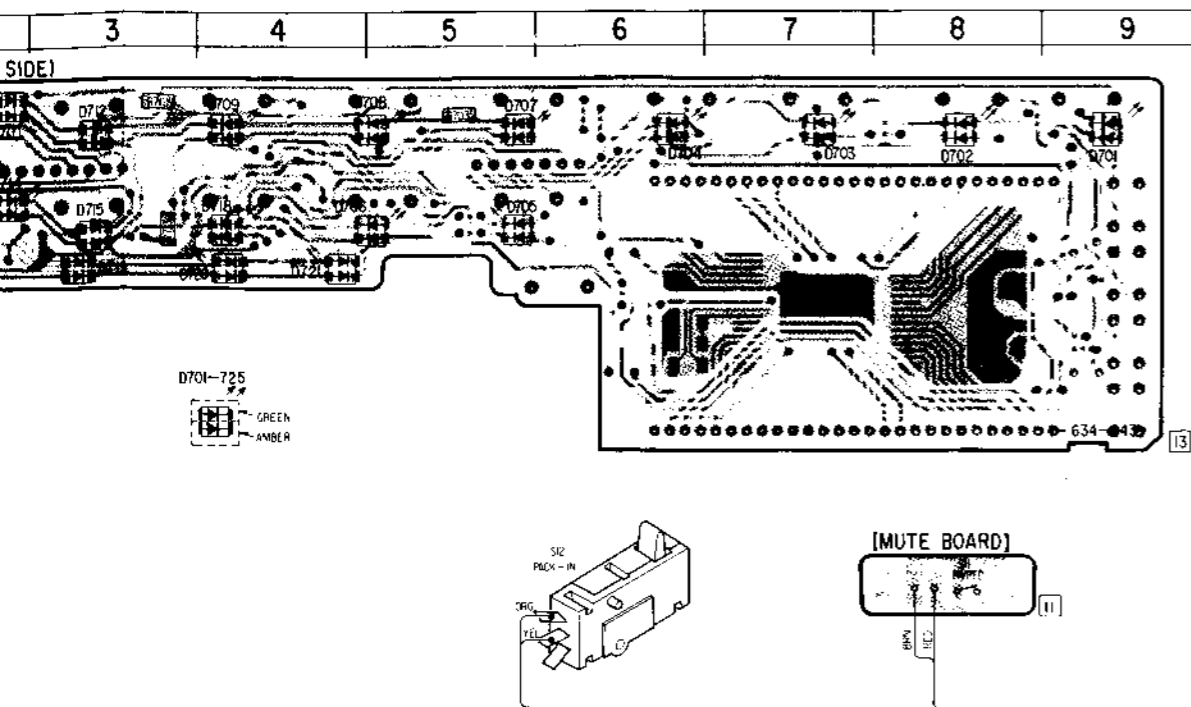


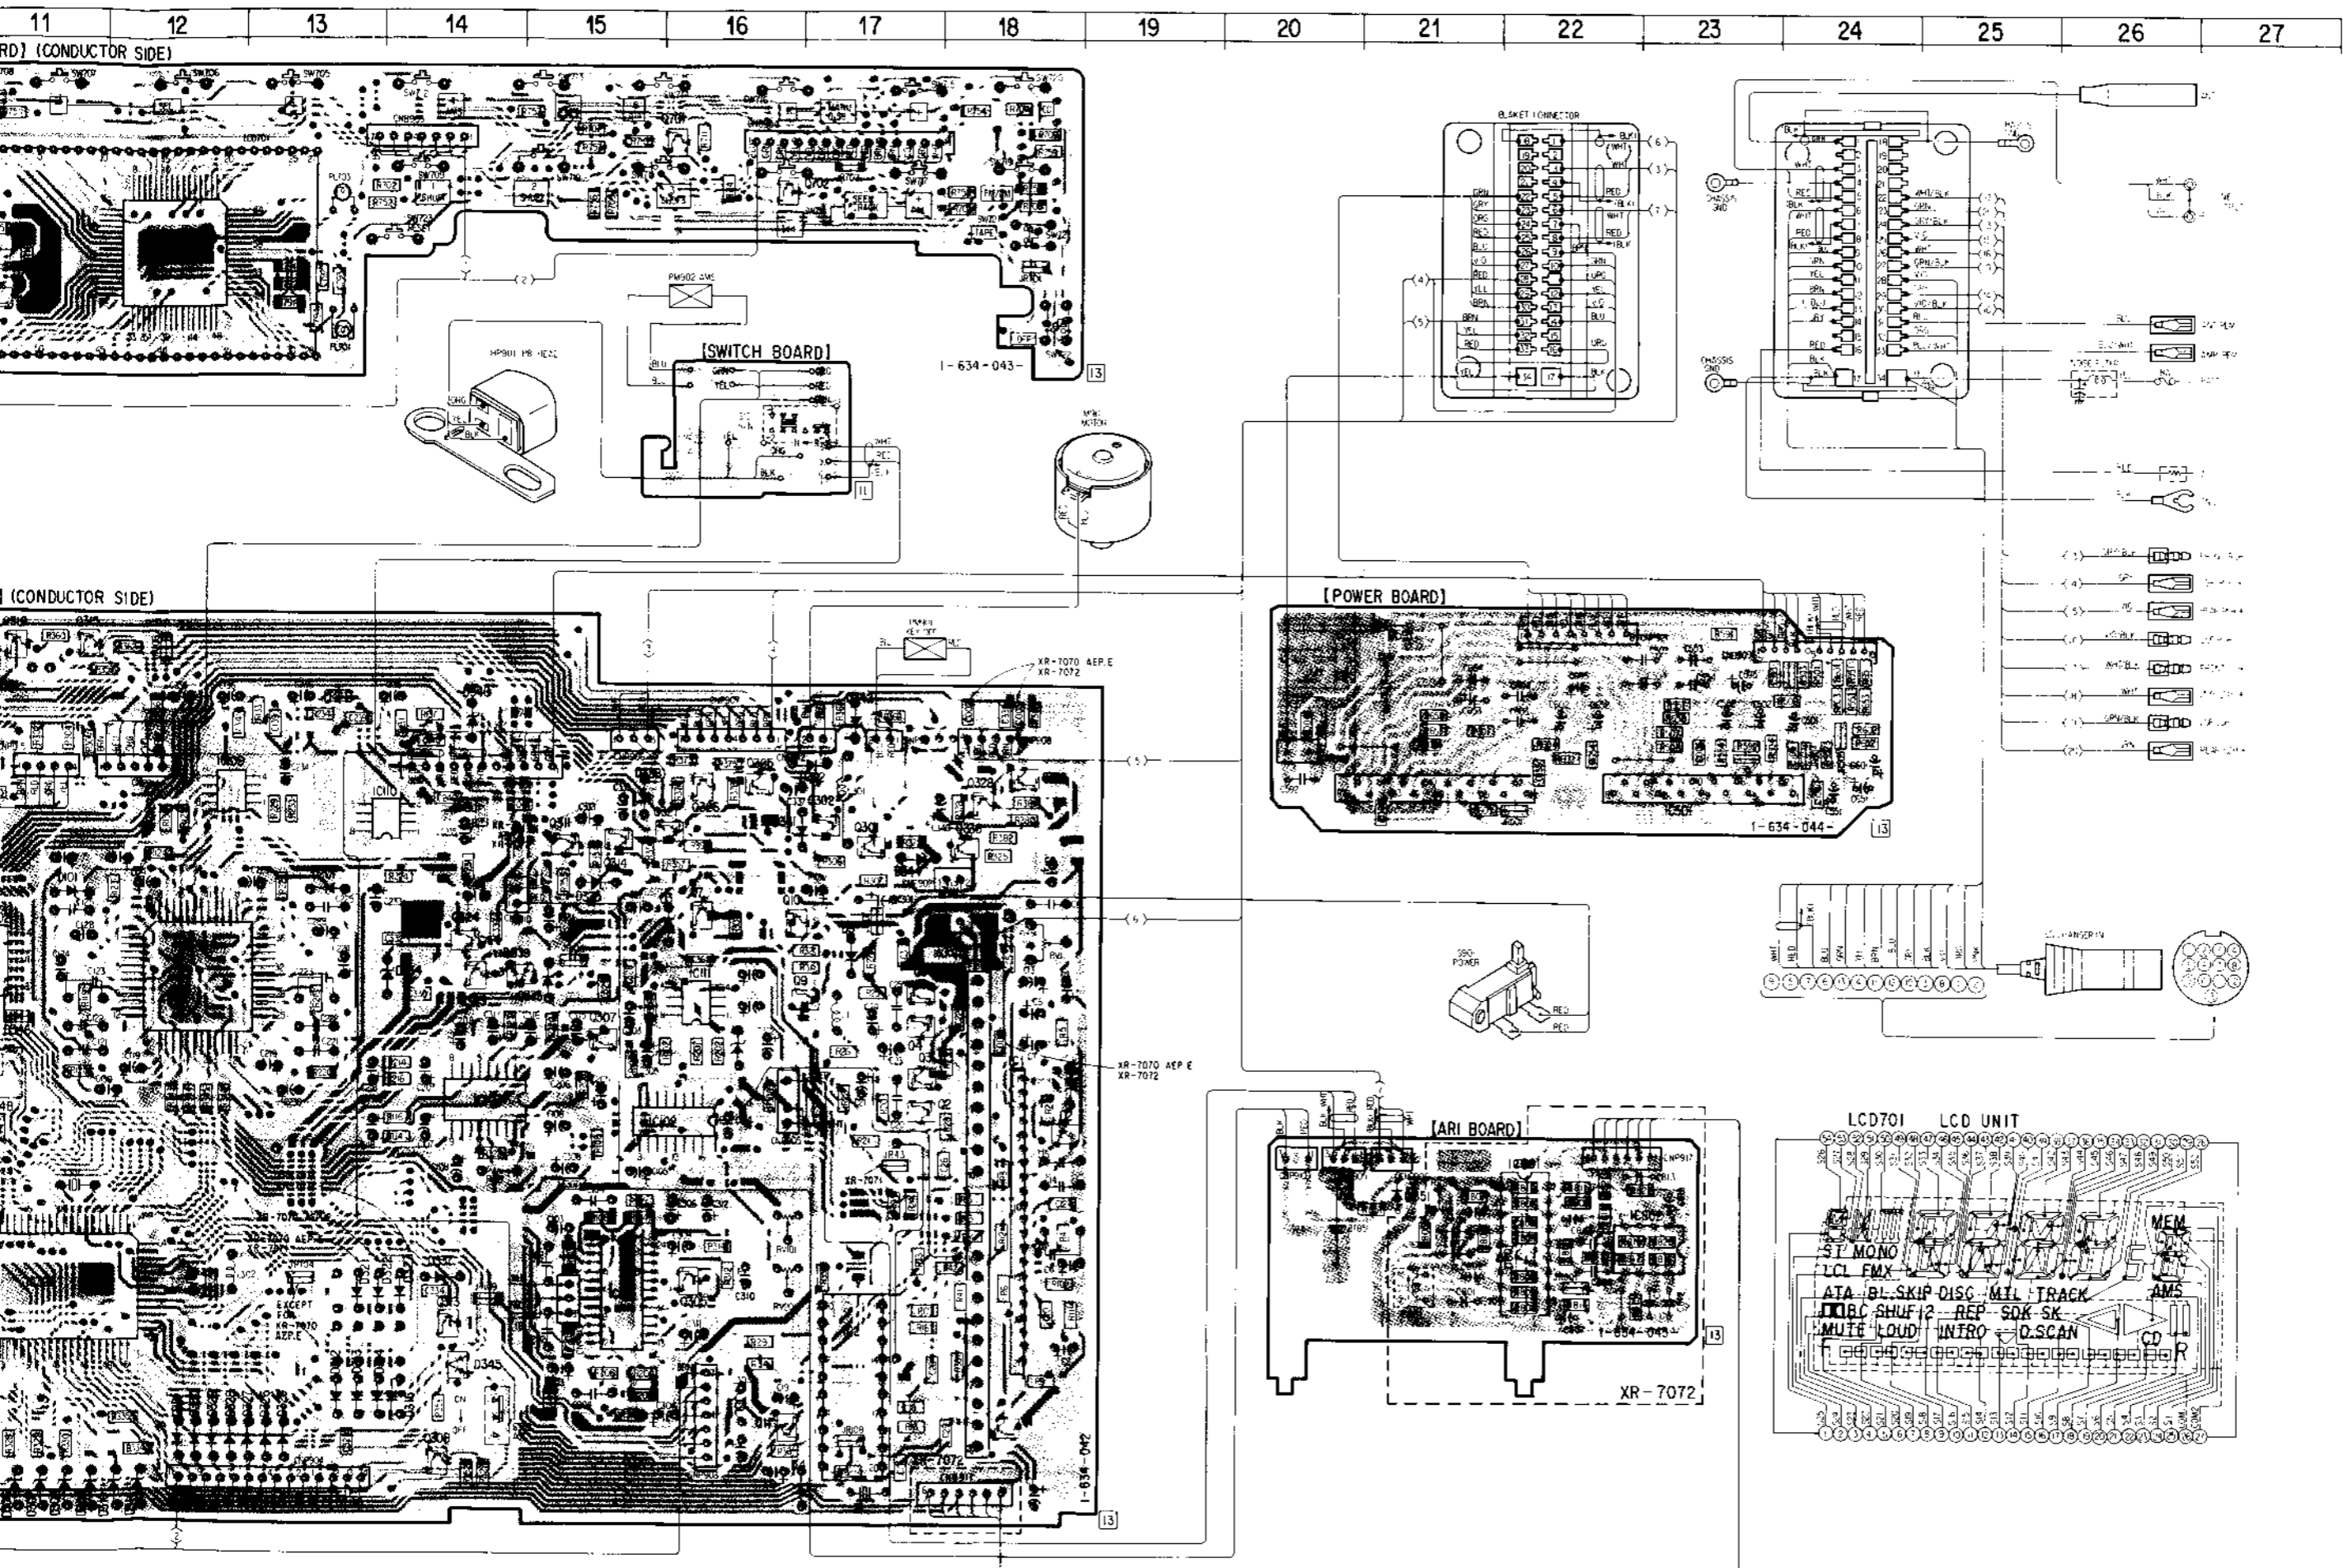

4-6. SCHEMATIC DIAGRAM (TYPE B: XR-7070 (Canadian/AEP/E)/7071/7072) and XR-7070 (US) Main board part number: 1-634-042-13 • See pages 20 and 21 for IC Block Diagrams.

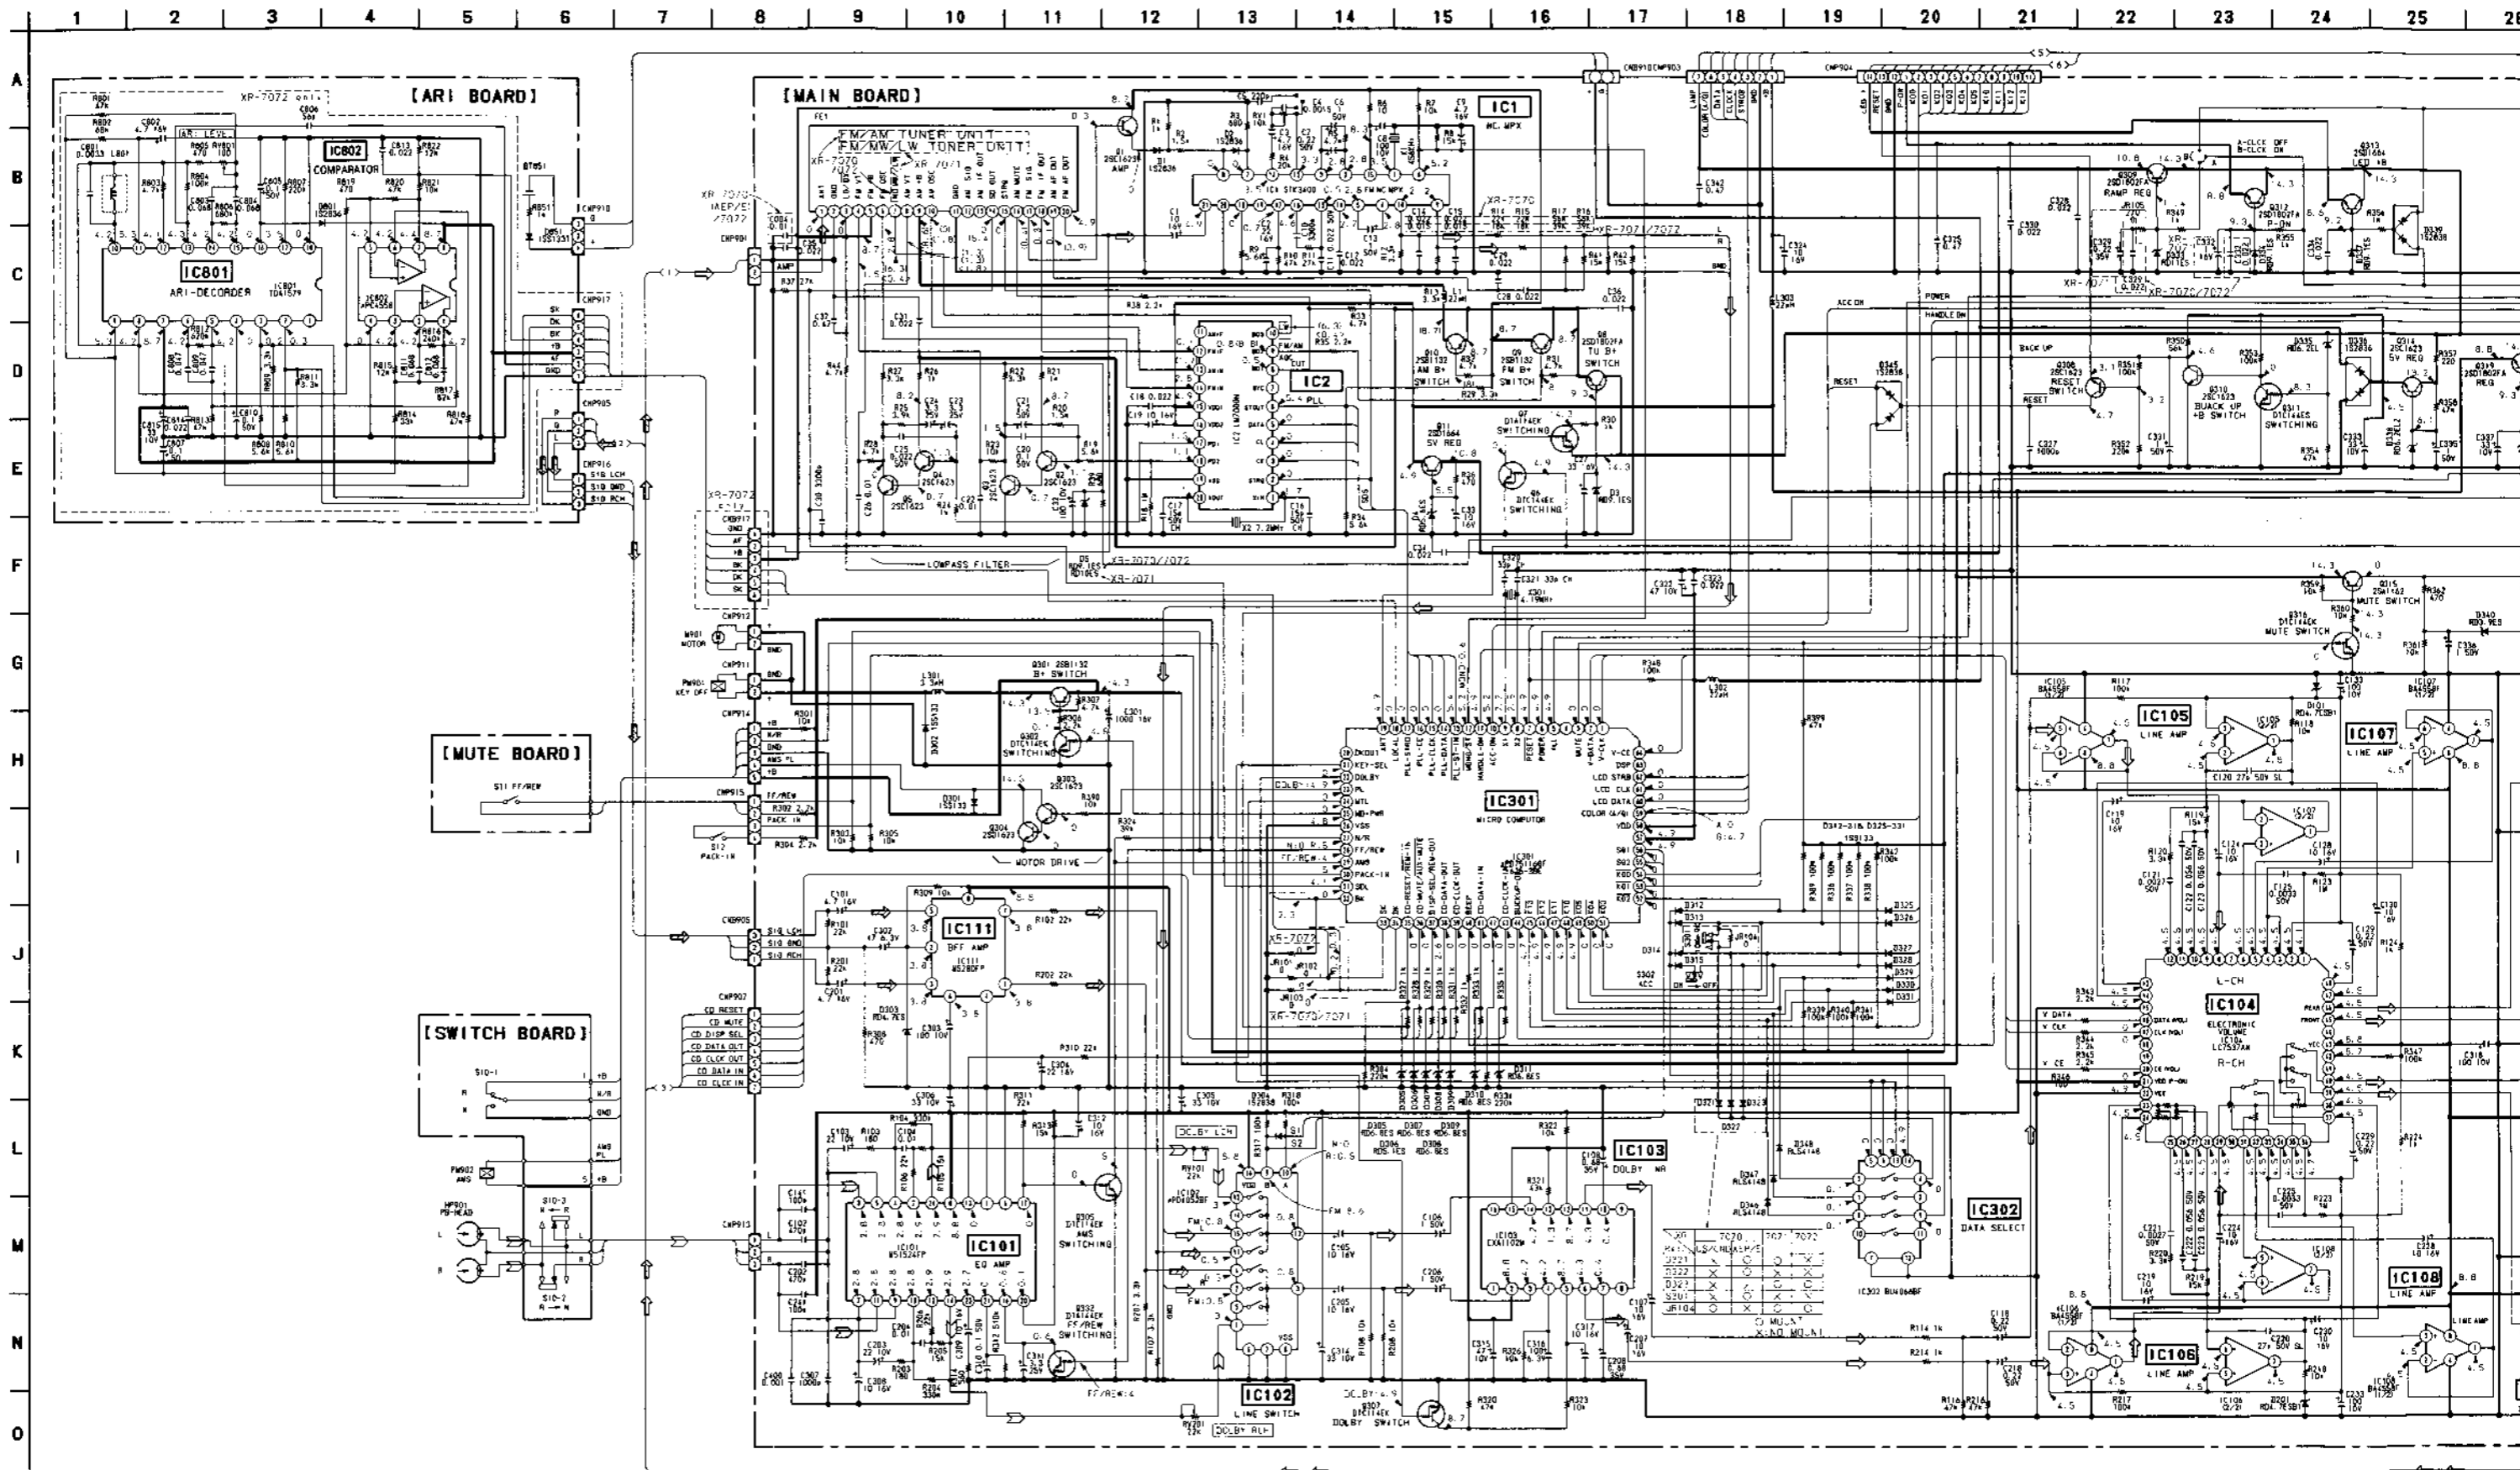

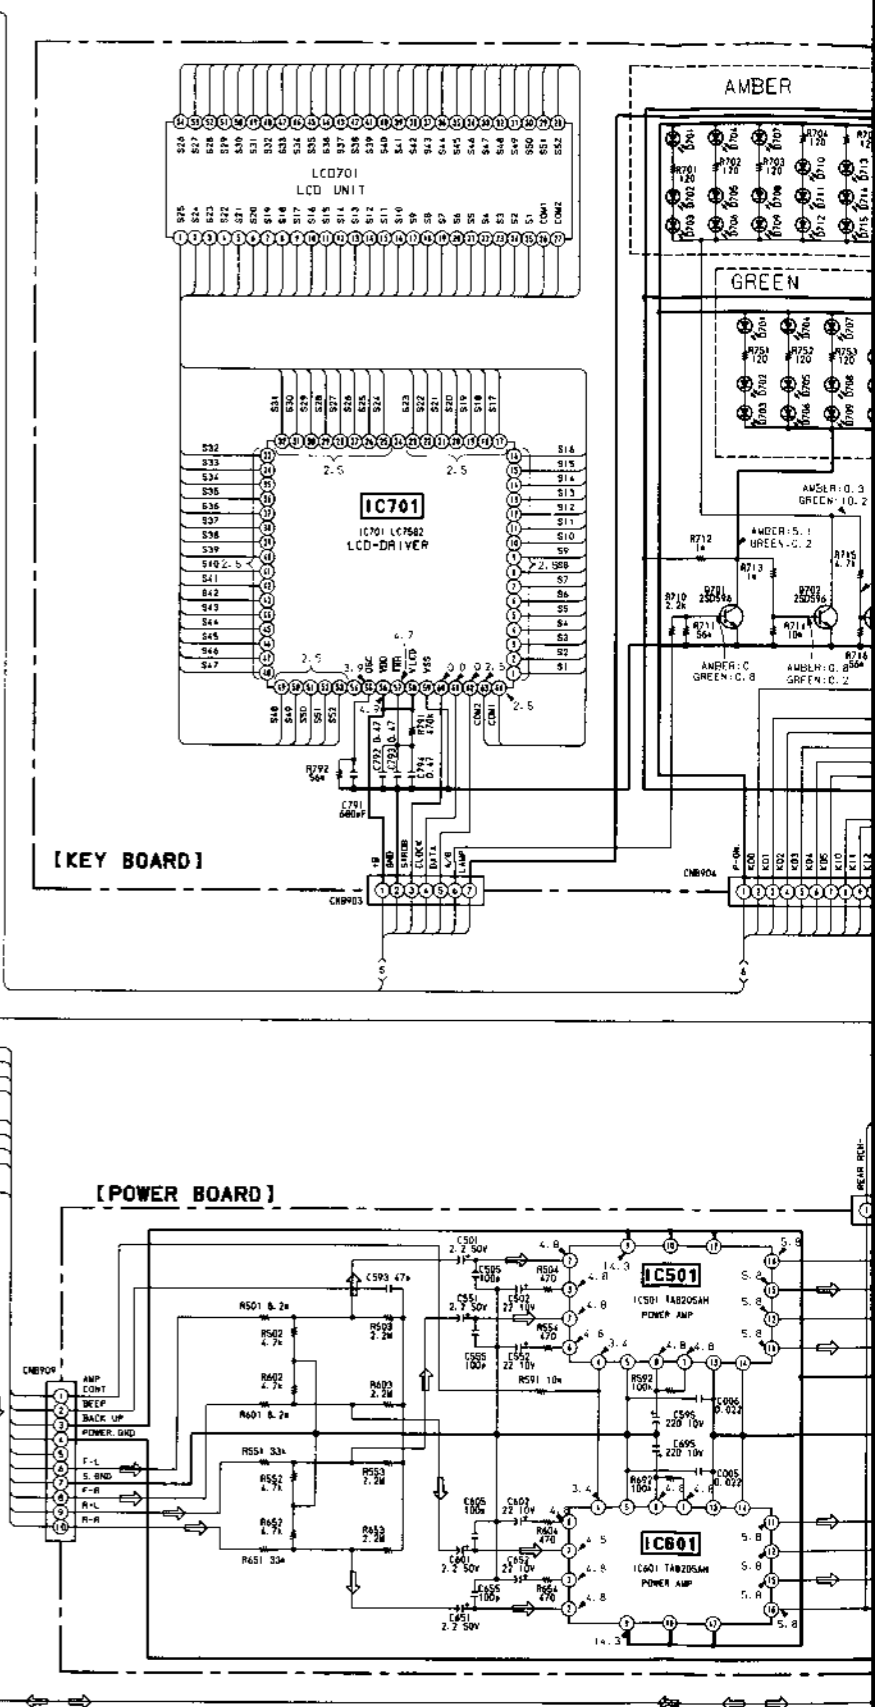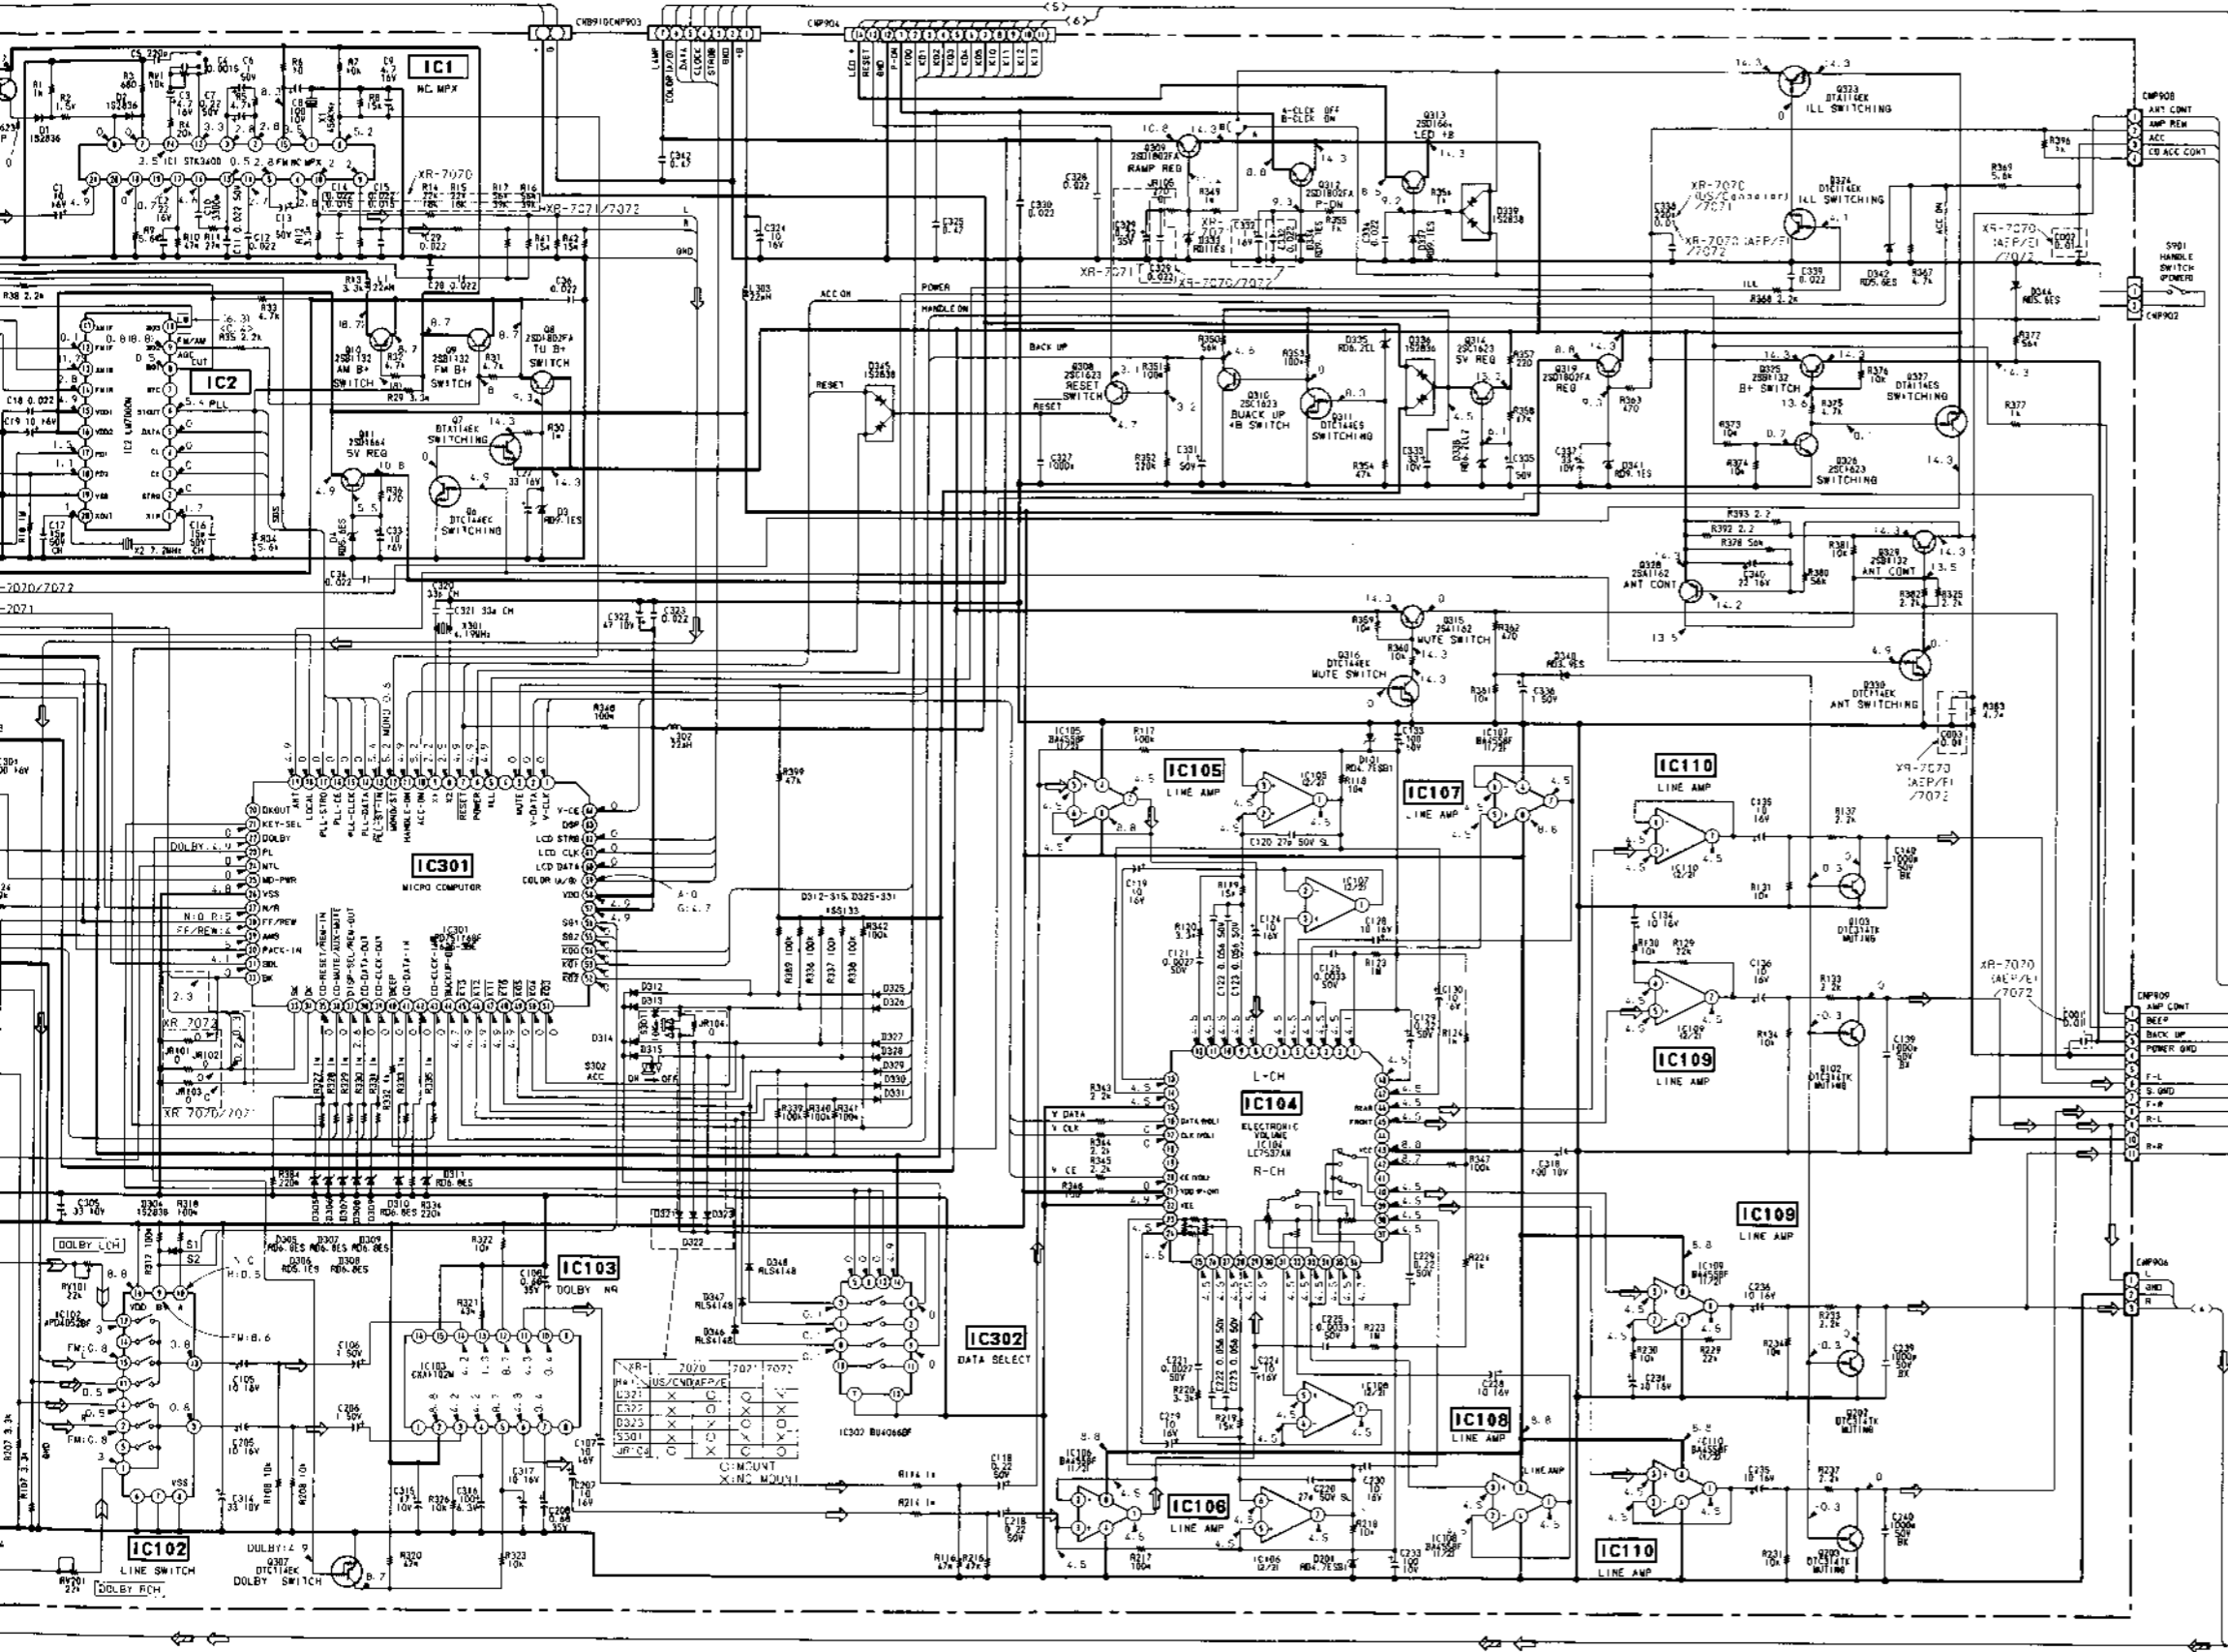

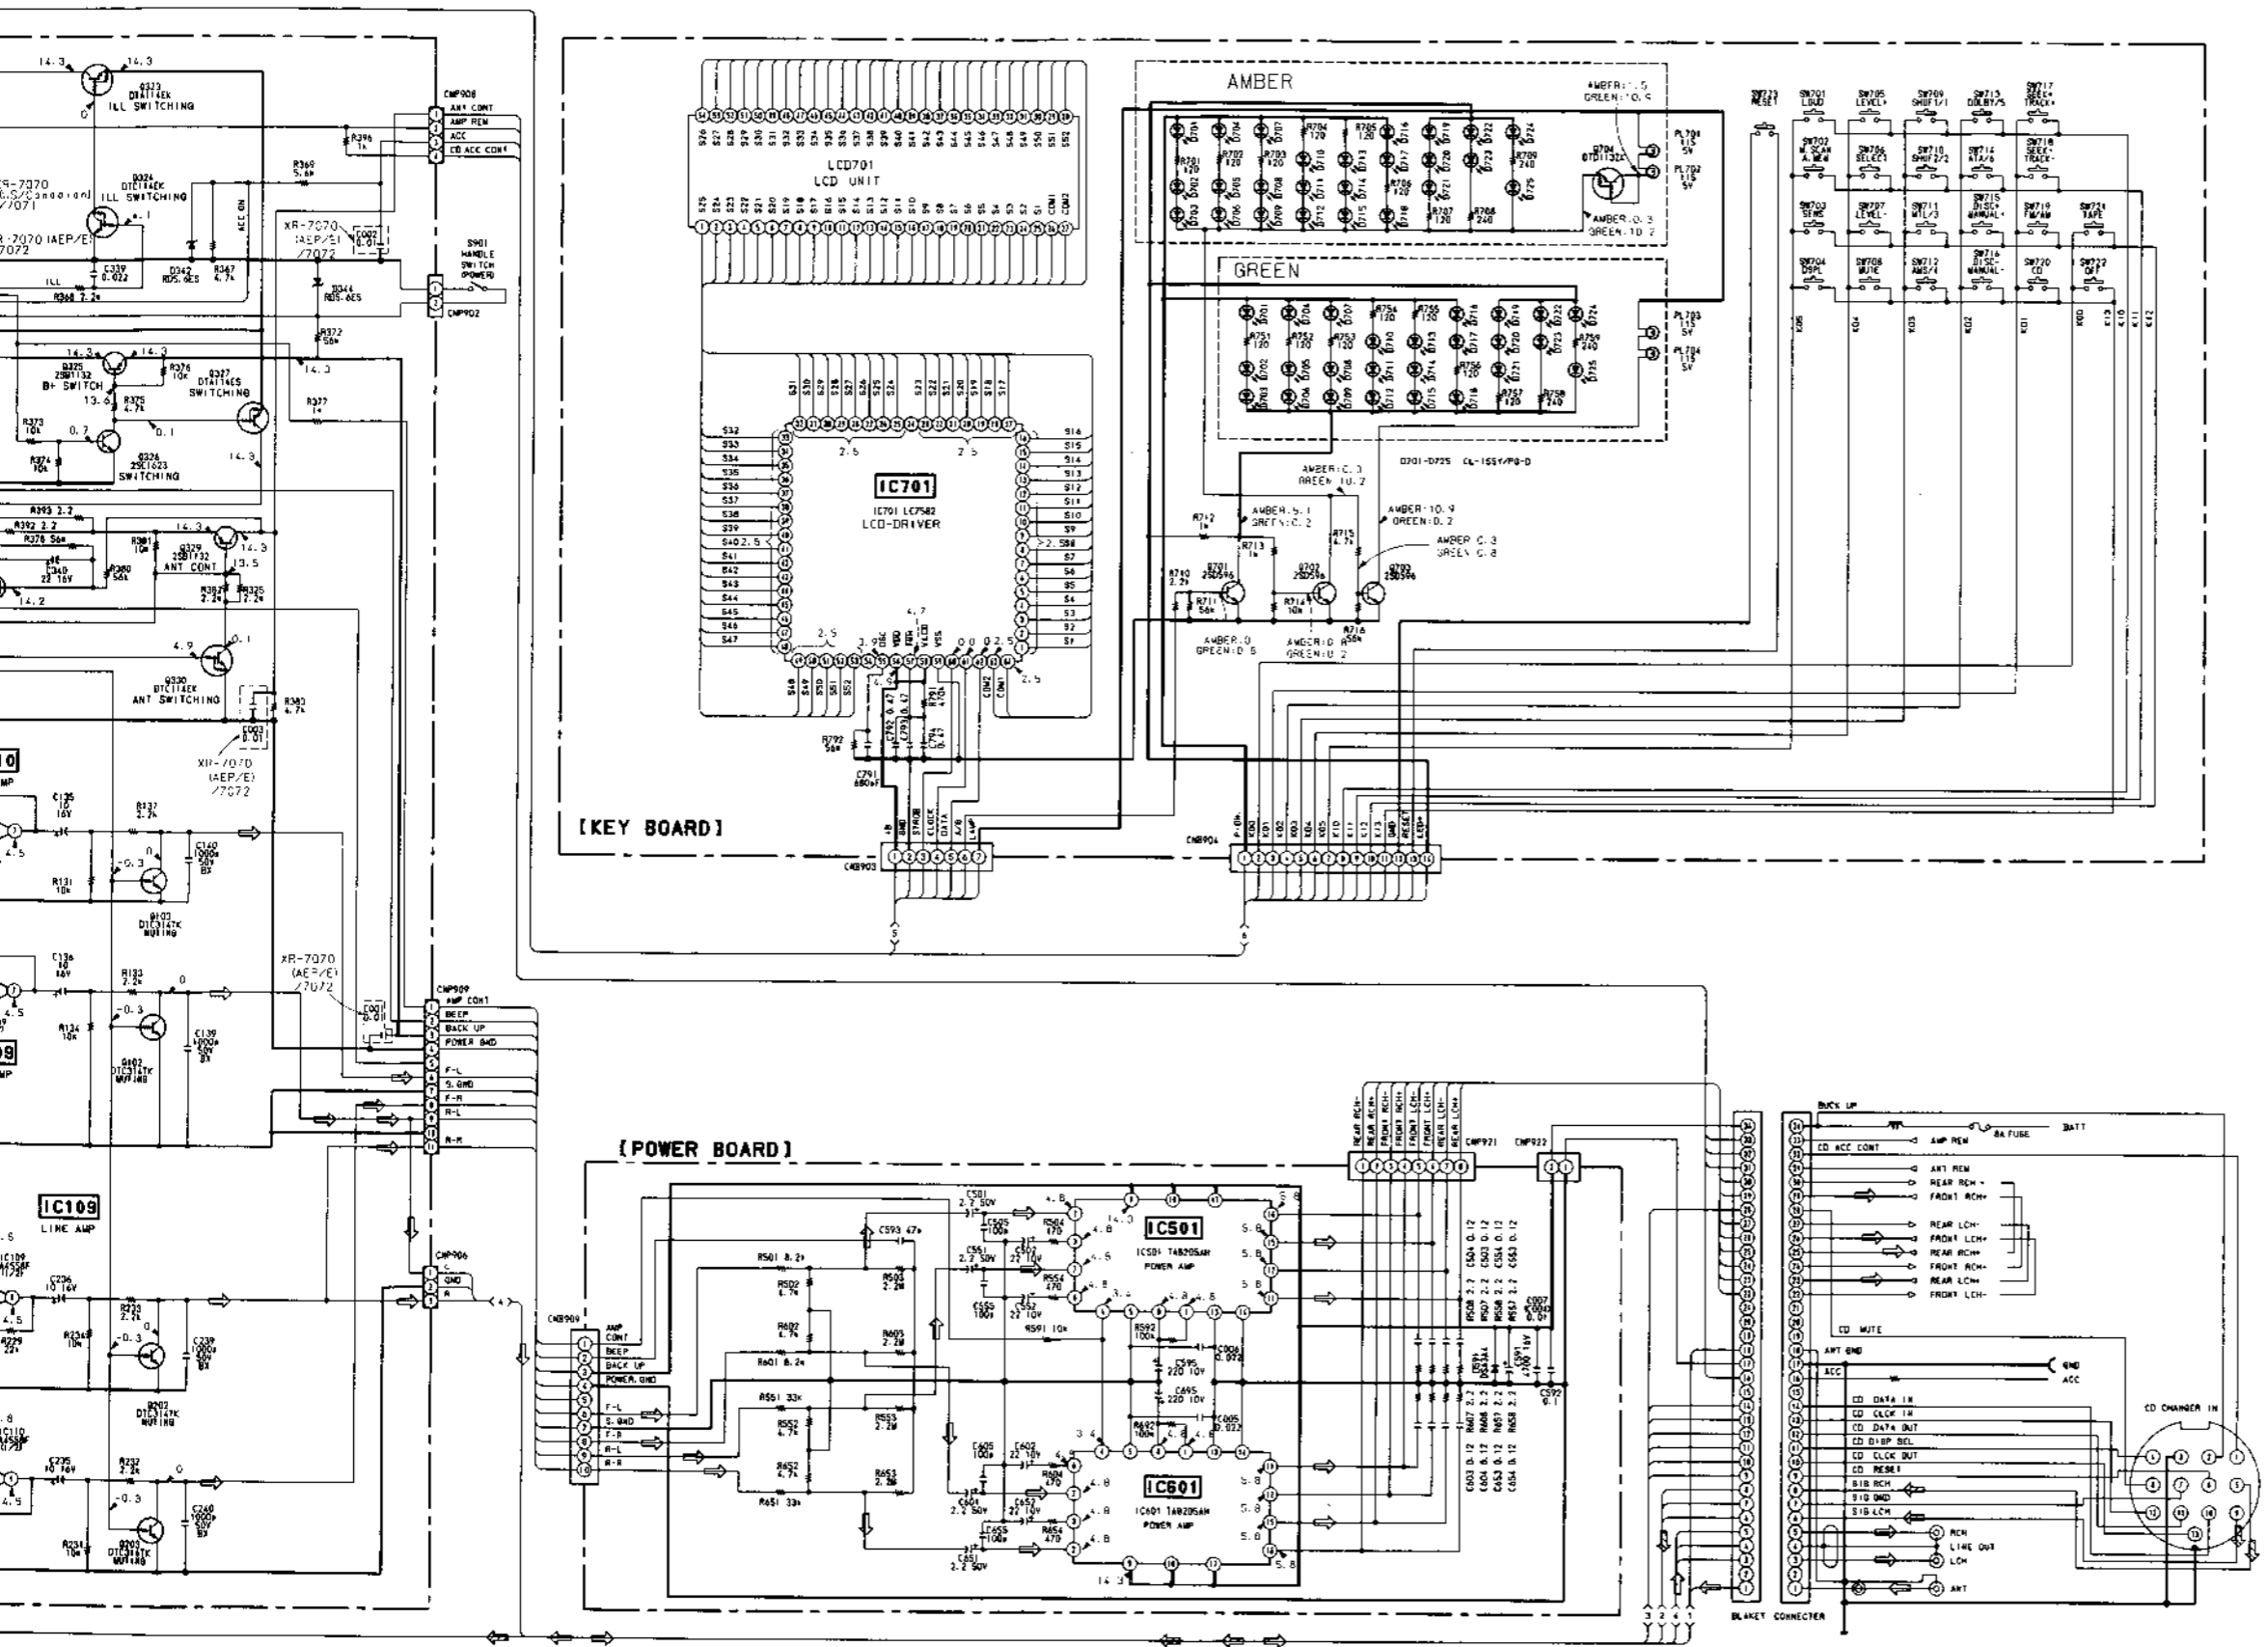

Note:

- All capacitors are in μF unless otherwise noted. pF : μF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}$ W or less unless otherwise specified.
- % : indicates tolerance.
- \triangle : internal component.
- \square : nonflammable resistor.
- B + Line.
- \square : adjustment for repair.
- Power voltage is dc 14.4 V and fed with regulated dc power supply from battery terminal.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- no mark : FM or PLAY
- () : AM, LW or MW
- [] : MW
- < > : LW
- Voltages are taken with a VOM (10 $\text{M}\Omega/\text{V}$). Voltage variations may be noted due to normal production tolerances.
- Signal path.
- \Rightarrow : FM
- \Rightarrow : PB
- \Rightarrow : CD


SECTION 5 EXPLODED VIEWS

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


- Due to standardization, parts with part number suffix -XX and -X may be different from the parts specified in the components used on the set.
- Color Indication of Appearance Parts
Example:
(RED) ... KNOB, BALANCE (WHITE)
↑ Cabinet's Color ↑ Parts Color

(1) FRONT PANEL SECTION

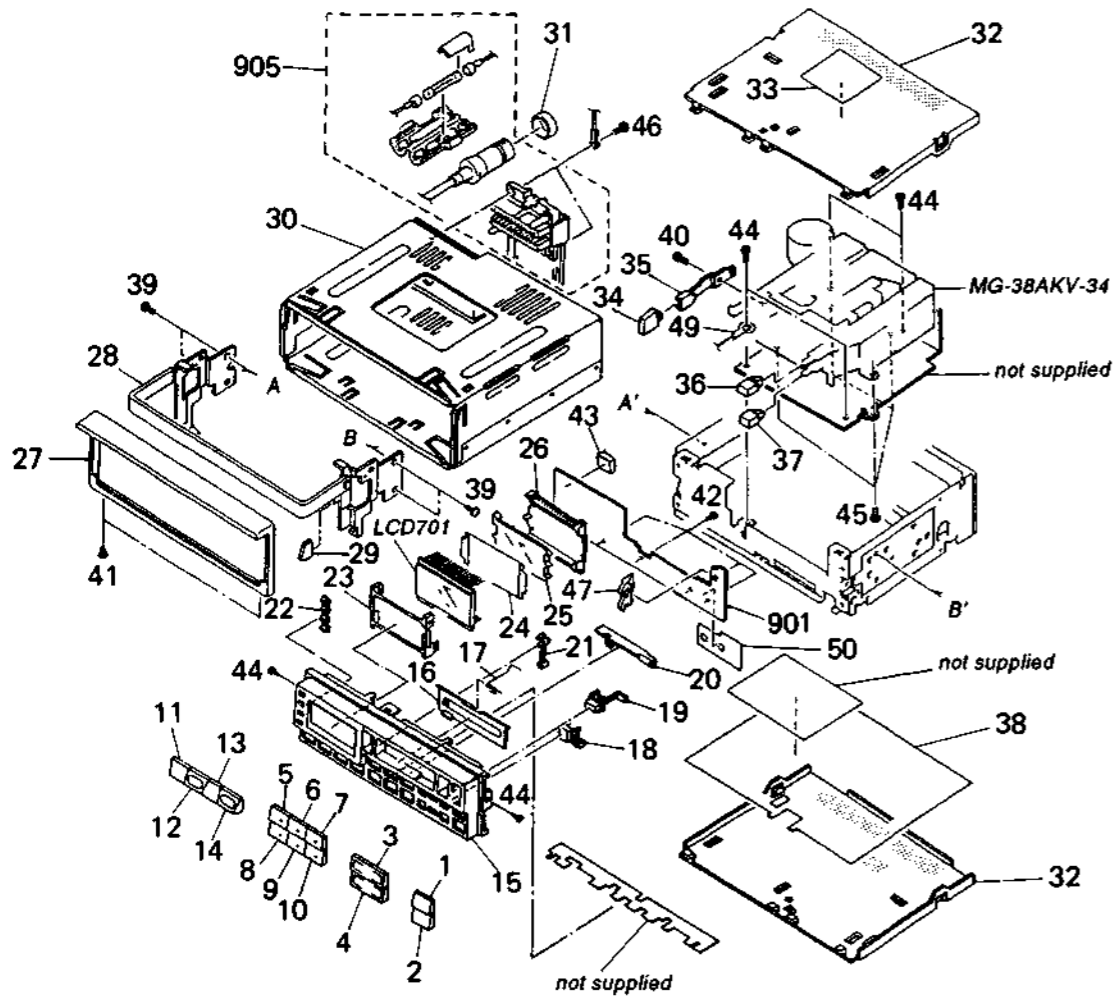

| No. | Part No. | Description | Remarks |
|--------|---|---|---------|
| 1 | 3-349-472-61 3-349-472-71 | (7070/7072)...BUTTON (M:N1)(FM/AM) (7071)...BUTTON (M:N1)(FM/MW/LW) | |
| 2 | 3-349-474-61 | BUTTON (RD:N1)(CD) | |
| 3 | 3-357-075-01 | BUTTON (M:S2)(SEEK, TRACK) | |
| 4 | 3-357-075-11 | BUTTON (M:S2)(MANU, DISK) | |
| 5 | 3-349-496-21 | BUTTON (M:N1P)(SHUF, 1) | |
| 6 | 3-349-496-31 | BUTTON (M:N1P)(SHUF, 2) | |
| 7 | 3-349-496-41 | BUTTON (M:N1P)(METAL, 3) | |
| 8 | 3-349-496-51 | BUTTON (M:N1P)(AMS, 4) | |
| 9 | 3-349-471-71 | BUTTON (M:N1P)(DOLBY, 5) | |
| 10 | 3-349-496-11 | BUTTON (M:N1P)(ATA, 6) | |
| 11 | 3-357-071-01 3-357-071-11 | (7070/7071)...BUTTON (MUTE) (7072)...BUTTON (SDK) | |
| 12 | 3-357-072-01 | BUTTON (LEVEL, -) | |
| 13 | 3-357-073-01 | BUTTON (SELECT) | |
| 14 | 3-357-074-01 | BUTTON (LEVEL, +) | |
| 15 | 3-357-070-01 | PANEL, FRONT | |
| 16 | 3-357-083-01 3-357-083-11 3-357-083-21 | (7070)...DOOR, CASSETTE (7072)...DOOR, CASSETTE (7071)...DOOR, CASSETTE | |
| 17 | 3-349-454-01 | SPRING (C DOOR), TORSION | |
| 18 | 3-357-077-01 | BUTTON (TAPE) | |
| 19 | 3-357-076-01 | BUTTON (OFF) | |
| 20 | 3-357-084-01 | PLATE (C DOOR), LIGHT GUIDE | |
| 21 | 3-357-078-01 | BUTTON (RESET) | |
| 22 | 3-357-082-01 | BUTTON (4 GANG) (W) | |
| 23 | 3-357-091-01 | PLATE (LCD), GROUND | |
| 24 | 3-349-440-11 | SHEET (REFLECTOR) | |
| 25 | *3-357-086-01 | PLATE (LCD), LIGHT GUIDE | |
| 26 | *3-357-087-01 | HOLDER (LCD) | |
| 27 | 3-344-564-01 | FRAME, ORNAMENTAL | |
| 28 | X-3344-508-1 | HANDLE ASSY | |
| 29 | 3-344-526-02 | BUTTON (RELEASE) | |
| 30 | *X-3344-509-3 | BRACKET ASSY | |
| 31 | 3-566-347-00 | COVER (A), CONNECTOR | |
| 32 | *3-353-402-51 | COVER | |
| 33 | *3-357-095-01 *3-362-782-01 *3-362-783-01 *3-362-784-01 *3-363-354-01 | (7070(US))...LABEL, MODEL NUMBER(U) (7070(AEP,E))...LABEL, MODEL NUMBER(AE) (7071)...LABEL, MODEL NUMBER(AE) (7072)...LABEL, MODEL NUMBER(AE6) (7070(Canadian))...LABEL, MODEL NUMBER(CA) | |
| 34 | 3-357-081-01 | BUTTON (EJECT) | |
| 35 | *3-357-092-01 | LEVER (ELECT) | |
| 36 | 3-357-079-01 | BUTTON (FF) | |
| 37 | 3-357-080-01 | BUTTON (REW) | |
| 38 | *3-344-560-01 *3-344-560-41 | (7070(US,Canadian)/7071/7072) ...INSULATOR (3) (7070(AEP,E))...INSULATOR (3) | |
| 39 | 3-344-561-21 | SCREW (M4X4) | |
| 40 | 4-885-599-00 | SCREW, FITTING, REINFORCEMENT | |
| 41 | 7-627-553-38 | SCREW, PRECISION +P 2X3 | |
| 42 | 7-685-103-19 | SCREW +P 2X5 TYPE2 NON-SLIT | |
| 43 | 9-911-841-XX | CUSHION SP | |
| 44 | 7-621-770-87 | SCREW +PTT 2.6X5 (S) | |
| 45 | 7-621-773-86 | SCREW +PTT 2.6X4 (S) | |
| 46 | 7-682-652-09 | SCREW +PSW 3X16 | |
| 47 | 3-357-085-01 | PLATE (F/R), LIGHT GUIDE | |
| 49 | 7-623-507-01 | LUG, 2.6 | |
| 50 | *3-358-654-01 | SHEET (KEY), INSULATING | |
| 901 | *A-3270-740-A | MOUNTED PCB (B), KEY | |
| 905 | 1-575-559-11 1-575-559-22 | (7070(US,Canadian))...CORD, CONNECTOR (7070(AEP,E)/7071/7072)...CORD, CONNECTOR | |
| LCD701 | 1-808-975-11 | DISPLAY PANEL, LIQUID CRYSTAL | |


(2) CHASSIS SECTION

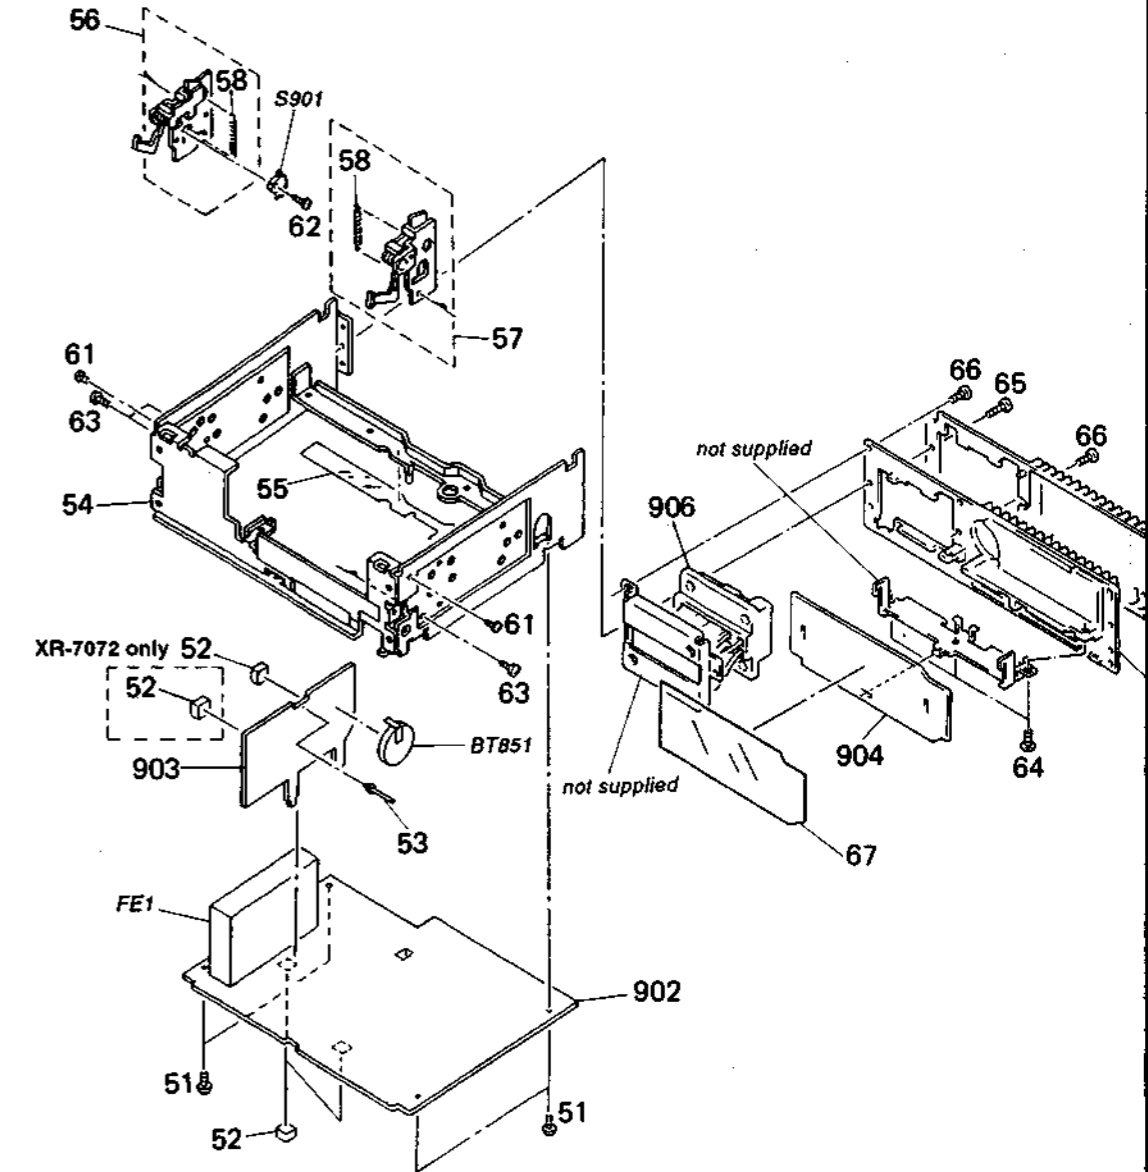

| No. | Part No. | Description | Remarks | No. | Part No. | Description | Remarks |
|-----|---------------|---------------------------------|---------|-------|--|--|---------|
| 51 | 3-344-501-11 | SCREW (+ PTT 3X8), GROUND POINT | | 66 | 7-682-547-04 | SCREW +PTT 3X6 (S) | |
| 52 | 9-911-841-XX | CUSHION, CASSETTE LID | | 67 | *3-358-653-01 | SHEET (POWER), INSULATING | |
| 53 | *3-847-723-00 | PIN, LEAD | | 902 | *A-3222-037-A *A-3222-153-A *A-3222-171-A *A-3222-187-A | (7070(US,Canadian))... (7071)...PC BOARD (7072)...PC BOARD (7070(AEP,E))...PC BOARD | |
| 54 | *X-3344-517-1 | CHASSIS ASSY | | 903 | *A-3273-192-A *1-634-045-11 | (7072)...MOUNTED PCB (7070/7071)...PC BOARD | |
| 55 | *3-357-098-01 | INSULATOR (CHASSIS) | | 904 | *A-3271-491-A | MOUNTED PCB, POWER | |
| 56 | X-3344-502-1 | LOCK ASSY (LEFT) | 58 | 906 | 1-575-560-11 | CORD, CONNECTOR | |
| 57 | X-3344-503-1 | LOCK ASSY (RIGHT) | 58 | BT851 | 1-528-225-31 | BATTERY, LITHIUM | |
| 58 | 3-645-189-00 | SPRING, TENSION | | FE1 | 1-465-141-11 1-465-405-11 | (7071)...TUNER UNIT (7070/7072)...TUNER | |
| 59 | *3-357-093-01 | HEAT SINK | | S901 | 1-570-771-11 | SWITCH (POWER) | |
| 60 | *3-357-097-01 | COVER | | | | | |
| 61 | 7-627-553-38 | SCREW, PRECISION +P 2X3 | | | | | |
| 62 | 7-621-283-00 | SCREW +P 2X5 | | | | | |
| 63 | 7-621-773-86 | SCREW +PTT 2.6X4 (S) | | | | | |
| 64 | 7-685-132-19 | SCREW +P 2.6X5 TYPE2 SLIT | | | | | |
| 65 | 7-621-770-XX | SCREW +PTT 2.6X8 (S) | | | | | |


Remarks

(2) CHASSIS SECTION

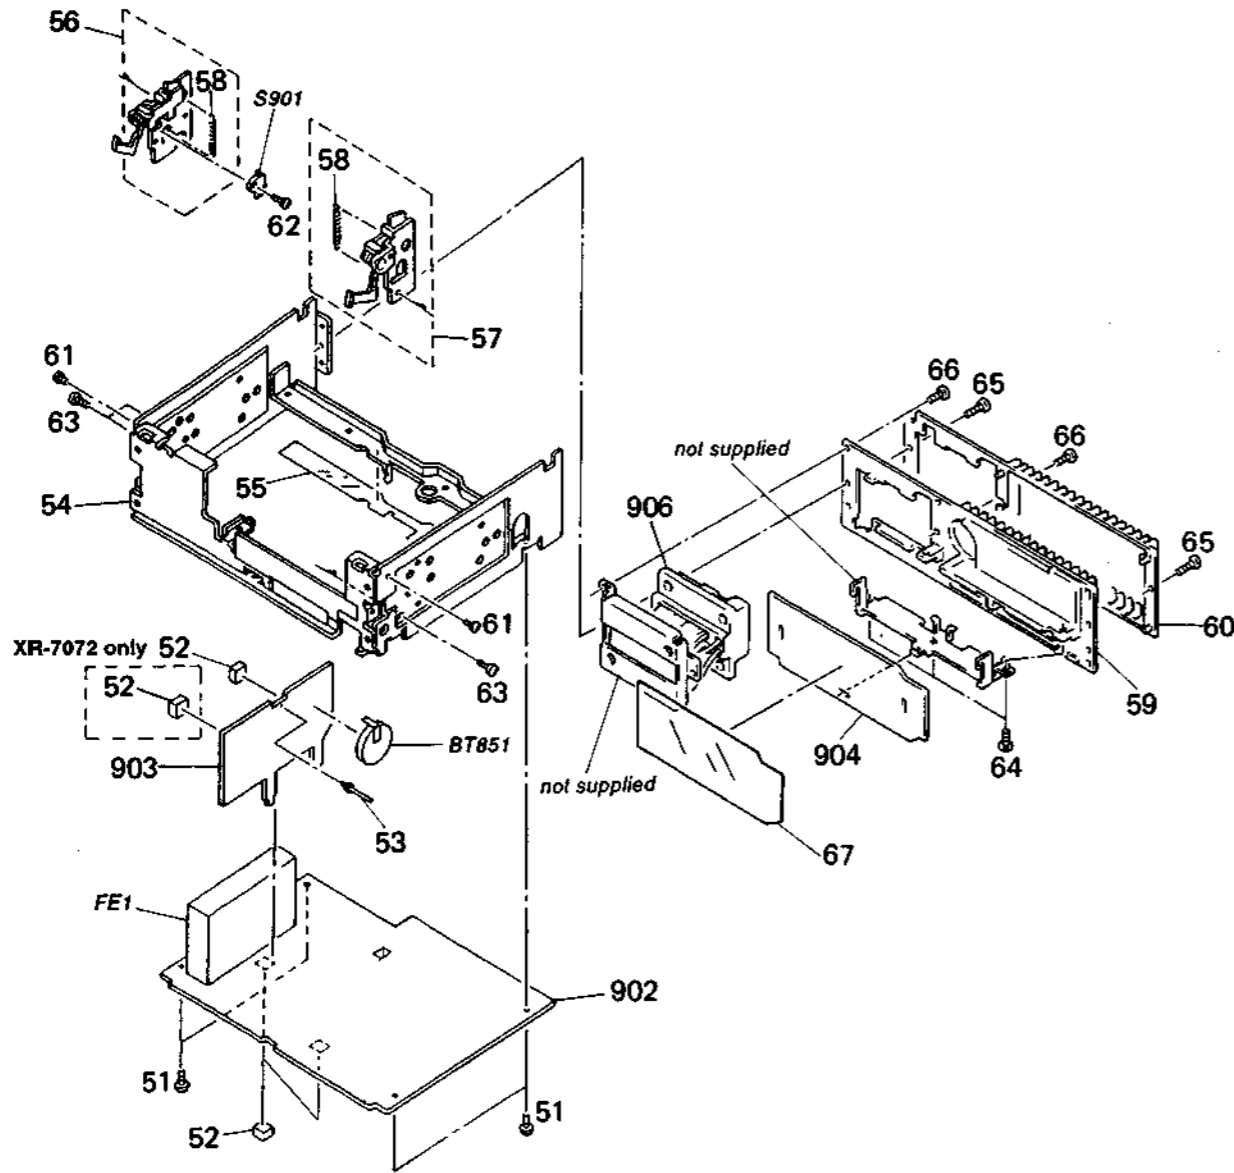


| No. | Part No. | Description | Remarks | No. | Part No. | Description | Remarks |
|-----|---------------|---------------------------------|---------|-------|-----------------------------------|----------------------------------|---------|
| 51 | 3-344-501-11 | SCREW (+ PTT 3X8), GROUND POINT | | 66 | 7-682-547-04 | SCREW +PTT 3X6 (S) | |
| 52 | 9-911-841-XX | CUSHION, CASSETTE LID | | 67 | *3-358-653-01 | SHEET (POWER), INSULATING | |
| 53 | *3-847-723-00 | PIN, LEAD | | 902 | *A-3222-037-A (7070(US,Canadian)) | PC BOARD ASSY, MAIN | |
| 54 | *X-3344-517-1 | CHASSIS ASSY | | | *A-3222-153-A (7071) | PC BOARD ASSY, MAIN | |
| 55 | *3-357-098-01 | INSULATOR (CHASSIS) | | | *A-3222-171-A (7072) | PC BOARD ASSY, MAIN | |
| 56 | X-3344-502-1 | LOCK ASSY (LEFT) | 58 | | *A-3222-187-A (7070(AEP,E)) | PC BOARD ASSY, MAIN | |
| 57 | X-3344-503-1 | LOCK ASSY (RIGHT) | 58 | 903 | *A-3273-192-A (7072) | MOUNTED PCB, AR1 | |
| 58 | 3-645-189-00 | SPRING, TENSION | | | *1-634-045-11 | PC BOARD, AR1 | |
| 59 | *3-357-093-01 | HEAT SINK | | 904 | *A-3271-491-A | MOUNTED PCB, POWER | |
| 60 | *3-357-097-01 | COVER | | 906 | 1-575-560-11 | CORD, CONNECTOR | |
| 61 | 7-627-553-38 | SCREW, PRECISION +P 2X3 | | BT851 | 1-528-225-31 | BATTERY, LITHIUM | |
| 62 | 7-621-283-00 | SCREW +P 2X5 | | FE1 | 1-465-141-11 | (7071).....TUNER UNIT (FM/MW/LW) | |
| 63 | 7-621-773-86 | SCREW +PTT 2.6X4 (S) | | FE1 | 1-465-405-11 | (7070/7072)...TUNER UNIT (FM/AM) | |
| 64 | 7-685-132-19 | SCREW +P 2.6X5 TYPE2 SLIT | | S901 | 1-570-771-11 | SWITCH (POWER) | |
| 65 | 7-621-770-XX | SCREW +PTT 2.6X8 (S) | | | | | |

(3) MD SECTION-1

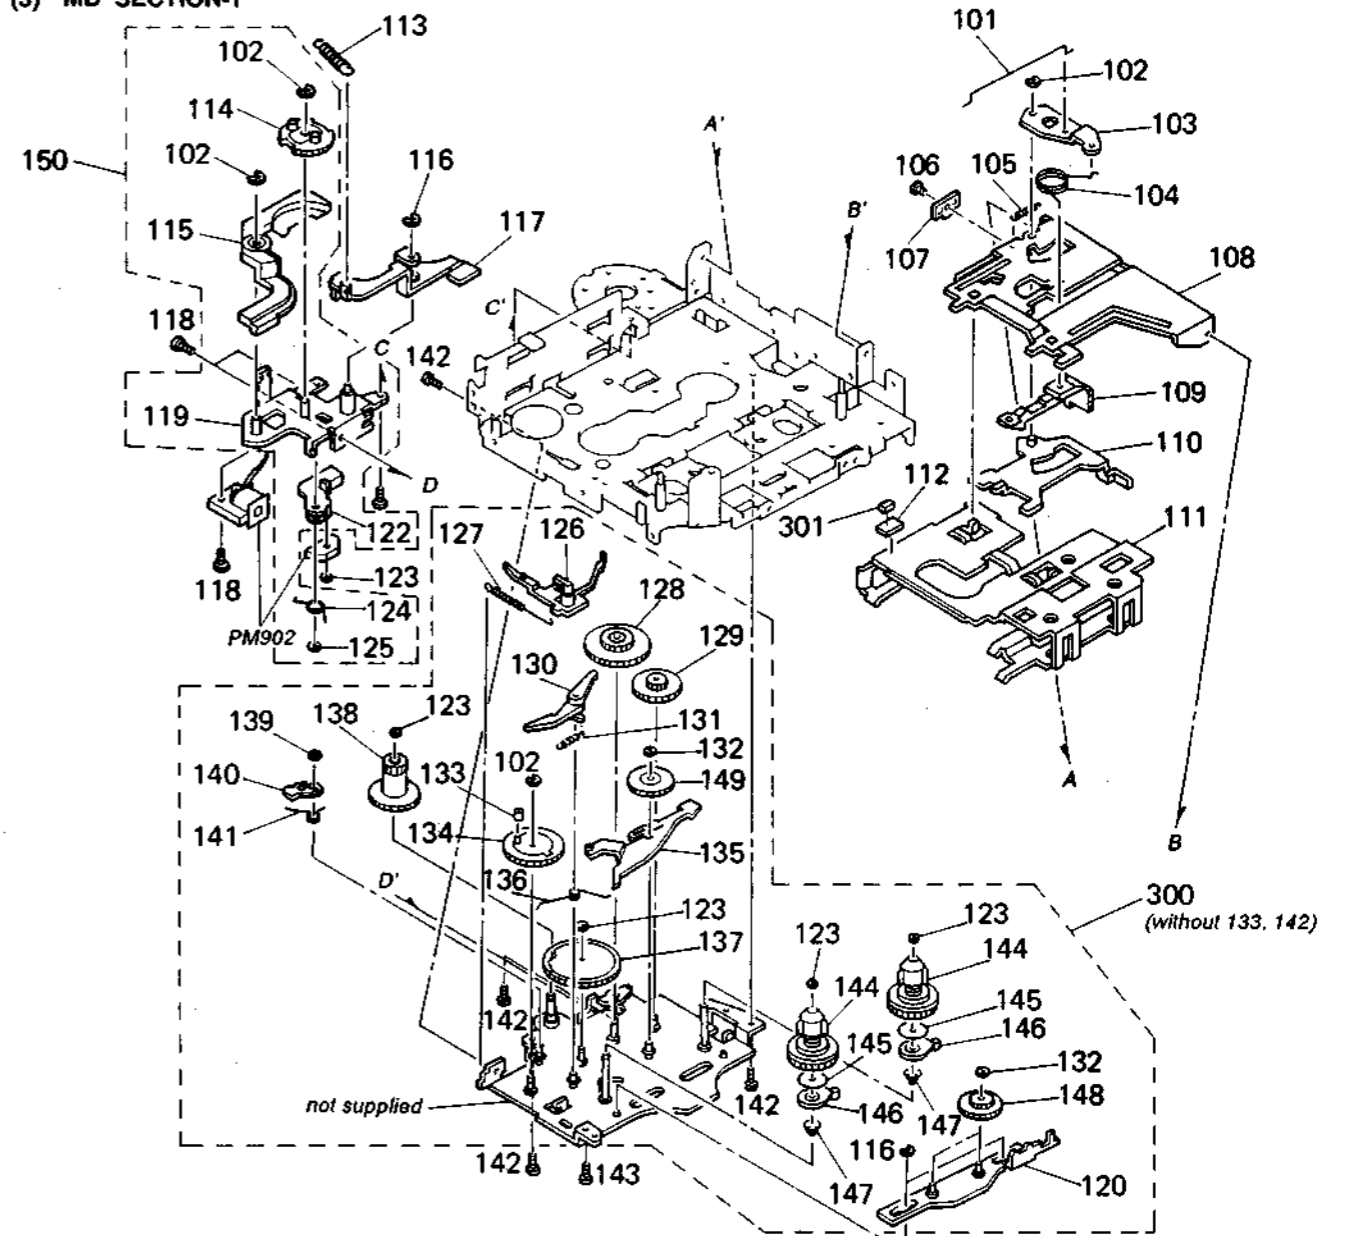


| No. | Part No. | Description | Remarks | No. | Part No. | Description | Remarks |
|-----|---------------|-------------------------------|---------|-------|---------------|--|---|
| 101 | 3-392-969-01 | LINK, RETURN | | 129 | 3-397-419-01 | GEAR (A) | |
| 102 | 7-624-104-04 | STOP RING 2.0, TYPE -E | | 130 | 3-392-989-02 | ARM, GEAR LOCK | |
| 103 | *3-392-932-01 | PLATE, CENTER | | 131 | 3-392-949-02 | SPRING | |
| 104 | 3-392-961-01 | SPRING (B) | | 132 | 3-570-615-00 | POLY-WASHER (DIA.1.2) | |
| 105 | 3-392-953-01 | SPRING | | 133 | 3-392-944-01 | COLLAR (SELECTOR GEAR) | |
| 106 | 7-621-772-00 | SCREW +B 2X3 | | 134 | 3-392-987-01 | GEAR, SELECTOR | |
| 107 | *3-397-416-01 | PLATE, SWITCH | | 135 | 3-397-459-01 | ARM, SENSOR | |
| 108 | *3-392-973-01 | HANGER, CASSETTE | | 136 | 3-397-429-01 | SPRING, DASH | |
| 109 | 3-392-972-01 | HOOKER, TAPE | | 137 | 3-397-458-01 | GEAR, DETECTION | |
| 110 | *3-392-921-01 | LOCK ASSY, EJECT CAM | | 138 | 3-397-426-01 | GEAR, ROAD | |
| 111 | *3-392-977-01 | HOLDER, CASSETTE | | 139 | 3-559-408-11 | WASHER, POLYETHYLENE, DIA.1.2 | |
| 112 | *3-392-968-01 | CUSHION, C.H | | 140 | 3-397-425-01 | GEAR, SELECTOR LOCK | |
| 113 | 3-397-436-01 | SPRING, STAND-BY | | 141 | 3-397-440-01 | SPRING, SELECTOR GEAR LOCK | |
| 114 | 3-397-411-01 | GEAR ASSY, STAND-BY | | 142 | *4-908-792-11 | SCREW (B2X3), TAPPING, PT | |
| 115 | 3-397-462-01 | ARM, REVERSE LOCK | | 143 | 7-621-255-20 | SCREW +PTT 2X4 (S) | |
| 116 | 7-624-102-04 | STOP RING 1.5, TYPE -E | | 144 | 3-397-409-01 | SPINDLE ASSY, REEL | |
| 117 | *3-397-405-01 | CAM ASSY, STAND-BY | | 145 | 3-397-450-01 | WASHER, STAINLESS | |
| 118 | 4-908-792-31 | SCREW (B2) (M2X4), TAPPING | | 146 | 3-397-423-01 | CAM, DETECTION | |
| 119 | *3-397-404-01 | BRACKET ASSY, SOLENOID | | 147 | 3-397-430-01 | SPRING, BACK TENSION | |
| 120 | *3-397-402-01 | ARM (C) ASSY, F.R | | 148 | 3-397-422-01 | GEAR, F.R | |
| 121 | 7-627-553-17 | PRECISION SCREW +P 2X2 TYPE 3 | | 149 | 3-397-421-01 | GEAR, IDLE | |
| 122 | *3-397-406-01 | LOCK ASSY, STAND-BY GEAR | | 150 | X-3362-209-1 | KEY OFF BLOCK ASSY 102,114,115,119,122,124,125 | |
| 123 | 3-676-387-00 | POLY-SLIDER (DIA.1.6) | | 300 | X-3362-211-1 | BKT BLOCK ASSY, REEL BASE | 102,116,120,123,126-132,134-141,144-149 |
| 124 | 3-397-441-01 | SPRING, STAND-BY GEAR LOCK | | | | | |
| 125 | 3-570-615-11 | POLY-WASHER (DIA.1.2) | | | | | |
| 126 | 3-397-460-01 | RATCHET | | 301 | *4-919-544-11 | SPACER (T) | |
| 127 | 3-392-959-01 | SPRING | | PM902 | 1-454-517-11 | SOLENOID, PLUNGER | |
| 128 | 3-397-420-01 | GEAR (B) | | | | | |

(3) MD SECTION-1

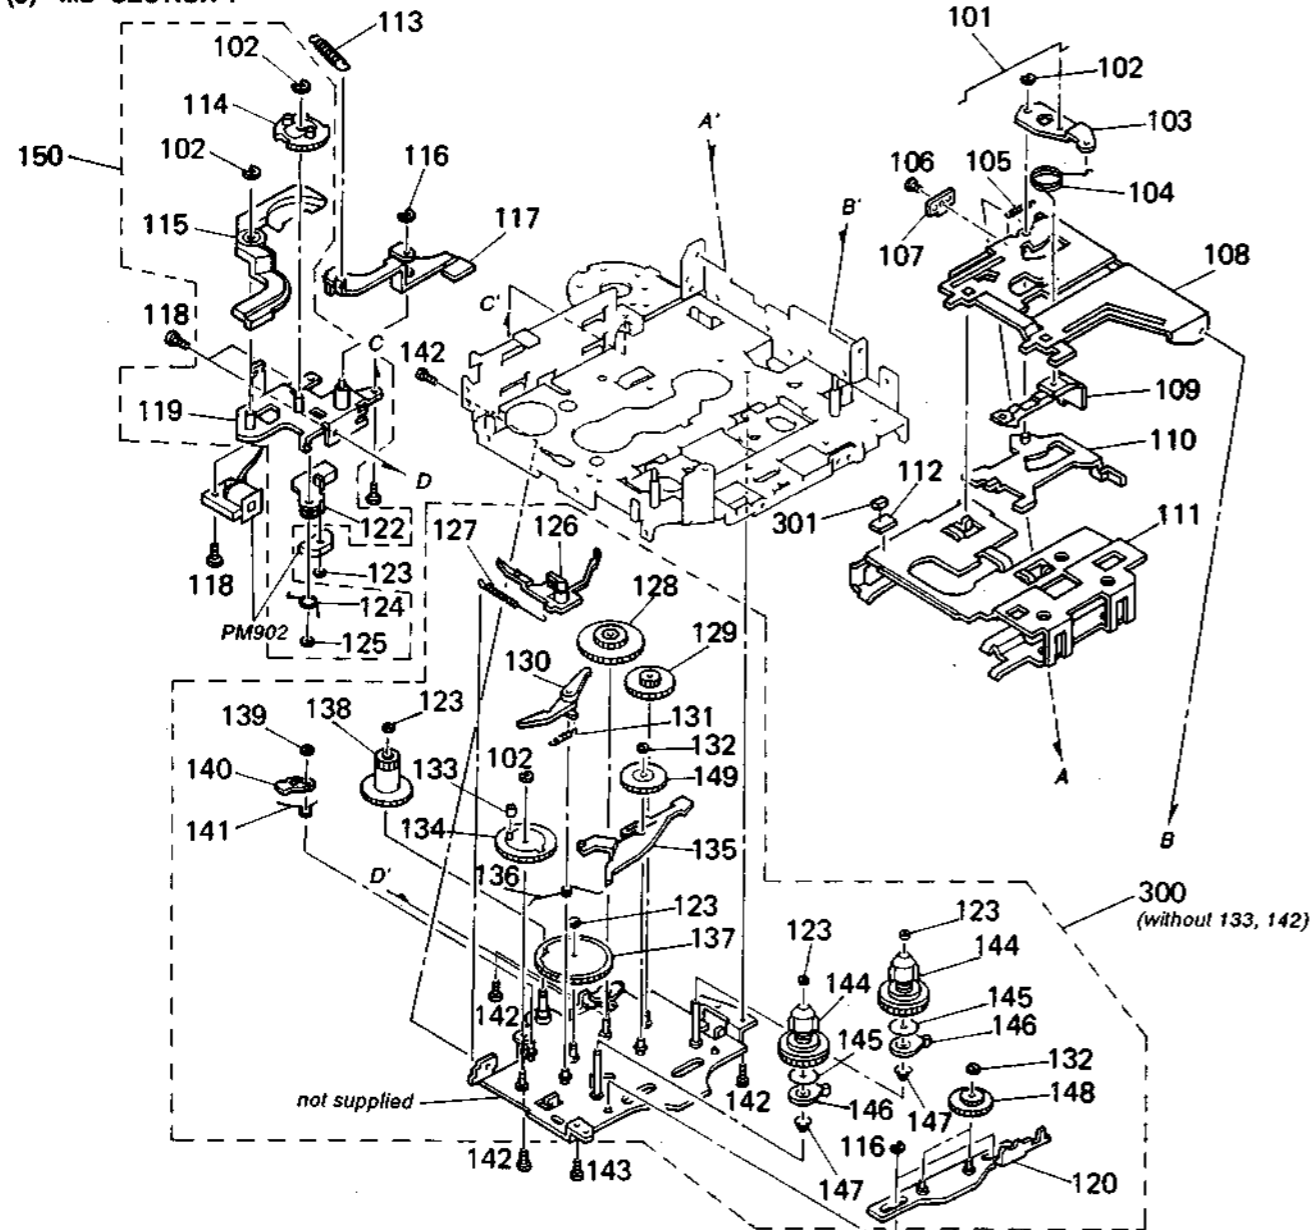


(4) MD SECTION-2

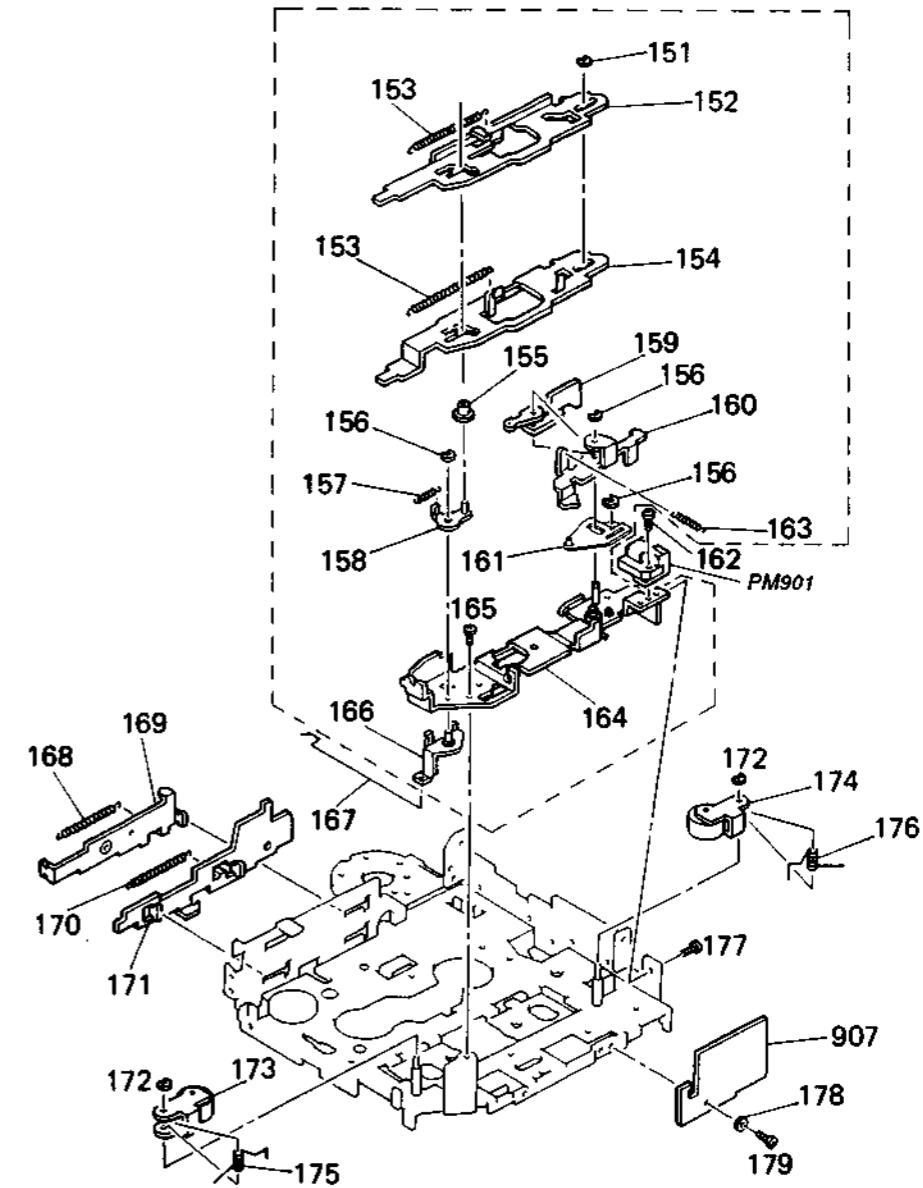

| No. | Part No. | Description | Remarks | No. | Part No. | Description | Remarks |
|-----|---------------|-------------------------------|---------|-------|---------------|--|---|
| 101 | 3-392-969-01 | LINK, RETURN | | 129 | 3-397-419-01 | GEAR (A) | |
| 102 | 7-624-104-04 | STOP RING 2.0, TYPE -E | | 130 | 3-392-989-02 | ARM, GEAR LOCK | |
| 103 | *3-392-932-01 | PLATE, CENTER | | 131 | 3-392-949-02 | SPRING | |
| 104 | 3-392-961-01 | SPRING (B) | | 132 | 3-570-615-00 | POLY-WASHER (DIA.1.2) | |
| 105 | 3-392-953-01 | SPRING | | 133 | 3-392-944-01 | COLLAR (CELECTER GEAR) | |
| 106 | 7-621-772-00 | SCREW #B 2X3 | | 134 | 3-392-987-01 | GEAR, SELECTOR | |
| 107 | *3-397-416-01 | PLATE, SWITCH | | 135 | 3-397-459-01 | ARM, SENSOR | |
| 108 | *3-392-973-01 | HANGER, CASSETTE | | 136 | 3-397-429-01 | SPRING, DASH | |
| 109 | 3-392-972-01 | HOOKER, TAPE | | 137 | 3-397-458-01 | GEAR, DETECTION | |
| 110 | *3-392-921-01 | LOCK ASSY, EJECT CAM | | 138 | 3-397-426-01 | GEAR, ROAD | |
| 111 | *3-392-977-01 | HOLDER, CASSETTE | | 139 | 3-559-408-11 | WASHER, POLYETHYLENE, DIA.1.2 | |
| 112 | *3-392-968-01 | CUSHION, C.H | | 140 | 3-397-425-01 | GEAR, SELECTOR LOCK | |
| 113 | 3-397-436-01 | SPRING, STAND-BY | | 141 | 3-397-440-01 | SPRING, SELECTOR GEAR LOCK | |
| 114 | 3-397-411-01 | GEAR ASSY, STAND-BY | | 142 | *4-908-792-11 | SCREW (B2X3), TAPPING, P1 | |
| 115 | 3-397-462-01 | ARM, REVERSE LOCK | | 143 | 7-621-255-20 | SCREW #PTT 2X4 (S) | |
| 116 | 7-624-102-04 | STOP RING 1.5, TYPE -E | | 144 | 3-397-409-01 | SPINDLE ASSY, REEL | |
| 117 | *3-397-405-01 | CAM ASSY, STAND-BY | | 145 | 3-397-450-01 | WASHER, STAINLESS | |
| 118 | 4-908-792-31 | SCREW (B2) (M2X4), TAPPING | | 146 | 3-397-423-01 | CAM, DETECTION | |
| 119 | *3-397-404-01 | BRACKET ASSY, SOLENOID | | 147 | 3-397-430-01 | SPRING, BACK TENSION | |
| 120 | *3-397-402-01 | ARM (C) ASSY, F.R | | 148 | 3-397-422-01 | GEAR, F.R | |
| 121 | 7-627-553-17 | PRECISION SCREW #P 2X2 TYPE 3 | | 149 | 3-397-421-01 | GEAR, IDLE | |
| 122 | *3-397-406-01 | LOCK ASSY, STAND-BY GEAR | | 150 | X-3362-209-1 | KEY OFF BLOCK ASSY 102,114,115,119,122,124,125 | |
| 123 | 3-676-387-00 | POLY-SLIDER (DIA.1.6) | | 300 | X-3362-211-1 | BKT BLOCK ASSY, REEL BASE | 102,116,120,123,126-132,134-141,144-149 |
| 124 | 3-397-441-01 | SPRING, STAND-BY GEAR LOCK | | 301 | *4-919-544-11 | SPACER (T) | |
| 125 | 3-570-615-11 | POLY-WASHER (DIA.1.2) | | PM902 | 1-454-517-11 | SOLENOID, PLUNGER | |
| 126 | 3-397-460-01 | RATCHET | | | | | |
| 127 | 3-392-959-01 | SPRING | | | | | |
| 128 | 3-397-420-01 | GEAR (B) | | | | | |

| No. | Part No. | Description | Remarks | No. | Part No. | Description | Remarks |
|-----|---------------|--------------------------|---------|-------|---------------|----------------------------|-----------------|
| 151 | 7-624-104-04 | STOP RING 2.0, TYPE -E | | 167 | 3-392-966-01 | LINK, SELECTOR | |
| 152 | *3-397-456-01 | LEVER (Z), FF | | 168 | 3-397-437-01 | SPRING, EJECT LEVER | |
| 153 | 3-397-431-01 | SPRING, FF/REW LEVER | | 169 | *3-392-978-01 | LEVER, EJECT | |
| 154 | *3-397-457-01 | LEVER (Z), REW | | 170 | 3-397-438-01 | SPRING, EJECT CAM | |
| 155 | 3-392-994-01 | ROLLER, PROGRAM | | 171 | *3-397-417-01 | CAM ASSY, EJECT | |
| 156 | 7-624-102-04 | STOP RING 1.5, TYPE -E | | 172 | 7-624-102-04 | STOP RING 1.5, TYPE -E | |
| 157 | 3-397-439-01 | SPRING, PROGRAM ARM | | 173 | *3-392-927-01 | ARM (R) ASSY, PINCH | |
| 158 | *3-397-407-01 | ARM ASSY, PROGRAM | | 174 | *3-392-928-01 | ARM (F) ASSY, PINCH | |
| 159 | 3-392-903-01 | ARM, RELEASE | | 175 | 3-392-958-01 | SPRING (R) | |
| 160 | *3-392-904-01 | ARM (A), LOCK | | 176 | 3-392-957-01 | SPRING (F) | |
| 161 | *3-397-415-01 | ARM (A) ASSY, F.R | | 177 | 7-621-555-10 | SCREW #K 2X3 | |
| 162 | 3-896-913-11 | SCREW (B2X6), P3 TAPPING | | 178 | 7-623-205-22 | SW 2, TYPE 2 | |
| 163 | 3-392-917-01 | SPRING | | 179 | 4-908-792-31 | SCREW (B2) (M2X4), TAPPING | |
| 164 | *3-397-403-01 | BRACKET ASSY, LEVER | | 180 | X-3362-210-1 | BKT BLOCK ASSY, LEVER | 151-161,164-166 |
| 165 | 7-621-255-25 | SCREW #PTT 2X4 (S) | | 907 | *3-397-444-01 | SWITCH (PWB)(SWITCH BOARD) | |
| 166 | *3-392-920-01 | LEVER (A) ASSY, CHANGE | | PM901 | 1-454-464-11 | SOLENOID, PLUNGER | |

(5) MD SECTION-3

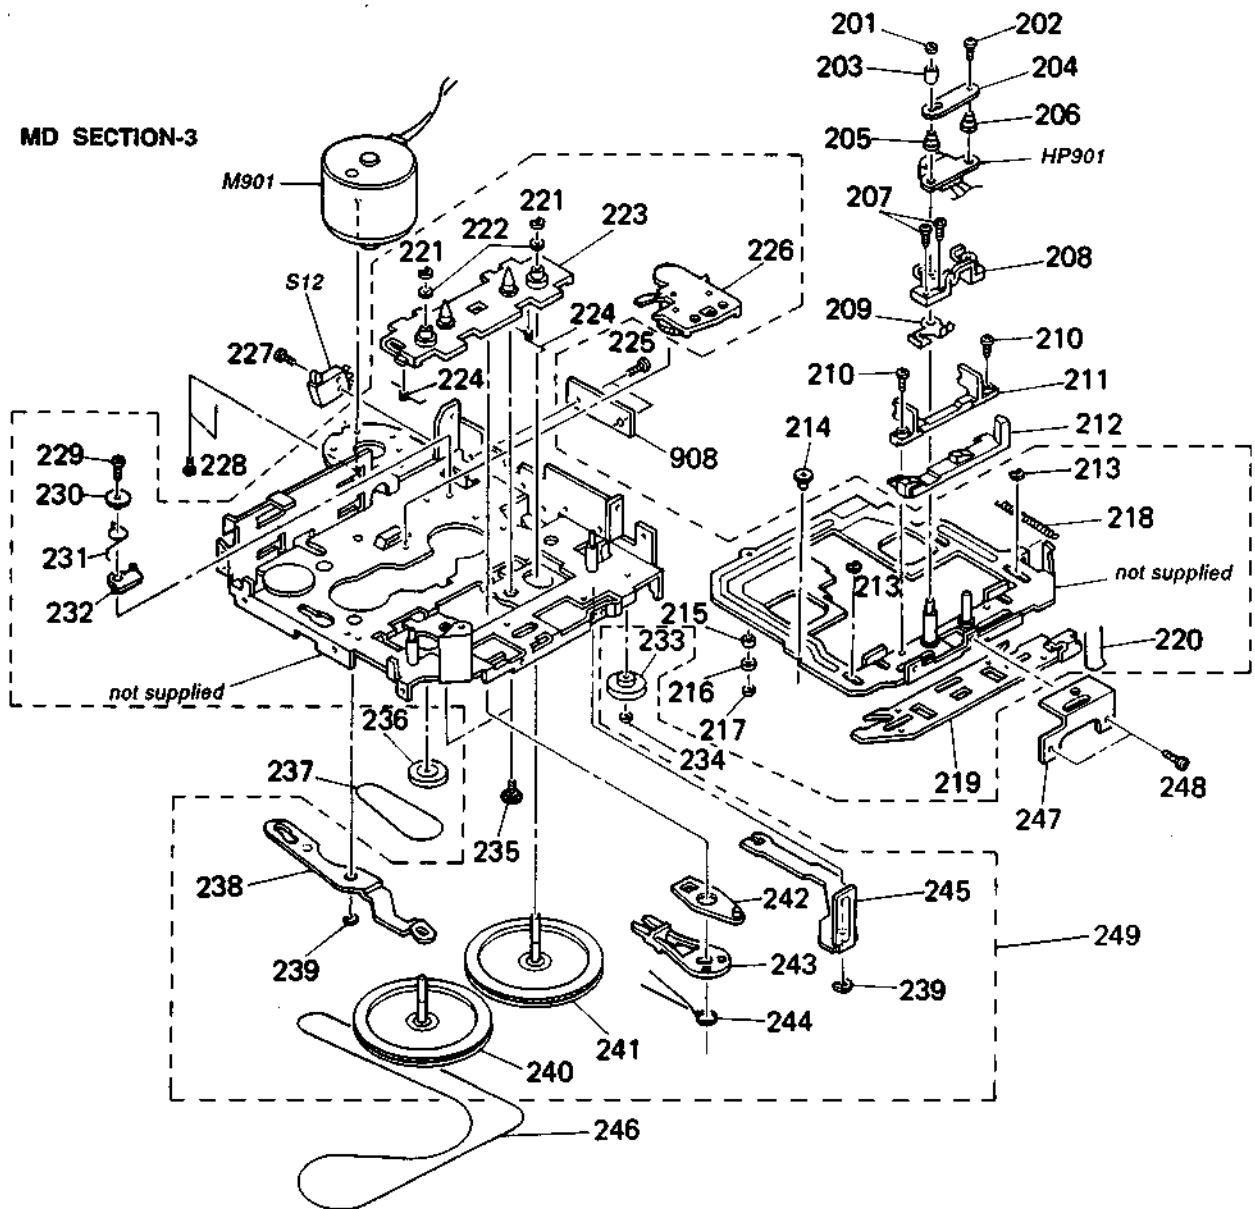

| No. | Part No. | Description | Remarks | No. | Part No. | Description | Remarks |
|-----|---------------|----------------------------|---------|-------|---------------|---|---------|
| 201 | 3-676-387-00 | POLY-SLIDER (DIA.1.6) | | 227 | 3-318-203-11 | SCREW (B1.7X6), TAPPING | |
| 202 | 7-627-553-48 | SCREW, PRECISION +P 2X4 | | 228 | 7-627-554-07 | PRECISION SCREW +P 2X2.2 TYPE 3 | |
| 203 | 3-392-998-01 | ROLLER (A), FF | | 229 | 4-908-792-31 | SCREW (B2) (M2X4), TAPPING | |
| 204 | *3-392-930-01 | RETAINER, SPRING | | 230 | *3-397-427-01 | COLLAR, MUTE ARM | |
| 205 | 3-397-433-01 | SPRING (B), ADJUSTOR ARM | | 231 | 3-397-434-01 | SPRING, MUTE ARM | |
| 206 | 3-397-432-01 | SPRING (A), ADJUSTOR ARM | | 232 | *3-397-424-01 | ARM, MUTE | |
| 207 | 3-392-909-01 | SCREW, AZIMUTH ADJUSTMENT | | 233 | 3-392-941-01 | PULLEY (A), IDLE | |
| 208 | 3-392-988-01 | ARM, ADJUSTOR | | 234 | 3-570-615-00 | POLY-WASHER (DIA.1.2) | |
| 209 | 3-392-931-01 | SEAM, ADJUSTOR | | 235 | 3-392-918-01 | SCREW, EJECT HOOK | |
| 210 | 7-627-553-88 | SCREW, PRECISION +P 2X7 | | 236 | 3-397-418-01 | GEAR, PULLEY | |
| 211 | 3-392-984-01 | GUIDE, TAPE | | 237 | 3-397-442-01 | BELT, SUB | |
| 212 | 3-392-971-01 | LNK, ADJUSTOR | | 238 | *3-392-979-01 | LEVER, REVERSE | |
| 213 | 7-624-118-01 | RING, RETAINING E-2.5 | | 239 | 7-624-104-04 | STOP RING 2.0, TYPE -E | |
| 214 | 3-397-428-01 | COLLAR, H.P | | 240 | 3-397-413-01 | FLYWHEEL ASSY (BR) | |
| 215 | 3-392-942-01 | ROLLER (B), H.P | | 241 | 3-397-412-01 | FLYWHEEL ASSY (BF) | |
| 216 | 3-392-945-01 | ROLLER (A), H.P | | 242 | *3-397-408-01 | ARM (D) ASSY, F.R | |
| 217 | 3-570-615-00 | POLY-WASHER (DIA.1.2) | | 243 | 3-397-461-01 | ARM, FF | |
| 218 | 3-392-952-01 | SPRING | | 244 | 3-397-435-01 | SPRING; FF ARM | |
| 219 | *3-397-401-01 | ARM (A) ASSY, FR SELECTION | | 245 | *3-397-455-01 | ARM (B), F.R | |
| 220 | 3-392-962-01 | SPRING | | 246 | 3-397-443-01 | BELT, MAIN | |
| 221 | 3-590-768-00 | RING (A), E | | 247 | *3-397-463-01 | REINFORCEMENT | |
| 222 | 3-701-437-11 | POLY-SLIDER (A) | | 248 | 3-397-464-01 | SCREW, REINFORCEMENT FITTING | |
| 223 | 3-392-914-01 | BRACKET ASSY, CM | | 249 | X-3362-212-1 | BKT BLOCK ASSY, CHASSIS 213,215-224,226, 229-232,235,238-245 | |
| 224 | 3-392-963-01 | SPRING (R) | | 908 | *3-397-446-01 | MUTE (PWB) (MUTE BOARD) | |
| 225 | 7-621-775-00 | SCREW +P 2.6X3 | | HP901 | 1-543-717-11 | HEAD, MAGNETIC (PLAYBACK) | |
| 226 | 3-397-410-01 | ARM ASSY, T.U | | M901 | 3-397-414-01 | MOTOR ASSY | |
| | | | | S12 | 1-554-790-11 | SWITCH, POWER (PACK-IN) | |

SECTION 6 ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:

MF: μ F, PF: μ PF.

RESISTORS

- All resistors are in ohms.
- F: nonflammable

COILS

• MMH: mH, UH: μ H

SEMICONDUCTORS

In each case, U: μ , for example:
 UA....: μ A...., UPA....: μ PA....,
 UPC....: μ PC, UPD....: μ PD....

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

TYPE A: XR-7070 (US) Main board part number.
 1-634-042-11
 B: XR-7070 (Canadian/AEP/E) and
 XR-7070 (US) Main board part number.
 1-634-042-13

| Ref.No. | Part No. | Description |
|---------|---------------|--|
| 901 | *A-3270-740-A | MOUNTED PCB (B), KEY |
| 902 | *A-3222-037-A | (7070(US,Canadian))..PC BOARD ASSY, MAIN |
| | *A-3222-153-A | (7071).....PC BOARD ASSY, MAIN |
| | *A-3222-171-A | (7072).....PC BOARD ASSY, MAIN |
| | *A-3222-187-A | (7070(AEP,E))...PC BOARD ASSY, MAIN |
| 903 | *A-3273-192-A | (7072).....MOUNTED PCB, ARI |
| | *1-634-045-11 | (7070/7071)...PC BOARD, ARI |
| 904 | *A-3271-491-A | MOUNTED PCB, POWER |
| 905 | 1-575-559-11 | (7070(US,Canadian)).....CORD, CONNECTOR |
| | 1-575-559-22 | (7070(AEP,E)/7071/7072)..CORD, CONNECTOR |
| 906 | 1-575-560-11 | CORD, CONNECTOR |
| 907 | *3-397-444-01 | SWITCH (PWB)(SWITCH BOARD) |
| 908 | *3-397-446-01 | MUTE (PWB)(MUTE BOARD) |
| BT851 | 1-528-225-31 | BATTERY, LITHIUM |
| C1 | 1-126-157-11 | ELECT 10MF 20% 16V |
| C2 | 1-124-234-00 | ELECT 22MF 20% 16V |
| C3 | 1-126-288-11 | ELECT 4.7MF 20% 16V |
| C4 | 1-130-473-00 | MYLAR 0.0015MF 5% 50V |
| C5 | 1-163-189-00 | CERAMIC CHIP 220PF 5% 50V |
| C6 | 1-126-301-11 | ELECT 1MF 20% 50V |
| C7 | 1-124-464-11 | ELECT 0.22MF 20% 50V |
| C8 | 1-124-443-00 | ELECT 100MF 20% 10V |
| C9 | 1-126-288-11 | ELECT 4.7MF 20% 16V |
| C10 | 1-163-053-00 | CERAMIC CHIP 0.0033MF 10% 50V |
| C11 | 1-130-487-00 | FILM 0.022MF 5% 50V |
| C12 | 1-163-063-00 | CERAMIC CHIP 0.022MF 10% 50V |
| C13 | 1-126-301-11 | ELECT 1MF 20% 50V |
| C14 | 1-130-485-00 | (7071/7072)...FILM 0.015MF 5% 50V |
| C14 | 1-130-487-00 | (7070).....FILM 0.022MF 5% 50V |
| C15 | 1-130-485-00 | (7071/7072)...FILM 0.015MF 5% 50V |
| C15 | 1-130-487-00 | (7070).....FILM 0.022MF 5% 50V |
| C16 | 1-163-161-00 | CERAMIC CHIP 15PF 5% 50V |
| C17 | 1-163-161-00 | CERAMIC CHIP 15PF 5% 50V |
| C18 | 1-163-063-00 | CERAMIC CHIP 0.022MF 10% 50V |
| C19 | 1-126-157-11 | ELECT 10MF 20% 16V |
| C20 | 1-136-165-00 | FILM 0.1MF 5% 50V |
| C21 | 1-124-257-00 | ELECT 2.2MF 20% 50V |
| C22 | 1-163-059-00 | CERAMIC CHIP 0.01MF 10% 50V |
| C23 | 1-126-162-11 | ELECT 3.3MF 20% 25V |
| C24 | 1-126-162-11 | ELECT 3.3MF 20% 25V |
| C25 | 1-130-487-00 | FILM 0.022MF 5% 50V |
| C26 | 1-163-059-00 | CERAMIC CHIP 0.01MF 10% 50V |
| C27 | 1-124-242-00 | ELECT 33MF 20% 16V |

| Ref.No. | Part No. | Description |
|---------|--------------|--|
| C28 | 1-163-063-00 | CERAMIC CHIP 0.022MF 10% 50V |
| C29 | 1-163-063-00 | CERAMIC CHIP 0.022MF 10% 50V |
| C30 | 1-163-053-00 | CERAMIC CHIP 0.0033MF 10% 50V |
| C31 | 1-163-063-00 | CERAMIC CHIP 0.022MF 10% 50V |
| C32 | 1-124-584-00 | ELECT 100MF 20% 10V |
| C33 | 1-126-157-11 | ELECT 10MF 20% 16V |
| C34 | 1-163-063-00 | CERAMIC CHIP 0.022MF 10% 50V |
| C35 | 1-163-063-00 | CERAMIC CHIP 0.022MF 10% 50V |
| C36 | 1-163-063-00 | CERAMIC CHIP 0.022MF 10% 50V |
| C37 | 1-162-637-11 | CERAMIC CHIP 0.47MF 16V |
| C001 | 1-164-232-11 | (70709AEP,E)/7072) ...CERAMIC CHIP 0.01MF 10% 50V |
| C002 | 1-164-232-11 | (7070(AEP,E)/7072) ...CERAMIC CHIP 0.01MF 10% 50V |
| C003 | 1-164-232-11 | (7070(AEP,E)/7072) ...CERAMIC CHIP 0.01MF 10% 50V |
| C004 | 1-164-232-11 | (7070(AEP,E)/7072) ...CERAMIC CHIP 0.01MF 10% 50V |
| C005 | 1-163-037-11 | (TYPE B)..CERAMIC CHIP 0.022MF 10% 50V |
| C006 | 1-161-379-00 | (TYPE A)..CERAMIC 0.01MF 30% 16V |
| C006 | 1-163-037-11 | (TYPE B)..CERAMIC CHIP 0.022MF 10% 50V |
| C007 | 1-164-232-11 | (TYPE B)..CERAMIC CHIP 0.01MF 10% 25V |
| C101 | 1-126-288-11 | ELECT 4.7MF 20% 16V |
| C102 | 1-130-467-00 | MYLAR 470PF 5% 50V |
| C103 | 1-128-054-11 | ELECT 22MF 20% 10V |
| C104 | 1-136-153-00 | FILM 0.01MF 5% 50V |
| C105 | 1-126-157-11 | ELECT 10MF 20% 16V |
| C106 | 1-126-301-11 | ELECT 1MF 20% 50V |
| C107 | 1-126-157-11 | ELECT 10MF 20% 16V |
| C108 | 1-131-587-11 | TANTALUM 0.68MF 10% 35V |
| C118 | 1-124-464-11 | ELECT 0.22MF 20% 50V |
| C119 | 1-126-157-11 | ELECT 10MF 20% 16V |
| C120 | 1-163-167-00 | CERAMIC CHIP 27PF 5% 50V |
| C121 | 1-130-476-00 | MYLAR 0.0027MF 5% 50V |
| C122 | 1-136-162-00 | FILM 0.056MF 5% 50V |
| C123 | 1-136-162-00 | FILM 0.056MF 5% 50V |
| C124 | 1-126-157-11 | ELECT 10MF 20% 16V |
| C125 | 1-130-477-00 | MYLAR 0.0033MF 5% 50V |
| C128 | 1-126-157-11 | ELECT 10MF 20% 16V |
| C129 | 1-124-464-11 | ELECT 0.22MF 20% 50V |
| C130 | 1-126-157-11 | ELECT 10MF 20% 16V |
| C133 | 1-124-584-00 | ELECT 100MF 20% 10V |
| C134 | 1-126-157-11 | ELECT 10MF 20% 16V |
| C135 | 1-126-157-11 | ELECT 10MF 20% 16V |
| C136 | 1-126-157-11 | ELECT 10MF 20% 16V |

| Ref.No. | Part No. | Description | | | | | | |
|---------|--------------|---|----------|-----|------|--|--|--|
| C139 | 1-163-205-00 | CERAMIC CHIP | 0.001MF | 5% | 50V | | | |
| C140 | 1-163-205-00 | CERAMIC CHIP | 0.001MF | 5% | 50V | | | |
| C141 | 1-163-181-00 | CERAMIC CHIP | 100PF | 5% | 50V | | | |
| C201 | 1-126-288-11 | ELECT | 4.7MF | 20% | 16V | | | |
| C202 | 1-130-467-00 | MYLAR | 470PF | 5% | 50V | | | |
| C203 | 1-128-054-11 | ELECT | 22MF | 20% | 10V | | | |
| C204 | 1-136-153-00 | FILM | 0.01MF | 5% | 50V | | | |
| C205 | 1-126-157-11 | ELECT | 10MF | 20% | 16V | | | |
| C206 | 1-126-301-11 | ELECT | 1MF | 20% | 50V | | | |
| C207 | 1-126-157-11 | ELECT | 10MF | 20% | 16V | | | |
| C208 | 1-131-587-11 | TANTALUM | 0.68MF | 10% | 35V | | | |
| C218 | 1-124-464-11 | ELECT | 0.22MF | 20% | 50V | | | |
| C219 | 1-126-157-11 | ELECT | 10MF | 20% | 16V | | | |
| C220 | 1-163-167-00 | CERAMIC CHIP | 27PF | 5% | 50V | | | |
| C221 | 1-130-476-00 | MYLAR | 0.0027MF | 5% | 50V | | | |
| C222 | 1-136-162-00 | FILM | 0.056MF | 5% | 50V | | | |
| C223 | 1-136-162-00 | FILM | 0.056MF | 5% | 50V | | | |
| C224 | 1-126-157-11 | ELECT | 10MF | 20% | 16V | | | |
| C225 | 1-130-477-00 | MYLAR | 0.0033MF | 5% | 50V | | | |
| C228 | 1-126-157-11 | ELECT | 10MF | 20% | 16V | | | |
| C229 | 1-124-464-11 | ELECT | 0.22MF | 20% | 50V | | | |
| C230 | 1-126-157-11 | ELECT | 10MF | 20% | 16V | | | |
| C233 | 1-124-584-00 | ELECT | 100MF | 20% | 10V | | | |
| C234 | 1-126-157-11 | ELECT | 10MF | 20% | 16V | | | |
| C235 | 1-126-157-11 | ELECT | 10MF | 20% | 16V | | | |
| C236 | 1-126-157-11 | ELECT | 10MF | 20% | 16V | | | |
| C239 | 1-163-205-00 | CERAMIC CHIP | 0.001MF | 5% | 50V | | | |
| C240 | 1-163-205-00 | CERAMIC CHIP | 0.001MF | 5% | 50V | | | |
| C241 | 1-163-181-00 | CERAMIC CHIP | 100PF | 5% | 50V | | | |
| C301 | 1-124-360-00 | ELECT | 1000MF | 20% | 16V | | | |
| C302 | 1-126-154-11 | ELECT | 47MF | 20% | 6.3V | | | |
| C303 | 1-124-584-00 | ELECT | 100MF | 20% | 10V | | | |
| C304 | 1-124-234-00 | ELECT | 22MF | 20% | 16V | | | |
| C305 | 1-124-229-00 | ELECT | 33MF | 20% | 10V | | | |
| C306 | 1-124-229-00 | ELECT | 33MF | 20% | 10V | | | |
| C307 | 1-163-205-00 | CERAMIC CHIP | 0.001MF | 5% | 50V | | | |
| C308 | 1-126-157-11 | ELECT | 10MF | 20% | 16V | | | |
| C309 | 1-126-157-11 | ELECT | 10MF | 20% | 16V | | | |
| C310 | 1-124-463-00 | ELECT | 0.1MF | 20% | 50V | | | |
| C311 | 1-126-162-11 | ELECT | 3.3MF | 20% | 25V | | | |
| C312 | 1-126-157-11 | ELECT | 10MF | 20% | 16V | | | |
| C314 | 1-124-229-00 | ELECT | 33MF | 20% | 10V | | | |
| C315 | 1-124-589-11 | ELECT | 47MF | 20% | 10V | | | |
| C316 | 1-124-584-00 | ELECT | 100MF | 20% | 6.3V | | | |
| C317 | 1-126-157-11 | ELECT | 10MF | 20% | 16V | | | |
| C318 | 1-124-584-00 | ELECT | 100MF | 20% | 10V | | | |
| C320 | 1-163-169-00 | CERAMIC CHIP | 33PF | 5% | 50V | | | |
| C321 | 1-163-169-00 | CERAMIC CHIP | 33PF | 5% | 50V | | | |
| C322 | 1-124-589-11 | ELECT | 47MF | 20% | 10V | | | |
| C323 | 1-163-063-00 | CERAMIC CHIP | 0.022MF | 10% | 50V | | | |
| C324 | 1-126-157-11 | ELECT | 10MF | 20% | 16V | | | |
| C325 | 1-162-637-11 | CERAMIC CHIP | 0.47MF | | 16V | | | |
| C327 | 1-163-205-00 | CERAMIC CHIP | 0.001MF | 5% | 50V | | | |
| C328 | 1-163-063-00 | CERAMIC CHIP | 0.022MF | 10% | 50V | | | |
| C329 | 1-135-072-21 | (7071)...TANTAL. CHIP | 0.22MF | 20% | 35V | | | |
| C329 | 1-163-063-00 | (7070/7072) ...CERAMIC CHIP | 0.022MF | 10% | 50V | | | |
| C330 | 1-163-063-00 | CERAMIC CHIP | 0.022MF | 10% | 50V | | | |
| C331 | 1-121-301-11 | ELECT | 1MF | 20% | 50V | | | |
| C332 | 1-135-091-00 | (7071)...TANTAL. CHIP | 1MF | 20% | 16V | | | |
| C332 | 1-163-063-00 | (7070/7072) ...CERAMIC CHIP | 0.022MF | 10% | 50V | | | |
| C333 | 1-124-229-00 | ELECT | 33MF | 20% | 10V | | | |
| C334 | 1-163-063-00 | CERAMIC CHIP | 0.022MF | 10% | 50V | | | |
| C335 | 1-126-301-11 | ELECT | 1MF | 20% | 50V | | | |
| C336 | 1-126-301-11 | ELECT | 1MF | 20% | 50V | | | |
| C337 | 1-124-229-00 | ELECT | 33MF | 20% | 10V | | | |
| C338 | 1-163-189-00 | (7070(US,Canadian)/7071) ...CERAMIC CHIP | 220PF | 5% | 50V | | | |
| C338 | 1-164-232-11 | (7070(AEP,E)/7072) ...CERAMIC CHIP | 0.01MF | 10% | 50V | | | |
| C339 | 1-163-063-00 | CERAMIC CHIP | 0.022MF | 10% | 50V | | | |
| C340 | 1-124-234-00 | ELECT | 22MF | 20% | 16V | | | |
| C342 | 1-162-637-11 | CERAMIC CHIP | 0.47MF | | 16V | | | |
| C400 | 1-162-294-31 | (TYPE A)...CERAMIC | 0.001MF | 10% | 50V | | | |
| C400 | 1-163-205-00 | (TYPE B)...CERAMIC CHIP | 0.001MF | 5% | 50V | | | |
| C501 | 1-124-257-00 | ELECT | 2.2MF | 20% | 50V | | | |
| C502 | 1-124-234-00 | ELECT | 22MF | 20% | 10V | | | |
| C503 | 1-136-166-00 | FILM | 0.12MF | 5% | 50V | | | |
| C504 | 1-136-166-00 | FILM | 0.12MF | 5% | 50V | | | |
| C505 | 1-163-181-00 | CERAMIC CHIP | 100PF | 5% | 50V | | | |
| C551 | 1-124-257-00 | ELECT | 2.2MF | 20% | 50V | | | |
| C552 | 1-124-234-00 | ELECT | 22MF | 20% | 10V | | | |
| C553 | 1-136-166-00 | FILM | 0.12MF | 5% | 50V | | | |
| C554 | 1-136-166-00 | FILM | 0.12MF | 5% | 50V | | | |
| C555 | 1-163-181-00 | CERAMIC CHIP | 100PF | 5% | 50V | | | |
| C591 | 1-128-138-11 | ELECT | 4700MF | 20% | 16V | | | |
| C592 | 1-136-165-00 | FILM | 0.1MF | 5% | 50V | | | |
| C593 | 1-163-173-00 | CERAMIC CHIP | 47PF | 5% | 50V | | | |
| C595 | 1-126-176-11 | ELECT | 220MF | 20% | 10V | | | |
| C601 | 1-124-257-00 | ELECT | 2.2MF | 20% | 50V | | | |
| C602 | 1-124-234-00 | ELECT | 22MF | 20% | 10V | | | |
| C603 | 1-136-166-00 | FILM | 0.12MF | 5% | 50V | | | |
| C604 | 1-136-166-00 | FILM | 0.12MF | 5% | 50V | | | |
| C605 | 1-163-181-00 | CERAMIC CHIP | 100PF | 5% | 50V | | | |
| C651 | 1-124-257-00 | ELECT | 2.2MF | 20% | 50V | | | |
| C652 | 1-124-234-00 | ELECT | 22MF | 20% | 10V | | | |
| C653 | 1-136-166-00 | FILM | 0.12MF | 5% | 50V | | | |
| C654 | 1-136-166-00 | FILM | 0.12MF | 5% | 50V | | | |
| C655 | 1-163-181-00 | CERAMIC CHIP | 100PF | 5% | 50V | | | |
| C695 | 1-126-176-11 | ELECT | 220MF | 20% | 10V | | | |
| C700 | 1-161-494-00 | (TYPE A)...CERAMIC | 0.022MF | | 25V | | | |
| C701 | 1-161-494-00 | (TYPE A)...CERAMIC | 0.022MF | | 25V | | | |
| C791 | 1-163-201-00 | CERAMIC CHIP | 680PF | 5% | 50V | | | |
| C792 | 1-162-637-11 | CERAMIC CHIP | 0.47MF | | 16V | | | |
| C793 | 1-162-637-11 | CERAMIC CHIP | 0.47MF | | 16V | | | |
| C794 | 1-162-637-11 | CERAMIC CHIP | 0.47MF | | 16V | | | |
| C801 | 1-130-477-00 | (7072)...FILM | 0.0033MF | 5% | 50V | | | |
| C802 | 1-126-163-11 | (7072)...ELECT | 4.7MF | 20% | 16V | | | |
| C803 | 1-136-175-00 | (7072)...FILM | 0.068MF | 5% | 50V | | | |
| C804 | 1-136-175-00 | (7072)...FILM | 0.068MF | 5% | 50V | | | |
| C805 | 1-124-463-00 | (7072)...ELECT | 0.1MF | 20% | 50V | | | |
| C806 | 1-163-175-00 | (7072)...CERAMIC CHIP | 56PF | 5% | 50V | | | |
| C807 | 1-124-463-00 | (7072)...ELECT | 0.1MF | 20% | 50V | | | |
| C808 | 1-136-161-00 | (7072)...FILM | 0.047MF | 5% | 50V | | | |

| Ref.No. | Part No. | Description |
|---------|--------------|---------------------------------------|
| C809 | 1-136-161-00 | (7072)...FILM 0.047MF 5% 50V |
| C810 | 1-124-463-00 | (7072)...ELECT 0.1MF 20% 50V |
| C811 | 1-136-175-00 | (7072)...FILM 0.068MF 5% 50V |
| C812 | 1-136-175-00 | (7072)...FILM 0.068MF 5% 50V |
| C813 | 1-163-157-00 | (7072)...FILM 0.022MF 5% 50V |
| C814 | 1-163-157-00 | (7072)...FILM 0.022MF 5% 50V |
| C815 | 1-124-229-00 | (7072)...ELECT 33MF 20% 10V |
| CNP901* | 1-506-984-31 | PIN, CONNECTOR (PC BOARD) 2P |
| CNP902* | 1-506-984-11 | PIN, CONNECTOR (PC BOARD) 2P |
| CNP903* | 1-506-989-11 | PIN, CONNECTOR (PC BOARD) 7P |
| CNP904* | 1-566-011-11 | PIN, CONNECTOR (PC BOARD) 14P |
| CNP905* | 1-506-985-11 | PIN, CONNECTOR (PC BOARD) 3P |
| CNP906* | 1-506-999-11 | PIN, CONNECTOR (PC BOARD) 3P |
| CNP907* | 1-506-989-11 | PIN, CONNECTOR (PC BOARD) 7P |
| CNP908* | 1-506-986-11 | PIN, CONNECTOR (PC BOARD) 4P |
| CNP909* | 1-506-993-11 | PIN, CONNECTOR (PC BOARD) 11P |
| CNP910* | 1-506-985-11 | PIN, CONNECTOR (PC BOARD) 3P |
| CNP911* | 1-506-984-11 | PIN, CONNECTOR (PC BOARD) 2P |
| CNP912* | 1-506-984-11 | PIN, CONNECTOR (PC BOARD) 2P |
| CNP913* | 1-506-999-11 | PIN, CONNECTOR (PC BOARD) 3P |
| CNP914* | 1-506-987-11 | PIN, CONNECTOR (PC BOARD) 5P |
| CNP915* | 1-506-986-11 | PIN, CONNECTOR (PC BOARD) 4P |
| CNP916* | 1-506-985-11 | PIN, CONNECTOR (PC BOARD) 3P |
| CNP917* | 1-506-988-11 | (7072)...PIN, CONNECTOR (PC BOARD) 6P |
| CNP921* | 1-564-511-11 | PLUG, CONNECTOR 8P |
| CNP922* | 1-566-693-11 | PIN, CONNECTOR 2P |
| D1 | 8-719-104-34 | DIODE 1S2836 |
| D2 | 8-719-104-34 | DIODE 1S2836 |
| D3 | 8-719-110-13 | DIODE RD9.1ES-B2 |
| D4 | 8-719-109-89 | DIODE RD5.6ES-B2 |
| D5 | 8-719-110-13 | (7070/7072)...DIODE RD9.1ES-B2 |
| D5 | 8-719-110-17 | (7071).....DIODE RD10ES-B2 |
| D101 | 8-719-109-80 | DIODE RD4.7ES-B1 |
| D201 | 8-719-109-80 | DIODE RD4.7ES-B1 |
| D301 | 8-719-911-19 | DIODE 1SS119 |
| D302 | 8-719-911-19 | DIODE 1SS119 |
| D303 | 8-719-109-80 | DIODE RD4.7ES-B1 |
| D304 | 8-719-400-18 | DIODE MA152WK |
| D305 | 8-719-109-96 | DIODE RD6.8ES-B1 |
| D306 | 8-719-109-84 | DIODE RD5.1ES-B1 |
| D307 | 8-719-109-96 | DIODE RD6.8ES-B1 |
| D308 | 8-719-109-96 | DIODE RD6.8ES-B1 |
| D309 | 8-719-109-96 | DIODE RD6.8ES-B1 |
| D310 | 8-719-109-96 | DIODE RD6.8ES-B1 |
| D311 | 8-719-109-96 | DIODE RD6.8ES-B1 |
| D312 | 8-719-911-19 | DIODE 1SS119 |
| D313 | 8-719-911-19 | DIODE 1SS119 |
| D314 | 8-719-911-19 | DIODE 1SS119 |
| D315 | 8-719-911-19 | DIODE 1SS119 |
| D321 | 8-719-911-19 | (7070(AEP,E)/7071)...DIODE 1SS119 |
| D322 | 8-719-911-19 | (7070(AEP,E))...DIODE 1SS119 |
| D323 | 8-719-911-19 | (7071/7072).....DIODE 1SS119 |
| D325 | 8-719-911-19 | DIODE 1SS119 |
| D326 | 8-719-911-19 | DIODE 1SS119 |
| D327 | 8-719-911-19 | DIODE 1SS119 |
| D328 | 8-719-911-19 | DIODE 1SS119 |

| Ref.No. | Part No. | Description |
|---------|--------------|----------------------------------|
| D329 | 8-719-911-19 | DIODE 1SS119 |
| D330 | 8-719-911-19 | DIODE 1SS119 |
| D331 | 8-719-911-19 | DIODE 1SS119 |
| D333 | 8-719-110-22 | DIODE RD11ES-B2 |
| D334 | 8-719-110-13 | DIODE RD9.1ES-B2 |
| D335 | 8-719-109-93 | DIODE RD6.2ES-B1 |
| D336 | 8-719-104-34 | DIODE 1S2836 |
| D337 | 8-719-110-13 | DIODE RD9.1ES-B2 |
| D338 | 8-719-109-93 | DIODE RD6.2ES-B1 |
| D339 | 8-719-400-18 | DIODE MA152WK |
| D340 | 8-719-109-72 | DIODE RD3.9ES-B2 |
| D341 | 8-719-110-13 | DIODE RD9.1ES-B2 |
| D342 | 8-719-109-89 | DIODE RD5.6ES-B2 |
| D344 | 8-719-109-89 | DIODE RD5.6ES-B2 |
| D345 | 8-719-400-18 | DIODE MA152WK |
| D346 | 8-719-976-19 | DIODE RLS-4148 |
| D347 | 8-719-976-19 | DIODE RLS-4148 |
| D348 | 8-719-976-19 | DIODE RLS-4148 |
| D591 | 8-719-945-59 | DIODE DSA3A4 |
| D701 | 8-719-987-45 | DIODE CL-155Y/PG-D |
| D702 | 8-719-987-45 | DIODE CL-155Y/PG-D |
| D703 | 8-719-987-45 | DIODE CL-155Y/PG-D |
| D704 | 8-719-987-45 | DIODE CL-155Y/PG-D |
| D705 | 8-719-987-45 | DIODE CL-155Y/PG-D |
| D706 | 8-719-987-45 | DIODE CL-155Y/PG-D |
| D707 | 8-719-987-45 | DIODE CL-155Y/PG-D |
| D708 | 8-719-987-45 | DIODE CL-155Y/PG-D |
| D709 | 8-719-987-45 | DIODE CL-155Y/PG-D |
| D710 | 8-719-987-45 | DIODE CL-155Y/PG-D |
| D711 | 8-719-987-45 | DIODE CL-155Y/PG-D |
| D712 | 8-719-987-45 | DIODE CL-155Y/PG-D |
| D713 | 8-719-987-45 | DIODE CL-155Y/PG-D |
| D714 | 8-719-987-45 | DIODE CL-155Y/PG-D |
| D715 | 8-719-987-45 | DIODE CL-155Y/PG-D |
| D716 | 8-719-987-45 | DIODE CL-155Y/PG-D |
| D717 | 8-719-987-45 | DIODE CL-155Y/PG-D |
| D718 | 8-719-987-45 | DIODE CL-155Y/PG-D |
| D719 | 8-719-987-45 | DIODE CL-155Y/PG-D |
| D720 | 8-719-987-45 | DIODE CL-155Y/PG-D |
| D721 | 8-719-987-45 | DIODE CL-155Y/PG-D |
| D722 | 8-719-987-45 | DIODE CL-155Y/PG-D |
| D723 | 8-719-987-45 | DIODE CL-155Y/PG-D |
| D724 | 8-719-987-45 | DIODE CL-155Y/PG-D |
| D725 | 8-719-987-45 | DIODE CL-155Y/PG-D |
| D801 | 8-719-104-34 | (7072)...DIODE 1S2836 |
| D851 | 8-719-911-19 | DIODE 1SS119 |
| FE1 | 1-465-141-11 | (7071).....TUNER UNIT (FM/MW/LW) |
| FE1 | 1-465-405-11 | (7070/7072)...TUNER UNIT (FM/AM) |
| HP901 | 1-543-717-11 | HEAD, MAGNETIC (PLAYBACK) |
| IC1 | 1-808-516-11 | IC NMX3S920 |
| IC2 | 8-759-821-41 | IC LM7000N |
| IC101 | 8-759-634-40 | IC MS1524FP |
| IC102 | 8-759-932-64 | IC BU4052BF |
| IC103 | 8-752-032-14 | IC CXA1102M |
| IC104 | 8-759-820-15 | IC LC7537AN |

| Ref.No. | Part No. | Description | Ref.No. | Part No. | Description |
|---------------|--------------|-------------------------------------|---------|--------------|----------------------------------|
| IC105 | 8-759-909-71 | IC BA4558F | Q4 | 8-729-100-66 | TRANSISTOR 2SC1623 |
| IC106 | 8-759-909-71 | IC BA4558F | Q5 | 8-729-100-66 | TRANSISTOR 2SC1623 |
| IC107 | 8-759-909-71 | IC BA4558F | Q6 | 8-729-901-01 | TRANSISTOR DTC144EK |
| IC108 | 8-759-909-71 | IC BA4558F | Q7 | 8-729-901-04 | TRANSISTOR DTA114EK |
| IC109 | 8-759-909-71 | IC BA4558F | Q8 | 8-729-807-12 | TRANSISTOR 2SD1802-S |
| IC110 | 8-759-909-71 | IC BA4558F | Q9 | 8-729-920-78 | TRANSISTOR 2SB1132-QR |
| IC111 | 8-759-631-00 | IC M5280FP | Q10 | 8-729-920-78 | TRANSISTOR 2SB1132-QR |
| IC301 | 8-759-149-68 | IC UPD75116GF-625-3BE | Q11 | 8-729-106-68 | TRANSISTOR 2SD1615A-GP |
| IC302 | 8-759-008-67 | IC MC14066BF | Q102 | 8-729-920-21 | TRANSISTOR DTC314TKH04 |
| IC501 | 8-759-230-61 | IC TA8205AH | Q103 | 8-729-920-21 | TRANSISTOR DTC314TKH04 |
| IC601 | 8-759-230-61 | IC TA8205AH | Q202 | 8-729-920-21 | TRANSISTOR DTC314TKH04 |
| IC701 | 8-759-821-44 | IC LC7582 | Q203 | 8-729-920-21 | TRANSISTOR DTC314TKH04 |
| IC801 | 8-759-971-69 | (7072)...IC TDA1579 | Q301 | 8-729-920-78 | TRANSISTOR 2SB1132-QR |
| IC802 | 8-759-945-58 | (7072)...IC RC4558P | Q302 | 8-729-900-53 | TRANSISTOR DTC114EK |
| JR2 | 1-216-296-00 | METAL GLAZE 0 5% 1/8W | Q303 | 8-729-100-66 | TRANSISTOR 2SC1623 |
| JR3 | 1-216-296-00 | METAL GLAZE 0 5% 1/8W | Q304 | 8-729-807-50 | TRANSISTOR 2SD1623 |
| JR4 | 1-216-296-00 | METAL GLAZE 0 5% 1/8W | Q305 | 8-729-900-53 | TRANSISTOR DTC114EK |
| JR5 | 1-216-296-00 | METAL GLAZE 0 5% 1/8W | Q307 | 8-729-900-53 | TRANSISTOR DTC114EK |
| JR6 | 1-216-296-00 | METAL GLAZE 0 5% 1/8W | Q308 | 8-729-100-66 | TRANSISTOR 2SC1623 |
| JR43 (R43) | 1-216-296-00 | (7071)...METAL GLAZE 0 5% 1/8W | Q309 | 8-729-807-12 | TRANSISTOR 2SD1802-S |
| JR101 | 1-216-296-00 | (7070/7071)...METAL GLAZE 0 5% 1/8W | Q310 | 8-729-100-66 | TRANSISTOR 2SC1623 |
| JR102 | 1-216-296-00 | (7070/7071)...METAL GLAZE 0 5% 1/8W | Q311 | 8-729-901-01 | TRANSISTOR DTC144EK |
| JR103 | 1-216-296-00 | (7070/7071)...METAL GLAZE 0 5% 1/8W | Q312 | 8-729-807-12 | TRANSISTOR 2SD1802-S |
| JR105 | 1-216-184-00 | (7071)...METAL GLAZE 270 5% 1/8W | Q313 | 8-729-106-68 | TRANSISTOR 2SD1615A-GP |
| JR105 | 1-216-296-00 | (7070/7072)...METAL GLAZE 0 5% 1/8W | Q314 | 8-729-100-66 | TRANSISTOR 2SC1623 |
| JR106 | 1-216-296-00 | METAL GLAZE 0 5% 1/8W | Q315 | 8-729-216-22 | TRANSISTOR 2SA1162 |
| JR107 | 1-216-296-00 | METAL GLAZE 0 5% 1/8W | Q316 | 8-729-901-01 | TRANSISTOR DTC144EK |
| JR108 | 1-216-296-00 | METAL GLAZE 0 5% 1/8W | Q319 | 8-729-807-12 | TRANSISTOR 2SD1802-S |
| JR109 | 1-216-296-00 | METAL GLAZE 0 5% 1/8W | Q323 | 8-729-901-04 | TRANSISTOR DTA114EK |
| JR110 | 1-216-296-00 | (7071)...METAL GLAZE 0 5% 1/8W | Q324 | 8-729-900-53 | TRANSISTOR DTC114EK |
| JR501 | 1-216-296-00 | METAL GLAZE 0 5% 1/8W | Q325 | 8-729-920-78 | TRANSISTOR 2SB1132-QR |
| JR502 | 1-216-296-00 | METAL GLAZE 0 5% 1/8W | Q326 | 8-729-100-66 | TRANSISTOR 2SC1623 |
| JR503 | 1-216-296-00 | METAL GLAZE 0 5% 1/8W | Q327 | 8-729-901-04 | TRANSISTOR DTA114EK |
| JR504 | 1-216-296-00 | METAL GLAZE 0 5% 1/8W | Q328 | 8-729-216-22 | TRANSISTOR 2SA1162 |
| JR505 | 1-216-296-00 | METAL GLAZE 0 5% 1/8W | Q329 | 8-729-920-78 | TRANSISTOR 2SB1132-QR |
| JR801 | 1-216-296-00 | (7072)...METAL GLAZE 0 5% 1/8W | Q330 | 8-729-900-53 | TRANSISTOR DTC114EK |
| JW701 | 1-216-296-00 | METAL GLAZE 0 5% 1/8W | Q332 | 8-729-901-06 | TRANSISTOR DTA144EK |
| JW702 | 1-216-296-00 | METAL GLAZE 0 5% 1/8W | Q701 | 8-729-141-75 | TRANSISTOR 2SD596-DV345 |
| L1 | 1-410-513-11 | INDUCTOR 22UH | Q702 | 8-729-141-75 | TRANSISTOR 2SD596-DV345 |
| L301 | 1-408-111-00 | INDUCTOR 3.3UH | Q703 | 8-729-141-75 | TRANSISTOR 2SD596-DV345 |
| L302 | 1-410-513-11 | INDUCTOR 22UH | Q704 | 8-729-904-78 | TRANSISTOR DTD1132K |
| L303 | 1-410-513-11 | INDUCTOR 22UH | R1 | 1-216-198-00 | METAL GLAZE 1K 5% 1/8W |
| L801 | 1-424-036-11 | (7072)...COIL (FILTER) | R2 | 1-216-202-00 | METAL GLAZE 1.5K 5% 1/8W |
| LC0701 | 1-808-975-11 | DISPLAY PANEL, LIQUID CRYSTAL | R3 | 1-216-194-00 | METAL GLAZE 680 5% 1/8W |
| M901 | 3-397-414-01 | MOTOR ASSY | R4 | 1-216-229-00 | METAL GLAZE 20K 5% 1/8W |
| PL701 | 1-518-646-11 | LAMP, PILOT (AMBER) | R5 | 1-216-214-00 | METAL GLAZE 4.7K 5% 1/8W |
| PL702 | 1-518-646-11 | LAMP, PILOT (AMBER) | R6 | 1-216-150-00 | METAL GLAZE 10 5% 1/8W |
| PL703 | 1-518-648-11 | LAMP, PILOT (GREEN) | R7 | 1-216-222-00 | METAL GLAZE 10K 5% 1/8W |
| PL704 | 1-518-648-11 | LAMP, PILOT (GREEN) | R8 | 1-216-226-00 | METAL GLAZE 15K 5% 1/8W |
| PM901 | 1-454-464-11 | SOLENOID, PLUNGER | R9 | 1-216-216-00 | METAL GLAZE 5.6K 5% 1/8W |
| PM902 | 1-454-517-11 | SOLENOID, PLUNGER | R10 | 1-216-238-00 | METAL GLAZE 47K 5% 1/8W |
| Q1 | 8-729-100-66 | TRANSISTOR 2SC1623 | R11 | 1-216-232-00 | METAL GLAZE 27K 5% 1/8W |
| Q2 | 8-729-100-66 | TRANSISTOR 2SC1623 | R12 | 1-216-210-00 | METAL GLAZE 3.3K 5% 1/8W |
| Q3 | 8-729-100-66 | TRANSISTOR 2SC1623 | R13 | 1-216-210-00 | METAL GLAZE 3.3K 5% 1/8W |
| | | | R14 | 1-216-228-00 | (7071/7072) |
| | | | | | ...METAL GLAZE 18K 5% 1/8W |
| | | | R14 | 1-216-230-00 | (7070)...METAL GLAZE 22K 5% 1/8W |

| Ref.No. | Part No. | Description | | | | |
|---------|--------------|-------------------------------|------|----|------|--|
| R15 | 1-216-228-00 | (7071/7072) ...METAL GLAZE | 18K | 5% | 1/8W | |
| R15 | 1-216-230-00 | (7070)...METAL GLAZE | 22K | 5% | 1/8W | |
| R16 | 1-216-236-00 | (7071/7072) ...METAL GLAZE | 39K | 5% | 1/8W | |
| R16 | 1-216-240-00 | (7070)...METAL GLAZE | 56K | 5% | 1/8W | |
| R17 | 1-216-236-00 | (7071/7072) ...METAL GLAZE | 39K | 5% | 1/8W | |
| R17 | 1-216-240-00 | (7070)...METAL GLAZE | 56K | 5% | 1/8W | |
| R18 | 1-216-270-00 | METAL GLAZE | 1M | 5% | 1/8W | |
| R19 | 1-216-216-00 | METAL GLAZE | 5.6K | 5% | 1/8W | |
| R20 | 1-216-202-00 | METAL GLAZE | 1.5K | 5% | 1/8W | |
| R21 | 1-216-198-00 | METAL GLAZE | 1K | 5% | 1/8W | |
| R22 | 1-216-210-00 | METAL GLAZE | 3.3K | 5% | 1/8W | |
| R23 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R24 | 1-216-198-00 | METAL GLAZE | 1K | 5% | 1/8W | |
| R25 | 1-216-212-00 | METAL GLAZE | 3.9K | 5% | 1/8W | |
| R26 | 1-216-198-00 | METAL GLAZE | 1K | 5% | 1/8W | |
| R27 | 1-216-210-00 | METAL GLAZE | 3.3K | 5% | 1/8W | |
| R28 | 1-216-214-00 | METAL GLAZE | 4.7K | 5% | 1/8W | |
| R29 | 1-216-210-00 | METAL GLAZE | 3.3K | 5% | 1/8W | |
| R30 | 1-216-198-00 | METAL GLAZE | 1K | 5% | 1/8W | |
| R31 | 1-216-214-00 | METAL GLAZE | 4.7K | 5% | 1/8W | |
| R32 | 1-216-214-00 | METAL GLAZE | 4.7K | 5% | 1/8W | |
| R33 | 1-216-214-00 | METAL GLAZE | 4.7K | 5% | 1/8W | |
| R34 | 1-216-216-00 | METAL GLAZE | 5.6K | 5% | 1/8W | |
| R35 | 1-216-206-00 | METAL GLAZE | 2.2K | 5% | 1/8W | |
| R36 | 1-216-190-00 | METAL GLAZE | 470 | 5% | 1/8W | |
| R37 | 1-216-232-00 | METAL GLAZE | 27K | 5% | 1/8W | |
| R38 | 1-216-206-00 | METAL GLAZE | 2.2K | 5% | 1/8W | |
| R39 | 1-216-194-00 | METAL GLAZE | 680 | 5% | 1/8W | |
| R41 | 1-216-226-00 | METAL GLAZE | 15K | 5% | 1/8W | |
| R42 | 1-216-226-00 | METAL GLAZE | 15K | 5% | 1/8W | |
| R44 | 1-216-214-00 | METAL GLAZE | 4.7K | 5% | 1/8W | |
| R101 | 1-216-230-00 | METAL GLAZE | 22K | 5% | 1/8W | |
| R102 | 1-216-230-00 | METAL GLAZE | 22K | 5% | 1/8W | |
| R103 | 1-216-180-00 | METAL GLAZE | 180 | 5% | 1/8W | |
| R104 | 1-216-258-00 | METAL GLAZE | 330K | 5% | 1/8W | |
| R105 | 1-216-226-00 | METAL GLAZE | 15K | 5% | 1/8W | |
| R106 | 1-216-230-00 | METAL GLAZE | 22K | 5% | 1/8W | |
| R107 | 1-216-210-00 | METAL GLAZE | 3.3K | 5% | 1/8W | |
| R108 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R114 | 1-216-198-00 | METAL GLAZE | 1K | 5% | 1/8W | |
| R116 | 1-216-238-00 | METAL GLAZE | 47K | 5% | 1/8W | |
| R117 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W | |
| R118 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R119 | 1-216-226-00 | METAL GLAZE | 15K | 5% | 1/8W | |
| R120 | 1-216-210-00 | METAL GLAZE | 3.3K | 5% | 1/8W | |
| R123 | 1-216-270-00 | METAL GLAZE | 1M | 5% | 1/8W | |
| R124 | 1-216-198-00 | METAL GLAZE | 1K | 5% | 1/8W | |
| R129 | 1-216-230-00 | METAL GLAZE | 22K | 5% | 1/8W | |
| R130 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R131 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R133 | 1-216-206-00 | METAL GLAZE | 2.2K | 5% | 1/8W | |
| R134 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R137 | 1-216-206-00 | METAL GLAZE | 2.2K | 5% | 1/8W | |
| R201 | 1-216-230-00 | METAL GLAZE | 22K | 5% | 1/8W | |

| Ref.No. | Part No. | Description | | | | |
|---------|--------------|-------------|------|----|------|--|
| R202 | 1-216-230-00 | METAL GLAZE | 22K | 5% | 1/8W | |
| R203 | 1-216-180-00 | METAL GLAZE | 180 | 5% | 1/8W | |
| R204 | 1-216-258-00 | METAL GLAZE | 330K | 5% | 1/8W | |
| R205 | 1-216-226-00 | METAL GLAZE | 15K | 5% | 1/8W | |
| R206 | 1-216-230-00 | METAL GLAZE | 22K | 5% | 1/8W | |
| R207 | 1-216-210-00 | METAL GLAZE | 3.3K | 5% | 1/8W | |
| R208 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R214 | 1-216-198-00 | METAL GLAZE | 1K | 5% | 1/8W | |
| R216 | 1-216-238-00 | METAL GLAZE | 47K | 5% | 1/8W | |
| R217 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W | |
| R218 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R219 | 1-216-226-00 | METAL GLAZE | 15K | 5% | 1/8W | |
| R220 | 1-216-210-00 | METAL GLAZE | 3.3K | 5% | 1/8W | |
| R223 | 1-216-270-00 | METAL GLAZE | 1M | 5% | 1/8W | |
| R224 | 1-216-198-00 | METAL GLAZE | 1K | 5% | 1/8W | |
| R229 | 1-216-230-00 | METAL GLAZE | 22K | 5% | 1/8W | |
| R230 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R231 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R233 | 1-216-206-00 | METAL GLAZE | 2.2K | 5% | 1/8W | |
| R234 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R237 | 1-216-206-00 | METAL GLAZE | 2.2K | 5% | 1/8W | |
| R301 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R302 | 1-216-206-00 | METAL GLAZE | 2.2K | 5% | 1/8W | |
| R303 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R304 | 1-216-206-00 | METAL GLAZE | 2.2K | 5% | 1/8W | |
| R305 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R306 | 1-216-206-00 | METAL GLAZE | 2.2K | 5% | 1/8W | |
| R307 | 1-216-214-00 | METAL GLAZE | 4.7K | 5% | 1/8W | |
| R308 | 1-216-190-00 | METAL GLAZE | 470 | 5% | 1/8W | |
| R309 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R310 | 1-216-230-00 | METAL GLAZE | 22K | 5% | 1/8W | |
| R311 | 1-216-230-00 | METAL GLAZE | 22K | 5% | 1/8W | |
| R312 | 1-216-263-00 | METAL GLAZE | 510K | 5% | 1/8W | |
| R313 | 1-216-226-00 | METAL GLAZE | 15K | 5% | 1/8W | |
| R314 | 1-216-192-00 | METAL GLAZE | 560 | 5% | 1/8W | |
| R317 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W | |
| R318 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W | |
| R320 | 1-216-238-00 | METAL GLAZE | 47K | 5% | 1/8W | |
| R321 | 1-216-460-00 | METAL | 43K | 1% | 1/6W | |
| R322 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R323 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R324 | 1-216-236-00 | METAL GLAZE | 39K | 5% | 1/8W | |
| R325 | 1-216-206-00 | METAL GLAZE | 2.2K | 5% | 1/8W | |
| R326 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R327 | 1-216-198-00 | METAL GLAZE | 1K | 5% | 1/8W | |
| R328 | 1-216-198-00 | METAL GLAZE | 1K | 5% | 1/8W | |
| R329 | 1-216-198-00 | METAL GLAZE | 1K | 5% | 1/8W | |
| R330 | 1-216-198-00 | METAL GLAZE | 1K | 5% | 1/8W | |
| R331 | 1-216-198-00 | METAL GLAZE | 1K | 5% | 1/8W | |
| R332 | 1-216-198-00 | METAL GLAZE | 1K | 5% | 1/8W | |
| R333 | 1-216-198-00 | METAL GLAZE | 1K | 5% | 1/8W | |
| R334 | 1-216-254-00 | METAL GLAZE | 220K | 5% | 1/8W | |
| R335 | 1-216-198-00 | METAL GLAZE | 1K | 5% | 1/8W | |
| R336 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W | |
| R337 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W | |
| R338 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W | |
| R339 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W | |

| Ref.No. | Part No. | Description | | | | |
|---------|--------------|-------------|------|----|------|--|
| R340 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W | |
| R341 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W | |
| R342 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W | |
| R343 | 1-216-206-00 | METAL GLAZE | 2.2K | 5% | 1/8W | |
| R344 | 1-216-206-00 | METAL GLAZE | 2.2K | 5% | 1/8W | |
| R345 | 1-216-206-00 | METAL GLAZE | 2.2K | 5% | 1/8W | |
| R346 | 1-216-174-00 | METAL GLAZE | 100 | 5% | 1/8W | |
| R347 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W | |
| R348 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W | |
| R349 | 1-216-198-00 | METAL GLAZE | 1K | 5% | 1/8W | |
| R350 | 1-216-240-00 | METAL GLAZE | 56K | 5% | 1/8W | |
| R351 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W | |
| R352 | 1-216-254-00 | METAL GLAZE | 220K | 5% | 1/8W | |
| R353 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W | |
| R354 | 1-216-238-00 | METAL GLAZE | 47K | 5% | 1/8W | |
| R355 | 1-216-198-00 | METAL GLAZE | 1K | 5% | 1/8W | |
| R356 | 1-216-198-00 | METAL GLAZE | 1K | 5% | 1/8W | |
| R357 | 1-216-182-00 | METAL GLAZE | 220 | 5% | 1/8W | |
| R358 | 1-216-238-00 | METAL GLAZE | 47K | 5% | 1/8W | |
| R359 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R360 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R361 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R362 | 1-216-190-00 | METAL GLAZE | 470 | 5% | 1/8W | |
| R363 | 1-216-190-00 | METAL GLAZE | 470 | 5% | 1/8W | |
| R367 | 1-216-214-00 | METAL GLAZE | 4.7K | 5% | 1/8W | |
| R368 | 1-216-206-00 | METAL GLAZE | 2.2K | 5% | 1/8W | |
| R369 | 1-216-216-00 | METAL GLAZE | 5.6K | 5% | 1/8W | |
| R372 | 1-216-240-00 | METAL GLAZE | 56K | 5% | 1/8W | |
| R373 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R374 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R375 | 1-216-214-00 | METAL GLAZE | 4.7K | 5% | 1/8W | |
| R376 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R377 | 1-216-198-00 | METAL GLAZE | 1K | 5% | 1/8W | |
| R378 | 1-216-240-00 | METAL GLAZE | 56K | 5% | 1/8W | |
| R380 | 1-216-240-00 | METAL GLAZE | 56K | 5% | 1/8W | |
| R381 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R382 | 1-216-206-00 | METAL GLAZE | 2.2K | 5% | 1/8W | |
| R383 | 1-216-214-00 | METAL GLAZE | 4.7K | 5% | 1/8W | |
| R384 | 1-216-254-00 | METAL GLAZE | 220K | 5% | 1/8W | |
| R389 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W | |
| R390 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R392 | 1-216-134-00 | METAL GLAZE | 2.2 | 5% | 1/8W | |
| R393 | 1-216-134-00 | METAL GLAZE | 2.2 | 5% | 1/8W | |
| R396 | 1-216-198-00 | METAL GLAZE | 1K | 5% | 1/8W | |
| R399 | 1-216-238-00 | METAL GLAZE | 47K | 5% | 1/8W | |
| R501 | 1-216-220-00 | METAL GLAZE | 8.2K | 5% | 1/8W | |
| R502 | 1-216-214-00 | METAL GLAZE | 4.7K | 5% | 1/8W | |
| R503 | 1-216-278-00 | METAL GLAZE | 2.2M | 5% | 1/8W | |
| R504 | 1-216-190-00 | METAL GLAZE | 470 | 5% | 1/8W | |
| R507 | 1-216-134-00 | METAL GLAZE | 2.2 | 5% | 1/8W | |
| R508 | 1-216-134-00 | METAL GLAZE | 2.2 | 5% | 1/8W | |
| R551 | 1-216-234-00 | METAL GLAZE | 33K | 5% | 1/8W | |
| R552 | 1-216-214-00 | METAL GLAZE | 4.7K | 5% | 1/8W | |
| R553 | 1-216-278-00 | METAL GLAZE | 2.2M | 5% | 1/8W | |
| R554 | 1-216-190-00 | METAL GLAZE | 470 | 5% | 1/8W | |
| R557 | 1-216-134-00 | METAL GLAZE | 2.2 | 5% | 1/8W | |
| R558 | 1-216-134-00 | METAL GLAZE | 2.2 | 5% | 1/8W | |

| Ref.No. | Part No. | Description | | | | |
|---------|--------------|----------------------|------|----|------|--|
| R591 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R592 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W | |
| R601 | 1-216-220-00 | METAL GLAZE | 8.2K | 5% | 1/8W | |
| R602 | 1-216-214-00 | METAL GLAZE | 4.7K | 5% | 1/8W | |
| R603 | 1-216-278-00 | METAL GLAZE | 2.2M | 5% | 1/8W | |
| R604 | 1-216-190-00 | METAL GLAZE | 470 | 5% | 1/8W | |
| R607 | 1-216-134-00 | METAL GLAZE | 2.2 | 5% | 1/8W | |
| R608 | 1-216-134-00 | METAL GLAZE | 2.2 | 5% | 1/8W | |
| R651 | 1-216-234-00 | METAL GLAZE | 33K | 5% | 1/8W | |
| R652 | 1-216-214-00 | METAL GLAZE | 4.7K | 5% | 1/8W | |
| R653 | 1-216-278-00 | METAL GLAZE | 2.2M | 5% | 1/8W | |
| R654 | 1-216-190-00 | METAL GLAZE | 470 | 5% | 1/8W | |
| R657 | 1-216-134-00 | METAL GLAZE | 2.2 | 5% | 1/8W | |
| R658 | 1-216-134-00 | METAL GLAZE | 2.2 | 5% | 1/8W | |
| R692 | 1-216-246-00 | METAL GLAZE | 100K | 5% | 1/8W | |
| R701 | 1-216-176-00 | METAL GLAZE | 120 | 5% | 1/8W | |
| R702 | 1-216-176-00 | METAL GLAZE | 120 | 5% | 1/8W | |
| R703 | 1-216-176-00 | METAL GLAZE | 120 | 5% | 1/8W | |
| R704 | 1-216-176-00 | METAL GLAZE | 120 | 5% | 1/8W | |
| R705 | 1-216-176-00 | METAL GLAZE | 120 | 5% | 1/8W | |
| R706 | 1-216-176-00 | METAL GLAZE | 120 | 5% | 1/8W | |
| R707 | 1-216-176-00 | METAL GLAZE | 120 | 5% | 1/8W | |
| R708 | 1-216-183-00 | METAL GLAZE | 240 | 5% | 1/8W | |
| R709 | 1-216-183-00 | METAL GLAZE | 240 | 5% | 1/8W | |
| R710 | 1-216-206-00 | METAL GLAZE | 2.2K | 5% | 1/8W | |
| R711 | 1-216-240-00 | METAL GLAZE | 56K | 5% | 1/8W | |
| R712 | 1-216-198-00 | METAL GLAZE | 1K | 5% | 1/8W | |
| R713 | 1-216-198-00 | METAL GLAZE | 1K | 5% | 1/8W | |
| R714 | 1-216-222-00 | METAL GLAZE | 10K | 5% | 1/8W | |
| R715 | 1-216-214-00 | METAL GLAZE | 4.7K | 5% | 1/8W | |
| R716 | 1-216-240-00 | METAL GLAZE | 56K | 5% | 1/8W | |
| R751 | 1-216-176-00 | METAL GLAZE | 120 | 5% | 1/8W | |
| R752 | 1-216-176-00 | METAL GLAZE | 120 | 5% | 1/8W | |
| R753 | 1-216-176-00 | METAL GLAZE | 120 | 5% | 1/8W | |
| R754 | 1-216-176-00 | METAL GLAZE | 120 | 5% | 1/8W | |
| R755 | 1-216-176-00 | METAL GLAZE | 120 | 5% | 1/8W | |
| R756 | 1-216-176-00 | METAL GLAZE | 120 | 5% | 1/8W | |
| R757 | 1-216-176-00 | METAL GLAZE | 120 | 5% | 1/8W | |
| R758 | 1-216-183-00 | METAL GLAZE | 240 | 5% | 1/8W | |
| R759 | 1-216-183-00 | METAL GLAZE | 240 | 5% | 1/8W | |
| R791 | 1-216-262-00 | METAL GLAZE | 470K | 5% | 1/8W | |
| R792 | 1-216-240-00 | METAL GLAZE | 56K | 5% | 1/8W | |
| R801 | 1-216-238-00 | (7072)...METAL GLAZE | 47K | 5% | 1/8W | |
| R802 | 1-216-242-00 | (7072)...METAL GLAZE | 68K | 5% | 1/8W | |
| R803 | 1-216-214-00 | (7072)...METAL GLAZE | 4.7K | 5% | 1/8W | |
| R804 | 1-216-246-00 | (7072)...METAL GLAZE | 100K | 5% | 1/8W | |
| R805 | 1-216-190-00 | (7072)...METAL GLAZE | 470 | 5% | 1/8W | |
| R806 | 1-216-266-00 | (7072)...METAL GLAZE | 680K | 5% | 1/8W | |
| R807 | 1-216-254-00 | (7072)...METAL GLAZE | 220K | 5% | 1/8W | |
| R808 | 1-216-216-00 | (7072)...METAL GLAZE | 5.6K | 5% | 1/8W | |
| R809 | 1-216-210-00 | (7072)...METAL GLAZE | 3.3K | 5% | 1/8W | |
| R810 | 1-216-216-00 | (7072)...METAL GLAZE | 5.6K | 5% | 1/8W | |
| R811 | 1-216-210-00 | (7072)...METAL GLAZE | 3.3K | 5% | 1/8W | |
| R812 | 1-216-265-00 | (7072)...METAL GLAZE | 620K | 5% | 1/8W | |
| R813 | 1-216-238-00 | (7072)...METAL GLAZE | 47K | 5% | 1/8W | |
| R814 | 1-216-234-00 | (7072)...METAL GLAZE | 33K | 5% | 1/8W | |
| R815 | 1-216-224-00 | (7072)...METAL GLAZE | 12K | 5% | 1/8W | |


| Ref.No. | Part No. | Description |
|---------|--------------|--|
| R816 | 1-216-255-00 | {7072}...METAL GLAZE 240K 5% 1/8W |
| R817 | 1-216-244-00 | {7072}...METAL GLAZE 82K 5% 1/8W |
| R818 | 1-216-238-00 | {7072}...METAL GLAZE 47K 5% 1/8W |
| R819 | 1-216-190-00 | {7072}...METAL GLAZE 470 5% 1/8W |
| R820 | 1-216-238-00 | {7072}...METAL GLAZE 47K 5% 1/8W |
| R821 | 1-216-222-00 | {7072}...METAL GLAZE 10K 5% 1/8W |
| R822 | 1-216-224-00 | {7072}...METAL GLAZE 12K 5% 1/8W |
| R851 | 1-216-198-00 | METAL GLAZE 1K 5% 1/8W |
| RV1 | 1-226-994-00 | RES. ADJ, CARBON 10K |
| RV101 | 1-226-773-11 | RES. ADJ, METAL GLAZE 22K |
| RV201 | 1-226-773-11 | RES. ADJ, METAL GLAZE 22K |
| RV801 | 1-226-769-00 | {7072}...RES. ADJ, METAL GLAZE 100 |
| S10 | 1-572-353-11 | SWITCH, SLIDE (R/N) |
| S11 | 1-572-352-11 | SWITCH, LEAF (FF/REW) |
| S12 | 1-554-790-11 | SWITCH, POWER (PACK-IN) |
| S301 | 1-553-510-00 | {7070(AEP,E)}...SWITCH, SLIDE (9K/10K) |
| S302 | 1-553-510-00 | SWITCH, SLIDE (ACC) |
| S901 | 1-570-771-11 | SWITCH (POWER) |
| SW701 | 1-571-938-21 | SWITCH, KEY BOARD (LOUD) |
| SW702 | 1-571-938-21 | SWITCH, KEY BOARD (M.SCAN/A.MEM) |
| SW703 | 1-571-938-21 | SWITCH, KEY BOARD (SENS) |
| SW704 | 1-571-938-21 | SWITCH, KEY BOARD (DSPL) |
| SW705 | 1-554-813-41 | SWITCH, KEY BOARD (LEVEL +) |
| SW706 | 1-554-813-41 | SWITCH, KEY BOARD (SELECT) |
| SW707 | 1-554-813-41 | SWITCH, KEY BOARD (LEVEL -) |
| SW708 | 1-554-813-41 | SWITCH, KEY BOARD (MUTE) |
| SW709 | 1-554-813-41 | SWITCH, KEY BOARD (SHUF 1/1) |
| SW710 | 1-554-813-41 | SWITCH, KEY BOARD (SHUF 2/2) |
| SW711 | 1-554-813-41 | SWITCH, KEY BOARD (MTL/3) |
| SW712 | 1-554-813-41 | SWITCH, KEY BOARD (AMS/4) |
| SW713 | 1-554-813-41 | SWITCH, KEY BOARD (DOLBY/5) |
| SW714 | 1-554-813-41 | SWITCH, KEY BOARD (ATA/6) |
| SW715 | 1-554-813-41 | SWITCH, KEY BOARD (DISC +/-MANUAL +) |
| SW716 | 1-554-813-41 | SWITCH, KEY BOARD (DISC +/-MANUAL -) |
| SW717 | 1-554-813-41 | SWITCH, KEY BOARD (SEEK +/-TRACK +) |
| SW718 | 1-554-813-41 | SWITCH, KEY BOARD (SEEK +/-TRACK -) |
| SW719 | 1-554-813-41 | SWITCH, KEY BOARD (FM/AM) |
| SW720 | 1-554-813-41 | SWITCH, KEY BOARD (CD) |
| SW721 | 1-571-938-21 | SWITCH, KEY BOARD (TAPE) |
| SW722 | 1-571-938-21 | SWITCH, KEY BOARD (OFF) |
| SW723 | 1-554-813-41 | SWITCH, KEY BOARD (RESET) |
| X1 | 1-567-250-11 | OSCILLATOR, CERAMIC (456kHz) |
| X2 | 1-567-848-11 | VIBRATOR, CRYSTAL (7.2MHz) |
| X301 | 1-567-170-00 | OSCILLATOR, CERAMIC (4.19MHz) |

ACCESSORY & PACKING MATERIAL

| | |
|---------------|----------------------------|
| 3-336-617-01 | BAG, PROTECTION |
| *3-349-488-01 | CUSHION (UPPER) |
| *3-349-489-01 | CUSHION (LOWER) |
| *3-358-602-01 | {7070}...INDIVIDUAL CARTON |
| *3-362-794-01 | {7071}...INDIVIDUAL CARTON |
| *3-362-796-01 | {7072}...INDIVIDUAL CARTON |

| | |
|--------------|--|
| 3-751-518-11 | {7070(AEP)/7071}...MANUAL, INSTRUCTION (Installation/Connection) (English,French,Dutch) |
| 3-751-518-21 | {7070(US,Canadian)}...MANUAL, INSTRUCTION (Installation/Connection) (English,French) |
| 3-751-518-41 | {7070(AEP)}...MANUAL, INSTRUCTION (Installation/Connection) (Spanish,Swedish,Italian,Portuguese) |
| 3-751-518-51 | {7072}...MANUAL, INSTRUCTION (Installation/Connection) (English,French,German,Italian) |
| 3-751-518-61 | {7070(E)}...MANUAL, INSTRUCTION (Installation/Connection) (English,Spanish,Chinese) |
| 3-751-519-11 | {7070(AEP)/7071}...MANUAL, INSTRUCTION (English,French,Dutch) |
| 3-751-519-21 | {7070(US,Canadian)}...MANUAL, INSTRUCTION (English,French) |
| 3-751-519-41 | {7070(AEP)}...MANUAL, INSTRUCTION (Spanish,Swedish,Italian,Portuguese) |
| 3-751-519-51 | {7072}...MANUAL, INSTRUCTION (English,French,German,Italian) |
| 3-751-519-61 | {7070(E)}...MANUAL, INSTRUCTION (English,Spanish,Chinese) |

MOUNTING HARDWARE

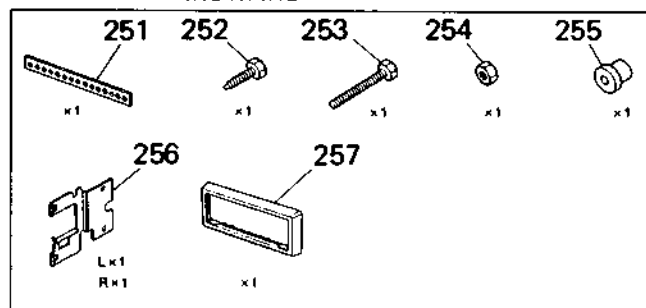

| No. | Part No. | Description | Remarks |
|-----|---------------|----------------------------|---------|
| 251 | 3-310-655-01 | SUPPORT (ND), FITTING | |
| 252 | 3-302-126-01 | SCREW, TAPPING (DIA. 5X20) | |
| 253 | 7-682-583-04 | SCREW +P 5X40 | |
| 254 | 7-684-025-04 | N 5, TYPE 2 | |
| 255 | 3-349-410-01 | BUSHING | |
| 256 | *3-349-456-01 | BRACKET (FIX, LEFT) | |
| | *3-349-457-01 | BRACKET (FIX, RIGHT) | |
| 257 | *3-349-458-01 | FRAME, ORNAMENTAL | |