

XR-CA330/CA340

SERVICE MANUAL

Ver 1.3 2003.08

US Model
XR-CA330

E Model
XR-CA340



Photo: XR-CA330

Model Name Using Similar Mechanism	NEW
Tape Transport Mechanism Type	MG-36SZ12-32

SPECIFICATIONS

AUDIO POWER SPECIFICATIONS (US model)

POWER OUTPUT AND TOTAL HARMONIC DISTORTION

22 watts per channel minimum continuous average power into 4 ohms, 4 channels driven from 20 Hz to 20 kHz with no more than 5 % total harmonic distortion.

Other specifications

Cassette player section

Tape track	4-track 2-channel stereo
Wow and flutter	0.13 % (WRMS)
Frequency response	30 – 15,000 Hz
Signal-to-noise ratio	55 dB

Tuner section

FM	
Tuning range	XR-CA330 FM tuning interval: 87.5 – 107.9 MHz (at 200 kHz step) XR-CA340 FM tuning interval: 50 kHz/200 kHz switchable 87.5 – 108.0 MHz (at 50 kHz step) 87.5 – 107.9 MHz (at 200 kHz step)
Aerial terminal	External aerial connector
Intermediate frequency	10.7 MHz
Usable sensitivity	11 dBf
Selectivity	75 dB at 400 kHz
Signal-to-noise ratio	68 dB (stereo), 68 dB (mono)
Harmonic distortion at 1 kHz	0.7 % (stereo), 0.5 % (mono)
Separation	33 dB at 1 kHz
Frequency response	30 – 15,000 Hz
AM	
Tuning range	XR-CA330 AM tuning interval: 530 – 1,710 kHz (at 10 kHz step) XR-CA340 AM tuning interval: 9 kHz/10 kHz switchable 531 – 1,602 kHz (at 9 kHz step) 530 – 1,710 kHz (at 10 kHz step)

Aerial terminal	External aerial connector
Intermediate frequency	10.7 MHz/450kHz
Sensitivity	30 µV

Power amplifier section

Outputs	Speaker outputs (sure seal connectors)
Speaker impedance	4 – 8 ohms
Maximum power output	45 W × 4 (at 4 ohms)

General

Outputs	Audio output Power aerial relay control lead Power amplifier control lead
Input (XR-CA340 only)	Telephone ATT control lead
Tone controls	XR-CA330 Bass ±10 dB at 20 Hz Treble ±10 dB at 20 kHz XR-CA340 Bass ±9 dB at 100 Hz Treble ±9 dB at 10 kHz
Power requirements	12 V DC car battery (negative earth)
Dimensions	Approx. 178 × 50 × 178 mm (7 ¹ / ₈ × 2 × 7 ¹ / ₈ in.) (w/h/d)
Mounting dimensions	Approx. 182 × 53 × 161 mm (7 ¹ / ₄ × 2 ¹ / ₈ × 6 ³ / ₈ in.) (w/h/d)
Mass	Approx. 1.2 kg (2 lb 10 oz.)
Supplied accessories	Parts for installation and connections (1 set) Front panel case (1)

*Design and specifications are subject to change
without notice.*

FM/AM CASSETTE CAR STEREO

9-873-346-04
2003H05-1
© 2003.08

Sony Corporation
e Vehicle Company
Published by Sony Engineering Corporation

SONY®

TABLE OF CONTENTS

1. GENERAL
 Location of Controls 3
 Setting the Clock 3
 Installation 4
 Connections 5

2. DISASSEMBLY
 2-1. Disassembly Flow 8
 2-2. Sub Panel 8
 2-3. Mechanism Deck (MG-36SZ12-32) 9
 2-4. MAIN Board 9
 2-5. Heat Sink 10
 2-6. Bracket (MD) 10
 2-7. Motor (Capstan/Reel) (M901) 11
 2-8. Main Belt, Sub Belt (C) 11
 2-9. Head (Playback) (HP901) 12

3. MECHANICAL ADJUSTMENTS 13

4. ELECTRICAL ADJUSTMENTS 13
 Tape Deck Section 14
 Tuner Section 15

5. DIAGRAMS
 5-1. Note for Printed Wiring Boards and Schematic Diagrams 18
 5-2. Printed Wiring Board – MAIN Board – 19
 5-3. Schematic Diagram – MAIN Board (1/2) – 20
 5-4. Schematic Diagram – MAIN Board (2/2) – 21
 5-5. Printed Wiring Board – CONTROL Board – 22
 5-6. Schematic Diagram – CONTROL Board – 23
 5-7. IC Pin Function Description 25

6. EXPLODED VIEWS
 6-1. General Section 27
 6-2. Front Panel Section 28
 6-3. Mechanism Deck Section (MG-36SZ12-32) 29

7. ELECTRICAL PARTS LIST 30

SERVICING NOTE

TYPE A/B DISCRIMINATION

In this set with following serial No. or later IC500 on MAIN board has been changed in the midway of production. With the consequence of this change, parts mounted on MAIN board have been changed.

MODEL	TYPE	SERIAL No.
XR-CA330	A	2620428 or before
	B	2620429 or later
XR-CA340	TYPE A only (No TYPE B)	

Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.


Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

**SECTION 1
GENERAL**

This section is extracted from instruction manual.

Location of controls

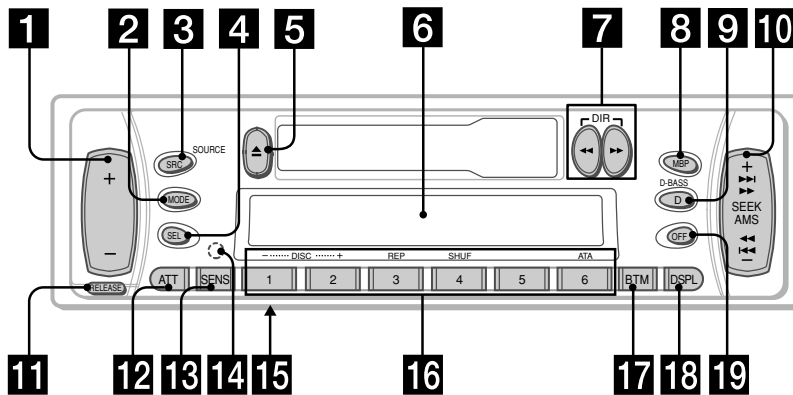

Refer to the pages listed for details.

- 1** Volume +/- button 7
- 2** MODE button
During radio reception:
BAND select 8, 9
During CD/MD playback:
CD/MD unit select 12
- 3** SOURCE (TUNER/CD/MD) button 8, 9, 12
- 4** SEL (select) button 7, 10, 11, 12
- 5** ▲ (eject) button 7, 8, 9, 12
- 6** Display window
- 7** ◀/▶ (fast winding)/DIR (tape transport direction change) buttons 7, 8
- 8** MBP (My Best sound Position) button 11
- 9** D-BASS button 11
- 10** SEEK/AMS +/- button 9, 13
Seek 9
Automatic Music Sensor 13
Manual search 13
- 11** RELEASE (front panel release) button 6, 14
- 12** ATT (attenuate) button 10
- 13** SENS button 9

- 14** RESET button (located on the front side of the unit behind the front panel) 6
- 15** Frequency select switch (XR-CA340 only) (located on the bottom of the unit) See "Frequency select switch" in the Installation/Connections manual.
- 16** Number buttons 8, 9, 10, 12, 13
During radio reception:
Preset number select 9
During tape playback:
⑥ ATA 8
During CD/MD playback:
① DISC - 13
② DISC + 13
③ REP 13
④ SHUF 13
- 17** BTM button 8
- 18** DSPL (display mode change) button 7, 12
- 19** OFF button* 6

*** Warning when installing in a car without ACC (accessory) position on the ignition key switch**
Be sure to press **OFF** on the unit for two seconds to turn off the clock display after turning off the engine.
When you press **OFF** momentarily, the clock display does not turn off and this causes battery wear.

Setting the clock

The clock uses a 12-hour digital indication.


Example: To set the clock to 10:08

- 1** Press **DSPL** for two seconds.



The hour indication flashes.

- 1** Press either side of the volume button to set the hour.




- 2** Press **SEL**.



The minute indication flashes.

- 3** Press either side of the volume button to set the minute.



- 2** Press **DSPL**.



The clock starts.

After the clock setting is complete, the display returns to normal playback mode.

Installation

Precautions

- Choose the installation location carefully so that the unit will not interfere with normal driving.
- Avoid installing the unit in areas subject to dust, dirt, excessive vibration, or high temperatures, such as in direct sunlight or near heater ducts.
- Use only the supplied mounting hardware for a safe and secure installation.

Mounting angle adjustment

Adjust the mounting angle to less than 20°.

How to detach and attach the front panel


Before installing the unit, detach the front panel.

A To detach


Before detaching the front panel, be sure to press **OFF**. Press **RELEASE**, then slide the front panel a little to the left, and pull it off towards you.

B To attach

Attach part ④ of the front panel to part ⑤ of the unit as illustrated and push the left side into position until it clicks.

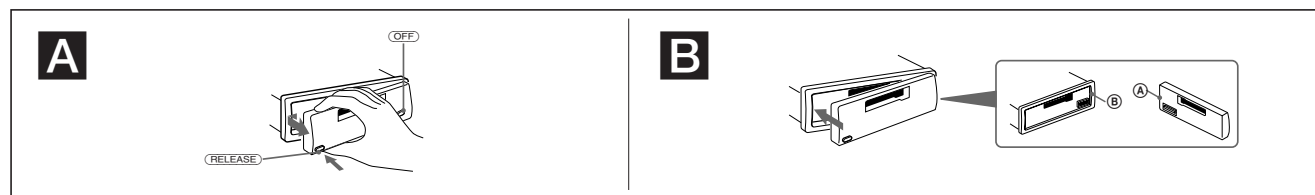


Mounting example (Installation in the dashboard)

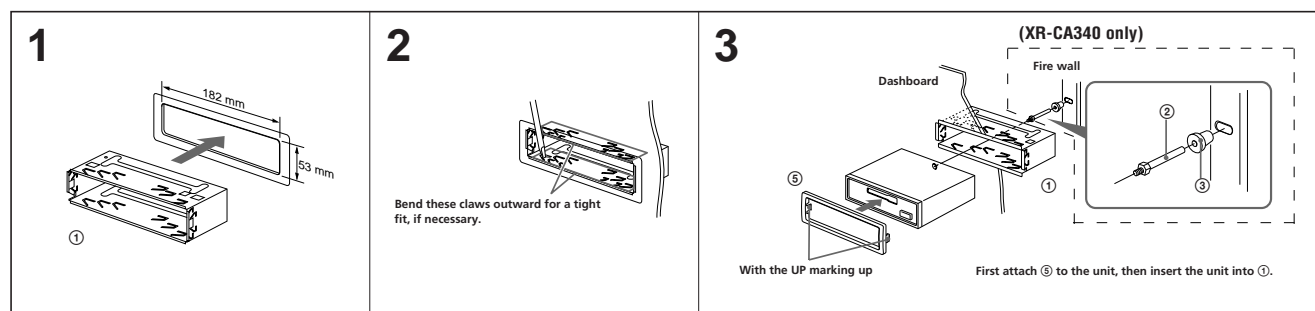

Mounting the unit in a Japanese car



You may not be able to install this unit in some makes of Japanese cars. In such a case, consult your Sony dealer.

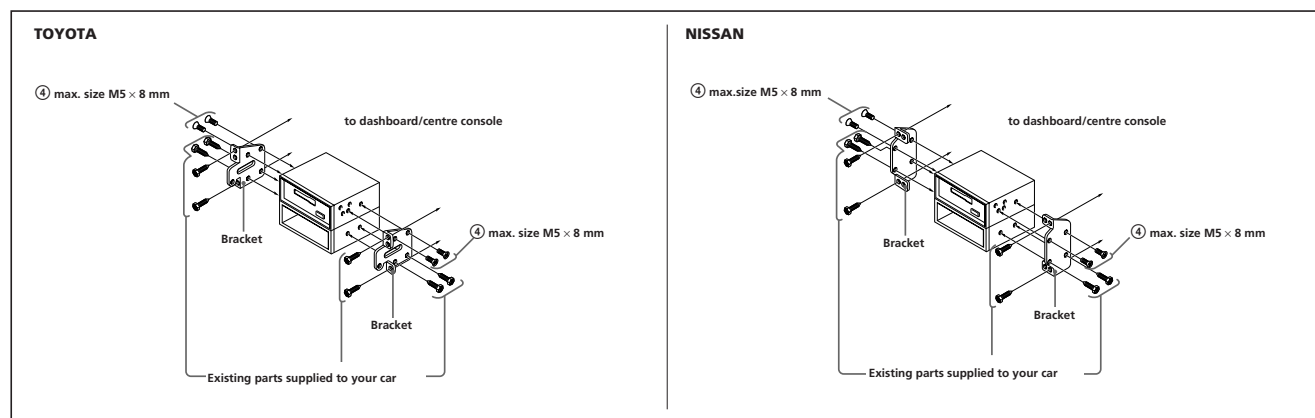

Note
To prevent malfunction, install only with the supplied screws ④.

Cautions

- Cautionary notice for handling the bracket ①.
- Handle the bracket carefully to avoid injuring your fingers.
- Remove the protection collar ⑤ before installing.

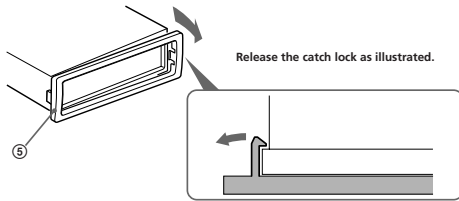

Connections

Cautions


- This unit is designed for negative earth 12 V DC operation only.
- Be careful not to pinch any wires between a screw and the body of the car or this unit or between any moving parts such as the seat railing, etc.
- Before making connections, disconnect the earth terminal of the car battery to avoid short circuits.
- Connect the **yellow** and **red** power input leads only after all other leads have been connected.
- Be sure to connect the red power input lead to the positive 12 V power terminal which is energized when the ignition key is in the accessory position.
- **Run all earth wires to a common earth point.**
- Connect the yellow cord to a free car circuit rated higher than the unit's fuse rating. If you connect this unit in series with other stereo components, the car circuit they are connected to must be rated higher than the sum of the individual component's fuse rating. If there are no car circuits rated as high as the unit's fuse rating, connect the unit directly to the battery. If no car circuits are available for connecting this unit, connect the unit to a car circuit rated higher than the unit's fuse rating in such a way that if the unit blows its fuse, no other circuits will be cut off.
- Be sure to insulate any loose unconnected wires with electrical tape for safety.
- When installing a car without ACC (accessory) position on the ignition key switch, connect the red power input lead to the +12 V power terminal which is energized at all times with the yellow lead.

Warning when installing in a car without ACC (accessory) position on the ignition key switch

Be sure to press **OFF** on the unit for two seconds to turn off the clock display after turned off the engine.
 When you press **OFF** momentarily, the clock display does not turn off and this causes battery wear.

Frequency select switch (XR-CA340 only)

The AM (FM) tuning interval is factory-set to the 9 K (50 K) position. If the frequency allocation system of your country is based on 10 kHz (200 kHz) interval, set the switch on the bottom of the unit to the 10 K (200 K) position before making connections.




Change the position with a jeweler's screwdriver, etc.

Note


When you change the position of the switch, be sure to press the reset buttons after the connections are completed.

Reset button

When the installation and connections are over, be sure to press the reset button with a ballpoint pen, etc.



Connection diagram

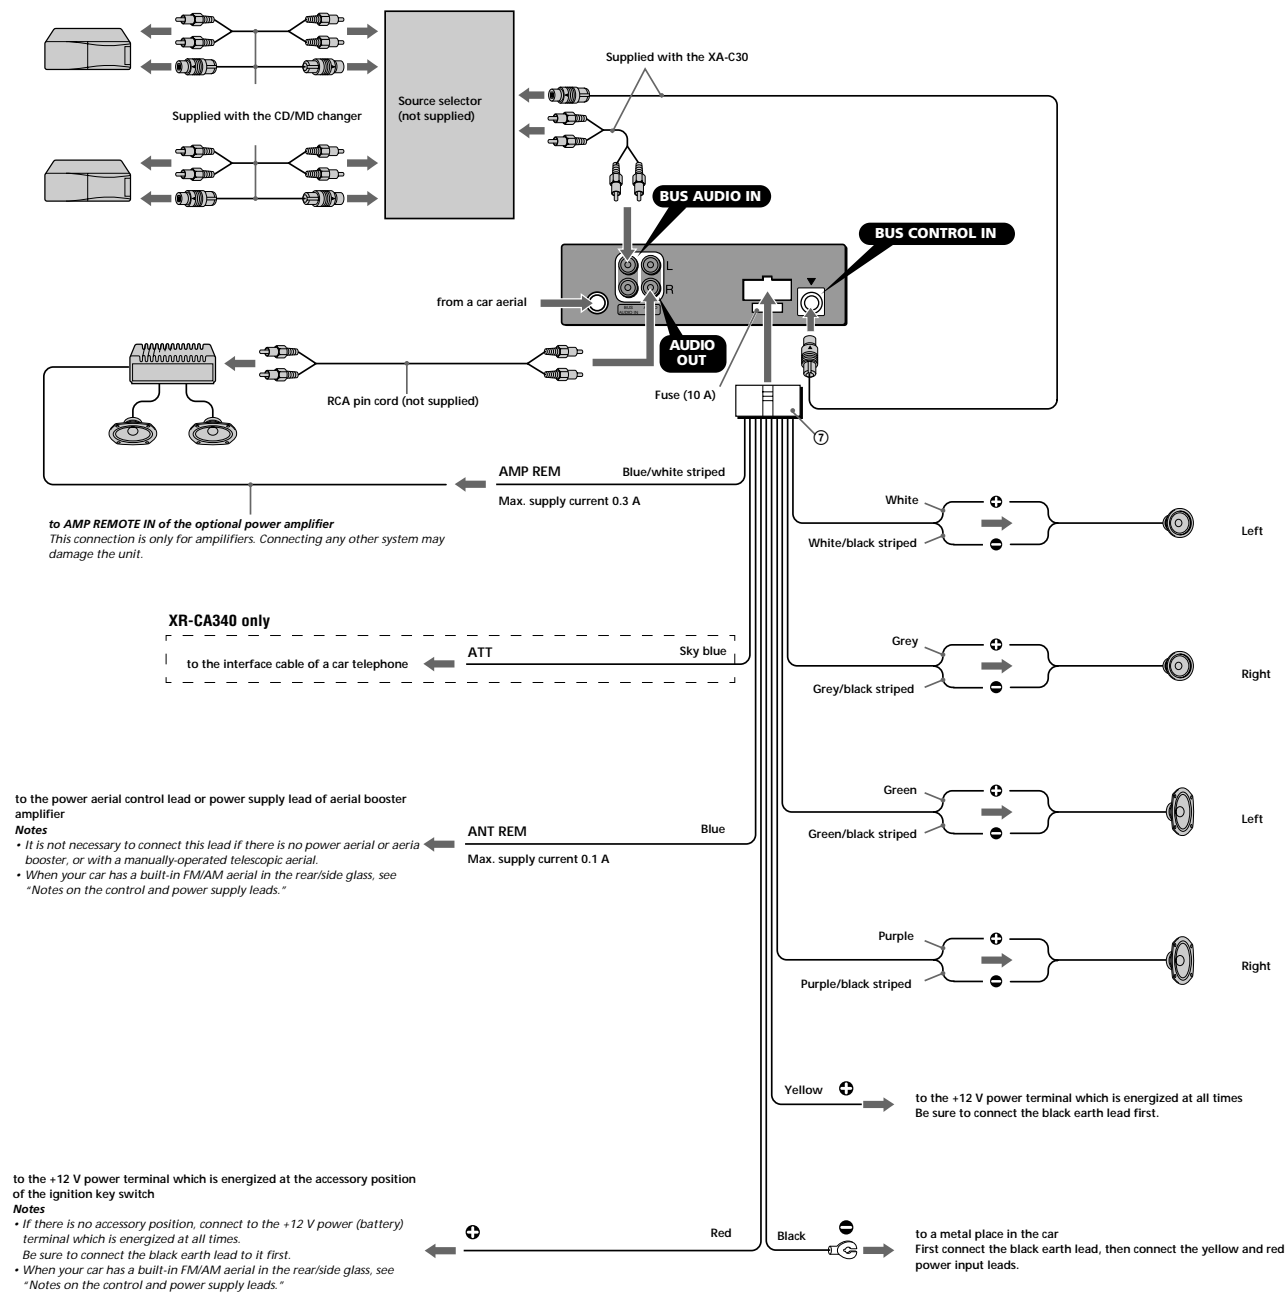

Notes on the control and power supply leads

- The power aerial control lead (blue) supplies +12 V DC when you turn on the unit.
- When your car has a built-in FM/AM aerial in the rear/side glass, it is necessary to connect the power aerial control lead (blue) or the accessory power input lead (red) to the power terminal of the existing aerial booster. For details, consult your dealer.
- A power aerial without a relay box cannot be used with this unit.

Memory hold connection


When the yellow power input lead is connected, power will always be supplied to the memory circuit even when the ignition switch is turned off.

Notes on speaker connection


- Before connecting the speakers, turn the unit off.
- Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities. Otherwise, the speakers may be damaged.
- Do not connect the terminals of the speaker system to the car chassis, and do not connect the terminals of the right speaker with those of the left speaker.
- Do not attempt to connect the speakers in parallel.
- Do not connect any active speakers (with built-in amplifiers) to the speaker terminals of the unit. Doing so may damage the active speakers. Be sure to connect passive speakers to these terminals.

Connection example


Equipment used in illustrations (not supplied)

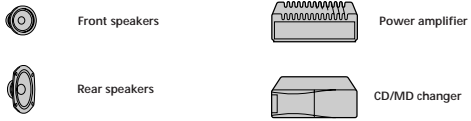

A

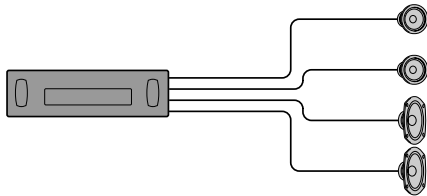


B

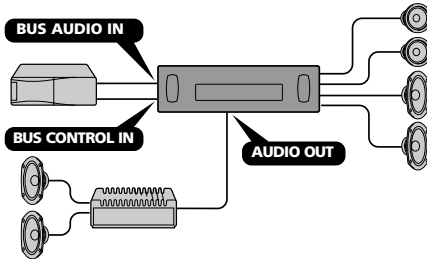

Notes

- Be sure to connect the earth cord before connecting the amplifier.
- If you connect an optional power amplifier and do not use the built-in amplifier, the beep sound will be deactivated.

C

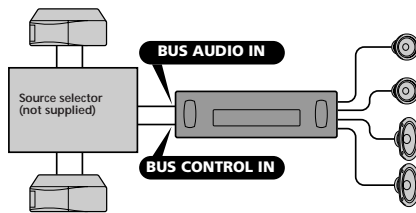


For connecting two or more changers, the source selector XA-C30 (optional) is necessary.

SECTION 2 DISASSEMBLY


• This set can be disassembled in the order shown below.

2-1. DISASSEMBLY FLOW

Note 1: The process described in  can be performed in any order.


Note 2: Without completing the process described in , the next process can not be performed.

Note 3: Illustration of disassembly is omitted.

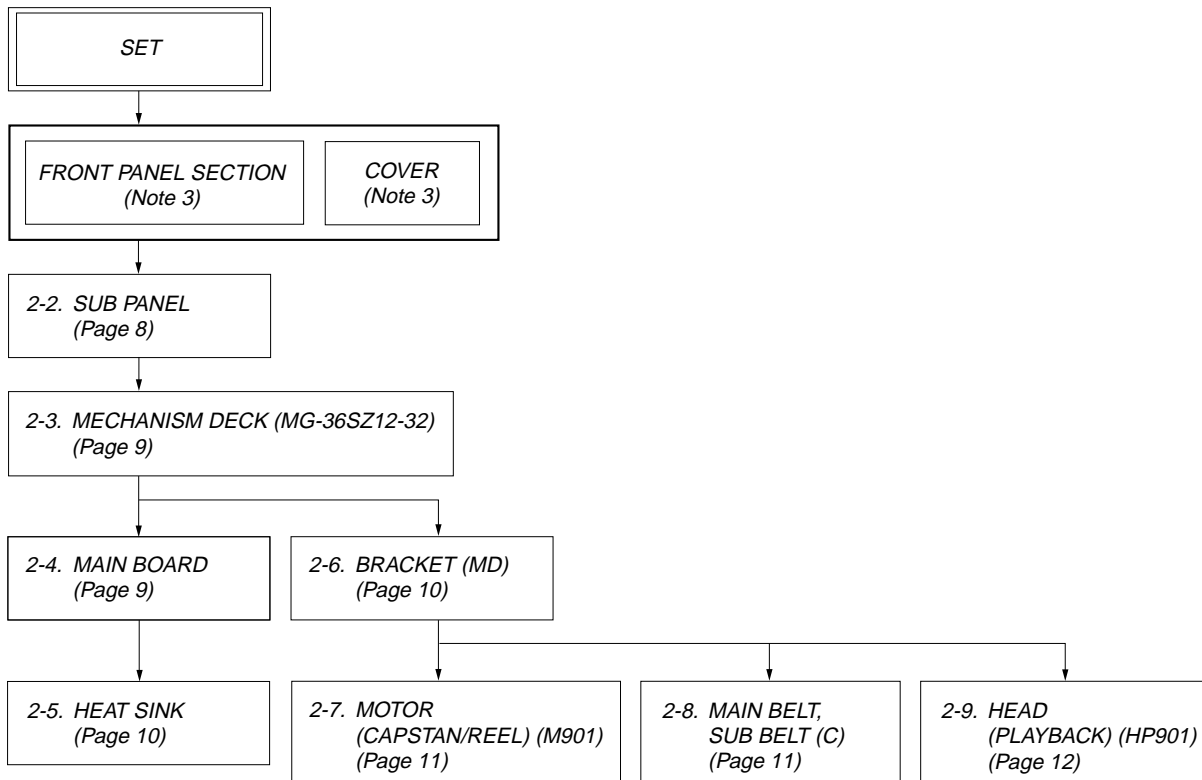


Note: Follow the disassembly procedure in the numerical order given.


2-2. SUB PANEL

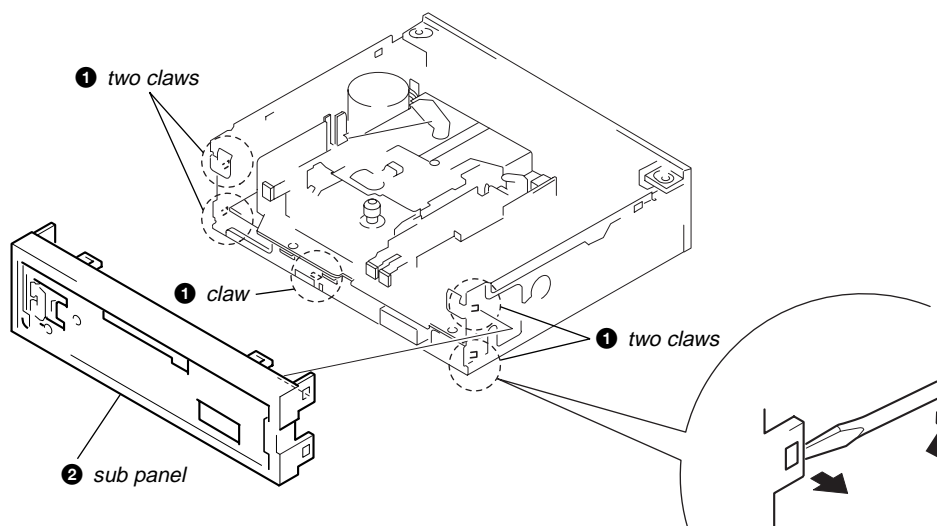


2-3. MECHANISM DECK (MG-36SZ12-32)

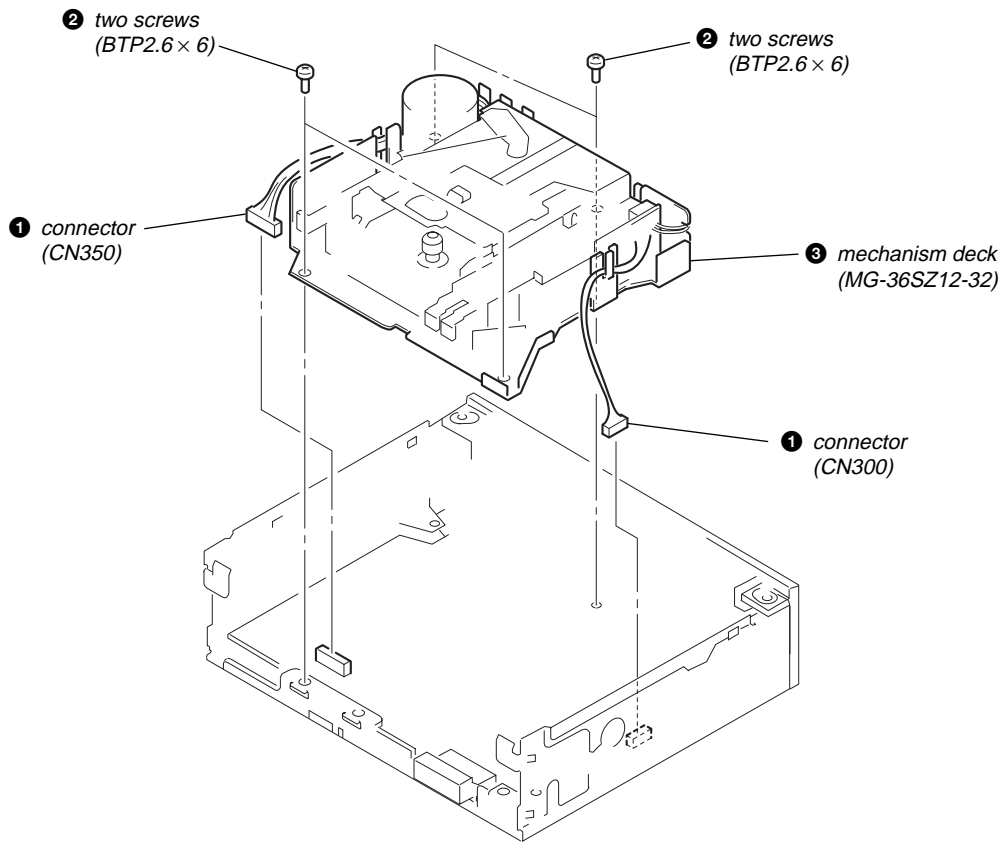


2-4. MAIN BOARD

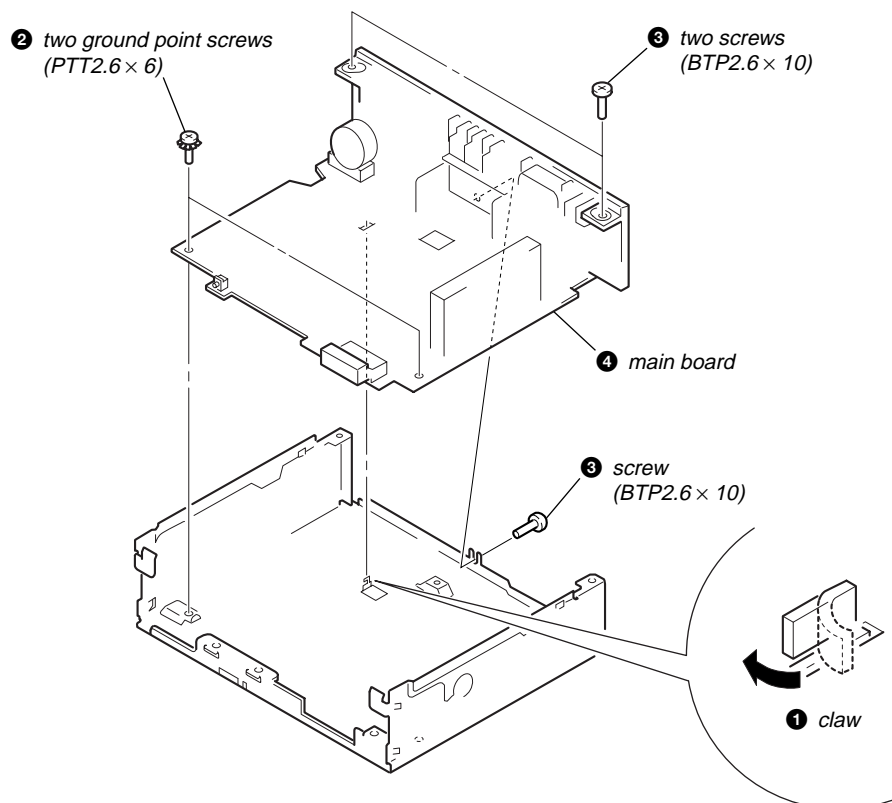


2-5. HEAT SINK

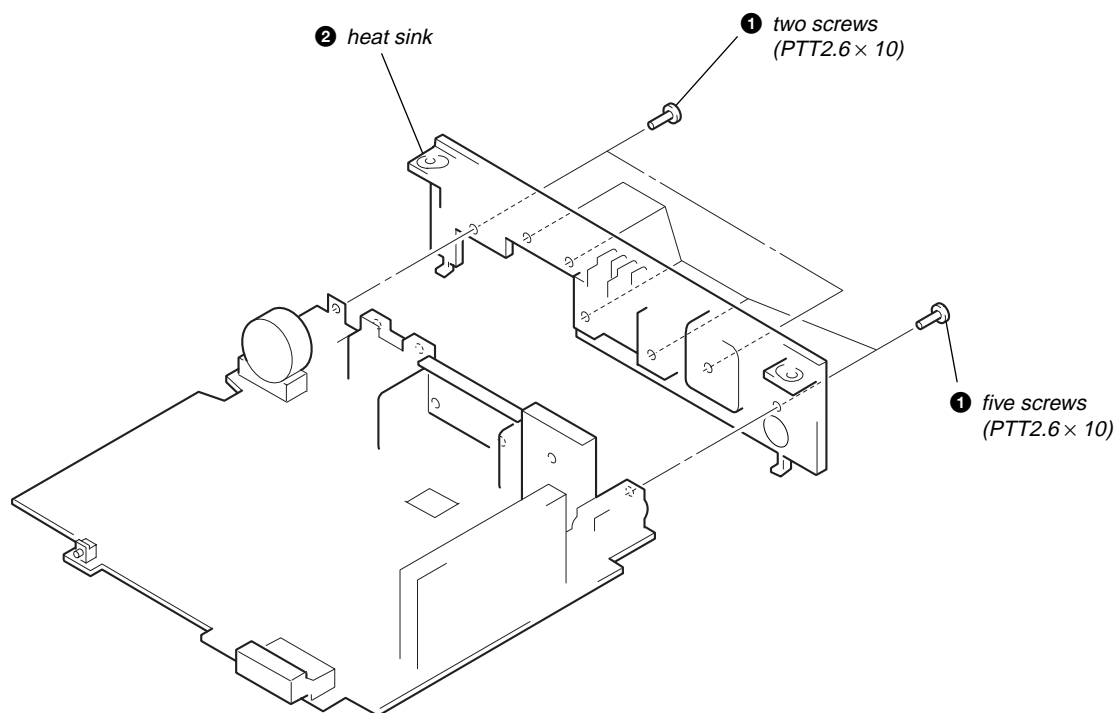


2-6. BRACKET (MD)

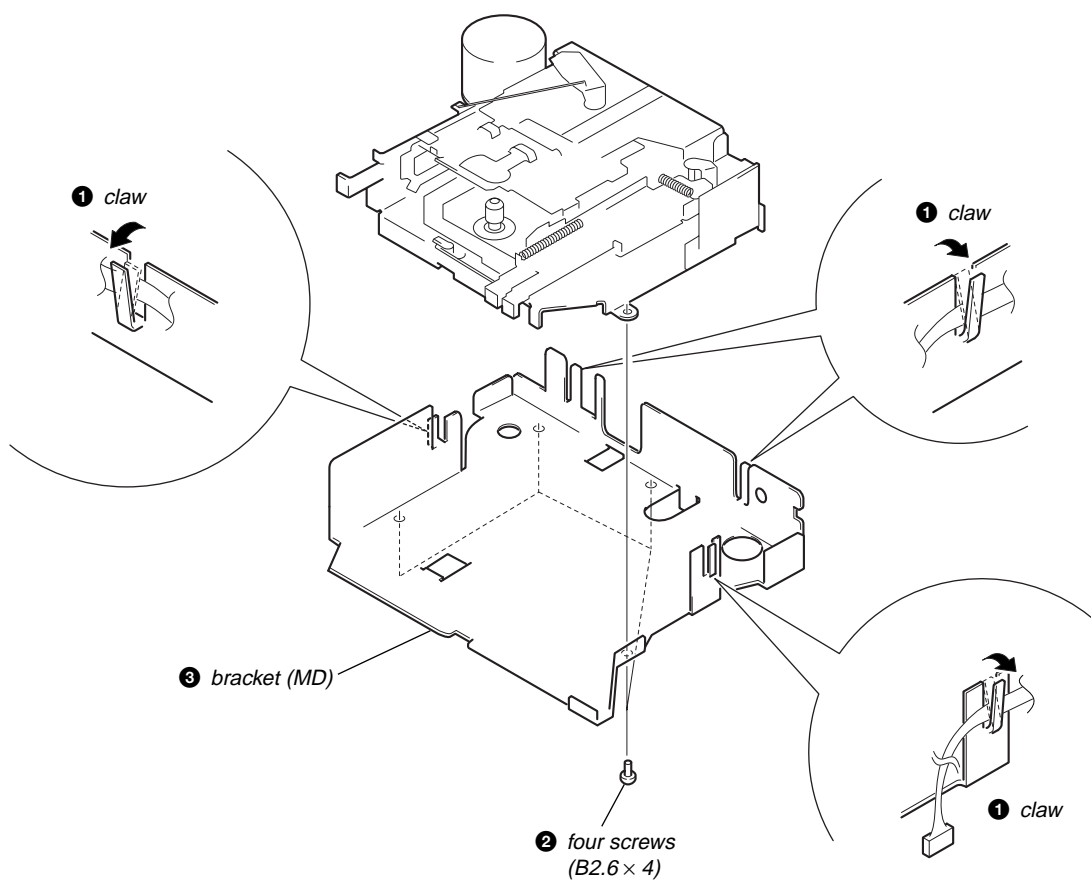


2-7. MOTOR (CAPSTAN/REEL) (M901)

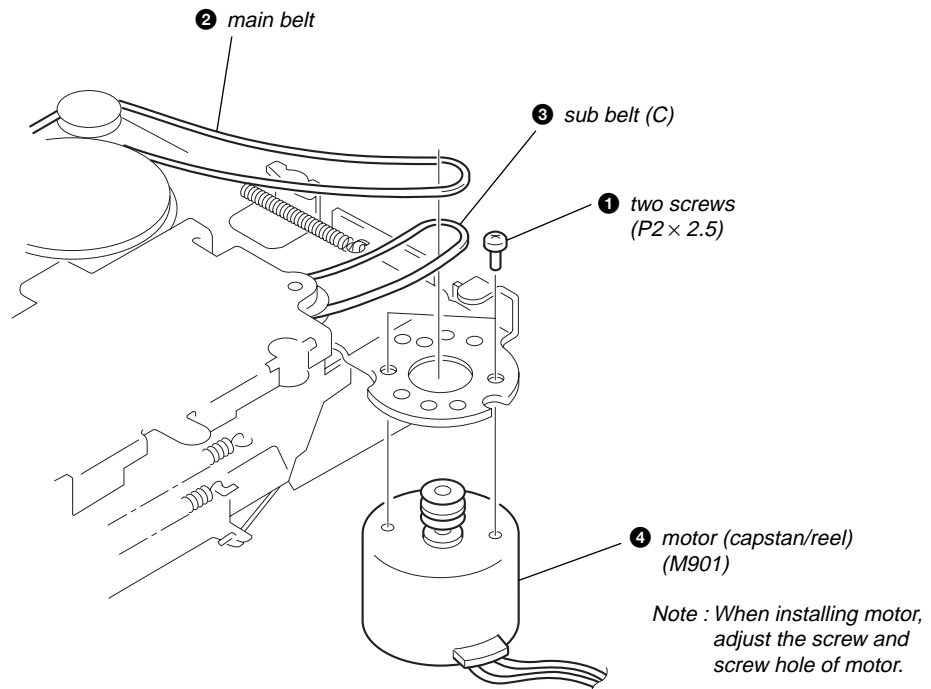

2-8. MAIN BELT, SUB BELT (C)

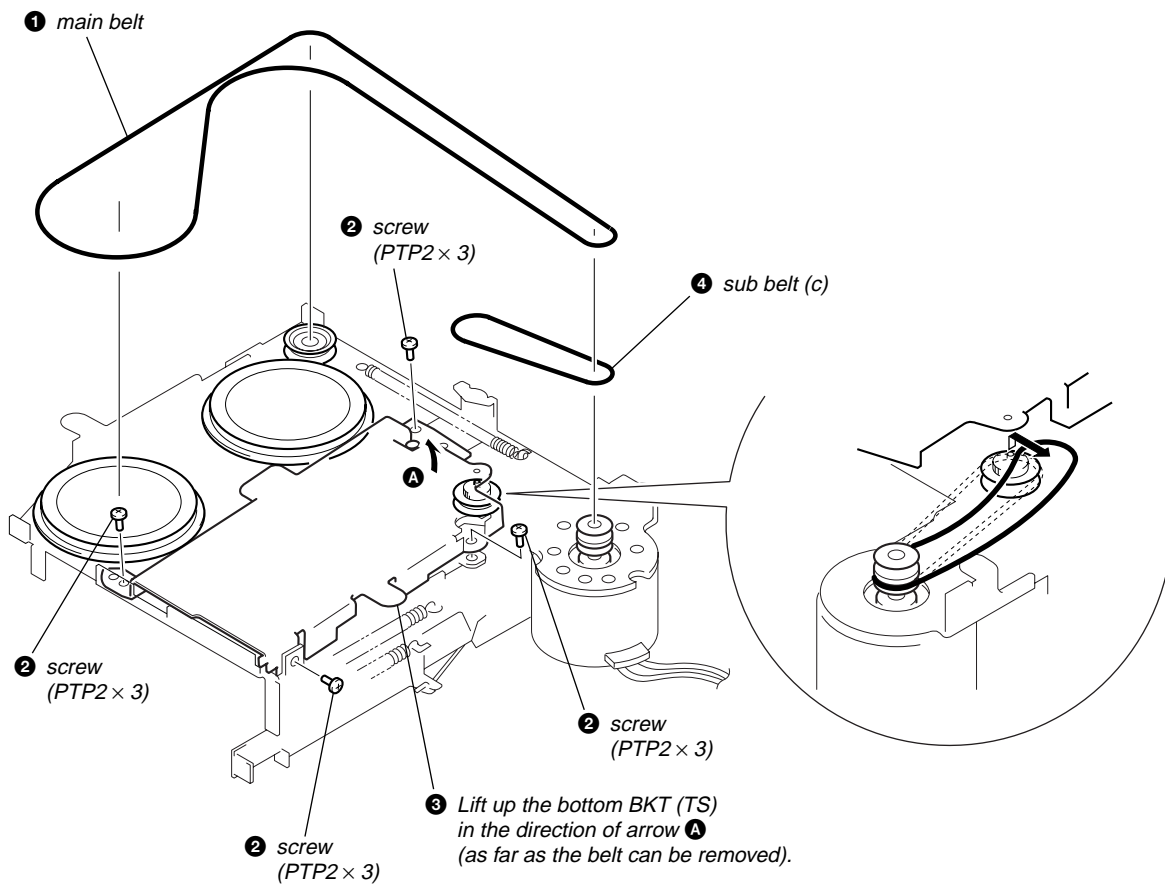

2-9. HEAD (PLAYBACK) (HP901)

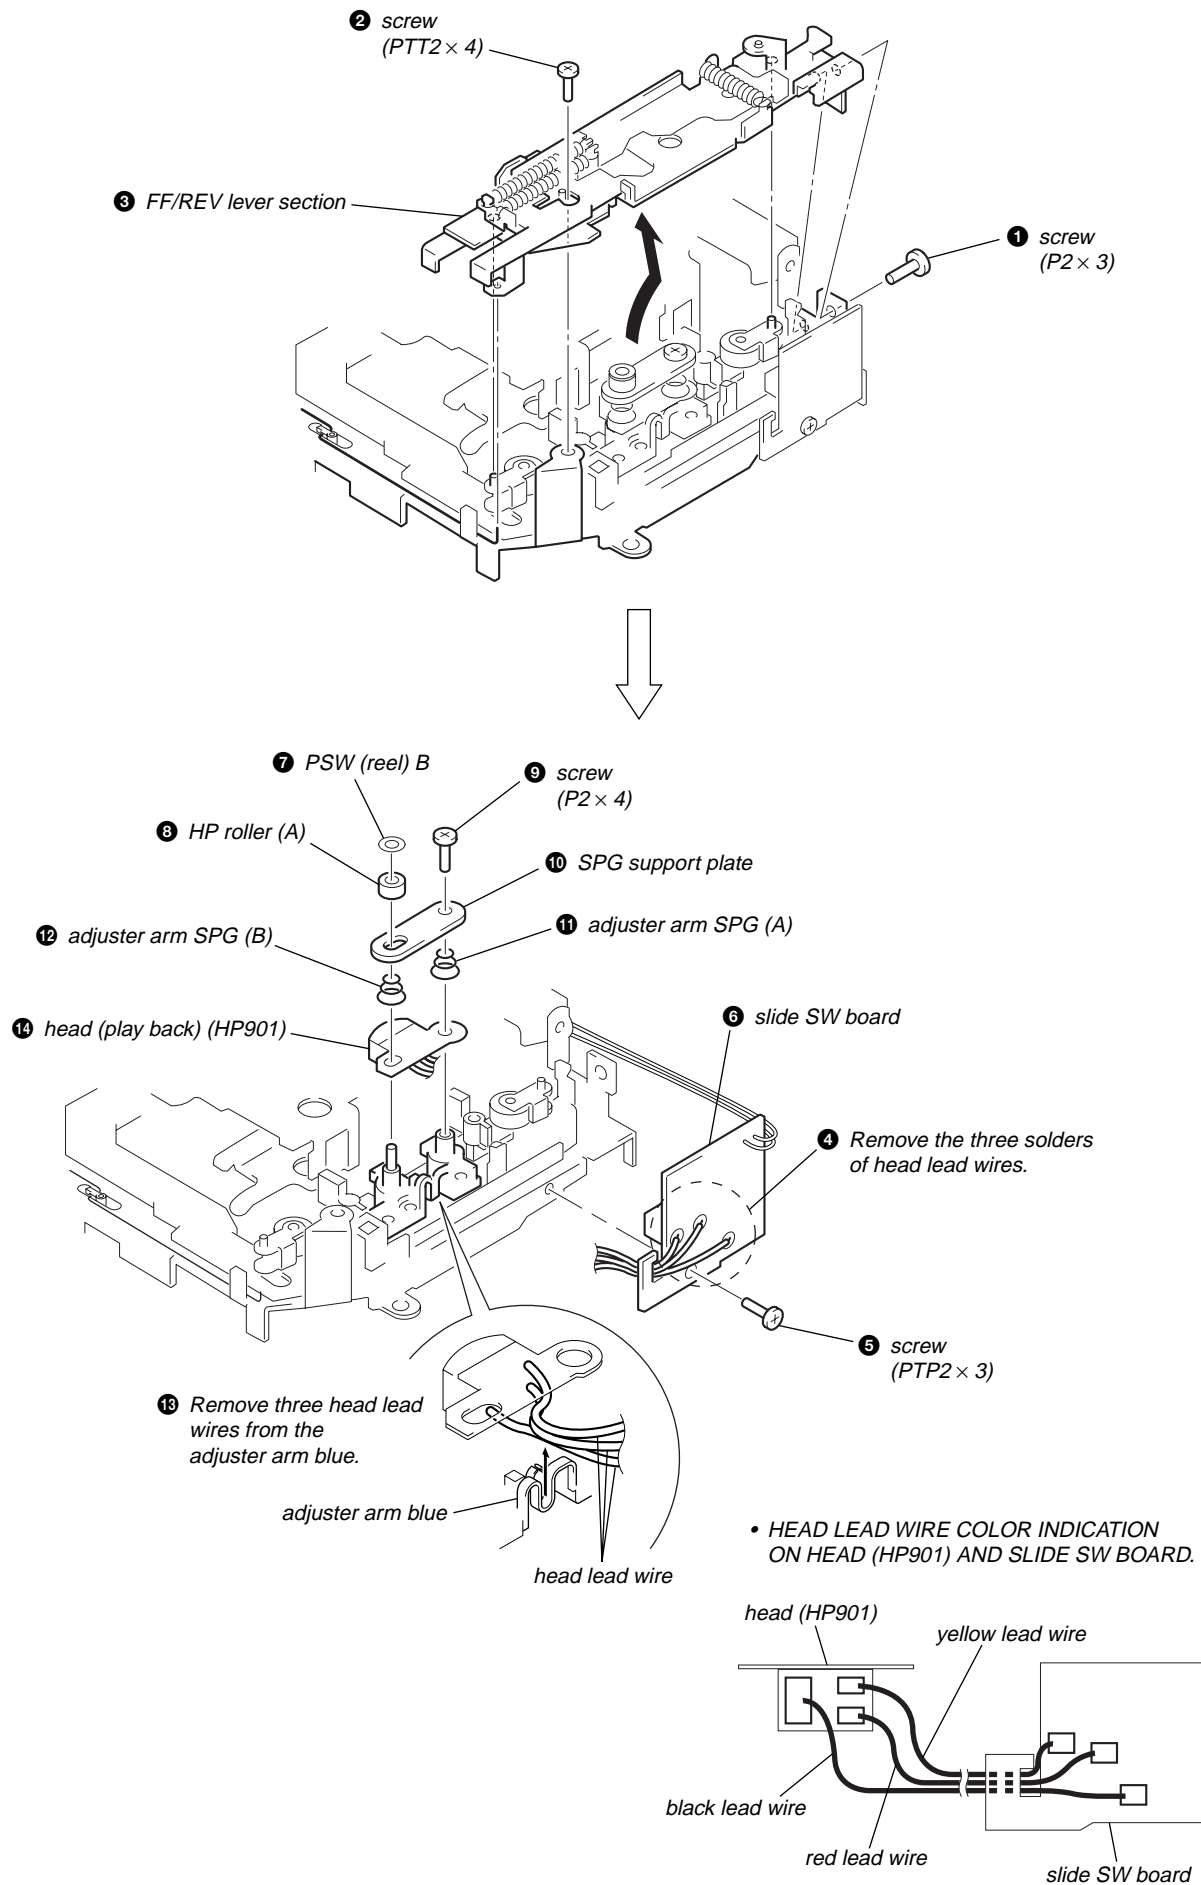

SECTION 3 MECHANICAL ADJUSTMENTS

1. Clean the following parts with a denatured-alcohol-moistened swab:

playback head	pinch roller
rubber belt	capstan
idler	
2. Demagnetize the playback head with a head demagnetizer.
3. Do not use a magnetized screwdriver for the adjustments.
4. The adjustments should be performed with the power supply voltage (14.4 V) unless otherwise noted.

Note: With this set, it is not necessary to apply suitable locking compound to the parts after the azimuth adjustment.

• Torque Measurement

Mode	Torque Meter	Meter Reading
Forward	CQ-102C	2.46 – 5.39 mN•m (25 – 55 g•cm) (0.35 – 0.76 oz•inch)
Forward Back Tension	CQ-102C	0.15 – 0.39 mN•m (1.5 – 4 g•cm) (0.02 – 0.06 oz•inch)
Reverse	CQ-102RC	2.46 – 5.39 mN•m (25 – 55 g•cm) (0.35 – 0.76 oz•inch)
Reverse Back Tension	CQ-102RC	0.15 – 0.39 mN•m (1.5 – 4 g•cm) (0.02 – 0.06 oz•inch)
FF, REW	CQ-201B	4.91 – 14.70 mN•m (50 – 150 g•cm) (0.69 – 2.08 oz•inch)

• Tape Tension Measurement

Mode	Tension Meter	Meter Reading
Forward	CQ-403A	more than 5.89 mN•m (more than 60 g) (more than 2.12 oz)
Reverse	CQ-403R	

SECTION 4 ELECTRICAL ADJUSTMENTS

TEST MODE

This set have the test mode function. In the test mode, FM Auto Seek/Stop Level and AM Auto Seek/Stop Level adjustments can be performed easier than it in ordinary procedure.

<Set the Test Mode>

1. Turn ON the regulated power supply. (All LEDs on the set lights up, and the clock is displayed.)

Note: Press the **[OFF]** button, if the clock is not displayed.
2. Push the **[4]** button.
3. Push the **[5]** button.
4. Press the **[1]** button for more than two seconds.
5. Then the display indicates all lights, the test mode is set.

<Release the Test mode>

1. Push the **[OFF]** button.

TAPE DECK SECTION

0 dB= 0.775 V

1. The adjustments should be performed in the order given in this service manual.
2. The adjustments should be performed for both L-CH and R-CH.


Test Tape

Type	Signal	Used for
P-4-A063	6.3 kHz, -10 dB	head azimuth adjustment
WS-48A	3 kHz, 0 dB	tape speed adjustment


PB Head Azimuth Adjustment

Procedure:



1. Put the set into the FWD PB mode.

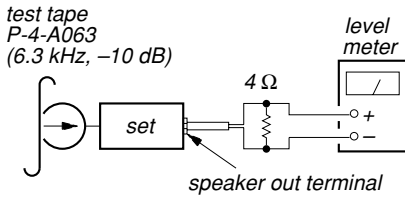

2. Turn the screw and check the output peak value. Adjust the screw so that the peak value in channels L and R coincides within 3 dB.

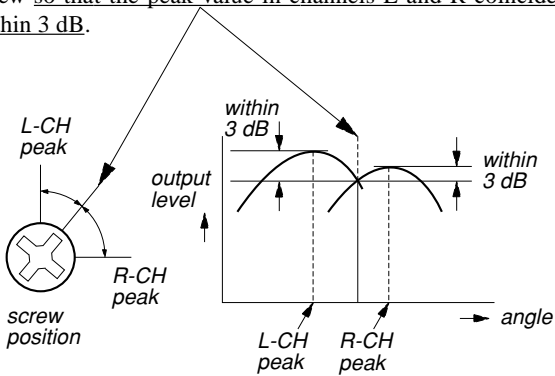


3. Check the phase in the FWD PB mode.

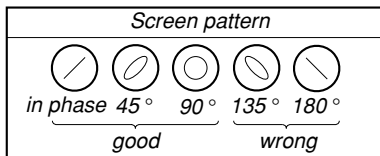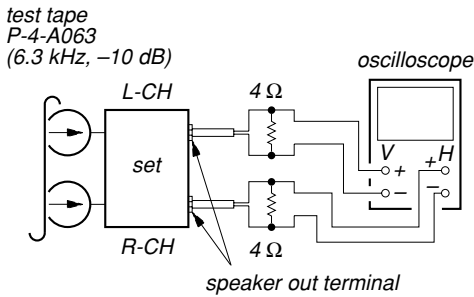


4. Repeat the above adjustment for the REV PB mode.
5. Check that output level difference between FWD PB mode and REV PB mode is within 4 dB.

Adjustment Location: PB head

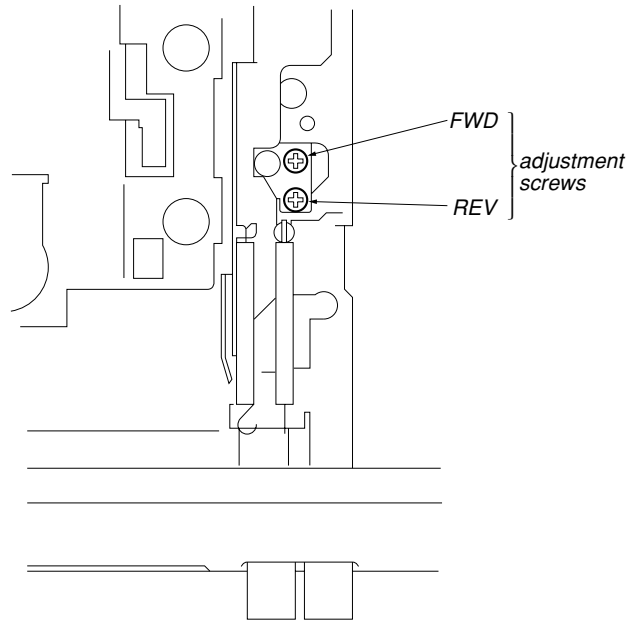

Tape Speed Adjustment

Setting:

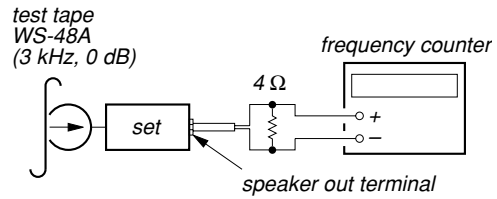

Procedure:

1. Put the set into the FWD PB mode.
2. Adjust adjustment resistor for inside capstan motor so that the reading on the frequency counter becomes in 3,015 Hz.

Specified Value: 2,940 to 3,090 Hz

Adjustment Location: See page 17.

TUNER SECTION

0 dB=1 μ V

Cautions during repair

When the tuner unit is defective, replace it by a new one because its internal block is difficult to repair.

Note: Adjust the tuner section in the sequence shown below.


1. FM Auto Seek/Stop Level Adjustment
2. FM Stereo Separation Adjustment
3. AM Auto Seek/Stop Level Adjustment

FM Auto Seek/Stop Level Adjustment

Setting:

[SOURCE] button: FM

[FREQUENCY SELECT] switch: FM 50k (XR-CA340 only)

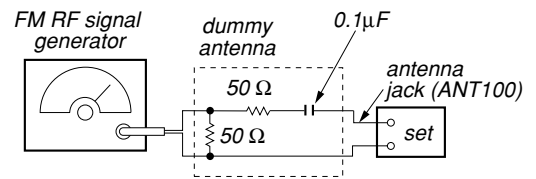

Carrier frequency : 97.9 MHz (XR-CA330)
 98.00 MHz (XR-CA340)



Output level : 22 dB (12.6 μ V)

Mode : mono



Modulation : 1 kHz, 22.5 kHz deviation (30%)

Procedure:

1. Set to the test mode. (see page 13)
2. Push the [SOURCE] button and set to FM.

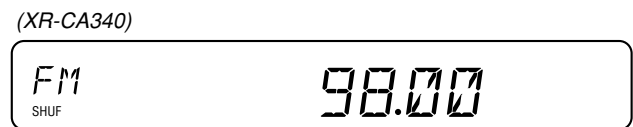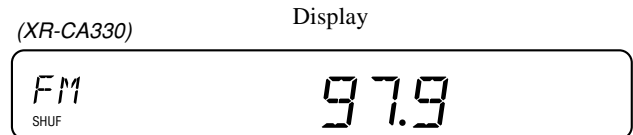

3. Adjust with the volume RV3 on TU100 so that the "FM" indication turns to "FM0" indication on the display window.
 But, in case of already indicated "FM0", turn the RV3 so that put out light "0" indication and adjustment.

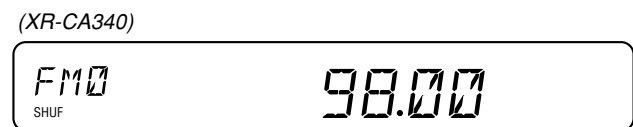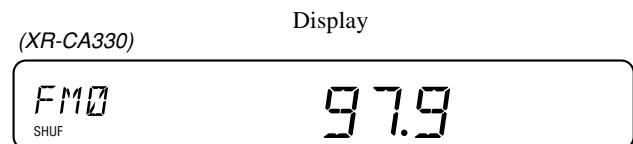


Adjustment Location: See page 17.

FM Stereo Separation Adjustment

Setting:

SOURCE button: FM
FREQUENCY SELECT switch: FM 50 k (XR-CA340 only)

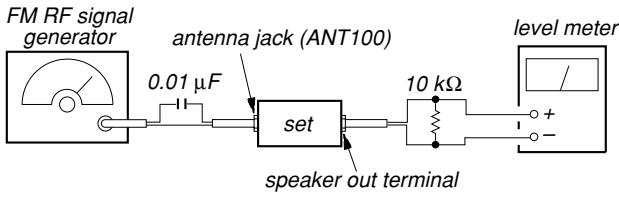

Carrier frequency : 97.9 MHz (XR-CA330)
 98.00 MHz (XR-CA340)
 Output level : 70 dB (3.2 mV)
 Mode : stereo
 Modulation : main: 1 kHz, 20 kHz deviation (26.7%)
 sub: 1 kHz, 20 kHz deviation (26.7%)
 19 kHz pilot: 7.5 kHz deviation (10%)

Procedure:

FM Stereo signal generator output channel	Level meter connection	Level meter reading (dB)
L-CH	L-CH	Ⓐ
R-CH	L-CH	Ⓑ [Ⓐ] Adjust RV2 on TU100 for minimum reading.
R-CH	R-CH	Ⓒ
L-CH	R-CH	Ⓓ [Ⓒ] Adjust RV2 on TU100 for minimum reading.

L-CH Stereo separation: Ⓐ-Ⓑ

R-CH Stereo separation: Ⓒ-Ⓓ

The separations of both channels should be equal.

Specified Value: Separation more than 30 dB


Adjustment Location: See page 17.

AM Auto Seek/Stop Level Adjustmant

Make this adjustment after “FM Auto Seek/Stop Level Adjustment”.

Setting:

SOURCE button: AM
FREQUENCY SELECT switch: AM 9 k (XR-CA340 only)

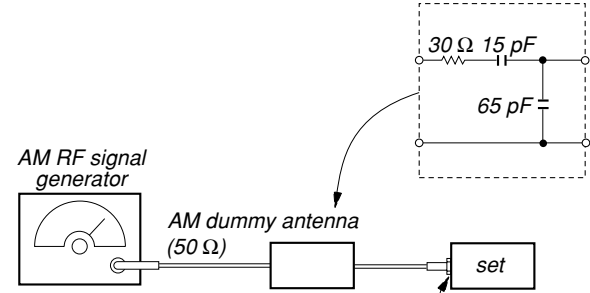


Carrier frequency : 1000 kHz (XR-CA330)
 999 kHz (XR-CA340)


30% amplitude modulation by 1 kHz signal
 Output level : 33 dB (44.7 μV)

Procedure:

1. Set to the test mode. (see page 13)
2. Push the **SOURCE** button and set to FM.
3. Push the **MODE** button and set to AM.

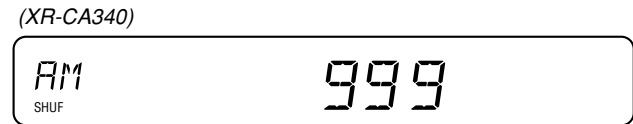


4. Adjust with the volume RV1 on TU100 so that the “AM” indication turns to “AM0” indication on the display window. But, in case of already indicated “AM0”, turn the RV1 so that put out light “0” indication and adjustment.

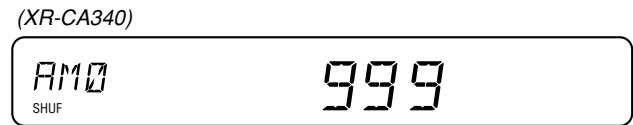


Adjustment Location: See page 17.

Adjustment Location:

– Set Upper View –

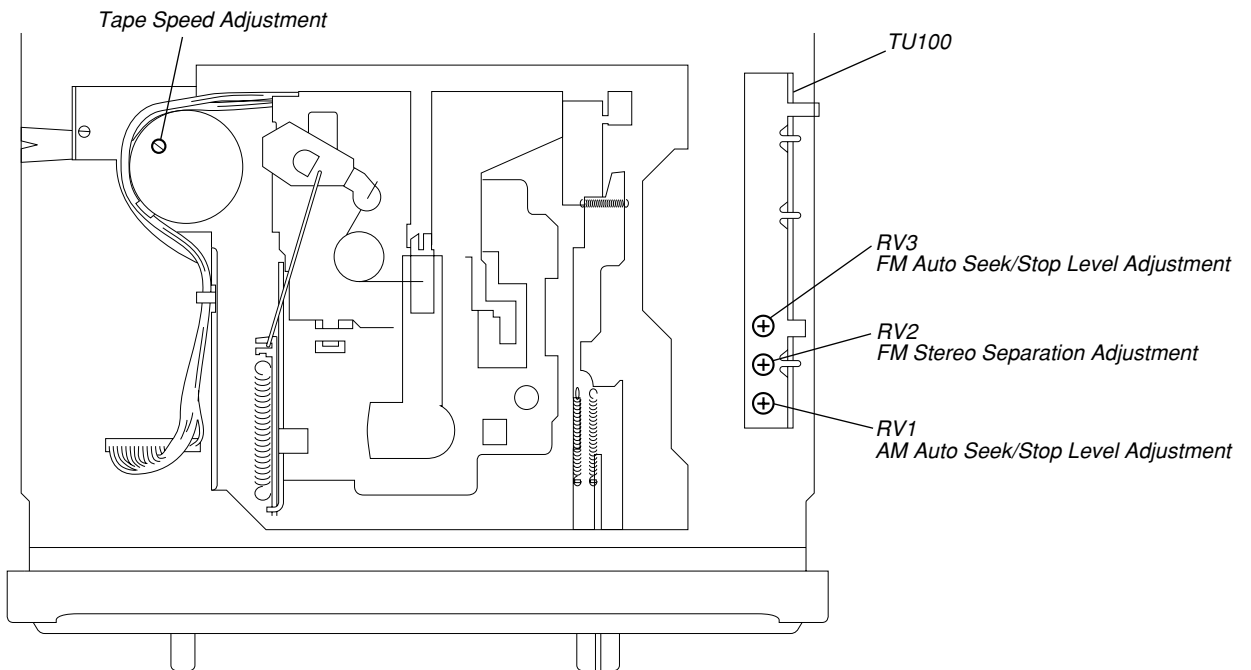


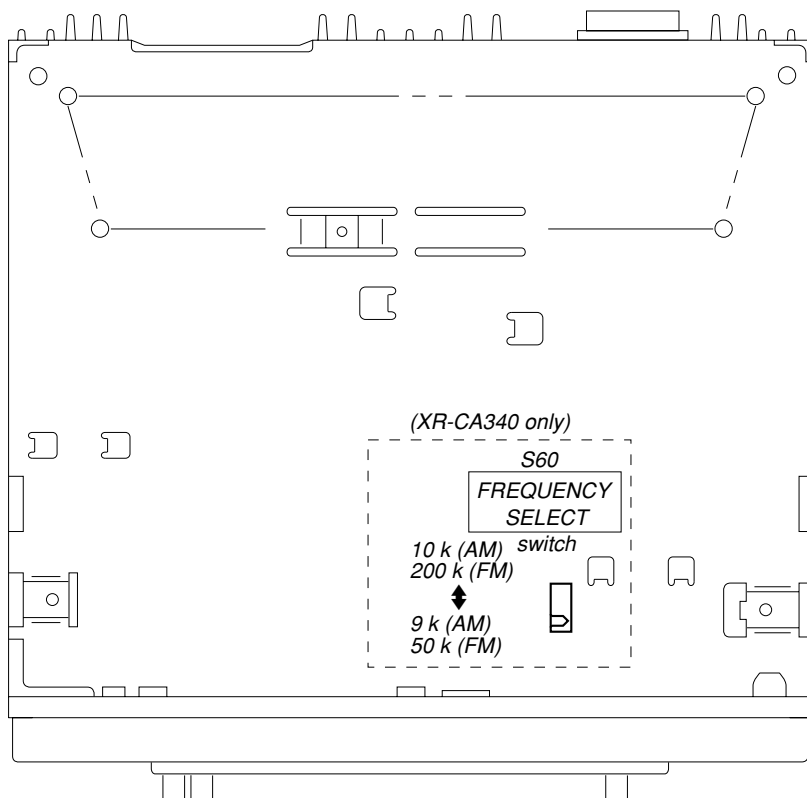



– Set Bottom View –



SECTION 5 DIAGRAMS

5-1. NOTE FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS







Note on Printed Wiring Board:

-  : parts extracted from the component side.
-  : parts extracted from the conductor side.
-  : Through hole.
-  : Pattern from the side which enables seeing.
-  : Carbon pattern.


(The other layers' patterns are not indicated.)

Caution:
 Pattern face side: Parts on the pattern face side seen from
 (Conductor Side) the pattern face are indicated.
 Parts face side: Parts on the parts face side seen from
 (Component Side) the parts face are indicated.

Note on Schematic Diagram:



- All capacitors are in μF unless otherwise noted. pF: $\mu\mu\text{F}$
 50 WV or less are not indicated except for electrolytics
 and tantalums.
- All resistors are in Ω and $1/4\text{ W}$ or less unless otherwise
 specified.
-  : panel designation.
-  : B+ Line.
- Power voltage is dc 14.4V and fed with regulated dc power
 supply from ACC and BATT cords.
- Voltages and waveforms are dc with respect to ground
 under no-signal (detuned) conditions.
 no mark : FM
 () : AM
 << >> : TAPE PLAYBACK
- Voltages are taken with a VOM (Input impedance 10 M Ω).
 Voltage variations may be noted due to normal produc-
 tion tolerances.
- Waveforms are taken with a oscilloscope.
 Voltage variations may be noted due to normal produc-
 tion tolerances.
- Circled numbers refer to waveforms.
- Signal path.
 : FM
 : AM
 : TAPE PLAYBACK
 : BUS AUDIO IN

5-2. PRINTED WIRING BOARD – MAIN Board – • Refer to servicing note (page 2) for discrimination of TYPE A/B.

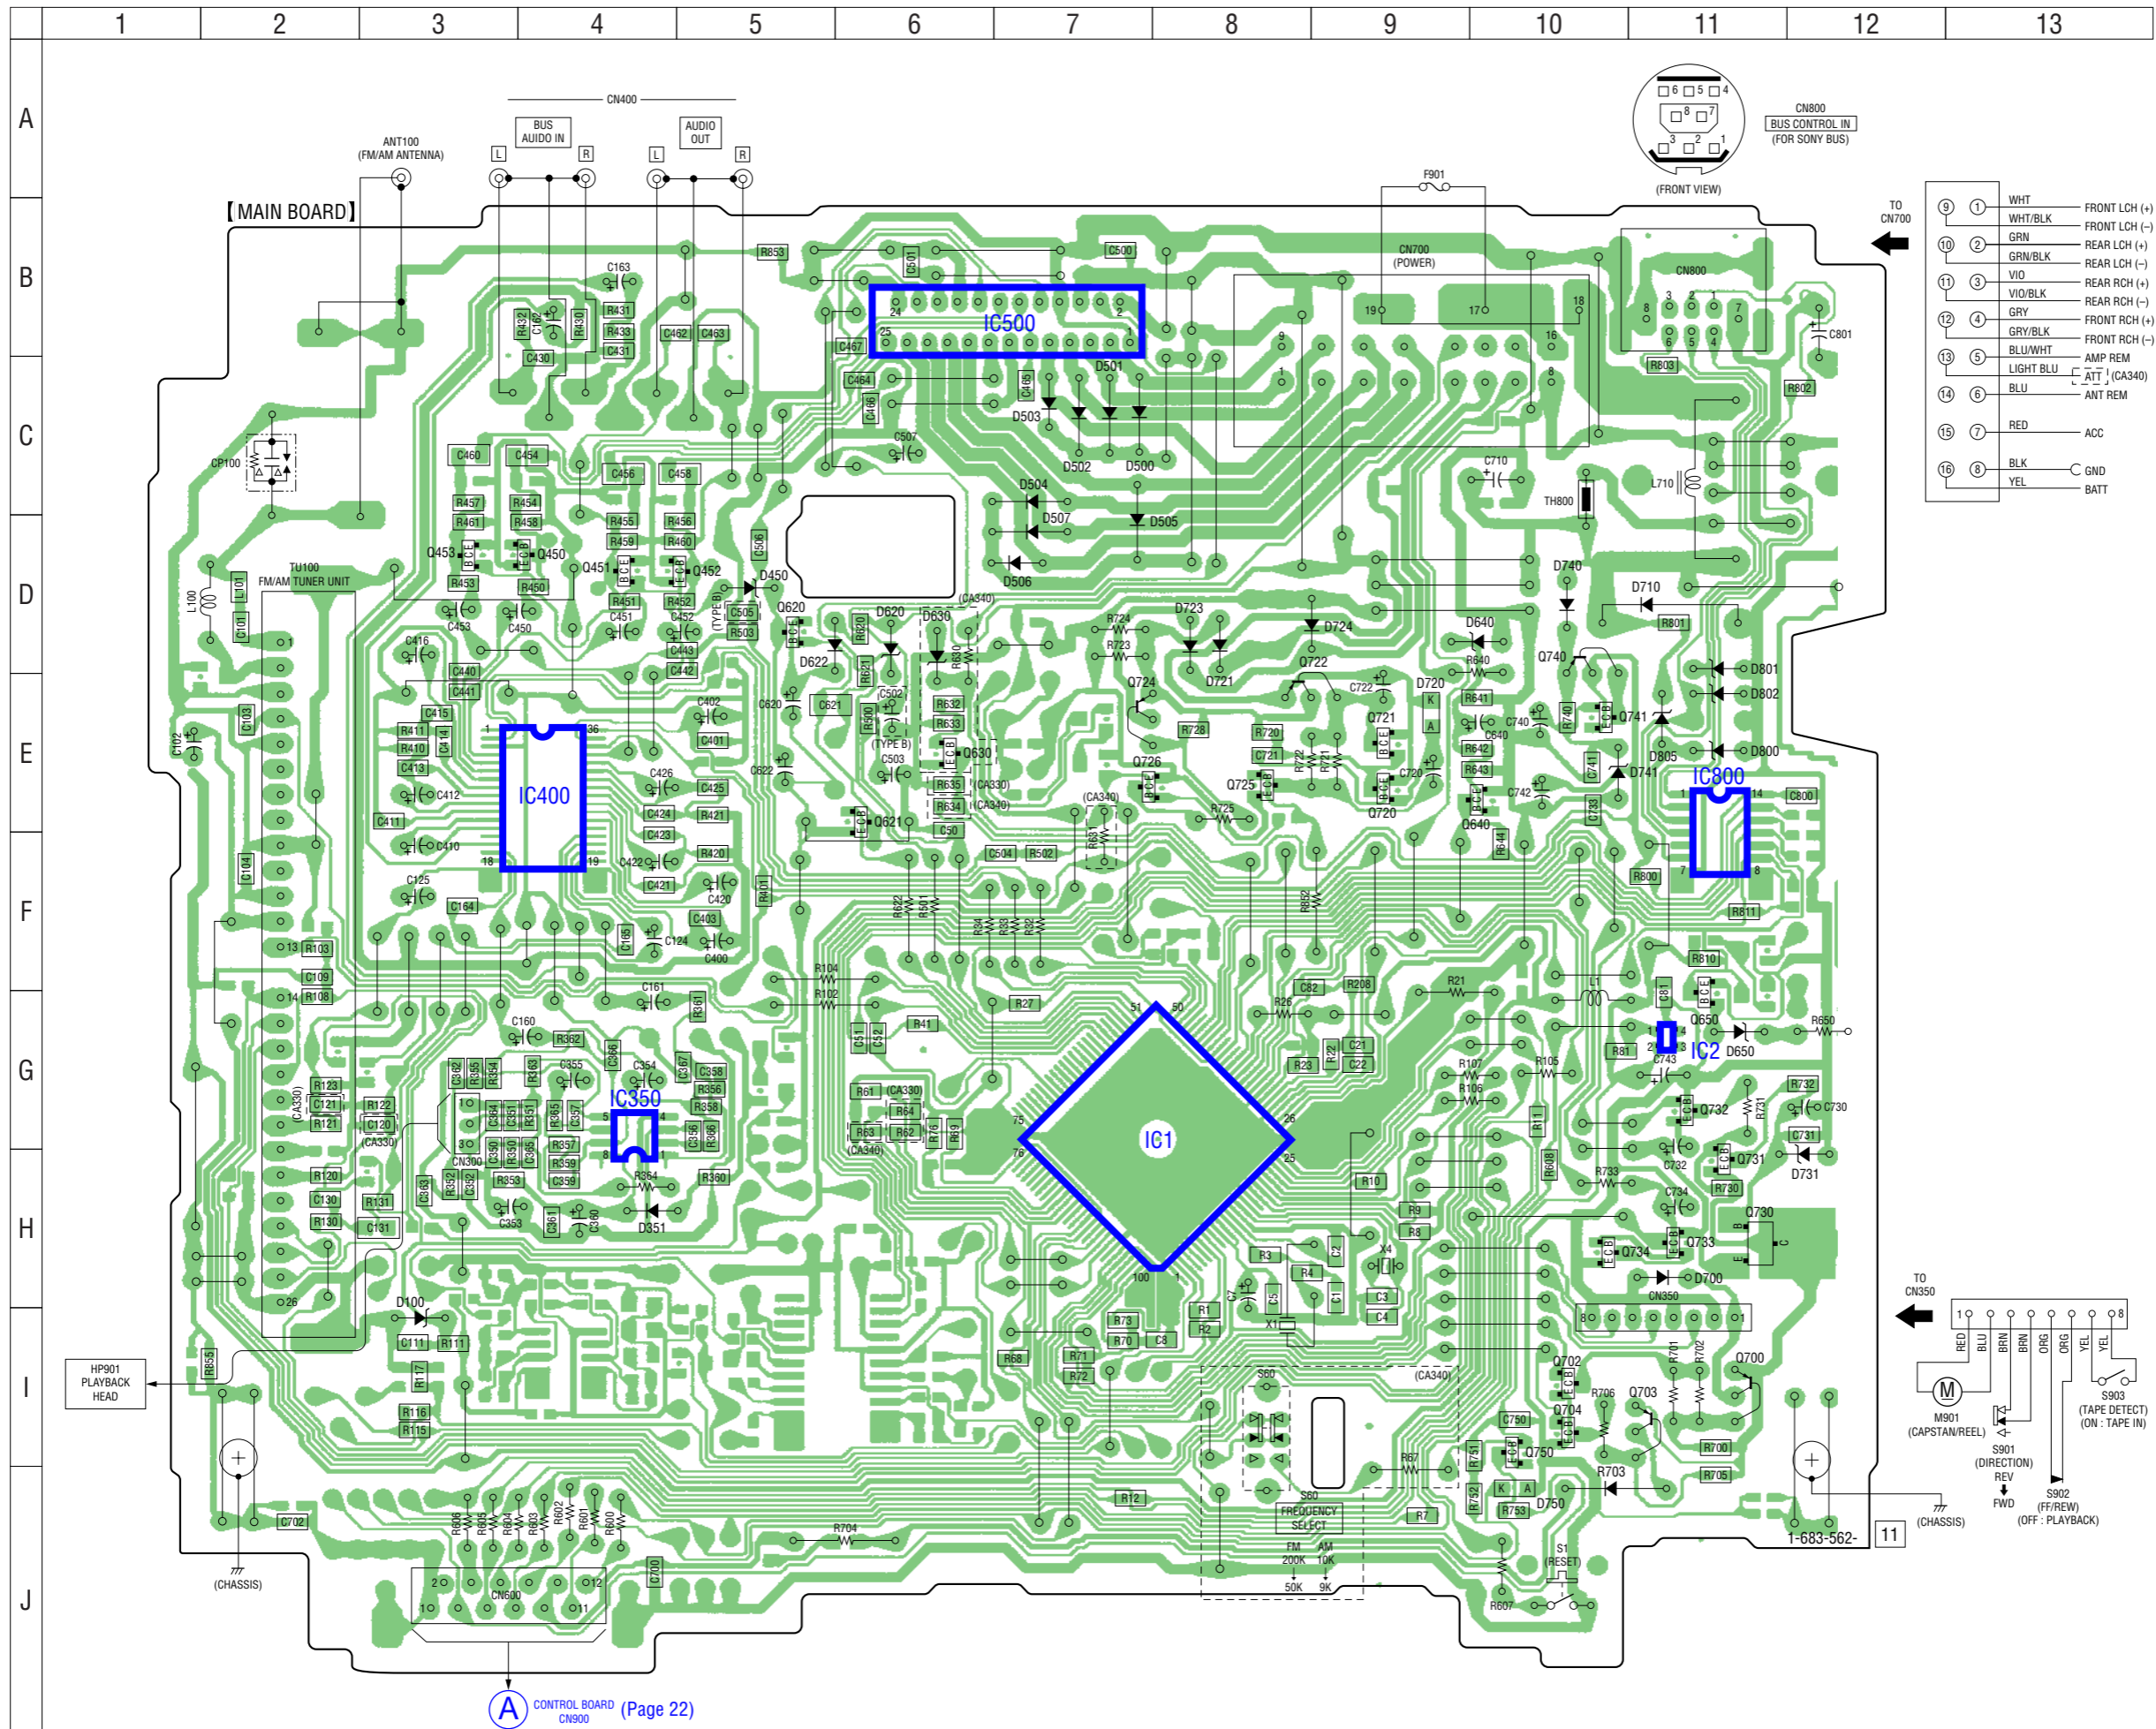


• Semiconductor Location

Ref. No.	Location
D100	I-3
D351	H-4
D450	D-5
D500	C-7
D501	C-7
D502	C-7
D503	C-7
D504	C-7
D505	D-7
D506	D-7
D507	D-7
D620	D-6
D622	D-5
D630	D-6
D640	D-10
D650	G-11
D700	H-11
D710	D-11
D720	E-9
D721	D-8
D723	D-8
D724	D-9
D731	H-12
D740	D-10
D741	E-10
D750	J-10
D800	E-11
D801	D-11
D802	E-11
D805	E-11
IC1	G-8
IC2	G-11
IC350	G-4
IC400	E-4
IC500	B-7
IC800	E-11
Q450	D-4
Q451	D-4
Q452	D-5
Q453	D-3
Q620	D-5
Q621	E-6
Q630	E-6
Q640	E-10
Q650	G-11
Q700	I-11
Q702	I-10
Q703	I-11
Q704	I-10
Q720	E-9
Q721	E-9
Q722	E-8
Q724	E-7
Q725	E-8
Q726	E-7
Q730	H-11
Q731	H-11
Q732	G-11
Q733	H-11
Q734	H-10
Q740	D-10
Q741	E-10
Q750	I-10
R703	J-10

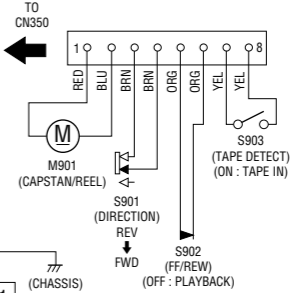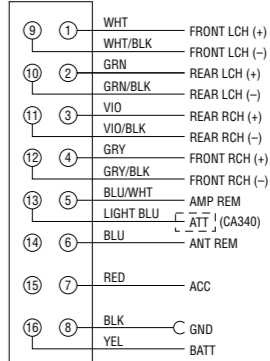


CONTROL BOARD (Page 22)
CN900

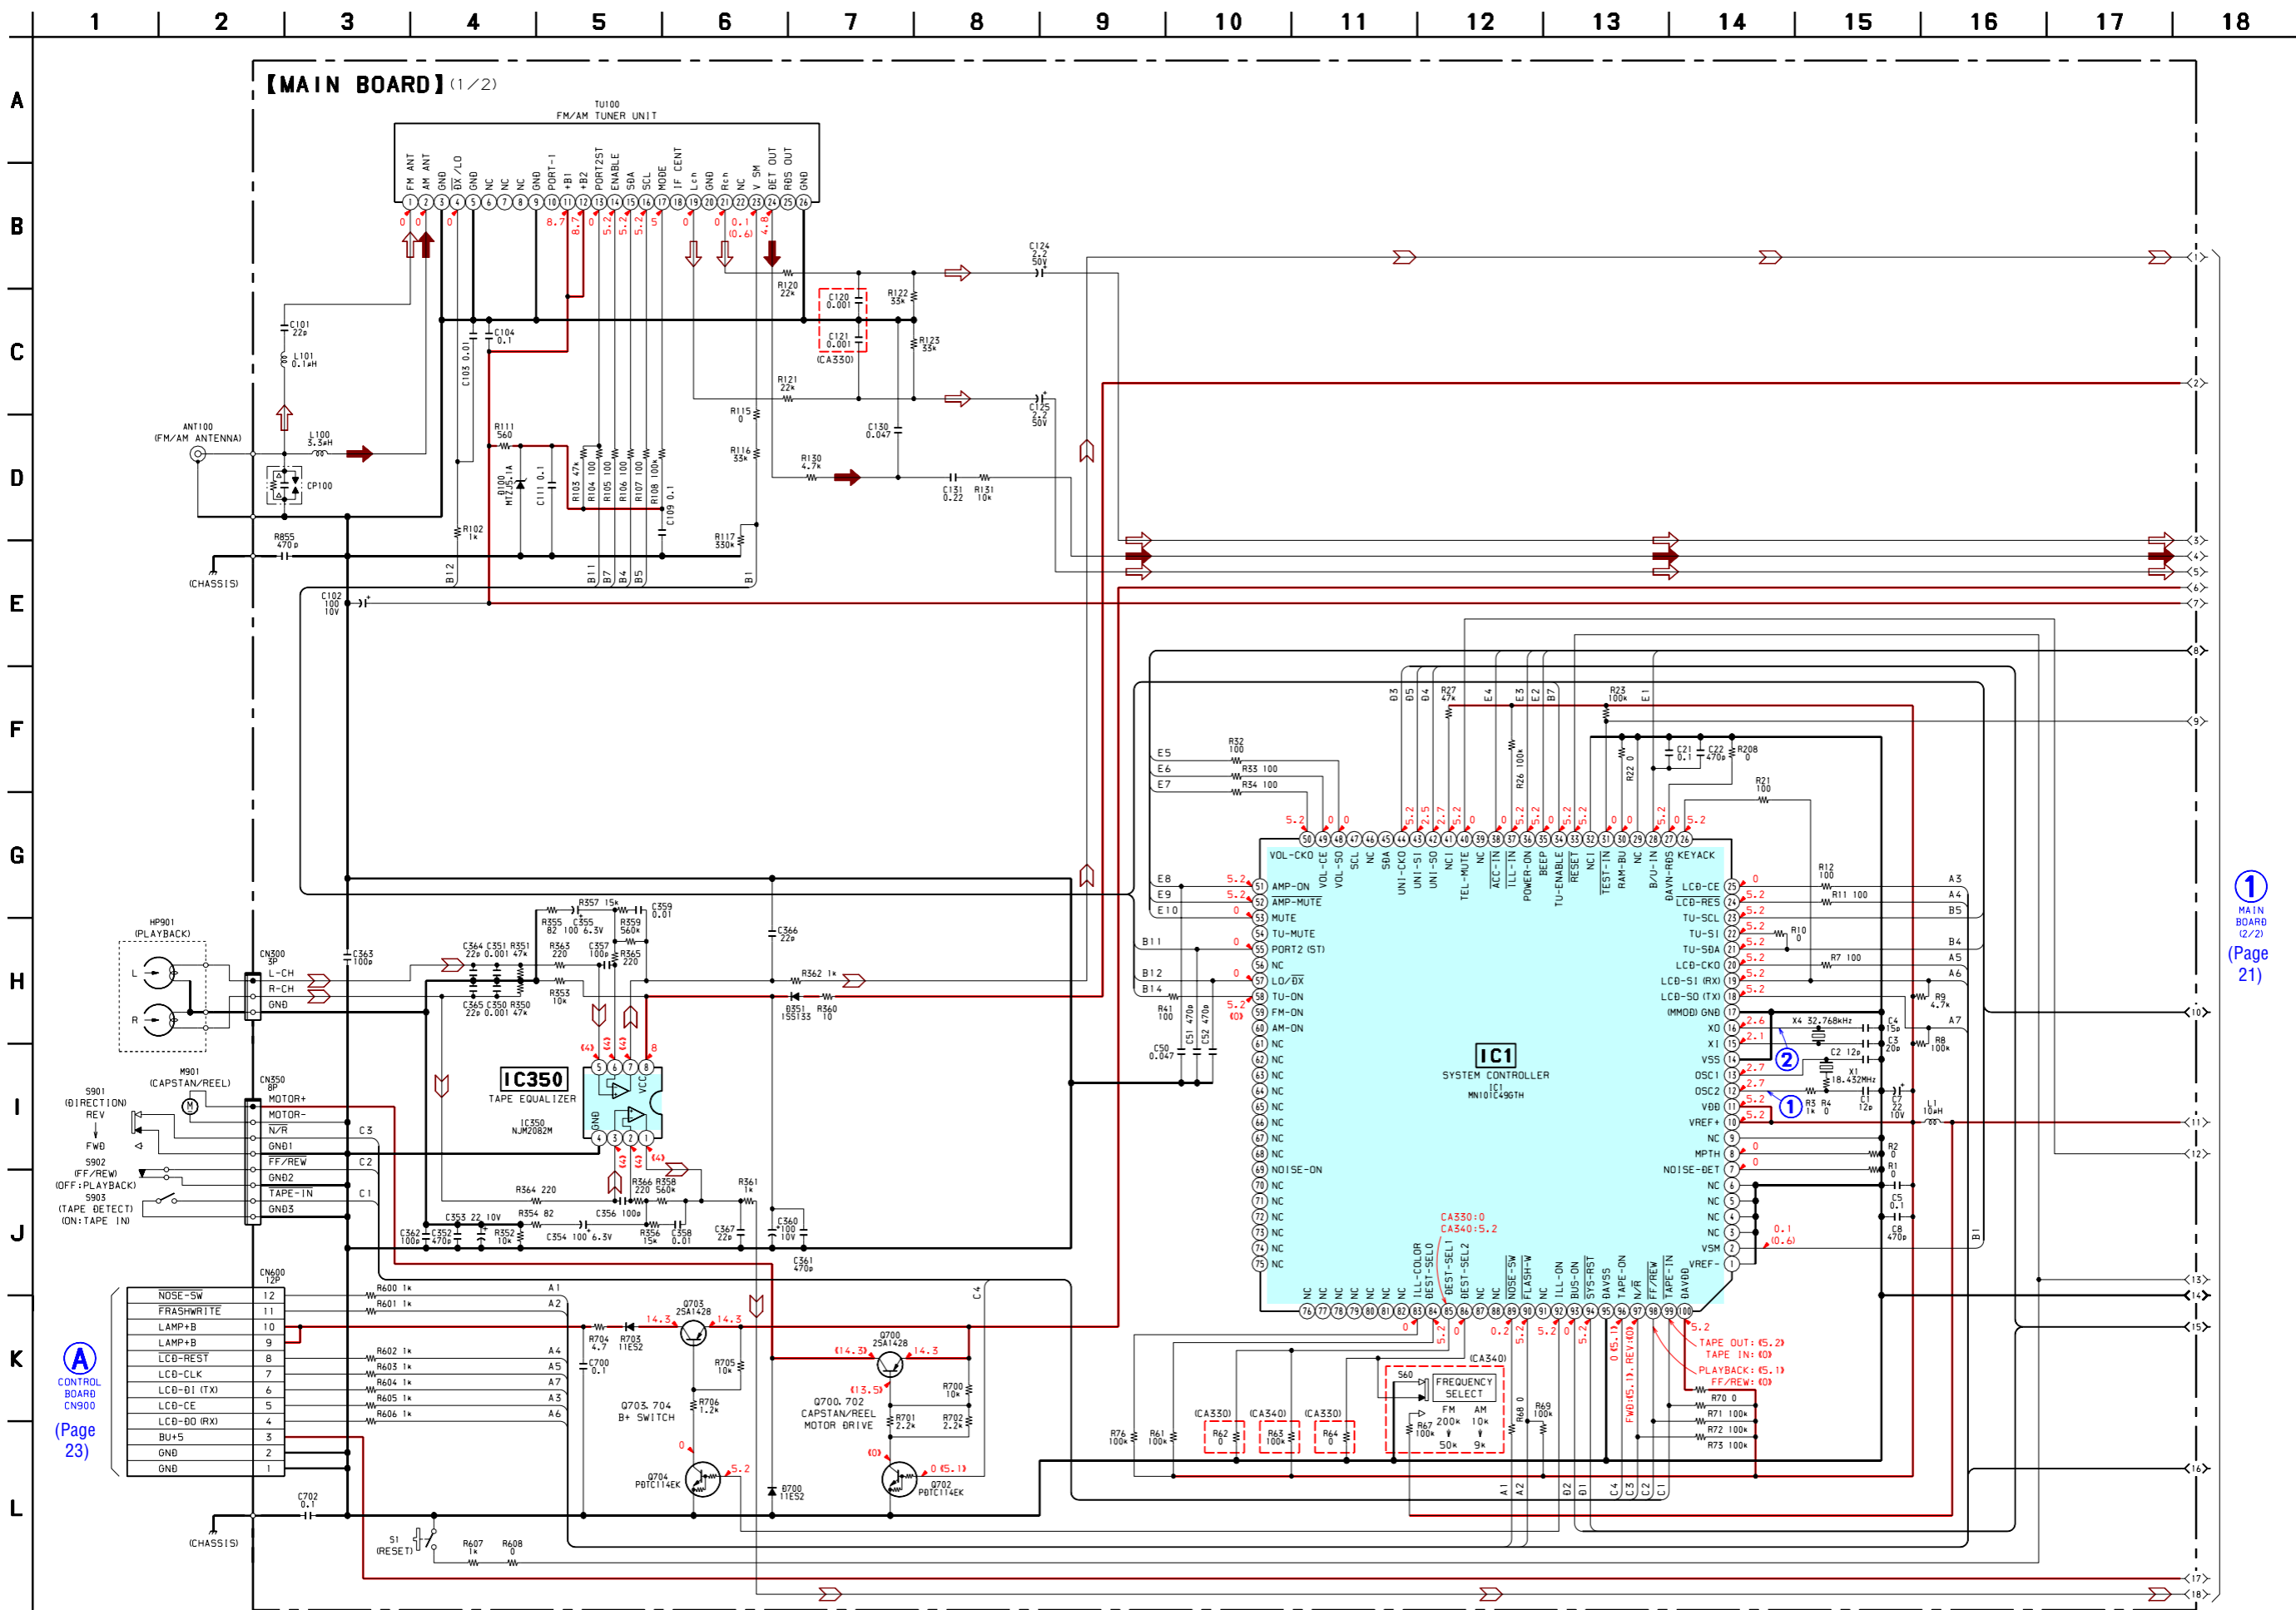


① MAIN BOARD (2/2)
(Page 21)

Ⓐ CONTROL BOARD CN900
(Page 23)

5-4. SCHEMATIC DIAGRAM – MAIN Board (2/2) – • See page 24 for IC Block Diagrams.

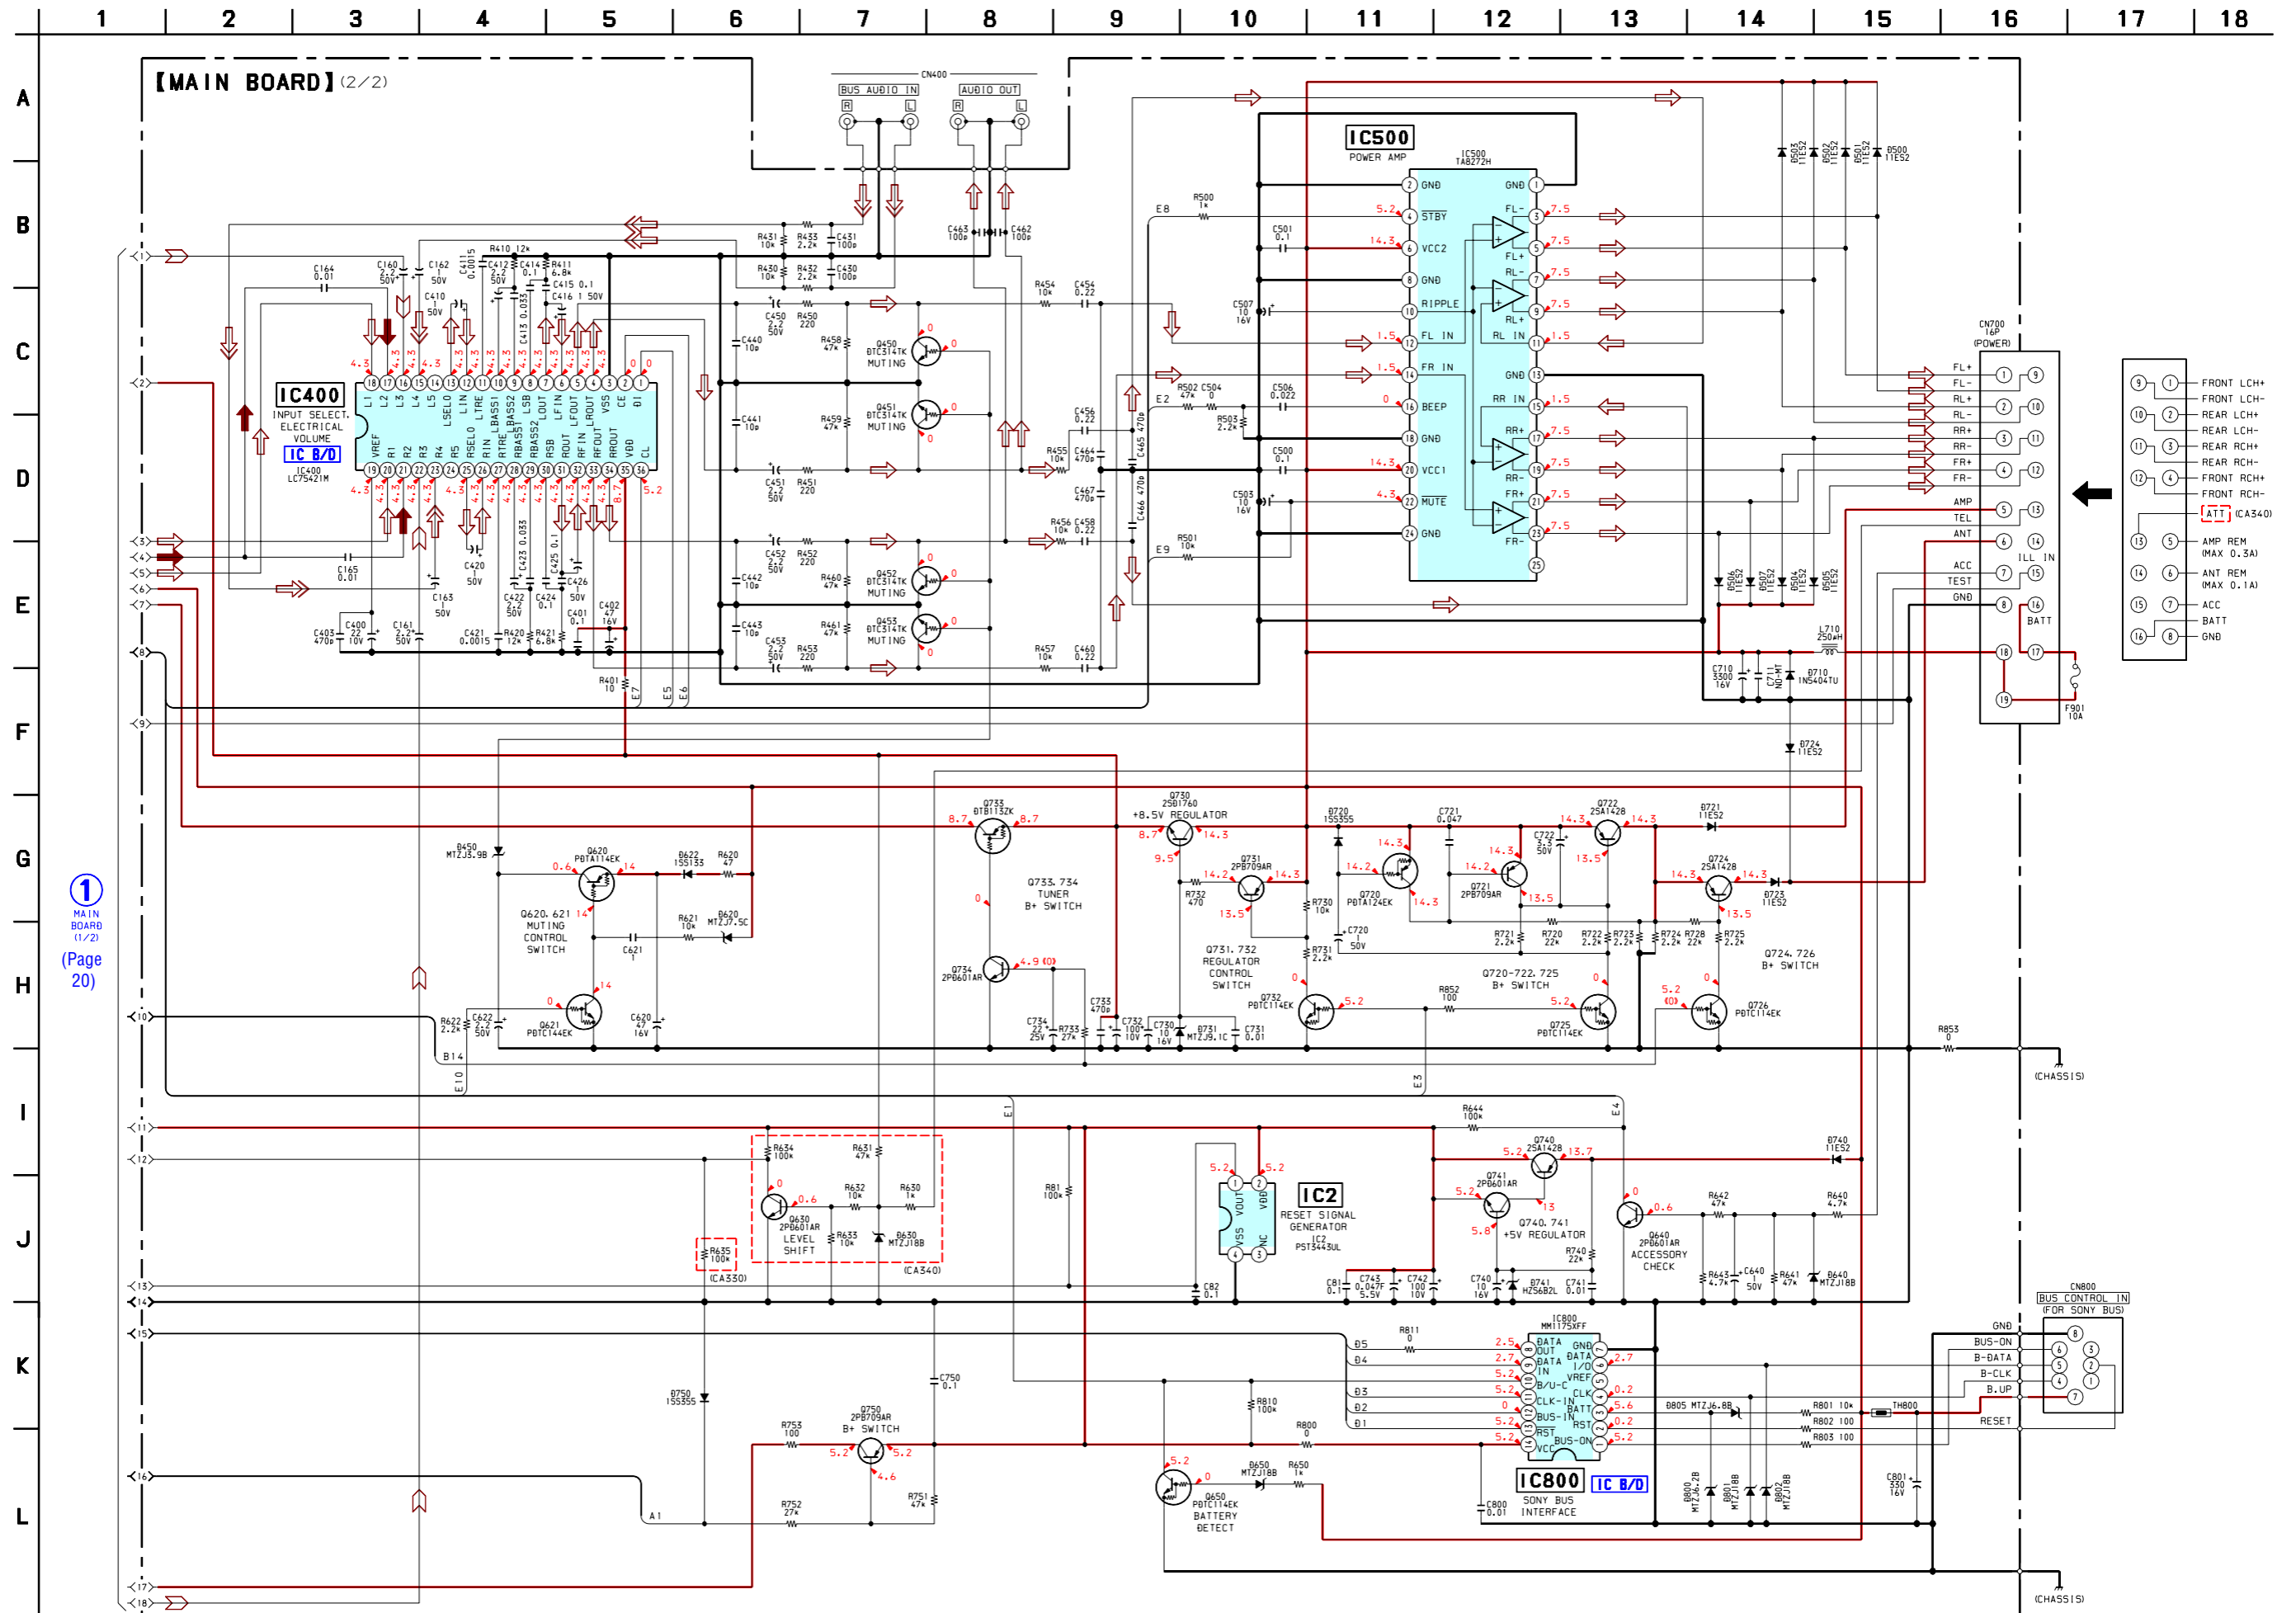

5-5. PRINTED WIRING BOARD – CONTROL Board –

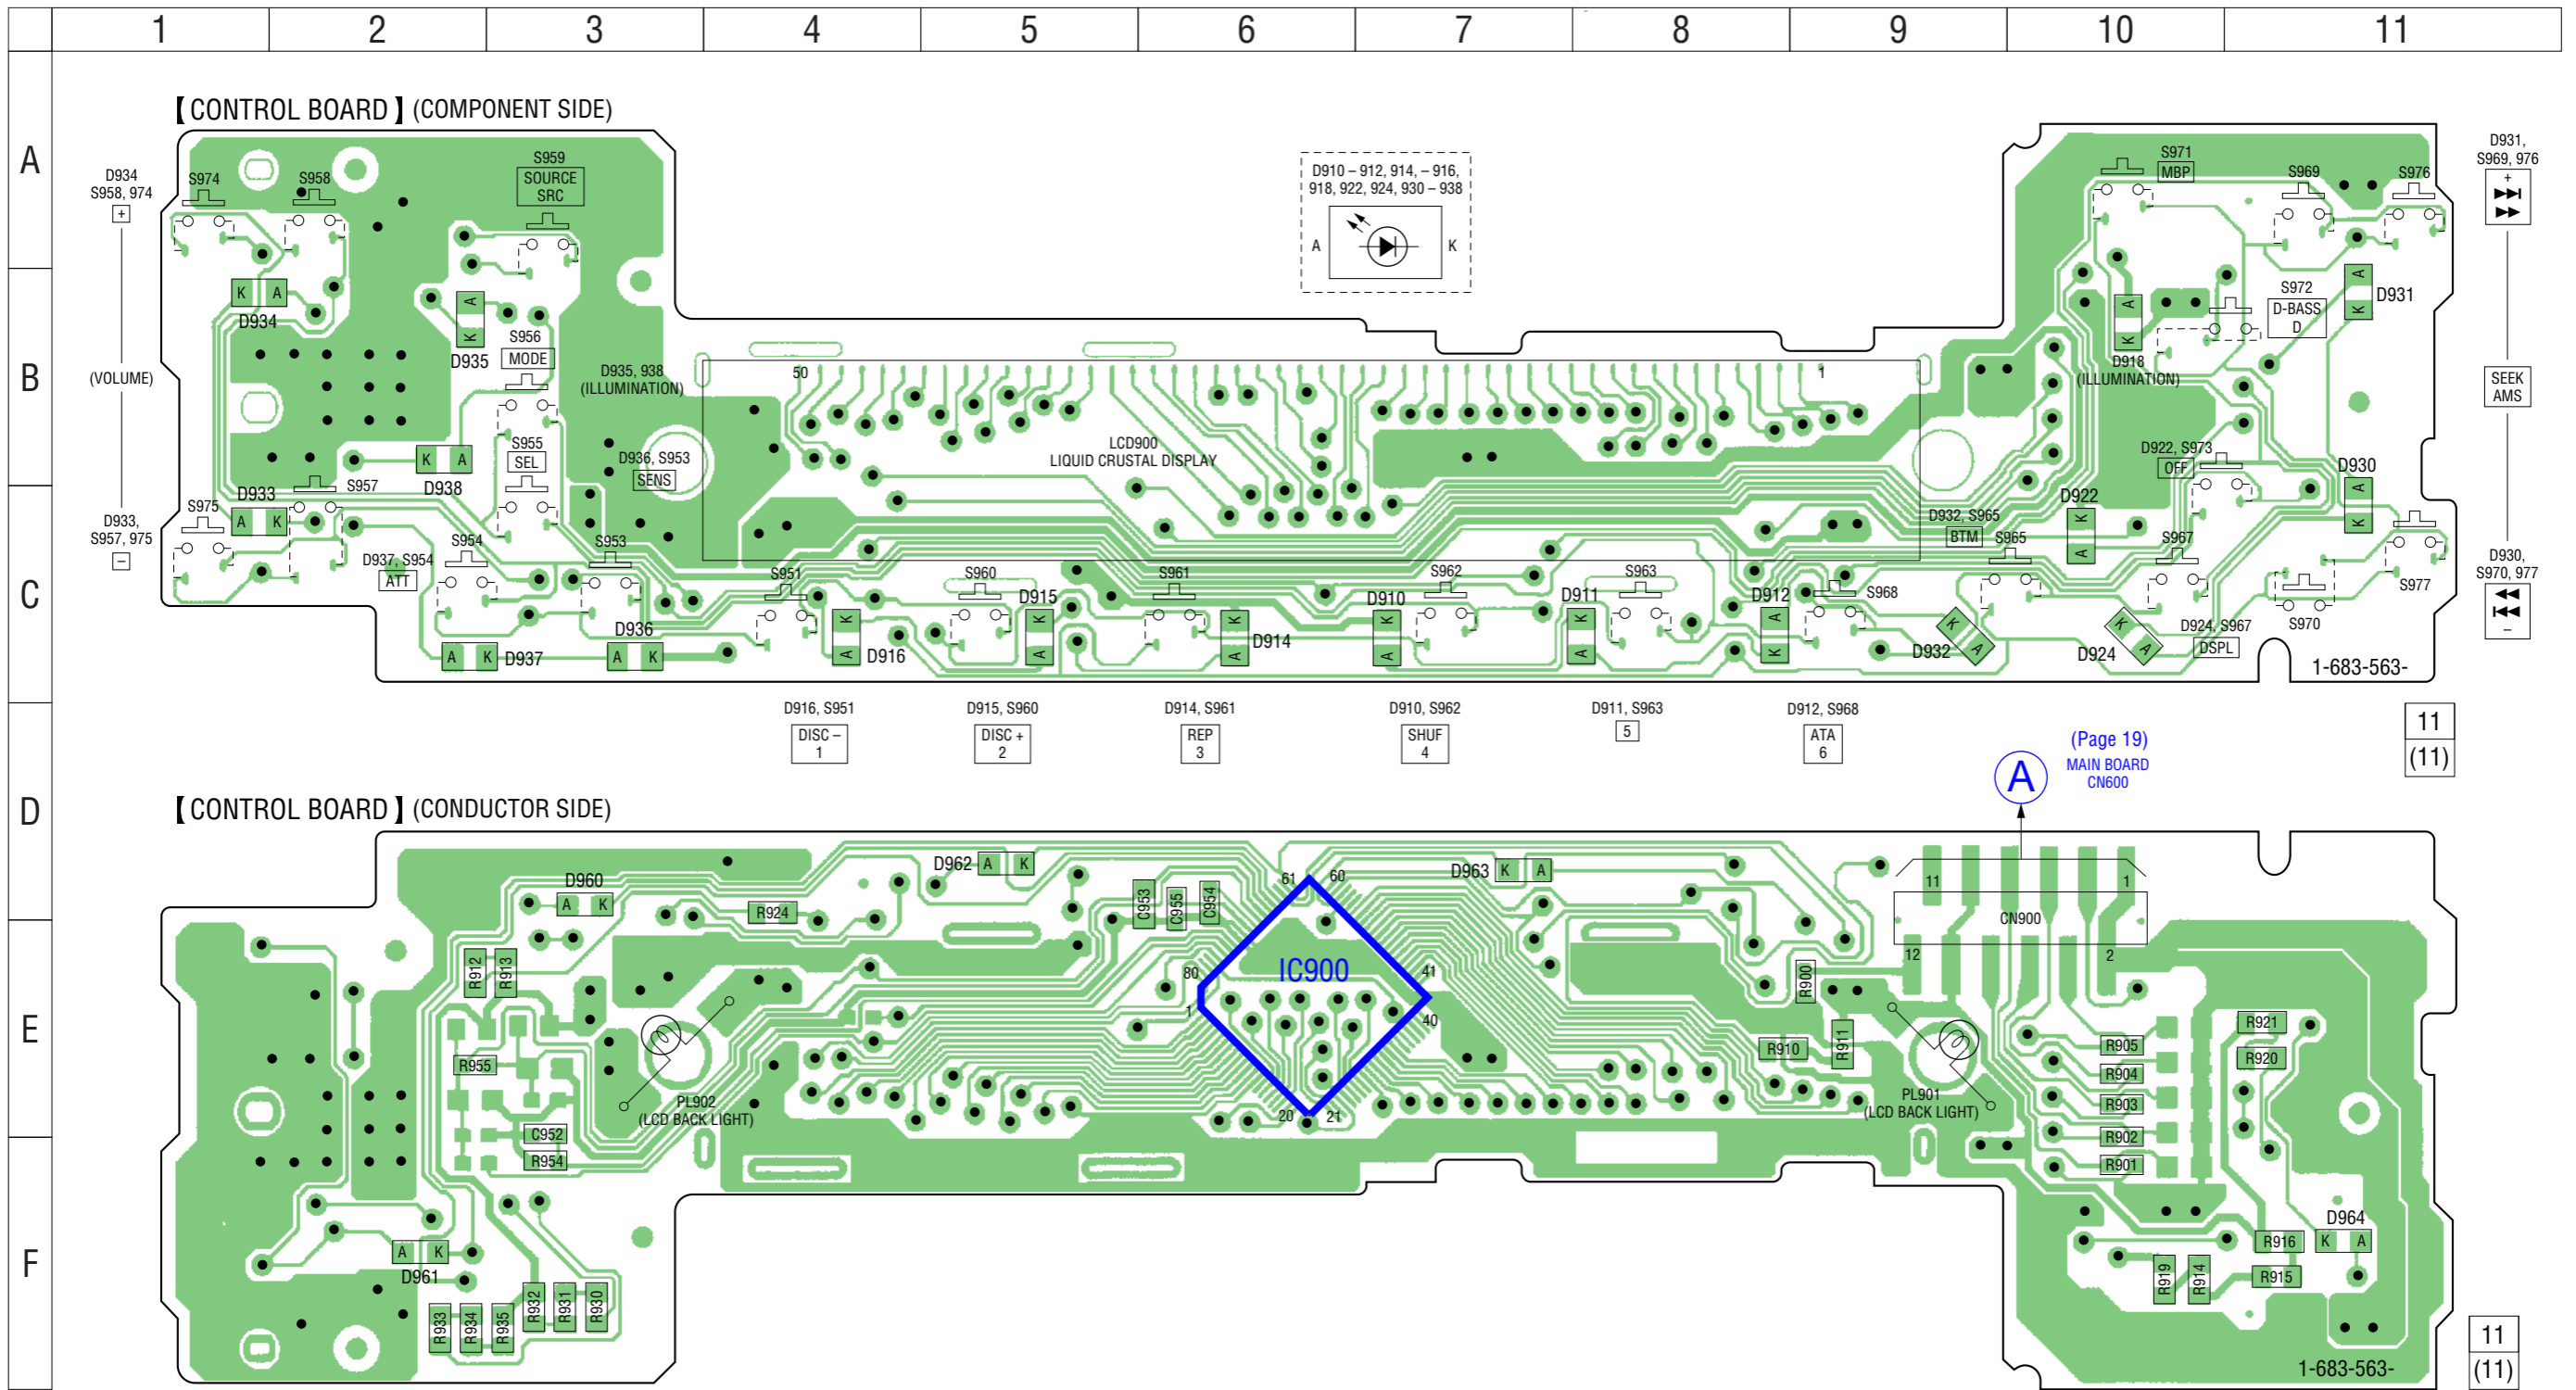


• Semiconductor Location


Ref. No.	Location	Ref. No.	Location
D910	C-7	D934	B-1
D911	C-8	D935	B-2
D912	C-8	D936	C-3
D914	C-6	D937	C-2
D915	C-5	D938	B-2
D916	C-4	D960	D-3
D918	B-10	D961	F-2
D922	C-10	D962	D-5
D924	C-10	D963	D-7
D930	C-11	D964	F-11
D931	B-11	IC900	E-6
D932	C-9		
D933	C-1		

• Waveforms
– MAIN Board –

1 IC1 12 (OSC2)

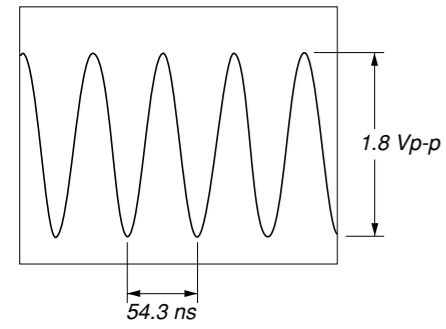


2 IC1 16 (XO)

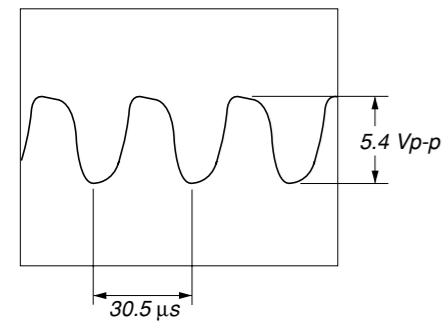


– CONTROL Board –

3 IC900 23 (OSC)

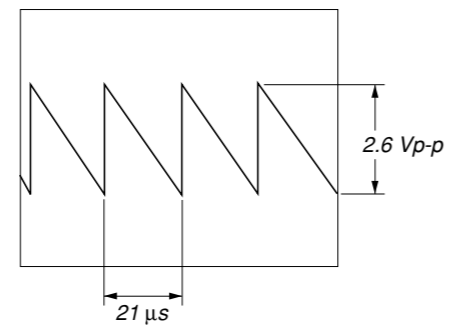


• IC Block Diagrams
– MAIN Board –

IC400 LC75421M-TLM

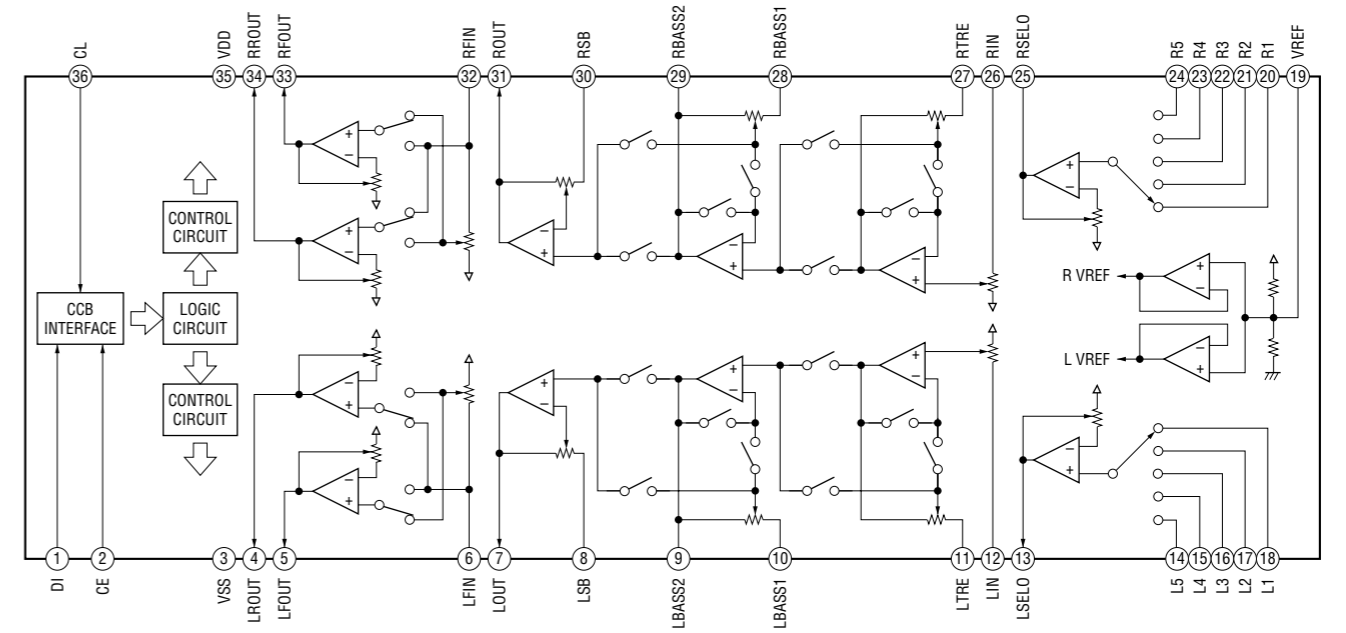

IC800 MM1175XFF

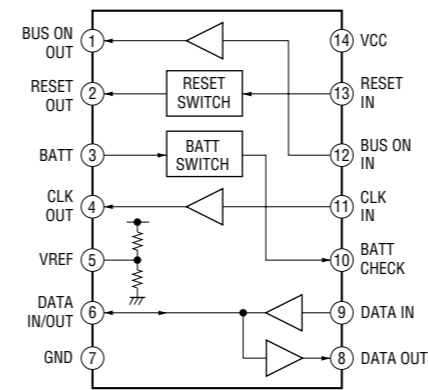


5-7. IC PIN FUNCTION DESCRIPTION

• MAIN BOARD IC1 MN101C49GTH (SYSTEM CONTROLLER)

Pin No.	Pin Name	I/O	Description
1	VREF -	—	Reference voltage (0V) terminal (for A/D converter)
2	VSM	I	FM and AM signal meter voltage detection input from the FM/AM tuner unit (A/D input)
3 to 6	NC	—	Not used
7	NOISE-DET	I	Not used
8	MPTH	I	Not used
9	NC	—	Not used
10	VREF +	—	Reference voltage (+5V) terminal (for A/D converter)
11	VDD	—	Power supply terminal (+5V)
12	OSC2	O	Main system clock output terminal (18.432MHz)
13	OSC1	I	Main system clock input terminal (18.432MHz)
14	VSS	—	Ground terminal
15	XI	I	Sub system clock input terminal (32.768kHz)
16	XO	O	Sub system clock output terminal (32.768kHz)
17	GND (MMOD)	—	Setting terminal for the single chip mode "L": single chip
18	LCD-SO (TX)	O	LCD serial data output to the liquid crystal display driver
19	LCD-SI (RX)	I	LCD serial data input from the liquid crystal display driver
20	LCD-CKO	O	LCD serial transfer clock signal output to the liquid crystal display driver
21	TU-SDA	O	Serial data output to the FM/AM tuner unit
22	TU-SI	I	Serial data input from the FM/AM tuner unit
23	TU-SCL	O	Serial data transfer clock signal output to the FM/AM tuner unit
24	LCD-RES	O	LCD reset signal output to the liquid crystal display driver "L": reset
25	LCD-CE	O	Chip enable signal output to the liquid crystal display driver "H" active
26	KEYACK	I	Key acknowledge signal detect input from the liquid crystal display driver
27	DAVN-RDS	I	Not used
28	B/U-IN	I	Battery detect signal input from the bus interface and battery detect circuit "L" is input at low voltage
29	NC	—	Not used
30	RAM BU	I	Internal RAM reset detection signal input terminal Input terminal to check that RAM data are not destroyed due to low voltage This checking is made within 100 msec after reset "L": RAM reset
31	TEST-IN	I	Setting terminal for the test mode "L": test mode Normally: fixed at "H"
32	NCI	I	Not used
33	RESET	I	System reset signal input from the reset signal generator or reset switch "L": reset "L" is input for several 100 msec after power on, then it changes to "H"
34	TU-ENABLE	O	Chip enable signal output to the FM/AM tuner unit "H" active
35	BEEP	O	Beep sound drive signal output to the power amp
36	POWER-ON	O	Main system power supply on/off control signal output terminal "H": power on
37	ILL-IN	I	Not used
38	ACC-IN	I	Accessory detect signal input terminal "L": accessory on
39	NC	—	Not used
40	TEL-MUTE	I	Telephone muting signal input terminal At input of "H", the signal is attenuated by -20 dB Used for the XR-CA340 only
41	NCI	I	Not used
42	UNI-SO	O	Serial data output to the bus interface
43	UNI-SI	I	Serial data input from the bus interface
44	UNI-CKO	O	Serial data transfer clock signal output to the bus interface


Pin No.	Pin Name	I/O	Description
45	SDA	I/O	Not used
46	NC	—	Not used
47	SCL	O	Not used
48	VOL-SO	O	Serial data output to the electrical volume
49	VOL-CE	O	Chip enable signal output to the electrical volume “H” active
50	VOL-CKO	O	Serial data transfer clock signal output to the electrical volume
51	AMP-ON	O	Standby on/off control signal output to the power amp “L”: standby mode, “H”: amp on
52	AMP-MUTE	O	Muting on/off control signal output to the power amp “L”: muting on
53	MUTE	O	Audio line muting on/off control signal output terminal “H”: muting on
54	TU-MUTE	O	Not used
55	PORT2 (ST)	I	FM stereo broadcasting detection signal input from the FM/AM tuner unit “H”: stereo display lighting
56	NC	—	Not used
57	LO/DX	O	Local/DX control signal output to the FM/AM tuner unit “L”: DX
58	TU-ON	O	Tuner system power supply on/off control signal output terminal “H”: tuner power on
59	FM-ON	O	FM system power supply on/off control signal output terminal “L”: AM power on, “H”: FM power on Not used
60	AM-ON	O	AM system power supply on/off control signal output terminal “L”: FM power on, “H”: AM power on Not used
61 to 68	NC	—	Not used
69	NOISE-ON	O	Not used
70 to 82	NC	—	Not used
83	ILL-COLOR	I	Illumination color select input terminal “L”: amber illumination “H”: green illumination (fixed at “H”)
84	DEST-SEL0	I	Destination setting terminal (fixed at “H”)
85	DEST-SEL1	I	Destination setting terminal XR-CA330: fixed at “L”, XR-CA340: fixed at “H”
86	DEST-SEL2	I	Destination setting terminal XR-CA330: fixed at “L”, XR-CA340: input for the FREQUENCY SELECT switch
87, 88	NC	—	Not used
89	NOSE-SW	I	Front panel block remove/attach detection signal input terminal “L”: front panel is attached
90	FLASH-W	I	Internal flash memory data write mode detection signal input terminal “L”: data write mode Normally: fixed at “H”
91	NC	—	Not used
92	ILL-ON	O	Power on/off control signal output of the illumination LED and LCD back light “H”: power on
93	BUS-ON	O	Bus on/off control signal output to the bus interface “L”: bus on
94	SYS-RST	O	Reset signal output to the bus interface “L”: reset
95	DAVSS	—	Ground terminal (for D/A converter)
96	TAPE-ON	O	Capstan/reel motor drive signal output terminal “H”: motor on
97	N/R	I	Tape direction switch input terminal “L”: reverse direction “H”: forward direction
98	FF/REW	I	FF/REW detection switch input terminal “L”: FF/REW mode
99	TAPE-IN	I	Tape in detection switch input terminal “L”: tape in
100	DAVDD	—	Power supply terminal (+5V) (for D/A converter)

6-2. FRONT PANEL SECTION

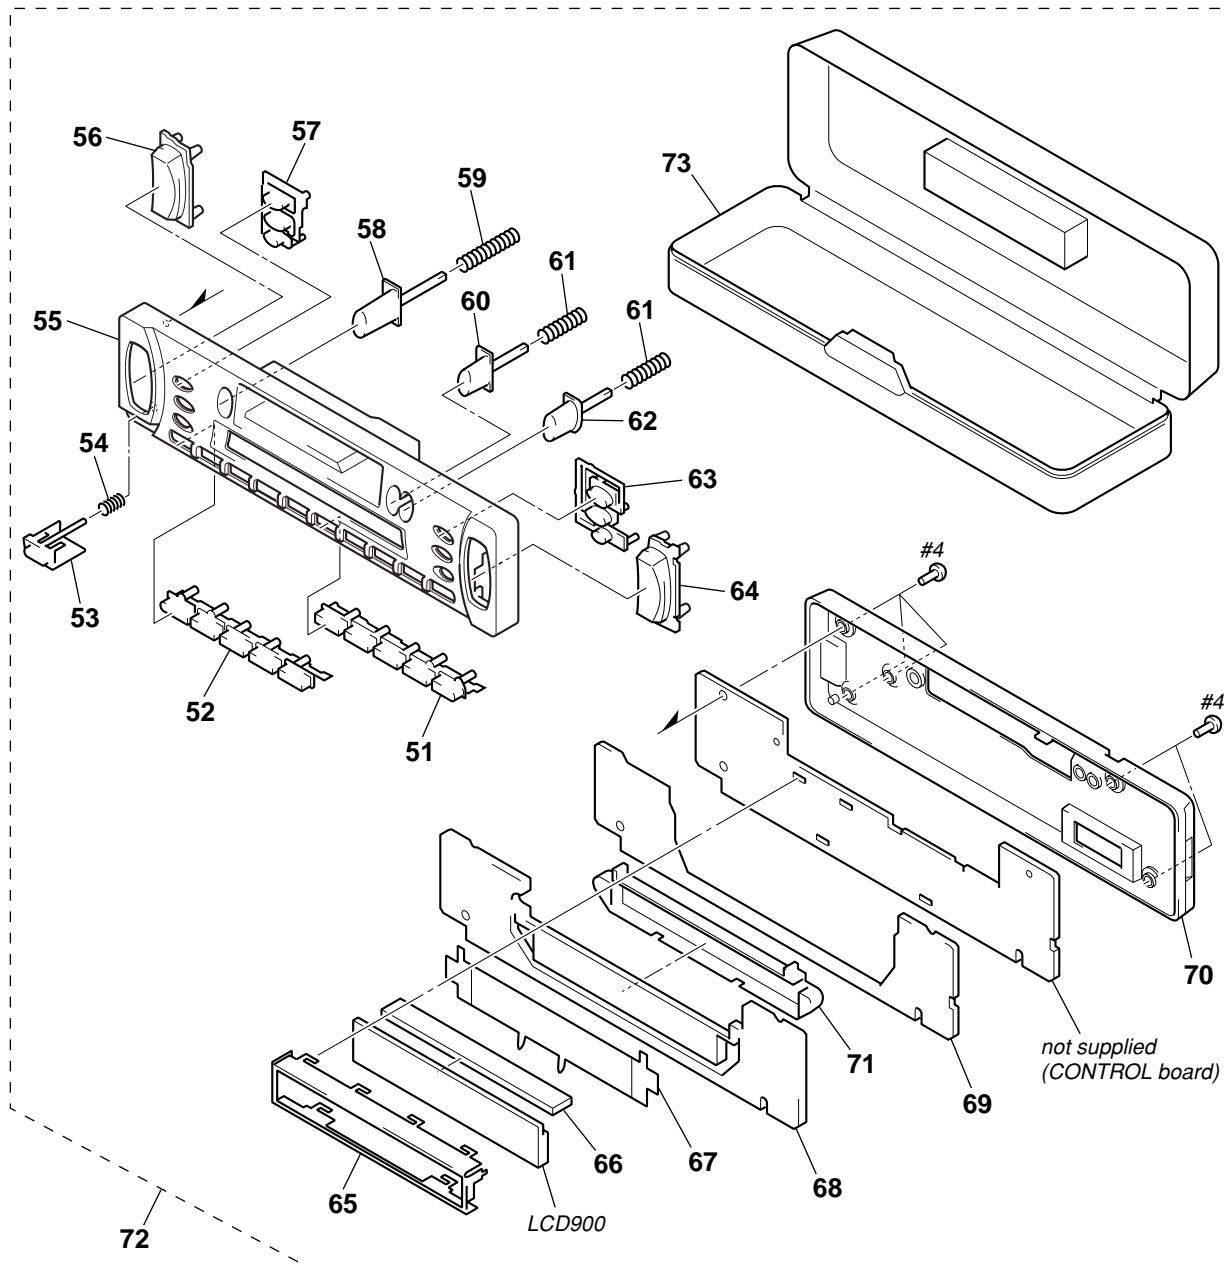

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	3-224-928-01	BUTTON (4-6) (4. 5. 6. BTM. DSPL)		62	3-224-915-21	BUTTON (FF) (▶▶) (CA330)	
52	3-224-912-01	BUTTON (1-3) (ATT. SENS. 1. 2. 3)		63	3-224-907-01	BUTTON (D-BASS) (MBP. D. OFF)	
53	3-224-913-01	BUTTON (RELEASE) (CA330)		64	3-224-929-01	BUTTON (SEEK)	
53	3-224-913-11	BUTTON (RELEASE) (CA340)				(+ ▶▶▶▶ SEEK AMS ◀◀◀◀ -) (CA330)	
54	3-220-522-01	SPRING (RELEASE)		64	3-224-929-11	BUTTON (SEEK)	
						(+ ▶▶▶▶ SEEK AMS ◀◀◀◀ -) (CA340)	
55	3-224-911-31	PANEL, FRONT (CA330)		* 65	3-224-927-01	PLATE (LCD), GROUND	
55	3-224-911-41	PANEL, FRONT (CA340)		66	1-694-696-31	CONDUCTIVE BOARD, CONNECTION	
56	3-224-930-01	BUTTON (+/-) (CA330)		* 67	3-224-926-01	ILLUMINATOR	
56	3-224-930-21	BUTTON (+/-) (CA340)		* 68	3-236-778-01	PLATE, LIGHT GUIDE	
57	3-224-908-01	BUTTON (SOURCE) (SRC. MODE. SEL)		69	1-786-305-11	SWITCH, SHEET	
				70	3-224-904-01	PANEL, FRONT BACK	
58	3-224-917-11	BUTTON (EJECT) (▲) (CA340)		* 71	3-224-924-01	HOLDER (LCD)	
58	3-224-917-21	BUTTON (EJECT) (▲) (CA330)		* 72	A-3315-468-A	PANEL ASSY, FRONT (CA330)	
59	3-029-327-01	SPRING (EJECT)		* 72	A-3315-469-A	PANEL ASSY, FRONT (CA340)	
60	3-224-916-11	BUTTON (REW) (◀◀) (CA340)		73	X-3378-490-2	CASE (PANEL) ASSY	
60	3-224-916-21	BUTTON (REW) (◀◀) (CA330)		LCD900	1-804-512-11	DISPLAY PANEL, LIQUID CRYSTAL	
61	3-375-372-01	SPRING (F/R)					
62	3-224-915-11	BUTTON (FF) (▶▶) (CA340)					

6-3. MECHANISM DECK SECTION
(MG-36SZ12-32)

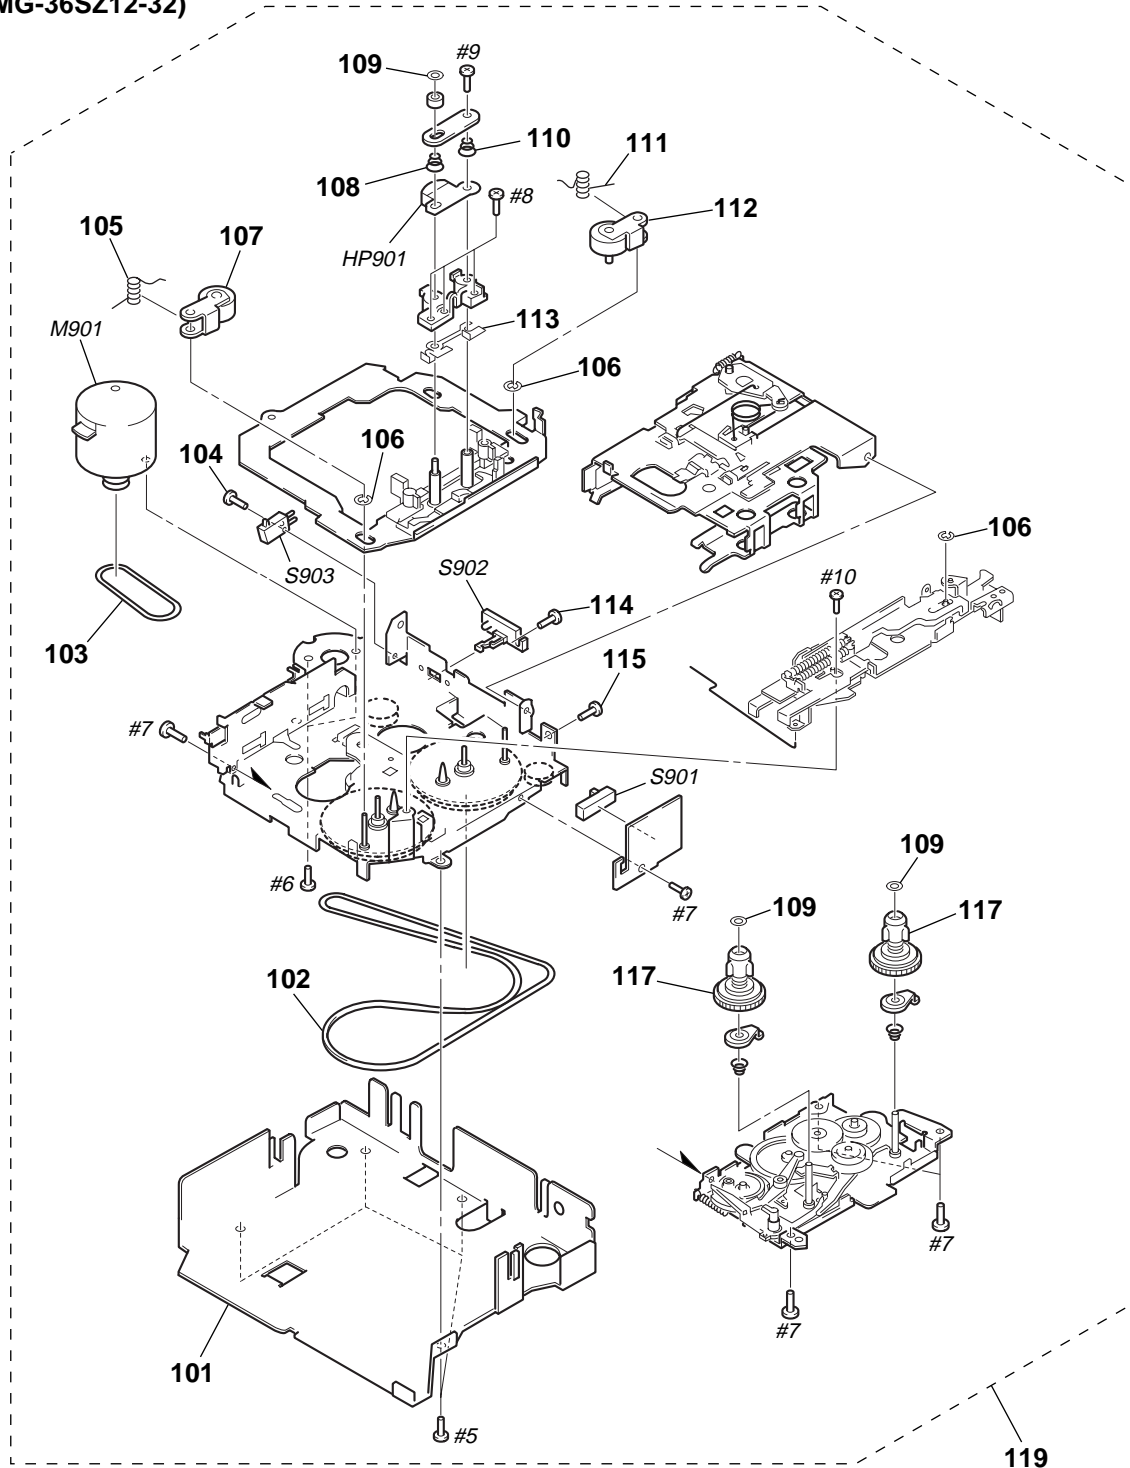

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	3-224-920-01	BRACKET (MD)		112	3-045-891-01	PINCH ARM (F)	
102	3-045-943-01	MAIN BELT		113	3-045-906-01	ADJUSTER SHIM (X)	
103	3-045-945-01	SUB BELT (C)		114	3-045-952-01	+MACHINE SCREW M1.7X4	
104	3-045-953-01	+MACHINE SCREW M1.7X6		115	3-713-786-51	SCREW +P 2X3	
105	3-045-940-01	PINCH ARM SPG (R)		117	3-045-893-01	REEL SPINDLE	
106	3-045-950-01	E-RING (DIA. 2)		119	A-3220-846-A	MECHANISM DECK ASSY (MG-36SZ12-32)	
107	3-045-890-01	PINCH ARM (R)		HP901	1-500-661-11	HEAD (PLAYBACK)	
108	3-045-933-01	ADJUSTER ARM SPG (B)		M901	1-763-507-11	MOTOR (CAPSTAN/REEL)	
109	3-045-949-01	PSW (REEL) B		S901	1-771-928-11	SWITCH, SLIDE (DIRECTION)	
110	3-045-932-01	ADJUSTER ARM SPG (A)		S902	1-771-926-11	SWITCH, LEAF (FF/REW)	
111	3-045-939-01	PINCH ARM SPG (F)		S903	1-771-927-11	SWITCH, LEAF (TAPE DETECT)	

SECTION 7
ELECTRICAL PARTS LIST

CONTROL

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable
- Refer to servicing note (page 2) for discrimination of TYPE A/B.

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u: μ , for example:
uA. . : μ A. . uPA. . : μ PA. .
uPB. . : μ PB. . uPC. . : μ PC. .
uPD. . : μ PD. .
- CAPACITORS
uF: μ F
- COILS
uH: μ H

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark
		CONTROL BOARD *****	
	1-694-696-31	CONDUCTIVE BOARD, CONNECTION	
	1-786-305-11	SWITCH, SHEET	
*	3-224-924-01	HOLDER (LCD)	
*	3-224-926-01	ILLUMINATOR	
*	3-224-927-01	PLATE (LCD), GROUND	
	3-236-778-01	PLATE, LIGHT GUIDE	
		< CAPACITOR >	
C952	1-115-412-11	CERAMIC CHIP 680PF 5% 25V	
C953	1-125-891-11	CERAMIC CHIP 0.47uF 10% 10V	
C954	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V	
C955	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V	
		< CONNECTOR >	
CN900	1-794-312-11	PIN, CONNECTOR 12P	
		< DIODE >	
D910	8-719-053-31	LED CL-170YG-CD-T (4, SHUF) (CA330)	
D910	8-719-082-98	LED CL-170FG-CD-T (4, SHUF) (CA340)	
D911	8-719-053-31	LED CL-170YG-CD-T (5) (CA330)	
D911	8-719-082-98	LED CL-170FG-CD-T (5) (CA340)	
D912	8-719-053-31	LED CL-170YG-CD-T (6, ATA) (CA330)	
D912	8-719-082-98	LED CL-170FG-CD-T (6, ATA) (CA340)	
D914	8-719-053-31	LED CL-170YG-CD-T (3, REP) (CA330)	
D914	8-719-082-98	LED CL-170FG-CD-T (3, REP) (CA340)	
D915	8-719-053-31	LED CL-170YG-CD-T (2, DISC +) (CA330)	
D915	8-719-082-98	LED CL-170FG-CD-T (2, DISC +) (CA340)	
D916	8-719-053-31	LED CL-170YG-CD-T (1, DISC -) (CA330)	
D916	8-719-082-98	LED CL-170FG-CD-T (1, DISC -) (CA340)	
D918	8-719-033-14	LED CL-170PG-CD-T (ILLUMINATION) (CA340)	
D918	8-719-053-31	LED CL-170YG-CD-T (ILLUMINATION) (CA330)	
D922	8-719-033-14	LED CL-170PG-CD-T (OFF) (CA340)	
D922	8-719-053-31	LED CL-170YG-CD-T (OFF) (CA330)	
D924	8-719-053-31	LED CL-170YG-CD-T (DSPL) (CA330)	
D924	8-719-082-98	LED CL-170FG-CD-T (DSPL) (CA340)	
D930	8-719-053-31	LED CL-170YG-CD-T (+ $\blacktriangleright\blacktriangleright\blacktriangleright$, SEEK AMS) (CA330)	
D930	8-719-082-98	LED CL-170FG-CD-T (+ $\blacktriangleright\blacktriangleright\blacktriangleright$, SEEK AMS) (CA340)	

Ref. No.	Part No.	Description	Remark
D931	8-719-053-31	LED CL-170YG-CD-T (- $\blacktriangleleft\blacktriangleleft\blacktriangleleft$, SEEK AMS) (CA330)	
D931	8-719-082-98	LED CL-170FG-CD-T (- $\blacktriangleleft\blacktriangleleft\blacktriangleleft$, SEEK AMS) (CA340)	
D932	8-719-053-31	LED CL-170YG-CD-T (BTM) (CA330)	
D932	8-719-082-98	LED CL-170FG-CD-T (BTM) (CA340)	
D933	8-719-053-31	LED CL-170YG-CD-T (- (VOLUME)) (CA330)	
D933	8-719-082-98	LED CL-170FG-CD-T (- (VOLUME)) (CA340)	
D934	8-719-053-31	LED CL-170YG-CD-T (+ (VOLUME)) (CA330)	
D934	8-719-082-98	LED CL-170FG-CD-T (+ (VOLUME)) (CA340)	
D935	8-719-033-14	LED CL-170PG-CD-T (ILLUMINATION) (CA340)	
D935	8-719-053-31	LED CL-170YG-CD-T (ILLUMINATION) (CA330)	
D936	8-719-053-31	LED CL-170YG-CD-T (SENS) (CA330)	
D936	8-719-082-98	LED CL-170FG-CD-T (SENS) (CA340)	
D937	8-719-053-31	LED CL-170YG-CD-T (ATT) (CA330)	
D937	8-719-082-98	LED CL-170FG-CD-T (ATT) (CA340)	
D938	8-719-033-14	LED CL-170PG-CD-T (ILLUMINATION) (CA340)	
D938	8-719-053-31	LED CL-170YG-CD-T (ILLUMINATION) (CA330)	
D960	8-719-988-61	DIODE 1SS355TE-17	
D961	8-719-988-61	DIODE 1SS355TE-17	
D962	8-719-988-61	DIODE 1SS355TE-17	
D963	8-719-988-61	DIODE 1SS355TE-17	
D964	8-719-988-61	DIODE 1SS355TE-17	
		< IC >	
IC900	8-759-657-06	IC LC75884W	
		< LIQUID CRYSTAL DISPLAY >	
LCD900	1-804-512-11	DISPLAY PANEL, LIQUID CRYSTAL	
		< PILOT LAMP >	
PL901	1-518-740-11	LAMP, PILOT (LCD BACK LIGHT) (CA340)	
PL901	1-518-740-31	LAMP, PILOT (LCD BACK LIGHT) (CA330)	
PL902	1-518-740-11	LAMP, PILOT (LCD BACK LIGHT) (CA340)	
PL902	1-518-740-31	LAMP, PILOT (LCD BACK LIGHT) (CA330)	
		< RESISTOR >	
R900	1-216-295-00	SHORT CHIP 0	
R901	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R902	1-216-049-11	RES-CHIP 1K 5% 1/10W	

CONTROL	MAIN
----------------	-------------

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R903	1-216-049-11	RES-CHIP	1K 5% 1/10W				(CA330)
R904	1-216-049-11	RES-CHIP	1K 5% 1/10W	C124	1-124-257-00	ELECT 2.2uF 20%	50V
R905	1-216-049-11	RES-CHIP	1K 5% 1/10W	C125	1-124-257-00	ELECT 2.2uF 20%	50V
R910	1-216-174-00	RES-CHIP	100 5% 1/8W	C130	1-165-176-11	CERAMIC CHIP 0.047uF 10%	16V
R911	1-216-172-00	METAL CHIP	82 5% 1/8W	C131	1-164-489-11	CERAMIC CHIP 0.22uF 10%	16V
R912	1-216-174-00	RES-CHIP	100 5% 1/8W	C160	1-124-257-00	ELECT 2.2uF 20%	50V
R913	1-216-174-00	RES-CHIP	100 5% 1/8W	C161	1-124-257-00	ELECT 2.2uF 20%	50V
R914	1-216-178-00	RES-CHIP	150 5% 1/8W	C162	1-126-160-11	ELECT 1uF 20%	50V
R915	1-216-178-00	RES-CHIP	150 5% 1/8W	C163	1-126-160-11	ELECT 1uF 20%	50V
R916	1-216-178-00	RES-CHIP	150 5% 1/8W	C164	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
R919	1-216-176-11	RES-CHIP	120 5% 1/8W	C165	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
R920	1-216-174-00	RES-CHIP	100 5% 1/8W	C350	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
R921	1-216-172-00	METAL CHIP	82 5% 1/8W	C351	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
R924	1-216-174-00	RES-CHIP	100 5% 1/8W	C352	1-164-315-11	CERAMIC CHIP 470PF 5%	50V
R930	1-216-174-00	RES-CHIP	100 5% 1/8W	C353	1-124-234-00	ELECT 22uF 20%	16V
R931	1-216-174-00	RES-CHIP	100 5% 1/8W	C354	1-124-584-00	ELECT 100uF 20%	10V
R932	1-216-174-00	RES-CHIP	100 5% 1/8W	C355	1-124-584-00	ELECT 100uF 20%	10V
R933	1-216-174-00	RES-CHIP	100 5% 1/8W	C356	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
R934	1-216-174-00	RES-CHIP	100 5% 1/8W	C357	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
R935	1-216-174-00	RES-CHIP	100 5% 1/8W	C358	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
R954	1-216-088-00	METAL CHIP	43K 5% 1/10W	C359	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
R955	1-216-295-00	SHORT CHIP	0	C360	1-124-584-00	ELECT 100uF 20%	10V
*****				C361	1-164-315-11	CERAMIC CHIP 470PF 5%	50V
A-3340-273-A MAIN BOARD, COMPLETE (CA330)				C362	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
A-3340-275-A MAIN BOARD, COMPLETE (CA340)				C363	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
*****				C364	1-162-919-11	CERAMIC CHIP 22PF 5%	50V
*	3-041-578-01	BRACKET (IC)		C365	1-162-919-11	CERAMIC CHIP 22PF 5%	50V
*	3-224-921-01	HEAT SINK		C366	1-162-919-11	CERAMIC CHIP 22PF 5%	50V
	7-685-794-09	SCREW +PTT 2.6X10 (S)		C367	1-162-919-11	CERAMIC CHIP 22PF 5%	50V
		< JACK >		C400	1-124-234-00	ELECT 22uF 20%	16V
ANT100	1-815-185-12	JACK (ANT) (FM/AM ANTENNA)		C401	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
		< CAPACITOR/RESISTOR >		C402	1-124-589-11	ELECT 47uF 20%	16V
C1	1-162-916-11	CERAMIC CHIP 12PF 5%	50V	C403	1-164-315-11	CERAMIC CHIP 470PF 5%	50V
C2	1-162-916-11	CERAMIC CHIP 12PF 5%	50V	C410	1-104-942-11	ELECT 1uF 20%	50V
C3	1-164-160-11	CERAMIC CHIP 20PF 5%	50V	C411	1-162-965-11	CERAMIC CHIP 0.0015uF 10%	50V
C4	1-162-917-11	CERAMIC CHIP 15PF 5%	50V	C412	1-124-257-00	ELECT 2.2uF 20%	50V
C5	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	C413	1-164-677-11	CERAMIC CHIP 0.033uF 10%	16V
C7	1-124-234-00	ELECT 22uF 20%	16V	C414	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C8	1-164-315-11	CERAMIC CHIP 470PF 5%	50V	C415	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C21	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	C416	1-104-942-11	ELECT 1uF 20%	50V
C22	1-164-315-11	CERAMIC CHIP 470PF 5%	50V	C420	1-104-942-11	ELECT 1uF 20%	50V
C50	1-165-176-11	CERAMIC CHIP 0.047uF 10%	16V	C421	1-162-965-11	CERAMIC CHIP 0.0015uF 10%	50V
C51	1-164-315-11	CERAMIC CHIP 470PF 5%	50V	C422	1-124-257-00	ELECT 2.2uF 20%	50V
C52	1-164-315-11	CERAMIC CHIP 470PF 5%	50V	C423	1-164-677-11	CERAMIC CHIP 0.033uF 10%	16V
C81	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	C424	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C82	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	C425	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C101	1-162-919-11	CERAMIC CHIP 22PF 5%	50V	C426	1-104-942-11	ELECT 1uF 20%	50V
C102	1-104-665-11	ELECT 100uF 20%	10V	C430	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C103	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V	C431	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C104	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	C440	1-162-915-11	CERAMIC CHIP 10PF 0.5PF	50V
C109	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	C441	1-162-915-11	CERAMIC CHIP 10PF 0.5PF	50V
C111	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	C442	1-162-915-11	CERAMIC CHIP 10PF 0.5PF	50V
C120	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V	C443	1-162-915-11	CERAMIC CHIP 10PF 0.5PF	50V
C121	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V	C450	1-124-257-00	ELECT 2.2uF 20%	50V
			(CA330)	C451	1-124-257-00	ELECT 2.2uF 20%	50V
				C452	1-124-257-00	ELECT 2.2uF 20%	50V
				C453	1-124-257-00	ELECT 2.2uF 20%	50V
				C454	1-164-489-11	CERAMIC CHIP 0.22uF 10%	16V

XR-CA330/CA340

Ver 1.2

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C456	1-164-489-11	CERAMIC CHIP	0.22uF 10% 16V			< DISCHARGE GAP >	
C458	1-164-489-11	CERAMIC CHIP	0.22uF 10% 16V	CP100	1-519-504-11	GAP, DISCHARGE	
C460	1-164-489-11	CERAMIC CHIP	0.22uF 10% 16V			< DIODE >	
C462	1-162-927-11	CERAMIC CHIP	100PF 5% 50V				
C463	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	D100	8-719-921-42	DIODE MTZJ-5.1A	
C464	1-164-315-11	CERAMIC CHIP	470PF 5% 50V	D351	8-719-991-33	DIODE 1SS133T-77	
C465	1-164-315-11	CERAMIC CHIP	470PF 5% 50V	D450	8-719-109-72	DIODE RD3.9ES-B2	
C466	1-164-315-11	CERAMIC CHIP	470PF 5% 50V	D500	8-719-200-82	DIODE 11ES2	
C467	1-164-315-11	CERAMIC CHIP	470PF 5% 50V	D501	8-719-200-82	DIODE 11ES2	
C500	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D502	8-719-200-82	DIODE 11ES2	
C501	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D503	8-719-200-82	DIODE 11ES2	
C502	1-126-791-11	ELECT	10uF 20% 16V (TYPE B)	D504	8-719-200-82	DIODE 11ES2	
C503	1-126-157-11	ELECT	10uF 20% 16V	D505	8-719-200-82	DIODE 11ES2	
C504	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V (TYPE B)	D506	8-719-200-82	DIODE 11ES2	
C504	1-216-295-00	SHORT CHIP	0 (TYPE A)	D507	8-719-200-82	DIODE 11ES2	
C505	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V (TYPE B)	D620	8-719-110-03	DIODE RD7.5ESB2	
C506	1-109-982-11	CERAMIC CHIP	1uF 10% 10V (TYPE B)	D622	8-719-991-33	DIODE 1SS133T-77	
C506	1-164-227-11	CERAMIC CHIP	0.022uF 10% 25V (TYPE A)	D630	8-719-110-49	DIODE RD18ES-B2 (CA340)	
C507	1-126-791-11	ELECT	10uF 20% 16V (TYPE A)	D640	8-719-110-49	DIODE RD18ES-B2	
C507	1-126-947-11	ELECT	47uF 20% 16V (TYPE B)	D650	8-719-110-49	DIODE RD18ES-B2	
C620	1-124-589-11	ELECT	47uF 20% 16V	D700	8-719-200-82	DIODE 11ES2	
C621	1-109-982-11	CERAMIC CHIP	1uF 10% 10V	D710	8-719-049-38	DIODE 1N5404TU	
C622	1-124-257-00	ELECT	2.2uF 20% 50V	D720	8-719-988-61	DIODE 1SS355TE-17	
C640	1-104-942-11	ELECT	1uF 20% 50V	D721	8-719-200-82	DIODE 11ES2	
C700	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D723	8-719-200-82	DIODE 11ES2	
C702	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D724	8-719-200-82	DIODE 11ES2	
C710	1-126-936-11	ELECT	3300uF 20% 16V	D731	8-719-110-14	DIODE RD9.1ES-B3	
C720	1-104-942-11	ELECT	1uF 20% 50V	D740	8-719-200-82	DIODE 11ES2	
C721	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V	D741	8-719-935-40	DIODE HZS6B2LTD	
C722	1-126-162-11	ELECT	3.3uF 20% 50V	D750	8-719-988-61	DIODE 1SS355TE-17	
C730	1-126-791-11	ELECT	10uF 20% 16V	D800	8-719-109-93	DIODE RD6.2ESB2	
C731	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	D801	8-719-110-49	DIODE RD18ES-B2	
C732	1-104-665-11	ELECT	100uF 20% 10V	D802	8-719-110-49	DIODE RD18ES-B2	
C733	1-164-315-11	CERAMIC CHIP	470PF 5% 50V	D805	8-719-109-97	DIODE RD6.8ES-B2	
C734	1-128-551-11	ELECT	22uF 20% 25V			< IC >	
C740	1-126-157-11	ELECT	10uF 20% 16V	IC1	8-759-827-78	IC MN101C49GTH	
C741	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	IC2	6-701-405-01	IC PST3443UL	
C742	1-124-584-00	ELECT	100uF 20% 10V	IC350	8-759-646-95	IC NJM2082M	
C743	1-125-701-11	DOUBLE LAYER	0.047F 5.5V	IC400	8-759-827-11	IC LC75421M-TLM-E	
C750	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	IC500	8-759-486-44	IC TDA7836 (TYPE B)	
C800	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	IC500	8-759-827-12	IC TA8272H (TYPE A)	
C801	1-126-940-11	ELECT	330uF 20% 16V	IC800	8-759-096-16	IC MM1175XFF	
		< CONNECTOR >				< COIL >	
* CN300	1-564-705-11	PIN, CONNECTOR (PC BOARD) 3P		L1	1-410-509-11	INDUCTOR 10uH	
* CN350	1-573-486-11	PIN, CONNECTOR (PC BOARD) 8P		L100	1-410-322-11	INDUCTOR 3.3uH	
CN400	1-774-699-12	JACK, PIN 4P (BUS AUDIO IN, AUDIO OUT)		L101	1-412-967-31	INDUCTOR CHIP 0.1uH	
CN600	1-794-311-21	PLUG, CONNECTOR 12P		L710	1-419-476-11	COIL, CHOKE 250uH	
CN700	1-774-701-11	PIN, CONNECTOR 16P (POWER)				< TRANSISTOR >	
CN800	1-580-907-31	PLUG, CONNECTOR (BUS CONTROL IN)		Q450	8-729-920-21	TRANSISTOR DTC314TKH04	
				Q451	8-729-920-21	TRANSISTOR DTC314TKH04	
				Q452	8-729-920-21	TRANSISTOR DTC314TKH04	
				Q453	8-729-920-21	TRANSISTOR DTC314TKH04	
				Q620	8-729-043-32	TRANSISTOR PDTA114EK-115	
				Q621	8-729-043-29	TRANSISTOR PDTA114EK-115	

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
Q630	8-729-422-33	TRANSISTOR	2PD601A-Q-TX (CA340)	R103	1-216-089-11	RES-CHIP	47K 5% 1/10W
Q640	8-729-422-33	TRANSISTOR	2PD601A-Q-TX	R104	1-247-807-31	CARBON	100 5% 1/4W
Q650	8-729-043-27	TRANSISTOR	PDTC114EK-115	R105	1-247-807-31	CARBON	100 5% 1/4W
Q700	8-729-205-95	TRANSISTOR	2SA1428-Y	R106	1-247-807-31	CARBON	100 5% 1/4W
Q702	8-729-043-27	TRANSISTOR	PDTC114EK-115	R107	1-247-807-31	CARBON	100 5% 1/4W
Q703	8-729-205-95	TRANSISTOR	2SA1428-Y	R108	1-216-097-11	RES-CHIP	100K 5% 1/10W
Q704	8-729-043-27	TRANSISTOR	PDTC114EK-115	R111	1-216-043-00	RES-CHIP	560 5% 1/10W
Q720	8-729-043-33	TRANSISTOR	PDTA124EK-115	R115	1-216-295-11	SHORT	0
Q721	8-729-216-22	TRANSISTOR	2SA1162-G	R116	1-216-085-00	RES-CHIP	33K 5% 1/10W
Q722	8-729-205-95	TRANSISTOR	2SA1428-Y	R117	1-216-109-00	METAL CHIP	330K 5% 1/10W
Q724	8-729-205-95	TRANSISTOR	2SA1428-Y	R120	1-216-081-00	METAL CHIP	22K 5% 1/10W
Q725	8-729-043-27	TRANSISTOR	PDTC114EK-115	R121	1-216-081-00	METAL CHIP	22K 5% 1/10W
Q726	8-729-043-27	TRANSISTOR	PDTC114EK-115	R122	1-216-085-00	RES-CHIP	33K 5% 1/10W
Q730	8-729-921-48	TRANSISTOR	2SD1760F5-Q	R123	1-216-085-00	RES-CHIP	33K 5% 1/10W
Q731	8-729-216-22	TRANSISTOR	2SA1162-G	R130	1-216-065-00	RES-CHIP	4.7K 5% 1/10W
Q732	8-729-043-27	TRANSISTOR	PDTC114EK-115	R131	1-216-073-00	RES-CHIP	10K 5% 1/10W
Q733	8-729-904-60	TRANSISTOR	DTB113ZK	R208	1-216-295-00	SHORT CHIP	0
Q734	8-729-422-33	TRANSISTOR	2PD601A-Q-TX	R350	1-216-089-11	RES-CHIP	47K 5% 1/10W
Q740	8-729-205-95	TRANSISTOR	2SA1428-Y	R351	1-216-089-11	RES-CHIP	47K 5% 1/10W
Q741	8-729-422-33	TRANSISTOR	2PD601A-Q-TX	R352	1-216-073-00	RES-CHIP	10K 5% 1/10W
Q750	8-729-216-22	TRANSISTOR	2SA1162-G	R353	1-216-073-00	RES-CHIP	10K 5% 1/10W
< RESISTOR/DIODE/CAPACITOR >				R354	1-216-023-00	METAL CHIP	82 5% 1/10W
R1	1-216-295-00	SHORT CHIP	0	R355	1-216-023-00	METAL CHIP	82 5% 1/10W
R2	1-216-295-00	SHORT CHIP	0	R356	1-216-077-00	RES-CHIP	15K 5% 1/10W
R3	1-216-049-11	RES-CHIP	1K 5% 1/10W	R357	1-216-077-00	RES-CHIP	15K 5% 1/10W
R4	1-216-295-00	SHORT CHIP	0	R358	1-216-115-00	METAL CHIP	560K 5% 1/10W
R7	1-216-025-11	RES-CHIP	100 5% 1/10W	R359	1-216-115-00	METAL CHIP	560K 5% 1/10W
R8	1-216-097-11	RES-CHIP	100K 5% 1/10W	R360	1-249-393-11	CARBON	10 5% 1/4W
R9	1-216-065-00	RES-CHIP	4.7K 5% 1/10W	R361	1-216-049-11	RES-CHIP	1K 5% 1/10W
R10	1-216-295-00	SHORT CHIP	0	R362	1-216-049-11	RES-CHIP	1K 5% 1/10W
R11	1-216-025-11	RES-CHIP	100 5% 1/10W	R363	1-216-033-00	METAL CHIP	220 5% 1/10W
R12	1-216-025-11	RES-CHIP	100 5% 1/10W	R364	1-249-409-11	CARBON	220 5% 1/4W
R21	1-247-807-31	CARBON	100 5% 1/4W	R365	1-216-033-00	METAL CHIP	220 5% 1/10W
R22	1-216-295-00	SHORT CHIP	0	R366	1-216-033-00	METAL CHIP	220 5% 1/10W
R23	1-216-097-11	RES-CHIP	100K 5% 1/10W	R401	1-216-001-00	METAL CHIP	10 5% 1/10W
R26	1-249-441-11	CARBON	100K 5% 1/4W	R410	1-216-075-00	METAL CHIP	12K 5% 1/10W
R27	1-216-089-11	RES-CHIP	47K 5% 1/10W	R411	1-216-069-00	METAL CHIP	6.8K 5% 1/10W
R32	1-247-807-31	CARBON	100 5% 1/4W	R420	1-216-075-00	METAL CHIP	12K 5% 1/10W
R33	1-247-807-31	CARBON	100 5% 1/4W	R421	1-216-069-00	METAL CHIP	6.8K 5% 1/10W
R34	1-247-807-31	CARBON	100 5% 1/4W	R430	1-216-073-00	RES-CHIP	10K 5% 1/10W
R41	1-216-025-11	RES-CHIP	100 5% 1/10W	R431	1-216-073-00	RES-CHIP	10K 5% 1/10W
R61	1-216-097-11	RES-CHIP	100K 5% 1/10W	R432	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
R62	1-216-295-00	SHORT CHIP	0 (CA330)	R433	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
R63	1-216-097-11	RES-CHIP	100K 5% 1/10W (CA340)	R450	1-216-033-00	METAL CHIP	220 5% 1/10W
R64	1-216-295-00	SHORT CHIP	0 (CA330)	R451	1-216-033-00	METAL CHIP	220 5% 1/10W
R67	1-216-097-11	RES-CHIP	100K 5% 1/10W (CA340)	R452	1-216-033-00	METAL CHIP	220 5% 1/10W
R68	1-216-295-00	SHORT CHIP	0	R453	1-216-033-00	METAL CHIP	220 5% 1/10W
R69	1-216-097-11	RES-CHIP	100K 5% 1/10W	R454	1-216-073-00	RES-CHIP	10K 5% 1/10W
R70	1-216-295-00	SHORT CHIP	0	R455	1-216-073-00	RES-CHIP	10K 5% 1/10W
R71	1-216-097-11	RES-CHIP	100K 5% 1/10W	R456	1-216-073-00	RES-CHIP	10K 5% 1/10W
R72	1-216-097-11	RES-CHIP	100K 5% 1/10W	R457	1-216-073-00	RES-CHIP	10K 5% 1/10W
R73	1-216-097-11	RES-CHIP	100K 5% 1/10W	R458	1-216-089-11	RES-CHIP	47K 5% 1/10W
R76	1-216-097-11	RES-CHIP	100K 5% 1/10W	R459	1-216-089-11	RES-CHIP	47K 5% 1/10W
R81	1-216-097-11	RES-CHIP	100K 5% 1/10W	R460	1-216-089-11	RES-CHIP	47K 5% 1/10W
R102	1-249-417-11	CARBON	1K 5% 1/4W	R461	1-216-089-11	RES-CHIP	47K 5% 1/10W
				R500	1-216-049-11	RES-CHIP	1K 5% 1/10W
				R501	1-249-429-11	CARBON	10K 5% 1/4W

Ref. No.	Part No.	Description	Remark
		ACCESSORIES *****	
	3-236-832-11	MANUAL, INSTRUCTION (ENGLISH, FRENCH) (CA330)	
	3-236-832-21	MANUAL, INSTRUCTION (ENGLISH,TRADITIONAL CHINESE) (CA340)	
	3-236-833-11	MANUAL, INSTRUCTION, INSTALL (ENGLISH, FRENCH) (CA330)	
	3-236-833-21	MANUAL, INSTRUCTION, INSTALL (ENGLISH, TRADITIONAL CHINESE) (CA340)	
	X-3378-490-2	CASE (PANEL) ASSY	

PARTS FOR INSTALLATION AND CONNECTION

501	X-3376-298-1	FRAME ASSY, FITTING
502	3-041-599-01	COLLAR (CA340)
502	3-041-599-11	COLLAR (CA330)
504	1-776-207-31	CORD (WITH CONNECTOR) (POWER) (CA330)
504	1-783-736-61	CORD (WITH CONNECTOR) (POWER) (CA340)
505	X-3381-443-1	SCREW ASSY (4.KEY), FITTING (CA330)
507	X-3381-119-1	SCREW ASSY (WITH KEY), FITTING (CA340)

