


# PHILCO RADIO MODEL 50-620


## SECTION 4 - RF AND CONVERTER CIRCUITS

## SECTION 3 - IF, DETECTOR AND AVC CIRCUITS

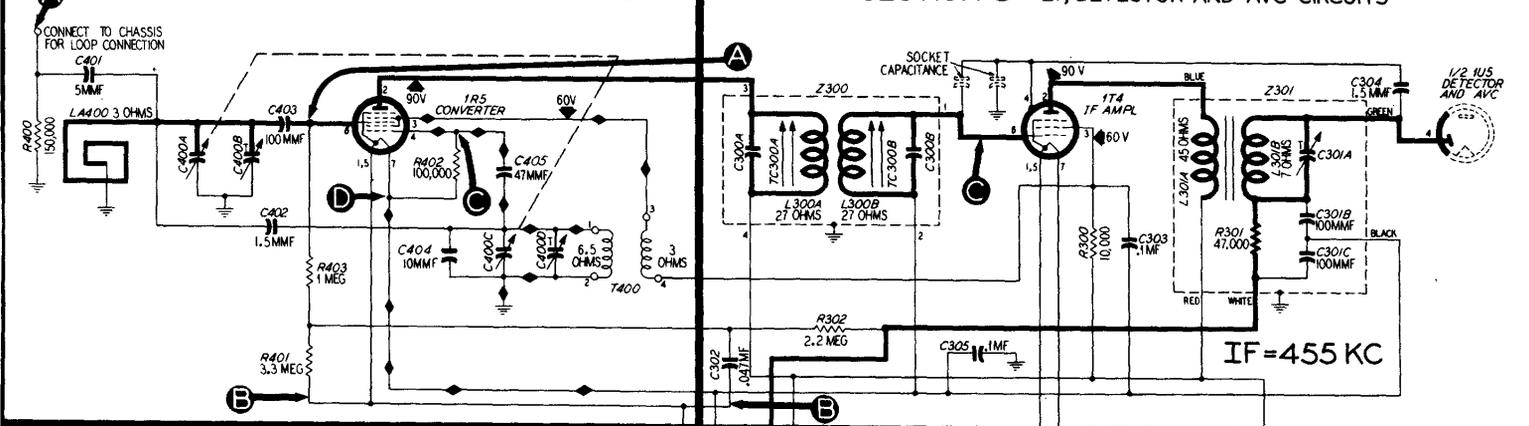

## SECTION 1 - POWER SUPPLY

## SECTION 2 - AUDIO CIRCUITS

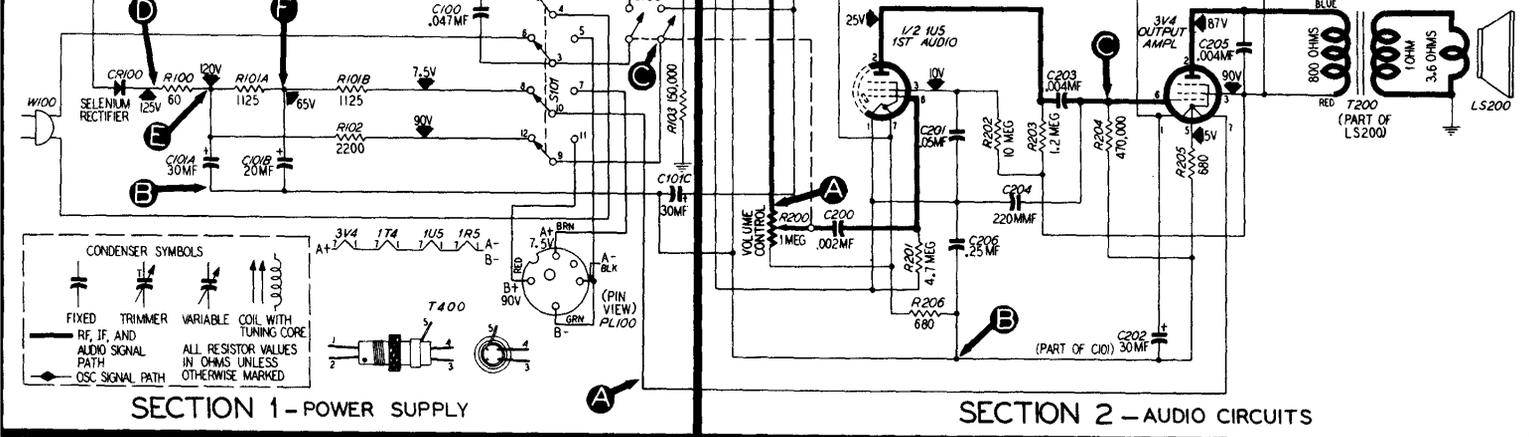

**OSCILLATOR TEST** Connect the positive lead of a high-resistance voltmeter to test point D; connect the prod end of the negative lead through a 100,000-ohm isolating resistor to the oscillator grid (pin 1 of the 1R5), test point C. Use a suitable meter range, such as 0-10 volts. Proper operation of the oscillator is indicated by negative voltage within the range given in the chart (measured with a 20,000-ohms-per-volt meter) throughout the tuning range.

### Section 1 - Power Supply

Make the tests for this section with a d-c voltmeter. Connect the negative lead to B-, test point B; connect the positive lead to the test points indicated in the chart. The voltage readings given were taken with a 20,000-ohms-per-volt meter at a line voltage of 117 volts, a.c.

Set the volume control to minimum.

The battery pack should be replaced when the "A" voltage drops below 5 volts, or the "B" voltage drops below 60 volts.

If the "NORMAL INDICATION" is obtained in step 1, proceed with the tests for Section 2 (audio circuits); if not, isolate and correct the trouble in this section.

STEP	TEST POINT	NORMAL INDICATION	ABNORMAL INDICATION	POSSIBLE CAUSE OF ABNORMAL INDICATION
1(a)	A	7.5v		Trouble in this section. Isolate by the following tests.
1(b)	C	80v		
2	D	125v	Low voltage No voltage	
3	E	120v	Low voltage No voltage	
4	F	65v	Low voltage No voltage	
5	A	7.5v	Low voltage High voltage No voltage	
6	C	00v	Low voltage High voltage No voltage	Changed resistance: R102. Leaky: C101C. Open: R205, T200, R100, R102, S101. Shorted: C101C.

Listening Test: Abnormal hum may be caused by open C101B, C101C, or C202.

\*This part, located in another section, may cause abnormal indication in this section.

### TROUBLE SHOOTING

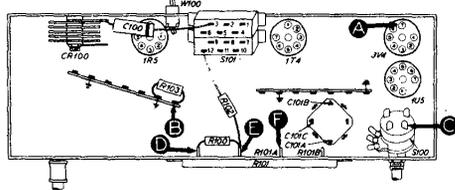


Figure 1. Bottom View, Showing Section 1 Test Points

### Section 3 - IF, Detector, and A-V-C Circuits

For the tests in this section, use an r-f signal generator, with modulated output, set at 455 kc. Connect the generator ground lead to B-, test point B; connect the output lead through a .1-mf. condenser to the test points indicated in the chart.

Set the radio volume control to maximum.

If the "NORMAL INDICATION" is obtained in step 1, proceed with the tests for Section 4 (r-f and converter circuits); if not, isolate and correct the trouble in this section.

To provide a complete i-f amplifier check, test point A for this section is placed at the grid of the mixer in Section 4; therefore, the effectiveness of step 1 as a master check is dependent upon the condition of certain parts in the mixer circuit. These parts are listed below under "POSSIBLE CAUSE OF ABNORMAL INDICATION."

STEP	TEST POINT	NORMAL INDICATION	POSSIBLE CAUSE OF ABNORMAL INDICATION
1	A	Load, clear speaker output with weak generator input.	Trouble in this section. Isolate by the following tests.
2	C	Load, clear output with moderate input.	
3	A	Same as step 1.	

Detective: 1T4, 1U5 (diode section). Misaligned: Z301. Open: R300, C303, L301A, R301, L301B, C301A. Shorted: C300B, C303, L301A, L301B, C301A, C301B.

Detective: 1R5. Misaligned: Z300. Open: C300A, L100A, L100B, C300B, T400. Shorted: C400A, C400B, C300A, L300A, L300B, C300B.

\*This part, located in another section, may cause abnormal indication in this section.

### TROUBLE SHOOTING

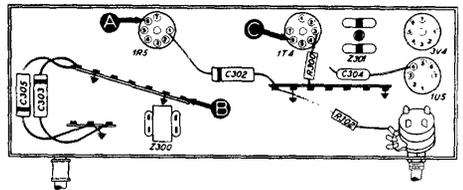


Figure 3. Bottom View, Showing Section 3 Test Points

### Section 2 - Audio Circuits

For the tests in this section, use an audio-frequency signal generator. Connect the generator ground lead to B-, test point B; connect the output lead through a .1-mf. condenser to the test points indicated in the chart.

Set the radio volume control to maximum.

If the "NORMAL INDICATION" is obtained in step 1, proceed with the tests for Section 3 (i-f, detector, and a-v-c circuits); if not, isolate and correct the trouble in this section.

STEP	TEST POINT	NORMAL INDICATION	POSSIBLE CAUSE OF ABNORMAL INDICATION
1	A	Load, clear speaker output with moderate generator input.	Trouble in this section. Isolate by the following tests.
2	C	Clear speaker output with strong generator input.	
3	A	Same as step 1.	

Listening Test: Distortion may be caused by leaky or shorted C203, or by changed resistance of R202. Distortion or strong signals may be caused by leaky or shorted C200.

\*This part, located in another section, may cause abnormal indication in this section.

### TROUBLE SHOOTING

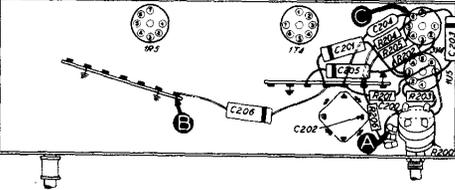


Figure 2. Bottom View, Showing Section 2 Test Points

### Section 4 - R-F And Converter Circuits

For the tests in this section, with the exception of the oscillator test, use an r-f signal generator with modulated output. Connect the generator ground lead to B-, test point B; connect the output lead through a .1-mf. condenser to the test points indicated in the chart.

Set the radio volume control to maximum. Set the tuning control and signal-generator frequency as indicated in the chart.

If the "NORMAL INDICATION" is obtained in step 1, further tests should be unnecessary; if not, isolate and correct the trouble in this section. If the trouble is not revealed by the tests for this section, check the alignment.

STEP	TEST POINT	SIGNAL GEN. FREQUENCY	RADIO TUNING	NORMAL INDICATION	POSSIBLE CAUSE OF ABNORMAL INDICATION
1	A	1900 kc.	Tune to signal.	Load, clear speaker output with weak generator input.	Trouble in this section. Isolate by the following tests.
2	C to D (Dec. test: see note below.)		Rotate through range.	Negative 5 to 10 volts.	
3	A	1000 kc.	Tune to signal.	Same as step 1.	

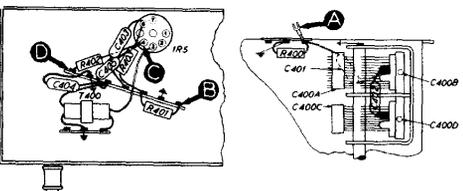


Figure 4. Bottom View, Showing Section 4 Test Points

Philco Model 50-620 is a portable four-tube super-heterodyne providing reception on the standard broadcast band. A high-impedance loop within the cabinet normally provides adequate signal pickup.

**OPERATING VOLTAGES** Battery: "B", 90 volts; "A", 7.5 volts. A.c./d.c. 105-120 volts.

**POWER CONSUMPTION** Battery: "B", 1.5 ma. at 90 volts; "A", 50 ma. at 7.5 volts. A.c./d.c.: 25 watts.

**AERIAL** Built-in high-impedance loop; terminals also provided for external aerial.