


# RCA Victor


## MODELS 98T and 98T2

### Chassis No. RC-386A and RC-386A

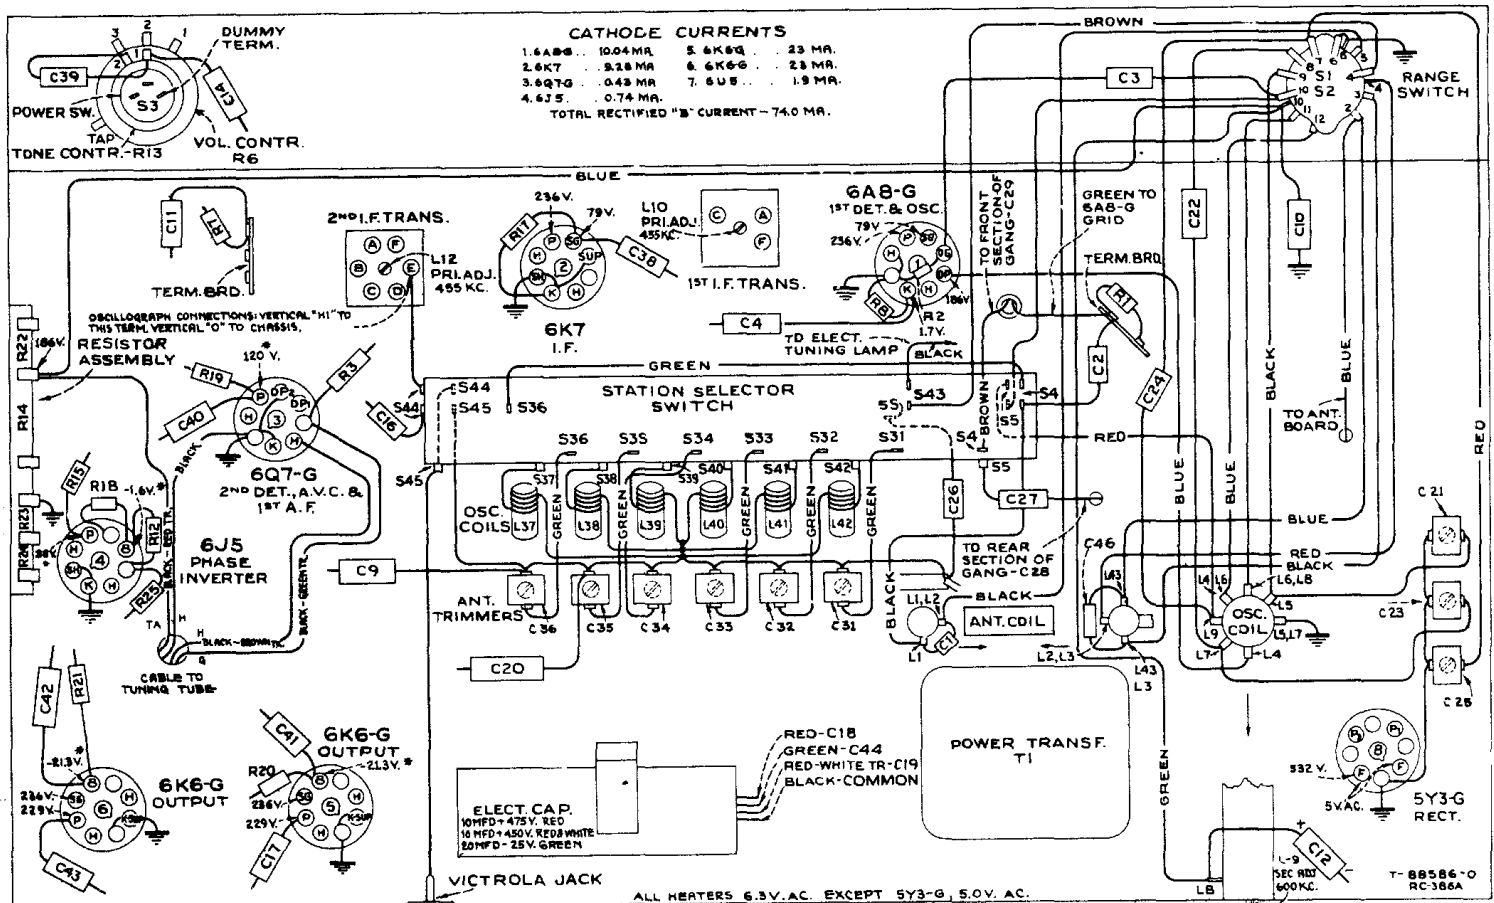


ALL HEATERS 6.3V. AC. EXCEPT 5Y3-G, 5.0V. AC.

BOTTOM VIEW - REAR OF CHASSIS

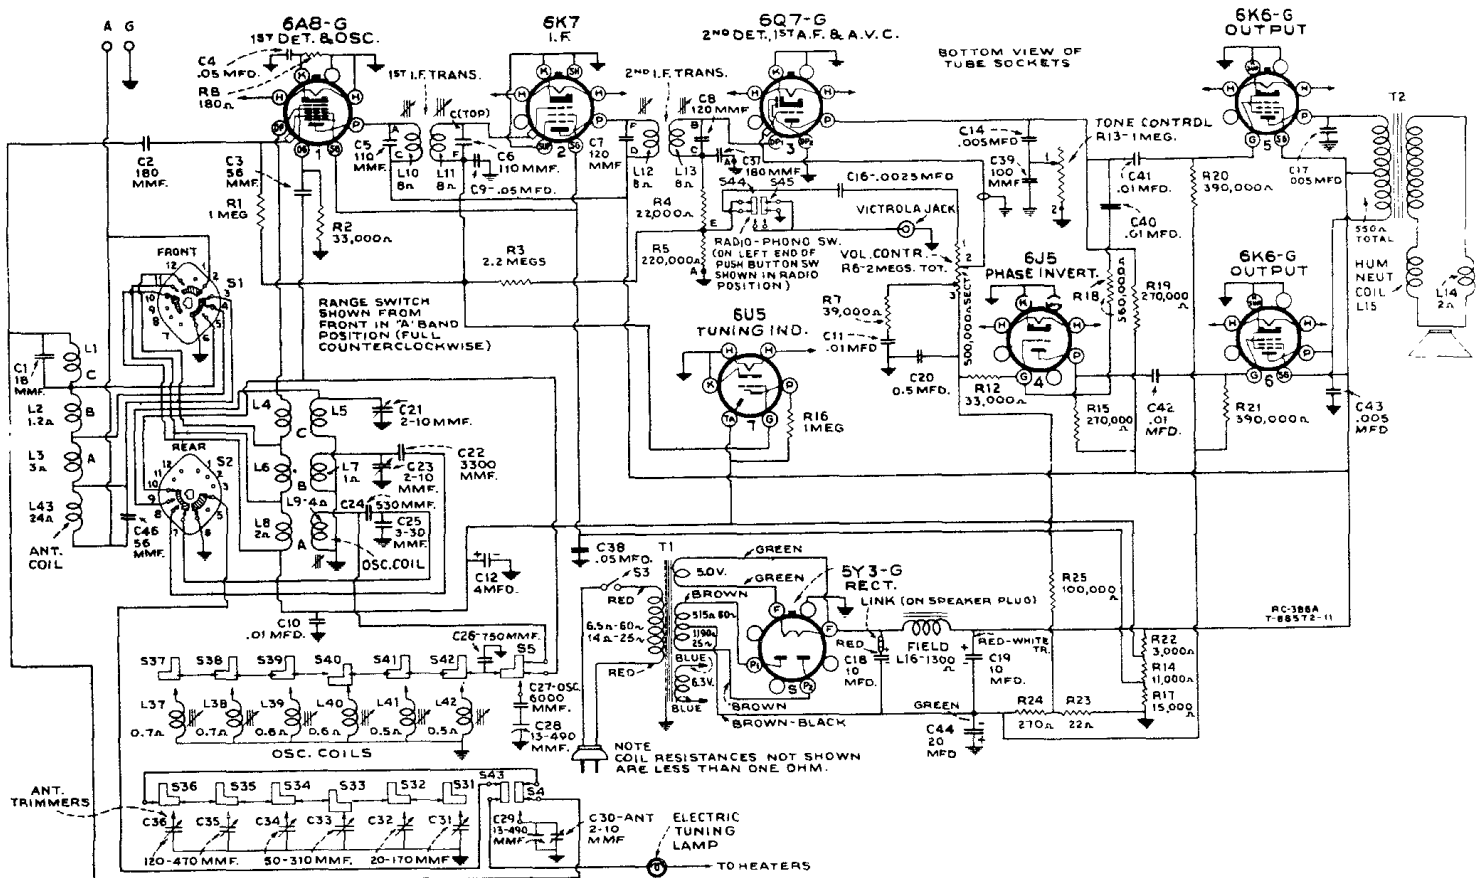

# RCA Victor

## MODEL 98T2

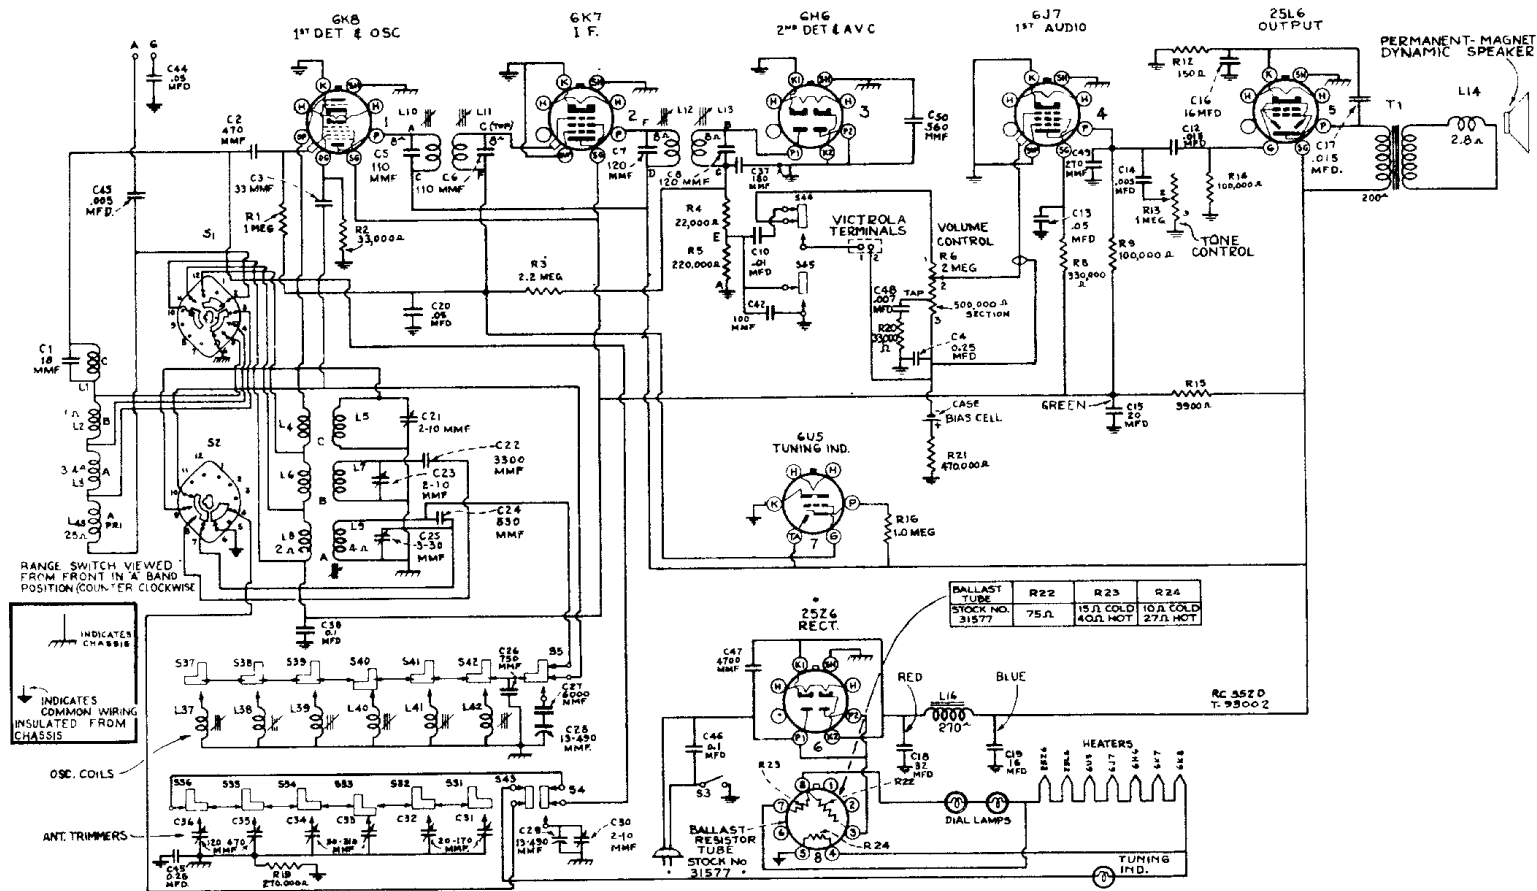

### Adjustments for Electric Tuning


These models have eight push buttons. The left-hand button is a Victrola switch. The right-hand button connects the gang condenser for manual tuning. The other six buttons are for electric tuning of six different stations in the standard-broadcast range. The station buttons connect to separate magnetite-core oscillator coils and separate antenna trimmers which must be adjusted for the desired stations. Use an insulated screwdriver or alignment tool such as RCA Stock No. 31031. Allow at least five minutes warm-up period before making adjustments.

The procedure is as follows:

1. Make a list of the desired six stations, arranged in order from low to high frequencies.
2. Push in the dial-tuning button, and manually tune in the first station on the list.
3. Push in station button No. 1 (second from left) and adjust No. 1 oscillator core (L37) to receive this station. Screw the core all the way in, to lowest frequency, and then unscrew slowly until station is received.
4. Adjust No. 1 antenna trimmer (C36) for maximum output on this station.

Clockwise adjustment of cores and trimmers tunes the circuits to lower frequencies.

5. Adjust for each of the remaining five stations in the same manner.
6. Make a final careful adjustment of the oscillator cores and antenna trimmers.

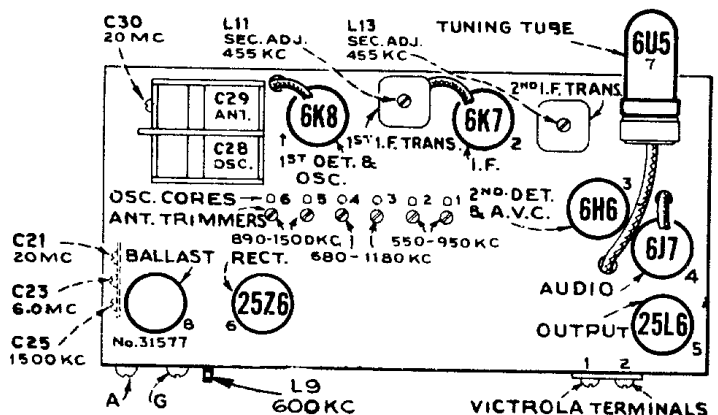

\*Use minimum capacity peak if two peaks can be obtained, and rock gang condenser slightly while adjusting C23 and C21.  
Note.—Oscillator tracks 455 kc above signal on all bands.

**Dial-Indicator Adjustment.**—After fastening the chassis in the cabinet, move the dial indicator on the drive cable to the left-hand end mark on dial, with gang condenser fully meshed.

| Steps | Connect the high side of test-osc. to—      | Tune test-osc. to— | Turn radio-dial to—                      | Adjust the following for max. peak output |
|-------|---|--------------------|--|---|
| 1     | 6K7 I-F grid cap, in series with .01 mfd.   | 455 kc             | "A" band, Quiet Point between 550-750 kc | L12 and L13 (2nd I-F Transformer)         |
| 2     | 6K8. det. grid cap, in series with .01 mfd. | 455 kc             |  | L10 and L11 (1st I-F Transformer)         |
| 3     | Antenna Terminal, in series with 200 ohms.  | 600 kc             | 600 kc (150.5°) "A" band                 | L9  |
| 4     |   | 1,500 kc           | 1,500 kc (28°) "A" band                  | C25 (osc.)<br>C30 (ant.)                  |
| 5     | Repeat steps 3 and 4.                       |                    |  |   |
| 6     | Antenna Terminal, in series with 400 ohms.  | 6 mc               | 6 mc (26.5°) "B" band                    | C23 (osc.)*                               |
| 7     |   | 20 mc              | 20 mc (22°) "C" band                     | C21 (osc.)*                               |
| 8     | Follow "Adjustments for Electric Tuning."   |                    |  |   |