


**ZENITH**

**MODEL 6G001**  
**CHASSIS No. 6C40**

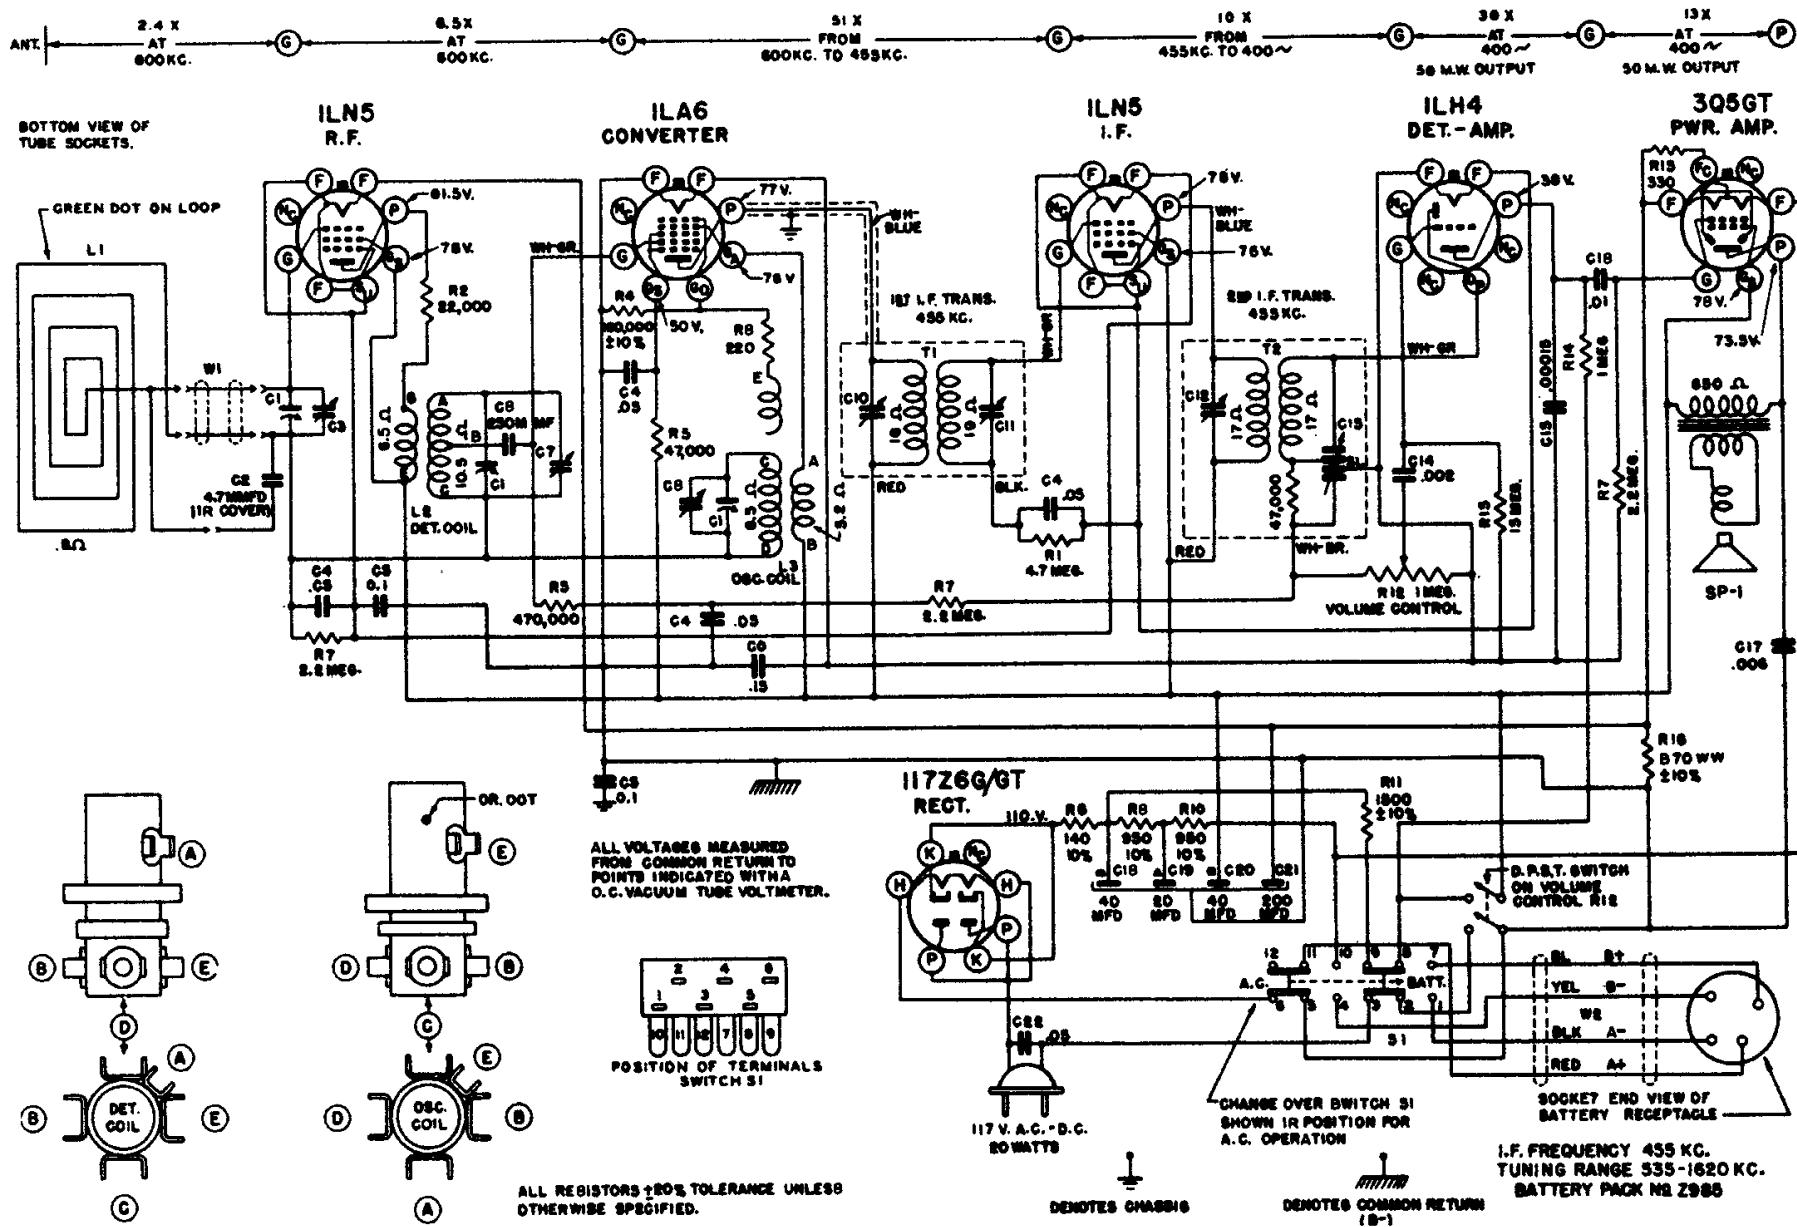

**MODEL 6G001**

Zenith Radio Corp.


**CHASSIS No. 6C40**

The 6C40 chassis is an AC, DC or battery operated superheterodyne circuit with a stage of RF amplification. The chassis is isolated from the DC circuit, and all measurements must be made from a common negative point. The most convenient place to reach this negative point is the terminal strip to which C5 is connected. The DC resistance from chassis to any circuit must be almost infinite. If any circuit becomes grounded a hum will appear. Microphonic tubes will cause audio howl. Check ILA6.

The wavemagnet is connected to the chassis through the hinges in the cabinet, snaps and flexible leads. If the RF becomes weak or dead, check resistance of wavemagnet at condenser gang. The DC resistance across the two leads should be approximately 1 ohm. If the circuit is open, remove the two screws that hold the handle and top panel. When the top is removed, the wavemagnet connecting leads will be visible for inspection. Also loosen the snap-on socket and check for shorted or broken leads.

**IF Alignment:** Remove the chassis from the cabinet and arrange the units so that the wavemagnet can be plugged in. All the connections and adjustments can be made from the top of the chassis. Connect a signal generator, through a .1 mfd. dummy antenna, to the lug on top of the center section of the gang condenser (converter grid) and condenser gang frame. Connect an output meter across the voice coil of the speaker (two lugs provided). Set the signal generator to 455Kc. and adjust C10, C11, C12 and C13 for maximum indication on the output meter. Always keep the signal output from the generator just high enough to get an indication, otherwise excessive loading may result. Remove the signal generator leads from the gang.

**RF Alignment:** Connect a two turn loop across the leads of the signal generator, loosely couple this loop to the wavemagnet. Set the signal generator and the dial pointer of the receiver to 1600 Kc. and adjust C8 to resonance. Set the signal generator and dial pointer to 1400 and adjust C7 (detector) and C3 (RF) to resonance. These trimmers are on the side of gang condenser. Check operation and re-install set in cabinet. Tune in a weak station near 1400 Kc. or use background noise and readjust C3 through the hole in the side of the cabinet for maximum sensitivity.

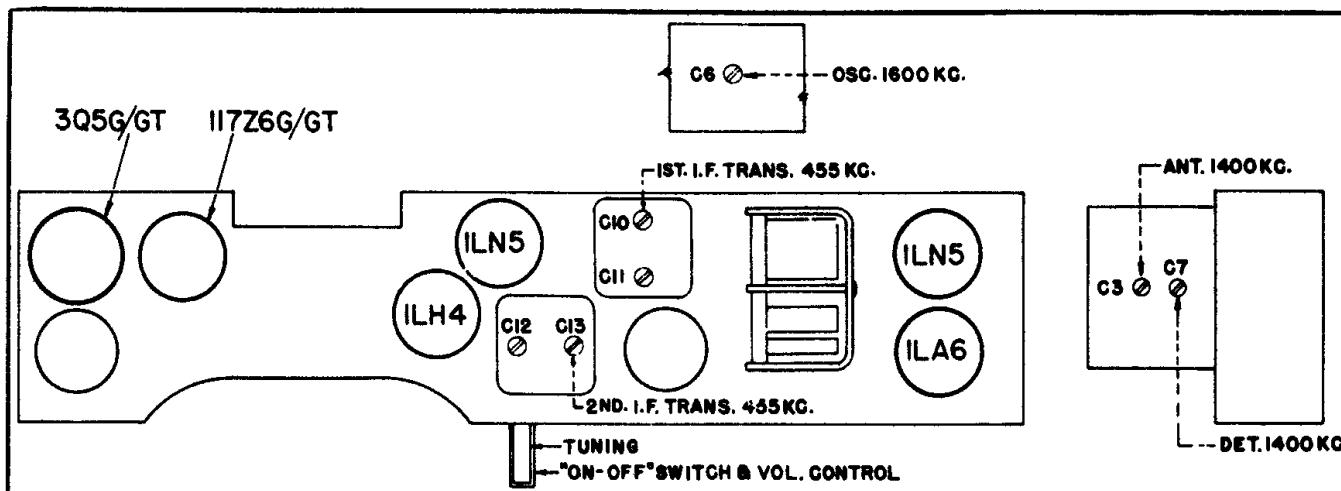

### TUBE AND TRIMMER LOCATION

### ALIGNMENT PROCEDURE

Oper- ation	Connect Osc. To	Dummy Antenna	Input Signal Frequency	Band	Set Dial To	Trimmers	Purpose
1	Converter Grid	.1 MFD	455KC	BC	600KC	C-10-11-12 13	IF alignment
2	Two turns loosely coupled to Wave Magnet		1600KC	BC	1600KC	C8	Set oscillator to scale
3	Two turns loosely coupled to Wave Magnet		1400KC	BC	1400KC	C7	Align Det.
4	Two turns loosely coupled to Wave Magnet		1400KC	BC	1400KC	C3	Align Wave magnet