


|   |                              |     |       |       |     |        |            |    |    |          |
|---|------------------------------|-----|-------|-------|-----|--------|------------|----|----|----------|
| C | 1,15,CT8,19,21,8,3,4,CV2,CT4 | 12  | CT1,5 | 6     | CT2 | 7,21,8 | 11,9,10,25 | 23 | 24 | 13,26,27 |
| R | 1                            | 2,3 | 4     | 9,5,6 | 7   | 10,11  | 13         |    |    |          |


## BUSH - VTR133

| Transistor | Emitter (V) | Base (V) | Collector (V) |
|------------|-------------|----------|---------------|
| TR1        | AF114       | —        | —             |
| TR2        | AF115       | —        | —             |
| TR3        | AF115       | 5.2      | 4.8           |
| TR4        | AF116       | 6.1      | 5.8           |
| TR5        | AF116       | 5.9      | 5.4           |
| TR6        | OC71        | 6.5      | 5.9           |
| TR7        | OC81D       | 6.0      | 5.9           |
| TR8        | OC81        | 8.9      | 8.8           |
| TR9        | OC81        | 8.9      | 8.8           |

|   |                |          |
|---|----------------|----------|
| 22,16,CV1,CT7,30,31,38,34,35,17,CT5,14,36,CT3,28,29 | 32,33,39,37,40 | 44,45,42 |
| 15,16   | 8              | 17       |
|   | 18,19          | 20       |
|   |                | 21       |

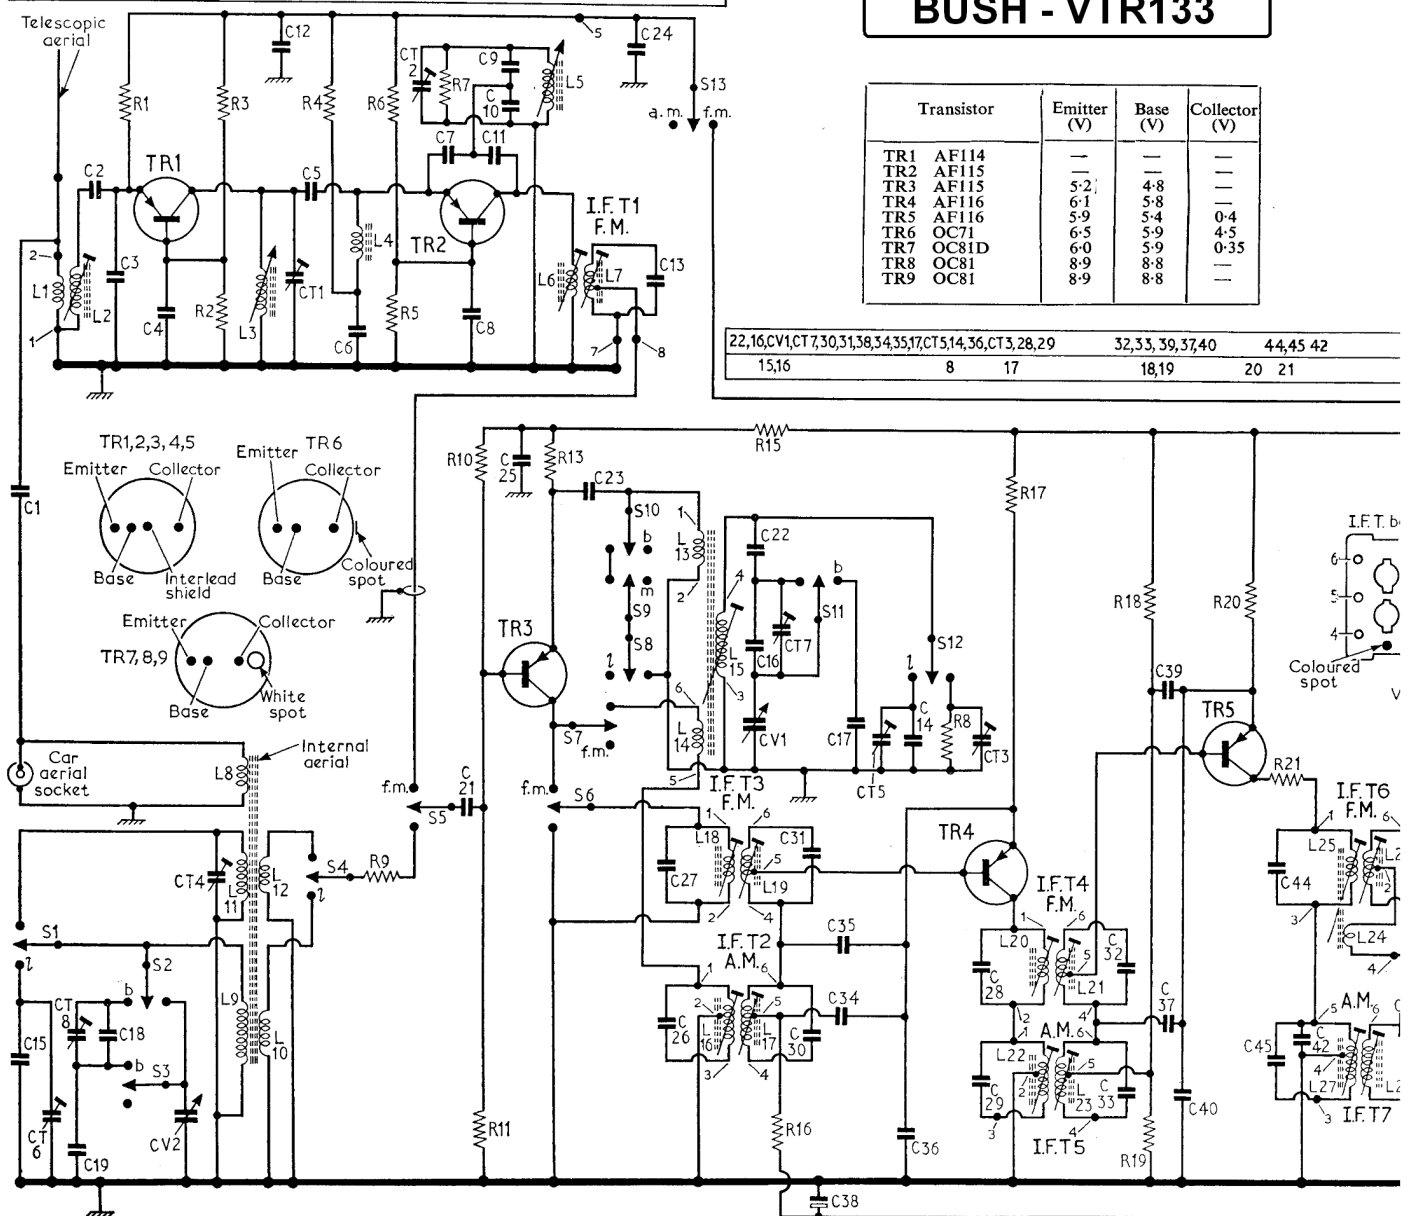


|          |                           |             |    |       |    |    |    |       |    |    |       |    |   |
|----------|---------------------------|-------------|----|-------|----|----|----|-------|----|----|-------|----|---|
| 44,45,42 | 48,46                     | 54,41,47,52 | 53 | 50,51 | 43 | 49 | 55 | 57,56 | 20 | 58 | 59,61 | 60 | C |
| 21       | 22,RV3,25,26,RV4,27,24,14 |             |    |       |    |    |    |       |    |    |       |    | R |
|          |                           |             |    |       |    |    |    |       |    |    |       |    |   |

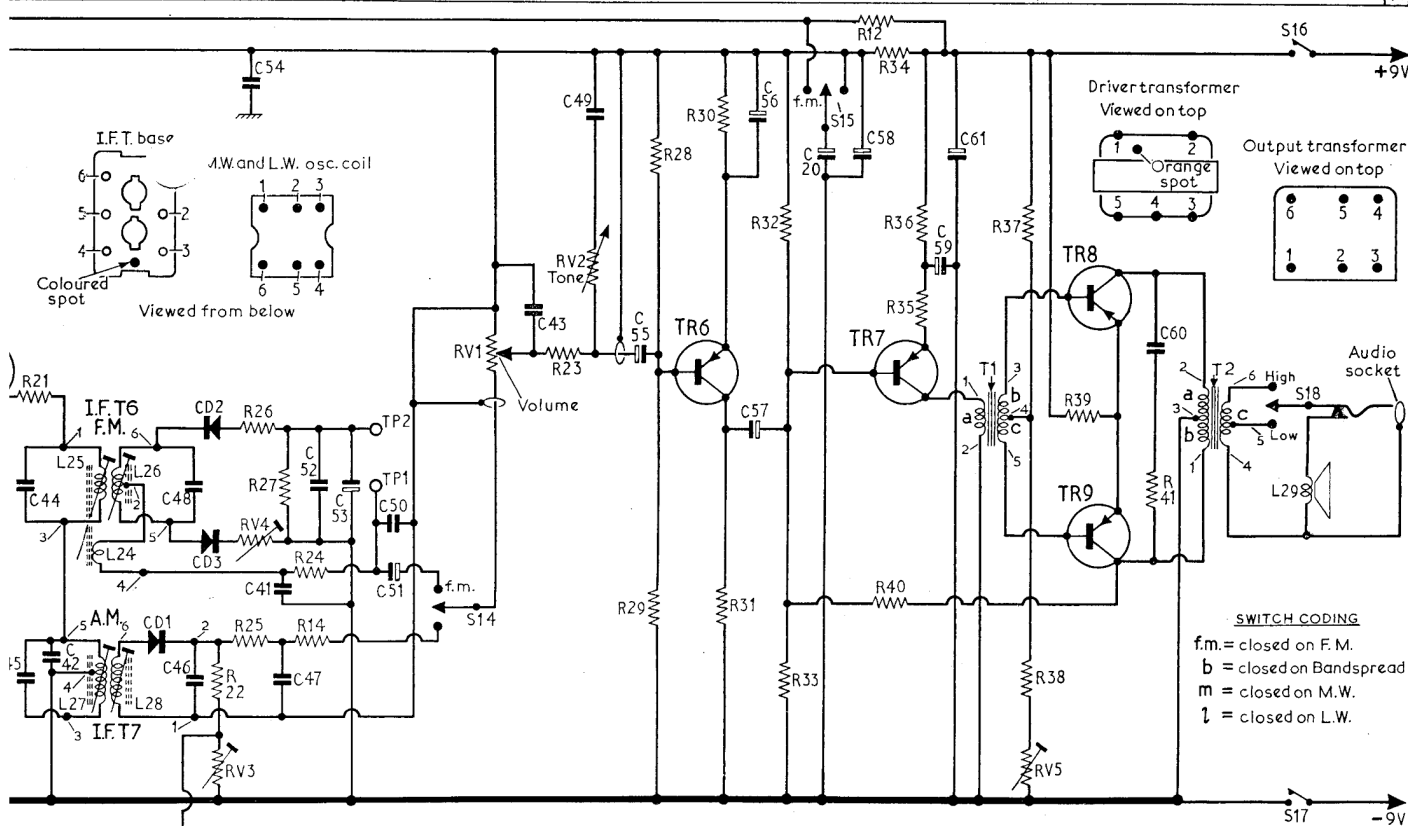

### SWITCH CODING

f.m. = closed on F.M.  
b = closed on Bandsread  
m = closed on M.W.  
l = closed on L.W.

# BUSH - VTR133

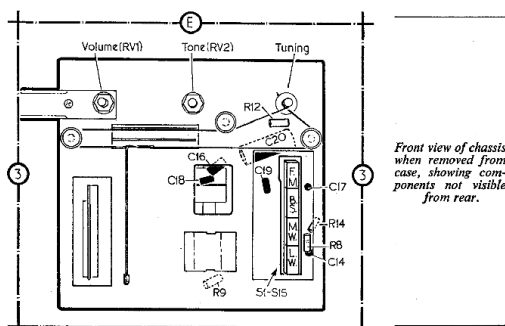

Front view of chassis when removed from case, showing components not visible from rear.

## Resistors

|     |       |    |     |       |    |
|-----|-------|----|-----|-------|----|
| R1  | 560Ω  | G4 | R19 | 22kΩ  | A2 |
| R2  | 27kΩ  | G4 | R20 | 680Ω  | A2 |
| R3  | 4.7kΩ | G4 | R21 | 220Ω  | A2 |
| R4  | 560Ω  | G4 | R22 | 15kΩ  | A2 |
| R5  | 6.8kΩ | G4 | R23 | 1.8kΩ | B1 |
| R6  | 1.5kΩ | G4 | R24 | 1.8kΩ | A2 |
| R7  | 15kΩ  | G4 | R25 | 330Ω  | A2 |
| R8  | 180kΩ | E3 | R26 | 1kΩ   | A2 |
| R9  | 150Ω  | E3 | R27 | 12kΩ  | A2 |
| R10 | 6.8kΩ | A1 | R28 | 15kΩ  | C2 |
| R11 | 22kΩ  | A1 | R29 | 82kΩ  | D2 |
| R12 | 120Ω  | E3 | R30 | 1kΩ   | D1 |
| R13 | 1.2kΩ | A1 | R31 | 5.6kΩ | C2 |
| R14 | 120Ω  | E3 | R32 | 8.2kΩ | D2 |
| R15 | 470Ω  | A1 | R33 | 39kΩ  | D2 |
| R16 | 1kΩ   | A1 | R34 | 330Ω  | D2 |
| R17 | 1kΩ   | A2 | R35 | 68Ω   | D2 |
| R18 | 6.8kΩ | A2 | R36 | 820Ω  | D2 |
|     |       |    | R37 | 150Ω  | D2 |

|     |            |    |
|-----|------------|----|
| R38 | 3.9kΩ      | D2 |
| R39 | 3.3Ω       | D2 |
| R40 | 150kΩ      | D2 |
| R41 | 150Ω       | D1 |
| RV1 | 5kΩ        | B1 |
| RV2 | 10kΩ       | B1 |
| RV3 | 50kΩ-160kΩ | A2 |
| RV4 | 500Ω-1.8kΩ | A2 |
| RV5 | 1.5kΩ-5kΩ  | D2 |

## Capacitors

|      |         |    |
|------|---------|----|
| C1   | 10pF    | B2 |
| C2   | 47pF    | G4 |
| C3   | 22pF    | G4 |
| C4   | 1,000pF | G4 |
| C5   | 5.6pF   | G4 |
| C6   | 470pF   | G4 |
| C7   | 4.7pF   | G4 |
| C8   | 1,000pF | G4 |
| C9   | 47pF    | G4 |
| C10  | 47pF    | G4 |
| C11  | 220pF   | G4 |
| C12  | 1,000pF | G4 |
| C13  | 70pF    | G4 |
| C14† | 470pF   | E3 |
| C15  | 150pF   | A1 |
| C16  | 33pF    | E3 |
| C17  | 33pF    | E3 |
| C18  | 12pF    | E3 |
| C19  | 33pF    | E3 |
| C20  | 350pF   | E3 |
| C21  | 0.01μF  | A1 |
| C22  | 56pF    | A1 |
| C23  | 0.02μF  | A1 |
| C24  | 0.02μF  | G4 |
| C25  | 0.047μF | A1 |
| C26  | 560pF   | A1 |
| C27  | 180pF   | B1 |
| C28  | 180pF   | B2 |
| C29  | 560pF   | A2 |
| C30  | 560pF   | A1 |
| C31  | 180pF   | A1 |
| C32  | 180pF   | A1 |
| C33  | 560pF   | A2 |
| C34  | 0.047μF | A1 |
| C35  | 3,000pF | A1 |
| C36  | 0.047μF | A2 |

|     |         |    |
|-----|---------|----|
| C37 | 3,000pF | A2 |
| C38 | 8μF     | A2 |
| C39 | 3,000pF | A2 |
| C40 | 3,000pF | A2 |
| C41 | 300pF   | A2 |
| C42 | 1,000pF | A2 |
| C43 | 0.047μF | B1 |
| C44 | 300pF   | B2 |
| C45 | 250pF   | A2 |
| C46 | 0.01μF  | A2 |
| C47 | 0.01μF  | A2 |
| C48 | 50pF    | A2 |
| C49 | 0.22μF  | B1 |
| C50 | 0.02μF  | A2 |
| C51 | 4μF     | A2 |
| C52 | 1,000pF | A2 |
| C53 | 8μF     | A2 |
| C54 | 0.1μF   | A2 |
| C55 | 8μF     | C2 |
| C56 | 120μF   | D1 |
| C57 | 8μF     | C2 |
| C58 | 350μF   | D1 |
| C59 | 100μF   | D2 |
| C60 | 0.1μF   | D2 |
| C61 | 100μF   | D1 |
| CT1 | 25pF    | G4 |
| CT2 | 10pF    | G4 |
| CT3 | 30pF    | A1 |
| CT4 | 30pF    | A1 |
| CT5 | 30pF    | A1 |
| CT6 | 30pF    | A1 |
| CT7 | 40pF    | B2 |
| CT8 | 40pF    | B2 |
| CV1 | 523pF   | B2 |
| CV2 | 523pF   | B2 |

## Coils\*

|     |   |    |
|-----|---|----|
| L1  | — | G4 |
| L2  | — | G4 |
| L3  | — | F4 |
| L4  | — | G4 |
| L5  | — | F4 |
| L6  | — | F4 |
| L7  | — | G4 |
| L8  | — | D1 |
| L9  | — | D1 |
| L10 | — | D1 |

|     |      |    |
|-----|------|----|
| L11 | —    | B1 |
| L12 | —    | B1 |
| L13 | —    | A1 |
| L14 | —    | A1 |
| L15 | 2.5  | A1 |
| L16 | 7.0  | A1 |
| L17 | 7.5  | A1 |
| L18 | —    | A1 |
| L19 | —    | A1 |
| L20 | —    | A2 |
| L21 | —    | A1 |
| L22 | 7.5  | A2 |
| L23 | 7.5  | A2 |
| L24 | —    | A2 |
| L25 | —    | B2 |
| L26 | —    | A2 |
| L27 | 5.25 | A2 |
| L28 | —    | A2 |
| L29 | —    | D1 |

## Transformers

|    |                                |    |
|----|--------------------------------|----|
| T1 | { a 125<br>b 54.5<br>c 54.5 }  | D2 |
| T2 | { a 2.27<br>b 2.65<br>c 1.73 } | D2 |

## Miscellaneous

|         |      |    |
|---------|------|----|
| CD1     | OA90 | A2 |
| CD2     | OA79 | A2 |
| CD3     | OA79 | A2 |
| S1-S15  | —    | E3 |
| S16-S17 | —    | B1 |
| S18†    | —    | D1 |

† 490pF in some models.

\* Approximate d.c. resistance in ohms.

† Not fitted to some receivers.

## CIRCUIT ALIGNMENT

**Equipment Required.**—An a.m. signal generator covering the ranges 158-1,605kc/s, 10.7Mc/s, and 87.5-100Mc/s, with provision for both modulated and unmodulated output; an audio output meter with an impedance to match 15Ω; a model 8 Avometer; a matched pair of 220kΩ resistors; a 0.1μF isolating capacitor; a suitable non-ferrous trimming tool and an r.f. coupling loop.

**Adjustment of RV3.**—Before commencing alignment ensure that the battery voltage is at least 9V then adjust RV3 to give 1V across R17 with no signal input and with the volume control at minimum.

## A.M. Circuits

During alignment the input level should be adjusted to maintain an output of 50mW with the volume control at maximum.

- 1.—Switch on signal generator and allow to warm up for 15 minutes. Connect the audio output meter in place of the loudspeaker. (By means of the earphone socket if a suitable plug is available.) Set the volume control to maximum and the tone control to maximum treble response. Ensure that economy switch is in the normal (H) position.
- 2.—Switch receiver to m.w. and tune to approximately 300m. Connect the output of the signal generator via a 0.1μF capacitor to the base of TR3 and feed in a 470kc/s modulated signal. Adjust the cores of IFT7, IFT5 and IFT2 to their outer peaks for maximum audio output. Align each transformer once only.
- 3.—Loosely couple the output of the signal generator to the receiver by means of the r.f. coupling loop, placed about 3 feet from the receiver with its plane at right-angle to the ferrite rod aerial. Ensure that the cursor is in line with the calibration marks at the low frequency end of the scale when the tuning gang is at maximum.
- 4.—Switch receiver to m.w. and tune receiver to 500m. Feed in a 600kc/s signal and adjust L13/L14/L15 for maximum output.
- 5.—Tune receiver to 200m and feed in a 1,500kc/s signal. Adjust CT3 for maximum output.
- 6.—Repeat operations 4 and 5 and check calibration.
- 7.—Switch to l.w. and tune receiver to 1.400m.

- 8.—Switch to b.s. and tune receiver so that the cursor lines up with the "m" in "Luxembourg". Feed in a 1,439kc/s signal and adjust CT7 for maximum output.
- 9.—Tune receiver so that the cursor lines up with the "o" in "Caroline" and feed in a 1,500kc/s signal. Adjust CT3 for maximum output.
- 10.—Switch to m.w. and tune receiver to 200m. Feed in a 1,500kc/s signal and adjust CT4 for maximum output.
- 11.—Tune receiver to 500m and feed in a 600kc/s signal. Adjust the aerial coils L11/L12 for maximum output by sliding the coil former along the ferrite rod.
- 12.—Repeat operations 10 and 11 for optimum results.
- 13.—Switch to l.w. and tune receiver to 1,400m. Feed in a 214kc/s signal and adjust CT6 for maximum output.
- 14.—Switch to b.s. and tune receiver so that the cursor lines up with the "m" in "Luxembourg". Feed in a 1,439kc/s signal and adjust CT8 for maximum output.

## F.M. Circuits

Before commencing alignment of the f.m. circuits, detune the primary of IFT3 by screwing the core in two turns and the secondary of IFT4 by screwing the core out by the same amount.

Connect the model 8 Avometer as shown in Fig. 1a to function as a d.c. output meter and switch to the 10V d.c. range.

The test points are located at the lower end of the i.f. printed panel, TP1 on the right-hand side and TP2 on the left.

During alignment the signal input level should be adjusted to maintain an output of approximately 1V on the Avometer.


When using the Avometer as a balance indicator (see Fig. 1b) two matched 220kΩ resistors should be connected in series between TP2 and chassis and the Avometer (50μA range) connected between their junction and TP1.

- 1.—Switch to f.m. and tune to approximately 94Mc/s. Set volume control to minimum.
- 2.—Connect the signal generator output via a 0.1μF capacitor to the base of TR3.
- 3.—Feed in a 10.7Mc/s, 30% modulated signal and adjust the primary core of IFT6 (L25) for maximum output on the d.c. output meter, using the outer peak.
- 4.—Transfer the connections of the Avometer to between TP1 and the junction of the two 220kΩ resistors connected as shown in Fig. 1b. Switch to 50μA range. The meter now functions as a balance indicator.
- 5.—Adjust the secondary core of IFT6 (L26) for zero output on the balance indicator, using the outer peak. Reconnect the Avometer as d.c. output meter.
- 6.—Adjust the primary core of IFT3 to its outer peak

for maximum output on the d.c. output meter and the secondary of IFT3 to its inner peak for maximum output. Readjust the primary core for maximum output.

- 7.—Similarly adjust the primary of IFT4 to its outer peak for maximum output and the secondary of IFT4 to its inner peak for maximum output. Readjust the primary core for maximum output.
- 8.—Turn volume control to maximum and adjust RV4 for minimum audio output.
- 9.—Return the volume control to minimum and readjust the primary of IFT6 for maximum output.
- 10.—Transfer connections to the Avometer as shown in Fig. 1b (balance indicator) and readjust the secondary of IFT6 for zero output on the meter. Reconnect Avometer as d.c. output meter.
- 11.—Switch off the modulation on the signal generator and transfer the output to the external aerial socket. Feed in a 10.7Mc/s signal and adjust IFT1 for maximum output on the d.c. output meter.
- 12.—Check that the screening cover of the v.h.f. tuner unit is securely in position and that the cursor is in line with the calibration marks at the low frequency end of the tuning scale, when the gang is at maximum.
- 13.—With receiver still switched to v.h.f. connect the signal generator output to the external aerial socket and connect the Avometer as shown in Fig. 1a (d.c. output meter).
- 14.—Tune receiver to 94Mc/s and feed in an unmodulated 94Mc/s signal. Slacken the locking screw on the v.h.f. calibration adjuster (see diagram below) located on the tuning drive drum. Adjust the lever for maximum output on the d.c. output meter.
- 15.—Adjust the core of L1/L2 for maximum output.
- 16.—Check the calibration at 87.5Mc/s and 100Mc/s and if necessary make small adjustments to the calibration adjuster.

The manufacturers do not recommend adjustment of either CT1 or CT2 as these are set at 94Mc/s during production and their settings are not likely to vary.

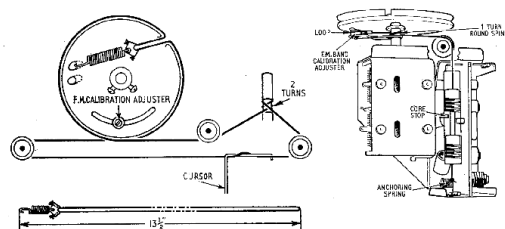

A.m. and f.m. drive cords.