

COSSOR - CR1200U
COSSOR - CR1201U

Valve Table

Valve	Anode (V)	Screen (V)	Cathode (V)
V1 UCH81	145	—	—
V2 UBF89	215	150	3.2
V3 UCL82	160	83	—
V4 UY85	100	—	19.5
	205	215	255.0

Resistors

R1	390kΩ	A2
R2	10kΩ	B1
R3	220Ω	A2
R4	47kΩ	A1
R5	15kΩ	A1
R6	10kΩ	A1
R7	33kΩ	B1
R8	3.3kΩ	B2
R9	2.2MΩ	B1
R10	47kΩ	B1
R11	150kΩ	B1
R12	1MΩ	B2
R13	10MΩ	B1
R14	1kΩ	B1
R15	100kΩ	C2
R16	680kΩ	C2
R17	1kΩ	B2
R18	390Ω	B1
R19	600Ω	C2
R20	100Ω	C2
R21	850Ω	C2
R22	250Ω	C2

Capacitors

C1	146pF	A2
C2	0.047μF	B2
C3	30pF	A1
C4	523pF	A1
C5	0.022μF	A1
C6	110pF	A2
C7	195pF	A2
C8	0.1μF	A1
C9	56pF	A1
C10	470pF	A1
C11	516pF	A1
C12	488pF	A1
C13	36pF	A1
C14	523pF	A1
C15	0.01μF	B1
C16	3,900pF	B1
C17	110pF	B2
C18	195pF	B2
C19	100pF	B1
C20	100pF	B1
C21	0.01μF	B1
C22	4,700pF	B2

C23	390pF	C1
C24	0.01μF	C1
C25	0.01μF	C2
C26	50μF	A2
C27	50μF	A2
C28	0.01μF	C1


Coils*

L1	1.0	B1
L2	4.0	A1
L3	—	A2
L4	—	A2
L5	—	A1
L6	—	A1
L7	—	B2
L8	—	B2
L9	3.0	—

Miscellaneous*

T1	{ a 41.0 } C1
FB1	b ferrite bead A2

*Approximate D.C. resistance in ohms.

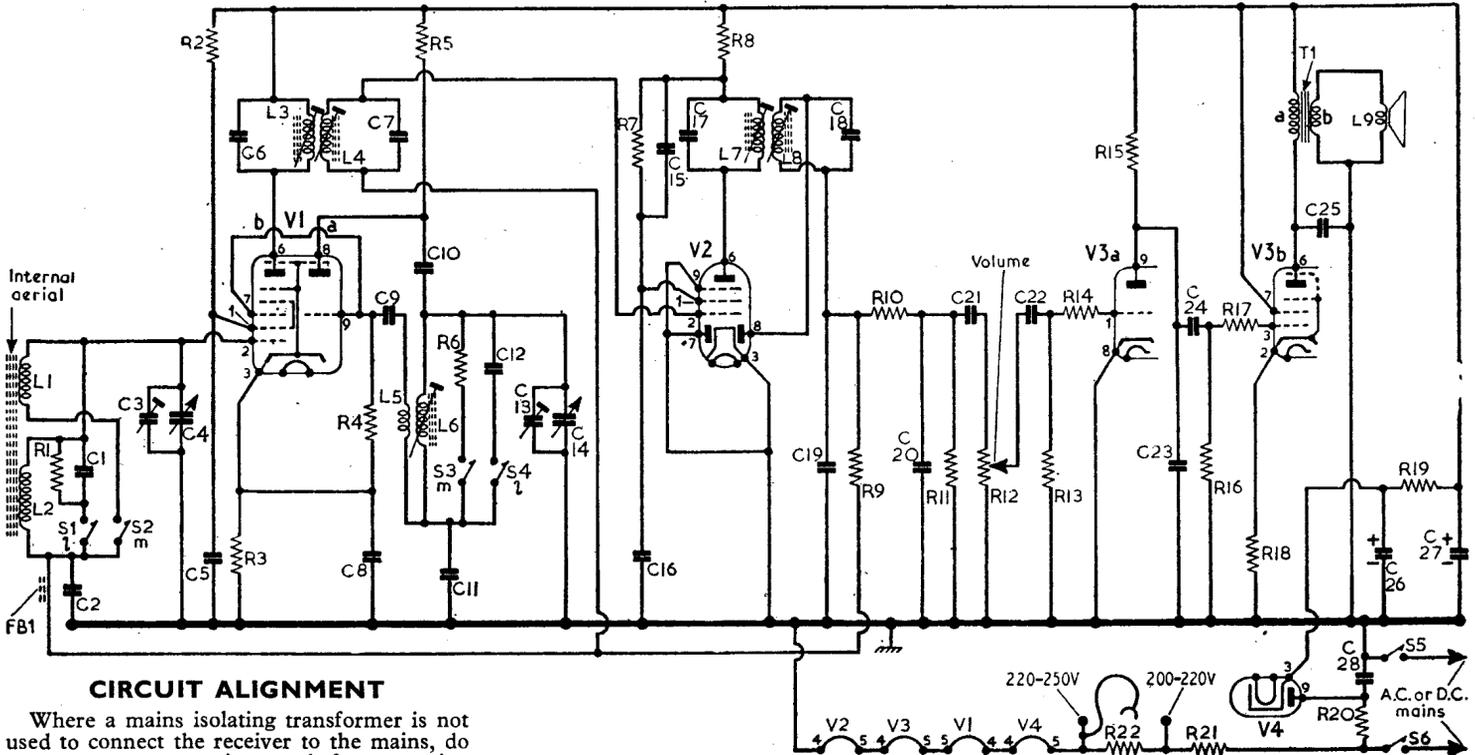

CIRCUIT ALIGNMENT

Where a mains isolating transformer is not used to connect the receiver to the mains, do not connect test equipment before ensuring that the chassis is not "live."

Equipment Required.—An A.M. signal generator; an output indicator (a high impedance A.C. voltmeter connected across the speech coil would be suitable); a 0.05μF capacitor and a screwdriver-type trimming tool.

- 1.—Switch to M.W., turn the tuning gang to minimum capacitance and the volume control to maximum. Connect the signal generator between V1 control grid (pin 2) and chassis, with the 0.05μF capacitor in the lead to V1 control grid.
- 2.—Feed in a 470kc/s signal and adjust L8, L7 (location reference B2), L4 and L3 (A2) for maximum output.
- 3.—Set the tuning gang to maximum capacitance. Feed in a 510kc/s signal and adjust L6 (A1) for maximum output.
- 4.—Set the tuning gang to minimum capacitance.

Note: The electrical minimum of the tuning gang is not the same as the mechanical minimum. To find the electrical minimum position of the gang first set it to the mechanical minimum (fully anti-clockwise). Feed in a 1,630kc/s signal and adjust C13 (A1) for maximum. Turn the tuning gang through approximately 10 deg. when it will be found that there is a second position at which 1,630kc/s will tune in. The true electrical minimum is in the centre of these two positions and is found by gradually increasing the signal generator frequency and rocking the gang to keep in step until the two points meet. Leave the tuning gang in this position, feed in 1,630kc/s signal and readjust C13 for maximum output.

- 5.—Feed in 580kc/s signal and rotate the tuning gang for maximum output. Disconnect the signal generator from V1 control grid and loosely couple it to the R.F. circuits by clipping its output lead on the sleeving of the connecting wire between L1 and L2 on the ferrite rod. Adjust L1 for maximum output.
- 6.—Re-connect the signal generator to V1 (pin 2). Feed in a 1,500kc/s signal and rotate the tuning gang for maximum output. Disconnect the signal generator from V1 and loosely couple it to the R.F. circuits. Adjust C3 (A1) for maximum output.
- 7.—Repeat operations 5 and 6 until no further improvement can be obtained.
- 8.—Switch to L.W. Connect the signal generator to V1 (pin 2), feed in a 190kc/s signal and rotate the tuning gang for maximum output. Loosely couple the signal generator to the R.F. circuits and adjust L2 (A1) for maximum output.
- 9.—Switch to M.W. and re-check the adjustments in operations 5 and 6.

Mains Voltage Adjustment.—There are two mains voltage tapings on the dropping resistor R21, R22 shown in location reference C2. The first tag (farthest from the chassis) is the 220-250V position and the second tag is the 200-220V position. The flying lead should be attached to the appropriate one of the two positions.

Switches.—S1-S4 are the waveband switches which comprise a two-pole double-throw rotary unit shown in location reference A2. This is the position in which the unit appears when viewed from the rear of an upright chassis. Suffix letter m or l included with the switch number indicates the switch closes on M.W. or L.W. S5 and S6 are mains on/off switches, ganged with the volume control.

MODEL CR1200U

The CR1200U employs the same type chassis as the CR1201U with one or two minor changes as follows: C2 is 0.022μF not 0.047μF, R8 is 4.7kΩ not 3.3kΩ and C8 is located on the front panel beneath the printed panel and not in the position shown in our plan view of the chassis.