

On S.W. and M.W. and L.W. separate decoupling circuits are used for the C.G. of **V1** in the Ever Ready 5031 3-band A.C. superhet. **V3** is a plain double diode and feeds direct

COMPONENTS AND VALUES

RESISTANCES		Values (ohms)
R ₁	A ₂ aerial feed potentiometer	110,000
R ₂	V ₁ hex. C.G. decoupling (M.W. and L.W.)	11,000
R ₃	V ₁ hex. C.G. decoupling (S.W.)	110,000
R ₄	Part V ₁ S.G. H.T. pot.	10,000
R ₅	V ₁ fixed G.B. resistance	20,000
R ₆	V ₁ osc. C.G. stabiliser	150
R ₇	V ₁ osc. C.G. resistance	26,000
R ₈	V ₁ osc. C.G. stabiliser	200
R ₉	Part V ₁ S.G. H.T. pot.	5,000
R ₁₀	Osc. circuit M.W. damping	1,000
R ₁₁	Osc. circuit L.W. damping	2,100
R ₁₂	V ₁ osc. anode and S.G. H.T. feed	10,000
R ₁₃	V ₂ S.G. H.T. feed	25,000
R ₁₄	V ₂ fixed G.B. resistance	100
R ₁₅	Manual volume control	500,000
R ₁₆	V ₃ signal diode load	510,000
R ₁₇	V ₄ C.G. I.F. stopper	21,000
R ₁₈	A.V.C. line decoupling	110,000
R ₁₉	V ₃ A.V.C. diode load	510,000
R ₂₀	V ₄ G.B. resistance	150

OTHER COMPONENTS		Approx. Values (ohms)
L ₁	Aerial M.W. and L.W. coupling	11·0
L ₂	Band-pass primary coils	2·6
L ₃	Band-pass secondary coils	11·0
L ₄	Aerial S.W. tuning coil	Very low
L ₅	Band-pass secondary coils	2·5
L ₆	Osc. circuit S.W. tuning coil	11·0
L ₇	Osc. circuit M.W. tuning coil	Very low
L ₈	Osc. circuit L.W. tuning coil	0·3
L ₉	Osc. circuit anode M.W. reaction	1·8
L ₁₀	Osc. circuit anode L.W. reaction	6·25
L ₁₁	Osc. circuit L.W. tuning coil	5·0
L ₁₂	Osc. circuit anode L.W. reaction	8·3
L ₁₃	1st I.F. trans. (Pri.)	6·5
L ₁₄	(Sec.)	6·5
L ₁₅	2nd I.F. trans. (Pri.)	6·5
L ₁₆	(Sec.)	6·5
L ₁₇	Speaker speech coil	2·0
L ₁₈	Hum neutralising coil	0·15
L ₁₉	Speaker field coil	1,500·0
T ₁	Speaker input trans. (Pri.)	220·0
	(Sec.)	0·25
T ₂	Mains (Pri., total trans.)	30·0
	Heater sec.	0·1
	Rect. heat sec. (H.T. sec., total)	0·1
S ₁ -S ₁₁	Waveband switches	530·0
S ₁₂	Mains switch, ganged R ₁₅	—

CONDENSERS		Values (μ F)
C ₁	Aerial S.W. coupling	0·00001
C ₂	V ₁ hex. C.G. decoupling (M.W. and L.W.)	0·1
C ₃	Aerial circuit S.W. tracker	0·01
C ₄	V ₁ S.G. decoupling	0·1
C ₅	V ₁ cathode by-pass	0·1
C ₆	V ₁ osc. C.G. condenser	0·0001
C ₇	V ₁ osc. anode decoupling	0·1
C ₈	V ₂ C.G. decoupling	0·1
C ₉	V ₂ S.G. decoupling	0·1
C ₁₀	V ₂ cathode by-pass	0·1
C ₁₁	A.F. coupling to V ₄	0·05
C ₁₂	I.F. by-pass	0·0002
C ₁₃	V ₃ A.V.C. diode coupling	0·00001
C ₁₄ *	V ₄ cathode by-pass	50·0
C ₁₅	Fixed tone corrector	0·01
C ₁₆ *	H.T. smoothing	8·0
C ₁₇ *	Band-pass pri. M.W. trimmer	8·0
C ₁₈ *	Band-pass pri. L.W. trimmer	0·00004
C ₁₉ *	Band-pass pri. tuning	0·0001
C ₂₀ *	Aerial S.W. trimmer	0·00054
C ₂₁ *	Band-pass sec. M.W. trimmer	0·00004
C ₂₂ *	Band-pass sec. L.W. trimmer	0·00004
C ₂₃ *	Band-pass sec. and S.W. tuning	0·0001
C ₂₄ *	Oscillator circuit tuning	0·00054
C ₂₅ *	Osc. circuit S.W. trimmer	0·00004
C ₂₆ *	Osc. circuit M.W. trimmer	0·00004
C ₂₇ *	Osc. circuit L.W. trimmer	0·00004
C ₂₈ *	Osc. circuit M.W. tracker	0·0001
C ₂₉ *	Osc. circuit L.W. tracker	0·0006
C ₃₀ *	1st. I.F. trans. pri. tuning	0·0004
C ₃₁ *	2nd I.F. trans. pri. tuning	—
C ₃₂ *	2nd I.F. trans. sec. tuning	—
C ₃₃ *	2nd I.F. trans. pri. tuning	—
C ₃₄ *	2nd I.F. trans. sec. tuning	—

* Electrolytic. † Variable. ‡ Pre-set.

adjust C₂₈, C₂₃ and C₁₉, then re-adjust C₃₀ until the 1,700 m. signal is accurately tuned at 1,700 m. on the scale.

Switch set to S.W., and tune to 15 MC/S on scale. Screw C₂₆ right in, feed in a 15 M/C/S (20 m.) signal, and slowly unscrew C₂₆ until the first output peak is reached. It is important that the second peak is not used. Next adjust C₂₁ for maximum output.

Feed in a 7·5 MC/S (40 m.) signal, tune it in, and adjust the end turn of L₄ (nearest the end of the coil former) for maximum output. Return to 15 MC/S, and re-adjust C₂₆ and C₂₁ if necessary.

GENERAL NOTES
Switches.—S₁-S₁₁ are the wavechange switches, ganged in two rotary units beneath the chassis. The units are indicated in our under-chassis view, and shown in detail in the diagram on page iv. The table (p. iv) gives the switch positions for the three control settings, starting from fully anti-clockwise. A dash indicates open, and C closed.

S₁₂ is the Q.M.B. mains switch, ganged with the volume control R₁₅.


Coils.—L₁-L₆ are in a tubular un-screened unit beneath the chassis. L₇-L₁₂ and the I.F. transformers L₁₃, L₁₄ and L₁₅, L₁₆ are in three screened units on the chassis deck. Note that the L₇-L₁₂ unit also contains R₁₀ and R₁₁.

Scale Lamp.—This is an Ever Ready M.E.S. type, rated at 4·5 V 0·3 A.

500 m. (600 KC/S) signal and adjust C₂₉ for maximum output.

Return to 214 m. and re-adjust C₂₇, C₂₂ and C₁₈, then return to 500 m., and if the pointer does not indicate 500 m. when the signal is accurately tuned, re-adjust C₂₉ until it does. Check calibration at 214, 300 and 500 m.

Switch set to L.W., and set C₃₀ about one-third in. Tune to 1,200 m. on scale, feed in a 1,200 m. (250 KC/S) signal, and adjust C₂₈, then C₂₈ and C₁₉, for maximum output. Tune to 1,700 m. on scale, feed in a 1,700 m. (176·5 KC/S) signal, and adjust C₃₀ for maximum output. Return to 1,200 m., and re-

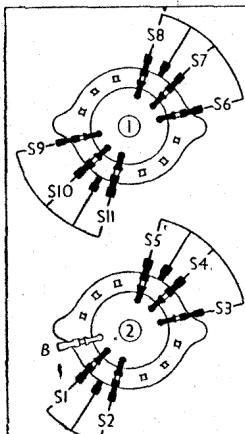

Diagrams of the switch units, as seen looking in the direction of the arrows in the under-chassis view on page III.