


Intermediate frequency 485 kc/s.

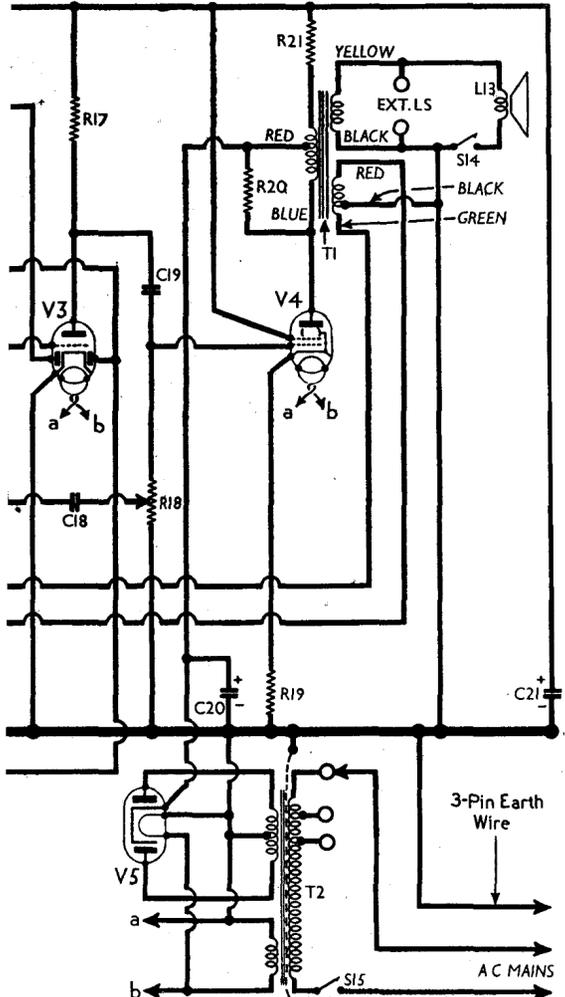

CAPACITORS		Values (μF)	Locations
C1	Aerial input pot, divider	0-005	M5
C2	V1 C.G. decoupling	0-003	M4
C3	S.G.'s decoupling	0-02	L4
C4	1st I.F. transformer tuning	0-00015	B1
C5	V1 osc. C.G.	0-00015	B1
C6	V1 osc. C.G.	0-0001	L4
C7	V1 cathode by-pass	0-02	K4
C8	Osc. S.W. tracker	0-004	L4
C9	Osc. M.W. tracker	0-00033	L4
C10	Osc. L.W. tracker	0-0002	K4
C11	Reaction coupling	0-0002	K4
C12	V2 G.C. decoupling	0-1	K4
C13	2nd I.F. transformer	0-00015	C1
C14	mer tuning	0-00015	C1
C15	I.F. by-pass	0-0001	K3
C16	F.-B. coupling	0-25	J4
C17	A.F. coupling	0-005	F4
C18	Tone control	0-0001	G3
C19	A.F. coupling	0-02	J4
C20*	H.T. smoothing	16-0	G5
C21*	H.T. smoothing	24-0	G5
C22†	Aerial S.W. trim.	0-00004	M4
C23†	Aerial M.W. trim.	0-00004	M4
C24†	Aerial L.W. trim.	0-00004	M5
C25†	Aerial tuning	—	B2
C26†	Oscillator tuning	—	B1
C27†	Osc. S.W. trim.	0-00004	L4
C28†	Osc. M.W. trim.	0-00004	L4
C29†	Osc. L.W. trim.	0-00008	L5

\* Electrolytic. † Variable. ‡ Pre-set.

Switch	Gram	L.W.	M.W.	S.W.
S1	—	—	—	—
S2	—	—	—	—
S3	—	—	—	—
S4	—	—	—	—
S5	—	—	—	—
S6	—	—	—	—
S7	—	—	—	—
S8	—	—	—	—
S9	—	—	—	—
S10	—	—	—	—
S11	—	—	—	—
S12	—	—	—	—
S13	—	—	—	—

Diagrams of the waveband switch units drawn as seen in the directions of the arrows in the under-chassis illustration. Note that they face opposite directions.


RESISTORS		Values (ohms)	Locations
R1	Aerial shunt	2,200	M5
R2	V1 C.G. decoupling	100,000	M5
R3	S.G.'s H.T. feed	15,000	K3
R4	V1 fixed G.B.	300	K4
R5	V1 osc. C.G.	47,000	L4
R6	V1 osc. H.T. feed	33,000	L4
R7	Reaction stabilizer	100	L5
R8	H.T. limiter	470,000	M3
R9	I.F. stopper	47,000	J3
R10	F.-B. coupling resistor	2,200,000	J3
R11	F.-B. coupling resistor	1,000	J4
R12	A.G.C. decoupling	1,500,000	K3
R13	Volume control	500,000	B1
R14	F.-B. coupling	240	J3
R15	V3 triode C.G.	10,000,000	F3
R16	V3 grid stopper	100,000	F3
R17	V3 anode load	470,000	J4
R18	Tone control	500,000	G4
R19	V4 G.B. resistor	240	J4
R20	Tone corrector	47,000	H4
R21	H.T. smoothing	1,500	J4

OTHER COMPONENTS		Approx. Values (ohms)	Locations
L1	Aerial S.W. coils	Very low	M5
L2	Aerial M.W. coil	Very low	M5
L3	Aerial L.W. coil	3-0	M5
L4	Aerial L.W. coil	21-0	M5
L5	Osc. S.W. tuning	Very low	L5
L6	Osc. M.W. coil	3-0	L5
L7	Osc. L.W. coil	8-5	K5
L8	Osc. S.W. reaction	Very low	L5
L9	1st I.F. trans. Pri.	5-0	B1
L10	1st I.F. trans. Sec.	5-0	B1
L11	2nd I.F. trans. Pri.	5-0	C1
L12	2nd I.F. trans. Sec.	5-0	C1
L13	Speech coil	2-0	—
T1	O.P. trans. Pri., total	520-0	J5
T1	O.P. trans. Spkr. sec., total	Very low	J5
T1	O.P. trans. F.-B. sec., total	3-0	J5
T1	O.P. trans. Pri., total	49-0	J5
T1	O.P. trans. H.T. sec., total	49-0	J5
T2	Mains trans. Heater sec.	580-0	D1
S1-S10	Waveband switches	Very low	M4
S11-S13	Radio/gram. switches	—	L4
S14	Speaker switch	—	G5
S15	Mains switch, ganged	—	G4

Valve	Anode Voltage (V)	Anode Current (mA)	Screen Voltage (V)	Screen Current (mA)	Cathode Voltage (V)
V1 6K8GT	220	2-1	100	5-4	2-9†
	82	3-6			
V2 6K7GT	220	12-5	100	2-8	—
V3 6Q7GT	39	1-7	—	—	—
V4 6V6GT	244	38-0	220	2-2	9-5‡
V5 6X5GT	260†	—	—	—	263

† Each anode, A.C.

‡ 10 V meter range.

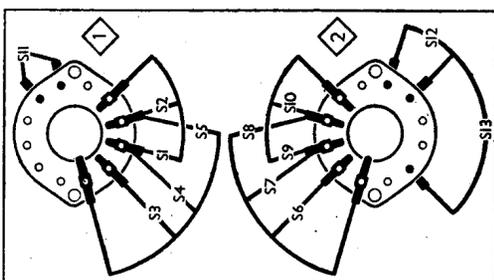

## EXPORT MODELS

Models DR10F and DR10T are export versions of the DR10, the differences between the three being limited to the waveband ranges covered.

In the DR10F, the S.W. range is 70-190 m, and in consequence small changes are made in the aerial and oscillator circuits. L2 is bottom-coupled, like L3 and L4, C8 becomes 0.001  $\mu$ F, C29 may become 0.00004  $\mu$ F, and R4 and C7 are omitted, V1 cathode going directly to chassis.

In the DR10T, the L.W. band is omitted, the M.W. band taking its place, and there are two S.W. bands, S.W.1 (45-130 m) and S.W.2 (14-42 m).

Electrically, the differences are shown in the diagram below, where the whole of the aerial and oscillator circuits are shown. Here, the wavebands are S.W.2, S.W.1 and M.W., reading from top to bottom. In the chassis, the coils and trimmers will be found in the positions shown in our chassis illustrations for the S.W., M.W. and L.W. circuits, reading in the same order.

As in the DR10F, R4 and C7 are omitted. C29 becomes 0.00004  $\mu$ F, and the S.W.1 tracker is 0.0015  $\mu$ F. Otherwise components shown have the same values as in the DR10 circuit.

## DRIVE CORD REPLACEMENT

Good quality plaited twine is used for the tuning drive, 4ft 6in providing ample length to spare for tying off. It should be run as shown in the sketch above, where the drive system is drawn as seen from the front right-hand corner of the chassis when the gang is at maximum, neglecting the obstruction caused by the scale backing plate.

If the cord is to be fitted as shown in our sketch, it must be made up before fitting. To do this, make a loop about  $\frac{1}{2}$ in diameter in one end, then loop or knot the tension spring on to the cord 18 $\frac{3}{4}$ in from the outer end of the loop. Slip the loop over the right-hand cursor, and seal it temporarily in position on the cursor bar with wax, as shown in the sketch.

Pass the cord round the left-hand pulley, and run the cord as shown in the sketch, hooking the spring in position shown on the way, and finally tie the free end to the loop, first winding the cord at the starting end round the cursor rod as shown, and pulling up the slack cord so that the whole system is taut. A series of holes is provided in the drive drum for subsequent adjustment of tension.

Until the free end of the cord is tied off to the starting loop, the cursor hangs down from the chassis, supported only by the wax by which the starting loop was sealed to it at the commencement of the operation.

An alternative method of running the cord is to start by tying one end to the

## CIRCUIT ALIGNMENT

**I.F. Stages.**—Connect signal generator via an 0.1  $\mu$ F capacitor in the "live" lead, to control grid (top cap) of V1 and the E socket, switch set to M.W., turn gang and volume control to maximum, and feed in a 465 kc/s (645.16 m) signal. Adjust the cores of L12, L11, L10 and L9 (location references C1, J3, B1, L3) for maximum output.

**R.F. and Oscillator Stages.**—Since the calibrated glass scale is mounted in the cabinet, and alignment adjustments have to be carried out with the chassis on the bench, a series of calibration marks are printed on the front of the scale backing plate, and readings are made against the long centre cursor. The exact positions of the marks with respect to the datum lines, and the wavelengths which they represent, are indicated in our drawings in col. 6, for the three versions of the D.R.10 receiver.

With the gang at maximum capacitance the cursor should coincide with the datum line, and any error may be corrected by rotating the drive drum on its spindle, after slackening the two grub screws. Transfer "live" signal generator lead to A socket, via a suitable dummy aerial. The sensitivity is given as better than 150  $\mu$ V for 50 mW output on all bands.

**M.W.**—With set switched to M.W., tune to 214 m line, feed in a 214 m (1,400 kc/s) signal, and adjust C28 (L4) and C23 (M4) for maximum output. Tune to 500 m line, feed in a 500 m (600 kc/s) signal, and adjust the core of L6 (B2) for maximum output.


**L.W.**—Switch set to L.W., tune to 860 m line, feed in an 860 m (348.8 kc/s) signal, and adjust C29 (L5) and C24 (M5) for maximum output. Tune to 1,714 m line, feed in a 1,714 m (175 kc/s) signal, and adjust the core of L7 (B2) for maximum output. Repeat these operations and then re-check the M.W. alignment.

**S.W.**—Switch set to S.W., tune to 20 m line, feed in a 20 m (15 Mc/s) signal, and adjust C27 (L4) and C22 (M4) for maximum output. Tune to 50 m line, feed in a 50 m (6 Mc/s) signal, and adjust the core of L5 (B2) for maximum output.

For the DR10F, switch set to S.W., tune to 86 m line, feed in an 86 m (3.48 Mc/s) signal, and adjust C27 (L4) and C22 (M4) for maximum output. Tune to 176 m line, feed in a 176 m (1.7 Mc/s) signal, and adjust the oscillator coil core (B2) for maximum output.


tension spring and run the cord from there round the whole system, instead of starting at the cursor rod. This avoids the need to make up the cord in advance.

The calibration can be adjusted over a fairly wide range by turning the drum on the gang spindle, but some adjustment is also possible by moving the loop along the cursor bar. The long central cursor should cover the datum line shown in our calibration drawings in col. 6 when the gang is at maximum. After adjustment, wax should be used to seal the cord to each end of the cursor rod.

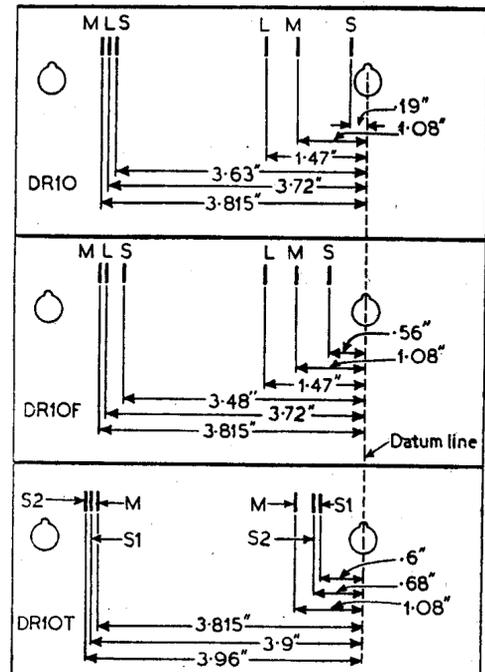

Calibration diagrams for the three models, showing the exact positions of the calibration marks for alignment purposes as printed on the scale backing plate. Reading from top downwards, they are DR10, DR10F, DR10T.

KOLSTER-BRANDES DR10

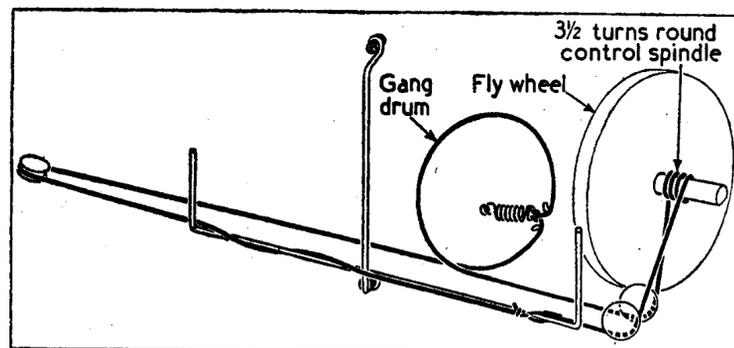

Sketch of the tuning drive system, viewed from the right-hand front corner. The ends of the cord can be terminated at the cursor bar (as shown) or at the drum.